

CTP2000 Series Circuit to Packet Platforms

Hardware Guide



Published: 2010-09-30

Juniper Networks, Inc.
1194 North Mathilda Avenue
Sunnyvale, California 94089
USA
408-745-2000
www.juniper.net

Copyright © 2010, Juniper Networks, Inc. All rights reserved.

Juniper Networks, Junos, Steel-Belted Radius, NetScreen, and ScreenOS are registered trademarks of Juniper Networks, Inc. in the United States and other countries. The Juniper Networks Logo, the Junos logo, and JunosE are trademarks of Juniper Networks, Inc. All other trademarks, service marks, registered trademarks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

Products made or sold by Juniper Networks or components thereof might be covered by one or more of the following patents that are owned by or licensed to Juniper Networks: U.S. Patent Nos. 5,473,599, 5,905,725, 5,909,440, 6,192,051, 6,333,650, 6,359,479, 6,406,312, 6,429,706, 6,459,579, 6,493,347, 6,538,518, 6,538,899, 6,552,918, 6,567,902, 6,578,186, and 6,590,785.

CTP2000 Series Circuit to Packet Platforms Hardware Guide

Copyright © 2010, Juniper Networks, Inc.

All rights reserved. Printed in USA.

Revision History

October 2010—Revision 2

The information in this document is current as of the date listed in the revision history.

END USER LICENSE AGREEMENT

READ THIS END USER LICENSE AGREEMENT ("AGREEMENT") BEFORE DOWNLOADING, INSTALLING, OR USING THE SOFTWARE. BY DOWNLOADING, INSTALLING, OR USING THE SOFTWARE OR OTHERWISE EXPRESSING YOUR AGREEMENT TO THE TERMS CONTAINED HEREIN, YOU (AS CUSTOMER OR IF YOU ARE NOT THE CUSTOMER, AS A REPRESENTATIVE/AGENT AUTHORIZED TO BIND THE CUSTOMER) CONSENT TO BE BOUND BY THIS AGREEMENT. IF YOU DO NOT OR CANNOT AGREE TO THE TERMS CONTAINED HEREIN, THEN (A) DO NOT DOWNLOAD, INSTALL, OR USE THE SOFTWARE, AND (B) YOU MAY CONTACT JUNIPER NETWORKS REGARDING LICENSE TERMS.

1. **The Parties.** The parties to this Agreement are (i) Juniper Networks, Inc. (if the Customer's principal office is located in the Americas) or Juniper Networks (Cayman) Limited (if the Customer's principal office is located outside the Americas) (such applicable entity being referred to herein as "Juniper"), and (ii) the person or organization that originally purchased from Juniper or an authorized Juniper reseller the applicable license(s) for use of the Software ("Customer") (collectively, the "Parties").

2. **The Software.** In this Agreement, "Software" means the program modules and features of the Juniper or Juniper-supplied software, for which Customer has paid the applicable license or support fees to Juniper or an authorized Juniper reseller, or which was embedded by Juniper in equipment which Customer purchased from Juniper or an authorized Juniper reseller. "Software" also includes updates, upgrades and new releases of such software. "Embedded Software" means Software which Juniper has embedded in or loaded onto the Juniper equipment and any updates, upgrades, additions or replacements which are subsequently embedded in or loaded onto the equipment.

3. **License Grant.** Subject to payment of the applicable fees and the limitations and restrictions set forth herein, Juniper grants to Customer a non-exclusive and non-transferable license, without right to sublicense, to use the Software, in executable form only, subject to the following use restrictions:

- a. Customer shall use Embedded Software solely as embedded in, and for execution on, Juniper equipment originally purchased by Customer from Juniper or an authorized Juniper reseller.
- b. Customer shall use the Software on a single hardware chassis having a single processing unit, or as many chassis or processing units for which Customer has paid the applicable license fees; provided, however, with respect to the Steel-Belted Radius or Odyssey Access Client software only, Customer shall use such Software on a single computer containing a single physical random access memory space and containing any number of processors. Use of the Steel-Belted Radius or IMS AAA software on multiple computers or virtual machines (e.g., Solaris zones) requires multiple licenses, regardless of whether such computers or virtualizations are physically contained on a single chassis.
- c. Product purchase documents, paper or electronic user documentation, and/or the particular licenses purchased by Customer may specify limits to Customer's use of the Software. Such limits may restrict use to a maximum number of seats, registered endpoints, concurrent users, sessions, calls, connections, subscribers, clusters, nodes, realms, devices, links, ports or transactions, or require the purchase of separate licenses to use particular features, functionalities, services, applications, operations, or capabilities, or provide throughput, performance, configuration, bandwidth, interface, processing, temporal, or geographical limits. In addition, such limits may restrict the use of the Software to managing certain kinds of networks or require the Software to be used only in conjunction with other specific Software. Customer's use of the Software shall be subject to all such limitations and purchase of all applicable licenses.
- d. For any trial copy of the Software, Customer's right to use the Software expires 30 days after download, installation or use of the Software. Customer may operate the Software after the 30-day trial period only if Customer pays for a license to do so. Customer may not extend or create an additional trial period by re-installing the Software after the 30-day trial period.
- e. The Global Enterprise Edition of the Steel-Belted Radius software may be used by Customer only to manage access to Customer's enterprise network. Specifically, service provider customers are expressly prohibited from using the Global Enterprise Edition of the Steel-Belted Radius software to support any commercial network access services.

The foregoing license is not transferable or assignable by Customer. No license is granted herein to any user who did not originally purchase the applicable license(s) for the Software from Juniper or an authorized Juniper reseller.

4. **Use Prohibitions.** Notwithstanding the foregoing, the license provided herein does not permit the Customer to, and Customer agrees not to and shall not: (a) modify, unbundle, reverse engineer, or create derivative works based on the Software; (b) make unauthorized copies of the Software (except as necessary for backup purposes); (c) rent, sell, transfer, or grant any rights in and to any copy of the Software, in any form, to any third party; (d) remove any proprietary notices, labels, or marks on or in any copy of the Software or any product in which the Software is embedded; (e) distribute any copy of the Software to any third party, including as may be embedded in Juniper equipment sold in the secondhand market; (f) use any 'locked' or key-restricted feature, function, service, application, operation, or capability without first purchasing the applicable license(s) and obtaining a valid key from Juniper, even if such feature, function, service, application, operation, or capability is enabled without a key; (g) distribute any key for the Software provided by Juniper to any third party; (h) use the

Software in any manner that extends or is broader than the uses purchased by Customer from Juniper or an authorized Juniper reseller; (i) use Embedded Software on non-Juniper equipment; (j) use Embedded Software (or make it available for use) on Juniper equipment that the Customer did not originally purchase from Juniper or an authorized Juniper reseller; (k) disclose the results of testing or benchmarking of the Software to any third party without the prior written consent of Juniper; or (l) use the Software in any manner other than as expressly provided herein.

5. **Audit.** Customer shall maintain accurate records as necessary to verify compliance with this Agreement. Upon request by Juniper, Customer shall furnish such records to Juniper and certify its compliance with this Agreement.

6. **Confidentiality.** The Parties agree that aspects of the Software and associated documentation are the confidential property of Juniper. As such, Customer shall exercise all reasonable commercial efforts to maintain the Software and associated documentation in confidence, which at a minimum includes restricting access to the Software to Customer employees and contractors having a need to use the Software for Customer's internal business purposes.

7. **Ownership.** Juniper and Juniper's licensors, respectively, retain ownership of all right, title, and interest (including copyright) in and to the Software, associated documentation, and all copies of the Software. Nothing in this Agreement constitutes a transfer or conveyance of any right, title, or interest in the Software or associated documentation, or a sale of the Software, associated documentation, or copies of the Software.

8. **Warranty, Limitation of Liability, Disclaimer of Warranty.** The warranty applicable to the Software shall be as set forth in the warranty statement that accompanies the Software (the "Warranty Statement"). Nothing in this Agreement shall give rise to any obligation to support the Software. Support services may be purchased separately. Any such support shall be governed by a separate, written support services agreement. TO THE MAXIMUM EXTENT PERMITTED BY LAW, JUNIPER SHALL NOT BE LIABLE FOR ANY LOST PROFITS, LOSS OF DATA, OR COSTS OR PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES, OR FOR ANY SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES ARISING OUT OF THIS AGREEMENT, THE SOFTWARE, OR ANY JUNIPER OR JUNIPER-SUPPLIED SOFTWARE. IN NO EVENT SHALL JUNIPER BE LIABLE FOR DAMAGES ARISING FROM UNAUTHORIZED OR IMPROPER USE OF ANY JUNIPER OR JUNIPER-SUPPLIED SOFTWARE. EXCEPT AS EXPRESSLY PROVIDED IN THE WARRANTY STATEMENT TO THE EXTENT PERMITTED BY LAW, JUNIPER DISCLAIMS ANY AND ALL WARRANTIES IN AND TO THE SOFTWARE (WHETHER EXPRESS, IMPLIED, STATUTORY, OR OTHERWISE), INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NONINFRINGEMENT. IN NO EVENT DOES JUNIPER WARRANT THAT THE SOFTWARE, OR ANY EQUIPMENT OR NETWORK RUNNING THE SOFTWARE, WILL OPERATE WITHOUT ERROR OR INTERRUPTION, OR WILL BE FREE OF VULNERABILITY TO INTRUSION OR ATTACK. In no event shall Juniper's or its suppliers' or licensors' liability to Customer, whether in contract, tort (including negligence), breach of warranty, or otherwise, exceed the price paid by Customer for the Software that gave rise to the claim, or if the Software is embedded in another Juniper product, the price paid by Customer for such other product. Customer acknowledges and agrees that Juniper has set its prices and entered into this Agreement in reliance upon the disclaimers of warranty and the limitations of liability set forth herein, that the same reflect an allocation of risk between the Parties (including the risk that a contract remedy may fail of its essential purpose and cause consequential loss), and that the same form an essential basis of the bargain between the Parties.

9. **Termination.** Any breach of this Agreement or failure by Customer to pay any applicable fees due shall result in automatic termination of the license granted herein. Upon such termination, Customer shall destroy or return to Juniper all copies of the Software and related documentation in Customer's possession or control.

10. **Taxes.** All license fees payable under this agreement are exclusive of tax. Customer shall be responsible for paying Taxes arising from the purchase of the license, or importation or use of the Software. If applicable, valid exemption documentation for each taxing jurisdiction shall be provided to Juniper prior to invoicing, and Customer shall promptly notify Juniper if their exemption is revoked or modified. All payments made by Customer shall be net of any applicable withholding tax. Customer will provide reasonable assistance to Juniper in connection with such withholding taxes by promptly: providing Juniper with valid tax receipts and other required documentation showing Customer's payment of any withholding taxes; completing appropriate applications that would reduce the amount of withholding tax to be paid; and notifying and assisting Juniper in any audit or tax proceeding related to transactions hereunder. Customer shall comply with all applicable tax laws and regulations, and Customer will promptly pay or reimburse Juniper for all costs and damages related to any liability incurred by Juniper as a result of Customer's non-compliance or delay with its responsibilities herein. Customer's obligations under this Section shall survive termination or expiration of this Agreement.

11. **Export.** Customer agrees to comply with all applicable export laws and restrictions and regulations of any United States and any applicable foreign agency or authority, and not to export or re-export the Software or any direct product thereof in violation of any such restrictions, laws or regulations, or without all necessary approvals. Customer shall be liable for any such violations. The version of the Software supplied to Customer may contain encryption or other capabilities restricting Customer's ability to export the Software without an export license.

12. **Commercial Computer Software.** The Software is "commercial computer software" and is provided with restricted rights. Use, duplication, or disclosure by the United States government is subject to restrictions set forth in this Agreement and as provided in DFARS 227.7201 through 227.7202-4, FAR 12.212, FAR 27.405(b)(2), FAR 52.227-19, or FAR 52.227-14 (ALT III) as applicable.

13. **Interface Information.** To the extent required by applicable law, and at Customer's written request, Juniper shall provide Customer with the interface information needed to achieve interoperability between the Software and another independently created program, on payment of applicable fee, if any. Customer shall observe strict obligations of confidentiality with respect to such information and shall use such information in compliance with any applicable terms and conditions upon which Juniper makes such information available.

14. **Third Party Software.** Any licensor of Juniper whose software is embedded in the Software and any supplier of Juniper whose products or technology are embedded in (or services are accessed by) the Software shall be a third party beneficiary with respect to this Agreement, and such licensor or vendor shall have the right to enforce this Agreement in its own name as if it were Juniper. In addition, certain third party software may be provided with the Software and is subject to the accompanying license(s), if any, of its respective owner(s). To the extent portions of the Software are distributed under and subject to open source licenses obligating Juniper to make the source code for such portions publicly available (such as the GNU General Public License ("GPL") or the GNU Library General Public License ("LGPL")), Juniper will make such source code portions (including Juniper modifications, as appropriate) available upon request for a period of up to three years from the date of distribution. Such request can be made in writing to Juniper Networks, Inc., 1194 N. Mathilda Ave., Sunnyvale, CA 94089, ATTN: General Counsel. You may obtain a copy of the GPL at <http://www.gnu.org/licenses/gpl.html>, and a copy of the LGPL at <http://www.gnu.org/licenses/lgpl.html>.

15. **Miscellaneous.** This Agreement shall be governed by the laws of the State of California without reference to its conflicts of laws principles. The provisions of the U.N. Convention for the International Sale of Goods shall not apply to this Agreement. For any disputes arising under this Agreement, the Parties hereby consent to the personal and exclusive jurisdiction of, and venue in, the state and federal courts within Santa Clara County, California. This Agreement constitutes the entire and sole agreement between Juniper and the Customer with respect to the Software, and supersedes all prior and contemporaneous agreements relating to the Software, whether oral or written (including any inconsistent terms contained in a purchase order), except that the terms of a separate written agreement executed by an authorized Juniper representative and Customer shall govern to the extent such terms are inconsistent or conflict with terms contained herein. No modification to this Agreement nor any waiver of any rights hereunder shall be effective unless expressly assented to in writing by the party to be charged. If any portion of this Agreement is held invalid, the Parties agree that such invalidity shall not affect the validity of the remainder of this Agreement. This Agreement and associated documentation has been written in the English language, and the Parties agree that the English version will govern. (For Canada: Les parties aux présentes confirment leur volonté que cette convention de même que tous les documents y compris tout avis qui s'y rattache, soient rédigés en langue anglaise. (Translation: The parties confirm that this Agreement and all related documentation is and will be in the English language)).

Table of Contents

Part 1	Overview	
Chapter 1	CTP2000 Series Platform Overview	3
	Introducing CTP Platforms	3
	CTP2008 Platform	3
	CTP2024 Platform	5
	CTP2056 Platform	7
Chapter 2	CTP2000 Series Interface Modules	11
	CTP2000 Series Serial Interface Modules	11
	CTP2000 Series T1/E1 Interface Module	12
	CTP2000 Compression Interface Module	12
	CTP2000 4WE&M Interface Module	13
	Supervisory Signaling	16
	CTP2000 2W-FXS and 2W-FXO Interface Modules	18
	Required Cables and Pinouts	19
	Analog FXS/FXO Loop-Start Signaling	19
	Answer Supervision	20
	Disconnect Supervision	20
	Analog FXS/FXO Ground-Start Signaling	20
	Digital Signaling	21
	Digital FXS/FXO Loop-Start Signaling	21
	Digital FXS/FXO Ground-Start Signaling	22
	CTP2000 8P-IRIG Interface Module	23
	CTP2000 Clock Interface Modules	24
Part 2	Planning	
Chapter 3	System Specifications	29
	CTP2008 Platform Specifications and Certification	29
	CTP2024 Platform Specifications and Certification	31
	CTP2056 Platform Specifications and Certification	32
Chapter 4	Planning and Preparing the Site	35
	Before You Install a CTP Platform	35
	CTP2000 Environmental Requirements	35
Chapter 5	Equipment Rack Requirements	37
	CTP2000 Rack Requirements	37
	CTP2000 Mechanical Requirements	37
	CTP2000 Space Requirements	38

	CTP2000 Rack Installation	38
	CTP Cabling Recommendations	38
Chapter 6	Cable and Pinout Specifications	41
	CTP2000 4WE&M Interface Connector Pinouts	41
	CTP2000 4WE&M RTM Connector A Pinouts	41
	CTP2000 4WE&M Connector B Pinouts	42
	CTP2000 FXS and FXO Interface Module Cables and Pinouts	43
	Required Cables	43
	RTM Pinout Locations	43
	FXS Connector Pinouts	44
	FXO Connector Pinouts	45
	CTP2000 Series Console Cable Pinouts	47
	CTP Fast Ethernet and Power Cables	48
	Fast Ethernet Cables	48
	DC Power Cables	48
Part 3	Safety	
Chapter 7	General Safety Guidelines and Warnings	51
	CTP Safety Guidelines and Warnings	51
Chapter 8	Module Installation Safety Guidelines and Warnings	53
	Safety Guidelines and Warnings for Installing CTP Modules	53
Chapter 9	Hardware Compliance	55
	Declaration of Conformity for CTP2000 Platforms	55
	Federal Communications Commission (FCC) Statement	57
	FCC Requirements for Consumer Products	57
	Food and Drug Administration, Center for Devices and Radiological Health	58
	Compliance with Canadian Regulations	58
	Industry Canada Notice	58
	Industry Canada Notice CS-03	58
	Avis CS-03 d'Industrie Canada	59
	Canadian Department of Communications Explanatory Notes	59
	DOC Explanatory Notes: Equipment Attachment Limitations	59
	Notes explicatives du ministère des Communications: limites visant les accessoires	60
Part 4	Installation	
Chapter 10	Unpacking and Inspecting the CTP Platform	63
	Before You Unpack the CTP Platform	63
	Unpacking the CTP Device	63
	Inspecting Platform Components and Accessories	64
	If You Detect or Suspect Damage	64
	Contacting Juniper Networks	65
Chapter 11	Installing the Chassis	67
	Before You Install the CTP2000 Platform	67
	Installing the CTP2000 Platform in Freestanding Mode	67

	Special Guidelines for Installing CTP2056 Chassis in a Rack	68
	Installing the CTP2000 Platform in a Rack	68
Chapter 12	Installing Modules	71
	CTP2000 Modules Installation Overview	71
	Protecting CTP2000 Modules and Slots	71
	Required Tools and Safety Items for Installing CTP Modules	72
	Installing a CTP Interface Module, Processor Module, or Clock Module	73
	Removing a CTP Interface Module, Processor Module, or Clock Module	73
	Installing or Removing a CTP2000 Series CompactFlash Card	74
	Installing a PMC on CTP2000 Platforms	75
Chapter 13	Installing and Removing SFPs in a CTP Module	77
	Installing SFPs in a CTP2000 Module	77
	Removing SFPs in a CTP2000 Module	78
Chapter 14	Upgrading Components for Memory Upgrades	81
	Upgrading CTP2000 Series Components for Memory Upgrades	81
Chapter 15	Cabling	83
	Cabling the CTP2000 Platform Overview	83
	Required Tools, Wires, and Cables for the CTP2000 Platform	84
	CTP2000 Management Ports	84
	Cabling a CTP2000 Interface Module	85
	Cabling the CTP Platform for DC Power	85
	Task 1: Turning Off All CTP Platform Power	86
	Task 2: Connecting the Grounding Cable to the CTP Platform (CTP2056 Platform Only)	86
	Task 3: Connecting the Power Cables to the CTP2000 Platform	86
Chapter 16	Powering On	89
	Before You Power On the CTP2000 Platform	89
	Powering On the CTP2000 Platform	89
	Powering Off the CTP Platform	92
Part 5	Configuration	
Chapter 17	Accessing the CTP2000 Platform	95
	Setting Up Management Access on the CTP2000 Platform	95
	CTP2000 Console Port Setup	95
	Using HyperTerminal with the CTP2000 Platform	96
	Connecting Directly to the CTP2000 Platform	96
	CTP2000 Platform SSH Setup	97
Part 6	Maintenance	
Chapter 18	Maintaining Components	101
	Required Tools for Maintaining the CTP Platform	101
	Storing CTP Modules and Other Components	101
	Cleaning the CTP Platform	102
	Replacing an AC Power Supply	102

Chapter 19	Replacing Interface Modules Using Hot-Swap	105
	CTP2000 Hot-Swap Interface Module Replacement	105
Chapter 20	Product Reclamation and Recycling	107
	Product Reclamation and Recycling Program	107
Chapter 21	Replacing Fan Trays	109
	Removing a CTP2000 Fan Tray	109
	Installing a CTP2000 Fan Tray	109
Chapter 22	Packing and Returning Hardware	111
	Return Procedure	111
	Returning CTP Products for Repair or Replacement	111
Part 7	Troubleshooting	
Chapter 23	Troubleshooting Power Failures	115
	CTP Platform Does Not Power On	115
	CTP Platform Shuts Down	115
Chapter 24	Contacting Customer Support	117
	Contacting Customer Support	117
	Locating CTP Component Serial Numbers	117
	Information You Might Need to Supply to JTAC	118
Part 8	Index	
	Index	121

List of Figures

Part 1	Overview	
Chapter 1	CTP2000 Series Platform Overview	3
	Figure 1: CTP2008 Chassis (AC and DC Version, Front View)	4
	Figure 2: CTP2008 Platform (AC Version, Rear View)	4
	Figure 3: CTP2008 Platform (DC Version, Rear View)	5
	Figure 4: CTP2024 Chassis (AC and DC Version, Front View)	5
	Figure 5: CTP2024 Platform (AC Version, Rear View)	6
	Figure 6: CTP2024 Platform (DC Version, Rear View)	6
	Figure 7: CTP2056 Chassis (AC and DC Version, Front View)	7
	Figure 8: CTP2056 Platform (AC Version, Rear View)	8
	Figure 9: CTP2056 Platform (DC Version, Rear View)	9
Chapter 2	CTP2000 Series Interface Modules	11
	Figure 10: Sample Serial Interface Module	11
	Figure 11: CTP2000 IM-8P-T1/E1 Interface Module	12
	Figure 12: Compression Interface Module	12
	Figure 13: CTP2000 4WE&M Module	13
	Figure 14: 4WE&M RTM	13
	Figure 15: Jumper Locations on the RTM	14
	Figure 16: Jumper Positions for Signaling Types	14
	Figure 17: Analog 4WE&M Signaling Types	17
	Figure 18: Front Panel of CTP2000 2W-FXS Interface Module	19
	Figure 19: Rear Panel of CTP2000 2W-FXS RTM	19
	Figure 20: Front Panel of CTP2000 2W-FXO Interface Module	19
	Figure 21: Rear Panel of CTP2000 2W-FXO RTM	19
	Figure 22: CTP2000 8P-IRIG Interface Module	24
	Figure 23: Clock Main Module	24
	Figure 24: Clock Spoke Module	24
	Figure 25: Hub-and-Spoke Setup	25
Part 2	Planning	
Chapter 6	Cable and Pinout Specifications	41
	Figure 26: RTM Pinouts for CTP2000 2W-FXS and 2W-FXO Interface Modules	44
	Figure 27: CTP2000 Series Console Cable Pin Configurations	47
Part 3	Safety	
Chapter 9	Hardware Compliance	55
	Figure 28: CTP2000 Declaration of Conformity	56

Part 4	Installation	
Chapter 12	Installing Modules	71
	Figure 29: CompactFlash on the RTM	75
	Figure 30: CTP2000 Platforms PMC Location	75
Chapter 13	Installing and Removing SFPs in a CTP Module	77
	Figure 31: Representative SFP	77
	Figure 32: Possible Release Mechanisms on the SFP	79
Part 6	Maintenance	
Chapter 18	Maintaining Components	101
	Figure 33: Replacing an AC Power Supply	103

List of Tables

Part 1	Overview
Chapter 2	CTP2000 Series Interface Modules 11
	Table 1: Jumper Positions for Configuring Port Signaling Type 15
	Table 2: Signal Definitions 16
	Table 3: Supported Signaling Types for the CTP2000 4WE&M Module 18
	Table 4: Ground-Start Signaling at FXO Interface for Call Initiated by the FXO Interface 22
	Table 5: Ground-Start Signaling at FXO Interface for Call Initiated by the FXS Interface 22
	Table 6: Ground-Start Signaling at FXS Interface for Call Initiated by the FXS Interface 23
	Table 7: Ground-Start Signaling at FXS Interface for Call Initiated by the FXO Interface 23
Part 2	Planning
Chapter 3	System Specifications 29
	Table 8: CTP2008 Platform Specifications 29
	Table 9: CTP2024 Platform Specifications 31
	Table 10: CTP2056 Platform Specifications 32
Chapter 6	Cable and Pinout Specifications 41
	Table 11: CTP2000 4WE&M RTM Pinouts—Connector A 41
	Table 12: CTP2000 4WE&M RTM Pinouts—Connector B 42
	Table 13: CTP2000 FXS Connector Pinouts on the RTM 44
	Table 14: CTP2000 FXO Connector Pinouts on the RTM 45
	Table 15: CTP2000 Series Console Cable Pinouts 47
Part 4	Installation
Chapter 15	Cabling 83
	Table 16: Required Cables 84
	Table 17: CTP Power Supply Cables and Wires Needed 85

PART 1

Overview

- CTP2000 Series Platform Overview on page 3
- CTP2000 Series Interface Modules on page 11

CHAPTER 1

CTP2000 Series Platform Overview

- Introducing CTP Platforms on page 3
- CTP2008 Platform on page 3
- CTP2024 Platform on page 5
- CTP2056 Platform on page 7

Introducing CTP Platforms


Juniper Networks CTP Series Circuit to Packet platforms provide advanced technology and features required to reliably transport legacy time-division multiplexing (TDM) and other circuit-based applications across next-generation IP networks. CTP platforms create an IP packet flow from a serial data or analog voice connection at one end and provide the necessary processing to re-create the serial bit stream or analog signal from the received packet flow at the other end.

CTP platforms provide compact and lightweight chassis, high port density, and multiple Ethernet interfaces. Each CTP platform runs the CTP operating system (CTPOS) and can be managed by the Juniper Networks CTPView Network Management System, a secure, Web-based management tool for provisioning, managing, running diagnostics, monitoring, and reporting on all CTP devices and circuits in the network.

CTP2008 Platform

The Juniper Networks CTP2008 Circuit to Packet platform is a 3-U high, full-rack wide chassis designed for tabletop or shelf installation. It can also be installed in a rack with the supplied rack-mounting kit. The CTP2008 platform has one removable interface module and one removable processor module, and is available in both AC-powered and DC-powered versions. It has a removable fan tray, and airflow is side-to-side. See Figure 1 on page 4, Figure 2 on page 4, and Figure 3 on page 5.

Figure 1: CTP2008 Chassis (AC and DC Version, Front View)

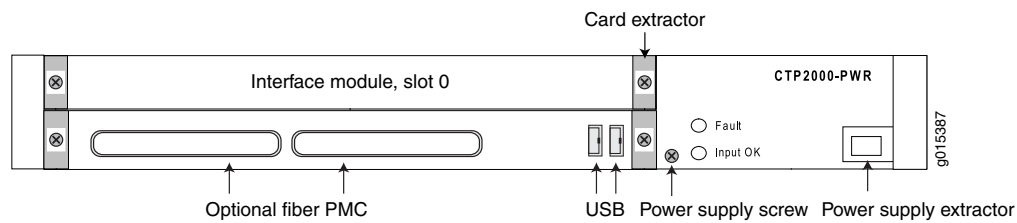

The front panel comprises the following components (see Figure 1 on page 4):

- Interface module—Frame processing and forwarding engines.
- Processor module—Two slots are available on this module for an optional fiber Gigabit Ethernet or Fast Ethernet PMC module. The primary SC connector is on the left side.
- Console port—This connector is not used by the CTP device.
- Power supply extractor—Push the button to eject the power supply module.

The rear panel comprises the following components (see Figure 2 on page 4 and Figure 3 on page 5):

- PMC I/O—Both I/Os are currently not supported.
- Interface module.
- Clock module.
- Power supply—Use a standard IEC power cord for the AC version. Use a 22-AWG fork terminal connector for the DC version. There is no power redundancy for the DC version.

There are no power switches on CTP2000 Series DC models, so a readily accessible disconnect device must be provided as part of the electrical installation of the unit. We recommend 22-AWG wire for DC power terminals.

- Ethernet connection—Provides the 100-Mbps Ethernet connection to the IP network by means of a local Ethernet switch or router.
- Console connection—Provides an asynchronous TTY connection for locally configuring the CTP device. **COM3** is not supported.
- USB port.

Figure 2: CTP2008 Platform (AC Version, Rear View)


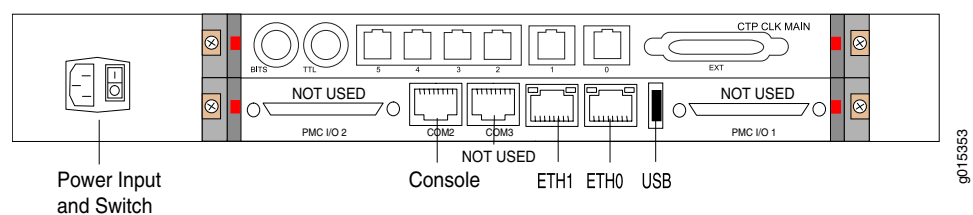


Figure 3: CTP2008 Platform (DC Version, Rear View)

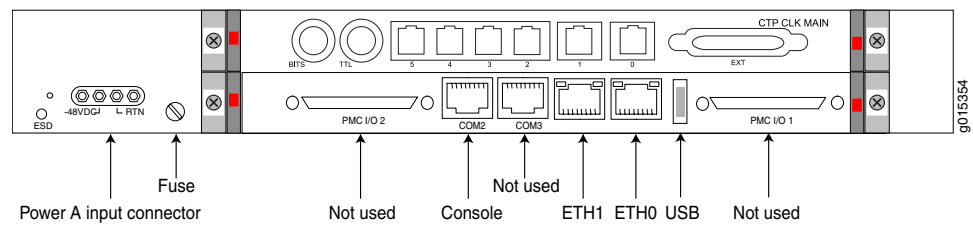


Related Documentation

- CTP2024 Platform on page 5
- CTP2056 Platform on page 7

CTP2024 Platform

The Juniper Networks CTP2024 Circuit to Packet platform can have up to three removable interface modules and one removable processor module, and is available in both AC-powered and DC-powered versions. It has a removable fan tray, and airflow is side-to-side. See Figure 4 on page 5, Figure 5 on page 6, and Figure 6 on page 6.

Figure 4: CTP2024 Chassis (AC and DC Version, Front View)

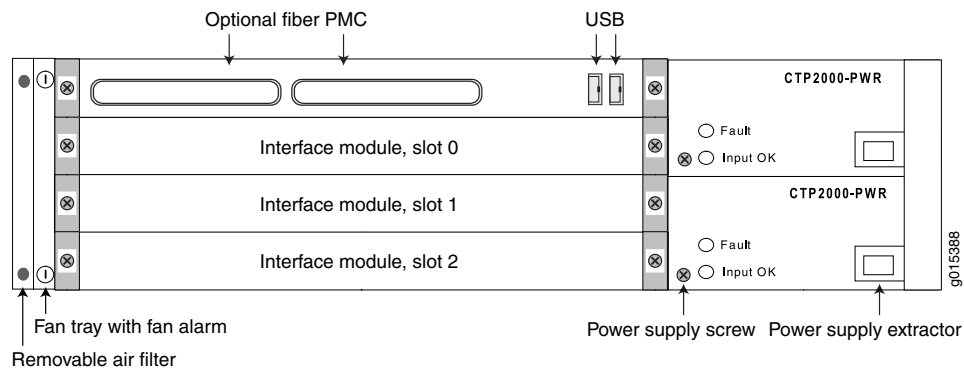

The front panel comprises the following components (see Figure 4 on page 5):

- Interface modules.
- Processor module—Two slots are available on this module for an optional fiber Gigabit Ethernet or Fast Ethernet PMC module. The primary SC connector is on the left side.
- Console port—This connector is not used by the CTP device.
- Power supply extractor—Push the button to eject the power supply module.
- Fan tray and air filter.

The rear panel comprises the following components (See Figure 5 on page 6 and Figure 6 on page 6):

- PMC I/O—Both I/Os are currently not supported.
- Interface modules.

- Clock module.
- Power supply—Use a standard IEC power cord for the AC version. Use a 22-AWG fork terminal connector for the DC version. Power redundancy is supported for the DC version.

There are no power switches on CTP2000 Series DC models, so a readily accessible disconnect device must be provided as part of the electrical installation of the unit. We recommend 22-AWG wire for DC power terminals.

- Ethernet connection—Provides the 100-Mbps Ethernet connection to the IP network by means of a local Ethernet switch or router.
- Console connection—Provides an asynchronous TTY connection for locally configuring the CTP device. **COM3** is not supported.
- USB port.

Figure 5: CTP2024 Platform (AC Version, Rear View)


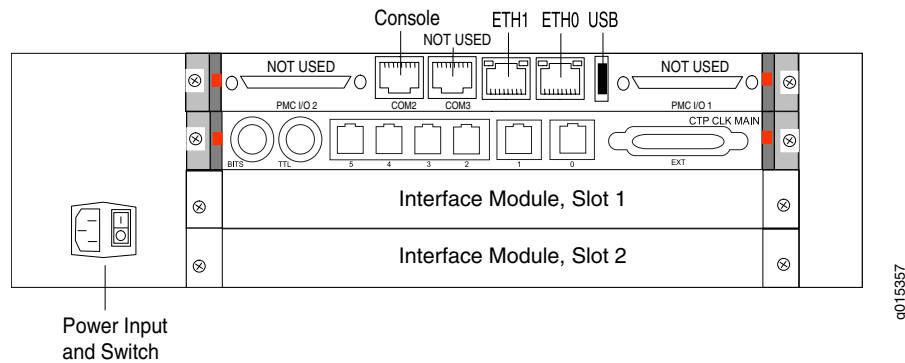


Figure 6: CTP2024 Platform (DC Version, Rear View)

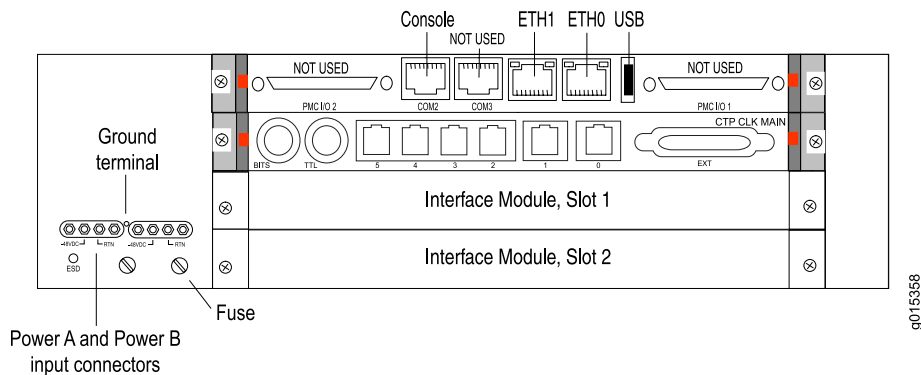


Related Documentation

- CTP2008 Platform on page 3
- CTP2056 Platform on page 7

CTP2056 Platform

The Juniper Networks CTP2056 Circuit to Packet platform can have up to seven removable interface modules and one removable processor module, and is available in both AC-powered and DC-powered versions. It has a removable fan tray, and airflow is side-to-side. See Figure 7 on page 7, Figure 8 on page 8, and Figure 9 on page 9.

Figure 7: CTP2056 Chassis (AC and DC Version, Front View)

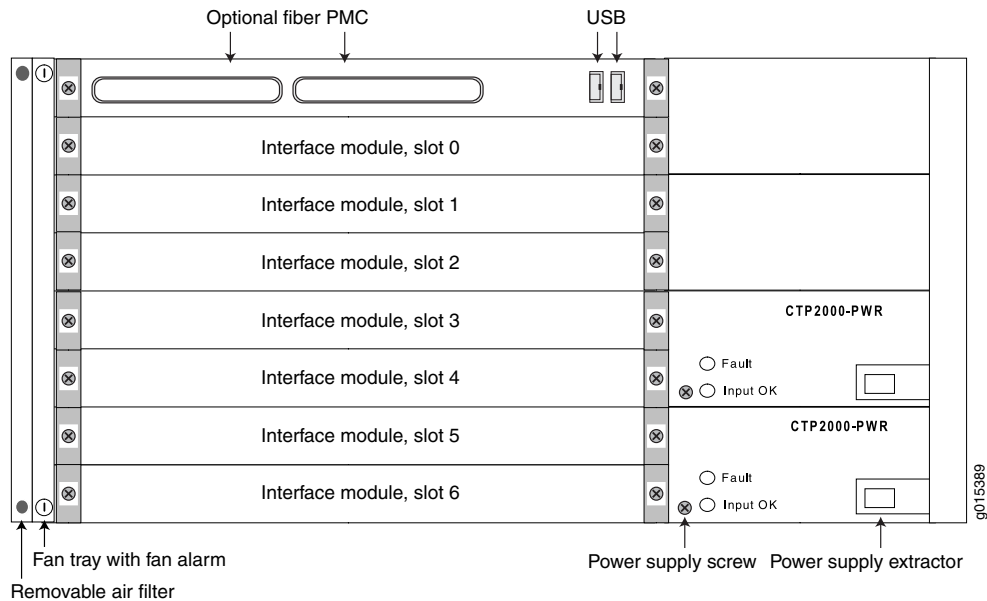

The front panel comprises the following components (see Figure 7 on page 7):

- Interface modules.
- Processor module—Two slots are available on this module for an optional fiber Gigabit Ethernet or Fast Ethernet PMC module. The primary SC connector is on the left side.
- Console port—This connector is not used by the CTP device.
- Power supply extractor—Push the button to eject the power supply module.
- Fan tray and air filter.

The rear panel comprises the following components (See Figure 8 on page 8 and Figure 9 on page 9):

- PMC I/O—Both I/Os are currently not supported.
- Interface modules
- Clock module
- Power supply—Use a standard IEC power cord for the AC version. Use a 22-AWG fork terminal connector for the DC version. Power redundancy is supported for the DC version.

There are no power switches on CTP2000 Series DC models, so a readily accessible disconnect device must be provided as part of the electrical installation of the unit. We recommend 22-AWG wire for DC power terminals.

- Ethernet connection—Provides the 100-Mbps Ethernet connection to the IP network by means of a local Ethernet switch or router.
- Console connection—Provides an asynchronous TTY connection for local configuration of the CTP device. COM3 is not supported.
- USB port.

Figure 8: CTP2056 Platform (AC Version, Rear View)


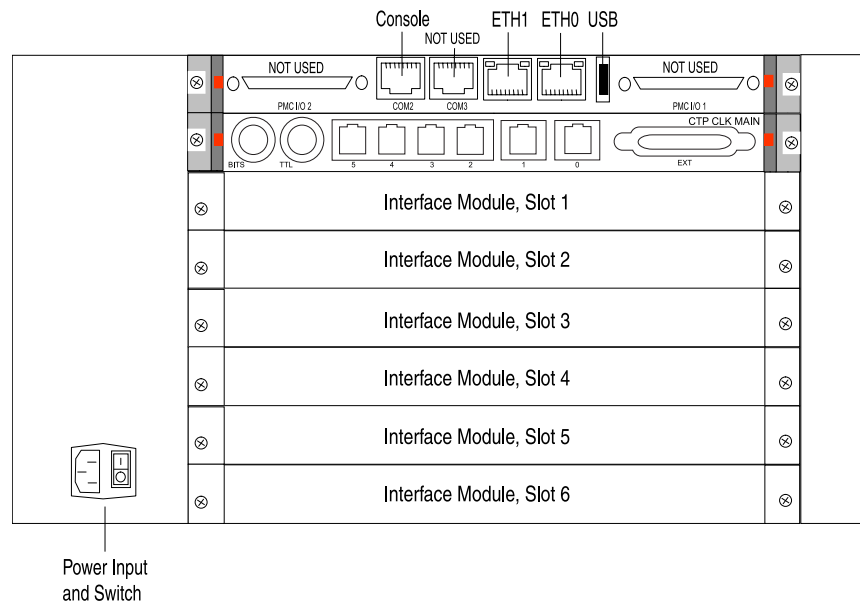


Figure 9: CTP2056 Platform (DC Version, Rear View)

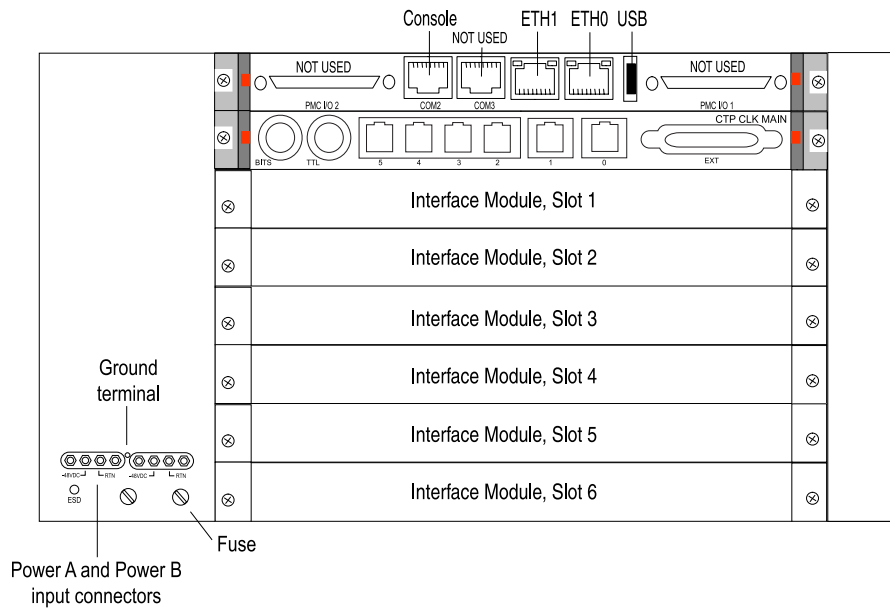

- Related Documentation**
- CTP2008 Platform on page 3
 - CTP2024 Platform on page 5

CHAPTER 2

CTP2000 Series Interface Modules

- CTP2000 Series Serial Interface Modules on page 11
- CTP2000 Series T1/E1 Interface Module on page 12
- CTP2000 Compression Interface Module on page 12
- CTP2000 4WE&M Interface Module on page 13
- CTP2000 2W-FXS and 2W-FXO Interface Modules on page 18
- CTP2000 8P-IRIG Interface Module on page 23
- CTP2000 Clock Interface Modules on page 24


CTP2000 Series Serial Interface Modules

The Juniper Networks CTP2008, CTP2024, and CTP2056 Circuit to Packet platforms have up to one, three, and seven serial interface modules, respectively. The interface modules are interchangeable between the platforms.

The following interface modules have two 100-pin connectors similar to the connectors provided on the CTP1004 and CTP1012 platforms. Each connector provides four ports by means of the quad cable. (See “Cabling the CTP2000 Platform Overview” on page 83.) The lowest-numbered ports start at the top right.

- CTP2000 IM-8P—Provides the standard software-configurable data interfaces, including EIA530, EIA530A, RS-232, and V.35; 8 port.
- CTP2000 IM-8P-T1—Provides the standard software-configurable data interfaces, plus a configurable T1/E1 interface; 8 port.
- CTP2000 IM-8P-V—Provides the standard software-configurable data interfaces, plus a configurable 4WTO interface; 8 port.

Figure 10: Sample Serial Interface Module

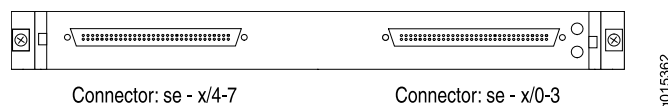

Related Documentation


- CTP2000 Series T1/E1 Interface Module on page 12
- CTP2000 Compression Interface Module on page 12

- CTP2000 4WE&M Interface Module on page 13
- CTP2000 2W-FXS and 2W-FXO Interface Modules on page 18
- CTP2000 8P-IRIG Interface Module on page 23

CTP2000 Series T1/E1 Interface Module

The CTP2000 Series T1/E1 interface module has RJ-48 ports numbered 0–7 left to right. It provides a configurable eight-port E1 (2.048 MHz) or T1 (1.544 MHz) interface with AMI or B8ZS encoding. (See Figure 11 on page 12.)

Figure 11: CTP2000 IM-8P-T1/E1 Interface Module

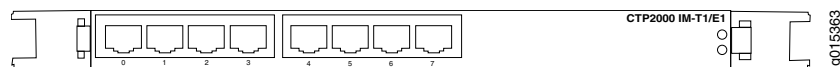

Related Documentation


- CTP2000 Series Serial Interface Modules on page 11
- CTP2000 Compression Interface Module on page 12
- CTP2000 4WE&M Interface Module on page 13
- CTP2000 2W-FXS and 2W-FXO Interface Modules on page 18
- CTP2000 8P-IRIG Interface Module on page 23

CTP2000 Compression Interface Module

The CTP2000 Series compression interface module enables serial data and voice bundles to be compressed and passed through a CTP2000 platform. (See Figure 12 on page 12.)

Voice bundles originating from the CTP2000 IM-8P-T1/E1, analog CTP2000 IM-4WE&M, IM-2WFXS, and IM-2WFXO modules use the CTP2000 compression module to compress the voice bundle. Voice bundles ranging from 1–24 channels on a T1 module, 1–30 channels on an E1 module, and 1–8 channels on a 4WE&M module can be bundled and connected through the compression module to compress the voice bundle and build the IP packet.

Figure 12: Compression Interface Module

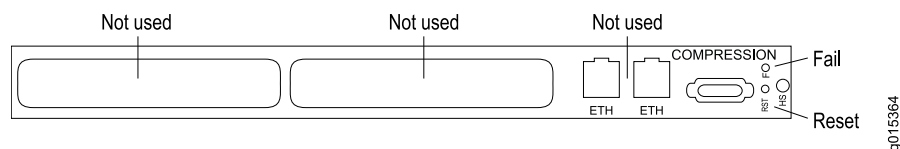

The compression module supports these compression algorithms:

- MELP (2.4k)
- G.729AB (8k)
- G.728 (16k)
- G.726 (16k)

- G.726 (32k)
- PMC (64k)

The module supports Mu-Law and A-Law companding, echo cancellation, silence suppression, fax/modem detection, and tone relay. You can configure the compression options when configuring the voice bundle.

Related Documentation

- CTP2000 Series T1/E1 Interface Module on page 12
- CTP2000 4WE&M Interface Module on page 13
- CTP2000 2W-FXS and 2W-FXO Interface Modules on page 18

CTP2000 4WE&M Interface Module

The CTP2000 Series 4WE&M interface module has eight 4-wire E&M ports and provides support for voice applications. It is used with voice compression (VCOMP) bundles in CTP2000 models and can be used only with a CTP2000 compression module.

Four-wire audio interfaces with E and M signaling interfaces (4WE&M) are commonly used as trunks between a central office (CO) and a private branch exchange (PBX). E and M is a type of supervisory line signaling that uses separate leads, called the "E" (ear) lead and "M" (mouth) lead and are traditionally used in the telecommunications industry. In 4WE&M signaling, two wires are used to receive and two wires are used to transmit, incorporating simplex control and differential payload in each channel. Type I, II, and V signaling is supported.

The 4WE&M interface module consists of a front card and a rear transition module (RTM). Port interfaces are located on connectors A and B of the RTM. (See Figure 13 on page 13 and Figure 14 on page 13.) The RJ-45 connectors are not used.

Figure 13: CTP2000 4WE&M Module


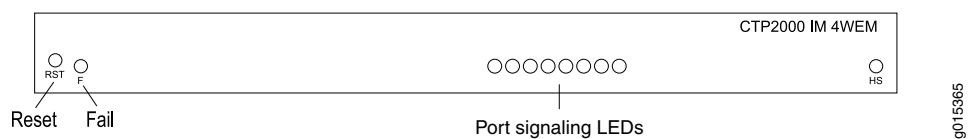


Figure 14: 4WE&M RTM

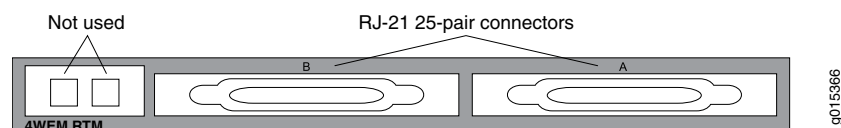

CAUTION: Power to the RTM is supplied from the interface module. Using an RTM other than those matched to the interface module may result in damage to both the interface module and the RTM. For example, never install a clock module RTM directly behind a 4WE&M interface module.

Voice ports can be used only by voice compression bundles (VCOMP) and cannot be used for CTP, SAToP, or CESoPSN bundles. There is no software configuration of 4WE&M ports. Signaling type is configured by means of jumpers (see Figure 16 on page 14 and Table 1 on page 15). One or more 4WE&M ports can be mapped to a VCOMP bundle. The bundle configuration specifies the remote destination, the local port or ports transported by the bundle, voice compression options, as well as other configuration options.

Figure 15: Jumper Locations on the RTM


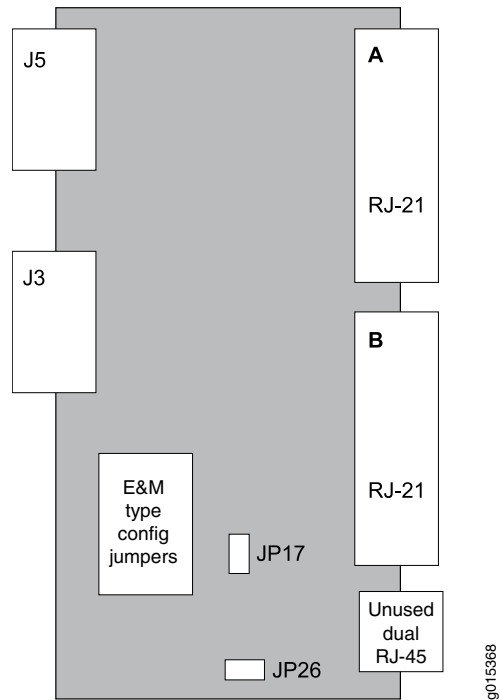


Figure 16: Jumper Positions for Signaling Types

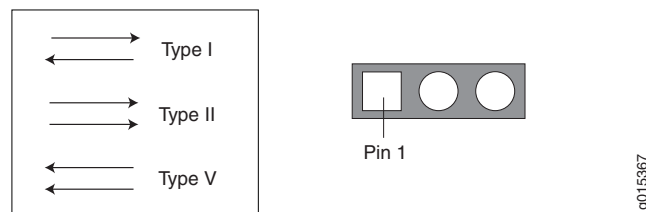

NOTE: Jumper JP17 must be in Position 1-2 (see Table 1 on page 15) if any ports are set for Type II signaling. This jumper ties all signal battery (SB) signals to battery voltage (–48V).

Jumper JP26 is used to connect all signal grounds (SG) to the chassis ground. When jumper JP26 is in Position 1-2, the signal ground is connected to the chassis ground. In Position 2-3, it is isolated from the chassis ground.

Table 1: Jumper Positions for Configuring Port Signaling Type

	Jumper	Signaling Type I	Signaling Type II	Signaling Type V
Port 0	JP1	Position 1-2	Position 2-3	Position 1-2
	JP9	Position 2-3	Position 2-3	Position 1-2
Port 1	JP2	Position 1-2	Position 2-3	Position 1-2
	JP10	Position 2-3	Position 2-3	Position 1-2
Port 2	JP3	Position 1-2	Position 2-3	Position 1-2
	JP11	Position 2-3	Position 2-3	Position 1-2
Port 3	JP4	Position 1-2	Position 2-3	Position 1-2
	JP12	Position 2-3	Position 2-3	Position 1-2
Port 4	JP5	Position 1-2	Position 2-3	Position 1-2
	JP13	Position 2-3	Position 2-3	Position 1-2
Port 5	JP6	Position 1-2	Position 2-3	Position 1-2
	JP14	Position 2-3	Position 2-3	Position 1-2
Port 6	JP7	Position 1-2	Position 2-3	Position 1-2
	JP15	Position 2-3	Position 2-3	Position 1-2
Port 7	JP8	Position 1-2	Position 2-3	Position 1-2
	JP16	Position 2-3	Position 2-3	Position 1-2

The rear transition board uses two RJ-21 25-pair Telco connectors labeled **A** and **B** to interface the audio and control connections for eight E&M channels.



NOTE: Because of space limitations, a 180° RJ-21 connector is required. The CTP 4WE&M RTM supports clips to secure the RJ-21 cable connections to the RTM.

The R1/T1 pair and the R/T pair are the audio inputs and outputs of each port, respectively. For example, the audio input pair for port 0 is R1 and T1 on pins 2 and 27 of connector A. The audio output pair for port 0 is R and T on pins 1 and 26.

See Table 2 on page 16 for signal definitions. See “CTP2000 4WE&M Interface Connector Pinouts” on page 41 for the connector A and B pinouts.


Table 2: Signal Definitions

Signal Name	Signal Definition
Port x T, R	Audio transmit pair, 600 Ohm
Port x T1, R1	Audio receive pair, 600 Ohm
Port x E	E lead—output
Port x M	M lead—input
Port x SG	Input for signal ground for signaling type II
Port x SB	Output signal battery (–48V) for signaling type II. Note that JP17 must be in position 1-2.
GND	Signal ground. E and M leads are referenced to this ground for signaling types I and V. Use JP26 to connect this ground to chassis ground.

Supervisory Signaling

Supervisory signaling is the means by which a telephone user requests a service or initiates a call. The signaling unit (CTP platform) interacts with the trunk unit (PBX) by means of either two or four leads, depending on the signaling type. (See Figure 17 on page 17.) The signaling unit controls the E lead, whereas the trunk side controls the M lead. The two signaling states are on-hook and off-hook. During inactivity both units are on-hook. See Table 3 on page 18 for a summary of signaling types supported by the CTP2000 4WE&M module.

Figure 17: Analog 4W-E&M Signaling Types

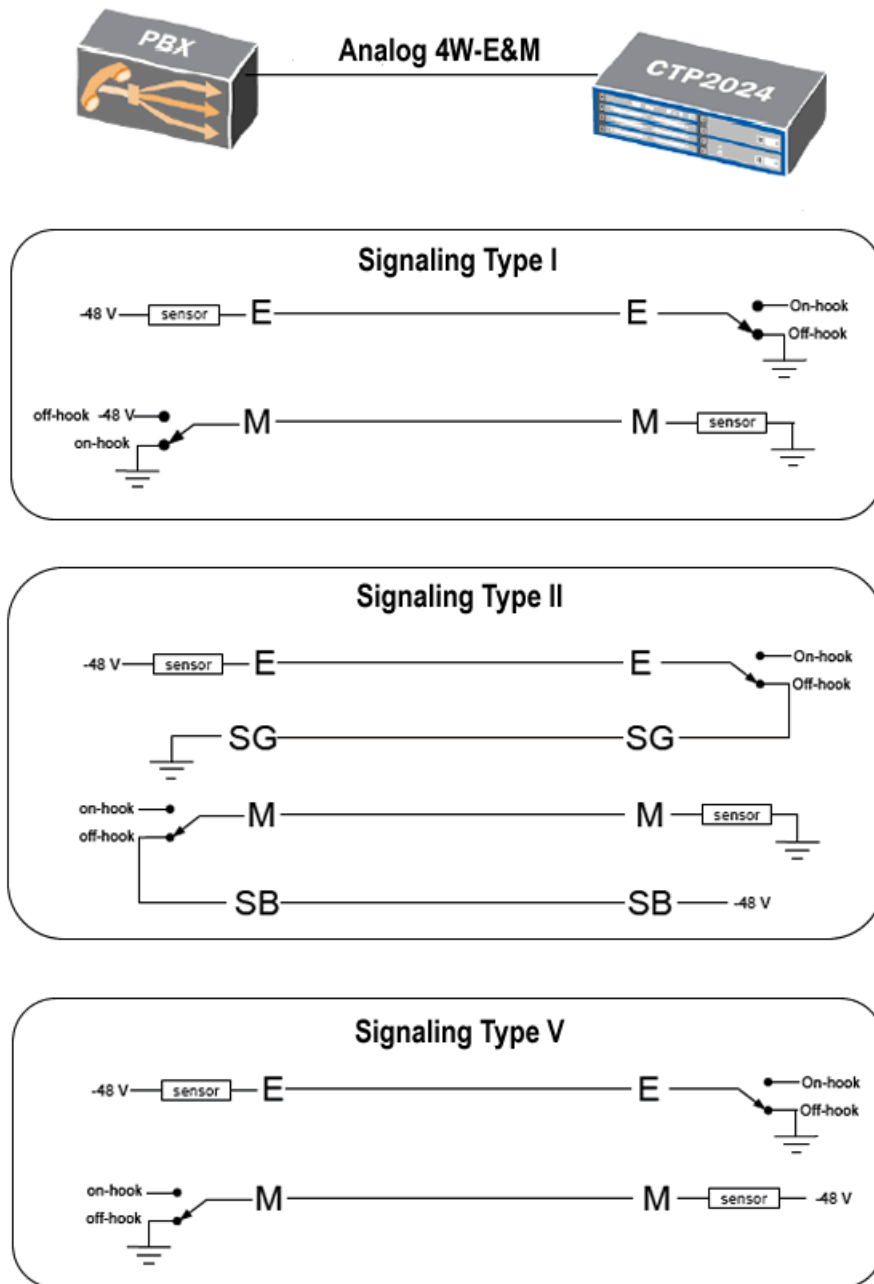

Type I uses two leads—the E and M leads—for signaling. During inactivity, the E lead is open and the M-lead is connected to ground. The CTP device connects the E lead to a grounding point to signal off-hook, and the PBX connects the M lead to the battery (–48 V) to signal off-hook. Note that two signaling units cannot be connected back-to-back. With type I signaling, the signaling and trunk units must be connected by means of a common ground. Because the two sides are not isolated, they are susceptible to noise in the audio channels.

Type II uses four leads—E, SG, M, and SB—for signaling. During inactivity, both the E and M leads are open. To signal off-hook, the PBX connects the M lead to SB and the CTP device connects the E lead to SG. Note that two signaling units can be connected back-to-back if the appropriate signaling leads are swapped. With Type II signaling, the signaling unit and the trunk do not share a common ground.

Type V uses two leads, the E and M leads, for signaling. During inactivity, both the E and M leads are open. The CTP device signals off-hook by connecting the E lead to ground. The trunk circuit signals off-hook by connecting the M lead to ground. As with type I, with type V signaling, the two units share a common ground. Type V signaling allows for signaling units to be connected back-to-back.

Table 3: Supported Signaling Types for the CTP2000 4WE&M Module

Signaling Type	Signaling Leads	PBX (M Lead)		CTP (E Lead)	
		On-hook	Off-hook	On-hook	Off-hook
I	E, M	Ground	Battery	Open	Ground
II	E, M, SG, SB	Open	SB	Open	SG
V	E, M	Open	Ground	Open	Ground

Related Documentation

- CTP2000 Series Serial Interface Modules on page 11
- CTP2000 Series T1/E1 Interface Module on page 12
- CTP2000 Compression Interface Module on page 12
- CTP2000 2W-FXS and 2W-FXO Interface Modules on page 18
- CTP2000 8P-IRIG Interface Module on page 23

CTP2000 2W-FXS and 2W-FXO Interface Modules

The CTP2000 2W-FXS and CTP2000 2W-FXO interface modules provide analog support for voice applications. The 2W-FXS module has 24 two-wire FXS ports and the 2W-FXO interface module has 12 two-wire FXS ports. Both are paired with an RTM.

- FXS interfaces point to the subscriber and supply battery and ring voltage. Some FXS devices also provide dial tone, but CTP FXS interfaces do not. FXS interfaces detect when the attached FXO interface goes off-hook and on-hook. An FXS interface is a two-wire interface; the leads are called the tip (T) and the ring (R).
- FXO interfaces point to the central office. An analog phone is an example of an FXO device. The FXO interface must detect ring voltage (the analog phone rings) and provide on- and off-hook indication to the FXS interface. An FXO interface is a two-wire interface; the leads are called the tip (T) and the ring (R).

Both interface modules consist of a front module and an RTM. See Figure 18 on page 19 and Figure 19 on page 19 for the CTP2000 2W-FXS interface module.

Figure 18: Front Panel of CTP2000 2W-FXS Interface Module


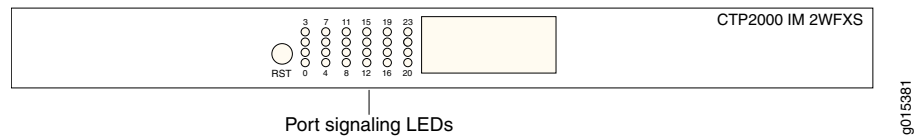


Figure 19: Rear Panel of CTP2000 2W-FXS RTM

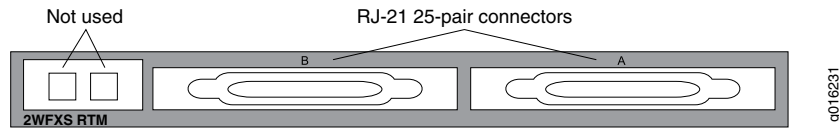

See Figure 20 on page 19 and Figure 21 on page 19 for the CTP2000 2W-FXO interface module.

Figure 20: Front Panel of CTP2000 2W-FXO Interface Module


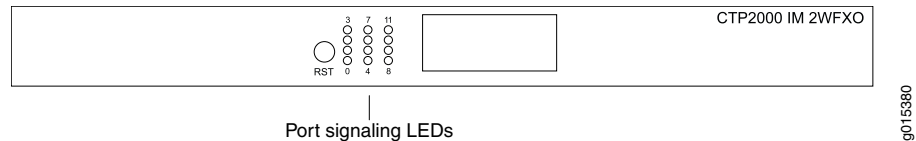


Figure 21: Rear Panel of CTP2000 2W-FXO RTM

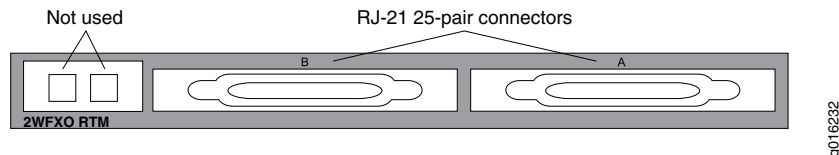

Both modules use connector A on the RTM. For both modules, connector B and the RJ-45 connectors are not used. See “CTP2000 FXS and FXO Interface Module Cables and Pinouts” on page 43 for connector pinout information.

You set the signaling by using the software on both modules. You cannot reconfigure the jumper parameters.

Required Cables and Pinouts

The CTP2000 2W-FXS and 2W-FXO interface modules require the use of double-shielded cables (copper braid plus aluminum mylar foil) to ensure EMI compliance. See “CTP2000 FXS and FXO Interface Module Cables and Pinouts” on page 43 for particulars about cable pinouts.

Analog FXS/FXO Loop-Start Signaling

There are two basic signaling protocols for FXS/FXO interfaces: loop-start and ground-start. Residential telephones use loop-start. Ground-start is typically used between a CO and a PBX to prevent “glare.” Glare occurs when a call is established by the FXS device and the FXO device tries to make a call before the ring has been detected.

When a call is initiated from the CO (or FXS) side, the FXS interface puts an AC ring voltage on the R lead (typically 70-90 Vrms). This ring voltage generates the ringing that you hear on an analog phone. When the FXO device answers the call (someone picks up the handset), the switch is closed between the T and R leads to complete a loop between

the battery and ground in the FXS device. The FXS device detects the current, which flows from the battery (–48 V) through the R leads and back through the T leads to ground and stops the ring voltage.

When a call is initiated by the CPE (or FXO) device, the device goes off-hook, closing the connection between the T and R leads. The FXS device senses the current flow in the loop. Either the attached FXS device, or an upstream FXS device, provides dial tone to the FXO device after it is ready to accept the digits for the call destination. Providing dial tone is a form of start-dial supervision.

On the FXO device, when the device is on-hook, there is an open lead between the T and R leads. When the device is off-hook, the T and R leads are shorted with a typical load of ~300 Ohms. With loop-start, the T and R leads on the FXO interface can be switched without adversely affecting the signaling.

Glare occurs when a call is established by the FXS device and the FXO tries to make a call before the ring has been detected. Because it takes time for the FXO device (or person about to place a call) to detect ringing, it is possible for the FXS and FXO devices to both seize the line without knowledge that the other end has done so. Ground-start circuits were established to minimize the possibility of glare. See “Analog FXS/FXO Ground-Start Signaling” on page 20.

Answer Supervision

Answer supervision is a signal used by the phone companies to determine when to start billing the originator of the call. Without answer supervision, you could get billed for the time the phone was ringing, even if the call was never picked up. When the FXS device has detected that the FXO device has gone off-hook, it reverses the polarity between the T and R leads for the duration of the call.

Disconnect Supervision

Disconnect supervision is a signal sent by the FXS device to the FXO device to indicate that the call has ended. The disconnect supervision signal can be either a battery reversal, battery denial (more than 350 ms), or a tone.

Note that loop-start circuits are not sensitive to tip/ring reversal. For example, the tip on the FXO device may be connected to either the tip or ring on the FXS.

Analog FXS/FXO Ground-Start Signaling

Ground-start signaling is used to minimize the potential for glare. Unlike loop-start circuits, ground-start circuits operate correctly only when the FXO tip is connected to the FXS tip and the FXO ring is connected to the FXS ring. Also, unlike loop-start circuits, the FXS and FXO grounds must be at the same potential.

When on-hook, the FXO ring is not connected to either the tip or ground. Likewise, when idle, the FXS tip is not connected to ground. When a call is initiated from the CO (FXS side), the FXS grounds its tip and applies an AC ring voltage to the R lead. The FXO device senses the grounded tip and AC ring voltage, and then goes off-hook by closing the loop (connecting R to T). The FXO has 100 ms to respond to the grounded tip/ring voltage. This time constraint is used to minimize glare. Once the FXO has closed the loop, the call proceeds as in the loop-start case.

When a call is initiated by the customer (FXO) side, the FXO starts by grounding the R lead. The FXS side responds by grounding its T lead. After the FXO has detected the grounded T lead, it closes the loop by removing the R lead from ground and closing the loop. With ground-start circuits, a far-end disconnect (FXS side) is indicated by the FXS disconnecting the tip from ground. The FXO senses the tip disconnect and goes on-hook by opening the loop.

Digital Signaling

Channel banks are often used to multiplex and demultiplex FXS or FXO interfaces onto T1 or E1 digital circuits. In the process, the analog signal is converted into pulse code modulation (PCM) and carried by one of the channels in the time-division multiplexing (TDM) circuit. For the interface to function properly, it must be able to signal the remote end of the T1/E1 connection as well as respond to signals from the remote end. Signaling is carried over the TDM circuit using either channel-associated signaling (CAS) or common-channel signaling (CCS). Generally, four signaling bits (A, B, C, and D) may be used; however, two signaling bits are most common (A and B).

For CTP analog voice products to work with digital devices, A and B bits are generated and transported across the network.

Digital FXS/FXO Loop-Start Signaling

For loop-start signaling of FXS and FXO interfaces, the A bit is used to indicate the state of the current loop, whereas the B bit is used for ringing. In the idle state (no ringing, FXO on-hook), A=0 and B=1. A=1 when the FXO is off-hook. Ringing is signaled by the B bit toggling between 0 and 1. Typically the toggling is 2 seconds off and 4 seconds on. For digital loop-state, the signaling is bidirectional.

Because hook indication is detected by the analog FXS interface, this device is responsible for generating the A bit. Likewise, because the analog FXS interface generates the ring voltage, this device must respond to the B bit. Because the signaling is bidirectional, the FXS side must echo the B bit when sending out the A bit.

The same logic applies to the FXO interface. The FXO device goes on/off-hook. It must respond to the A bit, going off-hook when A transitions from 0 to 1, and going on-hook when A goes from 1 to 0. The analog FXO interface detects ringing; therefore, it is responsible for generating the B bit value. The FXO device must echo the A value when sending out the digital signaling over the network.

Two situations for this call sequence must be considered: when the CTP is the FXO device and when the CTP platform is the FXS device. In both cases, before the call starts, the FXO is on-hook (A=1) and there is no ringing (B=1).

- For an analog CTP FXS interface, before the call starts, the CTP interface must generate A=0 and send both A=0 and B=1. When the call initiates from the CO, the B bit is toggled. In response to this toggling, the CTP device generates a ring voltage on the analog FXS interface. When the attached FXO device goes off-hook, the CTP FXS interface detects the off-hook, sets the A bit to 1, and stops the ring voltage. During the call, the CTP device sends A = B = 1 signaling bits. At the end of the call, the FXO device goes back to on-hook, the CTP detects the on-hook, sends out A=0 and B=1 signaling bits, and the circuit returns to the idle state.

- For an analog CTP FXO interface, before the call starts the FXO is on-hook and no ringing is generated by the attached FXS device. In this, the idle state, the CTP interface generates B=1 and sends both A=0 and B=1. When the call comes in from the CO, the CTP FXO interface detects ring voltage and starts toggling the B bit. When the other end of the VCOMP bundle goes off-hook, it sends A=1 to the CTP. In response, the CTP FXO interface closes the loop, going off-hook. With ringing stopped, the CTP interface sends A = B = 1 during the call. At the end of the call the interface is again idle, and the CTP interface sends A=0 and B=1 signaling bits.

Digital FXS/FXO Ground-Start Signaling

Unlike loop-start interfaces, in which the FXO and FXS each separately control a single signaling bit, with ground-start signaling each side controls both the A and B bits. We must consider each interface when the call is initiated by either interface. (See Table 4 on page 22, Table 5 on page 22, Table 6 on page 23, and Table 7 on page 23). In all cases, when the FXO/FXS interface is idle, the FXO interface generates A = B = 1 signaling bits and the FXS A = 0, B = 1. When a call is in progress, either side initiates a call termination if it receives these signaling bits. For example, an FXS goes on-hook if it receives A=B=1 signaling bits.

Table 4: Ground-Start Signaling at FXO Interface for Call Initiated by the FXO Interface

	Signaling Bits to FXO	Signaling Bits from FXO
Idle (before call starts)	01 (A=0, B=1)	11 (A=1, B=1)
FXO grounds ring	00	11
FXS goes off-hook (grounds tip)	00	01
FXO goes off-hook (closes loop)	11	01
Duration of call	11	01

Table 5: Ground-Start Signaling at FXO Interface for Call Initiated by the FXS Interface

	Signaling Bits to FXO	Signaling Bits from FXO
Idle (before call starts)	01 (A=0, B=1)	11 (A=1, B=1)
FXS goes off-hook (grounds tip and sends AC ring signal)	01	00/01 (B-bit toggles)
FXO goes off-hook (closes loop)	11	01
Duration of call	11	01

Table 6: Ground-Start Signaling at FXS Interface for Call Initiated by the FXS Interface

	Signaling Bits to FXS	Signaling Bits from FXS
Idle (before call starts)	11 (A=1, B=1)	01 (A=0, B=1)
FXS goes off-hook (grounds tip and sends AC ring signal)	00/01 (B-bit toggles)	01
FXO goes off-hook (closes loop)	01	11
Duration of call	01	11

Table 7: Ground-Start Signaling at FXS Interface for Call Initiated by the FXO Interface

	Signaling Bits to FXS	Signaling Bits from FXS
Idle (before call starts)	11 (A=1, B=1)	01 (A=0, B=1)
FXO grounds ring	11	00
FXS goes off-hook (grounds tip and sends AC ring signal)	01	00
FXO goes off-hook (closes loop)	01	11
Duration of call	01	11

Related Documentation

- CTP2000 Series Serial Interface Modules on page 11
- CTP2000 Series T1/E1 Interface Module on page 12
- CTP2000 Compression Interface Module on page 12
- CTP2000 4WE&M Interface Module on page 13
- CTP2000 8P-IRIG Interface Module on page 23
- CTP2000 FXS and FXO Interface Module Cables and Pinouts on page 43


CTP2000 8P-IRIG Interface Module

The CTP2000 8P-IRIG interface module enables an interrang instrumentation group time code (IRIG-B) signal to be transported through an IP network. IRIG-B is a special time code transmission format that uses a hybrid analog/digital physical interface. The IRIG-B standard consists of a family of rate-scaled serial time codes with formats containing up to three coded expressions or words. The IRIG-B pulse code contains one frame of 100 elements per second for the time of the year and GPS receiver status. IRIG-B

encodes day of year, hour, minute, and second data on a 1-KHz carrier frequency, with an update rate of once per second.

The CTP2000 8P-IRIG module has eight ports. You can configure direction, high and low level output, and data range for this module. (See Figure 22 on page 24.)

Figure 22: CTP2000 8P-IRIG Interface Module

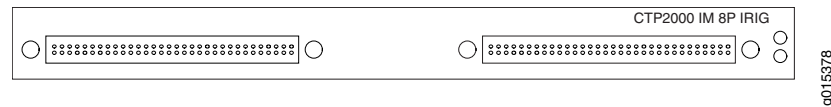

Related Documentation

- CTP2000 Series Serial Interface Modules on page 11
- CTP2000 Series T1/E1 Interface Module on page 12
- CTP2000 Compression Interface Module on page 12
- CTP2000 4WE&M Interface Module on page 13
- CTP2000 2W-FXS and 2W-FXO Interface Modules on page 18

CTP2000 Clock Interface Modules

Clock interface modules provide clock distribution between modules when the backplane is in use by voice applications.

The clock rear transition module (RTM) is used to input a reference clock into the CTP2000 platform. The module provides a DB-25 connector, and the differential clock input is provided on pins 24 and 11. The clock RTM is installed in the rear of the chassis behind the first interface module as follows:

- On CTP2008 devices, the first slot above the processor RTM.
- On the CTP2024 and CTP2056 devices, the first slot below the processor RTM.

Clock distribution is accomplished through a “hub-and-spoke” configuration composed of a main module and a spoke module. Clock main modules (Figure 23 on page 24) and clock spoke modules (Figure 24 on page 24) allow more clock input types in the CTP2000 chassis and provide the capability for clock distribution when both serial or T1/E1 interface modules and voice modules are installed in the same CTP2000 chassis.

Figure 23: Clock Main Module


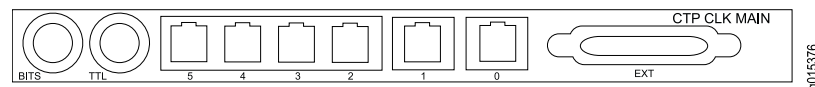


Figure 24: Clock Spoke Module



The clock main module accepts a node reference and distributes it to the spoke module using a twisted pair cable. Each nonvoice card receives the clock on the first RJ-45 and sends it to the front module.

Figure 25: Hub-and-Spoke Setup

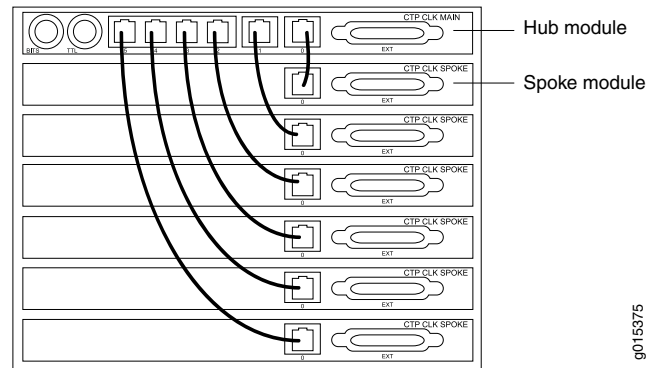

The main clock module has six RJ-45 ports and one DB-25 port. (It also has two BNC inputs (BITS and TTL) that will be enabled in a future software release.) Each RJ-45 port can be connected to one spoke module. The spoke module has one ingress RJ-45 port and one DB-25 interface. (See Figure 23 on page 24, Figure 24 on page 24, and Figure 25 on page 25.)

There are no configurable options for the clock module. Main modules and spoke modules are not hot-swappable.

- Nonvoice modules and voice modules can be installed in any slot.
- Main clock RTMs must be installed in slot 0 behind either a serial module or a T1/E1 module.
- Spoke RTMs must be installed behind serial modules and the lowest-numbered T1/E1 slot.
- If a T1/E1 module is installed in the slot that is closest to the processor, a spoke RTM is not needed behind any T1/E1 modules. They will synchronize to the H.100 clock.
- For platforms with only nonvoice boards (serial or T1/E1 module), only a main RTM is needed for external node reference input.

PART 2

Planning

- System Specifications on page 29
- Planning and Preparing the Site on page 35
- Equipment Rack Requirements on page 37
- Cable and Pinout Specifications on page 41

CHAPTER 3

System Specifications

- CTP2008 Platform Specifications and Certification on page 29
- CTP2024 Platform Specifications and Certification on page 31
- CTP2056 Platform Specifications and Certification on page 32

CTP2008 Platform Specifications and Certification

Table 8: CTP2008 Platform Specifications

Category	Specification
Weight	
Chassis only	16 lb (7.25 kg)
Dimensions	
Chassis only	1.75 in. (4.44 cm) high
	17.25 in. (43.81 cm) wide
	11.25 in. (28.57 cm) deep
Environmental Requirements	
Ambient operating temperature	32° to 104° F (0° to 40° C)
Ambient operating humidity	5% to 90% (noncondensing)
DC Input	
Voltage	–40 to –72 VDC
Current	3A @ –48 VDC
Power	144 W
Redundancy (input power)	2 independent line feeds
AC Input	
Power required	100–240 VAC

Table 8: CTP2008 Platform Specifications (*continued*)

Category	Specification
AC line frequency	50–60 Hz
Nominal current (115V amps)	2.0
Power	200 W
Space Requirements	<p>3 ft. (90 cm) behind device or rack.</p> <p>Do not block air vents on the front or back of the device.</p>
Airflow	<p>Air intake occurs from the front of the device.</p> <p>Air is exhausted out the back of the device.</p>
Safety Agency Certification	<ul style="list-style-type: none"> • AS/NZS 60950:2000 Safety of Information Technology Equipment • CAN/CSA-C22.2, No. 60950-1-03, First Edition, Information Technology Equipment - Safety - Part 1: General Requirements • EN60825-1, Safety of Laser Products - Part 1: Equipment Class, Requirements, and User's Guide (2001) • IEC 60950-1(2001-10) Ed. 1.0 Information Technology Equipment - Safety - Part 1: General Requirements • Low Voltage Directive (2006/95/EC) • UL 60950-1, First Edition, Information Technology Equipment - Safety - Part 1: General Requirements
Electromagnetic Emissions Agency Certification	<ul style="list-style-type: none"> • AS/NZS CISPR 22:2004 • EMC Directive (89/336/EEC) • EN 300 132-2 (Narrowband and Wideband) • EN55022 Class A (CISPR-22 Class A) • EN55024, Annex C for WAN Equipment Performance Criteria A, B, and C • EN 61000-4-2, EN 61000-4-3, EN 61000-4-4, EN 61000-4-6 • ETSI 300-386, Telecommunication Network Equipment; ElectroMagnetic Compatibility (EMC) requirements • IECS-03 Issue 3 Class A • FCC Part 15 Class A • VCCI (Voluntary Control Council for Interference by Information Technology Equipment)

- Related Documentation**
- CTP2024 Platform Specifications and Certification on page 31
 - CTP2056 Platform Specifications and Certification on page 32

CTP2024 Platform Specifications and Certification

Table 9: CTP2024 Platform Specifications

Category	Specification
Weight	
Chassis only	20 lb (9.07 kg)
Dimensions	
Chassis only	3.5 in. (8.89 cm) high
	17.25 in. (43.81 cm) wide
	11.25 in. (28.57 cm) deep
Environmental Requirements	
Ambient operating temperature	32° to 104° F (0° to 40° C)
Ambient operating humidity	5% to 90% (noncondensing)
DC Input	
Voltage	–40 to –72 VDC
Current	3A @ –48 VDC
Power	144 W
Redundancy (input power)	2 independent line feeds
AC Input	
Power required	100–240 VAC
AC line frequency	50–60 Hz
Nominal current (115V amps)	2.0
Power	200 W
Space Requirements	
	3 ft. (90 cm) behind device or rack.
	Do not block air vents on the front or back of the device.
Airflow	
	Air intake occurs from the front of the device.
	Air is exhausted out the back of the device.

Table 9: CTP2024 Platform Specifications (*continued*)

Category	Specification
Safety Agency Certification	<ul style="list-style-type: none"> AS/NZS 60950:2000 Safety of Information Technology Equipment CAN/CSA-C22.2, No. 60950-1-03, First Edition, Information Technology Equipment - Safety - Part 1: General Requirements EN60825-1, Safety of Laser Products - Part 1: Equipment Class, Requirements, and User's Guide (2001) EN 60950-1:2001, First Edition, Information Technology Equipment - Safety - Part 1: General Requirements IEC 60950-1(2001-10) Ed. 1.0 Information Technology Equipment - Safety - Part 1: General Requirements Low Voltage Directive (2006/95/EC) UL 60950-1, First Edition, Information Technology Equipment - Safety - Part 1: General Requirements
Electromagnetic Emissions Agency Certification	<ul style="list-style-type: none"> AS/NZS CISPR 22:2004 EMC Directive (89/336/EEC) EN 300 132-2 (Narrowband and Wideband) EN55022 Class A (CISPR-22 Class A) EN55024, Annex C for WAN Equipment Performance Criteria A, B, and C EN 61000-4-2, EN 61000-4-3, EN 61000-4-4, EN 61000-4-6 ETSI 300-386, Telecommunication Network Equipment; ElectroMagnetic Compatibility (EMC) requirements IECS-03 Issue 3 Class A FCC Part 15 Class A VCCI (Voluntary Control Council for Interference by Information Technology Equipment)
Related Documentation	<ul style="list-style-type: none"> CTP2008 Platform Specifications and Certification on page 29 CTP2056 Platform Specifications and Certification on page 32

CTP2056 Platform Specifications and Certification

Table 10: CTP2056 Platform Specifications

Category	Specification
Weight	
Chassis only	27 lb (12.25 kg)
Dimensions	
Chassis only	7.0 in. (17.8 cm) high 17.25 in. (43.81 cm) wide 11.25 in. (28.57 cm) deep
Environmental Requirements	

Table 10: CTP2056 Platform Specifications (*continued*)

Category	Specification
Ambient operating temperature	32° to 104° F (0° to 40° C)
Ambient operating humidity	5% to 90% (noncondensing)
DC Input	
Voltage	–40 to –72 VDC
Current	4A @ –48 VDC
Power	192 W
Redundancy (input power)	2 independent line feeds
AC Input	
Power required	100–240 VAC
AC line frequency	50–60 Hz
Nominal current (115V amps)	2.5
Power	250 W
Space Requirements	
	3 ft. (90 cm) behind device or rack. Do not block air vents on the front or back of the device.
Airflow	
	Air intake occurs from the front of the device. Air is exhausted out the back of the device.
Safety Agency Certification	
	<ul style="list-style-type: none"> AS/NZS 60950:2000 Safety of Information Technology Equipment CAN/CSA-C22.2, No. 60950-1–03, First Edition, Information Technology Equipment - Safety - Part 1: General Requirements EN60825-1, Safety of Laser Products - Part 1: Equipment Class, Requirements, and User's Guide (2001) EN 60950-1:2001, First Edition, Information Technology Equipment - Safety - Part 1: General Requirements IEC 60950-1(2001-10) Ed. 1.0 Information Technology Equipment - Safety - Part 1: General Requirements Low Voltage Directive (2006/95/EC) UL 60950-1, First Edition, Information Technology Equipment - Safety - Part 1: General Requirements

Table 10: CTP2056 Platform Specifications (*continued*)

Category	Specification
Electromagnetic Emissions Agency Certification	<ul style="list-style-type: none">• AS/NZS CISPR 22:2004• EMC Directive (89/336/EEC)• EN 300 132-2 (Narrowband and Wideband)• EN55022 Class A (CISPR-22 Class A)• EN55024, Annex C for WAN Equipment Performance Criteria A, B, and C• EN 61000-4-2, EN 61000-4-3, EN 61000-4-4, EN 61000-4-6• ETSI 300-386, Telecommunication Network Equipment; ElectroMagnetic Compatibility (EMC) requirements• IECS-03 Issue 3 Class A• FCC Part 15 Class A• VCCI (Voluntary Control Council for Interference by Information Technology Equipment)
Related Documentation	<ul style="list-style-type: none">• CTP2008 Platform Specifications and Certification on page 29• CTP2024 Platform Specifications and Certification on page 31

CHAPTER 4

Planning and Preparing the Site

- Before You Install a CTP Platform on page 35
- CTP2000 Environmental Requirements on page 35

Before You Install a CTP Platform

Before you install a Juniper Networks CTP Circuit to Packet platform:

- Verify that the electrical supply meets all power requirements. See the system specifications for the applicable CTP model.
- Verify that the site meets all environment specifications. Refer to the environmental requirements and the system specifications for the applicable CTP model.
- Verify that the cables you plan to use meet the specifications, and review the cabling recommendations.
- Verify the operation of all telephone circuits, digital services, and T1 facilities required for installation.
- Ensure that all IP requirements are met, such as IP addresses, subnet masks, and any specific routing protocol information.

CTP2000 Environmental Requirements

See one of the following topics for complete environmental specifications:

- CTP2008 Platform Specifications and Certification on page 29
- CTP2024 Platform Specifications and Certification on page 31
- CTP2056 Platform Specifications and Certification on page 32

Choose a location for the device that is dry, relatively dust free, well ventilated, and air conditioned. If you install equipment in a rack, be sure that the floor is capable of supporting the combined weight of the rack and the installed equipment. Place the device in a location with sufficient access to power and network cables.

Like other network devices, the device generates a significant amount of heat. You must provide a balanced environment so that the device performs properly and safely. See the individual system specifications for acceptable ranges of temperature and humidity.

Be sure to allow enough space around the device for adequate ventilation. Inadequate ventilation can cause the device to overheat.



CAUTION: Do not block the air vents on the device. Otherwise, the device might overheat.

**Related
Documentation**

- Before You Install a CTP Platform on page 35

CHAPTER 5

Equipment Rack Requirements

- CTP2000 Rack Requirements on page 37
- CTP2000 Mechanical Requirements on page 37
- CTP2000 Space Requirements on page 38
- CTP2000 Rack Installation on page 38
- CTP Cabling Recommendations on page 38

CTP2000 Rack Requirements

When allocating equipment rack space, consider the following:

- Type of equipment racks recommended for the system
- Number of equipment racks required to hold your current system configuration
- Future expansion

Make sure that your distribution rack meets basic mechanical and space requirements and complies with conventional standards. In the United States, use *EIA-310-D Cabinets, Racks, Panels, and Associated Equipment, September 1992*.

Related Documentation

- CTP2000 Mechanical Requirements on page 37
- CTP2000 Space Requirements on page 38
- CTP2000 Rack Installation on page 38

CTP2000 Mechanical Requirements

Follow these mechanical requirements for your rack:

- Select from the following rack options:
 - Two-post rack—a freestanding enclosed cabinet with two mounting posts in the front
 - Telco-type rack—two adjacent mounting posts that you must secure to the floor or an overhead structure

- Four-post rack—a freestanding open rack, either open or closed
- The rack must have at least two mounting posts.
- The distance between the mounting holes in the two posts must be 18.31 in. ffl.063 in., as specified in the EIA-310-D document.
- A fully loaded rack with three CTP2056 systems must structurally support at least 100 lb (46 kg).
- An optional mounting kit is available for midchassis mounting. Contact your Juniper Networks sales representative for more information.

Related Documentation

- CTP2000 Rack Requirements on page 37
- CTP2000 Space Requirements on page 38
- CTP2000 Rack Installation on page 38

CTP2000 Space Requirements

If you use an enclosed rack for the device, ensure that there is a minimum of 3 in. of clearance between the inner side wall and the system. This clearance space ensures adequate air flow.

Related Documentation

- CTP2000 Rack Requirements on page 37
- CTP2000 Mechanical Requirements on page 37
- CTP2000 Rack Installation on page 38

CTP2000 Rack Installation

To confirm proper equipment rack installation, verify the following:

- Racks are installed and electrically grounded according to manufacturer instructions.
- Equipment racks are anchored to the floor and, when possible, anchored to the ceiling as well.
- Equipment rack installations comply with applicable local, state, and national codes.

Related Documentation

- CTP2000 Mechanical Requirements on page 37
- CTP2000 Rack Requirements on page 37
- CTP2000 Space Requirements on page 38
- Special Guidelines for Installing CTP2056 Chassis in a Rack on page 68

CTP Cabling Recommendations

We suggest that you comply with the following recommendations:

- Ensure that cable distance and rate limits meet IEEE-recommended maximum speeds and distances for signaling purposes. For information about attenuation and power loss in optical fiber cables see:
 - ANSI T1.646a-1997 Telecommunications – Broadband ISDN - Physical Layer Specification for User-Network Interfaces Including DS1/ATM (1997)
 - ANSI T1.646-1995 Telecommunications – Broadband ISDN - Physical Layer Specification for User-Network Interfaces Including DS1/ATM (1995)
- Ensure that power cables deliver sufficient power to the device.
- Attach laser fiber connectors only to Class 1 laser devices in accordance with IEC 60825-1, Safety of Laser Products - Part 1.
- Route cables so that they do not restrict ventilation or airflow.
- Route cables so that modules and field-replaceable units are easily accessible.
- Route cables in a logical direction to prevent loss of connectivity to other equipment in the rack, associated equipment in adjacent racks, or to the backbone network.
- Consider using cable-management brackets to keep network cables untangled and orderly and to prevent cables from hindering access to other slots.

For additional cable recommendations, consult the document *GR-63–CORE: Network Equipment Building System (NEBS) Requirements: Physical Protection, Issue 2, April 2002*.

CHAPTER 6

Cable and Pinout Specifications

- CTP2000 4WE&M Interface Connector Pinouts on page 41
- CTP2000 FXS and FXO Interface Module Cables and Pinouts on page 43
- CTP2000 Series Console Cable Pinouts on page 47
- CTP Fast Ethernet and Power Cables on page 48

CTP2000 4WE&M Interface Connector Pinouts

- CTP2000 4WE&M RTM Connector A Pinouts on page 41
- CTP2000 4WE&M Connector B Pinouts on page 42

CTP2000 4WE&M RTM Connector A Pinouts

See Table 11 on page 41 for connector A pinout information. See “CTP2000 4WE&M Interface Module” on page 13 for signal definitions.

Table 11: CTP2000 4WE&M RTM Pinouts—Connector A

Connector A			
Pin	Signal	Signal	Pin
1	Port 0 R	Port 0 T	26
2	Port 0 R1	Port 0 T1	27
3	Port 0 SG	Port 0 E	28
4	Port 0 SB	Port 0 M	29
5	Port 1 R	Port 1 T	30
6	Port 2 R1	Port 1 T1	31
7	Port 2 SG	Port 1 E	32
8	Port 2 SB	Port 1 M	33
9	Port 2 R	Port 2 T	34

Table 11: CTP2000 4WE&M RTM Pinouts—Connector A (continued)

Connector A			
Pin	Signal	Signal	Pin
10	Port 2 R1	Port 2 T1	35
11	Port 2 SG	Port 2 E	36
12	Port 2 SB	Port 2M	37
13	Port 3 R	Port 3 T	38
14	Port 3 R1	Port 3 T1	39
15	Port 3 SG	Port 3 E	40
16	Port 3 SB	Port 3 M	41
25	GND	GND	50

CTP2000 4WE&M Connector B Pinouts

See Table 12 on page 42 for connector B pinout information. See “CTP2000 4WE&M Interface Module” on page 13 for signal definitions.

Table 12: CTP2000 4WE&M RTM Pinouts—Connector B

Connector B			
PIN	Signal	Signal	PIN
1	Port 4 R	Port 4 T	26
2	Port 4 R1	Port 4 T1	27
3	Port 4 SG	Port 4 E	28
4	Port 4 SB	Port 4 M	29
5	Port 5 R	Port 5 T	30
6	Port 5 R1	Port 5 T1	31
7	Port 5 SG	Port 5 E	32
8	Port 5 SB	Port 5 M	33
9	Port 6 R	Port 6 T	34
10	Port 6 R1	Port 6 T1	35

Table 12: CTP2000 4WE&M RTM Pinouts—Connector B (*continued*)

Connector B			
PIN	Signal	Signal	PIN
11	Port 6 SG	Port 6 E	36
12	Port 6 SB	Port 6M	37
13	Port 7 R	Port 7 T	38
14	Port 7 R1	Port 7 T1	39
15	Port 7 SG	Port 7 E	40
16	Port 7 SB	Port 7 M	41
25	GND	GND	50

**Related
Documentation**

- CTP2000 4WE&M Interface Module on page 13
- CTP2000 FXS and FXO Interface Module Cables and Pinouts on page 43
- CTP2000 Series Console Cable Pinouts on page 47

CTP2000 FXS and FXO Interface Module Cables and Pinouts

- Required Cables on page 43
- RTM Pinout Locations on page 43
- FXS Connector Pinouts on page 44
- FXO Connector Pinouts on page 45


Required Cables

The CTP2000 2W-FXS and 2W-FXO interface modules require the use of double-shielded cables (copper braid plus aluminum mylar foil) to ensure EMI Compliance.

RTM Pinout Locations

Figure 26 on page 44 shows the pinout locations for both the CTP2000 2W-FXS and 2W-FXO interface modules.

Figure 26: RTM Pinouts for CTP2000 2W-FXS and 2W-FXO Interface Modules

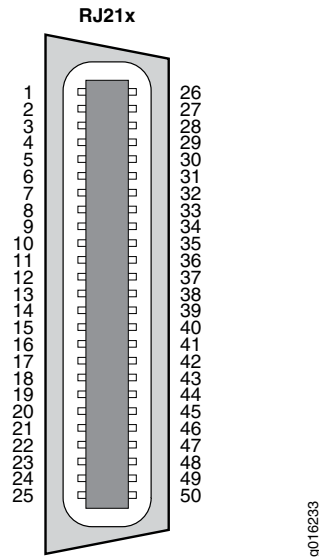

FXS Connector Pinouts

The RTM for the CTP2000 2W-FXS interface module uses a RJ-21 25-pair Telco connector labeled A. The A connector has 24 FXS ports.

FXS R is connected to FXO T; FXS T is connected to FXO T.

Table 13 on page 44 lists the RTM pinouts for the FXS module.

Table 13: CTP2000 FXS Connector Pinouts on the RTM

Pin	Signal	Signal	Pin
1	Port 0 R	Port 0 T	26
2	Port 1 R	Port 1 T	27
3	Port 2 R	Port 2 T	28
4	Port 3 R	Port 3 T	29
5	Port 4 R	Port 4 T	30
6	Port 5 R	Port 5 T	31
7	Port 6 R	Port 6 T	32
8	Port 7 R	Port 7 T	33
9	Port 8 R	Port 8 T	34
10	Port 9 R	Port 9 T	35

Table 13: CTP2000 FXS Connector Pinouts on the RTM (continued)

Pin	Signal	Signal	Pin
11	Port 10 R	Port 10 T	36
12	Port 11 R	Port 11 T	37
13	Port 12 R	Port 12 T	38
14	Port 13 R	Port 13 T	39
15	Port 14 R	Port 14 T	40
16	Port 15 R	Port 15 T	41
17	Port 16 R	Port 16 T	42
18	Port 17 R	Port 17 T	43
19	Port 18 R	Port 18 T	44
20	Port 19 R	Port 19 T	45
21	Port 20 R	Port 20 T	46
22	Port 21 R	Port 21 T	47
23	Port 22 R	Port 22 T	48
24	Port 23 R	Port 23 T	49

FXO Connector Pinouts

The RTM for the CTP2000 2W-FXO interface module uses a RJ-21 25-pair Telco connector labeled A. The A connector has 24 FXS ports.

FXO T is connected to FXS R; FXO R is connected to FXS T.

Table 14 on page 45 lists the RTM pinouts for the FXO module.

Table 14: CTP2000 FXO Connector Pinouts on the RTM

Pin	Signal	Signal	Pin
1	Port 0 T	Port 0 R	26
3	Port 1 T	Port 1 R	28
5	Port 2 T	Port 2 R	30
7	Port 3 T	Port 3 R	32

Table 14: CTP2000 FXO Connector Pinouts on the RTM (*continued*)

Pin	Signal	Signal	Pin
9	Port 4 T	Port 4 R	34
11	Port 5 T	Port 5 R	36
13	Port 6 T	Port 6 R	38
15	Port 7 T	Port 7 R	40
17	Port 8 T	Port 8 R	42
19	Port 9 T	Port 9 R	44
21	Port 10 T	Port 10 R	46
23	Port 11 T	Port 11 R	48

**Related
Documentation**

- CTP2000 2W-FXS and 2W-FXO Interface Modules on page 18
- CTP2000 4WE&M Interface Connector Pinouts on page 41
- CTP2000 Series Console Cable Pinouts on page 47
- CTP Fast Ethernet and Power Cables on page 48

CTP2000 Series Console Cable Pinouts

CTP2008, CTP2024, and CTP2056 devices use an RJ-45 connected to the **COM2** port. This cable must be connected during the first boot process. Use a shielded cable for the **COM2** port on the CTP2056 device. Figure 27 on page 47 displays the console cable pin configurations for CTP2000 series devices. On the left is the RJ-45 connector, and on the right is the DB-9 connector with the pin numbering indicated.

The console connections are configured to the following parameters:

- Speed: 9600 bps
- Data bits: 8
- Stop bits: 1
- Flow control: Xon/Xoff
- Parity: none

Figure 27: CTP2000 Series Console Cable Pin Configurations

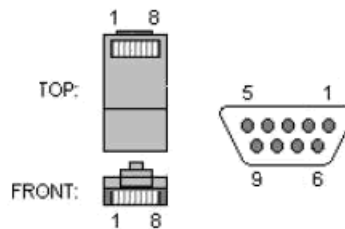


Table 15 on page 47 lists console cable pinouts for CTP2000 Series devices based on the pin configurations.

Table 15: CTP2000 Series Console Cable Pinouts

CTP RJ-45 Pin	Console DB-9 Pin
1 RTS	8 CTS
2 DTR	6 DSR
3 GND	5 GND
4 TXD	2 RXD
5 RXD	3 TXD
6 (tied to pin 7) DCD	1 DCD
7 DSR	4 DTR
8 CTS	7 RTS

- Related Documentation**
- CTP Fast Ethernet and Power Cables on page 48

CTP Fast Ethernet and Power Cables

- Fast Ethernet Cables on page 48
- DC Power Cables on page 48

Fast Ethernet Cables

The Ethernet connection is a standard RJ-45 connector. Typically, a straight-through cable is used to connect to a switch, and a crossover cable is used to connect to a router.

DC Power Cables

For CTP chassis with DC power options, we recommend 18-AWG power cables.

PART 3

Safety

- General Safety Guidelines and Warnings on page 51
- Module Installation Safety Guidelines and Warnings on page 53
- Hardware Compliance on page 55

CHAPTER 7

General Safety Guidelines and Warnings

- CTP Safety Guidelines and Warnings on page 51

CTP Safety Guidelines and Warnings

For your safety, before installing the device, review all safety warnings in this section.



WARNING: The recommended maximum ambient temperature is 40 °C (104° F). For safe operation take into consideration the internal temperature within the rack.



WARNING: Install equipment in the rack from the bottom upward. Doing this helps maintain the stability of the rack and reduces the chance of the rack tipping over.



WARNING: Do not insert any metal object, such as a screwdriver, into an open slot or the backplane. Doing so can cause electric shock and serious burns.



WARNING: For the larger CTP series devices, three people are required to install the device in a rack: two to lift the device into position and one to screw it to the rack.



WARNING: Connect the device or rack to ground (earth), and ensure that a reliable grounding path is maintained in the rack.



WARNING: Do not work on the device or connect or disconnect cables during lightning activity.



.....
WARNING: Be sure that circuit breakers for the power source are in the OFF position before attaching power cables.
.....



.....
WARNING: Before servicing the device, turn off the power.
.....



.....
WARNING: Remove jewelry (including rings, necklaces, and watches) before working on equipment that is connected to power lines. Metal objects heat up when connected to power and ground and can cause serious burns or become welded to the terminals.
.....



.....
CAUTION: Evaluate the overall loading of the branch circuit before you install any equipment into a rack.
.....

**Related
Documentation**

- Federal Communications Commission (FCC) Statement on page 57
- FCC Requirements for Consumer Products on page 57
- Food and Drug Administration, Center for Devices and Radiological Health on page 58
- Compliance with Canadian Regulations on page 58
- Before You Install a CTP Platform on page 35

CHAPTER 8

Module Installation Safety Guidelines and Warnings

- Safety Guidelines and Warnings for Installing CTP Modules on page 53

Safety Guidelines and Warnings for Installing CTP Modules

Before and during the installation process, observe the following warnings:



WARNING: Do not work on the device or connect or disconnect cables during lightning activity.



WARNING: Be sure circuit breakers for the power source are in the OFF position before attaching power cables.



WARNING: Remove jewelry (including rings, necklaces, and watches) before working on equipment that is connected to power lines. Metal objects heat up when connected to power and ground and can cause serious burns or become welded to the terminals.



WARNING: Do not insert any metal object, such as a screwdriver, into an open slot or the midplane. Doing so can cause electric shock and serious burns.



WARNING: Never attempt to repair parts of modules yourself. Only trained customer service personnel are authorized to service parts. Call Juniper Networks Customer Service to make arrangements to return defective modules for repair.

**Related
Documentation**

- Required Tools and Safety Items for Installing CTP Modules on page 72
- Federal Communications Commission (FCC) Statement on page 57
- FCC Requirements for Consumer Products on page 57
- Food and Drug Administration, Center for Devices and Radiological Health on page 58
- Compliance with Canadian Regulations on page 58

CHAPTER 9

Hardware Compliance

- Declaration of Conformity for CTP2000 Platforms on page 55
- Federal Communications Commission (FCC) Statement on page 57
- FCC Requirements for Consumer Products on page 57
- Food and Drug Administration, Center for Devices and Radiological Health on page 58
- Compliance with Canadian Regulations on page 58

Declaration of Conformity for CTP2000 Platforms

Figure 28 on page 56 shows the Declaration of Conformity for the CTP2000 platforms.

Figure 28: CTP2000 Declaration of Conformity



Declaration of Conformity

Juniper Networks, Inc.
10 Technology Park Drive
Westford, MA 01886 USA

declares that under our sole responsibility the product(s)

Circuit-to-Packet Network Device
Model CTP2000 Series

are in conformity with the provisions of the following EC Directives, including all amendments,
and with national legislation implementing these directives:

Low Voltage Directive 73/23/EEC
EMC Directive 89/336/EEC

and that the following harmonized standards have been applied

EN 60950-1:2001+A11
EN 60825-1:1994+A1+A2

EN 300 386 V1.3.3:2005
EN 55024:1998 +A1 + A2
EN 55022:1998+A1(2000)+A2(2003) Class A

A handwritten signature in black ink that reads "Susanne Delisle".

Place
Westford, MA, USA

Signature
Susanne Delisle

Date
06/20/2007

- Related Documentation**
- CTP2008 Platform Specifications and Certification on page 29
 - CTP2024 Platform Specifications and Certification on page 31

- CTP2056 Platform Specifications and Certification on page 32

Federal Communications Commission (FCC) Statement

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at their own expense.

This equipment is designed for use with properly shielded and terminated cables. Refer to the installation sections of this manual before operation.

Reference: CFR 47, Part 15J, Sect 15.105 April 18, 1989

Caution: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Related Documentation

- FCC Requirements for Consumer Products on page 57
- Food and Drug Administration, Center for Devices and Radiological Health on page 58
- Compliance with Canadian Regulations on page 58

FCC Requirements for Consumer Products

This equipment complies with FCC rules, Part 68. On the back side of this equipment is a label that contains, among other information, the FCC Registration Number and Ringer Equivalence Number (REN) for this equipment. If requested, provide this information to your telephone company.

If this equipment causes harm to the telephone network, the telephone company may discontinue your service temporarily. If possible, they will notify you in advance. But if advance notice is not practical, you will be notified as soon as possible. You will be advised of your right to file a complaint with the FCC.

Your telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the proper operation of your equipment. If they do, you will be given advance notice to give you an opportunity to maintain uninterrupted service.

If you experience trouble with this equipment, please contact the manufacturer for warranty/repair information. The telephone company may ask that you disconnect this equipment from the network until the problem has been corrected or until you are sure that the equipment is not malfunctioning.

Related Documentation

- Federal Communications Commission (FCC) Statement on page 57
- Food and Drug Administration, Center for Devices and Radiological Health on page 58

- Compliance with Canadian Regulations on page 58

Food and Drug Administration, Center for Devices and Radiological Health

This equipment complies with 21 CFR 1040.10 and 1040.11 for the safe use of lasers.

Related Documentation

- Federal Communications Commission (FCC) Statement on page 57
- FCC Requirements for Consumer Products on page 57
- Compliance with Canadian Regulations on page 58

Compliance with Canadian Regulations

- Industry Canada Notice on page 58
- Canadian Department of Communications Explanatory Notes on page 59

Industry Canada Notice

- Industry Canada Notice CS-03 on page 58
- Avis CS-03 d'Industrie Canada on page 59

Industry Canada Notice CS-03

The Industry Canada label identifies certified equipment. This certification means that the equipment meets certain telecommunications network protective, operation and safety requirements as prescribed in the appropriate Terminal Equipment Technical Requirements document(s). The Department does not guarantee that the equipment will operate to the user's satisfaction. Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be coordinated by a representative designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

Caution: Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

Notice: The Ringer Equivalence Number (REN) assigned to each terminal device provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed 5.

Avis CS-03 d'Industrie Canada

L'étiquette du ministère des Communications du Canada indique que l'appareillage est certifié, c'est-à-dire qu'il respecte certaines exigences de sécurité et de fonctionnement visant les réseaux de télécommunications. Le ministère ne garantit pas que l'appareillage fonctionnera à la satisfaction de l'utilisateur. Avant d'installer l'appareillage, s'assurer qu'il peut être branché aux installations du service de télécommunications local. L'appareillage doit aussi être raccordé selon des méthodes acceptées. Le client doit toutefois prendre note qu'une telle installation n'assure pas un service parfait en tout temps.

Les réparations de l'appareillage certifié devraient être confiées à un service d'entretien canadien désigné par le fournisseur. En cas de réparation ou de modification effectuées par l'utilisateur ou de mauvais fonctionnement de l'appareillage, le service de télécommunications peut demander le débranchement de l'appareillage.

Pour leur propre sécurité, les utilisateurs devraient s'assurer que les mises à la terre des lignes de distribution d'électricité, des lignes téléphoniques et de la tuyauterie métallique interne sont raccordées ensemble. Cette mesure de sécurité est particulièrement importante en milieu rural.

Attention: Les utilisateurs ne doivent pas procéder à ces raccordements eux-mêmes mais doivent plutôt faire appel aux pouvoirs de réglementation en cause ou à un électricien, selon le cas.

Avis: Veuillez prendre note que pour tout appareillage supportant des lignes de type "loopstart," l'indice d'équivalence de la sonnerie (IES) assigné à chaque dispositif terminal indique le nombre maximal de terminaux qui peuvent être raccordés à une interface. La terminaison d'une interface téléphonique peut consister en une combinaison de quelques dispositifs, à la seule condition que la somme d'indices d'équivalence de la sonnerie de tous les dispositifs n'excède pas 5. Le REN figure sur l'étiquette "FCC Rules Part 68" située sur le support du module ou à l'arrière de l'unité.

Canadian Department of Communications Explanatory Notes

- DOC Explanatory Notes: Equipment Attachment Limitations on page 59
- Notes explicatives du ministère des Communications: limites visant les accessoires on page 60

DOC Explanatory Notes: Equipment Attachment Limitations

The Canadian Department of Communications label identifies certified equipment. This certification meets certain telecommunication network protective, operational and safety requirements. The department does not guarantee that the equipment will operate to the users satisfaction.

Before installing the equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. In some cases, the company's inside wiring associated with a single line individual service may be extended by means of a certified connector assembly (telephone extension cord). The customer should be aware that compliance with the above condition may not prevent degradation of service in some situations.

Repairs to certified equipment should be made by an authorized Canadian maintenance facility designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

Caution: Users should not attempt to make such connections themselves, but should contact the appropriate electrical inspection authority, or electrician, as appropriate.

Notes explicatives du ministère des Communications: limites visant les accessoires

L'étiquette du ministère des Communications du Canada indique que l'appareillage est certifié, c'est-à-dire qu'il respecte certaines exigences de sécurité et de fonctionnement visant les réseaux de télécommunications. Le ministère ne garantit pas que l'appareillage fonctionnera à la satisfaction de l'utilisateur.

Avant d'installer l'appareillage, s'assurer qu'il peut être branché aux installations du service de télécommunications local. L'appareillage doit aussi être raccordé selon des méthodes acceptées. Dans certains cas, le câblage interne du service de télécommunications utilisé pour une ligne individuelle peut être allongé au moyen d'un connecteur certifié (prolongateur téléphonique). Le client doit toutefois prendre note qu'une telle installation n'assure pas un service parfait en tout temps.

Les réparations de l'appareillage certifié devraient être confiées à un service d'entretien canadien désigné par le fournisseur. En cas de réparation ou de modification effectuées par l'utilisateur ou de mauvais fonctionnement de l'appareillage, le service de télécommunications peut demander le débranchement de l'appareillage.

Pour leur propre sécurité, les utilisateurs devraient s'assurer que les mises à la terre des lignes de distribution d'électricité, des lignes téléphoniques et de la tuyauterie métallique interne sont raccordées ensemble. Cette mesure de sécurité est particulièrement importante en milieu rural.

Attention: Les utilisateurs ne doivent pas procéder à ces raccordements eux-mêmes mais doivent plutôt faire appel aux pouvoirs de réglementation en cause ou à un électricien, selon le cas.

**Related
Documentation**

- Federal Communications Commission (FCC) Statement on page 57
- FCC Requirements for Consumer Products on page 57
- Food and Drug Administration, Center for Devices and Radiological Health on page 58

PART 4

Installation

- Unpacking and Inspecting the CTP Platform on page 63
- Installing the Chassis on page 67
- Installing Modules on page 71
- Installing and Removing SFPs in a CTP Module on page 77
- Upgrading Components for Memory Upgrades on page 81
- Cabling on page 83
- Powering On on page 89

CHAPTER 10

Unpacking and Inspecting the CTP Platform

- Before You Unpack the CTP Platform on page 63
- Unpacking the CTP Device on page 63
- Inspecting Platform Components and Accessories on page 64
- If You Detect or Suspect Damage on page 64
- Contacting Juniper Networks on page 65

Before You Unpack the CTP Platform

Before you begin unpacking the device, be sure you have the following tools:

- No. 2 Phillips screwdriver
- Utility knife
- Mechanical lift, or at least two people to assist in lifting

Related Documentation

- Unpacking the CTP Device on page 63
- Inspecting Platform Components and Accessories on page 64
- If You Detect or Suspect Damage on page 64
- Contacting Juniper Networks on page 65

Unpacking the CTP Device

Depending on the device, it may be delivered boxed, bolted, and strapped to a skid. For your convenience, we recommend that you unpack the device in the location where you want to install it.



WARNING: For the larger CTP series devices, three people are required to install the device in a rack: two to lift the device into position and one to screw it to the rack.

To unpack the device:

1. Cut the two straps that secure the carton to the skid, open the carton from the top, and remove the box of accessories that sits on top of the device.
2. Unlock the four plastic clips that hold the box to the skid by squeezing them in their center and pulling out, and then lift the carton off the device.
3. Remove the three screws that attach each of the two L-brackets to the device.
4. To avoid scratching the device when removing it from the skid, detach one of the L-brackets from the skid by removing the three screws.

**Related
Documentation**

- Before You Unpack the CTP Platform on page 63
- Inspecting Platform Components and Accessories on page 64
- If You Detect or Suspect Damage on page 64
- Contacting Juniper Networks on page 65

Inspecting Platform Components and Accessories

After you remove the equipment from the shipping containers:

- Confirm the contents of each container.
- Inspect all external surfaces and external connectors for visible signs of damage.
- Inspect all accessories shipped with each unit.
- Document any damage noted during your inspection.
- Confirm that the platform has the correct number and type of modules for your ordered configuration.

**Related
Documentation**

- Before You Unpack the CTP Platform on page 63
- Unpacking the CTP Device on page 63
- If You Detect or Suspect Damage on page 64
- Contacting Juniper Networks on page 65

If You Detect or Suspect Damage

If you detect or suspect damage to any equipment:

- Contact the shipper responsible for delivery, and formally report the damage.
- Contact your Juniper Networks sales representative or reseller.

**Related
Documentation**

- Before You Unpack the CTP Platform on page 63
- Unpacking the CTP Device on page 63

- Inspecting Platform Components and Accessories on page 64
- Contacting Juniper Networks on page 65

Contacting Juniper Networks

Please contact Juniper Networks at 1-888-314-JTAC (from the United States, Canada, or Mexico) or 1-408-745-9500 (from elsewhere), or contact your sales representative if you have any questions or concerns. See “Contacting Customer Support” on page 117 for complete contact information.

Related Documentation

- Before You Unpack the CTP Platform on page 63
- Unpacking the CTP Device on page 63
- Inspecting Platform Components and Accessories on page 64
- If You Detect or Suspect Damage on page 64

CHAPTER 11

Installing the Chassis

- Before You Install the CTP2000 Platform on page 67
- Installing the CTP2000 Platform in Freestanding Mode on page 67
- Special Guidelines for Installing CTP2056 Chassis in a Rack on page 68
- Installing the CTP2000 Platform in a Rack on page 68

Before You Install the CTP2000 Platform

Before installing the platform:

- Refer to the platform specifications for the particular CTP model or series.
- Have a plan for installing the device that takes into consideration future expansion.
- Have the tools and accessories needed to complete the installation.
- Read and understand the clearance requirements for the front and back of the chassis for cable routing and other unit access. See “CTP2000 Environmental Requirements” on page 35 for more information.
- Read and understand the clearance requirements for the top and bottom of the chassis to ensure adequate ventilation.
- Prepare the equipment racks by measuring and marking space for each device and plenum you plan to install.

Related Documentation

- Installing the CTP2000 Platform in Freestanding Mode on page 67
- Installing the CTP2000 Platform in a Rack on page 68

Installing the CTP2000 Platform in Freestanding Mode

When installing the device on a table top or in any other freestanding mode, be sure to leave enough space around the device for adequate ventilation. Position the chassis with easy access to the connections that it needs for power, local communications, and remote communications.



.....
WARNING: At least two people are required to lift the device. Three people are required for the heavier CTP platforms.
.....



.....
CAUTION: To prevent electrostatic damage to the device and its components, make sure that persons handling the device wear an antistatic device.
.....

**Related
Documentation**

- Before You Install the CTP2000 Platform on page 67
- Installing the CTP2000 Platform in a Rack on page 68
- Cabling the CTP2000 Platform Overview on page 83

Special Guidelines for Installing CTP2056 Chassis in a Rack

Before installing the CTP2056 platform in a rack, consider the following guidelines:

- You can install up to four CTP2056 chassis in a single 7-ft. (2.1-m) rack. Installing multiple devices in a single rack enables you to maximize your available space.
- Install the CTP2056 chassis on the bottom of the rack. Mount lighter devices higher in the rack.

**Related
Documentation**

- CTP2000 Rack Requirements on page 37
- Installing the CTP2000 Platform in a Rack on page 68

Installing the CTP2000 Platform in a Rack

To install the CTP platform in a rack, you need:

- Phillips screwdriver
- Four 10-32 x 3/8 Phillips screws for each device to be installed

Follow these guidelines:

1. Following your installation plan, use a tape measure and marking pen to measure and mark space on each equipment rack for each platform component. For horizontal spacing, follow Network Equipment Building System (NEBS) requirements.
2. With one person standing on the left side of the device and another standing on the right side, lift the device into the rack.
3. Position the device in its designated location in the equipment rack. Make sure the holes of the mounting brackets align evenly with the holes of the equipment rack on both sides.

4. Starting at the bottom of the device, secure the device in the equipment rack by using the 10-32 x 3/8 Phillips screws. Have a third person do this for the larger and heavier CTP chassis.
5. Connect the necessary cables. (See "Cabling the CTP2000 Platform Overview" on page 83 for instructions about installing the cables.)

**Related
Documentation**

- Before You Install the CTP2000 Platform on page 67
- Installing the CTP2000 Platform in Freestanding Mode on page 67
- Cabling the CTP2000 Platform Overview on page 83

CHAPTER 12

Installing Modules

- CTP2000 Modules Installation Overview on page 71
- Protecting CTP2000 Modules and Slots on page 71
- Required Tools and Safety Items for Installing CTP Modules on page 72
- Installing a CTP Interface Module, Processor Module, or Clock Module on page 73
- Removing a CTP Interface Module, Processor Module, or Clock Module on page 73
- Installing or Removing a CTP2000 Series CompactFlash Card on page 74
- Installing a PMC on CTP2000 Platforms on page 75

CTP2000 Modules Installation Overview

In CTP2000 platforms, you can install interface modules in the front and rear of the device. CTP2000 rear transition modules (RTMs) reside in the rear of the device.

Related Documentation

- Protecting CTP2000 Modules and Slots on page 71
- Required Tools and Safety Items for Installing CTP Modules on page 72
- Safety Guidelines and Warnings for Installing CTP Modules on page 53
- Installing a CTP Interface Module, Processor Module, or Clock Module on page 73
- Installing or Removing a CTP2000 Series CompactFlash Card on page 74
- Installing a PMC on CTP2000 Platforms on page 75
- Installing SFPs in a CTP2000 Module on page 77

Protecting CTP2000 Modules and Slots

To prevent damage from electrostatic discharge, wear an antistatic wrist strap, and connect it to one of the jacks when handling components. The CTP2056 has an ESD (electrostatic discharge) grounding jack located in the rear lower-left corner of the chassis near the power switch. There are no ESD jacks on the other CTP2000 platforms, so you must use another grounding device.

To protect the modules, components, and slots when installing components, observe the following guidelines:



CAUTION: When handling components, use an antistatic wrist strap connected to one of the device's ESD grounding jacks or to another grounding device. This action helps to protect the module from damage by electrostatic discharge.



CAUTION: Always handle a module by its edges. Do not touch the components, pins, leads, or solder connections.



CAUTION: If you meet strong resistance when attempting to seat a module using the ejectors, remove it from the chassis and confirm that the slot is designed to hold the module. Also, be sure that you have aligned the left and right edges in the correct matching module guides.



CAUTION: Be sure to cover every empty slot with a blank filler panel to protect the device from dust or other foreign substances and to ensure proper device cooling.



CAUTION: Do not discard the antistatic bag. When a module is not in use, store it in an antistatic bag.

**Related
Documentation**

- Safety Guidelines and Warnings for Installing CTP Modules on page 53
- Required Tools and Safety Items for Installing CTP Modules on page 72

Required Tools and Safety Items for Installing CTP Modules

You need the following tools to install a CTP module:

- Phillips screwdriver
- Flathead screwdriver
- ESD wrist strap or other grounding device

**Related
Documentation**

- Safety Guidelines and Warnings for Installing CTP Modules on page 53
- Installing a CTP Interface Module, Processor Module, or Clock Module on page 73

Installing a CTP Interface Module, Processor Module, or Clock Module

To install a CTP module:

1. Ground yourself by using an antistatic wrist strap or other device, and connect it to one of the ESD grounding jacks, if available, or another grounding device.
2. Choose the slot where you want to insert the module.
3. With a Phillips screwdriver, loosen the screws that secure the blank filler panel covering the empty chassis slot, if present, and remove the filler panel.
4. Remove the module from its antistatic bag, being careful not to touch module components, pins, leads, or solder connections.
5. Verify that the ejectors are in the open position (facing outward).
6. Guide the module into the chassis by placing it between the guides of the selected slot and pushing the module until it stops.

The module stops sliding when the ejectors make contact with the chassis.



CAUTION: If you meet strong resistance when attempting to seat the module using the ejectors, remove it from the chassis, and confirm that the slot is designed to hold the component. Also, be sure that you have aligned the left and right edges in the correct matching tracks.

7. Insert the module into the midplane by simultaneously pressing both ejectors inward and exerting forward pressure on the module. The small red release buttons should click into place.
8. Tighten the module's captive screws using a Phillips screwdriver.



NOTE: Tighten the captive screws completely before installing an adjacent module so that proper electromagnetic interference (EMI) gasket compression occurs. Failure to do this can make it difficult to install adjacent modules.

9. Go to [Cabling a CTP Interface Module](#).

Related Documentation

- [Removing a CTP Interface Module, Processor Module, or Clock Module on page 73](#)

Removing a CTP Interface Module, Processor Module, or Clock Module



NOTE: We recommend that you issue the `slot disable` command from the CLI before removing a line module.



CAUTION: If you do not use the **halt** command before powering down the CTP device, the CompactFlash card might become corrupted.

To remove a CTP module:

1. Issue the **halt** command.
2. Ground yourself by using an antistatic wrist strap or other device, and connect it to an ESD grounding jack, if available, or another grounding device.
3. Use a Philips screwdriver to loosen the captive screws located at the top and bottom of the module panel.
4. If the module has ejector handles, press the red release buttons, and pull the ejector handles outward to the open position.
5. Carefully slide the module out of the chassis.
6. Place the module in its antistatic bag, being careful not to touch module components, pins, leads or solder connections.
7. Cover the empty chassis slot with a blank filler panel, and tighten the filler panel's captive screws using a Phillips screwdriver. Turn both screws several times before tightening them completely.

**Related
Documentation**


- Installing a CTP Interface Module, Processor Module, or Clock Module on page 73

Installing or Removing a CTP2000 Series CompactFlash Card

To remove or install the CompactFlash card for the CTP2000 series:

1. Power off the unit.
2. Remove the processor RTM by unscrewing the retaining screws and pushing the extractors outward with the latching buttons depressed.
3. Remove the CompactFlash card retaining screw and nut. You can then remove or install the CompactFlash card in the flash socket (see Figure 29 on page 75).
4. Reinstall the CompactFlash card retaining screw and nut.
5. Reinstall the processor RTM into the chassis, and secure the retaining screws.

Figure 29: CompactFlash on the RTM

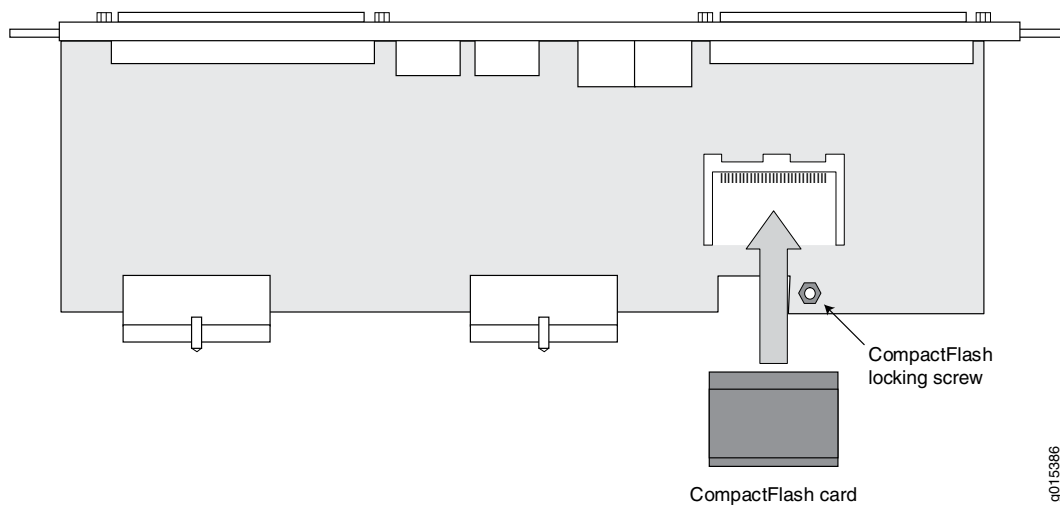


Related Documentation

- Installing a CTP Interface Module, Processor Module, or Clock Module on page 73

Installing a PMC on CTP2000 Platforms

The PCI mezzanine card (PMC) is mounted on the processor module and can be installed or replaced in the field. Figure 30 on page 75 displays the location of the PMC.

Figure 30: CTP2000 Platforms PMC Location

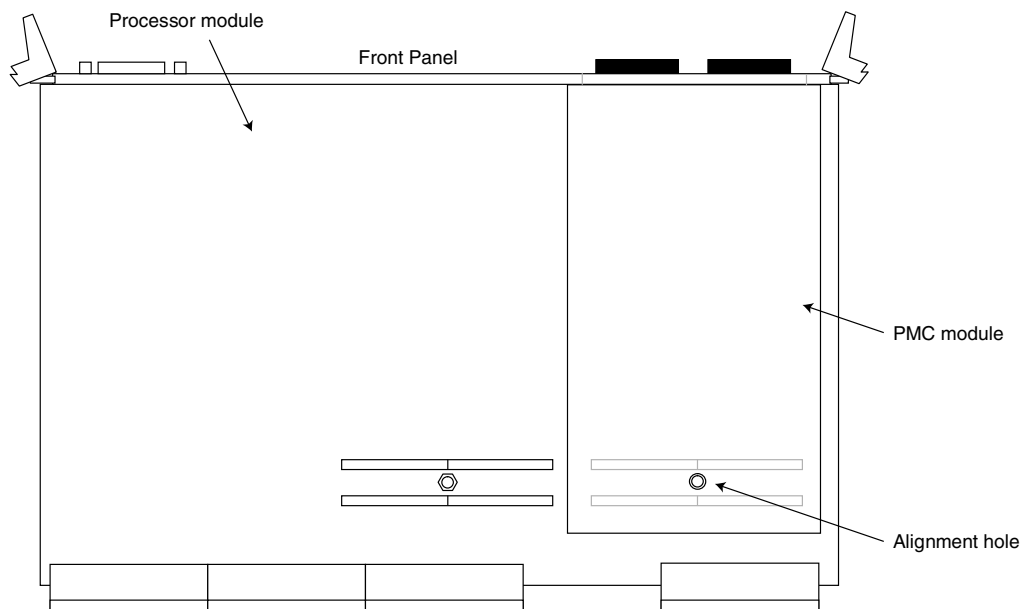

To install a PMC:

1. Confirm that the device is powered off.
2. Remove the RTM by unscrewing the retaining screws and pushing the extractors outward while depressing the latching buttons.
3. If a PMC was not previously installed, a shield may have been inserted in the PMC slot of the processor's front panel. Remove this shield by gently pushing it out from behind the panel.
4. The PMC has four screws. Two of the screws are secured to standoffs, and two are attached to the front assembly of the PMC. Remove the two screws secured to the standoff, leaving the standoff attached to the PMC. Remove the two screws on the front assembly located on the side with the standoffs. The front assembly should remain attached to the PMC hardware. Keep the screws for reattachment.
5. Align the PMC with the printed circuit board connectors toward the processor board and with the fiber connectors inserted through the processor's front panel. Align the alignment post on the processor module with the PMC's alignment hole.
6. Gently press the PMC into the processor module.
7. From the back of the processor module, use the four Phillips head screws to secure the two PMC standoff posts and PMC front assembly to the processor module.
8. Reinstall the processor RTM in the reverse procedure of removing it. Be sure that the screws and latching are secure

**Related
Documentation**

- Installing a CTP Interface Module, Processor Module, or Clock Module on page 73

Installing and Removing SFPs in a CTP Module

- Installing SFPs in a CTP2000 Module on page 77
- Removing SFPs in a CTP2000 Module on page 78

Installing SFPs in a CTP2000 Module


This section describes how to install small form-factor pluggable transceivers (SFPs) on interface modules that support these devices. In the current release, the CTP-FX2000GE-UPG supports SFPs.

You can replace the SFPs without disabling the interfaces or removing the module from the device.

To install SFPs:

1. Ground yourself by using an antistatic wrist strap or other device, and connect it to an ESD grounding jack.
2. Identify the following items on the SFP (Figure 31 on page 77):
 - The connection circuitry on the base
 - The cable connectors on the front (which are protected by a dust cover)

Figure 31: Representative SFP

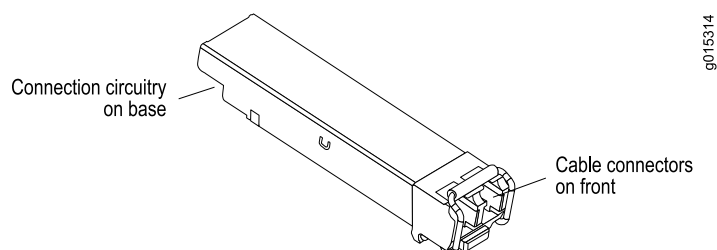

CAUTION: Be sure to position the SFP correctly before you install it.

3. Hold the SFP so that:

- The connection circuitry is adjacent to the module's faceplate.
 - The cable connectors are visible when you install the SFP.
4. Slide the SFP as far as you can into the module until the SFP clicks into place.
If the SFP does not slide smoothly into the module, make sure that the orientation of the SFP is correct.
 5. Gently pull the SFP to confirm that it is inserted correctly.
If the SFP comes out of the slot when you pull it, repeat Step 4.
 6. Remove the dust cover that protects the cable connectors.
 7. Connect the new cables to the SFP.

**Related
Documentation**

- Removing SFPs in a CTP2000 Module on page 78

Removing SFPs in a CTP2000 Module

This section describes how to replace small form-factor pluggable transceivers (SFPs) on interface modules that support these devices. You can replace the SFPs without disabling the interfaces or removing the module from the device.


To remove an SFP:

1. Obtain an antistatic container for the SFP you plan to remove.
2. Ground yourself by using an antistatic wrist strap or other device, and connect it to an ESD grounding jack.
3. Disconnect the cable from the SFP on the module.
4. Identify the release mechanism for the SFP.

Different SFPs use different release mechanisms. See Figure 32 on page 79 for possible release mechanisms, which include:

- A button that you press inward
- A ring that you press inward
- A bar that you pull sideways, then outward
- A tab that you pull sideways, then outward

Figure 32: Possible Release Mechanisms on the SFP

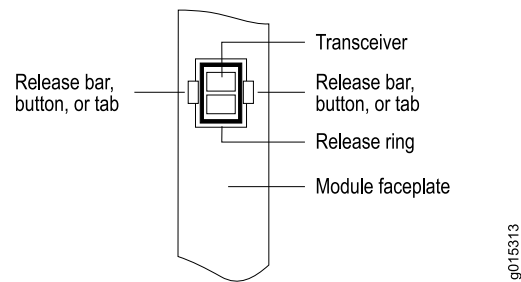

5. Release the SFP and pull it out of the slot.
6. Place the SFP into an antistatic bag.

**Related
Documentation**

- Installing SFPs in a CTP2000 Module on page 77

Upgrading Components for Memory Upgrades

- Upgrading CTP2000 Series Components for Memory Upgrades on page 81

Upgrading CTP2000 Series Components for Memory Upgrades

Certain CTP2000 Series components need to be upgraded when RAM memory is increased, as required by certain JUNOS version updates. The affected modules and other components can be:

- Processor module that contains the RAM card
- CompactFlash card
- Rear transition module (RTM)

To install a CTP module:

1. Ground yourself by using an antistatic wrist strap or other device, and connect it to one of the ESD grounding jacks, if available, or another grounding device.
2. Choose the slot where you want to insert the module.
3. With a Phillips screwdriver, loosen the screws that secure the blank filler panel covering the empty chassis slot, if present, and remove the filler panel.
4. Remove the module from its antistatic bag, being careful not to touch module components, pins, leads, or solder connections.
5. Verify that the ejectors are in the open position (facing outward).
6. Guide the module into the chassis by placing it between the guides of the selected slot and pushing the module until it stops.

The module stops sliding when the ejectors make contact with the chassis.



CAUTION: If you meet strong resistance when attempting to seat the module using the ejectors, remove it from the chassis, and confirm that the slot is designed to hold the component. Also, be sure that you have aligned the left and right edges in the correct matching tracks.

7. Insert the module into the midplane by simultaneously pressing both ejectors inward and exerting forward pressure on the module. The small red release buttons should click into place.
8. Tighten the module's captive screws using a Phillips screwdriver.



NOTE: Tighten the captive screws completely before installing an adjacent module so that proper electromagnetic interference (EMI) gasket compression occurs. Failure to do this can make it difficult to install adjacent modules.

9. Go to Cabling a CTP Interface Module.

**Related
Documentation**

- Removing a CTP Interface Module, Processor Module, or Clock Module on page 73

CHAPTER 15

Cabling

- Cabling the CTP2000 Platform Overview on page 83
- Required Tools, Wires, and Cables for the CTP2000 Platform on page 84
- CTP2000 Management Ports on page 84
- Cabling a CTP2000 Interface Module on page 85
- Cabling the CTP Platform for DC Power on page 85

Cabling the CTP2000 Platform Overview

Cabling the CTP platform requires the following main tasks:

1. Familiarize yourself with the module ports, and ensure that you have the cables and wires needed to complete each cabling procedure.
2. Read and understand all safety warnings. (See “CTP Safety Guidelines and Warnings” on page 51.)
3. Connect timing ports.
4. Connect grounding wires to the chassis.
5. Connect the power cables from the power source to the power supply.
6. Connect the interface modules to their appropriate network interface.

Related Documentation

- CTP Cabling Recommendations on page 38
- Required Tools, Wires, and Cables for the CTP2000 Platform on page 84
- CTP2000 Management Ports on page 84
- Cabling a CTP2000 Interface Module on page 85
- Cabling the CTP Platform for DC Power on page 85
- Setting Up Management Access on the CTP2000 Platform on page 95
- CTP2000 Console Port Setup on page 95

Required Tools, Wires, and Cables for the CTP2000 Platform

Cabling your device takes only a few minutes. You need the following items and the cables listed in Table 16 on page 84 for proper installation:

- 1/8-inch flathead screwdriver
- 3/8-inch wrench or 3/8-inch nut-driver
- No. 2 Phillips screwdriver
- Ground wires—We recommend a minimum of 18-AWG ground wire for AC and DC-powered versions, if applicable.
- Two #10 keps (supplied) to connect the ground (earth) wire to the ground terminal.
- Power module wiring—We recommend a minimum of 18-AWG wire for the device with a dual stud terminal lug with 5/8-inch spacing.

Consider the distance from the connection point and the configuration of the device when determining the size of wire used.

Table 16: Required Cables

Connection	Port and Cable Used
Management connection between the processor module and the LAN	One 10/100Base-T Ethernet management port with an RJ-45 connector.
Management connection between the processor module and a management console	One RS-232 port with a DB-9 connector for VT100 management access.
Direct connections to interface modules	Cables vary depending on module.

Related Documentation

- Cabling the CTP2000 Platform Overview on page 83
- Cabling a CTP2000 Interface Module on page 85

CTP2000 Management Ports

The management section of the CTP2000 series RTM has one port for management access, a 10/100Base-T Ethernet port that accepts an RJ-45 (male) connector, providing an out-of-band connection for LAN access through an SSH session or SNMP.

The management port is considered a data terminal equipment (DTE) interface. Direct connection to a terminal or PC (which also has a DTE interface) requires a crossover cable.

To connect the device to the network:

1. Insert an Ethernet cable (RJ-45) connector into the 10/100Base-T (RJ-45) port on the RTM until it clicks into place.

2. Connect the other end of the cable to the appropriate Ethernet network for an out-of-band connection.

- Related Documentation**
- Cabling a CTP2000 Interface Module on page 85
 - Cabling the CTP Platform for DC Power on page 85

Cabling a CTP2000 Interface Module

To install a cable in an interface module:

1. Ground yourself by using an antistatic wrist strap or other device, and connect it to an ESD grounding jack, if available, or another grounding device.
2. Remove the dust cover that protects the cable connectors.
3. Slide the cable as far as you can into the module until it clicks into place.
4. Gently pull the cable to confirm that it is inserted correctly.
5. Go on to “Cabling the CTP Platform for DC Power” on page 85.

- Related Documentation**
- Required Tools, Wires, and Cables for the CTP2000 Platform on page 84
 - CTP2000 Management Ports on page 84

Cabling the CTP Platform for DC Power

After you have correctly cabled the RTM for the CTP2000 Series, you must attach grounding and electrical wires before you turn the device on.

Three main tasks are involved:

1. Push the power switch to **OFF**. (The switch might have accidentally flipped to **ON** during shipping and installation.)
2. Connect the grounding wires to the chassis.



WARNING: Always connect the grounding wires first (before connecting the power cables) and disconnect them last when installing or servicing the device.

3. Connect the power cables to the power supplies.

Table 17 on page 85 identifies the cabling requirements.

Table 17: CTP Power Supply Cables and Wires Needed

Cable/Wire	From	To
One 18-AWG ground wire	PDU ground terminal	Termination ground

Table 17: CTP Power Supply Cables and Wires Needed (*continued*)

Cable/Wire	From	To
Two 18-AWG wire leads	PDU Power A –48 VDC and RTN leads	Appropriate leads on power source No.1
Two 18-AWG wire leads	PDU Power B –48 VDC and RTN leads	Appropriate leads on power source No.2

1. Task 1: Turning Off All CTP Platform Power on page 86
2. Task 2: Connecting the Grounding Cable to the CTP Platform (CTP2056 Platform Only) on page 86
3. Task 3: Connecting the Power Cables to the CTP2000 Platform on page 86

Task 1: Turning Off All CTP Platform Power

Push all device power switches to **OFF** to turn off the device.

Task 2: Connecting the Grounding Cable to the CTP Platform (CTP2056 Platform Only)

The CTP2056 device has a grounding stud located in the rear of the chassis, near the power inputs.

To ground the power unit:

1. Locate the grounding stud.
2. Remove the nuts and locking washers from the grounding stud.



NOTE: We recommend a minimum of 18-AWG ground wire with a ring-style terminal.

3. Place the grounding cable lead on the grounding stud, and tighten the nuts to secure the connection.
4. Connect the other end of the ground cable to the appropriate ground termination lead.



NOTE: When grounding the device, leave a service loop in the grounding cable to ensure that the grounding cable is the last cable to disconnect from the shelf if strain is placed on the electrical cables.

Task 3: Connecting the Power Cables to the CTP2000 Platform



WARNING: Before you begin this procedure, be sure the power source is turned off, the device is turned off, and proper grounding wires are attached.

To connect power cables to the device:

1. Be sure you have completed “Task 1: Turning Off All CTP Platform Power” on page 86 and “Task 2: Connecting the Grounding Cable to the CTP Platform (CTP2056 Platform Only)” on page 86.



WARNING: The wiring color code of the power cables depends on the color coding of the DC power source installed at your site. Color code standards for DC wiring do not exist. To ensure that the correct polarity is connected to the device power units, confirm the connection of the power cables to the + (positive) and – (negative) leads at the power source.

2. Remove the nuts and locking washers from the posts for the power input (A or B) using a small insulated adjustable wrench.
3. Place one negative (neutral) cable lead on the post labeled **–48 VDC**.
4. Replace the locking washers and nuts, and tighten the nuts to secure the connection.
5. Place the other cable lead on the post labeled **RTN**.
6. Replace the locking washer and nut, and firmly tighten the nut to secure the connection.
7. Attach the opposite end of Power A's wire leads to the appropriate leads on your power source.



NOTE: To provide redundancy, do not use the same power source for Power A and Power B leads.

8. Repeat Steps 1–7 for each power supply module in your configuration.

Related Documentation

- CTP2000 Management Ports on page 84
- Cabling a CTP2000 Interface Module on page 85

CHAPTER 16

Powering On

- Before You Power On the CTP2000 Platform on page 89
- Powering On the CTP2000 Platform on page 89
- Powering Off the CTP Platform on page 92

Before You Power On the CTP2000 Platform

Before powering on the device, make sure you complete the following tasks. See the appropriate sections for information about these tasks.



WARNING: Be sure the power source is turned off and the device is turned off before you perform the installation tasks.

- Installing a CTP Interface Module, Processor Module, or Clock Module on page 73
- Cabling a CTP2000 Interface Module on page 85
- Cabling the CTP Platform for DC Power on page 85
- Setting Up Management Access on the CTP2000 Platform on page 95

Related Documentation

- Powering On the CTP2000 Platform on page 89
- Powering Off the CTP Platform on page 92

Powering On the CTP2000 Platform



NOTE: In this procedure we assume that the device is already connected to a power source. If using a DC power supply, see “Cabling the CTP Platform for DC Power” on page 85.

For specifications on the electrical requirements for the device, see one of the following topics:

- CTP2008 Platform Specifications and Certification on page 29

- CTP2024 Platform Specifications and Certification on page 31
- CTP2056 Platform Specifications and Certification on page 32



CAUTION: Evaluate the overall loading of the branch circuit before you install any equipment into a rack.

To power on the device:

1. Verify that the power source is operational.
2. Inspect all grounding and power connections to the device chassis.
3. Confirm that all cable connections are secure.
4. Switch any available power switches to ON.
5. Monitor LEDs to verify that the device is booting properly.

The device goes through a boot process. When a prompt appears on the system console, the device is ready to be configured. If the system is new, the device boots to a first boot script. If the system is already operational, it boots to a login prompt.

The series of login prompts requires the following settings:

1. Default username (ctp) and password (ctp). (We recommend that you change the root password after entering the default.)
2. Supported protocol or protocols—(0) IPv4 only, (1) IPv6 only, or (2) IPv4 and IPv6. Enter the appropriate number value.
3. Default interface—From the list of available devices, such as eth0 and eth1 (or more), enter the one to be the default.
4. Hostname of the device.
5. IP address of the interface—Enter the IP address of the selected interface, or accept the loopback address (127.0.0.1) by default.
6. Netmask of the IP address—Enter the netmask (such as 255.255.255.128), or accept 255.255.255.0 as the default.
7. Gateway IP address—Enter the IP address of the gateway, or accept the local address (127.0.0.1) as the default.
8. Maximum transmission unit (MTU)—Enter the MTU in bytes, or accept 1500 bytes as the default.
9. Static routes added to the default interface, if any.
10. Date and time GMT (more precisely, UTC)—Enter these separately in digits for the month, day, hour, and minutes in Coordinated Universal Time (UTC), or accept the internal settings.

The device goes into startup mode.

For example:


```

...
***** Setting up the root password *****
Changing root's password!
Changing password for user root.
New password:
Retype new password:
BAD PASSWORD: it is too short
passwd: all authentication tokens updated successfully.
***** Setting up the network *****
Configure supported protocols:
0) IPv4 Only
1) IPv6 Only
2) IPv4 and IPv6
Please select your option (rtn for 0):

There are 4 ethernet devices available for use. The default device
is the device through which the default gateway can be accessed.

Ctp circuits can run over any ethernet device, default or not.
A default device must be configured, other devices may be configured
and enabled, or disabled. Here is a list of the available devices
and their descriptions:

    eth0: 10/100/1000 Copper (front)
    eth1: 10/100/1000 Copper (back)
    eth2: 1000 Fiber (left)
    eth3: 1000 Fiber (right)

What device would you like to make the IPV4 default device? (rtn for eth0): eth1
OK, eth1 (10/100/1000 Copper (back)) will be configured as IPV4 default device.

Please input the hostname (return for (none)): nova_54

==== Configuration for eth1 (default device):
Please input the ip (return for 172.0.0.1): 172.25.61.54
Please input the netmask (return for 255.255.255.0): 255.255.255.128
Please input the gateway (return for 172.0.0.1): 172.25.61.1
Please input the mtu in bytes (return for 1500):

Add route to interface eth1 [n]

=====
=== OS Security level set to LOW ===
=====

***** Setting up date/time *****
Setting the date (GMT). Please input the year [2008-2020] (return for 2010):

Setting the date (GMT). Please input the month [1-12] (return for 01):

Setting the date (GMT). Please input the day [1-31] (return for 11):

Setting the date (GMT). Please input the hour [0-23] (return for 20):

Setting the date (GMT). Please input the minute [0-59] (return for 22):

INIT: Entering runlevel: 3
Entering non-interactive startup
...

```

During initial power-on, the components of the platform run boot code, go through a series of self-diagnostic tests, and synchronize with each other.

When the tests are complete, use the LEDs on each module to determine the status of the device. Observe the module LEDs on the front or rear components.

**Related
Documentation**

- Before You Power On the CTP2000 Platform on page 89
- Powering Off the CTP Platform on page 92

Powering Off the CTP Platform

Before you power off the device, enter the **halt** command to temporarily suspend the device's operation.



.....

CAUTION: If you do not use the **halt** command before removing or powering down the device, the device's CompactFlash card might become corrupted.

.....

PART 5

Configuration

- Accessing the CTP2000 Platform on page 95

CHAPTER 17

Accessing the CTP2000 Platform

- [Setting Up Management Access on the CTP2000 Platform on page 95](#)
- [CTP2000 Console Port Setup on page 95](#)
- [Using HyperTerminal with the CTP2000 Platform on page 96](#)
- [Connecting Directly to the CTP2000 Platform on page 96](#)
- [CTP2000 Platform SSH Setup on page 97](#)

Setting Up Management Access on the CTP2000 Platform

Before you power on the device, you must set up a management console. You use the console to communicate with the device during the power-on process, to set an IP address, and to manage the system using the command-line interface (CLI).

You can monitor and manage the system through either of these methods:

- **Console terminal**—Connect a console (PC, Macintosh, or UNIX workstation) directly to the device's RS-232 serial port.
- **Remote console**—Connect 10/100Base-T to an Ethernet port, and run SSH from a remote console.

For initial access to the system, you need to physically connect your console directly to the device's RS-232 port. Through this connection you use the CLI to set an IP address on the device. After you configure the IP address, you can access the device remotely (for example, through SSH).

Related Documentation

- [CTP2000 Console Port Setup on page 95](#)
- [Using HyperTerminal with the CTP2000 Platform on page 96](#)
- [Connecting Directly to the CTP2000 Platform on page 96](#)
- [CTP2000 Platform SSH Setup on page 97](#)

CTP2000 Console Port Setup

You can connect a console terminal (PC, Macintosh, or UNIX workstation) through the RS-232 terminal port. When you connect a console directly to the device, you can configure the device without an IP address.

To communicate with the device, you must have a terminal emulation program running on your PC or Macintosh. You can use any terminal emulation program, such as HyperTerminal. A UNIX workstation can use the emulator TIP.

- Related Documentation**
- Setting Up Management Access on the CTP2000 Platform on page 95

Using HyperTerminal with the CTP2000 Platform

If your console uses a version of Microsoft Windows (such as Windows XP or Windows NT 4.0) that supports the HyperTerminal application, you can access the device through HyperTerminal.

1. Click the **Start** button and select **Programs, Accessories, Communications, and HyperTerminal**.
2. In the HyperTerminal window, select **HyperTerminal**.
3. In the Connection Description dialog box, enter a name for your device in the Name field.
4. Select any icon to represent your terminal emulation, and click **OK**.
5. In the Connect To dialog box, in the Connect using field, select the appropriate COM port to use (for example, **COM1**), and click **OK**.
6. In the COM1 Properties dialog box, select the following settings:
 - Bits per second: 9600
 - Data bits: 8
 - Parity: None
 - Stop bits: 1
 - Flow control: Xon/Xoff
7. Click **OK**.

- Related Documentation**
- Setting Up Management Access on the CTP2000 Platform on page 95
 - CTP2000 Console Port Setup on page 95
 - Connecting Directly to the CTP2000 Platform on page 96
 - CTP2000 Platform SSH Setup on page 97

Connecting Directly to the CTP2000 Platform

When you connect a console directly to the device, use the COM 2 port on the RJ-45 connector. To do this, you must use the special DB-9 adapter with a straight-through RJ-45 cable. Direct access through the COM 2 serial port enables you to monitor the device while it boots.

To connect a console directly to the device:

1. Connect the female DB-9 connector to the COM 2 port on the device's RTM.
2. Connect the crossover adapter connector to your PC's serial port.
3. Power on the device.

When you power on the device, the CLI appears on your console's screen. You can begin configuration. .

**Related
Documentation**

- [Setting Up Management Access on the CTP2000 Platform on page 95](#)
- [CTP2000 Console Port Setup on page 95](#)
- [Using HyperTerminal with the CTP2000 Platform on page 96](#)
- [CTP2000 Platform SSH Setup on page 97](#)

CTP2000 Platform SSH Setup

When you have configured an IP address for the CTP2000 device, you can run SSH from a host to access the device through its Ethernet port. To connect the Ethernet port to the network:

1. Connect an RJ-45 cable to one of the two Ethernet ports on the RTM at the rear of the CTP2000 chassis. This applies to the AC and DC power versions of the platform.
2. Connect the other end of the cable to the appropriate Ethernet network for an out-of-band connection.



CAUTION: Do not change the IP address for the Ethernet interface that you are using to communicate with the device. If you change the address, you will lose the SSH session.

**Related
Documentation**

- [Setting Up Management Access on the CTP2000 Platform on page 95](#)
- [CTP2000 Console Port Setup on page 95](#)
- [Using HyperTerminal with the CTP2000 Platform on page 96](#)
- [Connecting Directly to the CTP2000 Platform on page 96](#)

PART 6

Maintenance

- Maintaining Components on page 101
- Replacing Interface Modules Using Hot-Swap on page 105
- Product Reclamation and Recycling on page 107
- Replacing Fan Trays on page 109
- Packing and Returning Hardware on page 111

CHAPTER 18

Maintaining Components

- Required Tools for Maintaining the CTP Platform on page 101
- Storing CTP Modules and Other Components on page 101
- Cleaning the CTP Platform on page 102
- Replacing an AC Power Supply on page 102

Required Tools for Maintaining the CTP Platform

You need the following tools and other items to replace platform components:

- Flathead and Phillips screwdrivers
- Insulated adjustable wrench
- Antistatic wrist strap
- Antistatic bags (or other protective packaging to hold components)
- Plastic boots or other protective covers for fiber-optic connectors

Related Documentation

- Storing CTP Modules and Other Components on page 101
- Cleaning the CTP Platform on page 102

Storing CTP Modules and Other Components

Retain the packaging in which a module or other component was shipped, and use this packaging to store the item. Modules are shipped in antistatic bags and protective packaging. Components, such as transceivers and CompactFlash cards, are shipped in antistatic plastic containers within an antistatic padded box.



CAUTION: Failure to store electronic modules and components correctly can lead to damage of these items.

Follow these guidelines for storing modules and other components:

- Store each module in a separate antistatic bag.
- Store other components in an antistatic plastic container. Some of these containers can accommodate several components in separate compartments.
- Do not store multiple modules or other components in an antistatic bag or container where they can touch other items.
- (Optional) Store the item in its antistatic bag or container within the protective packaging or padded box that the item was shipped in.

Related Documentation

- Required Tools for Maintaining the CTP Platform on page 101
- Cleaning the CTP Platform on page 102

Cleaning the CTP Platform

Dust is attracted to the area where the air intake vents are located. Clean the area with a dry cloth every few weeks to prevent excessive accumulation of dust. This cleaning helps to maintain the efficiency of the cooling system and to prevent damage to electronic components.



.....

WARNING: Do not insert any metal object, such as a screwdriver, or place your hand into an open slot or the backplane when the device is on. Remove jewelry (including rings, necklaces, and watches) before working on equipment that is connected to power lines. These actions prevent electric shock and serious burns.

.....



.....

CAUTION: When cleaning the device, wear an antistatic wrist strap connected to an ESD grounding jack. This action helps to protect modules from damage by electrostatic discharge.

.....

Related Documentation

- Required Tools for Maintaining the CTP Platform on page 101
- Storing CTP Modules and Other Components on page 101

Replacing an AC Power Supply


Before you remove a power supply, be aware of the following:

- The minimum number of power supplies must be present in the router at all times.
- To maintain proper cooling and prevent thermal shutdown of the operating power supply unit, each power supply slot must contain either a power supply or a blank panel. If you remove a power supply, you must install a replacement power supply or a blank panel shortly after the removal.
- After powering off a power supply, wait at least 60 seconds before turning it back on.

To remove an AC power supply (see Figure 33 on page 103 for a representative AC power supply at the rear of the chassis):

1. Switch off the dedicated customer site circuit breaker for the power supply, and remove the power cord from the AC power source. Follow the instructions for your site.
2. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist, and connect the strap to one of the ESD points on the chassis.
3. If the chassis has a power switch, move it to the off (O) position.
4. Unplug the power cord from the power source receptacle.
5. Unplug the power cord from the appliance inlet in the chassis above the power supply.
6. The AC power supply has a pull handle and a locking tab. Press the locking tab to the right while you pull the unit out using the handle.

Figure 33: Replacing an AC Power Supply

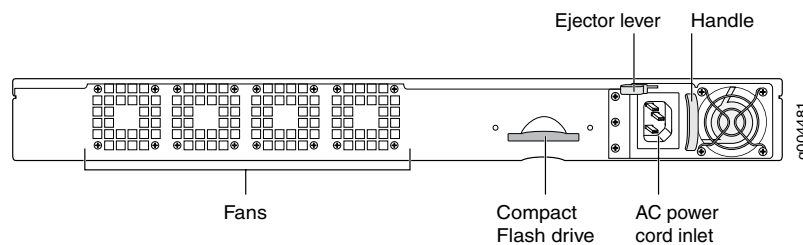

To install an AC power supply (see Figure 33 on page 103):

1. Move the AC input switch next to the appliance inlet on the power supply to the off (O) position.
2. Using both hands, slide the power supply straight into the chassis until the power supply is fully seated in the chassis slot. The power supply faceplate should be flush with any adjacent power supply faceplate or blank installed in the power supply slot.
3. Tighten both captive screws at the bottom of the power supply.
4. Attach the power cord to the power supply.
5. Attach the power cord to the AC power source, and switch on the dedicated customer site circuit breaker. Follow the instructions for your site.
6. If the chassis has a power switch, move it to the on (I) position.
7. Observe the status LEDs on the power supply faceplate. If the power supply is correctly installed and functioning normally, the **AC OK** and **DC OK** LEDs light steadily, and the **PS FAIL** LED is not lit.

Related Documentation

- Required Tools for Maintaining the CTP Platform on page 101
- Storing CTP Modules and Other Components on page 101
- Cleaning the CTP Platform on page 102

Replacing Interface Modules Using Hot-Swap

- CTP2000 Hot-Swap Interface Module Replacement on page 105

CTP2000 Hot-Swap Interface Module Replacement

You can now replace the following modules on the CTP2000 device without powering down the device (hot-swap):

- CTP2000 8-port serial interface module (CTP2000-IM-8P)
- CTP2000 8-port serial interface module, including a configurable T1/E1 interface (CTP2000-IM-8P-T1)
- CTP2000 8-port serial interface module, including a configurable 4WTO interface (CTP2000-IM-8P-V)
- CTP2000 Series T1/E1 interface module (CTP2000-IM-8P-T1E1)

Before performing a hot-swap, be aware of the following restrictions:

- Hot-swapping works most efficiently when your interface module is the same type as the interface module being replaced. If your replacement interface module is a different type, you must clean up the database information for the affected slot by deleting all bundles attached to the interface module.
- Hot-swapping is not supported on slot 0, because the clock distributor uses slot 0.
- For best results, close all open menu sessions before performing a hot-swap



NOTE: There may be a brief traffic interruption when you replace an interface module using hot-swap.

To perform hot-swapping:

1. From the Main Menu, select **4) Node Diagnostics**.
2. If you are inserting a module into an empty slot, continue with step 7.
3. Select **8) Card Swap menu**.

4. Select **1) remove**. You are prompted to enter a slot number.
5. Enter **1**. The following message is displayed: **It is now safe to remove the card from the system!**
6. Remove the interface module from the slot.
7. Plug the new or replacement interface module into the slot.
8. Press Enter.
9. Select **8) Card Swap menu**.
10. Select **2) add**. You are prompted to enter a slot number.
11. Enter a slot number from **1** to **6**. The following message is displayed: **Please make sure the card is already physically inserted.**
12. Press Enter. The following message is displayed: **Card is inserted and the database is populated to the card!**
13. Quit the current menu session before resuming work by opening a new menu session.

**Related
Documentation**

- CTP2000 Series Serial Interface Modules on page 11
- CTP2000 Series T1/E1 Interface Module on page 12

CHAPTER 20

Product Reclamation and Recycling


- Product Reclamation and Recycling Program on page 107

Product Reclamation and Recycling Program

Juniper Networks is committed to environmentally responsible behavior. As part of this commitment, we continually work to comply with environmental standards such as the European Union's *Waste Electrical and Electronic Equipment* (WEEE) Directive and *Restriction of Hazardous Substances* (RoHS) Directive.

These directives and other similar regulations from countries outside the European Union regulate electronic waste management and the reduction or elimination of specific hazardous materials in electronic products. The WEEE Directive requires electrical and electronics manufacturers to provide mechanisms for the recycling and reuse of their products. The RoHS Directive restricts the use of certain substances that are commonly found in electronic products today. Restricted substances include heavy metals, including lead, and polybrominated materials. The RoHS Directive, with some exemptions, applies to all electrical and electronic equipment.

In accordance with Article 11(2) of Directive 2002/96/EC (WEEE), products put on the market after 13 August 2005 are marked with the following symbol or include it in their documentation: a crossed-out wheeled waste bin with a bar beneath.

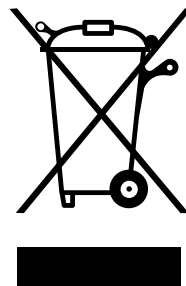

Juniper Networks provides recycling support for our equipment worldwide to comply with the WEEE Directive. For recycling information, go to <http://www.juniper.net/environmental>, and indicate the type of Juniper Networks equipment that you wish to dispose of and the country where it is currently located, or contact your Juniper Networks account representative.

Products returned through our reclamation process are recycled, recovered, or disposed of in a responsible manner. Our packaging is designed to be recycled and should be handled in accordance with your local recycling policies.

- Related Documentation**
- Return Procedure on page 111
 - Returning CTP Products for Repair or Replacement on page 111

CHAPTER 21

Replacing Fan Trays

- Removing a CTP2000 Fan Tray on page 109
- Installing a CTP2000 Fan Tray on page 109

Removing a CTP2000 Fan Tray

To remove a fan tray:

1. With an appropriate screwdriver, loosen the captive screws located at the corners of the fan tray.



WARNING: Do not place your fingers near the fans when removing the fan tray. The blades might still be moving.

2. Gently pull the fan tray out. Place one hand under the fan tray and the other on the front handle, and continue to pull it out of the chassis.

Use two hands to hold the fan tray after it comes out of the chassis.

Related Documentation

- Installing a CTP2000 Fan Tray on page 109

Installing a CTP2000 Fan Tray

To install the fan tray:

1. With two hands hold the tray vertically so that the captive screws point toward you.
2. Place the side edge of the tray housing in the fan tray compartment, and push toward the back of the chassis until the tray stops.

An electrical connector on the back of the fan tray pairs with an electrical connector at the back of the shelf.

3. With an appropriate screwdriver, tighten the captive screws.

Alternate between screws when tightening them to ensure that the electrical connectors at the back of the tray fit tightly.

- Related Documentation**
- Removing a CTP2000 Fan Tray on page 109

CHAPTER 22

Packing and Returning Hardware

- Return Procedure on page 111
- Returning CTP Products for Repair or Replacement on page 111

Return Procedure

When you need to return a component:

1. Determine the part number and serial number of the component. For instructions, see “Locating CTP Component Serial Numbers” on page 117.
2. Obtain a Return Materials Authorization (RMA) number from the Juniper Networks Technical Assistance Center (JTAC). See “Information You Might Need to Supply to JTAC” on page 118.

Provide the following information in your e-mail message or during the telephone call:

- Part number and serial number of component
- Your name, organization name, telephone number, and fax number
- The shipping address for the replacement component, including contact name and phone number
- Description of the failure

The support representative validates your request and issues an RMA number for return of the component.

3. Pack the device or component for shipment, performing the procedure described in “Returning CTP Products for Repair or Replacement” on page 111.

Related Documentation

- Returning CTP Products for Repair or Replacement on page 111
- Contacting Customer Support on page 117

Returning CTP Products for Repair or Replacement

In the event of a hardware failure, please contact Juniper Networks to obtain a Return Material Authorization (RMA) number. This number is necessary to ensure proper tracking and handling of returned material at the factory. Do not return any hardware until you

have received an RMA. Juniper Networks reserves the right to refuse shipments that do not have an RMA. Refused shipments are returned to the shipper through collect freight.

If possible, use the original shipping crate, pallet, and packing materials in which the chassis was originally shipped. If these materials are unavailable, use comparable shipping material, or contact your Juniper Networks representative for information about approved packaging material.

See the customer support Web page for complete repair and return policies and procedures.

To pack the chassis for shipment:

1. Ground yourself by using an antistatic wrist strap or other device.
2. Issue the proper shutdown commands to halt your system.
3. Switch all power switches to the OFF position.
4. Remove all cables from the chassis.
5. Remove all major components from the chassis, including interface modules, processor modules, RTMs, and fan trays.
6. Remove the chassis from the rack and bolt it to the shipping pallet.
7. Cover the chassis with an ESD bag and place packing foam on top of and around the chassis.
8. Place the crate cover over the chassis and fasten the cover to the pallet.

**Related
Documentation**

- Contacting Customer Support on page 117
- Return Procedure on page 111
- Locating CTP Component Serial Numbers on page 117
- Information You Might Need to Supply to JTAC on page 118

PART 7

Troubleshooting

- Troubleshooting Power Failures on page 115
- Contacting Customer Support on page 117

CHAPTER 23

Troubleshooting Power Failures

- CTP Platform Does Not Power On on page 115
- CTP Platform Shuts Down on page 115

CTP Platform Does Not Power On

Problem • Device is not receiving power.

- Module's power supply has malfunctioned.
- Power source cannot handle system load.

Solution

1. Verify that all power connections are correct.
2. Verify that the power supply is delivering the correct voltage, current, and wattage to the device. See the system specifications for your particular CTP platform.
3. If the platform still does not operate, contact the Juniper Networks Technical Assistance Center (JTAC).

Related Documentation • CTP Platform Shuts Down on page 115

CTP Platform Shuts Down

Problem • Temperature is too high.

- Power is lost.

Solution

1. Verify that power connections are properly attached.
2. Verify that device is receiving power.
3. Look to see whether or not the LEDs are lit.
4. Run diagnostics using the CLI.
5. If the device does not reset, contact JTAC.

Related Documentation • CTP Platform Does Not Power On on page 115

Contacting Customer Support

- Contacting Customer Support on page 117
- Locating CTP Component Serial Numbers on page 117
- Information You Might Need to Supply to JTAC on page 118

Contacting Customer Support

See the Juniper Networks Web site for complete customer service information:

- <http://www.juniper.net/support/guidelines.html>

For your convenience, we provide multiple options for requesting and receiving technical support from the Juniper Networks Technical Assistance Center (JTAC):

- By the Web using Juniper Networks, Inc. Case Manager:

<https://www.juniper.net/cm/index.jsp>

- By telephone:

From the US, Canada, and Mexico at 1–888–314–JTAC

From all other locations at 408–745–9500

Related Documentation

- Return Procedure on page 111
- Locating CTP Component Serial Numbers on page 117
- Information You Might Need to Supply to JTAC on page 118
- Returning CTP Products for Repair or Replacement on page 111

Locating CTP Component Serial Numbers

Before contacting Juniper Networks to request a Return Materials Authorization (RMA), you must find the serial number on the chassis or component.

Serial numbers are located on the modules. ID labels are usually applied near the ejector.

Related Documentation

- Contacting Customer Support on page 117

- Return Procedure on page 111
- Information You Might Need to Supply to JTAC on page 118
- Returning CTP Products for Repair or Replacement on page 111

Information You Might Need to Supply to JTAC

When requesting technical support from JTAC by phone, be prepared to provide the following information:

- Priority level
- Indication of what activity was being performed on the device when the problem occurred
- Problem detail and configuration data

When a new request for technical support is submitted, the JTAC engineer:

1. Opens a case and assigns a number.
2. Begins troubleshooting, diagnostics, and problem replication (if appropriate).
3. Provides you with periodic updates on problem status and escalates the problem as appropriate according to escalation management guidelines.
4. Closes the case when you agree that the problem has been resolved.

Related Documentation

- Contacting Customer Support on page 117
- Return Procedure on page 111
- Locating CTP Component Serial Numbers on page 117
- Returning CTP Products for Repair or Replacement on page 111

PART 8

Index

- Index on page 121

Index

A

AC power supply, replacing.....	102
accessing	
connecting directly.....	96
console ports.....	95
HyperTerminal.....	96
management console.....	95
SSH setup.....	97

C

cabling	
fast Ethernet.....	48
interface module.....	85
management ports.....	84
overview.....	83
power.....	48, 85
recommendations.....	38
required tools.....	84
Case Manager, Juniper.....	117
cleaning platform.....	102
clock module.....	24
compact flash card, installing and removing.....	74
compliance, regulatory	
Canadian.....	58
FCC.....	57
FDA.....	58
console See management console	
CTP overview.....	3
CTP2000	
hot-swap.....	105
CTP2000 4WE&M interface module.....	13
pinouts.....	41
port signaling jumper positions.....	14
supervisory signaling.....	16
CTP2000 compression interface module.....	12
CTP2000 FXS/FXO interface modules.....	18
analog ground-start signaling.....	20
analog loop-start signaling.....	19
digital signaling.....	21
pinouts.....	43

CTP2000 IRIG interface module.....	23
CTP2000 serial interface modules.....	11
CTP2000 T1/E1 interface module.....	12
CTP2008 platform.....	3
specifications.....	29
CTP2024 platform.....	5
specifications.....	31
CTP2056 platform.....	7
specifications.....	32
CTPOS.....	3
CTPView.....	3
customer support.....	117
contacting Juniper.....	65
information needed.....	118
locating serial numbers.....	117
return procedure.....	111

D

damaged components, returning.....	64
DB-9	
connector.....	84
crossover cable.....	47
DC power.....	86
declaration of conformity, EC	
CTP2000.....	55

E

EIA530(A) data interface.....	11
environmental requirements.....	35

F

fan trays	
installing.....	109
removing.....	109

H

hot-swap	
CTP2000.....	105
HyperTerminal access.....	96

I

inspecting before installation.....	64
installing	
AC power supply.....	102
before.....	67
compact flash card.....	74
fan trays.....	109
freestanding.....	67
modules.....	71, 73
PMC module.....	75
rack.....	68
responsibilities.....	35
safety guidelines.....	53
SFPs.....	77
tools required.....	72
interface modules	
cabling.....	85
IRIG data interface module.....	23

J

JTAC, contacting.....	117, 118
-----------------------	----------

M

maintaining	
cleaning.....	102
fan trays, installing and removing.....	109
storing modules.....	101
tools required.....	101
management console	
accessing.....	95
direct connection.....	96
pinouts.....	47
port setup.....	95
management ports, cabling.....	84
modules and components	
cleaning.....	102
installing.....	71, 73
protecting.....	71
removing.....	73
replacing.....	101
storing.....	101
upgrading.....	81

P

PCI mezzanine card (PMC) module	
installing.....	75
pinouts	
4WE&M interface.....	41
FXS/FXO interface.....	43

power

cables, DC.....	48
cabling.....	85
failures.....	115
shutdowns.....	115
powering off.....	92
powering on.....	89
preinstallation responsibilities.....	35

R

rack	
installation guidelines.....	38, 68
installing in.....	68
mechanical requirements.....	37
requirements.....	37
space requirements.....	38
reclamation and recycling.....	107
removing modules.....	73
replacing components.....	101
return procedure.....	111
RJ-45 connector.....	19, 25, 47, 48, 84, 96, 97
RS-232 port.....	11, 84, 95

S

safety guidelines.....	51
installation.....	53
serial number, locating.....	117
SFPs (small form-factor pluggable transceivers)	
installing.....	77
removing.....	78
SSH connection.....	97
storing components.....	101

T

technical support.....	117
troubleshooting power failures.....	115

U

uninstalling modules.....	73
unpacking and inspecting.....	63
upgrading	
modules.....	81

V

V.35 data interface.....	11
--------------------------	----