

CTP Series Circuit To Packet Platform

Interoperability With SToP-Compliant Equipment
Over T1/E1 Circuits

Release

6.1



Published: 2010-10-21

Juniper Networks, Inc.
1194 North Mathilda Avenue
Sunnyvale, California 94089
USA
408-745-2000
www.juniper.net

Copyright © 2010, Juniper Networks, Inc. All rights reserved.

Juniper Networks, Junos, Steel-Belted Radius, NetScreen, and ScreenOS are registered trademarks of Juniper Networks, Inc. in the United States and other countries. The Juniper Networks Logo, the Junos logo, and JunosE are trademarks of Juniper Networks, Inc. All other trademarks, service marks, registered trademarks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

Products made or sold by Juniper Networks or components thereof might be covered by one or more of the following patents that are owned by or licensed to Juniper Networks: U.S. Patent Nos. 5,473,599, 5,905,725, 5,909,440, 6,192,051, 6,333,650, 6,359,479, 6,406,312, 6,429,706, 6,459,579, 6,493,347, 6,538,518, 6,538,899, 6,552,918, 6,567,902, 6,578,186, and 6,590,785.

Interoperability of T1/E1 Circuits With SAToP-Compliant Equipment, CTP Release 6.1, CTPView Release 4.1

Copyright © 2010, Juniper Networks, Inc.

All rights reserved. Printed in USA.

Revision History

October 2010—Interoperability of T1/E1 Circuits With SAToP-Compliant Equipment, CTP Release 6.1, CTPView Release 4.1

The information in this document is current as of the date listed in the revision history.

END USER LICENSE AGREEMENT

READ THIS END USER LICENSE AGREEMENT (“AGREEMENT”) BEFORE DOWNLOADING, INSTALLING, OR USING THE SOFTWARE. BY DOWNLOADING, INSTALLING, OR USING THE SOFTWARE OR OTHERWISE EXPRESSING YOUR AGREEMENT TO THE TERMS CONTAINED HEREIN, YOU (AS CUSTOMER OR IF YOU ARE NOT THE CUSTOMER, AS A REPRESENTATIVE/AGENT AUTHORIZED TO BIND THE CUSTOMER) CONSENT TO BE BOUND BY THIS AGREEMENT. IF YOU DO NOT OR CANNOT AGREE TO THE TERMS CONTAINED HEREIN, THEN (A) DO NOT DOWNLOAD, INSTALL, OR USE THE SOFTWARE, AND (B) YOU MAY CONTACT JUNIPER NETWORKS REGARDING LICENSE TERMS.

1. **The Parties.** The parties to this Agreement are (i) Juniper Networks, Inc. (if the Customer’s principal office is located in the Americas) or Juniper Networks (Cayman) Limited (if the Customer’s principal office is located outside the Americas) (such applicable entity being referred to herein as “Juniper”), and (ii) the person or organization that originally purchased from Juniper or an authorized Juniper reseller the applicable license(s) for use of the Software (“Customer”) (collectively, the “Parties”).

2. **The Software.** In this Agreement, “Software” means the program modules and features of the Juniper or Juniper-supplied software, for which Customer has paid the applicable license or support fees to Juniper or an authorized Juniper reseller, or which was embedded by Juniper in equipment which Customer purchased from Juniper or an authorized Juniper reseller. “Software” also includes updates, upgrades and new releases of such software. “Embedded Software” means Software which Juniper has embedded in or loaded onto the Juniper equipment and any updates, upgrades, additions or replacements which are subsequently embedded in or loaded onto the equipment.

3. **License Grant.** Subject to payment of the applicable fees and the limitations and restrictions set forth herein, Juniper grants to Customer a non-exclusive and non-transferable license, without right to sublicense, to use the Software, in executable form only, subject to the following use restrictions:

a. Customer shall use Embedded Software solely as embedded in, and for execution on, Juniper equipment originally purchased by Customer from Juniper or an authorized Juniper reseller.

b. Customer shall use the Software on a single hardware chassis having a single processing unit, or as many chassis or processing units for which Customer has paid the applicable license fees; provided, however, with respect to the Steel-Belted Radius or Odyssey Access Client software only, Customer shall use such Software on a single computer containing a single physical random access memory space and containing any number of processors. Use of the Steel-Belted Radius or IMS AAA software on multiple computers or virtual machines (e.g., Solaris zones) requires multiple licenses, regardless of whether such computers or virtualizations are physically contained on a single chassis.

c. Product purchase documents, paper or electronic user documentation, and/or the particular licenses purchased by Customer may specify limits to Customer’s use of the Software. Such limits may restrict use to a maximum number of seats, registered endpoints, concurrent users, sessions, calls, connections, subscribers, clusters, nodes, realms, devices, links, ports or transactions, or require the purchase of separate licenses to use particular features, functionalities, services, applications, operations, or capabilities, or provide throughput, performance, configuration, bandwidth, interface, processing, temporal, or geographical limits. In addition, such limits may restrict the use of the Software to managing certain kinds of networks or require the Software to be used only in conjunction with other specific Software. Customer’s use of the Software shall be subject to all such limitations and purchase of all applicable licenses.

d. For any trial copy of the Software, Customer’s right to use the Software expires 30 days after download, installation or use of the Software. Customer may operate the Software after the 30-day trial period only if Customer pays for a license to do so. Customer may not extend or create an additional trial period by re-installing the Software after the 30-day trial period.

e. The Global Enterprise Edition of the Steel-Belted Radius software may be used by Customer only to manage access to Customer’s enterprise network. Specifically, service provider customers are expressly prohibited from using the Global Enterprise Edition of the Steel-Belted Radius software to support any commercial network access services.

The foregoing license is not transferable or assignable by Customer. No license is granted herein to any user who did not originally purchase the applicable license(s) for the Software from Juniper or an authorized Juniper reseller.

4. **Use Prohibitions.** Notwithstanding the foregoing, the license provided herein does not permit the Customer to, and Customer agrees not to and shall not: (a) modify, unbundle, reverse engineer, or create derivative works based on the Software; (b) make unauthorized copies of the Software (except as necessary for backup purposes); (c) rent, sell, transfer, or grant any rights in and to any copy of the Software, in any form, to any third party; (d) remove any proprietary notices, labels, or marks on or in any copy of the Software or any product in which the Software is embedded; (e) distribute any copy of the Software to any third party, including as may be embedded in Juniper equipment sold in the secondhand market; (f) use any ‘locked’ or key-restricted feature, function, service, application, operation, or capability without first purchasing the applicable license(s) and obtaining a valid key from Juniper, even if such feature, function, service, application, operation, or capability is enabled without a key; (g) distribute any key for the Software provided by Juniper to any third party; (h) use the

Software in any manner that extends or is broader than the uses purchased by Customer from Juniper or an authorized Juniper reseller; (i) use Embedded Software on non-Juniper equipment; (j) use Embedded Software (or make it available for use) on Juniper equipment that the Customer did not originally purchase from Juniper or an authorized Juniper reseller; (k) disclose the results of testing or benchmarking of the Software to any third party without the prior written consent of Juniper; or (l) use the Software in any manner other than as expressly provided herein.

5. **Audit.** Customer shall maintain accurate records as necessary to verify compliance with this Agreement. Upon request by Juniper, Customer shall furnish such records to Juniper and certify its compliance with this Agreement.

6. **Confidentiality.** The Parties agree that aspects of the Software and associated documentation are the confidential property of Juniper. As such, Customer shall exercise all reasonable commercial efforts to maintain the Software and associated documentation in confidence, which at a minimum includes restricting access to the Software to Customer employees and contractors having a need to use the Software for Customer's internal business purposes.

7. **Ownership.** Juniper and Juniper's licensors, respectively, retain ownership of all right, title, and interest (including copyright) in and to the Software, associated documentation, and all copies of the Software. Nothing in this Agreement constitutes a transfer or conveyance of any right, title, or interest in the Software or associated documentation, or a sale of the Software, associated documentation, or copies of the Software.

8. **Warranty, Limitation of Liability, Disclaimer of Warranty.** The warranty applicable to the Software shall be as set forth in the warranty statement that accompanies the Software (the "Warranty Statement"). Nothing in this Agreement shall give rise to any obligation to support the Software. Support services may be purchased separately. Any such support shall be governed by a separate, written support services agreement. TO THE MAXIMUM EXTENT PERMITTED BY LAW, JUNIPER SHALL NOT BE LIABLE FOR ANY LOST PROFITS, LOSS OF DATA, OR COSTS OR PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES, OR FOR ANY SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES ARISING OUT OF THIS AGREEMENT, THE SOFTWARE, OR ANY JUNIPER OR JUNIPER-SUPPLIED SOFTWARE. IN NO EVENT SHALL JUNIPER BE LIABLE FOR DAMAGES ARISING FROM UNAUTHORIZED OR IMPROPER USE OF ANY JUNIPER OR JUNIPER-SUPPLIED SOFTWARE. EXCEPT AS EXPRESSLY PROVIDED IN THE WARRANTY STATEMENT TO THE EXTENT PERMITTED BY LAW, JUNIPER DISCLAIMS ANY AND ALL WARRANTIES IN AND TO THE SOFTWARE (WHETHER EXPRESS, IMPLIED, STATUTORY, OR OTHERWISE), INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NONINFRINGEMENT. IN NO EVENT DOES JUNIPER WARRANT THAT THE SOFTWARE, OR ANY EQUIPMENT OR NETWORK RUNNING THE SOFTWARE, WILL OPERATE WITHOUT ERROR OR INTERRUPTION, OR WILL BE FREE OF VULNERABILITY TO INTRUSION OR ATTACK. In no event shall Juniper's or its suppliers' or licensors' liability to Customer, whether in contract, tort (including negligence), breach of warranty, or otherwise, exceed the price paid by Customer for the Software that gave rise to the claim, or if the Software is embedded in another Juniper product, the price paid by Customer for such other product. Customer acknowledges and agrees that Juniper has set its prices and entered into this Agreement in reliance upon the disclaimers of warranty and the limitations of liability set forth herein, that the same reflect an allocation of risk between the Parties (including the risk that a contract remedy may fail of its essential purpose and cause consequential loss), and that the same form an essential basis of the bargain between the Parties.

9. **Termination.** Any breach of this Agreement or failure by Customer to pay any applicable fees due shall result in automatic termination of the license granted herein. Upon such termination, Customer shall destroy or return to Juniper all copies of the Software and related documentation in Customer's possession or control.

10. **Taxes.** All license fees payable under this agreement are exclusive of tax. Customer shall be responsible for paying Taxes arising from the purchase of the license, or importation or use of the Software. If applicable, valid exemption documentation for each taxing jurisdiction shall be provided to Juniper prior to invoicing, and Customer shall promptly notify Juniper if their exemption is revoked or modified. All payments made by Customer shall be net of any applicable withholding tax. Customer will provide reasonable assistance to Juniper in connection with such withholding taxes by promptly: providing Juniper with valid tax receipts and other required documentation showing Customer's payment of any withholding taxes; completing appropriate applications that would reduce the amount of withholding tax to be paid; and notifying and assisting Juniper in any audit or tax proceeding related to transactions hereunder. Customer shall comply with all applicable tax laws and regulations, and Customer will promptly pay or reimburse Juniper for all costs and damages related to any liability incurred by Juniper as a result of Customer's non-compliance or delay with its responsibilities herein. Customer's obligations under this Section shall survive termination or expiration of this Agreement.

11. **Export.** Customer agrees to comply with all applicable export laws and restrictions and regulations of any United States and any applicable foreign agency or authority, and not to export or re-export the Software or any direct product thereof in violation of any such restrictions, laws or regulations, or without all necessary approvals. Customer shall be liable for any such violations. The version of the Software supplied to Customer may contain encryption or other capabilities restricting Customer's ability to export the Software without an export license.

12. **Commercial Computer Software.** The Software is "commercial computer software" and is provided with restricted rights. Use, duplication, or disclosure by the United States government is subject to restrictions set forth in this Agreement and as provided in DFARS 227.7201 through 227.7202-4, FAR 12.212, FAR 27.405(b)(2), FAR 52.227-19, or FAR 52.227-14 (ALT III) as applicable.

13. **Interface Information.** To the extent required by applicable law, and at Customer's written request, Juniper shall provide Customer with the interface information needed to achieve interoperability between the Software and another independently created program, on payment of applicable fee, if any. Customer shall observe strict obligations of confidentiality with respect to such information and shall use such information in compliance with any applicable terms and conditions upon which Juniper makes such information available.

14. **Third Party Software.** Any licensor of Juniper whose software is embedded in the Software and any supplier of Juniper whose products or technology are embedded in (or services are accessed by) the Software shall be a third party beneficiary with respect to this Agreement, and such licensor or vendor shall have the right to enforce this Agreement in its own name as if it were Juniper. In addition, certain third party software may be provided with the Software and is subject to the accompanying license(s), if any, of its respective owner(s). To the extent portions of the Software are distributed under and subject to open source licenses obligating Juniper to make the source code for such portions publicly available (such as the GNU General Public License ("GPL") or the GNU Library General Public License ("LGPL")), Juniper will make such source code portions (including Juniper modifications, as appropriate) available upon request for a period of up to three years from the date of distribution. Such request can be made in writing to Juniper Networks, Inc., 1194 N. Mathilda Ave., Sunnyvale, CA 94089, ATTN: General Counsel. You may obtain a copy of the GPL at <http://www.gnu.org/licenses/gpl.html>, and a copy of the LGPL at <http://www.gnu.org/licenses/lgpl.html>.

15. **Miscellaneous.** This Agreement shall be governed by the laws of the State of California without reference to its conflicts of laws principles. The provisions of the U.N. Convention for the International Sale of Goods shall not apply to this Agreement. For any disputes arising under this Agreement, the Parties hereby consent to the personal and exclusive jurisdiction of, and venue in, the state and federal courts within Santa Clara County, California. This Agreement constitutes the entire and sole agreement between Juniper and the Customer with respect to the Software, and supersedes all prior and contemporaneous agreements relating to the Software, whether oral or written (including any inconsistent terms contained in a purchase order), except that the terms of a separate written agreement executed by an authorized Juniper representative and Customer shall govern to the extent such terms are inconsistent or conflict with terms contained herein. No modification to this Agreement nor any waiver of any rights hereunder shall be effective unless expressly assented to in writing by the party to be charged. If any portion of this Agreement is held invalid, the Parties agree that such invalidity shall not affect the validity of the remainder of this Agreement. This Agreement and associated documentation has been written in the English language, and the Parties agree that the English version will govern. (For Canada: Les parties aux présentes confirment leur volonté que cette convention de même que tous les documents y compris tout avis qui s'y rattache, soient rédigés en langue anglaise. (Translation: The parties confirm that this Agreement and all related documentation is and will be in the English language)).

Table of Contents

Part 1	Overview	
Chapter 1	Overview of SAToP Bundles	3
	SAToP Bundle Overview	3
	SAToP Encapsulation for E1 Interfaces	3
	SAToP Interoperability with M Series E1/T1 Circuit Emulation PICs Overview	4
	Adaptive Clocking for SAToP Bundles Overview	4
	Determining Optimal Packet Size for SAToP Bundles Overview	5
	Bandwidth for Transporting SAToP Data	5
	Packet Creation Delay	5
	Performance of the IP Network	6
	Providing QoS for SAToP Bundles by Using Service Type Overview	6
Part 2	Configuration	
Chapter 2	Configuring SAToP Bundles	11
	Configuring the Default Bundle Data Protocol on the CTP Device (CTP Menu)	11
	Configuring IP Parameters for SAToP Bundles (CTPView)	12
	Configuring IP Parameters for SAToP Bundles (CTP Menu)	14
	Configuring Virtual IP Parameters for SAToP Bundles (CTPView)	16
	Configuring Virtual IP Parameters for SAToP Bundles (CTP Menu)	17
	Configuring Circuit Restart Parameters for SAToP Bundles (CTPView)	18
	Configuring Circuit Restart Parameters for SAToP Bundles (CTP Menu)	19
	Configuring the Missing Packet Fill Pattern for SAToP Bundles (CTPView)	20
	Configuring the Missing Packet Fill Pattern for SAToP Bundles (CTP Menu)	21
	Configuring T1 and E1 Port Parameters for SAToP Bundles (CTPView)	21
	Configuring T1 and E1 Port Parameters for SAToP Bundles (CTP Menu)	23
	Configuring Adaptive Clocking for SAToP Bundles (CTPView)	24
	Configuring Adaptive Clocking for SAToP Bundles (CTP Menu)	26
Part 3	Example	
Chapter 3	Example: Using SAToP Bundles to Interoperate with M Series Multiservice Edge Routers	31
	Example: CTP Interoperability with M Series T1/E1 Circuit Emulation PICs	31

PART 1

Overview

- Overview of SAToP Bundles on page 3

Overview of SAToP Bundles

- SAToP Bundle Overview on page 3
- SAToP Interoperability with M Series E1/T1 Circuit Emulation PICs Overview on page 4
- Adaptive Clocking for SAToP Bundles Overview on page 4
- Determining Optimal Packet Size for SAToP Bundles Overview on page 5
- Providing QoS for SAToP Bundles by Using Service Type Overview on page 6

SAToP Bundle Overview

Structure Agnostic TDM over Packet (SAToP) bundles use a standards-based transport mechanism for T1/E1 circuits that allows them to interoperate with other SAToP-compliant equipment.


SAToP bundles comply with RFC 4553 to provide pseudowire encapsulation (PWE3) for TDM bit streams (T1, E1, T3, E3) that disregards any structure that may be imposed on these streams, in particular the structure imposed by the standard TDM framing.

You can configure SAToP bundles on CTP150 and CTP2000 platforms with T1/E1 interfaces or on CTP2000 platforms with serial interfaces that have T1/E1 daughter cards.

SAToP Encapsulation for E1 Interfaces

Figure 1 on page 3 shows an example of SAToP encapsulation for E1 interfaces.

Figure 1: SAToP Encapsulation for E1 Interfaces

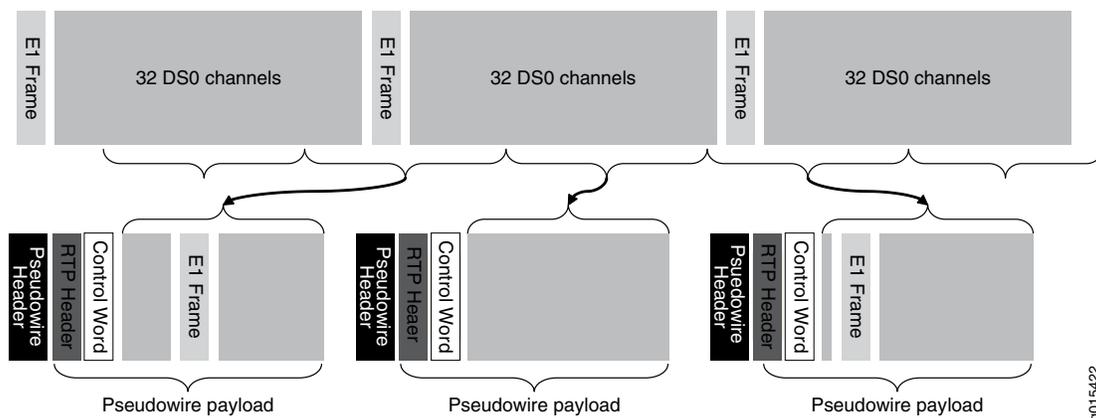

g015422

SAToP encapsulation works as follows:

- The entire T1/E1 stream is packetized including all DS0s. The current state of the DS0s is not taken into consideration during this process.
- The T1/E1 stream is sliced into equal sized packets. The slice position is random and unrelated to the position of the frame bit. In other words, the process is structure agnostic.

**Related
Documentation**

- SAToP Interoperability with M Series E1/T1 Circuit Emulation PICs Overview on page 4

SAToP Interoperability with M Series E1/T1 Circuit Emulation PICs Overview

You can use SAToP bundles to allow CTP devices to interoperate with Juniper Networks T1/E1 Circuit Emulation PICs on M Series Multiservice Edge Routers.

This interoperability allows you to deploy CTP150 and CTP2000 platforms to the customer edge by connecting them to existing M Series routers. By using existing routers and circuit emulation PICs with CTP equipment, you can provide services to smaller, remote locations without having to deploy additional M Series routers.

This feature uses a static Layer 2 circuit pseudowire that supports the use of GRE tunnels for carrying MPLS pseudowire traffic. To use this feature, you create a Layer 2 circuit and a GRE tunnel between the CTP device and the CE PIC on the router. Using SAToP encapsulation, you can provide a T1 TDM transport through the GRE tunnel.

The M Series router must have tunneling services available. These services can be built-in, as with the M7i, M120, and M360, or provided if you use an advanced services (AS) PIC that supports tunneling.

**Related
Documentation**

- Example: CTP Interoperability with M Series T1/E1 Circuit Emulation PICs on page 31

Adaptive Clocking for SAToP Bundles Overview

The goal of adaptive clocking is to prevent buffer anomalies by adjusting the clocks so that they are the same at each end of the network. If the clocks are not the same at each end of the network, the data rate entering and exiting buffers will not be the same, which causes a buffer underflow or overflow.

Adaptive clocking works by gathering information on packets arriving from the IP network and using that information to determine if adjustments need to be made to the local clock to maintain frequency lock with the remote end. This process is called adaptive time domain processing (ATDP). ATDP provides rapid convergence to the correct clock, and does not vary due to changes in the average jitter buffer fill. As a result, a circuit continuously operates without a buffer re-center, even when clock references are not used.

SAToP bundles support adaptive clocking with the external transmit (TX) clock. With this type of clocking:

- Data received from the local user equipment that is bound to the IP network is clocked using the CTP external user clock (the transmit timing clock).
- Data received from the remote CTP device and bound for the interface is adaptively clocked with the recovered clock from the user equipment that is connected to the remote CTP device.

This configuration allows for independent adaptive configuration in each direction. With this method, the user equipment can send packets into the network with their local clock, and the remote end CTP devices adaptively recover this clock. This clocking method is useful when the port speed is high or the cable length between the user equipment and CTP device is large.

- Related Documentation**
- [Configuring Adaptive Clocking for SAToP Bundles \(CTP Menu\)](#) on page 26
 - [Configuring Adaptive Clocking for SAToP Bundles \(CTPView\)](#) on page 24

Determining Optimal Packet Size for SAToP Bundles Overview

You can specify the size of IP packets that are created from data received at the T1/E1 interface. The CTP device uses packet size along with the interface rate to calculate the packet rate; that is, the rate that packets are created. The maximum packet rate is 1500 packets per second.

To determine the optimal packet size, consider the following:

- Bandwidth for transporting SAToP data
- Packet creation delay
- Performance of the IP network

For example, larger packet sizes are more bandwidth-efficient, but introduce more delay during packet creation.

Bandwidth for Transporting SAToP Data

When considering bandwidth in relation to deciding packet size, add overhead for both the Layer 2 encapsulation and the IP header. The IP header comprises 20 bytes; and the encapsulation overhead varies, but is typically either 6 or 8 bytes on serial links. This overhead causes smaller packets to be less efficient and result in serial data requiring more bandwidth.

Calculate the bandwidth required for a serial bit stream as follows:

$$\text{IP Bandwidth} = [\text{Packet Size (bytes)} + 20 \text{ (bytes for IP header)} + 4 \text{ bytes MPLS} + 4 \text{ bytes GRE} + 4 \text{ (bytes for control word)}] \times [\text{Packet Rate (pps)}] \times 8$$

Packet Creation Delay

Data received at the CTP interface must be buffered long enough to allow a packet to be created. The delay to create the packet increases as either the size of the packet

increases or as the rate of the interface decreases. Generally, this delay is minimal except when the rate of the interface is low and the packet size is large. We recommend that you set the packet size to a smaller value for lower-speed interfaces. Table 1 on page 6 provides examples of interface packet creation delay in milliseconds.

Table 1: Packet Creation Delay for T1/E1 Interfaces

Interface Rate (Kbps)	T1/E1 Interface Delay (msec)					
	Packet Size (bytes)					
	128	256	512	768	1024	1400
1544	0.7	1.3	2.7	4.0	5.3	7.3
2048	.5	1.0	2.0	3.0	4.0	5.5

Performance of the IP Network

The number of packets created (packet rate) is inversely related to the packet size configured. For example, smaller packets result in a greater packet rate. When you configure the packet size, consider the packet-forwarding performance of the attached router and network. Table 2 on page 6 provides examples of packet rates for various packet sizes and serial interface rates.

Table 2: Packet Rate for Various Packet Size and T1/E1 Interface Rate Settings

Interface Rate (Kbps)	Packet Rate (Packets per Second)					
	Packet Size (Bytes)					
	128	256	512	768	1024	1400
1544	1507.8	753.9	277.0	251.3	188.5	137.9
2048	2000.0	1000.0	500.0	333.3	250.0	182.9

- Related Documentation**
- [Configuring IP Parameters for SAToP Bundles \(CTP Menu\) on page 14](#)
 - [Configuring IP Parameters for SAToP Bundles \(CTPView\) on page 12](#)

Providing QoS for SAToP Bundles by Using Service Type Overview

In IP networks, the IP flow is typically classified based on the Differentiated Services Code Point (DSCP) setting in the Type of Service (TOS) byte of the IP header. DSCP is a scalable solution for classifying flows in a large IP network based on the class of service desired on specific IP traffic flows.

With the CTP device, you can configure DSCP settings for each circuit's IP flow. For example, some circuits could be configured for the expedited forwarding (EF) class. When the network routers receive this EF marked flow from the CTP device, they place the marked traffic into a high priority queue, enabling this traffic to be serviced before lower priority traffic. As an EF marked flow transverses the IP network, routers can use

its classification to provide the flow a more predictable level of performance across the network

When you configure the service type of a bundle, you specify the ToS byte to be used in IP headers of packets sent from the CTP device to the IP network. The ToS setting is applied to circuits created by the bundle for which the service type is configured.

Table 3 on page 7 shows the mapping for each DSCP class and setting to the ToS setting that you configure as the service type for a bundle. The expedited forwarding (EF) class (ToS setting 184) is commonly used for circuit traffic.

Table 3: DSCP Classes and Service Type

DSCP Class	DSCP Setting	ToS Setting
CS7	56	224
CS6	48	192
EF	46	184
CS5	40	160
AF43	38	152
AF42	36	144
AF41	34	136
CS4	32	128
AF33	30	120
AF32	28	112
AF31	26	104
CS3	24	96
AF23	22	88
AF22	20	80
AF21	18	72
CS2	16	64
AF13	13	52
AF12	12	48
AF11	10	40

Table 3: DSCP Classes and Service Type (*continued*)

DSCP Class	DSCP Setting	ToS Setting
CS1	8	32

- Related Documentation**
- [Configuring IP Parameters for SAToP Bundles \(CTP Menu\)](#) on page 14
 - [Configuring IP Parameters for SAToP Bundles \(CTPView\)](#) on page 12

PART 2

Configuration

- [Configuring SToP Bundles on page 11](#)

CHAPTER 2

Configuring SAToP Bundles

- Configuring the Default Bundle Data Protocol on the CTP Device (CTP Menu) on page 11
- Configuring IP Parameters for SAToP Bundles (CTPView) on page 12
- Configuring IP Parameters for SAToP Bundles (CTP Menu) on page 14
- Configuring Virtual IP Parameters for SAToP Bundles (CTPView) on page 16
- Configuring Virtual IP Parameters for SAToP Bundles (CTP Menu) on page 17
- Configuring Circuit Restart Parameters for SAToP Bundles (CTPView) on page 18
- Configuring Circuit Restart Parameters for SAToP Bundles (CTP Menu) on page 19
- Configuring the Missing Packet Fill Pattern for SAToP Bundles (CTPView) on page 20
- Configuring the Missing Packet Fill Pattern for SAToP Bundles (CTP Menu) on page 21
- Configuring T1 and E1 Port Parameters for SAToP Bundles (CTPView) on page 21
- Configuring T1 and E1 Port Parameters for SAToP Bundles (CTP Menu) on page 23
- Configuring Adaptive Clocking for SAToP Bundles (CTPView) on page 24
- Configuring Adaptive Clocking for SAToP Bundles (CTP Menu) on page 26

Configuring the Default Bundle Data Protocol on the CTP Device (CTP Menu)

The default bundle data protocol is GRE (47). Before you configure SAToP bundles, you should change the default bundle data protocol to a value other than GRE. Doing so prevents conflict between legacy CTP bundles and SAToP bundles that are using GRE for interoperability.

To configure the default data protocol for bundles from GRE using CTP Menu:

1. From the Main Menu, select **5) Node Operations**.
2. Select **3) Configure network settings**.
3. Select **6) CTP Bndl Data pkt** protocol.

You are notified that changing this parameter requires a system reboot.

4. Enter a number other than 47 as the protocol for data packets.
5. Reboot the CTP device.

Configuring IP Parameters for SAToP Bundles (CTPView)

The CTP software uses the IP parameters to create IP packets.

Before you begin:

- Log in to the CTPView software at least at the Net_Admin level.
- Connect the CTPView server to the CTP device for which you want to configure bundles.
- Disable the bundle before you modify the bundle options.

To configure IP parameters for SAToP bundles using CTPView:

1. In the side pane, select **Bundle > Configuration**.
2. Run your mouse over the **Display and Select an Existing Bundle** bar.
3. In the table of bundles, select the bundle that you want to modify.
4. Under **Bundle Options**, configure the parameters described in Table 4 on page 12, and click **Click to Submit Bundle AND Port Changes**.

Table 4: SAToP Bundle IP Parameter Settings in CTPView

Field	Function	Your Action
Bundle Description	Specifies identifying information about the bundle.	Type a description for the bundle.
State	Specifies whether the bundle is active or disabled.	Select DISABLED or ACTIVE.
Remote Address	Specifies the name and IP address of the remote CTP device.	In the first field, select the CTP device. In the second field, select an interface on the CTP device.
SAToP Circuit ID	If the SAToP protocol is set to UDP, specifies the source UDP port. The source UDP port is used as the circuit identifier; you must configure both circuit endpoints to use the same UDP port. The UDP port must be unique on the CTP device. You will not be able to activate a port if another port is using the same source UDP port number.	Enter a number from 1 through 65535.
Incoming MPLS Label	For SAToP bundles that are using GRE as the transport protocol, specifies the incoming MPLS label. The incoming label must be configured to agree with the remote device. For example, if the outgoing label on the CTP device is 1000002, the outgoing label on the remote device must be set to 1000002.	Enter a number from 299776 through 1048575.

Table 4: SAToP Bundle IP Parameter Settings in CTPView (*continued*)

Field	Function	Your Action
Outgoing MPLS Label	<p>For SAToP bundles that are using GRE as the SAToP protocol, specifies the outgoing MPLS label.</p> <p>The outgoing label must be configured to agree with the remote device. For example, if the outgoing label on the CTP device is 1000001, the incoming label on the remote device must be set to 1000001.</p>	Enter a number from 299776 through 1048575.
Packet Size	<p>Specifies the size of IP packets that are created from data received at the port.</p> <p>The CTP device makes sure that the combination of packet size and data rate does not result in a packet rate that exceeds 1200 packets per second.</p>	Select a packet size. For SAToP bundles, the packet size must be divisible by 32.
Min Buffer	<p>Specifies the minimum average buffer size. Use a value that is greater than the expected jitter and less than the Buffer Set parameter.</p> <p>The minimum buffer ensures that the buffer does not become too small because of timing variances between the local and remote serial interfaces.</p> <p>The entire buffer is available for accommodating and smoothing packet delay jitter, regardless of the minimum buffer setting.</p>	Enter a number from 0.001 through 9999.000 ms.
Buffer Set	<p>Specifies the buffer size when the circuit enters a running state. This value must be large enough to accommodate the anticipated packet delay, and it must be set to a value greater than the minimum buffer size and lower than the maximum buffer size.</p>	Enter a number from 0.001 through 9999.000 ms.
Max Buffer	<p>Specifies the maximum buffer size. The maximum buffer ensures that the buffer does not become too large due to timing variances between the local and remote serial interfaces. If the buffer size exceeds the maximum buffer size, the buffer is recentered to the Buffer Set value.</p> <p>Periodic buffer recenters are not expected. If you notice recenters, we recommend that you verify the reference to the CTP (if used) or that you configure one port with adaptive clocking.</p>	Enter a number from 0.001 through 9999.000 ms.
Service Type	<p>Specifies the ToS byte to be used in the IP headers of packets sent from the CTP device to the IP network.</p> <p>For a mapping of ToS byte values to DSCP classes and settings, see "Providing QoS for SAToP Bundles by Using Service Type Overview" on page 6.</p> <p>You do not need to set the ToS value to the same value on local and remote bundles.</p>	Enter a number from 0 through 255.
Time to Live	<p>Specifies the maximum number of router hops that a packet can traverse. The CTP device sets the TTL value in IP packets that it sends to the IP network. The IP network does not alter or optimize the packet routing based on the TTL setting. You do not need to set the same TTL value on local and remote ports.</p>	Enter a number from 0 through 255.

Table 4: SAToP Bundle IP Parameter Settings in CTPView (*continued*)

Field	Function	Your Action
SAToP Protocol	Specifies the transport protocol that the bundle uses.	Select one: <ul style="list-style-type: none"> GRE UDP
Bundle Description	Specifies identifying information about the bundle.	Type a description for the bundle.

- Related Documentation**
- SAToP Bundle Overview on page 3
 - Determining Optimal Packet Size for SAToP Bundles Overview on page 5

Configuring IP Parameters for SAToP Bundles (CTP Menu)

The CTP software uses the IP parameters to create IP packets.

Before you begin:

- Disable the bundle before you modify the bundle options.

To configure IP parameters for SAToP bundles using the CTP Menu:

1. From the Main Menu, select **1) Bundle Operations**.
2. Select **2) SAToP**.
3. Select a bundle from the list.

If you select an active bundle, you are prompted to disable the bundle before configuring it.

4. Select **2) Config** to configure the bundle.
5. Configure the options as described in Table 5 on page 14.

Table 5: SAToP Bundle IP Parameter Settings in the CTP Menu

Field	Function	Your Action
Remote Address	Specifies the name and IP address of the remote CTP device.	Enter the address of the remote CTP device.
Source UDP Port	For SAToP bundles that are using UDP as the transport protocol, specifies the source UDP port. The source UDP port is used as the circuit identifier; you must configure both circuit endpoints to use the same UDP port. The UDP port must be unique on the CTP device. You will not be able to activate a port if another port is using the same source UDP port number.	Enter a number from 1 through 65535.

Table 5: SAToP Bundle IP Parameter Settings in the CTP Menu (*continued*)

Field	Function	Your Action
Outgoing MPLS Label	<p>For SAToP bundles that are using GRE as the transport protocol, specifies the outgoing MPLS label.</p> <p>This option appears only if you set the transport protocol to GRE.</p> <p>The outgoing label must be configured to agree with the remote device. For example, if the outgoing label on the CTP device is 1000001, the incoming label on the remote device must be set to 1000001.</p>	Enter a number from 299776 through 1000001.
Incoming MPLS Label	<p>For SAToP bundles that are using GRE as the transport protocol, specifies the incoming MPLS label.</p> <p>This option appears only if you set the transport protocol to GRE.</p> <p>The incoming label must be configured to agree with the remote device. For example, if the outgoing label on the CTP device is 1000002, the outgoing label on the remote device must be set to 1000002.</p>	Enter a number from 299776 through 1048575.
Packet Size	<p>Specifies the size of IP packets that are created from data received at the serial port.</p> <p>The CTP device makes sure that the combination of packet size and data rate does not result in a packet rate that exceeds 1200 packets per second.</p>	Enter a number from 32 to 1456.
Min Buffer	<p>Specifies the minimum average buffer size. Use a value that is greater than the expected jitter and less than the Pkt Buffer Set parameter.</p> <p>The minimum buffer ensures that the buffer does not become too small because of timing variances between the local and remote serial interfaces.</p> <p>The entire buffer is available for accommodating and smoothing packet delay jitter, regardless of the minimum buffer setting.</p>	Enter a number from 0.001 through 9999.000 ms.
Pkt Buffer Set	<p>Specifies the buffer size when the circuit enters a running state. This value must be large enough to accommodate the anticipated packet delay, and it must be set to a value greater than the minimum buffer size and lower than the maximum buffer size.</p>	Enter a number from 0.001 through 9999.000 ms.
Max Buffer	<p>Specifies the maximum buffer size. The maximum buffer ensures that the buffer does not become too large due to timing variances between the local and remote serial interfaces. If the buffer size exceeds the maximum buffer size, the buffer is recentered to the Buffer Set value.</p> <p>Periodic buffer recenters are not expected. If you notice recenters, we recommend that you verify the reference to the CTP (if used) or that you configure one port with adaptive clocking.</p>	Enter a number from 0.001 through 9999.000 ms.
Service Type	<p>Specifies the ToS byte to be used in the IP headers of packets sent from the CTP device to the IP network.</p> <p>For a mapping of ToS byte values to DSCP classes and settings, see “Providing QoS for SAToP Bundles by Using Service Type Overview” on page 6.</p> <p>You do not need to set the ToS value to the same value on local and remote bundles.</p>	Enter a number from 0 through 255.

Table 5: SAToP Bundle IP Parameter Settings in the CTP Menu (*continued*)

Field	Function	Your Action
Time to Live	Specifies the maximum number of router hops that a packet can traverse. The CTP device sets the TTL value in IP packets that it sends to the IP network. The IP network does not alter or optimize the packet routing based on the TTL setting. You do not need to set the same TTL value on local and remote ports.	Enter a number from 0 through 255.
Transport	Specifies the transport protocol.	Select one: <ul style="list-style-type: none"> GRE UDP
Bundle Description	Specifies identifying information about the bundle.	Type a description for the bundle.

- Related Documentation**
- SAToP Bundle Overview on page 3
 - Determining Optimal Packet Size for SAToP Bundles Overview on page 5

Configuring Virtual IP Parameters for SAToP Bundles (CTPView)

The virtual IP parameters allow you to use a separate IP address for each bundle and to use an address that is different from the IP address for the CTP device. If you configure the IP address on the:

- Same subnet as CTP IP address, you do not need a static route on the router.
- Different subnet as CTP IP address, you need a static route on the router.

Before you begin:

- Log in to the CTPView software at least at the Net_Admin level.
- Create a list of the virtual IP addresses that will be associated with the CTP device. To do so, select **Node > Maintenance > Configure CTP Device Virtual IPs**, and follow the instructions on the pane. You can create up to 56 virtual IP addresses.

When you submit your new configuration, the CTP device reboots.

- Connect the CTPView server to the CTP device for which you want to configure bundles.
- Disable the bundle before you modify the bundle options.

To configure virtual IP parameters for SAToP bundles using CTPView:

1. In the side pane, select **Bundle > Configuration**.
2. Run your mouse over the **Display and Select an Existing Bundle** bar.
3. In the table of bundles, select the bundle that you want to modify.

4. Under **Bundle Options**, place a check mark in the Advanced Options show check box to display advanced parameters, and configure the parameters described in Table 6 on page 17.
5. Click **Click to Submit Bundle AND Port Changes**.

Table 6: SAToP Bundle Virtual IP Parameter Settings in CTPView

Field	Function	Your Action
Use Virtual IP	<p>Specifies whether or not the bundle uses an address that is different from the IP address of the CTP device.</p> <p>The virtual IP address is used in the IP packet's Origination Address field, and is used for the circuit's data and OAM flow.</p>	<p>Select one:</p> <ul style="list-style-type: none"> • DISABLED—Circuits created by this bundle use the IP address of the CTP device. • ENABLED—Circuits created by this bundle use an address that is different from the CTP device.
Virtual IP [IPv4 only]	Specifies the virtual IP address for circuits created by this bundle.	<p>Enter the virtual IP address.</p> <p>At the remote end of the bundle, specify this IP address as the Remote Address of the bundle.</p>

Related Documentation

- [SAToP Bundle Overview on page 3](#)

Configuring Virtual IP Parameters for SAToP Bundles (CTP Menu)

The virtual IP parameters allow you to use a separate IP address for each bundle and to use an address that is different from the IP address for the CTP device. If you configure the IP address on the:

- Same subnet as the CTP IP address, you do not need a static route on the router.
- Different subnet as the CTP IP address, you need a static route on the router.

Before you begin:

- Create a list of the virtual IP addresses that will be associated with the CTP device. To do so, from the main menu select **Node Operations > Configure network settings > Virtual IP addresses**, and follow the onscreen instructions.

When you submit your new configuration, the CTP device reboots.

- Disable the bundle before you modify the bundle options.

To configure virtual IP parameters for SAToP bundles using the CTP Menu:

1. From the Main Menu, select **1) Bundle Operations**.
2. Select **2) SAToP**.
3. Select a bundle from the list.

If you select an active bundle, you are prompted to disable the bundle before configuring it.

4. Select **2) Config**.
5. Select **10) Advanced Options**.
6. Configure the options as described in Table 7 on page 18.

Table 7: SAToP Bundle Virtual IP Parameter Settings in the CTP Menu

Field	Function	Your Action
Use virtual ip for port	<p>Specifies whether or not the bundle uses an address that is different from the IP address of the CTP device.</p> <p>The virtual IP address is used in the IP packet's Origination Address field, and is used for the circuit's data and OAM flow.</p>	<p>Select one:</p> <ul style="list-style-type: none"> • n (no)—Circuits created by this bundle use the IP address of the CTP device. • y (yes)—Circuits created by this bundle use an address that is different from the CTP device.
Virtual ip for port	Specifies the virtual IP address for circuits created by this bundle.	<p>Select an IP address from the list displayed.</p> <p>At the remote end of the bundle, specify this IP address as the Remote Address of the bundle.</p>

Related Documentation

- SAToP Bundle Overview on page 3

Configuring Circuit Restart Parameters for SAToP Bundles (CTPView)

This topic describes how to configure advanced options that are related to circuit starvation and restart. Set these parameters to the same values on the local and remote CTP devices.

Before you begin:

- Log in to the CTPView software at least at the Net_Admin level.
- Connect the CTPView server to the CTP device for which you want to configure bundles.
- Disable the bundle before you modify the bundle options.

To configure circuit restart parameters for SAToP bundles using CTPView:

1. In the side pane, select **Bundle > Configuration**.
2. Run your mouse over the **Display and Select an Existing Bundle** bar.
3. In the table of bundles, select the bundle that you want to modify.
4. Under **Bundle Options**, place a check mark in the Advanced Options show check box to display advanced parameters, and configure the parameters described in Table 8 on page 19.
5. Click **Click to Submit Bundle AND Port Changes**.

Table 8: SAToP Bundle Advanced Options Parameter Settings for Circuit Restart in CTPView

Field	Function	Your Action
Consecutive Pkt Loss To Starvation	<p>Specifies how many consecutive circuit packets the IP network must drop before the CTP device restarts the circuit.</p> <p>We recommend that you set the parameter to a larger value when the IP network uses packet-encrypting devices. These devices cause momentary interruption in packet flows when encryption keys are updated.</p>	Enter a number from 1 to 64.
InSync Pkts After Starvation	Specifies the number of in-sequence packets the CTP device must receive after a starvation before the circuit transitions from in-sync to running.	Enter a number from 1 to 64.

Configuring Circuit Restart Parameters for SAToP Bundles (CTP Menu)

This topic describes how to configure advanced options that are related to circuit starvation and restart. Set these parameters to the same values on the local and remote CTP devices.

Before you begin:

- Disable the bundle before you modify the bundle options.

To configure circuit restart parameters using the CTP Menu:

1. From the Main Menu, select **1) Bundle Operations**.
2. Select **2) SAToP**.
3. Select a bundle from the list.

If you select an active bundle, you are prompted to disable the bundle before configuring it.

4. Select **2) Config**.
5. Select **10) Advanced Options**.
6. Configure the options as described in Table 9 on page 19.

Table 9: SATOP Bundle Advanced Options Parameter Settings for Circuit Restart in the CTP Menu

Field	Function	Your Action
Consecutive pkts loss to starve	<p>Specifies how many consecutive circuit packets the IP network must drop before the CTP device restarts the circuit.</p> <p>We recommend that you set the parameter to a larger value when the IP network uses packet-encrypting devices. These devices cause momentary interruption in packet flows when encryption keys are updated.</p>	Enter a number from 1 through 64.

Table 9: SATOP Bundle Advanced Options Parameter Settings for Circuit Restart in the CTP Menu (continued)

Field	Function	Your Action
In sequence pkts after starve	Specifies the number of in-sequence packets the CTP device must receive after a starvation before the circuit transitions from in-sync to running.	Enter a number from 1 through 64.

Related Documentation

- SAToP Bundle Overview on page 3

Configuring the Missing Packet Fill Pattern for SAToP Bundles (CTPView)

This topic describes how to specify the fill pattern that the CPT device inserts when IP packets are dropped.

Before you begin:

- Log in to the CTPView software at least at the Net_Admin level.
- Connect the CTPView server to the CTP device for which you want to configure bundles.
- Disable the bundle before you modify the bundle options.

To configure the missing packet fill pattern for SAToP bundles using CTPView:

1. In the side pane, select **Bundle > Configuration**.
2. Run your mouse over the **Display and Select an Existing Bundle** bar.
3. In the table of bundles, select the bundle that you want to modify.
4. Under **Bundle Options**, place a check mark in the Advanced Options show check box to display advanced parameters, and configure the parameters described in Table 10 on page 20.
5. Click **Click to Submit Bundle AND Port Changes**.

Table 10: SAToP Bundle Missing Packet Fill Pattern Parameter Setting in CTPView

Field	Function	Your Action
Missing Packet Fill Pattern	Specifies the data that the CTP device inserts into the circuit bit stream when an IP packet is dropped. The number of bits inserted is equal to the number of bits in the missed packet. This data insertion method prevents a loss of bit count integrity to attached circuit devices and encryptors.	Enter two hexadecimal digits. You must enter a value other than ff. This field does not require the 0x characters.

Configuring the Missing Packet Fill Pattern for SAToP Bundles (CTP Menu)

This topic describes how to specify the fill pattern that the CPT device inserts when IP packets are dropped.

Before you begin:

- Disable the bundle before you modify the bundle options.

To configure the missing packet fill pattern for SAToP bundles using the CTP Menu:

1. From the Main Menu, select **1) Bundle Operations**.
2. Select **1) CTP**.
3. Select a bundle from the list.

If you select an active bundle, you are prompted to disable the bundle before configuring it.

4. Select **2) Config**.
5. Select **10) Advanced Options**.
6. Configure option **3) Missing pkt fill pattern** as described in Table 11 on page 21.

Table 11: SAToP Bundle Missing Packet Fill Pattern Parameter Setting in the CTP Menu

Field	Function	Your Action
Missing pkt fill pattern	Specifies the data that the CTP device inserts into the circuit bit stream when an IP packet is dropped. The number of bits inserted is equal to the number of bits in the missed packet. This data insertion method prevents a loss of bit count integrity to attached circuit devices and encryptors.	Enter two hexadecimal digits. You must enter a value other than ff. This field does not require the 0x characters.

Configuring T1 and E1 Port Parameters for SAToP Bundles (CTPView)

This topic describes how to configure port parameters for T1/E1 interfaces.

Before you begin:

- Log in to the CTPView software at least at the Net_Admin level.
- Connect the CTPView server to the CTP device for which you want to configure bundles.
- Disable the bundle before you modify the bundle options.

To configure T1 and E1 port parameters for SATop Bundles using CTPView:

1. In the side pane, select **Bundle > Configuration**.
2. Run your mouse over the **Display and Select an Existing Bundle** bar.

3. In the table of bundles, select the bundle that you want to modify.
4. Under **Bundle Options**, configure the parameters described in Table 12 on page 22, and click **Click to Submit Bundle AND Port Changes**.

Table 12: SAToP Bundle T1 and E1 Port Parameter Settings in CTPView

Field	Function	Your Action
Port Description	Specifies a description for the port.	Enter a description of up to 62 alphanumeric characters. Do not use the following characters: (; ' ")]
T1/E1 Choice	Specifies the type of interface.	Select one: <ul style="list-style-type: none"> • T1 • E1
T1 Line Coding	For T1 interfaces, specifies the T1 encoding method used on this bundle.	Select one: <ul style="list-style-type: none"> • B8ZS • AMI
E1 Connector Type	For E1 interfaces, configures the termination to work with either coax or RJ-48.	Select one: <ul style="list-style-type: none"> • RJ48 • COAX
Line Buildout	For T1 interfaces, specifies the line buildout. This option is supported only on IM-8P-T1/E1 interface modules.	Select one: <ul style="list-style-type: none"> • ~133 ft • ~266 ft • ~399 ft • ~533 ft • ~655 ft • -7.5dB CSU • -15dB CSU • -22.5dB CSU
Clock Cfg	Specifies the type of clocking for the port.	Select one: <ul style="list-style-type: none"> • CTP is Clock Source—PBX either returns the clock received from the CTP device, or it returns a clock that is traceable to the same source as the CTP node clock reference. You typically use this configuration when you configure the CTP device with a clock reference input. • CTP is Looped Timed—PBX provides the clock, and the CTP device returns the same clock to the PBX. You typically use this configuration when the PBX has the more accurate clock source. You can configure the far end of the circuit with adaptive clocking to recover this clock if necessary. • CTP is Clock Source – Adap—PBX returns the clock received from the CTP device, and the CTP device uses the adaptive recovered clock. You typically use this configuration when the CTP device does not have a reference input and the PBX typically requires a clock from the distant PBX.

Related Documentation

- SAToP Bundle Overview on page 3

Configuring T1 and E1 Port Parameters for SAToP Bundles (CTP Menu)

This topic describes how to configure port parameters for T1/E1 interfaces.

Before you begin:

- Disable the bundle before you modify the bundle options.

To configure port parameters for T1/E1 interfaces or daughter cards for SAToP bundles using the CTP Menu:

1. From the Main Menu, select **1) Bundle Operations**.
2. Select **2) SAToP**.
3. Select a bundle from the list.

If you select an active bundle, you are prompted to disable the bundle before configuring it.
4. Select **3) Port Config**.
5. If you are using a T1/E1 daughter card installed on a serial interface, select **1) Type**, and set the type to **Optional Interface: T1/E1**.
6. Follow the onscreen instructions, and configure the options as described in Table 13 on page 23.

The options vary depending on whether the bundle is T1 or E1.

Table 13: SAToP Bundle T1/E1 Port Parameter Settings in the CTP Menu

Field	Function	Your Action
Port descriptor	Specifies a description for the port.	Enter a description of up to 62 alphanumeric characters. Do not use the following characters: (; ' ")]
Type	Specifies the type of interface.	Select one: <ul style="list-style-type: none"> • T1 • E1
Option (for T1)	Specifies the T1 encoding method used on this bundle.	Select one: <ul style="list-style-type: none"> • B8ZS • AMI
Option (for E1)	For E1 interfaces, configure the termination to work with either coax or RJ-48.	Select one: <ul style="list-style-type: none"> • RJ48 • COAX

Table 13: SAToP Bundle T1/E1 Port Parameter Settings in the CTP Menu (*continued*)

Field	Function	Your Action
BuildOut	For T1 interfaces, specifies the line buildout. This option is supported only on IM-8P-T1/E1 interface modules.	Select one: <ul style="list-style-type: none"> • 0) ~133 ft • 1) ~266 ft • 2) ~399 ft • 3) ~533 ft • 4) ~655 ft • 5) -7.5dB CSU • 6) -15dB CSU • 7) -22.5d BCSU
Clock synthesizer	The following clock synthesizer settings are set by the software, and you cannot change them: <ul style="list-style-type: none"> • For T1, the clock synthesizer is set to 1544 KHz. • For E1 the clock synthesizer is set to 2048 KHz. 	
Clock Config	Specifies the type of clocking for the port.	Select one: <ul style="list-style-type: none"> • CTP is Clock Source—PBX either returns the clock received from the CTP device, or it returns a clock that is traceable to the same source as the CTP node clock reference. You typically use this configuration when you configure the CTP device with a clock reference input. • CTP is Loop Timed—PBX provides the clock, and the CTP device returns the same clock to the PBX. You typically use this configuration when the PBX has the more accurate clock source. You can configure the far end of the circuit with adaptive clocking to recover this clock if necessary. • CTP is Clock Source (Adaptive End)—PBX returns the clock received from the CTP device, and the CTP device uses the adaptive recovered clock. You typically use this configuration when the CTP device does not have a reference input and the PBX typically requires clock from the distant PBX.

Related Documentation

- SAToP Bundle Overview on page 3

Configuring Adaptive Clocking for SAToP Bundles (CTPView)

If you specify that the SAToP bundle uses the CTP as the clock source with the CTP as the adaptive end, you can modify attributes that affect the adaptive clocking algorithm. However, the default settings are acceptable for most applications. We recommend that you change these settings only with the assistance of JTAC.

Before you begin:

- Log in to the CTPView software at least at the Net_Admin level.

- Connect the CTPView server to the CTP device for which you want to configure bundles.
- Disable the bundle before you modify the bundle options.

To configure adaptive clocking for SAToP bundles using CTPView:

1. In the side pane, select **Bundle > Configuration**.
2. Run your mouse over the **Display and Select an Existing Bundle** bar.
3. In the table of bundles, select the bundle that you want to modify.
4. Under **Bundle Options**, configure the parameters described in Table 14 on page 25, and click **Click to Submit Bundle AND Port Changes**.

Table 14: SAToP Bundle Adaptive Clocking Settings in CTPView

Field	Function	Your Action
Initialize Adaptive Settings	Sets the adaptive clocking configuration to the default settings.	Place a check mark in the Yes check box.
Aggressive Calc Period	Specifies the time period during initial start of adaptive clocking, during which packet samples that are experiencing the least delay through the network are collected. These samples are used for aggressive state calculations.	Enter a number from 3 through 200 sec.
Maintenance Calc Period	Specifies the time period during normal adaptive clocking during which packet samples that are experiencing the least delay through the network are collected. These samples are used for maintenance state calculations.	Enter a number from 3 through 300 sec.
Slope for Maintenance	Specifies the number of packets per minute, which when reached, causes the adaptive clocking algorithm to change from aggressive state to maintenance state. Lower values result in longer switchover times with a clock value closer to the remote clock.	Enter a number from 1 through 100 packets per minute.
Maintenance Decay	Specifies how quickly the clocking corrects to the buffer set point while in maintenance state.	Enter a number from 2 though 120 sec.
Max Clock Adjustment Value	Specifies a cap for frequency acceleration, which constrains the frequency adjustments to the adaptive clock.	Enter a number from 1 through 200 parts per billion.
Max Clock Offset	Specifies a cap for frequency velocity, which constrains the frequency velocity of the adaptive clock.	Enter a number from 1 through 400 packets per minute.
Max Buffer Error	Specifies the buffer error rate required to change the adaptive clocking algorithm state from maintenance to aggressive.	Enter a number from 100 through 1,000,000 sec.

Related Documentation

- Adaptive Clocking for SAToP Bundles Overview on page 4
- SAToP Bundle Overview on page 3

Configuring Adaptive Clocking for SAToP Bundles (CTP Menu)

If you specify that the SAToP bundle uses the CTP as the clock source with the CTP as the adaptive end, you can modify attributes that affect the adaptive clocking algorithm. However, the default settings are acceptable for most applications. We recommend that you change these settings only with the assistance of JTAC.

Before you begin:

- Disable the bundle before you modify the bundle options.

To configure adaptive clocking for SAToP bundles using the CTP Menu:

1. From the Main Menu, select **1) Bundle Operations**.
2. Select **2) SAToP**.
3. Select a bundle from the list.

If you select an active bundle, you are prompted to disable the bundle before configuring it.

4. Select **3) Port Config**.
5. Select **3) Clock Config**.
6. Select **3) CTP is Clock Source (Adaptive End)**.
7. Select **4) Set Adaptive Parameters**.
8. Configure the options as described in Table 15 on page 26.

Table 15: SAToP Bundle Adaptive Clocking Settings in the CTP Menu

Field	Function	Your Action
Set to Defaults	Sets the adaptive clocking configuration to the default settings.	Select Set to Defaults .
AGGR Seconds/Calc	Specifies the time period during initial start of adaptive clocking, during which packet samples that are experiencing the least delay through the network are collected. These samples are used for aggressive state calculations.	Enter a number from 3 through 200 sec.
MNTN Seconds/Calc	Specifies the time period during normal adaptive clocking during which packet samples that are experiencing the least delay through the network are collected. These samples are used for maintenance state calculations.	Enter a number from 3 through 300 sec.
Slope for MNTN in ppm	Specifies the number of packets per minute, which when reached, causes the adaptive clocking algorithm to change from aggressive state to maintenance state. Lower values result in longer switchover times with a clock value closer to the remote clock.	Enter a number from 1 through 100 packets per minute.
Maintenance Decay in calcs	Specifies how quickly the clocking corrects to the buffer set point while in maintenance state.	Enter a number from 2 though 120 sec.

Table 15: SAToP Bundle Adaptive Clocking Settings in the CTP Menu (*continued*)

Field	Function	Your Action
Max Clock Adjust in ppb	Specifies a cap for frequency acceleration, which constrains the frequency adjustments to the adaptive clock.	Enter a number from 1 through 1000 parts per billion.
Max Clock Offset in ppm	Specifies a cap for frequency velocity, which constrains the frequency velocity of the adaptive clock.	Enter a number from 1 through 400 packets per minute.
Max Buffer Error in usec	Specifies the buffer error rate required to change the adaptive clocking algorithm state from maintenance to aggressive.	Enter a number from 100 through 1,000,000 sec.

- Related Documentation**
- Adaptive Clocking for SAToP Bundles Overview on page 4
 - SAToP Bundle Overview on page 3

PART 3

Example

- Example: Using SAToP Bundles to Interoperate with M Series Multiservice Edge Routers on page 31

CHAPTER 3

Example: Using SAToP Bundles to Interoperate with M Series Multiservice Edge Routers

- Example: CTP Interoperability with M Series T1/E1 Circuit Emulation PICs on page 31

Example: CTP Interoperability with M Series T1/E1 Circuit Emulation PICs

This example describes how to configure an M Series router and a CTP device to create a T1 SAToP circuit that can interoperate between the router and the CTP device. Topics include:

- Requirements on page 31
- Overview and Topology on page 31
- Configuration on page 33
- Verification on page 40

Requirements

This example uses the following software and hardware components:

- Juniper Networks CTP150 or CTP2000 Circuit to Packet platform with a T1/E1 interface or a serial interface with a T1/E1 daughter card
- CTPOS 6.0 or later
- Juniper Networks M Series Multiservice Edge Router with the following:
 - PB-12T1E1-CE-TELCO 12-port discrete T1/E1 Telco connector
 - PB-TUNNEL-1 PIC

Overview and Topology

The topology used in this example consists of an M Series router used as the provider edge (PE) router and a CTP device at the customer edge (CE).

- On the router, you configure a Layer 2 circuit that provides a point-to-point Layer 2 connection transported by means of MPLS. It is represented by a logical interface that

connects the router (PE) to the CTP device (CE). You configure the Layer 2 circuit as a static Layer 2 circuit pseudowire that has static values for the incoming and outgoing MPLS labels needed to enable the pseudowire connection. You then configure a GRE tunnel that is used to transport the Layer 2 circuit.

- On the CTP device, you configure a SAToP bundle that has the remote address of the Layer 2 circuit on the router and the incoming and outgoing MPLS labels that correspond to the labels configured on the router. GRE is used as the transport protocol for the SAToP bundle.

Figure 2 on page 32 shows the topology for this example.

Figure 2: Network Topology for a T1 SAToP Circuit between a CE PIC and a CTP Device

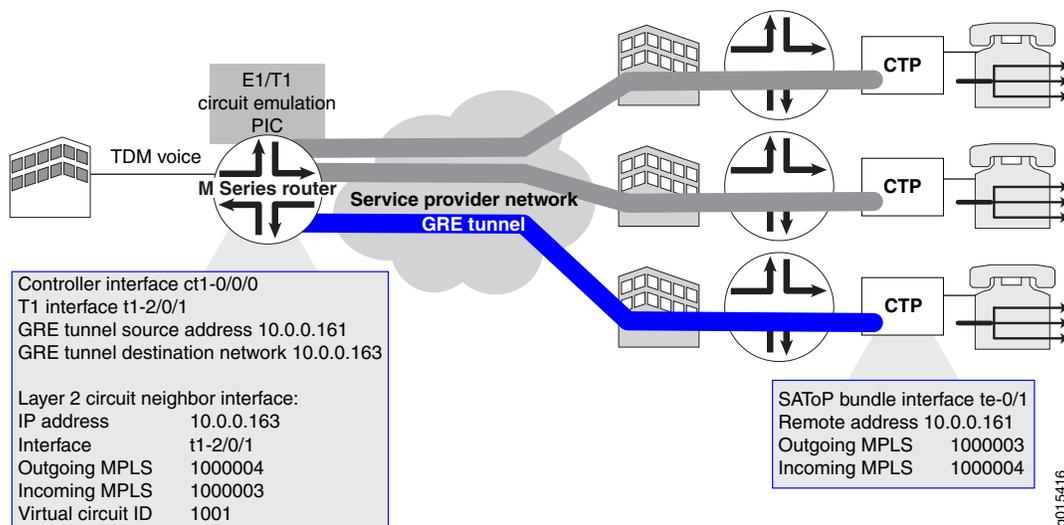


Table 16 on page 32 shows the configuration of the SAToP bundle on the CTP device and the configuration of the M Series router.

Table 16: Configuration Components for CTP Interoperability with M Series T1/E1 Circuit Emulation PIC

Device	Property	Setting
CTP Platform SAToP Bundle	Interface	te-0/1
	Remote address	10.0.0.161
	Outgoing MPLS label	1000003
	Incoming MPLS label	1000004
	Transport protocol	GRE

Table 16: Configuration Components for CTP Interoperability with M Series T1/E1 Circuit Emulation PIC (*continued*)

Device	Property	Setting	
Router	Controller interface	ct1-0/0/0	
	T1 interface	t1-2/0/1	
	GRE tunnel source address	10.0.0.161	
	GRE tunnel destination network	10.0.0.163	
	Layer 2 circuit neighbor interface:		
	IP address	10.0.0.163	
	Interface	t1-2/0/1	
	Outgoing MPLS label	1000004	
	Incoming MPLS label	1000003	
	Virtual circuit ID	1001	

Configuration

In this example, the CTP device is configured using CTP Menu.

To configure the CTP device and the router, perform these tasks:

- Configuring the Default Bundle Data Protocol on the CTP Device on page 34
- Creating a SAToP Bundle on the CTP Device on page 34
- Configuring the Port Settings for the SAToP Bundle on the CTP Device on page 35
- Configuring the Bundle Settings for the SAToP Bundle on the CTP Device on page 35
- Configuring the Controller Interface on the Router on page 36
- Configuring SAToP Emulation on the T1 interface on the Router on page 36
- Enabling MPLS on the T1 Interface on the Router on page 38
- Configuring the Static Layer 2 Circuit on the Router on page 38
- Configuring the GRE Tunnel on the Router on page 39
- Activating the SAToP Bundle on the CTP Device on page 40

Configuring the Default Bundle Data Protocol on the CTP Device

Step-by-Step Procedure The default bundle data protocol is GRE (47). Before you configure SAToP bundles, you should change the default bundle data protocol to a value other than GRE. Doing so prevents conflict between legacy CTP bundles and SAToP bundles that are using GRE for interoperability.

To configure the default data protocol for bundles to a value other than GRE using CTP Menu:

1. From the Main Menu, select **5) Node Operations**.
2. Select **3) Configure network settings**.
3. Select **6) CTP Bndl Data pkt** protocol.

You are notified that changing this parameter requires a system reboot.

4. Enter **46** as the protocol for data packets.
5. Reboot the system.

Results Please select a number from the following list:

```

-----
0) Back to Previous Menu
1) Supported Protocols:      IPv4&IPv6
2) IPv4 Configuration
3) IPv6 Configuration
4) Virtual IP addresses
5) OAM port (IPv4):         16
6) CTP Bndl Data pkt protocol: 46
7) CTP Bndl OAM port (IPv6): 32
8) VLAN Configuration
9) Current Configuration (active on reboot)
10) Port operations (PBS/bridge)
11) Config port operational mode (CE/PBS/bridge)
12) Config access ip filtering
13) SNMP Configuration
----- Your choice [0]:

```

Creating a SAToP Bundle on the CTP Device

Step-by-Step Procedure To create a SAToP bundle:

1. From the Main Menu, select **1) Bundle Operations**.
2. Select **2) SAToP**.
3. Enter **add**, and select a T1/E1 interface or select a serial interface that has a T1/E1 daughter card.

The CTP device creates a new SAToP bundle.

Configuring the Port Settings for the SAToP Bundle on the CTP Device

Step-by-Step Procedure

To configure the port settings:

1. From the Main Menu, select **3) Port Config**.
2. Select **2) Interface**.
3. Select **1) Type**, and set the type to **T1** or (for daughter cards) to **Optional Interface: T1/E1**
4. Select **2) Option** and select **B8ZS**.
5. Select **3) Clock Config** and select **1) CTP is Clock Source**.

Results

```
=====
= (g74 04/20/10 18:51:58 GMT) | Config Menu for Port te-0/1
=====

Please select a number from the following list:
-----
0) Back to Previous Menu
1) Port descriptor text:
2) Interface:          T1-B8ZS
3) Clock Config:      CTP is Clock Source
----- Your choice [2]:
```

Configuring the Bundle Settings for the SAToP Bundle on the CTP Device

Step-by-Step Procedure

To configure the bundle settings:

1. From the Main Menu, select **3) Port Config**.
2. Select **10) Transport** and set the transport protocol to GRE.
3. Select **1) Remote Address** and specify the remote circuit IP address 10.0.0.161.
4. Select **2) Outgoing MPLS Label**, and set the outgoing label to 1000003.
5. Select **3) Incoming MPLS Label**, and set the incoming MPLS label to 1000004.
6. Select **4) Packet Size**, and set the packet size. We recommend that you set the packet size to 1024 bytes or higher to reduce the overhead associated with the headers and to reduce the packet size. SAToP requires that both endpoints are configured to use the same packet payload size.

Results

```
=====
= (g74 04/20/10 19:01:42 GMT) | Config Menu for Bundle 1
= Bundle type: SAToP | Bundle source is Port te-0/1
= Bundle description:
=====

Please select a number from the following list:
-----
0) Back to Previous Menu
1) Remote Address:      10.0.0.1
2) Outgoing MPLS Label: 1000003
3) Incoming MPLS Label: 1000004
```

```

4) Packet Size:          1024
5) Min Buffer (ms):      8.000
6) Pkt Buffer Set (ms):  12.000
7) Max Buffer (ms):      16.000
8) Service Type:         0
9) Time to Live:         255
10) Transport:           GRE
11) Advanced Options...
12) Bundle descriptor text:
----- Your choice [10]:
8

```

Configuring the Controller Interface on the Router

CLI Quick Configuration To quickly configure the controller interface, copy the following commands and paste them into the router terminal window:

```

[edit]
edit interfaces ct1-0/0/0
set clocking internal
set no-partition interface-type t1

```

Step-by-Step Procedure To configure a controller interface:

1. Create the controller interface.

```

[edit]
user@sp-router# edit interfaces ct1-0/0/0

```

2. Set the clocking to internal.

```

[edit interfaces ct1-0/0/0]
user@sp-router# set clocking internal

```

3. Specify that the controller interface is unpartitioned, and specify the interface type.

```

[edit interfaces ct1-0/0/0]
user@sp-router# set no-partition interface-type t1

```

Configuration Results Display the results of the configuration.

```

[edit interfaces]
user@sp-router# show
ct1-0/0/0 {
  clocking internal;
  no-partition interface-type t1;
}

```

Configuring SAToP Emulation on the T1 interface on the Router

CLI Quick Configuration To quickly configure SAToP Emulation on the T1 interface, copy the following commands and paste them into the router terminal window:

```

[edit]
edit interfaces t1-2/0/1
set encapsulation satop
set unit 0
set satop-options payload-size 1024

```

```
set satop-options jitter-buffer-packets 8
set clocking internal
```

Step-by-Step Procedure

To configure the T1 interface:

1. Create the T1 interface.


```
[edit]
user@sp-router# edit interfaces t1-2/0/1
```
2. Set the encapsulation type to SAToP.


```
[edit interfaces t1-2/0/1]
user@sp-router# set encapsulation satop
```
3. Specify the unit number.


```
[edit interfaces t1-2/0/1]
user@sp-router# set unit 0
```
4. Specify the payload size, in bytes. We recommend that you set the packet payload size to 1024 bytes or higher to reduce the overhead associated with the headers and to reduce the packet size. SAToP requires that both endpoints are configured to use the same packet payload size.


```
[edit interfaces t1-2/0/1]
user@sp-router# set satop-options payload-size 1024
```
5. Specify the number of packets in the jitter buffer.


```
[edit interfaces t1-2/0/1]
user@sp-router# set satop-options jitter-buffer-packets 8
```
6. Set clocking to internal.


```
[edit interfaces t1-2/0/1]
user@sp-router# set clocking internal
```

Configuration Results Display the results of the configuration.

```
[edit interfaces]
user@sp-router# show
ct1-0/0/0 {
  clocking internal;
  no-partition interface-type t1;
}
t1-2/0/1 {
  satop-options {
    payload-size 1024;
    jitter-buffer-packets 8;
  }
  clocking internal;
  encapsulation satop;
  unit 0;
}
```

Enabling MPLS on the T1 Interface on the Router

CLI Quick Configuration To quickly enable MPLS on the T1 interface, copy the following commands and paste them into the router terminal window:

```
[edit]
edit protocols
set mpls interface t1-2/0/1
```

Step-by-Step Procedure To enable MPLS on the T1 interface:

1. Access the protocol configuration.

```
[edit]
user@sp-router# edit protocols
```

2. Enable MPLS on the T1 interface.

```
[edit protocols]
user@sp-router# set mpls interface t1-2/0/1
```

Configuration Results Display the results of the configuration.

```
[edit protocols]
user@sp-router# show
mpls {
  interface t1-2/0/0.1;
}
```

Configuring the Static Layer 2 Circuit on the Router

CLI Quick Configuration To quickly configure the Layer 2 circuit, copy the following commands and paste them into the router terminal window:

```
[edit]
edit protocols l2circuit
edit neighbor 10.0.0.163
edit interface t1-2/0/1
set static incoming-label 1000003
set static outgoing-label 1000004
set virtual-circuit-id 1001
```

Step-by-Step Procedure To configure a static Layer 2 circuit:

1. Create the Layer 2 circuit.

```
[edit]
user@sp-router# edit protocols l2circuit
```

2. Create the neighbor interface for the Layer 2 circuit.

```
[edit protocols l2circuit]
user@sp-router# edit neighbor 10.0.0.163
user@sp-router# edit interface t1-2/0/1
```

3. Configure static values for the in and out labels needed to enable the pseudowire connection.

```
[edit protocols l2circuit neighbor 10.0.0.163 interface t1-2/0/0.1]
user@sp-router# set static incoming-label 1000003
user@sp-router# set static outgoing-label 1000004
```

- Specify the virtual circuit identifier.

```
[edit protocols l2circuit neighbor 10.0.0.163 interface t1-2/0/0.1]
user@sp-router# set virtual-circuit-id 1001
```

Configuration Results Display the results of the configuration.

```
[edit protocols l2circuit]
user@sp-router# show
neighbor 10.0.0.163 {
  interface t1-2/0/1.0 {
    static {
      incoming-label 1000003;
      outgoing-label 1000004;
    }
    virtual-circuit-id 1001;
  }
}
```

Configuring the GRE Tunnel on the Router

CLI Quick Configuration To quickly configure the GRE tunnel, copy the following commands and paste them into the router terminal window:

```
[edit]
edit routing-options
edit dynamic-tunnels gre-ctp
set gre
set source-address 10.0.0.161
set destination-networks 10.0.0.163/32
```

Step-by-Step Procedure To configure a GRE tunnel:

- Create a dynamic tunnel.

```
[edit]
user@host# edit routing-options
user@host# edit dynamic-tunnels gre-ctp
```

- Specify the type of tunnel.

```
[edit routing-options dynamic-tunnels gre-ctp]
user@host# set gre
```

- Specify the source address for the GRE tunnel. The source address is used as the source for the local tunnel endpoint.

```
[edit routing-options dynamic-tunnels gre-ctp]
user@host# set source-address 10.0.0.161
```

- Specify the IPv4 prefix range for the destination network. Only tunnels within the specified IPv4 prefix range can be created.

```
[edit routing-options dynamic-tunnels gre-ctp]
```

```
user@host# set destination-networks 10.0.0.163/32
```

Configuration Results Display the results of the configuration.

```
[edit routing-options]
user@sp-router# show
dynamic-tunnels {
  gre-ctp {
    source-address 10.0.0.161;
    gre;
    destination-networks {
      10.0.0.163/32;
    }
  }
}
```

Activating the SAToP Bundle on the CTP Device

Step-by-Step Procedure To activate the SAToP bundle

1. From the Main Menu, select **1) Bundle Operations**.
2. Select **2) SAToP**.
3. Select the SAToP bundle from the list.
4. Select **4) Activate**.
5. Verify that you want to activate the bundle.

Verification

To confirm that the configuration is working properly, perform these tasks:

- Verifying the SAToP Circuit Using a Node Summary on the CTP Device on page 40
- Verifying the SAToP Circuit Using a Bundle Query on the CTP Device on page 41
- Verifying That the GRE Route is Added to Routing Table on Router on page 42
- Verifying the Layer 2 Circuit Connections on Router on page 42

Verifying the SAToP Circuit Using a Node Summary on the CTP Device

Purpose Verify that the circuit is running.

Action From the Main Menu of CTP Menu, select **3) Node Summary**

```
CTP Code version      : 6.0R1 100325 (Compile Time 09:18:24 AM)
```

```
>>>> Circuit Emulation Bundles <<<<<
Bnd1 Bnd1Typ  Port    TS      RemAddr  CID    LCID RunState RCtr
=====
  0   SAToP  te-0/0  N/A     10.0.0.161 1000003 1000004  RUNNING  0
=====
```

```
Checked out PPS - All Bundles: 376, System Maximum: 12500
```

(1 PPS = full duplex packet transfer, Bundle <--> IP network)

Meaning The display shows that the SAToP bundle is in the **RUNNING** state.

Verifying the SAToP Circuit Using a Bundle Query on the CTP Device

Purpose Verify that the circuit is running.

Action From the Main Menu of CTP Menu, select 1) **Query**

```
##### Bundle 0 type   SAToP #####
##### Bundle 0 is transporting Port te-0/0 #####

----- Bundle 0 Config -----
DBase State:          ACTIVE
Remote Addr:          10.0.0.161
Outgoing MPLS Label: 1000003
Incoming MPLS Label: 1000004
Using Virtual IP:     10.0.0.163
Packet size:          512
Buf Max/Set/Min(ms): 24.000/16.000/8.000
IP Hdr TOS:           0 (decimal)
Port(s) in bundle:    te-0/0
Bndl Config Flags:    TunGRE

----- Port te-0/0 Config -----
Interface type:       T1-B8ZS
Framing type:         N/A
Line Buildout:        ~133 ft
Clock Config:         CTP is Clock Source (Adaptive End)

Hit Carriage Return to Continue...

----- Bundle 0 State -----
Run State:            RUNNING
T1E1 flags:           No_Alarm
Adaptive State:       Maintain (20 us)
Adap Recovered Freq: 1544.009918 kHz
Checked out PPS:      Bndl: 376, All Bndl: 376, Sys Max: 12500

----- Bundle 0 Counters -----
I/F bound packets:   358288
NET bound packets:   358288
Late pkts:           0
Missing pkts:         0
Buffer restarts:      0
Buffer underflows:    0
Buffer overflows:     0
Buffer starves:       0
Buffer max samples:   377
Buff Max/Avg/Min:     16.25/16.24/15.54
Buff Last Minute:     16.25/16.24/15.56
Last counter clear:   0wk, 0d, 0h, 15m, 51s
```

Meaning The display shows that the SAToP bundle is in the **ACTIVE** state and that the run state is **RUNNING**.

Verifying That the GRE Route is Added to Routing Table on Router

Purpose Verify that the GRE route has been added to the inet.3 routing table.

Action

```
user@host> show route 10.0.0.163
inet.3: 2 destinations, 3 routes (2 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

10.0.0.163/32      *[Tunnel/300] 05:35:04
                  > via gr-2/3/0.32769
                  [Tunnel/300] 7w0d 03:12:32
                  Tunnel
```

Meaning The display shows that

Verifying the Layer 2 Circuit Connections on Router

Purpose Verifying that the Layer 2 circuit connections are running on the router.

Action

```
user@host> show l2circuit connections
Layer-2 Circuit Connections:

Legend for connection status (St)
EI -- encapsulation invalid      NP -- interface h/w not present
MM -- mtu mismatch              Dn -- down
EM -- encapsulation mismatch    VC-Dn -- Virtual circuit Down
CM -- control-word mismatch     Up -- operational
VM -- vlan id mismatch         CF -- Call admission control failure
OL -- no outgoing label        IB -- TDM incompatible bitrate
NC -- intf encaps not CCC/TCC  TM -- TDM misconfiguration
BK -- Backup Connection        ST -- Standby Connection
CB -- rcvd cell-bundle size bad SP -- Static Pseudowire
LD -- local site signaled down  RS -- remote site standby
RD -- remote site signaled down XX -- unknown

Legend for interface status
Up -- operational
Dn -- down
Neighbor: 10.0.0.163
Interface          Type St   Time last up      # Up trans
t1-2/0/1.0(vc 1001)(SP) rmt  Up    Apr 20 14:06:12 2010      1
Remote PE: 10.0.0.163, Negotiated control-word: Yes (Non-null)
Incoming label: 1000003, Outgoing label: 1000004
Negotiated PW status TLV: No
Local interface: t1-2/0/1.0, Status: Up, Encapsulation: SATOP-T1
```

Meaning The display shows that the Layer 2 circuit connection to neighbor 10.0.0.163 is up.

Related Documentation

- SAToP Interoperability with M Series E1/T1 Circuit Emulation PICs Overview on page 4
- SAToP Bundle Overview on page 3