Juniper Networks | Engineering Simplicity

Junos® OS

Chassis-Level User Guide

Published
2022-09-19

JUNOS

Juniper Networks, Inc.
1133 Innovation Way
Sunnyvale, California 94089
USA
408-745-2000
www.juniper.net

Juniper Networks, the Juniper Networks logo, Juniper, and Junos are registered trademarks of Juniper Networks, Inc. in the United States and other countries. All other trademarks, service marks, registered marks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

Junos® OS Chassis-Level User Guide
Copyright © 2022 Juniper Networks, Inc. All rights reserved.

The information in this document is current as of the date on the title page.

YEAR 2000 NOTICE

Juniper Networks hardware and software products are Year 2000 compliant. Junos OS has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

END USER LICENSE AGREEMENT

The Juniper Networks product that is the subject of this technical documentation consists of (or is intended for use with) Juniper Networks software. Use of such software is subject to the terms and conditions of the End User License Agreement ("EULA") posted at https://support.juniper.net/support/eula/. By downloading, installing or using such software, you agree to the terms and conditions of that EULA.

Table of Contents

About This Guide | xvi

1 **Overview**

Chassis-Level Features Overview | 2

2 **MPC-specific**

Upgrading or Downgrading MPCs (MPC8E and JNP10K-LC2101) | 4

Upgrading MPC8E to Provide Increased Bandwidth | **4**

Downgrading JNP10K-LC2101 to Provide Decreased Bandwidth | **5**

Configuring Line Card Interoperability | 6

Interoperability of Type 3 FPCs and Type 4 FPCs with Type 5 FPCs | **6**

Configuring 100-Gigabit Ethernet MICs to Interoperate with Type 4 100-Gigabit Ethernet PICs (PD-1CE-CFP-FPC4) Using SA Multicast Mode | **7**

Interoperability Between MPC4E (MPC4E-3D-2CGE-8XGE) and 100-Gigabit Ethernet PICs on Type 4 FPC | **9**

Configuring MPC4E (MPC4E-3D-2CGE-8XGE) to Interoperate with 100-Gigabit Ethernet PICs on Type 4 FPC Using SA Multicast Mode | **10**

Configuring SA Multicast Bit Steering Mode on MPC4E | **10**

Configuring Two 50-Gigabit Ethernet Physical Interfaces on the Ethernet PIC as One Aggregated Ethernet Interface | **11**

Interoperability Between MPC7E-MRATE and 100-Gigabit Ethernet PICs on Type 4 FPC | **12**

Configuring MPC7E-MRATE to Interoperate with 100-Gigabit Ethernet PICs on Type 4 FPC Using SA Multicast Mode | **13**

Configuring SA Multicast Bit Steering Mode on MPC7E | **13**

Configuring Two 50-Gigabit Ethernet Physical Interfaces on the Ethernet PIC as One Aggregated Ethernet Interface | **13**

Interoperability Between MPC8E (MX2K-MPC8E) and 100-Gigabit Ethernet PICs on Type 4 FPC | **15**

Configuring MPC8E to Interoperate with 100-Gigabit Ethernet PICs on Type 4 FPC Using SA Multicast Mode | **15**

Configuring SA Multicast Bit Steering Mode on MPC8E | 16

Configuring Two 50-Gigabit Ethernet Physical Interfaces on the Ethernet PIC as One Aggregated Ethernet Interface | 16

Interoperability Between MPC9E (MX2K-MPC9E) and 100-Gigabit Ethernet PICs on Type 4 FPC | 17

Configuring MPC9E to Interoperate with 100-Gigabit Ethernet PICs on Type 4 FPC Using SA Multicast Mode | 18

Configuring SA Multicast Bit Steering Mode on MPC9E | 18

Configuring Two 50-Gigabit Ethernet Physical Interfaces on the Ethernet PIC as One Aggregated Ethernet Interface | 19

Configuring the Number of Active Ports on 16x10GE 3D MPC | 21

Guidelines for Identifying Active PICs on MPC5E-40G10G | 22

3 **Fabric Management**

Fabric Resiliency | 26

Fabric Resiliency and Degradation | 26

MX Series Routers Fabric Resiliency | 29

Detection and Recovery of Fabric-Related Failures Caused by Loss of Connectivity on MX Series Routers | 31

Detection and Corrective Actions of Line Cards with Degraded Fabric on MX Series Routers | 34

Understanding Fabric Fault Handling on T4000 Router | 36

Understanding Fabric Fault Handling on PTX5000 Packet Transport Router | 38

Understanding Fabric Fault Handling on Enhanced Switch Fabric Board (SFB2) | 43

Managing Bandwidth Degradation | 44

Fabric Hardening and Recovery on PTX10004, PTX10008, and PTX100016 with PTX10K-LC1202-36MR Line Card | 45

Disabling Line Card Restart to Limit Recovery Actions from Degraded Fabric Conditions | 47

Disabling an FPC with Degraded Fabric Bandwidth | 47

Error Handling by Fabric OAM | 48

Fabric-Plane-Management-on-MX10008-Devices | 55

Fabric Plane Management on JNP10K-LC2101 and JNP10K-LC480 | 55

Fabric Plane Management on MX10K-LC9600 and SFB2 (Model Number: JNP10008-SF2) | 56

Platform Redundancy FEB Redundancy Support for High Availability of ACX7509 Devices | 57

Fabric Grant Bypass | 61

Understanding Fabric Grant Bypass | 61

Disabling Fabric Grant Bypass to Control Congestion and Improve Performance | 62

Re-Enabling Fabric Grant Bypass | 63

Smooth Upgrade from SFB to SFB2 | 64

Understanding the Smooth Upgrade Process | 65

Before you Begin the Smooth Upgrade Process | 66

Performing a Smooth Upgrade to Enhanced Switch Fabric Board (SFB2) with Minimal Impact on Traffic | 79

Requirements | 79

Overview | 80

Configuration | 80

Verification | 83

4 **Power Management**

Configuring Ambient Temperature | 92

Understanding How Configuring Ambient Temperature Helps Optimize Power Utilization | 92

Monitoring the Power Consumption of PTX5000 FPCs by Configuring the Ambient Temperature | 93

Managing Power Allocated to PTX5000 FPCs on the Basis of Chassis Ambient Temperature Configuration | 97

5 **Managing Errors and Alarms**

Understanding Chassis Alarms | 100

Chassis Alarms | 100

Chassis Conditions That Trigger Alarms | 114

MX204 LED Scheme Overview | 160

MPC and MIC Lane LED Scheme Overview | **161**

Configuring Slow Packet Forwarding Engine Alarm | **166**

Enabling Slow Packet Forwarding Engine Alarm | **166**

Disabling Slow Packet Forwarding Engine Alarm | **167**

Verifying That the Alarm Output and System Log Messages are Updated | **167**

User-Defined Alarm Relay Overview | **170**

Configuring Chassis Alarm Relays | **171**

Configuring Chassis Alarm Input | **172**

Configuring Chassis Alarm Output | **173**

Configuring Chassis Alarm Input and Output (ACX710 Routers) | **175**

Managing Errors | 178

Configuring FPC Error Levels and Actions | **178**

Example: Configuring FPC Error Detection and Self-Healing on T Series Core Routers | **181**

Requirements | **181**

Overview | **182**

Configuration | **182**

Verification | **184**

Managing FPC Errors | **185**

Modifying Severity of an Error | **186**

Disabling an Error | **186**

Powering Off Packet Forwarding Engines | **187**

Configuring Sanity Polling | **188**

Configuring the Junos OS to Make a Flexible PIC Concentrator Stay Offline | **191**

Configuring an SFM to Stay Offline | **191**

Resynchronizing FPC Sequence Numbers with Active FPCs when an FPC Comes Online | **192**

Enabling a Routing Engine to Reboot on Hard Disk Errors | **193**

Handling Thermal Health Events Using Thermal Health Check and PSM Watchdog | **194**

Craft Interface | 196

Silencing External Devices Connected to Alarm Relay Contacts | **196**

Configuring the Junos OS to Disable the Physical Operation of the Craft Interface | **196**

Remote Port Identification using LEDs for Cabling Assistance | **197**

Configuring the LCD Panel on EX Series Switches (CLI Procedure) | **198**

- Disabling or Enabling Menus and Menu Options on the LCD Panel | **198**
- Configuring a Custom Display Message | **199**

6 **Network Services Mode**

Managing Power | 202

Understanding How Dynamic Power Management Enables Better Utilization of Power | **202**

Understanding Power Management on the PTX5000 | **203**

Power Redundancy on SRX5400 | **207**

T4000 Power Management Overview | **208**

Configuring the Six-Input DC Power Supply on T Series Routers | **210**

- Configuring the Six-Input DC Power Supply on an LCC Router in a Routing Matrix | **211**
- Configuring the Six-Input DC Power Supply on T640 and T1600 Routers | **211**
- Configuring the Six-Input DC Power Supply on T4000 Routers | **212**

Redistributing the Available Power by Configuring Power-On Sequence | **213**

Configuring Power-On Sequence to Redistribute the Available Power | **214**

Configuring Voltage Level Monitoring of FPCs | **215**

- Enabling Voltage Failure Errors on the FPC | **216**
- Disabling Voltage Failure Errors on the FPC | **216**

Overriding the Default Maximum Power (Junos OS Evolved) | **216**

Powering Off Packet Forwarding Engines | **219**

Configuring Network Services Mode | 221

- Network Services Mode Overview | **221**
- Configuring Junos OS to Run a Specific Network Services Mode in MX Series Routers | **226**
- Feature Restrictions on MX Series Routers Running in Ethernet Network Services Mode or Enhanced Ethernet Network Services Mode | **226**

Limiting the Maximum Number of Logical Interfaces on MX Series Routers With MS-DPCs in Enhanced IP Network Services Mode | 228

7 Packet Scheduling Mode

Enabling an M160 Router to Operate in Packet Scheduling Mode | 231

8 OSS Mapping

Configuring OSS Mapping | 233

Configuring OSS Mapping to Represent a T4000 Chassis as a T1600 or a T640 Chassis | 233

Configuring T4000 Chassis as a T1600 Chassis | 233

Configuring T4000 Chassis as a T640 Chassis | 234

Disabling the OSS Mapping Feature | 234

Example: Configuring a T4000 Chassis to Represent a T640 Chassis | 235

Requirements | 235

Overview | 236

Configuring the T4000 Chassis to Represent a T640 Chassis | 236

Verification | 237

9 Configuration Statements

action | 244

aggregated-devices | 246

alarm (chassis) | 249

alarm-port | 251

allow-sram-parity-errors | 254

ambient-temperature | 255

bandwidth (MPC Bandwidth) | 258

bandwidth-degradation | 260

blackhole-action | 262

chassis | 263

craft-lockout | 265

degraded | 266

disable-grant-bypass | 268

disk-failure-action | 270

enhanced-mode (Network Services) | 272

error | 275

error-id | 280

fatal | 282

feeds (T640, T1600, and T4000 Routers with Six-Input DC Power Supply) | 284

fpc (M320, T320, T640 and PTX Series Routers) | 286

fpc (MX Series 5G Universal Routing Platforms) | 289

fpc (TX Matrix and TX Matrix Plus Routers) | 292

fpc-feb-connectivity | 294

fpc-offline-on-blackholing | 295

fpc-nmi-volt-fail-knob | 297

fpc-restart | 298

fpc-resync | 300

fru-poweron-sequence | 301

input-current (T4000 Routers) | 303

ir-mode | 305

led-beacon | 308

license-mode | 309

limited-ifl-scaling | 311

linerate-mode | 312

l2-channel-error-threshold (chassis) | 314

l2-channel-errors (chassis) | 315

major | 317

max-power | 318

minor | 321

network-services | 322

no-power-budget | 325

oam detection-disable | 326

oam runtime-disable | 328

offline-on-fabric-bandwidth-reduction | 329

on-disk-failure (Chassis Routing Engine) | 331

on-error | 332

oss-map | 335

packet-scheduling | 336

pem (M320, ACX7024 Devices) | 338

pem (T640, T1600, and T4000 Routers with Six-Input DC Power Supply) | 340

pem-absence | 342

pfe | 344

pfe power off | 347

pic (M Series and T Series Routers) | 349

pic (MX Series Routers) | 351

preserve-fpc-poweron-sequence | 354

reachability-fault | 356

redundancy-mode | 358

restart chassis-control | 360

retry-count | 363

routing-engine (Chassis) | 365

sanity-poll | 367

sfm (Chassis) | 369

sib | 371

slow-pfe-alarm | 373

smart-check | 374

syslog (Chassis) | 376

thermal-health-check | 378

threshold | 381

ucode-imem-remap | 383

watchdog (PSM) | 385

10 Administrative Commands

clear chassis alarms fabric degraded | 390

clear chassis display message | 392

clear chassis fpc errors | 397

clear chassis sib errors | 399

request chassis afeb | 401

request chassis cb | 402

request chassis cfeb | 408

request chassis fabric plane | 410

request chassis fabric pfe | 414

request chassis feb | 416

set chassis fpc | 419

request chassis fpc | 420

delete chassis fpc | 430

request chassis fpm resync | 432

request chassis mcs | 435

request chassis mic | 437

request chassis optics | 440

request chassis pic | 443

request chassis port-led | 450

request chassis sfb | 455

request chassis sfm | 458

request chassis sib | 460

request chassis spmb restart | 464

set chassis display message | 468

11 Monitoring Commands

show chassis adc | 476

show chassis afeb | 480

show chassis alarms | 483

show chassis cfeb | 513

show chassis craft-interface | 517

show chassis environment | 543

show chassis environment adc | 665

show chassis environment cb | 682

show chassis environment ccg | 721

show chassis environment fan | 724

show chassis environment fpc | 730

show chassis environment fpm | 811

show chassis environment monitored | 821

show chassis environment mcs | 852

show chassis environment pcg | 856

show chassis environment pdu | 860

show chassis environment pem | 868

show chassis environment psu | 889

show chassis environment psm | 891

show chassis environment routing-engine | 905

show chassis environment scg | 916

show chassis environment sfb | 923

show chassis environment sfm | 941

show chassis environment sib | 947

show chassis errors active | 993

show chassis ethernet-switch | 999

show chassis fabric degraded-fabric-reachability | 1053

show chassis fabric destinations | 1055

show chassis fabric faults recovery-actions | 1084

show chassis fabric feb | 1087

show chassis fabric errors | 1089

show chassis fabric fpcs | 1096

show chassis fabric map | 1137

show chassis fabric plane | 1148

show chassis fabric plane-location | 1189

show chassis fabric redundancy-mode | 1201

show chassis fabric reachability | 1203

show chassis fabric sibs | 1217

show chassis fabric stream-info | 1237

show chassis fabric summary | 1243

show chassis fabric topology | 1251

show chassis fabric unreachable-destinations | 1287

show chassis fan | 1291

show chassis feb | 1309

show chassis firmware | 1316

show chassis forwarding | 1337

show chassis fpc | 1339

show chassis fpc errors | 1404

show chassis fpc-feb-connectivity | 1410

show chassis fpc global pfe-id | 1414

show chassis hardware | 1418

show chassis location | 1444

show chassis mac-addresses | 1451

show chassis network-services | 1459

show chassis oss-map | 1463

show chassis pic | 1465

show chassis power | 1503

show chassis power sequence | 1545

show chassis psd | 1547

show chassis routing-engine | 1550

show chassis scb | 1561

show chassis sfb | 1565

show chassis sfb errors | 1569

show chassis sfm | 1572

show chassis sibs | 1577

show chassis spmb | 1595

show chassis spmb sibs | 1610

show chassis temperature-thresholds | 1619

show chassis zones | 1648

show pfe cfeb | 1660

show pfe feb | 1667

show pfe fpc | 1677

show system errors active | 1704

show system errors count | 1712

show system errors error-id | 1714

show system errors fru | 1718

show system errors inactive | 1726

About This Guide

Use this guide to configure several properties of a router at the `[edit chassis]` hierarchy level. You can also configure support for chassis-level alarms, power management, and other features at the chassis level. Some of these features are platform-specific, while others are common across all routers.

1
CHAPTER

Overview

Chassis-Level Features Overview | 2

Chassis-Level Features Overview

The Junos Software enables you to configure several properties of the router and many PIC-level features at the `[edit chassis]` hierarchy level. Some of the features are specific to M Series, MX Series, J Series, or T Series routers, while some others are common across all routers.

NOTE: Statements at the `[edit chassis redundancy]` hierarchy level are described in the *JUNOS High Availability Configuration Guide*.

NOTE: The configuration statements at the `[edit chassis lcc]` hierarchy level apply only to a routing matrix based on a TX Matrix router or a TX Matrix Plus router. For information about a routing matrix composed of a TX Matrix router and T640 routers, see TX Matrix Router and T640 Router Configuration Overview and the *TX Matrix Router Hardware Guide*. For information about a routing matrix composed of a TX Matrix Plus router and T1600 or T4000 routers, see TX Matrix Plus Router Configuration Overview and the *TX Matrix Plus Router Hardware Guide*.

NOTE: The `sanity-poll` configuration statements at the `[edit chassis fpc slot-number]` hierarchy level apply only to T Series routers. You can also configure `sanity-poll` for routing matrix based on a TX Matrix router or TX Matrix Plus router at the hierarchy level `[edit chassis lcc number fpc number]`.

2

CHAPTER

MPC-specific

Upgrading or Downgrading MPCs (MPC8E and JNP10K-LC2101) | 4

Configuring Line Card Interoperability | 6

Configuring the Number of Active Ports on 16x10GE 3D MPC | 21

Guidelines for Identifying Active PICs on MPC5E-40G10G | 22

Upgrading or Downgrading MPCs (MPC8E and JNP10K-LC2101)

IN THIS SECTION

- Upgrading MPC8E to Provide Increased Bandwidth | 4
- Downgrading JNP10K-LC2101 to Provide Decreased Bandwidth | 5

You can upgrade MPC8E to provide an increased bandwidth of 1600 Gbps (1.6 Tbps). Similarly, you can downgrade the JNP10K-LC2101 MPC to provide a decreased bandwidth of 1.44Tbps.

Upgrading MPC8E to Provide Increased Bandwidth

In Junos OS Release 15.1F5 and later, MX2020 and MX2010 routers support No Link Title (model number: MX2K-MPC8E), a new Modular Port Concentrator (MPC) with two Modular Interface Card (MIC) slots that provide a maximum bandwidth of 960 Gbps. . Each MIC slot on MPC8E supports a 12-port rate selectable MIC (MIC-MRATE). MPC8E has four Packet Forwarding Engines, each providing a maximum bandwidth of 240 Gbps.

In Junos OS Release 16.1R1 and later, you can upgrade MPC8E to provide an increased bandwidth of 1600 Gbps (1.6 Tbps) by using an add-on license. After you purchase the license and perform the upgrade, MPC8E provides a bandwidth of 1.6 Tbps, which is equivalent to the bandwidth that MPC9E provides. However, the MPC continues to be identified as MPC8E.

NOTE: After you upgrade MPC8E to provide a bandwidth of 1.6 Tbps, the power consumption by MPC8E increases and is equivalent to the power that MPC9E consumes. See No Link Title for more information.

After you purchase the add-on license, you upgrade the bandwidth by using the `set chassis fpc` *slot* `bandwidth 1.6T` command. You can disable this feature by using the `delete chassis fpc` *slot* `bandwidth 1.6T` command.

NOTE: When you modify the bandwidth of MPC8E and commit the configuration, the MPC automatically reboots . For instance, if you upgrade MPC8E to provide a bandwidth of 1.6 Tbps and commit the configuration, the MPC automatically reboots. Also, if you disable the feature on MPC8E (to provide a bandwidth of 960 Gbps) and commit the configuration, the MPC automatically reboots.

Downgrading JNP10K-LC2101 to Provide Decreased Bandwidth

In Junos OS Release 18.2R1 and later, MX10008 routers support the JNP10K-LC2101 line card. The JNP10K-LC2101 is a fixed-configuration MPC that provides increased port density and performance to the MX10008 routers. JNP10K-LC2101 does not contain separate slots for Modular Interface Cards (MICs). MX10008 routers support eight JNP10K-LC2101 MPCs. By default, each JNP10K-LC2101 MPC provides a maximum bandwidth of 2.4Tbps. JNP10K-LC2101 has six Packet Forwarding Engines, each providing a maximum bandwidth of up to 400 Gbps, which cannot be oversubscribed.

You can downgrade the JNP10K-LC2101 MPC to provide a decreased bandwidth of 1.44Tbps. After you perform the downgrade, JNP10K-LC2101 provides a bandwidth of 1.44Tbps. Each of the six Packet Forwarding Engines now provide a maximum bandwidth of up to 240 Gbps, which cannot be oversubscribed.

You can downgrade the bandwidth by using the `set chassis fpc slot bandwidth 1.44T` command. You can disable this feature by using the `delete chassis fpc slot bandwidth 1.44T` command.

NOTE: When you modify the bandwidth of JNP10K-LC2101 and commit the configuration, the MPC automatically reboots . For instance, if you downgrade JNP10K-LC2101 to provide a bandwidth of 1.44 Tbps and commit the configuration, the MPC automatically reboots. Also, if you disable the feature on JNP10K-LC2101 (to provide a bandwidth of 2.4Tbps) and commit the configuration, the MPC automatically reboots.

RELATED DOCUMENTATION

No Link Title

Line card (MX10K-LC2101)

Configuring Line Card Interoperability

IN THIS SECTION

- Interoperability of Type 3 FPCs and Type 4 FPCs with Type 5 FPCs | **6**
- Configuring 100-Gigabit Ethernet MICs to Interoperate with Type 4 100-Gigabit Ethernet PICs (PD-1CE-CFP-FPC4) Using SA Multicast Mode | **7**
- Interoperability Between MPC4E (MPC4E-3D-2CGE-8XGE) and 100-Gigabit Ethernet PICs on Type 4 FPC | **9**
- Configuring MPC4E (MPC4E-3D-2CGE-8XGE) to Interoperate with 100-Gigabit Ethernet PICs on Type 4 FPC Using SA Multicast Mode | **10**
- Interoperability Between MPC7E-MRATE and 100-Gigabit Ethernet PICs on Type 4 FPC | **12**
- Configuring MPC7E-MRATE to Interoperate with 100-Gigabit Ethernet PICs on Type 4 FPC Using SA Multicast Mode | **13**
- Interoperability Between MPC8E (MX2K-MPC8E) and 100-Gigabit Ethernet PICs on Type 4 FPC | **15**
- Configuring MPC8E to Interoperate with 100-Gigabit Ethernet PICs on Type 4 FPC Using SA Multicast Mode | **15**
- Interoperability Between MPC9E (MX2K-MPC9E) and 100-Gigabit Ethernet PICs on Type 4 FPC | **17**
- Configuring MPC9E to Interoperate with 100-Gigabit Ethernet PICs on Type 4 FPC Using SA Multicast Mode | **18**

Interoperability of Type 3 FPCs and Type 4 FPCs with Type 5 FPCs

Support for interoperability of Type 3 FPCs, Type 4 FPCs, and T640-FPC4-1P-ES with Type 5 FPCs is now possible with fabric notification translation. This feature is supported on T4000 routers.

Basic packet forwarding, IPv4, IPv6, MPLS, and multicast (dataplane) are currently supported through this feature.

Configuring 100-Gigabit Ethernet MICs to Interoperate with Type 4 100-Gigabit Ethernet PICs (PD-1CE-CFP-FPC4) Using SA Multicast Mode

To configure a 100-Gigabit Ethernet MIC (MIC3-3D-1X100GE-CFP) to interoperate with Juniper Networks Type 4 100-Gigabit Ethernet PICs (model number PD-1CE-CFP-FPC4), you can use the `forwarding-mode` statement with the `sa-multicast` option at the `[edit chassis fpc slot pic slot]` hierarchy level.

SA multicast mode uses the multicast bit in the source MAC address for packet steering. By default, the SA multicast bit is set to 0 for all packets sent by the 100-Gigabit Ethernet MIC. The egress packet flow is the traffic flowing from the 100-Gigabit Ethernet MIC to the 100-Gigabit Ethernet PIC. Since no VLAN tags are available, the SA multicast bit is sent on the outgoing packets. At the other end, the 100-Gigabit Ethernet PIC looks at the bit and forwards the packets to either Packet Forwarding Engine 0 or 1. The ingress packet flow is the traffic flowing from a 100-Gigabit Ethernet PIC to a 100-Gigabit Ethernet MIC. When the 100-Gigabit Ethernet PIC is sending out a packet, the multicast bit is set based on the Packet Forwarding Engine packet received. The multicast bit is then transmitted and the MPC3E sees the multicast bit on ingress.

NOTE: The SA multicast bit is ignored by MPC3E while learning the source MAC addresses.

Configuring 100-Gigabit Ethernet MICs

The interoperability mode between the 100-Gigabit Ethernet MIC and the 100-Gigabit Ethernet PIC is configured on a PIC basis. The MPC3E has two MIC slots. A 100-Gigabit Ethernet MIC installed in slot 0 corresponds to `pic 0`, and the MIC installed in slot 1 corresponds to `pic 2`.

NOTE: The configuration is valid only on PIC 0 and PIC 2.

To configure SA multicast mode on a Juniper Networks 100-Gigabit Ethernet MIC in MPC 0, PIC 0 for interconnection with another Juniper Networks 100-Gigabit Ethernet PIC, use the `set chassis fpc slot pic slot forwarding-mode sa-multicast` command, as follows:

```
[edit chassis fpc slot pic slot]
forwarding-mode {
    sa-multicast;
}
```

You can use the `show forwarding-mode` command to view the resulting configuration, as follows:

```
[edit chassis fpc slot pic slot]
user@host# show forwarding-mode
```

Configuring 100-Gigabit Ethernet PIC (PD-1CE-CFP-FPC4)

The default packet steering mode for the 100-Gigabit Ethernet PIC (PD-1CE-CFP-FPC4)is SA multicast bit mode. There is no SA multicast configuration required on the 100-Gigabit Ethernet PIC to enable this mode.

NOTE: SA multicast mode can be configured, but it is not necessary.

The 100-Gigabit Ethernet PIC uses a Type 4 FPC and two 50 Gpbs Packet Forwarding Engines to achieve 100 Gbps throughput. The 50 Gpbs physical interfaces are created when the 100-Gigabit Ethernet PIC is installed. The two physical interfaces are visible and configuration is allowed on both physical interfaces. The physical interfaces on the 100-Gigabit Ethernet PIC should be configured in static LAG mode without enabling Link Aggregation Control Protocol (LACP). This ensures that a single 100-Gigabit aggregated interface is visible on the link connecting to the 100-Gigabit Ethernet MIC instead of two independent 50 Gpbs interfaces.

When the PIC is in aggregated Ethernet mode, the two physical interfaces on the same PIC are aggregated into one AE physical interface. When the PIC is configured with two physical interfaces, it creates the physical interfaces `et-`*fpc*`/`*pic*`/0:0` and `et-`*fpc*`/`*pic*`/0:1` where *fpc* is the FPC slot number and *pic* is the PIC slot number. The example shows how to configure two physical interfaces for PIC 0 in FPC 5:

```
chassis {
    aggregated-devices {
        ethernet {
            device-count 1;
        }
    }
}
interfaces {
    et-5/0/0:0 {
        gigether-options {
            802.3ad ae0;
        }
    }
    et-5/0/0:1 {
        gigether-options {
```

```
            802.3ad ae0;
        }
    }
}
```

Interoperability Between MPC4E (MPC4E-3D-2CGE-8XGE) and 100-Gigabit Ethernet PICs on Type 4 FPC

You can enable interoperability between the MPC4E (MPC4E-3D-2CGE-8XGE) and the 100-Gigabit Ethernet PIC (PD-1CE-CFP-FPC4) by:

- Enabling source address (SA) multicast bit steering mode on the MPC4E.
- Configuring the two 50-Gigabit Ethernet physical interfaces on the 100-Gigabit Ethernet PIC PD-1CE-CFP-FPC4 as one aggregated Ethernet physical interface.

SA multicast mode uses the multicast bit in the source MAC address for packet steering. By default, the SA multicast bit is set to 0 for all packets sent by the MPC4E. The egress packet flow is the traffic flowing from the MPC4E to the 100-Gigabit Ethernet PIC. Because no VLAN tags are available, the SA multicast bit is sent on the outgoing packets. At the other end, the 100-Gigabit Ethernet PIC checks the multicast bit and forwards the packets to either Packet Forwarding Engine 0 or Packet Forwarding Engine 1. The ingress packet flow is the traffic flowing from the 100-Gigabit Ethernet PIC to the MPC4E. When the 100-Gigabit Ethernet PIC sends out a packet, the multicast bit is set based on the packet received from the Packet Forwarding Engine. The multicast bit is then transmitted and the MPC4E checks the multicast bit on ingress.

The 100-Gigabit Ethernet PIC uses a Type 4 FPC and two 50-Gbps Packet Forwarding Engines to achieve a throughput of 100 Gbps. The 50-Gbps physical interfaces are created when the 100-Gigabit Ethernet PIC is plugged in. The two physical interfaces are visible and configuration is allowed on both physical interfaces. The physical interfaces on the 100-Gigabit Ethernet PIC must be configured in static LAG mode without enabling Link Aggregation Control Protocol (LACP). This ensures that a single 100-Gigabit Ethernet aggregated interface is visible on the link connecting to the MPC4E instead of two independent 50-Gbps interfaces.

Configuring MPC4E (MPC4E-3D-2CGE-8XGE) to Interoperate with 100-Gigabit Ethernet PICs on Type 4 FPC Using SA Multicast Mode

IN THIS SECTION

- Configuring SA Multicast Bit Steering Mode on MPC4E | 10
- Configuring Two 50-Gigabit Ethernet Physical Interfaces on the Ethernet PIC as One Aggregated Ethernet Interface | 11

You can enable interoperability between the MPC4E and the 100-Gigabit Ethernet PIC by performing the following tasks:

Configuring SA Multicast Bit Steering Mode on MPC4E

The interoperability mode between the MPC4E and the 100-Gigabit Ethernet PIC is configured on a PIC basis. MPC4E-3D-2CGE-8XGE is a fixed-configuration MPC and does not contain separate slots for Modular Interfaces Cards (MICs). MPC4E contains two Packet Forwarding Engines—**PFE 0** hosts **PIC 0** and **PIC 1** and **PFE 1** hosts **PIC 2** and **PIC 3**.

NOTE: This configuration is valid only on **PIC 1** and **PIC 3**.

To configure SA multicast mode on **PIC 1** of an MX480 router with MPC4E for interconnection with the 100-Gigabit Ethernet PIC:

1. To specify the forwarding mode as `sa-multicast`, include the `forwarding-mode` statement at the `[edit chassis fpc` *slot* `pic` *slot*`]` hierarchy level.

```
[edit chassis]
user@host # set fpc 3 pic 1 forwading-mode sa-multicast
```

2. To verify that the forwarding mode is set to `sa-multicast`, issue the following command:

```
[edit chassis fpc 3 pic 1]
user@host # show forwarding-mode
```

Configuring Two 50-Gigabit Ethernet Physical Interfaces on the Ethernet PIC as One Aggregated Ethernet Interface

When the PIC is in aggregated Ethernet mode, the two physical interfaces on the same PIC are aggregated into one aggregated Ethernet physical interface. When the PIC is configured with two physical interfaces, it creates the physical interfaces et-x/y/0:0 and et-x/y/0:,1 where *x* is the FPC slot number and *y* is the PIC slot number.

The default packet steering mode for the 100-Gigabit Ethernet PIC is SA multicast bit mode. No SA multicast configuration is required on the 100-Gigabit Ethernet PIC to enable this mode.

NOTE: SA multicast mode can be configured, but it is not necessary.

1. To specify the number of aggregated Ethernet interfaces to be created:

```
[edit chassis aggregated-devices ethernet]
user@host # set device-count 2
```

2. To specify the members to be included within the aggregated Ethernet bundle:

```
[edit interfaces]
user@host # set et-4/3/0:0 gigether-options 802.3ad ae0
user@host # set et-4/3/0:1 gigether-options 802.3ad ae0
```

3. Verify the configuration at the interface.

```
[edit]
user@host # show interfaces
```

```
..
et-4/3/0:0 {
     gigether-options {
  802.3ad ae0;
 }
 }
et-4/3/0:1 {
   gigether-options {
    802.3ad ae0;
```

```
}
}
```

Interoperability Between MPC7E-MRATE and 100-Gigabit Ethernet PICs on Type 4 FPC

You can enable interoperability between the MPC7E (MPC7E-MRATE) and the 100-Gigabit Ethernet PIC (PD-1CE-CFP-FPC4) by:

- Enabling source address (SA) multicast bit steering mode on the MPC7E
- Configuring the two 50-Gigabit Ethernet physical interfaces on the 100-Gigabit Ethernet PIC PD-1CE-CFP-FPC4 as one aggregated Ethernet physical interface.

SA multicast mode uses the multicast bit in the source MAC address for packet steering. By default, the SA multicast bit is set to 0 for all packets sent by the MPC7E. The egress packet flow is the traffic flowing from the MPC to the 100-Gigabit Ethernet interface. Because no VLAN tags are available, the SA multicast bit is sent on the outgoing packets. At the other end, the 100-Gigabit Ethernet interface checks the multicast bit and forwards the packets to either Packet Forwarding Engine 0 or Packet Forwarding Engine 1. The ingress packet flow is the traffic flowing from the 100-Gigabit Ethernet interface to the MPC7E. When the 100-Gigabit Ethernet interface sends out a packet, the multicast bit is set based on the packet received from the Packet Forwarding Engine. The multicast bit is then transmitted and the MPC7E checks the multicast bit on ingress.

The 100-Gigabit Ethernet PIC uses a Type 4 FPC and two 50-Gbps Packet Forwarding Engines to achieve a throughput of 100 Gbps. The 50-Gbps physical interfaces are created when the 100-Gigabit Ethernet PIC is plugged in. The two physical interfaces are visible and configuration is allowed on both physical interfaces. The physical interfaces on the 100-Gigabit Ethernet PIC must be configured in static LAG mode without enabling Link Aggregation Control Protocol (LACP). This ensures that a single 100-Gigabit Ethernet aggregated interface is visible on the link connecting to the MPC7E instead of two independent 50-Gbps interfaces.

Configuring MPC7E-MRATE to Interoperate with 100-Gigabit Ethernet PICs on Type 4 FPC Using SA Multicast Mode

IN THIS SECTION

- Configuring SA Multicast Bit Steering Mode on MPC7E | 13
- Configuring Two 50-Gigabit Ethernet Physical Interfaces on the Ethernet PIC as One Aggregated Ethernet Interface | 13

You can enable interoperability between the MPC7E (MPC7E-MRATE) and the 100-Gigabit Ethernet PIC by performing the following tasks:

Configuring SA Multicast Bit Steering Mode on MPC7E

The interoperability mode between the MPC7E (MPC7E-MRATE) and the 100-Gigabit Ethernet PIC is configured on a PIC basis. MPC7E is a fixed-configuration MPC and does not contain separate slots for Modular Interfaces Cards (MICs). MPC7E contains two Packet Forwarding Engines—**PFE 0** hosts **PIC 0** and **PFE 1** hosts **PIC 1** .

To configure SA multicast mode on `FPC13`,**PIC 1** of MPC7E-MRATE for interconnection with the 100-Gigabit Ethernet PIC:

1. To specify the forwarding mode as `sa-multicast`, include the `forwarding-mode` statement at the `[edit chassis fpc slot pic slot]` hierarchy level.

```
[edit chassis]
user@host # set fpc 13 pic 1 forwading-mode sa-multicast
```

2. To verify that the forwarding mode is set to `sa-multicast`, issue the following command:

```
[edit chassis fpc 13 pic 1]
user@host # show forwarding-mode
```

Configuring Two 50-Gigabit Ethernet Physical Interfaces on the Ethernet PIC as One Aggregated Ethernet Interface

When the PIC is in aggregated Ethernet mode, the two physical interfaces on the same PIC are aggregated into one aggregated Ethernet physical interface. When the PIC is configured with two

physical interfaces, it creates the physical interfaces et-x/y/0:0 and et-x/y/0:,1 where *x* is the FPC slot number and *y* is the PIC slot number.

The default packet steering mode for the 100-Gigabit Ethernet PIC is SA multicast bit mode. No SA multicast configuration is required on the 100-Gigabit Ethernet PIC to enable this mode.

NOTE: SA multicast mode can be configured, but it is not necessary.

1. To specify the number of aggregated Ethernet interfaces to be created:

```
[edit chassis aggregated-devices ethernet]
user@host # set device-count 2
```

2. To specify the members to be included within the aggregated Ethernet bundle:

```
[edit interfaces]
user@host # set et-4/3/0:0 gigether-options 802.3ad ae0
user@host # set et-4/3/0:1 gigether-options 802.3ad ae0
```

3. Verify the configuration at the interface.

```
[edit]
user@host # show interfaces
```

```
..
et-4/3/0:0 {
     gigether-options {
  802.3ad ae0;
 }
 }
et-4/3/0:1 {
   gigether-options {
    802.3ad ae0;
 }
 }
```

Interoperability Between MPC8E (MX2K-MPC8E) and 100-Gigabit Ethernet PICs on Type 4 FPC

You can enable interoperability between the MPC8E (MX2K-MPC8E) and the 100-Gigabit Ethernet PIC (PD-1CE-CFP-FPC4) by:

- Enabling source address (SA) multicast bit steering mode on the MPC8E.
- Configuring the two 50-Gigabit Ethernet physical interfaces on the 100-Gigabit Ethernet PIC PD-1CE-CFP-FPC4 as one aggregated Ethernet physical interface.

SA multicast mode uses the multicast bit in the source MAC address for packet steering. By default, the SA multicast bit is set to 0 for all packets sent by the MPC8E. The egress packet flow is the traffic flowing from the MPC to the 100-Gigabit Ethernet Interface. Because no VLAN tags are available, the SA multicast bit is sent on the outgoing packets. At the other end, the 100-Gigabit Ethernet Interface checks the multicast bit and forwards the packets to either Packet Forwarding Engine 0 or Packet Forwarding Engine 1. The ingress packet flow is the traffic flowing from the 100-Gigabit Ethernet Interface to the MPC8E. When the 100-Gigabit Ethernet Interface sends out a packet, the multicast bit is set based on the packet received from the Packet Forwarding Engine. The multicast bit is then transmitted and the MPC8E checks the multicast bit on ingress.

The 100-Gigabit Ethernet PIC uses a Type 4 FPC and two 50-Gbps Packet Forwarding Engines to achieve a throughput of 100 Gbps. The 50-Gbps physical interfaces are created when the 100-Gigabit Ethernet PIC is plugged in. The two physical interfaces are visible and configuration is allowed on both physical interfaces. The physical interfaces on the 100-Gigabit Ethernet PIC must be configured in static LAG mode without enabling Link Aggregation Control Protocol (LACP). This ensures that a single 100-Gigabit Ethernet aggregated interface is visible on the link connecting to the MPC8E instead of two independent 50-Gbps interfaces.

Configuring MPC8E to Interoperate with 100-Gigabit Ethernet PICs on Type 4 FPC Using SA Multicast Mode

IN THIS SECTION

- Configuring SA Multicast Bit Steering Mode on MPC8E | **16**
- Configuring Two 50-Gigabit Ethernet Physical Interfaces on the Ethernet PIC as One Aggregated Ethernet Interface | **16**

You can enable interoperability between the MPC8E (MX2K-MPC8E) and the 100-Gigabit Ethernet PIC by performing the following tasks:

Configuring SA Multicast Bit Steering Mode on MPC8E

The interoperability mode between the MPC8E and the 100-Gigabit Ethernet PIC is configured on a PIC basis. MPC8E (MX2K-MPC8E) is a modular MPC that contains two slots for Modular Interfaces Cards (MICs). MPC8E contains four Packet Forwarding Engines—**PIC 0** hosts **PFE 0** and **PFE 1**. **PIC 1**hosts **PFE 2** and **PFE 3**.

To configure SA multicast mode on `FPC 7`,**PIC 1** of MPC8E for interconnection with the 100-Gigabit Ethernet PIC:

1. To specify the forwarding mode as `sa-multicast`, include the `forwarding-mode` statement at the `[edit chassis fpc slot pic slot]` hierarchy level.

```
[edit chassis]
user@host # set fpc 7 pic 1 forwading-mode sa-multicast
```

2. To verify that the forwarding mode is set to `sa-multicast`, issue the following command:

```
[edit chassis]
user@host # show fpc 7 pic 1 forwarding-mode
```

```
sa-multicast;
```

Configuring Two 50-Gigabit Ethernet Physical Interfaces on the Ethernet PIC as One Aggregated Ethernet Interface

When the PIC is in aggregated Ethernet mode, the two physical interfaces on the same PIC are aggregated into one aggregated Ethernet physical interface. When the PIC is configured with two physical interfaces, it creates the physical interfaces et-x/y/0:0 and et-x/y/0:,1 where *x* is the FPC slot number and *y* is the PIC slot number.

The default packet steering mode for the 100-Gigabit Ethernet PIC is SA multicast bit mode. No SA multicast configuration is required on the 100-Gigabit Ethernet PIC to enable this mode.

NOTE: SA multicast mode can be configured, but it is not necessary.

1. To specify the number of aggregated Ethernet interfaces to be created:

```
[edit chassis aggregated-devices ethernet]
user@host # set device-count 2
```

2. To specify the members to be included within the aggregated Ethernet bundle:

```
[edit interfaces]
user@host # set et-4/3/0:0 gigether-options 802.3ad ae0
user@host # set et-4/3/0:1 gigether-options 802.3ad ae0
```

3. Verify the configuration at the interface.

```
[edit]
user@host # show interfaces
```

```
..
et-4/3/0:0 {
     gigether-options {
  802.3ad ae0;
 }
 }
et-4/3/0:1 {
   gigether-options {
    802.3ad ae0;
 }
 }
```

Interoperability Between MPC9E (MX2K-MPC9E) and 100-Gigabit Ethernet PICs on Type 4 FPC

You can enable interoperability between the MPC9E (MX2K-MPC9E) and the 100-Gigabit Ethernet PIC (PD-1CE-CFP-FPC4) by:

- Enabling source address (SA) multicast bit steering mode on the MPC9E.

- Configuring the two 50-Gigabit Ethernet physical interfaces on the 100-Gigabit Ethernet PIC PD-1CE-CFP-FPC4 as one aggregated Ethernet physical interface.

SA multicast mode uses the multicast bit in the source MAC address for packet steering. By default, the SA multicast bit is set to 0 for all packets sent by the MPC9E. The egress packet flow is the traffic flowing from the MPC9E to the 100-Gigabit Ethernet Interface. Because no VLAN tags are available, the SA multicast bit is sent on the outgoing packets. At the other end, the 100-Gigabit Ethernet Interface checks the multicast bit and forwards the packets to either Packet Forwarding Engine 0 or Packet Forwarding Engine 1. The ingress packet flow is the traffic flowing from the 100-Gigabit Ethernet Interface to the MPC9E. When the 100-Gigabit Ethernet interface sends out a packet, the multicast bit is set based on the packet received from the Packet Forwarding Engine. The multicast bit is then transmitted and the MPC9E checks the multicast bit on ingress.

The 100-Gigabit Ethernet PIC uses a Type 4 FPC and two 50-Gbps Packet Forwarding Engines to achieve a throughput of 100 Gbps. The 50-Gbps physical interfaces are created when the 100-Gigabit Ethernet PIC is plugged in. The two physical interfaces are visible and configuration is allowed on both physical interfaces. The physical interfaces on the 100-Gigabit Ethernet PIC must be configured in static LAG mode without enabling Link Aggregation Control Protocol (LACP). This ensures that a single 100-Gigabit Ethernet aggregated interface is visible on the link connecting to the MPC9E instead of two independent 50-Gbps interfaces.

Configuring MPC9E to Interoperate with 100-Gigabit Ethernet PICs on Type 4 FPC Using SA Multicast Mode

IN THIS SECTION

- Configuring SA Multicast Bit Steering Mode on MPC9E | **18**
- Configuring Two 50-Gigabit Ethernet Physical Interfaces on the Ethernet PIC as One Aggregated Ethernet Interface | **19**

You can enable interoperability between the MPC9E (MX2K-MPC9E) and the 100-Gigabit Ethernet PIC by performing the following tasks:

Configuring SA Multicast Bit Steering Mode on MPC9E

The interoperability mode between the MPC9E and the 100-Gigabit Ethernet PIC is configured on a PIC basis. MPC9E (MX2K-MPC9E) is a modular MPC that contains two slots for Modular Interfaces Cards

(MICs). MPC9E contains four Packet Forwarding Engines—**PIC 0** hosts **PFE 0** and **PFE 1**. **PIC 1** hosts **PFE 2** and **PFE 3**.

To configure SA multicast mode on `FPC 19`, **PIC 1** of MPC9E for interconnection with the 100-Gigabit Ethernet PIC:

1. To specify the forwarding mode as `sa-multicast`, include the `forwarding-mode` statement at the `[edit chassis fpc slot pic slot]` hierarchy level.

```
[edit chassis]
user@host # set fpc 19 pic 1 forwading-mode sa-multicast
```

2. To verify that the forwarding mode is set to `sa-multicast`, issue the following command:

```
[edit chassis]
user@host # show fpc 19 pic 1 forwarding-mode
```

```
sa-multicast;
```

Configuring Two 50-Gigabit Ethernet Physical Interfaces on the Ethernet PIC as One Aggregated Ethernet Interface

When the PIC is in aggregated Ethernet mode, the two physical interfaces on the same PIC are aggregated into one aggregated Ethernet physical interface. When the PIC is configured with two physical interfaces, it creates the physical interfaces et-x/y/0:0 and et-x/y/0:,1 where *x* is the FPC slot number and *y* is the PIC slot number.

The default packet steering mode for the 100-Gigabit Ethernet PIC is SA multicast bit mode. No SA multicast configuration is required on the 100-Gigabit Ethernet PIC to enable this mode.

NOTE: SA multicast mode can be configured, but it is not necessary.

1. To specify the number of aggregated Ethernet interfaces to be created:

```
[edit chassis aggregated-devices ethernet]
user@host # set device-count 2
```

2. To specify the members to be included within the aggregated Ethernet bundle:

```
[edit interfaces]
user@host # set et-4/3/0:0 gigether-options 802.3ad ae0
user@host # set et-4/3/0:1 gigether-options 802.3ad ae0
```

3. Verify the configuration at the interface.

```
[edit]
user@host # show interfaces
```

```
..
et-4/3/0:0 {
     gigether-options {
  802.3ad ae0;
 }
 }
et-4/3/0:1 {
   gigether-options {
    802.3ad ae0;
 }
 }
```

RELATED DOCUMENTATION

- T4000 FPCs Supported
- T4000 PICs Supported
- No Link Title
- No Link Title

Configuring the Number of Active Ports on 16x10GE 3D MPC

You can disable a sub-set of the physical ports available on the Packet Forwarding Engines of the 16x10GE 3D MPC, and for PICs installed in MPC3, MPC4, MPC5, and MPC6.

Two of the most common reasons for disabling ports are explained below.

- **Ensure guaranteed bandwidth by preventing oversubscription**—The 16x10GE 3D MPC supports one 10-Gigabit Ethernet tunnel interface for each Packet Forwarding Engine. The effective line-rate bandwidth of the MPC is 12 ports because of an oversubscription ratio of 4:3. Therefore, configuring a tunnel interface might further result in the Packet Forwarding Engines being oversubscribed. To prevent such oversubscription and to ensure a guaranteed bandwidth, include the `number-of-ports` configuration statement to disable one or two ports per Packet Forwarding Engine.

- **Enable Switch Control Board (SCB) redundancy**—For maximum bandwidth capabilities (12-port line-rate bandwidth), the 16x10GE 3D MPC uses all the available SCBs (three SCBs for an MX960 router, two SCBs for an MX480 or MX240 router) actively in the chassis.

  If SCB redundancy (2+1 SCBs on an MX960 router or 1+1 SCB on an MX480 or MX240 router) is required, ports on the line card can be disabled by setting the number of usable ports per line card to *8*. In such a case, the third and fourth ports (ports 0/2-3, 1/2-3, 2/2-3, 3/2-3) on every Packet Forwarding Engine are disabled.

To configure the number of active ports on the 16x10GE 3D MPC, include the `number-of-ports` *active-ports* configuration statement at the `[edit chassis fpc` *slot-number*`]` hierarchy level:

```
[edit chassis fpc slot-number]
number-of-ports (8 | 12);
```

To configure the number of active ports on a PIC in an MPC3, MPC4, MPC5, or MPC6, include the `number-of-ports` *active-ports* configuration statement at the `[edit chassis fpc` *slot-number* `pic` *pic-number*`]` hierarchy level:

```
[edit chassis fpc slot-number pic pic-number]
number-of-ports (8 | 12);
```

Specify either 8 or 12 ports using this statement. When eight active ports are configured, two ports per Packet Forwarding Engine are disabled, and the LEDs on the MPC are set to **yellow**. When you specify 12 active ports, one port per Packet Forwarding Engine is disabled and the corresponding LED is set to

yellow. When you do not include this statement in the configuration, all 16 default ports on the MPC are active.

NOTE:

- Committing the configuration after including the `number-of-ports` *active-ports* configuration statement brings down the Ethernet interfaces for all the ports on the MPC before the ports configuration becomes active.
- A minimum of one high-capacity fan tray is necessary for meeting the cooling requirements of the MPC. The Junos OS generates a chassis **yellow** alarm recommending fan tray upgrade for optimal performance, if the MX router chassis contains an old fan tray.

For more information about the 16x10GE 3D MPC, see the *MX Series Interface Module Reference*.

RELATED DOCUMENTATION

MPC-3D-16XGE-SFPP

Guidelines for Identifying Active PICs on MPC5E-40G10G

MPC5E contains two Packet Forwarding Engines (PFEs) and 4 fixed port PICs. On MPC5E-100G10G, the `PFE0` hosts `PIC0` and `PIC1` while `PFE1` hosts `PIC2` and `PIC3`. All the PICs can be powered on and used.

On the MPC5E-40G10G, the `PFE0` hosts `PIC0` and `PIC2` while `PFE1` hosts `PIC1` and `PIC3`. Only a maximum of two PICs (`PIC0` or `PIC2` and `PIC1` or `PIC3`) can be powered on. The remaining PICs are required to be kept powered off.

This topic describes the guidelines to consider while identifying active PICs on the MPC5E (MPC5E-40G10G):

- By default, (i.e. without any CLI configuration), `PIC0 (12x10GE)` and `PIC1 (12x10GE)` are powered ON while `PIC2 (3x40GE)` and `PIC3 (3x40GE)` shall be powered OFF.
- At least one PIC on every PFE should be configured in power OFF state. `PIC0` and `PIC2` belong to `PFE0` and `PIC1` and `PIC3` belong to `PFE1` .

- If you configure an invalid PIC combination, the default PICs (PIC0 and PIC1) will be powered ON. Also, a syslog message is displayed to indicate the invalid PIC combination selected. When you configure an invalid PIC combination, and commit the change, the commit succeeds and a commit failure message is not displayed.

Table 1 on page 23 lists the active PICs on MPC5E-40G10G based on the configuration.

Table 1: MPC5E-40G10G Active PICs

CLI Configuration	PIC Selection
Default (i.e no CLI configuration)	Online: PIC0 and PIC1 Offline: PIC2 and PIC3
PIC1 ,PIC2 , and PIC3 powered off	Online: PIC0 Offline: PIC1, PIC2, and PIC3
PIC0 ,PIC2 , and PIC3 powered off	Online: PIC1 Offline: PIC0, PIC2, and PIC3
PIC0 ,PIC1 , and PIC3 powered off	Online: PIC2 Offline: PIC0, PIC1, and PIC3
PIC0 ,PIC1 , and PIC2 powered off	Online: PIC3 Offline: PIC0, PIC1, and PIC2
PIC2 and PIC3 powered off	Online: PIC0 and PIC1 Offline: PIC2 and PIC3
PIC1 and PIC2 powered off	Online: PIC0 and PIC3 Offline: PIC1 and PIC2

Table 1: MPC5E-40G10G Active PICs *(Continued)*

CLI Configuration	PIC Selection
PIC0 and PIC3 powered off	Online: PIC1 and PIC2 Offline: PIC0 and PIC3
PIC0 and PIC1 powered off	Online: PIC2 and PIC3 Offline: PIC0 and PIC1
Invalid PIC Configuration (All other combinations of PICs powered off)	Online: PIC0 and PIC1 Offline: PIC2 and PIC3 **NOTE**: Default PIC configuration is selected for all invalid PIC configurations.

RELATED DOCUMENTATION

- 6x40GE + 24x10GE MPC5E

CHAPTER 3

Fabric Management

Fabric Resiliency | 26

Fabric-Plane-Management-on-MX10008-Devices | 55

Platform Redundancy FEB Redundancy Support for High Availability of ACX7509 Devices | 57

Fabric Grant Bypass | 61

Smooth Upgrade from SFB to SFB2 | 64

Fabric Resiliency

IN THIS SECTION

- Fabric Resiliency and Degradation | 26
- MX Series Routers Fabric Resiliency | 29
- Detection and Recovery of Fabric-Related Failures Caused by Loss of Connectivity on MX Series Routers | 31
- Detection and Corrective Actions of Line Cards with Degraded Fabric on MX Series Routers | 34
- Understanding Fabric Fault Handling on T4000 Router | 36
- Understanding Fabric Fault Handling on PTX5000 Packet Transport Router | 38
- Understanding Fabric Fault Handling on Enhanced Switch Fabric Board (SFB2) | 43
- Managing Bandwidth Degradation | 44
- Fabric Hardening and Recovery on PTX10004, PTX10008, and PTX100016 with PTX10K-LC1202-36MR Line Card | 45
- Disabling Line Card Restart to Limit Recovery Actions from Degraded Fabric Conditions | 47
- Disabling an FPC with Degraded Fabric Bandwidth | 47
- Error Handling by Fabric OAM | 48

Fabric Resiliency and Degradation

IN THIS SECTION

- Packet Forwarding Engine Errors and Recovery on PTX Series Routers | 27
- Packet Forwarding Engine Errors and Recovery on T640, T1600 or TX Matrix Routers | 27

Juniper routers and switches have built in resiliency to tackle failures and error conditions encountered during normal operation. Immediate action is taken by JUNOS software to remedy the failure conditions to minimize traffic loss. No manual intervention is needed. Fabric degradation could be one of the

reasons leading to such error conditions. The following sections explain how the PFEs recover in a resilient manner from these failures.

Packet Forwarding Engine Errors and Recovery on PTX Series Routers

Packet Forwarding Engine destinations can become unreachable on PTX Series routers for the following reasons:

- The fabric Switch Interface Boards (SIBs) are offline as a result of a CLI command or a pressed physical button.
- The fabric SIBs are turned offline by the control board because of high temperature conditions.
- Voltage or polled I/O errors in the SIBs are detected by the control board.
- Unexpected link-training errors occur on all connected planes.
- Two Packet Forwarding Engines can reach the fabric but not each other.
- Link errors occur where two Packet Forwarding Engines have connectivity with the fabric but not through a common plane.

Starting with Junos OS Release 13.3, you can use PTX Series routers to configure Packet Forwarding Engine (PFE)-related error levels and the actions to perform when a specified threshold is reached.

If error levels are not defined, a PTX Series router begins the following phases in the recovery process:

1. SIB restart phase: The router attempts to resolve the issue by restarting the SIBs one by one. This phase does not start if the SIBs are functioning properly and a single line card is facing an issue.
2. SIB and line card restart phase: The router restarts both the SIBs and the line card. If there are line cards that are unable to initiate high-speed links to the fabric after reboot, it is not relevant to loss of live traffic as no interfaces are created for these line cards, preventing the system from issues.
3. Line Card offline phase: Because previous attempts at recovery failed, line cards and interfaces are turned off and the system avoids issues and error conditions.

Packet Forwarding Engine Errors and Recovery on T640, T1600 or TX Matrix Routers

Packet Forwarding Engine destinations can become unreachable on T640, T1600 or TX Matrix routers for the following reasons:

- The fabric Switch Interface Boards (SIBs) are offline as a result of a CLI command or a pressed physical button.
- The fabric SIBs are turned offline by the Switch Processor Mezzanine Board (SPMB) because of high temperature conditions.

- Voltage or polled I/O errors in the SIBs are detected by the SPMB.
- All Packet Forwarding Engines receive destination errors on all planes from remote Packet Forwarding Engines, even when the SIBs are online.
- Complete fabric loss is caused by destination timeouts, even when the SIBs are online.

The recovery process consists of the following phases:

1. The router restarts the fabric planes one by one. This phase does not start if the fabric plane is functioning properly and a single line card has issues.
2. Fabric plane and Line Card restart phase: The router restarts both the SIBs and the line cards. If there are line cards that are unable to initiate high-speed links to the fabric after reboot, it is not relevant to loss of live traffic as no interfaces are created for these line cards, preventing the system from issues.
3. Line card offline phase: Because previous attempts at recovery failed, line cards and interfaces are turned off and the system avoids issues and error conditions leading to serious consequences.

> **NOTE**: Starting in Junos OS Release 14.2R6, if a SIB becomes offline because of extreme conditions such as high voltage or high temperature, then as part of the recovery process, the router does not restart the fabric plane for that SIB.

The phased recovery mechanism mentioned above is exhaustive unless there are other errors which could be correlated to these issues.

Starting in Junos OS Release 14.2R6, you can manage fabric degradation in single-chassis systems better by incorporating fabric self-ping and Packet Forwarding Engine liveness mechanisms. Fabric self-ping is a mechanism to detect issues in the fabric data path. Using the fabric self-ping mechanism, every Packet Forwarding Engine ascertains that a packet destined to itself is reaching it when the packet is sent over the fabric path. Packet Forwarding Engine liveness is a mechanism to detect whether a Packet Forwarding Engine is reachable on the fabric plane. To verify that it is reachable, the Packet Forwarding Engine sends a self-destined packet over the fabric plane periodically. If any error is detected by these two mechanisms, the fabric manager raises a *fabric degraded alarm* and initiates recovery by restarting the line card.

MX Series Routers Fabric Resiliency

IN THIS SECTION

- Fabric Connectivity Restoration | 29
- Line Cards with Degraded Fabric | 31
- Connectivity Loss Towards a Single Destination Only | 31
- Redundancy Fabric Mode on Active Control Boards | 31

MX routers provide intelligent mechanisms to reduce packet loss in hardware failures scenarios.

This topic contains the following sections that describe fabric resiliency options, failure detection methods used, and corrective actions:

- "Fabric Connectivity Restoration" on page 29
- "Line Cards with Degraded Fabric" on page 31
- "Connectivity Loss Towards a Single Destination Only" on page 31
- "Redundancy Fabric Mode on Active Control Boards" on page 31

Fabric Connectivity Restoration

Packet Forwarding Engine destinations can become unreachable for the following reasons:

- The control boards go offline as a result of a CLI command or a pressed physical button.
- The fabric control boards are turned offline because of high temperature.
- Voltage or polled I/O errors in the fabric.
- All Packet Forwarding Engines receive destination errors on all planes from remote Packet Forwarding Engines, even when the fabrics are online.
- Complete fabric loss caused by destination timeouts, even when the fabrics are online.

When the system detects any unreachable Packet Forwarding Engine destinations, fabric connectivity restoration is attempted. If restoration fails, the system turns off the interfaces to trigger local protection action or traffic re-route on the adjacent routers.

The recovery process consists of the following phases:

1. Fabric plane restart phase: Restoration is attempted by restarting the fabric planes one by one. This phase does not start if the fabric plane is functioning properly and an error is reported by one line card only. An error message is generated to specify that a connectivity loss is the reason for the fabric plane being turned offline. This phase is performed for fabric plane errors only.

2. Fabric plane and line card restart phase: The system waits for the first phase to be completed before examining the system state again. If the connectivity is not restored after the first phase is performed or if the problem occurs again within a duration of 10 minutes, connectivity restoration is attempted by restarting both the fabric planes and the line cards. If you configure the `action-fpc-restart-disable` statement at the `[edit chassis fabric degraded]` hierarchy level to disable restart of the line cards when a recovery is attempted, an alarm is triggered to indicate that connectivity loss has occurred. In this second phase, three steps are taken:

   a. All the line cards that have destination errors on a PFE are turned offline.

   b. The fabric planes are turned offline and brought back online, one by one, starting with the spare plane.

   c. The line cards that were turned offline are brought back online.

3. Line card offline phase: The system waits for the second phase to be completed before examining the system state again. Connectivity loss is limited by turning the line cards offline and by turning off interfaces because previous attempts at recovery have failed. If the problem is not resolved by restarting the line cards or if the problem recurs within 10 minutes after restarting the line cards, this phase is performed.

The three phases are controlled by timers. During these phases, if an event (such as offlining/onlining line cards or fabric planes) times out, then the phase skips that event and proceeds to the next event. The timer control has a timeout value of 10 minutes. If the first fabric error occurs in a system with two or more line cards, the fabric planes are restarted. If another fabric error occurs within the next 10 minutes, the fabric planes and line cards are restarted. However, if the second fabric error occurs outside of the timeout period of 10 minutes, then the first phase is performed, which is the restart of only the fabric planes.

In cases where all the destination timeouts are traced to a certain line card, for example, one source line card or one destination line card, only that line card is turned offline and online. The fabric planes are not turned offline and online. If another fabric fault occurs within the period of 10 minutes, the line card is turned offline.

By default, the system limits connectivity loss time by detecting severely degraded fabric. No user interaction is necessary.

Line Cards with Degraded Fabric

You can configure a line card with degraded fabric to be moved to the offline state. On an MX960, MX480, or MX240 router, you can configure link errors or bad fabric planes. This configuration is particularly useful in partial connectivity loss scenarios where bringing the line card offline results in faster re-routing. To configure this option on a line card, use the `offline-on-fabric-bandwidth-reduction` statement at the `[edit chassis fpc slot-number]` hierarchy level.

Connectivity Loss Towards a Single Destination Only

In certain deployments, a line card indicates a complete connectivity loss towards a single destination only, but it functions properly for other destinations. Such cases are identified and the affected line card is recovered. Consider a sample scenario in which the active planes are 0,1,2,3 and the spare planes are 4,5,6,7 in the connection between line card 0 and line card 1. If line card 0 has single link failures for planes 0 and 1 and if line card 1 has single link failures for planes 2 and 3, a complete connectivity loss occurs between the two line cards. Both line card 0 and line card 1 undergo a phased mode of recovery and fabric healing takes place.

Redundancy Fabric Mode on Active Control Boards

You can configure the active control board to be in redundancy mode or in increased fabric bandwidth mode. To configure redundancy mode for the active control board, use the `redundancy-mode redundant` statement at the `[edit chassis fabric]` hierarchy level.

Detection and Recovery of Fabric-Related Failures Caused by Loss of Connectivity on MX Series Routers

IN THIS SECTION

- Fabric-Failure Detection Methods on MX Series Routers | 33

Connectivity loss in a router occurs when the router is unable to transmit data packets to other neighboring routers, although the interfaces on that router continue to be in the active state. As a result, the other neighboring routers continue to forward traffic to the impacted router, which drops the arriving packets without sending a notification to the other routers.

When a Packet Forwarding Engine in a router is unable to send traffic to other Packet Forwarding Engines over the data plane within the same router, the router is unable to transmit any packets to a neighboring router, although the interfaces are advertised as active on the control plane. Fabric failure can be one of the reasons for the loss of connectivity.

The following fabric failure scenarios can occur:

- Removal of the control board
- High-speed link 2 (HSL2) training failures
- Single link failure on a line card
- Multiple link failures on the same line card or the same fabric plane
- Multiple link failures randomly on a line card or a fabric plane
- Intermittent cyclic redundancy check (CRC) errors
- A complete loss of connectivity for only one destination and not to other destinations

When a line card does not forward traffic due to a certain reason to other line cards within the device, the control protocol on the Routing Engine is unable to detect this condition. The traffic transmission is not diverted to the functional, active line cards and, instead, the packets are continued to be sent to the affected line card and are dropped at that point. The following might be the causes for a line card being unable to forward traffic:

- All the planes in the system are in the `Offline` or `Fault` state.
- All the Packet Forwarding Engines on the line card might have disabled the fabric streams due to destination errors.

If all the Switch Control Boards (SCBs) lose connectivity to the line cards, then all the interfaces are brought down. If a Packet Forwarding Engine of a line card loses complete connectivity to or from the fabric, then that line card is brought down.

System hardware failures can be of the following types:

- A single occurrence or a rare failure for a brief period (such as environmental spikes). This failure is effectively healed without manual intervention by restarting the fabric plane and restarting the line cards and the fabric plane, if necessary.
- Repeated failures that occur frequently.
- A permanent failure.

A recovery from any case of reduced throughput, such as multiple Packet Forwarding Engine destination timeouts on multiple planes is not attempted. Restoration of connectivity is attempted only when all the planes are in the `Offline` or `Fault` state or when the destinations are unreachable on all active planes.

If connectivity loss occurs because of a certain line card, which is either a common source or common destination of the destination timeout, and if you have configured the `action-fpc-restart-disable` statement at the `[edit chassis fabric degraded]` hierarchy level, no recovery action is taken. The `show chassis fabric reachability` command output can be used to verify the status of the fabric and the line card. An alarm is triggered to indicate that the particular line card is causing the connectivity loss.

Fabric-Failure Detection Methods on MX Series Routers

The chassis daemon (chassisd) process detects the removal of a control board. The removal of the control board causes all the active planes that reside on that board to be disabled and a switchover is performed. If the active Routing Engine is also unplugged along with the control board, the detection of the control board removal is delayed until the switchover of the Routing Engine occurs and the reconnection in the primary, backup Routing Engine pair occurs. If the control board is turned offline by specifying the `request chassis cb slot` *`slot-number`* `offline` or a pressed physical button to cause a graceful shutdown, a fabric failure does not occur, even if the control board is moved to the offline state.

If you remove the control board on the primary Routing Engine, resulting in removal of active fabric planes, the line card takes the local action of disabling the removed planes. If spare planes are available, the line card initiates switchover to spare planes. If an active control board on a backup Routing Engines is removed, the primary Routing Engine disables the removed planes and performs the switchover to spare planes, if available. The software attempts to optimize the duration of connectivity loss by disabling all removed planes. The spare planes are transitioned to the online state one by one.

Fabric self-ping is a mechanism to detect any issues in the fabric data path. Each Packet Forwarding Engine forwards fabric data cells that are destined to itself over all active fabric planes. To transmit the data cell, the Packet Forwarding Engine fabric sends the request cells over an active plane and waits for a grant packet. The destination Packet Forwarding Engine sends a grant packet over the same plane on which the request cell is received. When the grant cell is received, the source Packet Forwarding Engine sends the data cell.

The Packet Forwarding Engine fabric contains the capability to detect grant delays. If grants are not received within a certain period of time, a destination timeout is declared. Destination timeout on a certain plane by a Packet Forwarding Engine on two or more line cards is considered as an indication for plane failures. Even if one Packet Forwarding Engine on a line card flashes an error, the line card is considered to be in error. Destination timeouts are noticed when the Packet Forwarding Engine sends traffic actively because requests are sent only for valid data cells. The software takes an appropriate action based on the destination timeout. For self-ping, a data cell is destined to the source Packet Forwarding Engine only.

Fabric ping failure messages are sent to the fabric manager on the Routing Engine, which collates all of the errors reported by all the line cards and takes a corrective action. For example, a ping failure for all links of the same line card might indicate a problem on the line card. Ping failure for multiple line cards for the same fabric plane might indicate a problem with the fabric.

If the Routing Engine determines that a fabric plane is down, based on the information on errors it receives from the line cards or the Packet Forwarding Engines, over a period of 5 seconds, it indicates a fabric failure. The duration of 5 seconds is the period for which the Routing Engine collates the errors from all of the line cards.

Fabric self-ping packets are periodically sent to check the sanity of the fabric links. Self pings are sent at interval of 500 ms. The destination timeout is also checked in intervals of 500 ms. If two timeouts ocur successively, self ping failure is detected. When a destination timeout is received, the Packet Forwarding Engine fabric stops the sending of packets to the fabric. To examine the link condition again, the software resets the credits to ensure that new requests are sent again. When a self-ping failure occurs, the line card removes the affected plane from sending data to all destinations. This method ensures that self-ping is not attempted to be sent again on the defective plane.

The following guidelines apply to the self-ping capability:

- By default, self pings are not sent on spare fabric planes because spare planes do not carry traffic.
- The size of self-ping packets is large enough to enable the cells to be loaded over all the active fabric planes (maximum of 8 for MX Series routers).
- A detection of received self-ping packets is not performed.
- High priority queue is used to enable self-ping to be sent for oversubscription cases.

Detection and Corrective Actions of Line Cards with Degraded Fabric on MX Series Routers

You can configure a line card with degraded fabric to be moved to the offline state on an MX960, MX480, or MX240 router. Configuring this feature does not affect the system. You can configure this feature without restarting the line card or restarting the system.

The following scenarios can occur when you configure the feature to disable line cards with degraded fabric:

- If a line card has degraded fabric bandwidth and if you configure this capability to turn off such a line card after it has been operating with degraded fabric for some time, the corrective action is still taken.
- If a line card has been brought offline because of fabric errors and this functionality to move the line card to offline state is disabled, the line card is transitioned to the online state automatically.
- If a line card has been brought offline because of fabric errors and this functionality to move the line card to offline state is disabled or configured for some other line card, the line card that was turned offline is transitioned to the online state automatically.

- All the line cards that were brought offline because of degraded fabric, when you configured this setting, are brought back online when you commit any configuration under the `[edit chassis]` hierarchy level. Similarly, a restart of the chassis daemon or the *Graceful Routing Engine switchover* (GRES) operation also causes the line card that is disabled because of degraded fabric to be moved to the online state.

Degraded fabric indicates that a line card is operating with less than the required number of active fabric planes. If an line card is operating with less than four planes, it is considered to be degraded. This rule applies to all types of line cards and fabric. Degraded condition denotes that good fabric traffic exists at a reduced bandwidth.

The following conditions can result in degradation of fabric:

- The fabric control boards go offline as a result of an unintentional, abrupt power shutdown.
- An application-specific integrated circuit (ASIC) error, which causes a plane of a control board to be automatically turned offline.
- Manually bringing the fabric plane or the control board to the offline state.
- Removal of the control board
- Self-ping failure on any plane.
- HSL2 training failure for active plane.
- If a spare fabric plane has CRC errors, and this spare plane is made online, the link with the CRC error is disabled. This mechanism might cause a degradation in fabric in one direction and might cause a null route in the other direction.
- When a self-ping or HSL2 training failure occurs, the fabric plane is disabled for a particular line card and it is online for other line cards. This condition can also cause a null route.

If you need to remove the control board or move a fabric plane to the offline state during a system maintenance, you must enable the functionality to turn the line cards with degraded bandwidth to the offline state (by using the `offline-on-fabric-bandwidth-reduction` statement at the `[edit chassis fpc slot-number]` hierarchy level).

The following corrective actions are performed when a null route or fabric degradation occurs:

- Regardless of whether a spare control board is available or not, self-ping state for each line card is monitored at intervals of 5 seconds at the Routing Engine. Fabric manager uses the following rule to determine the presence of a spare control board:
    - MX960 routers with I-chip or I-chip and Trio-chip-based line cards that contain three control boards

  - MX240 or MX480 routers with I-chip or I-chip and Trio-chip-based line cards that contain two control boards
  - MX960, MX480, or MX240 routers that contain only Trio-based line cards are not considered to contain a spare control board

  If during any such interval of 5 seconds, two line cards indicate a failure for the same plane, a switchover to the spare control board. In this case, the control board that reported errors is turned offline and the spare control board is turned online.

- If a spare control board is available, and if you configure the functionality to disable line cards with degraded fabric, self-ping state for each line card is monitored at intervals of 5 seconds at the Routing Engine. The following conditions can occur:
  - During any 5-second interval, if only one line card indicates a failure for a plane, the fabric Manager waits for the next interval. During the subsequent interval, if no other line card indicates a failure for the same plane, switchover of the control board is performed.
  - During any 5-second interval, if multiple line cards show failures for multiple control boards, the fabric manager waits for the next interval. During the subsequent interval, if the same condition remains, all the failing line cards are turned offline even if the spare control board is present.
  - During any 5-second interval, if any line card shows a failure for multiple planes on multiple control boards, the fabric manager waits for the next interval. During the subsequent interval, if the same condition persists, the line card is turned offline even if the spare control board is present.
- If spare planes are not available, the line card is turned offline when it displays a failure for a single plane or multiple planes. The line card is brought offline only if you previously configured the `offline-on-fabric-bandwidth-reduction` statement at the `[edit chassis fpc slot-number]` hierarchy level.

Understanding Fabric Fault Handling on T4000 Router

The T4000 router consists of a Switch Interface Board (SIB) with fabric bandwidth double the capacity of the T1600 router. The fabric fault management functionality is similar to that in T1600 routers. This topic describes the fabric fault handling functionality on T4000 routers.

The fabric fault management functionality involves monitoring all high-speed links connected to the fabric and the ones within the fabric core for link failures and link errors.

Action is taken based on the fault and its location. The actions include:

- Reporting link errors in system log files and sending this information to the Routing Engine.

- Reporting link failures at the Flexible Port Concentrator (FPC) or at the SIB and sending this information to the Routing Engine.
- Marking a SIB in `Check` state.
- Moving a SIB into `Fault` state.

The SIB in T4000 routers forms the core of the fabric with 4:1 redundancy—the redundant SIB becomes active when the active SIB becomes nonfunctional, is deactivated, or is removed. The following are the high-level indications of fabric faults that are monitored by Junos OS:

- An SNMP trap is generated whenever a SIB is reported as `Check` or `Fault`.
- `show chassis alarms`—Indicates that a SIB is in `Check` or `Fault` state.
- `show chassis sibs`—Indicates that a SIB is in `Check` or `Fault` state or that a SIB is in `Offline` state when the SIB initializes (this occurs when the SIB does not power on fully).
- `show chassis fabric fpcs`—Indicates whether any fabric links are in error on the FPCs' side.
- `show chassis fabric sibs`—Indicates whether any fabric links are in error on the SIBs' side.
- The `/var/log/messages` system log messages file at the Routing Engine has error messages with the prefix `CHASSISD_FM_ERROR`.
- The SIBs display the `FAIL` LED.

> **NOTE**: The fabric planes in the chassis determine whether the chassis is a T640 router, a T1600 router, or a T4000 router. Power entry modules (PEMs), FPCs, or fan trays do not determine chassis personality. Alarms are raised if the old PEMs or fan trays are present in a T4000 chassis. You can identify a router based on its fabric planes:
>
> - If all planes present are F16-based SIBs, the chassis is a T640 chassis.
> - If all planes present are SF-based SIBs, the chassis is a T1600 chassis.
> - If all planes present are XF-based SIBs, the chassis is a T4000 chassis.
>
> Note that mixing of fabric planes is not a supported configuration except during upgrade. You can change the personality of a chassis without a reboot by changing all the fabric planes and by issuing the `set chassis fabric upgrade-mode` CLI command to check the personality. If you do not issue the `set chassis fabric upgrade-mode` CLI command, the personality does not change until the next boot.

In T4000 routers, you come across the following faults:

- Board-level faults—These faults occur during initialization or during runtime. Power failure during board initialization, high-speed links transmit error, and polled I/O error during runtime are some examples of board-level faults.
- Link-level faults—These faults occur during initialization or during runtime. Link training failure at initialization time (failure of the data plane links between an FPC and a SIB to be trained when the FPC or SIB is initialized), error detected on the channel between the SIB and a Packet Forwarding Engine, cyclic redundancy check (CRC) errors detected at runtime, and Packet Forwarding Engine destination errors are types of link-level faults.
- Faults based on environmental conditions—These faults occur during runtime. Sudden removal of an FPC or a SIB might result in an operator error. When a SIB becomes too hot or when SIB voltages are beyond thresholds, the errors generated are classified into environmental errors.

You can implement one of the following options to handle the faults:

- Log the error and raise an alarm.
- Switch over to the spare plane, if available.
- Continue with a reduced number of parts of a plane.
- Continue with a reduced number of usable planes.
- Use polling-based fault handling.
- Monitor high-speed link errors and manually bring the link down to a suitable threshold.

The polled I/O errors and the link errors are monitored every 500 milliseconds, and the board exhaust temperature and board voltages are monitored every 10 seconds.

Understanding Fabric Fault Handling on PTX5000 Packet Transport Router

IN THIS SECTION

- SIB-Level Faults | **40**
- FPC-Level Faults | **41**

Starting with Junos OS Release 14.1, the PTX5000 Packet Transport Router supports nine Switch Interface Boards (SIBs). Each FPC2-PTX-P1A FPC supports 1Tb per slot capacity, thereby resulting in a fabric bandwidth of 16 terabits per second (Tbps), full-duplex (8 Tbps of any-to-any, nonblocking, half-duplex) switching.

The fabric fault management functionality involves monitoring all high-speed links connected to the fabric and the ones within the fabric core for link failures and link errors.

The faults that occur in a PTX5000 can be broadly categorized into:

- Board faults—Faults that arise in a SIB or in an Flexible Port Concentrator (FPC) during initialization or during runtime, including issues that arise when a router component is accessing the SIB or FPC or issues that arise out of midplane failures.
- Link faults—Faults that occur on high-level links in a router during initialization or during runtime.
- Faults due to environmental conditions—Faults that occur because of overvoltage or over-temperature; faults that occur because of an operator mishandling a SIB or an FPC, and so on.

The router takes action on the basis of the fault category and the fault location. The actions include:

- Reporting link errors in system log files and sending this information to the Routing Engine.
- Displaying the link errors when you run one of the operational commands listed in Table 2 on page 39:

Table 2: List of Operational Mode Commands

Operational mode command	Description
`show chassis sibs`	Displays Switch Interface Boards (SIBs) status information.
`show chassis fabric fpcs <slot number>`	Displays the fabric state of the specified FPC slot. If no slot number is provided, it displays the status of all FPCs.
`show chassis fabric sibs <slot number>`	Displays the state of the electrical switch fabric link between the SIBs and the FPCs.
`show chassis fabric reachability <detail>`	Displays the current state of fabric destination reachability.

Table 2: List of Operational Mode Commands *(Continued)*

Operational mode command	Description
`show chassis fabric unreachable-destinations`	Displays the list of destinations that have transitioned from a reachable state to an unreachable state.
`show pfe statistics error`	Displays Packet Forwarding Engine error statistics.
`show chassis fabric topology <sib_slot>`	Displays the input-output link topology.
`show chassis fabric summary`	Displays the state of all fabric planes and the elapsed uptime.

- Reporting link failures at the FPC level or at the SIB level and sending this information to the Routing Engine.
- Reporting link error information in the `show chassis alarms` operational command.
- Moving a SIB into *fault* state.

The following sections explain fabric fault handling functionality on the PTX5000:

SIB-Level Faults

The following sections give a brief overview on the types of faults that occur on a SIB and how to handle them:

Types of Faults That Occur on a SIB

Board faults and link faults occur on a SIB during initialization and during runtime. Some faults occur because of environmental conditions such as overvoltage or over-temperature, or when an operator mishandles the SIB.

NOTE: Run the operational mode commands listed in Table 2 on page 39 to detect faults.

During SIB initialization and runtime, the following faults might occur:

- Board faults, such as failure of SIBs to power up, ASICs reset failure, Switch Processor Mezzanine Board (SPMB) polled I/O access failure to ASICs, board component failures such as PIC failures, or router component access failures.
- Link faults such as high-level link errors that occur during *link training*.
- Faults that occur because of environmental conditions or because of mishandling of the SIB by the operator.

Handling SIB-Level Faults

The following list illustrates how the router handles a fault that occurs on a SIB during initialization, during runtime, because of environmental conditions, and because of mishandling of the SIB by the operator:

- To handle a board fault on a SIB during initialization, the chassis daemon (*chassisd*) marks the SIB to be in *fault* state. After the SIB is marked as faulty, no operation occurs on this SIB.
- To handle a board fault on a SIB during runtime, chassisd logs an error in the system log file, raises an alarm indication error type, and marks the SIB as faulty. After the SIB is marked as faulty, no operation occurs on this SIB.
- To handle a link fault on a SIB during runtime, when a link error comes up during link training, chassisd informs the FPC corresponding to the link on which the error occurred to disable the links to the affected SIB. The chassisd then sends an error message to all the other FPCs in the router to stop using the failed SIB link and a link error alarm is generated. Note that when more than one FPC report errors for a given SIB, the SIB is disabled for all FPCs and no traffic is sent by the Packet Forwarding Engine through the affected SIB.
- To handle a link fault on a SIB during runtime, chassisd marks the SIB as faulty and specifies a reason for the error, and the SIB is disabled.
- In case of an environmental fault—overvoltage or over-temperature—the SIB is immediately taken offline. Note that an error is logged periodically as the temperature or voltage rises, and the SIB is taken offline when it crosses a certain threshold voltage or temperature.
- When a SIB is abruptly removed or dislodged, all the affected Packet Forwarding Engines stop using that plane to reach other Packet Forwarding Engines in the router.

FPC-Level Faults

The following sections give a brief overview of the types of faults that occur on an FPC and how to handle them:

Types of Faults That Occur on an FPC

Board faults and link faults occur on an FPC during initialization and during runtime. Some faults also occur because of environmental conditions such as overvoltage, over-temperature, or when the operator mishandles the FPC.

NOTE: Run the operational commands listed in Table 2 on page 39 to detect faults.

During FPC initialization and runtime, the following faults might occur:

- Board faults such as failure of FPCs to power up, failure of ASICs to come out of reset phase, PMB polled I/O access failure to ASICs, board component failures such as PIC failure, or router component access failures.
- Link faults such as high-level link errors that occur during link training.
- Faults that occur because of environmental conditions or because of mishandling of an FPC by the operator.

Handling FPC-Level Faults

The following list illustrates how the router handles a fault that occurs on an FPC during initialization, during runtime, because of environmental conditions, and because of mishandling of the FPC by the operator:

- To handle a board fault on an FPC during initialization, chassisd marks the FPC to be in *fault* state. After the SIB is marked as faulty, no operation occurs on this FPC.
- To handle a board fault on an FPC during runtime, chassisd logs an error in the system log file, raises an alarm indication error type, and marks the FPC as faulty. After the FPC is marked as faulty, no operation occurs on this FPC.
- To handle onboard link errors on an FPC during initialization or during runtime, the FPC is taken down and all the affected Packet Forwarding Engines stop using that plane to reach other Packet Forwarding Engines in the router.

  NOTE: No planes are taken down during initialization because the link training process for the fabric is not yet complete.

  Onboard link errors during runtime are resolved on the basis of current configuration; either the FPC is rebooted or the error is logged and the FPC continues with initialization.

- In case of an environmental fault—over voltage or over-temperature—the FPC is immediately taken offline. Note that an error is logged periodically as the temperature or voltage rises, and the FPC is taken offline when it crosses a certain threshold voltage or temperature.
- When an FPC is abruptly removed or dislodged, all the other Packet Forwarding Engines stop sending traffic to the Packet Forwarding Engines in this FPC.

Understanding Fabric Fault Handling on Enhanced Switch Fabric Board (SFB2)

The MX2000 line of routers support Switch Fabric Boards (SFBs) and enhanced SFBs (SFB2s) but not both at the same time. The SFB and SFB2 host three fabric planes each. So, the chassis supports a total of 24 planes. Junos OS Release 15.1F6 and 16.1R1 support fabric fault handling for each plane in both SFB and SFB2. In earlier releases, fabric fault handling is supported for each SFB, not for each plane.

Table 3 on page 43 lists the differences between fabric fault handling per plane and per SFB.

Table 3: SFB Versus SFB2 Fabric Fault Handling

SFB Level (SFB)	Plane Level (SFB and SFB2)
Cyclic redundancy check(CRC) errors on any link on the SFB are indicated on the SFB.	CRC errors on any link on the SFB or SFB2 are indicated on the plane.
On encountering destination errors, the line card isolates the SFB (all 3 planes).	On encountering destination errors, the line card isolates the corresponding plane. Other planes continue to operate.

Fabric fault handling per-plane provides the following benefits:

- Increased granularity, which helps identify, isolate, and repair faults.
- Alarms and log messages provide fault information per plane instead of per SFB, which makes debugging easier.
- If an SFB has a single faulty plane, the other two planes can continue to operate. There is no need to take the entire SFB offline.
- In case of transient errors, while repairing you can isolate a single plane instead of isolating the bouncing the SFB.

To view fabric fault handling information for all 24 planes, use the `extended` option with the existing fabric commands.

Managing Bandwidth Degradation

Certain errors result in packets being dropped by a system without notification. Other connected systems continue to forward traffic to the affected system, impacting network performance. A severely degraded fabric plane can be one of the reasons here.

By default, Juniper Networks routers attempt to start healing from such situations when the system detects issues with Packet Forwarding Engines. If the healing fails, the system turns off the interfaces, thereby preventing further escalations.

On Junos OS, you can use the configuration statement `bandwidth-degradation` at the `[edit chassis fpc slot-numberfabric]` hierarchy to detect and respond to fabric plane degradation in ways you deem fit. You can configure the router to specify which healing actions the router should take once such a condition is detected. You can also use the optional statement `blackhole-action` to determine how the line card responds to a 100 percent fabric degradation scenario. This command is optional and overrides the default fabric hardening procedures.

> **NOTE**: The `bandwidth-degradation` command and the `offline-on-fabric-bandwidth-reduction` statements are mutually exclusive. If both commands are configured, an error is issued during the commit check.

The `bandwidth-degradation` statement is configured with a percentage and an action. The `percent-age` value can range from 1 to 99, and it represents the percentage of fabric degradation needed to trigger a response from the line card. The `action` attribute determines the type of response the line card performs once fabric degradation reaches the configured percentage.

The statement is only configured with an `action` attribute, which triggers when the percentage of fabric degradation reaches 100 percent.

The following actions can be applied to either configuration statement:

- `log-only`: A message gets logged in the chassisd and message files when the fabric degradation threshold is reached. No other actions are taken.
- `restart`: The line card with a degraded fabric plane is restarted once the threshold is reached.
- `offline`: The line card with a degraded fabric plane is taken offline once the threshold is reached. The line card requires manual intervention to be brought back online. This is the default action if no action attribute configured.

- `restart-then-offline`: The line card with a degraded fabric plane is restarted once the threshold is reached, and if fabric plane degradation is detected again within 10 minutes, the line card is taken offline. The line card requires manual intervention to be brought back online.

NOTE: This feature is available in the Junos OS Release 15.1R1.

Fabric Hardening and Recovery on PTX10004, PTX10008, and PTX100016 with PTX10K-LC1202-36MR Line Card

IN THIS SECTION

- Benefits | 46

PTX10004, PTX10008, and PTX100016 routers support fabric hardening. Fabric hardening is a resiliency feature to detect fabric blackholing and attempt automatic recovery process to restore the Packet Forwarding Engines from blackhole condition.

We've enabled fabric hardening by default. When the system detects any unreachable Packet Forwarding Engine destination, this feature attempts automatic fabric connectivity restoration.

If restoration fails, the system turns off the interfaces to limit the blackholing and trigger alarm to indicate the unreachable Packet Forwarding Engine destinations. However, instead of turning off the interfaces, user can configure Packet Forwarding Engine offline by using `set chassis fabric event reachability-fault actions recovery-failure pfe-offline` statement at the `[set chassis fabric event]` hierarchy level.

Packet Forwarding Engine destinations can become unreachable for the following reasons:

- Complete self-blackhole- Complete connectivity loss occurs on all fabric planes.
- Complete peer-blackhole- Two Packet Forwarding Engines can reach the fabric but not each other.

You can configure a router to trigger fabric recovery when the router detects degradation in fabric bandwidth by using `degraded` statement at the `[edit chassis fabric event reachability-fault]` hierarchy level. The degradation statement is configured with a percentage value that can range from 1 to 99. The percentage value represents the error threshold for fabric bandwidth degradation and the router starts the recovery once the threshold is reached.

When the degraded error threshold is configured, the router can also attempt fabric recovery for the following reasons:

- Self degrdation- Degraded fabric condition in a Packet Forwarding Engine destination.
- Peer degradation- Degraded fabric condition between two Packet Forwarding Engines.

The fabric recovery process involves one or more of the following phases:

- SIB restart phase: If Packet Forwarding Engine destinations across multiple line cards have fabric connectivity failures on planes, then the router attempts to resolve the issue by restarting the SIBs. If multiple SIBs require a restart, the router restarts the SIBs one by one. You can disable restarting of SIBs to limit recovery actions from a degraded fabric condition. To disable restarting of SIBs, use the `set chassis fabric event reachability-fault actions sib-restart-disable` statement at the `[edit chassis fabric event]` hierarchy level.
- FPC restart phase: The router attempts automatic recovery by restarting the FPCs for the following scenarios:
  - All Packet Forwarding Engine destinations having complete or partial blackhole conditions are in a single FPC.
  - If Packet Forwarding Engine destinations with complete or partial blackhole conditions occur across different FPCs, but none of the Packet Forwarding Engines share common plane of failure.
  - The attempt of SIB restart phase failed to recover Packet Forwarding Engines.

  You can disable restarting of FPCs to limit recovery actions from a degraded fabric condition. To disable restarting of FPCs, use the `set chassis fabric event reachability-fault actions fpc-restart-disable` statement at the `[set chassis fabric event]` hierarchy level.
- Packet Forwarding Engine offline phase: Because previous attempts of recovery phases failed or recovery action disabled in the configuration, the router turns off the interfaces to limit the blackholing by default. However, instead of turning off the interfaces, user can configure Packet Forwarding Engine offline by using `set chassis fabric event reachability-fault actions recovery-failure pfe-offline` statement at the `[set chassis fabric event]` hierarchy level.

If the router has only Packet Forwarding Engines with peer blackhole or peer degradation condition, then the router attempts recovery through link autoheal by restarting fabric links on the planes.

Benefits

- Attempts automatic recovery process to recover the Packet Forwarding Engines from degraded fabric conditions to minimize traffic loss.
- Raise alarms that provide fault information to indicate the unreachable Packet Forwarding Engine destinations, if the recovery fails.

Disabling Line Card Restart to Limit Recovery Actions from Degraded Fabric Conditions

You can disable line card restarts to limit recovery actions from a degraded fabric condition. On T640 and T1600 routers, only the fabric plane is restarted. On PTX Series routers, only the Switch Interface Boards (SIBs) are restarted. To disable the restarting of line cards, use the `action-fpc-restart-disable` statement at the `[edit chassis fabric degraded]` hierarchy level:

```
[edit chassis fabric]
degraded
```

Whenever a line card restart is disabled, an alarm is raised when there are unreachable destinations present in the router, and you must restart the line cards manually.

To ensure that both the fabric planes (T640 and T1600 routers) or the SIBs (PTX Series routers) and the line cards are restarted during the recovery process, do not configure the `action-fpc-restart-disable` statement at the `[edit chassis fabric degraded]` hierarchy level.

Disabling an FPC with Degraded Fabric Bandwidth

You can bring an FPC with degraded fabric bandwidth offline to avoid causing a null route in the chassis for an extended time. To configure the option to disable an FPC with degraded bandwidth, use the `offline-on-fabric-bandwidth-reduction` statement at the `[edit chassis fpc` *`slot-number`*`]` hierarchy level:

```
[edit chassis]
fpc slot-number {
    offine-on-fabric-bandwidth-reduction;
}
```

The fabric manager checks the number of current active planes periodically. If the number of active planes is lower than the required number of active planes for a particular router, the system waits 10 seconds before it takes any corrective action. If the reduced bandwidth condition persists for an FPC and if this feature has been configured for the FPC, the system brings the FPC offline.

Error Handling by Fabric OAM

Fabric Operation, Administration, Maintenance (OAM) helps in detecting failures in fabric paths. Fabric OAM validates the fabric connectivity before sending traffic on a fabric plane whenever a new fabric path is brought up for a PFE. If a failure is detected, the software reports the fault and avoids using that fabric plane for that PFE. This feature works by sending a very low packets per second (PPS) self-destined OAM traffic over each of the available fabric planes and detecting any loss of traffic at the end points (fabric self-ping check).

NOTE:

- In Junos OS Evolved Release 20.4R1, the fabric OAM feature is enabled by default. You can disable the feature by using the CLI command `set chassis fabric oam detection-disable`.
- In Junos OS Evolved Releases 20.4R2 and21.1R1, the fabric OAM feature is disabled by default.
- In Junos OS Evolved Release 22.1R1, the runtime fabric OAM feature is enabled by default. You can disable the feature by using the CLI command `edit chassis fabric oam runtime-disable`. The runtime fabric OAM feature is supported on PTX10004, PTX10008, and PTX10016 routers.

The Fabric OAM checks are done at boot time. The failed paths are disabled. The system does not do any recovery action. However, you can try to recover the affected fabric planes by restarting the SIBs. The recovery steps depend on the nature of the failure.

A fabric plane represents an independent bidirectional path between a PFE and fabric ASIC. Runtime Fabric OAM periodically checks fabric connectivity and helps detect and report failures in fabric planes during system runtime. Runtime Fabric OAM detects the fabric reachability of each PFE.

When the same fabric planes fail on a single or multiple FPCs, restart the SIB containing the failed planes, using the following commands:

`user@host>` **request chassis sib slot** *slot-number* `offline`

`user@host>` **request chassis sib slot** *slot-number* `online`

When random fabric planes fail on multiple FPCs, the fault cannot be isolated to a specific FPC or SIB. However, you can try to recover the planes by restarting the SIBs that contain the affected planes in a sequential manner.

For each error detected by the fabric OAM feature, a syslog is generated. The following is an example:

```
Oct 29 23:02:46  router-dvi resiliencyd[12921]: Error: /fpc/0/fabspoked-pfe/0/cm/0/pfe/0/
fabric_link_foam_fault (0x410009), scope: board, category: internal, severity: major, module:
fab-pfe@0, type: fabric link foam fault
```

The following syslog message indicates that a fabric OAM-related error was cleared.

```
Oct 29 23:25:14  router-dvi resiliencyd[12921]: Performing action clear-cmalarm for error /fpc/0/
fabspoked-pfe/0/cm/0/pfe/0/fabric_link_foam_fault (0x410009) in module: fab-pfe@0 with scope:
board category: internal level: major
```

Also, you can use the CLI commands `show system errors active detail` and `show system alarms` to view the Fabric OAM-related errors.

```
user@router> show system alarms
20 alarms currently active
Alarm time               Class  Description
2020-08-20 10:32:02 UTC  Major  FPC 0 Ideeprom read failure
2020-08-20 10:58:07 UTC  Major  FPC 0 Self_FOAM fault detected
[...Output truncated...]
```

```
user@router> show system alarms
14 alarms currently active
Alarm time               Class  Description
2022-02-15 23:45:28 PST  Minor  FPC 1 Volt Sensor Fail
2022-02-16 00:02:03 PST  Major  FPC 1 Self_Fabric OAM Runtime fault detected
2022-02-15 23:43:04 PST  Minor  FPC 1 Secure boot disabled or not enforced
2022-02-15 23:55:50 PST  Minor  FPC 3 Secure boot disabled or not enforced
[...Output truncated...]
```

The following output shows details for both single fabric plane failure (on Packet Forwarding Engine 0) and all fabric planes failure (on Packet Forwarding Engine 1).

```
user@router> show system errors active detail
System Active Errors Detail Information
FPC 0
----------------------------------------------------------------
```

```
Error Name            : fabric_down_condition_on_pfe
Identifier            : /fpc/0/fabricHub/0/cm/0/fabrichub/1/fabric_down_condition_on_pfe
Description           : fabric_down_condition_on_pfe
State                 : enabled
Scope                 : pfe
Category              : functional
Level                 : major
Threshold             : 1
Error limit           : 0
Occur count           : 3
Clear count           : 2
Last occurred(ms ago) : 103158
System Active Errors Detail Information
FPC 0
---------------------------------------------------------------
Error Name            : fabric_link_foam_fault
Identifier            : /fpc/0/fabspoked-pfe/0/cm/0/pfe/0/fabric_link_foam_fault
Description           : fabric link foam fault
State                 : enabled
Scope                 : board
Category              : internal
Level                 : major
Threshold             : 1
Error limit           : 100
Occur count           : 2
Clear count           : 0
Last occurred(ms ago) : 113277
System Active Errors Detail Information
FPC 0
---------------------------------------------------------------
Error Name            : fabric_link_foam_fault
Identifier            : /fpc/0/fabspoked-pfe/0/cm/0/pfe/1/fabric_link_foam_fault
Description           : fabric link foam fault
State                 : enabled
Scope                 : board
Category              : internal
Level                 : major
Threshold             : 1
Error limit           : 100
Occur count           : 12
Clear count           : 0
Last occurred(ms ago) : 103267
System Active Errors Detail Information
```

```
RE 0
--------------------------------------------------------------
Error Name            : fpga_min_supported_fw_ver_mismatch
Identifier            : /re/0/hwdre/0/cm/0/fpga_fw_events/UBAM FPGA/
fpga_min_supported_fw_ver_mismatch
Description           : firmware_version_lower_than_minimum_expected
State                 : enabled
Scope                 : board
Category              : functional
Level                 : minor
Threshold             : 10
Error limit           : 1
Occur count           : 1
Clear count           : 0
Last occurred(ms ago) : 68886367

FPC 1
--------------------------------------------------------------
Error Name            : fabric_link_self_fabric_oam_runtime_fault
Identifier            : /fpc/1/fabspoked-pfe/0/cm/0/pfe/0/
fabric_link_self_fabric_oam_runtime_fault
Description           : fabric link self fabric oam runtime fault
State                 : enabled
Scope                 : board
Category              : internal
Level                 : major
Threshold             : 1
Error limit           : 36
Occur count           : 1
Clear count           : 0
Last occurred(ms ago) : 2022-02-16 00:02:03 PST (448108 ms ago) System Active Errors Detail
Information
```

You can use the CLI command `show chassis fabric fpcs` to view the fabric OAM self-ping state of each fabric plane.

```
user@router> show chassis fabric fpcs
Fabric management FPC state:
FPC #0
    PFE #0
SIB0_Asic0_Fcore0 (plane 0)  Plane Disabled, Links ok Fabric OAM failed
SIB0_Asic0_Fcore0 (plane 1)  Plane Enabled, Links ok Fabric OAM success
```

```
SIB0_Asic0_Fcore0 (plane 2)  Plane Enabled, Links ok Fabric OAM success
SIB0_Asic0_Fcore0 (plane 3)  Plane Enabled, Links ok Fabric OAM success
SIB0_Asic0_Fcore0 (plane 4)  Plane Enabled, Links ok Fabric OAM success
SIB0_Asic0_Fcore0 (plane 5)  Plane Enabled, Links ok Fabric OAM success
SIB1_Asic0_Fcore0 (plane 6)  Plane Enabled, Links ok Fabric OAM success
SIB1_Asic0_Fcore0 (plane 7)  Plane Enabled, Links ok Fabric OAM success
SIB1_Asic0_Fcore0 (plane 8)  Plane Enabled, Links ok Fabric OAM success
SIB1_Asic0_Fcore0 (plane 9)  Plane Enabled, Links ok Fabric OAM success
SIB1_Asic0_Fcore0 (plane 10)  Plane Enabled, Links ok Fabric OAM success
SIB1_Asic0_Fcore0 (plane 11)  Plane Enabled, Links ok Fabric OAM success
    PFE #1
SIB0_Asic0_Fcore0 (plane 0)  Plane Enabled, Links ok Fabric OAM success
SIB0_Asic0_Fcore0 (plane 1)  Plane Enabled, Links ok Fabric OAM success
```

```
user@router> show chassis fabric fpcs
Fabric management FPC state:
FPC #1
    PFE #0
    SIB0_Asic0_Fcore0 (plane 0)  Plane Enabled, Links ok Fabric OAM Runtime success
    SIB0_Asic0_Fcore0 (plane 1)  Plane Disabled, Links ok Fabric OAM Runtime failed
    SIB0_Asic1_Fcore0 (plane 2)  Plane Enabled, Links ok Fabric OAM Runtime success
    SIB0_Asic1_Fcore0 (plane 3)  Plane Enabled, Links ok Fabric OAM Runtime success
    SIB0_Asic2_Fcore0 (plane 4)  Plane Enabled, Links ok Fabric OAM Runtime success
    SIB0_Asic2_Fcore0 (plane 5)  Plane Enabled, Links ok Fabric OAM Runtime success
    SIB1_Asic0_Fcore0 (plane 6)  Plane Enabled, Links ok Fabric OAM Runtime success
    SIB1_Asic0_Fcore0 (plane 7)  Plane Enabled, Links ok Fabric OAM Runtime success
    SIB1_Asic1_Fcore0 (plane 8)  Plane Enabled, Links ok Fabric OAM Runtime success
    SIB1_Asic1_Fcore0 (plane 9)  Plane Enabled, Links ok Fabric OAM Runtime success
    SIB1_Asic2_Fcore0 (plane 10)  Plane Enabled, Links ok Fabric OAM Runtime success
    SIB1_Asic2_Fcore0 (plane 11)  Plane Enabled, Links ok Fabric OAM Runtime success
    SIB2_Asic0_Fcore0 (plane 12)  Plane Enabled, Links ok Fabric OAM Runtime success
    SIB2_Asic0_Fcore0 (plane 13)  Plane Enabled, Links ok Fabric OAM Runtime success
    SIB2_Asic1_Fcore0 (plane 14)  Plane Enabled, Links ok Fabric OAM Runtime success
    SIB2_Asic1_Fcore0 (plane 15)  Plane Enabled, Links ok Fabric OAM Runtime success
```

The `show chassis fabric fpcs` command displays the following output when the fabric OAM feature is disabled:

```
user@router> show chassis fabric fpcs
Fabric management FPC state:
FPC #0
```

```
PFE #0
    SIB0_Asic0_Fcore0 (plane 0)  Plane Enabled, Links ok
    SIB0_Asic0_Fcore0 (plane 1)  Plane Enabled, Links ok
    SIB0_Asic0_Fcore0 (plane 2)  Plane Enabled, Links ok
    SIB0_Asic0_Fcore0 (plane 3)  Plane Enabled, Links ok
    SIB0_Asic0_Fcore0 (plane 4)  Plane Enabled, Links ok
    SIB0_Asic0_Fcore0 (plane 5)  Plane Enabled, Links ok
    SIB1_Asic0_Fcore0 (plane 6)  Plane Enabled, Links ok
    SIB1_Asic0_Fcore0 (plane 7)  Plane Enabled, Links ok
    SIB1_Asic0_Fcore0 (plane 8)  Plane Enabled, Links ok
    SIB1_Asic0_Fcore0 (plane 9)  Plane Enabled, Links ok
    SIB1_Asic0_Fcore0 (plane 10)  Plane Enabled, Links ok
    SIB1_Asic0_Fcore0 (plane 11)  Plane Enabled, Links ok
PFE #1
    SIB0_Asic0_Fcore0 (plane 0)  Plane Enabled, Links ok
    SIB0_Asic0_Fcore0 (plane 1)  Plane Enabled, Links ok
    SIB0_Asic0_Fcore0 (plane 2)  Plane Enabled, Links ok
    SIB0_Asic0_Fcore0 (plane 3)  Plane Enabled, Links ok
    SIB0_Asic0_Fcore0 (plane 4)  Plane Enabled, Links ok
    SIB0_Asic0_Fcore0 (plane 5)  Plane Enabled, Links ok
    SIB1_Asic0_Fcore0 (plane 6)  Plane Enabled, Links ok
    SIB1_Asic0_Fcore0 (plane 7)  Plane Enabled, Links ok
    SIB1_Asic0_Fcore0 (plane 8)  Plane Enabled, Links ok
    SIB1_Asic0_Fcore0 (plane 9)  Plane Enabled, Links ok
    SIB1_Asic0_Fcore0 (plane 10)  Plane Enabled, Links ok
    SIB1_Asic0_Fcore0 (plane 11)  Plane Enabled, Links ok
PFE #2
    SIB0_Asic0_Fcore0 (plane 0)  Plane Enabled, Links ok
    SIB0_Asic0_Fcore0 (plane 1)  Plane Enabled, Links ok
    SIB0_Asic0_Fcore0 (plane 2)  Plane Enabled, Links ok
    SIB0_Asic0_Fcore0 (plane 3)  Plane Enabled, Links ok
    SIB0_Asic0_Fcore0 (plane 4)  Plane Enabled, Links ok
    SIB0_Asic0_Fcore0 (plane 5)  Plane Enabled, Links ok
    SIB1_Asic0_Fcore0 (plane 6)  Plane Enabled, Links ok
    SIB1_Asic0_Fcore0 (plane 7)  Plane Enabled, Links ok
    SIB1_Asic0_Fcore0 (plane 8)  Plane Enabled, Links ok
    SIB1_Asic0_Fcore0 (plane 9)  Plane Enabled, Links ok
    SIB1_Asic0_Fcore0 (plane 10)  Plane Enabled, Links ok
    SIB1_Asic0_Fcore0 (plane 11)  Plane Enabled, Links ok
PFE #3
```

Release History Table

Release	Description
14.2R6	Starting in Junos OS Release 14.2R6, if a SIB becomes offline because of extreme conditions such as high voltage or high temperature, then as part of the recovery process, the router does not restart the fabric plane for that SIB.
14.2R6	Starting in Junos OS Release 14.2R6, you can manage fabric degradation in single-chassis systems better by incorporating fabric self-ping and Packet Forwarding Engine liveness mechanisms.
14.1	Starting with Junos OS Release 14.1, the PTX5000 Packet Transport Router supports nine Switch Interface Boards (SIBs).
13.3	Starting with Junos OS Release 13.3, you can use PTX Series routers to configure Packet Forwarding Engine (PFE)-related error levels and the actions to perform when a specified threshold is reached.

RELATED DOCUMENTATION

- Fabric Grant Bypass | **61**
- Fabric Plane Management
- Troubleshooting the T4000 SIBs
- Troubleshooting the T4000 FPCs
- show chassis alarms | **483**
- show chassis fabric fpcs | **1096**
- show chassis fabric destinations | **1055**
- show chassis fabric sibs | **1217**
- show chassis sibs | **1577**
- PTX5000 Description
- FPCs Supported on the PTX5000
- PTX5000 Switch Interface Board Description

Fabric-Plane-Management-on-MX10008-Devices

SUMMARY

IN THIS SECTION

- Fabric Plane Management on JNP10K-LC2101 and JNP10K-LC480 | 55
- Fabric Plane Management on MX10K-LC9600 and SFB2 (Model Number: JNP10008-SF2) | 56

MX10008 devices supports the following line cards:

- MX10K-LC2101
- MX10K-LC480
- MX10K-LC9600

This topic discusses the fabric plane management on these line cards.

Fabric Plane Management on JNP10K-LC2101 and JNP10K-LC480

MX10K-LC2101 and MX10K-LC480 are fixed-configuration MPC that provides increased port density and performance to MX10008 devices. MX10K-LC2101 and MX10K-LC480 plugs into the chassis and provides the fabric interface.

An MX10008 devices has six Switch Fabric Boards (SFBs). MX10K-LC2101 has six Packet Forwarding Engines (PFE). Each PFE has 24 connections to the fabric (24 planes, or 4 connections per SFB).

The following Table 4 on page 56 provides information about MX10K-LC2101, MX10K-LC480, and Switch Fabric Boards.

Table 4: Line card support on SFB and SFB2

Line Cards	Switch Fabric Boards Supported	Packet Forwarding Engines (PFEs)	Fabric Planes	Fabric Redundancy
MX10K-LC2101	SFB and SFB2	6 PFE	24 (SFB), 12 (SFB2)	Yes (5+1 for SFB and SFB2)
MX10K-LC480	SFB and SFB2	2 PFE	24 (SFB), 12 (SFB2)	Yes (5+1 for SFB and SFB2)

MX10K-LC2101 and MX10K-LC480 line cards with SFB2 support 12 planes. In case of one SFB2 failure, the line rate is achieved with 10 planes.

The MX10008 SFB also supports fabric hardening. Fabric hardening is the process of controlling bandwidth degradation to prevent null route. The following key CLI commands are available for fabric hardening:

- `set chassis fpc` *`slot-number`* `fabric bandwidth-degradation percentage`—Configures the FPC to take a specific action once bandwidth degradation reaches a certain percentage to avoid causing a null route in the chassis.
- `set chassis fabric degraded detection-enable`—Enables detection of an FPC with degraded fabric.
- `set chassis fabric degraded action-fpc-restart-disable`—Disables line card restarts to limit recovery actions from a degraded fabric condition.

In MX10008 SFBs, fabric fault handling is supported per plane. Fabric fault handling per plane results in increased granularity, which helps identify, isolate, and repair faults. If an SFB has a single faulty plane, the other three planes can continue to operate. There is no need to take the entire SFB offline. For example, if a plane encounters a training failure error, the line card isolates that faulty plane; while the other planes continue to operate. Also, any cyclic redundancy check (CRC) errors on any link on the SFB are indicated on the plane, not on SFB.

Fabric Plane Management on MX10K-LC9600 and SFB2 (Model Number: JNP10008-SF2)

MX10K-LC9600 is a fixed-configuration MPC which provides a line rate throughput of 9.6 Tbps. MX10K-LC9600 is supported on MX10008. MX10K-LC9600 supports Switch Fabric Boards (SFB)2 (Model Number: JNP10008-SF2) only. MX10008 routers support either SFB or SFB2. The first SFB that

powers on determines the fabric type of the system. Smooth upgrade from SFB (JNP10008-SF) to SFB2 is not supported in MX10008 routers. You can manually upgrade between SFB and SFB2.

The following Table 5 on page 57 provides information about MX10K-LC9600 and Switch Fabric Boards.

Table 5: MX10K-LC9600 line card support on SFB and SFB2

Line Cards	Switch Fabric Boards Supported	Packet Forwarding Engines (PFEs)	Fabric Planes	Fabric Redundancy
MX10K-LC9600	SFB2	12 PFE	12	MX10KLC9600 requires all six SFB2s to support the line rate (fabric redundancy is not supported).

MX10008 devices with SFB2 support interoperability of line cards: MX10K-LC9600, MX10K-LC2101, and MX10K-LC480.

MX10008 SFB2s supports the following:

- Fabric fault handling: Supported per plane. Fabric fault handling per plane results in increased granularity, which helps identify, isolate, and repair faults.
- Fabric hardening: Supports controlling bandwidth degradation to prevent null route.

Platform Redundancy FEB Redundancy Support for High Availability of ACX7509 Devices

IN THIS SECTION

- Routing Engine Switchover Conditions and Prerequisites | **58**
- Support for Replication and Restoration of Statistics on RE Switchover (ACX7509) | **59**
- Traffic Flow and Switchover | **60**
- Limitations for GRES mode | **60**

Traffic Management | 60
RELATED INFORMATION | 61

FEB redundancy is supported on the ACX7509 device. The Routing Control Board (RCB) and Forwarding Engine Board (FEB) mastership is tied and switchover together. The master Routing Engine (RE) software manages both FEBs. Graceful RE switchover (GRES) for RCB and FEB simultaneous switchover is supported with support for replication and restoration of statistics.

The graceful Routing Engine switchover (GRES) feature in Junos OS and Junos OS Evolved enables a router with redundant Routing Engines to continue forwarding packets, even if one Routing Engine fails. GRES preserves interface and kernel information. Traffic is not interrupted. However, GRES does not preserve the control plane.

When GRES mode is not enabled on the Junos OS, or Junos OS Evolved, it is considered as Non-GRES mode.

Routing Engine Switchover Conditions and Prerequisites

The prerequisite for a GRES is that, the backup RCB and FEB are online for 360 seconds. The back to back switchover time is more than 360 seconds.

The switchover conditions are as follows:

- Master RCB power-failure.
- Master RE rebooted,
- Master RE plugged out,
- Master RE offlined.
- Linux kernel crash on master RE.
- Critical application failure on master RE (including PFE management, PP management & packet input output applications).
- Power fault on master FEB.

When the FEB redundancy configuration is active, the supported RCB-FEB configurations for ACX7509 are as follows:

Table 6: Supported Redundancy Modes in ACX7509

Supported Redundancy Modes	Condition
Both RCBs and FEBs present	Fully redundant system.
RCB0/FEB0 present and RCB1/FEB1 not present	Non-redundant system.
RCB1/FEB1 present and RCB0/FEB0 not present	Non-redundant system.

The unsupported redundancy modes for ACX7509 with related alarms are as follows:

Table 7: Unsupported Redundancy Modes in ACX7509

Unsupported Redundancy Modes	Condition
RCB0/FEB1 present	The unmatched FEB1 does not come online.
RCB1/FEB0 present	The unmatched FEB0 does not come online.
Two RCBs with FEB0	Both RCBs and the FEB come online. RCB0/FEB0 becomes master. CLI based switchover is allowed. Fault-triggered automatic switchover does not happen.

Support for Replication and Restoration of Statistics on RE Switchover (ACX7509)

The RCB and FEB mastership is tied and switchover together. The master RE software manages both FEBs.

Traffic Flow and Switchover

The WAN traffic entering the system is forwarded to and flows through both FEBs. The FEBs route the traffic internally to the egress FPC. The FPC transmits traffic from master FEB to WAN and drops the traffic from the backup FEB. The backup FEB is in hot standby and ready to forward traffic.

Junos software supports the replication and restoration of the following statistics for traffic flow and switchover:

- Interface Statistics.
- Sub-interface Statistics (Without Queue Statistics).
- The replication for other PFE statistics entities, such as:
  - Interface per Queue Statistics
  - Firewall Statistics
  - uRPF Statistics
  - DDoS PFE Statistics (excluding the RE level DDoS counters)

Limitations for GRES mode

- RCB and FEB are a host-subsystem and switchover due to one will cause complete host sub-system switch. Hence, the independent switchover of RCB and FEB is not supported.
- For GRES, if there is sudden master PFE loss, the interface could go down briefly at the end router. The link comes back up immediately when the switchover takes effect.
- The `show interfaces` command displays the restoration of the RE based statistics.
- Ungraceful removal of FEB is not supported.

Traffic Management

When the WAN traffic is affected due to various fault scenarios, the traffic hit duration depends on:

- The time taken to detect the fault condition.
- The time taken for RCB-FEB switchover.

The RE manages the traffic switchover.

RELATED INFORMATION

Fabric Grant Bypass

IN THIS SECTION

- Understanding Fabric Grant Bypass | **61**
- Disabling Fabric Grant Bypass to Control Congestion and Improve Performance | **62**
- Re-Enabling Fabric Grant Bypass | **63**

Understanding Fabric Grant Bypass

Modular Port Concentrators (MPCs) contain one, two, or four Packet Forwarding Engines. Each Packet Forwarding Engine handles its forwarding decisions independently. Also, each Packet Forwarding Engine implements fabric queuing and flow control features required to communicate with other Packet Forwarding Engines on the same chassis. Transmitting a packet from a Packet Forwarding Engine to another involves a fabric request and grant process. As per this, the ingress Packet Forwarding Engine first sends a fabric request to the egress Packet Forwarding Engine across an active fabric plane. And when it receives the fabric grant in response, it sends the packets to the egress Packet Forwarding Engine.

However, the MX2010 and 2020 routers in some configurations are set to bypass the fabric request and grant process by default. The fabric grant bypass configuration is required to support MPC1 (MX-MPC1-3D), MPC2 (MX-MPC2-3D), and 16-port 10-Gigabit Ethernet MPC (MPC-3D-16XGE-SFPP) on MX2020 and MX2010 platforms. On the MX Series routers with the fabric grant bypass enabled, the switch fabric takes in the fabric requests from the ingress Packet Forwarding Engine and provides fabric grants; and the ingress Packet Forwarding Engine sends the packet to the egress Packet Forwarding Engine. In this case, the switch fabric forwards the fabric request to the egress Packet Forwarding Engine, but discards the fabric grants it receives from the egress Packet Forwarding Engine.

Table 8 on page 62 describes the fabric grant bypass behavior on MX2010 and MX2020 routers.

Table 8: Fabric Grant Bypass Behavior on MX2010 and MX2020 Routers

MX Series Routers	Switch Control Board	Switch Fabric Board	Default Fabric Grant Bypass Behavior
MX2010 and MX2020	-	SFB	Enabled for all MPCs.
MX2010 and MX2020	-	SFB2	Enabled for MPC1 (MX-MPC1-3D), MPC2 (MX-MPC2-3D), and 16-port 10-Gigabit Ethernet MPC (MPC-3D-16XGE-SFPP). Disabled for all other MPCs.

Disabling Fabric Grant Bypass to Control Congestion and Improve Performance

You can disable fabric grant bypass on the MX2020 and MX2010 routers with SFBs. Disabling the default fabric grant bypass behavior controls congestion and thus improves system behavior and performance on MX2010 and MX2020 routers. After disabling fabric grant bypass, you must reboot the router for the changes to take effect.

NOTE: After you disable fabric grant bypass and reboot the router, the existing MPCs on the router where fabric grant bypass is enabled by default—such as MPC1 (MX-MPC1-3D), MPC2 (MX-MPC2-3D), and the 16-port 10-Gigabit Ethernet MPC (MPC-3D-16xGE-SFPP)—do not power on.

To disable fabric grant bypass to control congestion and improve system behavior and performance:

1. Disable fabric grant bypass by including the `fabric disable-grant-bypass` statement at the [`edit chassis`] hierarchy level.

```
[edit chassis]
user@host# set fabric disable-grant-bypass
```

2. After disabling fabric grant bypass, commit the configuration.

```
[edit chassis]
user@host# commit
```

NOTE: After you disable fabric grant bypass and commit the configuration, the router displays the following warning message:

```
[edit] 'chassis' WARNING: Chassis configuration for fabric grant bypass has been changed. A system
reboot is mandatory. Please reboot the system NOW. Continuing without a reboot might result in
unexpected system behavior. commit complete
```

3. Reboot the router for the configuration to take effect.

```
user@host> request system reboot
```

Re-Enabling Fabric Grant Bypass

After you disable fabric grant bypass, you can re-enable it on the MX2020 and MX2010 routers with SFBs.

NOTE:

- By default, fabric grant bypass is enabled on the MX2010 and MX2020 routers.
- After you enable fabric grant bypass feature and reboot the router, the existing MPCs on the router where fabric grant bypass is enabled by default—such as MPC1 (MX-MPC1-3D), MPC2 (MX-MPC2-3D), and the 16-port 10-Gigabit Ethernet MPC (MPC-3D-16XGE-SFPP)—power on.

To re-enable fabric grant bypass:

1. Use the `delete` statement with the `fabric disable-grant-bypass` statement at the [`edit chassis`] hierarchy level to enable fabric grant bypass.

```
[edit chassis]
user@host# delete fabric disable-grant-bypass
```

2. After enabling fabric grant bypass, commit the configuration.

```
[edit chassis]
user@host# commit
```

NOTE: After you enable fabric grant bypass and commit the configuration, the router displays the following warning message:

```
[edit] 'chassis' WARNING: Chassis configuration for fabric grant bypass has been changed. A system reboot is mandatory. Please reboot the system NOW. Continuing without a reboot might result in unexpected system behavior. commit complete
```

3. Reboot the router for the configuration to take effect.

```
user@host> request system reboot
```

RELATED DOCUMENTATION

Fabric Plane Management

Fabric Resiliency | 26

Smooth Upgrade from SFB to SFB2

IN THIS SECTION

- Understanding the Smooth Upgrade Process | 65
- Before you Begin the Smooth Upgrade Process | 66

Performing a Smooth Upgrade to Enhanced Switch Fabric Board (SFB2) with Minimal Impact on Traffic | 79

Understanding the Smooth Upgrade Process

The MX2000 line of routers support Switch Fabric Board (SFB; model number: MX2000-SFB) and the enhanced Switch Fabric Board (SFB2; model number: MX2000-SFB-S). SFB2 is designed to support higher bandwidth than that provided by SFB on the MX2000 line of routers. For instance, the MX2000 line of routers with SFB support fabric bandwidth of 800 Gbps. However, the MX2000 line of routers with SFB2 can support fabric bandwidth of 1.92 Tbps. A smooth upgrade enables you to upgrade from SFB to SFB2 with minimal traffic impact on the MX2000 line of routers.

NOTE: If you have installed the Junos Continuity software package, you cannot perform a smooth upgrade from Switch Fabric Board (SFB) to Enhanced Switch Fabric Board (SFB2) on MX2010 and MX2020 routers.

This topic explains the smooth upgrade process that takes place when you upgrade from Switch Fabric Board (SFB) to enhanced Switch Fabric Board (SFB2) on MX2000 line of routers.

NOTE: The MX2000 line of routers support either SFB or SFB2 only. The MX2000 line of routers do not support SFB and SFB2 at the same time. However, during an upgrade from SFB to SFB2, the MX2000 line of routers support both SFB and SFB2 at the same time for the duration of the upgrade. But, you must upgrade all 8 SFBs to 8 SFB2s. You cannot replace 4 SFBs with 4SFB2s and retain the other SFBs.

The process of smooth upgrade from SFB and SFB2 includes the following steps:

1. Initiating the smooth upgrade process. When you initiate smooth upgrade, the router can support both SFB and SFB2 at the same time.
2. Performing the smooth upgrade. This step consists of replacing all SFBs with SFB2s.
3. Terminating the smooth upgrade. When you terminate the smooth upgrade process, the router stops supporting SFB and SFB2 at the same time.

A smooth upgrade provides the following benefits:

- The smooth upgrade eliminates network downtime during the smooth upgrade window because of 7+1 fabric redundancy. When one SFB is being upgraded to SFB2, the other seven SFBs are available to handle the traffic.

  NOTE: If multiple SFBs are upgraded at the same time, multiple fabric planes are down at any specified time and so traffic is impacted.

- When multiple fabric boards and planes come online at the same time, you can batch them together and train. This reduces the booting up time and the time taken for the plane to come online.

- On MX2000 line of routers with SFB, fabric grant bypass is enabled by default. Disabling fabric grant bypass helps control congestion and improves performance. On MX2000 line of routers with SFB, you can disable fabric grant bypass by By default, fabric grant bypass is disabled for all MPCs on MX2000 line of routers when they connect to SFB2. Fabric grant bypass is enabled by default on MPC1 (MX-MPC1-3D), MPC2 (MX-MPC2-3D), and the 16-port 10-Gigabit Ethernet MPC (MPC-3D-16xGE-SFPP). When fabric grant bypass is enabled by default, when those MPCs connect to SFB2, fabric grant bypass continues to be enabled and cannot be disabled.

To quickly access the information you need, click the links in Table 9 on page 66.

Table 9: Locating the Information You Need to Work on Smooth Upgrade Process

Task You Need to Perform	Where The Information Is Located
Before You begin	"Before you Begin the Smooth Upgrade Process" on page 66
Perform a Smooth Upgrade	"Performing a Smooth Upgrade to Enhanced Switch Fabric Board (SFB2) with Minimal Impact on Traffic" on page 79

Before you Begin the Smooth Upgrade Process

Before you begin the smooth upgrade from Switch Fabric Board (SFB) to enhanced Switch Fabric Board (SFB2), complete the following tasks:

NOTE: If you have installed the Junos Continuity software package, you cannot perform a smooth upgrade from Switch Fabric Board (SFB) to Enhanced Switch Fabric Board (SFB2) on MX2010 and MX2020 routers.

- Prepare the router and install the version of Junos OS Release (16.1R1 or later) that supports the smooth upgrade process. For more information about how to install or upgrade the version of Junos OS Release, see No Link Title.
- Verify that the Switch Fabric Boards and fabric planes are online and operational. At this time, the line cards are connected to SFB.

1. To verify that all the switch fabric boards (SFBs) are online and operational, issue the following command:

```
user@host> show chassis hardware
Hardware inventory:
Item             Version  Part number  Serial number     Description
Chassis                                JN11E0A50AFJ      MX2020
Midplane         REV 01   711-032387   abcd1111          Lower Backplane
Midplane 1       REV 04   711-032386   ABAB9191          Upper Backplane
PMP 1            REV 05   711-032428   ACAJ1526          Upper Power Midplane
PMP 0            REV 04   711-032426   ACAJ1585          Lower Power Midplane
FPM Board        REV 06   760-040242   ABBT8836          Front Panel Display
PSM 0            REV 01   740-050037   1EDB32101E3       DC 52V Power Supply Module
PSM 1            REV 01   740-033727   1E012130107       DC 52V Power Supply Module
PSM 2            REV 01   740-050037   1EDB3210162       DC 52V Power Supply Module
PSM 3            REV 01   740-050037   1EDB32000R6       DC 52V Power Supply Module
PSM 4            REV 01   740-050037   1EDB313005M       DC 52V Power Supply Module
PSM 5            REV 01   740-050037   1EDB321016G       DC 52V Power Supply Module
PSM 6            REV 01   740-050037   1EDB313005F       DC 52V Power Supply Module
PSM 7            REV 01   740-050037   1EDB313009X       DC 52V Power Supply Module
PSM 8            REV 01   740-050037   1EDB3130082       DC 52V Power Supply Module
PSM 9            REV 01   740-050037   1EDB32101HH       DC 52V Power Supply Module
PSM 10           REV 01   740-050037   1EDB321015G       DC 52V Power Supply Module
PSM 11           REV 01   740-050037   1EDB32101JW       DC 52V Power Supply Module
PSM 12           REV 01   740-045050   1E02224000N       DC 52V Power Supply Module
PSM 13           REV 01   740-050037   1EDB321015C       DC 52V Power Supply Module
PSM 14           REV 01   740-050037   1EDB321015J       DC 52V Power Supply Module
PSM 15           REV 01   740-045050   1E022240015       DC 52V Power Supply Module
PSM 16           REV 01   740-045050   1E02224000L       DC 52V Power Supply Module
```

```
PSM 17           REV 01   740-050037   1EDB32101EP       DC 52V Power Supply Module
PDM 1            REV 03   740-045234   1EFA3230588       DC Power Dist Module
PDM 2            REV 03   740-045234   1EFA3230508       DC Power Dist Module
Routing Engine 0 REV 02   740-041821   9009115214        RE-S-1800x4
Routing Engine 1 REV 02   740-041821   9009099720        RE-S-1800x4
CB 0             REV 23   750-040257   CAAR5968          Control Board
CB 1             REV 12   750-040257   CAAD9498          Control Board
SPMB 0           REV 02   711-041855   ABCC1066          PMB Board
SPMB 1           REV      711-041855   ABBS1488          PMB Board
SFB 0            REV 06   711-044466   ABCD4944          Switch Fabric Board
SFB 1            REV 06   711-044466   ABCD4938          Switch Fabric Board
SFB 2            REV 06   711-044466   ABCD5175          Switch Fabric Board
SFB 3            REV 06   711-044466   ABCD5160          Switch Fabric Board
SFB 4            REV 06   711-044466   ABCD4997          Switch Fabric Board
SFB 5            REV 06   711-044466   ABCD5013          Switch Fabric Board
SFB 6            REV 06   711-044466   ABCD5267          Switch Fabric Board
SFB 7            REV 06   711-044466   ABCD4968          Switch Fabric Board
FPC 0            REV 23   750-054901   CAEH6678          MPC3E NG HQoS
  CPU            REV 11   711-045719   CAEA4592          RMPC PMB
  MIC 0          REV 26   750-028392   ZM0999            3D 20x 1GE(LAN) SFP
    PIC 0                 BUILTIN      BUILTIN           10x 1GE(LAN) SFP
      Xcvr 0     REV 01   740-031469   17T446600017      SFP-LX10
      Xcvr 1     REV 01   740-031469   17T446600120      SFP-LX10
      Xcvr 2     REV 01   740-031469   19T446600010      SFP-LX10
      Xcvr 3     REV 01   740-031469   0ZT446600018      SFP-LX10
      Xcvr 4     REV 01   740-031469   19T446600007      SFP-LX10
      Xcvr 5     REV 01   740-031469   18T446600081      SFP-LX10
      Xcvr 6     REV 01   740-031469   18T446600088      SFP-LX10
      Xcvr 7     REV 01   740-031469   18T446600049      SFP-LX10 Xcvr 8     REV 01
740-031469   18T446600002      SFP-LX10
      Xcvr 9     REV 01   740-031469   19T446600008      SFP-LX10
    PIC 1                 BUILTIN      BUILTIN           10x 1GE(LAN) SFP
      Xcvr 0     REV 01   740-031469   18T446600032      SFP-LX10
      Xcvr 1     REV 01   740-031469   09T446600025      SFP-LX10
      Xcvr 2     REV 01   740-031469   19T446600004      SFP-LX10
      Xcvr 3     REV 01   740-031469   18T446600084      SFP-LX10
      Xcvr 4     REV 01   740-031469   18T446600060      SFP-LX10
      Xcvr 5     REV 01   740-031469   17T446600085      SFP-LX10
      Xcvr 6     REV 01   740-031469   17T446600014      SFP-LX10
      Xcvr 7     REV 01   740-031469   17T446600315      SFP-LX10
      Xcvr 8     REV 01   740-031469   18T446600043      SFP-LX10
      Xcvr 9     REV 01   740-031469   0ZT446600017      SFP-LX10
  MIC 1          REV 19   750-033199   CAAJ1818          1X100GE CFP
```

```
    PIC 2                 BUILTIN      BUILTIN          1X100GE CFP
FPC 1           REV 32    750-028467   ZR1986           MPC 3D 16x 10GE
  CPU           REV 10    711-029089   ZT7025           AMPC PMB
  PIC 0                   BUILTIN      BUILTIN          4x 10GE(LAN) SFP+
    Xcvr 0      REV 01    740-021308   AMH0285          SFP+-10G-SR
  PIC 1                   BUILTIN      BUILTIN          4x 10GE(LAN) SFP+
    Xcvr 1      REV 01    740-031980   AHK011H          SFP+-10G-SR
  PIC 2                   BUILTIN      BUILTIN          4x 10GE(LAN) SFP+
    Xcvr 0      REV 01    740-021308   APK0569          SFP+-10G-SR
  PIC 3                   BUILTIN      BUILTIN          4x 10GE(LAN) SFP+
FPC 2           REV 04    750-044444   ZA7865           MPCE Type 2 3D P
  CPU           REV 02    711-038484   ZB2728           MPCE PMB 2G
  MIC 0         REV 07    750-028390   XY2158           3D 40x 1GE(LAN) RJ45
    PIC 0                 BUILTIN      BUILTIN          10x 1GE(LAN) RJ45
    PIC 1                 BUILTIN      BUILTIN          10x 1GE(LAN) RJ45
    PIC 2                 BUILTIN      BUILTIN          10x 1GE(LAN) RJ45
    PIC 3                 BUILTIN      BUILTIN          10x 1GE(LAN) RJ45
  MIC 1
  QXM 0         REV 05    711-028408   ZC3420           MPC QXM
  QXM 1         REV 05    711-028408   ZC3350           MPC QXM
FPC 3           REV 22    750-054564   CADG6972         MPC5E 3D 2CGE+4XGE
  CPU           REV 11    711-045719   CADC7599         RMPC PMB
  PIC 0                   BUILTIN      BUILTIN          2X10GE SFPP OTN
    Xcvr 0      REV 01    740-031980   193363A00483     SFP+-10G-SR
    Xcvr 1      REV 01    740-031980   1YT517101829     SFP+-10G-SR
  PIC 1                   BUILTIN      BUILTIN          1X100GE CFP2 OTN
    Xcvr 0      REV 01    740-052505   XUF0GPX          CFP2-100G-SR10
  PIC 2                   BUILTIN      BUILTIN          2X10GE SFPP OTN
  PIC 3                   BUILTIN      BUILTIN          1X100GE CFP2 OTN
FPC 6           REV 11    750-045372   CABT0840         MPCE Type 3 3D
  CPU           REV 08    711-035209   CABL0889         HMPC PMB 2G
MIC 0         REV 27   750-028392   CABR4723         3D 20x 1GE(LAN) SFP
    PIC 0                 BUILTIN      BUILTIN          10x 1GE(LAN) SFP
      Xcvr 0    REV 01    740-011782   P9229UM          SFP-SX
      Xcvr 1    REV 01    740-011782   P9P0X6V          SFP-SX
      Xcvr 2    REV 01    740-011613   PCE01W5          SFP-SX
      Xcvr 4    REV 01    740-011613   PD63DEN          SFP-SX
      Xcvr 5    REV 02    740-011613   PG12FSF          SFP-SX
      Xcvr 7    REV 01    740-011782   PCL3UDY          SFP-SX
      Xcvr 8    REV 01    740-011613   PE713Z9          SFP-SX
      Xcvr 9    REV 01    740-011613   AM0846SAQA5      SFP-SX
    PIC 1                 BUILTIN      BUILTIN          10x 1GE(LAN) SFP
      Xcvr 0    REV 01    740-011613   P9F16KE          SFP-SX
```

```
      Xcvr 1      REV 01   740-031851   AM1045SU91U       SFP-SX
      Xcvr 4      REV 01   740-011613   PAJ4SY8           SFP-SX
      Xcvr 5      REV 01   740-011782   P9228K7           SFP-SX
  MIC 1           REV 27   750-028392   CABT5724          3D 20x 1GE(LAN) SFP
    PIC 2                  BUILTIN      BUILTIN           10x 1GE(LAN) SFP
      Xcvr 0      REV 02   740-011613   AM0925SBG5T       SFP-SX
      Xcvr 1               NON-JNPR     P7K1PUX           SFP-SX
      Xcvr 2      REV 01   740-011613   PFF2DHH           SFP-SX
      Xcvr 4      REV 01   740-011613   PD63DF2           SFP-SX
      Xcvr 5      REV 02   740-011613   AM1033SH3DH       SFP-SX
      Xcvr 6      REV 01   740-011613   PE70W8W           SFP-SX
      Xcvr 9      REV 01   740-011613   PD62W9W           SFP-SX
    PIC 3                  BUILTIN      BUILTIN           10x 1GE(LAN) SFP
      Xcvr 0      REV 02   740-013111   9154876           SFP-T
      Xcvr 2      REV 01   740-011613   AM0846SAQ9H       SFP-SX
      Xcvr 5      REV 01   740-011613   AM0820S9T2C       SFP-SX
      Xcvr 9      REV 01   740-011613   AM0805S8LGQ       SFP-SX
FPC 7             REV 27   750-033205   ZL6014            MPCE Type 3 3D
  CPU             REV 07   711-035209   ZK9068            HMPC PMB 2G
  MIC 0           REV 04   750-028392   JR6231            3D 20x 1GE(LAN) SFP
    PIC 0                  BUILTIN      BUILTIN           10x 1GE(LAN) SFP
      Xcvr 0      REV 01   740-031851   AM1045SU93A       SFP-SX
    PIC 1                  BUILTIN      BUILTIN           10x 1GE(LAN) SFP
      Xcvr 4      REV 01   740-011782   P9P1050           SFP-SX
      Xcvr 9      REV 01   740-011613   PFF2K74           SFP-SX
  MIC 1           REV 19   750-033199   CAAF0016          1X100GE CFP
    PIC 2                  BUILTIN      BUILTIN           1X100GE CFP
FPC 11            REV 16   750-037358   CAAL1014          MPC4E 3D 32XGE
  CPU             REV 08   711-035209   CAAS2637          HMPC PMB 2G
  PIC 0
  PIC 1
  PIC 2
  PIC 3                                   FPC 12          REV 29   750-031090
ZA1887             MPC Type 2 3D EQ
  CPU             REV 06   711-030884   YR6876            MPC PMB 2G
FPC 13            REV 36   750-056519   CAFW4205          MPC7E 3D MRATE-12xQSFPP-XGE-XLGE-CGE
  CPU             REV 16   750-057177   CAFY5688          SMPC PMB
  PIC 0                    BUILTIN      BUILTIN           MRATE-6xQSFPP-XGE-XLGE-CGE
    Xcvr 0        REV 01   740-054053   QF3208FT          QSFP+-4X10G-SR
    Xcvr 3        REV 01   740-032986   QB171000          QSFP+-40G-SR4
    Xcvr 5        REV 01   740-058732   1CJQA10700C       QSFP-100GBASE-LR4
  PIC 1                    BUILTIN      BUILTIN           MRATE-6xQSFPP-XGE-XLGE-CGE
    Xcvr 0        REV 01   740-054053   QF3208G2          QSFP+-4X10G-SR
```

```
    Xcvr 1       REV 01   740-054053   QF3208G3          QSFP+-4X10G-SR
    Xcvr 2                NON-JNPR     F2M2010439        QSFP-100GBASE-LR4
    Xcvr 3       REV 01   740-046565   QF3300ZQ          QSFP+-40G-SR4
    Xcvr 5       REV 01   740-058734   1ACQ104202U       QSFP-100GBASE-SR4
FPC 14           REV 68   750-044130   ABDC2916          MPC6E 3D
  CPU            REV 12   711-045719   ABDC2710          RMPC PMB
FPC 16           REV 22   750-037355   CABW1289          MPC4E 3D 2CGE+8XGE
  CPU            REV 08   711-035209   CABR9796          HMPC PMB 2G
  PIC 0                   BUILTIN      BUILTIN           4x10GE SFPP
  PIC 1                   BUILTIN      BUILTIN           1X100GE CFP
  PIC 2                   BUILTIN      BUILTIN           4x10GE SFPP
  PIC 3                   BUILTIN      BUILTIN           1X100GE CFP
FPC 17           REV 23   750-037355   CACL2280          MPC4E 3D 2CGE+8XGE
  CPU            REV 10   711-035209   CACK9073          HMPC PMB 2G
  PIC 0                   BUILTIN      BUILTIN           4x10GE SFPP
  PIC 1                   BUILTIN      BUILTIN           1X100GE CFP
  PIC 2                   BUILTIN      BUILTIN           4x10GE SFPP
  PIC 3                   BUILTIN      BUILTIN           1X100GE CFP
FPC 18           REV 23   750-054901   CAEV3700          MPC3E NG HQoS
  CPU            REV 12   711-045719   CAFK4017          RMPC PMB
  MIC 0          REV 19   750-033199   CAAJ9717          1X100GE CFP
    PIC 0                 BUILTIN      BUILTIN           1X100GE CFP
  MIC 1          REV 15   750-033199   ZP6432            1X100GE CFP
    PIC 2                 BUILTIN      BUILTIN           1X100GE CFP
FPC 19           REV 29   750-063414   CAEJ2194          MPC9E 3D
  CPU            REV 02   750-057177   CACN2561          SMPC PMB
  MIC 0          REV 01   750-055992   CADV4595          MRATE-12xQSFPP-XGE-XLGE-CGE
    PIC 0                 BUILTIN      BUILTIN           MRATE-12xQSFPP-XGE-XLGE-CGE
      Xcvr 0     REV 01   740-046565   QF3300ZG          QSFP+-40G-SR4
      Xcvr 1     REV 01   740-046565   QF330122          QSFP+-40G-SR4
      Xcvr 2     REV 01   740-046565   QF33011P          QSFP+-40G-SR4
      Xcvr 3     REV 01   740-046565   QF3300ZU          QSFP+-40G-SR4
      Xcvr 4     REV 01   740-046565   QF3300ZS          QSFP+-40G-SR4
      Xcvr 5     REV 01   740-046565   QF3300ZN          QSFP+-40G-SR4
      Xcvr 6     REV 01   740-046565   QF3300ZP          QSFP+-40G-SR4
            Xcvr 7     REV 01   740-046565   QF3300ZT          QSFP+-40G-SR4
      Xcvr 8     REV 01   740-046565   QF3300ZM          QSFP+-40G-SR4
      Xcvr 9     REV 01   740-046565   QF3300ZR          QSFP+-40G-SR4
      Xcvr 10    REV 01   740-046565   QF330105          QSFP+-40G-SR4
      Xcvr 11    REV 01   740-046565   QF3300ZK          QSFP+-40G-SR4
  MIC 1          REV 08   750-055992   CAEX1421          MRATE-12xQSFPP-XGE-XLGE-CGE
    PIC 1                 BUILTIN      BUILTIN           MRATE-12xQSFPP-XGE-XLGE-CGE
      Xcvr 6     REV 01   740-046565   QF330100          QSFP+-40G-SR4
```

```
ADC 0            REV 19   750-043596   ABCK6658          Adapter Card
ADC 1            REV 17   750-043596   ABCB7201          Adapter Card
ADC 2            REV 05   750-043596   CAAC2076          Adapter Card
ADC 3            REV 13   750-043596   ABBX5549          Adapter Card
ADC 6            REV 17   750-043596   ABCB7226          Adapter Card
ADC 7            REV 01   750-043596   ZV4079            Adapter Card
ADC 11           REV 17   750-043596   ABCD5472          Adapter Card
ADC 12           REV 17   750-043596   ABCB7147          Adapter Card
ADC 13           REV 17   750-043596   ABCD5410          Adapter Card
ADC 16           REV 17   750-043596   ABCB7047          Adapter Card
ADC 17           REV 17   750-043596   ABCD5525          Adapter Card
ADC 18           REV 17   750-043596   ABCD5391          Adapter Card
Fan Tray 0       REV 01   760-042349   ACAY4801          FanTray v2
Fan Tray 1       REV 01   760-042349   ACAY4802          FanTray v2
Fan Tray 2       REV 01   760-042349   ACAY4803          FanTray v2
Fan Tray 3       REV 01   760-042349   ACAY4800          FanTray v2
```

2. To verify that all the fabric planes are available and operational, issue the following command:

```
user@host> show chassis fabric plane
Fabric management PLANE state
Plane 0
  Plane state: ACTIVE
      FPC 0
          PFE 0 :Links ok
      FPC 1
          PFE 0 :Links ok
          PFE 1 :Links ok
          PFE 2 :Links ok
          PFE 3 :Links ok
      FPC 2
          PFE 0 :Links ok
          PFE 1 :Links ok
      FPC 3
          PFE 0 :Links ok
          PFE 1 :Links ok
      FPC 6
          PFE 0 :Links ok
      FPC 7
          PFE 0 :Links ok
      FPC 11
          PFE 0 :Links ok
```

```
          PFE 1 :Links ok
      FPC 12
          PFE 0 :Links ok
          PFE 1 :Links ok
      FPC 13
          PFE 0 :Links ok
          PFE 1 :Links ok
      FPC 14
          PFE 0 :Links ok
          PFE 1 :Links ok
          PFE 2 :Links ok
          PFE 3 :Links ok
      FPC 16
          PFE 0 :Links ok
          PFE 1 :Links ok
      FPC 17
          PFE 0 :Links ok
          PFE 1 :Links ok
      FPC 18
          PFE 0 :Links ok
      FPC 19
          PFE 0 :Links ok
          PFE 1 :Links ok
   PFE 2 :Links ok
          PFE 3 :Links ok
Plane 1
  Plane state: ACTIVE
      FPC 0
          PFE 0 :Links ok
      FPC 1
          PFE 0 :Links ok
          PFE 1 :Links ok
          PFE 2 :Links ok
          PFE 3 :Links ok
      FPC 2
          PFE 0 :Links ok
          PFE 1 :Links ok
      FPC 3
          PFE 0 :Links ok
          PFE 1 :Links ok
      FPC 6
          PFE 0 :Links ok
      FPC 7
```

```
          PFE 0 :Links ok
      FPC 11
          PFE 0 :Links ok
          PFE 1 :Links ok
      FPC 12
          PFE 0 :Links ok
          PFE 1 :Links ok
      FPC 13
          PFE 0 :Links ok
          PFE 1 :Links ok
      FPC 14
          PFE 0 :Links ok
          PFE 1 :Links ok
          PFE 2 :Links ok
          PFE 3 :Links ok
      FPC 16
          PFE 0 :Links ok
          PFE 1 :Links ok
      FPC 17
          PFE 0 :Links ok
          PFE 1 :Links ok
      FPC 18
          PFE 0 :Links ok
      FPC 19
          PFE 0 :Links ok
      PFE 1 :Links ok
          PFE 2 :Links ok
          PFE 3 :Links ok
...

Plane 7
  Plane state: ACTIVE
      FPC 0
          PFE 0 :Links ok
      FPC 1
          PFE 0 :Links ok
          PFE 1 :Links ok
          PFE 2 :Links ok
          PFE 3 :Links ok
      FPC 2
          PFE 0 :Links ok
          PFE 1 :Links ok
      FPC 3
```

```
        PFE 0 :Links ok
        PFE 1 :Links ok
    FPC 6
        PFE 0 :Links ok
    FPC 7
        PFE 0 :Links ok
    FPC 11
        PFE 0 :Links ok
        PFE 1 :Links ok
    FPC 12
        PFE 0 :Links ok
        PFE 1 :Links ok
    FPC 13
        PFE 0 :Links ok
        PFE 1 :Links ok
    FPC 14
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
        PFE 3 :Links ok
    FPC 16
        PFE 0 :Links ok
        PFE 1 :Links ok
    FPC 17
        PFE 0 :Links ok
        PFE 1 :Links ok
    FPC 18
        PFE 0 :Links ok
    FPC 19
        PFE 0 :Links ok
        PFE 1 :Links ok
        PFE 2 :Links ok
        PFE 3 :Links ok
```

3. To verify that the state of the electrical switch fabric links between the Flexible PIC Concentrators (FPCs) and the Switch Fabric Boards (SFBs) are eligible for carrying traffic, issue the following command:

```
user@host>show chassis fabric fpcs
Fabric management FPC state:
FPC 0
  PFE #0
```

```
      Plane 0: Plane enabled
      Plane 1: Plane enabled
      Plane 2: Plane enabled
      Plane 3: Plane enabled
      Plane 4: Plane enabled
      Plane 5: Plane enabled
      Plane 6: Plane enabled
      Plane 7: Plane enabled
FPC 1
  PFE #0
      Plane 0: Plane enabled
      Plane 1: Plane enabled
      Plane 2: Plane enabled
      Plane 3: Plane enabled
      Plane 4: Plane enabled
      Plane 5: Plane enabled
      Plane 6: Plane enabled
      Plane 7: Plane enabled
  PFE #1
      Plane 0: Plane enabled
      Plane 1: Plane enabled
      Plane 2: Plane enabled
      Plane 3: Plane enabled
      Plane 4: Plane enabled
      Plane 5: Plane enabled
      Plane 6: Plane enabled
      Plane 7: Plane enabled
  PFE #2
      Plane 0: Plane enabled
      Plane 1: Plane enabled
      Plane 2: Plane enabled
      Plane 3: Plane enabled
      Plane 4: Plane enabled
      Plane 5: Plane enabled
      Plane 6: Plane enabled
      Plane 7: Plane enabled
  PFE #3
      Plane 0: Plane enabled
      Plane 1: Plane enabled
      Plane 2: Plane enabled
      Plane 3: Plane enabled
      Plane 4: Plane enabled
          Plane 5: Plane enabled
```

```
      Plane 6: Plane enabled
      Plane 7: Plane enabled
FPC 2
  PFE #0
      Plane 0: Plane enabled
      Plane 1: Plane enabled
      Plane 2: Plane enabled
      Plane 3: Plane enabled
      Plane 4: Plane enabled
      Plane 5: Plane enabled
      Plane 6: Plane enabled
      Plane 7: Plane enabled
  PFE #1
      Plane 0: Plane enabled
      Plane 1: Plane enabled
      Plane 2: Plane enabled
      Plane 3: Plane enabled
      Plane 4: Plane enabled
      Plane 5: Plane enabled
      Plane 6: Plane enabled
      Plane 7: Plane enabled
...
FPC 19
  PFE #0
      Plane 0: Plane enabled
      Plane 1: Plane enabled
      Plane 2: Plane enabled
      Plane 3: Plane enabled
      Plane 4: Plane enabled
      Plane 5: Plane enabled
      Plane 6: Plane enabled
      Plane 7: Plane enabled
  PFE #1
      Plane 0: Plane enabled
      Plane 1: Plane enabled
      Plane 2: Plane enabled
      Plane 3: Plane enabled
      Plane 4: Plane enabled
      Plane 5: Plane enabled
      Plane 6: Plane enabled
      Plane 7: Plane enabled
  PFE #2
      Plane 0: Plane enabled
```

```
      Plane 1: Plane enabled
      Plane 2: Plane enabled
      Plane 3: Plane enabled
      Plane 4: Plane enabled
      Plane 5: Plane enabled
      Plane 6: Plane enabled
      Plane 7: Plane enabled
  PFE #3
      Plane 0: Plane enabled
      Plane 1: Plane enabled
      Plane 2: Plane enabled
      Plane 3: Plane enabled
      Plane 4: Plane enabled
      Plane 5: Plane enabled
      Plane 6: Plane enabled
      Plane 7: Plane enabled
```

4. To verify the state of all fabric planes and the elapsed time, issue the following command:

```
user@host> show chassis fabric summary
Plane   State    Uptime
 0      Online   11 hours, 13 minutes, 27 seconds
 1      Online   11 hours, 13 minutes, 6 seconds
 2      Online   11 hours, 12 minutes, 45 seconds
 3      Online   11 hours, 12 minutes, 24 seconds
 4      Online   11 hours, 12 minutes, 2 seconds
 5      Online   11 hours, 11 minutes, 41 seconds
 6      Online   11 hours, 11 minutes, 20 seconds
 7      Online   11 hours, 10 minutes, 59 seconds

 Note: For extended summary, use
       show chassis fabric summary extended
```

Performing a Smooth Upgrade to Enhanced Switch Fabric Board (SFB2) with Minimal Impact on Traffic

IN THIS SECTION

- Requirements | 79
- Overview | 80
- Configuration | 80
- Verification | 83

This example shows how to perform a smooth upgrade from the Switch Fabric Board (SFB) to the enhanced Switch Fabric Board (SFB2) on the MX2000 line of routers. A smooth upgrade helps reduce network downtime because of 7+1 fabric redundancy. When one SFB is being upgraded to SFB2, the other 7 SFBs are available to handle the traffic.

NOTE: On MX2010 and MX2020 routers, if you have installed the Junos Continuity software package or if the router is not configured to allow multiple versions of the SFBs to coexist, you cannot perform a smooth upgrade from SFB to SFB2.

When not using a smooth upgrade, use one of the following methods to upgrade to SFB2:

- Power off the router, replace the SFB with SFB2, and then power on the router.
- Take both the Routing Engines offline, replace the SFB with SFB2, and then bring both the Routing Engines online.

Requirements

This example uses the following hardware and software components:

- MX2020 router with dual Routing Engines
- 8 Switch Fabric Boards (SFBs)
- 8 enhanced Switch Fabric Boards (SFB2s)
- Junos OS Release 16.1R1 or later release

Before you begin the smooth upgrade, ensure that you:

- Prepare the router and install the version of Junos OS Release that supports the enhanced Switch Fabric Board (SFB2).
- Verify that the existing SFBs are online and operational and also check the status of the fabric planes.

For more information about what you must do before you commence smooth upgrade, see "Before you Begin the Smooth Upgrade Process" on page 66.

Overview

IN THIS SECTION

- Topology | 80

The smooth upgrade process is used to upgrade from Switch Fabric Board (SFB) to enhanced Switch Fabric Board (SFB2) with minimal traffic impact. The existing SFBs are replaced one by one, in any order, by the new SFB2s. Because you are replacing a single SFB at a time, the remaining SFBs handle the traffic and so there is minimal impact to traffic. SFB2 is supported only on MX2020 and MX2010 routers.

Topology

This example shows how to perform a smooth upgrade on an MX2020 router that has eight SFBs. The 8 SFBs are replaced with 8 enhanced switch fabric boards (SFB2). First, initiate the smooth upgrade process and then take a single SFB offline. Replace the SFB with an SFB2, and then bring the SFB2 online. You can then repeat the steps for the other seven SFBs.

After you upgrade all the SFBs to SFB2s, the fabric bandwidth per slot of MPC8E and MPC9E on the MX2020 router is increased from 11 Gbps to 25 Gbps. However, the upgrade does not impact the fabric bandwidth per slot of MPC7.

Configuration

IN THIS SECTION

- Initiating the Smooth Upgrade Process | 81
- Performing the Smooth Upgrade | 81
- Terminating the Smooth Upgrade Process | 83

To upgrade from SFB to SFB2, perform the following tasks:

Initiating the Smooth Upgrade Process

Step-by-Step Procedure

By default, the MX2000 line of routers do not support both SFB and SFB2 at the same time. However, when you initiate the smooth upgrade process, the router can support both SFB and SFB2 at the same time. So, before you replace an SFB with an SFB2, you must initiate the smooth upgrade process.

1. In configuration mode, at the [edit] hierarchy level, Initiate the smooth upgrade process for the SFBs.

```
[edit]
user@host# set chassis state sfb-upgrade on
```

2. Commit the changes by using the commit statement and exit the configuration mode.

```
[edit]
user@host# commit
```

3. In operational mode, verify that you have initiated the smooth upgrade process.

```
user@host> show configuration chassis
state {
sfb-upgrade on;
}
```

Performing the Smooth Upgrade

Step-by-Step Procedure

1. In operational mode, take the SFBs offline. There is no specific order that needs to be maintained. In this example, you start with the SFB in slot 7 first.

```
user@host> request chassis sfb slot 7 offline
```

2. Verify that the SFB is offline.

```
user@host> show chassis sfb
```

```
Slot  State              Uptime
 0    Online              1 day, 12 hours, 6 minutes, 59 seconds
 1    Online              1 day, 12 hours, 6 minutes, 37 seconds
 2    Online              1 day, 12 hours, 6 minutes, 16 seconds
 3    Online              1 day, 12 hours, 5 minutes, 55 seconds
 4    Online              1 day, 12 hours, 5 minutes, 33 seconds
 5    Online              1 day, 12 hours, 5 minutes, 12 seconds
 6    Online              1 day, 12 hours, 4 minutes, 51 seconds
 7    Offline              --- Offlined by cli command ---
```

3. Replace the SFB that is offline with the enhanced SFB (SFB2). Minimal traffic loss is expected as only a single SFB is replaced and other seven SFBs are operational and handle the traffic.

4. In operational mode, bring the SFB2 online.

```
user@host> request chassis sfb slot 7 online
```

5. Verify that the SFB2 is online.

```
user@host> show chassis sfb
```

```
Slot  State              Uptime
 0    Online              1 day, 12 hours, 16 minutes, 38 seconds
 1    Online              1 day, 12 hours, 16 minutes, 16 seconds
 2    Online              1 day, 12 hours, 15 minutes, 55 seconds
 3    Online              1 day, 12 hours, 15 minutes, 34 seconds
 4    Online              1 day, 12 hours, 15 minutes, 12 seconds
 5    Online              1 day, 12 hours, 14 minutes, 51 seconds
 6    Online              1 day, 12 hours, 14 minutes, 30 seconds
 7    Online              38 seconds
```

6. Repeat Step 3 through Step 5 for upgrading the other SFBs. We recommend that you upgrade fabric boards one at a time for minimal traffic impact.

Terminating the Smooth Upgrade Process

Step-by-Step Procedure

After all the SFBs are upgraded to the enhanced SFB (SFB2), you can terminate the smooth upgrade process. When the smooth upgrade process is initiated, SFB and SFB2 can coexist on the same router. When you terminate the smooth upgrade process, the router can have only SFB or SFB2 and not both at the same time.

1. In configuration mode, at the [edit] hierarchy level, terminate the smooth upgrade process.

   NOTE: You can also use the `delete chassis state sfb-upgrade` command to terminate the smooth upgrade process.

   ```
   [edit]
   user@host# set chassis state sfb-upgrade off
   ```

2. Commit the changes by using the `commit` statement and exit configuration mode.

   ```
   [edit]
   user@host# commit
   ```

3. In operational mode, verify that you have initiated the smooth upgrade process.

   ```
   user@host> show configuration chassis
   state {
   sfb-upgrade off;
   }
   ```

Verification

IN THIS SECTION

- Verifying That the Switch Fabric Board (SFB) is Offline | 84
- Verifying That the Enhanced Switch Fabric Board (SFB2) is Online | 87

To confirm that you have upgraded SFB to SFB2 on the MX2020 router, perform these tasks:

Verifying That the Switch Fabric Board (SFB) is Offline

Purpose

To verify that the SFB on a particular slot, for instance slot 1, is offline.

Action

From operational mode, enter the `show chassis fabric fpcs` command.

```
user@host> show chassis fabric fpcs
Fabric management FPC state:
FPC 2
  PFE #0
      Plane 0: Plane enabled
      Plane 1: Plane disabled >>>>>
      Plane 2: Plane enabled
      Plane 3: Plane enabled
      Plane 4: Plane enabled
      Plane 5: Plane enabled
      Plane 6: Plane enabled
      Plane 7: Plane enabled
FPC 4
  PFE #0
          Plane 0: Plane enabled
      Plane 1: Plane disabled >>>>>>
      Plane 2: Plane enabled
      Plane 3: Plane enabled
      Plane 4: Plane enabled
      Plane 5: Plane enabled
      Plane 6: Plane enabled
      Plane 7: Plane enabled
  PFE #1
      Plane 0: Plane enabled
      Plane 1: Plane disabled  >>>>
      Plane 2: Plane enabled
      Plane 3: Plane enabled
      Plane 4: Plane enabled
      Plane 5: Plane enabled
      Plane 6: Plane enabled
```

```
      Plane 7: Plane enabled
  PFE #2
      Plane 0: Plane enabled
      Plane 1: Plane disabled  >>>>
      Plane 2: Plane enabled
      Plane 3: Plane enabled
      Plane 4: Plane enabled
      Plane 5: Plane enabled
      Plane 6: Plane enabled
      Plane 7: Plane enabled
  PFE #3
      Plane 0: Plane enabled
      Plane 1: Plane disabled  >>>>>
      Plane 2: Plane enabled
          Plane 3: Plane enabled
      Plane 4: Plane enabled
      Plane 5: Plane enabled
      Plane 6: Plane enabled
      Plane 7: Plane enabled
FPC 6
  PFE #0
      Plane 0: Plane enabled
      Plane 1: Plane disabled   >>>>>
      Plane 2: Plane enabled
      Plane 3: Plane enabled
      Plane 4: Plane enabled
      Plane 5: Plane enabled
      Plane 6: Plane enabled
      Plane 7: Plane enabled
  PFE #1
      Plane 0: Plane enabled
      Plane 1: Plane disabled   >>>>>
      Plane 2: Plane enabled
      Plane 3: Plane enabled
      Plane 4: Plane enabled
      Plane 5: Plane enabled
      Plane 6: Plane enabled
      Plane 7: Plane enabled
FPC 7
  PFE #0
      Plane 0: Plane enabled
      Plane 1: Plane disabled  >>>>>
      Plane 2: Plane enabled
```

```
      Plane 3: Plane enabled
      Plane 4: Plane enabled
      Plane 5: Plane enabled
      Plane 6: Plane enabled
      Plane 7: Plane enabled
  PFE #1
      Plane 0: Plane enabled
      Plane 1: Plane disabled  >>>>>
      Plane 2: Plane enabled
      Plane 3: Plane enabled
      Plane 4: Plane enabled
      Plane 5: Plane enabled
      Plane 6: Plane enabled
      Plane 7: Plane enabled
  PFE #2
      Plane 0: Plane enabled
      Plane 1: Plane disabled  >>>>>
      Plane 2: Plane enabled
      Plane 3: Plane enabled
      Plane 4: Plane enabled
      Plane 5: Plane enabled
      Plane 6: Plane enabled
      Plane 7: Plane enabled
  PFE #3
      Plane 0: Plane enabled
      Plane 1: Plane disabled >>>>>>
      Plane 2: Plane enabled
      Plane 3: Plane enabled
      Plane 4: Plane enabled
      Plane 5: Plane enabled
      Plane 6: Plane enabled
      Plane 7: Plane enabled
```

From operational mode, enter the `show chassis fabric summary` command.

```
user@host> show chassis fabric summary
Plane   State    Uptime
 0      Online   3 minutes, 14 seconds
 1      Offline
 2      Online   1 hour, 56 minutes, 53 seconds
 3      Online   1 hour, 56 minutes, 39 seconds
```

```
 4      Online   1 hour, 56 minutes, 25 seconds
 5      Online   1 hour, 56 minutes, 11 seconds
 6      Online   1 hour, 55 minutes, 56 seconds
 7      Online   1 hour, 42 minutes, 28 seconds

 Note: For extended summary, use
       show chassis fabric summary extended
```

Meaning

The SFB in Slot 1 has been taken offline.

Verifying That the Enhanced Switch Fabric Board (SFB2) is Online

Purpose

To verify that the enhanced switch fabric board (SFB2) inserted in the same slot (slot 1) is online.

Action

From operational mode, enter the `show chassis fabric fpcs` command.

```
user@host> show chassis fabric fpcs
Fabric management FPC state:
FPC 2
  PFE #0
      Plane 0: Plane enabled
      Plane 1: Plane enabled >>>>>>
      Plane 2: Plane enabled
      Plane 3: Plane enabled
      Plane 4: Plane enabled
      Plane 5: Plane enabled
      Plane 6: Plane enabled
      Plane 7: Plane enabled
FPC 4
  PFE #0
          Plane 0: Plane enabled
      Plane 1: Plane enabled >>>>>>
      Plane 2: Plane enabled
      Plane 3: Plane enabled
      Plane 4: Plane enabled
```

```
      Plane 5: Plane enabled
      Plane 6: Plane enabled
      Plane 7: Plane enabled
  PFE #1
      Plane 0: Plane enabled
      Plane 1: Plane enabled  >>>>
      Plane 2: Plane enabled
      Plane 3: Plane enabled
      Plane 4: Plane enabled
      Plane 5: Plane enabled
      Plane 6: Plane enabled
      Plane 7: Plane enabled
  PFE #2
      Plane 0: Plane enabled
      Plane 1: Plane enabled  >>>>
      Plane 2: Plane enabled
      Plane 3: Plane enabled
      Plane 4: Plane enabled
      Plane 5: Plane enabled
      Plane 6: Plane enabled
      Plane 7: Plane enabled
  PFE #3
      Plane 0: Plane enabled
      Plane 1: Plane enabled  >>>>>
      Plane 2: Plane enabled
          Plane 3: Plane enabled
      Plane 4: Plane enabled
      Plane 5: Plane enabled
      Plane 6: Plane enabled
      Plane 7: Plane enabled
FPC 6
  PFE #0
      Plane 0: Plane enabled
      Plane 1: Plane enabled   >>>>>
      Plane 2: Plane enabled
      Plane 3: Plane enabled
      Plane 4: Plane enabled
      Plane 5: Plane enabled
      Plane 6: Plane enabled
      Plane 7: Plane enabled
  PFE #1
      Plane 0: Plane enabled
      Plane 1: Plane enabled   >>>>>
```

```
      Plane 2: Plane enabled
      Plane 3: Plane enabled
      Plane 4: Plane enabled
      Plane 5: Plane enabled
      Plane 6: Plane enabled
      Plane 7: Plane enabled
FPC 7
  PFE #0
      Plane 0: Plane enabled
      Plane 1: Plane enabled  >>>>>
      Plane 2: Plane enabled
      Plane 3: Plane enabled
      Plane 4: Plane enabled
      Plane 5: Plane enabled
      Plane 6: Plane enabled
      Plane 7: Plane enabled
  PFE #1
      Plane 0: Plane enabled
      Plane 1: Plane enabled  >>>>>
      Plane 2: Plane enabled
      Plane 3: Plane enabled
      Plane 4: Plane enabled
      Plane 5: Plane enabled
      Plane 6: Plane enabled
      Plane 7: Plane enabled
  PFE #2
      Plane 0: Plane enabled
      Plane 1: Plane enabled  >>>>>
      Plane 2: Plane enabled
      Plane 3: Plane enabled
      Plane 4: Plane enabled
      Plane 5: Plane enabled
      Plane 6: Plane enabled
      Plane 7: Plane enabled
  PFE #3
      Plane 0: Plane enabled
      Plane 1: Plane enabled >>>>>>
      Plane 2: Plane enabled
      Plane 3: Plane enabled
      Plane 4: Plane enabled
      Plane 5: Plane enabled
      Plane 6: Plane enabled
```

```
      Plane 7: Plane enabled
```

From operational mode, enter the `show chassis fabric summary` command.

```
user@host> show chassis fabric summary
Plane   State    Uptime
 0      Online   6 minutes, 38 seconds
 1      Online   2 minutes, 12 seconds >>>>
 2      Online   2 hours, 17 seconds
 3      Online   2 hours, 3 seconds
 4      Online   1 hour, 59 minutes, 49 seconds
 5      Online   1 hour, 59 minutes, 35 seconds
 6      Online   1 hour, 59 minutes, 20 seconds
 7      Online   1 hour, 45 minutes, 52 seconds
```

Meaning

The SFB2 that replaced the SFB on slot 1 is online and operational.

RELATED DOCUMENTATION

Understanding Fabric Grant Bypass | 61

Disabling Fabric Grant Bypass to Control Congestion and Improve Performance | 62

4

CHAPTER

Power Management

Configuring Ambient Temperature | 92

Configuring Ambient Temperature

IN THIS SECTION

- Understanding How Configuring Ambient Temperature Helps Optimize Power Utilization | 92
- Monitoring the Power Consumption of PTX5000 FPCs by Configuring the Ambient Temperature | 93
- Managing Power Allocated to PTX5000 FPCs on the Basis of Chassis Ambient Temperature Configuration | 97

Understanding How Configuring Ambient Temperature Helps Optimize Power Utilization

The key to managing power in network infrastructure is the efficient utilization of provisioned power. Provisioned power is the minimum power that is required to bring a router or a switch online. Junos OS determines the minimum required power by considering the worst-case power requirement for all the FRUs installed in the device. One of the methods to optimize the provisioned power on MX Series routers or EX9200 switches is to configure the device to operate at a cooler temperature. You can enable a device to operate at a lower operating temperature by configuring a lower ambient temperature.

Ambient temperature is the maximum operating temperature for a device. By configuring an ambient temperature, you can optimize power provisioned for the cooling system and the line cards. The maximum speed at which fans operate depends on the configured ambient temperature. As the fan speed increases, the power consumed by the fans increases. As a result, the device consumes more power when the temperature is high because the fans run faster to maintain the operating temperature of the chassis within the configured limits.

When a router or a switch restarts, the system adjusts the power allocation or the provisioned power for the line cards on the basis of the configured ambient temperature. If enough power is not available, a minor chassis alarm is raised. However, the chassis continues to run with the configured ambient temperature. You can configure a new higher ambient temperature only after you make more power available by adding new power supply modules or by taking a few line cards offline. By using the provisioned power that is saved by configuring a lower ambient temperature, you can bring more hardware components online.

A specific ambient temperature value might not be applicable to a different geographical location, for example, in a colder region. For devices operating in colder regions, you can configure a lower ambient

temperature, which helps reduce provisioned power significantly. However, in a region of higher temperature, you might need to configure a higher ambient temperature to ensure smooth functioning of the device. For example, if the router or switch operates in a colder region, you can set the ambient temperature to 25°C, which reduces the maximum fan speed, thereby reducing the maximum power consumption. Thus, by configuring an appropriate ambient temperature, you can reduce the provisioned power and save cost on network power infrastructure.

You can configure ambient temperature by using the `set chassis ambient-temperature (25C|40C|55C)` statement at the `[edit chassis]` hierarchy level. The default ambient temperature for MX Series routers and EX9200 switches is 40°C.

Monitoring the Power Consumption of PTX5000 FPCs by Configuring the Ambient Temperature

You can configure the ambient temperature of the PTX5000 chassis to manage power allocated to the FPCs. You can set the ambient temperature of the chassis at 25° C, or 40° C. On system initialization, the power manager reads the ambient temperature and allocates power to the FPCs according to the power budget policy at that temperature.

1. To configure the ambient temperature, include the **set chassis ambient-temperature 25|40|55** statement at the `[edit]` hierarchy leve in the configuration mode:

```
[edit]
    user@host# set chassis ambient-temperature 25|40
```

2. To verify the ambient temperature of the chassis, use the **show chassis ambient-temperature** command at the `[edit]` hierarchy level in the operational mode:

```
[edit]
    user@host> show chassis ambient-temperature
```

```
Ambient Temperature: 25C
```

To verify the power consumption of the FPCs, use the following statements:

1. Use the **show chassis power detail | grep "FPC"** statement at the `[edit]` hierarchy level to view the power consumption of the FPCs.

```
user@host> show chassis power detail |
grep "FPC"
```

```
    FPC 0                448
  FPC 1                419
  FPC 2                373
  FPC 3                  0
  FPC 4                  0
  FPC 5                  0
  FPC 6                  0
  FPC 7                  0
```

Alternatively use the SNMP MIB command, `show snmp mib walk jnxOperatingFRUPower | grep "\.7\."` to view the power consumption of each FPC:

```
user@host> show snmp mib walk jnxOperatingFRUPower
| grep "\.7\."

jnxOperatingFRUPower.4.1.7.0 = 0
jnxOperatingFRUPower.7.1.0.0 = 457             < ------  For FPC 0
jnxOperatingFRUPower.7.2.0.0 = 428             < ------  For FPC 1
jnxOperatingFRUPower.7.3.0.0 = 381             < ------  For FPC 2
jnxOperatingFRUPower.15.7.0.0 = 0
```

2. Use the **show chassis alarms** statement to view the alarms generated for any of the FPCs:

```
user@host> show chassis alarms

Alarm time               Class  Description
2007-04-08 05:51:12 UTC  Minor  FPC 1, Consumption > 90percent of allocated Budget
2007-04-08 05:51:12 UTC  Minor  FPC 0, Consumption > 90percent of allocated Budget
2007-04-08 05:50:26 UTC  Minor  FPC 0 SIB Link Error
2007-04-08 05:49:34 UTC  Minor  SIB 0 FPC Link Error
2007-04-08 05:48:02 UTC  Minor  No Redundant Power for FPC 0-7
2007-04-08 05:48:01 UTC  Minor  No Redundant Power for Rear Chassis
2007-04-08 05:48:01 UTC  Minor  No Redundant Power for Fan 0-2
```

If an FPC consumes more than 90% of the allocated power budget, the `Consumption > 90percent of allocated Budget` alarm is raised. FPC power consumption is measured at intervals of 65 seconds.

NOTE: Starting in Junos OS Release 18.4R1, the PTX5000 routers do not raise a chassis alarm in the following events:

- Power consumption by an FPC exceeds 90% of the allocated power budget.
- Power consumption by an FPC exceeds 100% of the allocated power budget (in this case, a system log is registered).

NOTE: If the PTX5000 chassis has redundant power supply modules, and if one PSM fails, the FPCs can still be online. Only the `No redundant power supply` alarm is raised.

If the PTX5000 chassis does not have redundant power supply modules, failure of one PSM can cause the FPCs to go offline, depending on the total chassis power available at that time.

3. When the power consumption of an FPC is more than the allocated budget for three consecutive intervals, the `Consumption > 90percent of allocated Budget` is cleared and `PWR Range Overshoot` alarms is raised for that particular FPC and the ambient temperature is set to the next higher setting.

```
user@host> show chassis alarms

9 alarms currently active
Alarm time               Class  Description
2007-04-08 05:56:38 UTC  Minor  FPC 2, Consumption > 90percent of allocated Budget
2007-04-08 05:55:33 UTC  Minor  FPC 1, PWR Range Overshoot
2007-04-08 05:53:22 UTC  Minor  FPC 0, PWR Range Overshoot
2007-04-08 05:50:26 UTC  Minor  FPC 0 SIB Link Error
2007-04-08 05:49:34 UTC  Minor  SIB 0 FPC Link Error
2007-04-08 05:48:02 UTC  Minor  No Redundant Power for FPC 0-7
2007-04-08 05:48:01 UTC  Minor  No Redundant Power for Rear Chassis
2007-04-08 05:48:01 UTC  Minor  No Redundant Power for Fan 0-2
```

NOTE: `Consumption > 90percent of allocated Budget` alarms are updated according to the new ambient temperature setting but the chassis ambient temperature is not changed.

```
user@host> show chassis alarms
5 alarms currently active
Alarm time               Class  Description
```

```
2007-04-01 04:36:53 UTC  Minor  No Redundant Power for FPC 0-7
2007-04-01 04:36:52 UTC  Minor  No Redundant Power for Rear Chassis
2007-04-01 04:36:51 UTC  Minor  No Redundant Power for Fan 0-2
2007-04-01 04:36:47 UTC  Minor  PDU 1 Absent
```

a. You can verify the temperature by using the **show chassis ambient-temperature** command.

```
user@host> show chassis ambient-temperature
Ambient Temperature: 25C
```

b. Enter the configuration mode and check the configured ambient temperature. Use the **show chassis ambient temperature** operational mode command.

```
user@host# show chassis ambient temperature
Ambient Temperature: 25C
```

This is set to the last configured value.

c. To clear the temperature set for the overshooting condition, use the **request chassis power-manager reset ambient-config** command.

```
user@host> request chassis power-manager
reset ambient-config
```

Verify the ambient temperature after the reset.

```
show chassis ambient-temperature
Ambient Temperature: 25C
```

4. Verify the active alarms in the chassis by using the `show chassis alarms` command.

```
user@host> show chassis alarms
7 alarms currently active
Alarm time               Class  Description
2007-04-01 04:36:53 UTC  Minor  No Redundant Power for FPC 0-7
2007-04-01 04:36:52 UTC  Minor  No Redundant Power for Rear Chassis
2007-04-01 04:36:51 UTC  Minor  No Redundant Power for Fan 0-2
2007-04-01 04:36:47 UTC  Minor  PDU 1 Absent
```

Managing Power Allocated to PTX5000 FPCs on the Basis of Chassis Ambient Temperature Configuration

The power management feature of the PTX5000 Packet Transport Router is enhanced to manage the power supplied to the FPCs on the router by configuring the ambient temperature of the chassis. You can set the ambient temperature of the chassis at 25° C, or 40° C. On system initialization, the power manager reads the ambient temperature and allocates power to the FPC according to the power budget policy at that temperature. If the actual power consumption of any FPC exceeds the configured value for more than three minutes, the power manager overrides the configured ambient temperature setting of that FPC, and resets its ambient temperature to the next higher level and reallocates power according to the new temperature setting. All the overshooting FPCs remain in the dynamic ambient temperature mode until the next reboot, or until you override it with a CLI command. The power manager then resets the power budget of the FRUs according to the configured ambient temperature setting.

NOTE: If the ambient temperature is not set, then, 55° C is considered as the default ambient-temperature and FPCs are assigned power according to the default ambient temperature.

For example, if the chassis ambient temperature is set to 25° C, the power manager allocates power to the FPCs according to the power budget policy at 25 ° C. If an FPC consumes more than 90% of the allocated power, an alarm—`Consumption > 90percent of allocated Budget`—is raised. If the FPC power consumption exceeds the allocated power for more than three minutes, the `PWR Range Overshoot` alarm is raised and the power manager reallocates power to that FPC according to the next higher temperature setting, that is, 40° C .

NOTE: During the `PWR Range Overshoot` alarm condition, you cannot reconfigure or delete the ambient temperature setting. You can reset the ambient temperature to the earlier setting after clearing the alarm condition by using the **request chassis power-manager reset ambient-config** command.

NOTE: If the PTX5000 chassis has redundant power supply modules, and if one PSM fails, the FPCs can still be online. Only the `No redundant power supply` alarm is raised.

If the PTX5000 chassis does not have redundant power supply modules, failure of one PSM can cause the FPCs to go offline, depending on the total chassis power available at that time.

RELATED DOCUMENTATION

ambient-temperature | **255**

show chassis temperature-thresholds | **1619**

Understanding How Dynamic Power Management Enables Better Utilization of Power | **202**

5

CHAPTER

Managing Errors and Alarms

Understanding Chassis Alarms | 100

Managing Errors | 178

Craft Interface | 196

Understanding Chassis Alarms

IN THIS SECTION

- Chassis Alarms | 100
- Chassis Conditions That Trigger Alarms | 114
- MX204 LED Scheme Overview | 160
- MPC and MIC Lane LED Scheme Overview | 161
- Configuring Slow Packet Forwarding Engine Alarm | 166
- User-Defined Alarm Relay Overview | 170
- Configuring Chassis Alarm Relays | 171
- Configuring Chassis Alarm Input | 172
- Configuring Chassis Alarm Output | 173
- Configuring Chassis Alarm Input and Output (ACX710 Routers) | 175

Chassis Alarms

Table 10 on page 100 and Table 11 on page 106 list the chassis-related alarms that are displayed when you execute the `show chassis alarms` operational mode command on PTX Series or MX series routers.

Table 10: Chassis Alarms for PTX5000 series routers

Message displayed in the output of `show chassis alarms` Command	Description	Class	Solution
`Mix of PDUs`	Appears when AC PDUs and DC PDUs are installed. Also appears when zoning and non-zoning PDUs are installed.	Minor	Install same type of PDUs in all slots.

Table 10: Chassis Alarms for PTX5000 series routers *(Continued)*

Message displayed in the output of `show chassis alarms` Command	Description	Class	Solution
`Power Manager Non Operational )`	Appears when zoning and non- zoning PDUs are installed.	Minor	Install same type of PDUs in all slots.
`No Redundant Power`	When backup PDUs are absent or down	Minor	Install backup PDU.
`PDU 0/1 Converter Failed`	Appears when one or more 36V booster converter fails in PDU (PDU2-PTX-DC).	Major	Check PDU and replace if required.
`No redundant power for system`	Appears when there is no backup PDUs in the router	Minor	Install backup PDU.
`No Power for System`	Appears when the router is powered on with only one PSM.	Major	Install backup PDU.
`SIB 1 FPC Link Error`	Appears when the indicated SIB is down.	Minor	Replace faulty SIB.
`SIB 1 Absent`	Appears when the indicated SIB is absent.	Major	Replace faulty SIB.
`PDU 1 PSM 1 Not OK`	Appears when the PSM in the displayed PDU is down.	Major	Replace faulty PSM.

Table 10: Chassis Alarms for PTX5000 series routers *(Continued)*

Message displayed in the output of `show chassis alarms` Command	Description	Class	Solution
`Host x disk drive y smart error`	Appears when there is an issue with the internal state of the disk such as, the disk life remaining is below the threshold. • *x*–0 for Host 0 (RE0) and 1 for Host 1 (RE1) • *y*–1 for disk 1 and 2 for disk 2	Minor	Replace the disk.
`VMHost x Boot from alternate set`	Appears when the Routing Engine is booted from the alternate set.	Minor	Verify logs. As required, recover the Routing Engine by using the command `request vmhost snapshot`
`VMHost RE x host application failed`	Appears when one of the vmhost daemon has failed.	Minor	Manual primary-role switchover followed by reboot using the command `request vmhost reboot`.
`VMHost Boot from alternate disk`	Appears when the primary disk is corrupted and unable to launch the guest.	Minor	Recover the disk by using the command `request vmhost snapshot recovery`.
`Host 0/1 CPU Temperature Warm`	Appears when the Routing Engine CPU temperature is above the TCONTROL threshold. 0 for Host 0 (RE0) and 1 for Host 1 (RE1)	Minor	No recovery action required from the user. Based on the temperature, the fan speed is changed to cool the system, thereby reducing the temperature.

Table 10: Chassis Alarms for PTX5000 series routers *(Continued)*

Message displayed in the output of `show chassis alarms` Command	Description	Class	Solution
`Host 0/1 CPU Temperature Hot`	Appears when the Routing Engine CPU temperature is above the PROCHOT threshold. 0 for Host 0 (RE0) and 1 for Host 1 (RE1)	Minor	No recovery action required from the user. Based on the temperature, the fan speed is changed to cool the system, thereby reducing the temperature.
`Host 0/1 ECC single bit parity error`	Appears when single bit ECC error is above the threshold value. 0 for Host 0 (RE0) and 1 for Host 1 (RE1)	Major	No recovery action required from the user. The count gets reset after 24 hours.
`Host 0 ECC 53 parity error`	Appears when multiple bit Error Checking and Correction (ECC) error is above the threshold value.	Major	Reboot the router.
`VMHost RE x Disk y Missing`	Appears when the disk in the Routing Engine is missing. • *x*–0 for RE0 and 1 for RE1 • *y*–1 for disk 1 and 2 for disk 2	Minor	Check if there is missing or a defective disk. Insert healthy disk. Take a snapshot and recover the disk by using the command `request vmhost snapshot`. See *Disk Recovery Using the VM Host Snapshot* in Installing, Upgrading, Backing Up, and Recovery of VM Host.

Table 10: Chassis Alarms for PTX5000 series routers *(Continued)*

Message displayed in the output of `show chassis alarms` Command	Description	Class	Solution
`VMHost RE x Disk y Label Missing`	Appears when the labels on the disk in the Routing Engine is missing. • *x*–0 for RE0 and 1 for RE1 • *y*–1 for disk 1 and 2 for disk 2	Minor	Reboot the Routing-Engine from healthy disk and recover the impacted disk using the command `request vmhost snapshot`.
`VMHost RE x Disk y Wrong Slot`	Appears when there is disk swap or pre-lablled disk inserted in wrong slot. • *x*–0 for RE0 and 1 for RE1 • *y*–1 for disk 1 and 2 for disk 2	Minor	If both the disks are in wrong slot, swap the disks and reboot. If only one disk is in wrong slot, recover the disk via snapshot after booting from healthy disk.
`VMHost RE x Disk y File System Errors`	Appears when there is a file system error. • *x*–0 for RE0 and 1 for RE1 • *y*–1 for disk 1 and 2 for disk 2	Minor	Boot the Routing-engine from healthy disk and recover the impacted disk using the command `request vmhost snapshot`.

Table 10: Chassis Alarms for PTX5000 series routers *(Continued)*

Message displayed in the output of `show chassis alarms` Command	Description	Class	Solution
`VMHost RE x Disk y Write Rate Threshold Cross`	Appears if write rate threshold is crossed. • *x*–0 for RE0 and 1 for RE1 • *y*–1 for disk 1 and 2 for disk 2	Minor	Identify the application that is generating excessive writes and apply configuration changes to prevent excessive writes.
`VMHost RE x Disk y Size Incorrect`	Appears if the size of the disk is not appropriate for the platform. • *x*–0 for RE0 and 1 for RE1 • *y*–1 for disk 1 and 2 for disk 2	Minor	Insert an disk of the right size and reboot the Routing Engine.
`VMHost RE x Disk y Usage Is Above Threshold`	Appears when the usage of the disk partition is above the threshold limit. • *x*–0 for RE0 and 1 for RE1 • *y*–1 for disk 1 and 2 for disk 2	Minor	Cleanup the disks using `request vmhost cleanup` command.
`VMHost RE x Secure Boot Disabled`	Appears when Secure Boot is not enforced in the BIOS.	Medium	Enable Secure Boot in the BIOS.

Table 10: Chassis Alarms for PTX5000 series routers *(Continued)*

Message displayed in the output of `show chassis alarms` Command	Description	Class	Solution
`VMHost RE x Secure BIOS Version Mismatch`	Appears when current BIOS version is older than the Last Known good BIOS version.	Medium	Upgrade the BIOS using the `request system firmware` command.
`RE x Mismatch in total memory detected`	Appears when total memory for the pair of Routing Engines does not match, possibly because a memory module has failed.	Medium	Check the available RAM size using `show vmhost hardware` command. If the RAM size for the pair of Routing Engines does not match, contact JTAC.

Table 11: Chassis Alarms for PTX10008 and PTX10016 routers

Message displayed in the output of `show chassis alarms` Command	Description	Class	Solution
`FPC x need bounce`	Appears when port speed configuration needs an FPC reboot for the new speed configuration to take effect. • *x*-FPC slot number.	Minor	Do one of the following to clear the alarm. • Manually reboot the FPC for the new port speed configuration to take effect. • Delete the new port speed configuration that has triggered the alarm. In this case, the new port speed configuration will not take effect.

Table 11: Chassis Alarms for PTX10008 and PTX10016 routers *(Continued)*

Message displayed in the output of `show chassis alarms` Command	Description	Class	Solution
`PEM *pem-slot* No Power`	Appears when both power supplies are not connected and the enable switch is not set correctly.	Major	Check power supply input connection and the enable switch setting. See the dip switch and enable switch settings for your specific power supply model, Removing and Installing MX10000 Power System Components.
`PEM *pem-slot* feed *feed-slot* no input`	Appears when both power supplies are not connected but the enable switch is set to on.	Major	
`PEM *pem-slot* feed *feed-slot* Switch Cfg Wrong`	Appears when either both power supplies are connected or one of the power supplies is connected but the enable switch is not set correctly.	Major	
`Mix of AC & DC Supplies`	Mix of AC and DC power supplies.	Major	Ensure that the router has the same type of power supplies.

Table 12 on page 108 lists the chassis-related alarms that are displayed when you execute the `show chassis alarms` operational mode command on MX Series routers

Table 12: Chassis Alarms for MX series routers

Message displayed in the output of `show chassis alarms` Command	Description	Class	Solution
`Host x disk drive y smart error`	Appears when there is an issue with the internal state of the disk such as, the disk life remaining is below the threshold. • *x*–0 for Host 0 (RE0) and 1 for Host 1 (RE1) • *y*–1 for disk 1 and 2 for disk 2	Minor	Replace the disk.
`VMHost x Boot from alternate set`	Appears when the Routing Engine is booted from the alternate set.	Minor	Verify logs. As required, recover the Routing Engine by using the command `request vmhost snapshot`
`VMHost RE x host application failed`	Appears when one of the vmhost daemon has failed.	Minor	Manual primary-role switchover followed by reboot using the command primary-role switchover followed by reboot using the command `request vmhost reboot`
VMHost Boot from alternate disk	Appears when the primary disk is corrupted and unable to launch the guest.	Minor	Recover the disk by using the command `request vmhost snapshot recovery`.

Table 12: Chassis Alarms for MX series routers *(Continued)*

Message displayed in the output of `show chassis alarms` Command	Description	Class	Solution
`Host 0/1 CPU Temperature Warm`	Appears when the Routing Engine CPU temperature is above the TCONTROL threshold. 0 for Host 0 (RE0) and 1 for Host 1 (RE1)	Minor	No recovery action required from the user. Based on the temperature, the fan speed is changed to cool the system thereby reducing the temperature
`Host 0/1 CPU Temperature Hot`	Appears when the Routing Engine CPU temperature is above the PROCHOT threshold. 0 for Host 0 (RE0) and 1 for Host 1 (RE1)	Minor	No recovery action required from the user. Based on the temperature, the fan speed is changed to cool the system thereby reducing the temperature
`Host 0/1 ECC single bit parity error`	Appears when single bit ECC error is above the threshold value. 0 for Host 0 (RE0) and 1 for Host 1 (RE1)	Major	No recovery action required from the user. The count gets reset after 24 hours.
`Host 0 ECC 53 parity error`	Appears when multiple bit ECC error is above the threshold value.	Major	Reboot the router.
`Mixed Master and Backup RE types`	Appears when dissimilar Routing Engines are present on the chassis.	Major	Both Routing Engines must be of the same model number. Replace one of the Routing Engines.

Table 12: Chassis Alarms for MX series routers *(Continued)*

Message displayed in the output of `show chassis alarms` Command	Description	Class	Solution
`VMHost RE x Disk y Missing`	Appears when the disk in the Routing Engine is missing. • *x*–0 for RE0 and 1 for RE1 • *y*–1 for disk 1 and 2 for disk 2	Minor	Check if there is missing or a defective disk. Insert healthy disk. Take a snapshot and recover the disk by using the command `request vmhost snapshot`. See *Disk Recovery Using the VM Host Snapshot* in No Link Title
`VMHost RE x Disk y Label Missing`	Appears when the labels on the disk in the Routing Engine is missing. • *x*–0 for RE0 and 1 for RE1 • *y*–1 for disk 1 and 2 for disk 2	Minor	Reboot the Routing-Engine from healthy disk and recover the impacted disk using the command `request vmhost snapshot`.
`VMHost RE x Disk y Wrong Slot`	Appears when there is disk swap or pre-lablled disk inserted in wrong slot. • *x*–0 for RE0 and 1 for RE1 • *y*–1 for disk 1 and 2 for disk 2	Minor	If both the disks are in wrong slot, swap the disks and reboot. If only one disk is in wrong slot, recover the disk via snapshot after booting from healthy disk.

Table 12: Chassis Alarms for MX series routers *(Continued)*

Message displayed in the output of `show chassis alarms` Command	Description	Class	Solution
`VMHost RE x Disk y File System Errors`	Appears when there is a file system error. • *x*–0 for RE0 and 1 for RE1 • *y*–1 for disk 1 and 2 for disk 2	Minor	Boot the Routing-engine from healthy disk and recover the impacted disk using the command `request vmhost snapshot`.
`VMHost RE x Disk y Write Rate Threshold Cross`	Appears if write rate threshold is crossed. • *x*–0 for RE0 and 1 for RE1 • *y*–1 for disk 1 and 2 for disk 2	Minor	Identify the application that is generating excessive writes and apply configuration changes to prevent the excessive writes.
`VMHost RE x Disk y Size Incorrect`	Appears if the size of the disk is not appropriate for the platform. • *x*–0 for RE0 and 1 for RE1 • *y*–1 for disk 1 and 2 for disk 2	Minor	Insert an disk of the right size and reboot the Routing Engine.
`VMHost RE x Disk y Usage Is Above Threshold`	Appears when the usage of the disk partition is above the threshold limit. • *x*–0 for RE0 and 1 for RE1 • *y*–1 for disk 1 and 2 for disk 2	Minor	Cleanup the disks using `request vmhost cleanup` command.

Table 12: Chassis Alarms for MX series routers *(Continued)*

Message displayed in the output of `show chassis alarms` Command	Description	Class	Solution
`VMHost RE x Secure Boot Disabled`	Appears when Secure Boot is not enforced in the BIOS.	Medium	Enable Secure Boot in the BIOS.
`VMHost RE x Secure BIOS Version Mismatch`	Appears when current BIOS version is older than the Last Known good BIOS version.	Medium	Upgrade the BIOS using the `request system firmware` command.
`RE x Mismatch in total memory detected`	Appears when total memory for the pair of Routing Engines does not match, possibly because a memory module has failed.	Medium	Check the available RAM size using `show vmhost hardware` command. If the RAM size for the pair of Routing Engines does not match, contact JTAC.
`Mix of PDM types`	Appears when the new high-voltage second-generation universal PDM is used along with older PDM variants.	Minor	Replace the old PDMs with the new universal PDMs.
`Mix of PSM types`	Appears if the new high-voltage second-generation universal PSM is used along with other AC/DC or DC/DC PSMs.	Minor	Install the same type of PSMs in all the slots.

Table 12: Chassis Alarms for MX series routers *(Continued)*

Message displayed in the output of `show chassis alarms` Command	Description	Class	Solution
`Mix of PEMs`	Applicable to the MX960 routers with high-voltage second-generation universal power supply module (PSM). This alarm appears if the 5100 W power supply is used along with older power supplies in the MX960.	Minor	Install the same type of power supplies in all the slots.

Table 13: Chassis Alarms (PTP-Specific) for ACX710 Router

Message displayed in the output of `show chassis alarms` Command	Description	Class	Solution
PTP No Foreign Master	Raised if the external Precision Time Protocol (PTP) primary clock does not send announce packets.	Major	Ensure that the PTP configuration is correct. Also, ensure that external primary clock is working fine. This alarm gets cleared when the system recovers from the error state.
PTP Sync Fail	Raised if the PTP lock-status is not in Phase Aligned state.	Major	Ensure that the PTP configuration is correct. This alarm gets cleared when the PTP lock status moves to Phase Aligned state. Use the CLI 'show ptp lock-status' to view the PTP lock status.
Chassis Loss of all Equipment Clock Synch References	Raised if both the primary and secondary SyncE references fail and the chassis PLL is in holdover.	Major	Use the `show chassis synchronization` command to view the ineligibility reason, and to debug further. This alarm gets cleared when the system recovers from the error state.

Table 13: Chassis Alarms (PTP-Specific) for ACX710 Router *(Continued)*

Message displayed in the output of `show chassis alarms` Command	Description	Class	Solution
Chassis Loss of Equipment Clock Synch Reference 1	Raised if the primary SyncE reference fails and no secondary SyncE reference is configured or present.	Major	Use the `show chassis synchronization` command to view the ineligibility reason, and to debug further.
Chassis Loss of Equipment Clock Synch Reference 2	Raised if you have configured at least two or more SyncE sources and the secondary SyncE source has failed.	Major	Use the `show chassis synchronization` command to view the ineligibility reason, and to debug further.

SEE ALSO

show chassis alarms | 483

Chassis Conditions That Trigger Alarms

IN THIS SECTION

- Chassis Component Alarm Conditions on M5 and M10 Routers | 116
- Chassis Component Alarm Conditions on M7i and M10i Routers | 119
- Chassis Component Alarm Conditions on M20 Routers | 124
- Chassis Component Alarm Conditions on M40 Routers | 128
- Chassis Component Alarm Conditions on M40e and M160 Routers | 133
- Chassis Component Alarm Conditions on M120 and M320 Routers | 139
- Chassis Component Alarm Conditions on M320 Routers | 145
- Chassis Component Alarm Conditions on MX Series 5G Universal Routing Platforms | 150
- Backup Routing Engine Alarms | 156

Chassis Component Alarm Conditions for Guest Network Functions (GNFs) | **158**

Chassis Component Alarm Conditions on SRX1500, SRX4100, SRX4200 and SRX4600 devices | **159**

Various conditions related to the chassis components trigger yellow and red alarms. You cannot configure these conditions.

- "Backup Routing Engine Alarms" on page 156
- "Chassis Component Alarm Conditions on M5 and M10 Routers" on page 116
- "Chassis Component Alarm Conditions on M7i and M10i Routers" on page 119
- "Chassis Component Alarm Conditions on M20 Routers" on page 124
- "Chassis Component Alarm Conditions on M40 Routers" on page 128
- "Chassis Component Alarm Conditions on M40e and M160 Routers" on page 133
- "Chassis Component Alarm Conditions on M120 and M320 Routers" on page 139
- "Chassis Component Alarm Conditions on M320 Routers" on page 145
- "Chassis Component Alarm Conditions on MX Series 5G Universal Routing Platforms" on page 150
- "Chassis Component Alarm Conditions for Guest Network Functions (GNFs)" on page 158
- "Chassis Component Alarm Conditions on SRX1500, SRX4100, SRX4200 and SRX4600 devices" on page 159
- For PTX5000 Packet Transport Router chassis component alarm conditions, see the *PTX5000 Packet Transport Router Hardware Guide*
- For T320 Core Router chassis component alarm conditions, see the *T320 Core Router Hardware Guide*
- For T640 Core Router chassis component alarm conditions, see the *T640 Core Router Hardware Guide*
- For T1600 Core Router chassis component alarm conditions, see the *T1600 Core Router Hardware Guide*
- For T4000 Core Router chassis component alarm conditions, see the *T4000 Core Router Hardware Guide*
- For TX Matrix chassis component alarm conditions, see the *TX Matrix Router Hardware Guide*

- For TX Matrix Plus chassis component alarm conditions, see the *TX Matrix Plus Router Hardware Guide*

Chassis Component Alarm Conditions on M5 and M10 Routers

Table 14 on page 116 lists the alarms that the chassis components can generate on M5 and M10 routers.

Table 14: Chassis Component Alarm Conditions on M5 and M10 Routers

Chassis Component	Alarm Condition	Remedy	Alarm Severity
Alternative media	The router boots from an alternate boot device, the hard disk. The CompactFlash card is typically the primary boot device. The Routing Engine boots from the hard disk when the primary boot device fails.	Open a support case using the Case Manager link at www.juniper.net/ or call 1-888-314-JTAC (within the United States) or 1-408-745-9500 (from outside the United States).	Yellow
Craft interface	The craft interface has failed.	Replace failed craft interface.	Red
Fan trays	One fan tray has been removed from the chassis.	Install missing fan tray.	Yellow
	Two or more fan trays have been removed from the chassis.	Install missing fan trays.	Red
	One fan in the chassis is not spinning or is spinning below required speed.	Replace failed fan tray.	Red
Forwarding Engine Board (FEB)	The control board has failed. If this occurs, the board attempts to reboot.	Replace failed FEB.	Red

Table 14: Chassis Component Alarm Conditions on M5 and M10 Routers *(Continued)*

Chassis Component	Alarm Condition	Remedy	Alarm Severity
Flexible PIC Concentrator (FPC)	An FPC has failed. If this occurs, the FPC attempts to reboot. If the FEB sees that an FPC is rebooting too often, it shuts down the FPC.	Replace failed FPC.	Red
Hot swapping	Too many hot-swap interrupts are occurring. This message generally indicates that a hardware component that plugs into the router's backplane from the front (generally, an FPC) is broken.	Replace failed component.	Red
Routing Engine	Error in reading or writing CompactFlash card.	Reformat CompactFlash card and install bootable image. If this fails, replace failed Routing Engine.	Yellow
	System booted from hard disk.	Install bootable image on CompactFlash card. If this fails, replace failed Routing Engine.	Yellow
	CompactFlash card missing in boot list.	Replace failed Routing Engine.	Red
	Hard disk missing in boot list.	Replace failed Routing Engine.	Red

Table 14: Chassis Component Alarm Conditions on M5 and M10 Routers *(Continued)*

Chassis Component	Alarm Condition	Remedy	Alarm Severity
	The Ethernet management interface (`fxp0` or `em0`) on the Routing Engine is down.	• Check the interface cable connection. • Reboot the system. • If the alarm recurs, open a support case using the Case Manager link at https://www.juniper.net/support/ or call 1-888-314-JTAC (within the United States) or 1-408-745-9500 (from outside the United States)	Red
Power supplies	A power supply has been removed from the chassis.	Install missing power supply.	Yellow
	A power supply has failed.	Replace failed power supply.	Red
Temperature	The chassis temperature has exceeded 55 degrees C (131 degrees F), the fans have been turned on to full speed, and one or more fans have failed.	• Check room temperature. • Check air filter and replace it. • Check airflow. • Check fan.	Yellow
	The chassis temperature has exceeded 65 degrees C (149 degrees F), and the fans have been turned on to full speed.	• Check room temperature. • Check air filter and replace it. • Check airflow. • Check fan.	Yellow

Table 14: Chassis Component Alarm Conditions on M5 and M10 Routers *(Continued)*

Chassis Component	Alarm Condition	Remedy	Alarm Severity
	The chassis temperature has exceeded 65 degrees C (149 degrees F), and a fan has failed. If this condition persists for more than 4 minutes, the router shuts down.	• Check room temperature. • Check air filter and replace it. • Check airflow. • Check fan.	Red
	The chassis temperature has exceeded 75 degrees C (167 degrees F). If this condition persists for more than 4 minutes, the router shuts down.	• Check room temperature. • Check air filter and replace it. • Check airflow. • Check fan.	Red
	The temperature sensor has failed.	Open a support case using the Case Manager link at www.juniper.net/ or call 1-888-314-JTAC (within the United States) or 1-408-745-9500 (from outside the United States).	Red

Chassis Component Alarm Conditions on M7i and M10i Routers

Table 15 on page 120 lists the alarms that the chassis components can generate on M7i and M10i routers.

Table 15: Chassis Component Alarm Conditions on M7i and M10i Routers

Chassis Component	Alarm Condition	Remedy	Alarm Severity
Alternative media	The router boots from an alternate boot device, the hard disk. The CompactFlash card is typically the primary boot device. The Routing Engine boots from the hard disk when the primary boot device fails.	Open a support case using the Case Manager link at https://www.juniper.net/support/ or call 1-888-314-JTAC (within the United States) or 1-408-745-9500 (from outside the United States).	Yellow
Compact FEB (CFEB)	For an M7i router, CFEB has failed. If this occurs, the board attempts to reboot.	Replace failed CFEB.	Red
	For an M10i router, both control boards have been removed or have failed.	Replace failed or missing CFEB.	Red
	Too many hard errors in CFEB memory.	Replace failed CFEB.	Red
	Too many soft errors in CFEB memory.	Replace failed CFEB.	Red
	A CFEB microcode download has failed.	Replace failed CFEB.	Red
Fan trays	A fan has failed.	Replace failed fan tray.	Red
	For an M7i router, a fan tray has been removed from the chassis.	Install missing fan tray.	Red
	For an M10i router, both fan trays are absent from the chassis.	Install missing fan tray.	Red

Table 15: Chassis Component Alarm Conditions on M7i and M10i Routers *(Continued)*

Chassis Component	Alarm Condition	Remedy	Alarm Severity
	For a TX Matrix Plus router, fan tray is not matching the ST-SIB-Ls SIB.	Install a Rev.3 fan tray.	Red
Hot swapping	Too many hot-swap interrupts are occurring. This message generally indicates that a hardware component that plugs into the router's midplane from the front is broken.	Replace failed component.	Red
Power supplies	A power supply has been removed.	Insert missing power supply.	Yellow
	A power supply has failed.	Replace failed power supply.	Red
	For an M10i router, only one power supply is operating.	Insert or replace secondary power supply.	Red
Routing Engine	Excessive framing errors on console port. An excessive framing error alarm is triggered when the default framing error threshold of 20 errors per second on a serial port is exceeded. This might be caused by a faulty serial console port cable connected to the device.	Replace the serial cable connected to the device. If the cable is replaced and no excessive framing errors are detected within 5 minutes from the last detected framing error, the alarm is cleared automatically.	Yellow
	Error in reading or writing hard disk.	Reformat hard disk and install bootable image. If this fails, replace failed Routing Engine.	Yellow

Table 15: Chassis Component Alarm Conditions on M7i and M10i Routers *(Continued)*

Chassis Component	Alarm Condition	Remedy	Alarm Severity
	Error in reading or writing CompactFlash card.	Reformat CompactFlash card and install bootable image. If this fails, replace failed Routing Engine.	Yellow
	System booted from hard disk. This alarm only applies, if you have an optional CompactFlash card.	Install bootable image on CompactFlash card. If this fails, replace failed Routing Engine.	Yellow
	CompactFlash card missing in boot list.	Replace failed Routing Engine.	Red
	Hard disk missing in boot list.	Replace failed Routing Engine.	Red
	Routing Engine failed to boot.	Replace failed Routing Engine.	Red
	The Ethernet management interface (`fxp0` or `em0`) on the Routing Engine is down.	• Check the interface cable connection. • Reboot the system. • If the alarm recurs, open a support case using the Case Manager link at https://www.juniper.net/support/ or call 1-888-314-JTAC (within the United States) or 1-408-745-9500 (from outside the United States)	Red

Table 15: Chassis Component Alarm Conditions on M7i and M10i Routers *(Continued)*

Chassis Component	Alarm Condition	Remedy	Alarm Severity
Temperature	The chassis temperature has exceeded 55 degrees C (131 degrees F), the fans have been turned on to full speed, and one or more fans have failed.	• Check room temperature. • Check air filter and replace it. • Check airflow. • Check fan.	Yellow
	The chassis temperature has exceeded 65 degrees C (149 degrees F), and the fans have been turned on to full speed.	• Check room temperature. • Check air filter and replace it. • Check airflow. • Check fan.	Yellow
	The chassis temperature has exceeded 65 degrees C (149 degrees F), and a fan has failed. If this condition persists for more than 4 minutes, the router shuts down.	• Check room temperature. • Check air filter and replace it. • Check airflow. • Check fan.	Red
	The chassis temperature has exceeded 75 degrees C (167 degrees F). If this condition persists for more than 4 minutes, the router shuts down.	• Check room temperature. • Check air filter and replace it. • Check airflow. • Check fan.	Red

Table 15: Chassis Component Alarm Conditions on M7i and M10i Routers *(Continued)*

Chassis Component	Alarm Condition	Remedy	Alarm Severity
	The temperature sensor has failed.	Open a support case using the Case Manager link at https://www.juniper.net/support/ or call 1-888-314-JTAC (within the United States) or 1-408-745-9500 (from outside the United States).	Red

Chassis Component Alarm Conditions on M20 Routers

Table 16 on page 124 lists the alarms that the chassis components can generate on M20 routers.

Table 16: Chassis Component Alarm Conditions on M20 Routers

Chassis Component	Alarm Condition	Remedy	Alarm Severity
Alternative media	The router boots from an alternate boot device, the hard disk. The CompactFlash card is typically the primary boot device. The Routing Engine boots from the hard disk when the primary boot device fails.	Open a support case using the Case Manager link at https://www.juniper.net/support/ or call 1-888-314-JTAC (within the United States) or 1-408-745-9500 (from outside the United States).	Yellow
Craft interface	The craft interface has failed.	Replace failed craft interface.	Red
Fan trays	One fan tray has been removed from the chassis.	Install missing fan tray.	Yellow
	Two or more fan trays have been removed from the chassis.	Install missing fan trays.	Red

Table 16: Chassis Component Alarm Conditions on M20 Routers *(Continued)*

Chassis Component	Alarm Condition	Remedy	Alarm Severity
	One fan in the chassis is not spinning or is spinning below requires speed.	Replace fan tray.	Red
FPC	An FPC has failed. If this occurs, the FPC attempts to reboot. If the System and Switch Board (SSB) sees that an FPC is rebooting too often, it shuts down the FPC.	Replace failed FPC.	Red
Hot swapping	Too many hot-swap interrupts are occurring. This message generally indicates that a hardware component that plugs in to the router's backplane from the front (generally, an FPC) is broken.	Replace failed component.	Red
Routing Engine	Excessive framing errors on console port. An excessive framing error alarm is triggered when the default framing error threshold of 20 errors per second on a serial port is exceeded. This might be caused by a faulty serial console port cable connected to the device.	Replace the serial cable connected to the device. If the cable is replaced and no excessive framing errors are detected within 5 minutes from the last detected framing error, the alarm is cleared automatically.	Yellow
	Error in reading or writing hard disk.	Reformat hard disk and install bootable image. If this fails, replace failed Routing Engine.	Yellow
	Error in reading or writing CompactFlash card.	Reformat CompactFlash card and install bootable image. If this fails, replace failed Routing Engine.	Yellow

Table 16: Chassis Component Alarm Conditions on M20 Routers *(Continued)*

Chassis Component	Alarm Condition	Remedy	Alarm Severity
	System booted from default backup Routing Engine. If you manually switched mastership, ignore this alarm condition.	Install bootable image on default primary Routing Engine. If this fails, replace failed Routing Engine.	Yellow
	System booted from hard disk.	Install bootable image on CompactFlash card. If this fails, replace failed Routing Engine.	Yellow
	CompactFlash card missing in boot list.	Replace failed Routing Engine.	Red
	Hard disk missing in boot list.	Replace failed Routing Engine.	Red
	The Ethernet management interface (`fxp0` or `em0`) on the Routing Engine is down.	• Check the interface cable connection. • Reboot the system. • If the alarm recurs, open a support case using the Case Manager link at https://www.juniper.net/support/ or call 1-888-314-JTAC (within the United States) or 1-408-745-9500 (from outside the United States)	Red
	Routing Engine failed to boot.	Replace failed Routing Engine.	Red
Power supplies	A power supply has been removed from the chassis.	Insert power supply into empty slot.	Yellow
	A power supply has failed.	Replace failed power supply.	Red

Table 16: Chassis Component Alarm Conditions on M20 Routers *(Continued)*

Chassis Component	Alarm Condition	Remedy	Alarm Severity
SSB	The control board has failed. If this occurs, the board attempts to reboot.	Replace failed control board.	Red
Temperature	The chassis temperature has exceeded 55 degrees C (131 degrees F), the fans have been turned on to full speed, and one or more fans have failed.	• Check room temperature. • Check air filter and replace it. • Check airflow. • Check fan.	Yellow
	The chassis temperature has exceeded 65 degrees C (149 degrees F), and the fans have been turned on to full speed.	• Check room temperature. • Check air filter and replace it. • Check airflow. • Check fan.	Yellow
	The chassis temperature has exceeded 65 degrees C (149 degrees F), and a fan has failed. If this condition persists for more than 4 minutes, the router shuts down.	• Check room temperature. • Check air filter and replace it. • Check airflow. • Check fan.	Red
	The chassis temperature has exceeded 75 degrees C (167 degrees F). If this condition persists for more than 4 minutes, the router shuts down.	• Check room temperature. • Check air filter and replace it. • Check airflow. • Check fan.	Red

Table 16: Chassis Component Alarm Conditions on M20 Routers *(Continued)*

Chassis Component	Alarm Condition	Remedy	Alarm Severity
	The temperature sensor has failed.	Open a support case using the Case Manager link at https://www.juniper.net/support/ or call 1-888-314-JTAC (within the United States) or 1-408-745-9500 (from outside the United States).	Red

Chassis Component Alarm Conditions on M40 Routers

Table 17 on page 128 lists the alarms that the chassis components can generate on M40 routers.

Table 17: Chassis Component Alarm Conditions on M40 Routers

Chassis Component	Alarm Condition	Remedy	Alarm Severity
Air filter	Change air filter.	Change air filter.	Yellow
Alternative media	The router boots from an alternate boot device, the hard disk. The CompactFlash card is typically the primary boot device. The Routing Engine boots from the hard disk when the primary boot device fails.	Open a support case using the Case Manager link at https://www.juniper.net/support/ or call 1-888-314-JTAC (within the United States) or 1-408-745-9500 (from outside the United States).	Yellow
Craft interface	The craft interface has failed.	Replace failed craft interface.	Red
Fan trays	One fan tray has been removed from the chassis.	Install missing fan tray.	Yellow
	Two or more fan trays have been removed from the chassis.	Install missing fan trays.	Red

Table 17: Chassis Component Alarm Conditions on M40 Routers *(Continued)*

Chassis Component	Alarm Condition	Remedy	Alarm Severity
	One fan in the chassis is not spinning or is spinning below required speed.	Replace fan tray.	Red
FPC	An FPC has an out of range or invalid temperature reading.	Replace failed FPC.	Yellow
	An FPC microcode download has failed.	Replace failed FPC.	Red
	An FPC has failed. If this occurs, the FPC attempts to reboot. If the SCB sees that an FPC is rebooting too often, it shuts down the FPC.	Replace failed FPC.	Red
	Too many hard errors in FPC memory.	Replace failed FPC.	Red
	Too many soft errors in FPC memory.	Replace failed FPC.	Red
Hot swapping	Too many hot-swap interrupts are occurring. This message generally indicates that a hardware component that plugs into the router's backplane from the front (generally, an FPC) is broken.	Replace failed component.	Red
Power supplies	A power supply has been removed from the chassis.	Insert power supply into empty slot.	Yellow
	A power supply temperature sensor has failed.	Replace failed power supply or power entry module.	Yellow

Table 17: Chassis Component Alarm Conditions on M40 Routers *(Continued)*

Chassis Component	Alarm Condition	Remedy	Alarm Severity
	A power supply fan has failed.	Replace failed power supply fan.	Yellow
	A power supply has high temperature.	Replace failed power supply or power entry module.	Red
	A 5-V power supply has failed.	Replace failed power supply or power entry module.	Red
	A 3.3-V power supply has failed.	Replace failed power supply or power entry module.	Red
	A 2.5-V power supply has failed.	Replace failed power supply or power entry module.	Red
	A power supply input has failed.	Check power supply input connection.	Red
	A power supply has failed.	Replace failed power supply or power entry module.	Red
Routing Engine	Excessive framing errors on console port. An excessive framing error alarm is triggered when the default framing error threshold of 20 errors per second on a serial port is exceeded. This might be caused by a faulty serial console port cable connected to the device.	Replace the serial cable connected to the device. If the cable is replaced and no excessive framing errors are detected within 5 minutes from the last detected framing error, the alarm is cleared automatically.	Yellow

Table 17: Chassis Component Alarm Conditions on M40 Routers *(Continued)*

Chassis Component	Alarm Condition	Remedy	Alarm Severity
	Error in reading or writing hard disk.	Reformat hard disk and install bootable image. If this fails, replace failed Routing Engine.	Yellow
	Error in reading or writing CompactFlash card.	Reformat CompactFlash card and install bootable image. If this fails, replace failed Routing Engine.	Yellow
	System booted from default backup Routing Engine. If you manually switched mastership, ignore this alarm condition.	Install bootable image on default primary Routing Engine. If this fails, replace failed Routing Engine.	Yellow
	System booted from hard disk.	Install bootable image on CompactFlash card. If this fails, replace failed Routing Engine.	Yellow
	CompactFlash card missing in boot list.	Replace failed Routing Engine.	Red
	Hard disk missing in boot list.	Replace failed Routing Engine.	Red
	Routing Engine failed to boot.	Replace failed Routing Engine.	Red

Table 17: Chassis Component Alarm Conditions on M40 Routers *(Continued)*

Chassis Component	Alarm Condition	Remedy	Alarm Severity
	The Ethernet management interface (`fxp0` or `em0`) on the Routing Engine is down.	• Check the interface cable connection. • Reboot the system. • If the alarm recurs, open a support case using the Case Manager link at https://www.juniper.net/support/ or call 1-888-314-JTAC (within the United States) or 1-408-745-9500 (from outside the United States)	Red
SCB	The System Control Board (SCB) has failed. If this occurs, the board attempts to reboot.	Replace failed SCB.	Red
Temperature	The chassis temperature has exceeded 55 degrees C (131 degrees F), the fans have been turned on to full speed, and one or more fans have failed.	• Check room temperature. • Check air filter and replace it. • Check airflow. • Check fan.	Yellow
	The chassis temperature has exceeded 65 degrees C (149 degrees F), and the fans have been turned on to full speed.	• Check room temperature. • Check air filter and replace it. • Check airflow. • Check fan.	Yellow

Table 17: Chassis Component Alarm Conditions on M40 Routers *(Continued)*

Chassis Component	Alarm Condition	Remedy	Alarm Severity
	The chassis temperature has exceeded 65 degrees C (149 degrees F), and a fan has failed. If this condition persists for more than 4 minutes, the router shuts down.	• Check room temperature. • Check air filter and replace it. • Check airflow. • Check fan.	Red
	The chassis temperature has exceeded 75 degrees C (167 degrees F). If this condition persists for more than 4 minutes, the router shuts down.	• Check room temperature. • Check air filter and replace it. • Check airflow. • Check fan.	Red
	The temperature sensor has failed.	Open a support case using the Case Manager link at https://www.juniper.net/support/ or call 1-888-314-JTAC (within the United States) or 1-408-745-9500 (from outside the United States).	Red

Chassis Component Alarm Conditions on M40e and M160 Routers

Table 18 on page 133 lists the alarms that the chassis components can generate on M40e and M160 routers.

Table 18: Chassis Component Alarm Conditions on M40e and M160 Routers

Chassis Component	Alarm Condition	Remedy	Alarm Severity
Air filter	Change air filter.	Change air filter.	Yellow

Table 18: Chassis Component Alarm Conditions on M40e and M160 Routers *(Continued)*

Chassis Component	Alarm Condition	Remedy	Alarm Severity
Alternative media	The router boots from an alternate boot device, the hard disk. The CompactFlash card is typically the primary boot device. The Routing Engine boots from the hard disk when the primary boot device fails.	Open a support case using the Case Manager link at https://www.juniper.net/support/ or call 1-888-314-JTAC (within the United States) or 1-408-745-9500 (from outside the United States).	Yellow
Connector Interface Panel (CIP)	A CIP is missing.	Insert CIP into empty slot.	Red
Craft interface	The craft interface has failed.	Replace failed craft interface.	Red
Fan trays	One fan tray has been removed from the chassis.	Install missing fan tray.	Yellow
	Two or more fan trays have been removed from the chassis.	Install missing fan trays.	Red
	One fan in the chassis is not spinning or spinning below required speed.	Replace fan tray.	Red
FPC	An FPC has an out of range or invalid temperature reading.	Replace failed FPC.	Yellow
	An FPC microcode download has failed.	Replace failed FPC.	Red
	An FPC has failed. If this occurs, the FPC attempts to reboot. If the MCS sees that an FPC is rebooting too often, it shuts down the FPC.	Replace failed FPC.	Red

Table 18: Chassis Component Alarm Conditions on M40e and M160 Routers *(Continued)*

Chassis Component	Alarm Condition	Remedy	Alarm Severity
	Too many hard errors in FPC memory.	Replace failed FPC.	Red
	Too many soft errors in FPC memory.	Replace failed FPC.	Red
Hot swapping	Too many hot-swap interrupts are occurring. This message generally indicates that a hardware component that plugs into the router's backplane from the front (generally, an FPC) is broken.	Replace failed component.	Red
Miscellaneous Control Subsystem (MCS)	An MCS has an out of range or invalid temperature reading.	Replace failed MCS.	Yellow
	MCS0 has been removed.	Reinstall MCS0.	Yellow
	An MCS has failed.	Replace failed MCS.	Red
Packet Forwarding Engine Clock Generator (PCG)	A backup PCG is offline.	Set backup PCG online.	Yellow
	A PCG has an out of range or invalid temperature reading.	Replace failed PCG.	Yellow
	A PCG has been removed.	Insert PCG into empty slot.	Yellow
	A PCG has failed to come online.	Replace failed PCG.	Red

Table 18: Chassis Component Alarm Conditions on M40e and M160 Routers *(Continued)*

Chassis Component	Alarm Condition	Remedy	Alarm Severity
Routing Engine	Excessive framing errors on console port. An excessive framing error alarm is triggered when the default framing error threshold of 20 errors per second on a serial port is exceeded. This might be caused by a faulty serial console port cable connected to the device.	Replace the serial cable connected to the device. If the cable is replaced and no excessive framing errors are detected within 5 minutes from the last detected framing error, the alarm is cleared automatically.	Yellow
	Error in reading or writing hard disk.	Reformat hard disk and install bootable image. If this fails, replace failed Routing Engine.	Yellow
	Error in reading or writing CompactFlash card.	Reformat CompactFlash card and install bootable image. If this fails, replace failed Routing Engine.	Yellow
	System booted from default backup Routing Engine. If you manually switched mastership, ignore this alarm condition.	Install bootable image on default primary Routing Engine. If this fails, replace failed Routing Engine.	Yellow
	System booted from hard disk.	Install bootable image on CompactFlash card. If this fails, replace failed Routing Engine.	Yellow
	CompactFlash card missing in boot list.	Replace failed Routing Engine.	Red
	Hard disk missing in boot list.	Replace failed Routing Engine.	Red
	Routing Engine failed to boot.	Replace failed Routing Engine.	Red

Table 18: Chassis Component Alarm Conditions on M40e and M160 Routers *(Continued)*

Chassis Component	Alarm Condition	Remedy	Alarm Severity
	The Ethernet management interface (`fxp0` or `em0`) on the Routing Engine is down.	• Check the interface cable connection. • Reboot the system. • If the alarm recurs, open a support case using the Case Manager link at https://www.juniper.net/support/ or call 1-888-314-JTAC (within the United States) or 1-408-745-9500 (from outside the United States)	Red
Power supplies	A power supply has been removed from the chassis.	Insert power supply into empty slot.	Yellow
	A power supply has failed.	Replace failed power supply.	Red
Switching and Forwarding Module (SFM)	An SFM has an out of range or invalid temperature reading on SPP.	Replace failed SFM.	Yellow
	An SFM has an out of range or invalid temperature reading on SPR.	Replace failed SFM.	Yellow
	An SFM is offline.	Set SFM online.	Yellow
	An SFM has failed.	Replace failed SFM.	Red
	An SFM has been removed from the chassis.	Insert SFM into empty slot.	Red

Table 18: Chassis Component Alarm Conditions on M40e and M160 Routers *(Continued)*

Chassis Component	Alarm Condition	Remedy	Alarm Severity
	All SFMs are offline or missing from the chassis.	Insert SFMs into empty slots or set all SFMs online.	Red
Temperature	The chassis temperature has exceeded 55 degrees C (131 degrees F), the fans have been turned on to full speed, and one or more fans have failed.	• Check room temperature. • Check air filter and replace it. • Check airflow. • Check fan.	Yellow
	The chassis temperature has exceeded 65 degrees C (149 degrees F), and the fans have been turned on to full speed.	• Check room temperature. • Check air filter and replace it. • Check airflow. • Check fan.	Yellow
	The chassis temperature has exceeded 65 degrees C (149 degrees F), and a fan has failed. If this condition persists for more than 4 minutes, the router shuts down.	• Check room temperature. • Check air filter and replace it. • Check airflow. • Check fan.	Red
	The chassis temperature has exceeded 75 degrees C (167 degrees F). If this condition persists for more than 4 minutes, the router shuts down.	• Check room temperature. • Check air filter and replace it. • Check airflow. • Check fan.	Red

Table 18: Chassis Component Alarm Conditions on M40e and M160 Routers *(Continued)*

Chassis Component	Alarm Condition	Remedy	Alarm Severity
	The temperature sensor has failed.	Open a support case using the Case Manager link at https://www.juniper.net/support/ or call 1-888-314-JTAC (within the United States) or 1-408-745-9500 (from outside the United States).	Red

Chassis Component Alarm Conditions on M120 and M320 Routers

Table 19 on page 139 lists the alarms that the chassis components can generate on M120 routers.

Table 19: Chassis Component Alarm Conditions on M120 and M320 Routers

Chassis Component	Alarm Condition	Remedy	Alarm Severity
Air filters	Change air filter.	Change air filter.	Yellow
Alternative media	The router boots from an alternate boot device, the hard disk. The CompactFlash card is typically the primary boot device. The Routing Engine boots from the hard disk when the primary boot device fails.	Open a support case using the Case Manager link at https://www.juniper.net/support/ or call 1-888-314-JTAC (within the United States) or 1-408-745-9500 (from outside the United States).	Yellow
Control Board (CB)	A CB Ethernet switch has failed.	Replace failed CB.	Yellow

Table 19: Chassis Component Alarm Conditions on M120 and M320 Routers *(Continued)*

Chassis Component	Alarm Condition	Remedy	Alarm Severity
	A CB has been removed.	Insert CB into empty slot.	Red
	A CB has failed.	Replace failed CB.	Red
Craft interface	The craft interface has failed.	Replace failed craft interface.	Red
Fan trays	One fan tray has been removed from the chassis.	Install missing fan tray.	Yellow
	Two or more fan trays have been removed from the chassis.	Install missing fan trays.	Red
	One fan in the chassis is not spinning or is spinning below required speed.	Replace fan tray.	Red
Forwarding Engine Boards (FEBs)	A spare FEB has failed.	Replace failed FEB.	Yellow
	A spare FEB has been removed.	Insert FEB into empty slot.	Yellow
	A FEB is offline.	Check FEB. Remove and reinsert the FEB. If this fails, replace failed FEB.	Yellow
	A FEB has failed.	Replace failed FEB.	Red
	A FEB has been removed.	Insert FEB into empty slot.	Red

Table 19: Chassis Component Alarm Conditions on M120 and M320 Routers *(Continued)*

Chassis Component	Alarm Condition	Remedy	Alarm Severity
Host subsystem	A host subsystem has failed.	Replace the host subsystem.	Yellow
	A host subsystem has been removed.	Insert host subsystem into empty slot.	Red
Hot swapping	Too many hot-swap interrupts are occurring. This message generally indicates that a hardware component that plugs into the router's backplane from the front (generally, an FPC) is broken.	Replace failed component.	Red
Power supplies	A power supply has been removed from the chassis.	Insert power supply into empty slot.	Yellow
	A power supply has a high temperature.	Replace failed power supply or power entry module.	Red
	A power supply input has failed.	Check power supply input connection.	Red
	A power supply output has failed.	Check power supply output connection.	Red
	A power supply has failed.	Replace failed power supply.	Red

Table 19: Chassis Component Alarm Conditions on M120 and M320 Routers *(Continued)*

Chassis Component	Alarm Condition	Remedy	Alarm Severity
Routing Engine	Excessive framing errors on console port. An excessive framing error alarm is triggered when the default framing error threshold of 20 errors per second on a serial port is exceeded. This might be caused by a faulty serial console port cable connected to the device.	Replace the serial cable connected to the device. If the cable is replaced and no excessive framing errors are detected within 5 minutes from the last detected framing error, the alarm is cleared automatically.	Yellow
	Error in reading or writing hard disk.	Reformat hard disk and install bootable image. If this fails, replace failed Routing Engine.	
	Error in reading or writing CompactFlash card.	Reformat CompactFlash card and install bootable image. If this fails, replace failed Routing Engine.	Yellow
	System booted from default backup Routing Engine. If you manually switched mastership, ignore this alarm condition.	Install bootable image on default primary Routing Engine. If this fails, replace failed Routing Engine.	Yellow

Table 19: Chassis Component Alarm Conditions on M120 and M320 Routers *(Continued)*

Chassis Component	Alarm Condition	Remedy	Alarm Severity
	System booted from hard disk.	Install bootable image on CompactFlash card. If this fails, replace failed Routing Engine.	Yellow
	CompactFlash card missing in boot list.	Replace failed Routing Engine.	Red
	Hard disk missing in boot list.	Replace failed Routing Engine.	Red
	Routing Engine failed to boot.	Replace failed Routing Engine.	Red
	The Ethernet management interface (`fxp0` or `em0`) on the Routing Engine is down.	• Check the interface cable connection. • Reboot the system. • If the alarm recurs, open a support case using the Case Manager link at https://www.juniper.net/support/ or call 1-888-314-JTAC (within the United States) or 1-408-745-9500 (from outside the United States)	Red

Table 19: Chassis Component Alarm Conditions on M120 and M320 Routers *(Continued)*

Chassis Component	Alarm Condition	Remedy	Alarm Severity
Temperature	The chassis temperature has exceeded 55 degrees C (131 degrees F), the fans have been turned on to full speed, and one or more fans have failed.	• Check room temperature. • Check air filter and replace it. • Check airflow. • Check fan.	Yellow
	The chassis temperature has exceeded 65 degrees C (149 degrees F), and the fans have been turned on to full speed.	• Check room temperature. • Check air filter and replace it. • Check airflow. • Check fan.	Yellow
	The chassis temperature has exceeded 65 degrees C (149 degrees F), and a fan has failed. If this condition persists for more than 4 minutes, the router shuts down.	• Check room temperature. • Check air filter and replace it. • Check airflow. • Check fan.	Red
	Chassis temperature has exceeded 75 degrees C (167 degrees F). If this condition persists for more than 4 minutes, the router shuts down.	• Check room temperature. • Check air filter and replace it. • Check airflow. • Check fan.	Red

Table 19: Chassis Component Alarm Conditions on M120 and M320 Routers *(Continued)*

Chassis Component	Alarm Condition	Remedy	Alarm Severity
	The temperature sensor has failed.	Open a support case using the Case Manager link at https://www.juniper.net/support/ or call 1-888-314-JTAC (within the United States) or 1-408-745-9500 (from outside the United States).	Red

Chassis Component Alarm Conditions on M320 Routers

Table 20 on page 145 lists the alarms that the chassis components can generate on M320 routers.

Table 20: Chassis Component Alarm Conditions on M320 Routers

Chassis Component	Alarm Condition	Remedy	Alarm Severity
Air filters	Change air filter.	Change air filter.	Yellow
Alternative media	The router boots from an alternate boot device, the hard disk. The CompactFlash card is typically the primary boot device. The Routing Engine boots from the hard disk when the primary boot device fails.	Open a support case using the Case Manager link at https://www.juniper.net/support/ or call 1-888-314-JTAC (within the United States) or 1-408-745-9500 (from outside the United States).	Yellow
Control Board (CB)	A CB has been removed.	Insert CB into empty slot.	Yellow

Table 20: Chassis Component Alarm Conditions on M320 Routers *(Continued)*

Chassis Component	Alarm Condition	Remedy	Alarm Severity
	A CB temperature sensor alarm has failed.	Replace failed CB.	Yellow
	A CB has failed.	Replace failed CB.	Red
CIP	A CIP is missing.	Insert CIP into empty slot.	Red
Craft interface	The craft interface has failed.	Replace failed craft interface.	Red
Fan trays	One fan tray has been removed from the chassis.	Install missing fan tray.	Yellow
	Two or more fan trays have been removed from the chassis.	Install missing fan trays.	Red
	One fan in the chassis is not spinning or is spinning below required speed.	Replace fan tray.	Red
FPC	An FPC has an out of range or invalid temperature reading.	Replace failed FPC.	Yellow
	An FPC microcode download has failed.	Replace failed FPC.	Red
	An FPC has failed. If this occurs, the FPC attempts to reboot. If the CB sees that an FPC is rebooting too often, it shuts down the FPC.	Replace failed FPC.	Red
	Too many hard errors in FPC memory.	Replace failed FPC.	Red

Table 20: Chassis Component Alarm Conditions on M320 Routers *(Continued)*

Chassis Component	Alarm Condition	Remedy	Alarm Severity
	Too many soft errors in FPC memory.	Replace failed FPC.	Red
Hot swapping	Too many hot-swap interrupts are occurring. This message generally indicates that a hardware component that plugs into the router's backplane from the front (generally, an FPC) is broken.	Replace failed component.	Red
Power supplies	A power supply has been removed from the chassis.	Insert power supply into empty slot.	Yellow
	A power supply has failed.	Replace failed power supply.	Red
Routing Engine	Excessive framing errors on console port. An excessive framing error alarm is triggered when the default framing error threshold of 20 errors per second on a serial port is exceeded. This might be caused by a faulty serial console port cable connected to the device.	Replace the serial cable connected to the device. If the cable is replaced and no excessive framing errors are detected within 5 minutes from the last detected framing error, the alarm is cleared automatically.	Yellow
	Error in reading or writing hard disk.	Reformat hard disk and install bootable image. If this fails, replace failed Routing Engine.	Yellow
	Error in reading or writing CompactFlash card.	Reformat CompactFlash card and install bootable image. If this fails, replace failed Routing Engine.	Yellow

Table 20: Chassis Component Alarm Conditions on M320 Routers *(Continued)*

Chassis Component	Alarm Condition	Remedy	Alarm Severity
	System booted from default backup Routing Engine. If you manually switched mastership, ignore this alarm condition.	Install bootable image on default primary Routing Engine. If this fails, replace failed Routing Engine.	Yellow
	System booted from hard disk.	Install bootable image on CompactFlash card. If this fails, replace failed Routing Engine.	Yellow
	CompactFlash card missing in boot list.	Replace failed Routing Engine.	Red
	Hard disk missing in boot list.	Replace failed Routing Engine.	Red
	Routing Engine failed to boot.	Replace failed Routing Engine.	Red
	A spare SIB is missing.	Insert spare SIB in to empty slot.	Yellow
	The Ethernet management interface (`fxp0` or `em0`) on the Routing Engine is down.	• Check the interface cable connection. • Reboot the system. • If the alarm recurs, open a support case using the Case Manager link at https://www.juniper.net/support/ or call 1-888-314-JTAC (within the United States) or 1-408-745-9500 (from outside the United States)	Red
Switch Interface Board (SIB)	A SIB has failed.	Replace failed SIB.	Yellow

Table 20: Chassis Component Alarm Conditions on M320 Routers *(Continued)*

Chassis Component	Alarm Condition	Remedy	Alarm Severity
	A spare SIB has failed.	Replace failed SIB.	Yellow
	A SIB has an out of range or invalid temperature reading.	Replace failed SIB.	Yellow
	A SIB is missing.	Insert SIB into empty slot.	Red
	A SIB has failed.	Replace failed SIB.	Red
	The chassis temperature has exceeded 55 degrees C (131 degrees F), the fans have been turned on to full speed, and one or more fans have failed.	• Check room temperature. • Check air filter and replace it. • Check airflow. • Check fan.	Yellow
Temperature	The chassis temperature has exceeded 65 degrees C (149 degrees F), and the fans have been turned on to full speed.	• Check room temperature. • Check air filter and replace it. • Check airflow. • Check fan.	Yellow
	The chassis temperature has exceeded 65 degrees C (149 degrees F), and a fan has failed. If this condition persists for more than 4 minutes, the router shuts down.	• Check room temperature. • Check air filter and replace it. • Check airflow. • Check fan.	Red

Table 20: Chassis Component Alarm Conditions on M320 Routers *(Continued)*

Chassis Component	Alarm Condition	Remedy	Alarm Severity
	Chassis temperature has exceeded 75 degrees C (167 degrees F). If this condition persists for more than 4 minutes, the router shuts down.	• Check room temperature. • Check air filter and replace it. • Check airflow. • Check fan.	Red
	The temperature sensor has failed.	Open a support case using the Case Manager link at https://www.juniper.net/support/ or call 1-888-314-JTAC (within the United States) or 1-408-745-9500 (from outside the United States).	Red

Chassis Component Alarm Conditions on MX Series 5G Universal Routing Platforms

Table 21 on page 150 lists the alarms that the chassis components can generate on MX Series 5G Universal Routing Platforms.

Table 21: Chassis Component Alarm Conditions on MX Series 5G Universal Routing Platforms

Chassis Component	Alarm Condition	Remedy	Alarm Severity
Air filters	Change air filter.	Change air filter.	Yellow

Table 21: Chassis Component Alarm Conditions on MX Series 5G Universal Routing Platforms *(Continued)*

Chassis Component	Alarm Condition	Remedy	Alarm Severity
Alternative media	The router boots from an alternate boot device, the hard disk. The CompactFlash card is typically the primary boot device. The Routing Engine boots from the hard disk when the primary boot device fails.	Open a support case using the Case Manager link at https://www.juniper.net/support/ or call 1-888-314-JTAC (within the United States) or 1-408-745-9500 (from outside the United States).	Yellow
Craft interface	The craft interface has failed.	Replace failed craft interface.	Red
Dense Port Concentrators (DPC)s	A DPC is offline.	Check DPC. Remove and reinsert the DPC. If this fails, replace failed DPC.	Yellow
	A DPC has failed.	Replace failed DPC.	Red
	A DPC has been removed.	Insert DPC into empty slot.	Red
Fan trays	A fan tray has been removed from the chassis.	Install missing fan tray.	Red
	One fan in the chassis is not spinning or is spinning below required speed.	Replace fan tray.	Red
	A higher-cooling capacity fan tray is required when an MPC is installed on the chassis.	Upgrade to a high-capacity fan tray.	Yellow
Host subsystem	A host subsystem has been removed.	Insert host subsystem into empty slot.	Yellow
	A host subsystem has failed.	Replace failed host subsystem.	Red

Table 21: Chassis Component Alarm Conditions on MX Series 5G Universal Routing Platforms *(Continued)*

Chassis Component	Alarm Condition	Remedy	Alarm Severity
Hot swapping	Too many hot-swap interrupts are occurring. This message generally indicates that a hardware component that plugs into the router's backplane from the front (generally, an FPC) is broken.	Replace failed component.	Red
Power supplies	A power supply has been removed from the chassis.	Insert power supply into empty slot.	Yellow
	A power supply has a high temperature.	Replace failed power supply or power entry module.	Red
	A power supply input has failed.	Check power supply input connection.	Red
	A power supply output has failed.	Check power supply output connection.	Red
	A power supply has failed.	Replace failed power supply.	Red
	Invalid AC power supply configuration.	When two AC power supplies are installed, insert one power supply into an odd-numbered slot and the other power supply into an even-numbered slot.	Red
	Invalid DC power supply configuration.	When two DC power supplies are installed, insert one power supply into an odd-numbered slot and the other power supply into an even-numbered slot.	Red

Table 21: Chassis Component Alarm Conditions on MX Series 5G Universal Routing Platforms *(Continued)*

Chassis Component	Alarm Condition	Remedy	Alarm Severity
	Mix of AC and DC power supplies.	Do not mix AC and DC power supplies. For DC power, remove the AC power supply. For AC power, remove the DC power supply.	Red
	Not enough power supplies.	Install an additional power supply.	Red
Routing Engine	Excessive framing errors on console port. An excessive framing error alarm is triggered when the default framing error threshold of 20 errors per second on a serial port is exceeded. This might be caused by a faulty serial console port cable connected to the device.	Replace the serial cable connected to the device. If the cable is replaced and no excessive framing errors are detected within 5 minutes from the last detected framing error, the alarm is cleared automatically.	Yellow
	Error in reading or writing hard disk.	Reformat hard disk and install bootable image. If this fails, replace failed Routing Engine.	Yellow
	Error in reading or writing CompactFlash card.	Reformat CompactFlash card and install bootable image. If this fails, replace failed Routing Engine.	Yellow
	System booted from default backup Routing Engine. If you manually switched mastership, ignore this alarm condition.	Install bootable image on default primary Routing Engine. If this fails, replace failed Routing Engine.	Yellow

Table 21: Chassis Component Alarm Conditions on MX Series 5G Universal Routing Platforms *(Continued)*

Chassis Component	Alarm Condition	Remedy	Alarm Severity
	System booted from hard disk.	Install bootable image on CompactFlash card. If this fails, replace failed Routing Engine.	Yellow
	CompactFlash card missing in boot list.	Replace failed Routing Engine.	Red
	Hard disk missing in boot list.	Replace failed Routing Engine.	Red
	Routing Engine failed to boot.	Replace failed Routing Engine.	Red
	The Ethernet management interface (`fxp0` or `em0`) on the Routing Engine is down.	• Check the interface cable connection. • Reboot the system. • If the alarm recurs, open a support case using the Case Manager link at https://www.juniper.net/support/ or call 1-888-314-JTAC (within the United States) or 1-408-745-9500 (from outside the United States)	Red
System Control Board (SCB)	An SCB has been removed.	Insert SCB into empty slot.	Yellow
	An SCB temperature sensor alarm has failed.	Replace failed SCB.	Yellow
	An SCB has failed.	Replace failed SCB.	Red

Table 21: Chassis Component Alarm Conditions on MX Series 5G Universal Routing Platforms *(Continued)*

Chassis Component	Alarm Condition	Remedy	Alarm Severity
Temperature	The chassis temperature has exceeded 55 degrees C (131 degrees F), the fans have been turned on to full speed, and one or more fans have failed.	• Check room temperature. • Check air filter and replace it. • Check airflow. • Check fan.	Yellow
	The chassis temperature has exceeded 65 degrees C (149 degrees F), and the fans have been turned on to full speed.	• Check room temperature. • Check air filter and replace it. • Check airflow. • Check fan.	Yellow
	The chassis temperature has exceeded 65 degrees C (149 degrees F), and a fan has failed. If this condition persists for more than 4 minutes, the router shuts down.	• Check room temperature. • Check air filter and replace it. • Check airflow. • Check fan.	Red
	Chassis temperature has exceeded 75 degrees C (167 degrees F). If this condition persists for more than 4 minutes, the router shuts down.	• Check room temperature. • Check air filter and replace it. • Check airflow. • Check fan.	Red

Table 21: Chassis Component Alarm Conditions on MX Series 5G Universal Routing Platforms *(Continued)*

Chassis Component	Alarm Condition	Remedy	Alarm Severity
	The temperature sensor has failed.	Open a support case using the Case Manager link at https://www.juniper.net/support/ or call 1-888-314-JTAC (within the United States) or 1-408-745-9500 (from outside the United States).	Red
Flexible PIC Concentrator (FPC)	FPC <slot number> Major Errors On MX Series routers with MPC1 and MPC2 line cards, a major chassis alarm is raised when the following transient hardware errors occur • CPQ Sram parity error • CPQ RLDRAM double bit ECC error By default, these errors result in the Packet Forwarding Engine interfaces on the FPC being disabled. You can use the `show chassis fpc errors` command to view the default or user-configured action that resulted from the error. You can check the syslog messages to know more about the errors.	To resolve the error, restart the line card. If the error is still not resolved, open a support case using the Case Manager link at https://www.juniper.net/support/ or call 1-888-314-JTAC (within the United States) or 1-408-745-9500 (from outside the United States).	Red

Backup Routing Engine Alarms

For routers with primary and backup Routing Engines, a primary Routing Engine can generate alarms for events that occur on a backup Routing Engine. Table 22 on page 157 lists chassis alarms generated for a backup Routing Engine.

NOTE: Because the failure occurs on the backup Routing Engine, alarm severity for some events (such as Ethernet interface failures) is yellow instead of red.

NOTE: For information about configuring redundant Routing Engines, see the Junos OS High Availability Library for Routing Devices.

Table 22: Backup Routing Engine Alarms

Chassis Component	Alarm Condition	Remedy	Alarm Severity
Alternative media	The backup Routing Engine boots from an alternate boot device, the hard disk. The CompactFlash card is typically the primary boot device. The Routing Engine boots from the hard disk when the primary boot device fails.	Open a support case using the Case Manager link at https://www.juniper.net/support/ or call 1-888-314-JTAC (within the United States) or 1-408-745-9500 (from outside the United States).	Yellow
Boot Device	The boot device (CompactFlash or hard disk) is missing in boot list on the backup Routing Engine.	Replace failed backup Routing Engine.	Red
Ethernet	The Ethernet management interface (`fxp0` or `em0`) on the backup Routing Engine is down.	• Check the interface cable connection. • Reboot the system. • If the alarm recurs, open a support case using the Case Manager link at https://www.juniper.net/support/ or call 1-888-314-JTAC (within the United States) or 1-408-745-9500 (from outside the United States)	Yellow

Table 22: Backup Routing Engine Alarms *(Continued)*

Chassis Component	Alarm Condition	Remedy	Alarm Severity
FRU Offline	The backup Routing Engine has stopped communicating with the master Routing Engine.	Open a support case using the Case Manager link at https://www.juniper.net/support/ or call 1-888-314-JTAC (within the United States) or 1-408-745-9500 (from outside the United States).	Yellow
Hard Disk	Error in reading or writing hard disk on the backup Routing Engine.	Reformat hard disk and install bootable image. If this fails, replace failed backup Routing Engine.	Yellow
Multibit Memory ECC	The backup Routing Engine reports a multibit ECC error.	• Reboot the system with the board reset button on the backup Routing Engine. • If the alarm recurs, open a support case using the Case Manager link at www.juniper.net/support/ or call 1-888-314-JTAC (within the United States) or 1-408-745-9500 (from outside the United States)	Yellow

Chassis Component Alarm Conditions for Guest Network Functions (GNFs)

Table 23 on page 159 lists the Chassis conditions that trigger alarms on guest network functions (GNFs).

Read more about GNFs in this Junos Node Slicing article.

Table 23: GNF Alarms

Chassis Component	Alarm Condition	Remedy	Alarm Severity
Routing Engine	Mixed Master and Backup RE types This alarm is raised when the GNF primary Routing Engine and GNF Backup Routing Engine have been assigned either mismatching frequencies (with difference above 100 MHz), mismatching numbers of cores, or DRAM.	Correct the differences and then relaunch the corrected GNF Routing Engine.	Yellow
Routing Engine	System Incompatibility with BSYS The alarm is shown when any incompatibilities between BSYS and GNF software versions cause the GNF to go offline.	Make the required changes to the BSYS or GNF software through upgrade.	Red
Routing Engine	Feature Incompatibility with BSYS Indicates a minor incompatibility between BSYS and GNF software versions. This could result in a: • A warning error for the GNF. • A FRU going offline. **NOTE**: Minor incompatibilities do not cause the GNF to go offline.	Make the required changes to the BSYS or GNF software through upgrade.	Yellow

Chassis Component Alarm Conditions on SRX1500, SRX4100, SRX4200 and SRX4600 devices

Table 24 on page 160 lists the alarms that the chassis components can generate on SRX1500, SRX4100, SRX4200 and SRX4600 devices. Execute `show chassis alarms` operational mode command on SRX1500, SRX4100, SRX4200 and SRX4600 devices to view the alarm.

Table 24: Chassis Component Alarm Conditions on SRX1500, SRX4100, SRX4200 and SRX4600 devices

Chassis Component	Alarm Condition	Remedy	Alarm Severity
Power supply unit (PSU)	Appears when one among the two PSU is not available or not energized for SRX1500, SRX4100, and SRX4200.	Install the missing PSU or refer "pem abscence" on page 342	Red
Power supply unit (PSU)	Appears when one among the two PSU is not available or not energized for SRX4600.	Install the missing PSU or refer "pem abscence" on page 342	Yellow

MX204 LED Scheme Overview

LEDs on the interface cards display the status of the ports. In MX204 router, there are four port LEDs per port. Each port provides an individual status LED with four states signaled by the color/LED state: OFF, GREEN, AMBER, RED.

The following port LED display modes are defined:

- Normal—Represents the normal working mode of the LED. By default, the port status display mode is Normal.
- Port location—The port location mode is ON when a remote operator initiates a port location command for a port or a group of ports.

The following factors trigger a change in the port LED color:

- Change in the port state. For example, loss of signal (LOS) to no LOS, remote fault, or local fault
- Pluggable insertion or removal
- Change in configuration
- Activation or deactivation of port location feature

Table 25 on page 161 summarizes the state and color rules for the port LEDs. These rules help in determining the port LED color. When port location mode is activated, the port LED state or color can be determined from the Port Location ON column.

NOTE: In MX204 router, there are four port LEDs per port. On PIC 0, if the port operates at the speed of 40-Gbps or 100-Gbps, then the first LED of PIC 1 will be ON and the other three LEDs will be OFF. And, if the port operates at the speed of 10-Gbps, then all the LEDs will be ON.

Table 25: Port LED State and Color Rules

Pluggable Inserted	Explicitly Disabled	Port State	Normal	Port Location ON
Yes	No	Up	Green	Blinking green
Yes	No	Down; loss of signal (LOS) detected	Off	Blinking green
Yes	No	Down; transceiver hardware failure	Red	Blinking red
Yes	No	Down; any other fault other than LOS and transceiver hardware failure	Amber	Blinking amber
ANY	Yes	Port disabled by CLI	Amber	Blinking amber
No	No	Anything except disabled port; however, transceiver not present	Off	Blinking green

MPC and MIC Lane LED Scheme Overview

LEDs on the interface cards display the status of the ports. On some MICs and MPC that have multiple ports and supports multiple port speed, it is not feasible to have an individual LED display for each port on an interface card. Hence, a shared LED display is introduced—the lane LEDs.

The MX10003 MPC includes this new LED lane display. The Multi-Rate 12xQFSP28 MIC and the fixed-port PIC (6xQFSPP) have separate lane LEDs.

The lane LEDs of the MIC are located on the MIC itself, whereas the lane LEDs of the PIC are located on the MPC.

The following interface cards support lane LEDs:

- MX10003 MPC (Multi-Rate)
- Line card (MX10K-LC2101)
- Multi-Rate Ethernet MIC

You can select a port operating in a breakout mode for an individual lane display, either periodically or when the `request chassis port-led` command is executed. Similar to the port status LEDs, the lane LED supports 4 states defined by the color or the LED status—OFF, GREEN, AMBER, and RED.

Figure 1 on page 162 illustrates the port LED and lane LED displays on the MPC.

Figure 1: Port LED and Lane LED display on the MPC

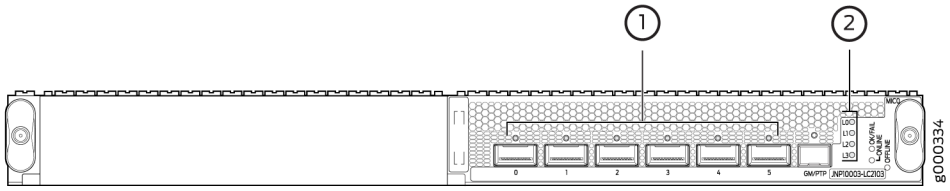

1– Port LEDs	2– Lane display LEDs

Figure 2 on page 162 illustrates the port LED and lane LED displays for the MPC.

Figure 2: Port LED and Lane LED display on the JNP10K-LC2101 MPC

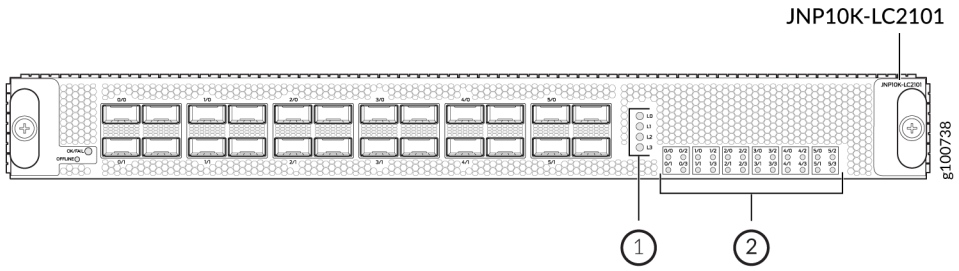

1– Lane display LEDs	2– Port LEDs

Figure 3 on page 163 illustrates the port LED and lane LED displays for the MIC.

Figure 3: Port LED and Lane LED display on the MIC

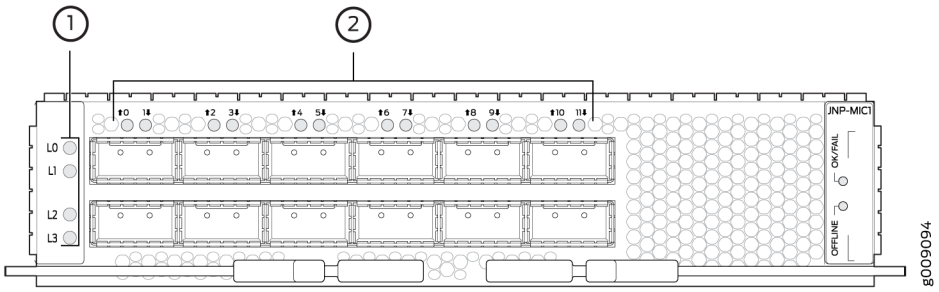

1– Lane display LEDs	2– Port LEDs

The following port LED display modes are defined:

- Normal—The port status LED represents port state or a breakout port state. By default, the port status display mode is Normal.
- Lane display—An array of lane status LEDs displays the status of each individual lane for the selected port. The lane display is ON when the software cycles through ports for lane status display. One port is selected at a time, and the display mode for that particular port switches to lane display mode. The other ports remain in normal display mode.
- Port location—The port location mode is ON when a remote operator initiates a port location command for a port or a group of ports. The `request chassis port-led` command temporarily overrides periodic software port selection for the lane display; all ports on an interface card that are not selected for port location switch to Normal mode, and selected ports switch to port location mode. If only one port is selected for port location, then the corresponding lane LEDs are applicable. However, if the selected port is in breakout mode, then all lane LEDs are applicable. If not in breakout mode, only lane 0 LED displays the port status. If more than one port is selected for port location, then the lane LEDs are disabled.

The following factors trigger a change in the port LED color:

- Change in the port state. For example, loss of signal (LOS) to no LOS, remote fault, or local fault
- Pluggable insertion or removal
- Change in configuration
- Activation or deactivation of port location feature
- Selection of breakout port for lane display

NOTE: Ports with all individual links in *Up* state are skipped and are not considered for lane display, thereby reducing the time needed to cycle through all the ports.

Table 26 on page 164 summarizes the state and color rules for the port LEDs. These rules help in determining the port LED color. When port location mode is activated, the port LED state or color can be determined from the Port Location ON column. If the breakout port is selected for the lane status display, then port LED state or color can be determined from the Lane Display column.

Table 26: Port LED State and Color Rules

Pluggable Inserted	Breakout Configuration State	Explicitly Disabled	Port State	Normal	Port Location ON	Lane Display
Yes	No breakout	No	Up	Green	Blinking green	-
Yes	No breakout	No	Down; loss of signal (LOS) detected	Off	Blinking green	-
Yes	No breakout	No	Down; transceiver hardware failure	Red	Blinking red	-
Yes	No breakout	No	Down; any other fault other than LOS and transceiver hardware failure	Amber	Blinking amber	-
ANY	No breakout	Yes	Port disabled by CLI	Amber	Blinking amber	-
No	Any	No	Anything except disabled port; however, transceiver not present	Off	Blinking green	-
Yes	Breakout	No	All breakout ports are UP	Green	Blinking green	Blinking green

Table 26: Port LED State and Color Rules *(Continued)*

Pluggable Inserted	Breakout Configuration State	Explicitly Disabled	Port State	Normal	Port Location ON	Lane Display
Yes	Breakout	No	All breakout ports are down with LOS	Off	Blinking green	Blinking green
Yes	Breakout	No	Hardware failure; transceiver initialization error at the port level (not individual lane)	Red	Blinking red	Blinking red
Yes	Breakout	Any	In all other cases the port LED color is amber	Amber	Blinking amber	Blinking amber

The following factors trigger a change in the lane LED color:

- A breakout port is selected for a lane display.
- Port location mode is activated for a port on a given interface card.

Table 27 on page 165 summarizes the state and color rules for the lane LEDs.

Table 27: Lane LED Color Rules

Pluggable Inserted	Breakout Configuration State	Explicitly Disabled	Port State	Order	LED Color
Yes	Breakout	No	Up	1	Green
Yes	Breakout	No	Down; loss of signal (LOS) detected	2	Off
Yes	Breakout	No	Down; transceiver hardware failure	3	Red

Table 27: Lane LED Color Rules *(Continued)*

Pluggable Inserted	Breakout Configuration State	Explicitly Disabled	Port State	Order	LED Color
Yes	Breakout	No	Down; fault other than LOS and transceiver hardware failure	4	Amber
Yes	Breakout	Yes	Breakout port is disabled in the CLI	5	Amber

Configuring Slow Packet Forwarding Engine Alarm

IN THIS SECTION

- Enabling Slow Packet Forwarding Engine Alarm | **166**
- Disabling Slow Packet Forwarding Engine Alarm | **167**
- Verifying That the Alarm Output and System Log Messages are Updated | **167**

On an M Series, an MX Series, a T Series, or an SRX Series device, the Packet Forwarding Engine might not send a resource acknowledgment message to the Routing Engine within a predetermined time of 360 seconds. This delay in receiving resource acknowledgment could be due to a slow or stuck Packet Forwarding Engine on the M Series, MX Series, T Series, or SRX Series device, or on one of the LCCs connected to a TX Matrix, TX Matrix Plus, or TX Matrix Plus router with 3D SIBs.

Starting with Junos OS Release 13.2R1 (also applicable in Junos OS Releases 12.1R6, 12.2R5, 12.3R3, 13.1R2 and later), to display the issue as an alarm in the `show chassis alarms` command output and to append the alarm to the system log messages file, you must enable the slow Packet Forwarding Engine alarm on the router.

The following sections provide more information about the slow Packet Forwarding Engine alarm:

Enabling Slow Packet Forwarding Engine Alarm

To enable the slow Packet Forwarding Engine alarm, perform the following steps:

NOTE: By default, the slow Packet Forwarding Engine alarm is disabled.

1. In configuration mode, go to the `[edit chassis]` hierarchy level:

```
[edit]
user@host# edit chassis
```

2. Enable the slow Packet Forwarding Engine alarm by configuring the `slow-pfe-alarm` statement.

```
[edit chassis]
user@host# set slow-pfe-alarm
```

Disabling Slow Packet Forwarding Engine Alarm

To disable the slow Packet Forwarding Engine alarm, perform the following steps:

1. In configuration mode, go to the `[edit chassis]` hierarchy level:

```
[edit]
user@host# edit chassis
```

2. Disable the slow Packet Forwarding Engine alarm by deleting the `slow-pfe-alarm` statement.

```
[edit chassis]
user@host# delete slow-pfe-alarm
```

Verifying That the Alarm Output and System Log Messages are Updated

IN THIS SECTION

- Purpose | 168
- Action | 168
- Meaning | 169

Purpose

To verify that the output of the `show chassis alarms` operational mode command and the system log messages file are updated with the slow Packet Forwarding Engine alarm when:

- The `slow-pfe-alarm` statement is enabled in the `[edit chassis]` hierarchy.
- The Packet Forwarding Engine resource acknowledgment is not received by the Routing Engine within a predetermined time of 360 seconds.

Action

To check the output on an M Series, MX Series, T Series, or an SRX Series device:

1. Verify that the alarm is displayed in the output of the `show chassis alarms` operational mode command.

   show chassis alarms

   ```
   user@host> show chassis alarms
   1 alarms currently active
   Alarm time               Class  Description
   2013-02-05 01:12:33 PST  Minor  Potential slow peers are: XDPC2
   ```

   For field descriptions, see "show chassis alarms" on page 483.

2. Verify that the alarm is appended to the system log messages file.

   ```
   /var/log/messages -
   ... Alarm set: RE color=YELLOW, class=CHASSIS, reason=Potential slow peers are: XDPC2
   ... Minor alarm set, Potential slow peers are: XDPC2
   ```

To check the output on a TX Matrix, TX Matrix Plus, or a TX Matrix Plus with 3D SIBs router:

1. Verify that the alarm is displayed in the output of the `show chassis alarms` operational mode command.

   show chassis alarms

   ```
   user@scc> show chassis alarms
   scc-re0:
   --------------------------------------------------------------------------
   9 alarms currently active
   Alarm time               Class  Description
   2013-02-06 00:45:46 PST  Minor  Potential slow peers are: LCC1 LCC0
   ```

```
...
lcc0-re0:
--------------------------------------------------------------------------
4 alarms currently active
Alarm time               Class  Description
2013-02-06 00:44:51 PST  Minor  Potential slow peers are: GFPC4 GFPC3
...
lcc1-re0:
--------------------------------------------------------------------------
4 alarms currently active
Alarm time               Class  Description
2013-02-06 00:45:44 PST  Minor  Potential slow peers are: GFPC10
...
lcc2-re0:
--------------------------------------------------------------------------
No alarms currently active
lcc3-re0:
--------------------------------------------------------------------------
No alarms currently active
```

For field descriptions, see "show chassis alarms" on page 483.

2. Verify that the alarm is appended to the system log messages file.

```
... Alarm set: RE color=YELLOW, class=CHASSIS, reason=Potential slow peers are: LCC0 LCC1
... Minor alarm set, Potential slow peers are: LCC0
... Alarm set: RE color=YELLOW, class=CHASSIS, reason=Potential slow peers are: GFPC4 GFPC3
... Minor alarm set, Potential slow peers are: GFPC4 GFPC3
... Alarm set: RE color=YELLOW, class=CHASSIS, reason=Potential slow peers are: GFPC10
... Minor alarm set, Potential slow peers are: GFPC10
```

Meaning

The output of `show chassis alarms` operational mode command and the system log messages file are updated as expected when the slow Packet Forwarding Engine alarm is enabled and when the Packet Forwarding Engine resource acknowledgment is not received by the Routing engine within a predetermined time of 360 seconds.

User-Defined Alarm Relay Overview

IN THIS SECTION

- Alarm Contact Port | 170
- Alarm Input | 170
- Alarm Output | 170

The ACX Series router alarm contact port—labeled ALARM on the front panel—allows you to manage sensors and external devices connected to the router in remote unstaffed facilities.

NOTE: Alarm contact port is not applicable on ACX5048 and ACX5096 routers.

Alarm Contact Port

The ACX Series router alarm contact port is a 15-pin D-type dry contact connector for alarms. The alarm contact port is used to generate LED alarms on the router and to turn external devices on or off. You can connect up to four input alarms and two output alarms. The alarm setting is open or closed.

Alarm Input

Alarm input provides dry contacts to connect to security sensors such as door or window monitors. The alarm input—open or closed—is sensed and reported to the management software. You can configure up to four alarm input relay ports (0 through 3) to operate as normally open or normally closed, and to trigger a red alarm condition or a yellow alarm condition or to ignore alarm conditions.

Alarm Output

Alarm output provides dry contacts to connect to external equipment, such as an audible or visual alarm that switches on or off–for example, a bell or a light. The four alarm output relay ports—0 through 3—are set up as follows:

- Ports 0 and 1—These ports can be configured to trigger an alarm when the system temperature goes to the red alarm status and when an alarm input port is triggered.

- Ports 2 and 3—These ports are *not* configured. They are used to indicate system major and minor alarms and are normally open. When a condition triggers an alarm, an alarm message is displayed.

To view the alarm input and output relay information, issue the `show chassis craft-interface` command from the Junos OS command line interface.

SEE ALSO

> Configuring Chassis Alarm Relays
>
> Configuring Chassis Alarm Input
>
> Configuring Chassis Alarm Relays
>
> relay (Chassis Alarm)

Configuring Chassis Alarm Relays

On ACX Series routers, you can configure alarm relays that can trigger alarms and turn external devices on or off. For example, if the router heats up to more than the critical temperature, the output port is activated and a device connected to the output port—such as a fan—is turned on.

To configure conditions that trigger alarms, include the `relay` statement with the `input` and `output` options at the `[edit chassis alarm]` hierarchy level.

```
[edit chassis alarm]
relay
    input {
        port port-number {
            mode (close | open);
            trigger (ignore | red | yellow);
        }
    }
    output{
        port port-number {
            input-relay input-relay;
            mode (close | open);
            temperature;
        }
    }
```

The following output shows an example configuration of a chassis relay alarm:

```
[edit chassis alarm]
user@host# show
relay {
    input {
        port 1 {
            mode close;
            trigger red;
        }
    }
    output {
        port 0 {
            temperature;
        }
    }
}
```

Configuring Chassis Alarm Input

The ACX Series router alarm contact port—labeled ALARM on the front panel—allows you to manage sensors and external devices connected to the router in remote unstaffed facilities. You can configure up to four alarm input ports (0 through 3) to operate as normally open or normally closed, and to trigger a red alarm condition or a yellow alarm condition or to ignore alarm conditions.

To configure an input alarm:

1. Configure the input port:

   ```
   [edit chassis alarm relay input port port-number]
   ```

   For example, to configure input port zero (0):

   ```
   user@host# edit chassis alarm relay input port 0
   ```

2. Configure the mode in which the input alarm is not active:

```
[edit chassis alarm relay input port port-number mode (close | open)]
```

For example, to configure open mode:

```
[edit chassis alarm relay input port 0]
user@host# set mode open
```

3. Configure the trigger to set off the alarm:

```
[edit chassis alarm relay input port port-number trigger (ignore | red | yellow)]
```

For example, to set off the yellow alarm:

```
[edit chassis alarm relay input port 0]
user@host# set trigger yellow
```

4. Verify the configuration with the `show` command:

```
[edit chassis alarm relay input port 0]
user@host# show
mode open;
trigger yellow;
```

5. Commit the configuration with the `commit` command.

To view the alarm input relay information, issue the `show chassis alarms` or `show chassis craft-interface` commands from the Junos OS command line interface.

Configuring Chassis Alarm Output

The ACX Series router alarm contact port—labeled ALARM on the front panel—allows you to manage sensors and external devices connected to the router in remote unstaffed facilities. You can configure up to two alarm output relay ports (0 and 1) to operate as normally open or normally closed, and to trigger an alarm when the system temperature goes to the red alarm status and when an alarm input port is triggered.

NOTE: Ports 2 and 3 are *not* configured. They are used to indicate system major and minor alarms and are normally open. When a condition triggers an alarm, an alarm message is displayed, and the corresponding LED turns on.

To configure an output alarm:

1. Configure the output port:

```
[edit chassis alarm relay output port port-number]
```

   For example, to configure output port zero (0):

```
user@host# edit chassis alarm relay output port 0
```

2. Configure the trigger to set off the alarm:

```
[edit chassis alarm relay output port port-number (input-relay | mode | temperature)]
```

   For example, to set off the alarm when the system temperature goes into the red status:

```
[edit chassis alarm relay output port 0]
user@host# set temperature
```

3. Verify the configuration with the `show` command:

```
[edit chassis alarm relay output port 0]
user@host# show
temperature;
```

4. Commit the configuration with the `commit` command.

To view the alarm output relay information, issue the `show chassis alarms` or `show chassis craft-interface` command from the Junos OS command line interface.

Configuring Chassis Alarm Input and Output (ACX710 Routers)

The alarm interface port, an RJ45 port on the front panel of the ACX710 router, provides user-configurable input and output signals. You can configure the alarm input to receive alarm inputs from the external devices (such as sensors) connected to the router through the alarm port. You can configure the alarm output to relay the alarms in the router to external alarm devices (for example, bells and bulbs) connected to the router through the alarm port. You can configure up to three alarm inputs and one alarm output.

The router supports configuration of up to three alarm inputs and one alarm output, using the command alarm-port at the [edit chassis] hierarchy. You can configure the alarm input signals independent of the alarm output signal, and vice versa.

Table 28: Alarm Port Pin-out Information

Pin Number of the Connector on the Device	Signal Definition	IN/OUT	CLI Mapping
1	ALARM_IN0_Sig	IN	port 1
2	ALARM_IN0_Return	IN	port 1
3	ALARM_IN1_Sig	IN	port 2
4	ALARM_IN2_Sig	IN	port 3
5	ALARM_IN1_Return	IN	port 2
6	ALARM_IN2_Return	IN	port 3
7	ALARM_OUT_Sig	OUT	port 1
8	ALARM_OUT_Return	OUT	port 1

To configure an alarm input:

1. Specify the input port number by using the command `set chassis alarm-port input port` *port-number*. The router supports three input ports (1 to 3).

```
user@host# set chassis alarm-port input port 1
```

2. Configure a signal polarity for the alarm input based on the user environment.

```
user@host# set chassis alarm-port input port 1 active low
```

3. Set the administrative state of the alarm input as enabled.

```
user@host# set chassis alarm-port input port 1 admin-state enabled
```

4. Provide a description to the alarm input. For example, FAN.

```
user@host# set chassis alarm-port input port 1 description FAN
```

5. Specify an alarm severity. The following are the available options: critical, major, minor, and warning.

```
user@host# set chassis alarm-port input port 1 severity major
```

6. Commit the configuration with the `commit` command.

To view the input alarms, by using the `show chassis alarms` command.

To configure an alarm output:

1. Specify the output port number by using the command `set chassis alarm-port output port` *port-number*. The router supports only one output port (port number: 1).

```
user@host# set chassis alarm-port output port 1
```

2. Set the administrative state of the alarm output as enabled.

```
user@host# set chassis alarm-port output port 1 admin-state enabled
```

3. Provide a description to the alarm input.

```
user@host# set chassis alarm-port input port 1 description alarm-output-description
```

4. Commit the configuration with the `commit` command.

For more information, see "alarm-port" on page 251.

You can use the command `show chassis craft-interface` to view the alarm port configuration details.

```
user@router> show chassis craft-interface

System LED's on front panel:
----------------------------
Fault LED :               On
Status LED :              Off
Operational LED :         On
Fan LED :                 Off

Alarm-port on front panel:
----------------------------

Input port :                1
         Active signal :    LOW
         Description :
         Admin state :      DISABLED
         Severity :         CRITICAL

Input port :                2
         Active signal :    LOW
         Description :
         Admin state :      DISABLED
         Severity :         CRITICAL

Input port :                3
         Active signal :    LOW
         Description :
         Admin state :      DISABLED
         Severity :         CRITICAL

Output port :               1
```

```
        Description :
        Admin state :      DISABLED
```

RELATED DOCUMENTATION

- Silencing External Devices Connected to Alarm Relay Contacts | **196**

Managing Errors

IN THIS SECTION

- Configuring FPC Error Levels and Actions | **178**
- Example: Configuring FPC Error Detection and Self-Healing on T Series Core Routers | **181**
- Managing FPC Errors | **185**
- Powering Off Packet Forwarding Engines | **187**
- Configuring Sanity Polling | **188**
- Configuring the Junos OS to Make a Flexible PIC Concentrator Stay Offline | **191**
- Configuring an SFM to Stay Offline | **191**
- Resynchronizing FPC Sequence Numbers with Active FPCs when an FPC Comes Online | **192**
- Enabling a Routing Engine to Reboot on Hard Disk Errors | **193**
- Handling Thermal Health Events Using Thermal Health Check and PSM Watchdog | **194**

Configuring FPC Error Levels and Actions

Starting with Junos OS Release 13.3 or Release 14.2 for M320 routers, you can use MX Series, PTX Series, and T Series routers to configure Packet Forwarding Engine (PFE)-related error levels on FPCs and the actions to perform when a specified threshold is reached. In Junos OS Release 13.2 and earlier, Packet Forwarding Engine errors would disable the FPC. When you use the `error` command, Packet Forwarding Engine errors can be isolated, which reduces the need for a field replacement. Using the `error` command, you can classify errors according to severity, set an automatic recovery action for each

severity, and configure the actions to perform when a specified threshold is reached. This command is available at the [edit chassis fpc slot-number] and [edit chassis] hierarchies.

To configure Packet Forwarding Engine error levels and actions for an FPC:

- (Optional) Configure the fatal error level threshold and action. A fatal error is an error that results in blockage of considerable amount of traffic across modules.

  ```
  [edit chassis fpc fpc-number error]
  user@host# set fatal action action
  user@host# set fatal threshold threshold-level
  ```

  If the severity level of the error is fatal, the action is carried out when the total number of errors reaches the threshold value. After the threshold value is crossed, for every occurrence of the error, an action is carried out.

- (Optional) Configure the major error level threshold and action. A major error is an error that results in continuing loss of packet traffic but does not affect other modules.

  ```
  [edit chassis fpc fpc-number error]
  user@host# set major action action
  user@host# set major threshold threshold-level
  ```

  If the severity level of the error is major, the action is carried out when the total number of errors reaches the threshold value. After the threshold value is crossed, for every occurrence of the error, an action is carried out.

- (Optional) Configure the minor error level threshold and action. A minor error is an error that results in the loss of a single packet but is fully recoverable.

  ```
  [edit chassis fpc fpc-number error]
  user@host# set minor action action
  user@host# set minor threshold threshold-level
  ```

  If the severity level is minor, the action is carried out only once when the total number of errors reaches the threshold value

Starting with Junos OS Release 18.1R3, MX Series routers support configuration of error thresholds and actions at the error scope and error category levels. Use the command set chassis fpc *fpc-slot* error scope *error-scope* category *category* (fatal | major | minor) threshold *error-threshold* action (alarm | disable-pfe | get-state | offline | log | reset | trap | online-pfe | reset-pfe) to configure a threshold and action for a particular error scope and category at the FPC level. You can also configure these features at the chassis

level (at the [edit chassis] hierarchy). However, threshold and action configured at the [edit chassis fpc] hierarchy overrides the same configuration at the [edit chassis] hierarchy.

You can use the command show chassis fpc errors to view the error information at the error scope and category level.

For Junos OS Evolved, you can use the following show commands to view the error information:

- show system errors count—Displays system-wide errors and its count.
- show system errors active—Displays current active errors in the system.
- show system errors active fpc <slot number> —Displays active errors for the specified FPC.
- show system errors fru detail—Displays detailed FRU-specific error.
- show system errors fru detail fpc <slot number>—Displays information about detected errors based on the FRU.

If you have configured the action log against a particular error threshold, the system logs the event when the error count breaches the set threshold. The following sample syslog messages indicate an error threshold breach and the resultant action being taken:

```
Sep 17 23:12:10  sw-s3-u8-03 fpc0 Error: /fpc/0/pfe/0/cm/0/PE_Chip/1/
PECHIP_CMERROR_OQB_INT_REG_RD_ADDR_ERR (0x21078b), scope: pfe, category: functional, severity:
minor, module: PE Chip, type: Description for PECHIP_CMERROR_OQB_INT_REG_RD_ADDR_ERR
Sep 17 23:12:10  sw-s3-u8-03 fpc0 Performing action log for error /fpc/0/pfe/0/cm/0/PE_Chip/1/
PECHIP_CMERROR_OQB_INT_REG_RD_ADDR_ERR (0x21078b) in module: PE Chip with scope: pfe category:
functional level: minor
```

The offline, reset, disable-pfe, offline-pfe and reset-pfe actions are mutually exclusive with respect to configuration. The specified PFE is disabled automatically, if offline-pfe or reset-pfe is configured.

The following table provides details about PFE error mapping actions and the system response:

Table 29: PFE Error Mapping Action and Response

Action	Response
disable-pfe	Disables all PFE interfaces, alarms and logs.
offline	Takes the FPC offline, disables the alarms and logs.

Table 29: PFE Error Mapping Action and Response *(Continued)*

Action	Response
`reset`	Takes the FPC offline and resets to online, enables the alarms and logs.
`reset-pfe`	Powers-off the PFE, disables the alarms and logs, then, powers-on the PFE, enables the alarms and logs.
`offline-pfe`	Powers-off the PFE, disables the alarms and logs,

Example: Configuring FPC Error Detection and Self-Healing on T Series Core Routers

IN THIS SECTION

- Requirements | **181**
- Overview | **182**
- Configuration | **182**
- Verification | **184**

This example shows how to configure error detection and self-healing on a Juniper Networks T Series Core Router with Type 5 FPC.

Requirements

This example uses the following hardware and software components:

- Juniper Networks T4000 Core Router with Type 5 FPCs.
- Junos OS Release 13.3 or later.

Before you proceed, ensure that the required connections are complete and the interfaces are functional.

Overview

FPC error detection and self-healing involves configuring a set of actions to be performed on each FPC, when the number of errors for a particular severity increases beyond a user-configured threshold. The error severity is categorized into fatal, major, and minor. Recovery actions include raising an alarm, generating log entries, getting the current state of the FPC, restarting the FPC, taking the FPC offline, and resetting the FPC. For a particular FPC and error severity, you can configure the error threshold to any value within the allowed limits and map the threshold to an action. In this example, you will set these errors on FPC 0 in Juniper Networks T4000 Core Router.

Configuration

IN THIS SECTION

- CLI Quick Configuration | **182**
- Configuring the Error Detection and Self-Healing | **182**
- Results | **184**

To configure the error detection and self-healing, you need to set the error severity, threshold values corresponding to each error severity, and actions to be performed when the threshold value is crossed.

CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the [edit interfaces] hierarchy level.

```
set chassis fpc 0 fatal threshold 1 action resetset chassis fpc 0 major threshold 1 action
alarmset chassis fpc 0 minor threshold 10 action log
```

Configuring the Error Detection and Self-Healing

Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see Using the *Using the CLI Editor in Configuration Mode* and the CLI User Guide.

- Configure the threshold value and associated action for fatal errors.

  1. Set the error severity to fatal.

     ```
     [edit interfaces]

     user@host# set chassis fpc 0 error fatal
     ```

  2. Set the threshold value for fatal errors.

     ```
     [edit interfaces]

     user@host# set chassis fpc 0 error fatal threshold 1
     ```

  3. Set the associated action for fatal errors.

     ```
     [edit interfaces]

     user@host# set chassis fpc 0 error fatal threshold 1 action reset
     ```

- Configure the threshold value and associated action for major errors.

  1. Set the error severity to major.

     ```
     [edit interfaces]

     user@host# set chassis fpc 0 error major
     ```

  2. Set the threshold value for major errors.

     ```
     [edit interfaces]

     user@host# set chassis fpc 0 error major threshold 1
     ```

  3. Set the associated action for major errors.

     ```
     [edit interfaces]

     user@host# set chassis fpc 0 error major threshold 1 action alarm
     ```

- Configure the threshold value and associated action for minor errors.

  1. Set the error severity to minor.

     ```
     [edit interfaces]

     [edit interfaces]

     user@host# set chassis fpc 0 error minor
     ```

  2. Set the threshold value for minor errors.

     ```
     [edit interfaces]
     ```

```
user@host# set chassis fpc 0 error minor threshold 10
```

3. Set the associated action for minor errors.

```
[edit interfaces]

user@host# set chassis fpc 0 error minor threshold 10 action log
```

Results

The following is the result of the configuration for the fatal severity level.

```
user@host# set chassis fpc 0 error ?
Possible completions:
+ apply-groups         Groups from which to inherit configuration data
+ apply-groups-except  Don't inherit configuration data from these groups
> fatal                FPC Fatal errors (default threshold = 1)
> major                FPC Major Level errors (default threshold = 1)
> minor                FPC Minor Level errors (default threshold = 10)user@host# set chassis fpc
0 error fatal action ?
Possible completions:
alarm              Raise FPC alarm
get-state          Retreive FPC state for debugging
log                Log occurence to system log file
offline            Offline FPC
offline-pic        Offline PICs associated with PFE on FPC
reset              Reset FPCuser@host# set chassis fpc 0 error fatal action resetuser@host# set
chassis fpc 0 error fatal threshold ?
Possible completions:
<threshold>        Error count at which to take the action (0..4294967295)user@host# set chassis
fpc 0 error fatal threshold 1
```

If you are done configuring the devices, enter `commit` from configuration mode.

Verification

IN THIS SECTION

- Verifying the Configured Actions Related to Fatal Severity of FPC Error | **185**

To verify that the configuration is successful and the router in configured with the correct action, use the `show chassis fpc errors` command.

Verifying the Configured Actions Related to Fatal Severity of FPC Error

Purpose

Make sure that the threshold value and the associated action are set for fatal errors.

Action

```
user@host> show chassis fpc errors
FPC  Level Occurred Cleared Threshold Action-Taken Action
0    Fatal      0      0      1         RESET
    Pfe-State: pfe-0 -ENABLED | pfe-1 -ENABLED | pfe-2 -ENABLED | pfe-3 -ENABLED | pfe-4 -
ENABLED | pfe-5 -ENABLED | pfe-6 -ENABLED | pfe-7 -ENABLED |
```

Meaning

The sample output shows `Fatal` error at FPC `0` with `0` error `Occurred` (no previous occurrences), `0` error `Cleared` (no previous occurrences) with `Threshold` value set to `1` and `Action-Taken` set to `RESET`.

Managing FPC Errors

IN THIS SECTION

- Modifying Severity of an Error | **186**
- Disabling an Error | **186**

On the PTX10001 routers, you can disable an FPC error or modify the severity of the error at the error-id level. The error-id, which uniquely identifies an FPC error, is represented in the uniform resource identifier (URI) format and is composed of a module identifier and an error identifier. If an error occurs, you can find the error-id in the system log messages.

Modifying Severity of an Error

Though you cannot configure a new error severity, you can modify the existing severity of an error. For example, if you do not want to treat a particular error (identified by an error-id) as fatal anymore, you can modify its severity to major or minor as required.

NOTE: You cannot modify the error severity at a group (for example, category) level.

To modify the severity of an error, use the following command:

```
user@host# set chassis fpc fpc-slot error error-id severity new-severity
```

See the following example:

```
user@host# set chassis fpc 3 error "/cpu/0/memory/0/ECC_CORRECTED_ERROR"
severity minor
```

In the above example, you modified the severity of the error ID “/cpu/0/memory/0/memory-uncorrected-error” in FPC 3 to `minor`.

Disabling an Error

To configure the system to stop reporting an error, identify the error-id and disable it. You can find the error-id in the system log messages. To disable an error, use the following command:

```
user@host# set chassis fpc fpc-slot error error-id state disable
```

See the following example:

```
user@host# set chassis fpc 3 error "/cpu/0/memory/0/ECC_CORRECTED_ERROR"
state disable
```

In the above example, you disabled the error “/cpu/0/memory/0/memory-uncorrected-error” in FPC 3.

Powering Off Packet Forwarding Engines

You can power on or power off the Packet Forwarding Engines in a running system, or keep a Packet Forwarding Engine powered off when the FPC comes online. The following are a couple of scenarios in which this feature is used.

- When the Packet Forwarding Engine ASIC is malfunctioning.
- To conserve power in case the deployment does not require the full capacity of the system.

To power off a Packet Forwarding Engine, use the following steps:

```
user@host# set chassis fpc slot-number pfe pfe-id power off
user@host# commit
```

To power on a packet forwarding engine, use the following steps:

```
user@host# set chassis fpc slot-number pfe pfe-id power on
user@host# commit
```

NOTE: You need to apply this configuration to both the Packet Forwarding Engines in an ASIC to be able to commit the configuration.

NOTE: On MX series routers with MPC10E-15C-MRATE, you can power off or power on only the Packet Forwarding Engine 2. The Packet Forwarding Engines 0 and 1 do not support this command. On the MPC10E-15C-MRATE, operating the Packet Forwarding Engine 2 requires the Packet Forwarding Engines 0 and 1 to be functional. You can use the command `show chassis fpc` *`fpc-lot`* `detail` to view the Packet Forwarding Engine power ON/OFF status and bandwidth for the individual Packet Forwarding Engines in the MPC10E-15C-MRATE.

You can use the `show chassis fpc` *`fpc-slot`* `detail` command to view the Packet Forwarding Engine power on/off configuration status. See an example below:

```
user@router> show chassis fpc 0 detail

Slot 0 information:
  State                               Online
```

```
  Temperature                    41 degrees C / 105 degrees F (PFE_24-HBM)
  Temperature                    44 degrees C / 111 degrees F (PFE_25-HBM)
  Temperature                    43 degrees C / 109 degrees F (PFE_26-HBM)
  Temperature                    41 degrees C / 105 degrees F (PFE_27-HBM)
  Temperature                    40 degrees C / 104 degrees F (PFE_28-HBM)
  Temperature                    40 degrees C / 104 degrees F (PFE_29-HBM)
  Temperature                    38 degrees C / 100 degrees F (PFE_30-HBM)
  Temperature                    39 degrees C / 102 degrees F (PFE_31-HBM)
  Start time                        2020-10-28 00:46:17 PDT
  Uptime                            1 day, 1 hour, 34 minutes, 48 seconds
  Max power consumption          825 Watts

PFE Information:

  PFE  Power ON/OFF  Bandwidth         SLC
  0    On            500
  1    On            500
  2    On            500
  3    On            500
  4    On            500
  5    On            500
  6    On            500
  7    On            500
```

Configuring Sanity Polling

You can configure the `sanity-poll` statement for a particular FPC or FEB or CFEB to start a periodic sanity check for that FPC or FEB or CFEB. The periodic sanity check includes checking for error conditions such as “register sanity issues,” “high temperature,” “hardware failure,” and so on. If you do not configure the `sanity-poll` statement, then sanity polling is disabled.

NOTE: Currently, periodic sanity check is performed only on the routing chip register.

Sanity polling periodically checks for an error condition in an FPC or FEB or CFEB and performs the appropriate actions in case of an error.

- To configure sanity polling for an FPC on T Series routers and M320 routers, include the `sanity-poll` statement and its substatements at the `[edit chassis fpc slot-number]` hierarchy level:

```
[edit chassis]
fpc slot-number {
    sanity-poll {
        retry-count number;
        on-error {
            raise-alarm;
            power (cycle | off);
            write-coredump;
        }
    }
}
```

- To configure sanity polling for a FEB on the M120 router, include the `sanity-poll` statement and its substatements at the `[edit chassis feb slot-number]` hierarchy level:

```
[edit chassis]
feb slot-number {
    sanity-poll {
        retry-count number;
        on-error {
            raise-alarm;
            power (cycle | off);
            write-coredump;
        }
    }
}
```

- To configure sanity polling for a CFEB on M7i and M10 routers, include the `sanity-poll` statement and its substatements at the `[edit chassis cfeb slot-number]` hierarchy level:

```
[edit chassis]
cfeb slot-number {
    sanity-poll {
        retry-count number;
        on-error {
            raise-alarm;
            power (cycle | off);
```

```
            write-coredump;
        }
    }
}
```

NOTE: On a TX Matrix or TX Matrix Plus router, you can configure the `sanity-poll` statement at the `[edit chassis lcc` *number* `fpc` *number*`]` hierarchy level.

The `sanity-poll` statement comprises the following substatements:

- The `retry-count` statement specifies the number of rechecks to be performed after the occurrence of a particular error condition. If an error exists in all the periodic checks, then sanity polling reports an error and proceeds to perform the appropriate actions (described as options of the `on-error` statement).

  For example, if the periodic sanity check detects an error in the FPC or FEB or CFEB and if you configure the `retry count` *number* to 15, sanity polling does not report the error immediately. Sanity polling checks 15 times for the same error condition. If an error persists in all 15 rechecks, then it reports an error and takes the appropriate actions.

  If you do not configure the `retry-count` statement, then by default, the `sanity-poll` statement rechecks the detected error 10 times before reporting an error condition.

- If sanity polling detects an error condition, the `on-error` statement performs the appropriate actions to eliminate the error.

  The following actions are common to all kinds of error conditions:

  - To generate a chassis alarm, configure the `raise-alarm` statement. The chassis alarm is displayed in the front panel of the chassis.
  - To reboot the FPC or FEB or CFEB after generating a core file, configure the `power cycle` statement. This statement is useful for temporary software errors that are eliminated after reboot.
  - To halt the FPC or FEB or CFEB, configure the `power off` statement. This statement is useful in case of permanent hardware failure.

    CAUTION: The `power off` statement halts the FPC. Ensure that you have backup paths through a different FPC or FEB or CFEB to avoid service outage.

> **NOTE**: The `power cycle` and `power off` statements are mutually exclusive: You can configure either the `power cycle` or the `power off` action for an error.

- To trigger the core file, configure the `write-coredump` statement.

You can configure multiple actions for a given FPC or FEB or CFEB. If you do not configure any actions, the `sanity-poll` statement generates only FPC or FEB or CFEB system log messages.

Configuring the Junos OS to Make a Flexible PIC Concentrator Stay Offline

By default, a Flexible PIC Concentrator (FPC) is configured to restart after a system reboot. You can use the `request chassis fpc` operational mode command to take an FPC offline, but on Junos OS the FPC attempts to restart when you enter a `commit` CLI command. To configure an FPC to stay offline and prevent it from restarting, include the `power off` statement at the `[edit chassis fpc` *`slot-number`*`]` hierarchy level:

```
[edit chassis fpc slot-number]
power off;
```

To bring an FPC online that is configured to stay offline and configure it to stay online, include the `power on` statement at the `[edit chassis fpc` *`slot-number`*`]` hierarchy level:

```
[edit chassis fpc slot-number]
power on;
```

Configuring an SFM to Stay Offline

By default, if you use the `request chassis sfm` CLI command to take a Switching and Forwarding Module (SFM) offline, the SFM attempts to restart when you enter a `commit` CLI command. To prevent a restart, you can configure an SFM to stay offline. This feature is useful for repair situations.

To configure an SFM to stay offline, include the `sfm` statement at the `[edit chassis]` hierarchy level:

```
[edit chassis]
sfm slot-number {
    power off;
}
```

- *slot number*—Slot number in which the SFM is installed.
- `power off`—Take the SFM offline and configure it to remain offline.

For example, the following statement takes an SFM in slot 3 offline:

```
[edit chassis]
sfm 3 power off;
```

Use the `show chassis sfm` CLI command to confirm the offline status:

```
user@host# show chassis sfm
                 Temp    CPU Utilization (%) Memory Utilization (%)
Slot    State    (C)     Total   Interrupt   DRAM (MB)   Heap   Buffer
0       Online   34      2       0           64          16     47
1       Online   38      2       0           64          16     47
2       Online   42      2       0           64          16     47
3       Offline --- Configured power off ---
```

To bring the SFM back online, delete the `edit chassis sfm` statement and then commit the configuration.

Resynchronizing FPC Sequence Numbers with Active FPCs when an FPC Comes Online

On M320, T320, T640, T1600, T4000, TX Matrix, and TX Matrix Plus routers, when you bring a Flexible PIC Concentrator (FPC) online, the sequence number on the FPC may not be synchronized with the other active FPCs in the router, which may result in the loss of a small amount of initial traffic.

To avoid any traffic loss, include the `fpc-resync` statement at the `[edit chassis]` hierarchy level. This ensures that the sequence numbers of the FPC that is brought online is resynchronized with the other active FPCs in the router.

```
[edit chassis]
fpc-resync;
```

NOTE: In order to prevent null-route filtering, the `fpc-resync` command will have no effect if a single LMNR based FPC and one or more I-chip FPCs exist in the same chassis.

Enabling a Routing Engine to Reboot on Hard Disk Errors

When a hard disk error occurs, a Routing Engine might enter a state in which it responds to local pings and interfaces remain up, but no other processes are responding.

To recover from this situation, you can configure a single Routing Engine to reboot automatically when a hard disk error occurs. To enable this feature, include the `on-disk-failure reboot` statement at the `[edit chassis routing-engine]` hierarchy level.

```
[edit chassis routing-engine]
on-disk-failure {
    disk-failure-action (halt | reboot);
}
```

For dual Routing Engine environments, you can configure a backup Routing Engine to assume primary role automatically, if it detects a hard disk error on the primary Routing Engine. To enable this feature, include the `on-disk-failure` statement at the `[edit chassis redundancy failover]` hierarchy level. For information about this statement, see the Junos OS High Availability User Guide.

You can configure the Routing Engine to halt (instead of rebooting) when the hard disk fails on the Routing Engine. To configure this feature, include the `disk-failure-action (halt | reboot)` statement at the `[edit chassis routing-engine on-disk-failure]` hierarchy level:

```
[edit chassis routing-engine]
on-disk-failure {
```

```
    disk-failure-action (halt | reboot);
}
```

Use the **halt** option to configure the Routing Engine to halt when the hard disk fails. Use the **reboot** option to configure the Routing Engine to reboot when the hard disk fails.

Handling Thermal Health Events Using Thermal Health Check and PSM Watchdog

You can use the thermal health check feature to configure an action to be taken on detection of a thermal health event such as power leakage. The thermal check feature monitors the power supply module (PSM) power output and FRU power consumption and if it detects that the PSM power output exceeds the FRU power consumption by a user-defined threshold, it assumes that there is a thermal health event, and takes an action based on user configuration. You can configure actions such as auto shutdown or alarms to be initiated on detection of a thermal health event. An example of the configuration is as follows: `set chassis thermal-health-check action-onfail auto-shutdown shutdown-timer 10 power-threshold 700`. This example configuration enables the software to detect a thermal health event if the power leak exceeds 700W, and shuts down the system 10 seconds after the thermal health failure is detected.

The thermal health check feature works only if:

- The router has the high capacity AC or DC power distribution units (PDU) installed in both the slots, and each PDU has equal number of PSMs. Both AC PSM and DC PSM are supported.

  The supported PSMs and PDUs are listed below:

  - High Capacity AC PSM (model: PSM2-PTX-AC; firmware: 0210 or later; hardware revision: 06 or later)
  - High Capacity 60A DC PSM (model: PSM2-PTX-DC; firmware: 0315 or later; hardware revision: 09 or later)
  - High Capacity 60A DC PDU (model: PDU2-PTX-DC; use the firmware version 0404 or later with hardware revision 07; use the firmware version 0503 or later with hardware revision 08)
  - High Capacity AC Delta PDU (model: PDU2-PTX-AC-D; firmware: 0305 or later; hardware revision: 04 or later)
  - High Capacity AC Wye PDU (model: PDU2-PTX-AC-W; firmware: 0305 or later; hardware revision: 03 or later)

  - High Capacity Single Phase AC PDU (model: PDU2-PTX-AC-SP; firmware: 0102 or later; hardware revision: 03 or later)

- Each PDU has at least three PSMs that are online, and each online PSM is consuming above 60A current (in case of an AC PSM) or above 100A current (in case of a DC PSM).
- None of the FRUs (RE, SIB, and FPC) is in the 'Present' state.

On the router, you can also configure the PSM watchdog feature at the [edit chassis] hierarchy. If a thermal health event causes Junos to go down, the PSM watchdog feature detects it and shuts down the router. In the watchdog configuration, you can specify the watchdog timer in seconds. After the specified duration, the watchdog expires. You can also specify the frequency (in minutes) at which Junos resets the watchdog counter. If the watchdog counter doesn't get reset because of reasons such as Routing Engine crash, the PSM turns off the output power on watchdog timer expiry and thereby shuts down the router.

Example configurations are as follows:

- Use `set chassis psm watchdog timeout 600 pat-frequency 2`. This command enables PSM watchdog with the watchdog timer set to 600 seconds and the counter is set to be reset every 2 minutes.
- Use `set chassis thermal-health-check fet-failure-check action-onfail auto-shutdown shutdown-timer 10.`. This command enables thermal health check, and shutdowns the system, 10 seconds after FET failure is detected.

> **NOTE**: The PSM watchdog feature works only if all the online PSMs in the router support this feature.

In short, if the Routing Engine software is running when a thermal event occurs, the thermal health check feature detects the thermal event and takes an action. However, if the Routing Engine software goes down in a thermal health event, it is the PSM watchdog timer that detects this issue and brings down the system.

Release History Table

Release	Description
13.3	Starting with Junos OS Release 13.3 or Release 14.2 for M320 routers, you can use MX Series, PTX Series, and T Series routers to configure Packet Forwarding Engine (PFE)-related error levels on FPCs and the actions to perform when a specified threshold is reached.

RELATED DOCUMENTATION

No Link Title

thermal-health-check | 378

watchdog (PSM) | 385

Craft Interface

IN THIS SECTION

- Silencing External Devices Connected to Alarm Relay Contacts | 196
- Configuring the Junos OS to Disable the Physical Operation of the Craft Interface | 196
- Remote Port Identification using LEDs for Cabling Assistance | 197
- Configuring the LCD Panel on EX Series Switches (CLI Procedure) | 198

Silencing External Devices Connected to Alarm Relay Contacts

You can manually silence external devices connected to alarm relay contacts. To silence an external devices, press the alarm cutoff button located on the craft interface front panel of the device.

Silencing the device does not remove the alarm messages from the display (if present on the router or switch) or extinguish the alarm LEDs. In addition, new alarms that occur after an external device is silenced reactivate the external device.

Configuring the Junos OS to Disable the Physical Operation of the Craft Interface

You can disable the physical operation of the craft interface front panel on the router. When you disable the operation of the craft interface, the buttons on the front panel, such as the alarm cutoff button, no

longer function. To disable the craft interface operation, include the `craft-lockout` statement at the `[edit chassis]` hierarchy level:

```
[edit chassis]
craft-lockout;
```

SEE ALSO

> *Configuring Junos OS to Determine Conditions That Trigger Alarms on Different Interface Types*
>
> Silencing External Devices Connected to Alarm Relay Contacts | **196**

Remote Port Identification using LEDs for Cabling Assistance

With new and higher-density Modular Interface Cards (MICs) and Modular Port Concentrators (MPCs), cabling is complex and can result in wiring mistakes. Remote port identification reduces the complexity by providing an easy way of identifying the ports that must be connected to the cables.Starting in Junos OS Release 16.1, the remote port identification feature is supported on MPC7E-10G, MPC7E-MRATE, MX2K-MPC8E, and MX2K-MPC9E.

The remote port identification feature is supported on MX10K-LC2101 and MX10K-LC9600 on MX10008 routers.

LEDs, used to display the status of the port, can be configured to blink for a small duration of time to identify the port and provide cabling assistance. Depending on the port identification required, you can configure the LED of a specific port, LEDs of all ports, LED of a specific type of port to blink. For instance, on MX2020 routers with MPC8E, you can identify the active ports that support port speeds of 100 Gbps by configuring the LEDs of the specific port to blink. Similarly, you can identify active ports that support port speeds of 10 Gbps and 40 Gbps. You can configure the LED of, for example, active port 9 on the MX2020 router with MPC9E and MIC-MRATE. You can also make the LEDs of all the ports blink, if required.

You can specify the duration of time that a LED blinks. The default duration is 5 minutes (300 seconds). You can also stop the LED from blinking before the duration expires, if required.

To enable port identification on the enhanced MPCs, you can make the LED corresponding to the ports to blink using the `request chassis port-led` command.

Configuring the LCD Panel on EX Series Switches (CLI Procedure)

IN THIS SECTION

- Disabling or Enabling Menus and Menu Options on the LCD Panel | 198
- Configuring a Custom Display Message | 199

This topic applies to hardware devices in the EX Series product family, which includes switches and the XRE200 External Routing Engine, that support the LCD panel interface.

The LCD panel on the front panel of EX Series switches displays a variety of information about the switch in the Status menu and provides the Maintenance menu to enable you to perform basic operations such as initial setup and reboot. You can disable these menus or individual menu options if you do not want switch users to use them. You can also set a custom message that will be displayed on the panel.

Disabling or Enabling Menus and Menu Options on the LCD Panel

By default, the Maintenance menu, the Status menu, and the options in those menus in the LCD panel are enabled. Users can configure and troubleshoot the switch by using the Maintenance menu and view certain details about the switch by using the Status menu.

If you do not want users to be able to use those menus or some of the menu options, you can disable the menus or individual menu options. You can reenable the menus or menu options.

Issue the `show chassis lcd menu` operational mode command to see the menus or menu options that are currently enabled.

NOTE: On some platforms, you must specify an FPC slot number in these commands. See the lcd-menu statement for details.

To disable a menu:

```
[edit]
user@switch# set chassis lcd-menu menu-item menu-name disable
```

To enable a menu:

```
[edit]
user@switch# delete chassis lcd-menu menu-item menu-name disable
```

To disable a menu option:

```
[edit]
user@switch# set chassis lcd-menu menu-item menu-option disable
```

To enable a menu option:

```
[edit]
user@switch# delete chassis lcd-menu menu-item menu-option disable
```

Configuring a Custom Display Message

You can configure the second line of the LCD to display a custom message temporarily for 5 minutes or permanently.

To display a custom message temporarily:

- On an EX3200 switch, a standalone EX3300 switch, a standalone EX4200 switch, a standalone EX4300 switch except EX4300-48MP and EX4300-48MP-S switches, a standalone EX4500 switch, a standalone EX4550 switch, an EX6200 switch, an EX8200 switch, or an XRE200 External Routing Engine:

  ```
  user@switch> set chassis display message message
  ```

- On an EX3300, EX4200, EX4300, EX4500, or EX4550 switch in a Virtual Chassis configuration:

  ```
  user@switch> set chassis display message message fpc-slot slot-number
  ```

To display a custom message permanently:

- On an EX3200 switch, a standalone EX3300 switch, a standalone EX4200 switch, a standalone EX4300 switch except EX4300-48MP and EX4300-48MP-S switches, a standalone EX4500 switch,

a standalone EX4550 switch, an EX6200 switch, an EX8200 switch, or an XRE200 External Routing Engine:

```
user@switch> set chassis display message message permanent
```

- On an EX3300, EX4200, EX4300 except EX4300-48MP and EX4300-48MP-S, EX4500, or EX4550 switch in a Virtual Chassis configuration:

```
user@switch> set chassis display message message fpc-slot slot-number permanent
```

NOTE: The buttons on the LCD panel are disabled when the LCD is configured to display a custom message.

To disable the display of the custom message:

```
user@switch> clear
chassis display message
```

You can view the custom message by issuing the `show chassis lcd` command.

Release History Table

Release	Description
18.2	Starting in Junos OS Release 18.2, the remote port identification feature is supported on JNP10K-LC2101 on MX10008 routers.
16.1	Starting in Junos OS Release 16.1, the remote port identification feature is supported on MPC7E-10G, MPC7E-MRATE, MX2K-MPC8E, and MX2K-MPC9E.

RELATED DOCUMENTATION

Configuring Junos OS to Determine Conditions That Trigger Alarms on Different Interface Types

request chassis port-led | 450

6
CHAPTER

Network Services Mode

Managing Power | 202

Configuring Network Services Mode | 221

Managing Power

IN THIS SECTION

- Understanding How Dynamic Power Management Enables Better Utilization of Power | 202
- Understanding Power Management on the PTX5000 | 203
- Power Redundancy on SRX5400 | 207
- T4000 Power Management Overview | 208
- Configuring the Six-Input DC Power Supply on T Series Routers | 210
- Redistributing the Available Power by Configuring Power-On Sequence | 213
- Configuring Power-On Sequence to Redistribute the Available Power | 214
- Configuring Voltage Level Monitoring of FPCs | 215
- Overriding the Default Maximum Power (Junos OS Evolved) | 216
- Powering Off Packet Forwarding Engines | 219

Understanding How Dynamic Power Management Enables Better Utilization of Power

You can use the dynamic power management feature to better utilize the power available in the power entry module (PEM). Whether or not a new hardware component is powered on depends on the availability of power in the PEM. A component is not powered on if the PEM cannot meet the worst-case power requirement for that component. Starting in Junos OS Release 15.1R1, MX Series routers support dynamic power management. Starting in Junos OS Release 17.2R1, EX9200 switches support dynamic power management.

The maximum power that each type of MIC consumes is maintained in a static database. The chassis daemon process (`chassisd`), which manages power budgeting for all line cards, uses this data when budgeting power for MICs. MICs are brought online only after the chassis daemon verifies that the worst-case power required for the MICs and the power required for all the online FRUs (Field Replaceable Units: Replaceable or swappable Junos device and device parts) are available in the PEM.

In Junos OS Release 15.1R1, for MX Series routers, dynamic power management for MICs is disabled by default. You can enable the feature by enabling the `mic-aware-power-management` statement at the `[edit chassis]` hierarchy level. When dynamic power management is disabled, the chassis daemon checks for the worst-case power requirement of the MPC and the MICs before allocating power for the MPC.

Whereas, when `mic-aware-power-management` statement is enabled, the chassis daemon considers the power requirement of only the MPCs. The worst-case power consumption by the MICs is not considered while the chassis daemon budgets power for the MPC. Power budgeting for MICs is done only after the MPC is powered on and the MICs come online. Every time you disable or enable dynamic power management, you must restart the chassis or the MPC for the changes to take effect.

In Junos OS Release 17.2R1, for EX9200 switches, dynamic power management for MICs is enabled by default.

Starting from Junos OS Release 17.3R1, for MX10003 routers, mic-aware dynamic power management is enabled by default.

Starting from Junos OS Release 18.2R1, for JNP10K-LC2101 MPC on MX10008 routers, dynamic power management is enabled by default. However, dynamic power management for MICs is not supported on JNP10K-LC2101 because JNP10K-LC2101 is a fixed configuration MPC and supports only built-in PICs.

After you enable the dynamic power management feature, use the `set chassis preserve-fpc-poweron-sequence` configuration mode command to preserve the sequence in which MPCs are powered on. This configuration is required to maintain the order in which the MPCs come online after a router or switch restart.

NOTE: In Junos OS Release 15.1F5 and later, dynamic power management is enabled by default on several MPCs. Models include MPC3E-3D-NG, MPC3E-3D-NG-Q, MPC2E-3D-NG, MPC2E-3D-NG-Q, MPC6E, MPC7E-MRATE, and MPC7E-10G on MX240, MX480, MX960, MX2010, and MX2020 and on MPC8E and MPC9E on MX2010, and MX2020 Universal Routing Platforms.

Understanding Power Management on the PTX5000

IN THIS SECTION

- Power Priority of FPCs | **204**
- Power Zones | **206**
- Power Supply Redundancy | **206**

Starting in Junos OS Release 14.1, the power management feature for PTX5000 routers ensures that at any time, the chassis power requirements do not exceed the available chassis power. The PTX5000 has two PDUs to meet the power requirements of the chassis. Each PDU is capable of providing power to the chassis on its own. In case the power requirement exceeds the individual capacity of a PDU, the required power is provided by both the PDUs and the `No redundant power supply` alarm is triggered. If the system cannot provide power for all the installed FPCs or PICs, the system brings down FPCs or PICs that in can no longer provide power for and the `Insufficient Power - FRU(s) went offline` alarm is raised.

The power management feature provides the following functionality:

- Power management ensures that high-priority FPCs continue to receive power when the system does not have sufficient power to keep all the FPCs online.
- Power management ensures that if a power supply fails, the router can continue to operate normally by keeping high-priority FPCs online and taking low-priority FPCs offline.
- If power supply failure requires power management to power down some components, power management does so by gracefully powering down lower-priority FPCs.

Power management manages power to router components by employing a power budget policy. In its power budget policy, power management:

- Budgets power for each installed router component that requires power. The amount that power management budgets for each component is the maximum power that component might consume under worst-case operating conditions. For example, for the fan tray, power management budgets the amount of power required to run the fans at their maximum speed setting, even if the current fan speed is much lower.
- Manages the router for *N+N* power redundancy, which ensures uninterrupted system operation if one power supply fails.
- Provides power to host subsystem components, such as the Routing Engines, before it provides power to the FPCs.
- Manages the priority of individual FPCs. By assigning different priorities to the FPCs, you can determine which FPCs are more likely to receive power in the event of insufficient power.

Power Priority of FPCs

The power priority of FPCs determines:

- The order in which FPCs are allocated power.
- How power is reallocated if there is a change in power availability or demand in an operating router.

This section covers:

How an FPC's Power Priority Is Determined

Using the CLI, you can assign an explicit power priority to an FPC slot. The power priority is determined by the slot number, with the lowest-numbered slots receiving power first. Thus, if you do not explicitly assign priorities to slots, power priority is determined by slot number, with slot 0 having the highest priority. See Configuring Power-On Sequence to Redistribute the Available Power.

FPC Priority and FPC Power Allocation

When a PTX5000 is powered on, power management allocates power to components according to its power budget policy. After power management has allocated power to the host subsystem components, it allocates the remaining available power to the FPCs. It powers on the FPCs in the configured order of priority until all FPCs are powered on or the available power provided by both the PDUs is exhausted. Thus if available power is exhausted before all FPCs receive power, higher-priority FPCs are powered on while lower-priority FPCs remain powered off.

FPCs that have been taken offline are not allocated power.

> **NOTE**: Because power management does not allocate power to an FPC that has been taken offline, that FPC is brought online only when you commit a configuration. You must explicitly use the `request chassis fpc slot` *`slot-number`* `online` command to bring an FPC online that was taken offline previously.

If an FPC with a high priority in the priority sequence also has high-power requirement, and if the system does not have the required power available, then the lower priority FPCs with lower power requirements are also not powered on. This is to maintain consistency and also avoid powering off of the lower priority FPC when extra power is available. For example, if an FPC that requires 450 W has a higher priority than an FPC that requires 330 W, then the FPC with the lower power requirement (330 W) is also not powered on if the system does not have the required power to power the FPC that requires 450 W.

FPC Priority and Changes in the Power Budget

In an operating router, power management dynamically reallocates power in response to changes in power availability or demand or changes in FPC priority. Power management uses the configured priority on FPC slots to determine how to reallocate power in response to the following events:

- When a new power supply is brought online, FPCs that were powered off because of insufficient power are powered on in the order of priority.
- When a user changes the assigned power priority of one or more FPCs when power is insufficient to meet the power budget, power management reruns the current power budget policy and powers

FPCs on or off based on their priority. As a result, FPCs receive power strictly by the order of priority and previously operating FPCs might no longer receive power.

- When an FPC is installed, Junos OS does not automatically power on and bring the FPC online. This FPC stays in the offline state until the user brings it online through the CLI or by pushing the online button, and only if the available chassis power is more than the budgeted power for this FPC, the FPC becomes operational.

Power Zones

In a PTX5000 equipped with high capacity PDUs and PSMs, there in one common zone that provides power to all FRUs and all FPCs. A high-capacity PDU can support up to eight PSMs and it does not support power zoning, unlike a normal-capacity PDU. All available PDU power is considered as a part of single zone. All PSMs provide power to the common zone. The PSM LEDs on the craft interface are interpreted as described in PTX5000 Craft Interface LEDs. After the PDU upgrade from the normal-capacity PDUs to High-Capacity PDUs, the power management converges all power zones into a single common zone. All FRU power is distributed based on the power available in the common zone.

NOTE: Presence of both normal-capacity PDUs and high-capacity PDUs is referred to as mixed-mode of operation and is supported only during the PDU upgrade.

To cater for the increase in the PIC power consumption, the power manager is enhanced to account for the PIC power separately from the FPC. The priority sequence for the PICs follows the priority sequence for the FPCs. That is, PICs installed in high-priority FPCs are given preference over PICs installed in low-priority FPCs. All PICs on an FPC have the same priority.

NOTE: You cannot mix existing PDUs with the High Capacity DC PDU.

Power Supply Redundancy

By default, power management in PTX5000 routers is configured to manage the power supplies for *N+N* redundancy, by which power supplies are held in reserve for backup if the other power supplies are removed or fail.

When power is insufficient to meet the budgeted power requirements, power management raises alarms as follows:

- With power supply redundancy, when one PSM fails, it does not cause FPCs to go offline. Only the `No redundant power supply alarm` is raised. However, with no redundancy, FPCs can go offline depending on the total chassis power available at that time. When an FPC or PIC goes offline due to insufficient

power, which is indicated by `No power` in the output of the **show chassis fpc** command, then the `Insufficient Power - FRU(s) went offline` alarm is raised. The alarm gets cleared when there is sufficient power to bring up all the FPCs and PICs. The `Insufficient Power - FRU(s) went offline` alarm is raised when PSMs fail, when PSMs are powered off manually, or any time there is insufficient power for the system to power all the FPCs or PICs in the system.

- When power fails or when a PSM is removed, power management:
  - Calculates the total chassis power available from the remaining PSMs for the FPCs.
  - Powers off the FPCs based on the priority depending on the power budget for the FPCs and the FRUs and their configured power-on sequence.

    NOTE: In the scenario where the available power is more than the budgeted power required by the FPC but less than its maximum power, the FPC is taken offline and then brought online, but one or more PICs in that FPC are not online.

- When a new PSM is inserted, power management:
  - Checks the power-on sequence of the FPCs and the PICs and brings any offline PICs online when power is available.
  - Powers on the FPCs based on the FPC's budgeted power and its power-on sequence depending on its priority.
  - Maintains the power for high-priority FPCs and their PICs by taking the low-priority FPCs offline when all the FPCs are brought online, depending on the available power.

Power management clears all alarms when sufficient power is available to meet normal operating and reserved power requirements.

Power Redundancy on SRX5400

The power redundancy feature in SRX5400 supports to manage the high-capacity high line power supplies for 2+2 AC redundancy mode. The power rate is 1167W at low line and 2050W at high line on SRX5400. The 2+2 redundancy mode requires four AC power supplies.

The minimum PSU requirement is now 2 instead of 1 for the PEM alarm to be raised. If you install only 1 high-capacity high line AC, a major alarm is raised.

For more information about power supply on SRX5400 refer to SRX5400 Services Gateway AC Power Supply Specifications.

T4000 Power Management Overview

Starting with Junos OS Release 12.3, the power management feature is enabled on a Juniper Networks T4000 Core Router. This feature enables you to limit the overall chassis output power consumption. That is, this feature enables you to limit the router from powering on a Flexible PIC Concentrator (FPC) when sufficient output power is not available to power on the FPC during booting or normal operation.

The power management feature is enabled only when six input feeds with 40 amperes (A) each or four input feeds with 60 A each is configured on the router. The power management feature is *not* enabled for any other input feed--current combination. When the power management feature is *not* enabled, Junos OS tries to power on all the FPCs connected to the router.

CAUTION: : If you do not configure the power management feature and the maximum power draw is exceeded by the router during booting or normal operation, FPCs' states might change from Online to Offline or Present, some traffic might drop, or the interfaces might flap.

TIP: Interface flapping occurs when a router alternately announces the state of the interface to be as *up* and *down* in quick sequence.

After you connect the input feeds to the router, you must configure the number of input feeds connected to the router and the amount of current received at the input feeds. Use the `feeds` statement and the `input current` statement at the `[edit chassis pem]` hierarchy level to configure the number of input feeds and the amount of current received at each input feeds, respectively.

NOTE: You can connect three 80 A DC power cables to the six-input DC power supply by using terminal jumpers. When you do this, ensure that you configure the `feeds` statement to have the value `6` and the `input current` statement to have the value `40`. If these configurations are not set, the power management feature is *not* enabled and, therefore, Junos OS tries to power on all the FPCs connected to the router.

When the power management feature is enabled, FPCs connected to the router are powered on based on the power received by the router. If the router receives sufficient power to power on all the FPCs connected to the router, all the FPCs are powered on. If sufficient power is not available, Junos OS limits the number of FPCs brought online. That is, Junos OS uses the total available chassis output power as a factor to decide whether or not to power on an FPC connected to the router.

Of all the supported FPCs of a T4000 router, the T1600 Enhanced Scaling FPC4 (model number: T1600-FPC4-ES) has the greatest power requirement.Table 30 on page 209 compares the FPC connection

limits between a six-input feed 40 A connection and a four-input feed 60 A connection when power management is enabled and T1600-FPC4-ES is connected to router.

Table 30: FPC Connection Limit Comparison

Six Input Feeds with 40 A Connection	Four Input Feeds with 60 A Connection
When T1600-FPC4-ES is *not* connected: • All eight FPC slots can be brought online.	When T1600-FPC4-ES is *not* connected: • A maximum of seven other FPCs can be brought online. That is, only seven slots out of the eight FPC slots can be brought online.
When only one T1600-FPC4-ES is connected: • A maximum of seven other FPCs can be brought online. That is, only seven slots out of the eight FPC slots can be brought online.	When only one T1600-FPC4-ES is connected: • A maximum of six other FPCs can be brought online. That is, only six slots out of the eight FPC slots can be brought online.
When only T1600-FPC4-ES FPCs are connected: • A maximum of six T1600-FPC4-ES FPCs can be brought online.	More than one T1600-FPC4-ES *cannot* be brought online.

NOTE:

- When the power management feature is enabled, FPC power-on consistency is not maintained across router reboots. That is, the same set of FPCs that were powered on before a reboot might not be powered on after the reboot. Before the router reboot, the FPCs are powered on according to their insertion order in the chassis. After the reboot, the FPCs are powered on according to the FRU power-on sequence configured in the `fru-poweron-sequence` statement at the `[edit chassis]` hierarchy level. If the FRU power-on sequence is not configured, Junos OS uses the ascending order of the slot numbers of the FPCs as the sequence to power on the FPCs.
- Removal of any online FPC from the chassis does not change the state of any other FPC and does not trigger the power management feature to power on the FPCs that were not powered on initially because of the lack of sufficient power. When any online FPC is removed from the chassis, if you need to trigger the power management feature to re-evaluate the

situation, you need to reboot or restart the chassis. Alternatively, you can make a configuration change at the [edit chassis] hierarchy level and then issue the commit command to commit the changes made at the [edit chassis] hierarchy level. The power management feature to re-evaluates the situation when a configuration change is committed at the [edit chassis] hierarchy level.

Configuring the Six-Input DC Power Supply on T Series Routers

IN THIS SECTION

- Configuring the Six-Input DC Power Supply on an LCC Router in a Routing Matrix | **211**
- Configuring the Six-Input DC Power Supply on T640 and T1600 Routers | **211**
- Configuring the Six-Input DC Power Supply on T4000 Routers | **212**

By default, the six-input DC power supply is configured to have all the six input feeds connected. You can also choose to provide four or five input feeds to the six-input DC power supply. When providing four or five input feeds on standalone routers, you need to configure the feeds statement at the [edit chassis pem] hierarchy level. When providing four or five input feeds to an LCC router in a routing matrix, you need to configure the feeds statement at the [edit chassis lcc *lcc-number* pem] hierarchy level.

Starting with Junos OS Release 12.3, the power management feature is enabled on T4000 routers with six-input DC power supply. The power management feature is enabled only when six input feeds with 40 amperes (A) each or four input feeds with 60 A each is configured on the router. To do this, you need to configure the feeds and input-current statements at the [edit chassis pem] hierarchy level.

NOTE:

- Before configuring input feeds for your router, see the *T640 Core Router Hardware Guide*, *T1600 Core Router Hardware Guide*, or *T4000 Core Router Hardware Guide* for special considerations and for the number of input feeds supported by the router.
- The value assigned to the feeds statement must be equal to the number of input feeds provided to the power supply. Else, an alarm message is generated to indicate the mismatch.

The following procedures describe how to configure the six-input DC power supply on different routers:

Configuring the Six-Input DC Power Supply on an LCC Router in a Routing Matrix

To configure the six-input DC power supply on an LCC router in a routing matrix:

1. At the `[edit chassis lcc lcc-number pem]` hierarchy level, configure the `feeds` statement with the number of input feeds provided to the power supply.

```
[edit chassis lcc lcc-number pem]
user@host# set feeds number-of-input-feeds
```

For example:

```
[edit chassis lcc 1 pem]
user@host# set feeds 5
```

NOTE: All power supplies in the router must use the same number of inputs feeds.

2. Verify the configuration by using the `show` command at the `[edit chassis]` hierarchy level:

```
[edit chassis lcc 1 pem]
user@host# show
pem {
    feeds 5;
}
```

Configuring the Six-Input DC Power Supply on T640 and T1600 Routers

To configure the six-input DC power supply on a standalone T640 or T1600 router:

1. At the `[edit chassis pem]` hierarchy level, configure the `feeds` statement with the number of input feeds provided to the power supply.

```
[edit chassis pem]
user@host# set feeds number-of-input-feeds
```

For example:

```
[edit chassis pem]
user@host# set feeds 5
```

NOTE: All power supplies in the router must use the same number of inputs feeds.

2. Verify the configuration by using the `show` command at the `[edit chassis]` hierarchy level:

```
[edit chassis]
user@host# show
pem {
    feeds 5;
}
```

Configuring the Six-Input DC Power Supply on T4000 Routers

To configure the six-input DC power supply on a T4000 router:

1. At the `[edit chassis pem]` hierarchy level, configure the `feeds` statement with the number of input feeds provided to the power supply.

```
[edit chassis pem]
user@host# set feeds number-of-input-feeds
```

For example:

```
[edit chassis pem]
user@host# set feeds 4
```

NOTE: All power supplies in the router must use the same number of inputs feeds.

2. Configure the input current received by the router.

```
[edit chassis pem]
user@host# set input-current amps-in-each-feed
```

For example, if the router receives 60 A of input current:

```
[edit chassis pem]
user@host# set input-current 60
```

NOTE: You can connect three 80 A DC power cables to six-input DC power supply by using terminal jumpers. When you do this, ensure that you set the value of the `feeds` statement to `6` and that of the `input current` statement to `40`. If these configurations are not set, the power management feature is *not* enabled. For more information about the power management feature, see T4000 Power Management Overview.

3. Verify the configuration by using the `show` command at the `[edit chassis]` hierarchy level:

```
[edit chassis]
user@host# show
pem {
    feeds 4;
    input-current 60;
}
```

Redistributing the Available Power by Configuring Power-On Sequence

Routers running on Junos OS Release 10.0 and later support an enhanced AC Power Entry Module (PEM) to provide the necessary power infrastructure to support up to twelve higher-capacity DPCs with higher port density and slot capacity. To support the cooling requirements for the enhanced AC PEMs, the routers support enhanced fan trays and fans.

The default behavior for MPC power-on sequence is slot number based, that is, slot 0 is brought online first followed by slot 1, slot 2 up to slot 11. For the scenarios, where it is running a mix of high capacity line cards (for core facing), and low capacity line cards (for access facing) in their system, you can use the "fru-poweron-sequence" on page 301 option to manually set the MPC power on sequence and hence

ensure that the more important core facing line cards are brought online first irrespective of which slots these are in. This approach provides fine control over deterministically bringing up MPCs, howeverConfiguring Power-On Sequence to Redistribute the Available Powerr, it is heavy on configuration and entails to follow the discipline in slot to MPC mapping across all the systems.

The Junos OS enables you to configure the power-on sequence for the DPCs on an MX Series router chassis containing the new AC PEM. This enables you to redistribute the available power to the DPCs based on your requirements and the calculated power consumption of the DPCs. To configure the power-on sequence, refer to related information.

SEE ALSO

> Configuring Power-On Sequence to Redistribute the Available Power

Configuring Power-On Sequence to Redistribute the Available Power

You can configure the power-on sequence for the Flexible PIC Concentrators (FPCs) on MX, PTX, and T routers. This configuration enables you to redistribute the available power to the FPCs on the basis of your requirements and the calculated power consumption of the FPCs.

To configure the power-on sequence:

1. At the `[edit chassis]` hierarchy level, configure the `fru-poweron-sequence` statement indicating the order in which the FPCs need to be powered on.

   ```
   [edit chassis]
   user@host# set fru-poweron-sequence fru-poweron-sequence
   ```

   For example:

   ```
   [edit chassis]
   user@host# set fru-poweron-sequence “0 2 1”
   ```

2. Verify the configuration by using the `show` command at the `[edit chassis]` hierarchy level:

   ```
   [edit chassis]
   ```

```
user@host# run show chassis power sequence
fru-poweron-sequence "0 2 1";
```

NOTE:

- If the configured sequence contains invalid numbers, Junos OS considers only the valid numbers in the sequence. The invalid numbers are silently discarded.
- If the power-on sequence is not configured by including the `fru-poweron-sequence` statement, Junos OS uses the ascending order of the slot numbers of the FPCs as the sequence to power on the FPCs.
- Issue the "show chassis power" on page 1503 command to view power limits and usage details for the FPCs.

SEE ALSO

fru-poweron-sequence | 301

Configuring Voltage Level Monitoring of FPCs

IN THIS SECTION

- Enabling Voltage Failure Errors on the FPC | 216
- Disabling Voltage Failure Errors on the FPC | 216

You can monitor the voltage on the flexible PIC concentrator (FPC) at regular intervals. When the voltage falls below 10%, the FPC is offlined.

The faulty FPC is monitored at 500ms intervals. The output of the `show chassis fpc` command shows `Power Failure` for the faulty FPC. The FPC remains in powered down state until the voltage level is normal again.

Enabling Voltage Failure Errors on the FPC

`fpc-nmi-volt-fail-knob` controls the behavior of the FPC after detecting voltage failure, and to online or offline the FPC based on the voltage level. To enable monitoring the voltage level on the FPC:

1. Navigate to the `[edit chassis]` hierarchy level.
2. Include the `set chassis fpc-nmi-volt-fail-knob enable` statement to enable voltage monitoring on the FPC.

```
[edit chassis]
    {
        fpc-nmi-volt-fail-knob enable;
    }
```

Disabling Voltage Failure Errors on the FPC

To disable monitoring the voltage level on the FPC:

1. Navigate to the `[edit chassis]` hierarchy level.
2. Include the `set chassis fpc-nmi-volt-fail-knob disable` statement to disable voltage monitoring on the FPC.

```
[edit chassis]
    {
        fpc-nmi-volt-fail-knob disable;
    }
```

Overriding the Default Maximum Power (Junos OS Evolved)

IN THIS SECTION

- Overriding the Default Maximum Power (PTX10001-36MR) | **217**
- Overriding the Default Maximum Power (PTX10008) | **218**

On the PTX10001-36MR router, you can override the maximum power value of the power supply module (PSM) by specifying a lesser power value. Similarly, on the PTX10008 router, you can override the default power budget allocated to the line card by specifying a power value.

Overriding the Default Maximum Power (PTX10001-36MR)

You can override the maximum power value of a power supply module (PSM), if you need to deploy the PTX10001-36MR router in an environment that does not require the maximum power capacity (3000 W) of the PSM. You can use the command `set chassis psm max-power` to override the maximum power capacity of the PSM. Using this configuration, you can specify a value that is less than the maximum capacity of the PSM, and then monitor the real-time power consumption against the configured power value.

See the following example to know how to override the default power in PTX10001-36MR:

```
user@router# set chassis psm max-power 1600
user@router# commit
```

If the above configuration is set, the system power capacity is shown as 1600W. See the following `show chassis power detail` output:

```
user@router# show chassis power detail

Chassis Power        Voltage(V)    Power(W)

Total Input Power                    937
  PSM 0
    Input 1             229          391
    Output            12.03        305.44
    Capacity           1600 W (maximum 3000 W)
  PSM 1
    Input 1               0          546
    Output            12.04        515.08
    Capacity           1600 W (maximum 3000 W)

Item                 Used(W)
  Routing Engine 0       25
  CB 0                    5

System:
  Zone 0:
```

```
    Capacity:          3200 W (maximum 6000 W)
    Actual usage:      937 W
Total system capacity: 3200 W (maximum 6000 W)
```

NOTE: If the power consumption of the PTX10001-36MR router exceeds the threshold you configured using the `set chassis psm max-power` command, the software does not take any corrective action against the breach; and the router might still encounter a power failure.

If the power consumption exceeds the configured threshold, the system raises a chassis alarm, as shown in the following example:

```
user@router# show system alarms

Mar 15 12:51:30
2 alarms currently active
Alarm time               Class  Description
2020-03-15 12:50:52 UTC  Minor  Power consumption is critical
```

Overriding the Default Maximum Power (PTX10008)

On the PTX10008 router, during the system startup, the power management software by default takes the maximum power mentioned for each field replaceable unit (FRU) and makes the power calculations based on this number. However, you can override the default power budget allocated to the line card by specifying a power value (in watts). You can use the command `set chassis fpc` *`fpc-slot`* `max-power` *`watts`* to override the default power. You can use the command `show chassis fpc detail` to view the maximum power consumption by a line card.

You can also disable the power management on PTX10008 by using the command `set chassis no-power-budget`. If you disable the power management on PTX10008, the system does not move any of the FRUs to offline state in case of insufficient power. Instead, the system keeps all the FRUs powered on by default. However, in case of a power shortage, a power redundancy alarm is raised as shown in the following example.

```
user@router> show system alarms

1 alarm currently active

Alarm time Class Description
```

```
2019-07-25 21:16:25 UTC Major chassis No Redundant Powe
```

SEE ALSO

maximum-power

Powering Off Packet Forwarding Engines

You can power on or power off the Packet Forwarding Engines in a running system, or keep a Packet Forwarding Engine powered off when the FPC comes online. The following are a couple of scenarios in which this feature is used.

- When the Packet Forwarding Engine ASIC is malfunctioning.
- To conserve power in case the deployment does not require the full capacity of the system.

To power off a Packet Forwarding Engine, use the following steps:

user@host# **set chassis fpc *slot-number* pfe *pfe-id* power on**

user@host# **commit**

You need to apply this configuration to both the Packet Forwarding Engines in an ASIC to be able to commit the configuration.

NOTE: On MX series routers with MPC10E-15C-MRATE, you can power off or power on only the Packet Forwarding Engine 2. The Packet Forwarding Engines 0 and 1 do not support this command. On the MPC10E-15C-MRATE, operating the Packet Forwarding Engine 2 requires the Packet Forwarding Engines 0 and 1 to be functional. You can use the command `show chassis fpc` *`fpc-lot`* `detail` to view the Packet Forwarding Engine power ON/OFF status and bandwidth for the individual Packet Forwarding Engines in the MPC10E-15C-MRATE.

You can use the show chassis fpc fpc-slot detail command to view the Packet Forwarding Engine power on/off configuration status. See an example below:

```
user@router> show chassis fpc 0 detail
Slot 0 information:
  State                           Online
```

```
  Temperature                    41 degrees C / 105 degrees F (PFE_24-HBM)
  Temperature                    44 degrees C / 111 degrees F (PFE_25-HBM)
  Temperature                    43 degrees C / 109 degrees F (PFE_26-HBM)
  Temperature                    41 degrees C / 105 degrees F (PFE_27-HBM)
  Temperature                    40 degrees C / 104 degrees F (PFE_28-HBM)
  Temperature                    40 degrees C / 104 degrees F (PFE_29-HBM)
  Temperature                    38 degrees C / 100 degrees F (PFE_30-HBM)
  Temperature                    39 degrees C / 102 degrees F (PFE_31-HBM)
  Start time                        2020-10-28 00:46:17 PDT
  Uptime                            1 day, 1 hour, 34 minutes, 48 seconds
  Max power consumption          825 Watts

PFE Information:

  PFE  Power ON/OFF  Bandwidth         SLC
  0    On            500
  1    On            500
  2    On            500
  3    On            500
  4    On            500
  5    On            500
  6    On            500
  7    On            500
```

Release History Table

Release	Description
18.2R1	Starting from Junos OS Release 18.2R1, for JNP10K-LC2101 MPC on MX10008 routers, dynamic power management is enabled by default.
17.3R1	Starting from Junos OS Release 17.3R1, for MX10003 routers, mic-aware dynamic power management is enabled by default.
17.2R1	Starting in Junos OS Release 17.2R1, EX9200 switches support dynamic power management.
17.2R1	In Junos OS Release 17.2R1, for EX9200 switches, dynamic power management for MICs is enabled by default.
15.1R1	Starting in Junos OS Release 15.1R1, MX Series routers support dynamic power management.

15.1R1	In Junos OS Release 15.1R1, for MX Series routers, dynamic power management for MICs is disabled by default.
15.1F5	In Junos OS Release 15.1F5 and later, dynamic power management is enabled by default on several MPCs.
14.1	Starting in Junos OS Release 14.1, the power management feature for PTX5000 routers ensures that at any time, the chassis power requirements do not exceed the available chassis power.

RELATED DOCUMENTATION

Configuring Ambient Temperature | 92

fru-poweron-sequence | 301

Configuring Network Services Mode

IN THIS SECTION

- Network Services Mode Overview | 221
- Configuring Junos OS to Run a Specific Network Services Mode in MX Series Routers | 226
- Feature Restrictions on MX Series Routers Running in Ethernet Network Services Mode or Enhanced Ethernet Network Services Mode | 226
- Limiting the Maximum Number of Logical Interfaces on MX Series Routers With MS-DPCs in Enhanced IP Network Services Mode | 228

Network Services Mode Overview

IN THIS SECTION

- Network Services on SCBE2 | 224

A network services mode defines how the router chassis recognizes and uses certain modules. You can configure network services modes on MX Series 5G Universal Routing Platforms and on T4000 Core Routers with Type 5 FPCs.

On MX Series 5G Universal Routing Platforms, you can configure IP Network Services mode, Enhanced IP Network Services mode, Ethernet Network Services mode, or Enhanced Ethernet Network Services mode.

You can use either Enhanced IP Network Services mode or Enhanced Ethernet Network Services mode to improve the scaling and performance specific to filters in a subscriber access network that uses statically configured subscriber interfaces. For more information about using enhanced network services modes with firewall filters, see *Firewall Filters and Enhanced Network Services Mode Overview*.

On MX240, MX480, and MX960 routers, the MPC5E and MPC7E line cards power on only if the configured network services mode is `enhanced-ip` or `enhanced-ethernet`. All other MPCs work with any of the network services modes. MX2010 and MX2020 support only `enhanced-ip` and `enhanced-ethernet` network services modes.

NOTE: If Dense Port Concentrators (DPCs) in Ethernet Network Services mode or Enhanced Ethernet Network Services mode are up and running, you cannot configure the system for IP Network Services mode. You must first disable any Ethernet Network Services mode DPCs before switching to IP Network Services mode.

NOTE: When a chassis starts without any functioning FPCs, the Network Services mode defaults to IP Network Services. When the first FPC comes online, the configured Networks Services mode is applied.

NOTE: Starting from Junos OS Release 13.3, you can configure the Enhanced IP Network Services mode and Enhanced Ethernet Network Services mode on MX240, MX480 and MX960 routers with an SCBE2. Specify the `enhanced-ip` option or the `enhanced-ethernet` option at the `[edit chassis network-services]` hierarchy level.

You can configure T4000 Core Routers with Type 5 FPCs to run in Enhanced Network Services mode to enable improved virtual private LAN service (VPLS) MAC address learning. For more information, see "enhanced-mode" on page 272.

Table 31 on page 223 explains how different modules function when the MX Series 5G Universal Routing Platform chassis is configured to run in different network services modes.

Table 31: Network Services Mode Functions

Configuration Upon Boot or Configuration Change	Module Function
IP Network Services mode (default; upon boot)	All modules except DPCE-X and DPCE-X-Q are powered on. Starting with Junos OS Release 15.1, you can limit the maximum number of logical interfaces on MX Series routers with MS-DPCs to 64,000 for enhanced IP network services mode. To do this, include the `limited-ifl-scaling` option with the `network-services enhanced-ip` statement at the `[edit chassis]` hierarchy level. Using the `limited-ifl-scaling` option prevents any collision of logical interface indices that can occur in a scenario in which you enable the Enhanced IP Network Services mode on the router which also contains an MS-DPC.
Ethernet Network Services mode (upon boot)	All modules are powered on. However, operating in Ethernet Network Services mode restricts certain BGP protocol functions and does not support Layer 3 VPN, unicast RPF, and source and destination class usage (SCU and *DCU*) functions. In addition, the number of externally configured filter terms is restricted to 64K. Ethernet Network Services mode provides support for only Layer 2.5 functions.
Enhanced IP Network Services mode (upon boot)	Only MPCs, MS-MPCs, and MS-DPCs are powered on. **NOTE**: Only Multiservices DPCs (MS-DPCs) and MS-MPCs are powered on with the enhanced network services mode options. No other DPCs function with the enhanced network services mode options.

Table 31: Network Services Mode Functions *(Continued)*

Configuration Upon Boot or Configuration Change	Module Function
Enhanced Ethernet Network Services mode (upon boot)	Only MPCs, MS-MPCs, and MS-DPCs are powered on. All restrictions for operating in Ethernet Network Services mode apply. **NOTE**: Only Multiservices DPCs (MS-DPCs) and MS-MPCs are powered on with the enhanced network services mode options. No other DPCs function with the enhanced network services mode options.
Change from IP Network Services mode to Ethernet Network Services mode	DPCE-X and DPCE-X-Q modules are powered on. No reboot is required. No impact to MPCs or MS-DPCs.
Change from Ethernet Network Services mode to IP Network Services mode	Invalid modification. No commit occurs. A warning message indicates if any FPCs (along with their slot location) must be offline before switching to other network services. No impact to MPCs or MS-DPCs.
Change from Enhanced Ethernet Network Services mode to Enhanced IP Network Services mode.	Reboot is required.
Change from Enhanced IP Network Services mode to Enhanced Ethernet Network Services mode	Reboot is required.
Change from IP Network Services mode to Enhanced IP Network Services mode	System reboot is required (PFE/FPCs)
Change from Ethernet Network Services mode to Enhanced Ethernet Network Services mode	Reboot is required.

For details on the Layer 2.5 support for Ethernet Network Services mode, see " Restricted Software Features in Ethernet Network Services Mode" on page 226.

Network Services on SCBE2

The following scenarios are to be noted when you use an MX Series router with an SCBE2:

- You must configure the `set chassis network-services (enhanced-ip | enhanced-ethernet)` configuration command and reboot the router to bring up the FPCs on the router. However, after the router reboots, the MS DPC, the MX FPC, and the ADPC are powered off.
- All the FPCs and DPCs in the router are powered off when you reboot the router without configuring either the enhanced-ip option or the enhanced-ethernet option at the `[edit chassis network-services]` hierarchy level.
- You must reboot the router when you configure or delete the enhanced-ip option or the enhanced-ethernet option at the `[edit chassis network-services]` hierarchy level. The following warning message, which prompts you to reboot the router, is displayed when you configure or delete the enhanced-ip or the enhanced-ethernet configuration statement at the `[edit chassis network-services]` hierarchy level.

```
'chassis'
WARNING: Chassis configuration for network services has been changed. A
system reboot is mandatory. Please reboot the system NOW. Continuing without
a reboot might result in unexpected system behavior.
commit complete
```

- Starting with Junos OS Release 14.2, you must perform a commit synchronization of the settings between dual Routing Engines under some specific conditions. If you configure or remove the `enhanced-ip` or the `enhanced-ethernet` option at the `[edit chassis network-services]` hierarchy level on one of the Routing Engines on a router that contains dual Routing Engines, perform commit synchronization of the settings between the two Routing Engines by entering the `commit synchronize` command at the `[edit system]` hierarchy level. In addition, you must reboot all of the Routing Engines simultaneously (using the CLI command `request system reboot both-routing-engines`) when the enhanced IP network services mode is changed. The reboot is performed to prevent any unexpected system behavior.

NOTE: Dynamic multicast replication mode is supported on SCBE2. Static multicast replication mode is not supported on SCBE2.

NOTE: If a route's next hop is a unicast next hop through integrated routing and bridging (IRB) and the corresponding MAC address is learned over a label-switched interface (LSI), the IRB derives the Layer 2 information from the indirect next hop for the LSI. If you configure the `load-balance per-packet` policy statement, the indirect next hop of the LSI points to a unilist, which has all the member links to load balance the packets toward the MPLS cloud. You should configure

the `enhanced-ip` option to enable the unicast next hop for IRB to use the unilist as the Layer 2 forwards next hop and load balance the packets.

Configuring Junos OS to Run a Specific Network Services Mode in MX Series Routers

You can configure MX Series 5G Universal Routing Platforms to run in different network services modes. Each network services mode defines how the chassis recognizes and uses certain modules.

To configure the network services mode of an MX Series router:

1. Access the chassis hierarchy.

```
[edit]
user@host# edit chassis
```

2. Specify the network services mode that you want the router to use.

```
[edit chassis]
user@host# set network-services service
```

Feature Restrictions on MX Series Routers Running in Ethernet Network Services Mode or Enhanced Ethernet Network Services Mode

Table 32 on page 227 lists Junos OS feature restrictions when running in Ethernet Network Services mode or Enhanced Ethernet Network Services mode.

Table 32: Restricted Software Features in Ethernet Network Services Mode

Software Feature	Restriction in Ethernet Network Services Mode
BGP	• Data plane support applies only to Ethernet and MPLS. • BGP only supports the following address families: inet labeled-unicast, inet unicast, inet-vpn unicast, l2vpn, and route-target.
L3VPN	Layer 3 VPNs are supported. You can only include loopback interfaces in the Virtual Routing and Forwarding (VRF) instance. A maximum of two VRFs are supported. Each VRF can handle up to 10,000 routes. The `ping mpls l3vpn` operational mode command is also supported.
Unicast RPF	Unicast reverse-path forwarding is disabled.
Source and destination class usage (SCU and DCU)	Source and Destination Class Usage is disabled.
Filter terms	The number of externally configured filter terms is restricted to 64 KB.
Prefixes	The number of supported prefixes is restricted to 32 K.

NOTE: MX Series routers supporting Layer 2.5 functions work as full-scale routers and they support interior gateway protocol (IGP), multicast routing protocols, and other routing features. The restrictions applicable on these routers are that the number of routes is limited and you cannot use BGP.

Limiting the Maximum Number of Logical Interfaces on MX Series Routers With MS-DPCs in Enhanced IP Network Services Mode

Starting in Junos OS Release 15.1, you can impose a limitation on the maximum number of logical interfaces on MX Series routers with MS-DPCs to be 64,000 for enhanced IP network services mode. To impose that limit, include the `limited-ifl-scaling` option with the `network-services enhanced-ip` statement at the `[edit chassis]` hierarchy level. When network-services is configured as enhanced IP mode, the kernel increases the total number of logical interfaces to 256,000. However, MS-DPC line cards are not capable of handling more than 64,000 logical interfaces globally on a router. Using the `limited-ifl-scaling` option prevents the problem of a collision of logical interface indices that can occur in a scenario in which you enable enhanced IP services mode and an MS-DPC is also present in the same chassis. To support MS-DPCs with enhanced IP mode on the chassis, you must limit the maximum logical interfaces as 64,000, which is performed with the `limited-ifl-scaling` option.

To define the maximum number of logical interfaces on MX Series routers with MS-DPCs as 64,000, include the `limited-ifl-scaling` option with the `network-services enhanced-ip` statement at the `[edit chassis]` hierarchy level.

```
[edit chassis]
network-services enhanced-ip limited-ifl-scaling;
```

When the default network services mode on a router is IP services mode (by using the `network-services ip` statement), the maximum logical interfaces is set as 64,000. When you change the network services mode as enhanced IP, the chassis process sets a general configuration (GENCFG) script to the kernel that increases the maximum logical interfaces as 256,000. When you configure the `limited-ifl-scaling` option with the `network-services enhanced-ip` statement, the chassis process does not generate a message to the kernel to increase the number of logical interfaces. As a result, the kernel retains the maximum number of logical interfaces as 64,000.

If your router chassis is previously configured with enhanced IP services mode and without the `limited-ifl-scaling` option set, and if you later configure the setting to limit the logical interfaces for MS-DPCs, the number of logical interfaces remains as 256,000 and it is not reduced. A cold reboot of the router must be performed in such a case to reduce the logical interfaces after you set the `limited-ifl-scaling` option with the `network-services enhanced-ip` statement. When you enter the `limited-ifl-scaling` option, none of the MPCs are moved to the offline state. All the optimization and scaling capabilities supported with enhanced IP mode apply to enhanced IP mode with the limitation of IFL scaling functionality.

Release History Table

Release	Description
15.1	Starting with Junos OS Release 15.1, you can limit the maximum number of logical interfaces on MX Series routers with MS-DPCs to 64,000 for enhanced IP network services mode.
15.1	Starting in Junos OS Release 15.1, you can impose a limitation on the maximum number of logical interfaces on MX Series routers with MS-DPCs to be 64,000 for enhanced IP network services mode.
14.2	Starting with Junos OS Release 14.2, you must perform a commit synchronization of the settings between dual Routing Engines under some specific conditions.
13.3	Starting from Junos OS Release 13.3, you can configure the Enhanced IP Network Services mode and Enhanced Ethernet Network Services mode on MX240, MX480 and MX960 routers with an SCBE2.

RELATED DOCUMENTATION

Firewall Filters and Enhanced Network Services Mode Overview

Junos OS Subscriber Management and Services Library

Configuring Enhanced IP Network Services for a Virtual Chassis

enhanced-mode (Network Services) | **272**

network-services | **322**

CHAPTER 7

Packet Scheduling Mode

Enabling an M160 Router to Operate in Packet Scheduling Mode | 231

Enabling an M160 Router to Operate in Packet Scheduling Mode

By default, packet scheduling is disabled on M160 Routers. To configure a router to operate in packet-scheduling mode, include the `packet-scheduling` statement at the `[edit chassis]` hierarchy level:

```
[edit chassis]
packet-scheduling;
```

To explicitly disable the `packet-scheduling` statement, include the `no-packet-scheduling` statement at the `[edit chassis]` hierarchy level:

```
[edit chassis]
no-packet-scheduling;
```

When you enable packet-scheduling mode, the Packet Director application-specific integrated circuit (ASIC) schedules packet dispatches to compensate for transport delay differences. This preserves the interpacket gaps as the packets are distributed from the Packet Director ASIC to the Packet Forwarding Engine.

Whenever you change the configuration for packet-scheduling, the system stops all SFMs and FPCs and restarts them in the new mode.

NOTE: Packet scheduling is available for M160 routers only.

RELATED DOCUMENTATION

Configuring the Junos OS to Support Eight Queues on IQ Interfaces for T Series and M320 Routers

8
CHAPTER

OSS Mapping

Configuring OSS Mapping | 233

Configuring OSS Mapping

IN THIS SECTION

- Configuring OSS Mapping to Represent a T4000 Chassis as a T1600 or a T640 Chassis | 233
- Example: Configuring a T4000 Chassis to Represent a T640 Chassis | 235

Configuring OSS Mapping to Represent a T4000 Chassis as a T1600 or a T640 Chassis

IN THIS SECTION

- Configuring T4000 Chassis as a T1600 Chassis | 233
- Configuring T4000 Chassis as a T640 Chassis | 234
- Disabling the OSS Mapping Feature | 234

You can configure the operations support systems (OSS) mapping feature to represent a T4000 chassis as a T1600 chassis or a T640 chassis. This topic includes the following tasks:

Configuring T4000 Chassis as a T1600 Chassis

To configure a T4000 chassis as a T1600 chassis:

1. In configuration mode, go to the `[edit chassis]` hierarchy level.

```
[edit]
user@T4000# edit chassis
```

2. Configure the OSS mapping feature to map the T4000 chassis to a T1600 chassis.

```
[edit chassis]
user@T4000# set oss-map model-name t1600
```

Configuring T4000 Chassis as a T640 Chassis

To configure a T4000 chassis as a T640 chassis:

1. In configuration mode, go to the `[edit chassis]` hierarchy level.

```
[edit]
user@T4000# edit chassis
```

2. Configure the OSS mapping feature to map the T4000 chassis to a T640 chassis.

```
[edit chassis]
user@T4000# set oss-map model-name t640
```

NOTE: By default, the OSS mapping feature is disabled.

Disabling the OSS Mapping Feature

To disable the OSS mapping feature:

1. In configuration mode, go to the `[edit chassis]` hierarchy level.

```
[edit]
user@T4000# edit chassis
```

2. Disable the OSS mapping feature that maps a T4000 chassis to a T640 chassis.

```
[edit chassis]
user@T4000# delete oss-map model-name t640
```

3. Disable the OSS mapping feature that maps a T4000 chassis to a T1600 chassis.

```
[edit chassis]
user@T4000# delete oss-map model-name t1600
```

NOTE:

- The `set chassis oss-map model-name t640 | t1600` command is applicable only on T4000 routers. You must explicitly set this command when a T1600 chassis or a T640 chassis is upgraded to a T4000 chassis.
- You can execute the `set chassis oss-map model-name t640` command or the `set chassis oss-map model-name t1600` command if the OSS is compatible with either the T640 chassis or the T1600 chassis, respectively.

Example: Configuring a T4000 Chassis to Represent a T640 Chassis

IN THIS SECTION

- Requirements | 235
- Overview | 236
- Configuring the T4000 Chassis to Represent a T640 Chassis | 236
- Verification | 237

This example shows how to configure OSS mapping feature to represent a T4000 chassis as a T640 chassis. You can extend this concept to configure a T4000 chassis to represent as a T1600 chassis as well.

Requirements

This example uses the following hardware and software components:

- One T4000 router
- Junos OS Release 12.3R3, 13.1R2, 13.2R1, or later

Overview

Operations support systems (OSS) is used by service providers to maintain their networks. When a new router is added or removed from the network, the OSS must be updated to reflect the changes. This process is tedious and time-consuming.

When a T1600 chassis or a T640 chassis is upgraded to a T4000 chassis, the OSS identifies the new chassis as a new networking element and follows a tedious process of qualifying it for the customer's network. The *OSS mapping feature* helps avoid this scenario.

Using the OSS mapping feature, you can map a T4000 chassis to a T1600 chassis or to a T640 chassis with the `set chassis oss-map model-name t640|t1600` configuration command. This configuration command overrides the chassis model name, so that the OSS recognizes the chassis as a known chassis and proceeds without any requalification.

NOTE:

- The `set chassis oss-map model-name t640 | t1600` command is applicable only on T4000 routers. You must explicitly set this command when a T1600 chassis or a T640 chassis is upgraded to a T4000 chassis.
- You can execute the `set chassis oss-map model-name t640` command or the `set chassis oss-map model-name t1600` command, if the OSS is compatible with either the T640 chassis or the T1600 chassis, respectively.

Configuring the T4000 Chassis to Represent a T640 Chassis

IN THIS SECTION

- Procedure | 236

Procedure

Step-by-Step Procedure

To configure the T4000 chassis to represent a T640 chassis by using the OSS mapping feature:

1. In configuration mode, go to the `[edit chassis]` hierarchy level.

```
[edit]
user@T4000# edit chassis
```

2. Configure the OSS mapping feature to map the T4000 chassis to a T640 chassis.

```
[edit chassis]
user@T4000# set oss-map model-name t640
```

Verification

IN THIS SECTION

- Verifying the OSS Mapping Feature | 237
- Verifying the OSS Mapping Feature on SNMP MIBs | 239

Verifying the OSS Mapping Feature

Purpose

To verify that the OSS mapping feature is working on a T4000 router.

Action

Run the show chassis operational command and verify that the configured known chassis name is displayed when the T4000 chassis is mapped to a T640 chassis.

- Run the `show chassis hardware` operational command:

  show chassis hardware

```
user@T4000> show chassis hardware
Hardware inventory:
Item             Version  Part number  Serial number     Description
Chassis                                JN11B3892AHA      T640
Midplane         REV 01   710-027486   RC9848            T-series Backplane
```

```
FPM GBUS         REV 13   710-002901   BBAG5143          T640 FPM Board
FPM Display      REV 04   710-021387   BBAL2705          T1600 FPM Display
CIP              REV 06   710-002895   BBAL3705          T-series CIP
PEM 1            REV 03   740-036442   VJ00054           Power Entry Module 6x60
SCG 0            REV 18   710-003423   BBAJ0727          T640 Sonet Clock Gen.
SCG 1            REV 18   710-003423   BBAE3887          T640 Sonet Clock Gen.
Routing Engine 0 REV 06   740-026941   P737F-002705      RE-DUO-1800
Routing Engine 1 REV 06   740-026941   P737F-002675      RE-DUO-1800
CB 0             REV 09   710-022597   EF7371            LCC Control Board
....
```

- Run the `show chassis hardware detail` operational command:

  show chassis hardware detail

```
user@T4000> show chassis hardware detail
Hardware inventory:
Item             Version  Part number  Serial number     Description
Chassis                                JN11B3892AHA      T640
Midplane         REV 01   710-027486   RC9848            T-series Backplane
FPM GBUS         REV 13   710-002901   BBAG5143          T640 FPM Board
FPM Display      REV 04   710-021387   BBAL2705          T1600 FPM Display
CIP              REV 06   710-002895   BBAL3705          T-series CIP
PEM 1            REV 03   740-036442   VJ00054           Power Entry Module 6x60
SCG 0            REV 18   710-003423   BBAJ0727          T640 Sonet Clock Gen.
SCG 1            REV 18   710-003423   BBAE3887          T640 Sonet Clock Gen.
Routing Engine 0 REV 06   740-026941   P737F-002705      RE-DUO-1800
  ad0    3823 MB  SMART CF             201101050335CCFACCFA Compact Flash
  ad1   62720 MB  SMART Lite SATA Drive 2011021700D8789F789F Disk 1
Routing Engine 1 REV 06   740-026941   P737F-002675      RE-DUO-1800
  ad0    3823 MB  SMART CF             201011150208AF59AF59 Compact Flash
  ad1   62720 MB  SMART Lite SATA Drive 2010122700A160026002 Disk 1
CB 0             REV 09   710-022597   EF7371            LCC Control Board
....
```

- Run the `show chassis hardware extensive` operational command:

  show chassis hardware extensive

```
user@T4000> show chassis hardware extensive
Hardware inventory:
```

```
Item             Version  Part number  Serial number     Description
Chassis                                JN11B3892AHA      T640
Jedec Code:   0x7fb0           EEPROM Version:    0x02
                                S/N:               JN11B3892AHA
Assembly ID:  0x0507           Assembly Version:  00.00
Date:         00-00-0000       Assembly Flags:    0x00
....
```

Verifying the OSS Mapping Feature on SNMP MIBs

Purpose

To verify that the SNMP MIBs are updated with the configured known chassis name.

Action

Run the `show snmp mib` operational commands and verify that the configured known chassis name is displayed in SNMP MIBs when the T4000 chassis is mapped to a T640 chassis:

- Run the `show snmp mib walk system` operational command:

  show snmp mib walk system

```
user@T4000> show snmp mib walk system
sysDescr.0    = Juniper Networks, Inc. t640 internet router, kernel JUNOS 12.3-...Juniper
Networks, Inc.
sysObjectID.0 = jnxProductNameT640
...
```

- Run the `show snmp mib walk jnxBoxAnatomy` operational command:

  show snmp mib walk jnxBoxAnatomy

```
user@T4000> show snmp mib walk jnxBoxAnatomy
jnxBoxClass.0 = jnxProductLineT640.0
jnxBoxDescr.0 = Juniper t640 Internet Backbone Router
jnxBoxSerialNo.0 = JN11B3892AHA
jnxBoxRevision.0
....
```

Meaning

On configuring the OSS mapping feature, the OSS maps the T4000 chassis to a T640 chassis, thereby preventing requalification of the new chassis.

RELATED DOCUMENTATION

oss-map | 335

show chassis oss-map | 1463

CHAPTER 9

Configuration Statements

action | 244

aggregated-devices | 246

alarm (chassis) | 249

alarm-port | 251

allow-sram-parity-errors | 254

ambient-temperature | 255

bandwidth (MPC Bandwidth) | 258

bandwidth-degradation | 260

blackhole-action | 262

chassis | 263

craft-lockout | 265

degraded | 266

disable-grant-bypass | 268

disk-failure-action | 270

enhanced-mode (Network Services) | 272

error | 275

error-id | 280

fatal | 282

feeds (T640, T1600, and T4000 Routers with Six-Input DC Power Supply) | 284

fpc (M320, T320, T640 and PTX Series Routers) | 286

fpc (MX Series 5G Universal Routing Platforms) | 289

fpc (TX Matrix and TX Matrix Plus Routers) | 292

fpc-feb-connectivity | 294

fpc-offline-on-blackholing | 295

fpc-nmi-volt-fail-knob | 297

fpc-restart | 298

fpc-resync | 300

fru-poweron-sequence | 301

input-current (T4000 Routers) | 303

ir-mode | 305

led-beacon | 308

license-mode | 309

limited-ifl-scaling | 311

linerate-mode | 312

l2-channel-error-threshold (chassis) | 314

l2-channel-errors (chassis) | 315

major | 317

max-power | 318

minor | 321

network-services | 322

no-power-budget | 325

oam detection-disable | 326

oam runtime-disable | 328

offline-on-fabric-bandwidth-reduction | 329

on-disk-failure (Chassis Routing Engine) | 331

on-error | 332

oss-map | 335

packet-scheduling | 336

pem (M320, ACX7024 Devices) | 338

pem (T640, T1600, and T4000 Routers with Six-Input DC Power Supply) | 340

pem-absence | 342

pfe | 344

pfe power off | 347

pic (M Series and T Series Routers) | 349

pic (MX Series Routers) | 351

preserve-fpc-poweron-sequence | 354

reachability-fault | 356

redundancy-mode | 358

restart chassis-control | 360

retry-count | 363

routing-engine (Chassis) | 365

sanity-poll | 367

sfm (Chassis) | 369

sib | 371

slow-pfe-alarm | 373

smart-check | 374

syslog (Chassis) | 376

thermal-health-check | 378

threshold | 381

ucode-imem-remap | 383

watchdog (PSM) | 385

action

IN THIS SECTION

- Syntax | 244
- Hierarchy Level | 244
- Description | 245
- Options | 245
- Usage | 245
- Required Privilege Level | 246
- Release Information | 246

Syntax

```
action ( alarm | disable-pfe | get-state | log | offline | reset | offline-pfe | reset-pfe |
trap )
```

Hierarchy Level

[edit chassis "fpc" on page 286 *slot-number* "error " on page 275 "fatal" on page 282]

[edit chassis "fpc" on page 286 *slot-number* "error " on page 275 "major" on page 317]

[edit chassis "fpc" on page 286 *slot-number* "error " on page 275 "minor" on page 321]

[edit chassis "error " on page 275 "fatal" on page 282]

[edit chassis "error " on page 275 "major" on page 317]

[edit chassis "error " on page 275 "minor" on page 321]

Description

Depending on the severity level of an error, you can configure one or more actions for the router to perform. For example, if the severity level of an error is major, you can configure the system to raise an alarm and restart the FPC. You can use `offline-pfe` and `reset-pfe` options to map errors belonging to `pfe` category.

Options

alarm Raise an FPC alarm.

disable-pfe (PTX routers) Disable Packet Forwarding Engine interfaces on an FPC. (MX240, MX480, MX960, MX2020 PTX10008 routers). Disables the interface associated with the ASIC that raised the error. Disables all PFE interfaces, alarms and logs. On MX Series routers, an MPC can have multiple ASICs handled by a single PFE. Disabling the PFE in such cases, is not the optimal way to handle the error.

get-state The system starts collecting statistics counters and other data from the affected FPC. The data is written and saved to a file under **/var** on the routing engine.

offline Disables the alarms, logs, and shuts down the affected FPC, allowing traffic to be re-routed through interfaces on other FPC in the device.

reset The system takes the affected FPC offline and resets to online, enables the alarms and logs.

offline-pfe Disables the alarms, logs, and shuts down the affected PFE.

reset-pfe Powers-off the PFE, disables the alarms and logs, then, powers-on the PFE, enables the alarms and logs.

log Log occurrences to the system log file.

trap The system raises traps for the FPC errors.

Usage

The usage guidelines are as follows:

- The specified PFE is disabled automatically if `offline-pfe` or `reset-pfe` is configured. For details, see *Configuring FPC Error Levels and Actions*.

Required Privilege Level

interface	To view this statement in the configuration.
interface-control	To add this statement to the configuration.

Release Information

Statement introduced for PTX Series routers in Junos OS Release 13.3.

Statement introduced for MX240, MX480, MX960 routers in Junos OS Release 14.2.

RELATED DOCUMENTATION

show chassis fpc errors | 1404

No Link Title

Configuring FPC Error Levels and Actions

aggregated-devices

IN THIS SECTION

- Syntax | 247
- Hierarchy Level | 247
- Description | 247
- Options | 248
- Required Privilege Level | 248
- Release Information | 248

Syntax

```
aggregated-devices {
    ethernet {
        device-count number;
        lacp {
            link-protection {
                non-revertive;
            }
            system-priority;
        }
    }
    sonet {
        device-count number;
        }
    maximum-links maximum-links-limit;
}
```

Hierarchy Level

```
[edit chassis]
```

Description

Configure properties for aggregated devices on the router. Aggregate Ethernet links are logical interfaces defined on the device that bundle together multiple physical interfaces into a single interface for the use of redundancy and bandwidth aggregation. When interconnecting devices you can create aggregate ethernet interfaces to bundle together multiple physical ethernet links to increase bandwidth and redundancy between devices.

Link aggregation enables you to group Ethernet interfaces to form a single link layer interface. Link Aggregation Control Protocol (LACP) is supported in chassis cluster deployments, where aggregated Ethernet interfaces and redundant Ethernet interfaces are supported simultaneously.

You must first configure the system to enable configuring the Aggregated Ethernet (ae) Interfaces. By default, Juniper devices do not have any aggregated ethernet interfaces created. To configure the device

to support a given number of ae interfaces, you must define it on a per chassis basis using the `set chassis aggregated-devices devices {1-32}` in configuration mode. The number of devices you define will be the number of aggregated ethernet interfaces that the system will create which can be configured just like any other ethernet interface. Also you can view the interfaces created by using the `show interface terse` command. Once you have defined the number of aggregated ethernet devices on the chassis you can then continue to configure the LAG members on a per ethernet interface basis.

Options

The remaining statements are explained separately.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced before Junos OS Release 7.4.

Support for LACP link protection and system priority introduced in Junos OS Release 9.3.

RELATED DOCUMENTATION

Configuring Junos OS for Supporting Aggregated Devices

alarm (chassis)

IN THIS SECTION

- Syntax | 249
- Hierarchy Level | 249
- Description | 250
- Options | 250
- Required Privilege Level | 250
- Release Information | 250

Syntax

```
alarm {
    interface-type {
        alarm-name (ignore |red | yellow);
    }
}
```

Hierarchy Level

```
[edit chassis],
[edit chassis interconnect-device name],
[edit chassis node-group name]
```

Description

Configure the chassis alarms and whether they trigger a red or yellow alarm, or whether they are ignored. Red alarm conditions light the RED ALARM LED on either the router's craft interface or the switch's LCD screen and trigger an audible alarm if one is connected to the contact on the craft interface or LCD screen. Yellow alarm conditions light the YELLOW ALARM LED on either the router's craft interface or the switch's LCD screen and trigger an audible alarm if one is connected to the craft interface or LCD screen.

To configure more than one alarm, include multiple *alarm-name* lines.

Options

alarm-name—Alarm condition.

ignore—The specified alarm condition does not set off any alarm.

interface-type—Type of interface on which you are configuring the alarm: atm, ethernet, sonet, or t3.

red—The specified alarm condition sets off a red alarm.

yellow—The specified alarm condition sets off a yellow alarm.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced before Junos OS Release 7.4.

RELATED DOCUMENTATION

Alarm Types and Severity Levels

Chassis Conditions That Trigger Alarms

alarm-port

IN THIS SECTION

- Syntax | **251**
- Hierarchy Level | **252**
- Description | **252**
- Options | **252**
- Required Privilege Level | **253**
- Release Information | **253**

Syntax

```
alarm-port {
    input port port-number {
        active {
            (high | low);
        }
        admin-state {
            (disabled | enabled);
        }
        description description;
    }
        severity {
            (critical | major | minor | warning)
        }
    output port port-number {
        admin-state {
            (disabled | enabled);
        }
```

```
        description description;
    }
}
```

Hierarchy Level

```
[edit chassis]
```

Description

Configure an alarm input or output on the dedicated alarm port on the router. You can use the alarm input configuration to receive alarm inputs from the external devices such as sensors. You can use the alarm output configuration to relay the alarms in the router to external alarm devices. You can configure up to three alarm inputs and one alarm output.

Options

port-number Specify the port number for the alarm input or output. The system supports up to three alarm input ports (port number: 1 to 3). The system supports only one alarm output port (port number: 1)

active Applicable only to alarm inputs.

Configure a signal polarity for the alarm input based on the user environment. The alarm relay becomes operational when the input signal polarity is high or low based on this configuration. The following options are available.

- high
- low
- **Default:** low

admin-state Specify the administrative state of the alarms.

- disabled—Disable the alarm configuration. If you choose this option, the router will not trigger the alarm configured on this port. Disabling an alarm configuration does not delete the alarm. You can enable it when required.
- enabled—Enable the alarm configuration.
- **Default:** disabled

description *description*

Provide a description for the alarm input or output. For example, you can provide a description to identify the device connected to the alarm port.

severity

Applicable only to alarm inputs.

Configure an alarm severity. The system supports the following alarm severities.

- critical
- major
- minor
- warning

> **NOTE**: The system considers the alarm inputs configured with the critical or major severity as major alarms. The alarm inputs configured with the minor or warning severity are considered minor alarms.

- **Default:** critical

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced before Junos OS Release 20.2R1.

RELATED DOCUMENTATION

Configuring Chassis Alarm Input and Output (ACX710 Routers) | 175

allow-sram-parity-errors

IN THIS SECTION

- Syntax | 254
- Hierarchy Level | 254
- Description | 254
- Required Privilege Level | 255
- Release Information | 255

Syntax

```
allow-sram-parity-errors;
```

Hierarchy Level

```
[edit chassis fpc slot-number]
```

Description

(T Series routers only) Allow SRAM parity errors to occur without restarting the FPC.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 8.0.

ambient-temperature

IN THIS SECTION

- Syntax | 255
- Hierarchy Level | 256
- Description | 256
- Default | 256
- Options | 257
- Required Privilege Level | 257
- Release Information | 257

Syntax

```
chassis ambient-temperature (25C|40C|55C);
```

Hierarchy Level

```
[edit chassis]
```

Description

Set the chassis ambient temperature and instruct the power manager to allocate power to the line cards according to the ambient temperature value.

On system initialization in a PTX Series router, the power manager reads the ambient temperature and allocates power to the line cards according to the power budget policy at that temperature. If the actual power consumption of any line card exceeds the configured value for more than three minutes, the power manager overrides the configured ambient temperature setting of that line card, and resets its ambient temperature to the next higher level and reallocates power according to the new temperature setting. All the overshooting line cards remain in the dynamic ambient temperature mode until the next reboot, or until you override the configured ambient temperature with a CLI command. The power manager then resets the power budget of the FRUs according to the configured ambient temperature setting.

When an MX Series router or an EX9200 switch restarts, the system adjusts the power allocation or the provisioned power for the line cards on the basis of the configured ambient temperature. If enough power is not available, a minor chassis alarm is raised. However, the chassis continues to run with the configured ambient temperature. You can configure a new higher ambient temperature only after you make more power available by adding new power supply modules or by taking a few line cards offline. By using the provisioned power that is saved by configuring a lower ambient temperature, you can bring more hardware components online.

For MX960 Universal Routing Platform and the MX2000 line of routers, a maximum operating temperature of 40°C is recommended at an altitude of up to 6000 feet above sea level. The router can operate up to a maximum temperature of 46°C at sea level and can be set accordingly.

NOTE: If ambient temperature is not set, then the line cards are allocated power according to the default ambient temperature.

Default

- MX Series routers—40°C

- PTX Series routers—40°C
- EX9200 switches—40°C
- EX9251 switches—40°C
- EX9253 switches—40°C

Options

25C Set the ambient temperature of the chassis to 25°C

40C Set the ambient temperature of the chassis to 40°C

55C Set the ambient temperature of the chassis to 55°C

> **NOTE**: Starting in Junos OS Evolved Release 19.1R1, the PTX10003-80C routers do not support configuration of the ambient temperature value 55C.

Required Privilege Level

chassis—To view this statement in the configuration.

chassis-control—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 14.1.

RELATED DOCUMENTATION

Managing Power Allocated to PTX5000 FPCs on the Basis of Chassis Ambient Temperature Configuration | 97

Monitoring the Power Consumption of PTX5000 FPCs by Configuring the Ambient Temperature | 93

Understanding How Configuring Ambient Temperature Helps Optimize Power Utilization | 92

bandwidth (MPC Bandwidth)

IN THIS SECTION

- Syntax | 258
- Hierarchy Level | 258
- Description | 258
- Options | 259
- Required Privilege Level | 259
- Release Information | 259

Syntax

```
bandwidth bandwidth;
```

Hierarchy Level

```
[edit chassis fpc slot]
```

Description

Configure the MPC bandwidth.

By default, MPC8E provides a maximum bandwidth of 960 Gbps. You can upgrade MPC8E to provide an increased bandwidth of 1600 Gbps (1.6 Tbps) by using an add-on license. After you purchase the license and configure the `bandwidth 1.6T` statement, MPC8E provides an increased bandwidth of 1.6 Tbps. After

you upgrade the MPC, you can use the `show chassis fpc slot detail` command to verify the status as shown in the following example:

```
[edit]
user@router# run show chassis fpc 3 detail
Slot 3 information:
  State                                 Online
  Temperature                            29
  Total CPU DRAM                      3200 MB
...

  Max Power Consumption               1150 Watts
  Configured Bandwidth               1600 G
  Operating Bandwidth                1600 G

[edit]
user@router#
```

Options

bandwidth Configure the MPC to operate at a specified bandwidth. You can specify `1.6T` as the value to configure the MPC to operate at a bandwidth of 1.6 Tbps.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 16.1.

RELATED DOCUMENTATION

MPC8E

bandwidth-degradation

IN THIS SECTION

- Syntax | **260**
- Hierarchy Level | **260**
- Description | **261**
- Options | **261**
- Required Privilege Level | **261**
- Release Information | **262**

Syntax

```
bandwidth-degradation {
    action (log-only | restart | offline | restart-then-offline);
    no-fabric-switchover;
    percentage (1-99);
}
```

Hierarchy Level

```
[edit chassis fpc slot-numberfabric]
```

Description

Configure a FPC to take a specific action once bandwidth degradation reaches a certain percentage to avoid causing a null route in the chassis.

NOTE: This configuration statement is mutually exclusive with the `offline-on-fabric-bandwidth-reduction` statement. If both statements are configured, the commit check fails and returns an error.

NOTE: MX Series devices will count fabric planes in the `offline` or `fault` state as part of the bandwidth degradation percentage calculation. On PTX Series devices, when a fabric plane is offline it won't be counted in the bandwidth degradation percentage calculation.

Options

log-only	A message gets logged in the chassisd and message files when the fabric degradation threshold is reached. No other actions are taken.
restart	The FPC with a degraded fabric plane is restarted once the threshold is reached.
offline	The FPC with a degraded fabric plane is taken offline once the threshold is reached. The FPC requires manual intervention to be brought back online. This is the default action if no action attribute configured.
restart-then-offline	The FPC with a degraded fabric plane is restarted once the threshold is reached, and if fabric plane degradation is detected again within 10 minutes, the FPC is taken offline. The FPC requires manual intervention to be brought back online.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 15.1.

RELATED DOCUMENTATION

Managing Bandwidth Degradation | 44

blackhole-action | 262

offline-on-fabric-bandwidth-reduction | 329

blackhole-action

IN THIS SECTION

- Syntax | 262
- Hierarchy Level | 262
- Description | 263
- Required Privilege Level | 263
- Release Information | 263

Syntax

```
blackhole-action (log-only | restart | offline | restart-then-offline);
```

Hierarchy Level

```
[edit chassis fpc slot-number fabric]
```

Description

Configure an FPC to take a specific action when fabric plane degradation reaches 100 percent.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 15.1.

RELATED DOCUMENTATION

Managing Bandwidth Degradation | 44

bandwidth-degradation | 260

chassis

IN THIS SECTION

- Syntax | 264
- Hierarchy Level | 264
- Description | 264
- Required Privilege Level | 264
- Release Information | 264

Syntax

```
chassis { ... }
```

Hierarchy Level

```
[edit]
```

Description

Configure router chassis properties.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced before Junos OS Release 7.4.

craft-lockout

IN THIS SECTION

- Syntax | 265
- Hierarchy Level | 265
- Description | 265
- Required Privilege Level | 265
- Release Information | 266

Syntax

```
craft-lockout;
```

Hierarchy Level

```
[edit chassis]
```

Description

Disable the physical operation of the craft interface front panel.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 8.1.

RELATED DOCUMENTATION

Configuring the Junos OS to Disable the Physical Operation of the Craft Interface | 196

degraded

IN THIS SECTION

- Syntax | 266
- Hierarchy Level | 267
- Description | 267
- Options | 267
- Required Privilege Level | 268
- Release Information | 268

Syntax

```
degraded {
    action-fpc-restart-disable;
    degraded-fabric-detection-enable;
    degraded-fpc-bad-plane-threshold number-of-bad-planes;
}
```

Hierarchy Level

```
[edit chassis fabric]
```

Description

Configure options that apply to degraded chassis fabric conditions.

In Junos OS Evolved, for the fabric planes to be available for the Packet Forwarding Engines, the following conditions must be met:

- The associated SIBs are in online state.
- The fabric ASICs are initialized.
- The links between the Packet Forwarding Engine ASICs and the fabric ASICs are brought up.

However, events such as link faults, fabric ASIC faults, SIB faults, and boot time Fabric OAM errors could make the fabric planes unreachable for Packet Forwarding Engines. If you have configured the degraded fabric detection along with a threshold for the number of bad planes, when the number of unreachable planes becomes equal to or more than the threshold, the software reports a degraded fabric condition.

When a Packet Forwarding Engine is affected by a degraded fabric condition, the software disables the interfaces associated with that Packet Forwarding Engine.

Options

- `action-fpc-restart-disable`—Allow the user to disable restarting of the FPCs during healing from a degraded fabric condition. The device can automatically recover from degraded fabric conditions by restarting both the fabric planes and the FPCs. If the action-fpc-restart-disable statement is configured, the healing attempt is limited to restarting the fabric planes only.

  The system will detect a null-route filtering condition and try to heal the system.

  NOTE: The `action-fpc-restart-disable` option is not applicable to Junos OS Evolved.

- `degraded-fabric-detection-enable`—Enable detection of an FPC with degraded fabric.

- degraded-fpc-bad-plane-threshold **number-of-bad-planes**—Configure the number of bad planes that indicate an FPC is degraded.

  Options: *number-of-bad-planes*—Number of bad planes.

  Range: The range could vary depending on the platform. For example, the PTX10001-36MR supports a range from 4 to 32.

  Default: 4

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 11.4.

Statement “action-fpc-restart-disable” introduced in Junos OS Release 12.1.

RELATED DOCUMENTATION

Fabric Resiliency and Degradation | 26

Disabling Line Card Restart to Limit Recovery Actions from Degraded Fabric Conditions | 47

disable-grant-bypass

IN THIS SECTION

- Syntax | 269
- Hierarchy Level | 269

- Description | 269
- Default | 270
- Required Privilege Level | 270
- Release Information | 270

Syntax

```
disable-grant-bypass;
```

Hierarchy Level

```
[edit chassis fabric]
```

Description

Disable the fabric grant bypass feature. This feature is used for communication between Packet Forwarding Engines. For instance, when a Packet Forwarding Engine wants to send a packet to another Packet Forwarding Engine (on the same MPC or on a different MPC), a request is sent to the Packet Forwarding Engine across the fabric plane. Only after the request is granted, can the source Packet Forwarding Engine send the packet to the destination Packet Forwarding Engine. Disabling the default behavior controls congestion and thus improves system behavior and performance on MX2010 and MX2020 routers.

NOTE: After disabling fabric grant bypass feature on the MX2010 and MX2020, you must reboot the router for the changes to take effect. MPC1 (MX-MPC1-3D), MPC2 (MX-MPC2-3D), and the 16-port 10-Gigabit Ethernet MPC (MPC-3D-16XGE-SFP) do not power on after you disable the fabric grant bypass feature and reboot the router.

Default

Enabled for all MPCs on MX2010 and MX2020 routers with Switch Fabric Boards (SFBs). On MX2010 and MX2020 routers with the Switch Fabric Board SFB2, this feature is enabled only on the MPCs, MPC1 (MX-MPC1-3D), MPC2 (MX-MPC2-3D), and the 16-port 10-Gigabit Ethernet MPC (MPC-3D-16XGE-SFP), and disabled on all other MPCs. The feature is disabled on routers with Switch Control Boards (SCBs).

Required Privilege Level

view

Release Information

Statement introduced in Junos OS Release 16.1.

RELATED DOCUMENTATION

Understanding Fabric Grant Bypass | 61

Disabling Fabric Grant Bypass to Control Congestion and Improve Performance | 62

Re-Enabling Fabric Grant Bypass | 63

disk-failure-action

IN THIS SECTION

- Syntax | 271
- Hierarchy Level | 271
- Description | 271
- Options | 271

Required Privilege Level | 271
Release Information | 272

Syntax

```
disk-failure-action (halt | reboot);
```

Hierarchy Level

```
[edit chassis routing-engine on-disk-failure]
```

Description

Configure the Routing Engine to halt or reboot when the Routing Engine hard disk fails.

Options

halt—Specify the Routing Engine to halt.

reboot—Specify the Routing Engine to reboot.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 9.0.

RELATED DOCUMENTATION

Enabling a Routing Engine to Reboot on Hard Disk Errors | 193

enhanced-mode (Network Services)

IN THIS SECTION

- Syntax | 272
- Hierarchy Level | 272
- Description | 273
- Default | 274
- Required Privilege Level | 274
- Release Information | 274

Syntax

```
enhanced-mode;
```

Hierarchy Level

```
[edit chassis network-services]
```

Description

PTX1000, PTX3000 and PTX5000 Routers—When you configure `enhanced-mode` on PTX series routers, the following features are enabled on the router:

- Filter-based generic routing encapsulation (GRE) for IPV4 and IPV6 tunneling.
- `promote gre-key` statement for configuring gre-key as one of the matches in a filter.
- `promote dscp` under `family inet`, and `promote traffic-class` under `family inet6` statements for configuring these as one of the matches in a filter. (Added in Junos OS 17.1 for all PTX Series routers with third-generation FPCs.)
- `gtp-tunnel-endpoint-identifier` statement for including hash calculation for IPv4 or IPv6 packets in the GPRS tunneling protocol–Tunnel end point ID (GTP-TEID) field hash calculations.
- Wider configuration range for Bidirectional Forwarding Detection (BFD) protocol intervals.
- Support for up to two million routes per chassis.
- Support for Layer 3 VPN. The `vrf-table-label` statement is supported. (Added in Junos OS 15.1F5 for PTX5000 routers.)
- Support for destination class usage (DCU) and source class usage (SCU) accounting. (Added in Junos OS 15.1F5 for PTX5000 routers.)

NOTE:

- When you configure the `enhanced-mode` statement, only third-generation FPCs are allowed to be powered on. All other FPCs are powered off and cannot be brought online.
- When you do not configure the `enhanced-mode` statement, third-generation FPCs do not support the advanced features in the preceding list. Third-generation FPC only provide the same functionality as the first-generation and second-generation FPCs.
- After you configure the `enhanced-mode` statement and commit the configuration, the router must reboot.

T4000 Routers—When you configure `enhanced-mode` on T4000 routers, improved virtual private LAN service (VPLS) MAC address learning by supporting up to 262,143 MAC addresses per VPLS routing instance is enabled.

NOTE:

- The enhanced-mode statement supports up to 262,143 MAC addresses per VPLS routing instance. However, the MAC address learning limit for each interface remains the same (that is, 65,535 MAC addresses).
- After you configure the enhanced-mode statement and committing the configuration, you receive a warning message that prompts you to reboot the router. You must reboot the router and then modify the size of the VPLS MAC address table; otherwise, the improved VPLS MAC address learning does not take effect.
- When the T4000 router reboots after the enhanced-mode statement is configured, only the T4000 Type 5 FPCs are online while the remaining FPCs are offline.

Default

PTX Series Routers, except the PTX10000 line of routers—By default, the enhanced-mode statement is disabled.

PTX 10000 line of routers (such as PTX10001, PTX10003, PTX10008, and PTX10016 routers)—By default, the enhanced-mode statement is enabled.

T4000 Routers—By default, the improved VPLS MAC address learning feature is disabled.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 12.3.

RELATED DOCUMENTATION

Network Services Mode Overview | 221

show chassis fpc | 1339

mac-table-size

show chassis network-services | 1459

error

IN THIS SECTION

- Syntax | 275
- Junos OS | 276
- Junos OS Evolved | 276
- Description | 276
- Options | 277
- Required Privilege Level | 279
- Release Information | 279

Syntax

```
error {
    (fatal | major | minor)
{
        threshold threshold value;
        action (alarm | disable-pfe | offline-pic | log | get-state |offline | reset | offline-
pfe | reset-pfe | trap)
        ;
    }
    scope error-scope {
        category category {
            (fatal | major | minor) {
                threshold threshold value;
                action (alarm | disable-pfe | log | get-state | offline | reset | offline-pfe |
reset-pfe | trap);
```

```
            }
        }

reset-pfe
{
    pause-period <pause_minutes>
    pfe-disable-period <pfe_disable_minutes>
    retry-limit <retry_number>
}
}
```

Junos OS

[edit chassis]

[edit chassis fpc *slot-number*]

Junos OS Evolved

[edit chassis fpc *slot-number*]

[edit chassis sib slot *slot-number*]

Description

Configure the threshold at which FPC or SIB errors will take the action you configure to be performed by the device. Starting from Junos OS Release 18.1R3, you can configure error thresholds and actions at the error scope and error category levels on MX Series routers.

Some Juniper devices include an internal framework for detecting and correcting FPC errors that can have the potential to affect services. You can classify the errors according to severity, set an automatic recovery action for each severity, and set a threshold (i.e., the number of times the error must occur before the action is triggered).

NOTE:

- On the MX104 routers, Junos does not initiate restart of the system on encountering a Fatal error. Additionally, though you can configure the action `disable-pfe` for Major errors on the MX104, the router does not disable its only PFE on encountering a Major error.

Options

You can configure the threshold for the following severity levels:

- `fatal`—Fatal error on the FPC. An error that results in blockage of considerable amount of traffic across modules is a fatal error.
- `major`—Major error on the FPC. An error that results in continuing loss of packet traffic but does not affect other modules is a major error.
- `minor`—Minor error on the FPC. An error that results in the loss of a single packet but is fully recoverable is a minor error.
- `threshold` *`threshold-value`*—Configure the threshold value at which to take action. If the severity level of the error is fatal, the action is carried out only once when the total number of errors crosses the threshold value. If the severity level of the error is major, the action is carried out once after the occurrence crosses the threshold. If the severity level is minor, the action is carried out as many times as the value specified by the threshold. For example, when the severity level is minor, and you have configured the threshold value as 10, the action is carried out after the tenth occurrence. On Junos OS Evolved, for the errors belonging to the `internal` category, the default threshold value is 1.

  NOTE: You can set the threshold value to 0 for errors with severity level as minor. This implies that no action is taken for that error. You cannot set the threshold value to 0 for errors with severity level as major or fatal.

  Default: The error count for fatal and major actions is 1. The default error count for minor actions is 10.

  Range: 0—429,496,729

The available detection and recovery actions are as follows:

- `alarm`—Raise an alarm.
- `disable-pfe`—Disable the PFE interfaces on the FPC.

- `get-state`—Get the current state of the FPC.
- `log`—Generate a log for the event.
- `offline`—Take the FPC offline.
- `offline-pic`—Take the PIC (installed in the FPC) offline.
- `reset`—Reset the FPC.
- `reset-pfe`—Reset the PFE.
- `offline-pfe`—Take the PFE offline.
- `trap`—Raise traps for the FPC errors.

NOTE: Starting in Junos OS Evolved Release 19.1R1, the `offline` and `disable-pfe` actions are not available for errors with `minor` severity (under the hierarchy `edit chassis error minor action`).

Starting in Junos OS Release 21.4R3, the additional options for reset PFE are valid only for line cards MPC7, MPC8, and MPC9, for the platforms MX240, MX480, MX960, MX2008, MX2010, and MX2020.

The available detection and recovery actions are as follows for devices running Junos OS Evolved:

- `alarm`—Raise an alarm.
- `fault`—System goes to fault state but stays up (diagnostics can be run on it).
- `get-state`—Get the current state of the FPC.
- `log`—Generate a log for the event.

NOTE: Starting in Junos OS Release 17.2R1, if you configure the `disable-pfe`, `offline`, `offline-pic` or `reset` action on an MX Series or PTX Series router, the `get-state` action is additionally configured on the router. This means, for example, if you configure the `disable-pfe` action on the router, the router gets both `disable-pfe` and `get-state` actions configured.

- `scope` *`error-scope`*—Group the errors of a particular severity into different scopes. Errors belonging to each error scope is further grouped into categories, before thresholds and actions are defined at the group level. The following scopes are available: `board` and `pfe`. Junos OS Evolved also supports the scope `switch`.

- `category` *category*—Categorize errors into various subgroups under the scope level. An error category helps you group similar errors belonging to a particular scope and define actions for them at once. This feature eliminates the need for configurations against individual error-ids. Some of the error-categories are `functional`, `io` (input/output errors), `storage` (for example, errors related to HDD, SSD, and flash), `memory` (for example, errors related to static RAM), `processing` (for example, CPU-related errors), and `switch`. Junos OS Evolved also supports the category `internal`. On every occurrence of an error belonging to the `internal` category, the software by default raises an alarm at the individual error level (not at the scope or category level). You cannot configure an action against errors belonging to the `internal` category.

- *error-id*—Use the error ID to disable an error or modify the error severity associated with that error. An *error-id*, which is a unique error identifier, is represented as a Uniform Resource Identifier (URI). For example, `/cpu/0/memory/0/memory-uncorrected-error` is an error ID that indicates an uncorrectable error under CPU memory module instance `0`.

- `reset-pfe`—Configure thresholds associated to reset-pfe action.
  - `pause-period` *<pause_minutes>*— Pause period in minutes. Valid range is 0 to 10000000.
  - `pfe-disable-period` *<pfe_disable_minutes>*— PFE disable period in minutes before reset PFE. Valid range is 1 to 10000000. The PFE disable period must be greater than the pause period.
  - `retry limit` *<retry_number>*— Retry limit for reset PFE. Valid range is 0 to 3.

Required Privilege Level

interface	To view this statement in the configuration.
interface-control	To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 13.3.

RELATED DOCUMENTATION

Fabric Resiliency | 26

Configuring FPC Error Levels and Actions

show chassis fabric errors | 1089
show chassis fpc errors | 1404
action | 244
error-id | 280

error-id

IN THIS SECTION

- Syntax | 280
- Hierarchy Level | 280
- Description | 281
- Options | 281
- Required Privilege Level | 281
- Release Information | 282

Syntax

```
error-id {
    severity; {
        (fatal | major | minor) {
    }
    state {
        disable;
    }
}
```

Hierarchy Level

[edit chassis fpc *slot-number* error]

[edit chassis sib slot *slot-number* error]

Description

Manage an error by using the error identifier. This feature allows you to disable an error or modify its severity. The `disable` option allows you to stop the error from being reported in the system until the error is enabled again.

An *error-id*, a unique error identifier, is represented as a Uniform Resource Identifier (URI), and is composed of a module identifier and an error identifier. For example, the error-id "`/cpu/0/memory/0/memory-uncorrected-error`" indicates an uncorrectable error under CPU memory module instance `0`.

Options

- `severity`—Apply a new severity to the error ID. You can apply any of the following severities:
  - `fatal`—Fatal error on the FPC. An error that results in blockage of considerable amount of traffic across modules is a fatal error.
  - `major`—Major error on the FPC. An error that results in continuing loss of packet traffic but does not affect other modules is a major error.
  - `minor`—Minor error on the FPC. An error that results in the loss of a single packet but is fully recoverable is a minor error.
- `state`—By default, an error is in "enabled" state.
  - `disable`—Disable an error.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 18.2R1.

RELATED DOCUMENTATION

Managing FPC Errors | 185

Configuring FPC Error Levels and Actions | 178

show chassis fpc errors | 1404

fatal

IN THIS SECTION

- Syntax | 282
- Hierarchy Level | 283
- Description | 283
- Required Privilege Level | 283
- Release Information | 283

Syntax

```
fatal {
    threshold threshold-value;
    action {
        alarm;
        disable-pfe;
        get-state;
        log;
        offline;
        reset;
```

```
    }
}
```

Hierarchy Level

[edit chassis "fpc" on page 286 *slot-number* "error " on page 275]

[edit chassis]

Description

Severity level of the error. An error that results in blockage of considerable amount of traffic across modules is a fatal error. The severity level of an error cannot be configured by a user.

The other statements are explained separately.

Required Privilege Level

interface	To view this statement in the configuration.
interface-control	To add this statement to the configuration.

Release Information

Statement introduced for PTX Series routers in Junos OS Release 13.3.

Statement introduced for MX240, MX480, MX960, and MX2020 routers in Junos OS Release 14.2.

RELATED DOCUMENTATION

Fabric Resiliency and Degradation | 26

Configuring FPC Error Levels and Actions | 178

feeds (T640, T1600, and T4000 Routers with Six-Input DC Power Supply)

IN THIS SECTION

- Syntax | 284
- Hierarchy Level | 284
- Description | 284
- Options | 285
- Required Privilege Level | 285
- Release Information | 285

Syntax

```
feeds number-of-input-feeds;
```

Hierarchy Level

```
[edit chassis pem]
[edit chassis lcc lcc-number pem] (Routing Matrix)
```

Description

Configure the number of input feeds connected to the six-input DC power supply on T640, T1600, or T4000 routers. The value assigned to the `feeds` statement must be equal to the number of input feeds provided to the power supply.

When providing four or five input feeds on standalone routers, you must configure the `feeds` statement at the `[edit chassis pem]` hierarchy level. When providing four or five input feeds to an LCC router in a routing matrix, you must configure the `feeds` statement at the `[edit chassis lcc` *`lcc-number`* `pem]` hierarchy level.

NOTE:

- Before configuring input feeds for your router, see the *T640 Core Router Hardware Guide*, *T1600 Core Router Hardware Guide*, or *T4000 Core Router Hardware Guide* for special considerations and for the number of input feeds supported by the router.
- All power supplies in the router must use the same number of inputs feeds.

Options

- **Range:** 4 through 6
- **Default:** 6

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 12.1.

RELATED DOCUMENTATION

Configuring the Six-Input DC Power Supply on T Series Routers | 210

fpc (M320, T320, T640 and PTX Series Routers)

IN THIS SECTION

- Syntax | 286
- Hierarchy Level | 287
- Description | 288
- Options | 288
- Required Privilege Level | 288
- Release Information | 288

Syntax

```
fpc slot-number {
  fpc
       slot slot-number
{  pfe pfe-number
        { temp-perf-throttle-disable;
          temp-volt-reduction-disable;
          power option;
        }

{  error {
        [fatal | major | minor] {
            threshold threshold-value;
            action (alarm | disable-pfe | offline-pic | log | get-state |offline | reset | trap
| offline-pfe | reset-pfe);
        }
    }
    optical-options {
        expansion-card {
        fpc fpc-slot;
        }
        express-in {
            fpc fpc-slot;
```

```
            }
        tca tca-identifier (enable-tca | no-enable-tca) (threshold number | threshold-24hrs
number) ;
        wavelength nm{
            switch interface-name{
            }
            wss-express-in fpc-slot;
            }
        }
    }
    pic pic-number {
        ce1 {
            e1 port-number {
                channel-group group-number timeslots slot-number;
            }
        }
        ct3 {
            port port-number {
                t1 link-number {
                    channel-group group-number timeslots slot-number;
                }
            }
        }
        framing (sdh | sonet);
        idle-cell-format {
            itu-t;
            payload-pattern payload-pattern-byte;
        }
        max-queues-per-interface (8 | 4);
        no-concatenate;
        q-pic-large-buffer (large-scale | small-scale);
    }
}
```

Hierarchy Level

```
[edit chassis]
```

Description

Configure properties for the PICs in individual Flexible PIC Concentrators (FPCs).

Options

slot-number—Slot number in which the FPC is installed.

- **Range:** M320, T640, T1600, T4000, and PTX5000 , PTX10008 routers: 0 through 7. On PTX1000 routers, the FPC number is always 0.
- **Range:** PTX3000 routers: 0, 2, 4, 6, 8, 10, 12, 14

`pfe`—Slot number in which the PFE is installed.

The remaining statements are explained separately.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced before Junos OS Release 7.4.

Error statement introduced for PTX Series routers in Junos OS Release 13.3.

RELATED DOCUMENTATION

Configuring FPC Error Levels and Actions

No Link Title

fpc (MX Series 5G Universal Routing Platforms)

IN THIS SECTION

- Syntax | 289
- Hierarchy Level | 290
- Description | 290
- Options | 291
- Required Privilege Level | 291
- Release Information | 291

Syntax

```
fpc slot-number {
    inline-services {
        flow-table-size {
            ipv4-flow-table-size units;
            ipv4-flow-table-size  units;
            ipv6-extended-attrib;
        }
        }
    ir-mode (R | IR);
    pfe identifier {
      exception-reporting {
         category category-name {
            inline-monitoring-instance inline-monitoring-instance;
         }
      }
      forwarding-packages {
         mobility;
      }
      power (off | on);
      tunnel-services;
    }
    pic number {
```

```
        inline-services {
            bandwidth  (1g | 10g);
        }
        port-mirror-instance port-mirroring-instance-name-pic-level;
        tunnel-services {
            bandwidth (1g | 10g)
        }
    }
    port-mirror-instance port-mirroring-instance-name-fpc-level;
}
```

Hierarchy Level

```
[edit chassis]
```

Description

Configure properties for the DPC or MPC and corresponding Packet Forwarding Engines to create tunnel interfaces.

(MX Series Virtual Chassis only) When you configure chassis properties for MPCs installed in a Virtual Chassis member router, statements included at the `[edit chassis member member-id fpc slot slot-number]` hierarchy level apply to the MPC in the specified slot number only on the specified member router in the Virtual Chassis. Statements included at the `[edit chassis fpc slot slot-number]` hierarchy level apply to the MPCs in the specified slot number on *each* member router in the Virtual Chassis.

BEST PRACTICE: To ensure that the statement you use to configure MPC chassis properties in an MX Series Virtual Chassis applies to the intended member router and MPC, we recommend that you always include the `member member-ID` option before the `fpc` statement, where *member-id* is 0 or 1 for a two-member MX Series Virtual Chassis.

Options

`fpc` *`slot-number`*—Specify the slot number of the DPC.

- **Range:** 0 through 11

`pic` *`number`*—Specify the number of the Packet Forwarding Engine. Each DPC includes four Packet Forwarding Engines.

- **Range:** 0 through 4

`port-mirror-instance` *`port-mirroring-instance-name-fpc-level`*—Associate a port-mirroring instance with the DPC and its corresponding PICs. The port-mirroring instance is configured under the `[edit forwarding-options port-mirroring]` hierarchy level.

The remaining statements are explained separately. Search for a statement in CLI Explorer or click a linked statement in the Syntax section for details.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 8.2.

`port-mirror-instance` option added in Junos OS Release 9.3.

`ipv6-extended-attrib` option added in Junos OS Release 14.2 for MX Series routers.

`exception-reporting` option added in Junos OS Release 21.2R1.

RELATED DOCUMENTATION

Configuring Port-Mirroring Instances on MX Series 5G Universal Routing Platforms

Enabling Inline Service Interfaces

Virtual Chassis Components Overview

fpc (TX Matrix and TX Matrix Plus Routers)

IN THIS SECTION

- Syntax | 292
- Hierarchy Level | 293
- Description | 293
- Options | 293
- Required Privilege Level | 293
- Release Information | 293

Syntax

```
fpc slot-number {
    pic pic-number {
        atm-cell-relay-accumulation;
        atm-l2circuit-mode (cell | aal5 | trunk trunk);
        framing (sdh | sonet);
        idle-cell-format {
            itu-t;
            payload-pattern payload-pattern-byte;
        }
        max-queues-per-interface (8 | 4);
        no-concatenate;
        no-mcast-replication;
        q-pic-large-buffer (large-scale | small-scale);
    }
}
```

Hierarchy Level

```
[edit chassis lcc number]
```

Description

On a TX Matrix or TX Matrix Plus router, configure properties for the PICs in individual FPCs.

Options

slot-number—Slot number in which the FPC is installed.

- **Range:** 0 through 7

The remaining statements are explained separately.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced before Junos OS Release 7.4.

RELATED DOCUMENTATION

- TX Matrix Router and T640 Router Configuration Overview
- TX Matrix Plus Router Configuration Overview
- Configuring the Junos OS to Enable SONET/SDH Framing for SONET/SDH PICs
- TX Matrix Router Chassis and Interface Names

fpc-feb-connectivity

IN THIS SECTION

- Syntax | 294
- Hierarchy Level | 294
- Description | 294
- Options | 295
- Required Privilege Level | 295
- Release Information | 295

Syntax

```
fpc-feb-connectivity {
    fpc number feb (slot-number | none);
}
```

Hierarchy Level

```
[edit chassis]
```

Description

On the M120 router only, configure a connection between any Flexible PIC Concentrator (FPC) and any Forwarding Engine Board (FEB).

Options

fpc *number*—Specify the FPC slot number.

- **Range:** 0 through 5

feb *slot-number*—Specify the FEB slot number.

- **Range:** : 0 through 5

none—Disconnect the FPC from the FEB.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 8.0.

RELATED DOCUMENTATION

Configuring the Junos OS to Support FPC to FEB Connectivity on M120 Routers

fpc-offline-on-blackholing

IN THIS SECTION

- Syntax | **296**
- Hierarchy Level | **296**
- Description | **296**

Required Privilege Level | 296
Release Information | 296

Syntax

```
fpc-offline-on-blackholing;
```

Hierarchy Level

```
[edit chassis fabric degraded]
```

Description

Take the FPC offline and raise an alarm if a traffic null route condition is detected in the routing matrix. By default, FPCs remain online when a null route condition is detected.

Required Privilege Level

system—To view this statement in the configuration.

system-control—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 14.2.

RELATED DOCUMENTATION

show chassis alarms | 483

fpc-nmi-volt-fail-knob

IN THIS SECTION

- Syntax | 297
- Hierarchy Level | 297
- Description | 297
- Required Privilege Level | 298
- Release Information | 298

Syntax

```
fpc-nmi-volt-fail-knob (enable | disable)
```

Hierarchy Level

```
[edit chassis]
```

Description

Enable or disable the non maskable interrupt (NMI) for the voltage failure errors on the flexible pic concentrator (FPC).

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration

Release Information

Statement introduced in Junos OS Release 10.4R15, 11.4R8-S2, 11.4R9, 12.1R8, 12.2R6, 12.3R3-S1, 12.3R4, 13.1R3, and 13.2R1

RELATED DOCUMENTATION

show chassis fpc | 1339

Configuring Voltage Level Monitoring of FPCs | 215

fpc-restart

IN THIS SECTION

- Syntax | 299
- Hierarchy Level | 299
- Description | 299
- Default | 299
- Required Privilege Level | 299
- Release Information | 299

Syntax

```
fpc-restart;
```

Hierarchy Level

```
[edit chassis fabric degraded]
```

Description

Allow the user to restart the FPCs when a traffic null route condition is detected in the routing matrix. To enable this feature set the `fpc-restart` statement at the `edit chassis fabric degraded` hierarchy level.

Default

FPCs are not restarted when a null route condition is detected.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

Release Information

Statement added in Junos OS Release 13.2R6.

RELATED DOCUMENTATION

Fabric Resiliency and Degradation | 26

Disabling Line Card Restart to Limit Recovery Actions from Degraded Fabric Conditions | 47

fpc-resync

IN THIS SECTION

- Syntax | 300
- Hierarchy Level | 300
- Description | 300
- Required Privilege Level | 301
- Release Information | 301

Syntax

```
fpc-resync;
```

Hierarchy Level

```
[edit chassis]
```

Description

(On M320, T320, T640, T1600, T4000, TX Matrix, and TX Matrix Plus routers only) When a Flexible PIC Concentrator (FPC) is brought online, resynchronize the sequence numbers of the FPC with the other active FPCs.

NOTE: In order to prevent null-route filtering, the `fpc-resync` command will have no effect if a single LMNR based FPC and one or more I-chip FPCs exist in the same chassis.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 10.2.

RELATED DOCUMENTATION

Resynchronizing FPC Sequence Numbers with Active FPCs when an FPC Comes Online | 192

fru-poweron-sequence

IN THIS SECTION

- Syntax | 302
- Hierarchy Level | 302
- Description | 302
- Options | 302
- Required Privilege Level | 303
- Release Information | 303

Syntax

```
fru-poweron-sequence fru-poweron-sequence;
```

Hierarchy Level

```
[edit chassis]
```

Description

(MX Series 5G Universal Routing Platforms only) Configure the power-on sequence for the DPCs in the chassis for routers with the enhanced AC Power Entry Module (PEM).

(T640 routers, T1600 routers, T4000 routers, MX2020 routers, and PTX Series packet transport routers) Configure the power-on sequence for Flexible PIC Concentrators (FPCs) installed in the chassis.

Options

(MX Series 5G Universal Routing Platforms only) *fru-poweron-sequence*—Power-on sequence for the DPCs in the chassis. The numbers indicate the slot number of the DPCs.

NOTE: If the power-on sequence is not configured by including the `fru-poweron-sequence` statement, Junos OS uses the `/var/log/fpc_poweron_seq.log` file to determine the power-on sequence for the last power-on operation for the DPCs and the same sequence is used. If the `/var/log/boot_seq.log` file, is not available, Junos OS uses the ascending order of the slot numbers of the DPCs as the sequence to power on the DPCs.

(T640 routers, T1600 routers, T4000 routers, MX2020 routers, and PTX Series packet transport routers) *fru-poweron-sequence*—Power-on sequence for the FPCs in the chassis. The numbers indicate the slot number of the FPCs.

NOTE:

- If the configured sequence contains invalid numbers, Junos OS considers only the valid numbers in the sequence. The invalid numbers are silently discarded.
- If the power-on sequence is not configured by including the `fru-poweron-sequence` statement, Junos OS uses the ascending order of the slot numbers of the FPCs as the sequence to power on the FPCs.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 10.0.

RELATED DOCUMENTATION

Redistributing the Available Power by Configuring Power-On Sequence

Configuring Power-On Sequence to Redistribute the Available Power

input-current (T4000 Routers)

IN THIS SECTION

- Syntax | 304
- Hierarchy Level | 304

- Description | 304
- Options | 304
- Required Privilege Level | 305
- Release Information | 305

Syntax

```
input-current amps-in-each-feed;
```

Hierarchy Level

```
[edit chassis pem]
```

Description

Configure the amount of input current received in each feed. The value assigned to the `input-current` statement must be equal to the input current capability of each feed.

NOTE: Before configuring input current for your router, see the *T4000 Core Router Hardware Guide* for special considerations.

Options

Values:

- • 40–Indicates 40 A of input current is received in each feed.
  - 60–Indicates 60 A of input current is received in each feed.

- **Default:** 60 A

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 12.3.

RELATED DOCUMENTATION

Configuring the Six-Input DC Power Supply on T Series Routers | 210

ir-mode

IN THIS SECTION

- Syntax | 306
- Hierarchy Level | 306
- Description | 306
- Default | 306
- Options | 307
- Required Privilege Level | 307
- Release Information | 307

Syntax

```
ir-mode (IR | R);
```

Hierarchy Level

```
[edit chassis fpc slot-number]
```

Description

Configure the license mode of the specified enhanced MPC in an MPC slot as IR or R. Setting the license mode enables you to distinguish between an MPC with an IR license and an MPC with an R license after the MPC is installed on the router.

NOTE: The license mode settings are used only to provide information. You cannot set or alter the license of the MPC when you configure the mode.

Default

The default IR mode is Base. You do not set this configuration statement if Base is the mode of your license. Base mode includes the following features:

- All Layer 2, Layer 2.5, and Layer 3 features.
- Up to 32 Layer 3 routing instances of the virtual routing and forwarding (VRF) instance type.
- Up to 2 million routes in the forwarding information base (FIB), provided there is hardware support. (FIB is also known as forwarding table.)
- Up to 6 million routes in the routing information base (RIB), also known as routing table.

Options

IR Configure the license mode IR for an MPC installed in a specified MPC slot. Includes the following features:

- All Layer 2, Layer 2.5, and Layer 3 features.
- Up to 32 Layer 3 routing instances of the virtual routing and forwarding (VRF) instance type.

R Configure the license mode R for an MPC installed in a specified MPC slot. Includes full-scale Layer 2, Layer 2.5, and Layer 3 features. Scale is determined by the hardware capabilities.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 14.2.

RELATED DOCUMENTATION

License Modes for Enhanced MPCs Overview

Configuring the License Mode for Specific Enhanced MPCs on MX Series Routers

Viewing the License Mode for MPC Cards on MX Series Routers

led-beacon

IN THIS SECTION

- Syntax | 308
- Hierarchy Level | 308
- Description | 308
- Required Privilege Level | 309
- Release Information | 309

Syntax

```
led-beacon
```

Hierarchy Level

```
[edit interfaces interface-name (with port number)]
```

Description

This command causes the LED for the specified port to flash green. You can use the command to physically locate a specific optic port on the PIC.

NOTE: At the [edit interfaces *interface-name (with port number)*] hierarchy level, you must include the port number as part of the interface name. For example, et-x/y/z(:n).

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 15.1F3 and 16.1R2.

RELATED DOCUMENTATION

show interfaces detail

license-mode

IN THIS SECTION

- Syntax | 309
- Hierarchy Level | 310
- Description | 310
- Options | 310
- Required Privilege Level | 310
- Release Information | 310

Syntax

```
license-mode IR | R
```

Hierarchy Level

```
[edit chassis fpc slot-number]
```

Description

Configures the FPC's license mode. This can be used to track the number of PICs configured for a specific mode.

Options

IR Sets the PIC to LSR mode.

R Sets the PIC to full IP mode.

NOTE: Starting in Junos OS Release 16.1R3 for PTX Series routers, the `IR` and `R` options are used. For previous releases (starting in Junos OS Release 15.1F3) the `Ip` (full IP mode) and `lsr` (LSR mode) options are used.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 15.1F3.

RELATED DOCUMENTATION

fpc (M320, T320, T640 and PTX Series Routers) | 286

limited-ifl-scaling

IN THIS SECTION

- Syntax | 311
- Hierarchy Level | 311
- Description | 311
- Required Privilege Level | 312
- Release Information | 312

Syntax

```
limited-ifl-scaling;
```

Hierarchy Level

```
[edit chassis network-services enhanced-ip]
```

Description

Limits the maximum number of logical interfaces on MX Series routers with MS-DPCs to 64,000 for enhanced IP network services mode.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Command introduced in Junos OS Release 15.1R3.

RELATED DOCUMENTATION

Limiting the Maximum Number of Logical Interfaces on MX Series Routers With MS-DPCs in Enhanced IP Network Services Mode | 228

Network Services Mode Overview | 221

Configuring Enhanced IP Network Services for a Virtual Chassis

linerate-mode

IN THIS SECTION

- Syntax | 313
- Hierarchy Level | 313
- Description | 313
- Required Privilege Level | 313
- Release Information | 313

Syntax

```
linerate-mode;
```

Hierarchy Level

```
[edit chassis fpc slot-number pic pic-number linerate-mode],
[edit chassis lcc number fpc slot-number pic pic-number linerate-mode] (Routing Matrix)
```

Description

For 10-port 10-Gigabit Oversubscribed Ethernet (OSE) PICs only, configure the line rate operation.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 10.1.

RELATED DOCUMENTATION

Junos OS Network Interfaces Library for Routing Devices

l2-channel-error-threshold (chassis)

IN THIS SECTION

- Syntax | 314
- Hierarchy Level | 314
- Description | 314
- Required Privilege Level | 315
- Release Information | 315

Syntax

```
l2-channel-error-threshold threshold; {
            l2-channel-errors (ignore |red | yellow);
    }
```

Hierarchy Level

```
[edit chassis alarm l2-chan-err-ethernet]
```

Description

Use this command to specify the threshold limit for the L2 error count. Range is 1 through 4294967295 per hour and default value is 50,000 per hour.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 21.1R1.

RELATED DOCUMENTATION

Chassis Conditions That Trigger Alarms

l2-channel-errors (chassis)

IN THIS SECTION

- Syntax | 315
- Hierarchy Level | 316
- Description | 316
- Options | 316
- Required Privilege Level | 316
- Release Information | 316

Syntax

```
l2-channel-errors (ignore |red | yellow);
```

Hierarchy Level

```
[edit chassis alarm l2-chan-err-ethernet]
```

Description

Configure chassis alarm for L2 channel error. When you configure this statement, chassis raises an alarm when the L2 channel error count crosses 50,000 per hour. If you do not configure this statement, chassis do not raise any alarm for L2 channel errors.

Options

`ignore`—This configuration does not raise any alarm for L2 channel error. This is the default configuration.

`red`—This configuration raises a red alarm for L2 channel error.

`yellow`—This configuration raises a red alarm for L2 channel error.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 21.1R1.

RELATED DOCUMENTATION

Chassis Conditions That Trigger Alarms

major

IN THIS SECTION

- Syntax | 317
- Hierarchy Level | 317
- Description | 318
- Required Privilege Level | 318
- Release Information | 318

Syntax

```
major {
    threshold threshold-value;
    action {
        alarm;
        disable-pfe;
        get-state;
        log;
        offline;
        reset;
    }
}
```

Hierarchy Level

[edit chassis "fpc" on page 286 *slot-number* "error " on page 275]

[edit chassis]

Description

Severity level of the error. An error that results in continuing loss of packet traffic but does not affect other modules is a major error. The severity level of an error cannot be configured by a user.

The other statements are explained separately.

Required Privilege Level

interface	To view this statement in the configuration.
interface-control	To add this statement to the configuration.

Release Information

Statement introduced for PTX Series routers in Junos OS Release 13.3.

Statement introduced for MX240, MX480, MX960, and MX2020 routers in Junos OS Release 14.2.

RELATED DOCUMENTATION

- Fabric Resiliency and Degradation | **26**
- show chassis fpc errors | **1404**
- Configuring FPC Error Levels and Actions | **178**

max-power

IN THIS SECTION

- Syntax | **319**
- PTX10008 | **319**

- PTX10001-36MR | **319**
- Description | **319**
- Options | **320**
- Required Privilege Level | **320**
- Release Information | **320**

Syntax

```
max-power watts;
```

PTX10008

```
[edit chassis fpc slot-number]
```

PTX10001-36MR

```
[edit chassis psm]
```

Description

For the PTX10001-36MR router— Override the maximum power value of a power supply module (PSM) by specifying a lesser power value (in watts). You can use this configuration to monitor the power consumed in real time against the configured value. The system raises a chassis alarm when the consumption exceeds the configured power.

For the PTX10008 router—Override the default power budget allocated to the line card by specifying a power value (in watts). You can use the command `show chassis fpc detail` to view the maximum power consumption by a line card.

Options

watts—Specify power value (in watts) with which you want to override the default/maximum power.

> **NOTE**: On the PTX10008 router, if you configure a power value (in watts) that is greater than the maximum value supported by the line card, the power budget for the line card is set to its supported maximum. On the PTX10001-36MR router, if you configure a power value (in watts) that is greater than the maximum value supported by the PSM, the configuration does not work.

Required Privilege Level

system—To view this statement in the configuration.
system-control—To add this statement to the configuration.

Release Information

The `max-power` *watts* statement introduced in Junos OS Evolved Release 20.1R2 for PTX10008 routers.

The `max-power` *watts* statement introduced in Junos OS Evolved Release 20.2R1 for PTX10001-36MR routers.

RELATED DOCUMENTATION

show chassis fpc | 1339

minor

IN THIS SECTION

- Syntax | 321
- Hierarchy Level | 321
- Description | 322
- Required Privilege Level | 322
- Release Information | 322

Syntax

```
minor {
    threshold threshold-value;
    action {
        alarm;
        disable-pfe;
        get-state;
        log;
        offline;
        reset;
    }
}
```

Hierarchy Level

[edit chassis "fpc" on page 286 *slot-number* "error " on page 275]

[edit chassis]

Description

Severity level of the error. An error that results in the loss of a single packet but is fully recoverable is a minor error. The severity level of an error cannot be configured by a user.

The other statements are explained separately.

Required Privilege Level

interface	To view this statement in the configuration.
interface-control	To add this statement to the configuration.

Release Information

Statement introduced for PTX Series routers in Junos OS Release 13.3.

Statement introduced for MX240, MX480, MX960, and MX2020 routers in Junos OS Release 14.2.

RELATED DOCUMENTATION

- Fabric Resiliency and Degradation | 26
- show chassis fpc errors | 1404
- Configuring FPC Error Levels and Actions | 178

network-services

IN THIS SECTION

- Syntax | 323
- Hierarchy Level | 323

- Description | 323
- Default | 323
- Options | 324
- Required Privilege Level | 324
- Release Information | 324

Syntax

```
network-services (ethernet | enhanced-ethernet | ip | enhanced-ip | lan);
```

Hierarchy Level

```
[edit chassis]
```

Description

Set the router's network services to a specific mode of operation. On MX240, MX480, and MX960 routers, MPC5E and MPC7E power on only if the network services mode configured is `enhanced-ip` or `enhanced-ethernet`.

MX2010 and MX2020 support only `enhanced-ip` and `enhanced-ethernet` network services modes.

Default

- MX80, MX104, MX2010, MX2020—`enhanced-ip`
- MX240, MX480, MX960—`ip`

Options

ethernet—Set the router's network services to Ethernet and use standard, compiled firewall filter format.

enhanced-ethernet—Set the router's network services to enhanced Ethernet and use enhanced mode capabilities. Only MPCs and MS-DPCs are powered on in the chassis.

ip—Set the router's network services to Internet Protocol and use standard, compiled firewall filter format.

enhanced-ip—Set the router's network services to enhanced Internet Protocol and use enhanced mode capabilities. Only MPCs and MS-DPCs are powered on in the chassis. Non-service DPCs do not work with enhanced network services mode options. This feature is enabled by default on MX80, MX104, MX2010, and MX2020 Universal Routing Platforms. For MX960 platform, enhanced-ip configuration must be enabled on both REs together. After committing the configuration, GRES configuration must be disabled and both REs must be rebooted to ensure that all the FPCs reboot and have the same network-services as REs. Any mismatch in network services between RE0, RE1, FPCs will lead to unexpected results.

lan—Set the router's network services to LAN and use standard, compiled firewall filter format. Reboot the system after setting the router's network services to LAN.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced before Junos OS Release 8.5.

enhanced-ethernet and enhanced-ip options introduced in Junos OS Release 11.4.

limited-ifl-scaling option introduced in Junos OS Release 15.1R3 for MX Series routers.

RELATED DOCUMENTATION

- Network Services Mode Overview

Firewall Filters and Enhanced Network Services Mode Overview

Configuring Junos OS to Run a Specific Network Services Mode in MX Series Routers

Configuring Enhanced IP Network Services for a Virtual Chassis

Limiting the Maximum Number of Logical Interfaces on MX Series Routers With MS-DPCs in Enhanced IP Network Services Mode

no-power-budget

IN THIS SECTION

- Syntax | 325
- Hierarchy Level | 325
- Description | 326
- Required Privilege Level | 326
- Release Information | 326

Syntax

```
no-power-budget;
```

Hierarchy Level

```
[edit chassis]
```

Description

Disable power budgeting. If you disable the power management on the PTX10008, the router keeps all the FRUs powered on by default. The router does not move any of the FRUs to offline state even if it does not have sufficient power. However, in case of a power shortage, a power redundancy alarm is raised as shown in the following example.

```
user@router> show system alarms

1 alarm currently active

Alarm time Class Description

2019-07-25 21:16:25 UTC Major chassis No Redundant Power
```

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Evolved Release 20.1R2.

oam detection-disable

IN THIS SECTION

- Syntax | 327
- Hierarchy Level | 327

- Description | 327
- Default | 327
- Required Privilege Level | 328
- Release Information | 328

Syntax

```
oam detection-disable
```

Hierarchy Level

```
[set chassis fabric]
```

Description

Disable the fabric Operation, Administration, Maintenance (OAM) feature, which helps you detect failures in fabric paths when a switch fabric card (switch interface board or SIB) or an FPC transitions from online to offline state or vice versa.

NOTE: This command is not applicable to Junos OS Evolved Releases 20.4R2 and 21.1R1.

Default

The fabric OAM monitoring feature is enabled by default. However, in Junos OS Evolved Releases 20.4R2 and 21.1R1, this feature is disabled by default.

Required Privilege Level

Interface—To view this statement in the configuration.

Release Information

Interface-control—To add this statement to the configuration.

RELATED DOCUMENTATION

Error Handling by Fabric OAM | 48

oam runtime-disable

IN THIS SECTION

- Syntax | 328
- Hierarchy Level | 329
- Description | 329
- Default | 329
- Required Privilege Level | 329
- Release Information | 329

Syntax

```
oam runtime-disable
```

Hierarchy Level

```
[edit chassis fabric]
```

Description

Disable the runtime fabric Operation, Administration, Maintenance (OAM) feature, which helps you detect and report failures in fabric planes during system runtime.

Default

The runtime Fabric OAM feature is enabled by default.

Required Privilege Level

Interface—To view this statement in the configuration.

Release Information

Interface-control—To add this statement to the configuration.

offline-on-fabric-bandwidth-reduction

IN THIS SECTION

Syntax | 330

- Hierarchy Level | 330
- Description | 330
- Required Privilege Level | 330
- Release Information | 330

Syntax

```
offline-on-fabric-bandwidth-reduction;
```

Hierarchy Level

```
[edit chassis fpc slot-number]
```

Description

Configure an FPC with degraded fabric bandwidth offline, to avoid causing a null route in the chassis for an extended time.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 11.4.

RELATED DOCUMENTATION

Disabling an FPC with Degraded Fabric Bandwidth | 47

Managing Bandwidth Degradation | 44

on-disk-failure (Chassis Routing Engine)

IN THIS SECTION

- Syntax | 331
- Hierarchy Level | 331
- Description | 332
- Options | 332
- Required Privilege Level | 332
- Release Information | 332

Syntax

```
on-disk-failure {
    disk-failure-action (halt | reboot);
}
```

Hierarchy Level

```
[edit chassis routing-engine]
```

Description

Instruct the router to halt or reboot if it detects hard disk errors on the Routing Engine.

Options

The remaining statement is explained separately. See CLI Explorer.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced before JUNOS Release 7.4.

The `disk-failure-action` statement added in JUNOS Release 9.0.

RELATED DOCUMENTATION

Enabling a Routing Engine to Reboot on Hard Disk Errors | 193

on-error

IN THIS SECTION

- Syntax | 333
- Hierarchy Level | 333

- Description | 333
- Options | 333
- Required Privilege Level | 334
- Release Information | 334

Syntax

```
on-error {
    raise-alarm;
    power (cycle | off);
    write-coredump;
}
```

Hierarchy Level

```
[edit chassis cfeb slot-number]
[edit chassis feb slot-number]
[edit chassis fpc slot-number sanity-poll]
[edit chassis lcc number fpc number sanity-poll] (Routing Matrix)
```

Description

Instruct the FPC or FEB or CFEB to perform actions during an error condition.

Options

`raise-alarm`—Generate and display a chassis alarm in case of an error.

`power cycle`—Reboot the FPC or FEB or CFEB after generating a core file. This statement is useful in case of temporary software errors that are eliminated after reboot.

`power off`—Halt the FPC or FEB or CFEB and keep it offline. This statement is useful in case of permanent hardware failures.

CAUTION: The `power off` statement halts the FPC or FEB or CFEB. Ensure that you have backup paths through different FPC or FEB or CFEB to avoid service outage.

NOTE: The `power cycle` and `power off` statements are mutually exclusive: You can configure either the `power cycle` or the `power off` statement for an error.

`write-coredump`—Trigger the core file in case of an error.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 11.4.

RELATED DOCUMENTATION

Configuring Sanity Polling | 188

sanity-poll | 367

retry-count | 363

oss-map

IN THIS SECTION

- Syntax | 335
- Hierarchy Level | 335
- Description | 335
- Options | 336
- Required Privilege Level | 336
- Release Information | 336

Syntax

```
oss-map {
    model-name t640|t1600;
}
```

Hierarchy Level

```
[edit chassis]
```

Description

Configure the operations support systems (OSS) mapping feature to map a T4000 chassis to a T1600 chassis or a T640 chassis, so that the T4000 chassis is represented as a T1600 chassis or a T640 chassis, respectively. The configuration helps prevent requalifying the T1600 chassis and T640 chassis as a new chassis on the OSS.

Options

`model-name t640`—Perform OSS mapping on a T4000 chassis to represent it as a T640 chassis, thereby overriding the chassis model name as displayed in the output of the `show chassis hardware`, the `show snmp mib walk system`, and the `show snmp mib walk jnxBoxAnatomy` operational commands.

`model-name t1600`—Perform OSS mapping on a T4000 chassis to represent it as a T1600 chassis, thereby overriding the chassis model name as displayed in the output of the `show chassis hardware`, the `show snmp mib walk system`, and the `show snmp mib walk jnxBoxAnatomy` operational commands.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 12.3R3, 13.1R2, and 13.2R1.

RELATED DOCUMENTATION

Configuring OSS Mapping to Represent a T4000 Chassis as a T1600 or a T640 Chassis | 233

Example: Configuring a T4000 Chassis to Represent a T640 Chassis | 235

show chassis oss-map | 1463

packet-scheduling

IN THIS SECTION

Syntax | 337

- Hierarchy Level | 337
- Description | 337
- Default | 337
- Options | 338
- Required Privilege Level | 338
- Release Information | 338

Syntax

```
(packet-scheduling | no-packet-scheduling);
```

Hierarchy Level

```
[edit chassis]
```

Description

(M 160 routers only) Enable packet-scheduling mode, in which the Packet Director application-specific integrated circuit (ASIC) schedules packet dispatches to compensate for transport delay differences. This preserves the interpacket gaps as the packets are distributed from the Packet Director ASIC to the Packet Forwarding Engine.

Default

no-packet-scheduling

NOTE: The packet-scheduling feature is available on M160 routers only.

Options

no-packet-scheduling—Do not schedule packets.

packet-scheduling—Schedule packets to preserve interpacket gaps.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced before Junos OS Release 7.4.

RELATED DOCUMENTATION

Enabling an M160 Router to Operate in Packet Scheduling Mode | 231

pem (M320, ACX7024 Devices)

IN THIS SECTION

Syntax | 339

Hierarchy Level | 339

- Description | 339
- Options | 339
- Required Privilege Level | 340
- Release Information | 340

Syntax

```
pem {
    minimum number;
}
```

Hierarchy Level

```
[edit chassis]
```

Description

Configure the minimum number of Power Entry Modules (PEMs) on an M320 device and ACX7024 device. With this configuration, PEM absent alarms are generated only if the PEM count falls below the minimum specified.

Options

minimum *number*—Minimum number of PEMs on the router. ACX7024 device supports dual PSU (1+1 redundancy) mode by default, and also single PSU mode with one PEM or PSM.

- **Range:** 1 through 4 for M320 device. 1, 2 for ACX7024 device.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 7.4.

RELATED DOCUMENTATION

Configuring the Junos OS to Support Entry-Level Configuration on an M320 Router with a Minimum Number of SIBs and PIMs

sib | 371

show chassis power | 1503

pem (T640, T1600, and T4000 Routers with Six-Input DC Power Supply)

IN THIS SECTION

- Syntax | 341
- Hierarchy Level | 341
- Description | 341
- Options | 341
- Required Privilege Level | 341
- Release Information | 342

Syntax

```
pem {
    feeds number-of-input-feeds;
    input-current amps-in-each-feed;
}
```

Hierarchy Level

```
[edit chassis]
[edit chassis lcc lcc-number] (Routing Matrix)
```

Description

Configure the power supply parameters of the six-input DC power supply on T640, T1600, or T4000 routers.

Options

`feeds` *number-of-input-feeds*—Number of input feeds connected to the six-input DC power supply.

(For T4000 routers only) `input-current` *amps-in-each-feed*—Input current (in amperes) in each feed.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 12.1.

Option `feeds` introduced in Junos OS Release 12.1.

Option `input-current` introduced for T4000 routers in Junos OS Release 12.3.

RELATED DOCUMENTATION

Configuring the Six-Input DC Power Supply on T Series Routers | 210

pem-absence

IN THIS SECTION

- Syntax | 342
- Hierarchy Level | 343
- Description | 343
- Options | 343
- Required Privilege Level | 343
- Release Information | 343

Syntax

```
pem-absence ignore;
```

Hierarchy Level

```
[edit chassis alarm]
```

Description

Configure `pem-absence ignore` to ignore the red alarm of missing power supply unit. To delete the configuration use `[# delete chassis alarm pem-absence]` command.

Options

`ignore`—Ignores the power supply module absence alarm.

Required Privilege Level

Release Information

Statement introduced in Junos OS Release 20.3R1 for SRX4100 and SRX4200.

Statement introduced in Junos OS Release 20.4R1 for SRX1500 and SRX4600.

RELATED DOCUMENTATION

Chassis Conditions That Trigger Alarms | 114

show chassis alarms | 483

pfe

IN THIS SECTION

- Syntax | 344
- Syntax (PTX10004, PTX10008, PTX10016 with PTX10K-LC1201-36CD and PTX10K-LC1202-36MR line cards, and PTX10001-36MR) | 345
- Hierarchy Level | 345
- Description | 345
- Options | 345
- Required Privilege Level | 346
- Release Information | 346

Syntax

```
pfe identifier {
  exception-reporting {
     category category-name; {
     inline-monitoring-instance inline-monitoring-instance;
     }
  }
  forwarding-packages {
     mobility;
  }
  power (off | on);
  tunnel-services;
}
```

Syntax (PTX10004, PTX10008, PTX10016 with PTX10K-LC1201-36CD and PTX10K-LC1202-36MR line cards, and PTX10001-36MR)

```
pfe identifier {
  exception-reporting {
     category category-name; {
     inline-monitoring-instance inline-monitoring-instance;
     }
  }
  forwarding-packages {
     mobility;
  }
  power (off | on);
  temp-perf-throttle-disable;
  temp-volt-reduction-disable;
  tunnel-services;
}
```

Hierarchy Level

```
[edit chassis fpc slot-number],
[edit chassis lcc name fpc slot-number],
[edit chassis member name fpc slot-number]
```

Description

Configure options for the Packet Forwarding Engine (PFE).

Options

identifier PFE identifier

power Power PFEs on or off

- off—Power off PFE
- on—Power on PFE

temp-perf-throttle-disable Disable temperature based PFE performance throttling. By default, the system detects overheat condition at individual PFE level and gradually reduces the performance of the affected PFE. This results in reduction of power consumption, heat dissipation, PFE operating temperature, and prevents line card shutdown.

- **Default**
  By default, automatic performance throttling is enabled.

temp-volt-reduction-disable Disable temperature based PFE voltage reduction. By default, the system detects the ASIC temperature at individual PFE level that reaches the safe operating limit and dynamically manages the voltage of the DC-DC converters. This results in reduction of power consumption.

- **Default**
  By default, temperature voltage reduction is enabled.

tunnel-services Tunnel services configuration

The remaining statements are explained separately. See CLI Explorer.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

`exception-reporting` option added in Junos OS Release 21.2R1.

`temp-perf-throttle-disable` option added in Junos OS Evolved Release 21.4R1.

`temp-volt-reduction-disable` option added in Junos OS Evolved Release 22.2R1.

`exception-reporting` option added in Junos OS Evolved Release 22.2R1.

pfe power off

IN THIS SECTION

- Syntax | 347
- Hierarchy Level | 347
- Description | 347
- Default | 348
- Options | 348
- Required Privilege Level | 348
- Release Information | 349

Syntax

```
pfe pfe-instance power (off | on);
```

Hierarchy Level

```
[edit chassis fpc slot-number]
```

Description

Power on or power off a Packet Forwarding Engine (PFE) in a running system, or keep the PFE powered off when the FPC comes online.

On MX series routers with MPC10E-15C-MRATE, you can power off or power on only the Packet Forwarding Engine 2. The Packet Forwarding Engines 0 and 1 do not support this command. On the MPC10E-15C-MRATE, operating the Packet Forwarding Engine 2 requires the Packet Forwarding Engines 0 and 1 to be functional. You can use the command `show chassis fpc fpc-slot detail` to view the

Packet Forwarding Engine power ON/OFF status and bandwidth for the individual Packet Forwarding Engines in the MPC10E-15C-MRATE.

Default

on

Options

pfe *pfe-id* The ID of the Packet Forwarding Engine to be powered off.

> **NOTE:**
>
> - For the MPC10E-15C-MRATE line card, only the Packet Forwarding Engine 2 is applicable.
> - Individual PFEs can be configured powered-off when an FPC line card is brought online or during runtime.
>
>   The following “set” command is used to configure the PFE power ON or OFF.
>
>   ```
>   set chassis fpc  slot-number]
>   pfe slot-number power option
>   ```

power (off | on) Power off or on the selected Packet Forwarding Engine.

- **Default:** on

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 19.1R1.

Statement support added for PTX10008 device in Junos OS Evolved release 21.2R1.

RELATED DOCUMENTATION

Managing Power | 202

MPC10E-15C-MRATE

pic (M Series and T Series Routers)

IN THIS SECTION

- Syntax | 349
- Hierarchy Level | 350
- Description | 350
- Options | 350
- Required Privilege Level | 351
- Release Information | 351

Syntax

```
pic pic-number {
    ce1 {
        e1 port-number {
            channel-group group-number timeslots slot-number;
        }
    }
    ct3 {
        port port-number {
```

```
            t1 link-number {
                channel-group group-number timeslots slot-number;
            }
        }
    }
    framing (sdh | sonet);
    idle-cell format {
        itu-t;
        payload-pattern payload-pattern-byte;
    }
     inline-services {
        bandwidth  (1g | 10g);
    }
    max-queues-per-interface (8 | 4);
    no-concatenate;
}
```

Hierarchy Level

```
[edit chassis fpc slot-number]
```

Description

Configure properties for an individual PIC.

Options

pic-number—Slot number in which the PIC is installed.

- **Range:** 0 through 3

The remaining statements are explained separately. Search for a statement in CLI Explorer or click a linked statement in the Syntax section for details.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced before Junos OS Release 7.4.

RELATED DOCUMENTATION

- Configuring the Junos OS to Enable SONET/SDH Framing for SONET/SDH PICs
- Configuring the Junos OS to Enable a SONET PIC to Operate in Channelized (Multiplexed) Mode
- Configuring the Junos OS to Support Channelized DS3-to-DS0 Naming for Channel Groups and Time Slots
- Configuring the Junos OS to Support Channel Groups and Time Slots for Channelized E1 PICs

pic (MX Series Routers)

IN THIS SECTION

- Syntax | **352**
- Hierarchy Level | **353**
- Description | **353**
- Options | **353**
- Required Privilege Level | **353**
- Release Information | **353**

Syntax

```
pic pic-number {
    account-layer2-overhead;
    adaptive-services {
        (layer-2 | layer-3);
    }
    aggregate-ports;
    ce1 {
        e1 port-number {
            channel-group group-number timeslots slot-number;
        }
    }
    channelization;
    ct3 {
        port port-number {
            t1 link-number {
                channel-group group-number timeslots slot-number;
            }
        }
    }
    egress-policer-overhead bytes;
    framing (sdh | sonet);
    idle-cell format {
        itu-t;
        payload-pattern payload-pattern-byte;
    }
    ingress-policer-overhead bytes;
     inline-services {
        bandwidth  (1g | 10g);
    }
    max-queues-per-interface (8 | 4);
    mlfr-uni-nni-bundles number;
    mlfr-uni-nni-bundles-inline number;
    multi-link-layer-2-inline;
    no-concatenate;
    no-multi-rate;
    pic-type OID of PIC type;
    sparse-dlcis;
    tunnel-services (Chassis) {
        bandwidth (1g | 10g | 20g | 40g);
```

```
        tunnel-only;
    }
    vtmapping (klm | itu-t);
}
```

Hierarchy Level

```
[edit chassis fpc slot-number]
```

Description

Configure properties for an individual PIC.

Options

pic-number—Slot number in which the PIC is installed.

- **Range:** 0 through 3

The remaining statements are explained separately.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced before Junos OS Release 7.4.

`multi-link-layer-2-inline` and `mlfr-uni-nni-bundles-inline` options introduced in Junos OS Release 14.1.

RELATED DOCUMENTATION

- Configuring the Junos OS to Enable SONET/SDH Framing for SONET/SDH PICs
- Configuring the Junos OS to Enable a SONET PIC to Operate in Channelized (Multiplexed) Mode
- Configuring the Junos OS to Support Channelized DS3-to-DS0 Naming for Channel Groups and Time Slots
- Configuring the Junos OS to Support Channel Groups and Time Slots for Channelized E1 PICs
- *Enabling Inline Service Interfaces*

preserve-fpc-poweron-sequence

IN THIS SECTION

- Syntax | 354
- Hierarchy Level | 354
- Description | 355
- Required Privilege Level | 355
- Release Information | 355

Syntax

```
preserve-fpc-poweron-sequence;
```

Hierarchy Level

```
[edit chassis]
```

Description

Preserve the sequence in which the line cards—specifically, MPCs on MX series routers—on a router or switch are powered on when the device is restarted. During a system reboot, the line cards are brought online in the sequence specified in the system log file **/var/log/fpc_poweron_seq.log**. When a line card goes offline, its entry is removed from the log file. You can use the `show chassis poweron sequencs` command to view the configured power-on sequence.

NOTE:

- If both `preserve-fpc-poweron-sequence` and `fru-poweron-sequence` statements are configured, then the power-on sequence specified in the `fru-poweron-sequence` statement takes precedence.
- If `preserve-fpc-poweron-sequence` is configured and `fru-poweron-sequence` not configured, then the line cards are powered on in the sequence preserved in the system log file **/var/log/fpc_poweron_seq.log**.
- If neither of these statements is configured, then the line cards are powered on in the ascending order of their slot numbers. Line cards whose slot numbers are not specified in the log file are powered on in the ascending order of their slot numbers.

Required Privilege Level

chassis—To view this statement in the configuration.

chassis-control—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 15.1.

RELATED DOCUMENTATION

fru-poweron-sequence | **301**

show chassis power sequence | **1545**

Understanding How Dynamic Power Management Enables Better Utilization of Power | **202**

reachability-fault

IN THIS SECTION

- Syntax | 356
- Hierarchy Level | 357
- Description | 357
- Options | 357
- Required Privilege Level | 357
- Release Information | 357

Syntax

```
reachability-fault {
      actions {
            sib-restart-disable;
            fpc-restart-disable;
            recovery-failure {
                  pfe-offline;
            }
      }
      degraded {
            error-threshold {
                  degradation percentage (1-99);
            }
      }
}
```

Hierarchy Level

```
[edit chassis fabric event],
[edit chassis member name fabric event]
```

Description

Fabric reachability fault detection. Configure options that apply to detect fabric reachability fault conditions and trigger automatic fabric connectivity restoration.

Options

- `actions`— Reachability fault recovery actions. Depending on the reachability fault conditions, allow users to configure one or more recovery actions for the router to attempt automatic fabric connectivity restoration.
- `degraded`— Degraded fabric configuration. Allow users to configure the error threshold percentage value. The percentage value can range from 1 to 99, and it represents the percentage of fabric degradation at which the recovery action is taken.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Evolved Release 22.2R1.

redundancy-mode

IN THIS SECTION

- Syntax | 358
- Hierarchy Level | 358
- Description | 358
- Options | 359
- Required Privilege Level | 359
- Release Information | 359

Syntax

```
redundancy-mode (increased-bandwidth | redundant)
```

Hierarchy Level

```
[edit chassis fabric]
```

Description

Configure the active control boards to be in redundancy mode or increased fabric bandwidth mode.

In increased fabric bandwidth mode, which is the default behavior for MX Series routers with Switch Control Board (SCB), the maximum number of available fabric planes are used. The MX Series routers that contain the Enhanced SCB—SCBE—and the MPC3E, the control boards operate in redundancy fabric mode (all the FPCs use 4 fabric planes as active planes) by default.

In increased fabric bandwidth mode, which is the default mode on the SRX5600 and SRX5800 Services Gateways with the SRX5K-SCB4 Switch Control Board, six active planes (without any spare planes) are used. With the redundant fabric mode, the SRX5600 and SRX5800 Services Gateways use four active planes and two spare planes.

Options

increased-bandwidth Enable increased fabric bandwidth mode for the control boards, which causes all the available fabric planes to be used.

redundant Enable redundancy mode for the control boards, which causes all the FPCs to use 4 fabric planes as active planes.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 12.2.

RELATED DOCUMENTATION

- Detection and Corrective Actions of Line Cards with Degraded Fabric on MX Series Routers
- Detection and Recovery of Fabric-Related Failures Caused by Loss of Connectivity on MX Series Routers
- MX Series Routers Fabric Resiliency
- show chassis fabric redundancy-mode | 1201
- Configuring Fabric Redundancy Mode for Active Control Boards on MX Series Routers

restart chassis-control

IN THIS SECTION

- Syntax | 360
- Syntax (MX Series Routers) | 360
- Syntax (PTX Series) | 361
- Description | 361
- Options | 361
- Required Privilege Level | 362
- Output Fields | 362
- Sample Output | 362
- Release Information | 362

Syntax

```
restart chassis-control
<lcc number | sfc number>
<gracefully | immediately | soft>
```

Syntax (MX Series Routers)

```
restart chassis-control
<gracefully | immediately | soft>
```

Syntax (PTX Series)

```
restart chassis-control
<gracefully | immediately | soft>
```

Description

Restart the chassis management process.

NOTE: When GRES is configured and the `restart chassis-control` command is executed on a TX Matrix Plus router with 3D SIBs, we cannot ascertain which Routing Engine becomes a primary. This is due to the chassisd restart. The chassis process or chassisd is responsible for maintaining and retaining primary role and when it is restarted, the new chassisd is processed based on the router load. This results in one of the Routing Engines being made primary.

Options

lcc *number* (Routing matrix only) (Optional) Restart the software process for a specific routing node that is connected to a PTX Matrix platform. Replace ***number*** with a value from **0** through **3**.

sfc *number* (PTX routers only) (Optional) Restart the software process on the PTX series router (or switch-fabric chassis). Replace ***number*** with **0**.

gracefully (Optional) Restart the software process.

immediately (Optional) Immediately restart the software process.

NOTE: For PTX Series routers, when the `restart chassis-control` command is executed with the `immediately` option set, the PFE's state will be reset to enabled regardless of whether or not the PFE's state is set to disabled when the action occurs.

soft (Optional) Reread and reactivate the configuration without completely restarting the software processes. For example, Border Gateway Protocol (BGP) peers stay up and the routing table stays constant. Omitting this option results in a graceful restart of the software process.

Required Privilege Level

reset

Output Fields

When you enter this command, you are provided feedback on the status of your request.

Sample Output

restart chassis-control gracefully

```
user@host> restart chassis-control gracefully
Chassis control process started, pid 1631
```

restart chassis-control soft

```
user@host> restart chassis-control soft
Chassis control process started, pid 1653
```

Release Information

Command introduced before JUNOS Release 7.4.

Command added in Junos Evolved Release 21.4R1.

RELATED DOCUMENTATION

No Link Title

retry-count

IN THIS SECTION

- Syntax | 363
- Hierarchy Level | 363
- Description | 364
- Options | 364
- Required Privilege Level | 364
- Release Information | 364

Syntax

```
retry-count number;
```

Hierarchy Level

```
[edit chassis cfeb slot-number]
[edit chassis cluster redundancy-group group-number ip-monitoring ]
[edit chassis feb slot-number]
[edit chassis fpc slot-number sanity-poll]
[edit chassis lcc number fpc number sanity-poll] (Routing Matrix)
```

Description

Number of times sanity polling periodically checks for an error condition in the FPC.

Options

number—Number of times sanity polling is allowed to check for an error condition.

- **Range:** 1 through 30
- **Default:** 10

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 11.4.

RELATED DOCUMENTATION

Configuring Sanity Polling

sanity-poll | 367

on-error | 332

routing-engine (Chassis)

IN THIS SECTION

- Syntax | 365
- Hierarchy Level | 366
- Description | 366
- Options | 366
- Required Privilege Level | 367
- Release Information | 367

Syntax

```
routing-engine {
    on-disk-failure (Chassis Routing Engine)
    {
        disk-failure-action (halt | reboot);
    }
    disk {
        ssd-series ssd-series-name {
            id id-num {
                id-threshold id-threshold-value;
                id-value (norm | raw);
                id-flag (high | low);
            }
        }
        smart-check{
    }
}
```

Hierarchy Level

```
[edit chassis]
```

Description

Configure a Routing Engine to halt or reboot automatically when a hard disk error occurs. A hard disk error may cause a Routing Engine to enter a state in which it responds to local pings and interfaces remain up, but no other processes are responding. Rebooting or halting prevents this. You can also configure the device to perform certain health checks on the Routing Engine solid-state drive (SSD) and log a health event or raise an alarm in case a predefined health attribute threshold is breached.

Options

disk Configure health check parameters for the SSD.

ssd-series *ssd-series-name* Specify the SSD series name.

id *id-num* Specify the ID of the SSD smart attribute for which you are configuring the health check. You can view the smart attributes and their IDs of an SSD by using the command `show vmhost hard-disk-test status disk /dev/sda`.

- **Range:** 1 - 255

id-threshold Specify the SSD smart attribute threshold, breaching which will result in the device logging a health event or raising an alarm.

id-value Choose the attribute value type from the following options:

- norm—Use this option to instruct the device to consider normalized value for the specified smart attribute.
- raw—Use this option to instruct the device to consider raw value for the specified smart attribute.

id-flag Choose the attribute value flag from the following options:

- high—The software considers the threshold to be breached if the value is greater than smart threshold.
- low—The software considers the threshold to be breached if the value is less than smart threshold.

smart-check Configure the device to raise alarm when an error occurs. See "smart-check" on page 374.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced before Junos OS Release 7.4.

The `disk-failure-action` statement added in Junos OS Release 9.0.

RELATED DOCUMENTATION

Enabling a Routing Engine to Reboot on Hard Disk Errors

sanity-poll

IN THIS SECTION

- Syntax | 368
- Hierarchy Level | 368
- Description | 368

- Options | 369
- Required Privilege Level | 369
- Release Information | 369

Syntax

```
sanity-poll {
    retry-count number;
    on-error {
        raise-alarm;
        power (cycle | off);
        write-coredump;
    }
}
```

Hierarchy Level

```
[edit chassis cfeb slot-number]
[edit chassis feb slot-number]
[edit chassis fpc slot-number]
[edit chassis lcc number fpc number] (Routing Matrix)
```

Description

Enable sanity polling and start periodic sanity checking for a particular FPC. The periodic sanity check includes checking for error conditions such as “register sanity issues,” “high temperature,” “hardware failure,” and so on in the FPC.

NOTE: Currently, periodic sanity check is performed only on the routing chip register.

Options

The remaining statements are explained separately. See CLI Explorer.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 11.4.

RELATED DOCUMENTATION

- Configuring Sanity Polling | 188
- retry-count | 363
- on-error | 332

sfm (Chassis)

IN THIS SECTION

- Syntax | 370
- Hierarchy Level | 370
- Description | 370
- Options | 370
- Required Privilege Level | 370
- Release Information | 371

Syntax

```
sfm slot-number power off;
```

Hierarchy Level

```
[edit chassis]
```

Description

For routers with SFMs, configure an SFM to stay offline.

By default, if you use the **request chassis sfm** CLI command to take an SFM offline, the SFM will attempt to restart when you enter a **commit** CLI command. To prevent a restart, configure an SFM to stay offline. This feature is useful for repair situations. The SFM remains offline until you delete this statement.

Options

slot-number—Slot number in which the SFM is installed.

power off—Take the SFM offline and configure it to remain offline.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced before Junos OS Release 7.4.

RELATED DOCUMENTATION

Configuring an SFM to Stay Offline | 191

High Availability User Guide

sib

IN THIS SECTION

- Syntax | 371
- Hierarchy Level | 372
- Description | 372
- Options | 372
- Required Privilege Level | 372
- Release Information | 372

Syntax

```
sib {
    minimum number;
}
```

Hierarchy Level

```
[edit chassis]
```

Description

Configure the minimum number of SIBs on an M320 router. With this configuration, SIB absent alarms are generated only if the SIB count falls below the minimum specified.

Options

number—Minimum number of SIBs on the router.

- **Range:** 0 through 3

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 7.4.

RELATED DOCUMENTATION

Configuring the Junos OS to Support Entry-Level Configuration on an M320 Router with a Minimum Number of SIBs and PIMs

pem (M320, ACX7024 Devices) | 338

slow-pfe-alarm

IN THIS SECTION

- Syntax | 373
- Hierarchy Level | 373
- Description | 373
- Required Privilege Level | 373
- Release Information | 374

Syntax

```
slow-pfe-alarm;
```

Hierarchy Level

```
[edit chassis]
```

Description

Enable the slow Packet Forwarding Engine alarm on a M Series, MX Series, or a T Series router.

Required Privilege Level

routing—To view this statement in the configuration.

routing-control—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 12.1R6, 12.2R5, 12.3R3, 13.1R2, and 13.2R1.

RELATED DOCUMENTATION

Configuring Slow Packet Forwarding Engine Alarm | 166

smart-check

IN THIS SECTION

- Syntax | 374
- Hierarchy Level | 375
- Description | 375
- Options | 375
- Required Privilege Level | 376
- Release Information | 376

Syntax

```
smart-check {
    ssd-series ssd-series-name {
        id id-num {
            id-threshold id-threshold-value;
            id-value (norm | raw);
            id-flag (high | low);
        }
    }
}
```

Hierarchy Level

```
[edit chassis routing-engine disk]
```

Description

Configure the device to perform health monitoring on the Routing Engine disk and raise alarm when an error occurs. You can specify threshold value for each smart attribute of the solid-state drive (SSD). The device raises an alarm when the threshold is breached. You can view the alarms by using the command `show chassis alarms`.

Options

disk Configure health check parameters for the SSD.

ssd-series *ssd-series-name* Specify the SSD series name.

id *id-num* Specify the ID of the SSD smart attribute for which you are configuring the health check. You can view the smart attributes and their IDs of an SSD by using the command `show vmhost hard-disk-test status disk /dev/sda`.

- **Range:** 1 - 255

id-threshold Specify the SSD smart attribute threshold, breaching which will result in the device logging a health event or raising an alarm.

id-value Choose the attribute value type from the following options:

- norm—Use this option to instruct the device to consider normalized value for the specified smart attribute.
- raw—Use this option to instruct the device to consider raw value for the specified smart attribute.

id-flag Choose the attribute value flag from the following options:

- high—The software considers the threshold to be breached if the value is greater than smart threshold.
- low—The software considers the threshold to be breached if the value is less than smart threshold.

smart-check

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 19.2R1.

RELATED DOCUMENTATION

Enabling a Routing Engine to Reboot on Hard Disk Errors | 193

syslog (Chassis)

IN THIS SECTION

- Syntax | 377
- Hierarchy Level | 377
- Description | 377
- Options | 377
- Required Privilege Level | 378

Release Information | 378

Syntax

```
syslog {
    facility {
        severity;
        destination destination;
    }
}
```

Hierarchy Level

```
[edit chassis fpc slot-number pic pic-number adaptive-services service-package extension-provider]
```

Description

Enable PIC system logging to record or view system log messages on a specific PIC. The system log information is passed to the kernel for logging in the **/var/log** directory.

Options

facility—Group of messages that are either generated by the same software process or concern a similar condition or activity. Possible values include the following: `daemon`, `external`, `kernel`, and `pfe`.

severity—Classification of effect on functioning. Possible values are the following options:

- `any`—Include all severity levels.
- `none`—Disable logging of the associated facility to a destination.

- `emergency`—System panic or other condition that causes the routing platform to stop functioning.
- `alert`—Conditions that require immediate correction, such as a corrupted system database.
- `critical`—Critical conditions, such as hard errors.
- `error`—Error conditions that generally have less serious consequences than errors in the emergency, alert, and critical levels.
- `warning`—Conditions that warrant monitoring.
- `notice`—Conditions that are not errors but might warrant special handling.
- `info`—Events or nonerror conditions of interest.

The remaining statement is explained separately. See CLI Explorer.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 9.2.

Options `daemon` and `kernel` (for *`facility`*) introduced in Junos OS Release 9.5.

thermal-health-check

IN THIS SECTION

- Syntax | 379
- Hierarchy Level | 379
- Description | 379

- Options | 380
- Example | 380
- Required Privilege Level | 380
- Release Information | 381

Syntax

```
thermal-health-check [fet-failure-check] {
    action-onfail [auto-shutdown | none]
    ;
    power-threshold value;
}
```

Hierarchy Level

```
[edit chassis]
```

Description

Enable thermal health check, and configure an action to be taken on detection of a thermal health event such as power leakage. The thermal check feature monitors the PSM power output and FRU power consumption and if it detects that the PSM power output exceeds the FRU power consumption by a user-defined threshold, it assumes that there is a thermal health event, and takes an action based on the user configuration.

Use `fet-failure-check` option to shutdown the PSM, raise a Field-effect Transistor (FET) failure alarm and log the events.

Chassis shuts down when power drawn is more than threshold, three times consecutively.

Options

fet-failure-check Enable FET failure detection, and configure an action to be taken upon FET failure.

action-onfail Choose an action to be performed on detection of a thermal health event. The following options are available:

- `auto-shutdown`—The software shuts down the system when a thermal health event is detected.
- `none`—The software raises a major alarm when a thermal health event is detected.

shutdown-timer *value* Duration (in seconds) after which the system is shut down on detection of a thermal health event, if `auto-shutdown` is set as `action-onfail`.

- **Range:** 10 through 900 seconds
- **Default:** 900 seconds

power-threshold *value* Power leak threshold (in watts) considered for the configured action to be taken. This means the configured action is taken if the power leak exceeds by the value configured here (or if the PSM output power exceeds the FRU power consumption by the set threshold value).

- **Range:** 600W through 1000W
- **Default:** 600W

Example

The following command enables thermal health check, and shuts down the system after 10 seconds of thermal health check failure.

```
user@host> set chassis thermal-health-check action-onfail auto-shutdown
               shutdown-timer 10 power-threshold 700
```

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 20.1R1.

`fet-failure-check` option introduced in Junos OS Release 21.2R1.

RELATED DOCUMENTATION

show chassis alarms | 483

watchdog (PSM) | 385

threshold

IN THIS SECTION

- Syntax | 381
- Hierarchy Level | 382
- Description | 382
- Default | 382
- Options | 382
- Required Privilege Level | 383
- Release Information | 383

Syntax

```
threshold threshold-value;
```

Hierarchy Level

[edit chassis "fpc" on page 286 *slot-number* "error " on page 275 "fatal" on page 282]

[edit chassis "fpc" on page 286 *slot-number* "error " on page 275 "major" on page 317

[edit chassis "fpc" on page 286 *slot-number* "error " on page 275 "minor" on page 321]

[edit chassis "error " on page 275 "fatal" on page 282]

[edit chassis "error " on page 275 "major" on page 317]

[edit chassis "error " on page 275 "minor" on page 321]

Description

Configure the threshold value at which to take action. If the severity level of the error is fatal, the action is carried out only once when the total number of errors crosses the threshold value. If the severity level of the error is major, the action is carried out once after the occurrence crosses the threshold. If the severity level is minor, the action is carried out as many times as the value specified by the threshold. For example, when the severity level is minor, and you have configured the threshold value as 10, the action is carried out after the tenth occurrence.

NOTE: You can set the threshold value to 0 for errors with severity level as minor. This implies that no action is taken for that error. You cannot set the threshold value to 0 for errors with severity level as major or fatal.

Default

By default, the error count for fatal and major actions is 1. The default error count for minor actions is 10.

Options

number	Specify the threshold of error counts at which to take action.

- **Range:** 0 through 4,294,967,295

Required Privilege Level

interface	To view this statement in the configuration.
interface-control	To add this statement to the configuration.

Release Information

Statement introduced for PTX Series routers in Junos OS Release 13.3.

Statement introduced for MX240, MX480 MX960, and MX2020 routers in Junos OS Release 14.2.

RELATED DOCUMENTATION

Fabric Resiliency and Degradation | 26

show chassis fpc errors | 1404

Configuring FPC Error Levels and Actions | 178

ucode-imem-remap

IN THIS SECTION

- Syntax | 384
- Hierarchy Level | 384
- Description | 384
- Required Privilege Level | 384
- Release Information | 384

Syntax

```
ucode-imem-remap;
```

Hierarchy Level

```
[edit chassis feb slot number]
```

Description

M120 routers with a single type-1 FPC mapped to an FEB support a microcode remap feature to resolve microcode overflow resulting in bad PIC combinations.

You can enable the microcode remap by using the `ucode-imem-remap` statement at the [**edit chassis feb slot *number***] hierarchy level. The default microcode map will continue to be available if the `ucode-imem-remap` statement is not configured.

NOTE: On M120 routers, the FEB is automatically restarted once the `ucode-imem-remap` statement is configured and committed.

Required Privilege Level

interfaces—To view this statement in the configuration.

interfaces-control—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 10.4R2.

watchdog (PSM)

IN THIS SECTION

- Syntax | 385
- Hierarchy Level | 385
- Description | 385
- Options | 386
- Required Privilege Level | 386
- Release Information | 386

Syntax

```
watchdog{
    timeout value;
    pat-frequency value;
}
```

Hierarchy Level

```
[edit chassis psm]
```

Description

Enable the power supply module (PSM) watchdog feature. Generally, Junos detects the thermal event health events and takes the required action as per user configuration. However, if a thermal health event causes Junos to go down, the PSM watchdog feature detects it and shuts down the router.

NOTE: The PSM watchdog feature works only if all the online PSMs in the router support the feature.

Options

timeout *value* Specify the watchdog timer in seconds. After the specified duration, the watchdog expires.

- **Range:** 600 through 900 seconds
- **Default:** 900 seconds

pat-frequency *value* Specify the frequency (in minutes) at which the software resets the watchdog counter. If the watchdog counter doesn't get reset because of reasons such as Routing Engine crash and system reboot, on watchdog timer expiry, the PSM turns off the output power.

- **Range:** 1 through 3 minutes
- **Default:** 1 minute

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Statement introduced in Junos OS Release 20.1R1.

RELATED DOCUMENTATION

Handling Thermal Health Events Using Thermal Health Check and PSM Watchdog | 194

thermal-health-check | 378

10
CHAPTER

Administrative Commands

clear chassis alarms fabric degraded | 390

clear chassis display message | 392

clear chassis fpc errors | 397

clear chassis sib errors | 399

request chassis afeb | 401

request chassis cb | 402

request chassis cfeb | 408

request chassis fabric plane | 410

request chassis fabric pfe | 414

request chassis feb | 416

set chassis fpc | 419

request chassis fpc | 420

delete chassis fpc | 430

request chassis fpm resync | 432

request chassis mcs | 435

request chassis mic | 437

request chassis optics | 440

request chassis pic | 443

request chassis port-led | 450

request chassis sfb | 455

request chassis sfm | 458

request chassis sib | 460

request chassis spmb restart | 464

set chassis display message | 468

clear chassis alarms fabric degraded

IN THIS SECTION

- Syntax (TX Matrix Plus Router with 3D SIBs) | 390
- Description | 390
- Options | 390
- Required Privilege Level | 391
- Sample Output | 391
- Release Information | 392

Syntax (TX Matrix Plus Router with 3D SIBs)

```
clear chassis alarms fabric degraded lcc number fpc number
```

Description

Clear the fabric degraded alarm for an FPC.

Options

lcc *number* Line-card chassis number.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

fpc *number* — Flexible PIC Concentrator (FPC) slot number. On a TX Matrix Plus router in the TXP-T1600-3D, TXP-T4000-3D, or TXP-Mixed-LCC-3D configuration, specify the number of a T1600 or T4000 router by using the `lcc` *number* option and replace `fpc` *number* with a value from 0 through 7.

Required Privilege Level

clear

Sample Output

show system alarms (TX Matrix Plus router with 3D SIBs)

```
user@host> show system alarms


sfc0-re0:
--------------------------------------------------------------------------
2 alarms currently active
Alarm time               Class  Description
2013-05-08 18:13:58 UTC  Major  LCC 0 Major Errors
2013-05-08 17:48:46 UTC  Major  LCC 7 Major Errors

lcc0-re1:
--------------------------------------------------------------------------
3 alarms currently active
Alarm time               Class  Description
2013-05-08 17:35:34 UTC  Minor  SIB 3 Not Online
2013-05-08 17:35:34 UTC  Minor  SIB 2 Not Online
2013-05-08 18:19:24 UTC  Major  FPC 5 degraded fabric condition detected


user@host> clear chassis alarms fabric degraded
lcc 0 fpc 5
lcc0-re1:
--------------------------------------------------------------------------
```

```
user@host> show system alarms


sfc0-re0:
--------------------------------------------------------------------------
2 alarms currently active
Alarm time               Class  Description
2013-05-08 18:13:58 UTC  Major  LCC 0 Major Errors
2013-05-08 17:48:46 UTC  Major  LCC 7 Major Errors

lcc0-re1:
--------------------------------------------------------------------------
2 alarm currently active
Alarm time               Class  Description
2013-05-08 17:36:34 UTC  Minor  SIB 3 Not Online
2013-05-08 17:36:34 UTC  Minor  SIB 2 Not Online
```

Release Information

Command introduced in Junos OS Release 13.2.

RELATED DOCUMENTATION

show system alarms

clear chassis display message

IN THIS SECTION

- Syntax | 393
- Syntax (TX Matrix Router) | 393
- Syntax (TX Matrix Plus Router) | 393

- Syntax (QFabric Systems) | **394**
- Description | **394**
- Options | **394**
- Required Privilege Level | **395**
- Output Fields | **395**
- Sample Output | **395**
- Release Information | **396**

Syntax

```
clear chassis display message
```

Syntax (TX Matrix Router)

```
clear chassis display message
<lcc number | scc>
```

Syntax (TX Matrix Plus Router)

```
clear chassis display message
<lcc number | sfc number>
```

Syntax (QFabric Systems)

```
clear chassis display message
<node-device name | interconnect-device name>
```

Description

(M40e, M160, M320, T Series routers, EX Series, and QFabric systems only) Clear or stop a text message on the craft interface display, which is on the front of the router or switch or on the LCD panel display on the router or switch. The craft interface alternates the display of text messages with standard craft interface messages, switching between messages every 2 seconds. By default, on both the router and the switch, the text message is displayed for 5 minutes. The craft interface display has four 20-character lines. The LCD panel display has two 16-character lines, and text messages appear only on the second line.

Options

none — Clear or stop a text message on the craft interface display.

interconnect-device *name* — (QFabric systems only) (Optional) On a QFabric system, clear or stop a text message on the LCD panel display on the specified Interconnect device.

lcc *number* — (TX Matrix router and TX Matrix Plus router only) (Optional) Line-card chassis number.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

node-device *name*	(QFabric systems only) (Optional) On a QFabric system, clear or stop a text message on the LCD panel display on the specified Node device in a Node group.
scc	(TX Matrix routers only) (Optional) Clear or stop a text message on the craft interface on the TX Matrix router (switch-card chassis).
sfc *number*	(TX Matrix Plus routers only) (Optional) Clear or stop a text message on the craft interface on the TX Matrix Plus router (or switch-fabric chassis). Replace *number* with 0.

Required Privilege Level

clear

Output Fields

See "show chassis craft-interface" on page 517 for an explanation of output fields.

Sample Output

clear chassis display message

The following example displays and then clears the text message on the craft interface display:

```
user@host> show chassis craft-interface
Red alarm:     LED off, relay off
Yellow alarm:  LED off, relay off
Host OK LED:   On
Host fail LED: Off
FPCs     0  1  2  3  4  5  6  7
------------------------------
Green  ..  *..  *  *.
Red    ........
LCD screen:
     +--------------------+
```

```
     |NOC contact Dusty   |
     |(888) 526-1234      |
     +--------------------+

user@host> clear chassis display message

user@host> show chassis craft-interface
Red alarm:     LED off, relay off
Yellow alarm:  LED off, relay off
Host OK LED:   On
Host fail LED: Off
FPCs     0  1  2  3  4  5  6  7
------------------------------
Green  ..  *..  *  *.
Red    ........
LCD screen:
     +--------------------+
     |host                |
     |Up: 0+17:05:47      |
     |                    |
     |Temperature OK      |
     +--------------------+
```

Release Information

Command introduced in Junos OS Release 7.5.

sfc option for the TX Matrix Plus routers introduced in Junos OS Release 9.6.

RELATED DOCUMENTATION

Configuring the LCD Panel on EX Series Switches (CLI Procedure)

set chassis display message | 468

show chassis craft-interface | 517

clear chassis fpc errors

IN THIS SECTION

- Syntax | 397
- Description | 397
- Options | 397
- Required Privilege Level | 398
- Output Fields | 398
- Sample Output | 398
- Release Information | 398

Syntax

```
clear chassis fpc errors fpc-slot fpc-slot (all | error-id error-id)
```

Description

Clear the chassis FPC errors. You can choose to clear a particular error or all errors on the FPC.

Options

fpc-slot *fpc-slot*	The slot number of the FPC in which you want to run this command.
all	Clear all the errors on the FPC.
error-id *error-id*	Clear a particular error identified by an error-id. An *error-id*, a unique error identifier, is represented as a Uniform Resource Identifier (URI). For example, "`/cpu/0/memory/0/memory-`

uncorrected-error" is an error-id that indicates an uncorrectable error under CPU memory module instance 0.

Required Privilege Level

clear

Output Fields

When you enter this command, you are provided feedback on the status of your request.

Sample Output

clear chassis fpc errors

```
user@host> clear chassis fpc errors fpc-slot
1 all

Clearing error(s) on fpc 1, option all
```

Release Information

Command introduced in Junos OS Release 18.2R1.

RELATED DOCUMENTATION

error | 275

clear chassis sib errors

IN THIS SECTION

- Syntax | 399
- Description | 399
- Options | 399
- Required Privilege Level | 400
- Output Fields | 400
- Sample Output | 400
- Release Information | 400

Syntax

```
clear chassis sib errors sib-slot sib-slot (all | error-id error-id)
```

Description

Clear the chassis SIB errors. You can choose to clear a particular error or all errors on the SIB.

Options

fpc-slot *fpc-slot*	The slot number of the SIB in which you want to run this command.
all	Clear all the errors on the SIB.
error-id *error-id*	Clear a particular error identified by an error-id. An *error-id*, a unique error identifier, is represented as a Uniform Resource Identifier (URI). For example, "`/cpu/0/memory/0/memory-`

uncorrected-error" is an error-id that indicates an uncorrectable error under CPU memory module instance 0.

Required Privilege Level

clear

Output Fields

When you enter this command, you are provided feedback on the status of your request.

Sample Output

clear chassis sib errors

```
user@host> clear chassis sib errors sib-slot
1 all

Clearing error(s) on sib 1, option all
```

Release Information

Command introduced in Junos OS Evolved Release 19.4R1.

RELATED DOCUMENTATION

error | 275

request chassis afeb

IN THIS SECTION

- Syntax | 401
- Description | 401
- Options | 401
- Required Privilege Level | 402
- Output Fields | 402
- Sample Output | 402
- Release Information | 402

Syntax

```
request chassis afeb (offline | online | restart)
```

Description

Control the operation of the compact Forwarding Engine Board (FEB).

Options

offline	Take the FEB offline.
online	Bring the FEB online.
restart	Restart the FEB.

Required Privilege Level

view

Output Fields

When you enter this command, you are provided feedback on the status of your request.

Sample Output

request chassis afeb online (MX104 Router)

```
user@host> request chassis afeb online
AFEB is already online
```

Release Information

Command introduced in Junos OS Release 13.2.

RELATED DOCUMENTATION

show chassis afeb | 480

request chassis cb

IN THIS SECTION

Syntax | 403

- Syntax (TX Matrix Router) | **403**
- Syntax (TX Matrix Plus Router) | **403**
- Syntax (QFabric System) | **404**
- Syntax (EX9253 Switches) | **404**
- Output | **404**
- Description | **404**
- Options | **404**
- Required Privilege Level | **406**
- Output Fields | **406**
- Sample Output | **406**
- Usage | **408**
- Release Information | **408**

Syntax

```
request chassis cb (offline | online) slot slot-number
```

Syntax (TX Matrix Router)

```
request chassis cb (offline | online) <slot slot-number | lcc number slot cb-slot-number | scc
number slot cb-slot-number>
```

Syntax (TX Matrix Plus Router)

```
request chassis cb (offline | online) <slot slot-number | lcc number slot cb-slot-number | sfc
number slot cb-slot-number>
```

Syntax (QFabric System)

```
request chassis cb  (offline | online) interconnect-device name slot slot-number
<interconnect-device name slot slot-number (offline | online)>
```

Syntax (EX9253 Switches)

```
request chassis cb  (offline | online) name slot slot-number
```

Output

The following error message is displayed if user tries to offine a slot when the related node is online.

```
root@re0-re0> request chassis cb slot 1 offline

Error: CB offline is not allowed, when node is in online state.
Try to offline the node using "request node offline [node]"
```

Description

(M120, M320, and MX Series routers and T Series routers, QFabric systems, and EX8200 switches only) Control the operation of the Control Board (CB).

Options

offline Take the Control Board offline.

> **NOTE**: On a QFabric system, to bring the backup Control Board on a QFX3008-I Interconnect device offline, issue the `request chassis cb slot backup-slot-number offline` command.

> **NOTE**: Only backup Control Board can be turned offline or online. To turn a Control Board offline or to bring it back online, the Routing Engine should be turned offline first.

online — Bring the Control Board online.

interconnect-device *name* — (QFabric systems only) (Optional) Bring the QFX3008-I Interconnect device Control Board either offline or online:

slot *slot-number* — Control Board slot number:

- (TX Matrix and TX Matrix Plus routers only) On a TX Matrix router, if you specify the number of the T640 router by using the lcc *number* option (the recommended method), replace *cb-slot-number* with a value from 0 through 1.

  Likewise, on a TX Matrix Plus router, if you specify the number of the T1600 or T4000 router by using the lcc *number* option (the recommended method), replace *cb-slot-number* with a value from 0 through 1.
- M320 router—Replace *slot-number* with a value from 0 through 1.
- MX480/MX240 routers—Replace *slot-number* with a value from 0 through 1.
- MX960 router—Replace *slot-number* with a value from 0 through 2.
- MX2020, MX2010, and MX2008 routers—Replace *slot-number* with 0 or 1.
- EX8208 switch—Replace *slot-number* with a value from 0 through 2.
- EX8216 switch—Replace *slot-number* with a value from 0 through 1.
- QFabric System—Replace *slot-number* with a value from 0 through 1.

lcc *number* — (TX Matrix, TX Matrix Plus routers only) (Optional) Line-card chassis number.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

sfc *number* (TX Matrix Plus routers only) (Optional) Change the CB status for the TX Matrix Plus router (switch-fabric chassis). Replace *number* with 0.

Required Privilege Level

maintenance

Output Fields

When you enter this command, you are provided feedback on the status of your request.

Sample Output

request chassis cb

```
user@host> request chassis cb offline slot 1

Backup CB 1 cannot be set offline, backup RE is online
```

request chassis cb interconnect-device (QFabric System)

```
user@switch> request chassis cb interconnect-device
interconnect1 offline slot 1
Backup CB 1 cannot be set offline, backup RE is online
```

request chassis cb (MX2020 Router)

```
user@host> request chassis cb offline slot 1
Backup CB 1 cannot be set offline, backup RE is online
```

request chassis cb (MX2010 Router)

```
user@host> request chassis cb offline slot 1
Backup CB 1 cannot be set offline, backup RE is online
```

request chassis cb (MX2008 Router)

```
user@host>request chassis cb offline slot 1
Backup CB 1 cannot be set offline, backup RE is online
```

request chassis cb (MX10003 Router)

```
user@host>request chassis cb online slot 1
CB 1 appears to be online already
```

request chassis cb (EX9253 Switch)

```
user@switch>request chassis cb offline slot 1
Offline initiated, use "show chassis environment cb" to verify
```

Usage

When `request chassis cb slot 1 offline`, is configured before the node is made offline, the following error `Error: CB offline is not allowed, when the node is online state. Try to offline the node using "request node offline` *node* is displayed.

Release Information

Command introduced before Junos OS Release 7.4.

sfc option introduced for the TX Matrix Plus router in Junos OS Release 9.6.

RELATED DOCUMENTATION

Understanding Switching Control Board Redundancy

request chassis cfeb

IN THIS SECTION

- Syntax | 409
- Description | 409
- Options | 409
- Required Privilege Level | 409
- Output Fields | 409
- Sample Output | 410
- Release Information | 410

Syntax

```
request chassis cfeb (offline | online | restart)
```

Description

(M7i and M10i routers only) Control the operation of the Compact Forwarding Engine Board (CFEB).

Options

offline	Take the CFEB offline.
online	Bring the CFEB online.
restart	Restart the CFEB.

Required Privilege Level

maintenance

Output Fields

When you enter this command, you are provided feedback on the status of your request.

Sample Output

request chassis cfeb

```
user@host> request chassis cfeb offline
CFEB Offlined
```

Release Information

Command introduced before Junos OS Release 7.4.

RELATED DOCUMENTATION

- show chassis cfeb | 513
- *Configuring CFEB Redundancy on the M10i Router*
- CFEB Overview

request chassis fabric plane

IN THIS SECTION

- Syntax | 411
- Description | 411
- Options | 411
- Required Privilege Level | 412
- Output Fields | 412
- Sample Output | 412
- Release Information | 414

Syntax

```
request chassis fabric plane plane-number  (offline | online)
```

Description

(M120 and MX Series routers and EX8200 switches only) Control the operation of the specified fabric plane.

On an MX480 or MX240 series router, you can configure the active control board for redundancy mode or increased bandwidth mode. When running in increased bandwidth mode, MX series routers with Trio chips and the MPC3E will use all eight active fabric planes.

To take both plane 0 and plane 1 offline on a MX480 and MX240 series routers with one or more MPC4E MICs installed, a X86 Media Service Blade, and/or 100G PFE, and where redundancy-mode is configured for "increased-bandwidth", Juniper recommends taking plane 1 offline before plane 0. Likewise, when the router is configured for increased-bandwidth mode, taking fabric planes 0, 2, 4, and 6 offline can cause the chassis to run in a reduced fabric bandwidth mode. Plane 7 may remain in a "spare" state (as seen in the "show chassis fabric summary" command output) until plane 3 is taken offline and then brought back up.

Options

offline Take the fabric plane offline. Use the `request chassis fabric plane plane-number offline` command to clear a FAULT state on a fabric plane. To bring the fabric plane back online, use the `request chassis fabric plane plane-number online` command.

online Bring the fabric plane online.

plane *plane-number* Fabric plane number.

- For the M120 router, replace *plane-number* with a value from 0 through 3.
- For the MX480 and MX240 routers, replace *plane-number* with a value from 0 through 7.

- For the MX2020, MX2010, and MX2008 routers, replace *plane-number* with a value from 0 through 7.
- For the MX960, , and MX10008 routers, replace *plane-number* with a value from 0 through 11.
- For the EX8208 switch, replace *plane-number* with a value from 0 through 11.
- For the EX8216 switch, replace *plane-number* with a value from 0 through 7.

Required Privilege Level

maintenance

Output Fields

When you enter this command, you are provided feedback on the status of your request.

Sample Output

request chassis fabric plane 0 online

```
user@host> request chassis fabric plane 0 online
Online initiated, use “show chassis fabric plane” to verify
```

request chassis fabric plane 0 offline

```
user@host> request chassis fabric plane 0 offline
Offline initiated, use “show chassis fabric plane” to verify
```

request chassis fabric plane 0 online (EX8200 switch)

```
user@host> request chassis fabric plane 0 online

Plane 0 is already active
```

request chassis fabric plane (MX2020 Router)

```
user@host> request chassis fabric plane 2 online
Plane 2 is already active
```

request chassis fabric plane (MX2010 Router)

```
user@host> request chassis fabric plane 4 online
Plane 4 is already active
```

request chassis fabric plane (MX2008 Router)

```
user@host>request chassis fabric plane 4 online
Plane 4 is already active
```

request chassis fabric plane (MX10003 Router)

```
user@host>request chassis fabric plane 4 online
Plane 4 is already active
```

request chassis fabric plane (EX9253 Switch)

```
user@switch>request chassis fabric plane 0 online
Plane 0 is already active
```

Release Information

Command introduced in Junos OS Release 8.0.

RELATED DOCUMENTATION

show chassis fabric plane | 1148

show chassis fabric plane-location | 1189

show chassis fabric summary | 1243

request chassis fabric pfe

IN THIS SECTION

- Syntax | 414
- Description | 414
- Options | 415
- Required Privilege Level | 415
- Release Information | 415

Syntax

```
request chassis fabric pfe pfe-number fpc fpc-number offline
```

Description

Make a specified fabric of the packet forwarding engine (PFE) offline.

This command makes only the specified PFE of the FPC offline and rest of the PFEs of the FPC are not affected. If a PFE of an FPC is affected because of fabric path wedge errors, the affected PFE is disabled and the associated fabric goes offline as part of fabric hardening actions. The output of the `show chassis fabric fpcs` and `show chassis fabric plane` commands show a new state for the PFE as `Fabric Disabled`.

Fabric stream wedge occurs when the ASIC of the FPC is in the stuck state, and the ingress PFE fails to send traffic to the destination PFE. You can use the request `chassis fabric pfe` *`pfe-number`* `fpc` *`fpc-number`* `offline` command to make any PFE offline.

NOTE: This statement does not have an option to bring the PFE back online. You must restart the FPC to bring the PFE back online.

Options

pfe-number [0–3]

fpc-number [0–11] or [0–5] or [0–19] or [0–2], depending on the type of the chassis.

Required Privilege Level

interface—To view this statement in the configuration.

interface-control—To add this statement to the configuration.

Release Information

Command introduced in Junos OS Release 17.2.

RELATED DOCUMENTATION

show chassis fabric plane | 1148

show chassis fabric fpcs | 1096

request chassis feb

IN THIS SECTION

- Syntax | 416
- Syntax (ACX1000, ACX7509 Devices) | 416
- Description | 416
- Options | 417
- Required Privilege Level | 417
- Output Fields | 417
- request chassis feb (M120 Router) | 417
- request chassis feb (ACX1000, ACX7509 Routers) | 418
- Release Information | 418

Syntax

```
request chassis feb slot slot-number(offline | online | restart)
```

Syntax (ACX1000, ACX7509 Devices)

```
request chassis feb restart slot slot-number
```

Description

(M120 router only) Control the operation of the specified Forwarding Engine Board (FEB).

(ACX1000, ACX7509 routers) Restart the specified FEB. Upon restart, the FEB goes offline and online within the stipulated time. FEB traffic is forwarded before power off. Traffic is recovered after FEB is online.

Options

slot *slot-number*	FEB slot number. Replace ***slot-number*** with a value from 0 through 5. For ACX7509, the value is 0 or 1 and the offline, online and restart options are not supported in backup routing engine (slot 1), where as all other FRU operations are supported.
offline	Bring the specified FEB offline.
online	Bring the specified FEB online.
restart	Restart the specified FEB.

Required Privilege Level

maintenance

Output Fields

When you enter this command, you are provided feedback on the status of your request.

request chassis feb (M120 Router)

request chassis feb offline slot 0

```
user@host> request chassis feb slot 0 offline
Offline initiated, use “show chassis feb” to verify
```

request chassis feb online slot 0

```
user@host> request chassis feb slot 0 online
Online initiated, use “show chassis feb” to verify
```

request chassis feb restart slot 0

```
user@host> request chassis feb slot 0 restart

Restart initiated, use “show chassis feb” to verify
```

request chassis feb (ACX1000, ACX7509 Routers)

```
user@host> request chassis feb slot 0 restart
FEB will be restarted NOW.
```

Release Information

Command introduced in Junos OS Release 8.0.

Support for slot 0 and 1 introduced in Release 21.4 for ACX7509 devices.

RELATED DOCUMENTATION

- request chassis feb | 416
- show chassis feb | 1309
- show chassis fabric feb | 1087
- show chassis fpc-feb-connectivity | 1410
- No Link Title

set chassis fpc

IN THIS SECTION

- Syntax | 419
- Description | 419
- Options | 419
- Usage | 419
- Required Privilege Level | 420
- set chassis fpc (PTX) | 420
- Release Information | 420

Syntax

```
set chassis fpc fpc_id no-vlan-tagging
```

Description

(PTX Series routers) Configure no VLAN tagging for a specific FPC.

Options

fpc *fpc_id* For PTX devices, *fpc_id* value is 0 to 15.

Usage

Use `delete chassis fpc no-vlan-tagging` command to disable **no-vlan-tagging**.

Required Privilege Level

maintenance

set chassis fpc (PTX)

```
user@host> set chassis fpc 1 no-vlan-tagging
```

Release Information

Command introduced in Junos OS Release 21.3R1.

RELATED DOCUMENTATION

delete chassis fpc | 430

request chassis fpc

IN THIS SECTION

- Syntax | 421
- Syntax (TX Matrix and TX Matrix Plus Routers) | 421
- Syntax (MX Series Routers) | 421
- Syntax (QFabric System) | 422
- Syntax (PTX10008 and PTX10001-36MR) | 422
- Description | 422
- Options | 424
- Required Privilege Level | 427

Output Fields | 427
Sample Output | 427
Release Information | 429

Syntax

```
request chassis fpc (offline | online | restart | force) slot slot-number (offline | online |
restart) pfe-instance pfe-id(offline | online | restart)
```

Syntax (TX Matrix and TX Matrix Plus Routers)

```
request chassis fpc (offline | online | restart) slot slot-number
<lcc number>
```

Syntax (MX Series Routers)

```
request chassis fpc (offline | online | restart) slot slot-number
<all-members>
<local>
<member member-id>
<tag>
<pfe-instance pfe-number(offline | online | restart)>
```

Syntax (QFabric System)

```
request chassis fpc
<interconnect-device name slot slot-number (offline | online)>
<(offline | online) interconnect-device name slot slot-number>
<slot slot-number interconnect-device name (offline | online)>
```

Syntax (PTX10008 and PTX10001-36MR)

```
request chassis fpc
<(offline | online | restart | force) slot slot-number>
<slot slot-number (offline | online | restart>
<pfe-instance pfe-number (offline | online | restart)>
```

Description

(M20, M40, M40e, M120, M160, M320, MX Series, and TSeries routers, QFabric systems, EX Series switches, and PTX Series Packet Transport Routers only) Control the operation of the Flexible PIC Concentrator (FPC). An error message is displayed when restart, offline, or online is configured using `request chassis fpc slot` command on an FPC with empty slot.

NOTE:

- Starting with Junos OS Release 12.3, it is possible that FPCs brought offline by using the `request chassis fpc slot fpc-slot offline` operational-mode CLI command can come online during a configuration commit or power-supply replacement procedure. As an alternative, use the `set fpc fpc-slot power off` configuration-mode command at the `[edit chassis]` hierarchy level to ensure that the FPCs remain offline.
- Starting in Junos OS Evolved Release 19.1R1, PTX10003-80C and PTX10003-160C devices do not support the `request chassis fpc slot <slot-number> online` command. The only way to bring up an FPC (MPC) that is offline is by rebooting the chassis. So, starting in Junos OS Evolved

Release 21.1R1, when you take an FPC offline by using the `request chassis fpc slot <slot-number> offline` command, the screen displays the following message.

```
Warning : FPC <slot> cannot be made online using a CLI command. You need to perform router reboot
using "request system reboot" to online the FPC <slot>. Do you wish to continue ? [yes,no] (no).
```

- Starting with Junos OS Release 21.4R3, when PFE reset is configured as error action and CM error occurs, use the `request chassis fpc slot 4 pfe-instance 1 restart` command to restart a disabled PFE.

On Junos OS Evolved, an FPC does not restart when you enter a commit command that configures an element of that FPC.

NOTE: In releases earlier than Junos OS Release 15.1F3 and Junos OS Release 16.1, offline FPCs in the PTX5000 router might be powered on by the router during a reboot, or when triggered by other power management events on the router, such as when you take another FPC offline.

Starting with Junos OS Release 15.1F3 and Junos OS Release 16.1, offline FPCs do not come online during reboots or other power management events. To bring such an FPC online:

1. Delete the `fpc *fpc-slot* power off` statement from the `[edit chassis]` hierarchy level, if that statement is configured, and commit the configuration.
2. Either issue the `request chassis fpc online slot *fpc-slot*` operational-mode CLI command or press and hold the FPC **ONLINE/OFFLINE** button for about 5 seconds until the green **OK** LED next to the button lights steadily.

NOTE: If a CLI-based firmware upgrade is in progress, the specified FPC does not restart. Starting with Junos OS Release 15.1, the following message is displayed when this occurs:

```
user@host> request chassis fpc slot 0 restart
FPC 0 Firmware update in progress. Wait!!!
```

NOTE: The command `request chassis fpc (offline | online) slot *slot-number*` is not supported on PTX1000 router. Whereas, `request chassis fpc restart slot *slot-number*` is supported on PTX1000 router.

NOTE: On EX9204, EX9208, EX9214, and EX9253 switches, when a line card is brought online, if the aggregate interface is initialized before the child interface is marked as part of the aggregate interface, there might be a loss of traffic from the aggregate interface for up to 30 seconds and the CPU usage of the line card installed on the switch might go up to 100%.

Options

offline	Take the FPC offline.
online	Bring the FPC online.
interconnect-device *name*	(QFabric systems only) Bring the FPC on the QFX3008-I Interconnect device either offline or online: • (QFabric System) On a QFabric system, specify the name of the QFX3008-I Interconnect device containing the FPC you want to bring either offline or online.
restart	Restart the FPC.
force	Restart an unresponsive FPC on PTX platforms.
slot *slot-number*	The following options can be configured for FPC slots: • offline —Take the FPC slot offline. • online — Bring the FPC slot online. • restart — Restart the FPC slot. FPC slot number: • M20 router—0 through 3. • M120 router—0 through 5. • MX240 router—0 through 2. On the MX240 router, slot-number corresponds to the (DPC slot number. If an MPC is installed, slot-number corresponds to the MPC slot number.

- MX480 router—0 through 5. On the MX480 router, slot-number corresponds to the DPC slot number. If an MPC is installed, slot-number corresponds to the MPC slot number.
- MX960 router—0 through 11. On the MX960 router, slot-number corresponds to the DPC slot number. If an MPC is installed, slot-number corresponds to the MPC slot number.
- MX2020 router—0 through 19.
- MX2010 router—0 through 9.
- MX2008 router—0 through 9.
- MX10008 router—0 through 7.

  MX10016 router—0 through 16.
- TX Matrix and TX Matrix Plus routers only—On the TX Matrix router, if you specify the number of the T640 router by using the lcc *number* option (the recommended method), replace *slot-number* with a value from 0 through 7. Otherwise, replace *slot-number* with a value from 0 through 31.

  Likewise, on a TX Matrix Plus router, if you specify the number of the T1600 or T4000 router by using the lcc *number* option (the recommended method), replace *slot-number* with a value from 0 through 7. Otherwise, replace *slot-number* with a value from 0 through 31. In case of TX Matrix Plus router with 3D SIBs, replace *slot-number* with a value from `0` through `63`. For example, the following commands have the same result:

  ```
  user@host> request chassis fpc lcc 1 slot 1 offline
  user@host> request chassis fpc slot 9 offline
  ```
- Other routers—0 through 7.
- QFabric System—Replace *slot-number* with a value from 0 through 2.
- EX Series switches:
  - EX4200 switches in a Virtual Chassis configuration—Replace *slot-number* with a value from 0 through 9.
  - EX6210 switches—Replace *slot-number* with a value from 0 through 9.

> **NOTE**: These commands are not supported for slots 4 and 5 when a Switch Fabric and Routing Engine (SRE) module is installed in those slots. These commands are supported for slots 4 and 5 only if a line card is installed in them.

- EX8208 switches—Replace *slot-number* with a value from 0 through 7.
- EX8216 switches—Replace *slot-number* with a value from 0 through 15.
- EX9204 switches—Replace *slot-number* with a value from 0 through 2.
- EX9208 switches—Replace *slot-number* with a value from 0 through 5.
- EX9214 switches—Replace *slot-number* with a value from 0 through 11.

- PTX5000 Packet Transport Router—Replace *slot-number* with a value from 0 through 7.

tag Firmware tag for online-reload.

pfe-instance *pfe-number* PFE instance number for the FPC slot of PTX10008 device—0 through 4.
The following options can be configured for PFEs:

- offline —Take the PFE instance on the FPC offline.
- online — Bring the PFE instance on the FPC online.
- restart — Restart the PFE instance on the FPC.

all-members (MX Series routers only) (Optional) Change FPC status of all members of the Virtual Chassis configuration.

local (MX Series routers only) (Optional) Change FPC status of the local Virtual Chassis member.

member *member-id* (MX Series routers only) (Optional) Change FPC status of the specified member of the Virtual Chassis configuration. Replace *member-id* with a value of 0 or 1.

lcc *number* (TX Matrix router and TX Matrix Plus router only) (Optional) Line-card chassis number.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

Required Privilege Level

maintenance

Output Fields

When you enter this command, you are provided feedback on the status of your request.

Sample Output

request chassis fpc

```
user@host> request chassis fpc online slot 0

Online initiated, use "show chassis fpc" to verify
```

request chassis fpc (MX Series Routers with Media Services Blade [MSB])

```
user@host> request chassis fpc slot 0
Possible completions:
  offline              Take FPC offline
  online               Bring FPC online
```

```
  restart              Restart FPC
```

request chassis fpc (MX2020 Router)

```
user@host> request chassis fpc online slot 2
Online initiated, use "show chassis fpc" to verify
```

request chassis fpc (MX2010 Router)

```
user@host> request chassis fpc offline slot 5
Offline initiated, use "show chassis fpc" to verify
```

request chassis fpc (MX2008 Router)

```
user@host> request chassis fpc online slot 5
Online initiated, use "show chassis fpc" to verify
```

request chassis fpc (MX10003, MX10004 Router)

```
user@host> request chassis fpc online slot 1
Online initiated, use "show chassis fpc" to verify
```

request chassis fpc (MX204 Router)

```
user@host> request chassis fpc online slot 0
Online initiated, use "show chassis fpc" to verify
```

request chassis fpc (PTX10008 Router)

```
user@host> request chassis fpc online slot 1
Online initiated, use "show chassis fpc" to verify
```

```
user@host> request chassis fpc slot 0 pfe-instance 0 ?
Possible completions:
  offline              Take FPC offline
  online               Bring FPC online
  restart              Restart FPC
```

request chassis fpc (EX9200 Switch)

```
user@host> request chassis fpc slot 0
Possible completions:
  offline              Take FPC offline
  online               Bring FPC online
  restart              Restart FPC
```

request chassis fpc (EX9251 Switch)

```
user@switch> request chassis fpc online slot
0
Online initiated, use "show chassis fpc" to verify
```

request chassis fpc (EX9253 Switch)

```
user@switch> request chassis online fpc slot
0
Online initiated, use "show chassis fpc" to verify
```

Release Information

Command introduced before Junos OS Release 7.4.

Command support added to PTX10008 device in Junos OS Evolved Release 21.2.

RELATED DOCUMENTATION

MX960 Flexible PIC Concentrator Description

delete chassis fpc

IN THIS SECTION

- Syntax | 430
- Description | 430
- Options | 430
- Usage | 431
- Required Privilege Level | 431
- Output Fields | 431
- delete chassis fpc (PTX) | 431
- Release Information | 431

Syntax

```
delete chassis fpc fpc_id no-vlan-tagging
```

Description

(PTX Series routers) Disable no VLAN tagging for a specific FPC.

Options

fpc *fpc_id* For PTX devices, *fpc_id* value is 0 to 15.

Usage

Use `set chassis fpc <fpc_id> no-vlan-tagging` command to re-enable **no-vlan-tagging** on a specific FPC.

Required Privilege Level

maintenance

Output Fields

When you enter this command, you are provided feedback on the status of your request.

delete chassis fpc (PTX)

```
user@host> delete chassis fpc 1 no-vlan-tagging
```

Release Information

Command introduced in Junos OS Release 21.3R1.

RELATED DOCUMENTATION

set chassis fpc | 419

request chassis fpm resync

IN THIS SECTION

- Syntax | 432
- Syntax (TX Matrix Routers) | 432
- Syntax (TX Matrix Plus Routers) | 432
- Syntax (MX Series Routers) | 433
- Description | 433
- Options | 433
- Required Privilege Level | 434
- Output Fields | 434
- Sample Output | 434
- Release Information | 435

Syntax

```
request chassis fpm resync
```

Syntax (TX Matrix Routers)

```
request chassis fpm resync (lcc number / scc)
```

Syntax (TX Matrix Plus Routers)

```
request chassis fpm resync (lcc number /  sfc number)
```

Syntax (MX Series Routers)

```
request chassis fpm resync
<all-members>
<local>
<member member-id>
```

Description

(M40e, M120, M160, M320, MX Series, and T Series routers only) Resynchronize the craft interface status.

Options

all-members (MX Series routers only) (Optional) Resynchronize the craft interface status on all members of the Virtual Chassis configuration.

lcc *number* (TX Matrix router and TX Matrix Plus router only) (Optional) Line-card chassis number.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local (MX Series routers only) (Optional) Resynchronize the craft interface status on the local Virtual Chassis member.

member *member-id*	(MX Series routers only) (Optional) Resynchronize the craft interface status on the specified member of the Virtual Chassis configuration. Replace ***member-id*** with a value of 0 or 1.
scc	(TX Matrix routers only) Resynchronize the craft interface status on the TX Matrix router (switch-card chassis).
sfc *number*	(TX Matrix Plus routers only) Resynchronize the craft interface status on the TX Matrix Plus router (or switch-fabric chassis). Replace ***number*** with **0**.

Required Privilege Level

maintenance

Output Fields

When you enter this command, you are provided feedback on the status of your request.

Sample Output

request chassis fpm resync

```
user@host> request chassis fpm resync
Front Panel resynced
```

request chassis fpm resync (MX2010 Router)

```
user@host > request chassis fpm resync
Front Panel resynced.
```

Release Information

Command introduced before Junos OS Release 7.4.

sfc option introduced for the TX Matrix Plus router in Junos OS Release 9.6.

RELATED DOCUMENTATION

show chassis environment fpm | 811

Resynchronizing FPC Sequence Numbers with Active FPCs when an FPC Comes Online | 192

request chassis mcs

IN THIS SECTION

- Syntax | 435
- Description | 436
- Options | 436
- Required Privilege Level | 436
- Output Fields | 436
- Sample Output | 436
- Release Information | 437

Syntax

```
request chassis mcs (offline | online | restart) slot slot-number
```

Description

(M40e and M160 routers only) Control the operation of the Miscellaneous Control Subsystem (MCS).

Options

offline	Take the MCS offline.
online	Bring the MCS online.
restart	Restart the MCS.
slot *slot-number*	MCS slot number. Replace ***slot-number*** with 0 or 1.

Required Privilege Level

maintenance

Output Fields

When you enter this command, you are provided feedback on the status of your request.

Sample Output

request chassis mcs

```
user@host> request chassis mcs online slot 0
MCS 0 appears to be online already
```

Release Information

Command introduced before Junos OS Release 7.4.

RELATED DOCUMENTATION

show chassis environment mcs | 852

request chassis mic

IN THIS SECTION

- Syntax | 437
- Description | 437
- Options | 438
- Required Privilege Level | 438
- Output Fields | 439
- Sample Output | 439
- Release Information | 440

Syntax

```
request chassis mic (offline | online) fpc-slot slot-number mic-slot slot-number
```

Description

(MX Series routers only) Control the operation of the Modular Interface Cards (MICs) installed on a Modular Port Concentrator (MPC).

NOTE: On MX960 routers, if the MIC is not functioning correctly, you should take the MPC offline, replace it with a new MPC, and reinstall the MIC. On MX104 routers, the `request chassis mic` command is not supported on FPC slot 2 and MIC slot 0.

Options

offline Take the MIC offline.

online Bring the MIC online.

fpc-slot *slot-number* FPC slot number where the MIC is installed:

- ACX4000 router—Replace ***fpc-slot*** with the value `0` or `1`.
- MX80 router—Replace ***fpc-slot*** with the value **1**. This command is not supported on FPC slot 0.
- MX104—Replace *`fpc-slot`* with the value from `0` through `2`.
- MX240 router—Replace ***fpc-slot*** with a value from **0** through **2**.
- MX480 router—Replace ***fpc-slot*** with a value from **0** through **5**.
- MX960 router—Replace ***fpc-slot*** with a value from **0** through **11**.
- MX2020 router—Replace ***fpc-slot*** with a value from **0** through **19**.
- MX2010 router—Replace ***fpc-slot*** with a value from **0** through **9**.
- MX2008 router—Replace ***fpc-slot*** with a value from **0** through **9**.

mic-slot *slot-number* MIC slot number. Replace ***slot-number*** with **0** or **1**.

Required Privilege Level

maintenance

Output Fields

When you enter this command, you are provided feedback on the status of your request.

Sample Output

request chassis mic online

```
user@host> request chassis mic online fpc-slot
1 mic-slot 1
```

request chassis mic (MX Routers with Media Services Blade [MSB])

```
user@host> request chassis mic fpc-slot 1 mic-slot
0
Possible completions:
  offline              Take MIC offline
  online               Bring MIC online
```

request chassis mic offline (MX104 Router)

```
user@host > request chassis mic mic-slot 0 fpc-slot
1 offline
fpc 1 mic 0 offline initiated, use "show chassis fpc pic-status 1" to verify
```

request chassis mic online (MX2010 Router)

```
user@host> request chassis mic online fpc-slot 1 mic-slot
0
FPC 1, MIC 0 is already online
```

request chassis mic online (MX2008 Router)

```
user@host>request chassis mic online fpc-slot 0 mic-slot
0
FPC 0 is not online
```

Release Information

Command introduced in Junos OS Release 10.1.

RELATED DOCUMENTATION

show chassis hardware

request chassis optics

IN THIS SECTION

- Syntax | 441
- Description | 441
- Options | 441
- Required Privilege Level | 441
- Output Fields | 441
- Sample Output | 442
- Release Information | 442

Syntax

```
request chassis optics fpc-slot fpc-slot-number reactivate
```

Description

(MX240, MX480, and MX960 routers) Control the status of the optical transceiver.

Options

fpc-slot *fpc-slot-number* — Slot number of the line card that houses the optical transceiver.

- MX240 router—Replace *fpc-slot-number* with a value from 0 through 2.
- MX480 router—Replace *fpc-slot-number* with a value from 0 through 5.
- MX960 router—Replace *fpc-slot-number* with a value from 0 through 11.

reactivate — Reactivate the optical transceiver.

Required Privilege Level

maintenance

Output Fields

When you enter this command, you are provided feedback on the status of your request.

Sample Output

request chassis optics (MX480 router)

```
user@host> request chassis optics fpc-slot 5
reactivate
Enable FPC 5 non-nebs optics.
```

request chassis optics (MX10003 router)

```
user@host>request chassis optics fpc-slot 1 reactivate
Enable FPC 1 non-nebs optics.
```

request chassis optics (EX9251 swich)

```
user@switch>request chassis optics fpc-slot 0 reactivate
Enable FPC 0 non-nebs optics.
```

request chassis optics (EX9253 swich)

```
user@switch>request chassis optics fpc-slot 1 reactivate
Enable FPC 1 non-nebs optics.
```

Release Information

Command introduced in Junos OS Release 12.3.

RELATED DOCUMENTATION

Determining Transceiver Support and Specifications for M Series and T Series Routers

request chassis pic

IN THIS SECTION

- Syntax | 443
- Syntax (MX Series Routers) | 443
- Syntax (TX Matrix and TX Matrix Plus Routers) | 444
- Description | 444
- Options | 445
- Required Privilege Level | 448
- Output Fields | 448
- Sample Output | 449
- Release Information | 450

Syntax

```
request chassis pic (offline | online) fpc-slot slot-number pic-slot slot-number
```

Syntax (MX Series Routers)

```
request chassis pic (offline | online) fpc-slot slot-number pic-slot slot-number
<member member-id>
```

Syntax (TX Matrix and TX Matrix Plus Routers)

```
request chassis pic (offline | online) fpc-slot slot-number pic-slot slot-number
<lcc number>
```

Description

Control the operation of the PIC.

NOTE: Starting with Junos OS Release 12.3, it is possible that PICs brought offline by using the `request chassis fpc slot` *fpc-slot* `pic` *pic-slot* `offline` operational mode command can come online during a configuration commit or power-supply replacement procedure. (See the following note about difference in behavior on Junos OS Evolved.) As an alternative, use the `set fpc` *fpc-slot* `pic` *pic-slot* `power off` configuration mode command at the `[edit chassis]` hierarchy level to ensure that PICs remain offline.

NOTE: On Junos OS Evolved, a PIC does not restart when you enter a `commit` command that configures an element of that PIC.

NOTE: The `request chassis pic (offline | online) fpc-slot` *slot number* `pic-slot` *slot-number* command is not supported for built-in PICs on MX Series routers.

To view a list of built-in PICs on the router or switch chassis, use the `show chassis hardware` command.

NOTE: This command is not supported on MX960 and MX2020 routers with MPC5EQ.

NOTE: T1600 routers and TX Matrix Plus routers with 100-Gigabit Ethernet PICs require two adjacent PIC slots, 0 and 1, for each PIC. Therefore, only `online` and `offline` command options to

PIC slot 0 are allowed. Use of the `online` and `offline` command options for PIC slot 1 with the described router and PIC combination is not allowed.

NOTE: In T Series routers, when the PIC state is set from `offline` to `online` or vice-versa before the processing is complete for the previous command, you are provided feedback on the status of your request. The following sample messages are displayed if you try to set a PIC `offline` or `online`:

```
user@switch> request chassis pic fpc-slot 1
pic-slot 0 online
fpc 1 pic 0 online initiated, use "show chassis fpc pic-status" to verify
user@switch> request chassis pic fpc-slot 1
pic-slot 0 online
FPC 1 PIC 0 already transitioning to online
```

When the same PIC is set to a different state while the transition is in progress, you are provided feedback on the status of your request.

```
user@switch> request chassis pic fpc-slot 1
pic-slot 0 offline
FPC 1, PIC 0 already transitioning to online.  Please retry later.
```

NOTE: If a CLI-based firmware upgrade is in progress, it prevents the specified PIC from restarting. Starting in Junos OS Release 15.1, the following message is displayed:

```
user@host> request chassis pic fpc-slot 0 pic-slot
1 offline
PIC's Firmware update in progress. Wait!!!
```

Options

offline Take the PIC offline.

online Bring the PIC online.

fpc-slot *slot-number*

Flexible PIC Concentrator (FPC) slot number. Replace *slot-number* with a value appropriate for your router or switch:

- ACX4000 routers—1 or 2.
- EX Series switches:
  - EX3200 switches and EX4200 standalone switches—0.
  - EX4200 switches in a Virtual Chassis configuration—0 through 9 (switch's member ID).
  - EX8208 switches—0 through 7 (line card).
  - EX8216 switches—0 through 15 (line card).
- M5, M7i, M10, and M10i routers—0 or 1.
- M20 routers—0 through 3.
- M40 and M40e routers—0 through 7.
- M120 routers—0 through 5.
- M160 routers—0 through 7.
- M320 routers—0 through 7.
- MX 5, MX10, and MX40 routers—0 or 1.
- MX80 routers—0 or 1.
- MX240 routers—0 through 2
- MX480 routers—0 through 5
- MX2020 routers—0 through 19.
- MX2010 routers—0 through 9.
- MX960 routers—0 through 11.
- MX10003 routers—0 or 1.
- MX204 routers—0.
- PTX5000 routers—0 or 1.
- T Series routers—0 through 7.

- TX Matrix and TX Matrix Plus routers only—On a TX Matrix router, if you specify the number of the T640 router by using the `lcc` *number* option (the recommended method), replace *slot-number* with a value from 0 through 7. Otherwise, replace *slot-number* with a value from 0 through 31.

  Likewise, on a TX Matrix Plus router, if you specify the *number* of the T1600 or T4000 router by using the lcc number option (the recommended method), replace *slot-number* with a value from 0 through 7. Otherwise, for the FPC slot number, replace *slot-number* with a value from 0 through 31. On a TX Matrix Plus router with 3D SIBs to assign the FPC slot number, replace *slot-number* with a value from `0` through `63`. For example, the following commands have the same result:

  ```
  user@host> request chassis pic fpc-slot 1 lcc 1 pic-slot 0 offline
  user@host> request chassis pic fpc-slot 9 pic-slot 0 offline
  ```

- QFX5100 standalone switches—0.

lcc *number* (TX Matrix router and TX Matrix Plus router only) (Optional) Line-card chassis number.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

member *member-id* (MX Series routers only) (Optional) Change the PIC status on the specified member of the Virtual Chassis configuration. Replace *member-id* with the value that is assigned to the specified member.

offline Take the PIC offline.

online Bring the PIC online.

pic-slot *slot-number* PIC slot number.

- EX3200 and EX4200 switches—0 for built-in network interfaces and 1 for interfaces on uplink modules.
- EX8208 and EX8216 switches—0.
- M Series routers—0, 1, 2, or 3
- MX960 router—*slot-number* corresponds to the slot number of the Packet Forwarding Engine.
- MX204 router—0 or 1.
- PTX5000 routers—0 or 1.
- T320 router—0 or 1.
- T640 router—0, 1, 2, or 3.
- T1600 router —0, 1, 2, or 3.
- T4000 router—0, 1, 2, or 3.
- QFX5100 standalone switches—0, 1, or 2. PIC 0 is used for all interfaces that are not configured on expansion modules, and PIC 1 and PIC 2 are used for interfaces configured on expansion modules.

Required Privilege Level

maintenance

Output Fields

When you enter this command, you are provided feedback on the status of your request.

Sample Output

request chassis pic

```
user@host> request chassis pic pic-slot
0 online fpc-slot 0
FPC 0, PIC 0 is already online
```

request chassis pic online member (MX Series Routers)

```
user@host> request chassis pic online member
1 fpc-slot 11 pic-slot 3
fpc 11 pic 3 online initiated
```

request chassis pic offline member (MX Series Routers)

```
user@host> request chassis pic offline member
1 fpc-slot 11 pic-slot 3
fpc 11 pic 3 offline initiated
```

request chassis pic (MX10003 Router)

```
user@host> request chassis pic online pic-slot
1 fpc-slot 0
FPC 0 is not online
```

request chassis pic online member (PTX10008 Router)

```
user@host> request chassis pic online pic-slot
1 fpc-slot 0
FPC 0, PIC 1 is empty
```

Release Information

Command introduced before Junos OS Release 7.4.

Option `member` introduced in Junos OS Release 14.2 for MX Series routers.

RELATED DOCUMENTATION

show chassis hardware

show chassis pic

request chassis port-led

IN THIS SECTION

- Syntax | 450
- Description | 451
- Options | 451
- Required Privilege Level | 452
- Output Fields | 452
- Sample Output | 453
- Release Information | 454

Syntax

```
request chassis port-led (start | stop) fpc-slot fpc-slot-number pic-slot pic-slot-number port
(port-number| all-10g | all-25g | all-40g | all-50g | all-100g | all-400g | all-port) duration
duration
```

Description

Enable remote port identification of the Modular Interface Card (MIC) or PIC by making the LED of the appropriate active port blink for a duration of time. You can also make the LEDs of all active ports, specific active ports, and specific port types blink. For instance, on MX480 routers with MPC7E-MRATE, you can make the LED of all active ports that support port speeds of 100 Gbps blink. Enabling remote port identification provides cabling assistance and reduces cabling mistakes.

NOTE: You can stop a LED from blinking before the end of duration. After the LED stops blinking, it resumes its normal operation of indicating current link status of the port.

Options

start — Start blinking of the LEDs of the specified ports.

stop — Stop the LEDs of the specified ports from blinking.

fpc-slot *fpc-slot-number* — (MX Series routers) Modular Port Concentrator (MPC) slot number. Replace *fpc-slot-number* with a value appropriate for your router:

- MX240 routers—0 through 2.
- MX480 routers—0 through 5.
- MX960 routers—0 through 11.
- MX2010 routers—0 through 9.
- MX2020 routers—0 through 19.
- MX10003 routers—0 through 1.
- MX10008 routers—0 through 6.

pic-slot *pic-slot-number* — (MX Series routers) MIC slot number. Replace *pic-slot-number* with a value from 0 through 3. For MX10008 routers with JNP10K-LC2101 and JNP10K-LC9600 MPC only, replace *pic-slot-number* with a value from 0 through 5.

port *port-number* — Port number. Replace *port-number* with a value appropriate for your MPC or line card:

- MIC-MRATE—0 through 11.
- MX10003 MPC—0 through 5 for PIC 0 and 0 through 11 for PIC1
- MX10K-LC2101 and MX10K-LC9600 MPC—0 through 3 per PIC. MX10K-LC2101 and MX10K-LC9600 supports 6 built-in PICs and each PIC supports 4 ports.

all-10g Active ports that support port speed of 10 Gbps.

all-25g Active ports that support port speed of 25 Gbps.

all-40g Active ports that support port speed of 40 Gbps.

all-50g Active ports that support port speed of 50 Gbps.

all-100g Active ports that support port speed of 100 Gbps.

all-400g Active ports that support port speed of 400 Gbps.

all-ports All active ports.

duration *duration* Duration, in seconds, to perform LED blinking. Replace *duration* with a value from 0 through 65,535. The default duration is 5 minutes (300 seconds).

Required Privilege Level

view

Output Fields

When you enter this command, you are asked to verify the LED status based on your request.

Sample Output

request chassis port-led (MX2020 Routers with MPC8E)

```
user@host> request chassis port-led start fpc-slot
3 pic-slot 0 port all-10g duration 5
Command sent to FPC_3. Check physically about LED status on the PIC_0 ports.
```

request chassis port-led (MX480 Routers with MPC7E-MRATE)

```
user@host> request chassis port-led start fpc-slot
3 pic-slot 0 port 2 duration 5
Command sent to FPC_3. Check physically about LED status on the PIC_0 ports.
```

request chassis port-led (MX10003 Router)

```
user@host> request chassis port-led start fpc-slot
1 pic-slot 1 port 0 duration 5
Command sent to FPC_1. Check physically about LED status on the PIC_1 ports.
```

request chassis port-led (MX10003 Router for all active 100GE ports)

```
user@host> request chassis port-led start fpc-slot
1 pic-slot 1 port all-100g duration 5
Command sent to FPC_1. Check physically about LED status on the PIC_1 ports.
```

request chassis port-led (MX10003 Router for all active 40GE ports)

```
user@host> request chassis port-led start fpc-slot
0 pic-slot 1 port all-40g duration 5
Command sent to FPC_0. Check physically about LED status on the PIC_1 ports.
```

request chassis port-led (MX10003 Router for all the active ports in a PIC)

```
user@host> request chassis port-led start fpc-slot
0 pic-slot 0 port all-ports duration 5
Command sent to FPC_0. Check physically about LED status on the PIC_0 ports.
```

request chassis port-led (MX204 Router for all the active ports in a PIC)

```
user@host> request chassis port-led start fpc-slot
0 pic-slot 0 port all-ports duration 5
Command sent to FPC_0. Check physically about LED status on the PIC_0 ports.
```

request chassis port-led (EX9251 Switch)

```
user@switch> request chassis port-led start
fpc-slot 0 pic-slot 0 port all-ports duration 5
Command sent to FPC_0. Check physically about LED status on the PIC_0 ports.
```

request chassis port-led (MX10008 Router with MX10K-LC2101 and MX10K-LC9600)

```
user@host>request chassis port-led start fpc-slot
0 pic-slot 2 all-ports duration 15
Command sent to FPC_0. Check physically about LED status on the PIC_2 ports.
```

Release Information

Command introduced in Junos OS Release 15.1F4.

RELATED DOCUMENTATION

Remote Port Identification using LEDs for Cabling Assistance | 197

request chassis sfb

IN THIS SECTION

- Syntax | 455
- Syntax (MX10004 and MX10008) | 455
- Description | 456
- Options | 456
- Required Privilege Level | 456
- Output Fields | 456
- Sample Output | 457
- Release Information | 458

Syntax

```
request chassis sfb (offline | online) slot slot-number
<all-members>
<local>
<member member-id>
```

Syntax (MX10004 and MX10008)

```
request chassis sfb
<(offline | online) slot slot-number>
<slot slot-number (offline | online)>
```

Description

Control the operation of the Switch Fabric Board (SFB). Configure the SFBs on a slot to online or offline.

command.

Options

all-members	(Optional) Control the operation of the SFB in all members of the Virtual Chassis configuration.
local	(Optional) Control the operation of the SFB in the local Virtual Chassis member.
member *member-id*	(Optional) Control the operation of the SFB in the specified member of the Virtual Chassis. Replace *member-id* with the value 0 or 1.
offline	Take the Switch Fabric Board offline.
online	Bring the Switch Fabric Board online.
slot *slot-number*	Switch Fabric Board slot number. Replace *slot-number* with a value of 0 through 7.
plane *plane-number*	Switch Fabric Board plane number. For SFB, the *plane-number* value range is 0 through 3. For SFB2, the *plane-number* value range is 0 through 1.

Required Privilege Level

maintenance

Output Fields

When you enter this command, you are provided feedback on the status of your request.

Sample Output

request chassis sfb

```
user@host> request chassis sfb offline slot
1
Backup SFB 1 cannot be set offline, backup RE is online
```

request chassis sfb (MX2010 Routers)

```
user@host> request chassis sfb offline slot 7
Offline initiated, use "show chassis sfb" to verify
```

request chassis sfb (MX2008 Routers)

```
user@host>request chassis sfb offline slot 1
Offline initiated, use "show chassis sfb" to verify
```

request chassis fabric sfb (MX10008 Routers)

```
user@host>request chassis fabric sfb slot 1 plane 0 offline
Offline initiated, use "show chassis fabric plane" to verify
```

request chassis sfb (MX10004 Routers)

```
user@host>request chassis sfb  slot 0 online
SFB 0 already online
```

```
user@host>request chassis sfb  slot 0 offline
Offline initiated, use "show chassis sfb" to verify
```

Release Information

Command introduced in Junos OS Release 12.3.

`all-members`, `local`, and `member` *`member-id`* options introduced in Junos OS Release 15.1 for MX2020 and MX2010 routers.

RELATED DOCUMENTATION

show chassis hardware | 1418

show chassis sfb | 1565

request chassis sfm

IN THIS SECTION

- Syntax | 458
- Description | 459
- Options | 459
- Required Privilege Level | 459
- Output Fields | 459
- Sample Output | 459
- Release Information | 460

Syntax

```
request chassis sfm (offline | online | restart) slot slot-number
```

Description

(M40e and M160 routers only) Control the operation of the specified Switching and Forwarding Module (SFM).

Options

offline	Take the SFM offline.
online	Bring the SFM online.
restart	Restart the SFM.
slot *slot-number*	SFM slot number. Replace ***slot-number*** with a value from **0** through **3**.

Required Privilege Level

maintenance

Output Fields

When you enter this command, you are provided feedback on the status of your request.

Sample Output

request chassis sfm (M40e)

```
user@host> request chassis sfm slot 1 restart
M40e router:
error: SFM 0 is transitioning to online state.
```

request chassis sfm (M160)

```
user@host> request chassis sfm slot 1 restart
M160 router:
Restart initiated, use "show chassis sfm" to verify
```

Release Information

Command introduced before Junos OS Release 7.4.

RELATED DOCUMENTATION

- show chassis sfm | 1572
- *Configuring SFM Redundancy on M40e and M160 Routers*
- M40e Switching and Forwarding Module (SFM) Description

request chassis sib

IN THIS SECTION

- Syntax | 461
- Syntax (TX Matrix Router) | 461
- Syntax (TX Matrix Plus Router) | 461
- Description | 461
- Options | 461
- Required Privilege Level | 463
- Output Fields | 463
- Sample Output | 463
- Release Information | 463

Syntax

```
request chassis sib (offline | online) slot slot-number
```

Syntax (TX Matrix Router)

```
request chassis sib (all-chassis | lcc number | scc) (offline | online) slot slot-number
(start-receiver number | stop-receiver number)
```

Syntax (TX Matrix Plus Router)

```
request chassis sib (all-lcc | f13 slot-number | f2s sib-slot/sib-f2s-slot-number |lcc number  |
(offline | online) slot slot-number)
```

Description

(M320 routers and T Series routers only) Control the operation of the specified Switch Interface Board (SIB).

Options

all-chassis (TX Matrix routers only) Control the status of the specified SIB.

all-lcc (TX Matrix Plus router only) On TX Matrix Plus router, control the operation of the SIB on all routers connected to the TX Matrix Plus router.

f13 *slot-number* Control the operation of F13 SIBs. Replace *slot-number* with a value 0, 1, 3, 4, 6, 7, 8, 9, 11, or 12.

f2s *sib-slot/sib-f2s-slot-number*

(TX Matrix Plus routers only) (Optional) Control the operation of the SIB F2s. Replace *sib-slot* with a value from 0 through 4, followed by a *sib-f2s-slot-number* value 0, 2, 4 or 6.

lcc *number*

(TX Matrix router and TX Matrix Plus router only) (Optional) Line-card chassis number.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

scc

(TX Matrix router only) TX Matrix router (switch-card chassis) on a routing matrix.

offline

Take the SIB offline.

NOTE: In PTX Series (PTX3000 and PTX5000) and T Series (T640 and T1600) Routers with active PFE interfaces, when the last SIB is taken offline, a message displays that if no SIB is brought online within 10 seconds, the system will take action to address the fabric null route condition. Taking all SIBs offline in these PTX Series or T Series Routers with active PFE interfaces results in null route condition, and the software takes action to rectify this condition if it persists for more than 10 seconds. If these routers do not have active PFE interfaces, taking all SIBs offline does not result in null route condition, and the message is not displayed when the last active SIB is taken offline. For details on null route condition, see Fabric Resiliency and Degradation.

online

Bring the SIB online.

slot *slot-number*

SIB slot number. For the T320 router, replace *slot-number* with a value from 0 through 2. For the T640 router, TX Matrix router, and T1600 router in a routing matrix, replace *slot-number* with a value from 0 through 4.

start-receiver *number*

(TX Matrix routers only) Start the SIB optical receiver. Replace *number* with a value from 0 through 3.

stop-receiver *number* (TX Matrix routers only) Stop the SIB optical receiver. Replace *number* with a value from 0 through 3.

Required Privilege Level

maintenance

Output Fields

When you enter this command, you are provided feedback on the status of your request.

Sample Output

request chassis sib

```
user@host> request chassis sib slot 0 online
Online initiated, use "show chassis sibs" to verify
```

request chassis sib

```
user@host> request chassis sib f13 slot 0 offline
Offline initiated, use "show chassis sibs" to verify
```

Release Information

Command introduced before Junos OS Release 7.4.

f13 and f2s options for the TX Matrix Plus router introduced in Junos OS Release 9.6.

RELATED DOCUMENTATION

- Configuring Junos OS to Upgrade and Downgrade Switch Interface Boards on a TX Matrix Router
- M320 SIB Description
- show chassis sibs | **1577**
- show chassis environment sib | **947**

request chassis spmb restart

IN THIS SECTION

- Syntax | **464**
- Syntax (MX2020, MX2010, and 2008 Routers) | **465**
- Syntax (TX Matrix Router) | **465**
- Syntax (TX Matrix Plus Router) | **465**
- Description | **465**
- Options | **465**
- Required Privilege Level | **466**
- Output Fields | **466**
- Sample Output | **467**
- Release Information | **467**

Syntax

```
request chassis spmb restart slot slot-number
```

Syntax (MX2020, MX2010, and 2008 Routers)

```
request chassis spmb restart slot slot-number
<all-members>
<local>
<member member-id>
```

Syntax (TX Matrix Router)

```
request chassis spmb restart (lcc number | scc) slot slot-number
```

Syntax (TX Matrix Plus Router)

```
request chassis spmb restart (lcc number | sfc number) slot slot-number
```

Description

Restart the specified Switch Processor Mezzanine Board (SPMB) on the Control Board (CB).

Options

all-members (MX2010, MX2020, and MX2008 routers only) (Optional) Restart the SPMB on the CB in all members of the Virtual Chassis configuration.

lcc *number* (TX Matrix router and TX Matrix Plus router only) (Optional) Line-card chassis number.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local (MX2010, MX2020, and MX2008 routers only) (Optional) Restart the SPMB on the CB in the local Virtual Chassis member.

member *member-id* (MX2010, MX2020, and MX2008 routers only) (Optional) Restart the SPMB on the CB in the specified member of the Virtual Chassis. Replace *member-id* with the value 0 or 1.

scc (TX Matrix routers only) TX Matrix router (switch-card chassis) in the routing matrix.

sfc *number* (TX Matrix Plus routers only) The switch-fabric chassis number of the TX Matrix Plus router. Replace the *number* variable with a value 0.

slot *slot-number* The SPMB slot number. Replace *slot-number* with 0 or 1.

Required Privilege Level

maintenance

Output Fields

When you enter this command, you are provided feedback on the status of your request.

Sample Output

request chassis spmb restart

```
user@host> request chassis spmb restart slot
0
```

request chassis spmb restart (MX2010 Router)

```
user@host> request chassis spmb restart slot 0
Restart initiated, use "show chassis spmb" to verify
```

request chassis spmb restart (MX2008 Router)

```
user@host>request chassis spmb restart slot 0
Restart initiated, use "show chassis spmb" to verify
```

Release Information

Command introduced before Junos OS Release 7.4.

`sfc` option for the TX Matrix Plus router introduced in Junos OS Release 9.6.

`all-members`, `local`, and `member` *`member-id`* options introduced in Junos OS Release 15.1 for MX2020 and MX2010 routers.

RELATED DOCUMENTATION

show chassis spmb | 1595

show chassis spmb sibs | 1610

set chassis display message

IN THIS SECTION

- Syntax | 468
- Syntax (TX Matrix Router) | 468
- Syntax (TX Matrix Plus Router) | 469
- Description | 469
- Options | 469
- Required Privilege Level | 470
- Output Fields | 470
- Sample Output | 471
- Release Information | 472

Syntax

```
set chassis display message "message"
<permanent>
```

Syntax (TX Matrix Router)

```
set chassis display message "message" (lcc number / scc)
 <permanent>
```

Syntax (TX Matrix Plus Router)

```
set chassis display message “message ” (fpc-slot slot-number | lcc number /  sfc number)
 <permanent>
```

Description

Display or stop a text message on the craft interface display, which is on the front of the router, or on the LCD panel display on the switch. The craft interface alternates the display of text messages with standard craft interface messages three times, switching between messages every 60 seconds.

NOTE: On T Series routers, when this command is executed with the **permanent** option, the display of the text message alternates with that of the standard craft interface message continuously every 60 seconds.

By default, on both the router and the switch, the text message is displayed for 5 minutes. The craft interface display has four 20-character lines. The LCD panel display has two 16-character lines, and text messages appear only on the second line.

Options

"*message*" Message to display. On the craft interface display, if the message is longer than 20 characters, it wraps onto the next line. If a word does not fit on one line, the entire word moves down to the next line. Any portion of the message that does not fit on the display is truncated. An empty pair of quotation marks (“ ”) deletes the text message from the craft interface display. On the LCD panel display, the message is limited to 16 characters.

fpc-slot *slot-number* (TX Matrix Plus routers and EX4200 and QFX Series only) On the router or switch, display the text message on the craft interface for a specific Flexible PIC Concentrator (FPC). Replace *slot-number* with a value from **0** through **31**. On the switch, display the text message for a specific member of a Virtual Chassis, where **fpc-slot *slot-number*** corresponds to the member ID. Replace ***slot-number*** with a value from **0** through **9**. On

the QFX Series, the *slot-number* is always **0**. On a TX Matrix Plus router with 3D SIBs replace *slot-number* with a value from `0` through `63`.

lcc ***number*** (TX Matrix router and TX Matrix Plus router only) (Optional) Line-card chassis number.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

permanent (Optional) Display a text message on the craft interface display or LCD panel display permanently.

scc (TX Matrix routers only) Display the text message on the craft interface display of the TX Matrix router (switch-card chassis).

sfc ***number*** (TX Matrix Plus routers only) Display the text message on the craft interface display of the TX Matrix Plus router (or switch-fabric chassis).

Required Privilege Level

clear

Output Fields

See show chassis craft-interface for an explanation of output fields.

Sample Output

set chassis display message (Creating)

The following example shows how to set the display message and verify the result:

```
user@host> set chassis display message "NOC
contact Dusty (888) 555-1234"
message sent
```

```
user@host> show chassis craft-interface
Red alarm:     LED off, relay off
Yellow alarm:  LED off, relay off
Host OK LED:   On
Host fail LED: Off
FPCs     0  1  2  3  4  5  6  7
-------------------------------
Green  ..  *..  *  *.
Red    ........
LCD screen:
     +--------------------+
     |NOC contact Dusty   |
     |(888) 555-1234      |
     +--------------------+
```

set chassis display message (Deleting)

The following example shows how to delete the display message and verify that the message is removed:

```
user@host> set chassis display message ""
message sent


user@host> show chassis craft-interface
Red alarm:     LED off, relay off
Yellow alarm:  LED off, relay off
Host OK LED:   On
```

```
Host fail LED: Off
FPCs     0  1  2  3  4  5  6  7
------------------------------
Green  ..  *..  *  *.
Red    ........
LCD screen:
     +--------------------+
     |host                |
     |Up: 0+17:05:47      |
     |                    |
     |Temperature OK      |
     +--------------------+
```

Release Information

Command introduced before Junos OS Release 7.4.

sfc option for TX Matrix Plus router introduced in Junos OS Release 9.6.

RELATED DOCUMENTATION

Configuring the LCD Panel on EX Series Switches (CLI Procedure)

clear chassis display message

show chassis craft-interface

CHAPTER 11

Monitoring Commands

show chassis adc | 476

show chassis afeb | 480

show chassis alarms | 483

show chassis cfeb | 513

show chassis craft-interface | 517

show chassis environment | 543

show chassis environment adc | 665

show chassis environment cb | 682

show chassis environment ccg | 721

show chassis environment fan | 724

show chassis environment fpc | 730

show chassis environment fpm | 811

show chassis environment monitored | 821

show chassis environment mcs | 852

show chassis environment pcg | 856

show chassis environment pdu | 860

show chassis environment pem | 868

show chassis environment psu | 889

show chassis environment psm | 891

show chassis environment routing-engine | 905

show chassis environment scg | 916

show chassis environment sfb | 923

show chassis environment sfm | 941

show chassis environment sib | 947

show chassis errors active | 993

show chassis ethernet-switch | 999

show chassis fabric degraded-fabric-reachability | 1053

show chassis fabric destinations | 1055

show chassis fabric faults recovery-actions | 1084

show chassis fabric feb | 1087

show chassis fabric errors | 1089

show chassis fabric fpcs | 1096

show chassis fabric map | 1137

show chassis fabric plane | 1148

show chassis fabric plane-location | 1189

show chassis fabric redundancy-mode | 1201

show chassis fabric reachability | 1203

show chassis fabric sibs | 1217

show chassis fabric stream-info | 1237

show chassis fabric summary | 1243

show chassis fabric topology | 1251

show chassis fabric unreachable-destinations | 1287

show chassis fan | 1291

show chassis feb | 1309

show chassis firmware | 1316

show chassis forwarding | 1337

show chassis fpc | 1339

show chassis fpc errors | 1404

show chassis fpc-feb-connectivity | 1410

show chassis fpc global pfe-id | 1414

show chassis hardware | 1418

show chassis location | 1444

show chassis mac-addresses | 1451

show chassis network-services | 1459

show chassis oss-map | 1463

show chassis pic | 1465

show chassis power | 1503

show chassis power sequence | 1545

show chassis psd | 1547

show chassis routing-engine | 1550

show chassis scb | 1561

show chassis sfb | 1565

show chassis sfb errors | 1569

show chassis sfm | 1572

show chassis sibs | 1577

show chassis spmb | 1595

show chassis spmb sibs | 1610

show chassis temperature-thresholds | 1619

show chassis zones | 1648

show pfe cfeb | 1660

show pfe feb | 1667

show pfe fpc | 1677

show system errors active | 1704

show system errors count | 1712

show system errors error-id | 1714

show system errors fru | 1718

show system errors inactive | 1726

show chassis adc

IN THIS SECTION

- Syntax | 476
- Description | 476
- Options | 476
- Required Privilege Level | 477
- Output Fields | 477
- Sample Output | 478
- Release Information | 479

Syntax

```
show chassis adc
<all-members>
<local>
<member member-id>
```

Description

Display chassis information about the adapter cards (ADCs).

Options

none	Display information about all adapter cards.
all-members	(Optional) Display information about the adapter cards (ADCs) in all members of the Virtual Chassis configuration.

local (Optional) Display information about the ADCs in the local member of the Virtual Chassis.

member *member-id* (Optional) Display information about the ADCs in the specified member of the Virtual Chassis. Replace *member-id* with the value 0 or 1.

Required Privilege Level

view

Output Fields

Table 33 on page 477 lists the output fields for the `show chassis adc` command. Output fields are listed in the approximate order in which they appear.

Table 33: show chassis adc Output Fields

Field Name	Field Description
`Slot`	Slot number.
`State`	Status of the adapter card. • `Online`—The adapter card is online and running. • `Offline`—Adapter card is powered down.
`Uptime`	How long the Routing Engine has been connected to the adapter card and, therefore, how long the adapter card has been up and running.
GNF (Node slicing)	GNF identifier for each ADC.

Sample Output

show chassis adc (MX2020 Router)

```
user@host> show chassis adc
Slot  State                           Uptime
 0    Online 1 hour, 21 minutes, 7 seconds
 1    Online 1 hour, 21 minutes, 3 seconds
 2    Online 1 hour, 20 minutes, 59 seconds
 3    Online 1 hour, 20 minutes, 54 seconds
 4    Online 1 hour, 20 minutes, 50 seconds
 5    Online 1 hour, 20 minutes, 46 seconds
 6    Online 1 hour, 20 minutes, 42 seconds
 7    Online 1 hour, 20 minutes, 37 seconds
 8    Online 1 hour, 20 minutes, 33 seconds
 9    Online 1 hour, 20 minutes, 28 seconds
10    Online 1 hour, 20 minutes, 24 seconds
11    Online 1 hour, 20 minutes, 19 seconds
12    Online 1 hour, 20 minutes, 15 seconds
13    Online 1 hour, 20 minutes, 8 seconds
14    Online 1 hour, 20 minutes, 4 seconds
15    Online 1 hour, 19 minutes, 59 seconds
16    Online 1 hour, 19 minutes, 55 seconds
17    Online 1 hour, 19 minutes, 50 seconds
18    Online 1 hour, 19 minutes, 45 seconds
19    Online 1 hour, 19 minutes, 39 seconds
```

show chassis adc (MX2010 Router)

```
user@host > show chassis adc
Slot  State                           Uptime
 0    Online 12 hours, 17 minutes, 38 seconds
 1    Online 12 hours, 17 minutes, 30 seconds
 2    Online 12 hours, 17 minutes, 22 seconds
 3    Online 12 hours, 17 minutes, 14 seconds
 4    Online 12 hours, 17 minutes, 6 seconds
 5    Online 12 hours, 16 minutes, 58 seconds
 6    Online 12 hours, 16 minutes, 49 seconds
 7    Online 12 hours, 16 minutes, 41 seconds
```

```
 8    Online 12 hours, 16 minutes, 33 seconds
 9    Online 12 hours, 16 minutes, 25 seconds
```

show chassis adc (MX2008 Router)

```
user@host > show chassis adc
Slot  State                          Uptime
 0    Empty  --- Native line card ---
 1    Empty  --- Native line card ---
 2    Empty
 3    Empty
 4    Empty
 5    Empty
 6    Empty
 7    Online 1 hour, 14 minutes, 32 seconds
 8    Empty
 9    Empty
```

show chassis adc (Node Slicing)

```
user@router> show chassis adc

Slot  State           Uptime                                      GNF
 0    Online           12 hours, 57 minutes, 46 seconds             3
 1    Empty       --- Native line card ---                         2
 2    Online           12 hours, 57 minutes, 18 seconds             3
 3    Online           11 minutes, 23 seconds                       6
 4    Empty       --- Native line card ---                         6
 5    Empty       --- Native line card ---                         4
 6    Online           13 hours, 38 minutes, 58 seconds             1
 7    Online           13 hours, 3 minutes, 40 seconds              5
 8    Empty       --- Native line card ---                         5
 9    Empty       --- Native line card ---                         5
```

Release Information

Command introduced in Junos OS Release 12.3 for MX2020 and MX2010 Universal Routing Platforms.

`all-members`, `local`, and `member` *`member-id`* options introduced in Junos OS Release 15.1 for MX2020 and MX2010 routers.

RELATED DOCUMENTATION

show chassis environment adc | 665

show chassis afeb

IN THIS SECTION

- Syntax | 480
- Description | 480
- Options | 481
- Required Privilege Level | 481
- Output Fields | 481
- Sample Output | 482
- Release Information | 483

Syntax

```
show chassis afeb
```

Description

Display compact Forwarding Engine Board status.

Options

This command has no options.

Required Privilege Level

view

Output Fields

Table 34 on page 481 lists the output fields for the `show chassis afeb` command. Output fields are listed in the approximate order in which they appear.

Table 34: show chassis afeb

Field Name	Field Description

`State`	State of the compact Forwarding Engine Board:
	• `Offline`—FEB is powered down.
	• `Online`—FEB is operational and running.
	• `Check`—FEB is in alarmed state because of the following reasons:
	  • Hardware error.
	  • PFE is unable to boot.

`Temperature`	Temperature of the air passing by the FEB, in degrees Celsius or in both degrees Celsius and degrees Fahrenheit.
`CPU Utilization`	Total percentage of CPU being used.
`Interrupt Utilization`	Of the total CPU being used by the FEB processor, the percentage being used for interrupts.

Table 34: show chassis afeb *(Continued)*

Field Name	Field Description
Heap Utilization	Percentage of heap space (dynamic memory) being used by the FEB processor. If this number exceeds 80 percent, you might experience a software problem (memory leak).
Buffer Utilization	Percentage of buffer space being used by the FEB processor for buffering internal messages.
Total CPU DRAM	Total DRAM, in megabytes, available to the FEB processor.
Start time	Time when the Routing Engine detected that the FEB was running.
Uptime	How long the Routing Engine has been connected to the FEB and, therefore, how long the compact Forwarding Engine Board has been up and running.

Sample Output

show chassis afeb (MX104 Router)

```
user@host> show chassis afeb
FEB status:
Slot 0 information:
  State                               Online
  Temperature                      31 degrees C / 87 degrees F
  CPU utilization                   3 percent
  Interrupt utilization             0 percent
  Heap utilization                 11 percent
  Buffer utilization               13 percent
  Total CPU DRAM                 2048 MB
  Start time:                         2013-05-27 08:50:03 IST
  Uptime:                             3 hours, 29 minutes, 34 seconds
```

Release Information

Command introduced in Junos OS Release 13.2.

RELATED DOCUMENTATION

request chassis afeb | **401**

show chassis alarms

IN THIS SECTION

- Syntax | **484**
- Syntax (MX Series Routers) | **484**
- Syntax (SRX1500, SRX4100, and SRX4200) | **484**
- Syntax (SRX4600) | **484**
- Syntax (SRX5400) | **485**
- Syntax (TX Matrix Routers) | **485**
- Syntax (TX Matrix Plus Routers) | **485**
- Syntax (MX104, MX2010, MX2020, and MX2008 Universal Routing Platforms) | **485**
- Syntax (MX204, MX10003, MX10004, MX10008, OCX Series, PTX Series, ACX Series, EX9251, and EX9253) | **486**
- Syntax (QFX Series) | **486**
- Description | **486**
- Options | **486**
- Additional Information | **487**
- Required Privilege Level | **493**
- Output Fields | **493**
- Sample Output | **494**
- show chassis alarms (ACX7024) | **512**
- Release Information | **513**

Syntax

```
show chassis alarms
```

Syntax (MX Series Routers)

```
show chassis alarms
<all-members>
<local>
<member member-id>
```

Syntax (SRX1500, SRX4100, and SRX4200)

```
show chassis alarms
1 alarms currently active
Alarm time               Class  Description
2020-02-28 10:07:16 CST  Major  FPC0: PEM 0 Not Present
```

Syntax (SRX4600)

```
show chassis alarms
node0:
--------------------------------------------------------------------------
2 alarms currently active
Alarm time Class Description
2020-10-08 19:42:06 UTC Major FPC 0 BITS CPLD Version Mismatch
2020-10-08 19:42:06 UTC Minor PEM 1 Not Present
```

Syntax (SRX5400)

```
show chassis alarms
1 alarms currently active
Alarm time               Class  Description
2021-04-16 17:21:02 PDT  Major  Too Few AC PEMs
```

Syntax (TX Matrix Routers)

```
show chassis alarms
<lcc number | scc>
```

Syntax (TX Matrix Plus Routers)

```
show chassis alarms
<lcc number | sfc number>
```

Syntax (MX104, MX2010, MX2020, and MX2008 Universal Routing Platforms)

```
show chassis alarms
<satellite [slot-id slot-id]>
```

Syntax (MX204, MX10003, MX10004, MX10008, OCX Series, PTX Series, ACX Series, EX9251, and EX9253)

```
show chassis alarms
```

Syntax (QFX Series)

```
show chassis alarms
<interconnect-device name>
<node-device name>
```

Description

Display information about the conditions that have been configured to trigger alarms. In Junos, the chassis alarms are different from the system alarms (viewed by using the `show system alarms` command). The system alarms indicate a missing rescue configuration or software license, where valid. For more information, see Alarm Overview.

Options

none	Display information about the conditions that have been configured to trigger alarms.
all-members	(MX Series routers only) (Optional) Display information about alarm conditions for all the member routers of the Virtual Chassis configuration.
interconnect-device *name*	(QFabric systems only) (Optional) Display information about alarm conditions for the Interconnect device.
lcc *number*	(TX Matrix router and TX Matrix Plus router only) (Optional) Line-card chassis number. Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local (MX Series routers only) (Optional) Display information about alarm conditions for the local Virtual Chassis member.

member *member-id* (MX Series routers only) (Optional) Display information about alarm conditions for the specified member of the Virtual Chassis configuration. Replace *member-id* variable with a value of 0 or 1.

node-device *name* (QFabric systems only) (Optional) Display information about alarm conditions for the Node device.

satellite [slot-id *slot-id*] (Junos Fusion only)(Optional) Display information about alarm conditions for the specified satellite device in a Junos Fusion, or for all satellite devices in the Junos Fusion if no satellite devices are specified.

scc (TX Matrix router only) (Optional) Show information about the TX Matrix router (switch-card chassis).

sfc *number* (TX Matrix Plus router only) (Optional) Show information about the respective TX Matrix Plus router, which is the switch-fabric chassis. Replace *number* variable with `0`.

Additional Information

Chassis alarms are preset. You cannot modify them.

You cannot clear the alarms for chassis components. Instead, you must remedy the cause of the alarm. When a chassis alarm LED is lit, it indicates that you are running the router or switch in a manner that we do not recommend.

On routers, you can manually silence external devices connected to the alarm relay contacts by pressing the alarm cutoff button, located on the craft interface. Silencing the device does not remove the alarm

messages from the display (if present on the router) or extinguish the alarm LEDs. In addition, new alarms that occur after you silence an external device reactivate the external device.

NOTE: MX10003 routers do not support craft interface.

In Junos OS release 11.1 and later, alarms for fans also show the slot number of the fans in the CLI output.

In Junos OS Release 11.2 and later, the command output on EX8200 switches shows the detailed location (`Plane/FPC/PFE`) for link errors in the chassis.

In Junos OS Release 10.2 and later, an alarm is shown on T Series routers for a standby SONET Clock Generator (SCG) that is offline or absent.

You may often see the following error messages, in which only the error code is shown and no other information is provided:

```
Apr 12 08:04:10 send: red alarm set, device FPC 6, reason FPC 6 Major Errors - Error code: 257
Apr 12 08:04:19 send: red alarm set, device FPC 1, reason FPC 1 Major Errors - Error code: 559
```

To understand what CM_ALARM error codes mean, you need to first identify the structure of the CM Alarm codes. A CM_ALARM code has the following structure:

Bits:	Error type:
1-31	Major (1)
0	Minor (0)

According to the table above, the LSB (bit 0) identifies the **Error Type** (major alarm, if the bit is set and minor alarm if the bit is unset). The rest of the bits (1 - 31) identify the actual error code.

Take an example of the following error code, which was logged on a T1600:

```
Apr 12 08:04:10 send: red alarm set, device FPC 1, reason FPC 1 Major Errors - Error code: 559
```

First, you have to convert 559 to binary; that is **1000101111**. The LSB in this case is **1**, which means that this is a major alarm. After removing the LSB, you are left with **100010111**, which is equal to 279 in decimal. This is the actual error code, its meaning can be found from the following list:

Chip Type: L Chip	Code
CMALARM_LCHIP_LOUT_DESRD_PARITY_ERR	1
CMALARM_LCHIP_LOUT_DESRD_UNINIT_ERR	2
CMALARM_LCHIP_LOUT_DESRD_ILLEGALLINK_ERR	3
CMALARM_LCHIP_LOUT_DESRD_ILLEGALSIZE_ERR	4
CMALARM_LCHIP_LOUT_HDRF_TOERR_ERR	5
CMALARM_LCHIP_LOUT_HDRF_PARITY_ERR	6
CMALARM_LCHIP_LOUT_HDRF_UCERR_ERR	7
CMALARM_LCHIP_LOUT_NLIF_CRCDROP_ERR	8
CMALARM_LCHIP_LOUT_NLIF_CRCERR_ERR	9
CMALARM_LCHIP_UCODE_TIMEOUT_ERR	10
CMALARM_LCHIP_LIN_SRCTL_ACCT_DROP_ERR	11
CMALARM_LCHIP_LIN_SRCTL_ACCT_ADDR_SIZE_ERR	12
CMALARM_LCHIP_SRAM_PARITY_ERR	13
CMALARM_LCHIP_UCODE_OVFLW_ERR	14
CMALARM_LCHIP_LOUT_HDRF_MTU_ERR	15

Chip Type: M Chip	Code

CMALARM_MCHIP_ECC_UNCORRECT_ERR	128

Chip Type: N Chip	**Code**
CMALARM_NCHIP_RDDMA_JBUS_TIMEOUT_ERR	256
CMALARM_NCHIP_RDDMA_FIFO_OVFLW_ERR	257
CMALARM_NCHIP_RDDMA_FIFO_UNFLW_ERR	258
CMALARM_NCHIP_RDDMA_SIZE_ERR	259
CMALARM_NCHIP_RDDMA_JBUS_CRC_ERR	260
CMALARM_NCHIP_WRDMA_PKTR_ERR	261
CMALARM_NCHIP_WRDMA_PKT_CRC_ERR	262
CMALARM_NCHIP_WRDMA_JBUS_TIMEOUT_ERR	263
CMALARM_NCHIP_WRDMA_FIFO_OVFLW_ERR	264
CMALARM_NCHIP_WRDMA_FIFO_UNFLW_ERR	265
CMALARM_NCHIP_WRDMA_PKT_LEN_ERR	266
CMALARM_NCHIP_WRDMA_JBUS_CRC_ERR	267
CMALARM_NCHIP_PKTR_DMA_AGE_ERR	268
CMALARM_NCHIP_PKTR_ICELLSIG_ERR	269
CMALARM_NCHIP_PKTR_FTTL_ERR	270

CMALARM_NCHIP_RODR_OFFSET_OVFLW_ERR	271
CMALARM_NCHIP_PKTR_TMO_CELL_ERR	272
CMALARM_NCHIP_PKTR_TMO_OUTRANGE_ERR	273
CMALARM_NCHIP_PKTR_MD_REQUEST_Q_OVFLW_ERR	274
CMALARM_NCHIP_PKTR_DMA_BUFFER_OVFLW_ERR	275
CMALARM_NCHIP_PKTR_GRT_OVFLW_ERR	276
CMALARM_NCHIP_FRQ_ERR	277
CMALARM_NCHIP_RODR_IN_Q_OVFLW_ERR	278
CMALARM_NCHIP_DBUF_CRC_ERR	279

Chip Type: R Chip	**Code**
CMALARM_RCHIP_SRAM_PARITY_ERR	512

Chip Type: R Chip	**Code**
CMALARM_ICHIP_WO_DESRD_ID_ERR	601
CMALARM_ICHIP_WO_DESRD_DATA_ERR	602
CMALARM_ICHIP_WO_DESRD_OFLOW_ERR	603
CMALARM_ICHIP_WO_HDRF_UCERR_ERR	604

CMALARM_ICHIP_WO_HDRF_MTUERR_ERR	605
CMALARM_ICHIP_WO_HDRF_PARITY_ERR	606
CMALARM_ICHIP_WO_HDRF_TOERR_ERR	607
CMALARM_ICHIP_WO_IP_CRC_ERR	608
CMALARM_ICHIP_WO_IP_INTER_ERR	609
CMALARM_ICHIP_WI_WAN_TIMEOUT_ERR	625
CMALARM_ICHIP_WI_FAB_TIMEOUT_ERR	626
CMALARM_ICHIP_RLDRAM_BIST_ERR	630
CMALARM_ICHIP_SDRAM_BIST_ERR	631
CMALARM_ICHIP_RLDRAM_PARITY_ERR	632
CMALARM_ICHIP_SDRAM_UNCORRECT_ERR	633
CMALARM_ICHIP_SDRAM_CORRECT_ERR	634
CMALARM_ICHIP_FUSE_DONE_ERR	635

According to the table above, the **279** error code corresponds to **CMALARM_NCHIP_DBUF_CRC_ERR**; this means that new CRC errors were seen on the NCHIP of this particular FPC, which is FPC as per the logs.

If you do not want to convert decimal to binary and vice versa, you may use the following shortcut:

For major alarms, the **Actual Error Code = (Error Code - 1)/2**, where **Error Code** is the code that you get in the log message. For example, if you get the following log:

```
    Apr 12 08:04:10 send: red alarm set, device FPC 6, reason FPC 6 Major Errors - Error code:
257
```

Actual Error Code = (257-1)/2 = 128. Similarly, for minor alarms, Actual Error Code = (Error Code)/2

NOTE: Starting in Junos OS Release 18.2R1, on MX Series routers, the `show chassis alarms` output does not display error codes for PFE-related errors. You can use the following commands to view more details of the errors that caused the alarms:

- `show chassis errors active`
- `show chassis errors active detail`

Required Privilege Level

view

Output Fields

Table 35 on page 493 lists the output fields for the `show chassis alarms` command. Output fields are listed in the approximate order in which they appear.

Table 35: show chassis alarms Output Fields

Field Name	Field Description
`Alarm time`	Date and time the alarm was first recorded.
`Class`	Severity class for this alarm: `Minor` or `Major`.

Table 35: show chassis alarms Output Fields *(Continued)*

Field Name	Field Description
Description	Information about the alarm.

Sample Output

show chassis alarms (Alarms Active)

```
user@host> show chassis alarms
3 alarms are currently active
Alarm time               Class  Description
2000-02-07 10:12:22 UTC Major fxp0: ethernet link down
2000-02-07 10:11:54 UTC Minor YELLOW ALARM - PEM 1 Removed
2000-02-07 10:11:03 UTC Minor YELLOW ALARM - Lower Fan Tray Removed
```

show chassis alarms (No Alarms Active)

```
user@host> show chassis alarms
No alarms are currently active
```

show chassis alarms (Fan Tray)

```
user@host> show chassis alarms
4 alarms currently active
Alarm time               Class  Description
2010-11-11 20:27:38 UTC  Major  Side Fan Tray 7 Failure
2010-11-11 20:27:13 UTC  Minor  Side Fan Tray 7 Overspeed
2010-11-11 20:27:13 UTC  Major  Side Fan Tray 5 Failure
2010-11-11 20:27:13 UTC  Major  Side Fan Tray 0 Failure
```

show chassis alarms (MX150)

```
user@host > show chassis alarms
1 alarms currently active
Alarm time               Class  Description
2016-06-04 01:49:43 PDT  Major  Fan Tray 1 Fan 0 failed
```

show chassis alarms (MX104 Router)

```
user@host >show chassis alarms
1 alarms currently active
Alarm time               Class  Description
2013-06-05 14:43:31 IST  Minor  Backup RE Active
```

show chassis alarms (MX2010 Router)

```
user@host> show chassis alarms
7 alarms currently active
Alarm time               Class  Description
2012-08-07 00:46:06 PDT  Major  Fan Tray 2 Failure
2012-08-06 18:24:36 PDT  Minor  Redundant feed missing for PSM 6
2012-08-06 07:41:04 PDT  Minor  Redundant feed missing for PSM 8
2012-08-04 02:42:06 PDT  Minor  Redundant feed missing for PSM 5
2012-08-03 21:14:24 PDT  Minor  Loss of communication with Backup RE
2012-08-03 12:26:03 PDT  Minor  Redundant feed missing for PSM 4
2012-08-03 10:40:18 PDT  Minor  Redundant feed missing for PSM 7
```

show chassis alarms (MX2020 Router)

```
user@host> show chassis alarms
1 alarms currently active
Alarm time Class Description
2012-10-03 12:14:59 PDT Minor Plane 0 not online
```

show chassis alarms (MX10003 Router)

```
user@host> show chassis alarms

9 alarms currently active
Alarm time               Class  Description
2017-07-13 21:50:31 PDT  Major  FPC 1 Temperature Hot
2017-07-13 21:50:04 PDT  Minor  FPC 1 PIC 1 Invalid port profile configuration
2017-07-13 21:49:13 PDT  Minor  FPC 1 PIC 0 Invalid port profile configuration
2017-07-13 21:48:54 PDT  Major  FPC 0 Temperature Hot
2017-07-13 21:43:54 PDT  Minor  CB 1 Voltage Sensor ADS7830_0x4B Sensor Failed
2017-07-13 21:43:54 PDT  Minor  CB 0 Voltage Sensor ADS7830_0x4B Sensor Failed
2017-07-13 21:43:31 PDT  Minor  Loss of communication with Backup RE
```

Starting in Junos OS Release 19.2R1, the MX10003 routers do not raise an alarm if a Power Entry Module (PEM) slot is empty. However, when the number of operational PEMs goes below 2, the router raises a major alarm. This alarm is cleared when the required number of PEMs are made available.

show chassis alarms (MX10004 Router)

```
user@host> show chassis alarms
2 alarms currently active
Alarm time               Class  Description
2022-07-05 20:34:40 PDT  Major  Fan Tray 0 EEPROM Read Error
2021-17-05 11:06:47 PST  Minor  Check plane 0 Fabric Chip
```

-->

show chassis alarms (MX204 Router)

```
user@host> show chassis alarms

1 alarms currently active
Alarm time               Class  Description
2017-11-05 22:13:03 PST  Major  PEM 0 Not Present
```

show chassis alarms (MX2008 Router)

```
user@host>show chassis alarms
No alarms currently active
```

show chassis alarms (MX960, MX480, and MX240 Routers showing Major CB Failure)

A major CB 0 failure alarm occurs in the event of a bad CB (unknown or mismatched CBs do not trigger this alarm in Junos Release OS 12.3R9 and later). Following GRES or recovery, if the hardware issue persists, the traffic moves to the good CB and continues. If the alarm was triggered by something transient like a power zone budget on GRES, bringing the CB back online can clear the alarm. Otherwise, replace the bad CB. Note that fabric link speed is not impacted by an offline SCB. The alarm migh be raised on CB0, CB1, and CB2.

```
user@host> show chassis alarms
6 alarms currently active
Alarm time               Class  Description
2014-10-31 16:49:41 EDT  Major  PEM 3 Not OK
2014-10-31 16:49:41 EDT  Major  PEM 2 Not OK
2014-10-31 16:49:31 EDT  Major  CB 0 Failure
2014-10-31 16:49:31 EDT  Minor  CB 0 Fabric Chip 0 Not Online
2014-10-31 16:49:31 EDT  Minor  CB 0 Fabric Chip 1 Not Online
2014-10-31 16:49:31 EDT  Minor  Backup RE Active
```

show chassis alarms (PTX10008 Router)

```
user@host>show chassis alarms
12 alarms currently active
Alarm time               Class  Description
2017-05-09 01:38:55 PDT  Minor  Loss of communication with Backup RE
2017-05-05 06:49:57 PDT  Major  FPC 5 LCPU Temp Sensor Access Failed
2017-05-05 06:49:57 PDT  Major  FPC 5 PE2 Temp Sensor Hot
2017-05-05 06:49:57 PDT  Major  FPC 5 PE1 Temp Sensor Hot
2017-05-05 06:49:57 PDT  Major  FPC 5 PE0 Temp Sensor Hot
2017-05-05 06:49:57 PDT  Major  FPC 5 Exhaust-C Temp Sensor Hot
2017-05-05 06:49:57 PDT  Major  FPC 5 Exhaust-B Temp Sensor Hot
2017-05-05 06:49:57 PDT  Major  FPC 5 Exhaust-A Temp Sensor Hot
2017-05-05 06:49:57 PDT  Major  FPC 5 Intake-B Temp Sensor Access Failed
2017-05-05 06:49:57 PDT  Major  FPC 5 Intake-A Temp Sensor Access Failed
```

```
2017-05-05 06:49:57 PDT  Major  Fan Tray 0 Fan 5 running at lower speed
2017-05-05 06:49:57 PDT  Major  Fan Tray 0 Fan 4 running at lower speed
```

show chassis alarms (T4000 Router)

```
user@host> show chassis alarms
9 alarms currently active
Alarm time               Class  Description
2007-06-02 01:41:10 UTC  Minor  RE 0 Not Supported
2007-06-02 01:41:10 UTC  Minor  CB 0 Not Supported
2007-06-02 01:41:10 UTC  Minor  Mixed Master and Backup RE types
2007-05-30 19:37:33 UTC  Major  SPMB 1 not online
2007-05-30 19:37:29 UTC  Minor  Front Bottom Fan Tray Absent
2007-05-30 19:37:13 UTC  Major  PEM 1 Input Failure
2007-05-30 19:37:13 UTC  Major  PEM 0 Not OK
2007-05-30 19:37:03 UTC  Major  PEM 0 Improper for Platform
2007-05-30 19:37:03 UTC  Minor  Backup RE Active
```

show chassis alarms (Unreachable Destinations Present on a T Series Router)

```
user@host> show chassis alarms
10 alarms currently active
Alarm time               Class  Description
2011-08-30 18:43:53 PDT  Major  FPC 7 has unreachable destinations
2011-08-30 18:43:53 PDT  Major  FPC 5 has unreachable destinations
2011-08-30 18:43:52 PDT  Major  FPC 3 has unreachable destinations
2011-08-30 18:43:52 PDT  Major  FPC 2 has unreachable destinations
2011-08-30 18:43:52 PDT  Minor  SIB 0 Not Online
2011-08-30 18:43:33 PDT  Minor  SIB 4 Not Online
2011-08-30 18:43:28 PDT  Minor  SIB 3 Not Online
2011-08-30 18:43:05 PDT  Minor  SIB 2 Not Online
2011-08-30 18:43:28 PDT  Minor  SIB 1 Not Online
2011-08-30 18:43:05 PDT  Major  PEM 1 Not Ok
```

show chassis alarms (FPC Offline Due to Unreachable Destinations on a T Series Router)

```
user@host> show chassis alarms
10 alarms currently active
```

```
Alarm time               Class  Description
2011-08-30 18:43:53 PDT  Major  FPC 7 offline due to unreachable destinations
2011-08-30 18:43:53 PDT  Major  FPC 5 offline due to unreachable destinations
2011-08-30 18:43:52 PDT  Major  FPC 3 offline due to unreachable destinations
2011-08-30 18:43:52 PDT  Major  FPC 2 offline due to unreachable destinations
2011-08-30 18:43:52 PDT  Minor  SIB 0 Not Online
2011-08-30 18:43:33 PDT  Minor  SIB 4 Not Online
2011-08-30 18:43:28 PDT  Minor  SIB 3 Not Online
2011-08-30 18:43:05 PDT  Minor  SIB 2 Not Online
2011-08-30 18:43:28 PDT  Minor  SIB 1 Not Online
2011-08-30 18:43:05 PDT  Major  PEM 1 Not Ok
```

show chassis alarms (SCG Absent on a T Series Router)

```
user@host> show chassis alarms
4 alarms currently active
Alarm time               Class  Description
2011-01-23 21:42:46 PST  Major  SCG 0 NO EXT CLK MEAS-BKUP SCG ABS
```

show chassis alarms (Alarms Active on a TX Matrix Router)

```
user@host> show chassis alarms
scc-re0:
--------------------------------------------------------------------------
8 alarms currently active
Alarm time               Class  Description
2004-08-05 18:43:53 PDT  Minor  LCC 0 Minor Errors
2004-08-05 18:43:53 PDT  Minor  SIB 3 Not Online
2004-08-05 18:43:52 PDT  Major  SIB 2 Absent
2004-08-05 18:43:52 PDT  Major  SIB 1 Absent
2004-08-05 18:43:52 PDT  Major  SIB 0 Absent
2004-08-05 18:43:33 PDT  Major  LCC 2 Major Errors
2004-08-05 18:43:28 PDT  Major  LCC 0 Major Errors
2004-08-05 18:43:05 PDT  Minor  LCC 2 Minor Errors
lcc0-re0:
--------------------------------------------------------------------------
5 alarms currently active
Alarm time               Class  Description
2004-08-05 18:43:53 PDT  Minor  SIB 3 Not Online
2004-08-05 18:43:49 PDT  Major  SIB 2 Absent
```

```
2004-08-05 18:43:49 PDT  Major  SIB 1 Absent
2004-08-05 18:43:49 PDT  Major  SIB 0 Absent
2004-08-05 18:43:28 PDT  Major  PEM 0 Not OK
lcc2-re0:
--------------------------------------------------------------------------
5 alarms currently active
Alarm time               Class  Description
2004-08-05 18:43:35 PDT  Minor  SIB 3 Not Online
2004-08-05 18:43:33 PDT  Major  SIB 2 Absent
2004-08-05 18:43:33 PDT  Major  SIB 1 Absent
2004-08-05 18:43:33 PDT  Major  SIB 0 Absent
2004-08-05 18:43:05 PDT  Minor  PEM 1 Absent
```

show chassis alarms (TX Matrix Plus router with 3D SIBs)

```
user@host> show chassis alarms
sfc0-re0:
--------------------------------------------------------------------------
Alarm time               Class  Description

2014-04-08 14:35:13 IST  Minor  FPM 0 SFC Config Size Changed
2014-04-08 14:32:58 IST  Major  Fan Tray Failure
2014-04-08 14:31:53 IST  Major  SIB F13 6 Fault
2014-04-08 14:31:43 IST  Major  SIB F13 11 Fault
2014-04-08 14:31:08 IST  Minor  Check SIB F13 12 CXP 14 Fbr Cbl
2014-04-08 14:31:08 IST  Minor  Check SIB F13 12 CXP 8 Fbr Cbl
2014-04-08 14:31:08 IST  Minor  Check SIB F13 12 CXP 3 Fbr Cbl
2014-04-08 14:31:08 IST  Major  SIB F13 12 CXP 15 fault
2014-04-08 14:31:08 IST  Minor  SIB F13 12 CXP 14 LOL
2014-04-08 14:31:08 IST  Minor  Check SIB F13 12 CXP 14
2014-04-08 14:31:08 IST  Major  SIB F13 12 CXP 10 fault
2014-04-08 14:31:08 IST  Minor  SIB F13 12 CXP 8 LOL
2014-04-08 14:31:08 IST  Minor  Check SIB F13 12 CXP 8
2014-04-08 14:31:08 IST  Major  SIB F13 12 CXP 7 fault
2014-04-08 14:31:08 IST  Major  SIB F13 12 CXP 4 fault
2014-04-08 14:31:08 IST  Minor  SIB F13 12 CXP 3 LOL
2014-04-08 14:31:08 IST  Minor  Check SIB F13 12 CXP 3
2014-04-08 14:31:08 IST  Minor  Check SIB F13 6 CXP 14 Fbr Cbl
2014-04-08 14:31:08 IST  Minor  Check SIB F13 6 CXP 12 Fbr Cbl
2014-04-08 14:31:08 IST  Minor  Check SIB F13 6 CXP 8 Fbr Cbl
2014-04-08 14:31:08 IST  Minor  Check SIB F13 6 CXP 6 Fbr Cbl
```

```
2014-04-08 14:31:08 IST  Minor  Check SIB F13 6 CXP 4 Fbr Cbl
2014-04-08 14:31:08 IST  Minor  Check SIB F13 6 CXP 2 Fbr Cbl
2014-04-08 14:31:08 IST  Minor  Check SIB F13 6 CXP 0 Fbr Cbl
2014-04-08 14:31:08 IST  Minor  SIB F13 6 CXP 14 LOL
2014-04-08 14:31:08 IST  Minor  Check SIB F13 6 CXP 14
2014-04-08 14:31:08 IST  Minor  SIB F13 6 CXP 12 LOL
2014-04-08 14:31:08 IST  Minor  Check SIB F13 6 CXP 12
2014-04-08 14:31:08 IST  Major  SIB F13 6 CXP 10 fault
2014-04-08 14:31:08 IST  Minor  SIB F13 6 CXP 8 LOL
2014-04-08 14:31:08 IST  Minor  Check SIB F13 6 CXP 8
2014-04-08 14:31:08 IST  Minor  SIB F13 6 CXP 6 LOL
2014-04-08 14:31:08 IST  Minor  Check SIB F13 6 CXP 6
2014-04-08 14:31:08 IST  Minor  SIB F13 6 CXP 4 LOL
2014-04-08 14:31:08 IST  Minor  Check SIB F13 6 CXP 4
2014-04-08 14:31:08 IST  Minor  SIB F13 6 CXP 2 LOL
2014-04-08 14:31:08 IST  Minor  Check SIB F13 6 CXP 2
2014-04-08 14:31:08 IST  Minor  SIB F13 6 CXP 0 LOL
2014-04-08 14:31:08 IST  Minor  Check SIB F13 6 CXP 0
2014-04-08 14:31:08 IST  Minor  SIB F13 12 CXP 14 XC HSL Link Error
2014-04-08 14:29:27 IST  Minor  LCC 0 Minor Errors
2014-04-08 14:28:37 IST  Major  LCC 0 Major Errors
2014-04-08 14:28:37 IST  Major  LCC 2 Major Errors
2014-04-08 14:28:37 IST  Minor  LCC 2 Minor Errors
2014-04-08 14:28:24 IST  Major  SIB F2S 4/6 Absent
2014-04-08 14:28:24 IST  Major  SIB F2S 4/4 Absent
2014-04-08 14:28:24 IST  Major  SIB F2S 4/2 Absent
2014-04-08 14:28:24 IST  Major  SIB F2S 4/0 Absent
2014-04-08 14:28:24 IST  Major  SIB F2S 3/6 Absent
2014-04-08 14:28:24 IST  Major  SIB F2S 3/4 Absent
2014-04-08 14:28:24 IST  Major  SIB F2S 3/2 Absent
2014-04-08 14:28:24 IST  Major  SIB F2S 3/0 Absent
2014-04-08 14:28:24 IST  Major  SIB F13 9 Absent
2014-04-08 14:28:24 IST  Major  SIB F13 8 Absent
2014-04-08 14:28:24 IST  Major  SIB F13 7 Absent
2014-04-08 14:28:24 IST  Major  SIB F13 4 Absent
2014-04-08 14:28:24 IST  Major  SIB F13 1 Absent
2014-04-08 14:28:22 IST  Major  PEM 0 Input Failure
2014-04-08 14:28:22 IST  Major  PEM 0 Not OK

lcc0-re0:
--------------------------------------------------------------------------
12 alarms currently active
Alarm time               Class  Description
```

```
2014-04-08 14:36:08 IST  Minor  CB 1  M/S Switch Changed
2014-04-08 14:36:08 IST  Minor  CB 1  CHASSIS ID Changed
2014-04-08 14:35:43 IST  Minor  CB 0  M/S Switch Changed
2014-04-08 14:35:43 IST  Minor  CB 0  CHASSIS ID Changed
2014-04-08 14:29:30 IST  Minor  SIB 4 Not Online
2014-04-08 14:29:30 IST  Minor  SIB 3 Not Online
2014-04-08 14:29:30 IST  Minor  SIB 2 Not Online
2014-04-08 14:29:24 IST  Major  Rear Fan Tray Failure
2014-04-08 14:29:24 IST  Major  Front Bottom Fan Tray Improper for Platform
2014-04-08 14:29:24 IST  Major  Front Top Fan Tray Improper for Platform
2014-04-08 14:28:37 IST  Major  SIB 4 Absent
2014-04-08 14:28:37 IST  Major  SIB 3 Absent

lcc2-re0:
--------------------------------------------------------------------------
12 alarms currently active
Alarm time               Class  Description
2014-04-08 14:36:02 IST  Minor  CB 1  M/S Switch Changed
2014-04-08 14:36:02 IST  Minor  CB 1  CHASSIS ID Changed
2014-04-08 14:35:42 IST  Minor  CB 0  M/S Switch Changed
2014-04-08 14:34:42 IST  Minor  CB 0  CHASSIS ID Changed
2014-04-08 14:29:29 IST  Minor  SIB 0 CXP 7 Unsupported Optics
2014-04-08 14:29:27 IST  Major  Front Bottom Fan Tray Improper for Platform
2014-04-08 14:29:27 IST  Major  Front Top Fan Tray Improper for Platform
2014-04-08 14:29:25 IST  Minor  SIB 4 Not Online
2014-04-08 14:29:25 IST  Minor  SIB 3 Not Online
2014-04-08 14:28:47 IST  Major  PEM 0 Not OK
2014-04-08 14:28:36 IST  Major  SIB 2 Absent
2014-04-08 14:28:36 IST  Minor  Host 0 Boot from alternate media

lcc6-re0:
--------------------------------------------------------------------------
2 alarms currently active
Alarm time               Class  Description
2013-11-06 04:03:56 PST  Minor  SIB 1 CXP 0 XC HSL Link Error
2013-11-06 03:49:32 PST  Major  PEM 1 Not OK
```

show chassis alarms (Alarms on a T4000 Router After the enhanced-mode Statement is Enabled)

To enable improved virtual private LAN service (VPLS) MAC address learning on T4000 routers, you must include the `enhanced-mode` statement at the `[edit chassis network-services]` hierarchy level and reboot

the router. When router reboots, only the T4000 Type 5 FPCs are required to be present on the router. If there are any other FPCs (apart from T4000 Type 5 FPCs) on the T4000 router, such FPCs become offline, and FPC misconfiguration alarms are generated. The `show chassis alarm` command output displays FPC misconfiguration (`FPC` *`fpc-slot`* `misconfig`) as the reason for the generation of the alarms.

```
user@host> show chassis alarms
2 alarms currently active
        Alarm time               Class  Description
        2011-10-22 10:10:47 PDT  Major  FPC 1 misconfig
        2011-10-22 10:10:46 PDT  Major  FPC 0 misconfig
```

show chassis alarms (Backup Routing Engine)

```
user@host> show chassis alarms
2 alarms are currently active
Alarm time               Class  Description
2005-04-07 10:12:22 PDT  Minor  Host 1 Boot from alternate media
2005-04-07 10:11:54 PDT  Major  Host 1 compact-flash missing in Boot List
```

show chassis alarms (EX Series Switch)

```
user@switch> show chassis alarms

 4 alarms currently active
Alarm time               Class  Description
2014-03-12 15:36:09 UTC  Minor  Require a Fan Tray upgrade
2014-03-12 15:00:02 UTC  Major  PEM 0 Input Failure
2014-03-12 15:00:02 UTC  Major  PEM 0 Not OK
2014-03-12 14:59:51 UTC  Minor  Host 1 Boot from alternate media
```

show chassis alarms (Alarms Active on the QFX Series and OCX Series Switches)

```
user@switch> show chassis alarms
1 alarms currently active
Alarm time               Class  Description
2012-03-05    2:10:24 UTC  Major  FPC 0 PEM 0 Airflow not matching Chassis Airflow
```

show chassis alarms node-device (Alarms Active on the QFabric System)

```
user@switch> show chassis alarms node-device
Test
node-device ED3694
3 alarms currently active
Alarm time               Class  Description
2011-08-24 16:04:15 UTC  Major  Test:fte-0/1/2: Link down
2011-08-24 16:04:14 UTC  Major  Test:fte-0/1/0: Link down
2011-08-24 14:21:14 UTC  Major  Test PEM 0 is not supported/powered
```

show chassis alarms (Alarms Active on the QFabric System)

```
user@switch> show chassis alarms
IC-1:
--------------------------------------------------------------------------
1 alarms currently active
Alarm time               Class  Description
2011-08-24 16:04:15 UTC  Minor  Backup RE Active

Test:
--------------------------------------------------------------------------
3 alarms currently active
Alarm time               Class  Description
2011-08-24 16:04:15 UTC  Major  Test:fte-0/1/2: Link down
2011-08-24 16:04:14 UTC  Major  Test:fte-0/1/0: Link down
2011-08-24 14:21:14 UTC  Major  Test PEM 0 is not supported/powered

SNG-0:
--------------------------------------------------------------------------

NW-NG-0:
--------------------------------------------------------------------------
1 alarms currently active
Alarm time               Class  Description
2011-08-24 15:49:27 UTC  Major  Test PEM 0 is not supported/powered
```

show chassis alarms (Alarms Active on an EX8200 Switch)

```
user@switch> show chassis alarms

6 alarms currently active
Alarm time               Class  Description
2010-12-02 19:15:22 UTC  Major  Fan Tray Failure
2010-12-02 19:15:22 UTC  Major  Fan Tray Failure
2010-12-02 19:15:14 UTC  Minor  Check CB 0 Fabric Chip 1 on Plane/FPC/PFE: 1/5/0, 1/5/1, 1/5/2,
1/5/3, 1/7/0, 1/7/1, 1/7/2, 1/7/3, 2/5/0, 2/5/1, ...
2010-12-02 19:15:14 UTC  Minor  Check CB 0 Fabric Chip 0 on Plane/FPC/PFE: 1/5/0, 1/5/1, 1/5/2,
1/5/3, 1/7/0, 1/7/1, 1/7/2, 1/7/3, 2/5/0, 2/5/1, ...
2010-12-02 19:14:18 UTC  Major  PSU 1 Output Failure
2010-12-02 19:14:18 UTC  Minor  Loss of communication with Backup RE
```

show chassis alarms (EX9251 Switch)

```
user@switch> show chassis alarms

 2 alarms currently active
Alarm time               Class  Description
2018-03-08 05:13:10 PST  Major  PEM 0 Not Powered
2018-03-08 05:13:10 PST  Major  Fan Tray 2 is not present
```

show chassis alarms (EX9253 Switch)

```
user@switch> show chassis alarms

6 alarms currently active
Alarm time               Class  Description
2018-03-07 01:09:01 PST  Major  Power Budget:Insufficient Power
2018-03-06 23:56:34 PST  Minor  Loss of communication with Backup RE
2018-02-15 00:48:10 PST  Minor  PEM 3 Not Present
2018-02-15 00:48:10 PST  Minor  PEM 2 Not Present
2018-02-15 00:48:07 PST  Major  PEM 4 Not Powered
2018-02-15 00:48:07 PST  Major  PEM 1 Not Powered
```

show chassis alarms (MX Series for PFE reset)

```
user@host> show chassis alarms
1 alarm currently active
Alarm time               Class  Description
2021-01-04 11:20:42 PST  Major  FPC 0 PFE 0  reset initiated
```

show chassis alarms (MX Series for PFE reset error)

```
user@host> show chassis alarms
1 alarm currently active
Alarm time               Class  Description
2021-01-04 11:20:42 PST  Major  FPC 0 PFE 0  reset error
```

show chassis alarms (Alarms Active on a PTX5000 Packet Transport Router)

```
user@host> show chassis alarms

23 alarms currently active
Alarm time               Class  Description
2011-07-12 16:22:05 PDT  Minor  No Redundant Power for Rear Chassis
2011-07-12 16:22:05 PDT  Major  PDU 0 PSM 1 Not OK
2011-07-12 16:21:57 PDT  Minor  No Redundant Power for Fan 0-2
2011-07-12 16:21:57 PDT  Major  PDU 0 PSM 0 Not OK
2011-07-12 15:56:06 PDT  Major  PDU 1 PSM 2 Not OK
2011-07-12 15:56:06 PDT  Minor  No Redundant Power for FPC 0-7
2011-07-12 15:56:06 PDT  Major  PDU 0 PSM 3 Not OK
2011-07-12 15:28:20 PDT  Major  PDU 0 PSM 2 Not OK
2011-07-12 15:19:14 PDT  Minor  Backup RE Active
```

show chassis alarms (Mix of PDUs Alarm on a PTX5000 Packet Transport Router with FPC2-PTX-P1A)

All PDUs installed on a PTX5000 router must be of the same type. The `Mix of PDUs` or `Power Manager Non Operational` alarm is raised when different types of PDUs are installed on a PTX5000 router.

```
user@host> show chassis alarms
15 alarms currently active
Alarm time               Class  Description
2013-03-19 23:03:53 PDT  Minor  No Redundant Power
2013-03-19 23:03:48 PDT  Minor  Mix of PDUs
2013-03-19 23:03:47 PDT  Minor  PDU 1 PSM 3 Absent
2013-03-19 23:03:47 PDT  Minor  PDU 1 PSM 2 Absent
2013-03-19 23:03:47 PDT  Minor  PDU 1 PSM 1 Absent
2013-03-19 23:03:47 PDT  Minor  PDU 1 PSM 0 Absent
2013-03-19 23:03:46 PDT  Major  No CG Online
```

show chassis alarms (PDU Converter Failed Alarm on a PTX5000 Packet Transport Router with FPC2-PTX-P1A)

The `PDU Converter Failed` alarm is raised when one or more 36 V booster converter of a DC PDU fails. If two or more 36 V booster converter fails, fan trays fail and the router might get over heated. Therefore, when this alarm is raised, check the PDU and replace it, if required.

```
user@host> show chassis alarms
11 alarms currently active
Alarm time               Class  Description
2013-12-11 22:14:13 PST  Minor  No Redundant Power for System
2013-12-11 22:14:10 PST  Major  PDU 0 PSM 7 Not OK
2013-12-11 22:14:10 PST  Major  PDU 0 PSM 6 Not OK
2013-12-11 22:14:10 PST  Major  PDU 0 PSM 5 Not OK
2013-12-11 22:14:10 PST  Major  PDU 0 PSM 4 Not OK
2013-12-11 22:14:10 PST  Major  PDU 0 PSM 3 Not OK
2013-12-11 22:14:10 PST  Major  PDU 0 PSM 2 Not OK
2013-12-11 22:14:10 PST  Major  PDU 0 PSM 1 Not OK
2013-12-11 22:14:10 PST  Major  PDU 0 PSM 0 Not OK
2013-12-11 22:14:10 PST  Major  PDU 0 Not OK
2013-12-11 22:14:01 PST  Major  PDU 0 Converter Failed
```

show chassis alarms (No Power for System Alarm on a PTX5000 Packet Transport Router with FPC2-PTX-P1A)

```
user@host> show chassis alarms
8 alarms currently active
Alarm time               Class  Description
2013-11-19 01:58:41 PST  Major  No Power for System
2013-11-19 01:58:37 PST  Major  PDU 0 PSM 1 Not OK
2013-11-19 01:56:46 PST  Major  PDU 0 PSM 2 Not OK
2013-11-19 01:54:26 PST  Major  PDU 0 PSM 3 Not OK
2013-11-19 01:53:30 PST  Major  PDU 1 PSM 3 Not OK
2013-11-19 01:53:29 PST  Major  PDU 1 PSM 2 Not OK
2013-11-19 01:53:29 PST  Major  PDU 1 PSM 1 Not OK
2013-11-19 01:53:29 PST  Major  PDU 1 PSM 0 Not OK
```

show chassis alarms (Alarms Active on an ACX2000 Universal Metro Router)

```
user@host> show chassis alarms
7 alarms currently active
Alarm time               Class  Description
2012-05-22 11:19:09 UTC  Major  xe-0/3/1: Link down
2012-05-22 11:19:09 UTC  Major  xe-0/3/0: Link down
2012-05-22 11:19:09 UTC  Major  ge-0/1/7: Link down
2012-05-22 11:19:09 UTC  Major  ge-0/1/6: Link down
2012-05-22 11:19:09 UTC  Major  ge-0/1/3: Link down
2012-05-22 11:19:09 UTC  Major  ge-0/1/2: Link down
2012-05-22 11:19:09 UTC  Major  ge-0/1/1: Link down
```

show chassis alarms (Active Alarm to Indicate Status of the Bad SCB Clock on MX Series)

```
user@host> show chassis alarms
1 alarm currently active
Alarm time               Class  Description
2013-08-06 07:48:35 PDT  Major  CB 0 19.44 MHz clock failure
```

show chassis alarms (Alarms active on a PTX1000 Packet Transport Router)

```
user@host> show chassis alarms
2 alarms currently active
Alarm time               Class  Description
2004-08-10 00:55:49 UTC  Major  PEM 1 Not Present
2004-08-10 00:55:49 UTC  Major  PEM 0 Not Present
```

show chassis alarms (MX10003 Router)

If LCMD is down on the backup RE, then the following alarm is seen on the primary.

```
user@host> show chassis alarms
1 alarm currently active
Alarm time               Class  Description
2017-05-09 13:26:27 PDT  Major  VMHost RE 1 host application failed
```

If LCMD is down on the primary, then following alarms are displayed.

```
user@host> show chassis alarms
3 alarms currently active
Alarm time               Class  Description
2017-05-10 14:12:21 PDT  Major  VMHost RE 0 host application failed
2017-05-10 14:12:16 PDT  Minor  LCM Peer Absent
2017-05-09 13:26:27 PDT  Major  VMHost RE 1 host application failed
```

If the LCMD process is crashing on the primary, the system will switchover after one minute provided the backup RE LCMD connection is stable. The system will not switchover under the following conditions: if the backup RE LCMD connection is unstable or if the current primary just gained primary role. When the primary has just gained primary role, the switchover happens only after four minutes.

The LCM peer connection un-stable alarm is raised when the LCMD-CHASD IPC communication flaps three times within a small interval of two to three minutes. Once LCM peer connection un-stable alarm is raised, the connection status is monitored for two minutes.

```
user@host> show chassis alarms
7 alarms currently active
Alarm time               Class  Description
2017-05-29 10:12:17 PDT  Minor  LCM Peer Connection un-stable
```

```
2017-05-29 09:04:17 PDT  Minor  PEM 8 Not Powered
2017-05-29 09:04:17 PDT  Minor  PEM 9 Not Powered
2017-05-29 09:04:17 PDT  Minor  PEM 7 Not Powered
2017-05-29 09:04:17 PDT  Minor  PEM 3 Not Powered
2017-05-29 09:04:17 PDT  Minor  PEM 0 Not Powered
2017-05-29 09:04:08 PDT  Minor  Loss of communication with Backup RE
```

If there are no more connection flaps within this two minutes time interval, the LCM peer connection un-stable alarm is cleared.

```
6 alarms currently active
Alarm time               Class  Description
2017-05-29 09:04:17 PDT  Minor  PEM 8 Not Powered
2017-05-29 09:04:17 PDT  Minor  PEM 9 Not Powered
2017-05-29 09:04:17 PDT  Minor  PEM 7 Not Powered
2017-05-29 09:04:17 PDT  Minor  PEM 3 Not Powered
2017-05-29 09:04:17 PDT  Minor  PEM 0 Not Powered
2017-05-29 09:04:08 PDT  Minor  Loss of communication with Backup RE
```

A major alarm is raised even if there is on one PLL lock error, and this alarm can be cleared only through an FPC restart.

```
user@host> show chassis alarms
4 alarms currently active
Alarm time               Class  Description
2017-02-16 09:06:06 PDT  Major  FPC 0 Major Errors
2017-02-16 09:08:40 PDT  Major  FPC 1 Major Errors
2017-02-16 09:11:47 PST  Minor  Fan Tray 3 Pair 1 Outer Fan running at over speed
2017-02-16 09:11:47 PST  Minor  Fan Tray 3 Pair 1 Inner Fan running at over speed
```

show chassis alarms (Alarms active on a MX10008 Router)

```
user@host> show chassis alarms
13 alarms currently active
Alarm time               Class  Description
2018-07-17 05:48:08 PDT  Major  FPC 2 I2C Failure
2018-07-17 05:47:02 PDT  Minor  Mixed Master and Backup RE types
2018-07-17 05:47:01 PDT  Major  Fan Tray 0 Fan 5 Failed
2018-07-17 05:47:01 PDT  Major  Fan Tray 0 Fan 4 Failed
2018-07-17 05:47:01 PDT  Minor  PEM 5 Not Powered
```

```
2018-07-17 05:47:01 PDT  Minor  PEM 5 Feed 2 has no input source
2018-07-17 05:47:01 PDT  Minor  PEM 5 Feed 1 has no input source
2018-07-17 05:47:01 PDT  Minor  PEM 4 Not Powered
2018-07-17 05:47:01 PDT  Minor  PEM 4 Feed 2 has no input source
2018-07-17 05:47:01 PDT  Minor  PEM 4 Feed 1 has no input source
2018-07-17 05:47:01 PDT  Minor  PEM 3 Not Powered
2018-07-17 05:47:01 PDT  Minor  PEM 3 Feed 2 has no input source
2018-07-17 05:47:01 PDT  Minor  PEM 3 Feed 1 has no input source
```

show chassis alarms (ACX710 Router)

```
user@host> show chassis alarms
Alarm time               Class  Description
2011-01-23 21:42:46 PST  Major  PTP Local Clock OOS
2011-01-23 21:42:46 PST  Major  PTP No Foreign Master
2011-01-23 21:42:46 PST  Major  Chassis Loss of all Equipment Clock Synch References
2011-01-23 21:42:46 PST  Major  Chassis Loss of Equipment Clock Synch Reference 1
2011-01-23 21:42:46 PST  Major  Chassis Loss of Equipment Clock Synch Reference 2
2011-01-23 21:42:46 PST  Major  Equipment Clock QL Below Threshold
2011-01-23 21:42:46 PST  Major  TOD Input A Signal Fail
2011-01-23 21:42:46 PST  Major  1PPS lost
2011-01-23 21:42:46 PST  Major  SyncE Port incompatible Media Type
```

show chassis alarms (MX10008, MX10016, PTX10008, PTX10016, QFX10008,QFX10016) (Junos OS Release)

Starting Junos OS Evolved Release 21.2R1, if PEM or FET Failure detected, a major alarm is raised, and the identified PSM will shutdown or raise alarms as per predefined configuration in the `set chassis thermal-events fet-failure-check` command.

For FET failure detection and action, the `show chassis alarm` output displays a major alarm and information if PSM is shutdown.

For example, for the `show chassis` configuration:

```
user@root> show chassis thermal-health-check
                  {
                     fet-failure-check;
```

```
                    action-onfail auto-shutdown;
                }
```

The output is displayed as follows:

```
user@root> show chassis alarms

Alarm time                Class  Description
2007-04-10 02:33:11 PDT  Minor  No Redundant Power for System
2007-04-10 02:33:08 PDT  Minor  PDU 1 PSM 4 Thermal Check brought it Down
2007-04-10 02:33:08 PDT  Major  PDU 1 PSM 4 Not OK
2007-04-10 02:33:08 PDT  Minor  PDU 0 PSM 4 Thermal Check brought it Down
2007-04-10 02:33:08 PDT  Major  PDU 0 PSM 4 Not OK
2007-04-10 02:32:03 PDT  Minor  PDU 1 PSM 3 Thermal Check brought it Down
2007-04-10 02:32:03 PDT  Major  PDU 1 PSM 3 Not OK
...
...
```

show chassis alarms (ACX7024)

On ACX7024 device, when `edit chassis pem minimum` is set to 1, The following output is displayed. The PSM absent alarm is removed only after a reboot:

```
user@root> show chassis alarms
4 alarms currently active
Alarm time                Class  Description
2022-05-15 09:12:31   PDT Major  No Redundant Power for System
2022-05-15 09:12:31   PDT Major  PSM 1 Input1 Failed
2022-05-15 09:12:31   PDT Major  PSM 1 Input Failed
2022-05-15 09:12:34   PDT Major PSM 0 Absent
2022-06-04 05:30:11   PDT Minor RE 0 Secure boot disabled or not enforced
```

When the default PSU 1+1 redundancy mode is active, the following output is displayed:

```
user@root> show chassis alarms
6 alarms currently active
Alarm time                Class  Description
2022-05-15 09:12:31   PDT Major  No Redundant Power for System
```

```
2022-05-15 09:12:31   PDT Major  PSM 1 Input1 Failed
2022-05-15 09:12:31   PDT Major  PSM 1 Input Failed
2022-06-04 05:30:19   PDT Major  PSM 0 Absent
2022-06-04 05:30:11   PDT Minor  RE 0 Secure boot disabled or not enforced
2022-06-04 05:31:54   PDT Major  chassis No Redundant Power
```

Release Information

Command introduced before Junos OS Release 7.4.

`sfc` option introduced in Junos OS Release 9.6 for the TX Matrix Plus router.

`satellite` option introduced in Junos OS Release 14.2R3 for Junos Fusion.

Command introduced in Junos OS Release 18.2R1 for EX9253 Switches and MX10008 Universal Routing Platforms.

RELATED DOCUMENTATION

- Configuring an RMON Alarm Entry and Its Attributes
- Chassis Conditions That Trigger Alarms

show chassis cfeb

IN THIS SECTION

- Syntax | **514**
- Description | **514**
- Options | **514**
- Required Privilege Level | **514**
- Output Fields | **514**
- Sample Output | **515**
- Release Information | **516**

Syntax

```
show chassis cfeb
```

Description

(M7i and M10i routers only) Display status information about the Compact Forwarding Engine Board (CFEB).

Options

This command has no options.

Required Privilege Level

view

Output Fields

Table 36 on page 514 lists the output fields for the `show chassis cfeb` command. Output fields are listed in the approximate order in which they appear.

Table 36: show chassis cfeb Output Fields

Field Name	Field Description
State	Status of the CFEB: • **Online**—CFEB is online and running. • **Offline**—CFEB is powered down.

Table 36: show chassis cfeb Output Fields *(Continued)*

Field Name	Field Description
Intake Temperature	Temperature of the air before flowing past the CFEB.
Exhaust Temperature	Temperature of the air after flowing past the CFEB.
CPU utilization	Percentage of CPU being used by the CFEB processor.
Interrupt utilization	Of the total CPU being used by the CFEB processor, the percentage being used for interrupts
Heap Utilization	Percentage of heap space (dynamic memory) being used by the CFEB processor. If this number exceeds 80 percent, there may be a software problem (memory leak).
Buffer Utilization	Percentage of buffer space being used by the CFEB processor for buffering internal messages
Total CPU DRAM	Amount of DRAM available to the CFEB CPU.
Internet Processor II	Information about the CFEB processor.
Start time	Time when the Routing Engine detected that the CFEB was running.
Uptime	How long the Routing Engine has been connected to the CFEB and, therefore, how long the Flexible PIC Concentrator (FPC) has been up and running.

Sample Output

show chassis cfeb (M7i)

```
user@host> show chassis cfeb
CFEB status:
```

```
  State                          Online
  Intake Temperature          27 degrees C / 80 degrees F
  Exhaust Temperature         33 degrees C / 91 degrees F
  CPU utilization              3 percent
  Interrupt utilization        0 percent
  Heap utilization             8 percent
  Buffer utilization          21 percent
  Total CPU DRAM             128 MB
  Internet Processor II          Version 1, Foundry IBM, Part number 164
  Start time:                    2003-06-11 11:41:22 PDT
  Uptime:                        1 hour, 39 minutes, 31 seconds
```

show chassis cfeb (M10i)

```
user@host> show chassis cfeb
CFEB status:
Slot 0 information:
  StateMaster
  Intake temperature                35 degrees C / 95 degrees F
  Exhaust temperature               43 degrees C / 109 degrees F
  CPU utilization                    3 percent
  Interrupt utilization              0 percent
  Heap utilization                  10 percent
  Buffer utilization                22 percent
  Total CPU DRAM                   128 MB
  Internet Processor II                Version 1, Foundry IBM, Part number 164
  Start time:                          2004-11-01 03:24:15 PST
  Uptime:                             12 hours, 56 minutes, 18 seconds
Slot 1 information:
  State                                Backup
```

Release Information

Command introduced before Junos OS Release 7.4.

RELATED DOCUMENTATION

request chassis cfeb | 408

Configuring CFEB Redundancy on the M10i Router

CFEB Overview

show chassis craft-interface

IN THIS SECTION

- Syntax (MX Series Routers) | 517
- Syntax (MX104, MX2010, MX2020, MX2008, and ACX Series routers.) | 518
- Syntax (TX Matrix Routers) | 518
- Syntax (TX Matrix Plus Routers) | 518
- Description | 518
- Options | 518
- Required Privilege Level | 519
- Output Fields | 520
- Sample Output | 522
- Release Information | 543

Syntax (MX Series Routers)

```
show chassis craft-interface
<all-members>
<local>
<member member-id>
```

Syntax (MX104, MX2010, MX2020, MX2008, and ACX Series routers.)

```
show chassis craft-interface
```

Syntax (TX Matrix Routers)

```
show chassis craft-interface
<lcc number | scc>
```

Syntax (TX Matrix Plus Routers)

```
show chassis craft-interface
<lcc number | sfc number>
```

Description

For routers or switches that have a display on the craft interface, show the messages that are currently displayed. On all routers except for the M20 router, you must enter this command on the primary Routing Engine.

Options

none (TX Matrix, TX Matrix Plus routers, MX104, MX2010, MX2020, and MX2008 routers, and ACX Series routers only) On a TX Matrix router, show messages that are currently displayed on the craft interface on the TX Matrix router and its attached T640 routers. On a TX Matrix Plus router, show messages that are currently displayed on the craft interface on the TX Matrix Plus router and its attached routers.

all-members (MX Series routers only) (Optional) Display information currently on the craft interface for all members of the Virtual Chassis configuration.

lcc *number* (TX Matrix, TX Matrix Plus routers only) (Optional) On a TX Matrix router, show messages that are currently displayed on the craft interface for a specified T640 router (line-card chassis) that is connected to the TX Matrix router. On a TX Matrix Plus router, show messages that are currently displayed on the craft interface for a specified router (line-card chassis) that is connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local (MX Series routers only) (Optional) Display information currently on the craft interface for the local Virtual Chassis member.

member *member-id* (MX Series routers only) (Optional) Display information currently on the craft interface for the specified member of the Virtual Chassis configuration. For an MX Series Virtual Chassis, replace *member-id* with a value of 0 or 1.

scc (TX Matrix router only) (Optional) Show messages that are currently displayed on the craft interface for the TX Matrix router (switch-card chassis).

sfc *number* (TX Matrix Plus router only) (Optional) Show messages that are currently displayed on the craft interface for the respective TX Matrix Plus router (switch-fabric chassis). Replace *number* variable with **0**.

Required Privilege Level

view

Output Fields

Table 37 on page 520 lists the output fields for the `show chassis craft-interface` command. Output fields are listed in the approximate order in which they appear.

Table 37: show chassis craft-interface Output Fields

Field Name	Field Description
LCD screen or **FPM Display Contents**	Contents of the Front Panel Module display: • ***router-name***—Name of the router. • **Up**—How long the router has been operational, in days, hours, minutes, and seconds. • ***message***—Information about the router traffic load, the power supply status, the fan status, and the temperature status. The display of this information changes every 2 seconds. If a text message has been created with the `set chassis display` command, this message appears on all four lines of the craft interface display. The display alternates between the text message and the standard system status messages every 2 seconds.
`SFC Front Panel Switch Settings`	(TX Matrix Plus Routers)—Display the SFC front panel switch settings: `SFC Chassis Number` and `Config Size` are settings on physical switches located on the left side of the craft interface of the TX Matrix Plus router. • `SFC Chassis Number`—This field always displays the value `00`. • `Config Size`—The value of this field is `0` for the TX Matrix Plus router. The value of this filed is `3` for TX Matrix Plus router with 3D SIBs.
`Front Panel System LEDs`	(MX104, MX2010, MX2020, and MX2008 Routers) Status of the Front Panel System LEDs. A dot (.) indicates the LED is not lit. An asterisk (*) indicates the LED is lit.
`Front Panel Alarm Indicators`	(MX104, MX2010, MX2020, and MX2008 Routers) Status of the Front Panel Alarm indicators. A dot (.) indicates the relay is off. An asterisk (*) indicates the relay is active.
Input Relay	Status of the configured input relay ports—0 through 3. The mode is normally open or closed. The status is clear or raised.

Table 37: show chassis craft-interface Output Fields *(Continued)*

Field Name	Field Description
Output Relay	Status of the configured output ports—0 or 1. The mode is normally open or closed. The status is clear or raised.
Front Panel FPC LEDs	(MX2010, MX2020, and MX2008 Routers) Status of the Front Panel Flexible PIC Concentrator (FPC) LEDs. A dot (.) indicates the LED is not lit. An asterisk (*) indicates the LED is lit. On MX2010 and MX2008 routers, there are 10 (0-9) FPCs LEDs. On MX2020 routers, there are 20 (0-9 and 10-19) FPCs LEDs.
CB LEDs	Status of the Control Board (CB) LEDs. A dot (.) indicates the LED is not lit. An asterisk (*) indicates the LED is lit.
PS LEDs	(MX2010, MX2020, and MX2008 Routers) Status of the Power Supply (PS) LEDs. A dot (.) indicates the LED is not lit. An asterisk (*) indicates the LED is lit. On MX2010 and MX2008 routers, there are 9 (0-8) PS LEDs. On MX2020 routers, there are 18 (0-8 and 9-17) PS LEDs.
PS Status	(MX104 Routers) Status of the Power Supply (PS). Green indicates that the power supply is functioning. Red indicates that the power supply is not functioning. A dot (.) indicates the LED is not lit. An asterix (*) indicates the LED is lit.
FAN Tray LEDs	(MX2010, MX2020, and MX2008 Routers) Status of the Fan Tray LEDs. A dot (.) indicates the LED is not lit. An asterisk (*) indicates the LED is lit.
Front Panel SFB LEDs	(MX2010, MX2020, and MX2008 Routers) Status of the Front Panel Switch Fabric Boards (SFB) LEDs. A dot (.) indicates the LED is not lit. An asterisk (*) indicates the LED is lit.
Front Panel Chassis Info	(MX2010, MX2020, and MX2008 Routers) Information about the chassis such as the chassis number and role. User can set the chassis number in multi-chassis configurations.
MCS and SFM LEDs	Status of the Miscellaneous Control Subsystem (MCS) and Switching and Forwarding Module (SFM) LEDs. A dot (.) indicates the LED is not lit. An asterisk (*) indicates the LED is lit. When neither a dot nor an asterisk is displayed, there is no board in that slot.

Table 37: show chassis craft-interface Output Fields *(Continued)*

Field Name	Field Description
SIB LEDs	Status of the Switch Interface Board (SIB) LEDs. A dot (.) indicates the LED is not lit. An asterisk (*) indicates the LED is lit.
SCG LEDs	Status of the SONET Clock Generator (SCG) LEDs. A dot (.) indicates the LED is not lit. An asterisk (*) indicates the LED is lit.

Sample Output

show chassis craft-interface (M20 Router)

```
user@host> show chassis craft-interface
Red alarm:     LED off, relay off
Yellow alarm:  LED on, relay on
Host OK LED:   On
Host fail LED: Off
FPCs     0  1  2  3
-------------------
Green  .  *  *.
Red    ....
LCD screen:
     +--------------------+
     |host                |
     |1 Alarm active      |
     |Y: FERF             |
     |                    |
     +--------------------+
```

show chassis craft-interface (M40 Router)

```
user@host> show chassis craft-interface
Front Panel LCD Display: enabled
Red alarm:     LED off, relay off
```

```
Yellow alarm:  LED off, relay off
Host OK LED:   On
Host Fail LED: Off
NICs    0  1  2  3  4  5  6  7
------------------------------
Green   *.  *.  *.  *.
Red   ........
LCD Screen:
     +--------------------+
     |host                |
     |Up: 27+18:52:37     |
     |                    |
     |52.649kpps Load     |
     +--------------------+
```

show chassis craft-interface (M120 Router)

```
user@host> show chassis craft-interface
Front Panel System LEDs:
Routing Engine    0    1
-------------------------
OK                *    .
Fail              .    .
Master            *    .

Front Panel Alarm Indicators:
-----------------------------
Red LED      *
Yellow LED   .
Major relay  *
Minor relay  .

Front Panel FPC LEDs:
FPC    0   1   2   3   4   5
---------------------------
Red    .   .   .   .   .   .
Green  .   *   .   *   *   *

CB LEDs:
 CB    0   1
--------------
```

```
Amber  .   .
Green  *   *

PS LEDs:
  PS   0   1
-----------------------
Red    .   .
Green  *   *

FEB LEDs:
  FEB  0   1   2   3   4   5
------------------------------
Red    .   .   .   .   .   .
Green  .   .   .   *   *   *
Active .   .   .   *   *   *
```

show chassis craft-interface (M160 Router)

```
user@host> show chassis craft-interface
FPM Display contents:
    +--------------------+
    |hosts               |
    |Up: 1+16:46         |
    |                    |
    |Fans OK             |
    +--------------------+

Front Panel System LEDs:
Host     0    1
------------------------
OK     .    *
Fail   .  .
Master .    *

Front Panel Alarm Indicators:
-----------------------------
Red LED    .
Yellow LED .
Major relay.
Minor relay.
```

```
Front Panel FPC LEDs:
FPC    0   1   2   3   4   5   6   7
-----------------------------------
Red  . . . . . . . .
Green  *   * . . . . . .

MCS and SFM LEDs:
MCS    0   1      SFM    0   1   2   3
--------------------------------------
Amber    .           . .
Green    .           . .
Blue       *             *   *
```

show chassis craft-interface (MX150)

```
user@host > show chassis craft-interface
               LED status for: FPC 0
               ----------------------------------
LEDs status:
    Alarm LED : Off
    System LED: Green
    Master LED: Green

Interface               STATUS LED      LINK/ACTIVITY LED
-----------------------------------------------------------
ge-0/0/0                N/A             (null)
lc-0/0/0                (null)          (null)
ge-0/0/10               N/A             (null)
gr-0/0/10               N/A             (null)
ip-0/0/10               N/A             (null)
vt-0/0/10               N/A             (null)
ge-0/0/11               N/A             (null)
```

show chassis craft-interface (MX104 Router)

```
user@host > show chassis craft-interface
Front Panel System LEDs:
Routing Engine    0    1
--------------------------------------
OK                *    .
```

```
Fail              .    .
Master            *    .

Front Panel Alarm Indicators:
-------------------------------------
Red LED      .
Yellow LED   *
Major relay  .
Minor relay  *

Input relay:
-------------------------------------
Port    Mode    Status
 0      Open    Clear
 1      Open    Clear
 2      Open    Clear
 3      Open    Clear

Output relay:
-------------------------------------
Port    Mode    Status
 0      Open    Clear
 1      Open    Clear

PS Status:
  PS   0    1
-------------------------------------
Red    .   .
Green  *   .
```

show chassis craft-interface (MX2010 Router)

```
user@host > show chassis craft-interface
Front Panel System LEDs:
Routing Engine    0    1
-------------------------
OK                *    .
Fail              .    *
Master            *    .

Front Panel Alarm Indicators:
```

```
-----------------------------
Red LED      .
Yellow LED   *
Major relay  .
Minor relay  *

Front Panel FPC LEDs:
FPC    0    1    2    3    4    5    6    7    8    9
--------------------------------------------------
Red    .    .    .    .    .    .    .    .    .    .
Green  *    *    .    .    .    .    .    .    *    *

CB LEDs:
 CB    0   1
------------
Amber  .   .
Green  *   *

PS LEDs:
  PS    0    1    2    3    4    5    6    7    8
-----------------------------------------------
Red     .    .    .    .    .    .    .    .    .
Green   .    .    .    .    *    *    *    *    *

Fan Tray LEDs:
  FT   0   1   2   3
--------------------
Red    .   .   .   .
Green  *   *   *   *

Front Panel SFB LEDs:
SFB    0   1   2   3   4   5   6   7
-----------------------------------
Red    .   .   .   .   .   .   .   .
Green  *   *   *   *   *   *   *   *

Front Panel Chassis Info:
Chassis Number    0x0
Chassis Role      S
```

show chassis craft-interface (MX2020 Router)

```
user@host > show chassis craft-interface
Front Panel System LEDs:
Routing Engine 0 1
-------------------------
OK * *
Fail . .
Master * .
Front Panel Alarm Indicators:
----------------------------
Red LED .
Yellow LED .
Major relay .
Minor relay .
Front Panel FPC LEDs:
FPC 0 1 2 3 4 5 6 7 8 9
-----------------------------------------------------
Red . . . . . .
Green * * * * * * * * * *
Front Panel FPC LEDs:
FPC 10 11 12 13 14 15 16 17 18 19
-----------------------------------------------------
Red . . . . . .
Green * * * * * * * * * *
CB LEDs:
CB 0 1
------------
Amber . .
Green * *
PS LEDs:
PS 0 1 2 3 4 5 6 7 8
-----------------------------------------------
Red . . . . . .
Green * * * * * . . * *
PS LEDs:
PS 9 10 11 12 13 14 15 16 17
-----------------------------------------------
Red . . . . . .
Green * * * * * * * * *
Fan Tray LEDs:
FT 0 1 2 3
```

```
--------------------
Red . . . .
Green * * * *
Front Panel SFB LEDs:
SFB 0 1 2 3 4 5 6 7
-----------------------------------
Red . . . . . . . .
Green * * * * * * * *
Front Panel Chassis Info:
Chassis Number 0x57
Chassis Role M
```

show chassis craft-interface (MX2008 Router)

```
user@host> show chassis craft-interface
Front Panel System LEDs:
Routing Engine    0    1
-------------------------
OK                *    *
Fail              .    .
Master            *    .

Front Panel Alarm Indicators:
-----------------------------
Red LED      .
Yellow LED   .
Major relay  .
Minor relay  .

Front Panel FPC LEDs:
FPC    0    1    2    3    4    5    6    7    8    9
-------------------------------------------------------
Red    .    .    .    .    .    .    .    .    .    .
Green  *    *    .    .    .    .    .    *    .    .

CB LEDs:
 CB    0   1
------------
Amber  .   .
Green  *   *
```

```
PS LEDs:
  PS    0    1    2    3    4    5    6    7    8
-----------------------------------------------
Red     .    .    .    .    .    .    .    .    .
Green   .    *    *    *    *    *    *    *    .

Fan Tray LEDs:
  FT   0   1
------------
Red    .   .
Green  *   *

Front Panel SFB LEDs:
SFB    0   1   2   3   4   5   6   7
-----------------------------------
Red    .   .   .   .   .   .   .   .
Green  *   *   *   *   *   *   *   *

Front Panel Chassis Info:
Chassis Number    0x36
Chassis Role      M
```

show chassis craft-interface (T4000 Router)

```
user@host> show chassis craft-interface
FPM Display contents:
    +--------------------+
    |stymphalian         |
    |2 Alarms active     |
    |R: Front Top Fan Tra|
    |Y: PEM 1 Absent     |
    +--------------------|

Front Panel System LEDs:
Routing Engine    0    1
--------------------------
OK                *    *
Fail              .    .
Master            *    .

Front Panel Alarm Indicators:
```

```
----------------------------
Red LED      *
Yellow LED   *
Major relay  *
Minor relay  *

Front Panel FPC LEDs:
FPC    0   1   2   3   4   5   6   7
-----------------------------------
Red    .   .   .   .   .   .   .   .
Green  *   .   .   *   .   *   *   .

CB LEDs:
  CB   0   1
--------------
Amber  .   .
Green  *   *
Blue   *   .

SCG LEDs:
  SCG  0   1
--------------
Amber  .   .
Green  *   *
Blue   *   .

SIB LEDs:
  SIB  0   1   2   3   4
--------------------------
Red    .   .   .   .   .
Green  *   *   *   *   *
```

show chassis craft-interface (TX Matrix Routing Matrix)

```
user@host> show chassis craft-interface
scc-re0:
--------------------------------------------------------------------------
FPM Display contents:
    +--------------------+
    |bradley             |
    |8 Alarms active     |
```

```
    |R: SIB 2 Absent     |
    |R: SIB 1 Absent     |
    +--------------------|

Front Panel System LEDs:
Routing Engine    0    1
-------------------------
OK                *  .
Fail            .  .
Master            *  .

Front Panel Alarm Indicators:
-----------------------------
Red LED      *
Yellow LED   *
Major relay  *
Minor relay  *

CB LEDs:
  CB   0   1
--------------
Amber. .
Green  * .
Blue   * .

SIB LEDs:
  SIB  0   1   2   3   4
--------------------------
Fail . . . . .
OK   . . . .   *
Active . . . .   *

lcc0-re0:
--------------------------------------------------------------------------------
FPM Display contents:
    +--------------------+
    |hybrid              |
    |5 Alarms active     |
    |R: SIB 2 Absent     |
    |R: SIB 1 Absent     |
    +--------------------|
Front Panel System LEDs:
Routing Engine    0    1
```

```
-------------------------
OK               *  .
Fail            .  .
Master           *  .

Front Panel Alarm Indicators:
-----------------------------
Red LED      *
Yellow LED   *
Major relay  *
Minor relay  *

Front Panel FPC LEDs:
FPC    0   1   2   3   4   5   6   7
-----------------------------------
Red  . . . . . . . .
Green.   *   * . . . . .

CB LEDs:
  CB   0   1
--------------
Amber. .
Green  * .
Blue   * .

SCG LEDs:
  SCG  0   1
--------------
Amber. .
Green  * .
Blue   * .

SIB LEDs:
  SIB  0   1   2   3   4
-------------------------
Red  . . . . .
Green. . . .   *

lcc2-re0:
--------------------------------------------------------------------------------
FPM Display contents:
    +--------------------+
    |prius               |
```

```
    |5 Alarms active     |
    |R: SIB 2 Absent     |
    |R: SIB 1 Absent     |
    +--------------------|

Front Panel System LEDs:
Routing Engine    0    1
-------------------------
OK                *  .
Fail            .  .
Master            *  .

Front Panel Alarm Indicators:
-----------------------------
Red LED      *
Yellow LED   *
Major relay  *
Minor relay  *

Front Panel FPC LEDs:
FPC    0   1   2   3   4   5   6   7
-----------------------------------
Red  . . . . . . . .
Green  *   *   * . . . . .

CB LEDs:
  CB   0   1
--------------
Amber. .
Green  * .
Blue   * .

SCG LEDs:
  SCG  0   1
--------------
Amber. .
Green  * .
Blue   * .

SIB LEDs:
  SIB  0   1   2   3   4
-------------------------
```

```
Red   . . . . .
Green. . . .   *
```

show chassis craft-interface (TX Matrix Plus Routing Matrix)

```
user@host> show chassis craft-interface
sfc0-re0:
--------------------------------------------------------------------------
FPM Display Contents:
    +--------------------+
    |noname              |
    |12 Alarms active    |
    |R: SIB F13 12 Absent|
    |R: SIB F13 9 Absent |
    +--------------------+

SFC Front Panel Switch Settings:
SFC Chassis Number : 00
Config Size        : 1

Front Panel System LEDs:
Routing Engine    0    1
-------------------------
OK                *    *
Fail              .    .
Master            *    .

Front Panel Alarm Indicators:
-----------------------------
Red LED      *
Yellow LED   *
Major relay  *
Minor relay  *

Front Panel F13 SIB LEDs:
SIB    0   1   2   3   4   5   6   7   8   9  10  11  12  13  14  15
-------------------------------------------------------------------
Fail   .   .   .   .   .   .   .   .   .   .   .   .   .   .   .   .
OK     *   .   .   *   .   .   *   .   *   .   .   *   .   .   .   .
Active .   .   .   *   .   .   *   .   *   .   .   *   .   .   .   .
```

```
PS LEDs:
  PS   0   1
------------
Red    .   *
Green  *   .

Fan Tray LEDs:
  FT   0   1   2   3   4   5
---------------------------
Red    .   .   .   .   *   *
Green  *   *   *   *   .   .

CB LEDs:
  CB   0   1
--------------
Amber  .   .
Green  *   *
Blue   *   .

lcc0-re0:
------------------------------------------------------------------------------
FPM Display contents:
    +--------------------+
    |noname1              |
    |1 Alarm active      |
    |R: PEM 1 Not OK     |
    |                    |
    +--------------------|

Front Panel System LEDs:
Routing Engine    0    1
--------------------------
OK                *    *
Fail              .    .
Master            *    .

Front Panel Alarm Indicators:
-----------------------------
Red LED      *
Yellow LED   .
Major relay  *
Minor relay  .
```

```
Front Panel FPC LEDs:
FPC    0   1   2   3   4   5   6   7
-----------------------------------
Red    .   .   .   .   .   .   .   .
Green  .   *   .   *   *   .   .   *

CB LEDs:
  CB   0   1
--------------
Amber  .   .
Green  *   *
Blue   *   .

SCG LEDs:
  SCG  0   1
--------------
Amber  .   .
Green  *   *
Blue   *   .

SIB LEDs:
  SIB  0   1   2   3   4
-------------------------
Red    .   .   .   .   .
Green  *   *   *   *   *

lcc1-re0:
--------------------------------------------------------------------------------
FPM Display contents:
    +--------------------+
    |noname2             |
    |2 Alarms active     |
    |R: FPC 0 PIC 0 Failu|
    |R: PEM 1 Not OK     |
    +--------------------|

Front Panel System LEDs:
Routing Engine    0    1
-------------------------
OK                *    *
Fail              .    .
Master            *    .
```

```
Front Panel Alarm Indicators:
-----------------------------
Red LED      *
Yellow LED   .
Major relay  *
Minor relay  .

Front Panel FPC LEDs:
FPC    0   1   2   3   4   5   6   7
-----------------------------------
Red    .   .   .   .   .   .   .   .
Green  *   *   *   .   .   *   .   .

CB LEDs:
  CB   0   1
--------------
Amber  .   .
Green  *   *
Blue   *   .

SCG LEDs:
  SCG  0   1
--------------
Amber  .   .
Green  *   *
Blue   *   .

SIB LEDs:
  SIB  0   1   2   3   4
--------------------------
Red    .   .   .   .   .
Green  *   *   *   *   *
```

show chassis craft-interface (TX Matrix Plus router with 3D SIBs)

```
user@host> show chassis craft-interface
sfc0-re0:
--------------------------------------------------------------------------
FPM Display Contents:
    +--------------------+
    |noname              |
```

```
    |48 Alarms active    |
    |R: LCC 2 Major Error|
    |R: LCC 0 Major Error|
    +--------------------+

SFC Front Panel Switch Settings:
SFC Chassis Number : 00
Config Size        : 3

Front Panel System LEDs:
Routing Engine    0    1
-------------------------
OK                *    *
Fail              .    .
Master            *    .

Front Panel Alarm Indicators:
-----------------------------
Red LED      *
Yellow LED   *
Major relay  *
Minor relay  *

Front Panel F13 SIB LEDs:
SIB    0   1   2   3   4   5   6   7   8   9  10  11  12  13  14  15
-------------------------------------------------------------------
Fail   .   .   .   .   .   .   .   .   .   .   .   .   .   .   .   .
OK     *   .   .   *   .   .   *   .   .   .   .   .   .   .   .   .
Active *   .   .   *   .   .   *   .   .   .   .   .   .   .   .   .

PS LEDs:
  PS   0   1
------------
Red    *   .
Green  .   *

Fan Tray LEDs:
  FT   0   1   2   3   4   5
----------------------------
Red    .   .   .   .   .   *
Green  *   *   *   *   *   .

CB LEDs:
```

```
  CB   0   1
--------------
Amber  .   .
Green  *   *
Blue   *   .

lcc0-re0:
--------------------------------------------------------------------------------
FPM Display contents:
    +--------------------+
    |noname1             |
    |14 Alarms active    |
    |R: PEM 1 Not OK     |
    |R: FPC 7 misconfig  |
    +--------------------|

Front Panel System LEDs:
Routing Engine    0    1
-------------------------
OK                *    *
Fail              .    .
Master            *    .

Front Panel Alarm Indicators:
-----------------------------
Red LED      *
Yellow LED   *
Major relay  *
Minor relay  *

Front Panel FPC LEDs:
FPC    0   1   2   3   4   5   6   7
-----------------------------------
Red    .   .   .   .   .   .   .   .
Green  .   .   .   .   *   .   .   .

CB LEDs:
  CB   0   1
--------------
Amber  .   .
Green  *   *
Blue   *   .
```

```
SCG LEDs:
  SCG  0   1
--------------
Amber  .   .
Green  *   *
Blue   *   .

SIB LEDs:
  SIB  0   1   2   3   4
-------------------------
Red    .   .   .   .   .
Green  *   *   *   .   .
```

show chassis craft-interface (ACX2000 Universal Metro Router)

```
user@host> show chassis craft-interface
Front Panel System LEDs:
Routing Engine
-----------------
OK                *
Fail              .

Front Panel Alarm Indicators:
-----------------------------
Red LED      .
Yellow LED   .
Major relay  .
Minor relay  .

Input relay:
------------
Port    Mode    Status
 0      Open    Clear
 1      Open    Clear
 2      Open    Clear
 3      Open    Clear

Output relay:
-------------
Port    Mode    Status
 0      Open    Clear
```

```
 1      Open    Clear

PS Status:
  PS   0    1
---------------
Red    .   .
Green  *   *
```

show chassis craft-interface (ACX500 Router)

```
user@host> show chassis craft-interface

Front Panel System LEDs:
Routing Engine
------------------
OK                *
Fail              .

Front Panel Alarm Indicators:
-----------------------------
Red LED      .
Yellow LED   .
Major relay  .
Minor relay  .

Input relay:
------------
Port    Mode    Status
 0      Open    Clear
 1      Open    Clear
 2      Open    Clear
 3      Open    Clear

Output relay:
-------------
Port    Mode    Status
 0      Open    Clear
 1      Open    Clear

PS Status:
  PS   0    1
```

```
--------------
Red     .    .
Green   *    *
```

Release Information

Command introduced before Junos OS Release 7.4.

sfc option for the TX Matrix Plus router introduced in Junos OS Release 9.6.

RELATED DOCUMENTATION

clear chassis display message | 392

set chassis display message | 468

show chassis environment

IN THIS SECTION

- Syntax (T320, T640, T1600, and T4000 Routers) | 544
- Syntax (TX Matrix Routers) | 544
- Syntax (TX Matrix Plus Routers) | 545
- Syntax (MX Series Routers) | 545
- Syntax (MX104 Universal Routing Platforms) | 545
- Syntax (MX150 Router Appliance) | 546
- Syntax (MX2010, MX2020, and MX2008 Universal Routing Platforms) | 546
- Syntax (MX10003 and MX204 Universal Routing Platforms) | 546
- Syntax (EX8200 Switches) | 547
- Syntax (EX Series Switches except EX8200) | 547
- Syntax (QFX Series) | 547
- Syntax (OCX Series) | 548

- Syntax (PTX Series Packet Transport Routers) | **548**
- Syntax (ACX Series Universal Metro Routers, ACX7509) | **548**
- Syntax (ACX5048 and ACX5096 Routers) | **548**
- Syntax (ACX500 Routers) | **549**
- Syntax (Junos OS Evolved) | **549**
- Description | **549**
- Options | **550**
- Required Privilege Level | **553**
- Output Fields | **553**
- Sample Output | **556**
- show chassis environment (ACX7509) | **661**
- Release Information | **664**

Syntax (T320, T640, T1600, and T4000 Routers)

```
show chassis environment
<cb cb-slot-number>
<feb feb-slot-number>
<fpc fpc-slot-number>
<fpm>
<pem pem-slot-number>
<routing-engine re-slot-number>
<scg scg-slot-number>
<sib sib-slot-number>
```

Syntax (TX Matrix Routers)

```
show chassis environment
<lcc number   | scc>
```

Syntax (TX Matrix Plus Routers)

```
show chassis environment
<cb cb-slot-number>
<cip cip-slot-number>
<fpc fpc-slot-number>
<fpm>
<lcc number>
<pem pem-slot-number>
<routing-engine re-slot-number>
<scg scg-slot-number>
< sfc number>
<sib sib-slot-number>
```

Syntax (MX Series Routers)

```
show chassis environment
<all-members>
<local>
<member member-id>
```

Syntax (MX104 Universal Routing Platforms)

```
show chassis environment
<cb>
<pem pem-slot-number>
<routing-engine re-slot-number>
```

Syntax (MX150 Router Appliance)

```
show chassis environment
<pem pem-slot-number>
<routing-engine re-slot-number>
```

Syntax (MX2010, MX2020, and MX2008 Universal Routing Platforms)

```
show chassis environment
<adc adc-slot-number>
<all-members>
<cb cb-slot-number>
<fan fantray-slot-number>
<fpc fpc-slot-number>
<fpm>
<local>
<member member-id>
<monitored>
<psm psm-slot-number>
<routing-engine re-slot-number>
<sfb sfb-slot-number>
<satellite [fpc-slot slot-id |device-alias  alias-name]>
```

Syntax (MX10003 and MX204 Universal Routing Platforms)

```
show chassis environment
<cb cb-slot-number>
<fpc fpc-slot-number>
<pem pem-slot-number>
<routing-engine re-slot-number>
```

Syntax (EX8200 Switches)

```
show chassis environment
<all-members>
<cb cb-slot-number>
<fpc fpc-slot-number>
<local>
<member member-id>
<psu psu-slot-number>
<routing-engine re-slot-number>
```

Syntax (EX Series Switches except EX8200)

```
show chassis environment
<all-members>
<fpc fpc-slot-number>
<local>
<member member-id>
<power-supply-unit>
<routing-engine>
<satellite [fpc-slot slot-id |device-alias  alias-name]>
```

Syntax (QFX Series)

```
show chassis environment
<cb slot-number <interconnect-device name>>
<fpc slot-number <interconnect-device name>>
<interconnect-device name <slot-number>
<node-device name>
<pem slot-number (interconnect-device name slot-number) | (node-device name)>
<routing-engine name <interconnect-device name slot-number>>
```

Syntax (OCX Series)

```
show chassis environment
```

Syntax (PTX Series Packet Transport Routers)

```
show chassis environment
<cb cb-slot-number>
<ccg ccg-slot-number >
<fpc fpc-slot-number>
<fpm>
<monitored>
<pdu pdu-slot-number>
<routing-engine re-slot-number>
<sib sib-slot-number>
```

Syntax (ACX Series Universal Metro Routers, ACX7509)

```
show chassis environment
<cb cb-slot-number>
<feb feb-slot-number>
<pem pem-slot-number>
<routing-engine re-slot-number>
```

Syntax (ACX5048 and ACX5096 Routers)

```
show chassis environment
<fpc slot-number>
<pem>
<routing-engine>
```

Syntax (ACX500 Routers)

```
show chassis environment
<cb cb-slot-number>
<routing-engine re-slot-number>
```

Syntax (Junos OS Evolved)

```
show chassis environment
<cb cb-slot-number>
<fan fan-slot-number>
<fpc fpc-slot-number>
<fpm>
<monitored>
<psm psm-slot-number>
<routing-engine routing-engine-slot-number>
<sib sib-slot-number>
```

Description

Display environmental information about the router or switch chassis, including the temperature and information about the fans, power supplies, and Routing Engine.

In addition, on ACX4000 routers, display temperature information about the different channels of a Modular Interface Card (MIC). The number of channels displayed depends on the type of MIC installed.

Starting with Junos OS Release 14.1, the `show chassis environment cb` *cb-slot-number* | `ccg` *ccg-slot-number* | `fpc` *fpc-slot-number* | `fpm` | `monitored` | `pdu` *pdu-slot-number* | `routing-engine` *re-slot-number* | `sib` *sib-slot-number* operational mode command output displays environmental information for the new DC power supply module (PSM) and power distribution unit (PDU) that are added to provide power to the high-density FPC (FPC2-PTX-P1A) and other components in a PTX5000 Packet Transport Router.

Options

none — Display environmental information about the router or switch chassis. On a TX Matrix router, display environmental information about the TX Matrix router and its attached T640 routers. On a TX Matrix Plus router, display environmental information about the TX Matrix Plus router and its attached routers.

all-members — (MX Series routers and EX Series switches only) (Optional) Display chassis environmental information for all the members of the Virtual Chassis configuration.

adc *adc-slot-number* — (MX2010, MX2020, and MX2008 routers only) (Optional) Display chassis environmental information for the adapter cards. For MX2020 routers, replace *adc-slot-number* with a value from 0 through 19. For MX2010 and MX2008 routers, replace *adc-slot-number* with a value from 0 through 9.

cb *cb-slot-number* — (ACX Series Universal Metro Routers, EX Series switches, M120, M320, and M40e routers, MX Series routers, MX2020 routers, MX2010 routers, MX2008 routers, PTX Series Packet Transport Routers, QFX Series, and T Series routers, and TX Matrix Plus routers only) (Optional) Display chassis environmental information for the Control Board. On devices other than EX Series switches, replace *cb-slot* with 0 or 1.

feb *feb-slot-number* — (ACX Series Universal Metro Routers, ACX7509 routers only) (Optional) Display chassis environmental information for the FEB.

cip *cip-slot-number* — (TX Matrix Plus routers only) (Optional) Display chassis environmental information for the Connection Interface Panel (CIP). Replace the *cip-slot-number* variable with a value of 0 or 1.

cb interconnect-device *name* — (QFabric systems only) (Optional) Display chassis environmental information for the Control Board on an Interconnect device.

ccg *ccg-slot-number* — (PTX Series only) (Optional) Display chassis environmental information for the Centralized Clock Generator. Replace *cb-slot* with a value of 0 or 1.

fan *fantray-slot-number* — (MX2010, MX2020, and MX2008 routers only) (Optional) Display chassis environmental information for the fan trays. Replace *fantray-slot-number* with a value from 0 through 3.

fpc *fpc-slot* — (EX Series switches, M120, M320, and M40e routers, MX Series routers, MX2010 routers, MX2020 routers, MX2008 routers, PTX Series Packet Transport Routers, QFX Series, QFX3500 switches, QFabric systems, T Series routers, and TX Matrix

Plus routers) (Optional) Display chassis environmental information for a specified Flexible PIC Concentrator. For MX2010 and MX2008 routers, replace *fpc-slot* with a value from 0 through 9. For MX2020 routers, replace *fpc-slot* with a value from 0 through 19. For information about FPC numbering, see "show chassis environment fpc" on page 730. On a QFabric system, display chassis environmental information for a specified Flexible PIC Concentrator on an Interconnect device. On an EX Series switch, display chassis environmental information for a specified Flexible PIC Concentrator; see the hardware documentation for your switch for information on FPC numbering. On a TX Matrix Plus router with 3D SIBs replace *fpc-slot* with a value from 0 through 63.

fpm (M120, M320, and M40e routers, MX2010 routers, MX2020 routers, MX2008 routers, PTX Series, Packet Transport Routers, T Series routers, and TX Matrix Plus routers only) (Optional) Display chassis environmental information for the craft interface (FPM).

interconnect-device *name* (QFabric systems only) (Optional) Display chassis environmental information for the Interconnect device.

lcc *number* (TX Matrix routers and TX Matrix Plus routers only) (Optional) Line-card chassis number.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local (MX Series routers and EX Series switches only) (Optional) Display chassis environmental information for the local Virtual Chassis member.

member *member-id* (MX Series routers and EX Series switches only) (Optional) Display chassis environmental information for the specified member of the Virtual Chassis configuration. On MX Series routers, replace *member-id* with a value of 0 or 1. For EX Series switches, see *member* for member ID values.

monitored	(MX2020 routers and PTX Series Packet Transport Routers only) (Optional) Display chassis environmental information for monitored temperatures only. Temperatures that are not included in temperature alarm computations are not displayed.
node-device *name*	(QFabric systems only) (Optional) Display chassis environmental information for the Node device.
pdu *pdu-slot-number*	(PTX Series only) (Optional) Display chassis environmental information for the specified power distribution unit.
pem	(QFX3500 switches and QFabric systems only) (Optional) Display chassis environmental information for the Power Entry Module on the specified Interconnect device or Node device.
pem *pem-slot-number*	(ACX Series Universal Metro Routers, M120, M320, and M40e routers, MX Series routers, MX104 routers, QFX Series, and T Series routers only) (Optional) Display chassis environmental information for the Power Entry Module on the specified Power Entry Module. For information about the options, see "show chassis environment pem" on page 868.
psm *psm-slot-number*	(MX2010, MX2020, and MX2008 routers only) (Optional) Display chassis environmental information for the power supply module. For MX2020 routers, replace *psm-slot-number* with a value from 0 through 17. For MX2010 and MX2008 routers, replace *psm-slot-number* with a value from 0 through 8.
psu *psu-slot-number*	(EX Series switches only) (Optional) Display chassis environmental information for a specified power supply.
routing-engine	(QFX3500 switches and QFabric systems only) (Optional) Display chassis environmental information for the Routing Engine on the specified Interconnect device. For QFX5700 with Junos OS Evolved, details about CPU and memory utilization are also displayed for RCB slot 0 and slot 1.
routing-engine *re-slot-number*	(Optional) Display chassis environmental information for the specified Routing Engine. For information about the options, see "show chassis environment routing-engine" on page 905.
satellite [**fpc-slot** *slot-id* | **device-alias** *alias-name*]	(Junos Fusion only)(Optional) Display chassis environmental information for the specified satellite device in a Junos Fusion, or for all satellite devices in the Junos Fusion if no satellite devices are specified.
scg	(T Series routers only) (Optional) Display chassis environmental information about the SONET Clock Generator.

scc	(TX Matrix routers only) (Optional) Display chassis environmental information about the TX Matrix router (switch-card chassis).
sfb *sfb-slot-number*	(MX2010, MX2020, and MX2008 routers only) (Optional) Display chassis environmental information for the switch fabric board. Replace *sfb-slot-number* with a value from `0` through `7`.
sfc *number*	(TX Matrix Plus routers only) (Optional) Display chassis environmental information about the respective TX Matrix Plus router (switch-fabric chassis). Replace *number* variable with `0`.
sib *sib-slot-number*	(M320 routers, PTX Series Packet Transport Routers, and T Series routers only) (Optional) Display chassis environmental information about the specified switch interface board. For information about the options, see show chassis environment sib.

Required Privilege Level

view

Output Fields

Table 38 on page 554 lists the output fields for the `show chassis environment` command. Output fields are listed in the approximate order in which they appear.

Table 38: show chassis environment Output Fields

Field Name	Field Description

`Class`	Information about the category or class of chassis component:
	• `Power`: Power information:
	  • (M5, M10, M20, and M40 routers and EX Series switches only) Power supply status: `OK`, `Testing`, (during initial power-on), `Failed`, or `Absent`.
	  • (M7i, M10i, M40e, M120, M160, M320, and T Series routers and EX Series switches only) Power Entry Modules status: `OK`, `Testing`, (during initial power-on), `Check`, `Failed`, or `Absent`.
	  • (PTX Series only) Power information is reported in PDU or PSM combinations. The status is: `OK`, `Testing`, (during initial power-on), `Check`, `Failed`, or `Absent`.
	• `Temp`: Temperature of air flowing through the chassis in degrees Celsius (C) and Fahrenheit (F).
	  • On PTX Series Packet Transport Routers and MX2010, MX2020, and MX2008 Routers, multiple cooling zones are supported. FRU temperatures in each zone are coordinated with the fan speed of fan trays in those zones.
	  • EX2200 switches have a side-to-rear cooling system. The `Local Intake` temperature is measured by the sensor on the right side of the chassis, and the `Remote Intake` temperature is measured by the sensor on the left side of the chassis.
	• `Pic`: On ACX4000 routers, multiple temperature channels on a MIC. The status is: `OK` and the `Measurement` is in degrees Celsius (C) and Fahrenheit (F).
	• `Fan`: Fan status: `OK`, `Testing` (during initial power-on), `Failed`, or `Absent`.
	On PTX Series Packet Transport Routers and MX2010, MX2020, and MX2008 Routers, multiple fan trays are supported. Fan status is reported in Fan Tray or Fan combinations. `Measurement` indicates actual fan RPM (PTX and MX2010, MX2020, and MX2008 Routers only).
	• `Misc`: Information about other components of the chassis.
	  • On some routers, this field indicates the status of one or more additional components.

Table 38: show chassis environment Output Fields *(Continued)*

Field Name	Field Description
	• On the M40e, M160, and M320 router, `Misc` includes `CIP` (Connector Interface Panel). `OK` indicates that the CIP is present. `Absent` indicates that the CIP is not present. • On T Series routers, `Misc` includes `CIP` and `SPMB` (Switch Processor Mezzanine Board). `OK` indicates that the `CIP` or `SPMB` is present. `Absent` indicates that the `CIP` or `SPMB` is not present. • On PTX Series Packet Transport Routers, `Misc` includes the `SPMB` (Switch Processor Mezzanine Board). The SPMB is located on the control boards. `OK` indicates that the control board is present. `Absent` indicates that the control board is not present.
`Item`	(MX2010, MX2020, and MX2008 Routers) Information about the chassis component: Routing Engines, Controls Boards (CBs), Switch Fabric Boards (SFBs), PICs, Flexible PIC Concentrators (FPCs), and Adapter Cards (ADCs). (MX104 Routers) Information about the chassis components: Routing Engines, Control Board (CB), Power Entry Module (PEM), and Compact Forwarding Engine Board (AFEB). (QFabric Systems) Information about the chassis component: Control Boards, Routing Engines, Flexible PIC Concentrators (FPCs), and Power Entry Modules (PEMs), Node Devices, and Interconnect Devices. (QFX Series) Information about the chassis component: Flexible PIC Concentrators (FPCs), and Power Entry Modules (PEMs).

Table 38: show chassis environment Output Fields *(Continued)*

Field Name	Field Description
`Status`	(MX104, MX2010, MX2020, and MX2008 Routers) Status of the specified chassis component. For example, if the Class is Fan, the fan status can be: • `OK`: The fans are operational. • `Testing`: The fans are being tested during initial power-on. • `Failed`: The fans have failed or the fans are not spinning. • `Absent`: The fan tray is not installed. If the Class is Power, the power supply status can be: • `OK`: The power component is operational. • `Testing`: The power component is being tested during initial power-on. • `Check`: There is insufficient power---that is, fewer than the minimum required feeds are connected. • `Failed`: The inputs leads have failed. • `Absent`: The power component is not installed.
`Measurement`	(MX104, MX2010, MX2020, and MX2008 Routers) Dependant on the Class. For example, if the Class is Temp, indicates the temperature in degree Celsius and degrees Fahrenheit. If the Class is Fan, indicates actual fan RPM.

Sample Output

show chassis environment (M5 Router)

```
user@host> show chassis environment
Class Item                  Status     Measurement
Power Power Supply A        OK
      Power Supply B        Absent
Temp  FPC 0                 OK         30 degrees C / 86 degrees F
      FEB                   OK         33 degrees C / 91 degrees F
```

```
      PS Intake              OK         27 degrees C / 80 degrees F
      PS Exhaust             OK         27 degrees C / 80 degrees F
      Routing Engine         OK         34 degrees C / 93 degrees F
Fans  Left Fan 1             OK         Spinning at normal speed
      Left Fan 2             OK         Spinning at normal speed
      Left Fan 3             OK         Spinning at normal speed
      Left Fan 4             OK         Spinning at normal speed
Misc  Craft Interface        OK
```

show chassis environment (M7i Router)

```
user@host> show chassis environment
Class Item                   Status     Measurement
Power Power Supply 0         OK
      Power Supply 1         Absent
Temp  Intake                 OK         22 degrees C / 71 degrees F
      FPC 0                  OK         23 degrees C / 73 degrees F
      Power Supplies         OK         23 degrees C / 73 degrees F
      CFEB Intake            OK         24 degrees C / 75 degrees F
      CFEB Exhaust           OK         29 degrees C / 84 degrees F
      Routing Engine         OK         26 degrees C / 78 degrees F
Fans  Fan 1                  OK         Spinning at normal speed
      Fan 2                  OK         Spinning at normal speed
      Fan 3                  OK         Spinning at normal speed
      Fan 4                  OK         Spinning at normal speed
```

show chassis environment (M10 Router)

```
user@host> show chassis environment
Class Item                   Status     Measurement
Power Power Supply A         OK
      Power Supply B         Failed
Temp  FPC 0                  OK         36 degrees C / 96 degrees F
      FPC 1                  OK         35 degrees C / 95 degrees F
      FEB                    OK         34 degrees C / 93 degrees F
      PS Intake              OK         31 degrees C / 87 degrees F
      PS Exhaust             OK         34 degrees C / 93 degrees F
      Routing Engine         OK         35 degrees C / 95 degrees F
```

```
Fans  Left Fan 1             OK         Spinning at normal speed
      Left Fan 2             OK         Spinning at normal speed
      Left Fan 3             OK         Spinning at normal speed
      Left Fan 4             OK         Spinning at normal speed
Misc  Craft Interface        OK
```

show chassis environment (M10i Router)

```
user@host> show chassis environment
Class Item                   Status     Measurement
Power Power Supply 0         OK
      Power Supply 1         OK
      Power Supply 2         Absent
      Power Supply 3         Absent
Temp  Intake                 OK         26 degrees C / 78 degrees F
      FPC 0                  OK         27 degrees C / 80 degrees F
      FPC 1                  OK         28 degrees C / 82 degrees F
      Lower Power Supplies   OK         29 degrees C / 84 degrees F
      Upper Power Supplies   OK         28 degrees C / 82 degrees F
      CFEB Intake            OK         27 degrees C / 80 degrees F
      CFEB Exhaust           OK         36 degrees C / 96 degrees F
      Routing Engine 0       OK         31 degrees C / 87 degrees F
      Routing Engine 1       OK         27 degrees C / 80 degrees F
Fans  Fan Tray 0 Fan 1       OK         Spinning at normal speed
      Fan Tray 0 Fan 2       OK         Spinning at normal speed
      Fan Tray 0 Fan 3       OK         Spinning at normal speed
      Fan Tray 0 Fan 4       OK         Spinning at normal speed
      Fan Tray 0 Fan 5       OK         Spinning at normal speed
      Fan Tray 0 Fan 6       OK         Spinning at normal speed
      Fan Tray 0 Fan 7       OK         Spinning at normal speed
      Fan Tray 0 Fan 8       OK         Spinning at normal speed
      Fan Tray 1 Fan 1       Absent
      Fan Tray 1 Fan 2       Absent
      Fan Tray 1 Fan 3       Absent
      Fan Tray 1 Fan 4       Absent
      Fan Tray 1 Fan 5       Absent
      Fan Tray 1 Fan 6       Absent
      Fan Tray 1 Fan 7       Absent
```

```
      Fan Tray 1 Fan 8       Absent
```

show chassis environment (M20 Router)

```
user@host> show chassis environment
Class Item                   Status     Measurement
Power Power Supply A         OK
      Power Supply B         Absent
Temp  FPC 0                  OK         28 degrees C / 82 degrees F
      FPC 1                  OK         27 degrees C / 80 degrees F
      Power Supply A         OK         22 degrees C / 71 degrees F
      Power Supply B         Absent
      SSB 0                  OK         30 degrees C / 86 degrees F
      Backplane              OK         22 degrees C / 71 degrees F
      Routing Engine 0       OK         26 degrees C / 78 degrees F
      Routing Engine 1       Testing
Fans  Rear Fan               OK         Spinning at normal speed
      Front Upper Fan        OK         Spinning at normal speed
      Front Middle Fan       OK         Spinning at normal speed
      Front Bottom Fan       OK         Spinning at normal speed
Misc  Craft Interface        OK
```

show chassis environment (M40 Router)

```
user@host> show chassis environment
Class Item                   Status     Measurement
Power Power Supply A         OK
      Power Supply B         Absent
Temp  FPC 3                  OK         24 degrees C / 75 degrees F
      FPC 6                  OK         26 degrees C / 78 degrees F
      SCB                    OK         26 degrees C / 78 degrees F
      Backplane @ A1         OK         28 degrees C / 82 degrees F
      Backplane @ A2         OK         23 degrees C / 73 degrees F
      Routing Engine         OK         26 degrees C / 78 degrees F
Fans  Top Impeller           OK         Spinning at normal speed
      Bottom impeller        OK         Spinning at normal speed
      Rear Left Fan          OK         Spinning at normal speed
      Rear Center Fan        OK         Spinning at normal speed
```

```
      Rear Right Fan          OK          Spinning at normal speed
Misc  Craft Interface         OK
```

show chassis environment (M40e Router)

```
user@host> show chassis environment
Class Item                    Status      Measurement
Power PEM 0                   OK
      PEM 1                   Absent
Temp  PCG 0                   OK          44 degrees C / 111 degrees F
      PCG 1                   OK          47 degrees C / 116 degrees F
      Routing Engine 0        OK          40 degrees C / 104 degrees F
      Routing Engine 1        OK          37 degrees C / 98 degrees F
      MCS 0                   OK          45 degrees C / 113 degrees F
      MCS 1                   OK          42 degrees C / 107 degrees F
      SFM 0 SPP               OK          40 degrees C / 104 degrees F
      SFM 0 SPR               OK          44 degrees C / 111 degrees F
      SFM 1 SPP               OK          43 degrees C / 109 degrees F
      SFM 1 SPR               OK          45 degrees C / 113 degrees F
      FPC 0                   OK          38 degrees C / 100 degrees F
      FPC 1                   OK          40 degrees C / 104 degrees F
      FPC 2                   OK          38 degrees C / 100 degrees F
      FPC 4                   OK          34 degrees C / 93 degrees F
      FPC 5                   OK          43 degrees C / 109 degrees F
      FPC 6                   OK          41 degrees C / 105 degrees F
      FPC 7                   OK          43 degrees C / 109 degrees F
      FPM CMB                 OK          28 degrees C / 82 degrees F
      FPM Display             OK          28 degrees C / 82 degrees F
Fans  Rear Bottom Blower      OK          Spinning at normal speed
      Rear Top Blower         OK          Spinning at normal speed
      Front Top Blower        OK          Spinning at normal speed
      Fan Tray Rear Left      OK          Spinning at normal speed
      Fan Tray Rear Right     OK          Spinning at normal speed
      Fan Tray Front Left     OK          Spinning at normal speed
      Fan Tray Front Right    OK          Spinning at normal speed
Misc  CIP                     OK
```

show chassis environment (M120 Router)

```
user@host> show chassis environment
Class Item                           Status     Measurement
Temp  PEM 0                          OK
      PEM 1                          OK
      Routing Engine 0               OK         43 degrees C / 109 degrees F
      Routing Engine 1               OK         44 degrees C / 111 degrees F
      CB 0 Intake                    OK         33 degrees C / 91 degrees F
      CB 0 Exhaust A                 OK         36 degrees C / 96 degrees F
      CB 0 Exhaust B                 OK         35 degrees C / 95 degrees F
      CB 1 Intake                    OK         34 degrees C / 93 degrees F
      CB 1 Exhaust A                 OK         38 degrees C / 100 degrees F
      CB 1 Exhaust B                 OK         35 degrees C / 95 degrees F
      FEB 3 Intake                   OK         35 degrees C / 95 degrees F
      FEB 3 Exhaust A                OK         37 degrees C / 98 degrees F
      FEB 3 Exhaust B                OK         39 degrees C / 102 degrees F
      FEB 4 Intake                   OK         33 degrees C / 91 degrees F
      FEB 4 Exhaust A                OK         39 degrees C / 102 degrees F
      FEB 4 Exhaust B                OK         36 degrees C / 96 degrees F
      FPC 2 Exhaust A                OK         32 degrees C / 89 degrees F
      FPC 2 Exhaust B                OK         31 degrees C / 87 degrees F
      FPC 3 Exhaust A                OK         32 degrees C / 89 degrees F
      FPC 3 Exhaust B                OK         33 degrees C / 91 degrees F
      FPC 4 Exhaust A                OK         32 degrees C / 89 degrees F
      FPC 4 Exhaust B                OK         30 degrees C / 86 degrees F
Fans  Front Top Tray Fan 1           OK         Spinning at normal speed
      Front Top Tray Fan 2           OK         Spinning at normal speed
      Front Top Tray Fan 3           OK         Spinning at normal speed
      Front Top Tray Fan 4           OK         Spinning at normal speed
      Front Top Tray Fan 5           OK         Spinning at normal speed
      Front Top Tray Fan 6           OK         Spinning at normal speed
      Front Top Tray Fan 7           OK         Spinning at normal speed
      Front Top Tray Fan 8           OK         Spinning at normal speed
      Front Bottom Tray Fan 1        OK         Spinning at normal speed
      Front Bottom Tray Fan 2        OK         Spinning at normal speed
      Front Bottom Tray Fan 3        OK         Spinning at normal speed
      Front Bottom Tray Fan 4        OK         Spinning at normal speed
      Front Bottom Tray Fan 5        OK         Spinning at normal speed
      Front Bottom Tray Fan 6        OK         Spinning at normal speed
      Front Bottom Tray Fan 7        OK         Spinning at normal speed
      Front Bottom Tray Fan 8        OK         Spinning at normal speed
```

```
      Rear Top Tray Fan 1            OK         Spinning at normal speed
      Rear Top Tray Fan 2            OK         Spinning at normal speed
      Rear Top Tray Fan 3            OK         Spinning at normal speed
      Rear Top Tray Fan 4            OK         Spinning at normal speed
      Rear Top Tray Fan 5            OK         Spinning at normal speed
      Rear Top Tray Fan 6            OK         Spinning at normal speed
      Rear Top Tray Fan 7            OK         Spinning at normal speed
      Rear Top Tray Fan 8            OK         Spinning at normal speed
      Rear Bottom Tray Fan 1         OK         Spinning at normal speed
      Rear Bottom Tray Fan 2         OK         Spinning at normal speed
      Rear Bottom Tray Fan 3         OK         Spinning at normal speed
      Rear Bottom Tray Fan 4         OK         Spinning at normal speed
      Rear Bottom Tray Fan 5         OK         Spinning at normal speed
      Rear Bottom Tray Fan 6         OK         Spinning at normal speed
      Rear Bottom Tray Fan 7         OK         Spinning at normal speed
      Rear Bottom Tray Fan 8         OK         Spinning at normal speed
```

show chassis environment (M160 Router)

```
user@host> show chassis environment
Class Item                   Status     Measurement
Power PEM 0                  OK           PEM 1                   Absent
Temp  PCG 0                  OK         45 degrees C / 113 degrees F
      PCG 1                  Absent
      Routing Engine 0       OK         35 degrees C / 95 degrees F
      Routing Engine 1       Absent
      MCS 0                  OK         50 degrees C / 122 degrees F
      SFM 0 SPP              OK         47 degrees C / 116 degrees F
      SFM 0 SPR              OK         49 degrees C / 120 degrees F
      SFM 1 SPP              OK         50 degrees C / 122 degrees F
      SFM 1 SPR              OK         50 degrees C / 122 degrees F
      SFM 2 SPP              OK         51 degrees C / 123 degrees F
      SFM 2 SPR              OK         52 degrees C / 125 degrees F
      SFM 3 SPP              OK         52 degrees C / 125 degrees F
      SFM 3 SPR              OK         48 degrees C / 118 degrees F
      FPC 0                  OK         45 degrees C / 113 degrees F
      FPC 6                  OK         43 degrees C / 109 degrees F
      FPM CMB                OK         31 degrees C / 87 degrees F
      FPM Display            OK         33 degrees C / 91 degrees F
Fans  Rear Bottom Blower     OK         Spinning at normal speed
      Rear Top Blower        OK         Spinning at normal speed
```

```
      Front Top Blower       OK         Spinning at normal speed
      Fan Tray Rear Left     OK         Spinning at normal speed
      Fan Tray Rear Right    OK         Spinning at normal speed
      Fan Tray Front Left    OK         Spinning at normal speed
      Fan Tray Front Right   OK         Spinning at normal speed
Misc  CIP                    OK
```

show chassis environment (M320 Router)

```
user@host> show chassis environment
Class Item                   Status     Measurement
Temp  PEM 0                  Absent
      PEM 1                  Absent
      PEM 2                  OK
      PEM 3                  OK
      Routing Engine 0       OK         33 degrees C / 91 degrees F
      Routing Engine 1       OK         32 degrees C / 89 degrees F
      CB 0                   OK         36 degrees C / 96 degrees F
      CB 1                   OK         36 degrees C / 96 degrees F
      SIB 0                  OK         38 degrees C / 100 degrees F
      SIB 1                  OK         29 degrees C / 84 degrees F
      SIB 2                  OK         38 degrees C / 100 degrees F
      SIB 3                  OK         41 degrees C / 105 degrees F
      FPC 0 Intake           OK         28 degrees C / 82 degrees F
      FPC 0 Exhaust          OK         40 degrees C / 104 degrees F
      FPC 1 Intake           OK         29 degrees C / 84 degrees F
      FPC 1 Exhaust          OK         39 degrees C / 102 degrees F
      FPC 2 Intake           OK         28 degrees C / 82 degrees F
      FPC 2 Exhaust          OK         38 degrees C / 100 degrees F
      FPC 3 Intake           OK         28 degrees C / 82 degrees F
      FPC 3 Exhaust          OK         39 degrees C / 102 degrees F
      FPC 6 Intake           OK         27 degrees C / 80 degrees F
      FPC 6 Exhaust          OK         39 degrees C / 102 degrees F
      FPC 7 Intake           OK         27 degrees C / 80 degrees F
      FPC 7 Exhaust          OK         42 degrees C / 107 degrees F
      FPM GBUS               OK         30 degrees C / 86 degrees F
Fan   Top Left Front fan     OK         Spinning at normal speed
      Top Right Rear fan     OK         Spinning at normal speed
      Top Right Front fan    OK         Spinning at normal speed
      Top Left Rear fan      OK         Spinning at normal speed
```

```
      Bottom Left Front fan  OK         Spinning at normal speed
      Bottom Right Rear fan  OK         Spinning at normal speed
      Bottom Right Front fan OK         Spinning at normal speed
      Bottom Left Rear fan   OK         Spinning at normal speed
      Rear Fan 1 (TOP)       OK         Spinning at normal speed
      Rear Fan 2             OK         Spinning at normal speed
      Rear Fan 3             OK         Spinning at normal speed
      Rear Fan 4             OK         Spinning at normal speed
      Rear Fan 5             OK         Spinning at normal speed
      Rear Fan 6             OK         Spinning at normal speed
      Rear Fan 7 (Bottom)    OK         Spinning at normal speed
Misc  CIP                    OK
```

show chassis environment (MX150)

```
user@host> show chassis environment
Class Item                          Status     Measurement
Power FPC 0 Power Supply 0          OK
Temp  FPC 0 Sensor 1                OK         42 degrees C / 107 degrees F
      FPC 0 Sensor 2                OK         39 degrees C / 102 degrees F
      FPC 0 Coretemp                OK         75 degrees C / 167 degrees F
Fans  FPC 0 Fan Tray 0              OK         Spinning at normal speed
      FPC 0 Fan Tray 1              OK         Spinning at normal speed
```

show chassis environment (MX104 Router)

```
user@host> show chassis environment
Class Item                          Status     Measurement
Temp  PEM 0                         OK         34 degrees C / 93 degrees F
      PEM 1                         Absent
      ABB 0 Intake                  OK         33 degrees C / 91 degrees F
      ABB 0 Exhaust A               OK         42 degrees C / 107 degrees F
      ABB 0 Exhaust B               OK         43 degrees C / 109 degrees F
      ABB 1 Intake                  Absent
      ABB 1 Exhaust A               Absent
      ABB 1 Exhaust B               Absent
      Routing Engine 0              OK         34 degrees C / 93 degrees F
      Routing Engine 0 CPU          OK         46 degrees C / 114 degrees F
      Routing Engine 1              Absent
```

```
      Routing Engine 1 CPU          Absent
      AFEB 0 AFEB Processor         OK          33 degrees C / 91 degrees F
Fans  Fan 1                         OK          Spinning at normal speed
      Fan 2                         OK          Spinning at normal speed
      Fan 3                         OK          Spinning at normal speed
      Fan 4                         OK          Spinning at normal speed
      Fan 5                         OK          Spinning at normal speed
```

show chassis environment (MX240 Router)

```
user@host> show chassis environment
Class Item                          Status     Measurement
Temp  PEM 0                         OK         40 degrees C / 104 degrees F
      PEM 1                         OK         45 degrees C / 113 degrees F
      PEM 2                         Absent
      PEM 3                         Absent
      Routing Engine 0              OK         39 degrees C / 102 degrees F
      Routing Engine 1              OK         37 degrees C / 98 degrees F
      CB 0 Intake                   OK         36 degrees C / 96 degrees F
      CB 0 Exhaust A                OK         34 degrees C / 93 degrees F
      CB 0 Exhaust B                OK         38 degrees C / 100 degrees F
      CB 0 ACBC                     OK         37 degrees C / 98 degrees F
      CB 0 SF A                     OK         49 degrees C / 120 degrees F
      CB 0 SF B                     OK         41 degrees C / 105 degrees F
      CB 1 Intake                   OK         37 degrees C / 98 degrees F
      CB 1 Exhaust A                OK         34 degrees C / 93 degrees F
      CB 1 Exhaust B                OK         39 degrees C / 102 degrees F
      CB 1 ACBC                     OK         38 degrees C / 100 degrees F
      CB 1 SF A                     OK         47 degrees C / 116 degrees F
      CB 1 SF B                     OK         41 degrees C / 105 degrees F
      FPC 1 Intake                  OK         33 degrees C / 91 degrees F
      FPC 1 Exhaust A               OK         38 degrees C / 100 degrees F
      FPC 1 Exhaust B               OK         53 degrees C / 127 degrees F
      FPC 1 I3 0 TSensor            OK         50 degrees C / 122 degrees F
      FPC 1 I3 0 Chip               OK         53 degrees C / 127 degrees F
      FPC 1 I3 1 TSensor            OK         49 degrees C / 120 degrees F
      FPC 1 I3 1 Chip               OK         52 degrees C / 125 degrees F
      FPC 1 I3 2 TSensor            OK         47 degrees C / 116 degrees F
      FPC 1 I3 2 Chip               OK         49 degrees C / 120 degrees F
      FPC 1 I3 3 TSensor            OK         44 degrees C / 111 degrees F
      FPC 1 I3 3 Chip               OK         46 degrees C / 114 degrees F
```

```
      FPC 1 IA 0 TSensor             OK          45 degrees C / 113 degrees F
      FPC 1 IA 0 Chip                OK          44 degrees C / 111 degrees F
      FPC 1 IA 1 TSensor             OK          44 degrees C / 111 degrees F
      FPC 1 IA 1 Chip                OK          48 degrees C / 118 degrees F
      FPC 2 Intake                   OK          32 degrees C / 89 degrees F
      FPC 2 Exhaust A                OK          40 degrees C / 104 degrees F
      FPC 2 Exhaust B                OK          52 degrees C / 125 degrees F
      FPC 2 I3 0 TSensor             OK          52 degrees C / 125 degrees F
      FPC 2 I3 0 Chip                OK          56 degrees C / 132 degrees F
      FPC 2 I3 1 TSensor             OK          52 degrees C / 125 degrees F
      FPC 2 I3 1 Chip                OK          55 degrees C / 131 degrees F
      FPC 2 I3 2 TSensor             OK          49 degrees C / 120 degrees F
      FPC 2 I3 2 Chip                OK          52 degrees C / 125 degrees F
      FPC 2 I3 3 TSensor             OK          44 degrees C / 111 degrees F
      FPC 2 I3 3 Chip                OK          48 degrees C / 118 degrees F
      FPC 2 IA 0 TSensor             OK          50 degrees C / 122 degrees F
      FPC 2 IA 0 Chip                OK          48 degrees C / 118 degrees F
      FPC 2 IA 1 TSensor             OK          47 degrees C / 116 degrees F
      FPC 2 IA 1 Chip                OK          53 degrees C / 127 degrees F
Fans  Front Fan                      OK          Spinning at normal speed
      Middle Fan                     OK          Spinning at normal speed
      Rear Fan                       OK          Spinning at normal speed
```

show chassis environment (MX240 Router with SCBE)

```
user@host> show chassis environment
Class Item                           Status     Measurement
Temp  PEM 0                          OK         40 degrees C / 104 degrees F
      PEM 1                          OK         45 degrees C / 113 degrees F
      PEM 2                          Absent
      PEM 3                          Absent
      Routing Engine 0               OK         39 degrees C / 102 degrees F
      Routing Engine 1               OK         37 degrees C / 98 degrees F
      CB 0 Intake                    OK         36 degrees C / 96 degrees F
      CB 0 Exhaust A                 OK         34 degrees C / 93 degrees F
      CB 0 Exhaust B                 OK         38 degrees C / 100 degrees F
      CB 0 ACBC                      OK         37 degrees C / 98 degrees F
      CB 0 XF A                      OK         49 degrees C / 120 degrees F
      CB 0 XF B                      OK         41 degrees C / 105 degrees F
      CB 1 Intake                    OK         37 degrees C / 98 degrees F
      CB 1 Exhaust A                 OK         34 degrees C / 93 degrees F
```

```
       CB 1 Exhaust B                OK          39 degrees C / 102 degrees F
       CB 1 ACBC                     OK          38 degrees C / 100 degrees F
       CB 1 XF A                     OK          47 degrees C / 116 degrees F
       CB 1 XF B                     OK          41 degrees C / 105 degrees F
       FPC 1 Intake                  OK          33 degrees C / 91 degrees F
       FPC 1 Exhaust A               OK          38 degrees C / 100 degrees F
       FPC 1 Exhaust B               OK          53 degrees C / 127 degrees F
       FPC 1 I3 0 TSensor            OK          50 degrees C / 122 degrees F
       FPC 1 I3 0 Chip               OK          53 degrees C / 127 degrees F
       FPC 1 I3 1 TSensor            OK          49 degrees C / 120 degrees F
       FPC 1 I3 1 Chip               OK          52 degrees C / 125 degrees F
       FPC 1 I3 2 TSensor            OK          47 degrees C / 116 degrees F
       FPC 1 I3 2 Chip               OK          49 degrees C / 120 degrees F
       FPC 1 I3 3 TSensor            OK          44 degrees C / 111 degrees F
       FPC 1 I3 3 Chip               OK          46 degrees C / 114 degrees F
       FPC 1 IA 0 TSensor            OK          45 degrees C / 113 degrees F
       FPC 1 IA 0 Chip               OK          44 degrees C / 111 degrees F
       FPC 1 IA 1 TSensor            OK          44 degrees C / 111 degrees F
       FPC 1 IA 1 Chip               OK          48 degrees C / 118 degrees F
       FPC 2 Intake                  OK          32 degrees C / 89 degrees F
       FPC 2 Exhaust A               OK          40 degrees C / 104 degrees F
       FPC 2 Exhaust B               OK          52 degrees C / 125 degrees F
       FPC 2 I3 0 TSensor            OK          52 degrees C / 125 degrees F
       FPC 2 I3 0 Chip               OK          56 degrees C / 132 degrees F
       FPC 2 I3 1 TSensor            OK          52 degrees C / 125 degrees F
       FPC 2 I3 1 Chip               OK          55 degrees C / 131 degrees F
       FPC 2 I3 2 TSensor            OK          49 degrees C / 120 degrees F
       FPC 2 I3 2 Chip               OK          52 degrees C / 125 degrees F
       FPC 2 I3 3 TSensor            OK          44 degrees C / 111 degrees F
       FPC 2 I3 3 Chip               OK          48 degrees C / 118 degrees F
       FPC 2 IA 0 TSensor            OK          50 degrees C / 122 degrees F
       FPC 2 IA 0 Chip               OK          48 degrees C / 118 degrees F
       FPC 2 IA 1 TSensor            OK          47 degrees C / 116 degrees F
       FPC 2 IA 1 Chip               OK          53 degrees C / 127 degrees F
Fans   Front Fan                     OK          Spinning at normal speed
       Middle Fan                    OK          Spinning at normal speed
       Rear Fan                      OK          Spinning at normal speed
```

show chassis environment (MX480 Router)

```
user@host> show chassis environment
Class Item                           Status     Measurement
Temp  PEM 0                          OK         35 degrees C / 95 degrees F
      PEM 1                          OK         40 degrees C / 104 degrees F
      PEM 2                          Absent
      PEM 3                          Absent
      Routing Engine 0               OK         44 degrees C / 111 degrees F
      Routing Engine 1               OK         45 degrees C / 113 degrees F
      CB 0 Intake                    OK         36 degrees C / 96 degrees F
      CB 0 Exhaust A                 OK         38 degrees C / 100 degrees F
      CB 0 Exhaust B                 OK         39 degrees C / 102 degrees F
      CB 0 ACBC                      OK         37 degrees C / 98 degrees F
      CB 0 SF A                      OK         51 degrees C / 123 degrees F
      CB 0 SF B                      OK         44 degrees C / 111 degrees F
      CB 1 Intake                    OK         36 degrees C / 96 degrees F
      CB 1 Exhaust A                 OK         39 degrees C / 102 degrees F
      CB 1 Exhaust B                 OK         40 degrees C / 104 degrees F
      CB 1 ACBC                      OK         37 degrees C / 98 degrees F
      CB 1 SF A                      OK         50 degrees C / 122 degrees F
      CB 1 SF B                      OK         43 degrees C / 109 degrees F
      FPC 0 Intake                   OK         36 degrees C / 96 degrees F
      FPC 0 Exhaust A                OK         39 degrees C / 102 degrees F
      FPC 0 Exhaust B                OK         51 degrees C / 123 degrees F
      FPC 0 I3 0 TSensor             OK         49 degrees C / 120 degrees F
      FPC 0 I3 0 Chip                OK         56 degrees C / 132 degrees F
      FPC 0 I3 1 TSensor             OK         47 degrees C / 116 degrees F
      FPC 0 I3 1 Chip                OK         52 degrees C / 125 degrees F
      FPC 0 I3 2 TSensor             OK         46 degrees C / 114 degrees F
      FPC 0 I3 2 Chip                OK         48 degrees C / 118 degrees F
      FPC 0 I3 3 TSensor             OK         42 degrees C / 107 degrees F
      FPC 0 I3 3 Chip                OK         45 degrees C / 113 degrees F
      FPC 0 IA 0 TSensor             OK         45 degrees C / 113 degrees F
      FPC 0 IA 0 Chip                OK         45 degrees C / 113 degrees F
      FPC 0 IA 1 TSensor             OK         44 degrees C / 111 degrees F
      FPC 0 IA 1 Chip                OK         48 degrees C / 118 degrees F
      FPC 1 Intake                   OK         37 degrees C / 98 degrees F
      FPC 1 Exhaust A                OK         41 degrees C / 105 degrees F
      FPC 1 Exhaust B                OK         52 degrees C / 125 degrees F
      FPC 1 I3 0 TSensor             OK         51 degrees C / 123 degrees F
      FPC 1 I3 0 Chip                OK         57 degrees C / 134 degrees F
```

```
      FPC 1 I3 1 TSensor              OK          48 degrees C / 118 degrees F
      FPC 1 I3 1 Chip                 OK          52 degrees C / 125 degrees F
      FPC 1 I3 2 TSensor              OK          46 degrees C / 114 degrees F
      FPC 1 I3 2 Chip                 OK          50 degrees C / 122 degrees F
      FPC 1 I3 3 TSensor              OK          42 degrees C / 107 degrees F
      FPC 1 I3 3 Chip                 OK          46 degrees C / 114 degrees F
      FPC 1 IA 0 TSensor              OK          49 degrees C / 120 degrees F
      FPC 1 IA 0 Chip                 OK          48 degrees C / 118 degrees F
      FPC 1 IA 1 TSensor              OK          46 degrees C / 114 degrees F
      FPC 1 IA 1 Chip                 OK          50 degrees C / 122 degrees F
Fans  Top Rear Fan                    OK          Spinning at normal speed
      Bottom Rear Fan                 OK          Spinning at normal speed
      Top Middle Fan                  OK          Spinning at normal speed
      Bottom Middle Fan               OK          Spinning at normal speed
      Top Front Fan                   OK          Spinning at normal speed
      Bottom Front Fan                OK          Spinning at normal speed
```

show chassis environment (MX480 Router with SCBE)

```
user@host> show chassis environment
Class Item                            Status      Measurement
Temp  PEM 0                           OK          35 degrees C / 95 degrees F
      PEM 1                           OK          40 degrees C / 104 degrees F
      PEM 2                           Absent
      PEM 3                           Absent
      Routing Engine 0                OK          44 degrees C / 111 degrees F
      Routing Engine 1                OK          45 degrees C / 113 degrees F
      CB 0 Intake                     OK          36 degrees C / 96 degrees F
      CB 0 Exhaust A                  OK          38 degrees C / 100 degrees F
      CB 0 Exhaust B                  OK          39 degrees C / 102 degrees F
      CB 0 ACBC                       OK          37 degrees C / 98 degrees F
      CB 0 XF A                       OK          51 degrees C / 123 degrees F
      CB 0 XF B                       OK          44 degrees C / 111 degrees F
      CB 1 Intake                     OK          36 degrees C / 96 degrees F
      CB 1 Exhaust A                  OK          39 degrees C / 102 degrees F
      CB 1 Exhaust B                  OK          40 degrees C / 104 degrees F
      CB 1 ACBC                       OK          37 degrees C / 98 degrees F
      CB 1 XF A                       OK          50 degrees C / 122 degrees F
      CB 1 XF B                       OK          43 degrees C / 109 degrees F
      FPC 0 Intake                    OK          36 degrees C / 96 degrees F
      FPC 0 Exhaust A                 OK          39 degrees C / 102 degrees F
```

```
      FPC 0 Exhaust B                 OK          51 degrees C / 123 degrees F
      FPC 0 I3 0 TSensor              OK          49 degrees C / 120 degrees F
      FPC 0 I3 0 Chip                 OK          56 degrees C / 132 degrees F
      FPC 0 I3 1 TSensor              OK          47 degrees C / 116 degrees F
      FPC 0 I3 1 Chip                 OK          52 degrees C / 125 degrees F
      FPC 0 I3 2 TSensor              OK          46 degrees C / 114 degrees F
      FPC 0 I3 2 Chip                 OK          48 degrees C / 118 degrees F
      FPC 0 I3 3 TSensor              OK          42 degrees C / 107 degrees F
      FPC 0 I3 3 Chip                 OK          45 degrees C / 113 degrees F
      FPC 0 IA 0 TSensor              OK          45 degrees C / 113 degrees F
      FPC 0 IA 0 Chip                 OK          45 degrees C / 113 degrees F
      FPC 0 IA 1 TSensor              OK          44 degrees C / 111 degrees F
      FPC 0 IA 1 Chip                 OK          48 degrees C / 118 degrees F
      FPC 1 Intake                    OK          37 degrees C / 98 degrees F
      FPC 1 Exhaust A                 OK          41 degrees C / 105 degrees F
      FPC 1 Exhaust B                 OK          52 degrees C / 125 degrees F
      FPC 1 I3 0 TSensor              OK          51 degrees C / 123 degrees F
      FPC 1 I3 0 Chip                 OK          57 degrees C / 134 degrees F
      FPC 1 I3 1 TSensor              OK          48 degrees C / 118 degrees F
      FPC 1 I3 1 Chip                 OK          52 degrees C / 125 degrees F
      FPC 1 I3 2 TSensor              OK          46 degrees C / 114 degrees F
      FPC 1 I3 2 Chip                 OK          50 degrees C / 122 degrees F
      FPC 1 I3 3 TSensor              OK          42 degrees C / 107 degrees F
      FPC 1 I3 3 Chip                 OK          46 degrees C / 114 degrees F
      FPC 1 IA 0 TSensor              OK          49 degrees C / 120 degrees F
      FPC 1 IA 0 Chip                 OK          48 degrees C / 118 degrees F
      FPC 1 IA 1 TSensor              OK          46 degrees C / 114 degrees F
      FPC 1 IA 1 Chip                 OK          50 degrees C / 122 degrees F
Fans  Top Rear Fan                    OK          Spinning at normal speed
      Bottom Rear Fan                 OK          Spinning at normal speed
      Top Middle Fan                  OK          Spinning at normal speed
      Bottom Middle Fan               OK          Spinning at normal speed
      Top Front Fan                   OK          Spinning at normal speed
      Bottom Front Fan                OK          Spinning at normal speed
```

show chassis environment (MX960 Router)

```
user@host> show chassis environment
Class Item                            Status     Measurement
Temp  PEM 0                           Absent
      PEM 1                           Absent
```

```
      PEM 2                       Check
      PEM 3                       OK          35 degrees C / 95 degrees F
      Routing Engine 0            OK          37 degrees C / 98 degrees F
      Routing Engine 1            Absent
      CB 0 Intake                 OK          24 degrees C / 75 degrees F
      CB 0 Exhaust A              OK          30 degrees C / 86 degrees F
      CB 0 Exhaust B              OK          27 degrees C / 80 degrees F
      CB 1 Intake                 Absent
      CB 1 Exhaust A              Absent
      CB 1 Exhaust B              Absent
      CB 1 ACBC                   Absent
      CB 1 SF A                   Absent
      CB 1 SF B                   Absent
      CB 2 Intake                 Absent
      CB 2 Exhaust A              Absent
      CB 2 Exhaust B              Absent
      CB 2 ACBC                   Absent
      CB 2 SF A                   Absent
      CB 2 SF B                   Absent
      FPC 4 Intake                OK          24 degrees C / 75 degrees F
      FPC 4 Exhaust A             OK          36 degrees C / 96 degrees F
      FPC 4 Exhaust B             OK          38 degrees C / 100 degrees F
      FPC 7 Intake                OK          24 degrees C / 75 degrees F
      FPC 7 Exhaust A             OK          36 degrees C / 96 degrees F
      FPC 7 Exhaust B             OK          42 degrees C / 107 degrees F
Fans  Top Fan Tray Temp           Failed
      Top Tray Fan 1              OK          Spinning at normal speed
      Top Tray Fan 2              OK          Spinning at normal speed
      Top Tray Fan 3              OK          Spinning at normal speed
      Top Tray Fan 4              OK          Spinning at normal speed
      Top Tray Fan 5              OK          Spinning at normal speed
      Top Tray Fan 6              OK          Spinning at normal speed
      Bottom Fan Tray Temp        Failed
      Bottom Tray Fan 1           OK          Spinning at normal speed
      Bottom Tray Fan 2           OK          Spinning at normal speed
      Bottom Tray Fan 3           OK          Spinning at normal speed
      Bottom Tray Fan 4           OK          Spinning at normal speed
      Bottom Tray Fan 5           OK          Spinning at normal speed
      Bottom Tray Fan 6           OK          Spinning at normal speed
```

show chassis environment (MX960 Router with SCBE)

```
user@host> show chassis environment
Class Item                           Status     Measurement
Temp  PEM 0                          Absent
      PEM 1                          OK         50 degrees C / 122 degrees F
      PEM 2                          OK         50 degrees C / 122 degrees F
      PEM 3                          OK         50 degrees C / 122 degrees F
      Routing Engine 0               OK         42 degrees C / 107 degrees F
      Routing Engine 0 CPU           OK         51 degrees C / 123 degrees F
      Routing Engine 1               OK         39 degrees C / 102 degrees F
      Routing Engine 1 CPU           OK         44 degrees C / 111 degrees F
      CB 0 Intake                    OK         35 degrees C / 95 degrees F
      CB 0 Exhaust A                 OK         36 degrees C / 96 degrees F
      CB 0 Exhaust B                 OK         43 degrees C / 109 degrees F
      CB 0 ACBC                      OK         38 degrees C / 100 degrees F
      CB 0 XF A                      OK         53 degrees C / 127 degrees F
      CB 0 XF B                      OK         47 degrees C / 116 degrees F
      CB 1 Intake                    OK         35 degrees C / 95 degrees F
      CB 1 Exhaust A                 OK         35 degrees C / 95 degrees F
      CB 1 Exhaust B                 OK         41 degrees C / 105 degrees F
      CB 1 ACBC                      OK         38 degrees C / 100 degrees F
      CB 1 XF A                      OK         52 degrees C / 125 degrees F
      CB 1 XF B                      OK         47 degrees C / 116 degrees F
      CB 2 Intake                    OK         32 degrees C / 89 degrees F
      CB 2 Exhaust A                 OK         30 degrees C / 86 degrees F
      CB 2 Exhaust B                 OK         35 degrees C / 95 degrees F
      CB 2 ACBC                      OK         33 degrees C / 91 degrees F
      CB 2 XF A                      OK         51 degrees C / 123 degrees F
      CB 2 XF B                      OK         50 degrees C / 122 degrees F
      FPC 0 Intake                   OK         35 degrees C / 95 degrees F
      FPC 0 Exhaust A                OK         39 degrees C / 102 degrees F
      FPC 0 Exhaust B                OK         50 degrees C / 122 degrees F
      FPC 0 I3 0 TSensor             OK         50 degrees C / 122 degrees F
      FPC 0 I3 0 Chip                OK         56 degrees C / 132 degrees F
      FPC 0 I3 1 TSensor             OK         47 degrees C / 116 degrees F
      FPC 0 I3 1 Chip                OK         50 degrees C / 122 degrees F
      FPC 0 I3 2 TSensor             OK         45 degrees C / 113 degrees F
      FPC 0 I3 2 Chip                OK         48 degrees C / 118 degrees F
      FPC 0 I3 3 TSensor             OK         41 degrees C / 105 degrees F
      FPC 0 I3 3 Chip                OK         44 degrees C / 111 degrees F
      FPC 0 IA 0 TSensor             OK         45 degrees C / 113 degrees F
```

```
FPC 0 IA 0 Chip                OK          45 degrees C / 113 degrees F
FPC 0 IA 1 TSensor             OK          44 degrees C / 111 degrees F
FPC 0 IA 1 Chip                OK          48 degrees C / 118 degrees F
FPC 1 Intake                   OK          36 degrees C / 96 degrees F
FPC 1 Exhaust A                OK          47 degrees C / 116 degrees F
FPC 1 Exhaust B                OK          43 degrees C / 109 degrees F
FPC 1 LU 0 TCAM TSensor        OK          53 degrees C / 127 degrees F
FPC 1 LU 0 TCAM Chip           OK          57 degrees C / 134 degrees F
FPC 1 LU 0 TSensor             OK          53 degrees C / 127 degrees F
FPC 1 LU 0 Chip                OK          60 degrees C / 140 degrees F
FPC 1 MQ 0 TSensor             OK          53 degrees C / 127 degrees F
FPC 1 MQ 0 Chip                OK          56 degrees C / 132 degrees F
FPC 1 LU 1 TCAM TSensor        OK          51 degrees C / 123 degrees F
FPC 1 LU 1 TCAM Chip           OK          52 degrees C / 125 degrees F
FPC 1 LU 1 TSensor             OK          51 degrees C / 123 degrees F
FPC 1 LU 1 Chip                OK          53 degrees C / 127 degrees F
FPC 1 MQ 1 TSensor             OK          51 degrees C / 123 degrees F
FPC 1 MQ 1 Chip                OK          58 degrees C / 136 degrees F
FPC 2 Intake                   OK          35 degrees C / 95 degrees F
FPC 2 Exhaust A                OK          39 degrees C / 102 degrees F
FPC 2 Exhaust B                OK          54 degrees C / 129 degrees F
FPC 2 I3 0 TSensor             OK          52 degrees C / 125 degrees F
FPC 2 I3 0 Chip                OK          59 degrees C / 138 degrees F
FPC 2 I3 1 TSensor             OK          48 degrees C / 118 degrees F
FPC 2 I3 1 Chip                OK          52 degrees C / 125 degrees F
FPC 2 I3 2 TSensor             OK          47 degrees C / 116 degrees F
FPC 2 I3 2 Chip                OK          49 degrees C / 120 degrees F
FPC 2 I3 3 TSensor             OK          41 degrees C / 105 degrees F
FPC 2 I3 3 Chip                OK          44 degrees C / 111 degrees F
FPC 2 IA 0 TSensor             OK          47 degrees C / 116 degrees F
FPC 2 IA 0 Chip                OK          46 degrees C / 114 degrees F
FPC 2 IA 1 TSensor             OK          45 degrees C / 113 degrees F
FPC 2 IA 1 Chip                OK          49 degrees C / 120 degrees F
FPC 3 Intake                   OK          34 degrees C / 93 degrees F
FPC 3 Exhaust A                OK          34 degrees C / 93 degrees F
FPC 3 Exhaust B                OK          47 degrees C / 116 degrees F
FPC 3 I3 0 TSensor             OK          48 degrees C / 118 degrees F
FPC 3 I3 0 Chip                OK          52 degrees C / 125 degrees F
FPC 3 I3 1 TSensor             OK          46 degrees C / 114 degrees F
FPC 3 I3 1 Chip                OK          48 degrees C / 118 degrees F
FPC 3 IA 0 TSensor             OK          41 degrees C / 105 degrees F
FPC 3 IA 0 Chip                OK          40 degrees C / 104 degrees F
FPC 5 Intake                   OK          42 degrees C / 107 degrees F
```

```
FPC 5 Exhaust A                 OK          42 degrees C / 107 degrees F
FPC 5 Exhaust B                 OK          53 degrees C / 127 degrees F
FPC 5 LU 0 TSensor              OK          53 degrees C / 127 degrees F
FPC 5 LU 0 Chip                 OK          54 degrees C / 129 degrees F
FPC 5 LU 1 TSensor              OK          53 degrees C / 127 degrees F
FPC 5 LU 1 Chip                 OK          61 degrees C / 141 degrees F
FPC 5 LU 2 TSensor              OK          53 degrees C / 127 degrees F
FPC 5 LU 2 Chip                 OK          51 degrees C / 123 degrees F
FPC 5 LU 3 TSensor              OK          53 degrees C / 127 degrees F
FPC 5 LU 3 Chip                 OK          53 degrees C / 127 degrees F
FPC 5 MQ 0 TSensor              OK          47 degrees C / 116 degrees F
FPC 5 MQ 0 Chip                 OK          52 degrees C / 125 degrees F
FPC 5 MQ 1 TSensor              OK          47 degrees C / 116 degrees F
FPC 5 MQ 1 Chip                 OK          52 degrees C / 125 degrees F
FPC 5 MQ 2 TSensor              OK          47 degrees C / 116 degrees F
FPC 5 MQ 2 Chip                 OK          46 degrees C / 114 degrees F
FPC 5 MQ 3 TSensor              OK          47 degrees C / 116 degrees F
FPC 5 MQ 3 Chip                 OK          45 degrees C / 113 degrees F
FPC 7 Intake                    OK          36 degrees C / 96 degrees F
FPC 7 Exhaust A                 OK          35 degrees C / 95 degrees F
FPC 7 Exhaust B                 OK          33 degrees C / 91 degrees F
FPC 7 QX 0 TSensor              OK          42 degrees C / 107 degrees F
FPC 7 QX 0 Chip                 OK          47 degrees C / 116 degrees F
FPC 7 LU 0 TCAM TSensor         OK          42 degrees C / 107 degrees F
FPC 7 LU 0 TCAM Chip            OK          44 degrees C / 111 degrees F
FPC 7 LU 0 TSensor              OK          42 degrees C / 107 degrees F
FPC 7 LU 0 Chip                 OK          46 degrees C / 114 degrees F
FPC 7 MQ 0 TSensor              OK          42 degrees C / 107 degrees F
FPC 7 MQ 0 Chip                 OK          45 degrees C / 113 degrees F
FPC 8 Intake                    OK          33 degrees C / 91 degrees F
FPC 8 Exhaust A                 OK          33 degrees C / 91 degrees F
FPC 8 Exhaust B                 OK          36 degrees C / 96 degrees F
FPC 8 I3 0 TSensor              OK          38 degrees C / 100 degrees F
FPC 8 I3 0 Chip                 OK          43 degrees C / 109 degrees F
FPC 8 BDS 0 TSensor             OK          37 degrees C / 98 degrees F
FPC 8 BDS 0 Chip                OK          36 degrees C / 96 degrees F
FPC 8 IA 0 TSensor              OK          37 degrees C / 98 degrees F
FPC 8 IA 0 Chip                 OK          37 degrees C / 98 degrees F
FPC 10 Intake                   OK          38 degrees C / 100 degrees F
FPC 10 Exhaust A                OK          36 degrees C / 96 degrees F
FPC 10 Exhaust B                OK          41 degrees C / 105 degrees F
FPC 10 I3 0 TSensor             OK          40 degrees C / 104 degrees F
FPC 10 I3 0 Chip                OK          42 degrees C / 107 degrees F
```

```
      FPC 10 I3 1 TSensor            OK          40 degrees C / 104 degrees F
      FPC 10 I3 1 Chip               OK          44 degrees C / 111 degrees F
      FPC 10 I3 2 TSensor            OK          42 degrees C / 107 degrees F
      FPC 10 I3 2 Chip               OK          43 degrees C / 109 degrees F
      FPC 10 I3 3 TSensor            OK          39 degrees C / 102 degrees F
      FPC 10 I3 3 Chip               OK          44 degrees C / 111 degrees F
      FPC 10 IA 0 TSensor            OK          36 degrees C / 96 degrees F
      FPC 10 IA 0 Chip               OK          36 degrees C / 96 degrees F
      FPC 10 IA 1 TSensor            OK          43 degrees C / 109 degrees F
      FPC 10 IA 1 Chip               OK          42 degrees C / 107 degrees F
Fans  Top Fan Tray Temp              OK          37 degrees C / 98 degrees F
      Top Tray Fan 1                 OK          Spinning at normal speed
      Top Tray Fan 2                 OK          Spinning at normal speed
      Top Tray Fan 3                 OK          Spinning at normal speed
      Top Tray Fan 4                 OK          Spinning at normal speed
      Top Tray Fan 5                 OK          Spinning at normal speed
      Top Tray Fan 6                 OK          Spinning at normal speed
      Bottom Fan Tray Temp           OK          28 degrees C / 82 degrees F
      Bottom Tray Fan 1              OK          Spinning at normal speed
      Bottom Tray Fan 2              OK          Spinning at normal speed
      Bottom Tray Fan 3              OK          Spinning at normal speed
      Bottom Tray Fan 4              OK          Spinning at normal speed
      Bottom Tray Fan 5              OK          Spinning at normal speed
      Bottom Tray Fan 6              OK          Spinning at normal speed
```

show chassis environment (MX960 Router with MPC5EQ)

```
user@host> show chassis environment
Class Item                           Status     Measurement
Temp  PEM 0                          OK         50 degrees C / 122 degrees F
      PEM 1                          OK         45 degrees C / 113 degrees F
      PEM 2                          OK         45 degrees C / 113 degrees F
      PEM 3                          Absent
      Routing Engine 0               OK         31 degrees C / 87 degrees F
      Routing Engine 0 CPU           OK         30 degrees C / 86 degrees F
      Routing Engine 1               Present
      Routing Engine 1 CPU           Present
      CB 0 Intake                    OK         29 degrees C / 84 degrees F
      CB 0 Exhaust A                 OK         29 degrees C / 84 degrees F
      CB 0 Exhaust B                 OK         34 degrees C / 93 degrees F
      CB 0 ACBC                      OK         32 degrees C / 89 degrees F
```

```
      CB 0 XF A                      OK         49 degrees C / 120 degrees F
      CB 0 XF B                      OK         45 degrees C / 113 degrees F
      CB 1 Intake                    OK         26 degrees C / 78 degrees F
      CB 1 Exhaust A                 OK         26 degrees C / 78 degrees F
      CB 1 Exhaust B                 OK         27 degrees C / 80 degrees F
      CB 1 ACBC                      OK         26 degrees C / 78 degrees F
      CB 1 XF A                      OK         32 degrees C / 89 degrees F
      CB 1 XF B                      OK         32 degrees C / 89 degrees F
      CB 2 Intake                    OK         28 degrees C / 82 degrees F
      CB 2 Exhaust A                 OK         27 degrees C / 80 degrees F
      CB 2 Exhaust B                 OK         33 degrees C / 91 degrees F
      CB 2 ACBC                      OK         30 degrees C / 86 degrees F
      CB 2 XF A                      OK         48 degrees C / 118 degrees F
      CB 2 XF B                      OK         46 degrees C / 114 degrees F
      FPC 0 Intake                   OK         38 degrees C / 100 degrees F
      FPC 0 Exhaust A                OK         48 degrees C / 118 degrees F
      FPC 0 Exhaust B                OK         49 degrees C / 120 degrees F
      FPC 0 XL TSen                  OK         48 degrees C / 118 degrees F
      FPC 0 XL Chip                  OK         50 degrees C / 122 degrees F
      FPC 0 XL_XR0 TSen              OK         48 degrees C / 118 degrees F
      FPC 0 XL_XR0 Chip              OK         53 degrees C / 127 degrees F
      FPC 0 XL_XR1 TSen              OK         48 degrees C / 118 degrees F
      FPC 0 XL_XR1 Chip              OK         54 degrees C / 129 degrees F
      FPC 0 XQ TSen                  OK         48 degrees C / 118 degrees F
      FPC 0 XQ Chip                  OK         52 degrees C / 125 degrees F
      FPC 0 XQ_XR0 TSen              OK         48 degrees C / 118 degrees F
      FPC 0 XQ_XR0 Chip              OK         62 degrees C / 143 degrees F
      FPC 0 XQ_XR1 TSen              OK         48 degrees C / 118 degrees F
      FPC 0 XQ_XR1 Chip              OK         62 degrees C / 143 degrees F
      FPC 0 XM 0 TSen                OK         53 degrees C / 127 degrees F
      FPC 0 XM 0 Chip                OK         63 degrees C / 145 degrees F
      FPC 0 XM 1 TSen                OK         53 degrees C / 127 degrees F
      FPC 0 XM 1 Chip                OK         46 degrees C / 114 degrees F
      FPC 0 PLX PCIe Switch TSe      OK         53 degrees C / 127 degrees F
      FPC 0 PLX PCIe Switch Chi      OK         66 degrees C / 150 degrees F
      FPC 1 Intake                   OK         31 degrees C / 87 degrees F
      FPC 1 Exhaust A                OK         38 degrees C / 100 degrees F
      FPC 1 Exhaust B                OK         49 degrees C / 120 degrees F
      FPC 1 LU 0 TSen                OK         41 degrees C / 105 degrees F
      FPC 1 LU 0 Chip                OK         47 degrees C / 116 degrees F
      FPC 1 LU 1 TSen                OK         41 degrees C / 105 degrees F
FPC 1 LU 1 Chip                OK         42 degrees C / 107 degrees F
      FPC 1 LU 2 TSen                OK         41 degrees C / 105 degrees F
```

```
FPC 1 LU 2 Chip                 OK          46 degrees C / 114 degrees F
FPC 1 LU 3 TSen                 OK          41 degrees C / 105 degrees F
FPC 1 LU 3 Chip                 OK          51 degrees C / 123 degrees F
FPC 1 XM 0 TSen                 OK          41 degrees C / 105 degrees F
FPC 1 XM 0 Chip                 OK          49 degrees C / 120 degrees F
FPC 1 XF 0 TSen                 OK          41 degrees C / 105 degrees F
FPC 1 XF 0 Chip                 OK          63 degrees C / 145 degrees F
FPC 1 PLX Switch TSen           OK          41 degrees C / 105 degrees F
FPC 1 PLX Switch Chip           OK          43 degrees C / 109 degrees F
FPC 3 Intake                    OK          31 degrees C / 87 degrees F
FPC 3 Exhaust A                 OK          37 degrees C / 98 degrees F
FPC 3 Exhaust B                 OK          43 degrees C / 109 degrees F
FPC 3 LU 0 TSen                 OK          42 degrees C / 107 degrees F
FPC 3 LU 0 Chip                 OK          43 degrees C / 109 degrees F
FPC 3 LU 1 TSen                 OK          42 degrees C / 107 degrees F
FPC 3 LU 1 Chip                 OK          46 degrees C / 114 degrees F
FPC 3 LU 2 TSen                 OK          42 degrees C / 107 degrees F
FPC 3 LU 2 Chip                 OK          40 degrees C / 104 degrees F
FPC 3 LU 3 TSen                 OK          42 degrees C / 107 degrees F
FPC 3 LU 3 Chip                 OK          41 degrees C / 105 degrees F
FPC 3 MQ 0 TSen                 OK          37 degrees C / 98 degrees F
FPC 3 MQ 0 Chip                 OK          37 degrees C / 98 degrees F
FPC 3 MQ 1 TSen                 OK          37 degrees C / 98 degrees F
FPC 3 MQ 1 Chip                 OK          40 degrees C / 104 degrees F
FPC 3 MQ 2 TSen                 OK          37 degrees C / 98 degrees F
FPC 3 MQ 2 Chip                 OK          36 degrees C / 96 degrees F
FPC 3 MQ 3 TSen                 OK          37 degrees C / 98 degrees F
FPC 3 MQ 3 Chip                 OK          38 degrees C / 100 degrees F
FPC 4 Intake                    OK          34 degrees C / 93 degrees F
FPC 4 Exhaust A                 OK          45 degrees C / 113 degrees F
FPC 4 Exhaust B                 OK          47 degrees C / 116 degrees F
FPC 4 XL TSen                   OK          44 degrees C / 111 degrees F
FPC 4 XL Chip                   OK          47 degrees C / 116 degrees F
FPC 4 XL_XR0 TSen               OK          44 degrees C / 111 degrees F
FPC 4 XL_XR0 Chip               OK          48 degrees C / 118 degrees F
FPC 4 XL_XR1 TSen               OK          44 degrees C / 111 degrees F
FPC 4 XL_XR1 Chip               OK          47 degrees C / 116 degrees F
FPC 4 XQ TSen                   OK          44 degrees C / 111 degrees F
FPC 4 XQ Chip                   OK          47 degrees C / 116 degrees F
FPC 4 XQ_XR0 TSen               OK          44 degrees C / 111 degrees F
FPC 4 XQ_XR0 Chip               OK          57 degrees C / 134 degrees F
FPC 4 XQ_XR1 TSen               OK          44 degrees C / 111 degrees F
FPC 4 XQ_XR1 Chip               OK          58 degrees C / 136 degrees F
```

```
      FPC 4 XM 0 TSen                OK          51 degrees C / 123 degrees F
      FPC 4 XM 0 Chip                OK          61 degrees C / 141 degrees F
      FPC 4 XM 1 TSen                OK          51 degrees C / 123 degrees F
      FPC 4 XM 1 Chip                OK          47 degrees C / 116 degrees F
      FPC 4 PLX PCIe Switch TSe      OK          51 degrees C / 123 degrees F
      FPC 4 PLX PCIe Switch Chi      OK          60 degrees C / 140 degrees F
      FPC 5 Intake                   OK          34 degrees C / 93 degrees F
      FPC 5 Exhaust A                OK          45 degrees C / 113 degrees F
      FPC 5 Exhaust B                OK          47 degrees C / 116 degrees F
      FPC 5 XL TSen                  OK          45 degrees C / 113 degrees F
      FPC 5 XL Chip                  OK          47 degrees C / 116 degrees F
      FPC 5 XL_XR0 TSen              OK          45 degrees C / 113 degrees F
FPC 5 XL_XR0 Chip              OK          49 degrees C / 120 degrees F
      FPC 5 XL_XR1 TSen              OK          45 degrees C / 113 degrees F
      FPC 5 XL_XR1 Chip              OK          49 degrees C / 120 degrees F
      FPC 5 XQ TSen                  OK          45 degrees C / 113 degrees F
      FPC 5 XQ Chip                  OK          48 degrees C / 118 degrees F
      FPC 5 XQ_XR0 TSen              OK          45 degrees C / 113 degrees F
      FPC 5 XQ_XR0 Chip              OK          60 degrees C / 140 degrees F
      FPC 5 XQ_XR1 TSen              OK          45 degrees C / 113 degrees F
      FPC 5 XQ_XR1 Chip              OK          58 degrees C / 136 degrees F
      FPC 5 XM 0 TSen                OK          50 degrees C / 122 degrees F
      FPC 5 XM 0 Chip                OK          48 degrees C / 118 degrees F
      FPC 5 XM 1 TSen                OK          50 degrees C / 122 degrees F
      FPC 5 XM 1 Chip                OK          47 degrees C / 116 degrees F
      FPC 5 PLX PCIe Switch TSe      OK          50 degrees C / 122 degrees F
      FPC 5 PLX PCIe Switch Chi      OK          59 degrees C / 138 degrees F
      FPC 7 Intake                   OK          32 degrees C / 89 degrees F
      FPC 7 Exhaust A                OK          32 degrees C / 89 degrees F
      FPC 7 Exhaust B                OK          33 degrees C / 91 degrees F
      FPC 7 LU 0 TSen                OK          49 degrees C / 120 degrees F
      FPC 7 LU 0 Chip                OK          44 degrees C / 111 degrees F
      FPC 7 LU 1 TSen                OK          49 degrees C / 120 degrees F
      FPC 7 LU 1 Chip                OK          47 degrees C / 116 degrees F
      FPC 7 LU 2 TSen                OK          49 degrees C / 120 degrees F
      FPC 7 LU 2 Chip                OK          39 degrees C / 102 degrees F
      FPC 7 LU 3 TSen                OK          49 degrees C / 120 degrees F
      FPC 7 LU 3 Chip                OK          43 degrees C / 109 degrees F
      FPC 7 XM 0 TSen                OK          49 degrees C / 120 degrees F
      FPC 7 XM 0 Chip                OK          57 degrees C / 134 degrees F
      FPC 7 XM 1 TSen                OK          49 degrees C / 120 degrees F
      FPC 7 XM 1 Chip                OK          48 degrees C / 118 degrees F
      FPC 7 PLX Switch TSen          OK          49 degrees C / 120 degrees F
```

```
      FPC 7 PLX Switch Chip          OK         45 degrees C / 113 degrees F
      FPC 8 Intake                   OK         36 degrees C / 96 degrees F
      FPC 8 Exhaust A                OK         51 degrees C / 123 degrees F
      FPC 8 Exhaust B                OK         46 degrees C / 114 degrees F
      FPC 8 XL TSen                  OK         46 degrees C / 114 degrees F
      FPC 8 XL Chip                  OK         47 degrees C / 116 degrees F
      FPC 8 XL_XR0 TSen              OK         46 degrees C / 114 degrees F
      FPC 8 XL_XR0 Chip              OK         53 degrees C / 127 degrees F
      FPC 8 XL_XR1 TSen              OK         46 degrees C / 114 degrees F
      FPC 8 XL_XR1 Chip              OK         52 degrees C / 125 degrees F
      FPC 8 XQ TSen                  OK         46 degrees C / 114 degrees F
      FPC 8 XQ Chip                  OK         46 degrees C / 114 degrees F
      FPC 8 XQ_XR0 TSen              OK         46 degrees C / 114 degrees F
      FPC 8 XQ_XR0 Chip              OK         59 degrees C / 138 degrees F
      FPC 8 XQ_XR1 TSen              OK         46 degrees C / 114 degrees F
      FPC 8 XQ_XR1 Chip              OK         57 degrees C / 134 degrees F
      FPC 8 XM 0 TSen                OK         52 degrees C / 125 degrees F
      FPC 8 XM 0 Chip                OK         61 degrees C / 141 degrees F
      FPC 8 XM 1 TSen                OK         52 degrees C / 125 degrees F
      FPC 8 XM 1 Chip                OK         47 degrees C / 116 degrees F
      FPC 8 PLX PCIe Switch TSe      OK         52 degrees C / 125 degrees F
      FPC 8 PLX PCIe Switch Chi      OK         63 degrees C / 145 degrees F
      FPC 9 Intake                   OK         31 degrees C / 87 degrees F
      FPC 9 Exhaust A                OK         34 degrees C / 93 degrees F
      FPC 9 Exhaust B                OK         35 degrees C / 95 degrees F
FPC 9 QX 0 TSen                OK         42 degrees C / 107 degrees F
      FPC 9 QX 0 Chip                OK         45 degrees C / 113 degrees F
      FPC 9 LU 0 TCAM TSen           OK         42 degrees C / 107 degrees F
      FPC 9 LU 0 TCAM Chip           OK         41 degrees C / 105 degrees F
      FPC 9 LU 0 TSen                OK         42 degrees C / 107 degrees F
      FPC 9 LU 0 Chip                OK         43 degrees C / 109 degrees F
      FPC 9 MQ 0 TSen                OK         42 degrees C / 107 degrees F
      FPC 9 MQ 0 Chip                OK         43 degrees C / 109 degrees F
      FPC 9 QX 1 TSen                OK         38 degrees C / 100 degrees F
      FPC 9 QX 1 Chip                OK         40 degrees C / 104 degrees F
      FPC 9 LU 1 TCAM TSen           OK         38 degrees C / 100 degrees F
      FPC 9 LU 1 TCAM Chip           OK         38 degrees C / 100 degrees F
      FPC 9 LU 1 TSen                OK         38 degrees C / 100 degrees F
      FPC 9 LU 1 Chip                OK         41 degrees C / 105 degrees F
      FPC 9 MQ 1 TSen                OK         38 degrees C / 100 degrees F
      FPC 9 MQ 1 Chip                OK         41 degrees C / 105 degrees F
      FPC 10 Intake                  OK         35 degrees C / 95 degrees F
      FPC 10 Exhaust A               OK         51 degrees C / 123 degrees F
```

```
      FPC 10 Exhaust B              OK         46 degrees C / 114 degrees F
      FPC 10 XL TSen                OK         42 degrees C / 107 degrees F
      FPC 10 XL Chip                OK         44 degrees C / 111 degrees F
      FPC 10 XL_XR0 TSen            OK         42 degrees C / 107 degrees F
      FPC 10 XL_XR0 Chip            OK         47 degrees C / 116 degrees F
      FPC 10 XL_XR1 TSen            OK         42 degrees C / 107 degrees F
      FPC 10 XL_XR1 Chip            OK         48 degrees C / 118 degrees F
      FPC 10 XQ TSen                OK         42 degrees C / 107 degrees F
      FPC 10 XQ Chip                OK         46 degrees C / 114 degrees F
      FPC 10 XQ_XR0 TSen            OK         42 degrees C / 107 degrees F
      FPC 10 XQ_XR0 Chip            OK         57 degrees C / 134 degrees F
      FPC 10 XQ_XR1 TSen            OK         42 degrees C / 107 degrees F
      FPC 10 XQ_XR1 Chip            OK         53 degrees C / 127 degrees F
      FPC 10 XM 0 TSen              OK         51 degrees C / 123 degrees F
      FPC 10 XM 0 Chip              OK         61 degrees C / 141 degrees F
      FPC 10 XM 1 TSen              OK         51 degrees C / 123 degrees F
      FPC 10 XM 1 Chip              OK         49 degrees C / 120 degrees F
      FPC 10 PLX PCIe Switch TSe    OK         51 degrees C / 123 degrees F
      FPC 10 PLX PCIe Switch Chi    OK         61 degrees C / 141 degrees F
      FPC 11 Intake                 OK         33 degrees C / 91 degrees F
      FPC 11 Exhaust A              OK         33 degrees C / 91 degrees F
      FPC 11 Exhaust B              OK         34 degrees C / 93 degrees F
      FPC 11 LU 0 TSen              OK         50 degrees C / 122 degrees F
      FPC 11 LU 0 Chip              OK         48 degrees C / 118 degrees F
      FPC 11 LU 1 TSen              OK         50 degrees C / 122 degrees F
      FPC 11 LU 1 Chip              OK         50 degrees C / 122 degrees F
      FPC 11 LU 2 TSen              OK         50 degrees C / 122 degrees F
      FPC 11 LU 2 Chip              OK         41 degrees C / 105 degrees F
      FPC 11 LU 3 TSen              OK         50 degrees C / 122 degrees F
      FPC 11 LU 3 Chip              OK         48 degrees C / 118 degrees F
      FPC 11 XM 0 TSen              OK         50 degrees C / 122 degrees F
      FPC 11 XM 0 Chip              OK         57 degrees C / 134 degrees F
      FPC 11 XM 1 TSen              OK         50 degrees C / 122 degrees F
      FPC 11 XM 1 Chip              OK         52 degrees C / 125 degrees F
      FPC 11 PLX Switch TSen        OK         50 degrees C / 122 degrees F
      FPC 11 PLX Switch Chip        OK         45 degrees C / 113 degrees F
Fans  Top Fan Tray Temp             OK         42 degrees C / 107 degrees F
      Top Tray Fan 1                OK         Spinning at high speed
 Top Tray Fan 2                OK         Spinning at high speed
      Top Tray Fan 3                OK         Spinning at high speed
      Top Tray Fan 4                OK         Spinning at high speed
      Top Tray Fan 5                OK         Spinning at high speed
      Top Tray Fan 6                OK         Spinning at high speed
```

```
      Top Tray Fan 7                OK          Spinning at high speed
      Top Tray Fan 8                OK          Spinning at high speed
      Top Tray Fan 9                OK          Spinning at high speed
      Top Tray Fan 10               OK          Spinning at high speed
      Top Tray Fan 11               OK          Spinning at high speed
      Top Tray Fan 12               OK          Spinning at high speed
      Bottom Fan Tray Temp          OK          33 degrees C / 91 degrees F
      Bottom Tray Fan 1             OK          Spinning at high speed
      Bottom Tray Fan 2             OK          Spinning at high speed
      Bottom Tray Fan 3             OK          Spinning at high speed
      Bottom Tray Fan 4             OK          Spinning at high speed
      Bottom Tray Fan 5             OK          Spinning at high speed
      Bottom Tray Fan 6             OK          Spinning at high speed
      Bottom Tray Fan 7             OK          Spinning at high speed
      Bottom Tray Fan 8             OK          Spinning at high speed
      Bottom Tray Fan 9             OK          Spinning at high speed
      Bottom Tray Fan 10            OK          Spinning at high speed
      Bottom Tray Fan 11            OK          Spinning at high speed
      Bottom Tray Fan 12            OK          Spinning at high speed
```

show chassis environment (MX2020 Router)

```
user@host> show chassis environment
Class Item                          Status     Measurement
Temp  PSM 0                         Absent
      PSM 1                         Absent
      PSM 2                         OK         41 degrees C / 105 degrees F
      PSM 3                         OK         39 degrees C / 102 degrees F
      PSM 4                         OK         39 degrees C / 102 degrees F
      PSM 5                         OK         38 degrees C / 100 degrees F
      PSM 6                         OK         38 degrees C / 100 degrees F
      PSM 7                         OK         38 degrees C / 100 degrees F
      PSM 8                         OK         37 degrees C / 98 degrees F
      PSM 9                         Absent
      PSM 10                        Absent
      PSM 11                        OK         47 degrees C / 116 degrees F
      PSM 12                        OK         45 degrees C / 113 degrees F
      PSM 13                        OK         44 degrees C / 111 degrees F
      PSM 14                        OK         44 degrees C / 111 degrees F
      PSM 15                        OK         43 degrees C / 109 degrees F
      PSM 16                        OK         42 degrees C / 107 degrees F
```

```
PSM 17                      OK          41 degrees C / 105 degrees F
PDM 0                       OK
PDM 1                       Absent
PDM 2                       Absent
PDM 3                       OK
CB 0 IntakeA-Zone0          OK          45 degrees C / 113 degrees F
CB 0 IntakeB-Zone1          OK          34 degrees C / 93 degrees F
CB 0 IntakeC-Zone0          OK          48 degrees C / 118 degrees F
CB 0 ExhaustA-Zone0         OK          45 degrees C / 113 degrees F
CB 0 ExhaustB-Zone1         OK          37 degrees C / 98 degrees F
CB 0 TCBC-Zone0             OK          41 degrees C / 105 degrees F
CB 1 IntakeA-Zone0          OK          46 degrees C / 114 degrees F
CB 1 IntakeB-Zone1          OK          42 degrees C / 107 degrees F
CB 1 IntakeC-Zone0          OK          49 degrees C / 120 degrees F
CB 1 ExhaustA-Zone0         OK          46 degrees C / 114 degrees F
CB 1 ExhaustB-Zone1         OK          41 degrees C / 105 degrees F
CB 1 TCBC-Zone0             OK          46 degrees C / 114 degrees F
SPMB 0 Intake               OK          33 degrees C / 91 degrees F
SPMB 1 Intake               OK          42 degrees C / 107 degrees F
Routing Engine 0            OK          35 degrees C / 95 degrees F
Routing Engine 0 CPU        OK          34 degrees C / 93 degrees F
Routing Engine 1            OK          44 degrees C / 111 degrees F
Routing Engine 1 CPU        OK          42 degrees C / 107 degrees F
SFB 0 Intake-Zone0          OK          55 degrees C / 131 degrees F
SFB 0 Exhaust-Zone1         OK          48 degrees C / 118 degrees F
SFB 0 IntakeA-Zone0         OK          50 degrees C / 122 degrees F
SFB 0 IntakeB-Zone1         OK          40 degrees C / 104 degrees F
SFB 0 Exhaust-Zone0         OK          52 degrees C / 125 degrees F
SFB 0 SFB-XF2-Zone1         OK          61 degrees C / 141 degrees F
SFB 0 SFB-XF1-Zone0         OK          69 degrees C / 156 degrees F
SFB 0 SFB-XF0-Zone0         OK          68 degrees C / 154 degrees F
SFB 1 Intake-Zone0          OK          56 degrees C / 132 degrees F
SFB 1 Exhaust-Zone1         OK          47 degrees C / 116 degrees F
SFB 1 IntakeA-Zone0         OK          51 degrees C / 123 degrees F
SFB 1 IntakeB-Zone1         OK          40 degrees C / 104 degrees F
SFB 1 Exhaust-Zone0         OK          51 degrees C / 123 degrees F
SFB 1 SFB-XF2-Zone1         OK          62 degrees C / 143 degrees F
SFB 1 SFB-XF1-Zone0         OK          67 degrees C / 152 degrees F
SFB 1 SFB-XF0-Zone0         OK          69 degrees C / 156 degrees F
SFB 2 Intake-Zone0          OK          56 degrees C / 132 degrees F
SFB 2 Exhaust-Zone1         OK          47 degrees C / 116 degrees F
SFB 2 IntakeA-Zone0         OK          51 degrees C / 123 degrees F
SFB 2 IntakeB-Zone1         OK          40 degrees C / 104 degrees F
```

```
SFB 2 Exhaust-Zone0          OK          53 degrees C / 127 degrees F
SFB 2 SFB-XF2-Zone1          OK          65 degrees C / 149 degrees F
SFB 2 SFB-XF1-Zone0          OK          69 degrees C / 156 degrees F
SFB 2 SFB-XF0-Zone0          OK          70 degrees C / 158 degrees F
SFB 3 Intake-Zone0           OK          57 degrees C / 134 degrees F
SFB 3 Exhaust-Zone1          OK          48 degrees C / 118 degrees F
SFB 3 IntakeA-Zone0          OK          52 degrees C / 125 degrees F
SFB 3 IntakeB-Zone1          OK          41 degrees C / 105 degrees F
SFB 3 Exhaust-Zone0          OK          53 degrees C / 127 degrees F
SFB 3 SFB-XF2-Zone1          OK          66 degrees C / 150 degrees F
SFB 3 SFB-XF1-Zone0          OK          69 degrees C / 156 degrees F
SFB 3 SFB-XF0-Zone0          OK          71 degrees C / 159 degrees F
SFB 4 Intake-Zone0           OK          58 degrees C / 136 degrees F
SFB 4 Exhaust-Zone1          OK          49 degrees C / 120 degrees F
SFB 4 IntakeA-Zone0          OK          54 degrees C / 129 degrees F
SFB 4 IntakeB-Zone1          OK          42 degrees C / 107 degrees F
SFB 4 Exhaust-Zone0          OK          53 degrees C / 127 degrees F
SFB 4 SFB-XF2-Zone1          OK          64 degrees C / 147 degrees F
SFB 4 SFB-XF1-Zone0          OK          68 degrees C / 154 degrees F
SFB 4 SFB-XF0-Zone0          OK          71 degrees C / 159 degrees F
SFB 5 Intake-Zone0           OK          58 degrees C / 136 degrees F
SFB 5 Exhaust-Zone1          OK          50 degrees C / 122 degrees F
SFB 5 IntakeA-Zone0          OK          53 degrees C / 127 degrees F
SFB 5 IntakeB-Zone1          OK          43 degrees C / 109 degrees F
SFB 5 Exhaust-Zone0          OK          54 degrees C / 129 degrees F
SFB 5 SFB-XF2-Zone1          OK          66 degrees C / 150 degrees F
SFB 5 SFB-XF1-Zone0          OK          69 degrees C / 156 degrees F
SFB 5 SFB-XF0-Zone0          OK          74 degrees C / 165 degrees F
SFB 6 Intake-Zone0           OK          58 degrees C / 136 degrees F
SFB 6 Exhaust-Zone1          OK          49 degrees C / 120 degrees F
SFB 6 IntakeA-Zone0          OK          53 degrees C / 127 degrees F
SFB 6 IntakeB-Zone1          OK          43 degrees C / 109 degrees F
SFB 6 Exhaust-Zone0          OK          53 degrees C / 127 degrees F
SFB 6 SFB-XF2-Zone1          OK          65 degrees C / 149 degrees F
SFB 6 SFB-XF1-Zone0          OK          68 degrees C / 154 degrees F
SFB 6 SFB-XF0-Zone0          OK          72 degrees C / 161 degrees F
SFB 7 Intake-Zone0           OK          57 degrees C / 134 degrees F
SFB 7 Exhaust-Zone1          OK          50 degrees C / 122 degrees F
SFB 7 IntakeA-Zone0          OK          53 degrees C / 127 degrees F
SFB 7 IntakeB-Zone1          OK          43 degrees C / 109 degrees F
SFB 7 Exhaust-Zone0          OK          54 degrees C / 129 degrees F
SFB 7 SFB-XF2-Zone1          OK          68 degrees C / 154 degrees F
SFB 7 SFB-XF1-Zone0          OK          69 degrees C / 156 degrees F
```

```
SFB 7 SFB-XF0-Zone0          OK          73 degrees C / 163 degrees F
FPC 0 Intake                 OK          41 degrees C / 105 degrees F
FPC 0 Exhaust A              OK          48 degrees C / 118 degrees F
FPC 0 Exhaust B              OK          62 degrees C / 143 degrees F
FPC 0 LU 0 TSen              OK          59 degrees C / 138 degrees F
FPC 0 LU 0 Chip              OK          62 degrees C / 143 degrees F
FPC 0 LU 1 TSen              OK          59 degrees C / 138 degrees F
FPC 0 LU 1 Chip              OK          64 degrees C / 147 degrees F
FPC 0 LU 2 TSen              OK          59 degrees C / 138 degrees F
FPC 0 LU 2 Chip              OK          53 degrees C / 127 degrees F
FPC 0 LU 3 TSen              OK          59 degrees C / 138 degrees F
FPC 0 LU 3 Chip              OK          53 degrees C / 127 degrees F
FPC 0 MQ 0 TSen              OK          47 degrees C / 116 degrees F
FPC 0 MQ 0 Chip              OK          49 degrees C / 120 degrees F
FPC 0 MQ 1 TSen              OK          47 degrees C / 116 degrees F
FPC 0 MQ 1 Chip              OK          51 degrees C / 123 degrees F
FPC 0 MQ 2 TSen              OK          47 degrees C / 116 degrees F
FPC 0 MQ 2 Chip              OK          44 degrees C / 111 degrees F
FPC 0 MQ 3 TSen              OK          47 degrees C / 116 degrees F
FPC 0 MQ 3 Chip              OK          45 degrees C / 113 degrees F
FPC 1 Intake                 OK          40 degrees C / 104 degrees F
FPC 1 Exhaust A              OK          49 degrees C / 120 degrees F
FPC 1 Exhaust B              OK          58 degrees C / 136 degrees F
FPC 1 LU 0 TSen              OK          55 degrees C / 131 degrees F
FPC 1 LU 0 Chip              OK          56 degrees C / 132 degrees F
FPC 1 LU 1 TSen              OK          55 degrees C / 131 degrees F
FPC 1 LU 1 Chip              OK          58 degrees C / 136 degrees F
FPC 1 LU 2 TSen              OK          55 degrees C / 131 degrees F
FPC 1 LU 2 Chip              OK          49 degrees C / 120 degrees F
FPC 1 LU 3 TSen              OK          55 degrees C / 131 degrees F
FPC 1 LU 3 Chip              OK          51 degrees C / 123 degrees F
FPC 1 MQ 0 TSen              OK          47 degrees C / 116 degrees F
FPC 1 MQ 0 Chip              OK          48 degrees C / 118 degrees F
FPC 1 MQ 1 TSen              OK          47 degrees C / 116 degrees F
FPC 1 MQ 1 Chip              OK          50 degrees C / 122 degrees F
FPC 1 MQ 2 TSen              OK          47 degrees C / 116 degrees F
FPC 1 MQ 2 Chip              OK          44 degrees C / 111 degrees F
FPC 1 MQ 3 TSen              OK          47 degrees C / 116 degrees F
FPC 1 MQ 3 Chip              OK          44 degrees C / 111 degrees F
FPC 2 Intake                 OK          39 degrees C / 102 degrees F
FPC 2 Exhaust A              OK          49 degrees C / 120 degrees F
FPC 2 Exhaust B              OK          61 degrees C / 141 degrees F
FPC 2 LU 0 TSen              OK          58 degrees C / 136 degrees F
```

```
        FPC 2 LU 0 Chip                 OK          60 degrees C / 140 degrees F
        FPC 2 LU 1 TSen                 OK          58 degrees C / 136 degrees F
        FPC 2 LU 1 Chip                 OK          65 degrees C / 149 degrees F
        FPC 2 LU 2 TSen                 OK          58 degrees C / 136 degrees F
        FPC 2 LU 2 Chip                 OK          51 degrees C / 123 degrees F
        FPC 2 LU 3 TSen                 OK          58 degrees C / 136 degrees F
        FPC 2 LU 3 Chip                 OK          53 degrees C / 127 degrees F
        FPC 2 MQ 0 TSen                 OK          47 degrees C / 116 degrees F
        FPC 2 MQ 0 Chip                 OK          50 degrees C / 122 degrees F
        FPC 2 MQ 1 TSen                 OK          47 degrees C / 116 degrees F
        FPC 2 MQ 1 Chip                 OK          52 degrees C / 125 degrees F
        FPC 2 MQ 2 TSen                 OK          47 degrees C / 116 degrees F
        FPC 2 MQ 2 Chip                 OK          45 degrees C / 113 degrees F
        FPC 2 MQ 3 TSen                 OK          47 degrees C / 116 degrees F
        FPC 2 MQ 3 Chip                 OK          46 degrees C / 114 degrees F
        FPC 3 Intake                    OK          40 degrees C / 104 degrees F
        FPC 3 Exhaust A                 OK          49 degrees C / 120 degrees F
        FPC 3 Exhaust B                 OK          61 degrees C / 141 degrees F
        FPC 3 LU 0 TSen                 OK          58 degrees C / 136 degrees F
        FPC 3 LU 0 Chip                 OK          61 degrees C / 141 degrees F
        FPC 3 LU 1 TSen                 OK          58 degrees C / 136 degrees F
        FPC 3 LU 1 Chip                 OK          62 degrees C / 143 degrees F
        FPC 3 LU 2 TSen                 OK          58 degrees C / 136 degrees F
        FPC 3 LU 2 Chip                 OK          51 degrees C / 123 degrees F
        FPC 3 LU 3 TSen                 OK          58 degrees C / 136 degrees F
        FPC 3 LU 3 Chip                 OK          53 degrees C / 127 degrees F
        FPC 3 MQ 0 TSen                 OK          48 degrees C / 118 degrees F
        FPC 3 MQ 0 Chip                 OK          50 degrees C / 122 degrees F
        FPC 3 MQ 1 TSen                 OK          48 degrees C / 118 degrees F
        FPC 3 MQ 1 Chip                 OK          54 degrees C / 129 degrees F
        FPC 3 MQ 2 TSen                 OK          48 degrees C / 118 degrees F
        FPC 3 MQ 2 Chip                 OK          45 degrees C / 113 degrees F
        FPC 3 MQ 3 TSen                 OK          48 degrees C / 118 degrees F
        FPC 3 MQ 3 Chip                 OK          48 degrees C / 118 degrees F
        FPC 4 Intake                    OK          40 degrees C / 104 degrees F
        FPC 4 Exhaust A                 OK          49 degrees C / 120 degrees F
        FPC 4 Exhaust B                 OK          62 degrees C / 143 degrees F
        FPC 4 LU 0 TSen                 OK          59 degrees C / 138 degrees F
        FPC 4 LU 0 Chip                 OK          62 degrees C / 143 degrees F
        FPC 4 LU 1 TSen                 OK          59 degrees C / 138 degrees F
        FPC 4 LU 1 Chip                 OK          65 degrees C / 149 degrees F
        FPC 4 LU 2 TSen                 OK          59 degrees C / 138 degrees F
        FPC 4 LU 2 Chip                 OK          51 degrees C / 123 degrees F
```

```
FPC 4 LU 3 TSen                 OK          59 degrees C / 138 degrees F
FPC 4 LU 3 Chip                 OK          53 degrees C / 127 degrees F
FPC 4 MQ 0 TSen                 OK          48 degrees C / 118 degrees F
FPC 4 MQ 0 Chip                 OK          52 degrees C / 125 degrees F
FPC 4 MQ 1 TSen                 OK          48 degrees C / 118 degrees F
FPC 4 MQ 1 Chip                 OK          53 degrees C / 127 degrees F
FPC 4 MQ 2 TSen                 OK          48 degrees C / 118 degrees F
FPC 4 MQ 2 Chip                 OK          46 degrees C / 114 degrees F
FPC 4 MQ 3 TSen                 OK          48 degrees C / 118 degrees F
FPC 4 MQ 3 Chip                 OK          47 degrees C / 116 degrees F
FPC 5 Intake                    OK          41 degrees C / 105 degrees F
FPC 5 Exhaust A                 OK          50 degrees C / 122 degrees F
FPC 5 Exhaust B                 OK          63 degrees C / 145 degrees F
FPC 5 LU 0 TSen                 OK          60 degrees C / 140 degrees F
FPC 5 LU 0 Chip                 OK          63 degrees C / 145 degrees F
FPC 5 LU 1 TSen                 OK          60 degrees C / 140 degrees F
FPC 5 LU 1 Chip                 OK          66 degrees C / 150 degrees F
FPC 5 LU 2 TSen                 OK          60 degrees C / 140 degrees F
FPC 5 LU 2 Chip                 OK          56 degrees C / 132 degrees F
FPC 5 LU 3 TSen                 OK          60 degrees C / 140 degrees F
FPC 5 LU 3 Chip                 OK          54 degrees C / 129 degrees F
FPC 5 MQ 0 TSen                 OK          49 degrees C / 120 degrees F
FPC 5 MQ 0 Chip                 OK          52 degrees C / 125 degrees F
FPC 5 MQ 1 TSen                 OK          49 degrees C / 120 degrees F
FPC 5 MQ 1 Chip                 OK          53 degrees C / 127 degrees F
FPC 5 MQ 2 TSen                 OK          49 degrees C / 120 degrees F
FPC 5 MQ 2 Chip                 OK          48 degrees C / 118 degrees F
FPC 5 MQ 3 TSen                 OK          49 degrees C / 120 degrees F
FPC 5 MQ 3 Chip                 OK          47 degrees C / 116 degrees F
FPC 6 Intake                    OK          42 degrees C / 107 degrees F
FPC 6 Exhaust A                 OK          51 degrees C / 123 degrees F
FPC 6 Exhaust B                 OK          63 degrees C / 145 degrees F
FPC 6 LU 0 TSen                 OK          61 degrees C / 141 degrees F
FPC 6 LU 0 Chip                 OK          64 degrees C / 147 degrees F
FPC 6 LU 1 TSen                 OK          61 degrees C / 141 degrees F
FPC 6 LU 1 Chip                 OK          66 degrees C / 150 degrees F
FPC 6 LU 2 TSen                 OK          61 degrees C / 141 degrees F
FPC 6 LU 2 Chip                 OK          56 degrees C / 132 degrees F
FPC 6 LU 3 TSen                 OK          61 degrees C / 141 degrees F
FPC 6 LU 3 Chip                 OK          56 degrees C / 132 degrees F
FPC 6 MQ 0 TSen                 OK          50 degrees C / 122 degrees F
FPC 6 MQ 0 Chip                 OK          56 degrees C / 132 degrees F
FPC 6 MQ 1 TSen                 OK          50 degrees C / 122 degrees F
```

```
FPC 6 MQ 1 Chip                 OK          59 degrees C / 138 degrees F
FPC 6 MQ 2 TSen                 OK          50 degrees C / 122 degrees F
FPC 6 MQ 2 Chip                 OK          49 degrees C / 120 degrees F
FPC 6 MQ 3 TSen                 OK          50 degrees C / 122 degrees F
FPC 6 MQ 3 Chip                 OK          49 degrees C / 120 degrees F
FPC 7 Intake                    OK          41 degrees C / 105 degrees F
FPC 7 Exhaust A                 OK          51 degrees C / 123 degrees F
FPC 7 Exhaust B                 OK          63 degrees C / 145 degrees F
FPC 7 LU 0 TSen                 OK          60 degrees C / 140 degrees F
FPC 7 LU 0 Chip                 OK          61 degrees C / 141 degrees F
FPC 7 LU 1 TSen                 OK          60 degrees C / 140 degrees F
FPC 7 LU 1 Chip                 OK          65 degrees C / 149 degrees F
FPC 7 LU 2 TSen                 OK          60 degrees C / 140 degrees F
FPC 7 LU 2 Chip                 OK          54 degrees C / 129 degrees F
FPC 7 LU 3 TSen                 OK          60 degrees C / 140 degrees F
FPC 7 LU 3 Chip                 OK          53 degrees C / 127 degrees F
FPC 7 MQ 0 TSen                 OK          50 degrees C / 122 degrees F
FPC 7 MQ 0 Chip                 OK          53 degrees C / 127 degrees F
FPC 7 MQ 1 TSen                 OK          50 degrees C / 122 degrees F
FPC 7 MQ 1 Chip                 OK          54 degrees C / 129 degrees F
FPC 7 MQ 2 TSen                 OK          50 degrees C / 122 degrees F
FPC 7 MQ 2 Chip                 OK          47 degrees C / 116 degrees F
FPC 7 MQ 3 TSen                 OK          50 degrees C / 122 degrees F
FPC 7 MQ 3 Chip                 OK          47 degrees C / 116 degrees F
FPC 8 Intake                    OK          41 degrees C / 105 degrees F
FPC 8 Exhaust A                 OK          50 degrees C / 122 degrees F
FPC 8 Exhaust B                 OK          62 degrees C / 143 degrees F
FPC 8 LU 0 TSen                 OK          59 degrees C / 138 degrees F
FPC 8 LU 0 Chip                 OK          62 degrees C / 143 degrees F
FPC 8 LU 1 TSen                 OK          59 degrees C / 138 degrees F
FPC 8 LU 1 Chip                 OK          64 degrees C / 147 degrees F
FPC 8 LU 2 TSen                 OK          59 degrees C / 138 degrees F
FPC 8 LU 2 Chip                 OK          55 degrees C / 131 degrees F
FPC 8 LU 3 TSen                 OK          59 degrees C / 138 degrees F
FPC 8 LU 3 Chip                 OK          54 degrees C / 129 degrees F
FPC 8 MQ 0 TSen                 OK          49 degrees C / 120 degrees F
FPC 8 MQ 0 Chip                 OK          51 degrees C / 123 degrees F
FPC 8 MQ 1 TSen                 OK          49 degrees C / 120 degrees F
FPC 8 MQ 1 Chip                 OK          52 degrees C / 125 degrees F
FPC 8 MQ 2 TSen                 OK          49 degrees C / 120 degrees F
FPC 8 MQ 2 Chip                 OK          46 degrees C / 114 degrees F
FPC 8 MQ 3 TSen                 OK          49 degrees C / 120 degrees F
FPC 8 MQ 3 Chip                 OK          47 degrees C / 116 degrees F
```

```
        FPC 9 Intake                OK          42 degrees C / 107 degrees F
        FPC 9 Exhaust A             OK          51 degrees C / 123 degrees F
        FPC 9 Exhaust B             OK          63 degrees C / 145 degrees F
        FPC 9 LU 0 TSen             OK          60 degrees C / 140 degrees F
        FPC 9 LU 0 Chip             OK          65 degrees C / 149 degrees F
        FPC 9 LU 1 TSen             OK          60 degrees C / 140 degrees F
        FPC 9 LU 1 Chip             OK          67 degrees C / 152 degrees F
        FPC 9 LU 2 TSen             OK          60 degrees C / 140 degrees F
        FPC 9 LU 2 Chip             OK          54 degrees C / 129 degrees F
        FPC 9 LU 3 TSen             OK          60 degrees C / 140 degrees F
        FPC 9 LU 3 Chip             OK          54 degrees C / 129 degrees F
        FPC 9 MQ 0 TSen             OK          51 degrees C / 123 degrees F
        FPC 9 MQ 0 Chip             OK          55 degrees C / 131 degrees F
        FPC 9 MQ 1 TSen             OK          51 degrees C / 123 degrees F
        FPC 9 MQ 1 Chip             OK          59 degrees C / 138 degrees F
        FPC 9 MQ 2 TSen             OK          51 degrees C / 123 degrees F
        FPC 9 MQ 2 Chip             OK          49 degrees C / 120 degrees F
        FPC 9 MQ 3 TSen             OK          51 degrees C / 123 degrees F
        FPC 9 MQ 3 Chip             OK          49 degrees C / 120 degrees F
        FPC 10 Intake               OK          44 degrees C / 111 degrees F
        FPC 10 Exhaust A            OK          49 degrees C / 120 degrees F
        FPC 10 Exhaust B            OK          55 degrees C / 131 degrees F
        FPC 10 LU 0 TSen            OK          54 degrees C / 129 degrees F
        FPC 10 LU 0 Chip            OK          55 degrees C / 131 degrees F
        FPC 10 LU 1 TSen            OK          54 degrees C / 129 degrees F
        FPC 10 LU 1 Chip            OK          59 degrees C / 138 degrees F
        FPC 10 LU 2 TSen            OK          54 degrees C / 129 degrees F
        FPC 10 LU 2 Chip            OK          52 degrees C / 125 degrees F
        FPC 10 LU 3 TSen            OK          54 degrees C / 129 degrees F
        FPC 10 LU 3 Chip            OK          51 degrees C / 123 degrees F
        FPC 10 MQ 0 TSen            OK          48 degrees C / 118 degrees F
        FPC 10 MQ 0 Chip            OK          49 degrees C / 120 degrees F
        FPC 10 MQ 1 TSen            OK          48 degrees C / 118 degrees F
        FPC 10 MQ 1 Chip            OK          52 degrees C / 125 degrees F
        FPC 10 MQ 2 TSen            OK          48 degrees C / 118 degrees F
        FPC 10 MQ 2 Chip            OK          47 degrees C / 116 degrees F
        FPC 10 MQ 3 TSen            OK          48 degrees C / 118 degrees F
        FPC 10 MQ 3 Chip            OK          47 degrees C / 116 degrees F
        FPC 11 Intake               OK          30 degrees C / 86 degrees F
        FPC 11 Exhaust A            OK          35 degrees C / 95 degrees F
        FPC 11 Exhaust B            OK          30 degrees C / 86 degrees F
        FPC 11 LU 0 TSen            OK          57 degrees C / 134 degrees F
        FPC 11 LU 0 Chip            OK          58 degrees C / 136 degrees F
```

```
    FPC 11 LU 1 TSen              OK          57 degrees C / 134 degrees F
    FPC 11 LU 1 Chip              OK          62 degrees C / 143 degrees F
    FPC 11 LU 2 TSen              OK          57 degrees C / 134 degrees F
    FPC 11 LU 2 Chip              OK          53 degrees C / 127 degrees F
    FPC 11 LU 3 TSen              OK          57 degrees C / 134 degrees F
    FPC 11 LU 3 Chip              OK          54 degrees C / 129 degrees F
    FPC 11 MQ 0 TSen              OK          52 degrees C / 125 degrees F
    FPC 11 MQ 0 Chip              OK          52 degrees C / 125 degrees F
    FPC 11 MQ 1 TSen              OK          52 degrees C / 125 degrees F
    FPC 11 MQ 1 Chip              OK          57 degrees C / 134 degrees F
    FPC 11 MQ 2 TSen              OK          52 degrees C / 125 degrees F
    FPC 11 MQ 2 Chip              OK          48 degrees C / 118 degrees F
    FPC 11 MQ 3 TSen              OK          52 degrees C / 125 degrees F
    FPC 11 MQ 3 Chip              OK          52 degrees C / 125 degrees F
    FPC 12 Intake                 OK          40 degrees C / 104 degrees F
    FPC 12 Exhaust A              OK          47 degrees C / 116 degrees F
    FPC 12 Exhaust B              OK          52 degrees C / 125 degrees F
    FPC 12 LU 0 TSen              OK          51 degrees C / 123 degrees F
    FPC 12 LU 0 Chip              OK          52 degrees C / 125 degrees F
    FPC 12 LU 1 TSen              OK          51 degrees C / 123 degrees F
    FPC 12 LU 1 Chip              OK          55 degrees C / 131 degrees F
    FPC 12 LU 2 TSen              OK          51 degrees C / 123 degrees F
    FPC 12 LU 2 Chip              OK          47 degrees C / 116 degrees F
    FPC 12 LU 3 TSen              OK          51 degrees C / 123 degrees F
    FPC 12 LU 3 Chip              OK          50 degrees C / 122 degrees F
    FPC 12 MQ 0 TSen              OK          46 degrees C / 114 degrees F
    FPC 12 MQ 0 Chip              OK          46 degrees C / 114 degrees F
    FPC 12 MQ 1 TSen              OK          46 degrees C / 114 degrees F
    FPC 12 MQ 1 Chip              OK          50 degrees C / 122 degrees F
    FPC 12 MQ 2 TSen              OK          46 degrees C / 114 degrees F
    FPC 12 MQ 2 Chip              OK          44 degrees C / 111 degrees F
    FPC 12 MQ 3 TSen              OK          46 degrees C / 114 degrees F
    FPC 12 MQ 3 Chip              OK          46 degrees C / 114 degrees F
    FPC 13 Intake                 OK          40 degrees C / 104 degrees F
    FPC 13 Exhaust A              OK          48 degrees C / 118 degrees F
    FPC 13 Exhaust B              OK          52 degrees C / 125 degrees F
    FPC 13 LU 0 TSen              OK          51 degrees C / 123 degrees F
    FPC 13 LU 0 Chip              OK          52 degrees C / 125 degrees F
    FPC 13 LU 1 TSen              OK          51 degrees C / 123 degrees F
    FPC 13 LU 1 Chip              OK          55 degrees C / 131 degrees F
    FPC 13 LU 2 TSen              OK          51 degrees C / 123 degrees F
    FPC 13 LU 2 Chip              OK          48 degrees C / 118 degrees F
    FPC 13 LU 3 TSen              OK          51 degrees C / 123 degrees F
```

```
FPC 13 LU 3 Chip              OK          48 degrees C / 118 degrees F
FPC 13 MQ 0 TSen              OK          46 degrees C / 114 degrees F
FPC 13 MQ 0 Chip              OK          46 degrees C / 114 degrees F
FPC 13 MQ 1 TSen              OK          46 degrees C / 114 degrees F
FPC 13 MQ 1 Chip              OK          50 degrees C / 122 degrees F
FPC 13 MQ 2 TSen              OK          46 degrees C / 114 degrees F
FPC 13 MQ 2 Chip              OK          44 degrees C / 111 degrees F
FPC 13 MQ 3 TSen              OK          46 degrees C / 114 degrees F
FPC 13 MQ 3 Chip              OK          46 degrees C / 114 degrees F
FPC 14 Intake                 OK          40 degrees C / 104 degrees F
FPC 14 Exhaust A              OK          50 degrees C / 122 degrees F
FPC 14 Exhaust B              OK          51 degrees C / 123 degrees F
FPC 14 LU 0 TSen              OK          50 degrees C / 122 degrees F
FPC 14 LU 0 Chip              OK          50 degrees C / 122 degrees F
FPC 14 LU 1 TSen              OK          50 degrees C / 122 degrees F
FPC 14 LU 1 Chip              OK          54 degrees C / 129 degrees F
FPC 14 LU 2 TSen              OK          50 degrees C / 122 degrees F
FPC 14 LU 2 Chip              OK          47 degrees C / 116 degrees F
FPC 14 LU 3 TSen              OK          50 degrees C / 122 degrees F
FPC 14 LU 3 Chip              OK          49 degrees C / 120 degrees F
FPC 14 MQ 0 TSen              OK          47 degrees C / 116 degrees F
FPC 14 MQ 0 Chip              OK          46 degrees C / 114 degrees F
FPC 14 MQ 1 TSen              OK          47 degrees C / 116 degrees F
FPC 14 MQ 1 Chip              OK          51 degrees C / 123 degrees F
FPC 14 MQ 2 TSen              OK          47 degrees C / 116 degrees F
FPC 14 MQ 2 Chip              OK          45 degrees C / 113 degrees F
FPC 14 MQ 3 TSen              OK          47 degrees C / 116 degrees F
FPC 14 MQ 3 Chip              OK          48 degrees C / 118 degrees F
FPC 15 Intake                 OK          44 degrees C / 111 degrees F
FPC 15 Exhaust A              OK          49 degrees C / 120 degrees F
FPC 15 Exhaust B              OK          60 degrees C / 140 degrees F
FPC 15 LU 0 TSen              OK          50 degrees C / 122 degrees F
FPC 15 LU 0 Chip              OK          56 degrees C / 132 degrees F
FPC 15 LU 1 TSen              OK          50 degrees C / 122 degrees F
FPC 15 LU 1 Chip              OK          50 degrees C / 122 degrees F
FPC 15 LU 2 TSen              OK          50 degrees C / 122 degrees F
FPC 15 LU 2 Chip              OK          58 degrees C / 136 degrees F
FPC 15 LU 3 TSen              OK          50 degrees C / 122 degrees F
FPC 15 LU 3 Chip              OK          63 degrees C / 145 degrees F
FPC 15 XM 0 TSen              OK          50 degrees C / 122 degrees F
FPC 15 XM 0 Chip              OK          56 degrees C / 132 degrees F
FPC 15 XF 0 TSen              OK          50 degrees C / 122 degrees F
FPC 15 XF 0 Chip              OK          68 degrees C / 154 degrees F
```

```
FPC 15 PLX Switch TSen          OK          50 degrees C / 122 degrees F
FPC 15 PLX Switch Chip          OK          56 degrees C / 132 degrees F
FPC 16 Intake                   OK          42 degrees C / 107 degrees F
FPC 16 Exhaust A                OK          51 degrees C / 123 degrees F
FPC 16 Exhaust B                OK          53 degrees C / 127 degrees F
FPC 16 LU 0 TSen                OK          51 degrees C / 123 degrees F
FPC 16 LU 0 Chip                OK          52 degrees C / 125 degrees F
FPC 16 LU 1 TSen                OK          51 degrees C / 123 degrees F
FPC 16 LU 1 Chip                OK          55 degrees C / 131 degrees F
FPC 16 LU 2 TSen                OK          51 degrees C / 123 degrees F
FPC 16 LU 2 Chip                OK          48 degrees C / 118 degrees F
FPC 16 LU 3 TSen                OK          51 degrees C / 123 degrees F
FPC 16 LU 3 Chip                OK          49 degrees C / 120 degrees F
FPC 16 MQ 0 TSen                OK          49 degrees C / 120 degrees F
FPC 16 MQ 0 Chip                OK          48 degrees C / 118 degrees F
FPC 16 MQ 1 TSen                OK          49 degrees C / 120 degrees F
FPC 16 MQ 1 Chip                OK          53 degrees C / 127 degrees F
FPC 16 MQ 2 TSen                OK          49 degrees C / 120 degrees F
FPC 16 MQ 2 Chip                OK          46 degrees C / 114 degrees F
FPC 16 MQ 3 TSen                OK          49 degrees C / 120 degrees F
FPC 16 MQ 3 Chip                OK          49 degrees C / 120 degrees F
FPC 17 Intake                   OK          43 degrees C / 109 degrees F
FPC 17 Exhaust A                OK          51 degrees C / 123 degrees F
FPC 17 Exhaust B                OK          55 degrees C / 131 degrees F
FPC 17 LU 0 TSen                OK          54 degrees C / 129 degrees F
FPC 17 LU 0 Chip                OK          57 degrees C / 134 degrees F
FPC 17 LU 1 TSen                OK          54 degrees C / 129 degrees F
FPC 17 LU 1 Chip                OK          60 degrees C / 140 degrees F
FPC 17 LU 2 TSen                OK          54 degrees C / 129 degrees F
FPC 17 LU 2 Chip                OK          53 degrees C / 127 degrees F
FPC 17 LU 3 TSen                OK          54 degrees C / 129 degrees F
FPC 17 LU 3 Chip                OK          53 degrees C / 127 degrees F
FPC 17 MQ 0 TSen                OK          49 degrees C / 120 degrees F
FPC 17 MQ 0 Chip                OK          50 degrees C / 122 degrees F
FPC 17 MQ 1 TSen                OK          49 degrees C / 120 degrees F
FPC 17 MQ 1 Chip                OK          54 degrees C / 129 degrees F
FPC 17 MQ 2 TSen                OK          49 degrees C / 120 degrees F
FPC 17 MQ 2 Chip                OK          47 degrees C / 116 degrees F
FPC 17 MQ 3 TSen                OK          49 degrees C / 120 degrees F
FPC 17 MQ 3 Chip                OK          51 degrees C / 123 degrees F
FPC 18 Intake                   OK          44 degrees C / 111 degrees F
FPC 18 Exhaust A                OK          53 degrees C / 127 degrees F
FPC 18 Exhaust B                OK          57 degrees C / 134 degrees F
```

```
FPC 18 LU 0 TSen                OK          56 degrees C / 132 degrees F
FPC 18 LU 0 Chip                OK          57 degrees C / 134 degrees F
FPC 18 LU 1 TSen                OK          56 degrees C / 132 degrees F
FPC 18 LU 1 Chip                OK          62 degrees C / 143 degrees F
FPC 18 LU 2 TSen                OK          56 degrees C / 132 degrees F
FPC 18 LU 2 Chip                OK          53 degrees C / 127 degrees F
FPC 18 LU 3 TSen                OK          56 degrees C / 132 degrees F
FPC 18 LU 3 Chip                OK          55 degrees C / 131 degrees F
FPC 18 MQ 0 TSen                OK          51 degrees C / 123 degrees F
FPC 18 MQ 0 Chip                OK          54 degrees C / 129 degrees F
FPC 18 MQ 1 TSen                OK          51 degrees C / 123 degrees F
FPC 18 MQ 1 Chip                OK          58 degrees C / 136 degrees F
FPC 18 MQ 2 TSen                OK          51 degrees C / 123 degrees F
FPC 18 MQ 2 Chip                OK          50 degrees C / 122 degrees F
FPC 18 MQ 3 TSen                OK          51 degrees C / 123 degrees F
FPC 18 MQ 3 Chip                OK          53 degrees C / 127 degrees F
FPC 19 Intake                   OK          48 degrees C / 118 degrees F
FPC 19 Exhaust A                OK          56 degrees C / 132 degrees F
FPC 19 Exhaust B                OK          64 degrees C / 147 degrees F
FPC 19 LU 0 TSen                OK          63 degrees C / 145 degrees F
FPC 19 LU 0 Chip                OK          64 degrees C / 147 degrees F
FPC 19 LU 1 TSen                OK          63 degrees C / 145 degrees F
FPC 19 LU 1 Chip                OK          70 degrees C / 158 degrees F
FPC 19 LU 2 TSen                OK          63 degrees C / 145 degrees F
FPC 19 LU 2 Chip                OK          61 degrees C / 141 degrees F
FPC 19 LU 3 TSen                OK          63 degrees C / 145 degrees F
FPC 19 LU 3 Chip                OK          62 degrees C / 143 degrees F
FPC 19 MQ 0 TSen                OK          56 degrees C / 132 degrees F
FPC 19 MQ 0 Chip                OK          60 degrees C / 140 degrees F
FPC 19 MQ 1 TSen                OK          56 degrees C / 132 degrees F
FPC 19 MQ 1 Chip                OK          62 degrees C / 143 degrees F
FPC 19 MQ 2 TSen                OK          56 degrees C / 132 degrees F
FPC 19 MQ 2 Chip                OK          56 degrees C / 132 degrees F
FPC 19 MQ 3 TSen                OK          56 degrees C / 132 degrees F
FPC 19 MQ 3 Chip                OK          57 degrees C / 134 degrees F
ADC 0 Intake                    OK          40 degrees C / 104 degrees F
ADC 0 Exhaust                   OK          52 degrees C / 125 degrees F
ADC 0 ADC-XF1                   OK          59 degrees C / 138 degrees F
ADC 0 ADC-XF0                   OK          66 degrees C / 150 degrees F
ADC 1 Intake                    OK          38 degrees C / 100 degrees F
ADC 1 Exhaust                   OK          50 degrees C / 122 degrees F
ADC 1 ADC-XF1                   OK          59 degrees C / 138 degrees F
ADC 1 ADC-XF0                   OK          63 degrees C / 145 degrees F
```

```
ADC 2 Intake                OK          37 degrees C / 98 degrees F
ADC 2 Exhaust               OK          52 degrees C / 125 degrees F
ADC 2 ADC-XF1               OK          53 degrees C / 127 degrees F
ADC 2 ADC-XF0               OK          61 degrees C / 141 degrees F
ADC 3 Intake                OK          40 degrees C / 104 degrees F
ADC 3 Exhaust               OK          51 degrees C / 123 degrees F
ADC 3 ADC-XF1               OK          61 degrees C / 141 degrees F
ADC 3 ADC-XF0               OK          64 degrees C / 147 degrees F
ADC 4 Intake                OK          39 degrees C / 102 degrees F
ADC 4 Exhaust               OK          51 degrees C / 123 degrees F
ADC 4 ADC-XF1               OK          60 degrees C / 140 degrees F
ADC 4 ADC-XF0               OK          63 degrees C / 145 degrees F
ADC 5 Intake                OK          38 degrees C / 100 degrees F
ADC 5 Exhaust               OK          54 degrees C / 129 degrees F
ADC 5 ADC-XF1               OK          56 degrees C / 132 degrees F
ADC 5 ADC-XF0               OK          67 degrees C / 152 degrees F
ADC 6 Intake                OK          39 degrees C / 102 degrees F
ADC 6 Exhaust               OK          52 degrees C / 125 degrees F
ADC 6 ADC-XF1               OK          59 degrees C / 138 degrees F
ADC 6 ADC-XF0               OK          66 degrees C / 150 degrees F
ADC 7 Intake                OK          39 degrees C / 102 degrees F
ADC 7 Exhaust               OK          54 degrees C / 129 degrees F
ADC 7 ADC-XF1               OK          62 degrees C / 143 degrees F
ADC 7 ADC-XF0               OK          70 degrees C / 158 degrees F
ADC 8 Intake                OK          39 degrees C / 102 degrees F
ADC 8 Exhaust               OK          52 degrees C / 125 degrees F
ADC 8 ADC-XF1               OK          61 degrees C / 141 degrees F
ADC 8 ADC-XF0               OK          65 degrees C / 149 degrees F
ADC 9 Intake                OK          41 degrees C / 105 degrees F
ADC 9 Exhaust               OK          51 degrees C / 123 degrees F
ADC 9 ADC-XF1               OK          63 degrees C / 145 degrees F
ADC 9 ADC-XF0               OK          63 degrees C / 145 degrees F
ADC 10 Intake               OK          48 degrees C / 118 degrees F
ADC 10 Exhaust              OK          53 degrees C / 127 degrees F
ADC 10 ADC-XF1              OK          67 degrees C / 152 degrees F
ADC 10 ADC-XF0              OK          66 degrees C / 150 degrees F
ADC 12 Intake               OK          49 degrees C / 120 degrees F
ADC 12 Exhaust              OK          54 degrees C / 129 degrees F
ADC 12 ADC-XF1              OK          67 degrees C / 152 degrees F
ADC 12 ADC-XF0              OK          67 degrees C / 152 degrees F
ADC 13 Intake               OK          49 degrees C / 120 degrees F
ADC 13 Exhaust              OK          57 degrees C / 134 degrees F
ADC 13 ADC-XF1              OK          66 degrees C / 150 degrees F
```

```
       ADC 13 ADC-XF0              OK          69 degrees C / 156 degrees F
       ADC 14 Intake               OK          51 degrees C / 123 degrees F
       ADC 14 Exhaust              OK          59 degrees C / 138 degrees F
       ADC 14 ADC-XF1              OK          69 degrees C / 156 degrees F
       ADC 14 ADC-XF0              OK          74 degrees C / 165 degrees F
       ADC 15 Intake               OK          50 degrees C / 122 degrees F
       ADC 15 Exhaust              OK          59 degrees C / 138 degrees F
       ADC 15 ADC-XF1              OK          68 degrees C / 154 degrees F
       ADC 15 ADC-XF0              OK          69 degrees C / 156 degrees F
       ADC 16 Intake               OK          52 degrees C / 125 degrees F
       ADC 16 Exhaust              OK          58 degrees C / 136 degrees F
       ADC 16 ADC-XF1              OK          68 degrees C / 154 degrees F
       ADC 16 ADC-XF0              OK          70 degrees C / 158 degrees F
       ADC 17 Intake               OK          52 degrees C / 125 degrees F
       ADC 17 Exhaust              OK          59 degrees C / 138 degrees F
       ADC 17 ADC-XF1              OK          69 degrees C / 156 degrees F
       ADC 17 ADC-XF0              OK          71 degrees C / 159 degrees F
       ADC 18 Intake               OK          53 degrees C / 127 degrees F
       ADC 18 Exhaust              OK          59 degrees C / 138 degrees F
       ADC 18 ADC-XF1              OK          68 degrees C / 154 degrees F
       ADC 18 ADC-XF0              OK          73 degrees C / 163 degrees F
       ADC 19 Intake               OK          50 degrees C / 122 degrees F
       ADC 19 Exhaust              OK          59 degrees C / 138 degrees F
       ADC 19 ADC-XF1              OK          68 degrees C / 154 degrees F
       ADC 19 ADC-XF0              OK          72 degrees C / 161 degrees F
Fans   Fan Tray 0 Fan 1            OK          7440 RPM
       Fan Tray 0 Fan 2            OK          7200 RPM
       Fan Tray 0 Fan 3            OK          6960 RPM
       Fan Tray 0 Fan 4            OK          7200 RPM
       Fan Tray 0 Fan 5            OK          7080 RPM
       Fan Tray 0 Fan 6            OK          6840 RPM
       Fan Tray 1 Fan 1            OK          6840 RPM
       Fan Tray 1 Fan 2            OK          6960 RPM
       Fan Tray 1 Fan 3            OK          6960 RPM
       Fan Tray 1 Fan 4            OK          7080 RPM
       Fan Tray 1 Fan 5            OK          6960 RPM
       Fan Tray 1 Fan 6            OK          6960 RPM
       Fan Tray 2 Fan 1            OK          8640 RPM
       Fan Tray 2 Fan 2            OK          8640 RPM
       Fan Tray 2 Fan 3            OK          8760 RPM
       Fan Tray 2 Fan 4            OK          8760 RPM
       Fan Tray 2 Fan 5            OK          8640 RPM
       Fan Tray 2 Fan 6            OK          8640 RPM
```

```
      Fan Tray 3 Fan 1              OK          8520 RPM
      Fan Tray 3 Fan 2              OK          8520 RPM
      Fan Tray 3 Fan 3              OK          8640 RPM
      Fan Tray 3 Fan 4              OK          8640 RPM
      Fan Tray 3 Fan 5              OK          8520 RPM
      Fan Tray 3 Fan 6              OK          8520 RPM
```

show chassis environment (MX2020 Router with MPC5EQ and MPC6E)

```
Class Item                          Status      Measurement
Temp  PSM 0                         OK          32 degrees C / 89 degrees F
      PSM 1                         OK          32 degrees C / 89 degrees F
      PSM 2                         OK          32 degrees C / 89 degrees F
      PSM 3                         OK          32 degrees C / 89 degrees F
      PSM 4                         OK          32 degrees C / 89 degrees F
      PSM 5                         OK          33 degrees C / 91 degrees F
      PSM 6                         OK          32 degrees C / 89 degrees F
      PSM 7                         OK          32 degrees C / 89 degrees F
      PSM 8                         OK          32 degrees C / 89 degrees F
      PSM 9                         Absent
      PSM 10                        Absent
      PSM 11                        Absent
      PSM 12                        OK          33 degrees C / 91 degrees F
      PSM 13                        OK          33 degrees C / 91 degrees F
      PSM 14                        OK          34 degrees C / 93 degrees F
      PSM 15                        OK          34 degrees C / 93 degrees F
      PSM 16                        OK          33 degrees C / 91 degrees F
      PSM 17                        OK          33 degrees C / 91 degrees F
      PDM 0                         OK
      PDM 1                         OK
      PDM 2                         OK
      PDM 3                         OK
      CB 0 IntakeA-Zone0            OK          34 degrees C / 93 degrees F
      CB 0 IntakeB-Zone1            OK          26 degrees C / 78 degrees F
      CB 0 IntakeC-Zone0            OK          38 degrees C / 100 degrees F
      CB 0 ExhaustA-Zone0           OK          34 degrees C / 93 degrees F
      CB 0 ExhaustB-Zone1           OK          27 degrees C / 80 degrees F
      CB 0 TCBC-Zone0               OK          32 degrees C / 89 degrees F
      CB 1 IntakeA-Zone0            OK          24 degrees C / 75 degrees F
      CB 1 IntakeB-Zone1            OK          22 degrees C / 71 degrees F
      CB 1 IntakeC-Zone0            OK          34 degrees C / 93 degrees F
```

```
      CB 1 ExhaustA-Zone0            OK          31 degrees C / 87 degrees F
      CB 1 ExhaustB-Zone1            OK          24 degrees C / 75 degrees F
      CB 1 TCBC-Zone0                OK          27 degrees C / 80 degrees F
      SPMB 0 Intake                  OK          25 degrees C / 77 degrees F
      SPMB 1 Intake                  OK          23 degrees C / 73 degrees F
      Routing Engine 0               OK          28 degrees C / 82 degrees F
      Routing Engine 0 CPU           OK          25 degrees C / 77 degrees F
      Routing Engine 1               OK          25 degrees C / 77 degrees F
      Routing Engine 1 CPU           OK          24 degrees C / 75 degrees F
      SFB 0 Intake-Zone0             OK          45 degrees C / 113 degrees F
      SFB 0 Exhaust-Zone1            OK          34 degrees C / 93 degrees F
      SFB 0 IntakeA-Zone0            OK          32 degrees C / 89 degrees F
      SFB 0 IntakeB-Zone1            OK          28 degrees C / 82 degrees F
      SFB 0 Exhaust-Zone0            OK          36 degrees C / 96 degrees F
      SFB 0 SFB-XF2-Zone1            OK          46 degrees C / 114 degrees F
      SFB 0 SFB-XF1-Zone0            OK          48 degrees C / 118 degrees F
      SFB 0 SFB-XF0-Zone0            OK          60 degrees C / 140 degrees F
      SFB 1 Intake-Zone0             OK          44 degrees C / 111 degrees F
      SFB 1 Exhaust-Zone1            OK          34 degrees C / 93 degrees F
      SFB 1 IntakeA-Zone0            OK          35 degrees C / 95 degrees F
      SFB 1 IntakeB-Zone1            OK          27 degrees C / 80 degrees F
      SFB 1 Exhaust-Zone0            OK          37 degrees C / 98 degrees F
      SFB 1 SFB-XF2-Zone1            OK          47 degrees C / 116 degrees F
      SFB 1 SFB-XF1-Zone0            OK          49 degrees C / 120 degrees F
SFB 1 SFB-XF0-Zone0           OK          56 degrees C / 132 degrees F
      SFB 2 Intake-Zone0             OK          41 degrees C / 105 degrees F
      SFB 2 Exhaust-Zone1            OK          34 degrees C / 93 degrees F
      SFB 2 IntakeA-Zone0            OK          35 degrees C / 95 degrees F
      SFB 2 IntakeB-Zone1            OK          28 degrees C / 82 degrees F
      SFB 2 Exhaust-Zone0            OK          37 degrees C / 98 degrees F
      SFB 2 SFB-XF2-Zone1            OK          47 degrees C / 116 degrees F
      SFB 2 SFB-XF1-Zone0            OK          55 degrees C / 131 degrees F
      SFB 2 SFB-XF0-Zone0            OK          55 degrees C / 131 degrees F
      SFB 3 Intake-Zone0             OK          43 degrees C / 109 degrees F
      SFB 3 Exhaust-Zone1            OK          33 degrees C / 91 degrees F
      SFB 3 IntakeA-Zone0            OK          35 degrees C / 95 degrees F
      SFB 3 IntakeB-Zone1            OK          27 degrees C / 80 degrees F
      SFB 3 Exhaust-Zone0            OK          36 degrees C / 96 degrees F
      SFB 3 SFB-XF2-Zone1            OK          46 degrees C / 114 degrees F
      SFB 3 SFB-XF1-Zone0            OK          46 degrees C / 114 degrees F
      SFB 3 SFB-XF0-Zone0            OK          57 degrees C / 134 degrees F
      SFB 4 Intake-Zone0             OK          36 degrees C / 96 degrees F
      SFB 4 Exhaust-Zone1            OK          32 degrees C / 89 degrees F
```

```
      SFB 4 IntakeA-Zone0            OK         31 degrees C / 87 degrees F
      SFB 4 IntakeB-Zone1            OK         26 degrees C / 78 degrees F
      SFB 4 Exhaust-Zone0            OK         32 degrees C / 89 degrees F
      SFB 4 SFB-XF2-Zone1            OK         44 degrees C / 111 degrees F
      SFB 4 SFB-XF1-Zone0            OK         45 degrees C / 113 degrees F
      SFB 4 SFB-XF0-Zone0            OK         52 degrees C / 125 degrees F
      SFB 5 Intake-Zone0             OK         31 degrees C / 87 degrees F
      SFB 5 Exhaust-Zone1            OK         30 degrees C / 86 degrees F
      SFB 5 IntakeA-Zone0            OK         26 degrees C / 78 degrees F
      SFB 5 IntakeB-Zone1            OK         24 degrees C / 75 degrees F
      SFB 5 Exhaust-Zone0            OK         29 degrees C / 84 degrees F
      SFB 5 SFB-XF2-Zone1            OK         43 degrees C / 109 degrees F
      SFB 5 SFB-XF1-Zone0            OK         47 degrees C / 116 degrees F
      SFB 5 SFB-XF0-Zone0            OK         49 degrees C / 120 degrees F
      SFB 6 Intake-Zone0             OK         30 degrees C / 86 degrees F
      SFB 6 Exhaust-Zone1            OK         29 degrees C / 84 degrees F
      SFB 6 IntakeA-Zone0            OK         25 degrees C / 77 degrees F
      SFB 6 IntakeB-Zone1            OK         24 degrees C / 75 degrees F
      SFB 6 Exhaust-Zone0            OK         29 degrees C / 84 degrees F
      SFB 6 SFB-XF2-Zone1            OK         43 degrees C / 109 degrees F
      SFB 6 SFB-XF1-Zone0            OK         44 degrees C / 111 degrees F
      SFB 6 SFB-XF0-Zone0            OK         45 degrees C / 113 degrees F
      SFB 7 Intake-Zone0             OK         31 degrees C / 87 degrees F
      SFB 7 Exhaust-Zone1            OK         30 degrees C / 86 degrees F
      SFB 7 IntakeA-Zone0            OK         26 degrees C / 78 degrees F
      SFB 7 IntakeB-Zone1            OK         24 degrees C / 75 degrees F
      SFB 7 Exhaust-Zone0            OK         28 degrees C / 82 degrees F
      SFB 7 SFB-XF2-Zone1            OK         50 degrees C / 122 degrees F
      SFB 7 SFB-XF1-Zone0            OK         43 degrees C / 109 degrees F
      SFB 7 SFB-XF0-Zone0            OK         47 degrees C / 116 degrees F
      FPC 0 Intake                   OK         31 degrees C / 87 degrees F
      FPC 0 Exhaust A                OK         49 degrees C / 120 degrees F
      FPC 0 Exhaust B                OK         43 degrees C / 109 degrees F
      FPC 0 XL TSen                  OK         42 degrees C / 107 degrees F
      FPC 0 XL Chip                  OK         46 degrees C / 114 degrees F
      FPC 0 XL_XR0 TSen              OK         42 degrees C / 107 degrees F
      FPC 0 XL_XR0 Chip              OK         48 degrees C / 118 degrees F
  FPC 0 XL_XR1 TSen              OK         42 degrees C / 107 degrees F
      FPC 0 XL_XR1 Chip              OK         48 degrees C / 118 degrees F
      FPC 0 XQ TSen                  OK         42 degrees C / 107 degrees F
      FPC 0 XQ Chip                  OK         44 degrees C / 111 degrees F
      FPC 0 XQ_XR0 TSen              OK         42 degrees C / 107 degrees F
      FPC 0 XQ_XR0 Chip              OK         57 degrees C / 134 degrees F
```

```
FPC 0 XQ_XR1 TSen              OK          42 degrees C / 107 degrees F
FPC 0 XQ_XR1 Chip              OK          55 degrees C / 131 degrees F
FPC 0 XM 0 TSen                OK          48 degrees C / 118 degrees F
FPC 0 XM 0 Chip                OK          62 degrees C / 143 degrees F
FPC 0 XM 1 TSen                OK          48 degrees C / 118 degrees F
FPC 0 XM 1 Chip                OK          44 degrees C / 111 degrees F
FPC 0 PLX PCIe Switch TSe      OK          48 degrees C / 118 degrees F
FPC 0 PLX PCIe Switch Chi      OK          57 degrees C / 134 degrees F
FPC 1 Intake                   OK          29 degrees C / 84 degrees F
FPC 1 Exhaust A                OK          36 degrees C / 96 degrees F
FPC 1 Exhaust B                OK          44 degrees C / 111 degrees F
FPC 1 LU 0 TSen                OK          38 degrees C / 100 degrees F
FPC 1 LU 0 Chip                OK          45 degrees C / 113 degrees F
FPC 1 LU 1 TSen                OK          38 degrees C / 100 degrees F
FPC 1 LU 1 Chip                OK          38 degrees C / 100 degrees F
FPC 1 LU 2 TSen                OK          38 degrees C / 100 degrees F
FPC 1 LU 2 Chip                OK          42 degrees C / 107 degrees F
FPC 1 LU 3 TSen                OK          38 degrees C / 100 degrees F
FPC 1 LU 3 Chip                OK          47 degrees C / 116 degrees F
FPC 1 XM 0 TSen                OK          38 degrees C / 100 degrees F
FPC 1 XM 0 Chip                OK          44 degrees C / 111 degrees F
FPC 1 XF 0 TSen                OK          38 degrees C / 100 degrees F
FPC 1 XF 0 Chip                OK          54 degrees C / 129 degrees F
FPC 1 PLX Switch TSen          OK          38 degrees C / 100 degrees F
FPC 1 PLX Switch Chip          OK          41 degrees C / 105 degrees F
FPC 2 Intake                   OK          28 degrees C / 82 degrees F
FPC 2 Exhaust A                OK          28 degrees C / 82 degrees F
FPC 2 Exhaust B                OK          28 degrees C / 82 degrees F
FPC 2 LU 0 TSen                OK          40 degrees C / 104 degrees F
FPC 2 LU 0 Chip                OK          40 degrees C / 104 degrees F
FPC 2 LU 1 TSen                OK          40 degrees C / 104 degrees F
FPC 2 LU 1 Chip                OK          41 degrees C / 105 degrees F
FPC 2 LU 2 TSen                OK          40 degrees C / 104 degrees F
FPC 2 LU 2 Chip                OK          34 degrees C / 93 degrees F
FPC 2 LU 3 TSen                OK          40 degrees C / 104 degrees F
FPC 2 LU 3 Chip                OK          38 degrees C / 100 degrees F
FPC 2 XM 0 TSen                OK          40 degrees C / 104 degrees F
FPC 2 XM 0 Chip                OK          47 degrees C / 116 degrees F
FPC 2 XM 1 TSen                OK          40 degrees C / 104 degrees F
FPC 2 XM 1 Chip                OK          42 degrees C / 107 degrees F
FPC 2 PLX Switch TSen          OK          40 degrees C / 104 degrees F
FPC 2 PLX Switch Chip          OK          39 degrees C / 102 degrees F
FPC 3 Intake                   OK          27 degrees C / 80 degrees F
```

```
      FPC 3 Exhaust A               OK          38 degrees C / 100 degrees F
      FPC 3 Exhaust B               OK          31 degrees C / 87 degrees F
      FPC 3 QX 0 TSen               OK          38 degrees C / 100 degrees F
      FPC 3 QX 0 Chip               OK          42 degrees C / 107 degrees F
      FPC 3 LU 0 TCAM TSen          OK          38 degrees C / 100 degrees F
      FPC 3 LU 0 TCAM Chip          OK          43 degrees C / 109 degrees F
      FPC 3 LU 0 TSen               OK          38 degrees C / 100 degrees F
FPC 3 LU 0 Chip                OK          42 degrees C / 107 degrees F
      FPC 3 MQ 0 TSen               OK          38 degrees C / 100 degrees F
      FPC 3 MQ 0 Chip               OK          39 degrees C / 102 degrees F
      FPC 3 QX 1 TSen               OK          32 degrees C / 89 degrees F
      FPC 3 QX 1 Chip               OK          36 degrees C / 96 degrees F
      FPC 3 LU 1 TCAM TSen          OK          32 degrees C / 89 degrees F
      FPC 3 LU 1 TCAM Chip          OK          35 degrees C / 95 degrees F
      FPC 3 LU 1 TSen               OK          32 degrees C / 89 degrees F
      FPC 3 LU 1 Chip               OK          37 degrees C / 98 degrees F
      FPC 3 MQ 1 TSen               OK          32 degrees C / 89 degrees F
      FPC 3 MQ 1 Chip               OK          36 degrees C / 96 degrees F
      FPC 4 Intake                  OK          29 degrees C / 84 degrees F
      FPC 4 Exhaust A               OK          36 degrees C / 96 degrees F
      FPC 4 Exhaust B               OK          40 degrees C / 104 degrees F
      FPC 4 XL TSen                 OK          39 degrees C / 102 degrees F
      FPC 4 XL Chip                 OK          42 degrees C / 107 degrees F
      FPC 4 XL_XR0 TSen             OK          39 degrees C / 102 degrees F
      FPC 4 XL_XR0 Chip             OK          45 degrees C / 113 degrees F
      FPC 4 XL_XR1 TSen             OK          39 degrees C / 102 degrees F
      FPC 4 XL_XR1 Chip             OK          46 degrees C / 114 degrees F
      FPC 4 XQ TSen                 OK          39 degrees C / 102 degrees F
      FPC 4 XQ Chip                 OK          42 degrees C / 107 degrees F
      FPC 4 XQ_XR0 TSen             OK          39 degrees C / 102 degrees F
      FPC 4 XQ_XR0 Chip             OK          54 degrees C / 129 degrees F
      FPC 4 XQ_XR1 TSen             OK          39 degrees C / 102 degrees F
      FPC 4 XQ_XR1 Chip             OK          53 degrees C / 127 degrees F
      FPC 4 XM 0 TSen               OK          45 degrees C / 113 degrees F
      FPC 4 XM 0 Chip               OK          59 degrees C / 138 degrees F
      FPC 4 XM 1 TSen               OK          45 degrees C / 113 degrees F
      FPC 4 XM 1 Chip               OK          41 degrees C / 105 degrees F
      FPC 4 PLX PCIe Switch TSe     OK          45 degrees C / 113 degrees F
      FPC 4 PLX PCIe Switch Chi     OK          58 degrees C / 136 degrees F
      FPC 5 Intake                  OK          29 degrees C / 84 degrees F
      FPC 5 Exhaust A               OK          33 degrees C / 91 degrees F
      FPC 5 Exhaust B               OK          39 degrees C / 102 degrees F
      FPC 5 LU 0 TSen               OK          40 degrees C / 104 degrees F
```

```
      FPC 5 LU 0 Chip                 OK          40 degrees C / 104 degrees F
      FPC 5 LU 1 TSen                 OK          40 degrees C / 104 degrees F
      FPC 5 LU 1 Chip                 OK          45 degrees C / 113 degrees F
      FPC 5 LU 2 TSen                 OK          40 degrees C / 104 degrees F
      FPC 5 LU 2 Chip                 OK          40 degrees C / 104 degrees F
      FPC 5 LU 3 TSen                 OK          40 degrees C / 104 degrees F
      FPC 5 LU 3 Chip                 OK          46 degrees C / 114 degrees F
      FPC 5 MQ 0 TSen                 OK          32 degrees C / 89 degrees F
      FPC 5 MQ 0 Chip                 OK          33 degrees C / 91 degrees F
      FPC 5 MQ 1 TSen                 OK          32 degrees C / 89 degrees F
      FPC 5 MQ 1 Chip                 OK          35 degrees C / 95 degrees F
      FPC 5 MQ 2 TSen                 OK          32 degrees C / 89 degrees F
      FPC 5 MQ 2 Chip                 OK          32 degrees C / 89 degrees F
      FPC 5 MQ 3 TSen                 OK          32 degrees C / 89 degrees F
      FPC 5 MQ 3 Chip                 OK          32 degrees C / 89 degrees F
      FPC 9 Intake                    OK          25 degrees C / 77 degrees F
      FPC 9 Exhaust A                 OK          37 degrees C / 98 degrees F
      FPC 9 Exhaust B                 OK          40 degrees C / 104 degrees F
      FPC 9 XL 0 TSen                 OK          40 degrees C / 104 degrees F
...
```

show chassis environment (MX2010 Router)

```
user@host> show chassis environment
Class Item                            Status     Measurement
Temp  PSM 0                           OK         7 degrees C / 44 degrees F
      PSM 1                           OK         7 degrees C / 44 degrees F
      PSM 2                           OK         7 degrees C / 44 degrees F
      PSM 3                           OK         6 degrees C / 42 degrees F
      PSM 4                           OK         6 degrees C / 42 degrees F
      PSM 5                           OK         6 degrees C / 42 degrees F
      PSM 6                           OK         6 degrees C / 42 degrees F
      PSM 7                           OK         7 degrees C / 44 degrees F
      PSM 8                           OK         7 degrees C / 44 degrees F
      PDM 0                           OK
      PDM 1                           Absent
      CB 0 IntakeA-Zone0              OK         14 degrees C / 57 degrees F
      CB 0 IntakeB-Zone1              OK         7 degrees C / 44 degrees F
      CB 0 IntakeC-Zone0              OK         22 degrees C / 71 degrees F
      CB 0 ExhaustA-Zone0             OK         14 degrees C / 57 degrees F
      CB 0 ExhaustB-Zone1             OK         9 degrees C / 48 degrees F
```

```
      CB 0 TCBC-Zone0                OK          11 degrees C / 51 degrees F
      CB 1 IntakeA-Zone0             OK          9 degrees C / 48 degrees F
      CB 1 IntakeB-Zone1             OK          5 degrees C / 41 degrees F
      CB 1 IntakeC-Zone0             OK          20 degrees C / 68 degrees F
      CB 1 ExhaustA-Zone0            OK          12 degrees C / 53 degrees F
      CB 1 ExhaustB-Zone1            OK          7 degrees C / 44 degrees F
      CB 1 TCBC-Zone0                OK          10 degrees C / 50 degrees F
      SPMB 0 Intake                  OK          5 degrees C / 41 degrees F
      SPMB 1 Intake                  OK          4 degrees C / 39 degrees F
      Routing Engine 0               OK          9 degrees C / 48 degrees F
      Routing Engine 0 CPU           OK          9 degrees C / 48 degrees F
      Routing Engine 1               OK          6 degrees C / 42 degrees F
      Routing Engine 1 CPU           OK          6 degrees C / 42 degrees F
      SFB 0 Intake-Zone0             OK          26 degrees C / 78 degrees F
      SFB 0 Exhaust-Zone1            OK          17 degrees C / 62 degrees F
      SFB 0 IntakeA-Zone0            OK          16 degrees C / 60 degrees F
      SFB 0 IntakeB-Zone1            OK          11 degrees C / 51 degrees F
      SFB 0 Exhaust-Zone0            OK          18 degrees C / 64 degrees F
      SFB 0 SFB-XF2-Zone1            OK          25 degrees C / 77 degrees F
      SFB 0 SFB-XF1-Zone0            OK          23 degrees C / 73 degrees F
      SFB 0 SFB-XF0-Zone0            OK          33 degrees C / 91 degrees F
      SFB 1 Intake-Zone0             OK          27 degrees C / 80 degrees F
      SFB 1 Exhaust-Zone1            OK          15 degrees C / 59 degrees F
      SFB 1 IntakeA-Zone0            OK          20 degrees C / 68 degrees F
      SFB 1 IntakeB-Zone1            OK          10 degrees C / 50 degrees F
      SFB 1 Exhaust-Zone0            OK          19 degrees C / 66 degrees F
      SFB 1 SFB-XF2-Zone1            OK          26 degrees C / 78 degrees F
      SFB 1 SFB-XF1-Zone0            OK          27 degrees C / 80 degrees F
      SFB 1 SFB-XF0-Zone0            OK          32 degrees C / 89 degrees F
      SFB 2 Intake-Zone0             OK          21 degrees C / 69 degrees F
      SFB 2 Exhaust-Zone1            OK          13 degrees C / 55 degrees F
      SFB 2 IntakeA-Zone0            OK          18 degrees C / 64 degrees F
      SFB 2 IntakeB-Zone1            OK          9 degrees C / 48 degrees F
      SFB 2 Exhaust-Zone0            OK          16 degrees C / 60 degrees F
      SFB 2 SFB-XF2-Zone1            OK          24 degrees C / 75 degrees F
      SFB 2 SFB-XF1-Zone0            OK          21 degrees C / 69 degrees F
      SFB 2 SFB-XF0-Zone0            OK          26 degrees C / 78 degrees F
      SFB 4 Intake-Zone0             OK          28 degrees C / 82 degrees F
      SFB 4 Exhaust-Zone1            OK          16 degrees C / 60 degrees F
SFB 4 IntakeA-Zone0           OK          18 degrees C / 64 degrees F
      SFB 4 IntakeB-Zone1            OK          11 degrees C / 51 degrees F
      SFB 4 Exhaust-Zone0            OK          19 degrees C / 66 degrees F
      SFB 4 SFB-XF2-Zone1            OK          27 degrees C / 80 degrees F
```

```
        SFB 4 SFB-XF1-Zone0             OK          27 degrees C / 80 degrees F
        SFB 4 SFB-XF0-Zone0             OK          32 degrees C / 89 degrees F
        SFB 5 Intake-Zone0              OK          22 degrees C / 71 degrees F
        SFB 5 Exhaust-Zone1             OK          14 degrees C / 57 degrees F
        SFB 5 IntakeA-Zone0             OK          18 degrees C / 64 degrees F
        SFB 5 IntakeB-Zone1             OK          10 degrees C / 50 degrees F
        SFB 5 Exhaust-Zone0             OK          17 degrees C / 62 degrees F
        SFB 5 SFB-XF2-Zone1             OK          22 degrees C / 71 degrees F
        SFB 5 SFB-XF1-Zone0             OK          29 degrees C / 84 degrees F
        SFB 5 SFB-XF0-Zone0             OK          27 degrees C / 80 degrees F
        SFB 6 Intake-Zone0              OK          27 degrees C / 80 degrees F
        SFB 6 Exhaust-Zone1             OK          13 degrees C / 55 degrees F
        SFB 6 IntakeA-Zone0             OK          19 degrees C / 66 degrees F
        SFB 6 IntakeB-Zone1             OK          10 degrees C / 50 degrees F
        SFB 6 Exhaust-Zone0             OK          20 degrees C / 68 degrees F
        SFB 6 SFB-XF2-Zone1             OK          24 degrees C / 75 degrees F
        SFB 6 SFB-XF1-Zone0             OK          32 degrees C / 89 degrees F
        SFB 6 SFB-XF0-Zone0             OK          33 degrees C / 91 degrees F
        SFB 7 Intake-Zone0              OK          25 degrees C / 77 degrees F
        SFB 7 Exhaust-Zone1             OK          13 degrees C / 55 degrees F
        SFB 7 IntakeA-Zone0             OK          14 degrees C / 57 degrees F
        SFB 7 IntakeB-Zone1             OK          8 degrees C / 46 degrees F
        SFB 7 Exhaust-Zone0             OK          17 degrees C / 62 degrees F
        SFB 7 SFB-XF2-Zone1             OK          21 degrees C / 69 degrees F
        SFB 7 SFB-XF1-Zone0             OK          21 degrees C / 69 degrees F
        SFB 7 SFB-XF0-Zone0             OK          33 degrees C / 91 degrees F
        FPC 0 Intake                    OK          13 degrees C / 55 degrees F
        FPC 0 Exhaust A                 OK          13 degrees C / 55 degrees F
        FPC 0 Exhaust B                 OK          14 degrees C / 57 degrees F
        FPC 0 LU 0 TSen                 OK          28 degrees C / 82 degrees F
        FPC 0 LU 0 Chip                 OK          25 degrees C / 77 degrees F
        FPC 0 LU 1 TSen                 OK          28 degrees C / 82 degrees F
        FPC 0 LU 1 Chip                 OK          27 degrees C / 80 degrees F
        FPC 0 LU 2 TSen                 OK          28 degrees C / 82 degrees F
        FPC 0 LU 2 Chip                 OK          19 degrees C / 66 degrees F
        FPC 0 LU 3 TSen                 OK          28 degrees C / 82 degrees F
        FPC 0 LU 3 Chip                 OK          23 degrees C / 73 degrees F
        FPC 0 XM 0 TSen                 OK          28 degrees C / 82 degrees F
        FPC 0 XM 0 Chip                 OK          33 degrees C / 91 degrees F
        FPC 0 XM 1 TSen                 OK          28 degrees C / 82 degrees F
        FPC 0 XM 1 Chip                 OK          26 degrees C / 78 degrees F
        FPC 0 PLX Switch TSen           OK          28 degrees C / 82 degrees F
        FPC 0 PLX Switch Chip           OK          26 degrees C / 78 degrees F
```

```
      FPC 1 Intake                    OK         10 degrees C / 50 degrees F
      FPC 1 Exhaust A                 OK         24 degrees C / 75 degrees F
      FPC 1 Exhaust B                 OK         28 degrees C / 82 degrees F
      FPC 1 LU 0 TSen                 OK         22 degrees C / 71 degrees F
      FPC 1 LU 0 Chip                 OK         31 degrees C / 87 degrees F
      FPC 1 LU 1 TSen                 OK         22 degrees C / 71 degrees F
      FPC 1 LU 1 Chip                 OK         21 degrees C / 69 degrees F
      FPC 1 LU 2 TSen                 OK         22 degrees C / 71 degrees F
      FPC 1 LU 2 Chip                 OK         25 degrees C / 77 degrees F
      FPC 1 LU 3 TSen                 OK         22 degrees C / 71 degrees F
      FPC 1 LU 3 Chip                 OK         33 degrees C / 91 degrees F
      FPC 1 XM 0 TSen                 OK         22 degrees C / 71 degrees F
      FPC 1 XM 0 Chip                 OK         30 degrees C / 86 degrees F
      FPC 1 XF 0 TSen                 OK         22 degrees C / 71 degrees F
      FPC 1 XF 0 Chip                 OK         37 degrees C / 98 degrees F
      FPC 1 PLX Switch TSen           OK         22 degrees C / 71 degrees F
FPC 1 PLX Switch Chip          OK         22 degrees C / 71 degrees F
      FPC 2 Intake                    OK         9 degrees C / 48 degrees F
      FPC 2 Exhaust A                 OK         10 degrees C / 50 degrees F
      FPC 2 Exhaust B                 OK         10 degrees C / 50 degrees F
      FPC 2 LU 0 TSen                 OK         26 degrees C / 78 degrees F
      FPC 2 LU 0 Chip                 OK         25 degrees C / 77 degrees F
      FPC 2 LU 1 TSen                 OK         26 degrees C / 78 degrees F
      FPC 2 LU 1 Chip                 OK         26 degrees C / 78 degrees F
      FPC 2 LU 2 TSen                 OK         26 degrees C / 78 degrees F
      FPC 2 LU 2 Chip                 OK         17 degrees C / 62 degrees F
      FPC 2 LU 3 TSen                 OK         26 degrees C / 78 degrees F
      FPC 2 LU 3 Chip                 OK         22 degrees C / 71 degrees F
      FPC 2 XM 0 TSen                 OK         26 degrees C / 78 degrees F
      FPC 2 XM 0 Chip                 OK         34 degrees C / 93 degrees F
      FPC 2 XM 1 TSen                 OK         26 degrees C / 78 degrees F
      FPC 2 XM 1 Chip                 OK         26 degrees C / 78 degrees F
      FPC 2 PLX Switch TSen           OK         26 degrees C / 78 degrees F
      FPC 2 PLX Switch Chip           OK         20 degrees C / 68 degrees F
      FPC 3 Intake                    OK         12 degrees C / 53 degrees F
      FPC 3 Exhaust A                 OK         16 degrees C / 60 degrees F
      FPC 3 Exhaust B                 OK         26 degrees C / 78 degrees F
      FPC 3 LU 0 TSen                 OK         23 degrees C / 73 degrees F
      FPC 3 LU 0 Chip                 OK         26 degrees C / 78 degrees F
      FPC 3 LU 1 TSen                 OK         23 degrees C / 73 degrees F
      FPC 3 LU 1 Chip                 OK         27 degrees C / 80 degrees F
      FPC 3 LU 2 TSen                 OK         23 degrees C / 73 degrees F
      FPC 3 LU 2 Chip                 OK         22 degrees C / 71 degrees F
```

```
      FPC 3 LU 3 TSen                OK          23 degrees C / 73 degrees F
      FPC 3 LU 3 Chip                OK          21 degrees C / 69 degrees F
      FPC 3 MQ 0 TSen                OK          15 degrees C / 59 degrees F
      FPC 3 MQ 0 Chip                OK          18 degrees C / 64 degrees F
      FPC 3 MQ 1 TSen                OK          15 degrees C / 59 degrees F
      FPC 3 MQ 1 Chip                OK          20 degrees C / 68 degrees F
      FPC 3 MQ 2 TSen                OK          15 degrees C / 59 degrees F
      FPC 3 MQ 2 Chip                OK          17 degrees C / 62 degrees F
      FPC 3 MQ 3 TSen                OK          15 degrees C / 59 degrees F
      FPC 3 MQ 3 Chip                OK          16 degrees C / 60 degrees F
      FPC 4 Intake                   OK          11 degrees C / 51 degrees F
      FPC 4 Exhaust A                OK          22 degrees C / 71 degrees F
      FPC 4 Exhaust B                OK          28 degrees C / 82 degrees F
      FPC 4 LU 0 TSen                OK          22 degrees C / 71 degrees F
      FPC 4 LU 0 Chip                OK          33 degrees C / 91 degrees F
      FPC 4 LU 1 TSen                OK          22 degrees C / 71 degrees F
      FPC 4 LU 1 Chip                OK          21 degrees C / 69 degrees F
      FPC 4 LU 2 TSen                OK          22 degrees C / 71 degrees F
      FPC 4 LU 2 Chip                OK          26 degrees C / 78 degrees F
      FPC 4 LU 3 TSen                OK          22 degrees C / 71 degrees F
      FPC 4 LU 3 Chip                OK          33 degrees C / 91 degrees F
      FPC 4 XM 0 TSen                OK          22 degrees C / 71 degrees F
      FPC 4 XM 0 Chip                OK          30 degrees C / 86 degrees F
      FPC 4 XF 0 TSen                OK          22 degrees C / 71 degrees F
      FPC 4 XF 0 Chip                OK          37 degrees C / 98 degrees F
      FPC 4 PLX Switch TSen          OK          22 degrees C / 71 degrees F
      FPC 4 PLX Switch Chip          OK          23 degrees C / 73 degrees F
      FPC 5 Intake                   OK          12 degrees C / 53 degrees F
      FPC 5 Exhaust A                OK          12 degrees C / 53 degrees F
FPC 5 Exhaust B                OK          12 degrees C / 53 degrees F
      FPC 5 LU 0 TSen                OK          27 degrees C / 80 degrees F
      FPC 5 LU 0 Chip                OK          28 degrees C / 82 degrees F
      FPC 5 LU 1 TSen                OK          27 degrees C / 80 degrees F
      FPC 5 LU 1 Chip                OK          27 degrees C / 80 degrees F
      FPC 5 LU 2 TSen                OK          27 degrees C / 80 degrees F
      FPC 5 LU 2 Chip                OK          19 degrees C / 66 degrees F
      FPC 5 LU 3 TSen                OK          27 degrees C / 80 degrees F
      FPC 5 LU 3 Chip                OK          22 degrees C / 71 degrees F
      FPC 5 XM 0 TSen                OK          27 degrees C / 80 degrees F
      FPC 5 XM 0 Chip                OK          36 degrees C / 96 degrees F
      FPC 5 XM 1 TSen                OK          27 degrees C / 80 degrees F
      FPC 5 XM 1 Chip                OK          26 degrees C / 78 degrees F
      FPC 5 PLX Switch TSen          OK          27 degrees C / 80 degrees F
```

```
      FPC 5 PLX Switch Chip          OK         24 degrees C / 75 degrees F
      FPC 6 Intake                   OK         12 degrees C / 53 degrees F
      FPC 6 Exhaust A                OK         17 degrees C / 62 degrees F
      FPC 6 Exhaust B                OK         28 degrees C / 82 degrees F
      FPC 6 LU 0 TSen                OK         24 degrees C / 75 degrees F
      FPC 6 LU 0 Chip                OK         29 degrees C / 84 degrees F
      FPC 6 LU 1 TSen                OK         24 degrees C / 75 degrees F
      FPC 6 LU 1 Chip                OK         30 degrees C / 86 degrees F
      FPC 6 LU 2 TSen                OK         24 degrees C / 75 degrees F
      FPC 6 LU 2 Chip                OK         24 degrees C / 75 degrees F
      FPC 6 LU 3 TSen                OK         24 degrees C / 75 degrees F
      FPC 6 LU 3 Chip                OK         22 degrees C / 71 degrees F
      FPC 6 MQ 0 TSen                OK         16 degrees C / 60 degrees F
      FPC 6 MQ 0 Chip                OK         19 degrees C / 66 degrees F
      FPC 6 MQ 1 TSen                OK         16 degrees C / 60 degrees F
      FPC 6 MQ 1 Chip                OK         20 degrees C / 68 degrees F
      FPC 6 MQ 2 TSen                OK         16 degrees C / 60 degrees F
      FPC 6 MQ 2 Chip                OK         17 degrees C / 62 degrees F
      FPC 6 MQ 3 TSen                OK         16 degrees C / 60 degrees F
      FPC 6 MQ 3 Chip                OK         16 degrees C / 60 degrees F
      FPC 7 Intake                   OK         10 degrees C / 50 degrees F
      FPC 7 Exhaust A                OK         10 degrees C / 50 degrees F
      FPC 7 Exhaust B                OK         11 degrees C / 51 degrees F
      FPC 7 LU 0 TSen                OK         26 degrees C / 78 degrees F
      FPC 7 LU 0 Chip                OK         26 degrees C / 78 degrees F
      FPC 7 LU 1 TSen                OK         26 degrees C / 78 degrees F
      FPC 7 LU 1 Chip                OK         29 degrees C / 84 degrees F
      FPC 7 LU 2 TSen                OK         26 degrees C / 78 degrees F
      FPC 7 LU 2 Chip                OK         19 degrees C / 66 degrees F
      FPC 7 LU 3 TSen                OK         26 degrees C / 78 degrees F
      FPC 7 LU 3 Chip                OK         24 degrees C / 75 degrees F
      FPC 7 XM 0 TSen                OK         26 degrees C / 78 degrees F
      FPC 7 XM 0 Chip                OK         34 degrees C / 93 degrees F
      FPC 7 XM 1 TSen                OK         26 degrees C / 78 degrees F
      FPC 7 XM 1 Chip                OK         32 degrees C / 89 degrees F
      FPC 7 PLX Switch TSen          OK         26 degrees C / 78 degrees F
      FPC 7 PLX Switch Chip          OK         22 degrees C / 71 degrees F
      FPC 8 Intake                   OK         10 degrees C / 50 degrees F
      FPC 8 Exhaust A                OK         22 degrees C / 71 degrees F
      FPC 8 Exhaust B                OK         28 degrees C / 82 degrees F
      FPC 8 LU 0 TSen                OK         20 degrees C / 68 degrees F
      FPC 8 LU 0 Chip                OK         33 degrees C / 91 degrees F
  FPC 8 LU 1 TSen                OK         20 degrees C / 68 degrees F
```

```
FPC 8 LU 1 Chip              OK          23 degrees C / 73 degrees F
FPC 8 LU 2 TSen              OK          20 degrees C / 68 degrees F
FPC 8 LU 2 Chip              OK          26 degrees C / 78 degrees F
FPC 8 LU 3 TSen              OK          20 degrees C / 68 degrees F
FPC 8 LU 3 Chip              OK          33 degrees C / 91 degrees F
FPC 8 XM 0 TSen              OK          20 degrees C / 68 degrees F
FPC 8 XM 0 Chip              OK          29 degrees C / 84 degrees F
FPC 8 XF 0 TSen              OK          20 degrees C / 68 degrees F
FPC 8 XF 0 Chip              OK          38 degrees C / 100 degrees F
FPC 8 PLX Switch TSen        OK          20 degrees C / 68 degrees F
FPC 8 PLX Switch Chip        OK          24 degrees C / 75 degrees F
FPC 9 Intake                 OK          11 degrees C / 51 degrees F
FPC 9 Exhaust A              OK          11 degrees C / 51 degrees F
FPC 9 Exhaust B              OK          11 degrees C / 51 degrees F
FPC 9 LU 0 TSen              OK          25 degrees C / 77 degrees F
FPC 9 LU 0 Chip              OK          24 degrees C / 75 degrees F
FPC 9 LU 1 TSen              OK          25 degrees C / 77 degrees F
FPC 9 LU 1 Chip              OK          26 degrees C / 78 degrees F
FPC 9 LU 2 TSen              OK          25 degrees C / 77 degrees F
FPC 9 LU 2 Chip              OK          16 degrees C / 60 degrees F
FPC 9 LU 3 TSen              OK          25 degrees C / 77 degrees F
FPC 9 LU 3 Chip              OK          21 degrees C / 69 degrees F
FPC 9 XM 0 TSen              OK          25 degrees C / 77 degrees F
FPC 9 XM 0 Chip              OK          32 degrees C / 89 degrees F
FPC 9 XM 1 TSen              OK          25 degrees C / 77 degrees F
FPC 9 XM 1 Chip              OK          25 degrees C / 77 degrees F
FPC 9 PLX Switch TSen        OK          25 degrees C / 77 degrees F
FPC 9 PLX Switch Chip        OK          21 degrees C / 69 degrees F
ADC 0 Intake                 OK          12 degrees C / 53 degrees F
ADC 0 Exhaust                OK          20 degrees C / 68 degrees F
ADC 0 ADC-XF1                OK          26 degrees C / 78 degrees F
ADC 0 ADC-XF0                OK          32 degrees C / 89 degrees F
ADC 1 Intake                 OK          11 degrees C / 51 degrees F
ADC 1 Exhaust                OK          21 degrees C / 69 degrees F
ADC 1 ADC-XF1                OK          24 degrees C / 75 degrees F
ADC 1 ADC-XF0                OK          31 degrees C / 87 degrees F
ADC 2 Intake                 OK          14 degrees C / 57 degrees F
ADC 2 Exhaust                OK          21 degrees C / 69 degrees F
ADC 2 ADC-XF1                OK          28 degrees C / 82 degrees F
ADC 2 ADC-XF0                OK          34 degrees C / 93 degrees F
ADC 3 Intake                 OK          13 degrees C / 55 degrees F
ADC 3 Exhaust                OK          19 degrees C / 66 degrees F
ADC 3 ADC-XF1                OK          24 degrees C / 75 degrees F
```

```
      ADC 3 ADC-XF0                OK          31 degrees C / 87 degrees F
      ADC 4 Intake                 OK          9 degrees C / 48 degrees F
      ADC 4 Exhaust                OK          22 degrees C / 71 degrees F
      ADC 4 ADC-XF1                OK          28 degrees C / 82 degrees F
      ADC 4 ADC-XF0                OK          35 degrees C / 95 degrees F
      ADC 5 Intake                 OK          12 degrees C / 53 degrees F
      ADC 5 Exhaust                OK          22 degrees C / 71 degrees F
      ADC 5 ADC-XF1                OK          28 degrees C / 82 degrees F
      ADC 5 ADC-XF0                OK          34 degrees C / 93 degrees F
      ADC 6 Intake                 OK          11 degrees C / 51 degrees F
      ADC 6 Exhaust                OK          21 degrees C / 69 degrees F
      ADC 6 ADC-XF1                OK          26 degrees C / 78 degrees F
 ADC 6 ADC-XF0                     OK          35 degrees C / 95 degrees F
      ADC 7 Intake                 OK          14 degrees C / 57 degrees F
      ADC 7 Exhaust                OK          22 degrees C / 71 degrees F
      ADC 7 ADC-XF1                OK          26 degrees C / 78 degrees F
      ADC 7 ADC-XF0                OK          34 degrees C / 93 degrees F
      ADC 8 Intake                 OK          14 degrees C / 57 degrees F
      ADC 8 Exhaust                OK          21 degrees C / 69 degrees F
      ADC 8 ADC-XF1                OK          24 degrees C / 75 degrees F
      ADC 8 ADC-XF0                OK          31 degrees C / 87 degrees F
      ADC 9 Intake                 OK          10 degrees C / 50 degrees F
      ADC 9 Exhaust                OK          22 degrees C / 71 degrees F
      ADC 9 ADC-XF1                OK          28 degrees C / 82 degrees F
      ADC 9 ADC-XF0                OK          36 degrees C / 96 degrees F
Fans  Fan Tray 0 Fan 1             OK          3480 RPM
      Fan Tray 0 Fan 2             OK          3480 RPM
      Fan Tray 0 Fan 3             OK          3480 RPM
      Fan Tray 0 Fan 4             OK          3360 RPM
      Fan Tray 0 Fan 5             OK          3360 RPM
      Fan Tray 0 Fan 6             OK          3480 RPM
      Fan Tray 1 Fan 1             OK          3360 RPM
      Fan Tray 1 Fan 2             OK          3360 RPM
      Fan Tray 1 Fan 3             OK          3360 RPM
      Fan Tray 1 Fan 4             OK          3480 RPM
      Fan Tray 1 Fan 5             OK          3480 RPM
      Fan Tray 1 Fan 6             OK          3480 RPM
      Fan Tray 2 Fan 1             OK          3360 RPM
      Fan Tray 2 Fan 2             OK          3360 RPM
      Fan Tray 2 Fan 3             OK          3480 RPM
      Fan Tray 2 Fan 4             OK          3480 RPM
      Fan Tray 2 Fan 5             OK          3360 RPM
      Fan Tray 2 Fan 6             OK          3480 RPM
```

```
      Fan Tray 3 Fan 1               OK          3360 RPM
      Fan Tray 3 Fan 2               OK          3360 RPM
      Fan Tray 3 Fan 3               OK          3480 RPM
      Fan Tray 3 Fan 4               OK          3480 RPM
      Fan Tray 3 Fan 5               OK          3480 RPM
      Fan Tray 3 Fan 6               OK          3360 RPM
```

show chassis environment (MX2008 Router)

```
user@host>show chassis environment
Class Item                           Status     Measurement
Temp  PSM 0                          Absent
      PSM 1                          OK         29 degrees C / 84 degrees F
      PSM 2                          OK         30 degrees C / 86 degrees F
      PSM 3                          OK         29 degrees C / 84 degrees F
      PSM 4                          OK         29 degrees C / 84 degrees F
      PSM 5                          OK         30 degrees C / 86 degrees F
      PSM 6                          OK         29 degrees C / 84 degrees F
      PSM 7                          OK         31 degrees C / 87 degrees F
      PSM 8                          Absent
      PDM 0                          OK
      PDM 1                          OK
      CB 0 Inlet1                    OK         37 degrees C / 98 degrees F
      CB 0 Inlet2                    OK         45 degrees C / 113 degrees F
      CB 0 Inlet3                    OK         44 degrees C / 111 degrees F
      CB 0 Inlet4                    OK         41 degrees C / 105 degrees F
      CB 0 Exhaust1                  OK         30 degrees C / 86 degrees F
      CB 0 Exhaust2                  OK         40 degrees C / 104 degrees F
      CB 0 Exhaust3                  OK         48 degrees C / 118 degrees F
      CB 0 Exhaust4                  OK         46 degrees C / 114 degrees F
      CB 1 Inlet1                    OK         30 degrees C / 86 degrees F
      CB 1 Inlet2                    OK         31 degrees C / 87 degrees F
      CB 1 Inlet3                    OK         29 degrees C / 84 degrees F
      CB 1 Inlet4                    OK         32 degrees C / 89 degrees F
      CB 1 Exhaust1                  OK         30 degrees C / 86 degrees F
      CB 1 Exhaust2                  OK         33 degrees C / 91 degrees F
      CB 1 Exhaust3                  OK         34 degrees C / 93 degrees F
      CB 1 Exhaust4                  OK         34 degrees C / 93 degrees F
      Routing Engine 0               OK
      Routing Engine 0 CPU           OK         75 degrees C / 167 degrees F
      Routing Engine 1               OK
```

```
Routing Engine 1 CPU          OK          46 degrees C / 114 degrees F
SFB 0 Inlet2                  OK          44 degrees C / 111 degrees F
SFB 0 Exhaust1                OK          39 degrees C / 102 degrees F
SFB 0 Inlet1                  OK          41 degrees C / 105 degrees F
SFB 0 Exhaust2                OK          45 degrees C / 113 degrees F
SFB 0 SFB2-PF-local           OK          45 degrees C / 113 degrees F
SFB 0 SFB2-PF-die             OK          51 degrees C / 123 degrees F
SFB 1 Inlet2                  OK          30 degrees C / 86 degrees F
SFB 1 Exhaust1                OK          27 degrees C / 80 degrees F
SFB 1 Inlet1                  OK          28 degrees C / 82 degrees F
SFB 1 Exhaust2                OK          31 degrees C / 87 degrees F
SFB 1 SFB2-PF-local           OK          30 degrees C / 86 degrees F
SFB 1 SFB2-PF-die             OK          37 degrees C / 98 degrees F
SFB 2 Inlet2                  OK          28 degrees C / 82 degrees F
SFB 2 Exhaust1                OK          26 degrees C / 78 degrees F
SFB 2 Inlet1                  OK          27 degrees C / 80 degrees F
SFB 2 Exhaust2                OK          28 degrees C / 82 degrees F
SFB 2 SFB2-PF-local           OK          27 degrees C / 80 degrees F
SFB 2 SFB2-PF-die             OK          33 degrees C / 91 degrees F
SFB 3 Inlet2                  OK          28 degrees C / 82 degrees F
SFB 3 Exhaust1                OK          26 degrees C / 78 degrees F
SFB 3 Inlet1                  OK          26 degrees C / 78 degrees F
SFB 3 Exhaust2                OK          28 degrees C / 82 degrees F
SFB 3 SFB2-PF-local           OK          27 degrees C / 80 degrees F
SFB 3 SFB2-PF-die             OK          33 degrees C / 91 degrees F
SFB 4 Inlet2                  OK          28 degrees C / 82 degrees F
SFB 4 Exhaust1                OK          26 degrees C / 78 degrees F
SFB 4 Inlet1                  OK          26 degrees C / 78 degrees F
SFB 4 Exhaust2                OK          28 degrees C / 82 degrees F
SFB 4 SFB2-PF-local           OK          27 degrees C / 80 degrees F
SFB 4 SFB2-PF-die             OK          32 degrees C / 89 degrees F
SFB 5 Inlet2                  OK          29 degrees C / 84 degrees F
SFB 5 Exhaust1                OK          27 degrees C / 80 degrees F
SFB 5 Inlet1                  OK          28 degrees C / 82 degrees F
SFB 5 Exhaust2                OK          29 degrees C / 84 degrees F
SFB 5 SFB2-PF-local           OK          28 degrees C / 82 degrees F
SFB 5 SFB2-PF-die             OK          34 degrees C / 93 degrees F
SFB 6 Inlet2                  OK          33 degrees C / 91 degrees F
SFB 6 Exhaust1                OK          32 degrees C / 89 degrees F
SFB 6 Inlet1                  OK          32 degrees C / 89 degrees F
SFB 6 Exhaust2                OK          34 degrees C / 93 degrees F
SFB 6 SFB2-PF-local           OK          33 degrees C / 91 degrees F
SFB 6 SFB2-PF-die             OK          40 degrees C / 104 degrees F
```

```
SFB 7 Inlet2                OK          29 degrees C / 84 degrees F
SFB 7 Exhaust1              OK          28 degrees C / 82 degrees F
SFB 7 Inlet1                OK          29 degrees C / 84 degrees F
SFB 7 Exhaust2              OK          29 degrees C / 84 degrees F
SFB 7 SFB2-PF-local         OK          28 degrees C / 82 degrees F
SFB 7 SFB2-PF-die           OK          33 degrees C / 91 degrees F
FPC 0 Intake                OK          29 degrees C / 84 degrees F
FPC 0 Exhaust A             OK          42 degrees C / 107 degrees F
FPC 0 Exhaust B             OK          42 degrees C / 107 degrees F
FPC 0 XL 0 TSen             OK          38 degrees C / 100 degrees F
FPC 0 XL 0 Chip             OK          53 degrees C / 127 degrees F
FPC 0 XL 0 XR2 0 TSen       OK          38 degrees C / 100 degrees F
FPC 0 XL 0 XR2 0 Chip       OK          59 degrees C / 138 degrees F
FPC 0 XL 0 XR2 1 TSen       OK          38 degrees C / 100 degrees F
FPC 0 XL 0 XR2 1 Chip       OK          59 degrees C / 138 degrees F
FPC 0 XL 1 TSen             OK          30 degrees C / 86 degrees F
FPC 0 XL 1 Chip             OK          42 degrees C / 107 degrees F
FPC 0 XL 1 XR2 0 TSen       OK          30 degrees C / 86 degrees F
FPC 0 XL 1 XR2 0 Chip       OK          49 degrees C / 120 degrees F
FPC 0 XL 1 XR2 1 TSen       OK          30 degrees C / 86 degrees F
FPC 0 XL 1 XR2 1 Chip       OK          50 degrees C / 122 degrees F
FPC 0 XM 0 TSen             OK          42 degrees C / 107 degrees F
FPC 0 XM 0 Chip             OK          49 degrees C / 120 degrees F
FPC 0 XM 1 TSen             OK          42 degrees C / 107 degrees F
FPC 0 XM 1 Chip             OK          42 degrees C / 107 degrees F
FPC 0 XM 2 TSen             OK          42 degrees C / 107 degrees F
FPC 0 XM 2 Chip             OK          42 degrees C / 107 degrees F
FPC 0 XM 3 TSen             OK          42 degrees C / 107 degrees F
FPC 0 XM 3 Chip             OK          40 degrees C / 104 degrees F
FPC 0 PCIe Switch TSen      OK          42 degrees C / 107 degrees F
FPC 0 PCIe Switch Chip      OK          22 degrees C / 71 degrees F
FPC 1 Intake                OK          29 degrees C / 84 degrees F
FPC 1 Exhaust A             OK          52 degrees C / 125 degrees F
FPC 1 Exhaust B             OK          44 degrees C / 111 degrees F
FPC 1 EA0 TSen              OK          54 degrees C / 129 degrees F
FPC 1 EA0 Chip              OK          47 degrees C / 116 degrees F
FPC 1 EA0_XR0 TSen          OK          54 degrees C / 129 degrees F
FPC 1 EA0_XR0 Chip          OK          56 degrees C / 132 degrees F
FPC 1 EA0_XR1 TSen          OK          54 degrees C / 129 degrees F
FPC 1 EA0_XR1 Chip          OK          53 degrees C / 127 degrees F
FPC 1 EA1 TSen              OK          54 degrees C / 129 degrees F
FPC 1 EA1 Chip              OK          49 degrees C / 120 degrees F
FPC 1 EA1_XR0 TSen          OK          54 degrees C / 129 degrees F
```

```
FPC 1 EA1_XR0 Chip              OK          57 degrees C / 134 degrees F
FPC 1 EA1_XR1 TSen              OK          54 degrees C / 129 degrees F
FPC 1 EA1_XR1 Chip              OK          58 degrees C / 136 degrees F
FPC 1 PEX TSen                  OK          54 degrees C / 129 degrees F
FPC 1 PEX Chip                  OK          39 degrees C / 102 degrees F
FPC 1 EA2 TSen                  OK          43 degrees C / 109 degrees F
FPC 1 EA2 Chip                  OK          39 degrees C / 102 degrees F
FPC 1 EA2_XR0 TSen              OK          43 degrees C / 109 degrees F
FPC 1 EA2_XR0 Chip              OK          45 degrees C / 113 degrees F
FPC 1 EA2_XR1 TSen              OK          43 degrees C / 109 degrees F
FPC 1 EA2_XR1 Chip              OK          42 degrees C / 107 degrees F
FPC 1 EA3 TSen                  OK          43 degrees C / 109 degrees F
FPC 1 EA3 Chip                  OK          40 degrees C / 104 degrees F
FPC 1 EA3_XR0 TSen              OK          43 degrees C / 109 degrees F
FPC 1 EA3_XR0 Chip              OK          50 degrees C / 122 degrees F
FPC 1 EA3_XR1 TSen              OK          43 degrees C / 109 degrees F
FPC 1 EA3_XR1 Chip              OK          46 degrees C / 114 degrees F
FPC 1 EA0_HMC0 Logic die        OK          60 degrees C / 140 degrees F
FPC 1 EA0_HMC0 DRAM botm        OK          57 degrees C / 134 degrees F
FPC 1 EA0_HMC1 Logic die        OK          61 degrees C / 141 degrees F
FPC 1 EA0_HMC1 DRAM botm        OK          58 degrees C / 136 degrees F
FPC 1 EA0_HMC2 Logic die        OK          57 degrees C / 134 degrees F
FPC 1 EA0_HMC2 DRAM botm        OK          54 degrees C / 129 degrees F
FPC 1 EA1_HMC0 Logic die        OK          65 degrees C / 149 degrees F
FPC 1 EA1_HMC0 DRAM botm        OK          62 degrees C / 143 degrees F
FPC 1 EA1_HMC1 Logic die        OK          64 degrees C / 147 degrees F
FPC 1 EA1_HMC1 DRAM botm        OK          61 degrees C / 141 degrees F
FPC 1 EA1_HMC2 Logic die        OK          61 degrees C / 141 degrees F
FPC 1 EA1_HMC2 DRAM botm        OK          58 degrees C / 136 degrees F
FPC 1 EA2_HMC0 Logic die        OK          50 degrees C / 122 degrees F
FPC 1 EA2_HMC0 DRAM botm        OK          47 degrees C / 116 degrees F
FPC 1 EA2_HMC1 Logic die        OK          54 degrees C / 129 degrees F
FPC 1 EA2_HMC1 DRAM botm        OK          51 degrees C / 123 degrees F
FPC 1 EA2_HMC2 Logic die        OK          51 degrees C / 123 degrees F
FPC 1 EA2_HMC2 DRAM botm        OK          48 degrees C / 118 degrees F
FPC 1 EA3_HMC0 Logic die        OK          51 degrees C / 123 degrees F
FPC 1 EA3_HMC0 DRAM botm        OK          48 degrees C / 118 degrees F
FPC 1 EA3_HMC1 Logic die        OK          51 degrees C / 123 degrees F
FPC 1 EA3_HMC1 DRAM botm        OK          48 degrees C / 118 degrees F
FPC 1 EA3_HMC2 Logic die        OK          51 degrees C / 123 degrees F
FPC 1 EA3_HMC2 DRAM botm        OK          48 degrees C / 118 degrees F
FPC 7 Intake                    OK          30 degrees C / 86 degrees F
FPC 7 Exhaust A                 OK          45 degrees C / 113 degrees F
```

```
      FPC 7 Exhaust B                OK         38 degrees C / 100 degrees F
      FPC 7 QX 0 TSen                OK         48 degrees C / 118 degrees F
      FPC 7 QX 0 Chip                OK         51 degrees C / 123 degrees F
      FPC 7 LU 0 TCAM TSen           OK         48 degrees C / 118 degrees F
      FPC 7 LU 0 TCAM Chip           OK         51 degrees C / 123 degrees F
      FPC 7 LU 0 TSen                OK         48 degrees C / 118 degrees F
      FPC 7 LU 0 Chip                OK         50 degrees C / 122 degrees F
      FPC 7 MQ 0 TSen                OK         48 degrees C / 118 degrees F
      FPC 7 MQ 0 Chip                OK         54 degrees C / 129 degrees F
      FPC 7 QX 1 TSen                OK         41 degrees C / 105 degrees F
      FPC 7 QX 1 Chip                OK         42 degrees C / 107 degrees F
      FPC 7 LU 1 TCAM TSen           OK         41 degrees C / 105 degrees F
      FPC 7 LU 1 TCAM Chip           OK         43 degrees C / 109 degrees F
      FPC 7 LU 1 TSen                OK         41 degrees C / 105 degrees F
      FPC 7 LU 1 Chip                OK         46 degrees C / 114 degrees F
      FPC 7 MQ 1 TSen                OK         41 degrees C / 105 degrees F
      FPC 7 MQ 1 Chip                OK         47 degrees C / 116 degrees F
      ADC 7 Intake                   OK         32 degrees C / 89 degrees F
      ADC 7 Exhaust                  OK         39 degrees C / 102 degrees F
      ADC 7 ADC-XF1                  OK         46 degrees C / 114 degrees F
      ADC 7 ADC-XF0                  OK         54 degrees C / 129 degrees F
Fans  Fan Tray 0 Fan 1               OK         6240 RPM
      Fan Tray 0 Fan 2               OK         6120 RPM
      Fan Tray 0 Fan 3               OK         6120 RPM
      Fan Tray 0 Fan 4               OK         5760 RPM
      Fan Tray 0 Fan 5               OK         5880 RPM
      Fan Tray 0 Fan 6               OK         6000 RPM
      Fan Tray 1 Fan 1               OK         5880 RPM
      Fan Tray 1 Fan 2               OK         5880 RPM
      Fan Tray 1 Fan 3               OK         6000 RPM
      Fan Tray 1 Fan 4               OK         6000 RPM
      Fan Tray 1 Fan 5               OK         6000 RPM
      Fan Tray 1 Fan 6               OK         6000 RPM
```

show chassis environment (T320 Router)

```
user@host> show chassis environment
Class Item                   Status     Measurement
Power PEM 0                  OK
      PEM 1                  Absent
Temp  SCG 0                  OK         28 degrees C / 82 degrees F
```

```
       SCG 1                  OK          28 degrees C / 82 degrees F
       Routing Engine 0       OK          31 degrees C / 87 degrees F
       Routing Engine 1       OK          30 degrees C / 86 degrees F
       CB 0                   OK          32 degrees C / 89 degrees F
       CB 1                   OK          32 degrees C / 89 degrees F
       SIB 0                  OK          33 degrees C / 91 degrees F
       SIB 1                  OK          33 degrees C / 91 degrees F
       SIB 2                  OK          34 degrees C / 93 degrees F
       FPC 0 Top              OK          38 degrees C / 100 degrees F
       FPC 0 Bottom           OK          32 degrees C / 89 degrees F
       FPC 1 Top              OK          38 degrees C / 100 degrees F
       FPC 1 Bottom           OK          33 degrees C / 91 degrees F
       FPC 2 Top              OK          36 degrees C / 96 degrees F
       FPC 2 Bottom           OK          31 degrees C / 87 degrees F
       FPM GBUS               OK          26 degrees C / 78 degrees F
       FPM Display            OK          29 degrees C / 84 degrees F
Fans   Top Left Front fan     OK          Spinning at normal speed
       Top Left Middle fan    OK          Spinning at normal speed
       Top Left Rear fan      OK          Spinning at normal speed
       Top Right Front fan    OK          Spinning at normal speed
       Top Right Middle fan   OK          Spinning at normal speed
       Top Right Rear fan     OK          Spinning at normal speed
       Bottom Left Front fan  OK          Spinning at normal speed
       Bottom Left Middle fan OK          Spinning at normal speed
       Bottom Left Rear fan   OK          Spinning at normal speed
       Bottom Right Front fan OK          Spinning at normal speed
       Bottom Right Middle fan OK         Spinning at normal speed
       Bottom Right Rear fan  OK          Spinning at normal speed
       Rear Tray Top fan      OK          Spinning at normal speed
       Rear Tray Second fan   OK          Spinning at normal speed
       Rear Tray Middle fan   OK          Spinning at normal speed
       Rear Tray Fourth fan   OK          Spinning at normal speed
       Rear Tray Bottom fan   OK          Spinning at normal speed
Misc   CIP                    OK
       SPMB 0                 OK
       SPMB 1                 OK
```

show chassis environment (MX10003 Router)

```
user@host> show chassis environment

Class Item                           Status     Measurement
Temp  CB 0 Exhaust Temp Sensor 0x49  OK         36 degrees C / 96 degrees F
      CB 0 Inlet Temp Sensor 0x49    OK         29 degrees C / 84 degrees F
      CB 1 Exhaust Temp Sensor 0x49  OK         36 degrees C / 96 degrees F
      CB 1 Inlet Temp Sensor 0x49    OK         31 degrees C / 87 degrees F
      FPC 0 Intake Temp Sensor       OK         29 degrees C / 84 degrees F
      FPC 0 Exhaust-A Temp Sensor    OK         55 degrees C / 131 degrees F
      FPC 0 Exhaust-B Temp Sensor    OK         44 degrees C / 111 degrees F
      FPC 0 EA0 Chip                 OK         58 degrees C / 136 degrees F
      FPC 0 EA0-XR0 Chip             OK         61 degrees C / 141 degrees F
      FPC 0 EA0-XR1 Chip             OK         62 degrees C / 143 degrees F
      FPC 0 EA1 Chip                 OK         67 degrees C / 152 degrees F
      FPC 0 EA1-XR0 Chip             OK         71 degrees C / 159 degrees F
      FPC 0 EA1-XR1 Chip             OK         72 degrees C / 161 degrees F
      FPC 0 PEX Chip                 OK         75 degrees C / 167 degrees F
      FPC 0 EA2 Chip                 OK         49 degrees C / 120 degrees F
      FPC 0 EA2-XR0 Chip             OK         55 degrees C / 131 degrees F
      FPC 0 EA2-XR1 Chip             OK         56 degrees C / 132 degrees F
      FPC 0 PF Chip                  OK         68 degrees C / 154 degrees F
      FPC 0 EA0_HMC0 Logic die       OK         72 degrees C / 161 degrees F
      FPC 0 EA0_HMC0 DRAM botm       OK         69 degrees C / 156 degrees F
      FPC 0 EA0_HMC1 Logic die       OK         72 degrees C / 161 degrees F
      FPC 0 EA0_HMC1 DRAM botm       OK         69 degrees C / 156 degrees F
      FPC 0 EA0_HMC2 Logic die       OK         75 degrees C / 167 degrees F
      FPC 0 EA0_HMC2 DRAM botm       OK         72 degrees C / 161 degrees F
      FPC 0 EA1_HMC0 Logic die       OK         81 degrees C / 177 degrees F
      FPC 0 EA1_HMC0 DRAM botm       OK         78 degrees C / 172 degrees F
      FPC 0 EA1_HMC1 Logic die       OK         79 degrees C / 174 degrees F
      FPC 0 EA1_HMC1 DRAM botm       OK         76 degrees C / 168 degrees F
      FPC 0 EA1_HMC2 Logic die       OK         82 degrees C / 179 degrees F
      FPC 0 EA1_HMC2 DRAM botm       OK         79 degrees C / 174 degrees F
      FPC 0 EA2_HMC0 Logic die       OK         61 degrees C / 141 degrees F
      FPC 0 EA2_HMC0 DRAM botm       OK         58 degrees C / 136 degrees F
      FPC 0 EA2_HMC1 Logic die       OK         62 degrees C / 143 degrees F
      FPC 0 EA2_HMC1 DRAM botm       OK         59 degrees C / 138 degrees F
      FPC 0 EA2_HMC2 Logic die       OK         64 degrees C / 147 degrees F
      FPC 0 EA2_HMC2 DRAM botm       OK         61 degrees C / 141 degrees F
      FPC 1 Intake Temp Sensor       OK         28 degrees C / 82 degrees F
```

```
       FPC 1 Exhaust-A Temp Sensor    OK          58 degrees C / 136 degrees F
       FPC 1 Exhaust-B Temp Sensor    OK          46 degrees C / 114 degrees F
       FPC 1 EA0 Chip                 OK          64 degrees C / 147 degrees F
       FPC 1 EA0-XR0 Chip             OK          67 degrees C / 152 degrees F
       FPC 1 EA0-XR1 Chip             OK          68 degrees C / 154 degrees F
       FPC 1 EA1 Chip                 OK          70 degrees C / 158 degrees F
       FPC 1 EA1-XR0 Chip             OK          74 degrees C / 165 degrees F
       FPC 1 EA1-XR1 Chip             OK          74 degrees C / 165 degrees F
       FPC 1 PEX Chip                 OK          88 degrees C / 190 degrees F
       FPC 1 EA2 Chip                 OK          50 degrees C / 122 degrees F
       FPC 1 EA2-XR0 Chip             OK          54 degrees C / 129 degrees F
       FPC 1 EA2-XR1 Chip             OK          56 degrees C / 132 degrees F
       FPC 1 PF Chip                  OK          71 degrees C / 159 degrees F
       FPC 1 EA0_HMC0 Logic die       OK          74 degrees C / 165 degrees F
       FPC 1 EA0_HMC0 DRAM botm       OK          71 degrees C / 159 degrees F
       FPC 1 EA0_HMC1 Logic die       OK          78 degrees C / 172 degrees F
       FPC 1 EA0_HMC1 DRAM botm       OK          75 degrees C / 167 degrees F
       FPC 1 EA0_HMC2 Logic die       OK          78 degrees C / 172 degrees F
       FPC 1 EA0_HMC2 DRAM botm       OK          75 degrees C / 167 degrees F
       FPC 1 EA1_HMC0 Logic die       OK          84 degrees C / 183 degrees F
       FPC 1 EA1_HMC0 DRAM botm       OK          81 degrees C / 177 degrees F
       FPC 1 EA1_HMC1 Logic die       OK          81 degrees C / 177 degrees F
       FPC 1 EA1_HMC1 DRAM botm       OK          78 degrees C / 172 degrees F
       FPC 1 EA1_HMC2 Logic die       OK          85 degrees C / 185 degrees F
       FPC 1 EA1_HMC2 DRAM botm       OK          82 degrees C / 179 degrees F
       FPC 1 EA2_HMC0 Logic die       OK          63 degrees C / 145 degrees F
       FPC 1 EA2_HMC0 DRAM botm       OK          60 degrees C / 140 degrees F
       FPC 1 EA2_HMC1 Logic die       OK          60 degrees C / 140 degrees F
       FPC 1 EA2_HMC1 DRAM botm       OK          57 degrees C / 134 degrees F
       FPC 1 EA2_HMC2 Logic die       OK          66 degrees C / 150 degrees F
       FPC 1 EA2_HMC2 DRAM botm       OK          63 degrees C / 145 degrees F
Power  PEM 0                          OK
       PEM 1                          OK
       PEM 2                          OK
       PEM 3                          OK
       PEM 4                          Absent
       PEM 5                          Absent
Fans   Fan Tray 0 Fan 0               OK          Spinning at normal speed
       Fan Tray 0 Fan 1               OK          Spinning at normal speed
       Fan Tray 0 Fan 2               OK          Spinning at normal speed
       Fan Tray 0 Fan 3               OK          Spinning at normal speed
       Fan Tray 1 Fan 0               OK          Spinning at normal speed
       Fan Tray 1 Fan 1               OK          Spinning at normal speed
```

```
      Fan Tray 1 Fan 2               OK          Spinning at normal speed
      Fan Tray 1 Fan 3               OK          Spinning at normal speed
      Fan Tray 2 Fan 0               OK          Spinning at normal speed
      Fan Tray 2 Fan 1               OK          Spinning at normal speed
      Fan Tray 2 Fan 2               OK          Spinning at normal speed
      Fan Tray 2 Fan 3               OK          Spinning at normal speed
      Fan Tray 3 Fan 0               OK          Spinning at normal speed
      Fan Tray 3 Fan 1               OK          Spinning at normal speed
      Fan Tray 3 Fan 2               OK          Spinning at normal speed
      Fan Tray 3 Fan 3               OK          Spinning at normal speed
```

show chassis environment (MX10008 Router)

```
user@host> show chassis environment
Class Item                           Status     Measurement
      Routing Engine 0 CPU           OK         41 degrees C / 105 degrees F
      Routing Engine 1 CPU           OK         40 degrees C / 104 degrees F
Temp  CB 0 Intake A Temp Sensor      OK         24 degrees C / 75 degrees F
      CB 0 Intake B Temp Sensor      OK         24 degrees C / 75 degrees F
      CB 0 Exhaust A Temp Sensor     OK         28 degrees C / 82 degrees F
      CB 0 Exhaust B Temp Sensor     OK         30 degrees C / 86 degrees F
      CB 0 Middle Temp Sensor        OK         28 degrees C / 82 degrees F
      CB 1 Intake A Temp Sensor      OK         24 degrees C / 75 degrees F
      CB 1 Intake B Temp Sensor      OK         23 degrees C / 73 degrees F
      CB 1 Exhaust A Temp Sensor     OK         27 degrees C / 80 degrees F
      CB 1 Exhaust B Temp Sensor     OK         29 degrees C / 84 degrees F
      CB 1 Middle Temp Sensor        OK         28 degrees C / 82 degrees F
      FPC 0 Intake-A Temp Sensor     OK         32 degrees C / 89 degrees F
      FPC 0 Exhaust-A Temp Sensor    OK         44 degrees C / 111 degrees F
      FPC 0 Exhaust-B Temp Sensor    OK         49 degrees C / 120 degrees F
      FPC 0 EA0 Temp Sensor          OK         66 degrees C / 150 degrees F
      FPC 0 EA0_XR0 Temp Sensor      OK         69 degrees C / 156 degrees F
      FPC 0 EA0_XR1 Temp Sensor      OK         73 degrees C / 163 degrees F
      FPC 0 EA1 Temp Sensor          OK         60 degrees C / 140 degrees F
      FPC 0 EA1_XR0 Temp Sensor      OK         64 degrees C / 147 degrees F
      FPC 0 EA1_XR1 Temp Sensor      OK         63 degrees C / 145 degrees F
      FPC 0 EA2 Temp Sensor          OK         68 degrees C / 154 degrees F
      FPC 0 EA2_XR0 Temp Sensor      OK         73 degrees C / 163 degrees F
      FPC 0 EA2_XR1 Temp Sensor      OK         72 degrees C / 161 degrees F
      FPC 0 EA3 Temp Sensor          OK         63 degrees C / 145 degrees F
      FPC 0 EA3_XR0 Temp Sensor      OK         66 degrees C / 150 degrees F
```

```
FPC 0 EA3_XR1 Temp Sensor      OK          65 degrees C / 149 degrees F
FPC 0 EA4 Temp Sensor          OK          68 degrees C / 154 degrees F
FPC 0 EA4_XR0 Temp Sensor      OK          71 degrees C / 159 degrees F
FPC 0 EA4_XR1 Temp Sensor      OK          70 degrees C / 158 degrees F
FPC 0 EA5 Temp Sensor          OK          56 degrees C / 132 degrees F
FPC 0 EA5_XR0 Temp Sensor      OK          61 degrees C / 141 degrees F
FPC 0 EA5_XR1 Temp Sensor      OK          63 degrees C / 145 degrees F
FPC 0 EA0_HMC0 Logic die       OK          75 degrees C / 167 degrees F
FPC 0 EA0_HMC0 DRAM botm       OK          72 degrees C / 161 degrees F
FPC 0 EA0_HMC1 Logic die       OK          75 degrees C / 167 degrees F
FPC 0 EA0_HMC1 DRAM botm       OK          72 degrees C / 161 degrees F
FPC 0 EA0_HMC2 Logic die       OK          77 degrees C / 170 degrees F
FPC 0 EA0_HMC2 DRAM botm       OK          74 degrees C / 165 degrees F
FPC 0 EA1_HMC0 Logic die       OK          72 degrees C / 161 degrees F
FPC 0 EA1_HMC0 DRAM botm       OK          69 degrees C / 156 degrees F
FPC 0 EA1_HMC1 Logic die       OK          73 degrees C / 163 degrees F
FPC 0 EA1_HMC1 DRAM botm       OK          70 degrees C / 158 degrees F
FPC 0 EA1_HMC2 Logic die       OK          72 degrees C / 161 degrees F
FPC 0 EA1_HMC2 DRAM botm       OK          69 degrees C / 156 degrees F
FPC 0 EA2_HMC0 Logic die       OK          80 degrees C / 176 degrees F
FPC 0 EA2_HMC0 DRAM botm       OK          77 degrees C / 170 degrees F
FPC 0 EA2_HMC1 Logic die       OK          80 degrees C / 176 degrees F
FPC 0 EA2_HMC1 DRAM botm       OK          77 degrees C / 170 degrees F
FPC 0 EA2_HMC2 Logic die       OK          79 degrees C / 174 degrees F
FPC 0 EA2_HMC2 DRAM botm       OK          76 degrees C / 168 degrees F
FPC 0 EA3_HMC0 Logic die       OK          77 degrees C / 170 degrees F
FPC 0 EA3_HMC0 DRAM botm       OK          74 degrees C / 165 degrees F
FPC 0 EA3_HMC1 Logic die       OK          78 degrees C / 172 degrees F
FPC 0 EA3_HMC1 DRAM botm       OK          75 degrees C / 167 degrees F
FPC 0 EA3_HMC2 Logic die       OK          77 degrees C / 170 degrees F
FPC 0 EA3_HMC2 DRAM botm       OK          74 degrees C / 165 degrees F
FPC 0 EA4_HMC0 Logic die       OK          80 degrees C / 176 degrees F
FPC 0 EA4_HMC0 DRAM botm       OK          77 degrees C / 170 degrees F
FPC 0 EA4_HMC1 Logic die       OK          81 degrees C / 177 degrees F
FPC 0 EA4_HMC1 DRAM botm       OK          78 degrees C / 172 degrees F
FPC 0 EA4_HMC2 Logic die       OK          80 degrees C / 176 degrees F
FPC 0 EA4_HMC2 DRAM botm       OK          77 degrees C / 170 degrees F
FPC 0 EA5_HMC0 Logic die       OK          68 degrees C / 154 degrees F
FPC 0 EA5_HMC0 DRAM botm       OK          65 degrees C / 149 degrees F
FPC 0 EA5_HMC1 Logic die       OK          68 degrees C / 154 degrees F
FPC 0 EA5_HMC1 DRAM botm       OK          65 degrees C / 149 degrees F
FPC 0 EA5_HMC2 Logic die       OK          67 degrees C / 152 degrees F
FPC 0 EA5_HMC2 DRAM botm       OK          64 degrees C / 147 degrees F
```

```
FPC 2 Intake-A Temp Sensor     OK          32 degrees C / 89 degrees F
FPC 2 Exhaust-A Temp Sensor    OK          52 degrees C / 125 degrees F
FPC 2 Exhaust-B Temp Sensor    OK          50 degrees C / 122 degrees F
FPC 2 EA0 Temp Sensor          OK          71 degrees C / 159 degrees F
FPC 2 EA0_XR0 Temp Sensor      OK          75 degrees C / 167 degrees F
FPC 2 EA0_XR1 Temp Sensor      OK          78 degrees C / 172 degrees F
FPC 2 EA1 Temp Sensor          OK          64 degrees C / 147 degrees F
FPC 2 EA1_XR0 Temp Sensor      OK          67 degrees C / 152 degrees F
FPC 2 EA1_XR1 Temp Sensor      OK          65 degrees C / 149 degrees F
FPC 2 EA2 Temp Sensor          OK          75 degrees C / 167 degrees F
FPC 2 EA2_XR0 Temp Sensor      OK          80 degrees C / 176 degrees F
FPC 2 EA2_XR1 Temp Sensor      OK          80 degrees C / 176 degrees F
FPC 2 EA3 Temp Sensor          OK          66 degrees C / 150 degrees F
FPC 2 EA3_XR0 Temp Sensor      OK          69 degrees C / 156 degrees F
FPC 2 EA3_XR1 Temp Sensor      OK          69 degrees C / 156 degrees F
FPC 2 EA4 Temp Sensor          OK          75 degrees C / 167 degrees F
FPC 2 EA4_XR0 Temp Sensor      OK          76 degrees C / 168 degrees F
FPC 2 EA4_XR1 Temp Sensor      OK          75 degrees C / 167 degrees F
FPC 2 EA5 Temp Sensor          OK          60 degrees C / 140 degrees F
FPC 2 EA5_XR0 Temp Sensor      OK          64 degrees C / 147 degrees F
FPC 2 EA5_XR1 Temp Sensor      OK          64 degrees C / 147 degrees F
FPC 2 EA0_HMC0 Logic die       OK          84 degrees C / 183 degrees F
FPC 2 EA0_HMC0 DRAM botm       OK          81 degrees C / 177 degrees F
FPC 2 EA0_HMC1 Logic die       OK          85 degrees C / 185 degrees F
FPC 2 EA0_HMC1 DRAM botm       OK          82 degrees C / 179 degrees F
FPC 2 EA0_HMC2 Logic die       OK          83 degrees C / 181 degrees F
FPC 2 EA0_HMC2 DRAM botm       OK          80 degrees C / 176 degrees F
FPC 2 EA1_HMC0 Logic die       OK          76 degrees C / 168 degrees F
FPC 2 EA1_HMC0 DRAM botm       OK          73 degrees C / 163 degrees F
FPC 2 EA1_HMC1 Logic die       OK          76 degrees C / 168 degrees F
FPC 2 EA1_HMC1 DRAM botm       OK          73 degrees C / 163 degrees F
FPC 2 EA1_HMC2 Logic die       OK          76 degrees C / 168 degrees F
FPC 2 EA1_HMC2 DRAM botm       OK          73 degrees C / 163 degrees F
FPC 2 EA2_HMC0 Logic die       OK          86 degrees C / 186 degrees F
FPC 2 EA2_HMC0 DRAM botm       OK          83 degrees C / 181 degrees F
FPC 2 EA2_HMC1 Logic die       OK          87 degrees C / 188 degrees F
FPC 2 EA2_HMC1 DRAM botm       OK          84 degrees C / 183 degrees F
FPC 2 EA2_HMC2 Logic die       OK          87 degrees C / 188 degrees F
FPC 2 EA2_HMC2 DRAM botm       OK          84 degrees C / 183 degrees F
FPC 2 EA3_HMC0 Logic die       OK          80 degrees C / 176 degrees F
FPC 2 EA3_HMC0 DRAM botm       OK          77 degrees C / 170 degrees F
FPC 2 EA3_HMC1 Logic die       OK          80 degrees C / 176 degrees F
FPC 2 EA3_HMC1 DRAM botm       OK          77 degrees C / 170 degrees F
```

```
FPC 2 EA3_HMC2 Logic die       OK         80 degrees C / 176 degrees F
FPC 2 EA3_HMC2 DRAM botm       OK         77 degrees C / 170 degrees F
FPC 2 EA4_HMC0 Logic die       OK         88 degrees C / 190 degrees F
FPC 2 EA4_HMC0 DRAM botm       OK         85 degrees C / 185 degrees F
FPC 2 EA4_HMC1 Logic die       OK         89 degrees C / 192 degrees F
FPC 2 EA4_HMC1 DRAM botm       OK         86 degrees C / 186 degrees F
FPC 2 EA4_HMC2 Logic die       OK         80 degrees C / 176 degrees F
FPC 2 EA4_HMC2 DRAM botm       OK         77 degrees C / 170 degrees F
FPC 2 EA5_HMC0 Logic die       OK         72 degrees C / 161 degrees F
FPC 2 EA5_HMC0 DRAM botm       OK         69 degrees C / 156 degrees F
FPC 2 EA5_HMC1 Logic die       OK         69 degrees C / 156 degrees F
FPC 2 EA5_HMC1 DRAM botm       OK         66 degrees C / 150 degrees F
FPC 2 EA5_HMC2 Logic die       OK         72 degrees C / 161 degrees F
FPC 2 EA5_HMC2 DRAM botm       OK         69 degrees C / 156 degrees F
FPC 3 Intake-A Temp Sensor     OK         30 degrees C / 86 degrees F
FPC 3 Exhaust-A Temp Sensor    OK         48 degrees C / 118 degrees F
FPC 3 Exhaust-B Temp Sensor    OK         44 degrees C / 111 degrees F
FPC 3 EA0 Temp Sensor          OK         60 degrees C / 140 degrees F
FPC 3 EA0_XR0 Temp Sensor      OK         65 degrees C / 149 degrees F
FPC 3 EA0_XR1 Temp Sensor      OK         67 degrees C / 152 degrees F
FPC 3 EA1 Temp Sensor          OK         54 degrees C / 129 degrees F
FPC 3 EA1_XR0 Temp Sensor      OK         59 degrees C / 138 degrees F
FPC 3 EA1_XR1 Temp Sensor      OK         58 degrees C / 136 degrees F
FPC 3 EA2 Temp Sensor          OK         62 degrees C / 143 degrees F
FPC 3 EA2_XR0 Temp Sensor      OK         66 degrees C / 150 degrees F
FPC 3 EA2_XR1 Temp Sensor      OK         66 degrees C / 150 degrees F
FPC 3 EA3 Temp Sensor          OK         54 degrees C / 129 degrees F
FPC 3 EA3_XR0 Temp Sensor      OK         57 degrees C / 134 degrees F
FPC 3 EA3_XR1 Temp Sensor      OK         56 degrees C / 132 degrees F
FPC 3 EA4 Temp Sensor          OK         68 degrees C / 154 degrees F
FPC 3 EA4_XR0 Temp Sensor      OK         71 degrees C / 159 degrees F
FPC 3 EA4_XR1 Temp Sensor      OK         70 degrees C / 158 degrees F
FPC 3 EA5 Temp Sensor          OK         55 degrees C / 131 degrees F
FPC 3 EA5_XR0 Temp Sensor      OK         58 degrees C / 136 degrees F
FPC 3 EA5_XR1 Temp Sensor      OK         58 degrees C / 136 degrees F
FPC 3 EA0_HMC0 Logic die       OK         69 degrees C / 156 degrees F
FPC 3 EA0_HMC0 DRAM botm       OK         66 degrees C / 150 degrees F
FPC 3 EA0_HMC1 Logic die       OK         70 degrees C / 158 degrees F
FPC 3 EA0_HMC1 DRAM botm       OK         67 degrees C / 152 degrees F
FPC 3 EA0_HMC2 Logic die       OK         69 degrees C / 156 degrees F
FPC 3 EA0_HMC2 DRAM botm       OK         66 degrees C / 150 degrees F
FPC 3 EA1_HMC0 Logic die       OK         67 degrees C / 152 degrees F
FPC 3 EA1_HMC0 DRAM botm       OK         64 degrees C / 147 degrees F
```

```
       FPC 3 EA1_HMC1 Logic die       OK          64 degrees C / 147 degrees F
       FPC 3 EA1_HMC1 DRAM botm       OK          61 degrees C / 141 degrees F
       FPC 3 EA1_HMC2 Logic die       OK          64 degrees C / 147 degrees F
       FPC 3 EA1_HMC2 DRAM botm       OK          61 degrees C / 141 degrees F
       FPC 3 EA2_HMC0 Logic die       OK          74 degrees C / 165 degrees F
       FPC 3 EA2_HMC0 DRAM botm       OK          71 degrees C / 159 degrees F
       FPC 3 EA2_HMC1 Logic die       OK          76 degrees C / 168 degrees F
       FPC 3 EA2_HMC1 DRAM botm       OK          73 degrees C / 163 degrees F
       FPC 3 EA2_HMC2 Logic die       OK          74 degrees C / 165 degrees F
       FPC 3 EA2_HMC2 DRAM botm       OK          71 degrees C / 159 degrees F
       FPC 3 EA3_HMC0 Logic die       OK          69 degrees C / 156 degrees F
       FPC 3 EA3_HMC0 DRAM botm       OK          66 degrees C / 150 degrees F
       FPC 3 EA3_HMC1 Logic die       OK          68 degrees C / 154 degrees F
       FPC 3 EA3_HMC1 DRAM botm       OK          65 degrees C / 149 degrees F
       FPC 3 EA3_HMC2 Logic die       OK          68 degrees C / 154 degrees F
       FPC 3 EA3_HMC2 DRAM botm       OK          65 degrees C / 149 degrees F
       FPC 3 EA4_HMC0 Logic die       OK          81 degrees C / 177 degrees F
       FPC 3 EA4_HMC0 DRAM botm       OK          78 degrees C / 172 degrees F
       FPC 3 EA4_HMC1 Logic die       OK          80 degrees C / 176 degrees F
       FPC 3 EA4_HMC1 DRAM botm       OK          77 degrees C / 170 degrees F
       FPC 3 EA4_HMC2 Logic die       OK          81 degrees C / 177 degrees F
       FPC 3 EA4_HMC2 DRAM botm       OK          78 degrees C / 172 degrees F
       FPC 3 EA5_HMC0 Logic die       OK          68 degrees C / 154 degrees F
       FPC 3 EA5_HMC0 DRAM botm       OK          65 degrees C / 149 degrees F
       FPC 3 EA5_HMC1 Logic die       OK          70 degrees C / 158 degrees F
       FPC 3 EA5_HMC1 DRAM botm       OK          67 degrees C / 152 degrees F
       FPC 3 EA5_HMC2 Logic die       OK          69 degrees C / 156 degrees F
       FPC 3 EA5_HMC2 DRAM botm       OK          66 degrees C / 150 degrees F
Power  PEM 0                          OK          29 degrees C / 84 degrees F
       PEM 1                          OK          27 degrees C / 80 degrees F
       PEM 2                          OK          30 degrees C / 86 degrees F
       PEM 3                          Check
       PEM 4                          Check
       PEM 5                          Check
Fans   Fan Tray 0 Fan 0               OK          Spinning at normal speed
       Fan Tray 0 Fan 1               OK          Spinning at normal speed
       Fan Tray 0 Fan 2               OK          Spinning at normal speed
       Fan Tray 0 Fan 3               OK          Spinning at normal speed
       Fan Tray 0 Fan 4               Failed
       Fan Tray 0 Fan 5               Failed
       Fan Tray 0 Fan 6               OK          Spinning at normal speed
       Fan Tray 0 Fan 7               OK          Spinning at normal speed
       Fan Tray 0 Fan 8               OK          Spinning at normal speed
```

```
Fan Tray 0 Fan 9              OK          Spinning at normal speed
Fan Tray 0 Fan 10             OK          Spinning at normal speed
Fan Tray 1 Fan 0              OK          Spinning at normal speed
Fan Tray 1 Fan 1              OK          Spinning at normal speed
Fan Tray 1 Fan 2              OK          Spinning at normal speed
Fan Tray 1 Fan 3              OK          Spinning at normal speed
Fan Tray 1 Fan 4              OK          Spinning at normal speed
Fan Tray 1 Fan 5              OK          Spinning at normal speed
Fan Tray 1 Fan 6              OK          Spinning at normal speed
Fan Tray 1 Fan 7              OK          Spinning at normal speed
Fan Tray 1 Fan 8              OK          Spinning at normal speed
Fan Tray 1 Fan 9              OK          Spinning at normal speed
Fan Tray 1 Fan 10             OK          Spinning at normal speed
SFB 0 Intake-A                OK          32 degrees C / 89 degrees F
SFB 0 Intake-B                OK          21 degrees C / 69 degrees F
SFB 0 Exhaust-A               OK          27 degrees C / 80 degrees F
SFB 0 Exhaust-B               OK          32 degrees C / 89 degrees F
SFB 0 PF0                     OK          39 degrees C / 102 degrees F
SFB 0 PF1                     OK          29 degrees C / 84 degrees F
SFB 1 Intake-A                OK          43 degrees C / 109 degrees F
SFB 1 Intake-B                OK          20 degrees C / 68 degrees F
SFB 1 Exhaust-A               OK          25 degrees C / 77 degrees F
SFB 1 Exhaust-B               OK          44 degrees C / 111 degrees F
SFB 1 PF0                     OK          50 degrees C / 122 degrees F
SFB 1 PF1                     OK          29 degrees C / 84 degrees F
SFB 2 Intake-A                OK          39 degrees C / 102 degrees F
SFB 2 Intake-B                OK          20 degrees C / 68 degrees F
SFB 2 Exhaust-A               OK          25 degrees C / 77 degrees F
SFB 2 Exhaust-B               OK          38 degrees C / 100 degrees F
SFB 2 PF0                     OK          45 degrees C / 113 degrees F
SFB 2 PF1                     OK          30 degrees C / 86 degrees F
SFB 3 Intake-A                OK          36 degrees C / 96 degrees F
SFB 3 Intake-B                OK          20 degrees C / 68 degrees F
SFB 3 Exhaust-A               OK          25 degrees C / 77 degrees F
SFB 3 Exhaust-B               OK          35 degrees C / 95 degrees F
SFB 3 PF0                     OK          42 degrees C / 107 degrees F
SFB 3 PF1                     OK          29 degrees C / 84 degrees F
SFB 4 Intake-A                OK          30 degrees C / 86 degrees F
SFB 4 Intake-B                OK          20 degrees C / 68 degrees F
SFB 4 Exhaust-A               OK          25 degrees C / 77 degrees F
SFB 4 Exhaust-B               OK          31 degrees C / 87 degrees F
SFB 4 PF0                     OK          41 degrees C / 105 degrees F
SFB 4 PF1                     OK          29 degrees C / 84 degrees F
```

```
      SFB 5 Intake-A                OK          30 degrees C / 86 degrees F
      SFB 5 Intake-B                OK          21 degrees C / 69 degrees F
      SFB 5 Exhaust-A               OK          25 degrees C / 77 degrees F
      SFB 5 Exhaust-B               OK          30 degrees C / 86 degrees F
      SFB 5 PF0                     OK          35 degrees C / 95 degrees F
      SFB 5 PF1                     OK          34 degrees C / 93 degrees F
```

show chassis environment (MX204 Router)

```
user@host> show chassis environment

Class Item                          Status     Measurement
Temp  CB 0 Top Right Inlet Sensor   OK         35 degrees C / 95 degrees F
      CB 0 Top Left Inlet Sensor    OK         37 degrees C / 98 degrees F
      CB 0 Top Right Exhaust Sensor OK         43 degrees C / 109 degrees F
      CB 0 Top Left Exhaust Sensor  OK         50 degrees C / 122 degrees F
      CB 0 CPU Core-0 Temp          OK         47 degrees C / 116 degrees F
      CB 0 CPU Core-1 Temp          OK         48 degrees C / 118 degrees F
      CB 0 CPU Core-2 Temp          OK         47 degrees C / 116 degrees F
      CB 0 CPU Core-3 Temp          OK         47 degrees C / 116 degrees F
      CB 0 CPU Core-4 Temp          OK         47 degrees C / 116 degrees F
      CB 0 CPU Core-5 Temp          OK         47 degrees C / 116 degrees F
      CB 0 CPU Core-6 Temp          OK         47 degrees C / 116 degrees F
      CB 0 CPU Core-7 Temp          OK         47 degrees C / 116 degrees F
      FPC 0 EA0_HMC0 Logic die      OK         77 degrees C / 170 degrees F
      FPC 0 EA0_HMC0 DRAM botm      OK         74 degrees C / 165 degrees F
      FPC 0 EA0_HMC1 Logic die      OK         81 degrees C / 177 degrees F
      FPC 0 EA0_HMC1 DRAM botm      OK         78 degrees C / 172 degrees F
      FPC 0 EA0 Chip                OK         94 degrees C / 201 degrees F
      FPC 0 EA0-XR0 Chip            OK         64 degrees C / 147 degrees F
      FPC 0 EA0-XR1 Chip            OK         65 degrees C / 149 degrees F
Power PEM 0                         Absent
      PEM 1                         OK         48 degrees C / 118 degrees F
Fans  Fan Tray 0 Fan 0              OK         Spinning at normal speed
      Fan Tray 0 Fan 1              OK         Spinning at normal speed
      Fan Tray 1 Fan 0              OK         Spinning at normal speed
      Fan Tray 1 Fan 1              OK         Spinning at normal speed
      Fan Tray 2 Fan 0              OK         Spinning at normal speed
      Fan Tray 2 Fan 1              OK         Spinning at normal speed
```

show chassis environment (T640 Router)

```
user@host> show chassis environment
Class Item                   Status     Measurement
Temp  PEM 0                  Absent
      PEM 1                  OK         22 degrees C / 71 degrees F
      SCG 0                  OK         30 degrees C / 86 degrees F
      SCG 1                  OK         30 degrees C / 86 degrees F
      Routing Engine 0       Present
      Routing Engine 1       OK         27 degrees C / 80 degrees F
      CB 0                   Present
      CB 1                   OK         33 degrees C / 91 degrees F
      SIB 0                  Absent
      SIB 1                  Absent
      SIB 2                  Absent
      SIB 3                  Absent
      SIB 4                  Absent
      FPC 4 Top              Testing
      FPC 4 Bottom           Testing
      FPC 5 Top              Testing
      FPC 5 Bottom           Testing
      FPC 6 Top              Testing
      FPC 6 Bottom           Testing
      FPM GBUS               OK         23 degrees C / 73 degrees F
      FPM Display            Absent
Fans  Top Left Front fan     OK         Spinning at normal speed
      Top Left Middle fan    OK         Spinning at normal speed
      Top Left Rear fan      OK         Spinning at normal speed
      Top Right Front fan    OK         Spinning at normal speed
      Top Right Middle fan   OK         Spinning at normal speed
      Top Right Rear fan     OK         Spinning at normal speed
      Bottom Left Front fan  OK         Spinning at normal speed
      Bottom Left Middle fan OK         Spinning at normal speed
      Bottom Left Rear fan   OK         Spinning at normal speed
      Bottom Right Front fan OK         Spinning at normal speed
      Bottom Right Middle fan OK        Spinning at normal speed
      Bottom Right Rear fan  OK         Spinning at normal speed
      Fourth Blower from top OK         Spinning at normal speed
      Bottom Blower          OK         Spinning at normal speed
      Middle Blower          OK         Spinning at normal speed
      Top Blower             OK         Spinning at normal speed
      Second Blower from top OK         Spinning at normal speed
```

```
Misc  CIP                     OK
      SPMB 0                  OK
      SPMB 1                  OK
```

show chassis environment (T4000 Router)

```
user@host> show chassis environment
Class Item                            Status     Measurement
Temp  PEM 0                           OK         33 degrees C / 91 degrees F
      PEM 1                           Absent
      SCG 0                           OK         33 degrees C / 91 degrees F
      SCG 1                           OK         33 degrees C / 91 degrees F
      Routing Engine 0                OK         33 degrees C / 91 degrees F
      Routing Engine 0 CPU            OK         50 degrees C / 122 degrees F
      Routing Engine 1                OK         32 degrees C / 89 degrees F
      Routing Engine 1 CPU            OK         46 degrees C / 114 degrees F
      CB 0                            OK         32 degrees C / 89 degrees F
      CB 1                            OK         33 degrees C / 91 degrees F
      SIB 0                           OK         42 degrees C / 107 degrees F
      SIB 1                           OK         42 degrees C / 107 degrees F
      SIB 2                           OK         42 degrees C / 107 degrees F
      SIB 3                           OK         43 degrees C / 109 degrees F
      SIB 4                           OK         45 degrees C / 113 degrees F
      FPC 0 Fan Intake                OK         34 degrees C / 93 degrees F
      FPC 0 Fan Exhaust               OK         48 degrees C / 118 degrees F
      FPC 0 PMB                       OK         47 degrees C / 116 degrees F
      FPC 0 LMB0                      OK         50 degrees C / 122 degrees F
      FPC 0 LMB1                      OK         41 degrees C / 105 degrees F
      FPC 0 LMB2                      OK         35 degrees C / 95 degrees F
      FPC 0 PFE1 LU2                  OK         46 degrees C / 114 degrees F
      FPC 0 PFE1 LU0                  OK         41 degrees C / 105 degrees F
      FPC 0 PFE0 LU0                  OK         57 degrees C / 134 degrees F
      FPC 0 XF1                       OK         46 degrees C / 114 degrees F
      FPC 0 XF0                       OK         52 degrees C / 125 degrees F
      FPC 0 XM1                       OK         41 degrees C / 105 degrees F
      FPC 0 XM0                       OK         50 degrees C / 122 degrees F
      FPC 0 PFE0 LU1                  OK         56 degrees C / 132 degrees F
      FPC 0 PFE0 LU2                  OK         45 degrees C / 113 degrees F
      FPC 0 PFE1 LU1                  OK         37 degrees C / 98 degrees F
      FPC 3 Fan Intake                OK         36 degrees C / 96 degrees F
```

```
       FPC 3 Fan Exhaust              OK          51 degrees C / 123 degrees F
       FPC 3 PMB                      OK          43 degrees C / 109 degrees F
       FPC 3 LMB0                     OK          57 degrees C / 134 degrees F
       FPC 3 LMB1                     OK          54 degrees C / 129 degrees F
       FPC 3 LMB2                     OK          38 degrees C / 100 degrees F
       FPC 3 PFE1 LU2                 OK          63 degrees C / 145 degrees F
       FPC 3 PFE1 LU0                 OK          45 degrees C / 113 degrees F
       FPC 3 PFE0 LU0                 OK          69 degrees C / 156 degrees F
       FPC 3 XF1                      OK          62 degrees C / 143 degrees F
       FPC 3 XF0                      OK          63 degrees C / 145 degrees F
       FPC 3 XM1                      OK          43 degrees C / 109 degrees F
       FPC 3 XM0                      OK          67 degrees C / 152 degrees F
       FPC 3 PFE0 LU1                 OK          63 degrees C / 145 degrees F
       FPC 3 PFE0 LU2                 OK          66 degrees C / 150 degrees F
       FPC 3 PFE1 LU1                 OK          41 degrees C / 105 degrees F
       FPC 5 Top                      OK          39 degrees C / 102 degrees F
       FPC 5 Bottom                   OK          38 degrees C / 100 degrees F
       FPC 6 Fan Intake               OK          33 degrees C / 91 degrees F
       FPC 6 Fan Exhaust              OK          49 degrees C / 120 degrees F
       FPC 6 PMB                      OK          40 degrees C / 104 degrees F
       FPC 6 LMB0                     OK          60 degrees C / 140 degrees F
       FPC 6 LMB1                     OK          58 degrees C / 136 degrees F
       FPC 6 LMB2                     OK          40 degrees C / 104 degrees F
       FPC 6 PFE1 LU2                 OK          69 degrees C / 156 degrees F
       FPC 6 PFE1 LU0                 OK          45 degrees C / 113 degrees F
       FPC 6 PFE0 LU0                 OK          71 degrees C / 159 degrees F
       FPC 6 XF1                      OK          58 degrees C / 136 degrees F
       FPC 6 XF0                      OK          65 degrees C / 149 degrees F
       FPC 6 XM1                      OK          39 degrees C / 102 degrees F
       FPC 6 XM0                      OK          66 degrees C / 150 degrees F
       FPC 6 PFE0 LU1                 OK          69 degrees C / 156 degrees F
       FPC 6 PFE0 LU2                 OK          69 degrees C / 156 degrees F
       FPC 6 PFE1 LU1                 OK          42 degrees C / 107 degrees F
       FPM GBUS                       OK          24 degrees C / 75 degrees F
       FPM Display                    OK          27 degrees C / 80 degrees F
Fans   Top Left Front fan             OK          Spinning at high speed
       Top Left Middle fan            OK          Spinning at high speed
       Top Left Rear fan              OK          Spinning at high speed
       Top Right Front fan            OK          Spinning at high speed
       Top Right Middle fan           OK          Spinning at high speed
       Top Right Rear fan             OK          Spinning at high speed
       Bottom Left Front fan          OK          Spinning at high speed
       Bottom Left Middle fan         OK          Spinning at high speed
```

```
      Bottom Left Rear fan          OK         Spinning at high speed
      Bottom Right Front fan        OK         Spinning at high speed
      Bottom Right Middle fan       OK         Spinning at high speed
      Bottom Right Rear fan         OK         Spinning at high speed
      Rear Tray Top fan             OK         Spinning at high speed
      Rear Tray Second fan          OK         Spinning at high speed
      Rear Tray Third fan           OK         Spinning at high speed
      Rear Tray Fourth fan          OK         Spinning at high speed
      Rear Tray Fifth fan           OK         Spinning at high speed
      Rear Tray Sixth fan           OK         Spinning at high speed
      Rear Tray Seventh fan         OK         Spinning at high speed
      Rear Tray Bottom fan          OK         Spinning at high speed
Misc  CIP                           OK
      SPMB 0                        OK
      SPMB 1                        OK
```

show chassis environment (TX Matrix Router)

```
user@host> show chassis environment

---------------------------------------------------------------------------
Class Item                  Status     Measurement
Temp  PEM 0                 Absent
      PEM 1                 OK         29 degrees C / 84 degrees F
      Routing Engine 0      OK         34 degrees C / 93 degrees F
      Routing Engine 1      OK         34 degrees C / 93 degrees F
      CB 0                  OK         32 degrees C / 89 degrees F
      CB 1                  OK         32 degrees C / 89 degrees F
      SIB 0                 OK         44 degrees C / 111 degrees F
      SIB 0 (B)             OK         44 degrees C / 111 degrees F
      FPM GBUS              OK         27 degrees C / 80 degrees F
      FPM Display           OK         32 degrees C / 89 degrees F
Fans  Top Left Front fan    OK         Spinning at normal speed
      Top Left Middle fan   OK         Spinning at normal speed
      Top Left Rear fan     OK         Spinning at normal speed
      Top Right Front fan   OK         Spinning at normal speed
      Top Right Middle fan  OK         Spinning at normal speed
      Top Right Rear fan    OK         Spinning at normal speed
      Bottom Left Front fan OK         Spinning at normal speed
      Bottom Left Middle fan OK        Spinning at normal speed
      Bottom Left Rear fan  OK         Spinning at normal speed
```

```
      Bottom Right Front fan OK         Spinning at normal speed
      Bottom Right Middle fan OK        Spinning at normal speed
      Bottom Right Rear fan  OK         Spinning at normal speed
      Rear Tray Top fan      OK         Spinning at normal speed
      Rear Tray Second fan   OK         Spinning at normal speed
      Rear Tray Third fan    OK         Spinning at normal speed
      Rear Tray Fourth fan   OK         Spinning at normal speed
      Rear Tray Fifth fan    OK         Spinning at normal speed
      Rear Tray Sixth fan    OK         Spinning at normal speed
      Rear Tray Seventh fan  OK         Spinning at normal speed
      Rear Tray Bottom fan   OK         Spinning at normal speed
Misc  CIP 0                  OK
      CIP 1                  OK
      SPMB 0                 OK
      SPMB 1                 OK

lcc0-re0:
--------------------------------------------------------------------------
Class Item                   Status     Measurement
Temp  PEM 0                  OK         29 degrees C / 84 degrees F
      PEM 1                  Absent
      SCG 0                  OK         35 degrees C / 95 degrees F
      SCG 1                  Absent
      Routing Engine 0       OK         39 degrees C / 102 degrees F
      Routing Engine 1       OK         36 degrees C / 96 degrees F
      CB 0                   OK         32 degrees C / 89 degrees F
      CB 1                   OK         32 degrees C / 89 degrees F
      SIB 0                  OK         40 degrees C / 104 degrees F
      SIB 0 (B)              OK         51 degrees C / 123 degrees F
      FPC 0 Top              OK         45 degrees C / 113 degrees F
      FPC 0 Bottom           OK         31 degrees C / 87 degrees F
      FPC 1 Top              OK         34 degrees C / 93 degrees F
      FPC 1 Bottom           OK         31 degrees C / 87 degrees F
      FPM GBUS               OK         30 degrees C / 86 degrees F
      FPM Display            OK         34 degrees C / 93 degrees F
Fans  Top Left Front fan     OK         Spinning at normal speed
      Top Left Middle fan    OK         Spinning at normal speed
      Top Left Rear fan      OK         Spinning at normal speed
      Top Right Front fan    OK         Spinning at normal speed
      Top Right Middle fan   OK         Spinning at normal speed
      Top Right Rear fan     OK         Spinning at normal speed
      Bottom Left Front fan  OK         Spinning at normal speed
      Bottom Left Middle fan OK         Spinning at normal speed
```

```
      Bottom Left Rear fan   OK         Spinning at normal speed
      Bottom Right Front fan OK         Spinning at normal speed
      Bottom Right Middle fan OK        Spinning at normal speed
      Bottom Right Rear fan  OK         Spinning at normal speed
      Rear Tray Top fan      OK         Spinning at normal speed
      Rear Tray Second fan   OK         Spinning at normal speed
      Rear Tray Third fan    OK         Spinning at normal speed
      Rear Tray Fourth fan   OK         Spinning at normal speed
      Rear Tray Fifth fan    OK         Spinning at normal speed
      Rear Tray Sixth fan    OK         Spinning at normal speed
      Rear Tray Seventh fan  OK         Spinning at normal speed
      Rear Tray Bottom fan   OK         Spinning at normal speed
Misc  CIP                    OK
      SPMB 0                 OK
      SPMB 1                 OK

lcc2-re0:
--------------------------------------------------------------------------
Class Item                   Status     Measurement
Temp  PEM 0                  OK         29 degrees C / 84 degrees F
      PEM 1                  Absent
      SCG 0                  OK         32 degrees C / 89 degrees F
      SCG 1                  Absent
      Routing Engine 0       OK         31 degrees C / 87 degrees F
      Routing Engine 1       OK         32 degrees C / 89 degrees F
      CB 0                   OK         30 degrees C / 86 degrees F
      SIB 0                  OK         38 degrees C / 100 degrees F
      SIB 0 (B)              OK         49 degrees C / 120 degrees F
      FPC 0 Top              OK         45 degrees C / 113 degrees F
      FPC 0 Bottom           OK         33 degrees C / 91 degrees F
      FPC 1 Top              OK         37 degrees C / 98 degrees F
      FPC 1 Bottom           OK         33 degrees C / 91 degrees F
      FPM GBUS               OK         30 degrees C / 86 degrees F
      FPM Display            OK         34 degrees C / 93 degrees F
Fans  Top Left Front fan     OK         Spinning at normal speed
      Top Left Middle fan    OK         Spinning at normal speed
...
```

show chassis environment (T1600 Router)

```
user@host> show chassis environment
Class Item                           Status     Measurement
Temp  PEM 0                          OK         27 degrees C / 80 degrees F
      PEM 1                          Absent
      SCG 0                          OK         31 degrees C / 87 degrees F
      SCG 1                          OK         35 degrees C / 95 degrees F
      Routing Engine 0               OK         30 degrees C / 86 degrees F
      Routing Engine 1               OK         30 degrees C / 86 degrees F
      CB 0                           OK         31 degrees C / 87 degrees F
      CB 1                           OK         31 degrees C / 87 degrees F
      SIB 0                          OK         41 degrees C / 105 degrees F
      SIB 0 (B)                      OK         34 degrees C / 93 degrees F
      SIB 1                          OK         0 degrees C / 32 degrees F
      SIB 1 (B)                      OK         0 degrees C / 32 degrees F
      SIB 2                          OK         0 degrees C / 32 degrees F
      SIB 2 (B)                      OK         0 degrees C / 32 degrees F
      SIB 3                          OK         0 degrees C / 32 degrees F
      SIB 3 (B)                      OK         0 degrees C / 32 degrees F
      SIB 4                          OK         0 degrees C / 32 degrees F
      SIB 4 (B)                      OK         0 degrees C / 32 degrees F
      FPC 0 Top                      OK         49 degrees C / 120 degrees F
      FPC 0 Bottom                   OK         50 degrees C / 122 degrees F
      FPC 1 Top                      OK         48 degrees C / 118 degrees F
      FPC 1 Bottom                   OK         49 degrees C / 120 degrees F
      FPM GBUS                       OK         27 degrees C / 80 degrees F
      FPM Display                    OK         30 degrees C / 86 degrees F
Fans  Top Left Front fan             OK         Spinning at normal speed
      Top Left Middle fan            OK         Spinning at normal speed
      Top Left Rear fan              OK         Spinning at normal speed
      Top Right Front fan            OK         Spinning at normal speed
      Top Right Middle fan           OK         Spinning at normal speed
      Top Right Rear fan             OK         Spinning at normal speed
      Bottom Left Front fan          OK         Spinning at normal speed
      Bottom Left Middle fan         OK         Spinning at normal speed
      Bottom Left Rear fan           OK         Spinning at normal speed
      Bottom Right Front fan         OK         Spinning at normal speed
      Bottom Right Middle fan        OK         Spinning at normal speed
      Bottom Right Rear fan          OK         Spinning at normal speed
      Rear Tray Top fan              OK         Spinning at normal speed
      Rear Tray Second fan           OK         Spinning at normal speed
```

```
      Rear Tray Third fan           OK         Spinning at normal speed
      Rear Tray Fourth fan          OK         Spinning at normal speed
      Rear Tray Fifth fan           OK         Spinning at normal speed
      Rear Tray Sixth fan           OK         Spinning at normal speed
      Rear Tray Seventh fan         OK         Spinning at normal speed
      Rear Tray Bottom fan          OK         Spinning at normal speed
Misc  CIP                           OK
      SPMB 0                        OK
      SPMB 1                        OK
```

show chassis environment (TX Matrix Plus Router)

```
user@host> show chassis environment

---------------------------------------------------------------------------
Class Item                          Status     Measurement
Temp  PEM 0                         OK         28 degrees C / 82 degrees F
      PEM 1                         Absent
      Routing Engine 0              OK         27 degrees C / 80 degrees F
      Routing Engine 1              OK         29 degrees C / 84 degrees F
      CB 0 Intake                   OK         26 degrees C / 78 degrees F
      CB 0 Exhaust A                OK         25 degrees C / 77 degrees F
      CB 0 Exhaust B                OK         25 degrees C / 77 degrees F
      CB 1 Intake                   OK         26 degrees C / 78 degrees F
      CB 1 Exhaust A                OK         26 degrees C / 78 degrees F
      CB 1 Exhaust B                OK         26 degrees C / 78 degrees F
      SIB F13 0                     OK         47 degrees C / 116 degrees F
      SIB F13 0 (B)                 OK         48 degrees C / 118 degrees F
      SIB F13 1                     OK         38 degrees C / 100 degrees F
      SIB F13 1 (B)                 OK         37 degrees C / 98 degrees F
      SIB F2S 0/0                   OK         27 degrees C / 80 degrees F
      SIB F2S 0/2                   OK         28 degrees C / 82 degrees F
      SIB F2S 0/4                   OK         27 degrees C / 80 degrees F
      SIB F2S 0/6                   OK         28 degrees C / 82 degrees F
      SIB F2S 1/0                   OK         26 degrees C / 78 degrees F
      SIB F2S 1/2                   OK         26 degrees C / 78 degrees F
      SIB F2S 1/4                   OK         26 degrees C / 78 degrees F
      SIB F2S 1/6                   OK         26 degrees C / 78 degrees F
      SIB F2S 2/0                   OK         25 degrees C / 77 degrees F
      SIB F2S 2/2                   OK         25 degrees C / 77 degrees F
      SIB F2S 2/4                   OK         23 degrees C / 73 degrees F
```

```
       CIP 0 Intake                OK          23 degrees C / 73 degrees F
       CIP 0 Exhaust A             OK          24 degrees C / 75 degrees F
       CIP 0 Exhaust B             OK          24 degrees C / 75 degrees F
       CIP 1 Intake                OK          24 degrees C / 75 degrees F
       CIP 1 Exhaust A             OK          25 degrees C / 77 degrees F
       CIP 1 Exhaust B             OK          25 degrees C / 77 degrees F
Fans   Fan Tray 0 Fan 1            OK          Spinning at normal speed
       Fan Tray 0 Fan 2            OK          Spinning at normal speed
       Fan Tray 0 Fan 3            OK          Spinning at normal speed
       Fan Tray 0 Fan 4            OK          Spinning at normal speed
       Fan Tray 0 Fan 5            OK          Spinning at normal speed
       Fan Tray 0 Fan 6            OK          Spinning at normal speed
       Fan Tray 1 Fan 1            OK          Spinning at normal speed
       Fan Tray 1 Fan 2            OK          Spinning at normal speed
       Fan Tray 1 Fan 3            OK          Spinning at normal speed
       Fan Tray 1 Fan 4            OK          Spinning at normal speed
       Fan Tray 1 Fan 5            OK          Spinning at normal speed
       Fan Tray 1 Fan 6            OK          Spinning at normal speed
       Fan Tray 2 Fan 1            OK          Spinning at normal speed
       Fan Tray 2 Fan 2            OK          Spinning at normal speed
       Fan Tray 2 Fan 3            OK          Spinning at normal speed
       Fan Tray 2 Fan 4            OK          Spinning at normal speed
       Fan Tray 2 Fan 5            OK          Spinning at normal speed
       Fan Tray 2 Fan 6            OK          Spinning at normal speed
       Fan Tray 2 Fan 7            OK          Spinning at normal speed
       Fan Tray 2 Fan 8            OK          Spinning at normal speed
       Fan Tray 2 Fan 9            OK          Spinning at normal speed
       Fan Tray 3 Fan 1            OK          Spinning at normal speed
       Fan Tray 3 Fan 2            OK          Spinning at normal speed
       Fan Tray 3 Fan 3            OK          Spinning at normal speed
       Fan Tray 3 Fan 4            OK          Spinning at normal speed
       Fan Tray 3 Fan 5            OK          Spinning at normal speed
       Fan Tray 3 Fan 6            OK          Spinning at normal speed
       Fan Tray 3 Fan 7            OK          Spinning at normal speed
       Fan Tray 3 Fan 8            OK          Spinning at normal speed
       Fan Tray 3 Fan 9            OK          Spinning at normal speed
       Fan Tray 4 Fan 1            OK          Spinning at normal speed
       Fan Tray 4 Fan 2            OK          Spinning at normal speed
       Fan Tray 4 Fan 3            OK          Spinning at normal speed
       Fan Tray 4 Fan 4            OK          Spinning at normal speed
       Fan Tray 4 Fan 5            OK          Spinning at normal speed
       Fan Tray 4 Fan 6            OK          Spinning at normal speed
       Fan Tray 4 Fan 7            OK          Spinning at normal speed
```

```
      Fan Tray 4 Fan 8              OK          Spinning at normal speed
      Fan Tray 4 Fan 9              OK          Spinning at normal speed
      Fan Tray 5 Fan 1              OK          Spinning at normal speed
      Fan Tray 5 Fan 2              OK          Spinning at normal speed
      Fan Tray 5 Fan 3              OK          Spinning at normal speed
      Fan Tray 5 Fan 4              OK          Spinning at normal speed
      Fan Tray 5 Fan 5              OK          Spinning at normal speed
      Fan Tray 5 Fan 6              OK          Spinning at normal speed
      Fan Tray 5 Fan 7              OK          Spinning at normal speed
      Fan Tray 5 Fan 8              OK          Spinning at normal speed
      Fan Tray 5 Fan 9              OK          Spinning at normal speed
Misc  SPMB 0                        OK
      SPMB 1                        OK

lcc0-re0:
--------------------------------------------------------------------------
Class Item                          Status      Measurement
Temp  PEM 0                         OK          27 degrees C / 80 degrees F
      PEM 1                         Absent
      SCG 0                         OK          31 degrees C / 87 degrees F
      SCG 1                         OK          35 degrees C / 95 degrees F
      Routing Engine 0              OK          30 degrees C / 86 degrees F
      Routing Engine 1              OK          30 degrees C / 86 degrees F
      CB 0                          OK          31 degrees C / 87 degrees F
      CB 1                          OK          31 degrees C / 87 degrees F
      SIB 0                         OK          41 degrees C / 105 degrees F
      SIB 0 (B)                     OK          34 degrees C / 93 degrees F
      SIB 1                         OK          0 degrees C / 32 degrees F
      SIB 1 (B)                     OK          0 degrees C / 32 degrees F
      SIB 2                         OK          0 degrees C / 32 degrees F
      SIB 2 (B)                     OK          0 degrees C / 32 degrees F
      SIB 3                         OK          0 degrees C / 32 degrees F
      SIB 3 (B)                     OK          0 degrees C / 32 degrees F
      SIB 4                         OK          0 degrees C / 32 degrees F
      SIB 4 (B)                     OK          0 degrees C / 32 degrees F
      FPC 0 Top                     OK          49 degrees C / 120 degrees F
      FPC 0 Bottom                  OK          50 degrees C / 122 degrees F
      FPC 1 Top                     OK          48 degrees C / 118 degrees F
      FPC 1 Bottom                  OK          49 degrees C / 120 degrees F
      FPM GBUS                      OK          27 degrees C / 80 degrees F
      FPM Display                   OK          30 degrees C / 86 degrees F
Fans  Top Left Front fan            OK          Spinning at normal speed
      Top Left Middle fan           OK          Spinning at normal speed
```

```
      Top Left Rear fan              OK         Spinning at normal speed
      Top Right Front fan            OK         Spinning at normal speed
      Top Right Middle fan           OK         Spinning at normal speed
      Top Right Rear fan             OK         Spinning at normal speed
      Bottom Left Front fan          OK         Spinning at normal speed
      Bottom Left Middle fan         OK         Spinning at normal speed
      Bottom Left Rear fan           OK         Spinning at normal speed
      Bottom Right Front fan         OK         Spinning at normal speed
      Bottom Right Middle fan        OK         Spinning at normal speed
      Bottom Right Rear fan          OK         Spinning at normal speed
      Rear Tray Top fan              OK         Spinning at normal speed
      Rear Tray Second fan           OK         Spinning at normal speed
      Rear Tray Third fan            OK         Spinning at normal speed
      Rear Tray Fourth fan           OK         Spinning at normal speed
      Rear Tray Fifth fan            OK         Spinning at normal speed
      Rear Tray Sixth fan            OK         Spinning at normal speed
      Rear Tray Seventh fan          OK         Spinning at normal speed
      Rear Tray Bottom fan           OK         Spinning at normal speed
Misc  CIP                            OK
      SPMB 0                         OK
      SPMB 1                         OK
```

show chassis environment (TX Matrix Plus router with 3D SIBs)

```
user@host> show chassis environment

---------------------------------------------------------------------------
Class Item                           Status     Measurement
Temp  PEM 0                          Check      30 degrees C / 86 degrees F
      PEM 1                          OK         33 degrees C / 91 degrees F
      Routing Engine 0               OK         28 degrees C / 82 degrees F
      Routing Engine 0 CPU           OK         42 degrees C / 107 degrees F
      Routing Engine 1               OK         29 degrees C / 84 degrees F
      Routing Engine 1 CPU           OK         44 degrees C / 111 degrees F
      CB 0 Intake                    OK         30 degrees C / 86 degrees F
      CB 0 Exhaust A                 OK         28 degrees C / 82 degrees F
      CB 0 Exhaust B                 OK         30 degrees C / 86 degrees F
      CB 1 Intake                    OK         31 degrees C / 87 degrees F
      CB 1 Exhaust A                 OK         27 degrees C / 80 degrees F
      CB 1 Exhaust B                 OK         31 degrees C / 87 degrees F
      SIB F13 0 Board                OK         44 degrees C / 111 degrees F
```

```
       SIB F13 0 XF Junction          OK          62 degrees C / 143 degrees F
       SIB F13 3 Board                OK          45 degrees C / 113 degrees F
       SIB F13 3 XF Junction          OK          60 degrees C / 140 degrees F
       SIB F13 6 Board                OK          47 degrees C / 116 degrees F
       SIB F13 6 XF Junction          OK          62 degrees C / 143 degrees F
       SIB F2S 0/0 Board              OK          32 degrees C / 89 degrees F
       SIB F2S 0/0 XF Junction        OK          42 degrees C / 107 degrees F
       SIB F2S 0/2 Board              OK          31 degrees C / 87 degrees F
       SIB F2S 0/2 XF Junction        OK          41 degrees C / 105 degrees F
       SIB F2S 0/4 Board              OK          31 degrees C / 87 degrees F
       SIB F2S 0/4 XF Junction        OK          42 degrees C / 107 degrees F
       SIB F2S 0/6 Board              OK          31 degrees C / 87 degrees F
       SIB F2S 0/6 XF Junction        OK          41 degrees C / 105 degrees F
       SIB F2S 1/0 Board              OK          31 degrees C / 87 degrees F
       SIB F2S 1/0 XF Junction        OK          41 degrees C / 105 degrees F
       SIB F2S 1/2 Board              OK          29 degrees C / 84 degrees F
       SIB F2S 1/2 XF Junction        OK          39 degrees C / 102 degrees F
       SIB F2S 1/4 Board              OK          29 degrees C / 84 degrees F
       SIB F2S 1/4 XF Junction        OK          35 degrees C / 95 degrees F
       SIB F2S 1/6 Board              OK          30 degrees C / 86 degrees F
       SIB F2S 1/6 XF Junction        OK          41 degrees C / 105 degrees F
       SIB F2S 2/0 Board              OK          30 degrees C / 86 degrees F
       SIB F2S 2/0 XF Junction        OK          42 degrees C / 107 degrees F
       SIB F2S 2/2 Board              OK          28 degrees C / 82 degrees F
       SIB F2S 2/2 XF Junction        OK          39 degrees C / 102 degrees F
       SIB F2S 2/4 Board              OK          29 degrees C / 84 degrees F
       SIB F2S 2/4 XF Junction        OK          42 degrees C / 107 degrees F
       SIB F2S 2/6 Board              OK          29 degrees C / 84 degrees F
       SIB F2S 2/6 XF Junction        OK          41 degrees C / 105 degrees F
       CIP 0 Intake                   OK          25 degrees C / 77 degrees F
       CIP 0 Exhaust A                OK          26 degrees C / 78 degrees F
       CIP 0 Exhaust B                OK          26 degrees C / 78 degrees F
       CIP 1 Intake                   OK          26 degrees C / 78 degrees F
       CIP 1 Exhaust A                OK          27 degrees C / 80 degrees F
       CIP 1 Exhaust B                OK          27 degrees C / 80 degrees F
Fans   Fan Tray 0 Fan 1               OK          Spinning at normal speed
       Fan Tray 0 Fan 2               OK          Spinning at normal speed
       Fan Tray 0 Fan 3               OK          Spinning at normal speed
       Fan Tray 0 Fan 4               OK          Spinning at normal speed
       Fan Tray 0 Fan 5               OK          Spinning at normal speed
       Fan Tray 0 Fan 6               OK          Spinning at normal speed
       Fan Tray 1 Fan 1               OK          Spinning at normal speed
       Fan Tray 1 Fan 2               OK          Spinning at normal speed
```

```
       Fan Tray 1 Fan 3              OK         Spinning at normal speed
       Fan Tray 1 Fan 4              OK         Spinning at normal speed
       Fan Tray 1 Fan 5              OK         Spinning at normal speed
       Fan Tray 1 Fan 6              OK         Spinning at normal speed
       Fan Tray 2 Fan 1              OK         Spinning at normal speed
       Fan Tray 2 Fan 2              OK         Spinning at normal speed
       Fan Tray 2 Fan 3              OK         Spinning at normal speed
       Fan Tray 2 Fan 4              OK         Spinning at normal speed
       Fan Tray 2 Fan 5              OK         Spinning at normal speed
       Fan Tray 2 Fan 6              OK         Spinning at normal speed
       Fan Tray 2 Fan 7              OK         Spinning at normal speed
       Fan Tray 2 Fan 8              OK         Spinning at normal speed
       Fan Tray 2 Fan 9              OK         Spinning at normal speed
       Fan Tray 3 Fan 1              OK         Spinning at normal speed
       Fan Tray 3 Fan 2              OK         Spinning at normal speed
       Fan Tray 3 Fan 3              OK         Spinning at normal speed
       Fan Tray 3 Fan 4              OK         Spinning at normal speed
       Fan Tray 3 Fan 5              OK         Spinning at normal speed
       Fan Tray 3 Fan 6              OK         Spinning at normal speed
       Fan Tray 3 Fan 7              OK         Spinning at normal speed
       Fan Tray 3 Fan 8              OK         Spinning at normal speed
       Fan Tray 3 Fan 9              OK         Spinning at normal speed
       Fan Tray 4 Fan 1              OK         Spinning at normal speed
       Fan Tray 4 Fan 2              OK         Spinning at normal speed
       Fan Tray 4 Fan 3              OK         Spinning at normal speed
       Fan Tray 4 Fan 4              OK         Spinning at normal speed
       Fan Tray 4 Fan 5              OK         Spinning at normal speed
       Fan Tray 4 Fan 6              OK         Spinning at normal speed
       Fan Tray 4 Fan 7              OK         Spinning at normal speed
       Fan Tray 4 Fan 8              OK         Spinning at normal speed
       Fan Tray 4 Fan 9              OK         Spinning at normal speed
       Fan Tray 5 Fan 1              OK         Spinning at normal speed
       Fan Tray 5 Fan 2              OK         Spinning at normal speed
       Fan Tray 5 Fan 3              OK         Spinning at normal speed
       Fan Tray 5 Fan 4              OK         Spinning at normal speed
       Fan Tray 5 Fan 5              OK         Spinning at normal speed
       Fan Tray 5 Fan 6              OK         Spinning at normal speed
       Fan Tray 5 Fan 7              OK         Spinning at normal speed
       Fan Tray 5 Fan 8              OK         Spinning at normal speed
       Fan Tray 5 Fan 9              Check
Misc   SPMB 0                        OK
       SPMB 1                        OK
```

```
lcc0-re0:
--------------------------------------------------------------------------
Class Item                             Status     Measurement
Temp  PEM 0                            OK         29 degrees C / 84 degrees F
      PEM 1                            Check      29 degrees C / 84 degrees F
      SCG 0                            OK         32 degrees C / 89 degrees F
      SCG 1                            OK         33 degrees C / 91 degrees F
      Routing Engine 0                 OK         32 degrees C / 89 degrees F
      Routing Engine 0 CPU             OK         51 degrees C / 123 degrees F
      Routing Engine 1                 OK         32 degrees C / 89 degrees F
      Routing Engine 1 CPU             OK         49 degrees C / 120 degrees F
      CB 0                             OK         34 degrees C / 93 degrees F
      CB 1                             OK         34 degrees C / 93 degrees F
      SIB 0                            OK         39 degrees C / 102 degrees F
      SIB 0 (B)                        Absent
      SIB 1                            OK         39 degrees C / 102 degrees F
      SIB 1 (B)                        Absent
      SIB 2                            OK         39 degrees C / 102 degrees F
      SIB 2 (B)                        Absent
      FPC 4 Top                        OK         43 degrees C / 109 degrees F
      FPC 4 Bottom                     OK         43 degrees C / 109 degrees F
      FPC 7 Fan Intake                 OK         35 degrees C / 95 degrees F
      FPC 7 Fan Exhaust                OK         50 degrees C / 122 degrees F
      FPC 7 PMB                        OK         50 degrees C / 122 degrees F
      FPC 7 LMB0                       OK         55 degrees C / 131 degrees F
      FPC 7 LMB1                       OK         49 degrees C / 120 degrees F
      FPC 7 LMB2                       OK         39 degrees C / 102 degrees F
      FPC 7 PFE1 LU2                   OK         55 degrees C / 131 degrees F
      FPC 7 PFE1 LU0                   OK         45 degrees C / 113 degrees F
      FPC 7 PFE0 LU0                   OK         62 degrees C / 143 degrees F
      FPC 7 XF1                        OK         52 degrees C / 125 degrees F
      FPC 7 XF0                        OK         61 degrees C / 141 degrees F
      FPC 7 XM1                        OK         39 degrees C / 102 degrees F
      FPC 7 XM0                        OK         56 degrees C / 132 degrees F
      FPC 7 PFE0 LU1                   OK         60 degrees C / 140 degrees F
      FPC 7 PFE0 LU2                   OK         55 degrees C / 131 degrees F
      FPC 7 PFE1 LU1                   OK         41 degrees C / 105 degrees F
      FPM GBUS                         OK         24 degrees C / 75 degrees F
      FPM Display                      OK         28 degrees C / 82 degrees F
Fans  Top Left Front fan               OK         Spinning at normal speed
      Top Left Middle fan              OK         Spinning at normal speed
      Top Left Rear fan                OK         Spinning at normal speed
      Top Right Front fan              OK         Spinning at normal speed
```

```
      Top Right Middle fan          OK         Spinning at normal speed
      Top Right Rear fan            OK         Spinning at normal speed
      Bottom Left Front fan         OK         Spinning at normal speed
      Bottom Left Middle fan        OK         Spinning at normal speed
      Bottom Left Rear fan          OK         Spinning at normal speed
      Bottom Right Front fan        OK         Spinning at normal speed
      Bottom Right Middle fan       OK         Spinning at normal speed
      Bottom Right Rear fan         OK         Spinning at normal speed
      Rear Tray fan 1 (Top)         OK         Spinning at normal speed
      Rear Tray fan 2               OK         Spinning at normal speed
      Rear Tray fan 3               OK         Spinning at normal speed
      Rear Tray fan 4               OK         Spinning at normal speed
      Rear Tray fan 5               OK         Spinning at normal speed
      Rear Tray fan 6               OK         Spinning at normal speed
      Rear Tray fan 7               OK         Spinning at normal speed
      Rear Tray fan 8               OK         Spinning at normal speed
      Rear Tray fan 9               OK         Spinning at normal speed
      Rear Tray fan 10              OK         Spinning at normal speed
      Rear Tray fan 11              OK         Spinning at normal speed
      Rear Tray fan 12              OK         Spinning at normal speed
      Rear Tray fan 13              OK         Spinning at normal speed
      Rear Tray fan 14              OK         Spinning at normal speed
      Rear Tray fan 15              OK         Spinning at normal speed
      Rear Tray fan 16 (Bottom)     OK         Spinning at normal speed
Misc  CIP                           OK
      SPMB 0                        OK
      SPMB 1                        OK
```

show chassis environment (EX4200 Standalone Switch)

```
user@switch> show chassis environment
Class Item                          Status     Measurement
Power FPC 0 Power Supply 0          OK
      FPC 0 Power Supply 1          Absent
Temp  FPC 0 CPU                     OK         41 degrees C / 105 degrees F
      FPC 0 EX-PFE1                 OK         42 degrees C / 107 degrees F
      FPC 0 EX-PFE2                 OK         46 degrees C / 114 degrees F
      FPC 0 GEPHY Front Left        OK         25 degrees C / 77 degrees F
      FPC 0 GEPHY Front Right       OK         27 degrees C / 80 degrees F
      FPC 0 Uplink Conn             OK         29 degrees C / 84 degrees F
Fans  FPC 0 Fan 1                   OK         Spinning at normal speed
```

```
      FPC 0 Fan 2                   OK          Spinning at normal speed
      FPC 0 Fan 3                   OK          Spinning at normal speed
```

show chassis environment (EX8216 Switch)

```
user@switch> show chassis environment
Class Item                          Status     Measurement
Power PSU 0                         OK
      PSU 1                         OK
      PSU 2                         OK
      PSU 3                         Check
      PSU 4                         Absent
      PSU 5                         Absent
Temp  CB 0 Intake                   OK         23 degrees C / 73 degrees F
      CB 0 Exhaust                  OK         26 degrees C / 78 degrees F
      CB 1 Intake                   OK         22 degrees C / 71 degrees F
      CB 1 Exhaust                  OK         25 degrees C / 77 degrees F
      FPC 4 Intake                  OK         49 degrees C / 120 degrees F
      FPC 4 Exhaust                 OK         59 degrees C / 138 degrees F
      SIB 5 Intake                  OK         25 degrees C / 77 degrees F
      SIB 5 Exhaust                 OK         35 degrees C / 95 degrees F
      SIB 6 Intake                  OK         25 degrees C / 77 degrees F
      SIB 6 Exhaust                 OK         38 degrees C / 100 degrees F
Fans  Top Fan 1                     OK         Spinning at normal speed
      Top Fan 2                     OK         Spinning at normal speed
      Top Fan 3                     OK         Spinning at normal speed
      Top Fan 4                     OK         Spinning at normal speed
      Top Fan 5                     OK         Spinning at normal speed
      Top Fan 6                     OK         Spinning at normal speed
      Top Fan 7                     OK         Spinning at normal speed
      Top Fan 8                     OK         Spinning at normal speed
      Top Fan 9                     OK         Spinning at normal speed
      Bottom Fan 1                  OK         Spinning at normal speed
      Bottom Fan 2                  OK         Spinning at normal speed
      Bottom Fan 3                  OK         Spinning at normal speed
      Bottom Fan 4                  OK         Spinning at normal speed
      Bottom Fan 5                  OK         Spinning at normal speed
      Bottom Fan 6                  OK         Spinning at normal speed
      Bottom Fan 7                  OK         Spinning at normal speed
```

```
      Bottom Fan 8                  OK          Spinning at normal speed
      Bottom Fan 9                  OK          Spinning at normal speed
```

show chassis environment (EX9200 Switch)

```
user@switch> show chassis environment

Class Item                          Status     Measurement
Temp  PEM 0                         Check
      PEM 1                         OK         40 degrees C / 104 degrees F
      PEM 2                         OK         40 degrees C / 104 degrees F
      PEM 3                         Absent
      Routing Engine 0              OK         35 degrees C / 95 degrees F
      Routing Engine 0 CPU          OK         33 degrees C / 91 degrees F
      Routing Engine 1              OK         38 degrees C / 100 degrees F
      Routing Engine 1 CPU          OK         33 degrees C / 91 degrees F
      CB 0 Intake                   OK         35 degrees C / 95 degrees F
      CB 0 Exhaust A                OK         33 degrees C / 91 degrees F
      CB 0 Exhaust B                OK         40 degrees C / 104 degrees F
      CB 0 ACBC                     OK         39 degrees C / 102 degrees F
      CB 0 XF A                     OK         49 degrees C / 120 degrees F
      CB 0 XF B                     OK         46 degrees C / 114 degrees F
      CB 1 Intake                   OK         37 degrees C / 98 degrees F
      CB 1 Exhaust A                OK         32 degrees C / 89 degrees F
      CB 1 Exhaust B                OK         39 degrees C / 102 degrees F
      CB 1 ACBC                     OK         41 degrees C / 105 degrees F
      CB 1 XF A                     OK         49 degrees C / 120 degrees F
      CB 1 XF B                     OK         49 degrees C / 120 degrees F
      FPC 2 Intake                  OK         37 degrees C / 98 degrees F
      FPC 2 Exhaust A               OK         40 degrees C / 104 degrees F
      FPC 2 Exhaust B               OK         34 degrees C / 93 degrees F
      FPC 2 LU 0 TCAM TSen          OK         44 degrees C / 111 degrees F
      FPC 2 LU 0 TCAM Chip          OK         48 degrees C / 118 degrees F
      FPC 2 LU 0 TSen               OK         44 degrees C / 111 degrees F
      FPC 2 LU 0 Chip               OK         60 degrees C / 140 degrees F
      FPC 2 MQ 0 TSen               OK         44 degrees C / 111 degrees F
      FPC 2 MQ 0 Chip               OK         51 degrees C / 123 degrees F
      FPC 3 Intake                  OK         39 degrees C / 102 degrees F
      FPC 3 Exhaust A               OK         51 degrees C / 123 degrees F

[...Output truncated...]
```

```
     Fans  Top Rear Fan              OK          Spinning at intermediate-speed
     Bottom Rear Fan                OK          Spinning at intermediate-speed
     Top Middle Fan                 OK          Spinning at intermediate-speed
     Bottom Middle Fan              OK          Spinning at intermediate-speed
     Top Front Fan                  OK          Spinning at intermediate-speed
     Bottom Front Fan               OK          Spinning at intermediate-speed
```

show chassis environment (EX9251 Switch)

```
user@switch> show chassis environment

Class Item                           Status     Measurement
Temp  CB 0 Top Right Inlet Sensor    OK         29 degrees C / 84 degrees F
      CB 0 Top Left Inlet Sensor     OK         29 degrees C / 84 degrees F
      CB 0 Top Right Exhaust Sensor  OK         40 degrees C / 104 degrees F
      CB 0 Top Left Exhaust Sensor   OK         59 degrees C / 138 degrees F
      CB 0 CPU Core-0 Temp           OK         45 degrees C / 113 degrees F
      CB 0 CPU Core-1 Temp           OK         44 degrees C / 111 degrees F
      CB 0 CPU Core-2 Temp           OK         44 degrees C / 111 degrees F
      CB 0 CPU Core-3 Temp           OK         44 degrees C / 111 degrees F
      CB 0 CPU Core-4 Temp           OK         45 degrees C / 113 degrees F
      CB 0 CPU Core-5 Temp           OK         44 degrees C / 111 degrees F
      CB 0 CPU Core-6 Temp           OK         44 degrees C / 111 degrees F
      CB 0 CPU Core-7 Temp           OK         43 degrees C / 109 degrees F
Power PEM 0                          Check
      PEM 1                          OK         36 degrees C / 96 degrees F
Fans  Fan Tray 0 Fan 0               OK         Spinning at normal speed
      Fan Tray 0 Fan 1               OK         Spinning at normal speed
      Fan Tray 1 Fan 0               OK         Spinning at normal speed
      Fan Tray 1 Fan 1               OK         Spinning at normal speed
      Fan Tray 2 Fan 0               Absent
      Fan Tray 2 Fan 1               Absent
```

show chassis environment (EX9253 Switch)

```
user@switch> show chassis environment

Class Item                           Status     Measurement
Temp  CB 0 Exhaust Temp Sensor       OK         37 degrees C / 98 degrees F
```

```
      CB 0 Inlet Temp Sensor         OK          31 degrees C / 87 degrees F
      CB 0 CPU DIE Temp Sensor       OK          42 degrees C / 107 degrees F
      CB 1 Exhaust Temp Sensor       OK          31 degrees C / 87 degrees F
      CB 1 Inlet Temp Sensor         OK          28 degrees C / 82 degrees F
      CB 1 CPU DIE Temp Sensor       OK          42 degrees C / 107 degrees F
      FPC 0 Intake Temp Sensor       OK          31 degrees C / 87 degrees F
      FPC 0 Exhaust-A Temp Sensor    OK          58 degrees C / 136 degrees F
      FPC 0 Exhaust-B Temp Sensor    OK          47 degrees C / 116 degrees F
      FPC 1 Intake Temp Sensor       OK          29 degrees C / 84 degrees F
      FPC 1 Exhaust-A Temp Sensor    OK          59 degrees C / 138 degrees F
      FPC 1 Exhaust-B Temp Sensor    OK          48 degrees C / 118 degrees F
Power PEM 0                          OK          54 degrees C / 129 degrees F
      PEM 1                          Check
      PEM 2                          Absent
      PEM 3                          Absent
      PEM 4                          Check
      PEM 5                          OK          61 degrees C / 141 degrees F
Fans  Fan Tray 0 Fan 0               OK          Spinning at normal speed
      Fan Tray 0 Fan 1               OK          Spinning at normal speed
      Fan Tray 0 Fan 2               OK          Spinning at normal speed
      Fan Tray 0 Fan 3               OK          Spinning at normal speed
      Fan Tray 1 Fan 0               OK          Spinning at normal speed
      Fan Tray 1 Fan 1               OK          Spinning at normal speed
      Fan Tray 1 Fan 2               OK          Spinning at normal speed
      Fan Tray 1 Fan 3               OK          Spinning at normal speed
      Fan Tray 2 Fan 0               OK          Spinning at normal speed
      Fan Tray 2 Fan 1               OK          Spinning at normal speed
      Fan Tray 2 Fan 2               OK          Spinning at normal speed
      Fan Tray 2 Fan 3               OK          Spinning at normal speed
      Fan Tray 3 Fan 0               OK          Spinning at normal speed
      Fan Tray 3 Fan 1               OK          Spinning at normal speed
      Fan Tray 3 Fan 2               OK          Spinning at normal speed
      Fan Tray 3 Fan 3               OK          Spinning at normal speed
```

show chassis environment (QFX Series and OCX Series)

```
user@switch> show chassis environment
Class Item                           Status     Measurement
Temp  CB 0 Top Right Inlet Sensor    OK          29 degrees C / 84 degrees F
      CB 0 Top Left Inlet Sensor     OK          29 degrees C / 84 degrees F
      CB 0 Top Right Exhaust Sensor  OK          40 degrees C / 104 degrees F
```

```
      CB 0 Top Left Exhaust Sensor   OK          59 degrees C / 138 degrees F
      CB 0 CPU Core-0 Temp           OK          45 degrees C / 113 degrees F
      CB 0 CPU Core-1 Temp           OK          44 degrees C / 111 degrees F
      CB 0 CPU Core-2 Temp           OK          44 degrees C / 111 degrees F
      CB 0 CPU Core-3 Temp           OK          44 degrees C / 111 degrees F
      CB 0 CPU Core-4 Temp           OK          45 degrees C / 113 degrees F
      CB 0 CPU Core-5 Temp           OK          44 degrees C / 111 degrees F
      CB 0 CPU Core-6 Temp           OK          44 degrees C / 111 degrees F
      CB 0 CPU Core-7 Temp           OK          43 degrees C / 109 degrees F
Power PEM 0                          Check
      PEM 1                          OK          36 degrees C / 96 degrees F
Fans  Fan Tray 0 Fan 0               OK          Spinning at normal speed
      Fan Tray 0 Fan 1               OK          Spinning at normal speed
      Fan Tray 1 Fan 0               OK          Spinning at normal speed
      Fan Tray 1 Fan 1               OK          Spinning at normal speed
      Fan Tray 2 Fan 0               Absent
      Fan Tray 2 Fan 1               Absent
```

show chassis environment interconnect-device (QFabric System)

```
user@switch> show chassis environment interconnect-device
IC-A0004
Class Item                           Status     Measurement
      CB 0
      CB 0 L Intake                  OK          30 degrees C / 86 degrees F
      CB 0 R Intake                  OK          31 degrees C / 87 degrees F
      CB 0 L Exhaust                 OK          32 degrees C / 89 degrees F
      CB 0 R Exhaust                 OK          33 degrees C / 91 degrees F
      Routing Engine 0 CPU temp      OK          51 degrees C / 123 degrees F
      CB 1
      CB 1 L Intake                  OK          27 degrees C / 80 degrees F
      CB 1 R Intake                  OK          29 degrees C / 84 degrees F
      CB 1 L Exhaust                 OK          31 degrees C / 87 degrees F
      CB 1 R Exhaust                 OK          32 degrees C / 89 degrees F
      Routing Engine 1 CPU temp      OK          40 degrees C / 104 degrees F
      FC 0 FPC 0
      FPC 0 L Intake                 OK          25 degrees C / 77 degrees F
      FPC 0 R Intake                 OK          28 degrees C / 82 degrees F
      FPC 0 L Exhaust                OK          28 degrees C / 82 degrees F
      FPC 0 R Exhaust                OK          29 degrees C / 84 degrees F
      FC 7 FPC 7
```

```
       FPC 7 L Intake                OK          25 degrees C / 77 degrees F
       FPC 7 R Intake                OK          26 degrees C / 78 degrees F
       FPC 7 L Exhaust               OK          28 degrees C / 82 degrees F
       FPC 7 R Exhaust               OK          29 degrees C / 84 degrees F
       RC 0 FPC 8
       FPC 8 L Intake                OK          25 degrees C / 77 degrees F
       FPC 8 R Intake                OK          26 degrees C / 78 degrees F
       FPC 8 L Exhaust               OK          32 degrees C / 89 degrees F
       FPC 8 R Exhaust               OK          30 degrees C / 86 degrees F
       RC 7 FPC 15
       FPC 15 L Intake               OK          24 degrees C / 75 degrees F
       FPC 15 R Intake               OK          25 degrees C / 77 degrees F
       FPC 15 L Exhaust              OK          33 degrees C / 91 degrees F
       FPC 15 R Exhaust              OK          31 degrees C / 87 degrees F
Fans   TFT 0 Fan 0                   OK          Spinning at normal speed
Fans   TFT 0 Fan 1                   OK          Spinning at normal speed
Fans   TFT 0 Fan 2                   OK          Spinning at normal speed
Fans   TFT 0 Fan 3                   OK          Spinning at normal speed
Fans   TFT 0 Fan 4                   OK          Spinning at normal speed
Fans   TFT 0 Fan 5                   OK          Spinning at normal speed
Fans   BFT 1 Fan 0                   OK          Spinning at normal speed
Fans   BFT 1 Fan 1                   OK          Spinning at normal speed
Fans   BFT 1 Fan 2                   OK          Spinning at normal speed
Fans   BFT 1 Fan 3                   Check
Fans   BFT 1 Fan 4                   OK          Spinning at normal speed
Fans   BFT 1 Fan 5                   OK          Spinning at normal speed
Fans   SFT 0 Fan 0 Rotor 0           OK          Spinning at normal speed
Fans   SFT 0 Fan 0 Rotor 1           OK          Spinning at normal speed
Fans   SFT 0 Fan 1 Rotor 0           OK          Spinning at normal speed
Fans   SFT 0 Fan 1 Rotor 1           OK          Spinning at normal speed
Fans   SFT 0 Fan 2 Rotor 0           OK          Spinning at normal speed
Fans   SFT 0 Fan 2 Rotor 1           OK          Spinning at normal speed
Fans   SFT 0 Fan 3 Rotor 0           OK          Spinning at normal speed
Fans   SFT 0 Fan 3 Rotor 1           OK          Spinning at normal speed
Fans   SFT 1 Fan 0 Rotor 0           OK          Spinning at normal speed
Fans   SFT 1 Fan 0 Rotor 1           OK          Spinning at normal speed
Fans   SFT 1 Fan 1 Rotor 0           OK          Spinning at normal speed
Fans   SFT 1 Fan 1 Rotor 1           OK          Spinning at normal speed
Fans   SFT 1 Fan 2 Rotor 0           OK          Spinning at normal speed
Fans   SFT 1 Fan 2 Rotor 1           OK          Spinning at normal speed
Fans   SFT 1 Fan 3 Rotor 0           OK          Spinning at normal speed
Fans   SFT 1 Fan 3 Rotor 1           OK          Spinning at normal speed
Fans   SFT 2 Fan 0 Rotor 0           OK          Spinning at normal speed
```

```
Fans  SFT 2 Fan 0 Rotor 1           OK         Spinning at normal speed
Fans  SFT 2 Fan 1 Rotor 0           OK         Spinning at normal speed
Fans  SFT 2 Fan 1 Rotor 1           OK         Spinning at normal speed
Fans  SFT 2 Fan 2 Rotor 0           OK         Spinning at normal speed
Fans  SFT 2 Fan 2 Rotor 1           OK         Spinning at normal speed
Fans  SFT 2 Fan 3 Rotor 0           OK         Spinning at normal speed
Fans  SFT 2 Fan 3 Rotor 1           OK         Spinning at normal speed
Fans  SFT 3 Fan 0 Rotor 0           OK         Spinning at normal speed
Fans  SFT 3 Fan 0 Rotor 1           OK         Spinning at normal speed
Fans  SFT 3 Fan 1 Rotor 0           OK         Spinning at normal speed
Fans  SFT 3 Fan 1 Rotor 1           OK         Spinning at normal speed
Fans  SFT 3 Fan 2 Rotor 0           OK         Spinning at normal speed
Fans  SFT 3 Fan 2 Rotor 1           OK         Spinning at normal speed
Fans  SFT 3 Fan 3 Rotor 0           OK         Spinning at normal speed
Fans  SFT 3 Fan 3 Rotor 1           OK         Spinning at normal speed
Fans  SFT 4 Fan 0 Rotor 0           OK         Spinning at normal speed
Fans  SFT 4 Fan 0 Rotor 1           OK         Spinning at normal speed
Fans  SFT 4 Fan 1 Rotor 0           OK         Spinning at normal speed
Fans  SFT 4 Fan 1 Rotor 1           OK         Spinning at normal speed
Fans  SFT 4 Fan 2 Rotor 0           OK         Spinning at normal speed
Fans  SFT 4 Fan 2 Rotor 1           OK         Spinning at normal speed
Fans  SFT 4 Fan 3 Rotor 0           OK         Spinning at normal speed
Fans  SFT 4 Fan 3 Rotor 1           OK         Spinning at normal speed
Fans  SFT 5 Fan 0 Rotor 0           OK         Spinning at normal speed
Fans  SFT 5 Fan 0 Rotor 1           OK         Spinning at normal speed
Fans  SFT 5 Fan 1 Rotor 0           OK         Spinning at normal speed
Fans  SFT 5 Fan 1 Rotor 1           OK         Spinning at normal speed
Fans  SFT 5 Fan 2 Rotor 0           OK         Spinning at normal speed
Fans  SFT 5 Fan 2 Rotor 1           OK         Spinning at normal speed
Fans  SFT 5 Fan 3 Rotor 0           OK         Spinning at normal speed
Fans  SFT 5 Fan 3 Rotor 1           OK         Spinning at normal speed
Fans  SFT 6 Fan 0 Rotor 0           OK         Spinning at normal speed
Fans  SFT 6 Fan 0 Rotor 1           OK         Spinning at normal speed
Fans  SFT 6 Fan 1 Rotor 0           OK         Spinning at normal speed
Fans  SFT 6 Fan 1 Rotor 1           OK         Spinning at normal speed
Fans  SFT 6 Fan 2 Rotor 0           OK         Spinning at normal speed
Fans  SFT 6 Fan 2 Rotor 1           OK         Spinning at normal speed
Fans  SFT 6 Fan 3 Rotor 0           OK         Spinning at normal speed
Fans  SFT 6 Fan 3 Rotor 1           OK         Spinning at normal speed
Fans  SFT 7 Fan 0 Rotor 0           OK         Spinning at normal speed
Fans  SFT 7 Fan 0 Rotor 1           OK         Spinning at normal speed
Fans  SFT 7 Fan 1 Rotor 0           OK         Spinning at normal speed
Fans  SFT 7 Fan 1 Rotor 1           OK         Spinning at normal speed
```

```
Fans  SFT 7 Fan 2 Rotor 0            OK         Spinning at normal speed
Fans  SFT 7 Fan 2 Rotor 1            OK         Spinning at normal speed
Fans  SFT 7 Fan 3 Rotor 0            OK         Spinning at normal speed
Fans  SFT 7 Fan 3 Rotor 1            OK         Spinning at normal speed
Power PEM 0                          OK         30 degrees C / 86 degrees F
Power PEM 1                          OK         30 degrees C / 86 degrees F
Power PEM 2                          OK         30 degrees C / 86 degrees F
Power PEM 3                          Absent
Power PEM 4                          Absent
Power PEM 5                          Absent
```

show chassis environment node-device (QFabric System)

```
user@switch> show chassis environment node-device
node1
Class Item                           Status     Measurement
Power node1 Power Supply 0            Absent
      node1 Power Supply 1            Absent
Fans  node1 Fan Tray 0                Testing
      node1 Fan Tray 1                Testing
      node1 Fan Tray 2                Testing
```

show chassis environment pem node-device (QFabric System)

```
user@switch> show chassis environment pem node-device
node1
FPC 0 PEM 0 status:
  State                       Check
  Airflow                     Front to Back
  Temperature                 OK
  AC Input:                   OK
  DC Output           Voltage(V) Current(A)  Power(W)  Load(%)
                          12        10            120      18
FPC 0 PEM 1 status:
  State                       Online
  Airflow                     Back to Front
  Temperature                 OK
  AC Input:                   OK
```

```
  DC Output           Voltage(V) Current(A)  Power(W)  Load(%)
                          11        10           110      17
```

show chassis environment (PTX5000 Packet Transport Router)

```
user@host> show chassis environment
Class Item                           Status     Measurement
Temp  PDU 0                          OK
      PDU 0 PSM 0                    OK         36 degrees C / 96 degrees F
      PDU 0 PSM 1                    OK         38 degrees C / 100 degrees F
      PDU 0 PSM 2                    OK         38 degrees C / 100 degrees F
      PDU 0 PSM 3                    OK         37 degrees C / 98 degrees F
      PDU 1                          Absent
      CCG 0                          OK         44 degrees C / 111 degrees F
      CCG 1                          OK         44 degrees C / 111 degrees F
      Routing Engine 0               OK         62 degrees C / 143 degrees F
      Routing Engine 0 CPU           OK         75 degrees C / 167 degrees F
      Routing Engine 1               OK         51 degrees C / 123 degrees F
      Routing Engine 1 CPU           OK         64 degrees C / 147 degrees F
      CB 0 Intake                    OK         38 degrees C / 100 degrees F
      CB 0 Exhaust A                 OK         46 degrees C / 114 degrees F
      CB 0 Exhaust B                 OK         42 degrees C / 107 degrees F
      CB 1 Intake                    OK         35 degrees C / 95 degrees F
      CB 1 Exhaust A                 OK         39 degrees C / 102 degrees F
      CB 1 Exhaust B                 OK         36 degrees C / 96 degrees F
      SIB 0 Exhaust                  OK         47 degrees C / 116 degrees F
      SIB 0 Junction                 OK         45 degrees C / 113 degrees F
      SIB 1 Exhaust                  OK         44 degrees C / 111 degrees F
      SIB 1 Junction                 OK         43 degrees C / 109 degrees F
      SIB 2 Exhaust                  OK         47 degrees C / 116 degrees F
      SIB 2 Junction                 OK         42 degrees C / 107 degrees F
      SIB 3 Exhaust                  OK         43 degrees C / 109 degrees F
      SIB 3 Junction                 OK         43 degrees C / 109 degrees F
      SIB 4 Exhaust                  OK         47 degrees C / 116 degrees F
      SIB 4 Junction                 OK         42 degrees C / 107 degrees F
      SIB 5 Exhaust                  OK         42 degrees C / 107 degrees F
      SIB 5 Junction                 OK         40 degrees C / 104 degrees F
      SIB 6 Exhaust                  OK         46 degrees C / 114 degrees F
      SIB 6 Junction                 OK         42 degrees C / 107 degrees F
      SIB 7 Exhaust                  OK         43 degrees C / 109 degrees F
      SIB 7 Junction                 OK         39 degrees C / 102 degrees F
```

```
SIB 8 Exhaust                OK          44 degrees C / 111 degrees F
SIB 8 Junction               OK          41 degrees C / 105 degrees F
FPC 0 PMB                    OK          35 degrees C / 95 degrees F
FPC 0 Intake                 OK          33 degrees C / 91 degrees F
FPC 0 Exhaust A              OK          51 degrees C / 123 degrees F
FPC 0 Exhaust B              OK          43 degrees C / 109 degrees F
FPC 0 TL0                    OK          48 degrees C / 118 degrees F
FPC 0 TQ0                    OK          53 degrees C / 127 degrees F
FPC 0 TL1                    OK          56 degrees C / 132 degrees F
FPC 0 TQ1                    OK          58 degrees C / 136 degrees F
FPC 0 TL2                    OK          55 degrees C / 131 degrees F
FPC 0 TQ2                    OK          56 degrees C / 132 degrees F
FPC 0 TL3                    OK          59 degrees C / 138 degrees F
FPC 0 TQ3                    OK          59 degrees C / 138 degrees F
FPC 2 PMB                    OK          35 degrees C / 95 degrees F
FPC 2 Intake                 OK          34 degrees C / 93 degrees F
FPC 2 Exhaust A              OK          51 degrees C / 123 degrees F
FPC 2 Exhaust B              OK          52 degrees C / 125 degrees F
FPC 2 TL0                    OK          53 degrees C / 127 degrees F
FPC 2 TQ0                    OK          53 degrees C / 127 degrees F
FPC 2 TL1                    OK          57 degrees C / 134 degrees F
FPC 2 TQ1                    OK          58 degrees C / 136 degrees F
FPC 2 TL2                    OK          54 degrees C / 129 degrees F
FPC 2 TQ2                    OK          59 degrees C / 138 degrees F
FPC 2 TL3                    OK          60 degrees C / 140 degrees F
FPC 2 TQ3                    OK          64 degrees C / 147 degrees F
PIC 2/0 Ambient              OK          49 degrees C / 120 degrees F
FPC 3 PMB                    OK          34 degrees C / 93 degrees F
FPC 3 Intake                 OK          35 degrees C / 95 degrees F
FPC 3 Exhaust A              OK          54 degrees C / 129 degrees F
FPC 3 Exhaust B              OK          49 degrees C / 120 degrees F
FPC 3 TL0                    OK          49 degrees C / 120 degrees F
FPC 3 TQ0                    OK          55 degrees C / 131 degrees F
FPC 3 TL1                    OK          56 degrees C / 132 degrees F
FPC 3 TQ1                    OK          58 degrees C / 136 degrees F
FPC 3 TL2                    OK          56 degrees C / 132 degrees F
FPC 3 TQ2                    OK          59 degrees C / 138 degrees F
FPC 3 TL3                    OK          62 degrees C / 143 degrees F
FPC 3 TQ3                    OK          63 degrees C / 145 degrees F
PIC 3/1                      Absent
FPC 5 PMB                    OK          35 degrees C / 95 degrees F
FPC 5 Intake                 OK          34 degrees C / 93 degrees F
FPC 5 Exhaust A              OK          51 degrees C / 123 degrees F
```

```
       FPC 5 Exhaust B              OK          53 degrees C / 127 degrees F
       FPC 5 TL0                    OK          54 degrees C / 129 degrees F
       FPC 5 TQ0                    OK          52 degrees C / 125 degrees F
       FPC 5 TL1                    OK          61 degrees C / 141 degrees F
       FPC 5 TQ1                    OK          60 degrees C / 140 degrees F
       FPC 5 TL2                    OK          55 degrees C / 131 degrees F
       FPC 5 TQ2                    OK          55 degrees C / 131 degrees F
       FPC 5 TL3                    OK          59 degrees C / 138 degrees F
       FPC 5 TQ3                    OK          58 degrees C / 136 degrees F
       PIC 5/0 Ambient              OK          51 degrees C / 123 degrees F
       PIC 5/1 Ambient              OK          34 degrees C / 93 degrees F
       PIC 5/1 cfp-5/1/0            OK          34 degrees C / 93 degrees F
       PIC 5/1 cfp-5/1/1            OK          36 degrees C / 96 degrees F
       FPC 6 PMB                    OK          36 degrees C / 96 degrees F
       FPC 6 Intake                 OK          33 degrees C / 91 degrees F
       FPC 6 Exhaust A              OK          51 degrees C / 123 degrees F
       FPC 6 Exhaust B              OK          39 degrees C / 102 degrees F
       FPC 6 TL0                    OK          44 degrees C / 111 degrees F
       FPC 6 TQ0                    OK          54 degrees C / 129 degrees F
       FPC 6 TL1                    OK          59 degrees C / 138 degrees F
       FPC 6 TQ1                    OK          58 degrees C / 136 degrees F
       FPC 6 TL2                    OK          60 degrees C / 140 degrees F
       FPC 6 TQ2                    OK          57 degrees C / 134 degrees F
       FPC 6 TL3                    OK          65 degrees C / 149 degrees F
       FPC 6 TQ3                    OK          60 degrees C / 140 degrees F
       FPC 7 PMB                    OK          35 degrees C / 95 degrees F
       FPC 7 Intake                 OK          33 degrees C / 91 degrees F
       FPC 7 Exhaust A              OK          53 degrees C / 127 degrees F
       FPC 7 Exhaust B              OK          40 degrees C / 104 degrees F
       FPC 7 TL0                    OK          46 degrees C / 114 degrees F
       FPC 7 TQ0                    OK          58 degrees C / 136 degrees F
       FPC 7 TL1                    OK          53 degrees C / 127 degrees F
       FPC 7 TQ1                    OK          59 degrees C / 138 degrees F
       FPC 7 TL2                    OK          56 degrees C / 132 degrees F
       FPC 7 TQ2                    OK          61 degrees C / 141 degrees F
       FPC 7 TL3                    OK          63 degrees C / 145 degrees F
       FPC 7 TQ3                    OK          63 degrees C / 145 degrees F
       FPM I2CS                     OK          37 degrees C / 98 degrees F
Fans   Fan Tray 0 Fan 1             OK          3042 RPM
       Fan Tray 0 Fan 2             OK          3042 RPM
       Fan Tray 0 Fan 3             OK          3000 RPM
       Fan Tray 0 Fan 4             OK          3042 RPM
       Fan Tray 0 Fan 5             OK          3000 RPM
```

```
      Fan Tray 0 Fan 6               OK          3042 RPM
      Fan Tray 0 Fan 7               OK          3085 RPM
      Fan Tray 0 Fan 8               OK          3042 RPM
      Fan Tray 0 Fan 9               OK          3042 RPM
      Fan Tray 0 Fan 10              OK          3085 RPM
      Fan Tray 0 Fan 11              OK          3085 RPM
      Fan Tray 0 Fan 12              OK          3128 RPM
      Fan Tray 0 Fan 13              OK          3128 RPM
      Fan Tray 0 Fan 14              OK          3042 RPM
      Fan Tray 1 Fan 1               OK          2299 RPM
      Fan Tray 1 Fan 2               OK          2399 RPM
      Fan Tray 1 Fan 3               OK          2299 RPM
      Fan Tray 1 Fan 4               OK          2266 RPM
      Fan Tray 1 Fan 5               OK          2266 RPM
      Fan Tray 1 Fan 6               OK          2366 RPM
      Fan Tray 2 Fan 1               OK          2199 RPM
      Fan Tray 2 Fan 2               OK          2133 RPM
      Fan Tray 2 Fan 3               OK          2366 RPM
      Fan Tray 2 Fan 4               OK          2233 RPM
      Fan Tray 2 Fan 5               OK          2399 RPM
      Fan Tray 2 Fan 6               OK          2233 RPM
Misc  SPMB 0 Intake                  OK          50 degrees C / 122 degrees F
      SPMB 1 Intake                  OK          40 degrees C / 104 degrees F
```

show chassis environment (PTX5000 Packet Transport Router with FPC2-PTX-P1A)

```
user@host> show chassis environment
Class Item                           Status     Measurement
Temp  PDU 0                          OK
      PDU 0 PSM 0                    OK         41 degrees C / 105 degrees F
      PDU 0 PSM 1                    Absent
      PDU 0 PSM 2                    OK         43 degrees C / 109 degrees F
      PDU 0 PSM 3                    Absent
      PDU 0 PSM 4                    OK         44 degrees C / 111 degrees F
      PDU 0 PSM 5                    Absent
      PDU 0 PSM 6                    OK         45 degrees C / 113 degrees F
      PDU 0 PSM 7                    Absent
      PDU 1                          OK
      PDU 1 PSM 0                    Absent
      PDU 1 PSM 1                    OK         45 degrees C / 113 degrees F
      PDU 1 PSM 2                    Absent
```

```
      PDU 1 PSM 3                   OK          43 degrees C / 109 degrees F
      PDU 1 PSM 4                   Absent
      PDU 1 PSM 5                   OK          46 degrees C / 114 degrees F
      PDU 1 PSM 6                   Absent
      PDU 1 PSM 7                   OK          46 degrees C / 114 degrees F
      CCG 0                         OK          27 degrees C / 80 degrees F
      CCG 1                         OK          29 degrees C / 84 degrees F
...
```

show chassis environment (PTX1000 Packet Transport Router)

```
user@host> show chassis environment
Class Item                          Status     Measurement
Power FPC 0 Power Supply 0          Absent
      FPC 0 Power Supply 1          Absent
      FPC 0 Power Supply 2          OK
      FPC 0 Power Supply 3          OK
Temp  FPC 0 Intake Temp Sensor      OK          25 degrees C / 77 degrees F
      FPC 0 Exhaust Temp Sensor     OK          35 degrees C / 95 degrees F
      FPC 0 Mezz Temp Sensor 0      OK          25 degrees C / 77 degrees F
      FPC 0 Mezz Temp Sensor 1      OK          34 degrees C / 93 degrees F
      FPC 0 PE2 Temp Sensor         OK          34 degrees C / 93 degrees F
      FPC 0 PE1 Temp Sensor         OK          32 degrees C / 89 degrees F
      FPC 0 PF0 Temp Sensor         OK          40 degrees C / 104 degrees F
      FPC 0 PE0 Temp Sensor         OK          33 degrees C / 91 degrees F
      FPC 0 PE5 Temp Sensor         OK          34 degrees C / 93 degrees F
      FPC 0 PE4 Temp Sensor         OK          34 degrees C / 93 degrees F
      FPC 0 PF1 Temp Sensor         OK          41 degrees C / 105 degrees F
      FPC 0 PE3 Temp Sensor         OK          36 degrees C / 96 degrees F
      FPC 0 CPU Die Temp Sensor     OK          40 degrees C / 104 degrees F
      FPC 0 OCXO Temp Sensor        OK          37 degrees C / 98 degrees F
Fans  FPC 0 Fan Tray 0              OK          Spinning at normal speed
      FPC 0 Fan Tray 1              OK          Spinning at normal speed
      FPC 0 Fan Tray 2              OK          Spinning at normal speed
```

show chassis environment (PTX10008 Router)

```
user@host> show chassis environment
Class Item                          Status     Measurement
      Routing Engine 0 CPU          OK          40 degrees C / 104 degrees F
```

```
       Routing Engine 1 CPU          OK         40 degrees C / 104 degrees F
Temp   CB 0 Intake Temp Sensor       OK         29 degrees C / 84 degrees F
       CB 0 Exhaust Temp Sensor      OK         33 degrees C / 91 degrees F
       CB 1 Intake Temp Sensor       OK         28 degrees C / 82 degrees F
       CB 1 Exhaust Temp Sensor      OK         32 degrees C / 89 degrees F
       FPC 0 Intake-A Temp Sensor    OK         38 degrees C / 100 degrees F
       FPC 0 Intake-B Temp Sensor    OK         34 degrees C / 93 degrees F
       FPC 0 Exhaust-A Temp Sensor   OK         36 degrees C / 96 degrees F
       FPC 0 Exhaust-B Temp Sensor   OK         37 degrees C / 98 degrees F
       FPC 0 Exhaust-C Temp Sensor   OK         40 degrees C / 104 degrees F
       FPC 0 PE0 Temp Sensor         OK         40 degrees C / 104 degrees F
       FPC 0 PE1 Temp Sensor         OK         42 degrees C / 107 degrees F
       FPC 0 PE2 Temp Sensor         OK         44 degrees C / 111 degrees F
       FPC 0 LCPU Temp Sensor        OK         41 degrees C / 105 degrees F
       FPC 1 Intake-A Temp Sensor    OK         37 degrees C / 98 degrees F
       FPC 1 Intake-B Temp Sensor    OK         33 degrees C / 91 degrees F
       FPC 1 Exhaust-A Temp Sensor   OK         37 degrees C / 98 degrees F
       FPC 1 Exhaust-B Temp Sensor   OK         38 degrees C / 100 degrees F
       FPC 1 Exhaust-C Temp Sensor   OK         40 degrees C / 104 degrees F
       FPC 1 PE0 Temp Sensor         OK         41 degrees C / 105 degrees F
       FPC 1 PE1 Temp Sensor         OK         41 degrees C / 105 degrees F
       FPC 1 PE2 Temp Sensor         OK         45 degrees C / 113 degrees F
       FPC 1 LCPU Temp Sensor        OK         40 degrees C / 104 degrees F
       FPC 2 Intake-A Temp Sensor    OK         44 degrees C / 111 degrees F
       FPC 2 Intake-B Temp Sensor    OK         30 degrees C / 86 degrees F
       FPC 2 Exhaust-A Temp Sensor   OK         52 degrees C / 125 degrees F
       FPC 2 Exhaust-B Temp Sensor   OK         54 degrees C / 129 degrees F
       FPC 2 Exhaust-C Temp Sensor   OK         52 degrees C / 125 degrees F
       FPC 2 PE0 Temp Sensor         OK         49 degrees C / 120 degrees F
       FPC 2 PE1 Temp Sensor         OK         59 degrees C / 138 degrees F
       FPC 2 PE2 Temp Sensor         OK         49 degrees C / 120 degrees F
       FPC 2 PE3 Temp Sensor         OK         60 degrees C / 140 degrees F
       FPC 2 PE4 Temp Sensor         OK         49 degrees C / 120 degrees F
       FPC 2 PE5 Temp Sensor         OK         63 degrees C / 145 degrees F
       FPC 2 LCPU Temp Sensor        OK         47 degrees C / 116 degrees F
       FPC 3 Intake-A Temp Sensor    OK         42 degrees C / 107 degrees F
       FPC 3 Intake-B Temp Sensor    OK         30 degrees C / 86 degrees F
       FPC 3 Exhaust-A Temp Sensor   OK         46 degrees C / 114 degrees F
       FPC 3 Exhaust-B Temp Sensor   OK         48 degrees C / 118 degrees F
       FPC 3 Exhaust-C Temp Sensor   OK         47 degrees C / 116 degrees F
       FPC 3 PE0 Temp Sensor         OK         47 degrees C / 116 degrees F
       FPC 3 PE1 Temp Sensor         OK         53 degrees C / 127 degrees F
       FPC 3 PE2 Temp Sensor         OK         46 degrees C / 114 degrees F
```

```
FPC 3 PE3 Temp Sensor          OK         53 degrees C / 127 degrees F
FPC 3 PE4 Temp Sensor          OK         48 degrees C / 118 degrees F
FPC 3 PE5 Temp Sensor          OK         57 degrees C / 134 degrees F
FPC 3 LCPU Temp Sensor         OK         47 degrees C / 116 degrees F
FPC 5 Intake-A Temp Sensor     Failed
FPC 5 Intake-B Temp Sensor     Failed
FPC 5 Exhaust-A Temp Sensor    OK         40 degrees C / 104 degrees F
FPC 5 Exhaust-B Temp Sensor    OK         40 degrees C / 104 degrees F
FPC 5 Exhaust-C Temp Sensor    OK         41 degrees C / 105 degrees F
FPC 5 PE0 Temp Sensor          OK         46 degrees C / 114 degrees F
FPC 5 PE1 Temp Sensor          OK         48 degrees C / 118 degrees F
FPC 5 PE2 Temp Sensor          OK         51 degrees C / 123 degrees F
FPC 5 LCPU Temp Sensor         Failed
FPC 6 Intake-A Temp Sensor     OK         40 degrees C / 104 degrees F
FPC 6 Intake-B Temp Sensor     OK         36 degrees C / 96 degrees F
FPC 6 Exhaust-A Temp Sensor    OK         39 degrees C / 102 degrees F
FPC 6 Exhaust-B Temp Sensor    OK         39 degrees C / 102 degrees F
FPC 6 Exhaust-C Temp Sensor    OK         39 degrees C / 102 degrees F
FPC 6 PE0 Temp Sensor          OK         44 degrees C / 111 degrees F
FPC 6 PE1 Temp Sensor          OK         45 degrees C / 113 degrees F
FPC 6 PE2 Temp Sensor          OK         50 degrees C / 122 degrees F
FPC 6 LCPU Temp Sensor         OK         40 degrees C / 104 degrees F
SIB 0 Intake-A Temp Sensor     OK         37 degrees C / 98 degrees F
SIB 0 Intake-B Temp Sensor     OK         30 degrees C / 86 degrees F
SIB 0 Exhaust-A Temp Sensor    OK         33 degrees C / 91 degrees F
SIB 0 Exhaust-B Temp Sensor    OK         38 degrees C / 100 degrees F
SIB 0 PF0 Temp Sensor          OK         46 degrees C / 114 degrees F
SIB 0 PF1 Temp Sensor          OK         39 degrees C / 102 degrees F
SIB 1 Intake-A Temp Sensor     OK         43 degrees C / 109 degrees F
SIB 1 Intake-B Temp Sensor     OK         34 degrees C / 93 degrees F
SIB 1 Exhaust-A Temp Sensor    OK         36 degrees C / 96 degrees F
SIB 1 Exhaust-B Temp Sensor    OK         44 degrees C / 111 degrees F
SIB 1 PF0 Temp Sensor          OK         54 degrees C / 129 degrees F
SIB 1 PF1 Temp Sensor          OK         41 degrees C / 105 degrees F
SIB 2 Intake-A Temp Sensor     OK         46 degrees C / 114 degrees F
SIB 2 Intake-B Temp Sensor     OK         35 degrees C / 95 degrees F
SIB 2 Exhaust-A Temp Sensor    OK         37 degrees C / 98 degrees F
SIB 2 Exhaust-B Temp Sensor    OK         47 degrees C / 116 degrees F
SIB 2 PF0 Temp Sensor          OK         55 degrees C / 131 degrees F
SIB 2 PF1 Temp Sensor          OK         42 degrees C / 107 degrees F
SIB 3 Intake-A Temp Sensor     OK         45 degrees C / 113 degrees F
SIB 3 Intake-B Temp Sensor     OK         35 degrees C / 95 degrees F
SIB 3 Exhaust-A Temp Sensor    OK         36 degrees C / 96 degrees F
```

```
       SIB 3 Exhaust-B Temp Sensor    OK         45 degrees C / 113 degrees F
       SIB 3 PF0 Temp Sensor          OK         54 degrees C / 129 degrees F
       SIB 3 PF1 Temp Sensor          OK         42 degrees C / 107 degrees F
       SIB 4 Intake-A Temp Sensor     OK         46 degrees C / 114 degrees F
       SIB 4 Intake-B Temp Sensor     OK         34 degrees C / 93 degrees F
       SIB 4 Exhaust-A Temp Sensor    OK         36 degrees C / 96 degrees F
       SIB 4 Exhaust-B Temp Sensor    OK         46 degrees C / 114 degrees F
       SIB 4 PF0 Temp Sensor          OK         54 degrees C / 129 degrees F
       SIB 4 PF1 Temp Sensor          OK         41 degrees C / 105 degrees F
       SIB 5 Intake-A Temp Sensor     OK         38 degrees C / 100 degrees F
       SIB 5 Intake-B Temp Sensor     OK         31 degrees C / 87 degrees F
       SIB 5 Exhaust-A Temp Sensor    OK         34 degrees C / 93 degrees F
       SIB 5 Exhaust-B Temp Sensor    OK         39 degrees C / 102 degrees F
       SIB 5 PF0 Temp Sensor          OK         44 degrees C / 111 degrees F
       SIB 5 PF1 Temp Sensor          OK         42 degrees C / 107 degrees F
Power  Power Supply 0                 OK
       Power Supply 1                 OK
       Power Supply 2                 OK
       Power Supply 3                 OK
       Power Supply 4                 Check
       Power Supply 5                 OK
Fans   Fan Tray 0 Fan 0               OK         Spinning at normal speed
       Fan Tray 0 Fan 1               OK         Spinning at normal speed
       Fan Tray 0 Fan 2               OK         Spinning at normal speed
       Fan Tray 0 Fan 3               OK         Spinning at normal speed
       Fan Tray 0 Fan 4               Failed
       Fan Tray 0 Fan 5               Failed
       Fan Tray 0 Fan 6               OK         Spinning at normal speed
       Fan Tray 0 Fan 7               OK         Spinning at normal speed
       Fan Tray 0 Fan 8               OK         Spinning at normal speed
       Fan Tray 0 Fan 9               OK         Spinning at normal speed
       Fan Tray 0 Fan 10              OK         Spinning at normal speed
       Fan Tray 1 Fan 0               OK         Spinning at normal speed
       Fan Tray 1 Fan 1               OK         Spinning at normal speed
       Fan Tray 1 Fan 2               OK         Spinning at normal speed
       Fan Tray 1 Fan 3               OK         Spinning at normal speed
       Fan Tray 1 Fan 4               OK         Spinning at normal speed
       Fan Tray 1 Fan 5               OK         Spinning at normal speed
       Fan Tray 1 Fan 6               OK         Spinning at normal speed
       Fan Tray 1 Fan 7               OK         Spinning at normal speed
       Fan Tray 1 Fan 8               OK         Spinning at normal speed
```

```
      Fan Tray 1 Fan 9              OK          Spinning at normal speed
      Fan Tray 1 Fan 10             OK          Spinning at normal speed
```

show chassis environment (PTX10016 Router)

```
user@host> show chassis environment
Class Item                          Status     Measurement
      Routing Engine 0 CPU          OK         34 degrees C / 93 degrees F
      Routing Engine 1 CPU          OK         34 degrees C / 93 degrees F
Temp  CB 0 Intake Temp Sensor       OK         20 degrees C / 68 degrees F
      CB 0 Exhaust Temp Sensor      OK         24 degrees C / 75 degrees F
      CB 1 Intake Temp Sensor       OK         20 degrees C / 68 degrees F
      CB 1 Exhaust Temp Sensor      OK         23 degrees C / 73 degrees F
      FPC 1 Intake-A Temp Sensor    OK         37 degrees C / 98 degrees F
      FPC 1 Intake-B Temp Sensor    OK         32 degrees C / 89 degrees F
      FPC 1 Exhaust-A Temp Sensor   OK         37 degrees C / 98 degrees F
      FPC 1 Exhaust-B Temp Sensor   OK         36 degrees C / 96 degrees F
      FPC 1 Exhaust-C Temp Sensor   OK         36 degrees C / 96 degrees F
      FPC 1 PE0 Temp Sensor         OK         45 degrees C / 113 degrees F
      FPC 1 PE1 Temp Sensor         OK         46 degrees C / 114 degrees F
      FPC 1 PE2 Temp Sensor         OK         54 degrees C / 129 degrees F
      FPC 1 LCPU Temp Sensor        OK         35 degrees C / 95 degrees F
      FPC 3 Intake-A Temp Sensor    OK         35 degrees C / 95 degrees F
      FPC 3 Intake-B Temp Sensor    OK         31 degrees C / 87 degrees F
      FPC 3 Exhaust-A Temp Sensor   OK         36 degrees C / 96 degrees F
      FPC 3 Exhaust-B Temp Sensor   OK         35 degrees C / 95 degrees F
      FPC 3 Exhaust-C Temp Sensor   OK         33 degrees C / 91 degrees F
      FPC 3 PE0 Temp Sensor         OK         43 degrees C / 109 degrees F
      FPC 3 PE1 Temp Sensor         OK         45 degrees C / 113 degrees F
      FPC 3 PE2 Temp Sensor         OK         49 degrees C / 120 degrees F
      FPC 3 LCPU Temp Sensor        OK         35 degrees C / 95 degrees F
      FPC 6 Intake-A Temp Sensor    OK         34 degrees C / 93 degrees F
      FPC 6 Intake-B Temp Sensor    OK         31 degrees C / 87 degrees F
      FPC 6 Exhaust-A Temp Sensor   OK         35 degrees C / 95 degrees F
      FPC 6 Exhaust-B Temp Sensor   OK         35 degrees C / 95 degrees F
      FPC 6 Exhaust-C Temp Sensor   OK         35 degrees C / 95 degrees F
      FPC 6 PE0 Temp Sensor         OK         43 degrees C / 109 degrees F
      FPC 6 PE1 Temp Sensor         OK         43 degrees C / 109 degrees F
      FPC 6 PE2 Temp Sensor         OK         47 degrees C / 116 degrees F
      FPC 6 LCPU Temp Sensor        OK         35 degrees C / 95 degrees F
      FPC 8 Intake-A Temp Sensor    OK         34 degrees C / 93 degrees F
```

```
       FPC 8 Intake-B Temp Sensor     OK          31 degrees C / 87 degrees F
       FPC 8 Exhaust-A Temp Sensor    OK          37 degrees C / 98 degrees F
       FPC 8 Exhaust-B Temp Sensor    OK          37 degrees C / 98 degrees F
       FPC 8 Exhaust-C Temp Sensor    OK          38 degrees C / 100 degrees F
       FPC 8 PE0 Temp Sensor          OK          42 degrees C / 107 degrees F
       FPC 8 PE1 Temp Sensor          OK          44 degrees C / 111 degrees F
       FPC 8 PE2 Temp Sensor          OK          47 degrees C / 116 degrees F
       FPC 8 LCPU Temp Sensor         OK          33 degrees C / 91 degrees F
       FPC 9 Intake-A Temp Sensor     OK          44 degrees C / 111 degrees F
       FPC 9 Intake-B Temp Sensor     OK          28 degrees C / 82 degrees F
       FPC 9 Exhaust-A Temp Sensor    OK          51 degrees C / 123 degrees F
       FPC 9 Exhaust-B Temp Sensor    OK          52 degrees C / 125 degrees F
       FPC 9 Exhaust-C Temp Sensor    OK          48 degrees C / 118 degrees F
       FPC 9 PE0 Temp Sensor          OK          52 degrees C / 125 degrees F
       FPC 9 PE1 Temp Sensor          OK          66 degrees C / 150 degrees F
       FPC 9 PE2 Temp Sensor          OK          50 degrees C / 122 degrees F
       FPC 9 PE3 Temp Sensor          OK          65 degrees C / 149 degrees F
       FPC 9 PE4 Temp Sensor          OK          51 degrees C / 123 degrees F
       FPC 9 PE5 Temp Sensor          OK          68 degrees C / 154 degrees F
       FPC 9 LCPU Temp Sensor         OK          46 degrees C / 114 degrees F
Power  Power Supply 0                 OK          22 degrees C / 71 degrees F
       Power Supply 1                 OK          23 degrees C / 73 degrees F
       Power Supply 2                 OK          23 degrees C / 73 degrees F
       Power Supply 3                 OK          21 degrees C / 69 degrees F
       Power Supply 4                 OK          22 degrees C / 71 degrees F
       Power Supply 5                 OK          25 degrees C / 77 degrees F
       Power Supply 6                 OK          21 degrees C / 69 degrees F
       Power Supply 7                 Absent
       Power Supply 8                 Absent
       Power Supply 9                 Absent
Fans   Fan Tray 0 Fan 0               OK          Spinning at normal speed
       Fan Tray 0 Fan 1               OK          Spinning at normal speed
       Fan Tray 0 Fan 2               OK          Spinning at normal speed
       Fan Tray 0 Fan 3               OK          Spinning at normal speed
       Fan Tray 0 Fan 4               OK          Spinning at normal speed
       Fan Tray 0 Fan 5               OK          Spinning at normal speed
       Fan Tray 0 Fan 6               OK          Spinning at normal speed
       Fan Tray 0 Fan 7               OK          Spinning at normal speed
       Fan Tray 0 Fan 8               OK          Spinning at normal speed
       Fan Tray 0 Fan 9               OK          Spinning at normal speed
       Fan Tray 0 Fan 10              OK          Spinning at normal speed
       Fan Tray 0 Fan 11              OK          Spinning at normal speed
       Fan Tray 0 Fan 12              OK          Spinning at normal speed
```

```
Fan Tray 0 Fan 13              OK          Spinning at normal speed
Fan Tray 0 Fan 14              OK          Spinning at normal speed
Fan Tray 0 Fan 15              OK          Spinning at normal speed
Fan Tray 0 Fan 16              OK          Spinning at normal speed
Fan Tray 0 Fan 17              OK          Spinning at normal speed
Fan Tray 0 Fan 18              OK          Spinning at normal speed
Fan Tray 0 Fan 19              OK          Spinning at normal speed
Fan Tray 0 Fan 20              OK          Spinning at normal speed
Fan Tray 1 Fan 0               OK          Spinning at normal speed
Fan Tray 1 Fan 1               OK          Spinning at normal speed
Fan Tray 1 Fan 2               OK          Spinning at normal speed
Fan Tray 1 Fan 3               OK          Spinning at normal speed
Fan Tray 1 Fan 4               OK          Spinning at normal speed
Fan Tray 1 Fan 5               OK          Spinning at normal speed
Fan Tray 1 Fan 6               OK          Spinning at normal speed
Fan Tray 1 Fan 7               OK          Spinning at normal speed
Fan Tray 1 Fan 8               OK          Spinning at normal speed
Fan Tray 1 Fan 9               OK          Spinning at normal speed
Fan Tray 1 Fan 10              OK          Spinning at normal speed
Fan Tray 1 Fan 11              OK          Spinning at normal speed
Fan Tray 1 Fan 12              OK          Spinning at normal speed
Fan Tray 1 Fan 13              OK          Spinning at normal speed
Fan Tray 1 Fan 14              OK          Spinning at normal speed
Fan Tray 1 Fan 15              OK          Spinning at normal speed
Fan Tray 1 Fan 16              OK          Spinning at normal speed
Fan Tray 1 Fan 17              OK          Spinning at normal speed
Fan Tray 1 Fan 18              OK          Spinning at normal speed
Fan Tray 1 Fan 19              OK          Spinning at normal speed
Fan Tray 1 Fan 20              OK          Spinning at normal speed
SIB 0 Intake-A Temp Sensor     OK          20 degrees C / 68 degrees F
SIB 0 Intake-B Temp Sensor     OK          20 degrees C / 68 degrees F
SIB 0 Intake-C Temp Sensor     OK          16 degrees C / 60 degrees F
SIB 0 Exhaust-A Temp Sensor    OK          28 degrees C / 82 degrees F
SIB 0 Exhaust-B Temp Sensor    OK          28 degrees C / 82 degrees F
SIB 0 Exhaust-C Temp Sensor    OK          23 degrees C / 73 degrees F
SIB 0 PF0 Temp Sensor          OK          30 degrees C / 86 degrees F
SIB 0 PF1 Temp Sensor          OK          30 degrees C / 86 degrees F
SIB 0 PF2 Temp Sensor          OK          31 degrees C / 87 degrees F
SIB 0 PF3 Temp Sensor          OK          32 degrees C / 89 degrees F
SIB 0 PF4 Temp Sensor          OK          27 degrees C / 80 degrees F
SIB 0 PF5 Temp Sensor          OK          26 degrees C / 78 degrees F
SIB 1 Intake-A Temp Sensor     OK          22 degrees C / 71 degrees F
SIB 1 Intake-B Temp Sensor     OK          22 degrees C / 71 degrees F
```

```
SIB 1 Intake-C Temp Sensor     OK          16 degrees C / 60 degrees F
SIB 1 Exhaust-A Temp Sensor    OK          29 degrees C / 84 degrees F
SIB 1 Exhaust-B Temp Sensor    OK          31 degrees C / 87 degrees F
SIB 1 Exhaust-C Temp Sensor    OK          23 degrees C / 73 degrees F
SIB 1 PF0 Temp Sensor          OK          32 degrees C / 89 degrees F
SIB 1 PF1 Temp Sensor          OK          31 degrees C / 87 degrees F
SIB 1 PF2 Temp Sensor          OK          33 degrees C / 91 degrees F
SIB 1 PF3 Temp Sensor          OK          38 degrees C / 100 degrees F
SIB 1 PF4 Temp Sensor          OK          28 degrees C / 82 degrees F
SIB 1 PF5 Temp Sensor          OK          26 degrees C / 78 degrees F
SIB 2 Intake-A Temp Sensor     OK          24 degrees C / 75 degrees F
SIB 2 Intake-B Temp Sensor     OK          21 degrees C / 69 degrees F
SIB 2 Intake-C Temp Sensor     OK          16 degrees C / 60 degrees F
SIB 2 Exhaust-A Temp Sensor    OK          28 degrees C / 82 degrees F
SIB 2 Exhaust-B Temp Sensor    OK          32 degrees C / 89 degrees F
SIB 2 Exhaust-C Temp Sensor    OK          23 degrees C / 73 degrees F
SIB 2 PF0 Temp Sensor          OK          31 degrees C / 87 degrees F
SIB 2 PF1 Temp Sensor          OK          30 degrees C / 86 degrees F
SIB 2 PF2 Temp Sensor          OK          33 degrees C / 91 degrees F
SIB 2 PF3 Temp Sensor          OK          41 degrees C / 105 degrees F
SIB 2 PF4 Temp Sensor          OK          27 degrees C / 80 degrees F
SIB 2 PF5 Temp Sensor          OK          26 degrees C / 78 degrees F
SIB 3 Intake-A Temp Sensor     OK          22 degrees C / 71 degrees F
SIB 3 Intake-B Temp Sensor     OK          23 degrees C / 73 degrees F
SIB 3 Intake-C Temp Sensor     OK          16 degrees C / 60 degrees F
SIB 3 Exhaust-A Temp Sensor    OK          29 degrees C / 84 degrees F
SIB 3 Exhaust-B Temp Sensor    OK          31 degrees C / 87 degrees F
SIB 3 Exhaust-C Temp Sensor    OK          24 degrees C / 75 degrees F
SIB 3 PF0 Temp Sensor          OK          32 degrees C / 89 degrees F
SIB 3 PF1 Temp Sensor          OK          30 degrees C / 86 degrees F
SIB 3 PF2 Temp Sensor          OK          31 degrees C / 87 degrees F
SIB 3 PF3 Temp Sensor          OK          39 degrees C / 102 degrees F
SIB 3 PF4 Temp Sensor          OK          27 degrees C / 80 degrees F
SIB 3 PF5 Temp Sensor          OK          26 degrees C / 78 degrees F
SIB 4 Intake-A Temp Sensor     OK          22 degrees C / 71 degrees F
SIB 4 Intake-B Temp Sensor     OK          25 degrees C / 77 degrees F
SIB 4 Intake-C Temp Sensor     OK          16 degrees C / 60 degrees F
SIB 4 Exhaust-A Temp Sensor    OK          29 degrees C / 84 degrees F
SIB 4 Exhaust-B Temp Sensor    OK          32 degrees C / 89 degrees F
SIB 4 Exhaust-C Temp Sensor    OK          23 degrees C / 73 degrees F
SIB 4 PF0 Temp Sensor          OK          32 degrees C / 89 degrees F
SIB 4 PF1 Temp Sensor          OK          31 degrees C / 87 degrees F
SIB 4 PF2 Temp Sensor          OK          32 degrees C / 89 degrees F
```

```
      SIB 4 PF3 Temp Sensor          OK         40 degrees C / 104 degrees F
      SIB 4 PF4 Temp Sensor          OK         26 degrees C / 78 degrees F
      SIB 4 PF5 Temp Sensor          OK         25 degrees C / 77 degrees F
      SIB 5 Intake-A Temp Sensor     OK         21 degrees C / 69 degrees F
      SIB 5 Intake-B Temp Sensor     OK         20 degrees C / 68 degrees F
      SIB 5 Intake-C Temp Sensor     OK         16 degrees C / 60 degrees F
      SIB 5 Exhaust-A Temp Sensor    OK         27 degrees C / 80 degrees F
      SIB 5 Exhaust-B Temp Sensor    OK         27 degrees C / 80 degrees F
      SIB 5 Exhaust-C Temp Sensor    OK         23 degrees C / 73 degrees F
      SIB 5 PF0 Temp Sensor          OK         30 degrees C / 86 degrees F
      SIB 5 PF1 Temp Sensor          OK         29 degrees C / 84 degrees F
      SIB 5 PF2 Temp Sensor          OK         30 degrees C / 86 degrees F
      SIB 5 PF3 Temp Sensor          OK         32 degrees C / 89 degrees F
      SIB 5 PF4 Temp Sensor          OK         28 degrees C / 82 degrees F
      SIB 5 PF5 Temp Sensor          OK         27 degrees C / 80 degrees F
```

show chassis environment (ACX2000 Universal Metro Router)

```
user@host> show chassis environment
Class Item                           Status     Measurement
      PCB Left                       OK         44 degrees C / 111 degrees F
      SFP+ Xcvr                      OK         50 degrees C / 122 degrees F
      FEB                            OK         70 degrees C / 158 degrees F
      PCB Up                         OK         63 degrees C / 145 degrees F
      PCB Mid                        OK         66 degrees C / 150 degrees F
      Telecom Mod                    OK         65 degrees C / 149 degrees F
      Routing Engine                 OK         54 degrees C / 129 degrees F
      Heater off
```

show chassis environment (ACX4000 Universal Metro Router)

On the ACX4000 router, the MIC output of the `show chassis environment` command varies depending on the number of temperature channels present in the installed MIC.

```
user@host> show chassis environment

Class Item                           Status     Measurement
Temp  PEM 0                          OK         33 degrees C / 91 degrees F
      PEM 1                          Absent
      PCB Bottom                     OK         30 degrees C / 86 degrees F
```

```
      PCB Middle                  OK          34 degrees C / 93 degrees F
      BCM56445                    OK          33 degrees C / 91 degrees F
      SFP+ Xcvr                   OK          32 degrees C / 89 degrees F
      Fan tray inlet              OK          39 degrees C / 102 degrees F
      Exhaust                     OK          30 degrees C / 86 degrees F
      Routing Engine              OK          32 degrees C / 89 degrees F
      Heater off
Pic   PIC 0/0 Channel 0           OK          28 degrees C / 82 degrees F
      PIC 0/0 Channel 1           OK          29 degrees C / 84 degrees F
      PIC 0/0 Channel 2           OK          0 degrees C / 32 degrees F
      PIC 0/0 Channel 3           OK          0 degrees C / 32 degrees F
      PIC 0/0 Channel 4           OK          0 degrees C / 32 degrees F
      PIC 0/0 Channel 5           OK          0 degrees C / 32 degrees F
      PIC 0/0 Channel 6           OK          0 degrees C / 32 degrees F
      PIC 0/0 Channel 7           OK          0 degrees C / 32 degrees F
      PIC 0/0 Channel 8           OK          0 degrees C / 32 degrees F
      PIC 0/0 Channel 9           OK          0 degrees C / 32 degrees F
      PIC 1/0 Channel 0           OK          33 degrees C / 91 degrees F
      PIC 1/0 Channel 1           OK          31 degrees C / 87 degrees F
      PIC 1/0 Channel 2           OK          30 degrees C / 86 degrees F
      PIC 1/0 Channel 3           OK          0 degrees C / 32 degrees F
      PIC 1/0 Channel 4           OK          0 degrees C / 32 degrees F
      PIC 1/0 Channel 5           OK          0 degrees C / 32 degrees F
      PIC 1/0 Channel 6           OK          0 degrees C / 32 degrees F
      PIC 1/0 Channel 7           OK          0 degrees C / 32 degrees F
      PIC 1/0 Channel 8           OK          0 degrees C / 32 degrees F
      PIC 1/1 Channel 0           OK          31 degrees C / 87 degrees F
      PIC 1/1 Channel 1           OK          29 degrees C / 84 degrees F
      PIC 1/1 Channel 2           OK          28 degrees C / 82 degrees F
      PIC 1/1 Channel 3           OK          0 degrees C / 32 degrees F
      PIC 1/1 Channel 4           OK          0 degrees C / 32 degrees F
      PIC 1/1 Channel 5           OK          0 degrees C / 32 degrees F
      PIC 1/1 Channel 6           OK          0 degrees C / 32 degrees F
      PIC 1/1 Channel 7           OK          0 degrees C / 32 degrees F
      PIC 1/1 Channel 8           OK          0 degrees C / 32 degrees F
Fans  Fan 1                       OK          Spinning at normal speed
      Fan 2                       OK          Spinning at normal speed
```

show chassis environment (ACX5048 Router)

```
user@host> show chassis environment

Class Item                          Status     Measurement
Power FPC 0 Power Supply 0          Absent
      FPC 0 Power Supply 1          OK
Temp  FPC 0 Sensor TopMiddle E      OK         23 degrees C / 73 degrees F
      FPC 0 Sensor TopRight C       OK         18 degrees C / 64 degrees F
      FPC 0 Sensor TopLeft C        OK         21 degrees C / 69 degrees F
      FPC 0 Sensor TopRight E       OK         20 degrees C / 68 degrees F
      FPC 0 Sensor CPURight C       OK         23 degrees C / 73 degrees F
      FPC 0 Sensor CPULeft E        OK         22 degrees C / 71 degrees F
      FPC 0 Sensor CPU Die Temp     OK         39 degrees C / 102 degrees F
Fans  FPC 0 Fan Tray 0              OK         Spinning at normal speed
      FPC 0 Fan Tray 1              OK         Spinning at normal speed
      FPC 0 Fan Tray 2              OK         Spinning at normal speed
      FPC 0 Fan Tray 3              OK         Spinning at normal speed
      FPC 0 Fan Tray 4              OK         Spinning at normal speed
```

show chassis environment (ACX5096 Router)

```
user@host> show chassis environment

Class Item                          Status     Measurement
Power FPC 0 Power Supply 0          OK
      FPC 0 Power Supply 1          OK
Temp  FPC 0 Sensor TopMiddle E      OK         32 degrees C / 89 degrees F
      FPC 0 Sensor TopRight I       OK         29 degrees C / 84 degrees F
      FPC 0 Sensor TopLeft I        OK         23 degrees C / 73 degrees F
      FPC 0 Sensor TopRight E       OK         28 degrees C / 82 degrees F
      FPC 0 Sensor CPURight I       OK         30 degrees C / 86 degrees F
      FPC 0 Sensor CPULeft I        OK         29 degrees C / 84 degrees F
      FPC 0 Sensor Die Temp         OK         46 degrees C / 114 degrees F
      FPC 0 Mezz Temp               OK         23 degrees C / 73 degrees F
Fans  FPC 0 Fan Tray 0              OK         Spinning at normal speed
      FPC 0 Fan Tray 1              OK         Spinning at normal speed
      FPC 0 Fan Tray 2              OK         Spinning at normal speed
```

show chassis environment (ACX7509)

```
user@host> show chassis environment feb
FEB 0 status:
  State                       Online
  Q2C0 Die Temperature 0                32 degrees C / 89 degrees F
  Q2C0 Die Temperature 1                33 degrees C / 91 degrees F
  Q2C0 Die Temperature 2                31 degrees C / 87 degrees F
  Q2C0 Die Temperature 3                32 degrees C / 89 degrees F
  Q2C0 Die Temperature 4                31 degrees C / 87 degrees F
  Q2C0 HBM Temperature                  32 degrees C / 89 degrees F
  Q2C1 Die Temperature 0                35 degrees C / 95 degrees F
  Q2C1 Die Temperature 1                33 degrees C / 91 degrees F
  Q2C1 Die Temperature 2                34 degrees C / 93 degrees F
  Q2C1 Die Temperature 3                33 degrees C / 91 degrees F
  Q2C1 Die Temperature 4                34 degrees C / 93 degrees F
  Q2C1 HBM Temperature                  33 degrees C / 91 degrees F
  Intake Rear Left Temp                 28 degrees C / 82 degrees F
  PEX8725 PCIe Temp                     42 degrees C / 107 degrees F
  Intake Rear Right Temp                24 degrees C / 75 degrees F
  Exhaust Rear Right Temp               29 degrees C / 84 degrees F
  Q2C0 Diode Temp                       44 degrees C / 111 degrees F
  Exhaust Rear Left Temp                30 degrees C / 86 degrees F
  Q2C1 Diode Temp                       46 degrees C / 114 degrees F
  HotSwap0 Temp                         24 degrees C / 75 degrees F
  HotSwap1 Temp                         25 degrees C / 77 degrees F
  FPGA_VDD1V0 Temp                      34 degrees C / 93 degrees F
  PCIE_VDD0V9 Temp                      41 degrees C / 105 degrees F
  J2VDDIO_1P8 Temp                      30 degrees C / 86 degrees F
  VDD3V3 Temp                           28 degrees C / 82 degrees F
  VDD5V0 Temp                           29 degrees C / 84 degrees F
  VDD2V5 Temp                           32 degrees C / 89 degrees F
  J2TVDD_1P2 Temp                       36 degrees C / 96 degrees F
  Q2C0-J2HBMVDD0C_1P2 Temp              31 degrees C / 87 degrees F
  Q2C1-J2HBMVDD0C_1P2 Temp              34 degrees C / 93 degrees F
  Q2C0 Core Rail 1 Temp                 34 degrees C / 93 degrees F
  Q2C0 Pwr Reg Intrnl Temp              29 degrees C / 84 degrees F
  Q2C1 Core Rail 0 Temp                 37 degrees C / 98 degrees F
  Q2C0 Core Rail 0 Temp                 38 degrees C / 100 degrees F
  Q2C1 Core Rail 1 Temp                 35 degrees C / 95 degrees F
  Q2C1 Pwr Reg Intrnl Temp              29 degrees C / 84 degrees F
```

```
Power 1
  BIAS3V3                     3288 mV
  FPGA_VDD1V2                 1214 mV
  FPGA_VDD3V3                 3320 mV
  PFE0_J2HBMVDD_2P5           2528 mV
  PFE0_J2PHYVDDC_0P88          892 mV
  PFE0_J2PLLVDD_1P8           1822 mV
  PFE1_J2HBMVDD_2P5           2524 mV
  PFE1_J2PHYVDDC_0P88          894 mV
  PFE1_J2PLLVDD_1P8           1824 mV
  VDDCLK_3V3                  3304 mV
Power 2
  PFE0_J2PLLAVDD_1P8          1794 mV
  PFE0_J2PLLVDD_0P8            838 mV
  PFE1_J2PLLAVDD_1P8          1802 mV
  PFE1_J2PLLVDD_0P8            836 mV
Power 3
  Hotswap 0, 12V0            11955 mV
Power 4
  Hotswap 1, 12V0            11982 mV
Power 5
  PFE0_J2TRVDD_0P8             835 mV
  PFE0_J2VDDC_0P82             820 mV
Power 6
  PFE1_J2TRVDD_0P8             835 mV
  PFE1_J2VDDC_0P82             820 mV
Power 7
  J2VDDIO_1P8                 1795 mV
Power 8
  VDD5V0                      4961 mV
Power 9
  VDD2V5                      2494 mV
Power 10
  VDD3V3                      3295 mV
Power 11
  PCIE_VDD0V9                  906 mV
Power 12
  J2TVDD_1P2                  1274 mV
Power 13
  FPGA_VDD1V0                  991 mV
Power 14
  PFE1_J2HBMVDDOC_1P2         1196 mV
Power 15
```

```
    PFE0_J2HBMVDDOC_1P2          1196 mV
  Bus Revision                 19
```

show chassis environment (ACX500 Router)

```
user@host> show chassis environment

Class Item                           Status     Measurement
      Power Mod                      OK         47 degrees C / 116 degrees F
      BCM54610                       OK         46 degrees C / 114 degrees F
      DPLL31404                      OK         45 degrees C / 113 degrees F
      CPLD                           OK         42 degrees C / 107 degrees F
      1588-FPGA                      OK         43 degrees C / 109 degrees F
      NPU                            OK         62 degrees C / 143 degrees F
      MAC sensor 1                   OK         40 degrees C / 104 degrees F
      MAC sensor 2                   OK         38 degrees C / 100 degrees F
      SFP PHY                        OK         38 degrees C / 100 degrees F
      Combo/RJ45 PHY                 OK         37 degrees C / 98 degrees F
      SFP sensor 1                   OK         35 degrees C / 95 degrees F
      SFP sensor 2                   OK         33 degrees C / 91 degrees F
      SFP sensor 3                   OK         32 degrees C / 89 degrees F
      Routing Engine                 OK         54 degrees C / 129 degrees F
      Heater off
```

show chassis environment (Junos OS Evolved)

```
user@host> show chassis environment
Class   Item                           Status   Measurement
Power   PSM 0                          OK       26 degrees C / 78 degrees F
        PSM 1                          OK       31 degrees C / 87 degrees F
        PSM 2                          Failed
Temp    CB 0 Intake A Temp Sensor      OK       23 degrees C / 73 degrees F
        CB 0 Intake B Temp Sensor      OK       22 degrees C / 71 degrees F
        CB 0 Exhaust A Temp Sensor     OK       26 degrees C / 78 degrees F
        CB 0 Exhaust B Temp Sensor     OK       29 degrees C / 84 degrees F
        CB 0 Middle Temp Sensor        OK       30 degrees C / 86 degrees F
        CB 1 Intake A Temp Sensor      OK       23 degrees C / 73 degrees F
        CB 1 Intake B Temp Sensor      OK       21 degrees C / 69 degrees F
        CB 1 Exhaust A Temp Sensor     OK       26 degrees C / 78 degrees F
        CB 1 Exhaust B Temp Sensor     OK       29 degrees C / 84 degrees F
```

```
CB 1 Middle Temp Sensor        OK       29 degrees C / 84 degrees F
Fan Tray 0 Inlet Temp Sensor   OK       24 degrees C / 75 degrees F
Fan Tray 0 Outlet Temp Sensor  OK       28 degrees C / 82 degrees F
Fan Tray 1 Inlet Temp Sensor   OK       24 degrees C / 75 degrees F
Fan Tray 1 Outlet Temp Sensor  OK       28 degrees C / 82 degrees F
FPC 0 BT-0 Temp Sensor 1       OK       44 degrees C / 111 degrees F
FPC 0 BT-0 Temp Sensor 0       OK       44 degrees C / 111 degrees F
FPC 0 BT-1 Temp Sensor 0       OK       45 degrees C / 113 degrees F
FPC 0 BT-1 Temp Sensor 1       OK       45 degrees C / 113 degrees F
```

Release Information

Command introduced before Junos OS Release 7.4.

`sfc` option introduced for the TX Matrix Plus router in Junos OS Release 9.6.

`monitored` option added in Junos OS Release 12.1x48 for PTX Series Packet Transport Routers.

`pem` option introduced in Junos OS Release 12.3 for ACX4000 Universal Metro Routers.

`satellite` option introduced in Junos OS Release 14.2R3.

`all-members`, `local`, and `member` *member-id* options introduced in Junos OS Release 15.1 for MX2010 and MX2020 routers.

RELATED DOCUMENTATION

- show chassis environment adc
- show chassis environment cb
- show chassis environment ccg
- show chassis environment cip
- show chassis environment fpc | 730
- show chassis environment fpm
- show chassis environment lcc
- show chassis environment mcs
- show chassis environment monitored
- show chassis environment pcg
- show chassis environment pdu

show chassis environment pem | 868
show chassis environment psm
show chassis environment psu
show chassis environment routing-engine | 905
show chassis environment scg
show chassis environment sfb
show chassis environment sib
show chassis environment sfc

show chassis environment adc

IN THIS SECTION

- Syntax | 665
- Description | 666
- Options | 666
- Required Privilege Level | 666
- Output Fields | 666
- Sample Output | 667
- Release Information | 681

Syntax

```
show chassis environment adc
<adc-slot-number>
<all-members>
<local>
<member member-id>
```

Description

Display chassis environmental information about the adapter cards.

Options

none	Display environmental information about all adapter cards.
adc-slot-number	(Optional) Display environmental information about the specified adapter card. For MX2020 routers, replace *adc-slot-number* with a value of `0` through `19`. For MX2010 and MX2008 routers, replace *adc-slot-number* with a value of `0` through `9`.
all-members	(Optional) Display chassis environmental information about the adapter cards (ADCs) in all members of the Virtual Chassis configuration.
local	(Optional) Display chassis environmental information about the ADCs in the local member of the Virtual Chassis.
member ***member-id***	(Optional) Display chassis environmental information about the ADCs in the specified member of the Virtual Chassis. Replace *member-id* with the value 0 or 1.

Required Privilege Level

view

Output Fields

Table 39 on page 667 lists the output fields for the `show chassis environment adc` command. Output fields are listed in the approximate order in which they appear.

Table 39: show chassis environment adc Output Fields

Field Name	Field Description
State	Status of the adapter card. • Online—The adapter card is online and running. • Offline—Adapter card is powered down.
Temperature	Temperature in Celsius (C) and Fahrenheit (F) of the air flowing past the adapter card. • Intake Temperature—Measures the temperature of the air intake. • Exhaust Temperature—Measures the temperature of the hot air exhaust. • ADC-XF1—Measures the temperature of the ADC chipset, ADC-XF1. • ADC-XF0—Measures the temperature of the ADC chipset, ADC-XF0.
Power	Power required and measured on the adapter card. The left column displays the required power, in volts. The right column displays the measured power, in millivolts.

Sample Output

show chassis environment adc (MX2020 Router)

```
user@host> show chassis environment adc
ADC 0 status:
  State                      Online
  Intake Temperature         39 degrees C / 102 degrees F
  Exhaust Temperature        50 degrees C / 122 degrees F
  ADC-XF1 Temperature        58 degrees C / 136 degrees F
  ADC-XF0 Temperature        64 degrees C / 147 degrees F
  Power
    LTC3880-XF0-1.0v-RAIL     1029 mV
    LTC3880-XF0-1.0v-CH0      1029 mV
    LTC3880-XF0-1.0v-CH1      1033 mV
    LTC3880-XF0-1.5v-RAIL     1499 mV
```

```
    LTC3880-XF0-1.5v-CH0      1499 mV
    LTC3880-XF0-1.5v-CH1      1501 mV
    LTC3880-XF1-1.0v-RAIL     1029 mV
    LTC3880-XF1-1.0v-CH0      1029 mV
    LTC3880-XF1-1.0v-CH1      1033 mV
    LTC3880-XF1-1.5v-RAIL     1499 mV
    LTC3880-XF1-1.5v-CH0      1499 mV
    LTC3880-XF1-1.5v-CH1      1502 mV
ADC 1 status:
  State                       Online
  Intake Temperature          38 degrees C / 100 degrees F
  Exhaust Temperature         48 degrees C / 118 degrees F
  ADC-XF1 Temperature         59 degrees C / 138 degrees F
  ADC-XF0 Temperature         61 degrees C / 141 degrees F
  Power
    LTC3880-XF0-1.0v-RAIL     1029 mV
    LTC3880-XF0-1.0v-CH0      1029 mV
    LTC3880-XF0-1.0v-CH1      1033 mV
    LTC3880-XF0-1.5v-RAIL     1500 mV
    LTC3880-XF0-1.5v-CH0      1500 mV
    LTC3880-XF0-1.5v-CH1      1501 mV
    LTC3880-XF1-1.0v-RAIL     1029 mV
    LTC3880-XF1-1.0v-CH0      1029 mV
    LTC3880-XF1-1.0v-CH1      1033 mV
    LTC3880-XF1-1.5v-RAIL     1500 mV
    LTC3880-XF1-1.5v-CH0      1500 mV
    LTC3880-XF1-1.5v-CH1      1502 mV
ADC 2 status:
  State                       Online
  Intake Temperature          36 degrees C / 96 degrees F
  Exhaust Temperature         50 degrees C / 122 degrees F
  ADC-XF1 Temperature         52 degrees C / 125 degrees F
  ADC-XF0 Temperature         59 degrees C / 138 degrees F
  Power
    LTC3880-XF0-1.0v-RAIL     1030 mV
    LTC3880-XF0-1.0v-CH0      1030 mV
    LTC3880-XF0-1.0v-CH1      1033 mV
    LTC3880-XF0-1.5v-CH0      1499 mV
    LTC3880-XF1-1.0v-RAIL     1029 mV
    LTC3880-XF1-1.0v-CH0      1029 mV
    LTC3880-XF1-1.0v-CH1      1033 mV
    LTC3880-XF1-1.5v-CH0      1500 mV
ADC 3 status:
```

```
  State                      Online
  Intake Temperature         39 degrees C / 102 degrees F
  Exhaust Temperature        50 degrees C / 122 degrees F
  ADC-XF1 Temperature        61 degrees C / 141 degrees F
  ADC-XF0 Temperature        63 degrees C / 145 degrees F
  Power
    LTC3880-XF0-1.0v-RAIL     1030 mV
    LTC3880-XF0-1.0v-CH0      1030 mV
    LTC3880-XF0-1.0v-CH1      1033 mV
    LTC3880-XF0-1.5v-RAIL     1500 mV
    LTC3880-XF0-1.5v-CH0      1500 mV
    LTC3880-XF0-1.5v-CH1      1501 mV
    LTC3880-XF1-1.0v-RAIL     1029 mV
    LTC3880-XF1-1.0v-CH0      1029 mV
    LTC3880-XF1-1.0v-CH1      1033 mV
    LTC3880-XF1-1.5v-RAIL     1500 mV
    LTC3880-XF1-1.5v-CH0      1500 mV
    LTC3880-XF1-1.5v-CH1      1502 mV
ADC 4 status:
  State                      Online
  Intake Temperature         38 degrees C / 100 degrees F
  Exhaust Temperature        49 degrees C / 120 degrees F
  ADC-XF1 Temperature        60 degrees C / 140 degrees F
  ADC-XF0 Temperature        62 degrees C / 143 degrees F
  Power
    LTC3880-XF0-1.0v-RAIL     1029 mV
    LTC3880-XF0-1.0v-CH0      1029 mV
    LTC3880-XF0-1.0v-CH1      1033 mV
    LTC3880-XF0-1.5v-RAIL     1500 mV
    LTC3880-XF0-1.5v-CH0      1500 mV
    LTC3880-XF0-1.5v-CH1      1501 mV
    LTC3880-XF1-1.0v-RAIL     1029 mV
    LTC3880-XF1-1.0v-CH0      1029 mV
    LTC3880-XF1-1.0v-CH1      1033 mV
    LTC3880-XF1-1.5v-RAIL     1500 mV
    LTC3880-XF1-1.5v-CH0      1500 mV
    LTC3880-XF1-1.5v-CH1      1502 mV
ADC 5 status:
  State                      Online
  Intake Temperature         37 degrees C / 98 degrees F
  Exhaust Temperature        52 degrees C / 125 degrees F
  ADC-XF1 Temperature        55 degrees C / 131 degrees F
  ADC-XF0 Temperature        66 degrees C / 150 degrees F
```

```
  Power
    LTC3880-XF0-1.0v-RAIL     1029 mV
    LTC3880-XF0-1.0v-CH0      1029 mV
    LTC3880-XF0-1.0v-CH1      1033 mV
    LTC3880-XF0-1.5v-CH0      1500 mV
    LTC3880-XF1-1.0v-RAIL     1030 mV
    LTC3880-XF1-1.0v-CH0      1030 mV
    LTC3880-XF1-1.0v-CH1      1033 mV
    LTC3880-XF1-1.5v-CH0      1500 mV
ADC 6 status:
  State                       Online
  Intake Temperature          39 degrees C / 102 degrees F
  Exhaust Temperature         51 degrees C / 123 degrees F
  ADC-XF1 Temperature         58 degrees C / 136 degrees F
  ADC-XF0 Temperature         64 degrees C / 147 degrees F
  Power
    LTC3880-XF0-1.0v-RAIL     1029 mV
    LTC3880-XF0-1.0v-CH0      1029 mV
    LTC3880-XF0-1.0v-CH1      1033 mV
    LTC3880-XF0-1.5v-RAIL     1499 mV
    LTC3880-XF0-1.5v-CH0      1499 mV
    LTC3880-XF0-1.5v-CH1      1501 mV
    LTC3880-XF1-1.0v-RAIL     1029 mV
    LTC3880-XF1-1.0v-CH0      1029 mV
    LTC3880-XF1-1.0v-CH1      1033 mV
    LTC3880-XF1-1.5v-RAIL     1499 mV
    LTC3880-XF1-1.5v-CH0      1499 mV
    LTC3880-XF1-1.5v-CH1      1502 mV
ADC 7 status:
  State                       Online
  Intake Temperature          38 degrees C / 100 degrees F
  Exhaust Temperature         52 degrees C / 125 degrees F
  ADC-XF1 Temperature         61 degrees C / 141 degrees F
  ADC-XF0 Temperature         69 degrees C / 156 degrees F
  Power
    LTC3880-XF0-1.0v-RAIL     1029 mV
    LTC3880-XF0-1.0v-CH0      1029 mV
    LTC3880-XF0-1.0v-CH1      1033 mV
    LTC3880-XF0-1.5v-CH0      1499 mV
    LTC3880-XF1-1.0v-RAIL     1029 mV
    LTC3880-XF1-1.0v-CH0      1029 mV
    LTC3880-XF1-1.0v-CH1      1033 mV
    LTC3880-XF1-1.5v-CH0      1500 mV
```

```
ADC 8 status:
  State                      Online
  Intake Temperature         38 degrees C / 100 degrees F
  Exhaust Temperature        50 degrees C / 122 degrees F
  ADC-XF1 Temperature        63 degrees C / 145 degrees F
  ADC-XF0 Temperature        64 degrees C / 147 degrees F
  Power
    LTC3880-XF0-1.0v-RAIL     1029 mV
    LTC3880-XF0-1.0v-CH0      1029 mV
    LTC3880-XF0-1.0v-CH1      1033 mV
    LTC3880-XF0-1.5v-RAIL     1499 mV
    LTC3880-XF0-1.5v-CH0      1499 mV
    LTC3880-XF0-1.5v-CH1      1501 mV
    LTC3880-XF1-1.0v-RAIL     1030 mV
    LTC3880-XF1-1.0v-CH0      1030 mV
    LTC3880-XF1-1.0v-CH1      1033 mV
    LTC3880-XF1-1.5v-RAIL     1499 mV
    LTC3880-XF1-1.5v-CH0      1499 mV
    LTC3880-XF1-1.5v-CH1      1502 mV
ADC 9 status:
  State                      Online
  Intake Temperature         40 degrees C / 104 degrees F
  Exhaust Temperature        50 degrees C / 122 degrees F
  ADC-XF1 Temperature        59 degrees C / 138 degrees F
  ADC-XF0 Temperature        62 degrees C / 143 degrees F
  Power
    LTC3880-XF0-1.0v-RAIL     1029 mV
    LTC3880-XF0-1.0v-CH0      1029 mV
    LTC3880-XF0-1.0v-CH1      1033 mV
    LTC3880-XF0-1.5v-RAIL     1500 mV
    LTC3880-XF0-1.5v-CH0      1500 mV
    LTC3880-XF0-1.5v-CH1      1501 mV
    LTC3880-XF1-1.0v-RAIL     1029 mV
    LTC3880-XF1-1.0v-CH0      1029 mV
    LTC3880-XF1-1.0v-CH1      1033 mV
    LTC3880-XF1-1.5v-RAIL     1499 mV
    LTC3880-XF1-1.5v-CH0      1499 mV
    LTC3880-XF1-1.5v-CH1      1502 mV
ADC 10 status:
  State                      Online
  Intake Temperature         46 degrees C / 114 degrees F
  Exhaust Temperature        52 degrees C / 125 degrees F
  ADC-XF1 Temperature        66 degrees C / 150 degrees F
```

```
  ADC-XF0 Temperature        65 degrees C / 149 degrees F
  Power
    LTC3880-XF0-1.0v-RAIL     1030 mV
    LTC3880-XF0-1.0v-CH0      1030 mV
    LTC3880-XF0-1.0v-CH1      1033 mV
    LTC3880-XF0-1.5v-RAIL     1499 mV
    LTC3880-XF0-1.5v-CH0      1499 mV
    LTC3880-XF0-1.5v-CH1      1501 mV
    LTC3880-XF1-1.0v-RAIL     1029 mV
    LTC3880-XF1-1.0v-CH0      1029 mV
    LTC3880-XF1-1.0v-CH1      1033 mV
    LTC3880-XF1-1.5v-RAIL     1500 mV
    LTC3880-XF1-1.5v-CH0      1500 mV
    LTC3880-XF1-1.5v-CH1      1502 mV
ADC 11 status:
  State                      Online
  Intake Temperature         47 degrees C / 116 degrees F
  Exhaust Temperature        53 degrees C / 127 degrees F
  ADC-XF1 Temperature        64 degrees C / 147 degrees F
  ADC-XF0 Temperature        65 degrees C / 149 degrees F
  Power
    LTC3880-XF0-1.0v-RAIL     1030 mV
    LTC3880-XF0-1.0v-CH0      1030 mV
    LTC3880-XF0-1.0v-CH1      1033 mV
    LTC3880-XF0-1.5v-RAIL     1500 mV
    LTC3880-XF0-1.5v-CH0      1500 mV
    LTC3880-XF0-1.5v-CH1      1501 mV
    LTC3880-XF1-1.0v-RAIL     1029 mV
    LTC3880-XF1-1.0v-CH0      1029 mV
    LTC3880-XF1-1.0v-CH1      1033 mV
    LTC3880-XF1-1.5v-RAIL     1499 mV
    LTC3880-XF1-1.5v-CH0      1499 mV
    LTC3880-XF1-1.5v-CH1      1502 mV
ADC 12 status:
  State                      Online
  Intake Temperature         48 degrees C / 118 degrees F
  Exhaust Temperature        54 degrees C / 129 degrees F
  ADC-XF1 Temperature        66 degrees C / 150 degrees F
  ADC-XF0 Temperature        65 degrees C / 149 degrees F
  Power
    LTC3880-XF0-1.0v-RAIL     1029 mV
    LTC3880-XF0-1.0v-CH0      1029 mV
    LTC3880-XF0-1.0v-CH1      1033 mV
```

```
    LTC3880-XF0-1.5v-RAIL     1500 mV
    LTC3880-XF0-1.5v-CH0      1500 mV
    LTC3880-XF0-1.5v-CH1      1501 mV
    LTC3880-XF1-1.0v-RAIL     1029 mV
    LTC3880-XF1-1.0v-CH0      1029 mV
    LTC3880-XF1-1.0v-CH1      1033 mV
    LTC3880-XF1-1.5v-RAIL     1499 mV
    LTC3880-XF1-1.5v-CH0      1499 mV
    LTC3880-XF1-1.5v-CH1      1502 mV
ADC 13 status:
  State                       Online
  Intake Temperature          48 degrees C / 118 degrees F
  Exhaust Temperature         55 degrees C / 131 degrees F
  ADC-XF1 Temperature         66 degrees C / 150 degrees F
  ADC-XF0 Temperature         67 degrees C / 152 degrees F
  Power
    LTC3880-XF0-1.0v-RAIL     1029 mV
    LTC3880-XF0-1.0v-CH0      1029 mV
    LTC3880-XF0-1.0v-CH1      1033 mV
    LTC3880-XF0-1.5v-RAIL     1500 mV
    LTC3880-XF0-1.5v-CH0      1500 mV
    LTC3880-XF0-1.5v-CH1      1501 mV
    LTC3880-XF1-1.0v-RAIL     1030 mV
    LTC3880-XF1-1.0v-CH0      1030 mV
    LTC3880-XF1-1.0v-CH1      1034 mV
    LTC3880-XF1-1.5v-RAIL     1500 mV
    LTC3880-XF1-1.5v-CH0      1500 mV
    LTC3880-XF1-1.5v-CH1      1503 mV
ADC 14 status:
  State                       Online
  Intake Temperature          50 degrees C / 122 degrees F
  Exhaust Temperature         57 degrees C / 134 degrees F
  ADC-XF1 Temperature         68 degrees C / 154 degrees F
  ADC-XF0 Temperature         72 degrees C / 161 degrees F
  Power
    LTC3880-XF0-1.0v-RAIL     1030 mV
    LTC3880-XF0-1.0v-CH0      1030 mV
    LTC3880-XF0-1.0v-CH1      1034 mV
    LTC3880-XF0-1.5v-RAIL     1499 mV
    LTC3880-XF0-1.5v-CH0      1499 mV
    LTC3880-XF0-1.5v-CH1      1501 mV
    LTC3880-XF1-1.0v-RAIL     1030 mV
    LTC3880-XF1-1.0v-CH0      1030 mV
```

```
    LTC3880-XF1-1.0v-CH1      1034 mV
    LTC3880-XF1-1.5v-RAIL     1499 mV
    LTC3880-XF1-1.5v-CH0      1499 mV
    LTC3880-XF1-1.5v-CH1      1502 mV
ADC 15 status:
  State                       Online
  Intake Temperature          49 degrees C / 120 degrees F
  Exhaust Temperature         56 degrees C / 132 degrees F
  ADC-XF1 Temperature         68 degrees C / 154 degrees F
  ADC-XF0 Temperature         68 degrees C / 154 degrees F
  Power
    LTC3880-XF0-1.0v-RAIL     1030 mV
    LTC3880-XF0-1.0v-CH0      1030 mV
    LTC3880-XF0-1.0v-CH1      1034 mV
    LTC3880-XF0-1.5v-RAIL     1499 mV
    LTC3880-XF0-1.5v-CH0      1499 mV
    LTC3880-XF0-1.5v-CH1      1501 mV
    LTC3880-XF1-1.0v-RAIL     1030 mV
    LTC3880-XF1-1.0v-CH0      1030 mV
    LTC3880-XF1-1.0v-CH1      1034 mV
    LTC3880-XF1-1.5v-RAIL     1499 mV
    LTC3880-XF1-1.5v-CH0      1499 mV
    LTC3880-XF1-1.5v-CH1      1502 mV
ADC 16 status:
  State                       Online
  Intake Temperature          51 degrees C / 123 degrees F
  Exhaust Temperature         56 degrees C / 132 degrees F
  ADC-XF1 Temperature         67 degrees C / 152 degrees F
  ADC-XF0 Temperature         68 degrees C / 154 degrees F
  Power
    LTC3880-XF0-1.0v-RAIL     1029 mV
    LTC3880-XF0-1.0v-CH0      1029 mV
    LTC3880-XF0-1.0v-CH1      1033 mV
    LTC3880-XF0-1.5v-RAIL     1499 mV
    LTC3880-XF0-1.5v-CH0      1499 mV
    LTC3880-XF0-1.5v-CH1      1501 mV
    LTC3880-XF1-1.0v-RAIL     1029 mV
    LTC3880-XF1-1.0v-CH0      1029 mV
    LTC3880-XF1-1.0v-CH1      1033 mV
    LTC3880-XF1-1.5v-RAIL     1500 mV
    LTC3880-XF1-1.5v-CH0      1500 mV
    LTC3880-XF1-1.5v-CH1      1502 mV
ADC 17 status:
```

```
  State                      Online
  Intake Temperature         51 degrees C / 123 degrees F
  Exhaust Temperature        56 degrees C / 132 degrees F
  ADC-XF1 Temperature        68 degrees C / 154 degrees F
  ADC-XF0 Temperature        69 degrees C / 156 degrees F
  Power
    LTC3880-XF0-1.0v-RAIL     1030 mV
    LTC3880-XF0-1.0v-CH0      1030 mV
    LTC3880-XF0-1.0v-CH1      1033 mV
    LTC3880-XF0-1.5v-RAIL     1500 mV
    LTC3880-XF0-1.5v-CH0      1500 mV
    LTC3880-XF0-1.5v-CH1      1501 mV
    LTC3880-XF1-1.0v-RAIL     1030 mV
    LTC3880-XF1-1.0v-CH0      1030 mV
    LTC3880-XF1-1.0v-CH1      1034 mV
    LTC3880-XF1-1.5v-RAIL     1500 mV
    LTC3880-XF1-1.5v-CH0      1500 mV
    LTC3880-XF1-1.5v-CH1      1502 mV
ADC 18 status:
  State                      Online
  Intake Temperature         52 degrees C / 125 degrees F
  Exhaust Temperature        57 degrees C / 134 degrees F
  ADC-XF1 Temperature        66 degrees C / 150 degrees F
  ADC-XF0 Temperature        71 degrees C / 159 degrees F
  Power
    LTC3880-XF0-1.0v-RAIL     1030 mV
    LTC3880-XF0-1.0v-CH0      1030 mV
    LTC3880-XF0-1.0v-CH1      1034 mV
    LTC3880-XF0-1.5v-RAIL     1499 mV
    LTC3880-XF0-1.5v-CH0      1499 mV
    LTC3880-XF0-1.5v-CH1      1501 mV
    LTC3880-XF1-1.0v-RAIL     1030 mV
    LTC3880-XF1-1.0v-CH0      1030 mV
    LTC3880-XF1-1.0v-CH1      1034 mV
    LTC3880-XF1-1.5v-RAIL     1500 mV
    LTC3880-XF1-1.5v-CH0      1500 mV
    LTC3880-XF1-1.5v-CH1      1502 mV
ADC 19 status:
  State                      Online
  Intake Temperature         49 degrees C / 120 degrees F
  Exhaust Temperature        56 degrees C / 132 degrees F
  ADC-XF1 Temperature        67 degrees C / 152 degrees F
  ADC-XF0 Temperature        70 degrees C / 158 degrees F
```

```
  Power
    LTC3880-XF0-1.0v-RAIL     1029 mV
    LTC3880-XF0-1.0v-CH0      1029 mV
    LTC3880-XF0-1.0v-CH1      1033 mV
    LTC3880-XF0-1.5v-RAIL     1499 mV
    LTC3880-XF0-1.5v-CH0      1499 mV
    LTC3880-XF0-1.5v-CH1      1501 mV
    LTC3880-XF1-1.0v-RAIL     1030 mV
    LTC3880-XF1-1.0v-CH0      1030 mV
    LTC3880-XF1-1.0v-CH1      1033 mV
    LTC3880-XF1-1.5v-RAIL     1500 mV
    LTC3880-XF1-1.5v-CH0      1500 mV
    LTC3880-XF1-1.5v-CH1      1502 mV
```

show chassis environment adc (MX2010 Router)

```
user@host> show chassis environment adc
ADC 0 status:
  State                      Online
  Intake Temperature         33 degrees C / 91 degrees F
  Exhaust Temperature        42 degrees C / 107 degrees F
  ADC-XF1 Temperature        46 degrees C / 114 degrees F
  ADC-XF0 Temperature        53 degrees C / 127 degrees F
  Power
    LTC3880-XF0-1.0v-RAIL      998 mV
    LTC3880-XF0-1.0v-CH0       998 mV
    LTC3880-XF0-1.0v-CH1      1001 mV
    LTC3880-XF0-1.5v-RAIL     1454 mV
    LTC3880-XF0-1.5v-CH0      1454 mV
    LTC3880-XF0-1.5v-CH1      1456 mV
    LTC3880-XF1-1.0v-RAIL      998 mV
    LTC3880-XF1-1.0v-CH0       998 mV
    LTC3880-XF1-1.0v-CH1      1002 mV
    LTC3880-XF1-1.5v-RAIL     1454 mV
    LTC3880-XF1-1.5v-CH0      1454 mV
    LTC3880-XF1-1.5v-CH1      1457 mV
ADC 1 status:
  State                      Online
  Intake Temperature         32 degrees C / 89 degrees F
  Exhaust Temperature        42 degrees C / 107 degrees F
  ADC-XF1 Temperature        44 degrees C / 111 degrees F
```

```
  ADC-XF0 Temperature        52 degrees C / 125 degrees F
  Power
    LTC3880-XF0-1.0v-RAIL      998 mV
    LTC3880-XF0-1.0v-CH0       998 mV
    LTC3880-XF0-1.0v-CH1      1002 mV
    LTC3880-XF0-1.5v-RAIL     1454 mV
    LTC3880-XF0-1.5v-CH0      1454 mV
    LTC3880-XF0-1.5v-CH1      1456 mV
    LTC3880-XF1-1.0v-RAIL      999 mV
    LTC3880-XF1-1.0v-CH0       999 mV
    LTC3880-XF1-1.0v-CH1      1002 mV
    LTC3880-XF1-1.5v-RAIL     1454 mV
    LTC3880-XF1-1.5v-CH0      1454 mV
    LTC3880-XF1-1.5v-CH1      1456 mV
ADC 2 status:
  State                      Online
  Intake Temperature         35 degrees C / 95 degrees F
  Exhaust Temperature        42 degrees C / 107 degrees F
  ADC-XF1 Temperature        48 degrees C / 118 degrees F
  ADC-XF0 Temperature        54 degrees C / 129 degrees F
  Power
    LTC3880-XF0-1.0v-RAIL     1030 mV
    LTC3880-XF0-1.0v-CH0      1030 mV
    LTC3880-XF0-1.0v-CH1      1033 mV
    LTC3880-XF0-1.5v-RAIL     1500 mV
    LTC3880-XF0-1.5v-CH0      1500 mV
    LTC3880-XF0-1.5v-CH1      1501 mV
    LTC3880-XF1-1.0v-RAIL     1029 mV
    LTC3880-XF1-1.0v-CH0      1029 mV
    LTC3880-XF1-1.0v-CH1      1033 mV
    LTC3880-XF1-1.5v-RAIL     1499 mV
    LTC3880-XF1-1.5v-CH0      1499 mV
LTC3880-XF1-1.5v-CH1      1502 mV
ADC 3 status:
  State                      Online
  Intake Temperature         35 degrees C / 95 degrees F
  Exhaust Temperature        40 degrees C / 104 degrees F
  ADC-XF1 Temperature        44 degrees C / 111 degrees F
  ADC-XF0 Temperature        51 degrees C / 123 degrees F
  Power
    LTC3880-XF0-1.0v-RAIL      999 mV
    LTC3880-XF0-1.0v-CH0       999 mV
    LTC3880-XF0-1.0v-CH1      1002 mV
```

```
    LTC3880-XF0-1.5v-RAIL     1454 mV
    LTC3880-XF0-1.5v-CH0      1454 mV
    LTC3880-XF0-1.5v-CH1      1456 mV
    LTC3880-XF1-1.0v-RAIL      999 mV
    LTC3880-XF1-1.0v-CH0       999 mV
    LTC3880-XF1-1.0v-CH1      1002 mV
    LTC3880-XF1-1.5v-RAIL     1454 mV
    LTC3880-XF1-1.5v-CH0      1454 mV
    LTC3880-XF1-1.5v-CH1      1457 mV
ADC 4 status:
  State                     Online
  Intake Temperature        31 degrees C / 87 degrees F
  Exhaust Temperature       43 degrees C / 109 degrees F
  ADC-XF1 Temperature       48 degrees C / 118 degrees F
  ADC-XF0 Temperature       56 degrees C / 132 degrees F
  Power
    LTC3880-XF0-1.0v-RAIL     1029 mV
    LTC3880-XF0-1.0v-CH0      1029 mV
    LTC3880-XF0-1.0v-CH1      1033 mV
    LTC3880-XF0-1.5v-RAIL     1499 mV
    LTC3880-XF0-1.5v-CH0      1499 mV
    LTC3880-XF0-1.5v-CH1      1501 mV
    LTC3880-XF1-1.0v-RAIL     1030 mV
    LTC3880-XF1-1.0v-CH0      1030 mV
    LTC3880-XF1-1.0v-CH1      1033 mV
    LTC3880-XF1-1.5v-RAIL     1499 mV
    LTC3880-XF1-1.5v-CH0      1499 mV
    LTC3880-XF1-1.5v-CH1      1502 mV
ADC 5 status:
  State                     Online
  Intake Temperature        33 degrees C / 91 degrees F
  Exhaust Temperature       43 degrees C / 109 degrees F
  ADC-XF1 Temperature       47 degrees C / 116 degrees F
  ADC-XF0 Temperature       54 degrees C / 129 degrees F
  Power
    LTC3880-XF0-1.0v-RAIL      999 mV
    LTC3880-XF0-1.0v-CH0       999 mV
    LTC3880-XF0-1.0v-CH1      1002 mV
    LTC3880-XF0-1.5v-RAIL     1454 mV
    LTC3880-XF0-1.5v-CH0      1454 mV
    LTC3880-XF0-1.5v-CH1      1456 mV
    LTC3880-XF1-1.0v-RAIL      998 mV
    LTC3880-XF1-1.0v-CH0       998 mV
```

```
    LTC3880-XF1-1.0v-CH1      1002 mV
    LTC3880-XF1-1.5v-RAIL     1454 mV
 LTC3880-XF1-1.5v-CH0      1454 mV
    LTC3880-XF1-1.5v-CH1      1457 mV
ADC 6 status:
  State                     Online
  Intake Temperature        32 degrees C / 89 degrees F
  Exhaust Temperature       42 degrees C / 107 degrees F
  ADC-XF1 Temperature       47 degrees C / 116 degrees F
  ADC-XF0 Temperature       55 degrees C / 131 degrees F
  Power
    LTC3880-XF0-1.0v-RAIL     1030 mV
    LTC3880-XF0-1.0v-CH0      1030 mV
    LTC3880-XF0-1.0v-CH1      1033 mV
    LTC3880-XF0-1.5v-RAIL     1499 mV
    LTC3880-XF0-1.5v-CH0      1499 mV
    LTC3880-XF0-1.5v-CH1      1501 mV
    LTC3880-XF1-1.0v-RAIL     1030 mV
    LTC3880-XF1-1.0v-CH0      1030 mV
    LTC3880-XF1-1.0v-CH1      1033 mV
    LTC3880-XF1-1.5v-RAIL     1499 mV
    LTC3880-XF1-1.5v-CH0      1499 mV
    LTC3880-XF1-1.5v-CH1      1502 mV
ADC 7 status:
  State                     Online
  Intake Temperature        36 degrees C / 96 degrees F
  Exhaust Temperature       43 degrees C / 109 degrees F
  ADC-XF1 Temperature       46 degrees C / 114 degrees F
  ADC-XF0 Temperature       55 degrees C / 131 degrees F
  Power
    LTC3880-XF0-1.0v-RAIL     1030 mV
    LTC3880-XF0-1.0v-CH0      1030 mV
    LTC3880-XF0-1.0v-CH1      1033 mV
    LTC3880-XF0-1.5v-RAIL     1500 mV
    LTC3880-XF0-1.5v-CH0      1500 mV
    LTC3880-XF0-1.5v-CH1      1501 mV
    LTC3880-XF1-1.0v-RAIL     1030 mV
    LTC3880-XF1-1.0v-CH0      1030 mV
    LTC3880-XF1-1.0v-CH1      1033 mV
    LTC3880-XF1-1.5v-RAIL     1499 mV
    LTC3880-XF1-1.5v-CH0      1499 mV
    LTC3880-XF1-1.5v-CH1      1502 mV
ADC 8 status:
```

```
  State                      Online
  Intake Temperature         35 degrees C / 95 degrees F
  Exhaust Temperature        43 degrees C / 109 degrees F
  ADC-XF1 Temperature        44 degrees C / 111 degrees F
  ADC-XF0 Temperature        51 degrees C / 123 degrees F
  Power
    LTC3880-XF0-1.0v-RAIL      999 mV
    LTC3880-XF0-1.0v-CH0       999 mV
    LTC3880-XF0-1.0v-CH1      1002 mV
    LTC3880-XF0-1.5v-RAIL     1455 mV
    LTC3880-XF0-1.5v-CH0      1455 mV
    LTC3880-XF0-1.5v-CH1      1456 mV
    LTC3880-XF1-1.0v-RAIL      999 mV
    LTC3880-XF1-1.0v-CH0       999 mV
    LTC3880-XF1-1.0v-CH1      1002 mV
 LTC3880-XF1-1.5v-RAIL     1455 mV
    LTC3880-XF1-1.5v-CH0      1455 mV
    LTC3880-XF1-1.5v-CH1      1457 mV
ADC 9 status:
  State                      Online
  Intake Temperature         31 degrees C / 87 degrees F
  Exhaust Temperature        43 degrees C / 109 degrees F
  ADC-XF1 Temperature        48 degrees C / 118 degrees F
  ADC-XF0 Temperature        56 degrees C / 132 degrees F
  Power
    LTC3880-XF0-1.0v-RAIL     1029 mV
    LTC3880-XF0-1.0v-CH0      1029 mV
    LTC3880-XF0-1.0v-CH1      1033 mV
    LTC3880-XF0-1.5v-RAIL     1455 mV
    LTC3880-XF0-1.5v-CH0      1455 mV
    LTC3880-XF0-1.5v-CH1      1457 mV
    LTC3880-XF1-1.0v-RAIL     1029 mV
    LTC3880-XF1-1.0v-CH0      1029 mV
    LTC3880-XF1-1.0v-CH1      1033 mV
    LTC3880-XF1-1.5v-RAIL     1454 mV
    LTC3880-XF1-1.5v-CH0      1454 mV
    LTC3880-XF1-1.5v-CH1      1457 mV
```

show chassis environment adc (MX2008 Router)

```
user@host>show chassis environment adc
ADC 7 status:
  State                      Online
  Intake Temperature         32 degrees C / 89 degrees F
  Exhaust Temperature        39 degrees C / 102 degrees F
  ADC-XF1 Temperature        46 degrees C / 114 degrees F
  ADC-XF0 Temperature        54 degrees C / 129 degrees F
  Power
    LTC3880-XF0-1.0v-RAIL       1029 mV
    LTC3880-XF0-1.0v-CH0        1029 mV
    LTC3880-XF0-1.0v-CH1        1033 mV
    LTC3880-XF0-1.5v-RAIL       1499 mV
    LTC3880-XF0-1.5v-CH0        1499 mV
    LTC3880-XF0-1.5v-CH1        1501 mV
    LTC3880-XF1-1.0v-RAIL       1029 mV
    LTC3880-XF1-1.0v-CH0        1029 mV
    LTC3880-XF1-1.0v-CH1        1033 mV
    LTC3880-XF1-1.5v-RAIL       1499 mV
    LTC3880-XF1-1.5v-CH0        1499 mV
    LTC3880-XF1-1.5v-CH1        1502 mV
    ADC-2.5V                    2851 mV
    ADC-3.3V                    3787 mV
```

Release Information

Command introduced in Junos OS Release 12.3 for MX2010 and MX2020 Universal Routing Platforms.

`all-members`, `local`, and `member` *`member-id`* options introduced in Junos OS Release 15.1 for MX2020 and MX2010 routers.

RELATED DOCUMENTATION

show chassis adc | 476

show chassis environment cb

IN THIS SECTION

- Syntax | 682
- Syntax (TX Matrix Routers) | 682
- Syntax (TX Matrix Plus Routers) | 683
- Syntax (MX Series Routers) | 683
- Syntax (MX104 Universal Routing Platforms) | 683
- Syntax (MX2010, MX2020, MX10003, MX204, MX2008, and MX10008 Universal Routing Platforms; EX9251 and EX9253 Switches) | 683
- Syntax (QFabric System) | 684
- Description | 684
- Options | 684
- Required Privilege Level | 685
- Output Fields | 685
- Sample Output | 687
- Release Information | 721

Syntax

```
show chassis environment cb
<slot>
```

Syntax (TX Matrix Routers)

```
show chassis environment cb
<lcc number | scc>
<slot>
```

Syntax (TX Matrix Plus Routers)

```
show chassis environment cb
<lcc number | sfc number >
<slot>
```

Syntax (MX Series Routers)

```
show chassis environment cb
<slot>
<all-members>
<local>
<member member-id>
```

Syntax (MX104 Universal Routing Platforms)

```
show chassis environment cb
```

Syntax (MX2010, MX2020, MX10003, MX204, MX2008, and MX10008 Universal Routing Platforms; EX9251 and EX9253 Switches)

```
show chassis environment cb
<slot>
```

Syntax (QFabric System)

```
show chassis environment cb
<slot interconnect-device interconnect-device-name>
< interconnect-device interconnect-device-name slot>
```

Description

(M120, M320, MX Series, and T Series routers, EX8200 switches, and PTX Series Packet Transport Routers only) Display environmental information about the Control Boards (CBs).

Options

none Display environmental information about all CBs. For a TX Matrix router, display environmental information about all CBs on the TX Matrix router and its attached T640 routers. For a TX Matrix Plus router, display environmental information about all CBs on the TX Matrix Plus router and its attached T1600 or T4000 routers.

all-members (MX Series routers only) (Optional) Display environmental information about the CBs on all the members of the Virtual Chassis configuration.

interconnect-device (QFabric systems only) Display environmental information about CBs on the Interconnect device.

lcc *number* (TX Matrix router and TX Matrix Plus router only) (Optional) Line-card chassis number.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local — (MX Series routers only) (Optional) Display environmental information about the CBs on the local Virtual Chassis member.

member ***member-id*** — (MX Series routers only) (Optional) Display environmental information about the CBs on the specified member of the Virtual Chassis configuration. Replace ***member-id*** with a value of 0 or 1.

scc — (TX Matrix router only) (Optional) Display environmental information about the CBs in the TX Matrix router (switch-card chassis).

sfc ***number*** — (TX Matrix Plus router only) (Optional) Display environmental information about the CBs in the TX Matrix Plus router (or switch-fabric chassis).

slot — (Optional) Display environmental information about the specified CB. On routers and PTX Series Packet Transport Routers, replace ***slot*** with **0** or **1**. On EX Series switches replace ***slot*** with **0**, **1**, or **2**. On QFX Series switches, replace ***slot*** with **0** or **1**.

Required Privilege Level

view

Output Fields

Table 40 on page 686 lists the output fields for the `show chassis environment cb` command. Output fields are listed in the approximate order in which they appear.

Table 40: show chassis environment cb Output Fields

Field Name	Field Description
State	Status of the CB. If two CBs are installed and online, one is functioning as the primary, and the other is the standby. • **Online**—CB is online and running. • **Offline**— CB is powered down. **NOTE**: On the EX8208 switch, the installation can include three CBs.
Temperature	Temperature in Celsius (C) and Fahrenheit (F) of the air flowing past the CB. • **Temperature Intake**—Measures the temperature of the air intake to cool the power supplies. • **Temperature Exhaust**—Measures the temperature of the hot air exhaust. **NOTE**: On the MX2010, MX2020, and MX2008 routers, the intake temperature measures the temperature of the air intake to cool the Control Board (CB). The MX2010, MX2020, and MX2008 routers include intake and exhaust temperatures for multiple zones (`Intake A`, `Intake B`, `Intake C`, `Exhaust A`, `Exhaust B`, and `TCBC`).The QFabric system and QFX5700 include intake and exhaust temperatures for `Intake 1`, `Intake 2`, `Exhaust 1`, and `Exhaust 2`.)
Power	Power required and measured on the CB. The left column displays the required power, in volts. The right column displays the measured power, in millivolts.
BUS Revision	Revision level of the generic bus device. (Not on switches.)
FPGA Revision	Revision level of the field-programmable gate array (FPGA). (Not on switches.)

Table 40: show chassis environment cb Output Fields *(Continued)*

Field Name	Field Description
PMBus device (on MX240, MX480, and MX960 routers with Enhanced MX SCB)	Enhanced SCB on MX 240, MX480, and MX960 routers allows the system to save power by supplying only the amount of voltage that is required. Configurable PMBus devices are used to provide the voltage for each individual device. There is one PMBus device for each XF ASIC so that the output can be customized to each device. The following PMBus device information is displayed for routers with Enhanced MX SCB: • **Expected voltage** • **Measured voltage** • **Measured current** • **Calculated power**

Sample Output

show chassis environment cb (M120 Router)

```
user@host> show chassis environment cb
CB 0 status:
  State                    Online Master
  Temperature              33 degrees C / 91 degrees F
  Power
    1.2 V                   1214 mV
    1.5 V                   1495 mV
    2.5 V                   2494 mV
    3.3 V                   3319 mV
    5.0 V                   5085 mV
    3.3 V bias              3296 mV
  Bus Revision             12
  FPGA Revision            17
CB 1 status:
  State                    Online Standby
  Temperature              34 degrees C / 93 degrees F
  Power
    1.2 V                   1195 mV
```

```
    1.5 V                      1495 mV
    2.5 V                      2504 mV
    3.3 V                      3312 mV
    5.0 V                      5111 mV
    3.3 V bias                 3296 mV
  Bus Revision                12
  FPGA Revision               17
```

show chassis environment cb (M320 Router)

```
user@host> show chassis environment cb
CB 0 status:
  State                            Online Master
  Temperature                   29 degrees C / 84 degrees F
  Power:
    1.8 V                     1805 mV
    2.5 V                     2501 mV
    3.3 V                     3293 mV
    4.6 V                     4725 mV
    5.0 V                     5032 mV
    12.0 V                   11975 mV
    3.3 V bias                3286 mV
    8.0 V bias                7589 mV
  BUS Revision                  40
  FPGA Revision                  7
CB 1 status:
  State                            Online Standby
  Temperature                   32 degrees C / 89 degrees F
  Power:
    1.8 V                     1802 mV
    2.5 V                     2482 mV
    3.3 V                     3289 mV
    4.6 V                     4720 mV
    5.0 V                     5001 mV
    12.0 V                   11946 mV
    3.3 V bias                3274 mV
    8.0 V bias                7562 mV
  BUS Revision                  40
  FPGA Revision                  7
```

show chassis environment cb (MX80 Router)

```
user@host> show chassis environment cb
CB 0 status:
  State                       Online Master
  Temperature                 36 degrees C / 96 degrees F
  Power 1
    1.0 V                      1034 mV
    1.0 V MQ                   1037 mV
    1.0 V LU                   1005 mV
    1.2 V                      1218 mV
    1.5 V                      1524 mV
    1.8 V                      1814 mV
    2.5 V                      2558 mV
    3.3 V                      3296 mV
    5.0 V                      5233 mV
    5.0 V bias                 5207 mV
    12.0 V                    12162 mV
```

show chassis environment cb (MX104 Router)

```
user@host > show chassis environment cb
CB 0 status:
  State                       Online Master
  Temperature                 33 degrees C / 91 degrees F
  Power 1
    0.75 V                     751 mV
    1.0 V                     1005 mV
    1.1 V                     1113 mV
    1.5 V                     1494 mV
    2.5 V                     2518 mV
    3.3 V                     3338 mV
    5.0 V                     4960 mV
    12.0 V                   12006 mV
  FPGA Revision               25
CB 1 status:
  State                       Empty
```

show chassis environment cb (MX240 Router)

```
user@host> show chassis environment cb
CB 0 status:
  State                       Online Standby
  Temperature                 37 degrees C / 98 degrees F
  Power 1
    1.2 V                      1208 mV
    1.5 V                      1521 mV
    1.8 V                      1811 mV
    2.5 V                      2513 mV
    3.3 V                      3332 mV
    5.0 V                      5059 mV
    12.0 V                    12162 mV
    1.25 V                     1260 mV
    3.3 V SM3                  3306 mV
    5.0 V RE                   5085 mV
    12.0 V RE                 11872 mV
  Power 2
    11.3 V bias PEM           11272 mV
    4.6 V bias MidPlane        4827 mV
    11.3 V bias FPD           11272 mV
    11.3 V bias POE 0         11292 mV
    11.3 V bias POE 1         11253 mV
  Bus Revision                42
  FPGA Revision               1
```

show chassis environment cb (MX240 Router with Enhanced MX SCB)

```
user@host> show chassis environment cb
CB 0 status:
  State                       Online Standby
  Temperature                 37 degrees C / 98 degrees F
  Power 1
    1.2 V                      1208 mV
    1.5 V                      1521 mV
    1.8 V                      1811 mV
    2.5 V                      2513 mV
    3.3 V                      3332 mV
    5.0 V                      5059 mV
```

```
    12.0 V                   12162 mV
    1.25 V                    1260 mV
    3.3 V SM3                 3306 mV
    5.0 V RE                  5085 mV
    12.0 V RE                11872 mV
  Power 2
    11.3 V bias PEM          11272 mV
    4.6 V bias MidPlane       4827 mV
    11.3 V bias FPD          11272 mV
    11.3 V bias POE 0        11292 mV
    11.3 V bias POE 1        11253 mV
  Bus Revision               42
  FPGA Revision              1
  PMBus             Expected   Measured   Measured  Calculated
  device            voltage    voltage    current   power
    XF ASIC A        1000 mV     997 mV   11031 mA   10997 mW
    XF ASIC B        1000 mV     996 mV   12125 mA   12076 mW
```

show chassis environment cb (MX480 Router)

```
user@host> show chassis environment cb
CB 0 status:
  State                      Online Master
  Temperature                41 degrees C / 105 degrees F
  Power 1
    1.2 V                     1202 mV
    1.5 V                     1511 mV
    1.8 V                     1798 mV
    2.5 V                     2507 mV
    3.3 V                     3312 mV
    5.0 V                     5027 mV
    12.0 V                   12200 mV
    1.25 V                    1260 mV
    3.3 V SM3                 3293 mV
    5 V RE                    5040 mV
    12 V RE                  11910 mV
  Power 2
    11.3 V bias PEM          11156 mV
    4.6 V bias MidPlane       4801 mV
    11.3 V bias FPD          11214 mV
    11.3 V bias POE 0        11098 mV
```

```
    11.3 V bias POE 1        11330 mV
  Bus Revision               42
  FPGA Revision              1
```

show chassis environment cb (MX480 Router with Enhanced MX SCB)

```
user@host> show chassis environment cb
CB 0 status:
  State                      Online Master
  Temperature                41 degrees C / 105 degrees F
  Power 1
    1.2 V                     1202 mV
    1.5 V                     1511 mV
    1.8 V                     1798 mV
    2.5 V                     2507 mV
    3.3 V                     3312 mV
    5.0 V                     5027 mV
    12.0 V                   12200 mV
    1.25 V                    1260 mV
    3.3 V SM3                 3293 mV
    5 V RE                    5040 mV
    12 V RE                  11910 mV
  Power 2
    11.3 V bias PEM          11156 mV
    4.6 V bias MidPlane       4801 mV
    11.3 V bias FPD          11214 mV
    11.3 V bias POE 0        11098 mV
    11.3 V bias POE 1        11330 mV
  Bus Revision               42
  FPGA Revision              1
  PMBus             Expected   Measured   Measured  Calculated
  device            voltage    voltage    current   power
    XF ASIC A        1000 mV     997 mV   11031 mA   10997 mW
    XF ASIC B        1000 mV     996 mV   12125 mA   12076 mW
```

show chassis environment cb (MX960 Router)

```
user@host> show chassis environment cb
CB 0 status:
  State                      Online Master
```

```
  Temperature                24 degrees C / 75 degrees F
  Power 1
    1.2 V                     1965 mV
    1.5 V                     2465 mV
    1.8 V                     2990 mV
    2.5 V                     3296 mV
    3.3 V                     3296 mV
    5.0 V                     6593 mV
    12.0 V                   13187 mV
    3.3 V bias                3296 mV
    1.25 V                    1994 mV
    3.3 V SM3                 3296 mV
    5 V RE                    6593 mV
    12 V RE                  13174 mV
  Power 2                    Sensor failure
  Bus Revision               4
  FPGA Revision              3
```

show chassis environment cb (MX960 Router with Enhanced MX SCB)

```
user@host> show chassis environment cb
CB 0 status:
  State                      Online Master
  Temperature                24 degrees C / 75 degrees F
  Power 1
    1.2 V                     1965 mV
    1.5 V                     2465 mV
    1.8 V                     2990 mV
    2.5 V                     3296 mV
    3.3 V                     3296 mV
    5.0 V                     6593 mV
    12.0 V                   13187 mV
    3.3 V bias                3296 mV
    1.25 V                    1994 mV
    3.3 V SM3                 3296 mV
    5 V RE                    6593 mV
    12 V RE                  13174 mV
  Power 2                    Sensor failure
  Bus Revision               4
  FPGA Revision              3
  PMBus             Expected   Measured   Measured  Calculated
```

```
  device            voltage    voltage    current   power
    XF ASIC A        1000 mV     997 mV   11031 mA   10997 mW
    XF ASIC B        1000 mV     996 mV   12125 mA   12076 mW
```

show chassis environment cb (MX2020 Router)

```
user@host> show chassis environment cb
CB 0 status:
  State                      Online Master
  IntakeA-Zone0 Temperature  44 degrees C / 111 degrees F
  IntakeB-Zone1 Temperature  34 degrees C / 93 degrees F
  IntakeC-Zone0 Temperature  45 degrees C / 113 degrees F
  ExhaustA-Zone0 Temperature 43 degrees C / 109 degrees F
  ExhaustB-Zone1 Temperature 36 degrees C / 96 degrees F
  TCBC-Zone0 Temperature     39 degrees C / 102 degrees F
  Power 1
    1.0 V                     1011 mV
    1.2 V                     1208 mV
    1.8 V                     1801 mV
    2.5 V                     2552 mV
    3.3 V                     3312 mV
    5.0 V                     5040 mV
    5.0 V RE                  4988 mV
    12.0 V                   12065 mV
    12.0 V RE                12046 mV
  Bus Revision               99
  FPGA Revision              270
CB 1 status:
  State                      Online Standby
  IntakeA-Zone0 Temperature  45 degrees C / 113 degrees F
  IntakeB-Zone1 Temperature  41 degrees C / 105 degrees F
  IntakeC-Zone0 Temperature  46 degrees C / 114 degrees F
  ExhaustA-Zone0 Temperature 44 degrees C / 111 degrees F
  ExhaustB-Zone1 Temperature 41 degrees C / 105 degrees F
  TCBC-Zone0 Temperature     45 degrees C / 113 degrees F
  Power 1
    1.0 V                     1008 mV
    1.2 V                     1208 mV
    1.8 V                     1798 mV
    2.5 V                     2539 mV
    3.3 V                     3325 mV
```

```
    5.0 V                     5033 mV
    5.0 V RE                  4950 mV
    12.0 V                   12046 mV
    12.0 V RE                11968 mV
  Bus Revision               99
  FPGA Revision              0
```

show chassis environment cb (MX2010 Router)

```
user@host> show chassis environment cb
CB 0 status:
  State                      Online Master
  IntakeA-Zone0 Temperature  36 degrees C / 96 degrees F
  IntakeB-Zone1 Temperature  30 degrees C / 86 degrees F
  IntakeC-Zone0 Temperature  38 degrees C / 100 degrees F
  ExhaustA-Zone0 Temperature 36 degrees C / 96 degrees F
  ExhaustB-Zone1 Temperature 32 degrees C / 89 degrees F
  TCBC-Zone0 Temperature     34 degrees C / 93 degrees F
  Power 1
    1.0 V                     1015 mV
    1.2 V                     1205 mV
    1.8 V                     1804 mV
    2.5 V                     2552 mV
    3.3 V                     3325 mV
    5.0 V                     5020 mV
    5.0 V RE                  4988 mV
    12.0 V                   12104 mV
    12.0 V RE                12026 mV
  Bus Revision               100
  FPGA Revision              270
CB 1 status:
  State                      Online
  IntakeA-Zone0 Temperature  35 degrees C / 95 degrees F
  IntakeB-Zone1 Temperature  28 degrees C / 82 degrees F
  IntakeC-Zone0 Temperature  37 degrees C / 98 degrees F
  ExhaustA-Zone0 Temperature 34 degrees C / 93 degrees F
  ExhaustB-Zone1 Temperature 29 degrees C / 84 degrees F
  TCBC-Zone0 Temperature     32 degrees C / 89 degrees F
  Power 1
    1.0 V                     1011 mV
    1.2 V                     1208 mV
```

```
    1.8 V                      1788 mV
    2.5 V                      2526 mV
    3.3 V                      3319 mV
    5.0 V                      5046 mV
    5.0 V RE                   4975 mV
    12.0 V                    12046 mV
    12.0 V RE                 12007 mV
  Bus Revision                100
  FPGA Revision               0
```

show chassis environment cb (MX2008 Router)

```
user@host> show chassis environment cb
CB 0 status:
  State                       Online Master
  Inlet1 Temperature          37 degrees C / 98 degrees F
  Inlet2 Temperature          45 degrees C / 113 degrees F
  Inlet3 Temperature          44 degrees C / 111 degrees F
  Inlet4 Temperature          42 degrees C / 107 degrees F
  Exhaust1 Temperature        30 degrees C / 86 degrees F
  Exhaust2 Temperature        40 degrees C / 104 degrees F
  Exhaust3 Temperature        48 degrees C / 118 degrees F
  Exhaust4 Temperature        46 degrees C / 114 degrees F
  Power 1
    1.0 V PHY                  989 mV
    1.15 V                    1150 mV
    1.2 V bias                1189 mV
    1.5 V                     1488 mV
    1.8 V                     1772 mV
    2.5 V                     2462 mV
    3.3 V bias                3296 mV
    VCCIO                     1028 mV
  Power 2
    1.1 V                     1099 mV
    3.3 V                     3300 mV
  Power 3
    0.95 V XL710               949 mV
    1.05 V                    1050 mV
  Power 4
    1.2 V                     1199 mV
    5.0 V                     4999 mV
```

```
  Power 5
    1.0 V                       1000 mV
    1.2 V PHY                   1199 mV
  Bus Revision                114
  FPGA Revision               1
CB 1 status:
  State                       Online Standby
  Inlet1 Temperature          30 degrees C / 86 degrees F
  Inlet2 Temperature          31 degrees C / 87 degrees F
  Inlet3 Temperature          29 degrees C / 84 degrees F
  Inlet4 Temperature          32 degrees C / 89 degrees F
  Exhaust1 Temperature        30 degrees C / 86 degrees F
  Exhaust2 Temperature        33 degrees C / 91 degrees F
  Exhaust3 Temperature        34 degrees C / 93 degrees F
  Exhaust4 Temperature        35 degrees C / 95 degrees F
  Power 1
    1.0 V PHY                    986 mV
    1.15 V                      1153 mV
    1.2 V bias                  1195 mV
    1.5 V                       1498 mV
    1.8 V                       1798 mV
    2.5 V                       2494 mV
    3.3 V bias                  3296 mV
    VCCIO                       1034 mV
  Power 2
    1.1 V                       1100 mV
    3.3 V                       3300 mV
  Power 3
    0.95 V XL710                 949 mV
    1.05 V                      1050 mV
  Power 4
    1.2 V                       1199 mV
    5.0 V                       5000 mV
  Power 5
    1.0 V                       1000 mV
    1.2 V PHY                   1199 mV
  Bus Revision                114
  FPGA Revision               1
```

show chassis environment cb (MX10003 Router)

```
user@host> show chassis environment cb

CB 0 status:
  State                      Online Master
  CB 0 Exhaust Temp Sensor 0x49 35 degrees C / 95 degrees F
  CB 0 Inlet Temp Sensor 0x49 28 degrees C / 82 degrees F
  Power
    VDD1V5_PCH                  1489 mV
    VDDIO                        940 mV
    VDD3V3_PCH                  3332 mV
    VDD2V5_AB                   2508 mV
    VDD1V8_CLC                  1764 mV
    VDD3V3                      3292 mV
    VDD2V5_CD                   2508 mV
    VDD1V2_CBC_GTX                 0 mV
    VDD1V8_GLS_GTX                 0 mV
    VDD1V2_CBC                     0 mV
    VDD1V8_GLS                     0 mV
    BIAS3V3_BP                     0 mV
    VDD1V2_GH                   1200 mV
    VDD3V3_CBC                  3299 mV
    VDD1V2_CD                   1199 mV
    BIAS3V3                     3340 mV
    VDD1V2_AB                   1200 mV
    VDD5V0                      5000 mV
    VDD1V05                     1049 mV
    VDD1V05                     1050 mV
    VCORE                       1780 mV
         12V                        12272 mV    3952 mA   48984 mW
CB 1 status:
  State                      Online Standby
  CB 1 Exhaust Temp Sensor 0x49 35 degrees C / 95 degrees F
  CB 1 Inlet Temp Sensor 0x49 31 degrees C / 87 degrees F
  Power
    VDD1V5_PCH                  1489 mV
    VDDIO                        940 mV
    VDD3V3_PCH                  3351 mV
    VDD2V5_AB                   2508 mV
    VDD1V8_CLC                  1764 mV
    VDD3V3                      3312 mV
```

```
    VDD2V5_CD                   2508 mV
    VDD1V2_CBC_GTX              1195 mV
    VDD1V8_GLS_GTX              1764 mV
    VDD1V2_CBC                  1195 mV
    VDD1V8_GLS                  1783 mV
    BIAS3V3_BP                  4096 mV
    VDD1V2_GH                   1200 mV
    VDD3V3_CBC                  3300 mV
    VDD1V2_CD                   1200 mV
    BIAS3V3                     3339 mV
    VDD1V2_AB                   1200 mV
    VDD5V0                      5000 mV
    VDD1V05                     1050 mV
    VDD1V05                     1050 mV
    VCORE                       1780 mV
         12V                        12351 mV    3823 mA   45007 mW
```

show chassis environment cb (MX204 Router)

```
user@host> show chassis environment cb

CB 0 status:
  State                      Online Master
  CB 0 Top Right Inlet Sensor35 degrees C / 95 degrees F
  CB 0 Top Left Inlet Sensor 37 degrees C / 98 degrees F
  CB 0 Top Right Exhaust Sensor43 degrees C / 109 degrees F
  CB 0 Top Left Exhaust Sensor50 degrees C / 122 degrees F
  CB 0 CPU Core-0 Temp       48 degrees C / 118 degrees F
  CB 0 CPU Core-1 Temp       48 degrees C / 118 degrees F
  CB 0 CPU Core-2 Temp       48 degrees C / 118 degrees F
  CB 0 CPU Core-3 Temp       47 degrees C / 116 degrees F
  CB 0 CPU Core-4 Temp       47 degrees C / 116 degrees F
  CB 0 CPU Core-5 Temp       47 degrees C / 116 degrees F
  CB 0 CPU Core-6 Temp       47 degrees C / 116 degrees F
  CB 0 CPU Core-7 Temp       47 degrees C / 116 degrees F
  Power
    VDD1V5_PCH                  1509 mV
    VDDIO                        950 mV
    VDD3V3_PCH                  3312 mV
    VDD2V5_AB                   2508 mV
    VDD1V8_FRMR                 1813 mV
```

```
    VDD3V3                      3312 mV
    VDD2V5_CD                   2508 mV
    VDD1V8_PLL                  1813 mV
    VDD1V5                      1499 mV
    EA0_1V5                     1499 mV
    EA0_1V04                    1038 mV
    EA0_PLL_1V0                  999 mV
    EA0_2V5                     2508 mV
    BIAS3V                      3332 mV
    VDD1V2_CD                   1214 mV
    VDD1V2_AB                   1215 mV
    VDD1V05                     1050 mV
    BIAS3V3                     3309 mV
    VDD1V0                      1015 mV
    VDD1V8                      1804 mV
    VDD1V2                      1199 mV
    VDD2V5                      2504 mV
    EA0_VDD0V9                   949 mV
    EA0_HM1_VDD0V9               899 mV
    EA0_VDD0V9R2                 952 mV
    EA0_VDD1V0                  1000 mV
    VDD3V3                      3304 mV
    EA0_XR_VDD1V2               1199 mV
    EA0_XR_VDD0V9                903 mV
    EA0_HM_VDDM1V2              1199 mV
    EA0_HM_VDD1V2               1199 mV
    VDDCPU0                     1770 mV
         12V Hotswap A             11968 mV    4696 mA   55466 mW
         12V Hotswap B             12048 mV   14936 mA  180652 mW
```

show chassis environment cb (MX10008 Router)

```
user@host> show chassis environment cb
CB 0 status:
  State                      Online Master
  CB 0 Intake A Temp Sensor               24 degrees C / 75 degrees F
  CB 0 Intake B Temp Sensor               24 degrees C / 75 degrees F
  CB 0 Exhaust A Temp Sensor              28 degrees C / 82 degrees F
  CB 0 Exhaust B Temp Sensor              30 degrees C / 86 degrees F
  CB 0 Middle Temp Sensor                 28 degrees C / 82 degrees F
  Power
```

```
    GESW_VDD1V0                1000 mV
    VDD1V0                     1000 mV
    VDD1V2                     1199 mV
    VDD3V3                     3299 mV
    XL710_VCCD                  950 mV
    VDD1V05                    1050 mV
    VDD2V5                     2500 mV
    FPGA_VDD1V2                1200 mV
    VDD1V8                     1800 mV
    VDD1V15                    1150 mV
    VDD1V1                     1099 mV
    VCCIO                       950 mV
    PHY_VDD1V0                 1000 mV
    VDD5V0                     4998 mV
    FPGA_VDD1V5                1496 mV
    VDD1V5                     1496 mV
         12V                       12281 mV    7700 mA   92400 mW
CB 1 status:
  State                      Online Standby
  CB 1 Intake A Temp Sensor              24 degrees C / 75 degrees F
  CB 1 Intake B Temp Sensor              23 degrees C / 73 degrees F
  CB 1 Exhaust A Temp Sensor             27 degrees C / 80 degrees F
  CB 1 Exhaust B Temp Sensor             30 degrees C / 86 degrees F
  CB 1 Middle Temp Sensor                28 degrees C / 82 degrees F
  Power
    GESW_VDD1V0                 999 mV
    VDD1V0                     1000 mV
    VDD1V2                     1199 mV
    VDD3V3                     3299 mV
    XL710_VCCD                  950 mV
    VDD1V05                    1050 mV
    VDD2V5                     2499 mV
    FPGA_VDD1V2                1200 mV
    VDD1V8                     1799 mV
    VDD1V15                    1150 mV
    VDD1V1                     1100 mV
    VCCIO                       949 mV
    PHY_VDD1V0                  999 mV
    VDD5V0                     5000 mV
    FPGA_VDD1V5                1502 mV
    VDD1V5                     1496 mV
         12V                       12281 mV    8002 mA   96024 mW
```

show chassis environment cb (T4000 Core Router)

```
user@host> show chassis environment cb
CB 0 status:
  State                       Online Master
  Temperature                 33 degrees C / 91 degrees F
  Power 1
    1.8 V                      1805 mV
    2.5 V                      2523 mV
    3.3 V                      3324 mV
    3.3 V bias                 3296 mV
    4.6 V                      4680 mV
    5.0 V                      4893 mV
    8.0 V bias                 7572 mV
    12.0 V                    11916 mV
  Power 2
    1.0 V                       993 mV
    1.2 V                      1210 mV
    3.3 V RE                   3330 mV
  Bus Revision                51
  FPGA Revision               5
CB 1 status:
  State                       Online Standby
  Temperature                 33 degrees C / 91 degrees F
  Power 1
    1.8 V                      1810 mV
    2.5 V                      2496 mV
    3.3 V                      3308 mV
    3.3 V bias                 3286 mV
    4.6 V                      4692 mV
    5.0 V                      4954 mV
    8.0 V bias                 7282 mV
    12.0 V                    11926 mV
  Power 2
    1.0 V                       993 mV
    1.2 V                      1185 mV
    3.3 V RE                   3316 mV
  Bus Revision                51
  FPGA Revision               5
```

show chassis environment cb (TX Matrix Router)

```
user@host> show chassis environment cb
------------------------------------------------------------------------
CB 0 status:
  State                           Online Master
  Temperature                  32 degrees C / 89 degrees F
  Power:
    1.8 V                    1797 mV
    2.5 V                    2477 mV
    3.3 V                    3311 mV
    4.6 V                    4727 mV
    5.0 V                    5015 mV
    12.0 V                  12185 mV
    3.3 V bias               3304 mV
    8.0 V bias               7870 mV
  BUS Revision                 40
  FPGA Revision                 1
CB 1 status:
  State                           Online Standby
...

lcc0-re0:
------------------------------------------------------------------------
CB 0 status:
  State                           Online Master
  Temperature                  32 degrees C / 89 degrees F
  Power:
    1.8 V                    1787 mV
    2.5 V                    2473 mV
    3.3 V                    3306 mV
    4.6 V                    4793 mV
    5.0 V                    5025 mV
    12.0 V                  12156 mV
    3.3 V bias               3289 mV
    8.0 V bias               7609 mV
  BUS Revision                 40
  FPGA Revision                 5
CB 1 status:
  State                           Online Standby
 ....
  BUS Revision                 40
```

```
  FPGA Revision                5

lcc2-re0:
--------------------------------------------------------------------------
CB 0 status:
  State                          Online Master
 ...
CB 1 status:
  State                          Online Standby
 ...
```

show chassis environment cb (TX Matrix Plus Router)

```
user@host> show chassis environment cb
sfc0-re0:
--------------------------------------------------------------------------
CB 0 status:
  State                      Online Master
  Temperature                38 degrees C / 100 degrees F
  Power 1
    1.0 V                     1005 mV
    1.1 V                     1108 mV
    1.2 V                     1205 mV
    1.25 V                    1269 mV
    1.5 V                     1508 mV
    1.8 V                     1814 mV
    2.5 V                     2507 mV
    3.3 V                     3306 mV
    3.3 V bias                3300 mV
    9.0 V                     9058 mV
    9.0 V RE                  9107 mV
  Power 2
    3.9 V                     3963 mV
    5.0 V                     5020 mV
    9.0 V                     9087 mV
  Bus Revision               79
  FPGA Revision              23
CB 1 status:
  State                      Online Standby
  Temperature                39 degrees C / 102 degrees F
  Power 1
```

```
    1.0 V                      1002 mV
    1.1 V                      1105 mV
    1.2 V                      1198 mV
    1.25 V                     1276 mV
    1.5 V                      1504 mV
    1.8 V                      1804 mV
    2.5 V                      2507 mV
    3.3 V                      3300 mV
    3.3 V bias                 3293 mV
    9.0 V                      9039 mV
    9.0 V RE                   9049 mV
  Power 2
    3.9 V                      3892 mV
    5.0 V                      5040 mV
    9.0 V                      9058 mV
  Bus Revision               79
  FPGA Revision              23

lcc0-re0:
--------------------------------------------------------------------------
CB 0 status:
  State                      Online Master
  Temperature                39 degrees C / 102 degrees F
  Power 1
    1.8 V                     1799 mV
    2.5 V                     2499 mV
    3.3 V                     3327 mV
    3.3 V bias                3299 mV
    4.6 V                     4673 mV
    5.0 V                     4918 mV
    8.0 V bias                7308 mV
    12.0 V                   11887 mV
  Power 2
    1.0 V                      996 mV
    1.2 V                     1199 mV
    3.3 V RE                  3319 mV
  Bus Revision               51
  FPGA Revision              3
CB 1 status:
  State                      Online Standby
  Temperature                40 degrees C / 104 degrees F
  Power 1
    1.8 V                     1800 mV
```

```
    2.5 V                      2496 mV
    3.3 V                      3322 mV
    3.3 V bias                 3284 mV
    4.6 V                      4680 mV
    5.0 V                      4954 mV
    8.0 V bias                 7284 mV
    12.0 V                    11902 mV
  Power 2
    1.0 V                       998 mV
    1.2 V                      1205 mV
    3.3 V RE                   3327 mV
  Bus Revision                51
  FPGA Revision               3

lcc1-re0:
--------------------------------------------------------------------------
CB 0 status:
  State                       Online Master
  Temperature                 41 degrees C / 105 degrees F
  Power 1
    1.8 V                      1804 mV
    2.5 V                      2517 mV
    3.3 V                      3300 mV
    3.3 V bias                 3284 mV
    4.6 V                      4681 mV
    5.0 V                      4927 mV
    8.0 V bias                 7357 mV
    12.0 V                    11907 mV
  Power 2
    1.0 V                       991 mV
    1.2 V                      1202 mV
    3.3 V RE                   3301 mV
  Bus Revision                51
  FPGA Revision               3
CB 1 status:
  State                       Online Standby
  Temperature                 40 degrees C / 104 degrees F
  Power 1
    1.8 V                      1805 mV
    2.5 V                      2528 mV
    3.3 V                      3324 mV
    3.3 V bias                 3289 mV
    4.6 V                      4694 mV
```

```
    5.0 V                      4959 mV
    8.0 V bias                 7311 mV
    12.0 V                    11926 mV
  Power 2
    1.0 V                       998 mV
    1.2 V                      1200 mV
    3.3 V RE                   3313 mV
  Bus Revision                51
  FPGA Revision               3

lcc2-re0:
--------------------------------------------------------------------------
CB 0 status:
  State                       Online Master
  Temperature                 41 degrees C / 105 degrees F
  Power 1
    1.8 V                      1805 mV
    2.5 V                      2494 mV
    3.3 V                      3333 mV
    3.3 V bias                 3296 mV
    4.6 V                      4673 mV
    5.0 V                      4901 mV
    8.0 V bias                 7343 mV
    12.0 V                    11916 mV
  Power 2
    1.0 V                       993 mV
    1.2 V                      1213 mV
    3.3 V RE                   3328 mV
  Bus Revision                51
  FPGA Revision               3
CB 1 status:
  State                       Online Standby
  Temperature                 41 degrees C / 105 degrees F
  Power 1
    1.8 V                      1804 mV
    2.5 V                      2523 mV
    3.3 V                      3334 mV
    3.3 V bias                 3291 mV
    4.6 V                      4697 mV
    5.0 V                      4969 mV
    8.0 V bias                 7308 mV
    12.0 V                    11936 mV
  Power 2
```

```
    1.0 V                       996 mV
    1.2 V                      1200 mV
    3.3 V RE                   3328 mV
  Bus Revision                51
  FPGA Revision               3

lcc3-re0:
--------------------------------------------------------------------------
CB 0 status:
  State                       Online Master
  Temperature                 37 degrees C / 98 degrees F
  Power 1
    1.8 V                     1809 mV
    2.5 V                     2510 mV
    3.3 V                     3296 mV
    3.3 V bias                3291 mV
    4.6 V                     4670 mV
    5.0 V                     4905 mV
    8.0 V bias                7211 mV
    12.0 V                   11882 mV
  Power 2
    1.0 V                      996 mV
    1.2 V                     1188 mV
    3.3 V RE                  3326 mV
  Bus Revision                51
  FPGA Revision               5
CB 1 status:
  State                       Online Standby
  Temperature                 38 degrees C / 100 degrees F
  Power 1
    1.8 V                     1813 mV
    2.5 V                     2510 mV
    3.3 V                     3322 mV
    3.3 V bias                3289 mV
    4.6 V                     4692 mV
    5.0 V                     4967 mV
    8.0 V bias                7194 mV
    12.0 V                   11916 mV
  Power 2
    1.0 V                      996 mV
    1.2 V                     1205 mV
    3.3 V RE                  3273 mV
```

```
  Bus Revision                51
  FPGA Revision               5
```

show chassis environment cb (EX8200 Switch)

```
user@host> show chassis environment cb

CB 0 status:
  State                       Online Master
  Temperature Intake          20 degrees C / 68 degrees F
  Temperature Exhaust         24 degrees C / 75 degrees F
  Power 1
    1.1 V                      1086 mV
    1.2 V                      1179 mV
    1.2 V *                    1182 mV
    1.2 V *                    1182 mV
    1.25 V                     1211 mV
    1.5 V                      1472 mV
    1.8 V                      1756 mV
    2.5 V                      2449 mV
    3.3 V                      3254 mV
    3.3 V bias                 3300 mV
    5.0 V                      4911 mV
    12.0 V                    11891 mV
  Power 2
    3.3 V bias *               3615 mV
    3.3 V bias *               3615 mV
    3.3 V bias *               3567 mV
    3.3 V bias *               3664 mV
    4.3 V bias *               4224 mV
    4.3 V bias *               4215 mV
    4.3 V bias *               4224 mV
    4.3 V bias *               4205 mV
    4.3 V bias *               4195 mV
    4.3 V bias *               4215 mV
    5.0 V bias                 4920 mV
CB 1 status:
  State                       Online Standby
  Temperature Intake          19 degrees C / 66 degrees F
  Temperature Exhaust         23 degrees C / 73 degrees F
  Power 1
```

```
    1.1 V                      1082 mV
    1.2 V                      1169 mV
    1.2 V *                    1179 mV
    1.2 V *                    1179 mV
    1.25 V                     1214 mV
    1.5 V                      1482 mV
    1.8 V                      1759 mV
    2.5 V                      2481 mV
    3.3 V                      3248 mV
    3.3 V bias                 3306 mV
    5.0 V                      4911 mV
    12.0 V                    11910 mV
  Power 2
    3.3 V bias *               3644 mV
    3.3 V bias *               3664 mV
    3.3 V bias *               3586 mV
    3.3 V bias *               3654 mV
    4.3 V bias *               4224 mV
    4.3 V bias *               4215 mV
    4.3 V bias *               4224 mV
    4.3 V bias *               4205 mV
    4.3 V bias *               4244 mV
    4.3 V bias *               4215 mV
    5.0 V bias                 4930 mV
CB 2 status:
  State                       Online
  Temperature Intake          19 degrees C / 66 degrees F
  Temperature Exhaust         23 degrees C / 73 degrees F
  Power 1
    1.2 V                      1195 mV
    1.5 V                      1511 mV
    1.8 V                      1804 mV
    2.5 V                      2526 mV
    3.3 V                      3300 mV
    3.3 V bias                 3306 mV
    12.0 V                    12220 mV
```

show chassis environment cb (EX8208 Switch)

```
user@host> show chassis environment cb
CB 0 status:
```

```
  State                       Online Master
  Temperature Intake          20 degrees C / 68 degrees F
  Temperature Exhaust         24 degrees C / 75 degrees F
  Power 1
    1.1 V                      1086 mV
    1.2 V                      1179 mV
    1.2 V *                    1182 mV
    1.2 V *                    1182 mV
    1.25 V                     1211 mV
    1.5 V                      1466 mV
    1.8 V                      1759 mV
    2.5 V                      2455 mV
    3.3 V                      3261 mV
    3.3 V bias                 3300 mV
    5.0 V                      4930 mV
    12.0 V                    11891 mV
  Power 2
    3.3 V bias *               3606 mV
    3.3 V bias *               3615 mV
    3.3 V bias *               3567 mV
    3.3 V bias *               3673 mV
    4.3 V bias *               4224 mV
    4.3 V bias *               4215 mV
    4.3 V bias *               4234 mV
    4.3 V bias *               4205 mV
    4.3 V bias *               4186 mV
    4.3 V bias *               4215 mV
    5.0 V bias                 4940 mV
CB 1 status:
  State                       Online Standby
  Temperature Intake          19 degrees C / 66 degrees F
  Temperature Exhaust         23 degrees C / 73 degrees F
  Power 1
    1.1 V                      1086 mV
    1.2 V                      1169 mV
    1.2 V *                    1179 mV
    1.2 V *                    1179 mV
    1.25 V                     1211 mV
    1.5 V                      1479 mV
    1.8 V                      1759 mV
    2.5 V                      2475 mV
    3.3 V                      3235 mV
    3.3 V bias                 3306 mV
```

```
    5.0 V                      4930 mV
    12.0 V                    11891 mV
  Power 2
    3.3 V bias *               3644 mV
    3.3 V bias *               3664 mV
    3.3 V bias *               3586 mV
    3.3 V bias *               3654 mV
    4.3 V bias *               4215 mV
    4.3 V bias *               4224 mV
    4.3 V bias *               4215 mV
    4.3 V bias *               4215 mV
    4.3 V bias *               4234 mV
    4.3 V bias *               4224 mV
    5.0 V bias                 4920 mV
CB 2 status:
  State                       Online
  Temperature Intake          20 degrees C / 68 degrees F
  Temperature Exhaust         24 degrees C / 75 degrees F
  Power 1
    1.2 V                      1202 mV
    1.5 V                      1508 mV
    1.8 V                      1804 mV
    2.5 V                      2520 mV
    3.3 V                      3300 mV
    3.3 V bias                 3300 mV
    12.0 V                    12200 mV
```

show chassis environment cb (EX9251 Switch)

```
user@switch> show chassis environment cb
CB 0 status:
  State                       Online Master
  CB 0 Top Right Inlet Sensor29 degrees C / 84 degrees F
  CB 0 Top Left Inlet Sensor 28 degrees C / 82 degrees F
  CB 0 Top Right Exhaust Sensor40 degrees C / 104 degrees F
  CB 0 Top Left Exhaust Sensor59 degrees C / 138 degrees F
  CB 0 CPU Core-0 Temp       45 degrees C / 113 degrees F
  CB 0 CPU Core-1 Temp       44 degrees C / 111 degrees F
  CB 0 CPU Core-2 Temp       44 degrees C / 111 degrees F
  CB 0 CPU Core-3 Temp       44 degrees C / 111 degrees F
  CB 0 CPU Core-4 Temp       45 degrees C / 113 degrees F
```

```
CB 0 CPU Core-5 Temp       44 degrees C / 111 degrees F
CB 0 CPU Core-6 Temp       44 degrees C / 111 degrees F
CB 0 CPU Core-7 Temp       43 degrees C / 109 degrees F
Power
  VDD1V5_PCH                1499 mV
  VDDIO                      950 mV
  VDD3V3_PCH                3312 mV
  VDD2V5_AB                 2489 mV
  VDD1V8_FRMR               1793 mV
  VDD3V3                    3292 mV
  VDD2V5_CD                 2508 mV
  VDD1V8_PLL                1793 mV
  VDD1V5                    1499 mV
  EA0_1V5                   1499 mV
  EA0_1V04                   999 mV
  EA0_PLL_1V0                999 mV
  EA0_2V5                   2508 mV
  BIAS3V                    3292 mV
  VDD1V2_CD                 1215 mV
  VDD1V2_AB                 1214 mV
  VDD1V05                   1050 mV
  BIAS3V3                   3309 mV
  VDD1V0                    1014 mV
  VDD1V8                    1805 mV
  VDD1V2                    1200 mV
  VDD2V5                    2504 mV
  EA0_VDD0V9                 949 mV
  EA0_HM1_VDD0V9             899 mV
  EA0_VDD0V9R2               952 mV
  EA0_VDD1V0                 999 mV
  VDD3V3                    3305 mV
  EA0_XR_VDD1V2             1199 mV
  EA0_XR_VDD0V9              903 mV
  EA0_HM_VDDM1V2            1199 mV
  EA0_HM_VDD1V2             1199 mV
  VDDCPU0                   1770 mV
       12V Hotswap A            11955 mV    4861 mA   59347 mW
       12V Hotswap B            11916 mV   15046 mA  180887 mW
```

show chassis environment cb (EX9253 Switch)

```
user@switch> show chassis environment cb
CB 0 status:
  State                      Online Master
  CB 0 Exhaust Temp Sensor   38 degrees C / 100 degrees F
  CB 0 Inlet Temp Sensor     32 degrees C / 89 degrees F
  CB 0 CPU DIE Temp Sensor   43 degrees C / 109 degrees F
  Power
    VDD1V5_PCH                  1489 mV
    VDDIO                        940 mV
    VDD3V3_PCH                  3332 mV
    VDD2V5_AB                   2508 mV
    VDD1V8_CLC                  1783 mV
    VDD3V3                      3312 mV
    VDD2V5_CD                   2508 mV
    VDD1V2_CBC_GTX              1195 mV
    VDD1V8_GLS_GTX              1783 mV
    VDD1V2_CBC                  1176 mV
    VDD1V8_GLS                  1783 mV
    BIAS3V3_BP                  3978 mV
    VDD1V2_GH                   1200 mV
    VDD3V3_CBC                  3299 mV
    VDD1V2_CD                   1200 mV
    BIAS3V3                     3340 mV
    VDD1V2_AB                   1199 mV
    VDD5V0                      5000 mV
    VDD1V05                     1050 mV
    VDD1V05                     1050 mV
    VCORE                       1770 mV
         12V                        12061 mV    4806 mA   57841 mW
CB 1 status:
  State                      Offline
  CB 1 Exhaust Temp Sensor   32 degrees C / 89 degrees F
  CB 1 Inlet Temp Sensor     29 degrees C / 84 degrees F
  CB 1 CPU DIE Temp Sensor   43 degrees C / 109 degrees F
  Power                      Disabled
```

show chassis environment cb (PTX5000 Packet Transport Router)

```
user@host> show chassis environment cb
CB 0 status:
  State                      Online Master
  Intake Temperature         38 degrees C / 100 degrees F
  Exhaust A Temperature      45 degrees C / 113 degrees F
  Exhaust B Temperature      42 degrees C / 107 degrees F
  Power 1
    1.2 V                     1200 mV
    1.25 V                    1250 mV
    2.5 V                     2500 mV
    3.3 V                     3300 mV
  Power 2
    1.0 V                     1000 mV
    3.3 V bias                3293 mV
    3.9 V                     3921 mV
  Bus Revision               132
  FPGA Revision              27
CB 1 status:
  State                      Online Standby
  Intake Temperature         34 degrees C / 93 degrees F
  Exhaust A Temperature      39 degrees C / 102 degrees F
  Exhaust B Temperature      36 degrees C / 96 degrees F
  Power 1
    1.2 V                     1199 mV
    1.25 V                    1250 mV
    2.5 V                     2499 mV
    3.3 V                     3299 mV
  Power 2
    1.0 V                     1000 mV
    3.3 V bias                3312 mV
    3.9 V                     3961 mV
  Bus Revision               132
  FPGA Revision              28
```

show chassis environment cb (PTX10008 Router)

```
user@host> show chassis environment cb
CB 0 status:
```

```
  State                      Online Master
  CB 0 Intake Temp Sensor    28 degrees C / 82 degrees F
  CB 0 Exhaust Temp Sensor   32 degrees C / 89 degrees F
  Power
    VDD 2.5V                    2489 mV
    Bias 3.3V                   3332 mV
    VDD 3.3V                    3292 mV
    VCC 1.8V                    1822 mV
    VDD 1.2V                    1205 mV
    VCC 1V                       999 mV
    VCC CPU 1.8V                1803 mV
    VDD 2.5V                    2489 mV
    VCC Aux 5V                  5115 mV
    VDD DDR 1.5V                1499 mV
    VTT SA CPU 0.8V              803 mV
    VTT CPU 1.05V               1048 mV
    VCC Core CPU                 901 mV
    VCC PCH 1.5V                1519 mV
    VDD 1.05V                   1048 mV
    VCC 2.5V                    2508 mV
    FORT VCCA 1V                 960 mV
    VDD .85V                     862 mV
    VTT DDRA .75V                744 mV
    VTT DDRB .75V                744 mV
         12V                        12285 mV    3779 mA   46339 mW
CB 1 status:
  State                      Online Standby
  CB 1 Intake Temp Sensor    27 degrees C / 80 degrees F
  CB 1 Exhaust Temp Sensor   32 degrees C / 89 degrees F
  Power
    VDD 2.5V                    2489 mV
    Bias 3.3V                   3332 mV
    VDD 3.3V                    3273 mV
    VCC 1.8V                    1822 mV
    VDD 1.2V                    1195 mV
    VCC 1V                       999 mV
    VCC CPU 1.8V                1783 mV
    VDD 2.5V                    2489 mV
    VCC Aux 5V                  5056 mV
    VDD DDR 1.5V                1499 mV
    VTT SA CPU 0.8V              793 mV
    VTT CPU 1.05V               1048 mV
    VCC Core CPU                 882 mV
```

```
    VCC PCH 1.5V                1509 mV
    VDD 1.05V                   1048 mV
    VCC 2.5V                    2489 mV
    FORT VCCA 1V                 960 mV
    VDD .85V                     862 mV
    VTT DDRA .75V                744 mV
    VTT DDRB .75V                744 mV
         12V                        12391 mV    3779 mA   46727 mW
```

show chassis environment cb (PTX10016 Router)

```
user@host> show chassis environment cb
CB 0 status:
  State                      Online Master
  CB 0 Intake Temp Sensor    20 degrees C / 68 degrees F
  CB 0 Exhaust Temp Sensor   24 degrees C / 75 degrees F
  Power
    VDD 2.5V                    2508 mV
    Bias 3.3V                   3351 mV
    VDD 3.3V                    3292 mV
    VCC 1.8V                    1832 mV
    VDD 1.2V                    1205 mV
    VCC 1V                       999 mV
    VCC CPU 1.8V                1793 mV
    VDD 2.5V                    2508 mV
    VCC Aux 5V                  5056 mV
    VDD DDR 1.5V                1509 mV
    VTT SA CPU 0.8V              803 mV
    VTT CPU 1.05V               1048 mV
    VCC Core CPU                 960 mV
    VCC PCH 1.5V                1519 mV
    VDD 1.05V                   1058 mV
    VCC 2.5V                    2528 mV
    FORT VCCA 1V                 960 mV
    VDD .85V                     852 mV
    VTT DDRA .75V                744 mV
    VTT DDRB .75V                744 mV
         12V                        12259 mV    3649 mA   45173 mW
CB 1 status:
  State                      Online Standby
  CB 1 Intake Temp Sensor    20 degrees C / 68 degrees F
```

```
  CB 1 Exhaust Temp Sensor   23 degrees C / 73 degrees F
  Power
    VDD 2.5V                    2508 mV
    Bias 3.3V                   3312 mV
    VDD 3.3V                    3273 mV
    VCC 1.8V                    1822 mV
    VDD 1.2V                    1195 mV
    VCC 1V                       989 mV
    VCC CPU 1.8V                1783 mV
    VDD 2.5V                    2489 mV
    VCC Aux 5V                  5086 mV
    VDD DDR 1.5V                1499 mV
    VTT SA CPU 0.8V              803 mV
    VTT CPU 1.05V               1048 mV
    VCC Core CPU                1029 mV
    VCC PCH 1.5V                1519 mV
    VDD 1.05V                   1048 mV
    VCC 2.5V                    2528 mV
    FORT VCCA 1V                 960 mV
    VDD .85V                     862 mV
    VTT DDRA .75V                744 mV
    VTT DDRB .75V                744 mV
         12V                        12285 mV    3952 mA   48447 mW
```

show chassis environment cb (QFabric System and QFX5700)

```
user@switch> show chassis environment cb
CB 0 status:
State Online Master
Temp Sensor Inlet 1 52 degrees C / 125 degrees F
Temp Sensor Inlet 2 83 degrees C / 181 degrees F
Temp Sensor Exhaust 1 67 degrees C / 152 degrees F
Temp Sensor Exhaust 2 62 degrees C / 143 degrees F
Power 1
Volt Sensor PVTT0 1494 mV
Volt Sensor PVTT1 1504 mV
Volt Sensor VDD1V8_FPGA 1345 mV
Volt Sensor BIAS3V3 3130 mV
Volt Sensor VDD5V0 4995 mV
Volt Sensor VDD3V3_SATA 3230 mV
Volt Sensor VDD3V3_FPGA 3130 mV
```

```
Volt Sensor VDD3V3_PCH 3130 mV
Volt Sensor VDD2V5 2415 mV
Volt Sensor VDD0V9 910 mV

Volt Sensor VDD1V2_FPGA 1211 mV
Volt Sensor VDD1V8 1791 mV
Power 2
Volt Sensor VDD1V5 1494 mV
Volt Sensor VDD1V7 1704 mV
Volt Sensor VDD1V3 1345 mV
Volt Sensor VDD1V0 1002 mV
…
…
Bus Revision 99
FPGA Revision 10
CB 1 status:
State Online Master
Temp Sensor Inlet 1 52 degrees C / 125 degrees F
Temp Sensor Inlet 2 83 degrees C / 181 degrees F
Temp Sensor Exhaust 1 67 degrees C / 152 degrees F
Temp Sensor Exhaust 2 62 degrees C / 143 degrees F
Power 1
Volt Sensor PVTT0 1494 mV
Volt Sensor PVTT1 1504 mV
Volt Sensor VDD1V8_FPGA 1345 mV
Volt Sensor BIAS3V3 3130 mV
Volt Sensor VDD5V0 4995 mV
Volt Sensor VDD3V3_SATA 3230 mV
Volt Sensor VDD3V3_FPGA 3130 mV
Volt Sensor VDD3V3_PCH 3130 mV
Volt Sensor VDD2V5 2415 mV
Volt Sensor VDD0V9 910 mV
Volt Sensor VDD1V2_FPGA 1211 mV
Volt Sensor VDD1V8 1791 mV
Power 2
Volt Sensor VDD1V5 1494 mV
Volt Sensor VDD1V7 1704 mV
Volt Sensor VDD1V3 1345 mV
Volt Sensor VDD1V0 1002 mV
…
…
```

```
Bus Revision 99
FPGA Revision 10
```

```
user@switch> show chassis environment cb interconnect-device
IC-123 0
CB 0 status:
  State                       Online Master
  Left Intake Temperature     33 degrees C / 91 degrees F
  Right Intake Temperature    33 degrees C / 91 degrees F
  Left Exhaust Temperature    36 degrees C / 96 degrees F
  Right Exhaust Temperature   35 degrees C / 95 degrees F
  Power                       OK
    VDD 3V3                    3294 mV
    VDD 2V5                    2436 mV
    VDD 1V8                    1746 mV
    VDD 1V5                    1460 mV
    VDD 1V25                   1210 mV
    VDD 1V2                    1164 mV
    CPU CORE 1V2               1120 mV
    VDD 1V0                     968 mV
    VDD 5V0                    5088 mV
    CPU MP BIAS 4V3            4050 mV
    BIAS 3V3                   3180 mV
    VTT 0V9                     866 mV
```

show chassis environment cb 0 (PTX10003-80C and PTX10003-160C Routers)

```
user@router> show chassis environment cb 0

CB 0 status:
  State                       Online Master
  Power 1
    PCIe SW0 power, CORE 0.9 V     894 mV
  Power 2
    CLOCK MAIN, 2.5 V           2495 mV
    PCIe SW0 power, SERDES 0.9 V     897 mV
  Power 3
    PCIe SW1 power, CORE 0.9 V     897 mV
  Power 4
    PCIe SW1 power, SERDES 0.9 V     894 mV
```

```
Power 5
  Ethernet SW0 power, 1.0 V     998 mV
Power 6
  Ethernet SW1 power, CORE 1.0 V     998 mV
Power 7
  12 V                        12034 mV
Bus Revision                0
FPGA Revision               0
```

Starting in Junos OS Evolved Release 19.1R1, on PTX10003-80C and PTX10003-160C devices, the `show chassis environment cb` command does not show the Bus and FPGA revision information. If you want to view the FPGA revision or version information for the CB, use the `show system firmware` command.

Release Information

Command introduced before Junos Release 7.4.

option introduced for the TX Matrix Plus router in Junos Release 9.6.

Command introduced in Junos OS Release 18.2R1 for MX10008 Universal Routing Platforms, and EX9253 switches.

RELATED DOCUMENTATION

request chassis cb | 402

Understanding Switching Control Board Redundancy

show chassis environment ccg

IN THIS SECTION

Syntax | 722

Description | 722

- Options | 722
- Required Privilege Level | 722
- Output Fields | 723
- Sample Output | 723
- Release Information | 724

Syntax

```
show chassis environment ccg
<slot>
```

Description

(PTX5000 Packet Transport Routers only) Display environmental information about the Centralized Clock Generators (CCGs).

Options

none Display environmental information about all CCGs on the router.

slot (Optional) Display environmental information about the specified CCG. Replace *slot* with 0 or 1.

Required Privilege Level

view

Output Fields

Table 41 on page 723 lists the output fields for the `show chassis environment ccg` command. Output fields are listed in the approximate order in which they appear.

Table 41: show chassis environment cb Output Fields

Field Name	Field Description
`State`	Status of the CCG: `Online - Master clock` , `Online - Standby`, or `Offline`. If two CCGs are installed and online, one is functioning as the primary clock, and the other is the standby clock.
`Temperature`	Temperature of the air flowing past the CCG.
`Power`	Power required and measured on the CCG. The left column displays the required power, in volts. The right column displays the measured power, in millivolts.
`BUS Revision`	Revision level of the generic bus device.

Sample Output

show chassis environment ccg (PTX5000)

```
user@host> show chassis environment ccg
CCG 0 status:
  State                     Online -  Master clock
  Temperature               31 degrees C / 87 degrees F
  Power
    1.2 V bias               1200 mV
    1.8 V                    1799 mV
    3.3 V                    3300 mV
    3.3 V bias               3300 mV
  Bus Revision              103
CCG 1 status:
  State                     Offline
  Power                     Disabled
```

```
Temperature                31 degrees C / 87 degrees F
Power
  1.2 V bias                1198 mV
  1.8 V                      161 mV
  3.3 V                      451 mV
  3.3 V bias                3311 mV
Bus Revision               103
```

Release Information

Command introduced in Junos OS Release 12.1.

RELATED DOCUMENTATION

Clock Sources for PTX Series Packet Transport Routers

show chassis environment | 543

show chassis environment fan

IN THIS SECTION

- Syntax | 725
- Description | 725
- Options | 725
- Required Privilege Level | 725
- Output Fields | 726
- Sample Output | 726
- Release Information | 729

Syntax

```
show chassis environment fan
<all-members>
<fantray-slot-number>
<local>
<member member-id>
```

Description

(MX2020 and MX2010 routers only) Display environmental information about the fans and fan trays.

Options

none	Display environmental information about all fans and fan trays.
all-members	(Optional) Display environmental information about the fan and fan trays in all members of the Virtual Chassis configuration.
fantray-slot-number	(Optional) Display environmental information about the specified fan tray. Replace *fantray-slot-number* with a value from `0` through `3`.
local	(Optional) Display environmental information about the fans and fan trays in the local member of the Virtual Chassis.
member *member-id*	(Optional) Display environmental information about the fans and fan trays in the specified member of the Virtual Chassis. Replace *member-id* with the value 0 or 1.

Required Privilege Level

view

Output Fields

Table 42 on page 726 lists the output fields for the `show chassis environment fan` command. Output fields are listed in the approximate order in which they appear.

Table 42: show chassis environment fan Output Fields

Field Name	Field Description
`Fan Tray Status`	Status of the fan tray.
`Temperature`	Temperature in Celsius (C) and Fahrenheit (F) maintained by the fans.
`Power`	Power required and measured on the fan tray. The left column displays the required power, in volts. The right column displays the measured power, in millivolts.
`Max Power Consumption`	Maximum power consumed by the fan tray.

Sample Output

show chassis environment fan (MX2020 routers)

```
user@host> show chassis environment fan
Fan Tray 0 status:
  Temperature                23 degrees C / 73 degrees F
  Power
    1.2 V                     1189 mV
    3.3 V                     3293 mV
    5.0 V                     5230 mV
    5.0 V bias                5278 mV
    52.0 V A                 49944 mV
    52.0 V B                   435 mV
  Max Power Consumption       1150 Watts
Fan Tray 1 status:
  Temperature                22 degrees C / 71 degrees F
```

```
  Power
    1.2 V                       1192 mV
    3.3 V                       3300 mV
    5.0 V                       5230 mV
    5.0 V bias                  5230 mV
    52.0 V A                   50205 mV
    52.0 V B                     435 mV
  Max Power Consumption         1150 Watts
Fan Tray 2 status:
  Temperature                  31 degrees C / 87 degrees F
  Power
    1.2 V                       1192 mV
    3.3 V                       3287 mV
    5.0 V                       5211 mV
    5.0 V bias                  5220 mV
    52.0 V A                   50031 mV
    52.0 V B                     435 mV
  Max Power Consumption         1150 Watts
Fan Tray 3 status:
  Temperature                  31 degrees C / 87 degrees F
  Power
    1.2 V                       1208 mV
    3.3 V                       3306 mV
    5.0 V                       5240 mV
    5.0 V bias                  5259 mV
    52.0 V A                   50553 mV
    52.0 V B                     435 mV
  Max Power Consumption         1150 Watts
```

show chassis environment fan 3 (MX2020 routers)

```
user@host> show chassis environment fan 3
Fan Tray 3 status:
  Temperature                  31 degrees C / 87 degrees F
  Power
    1.2 V                       1208 mV
    3.3 V                       3306 mV
    5.0 V                       5240 mV
    5.0 V bias                  5259 mV
    52.0 V A                   50553 mV
```

```
    52.0 V B                   435 mV
  Max Power Consumption       1150 Watts
```

show chassis environment fan (PTX10008 routers)

```
user@host> show chassis environment fan

Fan Tray 0  status:
         HS 0                        12338 mV    4035 mA   40623 mW
         HS 1                        12325 mV    3044 mA   36483 mW
         HS 2                        12272 mV    3374 mA   38388 mW
         HS 3                        12364 mV    2218 mA   37918 mW
  Temperature                              28 degrees C / 82 degrees
F

Fan Tray 1  status:
         HS 0                        12232 mV    3209 mA   50455 mW
         HS 1                        12311 mV    3760 mA   50196 mW
         HS 2                        12311 mV    5356 mA   47397 mW
         HS 3                        12259 mV    3264 mA   15807 mW
  Temperature                              28 degrees C / 82 degrees F
```

show chassis environment fan (PTX10016 routers)

```
user@host> show chassis environment fan

Aug 02 21:13:00
Fan Tray 0  status:
     HS 0                       12364 mV    4200 mA   48926 mW
     HS 1                       12285 mV    3264 mA   69885 mW
     HS 2                       12285 mV    4365 mA   57559 mW
     HS 3                       12259 mV    2714 mA   67768 mW
  Temperature                             25 degrees C / 77 degrees F
Fan Tray 1  status:
     HS 0                       12325 mV    1888 mA   76354 mW
     HS 1                       12325 mV    5026 mA   70779 mW
     HS 2                       12285 mV    4200 mA   50032 mW
     HS 3                       12311 mV    5246 mA   55630 mW
  Temperature                             24 degrees C / 75 degrees F
```

show chassis environment fan (MX10008 routers)

```
user@host> show chassis environment fan

Fan Tray 0  status:
         HS 0                        12298 mV    4200 mA   59676 mW
         HS 1                        12338 mV    4585 mA   48856 mW
         HS 2                        12325 mV    4530 mA   63863 mW
         HS 3                        12311 mV    2879 mA   37800 mW
  Temperature                              26 degrees C / 78 degrees F
Fan Tray 1  status:
         HS 0                        12298 mV    4145 mA   57559 mW
         HS 1                        12298 mV    2934 mA   60288 mW
         HS 2                        12325 mV    5026 mA   46715 mW
         HS 3                        12272 mV    1833 mA   47209 mW
  Temperature                              25 degrees C / 77 degrees F
```

Release Information

Command introduced in Junos OS Release 12.3 for MX2010 and MX2020 Universal Routing Platforms.

`all-members`, `local`, and `member` *`member-id`* options introduced in Junos OS Release 15.1 for MX2020 and MX2010 routers.

RELATED DOCUMENTATION

show chassis environment | **543**

show chassis fan | **1291**

show chassis environment fpc

IN THIS SECTION

- Syntax | 730
- Syntax (TX Matrix and TX Matrix Plus Routers) | 730
- Syntax (MX Series Routers) | 731
- Syntax (MX2010, MX10003, MX204, MX2008, and MX10008, OCX Series, PTX3000, PTX10008 devices and Junos OS Evolved platforms) | 731
- Syntax (MX2020 Universal Routing Platforms) | 731
- Syntax (QFX Series) | 731
- Description | 732
- Options | 732
- Required Privilege Level | 734
- Output Fields | 734
- Sample Output | 736
- Release Information | 811

Syntax

```
show chassis environment fpc
<slot>
```

Syntax (TX Matrix and TX Matrix Plus Routers)

```
show chassis environment fpc
<lcc number>
<slot>
```

Syntax (MX Series Routers)

```
show chassis environment fpc
<slot>
<all-members>
<local>
<member member-id>
```

Syntax (MX2010, MX10003, MX204, MX2008, and MX10008, OCX Series, PTX3000, PTX10008 devices and Junos OS Evolved platforms)

```
show chassis environment fpc
<slot>
```

Syntax (MX2020 Universal Routing Platforms)

```
show chassis environment fpc
<slot>
<satellite [fpc-slot slot-id |device-alias  alias-name]
```

Syntax (QFX Series)

```
show chassis environment fpc
<fpc-slot>
interconnect-device name
```

Description

(M40e, M120, M160, M320, MX Series, T Series routers, EX Series, QFX Series, and PTX Series routers only) Display environmental information about Flexible PIC Concentrators (FPCs).

Options

none — Display environmental information about all FPCs. On a TX Matrix router, display environmental information about all FPCs on the TX Matrix router and its attached T640 routers. On a TX Matrix Plus router, display environmental information about all FPCs on the TX Matrix Plus router and its attached routers.

all-members — (MX Series routers only) (Optional) Display environmental information for the FPCs in all the members of the Virtual Chassis configuration.

interconnect-device *name* — (QFabric systems only) (Optional) Display chassis environmental information for the Interconnect device.

lcc *number* — (TX Matrix router and TX Matrix Plus router only) (Optional) Line-card chassis number.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local — (MX Series routers only) (Optional) Display environmental information for the FPCs in the local Virtual Chassis member.

member *member-id* — (MX Series routers only) (Optional) Display environmental information for the FPCs in the specified member of the Virtual Chassis configuration. Replace *member-id* with a value of 0 or 1.

satellite [fpc-slot *slot-id* | device-alias *alias-name*]

(Junos Fusion only)(Optional) Display environmental information for the FPCs in the specified satellite device in a Junos Fusion, or for all satellite devices in the Junos Fusion if no satellite devices are specified.

slot* or *fpc-slot

(Optional) Display environmental information about an individual FPC:

- (TX Matrix and TX Matrix Plus routers only) On a TX Matrix router, if you specify the number of the T640 router by using only the `lcc` *`number`* option (the recommended method), replace *`slot`* with a value from `0` through `7`. Similarly, on a TX Matrix Plus router, if you specify the number of the router by using only the `lcc` *`number`* option (the recommended method), replace *`slot`* with a value from `0` through `7`. Otherwise, replace *`slot`* with a value from `0` through `31`. For example, the following commands have the same result:

```
user@host> show chassis environment fpc 1 lcc 1
user@host> show chassis environment fpc 9
```

- M120 router—Replace *`slot`* with a value from `0` through `5`.
- MX240 router—Replace *`slot`* with a value from `0` through `2`.
- MX480 router—Replace *`slot`* with a value from `0` through `5`.
- MX960 router—Replace *`slot`* with a value from `0` through `11`.
- MX2010 router—Replace *`slot`* with a value from `0` through `9`.
- MX2020 router—Replace *`slot`* with a value from `0` through `19`.
- MX2008 router—Replace *`slot`* with a value from `0` through `9`.
- Other routers—Replace *`slot`* with a value from `0` through `7`.
- EX Series switches:
  - EX3200 switches and EX4200 standalone switches—Replace *`slot`* with 0.
  - EX4200 switches in a Virtual Chassis configuration—Replace *`slot`* with a value from 0 through 9 (switch's member ID).
  - EX6210 switches–Replace *`slot`* with a value from 0 through 3 (line card only), 4 or 5 (line card or Switch Fabric and Rotuing Engine (SRE) module), or 6 through 9 (line card only).

    - EX8208 switches—Replace *slot* with a value from 0 through 7 (line card).
    - EX8216 switches—Replace *slot* with a value from 0 through 15 (line card).
- QFX3500 switches —Replace *fpc-slot* with 0 through 15.
- PTX5000 Packet Transport Router—Replace *fpc-slot* with 0 through 7.
- PTX3000 Packet Transport Router—Replace *fpc-slot* with 0 through 15.

Required Privilege Level

view

Output Fields

Table 43 on page 735 lists the output fields for the `show chassis environment fpc` command. Output fields are listed in the approximate order in which they appear.

Table 43: show chassis environment fpc Output Fields

Field Name	Field Description
State	Status of the FPC: • Unknown—FPC is not detected by the router. • Empty—No FPC is present. • Present—FPC is detected by the chassis daemon but is either not supported by the current version of the Junos OS, or the FPC is coming up but not yet online. • Ready—FPC is in intermediate or transition state. • Announce online—Intermediate state during which the FPC is coming up but not yet online, and the chassis manager acknowledges the chassisd FPC online initiative. • Online—FPC is online and running. • Offline—FPC is powered down. • Diagnostics—FPC is set to operate in diagnostics mode.
Temperature	(M40e and M160 routers and QFX Series only) Temperature of the air flowing past the FPC.
PMB Temperature	(PTX Series only) Temperature of the air flowing past the PMB (bottom of the FPC). The PTX5000 Packet Transport Router with FPC2-PTX-P1A include multiple temperatures for PMB (TEMP0 and TEMP1).
PMB CPU Temperature	(PTX5000 Packet Transport Router with FPC2-PTX-P1A only) Temperature of the air flowing past the PMB CPU.
Temperature Intake	(M320 routers, MX2010 routers, MX2020 routers, MX2008 routers, and PTX Series only) Temperature of the air flowing into the chassis.
Temperature Top	(T Series routers only) Temperature of the air flowing past the top of the FPC.

Table 43: show chassis environment fpc Output Fields *(Continued)*

Field Name	Field Description
`Temperature Exhaust`	(M120 and M320 routers, MX2010 routers, MX2020 routers, MX2008 routers, and PTX Series only) Temperature of the air flowing out of the chassis. The PTX Series Packet Transport Routers, and the MX2010, MX2020, and MX2008 routers include exhaust temperatures for multiple zones (`Exhaust A` and `Exhaust B`).
`Temperature Bottom`	(T Series routers only) Temperature of the air flowing past the bottom of the FPC.
`TL` *n* `Temperature`	(PTX Series only) Temperature of the air flowing past the specified TL area of the packet forwarding engine (PFE) on the FPC.
`TQ` *n* `Temperature`	(PTX Series only) Temperature of the air flowing past the specified TQ area of the packet forwarding engine (PFE) on the FPC.
`Temperature MMB0`	(T640 router only) Temperature of the air flowing past the type 3 FPC.
`Temperature MMB1`	(M320 and T Series routers only) Temperature of the air flowing past the type 1, type 2, and type 3 FPC.
`Power`	Information about the voltage supplied to the FPC. The left column displays the required power, in volts. The right column displays the measured power, in millivolts.
`CMB Revision` or `BUS revision`	Revision level of the chassis management bus device (M Series router) or bus (T Series routers).

Sample Output

show chassis environment fpc (M120 Router)

```
user@host> show chassis environment fpc
FPC 2 status:
  State                       Online
```

```
    Temperature Exhaust A      32 degrees C / 89 degrees F
    Temperature Exhaust B      31 degrees C / 87 degrees F
    Power A-Board
      1.2 V                     1202 mV
      1.5 V                     1508 mV
      1.8 V                     1798 mV
      2.5 V                     2507 mV
      3.3 V                     3351 mV
      5.0 V                     4995 mV
      3.3 V bias                3296 mV
      1.2 V Rocket IO           1205 mV
      1.5 V Rocket IO           1501 mV
    I2C Slave Revision         12
  FPC 3 status:
    State                      Online
    Temperature Exhaust A      31 degrees C / 87 degrees F
    Temperature Exhaust B      33 degrees C / 91 degrees F
    Power A-Board
      1.2 V                     1211 mV
      1.5 V                     1501 mV
      1.8 V                     1798 mV
      2.5 V                     2471 mV
      3.3 V                     3293 mV
      5.0 V                     4930 mV
      3.3 V bias                3296 mV
      1.2 V Rocket IO           1205 mV
      1.5 V Rocket IO           1501 mV
    Power B-Board
      1.2 V                     1214 mV
      1.5 V                     1501 mV
      2.5 V                     2471 mV
      3.3 V                     3300 mV
      5.0 V                     4943 mV
      3.3 V bias                3296 mV
      1.2 V Rocket IO           1205 mV
      1.5 V Rocket IO           1501 mV
    I2C Slave Revision         12
  FPC 4 status:
    State                      Online
    Temperature Exhaust A      32 degrees C / 89 degrees F
    Temperature Exhaust B      30 degrees C / 86 degrees F
    Power A-Board
      1.2 V                     1195 mV
```

```
    1.5 V                       1504 mV
    1.8 V                       1801 mV
    2.5 V                       2504 mV
    3.3 V                       3293 mV
    5.0 V                       4917 mV
    3.3 V bias                  3296 mV
    1.2 V Rocket IO             1202 mV
    1.5 V Rocket IO             1492 mV
  I2C Slave Revision           12
```

show chassis environment fpc (M160 Router)

```
user@host> show chassis environment fpc
FPC 0 status:
  State                          Online
  Temperature                 42 degrees C / 107 degrees F
  Power:
    1.5 V                   1500 mV
    2.5 V                   2509 mV
    3.3 V                   3308 mV
    5.0 V                   4991 mV
    5.0 V bias              4952 mV
    8.0 V bias              8307 mV
  CMB Revision                12
FPC 1 status:
  State                          Online
  Temperature                 45 degrees C / 113 degrees F
  Power:
    1.5 V                   1498 mV
    2.5 V                   2501 mV
    3.3 V                   3319 mV
    5.0 V                   5020 mV
    5.0 V bias              5025 mV
    8.0 V bias              8307 mV
  CMB Revision                12
```

show chassis environment fpc (M320 Router)

```
user@host> show chassis environment fpc
FPC 0 status:
```

```
  State                            Online
  Temperature Intake           27 degrees C / 80 degrees F
  Temperature Exhaust          38 degrees C / 100 degrees F
  Temperature MMB1             31 degrees C / 87 degrees F
  Power:
    1.5 V                    1487 mV
    1.5 V *                  1494 mV
    1.8 V                    1821 mV
    2.5 V                    2533 mV
    3.3 V                    3323 mV
    5.0 V                    5028 mV
    3.3 V bias               3296 mV
    5.0 V bias               4984 mV
  CMB Revision                 16
FPC 1 status:
  State                            Online
  Temperature Intake           27 degrees C / 80 degrees F
  Temperature Exhaust          37 degrees C / 98 degrees F
  Temperature MMB1             32 degrees C / 89 degrees F
  Power:
    1.5 V                    1504 mV
    1.5 V *                  1499 mV
    1.8 V                    1820 mV
    2.5 V                    2529 mV
    3.3 V                    3328 mV
    5.0 V                    5013 mV
    3.3 V bias               3294 mV
    5.0 V bias               4984 mV
  CMB Revision                 16
FPC 2 status:
  State                            Online
  Temperature Intake           28 degrees C / 82 degrees F
  Temperature Exhaust          38 degrees C / 100 degrees F
  Temperature MMB1             32 degrees C / 89 degrees F
  Power:
    1.5 V                    1498 mV
    1.5 V *                  1487 mV
    1.8 V                    1816 mV
    2.5 V                    2531 mV
    3.3 V                    3324 mV
    5.0 V                    5025 mV
    3.3 V bias               3277 mV
    5.0 V bias               5013 mV
```

```
  CMB Revision                 17
FPC 3 status:
...
```

show chassis environment fpc (MX2020 Router)

```
user@host> show chassis environment fpc
FPC 0 status:
  State                       Online
  Temperature Intake          41 degrees C / 105 degrees F
  Temperature Exhaust A       48 degrees C / 118 degrees F
  Temperature Exhaust B       60 degrees C / 140 degrees F
  Temperature LU 0 TSen       56 degrees C / 132 degrees F
  Temperature LU 0 Chip       59 degrees C / 138 degrees F
  Temperature LU 1 TSen       56 degrees C / 132 degrees F
  Temperature LU 1 Chip       61 degrees C / 141 degrees F
  Temperature LU 2 TSen       56 degrees C / 132 degrees F
  Temperature LU 2 Chip       52 degrees C / 125 degrees F
  Temperature LU 3 TSen       56 degrees C / 132 degrees F
  Temperature LU 3 Chip       52 degrees C / 125 degrees F
  Temperature MQ 0 TSen       49 degrees C / 120 degrees F
  Temperature MQ 0 Chip       49 degrees C / 120 degrees F
  Temperature MQ 1 TSen       49 degrees C / 120 degrees F
  Temperature MQ 1 Chip       52 degrees C / 125 degrees F
  Temperature MQ 2 TSen       49 degrees C / 120 degrees F
  Temperature MQ 2 Chip       45 degrees C / 113 degrees F
  Temperature MQ 3 TSen       49 degrees C / 120 degrees F
  Temperature MQ 3 Chip       46 degrees C / 114 degrees F
  Power
    AS-BIAS3V3-zl2105          3299 mV
    AS-VDD1V8-zl2006           1807 mV
    AS-VDD2V5-zl2006           2512 mV
    AS-AVDD1V0-zl2004           997 mV
    AS-PCIE_1V0-zl2004          996 mV
    AS-VDD3V3-zl2004           3294 mV
    AS-VDD_1V5A-zl2004         1501 mV
    AS-VDD_1V5B-zl2004         1498 mV
    AS-LU0_1V0-zl2004           998 mV
    AS-LU1_1V0-zl2004          1002 mV
    AS-MQ0_1V0-zl2004           999 mV
    AS-MQ1_1V0-zl2004           994 mV
```

```
    AS-LU2_1V0-zl2004         1000 mV
    AS-LU3_1V0-zl2004          998 mV
    AS-MQ2_1V0-zl2004         1002 mV
    AS-MQ3_1V0-zl2004          999 mV
    AS-PMB_1V1-zl2006         1096 mV
  I2C Slave Revision         68
FPC 1 status:
  State                      Online
  Temperature Intake         39 degrees C / 102 degrees F
  Temperature Exhaust A      48 degrees C / 118 degrees F
  Temperature Exhaust B      55 degrees C / 131 degrees F
  Temperature LU 0 TSen      52 degrees C / 125 degrees F
  Temperature LU 0 Chip      54 degrees C / 129 degrees F
  Temperature LU 1 TSen      52 degrees C / 125 degrees F
  Temperature LU 1 Chip      56 degrees C / 132 degrees F
  Temperature LU 2 TSen      52 degrees C / 125 degrees F
  Temperature LU 2 Chip      49 degrees C / 120 degrees F
  Temperature LU 3 TSen      52 degrees C / 125 degrees F
  Temperature LU 3 Chip      50 degrees C / 122 degrees F
  Temperature MQ 0 TSen      48 degrees C / 118 degrees F
  Temperature MQ 0 Chip      48 degrees C / 118 degrees F
  Temperature MQ 1 TSen      48 degrees C / 118 degrees F
  Temperature MQ 1 Chip      51 degrees C / 123 degrees F
  Temperature MQ 2 TSen      48 degrees C / 118 degrees F
  Temperature MQ 2 Chip      45 degrees C / 113 degrees F
  Temperature MQ 3 TSen      48 degrees C / 118 degrees F
  Temperature MQ 3 Chip      45 degrees C / 113 degrees F
  Power
    AS-BIAS3V3-zl2105         3291 mV
    AS-VDD1V8-zl2006          1786 mV
    AS-VDD2V5-zl2006          2496 mV
    AS-AVDD1V0-zl2004         1000 mV
    AS-PCIE_1V0-zl2004        1000 mV
    AS-VDD3V3-zl2004          3294 mV
    AS-VDD_1V5A-zl2004        1500 mV
    AS-VDD_1V5B-zl2004        1498 mV
    AS-LU0_1V0-zl2004         1003 mV
    AS-LU1_1V0-zl2004         1000 mV
    AS-MQ0_1V0-zl2004         1000 mV
    AS-MQ1_1V0-zl2004          995 mV
    AS-LU2_1V0-zl2004         1002 mV
    AS-LU3_1V0-zl2004          997 mV
    AS-MQ2_1V0-zl2004         1000 mV
```

```
    AS-MQ3_1V0-zl2004          998 mV
    AS-PMB_1V1-zl2006         1096 mV
  I2C Slave Revision          68
FPC 2 status:
  State                       Online
  Temperature Intake          39 degrees C / 102 degrees F
  Temperature Exhaust A       48 degrees C / 118 degrees F
  Temperature Exhaust B       58 degrees C / 136 degrees F
  Temperature LU 0 TSen       55 degrees C / 131 degrees F
  Temperature LU 0 Chip       57 degrees C / 134 degrees F
  Temperature LU 1 TSen       55 degrees C / 131 degrees F
  Temperature LU 1 Chip       63 degrees C / 145 degrees F
  Temperature LU 2 TSen       55 degrees C / 131 degrees F
  Temperature LU 2 Chip       51 degrees C / 123 degrees F
  Temperature LU 3 TSen       55 degrees C / 131 degrees F
  Temperature LU 3 Chip       52 degrees C / 125 degrees F
  Temperature MQ 0 TSen       48 degrees C / 118 degrees F
  Temperature MQ 0 Chip       50 degrees C / 122 degrees F
  Temperature MQ 1 TSen       48 degrees C / 118 degrees F
  Temperature MQ 1 Chip       52 degrees C / 125 degrees F
  Temperature MQ 2 TSen       48 degrees C / 118 degrees F
  Temperature MQ 2 Chip       47 degrees C / 116 degrees F
  Temperature MQ 3 TSen       48 degrees C / 118 degrees F
  Temperature MQ 3 Chip       47 degrees C / 116 degrees F
  Power
    AS-BIAS3V3-zl2105         3299 mV
    AS-VDD1V8-zl2006          1805 mV
    AS-VDD2V5-zl2006          2510 mV
    AS-AVDD1V0-zl2004          999 mV
    AS-PCIE_1V0-zl2004         998 mV
    AS-VDD3V3-zl2004          3296 mV
    AS-VDD_1V5A-zl2004        1492 mV
    AS-VDD_1V5B-zl2004        1497 mV
    AS-LU0_1V0-zl2004          997 mV
    AS-LU1_1V0-zl2004         1000 mV
    AS-MQ0_1V0-zl2004          998 mV
    AS-MQ1_1V0-zl2004         1001 mV
    AS-LU2_1V0-zl2004          996 mV
    AS-LU3_1V0-zl2004          995 mV
    AS-MQ2_1V0-zl2004          998 mV
    AS-MQ3_1V0-zl2004          997 mV
    AS-PMB_1V1-zl2006         1100 mV
  I2C Slave Revision          68
```

```
FPC 3 status:
  State                       Online
  Temperature Intake          41 degrees C / 105 degrees F
  Temperature Exhaust A       48 degrees C / 118 degrees F
  Temperature Exhaust B       58 degrees C / 136 degrees F
  Temperature LU 0 TSen       56 degrees C / 132 degrees F
  Temperature LU 0 Chip       59 degrees C / 138 degrees F
  Temperature LU 1 TSen       56 degrees C / 132 degrees F
  Temperature LU 1 Chip       61 degrees C / 141 degrees F
  Temperature LU 2 TSen       56 degrees C / 132 degrees F
  Temperature LU 2 Chip       51 degrees C / 123 degrees F
  Temperature LU 3 TSen       56 degrees C / 132 degrees F
  Temperature LU 3 Chip       53 degrees C / 127 degrees F
  Temperature MQ 0 TSen       50 degrees C / 122 degrees F
  Temperature MQ 0 Chip       51 degrees C / 123 degrees F
  Temperature MQ 1 TSen       50 degrees C / 122 degrees F
  Temperature MQ 1 Chip       55 degrees C / 131 degrees F
  Temperature MQ 2 TSen       50 degrees C / 122 degrees F
  Temperature MQ 2 Chip       47 degrees C / 116 degrees F
  Temperature MQ 3 TSen       50 degrees C / 122 degrees F
  Temperature MQ 3 Chip       50 degrees C / 122 degrees F
  Power
    AS-BIAS3V3-zl2105          3305 mV
    AS-VDD1V8-zl2006           1810 mV
    AS-VDD2V5-zl2006           2508 mV
    AS-AVDD1V0-zl2004           999 mV
    AS-PCIE_1V0-zl2004         1001 mV
    AS-VDD3V3-zl2004           3294 mV
    AS-VDD_1V5A-zl2004         1500 mV
    AS-VDD_1V5B-zl2004         1498 mV
    AS-LU0_1V0-zl2004           998 mV
    AS-LU1_1V0-zl2004           998 mV
    AS-MQ0_1V0-zl2004           999 mV
    AS-MQ1_1V0-zl2004           998 mV
    AS-LU2_1V0-zl2004          1000 mV
    AS-LU3_1V0-zl2004          1001 mV
    AS-MQ2_1V0-zl2004           996 mV
    AS-MQ3_1V0-zl2004           998 mV
    AS-PMB_1V1-zl2006          1098 mV
  I2C Slave Revision          68
FPC 4 status:
...
```

show chassis environment fpc (MX2010 Router)

```
user@host> show chassis environment fpc
FPC 0 status:
  State                       Online
  Temperature Intake          36 degrees C / 96 degrees F
  Temperature Exhaust A       42 degrees C / 107 degrees F
  Temperature Exhaust B       51 degrees C / 123 degrees F
  Temperature LU 0 TSen       49 degrees C / 120 degrees F
  Temperature LU 0 Chip       50 degrees C / 122 degrees F
  Temperature LU 1 TSen       49 degrees C / 120 degrees F
  Temperature LU 1 Chip       54 degrees C / 129 degrees F
  Temperature LU 2 TSen       49 degrees C / 120 degrees F
  Temperature LU 2 Chip       45 degrees C / 113 degrees F
  Temperature LU 3 TSen       49 degrees C / 120 degrees F
  Temperature LU 3 Chip       46 degrees C / 114 degrees F
  Temperature MQ 0 TSen       40 degrees C / 104 degrees F
  Temperature MQ 0 Chip       41 degrees C / 105 degrees F
  Temperature MQ 1 TSen       40 degrees C / 104 degrees F
  Temperature MQ 1 Chip       44 degrees C / 111 degrees F
  Temperature MQ 2 TSen       40 degrees C / 104 degrees F
  Temperature MQ 2 Chip       38 degrees C / 100 degrees F
  Temperature MQ 3 TSen       40 degrees C / 104 degrees F
  Temperature MQ 3 Chip       41 degrees C / 105 degrees F
  Power
    AS-BIAS3V3-zl2105          3300 mV
    AS-VDD1V8-zl2006           1805 mV
    AS-VDD2V5-zl2006           2505 mV
    AS-AVDD1V0-zl2004           998 mV
    AS-PCIE_1V0-zl2004          999 mV
    AS-VDD3V3-zl2004           3303 mV
    AS-VDD_1V5A-zl2004         1497 mV
    AS-VDD_1V5B-zl2004         1497 mV
    AS-LU0_1V0-zl2004           998 mV
    AS-LU1_1V0-zl2004          1003 mV
    AS-MQ0_1V0-zl2004           998 mV
    AS-MQ1_1V0-zl2004           998 mV
    AS-LU2_1V0-zl2004           997 mV
    AS-LU3_1V0-zl2004          1001 mV
    AS-MQ2_1V0-zl2004           996 mV
    AS-MQ3_1V0-zl2004           994 mV
    AS-PMB_1V1-zl2006          1097 mV
```

```
  I2C Slave Revision         68
FPC 1 status:
  State                      Online
  Temperature Intake         34 degrees C / 93 degrees F
  Temperature Exhaust A      46 degrees C / 114 degrees F
  Temperature Exhaust B      54 degrees C / 129 degrees F
  Temperature LU 0 TSen      45 degrees C / 113 degrees F
  Temperature LU 0 Chip      55 degrees C / 131 degrees F
  Temperature LU 1 TSen      45 degrees C / 113 degrees F
  Temperature LU 1 Chip      44 degrees C / 111 degrees F
  Temperature LU 2 TSen      45 degrees C / 113 degrees F
  Temperature LU 2 Chip      50 degrees C / 122 degrees F
  Temperature LU 3 TSen      45 degrees C / 113 degrees F
  Temperature LU 3 Chip      58 degrees C / 136 degrees F
  Temperature XM 0 TSen      45 degrees C / 113 degrees F
  Temperature XM 0 Chip      51 degrees C / 123 degrees F
  Temperature XF 0 TSen      45 degrees C / 113 degrees F
  Temperature XF 0 Chip      63 degrees C / 145 degrees F
  Temperature PLX Switch TSen45 degrees C / 113 degrees F
  Temperature PLX Switch Chip47 degrees C / 116 degrees F
  Power
    MPC-BIAS3V3-zl2105        3300 mV
    MPC-VDD3V3-zl6100         3294 mV
    MPC-VDD2V5-zl6100         2505 mV
    MPC-VDD1V8-zl2004         1796 mV
    MPC-AVDD1V0-zl2004         991 mV
    MPC-VDD1V2-zl6100         1196 mV
    MPC-VDD1V5A-zl2004        1491 mV
    MPC-VDD1V5B-zl2004        1492 mV
    MPC-XF_0V9-zl2004          996 mV
    MPC-PCIE_1V0-zl6100       1003 mV
    MPC-LU0_1V0-zl2004         996 mV
    MPC-LU1_1V0-zl2004         996 mV
    MPC-LU2_1V0-zl2004         998 mV
    MPC-LU3_1V0-zl2004         994 mV
    MPC-12VA-BMR453          12031 mV
    MPC-12VB-BMR453          12003 mV
    MPC-PMB_1V1-zl2006        1104 mV
    MPC-PMB_1V2-zl2106        1194 mV
    MPC-XM_0V9-vt273m          911 mV
  I2C Slave Revision         110
FPC 8 status:
  State                      Online
```

```
  Temperature Intake         32 degrees C / 89 degrees F
  Temperature Exhaust A      44 degrees C / 111 degrees F
  Temperature Exhaust B      37 degrees C / 98 degrees F
  Temperature LU 0 TCAM TSen 41 degrees C / 105 degrees F
  Temperature LU 0 TCAM Chip 49 degrees C / 120 degrees F
  Temperature LU 0 TSen      41 degrees C / 105 degrees F
  Temperature LU 0 Chip      52 degrees C / 125 degrees F
  Temperature MQ 0 TSen      41 degrees C / 105 degrees F
  Temperature MQ 0 Chip      47 degrees C / 116 degrees F
  Temperature LU 1 TCAM TSen 39 degrees C / 102 degrees F
  Temperature LU 1 TCAM Chip 42 degrees C / 107 degrees F
  Temperature LU 1 TSen      39 degrees C / 102 degrees F
  Temperature LU 1 Chip      46 degrees C / 114 degrees F
  Temperature MQ 1 TSen      39 degrees C / 102 degrees F
  Temperature MQ 1 Chip      45 degrees C / 113 degrees F
  Power
    MPC-BIAS3V3-zl2105        3296 mV
    MPC-VDD3V3-zl2006         3298 mV
    MPC-VDD2V5-zl2006         2505 mV
    MPC-TCAM_1V0-zl2004        997 mV
    MPC-AVDD1V0-zl2006        1007 mV
    MPC-VDD1V8-zl2006         1803 mV
    MPC-PCIE_1V0-zl2006       1004 mV
    MPC-LU0_1V0-zl2004        1000 mV
    MPC-MQ0_1V0-zl2004         999 mV
    MPC-VDD_1V5-zl2004        1498 mV
    MPC-PMB_1V1-zl2006        1102 mV
    MPC-9VA-BMR453            9009 mV
    MPC-9VB-BMR453            8960 mV
    MPC-PMB_1V2-zl2105        1202 mV
    MPC-LU1_1V0-zl2004        1005 mV
    MPC-MQ1_1V0-zl2004        1000 mV
  I2C Slave Revision         70
FPC 9 status:
  State                      Online
  Temperature Intake         34 degrees C / 93 degrees F
  Temperature Exhaust A      41 degrees C / 105 degrees F
  Temperature Exhaust B      54 degrees C / 129 degrees F
  Temperature LU 0 TSen      51 degrees C / 123 degrees F
  Temperature LU 0 Chip      52 degrees C / 125 degrees F
  Temperature LU 1 TSen      51 degrees C / 123 degrees F
  Temperature LU 1 Chip      55 degrees C / 131 degrees F
  Temperature LU 2 TSen      51 degrees C / 123 degrees F
```

```
  Temperature LU 2 Chip      47 degrees C / 116 degrees F
  Temperature LU 3 TSen      51 degrees C / 123 degrees F
  Temperature LU 3 Chip      47 degrees C / 116 degrees F
  Temperature MQ 0 TSen      40 degrees C / 104 degrees F
  Temperature MQ 0 Chip      42 degrees C / 107 degrees F
  Temperature MQ 1 TSen      40 degrees C / 104 degrees F
  Temperature MQ 1 Chip      44 degrees C / 111 degrees F
  Temperature MQ 2 TSen      40 degrees C / 104 degrees F
  Temperature MQ 2 Chip      38 degrees C / 100 degrees F
  Temperature MQ 3 TSen      40 degrees C / 104 degrees F
  Temperature MQ 3 Chip      40 degrees C / 104 degrees F
  Power
    AS-BIAS3V3-zl2105         3302 mV
    AS-VDD1V8-zl2006          1808 mV
    AS-VDD2V5-zl2006          2513 mV
    AS-AVDD1V0-zl2004          997 mV
    AS-PCIE_1V0-zl2004         999 mV
    AS-VDD3V3-zl2004          3294 mV
    AS-VDD_1V5A-zl2004        1503 mV
    AS-VDD_1V5B-zl2004        1502 mV
    AS-LU0_1V0-zl2004          996 mV
    AS-LU1_1V0-zl2004          999 mV
    AS-MQ0_1V0-zl2004          997 mV
    AS-MQ1_1V0-zl2004          999 mV
    AS-LU2_1V0-zl2004          997 mV
    AS-LU3_1V0-zl2004          998 mV
    AS-MQ2_1V0-zl2004         1000 mV
    AS-MQ3_1V0-zl2004         1000 mV
    AS-PMB_1V1-zl2006         1102 mV
  I2C Slave Revision         68
```

show chassis environment fpc (MX2008 Router)

```
user@host> show chassis environment fpc
FPC 0 status:
  State                      Online
  Temperature Intake         29 degrees C / 84 degrees F
  Temperature Exhaust A      43 degrees C / 109 degrees F
  Temperature Exhaust B      42 degrees C / 107 degrees F
  Temperature XL 0 TSen      38 degrees C / 100 degrees F
  Temperature XL 0 Chip      53 degrees C / 127 degrees F
```

```
    Temperature XL 0 XR2 0 TSen38 degrees C / 100 degrees F
    Temperature XL 0 XR2 0 Chip60 degrees C / 140 degrees F
    Temperature XL 0 XR2 1 TSen38 degrees C / 100 degrees F
    Temperature XL 0 XR2 1 Chip60 degrees C / 140 degrees F
    Temperature XL 1 TSen      30 degrees C / 86 degrees F
    Temperature XL 1 Chip      43 degrees C / 109 degrees F
    Temperature XL 1 XR2 0 TSen30 degrees C / 86 degrees F
    Temperature XL 1 XR2 0 Chip50 degrees C / 122 degrees F
    Temperature XL 1 XR2 1 TSen30 degrees C / 86 degrees F
    Temperature XL 1 XR2 1 Chip50 degrees C / 122 degrees F
    Temperature XM 0 TSen      42 degrees C / 107 degrees F
    Temperature XM 0 Chip      49 degrees C / 120 degrees F
    Temperature XM 1 TSen      42 degrees C / 107 degrees F
    Temperature XM 1 Chip      42 degrees C / 107 degrees F
    Temperature XM 2 TSen      42 degrees C / 107 degrees F
    Temperature XM 2 Chip      42 degrees C / 107 degrees F
    Temperature XM 3 TSen      42 degrees C / 107 degrees F
    Temperature XM 3 Chip      40 degrees C / 104 degrees F
    Temperature PCIe Switch TSen42 degrees C / 107 degrees F
    Temperature PCIe Switch Chip22 degrees C / 71 degrees F
    Power
      MPC-VDD_3V3-vt273m          3304 mV
      MPC-VDD_2V5-vt273m          2503 mV
      MPC-VDD_1V5-vt273m          1499 mV
      MPC-PCIE_0V9-vt273m          900 mV
      MPC-VDD_1V8-vt273m          1799 mV
      MPC-VDD_1V2-vt273m          1203 mV
      MPC-XM01_AVDD_1V0-vt273     1001 mV
      MPC-XM23_AVDD_1V0-vt273     1001 mV
      MPC-XM0_0V9-vt273m           900 mV
      MPC-XM1_0V9-vt273m           901 mV
      MPC-XM2_0V9-vt273m           903 mV
      MPC-XM3_0V9-vt273m           899 mV
      MPC-XL0_XR0_0V9-vt273m       899 mV
      MPC-XL0_XR1_0V9-vt273m       903 mV
      MPC-XL0_0V9-vt273m           899 mV
      MPC-XL0_AVDD_1V0-vt273m     1000 mV
      MPC-XL0_VDD_1V5-vt273m      1498 mV
      MPC-XL0_XR_1V2-vt273m       1200 mV
      MPC-XL1_XR0_0V9-vt273m       899 mV
      MPC-XL1_XR1_0V9-vt273m       899 mV
      MPC-XL1_0V9-vt273m           900 mV
      MPC-XL1_AVDD_1V0-vt273m     1000 mV
```

```
    MPC-XL1_VDD_1V5-vt273m      1501 mV
    MPC-XL1_XR_1V2-vt273m       1199 mV
    MPC-PMB-1V05-ltc2978        1049 mV
    MPC-PMB-1V5-ltc2978         1500 mV
    MPC-PMB-2V5-ltc2978         2500 mV
    MPC-PMB-3V3-ltc2978         3298 mV
  I2C Slave Revision         20
FPC 1 status:
  State                      Online
  Temperature Intake         29 degrees C / 84 degrees F
  Temperature Exhaust A      52 degrees C / 125 degrees F
  Temperature Exhaust B      44 degrees C / 111 degrees F
  Temperature EA0 TSen       55 degrees C / 131 degrees F
  Temperature EA0 Chip       48 degrees C / 118 degrees F
  Temperature EA0_XR0 TSen   55 degrees C / 131 degrees F
  Temperature EA0_XR0 Chip   57 degrees C / 134 degrees F
  Temperature EA0_XR1 TSen   55 degrees C / 131 degrees F
  Temperature EA0_XR1 Chip   54 degrees C / 129 degrees F
  Temperature EA1 TSen       55 degrees C / 131 degrees F
  Temperature EA1 Chip       50 degrees C / 122 degrees F
  Temperature EA1_XR0 TSen   55 degrees C / 131 degrees F
  Temperature EA1_XR0 Chip   59 degrees C / 138 degrees F
  Temperature EA1_XR1 TSen   55 degrees C / 131 degrees F
  Temperature EA1_XR1 Chip   59 degrees C / 138 degrees F
  Temperature PEX TSen       55 degrees C / 131 degrees F
  Temperature PEX Chip       39 degrees C / 102 degrees F
  Temperature EA2 TSen       43 degrees C / 109 degrees F
  Temperature EA2 Chip       39 degrees C / 102 degrees F
  Temperature EA2_XR0 TSen   43 degrees C / 109 degrees F
  Temperature EA2_XR0 Chip   45 degrees C / 113 degrees F
  Temperature EA2_XR1 TSen   43 degrees C / 109 degrees F
  Temperature EA2_XR1 Chip   43 degrees C / 109 degrees F
  Temperature EA3 TSen       43 degrees C / 109 degrees F
  Temperature EA3 Chip       41 degrees C / 105 degrees F
  Temperature EA3_XR0 TSen   43 degrees C / 109 degrees F
  Temperature EA3_XR0 Chip   50 degrees C / 122 degrees F
  Temperature EA3_XR1 TSen   43 degrees C / 109 degrees F
  Temperature EA3_XR1 Chip   46 degrees C / 114 degrees F
  Temperature EA0_HMC0 Logic die 61 degrees C / 141 degrees F
  Temperature EA0_HMC0 DRAM botm 58 degrees C / 136 degrees F
  Temperature EA0_HMC1 Logic die 62 degrees C / 143 degrees F
  Temperature EA0_HMC1 DRAM botm 59 degrees C / 138 degrees F
  Temperature EA0_HMC2 Logic die 59 degrees C / 138 degrees F
```

```
  Temperature EA0_HMC2 DRAM botm 56 degrees C / 132 degrees F
  Temperature EA1_HMC0 Logic die 67 degrees C / 152 degrees F
  Temperature EA1_HMC0 DRAM botm 64 degrees C / 147 degrees F
  Temperature EA1_HMC1 Logic die 65 degrees C / 149 degrees F
  Temperature EA1_HMC1 DRAM botm 62 degrees C / 143 degrees F
  Temperature EA1_HMC2 Logic die 63 degrees C / 145 degrees F
  Temperature EA1_HMC2 DRAM botm 60 degrees C / 140 degrees F
  Temperature EA2_HMC0 Logic die 51 degrees C / 123 degrees F
  Temperature EA2_HMC0 DRAM botm 48 degrees C / 118 degrees F
  Temperature EA2_HMC1 Logic die 55 degrees C / 131 degrees F
  Temperature EA2_HMC1 DRAM botm 52 degrees C / 125 degrees F
  Temperature EA2_HMC2 Logic die 52 degrees C / 125 degrees F
  Temperature EA2_HMC2 DRAM botm 49 degrees C / 120 degrees F
  Temperature EA3_HMC0 Logic die 51 degrees C / 123 degrees F
  Temperature EA3_HMC0 DRAM botm 48 degrees C / 118 degrees F
  Temperature EA3_HMC1 Logic die 52 degrees C / 125 degrees F
  Temperature EA3_HMC1 DRAM botm 49 degrees C / 120 degrees F
  Temperature EA3_HMC2 Logic die 52 degrees C / 125 degrees F
  Temperature EA3_HMC2 DRAM botm 49 degrees C / 120 degrees F
  Power
    MPC-EA0_0V9-vt1527mb         950 mV
    MPC-EA1_0V9-vt1527mb         950 mV
    MPC-EA2_0V9-vt1527mb         925 mV
    MPC-EA3_0V9-vt1527mb         924 mV
    MAX20751-1V0                1020 mV
    MAX20731-0V9                 891 mV
    MAX20751-EA0-AVDD1V0        1000 mV
    MAX20731-EA0-1V2            1189 mV
    MAX20731-EA0-HMC-1V2        1182 mV
    MAX20731-EA0-0V906           899 mV
    MAX20731-EA0-HMC-0V9         891 mV
    MAX20751-EA1-AVDD1V0        1000 mV
    MAX20731-EA1-1V2            1189 mV
    MAX20731-EA1-HMC-1V2        1182 mV
    MAX20731-EA1-0V906           899 mV
    MAX20731-EA1-HMC-0V9         889 mV
    MAX20751-EA2-AVDD1V0        1000 mV
    MAX20731-EA2-1V2            1186 mV
    MAX20731-EA2-HMC-1V2        1193 mV
    MAX20731-EA2-0V906           899 mV
    MAX20731-EA2-HMC-0V9         889 mV
    MAX20751-EA3-AVDD1V0        1000 mV
    MAX20731-EA3-1V2            1186 mV
```

```
    MAX20731-EA3-HMC-1V2        1193 mV
    MAX20731-EA3-0V906           897 mV
    MAX20731-EA3-HMC-0V9         894 mV
    MAX20731-3V3                3268 mV
    UCD9090_0-CH_1-EA0_PLL_     1010 mV
    UCD9090_0-CH_2-EA0_1V04     1038 mV
    UCD9090_0-CH_3-EA0_2V5      2499 mV
    UCD9090_0-CH_4-EA0_1V5      1494 mV
    UCD9090_0-CH_5-EA1_PLL_     1012 mV
    UCD9090_0-CH_6-EA1_1V04     1038 mV
    UCD9090_0-CH_7-EA1_2V5      2497 mV
    UCD9090_0-CH_8-EA1_1V5      1498 mV
    UCD9090_0-CH_9-VDD_1V8      1804 mV
    UCD9090_0-CH_10-VDD_2V5     2499 mV
    UCD9090_1-CH_1-EA2_PLL_     1017 mV
    UCD9090_1-CH_2-EA2_1V04     1041 mV
    UCD9090_1-CH_3-EA2_2V5      2499 mV
    UCD9090_1-CH_4-EA2_1V5      1503 mV
    UCD9090_1-CH_5-EA3_PLL_     1015 mV
    UCD9090_1-CH_6-EA3_1V04     1048 mV
    UCD9090_1-CH_7-EA3_2V5      2499 mV
    UCD9090_1-CH_8-EA3_1V5      1500 mV
    UCD9090_1-CH_9-VDD_1V5      1497 mV
    UCD9090_1-CH_10-VDD_1V2     1216 mV
    PMB PVCC 0.7V - 1.05V        802 mV
    PMB PVNN 0V - 1.02V          976 mV
    PMB 1.0V                    1002 mV
    PMB 1.1V                    1076 mV
    PMB 1.35V                   1347 mV
    PMB VDDQ 1.5V               1504 mV
    PMB 1.8V                    1804 mV
    PMB VDD 3.3V                3292 mV
    PMB BIAS 5.0V               5008 mV
    PMB USB 5.0V                5000 mV
    PMB 12V                    10866 mV
  I2C Slave Revision         112
FPC 7 status:
  State                      Online
  Temperature Intake         31 degrees C / 87 degrees F
  Temperature Exhaust A      46 degrees C / 114 degrees F
  Temperature Exhaust B      38 degrees C / 100 degrees F
  Temperature QX 0 TSen      49 degrees C / 120 degrees F
  Temperature QX 0 Chip      52 degrees C / 125 degrees F
```

```
  Temperature LU 0 TCAM TSen 49 degrees C / 120 degrees F
  Temperature LU 0 TCAM Chip 52 degrees C / 125 degrees F
  Temperature LU 0 TSen      49 degrees C / 120 degrees F
  Temperature LU 0 Chip      51 degrees C / 123 degrees F
  Temperature MQ 0 TSen      49 degrees C / 120 degrees F
  Temperature MQ 0 Chip      55 degrees C / 131 degrees F
  Temperature QX 1 TSen      41 degrees C / 105 degrees F
  Temperature QX 1 Chip      42 degrees C / 107 degrees F
  Temperature LU 1 TCAM TSen 41 degrees C / 105 degrees F
  Temperature LU 1 TCAM Chip 43 degrees C / 109 degrees F
  Temperature LU 1 TSen      41 degrees C / 105 degrees F
  Temperature LU 1 Chip      46 degrees C / 114 degrees F
  Temperature MQ 1 TSen      41 degrees C / 105 degrees F
  Temperature MQ 1 Chip      47 degrees C / 116 degrees F
  Power
    MPC-BIAS3V3-zl2105          3302 mV
    MPC-VDD3V3-zl2006           3307 mV
    MPC-VDD2V5-zl2006           2505 mV
    MPC-TCAM_1V0-zl2004         1000 mV
    MPC-AVDD1V0-zl2006          1006 mV
    MPC-VDD1V8-zl2006           1800 mV
    MPC-PCIE_1V0-zl2006         1000 mV
    MPC-LU0_1V0-zl2004           997 mV
    MPC-MQ0_1V0-zl2004           999 mV
    MPC-VDD_1V5-zl2004          1495 mV
    MPC-PMB_1V1-zl2006          1096 mV
    MPC-9VA-BMR453              9051 mV
    MPC-9VB-BMR453              8990 mV
    MPC-PMB_1V2-zl2106          1200 mV
    MPC-LU1_1V0-zl2004           997 mV
    MPC-MQ1_1V0-zl2004           998 mV
    MPC-QXM0_1V0-zl2006         1000 mV
    MPC-QXM1_1V0-zl2006          999 mV
  I2C Slave Revision         70
```

show chassis environment fpc (MX240 Router)

```
user@host> show chassis environment fpc
FPC 1 status:
  State                      Online
  Temperature Intake         34 degrees C / 93 degrees F
```

```
  Temperature Exhaust A      39 degrees C / 102 degrees F
  Temperature Exhaust B      53 degrees C / 127 degrees F
  Temperature I3 0 TSensor   51 degrees C / 123 degrees F
  Temperature I3 0 Chip      54 degrees C / 129 degrees F
  Temperature I3 1 TSensor   50 degrees C / 122 degrees F
  Temperature I3 1 Chip      53 degrees C / 127 degrees F
  Temperature I3 2 TSensor   48 degrees C / 118 degrees F
  Temperature I3 2 Chip      51 degrees C / 123 degrees F
  Temperature I3 3 TSensor   45 degrees C / 113 degrees F
  Temperature I3 3 Chip      48 degrees C / 118 degrees F
  Temperature IA 0 TSensor   45 degrees C / 113 degrees F
  Temperature IA 0 Chip      45 degrees C / 113 degrees F
  Temperature IA 1 TSensor   45 degrees C / 113 degrees F
  Temperature IA 1 Chip      49 degrees C / 120 degrees F
  Power
    1.5 V                     1492 mV
    2.5 V                     2507 mV
    3.3 V                     3306 mV
    1.8 V PFE 0               1801 mV
    1.8 V PFE 1               1804 mV
    1.8 V PFE 2               1798 mV
    1.8 V PFE 3               1798 mV
    1.2 V PFE 0               1169 mV
    1.2 V PFE 1               1189 mV
    1.2 V PFE 2               1182 mV
    1.2 V PFE 3               1176 mV
  I2C Slave Revision         42
FPC 2 status:
  State                      Online
  Temperature Intake         33 degrees C / 91 degrees F
  Temperature Exhaust A      41 degrees C / 105 degrees F
  Temperature Exhaust B      53 degrees C / 127 degrees F
  Temperature I3 0 TSensor   53 degrees C / 127 degrees F
  Temperature I3 0 Chip      58 degrees C / 136 degrees F
  Temperature I3 1 TSensor   52 degrees C / 125 degrees F
  Temperature I3 1 Chip      56 degrees C / 132 degrees F
  Temperature I3 2 TSensor   50 degrees C / 122 degrees F
  Temperature I3 2 Chip      52 degrees C / 125 degrees F
  Temperature I3 3 TSensor   46 degrees C / 114 degrees F
  Temperature I3 3 Chip      49 degrees C / 120 degrees F
  Temperature IA 0 TSensor   51 degrees C / 123 degrees F
  Temperature IA 0 Chip      49 degrees C / 120 degrees F
  Temperature IA 1 TSensor   48 degrees C / 118 degrees F
```

```
  Temperature IA 1 Chip      53 degrees C / 127 degrees F
  Power
    1.5 V                     1492 mV
    2.5 V                     2445 mV
    3.3 V                     3293 mV
    1.8 V PFE 0               1827 mV
    1.8 V PFE 1               1775 mV
    1.8 V PFE 2               1788 mV
    1.8 V PFE 3               1798 mV
    1.2 V PFE 0               1250 mV
    1.2 V PFE 1               1234 mV
    1.2 V PFE 2               1231 mV
    1.2 V PFE 3               1192 mV
  I2C Slave Revision          42
```

show chassis environment fpc (MX480 Router)

```
user@host> show chassis environment fpc
FPC 1 status:
  State                       Online
  Temperature Intake          36 degrees C / 96 degrees F
  Temperature Exhaust A       41 degrees C / 105 degrees F
  Temperature Exhaust B       55 degrees C / 131 degrees F
  Temperature I3 0 TSensor    55 degrees C / 131 degrees F
  Temperature I3 0 Chip       57 degrees C / 134 degrees F
  Temperature I3 1 TSensor    53 degrees C / 127 degrees F
  Temperature I3 1 Chip       53 degrees C / 127 degrees F
  Temperature I3 2 TSensor    52 degrees C / 125 degrees F
  Temperature I3 2 Chip       49 degrees C / 120 degrees F
  Temperature I3 3 TSensor    47 degrees C / 116 degrees F
  Temperature I3 3 Chip       47 degrees C / 116 degrees F
  Temperature IA 0 TSensor    54 degrees C / 129 degrees F
  Temperature IA 0 Chip       58 degrees C / 136 degrees F
  Temperature IA 1 TSensor    48 degrees C / 118 degrees F
  Temperature IA 1 Chip       53 degrees C / 127 degrees F
  Power
    1.5 V                     1479 mV
    2.5 V                     2542 mV
    3.3 V                     3319 mV
    1.8 V PFE 0               1811 mV
    1.8 V PFE 1               1804 mV
```

```
    1.8 V PFE 2               1804 mV
    1.8 V PFE 3               1814 mV
    1.2 V PFE 0               1192 mV
    1.2 V PFE 1               1202 mV
    1.2 V PFE 2               1205 mV
    1.2 V PFE 3               1189 mV
  I2C Slave Revision          40
```

show chassis environment fpc (MX960 Router MPC10E-15C-MRATE)

```
user@router> show chassis environment fpc 8

FPC 8 status:
  State                       Online
  Temperature Intake                      37 degrees C / 98 degrees F
  Temperature Exhaust A                   50 degrees C / 122 degrees F
  Temperature Exhaust B                   56 degrees C / 132 degrees F
  Temperature ZT0 Chip                    83 degrees C / 181 degrees F
  Temperature ZT1 Chip                    80 degrees C / 176 degrees F
  Temperature ZT2 Chip                    81 degrees C / 177 degrees F
  Temperature PCIE_SW Chip                64 degrees C / 147 degrees F
  Temperature ZT0 TestMacro               73 degrees C / 163 degrees F
  Temperature ZT0 hbmio_grp3              74 degrees C / 165 degrees F
  Temperature ZT0 hbmio_grp0              76 degrees C / 168 degrees F
  Temperature ZT0 gumem1                  78 degrees C / 172 degrees F
  Temperature ZT0 llm                     80 degrees C / 176 degrees F
  Temperature ZT0 wanio_sd                78 degrees C / 172 degrees F
  Temperature ZT0 fabio_sd                84 degrees C / 183 degrees F
  Temperature ZT0 flexmem                 84 degrees C / 183 degrees F
  Temperature ZT1 TestMacro               70 degrees C / 158 degrees F
  Temperature ZT1 hbmio_grp3              71 degrees C / 159 degrees F
  Temperature ZT1 hbmio_grp0              74 degrees C / 165 degrees F
  Temperature ZT1 gumem1                  75 degrees C / 167 degrees F
  Temperature ZT1 llm                     78 degrees C / 172 degrees F
  Temperature ZT1 wanio_sd                76 degrees C / 168 degrees F
  Temperature ZT1 fabio_sd                78 degrees C / 172 degrees F
  Temperature ZT1 flexmem                 82 degrees C / 179 degrees F
  Temperature ZT2 TestMacro               71 degrees C / 159 degrees F
  Temperature ZT2 hbmio_grp3              72 degrees C / 161 degrees F
  Temperature ZT2 hbmio_grp0              75 degrees C / 167 degrees F
  Temperature ZT2 gumem1                  76 degrees C / 168 degrees F
```

```
    Temperature ZT2 llm                       78 degrees C / 172 degrees F
    Temperature ZT2 wanio_sd                  78 degrees C / 172 degrees F
    Temperature ZT2 fabio_sd                  80 degrees C / 176 degrees F
    Temperature ZT2 flexmem                   76 degrees C / 168 degrees F
    Temperature ZT0 HBM0                      74 degrees C / 165 degrees F
    Temperature ZT0 HBM1                      74 degrees C / 165 degrees F
    Temperature ZT1 HBM0                      74 degrees C / 165 degrees F
    Temperature ZT1 HBM1                      75 degrees C / 167 degrees F
    Temperature ZT2 HBM0                      73 degrees C / 163 degrees F
    Temperature ZT2 HBM1                      73 degrees C / 163 degrees F
    Temperature FAB RT1.0                     73 degrees C / 163 degrees F
    Temperature FAB RT2.0                     75 degrees C / 167 degrees F
    Temperature FAB RT3.0                     73 degrees C / 163 degrees F
    Temperature FAB RT4.0                     70 degrees C / 158 degrees F
    Temperature FAB RT5.0                     67 degrees C / 152 degrees F
    Temperature FAB RT6.0                     67 degrees C / 152 degrees F
    Temperature FAB RT7.0                     65 degrees C / 149 degrees F
    Temperature FAB RT8.0                     66 degrees C / 150 degrees F
    Temperature WAN RT9.0                     64 degrees C / 147 degrees F
    Temperature WAN RT9.1                     62 degrees C / 143 degrees F
    Temperature WAN RT10.0                    65 degrees C / 149 degrees F
    Temperature WAN RT10.1                    63 degrees C / 145 degrees F
    Temperature WAN RT11.0                    51 degrees C / 123 degrees F
    Temperature WAN RT11.1                    49 degrees C / 120 degrees F
    Temperature PIM4820 T1                    72 degrees C / 161 degrees F
    Temperature BMR456-12V-BRICK-A T1         83 degrees C / 181 degrees F
    Temperature BMR456-12V-BRICK-B T1         91 degrees C / 195 degrees F
    Temperature MAX20730-ZT0-AVDDH T1         72 degrees C / 161 degrees F
    Temperature MAX20730-ZT0-HBM-VDDQ T1      64 degrees C / 147 degrees F
    Temperature MAX20730-ZT0-HBM-VDDC T1      65 degrees C / 149 degrees F
    Temperature MAX20730-ZT1-AVDDH T1         65 degrees C / 149 degrees F
    Temperature MAX20730-ZT1-HBM-VDDQ T1      60 degrees C / 140 degrees F
    Temperature MAX20730-ZT1-HBM-VDDC T1      57 degrees C / 134 degrees F
    Temperature MAX20730-ZT2-AVDDH T1         65 degrees C / 149 degrees F
    Temperature MAX20730-ZT2-HBM-VDDQ T1      58 degrees C / 136 degrees F
    Temperature MAX20730-ZT2-HBM-VDDC T1      55 degrees C / 131 degrees F
    Temperature CPU0_PMB                      61 degrees C / 141 degrees F
    Temperature CPU7_PMB                      61 degrees C / 141 degrees F
    Temperature DDR4 A                        38 degrees C / 100 degrees F
    Temperature DDR4 B                        37 degrees C / 98 degrees F
    Power
      PIM4820                     56967 mV
      BMR456-12V-BRICK-A          12016 mV
```

```
    BMR456-12V-BRICK-B         12039 mV
    MAX20743-RT01-DVDD           724 mV
    MAX20743-RT234-DVDD          724 mV
    MAX20743-RT567-DVDD          724 mV
    MAX20754-ZT0-VDD             750 mV
    MAX20754-ZT0-VDDM            799 mV
    MAX20743-ZT0-AVDD            904 mV
    MAX20730-ZT0-AVDDH          1103 mV
    MAX20730-ZT0-HBM-VDDQ       1198 mV
    MAX20730-ZT0-HBM-VDDC       1202 mV
    MAX20730-VDD-1V25           1246 mV
    MAX20754-ZT1-VDD             724 mV
    MAX20754-ZT1-VDDM            800 mV
    MAX20743-ZT1-AVDD            904 mV
    MAX20730-ZT1-AVDDH          1103 mV
    MAX20730-ZT1-HBM-VDDQ       1202 mV
    MAX20730-ZT1-HBM-VDDC       1198 mV
    MAX20730-PCIE-0V9            901 mV
    MAX20754-ZT2-VDD             724 mV
    MAX20754-ZT2-VDDM            799 mV
    MAX20743-ZT2-AVDD            904 mV
    MAX20730-ZT2-AVDDH          1103 mV
    MAX20730-ZT2-HBM-VDDQ       1198 mV
    MAX20730-ZT2-HBM-VDDC       1198 mV
    MAX20730-VDD3V3             3308 mV
    MAX20754-WAN-VDD3V3         3301 mV
    MAX20754-WAN-DVDD0V8         799 mV
    MAX20743-WAN-VDD1V0A        1003 mV
    MAX20743-WAN-AVDD0V8         800 mV
    MAX20743-WAN-VDD1V0C        1003 mV
    TPS53631-1V2-VDDQ-PMB       1225 mV
    TPS53641-VCCIN-PMB          1770 mV
    TPS53641-VCCSBUS-PMB        1040 mV
    MAX20730-BIAS3P30-PMB       3308 mV
    MAX20730-BIAS5P0-PMB        5063 mV
    MAX20730-VPP-V2P5-PMB       2503 mV
    MAX20730-VDD1V2             1195 mV
    MAX20730-VDD1V5             1496 mV
    MAX20730-VDD1V8             1799 mV
    MAX20730-VDD2V5             2511 mV
    MAX20754-RT-AVDD-0V8         800 mV
    MAX20743-XGE-VDD-AVS        1012 mV
    PMB VCC1P05_PCH_SW          1048 mV
```

```
    PMB VCC1P3                  1294 mV
    PMB VCC1P5                  1485 mV
    PMB VCC1P7                  1705 mV
    PMB DDR4_VPP                2519 mV
    PMB VCC3P3                  3336 mV
    PMB VCC3P3_PCH              3332 mV
  I2C Slave Revision         124
```

show chassis environment fpc (MX960 Router)

```
user@host> show chassis environment fpc
FPC 5 status:
  State                       Online
  Temperature Intake          27 degrees C / 80 degrees F
  Temperature Exhaust A       34 degrees C / 93 degrees F
  Temperature Exhaust B       40 degrees C / 104 degrees F
  Temperature I3 0 TSensor    39 degrees C / 102 degrees F
  Temperature I3 0 Chip       41 degrees C / 105 degrees F
  Temperature I3 1 TSensor    38 degrees C / 100 degrees F
  Temperature I3 1 Chip       37 degrees C / 98 degrees F
  Temperature I3 2 TSensor    37 degrees C / 98 degrees F
  Temperature I3 2 Chip       34 degrees C / 93 degrees F
  Temperature I3 3 TSensor    32 degrees C / 89 degrees F
  Temperature I3 3 Chip       33 degrees C / 91 degrees F
  Temperature IA 0 TSensor    39 degrees C / 102 degrees F
  Temperature IA 0 Chip       44 degrees C / 111 degrees F
  Temperature IA 1 TSensor    36 degrees C / 96 degrees F
  Temperature IA 1 Chip       44 degrees C / 111 degrees F
  Power
    1.5 V                      1479 mV
    2.5 V                      2523 mV
    3.3 V                      3254 mV
    1.8 V PFE 0                1798 mV
    1.8 V PFE 1                1798 mV
    1.8 V PFE 2                1807 mV
    1.8 V PFE 3                1791 mV
    1.2 V PFE 0                1173 mV
    1.2 V PFE 1                1179 mV
    1.2 V PFE 2                1179 mV
    1.2 V PFE 3                1185 mV
  I2C Slave Revision          6
```

```
FPC 6 status:
  State                       Online
  Temperature Intake          25 degrees C / 77 degrees F
  Temperature Exhaust A       38 degrees C / 100 degrees F
  Temperature Exhaust B       38 degrees C / 100 degrees F
  Temperature I3 0 TSensor    40 degrees C / 104 degrees F
  Temperature I3 0 Chip       40 degrees C / 104 degrees F
  Temperature I3 1 TSensor    40 degrees C / 104 degrees F
  Temperature I3 1 Chip       38 degrees C / 100 degrees F
  Temperature I3 2 TSensor    37 degrees C / 98 degrees F
  Temperature I3 2 Chip       32 degrees C / 89 degrees F
  Temperature I3 3 TSensor    34 degrees C / 93 degrees F
  Temperature I3 3 Chip       33 degrees C / 91 degrees F
  Temperature IA 0 TSensor    45 degrees C / 113 degrees F
  Temperature IA 0 Chip       47 degrees C / 116 degrees F
  Temperature IA 1 TSensor    37 degrees C / 98 degrees F
  Temperature IA 1 Chip       42 degrees C / 107 degrees F
  Power
    1.5 V                      1485 mV
    2.5 V                      2510 mV
    3.3 V                      3332 mV
    1.8 V PFE 0                1801 mV
    1.8 V PFE 1                1814 mV
    1.8 V PFE 2                1804 mV
    1.8 V PFE 3                1820 mV
    1.2 V PFE 0                1192 mV
    1.2 V PFE 1                1189 mV
    1.2 V PFE 2                1202 mV
    1.2 V PFE 3                1156 mV
  I2C Slave Revision          40
```

show chassis environment fpc (MX480 Router with 100-Gigabit Ethernet CFP)

```
user@host> show chassis environment fpc
FPC 0 status:
  State                       Online
  Temperature Intake          32 degrees C / 89 degrees F
  Temperature Exhaust A       39 degrees C / 102 degrees F
  Temperature Exhaust B       37 degrees C / 98 degrees F
  Temperature QX 0 TSen       44 degrees C / 111 degrees F
  Temperature QX 0 Chip       48 degrees C / 118 degrees F
```

```
  Temperature LU 0 TCAM TSen 44 degrees C / 111 degrees F
  Temperature LU 0 TCAM Chip 47 degrees C / 116 degrees F
  Temperature LU 0 TSen      44 degrees C / 111 degrees F
  Temperature LU 0 Chip      48 degrees C / 118 degrees F
  Temperature MQ 0 TSen      44 degrees C / 111 degrees F
  Temperature MQ 0 Chip      47 degrees C / 116 degrees F
  Power
    MPC-BIAS3V3-zl2105        3297 mV
    MPC-VDD3V3-zl2105         3306 mV
    MPC-VDD2V5-zl2105         2498 mV
    MPC-TCAM_1V0-zl2004        999 mV
    MPC-AVDD1V0-zl2006         999 mV
    MPC-VDD1V8-zl2006         1796 mV
    MPC-PCIE_1V0-zl2006       1002 mV
    MPC-LU0_1V0-zl2004         997 mV
    MPC-MQ0_1V0-zl2004         995 mV
    MPC-VDD_1V5-zl2004        1496 mV
    MPC-PMB_1V1-zl2006        1094 mV
    MPC-9VA-BMR453            9054 mV
    MPC-9VB-BMR453            9037 mV
    MPC-PMB_1V2-zl2106        1191 mV
    MPC-QXM0_1V0-zl2006       1000 mV
  I2C Slave Revision         66
FPC 1 status:
  State                      Online
  Temperature Intake         35 degrees C / 95 degrees F
  Temperature Exhaust A      50 degrees C / 122 degrees F
  Temperature Exhaust B      56 degrees C / 132 degrees F
  Temperature LU 0 TSen      46 degrees C / 114 degrees F
  Temperature LU 0 Chip      59 degrees C / 138 degrees F
  Temperature LU 1 TSen      46 degrees C / 114 degrees F
  Temperature LU 1 Chip      45 degrees C / 113 degrees F
  Temperature LU 2 TSen      46 degrees C / 114 degrees F
  Temperature LU 2 Chip      60 degrees C / 140 degrees F
  Temperature LU 3 TSen      46 degrees C / 114 degrees F
  Temperature LU 3 Chip      71 degrees C / 159 degrees F
  Temperature XM 0 TSen      46 degrees C / 114 degrees F
  Temperature XM 0 Chip      -18 degrees C / 0 degrees F
  Temperature XF 0 TSen      46 degrees C / 114 degrees F
  Temperature XF 0 Chip      76 degrees C / 168 degrees F
  Power
    MPC-BIAS3V3-zl2105        3292 mV
    MPC-VDD3V3-zl6100         3303 mV
```

```
    MPC-VDD2V5-zl6100          2501 mV
    MPC-VDD1V8-zl2004          1801 mV
    MPC-AVDD1V0-zl2006          996 mV
    MPC-VDD1V2-zl6100          1199 mV
    MPC-VDD1V5A-zl2004         1493 mV
    MPC-VDD1V5B-zl2004         1498 mV
    MPC-XF_0V9-zl2006           996 mV
    MPC-PCIE_1V0-zl6100        1000 mV
    MPC-LU0_1V0-zl2004          994 mV
    MPC-LU1_1V0-zl2004          994 mV
    MPC-LU2_1V0-zl2004          992 mV
    MPC-LU3_1V0-zl2004          993 mV
    MPC-12VA-BMR453           12003 mV
    MPC-12VB-BMR453           12043 mV
    MPC-PMB_1V1-zl2006         1091 mV
    MPC-PMB_1V2-zl2106         1196 mV
    MPC-XM_0V9-vt273m           899 mV
  I2C Slave Revision          106
```

show chassis environment fpc (MX240, MX480, MX960 with Application Services Modular Line Card

```
user@host>show chassis environment fpc 1
FPC 1 status:
  State                       Online
  Temperature Intake          36 degrees C / 96 degrees F
  Temperature Exhaust A       39 degrees C / 102 degrees F
  Temperature LU TSen         52 degrees C / 125 degrees F
  Temperature LU Chip         54 degrees C / 129 degrees F
  Temperature XM TSen         52 degrees C / 125 degrees F
  Temperature XM Chip         60 degrees C / 140 degrees F
  Temperature PCIe TSen       52 degrees C / 125 degrees F
  Temperature PCIe Chip       69 degrees C / 156 degrees F
  Power
    MPC-BIAS3V3-zl2106         3302 mV
    MPC-VDD3V3-zl6100          3325 mV
    MPC-AVDD1V0-zl6100         1007 mV
    MPC-PCIE_1V0-zl6100         904 mV
    MPC-LU0_1V0-zl2004          996 mV
    MPC-VDD_1V5-zl2004         1498 mV
    MPC-12VA-BMR453           11733 mV
```

```
    MPC-12VB-BMR453          11728 mV
    MPC-XM_0V9-vt273m          900 mV
  I2C Slave Revision         81
```

show chassis environment fpc (MX10003 Router)

```
user@host> show chassis environment fpc

FPC 0 status:
  State                      Online
  FPC 0 Intake Temp Sensor   29 degrees C / 84 degrees F
  FPC 0 Exhaust-A Temp Sensor56 degrees C / 132 degrees F
  FPC 0 Exhaust-B Temp Sensor44 degrees C / 111 degrees F
  FPC 0 EA0 Chip             58 degrees C / 136 degrees F
  FPC 0 EA0-XR0 Chip         61 degrees C / 141 degrees F
  FPC 0 EA0-XR1 Chip         62 degrees C / 143 degrees F
  FPC 0 EA1 Chip             67 degrees C / 152 degrees F
  FPC 0 EA1-XR0 Chip         72 degrees C / 161 degrees F
  FPC 0 EA1-XR1 Chip         72 degrees C / 161 degrees F
  FPC 0 PEX Chip             77 degrees C / 170 degrees F
  FPC 0 EA2 Chip             48 degrees C / 118 degrees F
  FPC 0 EA2-XR0 Chip         54 degrees C / 129 degrees F
  FPC 0 EA2-XR1 Chip         56 degrees C / 132 degrees F
  FPC 0 PF Chip              68 degrees C / 154 degrees F
  FPC 0 EA0_HMC0 Logic die   72 degrees C / 161 degrees F
  FPC 0 EA0_HMC0 DRAM botm   69 degrees C / 156 degrees F
  FPC 0 EA0_HMC1 Logic die   71 degrees C / 159 degrees F
  FPC 0 EA0_HMC1 DRAM botm   68 degrees C / 154 degrees F
  FPC 0 EA0_HMC2 Logic die   75 degrees C / 167 degrees F
  FPC 0 EA0_HMC2 DRAM botm   72 degrees C / 161 degrees F
  FPC 0 EA1_HMC0 Logic die   81 degrees C / 177 degrees F
  FPC 0 EA1_HMC0 DRAM botm   78 degrees C / 172 degrees F
  FPC 0 EA1_HMC1 Logic die   80 degrees C / 176 degrees F
  FPC 0 EA1_HMC1 DRAM botm   77 degrees C / 170 degrees F
  FPC 0 EA1_HMC2 Logic die   82 degrees C / 179 degrees F
  FPC 0 EA1_HMC2 DRAM botm   79 degrees C / 174 degrees F
  FPC 0 EA2_HMC0 Logic die   60 degrees C / 140 degrees F
  FPC 0 EA2_HMC0 DRAM botm   57 degrees C / 134 degrees F
  FPC 0 EA2_HMC1 Logic die   61 degrees C / 141 degrees F
  FPC 0 EA2_HMC1 DRAM botm   58 degrees C / 136 degrees F
  FPC 0 EA2_HMC2 Logic die   63 degrees C / 145 degrees F
```

```
FPC 0 EA2_HMC2 DRAM botm   60 degrees C / 140 degrees F
Power
  LTC3887-PF-VDD0V9-RAIL       898 mV
  LTC3887-PF-VDD0V9-DEV0-      898 mV
  LTC3887-PF-VDD0V9-DEV0-      900 mV
  LTC3887-PF-VDD0V9-DEV1-      899 mV
  LTC3887-PF-VDD0V9-DEV1-      901 mV
  LTC3887-PF-AVDD1V0-RAIL      998 mV
  LTC3887-PF-AVDD1V0-CH0       998 mV
  LTC3887-PF-AVDD1V0-CH1       999 mV
  LTC3887-ETHSW-VDD1V0        1000 mV
  LTC3887-VDD2V5              2499 mV
  LTC3887-PCIE-VDD0V9          899 mV
  LTC3887-V1P0                 999 mV
  LTC3887-PHY-VDD1V0-A         999 mV
  LTC3887-3V3                 3300 mV
  LTC3887-VDD1V8              1799 mV
  UCD9090_0-CH_1-EA0_PLL_     1005 mV
  UCD9090_0-CH_2-EA0_1V4      1049 mV
  UCD9090_0-CH_3-EA0_2V5      2499 mV
  UCD9090_0-CH_4-EA0_1V5      1499 mV
  UCD9090_0-CH_5-EA1_PLL_      999 mV
  UCD9090_0-CH_6-EA1_1V4      1037 mV
  UCD9090_0-CH_7-EA1_2V5      2499 mV
  UCD9090_0-CH_8-EA1_1V5      1510 mV
  UCD9090_0-CH_9-PVCC          797 mV
  UCD9090_0-CH_10-PVNN         991 mV
  UCD9090_1-CH_1-EA2_PLL_     1008 mV
  UCD9090_1-CH_2-EA2_1V4      1009 mV
  UCD9090_1-CH_3-EA2_2V5      2499 mV
  UCD9090_1-CH_4-EA2_1V5      1513 mV
  UCD9090_1-CH_5-1V0_PFPL     1009 mV
  UCD9090_1-CH_6-V1P1         1075 mV
  UCD9090_1-CH_7-V1P5         1531 mV
  UCD9090_1-CH_8-V1P35        1359 mV
  UCD9090_1-CH_9-VDD1V5       1511 mV
  UCD9090_1-CH_10-VDD1V2      1210 mV
  LTC3887-EA0-VDD0V9-RAIL      949 mV
  LTC3887-EA0-VDD0V9-DEV0      949 mV
  LTC3887-EA0-VDD0V9-DEV0      951 mV
  LTC3887-EA0-VDD0V9-DEV1      949 mV
  LTC3887-EA0-VDD0V9-DEV1      951 mV
  LTC3887-EA0-VDD0V9R2-RA      947 mV
```

```
    LTC3887-EA0-VDD0V9R2-CH      947 mV
    LTC3887-EA0-VDD0V9R2-CH      949 mV
    LTC3887-EA0-VDD1V0-RAIL      999 mV
    LTC3887-EA0-VDD1V0-CH0       999 mV
    LTC3887-EA0-VDD1V0-CH1      1001 mV
    LTC3887-EA0-XR-VDD0V9        900 mV
    LTC3887-EA0-XR-VDD1V2       1199 mV
    LTC3887-EA0-HM1-VDD0V9       899 mV
    LTC3887-EA0-HM-VDD1V2       1200 mV
    LTC3887-EA0-HM-VDDM1V2      1199 mV
    LTC3887-EA1-VDD0V9-RAIL      949 mV
    LTC3887-EA1-VDD0V9-DEV0      952 mV
    LTC3887-EA1-VDD0V9-DEV0      952 mV
    LTC3887-EA1-VDD0V9-DEV1      951 mV
    LTC3887-EA1-VDD0V9-DEV1      951 mV
    LTC3887-EA1-VDD0V9R2-RA      948 mV
    LTC3887-EA1-VDD0V9R2-CH      948 mV
    LTC3887-EA1-VDD0V9R2-CH      950 mV
    LTC3887-EA1-VDD1V0-RAIL     1000 mV
    LTC3887-EA1-VDD1V0-CH0      1000 mV
    LTC3887-EA1-VDD1V0-CH1      1001 mV
  I2C Slave Revision         13
FPC 1 status:
  State                      Online
  FPC 1 Intake Temp Sensor   27 degrees C / 80 degrees F
  FPC 1 Exhaust-A Temp Sensor60 degrees C / 140 degrees F
  FPC 1 Exhaust-B Temp Sensor46 degrees C / 114 degrees F
  FPC 1 EA0 Chip             63 degrees C / 145 degrees F
  FPC 1 EA0-XR0 Chip         67 degrees C / 152 degrees F
  FPC 1 EA0-XR1 Chip         68 degrees C / 154 degrees F
  FPC 1 EA1 Chip             70 degrees C / 158 degrees F
  FPC 1 EA1-XR0 Chip         75 degrees C / 167 degrees F
  FPC 1 EA1-XR1 Chip         75 degrees C / 167 degrees F
  FPC 1 PEX Chip             89 degrees C / 192 degrees F
  FPC 1 EA2 Chip             49 degrees C / 120 degrees F
  FPC 1 EA2-XR0 Chip         53 degrees C / 127 degrees F
  FPC 1 EA2-XR1 Chip         56 degrees C / 132 degrees F
  FPC 1 PF Chip              71 degrees C / 159 degrees F
  FPC 1 EA0_HMC0 Logic die   74 degrees C / 165 degrees F
  FPC 1 EA0_HMC0 DRAM botm   71 degrees C / 159 degrees F
  FPC 1 EA0_HMC1 Logic die   78 degrees C / 172 degrees F
  FPC 1 EA0_HMC1 DRAM botm   75 degrees C / 167 degrees F
  FPC 1 EA0_HMC2 Logic die   78 degrees C / 172 degrees F
```

```
FPC 1 EA0_HMC2 DRAM botm   75 degrees C / 167 degrees F
FPC 1 EA1_HMC0 Logic die   84 degrees C / 183 degrees F
FPC 1 EA1_HMC0 DRAM botm   81 degrees C / 177 degrees F
FPC 1 EA1_HMC1 Logic die   82 degrees C / 179 degrees F
FPC 1 EA1_HMC1 DRAM botm   79 degrees C / 174 degrees F
FPC 1 EA1_HMC2 Logic die   85 degrees C / 185 degrees F
FPC 1 EA1_HMC2 DRAM botm   82 degrees C / 179 degrees F
FPC 1 EA2_HMC0 Logic die   62 degrees C / 143 degrees F
FPC 1 EA2_HMC0 DRAM botm   59 degrees C / 138 degrees F
FPC 1 EA2_HMC1 Logic die   60 degrees C / 140 degrees F
FPC 1 EA2_HMC1 DRAM botm   57 degrees C / 134 degrees F
FPC 1 EA2_HMC2 Logic die   65 degrees C / 149 degrees F
FPC 1 EA2_HMC2 DRAM botm   62 degrees C / 143 degrees F
Power
  LTC3887-PF-VDD0V9-RAIL       899 mV
  LTC3887-PF-VDD0V9-DEV0-      899 mV
  LTC3887-PF-VDD0V9-DEV0-      901 mV
  LTC3887-PF-VDD0V9-DEV1-      899 mV
  LTC3887-PF-VDD0V9-DEV1-      901 mV
  LTC3887-PF-AVDD1V0-RAIL      998 mV
  LTC3887-PF-AVDD1V0-CH0       998 mV
  LTC3887-PF-AVDD1V0-CH1       999 mV
  LTC3887-ETHSW-VDD1V0         999 mV
  LTC3887-VDD2V5              2499 mV
  LTC3887-PCIE-VDD0V9          900 mV
  LTC3887-V1P0                1000 mV
  LTC3887-PHY-VDD1V0-A        1000 mV
  LTC3887-3V3                 3300 mV
  LTC3887-VDD1V8              1799 mV
  UCD9090_0-CH_1-EA0_PLL_     1004 mV
  UCD9090_0-CH_2-EA0_1V4      1004 mV
  UCD9090_0-CH_3-EA0_2V5      2499 mV
  UCD9090_0-CH_4-EA0_1V5      1511 mV
  UCD9090_0-CH_5-EA1_PLL_      999 mV
  UCD9090_0-CH_6-EA1_1V4      1008 mV
  UCD9090_0-CH_7-EA1_2V5      2499 mV
  UCD9090_0-CH_8-EA1_1V5      1510 mV
  UCD9090_0-CH_9-PVCC          839 mV
  UCD9090_0-CH_10-PVNN        1016 mV
  UCD9090_1-CH_1-EA2_PLL_     1011 mV
  UCD9090_1-CH_2-EA2_1V4      1046 mV
  UCD9090_1-CH_3-EA2_2V5      2499 mV
  UCD9090_1-CH_4-EA2_1V5      1501 mV
```

```
    UCD9090_1-CH_5-1V0_PFPL     1000 mV
    UCD9090_1-CH_6-V1P1         1037 mV
    UCD9090_1-CH_7-V1P5         1530 mV
    UCD9090_1-CH_8-V1P35        1360 mV
    UCD9090_1-CH_9-VDD1V5       1513 mV
    UCD9090_1-CH_10-VDD1V2      1217 mV
    LTC3887-EA0-VDD0V9-RAIL      949 mV
    LTC3887-EA0-VDD0V9-DEV0      949 mV
    LTC3887-EA0-VDD0V9-DEV0      951 mV
    LTC3887-EA0-VDD0V9-DEV1      949 mV
    LTC3887-EA0-VDD0V9-DEV1      952 mV
    LTC3887-EA0-VDD0V9R2-RA      947 mV
    LTC3887-EA0-VDD0V9R2-CH      947 mV
    LTC3887-EA0-VDD0V9R2-CH      949 mV
    LTC3887-EA0-VDD1V0-RAIL     1000 mV
    LTC3887-EA0-VDD1V0-CH0      1000 mV
    LTC3887-EA0-VDD1V0-CH1      1001 mV
    LTC3887-EA0-XR-VDD0V9        899 mV
    LTC3887-EA0-XR-VDD1V2       1200 mV
    LTC3887-EA0-HM1-VDD0V9       899 mV
    LTC3887-EA0-HM-VDD1V2       1199 mV
    LTC3887-EA0-HM-VDDM1V2      1199 mV
    LTC3887-EA1-VDD0V9-RAIL      948 mV
    LTC3887-EA1-VDD0V9-DEV0      950 mV
    LTC3887-EA1-VDD0V9-DEV0      950 mV
    LTC3887-EA1-VDD0V9-DEV1      951 mV
    LTC3887-EA1-VDD0V9-DEV1      951 mV
    LTC3887-EA1-VDD0V9R2-RA      947 mV
    LTC3887-EA1-VDD0V9R2-CH      947 mV
    LTC3887-EA1-VDD0V9R2-CH      949 mV
    LTC3887-EA1-VDD1V0-RAIL     1000 mV
    LTC3887-EA1-VDD1V0-CH0      1000 mV
    LTC3887-EA1-VDD1V0-CH1      1002 mV
  I2C Slave Revision         99
```

show chassis environment fpc (MX204 Router)

```
user@host> show chassis environment fpc

FPC 0 status:
  State                       Online
```

```
  FPC 0 EA0_HMC0 Logic die   77 degrees C / 170 degrees F
  FPC 0 EA0_HMC0 DRAM botm   74 degrees C / 165 degrees F
  FPC 0 EA0_HMC1 Logic die   80 degrees C / 176 degrees F
  FPC 0 EA0_HMC1 DRAM botm   77 degrees C / 170 degrees F
  FPC 0 EA0 Chip             93 degrees C / 199 degrees F
  FPC 0 EA0-XR0 Chip         63 degrees C / 145 degrees F
  FPC 0 EA0-XR1 Chip         64 degrees C / 147 degrees F
  Power
  I2C Slave Revision         0
```

show chassis environment fpc (MX10008 Router)

```
user@host> show chassis environment fpc
FPC 0 status:
  State                      Online
  FPC 0 Intake-A Temp Sensor              32 degrees C / 89 degrees F
  FPC 0 Exhaust-A Temp Sensor             44 degrees C / 111 degrees F
  FPC 0 Exhaust-B Temp Sensor             50 degrees C / 122 degrees F
  FPC 0 EA0 Temp Sensor                   67 degrees C / 152 degrees F
  FPC 0 EA0_XR0 Temp Sensor               69 degrees C / 156 degrees F
  FPC 0 EA0_XR1 Temp Sensor               73 degrees C / 163 degrees F
  FPC 0 EA1 Temp Sensor                   61 degrees C / 141 degrees F
  FPC 0 EA1_XR0 Temp Sensor               65 degrees C / 149 degrees F
  FPC 0 EA1_XR1 Temp Sensor               63 degrees C / 145 degrees F
  FPC 0 EA2 Temp Sensor                   69 degrees C / 156 degrees F
  FPC 0 EA2_XR0 Temp Sensor               73 degrees C / 163 degrees F
  FPC 0 EA2_XR1 Temp Sensor               72 degrees C / 161 degrees F
  FPC 0 EA3 Temp Sensor                   64 degrees C / 147 degrees F
  FPC 0 EA3_XR0 Temp Sensor               66 degrees C / 150 degrees F
  FPC 0 EA3_XR1 Temp Sensor               66 degrees C / 150 degrees F
  FPC 0 EA4 Temp Sensor                   70 degrees C / 158 degrees F
  FPC 0 EA4_XR0 Temp Sensor               72 degrees C / 161 degrees F
  FPC 0 EA4_XR1 Temp Sensor               72 degrees C / 161 degrees F
  FPC 0 EA5 Temp Sensor                   58 degrees C / 136 degrees F
  FPC 0 EA5_XR0 Temp Sensor               61 degrees C / 141 degrees F
  FPC 0 EA5_XR1 Temp Sensor               64 degrees C / 147 degrees F
  FPC 0 EA0_HMC0 Logic die                75 degrees C / 167 degrees F
  FPC 0 EA0_HMC0 DRAM botm                72 degrees C / 161 degrees F
  FPC 0 EA0_HMC1 Logic die                76 degrees C / 168 degrees F
  FPC 0 EA0_HMC1 DRAM botm                73 degrees C / 163 degrees F
```

```
FPC 0 EA0_HMC2 Logic die                77 degrees C / 170 degrees F
FPC 0 EA0_HMC2 DRAM botm                74 degrees C / 165 degrees F
FPC 0 EA1_HMC0 Logic die                72 degrees C / 161 degrees F
FPC 0 EA1_HMC0 DRAM botm                69 degrees C / 156 degrees F
FPC 0 EA1_HMC1 Logic die                73 degrees C / 163 degrees F
FPC 0 EA1_HMC1 DRAM botm                70 degrees C / 158 degrees F
FPC 0 EA1_HMC2 Logic die                72 degrees C / 161 degrees F
FPC 0 EA1_HMC2 DRAM botm                69 degrees C / 156 degrees F
FPC 0 EA2_HMC0 Logic die                80 degrees C / 176 degrees F
FPC 0 EA2_HMC0 DRAM botm                77 degrees C / 170 degrees F
FPC 0 EA2_HMC1 Logic die                81 degrees C / 177 degrees F
FPC 0 EA2_HMC1 DRAM botm                78 degrees C / 172 degrees F
FPC 0 EA2_HMC2 Logic die                80 degrees C / 176 degrees F
FPC 0 EA2_HMC2 DRAM botm                77 degrees C / 170 degrees F
FPC 0 EA3_HMC0 Logic die                77 degrees C / 170 degrees F
FPC 0 EA3_HMC0 DRAM botm                74 degrees C / 165 degrees F
FPC 0 EA3_HMC1 Logic die                78 degrees C / 172 degrees F
FPC 0 EA3_HMC1 DRAM botm                75 degrees C / 167 degrees F
FPC 0 EA3_HMC2 Logic die                77 degrees C / 170 degrees F
FPC 0 EA3_HMC2 DRAM botm                74 degrees C / 165 degrees F
FPC 0 EA4_HMC0 Logic die                80 degrees C / 176 degrees F
FPC 0 EA4_HMC0 DRAM botm                77 degrees C / 170 degrees F
FPC 0 EA4_HMC1 Logic die                81 degrees C / 177 degrees F
FPC 0 EA4_HMC1 DRAM botm                78 degrees C / 172 degrees F
FPC 0 EA4_HMC2 Logic die                80 degrees C / 176 degrees F
FPC 0 EA4_HMC2 DRAM botm                77 degrees C / 170 degrees F
FPC 0 EA5_HMC0 Logic die                69 degrees C / 156 degrees F
FPC 0 EA5_HMC0 DRAM botm                66 degrees C / 150 degrees F
FPC 0 EA5_HMC1 Logic die                68 degrees C / 154 degrees F
FPC 0 EA5_HMC1 DRAM botm                65 degrees C / 149 degrees F
FPC 0 EA5_HMC2 Logic die                68 degrees C / 154 degrees F
FPC 0 EA5_HMC2 DRAM botm                65 degrees C / 149 degrees F
Power
       12V SS 1                    12259 mV    9841 mA  120642 mW
       12V SS 2                    12259 mV   21054 mA  258104 mW
       12V SS 3                    12285 mV    9841 mA  120902 mW
       12V SS 4                    12232 mV   20968 mA  256496 mW
       12V SS 5                    12179 mV   14993 mA  182614 mW
       VDD 1.0V_A                   1000 mV   95375 mA   95375 mW
       VDD 1.0V_B                      0 mV       0 mA       0 mW
       VDD 3.3V                     3298 mV   12500 mA   41235 mW
       VDD 0.9V                      894 mV    3569 mA    3192 mW
       ETH SW 1V                     980 mV    4500 mA    4410 mW
```

```
VDD 1.8V                  1809 mV     895 mA    1619 mW
PVCC                       951 mV       0 mA       0 mW
PVNN                      1009 mV       0 mA       0 mW
V1P0                      1006 mV       0 mA       0 mW
V1P1                      1070 mV       0 mA       0 mW
V1P3                      1351 mV       0 mA       0 mW
VDDQ                      1500 mV       0 mA       0 mW
V1P8                      1816 mV       0 mA       0 mW
VDD3V3                    3296 mV       0 mA       0 mW
V5V0_BIAS                 5025 mV       0 mA       0 mW
VDD12V0                  12174 mV       0 mA       0 mW
EA0 Core 0.9V              900 mV   40625 mA   36578 mW
EA0 AVDD 1.0V             1000 mV   32500 mA   32500 mW
EA0 HMC Core 0.9V          894 mV   10081 mA    9017 mW
EA0 1.2V                  1189 mV   15081 mA   17945 mW
EA01_HMC_VDDM 1.2V        1193 mV    -151 mA    -180 mW
EA0_XR 0.906V              905 mV   13802 mA   12496 mW
EA1 Core 0.9V              900 mV   41000 mA   36916 mW
EA1 AVDD 1.0V             1000 mV   28000 mA   28000 mW
EA1 HMC Core 0.9V          897 mV    9848 mA    8835 mW
EA1 1.2V                  1197 mV   15313 mA   18332 mW
EA0_PLL_1V0               1003 mV       0 mA       0 mW
EA0_1V04                  1032 mV       0 mA       0 mW
EA0_2V5                   2445 mV       0 mA       0 mW
EA0_1V5                   1512 mV       0 mA       0 mW
EA1_PLL_1V0               1000 mV       0 mA       0 mW
EA1_1V04                  1051 mV       0 mA       0 mW
EA1_2V5                   2516 mV       0 mA       0 mW
EA1_1V5                   1503 mV       0 mA       0 mW
EA1_XR 0.906V              908 mV   14151 mA   12850 mW
EA2 Core 0.9V              899 mV   40625 mA   36538 mW
EA2 AVDD 1.0V             1000 mV   27250 mA   27276 mW
EA2 HMC Core 0.9V          897 mV    9616 mA    8627 mW
EA2 1.2V                  1193 mV   15779 mA   18832 mW
EA23_HMC_VDDM 1.2V        1197 mV      81 mA      97 mW
EA2_XR 0.906V              908 mV   14848 mA   13484 mW
EA3 Core 0.9V              899 mV   40625 mA   36538 mW
EA3 AVDD 1.0V             1000 mV   28000 mA   28000 mW
EA3 HMC Core 0.9V          897 mV   10546 mA    9461 mW
EA3 1.2V                  1197 mV   15895 mA   19028 mW
EA2_PLL_1V0               1025 mV       0 mA       0 mW
EA2_1V04                  1048 mV       0 mA       0 mW
EA2_2V5                   2516 mV       0 mA       0 mW
```

```
          EA2_1V5                     1500 mV       0 mA       0 mW
          EA3_PLL_1V0                 1009 mV       0 mA       0 mW
          EA3_1V04                    1032 mV       0 mA       0 mW
          EA3_2V5                     2551 mV       0 mA       0 mW
          EA3_1V5                     1496 mV       0 mA       0 mW
          EA3_XR 0.906V                908 mV   15895 mA   14434 mW
          EA4 Core 0.9V                900 mV   41000 mA   36916 mW
          EA4 AVDD 1.0V                999 mV   31250 mA   31219 mW
          EA4 HMC Core 0.9V            894 mV    9965 mA    8913 mW
          EA4 1.2V                    1197 mV   15779 mA   18889 mW
          EA45_HMC_VDDM 1.2V          1197 mV     546 mA     654 mW
          EA4_XR 0.906V                908 mV   15197 mA   13801 mW
          EA5 Core 0.9V                900 mV   39750 mA   35790 mW
          EA5 AVDD 1.0V               1000 mV   28000 mA   28000 mW
          EA5 HMC Core 0.9V            897 mV    9965 mA    8940 mW
          EA5 1.2V                    1197 mV   15546 mA   18610 mW
          EA4_PLL_1V0                 1003 mV       0 mA       0 mW
          EA4_1V04                    1041 mV       0 mA       0 mW
          EA4_2V5                     2541 mV       0 mA       0 mW
          EA4_1V5                     1506 mV       0 mA       0 mW
          EA5_PLL_1V0                 1022 mV       0 mA       0 mW
          EA5_1V04                    1048 mV       0 mA       0 mW
          EA5_2V5                     2532 mV       0 mA       0 mW
          EA5_1V5                     1509 mV       0 mA       0 mW
          VDD2V5                      2503 mV       0 mA       0 mW
          VDD1V5                      1509 mV       0 mA       0 mW
          VDD1V2                      1206 mV       0 mA       0 mW
          EA5_XR 0.906V                902 mV   14500 mA   13088 mW
FPC 2 status:
  State                       Online
  FPC 2 Intake-A Temp Sensor             33 degrees C / 91 degrees F
  FPC 2 Exhaust-A Temp Sensor            52 degrees C / 125 degrees F
  FPC 2 Exhaust-B Temp Sensor            50 degrees C / 122 degrees F
  FPC 2 EA0 Temp Sensor                  72 degrees C / 161 degrees F
  FPC 2 EA0_XR0 Temp Sensor              76 degrees C / 168 degrees F
  FPC 2 EA0_XR1 Temp Sensor              79 degrees C / 174 degrees F
  FPC 2 EA1 Temp Sensor                  64 degrees C / 147 degrees F
  FPC 2 EA1_XR0 Temp Sensor              68 degrees C / 154 degrees F
  FPC 2 EA1_XR1 Temp Sensor              66 degrees C / 150 degrees F
  FPC 2 EA2 Temp Sensor                  75 degrees C / 167 degrees F
  FPC 2 EA2_XR0 Temp Sensor              81 degrees C / 177 degrees F
  FPC 2 EA2_XR1 Temp Sensor              81 degrees C / 177 degrees F
  FPC 2 EA3 Temp Sensor                  67 degrees C / 152 degrees F
```

```
FPC 2 EA3_XR0 Temp Sensor              69 degrees C / 156 degrees F
FPC 2 EA3_XR1 Temp Sensor              69 degrees C / 156 degrees F
FPC 2 EA4 Temp Sensor                  76 degrees C / 168 degrees F
FPC 2 EA4_XR0 Temp Sensor              77 degrees C / 170 degrees F
FPC 2 EA4_XR1 Temp Sensor              76 degrees C / 168 degrees F
FPC 2 EA5 Temp Sensor                  60 degrees C / 140 degrees F
FPC 2 EA5_XR0 Temp Sensor              65 degrees C / 149 degrees F
FPC 2 EA5_XR1 Temp Sensor              65 degrees C / 149 degrees F
FPC 2 EA0_HMC0 Logic die               84 degrees C / 183 degrees F
FPC 2 EA0_HMC0 DRAM botm               81 degrees C / 177 degrees F
FPC 2 EA0_HMC1 Logic die               86 degrees C / 186 degrees F
FPC 2 EA0_HMC1 DRAM botm               83 degrees C / 181 degrees F
FPC 2 EA0_HMC2 Logic die               83 degrees C / 181 degrees F
FPC 2 EA0_HMC2 DRAM botm               80 degrees C / 176 degrees F
FPC 2 EA1_HMC0 Logic die               76 degrees C / 168 degrees F
FPC 2 EA1_HMC0 DRAM botm               73 degrees C / 163 degrees F
FPC 2 EA1_HMC1 Logic die               77 degrees C / 170 degrees F
FPC 2 EA1_HMC1 DRAM botm               74 degrees C / 165 degrees F
FPC 2 EA1_HMC2 Logic die               76 degrees C / 168 degrees F
FPC 2 EA1_HMC2 DRAM botm               73 degrees C / 163 degrees F
FPC 2 EA2_HMC0 Logic die               87 degrees C / 188 degrees F
FPC 2 EA2_HMC0 DRAM botm               84 degrees C / 183 degrees F
FPC 2 EA2_HMC1 Logic die               89 degrees C / 192 degrees F
FPC 2 EA2_HMC1 DRAM botm               86 degrees C / 186 degrees F
FPC 2 EA2_HMC2 Logic die               88 degrees C / 190 degrees F
FPC 2 EA2_HMC2 DRAM botm               85 degrees C / 185 degrees F
FPC 2 EA3_HMC0 Logic die               80 degrees C / 176 degrees F
FPC 2 EA3_HMC0 DRAM botm               77 degrees C / 170 degrees F
FPC 2 EA3_HMC1 Logic die               81 degrees C / 177 degrees F
FPC 2 EA3_HMC1 DRAM botm               78 degrees C / 172 degrees F
FPC 2 EA3_HMC2 Logic die               81 degrees C / 177 degrees F
FPC 2 EA3_HMC2 DRAM botm               78 degrees C / 172 degrees F
FPC 2 EA4_HMC0 Logic die               88 degrees C / 190 degrees F
FPC 2 EA4_HMC0 DRAM botm               85 degrees C / 185 degrees F
FPC 2 EA4_HMC1 Logic die               90 degrees C / 194 degrees F
FPC 2 EA4_HMC1 DRAM botm               87 degrees C / 188 degrees F
FPC 2 EA4_HMC2 Logic die               81 degrees C / 177 degrees F
FPC 2 EA4_HMC2 DRAM botm               78 degrees C / 172 degrees F
FPC 2 EA5_HMC0 Logic die               73 degrees C / 163 degrees F
FPC 2 EA5_HMC0 DRAM botm               70 degrees C / 158 degrees F
FPC 2 EA5_HMC1 Logic die               69 degrees C / 156 degrees F
FPC 2 EA5_HMC1 DRAM botm               66 degrees C / 150 degrees F
FPC 2 EA5_HMC2 Logic die               73 degrees C / 163 degrees F
```

```
FPC 2 EA5_HMC2 DRAM botm                70 degrees C / 158 degrees F
Power
        12V SS 1                    12285 mV    9408 mA  115582 mW
        12V SS 2                    12338 mV   20881 mA  257637 mW
        12V SS 3                    12351 mV   10317 mA  127430 mW
        12V SS 4                    12285 mV   21054 mA  258660 mW
        12V SS 5                    12153 mV   13954 mA  169591 mW
        VDD 1.0V_A                   1000 mV   91000 mA   91000 mW
        VDD 1.0V_B                      0 mV       0 mA       0 mW
        VDD 3.3V                     3298 mV    9125 mA   30101 mW
        VDD 0.9V                      897 mV    3337 mA    2993 mW
        ETH SW 1V                       0 mV       0 mA       0 mW
        VDD 1.8V                     1809 mV    1127 mA    2040 mW
        PVCC                          835 mV       0 mA       0 mW
        PVNN                         1000 mV       0 mA       0 mW
        V1P0                         1003 mV       0 mA       0 mW
        V1P1                         1070 mV       0 mA       0 mW
        V1P3                         1348 mV       0 mA       0 mW
        VDDQ                         1493 mV       0 mA       0 mW
        V1P8                         1806 mV       0 mA       0 mW
        VDD3V3                       3303 mV       0 mA       0 mW
        V5V0_BIAS                    5000 mV       0 mA       0 mW
        VDD12V0                     12116 mV       0 mA       0 mW
        EA0 Core 0.9V                 900 mV   38875 mA   35002 mW
        EA0 AVDD 1.0V                 999 mV   31875 mA   31843 mW
        EA0 HMC Core 0.9V             894 mV    9034 mA    8081 mW
        EA0 1.2V                     1197 mV   15430 mA   18471 mW
        EA01_HMC_VDDM 1.2V           1200 mV    -267 mA    -321 mW
        EA0_XR 0.906V                 908 mV   15430 mA   14012 mW
        EA1 Core 0.9V                 900 mV   38875 mA   35002 mW
        EA1 AVDD 1.0V                1000 mV   28250 mA   28250 mW
        EA1 HMC Core 0.9V             899 mV    8802 mA    7920 mW
        EA1 1.2V                     1197 mV   15081 mA   18054 mW
        EA0_PLL_1V0                  1003 mV       0 mA       0 mW
        EA0_1V04                     1048 mV       0 mA       0 mW
        EA0_2V5                      2425 mV       0 mA       0 mW
        EA0_1V5                      1483 mV       0 mA       0 mW
        EA1_PLL_1V0                  1019 mV       0 mA       0 mW
        EA1_1V04                     1019 mV       0 mA       0 mW
        EA1_2V5                      2490 mV       0 mA       0 mW
        EA1_1V5                      1480 mV       0 mA       0 mW
        EA1_XR 0.906V                 908 mV   14965 mA   13590 mW
        EA2 Core 0.9V                 900 mV   44000 mA   39617 mW
```

```
          EA2 AVDD 1.0V                1000 mV   28625 mA   28625 mW
          EA2 HMC Core 0.9V             891 mV   10546 mA    9404 mW
          EA2 1.2V                     1200 mV   15313 mA   18387 mW
          EA23_HMC_VDDM 1.2V           1193 mV    -267 mA    -319 mW
          EA2_XR 0.906V                 908 mV   15197 mA   13801 mW
          EA3 Core 0.9V                 900 mV   39750 mA   35790 mW
          EA3 AVDD 1.0V                1000 mV   27750 mA   27750 mW
          EA3 HMC Core 0.9V             897 mV    9267 mA    8314 mW
          EA3 1.2V                     1197 mV   15430 mA   18471 mW
          EA2_PLL_1V0                  1009 mV       0 mA       0 mW
          EA2_1V04                     1041 mV       0 mA       0 mW
          EA2_2V5                      2496 mV       0 mA       0 mW
          EA2_1V5                      1493 mV       0 mA       0 mW
          EA3_PLL_1V0                  1003 mV       0 mA       0 mW
          EA3_1V04                     1041 mV       0 mA       0 mW
          EA3_2V5                      2490 mV       0 mA       0 mW
          EA3_1V5                      1500 mV       0 mA       0 mW
          EA3_XR 0.906V                 908 mV   15081 mA   13695 mW
          EA4 Core 0.9V                 899 mV   45750 mA   41148 mW
          EA4 AVDD 1.0V                1000 mV   32250 mA   32250 mW
          EA4 HMC Core 0.9V             897 mV   10779 mA    9670 mW
          EA4 1.2V                     1193 mV   16011 mA   19110 mW
          EA45_HMC_VDDM 1.2V           1200 mV    -267 mA    -321 mW
          EA4_XR 0.906V                 905 mV   15779 mA   14286 mW
          EA5 Core 0.9V                 900 mV   38375 mA   34552 mW
          EA5 AVDD 1.0V                1000 mV   27750 mA   27777 mW
          EA5 HMC Core 0.9V             899 mV    8453 mA    7606 mW
          EA5 1.2V                     1200 mV   14732 mA   17689 mW
          EA4_PLL_1V0                  1012 mV       0 mA       0 mW
          EA4_1V04                     1029 mV       0 mA       0 mW
          EA4_2V5                      2496 mV       0 mA       0 mW
          EA4_1V5                      1490 mV       0 mA       0 mW
          EA5_PLL_1V0                  1003 mV       0 mA       0 mW
          EA5_1V04                     1032 mV       0 mA       0 mW
          EA5_2V5                      2503 mV       0 mA       0 mW
          EA5_1V5                      1480 mV       0 mA       0 mW
          VDD2V5                       2461 mV       0 mA       0 mW
          VDD1V5                       1490 mV       0 mA       0 mW
          VDD1V2                       1212 mV       0 mA       0 mW
          EA5_XR 0.906V                 910 mV   13686 mA   12466 mW
FPC 3 status:
  State                       Online
  FPC 3 Intake-A Temp Sensor              30 degrees C / 86 degrees F
```

```
FPC 3 Exhaust-A Temp Sensor             48 degrees C / 118 degrees F
FPC 3 Exhaust-B Temp Sensor             45 degrees C / 113 degrees F
FPC 3 EA0 Temp Sensor                   60 degrees C / 140 degrees F
FPC 3 EA0_XR0 Temp Sensor               65 degrees C / 149 degrees F
FPC 3 EA0_XR1 Temp Sensor               67 degrees C / 152 degrees F
FPC 3 EA1 Temp Sensor                   54 degrees C / 129 degrees F
FPC 3 EA1_XR0 Temp Sensor               60 degrees C / 140 degrees F
FPC 3 EA1_XR1 Temp Sensor               58 degrees C / 136 degrees F
FPC 3 EA2 Temp Sensor                   62 degrees C / 143 degrees F
FPC 3 EA2_XR0 Temp Sensor               67 degrees C / 152 degrees F
FPC 3 EA2_XR1 Temp Sensor               67 degrees C / 152 degrees F
FPC 3 EA3 Temp Sensor                   55 degrees C / 131 degrees F
FPC 3 EA3_XR0 Temp Sensor               57 degrees C / 134 degrees F
FPC 3 EA3_XR1 Temp Sensor               57 degrees C / 134 degrees F
FPC 3 EA4 Temp Sensor                   69 degrees C / 156 degrees F
FPC 3 EA4_XR0 Temp Sensor               71 degrees C / 159 degrees F
FPC 3 EA4_XR1 Temp Sensor               70 degrees C / 158 degrees F
FPC 3 EA5 Temp Sensor                   55 degrees C / 131 degrees F
FPC 3 EA5_XR0 Temp Sensor               58 degrees C / 136 degrees F
FPC 3 EA5_XR1 Temp Sensor               59 degrees C / 138 degrees F
FPC 3 EA0_HMC0 Logic die                69 degrees C / 156 degrees F
FPC 3 EA0_HMC0 DRAM botm                66 degrees C / 150 degrees F
FPC 3 EA0_HMC1 Logic die                70 degrees C / 158 degrees F
FPC 3 EA0_HMC1 DRAM botm                67 degrees C / 152 degrees F
FPC 3 EA0_HMC2 Logic die                70 degrees C / 158 degrees F
FPC 3 EA0_HMC2 DRAM botm                67 degrees C / 152 degrees F
FPC 3 EA1_HMC0 Logic die                68 degrees C / 154 degrees F
FPC 3 EA1_HMC0 DRAM botm                65 degrees C / 149 degrees F
FPC 3 EA1_HMC1 Logic die                65 degrees C / 149 degrees F
FPC 3 EA1_HMC1 DRAM botm                62 degrees C / 143 degrees F
FPC 3 EA1_HMC2 Logic die                64 degrees C / 147 degrees F
FPC 3 EA1_HMC2 DRAM botm                61 degrees C / 141 degrees F
FPC 3 EA2_HMC0 Logic die                74 degrees C / 165 degrees F
FPC 3 EA2_HMC0 DRAM botm                71 degrees C / 159 degrees F
FPC 3 EA2_HMC1 Logic die                77 degrees C / 170 degrees F
FPC 3 EA2_HMC1 DRAM botm                74 degrees C / 165 degrees F
FPC 3 EA2_HMC2 Logic die                74 degrees C / 165 degrees F
FPC 3 EA2_HMC2 DRAM botm                71 degrees C / 159 degrees F
FPC 3 EA3_HMC0 Logic die                70 degrees C / 158 degrees F
FPC 3 EA3_HMC0 DRAM botm                67 degrees C / 152 degrees F
FPC 3 EA3_HMC1 Logic die                68 degrees C / 154 degrees F
FPC 3 EA3_HMC1 DRAM botm                65 degrees C / 149 degrees F
FPC 3 EA3_HMC2 Logic die                68 degrees C / 154 degrees F
```

```
FPC 3 EA3_HMC2 DRAM botm                65 degrees C / 149 degrees F
FPC 3 EA4_HMC0 Logic die                82 degrees C / 179 degrees F
FPC 3 EA4_HMC0 DRAM botm                79 degrees C / 174 degrees F
FPC 3 EA4_HMC1 Logic die                80 degrees C / 176 degrees F
FPC 3 EA4_HMC1 DRAM botm                77 degrees C / 170 degrees F
FPC 3 EA4_HMC2 Logic die                81 degrees C / 177 degrees F
FPC 3 EA4_HMC2 DRAM botm                78 degrees C / 172 degrees F
FPC 3 EA5_HMC0 Logic die                69 degrees C / 156 degrees F
FPC 3 EA5_HMC0 DRAM botm                66 degrees C / 150 degrees F
FPC 3 EA5_HMC1 Logic die                70 degrees C / 158 degrees F
FPC 3 EA5_HMC1 DRAM botm                67 degrees C / 152 degrees F
FPC 3 EA5_HMC2 Logic die                69 degrees C / 156 degrees F
FPC 3 EA5_HMC2 DRAM botm                66 degrees C / 150 degrees F
Power
        12V SS 1                    12259 mV    9538 mA  116927 mW
        12V SS 2                    12259 mV   20491 mA  251202 mW
        12V SS 3                    12298 mV    9711 mA  119433 mW
        12V SS 4                    12219 mV   20491 mA  250391 mW
        12V SS 5                    12206 mV   10447 mA  127520 mW
        VDD 1.0V_A                   1000 mV   42250 mA   42291 mW
        VDD 1.0V_B                    996 mV    8918 mA    8890 mW
        VDD 3.3V                     3301 mV   10375 mA   34255 mW
        VDD 0.9V                      897 mV    3569 mA    3202 mW
        ETH SW 1V                     983 mV    4267 mA    4195 mW
        VDD 1.8V                     1812 mV    1825 mA    3309 mW
        PVCC                          974 mV       0 mA       0 mW
        PVNN                         1003 mV       0 mA       0 mW
        V1P0                         1003 mV       0 mA       0 mW
        V1P1                         1070 mV       0 mA       0 mW
        V1P3                         1351 mV       0 mA       0 mW
        VDDQ                         1496 mV       0 mA       0 mW
        V1P8                         1809 mV       0 mA       0 mW
        VDD3V3                       3309 mV       0 mA       0 mW
        V5V0_BIAS                    4987 mV       0 mA       0 mW
        VDD12V0                     12212 mV       0 mA       0 mW
        EA0 Core 0.9V                 900 mV   38125 mA   34327 mW
        EA0 AVDD 1.0V                 999 mV   31125 mA   31094 mW
        EA0 HMC Core 0.9V             897 mV    9500 mA    8522 mW
        EA0 1.2V                     1193 mV   15430 mA   18416 mW
        EA01_HMC_VDDM 1.2V           1193 mV     313 mA     374 mW
        EA0_XR 0.906V                 913 mV   14965 mA   13671 mW
        EA1 Core 0.9V                 900 mV   39750 mA   35790 mW
        EA1 AVDD 1.0V                1000 mV   26000 mA   26000 mW
```

```
        EA1 HMC Core 0.9V            897 mV    8918 mA    8001 mW
        EA1 1.2V                    1200 mV   15779 mA   18946 mW
        EA0_PLL_1V0                 1003 mV       0 mA       0 mW
        EA0_1V04                    1019 mV       0 mA       0 mW
        EA0_2V5                     2448 mV       0 mA       0 mW
        EA0_1V5                     1470 mV       0 mA       0 mW
        EA1_PLL_1V0                 1016 mV       0 mA       0 mW
        EA1_1V04                    1035 mV       0 mA       0 mW
        EA1_2V5                     2506 mV       0 mA       0 mW
        EA1_1V5                     1483 mV       0 mA       0 mW
        EA1_XR 0.906V                908 mV   13918 mA   12639 mW
        EA2 Core 0.9V                900 mV   38625 mA   34777 mW
        EA2 AVDD 1.0V               1000 mV   26375 mA   26400 mW
        EA2 HMC Core 0.9V            897 mV    9383 mA    8418 mW
        EA2 1.2V                    1200 mV   15779 mA   18946 mW
        EA23_HMC_VDDM 1.2V          1193 mV      81 mA      97 mW
        EA2_XR 0.906V                908 mV   13918 mA   12639 mW
        EA3 Core 0.9V                899 mV   40250 mA   36201 mW
        EA3 AVDD 1.0V               1000 mV   26750 mA   26776 mW
        EA3 HMC Core 0.9V            894 mV    9267 mA    8289 mW
        EA3 1.2V                    1197 mV   16127 mA   19306 mW
        EA2_PLL_1V0                  993 mV       0 mA       0 mW
        EA2_1V04                    1045 mV       0 mA       0 mW
        EA2_2V5                     2474 mV       0 mA       0 mW
        EA2_1V5                     1490 mV       0 mA       0 mW
        EA3_PLL_1V0                  980 mV       0 mA       0 mW
        EA3_1V04                    1032 mV       0 mA       0 mW
        EA3_2V5                     2506 mV       0 mA       0 mW
        EA3_1V5                     1474 mV       0 mA       0 mW
        EA3_XR 0.906V                910 mV   14732 mA   13419 mW
        EA4 Core 0.9V                900 mV   42500 mA   38266 mW
        EA4 AVDD 1.0V               1000 mV   32250 mA   32281 mW
        EA4 HMC Core 0.9V            899 mV   10081 mA    9071 mW
        EA4 1.2V                    1193 mV   16360 mA   19526 mW
        EA45_HMC_VDDM 1.2V          1193 mV     662 mA     791 mW
        EA4_XR 0.906V                908 mV   15430 mA   14012 mW
        EA5 Core 0.9V                899 mV   37000 mA   33278 mW
        EA5 AVDD 1.0V               1000 mV   26125 mA   26150 mW
        EA5 HMC Core 0.9V            897 mV    9267 mA    8314 mW
        EA5 1.2V                    1197 mV   15662 mA   18750 mW
        EA4_PLL_1V0                 1000 mV       0 mA       0 mW
        EA4_1V04                    1029 mV       0 mA       0 mW
        EA4_2V5                     2487 mV       0 mA       0 mW
```

```
        EA4_1V5                    1496 mV        0 mA        0 mW
        EA5_PLL_1V0                1009 mV        0 mA        0 mW
        EA5_1V04                   1032 mV        0 mA        0 mW
        EA5_2V5                    2503 mV        0 mA        0 mW
        EA5_1V5                    1496 mV        0 mA        0 mW
        VDD2V5                     2483 mV        0 mA        0 mW
        VDD1V5                     1470 mV        0 mA        0 mW
        VDD1V2                     1203 mV        0 mA        0 mW
        EA5_XR 0.906V               908 mV    14500 mA    13167 mW
```

show chassis environment fpc (T320, T640, and T1600 Routers)

```
user@host> show chassis environment fpc
FPC 0 status:
  State                            Online
  Temperature Top              42 degrees C / 107 degrees F
  Temperature Bottom           36 degrees C / 96 degrees F
  Temperature MMB1             39 degrees C / 102 degrees F
  Power:
    1.8 V                    1959 mV
    2.5 V                    2495 mV
    3.3 V                    3344 mV
    5.0 V                    5047 mV
    1.8 V bias               1787 mV
    3.3 V bias               3291 mV
    5.0 V bias               4998 mV
    8.0 V bias               7343 mV
  BUS Revision                 40
FPC 1 status:
  State                            Online
  Temperature Top              42 degrees C / 107 degrees F
  Temperature Bottom           39 degrees C / 102 degrees F
  Temperature MMB1             40 degrees C / 104 degrees F
  Power:
    1.8 V                    1956 mV
    2.5 V                    2498 mV
    3.3 V                    3340 mV
    5.0 V                    5023 mV
    1.8 V bias               1782 mV
    3.3 V bias               3277 mV
    5.0 V bias               4989 mV
```

```
    8.0 V bias               7289 mV
  BUS Revision                 40
FPC 2 status:
  State                          Online
  Temperature Top              43 degrees C / 109 degrees F
  Temperature Bottom           39 degrees C / 102 degrees F
  Temperature MMB1             41 degrees C / 105 degrees F
  Power:
    1.8 V                    1963 mV
    2.5 V                    2503 mV
    3.3 V                    3340 mV
    5.0 V                    5042 mV
    1.8 V bias               1797 mV
    3.3 V bias               3311 mV
    5.0 V bias               5013 mV
    8.0 V bias               7221 mV
  BUS Revision                 40
```

show chassis environment fpc (T4000 Router)

```
user@host> show chassis environment fpc
FPC 0 status:
  State                      Online
  Fan Intake                 34 degrees C / 93 degrees F
  Fan Exhaust                48 degrees C / 118 degrees F
  PMB                        47 degrees C / 116 degrees F
  LMB0                       50 degrees C / 122 degrees F
  LMB1                       41 degrees C / 105 degrees F
  LMB2                       35 degrees C / 95 degrees F
  PFE1 LU2                   46 degrees C / 114 degrees F
  PFE1 LU0                   41 degrees C / 105 degrees F
  PFE0 LU0                   57 degrees C / 134 degrees F
  XF1                        47 degrees C / 116 degrees F
  XF0                        52 degrees C / 125 degrees F
  XM1                        41 degrees C / 105 degrees F
  XM0                        50 degrees C / 122 degrees F
  PFE0 LU1                   56 degrees C / 132 degrees F
  PFE0 LU2                   45 degrees C / 113 degrees F
  PFE1 LU1                   37 degrees C / 98 degrees F
  Power 1
    1.0 V                     991 mV
```

```
    1.2 V bias                1195 mV
    1.8 V                     1788 mV
    2.5 V                     2483 mV
    3.3 V                     3289 mV
    3.3 V bias                3299 mV
    12.0 V A                 10608 mV
    12.0 V B                 10637 mV
  Power 2
    0.9 V                      881 mV
    0.9 V PFE0                 916 mV
    0.9 V PFE1                 903 mV
    1.0 V PFE0                1012 mV
    1.0 V PFE1                1002 mV
    1.1 V                     1095 mV
    1.5 V_0                   1494 mV
    1.5 V_1                   1479 mV
  Power 3
    1.0 V PFE0                1000 mV
    1.0 V PFE1                1002 mV
    1.0 V PFE0 *               995 mV
    1.0 V PFE1 *               995 mV
    1.8 V PFE 0               1788 mV
    1.8 V PFE 1               1789 mV
    2.5 V                     2482 mV
    12.0 V                   11614 mV
  Power 4
    1.0 V PFE0 LU0            1003 mV
    1.0 V PFE1 LU0            1003 mV
    1.0 V PFE1 LU2            1004 mV
    1.0 V PFE0 LU0 *           995 mV
    1.0 V PFE1 LU0 *           998 mV
    1.0 V PFE1 LU2 *           996 mV
    12.0 V                   11643 mV
    12.0 V C                 11711 mV
  Power (Base/PMB/MMB)
    LMB0 VDD2V5               2488 mV
    LMB0 VDD1V8               1788 mV
    LMB0 VDD1V5               1496 mV
    LMB0 PFE0 LU0 AVDD1V0     1002 mV
    LMB0 PFE0 LU0 VDD1V0      1000 mV
    LMB0 VDD12V0             10752 mV
    LMB1 VDD2V5               2472 mV
    LMB1 VDD1V8               1792 mV
```

```
    LMB1 VDD1V5               1480 mV
    LMB1 PFE0 LU2 AVDD1V0      994 mV
    LMB1 PFE0 LU2 VDD1V0      1002 mV
    LMB1 VDD12V0             10800 mV
    LMB2 VDD2V5               2472 mV
    LMB2 VDD1V8               1792 mV
    LMB2 VDD1V5               1486 mV
    LMB2 PFE1 LU1 AVDD1V0      996 mV
    LMB2 PFE1 LU1 VDD1V0       998 mV
    LMB2 VDD12V0             10704 mV
    PMB 1.05v                 1049 mV
    PMB 1.5v                  1500 mV
    PMB 2.5v                  2500 mV
    PMB 3.3v                  3299 mV
  Bus Revision               113
FPC 3 status:
  State                      Online
  Fan Intake                 37 degrees C / 98 degrees F
  Fan Exhaust                51 degrees C / 123 degrees F
  PMB                        43 degrees C / 109 degrees F
  LMB0                       57 degrees C / 134 degrees F
  LMB1                       54 degrees C / 129 degrees F
  LMB2                       38 degrees C / 100 degrees F
  PFE1 LU2                   63 degrees C / 145 degrees F
  PFE1 LU0                   45 degrees C / 113 degrees F
  PFE0 LU0                   69 degrees C / 156 degrees F
  XF1                        62 degrees C / 143 degrees F
  XF0                        63 degrees C / 145 degrees F
  XM1                        43 degrees C / 109 degrees F
  XM0                        67 degrees C / 152 degrees F
  PFE0 LU1                   63 degrees C / 145 degrees F
  PFE0 LU2                   66 degrees C / 150 degrees F
  PFE1 LU1                   41 degrees C / 105 degrees F
  Power 1
    1.0 V                     1002 mV
    1.2 V bias                1201 mV
    1.8 V                     1785 mV
    2.5 V                     2485 mV
    3.3 V                     3288 mV
    3.3 V bias                3285 mV
    12.0 V A                 10412 mV
    12.0 V B                 10515 mV
  Power 2
```

```
    0.9 V                       882 mV
    0.9 V PFE0                  920 mV
    0.9 V PFE1                  905 mV
    1.0 V PFE0                 1015 mV
    1.0 V PFE1                 1001 mV
    1.1 V                      1094 mV
    1.5 V_0                    1495 mV
    1.5 V_1                    1478 mV
  Power 3
    0.92 V PFE1                 998 mV
    1.0 V PFE0                  997 mV
    1.0 V PFE0 *                992 mV
    1.0 V PFE1 *                991 mV
    1.8 V PFE 0                1780 mV
    1.8 V PFE 1                1797 mV
    2.5 V                      2492 mV
    12.0 V                    11604 mV
  Power 4
    1.0 V PFE0 LU0              1003 mV
    1.0 V PFE1 LU0              1004 mV
    1.0 V PFE1 LU2              1003 mV
    1.0 V PFE0 LU0 *            1000 mV
    1.0 V PFE1 LU0 *            1001 mV
    1.0 V PFE1 LU2 *            1003 mV
    12.0 V                    11653 mV
    12.0 V C                  11672 mV
  Power (Base/PMB/MMB)
    LMB0 VDD2V5                 2512 mV
    LMB0 VDD1V8                 1790 mV
    LMB0 VDD1V5                 1500 mV
    LMB0 PFE0 LU0 AVDD1V0       1004 mV
    LMB0 PFE0 LU0 VDD1V0        1002 mV
    LMB0 VDD12V0               10608 mV
    LMB1 VDD2V5                 2472 mV
    LMB1 VDD1V8                 1788 mV
    LMB1 VDD1V5                 1480 mV
    LMB1 PFE0 LU2 AVDD1V0       1000 mV
    LMB1 PFE0 LU2 VDD1V0        1004 mV
    LMB1 VDD12V0               10672 mV
    LMB2 VDD2V5                 2488 mV
    LMB2 VDD1V8                 1798 mV
    LMB2 VDD1V5                 1494 mV
    LMB2 PFE1 LU1 AVDD1V0       1000 mV
```

```
    LMB2 PFE1 LU1 VDD1V0      1004 mV
    LMB2 VDD12V0             10528 mV
    PMB 1.05v                 1050 mV
    PMB 1.5v                  1500 mV
    PMB 2.5v                  2499 mV
    PMB 3.3v                  3299 mV
  Bus Revision               113
FPC 5 status:
  State                      Online
  Temperature Top            39 degrees C / 102 degrees F
  Temperature Bottom         38 degrees C / 100 degrees F
  Power
    1.8 V                     1804 mV
    1.8 V bias                1802 mV
    3.3 V                     3294 mV
    3.3 V bias                3277 mV
    5.0 V bias                5008 mV
    5.0 V TOP                 5067 mV
    8.0 V bias                6642 mV
  Power (Base/PMB/MMB)
    1.2 V                     1202 mV
    1.5 V                     1504 mV
    5.0 V BOT                 5079 mV
    12.0 V TOP Base          11848 mV
    12.0 V BOT Base          11780 mV
    1.1 V PMB                 1111 mV
    1.2 V PMB                 1189 mV
    1.5 V PMB                 1494 mV
    1.8 V PMB                 1819 mV
    2.5 V PMB                 2503 mV
    3.3 V PMB                 3294 mV
    5.0 V PMB                 5035 mV
    12.0  V PMB              11788 mV
    0.75 MMB TOP               766 mV
    1.5 V MMB TOP             1484 mV
    1.8 V MMB TOP             1772 mV
    2.5 V MMB TOP             2485 mV
    1.2 V MMB TOP             1137 mV
    5.0 V MMB TOP             4946 mV
    12.0 V MMB TOP           11772 mV
    3.3 V MMB TOP             3289 mV
    0.75 MMB BOT               759 mV
    1.5 V MMB BOT             1482 mV
```

```
    1.8 V MMB BOT             1792 mV
    2.5 V MMB BOT             2490 mV
    1.2 V MMB BOT             1145 mV
    5.0 V MMB BOT             4922 mV
    12.0 V MMB BOT           11625 mV
    3.3 V MMB BOT             3282 mV
    APS 00                    2495 mV
    APS 01                    3308 mV
    APS 02                    3301 mV
    5.0 V PIC 0               4967 mV
    APS 10                    2512 mV
    APS 11                    3316 mV
    APS 12                    3304 mV
    5.0 V PIC 1               5081 mV
  Bus Revision                49
FPC 6 status:
  State                       Online
  Fan Intake                  34 degrees C / 93 degrees F
  Fan Exhaust                 49 degrees C / 120 degrees F
  PMB                         40 degrees C / 104 degrees F
  LMB0                        60 degrees C / 140 degrees F
  LMB1                        58 degrees C / 136 degrees F
  LMB2                        40 degrees C / 104 degrees F
  PFE1 LU2                    69 degrees C / 156 degrees F
  PFE1 LU0                    45 degrees C / 113 degrees F
  PFE0 LU0                    71 degrees C / 159 degrees F
  XF1                         58 degrees C / 136 degrees F
  XF0                         65 degrees C / 149 degrees F
  XM1                         40 degrees C / 104 degrees F
  XM0                         66 degrees C / 150 degrees F
  PFE0 LU1                    69 degrees C / 156 degrees F
  PFE0 LU2                    68 degrees C / 154 degrees F
  PFE1 LU1                    42 degrees C / 107 degrees F
  Power 1
    1.0 V                      998 mV
    1.2 V bias                1191 mV
    1.8 V                     1781 mV
    2.5 V                     2487 mV
    3.3 V                     3302 mV
    3.3 V bias                3300 mV
    12.0 V A                 10388 mV
    12.0 V B                 10388 mV
  Power 2
```

```
    0.9 V                       902 mV
    0.9 V PFE0                  921 mV
    0.9 V PFE1                  907 mV
    1.0 V PFE0                  996 mV
    1.0 V PFE1                  974 mV
    1.1 V                      1095 mV
    1.5 V_0                    1495 mV
    1.5 V_1                    1478 mV
  Power 3
    1.0 V PFE0                  997 mV
    1.0 V PFE1                  998 mV
    1.0 V PFE0 *                993 mV
    1.0 V PFE1 *                991 mV
    1.8 V PFE 0                1796 mV
    1.8 V PFE 1                1789 mV
    2.5 V                      2465 mV
    12.0 V                    11609 mV
  Power 4
    1.0 V PFE0 LU0             1003 mV
    1.0 V PFE1 LU0             1006 mV
    1.0 V PFE1 LU2             1002 mV
    1.0 V PFE0 LU0 *           1000 mV
    1.0 V PFE1 LU0 *            998 mV
    1.0 V PFE1 LU2 *            998 mV
    12.0 V                    11638 mV
    12.0 V C                  11702 mV
  Power (Base/PMB/MMB)
    LMB0 VDD2V5                2484 mV
    LMB0 VDD1V8                1780 mV
    LMB0 VDD1V5                1496 mV
    LMB0 PFE0 LU0 AVDD1V0       998 mV
    LMB0 PFE0 LU0 VDD1V0       1004 mV
    LMB0 VDD12V0              10528 mV
    LMB1 VDD2V5                2472 mV
    LMB1 VDD1V8                1776 mV
    LMB1 VDD1V5                1474 mV
    LMB1 PFE0 LU2 AVDD1V0       994 mV
    LMB1 PFE0 LU2 VDD1V0       1004 mV
    LMB1 VDD12V0              10544 mV
    LMB2 VDD2V5                2476 mV
    LMB2 VDD1V8                1790 mV
    LMB2 VDD1V5                1492 mV
    LMB2 PFE1 LU1 AVDD1V0       996 mV
```

```
    LMB2 PFE1 LU1 VDD1V0      1010 mV
    LMB2 VDD12V0             10528 mV
    PMB 1.05v                 1050 mV
    PMB 1.5v                  1499 mV
    PMB 2.5v                  2500 mV
    PMB 3.3v                  3300 mV
  Bus Revision               80
```

show chassis environment fpc lcc (TX Matrix Router)

```
user@host> show chassis environment fpc lcc
0
lcc0-re0:
--------------------------------------------------------------------------
FPC 1 status:
  State                           Online
  Temperature Top              30 degrees C / 86 degrees F
  Temperature Bottom           25 degrees C / 77 degrees F
  Temperature MMB0                Absent
  Temperature MMB1             27 degrees C / 80 degrees F
  Power:
    1.8 V                     1813 mV
    2.5 V                     2504 mV
    3.3 V                     3338 mV
    5.0 V                     5037 mV
    1.8 V bias                1797 mV
    3.3 V bias                3301 mV
    5.0 V bias                5013 mV
    8.0 V bias                7345 mV
  BUS Revision                  40
FPC 2 status:
  State                           Online
  Temperature Top              37 degrees C / 98 degrees F
  Temperature Bottom           26 degrees C / 78 degrees F
  Temperature MMB0             32 degrees C / 89 degrees F
  Temperature MMB1             27 degrees C / 80 degrees F
  Power:
    1.8 V                     1791 mV
    2.5 V                     2517 mV
    3.3 V                     3308 mV
    5.0 V                     5052 mV
```

```
    1.8 V bias               1797 mV
    3.3 V bias               3289 mV
    5.0 V bias               4991 mV
    8.0 V bias               7477 mV
  BUS Revision                 40
```

show chassis environment fpc lcc (TX Matrix Plus Router)

```
user@host> show chassis environment fpc lcc
0
lcc0-re0:
--------------------------------------------------------------------------
FPC 1 status:
  State                      Online
  Temperature Top            46 degrees C / 114 degrees F
  Temperature Bottom         47 degrees C / 116 degrees F
  Power
    1.8 V                     1788 mV
    1.8 V bias                1787 mV
    3.3 V                     3321 mV
    3.3 V bias                3306 mV
    5.0 V bias                5018 mV
    5.0 V TOP                 5037 mV
    8.0 V bias                7223 mV
  Power (Base/PMB/MMB)
    1.2 V                     1205 mV
    1.5 V                     1503 mV
    5.0 V BOT                 5084 mV
    12.0 V TOP Base          11775 mV
    12.0 V BOT Base          11794 mV
    1.1 V PMB                 1108 mV
    1.2 V PMB                 1196 mV
    1.5 V PMB                 1499 mV
    1.8 V PMB                 1811 mV
    2.5 V PMB                 2515 mV
    3.3 V PMB                 3318 mV
    5.0 V PMB                 5030 mV
    12.0  V PMB              11832 mV
    0.75 MMB TOP               752 mV
    1.5 V MMB TOP             1489 mV
    1.8 V MMB TOP             1782 mV
```

```
    2.5 V MMB TOP             2498 mV
    1.2 V MMB TOP             1155 mV
    5.0 V MMB TOP             4902 mV
    12.0 V MMB TOP           11721 mV
    3.3 V MMB TOP             3316 mV
    0.75 MMB BOT               754 mV
    1.5 V MMB BOT             1482 mV
    1.8 V MMB BOT             1758 mV
    2.5 V MMB BOT             2488 mV
    1.2 V MMB BOT             1157 mV
    5.0 V MMB BOT             4962 mV
    12.0 V MMB BOT           11691 mV
    3.3 V MMB BOT             3308 mV
    APS 00                    1484 mV
    APS 01                    2503 mV
    APS 02                    3313 mV
    5.0 V PIC 0               5025 mV
    APS 10                    1501 mV
    APS 11                    2466 mV
    APS 12                    3311 mV
    5.0 V PIC 1               5081 mV
  Bus Revision               49
```

show chassis environment fpc (QFX Series and OCX Series)

```
user@switch> show chassis environment fpc 0
FPC 0 status:
  State                      Online
  Temperature                42 degrees C / 107 degrees F
```

show chassis environment fpc interconnect-device (QFabric Systems)

```
user@switch> show chassis environment fpc interconnect-device
interconnect1 0
FC 0 FPC 0 status:
  State                      Online
  Left Intake Temperature    24 degrees C / 75 degrees F
  Right Intake Temperature   24 degrees C / 75 degrees F
  Left Exhaust Temperature   27 degrees C / 80 degrees F
  Right Exhaust Temperature  27 degrees C / 80 degrees F
```

```
  Power
    BIAS 3V3                  3330 mV
    VDD 3V3                   3300 mV
    VDD 2V5                   2502 mV
    VDD 1V5                   1496 mV
    VDD 1V2                   1194 mV
    VDD 1V0                   1000 mV
    SW0 VDD  1V0              1020 mV
    SW0 CVDD 1V025            1032 mV
    SW1 VDD  1V0              1022 mV
    SW1 CVDD 1V025            1030 mV
    VDD 12V0 DIV3_33          3414 mV
```

show chassis environment fpc 5(PTX3000 Packet Transport Router)

```
user@host> show chassis environment fpc 5
FPC 5 status:
  State                       Online
  Intake Temperature          31 degrees C / 87 degrees F
  Exhaust Temperature         41 degrees C / 105 degrees F
  Power
    FPC 12.0v                 12221 mV
    FPC VCC 0.5-1.3v           1640 mV
    FPC VNN 0.5-1.3v           1640 mV
    FPC 1.0v                   1640 mV
    FPC 1.1v                   1640 mV
    FPC 1.35v                  1640 mV
    FPC VDDQ 1.5v              1640 mV
    FPC 1.8v                   1640 mV
    FPC 3.3v                   3280 mV
    FPC 5.0v bias              5143 mV
    FPC 5.0v usb               5143 mV
    FPC VCC 12.0v             12289 mV
    FPC Vref 3.3v              3280 mV
    MAIN 12.0v-i               2265 mA
```

show chassis environment fpc 0 (PTX5000 Packet Transport Router)

```
user@host> show chassis environment fpc 0
FPC 0 status:
```

```
State                       Online
PMB Temperature             35 degrees C / 95 degrees F
Intake Temperature          33 degrees C / 91 degrees F
Exhaust A Temperature       51 degrees C / 123 degrees F
Exhaust B Temperature       43 degrees C / 109 degrees F
TL0 Temperature             48 degrees C / 118 degrees F
TQ0 Temperature             53 degrees C / 127 degrees F
TL1 Temperature             56 degrees C / 132 degrees F
TQ1 Temperature             58 degrees C / 136 degrees F
TL2 Temperature             55 degrees C / 131 degrees F
TQ2 Temperature             57 degrees C / 134 degrees F
TL3 Temperature             59 degrees C / 138 degrees F
TQ3 Temperature             59 degrees C / 138 degrees F
Power
  PMB   1.05v               1049 mV
  PMB   1.5v                1500 mV
  PMB   2.5v                2500 mV
  PMB   3.3v                3299 mV
  PFE0  1.5v                1500 mV
  PFE0  1.0v                 999 mV
  TQ0   0.9v                 900 mV
  TL0   0.9v                 900 mV
  PFE1  1.5v                1499 mV
  PFE1  1.0v                 999 mV
  TQ1   0.9v                 899 mV
  TL1   0.9v                 900 mV
  PFE2  1.5v                1500 mV
  PFE2  1.0v                1000 mV
  TQ2   0.9v                 900 mV
  TL2   0.9v                 900 mV
  PFE3  1.5v                1499 mV
  PFE3  1.0v                1000 mV
  TQ3   0.9v                 900 mV
  TL3   0.9v                 900 mV
  Bias  3.3v                3327 mV
  FPC   3.3v                3300 mV
  FPC   2.5v                2500 mV
  SAM   0.9v                 900 mV
  A    12.0v                2014 mV
  B    12.0v                2030 mV
```

show chassis environment fpc 07 (PTX5000 Packet Transport Router with FPC2-PTX-P1A)

```
user@host> show chassis environment fpc 07
FPC 7 status:
  State                       Online
  PMB TEMP0 Temperature       32 degrees C / 89 degrees F
  PMB TEMP1 Temperature       28 degrees C / 82 degrees F
  PMB CPU Temperature         46 degrees C / 114 degrees F
  Intake Temperature          35 degrees C / 95 degrees F
  Exhaust A Temperature       55 degrees C / 131 degrees F
  Exhaust B Temperature       54 degrees C / 129 degrees F
  TL5 Temperature             59 degrees C / 138 degrees F
  TQ5 Temperature             57 degrees C / 134 degrees F
  TL6 Temperature             57 degrees C / 134 degrees F
  TQ6 Temperature             51 degrees C / 123 degrees F
  TL1 Temperature             76 degrees C / 168 degrees F
  TQ1 Temperature             58 degrees C / 136 degrees F
  TL2 Temperature             75 degrees C / 167 degrees F
  TQ2 Temperature             57 degrees C / 134 degrees F
  TL4 Temperature             52 degrees C / 125 degrees F
  TQ4 Temperature             66 degrees C / 150 degrees F
  TL7 Temperature             52 degrees C / 125 degrees F
  TQ7 Temperature             60 degrees C / 140 degrees F
  TL0 Temperature             72 degrees C / 161 degrees F
  TQ0 Temperature             73 degrees C / 163 degrees F
  TL3 Temperature             64 degrees C / 147 degrees F
  TQ3 Temperature             70 degrees C / 158 degrees F
  Power
    PMB   1.05v               1049 mV
    PMB   3.3v                3299 mV
    PMB   1.1v-a              1100 mV
    PMB   1.5v                1499 mV
    PMB   1.1v-b              1100 mV
    Base  3.3v                3300 mV
    FPC Base  2.5v            2499 mV
    TL1   0.9v                 897 mV
    TQ1   0.9v                 897 mV
    PFE1  1.0v                 999 mV
    PFE1  1.5v                1499 mV
    TL2   0.9v                 897 mV
    TQ2   0.9v                 897 mV
    PFE2  1.0v                 999 mV
```

```
    PFE2  1.5v                1499 mV
    FPC Base  1.0v            1000 mV
    FPC Base  1.2v            1199 mV
    TL5   0.9v                 898 mV
    TQ5   0.9v                 898 mV
    PFE5  1.0v                1000 mV
    PFE5  1.5v                1500 mV
    TL6   0.9v                 897 mV
    TQ6   0.9v                 897 mV
    PFE6  1.0v                1000 mV
    PFE6  1.5v                1499 mV
    Mezz Base  2.5v           2500 mV
    TL0   0.9v                 896 mV
    TQ0   0.9v                 896 mV
    PFE0  1.0v                 999 mV
    PFE0  1.5v                1499 mV
```

show chassis environment fpc (PTX10008 router)

```
user@host> show chassis environment fpc
FPC 0 status:
  State                       Online
  FPC 0 Intake-A Temp Sensor 37 degrees C / 98 degrees F
  FPC 0 Intake-B Temp Sensor 34 degrees C / 93 degrees F
  FPC 0 Exhaust-A Temp Sensor37 degrees C / 98 degrees F
  FPC 0 Exhaust-B Temp Sensor38 degrees C / 100 degrees F
  FPC 0 Exhaust-C Temp Sensor40 degrees C / 104 degrees F
  FPC 0 PE0 Temp Sensor      41 degrees C / 105 degrees F
  FPC 0 PE1 Temp Sensor      42 degrees C / 107 degrees F
  FPC 0 PE2 Temp Sensor      44 degrees C / 111 degrees F
  FPC 0 LCPU Temp Sensor     40 degrees C / 104 degrees F
  Power
         PE0 Core 0.9V               872 mV   28777 mA   25146 mW
         PE0 HMC0 Core 0.9V          899 mV   10359 mA    9328 mW
         PE1 Core 0.9V               896 mV   29476 mA   26414 mW
         PE1 HMC0 Core 0.9V          899 mV   10218 mA    9187 mW
         PE2 Core 0.9V               872 mV   28839 mA   25199 mW
         PE2 HMC0 Core 0.9V          900 mV   10296 mA    9265 mW
         PE0 Serdes 1.0V            1020 mV   29000 mA   29593 mW
         PE1 Serdes 1.0V            1019 mV   29109 mA   29718 mW
         PE2 Serdes 1.0V            1019 mV   28484 mA   29078 mW
```

```
          LCPU Platform 1.1V          1099 mV    3515 mA    3867 mW
          LCPU Core 1.0V              1000 mV    8750 mA    8703 mW
          PHY VDD B 1.0V              1000 mV   17062 mA   17031 mW
          PHY VDD A 1.0V               999 mV   15640 mA   15625 mW
          BCM Core 1.0V                999 mV    7054 mA    7054 mW
          BCM PEX 1.0V                 999 mV    3562 mA    3558 mW
          HMC Core 1.2V               1199 mV    1280 mA    1513 mW
          HMC Serdes 1.2V             1199 mV   32937 mA   39500 mW
          VDD 1.5V                    1500 mV    2824 mA    4234 mW
          VDD 2.5V                    2449 mV    3812 mA    9343 mW
          VDD 3.3V                    3299 mV    5085 mA   16796 mW
          12V                        12259 mV   29609 mA  368196 mW
FPC 1 status:
  State                       Online
  FPC 1 Intake-A Temp Sensor 37 degrees C / 98 degrees F
  FPC 1 Intake-B Temp Sensor 34 degrees C / 93 degrees F
  FPC 1 Exhaust-A Temp Sensor38 degrees C / 100 degrees F
  FPC 1 Exhaust-B Temp Sensor38 degrees C / 100 degrees F
  FPC 1 Exhaust-C Temp Sensor40 degrees C / 104 degrees F
  FPC 1 PE0 Temp Sensor      41 degrees C / 105 degrees F
  FPC 1 PE1 Temp Sensor      42 degrees C / 107 degrees F
  FPC 1 PE2 Temp Sensor      44 degrees C / 111 degrees F
  FPC 1 LCPU Temp Sensor     39 degrees C / 102 degrees F
  Power
          PE0 Core 0.9V                898 mV   29351 mA   26421 mW
          PE0 HMC0 Core 0.9V           899 mV    9734 mA    8750 mW
          PE1 Core 0.9V                873 mV   28539 mA   24933 mW
          PE1 HMC0 Core 0.9V           899 mV    9937 mA    8937 mW
          PE2 Core 0.9V                875 mV   28906 mA   25316 mW
          PE2 HMC0 Core 0.9V           899 mV   10140 mA    9125 mW
          PE0 Serdes 1.0V             1019 mV   28312 mA   28890 mW
          PE1 Serdes 1.0V             1020 mV   28656 mA   29234 mW
          PE2 Serdes 1.0V             1020 mV   29437 mA   30015 mW
          LCPU Platform 1.1V          1100 mV    4617 mA    5078 mW
          LCPU Core 1.0V              1000 mV    8781 mA    8781 mW
          PHY VDD B 1.0V              1000 mV   15953 mA   15984 mW
          PHY VDD A 1.0V              1000 mV   15484 mA   15484 mW
          BCM Core 1.0V                999 mV    7945 mA    7937 mW
          BCM PEX 1.0V                 999 mV    3515 mA    3515 mW
          HMC Core 1.2V               1199 mV    1269 mA    1521 mW
          HMC Serdes 1.2V             1199 mV   33000 mA   39593 mW
          VDD 1.5V                    1500 mV    2691 mA    4062 mW
          VDD 2.5V                    2449 mV    3582 mA    8781 mW
```

```
        VDD 3.3V                    3300 mV    2563 mA    8458 mW
        12V                        12311 mV   29002 mA  357577 mW
FPC 2 status:
  State                      Online
  FPC 2 Intake-A Temp Sensor 43 degrees C / 109 degrees F
  FPC 2 Intake-B Temp Sensor 30 degrees C / 86 degrees F
  FPC 2 Exhaust-A Temp Sensor50 degrees C / 122 degrees F
  FPC 2 Exhaust-B Temp Sensor52 degrees C / 125 degrees F
  FPC 2 Exhaust-C Temp Sensor51 degrees C / 123 degrees F
  FPC 2 PE0 Temp Sensor      48 degrees C / 118 degrees F
  FPC 2 PE1 Temp Sensor      56 degrees C / 132 degrees F
  FPC 2 PE2 Temp Sensor      48 degrees C / 118 degrees F
  FPC 2 PE3 Temp Sensor      57 degrees C / 134 degrees F
  FPC 2 PE4 Temp Sensor      48 degrees C / 118 degrees F
  FPC 2 PE5 Temp Sensor      60 degrees C / 140 degrees F
  FPC 2 LCPU Temp Sensor     47 degrees C / 116 degrees F
  Power
        PE0 Core 0.9V                874 mV   28117 mA   24617 mW
        PE1 Core 0.9V                899 mV   29601 mA   26632 mW
        PE0 Serdes 1.0V             1019 mV   41031 mA   41843 mW
        PE1 Serdes 1.0V             1019 mV   35656 mA   36343 mW
        PE0 HMC Core 0.9V            899 mV    8125 mA    7312 mW
        PE0,1 HMC Memory 1.2V       1199 mV     565 mA     688 mW
        PE1 HMC Core 0.9V            899 mV    7921 mA    7125 mW
        PE0,1 HMC Serdes 1.2V       1199 mV   21281 mA   25562 mW
        PE2 Core 0.9V                899 mV   29187 mA   26242 mW
        PE3 Core 0.9V                899 mV   29976 mA   27074 mW
        PE2 Serdes 1.0V             1019 mV   38562 mA   39343 mW
        PE3 Serdes 1.0V             1019 mV   34937 mA   35656 mW
        PE2 HMC Core 0.9V            899 mV    8093 mA    7281 mW
        PE2,3 HMC Memory 1.2V       1199 mV     610 mA     732 mW
        PE3 HMC Core 0.9V            899 mV    7710 mA    6937 mW
        PE2,3 HMC Serdes 1.2V       1199 mV   21500 mA   25812 mW
        VDD 3.3V                    3300 mV    7937 mA   26187 mW
        VDD 1.5V                    1499 mV    3234 mA    4851 mW
        VDD 2.5V                    2449 mV    4539 mA   11109 mW
        PE4 Core 0.9V                874 mV   29914 mA   26183 mW
        PE5 Core 0.9V                874 mV   29820 mA   26031 mW
        PE4 Serdes 1.0V             1020 mV   43968 mA   44843 mW
        PE5 Serdes 1.0V             1019 mV   27453 mA   28031 mW
        PE4 HMC Core 0.9V            900 mV    7937 mA    7140 mW
        PE4,5 HMC Memory 1.2V       1200 mV    1185 mA    1421 mW
        PE5 HMC Core 0.9V            899 mV    8718 mA    7843 mW
```

```
          PE4,5 HMC Serdes 1.2V       1199 mV   21125 mA   25343 mW
          LCPU platform 1.1V          1099 mV    3777 mA    4156 mW
          LCPU core 1.0V              1000 mV    9062 mA    9062 mW
          BCM core 1.0V               1000 mV    9328 mA    9328 mW
          BCM & PEX Serdes 1.0V        999 mV    4125 mA    4125 mW
          12V                        12311 mV   53347 mA  660345 mW
FPC 3 status:
  State                      Online
  FPC 3 Intake-A Temp Sensor 43 degrees C / 109 degrees F
  FPC 3 Intake-B Temp Sensor 30 degrees C / 86 degrees F
  FPC 3 Exhaust-A Temp Sensor48 degrees C / 118 degrees F
  FPC 3 Exhaust-B Temp Sensor49 degrees C / 120 degrees F
  FPC 3 Exhaust-C Temp Sensor47 degrees C / 116 degrees F
  FPC 3 PE0 Temp Sensor      48 degrees C / 118 degrees F
  FPC 3 PE1 Temp Sensor      55 degrees C / 131 degrees F
  FPC 3 PE2 Temp Sensor      47 degrees C / 116 degrees F
  FPC 3 PE3 Temp Sensor      54 degrees C / 129 degrees F
  FPC 3 PE4 Temp Sensor      48 degrees C / 118 degrees F
  FPC 3 PE5 Temp Sensor      58 degrees C / 136 degrees F
  FPC 3 LCPU Temp Sensor     46 degrees C / 114 degrees F
  Power
          PE0 Core 0.9V                899 mV   29695 mA   26718 mW
          PE1 Core 0.9V                899 mV   29695 mA   26710 mW
          PE0 Serdes 1.0V             1020 mV   40156 mA   40906 mW
          PE1 Serdes 1.0V             1020 mV   35281 mA   35968 mW
          PE0 HMC Core 0.9V            900 mV    7492 mA    6742 mW
          PE0,1 HMC Memory 1.2V       1199 mV     569 mA     683 mW
          PE1 HMC Core 0.9V            899 mV    7570 mA    6812 mW
          PE0,1 HMC Serdes 1.2V       1199 mV   20562 mA   24656 mW
          PE2 Core 0.9V                899 mV   29734 mA   26765 mW
          PE3 Core 0.9V                900 mV   29960 mA   26968 mW
          PE2 Serdes 1.0V             1019 mV   37718 mA   38500 mW
          PE3 Serdes 1.0V             1020 mV   35250 mA   35937 mW
          PE2 HMC Core 0.9V            899 mV    7750 mA    6976 mW
          PE2,3 HMC Memory 1.2V       1200 mV     546 mA     656 mW
          PE3 HMC Core 0.9V            899 mV    7718 mA    6945 mW
          PE2,3 HMC Serdes 1.2V       1199 mV   20625 mA   24750 mW
          VDD 3.3V                    3299 mV    5917 mA   19515 mW
          VDD 1.5V                    1499 mV    4015 mA    6015 mW
          VDD 2.5V                    2449 mV    4335 mA   10625 mW
          PE4 Core 0.9V                899 mV   29835 mA   26875 mW
          PE5 Core 0.9V                924 mV   30554 mA   28277 mW
          PE4 Serdes 1.0V             1019 mV   43281 mA   44187 mW
```

```
          PE5 Serdes 1.0V             1020 mV   27140 mA   27703 mW
          PE4 HMC Core 0.9V            899 mV    7476 mA    6726 mW
          PE4,5 HMC Memory 1.2V       1199 mV     531 mA     637 mW
          PE5 HMC Core 0.9V            899 mV    7539 mA    6781 mW
          PE4,5 HMC Serdes 1.2V       1199 mV   20375 mA   24468 mW
          LCPU platform 1.1V          1099 mV    3453 mA    3796 mW
          LCPU core 1.0V               999 mV    8984 mA    8984 mW
          BCM core 1.0V                999 mV    7929 mA    7921 mW
          BCM & PEX Serdes 1.0V       1000 mV    4046 mA    4046 mW
          12V                        12351 mV   51918 mA  644880 mW
FPC 5 status:
  State                      Online
  FPC 5 Intake-A Temp Sensor Failed
  FPC 5 Intake-B Temp Sensor Failed
  FPC 5 Exhaust-A Temp Sensor41 degrees C / 105 degrees F
  FPC 5 Exhaust-B Temp Sensor41 degrees C / 105 degrees F
  FPC 5 Exhaust-C Temp Sensor42 degrees C / 107 degrees F
  FPC 5 PE0 Temp Sensor      47 degrees C / 116 degrees F
  FPC 5 PE1 Temp Sensor      49 degrees C / 120 degrees F
  FPC 5 PE2 Temp Sensor      53 degrees C / 127 degrees F
  FPC 5 LCPU Temp Sensor     Failed
  Power
          PE0 Core 0.9V                923 mV   30976 mA   28578 mW
          PE0 HMC0 Core 0.9V           899 mV   10093 mA    9078 mW
          PE1 Core 0.9V                897 mV   29398 mA   26414 mW
          PE1 HMC0 Core 0.9V           899 mV    9734 mA    8750 mW
          PE2 Core 0.9V                922 mV   30226 mA   27886 mW
          PE2 HMC0 Core 0.9V           899 mV    9984 mA    8968 mW
          PE0 Serdes 1.0V             1019 mV   29296 mA   29890 mW
          PE1 Serdes 1.0V             1020 mV   28687 mA   29296 mW
          PE2 Serdes 1.0V             1020 mV   28187 mA   28765 mW
          LCPU Platform 1.1V          1100 mV    3664 mA    4031 mW
          LCPU Core 1.0V               999 mV    9125 mA    9125 mW
          PHY VDD B 1.0V               999 mV   15593 mA   15593 mW
          PHY VDD A 1.0V              1000 mV   15453 mA   15453 mW
          BCM Core 1.0V                999 mV    7773 mA    7765 mW
          BCM PEX 1.0V                1000 mV    3460 mA    3464 mW
          HMC Core 1.2V               1199 mV    1328 mA    1628 mW
          HMC Serdes 1.2V             1199 mV   32203 mA   38625 mW
          VDD 1.5V                    1499 mV    2675 mA    4007 mW
          VDD 2.5V                    2450 mV    3675 mA    9000 mW
          VDD 3.3V                    3300 mV    1814 mA    5980 mW
          12V                        12272 mV   29045 mA  361369 mW
```

```
FPC 6 status:
  State                       Online
  FPC 6 Intake-A Temp Sensor 41 degrees C / 105 degrees F
  FPC 6 Intake-B Temp Sensor 37 degrees C / 98 degrees F
  FPC 6 Exhaust-A Temp Sensor40 degrees C / 104 degrees F
  FPC 6 Exhaust-B Temp Sensor40 degrees C / 104 degrees F
  FPC 6 Exhaust-C Temp Sensor40 degrees C / 104 degrees F
  FPC 6 PE0 Temp Sensor      45 degrees C / 113 degrees F
  FPC 6 PE1 Temp Sensor      47 degrees C / 116 degrees F
  FPC 6 PE2 Temp Sensor      51 degrees C / 123 degrees F
  FPC 6 LCPU Temp Sensor     41 degrees C / 105 degrees F
  Power
         PE0 Core 0.9V                897 mV   30214 mA   27179 mW
         PE0 HMC0 Core 0.9V           899 mV   10000 mA    8984 mW
         PE1 Core 0.9V                873 mV   29332 mA   25601 mW
         PE1 HMC0 Core 0.9V           899 mV    9828 mA    8828 mW
         PE2 Core 0.9V                898 mV   30781 mA   27675 mW
         PE2 HMC0 Core 0.9V           899 mV   10328 mA    9296 mW
         PE0 Serdes 1.0V             1019 mV   28921 mA   29531 mW
         PE1 Serdes 1.0V             1020 mV   29437 mA   30046 mW
         PE2 Serdes 1.0V             1019 mV   29671 mA   30281 mW
         LCPU Platform 1.1V          1100 mV    3671 mA    4039 mW
         LCPU Core 1.0V              1000 mV    8218 mA    8187 mW
         PHY VDD B 1.0V              1000 mV   15984 mA   15984 mW
         PHY VDD A 1.0V               999 mV   16093 mA   16093 mW
         BCM Core 1.0V               1000 mV    8046 mA    8062 mW
         BCM PEX 1.0V                1000 mV    3500 mA    3500 mW
         HMC Core 1.2V               1199 mV    1327 mA    1579 mW
         HMC Serdes 1.2V             1199 mV   33031 mA   39593 mW
         VDD 1.5V                    1499 mV    2722 mA    4078 mW
         VDD 2.5V                    2449 mV    3539 mA    8671 mW
         VDD 3.3V                    3299 mV    8082 mA   26656 mW
         12V                        12311 mV   31124 mA  385270 mW
```

show chassis environment fpc (PTX10016 router)

```
user@host> show chassis environment fpc
FPC 1 status:
  State                       Online
  FPC 1 Intake-A Temp Sensor 36 degrees C / 96 degrees F
  FPC 1 Intake-B Temp Sensor 32 degrees C / 89 degrees F
```

```
  FPC 1 Exhaust-A Temp Sensor37 degrees C / 98 degrees F
  FPC 1 Exhaust-B Temp Sensor36 degrees C / 96 degrees F
  FPC 1 Exhaust-C Temp Sensor36 degrees C / 96 degrees F
  FPC 1 PE0 Temp Sensor      45 degrees C / 113 degrees F
  FPC 1 PE1 Temp Sensor      46 degrees C / 114 degrees F
  FPC 1 PE2 Temp Sensor      53 degrees C / 127 degrees F
  FPC 1 LCPU Temp Sensor     35 degrees C / 95 degrees F
  Power
         PE0 Core 0.9V               897 mV   28992 mA   26027 mW
         PE0 HMC0 Core 0.9V          899 mV   10156 mA    9156 mW
         PE1 Core 0.9V               871 mV   28800 mA   25164 mW
         PE1 HMC0 Core 0.9V          899 mV   10125 mA    9109 mW
         PE2 Core 0.9V               898 mV   29914 mA   26906 mW
         PE2 HMC0 Core 0.9V          899 mV   10343 mA    9296 mW
         PE0 Serdes 1.0V            1019 mV   27515 mA   28093 mW
         PE1 Serdes 1.0V            1020 mV   27968 mA   28546 mW
         PE2 Serdes 1.0V            1019 mV   27796 mA   28359 mW
         LCPU Platform 1.1V         1100 mV    3347 mA    3289 mW
         LCPU Core 1.0V             1000 mV    7960 mA    7960 mW
         PHY VDD B 1.0V             1000 mV   16437 mA   16437 mW
         PHY VDD A 1.0V              999 mV   15656 mA   15656 mW
         BCM Core 1.0V              1000 mV    7289 mA    7335 mW
         BCM PEX 1.0V                999 mV    3453 mA    3453 mW
         HMC Core 1.2V              1199 mV    1218 mA    1453 mW
         HMC Serdes 1.2V            1199 mV   32093 mA   38562 mW
         VDD 1.5V                   1500 mV    2859 mA    4289 mW
         VDD 2.5V                   2449 mV    3875 mA    9500 mW
         VDD 3.3V                   3299 mV    2806 mA    9257 mW
         12V                       12351 mV   28569 mA  354877 mW
FPC 3 status:
  State                     Online
  FPC 3 Intake-A Temp Sensor 35 degrees C / 95 degrees F
  FPC 3 Intake-B Temp Sensor 31 degrees C / 87 degrees F
  FPC 3 Exhaust-A Temp Sensor36 degrees C / 96 degrees F
  FPC 3 Exhaust-B Temp Sensor34 degrees C / 93 degrees F
  FPC 3 Exhaust-C Temp Sensor33 degrees C / 91 degrees F
  FPC 3 PE0 Temp Sensor      43 degrees C / 109 degrees F
  FPC 3 PE1 Temp Sensor      45 degrees C / 113 degrees F
  FPC 3 PE2 Temp Sensor      49 degrees C / 120 degrees F
  FPC 3 LCPU Temp Sensor     35 degrees C / 95 degrees F
  Power
         PE0 Core 0.9V               897 mV   28832 mA   25871 mW
         PE0 HMC0 Core 0.9V          899 mV   10359 mA    9328 mW
```

```
          PE1 Core 0.9V                873 mV   28230 mA   24671 mW
          PE1 HMC0 Core 0.9V           899 mV   10468 mA    9421 mW
          PE2 Core 0.9V                898 mV   29539 mA   26539 mW
          PE2 HMC0 Core 0.9V           899 mV   10656 mA    9593 mW
          PE0 Serdes 1.0V             1020 mV   27484 mA   28031 mW
          PE1 Serdes 1.0V             1019 mV   27515 mA   28078 mW
          PE2 Serdes 1.0V             1020 mV   27625 mA   28187 mW
          LCPU Platform 1.1V          1099 mV    3050 mA    3355 mW
          LCPU Core 1.0V               999 mV    7820 mA    7804 mW
          PHY VDD B 1.0V               999 mV   15406 mA   15406 mW
          PHY VDD A 1.0V              1000 mV   14953 mA   14953 mW
          BCM Core 1.0V               1000 mV    7648 mA    7648 mW
          BCM PEX 1.0V                1000 mV    3531 mA    3531 mW
          HMC Core 1.2V               1200 mV    1234 mA    1476 mW
          HMC Serdes 1.2V             1199 mV   34671 mA   41593 mW
          VDD 1.5V                    1499 mV    3484 mA    5226 mW
          VDD 2.5V                    2449 mV    3218 mA    7890 mW
          VDD 3.3V                    3299 mV    2468 mA    8148 mW
          12V                        12311 mV   28785 mA  355950 mW
FPC 6 status:
  State                       Online
  FPC 6 Intake-A Temp Sensor 34 degrees C / 93 degrees F
  FPC 6 Intake-B Temp Sensor 31 degrees C / 87 degrees F
  FPC 6 Exhaust-A Temp Sensor34 degrees C / 93 degrees F
  FPC 6 Exhaust-B Temp Sensor35 degrees C / 95 degrees F
  FPC 6 Exhaust-C Temp Sensor35 degrees C / 95 degrees F
  FPC 6 PE0 Temp Sensor      42 degrees C / 107 degrees F
  FPC 6 PE1 Temp Sensor      43 degrees C / 109 degrees F
  FPC 6 PE2 Temp Sensor      47 degrees C / 116 degrees F
  FPC 6 LCPU Temp Sensor     34 degrees C / 93 degrees F
  Power
          PE0 Core 0.9V                922 mV   29394 mA   27160 mW
          PE0 HMC0 Core 0.9V           899 mV   10078 mA    9062 mW
          PE1 Core 0.9V                923 mV   29636 mA   27304 mW
          PE1 HMC0 Core 0.9V           899 mV    9890 mA    8890 mW
          PE2 Core 0.9V                898 mV   29734 mA   26757 mW
          PE2 HMC0 Core 0.9V           899 mV    9968 mA    8968 mW
          PE0 Serdes 1.0V             1020 mV   26968 mA   27515 mW
          PE1 Serdes 1.0V             1019 mV   27421 mA   27984 mW
          PE2 Serdes 1.0V             1019 mV   27625 mA   28171 mW
          LCPU Platform 1.1V          1099 mV    3230 mA    4742 mW
          LCPU Core 1.0V               999 mV    8171 mA    8171 mW
          PHY VDD B 1.0V              1000 mV   15671 mA   15687 mW
```

```
          PHY VDD A 1.0V               999 mV   15703 mA   15703 mW
          BCM Core 1.0V                999 mV    7500 mA    7492 mW
          BCM PEX 1.0V                1000 mV    3480 mA    3468 mW
          HMC Core 1.2V               1199 mV    1199 mA    1440 mW
          HMC Serdes 1.2V             1199 mV   31046 mA   37250 mW
          VDD 1.5V                    1499 mV    2804 mA    4203 mW
          VDD 2.5V                    2449 mV    3746 mA    9171 mW
          VDD 3.3V                    3300 mV    3173 mA   10476 mW
          12V                        12311 mV   28786 mA  355654 mW
FPC 8 status:
  State                       Online
  FPC 8 Intake-A Temp Sensor 34 degrees C / 93 degrees F
  FPC 8 Intake-B Temp Sensor 30 degrees C / 86 degrees F
  FPC 8 Exhaust-A Temp Sensor37 degrees C / 98 degrees F
  FPC 8 Exhaust-B Temp Sensor37 degrees C / 98 degrees F
  FPC 8 Exhaust-C Temp Sensor37 degrees C / 98 degrees F
  FPC 8 PE0 Temp Sensor      42 degrees C / 107 degrees F
  FPC 8 PE1 Temp Sensor      44 degrees C / 111 degrees F
  FPC 8 PE2 Temp Sensor      47 degrees C / 116 degrees F
  FPC 8 LCPU Temp Sensor     33 degrees C / 91 degrees F
  Power
          PE0 Core 0.9V                897 mV   29382 mA   26437 mW
          PE0 HMC0 Core 0.9V           899 mV   10265 mA    9250 mW
          PE1 Core 0.9V                872 mV   28867 mA   25175 mW
          PE1 HMC0 Core 0.9V           899 mV   10171 mA    9109 mW
          PE2 Core 0.9V                899 mV   30210 mA   27214 mW
          PE2 HMC0 Core 0.9V           900 mV   10187 mA    9171 mW
          PE0 Serdes 1.0V             1020 mV   27843 mA   28421 mW
          PE1 Serdes 1.0V             1020 mV   28265 mA   28828 mW
          PE2 Serdes 1.0V             1019 mV   28406 mA   29000 mW
          LCPU Platform 1.1V          1099 mV    3000 mA    3300 mW
          LCPU Core 1.0V              1000 mV    7937 mA    7937 mW
          PHY VDD B 1.0V              1000 mV   15843 mA   15843 mW
          PHY VDD A 1.0V              1000 mV   15250 mA   15250 mW
          BCM Core 1.0V                999 mV    6914 mA    6898 mW
          BCM PEX 1.0V                 999 mV    3445 mA    3445 mW
          HMC Core 1.2V               1199 mV    1162 mA    1390 mW
          HMC Serdes 1.2V             1199 mV   33437 mA   40125 mW
          VDD 1.5V                    1499 mV    2851 mA    4273 mW
          VDD 2.5V                    2450 mV    3867 mA    9484 mW
          VDD 3.3V                    3300 mV    3258 mA   10753 mW
          12V                        12338 mV   28656 mA  356171 mW
FPC 9 status:
```

```
State                       Online
FPC 9 Intake-A Temp Sensor 44 degrees C / 111 degrees F
FPC 9 Intake-B Temp Sensor 28 degrees C / 82 degrees F
FPC 9 Exhaust-A Temp Sensor51 degrees C / 123 degrees F
FPC 9 Exhaust-B Temp Sensor52 degrees C / 125 degrees F
FPC 9 Exhaust-C Temp Sensor48 degrees C / 118 degrees F
FPC 9 PE0 Temp Sensor      52 degrees C / 125 degrees F
FPC 9 PE1 Temp Sensor      65 degrees C / 149 degrees F
FPC 9 PE2 Temp Sensor      50 degrees C / 122 degrees F
FPC 9 PE3 Temp Sensor      65 degrees C / 149 degrees F
FPC 9 PE4 Temp Sensor      50 degrees C / 122 degrees F
FPC 9 PE5 Temp Sensor      67 degrees C / 152 degrees F
FPC 9 LCPU Temp Sensor     45 degrees C / 113 degrees F
Power
       PE0 Core 0.9V               875 mV   28316 mA   24808 mW
       PE1 Core 0.9V               875 mV   28546 mA   24996 mW
       PE0 Serdes 1.0V            1019 mV   38906 mA   39687 mW
       PE1 Serdes 1.0V            1020 mV   33078 mA   33781 mW
       PE0 HMC Core 0.9V           899 mV    7718 mA    6945 mW
       PE0,1 HMC Memory 1.2V      1199 mV     579 mA     695 mW
       PE1 HMC Core 0.9V           899 mV    7289 mA    6570 mW
       PE0,1 HMC Serdes 1.2V      1199 mV   20187 mA   24250 mW
       PE2 Core 0.9V               924 mV   29062 mA   26894 mW
       PE3 Core 0.9V               900 mV   28914 mA   26039 mW
       PE2 Serdes 1.0V            1020 mV   36375 mA   37093 mW
       PE3 Serdes 1.0V            1019 mV   32640 mA   33296 mW
       PE2 HMC Core 0.9V           900 mV    7695 mA    6921 mW
       PE2,3 HMC Memory 1.2V      1199 mV     562 mA     674 mW
       PE3 HMC Core 0.9V           899 mV    7554 mA    6796 mW
       PE2,3 HMC Serdes 1.2V      1199 mV   20156 mA   24218 mW
       VDD 3.3V                   3300 mV    8964 mA   29609 mW
       VDD 1.5V                   1499 mV    3968 mA    5945 mW
       VDD 2.5V                   2449 mV    4414 mA   10890 mW
       PE4 Core 0.9V               900 mV   28527 mA   25679 mW
       PE5 Core 0.9V               899 mV   28902 mA   26035 mW
       PE4 Serdes 1.0V            1019 mV   41281 mA   42125 mW
       PE5 Serdes 1.0V            1019 mV   25781 mA   26328 mW
       PE4 HMC Core 0.9V           900 mV    7382 mA    6648 mW
       PE4,5 HMC Memory 1.2V      1199 mV     626 mA     750 mW
       PE5 HMC Core 0.9V           899 mV    7562 mA    6796 mW
       PE4,5 HMC Serdes 1.2V      1199 mV   20312 mA   24375 mW
       LCPU platform 1.1V         1099 mV    3687 mA    4054 mW
       LCPU core 1.0V             1000 mV    9000 mA    9000 mW
```

```
        BCM core 1.0V                999 mV    7843 mA    7835 mW
        BCM & PEX Serdes 1.0V        999 mV    4062 mA    4062 mW
        12V                        12417 mV   51659 mA  643215 mW
```

show chassis environment FPC 1 (MX Routers with Media Services Blade [MSB])

```
user@switch> show chassis environment fpc 1
FPC 1 status:
  State                       Online
  Temperature Intake          36 degrees C / 96 degrees F
  Temperature Exhaust A       39 degrees C / 102 degrees F
  Temperature LU TSen         52 degrees C / 125 degrees F
  Temperature LU Chip         54 degrees C / 129 degrees F
  Temperature XM TSen         52 degrees C / 125 degrees F
  Temperature XM Chip         60 degrees C / 140 degrees F
  Temperature PCIe TSen       52 degrees C / 125 degrees F
  Temperature PCIe Chip       69 degrees C / 156 degrees F
  Power
    MPC-BIAS3V3-zl2106         3302 mV
    MPC-VDD3V3-zl6100          3325 mV
    MPC-AVDD1V0-zl6100         1007 mV
    MPC-PCIE_1V0-zl6100         904 mV
    MPC-LU0_1V0-zl2004          996 mV
    MPC-VDD_1V5-zl2004         1498 mV
    MPC-12VA-BMR453           11733 mV
    MPC-12VB-BMR453           11728 mV
    MPC-XM_0V9-vt273m           900 mV
  I2C Slave Revision          81
```

show chassis environment FPC (Junos OS Evolved)

```
user@switch> show chassis environment fpc
FPC 0 status:
  State                       Online
  Intake Temperature          32 degrees C / 89 degrees F
  Exhaust-A Temperature       43 degrees C / 109 degrees F
  Exhaust-B Temperature       32 degrees C / 89 degrees F
  PE0 Temperature             34 degrees C / 93 degrees F
  PE1 Temperature             38 degrees C / 100 degrees F
```

```
PE2 Temperature            38 degrees C / 100 degrees F
PE3 Temperature            36 degrees C / 96 degrees F
PE4 Temperature            35 degrees C / 95 degrees F
PE5 Temperature            35 degrees C / 95 degrees F
Power 1
  RT_1  1.0v                  1018 mV
  RT_2  1.0v                  1018 mV
Power 2
  FPC 1 1.0v                   999 mV
  FPC 2 1.0v                   998 mV
Power 3
  FPC   2.5v                  2499 mV
  FPC   3.3v                  3299 mV
Power 4
  FPC   0.9v                   899 mV
  FPC   1.5v                  1499 mV
Power 5
  PE0 1 1.0v                  1039 mV
  PE0 2 1.0v                  1039 mV
Power 6
  PE0 1 0.9v                   900 mV
  PE0 2 0.9v                   900 mV
Power 7
  PE0 3 0.9v                   902 mV
  PE0 4 0.9v                   902 mV
Power 8
  PE0 H 0.9v                   899 mV
  PE0 H 1.2v                  1199 mV
Power 9
  PE1 1 1.0v                  1040 mV
  PE1 2 1.0v                  1039 mV
Power 10
  PE1 1 0.9v                   901 mV
  PE1 2 0.9v                   901 mV
Power 11
  PE1 3 0.9v                   900 mV
  PE1 4 0.9v                   900 mV
Power 12
  PE1 H 0.9v                   899 mV
  PE1 H 1.2v                  1199 mV
Power 13
  PE2 1 1.0v                  1039 mV
  PE2 2 1.0v                  1039 mV
```

```
Power 14
  PE2 1 0.9v                  900 mV
  PE2 2 0.9v                  900 mV
Power 15
  PE2 3 0.9v                  900 mV
  PE2 4 0.9v                  900 mV
Power 16
  PE2 H 0.9v                  899 mV
  PE2 H 1.2v                 1199 mV
Power 17
  PE3 1 1.0v                 1039 mV
  PE3 2 1.0v                 1039 mV
Power 18
  PE3 1 0.9v                  899 mV
  PE3 2 0.9v                  900 mV
Power 19
  PE3 3 0.9v                  899 mV
  PE3 4 0.9v                  900 mV
Power 20
  PE3 H 0.9v                  899 mV
  PE3 H 1.2v                 1199 mV
Power 21
  PE4 1 1.0v                 1039 mV
  PE4 2 1.0v                 1039 mV
Power 22
  PE4 1 0.9v                  900 mV
  PE4 2 0.9v                  900 mV
Power 23
  PE4 3 0.9v                  901 mV
  PE4 4 0.9v                  901 mV
Power 24
  PE4 H 0.9v                  899 mV
  PE4 H 1.2v                 1199 mV
Power 25
  PE5 1 1.0v                 1040 mV
  PE5 2 1.0v                 1039 mV
Power 26
  PE5 1 0.9v                  901 mV
  PE5 2 0.9v                  901 mV
Power 27
  PE5 3 0.9v                  901 mV
  PE5 4 0.9v                  901 mV
Power 28
```

```
    PE5 H 0.9v                   899 mV
    PE5 H 1.2v                  1199 mV
  Power 29
    PIC0 12.0v                 12342 mV
  Power 30
    PIC1 12.0v                 12342 mV
  Power 31
    A    12.0v                 12375 mV
    B    12.0v                  1008 mV
  Bus Revision                 115
FPC 1 status:
  State                        Online
  Intake Temperature           33 degrees C / 91 degrees F
  Exhaust-A Temperature        44 degrees C / 111 degrees F
  Exhaust-B Temperature        33 degrees C / 91 degrees F
  PE0 Temperature              34 degrees C / 93 degrees F
  PE1 Temperature              38 degrees C / 100 degrees F
  PE2 Temperature              37 degrees C / 98 degrees F
  PE3 Temperature              36 degrees C / 96 degrees F
  PE4 Temperature              34 degrees C / 93 degrees F
  PE5 Temperature              36 degrees C / 96 degrees F
  Power 1
    RT_1  1.0v                  1018 mV
    RT_2  1.0v                  1018 mV
  Power 2
    FPC 1 1.0v                   999 mV
    FPC 2 1.0v                   999 mV
  Power 3
    FPC   2.5v                  2499 mV
    FPC   3.3v                  3300 mV
  Power 4
    FPC   0.9v                   899 mV
    FPC   1.5v                  1500 mV
  Power 5
    PE0 1 1.0v                  1039 mV
    PE0 2 1.0v                  1039 mV
  Power 6
    PE0 1 0.9v                   925 mV
    PE0 2 0.9v                   925 mV
  Power 7
    PE0 3 0.9v                   925 mV
    PE0 4 0.9v                   926 mV
  Power 8
```

```
  PE0 H 0.9v                  899 mV
  PE0 H 1.2v                 1199 mV
Power 9
  PE1 1 1.0v                 1040 mV
  PE1 2 1.0v                 1039 mV
Power 10
  PE1 1 0.9v                  900 mV
  PE1 2 0.9v                  901 mV
Power 11
  PE1 3 0.9v                  899 mV
  PE1 4 0.9v                  900 mV
Power 12
  PE1 H 0.9v                  899 mV
  PE1 H 1.2v                 1199 mV
Power 13
  PE2 1 1.0v                 1040 mV
  PE2 2 1.0v                 1039 mV
Power 14
  PE2 1 0.9v                  926 mV
  PE2 2 0.9v                  926 mV
Power 15
  PE2 3 0.9v                  927 mV
  PE2 4 0.9v                  927 mV
Power 16
  PE2 H 0.9v                  899 mV
  PE2 H 1.2v                 1199 mV
Power 17
  PE3 1 1.0v                 1039 mV
  PE3 2 1.0v                 1039 mV
Power 18
  PE3 1 0.9v                  926 mV
  PE3 2 0.9v                  927 mV
Power 19
  PE3 3 0.9v                  925 mV
  PE3 4 0.9v                  926 mV
Power 20
  PE3 H 0.9v                  899 mV
  PE3 H 1.2v                 1199 mV
Power 21
  PE4 1 1.0v                 1039 mV
  PE4 2 1.0v                 1040 mV
Power 22
  PE4 1 0.9v                  925 mV
```

```
    PE4 2 0.9v                    925 mV
  Power 23
    PE4 3 0.9v                    925 mV
    PE4 4 0.9v                    926 mV
  Power 24
    PE4 H 0.9v                    900 mV
    PE4 H 1.2v                   1199 mV
  Power 25
    PE5 1 1.0v                   1039 mV
    PE5 2 1.0v                   1039 mV
  Power 26
    PE5 1 0.9v                    898 mV
    PE5 2 0.9v                    899 mV
  Power 27
    PE5 3 0.9v                    900 mV
    PE5 4 0.9v                    900 mV
  Power 28
    PE5 H 0.9v                    899 mV
    PE5 H 1.2v                   1199 mV
  Power 29
    PIC0 12.0v                      0 mV
  Power 30
    PIC1 12.0v                  12402 mV
  Power 31
    A    12.0v                  12344 mV
    B    12.0v                   1008 mV
  Bus Revision                  115
FPC 2 status:
  State                         Online
  Intake Temperature            31 degrees C / 87 degrees F
  Exhaust-A Temperature         38 degrees C / 100 degrees F
  Exhaust-B Temperature         28 degrees C / 82 degrees F
  PE0 Temperature               28 degrees C / 82 degrees F
  PE1 Temperature               33 degrees C / 91 degrees F
  PE2 Temperature               34 degrees C / 93 degrees F
  PE3 Temperature               31 degrees C / 87 degrees F
  Power 1
    RT_1  1.0v                    1018 mV
    RT_2  1.0v                    1018 mV
  Power 2
    FPC 1 1.0v                     999 mV
    FPC 2 1.0v                     999 mV
  Power 3
```

```
  FPC   2.5v                2499 mV
  FPC   3.3v                3299 mV
Power 4
  FPC   0.9v                 899 mV
  FPC   1.5v                1500 mV
Power 5
  PE0 1 1.0v                1039 mV
  PE0 2 1.0v                1040 mV
Power 6
  PE0 1 0.9v                 900 mV
  PE0 2 0.9v                 901 mV
Power 7
  PE0 3 0.9v                 900 mV
  PE0 4 0.9v                 900 mV
Power 8
  PE0 H 0.9v                 899 mV
  PE0 H 1.2v                1199 mV
Power 9
  PE1 1 1.0v                1039 mV
  PE1 2 1.0v                1039 mV
Power 10
  PE1 1 0.9v                 875 mV
  PE1 2 0.9v                 876 mV
Power 11
  PE1 3 0.9v                 875 mV
  PE1 4 0.9v                 875 mV
Power 12
  PE1 H 0.9v                 899 mV
  PE1 H 1.2v                1199 mV
Power 13
  PE2 1 1.0v                1039 mV
  PE2 2 1.0v                1039 mV
Power 14
  PE2 1 0.9v                 900 mV
  PE2 2 0.9v                 900 mV
Power 15
  PE2 3 0.9v                 900 mV
  PE2 4 0.9v                 900 mV
Power 16
  PE2 H 0.9v                 899 mV
  PE2 H 1.2v                1199 mV
Power 17
  PE3 1 1.0v                1039 mV
```

```
    PE3 2 1.0v                  1039 mV
  Power 18
    PE3 1 0.9v                   875 mV
    PE3 2 0.9v                   875 mV
  Power 19
    PE3 3 0.9v                   875 mV
    PE3 4 0.9v                   875 mV
  Power 20
    PE3 H 0.9v                   899 mV
    PE3 H 1.2v                  1200 mV
  Power 21
    PIC0 12.0v                 12281 mV
  Power 22
    PIC1 12.0v                     0 mV
  Power 23
    A    12.0v                 12406 mV
    B    12.0v                  1006 mV
  Bus Revision                 115
FPC 3 status:
  State                        Online
  Intake Temperature           33 degrees C / 91 degrees F
  Exhaust-A Temperature        44 degrees C / 111 degrees F
  Exhaust-B Temperature        30 degrees C / 86 degrees F
  PE0 Temperature              33 degrees C / 91 degrees F
  PE1 Temperature              37 degrees C / 98 degrees F
  PE2 Temperature              38 degrees C / 100 degrees F
  PE3 Temperature              34 degrees C / 93 degrees F
  PE4 Temperature              33 degrees C / 91 degrees F
  PE5 Temperature              36 degrees C / 96 degrees F
  Power 1
    RT_1  1.0v                  1018 mV
    RT_2  1.0v                  1018 mV
  Power 2
    FPC 1 1.0v                   999 mV
    FPC 2 1.0v                   999 mV
  Power 3
    FPC   2.5v                  2500 mV
    FPC   3.3v                  3299 mV
  Power 4
    FPC   0.9v                   899 mV
    FPC   1.5v                  1500 mV
  Power 5
    PE0 1 1.0v                  1039 mV
```

```
  PE0 2 1.0v                 1039 mV
Power 6
  PE0 1 0.9v                  900 mV
  PE0 2 0.9v                  900 mV
Power 7
  PE0 3 0.9v                  898 mV
  PE0 4 0.9v                  899 mV
Power 8
  PE0 H 0.9v                  899 mV
  PE0 H 1.2v                 1199 mV
Power 9
  PE1 1 1.0v                 1040 mV
  PE1 2 1.0v                 1039 mV
Power 10
  PE1 1 0.9v                  926 mV
  PE1 2 0.9v                  926 mV
Power 11
  PE1 3 0.9v                  925 mV
  PE1 4 0.9v                  925 mV
Power 12
  PE1 H 0.9v                  900 mV
  PE1 H 1.2v                 1199 mV
Power 13
  PE2 1 1.0v                 1039 mV
  PE2 2 1.0v                 1039 mV
Power 14
  PE2 1 0.9v                  873 mV
  PE2 2 0.9v                  873 mV
Power 15
  PE2 3 0.9v                  875 mV
  PE2 4 0.9v                  875 mV
Power 16
  PE2 H 0.9v                  899 mV
  PE2 H 1.2v                 1199 mV
Power 17
  PE3 1 1.0v                 1039 mV
  PE3 2 1.0v                 1039 mV
Power 18
  PE3 1 0.9v                  899 mV
  PE3 2 0.9v                  900 mV
Power 19
  PE3 3 0.9v                  899 mV
  PE3 4 0.9v                  899 mV
```

```
  Power 20
    PE3 H 0.9v                    899 mV
    PE3 H 1.2v                   1199 mV
  Power 21
    PE4 1 1.0v                   1040 mV
    PE4 2 1.0v                   1040 mV
  Power 22
    PE4 1 0.9v                    949 mV
    PE4 2 0.9v                    950 mV
  Power 23
    PE4 3 0.9v                    950 mV
    PE4 4 0.9v                    951 mV
  Power 24
    PE4 H 0.9v                    899 mV
    PE4 H 1.2v                   1199 mV
  Power 25
    PE5 1 1.0v                   1039 mV
    PE5 2 1.0v                   1039 mV
  Power 26
    PE5 1 0.9v                    900 mV
    PE5 2 0.9v                    900 mV
  Power 27
    PE5 3 0.9v                    900 mV
    PE5 4 0.9v                    900 mV
  Power 28
    PE5 H 0.9v                    899 mV
    PE5 H 1.2v                   1199 mV
  Power 29
    PIC0 12.0v                      0 mV
  Power 30
    PIC1 12.0v                      0 mV
  Power 31
    A    12.0v                  12406 mV
    B    12.0v                   1008 mV
  Bus Revision              115
FPC 6 status:
  State                     Onlining
  Bus Revision              115
```

Release Information

Command introduced before Junos OS Release 7.4.

`satellite` option introduced in Junos OS Release 14.2R3.

RELATED DOCUMENTATION

- request chassis fpc
- show chassis fpc
- show chassis fpc-feb-connectivity
- Resynchronizing FPC Sequence Numbers with Active FPCs when an FPC Comes Online
- MX960 Flexible PIC Concentrator Description

show chassis environment fpm

IN THIS SECTION

- Syntax | **812**
- Syntax (TX Matrix Routers) | **812**
- Syntax (TX Matrix Plus Routers) | **812**
- Description | **812**
- Options | **812**
- Required Privilege Level | **813**
- Output Fields | **813**
- Sample Output | **815**
- Release Information | **820**

Syntax

```
show chassis environment fpm
```

Syntax (TX Matrix Routers)

```
show chassis environment fpm
<lcc number | scc>
```

Syntax (TX Matrix Plus Routers)

```
show chassis environment fpm
<lcc number | sfc number>
```

Description

(M40e, M120, M160, M320, MX Series, and T Series routers and the PTX Series Packet Transport Routers only) Display environmental information about the front panel module in the router.

Options

none (TX Matrix and TX Matrix Plus routers only) On a TX Matrix router, display environmental information about the front panel modules (craft interfaces) on the TX Matrix router and its attached T640 routers. On a TX Matrix Plus router, display environmental information about the front panel modules (craft interfaces) on the TX Matrix Plus router and its attached routers.

lcc *number* —(TX Matrix router and TX Matrix Plus router only) (Optional) Line-card chassis number.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

scc (TX Matrix router only) (Optional) Display environmental information about the front panel module (craft interface) on the TX Matrix router (or switch-card chassis).

sfc *number* (TX Matrix Plus router only) (Optional) Display environmental information about the front panel module (craft interface) on the TX Matrix Plus router (or switch-fabric chassis).

Required Privilege Level

view

Output Fields

Table 44 on page 813 lists the output fields for the `show chassis environment fpm` command. Output fields are listed in the approximate order in which they appear.

Table 44: show chassis environment fpm Output Fields

Field Name	Field Description
State	FPM status: • **Online**—FPM is online and running. • **Offline**—FPM is powered down.

Table 44: show chassis environment fpm Output Fields *(Continued)*

Field Name	Field Description
FPM CMB Voltage	(M40e and M160 routers only) Information about the voltage supplied to the FPM chassis management bus (CMB) device. The left column displays the required power, in volts. The right column displays the measured power, in millivolts.
FPM GBUS Voltage	(M320 and T Series routers only) Information about the voltage supplied to the FPM generic bus (GBUS) device. The left column displays the required power, in volts. The right column displays the measured power, in millivolts.
FPM I2CS Voltage	(PTX Series only) Information about the voltage supplied to the FPM generic bus (I2CS) device. The left column displays the required power, in volts. The right column displays the measured power, in millivolts.
FPM Display Voltage	Information about the voltage supplied to the FPM display. The left column displays the required power, in volts. The right column displays the measured power, in millivolts.
FPM CMB Temperature	(M40e and M160 routers only) Temperature of the air flowing past the FPM CMB device
FPM GBUS Temperature	(M320 and T Series routers only) Temperature of the air flowing past the FPM GBUS device.
FPM I2CS Temperature	(PTX Series only) Temperature of the air flowing past the FPM I2CS device.
FPM Display Temperature	Temperature of the air flowing past the FPM display.
CMB Revision	(M40e and M160 routers only) Revision level of the CMB device.
GBUS Revision	(M320 and T Series routers only) Revision level of the GBUS device.
I2CS Revision	(MX2010 routers, MX2020 routers, MX2008 routers, and PTX Series only) Revision level of the I2CS device.

Sample Output

show chassis environment fpm (M40e and M160 Routers)

```
user@host> show chassis environment fpm
FPM status:
  State                       Online
  FPM CMB Voltage:
    5.0 V bias           5030 mV
    8.0 V bias           8083 mV
  FPM Display Voltage:
    5.0 V bias           4998 mV
  FPM CMB temperature      34 degrees C / 93 degrees F
  FPM Display temperature  35 degrees C / 95 degrees F
  CMB Revision             12
```

show chassis environment fpm (M320 Router)

```
user@host> show chassis environment fpm
FPM status:
  State                           Online
  FPM GBUS Voltage:
    5.0 V                    5006 mV
    1.8 V bias               1799 mV
    3.3 V bias               3294 mV
    5.0 V bias               4998 mV
    8.0 V bias               7682 mV
  FPM GBUS temperature         30 degrees C / 86 degrees F
  GBUS Revision                51
```

show chassis environment fpm (MX2010 Router)

```
user@host > show chassis environment fpm
FPM status:
  State                      Online
  I2CS Revision              4
```

show chassis environment fpm (MX2020 Router)

```
user@host > show chassis environment fpm
FPM status:
  State                       Online
  I2CS Revision               3
```

show chassis environment fpm (MX2008 Router)

```
user@host > show chassis environment fpm
FPM status:
  State                       Online
  I2CS Revision               5
```

show chassis environment fpm (MX240 Router)

```
user@host> show chassis environment fpm
FPM status:
  State                       Online
  I2CS Revision               41
```

show chassis environment fpm (MX480 Router)

```
user@host> show chassis environment fpm
FPM status:
  State                       Online
  I2CS Revision               41
```

show chassis environment fpm (T Series Routers)

```
user@host> show chassis environment fpm
FPM status:
  State                            Online
  FPM GBUS Voltage:
    1.8 V bias                1787 mV
    3.3 V bias                3286 mV
```

```
    5.0 V bias               4991 mV
    8.0 V bias               7162 mV
  FPM Display Voltage:
    5.0 V                    4996 mV
  FPM GBUS temperature         29 degrees C / 84 degrees F
  FPM Display temperature      26 degrees C / 78 degrees F
  GBUS Revision                37
```

show chassis environment fpm lcc (TX Matrix Router)

```
user@host> show chassis environment fpm lcc
0
lcc0-re0:
--------------------------------------------------------------------------
FPM status:
  State                          Online
  FPM GBUS Voltage:
    1.8 V bias               1797 mV
    3.3 V bias               3294 mV
    5.0 V bias               5015 mV
    8.0 V bias               7470 mV
  FPM Display Voltage:
    5.0 V                    5018 mV
  FPM GBUS temperature         25 degrees C / 77 degrees F
  FPM Display temperature      29 degrees C / 84 degrees F
  GBUS Revision                37
```

show chassis environment fpm scc (TX Matrix Router)

```
user@host> show chassis environment fpm scc
scc-re0:
--------------------------------------------------------------------------
FPM status:
  State                          Online
  FPM GBUS Voltage:
    1.8 V bias               1789 mV
    3.3 V bias               3296 mV
    5.0 V bias               5003 mV
    8.0 V bias               7592 mV
  FPM Display Voltage:
```

```
    5.0 V                    5010 mV
  FPM GBUS temperature         22 degrees C / 71 degrees F
  FPM Display temperature      27 degrees C / 80 degrees F
  GBUS Revision                37
```

show chassis environment fpm sfc (TX Matrix Plus Router)

```
user@host> show chassis environment fpm sfc

sfc0-re0:
--------------------------------------------------------------------------
FPM status:
  State                      Online
  FPM I2CS Voltage:
    3.3 V                     3300 mV
    5.0 V                     5001 mV
    9.0 V FPD                 8672 mV
  FPM I2CS temperature       33 degrees C / 91 degrees F
  I2CS Revision              69

lcc0-re0:
--------------------------------------------------------------------------
FPM status:
  State                      Online
  FPM GBUS Voltage:
    1.8 V bias                1802 mV
    3.3 V bias                3301 mV
    5.0 V bias                4984 mV
    8.0 V bias                7377 mV
  FPM Display Voltage:
    5.0 V                     5015 mV
  FPM GBUS temperature       30 degrees C / 86 degrees F
  FPM Display temperature    32 degrees C / 89 degrees F
  GBUS Revision              37

lcc1-re0:
--------------------------------------------------------------------------
FPM status:
  State                      Online
  FPM GBUS Voltage:
    1.8 V bias                1789 mV
```

```
    3.3 V bias                3311 mV
    5.0 V bias                5013 mV
    8.0 V bias                7467 mV
  FPM Display Voltage:
    5.0 V                     5015 mV
  FPM GBUS temperature       29 degrees C / 84 degrees F
  FPM Display temperature    31 degrees C / 87 degrees F
  GBUS Revision              37
```

show chassis environment fpm (T4000 Core Router)

```
user@host> show chassis environment fpm
CB 0 status:
  State                      Online Master
  Temperature                34 degrees C / 93 degrees F
  Power 1
    1.8 V                     1804 mV
    2.5 V                     2499 mV
    3.3 V                     3317 mV
    3.3 V bias                3291 mV
    4.6 V                     4663 mV
    5.0 V                     4905 mV
    8.0 V bias                7658 mV
    12.0 V                   11877 mV
  Power 2
    1.0 V                      996 mV
    1.2 V                     1207 mV
    3.3 V RE                  3354 mV
  Bus Revision               51
  FPGA Revision              5
CB 1 status:
  State                      Online Standby
  Temperature                36 degrees C / 96 degrees F
  Power 1
    1.8 V                     1791 mV
    2.5 V                     2494 mV
    3.3 V                     3321 mV
    3.3 V bias                3301 mV
    4.6 V                     4666 mV
    5.0 V                     4945 mV
    8.0 V bias                7645 mV
```

```
    12.0 V                   11897 mV
  Power 2
    1.0 V                      991 mV
    1.2 V                     1201 mV
    3.3 V RE                  3289 mV
  Bus Revision               51
  FPGA Revision              5

user@host> show chassis environment fpm
FPM status:
  State                      Online
  FPM GBUS Voltage:
    1.8 V bias                1802 mV
    3.3 V bias                3294 mV
    5.0 V bias                5003 mV
    8.0 V bias                7306 mV
  FPM Display Voltage:
    5.0 V                     5010 mV
  FPM GBUS temperature       26 degrees C / 78 degrees F
  FPM Display temperature    29 degrees C / 84 degrees F
  GBUS Revision              37
```

show chassis environment fpm (PTX5000 Packet Transport Router)

```
user@host> show chassis environment fpm

FPM status:
  State                      Online
  FPM I2CS Voltage:
    3.3 V                     3300 mV
    5.0 V                     4975 mV
  FPM I2CS temperature       37 degrees C / 98 degrees F
  I2CS Revision              109
```

Release Information

Command introduced before Junos OS Release 7.4.

sfc option introduced for the TX Matrix Plus router in Junos OS Release 9.6.

RELATED DOCUMENTATION

request chassis fpm resync | 432

show chassis environment monitored

IN THIS SECTION

- Syntax | 821
- Syntax (MX2020, MX2010, and MX2008 Routers) | 821
- Description | 822
- Options | 822
- Required Privilege Level | 822
- Output Fields | 822
- Sample Output | 823
- Release Information | 852

Syntax

```
show chassis environment monitored
```

Syntax (MX2020, MX2010, and MX2008 Routers)

```
show chassis environment monitored
<all-members>
<local>
<member member-id>
```

Description

(PTX Series Packet Transport Routers, MX2010, MX2020, MX2008, and MX10008 routers) Display status information for monitored temperatures.

On the PTX Series Packet Transport Routers, and on MX2010, MX2020, MX2008, and MX10008 routers, you can configure which temperatures are monitored for computing temperature alarms. Use this command to display only the temperatures that are monitored. Temperatures that are not included in the temperature alarm computations are not displayed.

Options

none	Display status information for monitored temperatures.
all-members	(MX2010, MX2020, and MX2008 routers only) (Optional) Display chassis information for monitored temperatures in all members of the Virtual Chassis configuration.
local	(MX2010, MX2020, and MX2008 routers only) (Optional) Display chassis information for monitored temperatures in the local member of the Virtual Chassis.
member *member-id*	(MX2010, MX2020, and MX2008 routers only) (Optional) Display chassis information for monitored temperatures in the specified member of the Virtual Chassis. Replace *member-id* with the value 0 or 1.

Required Privilege Level

view

Output Fields

Table 45 on page 823 lists the output fields for the `show chassis environment monitored` command. Output fields are listed in the approximate order in which they appear.

Table 45: show chassis environment monitored Output Fields

Field Name	Field Description
`Item`	Chassis component: • (PTX Series Packet Transport Routers, and MX2010, MX2020, and Mx2008 routers)—Information about the chassis, Routing Engines, Control Boards (CBs), Switch Interface Boards (SIBs), PICs, and Flexible PIC Concentrators (FPCs).
`Status`	Status of the specified item: `OK`, `Alarm`, or `Present`.
`Measurement`	Temperature of the air flowing past the specified chassis component. Temperature is displayed in degrees Celsius (C) and degrees Fahrenheit (F).

Sample Output

show chassis environment monitored (PTX3000 Packet Transport Router)

```
user@host> show chassis environment monitored
Class Item                          Status     Measurement
      Routing Engine 0 CPU          OK         54 degrees C / 129 degrees F
      Routing Engine 1 CPU          Present
      CB 0 Exhaust A                OK         25 degrees C / 77 degrees F
      CB 1 Exhaust A                OK         22 degrees C / 71 degrees F
      SIB 0 Exhaust                 OK         34 degrees C / 93 degrees F
      SIB 0 TF                      OK         42 degrees C / 107 degrees F
      SIB 1 Exhaust                 OK         31 degrees C / 87 degrees F
      SIB 1 TF                      OK         41 degrees C / 105 degrees F
      SIB 2 Exhaust                 OK         32 degrees C / 89 degrees F
      SIB 2 TF                      OK         40 degrees C / 104 degrees F
      SIB 3 Exhaust                 OK         32 degrees C / 89 degrees F
      SIB 3 TF                      OK         40 degrees C / 104 degrees F
      SIB 4 Exhaust                 OK         31 degrees C / 87 degrees F
      SIB 4 TF                      OK         40 degrees C / 104 degrees F
      SIB 5 Exhaust                 OK         31 degrees C / 87 degrees F
      SIB 5 TF                      OK         39 degrees C / 102 degrees F
      SIB 6 Exhaust                 OK         31 degrees C / 87 degrees F
```

```
      SIB 6 TF                      OK          39 degrees C / 102 degrees F
      SIB 7 Exhaust                 OK          35 degrees C / 95 degrees F
      SIB 7 TF                      OK          40 degrees C / 104 degrees F
      SIB 8 Exhaust                 OK          32 degrees C / 89 degrees F
      SIB 8 TF                      OK          40 degrees C / 104 degrees F
      FPC 2 PMB CPU                 OK          67 degrees C / 152 degrees F
      FPC 2 Exhaust                 OK          40 degrees C / 104 degrees F
      FPC 2 Intake                  OK          33 degrees C / 91 degrees F
      FPC 2 TL0                     OK          69 degrees C / 156 degrees F
      FPC 2 TQ0                     OK          60 degrees C / 140 degrees F
      FPC 2 TL1                     OK          56 degrees C / 132 degrees F
      FPC 2 TQ1                     OK          45 degrees C / 113 degrees F
      PIC Ambient                   OK          40 degrees C / 104 degrees F
      FPC 6 PMB CPU                 OK          80 degrees C / 176 degrees F
      FPC 6 Exhaust                 OK          53 degrees C / 127 degrees F
      FPC 6 Intake                  OK          36 degrees C / 96 degrees F
      FPC 6 TL0                     OK          69 degrees C / 156 degrees F
      FPC 6 TQ0                     OK          65 degrees C / 149 degrees F
      FPC 6 TL1                     OK          52 degrees C / 125 degrees F
      FPC 6 TQ1                     OK          47 degrees C / 116 degrees F
      PIC Ambient                   OK          46 degrees C / 114 degrees F
      FPC 12 PMB CPU                OK          42 degrees C / 107 degrees F
      FPC 12 Intake                 OK          33 degrees C / 91 degrees F
      FPC 12 Exhaust                OK          41 degrees C / 105 degrees F
      FPC 12 TL0                    OK          48 degrees C / 118 degrees F
      FPC 12 TQ0                    OK          45 degrees C / 113 degrees F
      FPC 12 TL1                    OK          58 degrees C / 136 degrees F
      FPC 12 TQ1                    OK          50 degrees C / 122 degrees F
      PIC Ambient                   OK          56 degrees C / 132 degrees F
      PIC 100G_OTN_LH-12/0/0        OK          74 degrees C / 165 degrees F
      PIC 100G_OTN_LH-12/0/1        OK          93 degrees C / 199 degrees F
```

show chassis environment monitored (PTX5000 Packet Transport Router)

```
user@host> show chassis environment monitored
Class Item                          Status     Measurement
      Routing Engine 0 CPU          OK          71 degrees C / 159 degrees F
      Routing Engine 1 CPU          OK          62 degrees C / 143 degrees F
      CB 0 Exhaust A                OK          45 degrees C / 113 degrees F
      CB 0 Exhaust B                OK          41 degrees C / 105 degrees F
```

```
      CB 1 Exhaust A                 OK          39 degrees C / 102 degrees F
      CB 1 Exhaust B                 OK          36 degrees C / 96 degrees F
```

show chassis environment monitored (MX2010 Router)

```
user@host > show chassis environment monitored
Class Item                           Status     Measurement
Temp  CB 0 IntakeA-Zone0             OK         37 degrees C / 98 degrees F
      CB 0 IntakeB-Zone1             OK         31 degrees C / 87 degrees F
      CB 0 IntakeC-Zone0             OK         39 degrees C / 102 degrees F
      CB 0 ExhaustA-Zone0            OK         36 degrees C / 96 degrees F
      CB 0 ExhaustB-Zone1            OK         32 degrees C / 89 degrees F
      CB 0 TCBC-Zone0                OK         34 degrees C / 93 degrees F
      CB 1 IntakeA-Zone0             OK         36 degrees C / 96 degrees F
      CB 1 IntakeB-Zone1             OK         28 degrees C / 82 degrees F
      CB 1 IntakeC-Zone0             OK         38 degrees C / 100 degrees F
      CB 1 ExhaustA-Zone0            OK         36 degrees C / 96 degrees F
      CB 1 ExhaustB-Zone1            OK         30 degrees C / 86 degrees F
      CB 1 TCBC-Zone0                OK         33 degrees C / 91 degrees F
      SPMB 0 Intake                  OK         30 degrees C / 86 degrees F
      SPMB 1 Intake                  OK         28 degrees C / 82 degrees F
      Routing Engine 0 CPU           OK         32 degrees C / 89 degrees F
      Routing Engine 1 CPU           Present
      SFB 0 Intake-Zone0             OK         46 degrees C / 114 degrees F
      SFB 0 Exhaust-Zone1            OK         38 degrees C / 100 degrees F
      SFB 0 IntakeA-Zone0            OK         35 degrees C / 95 degrees F
      SFB 0 IntakeB-Zone1            OK         31 degrees C / 87 degrees F
      SFB 0 Exhaust-Zone0            OK         39 degrees C / 102 degrees F
      SFB 0 SFB-XF2-Zone1            OK         44 degrees C / 111 degrees F
      SFB 0 SFB-XF1-Zone0            OK         47 degrees C / 116 degrees F
      SFB 0 SFB-XF0-Zone0            OK         56 degrees C / 132 degrees F
      SFB 1 Intake-Zone0             OK         34 degrees C / 93 degrees F
      SFB 1 Exhaust-Zone1            OK         34 degrees C / 93 degrees F
      SFB 1 IntakeA-Zone0            OK         29 degrees C / 84 degrees F
      SFB 1 IntakeB-Zone1            OK         29 degrees C / 84 degrees F
      SFB 1 Exhaust-Zone0            OK         32 degrees C / 89 degrees F
      SFB 1 SFB-XF2-Zone1            OK         42 degrees C / 107 degrees F
      SFB 1 SFB-XF1-Zone0            OK         40 degrees C / 104 degrees F
      SFB 1 SFB-XF0-Zone0            OK         42 degrees C / 107 degrees F
      SFB 2 Intake-Zone0             OK         33 degrees C / 91 degrees F
```

```
SFB 2 Exhaust-Zone1          OK          33 degrees C / 91 degrees F
SFB 2 IntakeA-Zone0          OK          28 degrees C / 82 degrees F
SFB 2 IntakeB-Zone1          OK          28 degrees C / 82 degrees F
SFB 2 Exhaust-Zone0          OK          31 degrees C / 87 degrees F
SFB 2 SFB-XF2-Zone1          OK          41 degrees C / 105 degrees F
SFB 2 SFB-XF1-Zone0          OK          39 degrees C / 102 degrees F
SFB 2 SFB-XF0-Zone0          OK          42 degrees C / 107 degrees F
SFB 3 Intake-Zone0           OK          33 degrees C / 91 degrees F
SFB 3 Exhaust-Zone1          OK          33 degrees C / 91 degrees F
SFB 3 IntakeA-Zone0          OK          29 degrees C / 84 degrees F
SFB 3 IntakeB-Zone1          OK          28 degrees C / 82 degrees F
SFB 3 Exhaust-Zone0          OK          31 degrees C / 87 degrees F
SFB 3 SFB-XF2-Zone1          OK          43 degrees C / 109 degrees F
SFB 3 SFB-XF1-Zone0          OK          40 degrees C / 104 degrees F
SFB 3 SFB-XF0-Zone0          OK          42 degrees C / 107 degrees F
SFB 4 Intake-Zone0           OK          34 degrees C / 93 degrees F
SFB 4 Exhaust-Zone1          OK          34 degrees C / 93 degrees F
SFB 4 IntakeA-Zone0          OK          29 degrees C / 84 degrees F
SFB 4 IntakeB-Zone1          OK          28 degrees C / 82 degrees F
SFB 4 Exhaust-Zone0          OK          32 degrees C / 89 degrees F
SFB 4 SFB-XF2-Zone1          OK          43 degrees C / 109 degrees F
SFB 4 SFB-XF1-Zone0          OK          42 degrees C / 107 degrees F
SFB 4 SFB-XF0-Zone0          OK          43 degrees C / 109 degrees F
SFB 5 Intake-Zone0           OK          34 degrees C / 93 degrees F
SFB 5 Exhaust-Zone1          OK          34 degrees C / 93 degrees F
SFB 5 IntakeA-Zone0          OK          30 degrees C / 86 degrees F
SFB 5 IntakeB-Zone1          OK          28 degrees C / 82 degrees F
SFB 5 Exhaust-Zone0          OK          32 degrees C / 89 degrees F
SFB 5 SFB-XF2-Zone1          OK          41 degrees C / 105 degrees F
SFB 5 SFB-XF1-Zone0          OK          41 degrees C / 105 degrees F
SFB 5 SFB-XF0-Zone0          OK          44 degrees C / 111 degrees F
SFB 6 Intake-Zone0           OK          35 degrees C / 95 degrees F
SFB 6 Exhaust-Zone1          OK          34 degrees C / 93 degrees F
SFB 6 IntakeA-Zone0          OK          30 degrees C / 86 degrees F
SFB 6 IntakeB-Zone1          OK          29 degrees C / 84 degrees F
SFB 6 Exhaust-Zone0          OK          33 degrees C / 91 degrees F
SFB 6 SFB-XF2-Zone1          OK          44 degrees C / 111 degrees F
SFB 6 SFB-XF1-Zone0          OK          43 degrees C / 109 degrees F
SFB 6 SFB-XF0-Zone0          OK          46 degrees C / 114 degrees F
SFB 7 Intake-Zone0           OK          39 degrees C / 102 degrees F
SFB 7 Exhaust-Zone1          OK          34 degrees C / 93 degrees F
SFB 7 IntakeA-Zone0          OK          34 degrees C / 93 degrees F
SFB 7 IntakeB-Zone1          OK          29 degrees C / 84 degrees F
```

```
    SFB 7 Exhaust-Zone0          OK          37 degrees C / 98 degrees F
    SFB 7 SFB-XF2-Zone1          OK          43 degrees C / 109 degrees F
    SFB 7 SFB-XF1-Zone0          OK          47 degrees C / 116 degrees F
    SFB 7 SFB-XF0-Zone0          OK          52 degrees C / 125 degrees F
    FPC 0 Intake                 OK          36 degrees C / 96 degrees F
    FPC 0 Exhaust A              OK          42 degrees C / 107 degrees F
    FPC 0 Exhaust B              OK          51 degrees C / 123 degrees F
    FPC 0 LU 0 TSen              OK          49 degrees C / 120 degrees F
    FPC 0 LU 0 Chip              OK          50 degrees C / 122 degrees F
    FPC 0 LU 1 TSen              OK          49 degrees C / 120 degrees F
    FPC 0 LU 1 Chip              OK          54 degrees C / 129 degrees F
    FPC 0 LU 2 TSen              OK          49 degrees C / 120 degrees F
    FPC 0 LU 2 Chip              OK          45 degrees C / 113 degrees F
    FPC 0 LU 3 TSen              OK          49 degrees C / 120 degrees F
    FPC 0 LU 3 Chip              OK          46 degrees C / 114 degrees F
    FPC 0 MQ 0 TSen              OK          40 degrees C / 104 degrees F
    FPC 0 MQ 0 Chip              OK          41 degrees C / 105 degrees F
    FPC 0 MQ 1 TSen              OK          40 degrees C / 104 degrees F
    FPC 0 MQ 1 Chip              OK          44 degrees C / 111 degrees F
    FPC 0 MQ 2 TSen              OK          40 degrees C / 104 degrees F
    FPC 0 MQ 2 Chip              OK          38 degrees C / 100 degrees F
    FPC 0 MQ 3 TSen              OK          40 degrees C / 104 degrees F
    FPC 0 MQ 3 Chip              OK          41 degrees C / 105 degrees F
    FPC 1 Intake                 OK          34 degrees C / 93 degrees F
    FPC 1 Exhaust A              OK          46 degrees C / 114 degrees F
    FPC 1 Exhaust B              OK          54 degrees C / 129 degrees F
    FPC 1 LU 0 TSen              OK          45 degrees C / 113 degrees F
    FPC 1 LU 0 Chip              OK          55 degrees C / 131 degrees F
    FPC 1 LU 1 TSen              OK          45 degrees C / 113 degrees F
    FPC 1 LU 1 Chip              OK          44 degrees C / 111 degrees F
    FPC 1 LU 2 TSen              OK          45 degrees C / 113 degrees F
    FPC 1 LU 2 Chip              OK          50 degrees C / 122 degrees F
    FPC 1 LU 3 TSen              OK          45 degrees C / 113 degrees F
    FPC 1 LU 3 Chip              OK          58 degrees C / 136 degrees F
    FPC 1 XM 0 TSen              OK          45 degrees C / 113 degrees F
    FPC 1 XM 0 Chip              OK          52 degrees C / 125 degrees F
    FPC 1 XF 0 TSen              OK          45 degrees C / 113 degrees F
    FPC 1 XF 0 Chip              OK          63 degrees C / 145 degrees F
    FPC 1 PLX Switch TSen        OK          45 degrees C / 113 degrees F
    FPC 1 PLX Switch Chip        OK          47 degrees C / 116 degrees F
    FPC 8 Intake                 OK          32 degrees C / 89 degrees F
    FPC 8 Exhaust A              OK          44 degrees C / 111 degrees F
    FPC 8 Exhaust B              OK          37 degrees C / 98 degrees F
```

```
    FPC 8 LU 0 TCAM TSen          OK          41 degrees C / 105 degrees F
    FPC 8 LU 0 TCAM Chip          OK          49 degrees C / 120 degrees F
    FPC 8 LU 0 TSen               OK          41 degrees C / 105 degrees F
    FPC 8 LU 0 Chip               OK          52 degrees C / 125 degrees F
    FPC 8 MQ 0 TSen               OK          41 degrees C / 105 degrees F
    FPC 8 MQ 0 Chip               OK          47 degrees C / 116 degrees F
    FPC 8 LU 1 TCAM TSen          OK          39 degrees C / 102 degrees F
    FPC 8 LU 1 TCAM Chip          OK          42 degrees C / 107 degrees F
    FPC 8 LU 1 TSen               OK          39 degrees C / 102 degrees F
    FPC 8 LU 1 Chip               OK          46 degrees C / 114 degrees F
    FPC 8 MQ 1 TSen               OK          39 degrees C / 102 degrees F
    FPC 8 MQ 1 Chip               OK          45 degrees C / 113 degrees F
    FPC 9 Intake                  OK          34 degrees C / 93 degrees F
    FPC 9 Exhaust A               OK          41 degrees C / 105 degrees F
    FPC 9 Exhaust B               OK          54 degrees C / 129 degrees F
    FPC 9 LU 0 TSen               OK          51 degrees C / 123 degrees F
    FPC 9 LU 0 Chip               OK          52 degrees C / 125 degrees F
    FPC 9 LU 1 TSen               OK          51 degrees C / 123 degrees F
    FPC 9 LU 1 Chip               OK          55 degrees C / 131 degrees F
    FPC 9 LU 2 TSen               OK          51 degrees C / 123 degrees F
    FPC 9 LU 2 Chip               OK          47 degrees C / 116 degrees F
    FPC 9 LU 3 TSen               OK          51 degrees C / 123 degrees F
    FPC 9 LU 3 Chip               OK          47 degrees C / 116 degrees F
    FPC 9 MQ 0 TSen               OK          40 degrees C / 104 degrees F
    FPC 9 MQ 0 Chip               OK          42 degrees C / 107 degrees F
    FPC 9 MQ 1 TSen               OK          40 degrees C / 104 degrees F
    FPC 9 MQ 1 Chip               OK          44 degrees C / 111 degrees F
    FPC 9 MQ 2 TSen               OK          40 degrees C / 104 degrees F
    FPC 9 MQ 2 Chip               OK          38 degrees C / 100 degrees F
    FPC 9 MQ 3 TSen               OK          40 degrees C / 104 degrees F
    FPC 9 MQ 3 Chip               OK          40 degrees C / 104 degrees F
    ADC 0 Intake                  OK          35 degrees C / 95 degrees F
    ADC 0 Exhaust                 OK          44 degrees C / 111 degrees F
    ADC 0 ADC-XF1                 OK          48 degrees C / 118 degrees F
    ADC 0 ADC-XF0                 OK          59 degrees C / 138 degrees F
    ADC 1 Intake                  OK          34 degrees C / 93 degrees F
    ADC 1 Exhaust                 OK          45 degrees C / 113 degrees F
    ADC 1 ADC-XF1                 OK          53 degrees C / 127 degrees F
    ADC 1 ADC-XF0                 OK          56 degrees C / 132 degrees F
    ADC 8 Intake                  OK          35 degrees C / 95 degrees F
    ADC 8 Exhaust                 OK          41 degrees C / 105 degrees F
    ADC 8 ADC-XF1                 OK          52 degrees C / 125 degrees F
    ADC 8 ADC-XF0                 OK          55 degrees C / 131 degrees F
```

```
      ADC 9 Intake                  OK          33 degrees C / 91 degrees F
      ADC 9 Exhaust                 OK          42 degrees C / 107 degrees F
      ADC 9 ADC-XF1                 OK          55 degrees C / 131 degrees F
      ADC 9 ADC-XF0                 OK          56 degrees C / 132 degrees F
```

show chassis environment monitored (MX2020 Router)

```
user@host > show chassis environment monitored
Class Item                          Status     Measurement
Temp  CB 0 IntakeA-Zone0            OK         44 degrees C / 111 degrees F
      CB 0 IntakeB-Zone1            OK         34 degrees C / 93 degrees F
      CB 0 IntakeC-Zone0            OK         46 degrees C / 114 degrees F
      CB 0 ExhaustA-Zone0           OK         44 degrees C / 111 degrees F
      CB 0 ExhaustB-Zone1           OK         36 degrees C / 96 degrees F
      CB 0 TCBC-Zone0               OK         39 degrees C / 102 degrees F
      CB 1 IntakeA-Zone0            OK         46 degrees C / 114 degrees F
      CB 1 IntakeB-Zone1            OK         43 degrees C / 109 degrees F
      CB 1 IntakeC-Zone0            OK         47 degrees C / 116 degrees F
      CB 1 ExhaustA-Zone0           OK         45 degrees C / 113 degrees F
      CB 1 ExhaustB-Zone1           OK         42 degrees C / 107 degrees F
      CB 1 TCBC-Zone0               OK         46 degrees C / 114 degrees F
      SPMB 0 Intake                 OK         33 degrees C / 91 degrees F
      SPMB 1 Intake                 OK         43 degrees C / 109 degrees F
      Routing Engine 0 CPU          OK         34 degrees C / 93 degrees F
      Routing Engine 1 CPU          OK         42 degrees C / 107 degrees F
      SFB 0 Intake-Zone0            OK         52 degrees C / 125 degrees F
      SFB 0 Exhaust-Zone1           OK         45 degrees C / 113 degrees F
      SFB 0 IntakeA-Zone0           OK         47 degrees C / 116 degrees F
      SFB 0 IntakeB-Zone1           OK         38 degrees C / 100 degrees F
      SFB 0 Exhaust-Zone0           OK         49 degrees C / 120 degrees F
      SFB 0 SFB-XF2-Zone1           OK         59 degrees C / 138 degrees F
      SFB 0 SFB-XF1-Zone0           OK         65 degrees C / 149 degrees F
      SFB 0 SFB-XF0-Zone0           OK         65 degrees C / 149 degrees F
      SFB 1 Intake-Zone0            OK         53 degrees C / 127 degrees F
      SFB 1 Exhaust-Zone1           OK         45 degrees C / 113 degrees F
      SFB 1 IntakeA-Zone0           OK         48 degrees C / 118 degrees F
      SFB 1 IntakeB-Zone1           OK         39 degrees C / 102 degrees F
      SFB 1 Exhaust-Zone0           OK         48 degrees C / 118 degrees F
      SFB 1 SFB-XF2-Zone1           OK         60 degrees C / 140 degrees F
      SFB 1 SFB-XF1-Zone0           OK         64 degrees C / 147 degrees F
      SFB 1 SFB-XF0-Zone0           OK         66 degrees C / 150 degrees F
```

```
SFB 2 Intake-Zone0          OK          54 degrees C / 129 degrees F
SFB 2 Exhaust-Zone1         OK          46 degrees C / 114 degrees F
SFB 2 IntakeA-Zone0         OK          48 degrees C / 118 degrees F
SFB 2 IntakeB-Zone1         OK          39 degrees C / 102 degrees F
SFB 2 Exhaust-Zone0         OK          50 degrees C / 122 degrees F
SFB 2 SFB-XF2-Zone1         OK          63 degrees C / 145 degrees F
SFB 2 SFB-XF1-Zone0         OK          67 degrees C / 152 degrees F
SFB 2 SFB-XF0-Zone0         OK          67 degrees C / 152 degrees F
SFB 3 Intake-Zone0          OK          54 degrees C / 129 degrees F
SFB 3 Exhaust-Zone1         OK          46 degrees C / 114 degrees F
SFB 3 IntakeA-Zone0         OK          50 degrees C / 122 degrees F
SFB 3 IntakeB-Zone1         OK          40 degrees C / 104 degrees F
SFB 3 Exhaust-Zone0         OK          50 degrees C / 122 degrees F
SFB 3 SFB-XF2-Zone1         OK          64 degrees C / 147 degrees F
SFB 3 SFB-XF1-Zone0         OK          66 degrees C / 150 degrees F
SFB 3 SFB-XF0-Zone0         OK          68 degrees C / 154 degrees F
SFB 4 Intake-Zone0          OK          55 degrees C / 131 degrees F
SFB 4 Exhaust-Zone1         OK          48 degrees C / 118 degrees F
SFB 4 IntakeA-Zone0         OK          51 degrees C / 123 degrees F
SFB 4 IntakeB-Zone1         OK          42 degrees C / 107 degrees F
SFB 4 Exhaust-Zone0         OK          51 degrees C / 123 degrees F
SFB 4 SFB-XF2-Zone1         OK          63 degrees C / 145 degrees F
SFB 4 SFB-XF1-Zone0         OK          66 degrees C / 150 degrees F
SFB 4 SFB-XF0-Zone0         OK          68 degrees C / 154 degrees F
SFB 5 Intake-Zone0          OK          55 degrees C / 131 degrees F
SFB 5 Exhaust-Zone1         OK          49 degrees C / 120 degrees F
SFB 5 IntakeA-Zone0         OK          51 degrees C / 123 degrees F
SFB 5 IntakeB-Zone1         OK          43 degrees C / 109 degrees F
SFB 5 Exhaust-Zone0         OK          51 degrees C / 123 degrees F
SFB 5 SFB-XF2-Zone1         OK          65 degrees C / 149 degrees F
SFB 5 SFB-XF1-Zone0         OK          66 degrees C / 150 degrees F
SFB 5 SFB-XF0-Zone0         OK          71 degrees C / 159 degrees F
SFB 6 Intake-Zone0          OK          55 degrees C / 131 degrees F
SFB 6 Exhaust-Zone1         OK          49 degrees C / 120 degrees F
SFB 6 IntakeA-Zone0         OK          51 degrees C / 123 degrees F
SFB 6 IntakeB-Zone1         OK          43 degrees C / 109 degrees F
SFB 6 Exhaust-Zone0         OK          51 degrees C / 123 degrees F
SFB 6 SFB-XF2-Zone1         OK          64 degrees C / 147 degrees F
SFB 6 SFB-XF1-Zone0         OK          66 degrees C / 150 degrees F
SFB 6 SFB-XF0-Zone0         OK          68 degrees C / 154 degrees F
SFB 7 Intake-Zone0          OK          55 degrees C / 131 degrees F
SFB 7 Exhaust-Zone1         OK          49 degrees C / 120 degrees F
SFB 7 IntakeA-Zone0         OK          51 degrees C / 123 degrees F
```

```
    SFB 7 IntakeB-Zone1          OK          43 degrees C / 109 degrees F
    SFB 7 Exhaust-Zone0          OK          52 degrees C / 125 degrees F
    SFB 7 SFB-XF2-Zone1          OK          66 degrees C / 150 degrees F
    SFB 7 SFB-XF1-Zone0          OK          67 degrees C / 152 degrees F
    SFB 7 SFB-XF0-Zone0          OK          70 degrees C / 158 degrees F
    FPC 0 Intake                 OK          41 degrees C / 105 degrees F
    FPC 0 Exhaust A              OK          48 degrees C / 118 degrees F
    FPC 0 Exhaust B              OK          60 degrees C / 140 degrees F
    FPC 0 LU 0 TSen              OK          56 degrees C / 132 degrees F
    FPC 0 LU 0 Chip              OK          59 degrees C / 138 degrees F
    FPC 0 LU 1 TSen              OK          56 degrees C / 132 degrees F
    FPC 0 LU 1 Chip              OK          61 degrees C / 141 degrees F
    FPC 0 LU 2 TSen              OK          56 degrees C / 132 degrees F
    FPC 0 LU 2 Chip              OK          52 degrees C / 125 degrees F
    FPC 0 LU 3 TSen              OK          56 degrees C / 132 degrees F
    FPC 0 LU 3 Chip              OK          52 degrees C / 125 degrees F
    FPC 0 MQ 0 TSen              OK          49 degrees C / 120 degrees F
    FPC 0 MQ 0 Chip              OK          49 degrees C / 120 degrees F
    FPC 0 MQ 1 TSen              OK          49 degrees C / 120 degrees F
    FPC 0 MQ 1 Chip              OK          52 degrees C / 125 degrees F
    FPC 0 MQ 2 TSen              OK          49 degrees C / 120 degrees F
    FPC 0 MQ 2 Chip              OK          45 degrees C / 113 degrees F
    FPC 0 MQ 3 TSen              OK          49 degrees C / 120 degrees F
    FPC 0 MQ 3 Chip              OK          46 degrees C / 114 degrees F
    FPC 1 Intake                 OK          39 degrees C / 102 degrees F
    FPC 1 Exhaust A              OK          48 degrees C / 118 degrees F
    FPC 1 Exhaust B              OK          55 degrees C / 131 degrees F
    FPC 1 LU 0 TSen              OK          52 degrees C / 125 degrees F
    FPC 1 LU 0 Chip              OK          54 degrees C / 129 degrees F
    FPC 1 LU 1 TSen              OK          52 degrees C / 125 degrees F
    FPC 1 LU 1 Chip              OK          56 degrees C / 132 degrees F
    FPC 1 LU 2 TSen              OK          52 degrees C / 125 degrees F
    FPC 1 LU 2 Chip              OK          49 degrees C / 120 degrees F
    FPC 1 LU 3 TSen              OK          52 degrees C / 125 degrees F
    FPC 1 LU 3 Chip              OK          50 degrees C / 122 degrees F
    FPC 1 MQ 0 TSen              OK          48 degrees C / 118 degrees F
    FPC 1 MQ 0 Chip              OK          48 degrees C / 118 degrees F
    FPC 1 MQ 1 TSen              OK          48 degrees C / 118 degrees F
    FPC 1 MQ 1 Chip              OK          51 degrees C / 123 degrees F
    FPC 1 MQ 2 TSen              OK          48 degrees C / 118 degrees F
    FPC 1 MQ 2 Chip              OK          45 degrees C / 113 degrees F
    FPC 1 MQ 3 TSen              OK          48 degrees C / 118 degrees F
    FPC 1 MQ 3 Chip              OK          45 degrees C / 113 degrees F
```

```
        FPC 2 Intake                OK          39 degrees C / 102 degrees F
        FPC 2 Exhaust A             OK          48 degrees C / 118 degrees F
        FPC 2 Exhaust B             OK          58 degrees C / 136 degrees F
        FPC 2 LU 0 TSen             OK          55 degrees C / 131 degrees F
        FPC 2 LU 0 Chip             OK          57 degrees C / 134 degrees F
        FPC 2 LU 1 TSen             OK          55 degrees C / 131 degrees F
        FPC 2 LU 1 Chip             OK          63 degrees C / 145 degrees F
        FPC 2 LU 2 TSen             OK          55 degrees C / 131 degrees F
        FPC 2 LU 2 Chip             OK          51 degrees C / 123 degrees F
        FPC 2 LU 3 TSen             OK          55 degrees C / 131 degrees F
        FPC 2 LU 3 Chip             OK          52 degrees C / 125 degrees F
        FPC 2 MQ 0 TSen             OK          48 degrees C / 118 degrees F
        FPC 2 MQ 0 Chip             OK          50 degrees C / 122 degrees F
        FPC 2 MQ 1 TSen             OK          48 degrees C / 118 degrees F
        FPC 2 MQ 1 Chip             OK          52 degrees C / 125 degrees F
        FPC 2 MQ 2 TSen             OK          48 degrees C / 118 degrees F
        FPC 2 MQ 2 Chip             OK          47 degrees C / 116 degrees F
        FPC 2 MQ 3 TSen             OK          48 degrees C / 118 degrees F
        FPC 2 MQ 3 Chip             OK          47 degrees C / 116 degrees F
        FPC 3 Intake                OK          41 degrees C / 105 degrees F
        FPC 3 Exhaust A             OK          48 degrees C / 118 degrees F
        FPC 3 Exhaust B             OK          58 degrees C / 136 degrees F
        FPC 3 LU 0 TSen             OK          56 degrees C / 132 degrees F
        FPC 3 LU 0 Chip             OK          59 degrees C / 138 degrees F
        FPC 3 LU 1 TSen             OK          56 degrees C / 132 degrees F
        FPC 3 LU 1 Chip             OK          61 degrees C / 141 degrees F
        FPC 3 LU 2 TSen             OK          56 degrees C / 132 degrees F
        FPC 3 LU 2 Chip             OK          51 degrees C / 123 degrees F
        FPC 3 LU 3 TSen             OK          56 degrees C / 132 degrees F
        FPC 3 LU 3 Chip             OK          53 degrees C / 127 degrees F
        FPC 3 MQ 0 TSen             OK          50 degrees C / 122 degrees F
        FPC 3 MQ 0 Chip             OK          51 degrees C / 123 degrees F
        FPC 3 MQ 1 TSen             OK          50 degrees C / 122 degrees F
        FPC 3 MQ 1 Chip             OK          55 degrees C / 131 degrees F
        FPC 3 MQ 2 TSen             OK          50 degrees C / 122 degrees F
        FPC 3 MQ 2 Chip             OK          47 degrees C / 116 degrees F
        FPC 3 MQ 3 TSen             OK          50 degrees C / 122 degrees F
        FPC 3 MQ 3 Chip             OK          50 degrees C / 122 degrees F
        FPC 4 Intake                OK          41 degrees C / 105 degrees F
        FPC 4 Exhaust A             OK          48 degrees C / 118 degrees F
        FPC 4 Exhaust B             OK          59 degrees C / 138 degrees F
        FPC 4 LU 0 TSen             OK          56 degrees C / 132 degrees F
        FPC 4 LU 0 Chip             OK          60 degrees C / 140 degrees F
```

```
        FPC 4 LU 1 TSen                 OK          56 degrees C / 132 degrees F
        FPC 4 LU 1 Chip                 OK          64 degrees C / 147 degrees F
        FPC 4 LU 2 TSen                 OK          56 degrees C / 132 degrees F
        FPC 4 LU 2 Chip                 OK          51 degrees C / 123 degrees F
        FPC 4 LU 3 TSen                 OK          56 degrees C / 132 degrees F
        FPC 4 LU 3 Chip                 OK          54 degrees C / 129 degrees F
        FPC 4 MQ 0 TSen                 OK          49 degrees C / 120 degrees F
        FPC 4 MQ 0 Chip                 OK          53 degrees C / 127 degrees F
        FPC 4 MQ 1 TSen                 OK          49 degrees C / 120 degrees F
        FPC 4 MQ 1 Chip                 OK          55 degrees C / 131 degrees F
        FPC 4 MQ 2 TSen                 OK          49 degrees C / 120 degrees F
        FPC 4 MQ 2 Chip                 OK          48 degrees C / 118 degrees F
        FPC 4 MQ 3 TSen                 OK          49 degrees C / 120 degrees F
        FPC 4 MQ 3 Chip                 OK          49 degrees C / 120 degrees F
        FPC 5 Intake                    OK          42 degrees C / 107 degrees F
        FPC 5 Exhaust A                 OK          49 degrees C / 120 degrees F
        FPC 5 Exhaust B                 OK          61 degrees C / 141 degrees F
        FPC 5 LU 0 TSen                 OK          58 degrees C / 136 degrees F
        FPC 5 LU 0 Chip                 OK          61 degrees C / 141 degrees F
        FPC 5 LU 1 TSen                 OK          58 degrees C / 136 degrees F
        FPC 5 LU 1 Chip                 OK          64 degrees C / 147 degrees F
        FPC 5 LU 2 TSen                 OK          58 degrees C / 136 degrees F
        FPC 5 LU 2 Chip                 OK          56 degrees C / 132 degrees F
        FPC 5 LU 3 TSen                 OK          58 degrees C / 136 degrees F
        FPC 5 LU 3 Chip                 OK          54 degrees C / 129 degrees F
        FPC 5 MQ 0 TSen                 OK          51 degrees C / 123 degrees F
        FPC 5 MQ 0 Chip                 OK          53 degrees C / 127 degrees F
        FPC 5 MQ 1 TSen                 OK          51 degrees C / 123 degrees F
        FPC 5 MQ 1 Chip                 OK          55 degrees C / 131 degrees F
        FPC 5 MQ 2 TSen                 OK          51 degrees C / 123 degrees F
        FPC 5 MQ 2 Chip                 OK          50 degrees C / 122 degrees F
        FPC 5 MQ 3 TSen                 OK          51 degrees C / 123 degrees F
        FPC 5 MQ 3 Chip                 OK          49 degrees C / 120 degrees F
        FPC 6 Intake                    OK          42 degrees C / 107 degrees F
        FPC 6 Exhaust A                 OK          50 degrees C / 122 degrees F
        FPC 6 Exhaust B                 OK          61 degrees C / 141 degrees F
        FPC 6 LU 0 TSen                 OK          58 degrees C / 136 degrees F
        FPC 6 LU 0 Chip                 OK          62 degrees C / 143 degrees F
        FPC 6 LU 1 TSen                 OK          58 degrees C / 136 degrees F
        FPC 6 LU 1 Chip                 OK          64 degrees C / 147 degrees F
        FPC 6 LU 2 TSen                 OK          58 degrees C / 136 degrees F
        FPC 6 LU 2 Chip                 OK          56 degrees C / 132 degrees F
        FPC 6 LU 3 TSen                 OK          58 degrees C / 136 degrees F
```

```
FPC 6 LU 3 Chip                 OK          56 degrees C / 132 degrees F
FPC 6 MQ 0 TSen                 OK          51 degrees C / 123 degrees F
FPC 6 MQ 0 Chip                 OK          58 degrees C / 136 degrees F
FPC 6 MQ 1 TSen                 OK          51 degrees C / 123 degrees F
FPC 6 MQ 1 Chip                 OK          61 degrees C / 141 degrees F
FPC 6 MQ 2 TSen                 OK          51 degrees C / 123 degrees F
FPC 6 MQ 2 Chip                 OK          51 degrees C / 123 degrees F
FPC 6 MQ 3 TSen                 OK          51 degrees C / 123 degrees F
FPC 6 MQ 3 Chip                 OK          51 degrees C / 123 degrees F
FPC 7 Intake                    OK          42 degrees C / 107 degrees F
FPC 7 Exhaust A                 OK          50 degrees C / 122 degrees F
FPC 7 Exhaust B                 OK          61 degrees C / 141 degrees F
FPC 7 LU 0 TSen                 OK          58 degrees C / 136 degrees F
FPC 7 LU 0 Chip                 OK          59 degrees C / 138 degrees F
FPC 7 LU 1 TSen                 OK          58 degrees C / 136 degrees F
FPC 7 LU 1 Chip                 OK          64 degrees C / 147 degrees F
FPC 7 LU 2 TSen                 OK          58 degrees C / 136 degrees F
FPC 7 LU 2 Chip                 OK          54 degrees C / 129 degrees F
FPC 7 LU 3 TSen                 OK          58 degrees C / 136 degrees F
FPC 7 LU 3 Chip                 OK          53 degrees C / 127 degrees F
FPC 7 MQ 0 TSen                 OK          51 degrees C / 123 degrees F
FPC 7 MQ 0 Chip                 OK          53 degrees C / 127 degrees F
FPC 7 MQ 1 TSen                 OK          51 degrees C / 123 degrees F
FPC 7 MQ 1 Chip                 OK          54 degrees C / 129 degrees F
FPC 7 MQ 2 TSen                 OK          51 degrees C / 123 degrees F
FPC 7 MQ 2 Chip                 OK          48 degrees C / 118 degrees F
FPC 7 MQ 3 TSen                 OK          51 degrees C / 123 degrees F
FPC 7 MQ 3 Chip                 OK          48 degrees C / 118 degrees F
FPC 8 Intake                    OK          42 degrees C / 107 degrees F
FPC 8 Exhaust A                 OK          50 degrees C / 122 degrees F
FPC 8 Exhaust B                 OK          61 degrees C / 141 degrees F
FPC 8 LU 0 TSen                 OK          58 degrees C / 136 degrees F
FPC 8 LU 0 Chip                 OK          63 degrees C / 145 degrees F
FPC 8 LU 1 TSen                 OK          58 degrees C / 136 degrees F
FPC 8 LU 1 Chip                 OK          65 degrees C / 149 degrees F
FPC 8 LU 2 TSen                 OK          58 degrees C / 136 degrees F
FPC 8 LU 2 Chip                 OK          56 degrees C / 132 degrees F
FPC 8 LU 3 TSen                 OK          58 degrees C / 136 degrees F
FPC 8 LU 3 Chip                 OK          56 degrees C / 132 degrees F
FPC 8 MQ 0 TSen                 OK          50 degrees C / 122 degrees F
FPC 8 MQ 0 Chip                 OK          53 degrees C / 127 degrees F
FPC 8 MQ 1 TSen                 OK          50 degrees C / 122 degrees F
FPC 8 MQ 1 Chip                 OK          58 degrees C / 136 degrees F
```

```
FPC 8 MQ 2 TSen                 OK          50 degrees C / 122 degrees F
FPC 8 MQ 2 Chip                 OK          48 degrees C / 118 degrees F
FPC 8 MQ 3 TSen                 OK          50 degrees C / 122 degrees F
FPC 8 MQ 3 Chip                 OK          49 degrees C / 120 degrees F
FPC 9 Intake                    OK          43 degrees C / 109 degrees F
FPC 9 Exhaust A                 OK          51 degrees C / 123 degrees F
FPC 9 Exhaust B                 OK          61 degrees C / 141 degrees F
FPC 9 LU 0 TSen                 OK          58 degrees C / 136 degrees F
FPC 9 LU 0 Chip                 OK          61 degrees C / 141 degrees F
FPC 9 LU 1 TSen                 OK          58 degrees C / 136 degrees F
FPC 9 LU 1 Chip                 OK          63 degrees C / 145 degrees F
FPC 9 LU 2 TSen                 OK          58 degrees C / 136 degrees F
FPC 9 LU 2 Chip                 OK          55 degrees C / 131 degrees F
FPC 9 LU 3 TSen                 OK          58 degrees C / 136 degrees F
FPC 9 LU 3 Chip                 OK          54 degrees C / 129 degrees F
FPC 9 MQ 0 TSen                 OK          52 degrees C / 125 degrees F
FPC 9 MQ 0 Chip                 OK          53 degrees C / 127 degrees F
FPC 9 MQ 1 TSen                 OK          52 degrees C / 125 degrees F
FPC 9 MQ 1 Chip                 OK          54 degrees C / 129 degrees F
FPC 9 MQ 2 TSen                 OK          52 degrees C / 125 degrees F
FPC 9 MQ 2 Chip                 OK          48 degrees C / 118 degrees F
FPC 9 MQ 3 TSen                 OK          52 degrees C / 125 degrees F
FPC 9 MQ 3 Chip                 OK          49 degrees C / 120 degrees F
FPC 10 Intake                   OK          44 degrees C / 111 degrees F
FPC 10 Exhaust A                OK          48 degrees C / 118 degrees F
FPC 10 Exhaust B                OK          54 degrees C / 129 degrees F
FPC 10 LU 0 TSen                OK          53 degrees C / 127 degrees F
FPC 10 LU 0 Chip                OK          54 degrees C / 129 degrees F
FPC 10 LU 1 TSen                OK          53 degrees C / 127 degrees F
FPC 10 LU 1 Chip                OK          58 degrees C / 136 degrees F
FPC 10 LU 2 TSen                OK          53 degrees C / 127 degrees F
FPC 10 LU 2 Chip                OK          51 degrees C / 123 degrees F
FPC 10 LU 3 TSen                OK          53 degrees C / 127 degrees F
FPC 10 LU 3 Chip                OK          51 degrees C / 123 degrees F
FPC 10 MQ 0 TSen                OK          49 degrees C / 120 degrees F
FPC 10 MQ 0 Chip                OK          50 degrees C / 122 degrees F
FPC 10 MQ 1 TSen                OK          49 degrees C / 120 degrees F
FPC 10 MQ 1 Chip                OK          52 degrees C / 125 degrees F
FPC 10 MQ 2 TSen                OK          49 degrees C / 120 degrees F
FPC 10 MQ 2 Chip                OK          48 degrees C / 118 degrees F
FPC 10 MQ 3 TSen                OK          49 degrees C / 120 degrees F
FPC 10 MQ 3 Chip                OK          48 degrees C / 118 degrees F
FPC 11 Intake                   OK          39 degrees C / 102 degrees F
```

```
FPC 11 Exhaust A                OK          47 degrees C / 116 degrees F
FPC 11 Exhaust B                OK          51 degrees C / 123 degrees F
FPC 11 LU 0 TSen                OK          50 degrees C / 122 degrees F
FPC 11 LU 0 Chip                OK          52 degrees C / 125 degrees F
FPC 11 LU 1 TSen                OK          50 degrees C / 122 degrees F
FPC 11 LU 1 Chip                OK          55 degrees C / 131 degrees F
FPC 11 LU 2 TSen                OK          50 degrees C / 122 degrees F
FPC 11 LU 2 Chip                OK          49 degrees C / 120 degrees F
FPC 11 LU 3 TSen                OK          50 degrees C / 122 degrees F
FPC 11 LU 3 Chip                OK          49 degrees C / 120 degrees F
FPC 11 MQ 0 TSen                OK          47 degrees C / 116 degrees F
FPC 11 MQ 0 Chip                OK          47 degrees C / 116 degrees F
FPC 11 MQ 1 TSen                OK          47 degrees C / 116 degrees F
FPC 11 MQ 1 Chip                OK          51 degrees C / 123 degrees F
FPC 11 MQ 2 TSen                OK          47 degrees C / 116 degrees F
FPC 11 MQ 2 Chip                OK          45 degrees C / 113 degrees F
FPC 11 MQ 3 TSen                OK          47 degrees C / 116 degrees F
FPC 11 MQ 3 Chip                OK          49 degrees C / 120 degrees F
FPC 12 Intake                   OK          39 degrees C / 102 degrees F
FPC 12 Exhaust A                OK          47 degrees C / 116 degrees F
FPC 12 Exhaust B                OK          50 degrees C / 122 degrees F
FPC 12 LU 0 TSen                OK          49 degrees C / 120 degrees F
FPC 12 LU 0 Chip                OK          51 degrees C / 123 degrees F
FPC 12 LU 1 TSen                OK          49 degrees C / 120 degrees F
FPC 12 LU 1 Chip                OK          54 degrees C / 129 degrees F
FPC 12 LU 2 TSen                OK          49 degrees C / 120 degrees F
FPC 12 LU 2 Chip                OK          47 degrees C / 116 degrees F
FPC 12 LU 3 TSen                OK          49 degrees C / 120 degrees F
FPC 12 LU 3 Chip                OK          49 degrees C / 120 degrees F
FPC 12 MQ 0 TSen                OK          47 degrees C / 116 degrees F
FPC 12 MQ 0 Chip                OK          46 degrees C / 114 degrees F
FPC 12 MQ 1 TSen                OK          47 degrees C / 116 degrees F
FPC 12 MQ 1 Chip                OK          51 degrees C / 123 degrees F
FPC 12 MQ 2 TSen                OK          47 degrees C / 116 degrees F
FPC 12 MQ 2 Chip                OK          45 degrees C / 113 degrees F
FPC 12 MQ 3 TSen                OK          47 degrees C / 116 degrees F
FPC 12 MQ 3 Chip                OK          47 degrees C / 116 degrees F
FPC 13 Intake                   OK          40 degrees C / 104 degrees F
FPC 13 Exhaust A                OK          48 degrees C / 118 degrees F
FPC 13 Exhaust B                OK          51 degrees C / 123 degrees F
FPC 13 LU 0 TSen                OK          50 degrees C / 122 degrees F
FPC 13 LU 0 Chip                OK          52 degrees C / 125 degrees F
FPC 13 LU 1 TSen                OK          50 degrees C / 122 degrees F
```

```
        FPC 13 LU 1 Chip                OK          54 degrees C / 129 degrees F
        FPC 13 LU 2 TSen                OK          50 degrees C / 122 degrees F
        FPC 13 LU 2 Chip                OK          48 degrees C / 118 degrees F
        FPC 13 LU 3 TSen                OK          50 degrees C / 122 degrees F
        FPC 13 LU 3 Chip                OK          48 degrees C / 118 degrees F
        FPC 13 MQ 0 TSen                OK          48 degrees C / 118 degrees F
        FPC 13 MQ 0 Chip                OK          47 degrees C / 116 degrees F
        FPC 13 MQ 1 TSen                OK          48 degrees C / 118 degrees F
        FPC 13 MQ 1 Chip                OK          51 degrees C / 123 degrees F
        FPC 13 MQ 2 TSen                OK          48 degrees C / 118 degrees F
        FPC 13 MQ 2 Chip                OK          46 degrees C / 114 degrees F
        FPC 13 MQ 3 TSen                OK          48 degrees C / 118 degrees F
        FPC 13 MQ 3 Chip                OK          47 degrees C / 116 degrees F
        FPC 14 Intake                   OK          41 degrees C / 105 degrees F
        FPC 14 Exhaust A                OK          49 degrees C / 120 degrees F
        FPC 14 Exhaust B                OK          50 degrees C / 122 degrees F
        FPC 14 LU 0 TSen                OK          49 degrees C / 120 degrees F
        FPC 14 LU 0 Chip                OK          50 degrees C / 122 degrees F
        FPC 14 LU 1 TSen                OK          49 degrees C / 120 degrees F
        FPC 14 LU 1 Chip                OK          54 degrees C / 129 degrees F
        FPC 14 LU 2 TSen                OK          49 degrees C / 120 degrees F
        FPC 14 LU 2 Chip                OK          48 degrees C / 118 degrees F
        FPC 14 LU 3 TSen                OK          49 degrees C / 120 degrees F
        FPC 14 LU 3 Chip                OK          50 degrees C / 122 degrees F
        FPC 14 MQ 0 TSen                OK          48 degrees C / 118 degrees F
        FPC 14 MQ 0 Chip                OK          48 degrees C / 118 degrees F
        FPC 14 MQ 1 TSen                OK          48 degrees C / 118 degrees F
        FPC 14 MQ 1 Chip                OK          52 degrees C / 125 degrees F
        FPC 14 MQ 2 TSen                OK          48 degrees C / 118 degrees F
        FPC 14 MQ 2 Chip                OK          47 degrees C / 116 degrees F
        FPC 14 MQ 3 TSen                OK          48 degrees C / 118 degrees F
        FPC 14 MQ 3 Chip                OK          50 degrees C / 122 degrees F
        FPC 15 Intake                   OK          42 degrees C / 107 degrees F
        FPC 15 Exhaust A                OK          51 degrees C / 123 degrees F
        FPC 15 Exhaust B                OK          52 degrees C / 125 degrees F
        FPC 15 LU 0 TSen                OK          52 degrees C / 125 degrees F
        FPC 15 LU 0 Chip                OK          55 degrees C / 131 degrees F
        FPC 15 LU 1 TSen                OK          52 degrees C / 125 degrees F
        FPC 15 LU 1 Chip                OK          59 degrees C / 138 degrees F
        FPC 15 LU 2 TSen                OK          52 degrees C / 125 degrees F
        FPC 15 LU 2 Chip                OK          50 degrees C / 122 degrees F
        FPC 15 LU 3 TSen                OK          52 degrees C / 125 degrees F
        FPC 15 LU 3 Chip                OK          51 degrees C / 123 degrees F
```

```
        FPC 15 MQ 0 TSen                OK          51 degrees C / 123 degrees F
        FPC 15 MQ 0 Chip                OK          53 degrees C / 127 degrees F
        FPC 15 MQ 1 TSen                OK          51 degrees C / 123 degrees F
        FPC 15 MQ 1 Chip                OK          60 degrees C / 140 degrees F
        FPC 15 MQ 2 TSen                OK          51 degrees C / 123 degrees F
        FPC 15 MQ 2 Chip                OK          52 degrees C / 125 degrees F
        FPC 15 MQ 3 TSen                OK          51 degrees C / 123 degrees F
        FPC 15 MQ 3 Chip                OK          53 degrees C / 127 degrees F
        FPC 16 Intake                   OK          44 degrees C / 111 degrees F
        FPC 16 Exhaust A                OK          51 degrees C / 123 degrees F
        FPC 16 Exhaust B                OK          53 degrees C / 127 degrees F
        FPC 16 LU 0 TSen                OK          51 degrees C / 123 degrees F
        FPC 16 LU 0 Chip                OK          52 degrees C / 125 degrees F
        FPC 16 LU 1 TSen                OK          51 degrees C / 123 degrees F
        FPC 16 LU 1 Chip                OK          56 degrees C / 132 degrees F
        FPC 16 LU 2 TSen                OK          51 degrees C / 123 degrees F
        FPC 16 LU 2 Chip                OK          50 degrees C / 122 degrees F
        FPC 16 LU 3 TSen                OK          51 degrees C / 123 degrees F
        FPC 16 LU 3 Chip                OK          50 degrees C / 122 degrees F
        FPC 16 MQ 0 TSen                OK          51 degrees C / 123 degrees F
        FPC 16 MQ 0 Chip                OK          50 degrees C / 122 degrees F
        FPC 16 MQ 1 TSen                OK          51 degrees C / 123 degrees F
        FPC 16 MQ 1 Chip                OK          55 degrees C / 131 degrees F
        FPC 16 MQ 2 TSen                OK          51 degrees C / 123 degrees F
        FPC 16 MQ 2 Chip                OK          49 degrees C / 120 degrees F
        FPC 16 MQ 3 TSen                OK          51 degrees C / 123 degrees F
        FPC 16 MQ 3 Chip                OK          52 degrees C / 125 degrees F
        FPC 17 Intake                   OK          45 degrees C / 113 degrees F
        FPC 17 Exhaust A                OK          52 degrees C / 125 degrees F
        FPC 17 Exhaust B                OK          55 degrees C / 131 degrees F
        FPC 17 LU 0 TSen                OK          54 degrees C / 129 degrees F
        FPC 17 LU 0 Chip                OK          57 degrees C / 134 degrees F
        FPC 17 LU 1 TSen                OK          54 degrees C / 129 degrees F
        FPC 17 LU 1 Chip                OK          61 degrees C / 141 degrees F
        FPC 17 LU 2 TSen                OK          54 degrees C / 129 degrees F
        FPC 17 LU 2 Chip                OK          54 degrees C / 129 degrees F
        FPC 17 LU 3 TSen                OK          54 degrees C / 129 degrees F
        FPC 17 LU 3 Chip                OK          55 degrees C / 131 degrees F
        FPC 17 MQ 0 TSen                OK          53 degrees C / 127 degrees F
        FPC 17 MQ 0 Chip                OK          53 degrees C / 127 degrees F
        FPC 17 MQ 1 TSen                OK          53 degrees C / 127 degrees F
        FPC 17 MQ 1 Chip                OK          57 degrees C / 134 degrees F
        FPC 17 MQ 2 TSen                OK          53 degrees C / 127 degrees F
```

```
FPC 17 MQ 2 Chip              OK          51 degrees C / 123 degrees F
FPC 17 MQ 3 TSen              OK          53 degrees C / 127 degrees F
FPC 17 MQ 3 Chip              OK          54 degrees C / 129 degrees F
FPC 18 Intake                 OK          46 degrees C / 114 degrees F
FPC 18 Exhaust A              OK          53 degrees C / 127 degrees F
FPC 18 Exhaust B              OK          57 degrees C / 134 degrees F
FPC 18 LU 0 TSen              OK          56 degrees C / 132 degrees F
FPC 18 LU 0 Chip              OK          58 degrees C / 136 degrees F
FPC 18 LU 1 TSen              OK          56 degrees C / 132 degrees F
FPC 18 LU 1 Chip              OK          63 degrees C / 145 degrees F
FPC 18 LU 2 TSen              OK          56 degrees C / 132 degrees F
FPC 18 LU 2 Chip              OK          54 degrees C / 129 degrees F
FPC 18 LU 3 TSen              OK          56 degrees C / 132 degrees F
FPC 18 LU 3 Chip              OK          56 degrees C / 132 degrees F
FPC 18 MQ 0 TSen              OK          54 degrees C / 129 degrees F
FPC 18 MQ 0 Chip              OK          57 degrees C / 134 degrees F
FPC 18 MQ 1 TSen              OK          54 degrees C / 129 degrees F
FPC 18 MQ 1 Chip              OK          62 degrees C / 143 degrees F
FPC 18 MQ 2 TSen              OK          54 degrees C / 129 degrees F
FPC 18 MQ 2 Chip              OK          53 degrees C / 127 degrees F
FPC 18 MQ 3 TSen              OK          54 degrees C / 129 degrees F
FPC 18 MQ 3 Chip              OK          56 degrees C / 132 degrees F
FPC 19 Intake                 OK          49 degrees C / 120 degrees F
FPC 19 Exhaust A              OK          56 degrees C / 132 degrees F
FPC 19 Exhaust B              OK          62 degrees C / 143 degrees F
FPC 19 LU 0 TSen              OK          62 degrees C / 143 degrees F
FPC 19 LU 0 Chip              OK          63 degrees C / 145 degrees F
FPC 19 LU 1 TSen              OK          62 degrees C / 143 degrees F
FPC 19 LU 1 Chip              OK          69 degrees C / 156 degrees F
FPC 19 LU 2 TSen              OK          62 degrees C / 143 degrees F
FPC 19 LU 2 Chip              OK          61 degrees C / 141 degrees F
FPC 19 LU 3 TSen              OK          62 degrees C / 143 degrees F
FPC 19 LU 3 Chip              OK          62 degrees C / 143 degrees F
FPC 19 MQ 0 TSen              OK          58 degrees C / 136 degrees F
FPC 19 MQ 0 Chip              OK          62 degrees C / 143 degrees F
FPC 19 MQ 1 TSen              OK          58 degrees C / 136 degrees F
FPC 19 MQ 1 Chip              OK          64 degrees C / 147 degrees F
FPC 19 MQ 2 TSen              OK          58 degrees C / 136 degrees F
FPC 19 MQ 2 Chip              OK          59 degrees C / 138 degrees F
FPC 19 MQ 3 TSen              OK          58 degrees C / 136 degrees F
FPC 19 MQ 3 Chip              OK          60 degrees C / 140 degrees F
ADC 0 Intake                  OK          40 degrees C / 104 degrees F
ADC 0 Exhaust                 OK          50 degrees C / 122 degrees F
```

```
ADC 0 ADC-XF1                OK          58 degrees C / 136 degrees F
ADC 0 ADC-XF0                OK          63 degrees C / 145 degrees F
ADC 1 Intake                 OK          38 degrees C / 100 degrees F
ADC 1 Exhaust                OK          48 degrees C / 118 degrees F
ADC 1 ADC-XF1                OK          59 degrees C / 138 degrees F
ADC 1 ADC-XF0                OK          61 degrees C / 141 degrees F
ADC 2 Intake                 OK          36 degrees C / 96 degrees F
ADC 2 Exhaust                OK          50 degrees C / 122 degrees F
ADC 2 ADC-XF1                OK          53 degrees C / 127 degrees F
ADC 2 ADC-XF0                OK          59 degrees C / 138 degrees F
ADC 3 Intake                 OK          39 degrees C / 102 degrees F
ADC 3 Exhaust                OK          49 degrees C / 120 degrees F
ADC 3 ADC-XF1                OK          61 degrees C / 141 degrees F
ADC 3 ADC-XF0                OK          62 degrees C / 143 degrees F
ADC 4 Intake                 OK          39 degrees C / 102 degrees F
ADC 4 Exhaust                OK          49 degrees C / 120 degrees F
ADC 4 ADC-XF1                OK          60 degrees C / 140 degrees F
ADC 4 ADC-XF0                OK          61 degrees C / 141 degrees F
ADC 5 Intake                 OK          38 degrees C / 100 degrees F
ADC 5 Exhaust                OK          52 degrees C / 125 degrees F
ADC 5 ADC-XF1                OK          55 degrees C / 131 degrees F
ADC 5 ADC-XF0                OK          65 degrees C / 149 degrees F
ADC 6 Intake                 OK          39 degrees C / 102 degrees F
ADC 6 Exhaust                OK          51 degrees C / 123 degrees F
ADC 6 ADC-XF1                OK          58 degrees C / 136 degrees F
ADC 6 ADC-XF0                OK          63 degrees C / 145 degrees F
ADC 7 Intake                 OK          39 degrees C / 102 degrees F
ADC 7 Exhaust                OK          52 degrees C / 125 degrees F
ADC 7 ADC-XF1                OK          61 degrees C / 141 degrees F
ADC 7 ADC-XF0                OK          68 degrees C / 154 degrees F
ADC 8 Intake                 OK          39 degrees C / 102 degrees F
ADC 8 Exhaust                OK          50 degrees C / 122 degrees F
ADC 8 ADC-XF1                OK          64 degrees C / 147 degrees F
ADC 8 ADC-XF0                OK          63 degrees C / 145 degrees F
ADC 9 Intake                 OK          41 degrees C / 105 degrees F
ADC 9 Exhaust                OK          50 degrees C / 122 degrees F
ADC 9 ADC-XF1                OK          60 degrees C / 140 degrees F
ADC 9 ADC-XF0                OK          62 degrees C / 143 degrees F
ADC 10 Intake                OK          46 degrees C / 114 degrees F
ADC 10 Exhaust               OK          53 degrees C / 127 degrees F
ADC 10 ADC-XF1               OK          66 degrees C / 150 degrees F
ADC 10 ADC-XF0               OK          65 degrees C / 149 degrees F
ADC 11 Intake                OK          46 degrees C / 114 degrees F
```

```
      ADC 11 Exhaust                OK          53 degrees C / 127 degrees F
      ADC 11 ADC-XF1                OK          63 degrees C / 145 degrees F
      ADC 11 ADC-XF0                OK          64 degrees C / 147 degrees F
      ADC 12 Intake                 OK          47 degrees C / 116 degrees F
      ADC 12 Exhaust                OK          53 degrees C / 127 degrees F
      ADC 12 ADC-XF1                OK          65 degrees C / 149 degrees F
      ADC 12 ADC-XF0                OK          65 degrees C / 149 degrees F
      ADC 13 Intake                 OK          48 degrees C / 118 degrees F
      ADC 13 Exhaust                OK          55 degrees C / 131 degrees F
      ADC 13 ADC-XF1                OK          65 degrees C / 149 degrees F
      ADC 13 ADC-XF0                OK          67 degrees C / 152 degrees F
      ADC 14 Intake                 OK          49 degrees C / 120 degrees F
      ADC 14 Exhaust                OK          57 degrees C / 134 degrees F
      ADC 14 ADC-XF1                OK          68 degrees C / 154 degrees F
      ADC 14 ADC-XF0                OK          72 degrees C / 161 degrees F
      ADC 15 Intake                 OK          50 degrees C / 122 degrees F
      ADC 15 Exhaust                OK          56 degrees C / 132 degrees F
      ADC 15 ADC-XF1                OK          68 degrees C / 154 degrees F
      ADC 15 ADC-XF0                OK          68 degrees C / 154 degrees F
      ADC 16 Intake                 OK          51 degrees C / 123 degrees F
      ADC 16 Exhaust                OK          57 degrees C / 134 degrees F
      ADC 16 ADC-XF1                OK          67 degrees C / 152 degrees F
      ADC 16 ADC-XF0                OK          68 degrees C / 154 degrees F
      ADC 17 Intake                 OK          51 degrees C / 123 degrees F
      ADC 17 Exhaust                OK          57 degrees C / 134 degrees F
      ADC 17 ADC-XF1                OK          69 degrees C / 156 degrees F
      ADC 17 ADC-XF0                OK          69 degrees C / 156 degrees F
      ADC 18 Intake                 OK          52 degrees C / 125 degrees F
      ADC 18 Exhaust                OK          58 degrees C / 136 degrees F
      ADC 18 ADC-XF1                OK          67 degrees C / 152 degrees F
      ADC 18 ADC-XF0                OK          72 degrees C / 161 degrees F
      ADC 19 Intake                 OK          50 degrees C / 122 degrees F
      ADC 19 Exhaust                OK          58 degrees C / 136 degrees F
      ADC 19 ADC-XF1                OK          68 degrees C / 154 degrees F
      ADC 19 ADC-XF0                OK          71 degrees C / 159 degrees F
```

show chassis environment monitored (MX2008 Router)

```
user@host> show chassis environment monitored
Class Item                          Status     Measurement
Temp  CB 0 Inlet1                   OK         37 degrees C / 98 degrees F
```

```
        CB 0 Inlet2                   OK          46 degrees C / 114 degrees F
        CB 0 Inlet3                   OK          44 degrees C / 111 degrees F
        CB 0 Inlet4                   OK          42 degrees C / 107 degrees F
        CB 0 Exhaust1                 OK          30 degrees C / 86 degrees F
        CB 0 Exhaust2                 OK          40 degrees C / 104 degrees F
        CB 0 Exhaust3                 OK          48 degrees C / 118 degrees F
        CB 0 Exhaust4                 OK          46 degrees C / 114 degrees F
        CB 1 Inlet1                   OK          30 degrees C / 86 degrees F
        CB 1 Inlet2                   OK          31 degrees C / 87 degrees F
        CB 1 Inlet3                   OK          29 degrees C / 84 degrees F
        CB 1 Inlet4                   OK          32 degrees C / 89 degrees F
        CB 1 Exhaust1                 OK          30 degrees C / 86 degrees F
        CB 1 Exhaust2                 OK          33 degrees C / 91 degrees F
        CB 1 Exhaust3                 OK          34 degrees C / 93 degrees F
        CB 1 Exhaust4                 OK          35 degrees C / 95 degrees F
        Routing Engine 0 CPU          OK          76 degrees C / 168 degrees F
        Routing Engine 1 CPU          OK          47 degrees C / 116 degrees F
        SFB 0 Inlet2                  OK          44 degrees C / 111 degrees F
        SFB 0 Exhaust1                OK          39 degrees C / 102 degrees F
        SFB 0 Inlet1                  OK          41 degrees C / 105 degrees F
        SFB 0 Exhaust2                OK          45 degrees C / 113 degrees F
        SFB 0 SFB2-PF-local           OK          45 degrees C / 113 degrees F
        SFB 0 SFB2-PF-die             OK          51 degrees C / 123 degrees F
        SFB 1 Inlet2                  OK          30 degrees C / 86 degrees F
        SFB 1 Exhaust1                OK          27 degrees C / 80 degrees F
        SFB 1 Inlet1                  OK          28 degrees C / 82 degrees F
        SFB 1 Exhaust2                OK          31 degrees C / 87 degrees F
        SFB 1 SFB2-PF-local           OK          30 degrees C / 86 degrees F
        SFB 1 SFB2-PF-die             OK          37 degrees C / 98 degrees F
        SFB 2 Inlet2                  OK          28 degrees C / 82 degrees F
        SFB 2 Exhaust1                OK          26 degrees C / 78 degrees F
        SFB 2 Inlet1                  OK          27 degrees C / 80 degrees F
        SFB 2 Exhaust2                OK          28 degrees C / 82 degrees F
        SFB 2 SFB2-PF-local           OK          27 degrees C / 80 degrees F
        SFB 2 SFB2-PF-die             OK          33 degrees C / 91 degrees F
        SFB 3 Inlet2                  OK          28 degrees C / 82 degrees F
        SFB 3 Exhaust1                OK          26 degrees C / 78 degrees F
        SFB 3 Inlet1                  OK          26 degrees C / 78 degrees F
        SFB 3 Exhaust2                OK          28 degrees C / 82 degrees F
        SFB 3 SFB2-PF-local           OK          27 degrees C / 80 degrees F
        SFB 3 SFB2-PF-die             OK          33 degrees C / 91 degrees F
        SFB 4 Inlet2                  OK          28 degrees C / 82 degrees F
        SFB 4 Exhaust1                OK          26 degrees C / 78 degrees F
```

```
SFB 4 Inlet1                OK          26 degrees C / 78 degrees F
SFB 4 Exhaust2              OK          28 degrees C / 82 degrees F
SFB 4 SFB2-PF-local         OK          27 degrees C / 80 degrees F
SFB 4 SFB2-PF-die           OK          32 degrees C / 89 degrees F
SFB 5 Inlet2                OK          29 degrees C / 84 degrees F
SFB 5 Exhaust1              OK          27 degrees C / 80 degrees F
SFB 5 Inlet1                OK          27 degrees C / 80 degrees F
SFB 5 Exhaust2              OK          29 degrees C / 84 degrees F
SFB 5 SFB2-PF-local         OK          28 degrees C / 82 degrees F
SFB 5 SFB2-PF-die           OK          34 degrees C / 93 degrees F
SFB 6 Inlet2                OK          34 degrees C / 93 degrees F
SFB 6 Exhaust1              OK          32 degrees C / 89 degrees F
SFB 6 Inlet1                OK          31 degrees C / 87 degrees F
SFB 6 Exhaust2              OK          34 degrees C / 93 degrees F
SFB 6 SFB2-PF-local         OK          34 degrees C / 93 degrees F
SFB 6 SFB2-PF-die           OK          40 degrees C / 104 degrees F
SFB 7 Inlet2                OK          29 degrees C / 84 degrees F
SFB 7 Exhaust1              OK          28 degrees C / 82 degrees F
SFB 7 Inlet1                OK          29 degrees C / 84 degrees F
SFB 7 Exhaust2              OK          29 degrees C / 84 degrees F
SFB 7 SFB2-PF-local         OK          28 degrees C / 82 degrees F
SFB 7 SFB2-PF-die           OK          33 degrees C / 91 degrees F
FPC 0 Intake                OK          29 degrees C / 84 degrees F
FPC 0 Exhaust A             OK          43 degrees C / 109 degrees F
FPC 0 Exhaust B             OK          42 degrees C / 107 degrees F
FPC 0 XL 0 TSen             OK          39 degrees C / 102 degrees F
FPC 0 XL 0 Chip             OK          53 degrees C / 127 degrees F
FPC 0 XL 0 XR2 0 TSen       OK          39 degrees C / 102 degrees F
FPC 0 XL 0 XR2 0 Chip       OK          60 degrees C / 140 degrees F
FPC 0 XL 0 XR2 1 TSen       OK          39 degrees C / 102 degrees F
FPC 0 XL 0 XR2 1 Chip       OK          60 degrees C / 140 degrees F
FPC 0 XL 1 TSen             OK          30 degrees C / 86 degrees F
FPC 0 XL 1 Chip             OK          43 degrees C / 109 degrees F
FPC 0 XL 1 XR2 0 TSen       OK          30 degrees C / 86 degrees F
FPC 0 XL 1 XR2 0 Chip       OK          50 degrees C / 122 degrees F
FPC 0 XL 1 XR2 1 TSen       OK          30 degrees C / 86 degrees F
FPC 0 XL 1 XR2 1 Chip       OK          51 degrees C / 123 degrees F
FPC 0 XM 0 TSen             OK          42 degrees C / 107 degrees F
FPC 0 XM 0 Chip             OK          50 degrees C / 122 degrees F
FPC 0 XM 1 TSen             OK          42 degrees C / 107 degrees F
FPC 0 XM 1 Chip             OK          42 degrees C / 107 degrees F
FPC 0 XM 2 TSen             OK          42 degrees C / 107 degrees F
FPC 0 XM 2 Chip             OK          42 degrees C / 107 degrees F
```

```
FPC 0 XM 3 TSen                 OK          42 degrees C / 107 degrees F
FPC 0 XM 3 Chip                 OK          40 degrees C / 104 degrees F
FPC 0 PCIe Switch TSen          OK          42 degrees C / 107 degrees F
FPC 0 PCIe Switch Chip          OK          22 degrees C / 71 degrees F
FPC 1 Intake                    OK          29 degrees C / 84 degrees F
FPC 1 Exhaust A                 OK          52 degrees C / 125 degrees F
FPC 1 Exhaust B                 OK          44 degrees C / 111 degrees F
FPC 1 EA0 TSen                  OK          55 degrees C / 131 degrees F
FPC 1 EA0 Chip                  OK          48 degrees C / 118 degrees F
FPC 1 EA0_XR0 TSen              OK          55 degrees C / 131 degrees F
FPC 1 EA0_XR0 Chip              OK          57 degrees C / 134 degrees F
FPC 1 EA0_XR1 TSen              OK          55 degrees C / 131 degrees F
FPC 1 EA0_XR1 Chip              OK          54 degrees C / 129 degrees F
FPC 1 EA1 TSen                  OK          55 degrees C / 131 degrees F
FPC 1 EA1 Chip                  OK          51 degrees C / 123 degrees F
FPC 1 EA1_XR0 TSen              OK          55 degrees C / 131 degrees F
FPC 1 EA1_XR0 Chip              OK          58 degrees C / 136 degrees F
FPC 1 EA1_XR1 TSen              OK          55 degrees C / 131 degrees F
FPC 1 EA1_XR1 Chip              OK          59 degrees C / 138 degrees F
FPC 1 PEX TSen                  OK          55 degrees C / 131 degrees F
FPC 1 PEX Chip                  OK          39 degrees C / 102 degrees F
FPC 1 EA2 TSen                  OK          43 degrees C / 109 degrees F
FPC 1 EA2 Chip                  OK          39 degrees C / 102 degrees F
FPC 1 EA2_XR0 TSen              OK          43 degrees C / 109 degrees F
FPC 1 EA2_XR0 Chip              OK          46 degrees C / 114 degrees F
FPC 1 EA2_XR1 TSen              OK          43 degrees C / 109 degrees F
FPC 1 EA2_XR1 Chip              OK          43 degrees C / 109 degrees F
FPC 1 EA3 TSen                  OK          43 degrees C / 109 degrees F
FPC 1 EA3 Chip                  OK          40 degrees C / 104 degrees F
FPC 1 EA3_XR0 TSen              OK          43 degrees C / 109 degrees F
FPC 1 EA3_XR0 Chip              OK          51 degrees C / 123 degrees F
FPC 1 EA3_XR1 TSen              OK          43 degrees C / 109 degrees F
FPC 1 EA3_XR1 Chip              OK          47 degrees C / 116 degrees F
FPC 1 EA0_HMC0 Logic die        OK          61 degrees C / 141 degrees F
FPC 1 EA0_HMC0 DRAM botm        OK          58 degrees C / 136 degrees F
FPC 1 EA0_HMC1 Logic die        OK          62 degrees C / 143 degrees F
FPC 1 EA0_HMC1 DRAM botm        OK          59 degrees C / 138 degrees F
FPC 1 EA0_HMC2 Logic die        OK          59 degrees C / 138 degrees F
FPC 1 EA0_HMC2 DRAM botm        OK          56 degrees C / 132 degrees F
FPC 1 EA1_HMC0 Logic die        OK          66 degrees C / 150 degrees F
FPC 1 EA1_HMC0 DRAM botm        OK          63 degrees C / 145 degrees F
FPC 1 EA1_HMC1 Logic die        OK          65 degrees C / 149 degrees F
FPC 1 EA1_HMC1 DRAM botm        OK          62 degrees C / 143 degrees F
```

```
FPC 1 EA1_HMC2 Logic die       OK          63 degrees C / 145 degrees F
FPC 1 EA1_HMC2 DRAM botm       OK          60 degrees C / 140 degrees F
FPC 1 EA2_HMC0 Logic die       OK          51 degrees C / 123 degrees F
FPC 1 EA2_HMC0 DRAM botm       OK          48 degrees C / 118 degrees F
FPC 1 EA2_HMC1 Logic die       OK          55 degrees C / 131 degrees F
FPC 1 EA2_HMC1 DRAM botm       OK          52 degrees C / 125 degrees F
FPC 1 EA2_HMC2 Logic die       OK          52 degrees C / 125 degrees F
FPC 1 EA2_HMC2 DRAM botm       OK          49 degrees C / 120 degrees F
FPC 1 EA3_HMC0 Logic die       OK          51 degrees C / 123 degrees F
FPC 1 EA3_HMC0 DRAM botm       OK          48 degrees C / 118 degrees F
FPC 1 EA3_HMC1 Logic die       OK          51 degrees C / 123 degrees F
FPC 1 EA3_HMC1 DRAM botm       OK          48 degrees C / 118 degrees F
FPC 1 EA3_HMC2 Logic die       OK          52 degrees C / 125 degrees F
FPC 1 EA3_HMC2 DRAM botm       OK          49 degrees C / 120 degrees F
FPC 7 Intake                   OK          31 degrees C / 87 degrees F
FPC 7 Exhaust A                OK          46 degrees C / 114 degrees F
FPC 7 Exhaust B                OK          38 degrees C / 100 degrees F
FPC 7 QX 0 TSen                OK          49 degrees C / 120 degrees F
FPC 7 QX 0 Chip                OK          52 degrees C / 125 degrees F
FPC 7 LU 0 TCAM TSen           OK          49 degrees C / 120 degrees F
FPC 7 LU 0 TCAM Chip           OK          52 degrees C / 125 degrees F
FPC 7 LU 0 TSen                OK          49 degrees C / 120 degrees F
FPC 7 LU 0 Chip                OK          51 degrees C / 123 degrees F
FPC 7 MQ 0 TSen                OK          49 degrees C / 120 degrees F
FPC 7 MQ 0 Chip                OK          55 degrees C / 131 degrees F
FPC 7 QX 1 TSen                OK          41 degrees C / 105 degrees F
FPC 7 QX 1 Chip                OK          42 degrees C / 107 degrees F
FPC 7 LU 1 TCAM TSen           OK          41 degrees C / 105 degrees F
FPC 7 LU 1 TCAM Chip           OK          43 degrees C / 109 degrees F
FPC 7 LU 1 TSen                OK          41 degrees C / 105 degrees F
FPC 7 LU 1 Chip                OK          46 degrees C / 114 degrees F
FPC 7 MQ 1 TSen                OK          41 degrees C / 105 degrees F
FPC 7 MQ 1 Chip                OK          47 degrees C / 116 degrees F
ADC 7 Intake                   OK          32 degrees C / 89 degrees F
ADC 7 Exhaust                  OK          39 degrees C / 102 degrees F
ADC 7 ADC-XF1                  OK          46 degrees C / 114 degrees F
ADC 7 ADC-XF0                  OK          54 degrees C / 129 degrees F
```

show chassis environment monitored (MX10008 Router)

```
user@host> show chassis environment monitored
Class Item                           Status     Measurement
      Routing Engine 0 CPU
      Routing Engine 1 CPU
Temp  CB 0 Intake A Temp Sensor      OK         24 degrees C / 75 degrees F
      CB 0 Intake B Temp Sensor      OK         24 degrees C / 75 degrees F
      CB 0 Exhaust A Temp Sensor     OK         28 degrees C / 82 degrees F
      CB 0 Exhaust B Temp Sensor     OK         30 degrees C / 86 degrees F
      CB 0 Middle Temp Sensor        OK         28 degrees C / 82 degrees F
      CB 1 Intake A Temp Sensor      OK         24 degrees C / 75 degrees F
      CB 1 Intake B Temp Sensor      OK         23 degrees C / 73 degrees F
      CB 1 Exhaust A Temp Sensor     OK         27 degrees C / 80 degrees F
      CB 1 Exhaust B Temp Sensor     OK         30 degrees C / 86 degrees F
      CB 1 Middle Temp Sensor        OK         28 degrees C / 82 degrees F
      FPC 0 Intake-A Temp Sensor     OK         32 degrees C / 89 degrees F
      FPC 0 Exhaust-A Temp Sensor    OK         44 degrees C / 111 degrees F
      FPC 0 Exhaust-B Temp Sensor    OK         49 degrees C / 120 degrees F
      FPC 0 EA0 Temp Sensor          OK         67 degrees C / 152 degrees F
      FPC 0 EA0_XR0 Temp Sensor      OK         69 degrees C / 156 degrees F
      FPC 0 EA0_XR1 Temp Sensor      OK         73 degrees C / 163 degrees F
      FPC 0 EA1 Temp Sensor          OK         61 degrees C / 141 degrees F
      FPC 0 EA1_XR0 Temp Sensor      OK         65 degrees C / 149 degrees F
      FPC 0 EA1_XR1 Temp Sensor      OK         63 degrees C / 145 degrees F
      FPC 0 EA2 Temp Sensor          OK         69 degrees C / 156 degrees F
      FPC 0 EA2_XR0 Temp Sensor      OK         73 degrees C / 163 degrees F
      FPC 0 EA2_XR1 Temp Sensor      OK         72 degrees C / 161 degrees F
      FPC 0 EA3 Temp Sensor          OK         64 degrees C / 147 degrees F
      FPC 0 EA3_XR0 Temp Sensor      OK         66 degrees C / 150 degrees F
      FPC 0 EA3_XR1 Temp Sensor      OK         65 degrees C / 149 degrees F
      FPC 0 EA4 Temp Sensor          OK         71 degrees C / 159 degrees F
      FPC 0 EA4_XR0 Temp Sensor      OK         72 degrees C / 161 degrees F
      FPC 0 EA4_XR1 Temp Sensor      OK         71 degrees C / 159 degrees F
      FPC 0 EA5 Temp Sensor          OK         58 degrees C / 136 degrees F
      FPC 0 EA5_XR0 Temp Sensor      OK         62 degrees C / 143 degrees F
      FPC 0 EA5_XR1 Temp Sensor      OK         63 degrees C / 145 degrees F
      FPC 0 EA0_HMC0 Logic die       OK         75 degrees C / 167 degrees F
      FPC 0 EA0_HMC0 DRAM botm       OK         72 degrees C / 161 degrees F
      FPC 0 EA0_HMC1 Logic die       OK         76 degrees C / 168 degrees F
      FPC 0 EA0_HMC1 DRAM botm       OK         73 degrees C / 163 degrees F
      FPC 0 EA0_HMC2 Logic die       OK         77 degrees C / 170 degrees F
```

```
FPC 0 EA0_HMC2 DRAM botm       OK          74 degrees C / 165 degrees F
FPC 0 EA1_HMC0 Logic die       OK          73 degrees C / 163 degrees F
FPC 0 EA1_HMC0 DRAM botm       OK          70 degrees C / 158 degrees F
FPC 0 EA1_HMC1 Logic die       OK          73 degrees C / 163 degrees F
FPC 0 EA1_HMC1 DRAM botm       OK          70 degrees C / 158 degrees F
FPC 0 EA1_HMC2 Logic die       OK          72 degrees C / 161 degrees F
FPC 0 EA1_HMC2 DRAM botm       OK          69 degrees C / 156 degrees F
FPC 0 EA2_HMC0 Logic die       OK          80 degrees C / 176 degrees F
FPC 0 EA2_HMC0 DRAM botm       OK          77 degrees C / 170 degrees F
FPC 0 EA2_HMC1 Logic die       OK          81 degrees C / 177 degrees F
FPC 0 EA2_HMC1 DRAM botm       OK          78 degrees C / 172 degrees F
FPC 0 EA2_HMC2 Logic die       OK          80 degrees C / 176 degrees F
FPC 0 EA2_HMC2 DRAM botm       OK          77 degrees C / 170 degrees F
FPC 0 EA3_HMC0 Logic die       OK          77 degrees C / 170 degrees F
FPC 0 EA3_HMC0 DRAM botm       OK          74 degrees C / 165 degrees F
FPC 0 EA3_HMC1 Logic die       OK          78 degrees C / 172 degrees F
FPC 0 EA3_HMC1 DRAM botm       OK          75 degrees C / 167 degrees F
FPC 0 EA3_HMC2 Logic die       OK          77 degrees C / 170 degrees F
FPC 0 EA3_HMC2 DRAM botm       OK          74 degrees C / 165 degrees F
FPC 0 EA4_HMC0 Logic die       OK          80 degrees C / 176 degrees F
FPC 0 EA4_HMC0 DRAM botm       OK          77 degrees C / 170 degrees F
FPC 0 EA4_HMC1 Logic die       OK          81 degrees C / 177 degrees F
FPC 0 EA4_HMC1 DRAM botm       OK          78 degrees C / 172 degrees F
FPC 0 EA4_HMC2 Logic die       OK          80 degrees C / 176 degrees F
FPC 0 EA4_HMC2 DRAM botm       OK          77 degrees C / 170 degrees F
FPC 0 EA5_HMC0 Logic die       OK          69 degrees C / 156 degrees F
FPC 0 EA5_HMC0 DRAM botm       OK          66 degrees C / 150 degrees F
FPC 0 EA5_HMC1 Logic die       OK          68 degrees C / 154 degrees F
FPC 0 EA5_HMC1 DRAM botm       OK          65 degrees C / 149 degrees F
FPC 0 EA5_HMC2 Logic die       OK          68 degrees C / 154 degrees F
FPC 0 EA5_HMC2 DRAM botm       OK          65 degrees C / 149 degrees F
FPC 2 Intake-A Temp Sensor     OK          33 degrees C / 91 degrees F
FPC 2 Exhaust-A Temp Sensor    OK          52 degrees C / 125 degrees F
FPC 2 Exhaust-B Temp Sensor    OK          50 degrees C / 122 degrees F
FPC 2 EA0 Temp Sensor          OK          71 degrees C / 159 degrees F
FPC 2 EA0_XR0 Temp Sensor      OK          75 degrees C / 167 degrees F
FPC 2 EA0_XR1 Temp Sensor      OK          79 degrees C / 174 degrees F
FPC 2 EA1 Temp Sensor          OK          64 degrees C / 147 degrees F
FPC 2 EA1_XR0 Temp Sensor      OK          68 degrees C / 154 degrees F
FPC 2 EA1_XR1 Temp Sensor      OK          66 degrees C / 150 degrees F
FPC 2 EA2 Temp Sensor          OK          75 degrees C / 167 degrees F
FPC 2 EA2_XR0 Temp Sensor      OK          81 degrees C / 177 degrees F
FPC 2 EA2_XR1 Temp Sensor      OK          81 degrees C / 177 degrees F
```

```
FPC 2 EA3 Temp Sensor          OK         67 degrees C / 152 degrees F
FPC 2 EA3_XR0 Temp Sensor      OK         69 degrees C / 156 degrees F
FPC 2 EA3_XR1 Temp Sensor      OK         69 degrees C / 156 degrees F
FPC 2 EA4 Temp Sensor          OK         75 degrees C / 167 degrees F
FPC 2 EA4_XR0 Temp Sensor      OK         76 degrees C / 168 degrees F
FPC 2 EA4_XR1 Temp Sensor      OK         75 degrees C / 167 degrees F
FPC 2 EA5 Temp Sensor          OK         60 degrees C / 140 degrees F
FPC 2 EA5_XR0 Temp Sensor      OK         64 degrees C / 147 degrees F
FPC 2 EA5_XR1 Temp Sensor      OK         65 degrees C / 149 degrees F
FPC 2 EA0_HMC0 Logic die       OK         84 degrees C / 183 degrees F
FPC 2 EA0_HMC0 DRAM botm       OK         81 degrees C / 177 degrees F
FPC 2 EA0_HMC1 Logic die       OK         85 degrees C / 185 degrees F
FPC 2 EA0_HMC1 DRAM botm       OK         82 degrees C / 179 degrees F
FPC 2 EA0_HMC2 Logic die       OK         83 degrees C / 181 degrees F
FPC 2 EA0_HMC2 DRAM botm       OK         80 degrees C / 176 degrees F
FPC 2 EA1_HMC0 Logic die       OK         76 degrees C / 168 degrees F
FPC 2 EA1_HMC0 DRAM botm       OK         73 degrees C / 163 degrees F
FPC 2 EA1_HMC1 Logic die       OK         77 degrees C / 170 degrees F
FPC 2 EA1_HMC1 DRAM botm       OK         74 degrees C / 165 degrees F
FPC 2 EA1_HMC2 Logic die       OK         76 degrees C / 168 degrees F
FPC 2 EA1_HMC2 DRAM botm       OK         73 degrees C / 163 degrees F
FPC 2 EA2_HMC0 Logic die       OK         87 degrees C / 188 degrees F
FPC 2 EA2_HMC0 DRAM botm       OK         84 degrees C / 183 degrees F
FPC 2 EA2_HMC1 Logic die       OK         88 degrees C / 190 degrees F
FPC 2 EA2_HMC1 DRAM botm       OK         85 degrees C / 185 degrees F
FPC 2 EA2_HMC2 Logic die       OK         88 degrees C / 190 degrees F
FPC 2 EA2_HMC2 DRAM botm       OK         85 degrees C / 185 degrees F
FPC 2 EA3_HMC0 Logic die       OK         81 degrees C / 177 degrees F
FPC 2 EA3_HMC0 DRAM botm       OK         78 degrees C / 172 degrees F
FPC 2 EA3_HMC1 Logic die       OK         81 degrees C / 177 degrees F
FPC 2 EA3_HMC1 DRAM botm       OK         78 degrees C / 172 degrees F
FPC 2 EA3_HMC2 Logic die       OK         81 degrees C / 177 degrees F
FPC 2 EA3_HMC2 DRAM botm       OK         78 degrees C / 172 degrees F
FPC 2 EA4_HMC0 Logic die       OK         88 degrees C / 190 degrees F
FPC 2 EA4_HMC0 DRAM botm       OK         85 degrees C / 185 degrees F
FPC 2 EA4_HMC1 Logic die       OK         90 degrees C / 194 degrees F
FPC 2 EA4_HMC1 DRAM botm       OK         87 degrees C / 188 degrees F
FPC 2 EA4_HMC2 Logic die       OK         81 degrees C / 177 degrees F
FPC 2 EA4_HMC2 DRAM botm       OK         78 degrees C / 172 degrees F
FPC 2 EA5_HMC0 Logic die       OK         72 degrees C / 161 degrees F
FPC 2 EA5_HMC0 DRAM botm       OK         69 degrees C / 156 degrees F
FPC 2 EA5_HMC1 Logic die       OK         69 degrees C / 156 degrees F
FPC 2 EA5_HMC1 DRAM botm       OK         66 degrees C / 150 degrees F
```

```
FPC 2 EA5_HMC2 Logic die       OK          73 degrees C / 163 degrees F
FPC 2 EA5_HMC2 DRAM botm       OK          70 degrees C / 158 degrees F
FPC 3 Intake-A Temp Sensor     OK          30 degrees C / 86 degrees F
FPC 3 Exhaust-A Temp Sensor    OK          48 degrees C / 118 degrees F
FPC 3 Exhaust-B Temp Sensor    OK          45 degrees C / 113 degrees F
FPC 3 EA0 Temp Sensor          OK          60 degrees C / 140 degrees F
FPC 3 EA0_XR0 Temp Sensor      OK          65 degrees C / 149 degrees F
FPC 3 EA0_XR1 Temp Sensor      OK          67 degrees C / 152 degrees F
FPC 3 EA1 Temp Sensor          OK          54 degrees C / 129 degrees F
FPC 3 EA1_XR0 Temp Sensor      OK          60 degrees C / 140 degrees F
FPC 3 EA1_XR1 Temp Sensor      OK          59 degrees C / 138 degrees F
FPC 3 EA2 Temp Sensor          OK          62 degrees C / 143 degrees F
FPC 3 EA2_XR0 Temp Sensor      OK          67 degrees C / 152 degrees F
FPC 3 EA2_XR1 Temp Sensor      OK          67 degrees C / 152 degrees F
FPC 3 EA3 Temp Sensor          OK          55 degrees C / 131 degrees F
FPC 3 EA3_XR0 Temp Sensor      OK          57 degrees C / 134 degrees F
FPC 3 EA3_XR1 Temp Sensor      OK          57 degrees C / 134 degrees F
FPC 3 EA4 Temp Sensor          OK          68 degrees C / 154 degrees F
FPC 3 EA4_XR0 Temp Sensor      OK          71 degrees C / 159 degrees F
FPC 3 EA4_XR1 Temp Sensor      OK          70 degrees C / 158 degrees F
FPC 3 EA5 Temp Sensor          OK          55 degrees C / 131 degrees F
FPC 3 EA5_XR0 Temp Sensor      OK          58 degrees C / 136 degrees F
FPC 3 EA5_XR1 Temp Sensor      OK          59 degrees C / 138 degrees F
FPC 3 EA0_HMC0 Logic die       OK          69 degrees C / 156 degrees F
FPC 3 EA0_HMC0 DRAM botm       OK          66 degrees C / 150 degrees F
FPC 3 EA0_HMC1 Logic die       OK          70 degrees C / 158 degrees F
FPC 3 EA0_HMC1 DRAM botm       OK          67 degrees C / 152 degrees F
FPC 3 EA0_HMC2 Logic die       OK          70 degrees C / 158 degrees F
FPC 3 EA0_HMC2 DRAM botm       OK          67 degrees C / 152 degrees F
FPC 3 EA1_HMC0 Logic die       OK          68 degrees C / 154 degrees F
FPC 3 EA1_HMC0 DRAM botm       OK          65 degrees C / 149 degrees F
FPC 3 EA1_HMC1 Logic die       OK          65 degrees C / 149 degrees F
FPC 3 EA1_HMC1 DRAM botm       OK          62 degrees C / 143 degrees F
FPC 3 EA1_HMC2 Logic die       OK          64 degrees C / 147 degrees F
FPC 3 EA1_HMC2 DRAM botm       OK          61 degrees C / 141 degrees F
FPC 3 EA2_HMC0 Logic die       OK          74 degrees C / 165 degrees F
FPC 3 EA2_HMC0 DRAM botm       OK          71 degrees C / 159 degrees F
FPC 3 EA2_HMC1 Logic die       OK          76 degrees C / 168 degrees F
FPC 3 EA2_HMC1 DRAM botm       OK          73 degrees C / 163 degrees F
FPC 3 EA2_HMC2 Logic die       OK          74 degrees C / 165 degrees F
FPC 3 EA2_HMC2 DRAM botm       OK          71 degrees C / 159 degrees F
FPC 3 EA3_HMC0 Logic die       OK          70 degrees C / 158 degrees F
FPC 3 EA3_HMC0 DRAM botm       OK          67 degrees C / 152 degrees F
```

```
       FPC 3 EA3_HMC1 Logic die       OK         68 degrees C / 154 degrees F
       FPC 3 EA3_HMC1 DRAM botm       OK         65 degrees C / 149 degrees F
       FPC 3 EA3_HMC2 Logic die       OK         68 degrees C / 154 degrees F
       FPC 3 EA3_HMC2 DRAM botm       OK         65 degrees C / 149 degrees F
       FPC 3 EA4_HMC0 Logic die       OK         82 degrees C / 179 degrees F
       FPC 3 EA4_HMC0 DRAM botm       OK         79 degrees C / 174 degrees F
       FPC 3 EA4_HMC1 Logic die       OK         80 degrees C / 176 degrees F
       FPC 3 EA4_HMC1 DRAM botm       OK         77 degrees C / 170 degrees F
       FPC 3 EA4_HMC2 Logic die       OK         81 degrees C / 177 degrees F
       FPC 3 EA4_HMC2 DRAM botm       OK         78 degrees C / 172 degrees F
       FPC 3 EA5_HMC0 Logic die       OK         69 degrees C / 156 degrees F
       FPC 3 EA5_HMC0 DRAM botm       OK         66 degrees C / 150 degrees F
       FPC 3 EA5_HMC1 Logic die       OK         70 degrees C / 158 degrees F
       FPC 3 EA5_HMC1 DRAM botm       OK         67 degrees C / 152 degrees F
       FPC 3 EA5_HMC2 Logic die       OK         69 degrees C / 156 degrees F
       FPC 3 EA5_HMC2 DRAM botm       OK         66 degrees C / 150 degrees F
Power  PEM 0                          OK         29 degrees C / 84 degrees F
       PEM 1                          OK         27 degrees C / 80 degrees F
       PEM 2                          OK         30 degrees C / 86 degrees F
       PEM 3                          Check
       PEM 4                          Check
       PEM 5                          Check
Fans   Fan Tray 0 Fan 0               OK         Spinning at normal speed
       Fan Tray 0 Fan 1               OK         Spinning at normal speed
       Fan Tray 0 Fan 2               OK         Spinning at normal speed
       Fan Tray 0 Fan 3               OK         Spinning at normal speed
       Fan Tray 0 Fan 4               Failed
       Fan Tray 0 Fan 5               Failed
       Fan Tray 0 Fan 6               OK         Spinning at normal speed
       Fan Tray 0 Fan 7               OK         Spinning at normal speed
       Fan Tray 0 Fan 8               OK         Spinning at normal speed
       Fan Tray 0 Fan 9               OK         Spinning at normal speed
       Fan Tray 0 Fan 10              OK         Spinning at normal speed
       Fan Tray 1 Fan 0               OK         Spinning at normal speed
       Fan Tray 1 Fan 1               OK         Spinning at normal speed
       Fan Tray 1 Fan 2               OK         Spinning at normal speed
       Fan Tray 1 Fan 3               OK         Spinning at normal speed
       Fan Tray 1 Fan 4               OK         Spinning at normal speed
       Fan Tray 1 Fan 5               OK         Spinning at normal speed
       Fan Tray 1 Fan 6               OK         Spinning at normal speed
       Fan Tray 1 Fan 7               OK         Spinning at normal speed
       Fan Tray 1 Fan 8               OK         Spinning at normal speed
       Fan Tray 1 Fan 9               OK         Spinning at normal speed
```

```
Fan Tray 1 Fan 10              OK          Spinning at normal speed
SFB 0 Intake-A                 OK          33 degrees C / 91 degrees F
SFB 0 Intake-B                 OK          22 degrees C / 71 degrees F
SFB 0 Exhaust-A                OK          27 degrees C / 80 degrees F
SFB 0 Exhaust-B                OK          32 degrees C / 89 degrees F
SFB 0 PF0                      OK          40 degrees C / 104 degrees F
SFB 0 PF1                      OK          29 degrees C / 84 degrees F
SFB 1 Intake-A                 OK          43 degrees C / 109 degrees F
SFB 1 Intake-B                 OK          21 degrees C / 69 degrees F
SFB 1 Exhaust-A                OK          25 degrees C / 77 degrees F
SFB 1 Exhaust-B                OK          44 degrees C / 111 degrees F
SFB 1 PF0                      OK          50 degrees C / 122 degrees F
SFB 1 PF1                      OK          29 degrees C / 84 degrees F
SFB 2 Intake-A                 OK          39 degrees C / 102 degrees F
SFB 2 Intake-B                 OK          21 degrees C / 69 degrees F
SFB 2 Exhaust-A                OK          25 degrees C / 77 degrees F
SFB 2 Exhaust-B                OK          38 degrees C / 100 degrees F
SFB 2 PF0                      OK          45 degrees C / 113 degrees F
SFB 2 PF1                      OK          30 degrees C / 86 degrees F
SFB 3 Intake-A                 OK          37 degrees C / 98 degrees F
SFB 3 Intake-B                 OK          21 degrees C / 69 degrees F
SFB 3 Exhaust-A                OK          26 degrees C / 78 degrees F
SFB 3 Exhaust-B                OK          35 degrees C / 95 degrees F
SFB 3 PF0                      OK          42 degrees C / 107 degrees F
SFB 3 PF1                      OK          30 degrees C / 86 degrees F
SFB 4 Intake-A                 OK          31 degrees C / 87 degrees F
SFB 4 Intake-B                 OK          20 degrees C / 68 degrees F
SFB 4 Exhaust-A                OK          25 degrees C / 77 degrees F
SFB 4 Exhaust-B                OK          32 degrees C / 89 degrees F
SFB 4 PF0                      OK          41 degrees C / 105 degrees F
SFB 4 PF1                      OK          30 degrees C / 86 degrees F
SFB 5 Intake-A                 OK          30 degrees C / 86 degrees F
SFB 5 Intake-B                 OK          21 degrees C / 69 degrees F
SFB 5 Exhaust-A                OK          26 degrees C / 78 degrees F
SFB 5 Exhaust-B                OK          30 degrees C / 86 degrees F
SFB 5 PF0                      OK          35 degrees C / 95 degrees F
SFB 5 PF1                      OK          34 degrees C / 93 degrees F
```

Release Information

Command introduced in Junos OS Release 12.1.

`all-members`, `local`, and `member` *`member-id`* options introduced in Junos OS Release 15.1 for MX2020 and MX2010 routers.

RELATED DOCUMENTATION

show chassis environment | 543

Chassis-Level User Guide

show chassis environment mcs

IN THIS SECTION

- Syntax | 852
- Description | 853
- Options | 853
- Required Privilege Level | 853
- Output Fields | 853
- Sample Output | 854
- Release Information | 855

Syntax

```
show chassis environment mcs
<slot>
```

Description

(M40e and M160 routers only) Display environmental information about the Miscellaneous Control Subsystems (MCSs).

Options

none Display environmental information about both MCSs.

slot (Optional) Display environmental information about an individual MCS. Replace ***slot*** with **0** or **1**

Required Privilege Level

view

Output Fields

Table 46 on page 854 lists the output fields for the `show chassis environment mcs` command. Output fields are listed in the approximate order in which they appear.

Table 46: show chassis environment mcs Output Fields

Field Name	Field Description
State	Status of the MCS: • **Present**—MCS is detected by the chassis daemon but is either not supported by the current version of Junos or MCS is coming up but not yet online. • **Online**—MCS is online and running. • **Offline**—MCS is powered down. • **Empty**—No MCS is present. • **Master**—MCS is online, operating as primary. • **Standby**—MCS is online, operating as standby.
Temperature	Temperature of the air flowing past the MCS.
Power	Information about the voltage supplied to the MCS. The left column displays the required power, in volts. The right column displays the measured power, in millivolts.
BUS Revision	Revision level of the generic bus device.
FPGA Revision	Revision level of the field-programmable gate array (FPGA) revision.

Sample Output

show chassis environment mcs (M40e Router)

```
user@host> show chassis environment mcs
MCS 0 status:
  State                          Online Master
  Temperature                 45 degrees C / 113 degrees F
  Power:
    3.3 V                    3283 mV
```

```
    5.0 V                    5013 mV
    12.0 V                  11721 mV
    5.0 V bias               5025 mV
    8.0 V bias               8229 mV
  BUS Revision                 12
  FPGA Revision                13
MCS 1 status:
  State                           Online Standby
  Temperature                  42 degrees C / 107 degrees F
  Power:
    3.3 V                    3296 mV
    5.0 V                    4971 mV
    12.0 V                  11814 mV
    5.0 V bias               4976 mV
    8.0 V bias               8241 mV
  BUS Revision                 12
  FPGA Revision                13
```

show chassis environment mcs (M160 Router)

```
user@host> show chassis environment mcs
MCS 0 status:
  State                           Online Master
  Temperature                  50 degrees C / 122 degrees F
  Power:
    3.3 V                    3306 mV
    5.0 V                    4993 mV
    12.0 V                  11799 mV
    5.0 V bias               4993 mV
    8.0 V bias               8288 mV
  BUS Revision                 12
  FPGA Revision                13
```

Release Information

Command introduced before Junos OS Release 7.4.

RELATED DOCUMENTATION

request chassis mcs | 435

show chassis environment pcg

IN THIS SECTION

- Syntax | 856
- Description | 856
- Options | 857
- Required Privilege Level | 857
- Output Fields | 857
- Sample Output | 858
- Release Information | 859

Syntax

```
show chassis environment pcg
<slot>
```

Description

(M40e and M160 routers only) Display environmental information about the Packet Forwarding Engine clock generators (PCGs).

Options

none Display environmental information about both PCGs.

slot (Optional) Display environmental information about an individual PCG. Replace ***slot*** with 0 or 1.

Required Privilege Level

view

Output Fields

Table 47 on page 857 lists the output fields for the `show chassis environment pcg` command. Output fields are listed in the approximate order in which they appear.

Table 47: show chassis environment pcg Output Fields

Field Name	Field Description
PCG slot status	Slot number: **0** or **1**.
State	Status of PCG: • **Present**—PCG is detected by the chassis process but is either not supported by the current version of Junos OS or PCG is coming up but is not yet online. • **Online**—PCG is powered down. If **Online**, it can be the **Master clock** or the **Standby clock**. • **Offline**—PCG is powered down. • **Empty**—No PCG is present.
Temperature	Temperature of the air flowing past the PCG.

Table 47: show chassis environment pcg Output Fields *(Continued)*

Field Name	Field Description
Frequency	Frequency setting and measurement for the PCG.
Power	Information about the voltage supplied to the PCG. The left column displays the required power, in volts. The right column displays the measured power, in millivolts.
BUS Revision	Revision level of the generic bus device.

Sample Output

show chassis environment pcg (M40e Router)

```
user@host> show chassis environment pcg
PCG 0 status:
  State                          Online -  Master clock
  Temperature                 44 degrees C / 111 degrees F
  Frequency:
   Setting               125.00 MHz
   Measurement           124.95 MHz
  Power:
    3.3 V                   3266 mV
    5.0 V bias              4964 mV
    8.0 V bias              8112 mV
  BUS Revision                12
PCG 1 status:
  State                          Online - Standby
  Temperature                 47 degrees C / 116 degrees F
  Frequency:
   Setting               125.00 MHz
   Measurement           124.96 MHz
  Power:
    3.3 V                   3271 mV
    5.0 V bias              4979 mV
```

```
    8.0 V bias               8117 mV
  BUS Revision                 12
```

show chassis environment pcg (M160 Router)

```
user@host> show chassis environment pcg
PCG 0 status:
  State                           Online -  Master clock
  Temperature                  41 degrees C / 105 degrees F
  Frequency:
   Setting                125.00 MHz
   Measurement            125.03 MHz
  Power:
    3.3 V                    3286 mV
    5.0 V bias               5010 mV
    8.0 V bias               8183 mV
  BUS Revision                 12
PCG 1 status:
  State                           Online - Standby
  Temperature                  43 degrees C / 109 degrees F
  Frequency:
   Setting                125.00 MHz
   Measurement            125.01 MHz
  Power:
    3.3 V                    3288 mV
    5.0 V bias               4993 mV
    8.0 V bias               8197 mV
  BUS Revision                 12
```

Release Information

Command introduced before Junos OS Release 7.4.

RELATED DOCUMENTATION

request chassis pcg

show chassis environment pdu

IN THIS SECTION

- Syntax | 860
- Description | 860
- Options | 861
- Required Privilege Level | 861
- Output Fields | 861
- Sample Output | 863
- Release Information | 867

Syntax

```
show chassis environment pdu
<none>
<slot>
```

Description

Display the environmental status information of a power distribution unit (PDU).

Starting from Junos OS Release 14.1, the `show chassis environment pdu` *slot* operational mode command output displays environmental status information for the new DC power supply module (PSM) and PDU that are added to provide power to the high-density FPC—FPC2-PTX-P1A.

Starting from Junos OS Release 14.2, the power management software in Junos OS tracks the PSM power capacity to identify the power available for the PTX5000 router. Each PSM is assigned a power capability value that is equal to its maximum power rating. Therefore, the total input power—power that the chassis draws from a PDU—is the sum of all the online PSMs' maximum rating. Note that to limit the PDU's output power, the power management software adjusts the maximum rating of the PSMs according to the feed—that is, 60 A, 100 A, or 150 A—selected.

Options

none Display environmental information about all PDUs.

slot (Optional) Display environmental information about an individual PDU. For the PTX5000, replace *slot* with `0` or `1`.

Required Privilege Level

view

Output Fields

Table 48 on page 861 lists the output fields for the `show chassis environment pdu` command. Output fields are listed in the approximate order in which they appear.

Table 48: show chassis environment pdu Output Fields

Field Name	Field Description
`PDU` *slot* `status`	Number of the PDU slot.
`PDU - State`	Status of the PDU. Status can be `Online`, `Present`, or `Absent`.
`PDU - BoostConv`	Status of the booster converter.
`Feed Switch`	Status of the connected input line cord in the AC PDU. Status can be , `60A`, `100A`, or `150A`.
`PDU - Hours Used`	Number of hours the PDU has been operational.
`PDU - Firmware Version`	Version level of the firmware running on the PDU.

Table 48: show chassis environment pdu Output Fields *(Continued)*

Field Name	Field Description
`PSM` *number* `status`	PSM number. PSMs are numbered `0` through `3`.
`PSM - State`	Status of the PSM. Status can be `Online`, `Present`, or `Absent`.
`PSM - Temperature`	Temperature of the air flowing past the PSM.
`PSM - Fans`	Status of the cooling fans associated with the PSM.
`PSM - AC Input`	Status of the AC input for the specified component
`PSM - AC Output`	Status of the AC output for the specified component.
`PSM - DC input`	Status of the DC input for the specified component.
`PSM - DC output`	Status of the DC output for the specified component.
PSM-Health check status	Reason for the health check failure of the PSM.
`PSM - Hours Used`	Number of hours the PSM has been operational.
`PSM - Firmware Version`	Version level of the firmware running on the PSM.

Sample Output

show chassis environment pdu (PTX5000)

```
user@host> show chassis environment pdu 0
PDU 0 status:
  State                      Online
  Hours Used                 4281
  Firmware Version (MCU1)    00.02
  Firmware Version (MCU2)    00.02
  Firmware Version (MCU3)    00.02
  Firmware Version (MCU4)    00.02
PDU 0 PSM 0 status:
  State                      Online
  Temperature                OK   32 degrees C / 89 degrees F
  Fans                       OK
  DC Input                   OK
  DC Output                  OK
  Hours Used                 2864
  Firmware Version           00.04
PDU 0 PSM 1 status:
  State                      Online
  Temperature                OK   30 degrees C / 86 degrees F
  Fans                       OK
  DC Input                   OK
  DC Output                  OK
  Hours Used                 3540
  Firmware Version           00.04
PDU 0 PSM 2 status:
  State                      Online
  Temperature                OK   29 degrees C / 84 degrees F
  Fans                       OK
  DC Input                   OK
  DC Output                  OK
  Hours Used                 3711
  Firmware Version           00.04
PDU 0 PSM 3 status:
  State                      Online
  Temperature                OK   29 degrees C / 84 degrees F
  Fans                       OK
  DC Input                   OK
```

```
  DC Output                 OK
  Hours Used                4243
  Firmware Version          00.04
```

show chassis environment pdu (PTX5000 Packet Transport Router with DC PSM and PDU)

```
user@host> show chassis environment pdu 1
PDU 1 status:
  State                     Online
  BoostConv                 OK
  Hours Used                1054
  Firmware Version (MCU1)   03.05
PDU 1 PSM 0 status:
  State                     Empty
PDU 1 PSM 1 status:
  State                     Online
  Temperature               OK   45 degrees C / 113 degrees F
  Fans                      OK
  DC Input                  OK
  DC Output                 OK
  Hours Used                1027
  Firmware Version          03.07
PDU 1 PSM 2 status:
  State                     Empty
PDU 1 PSM 3 status:
  State                     Online
  Temperature               OK   43 degrees C / 109 degrees F
  Fans                      OK
  DC Input                  OK
  DC Output                 OK
  Hours Used                1029
  Firmware Version          03.07
PDU 1 PSM 4 status:
  State                     Empty
PDU 1 PSM 5 status:
  State                     Online
  Temperature               OK   46 degrees C / 114 degrees F
  Fans                      OK
  DC Input                  OK
  DC Output                 OK
  Hours Used                1028
```

```
  Firmware Version           03.07
PDU 1 PSM 6 status:
  State                      Empty
PDU 1 PSM 7 status:
  State                      Online
  Temperature                OK   46 degrees C / 114 degrees F
  Fans                       OK
  DC Input                   OK
  DC Output                  OK
  Hours Used                 1030
  Firmware Version           03.07
```

show chassis environment pdu (PTX5000 Packet Transport Router with AC PSM and PDU)

```
user@host> show chassis environment pdu 0
PDU 0 status:
  State                      Online
  BoostConv                  OK
  Feed Switch                150 Amps
  Hours Used                 177
  Firmware Version (MCU1)    03.04
  Firmware Version (MCU2)    03.02
  Firmware Version (MCU3)    03.02
  Firmware Version (MCU4)    03.02
  Firmware Version (MCU5)    03.02
  Firmware Version (MCU6)    03.02
  Firmware Version (MCU7)    03.02
  Firmware Version (MCU8)    03.02
PDU 0 PSM 0 status:
  State                      Online
  Temperature                OK   28 degrees C / 82 degrees F
  Fans                       OK
  AC Input                   OK
  DC Output                  OK
  Hours Used                 652
  Firmware Version           01.01
```

show chassis environment pdu (PTX5000 Packet Transport Router after a heath check failure on a PSM)

```
user@host> show chassis environment pdu 0
PDU 0 status:
  State                      Online
  BoostConv                  OK
  Feed Switch                20 Amps
  Hours Used                 16706
  Firmware Version (MCU1)    91.02
  Firmware Version (MCU2)    03.02
  Firmware Version (MCU3)    03.02
  Firmware Version (MCU4)    03.02
  Firmware Version (MCU5)    03.02
  Firmware Version (MCU6)    03.02
  Firmware Version (MCU7)    03.02
  Firmware Version (MCU8)    03.02
PDU 0 PSM 0 status:
  State                      Online
  Temperature                OK   29 degrees C / 84 degrees F
  Fans                       OK
  AC Input                   OK
  DC Output                  OK
  Hours Used                 9847
  Firmware Version           01.01
PDU 0 PSM 1 status:
  State                      Online
  Temperature                OK   29 degrees C / 84 degrees F
  Fans                       OK
  AC Input                   OK
  DC Output                  OK
  Hours Used                 5586
  Firmware Version           01.01
PDU 0 PSM 2 status:
  State                      Online
  Temperature                OK   28 degrees C / 82 degrees F
  Fans                       OK
  AC Input                   OK
  DC Output                  OK
  Hours Used                 10425
  Firmware Version           01.01
PDU 0 PSM 3 status:
```

```
  State                       Online
  Temperature                 OK   28 degrees C / 82 degrees F
  Fans                        OK
  AC Input                    OK
  DC Output                   OK
  Hours Used                  9912
  Firmware Version            01.01
PDU 0 PSM 4 status:
  State                       Empty
PDU 0 PSM 5 status:
  State                       Empty
PDU 0 PSM 6 status:
  State                       Present
  Temperature                 OK   32 degrees C / 89 degrees F
  Fans                        OK
  AC Input                    OK
  DC Output                   OK
  Health check status         Failed, PSM set to NOT OK
  Hours Used                  5770
  Firmware Version            01.01
PDU 0 PSM 7 status:
  State                       Online
  Temperature                 OK   33 degrees C / 91 degrees F
  Fans                        OK
  AC Input                    OK
  DC Output                   OK
  Hours Used                  20167
  Firmware Version            01.01
```

Release Information

Command introduced in Junos OS Release 12.1X48.

RELATED DOCUMENTATION

PTX5000 Packet Transport Router Hardware Guide

show chassis environment pem

IN THIS SECTION

- Syntax | 868
- Syntax (ACX4000 Router) | 868
- Syntax (TX Matrix Routers) | 869
- Syntax (TX Matrix Plus Routers) | 869
- Syntax (MX Series Router) | 869
- Syntax (PTX Series Router) | 869
- Syntax (MX104 Universal Routing Platforms) | 870
- Syntax (MX10003 , MX204, MX10008, OCX Series, EX9251, and EX9253 devices) | 870
- Syntax (QFX Series) | 870
- Description | 870
- Options | 871
- Required Privilege Level | 872
- Output Fields | 872
- Sample Output | 873
- Release Information | 888

Syntax

```
show chassis environment pem
<slot>
```

Syntax (ACX4000 Router)

```
show chassis environment pem
```

Syntax (TX Matrix Routers)

```
show chassis environment pem
<lcc number | scc>
<slot>
```

Syntax (TX Matrix Plus Routers)

```
show chassis environment pem
<lcc number | sfc number>
<slot>
```

Syntax (MX Series Router)

```
show chassis environment pem
<slot>
<all-members>
<local>
<member member-id>
```

Syntax (PTX Series Router)

```
show chassis environment pem
<slot>
<all-members>
<local>
<member member-id>
```

Syntax (MX104 Universal Routing Platforms)

```
show chassis environment pem
<slot>
<satellite [fpc-slot slot-id |device-alias  alias-name]
```

Syntax (MX10003 , MX204, MX10008, OCX Series, EX9251, and EX9253 devices)

```
show chassis environment pem
<slot>
```

Syntax (QFX Series)

```
show chassis environment pem
<slot (interconnect-device name slot ) | (node-device name)>
```

Description

Display Power Entry Module (PEM) environmental status information.

NOTE: The new high-capacity (4100W) enhanced DC PEM on MX960 routers includes a new design that can condition the input voltage. This results in the output voltage differing from the input voltage. The earlier generation of DC PEMs coupled the input power directly to the output, thereby making it safe to assume that the output voltage was equal to the input voltage.

Options

none — Display environmental information about both PEMs. For the TX Matrix router, display environmental information about the PEMs, the TX Matrix router, and its attached T640 routers. For the TX Matrix Plus router, display environmental information about the PEMs, the TX Matrix Plus router, and its attached routers.

all-members — (MX Series routers only) (Optional) Display environmental information about the PEMs in all the member routers of the Virtual Chassis configuration.

interconnect-device *name* — (QFabric systems only) (Optional) Display chassis environmental information about the PEMs in the Interconnect device.

lcc *number* — (TX Matrix router and TX Matrix Plus router only) (Optional) Line-card chassis number.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local — (MX Series routers only) (Optional) Display environmental information about the PEM in the local Virtual Chassis member.

member *member-id* — (MX Series routers only) (Optional) Display environmental information about the PEM in the specified member of the Virtual Chassis configuration. Replace *member-id* with a value of 0 or 1.

node-device *name* — (QFabric systems only) (Optional) Display chassis environmental information about the PEMs in the Node device.

satellite [fpc-slot *slot-id* | device-alias *alias-name*] — (Junos Fusion only)(Optional) Display environmental information about the PEM in the specified satellite device in a Junos Fusion, or for all satellite devices in the Junos Fusion if no satellite devices are specified.

scc	(TX Matrix routers only) (Optional) Display environmental information about the PEM in the TX Matrix router (or switch-card chassis).
sfc	(TX Matrix Plus routers only) (Optional) Display environmental information about the PEM in the TX Matrix Plus router (or switch-fabric chassis).
slot	(Optional) Display environmental information about an individual PEM. Replace *slot* with 0 or 1.

Required Privilege Level

view

Output Fields

Table 49 on page 872 lists the output fields for the `show chassis environment pem` command. Output fields are listed in the approximate order in which they appear.

Table 49: show chassis environment pem Output Fields

Field Name	Field Description
PEM*slot*status	Number of the PEM slot.
State	Status of the PEM.
Temperature	Temperature of the air flowing past the PEM.
AC Input	Status of the AC input for the specified component
AC Output	Status of the AC output for the specified component.
DC input	Status of the DC input for the specified component.

Table 49: show chassis environment pem Output Fields *(Continued)*

Field Name	Field Description
DC output	Status of the DC output for the specified component.
Load	(Not available on M40e or M160 routers) Information about the load on supply, in percentage of rated current being used.
Voltage	(M120, M160, M320, T640, T1600, TX Matrix, and TX Matrix Plus routers only) Information about voltage supplied to the PEM. (MX104 routers only) Information about voltage supplied by the PEM to the system.
Current	(T640, T1600, TX Matrix, and TX Matrix Plus routers only) Information about the PEM current.
Power	(T640, T1600, TX Matrix, and TX Matrix Plus routers only) Information about the PEM power.
SCG/CB/SIB	(T640, T1600, TX Matrix, and TX Matrix Plus routers only) SONET Clock Generator/Control Board/Switch Interface Board.
FAN	(T640, T1600, and T4000 routers with six-input DC power supply only) Information about the DC output to the fan.

Sample Output

show chassis environment pem (M40e Router)

```
user@host> show chassis environment pem
PEM 0 status:
  State                          Online
  Temperature                    OK
  AC input                       OK
  DC output                      OK
```

show chassis environment pem (M120 Router)

```
user@host> show chassis environment pem
PEM 0 status:
  State                       Online
  Temperature                 OK
  DC Input:                   OK
  DC Output:                  OK
  Load                        Less than 20 percent
  Voltage:
    48.0 V input              52864 mV
    48.0 V fan supply         41655 mV
    3.3 V                      3399 mV
PEM 1 status:
  State                       Online
  Temperature                 OK
  DC Input:                   OK
  DC Output:                  OK
  Load                        Less than 20 percent
  Voltage:
    48.0 V input              54537 mV
    48.0 V fan supply         42910 mV
    3.3 V                      3506 mV
```

show chassis environment pem (M160 Router)

```
user@host> show chassis environment pem
PEM 0 status:
  State                           Online
  Temperature                     OK
  DC input                        OK
  DC output                       OK
  Load                            Less than 20 percent
  Voltage:
    48.0 V input                 54833 mV
    48.0 V fan supply            50549 mV
    8.0 V bias                  8239 mV
    5.0 V bias                  5006 mV
```

show chassis environment pem (M320 Router)

```
user@host> show chassis environment pem
PEM 2 status:
  State                          Online
  Temperature                    OK
  DC input                       OK
  Load                           Less than 40 percent
    48.0 V input            51853 mV
    48.0 V fan supply       48877 mV
    8.0 V bias               8449 mV
    5.0 V bias               4998 mV
PEM 3 status:
  State                          Online
  Temperature                    OK
  DC input                       OK
  Load                           Less than 40 percent
    48.0 V input            51717 mV
    48.0 V fan supply       49076 mV
    8.0 V bias               8442 mV
    5.0 V bias               4998 mV
```

show chassis environment pem (MX150)

```
user@host> show chassis environment pem
FPC 0 PEM 0 status:
  State                      Online
  Airflow                    Front to Back
  Temperature                OK
```

show chassis environment pem (MX104 Router)

```
user@host> show chassis environment pem
PEM 0 status:
  State                      Online
  Temperature                OK
  DC Output:                 OK
  Voltage:
```

```
    12.0 V output            12281 mV
    3.3 V output              3353 mV
PEM 1 status:
  State                      Empty
```

show chassis environment pem (MX240 Router)

```
user@host> show chassis environment pem
PEM 0 status:
  State                      Online
  Temperature                 OK
  DC Output:                  OK
PEM 1 status:
  State                      Online
  Temperature                 OK
  DC Output:                  OK
```

show chassis environment pem (MX480 Router)

```
user@host> show chassis environment pem
PEM 0 status:
  State                      Online
  Temperature                 OK
  DC Input:                   OK
  DC Output:                  OK
  Voltage:
PEM 1 status:
  State                      Online
  Temperature                 OK
  DC Input:                   OK
  DC Output:                  OK
  Voltage:
```

show chassis environment pem (MX960 Router)

```
user@host> show chassis environment pem
PEM 2 status:
  State                      Present
```

```
PEM 3 status:
  State                       Online
  Temperature                  OK
  DC Output:                   OK
```

show chassis environment pem (MX10003 Router)

```
user@host> show chassis environment pem

PEM 0 status:
  State                       Online
  Airflow                     Front to Back
  Temperature                 OK   34 degrees C / 93 degrees F
  Temperature                 OK   26 degrees C / 78 degrees F
  Temperature                 OK   24 degrees C / 75 degrees F
  Firmware version            0x22
  Cooling Fan                 8752 RPM
  DC Output           Voltage(V) Current(A)  Power(W)  Load(%)
                          12.00     26            312      10
PEM 1 status:
  State                       Online
  Airflow                     Front to Back
  Temperature                 OK   35 degrees C / 95 degrees F
  Temperature                 OK   26 degrees C / 78 degrees F
  Temperature                 OK   25 degrees C / 77 degrees F
  Firmware version            0x22
  Cooling Fan                 8480 RPM
  DC Output           Voltage(V) Current(A)  Power(W)  Load(%)
                          12.00     27            324      11
PEM 2 status:
  State                       Online
  Airflow                     Front to Back
  Temperature                 OK   37 degrees C / 98 degrees F
  Temperature                 OK   29 degrees C / 84 degrees F
  Temperature                 OK   25 degrees C / 77 degrees F
  Firmware version            0x22
  Cooling Fan                 8656 RPM
  DC Output           Voltage(V) Current(A)  Power(W)  Load(%)
                          12.00     25            300      10
PEM 3 status:
  State                       Online
```

```
  Airflow                    Front to Back
  Temperature                OK   35 degrees C / 95 degrees F
  Temperature                OK   26 degrees C / 78 degrees F
  Temperature                OK   25 degrees C / 77 degrees F
  Firmware version           0x22
  Cooling Fan                8448 RPM
  DC Output           Voltage(V) Current(A)  Power(W)  Load(%)
                          12.00     26            312      10
PEM 4 status:
  State                      Empty
PEM 5 status:
  State                      Empty
```

show chassis environment pem (MX204 Router)

```
user@host> show chassis environment pem

PEM 0 status:
  State                      Empty
PEM 1 status:
  State                      Online
  Airflow                    Front to Back
  Temperature                OK   48 degrees C / 118 degrees F
  Temperature                OK   51 degrees C / 123 degrees F
  Fan Sensor                 5400 RPM
  DC Output           Voltage(V) Current(A)  Power(W)  Load(%)
                          11.94     16            191      29
```

show chassis environment pem (MX10008 Router)

```
user@host> show chassis environment pem
PEM 0 status:
  State                      Online
  Airflow                    Front to Back
  Temperature                             OK   29 degrees C / 84 degrees F
  Firmware version           0x36
  Fan 0                      5880 RPM
  DC Output           Voltage(V) Current(A)  Power(W)  Load(%)
                        12.00       104           1248     46
PEM 1 status:
```

```
  State                       Online
  Airflow                     Front to Back
  Temperature                             OK   27 degrees C / 80 degrees F
  Firmware version            0x36
  Fan 0                       5940 RPM
  DC Output           Voltage(V) Current(A)  Power(W)  Load(%)
                        12.00       104           1248     46
PEM 2 status:
  State                       Online
  Airflow                     Front to Back
  Temperature                             OK   30 degrees C / 86 degrees F
  Firmware version            0x36
  Fan 0                       5940 RPM
  DC Output           Voltage(V) Current(A)  Power(W)  Load(%)
                        12.00       105           1260     46
PEM 3 status:
  State                       Present
PEM 4 status:
  State                       Present
PEM 5 status:
  State                       Present
```

show chassis environment pem (PTX10016 Router)

```
user@host> show chassis environment pem
PEM 0 status:
  State                       Online
  Airflow                     Front to Back
  Temperature                 OK   21 degrees C / 69 degrees F
  Firmware version            0x36
  Fan 0                       5760 RPM
  DC Output           Voltage(V) Current(A)  Power(W)  Load(%)
                          12.00     51            612      22
PEM 1 status:
  State                       Online
  Airflow                     Front to Back
  Temperature                 OK   23 degrees C / 73 degrees F
  Firmware version            0x36
  Fan 0                       5760 RPM
  DC Output           Voltage(V) Current(A)  Power(W)  Load(%)
                          12.00     52            624      23
```

```
PEM 2 status:
  State                      Online
  Airflow                    Front to Back
  Temperature                OK   23 degrees C / 73 degrees F
  Firmware version           0x36
  Fan 0                      5760 RPM
  DC Output           Voltage(V) Current(A)  Power(W)  Load(%)
                          12.00     51            612      22
PEM 3 status:
  State                      Online
  Airflow                    Front to Back
  Temperature                OK   21 degrees C / 69 degrees F
  Firmware version           0x36
  Fan 0                      5760 RPM
  DC Output           Voltage(V) Current(A)  Power(W)  Load(%)
                          12.00     51            612      22
PEM 4 status:
  State                      Online
  Airflow                    Front to Back
  Temperature                OK   22 degrees C / 71 degrees F
  Firmware version           0x36
  Fan 0                      5760 RPM
  DC Output           Voltage(V) Current(A)  Power(W)  Load(%)
                          12.00     52            624      23
PEM 5 status:
  State                      Online
  Airflow                    Front to Back
  Temperature                OK   24 degrees C / 75 degrees F
  Firmware version           0x36
  Fan 0                      5700 RPM
  DC Output           Voltage(V) Current(A)  Power(W)  Load(%)
                          12.00     51            612      22
PEM 6 status:
  State                      Online
  Airflow                    Front to Back
  Temperature                OK   21 degrees C / 69 degrees F
  Firmware version           0x36
  Fan 0                      5700 RPM
  DC Output           Voltage(V) Current(A)  Power(W)  Load(%)
                          12.00     50            600      22
```

show chassis environment pem (T320 Router)

```
user@host> show chassis environment pem
PEM 0 status:
  State                          Online
  Temperature                    OK
  DC input:                      OK
```

show chassis environment pem (T640 Router)

```
user@host> show chassis environment pem
PEM 0 status:
  State                          Online
  Temperature                 22 degrees C / 71 degrees F
  AC input: OK
  DC output:            Voltage   Current       Power    Load
       FPC 0              56875       606          34       4
       FPC 1              57016       525          29       3
       FPC 2                  0         0           0       0
       FPC 3                  0         0           0       0
       FPC 4                  0         0           0       0
       FPC 5                  0         0           0       0
       FPC 6              57158      1581          90      12
       FPC 7                  0         0           0       0
  SCG/CB/SIB              56750      1125          63       5
```

show chassis environment pem (T4000 Router)

```
user@host> show chassis environment pem
PEM 0 status:
  State                      Online
  Temperature                33 degrees C / 91 degrees F
  DC Input:                  OK
                     Voltage(V)  Current(A)  Power(W)  Load(%)
       INPUT 0          54.625       9.812       535       22
       INPUT 1          54.625      10.250       559       23
       INPUT 2          55.125       0.125         6        0
       INPUT 3          54.500      10.062       548       22
       INPUT 4          54.750       9.375       513       21
```

```
      INPUT 5          54.750      10.187      557       23
  DC Output          Voltage(V)  Current(A)  Power(W)  Load(%)
      FPC 0            55.750      10.125      564       37
      FPC 1            51.625       0.000        0        0
      FPC 2            52.000       0.000        0        0
      FPC 3            55.062      10.437      574       38
      FPC 4            52.125       0.000        0        0
      FPC 5            55.000       9.375      515       34
      FPC 6            55.187       9.687      534       35
      FPC 7            51.437       0.000        0        0
      SCG/CB/SIB       55.375      15.750      872       35
      FAN              54.562      14.750      804       42
```

show chassis environment pem (T640/T1600/T4000 Routers With Six-Input DC Power Supply)

```
user@host> show chassis environment pem
PEM 1 status:
  State                     Online
  Temperature               36 degrees C / 96 degrees F
  DC Input:                 OK
                     Voltage(V)  Current(A)  Power(W)  Load(%)
      INPUT 0          0.000       0.000        0        0
      INPUT 1         54.875       3.812      209       27
      INPUT 2         55.375       3.937      218       29
      INPUT 3         54.625       3.750      204       27
      INPUT 4         55.125       3.375      186       24
      INPUT 5         55.125       3.375      186       24
  DC Output          Voltage(V)  Current(A)  Power(W)  Load(%)
      FPC 0            52.312       0.000        0        0
      FPC 1            52.687       0.000        0        0
      FPC 2            52.812       0.000        0        0
      FPC 3            55.812       7.062      394       52
      FPC 4            52.625       0.000        0        0
      FPC 5            52.625       0.000        0        0
      FPC 6            52.750       0.000        0        0
      FPC 7            52.750       0.000        0        0
      SCG/CB/SIB       55.937      11.937      667       55
      FAN              55.812       4.937      275       36
```

show chassis environment pem lcc (TX Matrix Routing Matrix)

```
user@host> show chassis environment pem 0 lcc
0
lcc0-re0:
--------------------------------------------------------------------------
PEM 0 status:
  State                          Present
  Temperature                 27 degrees C / 80 degrees F
  DC input:                      Check
  DC output:            Voltage   Current       Power    Load
       FPC 0                  0         0           0       0
       FPC 1                  0         0           0       0
       FPC 2                  0         0           0       0
       FPC 3                  0         0           0       0
       FPC 4                  0         0           0       0
       FPC 5                  0         0           0       0
       FPC 6                  0         0           0       0
       FPC 7                  0         0           0       0
  SCG/CB/SIB                  0         0           0       0
```

show chassis environment pem scc (TX Matrix Routing Matrix)

```
user@host> show chassis environment pem scc
scc-re0:
--------------------------------------------------------------------------
PEM 1 status:
  State                          Online
  Temperature                 24 degrees C / 75 degrees F
  DC input:                      OK
  DC output:            Voltage   Current       Power    Load
       SIB 0                  0         0           0       0
       SIB 1                  0         0           0       0
       SIB 2                  0         0           0       0
       SIB 3              56550         0           0       0
       SIB 4              55958      6912         386      51
```

show chassis environment pem sfc (TX Matrix Plus Routing Matrix)

```
user@host> show chassis environment pem sfc
0
sfc0-re0:
--------------------------------------------------------------------------
PEM 0 status:
  State                      Online
  Temperature                35 degrees C / 95 degrees F
  DC Input:                   OK
  DC Output             Voltage   Current       Power    Load
       Channel 0          53820     14140         761      59
       Channel 1          53550     12720         681      53
       Channel 2          53840     12930         696      54
       Channel 3          53690     14990         804      63
       Channel 4          53620     15070         808      63
       Channel 5          53900     14820         798      62
       Channel 6          54120     5020          271      21
```

show chassis environment pem lcc (TX Matrix Plus Routing Matrix)

```
user@host> show chassis environment lcc 0

lcc0-re1:
--------------------------------------------------------------------------
PEM 0 status:
  State                      Online
  Temperature                38 degrees C / 100 degrees F
  DC Input:                  OK
  DC Output             Voltage   Current       Power    Load
       FPC 0              0         0             0        0
       FPC 1              0         0             0        0
       FPC 2              0         0             0        0
       FPC 3              0         0             0        0
       FPC 4              56408     7575          427      56
       FPC 5              0         0             0        0
       FPC 6              56266     7956          447      59
       FPC 7              56283     6100          343      45
       SCG/CB/SIB         55916     8950          500      41
PEM 1 status:
```

```
  State                       Present
  Temperature                 35 degrees C / 95 degrees F
  DC Input:                   Check
  DC Output             Voltage   Current       Power    Load
      FPC 0               0         0             0        0
      FPC 1               0         0             0        0
      FPC 2               0         0             0        0
      FPC 3               0         0             0        0
      FPC 4               0         0             0        0
      FPC 5               0         0             0        0
      FPC 6               0         0             0        0
      FPC 7               0         0             0        0
      SCG/CB/SIB          0         0             0        0
```

show chassis environment pem node-device (QFabric System)

```
user@switch> show chassis environment pem node-device
node1
FPC 0 PEM 0 status:
  State                       Check
  Airflow                     Front to Back
  Temperature                 OK
  AC Input:                   OK
  DC Output           Voltage(V) Current(A)  Power(W)  Load(%)
                          12        10            120      18
FPC 0 PEM 1 status:
  State                       Online
  Airflow                     Back to Front
  Temperature                 OK
  AC Input:                   OK
  DC Output           Voltage(V) Current(A)  Power(W)  Load(%)
                          11        10           110      17
```

show chassis environment pem (QFX Series and OCX Series)

```
user@switch> show chassis environment pem
FPC 0 PEM 1 status:
  State                       Online
  Airflow                     Front to Back
  Temperature                 OK
```

```
  AC Input:                  OK
  DC Output           Voltage(V) Current(A)  Power(W)  Load(%)
                          12        17            204      31
```

show chassis environment pem (QFX 10016)

```
user@router> show chassis environment pem 1

PEM 1 status:
  State                      Present
  Input                      Voltage(V)  Current(A) Power(W)
  INP 1                      229.9       0.4        96.6
  INP 2                      233.7       0.4        98.2
  Health check Information:
      Status:                    Scheduled
      Last Result:               Pass
      Last Execution:            2019-04-23 15:09:54
      Next Scheduled Run:        2019-04-23 15:32:59
```

show chassis environment pem interconnect-device (QFabric System)

```
user@switch> show chassis environment pem interconnect-device
IC1 1
IC1 PEM 1 status:
  State                      Online
  Airflow                    Front to Back
  Temperature                OK
  AC Input:                  OK
  DC Output           Voltage(V) Current(A)  Power(W)  Load(%)
                          12        18            216      33
```

show chassis environment pem (EX9251 Switches)

```
user@switch> show chassis environment pem
PEM 0 status:
  State                      Present
PEM 1 status:
  State                      Online
```

```
  Airflow                     Front to Back
  Temperature                 OK   36 degrees C / 96 degrees F
  Temperature                 OK   35 degrees C / 95 degrees F
  Fan Sensor                  5940 RPM
  DC Output           Voltage(V) Current(A)  Power(W)  Load(%)
                        11.85       17            201      30
```

show chassis environment pem (EX9253 Switches)

```
user@switch> show chassis environment pem
PEM 0 status:
  State                       Online
  Airflow                     Front to Back
  Temperature                 OK   56 degrees C / 132 degrees F
  Temperature                 OK   46 degrees C / 114 degrees F
  Temperature                 OK   28 degrees C / 82 degrees F
  Firmware version            04.10
  Cooling Fan                 9056 RPM
  DC Output           Voltage(V) Current(A)  Power(W)  Load(%)
                          12.00     47            564      19
PEM 1 status:
  State                       Present
PEM 2 status:
  State                       Empty
PEM 3 status:
  State                       Empty
PEM 4 status:
  State                       Present
PEM 5 status:
  State                       Online
  Airflow                     Front to Back
  Temperature                 OK   61 degrees C / 141 degrees F
  Temperature                 OK   49 degrees C / 120 degrees F
  Temperature                 OK   28 degrees C / 82 degrees F
  Firmware version            04.10
  Cooling Fan                 8656 RPM
  DC Output           Voltage(V) Current(A)  Power(W)  Load(%)
                          12.00     51            612      21
```

show chassis environment pem (PTX1000 Packet Transport Routers)

```
user@router> show chassis environment pem

PEM 0 status:
  State                      Online
  Airflow                    Front to Back
  Temp Sensor 0              OK   22 degrees C / 71 degrees F
  Temp Sensor 1              OK   23 degrees C / 73 degrees F
  Fan 0                      9184 RPM
  Fan 1                      7936 RPM
  DC Output           Voltage(V) Current(A)  Power(W)  Load(%)
                        12          24            288      18
PEM 2 status:
  State                      Online
  Airflow                    Front to Back
  Temp Sensor 0              OK   22 degrees C / 71 degrees F
  Temp Sensor 1              OK   26 degrees C / 78 degrees F
  Fan 0                      9056 RPM
  Fan 1                      7808 RPM
  DC Output           Voltage(V) Current(A)  Power(W)  Load(%)
                        12          24            288      18
```

On PTX1000 Packet Transport Routers, you cannot view the `show chassis environment pem` output at the PEM slot level, by using the command `show chassis environment pem` *slot*.

Release Information

Command introduced before Junos OS Release 7.4.

`satellite` option introduced in Junos OS Release 14.2R3.

RELATED DOCUMENTATION

show chassis hardware

show chassis environment psu

IN THIS SECTION

- Syntax | 889
- Description | 889
- Options | 889
- Required Privilege Level | 890
- Output Fields | 890
- Sample Output | 890
- Release Information | 891

Syntax

```
show chassis environment psu
<slot-number>
```

Description

(On EX8200 switches only) Display the state of the power supply.

Options

none	Display the state of the power supply for all power supplies.
slot-number	(Optional) Display the state of the power supply for a specific power supply slot number (0–5).

Required Privilege Level

view

Output Fields

Table 50 on page 890 lists the output fields for the `show chassis environment psu` command. Output fields are listed in the approximate order in which they appear.

Table 50: show chassis environment psu Output Fields

Field Name	Field Description
State	State of the power supply: Online, Offline, or Empty.
Temperature	Temperature for the online power supply: OK or Out of Range.
DC Output	DC output for the online power supply: OK or Out of Range.

Sample Output

show chassis environment psu

```
user@switch> show chassis environment psu

PSU 0 status:
  State                       Offline
PSU 1 status:
  State                       Online
  Temperature                  OK
  DC Output:                   OK
PSU 2 status:
  State                       Online
  Temperature                  OK
  DC Output:                   OK
```

```
PSU 3 status:
  State                       Offline
PSU 4 status:
  State                       Offline
PSU 5 status:
  State                       Offline
```

show chassis environment psu (for PSU 1)

```
user@switch> show chassis environment psu 1
PSU 1 status:
  State                       Online
  Temperature                  OK
  DC Output:                   OK
```

Release Information

Command introduced in Junos OS Release 10.3.

RELATED DOCUMENTATION

Verifying Power Configuration and Use

show chassis power-budget-statistics

show chassis environment psm

IN THIS SECTION

- Syntax | 892
- Description | 892
- Options | 892

- Required Privilege Level | 893
- Output Fields | 893
- Sample Output | 894
- Release Information | 905

Syntax

```
show chassis environment psm
<all-members>
<local>
<member member-id>
<psm-slot-number>
```

Description

Display chassis environmental information about the power supply module (PSM).

To run system health check correctly in Junos evolved versions for PTX series, and to get correct output in the command **show environment psm**, the following prerequisites must be followed:

- System load must be enough to load a PSM to its health check threshold.
- There should be at least one redundant active PSM with no defects.

Options

none	Display environmental information about all power supply modules (PSMs).
all-members	(Optional) Display chassis environmental information about the PSM in all members of the Virtual Chassis configuration.
local	(Optional) Display chassis environmental information about the PSM in the local member of the Virtual Chassis.

member *member-id*	(Optional) Display chassis environmental information about the PSM in the specified member of the Virtual Chassis. Replace *member-id* with the value 0 or 1.
psm-slot-number	(Optional) Display environmental information about the specified power supply module. For MX2020 routers, replace *psm-slot-number* with a value from 0 through 17. For MX2010 and MX2008 routers, replace *psm-slot-number* with a value from 0 through 8.

Required Privilege Level

view

Output Fields

Table 51 on page 893 lists the output fields for the `show chassis environment psm` command. Output fields are listed in the approximate order in which they appear.

Table 51: show chassis environment psm Output Fields

Field Name	Field Description
`State`	Status of the PSM. • `Online`—The PSM is online and running. • `Offline`—PSM is powered down.
`Temperature`	The status of the temperature of the air flowing past the PSM. • `Out of range`—Displayed if the PSM detects over-temperature. • `OK`—Displayed if the temperature is within the acceptable limit.
`DC Input`	State of the DC input power feed for the specified zone at the specified amps and voltage, and load for the PSM.

Table 51: show chassis environment psm Output Fields *(Continued)*

Field Name	Field Description
DC Output	DC power output in watts (W) for the specified zone at the specified amps and voltage (A @ V), and load and percentage utilization of the maximum capacity for the PSM.
Hours Used	Number of hours the PSM has been operational.
Bootloader Version	Bootloader version for AC PSMs.

Sample Output

show chassis environment psm (MX2020 Router)

```
user@host> show chassis environment psm
PSM 2 status:
  State                     Online
  Temperature               OK
  DC Input                  Feed       Voltage(V)  Current(A) Power(W)
                            INP0         50.00       18.90     945.00
                            INP1         0.00        0.00      0.00
  DC Output                 Voltage(V) Current(A)  Power(W)   Load(%)
                              51.75      16.50      853.88     40.66
  Hours Used                6140
PSM 3 status:
  State                     Online
  Temperature               OK
  DC Input                  Feed       Voltage(V)  Current(A) Power(W)
                            INP0         50.40       18.90     952.56
                            INP1         0.00        0.00      0.00
  DC Output                 Voltage(V) Current(A)  Power(W)   Load(%)
                              51.75      16.50      853.88     40.66
  Hours Used                6140
PSM 4 status:
  State                     Online
  Temperature               OK
```

```
  DC Input                  Feed       Voltage(V)  Current(A) Power(W)
                            INP0         50.40       18.90     952.56
                            INP1         0.00        0.00      0.00
  DC Output                 Voltage(V) Current(A)  Power(W)   Load(%)
                              52.00      16.75      871.00     41.48
  Hours Used                6140
PSM 5 status:
  State                     Online
  Temperature               OK
  DC Input                  Feed       Voltage(V)  Current(A) Power(W)
                            INP0         50.40       18.90     952.56
                            INP1         0.00        0.00      0.00
  DC Output                 Voltage(V) Current(A)  Power(W)   Load(%)
                              52.00      16.50      858.00     40.86
  Hours Used                6140
PSM 6 status:
  State                     Online
  Temperature               OK
  DC Input                  Feed       Voltage(V)  Current(A) Power(W)
                            INP0         50.40       18.90     952.56
                            INP1         0.00        0.00      0.00
  DC Output                 Voltage(V) Current(A)  Power(W)   Load(%)
                              52.00      16.75      871.00     41.48
  Hours Used                6140
PSM 7 status:
  State                     Online
  Temperature               OK
  DC Input                  Feed       Voltage(V)  Current(A) Power(W)
                            INP0         50.40       19.20     967.68
                            INP1         0.00        0.00      0.00
  DC Output                 Voltage(V) Current(A)  Power(W)   Load(%)
                              52.00      16.75      871.00     41.48
  Hours Used                6140
PSM 8 status:
  State                     Online
  Temperature               OK
  DC Input                  Feed       Voltage(V)  Current(A) Power(W)
                            INP0         50.00       20.40     1020.00
                            INP1         0.00        0.00      0.00
  DC Output                 Voltage(V) Current(A)  Power(W)   Load(%)
                              51.75      17.00      879.75     41.89
  Hours Used                3380
PSM 11 status:
```

```
  State                     Online
  Temperature               OK
  DC Input                  Feed       Voltage(V)  Current(A) Power(W)
                            INP0         0.00        0.00      0.00
                            INP1         50.40       18.30     922.32
  DC Output                 Voltage(V) Current(A)  Power(W)   Load(%)
                              52.00      16.25      845.00     40.24
  Hours Used                5615
PSM 12 status:
  State                     Online
  Temperature               OK
  DC Input                  Feed       Voltage(V)  Current(A) Power(W)
                            INP0         0.00        0.00      0.00
                            INP1         50.40       18.30     922.32
  DC Output                 Voltage(V) Current(A)  Power(W)   Load(%)
                              52.00      16.00      832.00     39.62
  Hours Used                6143
PSM 13 status:
  State                     Online
  Temperature               OK
  DC Input                  Feed       Voltage(V)  Current(A) Power(W)
                            INP0         0.00        0.00      0.00
                            INP1         50.40       18.00     907.20
  DC Output                 Voltage(V) Current(A)  Power(W)   Load(%)
                              52.00      16.00      832.00     39.62
  Hours Used                6143
PSM 14 status:
  State                     Online
  Temperature               OK
  DC Input                  Feed       Voltage(V)  Current(A) Power(W)
                            INP0         0.00        0.00      0.00
                            INP1         50.00       18.30     915.00
  DC Output                 Voltage(V) Current(A)  Power(W)   Load(%)
                              52.00      16.00      832.00     39.62
  Hours Used                6143
PSM 15 status:
  State                     Online
  Temperature               OK
  DC Input                  Feed       Voltage(V)  Current(A) Power(W)
                            INP0         0.00        0.00      0.00
                            INP1         48.80       18.90     922.32
  DC Output                 Voltage(V) Current(A)  Power(W)   Load(%)
                              52.00      16.25      845.00     40.24
```

```
  Hours Used                6143
PSM 16 status:
  State                     Online
  Temperature               OK
  DC Input                  Feed       Voltage(V)  Current(A) Power(W)
                            INP0         0.00        0.00      0.00
                            INP1         48.80       18.90     922.32
  DC Output                 Voltage(V) Current(A)  Power(W)   Load(%)
                              52.00      16.25      845.00     40.24
  Hours Used                6143
PSM 17 status:
  State                     Online
  Temperature               OK
  DC Input                  Feed       Voltage(V)  Current(A) Power(W)
                            INP0         0.00        0.00      0.00
                            INP1         48.80       18.90     922.32
  DC Output                 Voltage(V) Current(A)  Power(W)   Load(%)
                              52.00      16.25      845.00     40.24
  Hours Used                5207
```

show chassis environment psm (MX2020 Router with 240-V high-voltage DC PSMs)

```
user@host> show chassis environment psm

PSM 0 status:
  State                     Online
  Temperature               OK
  DC Input                  Feed       Voltage(V)  Current(A) Power(W)
                            INP0         0.00        0.00      0.00
                            INP1         240.00      1.00      240.00
  DC Output                 Voltage(V) Current(A)  Power(W)   Load(%)
                              52.75      3.75       197.81     7.91
  Hours Used                2026
PSM 1 status:
  State                     Online
  Temperature               OK
  DC Input                  Feed       Voltage(V)  Current(A) Power(W)
                            INP0         0.00        0.00      0.00
                            INP1         240.00      0.90      216.00
  DC Output                 Voltage(V) Current(A)  Power(W)   Load(%)
                              52.75      3.25       171.44     6.86
```

```
  Hours Used                2530
PSM 2 status:
  State                     Online
  Temperature               OK
  DC Input                  Feed       Voltage(V)  Current(A) Power(W)
                            INP0         0.00        0.00      0.00
                            INP1         240.00      0.90      216.00
  DC Output                 Voltage(V) Current(A)  Power(W)   Load(%)
                              52.75      3.50       184.62     7.38
  Hours Used                2530
PSM 3 status:
  State                     Online
  Temperature               OK
  DC Input                  Feed       Voltage(V)  Current(A) Power(W)
                            INP0         0.00        0.00      0.00
                            INP1         240.00      0.90      216.00
  DC Output                 Voltage(V) Current(A)  Power(W)   Load(%)
                              52.75      3.50       184.62     7.38
  Hours Used                2026
PSM 4 status:
  State                     Online
  Temperature               OK
  DC Input                  Feed       Voltage(V)  Current(A) Power(W)
                            INP0         0.00        0.00      0.00
                            INP1         240.00      0.90      216.00
  DC Output                 Voltage(V) Current(A)  Power(W)   Load(%)
                              52.50      3.50       183.75     7.35
  Hours Used                2530
PSM 5 status:
  State                     Online
  Temperature               OK
  DC Input                  Feed       Voltage(V)  Current(A) Power(W)
                            INP0         0.00        0.00      0.00
                            INP1         240.00      1.00      240.00
  DC Output                 Voltage(V) Current(A)  Power(W)   Load(%)
                              52.50      3.75       196.88     7.88
  Hours Used                2530
PSM 6 status:
  State                     Online
  Temperature               OK
  DC Input                  Feed       Voltage(V)  Current(A) Power(W)
                            INP0         0.00        0.00      0.00
                            INP1         240.00      1.00      240.00
```

```
  DC Output                 Voltage(V) Current(A)  Power(W)   Load(%)
                              52.50      3.75       196.88     7.88
  Hours Used                2002
PSM 7 status:
  State                     Online
  Temperature               OK
  DC Input                  Feed       Voltage(V)  Current(A) Power(W)
                            INP0         0.00        0.00      0.00
                            INP1         240.00      1.00      240.00
  DC Output                 Voltage(V) Current(A)  Power(W)   Load(%)
                              52.50      3.75       196.88     7.88
  Hours Used                2146
PSM 8 status:
  State                     Online
  Temperature               OK
  DC Input                  Feed       Voltage(V)  Current(A) Power(W)
                            INP0         0.00        0.00      0.00
                            INP1         240.00      1.00      240.00
  DC Output                 Voltage(V) Current(A)  Power(W)   Load(%)
                              52.50      3.75       196.88     7.88
  Hours Used                2026
PSM 9 status:
  State                     Online
  Temperature               OK
  DC Input                  Feed       Voltage(V)  Current(A) Power(W)
                            INP0         240.00      0.80      192.00
                            INP1         0.00        0.00      0.00
  DC Output                 Voltage(V) Current(A)  Power(W)   Load(%)
                              52.50      2.75       144.38     5.78
  Hours Used                2530
PSM 10 status:
  State                     Online
  Temperature               OK
  DC Input                  Feed       Voltage(V)  Current(A) Power(W)
                            INP0         240.00      0.80      192.00
                            INP1         0.00        0.00      0.00
  DC Output                 Voltage(V) Current(A)  Power(W)   Load(%)
                              52.75      2.75       145.06     5.80
  Hours Used                682
PSM 11 status:
  State                     Online
  Temperature               OK
  DC Input                  Feed       Voltage(V)  Current(A) Power(W)
```

```
                          INP0         240.00      0.70      168.00
                          INP1         0.00        0.00      0.00
  DC Output               Voltage(V) Current(A)  Power(W)   Load(%)
                            52.75      2.75       145.06     5.80
  Hours Used              2098
PSM 12 status:
  State                   Online
  Temperature             OK
  DC Input                Feed       Voltage(V)  Current(A) Power(W)
                          INP0         240.00      0.80      192.00
                          INP1         0.00        0.00      0.00
  DC Output               Voltage(V) Current(A)  Power(W)   Load(%)
                            52.25      3.00       156.75     6.27
  Hours Used              2458
PSM 13 status:
  State                   Online
  Temperature             OK
  DC Input                Feed       Voltage(V)  Current(A) Power(W)
                          INP0         240.00      0.80      192.00
                          INP1         0.00        0.00      0.00
  DC Output               Voltage(V) Current(A)  Power(W)   Load(%)
                            52.25      2.75       143.69     5.75
  Hours Used              2601
PSM 14 status:
  State                   Online
  Temperature             OK
  DC Input                Feed       Voltage(V)  Current(A) Power(W)
                          INP0         240.00      0.80      192.00
                          INP1         0.00        0.00      0.00
  DC Output               Voltage(V) Current(A)  Power(W)   Load(%)
                            52.75      2.75       145.06     5.80
  Hours Used              682
PSM 15 status:
  State                   Online
  Temperature             OK
  DC Input                Feed       Voltage(V)  Current(A) Power(W)
                          INP0         240.00      0.80      192.00
                          INP1         0.00        0.00      0.00
  DC Output               Voltage(V) Current(A)  Power(W)   Load(%)
                            52.25      2.75       143.69     5.75
  Hours Used              2122
PSM 16 status:
  State                   Online
```

```
  Temperature                OK
  DC Input                   Feed       Voltage(V)  Current(A) Power(W)
                             INP0         240.00      0.70      168.00
                             INP1         0.00        0.00      0.00
  DC Output                  Voltage(V) Current(A)  Power(W)   Load(%)
                               52.25      2.50       130.62     5.22
  Hours Used                 2050
PSM 17 status:
  State                      Online
  Temperature                OK
  DC Input                   Feed       Voltage(V)  Current(A) Power(W)
                             INP0         240.00      0.80      192.00
                             INP1         0.00        0.00      0.00
  DC Output                  Voltage(V) Current(A)  Power(W)   Load(%)
                               52.50      3.00       157.50     6.30
  Hours Used                 2122
```

show chassis environment psm (MX2010 Router)

```
user@host> show chassis environment psm
PSM 0 status:
  State                      Online
  Temperature                OK
  DC Input                   Feed       Voltage(V)  Current(A) Power(W)
                             INP0         51.20       14.70     752.64
                             INP1         0.00        0.00      0.00
  DC Output                  Voltage(V) Current(A)  Power(W)   Load(%)
                               51.25      13.00      666.25     26.65
  Hours Used                 2056
PSM 1 status:
  State                      Online
  Temperature                OK
  DC Input                   Feed       Voltage(V)  Current(A) Power(W)
                             INP0         51.20       14.35     734.72
                             INP1         0.00        0.00      0.00
  DC Output                  Voltage(V) Current(A)  Power(W)   Load(%)
                               51.25      12.75      653.44     26.14
  Hours Used                 2008
PSM 2 status:
  State                      Online
```

```
  Temperature               OK
  DC Input                  Feed       Voltage(V)  Current(A) Power(W)
                            INP0         51.20       14.35     734.72
                            INP1         0.00        0.00      0.00
  DC Output                 Voltage(V) Current(A)  Power(W)   Load(%)
                              51.50      13.00      669.50     26.78
  Hours Used                2032
PSM 3 status:
  State                     Online
  Temperature               OK
  DC Input                  Feed       Voltage(V)  Current(A) Power(W)
                            INP0         50.40       14.35     723.24
                            INP1         0.00        0.00      0.00
  DC Output                 Voltage(V) Current(A)  Power(W)   Load(%)
                              51.00      12.75      650.25     26.01
  Hours Used                2008
PSM 4 status:
  State                     Online
  Temperature               OK
  DC Input                  Feed       Voltage(V)  Current(A) Power(W)
                            INP0         51.20       14.00     716.80
                            INP1         0.00        0.00      0.00
  DC Output                 Voltage(V) Current(A)  Power(W)   Load(%)
                              51.25      13.00      666.25     26.65
  Hours Used                2055
PSM 5 status:
  State                     Online
  Temperature               OK
  DC Input                  Feed       Voltage(V)  Current(A) Power(W)
                            INP0         51.20       14.70     752.64
                            INP1         0.00        0.00      0.00
  DC Output                 Voltage(V) Current(A)  Power(W)   Load(%)
                              51.25      13.00      666.25     26.65
  Hours Used                2056
PSM 6 status:
  State                     Online
Temperature                 OK
  DC Input                  Feed       Voltage(V)  Current(A) Power(W)
                            INP0         50.80       14.70     746.76
                            INP1         0.00        0.00      0.00
  DC Output                 Voltage(V) Current(A)  Power(W)   Load(%)
                              51.25      13.00      666.25     26.65
  Hours Used                2056
```

```
PSM 7 status:
  State                     Online
  Temperature               OK
  DC Input                  Feed       Voltage(V)  Current(A) Power(W)
                            INP0         50.40       14.70     740.88
                            INP1         0.00        0.00      0.00
  DC Output                 Voltage(V) Current(A)  Power(W)   Load(%)
                              51.25      13.00      666.25     26.65
  Hours Used                2056
PSM 8 status:
  State                     Online
  Temperature               OK
  DC Input                  Feed       Voltage(V)  Current(A) Power(W)
                            INP0         50.40       14.70     740.88
                            INP1         0.00        0.00      0.00
  DC Output                 Voltage(V) Current(A)  Power(W)   Load(%)
                              51.25      13.00      666.25     26.65
  Hours Used                2056
```

show chassis environment psm (MX2008 Router)

```
user@host> show chassis environment psm
PSM 1 status:
  State                     Online
  Temperature               OK
  DC Input                  Feed       Voltage(V)  Current(A) Power(W)
                            INP0         53.20       4.55      242.06
                            INP1         53.20       3.85      204.82
  DC Output                 Voltage(V) Current(A)  Power(W)   Load(%)
                              51.50      7.75       399.12     15.96
  Hours Used                2811
PSM 2 status:
  State                     Online
  Temperature               OK
  DC Input                  Feed       Voltage(V)  Current(A) Power(W)
                            INP0         53.20       4.55      242.06
                            INP1         53.20       3.85      204.82
  DC Output                 Voltage(V) Current(A)  Power(W)   Load(%)
                              51.25      8.00       410.00     16.40
  Hours Used                2882
PSM 3 status:
```

```
  State                    Online
  Temperature              OK
  DC Input                 Feed       Voltage(V)  Current(A) Power(W)
                           INP0         52.40       1.75      91.70
                           INP1         52.80       8.40      443.52
  DC Output                Voltage(V) Current(A)  Power(W)   Load(%)
                             51.50      7.75       399.12     15.96
  Hours Used               2668
PSM 4 status:
  State                    Online
  Temperature              OK
  DC Input                 Feed       Voltage(V)  Current(A) Power(W)
                           INP0         52.80       0.35      18.48
                           INP1         53.20       8.40      446.88
  DC Output                Voltage(V) Current(A)  Power(W)   Load(%)
                             51.50      7.75       399.12     15.96
  Hours Used               2740
PSM 5 status:
  State                    Online
  Temperature              OK
  DC Input                 Feed       Voltage(V)  Current(A) Power(W)
                           INP0         52.40       0.00      0.00
                           INP1         53.20       8.40      446.88
  DC Output                Voltage(V) Current(A)  Power(W)   Load(%)
                             51.50      7.75       399.12     15.96
  Hours Used               2932
PSM 6 status:
  State                    Online
  Temperature              OK
  DC Input                 Feed       Voltage(V)  Current(A) Power(W)
                           INP0         54.00       8.40      453.60
                           INP1         53.20       0.00      0.00
  DC Output                Voltage(V) Current(A)  Power(W)   Load(%)
                             51.50      7.75       399.12     15.96
  Hours Used               2932
PSM 7 status:
  State                    Online
  Temperature              OK
  DC Input                 Feed       Voltage(V)  Current(A) Power(W)
                           INP0         54.00       8.40      453.60
                           INP1         53.20       0.00      0.00
  DC Output                Voltage(V) Current(A)  Power(W)   Load(%)
```

```
                              51.25       7.75       397.19      15.89
  Hours Used                  2931
```

Release Information

Command introduced in Junos OS Release 12.3 for MX2010 and MX2020 Universal Routing Platforms.

`all-members`, `local`, and `member` *`member-id`* options introduced in Junos OS Release 15.1 for MX2020 and MX2010 routers.

RELATED DOCUMENTATION

show chassis environment | **543**

show chassis environment routing-engine

IN THIS SECTION

- Syntax | **906**
- Syntax (TX Matrix Routers) | **906**
- Syntax (TX Matrix Plus Routers) | **906**
- Syntax (MX104, MX2010, MX2020, MX10003, MX204, and MX2008 Universal Routing Platforms) | **906**
- Syntax (MX Series and PTX Series Devices) | **907**
- Syntax (QFX Series and OCX Series) | **907**
- Syntax (EX9251 and EX9253 Switches; ACX500, ACX5048 and ACX5096 Routers) | **907**
- Description | **907**
- Options | **907**
- Required Privilege Level | **909**
- Output Fields | **909**
- Sample Output | **910**
- Sample Output | **914**

- Release Information | **916**

Syntax

```
show chassis environment routing-engine
<slot>
```

Syntax (TX Matrix Routers)

```
show chassis environment routing-engine
<lcc number | scc>
<slot>
```

Syntax (TX Matrix Plus Routers)

```
show chassis environment routing-engine
<lcc number | sfc number>
<slot>
```

Syntax (MX104, MX2010, MX2020, MX10003, MX204, and MX2008 Universal Routing Platforms)

```
show chassis environment routing-engine
<slot>
<satellite [fpc-slot slot-id |device-alias  alias-name]
```

Syntax (MX Series and PTX Series Devices)

```
show chassis environment routing-engine
<slot>
<all-members>
<local>
<member member-id>
```

Syntax (QFX Series and OCX Series)

```
show chassis environment routing-engine
interconnect-device name
```

Syntax (EX9251 and EX9253 Switches; ACX500, ACX5048 and ACX5096 Routers)

```
show chassis environment routing-engine
```

Description

Display Routing Engine environmental status information.

Options

none Display environmental information about all Routing Engines. For a TX Matrix router, display environmental information about all Routing Engines on the TX Matrix router and its attached T640 routers. For a TX Matrix Plus router, display

environmental information about all Routing Engines on the TX Matrix Plus router and its attached routers.

all-members (MX Series routers only) (Optional) Display environmental information about the Routing Engines in all member routers in the Virtual Chassis configuration.

interconnect-device *name* (QFabric systems only) (Optional) Display environmental information about the Routing Engines for the Interconnect device.

lcc *number* —(TX Matrix router and TX Matrix Plus router only) (Optional) Line-card chassis number.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local (MX Series routers only) (Optional) Display environmental information about the Routing Engines in the local Virtual Chassis member.

member *member-id* (MX Series routers only) (Optional) Display environmental information about the Routing Engines in the specified member in the Virtual Chassis configuration. Replace *member-id* with the value of 0 or 1.

satellite [fpc-slot *slot-id* **| device-alias** *alias-name***]** (Junos Fusion only)(Optional) Display environmental information for the specified satellite device in a Junos Fusion, or for all satellite devices in the Junos Fusion if no satellite devices are specified.

scc (TX Matrix router only) (Optional) Display environmental information about the Routing Engine in the TX Matrix router (switch-card chassis).

sfc (TX Matrix Plus router only) (Optional) Display environmental information about the Routing Engine in the TX Matrix Plus router (or switch-fabric chassis).

slot (Optional) Display environmental information about an individual Routing Engine. On M10i, M20, M40e, M120, M160, M320, MX Series, MX104 routers, MX2010

routers, MX2020 routers, MX2008 routers, and T Series routers, replace *slot* with 0 or 1. On M5, M7i, M10, and M40 routers, replace *slot* with 0. On EX3200 and EX4200 standalone switches, replace *slot* with 0. On EX4200 switches in a Virtual Chassis configuration and on EX8208 and EX8216 switches, replace *slot* with 0 or 1. On the QFX3500 and QFX5700, there is only one Routing Engine, so you do not need to specify the slot number. On PTX Series Packet Transport Routers, replace *slot* with 0 or 1.

Required Privilege Level

view

Output Fields

Table 52 on page 909 lists the output fields for the `show chassis environment routing-engine` command. Output fields are listed in the approximate order in which they appear.

Table 52: show chassis environment routing-engine Output Fields

Field Name	Field Description
Routing engine *slot* status	Number of the Routing Engine slot: 0 or 1.
State	Status of the Routing Engine: • Online Primary—Routing Engine is online, operating as Primary. • Online Standby—Routing Engine is online, operating as Standby. • Offline—Routing Engine is offline.
Temperature	Temperature of the air flowing past the Routing Engines
CPU Temperature	(PTX Series and T4000 Core Routers only) Temperature of the air flowing past the Routing Engine CPU.

Sample Output

show chassis environment routing-engine (Nonredundant)

```
user@host> show chassis environment routing-engine
Routing Engine 0 status:
  State                           Online Master
  Temperature                  27 degrees C / 80 degrees
```

show chassis environment routing-engine (Redundant)

```
user@host> show chassis environment routing-engine
Route Engine 0 status:
  State:                       Online Master
  Temperature:              26 degrees C / 78 degrees F
Route Engine 1 status:
  State:                       Online Standby
  Temperature:              26 degrees C / 78 degrees F
```

show chassis enviroenment routing-engine (MX150)

```
user@ host >show chassis environment routing-engine
Routing Engine 0 status:
  State                        Online Master
  CPU Temperature              42 degrees C / 107 degrees F
```

show chassis environment routing-engine (MX104 Router)

```
user@ host >show chassis environment routing-engine
Routing Engine 0 status:
  State                        Online Master
  Temperature                  34 degrees C / 93 degrees F
  CPU Temperature              43 degrees C / 109 degrees F
Routing Engine 1 status:
  State                        Online Standby
```

```
  Temperature                33 degrees C / 91 degrees F
  CPU Temperature            39 degrees C / 102 degrees F
```

show chassis environment routing-engine (MX2010 Router)

```
user@host> show chassis environment routing-engine
Routing Engine 0 status:
  State                      Online Master
  Temperature                37 degrees C / 98 degrees F
  CPU Temperature            37 degrees C / 98 degrees F
Routing Engine 1 status:
  State                      Online Standby
  Temperature                35 degrees C / 95 degrees F
  CPU Temperature            34 degrees C / 93 degrees F
```

show chassis environment routing-engine (MX2020 Router)

```
user@host> show chassis environment routing-engine
Routing Engine 0 status:
  State                      Online Master
  Temperature                35 degrees C / 95 degrees F
  CPU Temperature            34 degrees C / 93 degrees F
Routing Engine 1 status:
  State                      Online Standby
  Temperature                44 degrees C / 111 degrees F
  CPU Temperature            43 degrees C / 109 degrees F
```

show chassis environment routing-engine (MX2008 Router)

```
user@host> show chassis environment routing-engine
Routing Engine 0 status:
  State                      Online Master
  CPU Temperature            75 degrees C / 167 degrees F
Routing Engine 1 status:
  State                      Online Standby
  CPU Temperature            47 degrees C / 116 degrees F
```

show chassis environment routing-engine (TX Matrix Plus Router)

```
user@host> show chassis environment routing-engine
sfc0-re0:
--------------------------------------------------------------------------
Routing Engine 0 status:
  State                       Online Master
  Temperature                 26 degrees C / 78 degrees F
Routing Engine 1 status:
  State                       Online Standby
  Temperature                 28 degrees C / 82 degrees F

lcc0-re0:
--------------------------------------------------------------------------
Routing Engine 0 status:
  State                       Online Master
  Temperature                 30 degrees C / 86 degrees F
Routing Engine 1 status:
  State                       Online Standby
  Temperature                 29 degrees C / 84 degrees F
```

show chassis environment routing-engine (T4000 Core Router)

```
user@host> show chassis environment routing-engine
Routing Engine 0 status:
  State                       Online Master
  Temperature                 33 degrees C / 91 degrees F
  CPU Temperature             50 degrees C / 122 degrees F
Routing Engine 1 status:
  State                       Online Standby
  Temperature                 33 degrees C / 91 degrees F
  CPU Temperature             46 degrees C / 114 degrees F
```

show chassis environment routing-engine (QFX Series and OCX Series)

```
user@switch> show chassis environment routing-engine
Routing Engine 0 status:
  State                       Online Master
  CPU Temperature                42 degrees C / 107 degrees F
```

```
Routing Engine 1 status:
  State                       Online Standby
  CPU Temperature               34 degrees C / 93 degrees F
```

show chassis environment routing-engine interconnect-device (QFabric System)

```
user@switch> show chassis environment routing-engine
interconnect-device interconnect1
routing-engine interconnect-device interconnect1
Routing Engine 0 status:
  State                       Online Standby
  Temperature                 52 degrees C / 125 degrees F
Routing Engine 1 status:
  State                       Online Master
  Temperature                 57 degrees C / 134 degrees F
```

show chassis environment routing-engine (PTX5000 Packet Transport Router)

```
user@switch> show chassis environment routing-engine
Routing Engine 0 status:
  State                       Online Master
  Temperature                 55 degrees C / 131 degrees F
  CPU Temperature             66 degrees C / 150 degrees F
Routing Engine 1 status:
  State                       Online Standby
  Temperature                 52 degrees C / 125 degrees F
  CPU Temperature             64 degrees C / 147 degrees F
```

show chassis environment routing-engine (PTX10008 Router)

```
user@switch> show chassis environment routing-engine
Routing Engine 0 status:
  State                       Online Master
  CPU Temperature             40 degrees C / 104 degrees F
Routing Engine 1 status:
  State                       Online Standby
  CPU Temperature             40 degrees C / 104 degrees F
```

show chassis environment routing-engine (PTX10016 Router)

```
user@switch> show chassis environment routing-engine
Routing Engine 0 status:
  State                       Online Master
  CPU Temperature             33 degrees C / 91 degrees F
Routing Engine 1 status:
  State                       Online Standby
  CPU Temperature             38 degrees C / 100 degrees F
```

show chassis environment routing-engine (ACX5048 and ACX5096 Routers)

```
user@host> show chassis environment routing-engine
Routing Engine 0 status:
  State                       Online Master
  Temperature                 33 degrees C / 91 degrees F
```

show chassis environment routing-engine (ACX500 Routers)

```
user@host> show chassis environment routing-engine
Routing Engine 0 status:
  State                       Online Master
  Temperature                 54 degrees C / 129 degrees F
```

Sample Output

show chassis environment routing-engine (PTX5000 (RE-PTX-X8-64G), MX240 (RE-S-X6-64G), MX480 (RE-S-X6-64G), MX960 (RE-S-X6-64G), MX2010 (RE-MX2K-X8-64G), MX2020 (RE-MX2K-X8-64G)

```
user@switch> show chassis environment routing-engine
Routing Engine 0 status:
  State                       Online Master
  Temperature                 37 degrees C / 98 degrees F
  CPU Temperature             52 degrees C / 125 degrees F
```

```
Routing Engine 1 status:
  State                       Online Standby
  Temperature                 37 degrees C / 98 degrees F
  CPU Temperature             51 degrees C / 123 degrees F
```

show chassis environment routing-engine (MX204 Routers)

```
user@host> show chassis environment routing-engine
Routing Engine 0 status:
  State                       Online Master
```

show chassis environment routing-engine (MX10008 Routers)

```
Routing Engine 0 status:
  State                       Online Master
  CPU Temperature                          41 degrees C / 105 degrees F
Routing Engine 1 status:
  State                       Online Standby
  CPU Temperature                          40 degrees C / 104 degrees F
```

show chassis environment routing-engine (EX9251 Switches)

```
user@switch> show chassis environment routing-engine
Routing Engine 0 status:
  State                       Online Master
```

show chassis environment routing-engine (EX9253 Switches)

```
user@switch> show chassis environment routing-engine
Routing Engine 0 status:
  State                       Online Master
Routing Engine 1 status:
  State                       Present
```

Release Information

Command introduced before Junos OS Release 7.4.

sfc option introduced in Junos OS Release 9.6 for the TX Matrix Plus router.

RELATED DOCUMENTATION

request chassis routing-engine master

show chassis routing-engine | **1550**

show chassis environment scg

IN THIS SECTION

- Syntax | **916**
- Syntax (TX Matrix and TX Matrix Plus Router) | **917**
- Description | **917**
- Options | **917**
- Required Privilege Level | **918**
- Output Fields | **918**
- Sample Output | **919**
- Release Information | **923**

Syntax

```
show chassis environment scg
<slot>
```

Syntax (TX Matrix and TX Matrix Plus Router)

```
show chassis environment scg
<lcc number>
<slot>
```

Description

Display SONET Clock Generator (SCG) environmental information.

Options

none (TX Matrix and TX Matrix Plus routers only) Display environmental information about all SCGs. On a TX Matrix router, display environmental information about all SCGs on the TX Matrix router and its attached T640 routers. On a TX Matrix Plus router, display environmental information about all SCGs on the TX Matrix Plus router and its attached routers.

lcc ***number*** (TX Matrix router and TX Matrix Plus router only) (Optional) Line-card chassis number.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

slot (Optional) Display environmental information about the SCG. Replace ***slot*** with **0** or **1**.

Required Privilege Level

view

Output Fields

Table 53 on page 918 lists the output fields for the `show chassis environment scg` command. Output fields are listed in the approximate order in which they appear.

Table 53: show chassis environment scg Output Fields

Field Name	Field Description
SCG *slot* status	Number of the SCG slot: **0** or **1**.
State	Status of the SCG: • **Online**—SCG is online and running. • **Offline**—SCG is powered down. If two SCGs are installed and online, one is functioning as the primary, and the other is the standby.
Temperature	Temperature of the air flowing past the SCG.
Power	Power on the SCG. The left column displays required power, in volts. The right column displays measured power, in millivolts.
BUS Revision	Revision level of the generic bus device.

Sample Output

show chassis environment scg (T Series Routers)

```
user@host> show chassis environment scg
SCG 0 status:
  State                            Online -  Master clock
  Temperature                  29 degrees C / 84 degrees F
  Power:
    GROUND                        0 mV
    3.3 V                      3297 mV
    5.0 V                      5050 mV
    5.6 V                      5682 mV
    1.8 V bias                 1787 mV
    3.3 V bias                 3277 mV
    5.0 V bias                 4984 mV
    8.0 V bias                 8400 mV
  BUS Revision                   40
SCG 1 status:
  State                            Online - Standby
  Temperature                  28 degrees C / 82 degrees F
  Power:
    GROUND                        0 mV
    3.3 V                      3317 mV
    5.0 V                      5057 mV
    5.6 V                      5689 mV
    1.8 V bias                 1794 mV
    3.3 V bias                 3296 mV
    5.0 V bias                 4991 mV
    8.0 V bias                 8410 mV
    BUS Revision                 40
```

show chassis environment scg (T4000 Core Routers)

```
user@host> show chassis environment scg
SCG 0 status:
  State                        Online -  Master clock
  Temperature                33 degrees C / 91 degrees F
  Power
    GROUND                          0 mV
```

```
    1.8 V bias                1794 mV
    3.3 V                     3310 mV
    3.3 V bias                3299 mV
    5.0 V                     5040 mV
    5.0 V bias                5003 mV
    5.6 V                     5780 mV
    8.0 V bias                7416 mV
  Bus Revision               40
SCG 1 status:
  State                      Online - Standby
  Temperature                33 degrees C / 91 degrees F
  Power
    GROUND                      0 mV
    1.8 V bias                1794 mV
    3.3 V                     3319 mV
    3.3 V bias                3286 mV
    5.0 V                     5047 mV
    5.0 V bias                5013 mV
    5.6 V                     5758 mV
    8.0 V bias                7347 mV
  Bus Revision               40
```

show chassis environment scg lcc (TX Matrix Router)

```
user@host> show chassis environment scg lcc
0 0
lcc0-re0:
--------------------------------------------------------------------------
SCG 0 status:
  State                         Online -  Master clock
  Temperature                  30 degrees C / 86 degrees F
  Power:
    GROUND                      0 mV
    3.3 V                    3321 mV
    5.0 V                    5062 mV
    5.6 V                    5682 mV
    1.8 V bias               1789 mV
    3.3 V bias               3289 mV
    5.0 V bias               4993 mV
```

```
    8.0 V bias               7807 mV
  BUS Revision                 40
```

show chassis environment scg lcc (TX Matrix Plus Router)

```
user@host> show chassis environment scg lcc
0
lcc0-re0:
--------------------------------------------------------------------------
SCG 0 status:
  State                      Online -  Master clock
  Temperature                42 degrees C / 107 degrees F
  Power
    GROUND                      0 mV
    1.8 V bias               1800 mV
    3.3 V                    3290 mV
    3.3 V bias               3304 mV
    5.0 V                    5042 mV
    5.0 V bias               4979 mV
    5.6 V                    5765 mV
    8.0 V bias               7682 mV
  Bus Revision               40
```

show chassis environment scg (TX Matrix Plus Router)

```
user@host> show chassis environment scg
lcc0-re0:
--------------------------------------------------------------------------
SCG 0 status:
  State                      Online -  Master clock
  Temperature                40 degrees C / 104 degrees F
  Power
    GROUND                      0 mV
    1.8 V bias               1800 mV
    3.3 V                    3291 mV
    3.3 V bias               3304 mV
    5.0 V                    5042 mV
    5.0 V bias               4979 mV
    5.6 V                    5765 mV
    8.0 V bias               7643 mV
```

```
  Bus Revision               40

lcc1-re0:
--------------------------------------------------------------------------
SCG 0 status:
  State                      Online -  Master clock
  Temperature                37 degrees C / 98 degrees F
  Power
    GROUND                      0 mV
    1.8 V bias               1788 mV
    3.3 V                    3305 mV
    3.3 V bias               3284 mV
    5.0 V                    5042 mV
    5.0 V bias               5010 mV
    5.6 V                    5748 mV
    8.0 V bias               7692 mV
  Bus Revision               40

lcc2-re0:
--------------------------------------------------------------------------
SCG 0 status:
  State                      Online -  Master clock
  Temperature                39 degrees C / 102 degrees F
  Power
    GROUND                      0 mV
    1.8 V bias               1785 mV
    3.3 V                    3306 mV
    3.3 V bias               3301 mV
    5.0 V                    5045 mV
    5.0 V bias               4993 mV
    5.6 V                    5765 mV
    8.0 V bias               7838 mV
  Bus Revision               40

lcc3-re0:
--------------------------------------------------------------------------
SCG 0 status:
  State                      Online -  Master clock
  Temperature                39 degrees C / 102 degrees F
  Power
    GROUND                      0 mV
    1.8 V bias               1800 mV
    3.3 V                    3290 mV
```

```
    3.3 V bias                3294 mV
    5.0 V                     5050 mV
    5.0 V bias                4984 mV
    5.6 V                     5780 mV
    8.0 V bias                7716 mV
  Bus Revision               40
```

Release Information

Command introduced before Junos OS Release 7.4.

RELATED DOCUMENTATION

request chassis scg

Configuring the Clock Source

T320 SONET Clock Generator (SCG) Description

show chassis environment sfb

IN THIS SECTION

- Syntax | **924**
- Description | **924**
- Options | **924**
- Required Privilege Level | **924**
- Output Fields | **925**
- Sample Output | **925**
- Release Information | **941**

Syntax

```
show chassis environment sfb
<all-members>
<local>
<member member-id>
<sfb-slot-number>
```

Description

Display chassis environmental information about the Switch Fabric Board (SFB).

Options

none	Display environmental information about all Switch Fabric Boards.
all-members	(Optional) Display chassis environmental information about the SFB in all members of the Virtual Chassis configuration.
local	(Optional) Display chassis environmental information about the SFB in the local member of the Virtual Chassis.
member *member-id*	(Optional) Display chassis environmental information about the SFB in the specified member of the Virtual Chassis. Replace *member-id* with the value 0 or 1.
sfb-slot-number	(Optional) Display environmental information about the specified Switch Fabric Board. For MX2020, MX2010, MX2008 and MX10008 routers, replace *sfb-slot-number* with a value from 0 through 7.

Required Privilege Level

view

Output Fields

Table 54 on page 925 lists the output fields for the `show chassis environment sfb` command. Output fields are listed in the approximate order in which they appear.

Table 54: show chassis environment sfb Output Fields

Field Name	Field Description
`State`	Status of the SFB. • `Online`—The SFB is online and running. • `Offline`— SFB is powered down.
`Temperature`	Temperature in Celsius (C) and Fahrenheit (F) of the air flowing past the SFB. • `Intake`—Measures the temperature of the air intake. • `Exhaust`—Measures the temperature of the hot air exhaust. • `SFB-XF2`—Measures the temperature of the hot air exhaust for the XF2 fabric plane. • `SFB-XF1`—Measures the temperature of the hot air exhaust for the XF1 fabric plane. • `SFB-XF0`—Measures the temperature of the hot air exhaust for the XF0 fabric plane.
`Power`	Power required and measured on the SFB. The left column displays the required power, in volts. The right column displays the measured power, in millivolts.

Sample Output

show chassis environment sfb (MX2020 Router)

```
user@host> show chassis environment sfb
SFB 0 status:
  State                      Online
  Intake-Zone0 Temperature   51 degrees C / 123 degrees F
  Exhaust-Zone1 Temperature  44 degrees C / 111 degrees F
```

```
    IntakeA-Zone0 Temperature  46 degrees C / 114 degrees F
    IntakeB-Zone1 Temperature  37 degrees C / 98 degrees F
    Exhaust-Zone0 Temperature  48 degrees C / 118 degrees F
    SFB-XF2-Zone1 Temperature  58 degrees C / 136 degrees F
    SFB-XF1-Zone0 Temperature  65 degrees C / 149 degrees F
    SFB-XF0-Zone0 Temperature  64 degrees C / 147 degrees F
    Power
      LTC3880-XF2-1.5v-RAIL     1500 mV
      LTC3880-XF2-1.5v-CH0      1500 mV
      LTC3880-XF2-1.5v-CH1      1500 mV
      LTC3880-XF2-1.0v-RAIL     1029 mV
      LTC3880-XF2-1.0v-CH0      1029 mV
      LTC3880-XF2-1.0v-CH1      1032 mV
      LTC3880-XF1-1.5v-RAIL     1499 mV
      LTC3880-XF1-1.5v-CH0      1499 mV
      LTC3880-XF1-1.5v-CH1      1501 mV
      LTC3880-XF1-1.0v-RAIL     1029 mV
      LTC3880-XF1-1.0v-CH0      1029 mV
      LTC3880-XF1-1.0v-CH1      1033 mV
      LTC3880-XF0-1.5v-RAIL     1500 mV
      LTC3880-XF0-1.5v-CH0      1500 mV
      LTC3880-XF0-1.5v-CH1      1501 mV
      LTC3880-XF0-1.0v-RAIL     1029 mV
      LTC3880-XF0-1.0v-CH0      1029 mV
      LTC3880-XF0-1.0v-CH1      1033 mV
      LTC3880-3.3v-RAIL         3300 mV
      LTC3880-3.3v-CH0          3300 mV
      LTC3880-3.3v-CH1          3299 mV
  SFB 1 status:
    State                     Online
    Intake-Zone0 Temperature   52 degrees C / 125 degrees F
    Exhaust-Zone1 Temperature  44 degrees C / 111 degrees F
    IntakeA-Zone0 Temperature  47 degrees C / 116 degrees F
    IntakeB-Zone1 Temperature  37 degrees C / 98 degrees F
    Exhaust-Zone0 Temperature  47 degrees C / 116 degrees F
    SFB-XF2-Zone1 Temperature  59 degrees C / 138 degrees F
    SFB-XF1-Zone0 Temperature  63 degrees C / 145 degrees F
    SFB-XF0-Zone0 Temperature  65 degrees C / 149 degrees F
    Power
      LTC3880-XF2-1.5v-RAIL     1500 mV
      LTC3880-XF2-1.5v-CH0      1500 mV
      LTC3880-XF2-1.5v-CH1      1501 mV
      LTC3880-XF2-1.0v-RAIL     1030 mV
```

```
    LTC3880-XF2-1.0v-CH0      1030 mV
    LTC3880-XF2-1.0v-CH1      1033 mV
    LTC3880-XF1-1.5v-RAIL     1499 mV
    LTC3880-XF1-1.5v-CH0      1499 mV
    LTC3880-XF1-1.5v-CH1      1500 mV
    LTC3880-XF1-1.0v-RAIL     1029 mV
    LTC3880-XF1-1.0v-CH0      1029 mV
    LTC3880-XF1-1.0v-CH1      1033 mV
    LTC3880-XF0-1.5v-RAIL     1500 mV
    LTC3880-XF0-1.5v-CH0      1500 mV
    LTC3880-XF0-1.5v-CH1      1501 mV
    LTC3880-XF0-1.0v-RAIL     1030 mV
    LTC3880-XF0-1.0v-CH0      1030 mV
    LTC3880-XF0-1.0v-CH1      1033 mV
    LTC3880-3.3v-RAIL         3300 mV
    LTC3880-3.3v-CH0          3300 mV
    LTC3880-3.3v-CH1          3299 mV
SFB 2 status:
  State                     Online
  Intake-Zone0 Temperature  52 degrees C / 125 degrees F
  Exhaust-Zone1 Temperature  44 degrees C / 111 degrees F
  IntakeA-Zone0 Temperature  47 degrees C / 116 degrees F
  IntakeB-Zone1 Temperature  37 degrees C / 98 degrees F
  Exhaust-Zone0 Temperature  49 degrees C / 120 degrees F
  SFB-XF2-Zone1 Temperature  62 degrees C / 143 degrees F
  SFB-XF1-Zone0 Temperature  66 degrees C / 150 degrees F
  SFB-XF0-Zone0 Temperature  66 degrees C / 150 degrees F
  Power
    LTC3880-XF2-1.5v-RAIL     1499 mV
    LTC3880-XF2-1.5v-CH0      1499 mV
    LTC3880-XF2-1.5v-CH1      1500 mV
    LTC3880-XF2-1.0v-RAIL     1030 mV
    LTC3880-XF2-1.0v-CH0      1030 mV
    LTC3880-XF2-1.0v-CH1      1033 mV
    LTC3880-XF1-1.5v-RAIL     1500 mV
    LTC3880-XF1-1.5v-CH0      1500 mV
    LTC3880-XF1-1.5v-CH1      1501 mV
    LTC3880-XF1-1.0v-RAIL     1030 mV
    LTC3880-XF1-1.0v-CH0      1030 mV
    LTC3880-XF1-1.0v-CH1      1033 mV
    LTC3880-XF0-1.5v-RAIL     1499 mV
    LTC3880-XF0-1.5v-CH0      1499 mV
    LTC3880-XF0-1.5v-CH1      1501 mV
```

```
    LTC3880-XF0-1.0v-RAIL     1030 mV
    LTC3880-XF0-1.0v-CH0      1030 mV
    LTC3880-XF0-1.0v-CH1      1033 mV
    LTC3880-3.3v-RAIL         3300 mV
    LTC3880-3.3v-CH0          3300 mV
    LTC3880-3.3v-CH1          3299 mV
SFB 3 status:
  State                       Online
  Intake-Zone0 Temperature    53 degrees C / 127 degrees F
  Exhaust-Zone1 Temperature   44 degrees C / 111 degrees F
  IntakeA-Zone0 Temperature   48 degrees C / 118 degrees F
  IntakeB-Zone1 Temperature   38 degrees C / 100 degrees F
  Exhaust-Zone0 Temperature   49 degrees C / 120 degrees F
  SFB-XF2-Zone1 Temperature   62 degrees C / 143 degrees F
  SFB-XF1-Zone0 Temperature   65 degrees C / 149 degrees F
  SFB-XF0-Zone0 Temperature   68 degrees C / 154 degrees F
  Power
    LTC3880-XF2-1.5v-RAIL     1500 mV
    LTC3880-XF2-1.5v-CH0      1500 mV
    LTC3880-XF2-1.5v-CH1      1500 mV
    LTC3880-XF2-1.0v-RAIL     1029 mV
    LTC3880-XF2-1.0v-CH0      1029 mV
    LTC3880-XF2-1.0v-CH1      1033 mV
    LTC3880-XF1-1.5v-RAIL     1500 mV
    LTC3880-XF1-1.5v-CH0      1500 mV
    LTC3880-XF1-1.5v-CH1      1501 mV
    LTC3880-XF1-1.0v-RAIL     1030 mV
    LTC3880-XF1-1.0v-CH0      1030 mV
    LTC3880-XF1-1.0v-CH1      1033 mV
    LTC3880-XF0-1.5v-RAIL     1499 mV
    LTC3880-XF0-1.5v-CH0      1499 mV
    LTC3880-XF0-1.5v-CH1      1501 mV
    LTC3880-XF0-1.0v-RAIL     1030 mV
    LTC3880-XF0-1.0v-CH0      1030 mV
    LTC3880-XF0-1.0v-CH1      1034 mV
    LTC3880-3.3v-RAIL         3300 mV
    LTC3880-3.3v-CH0          3300 mV
    LTC3880-3.3v-CH1          3300 mV
SFB 4 status:
  State                       Online
  Intake-Zone0 Temperature    54 degrees C / 129 degrees F
  Exhaust-Zone1 Temperature   46 degrees C / 114 degrees F
  IntakeA-Zone0 Temperature   49 degrees C / 120 degrees F
```

```
    IntakeB-Zone1 Temperature  39 degrees C / 102 degrees F
    Exhaust-Zone0 Temperature  50 degrees C / 122 degrees F
    SFB-XF2-Zone1 Temperature  61 degrees C / 141 degrees F
    SFB-XF1-Zone0 Temperature  64 degrees C / 147 degrees F
    SFB-XF0-Zone0 Temperature  67 degrees C / 152 degrees F
    Power
      LTC3880-XF2-1.5v-RAIL     1500 mV
      LTC3880-XF2-1.5v-CH0      1500 mV
      LTC3880-XF2-1.5v-CH1      1500 mV
      LTC3880-XF2-1.0v-RAIL     1030 mV
      LTC3880-XF2-1.0v-CH0      1030 mV
      LTC3880-XF2-1.0v-CH1      1033 mV
      LTC3880-XF1-1.5v-RAIL     1499 mV
      LTC3880-XF1-1.5v-CH0      1499 mV
      LTC3880-XF1-1.5v-CH1      1501 mV
      LTC3880-XF1-1.0v-RAIL     1030 mV
      LTC3880-XF1-1.0v-CH0      1030 mV
      LTC3880-XF1-1.0v-CH1      1033 mV
      LTC3880-XF0-1.5v-RAIL     1500 mV
      LTC3880-XF0-1.5v-CH0      1500 mV
      LTC3880-XF0-1.5v-CH1      1501 mV
      LTC3880-XF0-1.0v-RAIL     1030 mV
      LTC3880-XF0-1.0v-CH0      1030 mV
      LTC3880-XF0-1.0v-CH1      1033 mV
      LTC3880-3.3v-RAIL         3299 mV
      LTC3880-3.3v-CH0          3299 mV
      LTC3880-3.3v-CH1          3299 mV
  SFB 5 status:
    State                     Online
    Intake-Zone0 Temperature   54 degrees C / 129 degrees F
    Exhaust-Zone1 Temperature  46 degrees C / 114 degrees F
    IntakeA-Zone0 Temperature  49 degrees C / 120 degrees F
    IntakeB-Zone1 Temperature  40 degrees C / 104 degrees F
    Exhaust-Zone0 Temperature  50 degrees C / 122 degrees F
    SFB-XF2-Zone1 Temperature  63 degrees C / 145 degrees F
    SFB-XF1-Zone0 Temperature  65 degrees C / 149 degrees F
    SFB-XF0-Zone0 Temperature  70 degrees C / 158 degrees F
    Power
      LTC3880-XF2-1.5v-RAIL     1500 mV
      LTC3880-XF2-1.5v-CH0      1500 mV
      LTC3880-XF2-1.5v-CH1      1500 mV
      LTC3880-XF2-1.0v-RAIL     1029 mV
      LTC3880-XF2-1.0v-CH0      1029 mV
```

```
    LTC3880-XF2-1.0v-CH1      1033 mV
    LTC3880-XF1-1.5v-RAIL     1499 mV
    LTC3880-XF1-1.5v-CH0      1499 mV
    LTC3880-XF1-1.5v-CH1      1500 mV
    LTC3880-XF1-1.0v-RAIL     1030 mV
    LTC3880-XF1-1.0v-CH0      1030 mV
    LTC3880-XF1-1.0v-CH1      1033 mV
    LTC3880-XF0-1.5v-RAIL     1499 mV
    LTC3880-XF0-1.5v-CH0      1499 mV
    LTC3880-XF0-1.5v-CH1      1501 mV
    LTC3880-XF0-1.0v-RAIL     1029 mV
    LTC3880-XF0-1.0v-CH0      1029 mV
    LTC3880-XF0-1.0v-CH1      1033 mV
    LTC3880-3.3v-RAIL         3299 mV
    LTC3880-3.3v-CH0          3299 mV
    LTC3880-3.3v-CH1          3300 mV
SFB 6 status:
  State                       Online
  Intake-Zone0 Temperature    54 degrees C / 129 degrees F
  Exhaust-Zone1 Temperature   46 degrees C / 114 degrees F
  IntakeA-Zone0 Temperature   48 degrees C / 118 degrees F
  IntakeB-Zone1 Temperature   40 degrees C / 104 degrees F
  Exhaust-Zone0 Temperature   49 degrees C / 120 degrees F
  SFB-XF2-Zone1 Temperature   62 degrees C / 143 degrees F
  SFB-XF1-Zone0 Temperature   64 degrees C / 147 degrees F
  SFB-XF0-Zone0 Temperature   68 degrees C / 154 degrees F
  Power
    LTC3880-XF2-1.5v-RAIL     1499 mV
    LTC3880-XF2-1.5v-CH0      1499 mV
    LTC3880-XF2-1.5v-CH1      1501 mV
    LTC3880-XF2-1.0v-RAIL     1030 mV
    LTC3880-XF2-1.0v-CH0      1030 mV
    LTC3880-XF2-1.0v-CH1      1033 mV
    LTC3880-XF1-1.5v-RAIL     1499 mV
    LTC3880-XF1-1.5v-CH0      1499 mV
    LTC3880-XF1-1.5v-CH1      1500 mV
    LTC3880-XF1-1.0v-RAIL     1029 mV
    LTC3880-XF1-1.0v-CH0      1029 mV
    LTC3880-XF1-1.0v-CH1      1033 mV
    LTC3880-XF0-1.5v-RAIL     1499 mV
    LTC3880-XF0-1.5v-CH0      1499 mV
    LTC3880-XF0-1.5v-CH1      1501 mV
    LTC3880-XF0-1.0v-RAIL     1029 mV
```

```
    LTC3880-XF0-1.0v-CH0      1029 mV
    LTC3880-XF0-1.0v-CH1      1033 mV
    LTC3880-3.3v-RAIL         3300 mV
    LTC3880-3.3v-CH0          3300 mV
    LTC3880-3.3v-CH1          3300 mV
SFB 7 status:
  State                      Online
  Intake-Zone0 Temperature   53 degrees C / 127 degrees F
  Exhaust-Zone1 Temperature  46 degrees C / 114 degrees F
  IntakeA-Zone0 Temperature  49 degrees C / 120 degrees F
  IntakeB-Zone1 Temperature  40 degrees C / 104 degrees F
  Exhaust-Zone0 Temperature  50 degrees C / 122 degrees F
  SFB-XF2-Zone1 Temperature  64 degrees C / 147 degrees F
  SFB-XF1-Zone0 Temperature  66 degrees C / 150 degrees F
  SFB-XF0-Zone0 Temperature  69 degrees C / 156 degrees F
  Power
    LTC3880-XF2-1.5v-RAIL     1500 mV
    LTC3880-XF2-1.5v-CH0      1500 mV
    LTC3880-XF2-1.5v-CH1      1501 mV
    LTC3880-XF2-1.0v-RAIL     1029 mV
    LTC3880-XF2-1.0v-CH0      1029 mV
    LTC3880-XF2-1.0v-CH1      1033 mV
    LTC3880-XF1-1.5v-RAIL     1499 mV
    LTC3880-XF1-1.5v-CH0      1499 mV
    LTC3880-XF1-1.5v-CH1      1501 mV
    LTC3880-XF1-1.0v-RAIL     1030 mV
    LTC3880-XF1-1.0v-CH0      1030 mV
    LTC3880-XF1-1.0v-CH1      1033 mV
    LTC3880-XF0-1.5v-RAIL     1499 mV
    LTC3880-XF0-1.5v-CH0      1499 mV
    LTC3880-XF0-1.5v-CH1      1501 mV
    LTC3880-XF0-1.0v-RAIL     1030 mV
    LTC3880-XF0-1.0v-CH0      1030 mV
    LTC3880-XF0-1.0v-CH1      1033 mV
    LTC3880-3.3v-RAIL         3300 mV
    LTC3880-3.3v-CH0          3300 mV
    LTC3880-3.3v-CH1          3300 mV
```

show chassis environment sfb (MX2010 Router)

```
user@host> show chassis environment sfb
SFB 0 status:
  State                       Online
  Intake-Zone0 Temperature   31 degrees C / 87 degrees F
  Exhaust-Zone1 Temperature  22 degrees C / 71 degrees F
  IntakeA-Zone0 Temperature  21 degrees C / 69 degrees F
  IntakeB-Zone1 Temperature  16 degrees C / 60 degrees F
  Exhaust-Zone0 Temperature  23 degrees C / 73 degrees F
  SFB-XF2-Zone1 Temperature  30 degrees C / 86 degrees F
  SFB-XF1-Zone0 Temperature  28 degrees C / 82 degrees F
  SFB-XF0-Zone0 Temperature  38 degrees C / 100 degrees F
  Power
    LTC3880-XF2-1.5v-RAIL     1500 mV
    LTC3880-XF2-1.5v-CH0      1500 mV
    LTC3880-XF2-1.5v-CH1      1500 mV
    LTC3880-XF2-1.0v-RAIL      949 mV
    LTC3880-XF2-1.0v-CH0       949 mV
    LTC3880-XF2-1.0v-CH1       951 mV
    LTC3880-XF1-1.5v-RAIL     1499 mV
    LTC3880-XF1-1.5v-CH0      1499 mV
    LTC3880-XF1-1.5v-CH1      1500 mV
    LTC3880-XF1-1.0v-RAIL      949 mV
    LTC3880-XF1-1.0v-CH0       949 mV
    LTC3880-XF1-1.0v-CH1       951 mV
    LTC3880-XF0-1.5v-RAIL     1499 mV
    LTC3880-XF0-1.5v-CH0      1499 mV
    LTC3880-XF0-1.5v-CH1      1500 mV
    LTC3880-XF0-1.0v-RAIL     1029 mV
    LTC3880-XF0-1.0v-CH0      1029 mV
    LTC3880-XF0-1.0v-CH1      1032 mV
    LTC3880-3.3v-RAIL         3300 mV
    LTC3880-3.3v-CH0          3300 mV
    LTC3880-3.3v-CH1          3299 mV
SFB 1 status:
  State                       Online
  Intake-Zone0 Temperature   32 degrees C / 89 degrees F
  Exhaust-Zone1 Temperature  20 degrees C / 68 degrees F
  IntakeA-Zone0 Temperature  25 degrees C / 77 degrees F
  IntakeB-Zone1 Temperature  15 degrees C / 59 degrees F
  Exhaust-Zone0 Temperature  24 degrees C / 75 degrees F
```

```
    SFB-XF2-Zone1 Temperature  31 degrees C / 87 degrees F
    SFB-XF1-Zone0 Temperature  31 degrees C / 87 degrees F
    SFB-XF0-Zone0 Temperature  37 degrees C / 98 degrees F
    Power
      LTC3880-XF2-1.5v-RAIL     1499 mV
      LTC3880-XF2-1.5v-CH0      1499 mV
      LTC3880-XF2-1.5v-CH1      1500 mV
      LTC3880-XF2-1.0v-RAIL     1029 mV
      LTC3880-XF2-1.0v-CH0      1029 mV
      LTC3880-XF2-1.0v-CH1      1031 mV
      LTC3880-XF1-1.5v-RAIL     1499 mV
      LTC3880-XF1-1.5v-CH0      1499 mV
      LTC3880-XF1-1.5v-CH1      1500 mV
      LTC3880-XF1-1.0v-RAIL     1029 mV
      LTC3880-XF1-1.0v-CH0      1029 mV
      LTC3880-XF1-1.0v-CH1      1031 mV
      LTC3880-XF0-1.5v-RAIL     1500 mV
  LTC3880-XF0-1.5v-CH0      1500 mV
      LTC3880-XF0-1.5v-CH1      1500 mV
      LTC3880-XF0-1.0v-RAIL     1029 mV
      LTC3880-XF0-1.0v-CH0      1029 mV
      LTC3880-XF0-1.0v-CH1      1032 mV
      LTC3880-3.3v-RAIL         3299 mV
      LTC3880-3.3v-CH0          3299 mV
      LTC3880-3.3v-CH1          3299 mV
  SFB 2 status:
    State                     Online
    Intake-Zone0 Temperature  26 degrees C / 78 degrees F
    Exhaust-Zone1 Temperature  19 degrees C / 66 degrees F
    IntakeA-Zone0 Temperature  23 degrees C / 73 degrees F
    IntakeB-Zone1 Temperature  15 degrees C / 59 degrees F
    Exhaust-Zone0 Temperature  21 degrees C / 69 degrees F
    SFB-XF2-Zone1 Temperature  29 degrees C / 84 degrees F
    SFB-XF1-Zone0 Temperature  26 degrees C / 78 degrees F
    SFB-XF0-Zone0 Temperature  31 degrees C / 87 degrees F
    Power
      LTC3880-XF2-1.5v-RAIL     1500 mV
      LTC3880-XF2-1.5v-CH0      1500 mV
      LTC3880-XF2-1.5v-CH1      1500 mV
      LTC3880-XF2-1.0v-RAIL     1029 mV
      LTC3880-XF2-1.0v-CH0      1029 mV
      LTC3880-XF2-1.0v-CH1      1031 mV
      LTC3880-XF1-1.5v-RAIL     1499 mV
```

```
    LTC3880-XF1-1.5v-CH0      1499 mV
    LTC3880-XF1-1.5v-CH1      1500 mV
    LTC3880-XF1-1.0v-RAIL     1030 mV
    LTC3880-XF1-1.0v-CH0      1030 mV
    LTC3880-XF1-1.0v-CH1      1031 mV
    LTC3880-XF0-1.5v-RAIL     1499 mV
    LTC3880-XF0-1.5v-CH0      1499 mV
    LTC3880-XF0-1.5v-CH1      1500 mV
    LTC3880-XF0-1.0v-RAIL     1029 mV
    LTC3880-XF0-1.0v-CH0      1029 mV
    LTC3880-XF0-1.0v-CH1      1032 mV
    LTC3880-3.3v-RAIL         3300 mV
    LTC3880-3.3v-CH0          3300 mV
    LTC3880-3.3v-CH1          3300 mV
SFB 3 status:
  State                     Offline
  Reason                        No power
SFB 4 status:
  State                     Online
  Intake-Zone0 Temperature   33 degrees C / 91 degrees F
  Exhaust-Zone1 Temperature  21 degrees C / 69 degrees F
  IntakeA-Zone0 Temperature  24 degrees C / 75 degrees F
  IntakeB-Zone1 Temperature  17 degrees C / 62 degrees F
  Exhaust-Zone0 Temperature  24 degrees C / 75 degrees F
  SFB-XF2-Zone1 Temperature  32 degrees C / 89 degrees F
  SFB-XF1-Zone0 Temperature  32 degrees C / 89 degrees F
  SFB-XF0-Zone0 Temperature  37 degrees C / 98 degrees F
  Power
    LTC3880-XF2-1.5v-RAIL     1499 mV
    LTC3880-XF2-1.5v-CH0      1499 mV
 LTC3880-XF2-1.5v-CH1      1500 mV
    LTC3880-XF2-1.0v-RAIL      949 mV
    LTC3880-XF2-1.0v-CH0       949 mV
    LTC3880-XF2-1.0v-CH1       952 mV
    LTC3880-XF1-1.5v-RAIL     1500 mV
    LTC3880-XF1-1.5v-CH0      1500 mV
    LTC3880-XF1-1.5v-CH1      1500 mV
    LTC3880-XF1-1.0v-RAIL     1029 mV
    LTC3880-XF1-1.0v-CH0      1029 mV
    LTC3880-XF1-1.0v-CH1      1031 mV
    LTC3880-XF0-1.5v-RAIL     1499 mV
    LTC3880-XF0-1.5v-CH0      1499 mV
    LTC3880-XF0-1.5v-CH1      1500 mV
```

```
    LTC3880-XF0-1.0v-RAIL      949 mV
    LTC3880-XF0-1.0v-CH0       949 mV
    LTC3880-XF0-1.0v-CH1       952 mV
    LTC3880-3.3v-RAIL         3299 mV
    LTC3880-3.3v-CH0          3299 mV
    LTC3880-3.3v-CH1          3299 mV
SFB 5 status:
  State                      Online
  Intake-Zone0 Temperature   27 degrees C / 80 degrees F
  Exhaust-Zone1 Temperature  20 degrees C / 68 degrees F
  IntakeA-Zone0 Temperature  23 degrees C / 73 degrees F
  IntakeB-Zone1 Temperature  15 degrees C / 59 degrees F
  Exhaust-Zone0 Temperature  22 degrees C / 71 degrees F
  SFB-XF2-Zone1 Temperature  27 degrees C / 80 degrees F
  SFB-XF1-Zone0 Temperature  34 degrees C / 93 degrees F
  SFB-XF0-Zone0 Temperature  32 degrees C / 89 degrees F
  Power
    LTC3880-XF2-1.5v-RAIL     1500 mV
    LTC3880-XF2-1.5v-CH0      1500 mV
    LTC3880-XF2-1.5v-CH1      1500 mV
    LTC3880-XF2-1.0v-RAIL      949 mV
    LTC3880-XF2-1.0v-CH0       949 mV
    LTC3880-XF2-1.0v-CH1       951 mV
    LTC3880-XF1-1.5v-RAIL     1499 mV
    LTC3880-XF1-1.5v-CH0      1499 mV
    LTC3880-XF1-1.5v-CH1      1500 mV
    LTC3880-XF1-1.0v-RAIL      949 mV
    LTC3880-XF1-1.0v-CH0       949 mV
    LTC3880-XF1-1.0v-CH1       951 mV
    LTC3880-XF0-1.5v-RAIL     1499 mV
    LTC3880-XF0-1.5v-CH0      1499 mV
    LTC3880-XF0-1.5v-CH1      1500 mV
    LTC3880-XF0-1.0v-RAIL     1029 mV
    LTC3880-XF0-1.0v-CH0      1029 mV
    LTC3880-XF0-1.0v-CH1      1032 mV
    LTC3880-3.3v-RAIL         3299 mV
    LTC3880-3.3v-CH0          3299 mV
    LTC3880-3.3v-CH1          3299 mV
SFB 6 status:
  State                      Online
  Intake-Zone0 Temperature   32 degrees C / 89 degrees F
  Exhaust-Zone1 Temperature  19 degrees C / 66 degrees F
  IntakeA-Zone0 Temperature  24 degrees C / 75 degrees F
```

```
  IntakeB-Zone1 Temperature  15 degrees C / 59 degrees F
   Exhaust-Zone0 Temperature  25 degrees C / 77 degrees F
   SFB-XF2-Zone1 Temperature  29 degrees C / 84 degrees F
   SFB-XF1-Zone0 Temperature  37 degrees C / 98 degrees F
   SFB-XF0-Zone0 Temperature  39 degrees C / 102 degrees F
   Power
     LTC3880-XF2-1.5v-RAIL     1500 mV
     LTC3880-XF2-1.5v-CH0      1500 mV
     LTC3880-XF2-1.5v-CH1      1500 mV
     LTC3880-XF2-1.0v-RAIL     1029 mV
     LTC3880-XF2-1.0v-CH0      1029 mV
     LTC3880-XF2-1.0v-CH1      1031 mV
     LTC3880-XF1-1.5v-RAIL     1499 mV
     LTC3880-XF1-1.5v-CH0      1499 mV
     LTC3880-XF1-1.5v-CH1      1500 mV
     LTC3880-XF1-1.0v-RAIL      949 mV
     LTC3880-XF1-1.0v-CH0       949 mV
     LTC3880-XF1-1.0v-CH1       951 mV
     LTC3880-XF0-1.5v-RAIL     1499 mV
     LTC3880-XF0-1.5v-CH0      1499 mV
     LTC3880-XF0-1.5v-CH1      1500 mV
     LTC3880-XF0-1.0v-RAIL     1029 mV
     LTC3880-XF0-1.0v-CH0      1029 mV
     LTC3880-XF0-1.0v-CH1      1032 mV
     LTC3880-3.3v-RAIL         3300 mV
     LTC3880-3.3v-CH0          3300 mV
     LTC3880-3.3v-CH1          3299 mV
SFB 7 status:
   State                     Online
   Intake-Zone0 Temperature   31 degrees C / 87 degrees F
   Exhaust-Zone1 Temperature  18 degrees C / 64 degrees F
   IntakeA-Zone0 Temperature  20 degrees C / 68 degrees F
   IntakeB-Zone1 Temperature  13 degrees C / 55 degrees F
   Exhaust-Zone0 Temperature  22 degrees C / 71 degrees F
   SFB-XF2-Zone1 Temperature  27 degrees C / 80 degrees F
   SFB-XF1-Zone0 Temperature  26 degrees C / 78 degrees F
   SFB-XF0-Zone0 Temperature  39 degrees C / 102 degrees F
   Power
     LTC3880-XF2-1.5v-RAIL     1499 mV
     LTC3880-XF2-1.5v-CH0      1499 mV
     LTC3880-XF2-1.5v-CH1      1500 mV
     LTC3880-XF2-1.0v-RAIL     1029 mV
     LTC3880-XF2-1.0v-CH0      1029 mV
```

```
    LTC3880-XF2-1.0v-CH1      1031 mV
    LTC3880-XF1-1.5v-RAIL     1499 mV
    LTC3880-XF1-1.5v-CH0      1499 mV
    LTC3880-XF1-1.5v-CH1      1500 mV
    LTC3880-XF1-1.0v-RAIL     1029 mV
    LTC3880-XF1-1.0v-CH0      1029 mV
    LTC3880-XF1-1.0v-CH1      1031 mV
    LTC3880-XF0-1.5v-RAIL     1500 mV
    LTC3880-XF0-1.5v-CH0      1500 mV
    LTC3880-XF0-1.5v-CH1      1500 mV
    LTC3880-XF0-1.0v-RAIL     1029 mV
    LTC3880-XF0-1.0v-CH0      1029 mV
    LTC3880-XF0-1.0v-CH1      1031 mV
    LTC3880-3.3v-RAIL         3300 mV
    LTC3880-3.3v-CH0          3300 mV
    LTC3880-3.3v-CH1          3299 mV
```

show chassis environment sfb (MX2008 Router)

```
user@host> show chassis environment sfb

SFB 0 status:
  State                       Online
  Inlet1 Temperature          26 degrees C / 78 degrees F
  Inlet2 Temperature          27 degrees C / 80 degrees F
  Exhaust1 Temperature        26 degrees C / 78 degrees F
  Exhaust2 Temperature        28 degrees C / 82 degrees F
  SFB2-PF-local Temperature   27 degrees C / 80 degrees F
  SFB2-PF-die Temperature     33 degrees C / 91 degrees F
  Power
    SFB2-PF0-1.0V-PLL           1008 mV
    SFB2-1.0V                    988 mV
    SFB2-10.8V                 10727 mV
    SFB2-1.5V                   1491 mV
    SFB2-PF0-1.8V               1782 mV
    SFB2-2.5V                   2475 mV
    SFB2-Bias-5V                5535 mV
    SFB2-3.3V-Main              3294 mV
    SFB2-1.8V                   1798 mV
    MAX20751-PF0-0.9v            974 mV
```

```
    MAX20751-PF0-1.0v           1020 mV
SFB 1 status:
  State                       Online
  Inlet1 Temperature          26 degrees C / 78 degrees F
  Inlet2 Temperature          29 degrees C / 84 degrees F
  Exhaust1 Temperature        26 degrees C / 78 degrees F
  Exhaust2 Temperature        29 degrees C / 84 degrees F
  SFB2-PF-local Temperature   29 degrees C / 84 degrees F
  SFB2-PF-die Temperature     41 degrees C / 105 degrees F
  Power
    SFB2-PF0-1.0V-PLL           1014 mV
    SFB2-1.0V                    994 mV
    SFB2-10.8V                 10746 mV
    SFB2-1.5V                   1495 mV
    SFB2-PF0-1.8V               1814 mV
    SFB2-2.5V                   2478 mV
    SFB2-Bias-5V                5594 mV
    SFB2-3.3V-Main              3306 mV
    SFB2-1.8V                   1774 mV
    MAX20751-PF0-0.9v            974 mV
    MAX20751-PF0-1.0v           1020 mV
SFB 2 status:
  State                       Online
  Inlet1 Temperature          29 degrees C / 84 degrees F
  Inlet2 Temperature          36 degrees C / 96 degrees F
  Exhaust1 Temperature        27 degrees C / 80 degrees F
  Exhaust2 Temperature        34 degrees C / 93 degrees F
  SFB2-PF-local Temperature   38 degrees C / 100 degrees F
  SFB2-PF-die Temperature     40 degrees C / 104 degrees F
  Power
    SFB2-PF0-1.0V-PLL           1010 mV
    SFB2-1.0V                    994 mV
    SFB2-10.8V                 10805 mV
    SFB2-1.5V                   1495 mV
    SFB2-PF0-1.8V               1804 mV
    SFB2-2.5V                   2475 mV
    SFB2-Bias-5V                5562 mV

    SFB2-3.3V-Main              3302 mV
    SFB2-1.8V                   1788 mV
    MAX20751-PF0-0.9v            974 mV
    MAX20751-PF0-1.0v           1020
```

show chassis environment sfb (MX10008 Router)

```
user@host> show chassis environment sfb
SFB 0 status:
  State                      Online
  Intake-A Temperature                  33 degrees C / 91 degrees F
  Intake-B Temperature                  22 degrees C / 71 degrees F
  Exhaust-A Temperature                 27 degrees C / 80 degrees F
  Exhaust-B Temperature                 32 degrees C / 89 degrees F
  PF0 Temperature                       38 degrees C / 100 degrees F
  PF1 Temperature                       29 degrees C / 84 degrees F
  Power
    PF0 Core 0.9V               925 mV
    PF0 AVDD 1V                 999 mV
    PF1 Core 0.9V               922 mV
    PF1 AVDD 1V                1000 mV
    12V                       12311 mV
SFB 1 status:
  State                      Online
  Intake-A Temperature                  43 degrees C / 109 degrees F
  Intake-B Temperature                  21 degrees C / 69 degrees F
  Exhaust-A Temperature                 25 degrees C / 77 degrees F
  Exhaust-B Temperature                 43 degrees C / 109 degrees F
  PF0 Temperature                       49 degrees C / 120 degrees F
  PF1 Temperature                       29 degrees C / 84 degrees F
  Power
    PF0 Core 0.9V               951 mV
    PF0 AVDD 1V                1000 mV
    PF1 Core 0.9V               924 mV
    PF1 AVDD 1V                1000 mV
    12V                       12311 mV
SFB 2 status:
  State                      Online
  Intake-A Temperature                  39 degrees C / 102 degrees F
  Intake-B Temperature                  21 degrees C / 69 degrees F
  Exhaust-A Temperature                 25 degrees C / 77 degrees F
  Exhaust-B Temperature                 38 degrees C / 100 degrees F
  PF0 Temperature                       44 degrees C / 111 degrees F
  PF1 Temperature                       30 degrees C / 86 degrees F
  Power
    PF0 Core 0.9V               923 mV
    PF0 AVDD 1V                1000 mV
```

```
    PF1 Core 0.9V               925 mV
    PF1 AVDD 1V                 999 mV
    12V                       12364 mV
SFB 3 status:
  State                     Online
  Intake-A Temperature                  37 degrees C / 98 degrees F
  Intake-B Temperature                  21 degrees C / 69 degrees F
  Exhaust-A Temperature                 26 degrees C / 78 degrees F
  Exhaust-B Temperature                 34 degrees C / 93 degrees F
  PF0 Temperature                       41 degrees C / 105 degrees F
  PF1 Temperature                       29 degrees C / 84 degrees F
  Power
    PF0 Core 0.9V               925 mV
    PF0 AVDD 1V                1000 mV
    PF1 Core 0.9V               923 mV
    PF1 AVDD 1V                1000 mV
    12V                       12285 mV
SFB 4 status:
  State                     Online
  Intake-A Temperature                  30 degrees C / 86 degrees F
  Intake-B Temperature                  20 degrees C / 68 degrees F
  Exhaust-A Temperature                 25 degrees C / 77 degrees F
  Exhaust-B Temperature                 31 degrees C / 87 degrees F
  PF0 Temperature                       40 degrees C / 104 degrees F
  PF1 Temperature                       29 degrees C / 84 degrees F
  Power
    PF0 Core 0.9V               951 mV
    PF0 AVDD 1V                1000 mV
    PF1 Core 0.9V               948 mV
    PF1 AVDD 1V                 999 mV
    12V                       12193 mV
SFB 5 status:
  State                     Online
  Intake-A Temperature                  30 degrees C / 86 degrees F
  Intake-B Temperature                  21 degrees C / 69 degrees F
  Exhaust-A Temperature                 26 degrees C / 78 degrees F
  Exhaust-B Temperature                 30 degrees C / 86 degrees F
  PF0 Temperature                       34 degrees C / 93 degrees F
  PF1 Temperature                       33 degrees C / 91 degrees F
  Power
    PF0 Core 0.9V               951 mV
    PF0 AVDD 1V                1000 mV
    PF1 Core 0.9V               948 mV
```

```
    PF1 AVDD 1V                   999 mV
    12V                         12166 mV
```

Release Information

Command introduced in Junos OS Release 12.3 for MX2010 and MX2020 Universal Routing Platforms.

`all-members`, `local`, and `member` *`member-id`* options introduced in Junos OS Release 15.1 for MX2020 and MX2010 routers.

Command introduced in Junos OS Release 18.2 for MX10008 Universal Routing Platforms.

RELATED DOCUMENTATION

request chassis sfb | **455**

show chassis sfb | **1565**

show chassis environment sfm

IN THIS SECTION

- Syntax | **942**
- Description | **942**
- Options | **942**
- Required Privilege Level | **942**
- Output Fields | **942**
- Sample Output | **943**
- Release Information | **946**

Syntax

```
show chassis environment sfm
<slot>
```

Description

(M40e and M160 routers only) Display Switching and Forwarding Module (SFM) environmental information.

Options

none Display environmental information about all SFMs.

slot (Optional) Display environmental information about an individual SFM. Replace ***slot*** with a value from **0** through **3**.

Required Privilege Level

view

Output Fields

Table 55 on page 943 lists the output fields for the `show chassis environment sfm` command. Output fields are listed in the approximate order in which they appear.

Table 55: show chassis environment sfm Output Fields

Field Name	Field Description
SFM *slot* status	SFM slot number: **0** or **1** on an M40e router, or **0**, **1**, **2**, or **3** on an M160 router.
State	Status of the SFM: • **Online**—SFM is online and running. • **Offline**—SFM is powered down. If two SFMs are installed and online, one is functioning as the primary, and the other is marked as the **Standby**.
SPP Temperature	Temperature of the air flowing past the Switch Plane Processor card.
SPR Temperature	Temperature of the air flowing past the Switch Plane Router card.
SPP Power	Information about the voltage supplied to the Switch Plane Processor card. The left column displays the required power, in volts. The right column displays the measured power, in millivolts.
SPR Power	Information about the voltage supplied to the Switch Plane Router. The left column displays the required power, in volts. The right column displays the measured power, in millivolts.
CMB Revision	Revision level of the Chassis Management Bus (CMB) device.

Sample Output

show chassis environment sfm (M40e Router)

```
user@host> show chassis environment sfm
SFM 0 status:
  State                          Online
  SPP temperature              40 degrees C / 104 degrees F
  SPR temperature              44 degrees C / 111 degrees F
```

```
  SPP Power:
    1.5 V                    1501 mV
    2.5 V                    2472 mV
    3.3 V                    3293 mV
    5.0 V                    5028 mV
    5.0 V bias               4964 mV
  SPR Power:
    1.5 V                    1501 mV
    2.5 V                    2483 mV
    3.3 V                    3308 mV
    5.0 V                    5035 mV
    5.0 V bias               4981 mV
    8.0 V bias               8239 mV
  CMB Revision                 12
SFM 1 status:
  State                          Online - Standby
  SPP temperature              43 degrees C / 109 degrees F
  SPR temperature              45 degrees C / 113 degrees F
  SPP Power:
    1.5 V                    1503 mV
    2.5 V                    2483 mV
    3.3 V                    3284 mV
    5.0 V                    5045 mV
    5.0 V bias               4993 mV
  SPR Power:
    1.5 V                    1498 mV
    2.5 V                    2472 mV
    3.3 V                    3284 mV
    5.0 V                    5035 mV
    5.0 V bias               4991 mV
    8.0 V bias               8231 mV
  CMB Revision                 12
```

show chassis environment sfm (M160 Router)

```
user@host> show chassis environment sfm
SFM 0 status:
  State                          Online
  SPP temperature              43 degrees C / 109 degrees F
  SPR temperature              44 degrees C / 111 degrees F
  SPP Power:
```

```
    1.5 V                   1504 mV
    2.5 V                   2474 mV
    3.3 V                   3290 mV
    5.0 V                   5015 mV
    5.0 V bias              4962 mV
  SPR Power:
    1.5 V                   1498 mV
    2.5 V                   2482 mV
    3.3 V                   3299 mV
    5.0 V                   5020 mV
    5.0 V bias              4971 mV
    8.0 V bias              8229 mV
  CMB Revision                12
SFM 1 status:
  State                         Online
  SPP temperature             47 degrees C / 116 degrees F
  SPR temperature             50 degrees C / 122 degrees F
  SPP Power:
    1.5 V                   1499 mV
    2.5 V                   2466 mV
    3.3 V                   3274 mV
    5.0 V                   5025 mV
    5.0 V bias              4984 mV
  SPR Power:
    1.5 V                   1496 mV
    2.5 V                   2470 mV
    3.3 V                   3279 mV
    5.0 V                   5020 mV
    5.0 V bias              4993 mV
    8.0 V bias              8222 mV
  CMB Revision                12
SFM 2 status:
  State                         Online
  SPP temperature             50 degrees C / 122 degrees F
  SPR temperature             52 degrees C / 125 degrees F
  SPP Power:
    1.5 V                   1504 mV
    2.5 V                   2471 mV
    3.3 V                   3294 mV
    5.0 V                   5045 mV
    5.0 V bias              4981 mV
  SPR Power:
    1.5 V                   1496 mV
```

```
    2.5 V                    2470 mV
    3.3 V                    3293 mV
    5.0 V                    5028 mV
    5.0 V bias               4971 mV
    8.0 V bias               8214 mV
  CMB Revision                 12
SFM 3 status:
  State                          Online
  SPP temperature              49 degrees C / 120 degrees F
  SPR temperature              48 degrees C / 118 degrees F
  SPP Power:
    1.5 V                    1505 mV
    2.5 V                    2484 mV
    3.3 V                    3296 mV
    5.0 V                    5040 mV
    5.0 V bias               4984 mV
  SPR Power:
    1.5 V                    1503 mV
    2.5 V                    2488 mV
    3.3 V                    3302 mV
    5.0 V                    5037 mV
    5.0 V bias               4993 mV
    8.0 V bias               8249 mV
  CMB Revision                 12
```

Release Information

Command introduced before Junos OS Release 7.4.

RELATED DOCUMENTATION

request chassis sfm | 458

request chassis sfm master switch

Configuring SFM Redundancy on M40e and M160 Routers

Switching the Global Primary and Backup Roles in a Virtual Chassis Configuration

show chassis environment sib

IN THIS SECTION

- Syntax | 947
- Syntax (TX Matrix router) | 947
- Syntax (TX Matrix Plus Router) | 948
- Description | 948
- Options | 948
- Required Privilege Level | 949
- Output Fields | 949
- Sample Output | 951
- Release Information | 993

Syntax

```
show chassis environment sib
<slot>
```

Syntax (TX Matrix router)

```
show chassis environment sib
<lcc number / scc | slot>
```

Syntax (TX Matrix Plus Router)

```
show chassis environment sib
<sib-slot | lcc number | sfc number | f13 sib-slot | f2s sib-slot/sib-f2s-slot-number>
```

Description

Display Switch Interface Board (SIB) environmental information.

Options

none Display environmental information about all SIBs. On a TX Matrix router, display environmental information about all SIBs on the TX Matrix router and its attached T640 routers. On a TX Matrix Plus router, display environmental information about all SIBs on the TX Matrix Plus router and its attached routers .

f13 *sib-slot* (TX Matrix Plus routers only) (Optional) Display SIB F13 environmental information only. Replace ***sib-slot*** with one of the following values: **0**, **1**, **3**, **4**, **6**, **7**, **8**, **9**, **11**, or **12**. (Slots 2, 5, 10, 13, 14, and 15 are unused).

f2s *sib-slot/sib-f2s-slot-number* (TX Matrix Plus routers only) (Optional) Display SIB F2s environmental information only. Replace *sib-slot* with a value from **0** through **4**, followed by a *sib-f2s-slot-number* value of **0**, **2**, **4** or **6**.

lcc *number* (TX Matrix router, and TX Matrix Plus router only) (Optional) Line-card chassis number.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

scc (TX Matrix routers only) (Optional) Display environmental information about the SIB in the TX Matrix router (switch-card chassis).

sfc (TX Matrix Plus routers only) (Optional) On a TX Matrix Plus router, display environmental information about the SIB in the TX Matrix Plus router (switch-fabric chassis).

sib-slot (Optional) Display environmental information about the specified SIB. For the M320 router, replace ***sib-slot*** with a value from **0** through **3**. For the T640, T1600, T4000, and TX Matrix routers, replace ***sib-slot*** with a value from **0** through **4**. For the TX Matrix Plus router, see f13 *sib-slot* and f2s *sib-slot*/ *sib-f2s-slot-number*. For the T320 router, replace ***sib-slot*** with a value from **0** through **2**. For the PTX5000 Packet Transport Router, replace ***sib-slot*** with a value from **0** through **8**.

Required Privilege Level

view

Output Fields

Table 56 on page 950 lists the output fields for the `show chassis environment sib` command. Output fields are listed in the approximate order in which they appear.

Table 56: show chassis environment sib Output Fields

Field Name	Field Description
SIB slot status	SIB slot number: • **0** through **3** on an M320 router. • **0** or **2** on a T320 router. • **0** through **4** on a T640, T1600, T4000, or TX Matrix router. • **0**, **1**, **3**, **4**, **6**, **7**, **8**, **9**, **11**, or **12** for F13 SIBs on a TX Matrix Plus router. (Slots 2, 5, 10, 13, 14, and 15 are unused). • **0** through **4**, followed by **0**, **2**, **4**, or **6** for F2S SIBs on a TX Matrix Plus router. For example, **SIB F2S 0/4**. • **0** through **8** on a PTX5000 Packet Transport Router.
State	Status of the SIB: • **Online**—SIB is online and running. • **Offline**—SIB is powered down. • **Spare** (T640, T1600, T4000, and TX Matrix routers only)—SIB is redundant and will move to active state if one of the working SIBs fails. Only four of the SIBs are active at any time. The fifth one is marked **Spare**. It is activated if there is a fault on one of the active SIBs. Online standby (TX Matrix Plus router only).
Temperature	Temperature of the air flowing past the SIB. On PTX Series Packet Transport Routers, separate temperatures are displayed for **Intake**, **Exhaust**, and **Junction**.
Power	Information about the voltage supplied to the SIB. The left column displays the required power, in volts. The right column displays the measured power, in millivolts.

Sample Output

show chassis environment sib (M320 Router)

```
user@host> show chassis environment sib
SIB 0 status:
  State                            Online
  Temperature                  34 degrees C / 93 degrees F
  Power:
    GROUND                        0 mV
    1.8 V                      1805 mV
    2.5 V                      2498 mV
    3.3 V                      3306 mV
    1.8 V bias                 1789 mV
    3.3 V bias                 3299 mV
    5.0 V bias                 5003 mV
    8.0 V bias                 7374 mV
SIB 1 status:
  State                            Online
  Temperature                  35 degrees C / 95 degrees F
  Power:
    GROUND                        0 mV
    1.8 V                      1814 mV
    2.5 V                      2477 mV
    3.3 V                      3319 mV
    1.8 V bias                 1792 mV
    3.3 V bias                 3291 mV
    5.0 V bias                 4981 mV
    8.0 V bias                 7335 mV
SIB 2 status:
  State                            Online
  Temperature                  33 degrees C / 91 degrees F
  Power:
    GROUND                        0 mV
    1.8 V                      1811 mV
    2.5 V                      2489 mV
    3.3 V                      3330 mV
    1.8 V bias                 1797 mV
    3.3 V bias                 3304 mV
    5.0 V bias                 5025 mV
    8.0 V bias                 7330 mV
```

```
SIB 3 status:
  State                            Online
  Temperature                   37 degrees C / 98 degrees F
  Power:
    GROUND                         0 mV
    1.8 V                       1798 mV
    2.5 V                       2481 mV
    3.3 V                       3328 mV
    1.8 V bias                  1792 mV
    3.3 V bias                  3313 mV
    5.0 V bias                  5013 mV
    8.0 V bias                  7467 mV
```

show chassis environment sib 1 (T640 Router)

```
user@host> show chassis environment sib 1
SIB 1 status:
  State                            Online
  Temperature                   39 degrees C / 102 degrees F
  Power:
    GROUND                         0 mV
    1.8 V                       1809 mV
    2.5 V                       2478 mV
    3.3 V                       3308 mV
    1.8 V bias                  1794 mV
    3.3 V bias                  3274 mV
    5.0 V bias                  4996 mV
    8.0 V bias                  7247 mV
```

show chassis environment sib 1 (T4000 Router)

```
user@host> show chassis environment sib 1
SIB 1 status:
  State                        Online
  Temperature                  42 degrees C / 107 degrees F
  Power
    8.0 V bias                  8100 mV
    3.3 V bias                  3284 mV
    0.9 V bias                   904 mV
    1.1 V bias                  1090 mV
```

```
    1.5 V bias                1488 mV
    2.5 V bias                2504 mV
    9.0 V                     8940 mV
    3.3 V                     3288 mV
    XF0 1.0 V                  998 mV
    XF0 1.0 V LDO              994 mV
    PCIe SW 1.0 V              990 mV
    XF0 1.8 V                 1788 mV
    XF1 1.0 V                 1002 mV
    XF2 1.0 V                 1002 mV
    XF3 1.0 V                  998 mV
    1.2 V                     1194 mV
    XF1 1.0 V LDO             1000 mV
    XF2 1.0 V LDO              998 mV
    XF3 1.0 V LDO              998 mV
    XF1 1.8 V                 1798 mV
    XF2 1.8 V                 1800 mV
    XF3 1.8 V                 1794 mV
    1.5 V                     1488 mV
    SW 3.3 V                  3320 mV
```

show chassis environment sib scc (TX Matrix Router)

```
user@host> show chassis environment sib scc
scc-re0:
--------------------------------------------------------------------------
SIB 3 status:
  State                          Offline
  Reason                         Offlined by button press
  Temperature                  0 degrees C / 32 degrees F
  Power:
    GROUND                     0 mV
    1.8 V                      0 mV
    2.5 V                      0 mV
    3.3 V                      0 mV
    1.8 V bias                 0 mV
    3.3 V bias                 0 mV
    5.0 V bias                 0 mV
    8.0 V bias                 0 mV
SIB 4 status:
  State                          Online
```

```
  Temperature                  42 degrees C / 107 degrees F
  Temperature (B)              41 degrees C / 105 degrees F
  Power:
    GROUND                      0 mV
    1.8 V                    1787 mV
    2.5 V                    2488 mV
    3.3 V                    3294 mV
    1.8 V bias               1787 mV
    3.3 V bias               3306 mV
    5.0 V bias               5010 mV
    8.0 V bias               7418 mV
  Power (B):
    GROUND                      0 mV
    1.8 V                    1785 mV
    2.5 V                    2485 mV
    3.3 V                    3289 mV
    1.8 V bias               1799 mV
    3.3 V bias               3284 mV
    5.0 V bias               4979 mV
    8.0 V bias               7882 mV
```

show chassis environment sib (TX Matrix Plus Router)

```
user@host> show chassis environment sib
sfc0-re0:
--------------------------------------------------------------------------
SIB F13 0 status:
  State                      Online - Standby
  Temperature                54 degrees C / 129 degrees F
  Temperature (B)            50 degrees C / 122 degrees F
  Power
    1.2 V_0                   1205 mV
    1.2 V_1                   1202 mV
    1.2 V_2                   1205 mV
    1.2 V_3                   1208 mV
    1.5 V_0                   1501 mV
    1.5 V_1                   1508 mV
    1.8 V                     1798 mV
    2.5 V                     2510 mV
    3.3 V                     3312 mV
    9.0 V                     8991 mV
```

```
    9.0 V bias                    0 mV
  Power (B)
    2.5 V                      2510 mV
    3.3 V                      3318 mV
    9.0 V                      9024 mV
SIB F13 1 status:
  State                       Online - Standby
  Temperature                 45 degrees C / 113 degrees F
  Temperature (B)             42 degrees C / 107 degrees F
  Power
    1.2 V_0                    1202 mV
    1.2 V_1                    1198 mV
    1.2 V_2                    1202 mV
    1.2 V_3                    1202 mV
    1.5 V_0                    1498 mV
    1.5 V_1                    1501 mV
    1.8 V                      1811 mV
    2.5 V                      2504 mV
    3.3 V                      3292 mV
    9.0 V                      8991 mV
    9.0 V bias                    0 mV
  Power (B)
    2.5 V                      2507 mV
    3.3 V                      3306 mV
    9.0 V                      8970 mV
SIB F13 3 status:
  State                       Online
  Temperature                 48 degrees C / 118 degrees F
  Temperature (B)             44 degrees C / 111 degrees F
  Power
    1.2 V_0                    1205 mV
    1.2 V_1                    1202 mV
    1.2 V_2                    1202 mV
    1.2 V_3                    1202 mV
    1.5 V_0                    1508 mV
    1.5 V_1                    1504 mV
    1.8 V                      1798 mV
    2.5 V                      2520 mV
    3.3 V                      3300 mV
    9.0 V                      9009 mV
    9.0 V bias                    0 mV
  Power (B)
    2.5 V                      2504 mV
```

```
    3.3 V                     3312 mV
    9.0 V                     9006 mV
SIB F13 4 status:
  State                       Online
  Temperature                 44 degrees C / 111 degrees F
  Temperature (B)             40 degrees C / 104 degrees F
Power
    1.2 V_0                   1205 mV
    1.2 V_1                   1205 mV
    1.2 V_2                   1202 mV
    1.2 V_3                   1205 mV
    1.5 V_0                   1508 mV
    1.5 V_1                   1508 mV
    1.8 V                     1811 mV
    2.5 V                     2510 mV
    3.3 V                     3312 mV
    9.0 V                     8970 mV
    9.0 V bias                   0 mV
  Power (B)
    2.5 V                     2513 mV
    3.3 V                     3318 mV
    9.0 V                     9048 mV
SIB F13 6 status:
  State                       Online
  Temperature                 50 degrees C / 122 degrees F
  Temperature (B)             46 degrees C / 114 degrees F
  Power
    1.2 V_0                   1195 mV
    1.2 V_1                   1205 mV
    1.2 V_2                   1202 mV
    1.2 V_3                   1202 mV
    1.5 V_0                   1495 mV
    1.5 V_1                   1495 mV
    1.8 V                     1801 mV
    2.5 V                     2494 mV
    3.3 V                     3300 mV
    9.0 V                     8991 mV
    9.0 V bias                   0 mV
  Power (B)
    2.5 V                     2500 mV
    3.3 V                     3300 mV
    9.0 V                     9006 mV
SIB F13 7 status:
```

```
    State                       Online
    Temperature                 52 degrees C / 125 degrees F
    Temperature (B)             49 degrees C / 120 degrees F
    Power
      1.2 V_0                    1202 mV
      1.2 V_1                    1202 mV
      1.2 V_2                    1198 mV
      1.2 V_3                    1185 mV
      1.5 V_0                    1501 mV
      1.5 V_1                    1492 mV
      1.8 V                      1795 mV
      2.5 V                      2491 mV
      3.3 V                      3286 mV
      9.0 V                      8892 mV
      9.0 V bias                    0 mV
    Power (B)
      2.5 V                      2507 mV
      3.3 V                      3306 mV
      9.0 V                      8952 mV
  SIB F13 8 status:
    State                       Online
    Temperature                 55 degrees C / 131 degrees F
    Temperature (B)             50 degrees C / 122 degrees F
    Power
      1.2 V_0                    1208 mV
      1.2 V_1                    1205 mV
      1.2 V_2                    1205 mV
      1.2 V_3                    1211 mV
      1.5 V_0                    1514 mV
      1.5 V_1                    1508 mV
      1.8 V                      1807 mV
      2.5 V                      2516 mV
      3.3 V                      3324 mV
      9.0 V                      9027 mV
      9.0 V bias                    0 mV
    Power (B)
      2.5 V                      2520 mV
      3.3 V                      3318 mV
      9.0 V                      9066 mV
  SIB F13 9 status:
    State                       Online
    Temperature                 46 degrees C / 114 degrees F
    Temperature (B)             41 degrees C / 105 degrees F
```

```
  Power
    1.2 V_0                  1208 mV
    1.2 V_1                  1202 mV
    1.2 V_2                  1208 mV
    1.2 V_3                  1202 mV
    1.5 V_0                  1504 mV
    1.5 V_1                  1504 mV
    1.8 V                    1817 mV
    2.5 V                    2516 mV
    3.3 V                    3312 mV
    9.0 V                    9009 mV
    9.0 V bias                  0 mV
  Power (B)
    2.5 V                    2510 mV
    3.3 V                    3312 mV
    9.0 V                    9024 mV
SIB F13 11 status:
  State                     Online
  Temperature               47 degrees C / 116 degrees F
  Temperature (B)           42 degrees C / 107 degrees F
  Power
    1.2 V_0                  1202 mV
    1.2 V_1                  1205 mV
    1.2 V_2                  1202 mV
    1.2 V_3                  1202 mV
    1.5 V_0                  1501 mV
    1.5 V_1                  1501 mV
    1.8 V                    1801 mV
    2.5 V                    2510 mV
    3.3 V                    3312 mV
    9.0 V                    8979 mV
    9.0 V bias                  0 mV
  Power (B)
    2.5 V                    2252 mV
    3.3 V                    5014 mV
    9.0 V                    9954 mV
SIB F13 12 status:
  State                     Online
  Temperature               45 degrees C / 113 degrees F
  Temperature (B)           40 degrees C / 104 degrees F
  Power
    1.2 V_0                  1211 mV
    1.2 V_1                  1208 mV
```

```
    1.2 V_2                    1205 mV
    1.2 V_3                    1205 mV
    1.5 V_0                    1511 mV
    1.5 V_1                    1501 mV
    1.8 V                      1817 mV
    2.5 V                      2504 mV
    3.3 V                      3318 mV
    9.0 V                      9027 mV
    9.0 V bias                    0 mV
 Power (B)
    2.5 V                      2520 mV
    3.3 V                      3338 mV
    9.0 V                      9006 mV
SIB F2S 0/0 status:
  State                       Online - Standby
  Temperature                 40 degrees C / 104 degrees F
  Power
    1.2 V_1                       0 mV
    1.2 V_ASF                  1198 mV
    1.2 V_ASF_B                1198 mV
    1.2 V_ASF_D                1202 mV
    1.5 V                      1498 mV
    1.8 V                      1814 mV
    3.3 V                      3300 mV
    3.3 V bias                 3300 mV
    3.3 V ASF                  3286 mV
    9.0 V                      8250 mV
SIB F2S 0/2 status:
  State                       Online - Standby
  Temperature                 40 degrees C / 104 degrees F
  Power
    1.2 V_1                       0 mV
    1.2 V_ASF                  1198 mV
    1.2 V_ASF_B                1195 mV
    1.2 V_ASF_D                1202 mV
    1.5 V                      1498 mV
    1.8 V                      1807 mV
    3.3 V                      3300 mV
    3.3 V bias                 3300 mV
    3.3 V ASF                  3286 mV
    9.0 V                      8250 mV
SIB F2S 0/4 status:
  State                       Online - Standby
```

```
  Temperature                40 degrees C / 104 degrees F
  Power
    1.2 V_1                     0 mV
    1.2 V_ASF                1202 mV
    1.2 V_ASF_B              1198 mV
    1.2 V_ASF_D              1202 mV
    1.5 V                    1504 mV
    1.8 V                    1817 mV
    3.3 V                    3300 mV
    3.3 V bias               3300 mV
    3.3 V ASF                3306 mV
    9.0 V                    8250 mV
SIB F2S 0/6 status:
  State                      Online - Standby
  Temperature                39 degrees C / 102 degrees F
  Power
    1.2 V_1                     0 mV
    1.2 V_ASF                1202 mV
    1.2 V_ASF_B              1198 mV
    1.2 V_ASF_D              1202 mV
    1.5 V                    1495 mV
    1.8 V                    1814 mV
    3.3 V                    3300 mV
    3.3 V bias               3300 mV
    3.3 V ASF                3280 mV
    9.0 V                    8250 mV
SIB F2S 1/0 status:
  State                      Online
  Temperature                39 degrees C / 102 degrees F
  Power
    1.2 V_1                     0 mV
    1.2 V_ASF                1195 mV
    1.2 V_ASF_B              1192 mV
    1.2 V_ASF_D              1195 mV
    1.5 V                    1488 mV
    1.8 V                    1798 mV
    3.3 V                    3300 mV
    3.3 V bias               3300 mV
    3.3 V ASF                3280 mV
    9.0 V                    8250 mV
SIB F2S 1/2 status:
  State                      Online
  Temperature                39 degrees C / 102 degrees F
```

```
  Power
    1.2 V_1                        0 mV
    1.2 V_ASF                   1205 mV
    1.2 V_ASF_B                 1202 mV
    1.2 V_ASF_D                 1205 mV
    1.5 V                       1501 mV
    1.8 V                       1820 mV
    3.3 V                       3300 mV
    3.3 V bias                  3300 mV
    3.3 V ASF                   3306 mV
    9.0 V                       8250 mV
SIB F2S 1/4 status:
  State                         Online
  Temperature                   39 degrees C / 102 degrees F
  Power
    1.2 V_1                        0 mV
    1.2 V_ASF                   1198 mV
    1.2 V_ASF_B                 1195 mV
    1.2 V_ASF_D                 1195 mV
    1.5 V                       1498 mV
    1.8 V                       1811 mV
    3.3 V                       3300 mV
    3.3 V bias                  3300 mV
    3.3 V ASF                   3300 mV
    9.0 V                       8250 mV
SIB F2S 1/6 status:
  State                         Online
  Temperature                   39 degrees C / 102 degrees F
  Power
    1.2 V_1                        0 mV
    1.2 V_ASF                   1195 mV
    1.2 V_ASF_B                 1195 mV
    1.2 V_ASF_D                 1198 mV
    1.5 V                       1498 mV
    1.8 V                       1807 mV
    3.3 V                       3306 mV
    3.3 V bias                  3300 mV
    3.3 V ASF                   3292 mV
    9.0 V                       8250 mV
SIB F2S 2/0 status:
  State                         Online
  Temperature                   39 degrees C / 102 degrees F
  Power
```

```
    1.2 V_1                      0 mV
    1.2 V_ASF                 1195 mV
    1.2 V_ASF_B               1195 mV
    1.2 V_ASF_D               1198 mV
    1.5 V                     1498 mV
    1.8 V                     1804 mV
    3.3 V                     3300 mV
    3.3 V bias                3300 mV
    3.3 V ASF                 3286 mV
    9.0 V                     8250 mV
SIB F2S 2/2 status:
  State                      Online
Temperature                38 degrees C / 100 degrees F
  Power
    1.2 V_1                      0 mV
    1.2 V_ASF                 1195 mV
    1.2 V_ASF_B               1195 mV
    1.2 V_ASF_D               1198 mV
    1.5 V                     1495 mV
    1.8 V                     1807 mV
    3.3 V                     3300 mV
    3.3 V bias                3300 mV
    3.3 V ASF                 3300 mV
    9.0 V                     8250 mV
SIB F2S 2/4 status:
  State                      Online
  Temperature                38 degrees C / 100 degrees F
  Power
    1.2 V_1                      0 mV
    1.2 V_ASF                 1198 mV
    1.2 V_ASF_B               1195 mV
    1.2 V_ASF_D               1198 mV
    1.5 V                     1501 mV
    1.8 V                     1804 mV
    3.3 V                     3286 mV
    3.3 V bias                3292 mV
    3.3 V ASF                 3300 mV
    9.0 V                     8230 mV
SIB F2S 2/6 status:
  State                      Online
  Temperature                38 degrees C / 100 degrees F
  Power
    1.2 V_1                      0 mV
```

```
    1.2 V_ASF                1202 mV
    1.2 V_ASF_B              1198 mV
    1.2 V_ASF_D              1202 mV
    1.5 V                    1501 mV
    1.8 V                    1817 mV
    3.3 V                    3300 mV
    3.3 V bias               3300 mV
    3.3 V ASF                3318 mV
    9.0 V                    8250 mV
SIB F2S 3/0 status:
  State                      Online
  Temperature                38 degrees C / 100 degrees F
  Power
    1.2 V_1                     0 mV
    1.2 V_ASF                1195 mV
    1.2 V_ASF_B              1195 mV
    1.2 V_ASF_D              1198 mV
    1.5 V                    1501 mV
    1.8 V                    1814 mV
    3.3 V                    3300 mV
    3.3 V bias               3300 mV
    3.3 V ASF                3274 mV
    9.0 V                    8250 mV
SIB F2S 3/2 status:
  State                      Online
  Temperature                37 degrees C / 98 degrees F
  Power
    1.2 V_1                     0 mV
    1.2 V_ASF                1202 mV
    1.2 V_ASF_B              1195 mV
    1.2 V_ASF_D              1195 mV
    1.5 V                    1495 mV
    1.8 V                    1804 mV
    3.3 V                    3300 mV
    3.3 V bias               3300 mV
    3.3 V ASF                3286 mV
    9.0 V                    8250 mV
SIB F2S 3/4 status:
  State                      Online
  Temperature                37 degrees C / 98 degrees F
  Power
    1.2 V_1                     0 mV
    1.2 V_ASF                1205 mV
```

```
    1.2 V_ASF_B               1198 mV
    1.2 V_ASF_D               1202 mV
    1.5 V                     1501 mV
    1.8 V                     1811 mV
    3.3 V                     3300 mV
    3.3 V bias                3300 mV
    3.3 V ASF                 3318 mV
    9.0 V                     8250 mV
SIB F2S 3/6 status:
  State                     Online
  Temperature               37 degrees C / 98 degrees F
  Power
    1.2 V_1                    0 mV
    1.2 V_ASF                 1205 mV
    1.2 V_ASF_B               1202 mV
    1.2 V_ASF_D               1202 mV
    1.5 V                     1511 mV
    1.8 V                     1820 mV
    3.3 V                     3306 mV
    3.3 V bias                3306 mV
    3.3 V ASF                 3318 mV
    9.0 V                     8265 mV
SIB F2S 4/0 status:
  State                     Online
  Temperature               36 degrees C / 96 degrees F
  Power
    1.2 V_1                    0 mV
    1.2 V_ASF                 1198 mV
    1.2 V_ASF_B               1198 mV
    1.2 V_ASF_D               1198 mV
    1.5 V                     1501 mV
    1.8 V                     1814 mV
    3.3 V                     3292 mV
    3.3 V bias                3292 mV
    3.3 V ASF                 3312 mV
    9.0 V                     8230 mV
SIB F2S 4/2 status:
  State                     Online
  Temperature               37 degrees C / 98 degrees F
  Power
    1.2 V_1                    0 mV
    1.2 V_ASF                 1198 mV
    1.2 V_ASF_B               1192 mV
```

```
    1.2 V_ASF_D               1195 mV
    1.5 V                     1495 mV
    1.8 V                     1807 mV
    3.3 V                     3300 mV
    3.3 V bias                3300 mV
    3.3 V ASF                 3300 mV
    9.0 V                     8250 mV
SIB F2S 4/4 status:
  State                     Online
  Temperature               36 degrees C / 96 degrees F
  Power
    1.2 V_1                    0 mV
    1.2 V_ASF                 1202 mV
    1.2 V_ASF_B               1195 mV
    1.2 V_ASF_D               1202 mV
   1.5 V                     1501 mV
    1.8 V                     1814 mV
    3.3 V                     3300 mV
    3.3 V bias                3300 mV
    3.3 V ASF                 3312 mV
    9.0 V                     8250 mV
SIB F2S 4/6 status:
  State                     Online
  Temperature               36 degrees C / 96 degrees F
  Power
    1.2 V_1                    0 mV
    1.2 V_ASF                 1198 mV
    1.2 V_ASF_B               1195 mV
    1.2 V_ASF_D               1198 mV
    1.5 V                     1498 mV
    1.8 V                     1820 mV
    3.3 V                     3292 mV
    3.3 V bias                3292 mV
    3.3 V ASF                 3286 mV
    9.0 V                     8230 mV

lcc0-re0:
--------------------------------------------------------------------------
SIB 0 status:
  State                     Online - Standby
  Temperature               49 degrees C / 120 degrees F
  Temperature (B)           42 degrees C / 107 degrees F
  Power
```

```
    1.2 V                     1204 mV
    1.5 V                     1484 mV
    2.5 V                     2500 mV
    3.3 V                     3312 mV
    3.3 V bias                3312 mV
    5.0 V bias                4956 mV
    8.0 V bias                7740 mV
    9.0 V                     8880 mV
  Power (B)
    1.2 V                     1206 mV
    2.5 V                     2500 mV
    3.3 V                     3316 mV
    9.0 V                     8988 mV
SIB 1 status:
  State                      Online
  Temperature                49 degrees C / 120 degrees F
  Temperature (B)            42 degrees C / 107 degrees F
  Power
    1.2 V                     1202 mV
    1.5 V                     1482 mV
    2.5 V                     2500 mV
    3.3 V                     3296 mV
    3.3 V bias                3288 mV
    5.0 V bias                4986 mV
    8.0 V bias                7800 mV
    9.0 V                     8868 mV
  Power (B)
    1.2 V                     1206 mV
    2.5 V                     2512 mV
    3.3 V                     3312 mV
    9.0 V                     8952 mV
SIB 2 status:
  State                      Online
  Temperature                49 degrees C / 120 degrees F
  Temperature (B)            42 degrees C / 107 degrees F
  Power
    1.2 V                     1202 mV
  1.5 V                      1480 mV
    2.5 V                     2476 mV
    3.3 V                     3292 mV
    3.3 V bias                3308 mV
    5.0 V bias                5010 mV
    8.0 V bias                7800 mV
```

```
    9.0 V                      8880 mV
  Power (B)
    1.2 V                      1204 mV
    2.5 V                      2516 mV
    3.3 V                      3308 mV
    9.0 V                      8988 mV
SIB 3 status:
  State                       Online
  Temperature                 48 degrees C / 118 degrees F
  Temperature (B)             42 degrees C / 107 degrees F
  Power
    1.2 V                      1204 mV
    1.5 V                      1480 mV
    2.5 V                      2500 mV
    3.3 V                      3292 mV
    3.3 V bias                 3292 mV
    5.0 V bias                 4986 mV
    8.0 V bias                 7812 mV
    9.0 V                      8892 mV
  Power (B)
    1.2 V                      1198 mV
    2.5 V                      2512 mV
    3.3 V                      3308 mV
    9.0 V                      8892 mV
SIB 4 status:
  State                       Online
  Temperature                 48 degrees C / 118 degrees F
  Temperature (B)             42 degrees C / 107 degrees F
  Power
    1.2 V                      1206 mV
    1.5 V                      1482 mV
    2.5 V                      2484 mV
    3.3 V                      3324 mV
    3.3 V bias                 3340 mV
    5.0 V bias                 4980 mV
    8.0 V bias                 7764 mV
    9.0 V                      8784 mV
  Power (B)
    1.2 V                      1202 mV
    2.5 V                      2504 mV
    3.3 V                      3308 mV
    9.0 V                      8820 mV
lcc1-re0:
```

```
--------------------------------------------------------------------------
SIB 0 status:
  State                       Online - Standby
  Temperature                 49 degrees C / 120 degrees F
  Temperature (B)             43 degrees C / 109 degrees F
  Power
    1.2 V                      1206 mV
    1.5 V                      1506 mV
    2.5 V                      2496 mV
    3.3 V                      3308 mV
    3.3 V bias                 3296 mV
    5.0 V bias                 4974 mV
    8.0 V bias                 7884 mV
    9.0 V                      8820 mV
  Power (B)
    1.2 V                      1200 mV
    2.5 V                      2508 mV
    3.3 V                      3292 mV
    9.0 V                      8892 mV
...
```

show chassis environment sib sfc (TX Matrix Plus Router)

```
user@host> show chassis environment sib sfc
sfc0-re0:
--------------------------------------------------------------------------
SIB F13 0 status:
  State                       Online - Standby
  Temperature                 54 degrees C / 129 degrees F
  Temperature (B)             50 degrees C / 122 degrees F
  Power
    1.2 V_0                    1205 mV
    1.2 V_1                    1205 mV
    1.2 V_2                    1208 mV
    1.2 V_3                    1208 mV
    1.5 V_0                    1501 mV
    1.5 V_1                    1508 mV
    1.8 V                      1804 mV
    2.5 V                      2504 mV
    3.3 V                      3312 mV
    9.0 V                      8991 mV
```

```
    9.0 V bias                  0 mV
  Power (B)
    2.5 V                    2516 mV
    3.3 V                    3318 mV
    9.0 V                    9048 mV
SIB F13 1 status:
  State                      Online - Standby
  Temperature                45 degrees C / 113 degrees F
  Temperature (B)            42 degrees C / 107 degrees F
  Power
    1.2 V_0                  1202 mV
    1.2 V_1                  1205 mV
    1.2 V_2                  1198 mV
    1.2 V_3                  1205 mV
    1.5 V_0                  1498 mV
    1.5 V_1                  1495 mV
    1.8 V                    1801 mV
    2.5 V                    2507 mV
    3.3 V                    3306 mV
    9.0 V                    8970 mV
    9.0 V bias                  0 mV
  Power (B)
    2.5 V                    2507 mV
    3.3 V                    3306 mV
    9.0 V                    8970 mV
SIB F13 3 status:
  State                      Online
  Temperature                48 degrees C / 118 degrees F
  Temperature (B)            43 degrees C / 109 degrees F
  Power
    1.2 V_0                  1208 mV
    1.2 V_1                  1195 mV
    1.2 V_2                  1202 mV
    1.2 V_3                  1198 mV
    1.5 V_0                  1504 mV
    1.5 V_1                  1504 mV
    1.8 V                    1801 mV
    2.5 V                    2510 mV
    3.3 V                    3312 mV
    9.0 V                    8970 mV
    9.0 V bias                  0 mV
  Power (B)
    2.5 V                    2500 mV
```

```
    3.3 V                     3332 mV
    9.0 V                     8970 mV
SIB F13 4 status:
  State                       Online
  Temperature                 44 degrees C / 111 degrees F
  Temperature (B)             40 degrees C / 104 degrees F
  Power
    1.2 V_0                   1205 mV
    1.2 V_1                   1202 mV
    1.2 V_2                   1205 mV
    1.2 V_3                   1202 mV
    1.5 V_0                   1508 mV
    1.5 V_1                   1511 mV
    1.8 V                     1811 mV
    2.5 V                     2510 mV
    3.3 V                     3312 mV
    9.0 V                     8952 mV
    9.0 V bias                   0 mV
  Power (B)
    2.5 V                     2510 mV
    3.3 V                     3306 mV
    9.0 V                     9024 mV
SIB F13 6 status:
  State                       Online
  Temperature                 49 degrees C / 120 degrees F
  Temperature (B)             46 degrees C / 114 degrees F
  Power
    1.2 V_0                   1195 mV
    1.2 V_1                   1198 mV
    1.2 V_2                   1202 mV
    1.2 V_3                   1202 mV
    1.5 V_0                   1501 mV
    1.5 V_1                   1495 mV
    1.8 V                     1801 mV
    2.5 V                     2507 mV
    3.3 V                     3306 mV
    9.0 V                     8979 mV
    9.0 V bias                   0 mV
  Power (B)
    2.5 V                     2497 mV
    3.3 V                     3318 mV
    9.0 V                     9006 mV
SIB F13 7 status:
```

```
    State                      Online
    Temperature                52 degrees C / 125 degrees F
    Temperature (B)            48 degrees C / 118 degrees F
    Power
      1.2 V_0                   1198 mV
      1.2 V_1                   1198 mV
      1.2 V_2                   1202 mV
      1.2 V_3                   1189 mV
      1.5 V_0                   1498 mV
      1.5 V_1                   1498 mV
      1.8 V                     1804 mV
      2.5 V                     2491 mV
      3.3 V                     3292 mV
      9.0 V                     8904 mV
      9.0 V bias                   0 mV
    Power (B)
      2.5 V                     2500 mV
      3.3 V                     3306 mV
      9.0 V                     8952 mV
  SIB F13 8 status:
    State                      Online
    Temperature                54 degrees C / 129 degrees F
    Temperature (B)            49 degrees C / 120 degrees F
    Power
      1.2 V_0                   1211 mV
      1.2 V_1                   1208 mV
      1.2 V_2                   1208 mV
      1.2 V_3                   1211 mV
      1.5 V_0                   1508 mV
      1.5 V_1                   1511 mV
      1.8 V                     1801 mV
      2.5 V                     2513 mV
      3.3 V                     3324 mV
      9.0 V                     9048 mV
      9.0 V bias                   0 mV
    Power (B)
      2.5 V                     2516 mV
      3.3 V                     3318 mV
      9.0 V                     9102 mV
  SIB F13 9 status:
    State                      Online
    Temperature                46 degrees C / 114 degrees F
    Temperature (B)            41 degrees C / 105 degrees F
```

```
  Power
    1.2 V_0                  1205 mV
    1.2 V_1                  1202 mV
    1.2 V_2                  1205 mV
    1.2 V_3                  1198 mV
    1.5 V_0                  1504 mV
    1.5 V_1                  1504 mV
    1.8 V                    1817 mV
    2.5 V                    2507 mV
    3.3 V                    3306 mV
    9.0 V                    8991 mV
    9.0 V bias                  0 mV
  Power (B)
    2.5 V                    2510 mV
    3.3 V                    3332 mV
    9.0 V                    9006 mV
SIB F13 11 status:
  State                     Online
  Temperature               47 degrees C / 116 degrees F
  Temperature (B)           42 degrees C / 107 degrees F
  Power
    1.2 V_0                  1202 mV
    1.2 V_1                  1205 mV
    1.2 V_2                  1202 mV
    1.2 V_3                  1198 mV
    1.5 V_0                  1501 mV
    1.5 V_1                  1504 mV
    1.8 V                    1807 mV
    2.5 V                    2510 mV
    3.3 V                    3306 mV
    9.0 V                    8991 mV
    9.0 V bias                  0 mV
  Power (B)
    2.5 V                    2249 mV
    3.3 V                    4994 mV
    9.0 V                    9936 mV
SIB F13 12 status:
  State                     Online
  Temperature               44 degrees C / 111 degrees F
  Temperature (B)           40 degrees C / 104 degrees F
  Power
    1.2 V_0                  1208 mV
    1.2 V_1                  1202 mV
```

```
    1.2 V_2                    1208 mV
    1.2 V_3                    1205 mV
    1.5 V_0                    1511 mV
    1.5 V_1                    1508 mV
    1.8 V                      1814 mV
    2.5 V                      2507 mV
    3.3 V                      3318 mV
    9.0 V                      9039 mV
    9.0 V bias                    0 mV
  Power (B)
    2.5 V                      2516 mV
    3.3 V                      3344 mV
    9.0 V                      9006 mV
SIB F2S 0/0 status:
  State                      Online - Standby
  Temperature                40 degrees C / 104 degrees F
  Power
    1.2 V_1                       0 mV
    1.2 V_ASF                  1198 mV
    1.2 V_ASF_B                1198 mV
    1.2 V_ASF_D                1202 mV
    1.5 V                      1498 mV
    1.8 V                      1814 mV
    3.3 V                      3300 mV
    3.3 V bias                 3300 mV
    3.3 V ASF                  3286 mV
    9.0 V                      8250 mV
SIB F2S 0/2 status:
  State                      Online - Standby
  Temperature                40 degrees C / 104 degrees F
  Power
    1.2 V_1                       0 mV
    1.2 V_ASF                  1198 mV
    1.2 V_ASF_B                1195 mV
    1.2 V_ASF_D                1202 mV
    1.5 V                      1498 mV
    1.8 V                      1807 mV
    3.3 V                      3300 mV
    3.3 V bias                 3300 mV
    3.3 V ASF                  3292 mV
    9.0 V                      8250 mV
SIB F2S 0/4 status:
  State                      Online - Standby
```

```
  Temperature                40 degrees C / 104 degrees F
  Power
    1.2 V_1                      0 mV
    1.2 V_ASF                 1198 mV
    1.2 V_ASF_B               1195 mV
    1.2 V_ASF_D               1202 mV
    1.5 V                     1501 mV
    1.8 V                     1817 mV
    3.3 V                     3300 mV
    3.3 V bias                3300 mV
    3.3 V ASF                 3306 mV
    9.0 V                     8250 mV
SIB F2S 0/6 status:
  State                      Online - Standby
  Temperature                39 degrees C / 102 degrees F
  Power
    1.2 V_1                      0 mV
    1.2 V_ASF                 1202 mV
    1.2 V_ASF_B               1198 mV
    1.2 V_ASF_D               1198 mV
    1.5 V                     1495 mV
    1.8 V                     1814 mV
    3.3 V                     3300 mV
    3.3 V bias                3300 mV
    3.3 V ASF                 3280 mV
    9.0 V                     8250 mV
SIB F2S 1/0 status:
  State                      Online
  Temperature                39 degrees C / 102 degrees F
  Power
    1.2 V_1                      0 mV
    1.2 V_ASF                 1195 mV
    1.2 V_ASF_B               1192 mV
    1.2 V_ASF_D               1195 mV
    1.5 V                     1492 mV
    1.8 V                     1798 mV
    3.3 V                     3300 mV
    3.3 V bias                3300 mV
    3.3 V ASF                 3280 mV
    9.0 V                     8250 mV
SIB F2S 1/2 status:
  State                      Online
  Temperature                39 degrees C / 102 degrees F
```

```
  Power
    1.2 V_1                      0 mV
    1.2 V_ASF                 1205 mV
    1.2 V_ASF_B               1202 mV
    1.2 V_ASF_D               1205 mV
    1.5 V                     1504 mV
    1.8 V                     1820 mV
    3.3 V                     3300 mV
    3.3 V bias                3300 mV
    3.3 V ASF                 3306 mV
    9.0 V                     8250 mV
SIB F2S 1/4 status:
  State                       Online
  Temperature                 39 degrees C / 102 degrees F
  Power
    1.2 V_1                      0 mV
    1.2 V_ASF                 1202 mV
    1.2 V_ASF_B               1195 mV
    1.2 V_ASF_D               1198 mV
    1.5 V                     1498 mV
    1.8 V                     1811 mV
    3.3 V                     3300 mV
    3.3 V bias                3300 mV
    3.3 V ASF                 3300 mV
    9.0 V                     8250 mV
SIB F2S 1/6 status:
  State                       Online
  Temperature                 39 degrees C / 102 degrees F
  Power
    1.2 V_1                      0 mV
    1.2 V_ASF                 1195 mV
    1.2 V_ASF_B               1192 mV
    1.2 V_ASF_D               1198 mV
    1.5 V                     1498 mV
    1.8 V                     1807 mV
    3.3 V                     3306 mV
    3.3 V bias                3300 mV
    3.3 V ASF                 3292 mV
    9.0 V                     8250 mV
SIB F2S 2/0 status:
  State                       Online
  Temperature                 38 degrees C / 100 degrees F
  Power
```

```
    1.2 V_1                       0 mV
    1.2 V_ASF                  1195 mV
    1.2 V_ASF_B                1195 mV
    1.2 V_ASF_D                1198 mV
    1.5 V                      1498 mV
    1.8 V                      1804 mV
    3.3 V                      3300 mV
    3.3 V bias                 3300 mV
    3.3 V ASF                  3292 mV
    9.0 V                      8250 mV
...
```

show chassis environment sib f13 (TX Matrix Plus Router)

```
user@host> show chassis environment sib f13 0
SIB F13 0 status:
  State                      Online - Standby
  Temperature                54 degrees C / 129 degrees F
  Temperature (B)            50 degrees C / 122 degrees F
  Power
    1.2 V_0                   1202 mV
    1.2 V_1                   1202 mV
    1.2 V_2                   1208 mV
    1.2 V_3                   1208 mV
    1.5 V_0                   1501 mV
    1.5 V_1                   1504 mV
    1.8 V                     1801 mV
    2.5 V                     2504 mV
    3.3 V                     3318 mV
    9.0 V                     8991 mV
    9.0 V bias                   0 mV
  Power (B)
    2.5 V                     2510 mV
    3.3 V                     3318 mV
    9.0 V                     9024 mV
```

show chassis environment sib f2s (TX Matrix Plus Router)

```
user@host> show chassis environment sib f2s 0/2
SIB F2S 0/2 status:
```

```
  State                       Online - Standby
  Temperature                 40 degrees C / 104 degrees F
  Power
    1.2 V_1                      0 mV
    1.2 V_ASF                 1198 mV
    1.2 V_ASF_B               1195 mV
    1.2 V_ASF_D               1202 mV
    1.5 V                     1501 mV
    1.8 V                     1807 mV
    3.3 V                     3300 mV
    3.3 V bias                3300 mV
    3.3 V ASF                 3286 mV
    9.0 V                     8250 mV
```

show chassis environment sib (TX Matrix Plus router with 3D SIBs)

```
user@host> show chassis environment sib
sfc0-re0:
--------------------------------------------------------------------------
SIB F13 0 status:
  State                       Online
  Board Temperature           44 degrees C / 111 degrees F
  XF Junction Temperature     62 degrees C / 143 degrees F
  Power
    XF F1 LCC0 1.0 V            999 mV
    PCIe Switch 1.0 V          1000 mV
    XF F3 LCC0 1.0 V           1000 mV
    XF F1/F3 LCC0 1.2 V        1199 mV
    XF F1 LCC1 1.0 V           1000 mV
    XF F1/F3 LCC1 1.2 V        1199 mV
    XF F3 LCC1 1.0 V           1000 mV
    XF F1/F3 1.5 V             1499 mV
    XF RC LCC0 Base 1.0        1000 mV
    XF RC Base 1.2 V           1200 mV
    XF RC LCC1 Base 1.0        1000 mV
    XF RC Base 1.5 V           1499 mV
    3.3 V Base                 3300 mV
    VSC8248 Base 1.8V          1796 mV
    FPGA Core 0.9 V             899 mV
    2.5 V Base                 2500 mV
    ltc3880-3.3v-bias          3343 mV
```

```
    CXP Base 4.0 V            3999 mV
    XF RC LCC0 Mezz 1.0       1000 mV
    XF RC Mezz 1.2 V          1199 mV
    XF RC LCC1 Mezz 1.0        999 mV
    XF RC Mezz 1.5 V          1499 mV
    3.3 V Mezz                3299 mV
    VSC8248 Mezz 1.8V         1800 mV
    CXP Mezz 4.0 V            3999 mV
 [...Output Truncated...]
SIB F2S 0/0 status:
  State                     Online
  Board Temperature         32 degrees C / 89 degrees F
  XF Junction Temperature   41 degrees C / 105 degrees F
  Power
    XF F2S 1.8 V LD0         1775 mV
    XF F2S 1.0 V AN           992 mV
    XF F2S 1.0 V             1002 mV
    XF F2S 1.5 V             1488 mV
    1.5 V Base               2500 mV
    3.3 V bias               3306 mV
    3.3 V Base               3280 mV
    12.0 V Base             11928 mV
 [...Output Truncated...]
SIB F2S 2/6 status:
  State                     Online
  Board Temperature         28 degrees C / 82 degrees F
  XF Junction Temperature   40 degrees C / 104 degrees F
  Power
    XF F2S 1.8 V LD0         1782 mV
    XF F2S 1.0 V AN           999 mV
    XF F2S 1.0 V             1005 mV
    XF F2S 1.5 V             1498 mV
    1.5 V Base               2510 mV
    3.3 V bias               3292 mV
    3.3 V Base               3292 mV
    12.0 V Base             12024 mV

lcc0-re0:
--------------------------------------------------------------------------
SIB 0 status:
  State                     Online
  Temperature               41 degrees C / 105 degrees F
  Temperature (B)           Absent
```

```
  Max Jn Temperature         48 degrees C / 118 degrees F
  Power
    8.0 V bias                8156 mV
    3.3 V bias                3284 mV
    FPGA 0.9 V bias            908 mV
    FPGA 1.1 V bias           1086 mV
    FPGA 1.5 V bias           1487 mV
    FPGA 2.5 V bias           2525 mV
    3.3 V                     3282 mV
    1.5 V                     1487 mV
    XF HSS 1.5 V              1501 mV
    XF1 1.0 V                 1001 mV
    XF2 1.0 V                 1003 mV
    XF3 1.0 V                  998 mV
    XF1 1.8 V LD0             1782 mV
    XF2 1.8 V LDO             1792 mV
    XF3 1.8 V LDO             1782 mV
    CLK  BUF 2.5 V LDO        2493 mV
    XF1 1.0 V LDO              991 mV
    XF2 1.0 V LDO              991 mV
    XF3 1.0 V LDO              991 mV
    PCIe SW 3.3 V             3274 mV
    PCIe 1.0 V                 996 mV
    RETIMER 1.2 V             1174 mV
    RETIMER IO 1.8 V          1770 mV
                                 0 mV
  Power (B)
    1.2 V                        0 mV
    2.5 V                        0 mV
    3.3 V                        0 mV
    9.0 V                        0 mV
 [...Output Truncated...]
lcc2-re0:
--------------------------------------------------------------------------
SIB 0 status:
  State                      Online
  Temperature                42 degrees C / 107 degrees F
  Temperature (B)            Absent
  Max Jn Temperature         51 degrees C / 123 degrees F
  Power
    8.0 V bias                8146 mV
    3.3 V bias                3277 mV
    FPGA 0.9 V bias            903 mV
```

```
    FPGA 1.1 V bias           1089 mV
    FPGA 1.5 V bias           1479 mV
    FPGA 2.5 V bias           2515 mV
    3.3 V                     3277 mV
    1.5 V                     1482 mV
    XF HSS 1.5 V              1501 mV
    XF1 1.0 V                 1001 mV
    XF2 1.0 V                 1003 mV
    XF3 1.0 V                  998 mV
    XF1 1.8 V LD0             1787 mV
    XF2 1.8 V LDO             1792 mV
    XF3 1.8 V LDO             1792 mV
    CLK  BUF 2.5 V LDO        2481 mV
    XF1 1.0 V LDO              986 mV
    XF2 1.0 V LDO              993 mV
    XF3 1.0 V LDO              991 mV
    PCIe SW 3.3 V             3279 mV
    PCIe 1.0 V                 991 mV
    RETIMER 1.2 V             1179 mV
    RETIMER IO 1.8 V          1772 mV
                                 0 mV
  Power (B)
    1.2 V                        0 mV
    2.5 V                        0 mV
    3.3 V                        0 mV
    9.0 V                        0 mV
 [...Output Truncated...]
```

show chassis environment sib (PTX5000 Packet Transport Router with SIB-I-8S)

```
user@host> show chassis environment sib
SIB 0 status:
  State                      Online
  Exhaust Temperature        31 degrees C / 87 degrees F
  Junction Temperature       40 degrees C / 104 degrees F
  Power
    1.0 V                       1000 mV
    1.5 V                       1499 mV
    1.2 V                       1200 mV
    3.3 V                       3300 mV
    0.9 V                        900 mV
```

```
    2.5 V                       2499 mV
    3.3 V bias                  3313 mV
    12.0 V                     12296 mV
    12.0 V i                    2908 mA
SIB 1 status:
  State                     Online
  Exhaust Temperature       31 degrees C / 87 degrees F
  Junction Temperature      40 degrees C / 104 degrees F
  Power
    1.0 V                       1000 mV
    1.5 V                       1499 mV
    1.2 V                       1200 mV
    3.3 V                       3299 mV
    0.9 V                        900 mV
    2.5 V                       2500 mV
    3.3 V bias                  3313 mV
    12.0 V                     12312 mV
    12.0 V i                    2979 mA
SIB 2 status:
  State                     Online
  Exhaust Temperature       31 degrees C / 87 degrees F
  Junction Temperature      38 degrees C / 100 degrees F
  Power
    1.0 V                        999 mV
    1.5 V                       1499 mV
    1.2 V                       1200 mV
    3.3 V                       3300 mV
    0.9 V                        900 mV
    2.5 V                       2500 mV
    3.3 V bias                  3324 mV
    12.0 V                     12312 mV
    12.0 V i                    2990 mA
SIB 3 status:
  State                     Online
  Exhaust Temperature       31 degrees C / 87 degrees F
  Junction Temperature      39 degrees C / 102 degrees F
  Power
    1.0 V                        999 mV
    1.5 V                       1500 mV
    1.2 V                       1200 mV
    3.3 V                       3300 mV
    0.9 V                        900 mV
    2.5 V                       2499 mV
```

```
    3.3 V bias                 3307 mV
    12.0 V                    12296 mV
    12.0 V i                   3144 mA
SIB 4 status:
  State                     Online
  Exhaust Temperature       31 degrees C / 87 degrees F
  Junction Temperature      38 degrees C / 100 degrees F
  Power
    1.0 V                      1000 mV
    1.5 V                      1500 mV
    1.2 V                      1200 mV
    3.3 V                      3300 mV
    0.9 V                       899 mV
    2.5 V                      2499 mV
    3.3 V bias                 3341 mV
    12.0 V                    12328 mV
    12.0 V i                   2836 mA
SIB 5 status:
  State                     Online
  Exhaust Temperature       31 degrees C / 87 degrees F
  Junction Temperature      38 degrees C / 100 degrees F
  Power
    1.0 V                      1000 mV
    1.5 V                      1499 mV
    1.2 V                      1199 mV
    3.3 V                      3299 mV
    0.9 V                       900 mV
    2.5 V                      2499 mV
    3.3 V bias                 3327 mV
    12.0 V                    12296 mV
    12.0 V i                   2919 mA
SIB 6 status:
  State                     Online
  Exhaust Temperature       31 degrees C / 87 degrees F
  Junction Temperature      38 degrees C / 100 degrees F
  Power
    1.0 V                      1000 mV
    1.5 V                      1500 mV
    1.2 V                      1200 mV
    3.3 V                      3299 mV
    0.9 V                       899 mV
    2.5 V                      2500 mV
    3.3 V bias                 3294 mV
```

```
    12.0 V                     12296 mV
    12.0 V i                    2825 mA
SIB 7 status:
  State                       Online
  Exhaust Temperature         30 degrees C / 86 degrees F
  Junction Temperature        36 degrees C / 96 degrees F
  Power
    1.0 V                      1000 mV
    1.5 V                      1500 mV
    1.2 V                      1200 mV
    3.3 V                      3300 mV
    0.9 V                       899 mV
    2.5 V                      2499 mV
    3.3 V bias                 3316 mV
    12.0 V                     12312 mV
    12.0 V i                    2844 mA
SIB 8 status:
  State                       Online
  Exhaust Temperature         31 degrees C / 87 degrees F
  Junction Temperature        38 degrees C / 100 degrees F
  Power
    1.0 V                      1000 mV
    1.5 V                      1499 mV
    1.2 V                      1199 mV
    3.3 V                      3299 mV
    0.9 V                       900 mV
    2.5 V                      2500 mV
    3.3 V bias                 3333 mV
    12.0 V                     12328 mV
    12.0 V i                    2900 mA
```

show chassis environment sib (PTX5000 Packet Transport Router with SIB-I-8SE)

```
user@host> show chassis environment sib
SIB 0 status:
  State                       Online
  Exhaust Temperature         29 degrees C / 84 degrees F
  Junction Temperature        42 degrees C / 107 degrees F
  Power
    1.0 V                       999 mV
    1.5 V                      1500 mV
```

```
    1.2 V                        1200 mV
    3.3 V                        3300 mV
    0.9 V                         900 mV
    2.5 V                        2500 mV
    3.3 V bias                   3289 mV
    12.0 V                      12484 mV
    2.5 V LDO                    2502 mV
    12.0 V i                     3494 mA
SIB 1 status:
  State                      Online
  Exhaust Temperature        28 degrees C / 82 degrees F
  Junction Temperature       33 degrees C / 91 degrees F
  Power
    1.0 V                        1000 mV
    1.5 V                        1500 mV
    1.2 V                        1199 mV
    3.3 V                        3300 mV
    0.9 V                         899 mV
    2.5 V                        2500 mV
    3.3 V bias                   3313 mV
    12.0 V                      12484 mV
    2.5 V LDO                    2513 mV
    12.0 V i                     3099 mA
SIB 2 status:
  State                      Online
  Exhaust Temperature        29 degrees C / 84 degrees F
  Junction Temperature       39 degrees C / 102 degrees F
  Power
    1.0 V                        1000 mV
    1.5 V                        1500 mV
    1.2 V                        1199 mV
    3.3 V                        3300 mV
    0.9 V                         900 mV
    2.5 V                        2500 mV
    3.3 V bias                   3307 mV
    12.0 V                      12484 mV
    2.5 V LDO                    2512 mV
    12.0 V i                     3336 mA
SIB 3 status:
  State                      Online
  Exhaust Temperature        28 degrees C / 82 degrees F
  Junction Temperature       34 degrees C / 93 degrees F
  Power
```

```
    1.0 V                        999 mV
    1.5 V                       1500 mV
    1.2 V                       1200 mV
    3.3 V                       3300 mV
    0.9 V                        900 mV
    2.5 V                       2500 mV
    3.3 V bias                  3299 mV
    12.0 V                     12500 mV
    2.5 V LDO                   2494 mV
    12.0 V i                    3479 mA
SIB 4 status:
  State                      Online
  Exhaust Temperature        28 degrees C / 82 degrees F
  Junction Temperature       38 degrees C / 100 degrees F
  Power
    1.0 V                       1000 mV
    1.5 V                       1500 mV
    1.2 V                       1199 mV
    3.3 V                       3299 mV
    0.9 V                        900 mV
    2.5 V                       2499 mV
    3.3 V bias                  3309 mV
    12.0 V                     12484 mV
    2.5 V LDO                   2499 mV
    12.0 V i                    3159 mA
SIB 5 status:
  State                      Online
  Exhaust Temperature        27 degrees C / 80 degrees F
  Junction Temperature       33 degrees C / 91 degrees F
  Power
    1.0 V                       1000 mV
    1.5 V                       1500 mV
    1.2 V                       1200 mV
    3.3 V                       3299 mV
    0.9 V                        900 mV
    2.5 V                       2499 mV
    3.3 V bias                  3308 mV
    12.0 V                     12468 mV
    2.5 V LDO                   2495 mV
    12.0 V i                    3054 mA
SIB 6 status:
  State                      Online
  Exhaust Temperature        28 degrees C / 82 degrees F
```

```
  Junction Temperature       38 degrees C / 100 degrees F
  Power
    1.0 V                       999 mV
    1.5 V                      1500 mV
    1.2 V                      1199 mV
    3.3 V                      3299 mV
    0.9 V                       899 mV
    2.5 V                      2499 mV
    3.3 V bias                 3313 mV
    12.0 V                    12468 mV
    2.5 V LDO                  2510 mV
    12.0 V i                   3122 mA
SIB 7 status:
  State                      Online
  Exhaust Temperature        26 degrees C / 78 degrees F
  Junction Temperature       34 degrees C / 93 degrees F
  Power
    1.0 V                       999 mV
    1.5 V                      1499 mV
    1.2 V                      1199 mV
    3.3 V                      3300 mV
    0.9 V                       900 mV
    2.5 V                      2499 mV
    3.3 V bias                 3278 mV
    12.0 V                    12468 mV
    2.5 V LDO                  2504 mV
    12.0 V i                   3234 mA
SIB 8 status:
  State                      Online
  Exhaust Temperature        26 degrees C / 78 degrees F
  Junction Temperature       34 degrees C / 93 degrees F
  Power
    1.0 V                       999 mV
    1.5 V                      1499 mV
    1.2 V                      1199 mV
    3.3 V                      3300 mV
    0.9 V                       900 mV
    2.5 V                      2499 mV
    3.3 V bias                 3278 mV
    12.0 V                    12468 mV
    2.5 V LDO                  2504 mV
    12.0 V i                   3234 mA
```

show chassis environment sib (PTX10008 Router)

```
user@host> show chassis environment sib
SIB 0 status:
  State                      Online
  SIB 0 Intake-A Temp Sensor 37 degrees C / 98 degrees F
  SIB 0 Intake-B Temp Sensor 31 degrees C / 87 degrees F
  SIB 0 Exhaust-A Temp Sensor34 degrees C / 93 degrees F
  SIB 0 Exhaust-B Temp Sensor38 degrees C / 100 degrees F
  SIB 0 PF0 Temp Sensor      47 degrees C / 116 degrees F
  SIB 0 PF1 Temp Sensor      40 degrees C / 104 degrees F
  Power
         PF0 Core 0.9V               925 mV   28929 mA   26835 mW
         PF0 AVDD 1V                1000 mV   32656 mA   32718 mW
         PF1 Core 0.9V               922 mV   28351 mA   26210 mW
         PF1 AVDD 1V                1000 mV   30890 mA   30937 mW
         12V                       12311 mV   10880 mA  134744 mW
SIB 1 status:
  State                      Online
  SIB 1 Intake-A Temp Sensor 43 degrees C / 109 degrees F
  SIB 1 Intake-B Temp Sensor 35 degrees C / 95 degrees F
  SIB 1 Exhaust-A Temp Sensor37 degrees C / 98 degrees F
  SIB 1 Exhaust-B Temp Sensor45 degrees C / 113 degrees F
  SIB 1 PF0 Temp Sensor      54 degrees C / 129 degrees F
  SIB 1 PF1 Temp Sensor      42 degrees C / 107 degrees F
  Power
         PF0 Core 0.9V               951 mV   30468 mA   29007 mW
         PF0 AVDD 1V                 999 mV   32921 mA   32921 mW
         PF1 Core 0.9V               924 mV   29046 mA   26828 mW
         PF1 AVDD 1V                1000 mV   30796 mA   30796 mW
         12V                       12298 mV   11356 mA  140682 mW
SIB 2 status:
  State                      Online
  SIB 2 Intake-A Temp Sensor 45 degrees C / 113 degrees F
  SIB 2 Intake-B Temp Sensor 36 degrees C / 96 degrees F
  SIB 2 Exhaust-A Temp Sensor38 degrees C / 100 degrees F
  SIB 2 Exhaust-B Temp Sensor46 degrees C / 114 degrees F
  SIB 2 PF0 Temp Sensor      55 degrees C / 131 degrees F
  SIB 2 PF1 Temp Sensor      43 degrees C / 109 degrees F
  Power
         PF0 Core 0.9V               924 mV   28273 mA   26140 mW
         PF0 AVDD 1V                1000 mV   32562 mA   32625 mW
```

```
         PF1 Core 0.9V                925 mV   29351 mA   27265 mW
         PF1 AVDD 1V                  999 mV   31812 mA   31859 mW
         12V                        12351 mV   11010 mA  137481 mW
SIB 3 status:
  State                      Online
  SIB 3 Intake-A Temp Sensor 44 degrees C / 111 degrees F
  SIB 3 Intake-B Temp Sensor 36 degrees C / 96 degrees F
  SIB 3 Exhaust-A Temp Sensor37 degrees C / 98 degrees F
  SIB 3 Exhaust-B Temp Sensor45 degrees C / 113 degrees F
  SIB 3 PF0 Temp Sensor      54 degrees C / 129 degrees F
  SIB 3 PF1 Temp Sensor      43 degrees C / 109 degrees F
  Power
         PF0 Core 0.9V                924 mV   28820 mA   26695 mW
         PF0 AVDD 1V                  999 mV   32265 mA   32281 mW
         PF1 Core 0.9V                923 mV   28933 mA   26757 mW
         PF1 AVDD 1V                  999 mV   31281 mA   31265 mW
         12V                        12285 mV   11096 mA  137296 mW
SIB 4 status:
  State                      Online
  SIB 4 Intake-A Temp Sensor 45 degrees C / 113 degrees F
  SIB 4 Intake-B Temp Sensor 36 degrees C / 96 degrees F
  SIB 4 Exhaust-A Temp Sensor37 degrees C / 98 degrees F
  SIB 4 Exhaust-B Temp Sensor46 degrees C / 114 degrees F
  SIB 4 PF0 Temp Sensor      54 degrees C / 129 degrees F
  SIB 4 PF1 Temp Sensor      43 degrees C / 109 degrees F
  Power
         PF0 Core 0.9V                950 mV   29757 mA   28281 mW
         PF0 AVDD 1V                  999 mV   32109 mA   32093 mW
         PF1 Core 0.9V                948 mV   29460 mA   27921 mW
         PF1 AVDD 1V                  999 mV   30687 mA   30671 mW
         12V                        12193 mV   11183 mA  137352 mW
SIB 5 status:
  State                      Online
  SIB 5 Intake-A Temp Sensor 38 degrees C / 100 degrees F
  SIB 5 Intake-B Temp Sensor 32 degrees C / 89 degrees F
  SIB 5 Exhaust-A Temp Sensor35 degrees C / 95 degrees F
  SIB 5 Exhaust-B Temp Sensor39 degrees C / 102 degrees F
  SIB 5 PF0 Temp Sensor      45 degrees C / 113 degrees F
  SIB 5 PF1 Temp Sensor      43 degrees C / 109 degrees F
  Power
         PF0 Core 0.9V                951 mV   29546 mA   28156 mW
         PF0 AVDD 1V                  999 mV   31468 mA   31468 mW
         PF1 Core 0.9V                948 mV   30007 mA   28515 mW
```

```
        PF1 AVDD 1V                  999 mV   31812 mA   31859 mW
        12V                        12179 mV   11399 mA  139720 mW
```

show chassis environment sib (PTX10016 Router)

```
user@host> show chassis environment sib
SIB 0 status:
  State                      Online
  SIB 0 Intake-A Temp Sensor 22 degrees C / 71 degrees F
  SIB 0 Intake-B Temp Sensor 21 degrees C / 69 degrees F
  SIB 0 Intake-C Temp Sensor 17 degrees C / 62 degrees F
  SIB 0 Exhaust-A Temp Sensor29 degrees C / 84 degrees F
  SIB 0 Exhaust-B Temp Sensor30 degrees C / 86 degrees F
  SIB 0 Exhaust-C Temp Sensor25 degrees C / 77 degrees F
  SIB 0 PF0 Temp Sensor      31 degrees C / 87 degrees F
  SIB 0 PF1 Temp Sensor      31 degrees C / 87 degrees F
  SIB 0 PF2 Temp Sensor      32 degrees C / 89 degrees F
  SIB 0 PF3 Temp Sensor      33 degrees C / 91 degrees F
  SIB 0 PF4 Temp Sensor      29 degrees C / 84 degrees F
  SIB 0 PF5 Temp Sensor      27 degrees C / 80 degrees F
  Power
        PF0 Core 0.9V                924 mV   24429 mA   22664 mW
        PF0 AVDD 1V                  999 mV   19515 mA   19531 mW
        PF1 Core 0.9V                924 mV   24531 mA   22679 mW
        PF1 AVDD 1V                  999 mV   17796 mA   17812 mW
        PF2 Core 0.9V                924 mV   24308 mA   22503 mW
        PF2 AVDD 1V                  999 mV   16250 mA   16265 mW
        PF3 Core 0.9V                925 mV   24414 mA   22601 mW
        PF3 AVDD 1V                  999 mV   15023 mA   15023 mW
        PF4 Core 0.9V                924 mV   24089 mA   22285 mW
        PF4 AVDD 1V                 1000 mV   15148 mA   15156 mW
        PF5 Core 0.9V                898 mV   23601 mA   21273 mW
        PF5 AVDD 1V                  999 mV   15453 mA   15453 mW
        12V                        12311 mV   11399 mA  141366 mW
        12V_1                      12325 mV   11053 mA  137204 mW
SIB 1 status:
  State                      Online
  SIB 1 Intake-A Temp Sensor 23 degrees C / 73 degrees F
  SIB 1 Intake-B Temp Sensor 23 degrees C / 73 degrees F
  SIB 1 Intake-C Temp Sensor 18 degrees C / 64 degrees F
  SIB 1 Exhaust-A Temp Sensor30 degrees C / 86 degrees F
```

```
  SIB 1 Exhaust-B Temp Sensor32 degrees C / 89 degrees F
  SIB 1 Exhaust-C Temp Sensor25 degrees C / 77 degrees F
  SIB 1 PF0 Temp Sensor      33 degrees C / 91 degrees F
  SIB 1 PF1 Temp Sensor      32 degrees C / 89 degrees F
  SIB 1 PF2 Temp Sensor      34 degrees C / 93 degrees F
  SIB 1 PF3 Temp Sensor      39 degrees C / 102 degrees F
  SIB 1 PF4 Temp Sensor      29 degrees C / 84 degrees F
  SIB 1 PF5 Temp Sensor      28 degrees C / 82 degrees F
  Power
         PF0 Core 0.9V               949 mV   24101 mA   22910 mW
         PF0 AVDD 1V                1000 mV   19046 mA   19062 mW
         PF1 Core 0.9V               924 mV   24375 mA   22546 mW
         PF1 AVDD 1V                 999 mV   17843 mA   17859 mW
         PF2 Core 0.9V               923 mV   24183 mA   22355 mW
         PF2 AVDD 1V                 999 mV   16109 mA   16117 mW
         PF3 Core 0.9V               949 mV   24246 mA   23097 mW
         PF3 AVDD 1V                1000 mV   14632 mA   14632 mW
         PF4 Core 0.9V               925 mV   23613 mA   21882 mW
         PF4 AVDD 1V                1000 mV   14742 mA   14710 mW
         PF5 Core 0.9V               924 mV   24328 mA   22515 mW
         PF5 AVDD 1V                1000 mV   14640 mA   14664 mW
         12V                       12351 mV   11096 mA  138036 mW
         12V_1                     12219 mV   11226 mA  137500 mW
SIB 2 status:
  State                      Online
  SIB 2 Intake-A Temp Sensor 25 degrees C / 77 degrees F
  SIB 2 Intake-B Temp Sensor 22 degrees C / 71 degrees F
  SIB 2 Intake-C Temp Sensor 18 degrees C / 64 degrees F
  SIB 2 Exhaust-A Temp Sensor29 degrees C / 84 degrees F
  SIB 2 Exhaust-B Temp Sensor33 degrees C / 91 degrees F
  SIB 2 Exhaust-C Temp Sensor24 degrees C / 75 degrees F
  SIB 2 PF0 Temp Sensor      33 degrees C / 91 degrees F
  SIB 2 PF1 Temp Sensor      31 degrees C / 87 degrees F
  SIB 2 PF2 Temp Sensor      34 degrees C / 93 degrees F
  SIB 2 PF3 Temp Sensor      42 degrees C / 107 degrees F
  SIB 2 PF4 Temp Sensor      28 degrees C / 82 degrees F
  SIB 2 PF5 Temp Sensor      27 degrees C / 80 degrees F
  Power
         PF0 Core 0.9V               899 mV   24046 mA   21656 mW
         PF0 AVDD 1V                 999 mV   19265 mA   19250 mW
         PF1 Core 0.9V               900 mV   24234 mA   21867 mW
         PF1 AVDD 1V                 999 mV   18000 mA   18015 mW
         PF2 Core 0.9V               900 mV   23250 mA   20953 mW
```

```
          PF2 AVDD 1V                  999 mV   16328 mA   16343 mW
          PF3 Core 0.9V                899 mV   23976 mA   21570 mW
          PF3 AVDD 1V                  999 mV   14976 mA   15007 mW
          PF4 Core 0.9V                924 mV   23718 mA   21976 mW
          PF4 AVDD 1V                 1000 mV   14781 mA   14765 mW
          PF5 Core 0.9V                899 mV   23265 mA   20937 mW
          PF5 AVDD 1V                  999 mV   15125 mA   15132 mW
          12V                        12298 mV   10750 mA  133523 mW
          12V_1                      12245 mV   10880 mA  134041 mW
SIB 3 status:
  State                       Online
  SIB 3 Intake-A Temp Sensor 23 degrees C / 73 degrees F
  SIB 3 Intake-B Temp Sensor 25 degrees C / 77 degrees F
  SIB 3 Intake-C Temp Sensor 17 degrees C / 62 degrees F
  SIB 3 Exhaust-A Temp Sensor30 degrees C / 86 degrees F
  SIB 3 Exhaust-B Temp Sensor32 degrees C / 89 degrees F
  SIB 3 Exhaust-C Temp Sensor25 degrees C / 77 degrees F
  SIB 3 PF0 Temp Sensor      33 degrees C / 91 degrees F
  SIB 3 PF1 Temp Sensor      31 degrees C / 87 degrees F
  SIB 3 PF2 Temp Sensor      32 degrees C / 89 degrees F
  SIB 3 PF3 Temp Sensor      40 degrees C / 104 degrees F
  SIB 3 PF4 Temp Sensor      28 degrees C / 82 degrees F
  SIB 3 PF5 Temp Sensor      27 degrees C / 80 degrees F
  Power
          PF0 Core 0.9V                924 mV   24558 mA   22734 mW
          PF0 AVDD 1V                  999 mV   19500 mA   19515 mW
          PF1 Core 0.9V                925 mV   24570 mA   22750 mW
          PF1 AVDD 1V                  999 mV   17609 mA   17625 mW
          PF2 Core 0.9V                899 mV   23144 mA   20832 mW
          PF2 AVDD 1V                 1000 mV   16375 mA   16390 mW
          PF3 Core 0.9V                925 mV   24203 mA   22414 mW
          PF3 AVDD 1V                 1000 mV   15039 mA   15023 mW
          PF4 Core 0.9V                899 mV   23523 mA   21183 mW
          PF4 AVDD 1V                  999 mV   15273 mA   15296 mW
          PF5 Core 0.9V                924 mV   24125 mA   22367 mW
          PF5 AVDD 1V                 1000 mV   14953 mA   14968 mW
          12V                        12245 mV   10880 mA  133652 mW
          12V_1                      12259 mV   11053 mA  136464 mW
SIB 4 status:
  State                       Online
  SIB 4 Intake-A Temp Sensor 23 degrees C / 73 degrees F
  SIB 4 Intake-B Temp Sensor 26 degrees C / 78 degrees F
  SIB 4 Intake-C Temp Sensor 18 degrees C / 64 degrees F
```

```
  SIB 4 Exhaust-A Temp Sensor30 degrees C / 86 degrees F
  SIB 4 Exhaust-B Temp Sensor33 degrees C / 91 degrees F
  SIB 4 Exhaust-C Temp Sensor24 degrees C / 75 degrees F
  SIB 4 PF0 Temp Sensor      34 degrees C / 93 degrees F
  SIB 4 PF1 Temp Sensor      32 degrees C / 89 degrees F
  SIB 4 PF2 Temp Sensor      33 degrees C / 91 degrees F
  SIB 4 PF3 Temp Sensor      41 degrees C / 105 degrees F
  SIB 4 PF4 Temp Sensor      28 degrees C / 82 degrees F
  SIB 4 PF5 Temp Sensor      27 degrees C / 80 degrees F
  Power
         PF0 Core 0.9V               925 mV   24644 mA   22824 mW
         PF0 AVDD 1V                 999 mV   19375 mA   19390 mW
         PF1 Core 0.9V               900 mV   24109 mA   21703 mW
         PF1 AVDD 1V                 999 mV   17687 mA   17695 mW
         PF2 Core 0.9V               899 mV   24085 mA   21710 mW
         PF2 AVDD 1V                 999 mV   16578 mA   16570 mW
         PF3 Core 0.9V               949 mV   24652 mA   23410 mW
         PF3 AVDD 1V                1000 mV   14445 mA   14453 mW
         PF4 Core 0.9V               924 mV   23902 mA   22097 mW
         PF4 AVDD 1V                 999 mV   14750 mA   14742 mW
         PF5 Core 0.9V               925 mV   24082 mA   22308 mW
         PF5 AVDD 1V                 999 mV   14671 mA   14671 mW
         12V                       12338 mV   11139 mA  138277 mW
         12V_1                     12325 mV   11356 mA  140978 mW
SIB 5 status:
  State                     Online
  SIB 5 Intake-A Temp Sensor 22 degrees C / 71 degrees F
  SIB 5 Intake-B Temp Sensor 22 degrees C / 71 degrees F
  SIB 5 Intake-C Temp Sensor 18 degrees C / 64 degrees F
  SIB 5 Exhaust-A Temp Sensor28 degrees C / 82 degrees F
  SIB 5 Exhaust-B Temp Sensor28 degrees C / 82 degrees F
  SIB 5 Exhaust-C Temp Sensor25 degrees C / 77 degrees F
  SIB 5 PF0 Temp Sensor      32 degrees C / 89 degrees F
  SIB 5 PF1 Temp Sensor      31 degrees C / 87 degrees F
  SIB 5 PF2 Temp Sensor      32 degrees C / 89 degrees F
  SIB 5 PF3 Temp Sensor      33 degrees C / 91 degrees F
  SIB 5 PF4 Temp Sensor      29 degrees C / 84 degrees F
  SIB 5 PF5 Temp Sensor      28 degrees C / 82 degrees F
  Power
         PF0 Core 0.9V               924 mV   25093 mA   23210 mW
         PF0 AVDD 1V                 999 mV   19781 mA   19796 mW
         PF1 Core 0.9V               899 mV   24113 mA   21753 mW
         PF1 AVDD 1V                1000 mV   17968 mA   17984 mW
```

```
PF2 Core 0.9V                925 mV   24218 mA   22437 mW
PF2 AVDD 1V                 1000 mV   16539 mA   16531 mW
PF3 Core 0.9V                898 mV   23511 mA   21164 mW
PF3 AVDD 1V                  999 mV   15015 mA   15023 mW
PF4 Core 0.9V                975 mV   25328 mA   24718 mW
PF4 AVDD 1V                 1000 mV   14578 mA   14601 mW
PF5 Core 0.9V                923 mV   24175 mA   22367 mW
PF5 AVDD 1V                 1000 mV   14789 mA   14765 mW
12V                        12259 mV   11053 mA  136464 mW
12V_1                      12272 mV   11226 mA  138221 mW
```

Release Information

Command introduced before Junos OS Release 7.4.

`sfc` option introduced in Junos OS Release 9.6. for the TX Matrix Plus router.

RELATED DOCUMENTATION

- request chassis sib | **460**
- show chassis sibs | **1577**
- Configuring Junos OS to Upgrade and Downgrade Switch Interface Boards on a TX Matrix Router
- M320 SIB Description

show chassis errors active

IN THIS SECTION

- Syntax | **994**
- Description | **994**
- Options | **994**
- Required Privilege Level | **994**

- Output Fields | **995**
- Sample Output | **996**
- show chassis errors active detail | **998**
- Release Information | **999**

Syntax

```
show chassis errors active
<detail>
<fpc-slot slot>
<detail fpc-slot slot>
```

Description

Display the details of chassis errors. In a high availability application, use these commands on primary RE. If you use these commands on secondary RE, the output shows a warning message to run the commands on primary RE.

Options

detail	(Optional) Displays detailed system error information.
fpc-slot *slot*	(Optional) Displays the active errors on the selected FPC slot.
detail fpc-slot *slot*	(Optional) Displays the active errors on the selected FPC slot.

Required Privilege Level

view

Output Fields

Table 57 on page 995 lists the output fields for the `show chassis errors active detail` command. Output fields are listed in the approximate order in which they appear.

Table 57: Output Fields of `show chassis errors active detail` Command

Field Name	Field Description
`Location`	The FPC number.
`Identifier`	The unique identifier of the error.
`Error`	The error type.
`Scope`	Scope of the error. The following scopes are available: • `board` • `pfe`
`Category`	Error categories include the following: • functional • `io` • `storage` • `memory` • `processing` • `switch`
`Severity`	The severity of the error. It can be configured as follows: • `fatal`—Fatal error on FPC • `major`—Major error on FPC • `minor`—Minor error on FPC

Table 57: Output Fields of `show chassis errors active detail` Command *(Continued)*

Field Name	Field Description
`Details`	Details of the error
`Count`	Number of error instances occurred.
`support`	Possible fix for the error

Sample Output

show chassis errors active

```
user@router> show chassis errors active

Slot 5

------------------------------------------------
Active Minor Errors: 0
Active Major Errors: 0
Active Fatal Errors: 0
```

show chassis errors active detail

```
user@host> show chassis errors active detail
Slot 0

------------------------------------------------
Location      : FPC 0
Identifier    : /fpc/0/pfe/0/cm/0/BTCHIP/0/BTCHIP_CMERROR_TEMP_MONITOR
Error         : BTCHIP_CMERROR_TEMP_MONITOR
Scope         : pfe
Category      : functional
Severity      : Minor
```

```
Details       : TEMP_MONITOR: BT Temperature monitor throttled bandwidth
Count         : 1
Support       : No help info provided
-------------------------------------------------
Location      : FPC 0
Identifier    : /fpc/0/pfe/0/cm/0/BTCHIP/1/BTCHIP_CMERROR_TEMP_MONITOR
Error         : BTCHIP_CMERROR_TEMP_MONITOR
Scope         : pfe
Category      : functional
Severity      : Minor
Details       : TEMP_MONITOR: BT Temperature monitor throttled bandwidth
Count         : 1
Support       : No help info provided

Slot 1

-------------------------------------------------
Location      : FPC 1
Identifier    : /fpc/1/pfe/0/cm/0/PIC0/0/PIC_CMERROR_STORAGE_SMARTD_ERROR
Error         : PIC_CMERROR_STORAGE_SMARTD_ERROR
Scope         : board
Category      : functional
Severity      : Major
Details       : PIC STORAGE SMARTD ERROR
Count         : 1
Support       : No help info provided
-------------------------------------------------
Location      : FPC 1
Identifier    : /fpc/1/pfe/0/cm/0/PIC1/0/PIC_CMERROR_DDR_CORRECTABLE_MINOR
Error         : PIC_CMERROR_DDR_CORRECTABLE_MINOR
Scope         : board
Category      : functional
Severity      : Minor
Details       : PIC DDR Correctable Minor Error
Count         : 1
Support       : No help info provided
```

show chassis errors active detail

```
user@host> show chassis errors active detail

Slot 0

------------------------------------------------
Location      : FPC 0
Identifier    : /fpc/0/pfe/0/cm/0/BTCHIP/0/BTCHIP_CMERROR_TEMP_MONITOR
Error         : BTCHIP_CMERROR_TEMP_MONITOR
Scope         : pfe
Category      : functional
Severity      : Minor
Details       : TEMP_MONITOR: BT Temperature monitor throttled bandwidth
Count         : 1
Support       : No help info provided
------------------------------------------------
Location      : FPC 0
Identifier    : /fpc/0/pfe/0/cm/0/BTCHIP/1/BTCHIP_CMERROR_TEMP_MONITOR
Error         : BTCHIP_CMERROR_TEMP_MONITOR
Scope         : pfe
Category      : functional
Severity      : Minor
Details       : TEMP_MONITOR: BT Temperature monitor throttled bandwidth
Count         : 1
Support       : No help info provided
```

show chassis errors active detail fpc-slot 3

```
user@router> show chassis errors active detail fpc-slot 3

Slot 3

------------------------------------------------
Location      : FPC 3
Identifier    : /fpc/3/pfe/0/cm/0/XQSS(0)/0/XQSS_CMERROR_CPQW_ERR_INT_FSET_FAST_DEQ_DRY_ERR
Error         : XQSS_CMERROR_CPQW_ERR_INT_FSET_FAST_DEQ_DRY_ERR
Scope         : pfe
Category      : functional
Severity      : Major
```

```
Details       : XQSS CPQW FAST DEQ DRY
Count         : 1
Support       : Help for XQSS_CMERROR_CPQW_ERR_INT_FSET_FAST_DEQ_DRY_ERR
```

Release Information

Command introduced in Junos OS Release 17.4R1.

RELATED DOCUMENTATION

error | 275

show chassis ethernet-switch

IN THIS SECTION

- Syntax | 1000
- Syntax (EX8200 Switch) | 1000
- Syntax (SRX Series Devices) | 1000
- Syntax (T4000 Router) | 1000
- Syntax (TX Matrix Router) | 1001
- Syntax (TX Matrix Plus Router) | 1001
- Syntax (MX Series Router) | 1001
- Syntax (MX2010, MX2020, and MX2008 Universal Routing Platforms) | 1001
- Syntax (MX10008 Universal Routing Platforms) | 1002
- Syntax (PTX Series Packet Transport Routers) | 1002
- Description | 1002
- Options | 1002
- Required Privilege Level | 1004

Output Fields | **1004**
Sample Output | **1011**
Release Information | **1052**

Syntax

```
show chassis ethernet-switch
<errors <port>>
```

Syntax (EX8200 Switch)

```
show chassis ethernet-switch
<statistics <port> | switch <number>
```

Syntax (SRX Series Devices)

```
show chassis ethernet-switch
<errors <port> | statistics <port>>
```

Syntax (T4000 Router)

```
show chassis ethernet-switch
<errors <port> | statistics <port>>
```

Syntax (TX Matrix Router)

```
show chassis ethernet-switch
<errors <port> | statistics <port>>
<lcc <number> | scc>
```

Syntax (TX Matrix Plus Router)

```
show chassis ethernet-switch
<errors <port> | switch <number>
<lcc number | sfc number>
<statistics <port> | switch <number>
```

Syntax (MX Series Router)

```
show chassis ethernet-switch
<all-members>
<errors <port>>
<local>
<member member-id>
```

Syntax (MX2010, MX2020, and MX2008 Universal Routing Platforms)

```
show chassis ethernet-switch
<errors <port> | statistics <port>>
<old-rom-packet-count>
```

Syntax (MX10008 Universal Routing Platforms)

```
statistics <port>>
```

Syntax (PTX Series Packet Transport Routers)

```
show chassis ethernet-switch
<errors <port>>
<statistics <port>>
<port-state  <port>>
```

Description

(M10i, M40e, M120, M160, M320, MX Series, and T Series routers and EX8200 and PTX Series routers only) Display information about the ports on the Control Board (CB) Ethernet switch. Display information about the status of Ethernet switch ports when FPC failures occur and the management Ethernet interface fails on the master RE (MX10008, MX10016, PTX10008, PTX10016, QFX10008, and QFX10016 Switches).

Options

none Display information about each connected port on the Ethernet switch. On a TX Matrix router, display information about each connected port on the Ethernet switch on the TX Matrix router and its attached T640 routers. On a TX Matrix Plus router, display information about each connected port on the Ethernet switch on the TX Matrix Plus router and its attached routers.

all-members (MX Series routers only) (Optional) Display information about the ports on the CB Ethernet switch on all the members of the Virtual Chassis configuration.

errors (Optional) Display the numbers and types of errors accumulated on all ports of the Ethernet switch.

errors *port* (Optional) Display the numbers and types of errors accumulated on the specified port (0 through 15) of the Ethernet switch. On the TX Matrix router, replace *port* with a value from 0 through 15. On the TX Matrix Plus router and EX8200 switch, replace *port* with a value from 0 through 27. On the PTX Series Packet Transport Routers, replace *port* with a value from 0 through 25. On the T4000 routers, MX2020 routers, MX2010 routers, and MX2008 routers, replace *port* with a value from 0 through 27.

errors switch *number* (TX Matrix Plus router only) (Optional) Display the numbers and types of errors accumulated on the specified switch. Replace *number* with a value from 0 through 2.

lcc *number* (TX Matrix router and TX Matrix Plus router only) (Optional) Line-card chassis number.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local (MX Series routers only) (Optional) Display information about the ports on the CB Ethernet switch on the local Virtual Chassis member.

member *member-id* (MX Series routers only) (Optional) Display information about the ports on the CB Ethernet switch on the specified member of the Virtual Chassis configuration. Replace *member-id* with a value of 0 or 1.

old-rom-packet-count (MX 2020 Routers only) (Optional) Display information about installed linecards. A non-zero number indicates that the bootrom on that linecard needs to be updated.

port-state (PTX Series only) (Optional) Display information about current port operation (`Blocking`, `Listening`, or `Disabled`).

scc (TX Matrix router only) (Optional) Display information about the ports on the CB's Ethernet switch on the TX Matrix router (switch-card chassis).

sfc *number* (TX Matrix Plus router only) (Optional) Display information about the ports on the CB's Ethernet switch on the TX Matrix Plus router (or switch-fabric chassis). Replace *number* with 0.

statistics	(Optional) Display traffic statistics for each connected port on the Ethernet switch.
statistics *port*	(Optional) Display traffic statistics for the specified port on the Ethernet switch. On the TX Matrix router, replace *port* with a value from 0 through 25. On the TX Matrix Plus router or EX8200 switch, replace *port* with a value from 0 through 27. On the PTX Series Packet Transport Routers, replace *port* with a value from 0 through 25. On the T4000 routers, MX2020 routers, MX2010 routers, and MX2008 routers, replace *port* with a value from 0 through 27.
statistics switch *number*	(TX Matrix Plus routers and EX8200 switch only) (Optional) Display traffic statistics for the specified Ethernet switch number. On the TX Matrix Plus router and EX8216 switch, replace *number* with a value from 0 through 2. On the EX8208 switch, replace *number* with a value from 0 through 1.

Required Privilege Level

view

Output Fields

Table 58 on page 1005 lists the output fields for the `show chassis ethernet-switch` command. Output fields are listed in the approximate order in which they appear.

Table 58: show chassis ethernet-switch Output Fields

Field Name	Field Description

`Link is good on port n connected to device`
or
`Link is good on Fast Ethernet port n connected to device`
or
`Link is good on Gigabit Ethernet port n connected to device`
or
`Link is down on Gigabit Ethernet port connected to device`
	Information about the link between each port on the CB's Ethernet switch and one of the following devices:
	• FPC0 (Flexible PIC Concentrator 0) through FPC7
	• Local controller
	• Routing Engine
	• Other Routing Engine (on a system with two Routing Engines)
	• SPMB (Switch Processor Mezzanine Board)
	• (TX Matrix router only) LCC0 (line-card chassis 0) through LCC3

`Speed is`	Speed at which the Ethernet link is running: `10 Mb` or `100 Mb`. When the device is `RE` or `Other RE` on the TX Matrix router, the speed is `1000 Mb`. **NOTE**: Irrespective of the device, the speed is `1000` Mb on the MX2010, MX2020, and MX2008 routers.
`Duplex is`	Duplex type of the Ethernet link: `full` or `half`.
`Autonegotiate is Enabled (or Disabled)`	By default, built-in Fast Ethernet ports on a PIC autonegotiate whether to operate at 10 Mbps or 100 Mbps. All other interfaces automatically choose the correct speed based on the PIC type and whether the PIC is configured to operate in multiplexed mode (using the `no-concatenate` statement at the `[edit chassis]` hierarchy level, as described in the *Junos OS System Basics Configuration Guide*).

Table 58: show chassis ethernet-switch Output Fields *(Continued)*

Field Name	Field Description
`Flow Control TX is Enabled (or Disabled)`	(MX2010 routers, MX2020 routers, MX2008 routers, and PTX Series) Flow control in the transmit direction is enabled (or disabled). Flow control regulates the flow of packets from the switch to the remote side of the connection.
`Flow Control RX is Enabled (or Disabled)`	(MX2010 routers, MX2020 routers, MX2008 routers, and PTX Series) Flow control in the receive direction is enabled (or disabled). Flow control regulates the flow of packets from the remote side of the connection to the switch.
`MLT3`	Number of multilevel threshold-3 (MLT-3) Fast Ethernet errors detected.
Accumulated error counts for port *n* connected to device FPC*n*: (error output only)	
`Lock`	Number of lock errors detected.
`Xmit`	Number of transmission errors detected.
`ESD`	Number of electrostatic discharge (ESD) errors detected.
`False Carrier`	Number of false carrier errors detected. This number is increased by one if a FRU is removed.
`Disconnects`	Number of disconnect errors detected.
`FX mode`	Number of errors detected on an Ethernet link over optical fiber.
Statistics for port *n* connected to device FPC*n* (statistics output only)	
`TX Packets 64 Octets`	(MX2010, MX2020, and MX2008 routers) Number of packets of size 64 octets transmitted.
`TX Packets 65 - 127 Octets`	(MX2010, MX2020, and MX2008 routers) Number of packets of size 65 through 127 octets transmitted.

Table 58: show chassis ethernet-switch Output Fields *(Continued)*

Field Name	Field Description
TX Packets 128 - 255 Octets	(MX2010, MX2020, and MX2008 routers) Number of packets of size 128 through 255 octets transmitted.
TX Packets 256 - 511 Octets	(MX2010, MX2020, and MX2008 routers) Number of packets of size 256 through 511 octets transmitted.
TX Packets 512 - 1023 Octets	(MX2010, MX2020, and MX2008 routers) Number of packets of size 512 through 1023 octets transmitted.
TX Packets 1024 - 1518 Octets	(MX2010, MX2020, and MX2008 routers) Number of packets of size 1024 through 1518 octets transmitted.
TX Packets 1519 - 2047 Octets	(MX2010, MX2020, and MX2008 routers) Number of packets of size 1519 through 2047 octets transmitted.
TX Packets 2048 - 4095 Octets	(MX2010, MX2020, and MX2008 routers) Number of packets of size 2048 through 4095 octets transmitted.
TX Packets 4096 - 9216 Octets	(MX2010, MX2020, and MX2008 routers) Number of packets of size 4096 through 9216 octets transmitted.
TX 1519 - 1522 Good Vlan frms	(MX2010, MX2020, and MX2008 routers) Number of transmitted frames of size 1519 through 1522 octets that are good VLAN frames.
TX Octets	Number of octets sent.
TX Unicast packets	Number of unicast packets sent.
TX Multicast packets	Number of multicast packets sent.
TX Broadcast packets	Number of broadcast packets sent.

Table 58: show chassis ethernet-switch Output Fields *(Continued)*

Field Name	Field Description
TX Single Collision frames	(MX2010, MX2020, and MX2008 routers) Number of packets sent after one collision.
TX Mult. Collision frames	(MX2010, MX2020, and MX2008 routers) Number of packets sent after multiple collisions.
TX Late collisions	Number of packets aborted during sending because of collisions after 64 bytes.
TX Excessive collisions	Number of packets not sent because of too many collisions.
TX Dropped packets	Number of transmitted packets that were dropped.
TX PAUSEMAC Ctrl Frames	Number of Media Access Control (MAC) frames containing PAUSE commands that were sent.
TX Oversize Packets	Number of oversize packets that were sent.
TX FCS Error Counter	Number of packets discarded because of frame check sequence errors.
TX Fragment Counter	Number of fragmented packets sent.
TX Byte Counter	Number of bytes sent.
TX Packet OK Counter	Number of viable packets sent.
TX Pause Packet Counter	Number of PAUSE packets sent.
RX Packets 64 Octets	(MX2010, MX2020, and MX2008 routers) Number of packets of size 64 octets received.

Table 58: show chassis ethernet-switch Output Fields *(Continued)*

Field Name	Field Description
RX Packets 65 - 127 Octets	(MX2010, MX2020, and MX2008 routers) Number of packets of size 65 through 127 octets received.
RX Packets 128 - 255 Octets	(MX2010, MX2020, and MX2008 routers) Number of packets of size 128 through 255 octets received.
RX Packets 256 - 511 Octets	(MX2010, MX2020, and MX2008 routers) Number of packets of size 256 through 511 octets received.
RX Packets 512 - 1023 Octets	(MX2010, MX2020, and MX2008 routers) Number of packets of size 512 through 1023 octets received.
RX Packets 1024 - 1518 Octets	(MX2010, MX2020, and MX2008 routers) Number of packets of size 1024 through 1518 octets received.
RX Packets 1519 - 2047 Octets	(MX2010, MX2020, and MX2008 routers) Number of packets of size 1519 through 2047 octets received.
RX Packets 2048 - 4095 Octets	(MX2010, MX2020, and MX2008 routers) Number of packets of size 2048 through 4095 octets received.
RX Packets 4096 - 9216 Octets	(MX2010, MX2020, and MX2008 routers) Number of packets of size 4096 through 9216 octets received.
RX Octets	Number of octets received.
RX Unicast packets	Number of unicast packets received.
RX Multicast packets	Number of multicast packets received.
RX Broadcast packets	Number of broadcast packets received.

Table 58: show chassis ethernet-switch Output Fields *(Continued)*

Field Name	Field Description
RX FCS Errors	Number of packets discarded because of frame check sequence errors.
RX Alignment Errors	Number of incomplete octets received.
RX Dropped Packets	Number of incoming packets that were dropped.
RX Fragments	Number of fragmented packets received.
RX Symbol Errors	Number of symbols received that the router did not correctly decode.
RX MAC Control	Number of Media Access Control (MAC) packets received.
RX Oversize Packets	Number of oversize packets received.
RX Undersize Packets	Number of undersize packets received.
RX Jabbers	Total number of frames received that exceed the maximum byte count and contain CRC errors .
RX Control Frame Counter	Number of control frames received.
RX Pause Frame Counter	Number of pause frames received.
RX Byte Counter	Number of bytes received.
RX Packet OK Counter	Number of viable packets received.

Sample Output

show chassis ethernet-switch

```
user@host> show chassis ethernet-switch
Link is good on port 0 connected to device: FPC0
  Speed is 100 MB
  Duplex is full

Link is good on port 1 connected to device: FPC1
  Speed is 100 MB
  Duplex is full

Link is good on port 2 connected to device: FPC2
  Speed is 100 MB
  Duplex is full

Link is good on port 3 connected to device: FPC3
  Speed is 100 MBb
  Duplex is full

Link is good on port 7 connected to device: Local controller
  Speed is 100 MB
  Duplex is full

Link is good on port 9 connected to device: SPMB
  Speed is 100 MB
  Duplex is full

Link is good on port 13 connected to device: FPC5
  Speed is 100 MB
  Duplex is full
```

show chassis ethernet-switch (MX2020 Router)

```
user@host > show chassis ethernet-switch
Displaying summary for switch 0
Link is good on GE port 0 connected to device: FPC0
  Speed is 1000Mb
```

```
  Duplex is full
  Autonegotiate is Enabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is good on GE port 1 connected to device: FPC1
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Enabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is good on GE port 2 connected to device: FPC3
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Enabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is good on GE port 3 connected to device: FPC2
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Enabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is good on GE port 4 connected to device: FPC5
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Enabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is good on GE port 5 connected to device: FPC4
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Enabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is good on GE port 6 connected to device: FPC6
  Speed is 1000Mb
  Duplex is full
```

```
  Autonegotiate is Enabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is good on GE port 7 connected to device: FPC7
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Enabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is good on GE port 8 connected to device: FPC8
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Enabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is good on GE port 9 connected to device: FPC9
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Enabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is good on GE port 10 connected to device: FPC10
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Enabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is good on GE port 11 connected to device: FPC11
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Enabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is good on GE port 12 connected to device: FPC13
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Enabled
```

```
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is good on GE port 13 connected to device: FPC12
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Enabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is good on GE port 14 connected to device: FPC14
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Enabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is good on GE port 15 connected to device: FPC15
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Enabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is good on GE port 16 connected to device: FPC17
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Enabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is good on GE port 17 connected to device: FPC16
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Enabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is good on GE port 18 connected to device: FPC18
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Enabled
  Flow Control TX is Disabled
```

```
  Flow Control RX is Disabled

Link is good on GE port 19 connected to device: FPC19
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Enabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is good on GE port 20 connected to device: Other RE-GigE
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Enabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is good on GE port 21 connected to device: RE-GigE
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Enabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is down on GE port 22 connected to device: Debug-GigE

Link is good on GE port 23 connected to device: SPMB
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Enabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is down on XE port 24 connected to device: SFP+ 0

Link is down on XE port 25 connected to device: SFP+ 1

Link is down on XE port 26 connected to device: RE-10GigE

Link is down on XE port 27 connected to device: Other RE-10GigE
```

show chassis ethernet-switch statistics (MX2020 Router)

```
user@host > show chassis ethernet-switch statistics
Displaying port statistics for switch 0
Statistics for port 0 connected to device FPC0:
  TX Packets 64 Octets        1468564
  TX Packets 65-127 Octets    153896
  TX Packets 128-255 Octets   237
  TX Packets 256-511 Octets   286
  TX Packets 512-1023 Octets  599
  TX Packets 1024-1518 Octets  22803
  TX Packets 1519-2047 Octets  0
  TX Packets 2048-4095 Octets  0
  TX Packets 4096-9216 Octets  0
  TX 1519-1522 Good Vlan frms  0
  TX Octets                   1646385
  TX Multicast Packets        6
  TX Broadcast Packets        970939
  TX Single Collision frames  0
  TX Mult. Collision frames   0
  TX Late Collisions          0
  TX Excessive Collisions     0
  TX Collision frames         0
  TX PAUSEMAC Ctrl Frames     0
  TX MAC ctrl frames          0
  TX Frame deferred Xmns      0
  TX Frame excessive deferl   0
  TX Oversize Packets         0
  TX Jabbers                  0
  TX FCS Error Counter        0
  TX Fragment Counter         0
  TX Byte Counter             130470290
  RX Packets 64 Octets        180266
  RX Packets 65-127 Octets    519030
  RX Packets 128-255 Octets   1390
  RX Packets 256-511 Octets   42857
  RX Packets 512-1023 Octets  3482
  RX Packets 1024-1518 Octets  8147
  RX Packets 1519-2047 Octets  0
  RX Packets 2048-4095 Octets  0
  RX Packets 4096-9216 Octets  0
  RX Octets                   755172
```

```
  RX Multicast Packets        0
  RX Broadcast Packets        42822
  RX FCS Errors               0
  RX Align Errors             0
  RX Fragments                0
  RX Symbol errors            0
  RX Unsupported opcodes      0
  RX Out of Range Length      0
  RX False Carrier Errors     0
  RX Undersize Packets        0
  RX Oversize Packets         0
  RX Jabbers                  0
  RX 1519-1522 Good Vlan frms 0
  RX MTU Exceed Counter       0
  RX Control Frame Counter    0
  RX Pause Frame Counter      0
  RX Byte Counter             75374021
Statistics for port 1 connected to device FPC1:
  TX Packets 64 Octets        1493739
  TX Packets 65-127 Octets    126996
  TX Packets 128-255 Octets   241
  TX Packets 256-511 Octets   283
  TX Packets 512-1023 Octets  604
  TX Packets 1024-1518 Octets  33687
  TX Packets 1519-2047 Octets  0
  TX Packets 2048-4095 Octets  0
  TX Packets 4096-9216 Octets  0
  TX 1519-1522 Good Vlan frms  0
  TX Octets                   1655550
  TX Multicast Packets        6
  TX Broadcast Packets        969032
  TX Single Collision frames  0
  TX Mult. Collision frames   0
  TX Late Collisions          0
  TX Excessive Collisions     0
  TX Collision frames         0
  TX PAUSEMAC Ctrl Frames     0
  TX MAC ctrl frames          0
  TX Frame deferred Xmns      0
  TX Frame excessive deferl   0
  TX Oversize Packets         0
  TX Jabbers                  0
  TX FCS Error Counter        0
```

```
  TX Fragment Counter         0
  TX Byte Counter             141832690
  RX Packets 64 Octets        155655
  RX Packets 65-127 Octets    545561
  RX Packets 128-255 Octets   1394
  RX Packets 256-511 Octets   42811
  RX Packets 512-1023 Octets  3514
  RX Packets 1024-1518 Octets  8171
  RX Packets 1519-2047 Octets  0
  RX Packets 2048-4095 Octets  0
  RX Packets 4096-9216 Octets  0
  RX Octets                   757106
  RX Multicast Packets        0
  RX Broadcast Packets        44509
  RX FCS Errors               0
  RX Align Errors             0
  RX Fragments                0
  RX Symbol errors            0
  RX Unsupported opcodes      0
  RX Out of Range Length      0
  RX False Carrier Errors     0
  RX Undersize Packets        0
  RX Oversize Packets         0
  RX Jabbers                  0
  RX 1519-1522 Good Vlan frms 0
  RX MTU Exceed Counter       0
  RX Control Frame Counter    0
  RX Pause Frame Counter      0
  RX Byte Counter             75691392
Statistics for port 2 connected to device FPC3:
  TX Packets 64 Octets        1465749
  TX Packets 65-127 Octets    152849
  TX Packets 128-255 Octets   238
  TX Packets 256-511 Octets   289
  TX Packets 512-1023 Octets  602
  TX Packets 1024-1518 Octets  38903
  TX Packets 1519-2047 Octets  0
  TX Packets 2048-4095 Octets  0
  TX Packets 4096-9216 Octets  0
  TX 1519-1522 Good Vlan frms  0
  TX Octets                   1658630
  TX Multicast Packets        6
  TX Broadcast Packets        968873
```

```
  TX Single Collision frames  0
  TX Mult. Collision frames   0
  TX Late Collisions          0
  TX Excessive Collisions     0
  TX Collision frames         0
  TX PAUSEMAC Ctrl Frames     0
  TX MAC ctrl frames          0
  TX Frame deferred Xmns      0
  TX Frame excessive deferl   0
  TX Oversize Packets         0
  TX Jabbers                  0
  TX FCS Error Counter        0
  TX Fragment Counter         0
  TX Byte Counter             147427010
  RX Packets 64 Octets        181636
  RX Packets 65-127 Octets    517526
  RX Packets 128-255 Octets   1405
  RX Packets 256-511 Octets   42806
  RX Packets 512-1023 Octets  3515
  RX Packets 1024-1518 Octets  8168
  RX Packets 1519-2047 Octets  0
  RX Packets 2048-4095 Octets  0
  RX Packets 4096-9216 Octets  0
  RX Octets                   755056
  RX Multicast Packets        0
  RX Broadcast Packets        44490
  RX FCS Errors               0
  RX Align Errors             0
  RX Fragments                0
  RX Symbol errors            0
  RX Unsupported opcodes      0
  RX Out of Range Length      0
  RX False Carrier Errors     0
  RX Undersize Packets        0
  RX Oversize Packets         0
  RX Jabbers                  0
  RX 1519-1522 Good Vlan frms 0
  RX MTU Exceed Counter       0
  RX Control Frame Counter    0
  RX Pause Frame Counter      0
  RX Byte Counter             75381869
Statistics for port 3 connected to device FPC2:
  TX Packets 64 Octets        1473828
```

```
TX Packets 65-127 Octets    145643
TX Packets 128-255 Octets   253
TX Packets 256-511 Octets   285
TX Packets 512-1023 Octets  612
TX Packets 1024-1518 Octets  26603
TX Packets 1519-2047 Octets  0
TX Packets 2048-4095 Octets  0
TX Packets 4096-9216 Octets  0
TX 1519-1522 Good Vlan frms  0
TX Octets                   1647224
TX Multicast Packets        6
TX Broadcast Packets        968925
TX Single Collision frames  0
TX Mult. Collision frames   0
TX Late Collisions          0
TX Excessive Collisions     0
TX Collision frames         0
TX PAUSEMAC Ctrl Frames     0
TX MAC ctrl frames          0
TX Frame deferred Xmns      0
TX Frame excessive deferl   0
TX Oversize Packets         0
TX Jabbers                  0
TX FCS Error Counter        0
TX Fragment Counter         0
TX Byte Counter             134293832
RX Packets 64 Octets        174230
RX Packets 65-127 Octets    525756
RX Packets 128-255 Octets   1404
RX Packets 256-511 Octets   42815
RX Packets 512-1023 Octets  3530
RX Packets 1024-1518 Octets  8176
RX Packets 1519-2047 Octets  0
RX Packets 2048-4095 Octets  0
RX Packets 4096-9216 Octets  0
RX Octets                   755911
RX Multicast Packets        0
RX Broadcast Packets        44499
RX FCS Errors               0
RX Align Errors             0
RX Fragments                0
RX Symbol errors            0
RX Unsupported opcodes      0
```

```
  RX Out of Range Length      0
  RX False Carrier Errors     0
  RX Undersize Packets        0
  RX Oversize Packets         0
  RX Jabbers                  0
  RX 1519-1522 Good Vlan frms 0
  RX MTU Exceed Counter       0
  RX Control Frame Counter    0
  RX Pause Frame Counter      0
  RX Byte Counter             75517355
Statistics for port 4 connected to device FPC5:
  TX Packets 64 Octets        1466664
  TX Packets 65-127 Octets    151155
  TX Packets 128-255 Octets   238
  TX Packets 256-511 Octets   277
  TX Packets 512-1023 Octets  615
  TX Packets 1024-1518 Octets  54674
  TX Packets 1519-2047 Octets  0
  TX Packets 2048-4095 Octets  0
  TX Packets 4096-9216 Octets  0
  TX 1519-1522 Good Vlan frms  0
  TX Octets                   1673623
  TX Multicast Packets        6
  TX Broadcast Packets        968610
  TX Single Collision frames  0
  TX Mult. Collision frames   0
  TX Late Collisions          0
  TX Excessive Collisions     0
  TX Collision frames         0
  TX PAUSEMAC Ctrl Frames     0
  TX MAC ctrl frames          0
  TX Frame deferred Xmns      0
  TX Frame excessive deferl   0
  TX Oversize Packets         0
  TX Jabbers                  0
  TX FCS Error Counter        0
  TX Fragment Counter         0
  TX Byte Counter             164247790
  RX Packets 64 Octets        180006
  RX Packets 65-127 Octets    518217
  RX Packets 128-255 Octets   1406
  RX Packets 256-511 Octets   42787
  RX Packets 512-1023 Octets  3515
```

```
  RX Packets 1024-1518 Octets  8164
  RX Packets 1519-2047 Octets  0
  RX Packets 2048-4095 Octets  0
  RX Packets 4096-9216 Octets  0
  RX Octets                    754095
  RX Multicast Packets         0
  RX Broadcast Packets         44457
  RX FCS Errors                0
  RX Align Errors              0
  RX Fragments                 0
  RX Symbol errors             0
  RX Unsupported opcodes       0
  RX Out of Range Length       0
  RX False Carrier Errors      0
  RX Undersize Packets         0
  RX Oversize Packets          0
  RX Jabbers                   0
  RX 1519-1522 Good Vlan frms 0
  RX MTU Exceed Counter        0
  RX Control Frame Counter     0
  RX Pause Frame Counter       0
  RX Byte Counter              75311970
Statistics for port 5 connected to device FPC4:
  TX Packets 64 Octets         1464770
  TX Packets 65-127 Octets     154498
  TX Packets 128-255 Octets    225
  TX Packets 256-511 Octets    280
  TX Packets 512-1023 Octets   637
  TX Packets 1024-1518 Octets  26355
  TX Packets 1519-2047 Octets  0
  TX Packets 2048-4095 Octets  0
  TX Packets 4096-9216 Octets  0
  TX 1519-1522 Good Vlan frms  0
  TX Octets                    1646765
  TX Multicast Packets         6
  TX Broadcast Packets         968730
  TX Single Collision frames   0
  TX Mult. Collision frames    0
  TX Late Collisions           0
  TX Excessive Collisions      0
  TX Collision frames          0
  TX PAUSEMAC Ctrl Frames      0
  TX MAC ctrl frames           0
```

```
  TX Frame deferred Xmns      0
  TX Frame excessive deferl   0
  TX Oversize Packets         0
  TX Jabbers                  0
  TX FCS Error Counter        0
  TX Fragment Counter         0
  TX Byte Counter             134058606
  RX Packets 64 Octets        169269
  RX Packets 65-127 Octets    515285
  RX Packets 128-255 Octets   1527
  RX Packets 256-511 Octets   42804
  RX Packets 512-1023 Octets  3521
  RX Packets 1024-1518 Octets  9142
  RX Packets 1519-2047 Octets  0
  RX Packets 2048-4095 Octets  0
  RX Packets 4096-9216 Octets  0
  RX Octets                   741548
  RX Multicast Packets        0
  RX Broadcast Packets        44470
  RX FCS Errors               0
  RX Align Errors             0
  RX Fragments                0
  RX Symbol errors            0
  RX Unsupported opcodes      0
  RX Out of Range Length      0
  RX False Carrier Errors     0
  RX Undersize Packets        0
  RX Oversize Packets         0
  RX Jabbers                  0
  RX 1519-1522 Good Vlan frms 0
  RX MTU Exceed Counter       0
  RX Control Frame Counter    0
  RX Pause Frame Counter      0
  RX Byte Counter             75498393
Statistics for port 6 connected to device FPC6:
  TX Packets 64 Octets        1475260
  TX Packets 65-127 Octets    143324
  TX Packets 128-255 Octets   260
  TX Packets 256-511 Octets   274
  TX Packets 512-1023 Octets  603
  TX Packets 1024-1518 Octets  40631
  TX Packets 1519-2047 Octets  0
  TX Packets 2048-4095 Octets  0
```

```
TX Packets 4096-9216 Octets  0
TX 1519-1522 Good Vlan frms  0
TX Octets                    1660352
TX Multicast Packets         6
TX Broadcast Packets         968466
TX Single Collision frames   0
TX Mult. Collision frames    0
TX Late Collisions           0
TX Excessive Collisions      0
TX Collision frames          0
TX PAUSEMAC Ctrl Frames      0
TX MAC ctrl frames           0
TX Frame deferred Xmns       0
TX Frame excessive deferl    0
TX Oversize Packets          0
TX Jabbers                   0
TX FCS Error Counter         0
TX Fragment Counter          0
TX Byte Counter              149212764
RX Packets 64 Octets         172275
RX Packets 65-127 Octets     526519
RX Packets 128-255 Octets    1394
RX Packets 256-511 Octets    42777
RX Packets 512-1023 Octets   3514
RX Packets 1024-1518 Octets  8161
RX Packets 1519-2047 Octets  0
RX Packets 2048-4095 Octets  0
RX Packets 4096-9216 Octets  0
RX Octets                    754640
RX Multicast Packets         0
RX Broadcast Packets         44443
RX FCS Errors                0
RX Align Errors              0
RX Fragments                 0
RX Symbol errors             0
RX Unsupported opcodes       0
RX Out of Range Length       0
RX False Carrier Errors      0
RX Undersize Packets         0
RX Oversize Packets          0
RX Jabbers                   0
RX 1519-1522 Good Vlan frms 0
RX MTU Exceed Counter        0
```

```
  RX Control Frame Counter    0
  RX Pause Frame Counter      0
  RX Byte Counter             75386517
Statistics for port 7 connected to device FPC7:
  TX Packets 64 Octets        1472361
  TX Packets 65-127 Octets    145646
  TX Packets 128-255 Octets   251
  TX Packets 256-511 Octets   250
  TX Packets 512-1023 Octets  580
  TX Packets 1024-1518 Octets  49530
  TX Packets 1519-2047 Octets  0
  TX Packets 2048-4095 Octets  0
  TX Packets 4096-9216 Octets  0
  TX 1519-1522 Good Vlan frms  0
  TX Octets                   1668618
  TX Multicast Packets        6
  TX Broadcast Packets        968317
  TX Single Collision frames  0
  TX Mult. Collision frames   0
  TX Late Collisions          0
  TX Excessive Collisions     0
  TX Collision frames         0
  TX PAUSEMAC Ctrl Frames     0
  TX MAC ctrl frames          0
  TX Frame deferred Xmns      0
  TX Frame excessive deferl   0
  TX Oversize Packets         0
  TX Jabbers                  0
  TX FCS Error Counter        0
  TX Fragment Counter         0
  TX Byte Counter             158689814
  RX Packets 64 Octets        174618
  RX Packets 65-127 Octets    523421
  RX Packets 128-255 Octets   1393
  RX Packets 256-511 Octets   42764
  RX Packets 512-1023 Octets  3514
  RX Packets 1024-1518 Octets  8158
  RX Packets 1519-2047 Octets  0
  RX Packets 2048-4095 Octets  0
  RX Packets 4096-9216 Octets  0
  RX Octets                   753868
  RX Multicast Packets        0
  RX Broadcast Packets        44429
```

```
  RX FCS Errors               0
  RX Align Errors             0
  RX Fragments                0
  RX Symbol errors            0
  RX Unsupported opcodes      0
  RX Out of Range Length      0
  RX False Carrier Errors     0
  RX Undersize Packets        0
  RX Oversize Packets         0
  RX Jabbers                  0
  RX 1519-1522 Good Vlan frms 0
  RX MTU Exceed Counter       0
  RX Control Frame Counter    0
  RX Pause Frame Counter      0
  RX Byte Counter             75309863
Statistics for port 8 connected to device FPC8:
...
```

show chassis ethernet-switch (MX2020 Router with MPC4E)

```
user@ host > show chassis ethernet-switch
Displaying summary for switch 0
Link is good on GE port 0 connected to device: FPC0
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Enabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is down on GE port 1 connected to device: FPC1

Link is down on GE port 2 connected to device: FPC3

Link is down on GE port 3 connected to device: FPC2

Link is down on GE port 4 connected to device: FPC5

Link is down on GE port 5 connected to device: FPC4

Link is down on GE port 6 connected to device: FPC6
```

```
Link is down on GE port 7 connected to device: FPC7

Link is down on GE port 8 connected to device: FPC8

Link is good on GE port 9 connected to device: FPC9
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Enabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is good on GE port 10 connected to device: FPC10
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Enabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is down on GE port 11 connected to device: FPC11

Link is down on GE port 12 connected to device: FPC13

Link is down on GE port 13 connected to device: FPC12

Link is good on GE port 14 connected to device: FPC14
  Speed is 1000Mb
  Duplex is full
Autonegotiate is Enabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is down on GE port 15 connected to device: FPC15

Link is down on GE port 16 connected to device: FPC17

Link is down on GE port 17 connected to device: FPC16

Link is down on GE port 18 connected to device: FPC18

Link is good on GE port 19 connected to device: FPC19
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Enabled
```

```
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is good on GE port 20 connected to device: Other RE-GigE
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Enabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is good on GE port 21 connected to device: RE-GigE
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Enabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is down on GE port 22 connected to device: Debug-GigE

Link is good on GE port 23 connected to device: SPMB
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Enabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is down on XE port 24 connected to device: SFP+ 0

Link is down on XE port 25 connected to device: SFP+ 1

Link is down on XE port 26 connected to device: RE-10GigE

Link is down on XE port 27 connected to device: Other RE-10GigE
```

show chassis ethernet-switch (MX2008 Router)

```
user@host> show chassis ethernet-switch
Displaying summary for switch 0
Link is good on GE port 0 connected to device: FPC0
  Speed is 1000Mb
  Duplex is full
```

```
  Autonegotiate is Enabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is down on GE port 1 connected to device: FPC1

Link is good on GE port 2 connected to device: FPC3
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Enabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is down on GE port 3 connected to device: FPC2

Link is good on GE port 4 connected to device: FPC5
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Enabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is down on GE port 5 connected to device: FPC4

Link is down on GE port 6 connected to device: FPC6

Link is good on GE port 7 connected to device: FPC7
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Enabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is down on GE port 8 connected to device: FPC8

Link is good on GE port 9 connected to device: FPC9
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Enabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is good on GE port 20 connected to device: CB-to-CB-GigE 1
```

```
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Enabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is good on GE port 21 connected to device: CB-to-CB-GigE 2
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Enabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is down on GE port 22 connected to device: (null)

Link is down on GE port 23 connected to device: (null)

Link is good on XE port 24 connected to device: Other RE-10GigE
  Speed is 10000Mb
  Duplex is full
  Autonegotiate is Disabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is good on XE port 25 connected to device: RE-10GigE
  Speed is 10000Mb
  Duplex is full
  Autonegotiate is Disabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is down on XE port 26 connected to device: SFP+ 0

Link is down on XE port 27 connected to device: SFP+ 1
```

show chassis ethernet-switch statistics (Mx10008 Router)

```
user@host> show chassis ethernet-switch statistics
Switch Status: Online
Link is Disabled on port connected to QPHY_0
Link is Disabled on port connected to QPHY_1
```

```
Link is Down on port connected to PTP_FPGA
Link is Disabled on port connected to Unused
Link is Up on port connected to LC0
        Speed      : 10G
        Duplexity  : FD
        Autoneg    : No
        tx_packets : 2835539
        rx_packets : 2624197
        tx_errors  : 0
        rx_errors  : 0
Link is Down on port connected to LC1
Link is Up on port connected to LC2
        Speed      : 10G
        Duplexity  : FD
        Autoneg    : No
        tx_packets : 2889426
        rx_packets : 2441270
        tx_errors  : 0
        rx_errors  : 0
Link is Up on port connected to LC3
        Speed      : 10G
        Duplexity  : FD
        Autoneg    : No
        tx_packets : 2776323
        rx_packets : 2322320
        tx_errors  : 0
        rx_errors  : 0
Link is Disabled on port connected to LC8
Link is Down on port connected to LC4
Link is Disabled on port connected to LC12
Link is Disabled on port connected to LC9
Link is Down on port connected to LC5
Link is Disabled on port connected to LC13
Link is Disabled on port connected to LC10
Link is Down on port connected to LC6
Link is Disabled on port connected to LC14
Link is Disabled on port connected to LC11
Link is Down on port connected to LC7
Link is Disabled on port connected to LC15
Link is Disabled on port connected to OCB_SW
Link is Disabled on port connected to Unused
Link is Disabled on port connected to Fortville_1
Link is Up on port connected to Fortville_0
```

```
        Speed      : 10G
        Duplexity  : FD
        Autoneg    : Yes
        tx_packets : 7387765
        rx_packets : 8348292
        tx_errors  : 0
        rx_errors  : 0
```

show chassis ethernet-switch (TX Matrix Router)

```
user@host> show chassis ethernet-switch
scc-re0:
--------------------------------------------------------------------------
Link is good on FE port 4 connected to device: LCC0
  Speed is 100 MB
  Duplex is full
  Autonegotiate is Enabled

Link is good on FE port 6 connected to device: LCC2
  Speed is 100 MB
  Duplex is full
  Autonegotiate is Enabled

Link is good on FE port 8 connected to device: SPMB
  Speed is 100 MB
  Duplex is full
  Autonegotiate is Enabled

lcc0-re0:
--------------------------------------------------------------------------
Link is good on FE port 1 connected to device: FPC1
  Speed is 100 MB
  Duplex is full
  Autonegotiate is Enabled

Link is good on FE port 2 connected to device: FPC2
  Speed is 100 MB
  Duplex is full
  Autonegotiate is Enabled

Link is good on FE port 8 connected to device: SPMB
```

```
  Speed is 100 MB
  Duplex is full
  Autonegotiate is Enabled

Link is good on FE port 10 connected to device: SCC
  Speed is 100 MB
  Duplex is full
  Autonegotiate is Enabled

lcc2-re0:
--------------------------------------------------------------------------
Link is good on FE port 0 connected to device: FPC0
  Speed is 100 MB
  Duplex is full
  Autonegotiate is Enabled

Link is good on FE port 1 connected to device: FPC1
  Speed is 100 MB
  Duplex is full
  Autonegotiate is Enabled

Link is good on FE port 2 connected to device: FPC2
  Speed is 100 MB
  Duplex is full
  Autonegotiate is Enabled

Link is good on FE port 8 connected to device: SPMB
  Speed is 100 MB
  Duplex is full
  Autonegotiate is Enabled

Link is good on FE port 10 connected to device: SCC
  Speed is 100 MB
  Duplex is full
  Autonegotiate is Enabled
```

show chassis ethernet-switch errors

```
user@host> show chassis ethernet-switch errors
Accumulated error counts for port 0 connected to device FPC0:
  MLT3           2
```

```
  Lock           0
  Xmit           0
  ESD            0
  False carrier  2
  Disconnects    0
  FX mode        0
Accumulated error counts for port 1 connected to device FPC1:
  MLT3           2
  Lock           0
  Xmit           0
  ESD            0
  False carrier  2
  Disconnects    0
  FX mode        0
Accumulated error counts for port 2 connected to device FPC2:
  MLT3           2
  Lock           0
  Xmit           0
  ESD            0
  False carrier  3
  Disconnects    0
  FX mode        0
Accumulated error counts for port 3 connected to device FPC3:
  MLT3           0
  Lock           0
  Xmit           0
  ESD            0
  False carrier  0
  Disconnects    0
Accumulated error counts for port 4 connected to device Nothing:
   MLT3           0
   Lock           0
   Xmit           0
   ESD            0
   False carrier  0
   Disconnects    0
   FX mode        0
...
```

show chassis ethernet-switch errors (TX Matrix Plus Router)

```
user@host> show chassis ethernet-switch errors
sfc0-re0:
--------------------------------------------------------------------------
Displaying error for switch 0

Displaying error for switch 1
Accumulated error counts for port 0 connected to device LCC0:
  MLT3           0
  Lock           0
  Xmit           0
  ESD            0
  False carrier  0
  Disconnects    0
  FX mode        0

lcc0-re0:
--------------------------------------------------------------------------
Displaying error for switch 0
Accumulated error counts for port 6 connected to device FPC0:
  MLT3           0
  Lock           0
  Xmit           0
  ESD            0
  False carrier  5
  Disconnects    0
  FX mode        0
Accumulated error counts for port 7 connected to device FPC1:
  MLT3           0
  Lock           0
  Xmit           0
  ESD            0
  False carrier  7
  Disconnects    0
  FX mode        0
Accumulated error counts for port 19 connected to device Other RE:
  MLT3           0
  Lock           0
  Xmit           0
  ESD            0
  False carrier  0
```

```
  Disconnects    0
  FX mode        0
Accumulated error counts for port 20 connected to device SFC0:
  MLT3           0
  Lock           0
  Xmit           0
  ESD            0
  False carrier  0
  Disconnects    0
  FX mode        0
```

show chassis ethernet-switch sfc errors (TX Matrix Plus Router)

```
user@host> show chassis ethernet-switch errors
switch sfc
sfc0-re0:
--------------------------------------------------------------------------
Displaying error for switch 1
Accumulated error counts for port 0 connected to device LCC0:
  MLT3           0
  Lock           0
  Xmit           0
  ESD            0
  False carrier  0
  Disconnects    0
  FX mode        0
Accumulated error counts for port 2 connected to device LCC1:
  MLT3           0
  Lock           0
  Xmit           0
  ESD            0
  False carrier  0
  Disconnects    0
  FX mode        0
Accumulated error counts for port 4 connected to device LCC2:
  MLT3           0
  Lock           0
  Xmit           0
  ESD            0
  False carrier  0
  Disconnects    0
```

```
  FX mode        0
Accumulated error counts for port 6 connected to device LCC3:
  MLT3           0
  Lock           0
  Xmit           0
  ESD            0
  False carrier  0
  Disconnects    0
  FX mode        0

lcc0-re0:
--------------------------------------------------------------------------
error: command is not valid on the t1600

lcc1-re0:
--------------------------------------------------------------------------
error: command is not valid on the t1600

lcc2-re0:
--------------------------------------------------------------------------
error: command is not valid on the t1600

lcc3-re0:
--------------------------------------------------------------------------
error: command is not valid on the t1600
```

show chassis ethernet-switch statistics (TX Matrix Plus Router)

```
user@host> show chassis ethernet-switch statistics
sfc0-re0:
--------------------------------------------------------------------------
Displaying port statistics for switch 0
Statistics for port 1 connected to device 1GSW:
  TX Packets 64 Octets        5183577
  TX Packets 65-127 Octets    67820
  TX Packets 128-255 Octets   772
  TX Packets 256-511 Octets   136
  TX Packets 512-1023 Octets  68
  TX Packets 1024-1518 Octets  10881
  TX Packets 1519-2047 Octets  0
  TX Packets 2048-4095 Octets  0
```

```
  TX Packets 4096-9216 Octets  0
  TX Packets 9217-16383 Octets  0
  TX Octets                   5263254
  TX Multicast Packets        16
  TX Broadcast Packets        723403
  TX PAUSEMAC Ctrl Frames     0
  TX Oversize Packets         0
  TX FCS Error Counter        0
  TX Fragment Counter         0
  TX Byte Counter             349922253
  TX Packet OK Counter        5263254
  TX Pause Packet Counter     0
  TX Unicast Counter          4539835
  RX Packets 64 Octets        6513629
  RX Packets 65-127 Octets    88761
  RX Packets 128-255 Octets   6382
  RX Packets 256-511 Octets   22027
  RX Packets 512-1023 Octets  4319
  RX Packets 1024-1518 Octets  49922
  RX Packets 1519-2047 Octets  0
  RX Packets 2048-4095 Octets  0
  RX Packets 4096-9216 Octets  0
  RX Packets 9217-16383 Octets  0
  RX Octets                   6685040
  RX Multicast Packets        4
  RX Broadcast Packets        2137376
  RX FCS Errors               0
  RX Fragments                0
  RX MAC Control Packets      0
  RX Out of Range Length      0
  RX Undersize Packets        0
  RX Oversize Packets         0
  RX Jabbers                  0
  RX Control Frame Counter    0
  RX Pause Frame Counter      0
  RX Byte Counter             509224602
  RX Unicast Frame Count      4547660
  RX Packet OK Count          6685040
Statistics for port 9 connected to device RE1:
  TX Packets 64 Octets        2500318
  TX Packets 65-127 Octets    443
  TX Packets 128-255 Octets   0
  TX Packets 256-511 Octets   0
```

```
  TX Packets 512-1023 Octets  0
  TX Packets 1024-1518 Octets  0
  TX Packets 1519-2047 Octets  0
  TX Packets 2048-4095 Octets  0
  TX Packets 4096-9216 Octets  0
  TX Packets 9217-16383 Octets  0
  TX Octets                   2500761
  TX Multicast Packets        4
  TX Broadcast Packets        2500757
  TX PAUSEMAC Ctrl Frames     0
  TX Oversize Packets         0
  TX FCS Error Counter        0
  TX Fragment Counter         0
  TX Byte Counter             160049670
  TX Packet OK Counter        0
  TX Pause Packet Counter     0
  TX Unicast Counter          0
  RX Packets 64 Octets        701191
  RX Packets 65-127 Octets    5882
  RX Packets 128-255 Octets   2
  RX Packets 256-511 Octets   0
  RX Packets 512-1023 Octets  17965
  RX Packets 1024-1518 Octets  7
  RX Packets 1519-2047 Octets  0
  RX Packets 2048-4095 Octets  0
  RX Packets 4096-9216 Octets  0
  RX Packets 9217-16383 Octets  0
  RX Octets                   725047
  RX Multicast Packets        8
  RX Broadcast Packets        2500757
  RX FCS Errors               0
  RX Fragments                0
  RX MAC Control Packets      0
  RX Out of Range Length      0
  RX Undersize Packets        0
  RX Oversize Packets         0
  RX Jabbers                  0
  RX Control Frame Counter    0
  RX Pause Frame Counter      0
  RX Byte Counter             62402656
  RX Unicast Frame Count      0
  RX Packet OK Count          0
Statistics for port 17 connected to device RE0:
```

```
TX Packets 64 Octets        7214818
TX Packets 65-127 Octets    94640
TX Packets 128-255 Octets   6384
TX Packets 256-511 Octets   22027
TX Packets 512-1023 Octets  22284
TX Packets 1024-1518 Octets  49929
TX Packets 1519-2047 Octets  0
TX Packets 2048-4095 Octets  0
TX Packets 4096-9216 Octets  0
TX Packets 9217-16383 Octets  0
TX Octets                   7410082
TX Multicast Packets        12
TX Broadcast Packets        2497247
TX PAUSEMAC Ctrl Frames     0
TX Oversize Packets         0
TX FCS Error Counter        0
TX Fragment Counter         0
TX Byte Counter             571626932
TX Packet OK Counter        0
TX Pause Packet Counter     0
TX Unicast Counter          0
RX Packets 64 Octets        4823701
RX Packets 65-127 Octets    67812
RX Packets 128-255 Octets   772
RX Packets 256-511 Octets   136
RX Packets 512-1023 Octets  68
RX Packets 1024-1518 Octets  10881
RX Packets 1519-2047 Octets  0
RX Packets 2048-4095 Octets  0
RX Packets 4096-9216 Octets  0
RX Packets 9217-16383 Octets  0
RX Octets                   4903370
RX Multicast Packets        8
RX Broadcast Packets        2497247
RX FCS Errors               0
RX Fragments                0
RX MAC Control Packets      0
RX Out of Range Length      0
RX Undersize Packets        0
RX Oversize Packets         0
RX Jabbers                  0
RX Control Frame Counter    0
RX Pause Frame Counter      0
```

```
  RX Byte Counter             326889517
  RX Unicast Frame Count      0
  RX Packet OK Count          0

Displaying port statistics for switch 1
Statistics for port 0 connected to device LCC0:
  TX Packets 64 Octets        5053443
  TX Packets 65-127 Octets    59737
  TX Packets 128-255 Octets   768
  TX Packets 256-511 Octets   87
  TX Packets 512-1023 Octets  68
  TX Packets 1024-1518 Octets  85
  TX Packets 1519-2047 Octets  0
  TX Packets 2048-4095 Octets  0
  TX Packets 4096-9216 Octets  0
  TX 1519-1522 Good Vlan frms  0
  TX Octets                   5114188
  TX Multicast Packets        16
  TX Broadcast Packets        1125742
  TX Single Collision frames  0
  TX Mult. Collision frames   0
  TX Late Collisions          0
  TX Excessive Collisions     0
  TX Collision frames         0
  TX PAUSEMAC Ctrl Frames     0
  TX MAC ctrl frames          0
  TX Frame deferred Xmns      0
  TX Frame excessive deferl   0
  TX Oversize Packets         0
  TX Jabbers                  0
  TX FCS Error Counter        0
  TX Fragment Counter         0
  TX Byte Counter             329291449
  RX Packets 64 Octets        5640175
  RX Packets 65-127 Octets    79875
  RX Packets 128-255 Octets   6338
  RX Packets 256-511 Octets   165
  RX Packets 512-1023 Octets  4317
  RX Packets 1024-1518 Octets  10
  RX Packets 1519-2047 Octets  0
  RX Packets 2048-4095 Octets  0
  RX Packets 4096-9216 Octets  0
  RX Octets                   5730880
```

```
  RX Multicast Packets        4
  RX Broadcast Packets        1735007
  RX FCS Errors               0
  RX Align Errors             0
  RX Fragments                0
  RX Symbol errors            0
  RX Unsupported opcodes      0
  RX Out of Range Length      0
  RX False Carrier Errors     0
  RX Undersize Packets        0
  RX Oversize Packets         0
  RX Jabbers                  0
  RX 1519-1522 Good Vlan frms 0
  RX MTU Exceed Counter       0
  RX Control Frame Counter    0
RX Pause Frame Counter      0
  RX Byte Counter             371282850
Statistics for port 18 connected to device SPMB:
  TX Packets 64 Octets        2990326
  TX Packets 65-127 Octets    8572
  TX Packets 128-255 Octets   4
  TX Packets 256-511 Octets   49
  TX Packets 512-1023 Octets  0
  TX Packets 1024-1518 Octets  10793
  TX Packets 1519-2047 Octets  0
  TX Packets 2048-4095 Octets  0
  TX Packets 4096-9216 Octets  0
  TX 1519-1522 Good Vlan frms  0
  TX Octets                   3009744
  TX Multicast Packets        20
  TX Broadcast Packets        2458322
  TX Single Collision frames  0
  TX Mult. Collision frames   0
  TX Late Collisions          0
  TX Excessive Collisions     0
  TX Collision frames         0
  TX PAUSEMAC Ctrl Frames     0
  TX MAC ctrl frames          0
  TX Frame deferred Xmns      0
  TX Frame excessive deferl   0
  TX Oversize Packets         0
  TX Jabbers                  0
  TX FCS Error Counter        0
```

```
  TX Fragment Counter         0
  TX Byte Counter             203712524
  RX Packets 64 Octets        873454
  RX Packets 65-127 Octets    8886
  RX Packets 128-255 Octets   44
  RX Packets 256-511 Octets   21862
  RX Packets 512-1023 Octets  2
  RX Packets 1024-1518 Octets  49912
  RX Packets 1519-2047 Octets  0
  RX Packets 2048-4095 Octets  0
  RX Packets 4096-9216 Octets  0
  RX Octets                   954160
  RX Multicast Packets        0
  RX Broadcast Packets        402369
  RX FCS Errors               0
  RX Align Errors             0
  RX Fragments                0
  RX Symbol errors            0
  RX Unsupported opcodes      0
  RX Out of Range Length      0
  RX False Carrier Errors     0
  RX Undersize Packets        0
  RX Oversize Packets         0
  RX Jabbers                  0
  RX 1519-1522 Good Vlan frms 0
  RX MTU Exceed Counter       0
  RX Control Frame Counter    0
  RX Pause Frame Counter      0
  RX Byte Counter             137941752
...
```

show chassis ethernet-switch (T4000 Router)

```
user@host> show chassis ethernet-switch
Displaying summary for switch 0
Link is good on GE port 6 connected to device: FPC0
  Speed is 100Mb
  Duplex is full
  Autonegotiate is Enabled
  False carrier sense count = 04
```

```
Link is good on GE port 9 connected to device: FPC3
  Speed is 100Mb
  Duplex is full
  Autonegotiate is Enabled
  False carrier sense count = 03

Link is good on GE port 11 connected to device: FPC5
  Speed is 100Mb
  Duplex is full
  Autonegotiate is Enabled
  False carrier sense count = 03

Link is good on GE port 12 connected to device: FPC6
  Speed is 100Mb
  Duplex is full
  Autonegotiate is Enabled
  False carrier sense count = 03

Link is good on GE port 14 connected to device: SPMB
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Enabled

Link is good on GE port 18 connected to device: RE
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Disabled

Link is good on GE port 19 connected to device: Other RE
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Enabled
```

show chassis ethernet-switch errors (T4000 Router)

```
user@host> show chassis ethernet-switch errors

Displaying error for switch 0
Accumulated error counts for port 6 connected to device FPC0:
  MLT3           0
  Lock           0
```

```
  Xmit           0
  ESD            0
  False carrier  4
  Disconnects    0
  FX mode        0
Accumulated error counts for port 9 connected to device FPC3:
  MLT3           0
  Lock           0
  Xmit           0
  ESD            0
  False carrier  3
  Disconnects    0
  FX mode        0
Accumulated error counts for port 11 connected to device FPC5:
  MLT3           0
  Lock           0
  Xmit           0
  ESD            0
  False carrier  3
  Disconnects    0
  FX mode        0
Accumulated error counts for port 12 connected to device FPC6:
  MLT3           0
  Lock           0
  Xmit           0
  ESD            0
  False carrier  3
  Disconnects    0
  FX mode        0
Accumulated error counts for port 19 connected to device Other RE:
  MLT3           0
  Lock           0
  Xmit           0
  ESD            0
  False carrier  0
  Disconnects    0
  FX mode        0
```

show chassis ethernet-switch (PTX5000 Packet Transport Router)

```
user@host> show chassis ethernet-switch
Displaying summary for switch 0
Link is good on XE port 2 connected to device: SPMB
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Disabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is good on XE port 11 connected to device: FPC7
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Disabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is good on XE port 12 connected to device: FPC6
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Disabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is good on XE port 13 connected to device: FPC5
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Disabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is good on XE port 15 connected to device: FPC3
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Disabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is good on XE port 16 connected to device: FPC2
  Speed is 1000Mb
  Duplex is full
```

```
  Autonegotiate is Disabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is good on XE port 18 connected to device: FPC0
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Disabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is good on XE port 19 connected to device: OTHER RE
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Disabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled

Link is good on XE port 20 connected to device: RE
  Speed is 1000Mb
  Duplex is full
  Autonegotiate is Disabled
  Flow Control TX is Disabled
  Flow Control RX is Disabled
```

show chassis ethernet-switch statistics (PTX5000 Packet Transport Router)

```
user@host> show chassis ethernet-switch statistics
Displaying port statistics for switch 0
Statistics for port 2 connected to device SPMB:
  TX Packets 64 Octets        10942
  TX Packets 65-127 Octets    843
  TX Packets 128-255 Octets   2
  TX Packets 256-511 Octets   2
  TX Packets 512-1023 Octets  0
  TX Packets 1024-1518 Octets  6862
  TX Packets 1519-2047 Octets  0
  TX Packets 2048-4095 Octets  0
  TX Packets 4096-9216 Octets  0
  TX Packets 9217-16383 Octets  0
  TX Octets                   18651
```

```
  TX Multicast Packets        6
  TX Broadcast Packets        10331
  TX PAUSEMAC Ctrl Frames     0
  TX Oversize Packets         0
  TX FCS Error Counter        0
  TX Fragment Counter         0
  TX Byte Counter             8105166
  TX Packet OK Counter        0
  TX Pause Packet Counter     0
  TX Unicast Counter          0
  RX Packets 64 Octets        8679
  RX Packets 65-127 Octets    2364
  RX Packets 128-255 Octets   531
  RX Packets 256-511 Octets   112
  RX Packets 512-1023 Octets  26
  RX Packets 1024-1518 Octets  8
  RX Packets 1519-2047 Octets  0
  RX Packets 2048-4095 Octets  0
  RX Packets 4096-9216 Octets  0
  RX Packets 9217-16383 Octets  0
  RX Octets                   11720
  RX Multicast Packets        0
  RX Broadcast Packets        10331
  RX FCS Errors               0
  RX Fragments                0
  RX MAC Control Packets      0
  RX Out of Range Length      0
  RX Undersize Packets        0
  RX Oversize Packets         0
  RX Jabbers                  0
  RX Control Frame Counter    0
  RX Pause Frame Counter      0
  RX Byte Counter             938105
  RX Unicast Frame Count      0
  RX Packet OK Count          0
Statistics for port 11 connected to device FPC7:
  TX Packets 64 Octets        14492
  TX Packets 65-127 Octets    3542
  TX Packets 128-255 Octets   6
  TX Packets 256-511 Octets   45
  TX Packets 512-1023 Octets  60


Continued...
```

```
Statistics for port 18 connected to device FPC0:
  TX Packets 64 Octets        15212
  TX Packets 65-127 Octets    3810
  TX Packets 128-255 Octets   6
  TX Packets 256-511 Octets   43
  TX Packets 512-1023 Octets  66
  TX Packets 1024-1518 Octets  169
  TX Packets 1519-2047 Octets  0
  TX Packets 2048-4095 Octets  0
  TX Packets 4096-9216 Octets  0
  TX Packets 9217-16383 Octets  0
  TX Octets                   19306
  TX Multicast Packets        0
  TX Broadcast Packets        10886
  TX PAUSEMAC Ctrl Frames     0
  TX Oversize Packets         0
  TX FCS Error Counter        0
  TX Fragment Counter         0
  TX Byte Counter             1569412
  TX Packet OK Counter        0
  TX Pause Packet Counter     0
  TX Unicast Counter          0
  RX Packets 64 Octets        17994
  RX Packets 65-127 Octets    8006
  RX Packets 128-255 Octets   230
  RX Packets 256-511 Octets   19
  RX Packets 512-1023 Octets  53
  RX Packets 1024-1518 Octets  11
  RX Packets 1519-2047 Octets  0
  RX Packets 2048-4095 Octets  0
  RX Packets 4096-9216 Octets  0
  RX Packets 9217-16383 Octets  0
  RX Octets                   26313
  RX Multicast Packets        0
  RX Broadcast Packets        10886
  RX FCS Errors               0
  RX Fragments                0
  RX MAC Control Packets      0
  RX Out of Range Length      0
  RX Undersize Packets        0
  RX Oversize Packets         0
  RX Jabbers                  0
```

```
  RX Control Frame Counter    2
  RX Pause Frame Counter      2
  RX Byte Counter             1836287
  RX Unicast Frame Count      0
  RX Packet OK Count          0
Statistics for port 19 connected to device OTHER RE:
  TX Packets 64 Octets        10234
  TX Packets 65-127 Octets    162
  TX Packets 128-255 Octets   0
  TX Packets 256-511 Octets   0
  TX Packets 512-1023 Octets  0
  TX Packets 1024-1518 Octets  0
  TX Packets 1519-2047 Octets  0
  TX Packets 2048-4095 Octets  0
  TX Packets 4096-9216 Octets  0
  TX Packets 9217-16383 Octets  0
  TX Octets                   10396
  TX Multicast Packets        8
  TX Broadcast Packets        10317
  TX PAUSEMAC Ctrl Frames     0
  TX Oversize Packets         0
  TX FCS Error Counter        0
  TX Fragment Counter         0
  TX Byte Counter             666260
  TX Packet OK Counter        0
  TX Pause Packet Counter     0
  TX Unicast Counter          0
  RX Packets 64 Octets        4073
  RX Packets 65-127 Octets    325
  RX Packets 128-255 Octets   1
  RX Packets 256-511 Octets   0
  RX Packets 512-1023 Octets  0
  RX Packets 1024-1518 Octets  72
  RX Packets 1519-2047 Octets  0
  RX Packets 2048-4095 Octets  0
  RX Packets 4096-9216 Octets  0
  RX Packets 9217-16383 Octets  0
  RX Octets                   4471
  RX Multicast Packets        0
  RX Broadcast Packets        10317
  RX FCS Errors               0
  RX Fragments                0
  RX MAC Control Packets      0
```

```
  RX Out of Range Length      0
  RX Undersize Packets        0
  RX Oversize Packets         0
  RX Jabbers                  0
  RX Control Frame Counter    0
  RX Pause Frame Counter      0
  RX Byte Counter             387333
  RX Unicast Frame Count      0
  RX Packet OK Count          0
Statistics for port 20 connected to device RE:
  TX Packets 64 Octets        658856
  TX Packets 65-127 Octets    45535
  TX Packets 128-255 Octets   1900
  TX Packets 256-511 Octets   532
  TX Packets 512-1023 Octets  372
  TX Packets 1024-1518 Octets  191
  TX Packets 1519-2047 Octets  0
  TX Packets 2048-4095 Octets  0
  TX Packets 4096-9216 Octets  0
  TX Packets 9217-16383 Octets  0
  TX Octets                   707386
  TX Multicast Packets        0
  TX Broadcast Packets        10421
  TX PAUSEMAC Ctrl Frames     0
  TX Oversize Packets         0
  TX FCS Error Counter        0
  TX Fragment Counter         0
  TX Byte Counter             46608676
  TX Packet OK Counter        0
  TX Pause Packet Counter     0
  TX Unicast Counter          0
  RX Packets 64 Octets        27394
  RX Packets 65-127 Octets    20271
  RX Packets 128-255 Octets   78
  RX Packets 256-511 Octets   215
  RX Packets 512-1023 Octets  269
  RX Packets 1024-1518 Octets  253370
  RX Packets 1519-2047 Octets  0
  RX Packets 2048-4095 Octets  0
  RX Packets 4096-9216 Octets  0
  RX Packets 9217-16383 Octets  0
  RX Octets                   301597
  RX Multicast Packets        8
```

```
  RX Broadcast Packets        10421
  RX FCS Errors               0
  RX Fragments                0
  RX MAC Control Packets      0
  RX Out of Range Length      0
  RX Undersize Packets        0
  RX Oversize Packets         0
  RX Jabbers                  0
  RX Control Frame Counter    0
  RX Pause Frame Counter      0
  RX Byte Counter             275043436
  RX Unicast Frame Count      0
  RX Packet OK Count          0

Continued ...
```

show chassis ethernet-switch port-state (PTX5000 Packet Transport Router)

```
user@host> show chassis ethernet-switch port-state
Displaying port state for switch 0
Port       : 02
Target     : SPMB

Error reading port 2 connected to device: SPMB
```

Release Information

Command introduced before Junos OS Release 7.4.

The `sfc` option introduced in Junos OS Release 9.6 for the TX Matrix Plus router.

show chassis fabric degraded-fabric-reachability

IN THIS SECTION

- Syntax | 1053
- Description | 1053
- Additional Information | 1053
- Required Privilege Level | 1053
- Output Fields | 1054
- Sample Output | 1054
- Release Information | 1055

Syntax

```
show chassis fabric degraded-fabric-reachability
```

Description

Display the current state of reachability between the Packet Forwarding Engines in the system.

Additional Information

Required Privilege Level

view

Output Fields

Table 59 on page 1054 lists the output fields for the `show chassis fabric degraded-fabric-reachability` command. Output fields are listed in the approximate order in which they appear.

Table 59: show chassis fabric degraded-fabric-reachability Output Fields

Field Name	Field Description
FPC	Display fabric reachability for the displayed FPC slot. PTX10016 supports 16 FPCs and output detail for each FPC slot.
PFE	Display fabric reachability for the displayed PFE slot on a per SIB and plane basis.
SIBx_Plane y	Display the SIB (x) and plane (y) where link errors occurred.
Link errors FPC/PFEs	Display the list of FPC and PFE slots that are unreachable for the displayed SIB and plane due to link errors.

Sample Output

show chassis fabric degraded-fabric-reachability

```
user@host> show chassis fabric degraded-fabric-reachability
Degraded Fabric reachability Information:
FPC #0
    PFE #0
      SIB0_Plane 0
           Link errors  FPC/PFEs    2/0 5/0 5/1 5/2 5/3
      SIB0_Plane 1
           Link errors  FPC/PFEs    2/0 5/0
    PFE #1
      SIB0_Plane 0
           Link errors  FPC/PFEs    2/0 5/0 5/1 5/2 5/3
      SIB0_Plane 1
           Link errors  FPC/PFEs    2/0 5/0
```

Release Information

Command introduced in Junos OS Release 12.1X48R4.

RELATED DOCUMENTATION

show chassis fabric errors | 1089

show chassis fabric reachability | 1203

degraded | 266

show chassis fabric destinations

IN THIS SECTION

- Syntax | 1055
- Syntax (MX240, MX480, MX960 , MX2010, MX2020, MX10003, MX10008, and MX2008 Universal Routing Platforms) | 1056
- Description | 1056
- Options | 1056
- Required Privilege Level | 1056
- Output Fields | 1056
- Sample Output | 1057
- Release Information | 1084

Syntax

```
show chassis fabric destinations
```

Syntax (MX240, MX480, MX960 , MX2010, MX2020, MX10003, MX10008, and MX2008 Universal Routing Platforms)

```
show chassis fabric destinations fpc <fpc-slot-number>
<extended>
```

Description

Display the state of fabric destinations for all FPCs.

Options

none	Display information about the fabric destinations of all FPCs.
fpc-slot-number	(Optional) Display information about the specified FPC. For MX2020 routers, replace *fpc-slot-number* with a value from 0 through 19. For MX2010 and MX2008 routers, replace *fpc-slot-number* with a value from 0 through 9. For MX10003, replace *fpc-slot-number* with a value from 0 through 1.
extended	(Optional) (MX2020, MX2010, and MX2008 routers with SFB2 only) Display information about the fabric destination of all 24 planes for each FPC.

Required Privilege Level

view

Output Fields

Table 60 on page 1057 lists the output fields for the `show chassis fabric destinations` command. Output fields are listed in the approximate order in which they appear.

Table 60: show chassis fabric destinations Output Fields

Field Name	Field Description
Fabric destinations state	Indicates the state of the fabric destinations: • 0—Destination is non-existent. • 2—Destination is enabled. • 3—Destination is disabled. • 6—Destination is in erroneous state and is disabled.
Flexible PIC Concentrator (FPC) number	Source FPC number.
Packet Forwarding Engine number	Source Packet Forwarding Engine number.
Plane number	Source plane number.

Sample Output

show chassis fabric destinations fpc 1 (MX240 Router)

In the output, the values followed by the plane number denote multiple quadruples. The first quadruple specifies FPC1, the second quadrapule specifies FPC2 and so on. Each quadruple specifies the states of the fabric plane to the Packet Forwarding Engines.

```
user@host> show chassis fabric destinations
fpc 1

    Fabric destinations state:
       0: non-existent
       2: enabled
       3: disabled
       6: dest-err and disabled
```

```
    FPC 1
     PFE 0
      Plane 0   0000 3300 3333
      Plane 1   0000 2200 2222
      Plane 2   0000 2200 2222
      Plane 3   0000 2200 2222
      Plane 4   0000 2200 2222
      Plane 5   0000 3300 3333
      Plane 6   0000 3300 3333
      Plane 7   0000 3300 3333
     PFE 1
      Plane 0   0000 3300 3333
      Plane 1   0000 2200 2222
      Plane 2   0000 2200 2222
      Plane 3   0000 2200 2222
      Plane 4   0000 2200 2222
      Plane 5   0000 3300 3333
      Plane 6   0000 3300 3333
      Plane 7   0000 3300 3333
```

show chassis fabric destinations (MX10008 Router)

```
user@host> show chassis fabric destinations

Fabric destinations state:
   0: non-existent
   2: enabled
   3: disabled
   6: dest-err and disabled

FPC 1
 PFE 0
  Plane 0   000000 222222 000000   000000 000000 222222   000000 000000
  Plane 1   000000 222222 000000   000000 000000 222222   000000 000000
  Plane 2   000000 222222 000000   000000 000000 222222   000000 000000
  Plane 3   000000 222222 000000   000000 000000 222222   000000 000000
  Plane 4   000000 333333 000000   000000 000000 333333   000000 000000
  Plane 5   000000 333333 000000   000000 000000 333333   000000 000000
 PFE 1
  Plane 0   000000 222222 000000   000000 000000 222222   000000 000000
```

```
  Plane 1   000000 222222 000000   000000 000000 222222   000000 000000
  Plane 2   000000 222222 000000   000000 000000 222222   000000 000000
  Plane 3   000000 222222 000000   000000 000000 222222   000000 000000
  Plane 4   000000 333333 000000   000000 000000 333333   000000 000000
  Plane 5   000000 333333 000000   000000 000000 333333   000000 000000
 PFE 2
  Plane 0   000000 222222 000000   000000 000000 222222   000000 000000
  Plane 1   000000 222222 000000   000000 000000 222222   000000 000000
  Plane 2   000000 222222 000000   000000 000000 222222   000000 000000
  Plane 3   000000 222222 000000   000000 000000 222222   000000 000000
  Plane 4   000000 333333 000000   000000 000000 333333   000000 000000
  Plane 5   000000 333333 000000   000000 000000 333333   000000 000000
 PFE 3
  Plane 0   000000 222222 000000   000000 000000 222222   000000 000000
  Plane 1   000000 222222 000000   000000 000000 222222   000000 000000
  Plane 2   000000 222222 000000   000000 000000 222222   000000 000000
  Plane 3   000000 222222 000000   000000 000000 222222   000000 000000
  Plane 4   000000 333333 000000   000000 000000 333333   000000 000000
  Plane 5   000000 333333 000000   000000 000000 333333   000000 000000
 PFE 4
  Plane 0   000000 222222 000000   000000 000000 222222   000000 000000
  Plane 1   000000 222222 000000   000000 000000 222222   000000 000000
  Plane 2   000000 222222 000000   000000 000000 222222   000000 000000
  Plane 3   000000 222222 000000   000000 000000 222222   000000 000000
  Plane 4   000000 333333 000000   000000 000000 333333   000000 000000
  Plane 5   000000 333333 000000   000000 000000 333333   000000 000000
 PFE 5
  Plane 0   000000 222222 000000   000000 000000 222222   000000 000000
  Plane 1   000000 222222 000000   000000 000000 222222   000000 000000
  Plane 2   000000 222222 000000   000000 000000 222222   000000 000000
  Plane 3   000000 222222 000000   000000 000000 222222   000000 000000
  Plane 4   000000 333333 000000   000000 000000 333333   000000 000000
  Plane 5   000000 333333 000000   000000 000000 333333   000000 000000
FPC 5
 PFE 0
  Plane 0   000000 222222 000000   000000 000000 222222   000000 000000
  Plane 1   000000 222222 000000   000000 000000 222222   000000 000000
  Plane 2   000000 222222 000000   000000 000000 222222   000000 000000
  Plane 3   000000 222222 000000   000000 000000 222222   000000 000000
  Plane 4   000000 333333 000000   000000 000000 333333   000000 000000
  Plane 5   000000 333333 000000   000000 000000 333333   000000 000000
 PFE 1
  Plane 0   000000 222222 000000   000000 000000 222222   000000 000000
```

```
  Plane 1   000000 222222 000000   000000 000000 222222   000000 000000
  Plane 2   000000 222222 000000   000000 000000 222222   000000 000000
  Plane 3   000000 222222 000000   000000 000000 222222   000000 000000
  Plane 4   000000 333333 000000   000000 000000 333333   000000 000000
  Plane 5   000000 333333 000000   000000 000000 333333   000000 000000
 PFE 2
  Plane 0   000000 222222 000000   000000 000000 222222   000000 000000
  Plane 1   000000 222222 000000   000000 000000 222222   000000 000000
  Plane 2   000000 222222 000000   000000 000000 222222   000000 000000
  Plane 3   000000 222222 000000   000000 000000 222222   000000 000000
  Plane 4   000000 333333 000000   000000 000000 333333   000000 000000
  Plane 5   000000 333333 000000   000000 000000 333333   000000 000000
 PFE 3
  Plane 0   000000 222222 000000   000000 000000 222222   000000 000000
  Plane 1   000000 222222 000000   000000 000000 222222   000000 000000
  Plane 2   000000 222222 000000   000000 000000 222222   000000 000000
  Plane 3   000000 222222 000000   000000 000000 222222   000000 000000
  Plane 4   000000 333333 000000   000000 000000 333333   000000 000000
  Plane 5   000000 333333 000000   000000 000000 333333   000000 000000
 PFE 4
  Plane 0   000000 222222 000000   000000 000000 222222   000000 000000
  Plane 1   000000 222222 000000   000000 000000 222222   000000 000000
  Plane 2   000000 222222 000000   000000 000000 222222   000000 000000
  Plane 3   000000 222222 000000   000000 000000 222222   000000 000000
  Plane 4   000000 333333 000000   000000 000000 333333   000000 000000
  Plane 5   000000 333333 000000   000000 000000 333333   000000 000000
 PFE 5
  Plane 0   000000 222222 000000   000000 000000 222222   000000 000000
  Plane 1   000000 222222 000000   000000 000000 222222   000000 000000
  Plane 2   000000 222222 000000   000000 000000 222222   000000 000000
  Plane 3   000000 222222 000000   000000 000000 222222   000000 000000
  Plane 4   000000 333333 000000   000000 000000 333333   000000 000000
  Plane 5   000000 333333 000000   000000 000000 333333   000000 000000
```

show chassis fabric destinations fpc 4 (MX480 Router with MPC4E)

```
user@host > show chassis fabric destinations fpc 4
Fabric destinations state:
   0: non-existent
   2: enabled
   3: disabled
```

```
   6: dest-err and disabled

FPC 4
 PFE 0
  Plane 0   2200 2222 0000   2000 2200 0000
  Plane 1   2200 2222 0000   2000 2200 0000
  Plane 2   2200 2222 0000   2000 2200 0000
  Plane 3   2200 2222 0000   2000 2200 0000
  Plane 4   3300 3333 0000   3000 3300 0000
  Plane 5   3300 3333 0000   3000 3300 0000
  Plane 6   3300 3333 0000   3000 3300 0000
  Plane 7   3300 3333 0000   3000 3300 0000
 PFE 1
  Plane 0   2200 2222 0000   2000 2200 0000
  Plane 1   2200 2222 0000   2000 2200 0000
  Plane 2   2200 2222 0000   2000 2200 0000
  Plane 3   2200 2222 0000   2000 2200 0000
  Plane 4   3300 3333 0000   3000 3300 0000
  Plane 5   3300 3333 0000   3000 3300 0000
  Plane 6   3300 3333 0000   3000 3300 0000
  Plane 7   3300 3333 0000   3000 3300 0000
```

show chassis fabric destinations (MX960 Router)

```
user@host> show chassis fabric destinations

    Fabric destinations state:
       0: non-existent
       2: enabled
       3: disabled
       6: dest-err and disabled

    FPC 1
     PFE 0
      Plane 0   0000 3300 3333
      Plane 1   0000 2200 2222
      Plane 2   0000 2200 2222
      Plane 3   0000 2200 2222
      Plane 4   0000 2200 2222
      Plane 5   0000 3300 3333
      Plane 6   0000 3300 3333
```

```
      Plane 7   0000 3300 3333
     PFE 1
      Plane 0   0000 3300 3333
      Plane 1   0000 2200 2222
      Plane 2   0000 2200 2222
      Plane 3   0000 2200 2222
      Plane 4   0000 2200 2222
      Plane 5   0000 3300 3333
      Plane 6   0000 3300 3333
      Plane 7   0000 3300 3333
    FPC 2
     PFE 0
      Plane 0   0000 3300 3333
      Plane 1   0000 2200 2222
      Plane 2   0000 2200 2222
      Plane 3   0000 2200 2222
      Plane 4   0000 2200 2222
      Plane 5   0000 3300 3333
      Plane 6   0000 3300 3333
      Plane 7   0000 3300 3333
     PFE 1
      Plane 0   0000 3300 3333
      Plane 1   0000 2200 2222
      Plane 2   0000 2200 2222
      Plane 3   0000 2200 2222
      Plane 4   0000 2200 2222
      Plane 5   0000 3300 3333
      Plane 6   0000 3300 3333
      Plane 7   0000 3300 3333
     PFE 2
      Plane 0   0000 3300 3333
      Plane 1   0000 2200 2222
      Plane 2   0000 2200 2222
      Plane 3   0000 2200 2222
      Plane 4   0000 2200 2222
      Plane 5   0000 3300 3333
      Plane 6   0000 3300 3333
      Plane 7   0000 3300 3333
     PFE 3
      Plane 0   0000 3300 3333
      Plane 1   0000 2200 2222
      Plane 2   0000 2200 2222
      Plane 3   0000 2200 2222
```

```
      Plane 4   0000 2200 2222
      Plane 5   0000 3300 3333
      Plane 6   0000 3300 3333
      Plane 7   0000 3300 3333
```

show chassis fabric destinations fpc 1 (MX2020 Router)

```
user@host> show chassis fabric destinations
fpc 1
Fabric destinations state:
   0: non-existent
   2: enabled
   3: disabled
   6: dest-err and disabled

FPC 1
 PFE 0
  Plane 0   3333 3333 3333   3333 3333 3333   3333 3333 3333   3333 3333 3333   3333 3333 3333
3333 3333 3333   3333 3333
  Plane 1   2222 2222 2222   2222 2222 2222   2222 2222 2222   2222 2222 2222   2222 2222 2222
2222 2222 2222   2222 2222
  Plane 2   2222 2222 2222   2222 2222 2222   2222 2222 2222   2222 2222 2222   2222 2222 2222
2222 2222 2222   2222 2222
  Plane 3   2222 2222 2222   2222 2222 2222   2222 2222 2222   2222 2222 2222   2222 2222 2222
2222 2222 2222   2222 2222
  Plane 4   2222 2222 2222   2222 2222 2222   2222 2222 2222   2222 2222 2222   2222 2222 2222
2222 2222 2222   2222 2222
  Plane 5   2222 2222 2222   2222 2222 2222   2222 2222 2222   2222 2222 2222   2222 2222 2222
2222 2222 2222   2222 2222
  Plane 6   2222 2222 2222   2222 2222 2222   2222 2222 2222   2222 2222 2222   2222 2222 2222
2222 2222 2222   2222 2222
  Plane 7   2222 2222 2222   2222 2222 2222   2222 2222 2222   2222 2222 2222   2222 2222 2222
2222 2222 2222   2222 2222
 PFE 1
  Plane 0   3333 3333 3333   3333 3333 3333   3333 3333 3333   3333 3333 3333   3333 3333 3333
3333 3333 3333   3333 3333
  Plane 1   2222 2222 2222   2222 2222 2222   2222 2222 2222   2222 2222 2222   2222 2222 2222
2222 2222 2222   2222 2222
  Plane 2   2222 2222 2222   2222 2222 2222   2222 2222 2222   2222 2222 2222   2222 2222 2222
2222 2222 2222   2222 2222
```

```
  Plane 3   2222 2222 2222   2222 2222 2222   2222 2222 2222   2222 2222 2222   2222 2222 2222
2222 2222 2222   2222 2222
  Plane 4   2222 2222 2222   2222 2222 2222   2222 2222 2222   2222 2222 2222   2222 2222 2222
2222 2222 2222   2222 2222
  Plane 5   2222 2222 2222   2222 2222 2222   2222 2222 2222   2222 2222 2222   2222 2222 2222
2222 2222 2222   2222 2222
  Plane 6   2222 2222 2222   2222 2222 2222   2222 2222 2222   2222 2222 2222   2222 2222 2222
2222 2222 2222   2222 2222
  Plane 7   2222 2222 2222   2222 2222 2222   2222 2222 2222   2222 2222 2222   2222 2222 2222
2222 2222 2222   2222 2222
 PFE 2
  Plane 0   3333 3333 3333   3333 3333 3333   3333 3333 3333   3333 3333 3333   3333 3333 3333
3333 3333 3333   3333 3333
  Plane 1   2222 2222 2222   2222 2222 2222   2222 2222 2222   2222 2222 2222   2222 2222 2222
2222 2222 2222   2222 2222
  Plane 2   2222 2222 2222   2222 2222 2222   2222 2222 2222   2222 2222 2222   2222 2222 2222
2222 2222 2222   2222 2222
  Plane 3   2222 2222 2222   2222 2222 2222   2222 2222 2222   2222 2222 2222   2222 2222 2222
2222 2222 2222   2222 2222
  Plane 4   2222 2222 2222   2222 2222 2222   2222 2222 2222   2222 2222 2222   2222 2222 2222
2222 2222 2222   2222 2222
  Plane 5   2222 2222 2222   2222 2222 2222   2222 2222 2222   2222 2222 2222   2222 2222 2222
2222 2222 2222   2222 2222
  Plane 6   2222 2222 2222   2222 2222 2222   2222 2222 2222   2222 2222 2222   2222 2222 2222
2222 2222 2222   2222 2222
  Plane 7   2222 2222 2222   2222 2222 2222   2222 2222 2222   2222 2222 2222   2222 2222 2222
2222 2222 2222   2222 2222
 PFE 3
  Plane 0   3333 3333 3333   3333 3333 3333   3333 3333 3333   3333 3333 3333   3333 3333 3333
3333 3333 3333   3333 3333
  Plane 1   2222 2222 2222   2222 2222 2222   2222 2222 2222   2222 2222 2222   2222 2222 2222
2222 2222 2222   2222 2222
  Plane 2   2222 2222 2222   2222 2222 2222   2222 2222 2222   2222 2222 2222   2222 2222 2222
2222 2222 2222   2222 2222
  Plane 3   2222 2222 2222   2222 2222 2222   2222 2222 2222   2222 2222 2222   2222 2222 2222
2222 2222 2222   2222 2222
  Plane 4   2222 2222 2222   2222 2222 2222   2222 2222 2222   2222 2222 2222   2222 2222 2222
2222 2222 2222   2222 2222
  Plane 5   2222 2222 2222   2222 2222 2222   2222 2222 2222   2222 2222 2222   2222 2222 2222
2222 2222 2222   2222 2222
  Plane 6   2222 2222 2222   2222 2222 2222   2222 2222 2222   2222 2222 2222   2222 2222 2222
2222 2222 2222   2222 2222
```

```
  Plane 7   2222 2222 2222   2222 2222 2222   2222 2222 2222   2222 2222 2222   2222 2222 2222
2222 2222 2222   2222 2222
```

show chassis fabric destinations extended (MX2020 Router with SFB2)

```
user@host> show chassis fabric destinations extended
Fabric destinations state:
   0: non-existent
   2: enabled
   3: disabled
   6: dest-err and disabled

FPC 0
 PFE 0
  Plane 0   2000 2222 2200 2200 0000 0000 2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 1   2000 2222 2200 2200 0000 0000 2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 2   2000 2222 2200 2200 0000 0000 2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 3   6000 3333 3300 3300 0000 0000 3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
  Plane 4   2000 2222 2200 2200 0000 0000 2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 5   2000 2222 2200 2200 0000 0000 2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 6   2000 2222 2200 2200 0000 0000 2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 7   2000 2222 2200 2200 0000 0000 2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 8   6000 3333 3300 3300 0000 0000 3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
  Plane 9   6000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
  Plane 10  6000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
  Plane 11  6000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
  Plane 12  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 13  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
```

```
0000 2200 2200   0000 2222
  Plane 14  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 15  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 16  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 17  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 18  3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
  Plane 19  3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
  Plane 20  3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
  Plane 21  6000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
  Plane 22  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 23  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
FPC 1
 PFE 0
  Plane 0   2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 1   2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 2   2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 3   3000 3333 3300   2200 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 2200 2200   0000 2222
  Plane 4   3000 3333 3300   2200 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 2200 2200   0000 2222
  Plane 5   3000 3333 3300   2200 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 2200 2200   0000 2222
  Plane 6   3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
  Plane 7   3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
  Plane 8   3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333 Plane 9   3000 3333 3300   3300 0000 0000   3000 3000 0000   0000
0000 0000   3300 3300 0000   0000 3300 3300   0000 3333
  Plane 10  3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
```

```
0000 3300 3300   0000 3333
  Plane 11  3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
  Plane 12  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 13  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 14  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 15  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 16  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 17  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 18  3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
  Plane 19  3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
  Plane 20  3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
  Plane 21  3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
  Plane 22  3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
  Plane 23  3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
 PFE 1
  Plane 0   2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 1   2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 2   2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 3   3000 3333 3300   2200 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 2200 2200   0000 2222
  Plane 4   3000 3333 3300   2200 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 2200 2200   0000 2222
  Plane 5   3000 3333 3300   2200 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 2200 2200   0000 2222
  Plane 6   3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
  Plane 7   3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
```

```
0000 3300 3300   0000 3333
  Plane 8   3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
  Plane 9   3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
  Plane 10  3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
  Plane 11  3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
  Plane 12  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 13  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 14  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 15  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 16  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 17  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 18  3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
  Plane 19  3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
  Plane 20  3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
  Plane 21  3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
  Plane 22  3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
  Plane 23  3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
 PFE 2
  Plane 0   2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 1   2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 2   2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 3   3000 3333 3300   2200 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 2200 2200   0000 2222 Plane 4   3000 3333 3300   2200 0000 0000   3000 3000 0000   0000
0000 0000   3300 3300 0000   0000 2200 2200   0000 2222
```

```
  Plane 5   3000 3333 3300   2200 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 2200 2200   0000 2222
  Plane 6   3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
  Plane 7   3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
  Plane 8   3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
  Plane 9   3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
  Plane 10  3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
  Plane 11  3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
  Plane 12  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 13  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 14  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 15  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 16  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 17  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 18  3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
  Plane 19  3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
  Plane 20  3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
  Plane 21  3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
  Plane 22  3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
  Plane 23  3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
 PFE 3
  Plane 0   2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 1   2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
```

```
  Plane 2   2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 3   3000 3333 3300   2200 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 2200 2200   0000 2222
  Plane 4   3000 3333 3300   2200 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 2200 2200   0000 2222
  Plane 5   3000 3333 3300   2200 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 2200 2200   0000 2222
  Plane 6   3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
  Plane 7   3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
  Plane 8   3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
  Plane 9   3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
  Plane 10  3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
  Plane 11  3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
  Plane 12  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 13  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000
2222
  Plane 14  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 15  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 16  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 17  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 18  3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
  Plane 19  3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
  Plane 20  3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
  Plane 21  3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
  Plane 22  3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
```

```
  Plane 23  3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
....
FPC 19
 PFE 0
  Plane 0   2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 1   2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 2   2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 3   3000 2222 2200   2200 0000 0000   3000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 4   2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 5   2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 6   2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 7   2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 8   3000 2222 2200   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3200 0000
0000 2200 2200   0000 2222
  Plane 9   3000 2222 2200   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3200 0000
0000 2200 2200   0000 2222
  Plane 10  3000 2222 2200   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3200 0000
0000 2200 2200   0000 2222
  Plane 11  3000 2222 2200   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3200 0000
0000 2200 2200   0000 2222
  Plane 12  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 13  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 14  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 15  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 16  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 17  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 18  3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
```

```
  Plane 19  3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
  Plane 20  3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
  Plane 21  3000 2222 2200   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 22  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 23  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
 PFE 1
  Plane 0   2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 1   2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 2   2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 3   3000 2222 2200   2200 0000 0000   3000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 4   2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 5   2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 6   2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 7   2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 8   3000 2222 2200   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3200 0000
0000 2200 2200   0000 2222
  Plane 9   3000 2222 2200   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3200 0000
0000 2200 2200   0000 2222
  Plane 10  3000 2222 2200   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3200 0000
0000 2200 2200   0000 2222
  Plane 11  3000 2222 2200   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3200 0000
0000 2200 2200   0000 2222
  Plane 12  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 13  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 14  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 15  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
```

```
  Plane 16  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 17  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 18  3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
  Plane 19  3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
  Plane 20  3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
  Plane 21  3000 2222 2200   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 22  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 23  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
PFE 2
  Plane 0   2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 1   2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 2   2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 3   3000 2222 2200   2200 0000 0000   3000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 4   2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 5   2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 6   2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 7   2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 8   3000 2222 2200   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3200 0000
0000 2200 2200   0000 2222
  Plane 9   3000 2222 2200   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3200 0000
0000 2200 2200   0000 2222
  Plane 10  3000 2222 2200   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3200 0000
0000 2200 2200   0000 2222
  Plane 11  3000 2222 2200   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3200 0000
0000 2200 2200   0000 2222
  Plane 12  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
```

```
  Plane 13  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 14  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 15  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 16  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 17  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 18  3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
  Plane 19  3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
  Plane 20  3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
  Plane 21  3000 2222 2200   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 22  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 23  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
 PFE 3
  Plane 0   2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 1   2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 2   2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 3   3000 2222 2200   2200 0000 0000   3000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 4   2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 5   2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 6   2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 7   2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 8   3000 2222 2200   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3200 0000
0000 2200 2200   0000 2222
  Plane 9   3000 2222 2200   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3200 0000
0000 2200 2200   0000 2222
```

```
  Plane 10  3000 2222 2200   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3200 0000
0000 2200 2200   0000 2222
  Plane 11  3000 2222 2200   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3200 0000
0000 2200 2200   0000 2222
  Plane 12  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 13  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 14  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 15  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 16  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 17  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 18  3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
 Plane 19  3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
  Plane 20  3000 3333 3300   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 3300 0000
0000 3300 3300   0000 3333
  Plane 21  3000 2222 2200   3300 0000 0000   3000 3000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 22  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
  Plane 23  2000 2222 2200   2200 0000 0000   2000 2000 0000   0000 0000 0000   3300 2200 0000
0000 2200 2200   0000 2222
```

show chassis fabric destinations (MX2010 Router)

```
user@host> show chassis fabric destinations
Fabric destinations state:
   0: non-existent
   2: enabled
   3: disabled
   6: dest-err and disabled

FPC 0
 PFE 0
  Plane 0   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
```

```
  Plane 1   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 2   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 3   3300 3000 3300   3333 3000 3300   3333 3300 3000   3300
  Plane 4   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 5   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 6   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 7   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
 PFE 1
  Plane 0   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 1   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 2   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 3   3300 3000 3300   3333 3000 3300   3333 3300 3000   3300
  Plane 4   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 5   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 6   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 7   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
FPC 1
 PFE 0
  Plane 0   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 1   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 2   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 3   3300 3000 3300   3333 3000 3300   3333 3300 3000   3300
  Plane 4   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 5   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 6   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 7   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
FPC 2
 PFE 0
  Plane 0   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 1   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 2   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 3   3300 3000 3300   3333 3000 3300   3333 3300 3000   3300
  Plane 4   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 5   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 6   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 7   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
 PFE 1
  Plane 0   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 1   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 2   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 3   3300 3000 3300   3333 3000 3300   3333 3300 3000   3300
  Plane 4   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 5   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
```

```
  Plane 6   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 7   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200

FPC 3
 PFE 0
  Plane 0   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 1   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 2   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 3   3300 3000 3300   3333 3000 3300   3333 3300 3000   3300
  Plane 4   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 5   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 6   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 7   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
 PFE 1
  Plane 0   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 1   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 2   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 3   3300 3000 3300   3333 3000 3300   3333 3300 3000   3300
  Plane 4   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 5   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 6   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 7   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
 PFE 2
  Plane 0   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 1   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 2   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 3   3300 3000 3300   3333 3000 3300   3333 3300 3000   3300
  Plane 4   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 5   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 6   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 7   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
 PFE 3
  Plane 0   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 1   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 2   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 3   3300 3000 3300   3333 3000 3300   3333 3300 3000   3300
  Plane 4   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 5   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 6   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 7   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
FPC 4
 PFE 0
  Plane 0   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
```

```
  Plane 1   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 2   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 3   3300 3000 3300   3333 3000 3300   3333 3300 3000   3300
  Plane 4   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 5   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 6   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 7   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
FPC 5
 PFE 0
  Plane 0   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 1   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 2   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 3   3300 3000 3300   3333 3000 3300   3333 3300 3000   3300
  Plane 4   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 5   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 6   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
Plane 7   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
 PFE 1
  Plane 0   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 1   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 2   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 3   3300 3000 3300   3333 3000 3300   3333 3300 3000   3300
  Plane 4   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 5   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 6   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 7   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
FPC 6
 PFE 0
  Plane 0   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 1   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 2   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 3   3300 3000 3300   3333 3000 3300   3333 3300 3000   3300
  Plane 4   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 5   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 6   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 7   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
 PFE 1
  Plane 0   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 1   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 2   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 3   3300 3000 3300   3333 3000 3300   3333 3300 3000   3300
  Plane 4   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 5   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
```

```
  Plane 6   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 7   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
 PFE 2
  Plane 0   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 1   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 2   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 3   3300 3000 3300   3333 3000 3300   3333 3300 3000   3300
  Plane 4   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 5   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 6   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 7   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
 PFE 3
  Plane 0   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 1   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 2   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 3   3300 3000 3300   3333 3000 3300   3333 3300 3000   3300
  Plane 4   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 5   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 6   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 7   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
FPC 7
 PFE 0
  Plane 0   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 1   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 2   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 3   3300 3000 3300   3333 3000 3300   3333 3300 3000   3300
  Plane 4   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 5   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 6   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 7   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
 PFE 1
  Plane 0   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 1   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 2   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 3   3300 3000 3300   3333 3000 3300   3333 3300 3000   3300
  Plane 4   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 5   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 6   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 7   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
FPC 8
 PFE 0
  Plane 0   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 1   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
```

```
  Plane 2   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 3   3300 3000 3300   3333 3000 3300   3333 3300 3000   3300
  Plane 4   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 5   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 6   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 7   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
FPC 9
 PFE 0
  Plane 0   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 1   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 2   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 3   3300 3000 3300   3333 3000 3300   3333 3300 3000   3300
  Plane 4   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 5   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 6   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 7   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
 PFE 1
  Plane 0   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 1   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 2   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 3   3300 3000 3300   3333 3000 3300   3333 3300 3000   3300
  Plane 4   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 5   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 6   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
  Plane 7   2200 2000 2200   2222 2000 2200   2222 2200 2000   2200
```

show chassis fabric destinations (MX10003 Router)

```
user@host> show chassis fabric destinations

Fabric destinations state:
   0: non-existent
   2: enabled
   3: disabled
   6: dest-err and disabled

FPC 0
 PFE 0
  Plane 0   2220 2220
  Plane 1   2220 2220
  Plane 2   2220 2220
```

```
  Plane 3   2220 2220
  Plane 4   2220 2220
  Plane 5   2220 2220
  Plane 6   2220 2220
  Plane 7   2220 2220
  Plane 8   2220 2220
  Plane 9   2220 2220
  Plane 10  2220 2220
  Plane 11  2220 2220
  Plane 12  2220 2220
  Plane 13  2220 2220
  Plane 14  2220 2220
  Plane 15  2220 2220
  Plane 16  2220 2220
  Plane 17  2220 2220
  Plane 18  2220 2220
  Plane 19  2220 2220
  Plane 20  2220 2220
  Plane 21  2220 2220
 PFE 1
  Plane 0   2220 2220
  Plane 1   2220 2220
  Plane 2   2220 2220
  Plane 3   2220 2220
  Plane 4   2220 2220
  Plane 5   2220 2220
  Plane 6   2220 2220
  Plane 7   2220 2220
  Plane 8   2220 2220
  Plane 9   2220 2220
  Plane 10  2220 2220
  Plane 11  2220 2220
  Plane 12  2220 2220
  Plane 13  2220 2220
  Plane 14  2220 2220
  Plane 15  2220 2220
  Plane 16  2220 2220
  Plane 17  2220 2220
  Plane 18  2220 2220
  Plane 19  2220 2220
  Plane 20  2220 2220
  Plane 21  2220 2220
 PFE 2
```

```
  Plane 0   2220 2220
  Plane 1   2220 2220
  Plane 2   2220 2220
  Plane 3   2220 2220
  Plane 4   2220 2220
  Plane 5   2220 2220
  Plane 6   2220 2220
  Plane 7   2220 2220
  Plane 8   2220 2220
  Plane 9   2220 2220
  Plane 10  2220 2220
  Plane 11  2220 2220
  Plane 12  2220 2220
  Plane 13  2220 2220
  Plane 14  2220 2220
  Plane 15  2220 2220
  Plane 16  2220 2220
  Plane 17  2220 2220
  Plane 18  2220 2220
  Plane 19  2220 2220
  Plane 20  2220 2220
  Plane 21  2220 2220
FPC 1
 PFE 0
  Plane 0   2220 2220
  Plane 1   2220 2220
  Plane 2   2220 2220
  Plane 3   2220 2220
  Plane 4   2220 2220
  Plane 5   2220 2220
  Plane 6   2220 2220
  Plane 7   2220 2220
  Plane 8   2220 2220
  Plane 9   2220 2220
  Plane 10  2220 2220
  Plane 11  2220 2220
  Plane 12  2220 2220
  Plane 13  2220 2220
  Plane 14  2220 2220
  Plane 15  2220 2220
  Plane 16  2220 2220
  Plane 17  2220 2220
  Plane 18  2220 2220
```

```
  Plane 19  2220 2220
  Plane 20  2220 2220
  Plane 21  2220 2220
 PFE 1
  Plane 0   2220 2220
  Plane 1   2220 2220
  Plane 2   2220 2220
  Plane 3   2220 2220
  Plane 4   2220 2220
  Plane 5   2220 2220
  Plane 6   2220 2220
  Plane 7   2220 2220
  Plane 8   2220 2220
  Plane 9   2220 2220
  Plane 10  2220 2220
  Plane 11  2220 2220
  Plane 12  2220 2220
  Plane 13  2220 2220
  Plane 14  2220 2220
  Plane 15  2220 2220
  Plane 16  2220 2220
  Plane 17  2220 2220
  Plane 18  2220 2220
  Plane 19  2220 2220
  Plane 20  2220 2220
  Plane 21  2220 2220
 PFE 2
  Plane 0   2220 2220
  Plane 1   2220 2220
  Plane 2   2220 2220
  Plane 3   2220 2220
  Plane 4   2220 2220
  Plane 5   2220 2220
  Plane 6   2220 2220
  Plane 7   2220 2220
  Plane 8   2220 2220
  Plane 9   2220 2220
  Plane 10  2220 2220
  Plane 11  2220 2220
  Plane 12  2220 2220
  Plane 13  2220 2220
  Plane 14  2220 2220
  Plane 15  2220 2220
```

```
Plane 16  2220 2220
Plane 17  2220 2220
Plane 18  2220 2220
Plane 19  2220 2220
Plane 20  2220 2220
Plane 21  2220 2220
```

Release Information

Command introduced in Junos OS Release 12.1 for MX240, MX480, and MX960 routers.

Command introduced in Junos OS Release 12.3 for MX2010 and MX2020 Universal Routing Platforms.

`extended` option introduced in Junos OS Release 16.1 for MX2010 and MX2020 Routers.

show chassis fabric faults recovery-actions

IN THIS SECTION

- Syntax | **1084**
- Description | **1085**
- Required Privilege Level | **1085**
- Output Fields | **1085**
- Sample Output | **1086**
- Release Information | **1086**

Syntax

```
show chassis fabric faults recovery-actions
```

Description

Display the last 64 recovery actions related to a fabric null route condition.

Required Privilege Level

view

Output Fields

Table 61 on page 1085 lists the output fields for the `show chassis fabric faults recovery-actions` command. Output fields are listed in the approximate order in which they appear.

Table 61: show chassis fabric faults recovery-actions Output Fields

Field Name	Field Description
`Fault Name`	The name of fault detected. The fault name appears in a message such as: `CLOS LINK ERROR` detected on `F2S or F13 slot` *`slot number`* `xf chip` *`chip number`* and `Link Number` *`link number`*
`Recovery Start Time`	The time when recovery actions were initiated.

Table 61: show chassis fabric faults recovery-actions Output Fields *(Continued)*

Field Name	Field Description
`Recovery Action`	The recovery action that was used to recover from the mentioned fault. Recovery options depend on the type of faults and can include: • `SFC SIB Reboot`: The SFC SIB was rebooted. • `LCC SIB Reboot`: The LCC SIB was rebooted. • `FPC Reboot`: The FPC was rebooted. • `Destination Reprogramming`: Reenabling the data flow between Packet Forwarding Engines. • `Interchassis Link Retraining`: Retraining of optical links between an LCC SIB and an SFC SIB.

Sample Output

show chassis fabric faults recovery-actions

```
user@host> show chassis fabric faults recovery-actions
Fault Name          :CLOS LINK ERROR on F2SSlot3Chip0LinkNum2
Recovery Start Time :2014-03-25 19:52:50 PDT
Recovery Action     :F2S slot 3 Reboot
```

Release Information

Command introduced in Junos OS Release 14.2.

RELATED DOCUMENTATION

auto-recovery-disable

show chassis fabric feb

IN THIS SECTION

- Syntax | 1087
- Description | 1087
- Options | 1087
- Required Privilege Level | 1088
- Output Fields | 1088
- Sample Output | 1088
- Release Information | 1089

Syntax

```
show chassis fabric feb
```

Description

(M120 router only) Display the state of the electrical and optical switching fabric links between the Forwarding Engine Boards (FEBs) and the fabric planes, as interpreted by the FEB.

Options

This command has no options.

Required Privilege Level

view

Output Fields

Table 62 on page 1088 lists the output fields for the `show chassis fabric feb` command.

Table 62: show chassis fabric feb Output Fields

Field Name	Field Description
Fabric management FEB state	State of the switching fabric link between each FEB and fabric plane: **desalination error**, **disabled**, **enabled**, **link error**, **link ok**, or **unused**.

Sample Output

show chassis fabric feb

```
user@host> show chassis fabric feb
Fabric management       FEB state
FEB 0                   Plane 0: Plane enabled
                        Plane 1: Plane enabled
                        Plane 2: Plane enabled
                        Plane 3: Plane enabled
FEB 4
                        Plane 0: Plane enabled
                        Plane 1: Plane enabled
                        Plane 2: Plane enabled
                        Plane 3: Plane enabled
```

Release Information

Command introduced in Junos OS Release 8.0.

show chassis fabric errors

IN THIS SECTION

- Syntax | 1089
- Syntax (PTX Series Packet Transport Routers) | 1089
- Description | 1090
- Options | 1090
- Required Privilege Level | 1092
- Output Fields | 1092
- Sample Output | 1094
- Release Information | 1096

Syntax

```
show chassis fabric errors
<autoheal>
<fpc slot-number lcc number>
<sib (slot | f13 sib-slot | f2s sib-slot/sib-f2s-slot-number | lcc number)>
```

Syntax (PTX Series Packet Transport Routers)

```
show chassis fabric errors
(autoheal | fpc slot-number | sib sib-slot)
```

Description

Display the first ten and last ten fabric errors for the FPC or Switch Interface Boards (SIBs).

NOTE: This command can only be issued on a primary Routing Engine.

Options

autoheal (TX Matrix Plus routers and PTX Series Packet Transport Routers only) Show an error log of the first 100 autoheal actions taken on the system.

fpc *slot-number* Show error log of the first ten and last ten errors for the specified FPC.

(PTX3000 routers only)—Replace *slot-number* with an FPC slot number: **0**, **2**, **4**, **6**, **8**, **10**, **12**, or **14**.

(PTX5000 routers only)—Replace *slot-number* with a value from **0** through **7**.

(TX Matrix Plus routers only)—Replace `fpc slot-number` with the following values depending on the LCC configuration:

- On a TX Matrix Plus router with the TXP-T1600 configuration, if you specify the number of a T1600 LCC by using the `lcc number` option (the recommended method), replace `fpc slot-number` with a value from `0` through `7`. Otherwise, use a value from `0` through `31`.
- On a TX Matrix Plus router with the TXP-T1600-3D, TXP-T4000-3D, or TXP-Mixed-LCC-3D configuration, if you specify the number of a T1600 or T4000 LCC by using the `lcc number` option (the recommended method), replace `fpc slot-number` with a value from `0` through `7`. Otherwise, use a value from `0` through `63`.
- `lcc` *number*—Show error log of the first ten and last ten errors for the specified FPC on a specific network device (line-card chassis) that is part of the routing matrix.

  Replace `lcc number` with the following values depending on the LCC configuration:

  - 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.

- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

If you specify the number of the network device by using only the `lcc` *number* option (the recommended method), replace *slot-number* with a value from **0** through **7**. Otherwise, replace *slot-number* with a value from **0** through **31**. For example, the following commands have the same result:

```
user@host> show chassis fabric errors fpc 1 lcc 1
user@host> show chassis fabric errors fpc 9
```

sib Show error log of the first ten and last ten errors for the specified SIB. This option has the following suboptions:

- (TX Matrix Plus routers only)*sib-slot*—Specify a value ranging from **0** through **4**.
- (PTX3000 and PTX5000 routers) *sib-slot*—Specify a value ranging from **0** through **8**.
- (TX Matrix Plus routers only) `f13` *sib-slot*—(Optional) Show SIB F13 errors. Specify a valid SIB value number: `0`, `1`, `3`, `4`, `6`, `7`, `8`, `9`, `11`, or `12`.
- (TX Matrix Plus routers only) `f2s` *sib-slot*/*sib-f2s-slot-number*—(Optional) Show SIB F2S errors. Replace *sib-slot* with a value from `0` through `4`, followed by a *sib-f2s-slot-number* value `0`, `2`, `4` or `6`.
- (TX Matrix Plus routers only) `lcc` *number*—(Optional) Show error log of the first ten and last ten SIB errors for the specified network device (line-card chassis).

  Replace *number* with the following values depending on the LCC configuration:

  - 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
  - 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.

- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

> **NOTE**: The `lcc` *`number`* suboption is mandatory when using the following format for the command: `show chassis fabric errors sib lcc` *`number`* `sib` *`slot-number`*. For instance, issuing `show chassis fabric errors sib lcc` *`2 3`* displays errors detected on LCC 2, SIB 3.
>
> This suboption is not required when the `f13` or `f2s` suboptions are used with the `sib` *`slot-number`* option.

Required Privilege Level

view

Output Fields

Table 63 on page 1092 lists the output fields for the `show chassis fabric errors` command. Output fields are listed in the approximate order in which they appear.

Table 63: show chassis fabric errors Output Fields

Field Name	Field Description
`Time`	Time the error was logged. (TX Matrix Plus routers and PTX Series Packet Transport Routers only) For the `autoheal` option, shows the timestamp when autoheal was attempted on a SIB that was in fault state.
`Error log of first 10 errors`	List of the first ten errors.

Table 63: show chassis fabric errors Output Fields *(Continued)*

Field Name	Field Description
`Error log of last 10 errors`	List of the last ten errors.
`Error log of first 100 errors`	Indicates the autoheal action taken on the SIB. The following actions can occur: • Req—A SIB autoheal request was made on a faulty SIB. • Action—Autohealing (taking the SIB offline and then online) is initiated. • Denied—Autohealing (taking the SIB offline and then online) is denied because the SIB went to a fault state before the autoheal configuration period completed. • Set info—Setting information to force skipping autoheal on the SIB so that no further attempts to autoheal the faulty SIB are made. • Clear info— if a user takes a SIB offline and then online, then the autoheal information of the SIB is cleared. If the SIB goes to a fault state, autoheal is attempted on the SIB. • (PTX3000 and PTX5000 routers only) Completed—Autohealing is completed. This message is displayed whether autohealing is succesful or not.
`fpc slot number`	(PTX5000 Packet Transport Router only)—Range is 0 through 7.
`sib slot number`	(PTX Series Packet Transport Routers only)—Range is 0 through 8.
`lcc number`	Not supported on PTX Series Packet Transport Routers.

Sample Output

show chassis fabric errors (F13 SIB Errors on a TX Matrix Plus Router)

```
user@host> show chassis fabric errors sib f13
11Can you provide CLI output for QFX,
depending on which options are available?

Time                          Error log of first 10 errors
2009-10-06 02:21:17 PDT       LOS on Cable-D(1,0)
```

show chassis fabric errors (F2S SIB Errors on a TX Matrix Plus Router)

```
user@host> show chassis fabric errors sib f2s
0/0

Time                          Error log of first 10 errors
2009-10-06 13:51:42 PDT       Cell drop errors on CLOS F2 SF 0 Port 0 link
```

show chassis fabric errors (SIB Errors Specific to an LCC Connected to a TX Matrix Plus Router)

```
user@host> show chassis fabric errors sib 1
lcc 0
lcc0-re0:

--------------------------------------------------------------------------

Time                          Error log of first 10 errors

2009-10-06 02:23:16 PDT       Cell drop errors on FPC7_T link

2009-10-06 02:23:16 PDT       Cell drop errors on FPC7_B link
```

show chassis fabric errors (FPC Errors Specific to an LCC Connected to a TX Matrix Plus Router)

```
user@host> show chassis fabric errors fpc 5
lcc 0
lcc0-re0:

--------------------------------------------------------------------------

Time                          Error log of first 10 errors

2009-10-06 13:56:59 PDT      PFE_T has link error on plane 1
```

show chassis fabric errors (SIB Errors Specific to an LCC Connected to a TX Matrix Plus Router with 3D SIBs)

```
user@host> show chassis fabric errors sib 1
lcc 0
lcc0-re0:
--------------------------------------------------------------------------
Time                          Error log of first 10 errors
2013-02-11 04:46:42 PST      CRC errors on XC link SIB01_XF3#11,0
```

show chassis fabric errors fpc or sib (PTX Series Packet Transport Routers)

```
user@host> show chassis fabric errors fpc 1
Time                          Error log of first 10 errors
2012-01-06 16:27:03 PST      Link errs on PFE 2, SIB 0, Plane 0

user@host> show chassis fabric errors sib 1
Time                          Error log of first 10 errors
2015-011-16 15:34:33 PST      Link errs on PFE 0, FPC 0, Plane 2
2015-011-16 15:44:33 PST      CM set ASIC 1 to FAULT (Fault due to PIO errors)
```

show chassis fabric errors autoheal (PTX Series Packet Transport Routers)

```
user@host> show chassis fabric errors autoheal
Mar 30 01:43:00
Time                      Error log of first 100 errors
2016-03-29 23:46:23 PDT   Req: sib 0
2016-03-29 23:46:23 PDT   Action: SIB 0 (autohealing)
2016-03-29 23:54:52 PDT   Completed: SIB 0  (autoheal)
```

show chassis fabric errors autoheal (TX Matrix Plus Router with 3D SIBs)

```
user@host> show chassis fabric errors autoheal
Time                      Error log of first 100 errors
2013-03-25 00:16:10 PDT   Req: Plane 3 F13 8 Cbl 4 (tx) LCC0-SIB3 Cbl 4 (rx)
2013-03-25 00:16:12 PDT   Action: Plane 3 F13 8 Cbl 4 (autohealing)
2013-03-25 00:17:24 PDT   Req: Plane 3 F13 8 Cbl 4 (tx) LCC0-SIB3 Cbl 4 (rx)
2013-03-25 00:17:24 PDT   Denied: Plane 3 F13 8 Cbl 4 (time < configured)
2013-03-25 00:17:24 PDT   Set info: Plane 3 F13 8 Cbl 4 (skip autoheal)
2013-03-25 01:20:17 PDT   Clear info: Plane 3
```

Release Information

Command introduced in Junos OS Release 10.0.

show chassis fabric fpcs

IN THIS SECTION

- Syntax | **1097**
- Syntax (MX Series Routers) | **1097**
- Syntax (T4000, MX2010, MX2020, MX10003, and MX2008 Routers) | **1097**
- Syntax (PTX Series Packet Transport Routers) | **1098**

- Syntax (TX Matrix Plus Router) | **1098**
- Syntax (QFX Series Switches) | **1098**
- Description | **1098**
- Options | **1098**
- Required Privilege Level | **1099**
- Output Fields | **1099**
- Sample Output | **1101**
- Release Information | **1137**

Syntax

```
show chassis fabric fpcs
<lcc number>
```

Syntax (MX Series Routers)

```
show chassis fabric fpcs
<extended>
<all-members>
<local>
<member member-id>
```

Syntax (T4000, MX2010, MX2020, MX10003, and MX2008 Routers)

```
show chassis fabric fpcs
```

Syntax (PTX Series Packet Transport Routers)

```
show chassis fabric fpcs <slot fpc-slot>
```

Syntax (TX Matrix Plus Router)

```
show chassis fabric fpcs
<lcc number>
```

Syntax (QFX Series Switches)

```
show chassis fabric fpcs <slot fpc-slot>
```

Description

Display the state of the electrical switch fabric links between the Flexible PIC Concentrators (FPCs) and the Switch Interface Boards (SIBs).

Options

none Display the switch fabric link state. On a TX Matrix router, display the switching fabric link states for the FPCs in all T640 routers connected to the TX Matrix router. On a TX Matrix Plus router, display the switching fabric link states for the FPCs in all routers connected to the TX Matrix Plus router.

extended (MX2020 and MX2010 Routers with SFB2) (Optional) Display the fabric link state for all 24 fabric planes.

all-members (MX Series routers only) (Optional) Display the switching fabric link states for the FPCs in all members of the Virtual Chassis configuration.

lcc *number* (TX Matrix router and TX Matrix Plus router only) (Optional) On a TX Matrix router, display the switch fabric link state for the FPCs in the specified T640 router (line-card chassis) that is connected to the TX Matrix router. On a TX Matrix Plus router, display the switch fabric link state for the FPCs in the specified router (line-card chassis) that is connected to the TX Matrix Plus router. Replace *number* with a following value depending on the LCC configurations:

- From `0` through `3` on a T640 router on the routing matrix with TX Matirx routers.
- From `0` through `3` on a T1600 router on the routing matrix with TX Matirx Plus routers.
- From `0` through `7` on a T1600 router in a routing matrix with TX Matrix Plus router with 3D SIBs.
- `0`, `2`, `4`, `6` on a T4000 router in a routing matrix with TX Matrix Plus router with 3D SIBs.

local (MX Series routers only) (Optional) Display the switching fabric link states for the FPCs in the local Virtual Chassis member.

member *member-id* (MX Series routers only) (Optional) Display the switching fabric link states for the FPCs in the specified member of the Virtual Chassis configuration. Replace *member-id* with a value of 0 or 1.

slot *fpc-slot* (Optional) (PTX Series Packet Transport Routers and QFX Series switches only) (Optional) Display the fabric state of the specified FPC slot. If no value is provided, display the status of all FPCs. The FPC slots range from 0-7 in PTX10008 and 0-15 in PTX10016.

Required Privilege Level

view

Output Fields

Table 64 on page 1100 lists the output fields for the `show chassis fabric fpcs` command. Output fields are listed in the approximate order in which they appear.

Table 64: show chassis fabric fpcs Output Fields

Field Name	Field Description
`Fabric management FPC state`	Switching fabric link (link from SIB to FPC) state for each FPC: • `Unused`—FPC is not present. (On MX240 and MX480 routers with AS- MLC modular carrier card or MPC4E only) the fabric plane from the pair that share physical links (1 and 5, and 3 and 7) is inactive. • `Destination error on PFEs` *`list of PFE numbers`*—Destination errors to the listed Packet Forwarding Engines. Indicates that the link is not carrying traffic to the listed Packet Forwarding Engines. **NOTE**: In Junos OS Release 9.6 and later, the list of Packet Forwarding Engines with destination errors is displayed in the output. In Junos OS Releases before 9.6, the output only indicates that there are destination errors. However, the list of Packet Forwarding Engines with destination errors is not displayed. • `Links ok`—Link between the spare SIB and FPC is eligible to carry traffic. • `Link error`—Link between the SIB and FPC has CRC errors. However, the link is still eligible to carry traffic. • `Plane disabled`—Fabric plane has been disabled for the following reasons: ◦ Destination errors have exceeded the thresholds. ◦ Run-time link errors have exceeded the thresholds. ◦ Initialization time link errors detected, and link training was unsuccessful. ◦ `Plane Disabled, Links Error` (PTX Series Packet Transport Routers and QFX Series switches only)—The plane is disabled because of link errors detected at the FPC RX. • `Plane Disabled, Links Down` (PTX Series Packet Transport Routers and QFX Series switches only)—The plane is disabled because of link errors detected at the SIB RX. • `Plane enabled`—Link between the active SIB and FPC is eligible to carry traffic.

Table 64: show chassis fabric fpcs Output Fields *(Continued)*

Field Name	Field Description
	NOTE: On the Enhanced MX SCB with MPC, a maximum of 4 planes are operational and running. On all the other SCBs with MPC, all the planes are operational and running. • `Plane Enabled, Links OK` (PTX Series Packet Transport Routers and QFX Series switches only)—The FPC CCL RX link is eligible to carry traffic. • `Plane Enabled, Links OK` (TX Matrix and TX Matrix Plus routers only)—The FPC HSL RX link is eligible to carry traffic.

Sample Output

show chassis fabric fpcs (M320 Router)

```
user@host> show chassis fabric fpcs
Fabric management FPC state:
FPC #2
  PFE #1
    SIB #0
             Plane enabled
    SIB #1
             Plane enabled
    SIB #2
             Plane enabled
    SIB #3
             Plane enabled
```

show chassis fabric fpcs (MX960 Router)

```
user@host> show chassis fabric fpcs
FPC 0
  PFE #0
       Plane 0: Plane enabled
       Plane 1: Plane enabled
```

```
        Plane 2: Plane enabled
        Plane 3: Plane enabled
        Plane 4: Links ok
        Plane 5: Links ok
  PFE #1
        Plane 0: Plane enabled
        Plane 1: Plane enabled
        Plane 2: Plane enabled
        Plane 3: Plane enabled
        Plane 4: Links ok
        Plane 5: Links ok
  PFE #2
        Plane 0: Plane enabled
        Plane 1: Plane enabled
        Plane 2: Plane enabled
        Plane 3: Plane enabled
        Plane 4: Links ok
        Plane 5: Links ok
  PFE #3
        Plane 0: Plane enabled
        Plane 1: Plane enabled
        Plane 2: Plane enabled
        Plane 3: Plane enabled
        Plane 4: Links ok
        Plane 5: Links ok
FPC 1
  PFE #0
        Plane 0: Plane enabled
        Plane 1: Plane enabled
        Plane 2: Plane enabled
        Plane 3: Plane enabled
        Plane 4: Plane enabled
        Plane 5: Plane enabled
  PFE #1
        Plane 0: Plane enabled
        Plane 1: Plane enabled
        Plane 2: Plane enabled
        Plane 3: Plane enabled
        Plane 4: Plane enabled
        Plane 5: Plane enabled
FPC 2
  PFE #0
        Plane 0: Plane enabled
```

```
        Plane 1: Plane enabled
        Plane 2: Plane enabled
        Plane 3: Plane enabled
        Plane 4: Links ok
        Plane 5: Links ok
  PFE #1
        Plane 0: Plane enabled
        Plane 1: Plane enabled
        Plane 2: Plane enabled
        Plane 3: Plane enabled
        Plane 4: Links ok
        Plane 5: Links ok
  PFE #2
        Plane 0: Plane enabled
        Plane 1: Plane enabled
        Plane 2: Plane enabled
        Plane 3: Plane enabled
        Plane 4: Links ok
...
```

show chassis fabric fpcs (MX480 Router with MPC4E)

In the following output, **FPC4** is the MPC4E (MPC4E-3D-32XGE-SFPP) card.

```
user@host > show chassis fabric fpcs
Fabric management FPC state:
FPC 0
  PFE #0
      Plane 0: Links ok
      Plane 1: Links ok
      Plane 2: Plane enabled
      Plane 3: Plane enabled
      Plane 4: Plane enabled
      Plane 5: Links ok
      Plane 6: Plane enabled
      Plane 7: Links ok
  PFE #1
      Plane 0: Links ok
      Plane 1: Links ok
      Plane 2: Plane enabled
      Plane 3: Plane enabled
```

```
      Plane 4: Plane enabled
      Plane 5: Links ok
      Plane 6: Plane enabled
      Plane 7: Links ok
FPC 1
  PFE #0
      Plane 0: Links ok
      Plane 1: Links ok
      Plane 2: Plane enabled
      Plane 3: Plane enabled
      Plane 4: Plane enabled
      Plane 5: Links ok
      Plane 6: Plane enabled
      Plane 7: Links ok
  PFE #1
      Plane 0: Links ok
      Plane 1: Links ok
      Plane 2: Plane enabled
      Plane 3: Plane enabled
      Plane 4: Plane enabled
      Plane 5: Links ok
      Plane 6: Plane enabled
      Plane 7: Links ok
  PFE #2
      Plane 0: Links ok
      Plane 1: Links ok
      Plane 2: Plane enabled
      Plane 3: Plane enabled
      Plane 4: Plane enabled
      Plane 5: Links ok
      Plane 6: Plane enabled
      Plane 7: Links ok
  PFE #3
      Plane 0: Links ok
      Plane 1: Links ok
      Plane 2: Plane enabled
      Plane 3: Plane enabled
      Plane 4: Plane enabled
      Plane 5: Links ok
      Plane 6: Plane enabled

FPC 3
  PFE #0
```

```
      Plane 0: Links ok
      Plane 1: Links ok
      Plane 2: Plane enabled
      Plane 3: Plane enabled
      Plane 4: Plane enabled
      Plane 5: Links ok
      Plane 6: Plane enabled
      Plane 7: Links ok
FPC 4
  PFE #0
      Plane 0: Links ok
      Plane 1: Links ok
      Plane 2: Plane enabled
      Plane 3: Plane enabled
      Plane 4: Plane enabled
      Plane 5: Unused
      Plane 6: Plane enabled
      Plane 7: Unused
  PFE #1
      Plane 0: Links ok
      Plane 1: Links ok
      Plane 2: Plane enabled
      Plane 3: Plane enabled
      Plane 4: Plane enabled
      Plane 5: Unused
      Plane 6: Plane enabled
      Plane 7: Unused
```

show chassis fabric fpcs (MX960 with AS MLC Modular Carrier Card

In the following output, FPC 5 is the AS MLC modular carrier card (AS MCC).

```
user@host>show chassis fabric fpcs
Fabric management FPC state:
FPC 0
  PFE #0
      Plane 0: Plane enabled
      Plane 1: Plane enabled
      Plane 2: Plane enabled
      Plane 3: Plane enabled
      Plane 4: Links ok
```

```
      Plane 5: Links ok
  PFE #1
      Plane 0: Plane enabled
      Plane 1: Plane enabled
      Plane 2: Plane enabled
      Plane 3: Plane enabled
      Plane 4: Links ok
      Plane 5: Links ok
FPC 1
  PFE #0
      Plane 0: Plane enabled
      Plane 1: Plane enabled
      Plane 2: Plane enabled
      Plane 3: Plane enabled
      Plane 4: Links ok
      Plane 5: Links ok
FPC 4
  PFE #0
      Plane 0: Plane enabled
      Plane 1: Plane enabled
      Plane 2: Plane enabled
      Plane 3: Plane enabled
      Plane 4: Links ok
      Plane 5: Links ok
  PFE #1
      Plane 0: Plane enabled
      Plane 1: Plane enabled
      Plane 2: Plane enabled
      Plane 3: Plane enabled
      Plane 4: Links ok
      Plane 5: Links ok
  PFE #2
      Plane 0: Plane enabled
      Plane 1: Plane enabled
      Plane 2: Plane enabled
      Plane 3: Plane enabled
      Plane 4: Links ok
      Plane 5: Links ok
  PFE #3
      Plane 0: Plane enabled
      Plane 1: Plane enabled
      Plane 2: Plane enabled
      Plane 3: Plane enabled
```

```
      Plane 4: Links ok
      Plane 5: Links ok
FPC 5
  PFE #0
      Plane 0: Plane enabled
      Plane 1: Plane enabled
      Plane 2: Plane enabled
      Plane 3: Plane enabled
      Plane 4: Links ok
      Plane 5: Links ok
FPC 8
  PFE #0
      Plane 0: Plane enabled
      Plane 1: Plane enabled
      Plane 2: Plane enabled
      Plane 3: Plane enabled
      Plane 4: Links ok
      Plane 5: Links ok
  PFE #1
      Plane 0: Plane enabled
      Plane 1: Plane enabled
      Plane 2: Plane enabled
      Plane 3: Plane enabled
      Plane 4: Links ok
      Plane 5: Links ok
  PFE #2
      Plane 0: Plane enabled
      Plane 1: Plane enabled
      Plane 2: Plane enabled
      Plane 3: Plane enabled
      Plane 4: Links ok
      Plane 5: Links ok
  PFE #3
      Plane 0: Plane enabled
      Plane 1: Plane enabled
      Plane 2: Plane enabled
      Plane 3: Plane enabled
      Plane 4: Links ok
      Plane 5: Links ok
```

show chassis fabric fpcs (MX2020 Router with SFB2)

```
user@host> show chassis fabric fpcs extended
Fabric management FPC state:
FPC 0
  PFE #0
      Plane 0: Plane enabled
      Plane 1: Plane enabled
      Plane 2: Plane enabled
      Plane 3: Destination error
      Plane 4: Plane enabled
      Plane 5: Plane enabled
      Plane 6: Plane enabled
      Plane 7: Plane enabled
      Plane 8: Destination error
      Plane 9: Destination error
      Plane 10: Destination error
      Plane 11: Destination error
      Plane 12: Plane enabled
      Plane 13: Plane enabled
      Plane 14: Plane enabled
      Plane 15: Plane enabled
      Plane 16: Plane enabled
      Plane 17: Plane enabled
      Plane 18: Plane disabled
      Plane 19: Plane disabled
      Plane 20: Plane disabled
      Plane 21: Destination error
      Plane 22: Plane enabled
      Plane 23: Plane enabled
FPC 1
  PFE #0
      Plane 0: Plane enabled
      Plane 1: Plane enabled
      Plane 2: Plane enabled
      Plane 3: Plane enabled
      Plane 4: Plane enabled
      Plane 5: Plane enabled
      Plane 6: Plane enabled
      Plane 7: Plane enabled
      Plane 8: Plane enabled
      Plane 9: Plane enabled
```

```
        Plane 10: Plane enabled
        Plane 11: Plane enabled
        Plane 12: Plane enabled
        Plane 13: Plane enabled
        Plane 14: Plane enabled
        Plane 15: Plane enabled
        Plane 16: Plane enabled
        Plane 17: Plane enabled
        Plane 18: Plane disabled
        Plane 19: Plane disabled
        Plane 20: Plane disabled
        Plane 21: Plane enabled
        Plane 22: Plane enabled
        Plane 23: Plane enabled
    PFE #1
        Plane 0: Plane enabled
        Plane 1: Plane enabled
        Plane 2: Plane enabled
        Plane 3: Plane enabled
        Plane 4: Plane enabled
        Plane 5: Plane enabled
        Plane 6: Plane enabled
        Plane 7: Plane enabled
        Plane 8: Plane enabled
        Plane 9: Plane enabled
        Plane 10: Plane enabled
        Plane 11: Plane enabled
        Plane 12: Plane enabled
        Plane 13: Plane enabled
        Plane 14: Plane enabled
        Plane 15: Plane enabled
        Plane 16: Plane enabled
        Plane 17: Plane enabled
        Plane 18: Plane disabled
        Plane 19: Plane disabled
        Plane 20: Plane disabled
        Plane 21: Plane enabled
        Plane 22: Plane enabled
        Plane 23: Plane enabled
    PFE #2
        Plane 0: Plane enabled
        Plane 1: Plane enabled
        Plane 2: Plane enabled
```

```
      Plane 3: Plane enabled
      Plane 4: Plane enabled
      Plane 5: Plane enabled
      Plane 6: Plane enabled
      Plane 7: Plane enabled
      Plane 8: Plane enabled
      Plane 9: Plane enabled
      Plane 10: Plane enabled
      Plane 11: Plane enabled
      Plane 12: Plane enabled
      Plane 13: Plane enabled
      Plane 14: Plane enabled
      Plane 15: Plane enabled
      Plane 16: Plane enabled
      Plane 17: Plane enabled
      Plane 18: Plane disabled
      Plane 19: Plane disabled
      Plane 20: Plane disabled
      Plane 21: Plane enabled
      Plane 22: Plane enabled
      Plane 23: Plane enabled
  PFE #3
      Plane 0: Plane enabled
      Plane 1: Plane enabled
      Plane 2: Plane enabled
      Plane 3: Plane enabled
      Plane 4: Plane enabled
      Plane 5: Plane enabled
      Plane 6: Plane enabled
      Plane 7: Plane enabled
      Plane 8: Plane enabled
      Plane 9: Plane enabled
      Plane 10: Plane enabled
      Plane 11: Plane enabled
      Plane 12: Plane enabled
      Plane 13: Plane enabled
      Plane 14: Plane enabled
      Plane 15: Plane enabled
      Plane 16: Plane enabled
      Plane 17: Plane enabled
      Plane 18: Plane disabled
      Plane 19: Plane disabled
      Plane 20: Plane disabled
```

```
      Plane 21: Plane enabled
      Plane 22: Plane enabled
      Plane 23: Plane enabled
...

FPC 19
  PFE #0
      Plane 0: Plane enabled
      Plane 1: Plane enabled
      Plane 2: Plane enabled
      Plane 3: Plane enabled
      Plane 4: Plane enabled
      Plane 5: Plane enabled
      Plane 6: Plane enabled
      Plane 7: Plane enabled
      Plane 8: Plane enabled
      Plane 9: Plane enabled
      Plane 10: Plane enabled
      Plane 11: Plane enabled
      Plane 12: Plane enabled
      Plane 13: Plane enabled
      Plane 14: Plane enabled
      Plane 15: Plane enabled
      Plane 16: Plane enabled
      Plane 17: Plane enabled
      Plane 18: Unused
      Plane 19: Unused
      Plane 20: Unused
      Plane 21: Plane enabled
      Plane 22: Plane enabled
      Plane 23: Plane enabled
  PFE #1
      Plane 0: Plane enabled
      Plane 1: Plane enabled
      Plane 2: Plane enabled
      Plane 3: Plane enabled
      Plane 4: Plane enabled
      Plane 5: Plane enabled
      Plane 6: Plane enabled
      Plane 7: Plane enabled
      Plane 8: Plane enabled
      Plane 9: Plane enabled
      Plane 10: Plane enabled
```

```
    Plane 11: Plane enabled
    Plane 12: Plane enabled
    Plane 13: Plane enabled
    Plane 14: Plane enabled
    Plane 15: Plane enabled
    Plane 16: Plane enabled
    Plane 17: Plane enabled
         Plane 18: Unused
    Plane 19: Unused
    Plane 20: Unused
    Plane 21: Plane enabled
    Plane 22: Plane enabled
    Plane 23: Plane enabled
PFE #2
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane enabled
    Plane 4: Plane enabled
    Plane 5: Plane enabled
    Plane 6: Plane enabled
    Plane 7: Plane enabled
    Plane 8: Plane enabled
    Plane 9: Plane enabled
    Plane 10: Plane enabled
    Plane 11: Plane enabled
    Plane 12: Plane enabled
    Plane 13: Plane enabled
    Plane 14: Plane enabled
    Plane 15: Plane enabled
    Plane 16: Plane enabled
    Plane 17: Plane enabled
    Plane 18: Unused
    Plane 19: Unused
    Plane 20: Unused
    Plane 21: Plane enabled
    Plane 22: Plane enabled
    Plane 23: Plane enabled
PFE #3
    Plane 0: Plane enabled
    Plane 1: Plane enabled
    Plane 2: Plane enabled
    Plane 3: Plane enabled
```

```
      Plane 4: Plane enabled
      Plane 5: Plane enabled
      Plane 6: Plane enabled
      Plane 7: Plane enabled
      Plane 8: Plane enabled
      Plane 9: Plane enabled
      Plane 10: Plane enabled
      Plane 11: Plane enabled
      Plane 12: Plane enabled
          Plane 13: Plane enabled
      Plane 14: Plane enabled
      Plane 15: Plane enabled
      Plane 16: Plane enabled
      Plane 17: Plane enabled
      Plane 18: Unused
      Plane 19: Unused
      Plane 20: Unused
      Plane 21: Plane enabled
      Plane 22: Plane enabled
      Plane 23: Plane enabled
```

show chassis fabric fpcs (T320 Router)

```
user@host> show chassis fabric fpcs
FPC #3
  PFE #1
    SIB #0
            Links ok
    SIB #1
            Plane enabled
    SIB #2
            Plane enabled
FPC #5
  PFE #1
    SIB #0
            Links ok
    SIB #1
            Plane enabled
    SIB #2
            Plane enabled
FPC #7
```

```
  PFE #1
    SIB #0
            Links ok
    SIB #1
            Plane enabled
    SIB #2
            Plane enabled
```

show chassis fabric fpcs (TX Matrix Router)

```
user@host> show chassis fabric fpcs
lcc0-re0:
-------------------------------------------------------------------------
Fabric management FPC state:
FPC #0
  PFE #1
    SIB #0
            Links ok
    SIB #2
            Links ok
    SIB #3
            Links ok
    SIB #4
            Links ok
FPC #2
  PFE #1
    SIB #0
            Links ok
    SIB #2
            Links ok
    SIB #3
            Links ok
    SIB #4
            Links ok  FPC #3
  PFE #1
    SIB #2
           Plane enabled
    SIB #3
           Link error
           Destination error on PFEs       0    1    2    3    4    5    6    7
             8    9   10   11   12   13   14   15   16   17   18   19   20   21
```

```
    SIB #4
           Destination error on PFEs       0    1    2    3    4    5    6    7
             8    9   10   11   12   13   14   15   16   17   18   19   20   21
...
FPC #4
  PFE #0
    SIB #4 Links ok
  PFE #1
    SIB #4 Links ok
FPC #5
  PFE #1
    SIB #4 Links ok
FPC #6
  PFE #1
    SIB #4 Links ok

lcc2-re0:
--------------------------------------------------------------------------
Fabric management FPC state:
FPC #0
  PFE #1
    SIB #4 Links ok
FPC #1
  PFE #1
    SIB #4 Links ok
FPC #2
  PFE #0
    SIB #4 Links ok
  PFE #1
    SIB #4 Links ok
FPC #4
  PFE #0
    SIB #4 Links ok
  PFE #1
    SIB #4 Links ok
FPC #5
  PFE #1
    SIB #4 Links ok
```

show chassis fabric fpcs lcc (TX Matrix Router with 3D SIBs)

```
user@host> show chassis fabric fpcs lcc 4
lcc4-re0:
--------------------------------------------------------------------------
Fabric management FPC state:
FPC #2
  PFE #0
    SIB #0
            Links ok
    SIB #1
            Links ok
    SIB #2
            Links ok
    SIB #3
            Links ok
    SIB #4
            Links ok
  PFE #1
    SIB #0
            Links ok
    SIB #1
            Links ok
    SIB #2
            Links ok
    SIB #3
            Links ok
    SIB #4
            Links ok
FPC #3
  PFE #0
    SIB #0
            Links ok
    SIB #1
            Links ok
    SIB #2
            Links ok
    SIB #3
            Links ok
    SIB #4
            Links ok
  PFE #1
```

```
    SIB #0
            Links ok
    SIB #1
            Links ok
    SIB #2
            Links ok
    SIB #3
            Links ok
    SIB #4
            Links ok
```

show chassis fabric fpcs (T1600 Router)

```
user@host> show chassis fabric fpcs
Fabric management FPC state:
FPC #0
  PFE #0
    SIB #0
            Links ok
    SIB #1
            Plane enabled
    SIB #2
            Plane enabled
    SIB #3
            Plane enabled
    SIB #4
            Plane enabled
  PFE #1
    SIB #0
            Links ok
    SIB #1
            Plane enabled
    SIB #2
            Plane enabled
    SIB #3
            Plane enabled
    SIB #4
            Plane enabled
FPC #1
  PFE #0
    SIB #0
```

```
            Links ok
    SIB #1
            Plane enabled
    SIB #2
            Plane enabled
    SIB #3
            Plane enabled
    SIB #4
            Plane enabled
  PFE #1
    SIB #0
            Links ok
    SIB #1
            Plane enabled
    SIB #2
            Plane enabled
    SIB #3
            Plane enabled
    SIB #4
            Plane enabled
FPC #2
  PFE #0
    SIB #0
            Links ok
    SIB #1
            Plane enabled
    SIB #2
            Plane enabled
    SIB #3
            Plane enabled
    SIB #4
            Plane enabled
FPC #4
  PFE #0
    SIB #0
            Links ok
    SIB #1
            Plane enabled
    SIB #2
            Plane enabled
    SIB #3
            Plane enabled
    SIB #4
```

```
            Plane enabled
  PFE #1
    SIB #0
            Links ok
    SIB #1
            Plane enabled
    SIB #2
            Plane enabled
    SIB #3
            Plane enabled
    SIB #4
            Plane enabled
FPC #3
  PFE #1
    SIB #2
           Plane enabled
    SIB #3
           Link error
           Destination error on PFEs       0    1    2    3    4    5    6    7
             8    9   10   11   12   13   14   15   16   17   18   19   20   21
    SIB #4
           Destination error on PFEs       0    1    2    3    4    5    6    7
             8    9   10   11   12   13   14   15   16   17   18   19   20   21
```

show chassis fabric fpcs (T4000 Core Router)

```
Fabric management FPC state:
FPC #2
  PFE #0
    SIB #0
            Links ok
    SIB #1
            Plane enabled
    SIB #2
            Plane enabled
    SIB #3
            Plane enabled
    SIB #4
            Plane enabled
FPC #3
  PFE #0
```

```
    SIB #0
            Links ok
    SIB #1
            Plane enabled
    SIB #2
            Plane enabled
    SIB #3
            Plane enabled
    SIB #4
            Plane enabled
FPC #5
  PFE #0
    SIB #0
            Links ok
    SIB #1
            Plane enabled
    SIB #2
            Plane enabled
    SIB #3
            Plane enabled
    SIB #4
            Plane enabled
  PFE #1
    SIB #0
            Links ok
    SIB #1
            Plane enabled
    SIB #2
            Plane enabled
    SIB #3
            Plane enabled
    SIB #4
            Plane enabled
FPC #6
  PFE #0
    SIB #0
            Links ok
    SIB #1
            Plane enabled
    SIB #2
            Plane enabled
    SIB #3
            Plane enabled
```

```
    SIB #4
            Plane enabled
  PFE #1
    SIB #0
            Links ok
    SIB #1
            Plane enabled
    SIB #2
            Plane enabled
    SIB #3
            Plane enabled
    SIB #4
            Plane enabled
```

show chassis fabric fpcs (TX Matrix Plus Router)

```
user@host> show chassis fabric fpcs
lcc0-re0:
--------------------------------------------------------------------------
Fabric management FPC state:
FPC #0
  PFE #1
    SIB #0
            Unused
    SIB #1
            Links ok
    SIB #2
            Links ok
    SIB #3
            Links ok
    SIB #4
            Links ok
FPC #2
  PFE #0
    SIB #0
            Unused
    SIB #1
            Links ok
    SIB #2
            Links ok
    SIB #3
```

```
            Links ok
    SIB #4
            Links ok
  PFE #1
    SIB #0
            Unused
    SIB #1
            Links ok
    SIB #2
            Links ok
    SIB #3
            Links ok
    SIB #4
            Links ok
FPC #3
  PFE #1
    SIB #2
           Plane enabled
    SIB #3
           Link error
           Destination error on PFEs       0    1    2    3    4    5    6    7
             8    9   10   11   12   13   14   15   16   17   18   19   20   21
    SIB #4
           Destination error on PFEs       0    1    2    3    4    5    6    7
             8    9   10   11   12   13   14   15   16   17   18   19   20   21
FPC #4
  PFE #0
    SIB #0
            Unused
    SIB #1
            Links ok
    SIB #2
            Links ok
    SIB #3
            Links ok
    SIB #4
            Links ok
  PFE #1
    SIB #0
            Unused
    SIB #1
            Links ok
    SIB #2
```

```
            Links ok
    SIB #3
            Links ok
    SIB #4
            Links ok
FPC #6
  PFE #0
    SIB #0
            Unused
    SIB #1
            Links ok
    SIB #2
            Links ok
    SIB #3
            Links ok
    SIB #4
            Links ok
  PFE #1
    SIB #0
            Unused
    SIB #1
            Links ok
    SIB #2
            Links ok
    SIB #3
            Links ok
    SIB #4
            Links ok
FPC #7
  PFE #0
    SIB #0
            Unused
    SIB #1
            Links ok
    SIB #2
            Links ok
    SIB #3
            Links ok
    SIB #4
            Links ok

lcc1-re0:
--------------------------------------------------------------------------
```

```
Fabric management FPC state:
FPC #2
  PFE #0
    SIB #0
            Links ok
    SIB #1
            Links ok
    SIB #2
            Links ok
    SIB #3
            Links ok
    SIB #4
            Links ok
  PFE #1
    SIB #0
            Links ok
    SIB #1
            Links ok
    SIB #2
            Links ok
    SIB #3
            Links ok
    SIB #4
            Links ok
FPC #4
  PFE #0
    SIB #0
            Links ok
    SIB #1
            Links ok
    SIB #2
            Links ok
    SIB #3
            Links ok
    SIB #4
            Links ok
  PFE #1
    SIB #0
            Links ok
    SIB #1
            Links ok
    SIB #2
            Links ok
```

```
    SIB #3
            Destination error on PFEs       1    8    9   29   40   65   72   73
             93  104
    SIB #4
            Links ok
FPC #6
  PFE #0
    SIB #0
            Links ok
    SIB #1
            Links ok
    SIB #2
            Links ok
    SIB #3
            Links ok
    SIB #4
            Links ok
  PFE #1
    SIB #0
            Links ok
    SIB #1
            Links ok
    SIB #2
            Links ok
    SIB #3
            Links ok
    SIB #4
            Links ok
FPC #7
  PFE #0
    SIB #0
            Links ok
    SIB #1
            Links ok
    SIB #2
            Links ok
    SIB #3
            Links ok
    SIB #4
            Links ok

lcc2-re0:
--------------------------------------------------------------------------
```

```
Fabric management FPC state:
FPC #0
  PFE #0
    SIB #0
            Links ok
    SIB #1
            Links ok
    SIB #2
            Links ok
    SIB #3
            Links ok
    SIB #4
            Links ok
  PFE #1
    SIB #0
            Links ok
    SIB #1
            Links ok
    SIB #2
            Links ok
    SIB #3
            Links ok
    SIB #4
            Links ok
FPC #2
  PFE #0
    SIB #0
            Links ok
    SIB #1
            Links ok
    SIB #2
            Links ok
    SIB #3
            Links ok
    SIB #4
            Links ok
  PFE #1
    SIB #0
            Links ok
    SIB #1
            Links ok
    SIB #2
            Links ok
```

```
    SIB #3
            Links ok
    SIB #4
            Links ok
FPC #4
  PFE #0
    SIB #0
            Links ok
    SIB #1
            Links ok
    SIB #2
            Links ok
    SIB #3
            Links ok
    SIB #4
            Links ok
FPC #5
  PFE #0
    SIB #0
            Links ok
    SIB #1
            Links ok
    SIB #2
            Links ok
    SIB #3
            Links ok
    SIB #4
            Links ok
  PFE #1
    SIB #0
            Links ok
    SIB #1
            Links ok
    SIB #2
            Links ok
    SIB #3
            Links ok
    SIB #4
            Links ok
FPC #6
  PFE #0
    SIB #0
            Links ok
```

```
    SIB #1
            Links ok
    SIB #2
            Links ok
    SIB #3
            Links ok
    SIB #4
            Links ok
  PFE #1
    SIB #0
            Links ok
    SIB #1
            Links ok
    SIB #2
            Links ok
    SIB #3
            Links ok
    SIB #4
            Links ok
FPC #7
  PFE #0
    SIB #0
            Links ok
    SIB #1
            Links ok
    SIB #2
            Links ok
    SIB #3
            Links ok
    SIB #4
            Links ok

lcc3-re0:
--------------------------------------------------------------------------
Fabric management FPC state:
FPC #0
  PFE #0
    SIB #0
            Links ok
    SIB #1
            Links ok
    SIB #2
            Links ok
```

```
    SIB #3
            Links ok
    SIB #4
            Links ok
  PFE #1
    SIB #0
            Links ok
    SIB #1
            Links ok
    SIB #2
            Links ok
    SIB #3
            Links ok
    SIB #4
            Links ok
FPC #2
  PFE #0
    SIB #0
            Links ok
    SIB #1
            Links ok
    SIB #2
            Links ok
    SIB #3
            Links ok
    SIB #4
            Links ok
  PFE #1
    SIB #0
            Links ok
    SIB #1
            Links ok
    SIB #2
            Links ok
    SIB #3
            Links ok
    SIB #4
            Links ok
FPC #4
  PFE #0
    SIB #0
            Links ok
    SIB #1
```

```
            Links ok
    SIB #2
            Links ok
    SIB #3
            Links ok
    SIB #4
            Links ok
  PFE #1
    SIB #0
            Links ok
    SIB #1
            Links ok
    SIB #2
            Links ok
    SIB #3
            Links ok
    SIB #4
            Links ok
FPC #5
  PFE #0
    SIB #0
            Links ok
    SIB #1
            Links ok
    SIB #2
            Links ok
    SIB #3
            Links ok
    SIB #4
            Links ok
  PFE #1
    SIB #0
            Links ok
    SIB #1
            Links ok
    SIB #2
            Links ok
    SIB #3
            Links ok
    SIB #4
            Links ok
FPC #6
  PFE #0
```

```
    SIB #0
            Links ok
    SIB #1
            Links ok
    SIB #2
            Links ok
    SIB #3
            Links ok
    SIB #4
            Links ok
  PFE #1
    SIB #0
            Links ok
    SIB #1
            Links ok
    SIB #2
            Links ok
    SIB #3
            Links ok
    SIB #4
            Links ok
FPC #7
  PFE #0
    SIB #0
            Links ok
    SIB #1
            Links ok
    SIB #2
            Links ok
    SIB #3
            Links ok
    SIB #4
            Links ok
```

show chassis fabric fpcs (EX8200 Switch)

```
user@host> show chassis fabric fpcs

Fabric management FPC state
FPC 6
  PFE #0
```

```
      Plane 0: Plane enabled
      Plane 1: Plane enabled
      Plane 2: Plane enabled
      Plane 3: Plane enabled
      Plane 4: Links ok
      Plane 5: Links ok
      Plane 6: Links ok
      Plane 7: Links ok
      Plane 8: Plane enabled
      Plane 9: Plane enabled
      Plane 10: Plane enabled
      Plane 11: Plane enabled
  PFE #1
      Plane 0: Plane enabled
      Plane 1: Plane enabled
      Plane 2: Plane enabled
      Plane 3: Plane enabled
      Plane 4: Links ok
      Plane 5: Links ok
      Plane 6: Links ok
      Plane 7: Links ok
      Plane 8: Plane enabled
      Plane 9: Plane enabled
      Plane 10: Plane enabled
      Plane 11: Plane enabled
FPC 7
  PFE #0
      Plane 0: Plane enabled
      Plane 1: Plane enabled
      Plane 2: Plane enabled
      Plane 3: Plane enabled
      Plane 4: Links ok
      Plane 5: Links ok
      Plane 6: Links ok
      Plane 7: Links ok
      Plane 8: Plane enabled
      Plane 9: Plane enabled
      Plane 10: Plane enabled
      Plane 11: Plane enabled
  PFE #1
      Plane 0: Plane enabled
      Plane 1: Plane enabled
      Plane 2: Plane enabled
```

```
      Plane 3: Plane enabled
      Plane 4: Links ok
      Plane 5: Links ok
      Plane 6: Links ok
      Plane 7: Links ok
      Plane 8: Plane enabled
      Plane 9: Plane enabled
      Plane 10: Plane enabled
      Plane 11: Plane enabled
```

show chassis fabric fpcs (Junos OS Evolved)

The output of the `show chassis fabric fpcs` command is modified to include ASIC information. In the earlier releases, this command displayed ASICs as FCOREs. With this modification, for every FPC and SIB, information about ASIC and FCORE is presented separately in the output. For PTX10008, the ASIC numbering is 0-2 and for PTX10016, ASIC numbering is 0-5.

show chassis fabric fpcs (PTX10008)

```
user@host> show chassis fabric fpcs slot 0
Fabric management FPC state:
FPC #0
    PFE #0
           SIB0_Asic1_Fcore0 (plane 1)  Plane Enabled, Links ok
            SIB1_Asic0_Fcore0 (plane 2)  Plane Enabled, Links ok
            SIB1_Asic1_Fcore0 (plane 3)  Plane Enabled, Links ok
            SIB2_Asic0_Fcore0 (plane 4)  Plane Enabled, Links ok
            SIB2_Asic1_Fcore0 (plane 5)  Plane Enabled, Links ok
            SIB3_Asic0_Fcore0 (plane 6)  Plane Enabled, Links ok
            SIB3_Asic1_Fcore0 (plane 7)  Plane Enabled, Links ok
            SIB4_Asic0_Fcore0 (plane 8)  Plane Enabled, Links ok
            SIB4_Asic1_Fcore0 (plane 9)  Plane Enabled, Links ok
```

show chassis fabric fpcs (PTX10008 Router)

```
user@host> show chassis fabric fpcs slot 8
Fabric management FPC state:
FPC #0
    PFE #0
        SIB0_FASIC0 (plane  0)   Plane Enabled, Links OK
```

```
        SIB0_FASIC1 (plane  1)   Plane Enabled, Links OK
        SIB1_FASIC0 (plane  2)   Plane Enabled, Links OK
        SIB1_FASIC1 (plane  3)   Plane Enabled, Links OK
    PFE #1
        SIB0_FASIC0 (plane  0)   Plane Enabled, Links OK
        SIB0_FASIC1 (plane  1)   Plane Enabled, Links OK
        SIB1_FASIC0 (plane  2)   Plane Enabled, Links OK
        SIB1_FASIC1 (plane  3)   Plane Enabled, Links OK
    PFE #2
        SIB0_FASIC0 (plane  0)   Plane Enabled, Links OK
        SIB0_FASIC1 (plane  1)   Plane Enabled, Links OK
        SIB1_FASIC0 (plane  2)   Plane Enabled, Links OK
        SIB1_FASIC1 (plane  3)   Plane Enabled, Links OK
FPC #5
    PFE #0
        SIB0_FASIC0 (plane  0)   Plane Enabled, Links OK
        SIB0_FASIC1 (plane  1)   Plane Enabled, Links OK
        SIB1_FASIC0 (plane  2)   Plane Enabled, Links OK
        SIB1_FASIC1 (plane  3)   Plane Enabled, Links OK
    PFE #1
        SIB0_FASIC0 (plane  0)   Plane Enabled, Links OK
        SIB0_FASIC1 (plane  1)   Plane Enabled, Links OK
        SIB1_FASIC0 (plane  2)   Plane Enabled, Links OK
        SIB1_FASIC1 (plane  3)   Plane Enabled, Links OK
    PFE #2
        SIB0_FASIC0 (plane  0)   Plane Enabled, Links OK
        SIB0_FASIC1 (plane  1)   Plane Enabled, Links OK
        SIB1_FASIC0 (plane  2)   Plane Enabled, Links OK
        SIB1_FASIC1 (plane  3)   Plane Enabled, Links OK
    PFE #3
        SIB0_FASIC0 (plane  0)   Plane Enabled, Links OK
        SIB0_FASIC1 (plane  1)   Plane Enabled, Links OK
        SIB1_FASIC0 (plane  2)   Plane Enabled, Links OK
        SIB1_FASIC1 (plane  3)   Plane Enabled, Links OK
    PFE #4
        SIB0_FASIC0 (plane  0)   Plane Enabled, Links OK
        SIB0_FASIC1 (plane  1)   Plane Enabled, Links OK
        SIB1_FASIC0 (plane  2)   Plane Enabled, Links OK
        SIB1_FASIC1 (plane  3)   Plane Enabled, Links OK
    PFE #5
        SIB0_FASIC0 (plane  0)   Plane Enabled, Links OK
        SIB0_FASIC1 (plane  1)   Plane Enabled, Links OK
        SIB1_FASIC0 (plane  2)   Plane Enabled, Links OK
```

```
        SIB1_FASIC1 (plane  3)   Plane Enabled, Links OK
FPC #6
    PFE #0
        SIB0_FASIC0 (plane  0)   Plane Enabled, Links OK
        SIB0_FASIC1 (plane  1)   Plane Enabled, Links OK
        SIB1_FASIC0 (plane  2)   Plane Enabled, Links OK
        SIB1_FASIC1 (plane  3)   Plane Enabled, Links OK
    PFE #1
        SIB0_FASIC0 (plane  0)   Plane Enabled, Links OK
        SIB0_FASIC1 (plane  1)   Plane Enabled, Links OK
        SIB1_FASIC0 (plane  2)   Plane Enabled, Links OK
        SIB1_FASIC1 (plane  3)   Plane Enabled, Links OK
    PFE #2
        SIB0_FASIC0 (plane  0)   Plane Enabled, Links OK
        SIB0_FASIC1 (plane  1)   Plane Enabled, Links OK
        SIB1_FASIC0 (plane  2)   Plane Enabled, Links OK
        SIB1_FASIC1 (plane  3)   Plane Enabled, Links OK
    PFE #3
        SIB0_FASIC0 (plane  0)   Plane Enabled, Links OK
        SIB0_FASIC1 (plane  1)   Plane Enabled, Links OK
        SIB1_FASIC0 (plane  2)   Plane Enabled, Links OK
        SIB1_FASIC1 (plane  3)   Plane Enabled, Links OK
    PFE #4
        SIB0_FASIC0 (plane  0)   Plane Enabled, Links OK
        SIB0_FASIC1 (plane  1)   Plane Enabled, Links OK
        SIB1_FASIC0 (plane  2)   Plane Enabled, Links OK
        SIB1_FASIC1 (plane  3)   Plane Enabled, Links OK
    PFE #5
        SIB0_FASIC0 (plane  0)   Plane Enabled, Links OK
        SIB0_FASIC1 (plane  1)   Plane Enabled, Links OK
        SIB1_FASIC0 (plane  2)   Plane Enabled, Links OK
        SIB1_FASIC1 (plane  3)   Plane Enabled, Links OK
```

show chassis fabric fpcs (QFX10008 Switch)

```
user@host> show chassis fabric fpcs slot 0
Fabric management FPC state:
FPC #0
    PFE #0
        SIB0_PF0 (plane  0)   Plane Enabled, Links OK
        SIB0_PF1 (plane  1)   Plane Enabled, Links OK
```

```
        SIB1_PF0 (plane  2)   Plane Enabled, Links OK
        SIB1_PF1 (plane  3)   Plane Enabled, Links OK
        SIB2_PF0 (plane  4)   Plane Enabled, Links OK
        SIB2_PF1 (plane  5)   Plane Enabled, Links OK
        SIB3_PF0 (plane  6)   Plane Enabled, Links OK
        SIB3_PF1 (plane  7)   Plane Enabled, Links OK
        SIB4_PF0 (plane  8)   Plane Enabled, Links OK
        SIB4_PF1 (plane  9)   Plane Enabled, Links OK
        SIB5_PF0 (plane 10)   Plane Enabled, Links OK
        SIB5_PF1 (plane 11)   Plane Enabled, Links OK
    PFE #1
        SIB0_PF0 (plane  0)   Plane Enabled, Links OK
        SIB0_PF1 (plane  1)   Plane Enabled, Links OK
        SIB1_PF0 (plane  2)   Plane Enabled, Links OK
        SIB1_PF1 (plane  3)   Plane Enabled, Links OK
        SIB2_PF0 (plane  4)   Plane Enabled, Links OK
        SIB2_PF1 (plane  5)   Plane Enabled, Links OK
        SIB3_PF0 (plane  6)   Plane Enabled, Links OK
        SIB3_PF1 (plane  7)   Plane Enabled, Links OK
        SIB4_PF0 (plane  8)   Plane Enabled, Links OK
        SIB4_PF1 (plane  9)   Plane Enabled, Links OK
        SIB5_PF0 (plane 10)   Plane Enabled, Links OK
        SIB5_PF1 (plane 11)   Plane Enabled, Links OK
    PFE #2
        SIB0_PF0 (plane  0)   Plane Enabled, Links OK
        SIB0_PF1 (plane  1)   Plane Enabled, Links OK
        SIB1_PF0 (plane  2)   Plane Enabled, Links OK
        SIB1_PF1 (plane  3)   Plane Enabled, Links OK
        SIB2_PF0 (plane  4)   Plane Enabled, Links OK
        SIB2_PF1 (plane  5)   Plane Enabled, Links OK
        SIB3_PF0 (plane  6)   Plane Enabled, Links OK
        SIB3_PF1 (plane  7)   Plane Enabled, Links OK
        SIB4_PF0 (plane  8)   Plane Enabled, Links OK
        SIB4_PF1 (plane  9)   Plane Enabled, Links OK
        SIB5_PF0 (plane 10)   Plane Enabled, Links OK
        SIB5_PF1 (plane 11)   Plane Enabled, Links OK
    PFE #3
        SIB0_PF0 (plane  0)   Plane Enabled, Links OK
        SIB0_PF1 (plane  1)   Plane Enabled, Links OK
        SIB1_PF0 (plane  2)   Plane Enabled, Links OK
        SIB1_PF1 (plane  3)   Plane Enabled, Links OK
        SIB2_PF0 (plane  4)   Plane Enabled, Links OK
        SIB2_PF1 (plane  5)   Plane Enabled, Links OK
```

```
        SIB3_PF0 (plane  6)   Plane Enabled, Links OK
        SIB3_PF1 (plane  7)   Plane Enabled, Links OK
        SIB4_PF0 (plane  8)   Plane Enabled, Links OK
        SIB4_PF1 (plane  9)   Plane Enabled, Links OK
        SIB5_PF0 (plane 10)   Plane Enabled, Links OK
        SIB5_PF1 (plane 11)   Plane Enabled, Links OK
```

Release Information

Command introduced before Junos OS Release 7.4.

`extended` option introduced in JunosOS Release 16.1 for MX2020 and MX2010 Routers.

RELATED DOCUMENTATION

request chassis fpc | **420**

Displaying Information About DPCs or FPCs in an MX Series Router

show chassis fabric map

IN THIS SECTION

- Syntax | **1138**
- Syntax (MX Series Router) | **1138**
- Description | **1138**
- Options | **1138**
- Required Privilege Level | **1139**
- Output Fields | **1139**
- Sample Output | **1140**
- Release Information | **1148**

Syntax

```
show chassis fabric map
plane <plane-number>
```

Syntax (MX Series Router)

```
show chassis fabric map
<all-members>
<local>
<member member-id>
<plane plane-number>
```

Description

(M120 and MX Series routers and EX8200 switches only) On the M120 router, display the state of the switching fabric map for connections from the Forwarding Engine Boards (FEBs) to the ports on the fabric planes, as interpreted by the fabric plane. On the MX Series router and the EX8200 switch, display the state of the switching fabric map for connections from each Packet Forwarding Engine on the Dense Port Concentrators (DPCs) to the ports on the fabric planes, as interpreted by the fabric plane. For information about the meaning of “fabric plane”, “DPCs”, and “SIBs” on the switches, see the hardware documentation for your switch.

Options

none	Display the switching fabric map state for the M120 or MX Series router or EX8200 switch.
all-members	(MX Series routers only) (Optional) Display the switching fabric map state for all the members of the Virtual Chassis configuration.
local	(MX Series routers only) (Optional) Display the switching fabric map state for the local Virtual Chassis member.

member *member-id* — (MX Series routers only) (Optional) Display the switching fabric map state for the specified member of the Virtual Chassis configuration. Replace the ***member-id*** with a value of 0 or 1.

plane *plane-number* — (Optional) Display the state of the fabric link for the specified plane number.

- For the M120 router, replace ***plane-number*** with a value from 0 through 3.
- For the MX480 and MX240 routers, replace ***plane-number*** with a value from 0 through 7.
- For the MX960 router, replace ***plane-number*** with a value from 0 through 5.
- For the EX8208 switch, replace ***plane-number*** with a value from 0 through 11.
- For the EX8216 switch, replace ***plane-number*** with a value from 0 through 7.

Required Privilege Level

view

Output Fields

Table 65 on page 1139 lists the output fields for the `show chassis fabric map` command. Output fields are listed in the approximate order in which they appear.

Table 65: show chassis fabric map Output Fields

Field Name	Field Description
in-links	Fabric map for receive side links.
out-links	Fabric map for transmit side links.

Table 65: show chassis fabric map Output Fields *(Continued)*

Field Name	Field Description

state	State of the fabric link:
	• **RESET**—Link between SIB and FPC/DPC is powered down on purpose. This is done in all non-dual PFE based boards.
	• **UP**—Link between SIB and FPC/DPC is up and running.
	• **DOWN**—Link between SIB and FPC/DPC is powered down.
	• **FAULT**—SIB is in alarmed state where the SIB's plane is not operational for the following reasons:
	  • On-board F-chip is not operational.
	  • Fiber optic connector faults.
	  • FPC connector faults.
	  • SIB midplane connector faults.

Sample Output

show chassis fabric map (MX480 Router)

This sample applies to Junos OS Releases 18.2R2, 18.3R2, and 18.4R1 and later, in which the output of the CLI command `show chassis fabric map`, on MX series routers carrying MPCs with SF and XF ASICs, uses the label FPC instead of DPC (for example, 'FPC5PFE0').

```
user@host> show chassis fabric map plane 0

FPC5PFE0->CB0F0_02_0    Up         CB0F0_02_0->FPC5PFE0    Up
FPC5PFE1->CB0F0_02_1    Up         CB0F0_02_1->FPC5PFE1    Up
FPC5PFE2->CB0F0_02_2    Down       CB0F0_02_2->FPC5PFE2    Down
FPC5PFE3->CB0F0_02_3    Down       CB0F0_02_3->FPC5PFE3    Down
FPC5PFE0->CB0F0_03_0    Up         CB0F0_03_0->FPC5PFE0    Up
FPC5PFE1->CB0F0_03_1    Up         CB0F0_03_1->FPC5PFE1    Up
FPC5PFE2->CB0F0_03_2    Down       CB0F0_03_2->FPC5PFE2    Down
```

```
FPC5PFE3->CB0F0_03_3    Down       CB0F0_03_3->FPC5PFE3    Down
FPC3PFE0->CB0F0_04_0    Up         CB0F0_04_0->FPC3PFE0    Up
FPC3PFE1->CB0F0_04_1    Up         CB0F0_04_1->FPC3PFE1    Up
FPC3PFE2->CB0F0_04_2    Down       CB0F0_04_2->FPC3PFE2    Down
FPC3PFE3->CB0F0_04_3    Down       CB0F0_04_3->FPC3PFE3    Down
FPC3PFE0->CB0F0_05_0    Up         CB0F0_05_0->FPC3PFE0    Up
FPC3PFE1->CB0F0_05_1    Up         CB0F0_05_1->FPC3PFE1    Up
FPC3PFE2->CB0F0_05_2    Down       CB0F0_05_2->FPC3PFE2    Down
FPC3PFE3->CB0F0_05_3    Down       CB0F0_05_3->FPC3PFE3    Down
FPC1PFE0->CB0F0_06_0    Down       CB0F0_06_0->FPC1PFE0    Down
FPC1PFE1->CB0F0_06_1    Down       CB0F0_06_1->FPC1PFE1    Down
FPC1PFE2->CB0F0_06_2    Down       CB0F0_06_2->FPC1PFE2    Down
FPC1PFE3->CB0F0_06_3    Down       CB0F0_06_3->FPC1PFE3    Down
[...Output truncated...]
```

show chassis fabric map (M120 Router)

```
user@host> show chassis fabric map
FEB0->CB0F0_00 up CB0F0_08->FEB7 Down

FEB1->CB0F0_01 Down CB0F0_09->FEB6 Down

FEB6->CB0F0_02 Down CB0F0_10->FEB1 Down

FEB2->CB0F0_03 Down CB0F0_11->FEB0 up

FEB3->CB0F0_04 Down CB0F0_12->FEB3 Down

FEB4->CB0F0_05 up CB0F0_13->FEB2 Down

FEB7->CB0F0_06 Down CB0F0_14->FEB5 Down

FEB5->CB0F0_07 Down CB0F0_15->FEB4 up:
```

show chassis fabric map (MX Series Routers)

```
user@host> show chassis fabric map
DPC4PFE0->CB0F0_00_0    up         CB0F0_00_0->DPC4PFE0    up
DPC4PFE1->CB0F0_00_1    up         CB0F0_00_1->DPC4PFE1    up
DPC4PFE2->CB0F0_00_2    up         CB0F0_00_2->DPC4PFE2    up
```

```
DPC4PFE3->CB0F0_00_3    up          CB0F0_00_3->DPC4PFE3    up
DPC7PFE0->CB0F0_01_0    Down        CB0F0_01_0->DPC7PFE0    Down
DPC7PFE1->CB0F0_01_1    Down        CB0F0_01_1->DPC7PFE1    Down
DPC7PFE2->CB0F0_01_2    Down        CB0F0_01_2->DPC7PFE2    Down
DPC7PFE3->CB0F0_01_3    Down        CB0F0_01_3->DPC7PFE3    Down
DPC3PFE0->CB0F0_03_0    Down        CB0F0_03_0->DPC3PFE0    Down
DPC3PFE1->CB0F0_03_1    Down        CB0F0_03_1->DPC3PFE1    Down
DPC3PFE2->CB0F0_03_2    Down        CB0F0_03_2->DPC3PFE2    Down
DPC3PFE3->CB0F0_03_3    Down        CB0F0_03_3->DPC3PFE3    Down
DPC8PFE0->CB0F0_05_0    Down        CB0F0_05_0->DPC8PFE0    Down
DPC8PFE1->CB0F0_05_1    Down        CB0F0_05_1->DPC8PFE1    Down
DPC8PFE2->CB0F0_05_2    Down        CB0F0_05_2->DPC8PFE2    Down
DPC8PFE3->CB0F0_05_3    Down        CB0F0_05_3->DPC8PFE3    Down
DPC1PFE0->CB0F0_06_0    Down        CB0F0_06_0->DPC1PFE0    Down
DPC1PFE1->CB0F0_06_1    Down        CB0F0_06_1->DPC1PFE1    Down
DPC1PFE2->CB0F0_06_2    Down        CB0F0_06_2->DPC1PFE2    Down
DPC1PFE3->CB0F0_06_3    Down        CB0F0_06_3->DPC1PFE3    Down
DPC10PFE0->CB0F0_07_0   Down        CB0F0_07_0->DPC10PFE0   Down
DPC10PFE1->CB0F0_07_1   Down        CB0F0_07_1->DPC10PFE1   Down
DPC10PFE2->CB0F0_07_2   Down        CB0F0_07_2->DPC10PFE2   Down
DPC10PFE3->CB0F0_07_3   Down        CB0F0_07_3->DPC10PFE3   Down
DPC11PFE0->CB0F0_08_0   Down        CB0F0_08_0->DPC11PFE0   Down
DPC11PFE1->CB0F0_08_1   Down        CB0F0_08_1->DPC11PFE1   Down
DPC11PFE2->CB0F0_08_2   Down        CB0F0_08_2->DPC11PFE2   Down
DPC11PFE3->CB0F0_08_3   Down        CB0F0_08_3->DPC11PFE3   Down
DPC0PFE0->CB0F0_09_0    Down        CB0F0_09_0->DPC0PFE0    Down
DPC0PFE1->CB0F0_09_1    Down        CB0F0_09_1->DPC0PFE1    Down
DPC0PFE2->CB0F0_09_2    Down        CB0F0_09_2->DPC0PFE2    Down
DPC0PFE3->CB0F0_09_3    Down        CB0F0_09_3->DPC0PFE3    Down
DPC9PFE0->CB0F0_11_0    Down        CB0F0_11_0->DPC9PFE0    Down
DPC9PFE1->CB0F0_11_1    Down        CB0F0_11_1->DPC9PFE1    Down
DPC9PFE2->CB0F0_11_2    Down        CB0F0_11_2->DPC9PFE2    Down
DPC9PFE3->CB0F0_11_3    Down        CB0F0_11_3->DPC9PFE3    Down
DPC2PFE0->CB0F0_13_0    up          CB0F0_13_0->DPC2PFE0    up
DPC2PFE1->CB0F0_13_1    up          CB0F0_13_1->DPC2PFE1    up
DPC2PFE2->CB0F0_13_2    up          CB0F0_13_2->DPC2PFE2    up
DPC2PFE3->CB0F0_13_3    up          CB0F0_13_3->DPC2PFE3    up
DPC6PFE0->CB0F0_14_0    Down        CB0F0_14_0->DPC6PFE0    Down
DPC6PFE1->CB0F0_14_1    Down        CB0F0_14_1->DPC6PFE1    Down
DPC6PFE2->CB0F0_14_2    Down        CB0F0_14_2->DPC6PFE2    Down
DPC6PFE3->CB0F0_14_3    Down        CB0F0_14_3->DPC6PFE3    Down
DPC5PFE0->CB0F0_15_0    Down        CB0F0_15_0->DPC5PFE0    Down
DPC5PFE1->CB0F0_15_1    Down        CB0F0_15_1->DPC5PFE1    Down
```

```
DPC5PFE2->CB0F0_15_2    Down        CB0F0_15_2->DPC5PFE2    Down
DPC5PFE3->CB0F0_15_3    Down        CB0F0_15_3->DPC5PFE3    Down
DPC4PFE0->CB0F1_00_0    up          CB0F1_00_0->DPC4PFE0    up
DPC4PFE1->CB0F1_00_1    up          CB0F1_00_1->DPC4PFE1    up
DPC4PFE2->CB0F1_00_2    up          CB0F1_00_2->DPC4PFE2    up
DPC4PFE3->CB0F1_00_3    up          CB0F1_00_3->DPC4PFE3    up
DPC7PFE0->CB0F1_01_0    Down        CB0F1_01_0->DPC7PFE0    Down
DPC7PFE1->CB0F1_01_1    Down        CB0F1_01_1->DPC7PFE1    Down
DPC7PFE2->CB0F1_01_2    Down        CB0F1_01_2->DPC7PFE2    Down
DPC7PFE3->CB0F1_01_3    Down        CB0F1_01_3->DPC7PFE3    Down
DPC3PFE0->CB0F1_03_0    Down        CB0F1_03_0->DPC3PFE0    Down
DPC3PFE1->CB0F1_03_1    Down        CB0F1_03_1->DPC3PFE1    Down
DPC3PFE2->CB0F1_03_2    Down        CB0F1_03_2->DPC3PFE2    Down
DPC3PFE3->CB0F1_03_3    Down        CB0F1_03_3->DPC3PFE3    Down
DPC8PFE0->CB0F1_05_0    Down        CB0F1_05_0->DPC8PFE0    Down
DPC8PFE1->CB0F1_05_1    Down        CB0F1_05_1->DPC8PFE1    Down
DPC8PFE2->CB0F1_05_2    Down        CB0F1_05_2->DPC8PFE2    Down
DPC8PFE3->CB0F1_05_3    Down        CB0F1_05_3->DPC8PFE3    Down
DPC1PFE0->CB0F1_06_0    Down        CB0F1_06_0->DPC1PFE0    Down
DPC1PFE1->CB0F1_06_1    Down        CB0F1_06_1->DPC1PFE1    Down
DPC1PFE2->CB0F1_06_2    Down        CB0F1_06_2->DPC1PFE2    Down
DPC1PFE3->CB0F1_06_3    Down        CB0F1_06_3->DPC1PFE3    Down
DPC10PFE0->CB0F1_07_0   Down        CB0F1_07_0->DPC10PFE0   Down
DPC10PFE1->CB0F1_07_1   Down        CB0F1_07_1->DPC10PFE1   Down
DPC10PFE2->CB0F1_07_2   Down        CB0F1_07_2->DPC10PFE2   Down
DPC10PFE3->CB0F1_07_3   Down        CB0F1_07_3->DPC10PFE3   Down
DPC11PFE0->CB0F1_08_0   Down        CB0F1_08_0->DPC11PFE0   Down
DPC11PFE1->CB0F1_08_1   Down        CB0F1_08_1->DPC11PFE1   Down
DPC11PFE2->CB0F1_08_2   Down        CB0F1_08_2->DPC11PFE2   Down
DPC11PFE3->CB0F1_08_3   Down        CB0F1_08_3->DPC11PFE3   Down
DPC0PFE0->CB0F1_09_0    Down        CB0F1_09_0->DPC0PFE0    Down
DPC0PFE1->CB0F1_09_1    Down        CB0F1_09_1->DPC0PFE1    Down
DPC0PFE2->CB0F1_09_2    Down        CB0F1_09_2->DPC0PFE2    Down
DPC0PFE3->CB0F1_09_3    Down        CB0F1_09_3->DPC0PFE3    Down
DPC9PFE0->CB0F1_11_0    Down        CB0F1_11_0->DPC9PFE0    Down
DPC9PFE1->CB0F1_11_1    Down        CB0F1_11_1->DPC9PFE1    Down
DPC9PFE2->CB0F1_11_2    Down        CB0F1_11_2->DPC9PFE2    Down
DPC9PFE3->CB0F1_11_3    Down        CB0F1_11_3->DPC9PFE3    Down
DPC2PFE0->CB0F1_13_0    up          CB0F1_13_0->DPC2PFE0    up
DPC2PFE1->CB0F1_13_1    up          CB0F1_13_1->DPC2PFE1    up
DPC2PFE2->CB0F1_13_2    up          CB0F1_13_2->DPC2PFE2    up
DPC2PFE3->CB0F1_13_3    up          CB0F1_13_3->DPC2PFE3    up
DPC6PFE0->CB0F1_14_0    Down        CB0F1_14_0->DPC6PFE0    Down
```

```
DPC6PFE1->CB0F1_14_1    Down        CB0F1_14_1->DPC6PFE1    Down
DPC6PFE2->CB0F1_14_2    Down        CB0F1_14_2->DPC6PFE2    Down
DPC6PFE3->CB0F1_14_3    Down        CB0F1_14_3->DPC6PFE3    Down
DPC5PFE0->CB0F1_15_0    Down        CB0F1_15_0->DPC5PFE0    Down
DPC5PFE1->CB0F1_15_1    Down        CB0F1_15_1->DPC5PFE1    Down
DPC5PFE2->CB0F1_15_2    Down        CB0F1_15_2->DPC5PFE2    Down
DPC5PFE3->CB0F1_15_3    Down        CB0F1_15_3->DPC5PFE3    Down
DPC4PFE0->CB1F0_00_0    up          CB1F0_00_0->DPC4PFE0    up
DPC4PFE1->CB1F0_00_1    up          CB1F0_00_1->DPC4PFE1    up
DPC4PFE2->CB1F0_00_2    up          CB1F0_00_2->DPC4PFE2    up
DPC4PFE3->CB1F0_00_3    up          CB1F0_00_3->DPC4PFE3    up
DPC7PFE0->CB1F0_01_0    Down        CB1F0_01_0->DPC7PFE0    Down
DPC7PFE1->CB1F0_01_1    Down        CB1F0_01_1->DPC7PFE1    Down
DPC7PFE2->CB1F0_01_2    Down        CB1F0_01_2->DPC7PFE2    Down
DPC7PFE3->CB1F0_01_3    Down        CB1F0_01_3->DPC7PFE3    Down
DPC3PFE0->CB1F0_03_0    Down        CB1F0_03_0->DPC3PFE0    Down
DPC3PFE1->CB1F0_03_1    Down        CB1F0_03_1->DPC3PFE1    Down
DPC3PFE2->CB1F0_03_2    Down        CB1F0_03_2->DPC3PFE2    Down
DPC3PFE3->CB1F0_03_3    Down        CB1F0_03_3->DPC3PFE3    Down
DPC8PFE0->CB1F0_05_0    Down        CB1F0_05_0->DPC8PFE0    Down
DPC8PFE1->CB1F0_05_1    Down        CB1F0_05_1->DPC8PFE1    Down
DPC8PFE2->CB1F0_05_2    Down        CB1F0_05_2->DPC8PFE2    Down
DPC8PFE3->CB1F0_05_3    Down        CB1F0_05_3->DPC8PFE3    Down
DPC1PFE0->CB1F0_06_0    Down        CB1F0_06_0->DPC1PFE0    Down
DPC1PFE1->CB1F0_06_1    Down        CB1F0_06_1->DPC1PFE1    Down
DPC1PFE2->CB1F0_06_2    Down        CB1F0_06_2->DPC1PFE2    Down
DPC1PFE3->CB1F0_06_3    Down        CB1F0_06_3->DPC1PFE3    Down
DPC10PFE0->CB1F0_07_0   Down        CB1F0_07_0->DPC10PFE0   Down
DPC10PFE1->CB1F0_07_1   Down        CB1F0_07_1->DPC10PFE1   Down
DPC10PFE2->CB1F0_07_2   Down        CB1F0_07_2->DPC10PFE2   Down
DPC10PFE3->CB1F0_07_3   Down        CB1F0_07_3->DPC10PFE3   Down
DPC11PFE0->CB1F0_08_0   Down        CB1F0_08_0->DPC11PFE0   Down
DPC11PFE1->CB1F0_08_1   Down        CB1F0_08_1->DPC11PFE1   Down
DPC11PFE2->CB1F0_08_2   Down        CB1F0_08_2->DPC11PFE2   Down
DPC11PFE3->CB1F0_08_3   Down        CB1F0_08_3->DPC11PFE3   Down
DPC0PFE0->CB1F0_09_0    Down        CB1F0_09_0->DPC0PFE0    Down
DPC0PFE1->CB1F0_09_1    Down        CB1F0_09_1->DPC0PFE1    Down
DPC0PFE2->CB1F0_09_2    Down        CB1F0_09_2->DPC0PFE2    Down
DPC0PFE3->CB1F0_09_3    Down        CB1F0_09_3->DPC0PFE3    Down
DPC9PFE0->CB1F0_11_0    Down        CB1F0_11_0->DPC9PFE0    Down
DPC9PFE1->CB1F0_11_1    Down        CB1F0_11_1->DPC9PFE1    Down
DPC9PFE2->CB1F0_11_2    Down        CB1F0_11_2->DPC9PFE2    Down
DPC9PFE3->CB1F0_11_3    Down        CB1F0_11_3->DPC9PFE3    Down
```

```
DPC2PFE0->CB1F0_13_0    up          CB1F0_13_0->DPC2PFE0    up
DPC2PFE1->CB1F0_13_1    up          CB1F0_13_1->DPC2PFE1    up
DPC2PFE2->CB1F0_13_2    up          CB1F0_13_2->DPC2PFE2    up
DPC2PFE3->CB1F0_13_3    up          CB1F0_13_3->DPC2PFE3    up
DPC6PFE0->CB1F0_14_0    Down        CB1F0_14_0->DPC6PFE0    Down
DPC6PFE1->CB1F0_14_1    Down        CB1F0_14_1->DPC6PFE1    Down
DPC6PFE2->CB1F0_14_2    Down        CB1F0_14_2->DPC6PFE2    Down
DPC6PFE3->CB1F0_14_3    Down        CB1F0_14_3->DPC6PFE3    Down
DPC5PFE0->CB1F0_15_0    Down        CB1F0_15_0->DPC5PFE0    Down
DPC5PFE1->CB1F0_15_1    Down        CB1F0_15_1->DPC5PFE1    Down
DPC5PFE2->CB1F0_15_2    Down        CB1F0_15_2->DPC5PFE2    Down
DPC5PFE3->CB1F0_15_3    Down        CB1F0_15_3->DPC5PFE3    Down
DPC4PFE0->CB1F1_00_0    up          CB1F1_00_0->DPC4PFE0    up
DPC4PFE1->CB1F1_00_1    up          CB1F1_00_1->DPC4PFE1    up
DPC4PFE2->CB1F1_00_2    up          CB1F1_00_2->DPC4PFE2    up
DPC4PFE3->CB1F1_00_3    up          CB1F1_00_3->DPC4PFE3    up
DPC7PFE0->CB1F1_01_0    Down        CB1F1_01_0->DPC7PFE0    Down
DPC7PFE1->CB1F1_01_1    Down        CB1F1_01_1->DPC7PFE1    Down
DPC7PFE2->CB1F1_01_2    Down        CB1F1_01_2->DPC7PFE2    Down
DPC7PFE3->CB1F1_01_3    Down        CB1F1_01_3->DPC7PFE3    Down
DPC3PFE0->CB1F1_03_0    Down        CB1F1_03_0->DPC3PFE0    Down
DPC3PFE1->CB1F1_03_1    Down        CB1F1_03_1->DPC3PFE1    Down
DPC3PFE2->CB1F1_03_2    Down        CB1F1_03_2->DPC3PFE2    Down
DPC3PFE3->CB1F1_03_3    Down        CB1F1_03_3->DPC3PFE3    Down
DPC8PFE0->CB1F1_05_0    Down        CB1F1_05_0->DPC8PFE0    Down
DPC8PFE1->CB1F1_05_1    Down        CB1F1_05_1->DPC8PFE1    Down
DPC8PFE2->CB1F1_05_2    Down        CB1F1_05_2->DPC8PFE2    Down
DPC8PFE3->CB1F1_05_3    Down        CB1F1_05_3->DPC8PFE3    Down
DPC1PFE0->CB1F1_06_0    Down        CB1F1_06_0->DPC1PFE0    Down
DPC1PFE1->CB1F1_06_1    Down        CB1F1_06_1->DPC1PFE1    Down
DPC1PFE2->CB1F1_06_2    Down        CB1F1_06_2->DPC1PFE2    Down
DPC1PFE3->CB1F1_06_3    Down        CB1F1_06_3->DPC1PFE3    Down
DPC10PFE0->CB1F1_07_0   Down        CB1F1_07_0->DPC10PFE0   Down
DPC10PFE1->CB1F1_07_1   Down        CB1F1_07_1->DPC10PFE1   Down
DPC10PFE2->CB1F1_07_2   Down        CB1F1_07_2->DPC10PFE2   Down
DPC10PFE3->CB1F1_07_3   Down        CB1F1_07_3->DPC10PFE3   Down
DPC11PFE0->CB1F1_08_0   Down        CB1F1_08_0->DPC11PFE0   Down
DPC11PFE1->CB1F1_08_1   Down        CB1F1_08_1->DPC11PFE1   Down
DPC11PFE2->CB1F1_08_2   Down        CB1F1_08_2->DPC11PFE2   Down
DPC11PFE3->CB1F1_08_3   Down        CB1F1_08_3->DPC11PFE3   Down
DPC0PFE0->CB1F1_09_0    Down        CB1F1_09_0->DPC0PFE0    Down
DPC0PFE1->CB1F1_09_1    Down        CB1F1_09_1->DPC0PFE1    Down
DPC0PFE2->CB1F1_09_2    Down        CB1F1_09_2->DPC0PFE2    Down
```

```
DPC0PFE3->CB1F1_09_3    Down       CB1F1_09_3->DPC0PFE3    Down
DPC9PFE0->CB1F1_11_0    Down       CB1F1_11_0->DPC9PFE0    Down
DPC9PFE1->CB1F1_11_1    Down       CB1F1_11_1->DPC9PFE1    Down
DPC9PFE2->CB1F1_11_2    Down       CB1F1_11_2->DPC9PFE2    Down
DPC9PFE3->CB1F1_11_3    Down       CB1F1_11_3->DPC9PFE3    Down
DPC2PFE0->CB1F1_13_0    up         CB1F1_13_0->DPC2PFE0    up
DPC2PFE1->CB1F1_13_1    up         CB1F1_13_1->DPC2PFE1    up
DPC2PFE2->CB1F1_13_2    up         CB1F1_13_2->DPC2PFE2    up
DPC2PFE3->CB1F1_13_3    up         CB1F1_13_3->DPC2PFE3    up
DPC6PFE0->CB1F1_14_0    Down       CB1F1_14_0->DPC6PFE0    Down
DPC6PFE1->CB1F1_14_1    Down       CB1F1_14_1->DPC6PFE1    Down
DPC6PFE2->CB1F1_14_2    Down       CB1F1_14_2->DPC6PFE2    Down
DPC6PFE3->CB1F1_14_3    Down       CB1F1_14_3->DPC6PFE3    Down
DPC5PFE0->CB1F1_15_0    Down       CB1F1_15_0->DPC5PFE0    Down
DPC5PFE1->CB1F1_15_1    Down       CB1F1_15_1->DPC5PFE1    Down
DPC5PFE2->CB1F1_15_2    Down       CB1F1_15_2->DPC5PFE2    Down
DPC5PFE3->CB1F1_15_3    Down       CB1F1_15_3->DPC5PFE3    Down
plane 4 is not up
plane 5 is not up
```

show chassis fabric map plane 1 (EX8200 Switch)

```
user@host> show chassis fabric map plane 1
user@host> show chassis fabric map plane 1
DPC6PFE0->CB0F0_00_0    Down       CB0F0_00_0->DPC6PFE0    Down
DPC6PFE1->CB0F0_00_1    Down       CB0F0_00_1->DPC6PFE1    Down
DPC6PFE2->CB0F0_00_2    Down       CB0F0_00_2->DPC6PFE2    Down
DPC6PFE3->CB0F0_00_3    Down       CB0F0_00_3->DPC6PFE3    Down
DPC0PFE0->CB0F0_01_0    Down       CB0F0_01_0->DPC0PFE0    Down
DPC0PFE1->CB0F0_01_1    Down       CB0F0_01_1->DPC0PFE1    Down
DPC0PFE2->CB0F0_01_2    Down       CB0F0_01_2->DPC0PFE2    Down
DPC0PFE3->CB0F0_01_3    Down       CB0F0_01_3->DPC0PFE3    Down
DPC5PFE0->CB0F0_02_0    Down       CB0F0_02_0->DPC5PFE0    Down
DPC5PFE1->CB0F0_02_1    Down       CB0F0_02_1->DPC5PFE1    Down
DPC5PFE2->CB0F0_02_2    Down       CB0F0_02_2->DPC5PFE2    Down
DPC5PFE3->CB0F0_02_3    Down       CB0F0_02_3->DPC5PFE3    Down
DPC3PFE0->CB0F0_03_0    Down       CB0F0_03_0->DPC3PFE0    Down
DPC3PFE1->CB0F0_03_1    Down       CB0F0_03_1->DPC3PFE1    Down
DPC3PFE2->CB0F0_03_2    Down       CB0F0_03_2->DPC3PFE2    Down
DPC3PFE3->CB0F0_03_3    Down       CB0F0_03_3->DPC3PFE3    Down
DPC4PFE0->CB0F0_04_0    Down       CB0F0_04_0->DPC4PFE0    Down
```

```
DPC4PFE1->CB0F0_04_1    Down        CB0F0_04_1->DPC4PFE1    Down
DPC4PFE2->CB0F0_04_2    Down        CB0F0_04_2->DPC4PFE2    Down
DPC4PFE3->CB0F0_04_3    Down        CB0F0_04_3->DPC4PFE3    Down
DPC2PFE0->CB0F0_05_0    Down        CB0F0_05_0->DPC2PFE0    Down
DPC2PFE1->CB0F0_05_1    Down        CB0F0_05_1->DPC2PFE1    Down
DPC2PFE2->CB0F0_05_2    Down        CB0F0_05_2->DPC2PFE2    Down
DPC2PFE3->CB0F0_05_3    Down        CB0F0_05_3->DPC2PFE3    Down
DPC7PFE0->CB0F0_06_0    Down        CB0F0_06_0->DPC7PFE0    Down
DPC7PFE1->CB0F0_06_1    Down        CB0F0_06_1->DPC7PFE1    Down
DPC7PFE2->CB0F0_06_2    Down        CB0F0_06_2->DPC7PFE2    Down
DPC7PFE3->CB0F0_06_3    Down        CB0F0_06_3->DPC7PFE3    Down
DPC1PFE0->CB0F0_07_0    Down        CB0F0_07_0->DPC1PFE0    Down
DPC1PFE1->CB0F0_07_1    Down        CB0F0_07_1->DPC1PFE1    Down
DPC1PFE2->CB0F0_07_2    Down        CB0F0_07_2->DPC1PFE2    Down
DPC1PFE3->CB0F0_07_3    Down        CB0F0_07_3->DPC1PFE3    Down
DPC0PFE0->CB0F0_08_0    Down        CB0F0_08_0->DPC0PFE0    Down
DPC0PFE1->CB0F0_08_1    Down        CB0F0_08_1->DPC0PFE1    Down
DPC0PFE2->CB0F0_08_2    Down        CB0F0_08_2->DPC0PFE2    Down
DPC0PFE3->CB0F0_08_3    Down        CB0F0_08_3->DPC0PFE3    Down
DPC7PFE0->CB0F0_09_0    Down        CB0F0_09_0->DPC7PFE0    Down
DPC7PFE1->CB0F0_09_1    Down        CB0F0_09_1->DPC7PFE1    Down
DPC7PFE2->CB0F0_09_2    Down        CB0F0_09_2->DPC7PFE2    Down
DPC7PFE3->CB0F0_09_3    Down        CB0F0_09_3->DPC7PFE3    Down
DPC1PFE0->CB0F0_10_0    Down        CB0F0_10_0->DPC1PFE0    Down
DPC1PFE1->CB0F0_10_1    Down        CB0F0_10_1->DPC1PFE1    Down
DPC1PFE2->CB0F0_10_2    Down        CB0F0_10_2->DPC1PFE2    Down
DPC1PFE3->CB0F0_10_3    Down        CB0F0_10_3->DPC1PFE3    Down
DPC4PFE0->CB0F0_11_0    Down        CB0F0_11_0->DPC4PFE0    Down
DPC4PFE1->CB0F0_11_1    Down        CB0F0_11_1->DPC4PFE1    Down
DPC4PFE2->CB0F0_11_2    Down        CB0F0_11_2->DPC4PFE2    Down
DPC4PFE3->CB0F0_11_3    Down        CB0F0_11_3->DPC4PFE3    Down
DPC2PFE0->CB0F0_12_0    Down        CB0F0_12_0->DPC2PFE0    Down
DPC2PFE1->CB0F0_12_1    Down        CB0F0_12_1->DPC2PFE1    Down
DPC2PFE2->CB0F0_12_2    Down        CB0F0_12_2->DPC2PFE2    Down
DPC2PFE3->CB0F0_12_3    Down        CB0F0_12_3->DPC2PFE3    Down
DPC5PFE0->CB0F0_13_0    Down        CB0F0_13_0->DPC5PFE0    Down
DPC5PFE1->CB0F0_13_1    Down        CB0F0_13_1->DPC5PFE1    Down
DPC5PFE2->CB0F0_13_2    Down        CB0F0_13_2->DPC5PFE2    Down
DPC5PFE3->CB0F0_13_3    Down        CB0F0_13_3->DPC5PFE3    Down
DPC3PFE0->CB0F0_14_0    Down        CB0F0_14_0->DPC3PFE0    Down
DPC3PFE1->CB0F0_14_1    Down        CB0F0_14_1->DPC3PFE1    Down
DPC3PFE2->CB0F0_14_2    Down        CB0F0_14_2->DPC3PFE2    Down
DPC3PFE3->CB0F0_14_3    Down        CB0F0_14_3->DPC3PFE3    Down
```

```
DPC6PFE0->CB0F0_15_0     Down        CB0F0_15_0->DPC6PFE0     Down
DPC6PFE1->CB0F0_15_1     Down        CB0F0_15_1->DPC6PFE1     Down
DPC6PFE2->CB0F0_15_2     Down        CB0F0_15_2->DPC6PFE2     Down
DPC6PFE3->CB0F0_15_3     Down        CB0F0_15_3->DPC6PFE3     Down
```

Release Information

Command introduced in Junos OS Release 8.0.

show chassis fabric plane

IN THIS SECTION

- Syntax | **1148**
- Syntax (TX Matrix Plus Router) | **1149**
- Syntax (MX Series Routers) | **1149**
- Description | **1149**
- Options | **1149**
- Required Privilege Level | **1151**
- Output Fields | **1151**
- Sample Output | **1162**
- Release Information | **1189**

Syntax

```
show chassis fabric plane
```

Syntax (TX Matrix Plus Router)

```
show chassis fabric plane
<detail | extensive | terse>
<lcc number | sfc number>
```

Syntax (MX Series Routers)

```
show chassis fabric plane
<extended>
<detail | extensive | terse>
<all-members>
<local>
<member member-id>
```

Description

(TX Matrix Plus router, T4000, T1600, M120, and MX Series routers and EX8200 switches only) On the M120 router, display the state of all fabric plane connections to the Forwarding Engine Boards (FEBs). On MX Series routers, display the state of all fabric plane connections to the Dense Port Concentrators (DPCs) and Packet Forwarding Engines (PFEs) on the Flexible PIC Concentrators (FPCs). On the TX Matrix Plus router, and on T1600 or T4000 routers in a routing matrix, display the state of the fabric management plane and the logical planes on the switch-fabric chassis (SFC) and line-card chassis (LCC). On EX8200 switches, display the state of all fabric planes. This command can be used on the primary Routing Engine only.

Options

none (MX2010, MX2020, and MX2008 Routers only) (Optional) Display the state of the fabric management plane.

extended (MX2020, MX2010, and MX2008 Routers only) (Optional) Display the state of the fabric management planes (all 24 fabric planes).

detail (TX Matrix Plus routers, T1600 or T4000 routers in a routing matrix, and MX Series routers only) (Optional) Display detailed output for the fabric management plane. Show Switch Interface Board (SIB) states for the TXP-F13 SIB and the TXP-F2S SIB.

extensive (TX Matrix Plus routers, T1600 or T4000 routers in a routing matrix, and MX Series routers only) (Optional) Display extensive output for the fabric management plane.

terse (TX Matrix Plus routers and MX Series routers only) (Optional) Display terse output for the fabric management plane.

all-members (MX Series routers only) (Optional) Display the state of all fabric plane connections on all members of the Virtual Chassis configuration.

lcc *number* (TX Matrix routers and TX Matrix Plus routers only) (Optional) Line-card chassis number.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local (MX Series routers only) (Optional) Display the state of all fabric plane connections on the local Virtual Chassis member.

member *member-id* (MX Series routers only) (Optional) Display the state of all fabric plane connections on the specified member of the Virtual Chassis configuration. Replace *member-id* with a value of 0 or 1.

sfc *number* (TX Matrix Plus router only) (Optional) Show information about the TX Matrix Plus router (SFC). Replace *number* with 0.

Required Privilege Level

view

Output Fields

Table 66 on page 1151 lists the output fields for the `show chassis fabric plane` command. Output fields are listed in the approximate order in which they appear.

Table 66: show chassis fabric plane Output Fields

Field Name	Field Description	Level of output
Plane	(TX Matrix Plus, MX Series routers, M120 routers, and EX8200 switches only) Number of the plane.	none

Table 66: show chassis fabric plane Output Fields *(Continued)*

Field Name	Field Description	Level of output
Plane state	(MX Series and M120 routers and EX8200 switches only) State of each plane: • ACTIVE—SIB is operational and running. **NOTE**: On the Enhanced MX SCB with MPCs, a maximum of 4 planes are operational and running. On all the other SCBs with MPCs, all the planes are operational and running. • FAULTY— SIB is in alarmed state where the SIB's plane is not operational for the following reasons: • On-board fabric ASIC is not operational. • Fiber optic connector faults. • FPC connector faults. • SIB midplane connector faults. (MX2010, MX2020, MX10003, and MX2008 Routers only) State of each plane: • ACTIVE—SFB is operational and running. • OFFLINE— SFB is in offline.	none
FEB	(M120 routers only) FEB number and state of links to each FEB: • Link error—Link between SIB and FPC is not operational. • Links ok—Link between SIB and FPC is active. • Unused—No FPC is present.	none

Table 66: show chassis fabric plane Output Fields *(Continued)*

Field Name	Field Description	Level of output
FPC	(MX Series routers only) Slot number of each Dense Port Concentrator (DPC) or Flexible PIC Concentrator (FPC). An FPC occupies two DPC slots on an MX Series router. The interface corresponds to the lowest numbered DPC slot for which the FPC is installed.	none
PFE	(MX Series and M120 routers only) Slot number of each Packet Forwarding Engine and the state of the links to the DCP: **Links ok**, **Link error**, or **Unused**. Each DPC includes four Packet Forwarding Engines. • **Links ok**: Link between SIB and FPC is active. • **Link error**: Link between SIB and FPC is not operational. • **Unused**: No FPC is present. (On MX240 and MX480 routers with AS MLC modular carrier card and MPC4E only) Indicates that the link between the fabric plane and the hardware link on the modular carrier card or MPC4E is not operational. (MX2010, MX2020, and MX2008 routers only) Slot number of each Packet Forwarding Engine and the state of the links to the DPC: **Links ok**, **Link error**, or **Unused**. Each DPC includes four Packet Forwarding Engines. • **Links ok**: Link between SFB and FPC is active. • **Link error**: Link between SFB and FPC is not operational. • **Unused**: No FPC is present.	none

Table 66: show chassis fabric plane Output Fields *(Continued)*

Field Name	Field Description	Level of output

State	(TX Matrix Plus, and T1600 or T4000 routers in a routing matrix only)—State of the fabric plane:
	• **Online**: Fabric plane is operational and running and links on the SIB are operational.
	• **Offline**: Fabric plane state is **Offline** because the plane does not have four or more F2S and one F13 online.
	• Empty: Fabric plane state is **Empty** if all SIBs in the plane are absent.
	• **Spare**: Fabric plane is redundant and can be operational if the operational fabric plane encounters an error.
	• **Check**: Fabric plane is in alarmed state due to the following reason and the cause of the error must be resolved:
	  • One or more SIBs (belonging to the fabric plane) in the **Online** or **Spare** states has transitioned to the **Check** state.
	  Check state of the SIB can be caused by link errors or destination errors.
	• **Fault**: Fabric plane is in alarmed state if one or more SIBs belonging to the plane are in the **Fault** state. A SIB can be in the **Fault** state because of the following reasons:
	  • On-board fabric ASIC is not operational.
	  • Fiber optic connector faults.
	  • FPC connector faults.
	  • SIB midplane connector faults.
	  • Link errors have exceeded the threshold.
		none

Link Errors	(TX Matrix Plus routers with 3D SIBs only) indicate the number of links which are marked faulty because the errors on them have crossed threshold.	none

Table 66: show chassis fabric plane Output Fields *(Continued)*

Field Name	Field Description	Level of output
Cable Errors	(TX Matrix Plus routers with 3D SIBs only) Indicate the number of mandatory cables that are not connected, or in up state for that plane	none
Destination Errors	(TX Matrix Plus routers with 3D SIBs only) Indicates the number of destinations that are not reachable on this plane.	none
Uptime	(TX Matrix Plus, and T1600 or T4000 routers in a routing matrix only)—Time the fabric plane has been up and running.	none
Fabric Management Plane State Output Fields for the `show chassis fabric plane extensive` Command on a TX Matrix Plus Router		

Table 66: show chassis fabric plane Output Fields *(Continued)*

Field Name	Field Description	Level of output

PLANE *number*	State of the fabric plane:
	• **Online**: Fabric plane is operational and running and links on the SIB are operational.
	• **Offline**: Fabric plane state is **Offline** because the plane does not have 4 or more F2S and 1 F13 online.
	• Empty: Fabric plane state is **Empty** if all SIBs in the plane are absent.
	• **Spare**: Fabric plane is redundant and can be operational if the operational fabric plane encounters an error.
	• **Check**: Fabric plane is in alarmed state due to the following reasons and the cause of the error must be resolved:
	  • One or more SIBs (belonging to the fabric plane) in the **Online** or **Spare** states has transitioned to the **Check** state.
	  Check state of the SIB can be caused because of link errors or destination errors.
	• **Fault**: Fabric plane is in alarmed state if one or more SIBs belonging to the plane are in the **Fault** state. A SIB can be in the **Fault** state because of the following reasons:
	  • On-board fabric ASIC is not operational.
	  • Fiber optic connector faults.
	  • FPC connector faults.
	  • SIB midplane connector faults.
	  • Link errors have exceeded the threshold.
		extensive

Table 66: show chassis fabric plane Output Fields *(Continued)*

Field Name	Field Description	Level of output

SIB F13/F2S *slot-number*	State of the TXP-F13 SIB or TXP-F2S SIB:
	• **Activating**—Transitional state when the SIB is transitioning to the **Online** or **Spare** state.
	• **Deactivating**—Transitional state when the SIB is going offline.
	• **Online**—SIB is operational and running.
	• **Offline**—SIB is powered down.
	• **Spare**—SIB is redundant and will move to active state if one of the working SIBs fails to pass traffic.
	• **Empty**—No SIB is present.
	• **Fault**— SIB is in alarmed state because of the following reasons and the cause of the error must be resolved:
	  • On-board fabric ASIC is not operational.
	  • Fiber optic connector faults.
	  • FPC connector faults.
	  • SIB midplane connector faults.
	  • Link errors have exceeded the threshold
	• **Check**—SIB is in alarmed state where the SIB is partially operational because of link or destination errors. Only a SIB that is **Online** or **Spare** can transition to the **Check** state.
	NOTE: If a SIB is not inserted properly, the SIB cannot transition to the **Online** or **Spare** state, and therefore cannot transition to the **Check** state.
		extensive

Table 66: show chassis fabric plane Output Fields *(Continued)*

Field Name	Field Description	Level of output
SIB F13 ***slot-number Odd/Even***	State of the TXP-F13 SIB even and odd port connection optical links from the TX Matrix Plus router (SFC) to the router (LCC) in the routing matrix . The left four ports on the SFC are labeled **Even** and provide connections to one even-numbered LCC—LCC0 or LCC2. The right four ports on the SFC are labeled **Odd** and provide connections to one odd-numbered LCC—LCC1 or LCC3.	**extensive**
LCC ***number*****, SIB** ***slot-number***	State of the SIB on the LCC that is connected to the **Even** or **Odd** port on the TXP-F13 SIB faceplate: • **Links ok**—Links between the TXP-F13 SIB on the SFC and the LCC are active. • **Links error**—One or more links between the TXP-F13 SIB on the SFC and the LCC, have experienced an error, but the affected links remain operational. • **Unused**—No SIB is present.	**extensive**
SG ***number*** **Port** ***number***	State of the SG chip ports on the LCC: • **Links ok**—Link is active. • **Link error**—Link is operational with errors. • `Link error crc saturated`—CRC has exceeded the rate threshold and reached saturation without optical issues—that is, a cable has not been cut, removed, or otherwise experienced an error. • `Link error crc saturated with optical errors`—CRC has exceeded the rate threshold and reached saturation with optical issues—that is, a cable has been cut, removed, or otherwise experienced an error. • **Unused**—Port is not in use.	**extensive**
SIB F2S ***slot-number***	State of the intra-chassis links between the TXP-F2S and TXP-F13 SIBs.	**extensive**

Table 66: show chassis fabric plane Output Fields *(Continued)*

Field Name	Field Description	Level of output
Fabric Management SIB State Output Fields for the `show chassis fabric plane extensive` Command on a TX Matrix Plus Router		

Table 66: show chassis fabric plane Output Fields *(Continued)*

Field Name	Field Description	Level of output
SIB *slot-number*	State of the SIBs on the T1600/T4000 router (LCC) in the routing matrix: • **Activating**—Transitional state when the SIB is coming online. • **Deactivating**—Transitional state when the SIB is going offline. • **Connected**—SIBS on an LCC are connected and trained, but are either not online or are spare, because the plane on the the TX Matrix Plus router (SFC) is still offline. The LCC SIB transitions to the **Connected** state when the F13 SIB to which it connects is online but the SFC plane (to which the LCC SIB connects) is offline for some reason; for instance, when there are insufficient number of F2 SIBs in the plane. • **Disconnected**—If an F13 SIB on the TX Matrix Plus router (SFC) goes offline, then the SIBs on the LCCs connected to the F13 SIB get disconnected. On the TX Matrix Plus router with 3D SIBs, the LCC SIB is also disconnected if the F13 SIB is online, but none of the cables are connected or trained. The **Disconnected** state is valid only for SIBs on an LCC. An LCC SIB transitions to the **Disconnected** state when the F13 SIB to which it connects goes **Offline**, irrespective of the state of the SFC plane. **SFC Error**—If an F13 SIB on the TX Matrix Plus router (SFC) transitions to the **Fault** state (because of link errors, for instance), and if an LCC SIB connected to the F13 SIB comes online, the LCC SIB transitions to the **SFC Error** state. This state indicates that the F13 SIB to which the LCC SIB is connected has errors. **NOTE**: The **Connected**, **Disconnected**, and **SFC Error** states are applicable only to the SIBs on an LCC. • **Online**—SIB is operational and running.	**extensive**

Table 66: show chassis fabric plane Output Fields *(Continued)*

Field Name	Field Description	Level of output

	• **Offline**—SIB is powered down.
	• **Spare**—SIB is redundant and will move to active state if one of the working SIBs fails to pass traffic.
	• **Empty**—No SIB is present.
	• **Fault**— SIB is in alarmed state where the SIB's plane is not operational for the following reasons:
	  • On-board fabric ASIC is not operational.
	  • Fiber optic connector faults.
	  • FPC connector faults.
	  • SIB midplane connector faults.
	  • Link errors have exceeded the threshold
	• **Check**—SIB is in alarmed state where the SIB is partially operational because of link or destination errors. Only a SIB that is **Online** or **Spare** can transition to the **Check** state.
	NOTE: If a SIB is not inserted properly, the SIB cannot transition to the **Online** or **Spare** state, and therefore cannot transition to the **Check** state.	

LCC SIB Link State	State of the LCC SIB link: • **Links ok**—Link is active. • **Links error**—A link error has occurred, but the link remains operational. • **Unused**—SIB is not in use.	**extensive**

Table 66: show chassis fabric plane Output Fields *(Continued)*

Field Name	Field Description	Level of output
SG *number* Port *number*	State of the SG chip ports on the LCC: • **Links ok**—Link is active. • **Link error**—Link is operational with errors. • `Link error crc saturated`—CRC has exceeded the rate threshold and reached saturation without optical issues—that is, a cable has not been cut, removed, or otherwise experienced an error. • `Link error crc saturated with optical errors`—CRC has exceeded the rate threshold and reached saturation with optical issues—that is, a cable has been cut, removed, or otherwise experienced an error. • **Unused**—Port is not in use.	**extensive**

Sample Output

show chassis fabric plane (M120 Router)

```
user@host> show chassis fabric plane
Fabric management PLANE state
Plane 0
Plane state: ACTIVE
FEB 0: Links ok
FEB 1: Links ok
FEB 2: Links ok
FEB 3: Links ok
FEB 4: Links ok
FEB 5: Links ok
Plane 1
Plane state: ACTIVE
FEB 0: Links ok
FEB 1: Links ok
```

```
FEB 2: Links ok
FEB 3: Links ok
FEB 4: Links ok
FEB 5: Links ok
Plane 2
Plane state: ACTIVE
FEB 0: Links ok
FEB 1: Links ok
FEB 2: Links ok
FEB 3: Links ok
FEB 4: Links ok
FEB 5: Links ok
Plane 3
Plane state: ACTIVE
FEB 0: Links ok
FEB 1: Links ok
FEB 2: Links ok
FEB 3: Links ok
FEB 4: Links ok
FEB 5: Links ok
```

show chassis fabric plane (MX10008 Router)

```
user@host> show chassis fabric plane

Fabric management PLANE state
Plane 0
  Plane state: ACTIVE
      FPC 1
          PFE 0 :Links ok
          PFE 1 :Links ok
          PFE 2 :Links ok
          PFE 3 :Links ok
          PFE 4 :Links ok
          PFE 5 :Links ok
      FPC 5
          PFE 0 :Links ok
          PFE 1 :Links ok
          PFE 2 :Links ok
          PFE 3 :Links ok
          PFE 4 :Links ok
```

```
          PFE 5 :Links ok
Plane 1
  Plane state: ACTIVE
      FPC 1
          PFE 0 :Links ok
          PFE 1 :Links ok
          PFE 2 :Links ok
          PFE 3 :Links ok
          PFE 4 :Links ok
          PFE 5 :Links ok
      FPC 5
          PFE 0 :Links ok
          PFE 1 :Links ok
          PFE 2 :Links ok
          PFE 3 :Links ok
          PFE 4 :Links ok
          PFE 5 :Links ok
Plane 2
  Plane state: ACTIVE
      FPC 1
          PFE 0 :Links ok
          PFE 1 :Links ok
          PFE 2 :Links ok
          PFE 3 :Links ok
          PFE 4 :Links ok
          PFE 5 :Links ok
      FPC 5
          PFE 0 :Links ok
          PFE 1 :Links ok
          PFE 2 :Links ok
          PFE 3 :Links ok
          PFE 4 :Links ok
          PFE 5 :Links ok
Plane 3
  Plane state: ACTIVE
      FPC 1
          PFE 0 :Links ok
          PFE 1 :Links ok
          PFE 2 :Links ok
          PFE 3 :Links ok
          PFE 4 :Links ok
          PFE 5 :Links ok
      FPC 5
```

```
          PFE 0 :Links ok
          PFE 1 :Links ok
          PFE 2 :Links ok
          PFE 3 :Links ok
          PFE 4 :Links ok
          PFE 5 :Links ok
```

show chassis fabric plane (MX240 with AS MLC Modular Carrier Card)

In the following output, FPC 1 is the AS MLC modular carrier card (AS MCC).

```
user@host>show chassis fabric plane
Fabric management PLANE state
Plane 0
  Plane state: ACTIVE
      FPC 1
          PFE 0 :Links ok
      FPC 2
          PFE 0 :Links ok
Plane 1
  Plane state: ACTIVE
     Plane state: ACTIVE
      FPC 1
          PFE 0 :Links ok
      FPC 2
          PFE 0 :Links ok
Plane 2
  Plane state: ACTIVE
      FPC 2
          PFE 0 :Links ok
      FPC 4
          PFE 0 :Links ok
          PFE 2 :Links ok
      FPC 5
          PFE 0 :Links ok
Plane 3
  Plane state: ACTIVE
     Plane state: ACTIVE
      FPC 1
          PFE 0 :Links ok
      FPC 2
```

```
          PFE 0 :Links ok
Plane 4
  Plane state: ACTIVE
      Plane state: ACTIVE
      FPC 1
          PFE 0 :Links ok
      FPC 2
          PFE 0 :Links ok
Plane 5
  Plane state: ACTIVE
      FPC 1
          PFE 0 :Unused
      FPC 2
          PFE 0 :Links ok
Plane 6
  Plane state: ACTIVE
      FPC 1
          PFE 0 :Links ok
      FPC 2
          PFE 0 :Links ok
Plane 7
  Plane state: ACTIVE
      FPC 1
          PFE 0 :Unused
      FPC 2
          PFE 0 :Links ok
```

show chassis fabric plane (TX Matrix Plus Router)

```
user@host> show chassis fabric plane
sfc0-re0:
--------------------------------------------------------------------------
Plane  State              Link errors  Destination errors  Uptime
 0     Spare                 NONE             NONE
 1     Online                NONE             NONE         10 hours, 16 seconds
 2     Online                NONE             NONE         10 hours, 13 seconds
 3     Online                NONE             NONE         10 hours, 9 seconds
 4     Online                NONE             NONE         10 hours, 7 seconds

lcc0-re0:
```

```
-------------------------------------------------------------------------
SIB    State              Link errors  Destination errors  Uptime
 0     Spare                 NONE             NONE
 1     Online                NONE             NONE         10 hours, 16 seconds
 2     Online                NONE             NONE         10 hours, 13 seconds
 3     Online                NONE             NONE         10 hours, 9 seconds
 4     Online                NONE             NONE         10 hours, 7 seconds
lcc2-re0:
-------------------------------------------------------------------------
SIB    State              Link errors  Destination errors  Uptime
 0     Spare                 NONE             NONE
 1     Online                NONE             NONE         10 hours, 16 seconds
 2     Online                NONE             NONE         10 hours, 12 seconds
 3     Online                NONE             NONE         10 hours, 9 seconds
 4     Online                NONE             NONE         10 hours, 7 seconds
```

show chassis fabric plane (TX Matrix Plus Router with 3D SIBs)

```
user@host> show chassis fabric plane
sfc0-re0:
-------------------------------------------------------------------------
Plane  State        Cable errors   Link errors   Destination errors  Uptime
 0     Spare           NONE           NONE              NONE
 1     Online          NONE           NONE              NONE         5 hours, 11 minutes, 3
seconds
 2     Online          NONE           NONE              NONE         8 hours, 4 minutes, 24
seconds
 3     Online          NONE           NONE              NONE         8 hours, 3 minutes, 16
seconds
 4     Online          NONE           NONE              NONE         8 hours, 2 minutes, 12
seconds

lcc2-re0:
-------------------------------------------------------------------------
SIB    State        Cable errors   Link errors   Destination errors  Uptime
 0     Spare           NONE           NONE              NONE
 1     Online          NONE           NONE              NONE         5 hours, 11 minutes, 3
seconds
 2     Online          NONE           NONE              NONE         8 hours, 4 minutes, 57
seconds
 3     Online          NONE           NONE              NONE         8 hours, 3 minutes, 53
```

```
seconds
 4     Online          NONE           NONE              NONE         8 hours, 2 minutes, 45
seconds

lcc4-re0:
--------------------------------------------------------------------------
SIB    State        Cable errors   Link errors   Destination errors  Uptime
 0     Spare            NONE           NONE              NONE
 1     Online           NONE           NONE              NONE         5 hours, 11 minutes, 12
seconds
 2     Online           NONE           NONE              NONE         8 hours, 4 minutes, 24
seconds
 3     Online           NONE           NONE              NONE         8 hours, 3 minutes, 16
seconds
 4     Online           NONE           NONE              NONE         8 hours, 2 minutes, 12
seconds

lcc5-re0:
--------------------------------------------------------------------------
SIB    State        Cable errors   Link errors   Destination errors  Uptime
 0     Spare            NONE           NONE              NONE
 1     Online           NONE           NONE              NONE         5 hours, 11 minutes, 12
seconds
 2     Online           NONE           NONE              NONE         8 hours, 4 minutes, 24
seconds
 3     Online           NONE           NONE              NONE         8 hours, 3 minutes, 15
seconds
 4     Online           NONE           NONE              NONE         8 hours, 2 minutes, 11
seconds
```

show chassis fabric plane detail (TX Matrix Plus Router)

```
user@host> show chassis fabric plane detail
sfc0-re0:
--------------------------------------------------------------------------
Fabric Management PLANE State:
PLANE 0:    Spare
   SIB F13 0   :    Spare
   SIB F13 1   :    Empty
   SIB F2S 0/0 :    Spare
   SIB F2S 0/2 :    Spare
```

```
   SIB F2S 0/4 :    Spare
   SIB F2S 0/6 :    Spare
PLANE 1:    Online
   SIB F13 3   :    Online
   SIB F13 4   :    Empty
   SIB F2S 1/0 :    Online
   SIB F2S 1/2 :    Online
   SIB F2S 1/4 :    Online
   SIB F2S 1/6 :    Online
PLANE 2:    Online
   SIB F13 6   :    Online
   SIB F13 7   :    Empty
   SIB F2S 2/0 :    Online
   SIB F2S 2/2 :    Online
   SIB F2S 2/4 :    Online
   SIB F2S 2/6 :    Online
PLANE 3:    Online
   SIB F13 8   :    Online
   SIB F13 9   :    Online
   SIB F2S 3/0 :    Online
   SIB F2S 3/2 :    Online
   SIB F2S 3/4 :    Online
   SIB F2S 3/6 :    Online
PLANE 4:    Online
   SIB F13 11  :    Online
   SIB F13 12  :    Online
   SIB F2S 4/0 :    Online
   SIB F2S 4/2 :    Online
   SIB F2S 4/4 :    Online
   SIB F2S 4/6 :    Online

lcc0-re0:
--------------------------------------------------------------------------
Fabric Management SIB State:
   SIB     0   :    Spare
   SIB     1   :    Online
   SIB     2   :    Online
   SIB     3   :    Online
   SIB     4   :    Online

lcc1-re0:
--------------------------------------------------------------------------
Fabric Management SIB State:
```

```
   SIB     0   :    Spare
   SIB     1   :    Online
   SIB     2   :    Online
   SIB     3   :    Online
   SIB     4   :    Online
...
```

show chassis fabric plane extensive (TX Matrix Plus Router)

```
user@host> show chassis fabric plane extensive
sfc0-re0:
--------------------------------------------------------------------------
Fabric Management PLANE State:
PLANE 0:    Spare
   SIB F13 0   :    Spare
   SIB F13 1   :    Empty
   SIB F2S 0/0 :    Spare
   SIB F2S 0/2 :    Spare
   SIB F2S 0/4 :    Spare
   SIB F2S 0/6 :    Spare
   SIB F13 0 Even:
        LCC 0, SIB 0 : Links ok
            SG 0
                Port 0    : Links ok
                Port 1    : Links ok
                Port 2    : Links ok
                Port 3    : Links ok
            SG 1
                Port 0    : Links ok
                Port 1    : Links ok
                Port 2    : Links ok
                Port 3    : Links ok
            SG 2
                Port 0    : Links ok
                Port 1    : Links ok
                Port 2    : Links ok
                Port 3    : Links ok
            SG 3
                Port 0    : Links ok
                Port 1    : Links ok
                Port 2    : Links ok
```

```
                Port 3    : Links ok
    SIB F13 0 Odd:
         LCC 1, SIB 0 : Links ok
             SG 0
                 Port 0    : Links ok
                 Port 1    : Links ok
                 Port 2    : Links ok
                 Port 3    : Links ok
             SG 1
                 Port 0    : Links ok
                 Port 1    : Links ok
                 Port 2    : Links ok
                 Port 3    : Links ok
             SG 2
                 Port 0    : Links ok
                 Port 1    : Links ok
                 Port 2    : Links ok
                 Port 3    : Links ok
             SG 3
                 Port 0    : Links ok
                 Port 1    : Links ok
                 Port 2    : Links ok
                 Port 3    : Links ok
         SIB F2S 0/0: Links ok
         SIB F2S 0/2: Links ok
         SIB F2S 0/4: Links ok
         SIB F2S 0/6: Links ok
    SIB F13 1 Even:
         LCC 2, SIB 0 : Unused
             SG 0
                 Port 0    : Unused
                 Port 1    : Unused
                 Port 2    : Unused
                 Port 3    : Unused
             SG 1
                 Port 0    : Unused
                 Port 1    : Unused
                 Port 2    : Unused
                 Port 3    : Unused
             SG 2
                 Port 0    : Unused
                 Port 1    : Unused
                 Port 2    : Unused
```

```
                Port 3    : Unused
            SG 3
                Port 0    : Unused
                Port 1    : Unused
                Port 2    : Unused
                Port 3    : Unused
   SIB F13 1 Odd:
        LCC 3, SIB 0 : Unused
            SG 0
                Port 0    : Unused
                Port 1    : Unused
                Port 2    : Unused
                Port 3    : Unused
            SG 1
                Port 0    : Unused
                Port 1    : Unused
                Port 2    : Unused
                Port 3    : Unused
            SG 2
                Port 0    : Unused
                Port 1    : Unused
                Port 2    : Unused
                Port 3    : Unused
            SG 3
                Port 0    : Unused
                Port 1    : Unused
                Port 2    : Unused
                Port 3    : Unused
        SIB F2S 0/0: Unused
        SIB F2S 0/2: Unused
        SIB F2S 0/4: Unused
        SIB F2S 0/6: Unused
PLANE 1:    Online
   SIB F13 3   :    Online
   SIB F13 4   :    Empty
   SIB F2S 1/0 :    Online
   SIB F2S 1/2 :    Online
   SIB F2S 1/4 :    Online
   SIB F2S 1/6 :    Online
   SIB F13 3 Even:
...
```

show chassis fabric plane extensive (TX Matrix Plus Router with 3D SIBs)

```
user@host> show chassis fabric plane extensive
sfc0-re0:
--------------------------------------------------------------------------
Fabric Management PLANE State:
PLANE 0:    Online
   SIB F13 0   :    Empty
   SIB F13 1   :    Online
   SIB F2S 0/0 :    Online
   SIB F2S 0/2 :    Online
   SIB F2S 0/4 :    Online
   SIB F2S 0/6 :    Online
   SIB F13 0
        LCC 0, SIB 0 : Unused
            PFE 0   : Unused
            PFE 1   : Unused
            PFE 2   : Unused
            PFE 3   : Unused
            PFE 4   : Unused
            PFE 5   : Unused
            PFE 6   : Unused
            PFE 7   : Unused
            PFE 8   : Unused
            PFE 9   : Unused
            PFE 10  : Unused
            PFE 11  : Unused
            PFE 12  : Unused
            PFE 13  : Unused
            PFE 14  : Unused
            PFE 15  : Unused
        LCC 1, SIB 0 : Unused
            PFE 0   : Unused
            PFE 1   : Unused
            PFE 2   : Unused
            PFE 3   : Unused
            PFE 4   : Unused
            PFE 5   : Unused
            PFE 6   : Unused
            PFE 7   : Unused
            PFE 8   : Unused
            PFE 9   : Unused
```

```
            PFE 10  : Unused
            PFE 11  : Unused
            PFE 12  : Unused
            PFE 13  : Unused
            PFE 14  : Unused
            PFE 15  : Unused
        LCC 2, SIB 0 : Unused
            PFE 0   : Unused
            PFE 1   : Unused
            PFE 2   : Unused
            PFE 3   : Unused
            PFE 4   : Unused
            PFE 5   : Unused
            PFE 6   : Unused
            PFE 7   : Unused
            PFE 8   : Unused
            PFE 9   : Unused
            PFE 10  : Unused
...
lcc5-re0:
--------------------------------------------------------------------------
Fabric Management SIB State:
   SIB     0   :    Online
        LCC SIB Link State : Links ok
           PFE 0   : Links ok
           PFE 1   : Links ok
           PFE 2   : Links ok
           PFE 3   : Links ok
           PFE 4   : Links ok
           PFE 5   : Links ok
           PFE 6   : Links ok
           PFE 7   : Links ok
           PFE 8   : Links ok
           PFE 9   : Links ok
           PFE 10  : Links ok
           PFE 11  : Links ok
           PFE 12  : Links ok
           PFE 13  : Links ok
           PFE 14  : Links ok
           PFE 15  : Links ok
           FPC 1
               PFE 0     : Links ok
           FPC 2
```

```
                PFE 0     : Links ok
            FPC 3
                PFE 0     : Links ok
                PFE 1     : Links ok
            FPC 4
                PFE 0     : Links ok
    SIB     1   :    Online
         LCC SIB Link State : Links ok
            PFE 0   : Links ok
            PFE 1   : Links ok
            PFE 2   : Links ok
            PFE 3   : Links ok
            PFE 4   : Links ok
            PFE 5   : Links ok
            PFE 6   : Links ok
            PFE 7   : Links ok
            PFE 8   : Links ok
            PFE 9   : Links ok
            PFE 10  : Links ok
            PFE 11  : Links ok
            PFE 12  : Links ok
            PFE 13  : Links ok
            PFE 14  : Links ok
            PFE 15  : Links ok
            FPC 1
                PFE 0     : Links ok
            FPC 2
                PFE 0     : Links ok
            FPC 3
                PFE 0     : Links ok
                PFE 1     : Links ok
            FPC 4
                PFE 0     : Links ok
```

show chassis fabric plane terse (TX Matrix Plus Router)

```
user@host> show chassis fabric plane terse
sfc0-re0:
--------------------------------------------------------------------------
Plane  State              Link errors  Destination errors  Uptime
 0     Spare                 NONE             NONE
```

```
 1     Online                NONE             NONE         18 minutes, 37 seconds
 2     Online                NONE             NONE         18 minutes, 36 seconds
 3     Online                NONE             NONE         18 minutes, 33 seconds
 4     Online                NONE             NONE         18 minutes, 31 seconds

lcc1-re0:
--------------------------------------------------------------------------
SIB    State              Link errors  Destination errors  Uptime
 0     Spare                 NONE             NONE
 1     Online                NONE             NONE         18 minutes, 37 seconds
 2     Online                NONE             NONE
 3     Online                NONE             NONE
 4     Empty                 NONE             NONE

lcc2-re0:
--------------------------------------------------------------------------
SIB    State              Link errors  Destination errors  Uptime
 0     Spare                 NONE             NONE
 1     Online                NONE             NONE         18 minutes, 37 seconds
 2     Online                NONE             NONE         18 minutes, 36 seconds
 3     Online                NONE             NONE         18 minutes, 32 seconds
 4     Online                NONE             NONE         18 minutes, 31 seconds
```

show chassis fabric plane terse (TX Matrix Plus Router with 3D SIBs)

```
user@host> show chassis fabric plane terse
sfc0-re0:
--------------------------------------------------------------------------
Plane  State        Cable errors   Link errors   Destination errors  Uptime
 0     Offline          NONE          NONE              NONE
 1     Online           NONE          NONE              NONE         1 day, 18 hours, 14
minutes, 26 seconds
 2     Offline          NONE          NONE              NONE
 3     Offline          NONE          NONE              NONE
 4     Offline          NONE          NONE              NONE

lcc2-re0:
--------------------------------------------------------------------------
SIB    State        Cable errors   Link errors   Destination errors  Uptime
 0     Offline          NONE          NONE              NONE
 1     Online           NONE          NONE              NONE         1 day, 18 hours, 17 minutes
```

```
 2     Offline          NONE          NONE              NONE
 3     Offline          NONE          NONE              NONE
 4     Offline          NONE          NONE              NONE

lcc4-re0:
--------------------------------------------------------------------------
SIB    State        Cable errors   Link errors   Destination errors  Uptime
 0     Offline          NONE          NONE              NONE
 1     Online           NONE          NONE              NONE         1 day, 18 hours, 14
minutes, 38 seconds
 2     Offline          NONE          NONE              NONE
 3     Offline          NONE          NONE              NONE
 4     Offline          NONE          NONE              NONE

lcc5-re0:
--------------------------------------------------------------------------
SIB    State        Cable errors   Link errors   Destination errors  Uptime
 0     Offline          NONE          NONE              NONE
 1     Online           NONE          NONE              NONE         1 day, 18 hours, 14
minutes, 34 seconds
 2     Offline          NONE          NONE              NONE
 3     Offline          NONE          NONE              NONE
 4     Offline          NONE          NONE              NONE
```

show chassis fabric plane lcc (TX Matrix Plus Router)

```
user@host> show chassis fabric plane lcc 1
lcc1-re0:
--------------------------------------------------------------------------
SIB    State              Link errors  Destination errors  Uptime
 0     Spare                 NONE             NONE
 1     Online                NONE             NONE         25 minutes, 17 seconds
 2     Disconnected          NONE             NONE
 3     Disconnected          NONE             NONE
 4     Empty                 NONE             NONE
```

show chassis fabric plane lcc (TX Matrix Plus Router with 3D SIBs)

```
user@host> show chassis fabric plane lcc 2
lcc2-re0:
```

```
--------------------------------------------------------------------------
SIB    State        Cable errors   Link errors   Destination errors  Uptime
 0     Offline          NONE          NONE              NONE
 1     Online           NONE          NONE              NONE         1 day, 18 hours, 16
minutes, 44 seconds
 2     Offline          NONE          NONE              NONE
 3     Offline          NONE          NONE              NONE
 4     Offline          NONE          NONE              NONE
```

show chassis fabric plane sfc (TX Matrix Plus Router)

```
user@host> show chassis fabric plane sfc 0
sfc0-re0:
--------------------------------------------------------------------------
Plane  State              Link errors  Destination errors  Uptime
 0     Spare                 NONE             NONE
 1     Online                NONE             NONE         27 minutes, 7 seconds
 2     Online                NONE             NONE         27 minutes, 6 seconds
 3     Online                NONE             NONE         27 minutes, 3 seconds
 4     Online                NONE             NONE         27 minutes, 1 second
```

show chassis fabric plane sfc (TX Matrix Plus Router with 3D SIBs)

```
user@host> show chassis fabric plane sfc 0
sfc0-re0:
--------------------------------------------------------------------------
Plane  State        Cable errors   Link errors   Destination errors  Uptime
 0     Offline          NONE          NONE              NONE
 1     Online           NONE          NONE              NONE         1 day, 18 hours, 14
minutes, 20 seconds
 2     Offline          NONE          NONE              NONE
 3     Offline          NONE          NONE              NONE
 4     Offline          NONE          NONE              NONE
```

show chassis fabric plane (T1600 Router)

```
user@host> show chassis fabric plane
Plane  State               Uptime
```

```
 0    Online               15 hours, 42 minutes, 9 seconds
 1    Online               15 hours, 42 minutes, 9 seconds
 2    Fault
 3    Online               15 hours, 42 minutes, 9 seconds
 4    Online               15 hours, 42 minutes, 9 seconds
```

show chassis fabric plane extensive (T1600 Router)

```
user@host> show chassis fabric plane extensive
Fabric Management PLANE State:
PLANE 0:    Online
   ST-SIB-L  0: Links ok
     SG 0
         Port 0    : Links ok
         Port 1    : Links ok
         Port 2    : Links ok
         Port 3    : Links ok
     SG 1
         Port 0    : Links ok
         Port 1    : Links ok
         Port 2    : Links ok
         Port 3    : Links ok
     SG 2
         Port 0    : Links ok
         Port 1    : Links ok
         Port 2    : Links ok
         Port 3    : Links ok
     SG 3
         Port 0    : Links ok
         Port 1    : Links ok
         Port 2    : Links ok
         Port 3    : Links ok
   ST-SIB-L 0
       FPC 4
           PFE 0: Links ok
           PFE 1: Links ok
       FPC 6
           PFE 0: Links ok
           PFE 1: Links ok
       FPC 7
           PFE 0: Links ok
```

```
PLANE 1:    Online
   ST-SIB-L  1: Links ok
     SG 0
         Port 0    : Links ok
         Port 1    : Links ok
         Port 2    : Links ok
         Port 3    : Links ok
     SG 1
         Port 0    : Links ok
         Port 1    : Links ok
         Port 2    : Links ok
         Port 3    : Links ok
     SG 2
         Port 0    : Links ok
         Port 1    : Links ok
         Port 2    : Links ok
         Port 3    : Links ok
     SG 3
         Port 0    : Links ok
         Port 1    : Links ok
         Port 2    : Links ok
         Port 3    : Links ok
   ST-SIB-L 1
       FPC 4
           PFE 0: Links ok
           PFE 1: Links ok
       FPC 6
           PFE 0: Links ok
           PFE 1: Links ok
       FPC 7
           PFE 0: Links ok
PLANE 2:    Online
   ST-SIB-L  2: Links ok
     SG 0
         Port 0    : Links ok
         Port 1    : Links ok
         Port 2    : Links ok
         Port 3    : Links ok
     SG 1
         Port 0    : Links ok
         Port 1    : Links ok
         Port 2    : Links ok
         Port 3    : Links ok
```

```
      SG 2
          Port 0    : Links ok
          Port 1    : Links ok
          Port 2    : Links ok
          Port 3    : Links ok
      SG 3
          Port 0    : Links ok
          Port 1    : Links ok
          Port 2    : Links ok
          Port 3    : Links ok
   ST-SIB-L 2
       FPC 4
           PFE 0: Links ok
           PFE 1: Links ok
       FPC 6
           PFE 0: Links ok
           PFE 1: Links ok
       FPC 7
           PFE 0: Links ok
PLANE 3:    Spare
   ST-SIB-L  3: Links ok
     SG 0
          Port 0    : Links ok
          Port 1    : Links ok
          Port 2    : Links ok
          Port 3    : Links ok
     SG 1
          Port 0    : Links ok
          Port 1    : Links ok
          Port 2    : Links ok
          Port 3    : Links ok
     SG 2
          Port 0    : Links ok
          Port 1    : Links ok
          Port 2    : Links ok
          Port 3    : Links ok
     SG 3
          Port 0    : Links ok
          Port 1    : Links ok
          Port 2    : Links ok
          Port 3    : Links ok
   ST-SIB-L 3
       FPC 4
```

```
            PFE 0: Links ok
            PFE 1: Links ok
        FPC 6
            PFE 0: Links ok
            PFE 1: Links ok
        FPC 7
            PFE 0: Links ok
PLANE 4:    Online
   ST-SIB-L  4: Links ok
     SG 0
         Port 0    : Links ok
         Port 1    : Links ok
         Port 2    : Links ok
         Port 3    : Links ok
     SG 1
         Port 0    : Links ok
         Port 1    : Links ok
         Port 2    : Links ok
         Port 3    : Links ok
     SG 2
         Port 0    : Links ok
         Port 1    : Links ok
         Port 2    : Links ok
         Port 3    : Links ok
     SG 3
         Port 0    : Links ok
         Port 1    : Links ok
         Port 2    : Links ok
         Port 3    : Links ok
   ST-SIB-L 4
        FPC 4
            PFE 0: Links ok
            PFE 1: Links ok
        FPC 6
            PFE 0: Links ok
            PFE 1: Links ok
        FPC 7
            PFE 0: Links ok
```

show chassis fabric plane detail (T1600 Router)

```
user@host> show chassis fabric plane detail
Fabric Management PLANE State:
PLANE 0:    Online
PLANE 1:    Online
PLANE 2:    Online
PLANE 3:    Spare
PLANE 4:    Online
```

show chassis fabric plane (EX8200 Switch)

```
user@host> show chassis fabric plane
Fabric management PLANE state
Plane 0
  Plane state: ACTIVE
Plane 1
  Plane state: ACTIVE
Plane 2
  Plane state: ACTIVE
Plane 3
  Plane state: ACTIVE
Plane 4
  Plane state: SPARE
Plane 5
  Plane state: SPARE
Plane 6
  Plane state: SPARE
Plane 7
  Plane state: SPARE
Plane 8
  Plane state: ACTIVE
Plane 9
  Plane state: ACTIVE
Plane 10
  Plane state: ACTIVE
Plane 11
  Plane state: ACTIVE
```

show chassis fabric plane (EX9253 Switch)

```
user@switch> show chassis fabric plane
Fabric management PLANE state
Plane 0
  Plane state: ACTIVE
      FPC 0
          PFE 0 :Links ok
          PFE 1 :Links ok
          PFE 2 :Links ok
      FPC 1
          PFE 0 :Links ok
          PFE 1 :Links ok
          PFE 2 :Links ok
Plane 1
  Plane state: ACTIVE
      FPC 0
          PFE 0 :Links ok
          PFE 1 :Links ok
          PFE 2 :Links ok
      FPC 1
          PFE 0 :Links ok
          PFE 1 :Links ok
          PFE 2 :Links ok
Plane 2
  Plane state: ACTIVE
      FPC 0
          PFE 0 :Links ok
          PFE 1 :Links ok
          PFE 2 :Links ok
      FPC 1
          PFE 0 :Links ok
          PFE 1 :Links ok
          PFE 2 :Links ok
Plane 3
  Plane state: ACTIVE
      FPC 0
          PFE 0 :Links ok
          PFE 1 :Links ok
          PFE 2 :Links ok
      FPC 1
          PFE 0 :Links ok
```

```
          PFE 1 :Links ok
          PFE 2 :Links ok
Plane 4
  Plane state: ACTIVE
      FPC 0
          PFE 0 :Links ok
          PFE 1 :Links ok
          PFE 2 :Links ok
      FPC 1
          PFE 0 :Links ok
          PFE 1 :Links ok
          PFE 2 :Links ok
Plane 5
  Plane state: ACTIVE
      FPC 0
          PFE 0 :Links ok
          PFE 1 :Links ok
          PFE 2 :Links ok
      FPC 1
          PFE 0 :Links ok
          PFE 1 :Links ok
          PFE 2 :Links ok
Plane 6
  Plane state: ACTIVE
      FPC 0
          PFE 0 :Links ok
          PFE 1 :Links ok
          PFE 2 :Links ok
      FPC 1
          PFE 0 :Links ok
          PFE 1 :Links ok
          PFE 2 :Links ok
Plane 7
  Plane state: ACTIVE
      FPC 0
          PFE 0 :Links ok
          PFE 1 :Links ok
          PFE 2 :Links ok
      FPC 1
          PFE 0 :Links ok
          PFE 1 :Links ok
          PFE 2 :Links ok
Plane 8
```

```
  Plane state: ACTIVE
      FPC 0
          PFE 0 :Links ok
          PFE 1 :Links ok
          PFE 2 :Links ok
      FPC 1
          PFE 0 :Links ok
          PFE 1 :Links ok
          PFE 2 :Links ok
Plane 9
  Plane state: ACTIVE
      FPC 0
          PFE 0 :Links ok
          PFE 1 :Links ok
          PFE 2 :Links ok
      FPC 1
          PFE 0 :Links ok
          PFE 1 :Links ok
          PFE 2 :Links ok
Plane 10
  Plane state: ACTIVE
      FPC 0
          PFE 0 :Links ok
          PFE 1 :Links ok
          PFE 2 :Links ok
      FPC 1
          PFE 0 :Links ok
          PFE 1 :Links ok
          PFE 2 :Links ok
Plane 11
  Plane state: ACTIVE
      FPC 0
          PFE 0 :Links ok
          PFE 1 :Links ok
          PFE 2 :Links ok
      FPC 1
          PFE 0 :Links ok
          PFE 1 :Links ok
          PFE 2 :Links ok
Plane 12
  Plane state: ACTIVE
      FPC 0
          PFE 0 :Links ok
```

```
          PFE 1 :Links ok
          PFE 2 :Links ok
      FPC 1
          PFE 0 :Links ok
          PFE 1 :Links ok
          PFE 2 :Links ok
Plane 13
  Plane state: ACTIVE
      FPC 0
          PFE 0 :Links ok
          PFE 1 :Links ok
          PFE 2 :Links ok
      FPC 1
          PFE 0 :Links ok
          PFE 1 :Links ok
          PFE 2 :Links ok
Plane 14
  Plane state: ACTIVE
      FPC 0
          PFE 0 :Links ok
          PFE 1 :Links ok
          PFE 2 :Links ok
      FPC 1
          PFE 0 :Links ok
          PFE 1 :Links ok
          PFE 2 :Links ok
Plane 15
  Plane state: ACTIVE
      FPC 0
          PFE 0 :Links ok
          PFE 1 :Links ok
          PFE 2 :Links ok
      FPC 1
          PFE 0 :Links ok
          PFE 1 :Links ok
          PFE 2 :Links ok
Plane 16
  Plane state: ACTIVE
      FPC 0
          PFE 0 :Links ok
          PFE 1 :Links ok
          PFE 2 :Links ok
      FPC 1
```

```
          PFE 0 :Links ok
          PFE 1 :Links ok
          PFE 2 :Links ok
Plane 17
  Plane state: ACTIVE
      FPC 0
          PFE 0 :Links ok
          PFE 1 :Links ok
          PFE 2 :Links ok
      FPC 1
          PFE 0 :Links ok
          PFE 1 :Links ok
          PFE 2 :Links ok
Plane 18
  Plane state: ACTIVE
      FPC 0
          PFE 0 :Links ok
          PFE 1 :Links ok
          PFE 2 :Links ok
      FPC 1
          PFE 0 :Links ok
          PFE 1 :Links ok
          PFE 2 :Links ok
Plane 19
  Plane state: ACTIVE
      FPC 0
          PFE 0 :Links ok
          PFE 1 :Links ok
          PFE 2 :Links ok
      FPC 1
          PFE 0 :Links ok
          PFE 1 :Links ok
          PFE 2 :Links ok
Plane 20
  Plane state: ACTIVE
      FPC 0
          PFE 0 :Links ok
          PFE 1 :Links ok
          PFE 2 :Links ok
      FPC 1
          PFE 0 :Links ok
          PFE 1 :Links ok
          PFE 2 :Links ok
```

```
Plane 21
  Plane state: ACTIVE
      FPC 0
          PFE 0 :Links ok
          PFE 1 :Links ok
          PFE 2 :Links ok
      FPC 1
          PFE 0 :Links ok
          PFE 1 :Links ok
          PFE 2 :Links ok
```

Release Information

Command introduced in Junos OS Release 8.0.

detail, extensive, lcc, sfc, and terse options introduced for the TX Matrix Plus router in Junos OS Release 9.6.

`extended` option introduced in Junos OS Release 16.1 for MX2020 and MX2010 Routers.

RELATED DOCUMENTATION

request chassis fabric plane | **410**

show chassis fabric plane-location | **1189**

Routing Matrix with a TX Matrix Plus Router Solutions Page

show chassis fabric plane-location

IN THIS SECTION

- Syntax | **1190**
- Syntax (MX Series Routers) | **1190**
- Syntax (MX2010, MX2020, MX10003, and MX2008 Universal Routing Platforms) | **1190**

- Description | **1191**
- Options | **1191**
- Required Privilege Level | **1191**
- Output Fields | **1192**
- Sample Output | **1193**
- Release Information | **1201**

Syntax

```
show chassis fabric plane-location
```

Syntax (MX Series Routers)

```
show chassis fabric plane-location
<all-members>
<local>
<member member-id>
```

Syntax (MX2010, MX2020, MX10003, and MX2008 Universal Routing Platforms)

```
show chassis fabric plane-location
<extended>
```

Description

(M120, MX Series routers, and EX8200 switches only) Display the Control Board (CB) location of each plane. This command can be used on the primary Routing Engine or the backup Routing Engine. For information about the meaning of “CBs” and “fabric plane” on the switches, see the hardware documentation for your switch.

(TX Matrix Plus routers only) Display the SIB location of each fabric plane.

(PTX Series Packet Transport Routers and QFX Series switches only) Display the fabric plane location of each SIB.

(MX2010, MX2020, and MX2008 Routers only) Display the fabric plane location of each Switch Fabric Board (SFB).

Options

all-members	(MX Series routers only) (Optional) Display the CB location of each fabric plane on the Routing Engines in all member routers in the Virtual Chassis configuration.
local	(MX Series routers only) (Optional) Display the CB location of each fabric plane on the Routing Engines in the local Virtual Chassis member.
member *member-id*	(MX Series routers only) (Optional) Display the CB location of each fabric plane on the Routing Engines in the specified member in the Virtual Chassis configuration. Replace *member-id* with a value of 0 or 1.
extended	(MX2020, MX2010, and MX2008 routers only) (Optional) Display the fabric plane location of all 3 planes of each Switch Fabric Board (SFB) or enhanced Switch Fabric Board (SFB2).

Required Privilege Level

view

Output Fields

Table 67 on page 1192 lists the output fields for the `show chassis fabric plane-location` command. Output fields are listed in the approximate order in which they appear.

Table 67: show chassis fabric plane-location Output Fields

Field Name	Field Description
Plane *n*	Plane number. (PTX Series Packet Transport Routers and QFX Series switches) Plane numbers associated with the SIB. (MX2010, MX2020, and MX2008 Routers only) Plane numbers associated with the SFB.
Control Board *n*	Control board number.
SFC ABS-SIB-F13	(TX Matrix Plus routers only) Switch Interface Board (SIB) slot number on the F13 SIB.
SFC ABS-SIB-F2S	(TX Matrix Plus routers only) SIB slot number on the F2S SIB.
LCC ST-SIB-L	(TX Matrix Plus routers only) Line-card chassis (LCC) SIB slot number.
SFC SIB F13	(TX Matrix Plus routers with 3D SIBs only) Switch Interface Board (SIB) slot number on the F13 SIB.
SFC SIB F2S	(TX Matrix Plus routers with 3D SIBs only) SIB slot number on the F2S SIB.
LCC SIB	(TX Matrix Plus routers with 3D SIBs only) Line-card chassis (LCC) SIB slot number.
SIB	(PTX Series Packet Transport Routers and QFX Series switches) SIB number.
Switch Fabric Board*n*	(MX2010, MX2020, and MX2008 Routers only) SFB number.

Sample Output

show chassis fabric plane-location (M120 Router)

```
user@host> show chassis fabric plane-location
------------Fabric Plane Locations-------------
Plane 0                         Control Board 0
Plane 1                         Control Board 0
Plane 2                         Control Board 1
Plane 3                         Control Board 1
```

show chassis fabric plane-location (MX240 and MX480 Routers)

```
user@host> show chassis fabric plane-location
------------Fabric Plane Locations-------------
Plane 0                         Control Board 0
Plane 1                         Control Board 0
Plane 2                         Control Board 0
Plane 3                         Control Board 0
Plane 4                         Control Board 1
Plane 5                         Control Board 1
Plane 6                         Control Board 1
Plane 7                         Control Board 1
```

show chassis fabric plane-location (MX960 Router)

```
user@host> show chassis fabric plane-location
------------Fabric Plane Locations-------------
Plane 0                         Control Board 0
Plane 1                         Control Board 0
Plane 2                         Control Board 1
Plane 3                         Control Board 1
Plane 4                         Control Board 2
Plane 5                         Control Board 2
```

show chassis fabric plane-location (MX10008 Router)

```
user@host> show chassis fabric plane-location

------------Fabric Plane Locations-------------
Plane 0              Switch Fabric Board 0
Plane 1              Switch Fabric Board 0
Plane 2              Switch Fabric Board 0
Plane 3              Switch Fabric Board 0
Plane 4              Switch Fabric Board 1
Plane 5              Switch Fabric Board 1
Plane 6              Switch Fabric Board 1
Plane 7              Switch Fabric Board 1
Plane 8              Switch Fabric Board 2
Plane 9              Switch Fabric Board 2
Plane 10             Switch Fabric Board 2
Plane 11             Switch Fabric Board 2
Plane 12             Switch Fabric Board 3
Plane 13             Switch Fabric Board 3
Plane 14             Switch Fabric Board 3
Plane 15             Switch Fabric Board 3
Plane 16             Switch Fabric Board 4
Plane 17             Switch Fabric Board 4
Plane 18             Switch Fabric Board 4
Plane 19             Switch Fabric Board 4
Plane 20             Switch Fabric Board 5
Plane 21             Switch Fabric Board 5
Plane 22             Switch Fabric Board 5
Plane 23             Switch Fabric Board 5
```

show chassis fabric plane-location (MX2020 Router)

```
user@host> show chassis fabric plane-location
------------Fabric Plane Locations-------------
Plane 0              Switch Fabric Board 0
Plane 1              Switch Fabric Board 1
Plane 2              Switch Fabric Board 2
Plane 3              Switch Fabric Board 3
Plane 4              Switch Fabric Board 4
Plane 5              Switch Fabric Board 5
```

```
Plane 6              Switch Fabric Board 6
Plane 7              Switch Fabric Board 7
```

show chassis fabric plane-location (MX2020 Router with SFB2)

```
user@host> show chassis fabric plane-location extended
------------Fabric Plane Locations-------------
Plane 0              Switch Fabric Board 0
Plane 1              Switch Fabric Board 0
Plane 2              Switch Fabric Board 0
Plane 3              Switch Fabric Board 1
Plane 4              Switch Fabric Board 1
Plane 5              Switch Fabric Board 1
Plane 6              Switch Fabric Board 2
Plane 7              Switch Fabric Board 2
Plane 8              Switch Fabric Board 2
Plane 9              Switch Fabric Board 3
Plane 10             Switch Fabric Board 3
Plane 11             Switch Fabric Board 3
Plane 12             Switch Fabric Board 4
Plane 13             Switch Fabric Board 4
Plane 14             Switch Fabric Board 4
Plane 15             Switch Fabric Board 5
Plane 16             Switch Fabric Board 5
Plane 17             Switch Fabric Board 5
Plane 18             Switch Fabric Board 6
Plane 19             Switch Fabric Board 6
Plane 20             Switch Fabric Board 6
Plane 21             Switch Fabric Board 7
Plane 22             Switch Fabric Board 7
Plane 23             Switch Fabric Board 7
```

show chassis fabric plane-location (MX10003 Router)

```
user@host> show chassis fabric plane-location

------------Fabric Plane Locations-------------
Plane 0
         FPC 0
         FPC 1
```

```
Plane 1
         FPC 0
         FPC 1
Plane 2
         FPC 0
         FPC 1
Plane 3
         FPC 0
         FPC 1
Plane 4
         FPC 0
         FPC 1
Plane 5
         FPC 0
         FPC 1
Plane 6
         FPC 0
         FPC 1
Plane 7
         FPC 0
         FPC 1
Plane 8
         FPC 0
         FPC 1
Plane 9
         FPC 0
         FPC 1
Plane 10
         FPC 0
         FPC 1
Plane 11
         FPC 0
         FPC 1
Plane 12
         FPC 0
         FPC 1
Plane 13
         FPC 0
         FPC 1
Plane 14
         FPC 0
         FPC 1
Plane 15
```

```
         FPC 0
         FPC 1
Plane 16
         FPC 0
         FPC 1
Plane 17
         FPC 0
         FPC 1
Plane 18
         FPC 0
         FPC 1
Plane 19
         FPC 0
         FPC 1
Plane 20
         FPC 0
         FPC 1
Plane 21
         FPC 0
         FPC 1
```

show chassis fabric plane-location (TX Matrix Plus Router)

```
user@host> show chassis fabric plane-location
Fabric Plane Locations :
Plane       SFC ABS-SIB-F13        SFC ABS-SIB-F2        LCC ST-SIB-L
 0             0, 1              0/0, 0/2, 0/4, 0/6           0
 1             3, 4              1/0, 1/2, 1/4, 1/6           1
 2             6, 7              2/0, 2/2, 2/4, 2/6           2
 3             8, 9              3/0, 3/2, 3/4, 3/6           3
 4             11, 12            4/0, 4/2, 4/4, 4/6           4
```

show chassis fabric plane-location (TX Matrix Plus Router with 3D SIBs)

```
user@host> show chassis fabric plane-location
sfc0-re0
--------------------------------------------------------------------------------
------------Fabric Plane Locations------------
Plane       SFC SIB F13            SFC SIB F2               LCC SIB
 0             0, 1              0/0, 0/2, 0/4, 0/6           0
```

```
1            3, 4             1/0, 1/2, 1/4, 1/6          1
2            6, 7             2/0, 2/2, 2/4, 2/6          2
3            8, 9             3/0, 3/2, 3/4, 3/6          3
4            11, 12           4/0, 4/2, 4/4, 4/6          4
```

show chassis fabric plane-location (EX8200 Switch)

```
user@host> show chassis fabric plane-location

------------Fabric Plane Locations-------------
Plane  0                        Control Board 0
Plane  1                        Control Board 0
Plane  2                        Control Board 0
Plane  3                        Control Board 0
Plane  4                        Control Board 1
Plane  5                        Control Board 1
Plane  6                        Control Board 1
Plane  7                        Control Board 1
Plane  8                        Control Board 2
Plane  9                        Control Board 2
Plane 10                        Control Board 2
Plane 11                        Control Board 2
```

show chassis fabric plane-location (EX9253 Switch)

```
user@switch> show chassis fabric plane-location

------------Fabric Plane Locations-------------
Plane 0
         FPC 0
         FPC 1
Plane 1
         FPC 0
         FPC 1
Plane 2
         FPC 0
         FPC 1
Plane 3
         FPC 0
         FPC 1
```

```
Plane 4
         FPC 0
         FPC 1
Plane 5
         FPC 0
         FPC 1
Plane 6
         FPC 0
         FPC 1
Plane 7
         FPC 0
         FPC 1
Plane 8
         FPC 0
         FPC 1
Plane 9
         FPC 0
         FPC 1
Plane 10
         FPC 0
         FPC 1
Plane 11
         FPC 0
         FPC 1
Plane 12
         FPC 0
         FPC 1
Plane 13
         FPC 0
         FPC 1
Plane 14
         FPC 0
         FPC 1
Plane 15
         FPC 0
         FPC 1
Plane 16
         FPC 0
         FPC 1
Plane 17
         FPC 0
         FPC 1
Plane 18
```

```
         FPC 0
         FPC 1
Plane 19
         FPC 0
         FPC 1
Plane 20
         FPC 0
         FPC 1
Plane 21
         FPC 0
         FPC 1
```

show chassis fabric plane-location (PTX Series Packet Transport Routers)

```
user@host> show chassis fabric plane-location
------------Fabric Plane Locations-------------
SIB            Planes
 0             0    1
 1             2    3
 2             4    5
 3             6    7
 4             8    9
 5            10   11
 6            12   13
 7            14   15
 8            16   17
```

show chassis fabric plane-location (PTX10008 Routers)

```
user@host> show chassis fabric plane-location
------------Fabric Plane Locations-------------
SIB            Planes
 0             0    1
 1             2    3
 2             4    5
 3             6    7
 4             8    9
 5            10   11
```

show chassis fabric plane-location (QFX 10008 Switch)

```
user@host> show chassis fabric plane-location
------------Fabric Plane Locations-------------
SIB            Planes
 0             0    1
 1             2    3
 2             4    5
 3             6    7
 4             8    9
 5            10   11
```

Release Information

Command introduced in Junos OS Release 8.0.

`extended` option introduced in Junos OS Release 16.1R1 for MX2020 and MX2010 Universal Routing Platforms.

show chassis fabric redundancy-mode

IN THIS SECTION

- Syntax | **1202**
- Description | **1202**
- Options | **1202**
- Required Privilege Level | **1202**
- Output Fields | **1202**
- Sample Output | **1203**
- Release Information | **1203**

Syntax

```
show chassis fabric redundancy-mode
```

Description

(MX240, MX480, and MX960 routers only) Display whether redundancy mode is configured for active control boards to enable increased fabric bandwidth usage.

Options

This command has no options.

Required Privilege Level

view

Output Fields

Table 68 on page 1202 lists the output fields for the `show chassis fabric redundancy-mode` command. Output fields are listed in the approximate order in which they appear.

Table 68: show chassis fabric redundancy mode Output Fields

Field name	Field Description
Fabric redundancy mode	Currently configured mode of the fabric

Sample Output

show chassis fabric redundancy-mode

```
user@host> show chassis fabric redundancy-mode
Fabric redundancy mode: Redundant Fabric
```

Release Information

Command introduced in Junos OS Release 12.2.

RELATED DOCUMENTATION

- Detection and Corrective Actions of Line Cards with Degraded Fabric on MX Series Routers | 34
- Detection and Recovery of Fabric-Related Failures Caused by Loss of Connectivity on MX Series Routers | 31
- MX Series Routers Fabric Resiliency | 29
- redundancy-mode | 358
- Configuring Fabric Redundancy Mode for Active Control Boards on MX Series Routers

show chassis fabric reachability

IN THIS SECTION

- Syntax | 1204
- Description | 1204
- Options | 1204
- Required Privilege Level | 1204
- Output Fields | 1205
- Sample Output | 1211

- Release Information | 1217

Syntax

```
show chassis fabric reachability
<detail>
<extended>
```

Description

(M320, MX240, MX480, MX960, PTX Series, and T Series routers only) Display the current state of fabric destination reachability. Additionally, display the details of the automated actions taken by the system to stop null-route filtering and attempt healing, and the final resolution of the actions.

Options

none Display the state of fabric destination reachability for M320, MX240, MX480, MX960, PTX Series, T640, T1600, and TX Matrix routers, based on periodic reachability checks. Display the system's action phase sequences to stop the null route and attempt healing, and the final resolution.

detail (Optional) Display the details of the actions carried out by the system in the different action phases and the final resolution.

extended (MX2020 and MX2010 Routers only) (Optional) Display the state of fabric destination reachability for MX2010 and MX2020 routers.

Required Privilege Level

view

Output Fields

The table lists the output fields for the `show chassis fabric reachability` command. Output fields are listed in the approximate order in which they appear.

Table 69: show chassis fabric reachability Output Fields

Field Name	Field Description	Level of Output
Fabric reachability status	Display the reachability status of the fabric. • `Enabled destinations transitioned to unreachable, Fabric down action in progress`—Some enabled destinations that were originally reachable have become unreachable. The system is trying to stop the fabric down condition and attempt healing. • `Enabled destinations reachable`—The enabled destinations are reachable. • `Unreachable destinations healed`—The unreachable destinations are healed and are reachable. • `Unreachable destinations removed`—The unreachable destinations are removed. • `Unreachable destinations present`—Unreachable destinations are present in the system. • `Unreachable destinations present due to FPC restart disable configuration`—Unreachable destinations are present as a result of user configuration set to disable FPC restart.	All levels
Unreachable destinations	Number of FPCs that have unreachable destinations.	All levels
Detected on	Date and time when unreachable destinations are detected.	All levels

Table 69: show chassis fabric reachability Output Fields *(Continued)*

Field Name	Field Description	Level of Output
Reason	Reason for the destination turning unreachable. • `Single FPC error`—A single bad FPC is not reachable over the fabric. • `Fabric plane error`—Multiple FPCs are not able to forward traffic over the fabric planes.	All levels
Fabric reachability action	Action taken to handle the unreachable destination. • `Plane Action`—The healing is attempted only for the fabric planes. • `SIB Action`—(PTX Series system only) The healing is attempted only for the SIBs. • `Plane and FPC Action`—The healing is attempted both for the fabric planes and the FPCs. • `SIB and FPC Action`—(PTX Series system only) The healing is attempted both for the SIBs and the FPCs. • `FPC Action`—The healing is attempted only for the bad FPCs.	All levels
Acting on	Current action is being performed on: • `Single FPC error`—The current operation is for healing the single bad FPC. • `Fabric Plane error`—The current operation is for healing the fabric planes.	All levels

Table 69: show chassis fabric reachability Output Fields *(Continued)*

Field Name	Field Description	Level of Output
Initial phase	Starting phase for the healing action. • `Plane restart`—The fabric planes are restarted. • `SIB restart`—(PTX Series system only) The SIBs are restarted. • `Plane and FPC restart`—Both the fabric planes and affected FPCs are restarted. • `SIB and FPC restart`—(PTX Series system only) SIBs and affected FPCs are restarted.	All levels
Current phase	Current phase for the healing action. • `Plane restart`—The fabric planes are restarted. • `SIB restart`—(PTX Series system only) The SIBs are restarted. • `Plane and FPC restart`—Both the fabric planes and affected FPCs are restarted. • `SIB and FPC restart`—(PTX Series system only) Both the SIBs and affected FPCs are restarted. • `FPC offline`—The FPCs are turned offline because the previously mentioned healing processes have failed.	All levels
Action started	Date and time when the system fabric down healing attempt is started.	All levels
Plane restart phase	The status of the plane restart phase. • `Completed`—The plane restart phase is completed. • `In progress`—The plane restart phase is in progress.	`detail`
Phase started	Date and time when the plane restart phase is started.	`detail`
Planes restarted	List of plane numbers restarted by the system.	`detail`

Table 69: show chassis fabric reachability Output Fields *(Continued)*

Field Name	Field Description	Level of Output
Planes timed out	List of plane numbers that have timed out waiting to be restarted by the system.	`detail`
Planes being offlined / onlined	Planes that are turned offline or turned online by the system, with date and time.	`detail`
Phase completed	Date and time when the plane restart phase is completed.	`detail`
Plane and FPC Restart Phase	Status of the plane and FPC restart phase. • `Completed`—The plane and FPC restart phase is completed. • `In progress`—The plane and FPC restart phase is in progress.	`detail`
Phase started	Date and time when the plane and FPC restart phase is started.	`detail`
FPC Offline Started	Date and time when the FPC offline action is started.	`detail`
Offlined FPCs	List of FPCs that are turned offline by the system.	`detail`
FPCs timed out	List of FPCs that have timed out waiting to be turned offline by the system.	`detail`
FPC being offlined	FPC that is being turned offline by the system, with date and time.	`detail`
FPC Offline completed	Date and time when the FPC offline action is completed.	`detail`
Plane restarting started	Date and time when the plane restart action is started.	`detail`
Planes restarted	List of planes restarted by the system.	`detail`

Table 69: show chassis fabric reachability Output Fields *(Continued)*

Field Name	Field Description	Level of Output
Planes being offlined / onlined	Planes that are currently being turned offline or turned online by the system, with date and time.	detail
Plane restarting completed	Date and time when the plane restarting action is completed.	detail
FPC online started	Date and time when FPC online action is started.	detail
Onlined FPCs	List of FPCs that are turned online by the system.	detail
FPCs timed out	FPCs that have timed out waiting to be turned online by the system.	detail
FPC being onlined	FPC that is being turned online by the system, with date and time.	detail
FPC Online completed	Date and time when the action of turning the FPCs online is completed.	detail
Phase Completed	Date and time when the plane and FPC restart phase is completed.	detail
Phase started	Date and time when the plane and FPC restart phase is started.	detail
FPC restart time	Date and time when the FPC restart action is started.	detail
FPC restarted	FPC that is restarted by the system, with date and time.	detail
Phase Completed	Date and time when the plane and FPC restart phase is completed.	detail

Table 69: show chassis fabric reachability Output Fields *(Continued)*

Field Name	Field Description	Level of Output
FPC Offline Phase	Status of the FPC offline phase. • `Completed`— The FPC offline phase is completed. • `In progress`—The FPC offline phase is currently in progress.	`detail`
Phase started	Date and time when the FPC offline phase is started.	`detail`
FPC Offline started	Date and time when the FPC offline action is started.	`detail`
Offlined FPCs	List of FPCs turned offline by the system.	`detail`
FPCs timed out	List of FPCs that have timed out waiting to be turned offline by the system.	`detail`
FPC being offlined	FPC that is being turned offline by the system, with date and time.	`detail`
FPC Offline completed	Date and time when the FPC offline action is completed.	`detail`
Phase Completed	Date and time when the FPC offline phase is completed.	`detail`
Action Completed	Date and time when the system fabric down healing attempt is completed.	All levels

Table 69: show chassis fabric reachability Output Fields *(Continued)*

Field Name	Field Description	Level of Output
Fabric reachability resolution	Status after the healing actions are performed. • `Unreachable destinations healed after` *phase name*—The unreachable destinations are healed after the healing actions are performed. The phase name indicates the last healing phase. • `Unreachable destinations removed by FPCs` *FPC number* `offline`—The unreachable destinations are removed by turning the FPCs offline. • `Unreachable destinations present on FPC/PFE` *FPC/PFE number*—The unreachable destinations are present on the FPCs or Packet Forwarding Engines and need to be acted upon.	All levels

Sample Output

show chassis fabric reachability (T640 and T1600 routers)

```
user@host> show chassis fabric reachability
Fabric reachability status: Unreachable destinations removed

Fabric reachability detection:
    Unreachable destinations               : Present on 3 FPCs
        Detected on                        : 2010-11-22 15:19:45 PST
        Reason                             : Fabric plane error

Fabric reachability action:
    Fabric reachability action             : FPC action
    Acting on                              : Fabric plane error
    Initial phase                          : Plane restart
    Current phase                          : FPC offline is completed
    Action started                         : 2010-11-22 15:08:05 PST
    Action completed                       : 2010-11-22 15:19:45 PST
```

```
Fabric reachability resolution: Unreachable destinations removed by FPCs 2, 3, 5
 offline
```

show chassis fabric reachability detail (T640 and T1600 routers)

```
user@host> show chassis fabric reachability
detail
Fabric reachability status: Unreachable destinations removed
Fabric reachability detection:
    Unreachable destinations                : Present on 3 FPCs
        Detected on                         : 2010-11-15 15:50:32 PST
        Reason                              : Fabric plane error

Fabric reachability action:
    Fabric reachability action              : FPC action
    Acting on                               : Fabric plane error
    Initial phase                           : Plane restart
    Current phase                           : FPC offline is completed
    Action started                          : 2010-11-15 15:41:47 PST
        Plane restart phase                 : Completed
            Phase started                   : 2010-11-15 15:41:47 PST
                Planes restarted            : 0, 1, 2, 3, 4, 0
            Phase completed                 : 2010-11-15 15:42:14 PST
        Plane and FPC Restart Phase         : Completed
            Phase started                   : 2010-11-15 15:45:52 PST
                FPC Offline Started         : 2010-11-15 15:45:52 PST
                    Offlined FPCs           : 2, 3, 5, 7
                FPC Offline completed       : 2010-11-15 15:45:52 PST
                Plane restarting started    : 2010-11-15 15:45:52 PST
                    Planes restarted        : 0, 1, 2, 3, 4, 0
                Plane restarting completed  : 2010-11-15 15:46:11 PST
                FPC online started          : 2010-11-15 15:46:11 PST
                    Onlined FPCs            : 2, 3, 5, 7
                FPC online completed        : 2010-11-15 15:46:50 PST
            Phase completed                 : 2010-11-15 15:46:50 PST
        FPC offline phase                   : Completed
            Phase started                   : 2010-11-15 15:50:32 PST
                FPC offline started         : 2010-11-15 15:50:32 PST
                    Offlined FPCs           : 2, 3, 5
                FPC offline completed       : 2010-11-15 15:50:32 PST
            Phase completed                 : 2010-11-15 15:50:32 PST
```

```
    Action completed                        : 2010-11-15 15:50:32 PST

Fabric reachability resolution: Unreachable destinations removed by FPCs 2, 3, 5
 offline
```

show chassis fabric reachability (PTX5000 system)

```
user@host> show chassis fabric reachability
Fabric reachability status: Enabled destinations transitioned to unreachable, Fabric down action
in progress

Fabric reachability detection:
    Unreachable destinations                : Present on 5 FPCs
        Detected on                         : 2012-11-14 15:53:00 PST
        Reason                              : Fabric plane error

Fabric reachability action:
    Fabric reachability action              : SIB action
    Acting on                               : Fabric plane error
    Initial phase                           : SIB restart
    Current phase                           : SIB restart is in progress
    Action started                          : 2012-11-14 15:53:00 PST
```

show chassis fabric reachability (MX2020 Router with SFB2)

```
user@host > show chassis fabric reachability
Fabric reachability status: No Fabric degradation detected now
```

show chassis fabric reachability detail (MX10003 Router)

```
user@host > show chassis fabric reachability detail

May 23 23:52:27

Fabric reachability status: Fabric degradation condition healed
        Detected on                         : 2017-05-23 23:49:54 PDT
        Reason                              : Fabric Degradation due to Plane faults (fabric
error)
```

```
Fabric reachability action:
    Fabric reachability action              : Plane action
    Current phase                           : Plane Restart Phase is completed
    Action started                          : 2017-05-23 23:50:04 PDT
    Action completed                        : 2017-05-23 23:52:22 PDT
        Plane restart phase                 : Completed
            Phase started                   : 2017-05-23 23:50:04 PDT
                Planes restarted            : 0, 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14,
15, 16, 17, 18, 19, 20, 21
            Phase completed                 : 2017-05-23 23:52:22 PDT
```

show chassis fabric reachability (TX Matrix router)

```
user@host> show chassis fabric reachability
Fabric reachability status: Enabled destinations transitioned to unreachable, Fabric down action
in progress

Fabric reachability detection:
    Unreachable destinations                : Present on 14 FPCs
        Detected on                         : 2013-08-29 02:09:16 PDT
        Reason                              : Fabric plane error

Fabric reachability action:
    Fabric reachability action              : Plane action
    Acting on                               : Fabric plane error
    Initial phase                           : Plane restart
    Current phase                           : Plane restart is in progress
    Action started                          : 2013-08-29 02:09:16 PDT
```

show chassis fabric reachability detail (TX Matrix router)

```
user@host> show chassis fabric reachability
detail
Fabric reachability status: Enabled destinations transitioned to unreachable, Fabric down action
in progress

Fabric reachability detection:
    Unreachable destinations                : Present on 14 FPCs
        Detected on                         : 2013-08-29 02:09:16 PDT
```

```
        Reason                              : Fabric plane error

Fabric reachability action:
    Fabric reachability action              : Plane action
    Acting on                               : Fabric plane error
    Initial phase                           : Plane restart
    Current phase                           : Plane restart is in progress
    Action started                          : 2013-08-29 02:09:16 PDT
        Plane restart phase                 : In progress
            Phase started                   : 2013-08-29 02:09:16 PDT
                Planes restarted            : 0, 2, 3
                Planes being offlined       : 4 : 2013-08-29 02:10:11 PDT
```

show chassis fabric reachability detail (MX960 router)

After triggering a phase action from an MPC, the `show chassis fabric reachability` command includes output from DPCs, MPCs, or FPCs.

```
user@host> show chassis fabric reachability
detail
Fabric reachability status: Fabric degradation condition healed
        Detected on                         : 2018-03-14 22:28:03 PDT
        Reason                              : Fabric Degradation due to grant timeouts seen by
DPCs, MPCs, or FPCs

Fabric reachability action:
    Fabric reachability action              : Plane action
    Current phase                           : Plane Restart Phase is completed
    Action started                          : 2018-03-14 22:28:17 PDT
    Action completed                        : 2018-03-14 22:29:28 PDT
        Plane restart phase                 : Completed
            Phase started                   : 2018-03-14 22:28:17 PDT
                Planes restarted            : 0, 1, 2, 3
            Phase completed                 : 2018-03-14 22:29:28 PDT

Fabric reachability resolution: Fabric degradation healed after phase Plane restart
```

show chassis fabric reachability (PTX10004, PTX10008, and PTX100016 with PTX10K-LC1202-36MR linecard)

```
user@host> show chassis fabric reachability
Fabric reachability status: No Fabric degradation detected now

Fabric reachability status: Unreachable destinations removed

Fabric reachability detection:
    Unreachable destinations                : Present on 3 FPCs
        Detected on                         : 2010-11-22 15:19:45 PST
        Reason                              : Fabric plane error

Fabric reachability action:
    Fabric reachability action              : FPC action
    Acting on                               : Fabric plane error
    Initial phase                           : Plane restart
    Current phase                           : FPC offline is completed
    Action started                          : 2010-11-22 15:08:05 PST
    Action completed                        : 2010-11-22 15:19:45 PST

Fabric reachability resolution: Unreachable destinations removed by FPCs 2, 3, 5 offline
```

show chassis fabric reachability detail (PTX10004, PTX10008, and PTX100016 with PTX10K-LC1202-36MR linecard)

```
user@host> show chassis fabric reachability
Fabric reachability status: Fabric degradation condition healed
        Detected on                         : 2018-03-14 22:28:03 PDT
        Reason                              : Fabric Degradation due to grant timeouts seen by
DPCs, MPCs, or FPCs

Fabric reachability action:
    Fabric reachability action              : Plane action
    Current phase                           : Plane Restart Phase is completed
    Action started                          : 2018-03-14 22:28:17 PDT
    Action completed                        : 2018-03-14 22:29:28 PDT
        Plane restart phase                 : Completed
            Phase started                   : 2018-03-14 22:28:17 PDT
                Planes restarted            : 0, 1, 2, 3
```

```
            Phase completed                : 2018-03-14 22:29:28 PDT

Fabric reachability resolution: Fabric degradation healed after phase Plane restart
```

Release Information

Command introduced before Junos OS Release 11.4.

`extended` option introduced in Junos OS Release 16.1R1 for MX2010 and MX2020 Universal Routing Platforms.

RELATED DOCUMENTATION

- show chassis fabric unreachable-destinations | **1287**

show chassis fabric sibs

IN THIS SECTION

- Syntax | **1218**
- Description | **1218**
- Options | **1218**
- Required Privilege Level | **1218**
- Output Fields | **1219**
- Sample Output | **1221**
- Release Information | **1236**

Syntax

```
show chassis fabric sibs
<lcc number | scc>
<slot slot-number>
```

Description

(TX Matrix routers only) Display the state of the electrical and optical switch fabric link between the SIBs in the TX Matrix router (TX-SIBs) and the SIBs in the T640 routers (T640 LCC SIBs).

(M320, T640, T1600, T4000 and PTX Series routers and QFX Series switches) Display the state of the electrical switch fabric link between the SIBs and the FPCs.

Options

none	(TX Matrix routers only) Display the state of the electrical and optical switch fabric link between the SIBs in the TX Matrix router (TX-SIBs) and the SIBs in the T640 routers (T640 LCC SIBs). (M320, T640, T1600, T4000 and PTX Series routers and QFX Series switches) Display the state of the electrical switch fabric link between the SIBs and the FPCs.
lcc *number*	(Optional) Display the switching fabric link state for the T640 SIBs on a specified T640 router (line-card chassis) connected to a TX Matrix router.
scc	(Optional) Display the switching fabric link state for the TX-SIBs on the TX Matrix router (switch-card chassis).
slot *slot-number*	(Optional) Display the state of the electrical switch fabric link between the specified SIB slot and the FPCs.

Required Privilege Level

view

Output Fields

Table 70 on page 1219 lists the output fields for the `show chassis fabric sibs` command. Output fields are listed in the approximate order in which they appear.

Table 70: show chassis fabric sibs Output Fields

Field Name	Field Description
`Fabric management SIB state`	Switching fabric link (link from FPC to SIB) state for each SIB: • `Unused`—SIB is not present. • `Links ok`—Link between the SIB and the FPC is active. • `Link error`—Link between the SIB and the FPC is not operational.

Table 70: show chassis fabric sibs Output Fields *(Continued)*

Field Name	Field Description

`Plane state`	Possible plane state of the M320 SIB, TX-SIB or T640 SIB:
	• `S_ACTIVE`—Links on the SIB are operational, and the fabric plane (SIB) is operational and running.
	• `S_SPARE`—Links on the SIB are operational and the fabric plane (SIB) is redundant and can be operational if any of the fabric planes in the `S_ACTIVE` state encounters an error.
	NOTE: If the plane is unusable by any of the Packet Forwarding Engines, the command output displays an additional string, `plane has link errors on # pfes`, where, `#` indicates the total number of links (both from SIB to FPC, and from FPC to SIB) having link errors (detected either during initialization time or runtime) in this particular plane. This does not count links having destination errors.
	• `S_EMPTY`—No links are present on the SIB, and the fabric plane (SIB) is powered down.
	• `S_ACTIVATING`—Links on the SIB are coming online; this is a transitional state.
	• `S_DEACTIVATING`—Links on the SIB are going offline; this is a transitional state.
	• `S_FAULTING`—Links on the SIB are being marked faulty, and the fabric plane (SIB) is not operational.
	• `S_FAULT`—Links on the SIB are in an alarmed state, and the fabric plane (SIB) is not operational for the following reasons:
	  • On-board F-chip is not operational.
	  • Fiber optic connector faults.
	  • FPC connector faults.
	Possible plane state of the QFX Series SIB:
	• `Active`—Links on the SIB are operational, and the fabric plane (SIB) is operational and running.

Table 70: show chassis fabric sibs Output Fields *(Continued)*

Field Name	Field Description

	• `Spare`—Links on the SIB are operational and the fabric plane (SIB) is redundant and can be operational if any of the fabric planes in the `S_ACTIVE` state encounters an error.
	• `Empty`—No links are present on the SIB, and the fabric plane (SIB) is powered down.
	• `Activating`—Links on the SIB are coming online; this is a transitional state.
	• `Deactivating`—Links on the SIB are going offline; this is a transitional state.
	• `Faulting`—Links on the SIB are being marked faulty, and the fabric plane (SIB) is not operational.
	• `Fault`—Links on the SIB are in an alarmed state, and the fabric plane (SIB) is not operational for the following reasons:
	  • On-board F-chip is not operational.
	  • Fiber optic connector faults.
	  • FPC connector faults.

Sample Output

show chassis fabric sibs (M320 Router)

```
user@host> show chassis fabric sibs
Fabric management SIB state:
SIB #0
    plane state: S_ACTIVE
    FPC #0
        PFE #1  : Links ok
    FPC #1
        PFE #1  : Links ok
    FPC #2
```

```
        PFE #1  : Links ok
    FPC #3
        PFE #1  : Links ok
SIB #1
    plane state: S_ACTIVE
    FPC #0
        PFE #1  : Links ok
    FPC #1
        PFE #1  : Links ok
    FPC #2
        PFE #1  : Links ok
    FPC #3
        PFE #1  : Links ok
SIB #2
    plane state: S_ACTIVE
    FPC #0
        PFE #1  : Links ok
    FPC #1
        PFE #1  : Links ok
    FPC #2
        PFE #1  : Links ok
    FPC #3
        PFE #1  : Links ok
SIB #3
    plane state: S_ACTIVE
    FPC #0
        PFE #1  : Links ok
    FPC #1
        PFE #1  : Links ok
    FPC #2
        PFE #1  : Links ok
    FPC #3
        PFE #1  : Links ok
```

show chassis fabric sibs (T640 Router)

```
user@host> show chassis fabric sibs
Fabric management SIB state:
SIB #0
    plane state: S_SPARE
    FPC #0
```

```
        PFE #1  : Links ok
    FPC #2
        PFE #1  : Links ok
    FPC #3
        PFE #0  : Links ok
        PFE #1  : Links ok
SIB #1
    plane state: S_ACTIVE
    FPC #0
        PFE #1  : Links ok
    FPC #2
        PFE #1  : Links ok
    FPC #3
        PFE #0  : Links ok
        PFE #1  : Links ok
SIB #2
    plane state: S_ACTIVE
    FPC #0
        PFE #1  : Links ok
    FPC #2
        PFE #1  : Links ok
    FPC #3
        PFE #0  : Links ok
        PFE #1  : Links ok
SIB #3
    plane state: S_ACTIVE
    FPC #0
        PFE #1  : Links ok
    FPC #2
        PFE #1  : Links ok
    FPC #3
        PFE #0  : Links ok
        PFE #1  : Links ok
SIB #4
    plane state: S_ACTIVE
    FPC #0
        PFE #1  : Links ok
    FPC #2
        PFE #1  : Links ok
    FPC #3
        PFE #0  : Links ok
        PFE #1  : Links ok
```

show chassis fabric sibs (T1600 Router)

```
user@host> show chassis fabric sibs
SIB #0
    plane state: S_SPARE
    FPC #0
        PFE #0  : Links ok
        PFE #1  : Links ok
    FPC #1
        PFE #0  : Links ok
        PFE #1  : Links ok
    FPC #2
        PFE #0  : Links ok
    FPC #4
        PFE #0  : Links ok
        PFE #1  : Links ok
    FPC #5
        PFE #0  : Links ok
    FPC #6
        PFE #0  : Links ok
        PFE #1  : Links ok
    FPC #7
        PFE #0  : Links ok
        PFE #1  : Links ok
SIB #1
    plane state: S_ACTIVE , plane has link errors on 2 pfes
    FPC #0
        PFE #0  : Links ok
        PFE #1  : Links ok
    FPC #1
        PFE #0  : Links ok
        PFE #1  : Links ok
    FPC #3
        PFE #0  : Links ok
        PFE #1  : Links ok
    FPC #4
        PFE #0  : Links ok
        PFE #1  : Links ok
    FPC #5
        PFE #0  : Links ok
        PFE #1  : Links ok
    FPC #7
```

```
        PFE #0  : Links ok
        PFE #1  : Links okSIB #2
    plane state: S_ACTIVE
SIB #2
        plane state: S_ACTIVE
FPC #0
        PFE #0  : Links ok
        PFE #1  : Links ok
FPC #1
        PFE #0  : Links ok
        PFE #1  : Links ok
    FPC #2
        PFE #0  : Links ok
    FPC #4
        PFE #0  : Links ok
        PFE #1  : Links ok
    FPC #5
        PFE #0  : Links ok
    FPC #6
        PFE #0  : Links ok
        PFE #1  : Links ok
    FPC #7
        PFE #0  : Links ok
        PFE #1  : Links ok
SIB #3
    plane state: S_ACTIVE
    FPC #0
        PFE #0  : Links ok
        PFE #1  : Links ok
    FPC #1
        PFE #0  : Links ok
        PFE #1  : Links ok
    FPC #2
        PFE #0  : Links ok
    FPC #4
        PFE #0  : Links ok
        PFE #1  : Links ok
    FPC #5
        PFE #0  : Links ok
    FPC #6
        PFE #0  : Links ok
        PFE #1  : Links ok
    FPC #7
```

```
        PFE #0  : Links ok
        PFE #1  : Links ok
SIB #4
    plane state: S_ACTIVE
    FPC #0
        PFE #0  : Links ok
        PFE #1  : Links ok
    FPC #1
        PFE #0  : Links ok
        PFE #1  : Links ok
    FPC #2
        PFE #0  : Links ok
    FPC #4
        PFE #0  : Links ok
        PFE #1  : Links ok
    FPC #5
        PFE #0  : Links ok
    FPC #6
        PFE #0  : Links ok
        PFE #1  : Links ok
    FPC #7
        PFE #0  : Links ok
        PFE #1  : Links ok
```

show chassis fabric sibs (T4000 Core Router)

```
user@host> show chassis fabric sibs
Fabric management SIB state:
SIB #0
    plane state: S_SPARE
    FPC #2
        PFE #0  : Links ok
    FPC #3
        PFE #0  : Links ok
    FPC #5
        PFE #0  : Links ok
        PFE #1  : Links ok
    FPC #6
        PFE #0  : Links ok
        PFE #1  : Links ok
SIB #1
```

```
    plane state: S_ACTIVE
    FPC #2
        PFE #0  : Links ok
    FPC #3
        PFE #0  : Links ok
    FPC #5
        PFE #0  : Links ok
        PFE #1  : Links ok
    FPC #6
        PFE #0  : Links ok
        PFE #1  : Links ok
SIB #2
    plane state: S_ACTIVE
    FPC #2
        PFE #0  : Links ok
    FPC #3
        PFE #0  : Links ok
    FPC #5
        PFE #0  : Links ok
        PFE #1  : Links ok
    FPC #6
        PFE #0  : Links ok
        PFE #1  : Links ok
SIB #3
    plane state: S_ACTIVE
    FPC #2
        PFE #0  : Links ok
    FPC #3
        PFE #0  : Links ok
    FPC #5
        PFE #0  : Links ok
        PFE #1  : Links ok
    FPC #6
        PFE #0  : Links ok
        PFE #1  : Links ok
SIB #4
    plane state: S_ACTIVE
    FPC #2
        PFE #0  : Links ok
    FPC #3
        PFE #0  : Links ok
    FPC #5
        PFE #0  : Links ok
```

```
        PFE #1  : Links ok
    FPC #6
        PFE #0  : Links ok
        PFE #1  : Links ok
```

show chassis fabric sibs (TX Matrix Router)

```
user@host> show chassis fabric sibs
scc-re0:
--------------------------------------------------------------------------
Fabric management SIB state:
SIB #1
    plane state: S_ACTIVE , plane has link errors on 2 pfes
    FPC #0
        PFE #0  : Links ok
        PFE #1  : Links ok
    FPC #1
        PFE #0  : Links ok
        PFE #1  : Links ok
    FPC #3
        PFE #0  : Links ok
        PFE #1  : Links ok
    FPC #4
        PFE #0  : Links ok
        PFE #1  : Links ok
    FPC #5
        PFE #0  : Links ok
        PFE #1  : Links ok
    FPC #7
        PFE #0  : Links ok
        PFE #1  : Links ok
SIB #2
    plane state: S_ACTIVE
    LCC #0      : Links ok
    LCC #1      : Links ok
SIB #3
    plane state: S_ACTIVE
    LCC #0      : Links ok
    LCC #1      : Links ok
SIB #4
    plane state: S_ACTIVE
```

```
    LCC #0      : Links ok
    LCC #1      : Links ok

lcc0-re0:
--------------------------------------------------------------------------
Fabric management SIB state:
SIB #1
    plane state: S_ACTIVE
    FPC #0
        PFE #0  : Links ok
        PFE #1  : Links ok
    FPC #1
        PFE #1  : Links ok
    FPC #2
        PFE #0  : Links ok
        PFE #1  : Links ok
    FPC #3
        PFE #1  : Links ok
    FPC #4
        PFE #1  : Links ok
    FPC #5
        PFE #0  : Links ok
    FPC #6
        PFE #1  : Links ok
    FPC #7
        PFE #1  : Links ok
    SCC         : Links ok
SIB #2
    plane state: S_ACTIVE
    FPC #0
        PFE #0  : Links ok
        PFE #1  : Links ok
    FPC #1
        PFE #1  : Links ok
    FPC #2
        PFE #0  : Links ok
        PFE #1  : Links ok
    FPC #3
        PFE #1  : Links ok
    FPC #4
        PFE #1  : Links ok
    FPC #5
        PFE #0  : Links ok
```

```
    FPC #6
        PFE #1  : Links ok
    FPC #7
        PFE #1  : Links ok
    SCC         : Links ok
SIB #3
    plane state: S_ACTIVE
    FPC #0
        PFE #0  : Links ok
        PFE #1  : Links ok
    FPC #1
        PFE #1  : Links ok
    FPC #2
        PFE #0  : Links ok
        PFE #1  : Links ok
    FPC #3
        PFE #1  : Links ok
    FPC #4
        PFE #1  : Links ok
    FPC #5
        PFE #0  : Links ok
    FPC #6
        PFE #1  : Links ok
    FPC #7
        PFE #1  : Links ok
    SCC         : Links ok
SIB #4
    plane state: S_ACTIVE
    FPC #0
        PFE #0  : Links ok
        PFE #1  : Links ok
    FPC #1
        PFE #1  : Links ok
    FPC #2
        PFE #0  : Links ok
        PFE #1  : Links ok
    FPC #3
        PFE #1  : Links ok
    FPC #4
        PFE #1  : Links ok
    FPC #5
        PFE #0  : Links ok
    FPC #6
```

```
        PFE #1  : Links ok
    FPC #7
        PFE #1  : Links ok
    SCC         : Links o
```

show chassis fabric sibs lcc (TX Matrix Router)

```
user@host> show chassis fabric sibs lcc 0
lcc1-re0:
--------------------------------------------------------------------------
Fabric management SIB state:
SIB #1
    plane state: S_ACTIVE
    FPC #0
        PFE #0  : Links ok
    FPC #2
        PFE #1  : Links ok
    FPC #4
        PFE #0  : Links ok
    FPC #5
        PFE #1  : Links ok
    FPC #7
        PFE #0  : Links ok
    SCC         : Links ok
SIB #2
    plane state: S_ACTIVE
    FPC #0
        PFE #0  : Links ok
    FPC #2
        PFE #1  : Links ok
    FPC #4
        PFE #0  : Links ok
    FPC #5
        PFE #1  : Links ok
    FPC #7
        PFE #0  : Links ok
    SCC         : Links ok
SIB #3
    plane state: S_ACTIVE
    FPC #0
        PFE #0  : Links ok
```

```
    FPC #2
        PFE #1  : Links ok
    FPC #4
        PFE #0  : Links ok
    FPC #5
        PFE #1  : Links ok
    FPC #7
        PFE #0  : Links ok
    SCC         : Links ok
SIB #4
    plane state: S_ACTIVE
    FPC #0
        PFE #0  : Links ok
    FPC #2
        PFE #1  : Links ok
    FPC #4
        PFE #0  : Links ok
    FPC #5
        PFE #1  : Links ok
    FPC #7
        PFE #0  : Links ok
    SCC         : Links ok
```

show chassis fabric sibs scc (TX Matrix Router)

```
user@host> show chassis fabric sibs scc
scc-re0:
--------------------------------------------------------------------------
Fabric management SIB state:
SIB #1
    plane state: S_ACTIVE
    LCC #0      : Links ok
    LCC #1      : Links ok
SIB #2
    plane state: S_ACTIVE
    LCC #0      : Links ok
    LCC #1      : Links ok
SIB #3
    plane state: S_ACTIVE
    LCC #0      : Links ok
    LCC #1      : Links ok
```

```
SIB #4
    plane state: S_ACTIVE
    LCC #0      : Links ok
    LCC #1      : Links ok
```

show chassis fabric sibs slot (PTX3000 Router)

```
user@host> show chassis fabric sibs slot 0
Fabric management SIB state:
SIB #0  Online
    Fcore #0 (plane 0) Active
        FPC #8
            PFE #0  : OK
            PFE #1  : OK
        FPC #12
            PFE #0  : OK
            PFE #1  : OK
    Fcore #1 (plane 1) Active
        FPC #8
            PFE #0  : OK
            PFE #1  : OK
        FPC #12
            PFE #0  : OK
            PFE #1  : OK
```

show chassis fabric sibs slot (Junos OS Evolved PTX10008 and PTX10016)

The output of the `show chassis fabric sibs` command is modified to include ASIC information. In the earlier releases, this command displayed ASICs as FCOREs. With this modification, for every FPC and SIB, information about ASIC and FCORE is presented separately in the output. Each fabric chip hosts 2 planes (plane 0, 1) in PTX10008. Each fabric chip hosts a single plane (plane 0) in PTX10016.

PTX10008 supports 0-7 FPCs. PTX10016 supports 0-15 FPCs.

```
user@host> show chassis fabric sibs slot 0
Fabric management SIB state:
SIB #0  Online
    Asic #0 Fcore #0 (plane 0) Empty
            FPC #0
                PFE #0  : Links ok
```

```
                PFE #1  : Links ok
                PFE #2  : Links ok
                PFE #3  : Links ok
```

show chassis fabric sibs (PTX10008 Router)

```
user@host> show chassis fabric sibs
Fabric management SIB state:
SIB #0  Online
    FASIC #0 (plane 0) Active
        FPC #0
            PFE #0  : OK
            PFE #1  : OK
            PFE #2  : OK
        FPC #5
            PFE #0  : OK
            PFE #1  : OK
            PFE #2  : OK
            PFE #3  : OK
            PFE #4  : OK
            PFE #5  : OK
        FPC #6
            PFE #0  : OK
            PFE #1  : OK
            PFE #2  : OK
            PFE #3  : OK
            PFE #4  : OK
            PFE #5  : OK
    FASIC #1 (plane 1) Active
        FPC #0
            PFE #0  : OK
            PFE #1  : OK
            PFE #2  : OK
        FPC #5
            PFE #0  : OK
            PFE #1  : OK
            PFE #2  : OK
            PFE #3  : OK
            PFE #4  : OK
            PFE #5  : OK
        FPC #6
```

```
            PFE #0  : OK
            PFE #1  : OK
            PFE #2  : OK
            PFE #3  : OK
            PFE #4  : OK
            PFE #5  : OK
SIB #1  Online
    FASIC #0 (plane 2) Active
        FPC #0
            PFE #0  : OK
            PFE #1  : OK
            PFE #2  : OK
        FPC #5
            PFE #0  : OK
            PFE #1  : OK
            PFE #2  : OK
            PFE #3  : OK
            PFE #4  : OK
            PFE #5  : OK
        FPC #6
            PFE #0  : OK
            PFE #1  : OK
            PFE #2  : OK
            PFE #3  : OK
            PFE #4  : OK
            PFE #5  : OK
    FASIC #1 (plane 3) Active
        FPC #0
            PFE #0  : OK
            PFE #1  : OK
            PFE #2  : OK
        FPC #5
            PFE #0  : OK
            PFE #1  : OK
            PFE #2  : OK
            PFE #3  : OK
            PFE #4  : OK
            PFE #5  : OK
        FPC #6
            PFE #0  : OK
            PFE #1  : OK
            PFE #2  : OK
            PFE #3  : OK
```

```
            PFE #4  : OK
            PFE #5  : OK
SIB #2  Empty
SIB #3  Empty
SIB #4  Empty
SIB #5  Empty
```

show chassis fabric sibs (QFX10008 Switch)

```
user@host> show chassis fabric sibs
Fabric management SIB state:
SIB #0  Online
    FASIC #0 (plane 0) Active
        FPC #0
            PFE #0  : OK
            PFE #1  : OK
            PFE #2  : OK
            PFE #3  : OK
        FPC #1
            PFE #0  : OK
            PFE #1  : OK
    FASIC #1 (plane 1) Active
        FPC #0
            PFE #0  : OK
            PFE #1  : OK
        FPC #12
            PFE #0  : OK
            PFE #1  : OK
SIB #1  Empty
SIB #2  Empty
SIB #3  Empty
SIB #4  Empty
SIB #5  Empty
```

Release Information

Command introduced before Junos OS Release 7.4.

Command introduced on QFX Series switches in Junos OS Release 15.1X53-D30

RELATED DOCUMENTATION

- Monitoring the SIBs
- Redundant SIBs Overview

show chassis fabric stream-info

IN THIS SECTION

- Syntax | 1237
- Description | 1237
- Additional Information | 1238
- Required Privilege Level | 1238
- Output Fields | 1238
- Sample Output | 1239
- Release Information | 1242

Syntax

```
show chassis fabric stream-info
```

Description

Display the fabric stream information.

Additional Information

This command provides the fabric stream numbering for all PFEs across all FPC slots in the chassis. The number of PFEs depends on the line card in the chassis.

Required Privilege Level

view

Output Fields

Table 71 on page 1238 lists the output fields for the `show chassis fabric stream-info` command.

Table 71: show chassis fabric stream-info Output Fields

Field Name	Field Description
FPC	FPC slot number of the Flexible PIC Concentrator (FPC).

Table 71: show chassis fabric stream-info Output Fields *(Continued)*

Field Name	Field Description
Low/High Priority Fabric Streams	Display fabric stream ID for the PFE ID. Stream is a fabric connection from a source PFE to a destination PFE. There are two fabric streams from every source PFE to the destination PFE, low priority streams and high priority streams. The numbers (values) for low priority streams and high priority streams depend on chassis and the SFB type. The first row displays low priority fabric stream numbers. • For MX10008 and MX10016 devices with SFB2, the numbers are from 0 through 127. • For MX2020 devices with SFB2, the numbers are from 0 through 335. • For MX2010 devices with SFB2, the numbers are from 0 through 295. The second row displays high priority fabric stream numbers. • For MX10008 and MX10016 devices with SFB2, the numbers are from 128 through 255. • For MX2020 devices with SFB2, the numbers are from 128 through 463. • For MX2010 devices with SFB2, the numbers are from 128 through 423. Local PFE ID = Unique identifier for a PFE in an FPC.

Sample Output

show chassis fabric stream-info (MX10008 and MX10004)

```
user@host> show chassis fabric stream-info
Fabric stream info:
    First Row:  Low  Stream Numbers
    Second Row: High Stream Numbers
FPC                                  Low/High Priority Fabric Streams
        PFE0  PFE1  PFE2  PFE3  PFE4  PFE5  PFE6  PFE7  PFE8  PFE9  PFE10  PFE11  PFE12  PFE13
PFE14  PFE15
-------------------------------------------------------------------------------------------------
---------
```

```
0          0     1     2     3     4     5     6     7     8     9    10    11    12    13
14     15
          128   129   130   131   132   133   134   135   136   137   138   139   140   141
142    143
1         16    17    18    19    20    21    22    23    24    25    26    27    28    29
30     31
          144   145   146   147   148   149   150   151   152   153   154   155   156   157
158    159
2         32    33    34    35    36    37    38    39    40    41    42    43    44    45
46     47
          160   161   162   163   164   165   166   167   168   169   170   171   172   173
174    175
3         48    49    50    51    52    53    54    55    56    57    58    59    60    61
62     63
          176   177   178   179   180   181   182   183   184   185   186   187   188   189
190    191
4         64    65    66    67    68    69    70    71    72    73    74    75    76    77
78     79
          192   193   194   195   196   197   198   199   200   201   202   203   204   205
206    207
5         80    81    82    83    84    85    86    87    88    89    90    91    92    93
94     95
          208   209   210   211   212   213   214   215   216   217   218   219   220   221
222    223
6         96    97    98    99   100   101   102   103   104   105   106   107   108   109
110    111
          224   225   226   227   228   229   230   231   232   233   234   235   236   237
238    239
7        112   113   114   115   116   117   118   119   120   121   122   123   124   125
126    127
          240   241   242   243   244   245   246   247   248   249   250   251   252   253
254    255
```

show chassis fabric stream-info (MX2020 Routers)

```
user@host> show chassis fabric stream-info
Fabric stream info:
    First Row:  Low  Stream Numbers
    Second Row: High Stream Numbers
------------------------------------------------------------
FPC             Low/High Priority Fabric Streams
```

```
         PFE0  PFE1  PFE2  PFE3  PFE4  PFE5  PFE6  PFE7
-----------------------------------------------------
0           0     1     2     3   256   257   258   259
          128   129   130   131   384   385   386   387
1           4     5     6     7   260   261   262   263
          132   133   134   135   388   389   390   391
2           8     9    10    11   264   265   266   267
          136   137   138   139   392   393   394   395
3          12    13    14    15   268   269   270   271
          140   141   142   143   396   397   398   399
4          16    17    18    19   272   273   274   275
          144   145   146   147   400   401   402   403
5          20    21    22    23   276   277   278   279
          148   149   150   151   404   405   406   407
6          24    25    26    27   280   281   282   283
          152   153   154   155   408   409   410   411
7          28    29    30    31   284   285   286   287
          156   157   158   159   412   413   414   415
8          32    33    34    35   288   289   290   291
          160   161   162   163   416   417   418   419
9          36    37    38    39   292   293   294   295
          164   165   166   167   420   421   422   423
10         40    41    42    43   296   297   298   299
          168   169   170   171   424   425   426   427
11         44    45    46    47   300   301   302   303
          172   173   174   175   428   429   430   431
12         48    49    50    51   304   305   306   307
          176   177   178   179   432   433   434   435
13         52    53    54    55   308   309   310   311
          180   181   182   183   436   437   438   439
14         56    57    58    59   312   313   314   315
          184   185   186   187   440   441   442   443
15         60    61    62    63   316   317   318   319
          188   189   190   191   444   445   446   447
16         64    65    66    67   320   321   322   323
          192   193   194   195   448   449   450   451
17         68    69    70    71   324   325   326   327
          196   197   198   199   452   453   454   455
18         72    73    74    75   328   329   330   331
          200   201   202   203   456   457   458   459
19         76    77    78    79   332   333   334   335
```

```
        204   205   206   207   460   461   462   463
-------------------------------------------------------
```

show chassis fabric stream-info (MX2010 Routers)

```
user@host> show chassis fabric stream-info
Fabric stream info:
    First Row:  Low  Stream Numbers
    Second Row: High Stream Numbers
-------------------------------------------------------
FPC             Low/High Priority Fabric Streams
        PFE0  PFE1  PFE2  PFE3  PFE4  PFE5  PFE6  PFE7
-------------------------------------------------------
0         0     1     2     3   256   257   258   259
        128   129   130   131   384   385   386   387
1         4     5     6     7   260   261   262   263
        132   133   134   135   388   389   390   391
2         8     9    10    11   264   265   266   267
        136   137   138   139   392   393   394   395
3        12    13    14    15   268   269   270   271
        140   141   142   143   396   397   398   399
4        16    17    18    19   272   273   274   275
        144   145   146   147   400   401   402   403
5        20    21    22    23   276   277   278   279
        148   149   150   151   404   405   406   407
6        24    25    26    27   280   281   282   283
        152   153   154   155   408   409   410   411
7        28    29    30    31   284   285   286   287
        156   157   158   159   412   413   414   415
8        32    33    34    35   288   289   290   291
        160   161   162   163   416   417   418   419
9        36    37    38    39   292   293   294   295
        164   165   166   167   420   421   422   423
-------------------------------------------------------
```

Release Information

Command introduced in Junos OS Release 21.4R1.

show chassis fabric summary

IN THIS SECTION

- Syntax | 1243
- Description | 1243
- Options | 1244
- Required Privilege Level | 1244
- Output Fields | 1244
- Sample Output - show chassis fabric summary | 1247
- Sample Output - show chassis fabric summary extended | 1249
- Release Information | 1251

Syntax

```
show chassis fabric summary <extended>
```

Description

(MX Series routers and EX8200 switches only) Display the state of all fabric planes and the elapsed uptime.

(QFX Series devices) Display the state of all fabric planes.

(PTX Series devices) Display the state of all fabric planes. Each fabric chip hosts a single plane in PTX10016. PTX10008 hosts 2 planes per fabric chip.

Options

`extended` —(Optional) Display the extended summary of fabric planes. PTX Series devices do not support the "extended" option.

Required Privilege Level

view

Output Fields

Table 72 on page 1244 lists the output fields for the `show chassis fabric summary` command. Output fields are listed in the approximate order in which they appear.

Table 72: show chassis fabric summary Output Fields

Field Name	Field Description
`Plane`	(MX Series, MX2020, MX2010, and MX2008 Routers only) Plane number.

Table 72: show chassis fabric summary Output Fields *(Continued)*

Field Name	Field Description
State	(MX Series and QFX Series) State of the SIB or FPC: • Online—Switch Interface Board (SIB) is operational and running. **NOTE**: On the Enhanced MX SCB with Trio MPC, a maximum of 4 planes are operational and running. On all the other SCBs with Trio MPC, all the planes are operational and running. • Empty—SIB is powered down. • Check—SIB is in the Check state because of the following reasons: • SIB is not inserted properly. • Some destination errors are detected on the SIB. In this case, the Packet Forwarding Engine stops using the SIB to send traffic to the affected destination Packet Forwarding Engine. • Some link errors are detected on the channel between the SIB and a Packet Forwarding Engine. Link errors can be detected at initialization time or runtime: • Link errors caused by a link training failure at initialization time—The Packet Forwarding Engine does not use the SIB to send traffic. The show chassis fabric fpcs command shows Plane disabled as status for this link. • Link errors caused by CRC errors detected at runtime—The Packet Forwarding Engine continues to use the SIB to send traffic. The show chassis fabric fpcs command shows Link error as the status for this link. **NOTE**: The Check state does not apply to PTX Series Packet Transport Routers because there are no SIBs in the Check state. For information about link and destination errors, issue the show chassis fabric fpcs commands. • Spare—SIB is redundant and will move to active state if one of the working SIBs fails. **NOTE**: Spare does not apply to PTX Series Packet Transport Routers because there are no spare SIBs in the device. (MX2010, MX2020, and MX2008 Routers) State of the SFB.

Table 72: show chassis fabric summary Output Fields *(Continued)*

Field Name	Field Description
	• `Online`—Switch Fabric Board (SFB) is operational and running. • `Offline`—Switch Fabric Board (SFB) is powered down. • `Check`—Switch Fabric Board (SFB) is in the check state.
`Errors`	(PTX Series and QFX Series) Indicates whether there is any error on the SIB. • `None`—No errors • `Link Errors`—Fabric link errors were found on the SIB RX link. • `Cell drops`—Fabric cell drops were found on the SIB ASIC. • `Link, Cell drops`—Both Link errors and cell drops were detected on at least one of the FPC's fabric links. • `Asic Errors`—A fault affecting one of the ASICs on the SIB is detected. It can be an IO error or an internal error signaled by the ASIC. **NOTE**: The `Errors` column is empty only when the FPC or SIB is offline.
`Uptime`	(MX Series, MX2010, MX2020, and MX2008 Routers) Elapsed time the plane has been online.
`Link Error`	Fabric link errors were found on the SIB RX link.
`Link TF`	Fabric link training failure has occurred.
`Destination errors`	• `Local`—Destination error detected on the FPC or PFE's own self-stream. • `Remote`—Destination error detected on the FPC or PFE's non-self-streams.

Sample Output - show chassis fabric summary

show chassis fabric summary (EX and MX Series)

```
user@host> show chassis fabric summary
Plane   State    Uptime
 0      Online   8 hours, 45 minutes, 29 seconds
 1      Online   8 hours, 45 minutes, 28 seconds
 2      Online   8 hours, 45 minutes, 28 seconds
 3      Online   8 hours, 45 minutes, 28 seconds
 4      Spare    8 hours, 45 minutes, 28 seconds
 5      Spare    8 hours, 45 minutes, 28 seconds
 6      Spare    8 hours, 45 minutes, 28 seconds
 7      Check    6 hours, 10 minutes, 12 seconds
```

show chassis fabric summary (MX Series with MPC4E)

```
user@host > show chassis fabric summary
Plane   State    Uptime
 0      Online   6 hours, 57 minutes, 44 seconds
 1      Online   6 hours, 57 minutes, 40 seconds
 2      Online   6 hours, 57 minutes, 39 seconds
 3      Online   6 hours, 57 minutes, 34 seconds
 4      Spare    6 hours, 57 minutes, 34 seconds
 5      Spare    6 hours, 57 minutes, 29 seconds
 6      Spare    6 hours, 57 minutes, 29 seconds
 7      Spare    6 hours, 57 minutes, 24 seconds
 Note:
 For FPC slots with MPC Type 4 or MCC:
   Fabric planes 1 and 5, 3 and 7 use shared physical links.
   Those slots may run in a reduced bandwidth in case both
   plane 1 and 5, or both 3 and 7 are active.
```

show chassis fabric summary (Junos OS Evolved)

```
user@host> show chassis fabric summary
Plane   State      Link   Link  Reachability errors  Uptime
```

```
                  Error  TF    Local / Remote
0      Online     NO     NO     YES  / YES        2 days, 17 hours, 2 minutes, 24 seconds
1      Online     NO     NO     YES  / YES        2 days, 17 hours, 2 minutes, 24 seconds
2      Online     NO     NO     YES  / YES        2 days, 17 hours, 2 minutes, 24 seconds
3      Online     NO     NO     YES  / YES        2 days, 17 hours, 2 minutes, 24 seconds
4      Online     NO     NO     YES  / YES        2 days, 17 hours, 2 minutes, 24 seconds
5      Online     NO     NO     YES  / YES        2 days, 17 hours, 2 minutes, 24 seconds
6      Online     NO     NO     YES  / YES        2 days, 17 hours, 2 minutes, 14 seconds
7      Online     NO     NO     YES  / YES        2 days, 17 hours, 2 minutes, 14 seconds
8      Online     NO     NO     YES  / YES        2 days, 17 hours, 2 minutes, 14 seconds
9      Online     NO     NO     YES  / YES        2 days, 17 hours, 2 minutes, 14 seconds
10     Online     NO     NO     YES  / YES        2 days, 17 hours, 2 minutes, 14 seconds
11     Online     NO     NO     YES  / YES        2 days, 17 hours, 2 minutes, 14 seconds
12     Online     NO     NO     YES  / YES        2 days, 17 hours, 2 minutes, 16 seconds
13     Online     NO     NO     YES  / YES        2 days, 17 hours, 2 minutes, 16 seconds
14     Online     NO     NO     YES  / YES        2 days, 17 hours, 2 minutes, 16 seconds
15     Online     NO     NO     YES  / YES        2 days, 17 hours, 2 minutes, 16 seconds
16     Online     NO     NO     YES  / YES        2 days, 17 hours, 2 minutes, 16 seconds
17     Online     NO     NO     YES  / YES        2 days, 17 hours, 2 minutes, 16 seconds
18     Online     NO     NO     YES  / YES        2 days, 17 hours, 2 minutes, 23 seconds
19     Online     NO     NO     YES  / YES        2 days, 17 hours, 2 minutes, 23 seconds
20     Online     NO     NO     YES  / YES        2 days, 17 hours, 2 minutes, 23 seconds
21     Online     NO     NO     YES  / YES        2 days, 17 hours, 2 minutes, 23 seconds
22     Online     NO     NO     YES  / YES        2 days, 17 hours, 2 minutes, 23 seconds
23     Online     NO     NO     YES  / YES        2 days, 17 hours, 2 minutes, 23 seconds
24     Online     NO     NO     YES  / YES        2 days, 17 hours, 2 minutes, 11 seconds
25     Online     NO     NO     YES  / YES        2 days, 17 hours, 2 minutes, 11 seconds
26     Online     NO     NO     YES  / YES        2 days, 17 hours, 2 minutes, 11 seconds
27     Online     NO     NO     YES  / YES        2 days, 17 hours, 2 minutes, 11 seconds
28     Online     NO     NO     YES  / YES        2 days, 17 hours, 2 minutes, 11 seconds
29     Online     NO     NO     YES  / YES        2 days, 17 hours, 2 minutes, 11 seconds
30     Online     NO     NO     YES  / YES        2 days, 17 hours, 2 minutes, 27 seconds
31     Online     NO     NO     YES  / YES        2 days, 17 hours, 2 minutes, 27 seconds
32     Online     NO     NO     YES  / YES        2 days, 17 hours, 2 minutes, 27 seconds
33     Online     NO     NO     YES  / YES        2 days, 17 hours, 2 minutes, 27 seconds
34     Online     NO     NO     YES  / YES        2 days, 17 hours, 2 minutes, 27 seconds
35     Online     NO     NO     YES  / YES        2 days, 17 hours, 2 minutes, 27 seconds
```

show chassis fabric summary (PTX and QFX Series)

```
user@host> show chassis fabric summary
FRU         State          Errors

SIB0        Online         None
SIB1        Online         Link Errors
SIB2        Online         None
SIB3        Online         Cell drops
SIB4        Offline
SIB5        Online         None
SIB6        Online         Link, Cell drops
SIB7        Online         None
SIB8        Online         Link, Cell drops

FPC0        Online         None
FPC1        Online         Link Errors
FPC2        Online         None
FPC3        Offline
FPC4        Online         None
FPC5        Online         None
FPC6        Empty
FPC7        Empty
```

Sample Output - show chassis fabric summary extended

show chassis fabric summary extended (MX Series)

```
user@host> show chassis fabric summary extended

Plane   State      Link   Link  Destination errors  Uptime
                   Error  TF    Local / Remote
 0      Online     NO     NO        NO/  NO         1 day, 10 hours, 14 minutes,        26
seconds
 1      Online     NO     NO        NO/  NO         1 day, 10 hours, 14 minutes,        26
seconds
 2      Online     NO     NO        NO/  NO         1 day, 10 hours, 14 minutes,        26
seconds
```

```
 3      Online     NO     NO        NO/  NO        1 day, 10 hours, 14 minutes,        26
seconds
 4      Online     NO     NO        NO/  NO        1 day, 10 hours, 14 minutes,        26
seconds
 5      Online     NO     NO        NO/  NO        1 day, 10 hours, 14 minutes,        26
seconds
 6      Online     NO     NO        NO/  NO        1 day, 10 hours, 14 minutes,        26
seconds
 7      Online     NO     NO        NO/  NO        1 day, 10 hours, 14 minutes,        26
seconds
 8      Online     NO     NO        NO/  NO        1 day, 10 hours, 14 minutes,        26
seconds
 9      Online     NO     NO        NO/  NO        1 day, 10 hours, 14 minutes,        26
seconds
 10     Online     NO     NO        NO/  NO        1 day, 10 hours, 14 minutes,        26
seconds
 11     Online     NO     NO        NO/  NO        1 day, 10 hours, 14 minutes,        26
seconds
 12     Online     NO     NO        NO/  NO        1 day, 10 hours, 14 minutes,        26
seconds
 13     Online     NO     NO        NO/  NO        1 day, 10 hours, 14 minutes,        26
seconds
 14     Online     NO     NO        NO/  NO        1 day, 10 hours, 14 minutes,        26
seconds
 15     Online     NO     NO        NO/  NO        1 day, 10 hours, 14 minutes,        26
seconds
 16     Online     NO     NO        NO/  NO        1 day, 10 hours, 14 minutes,        26
seconds
 17     Online     NO     NO        NO/  NO        1 day, 10 hours, 14 minutes,        26
seconds
 18     Online     NO     NO        NO/  NO        1 day, 10 hours, 14 minutes,        26
seconds
 19     Online     NO     NO        NO/  NO        1 day, 10 hours, 14 minutes,        26
seconds
 20     Online     NO     NO        NO/  NO        1 day, 10 hours, 14 minutes,        26
seconds
 21     Online     NO     NO        NO/  NO        1 day, 10 hours, 14 minutes,        26
seconds
```

Release Information

Command introduced in Junos OS Release 8.4.

`extended` option added in Junos OS Release 14.1R2.

show chassis fabric topology

IN THIS SECTION

- Syntax (TX Matrix Router) | **1251**
- Syntax (TX Matrix Plus Router) | **1252**
- Syntax (T4000 Core Router) | **1252**
- Syntax (PTX Series Packet Transport Routers and QFX Series Switches) | **1252**
- Description | **1252**
- Options | **1253**
- Required Privilege Level | **1254**
- Output Fields | **1254**
- Sample Output | **1261**
- Release Information | **1287**

Syntax (TX Matrix Router)

```
show chassis fabrictopology
<lcc number | scc>
<sib-slot>
```

Syntax (TX Matrix Plus Router)

```
show chassis fabric topology
<lcc number | sfc number>
<sib-slot>
```

Syntax (T4000 Core Router)

```
show chassis fabric topology
<sib-slot>
```

Syntax (PTX Series Packet Transport Routers and QFX Series Switches)

```
show chassis fabric topology
```

Description

(TX Matrix routers only) Display the state of the switching fabric topology for the Switch Interface Board (SIB) connection between the TX Matrix router and the T640 routers.

(TX Matrix Plus routers only) Display the state of the switching fabric topology for the SIB connection between the TX Matrix Plus router and the connected routers.

(T320, T640, T1600, and T4000 routers only) Display the state of the switching fabric topology for the connection between the Switch Interface Board (SIB) and the FPCs.

(PTX Series Packet Transport Routers and QFX Series switches) Display the input-output link topology.

Options

none (TX Matrix routers only) Display the state of the switching fabric topology for the Switch Interface Board (SIB) connection between the TX Matrix router and the T640 routers.

(TX Matrix Plus routers only) Display the state of the switching fabric topology for the SIB connection between the TX Matrix Plus router and the connected routers.

(T320, T640, T1600, and T4000 routers only) Display the state of the switching fabric topology for the connection between the Switch Interface Board (SIB) and the FPCs.

For PTX10008 devices, fabric ASIC value ranges from 0-2 and FPC numbering ranges from 0-7.

For PTX10016 devices, fabric ASIC ranges from 0-5 and FPC numbering ranges from 0-15.

(QFX Series switches) Display the input-output link topology.

lcc ***number*** (TX Matrix and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display the fabric topology state for a specified T640 router (line-card chassis) that is connected to a TX Matrix router. On a TX Matrix Plus router, display the fabric topology state for a specified router (line-card chassis) that is connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

scc (TX Matrix routers only) (Optional) Display the fabric topology state for the TX Matrix router (or switch-card chassis).

sfc ***number*** (TX Matrix Plus routers only) (Optional) Display the fabric topology for the switch-fabric chassis. Replace *number* with 0.

sib-slot (Optional) Display the fabric topology state for a specified SIB slot. Replace *sib-slot* with a value from 0 through 4. On a TX Matrix Plus router, replace *sib-slot* with a value from 0 through 15.

Required Privilege Level

view

Output Fields

Table 73 on page 1254 lists the output fields for the `show chassis fabric topology` command. Output fields are listed in the approximate order in which they appear.

Table 73: show chassis fabric topology Output Fields

Field Name	Field Description
`in-links`	Fabric topology for receive side links.
`out-links`	Fabric topology for transmit side links.

Table 73: show chassis fabric topology Output Fields *(Continued)*

Field Name	Field Description

state	State of the fabric link:
	• RESET—Link between the SIB and the FPC/DPC is powered down on purpose. This is done in all non-dual Packet Forwarding Engine–based boards.
	• UP—Link between the SIB and the FPC/DCP is up and running.
	• DOWN—Link between the SIB and the FPC/DCP is powered down.
	• FAULT—The SIB is in the alarmed state, in which the SIB's plane is not operational for one or more of the following reasons:
	  • On-board F-chip is not operational.
	  • Fiber-optic connector faults.
	  • FPC connector faults.
	  • SIB midplane connector faults.
	NOTE: The following state descriptions are applicable only to PTX Series Packet Transport Routers.
	• OK—The link between the SIB and the FPC is operational.
	• Down—The link between the SIB and the FPC is powered down.
	• Error—The CCL link between the SIB and FPC is not operational for one or more of the following reasons:
	  • FPC midplane connector failure.
	  • SIB midplane connector failure.
	  • CCL link CRC error.

Table 73: show chassis fabric topology Output Fields *(Continued)*

Out-Links: and In-Links (TX Matrix	State of the links from the F13 SIB to the LCC or vice-versa. Out-Links indicate Tx links. In-Links indicate an Rx link. The following additional fields are displayed for each SIB:

Plus router only)	• VCSEL Status—Optical (VCSEL channel) link status for the corresponding electrical (HSL2) link. The states include:
	  • OK—Optical signal power is good.
	  • Error—Internal error.
	  • LOS—Loss of Signal detected.
	  • High Cur—The Tx Bias-current is higher than threshold on this channel. This is applicable only to Tx Channels.
	  • Low Cur —The Tx Bias-current is lower than threshold on this channel. This is applicable only to Tx Channels.
	• HSL2 Channel—HSL2 is the electrical link used to connect ASICs to the in-link and out-link. The channel number corresponds to the link and varies based on the ASIC or configuration.

- HSL2 Status —The status of the HSL2 Channel. Includes the following states:
- Up—Channel is up.
- Down—Channel is down.
- Reset—Channel has been reset.
- Fault—Channel has faults.

The following is a representation of display output for links originating from the SIBs (LCC or SFC)

```
SF_[1|3]_port#_FB_[A-D](VCSEL#, fiber)
```

- SF_[1|3]—Name of the ASIC, with Fabric F1 or F3 mode.
- port#—HSL2 port number on the SF ASIC in the LCC.
- FB_[A-D]—via fiber bundle A, B, C or D.
- VCSEL#—VCSEL module number on SIB.
- fiber—Fiber channel number.

The following is a representation of display output for links originating from the SIBs (LCC or SFC)

```
SF_[1|3]_port#_FB_[A-D](VCSEL#, fiber)
```

- SF_[1|3]—Name of the ASIC, with Fabric F1 or F3 mode.
- port#—HSL2 port number on the SF ASIC in the LCC.
- FB_[A-D]—via fiber bundle A, B, C or D.
- VCSEL#—VCSEL module number on SIB.
- fiber—Fiber channel number.

The following is a sample output with description of the fields displayed in the output for Out-Links:

```
Out-Links:
=========
SF_30_13_FB_A(21,09) -> FPC7_B_SG(3,3,6)_FB_A(18,09)      OK       203     Up
```

- SF_30_13—Name of the ASIC, with Fabric F1 or F3 mode. In this case, 3 is the F3 direction and is used in the Tx path and 0 identifies the serial link on the SF chip (in this case, link goes to sf-3 chip number 0). You can also have F1 mode and Rx path instead.
- FB_A (21, 09)—Fiber bundle A, with VCSEL unit number 21 within the SIB, and channel number 9 within the unit number.
- FPC7_B_SG(3,3,6—FPC 7.with bottom Packet Forwarding Engine (T for top PFE and B for bottom PFE), SG ASIC, with number 3 and port number 3, with HSL2 link number with the SIB as 6.
- FB_A(18, 09)—Fiber Bundle, with VCSEL unit number 18 within the SIB, and VCSEL channel number 9 within the unit number.

The following is a representation of display output for links originating from the FPCs (In-Links)

```
FPC#_[T|B]_SG(ASIC#, port#, HSL2_bit)_FB_[A-D](VCSEL#, fiber)
```

- FPC#—FPC number with PFE (0 or 1).
- T—Top Packet Forwarding Engine.
- B—Bottom Packet Forwarding Engine.
- SG(ASIC#, port#, HSL2_bit)—SG ASIC information (ASIC 0-3, ASIC 0-5 (PTX10016),port 0-3, HSL2_bit 0-7).
- FB_[A-D]—via fiber bundle A, B, C or D.
- VCSEL#—VCSEL module number on SIB.
- fiber—Fiber channel number.

The following is a representation of display output for links originating from the FPCs (In-Links)

```
FPC#_[T|B]_SG(ASIC#, port#, HSL2_bit)_FB_[A-D](VCSEL#, fiber)
```

- FPC#—FPC number with PFE (0 or 1).
- T—Top Packet Forwarding Engine.
- B—Bottom Packet Forwarding Engine.
- SG(ASIC#, port#, HSL2_bit)—SG ASIC information (ASIC 0-3, ASIC 0-5 (PTX10016) port 0-3, HSL2_bit 0-7).
- FB_[A-D]—via fiber bundle A, B, C or D.

- VCSEL#—VCSEL module number on SIB.
- fiber—Fiber channel number.

The following is a sample output with description of the fields displayed in the output for In-Links:

```
In-Links :
========
FPC0_T_SG(0,0,0)_FB_D(04,11)  -> SF_10_00_FB_D(01,11)     OK       0       Up
```

- FPC0—FPC 0.
- T—Top Packet Forwarding Engine.
- SG (0, 0, 0)—SG ASIC with port number 0 and link 0.
- FB_D (04,11)—Fiber Bundle D with VCSEL 4, channel 11.
- SF_10—Indicates F1 mode chip number 0 and Rx path.
- SF_10_00_FB_D(01,11) —Indicates F1 mode chip number 0 and Rx path with port 0, fiber bundle D, with VCSEL 1, channel 11.

Out-links and In-links (TX Matrix Plus router with 3D SIBs only)	State of the links from the F13 SIB to the SFC/LCC or vice-versa. Out-Links indicate Tx links. In-Links indicate an Rx link. The following additional fields are displayed for each SIB:
	• Description of the fields displayed in the output for In-links and Out-links for SFC:
	
	`---------------------------------------------------------------------------`
	`In-links State Out-links State`
	`---------------------------------------------------------------------------`
	`CXP0_Evn->F13_SIB0_XF2,04_0 Up F13_SIB0_XF2,04_0->CXP0_Evn Up`
	
	• CXP0_Evn—CXP optics with type of port bits such as even or odd. In this case, it indicates CXP optics with even port bit number 0.
	• F13_SIB0—Name of the SFC data plane SIB with the SIB number. In this case, it indicates F13 SIB with number 0.
	• XF2,04_0—Name of the ASIC with port and subchannel number. In this case, it Indicates XF2 chip with port number 4 and subchannel number 0.
	• Description of the fields displayed in the output for In-links and Out-links for LCC:
	
	`---------------------------------------------------------------------------`
	`In-links State Out-links State`
	`---------------------------------------------------------------------------`
	`CXP0_Evn->LCC_SIB0_XF3,10_0 Up LCC_SIB0_XF3,10_0->CXP0_Evn Up`
	
	• CXP0_Evn—CXP optics with the type of port bits such as even or odd. In this case, it indicates CXP optics with even port bit number 0.
	• LCC_SIB0—LCC SIB number. In this case, it indicates LCC SIB with number 0.
	• XF3,10_0—Name of the ASIC with port and subchannel number. In this case, it Indicates XF3 with port number 10 and subchannel number 0.

Sample Output

show chassis fabric topology scc (TX Matrix Router)

```
user@host> show chassis fabric topology scc
scc-re1:
--------------------------------------------------------------------------------
fchip (mode)
in-links                                state         out-links
state
--------------------------------------------------------------------------------
Sib #0 :
---------
SIB0_F0 (F2 ):
LCC0_SIB-L0_F0,03->SIB-S0_F0,00     UP                                SIB-S0_F0,00->LCC0_SIB-
L0_F1,00  UP
LCC1_SIB-L0_F0,03->SIB-S0_F0,01     UP                                SIB-S0_F0,01->LCC1_SIB-
L0_F1,08  UP
LCC2_SIB-L0_F0,03->SIB-S0_F0,02     RESET                            SIB-S0_F0,02->LCC2_SIB-
L0_F1,08  UP
LCC3_SIB-L0_F0,03->SIB-S0_F0,03     RESET                            SIB-S0_F0,03->LCC3_SIB-
L0_F1,00  UP
LCC0_SIB-L0_F0,02->SIB-S0_F0,04  UP                                  SIB-S0_F0,04->LCC0_SIB-
L0_F1,01  UP
LCC1_SIB-L0_F0,02->SIB-S0_F0,05  UP                                  SIB-S0_F0,05->LCC1_SIB-
L0_F1,09  UP
LCC2_SIB-L0_F0,02->SIB-S0_F0,06  RESET                              SIB-S0_F0,06->LCC2_SIB-
L0_F1,09  UP
LCC3_SIB-L0_F0,02->SIB-S0_F0,07  RESET                              SIB-S0_F0,07->LCC3_SIB-
L0_F1,01  UP
LCC0_SIB-L0_F0,07->SIB-S0_F0,08  UP                                  SIB-S0_F0,08->LCC0_SIB-
L0_F1,04  UP
LCC1_SIB-L0_F0,07->SIB-S0_F0,09  UP                                  SIB-S0_F0,09->LCC1_SIB-
L0_F1,12  UP
LCC2_SIB-L0_F0,07->SIB-S0_F0,10  RESET                              SIB-S0_F0,10->LCC2_SIB-
L0_F1,12  UP
LCC3_SIB-L0_F0,07->SIB-S0_F0,11  RESET                              SIB-S0_F0,11->LCC3_SIB-
L0_F1,04  UP
LCC0_SIB-L0_F0,06->SIB-S0_F0,12  UP                                  SIB-S0_F0,12->LCC0_SIB-
L0_F1,05  UP
LCC1_SIB-L0_F0,06->SIB-S0_F0,13  UP                                  SIB-S0_F0,13->LCC1_SIB-
```

```
L0_F1,13  UP
LCC2_SIB-L0_F0,06->SIB-S0_F0,14  RESET                          SIB-S0_F0,14->LCC2_SIB-
L0_F1,13  UP
LCC3_SIB-L0_F0,06->SIB-S0_F0,15  RESET                          SIB-S0_F0,15->LCC3_SIB-
L0_F1,05  UP
SIB0_F1 (F2 ):
LCC0_SIB-L0_F0,11->SIB-S0_F1,00  UP                               SIB-S0_F1,00->LCC0_SIB-
L0_F1,08  UP
LCC1_SIB-L0_F0,11->SIB-S0_F1,01  UP                               SIB-S0_F1,01->LCC1_SIB-
L0_F1,00  UP
LCC2_SIB-L0_F0,11->SIB-S0_F1,02  RESET                          SIB-S0_F1,02->LCC2_SIB-
L0_F1,00  UP
LCC3_SIB-L0_F0,11->SIB-S0_F1,03  RESET                          SIB-S0_F1,03->LCC3_SIB-
L0_F1,08  UP
LCC0_SIB-L0_F0,10->SIB-S0_F1,04  UP                               SIB-S0_F1,04->LCC0_SIB-
L0_F1,09  UP
LCC1_SIB-L0_F0,10->SIB-S0_F1,05  UP                               SIB-S0_F1,05->LCC1_SIB-
L0_F1,01  UP
LCC2_SIB-L0_F0,10->SIB-S0_F1,06  RESET                          SIB-S0_F1,06->LCC2_SIB-
L0_F1,01  UP
LCC3_SIB-L0_F0,10->SIB-S0_F1,07  RESET                          SIB-S0_F1,07->LCC3_SIB-
L0_F1,09  UP
LCC0_SIB-L0_F0,15->SIB-S0_F1,08  UP                               SIB-S0_F1,08->LCC0_SIB-
L0_F1,12  UP
LCC1_SIB-L0_F0,15->SIB-S0_F1,09  UP                               SIB-S0_F1,09->LCC1_SIB-
L0_F1,04  UP
LCC2_SIB-L0_F0,15->SIB-S0_F1,10  RESET                          SIB-S0_F1,10->LCC2_SIB-
L0_F1,04  UP
LCC3_SIB-L0_F0,15->SIB-S0_F1,11  RESET                          SIB-S0_F1,11->LCC3_SIB-
L0_F1,12  UP
LCC0_SIB-L0_F0,14->SIB-S0_F1,12  UP                               SIB-S0_F1,12->LCC0_SIB-
L0_F1,13  UP
LCC1_SIB-L0_F0,14->SIB-S0_F1,13  UP                               SIB-S0_F1,13->LCC1_SIB-
L0_F1,05  UP
LCC2_SIB-L0_F0,14->SIB-S0_F1,14  RESET                           SIB-S0_F1,14->LCC2_SIB-
L0_F1,05  UP
LCC3_SIB-L0_F0,14->SIB-S0_F1,15  RESET                           SIB-S0_F1,15->LCC3_SIB-
L0_F1,13  UP
SIB0_F2 (F2 ):
LCC3_SIB-L0_F0,13->SIB-S0_F2,00         RESET                   SIB-S0_F2,00->LCC3_SIB-
L0_F1,14  UP
LCC2_SIB-L0_F0,13->SIB-S0_F2,01  RESET                           SIB-S0_F2,01->LCC2_SIB-
L0_F1,06  UP
```

```
LCC1_SIB-L0_F0,13->SIB-S0_F2,02  UP                                SIB-S0_F2,02->LCC1_SIB-
L0_F1,06  UP
LCC0_SIB-L0_F0,13->SIB-S0_F2,03  UP                                SIB-S0_F2,03->LCC0_SIB-
L0_F1,14  UP
LCC3_SIB-L0_F0,12->SIB-S0_F2,04  RESET                            SIB-S0_F2,04->LCC3_SIB-
L0_F1,15  UP
LCC2_SIB-L0_F0,12->SIB-S0_F2,05  RESET                           SIB-S0_F2,05->LCC2_SIB-
L0_F1,07  UP
LCC1_SIB-L0_F0,12->SIB-S0_F2,06  UP                                SIB-S0_F2,06->LCC1_SIB-
L0_F1,07  UP
LCC0_SIB-L0_F0,12->SIB-S0_F2,07  UP                                SIB-S0_F2,07->LCC0_SIB-
L0_F1,15  UP
LCC3_SIB-L0_F0,09->SIB-S0_F2,08  RESET                            SIB-S0_F2,08->LCC3_SIB-
L0_F1,10  UP
LCC2_SIB-L0_F0,09->SIB-S0_F2,09  RESET                            SIB-S0_F2,09->LCC2_SIB-
L0_F1,02  UP
LCC1_SIB-L0_F0,09->SIB-S0_F2,10  UP                                SIB-S0_F2,10->LCC1_SIB-
L0_F1,02  UP
LCC0_SIB-L0_F0,09->SIB-S0_F2,11  UP                                SIB-S0_F2,11->LCC0_SIB-
L0_F1,10  UP
LCC3_SIB-L0_F0,08->SIB-S0_F2,12  RESET                            SIB-S0_F2,12->LCC3_SIB-
L0_F1,11  UP
LCC2_SIB-L0_F0,08->SIB-S0_F2,13  RESET                            SIB-S0_F2,13->LCC2_SIB-
L0_F1,03  UP
LCC1_SIB-L0_F0,08->SIB-S0_F2,14     UP                                SIB-S0_F2,14->LCC1_SIB-
L0_F1,03  UP
LCC0_SIB-L0_F0,08->SIB-S0_F2,15  UP                                SIB-S0_F2,15->LCC0_SIB-
L0_F1,11  UP
SIB0_F3 (F2 ):
LCC3_SIB-L0_F0,05->SIB-S0_F3,00  RESET                            SIB-S0_F3,00->LCC3_SIB-
L0_F1,06  UP
LCC2_SIB-L0_F0,05->SIB-S0_F3,01  RESET                            SIB-S0_F3,01->LCC2_SIB-
L0_F1,14  UP
LCC1_SIB-L0_F0,05->SIB-S0_F3,02  UP                                SIB-S0_F3,02->LCC1_SIB-
L0_F1,14  UP
LCC0_SIB-L0_F0,05->SIB-S0_F3,03  UP                                SIB-S0_F3,03->LCC0_SIB-
L0_F1,06  UP
LCC3_SIB-L0_F0,04->SIB-S0_F3,04  RESET                            SIB-S0_F3,04->LCC3_SIB-
L0_F1,07  UP
LCC2_SIB-L0_F0,04->SIB-S0_F3,05  RESET                            SIB-S0_F3,05->LCC2_SIB-
L0_F1,15  UP
LCC1_SIB-L0_F0,04->SIB-S0_F3,06  UP                                SIB-S0_F3,06->LCC1_SIB-
L0_F1,15  UP
```

```
LCC0_SIB-L0_F0,04->SIB-S0_F3,07  UP                                  SIB-S0_F3,07->LCC0_SIB-
L0_F1,07  UP
LCC3_SIB-L0_F0,01->SIB-S0_F3,08  RESET                              SIB-S0_F3,08->LCC3_SIB-
L0_F1,02  UP
LCC2_SIB-L0_F0,01->SIB-S0_F3,09  RESET                              SIB-S0_F3,09->LCC2_SIB-
L0_F1,10  UP
LCC1_SIB-L0_F0,01->SIB-S0_F3,10  UP                                  SIB-S0_F3,10->LCC1_SIB-
L0_F1,10  UP
LCC0_SIB-L0_F0,01->SIB-S0_F3,11  UP                                  SIB-S0_F3,11->LCC0_SIB-
L0_F1,02  UP
LCC3_SIB-L0_F0,00->SIB-S0_F3,12  RESET                              SIB-S0_F3,12->LCC3_SIB-
L0_F1,03  UP
LCC2_SIB-L0_F0,00->SIB-S0_F3,13  RESET                              SIB-S0_F3,13->LCC2_SIB-
L0_F1,11  UP
LCC1_SIB-L0_F0,00->SIB-S0_F3,14  UP                                  SIB-S0_F3,14->LCC1_SIB-
L0_F1,11  UP
LCC0_SIB-L0_F0,00->SIB-S0_F3,15  UP                                  SIB-S0_F3,15->LCC0_SIB-
L0_F1,03  UP
Sib #1 :
---------
SIB1_F0 (F2 ):
LCC0_SIB-L1_F0,03->SIB-S1_F0,00 RESET                             SIB-S1_F0,00->LCC0_SIB-
L1_F1,00  UP
LCC1_SIB-L1_F0,03->SIB-S1_F0,01 RESET                             SIB-S1_F0,01->LCC1_SIB-
L1_F1,08  UP
LCC2_SIB-L1_F0,03->SIB-S1_F0,02 RESET                             SIB-S1_F0,02->LCC2_SIB-
L1_F1,08  UP
LCC3_SIB-L1_F0,03->SIB-S1_F0,03 RESET                             SIB-S1_F0,03->LCC3_SIB-
L1_F1,00  UP
LCC0_SIB-L1_F0,02->SIB-S1_F0,04 RESET                             SIB-S1_F0,04->LCC0_SIB-
L1_F1,01  UP
LCC1_SIB-L1_F0,02->SIB-S1_F0,05 RESET                             SIB-S1_F0,05->LCC1_SIB-
L1_F1,09  UP
LCC2_SIB-L1_F0,02->SIB-S1_F0,06 RESET                             SIB-S1_F0,06->LCC2_SIB-
L1_F1,09  UP
LCC3_SIB-L1_F0,02->SIB-S1_F0,07 RESET                             SIB-S1_F0,07->LCC3_SIB-
L1_F1,01  UP
LCC0_SIB-L1_F0,07->SIB-S1_F0,08 RESET                             SIB-S1_F0,08->LCC0_SIB-
L1_F1,04  UP
LCC1_SIB-L1_F0,07->SIB-S1_F0,09 RESET                             SIB-S1_F0,09->LCC1_SIB-
L1_F1,12  UP
LCC2_SIB-L1_F0,07->SIB-S1_F0,10 RESET                             SIB-S1_F0,10->LCC2_SIB-
L1_F1,12     UP
```

```
LCC3_SIB-L1_F0,07->SIB-S1_F0,11 RESET                    SIB-S1_F0,11->LCC3_SIB-
L1_F1,04     UP
LCC0_SIB-L1_F0,06->SIB-S1_F0,12 RESET                    SIB-S1_F0,12->LCC0_SIB-
L1_F1,05  UP
LCC1_SIB-L1_F0,06->SIB-S1_F0,13 RESET                    SIB-S1_F0,13->LCC1_SIB-
L1_F1,13  UP
LCC2_SIB-L1_F0,06->SIB-S1_F0,14 RESET                    SIB-S1_F0,14->LCC2_SIB-
L1_F1,13  UP
LCC3_SIB-L1_F0,06->SIB-S1_F0,15 RESET                    SIB-S1_F0,15->LCC3_SIB-
L1_F1,05  UP
SIB1_F1 (F2 ):
LCC0_SIB-L1_F0,11->SIB-S1_F1,00 RESET                    SIB-S1_F1,00->LCC0_SIB-
L1_F1,08  UP
LCC1_SIB-L1_F0,11->SIB-S1_F1,01 RESET                    SIB-S1_F1,01->LCC1_SIB-
L1_F1,00  UP
LCC2_SIB-L1_F0,11->SIB-S1_F1,02 RESET                    SIB-S1_F1,02->LCC2_SIB-
L1_F1,00  UP
LCC3_SIB-L1_F0,11->SIB-S1_F1,03 RESET                    SIB-S1_F1,03->LCC3_SIB-
L1_F1,08  UP
LCC0_SIB-L1_F0,10->SIB-S1_F1,04 RESET                    SIB-S1_F1,04->LCC0_SIB-
L1_F1,09     UP
LCC1_SIB-L1_F0,10->SIB-S1_F1,05 RESET                       SIB-S1_F1,05->LCC1_SIB-
L1_F1,01  UP
LCC2_SIB-L1_F0,10->SIB-S1_F1,06 RESET                    SIB-S1_F1,06->LCC2_SIB-
L1_F1,01  UP
LCC3_SIB-L1_F0,10->SIB-S1_F1,07 RESET                    SIB-S1_F1,07->LCC3_SIB-
L1_F1,09  UP
LCC0_SIB-L1_F0,15->SIB-S1_F1,08 RESET                    SIB-S1_F1,08->LCC0_SIB-
L1_F1,12  UP
LCC1_SIB-L1_F0,15->SIB-S1_F1,09 RESET                    SIB-S1_F1,09->LCC1_SIB-
L1_F1,04  UP
LCC2_SIB-L1_F0,15->SIB-S1_F1,10 RESET                    SIB-S1_F1,10->LCC2_SIB-
L1_F1,04  UP
LCC3_SIB-L1_F0,15->SIB-S1_F1,11 RESET                    -S1_F1,11->LCC3_SIB-
L1_F1,12,05  UP
LCC0_SIB-L1_F0,14->SIB-S1_F1,12 RESET                    SIB-S1_F1,12->LCC0_SIB-
L1_F1,13  UP
LCC1_SIB-L1_F0,14->SIB-S1_F1,13 RESET                    SIB-S1_F1,13->LCC1_SIB-
L1_F1,05  UP
LCC2_SIB-L1_F0,14->SIB-S1_F1,14 RESET                    SIB-S1_F1,14->LCC2_SIB-
L1_F1,05  UP
```

show chassis fabric topology lcc

```
user@host> show chassis fabric topology lcc
0
lcc0-re0:
--------------------------------------------------------------------------
   fchip (mode)
in-links                state         out-links               state
--------------------------------------------------------------------
Sib #2 :
---------
SIB2_F0  (F1 ):
FPC0_T->SIB-L2_F0,00    DOWN       SIB-L2_F0,00->SIB-S2_F3,15 DOWN
FPC0_B->SIB-L2_F0,01    UP         SIB-L2_F0,01->SIB-S2_F3,11 DOWN
FPC1_T->SIB-L2_F0,02    DOWN       SIB-L2_F0,02->SIB-S2_F0,04 DOWN
FPC1_B->SIB-L2_F0,03    DOWN       SIB-L2_F0,03->SIB-S2_F0,00 DOWN
FPC2_T->SIB-L2_F0,04    DOWN       SIB-L2_F0,04->SIB-S2_F3,07 DOWN
FPC2_B->SIB-L2_F0,05    DOWN       SIB-L2_F0,05->SIB-S2_F3,03 DOWN
FPC3_T->SIB-L2_F0,06    DOWN       SIB-L2_F0,06->SIB-S2_F0,12 DOWN
FPC3_B->SIB-L2_F0,07    DOWN       SIB-L2_F0,07->SIB-S2_F0,08 DOWN
FPC4_T->SIB-L2_F0,08    DOWN       SIB-L2_F0,08->SIB-S2_F2,15 DOWN
FPC4_B->SIB-L2_F0,09    DOWN       SIB-L2_F0,09->SIB-S2_F2,11 DOWN
FPC5_T->SIB-L2_F0,10    DOWN       SIB-L2_F0,10->SIB-S2_F1,04 DOWN
FPC5_B->SIB-L2_F0,11    DOWN       SIB-L2_F0,11->SIB-S2_F1,00 DOWN
FPC6_T->SIB-L2_F0,12    DOWN       SIB-L2_F0,12->SIB-S2_F2,07 DOWN
FPC6_B->SIB-L2_F0,13    UP         SIB-L2_F0,13->SIB-S2_F2,03 DOWN
FPC7_T->SIB-L2_F0,14    DOWN       SIB-L2_F0,14->SIB-S2_F1,12 DOWN
FPC7_B->SIB-L2_F0,15    DOWN       SIB-L2_F0,15->SIB-S2_F1,08 DOWN
SIB2_F1  (F3 ):
SIB-S2_F0,00->SIB-L2_F1,00 UP      SIB-L2_F1,00->FPC7_B    DOWN
SIB-S2_F0,04->SIB-L2_F1,01 UP      SIB-L2_F1,01->FPC7_T    DOWN
SIB-S2_F3,11->SIB-L2_F1,02 UP      SIB-L2_F1,02->FPC6_B    DOWN
SIB-S2_F3,15->SIB-L2_F1,03 UP      SIB-L2_F1,03->FPC6_T    DOWN
SIB-S2_F0,08->SIB-L2_F1,04 UP      SIB-L2_F1,04->FPC5_B    DOWN
SIB-S2_F0,12->SIB-L2_F1,05 UP      SIB-L2_F1,05->FPC5_T    DOWN
SIB-S2_F3,03->SIB-L2_F1,06 UP      SIB-L2_F1,06->FPC4_B    DOWN
SIB-S2_F3,07->SIB-L2_F1,07 UP      SIB-L2_F1,07->FPC4_T    DOWN
SIB-S2_F1,00->SIB-L2_F1,08 UP      SIB-L2_F1,08->FPC3_B    DOWN
SIB-S2_F1,04->SIB-L2_F1,09 UP      SIB-L2_F1,09->FPC3_T    DOWN
SIB-S2_F2,11->SIB-L2_F1,10 UP      SIB-L2_F1,10->FPC2_B    DOWN
SIB-S2_F2,15->SIB-L2_F1,11 UP      SIB-L2_F1,11->FPC2_T    DOWN
SIB-S2_F1,08->SIB-L2_F1,12 UP      SIB-L2_F1,12->FPC1_B    DOWN
```

```
SIB-S2_F1,12->SIB-L2_F1,13 UP      SIB-L2_F1,13->FPC1_T    DOWN
SIB-S2_F2,03->SIB-L2_F1,14 UP      SIB-L2_F1,14->FPC0_B    DOWN
SIB-S2_F2,07->SIB-L2_F1,15 UP      SIB-L2_F1,15->FPC0_T    DOWN
Sib #4 :
---------
SIB4_F0  (F1 ):
FPC0_T->SIB-L4_F0,00    RESET      SIB-L4_F0,00->SIB-S4_F3,15 UP
FPC0_B->SIB-L4_F0,01    UP         SIB-L4_F0,01->SIB-S4_F3,11 UP
FPC1_T->SIB-L4_F0,02    RESET      SIB-L4_F0,02->SIB-S4_F0,04 UP
FPC1_B->SIB-L4_F0,03    RESET      SIB-L4_F0,03->SIB-S4_F0,00 UP
FPC2_T->SIB-L4_F0,04    RESET      SIB-L4_F0,04->SIB-S4_F3,07 UP
FPC2_B->SIB-L4_F0,05    RESET      SIB-L4_F0,05->SIB-S4_F3,03 UP
FPC3_T->SIB-L4_F0,06    RESET      SIB-L4_F0,06->SIB-S4_F0,12 UP
FPC3_B->SIB-L4_F0,07    RESET      SIB-L4_F0,07->SIB-S4_F0,08 UP
FPC4_T->SIB-L4_F0,08    RESET      SIB-L4_F0,08->SIB-S4_F2,15 UP
FPC4_B->SIB-L4_F0,09    RESET      SIB-L4_F0,09->SIB-S4_F2,11 UP
FPC5_T->SIB-L4_F0,10    RESET      SIB-L4_F0,10->SIB-S4_F1,04 UP
FPC5_B->SIB-L4_F0,11    RESET      SIB-L4_F0,11->SIB-S4_F1,00 UP
FPC6_T->SIB-L4_F0,12    RESET      SIB-L4_F0,12->SIB-S4_F2,07 UP
FPC6_B->SIB-L4_F0,13    UP         SIB-L4_F0,13->SIB-S4_F2,03 UP
FPC7_T->SIB-L4_F0,14    RESET      SIB-L4_F0,14->SIB-S4_F1,12 UP
FPC7_B->SIB-L4_F0,15    RESET      SIB-L4_F0,15->SIB-S4_F1,08 UP
SIB4_F1  (F3 ):
SIB-S4_F0,00->SIB-L4_F1,00 UP      SIB-L4_F1,00->FPC7_B    UP
SIB-S4_F0,04->SIB-L4_F1,01 UP      SIB-L4_F1,01->FPC7_T    UP
SIB-S4_F3,11->SIB-L4_F1,02 UP      SIB-L4_F1,02->FPC6_B    UP
SIB-S4_F3,15->SIB-L4_F1,03 UP      SIB-L4_F1,03->FPC6_T    UP
SIB-S4_F0,08->SIB-L4_F1,04 UP      SIB-L4_F1,04->FPC5_B    UP
SIB-S4_F0,12->SIB-L4_F1,05 UP      SIB-L4_F1,05->FPC5_T    UP
SIB-S4_F3,03->SIB-L4_F1,06 UP      SIB-L4_F1,06->FPC4_B    UP
SIB-S4_F3,07->SIB-L4_F1,07 UP      SIB-L4_F1,07->FPC4_T    UP
SIB-S4_F1,00->SIB-L4_F1,08 UP      SIB-L4_F1,08->FPC3_B    UP
SIB-S4_F1,04->SIB-L4_F1,09 UP      SIB-L4_F1,09->FPC3_T    UP
SIB-S4_F2,11->SIB-L4_F1,10 UP      SIB-L4_F1,10->FPC2_B    UP
SIB-S4_F2,15->SIB-L4_F1,11 UP      SIB-L4_F1,11->FPC2_T    UP
SIB-S4_F1,08->SIB-L4_F1,12 UP      SIB-L4_F1,12->FPC1_B    UP
SIB-S4_F1,12->SIB-L4_F1,13 UP      SIB-L4_F1,13->FPC1_T    UP
SIB-S4_F2,03->SIB-L4_F1,14 UP      SIB-L4_F1,14->FPC0_B    UP
SIB-S4_F2,07->SIB-L4_F1,15 UP      SIB-L4_F1,15->FPC0_T    UP
```

show chassis fabric topology (TX Matrix Plus Router)

```
user@host> show chassis fabric topology
sfc0-re0:
--------------------------------------------------------------------------

F13_SIB0
=========

Out-Links:
=========
SFC0_F13_SIB_00      -> LCC00_ST_SIB_L00                VCSEL    HSL2    HSL2
                                                        Status   Channel Status
================================================================================
SF_30_00_FB_D(04,11) -> FPC0_T_SG(0,0,0)_FB_D(01,11)    OK       112     Up
SF_30_00_FB_D(04,10) -> FPC0_T_SG(0,0,1)_FB_D(01,10)    OK       112     Up
SF_30_00_FB_D(04,09) -> FPC0_T_SG(0,0,2)_FB_D(01,09)    OK       112     Up
SF_30_00_FB_D(04,08) -> FPC0_T_SG(0,0,3)_FB_D(01,08)    OK       112     Up
SF_30_00_FB_D(04,07) -> FPC0_T_SG(0,0,4)_FB_D(01,07)    OK       112     Up
SF_30_00_FB_D(04,06) -> FPC0_T_SG(0,0,5)_FB_D(01,06)    OK       112     Up
SF_30_00_FB_D(04,05) -> FPC0_T_SG(0,0,6)_FB_D(01,05)    OK       112     Up
SF_30_00_FB_D(04,04) -> FPC0_T_SG(0,0,7)_FB_D(01,04)    OK       112     Up
SF_30_01_FB_B(16,11) -> FPC4_T_SG(2,0,0)_FB_B(13,11)    OK       119     Up
SF_30_01_FB_B(16,10) -> FPC4_T_SG(2,0,1)_FB_B(13,10)    OK       119     Up
SF_30_01_FB_B(16,09) -> FPC4_T_SG(2,0,2)_FB_B(13,09)    OK       119     Up
SF_30_01_FB_B(16,08) -> FPC4_T_SG(2,0,3)_FB_B(13,08)    OK       119     Up
SF_30_01_FB_B(16,07) -> FPC4_T_SG(2,0,4)_FB_B(13,07)    OK       119     Up
SF_30_01_FB_B(16,06) -> FPC4_T_SG(2,0,5)_FB_B(13,06)    OK       119     Up
SF_30_01_FB_B(16,05) -> FPC4_T_SG(2,0,6)_FB_B(13,05)    OK       119     Up
SF_30_01_FB_B(16,04) -> FPC4_T_SG(2,0,7)_FB_B(13,04)    OK       119     Up
SF_30_02_FB_D(05,08) -> FPC1_T_SG(0,2,0)_FB_D(02,08)    OK       126     Up
SF_30_02_FB_D(05,07) -> FPC1_T_SG(0,2,1)_FB_D(02,07)    OK       126     Up
SF_30_02_FB_D(05,06) -> FPC1_T_SG(0,2,2)_FB_D(02,06)    OK       126     Up
SF_30_02_FB_D(05,05) -> FPC1_T_SG(0,2,3)_FB_D(02,05)    OK       126     Up
SF_30_02_FB_D(05,03) -> FPC1_T_SG(0,2,4)_FB_D(02,03)    OK       126     Up
SF_30_02_FB_D(05,02) -> FPC1_T_SG(0,2,5)_FB_D(02,02)    OK       126     Up
SF_30_02_FB_D(05,01) -> FPC1_T_SG(0,2,6)_FB_D(02,01)    OK       126     Up
SF_30_02_FB_D(05,00) -> FPC1_T_SG(0,2,7)_FB_D(02,00)    OK       126     Up
SF_30_03_FB_B(17,08) -> FPC5_T_SG(2,2,0)_FB_B(14,08)    OK       133     Up
SF_30_03_FB_B(17,07) -> FPC5_T_SG(2,2,1)_FB_B(14,07)    OK       133     Up
SF_30_03_FB_B(17,06) -> FPC5_T_SG(2,2,2)_FB_B(14,06)    OK       133     Up
SF_30_03_FB_B(17,05) -> FPC5_T_SG(2,2,3)_FB_B(14,05)    OK       133     Up
```

```
SF_30_03_FB_B(17,03) -> FPC5_T_SG(2,2,4)_FB_B(14,03)     OK        133     Up
SF_30_03_FB_B(17,02) -> FPC5_T_SG(2,2,5)_FB_B(14,02)     OK        133     Up
SF_30_03_FB_B(17,01) -> FPC5_T_SG(2,2,6)_FB_B(14,01)     OK        133     Up
SF_30_03_FB_B(17,00) -> FPC5_T_SG(2,2,7)_FB_B(14,00)     OK        133     Up
SF_30_04_FB_C(10,11) -> FPC2_T_SG(1,0,0)_FB_C(07,11)     OK        140     Up
SF_30_04_FB_C(10,10) -> FPC2_T_SG(1,0,1)_FB_C(07,10)     OK        140     Up
SF_30_04_FB_C(10,09) -> FPC2_T_SG(1,0,2)_FB_C(07,09)     OK        140     Up
SF_30_04_FB_C(10,08) -> FPC2_T_SG(1,0,3)_FB_C(07,08)     OK        140     Up
SF_30_04_FB_C(10,07) -> FPC2_T_SG(1,0,4)_FB_C(07,07)     OK        140     Up
SF_30_04_FB_C(10,06) -> FPC2_T_SG(1,0,5)_FB_C(07,06)     OK        140     Up
SF_30_04_FB_C(10,05) -> FPC2_T_SG(1,0,6)_FB_C(07,05)     OK        140     Up
SF_30_04_FB_C(10,04) -> FPC2_T_SG(1,0,7)_FB_C(07,04)     OK        140     Up
SF_30_05_FB_A(22,11) -> FPC6_T_SG(3,0,0)_FB_A(19,11)     OK        147     Up
SF_30_05_FB_A(22,10) -> FPC6_T_SG(3,0,1)_FB_A(19,10)     OK        147     Up
SF_30_05_FB_A(22,09) -> FPC6_T_SG(3,0,2)_FB_A(19,09)     OK        147     Up
SF_30_05_FB_A(22,08) -> FPC6_T_SG(3,0,3)_FB_A(19,08)     OK        147     Up
SF_30_05_FB_A(22,07) -> FPC6_T_SG(3,0,4)_FB_A(19,07)     OK        147     Up
SF_30_05_FB_A(22,06) -> FPC6_T_SG(3,0,5)_FB_A(19,06)     OK        147     Up
SF_30_05_FB_A(22,05) -> FPC6_T_SG(3,0,6)_FB_A(19,05)     OK        147     Up
SF_30_05_FB_A(22,04) -> FPC6_T_SG(3,0,7)_FB_A(19,04)     OK        147     Up
SF_30_06_FB_C(11,08) -> FPC3_T_SG(1,2,0)_FB_C(08,08)     OK        154     Up
SF_30_06_FB_C(11,07) -> FPC3_T_SG(1,2,1)_FB_C(08,07)     OK        154     Up
SF_30_06_FB_C(11,06) -> FPC3_T_SG(1,2,2)_FB_C(08,06)     OK        154     Up
SF_30_06_FB_C(11,05) -> FPC3_T_SG(1,2,3)_FB_C(08,05)     OK        154     Up
SF_30_06_FB_C(11,03) -> FPC3_T_SG(1,2,4)_FB_C(08,03)     OK        154     Up
SF_30_06_FB_C(11,02) -> FPC3_T_SG(1,2,5)_FB_C(08,02)     OK        154     Up
SF_30_06_FB_C(11,01) -> FPC3_T_SG(1,2,6)_FB_C(08,01)     OK        154     Up
SF_30_06_FB_C(11,00) -> FPC3_T_SG(1,2,7)_FB_C(08,00)     OK        154     Up
…
```

show chassis fabric topology sfc (TX Matrix Plus Router)

```
user@host> show chassis fabric topology sfc 0
sfc0-re0:
--------------------------------------------------------------------------

F13_SIB0
=========

Out-Links:
=========
```

```
SFC0_F13_SIB_00      -> LCC00_ST_SIB_L00                VCSEL    HSL2    HSL2
                                                        Status   Channel Status
================================================================================
SF_30_00_FB_D(04,11) -> FPC0_T_SG(0,0,0)_FB_D(01,11)    OK       112     Up
SF_30_00_FB_D(04,10) -> FPC0_T_SG(0,0,1)_FB_D(01,10)    OK       112     Up
SF_30_00_FB_D(04,09) -> FPC0_T_SG(0,0,2)_FB_D(01,09)    OK       112     Up
SF_30_00_FB_D(04,08) -> FPC0_T_SG(0,0,3)_FB_D(01,08)    OK       112     Up
SF_30_00_FB_D(04,07) -> FPC0_T_SG(0,0,4)_FB_D(01,07)    OK       112     Up
SF_30_00_FB_D(04,06) -> FPC0_T_SG(0,0,5)_FB_D(01,06)    OK       112     Up
SF_30_00_FB_D(04,05) -> FPC0_T_SG(0,0,6)_FB_D(01,05)    OK       112     Up
SF_30_00_FB_D(04,04) -> FPC0_T_SG(0,0,7)_FB_D(01,04)    OK       112     Up
SF_30_01_FB_B(16,11) -> FPC4_T_SG(2,0,0)_FB_B(13,11)    OK       119     Up
SF_30_01_FB_B(16,10) -> FPC4_T_SG(2,0,1)_FB_B(13,10)    OK       119     Up
SF_30_01_FB_B(16,09) -> FPC4_T_SG(2,0,2)_FB_B(13,09)    OK       119     Up
SF_30_01_FB_B(16,08) -> FPC4_T_SG(2,0,3)_FB_B(13,08)    OK       119     Up
SF_30_01_FB_B(16,07) -> FPC4_T_SG(2,0,4)_FB_B(13,07)    OK       119     Up
SF_30_01_FB_B(16,06) -> FPC4_T_SG(2,0,5)_FB_B(13,06)    OK       119     Up
SF_30_01_FB_B(16,05) -> FPC4_T_SG(2,0,6)_FB_B(13,05)    OK       119     Up
SF_30_01_FB_B(16,04) -> FPC4_T_SG(2,0,7)_FB_B(13,04)    OK       119     Up
SF_30_02_FB_D(05,08) -> FPC1_T_SG(0,2,0)_FB_D(02,08)    OK       126     Up
SF_30_02_FB_D(05,07) -> FPC1_T_SG(0,2,1)_FB_D(02,07)    OK       126     Up
SF_30_02_FB_D(05,06) -> FPC1_T_SG(0,2,2)_FB_D(02,06)    OK       126     Up
SF_30_02_FB_D(05,05) -> FPC1_T_SG(0,2,3)_FB_D(02,05)    OK       126     Up
SF_30_02_FB_D(05,03) -> FPC1_T_SG(0,2,4)_FB_D(02,03)    OK       126     Up
SF_30_02_FB_D(05,02) -> FPC1_T_SG(0,2,5)_FB_D(02,02)    OK       126     Up
SF_30_02_FB_D(05,01) -> FPC1_T_SG(0,2,6)_FB_D(02,01)    OK       126     Up
SF_30_02_FB_D(05,00) -> FPC1_T_SG(0,2,7)_FB_D(02,00)    OK       126     Up
SF_30_03_FB_B(17,08) -> FPC5_T_SG(2,2,0)_FB_B(14,08)    OK       133     Up
SF_30_03_FB_B(17,07) -> FPC5_T_SG(2,2,1)_FB_B(14,07)    OK       133     Up
SF_30_03_FB_B(17,06) -> FPC5_T_SG(2,2,2)_FB_B(14,06)    OK       133     Up
SF_30_03_FB_B(17,05) -> FPC5_T_SG(2,2,3)_FB_B(14,05)    OK       133     Up
SF_30_03_FB_B(17,03) -> FPC5_T_SG(2,2,4)_FB_B(14,03)    OK       133     Up
SF_30_03_FB_B(17,02) -> FPC5_T_SG(2,2,5)_FB_B(14,02)    OK       133     Up
SF_30_03_FB_B(17,01) -> FPC5_T_SG(2,2,6)_FB_B(14,01)    OK       133     Up
SF_30_03_FB_B(17,00) -> FPC5_T_SG(2,2,7)_FB_B(14,00)    OK       133     Up
SF_30_04_FB_C(10,11) -> FPC2_T_SG(1,0,0)_FB_C(07,11)    OK       140     Up
SF_30_04_FB_C(10,10) -> FPC2_T_SG(1,0,1)_FB_C(07,10)    OK       140     Up
SF_30_04_FB_C(10,09) -> FPC2_T_SG(1,0,2)_FB_C(07,09)    OK       140     Up
SF_30_04_FB_C(10,08) -> FPC2_T_SG(1,0,3)_FB_C(07,08)    OK       140     Up
SF_30_04_FB_C(10,07) -> FPC2_T_SG(1,0,4)_FB_C(07,07)    OK       140     Up
SF_30_04_FB_C(10,06) -> FPC2_T_SG(1,0,5)_FB_C(07,06)    OK       140     Up
SF_30_04_FB_C(10,05) -> FPC2_T_SG(1,0,6)_FB_C(07,05)    OK       140     Up
SF_30_04_FB_C(10,04) -> FPC2_T_SG(1,0,7)_FB_C(07,04)    OK       140     Up
```

```
SF_30_05_FB_A(22,11) -> FPC6_T_SG(3,0,0)_FB_A(19,11)     OK        147     Up
SF_30_05_FB_A(22,10) -> FPC6_T_SG(3,0,1)_FB_A(19,10)     OK        147     Up
SF_30_05_FB_A(22,09) -> FPC6_T_SG(3,0,2)_FB_A(19,09)     OK        147     Up
SF_30_05_FB_A(22,08) -> FPC6_T_SG(3,0,3)_FB_A(19,08)     OK        147     Up
SF_30_05_FB_A(22,07) -> FPC6_T_SG(3,0,4)_FB_A(19,07)     OK        147     Up
SF_30_05_FB_A(22,06) -> FPC6_T_SG(3,0,5)_FB_A(19,06)     OK        147     Up
SF_30_05_FB_A(22,05) -> FPC6_T_SG(3,0,6)_FB_A(19,05)     OK        147     Up
SF_30_05_FB_A(22,04) -> FPC6_T_SG(3,0,7)_FB_A(19,04)     OK        147     Up
SF_30_06_FB_C(11,08) -> FPC3_T_SG(1,2,0)_FB_C(08,08)     OK        154     Up
SF_30_06_FB_C(11,07) -> FPC3_T_SG(1,2,1)_FB_C(08,07)     OK        154     Up
SF_30_06_FB_C(11,06) -> FPC3_T_SG(1,2,2)_FB_C(08,06)     OK        154     Up
SF_30_06_FB_C(11,05) -> FPC3_T_SG(1,2,3)_FB_C(08,05)     OK        154     Up
SF_30_06_FB_C(11,03) -> FPC3_T_SG(1,2,4)_FB_C(08,03)     OK        154     Up
SF_30_06_FB_C(11,02) -> FPC3_T_SG(1,2,5)_FB_C(08,02)     OK        154     Up
SF_30_06_FB_C(11,01) -> FPC3_T_SG(1,2,6)_FB_C(08,01)     OK        154     Up
SF_30_06_FB_C(11,00) -> FPC3_T_SG(1,2,7)_FB_C(08,00)     OK        154     Up
…
```

show chassis fabric topology lcc (TX Matrix Plus Router)

```
user@host> show chassis fabric topology lcc 0
lcc0-re0:
--------------------------------------------------------------------------

SIB0
=========

Out-Links:
=========
LCC00_ST_SIB_L00             -> SFC0_F13_SIB_00          VCSEL    HSL2    HSL2
                                                         Status   Channel Status
==========================================================================================
FPC0_T_SG(0,0,0)_FB_D(04,11) -> SF_10_00_FB_D(01,11)     OK        12      Up
FPC0_T_SG(0,0,1)_FB_D(04,10) -> SF_10_00_FB_D(01,10)     OK        12      Up
FPC0_T_SG(0,0,2)_FB_D(04,09) -> SF_10_00_FB_D(01,09)     OK        12      Up
FPC0_T_SG(0,0,3)_FB_D(04,08) -> SF_10_00_FB_D(01,08)     OK        12      Up
FPC0_T_SG(0,0,4)_FB_D(04,07) -> SF_10_00_FB_D(01,07)     OK        12      Up
FPC0_T_SG(0,0,5)_FB_D(04,06) -> SF_10_00_FB_D(01,06)     OK        12      Up
FPC0_T_SG(0,0,6)_FB_D(04,05) -> SF_10_00_FB_D(01,05)     OK        12      Up
FPC0_T_SG(0,0,7)_FB_D(04,04) -> SF_10_00_FB_D(01,04)     OK        12      Up
FPC0_B_SG(0,1,0)_FB_D(03,07) -> SF_10_10_FB_D(00,07)     OK        15      Up
```

```
FPC0_B_SG(0,1,1)_FB_D(03,06) -> SF_10_10_FB_D(00,06)     OK        15        Up
FPC0_B_SG(0,1,2)_FB_D(03,05) -> SF_10_10_FB_D(00,05)     OK        15        Up
FPC0_B_SG(0,1,3)_FB_D(03,04) -> SF_10_10_FB_D(00,04)     OK        15        Up
FPC0_B_SG(0,1,4)_FB_D(03,03) -> SF_10_10_FB_D(00,03)     OK        15        Up
FPC0_B_SG(0,1,5)_FB_D(03,02) -> SF_10_10_FB_D(00,02)     OK        15        Up
FPC0_B_SG(0,1,6)_FB_D(03,01) -> SF_10_10_FB_D(00,01)     OK        15        Up
FPC0_B_SG(0,1,7)_FB_D(03,00) -> SF_10_10_FB_D(00,00)     OK        15        Up
FPC1_T_SG(0,2,0)_FB_D(05,08) -> SF_10_02_FB_D(02,08)     OK        18        Up
FPC1_T_SG(0,2,1)_FB_D(05,07) -> SF_10_02_FB_D(02,07)     OK        18        Up
FPC1_T_SG(0,2,2)_FB_D(05,06) -> SF_10_02_FB_D(02,06)     OK        18        Up
FPC1_T_SG(0,2,3)_FB_D(05,05) -> SF_10_02_FB_D(02,05)     OK        18        Up
FPC1_T_SG(0,2,4)_FB_D(05,03) -> SF_10_02_FB_D(02,03)     OK        18        Up
FPC1_T_SG(0,2,5)_FB_D(05,02) -> SF_10_02_FB_D(02,02)     OK        18        Up
FPC1_T_SG(0,2,6)_FB_D(05,01) -> SF_10_02_FB_D(02,01)     OK        18        Up
FPC1_T_SG(0,2,7)_FB_D(05,00) -> SF_10_02_FB_D(02,00)     OK        18        Up
FPC1_B_SG(0,3,0)_FB_D(04,03) -> SF_10_11_FB_D(01,03)     OK        21        Up
FPC1_B_SG(0,3,1)_FB_D(04,02) -> SF_10_11_FB_D(01,02)     OK        21        Up
FPC1_B_SG(0,3,2)_FB_D(04,01) -> SF_10_11_FB_D(01,01)     OK        21        Up
FPC1_B_SG(0,3,3)_FB_D(04,00) -> SF_10_11_FB_D(01,00)     OK        21        Up
FPC1_B_SG(0,3,4)_FB_D(03,11) -> SF_10_11_FB_D(00,11)     OK        21        Up
FPC1_B_SG(0,3,5)_FB_D(03,10) -> SF_10_11_FB_D(00,10)     OK        21        Up
FPC1_B_SG(0,3,6)_FB_D(03,09) -> SF_10_11_FB_D(00,09)     OK        21        Up
FPC1_B_SG(0,3,7)_FB_D(03,08) -> SF_10_11_FB_D(00,08)     OK        21        Up
FPC2_T_SG(1,0,0)_FB_C(10,11) -> SF_10_04_FB_C(07,11)     OK        12        Up
FPC2_T_SG(1,0,1)_FB_C(10,10) -> SF_10_04_FB_C(07,10)     OK        12        Up
FPC2_T_SG(1,0,2)_FB_C(10,09) -> SF_10_04_FB_C(07,09)     OK        12        Up
FPC2_T_SG(1,0,3)_FB_C(10,08) -> SF_10_04_FB_C(07,08)     OK        12        Up
FPC2_T_SG(1,0,4)_FB_C(10,07) -> SF_10_04_FB_C(07,07)     OK        12        Up
FPC2_T_SG(1,0,5)_FB_C(10,06) -> SF_10_04_FB_C(07,06)     OK        12        Up
FPC2_T_SG(1,0,6)_FB_C(10,05) -> SF_10_04_FB_C(07,05)     OK        12        Up
FPC2_T_SG(1,0,7)_FB_C(10,04) -> SF_10_04_FB_C(07,04)     OK        12        Up
FPC2_B_SG(1,1,0)_FB_C(09,07) -> SF_10_14_FB_C(06,07)     OK        15        Up
FPC2_B_SG(1,1,1)_FB_C(09,06) -> SF_10_14_FB_C(06,06)     OK        15        Up
FPC2_B_SG(1,1,2)_FB_C(09,05) -> SF_10_14_FB_C(06,05)     OK        15        Up
FPC2_B_SG(1,1,3)_FB_C(09,04) -> SF_10_14_FB_C(06,04)     OK        15        Up
FPC2_B_SG(1,1,4)_FB_C(09,03) -> SF_10_14_FB_C(06,03)     OK        15        Up
FPC2_B_SG(1,1,5)_FB_C(09,02) -> SF_10_14_FB_C(06,02)     OK        15        Up
FPC2_B_SG(1,1,6)_FB_C(09,01) -> SF_10_14_FB_C(06,01)     OK        15        Up
FPC2_B_SG(1,1,7)_FB_C(09,00) -> SF_10_14_FB_C(06,00)     OK        15        Up
FPC3_T_SG(1,2,0)_FB_C(11,08) -> SF_10_06_FB_C(08,08)     OK        18        Up
FPC3_T_SG(1,2,1)_FB_C(11,07) -> SF_10_06_FB_C(08,07)     OK        18        Up
FPC3_T_SG(1,2,2)_FB_C(11,06) -> SF_10_06_FB_C(08,06)     OK        18        Up
FPC3_T_SG(1,2,3)_FB_C(11,05) -> SF_10_06_FB_C(08,05)     OK        18        Up
```

```
FPC3_T_SG(1,2,4)_FB_C(11,03) -> SF_10_06_FB_C(08,03)     OK       18      Up
FPC3_T_SG(1,2,5)_FB_C(11,02) -> SF_10_06_FB_C(08,02)     OK       18      Up
FPC3_T_SG(1,2,6)_FB_C(11,01) -> SF_10_06_FB_C(08,01)     OK       18      Up
...
```

show chassis fabric topology (T4000 Core Router)

```
user@host> show chassis fabric topology 0
 fchip (mode)
          In-links               State             Out-links              State
--------------------------------------------------------------------------------

SIB0 :
---------

Onboard Links
-------------
SIB0_XF1,14_0->SIB0_XF,00_0      Up      SIB0_XF,00_0->SIB0_XF1,14_0      Up
SIB0_XF,00_0->SIB0_XF1,14_0      Up      SIB0_XF1,14_0->SIB0_XF,00_0      Up
SIB0_XF1,13_0->SIB0_XF,01_0      Up      SIB0_XF,01_0->SIB0_XF1,13_0      Up
SIB0_XF,01_0->SIB0_XF1,13_0      Up      SIB0_XF1,13_0->SIB0_XF,01_0      Up
SIB0_XF1,12_0->SIB0_XF,02_0      Up      SIB0_XF,02_0->SIB0_XF1,12_0      Up
SIB0_XF,02_0->SIB0_XF1,12_0      Up      SIB0_XF1,12_0->SIB0_XF,02_0      Up
SIB0_XF1,11_0->SIB0_XF,03_0      Up      SIB0_XF,03_0->SIB0_XF1,11_0      Up
SIB0_XF,03_0->SIB0_XF1,11_0      Up      SIB0_XF1,11_0->SIB0_XF,03_0      Up
SIB0_XF1,10_0->SIB0_XF,04_0      Up      SIB0_XF,04_0->SIB0_XF1,10_0      Up
SIB0_XF,04_0->SIB0_XF1,10_0      Up      SIB0_XF1,10_0->SIB0_XF,04_0      Up
SIB0_XF1,09_0->SIB0_XF,05_0      Up      SIB0_XF,05_0->SIB0_XF1,09_0      Up
SIB0_XF,05_0->SIB0_XF1,09_0      Up      SIB0_XF1,09_0->SIB0_XF,05_0      Up
SIB0_XF2,14_0->SIB0_XF,06_0      Up      SIB0_XF,06_0->SIB0_XF2,14_0      Up
SIB0_XF,06_0->SIB0_XF2,14_0      Up      SIB0_XF2,14_0->SIB0_XF,06_0      Up
SIB0_XF2,13_0->SIB0_XF,07_0      Up      SIB0_XF,07_0->SIB0_XF2,13_0      Up
SIB0_XF,07_0->SIB0_XF2,13_0      Up      SIB0_XF2,13_0->SIB0_XF,07_0      Up
SIB0_XF2,12_0->SIB0_XF,08_0      Up      SIB0_XF,08_0->SIB0_XF2,12_0      Up
SIB0_XF,08_0->SIB0_XF2,12_0      Up      SIB0_XF2,12_0->SIB0_XF,08_0      Up
SIB0_XF2,11_0->SIB0_XF,09_0      Up      SIB0_XF,09_0->SIB0_XF2,11_0      Up
SIB0_XF,09_0->SIB0_XF2,11_0      Up      SIB0_XF2,11_0->SIB0_XF,09_0      Up
SIB0_XF2,10_0->SIB0_XF,10_0      Up      SIB0_XF,10_0->SIB0_XF2,10_0      Up
SIB0_XF,10_0->SIB0_XF2,10_0      Up      SIB0_XF2,10_0->SIB0_XF,10_0      Up
SIB0_XF2,09_0->SIB0_XF,11_0      Up      SIB0_XF,11_0->SIB0_XF2,09_0      Up
SIB0_XF,11_0->SIB0_XF2,09_0      Up      SIB0_XF2,09_0->SIB0_XF,11_0      Up
```

```
SIB0_XF3,13_0->SIB0_XF,12_0      Up      SIB0_XF,12_0->SIB0_XF3,13_0      Up
SIB0_XF,12_0->SIB0_XF3,13_0      Up      SIB0_XF3,13_0->SIB0_XF,12_0      Up
SIB0_XF3,12_0->SIB0_XF,13_0      Up      SIB0_XF,13_0->SIB0_XF3,12_0      Up
SIB0_XF,13_0->SIB0_XF3,12_0      Up      SIB0_XF3,12_0->SIB0_XF,13_0      Up
SIB0_XF3,11_0->SIB0_XF,14_0      Up      SIB0_XF,14_0->SIB0_XF3,11_0      Up
SIB0_XF,14_0->SIB0_XF3,11_0      Up      SIB0_XF3,11_0->SIB0_XF,14_0      Up
SIB0_XF3,10_0->SIB0_XF,15_0      Up      SIB0_XF,15_0->SIB0_XF3,10_0      Up
SIB0_XF,15_0->SIB0_XF3,10_0      Up      SIB0_XF3,10_0->SIB0_XF,15_0      Up

PFE Links
---------------
FPC2PFE0->SIB0_XF1,05_0          Up      SIB0_XF1,05_0->FPC2PFE0          Up
FPC3PFE0->SIB0_XF2,15_0          Up      SIB0_XF2,15_0->FPC3PFE0          Up
FPC5PFE0->SIB0_XF2,05_0          Up      SIB0_XF2,05_0->FPC5PFE0          Up
FPC5PFE1->SIB0_XF2,07_0          Up      SIB0_XF2,07_0->FPC5PFE1          Up
FPC6PFE0->SIB0_XF3,01_0          Up      SIB0_XF3,01_0->FPC6PFE0          Up
FPC6PFE0->SIB0_XF3,01_1          Up      SIB0_XF3,01_1->FPC6PFE0          Up
FPC6PFE0->SIB0_XF3,02_0          Up      SIB0_XF3,02_0->FPC6PFE0          Up
FPC6PFE1->SIB0_XF3,03_0          Up      SIB0_XF3,03_0->FPC6PFE1          Up
FPC6PFE1->SIB0_XF3,03_1          Up      SIB0_XF3,03_1->FPC6PFE1          Up
FPC6PFE1->SIB0_XF3,02_1          Up      SIB0_XF3,02_1->FPC6PFE1          Up
```

show chassis fabric topology lcc (TX Matrix Plus Router with 3D SIBs)

```
user@host> show chassis fabric topology lcc
6
lcc6-re0:
--------------------------------------------------------------------------
  fchip (mode)
          In-links               State             Out-links               State
--------------------------------------------------------------------------------
SIB0 :
---------
CXP0_Evn->LCC_SIB0_XF3,10_0      Up      LCC_SIB0_XF3,10_0->CXP0_Evn      Up
CXP0_Odd->LCC_SIB0_XF3,11_0      Up      LCC_SIB0_XF3,11_0->CXP0_Odd      Up
CXP1_Evn->LCC_SIB0_XF3,12_0      Up      LCC_SIB0_XF3,12_0->CXP1_Evn      Up
CXP1_Odd->LCC_SIB0_XF3,13_0      Up      LCC_SIB0_XF3,13_0->CXP1_Odd      Up
CXP2_Evn->LCC_SIB0_XF2,09_0      Up      LCC_SIB0_XF2,09_0->CXP2_Evn      Up
CXP2_Odd->LCC_SIB0_XF2,10_0      Up      LCC_SIB0_XF2,10_0->CXP2_Odd      Up
CXP3_Evn->LCC_SIB0_XF2,11_0      Up      LCC_SIB0_XF2,11_0->CXP3_Evn      Up
CXP3_Odd->LCC_SIB0_XF2,12_0      Up      LCC_SIB0_XF2,12_0->CXP3_Odd      Up
```

```
CXP4_Evn->LCC_SIB0_XF2,13_0      Up      LCC_SIB0_XF2,13_0->CXP4_Evn      Up
CXP4_Odd->LCC_SIB0_XF1,09_0      Up      LCC_SIB0_XF1,09_0->CXP4_Odd      Up
CXP5_Evn->LCC_SIB0_XF2,14_0      Up      LCC_SIB0_XF2,14_0->CXP5_Evn      Up
CXP5_Odd->LCC_SIB0_XF1,10_0      Up      LCC_SIB0_XF1,10_0->CXP5_Odd      Up
CXP6_Evn->LCC_SIB0_XF1,11_0      Up      LCC_SIB0_XF1,11_0->CXP6_Evn      Up
CXP6_Odd->LCC_SIB0_XF1,12_0      Up      LCC_SIB0_XF1,12_0->CXP6_Odd      Up
CXP7_Evn->LCC_SIB0_XF1,13_0      Up      LCC_SIB0_XF1,13_0->CXP7_Evn      Up
CXP7_Odd->LCC_SIB0_XF1,14_0      Up      LCC_SIB0_XF1,14_0->CXP7_Odd      Up
SIB1 :
---------
SIB2 :
---------
CXP0_Evn->LCC_SIB2_XF3,10_0      Up      LCC_SIB2_XF3,10_0->CXP0_Evn      Up
CXP0_Odd->LCC_SIB2_XF3,11_0      Up      LCC_SIB2_XF3,11_0->CXP0_Odd      Up
CXP1_Evn->LCC_SIB2_XF3,12_0      Up      LCC_SIB2_XF3,12_0->CXP1_Evn      Up
CXP1_Odd->LCC_SIB2_XF3,13_0      Up      LCC_SIB2_XF3,13_0->CXP1_Odd      Up
CXP2_Evn->LCC_SIB2_XF2,09_0      Up      LCC_SIB2_XF2,09_0->CXP2_Evn      Up
CXP2_Odd->LCC_SIB2_XF2,10_0      Up      LCC_SIB2_XF2,10_0->CXP2_Odd      Up
CXP3_Evn->LCC_SIB2_XF2,11_0      Up      LCC_SIB2_XF2,11_0->CXP3_Evn      Up
CXP3_Odd->LCC_SIB2_XF2,12_0      Up      LCC_SIB2_XF2,12_0->CXP3_Odd      Up
CXP4_Evn->LCC_SIB2_XF2,13_0      Up      LCC_SIB2_XF2,13_0->CXP4_Evn      Up
CXP4_Odd->LCC_SIB2_XF1,09_0      Up      LCC_SIB2_XF1,09_0->CXP4_Odd      Up
CXP5_Evn->LCC_SIB2_XF2,14_0      Up      LCC_SIB2_XF2,14_0->CXP5_Evn      Up
CXP5_Odd->LCC_SIB2_XF1,10_0      Up      LCC_SIB2_XF1,10_0->CXP5_Odd      Up
CXP6_Evn->LCC_SIB2_XF1,11_0      Up      LCC_SIB2_XF1,11_0->CXP6_Evn      Up
CXP6_Odd->LCC_SIB2_XF1,12_0      Up      LCC_SIB2_XF1,12_0->CXP6_Odd      Up
CXP7_Evn->LCC_SIB2_XF1,13_0      Up      LCC_SIB2_XF1,13_0->CXP7_Evn      Up
CXP7_Odd->LCC_SIB2_XF1,14_0      Up      LCC_SIB2_XF1,14_0->CXP7_Odd      Up
SIB3 :
---------
CXP0_Evn->LCC_SIB3_XF3,10_0      Up      LCC_SIB3_XF3,10_0->CXP0_Evn      Up
CXP0_Odd->LCC_SIB3_XF3,11_0      Up      LCC_SIB3_XF3,11_0->CXP0_Odd      Up
CXP1_Evn->LCC_SIB3_XF3,12_0      Up      LCC_SIB3_XF3,12_0->CXP1_Evn      Up
CXP1_Odd->LCC_SIB3_XF3,13_0      Up      LCC_SIB3_XF3,13_0->CXP1_Odd      Up
CXP2_Evn->LCC_SIB3_XF2,09_0      Up      LCC_SIB3_XF2,09_0->CXP2_Evn      Up
CXP2_Odd->LCC_SIB3_XF2,10_0      Up      LCC_SIB3_XF2,10_0->CXP2_Odd      Up
CXP3_Evn->LCC_SIB3_XF2,11_0      Up      LCC_SIB3_XF2,11_0->CXP3_Evn      Up
CXP3_Odd->LCC_SIB3_XF2,12_0      Up      LCC_SIB3_XF2,12_0->CXP3_Odd      Up
CXP4_Evn->LCC_SIB3_XF2,13_0      Up      LCC_SIB3_XF2,13_0->CXP4_Evn      Up
CXP4_Odd->LCC_SIB3_XF1,09_0      Up      LCC_SIB3_XF1,09_0->CXP4_Odd      Up
CXP5_Evn->LCC_SIB3_XF2,14_0      Up      LCC_SIB3_XF2,14_0->CXP5_Evn      Up
CXP5_Odd->LCC_SIB3_XF1,10_0      Up      LCC_SIB3_XF1,10_0->CXP5_Odd      Up
CXP6_Evn->LCC_SIB3_XF1,11_0      Up      LCC_SIB3_XF1,11_0->CXP6_Evn      Up
```

```
CXP6_Odd->LCC_SIB3_XF1,12_0      Up      LCC_SIB3_XF1,12_0->CXP6_Odd      Up
CXP7_Evn->LCC_SIB3_XF1,13_0      Up      LCC_SIB3_XF1,13_0->CXP7_Evn      Up
CXP7_Odd->LCC_SIB3_XF1,14_0      Up      LCC_SIB3_XF1,14_0->CXP7_Odd      Up
SIB4 :
---------
CXP0_Evn->LCC_SIB4_XF3,10_0      Up      LCC_SIB4_XF3,10_0->CXP0_Evn      Up
CXP0_Odd->LCC_SIB4_XF3,11_0      Up      LCC_SIB4_XF3,11_0->CXP0_Odd      Up
CXP1_Evn->LCC_SIB4_XF3,12_0      Up      LCC_SIB4_XF3,12_0->CXP1_Evn      Up
CXP1_Odd->LCC_SIB4_XF3,13_0      Up      LCC_SIB4_XF3,13_0->CXP1_Odd      Up
CXP2_Evn->LCC_SIB4_XF2,09_0      Up      LCC_SIB4_XF2,09_0->CXP2_Evn      Up
CXP2_Odd->LCC_SIB4_XF2,10_0      Up      LCC_SIB4_XF2,10_0->CXP2_Odd      Up
CXP3_Evn->LCC_SIB4_XF2,11_0      Up      LCC_SIB4_XF2,11_0->CXP3_Evn      Up
CXP3_Odd->LCC_SIB4_XF2,12_0      Up      LCC_SIB4_XF2,12_0->CXP3_Odd      Up
CXP4_Evn->LCC_SIB4_XF2,13_0      Up      LCC_SIB4_XF2,13_0->CXP4_Evn      Up
CXP4_Odd->LCC_SIB4_XF1,09_0      Up      LCC_SIB4_XF1,09_0->CXP4_Odd      Up
CXP5_Evn->LCC_SIB4_XF2,14_0      Up      LCC_SIB4_XF2,14_0->CXP5_Evn      Up
CXP5_Odd->LCC_SIB4_XF1,10_0      Up      LCC_SIB4_XF1,10_0->CXP5_Odd      Up
CXP6_Evn->LCC_SIB4_XF1,11_0      Up      LCC_SIB4_XF1,11_0->CXP6_Evn      Up
CXP6_Odd->LCC_SIB4_XF1,12_0      Up      LCC_SIB4_XF1,12_0->CXP6_Odd      Up
CXP7_Evn->LCC_SIB4_XF1,13_0      Up      LCC_SIB4_XF1,13_0->CXP7_Evn      Up
CXP7_Odd->LCC_SIB4_XF1,14_0      Up      LCC_SIB4_XF1,14_0->CXP7_Odd      Up
```

show chassis fabric topology (PTX5000 Router)

```
user@host> show chassis fabric topology
In-link  : FPC# FE# TQ# (TQ-TX sub-chnl #) ->
            SIB# TF#_FCORE# (TF-RX port#, TF-RX sub-chn#, TF-RX inst#)

 Out-link : SIB# TF#_FCORE# (TF-TX port#, TF-TX sub-chn#, TF-TX inst#) ->
            FPC# FE# TQ# (TQ-RX sub-chnl #)
(6, 4, 06) in FPC02FE0TQ0(02)->S01F0_0(6,4,06) will be TF Rx Port 6, TF CCL Rx Sub-Channel 4, TF
CCL Rx Instance 6.
(2, 7, 10) in S01F0_0(2,7,10)->FPC02FE0TQ0(02) will be TF-Tx Port 2, TF CCL Tx Sub-channel 7, TF
CCL Tx Instance 10.
SIB 0 FCHIP 0 FCORE 0 :
-----------------------
          In-links               State             Out-links              State
--------------------------------------------------------------------------------
FPC00FE0TQ0(00)->S00F0_0(7,4,07) OK      S00F0_0(3,7,11)->FPC00FE0TQ0(00) OK
FPC00FE1TQ1(00)->S00F0_0(7,6,07) OK      S00F0_0(3,5,11)->FPC00FE1TQ1(00) OK
FPC00FE2TQ2(00)->S00F0_0(7,5,07) OK      S00F0_0(3,6,11)->FPC00FE2TQ2(00) OK
```

```
FPC00FE3TQ3(00)->S00F0_0(7,7,07) OK      S00F0_0(3,4,11)->FPC00FE3TQ3(00) OK
FPC01FE0TQ0(00)->S00F0_0(7,0,07) OK      S00F0_0(3,3,11)->FPC01FE0TQ0(00) OK
FPC01FE1TQ1(00)->S00F0_0(7,1,07) OK      S00F0_0(3,1,11)->FPC01FE1TQ1(00) OK
FPC01FE2TQ2(00)->S00F0_0(7,2,07) OK      S00F0_0(3,2,11)->FPC01FE2TQ2(00) Error
FPC01FE3TQ3(00)->S00F0_0(7,3,07) OK      S00F0_0(3,0,11)->FPC01FE3TQ3(00) OK
FPC02FE0TQ0(00)->S00F0_0(6,4,06) OK      S00F0_0(2,7,10)->FPC02FE0TQ0(00) OK
FPC02FE1TQ1(00)->S00F0_0(6,5,06) OK      S00F0_0(2,5,10)->FPC02FE1TQ1(00) OK
FPC02FE2TQ2(00)->S00F0_0(6,6,06) OK      S00F0_0(2,6,10)->FPC02FE2TQ2(00) OK
FPC02FE3TQ3(00)->S00F0_0(6,7,06) OK      S00F0_0(2,4,10)->FPC02FE3TQ3(00) OK
FPC03FE0TQ0(00)->S00F0_0(6,0,06) Down    S00F0_0(2,3,10)->FPC03FE0TQ0(00) Down
FPC03FE1TQ1(00)->S00F0_0(6,1,06) Down    S00F0_0(2,0,10)->FPC03FE1TQ1(00) Down
FPC03FE2TQ2(00)->S00F0_0(6,2,06) Down    S00F0_0(2,2,10)->FPC03FE2TQ2(00) Down
FPC03FE3TQ3(00)->S00F0_0(6,3,06) Down    S00F0_0(2,1,10)->FPC03FE3TQ3(00) Down
FPC04FE0TQ0(00)->S00F0_0(5,4,05) OK      S00F0_0(1,7,09)->FPC04FE0TQ0(00) OK
FPC04FE1TQ1(00)->S00F0_0(5,5,05) OK      S00F0_0(1,6,09)->FPC04FE1TQ1(00) OK
FPC04FE2TQ2(00)->S00F0_0(5,6,05) OK      S00F0_0(1,4,09)->FPC04FE2TQ2(00) OK
FPC04FE3TQ3(00)->S00F0_0(5,7,05) OK      S00F0_0(1,5,09)->FPC04FE3TQ3(00) OK
FPC05FE0TQ0(00)->S00F0_0(5,0,05) OK      S00F0_0(1,3,09)->FPC05FE0TQ0(00) OK
FPC05FE1TQ1(00)->S00F0_0(5,1,05) OK      S00F0_0(1,0,09)->FPC05FE1TQ1(00) OK
FPC05FE2TQ2(00)->S00F0_0(5,2,05) OK      S00F0_0(1,2,09)->FPC05FE2TQ2(00) OK
FPC05FE3TQ3(00)->S00F0_0(5,3,05) OK      S00F0_0(1,1,09)->FPC05FE3TQ3(00) OK
FPC06FE0TQ0(00)->S00F0_0(4,4,04) Down    S00F0_0(0,7,08)->FPC06FE0TQ0(00) Down
FPC06FE1TQ1(00)->S00F0_0(4,5,04) Down    S00F0_0(0,5,08)->FPC06FE1TQ1(00) Down
FPC06FE2TQ2(00)->S00F0_0(4,6,04) Down    S00F0_0(0,6,08)->FPC06FE2TQ2(00) Down
FPC06FE3TQ3(00)->S00F0_0(4,7,04) Down    S00F0_0(0,4,08)->FPC06FE3TQ3(00) Down
FPC07FE0TQ0(00)->S00F0_0(4,2,04) Down    S00F0_0(0,3,08)->FPC07FE0TQ0(00) Down
FPC07FE1TQ1(00)->S00F0_0(4,0,04) Down    S00F0_0(0,0,08)->FPC07FE1TQ1(00) Down
FPC07FE2TQ2(00)->S00F0_0(4,1,04) Down    S00F0_0(0,1,08)->FPC07FE2TQ2(00) Down
FPC07FE3TQ3(00)->S00F0_0(4,3,04) Down    S00F0_0(0,2,08)->FPC07FE3TQ3(00) Down

SIB 0 FCHIP 0 FCORE 1 :
-----------------------
          In-links               State             Out-links              State
--------------------------------------------------------------------------------
FPC00FE0TQ0(01)->S00F0_1(3,4,11) OK      S00F0_1(7,6,07)->FPC00FE0TQ0(01) OK
FPC00FE1TQ1(01)->S00F0_1(3,5,11) OK      S00F0_1(7,4,07)->FPC00FE1TQ1(01) OK
FPC00FE2TQ2(01)->S00F0_1(3,6,11) OK      S00F0_1(7,7,07)->FPC00FE2TQ2(01) OK
FPC00FE3TQ3(01)->S00F0_1(3,7,11) OK      S00F0_1(7,5,07)->FPC00FE3TQ3(01) OK
FPC01FE0TQ0(01)->S00F0_1(3,0,11) OK      S00F0_1(7,2,07)->FPC01FE0TQ0(01) OK
FPC01FE1TQ1(01)->S00F0_1(3,1,11) OK      S00F0_1(7,0,07)->FPC01FE1TQ1(01) OK
FPC01FE2TQ2(01)->S00F0_1(3,2,11) OK      S00F0_1(7,3,07)->FPC01FE2TQ2(01) OK
FPC01FE3TQ3(01)->S00F0_1(3,3,11) OK      S00F0_1(7,1,07)->FPC01FE3TQ3(01) OK
FPC02FE0TQ0(01)->S00F0_1(2,4,10) OK      S00F0_1(6,5,06)->FPC02FE0TQ0(01) OK
```

```
FPC02FE1TQ1(01)->S00F0_1(2,5,10) OK      S00F0_1(6,4,06)->FPC02FE1TQ1(01) OK
FPC02FE2TQ2(01)->S00F0_1(2,6,10) OK      S00F0_1(6,7,06)->FPC02FE2TQ2(01) OK
FPC02FE3TQ3(01)->S00F0_1(2,7,10) OK      S00F0_1(6,6,06)->FPC02FE3TQ3(01) OK
FPC03FE0TQ0(01)->S00F0_1(2,0,10) Down    S00F0_1(6,1,06)->FPC03FE0TQ0(01) Down
FPC03FE1TQ1(01)->S00F0_1(2,1,10) Down    S00F0_1(6,0,06)->FPC03FE1TQ1(01) Down
FPC03FE2TQ2(01)->S00F0_1(2,2,10) Down    S00F0_1(6,3,06)->FPC03FE2TQ2(01) Down
FPC03FE3TQ3(01)->S00F0_1(2,3,10) Down    S00F0_1(6,2,06)->FPC03FE3TQ3(01) Down
FPC04FE0TQ0(01)->S00F0_1(1,4,09) OK      S00F0_1(5,5,05)->FPC04FE0TQ0(01) OK
FPC04FE1TQ1(01)->S00F0_1(1,5,09) OK      S00F0_1(5,4,05)->FPC04FE1TQ1(01) OK
FPC04FE2TQ2(01)->S00F0_1(1,6,09) OK      S00F0_1(5,7,05)->FPC04FE2TQ2(01) OK
FPC04FE3TQ3(01)->S00F0_1(1,7,09) OK      S00F0_1(5,6,05)->FPC04FE3TQ3(01) OK
FPC05FE0TQ0(01)->S00F0_1(1,0,09) OK      S00F0_1(5,1,05)->FPC05FE0TQ0(01) OK
FPC05FE1TQ1(01)->S00F0_1(1,1,09) OK      S00F0_1(5,0,05)->FPC05FE1TQ1(01) OK
FPC05FE2TQ2(01)->S00F0_1(1,2,09) OK      S00F0_1(5,3,05)->FPC05FE2TQ2(01) OK
FPC05FE3TQ3(01)->S00F0_1(1,3,09) OK      S00F0_1(5,2,05)->FPC05FE3TQ3(01) OK
FPC06FE0TQ0(01)->S00F0_1(0,4,08) Down    S00F0_1(4,7,04)->FPC06FE0TQ0(01) Down
FPC06FE1TQ1(01)->S00F0_1(0,5,08) Down    S00F0_1(4,0,04)->FPC06FE1TQ1(01) Down
FPC06FE2TQ2(01)->S00F0_1(0,6,08) Down    S00F0_1(4,6,04)->FPC06FE2TQ2(01) Down
FPC06FE3TQ3(01)->S00F0_1(0,7,08) Down    S00F0_1(4,1,04)->FPC06FE3TQ3(01) Down
FPC07FE0TQ0(01)->S00F0_1(0,0,08) Down    S00F0_1(4,3,04)->FPC07FE0TQ0(01) Down
FPC07FE1TQ1(01)->S00F0_1(0,1,08) Down    S00F0_1(4,4,04)->FPC07FE1TQ1(01) Down
FPC07FE2TQ2(01)->S00F0_1(0,2,08) Down    S00F0_1(4,2,04)->FPC07FE2TQ2(01) Down
FPC07FE3TQ3(01)->S00F0_1(0,3,08) Down    S00F0_1(4,5,04)->FPC07FE3TQ3(01) Down

SIB 1 FCHIP 0 FCORE 0 :
-----------------------
          In-links               State             Out-links              State
--------------------------------------------------------------------------------
FPC00FE0TQ0(02)->S01F0_0(7,4,07) Error   S01F0_0(3,7,11)->FPC00FE0TQ0(02) Down
FPC00FE1TQ1(02)->S01F0_0(7,6,07) OK      S01F0_0(3,5,11)->FPC00FE1TQ1(02) OK
FPC00FE2TQ2(02)->S01F0_0(7,5,07) OK      S01F0_0(3,6,11)->FPC00FE2TQ2(02) OK
FPC00FE3TQ3(02)->S01F0_0(7,7,07) OK      S01F0_0(3,4,11)->FPC00FE3TQ3(02) OK
FPC01FE0TQ0(02)->S01F0_0(7,0,07) OK      S01F0_0(3,3,11)->FPC01FE0TQ0(02) OK
FPC01FE1TQ1(02)->S01F0_0(7,1,07) OK      S01F0_0(3,1,11)->FPC01FE1TQ1(02) OK
FPC01FE2TQ2(02)->S01F0_0(7,2,07) OK      S01F0_0(3,2,11)->FPC01FE2TQ2(02) OK
FPC01FE3TQ3(02)->S01F0_0(7,3,07) OK      S01F0_0(3,0,11)->FPC01FE3TQ3(02) OK
FPC02FE0TQ0(02)->S01F0_0(6,4,06) OK      S01F0_0(2,7,10)->FPC02FE0TQ0(02) OK
FPC02FE1TQ1(02)->S01F0_0(6,5,06) OK      S01F0_0(2,5,10)->FPC02FE1TQ1(02) OK
FPC02FE2TQ2(02)->S01F0_0(6,6,06) OK      S01F0_0(2,6,10)->FPC02FE2TQ2(02) OK
FPC02FE3TQ3(02)->S01F0_0(6,7,06) OK      S01F0_0(2,4,10)->FPC02FE3TQ3(02) OK
FPC03FE0TQ0(02)->S01F0_0(6,0,06) Down    S01F0_0(2,3,10)->FPC03FE0TQ0(02) Down
FPC03FE1TQ1(02)->S01F0_0(6,1,06) Down    S01F0_0(2,0,10)->FPC03FE1TQ1(02) Down
FPC03FE2TQ2(02)->S01F0_0(6,2,06) Down    S01F0_0(2,2,10)->FPC03FE2TQ2(02) Down
```

```
FPC03FE3TQ3(02)->S01F0_0(6,3,06) Down    S01F0_0(2,1,10)->FPC03FE3TQ3(02) Down
FPC04FE0TQ0(02)->S01F0_0(5,4,05) OK      S01F0_0(1,7,09)->FPC04FE0TQ0(02) OK
FPC04FE1TQ1(02)->S01F0_0(5,5,05) OK      S01F0_0(1,6,09)->FPC04FE1TQ1(02) OK
FPC04FE2TQ2(02)->S01F0_0(5,6,05) OK      S01F0_0(1,4,09)->FPC04FE2TQ2(02) OK
FPC04FE3TQ3(02)->S01F0_0(5,7,05) OK      S01F0_0(1,5,09)->FPC04FE3TQ3(02) OK
FPC05FE0TQ0(02)->S01F0_0(5,0,05) OK      S01F0_0(1,3,09)->FPC05FE0TQ0(02) OK
FPC05FE1TQ1(02)->S01F0_0(5,1,05) OK      S01F0_0(1,0,09)->FPC05FE1TQ1(02) OK
FPC05FE2TQ2(02)->S01F0_0(5,2,05) OK      S01F0_0(1,2,09)->FPC05FE2TQ2(02) OK
FPC05FE3TQ3(02)->S01F0_0(5,3,05) OK      S01F0_0(1,1,09)->FPC05FE3TQ3(02) OK
FPC06FE0TQ0(02)->S01F0_0(4,4,04) Down    S01F0_0(0,7,08)->FPC06FE0TQ0(02) Down
FPC06FE1TQ1(02)->S01F0_0(4,5,04) Down    S01F0_0(0,5,08)->FPC06FE1TQ1(02) Down
FPC06FE2TQ2(02)->S01F0_0(4,6,04) Down    S01F0_0(0,6,08)->FPC06FE2TQ2(02) Down
FPC06FE3TQ3(02)->S01F0_0(4,7,04) Down    S01F0_0(0,4,08)->FPC06FE3TQ3(02) Down
FPC07FE0TQ0(02)->S01F0_0(4,2,04) Down    S01F0_0(0,3,08)->FPC07FE0TQ0(02) Down
FPC07FE1TQ1(02)->S01F0_0(4,0,04) Down    S01F0_0(0,0,08)->FPC07FE1TQ1(02) Down
FPC07FE2TQ2(02)->S01F0_0(4,1,04) Down    S01F0_0(0,1,08)->FPC07FE2TQ2(02) Down
FPC07FE3TQ3(02)->S01F0_0(4,3,04) Down    S01F0_0(0,2,08)->FPC07FE3TQ3(02) Down

SIB 1 FCHIP 0 FCORE 1 :
-----------------------
          In-links               State             Out-links              State
--------------------------------------------------------------------------------
FPC00FE0TQ0(03)->S01F0_1(3,4,11) OK      S01F0_1(7,6,07)->FPC00FE0TQ0(03) OK
FPC00FE1TQ1(03)->S01F0_1(3,5,11) OK      S01F0_1(7,4,07)->FPC00FE1TQ1(03) OK
FPC00FE2TQ2(03)->S01F0_1(3,6,11) OK      S01F0_1(7,7,07)->FPC00FE2TQ2(03) OK
FPC00FE3TQ3(03)->S01F0_1(3,7,11) OK      S01F0_1(7,5,07)->FPC00FE3TQ3(03) OK
FPC01FE0TQ0(03)->S01F0_1(3,0,11) OK      S01F0_1(7,2,07)->FPC01FE0TQ0(03) OK
FPC01FE1TQ1(03)->S01F0_1(3,1,11) OK      S01F0_1(7,0,07)->FPC01FE1TQ1(03) OK
FPC01FE2TQ2(03)->S01F0_1(3,2,11) OK      S01F0_1(7,3,07)->FPC01FE2TQ2(03) OK
FPC01FE3TQ3(03)->S01F0_1(3,3,11) OK      S01F0_1(7,1,07)->FPC01FE3TQ3(03) OK
FPC02FE0TQ0(03)->S01F0_1(2,4,10) OK      S01F0_1(6,5,06)->FPC02FE0TQ0(03) OK
FPC02FE1TQ1(03)->S01F0_1(2,5,10) OK      S01F0_1(6,4,06)->FPC02FE1TQ1(03) OK
FPC02FE2TQ2(03)->S01F0_1(2,6,10) OK      S01F0_1(6,7,06)->FPC02FE2TQ2(03) OK
FPC02FE3TQ3(03)->S01F0_1(2,7,10) OK      S01F0_1(6,6,06)->FPC02FE3TQ3(03) OK
FPC03FE0TQ0(03)->S01F0_1(2,0,10) Down    S01F0_1(6,1,06)->FPC03FE0TQ0(03) Down
FPC03FE1TQ1(03)->S01F0_1(2,1,10) Down    S01F0_1(6,0,06)->FPC03FE1TQ1(03) Down
FPC03FE2TQ2(03)->S01F0_1(2,2,10) Down    S01F0_1(6,3,06)->FPC03FE2TQ2(03) Down
FPC03FE3TQ3(03)->S01F0_1(2,3,10) Down    S01F0_1(6,2,06)->FPC03FE3TQ3(03) Down
FPC04FE0TQ0(03)->S01F0_1(1,4,09) OK      S01F0_1(5,5,05)->FPC04FE0TQ0(03) OK
FPC04FE1TQ1(03)->S01F0_1(1,5,09) OK      S01F0_1(5,4,05)->FPC04FE1TQ1(03) OK
FPC04FE2TQ2(03)->S01F0_1(1,6,09) OK      S01F0_1(5,7,05)->FPC04FE2TQ2(03) OK
FPC04FE3TQ3(03)->S01F0_1(1,7,09) OK      S01F0_1(5,6,05)->FPC04FE3TQ3(03) OK
FPC05FE0TQ0(03)->S01F0_1(1,0,09) OK      S01F0_1(5,1,05)->FPC05FE0TQ0(03) OK
```

```
FPC05FE1TQ1(03)->S01F0_1(1,1,09) OK      S01F0_1(5,0,05)->FPC05FE1TQ1(03) OK
FPC05FE2TQ2(03)->S01F0_1(1,2,09) OK      S01F0_1(5,3,05)->FPC05FE2TQ2(03) OK
FPC05FE3TQ3(03)->S01F0_1(1,3,09) OK      S01F0_1(5,2,05)->FPC05FE3TQ3(03) OK
FPC06FE0TQ0(03)->S01F0_1(0,4,08) Down    S01F0_1(4,7,04)->FPC06FE0TQ0(03) Down
FPC06FE1TQ1(03)->S01F0_1(0,5,08) Down    S01F0_1(4,0,04)->FPC06FE1TQ1(03) Down
FPC06FE2TQ2(03)->S01F0_1(0,6,08) Down    S01F0_1(4,6,04)->FPC06FE2TQ2(03) Down
FPC06FE3TQ3(03)->S01F0_1(0,7,08) Down    S01F0_1(4,1,04)->FPC06FE3TQ3(03) Down
FPC07FE0TQ0(03)->S01F0_1(0,0,08) Down    S01F0_1(4,3,04)->FPC07FE0TQ0(03) Down
FPC07FE1TQ1(03)->S01F0_1(0,1,08) Down    S01F0_1(4,4,04)->FPC07FE1TQ1(03) Down
FPC07FE2TQ2(03)->S01F0_1(0,2,08) Down    S01F0_1(4,2,04)->FPC07FE2TQ2(03) Down
FPC07FE3TQ3(03)->S01F0_1(0,3,08) Down    S01F0_1(4,5,04)->FPC07FE3TQ3(03) Down
```

show chassis fabric topology (PTX10016 Router)

```
user@host> show chassis fabric topology

             In-link  : FPC# FE# (TX inst#, TX sub-chnl #) ->
                        SIB# ASIC#_FCORE# (RX port#,RX sub-chn#, RX inst#)

             Out-link : SIB# ASIC#_FCORE#(TX port#, TX sub-chn#, TX inst#) ->
                        FPC# FE# (RX inst#, RX sub-chnl #)
            SIB 0 FCHIP 0 FCORE 0 :
            -----------------------
                      In-links              State            Out-links              State
            ------------------------------------------------------------------------------
            FPC00FE1(0,05)->S00F0_0(46,0,46) DOWN      S00F0_0(46,0,46)->FPC00FE1(0,05) FAULT
            FPC00FE1(0,07)->S00F0_0(46,1,46) UP      S00F0_0(46,1,46)->FPC00FE1(0,07) UP

user@host> show chassis fabric topology
 In-link  : FPC# FE# ASIC# (TX inst#, TX sub-chnl #) ->
            SIB# ASIC#_FCORE# (RX port#, RX sub-chn#, RX inst#)

 Out-link : SIB# ASIC#_FCORE# (TX port#, TX sub-chn#, TX inst#) ->
            FPC# FE# ASIC# (RX inst#, RX sub-chnl #)
SIB 0 FCHIP 0 FCORE 0 :
-----------------------
          In-links              State            Out-links              State
--------------------------------------------------------------------------------
FPC00FE0(1,17)->S00F0_0(01,0,01) OK      S00F0_0(00,0,00)->FPC00FE0(1,09) OK
FPC00FE0(1,09)->S00F0_0(02,0,02) OK      S00F0_0(00,1,00)->FPC00FE0(1,17) OK
FPC00FE0(1,07)->S00F0_0(02,2,02) OK      S00F0_0(00,2,00)->FPC00FE0(1,07) OK
```

```
FPC00FE1(1,12)->S00F0_0(01,1,01) OK      S00F0_0(00,3,00)->FPC00FE1(1,06) OK
FPC00FE1(1,06)->S00F0_0(01,2,01) OK      S00F0_0(01,1,01)->FPC00FE1(1,12) OK
FPC00FE1(1,10)->S00F0_0(01,3,01) OK      S00F0_0(01,3,01)->FPC00FE1(1,10) OK
FPC00FE2(1,16)->S00F0_0(00,4,00) OK      S00F0_0(00,4,00)->FPC00FE2(1,08) OK
FPC00FE2(1,08)->S00F0_0(01,6,01) OK      S00F0_0(00,5,00)->FPC00FE2(1,16) OK
FPC00FE2(1,06)->S00F0_0(01,7,01) OK      S00F0_0(00,6,00)->FPC00FE2(1,06) OK
FPC05FE0(1,07)->S00F0_0(05,5,05) OK      S00F0_0(05,2,05)->FPC05FE0(1,17) OK
FPC05FE0(1,09)->S00F0_0(05,7,05) OK      S00F0_0(06,4,06)->FPC05FE0(1,07) OK
FPC05FE0(1,17)->S00F0_0(09,3,09) OK      S00F0_0(06,7,06)->FPC05FE0(1,09) OK
FPC05FE1(1,06)->S00F0_0(06,1,06) OK      S00F0_0(06,0,06)->FPC05FE1(1,06) OK
FPC05FE1(1,08)->S00F0_0(06,3,06) OK      S00F0_0(06,2,06)->FPC05FE1(1,08) OK
FPC05FE1(1,16)->S00F0_0(09,7,09) OK      S00F0_0(09,6,09)->FPC05FE1(1,16) OK
FPC05FE2(1,10)->S00F0_0(09,0,09) OK      S00F0_0(05,0,05)->FPC05FE2(1,06) OK
FPC05FE2(1,06)->S00F0_0(09,1,09) OK      S00F0_0(05,1,05)->FPC05FE2(1,10) OK
FPC05FE2(1,12)->S00F0_0(09,2,09) OK      S00F0_0(05,3,05)->FPC05FE2(1,12) OK
FPC05FE3(1,11)->S00F0_0(09,4,09) OK      S00F0_0(09,4,09)->FPC05FE3(1,07) OK
FPC05FE3(1,07)->S00F0_0(09,5,09) OK      S00F0_0(09,5,09)->FPC05FE3(1,11) OK
FPC05FE3(1,13)->S00F0_0(09,6,09) OK      S00F0_0(09,7,09)->FPC05FE3(1,13) OK
FPC05FE4(1,16)->S00F0_0(05,3,05) OK      S00F0_0(05,4,05)->FPC05FE4(1,06) OK
FPC05FE4(1,06)->S00F0_0(06,5,06) OK      S00F0_0(05,6,05)->FPC05FE4(1,08) OK
FPC05FE4(1,08)->S00F0_0(06,7,06) OK      S00F0_0(09,2,09)->FPC05FE4(1,16) OK
FPC05FE5(1,10)->S00F0_0(05,0,05) OK      S00F0_0(09,0,09)->FPC05FE5(1,06) OK
FPC05FE5(1,06)->S00F0_0(05,1,05) OK      S00F0_0(09,1,09)->FPC05FE5(1,10) OK
FPC05FE5(1,12)->S00F0_0(05,2,05) OK      S00F0_0(09,3,09)->FPC05FE5(1,12) OK
FPC06FE0(1,17)->S00F0_0(05,6,05) OK      S00F0_0(06,6,06)->FPC06FE0(1,17) OK
FPC06FE0(1,07)->S00F0_0(07,0,07) OK      S00F0_0(08,0,08)->FPC06FE0(1,07) OK
FPC06FE0(1,09)->S00F0_0(07,2,07) OK      S00F0_0(08,2,08)->FPC06FE0(1,09) OK
FPC06FE1(1,16)->S00F0_0(06,2,06) OK      S00F0_0(06,3,06)->FPC06FE1(1,16) OK
FPC06FE1(1,06)->S00F0_0(07,4,07) OK      S00F0_0(07,4,07)->FPC06FE1(1,06) OK
FPC06FE1(1,08)->S00F0_0(07,6,07) OK      S00F0_0(07,6,07)->FPC06FE1(1,08) OK
FPC06FE2(1,06)->S00F0_0(05,4,05) OK      S00F0_0(06,5,06)->FPC06FE2(1,06) OK
FPC06FE2(1,10)->S00F0_0(07,1,07) OK      S00F0_0(08,1,08)->FPC06FE2(1,10) OK
FPC06FE2(1,12)->S00F0_0(07,3,07) OK      S00F0_0(08,3,08)->FPC06FE2(1,12) OK
FPC06FE3(1,07)->S00F0_0(06,0,06) OK      S00F0_0(06,1,06)->FPC06FE3(1,07) OK
FPC06FE3(1,11)->S00F0_0(07,5,07) OK      S00F0_0(07,5,07)->FPC06FE3(1,11) OK
FPC06FE3(1,13)->S00F0_0(07,7,07) OK      S00F0_0(07,7,07)->FPC06FE3(1,13) OK
FPC06FE4(1,16)->S00F0_0(06,6,06) OK      S00F0_0(05,7,05)->FPC06FE4(1,16) OK
FPC06FE4(1,06)->S00F0_0(08,0,08) OK      S00F0_0(07,0,07)->FPC06FE4(1,06) OK
FPC06FE4(1,08)->S00F0_0(08,2,08) OK      S00F0_0(07,2,07)->FPC06FE4(1,08) OK
FPC06FE5(1,06)->S00F0_0(06,4,06) OK      S00F0_0(05,5,05)->FPC06FE5(1,06) OK
FPC06FE5(1,10)->S00F0_0(08,1,08) OK      S00F0_0(07,1,07)->FPC06FE5(1,10) OK
FPC06FE5(1,12)->S00F0_0(08,3,08) OK      S00F0_0(07,3,07)->FPC06FE5(1,12) OK
...
```

```
...
FPC15FE5(1,01)->S01F0_0(08,3,08) OK      S01F0_0(07,3,07)->FPC06FE5(1,01) OK

SIB 0 FCHIP 1 FCORE 0 :
-----------------------
          In-links               State             Out-links              State
--------------------------------------------------------------------------------
FPC00FE0(1,15)->S00F1_0(15,4,15) OK      S00F1_0(16,4,16)->FPC00FE0(1,15) OK
FPC00FE0(1,11)->S00F1_0(17,4,17) OK      S00F1_0(18,4,18)->FPC00FE0(1,11) OK
FPC00FE0(1,13)->S00F1_0(17,6,17) OK      S00F1_0(18,6,18)->FPC00FE0(1,13) OK
FPC00FE1(1,08)->S00F1_0(15,6,15) OK      S00F1_0(16,6,16)->FPC00FE1(1,08) OK
FPC00FE1(1,14)->S00F1_0(17,5,17) OK      S00F1_0(18,5,18)->FPC00FE1(1,14) OK
FPC00FE1(1,16)->S00F1_0(17,7,17) OK      S00F1_0(18,7,18)->FPC00FE1(1,16) OK
FPC00FE2(1,14)->S00F1_0(16,0,16) OK      S00F1_0(16,0,16)->FPC00FE2(1,14) OK
FPC00FE2(1,10)->S00F1_0(18,0,18) OK      S00F1_0(18,0,18)->FPC00FE2(1,10) OK
FPC00FE2(1,12)->S00F1_0(18,2,18) OK      S00F1_0(18,2,18)->FPC00FE2(1,12) OK
FPC05FE0(1,11)->S00F1_0(02,0,02) OK      S00F1_0(02,1,02)->FPC05FE0(1,13) OK
FPC05FE0(1,13)->S00F1_0(02,2,02) OK      S00F1_0(02,3,02)->FPC05FE0(1,11) OK
FPC05FE0(1,15)->S00F1_0(04,7,04) OK      S00F1_0(03,6,03)->FPC05FE0(1,15) OK
FPC05FE1(1,10)->S00F1_0(02,4,02) OK      S00F1_0(02,5,02)->FPC05FE1(1,12) OK
FPC05FE1(1,12)->S00F1_0(02,6,02) OK      S00F1_0(02,7,02)->FPC05FE1(1,10) OK
FPC05FE1(1,14)->S00F1_0(04,3,04) OK      S00F1_0(04,2,04)->FPC05FE1(1,14) OK
FPC05FE2(1,16)->S00F1_0(04,4,04) OK      S00F1_0(03,4,03)->FPC05FE2(1,08) OK
FPC05FE2(1,08)->S00F1_0(04,5,04) OK      S00F1_0(03,5,03)->FPC05FE2(1,16) OK
FPC05FE2(1,14)->S00F1_0(04,6,04) OK      S00F1_0(03,7,03)->FPC05FE2(1,14) OK
FPC05FE3(1,17)->S00F1_0(04,0,04) OK      S00F1_0(04,0,04)->FPC05FE3(1,09) OK
FPC05FE3(1,09)->S00F1_0(04,1,04) OK      S00F1_0(04,1,04)->FPC05FE3(1,17) OK
FPC05FE3(1,15)->S00F1_0(04,2,04) OK      S00F1_0(04,3,04)->FPC05FE3(1,15) OK
FPC05FE4(1,10)->S00F1_0(03,0,03) OK      S00F1_0(03,1,03)->FPC05FE4(1,12) OK
FPC05FE4(1,12)->S00F1_0(03,2,03) OK      S00F1_0(03,3,03)->FPC05FE4(1,10) OK
FPC05FE4(1,14)->S00F1_0(03,7,03) OK      S00F1_0(04,6,04)->FPC05FE4(1,14) OK
FPC05FE5(1,16)->S00F1_0(03,4,03) OK      S00F1_0(04,4,04)->FPC05FE5(1,08) OK
FPC05FE5(1,08)->S00F1_0(03,5,03) OK      S00F1_0(04,5,04)->FPC05FE5(1,16) OK
FPC05FE5(1,14)->S00F1_0(03,6,03) OK      S00F1_0(04,7,04)->FPC05FE5(1,14) OK
FPC06FE0(1,15)->S00F1_0(01,0,01) OK      S00F1_0(00,3,00)->FPC06FE0(1,15) OK
FPC06FE0(1,11)->S00F1_0(02,1,02) OK      S00F1_0(01,0,01)->FPC06FE0(1,13) OK
FPC06FE0(1,13)->S00F1_0(02,3,02) OK      S00F1_0(01,2,01)->FPC06FE0(1,11) OK
FPC06FE1(1,14)->S00F1_0(01,4,01) OK      S00F1_0(00,7,00)->FPC06FE1(1,14) OK
FPC06FE1(1,10)->S00F1_0(02,5,02) OK      S00F1_0(01,4,01)->FPC06FE1(1,12) OK
FPC06FE1(1,12)->S00F1_0(02,7,02) OK      S00F1_0(01,6,01)->FPC06FE1(1,10) OK
FPC06FE2(1,08)->S00F1_0(01,2,01) OK      S00F1_0(00,1,00)->FPC06FE2(1,08) OK
FPC06FE2(1,16)->S00F1_0(15,0,15) OK      S00F1_0(01,5,01)->FPC06FE2(1,16) OK
FPC06FE2(1,14)->S00F1_0(15,2,15) OK      S00F1_0(01,7,01)->FPC06FE2(1,14) OK
```

```
FPC06FE3(1,09)->S00F1_0(01,6,01) OK      S00F1_0(00,5,00)->FPC06FE3(1,09) OK
FPC06FE3(1,17)->S00F1_0(19,4,19) OK      S00F1_0(02,4,02)->FPC06FE3(1,17) OK
FPC06FE3(1,15)->S00F1_0(19,6,19) OK      S00F1_0(02,6,02)->FPC06FE3(1,15) OK
FPC06FE4(1,14)->S00F1_0(01,7,01) OK      S00F1_0(01,3,01)->FPC06FE4(1,14) OK
FPC06FE4(1,10)->S00F1_0(03,1,03) OK      S00F1_0(02,0,02)->FPC06FE4(1,12) OK
FPC06FE4(1,12)->S00F1_0(03,3,03) OK      S00F1_0(02,2,02)->FPC06FE4(1,10) OK
FPC06FE5(1,08)->S00F1_0(01,5,01) OK      S00F1_0(01,1,01)->FPC06FE5(1,08) OK
FPC06FE5(1,16)->S00F1_0(19,0,19) OK      S00F1_0(03,0,03)->FPC06FE5(1,16) OK
FPC06FE5(1,14)->S00F1_0(19,2,19) OK      S00F1_0(03,2,03)->FPC06FE5(1,14) OK
...
...
FPC15FE5(1,01)->S01F0_0(08,3,08) OK      S01F0_0(07,3,07)->FPC06FE5(1,01) OK

SIB 1 FCHIP 0 FCORE 0 :
-----------------------
          In-links               State             Out-links               State
--------------------------------------------------------------------------------
FPC00FE0(1,05)->S01F0_0(01,0,01) OK      S01F0_0(00,0,00)->FPC00FE0(0,01) OK
FPC00FE0(0,01)->S01F0_0(02,0,02) OK      S01F0_0(00,1,00)->FPC00FE0(1,05) OK
FPC00FE0(0,07)->S01F0_0(02,2,02) OK      S01F0_0(00,2,00)->FPC00FE0(0,07) OK
FPC00FE1(1,04)->S01F0_0(00,4,00) OK      S01F0_0(00,4,00)->FPC00FE1(0,00) OK
FPC00FE1(0,00)->S01F0_0(01,6,01) OK      S01F0_0(00,5,00)->FPC00FE1(1,04) OK
FPC00FE1(0,06)->S01F0_0(01,7,01) OK      S01F0_0(00,6,00)->FPC00FE1(0,06) OK
FPC00FE2(1,01)->S01F0_0(01,1,01) OK      S01F0_0(00,3,00)->FPC00FE2(0,06) OK
FPC00FE2(0,06)->S01F0_0(01,2,01) OK      S01F0_0(01,1,01)->FPC00FE2(1,01) OK
FPC00FE2(1,00)->S01F0_0(01,3,01) OK      S01F0_0(01,3,01)->FPC00FE2(1,00) OK
FPC05FE0(0,07)->S01F0_0(05,5,05) OK      S01F0_0(05,2,05)->FPC05FE0(1,05) OK
FPC05FE0(0,01)->S01F0_0(05,7,05) OK      S01F0_0(06,4,06)->FPC05FE0(0,07) OK
FPC05FE0(1,05)->S01F0_0(09,3,09) OK      S01F0_0(06,7,06)->FPC05FE0(0,01) OK
FPC05FE1(1,00)->S01F0_0(09,0,09) OK      S01F0_0(05,0,05)->FPC05FE1(0,06) OK
FPC05FE1(0,06)->S01F0_0(09,1,09) OK      S01F0_0(05,1,05)->FPC05FE1(1,00) OK
FPC05FE1(1,01)->S01F0_0(09,2,09) OK      S01F0_0(05,3,05)->FPC05FE1(1,01) OK
FPC05FE2(0,06)->S01F0_0(06,1,06) OK      S01F0_0(06,0,06)->FPC05FE2(0,06) OK
FPC05FE2(0,00)->S01F0_0(06,3,06) OK      S01F0_0(06,2,06)->FPC05FE2(0,00) OK
FPC05FE2(1,04)->S01F0_0(09,7,09) OK      S01F0_0(09,6,09)->FPC05FE2(1,04) OK
FPC05FE3(1,00)->S01F0_0(09,4,09) OK      S01F0_0(09,4,09)->FPC05FE3(0,06) OK
FPC05FE3(0,06)->S01F0_0(09,5,09) OK      S01F0_0(09,5,09)->FPC05FE3(1,00) OK
FPC05FE3(1,01)->S01F0_0(09,6,09) OK      S01F0_0(09,7,09)->FPC05FE3(1,01) OK
FPC05FE4(0,04)->S01F0_0(05,3,05) OK      S01F0_0(05,4,05)->FPC05FE4(0,14) OK
FPC05FE4(0,14)->S01F0_0(06,5,06) OK      S01F0_0(05,6,05)->FPC05FE4(0,16) OK
FPC05FE4(0,16)->S01F0_0(06,7,06) OK      S01F0_0(09,2,09)->FPC05FE4(0,04) OK
FPC05FE5(1,00)->S01F0_0(05,0,05) OK      S01F0_0(09,0,09)->FPC05FE5(0,06) OK
FPC05FE5(0,06)->S01F0_0(05,1,05) OK      S01F0_0(09,1,09)->FPC05FE5(1,00) OK
```

```
FPC05FE5(1,01)->S01F0_0(05,2,05) OK      S01F0_0(09,3,09)->FPC05FE5(1,01) OK
FPC06FE0(1,05)->S01F0_0(05,6,05) OK      S01F0_0(06,6,06)->FPC06FE0(1,05) OK
FPC06FE0(0,07)->S01F0_0(07,0,07) OK      S01F0_0(08,0,08)->FPC06FE0(0,07) OK
FPC06FE0(0,01)->S01F0_0(07,2,07) OK      S01F0_0(08,2,08)->FPC06FE0(0,01) OK
FPC06FE1(0,06)->S01F0_0(05,4,05) OK      S01F0_0(06,5,06)->FPC06FE1(0,06) OK
FPC06FE1(1,00)->S01F0_0(07,1,07) OK      S01F0_0(08,1,08)->FPC06FE1(1,00) OK
FPC06FE1(1,01)->S01F0_0(07,3,07) OK      S01F0_0(08,3,08)->FPC06FE1(1,01) OK
FPC06FE2(1,04)->S01F0_0(06,2,06) OK      S01F0_0(06,3,06)->FPC06FE2(1,04) OK
FPC06FE2(0,06)->S01F0_0(07,4,07) OK      S01F0_0(07,4,07)->FPC06FE2(0,06) OK
FPC06FE2(0,00)->S01F0_0(07,6,07) OK      S01F0_0(07,6,07)->FPC06FE2(0,00) OK
FPC06FE3(0,06)->S01F0_0(06,0,06) OK      S01F0_0(06,1,06)->FPC06FE3(0,06) OK
FPC06FE3(1,00)->S01F0_0(07,5,07) OK      S01F0_0(07,5,07)->FPC06FE3(1,00) OK
FPC06FE3(1,01)->S01F0_0(07,7,07) OK      S01F0_0(07,7,07)->FPC06FE3(1,01) OK
FPC06FE4(0,04)->S01F0_0(06,6,06) OK      S01F0_0(05,7,05)->FPC06FE4(0,04) OK
FPC06FE4(0,14)->S01F0_0(08,0,08) OK      S01F0_0(07,0,07)->FPC06FE4(0,14) OK
FPC06FE4(0,16)->S01F0_0(08,2,08) OK      S01F0_0(07,2,07)->FPC06FE4(0,16) OK
FPC06FE5(0,06)->S01F0_0(06,4,06) OK      S01F0_0(05,5,05)->FPC06FE5(0,06) OK
FPC06FE5(1,00)->S01F0_0(08,1,08) OK      S01F0_0(07,1,07)->FPC06FE5(1,00) OK
FPC06FE5(1,01)->S01F0_0(08,3,08) OK      S01F0_0(07,3,07)->FPC06FE5(1,01) OK
...
...
FPC15FE5(1,01)->S01F0_0(08,3,08) OK      S01F0_0(07,3,07)->FPC06FE5(1,01) OK

SIB 1 FCHIP 1 FCORE 0 :
-----------------------
          In-links               State             Out-links              State
--------------------------------------------------------------------------------
FPC00FE0(1,03)->S01F1_0(15,4,15) OK      S01F1_0(16,4,16)->FPC00FE0(1,03) OK
FPC00FE0(0,02)->S01F1_0(17,4,17) OK      S01F1_0(18,4,18)->FPC00FE0(0,02) OK
FPC00FE0(0,03)->S01F1_0(17,6,17) OK      S01F1_0(18,6,18)->FPC00FE0(0,03) OK
FPC00FE1(1,02)->S01F1_0(16,0,16) OK      S01F1_0(16,0,16)->FPC00FE1(1,02) OK
FPC00FE1(1,00)->S01F1_0(18,0,18) OK      S01F1_0(18,0,18)->FPC00FE1(1,00) OK
FPC00FE1(1,01)->S01F1_0(18,2,18) OK      S01F1_0(18,2,18)->FPC00FE1(1,01) OK
FPC00FE2(0,00)->S01F1_0(15,6,15) OK      S01F1_0(16,6,16)->FPC00FE2(0,00) OK
FPC00FE2(1,02)->S01F1_0(17,5,17) OK      S01F1_0(18,5,18)->FPC00FE2(1,02) OK
FPC00FE2(1,04)->S01F1_0(17,7,17) OK      S01F1_0(18,7,18)->FPC00FE2(1,04) OK
FPC05FE0(0,02)->S01F1_0(02,0,02) OK      S01F1_0(02,1,02)->FPC05FE0(0,03) OK
FPC05FE0(0,03)->S01F1_0(02,2,02) OK      S01F1_0(02,3,02)->FPC05FE0(0,02) OK
FPC05FE0(1,03)->S01F1_0(04,7,04) OK      S01F1_0(03,6,03)->FPC05FE0(1,03) OK
FPC05FE1(1,04)->S01F1_0(04,4,04) OK      S01F1_0(03,4,03)->FPC05FE1(0,00) OK
FPC05FE1(0,00)->S01F1_0(04,5,04) OK      S01F1_0(03,5,03)->FPC05FE1(1,04) OK
FPC05FE1(1,02)->S01F1_0(04,6,04) OK      S01F1_0(03,7,03)->FPC05FE1(1,02) OK
FPC05FE2(1,00)->S01F1_0(02,4,02) OK      S01F1_0(02,5,02)->FPC05FE2(1,01) OK
```

```
FPC05FE2(1,01)->S01F1_0(02,6,02) OK      S01F1_0(02,7,02)->FPC05FE2(1,00) OK
FPC05FE2(1,02)->S01F1_0(04,3,04) OK      S01F1_0(04,2,04)->FPC05FE2(1,02) OK
FPC05FE3(1,04)->S01F1_0(04,0,04) OK      S01F1_0(04,0,04)->FPC05FE3(0,00) OK
FPC05FE3(0,00)->S01F1_0(04,1,04) OK      S01F1_0(04,1,04)->FPC05FE3(1,04) OK
FPC05FE3(1,02)->S01F1_0(04,2,04) OK      S01F1_0(04,3,04)->FPC05FE3(1,02) OK
FPC05FE4(0,10)->S01F1_0(03,0,03) OK      S01F1_0(03,1,03)->FPC05FE4(0,12) OK
FPC05FE4(0,12)->S01F1_0(03,2,03) OK      S01F1_0(03,3,03)->FPC05FE4(0,10) OK
FPC05FE4(0,08)->S01F1_0(03,7,03) OK      S01F1_0(04,6,04)->FPC05FE4(0,08) OK
FPC05FE5(1,04)->S01F1_0(03,4,03) OK      S01F1_0(04,4,04)->FPC05FE5(0,00) OK
FPC05FE5(0,00)->S01F1_0(03,5,03) OK      S01F1_0(04,5,04)->FPC05FE5(1,04) OK
FPC05FE5(1,02)->S01F1_0(03,6,03) OK      S01F1_0(04,7,04)->FPC05FE5(1,02) OK
FPC06FE0(1,03)->S01F1_0(01,0,01) OK      S01F1_0(00,3,00)->FPC06FE0(1,03) OK
FPC06FE0(0,02)->S01F1_0(02,1,02) OK      S01F1_0(01,0,01)->FPC06FE0(0,03) OK
FPC06FE0(0,03)->S01F1_0(02,3,02) OK      S01F1_0(01,2,01)->FPC06FE0(0,02) OK
FPC06FE1(0,00)->S01F1_0(01,2,01) OK      S01F1_0(00,1,00)->FPC06FE1(0,00) OK
FPC06FE1(1,04)->S01F1_0(15,0,15) OK      S01F1_0(01,5,01)->FPC06FE1(1,04) OK
FPC06FE1(1,02)->S01F1_0(15,2,15) OK      S01F1_0(01,7,01)->FPC06FE1(1,02) OK
FPC06FE2(1,02)->S01F1_0(01,4,01) OK      S01F1_0(00,7,00)->FPC06FE2(1,02) OK
FPC06FE2(1,00)->S01F1_0(02,5,02) OK      S01F1_0(01,4,01)->FPC06FE2(1,01) OK
FPC06FE2(1,01)->S01F1_0(02,7,02) OK      S01F1_0(01,6,01)->FPC06FE2(1,00) OK
FPC06FE3(0,00)->S01F1_0(01,6,01) OK      S01F1_0(00,5,00)->FPC06FE3(0,00) OK
FPC06FE3(1,04)->S01F1_0(19,4,19) OK      S01F1_0(02,4,02)->FPC06FE3(1,04) OK
FPC06FE3(1,02)->S01F1_0(19,6,19) OK      S01F1_0(02,6,02)->FPC06FE3(1,02) OK
FPC06FE4(0,08)->S01F1_0(01,7,01) OK      S01F1_0(01,3,01)->FPC06FE4(0,08) OK
FPC06FE4(0,10)->S01F1_0(03,1,03) OK      S01F1_0(02,0,02)->FPC06FE4(0,12) OK
FPC06FE4(0,12)->S01F1_0(03,3,03) OK      S01F1_0(02,2,02)->FPC06FE4(0,10) OK
FPC06FE5(0,00)->S01F1_0(01,5,01) OK      S01F1_0(01,1,01)->FPC06FE5(0,00) OK
FPC06FE5(1,04)->S01F1_0(19,0,19) OK      S01F1_0(03,0,03)->FPC06FE5(1,04) OK
FPC06FE5(1,02)->S01F1_0(19,2,19) OK      S01F1_0(03,2,03)->FPC06FE5(1,02) OK
...
...
FPC15FE5(1,01)->S01F0_0(08,3,08) OK      S01F0_0(07,3,07)->FPC06FE5(1,01) OK

SIB 2
Not Online

SIB 3
Not Online

SIB 4
Not Online
```

```
SIB 5
Not Online
```

show chassis fabric topology (QFX10008 Switch)

```
user@host> show chassis fabric topology
 In-link  : FPC# FE# ASIC# (TX inst#, TX sub-chnl #) ->
            SIB# ASIC#_FCORE# (RX port#, RX sub-chn#, RX inst#)

 Out-link : SIB# ASIC#_FCORE# (TX port#, TX sub-chn#, TX inst#) ->
            FPC# FE# ASIC# (RX inst#, RX sub-chnl #)
SIB 0 FCHIP 0 FCORE 0 :
-----------------------
          In-links               State             Out-links              State
--------------------------------------------------------------------------------
FPC00FE0(1,17)->S00F0_0(01,0,01) OK      S00F0_0(00,0,00)->FPC00FE0(1,09) OK
FPC00FE0(1,09)->S00F0_0(02,0,02) OK      S00F0_0(00,1,00)->FPC00FE0(1,17) OK
FPC00FE0(1,07)->S00F0_0(02,2,02) OK      S00F0_0(00,2,00)->FPC00FE0(1,07) OK
FPC00FE1(1,12)->S00F0_0(01,1,01) OK      S00F0_0(00,3,00)->FPC00FE1(1,06) OK
FPC00FE1(1,06)->S00F0_0(01,2,01) OK      S00F0_0(01,1,01)->FPC00FE1(1,12) OK
FPC00FE1(1,10)->S00F0_0(01,3,01) OK      S00F0_0(01,3,01)->FPC00FE1(1,10) OK
FPC00FE2(1,16)->S00F0_0(00,4,00) OK      S00F0_0(00,4,00)->FPC00FE2(1,08) OK
FPC00FE2(1,08)->S00F0_0(01,6,01) OK      S00F0_0(00,5,00)->FPC00FE2(1,16) OK
FPC00FE2(1,06)->S00F0_0(01,7,01) OK      S00F0_0(00,6,00)->FPC00FE2(1,06) OK

SIB 0 FCHIP 1 FCORE 0 :
-----------------------
          In-links               State             Out-links              State
--------------------------------------------------------------------------------
FPC00FE0(1,15)->S00F1_0(15,4,15) OK      S00F1_0(16,4,16)->FPC00FE0(1,15) OK
FPC00FE0(1,11)->S00F1_0(17,4,17) OK      S00F1_0(18,4,18)->FPC00FE0(1,11) OK
FPC00FE0(1,13)->S00F1_0(17,6,17) OK      S00F1_0(18,6,18)->FPC00FE0(1,13) OK
FPC00FE1(1,08)->S00F1_0(15,6,15) OK      S00F1_0(16,6,16)->FPC00FE1(1,08) OK
FPC00FE1(1,14)->S00F1_0(17,5,17) OK      S00F1_0(18,5,18)->FPC00FE1(1,14) OK
FPC00FE1(1,16)->S00F1_0(17,7,17) OK      S00F1_0(18,7,18)->FPC00FE1(1,16) OK
FPC00FE2(1,14)->S00F1_0(16,0,16) OK      S00F1_0(16,0,16)->FPC00FE2(1,14) OK
FPC00FE2(1,10)->S00F1_0(18,0,18) OK      S00F1_0(18,0,18)->FPC00FE2(1,10) OK
FPC00FE2(1,12)->S00F1_0(18,2,18) OK      S00F1_0(18,2,18)->FPC00FE2(1,12) OK

SIB 1
Not Online
```

```
SIB 2
Not Online

SIB 3
Not Online

SIB 4
Not Online

SIB 5
Not Online
```

Release Information

Command introduced before Junos OS Release 7.4.

`sfc` option introduced for the TX Matrix Plus router in Junos OS Release 9.6.

RELATED DOCUMENTATION

No Link Title

show chassis fabric unreachable-destinations

IN THIS SECTION

- Syntax | **1288**
- Description | **1288**
- Required Privilege Level | **1288**
- Output Fields | **1288**
- Sample Output | **1289**
- Release Information | **1291**

Syntax

```
show chassis fabric unreachable-destinations
```

Description

(M320 and T Series routers only) Display the list of destinations that have transitioned from a reachable state to an unreachable state.

Required Privilege Level

view

Output Fields

The table lists the output fields for the `show chassis fabric unreachable-destinations` command. Output fields are listed in the approximate order in which they appear.

Table 74: show chassis fabric unreachable-destinations Output Fields

Field Name	Field Description
Flexible PIC Concentrator (FPC) number	Source FPC number where unreachable destinations are present.
Packet Forwarding Engine number	Source Packet Forwarding Engine number where unreachable destinations are present.
Destination error on Packet Forwarding Engine	List of destination FPCs *FPC number*/Packet Forwarding Engines *Packet Forwarding Engine number* that are not reachable from the source FPCs *FPC number*/Packet Forwarding Engines *Packet Forwarding Engine number* over the fabric.

Sample Output

show chassis fabric unreachable-destinations(T640 and T1600 routers)

```
user@host> show chassis fabric unreachable-destinations
Fabric management unreachable destinations:
FPC 2
  PFE 0
      Destination error on PFEs    2/0 3/0 3/1 7/0
FPC 3
  PFE 0
      Destination error on PFEs    2/0 3/0 3/1 7/0
FPC 3
  PFE 1
      Destination error on PFEs    2/0 3/0 3/1 7/0
FPC 7
  PFE 0
      Destination error on PFEs    2/0 3/0 3/1 7/0
```

show chassis fabric unreachable-destinations(TX Matrix routers)

```
user@host> show chassis fabric unreachable-destinations
Fabric management unreachable destinations:
FPC 10
  PFE 0
      Destination error on PFEs    10/0 16/0 16/1 17/0 17/1 19/0 20/1 21/1 22/1 24/0
       26/0 27/0 27/1 28/1 29/1 31/1
FPC 12
  PFE 0
      Destination error on PFEs    12/0 16/0 16/1 17/0 17/1 19/0 20/1 21/1 22/1 24/0
       26/0 27/0 27/1 28/1 29/1 31/1
FPC 16
  PFE 0
      Destination error on PFEs    10/0 12/0
FPC 16
  PFE 1
      Destination error on PFEs    10/0 12/0
FPC 17
  PFE 0
```

```
      Destination error on PFEs    10/0 12/0
FPC 17
  PFE 1
      Destination error on PFEs    10/0 12/0
FPC 19
  PFE 0
      Destination error on PFEs    10/0 12/0
FPC 20
  PFE 1
      Destination error on PFEs    10/0 12/0
FPC 21
  PFE 1
      Destination error on PFEs    10/0 12/0
FPC 22
  PFE 1
      Destination error on PFEs    10/0 12/0
FPC 24
  PFE 0
      Destination error on PFEs    10/0 12/0
FPC 26
  PFE 0
      Destination error on PFEs    10/0 12/0
FPC 27
  PFE 0
      Destination error on PFEs    10/0 12/0
FPC 27
  PFE 1
      Destination error on PFEs    10/0
FPC 28
  PFE 1
      Destination error on PFEs    10/0 12/0
FPC 29
  PFE 1
      Destination error on PFEs    10/0 12/0
FPC 31
  PFE 1
      Destination error on PFEs    10/0 12/0
```

Release Information

Command introduced before Junos OS Release 11.4.

RELATED DOCUMENTATION

show chassis fabric reachability | 1203

show chassis fan

IN THIS SECTION

- Syntax | 1291
- Syntax (MX Series Routers) | 1292
- Syntax (MX104, MX204, MX2010, MX2020, MX2008, and MX10003 Universal Routing Platform) | 1292
- Syntax (QFX Series) | 1292
- Syntax (TX Matrix Router) | 1292
- Syntax (TX Matrix Plus Router) | 1292
- Description | 1293
- Options | 1293
- Required Privilege Level | 1294
- Output Fields | 1294
- Sample Output | 1295
- Release Information | 1309

Syntax

```
show chassis fan
```

Syntax (MX Series Routers)

```
show chassis fan
<all-members>
<local>
<member member-id>
```

Syntax (MX104, MX204, MX2010, MX2020, MX2008, and MX10003 Universal Routing Platform)

```
show chassis fan
<satellite [slot-id slot-id |device-alias alias-name]>
```

Syntax (QFX Series)

```
show chassis fan
<interconnect-device name>
```

Syntax (TX Matrix Router)

```
show chassis fan
<lcc number | scc>
```

Syntax (TX Matrix Plus Router)

```
show chassis fan
<lcc number | sfc number>
```

Description

(T Series routers, TX Matrix routers, TX Matrix Plus routers, M120 routers, M320 routers, MX104 routers, MX2010 routers, MX2020 routers, MX2008 routers, MX Series 5G Universal Routing Platforms, QFX3008-I Interconnect devices, QFX Series, OCX Series, EX Series switches, and PTX Series Packet Transport Routers only) Show information about the fan tray and fans.

Options

all-members (MX Series routers only) (Optional) Display information about the fan tray and fans for all members of the Virtual Chassis configuration.

local (MX Series routers only) (Optional) Display information about the fan tray and fans for the local Virtual Chassis member.

member *member-id* (MX Series routers only) (Optional) Display information about the fan tray and fans for the specified member of the Virtual Chassis configuration. For an MX Series Virtual Chassis, replace *member-id* variable with a value 0 or 1.

interconnect-device *name* (QFX3000-G QFabric systems only) (Optional) Display information about the fan tray and fans for the specified QFX3008-I Interconnect device.

lcc *number* (TX Matrix and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display information about the fan tray and fans for the specified T640 router (line-card chassis) that is connected to a TX Matrix router. On a TX Matrix Plus router, display information about the fan tray and fans for the specified router (line-card chassis) that is connected to a TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

satellite [slot-id *slot-id* | device-alias *alias-name*]	(Junos Fusion only) (Optional) Display information about the fan tray and fans for the specified satellite device or devices in a Junos Fusion, or for all satellite devices if no satellite devices are specified.
scc	(TX Matrix routers only) (Optional) Display information about the fan tray and fans for the TX Matrix router (switch-card chassis).
sfc *number*	(TX Matrix Plus routers only) (Optional) Display information about the fan tray and fans for the TX Matrix Plus router (switch-fabric chassis). Replace *number* variable with `0`.

Required Privilege Level

view

Output Fields

Table 75 on page 1294 lists the output fields for the `show chassis fan` command. Output fields are listed in the approximate order in which they appear.

Table 75: show chassis fan Output Fields

Field Name	Field Description
`Item`	Fan item identifier.
`Status`	Status of the fan: • `OK`—Fan is running properly and within the normal range. • `Check`—Fan is in `Check` state because of some fault or alarm condition.
`RPM`	(T Series routers, TX Matrix routers, TX Matrix Plus routers, MX Series 5G Universal Routing Platforms, QFX3108 Interconnect devices, and EX Series switches only) Fan speed in revolutions per minute (RPM).

Table 75: show chassis fan Output Fields *(Continued)*

Field Name	Field Description
% RPM	(PTX10003, MX2010 routers, MX2020 routers, MX2008 routers, and PTX Series Packet Transport Routers only) Percentage of the fan speed being used.
Measurement	(T Series routers, TX Matrix routers, TX Matrix Plus routers, MX Series 5G Universal Routing Platforms, QFX3108 Interconnect devices, and EX Series switches only) Fan speed status based on different chassis cooling requirements: • Spinning at high speed • Spinning at intermediate speed • Spinning at normal speed • Spinning at low speed (except EX Series switches) (PTX10003, MX2010 routers, MX2020 routers, MX2008 routers, and PTX Series Packet Transport Routers only) Fan speed in revolutions per minute (RPM) for each fan in the fan tray.

Sample Output

show chassis fan

```
user@host> show chassis fan

      Item                      Status   RPM     Measurement
      Top Tray Fan 1            OK       3790    Spinning at normal speed
      Top Tray Fan 2            OK       3769    Spinning at normal speed
      Top Tray Fan 3            OK       3769    Spinning at normal speed
      Top Tray Fan 4            OK       3790    Spinning at normal speed
      Top Tray Fan 5            OK       3790    Spinning at normal speed
      Top Tray Fan 6            OK       3769    Spinning at normal speed
      Top Tray Fan 7            OK       3790    Spinning at normal speed
      Top Tray Fan 8            OK       3769    Spinning at normal speed
      Top Tray Fan 9            OK       3769    Spinning at normal speed
```

```
      Top Tray Fan 10          OK       3790    Spinning at normal speed
      Top Tray Fan 11          OK       3790    Spinning at normal speed
      Top Tray Fan 12          OK       3769    Spinning at normal speed
      Bottom Tray Fan 1        OK       2880    Spinning at normal speed
      Bottom Tray Fan 2        OK       2912    Spinning at normal speed
      Bottom Tray Fan 3        OK       2928    Spinning at normal speed
      Bottom Tray Fan 4        OK       2896    Spinning at normal speed
      Bottom Tray Fan 5        OK       2896    Spinning at normal speed
      Bottom Tray Fan 6        OK       2928    Spinning at normal speed
```

show chassis fan (QFabric Systems)

```
user@host> show chassis fan interconnect-device interconnect1

      Item                     Status   RPM     Measurement
      TFT 0 Fan 0              OK       2849    Spinning at normal speed
      TFT 0 Fan 1              OK       2821    Spinning at normal speed
      TFT 0 Fan 2              OK       2735    Spinning at normal speed
      TFT 0 Fan 3              OK       2815    Spinning at normal speed
      TFT 0 Fan 4              OK       2828    Spinning at normal speed
      TFT 0 Fan 5              OK       2863    Spinning at normal speed
      BFT 1 Fan 0              OK       2941    Spinning at normal speed
      BFT 1 Fan 1              OK       3008    Spinning at normal speed
      BFT 1 Fan 2              OK       3073    Spinning at normal speed
      BFT 1 Fan 3              OK       2925    Spinning at normal speed
      BFT 1 Fan 4              OK       2863    Spinning at normal speed
      BFT 1 Fan 5              OK       2933    Spinning at normal speed
      SFT 0 Fan 0 Rotor 0      OK       15472   Spinning at normal speed
      SFT 0 Fan 0 Rotor 1      OK       14477   Spinning at normal speed
      SFT 0 Fan 1 Rotor 0      OK       15561   Spinning at normal speed
      SFT 0 Fan 1 Rotor 1      OK       14210   Spinning at normal speed
      SFT 0 Fan 2 Rotor 0      OK       16167   Spinning at normal speed
      SFT 0 Fan 2 Rotor 1      OK       14248   Spinning at normal speed
      SFT 0 Fan 3 Rotor 0      OK       16463   Spinning at normal speed
      SFT 0 Fan 3 Rotor 1      OK       14099   Spinning at normal speed
      SFT 1 Fan 0 Rotor 0      OK       15083   Spinning at normal speed
      SFT 1 Fan 0 Rotor 1      OK       13533   Spinning at normal speed
      SFT 1 Fan 1 Rotor 0      OK       16071   Spinning at normal speed
      SFT 1 Fan 1 Rotor 1      OK       14400   Spinning at normal speed
      SFT 1 Fan 2 Rotor 0      OK       15517   Spinning at normal speed
      SFT 1 Fan 2 Rotor 1      OK       14210   Spinning at normal speed
```

```
SFT 1 Fan 3 Rotor 0       OK       16413   Spinning at normal speed
SFT 1 Fan 3 Rotor 1       OK       14400   Spinning at normal speed
SFT 2 Fan 0 Rotor 0       OK       15297   Spinning at normal speed
SFT 2 Fan 0 Rotor 1       OK       14634   Spinning at normal speed
SFT 2 Fan 1 Rotor 0       OK       15561   Spinning at normal speed
SFT 2 Fan 1 Rotor 1       OK       14285   Spinning at normal speed
SFT 2 Fan 2 Rotor 0       OK       15835   Spinning at normal speed
SFT 2 Fan 2 Rotor 1       OK       14400   Spinning at normal speed
SFT 2 Fan 3 Rotor 0       OK       15789   Spinning at normal speed
SFT 2 Fan 3 Rotor 1       OK       14323   Spinning at normal speed
SFT 3 Fan 0 Rotor 0       OK       16314   Spinning at normal speed
SFT 3 Fan 0 Rotor 1       OK       14876   Spinning at normal speed
SFT 3 Fan 1 Rotor 0       OK       15835   Spinning at normal speed
SFT 3 Fan 1 Rotor 1       OK       14323   Spinning at normal speed
SFT 3 Fan 2 Rotor 0       OK       16265   Spinning at normal speed
SFT 3 Fan 2 Rotor 1       OK       14594   Spinning at normal speed
SFT 3 Fan 3 Rotor 0       OK       16071   Spinning at normal speed
SFT 3 Fan 3 Rotor 1       OK       14323   Spinning at normal speed
SFT 4 Fan 0 Rotor 0       OK       15652   Spinning at normal speed
SFT 4 Fan 0 Rotor 1       OK       14438   Spinning at normal speed
SFT 4 Fan 1 Rotor 0       OK       16167   Spinning at normal speed
SFT 4 Fan 1 Rotor 1       OK       14555   Spinning at normal speed
SFT 4 Fan 2 Rotor 0       OK       16023   Spinning at normal speed
SFT 4 Fan 2 Rotor 1       OK       14361   Spinning at normal speed
SFT 4 Fan 3 Rotor 0       OK       16216   Spinning at normal speed
SFT 4 Fan 3 Rotor 1       OK       14438   Spinning at normal speed
SFT 5 Fan 0 Rotor 0       OK       15297   Spinning at normal speed
SFT 5 Fan 0 Rotor 1       OK       14173   Spinning at normal speed
SFT 5 Fan 1 Rotor 0       OK       15472   Spinning at normal speed
SFT 5 Fan 1 Rotor 1       OK       13846   Spinning at normal speed
SFT 5 Fan 2 Rotor 0       OK       15340   Spinning at normal speed
SFT 5 Fan 2 Rotor 1       OK       13917   Spinning at normal speed
SFT 5 Fan 3 Rotor 0       OK       15835   Spinning at normal speed
SFT 5 Fan 3 Rotor 1       OK       13917   Spinning at normal speed
SFT 6 Fan 0 Rotor 0       OK       15743   Spinning at normal speed
SFT 6 Fan 0 Rotor 1       OK       14594   Spinning at normal speed
SFT 6 Fan 1 Rotor 0       OK       16167   Spinning at normal speed
SFT 6 Fan 1 Rotor 1       OK       14634   Spinning at normal speed
SFT 6 Fan 2 Rotor 0       OK       16167   Spinning at normal speed
SFT 6 Fan 2 Rotor 1       OK       14516   Spinning at normal speed
SFT 6 Fan 3 Rotor 0       OK       16666   Spinning at normal speed
SFT 6 Fan 3 Rotor 1       OK       14438   Spinning at normal speed
SFT 7 Fan 0 Rotor 0       OK       15517   Spinning at normal speed
```

```
      SFT 7 Fan 0 Rotor 1       OK       14438   Spinning at normal speed
      SFT 7 Fan 1 Rotor 0       OK       15517   Spinning at normal speed
      SFT 7 Fan 1 Rotor 1       OK       14361   Spinning at normal speed
      SFT 7 Fan 2 Rotor 0       OK       16167   Spinning at normal speed
      SFT 7 Fan 2 Rotor 1       OK       14555   Spinning at normal speed
      SFT 7 Fan 3 Rotor 0       OK       15697   Spinning at normal speed
      SFT 7 Fan 3 Rotor 1       OK       14361   Spinning at normal speed
```

show chassis fan (EX Series Switches)

```
user@host> show chassis fan

      Item                      Status   RPM     Measurement
      Fan 1                     OK       3477    Spinning at normal speed
      Fan 2                     OK       3477    Spinning at normal speed
      Fan 3                     OK       3479    Spinning at normal speed
      Fan 4                     OK       3508    Spinning at normal speed
      Fan 5                     OK       3517    Spinning at normal speed
      Fan 6                     OK       3531    Spinning at normal speed
      Fan 7                     OK       3439    Spinning at normal speed
      Fan 8                     OK       3424    Spinning at normal speed
      Fan 9                     OK       3413    Spinning at normal speed
      Fan 10                    OK       3439    Spinning at normal speed
      Fan 11                    OK       3446    Spinning at normal speed
      Fan 12                    OK       3432    Spinning at normal speed
```

show chassis fan (T4000 Core Router)

```
user@host> show chassis fan

      Item                      Status   RPM     Measurement
      Top Left Front fan        OK       5190    Spinning at high speed
      Top Left Middle fan       OK       5220    Spinning at high speed
      Top Left Rear fan         OK       5190    Spinning at high speed
      Top Right Front fan       OK       5160    Spinning at high speed
      Top Right Middle fan      OK       5190    Spinning at high speed
      Top Right Rear fan        OK       5160    Spinning at high speed
      Bottom Left Front fan     OK       6030    Spinning at high speed
      Bottom Left Middle fan    OK       6090    Spinning at high speed
      Bottom Left Rear fan      OK       6090    Spinning at high speed
```

```
      Bottom Right Front fan    OK       6030    Spinning at high speed
      Bottom Right Middle fan   OK       6060    Spinning at high speed
      Bottom Right Rear fan     OK       6060    Spinning at high speed
      Rear Tray Top fan         OK       10000   Spinning at high speed
      Rear Tray Second fan      OK       10000   Spinning at high speed
      Rear Tray Third fan       OK       10000   Spinning at high speed
      Rear Tray Fourth fan      OK       10000   Spinning at high speed
      Rear Tray Fifth fan       OK       10000   Spinning at high speed
      Rear Tray Sixth fan       OK       10000   Spinning at high speed
      Rear Tray Seventh fan     OK       10000   Spinning at high speed
      Rear Tray Bottom fan      OK       10000   Spinning at high speed
```

show chassis fan (TX Matrix Router)

```
user@host> show chassis fan
scc-re0:
--------------------------------------------------------------------------
      Item                      Status   RPM     Measurement
      Top Left Front fan        OK       3420    Spinning at normal speed
      Top Left Middle fan       OK       3390    Spinning at normal speed
      Top Left Rear fan         OK       3420    Spinning at normal speed
      Top Right Front fan       OK       3390    Spinning at normal speed
      Top Right Middle fan      OK       3420    Spinning at normal speed
      Top Right Rear fan        OK       3390    Spinning at normal speed
      Bottom Left Front fan     OK       3420    Spinning at normal speed
      Bottom Left Middle fan    OK       3450    Spinning at normal speed
      Bottom Left Rear fan      OK       3420    Spinning at normal speed
      Bottom Right Front fan    OK       3420    Spinning at normal speed
      Bottom Right Middle fan   OK       3420    Spinning at normal speed
      Bottom Right Rear fan     OK       3420    Spinning at normal speed
      Rear Tray Top fan         OK       3420    Spinning at normal speed
      Rear Tray Second fan      OK       5190    Spinning at normal speed
      Rear Tray Third fan       OK       5190    Spinning at normal speed
      Rear Tray Fourth fan      OK       5190    Spinning at normal speed
      Rear Tray Fifth fan       OK       3420    Spinning at normal speed
      Rear Tray Sixth fan       OK       3420    Spinning at normal speed
      Rear Tray Seventh fan     OK       3420    Spinning at normal speed
      Rear Tray Bottom fan      OK       3420    Spinning at normal speed

lcc2-re0:
--------------------------------------------------------------------------
```

```
      Item                      Status   RPM     Measurement
      Top Left Front fan        OK       3420    Spinning at normal speed
      Top Left Middle fan       OK       3420    Spinning at normal speed
      Top Left Rear fan         OK       3450    Spinning at normal speed
      Top Right Front fan       OK       3420    Spinning at normal speed
      Top Right Middle fan      OK       3450    Spinning at normal speed
      Top Right Rear fan        OK       3360    Spinning at normal speed
      Bottom Left Front fan     OK       3420    Spinning at normal speed
      Bottom Left Middle fan    OK       3480    Spinning at normal speed
      Bottom Left Rear fan      OK       3420    Spinning at normal speed
      Bottom Right Front fan    OK       3420    Spinning at normal speed
      Bottom Right Middle fan   OK       3390    Spinning at normal speed
      Bottom Right Rear fan     OK       3420    Spinning at normal speed
      Rear Tray Top fan         OK       3420    Spinning at normal speed
      Rear Tray Second fan      OK       3420    Spinning at normal speed
      Rear Tray Third fan       OK       3420    Spinning at normal speed
      Rear Tray Fourth fan      OK       3420    Spinning at normal speed
      Rear Tray Fifth fan       OK       3420    Spinning at normal speed
      Rear Tray Sixth fan       OK       3420    Spinning at normal speed
      Rear Tray Seventh fan     OK       3420    Spinning at normal speed
      Rear Tray Bottom fan      OK       3420    Spinning at normal speed
```

show chassis fan (TX Matrix Plus Router)

```
user@host> show chassis fan
  sfc0-re0:
--------------------------------------------------------------------------
      Item                      Status   RPM     Measurement
      Fan Tray 0 Fan 1          OK       4350    Spinning at normal speed
      Fan Tray 0 Fan 2          OK       4380    Spinning at normal speed
      Fan Tray 0 Fan 3          OK       4410    Spinning at normal speed
      Fan Tray 0 Fan 4          OK       4380    Spinning at normal speed
      Fan Tray 0 Fan 5          OK       4350    Spinning at normal speed
      Fan Tray 0 Fan 6          OK       4380    Spinning at normal speed
      Fan Tray 1 Fan 1          OK       4410    Spinning at normal speed
      Fan Tray 1 Fan 2          OK       4380    Spinning at normal speed
      Fan Tray 1 Fan 3          OK       4410    Spinning at normal speed
      Fan Tray 1 Fan 4          OK       4380    Spinning at normal speed
      Fan Tray 1 Fan 5          OK       4410    Spinning at normal speed
      Fan Tray 1 Fan 6          OK       4410    Spinning at normal speed
      Fan Tray 2 Fan 1          OK       4380    Spinning at normal speed
```

```
      Fan Tray 2 Fan 2          OK       4380    Spinning at normal speed
      Fan Tray 2 Fan 3          OK       4380    Spinning at normal speed
      Fan Tray 2 Fan 4          OK       4410    Spinning at normal speed
      Fan Tray 2 Fan 5          OK       4380    Spinning at normal speed
      Fan Tray 2 Fan 6          OK       4410    Spinning at normal speed
      Fan Tray 2 Fan 7          OK       4410    Spinning at normal speed
      Fan Tray 2 Fan 8          OK       4380    Spinning at normal speed
      Fan Tray 2 Fan 9          OK       4380    Spinning at normal speed
      Fan Tray 3 Fan 1          OK       4350    Spinning at normal speed
      Fan Tray 3 Fan 2          OK       4380    Spinning at normal speed
      Fan Tray 3 Fan 3          OK       4410    Spinning at normal speed
      Fan Tray 3 Fan 4          OK       4440    Spinning at normal speed
      Fan Tray 3 Fan 5          OK       4380    Spinning at normal speed
      Fan Tray 3 Fan 6          OK       4410    Spinning at normal speed
      Fan Tray 3 Fan 7          OK       4410    Spinning at normal speed
      Fan Tray 3 Fan 8          OK       4380    Spinning at normal speed
      Fan Tray 3 Fan 9          OK       4410    Spinning at normal speed
      Fan Tray 4 Fan 1          OK       4410    Spinning at normal speed
      Fan Tray 4 Fan 2          OK       4410    Spinning at normal speed
      Fan Tray 4 Fan 3          OK       4380    Spinning at normal speed
      Fan Tray 4 Fan 4          OK       4380    Spinning at normal speed
      Fan Tray 4 Fan 5          OK       4410    Spinning at normal speed
      Fan Tray 4 Fan 6          OK       4410    Spinning at normal speed
      Fan Tray 4 Fan 7          OK       4410    Spinning at normal speed
      Fan Tray 4 Fan 8          OK       4410    Spinning at normal speed
      Fan Tray 4 Fan 9          OK       4410    Spinning at normal speed
      Fan Tray 5 Fan 1          OK       4350    Spinning at normal speed
      Fan Tray 5 Fan 2          OK       4380    Spinning at normal speed
      Fan Tray 5 Fan 3          OK       4380    Spinning at normal speed
      Fan Tray 5 Fan 4          OK       4350    Spinning at normal speed
      Fan Tray 5 Fan 5          OK       4380    Spinning at normal speed
      Fan Tray 5 Fan 6          OK       4410    Spinning at normal speed
      Fan Tray 5 Fan 7          OK       4410    Spinning at normal speed
      Fan Tray 5 Fan 8          OK       4380    Spinning at normal speed
      Fan Tray 5 Fan 9          OK       4410    Spinning at normal speed

lcc0-re0:
--------------------------------------------------------------------------
      Item                      Status   RPM     Measurement
      Top Left Front fan        OK       3420    Spinning at normal speed
      Top Left Middle fan       OK       3420    Spinning at normal speed
      Top Left Rear fan         OK       3420    Spinning at normal speed
      Top Right Front fan       OK       3450    Spinning at normal speed
```

```
      Top Right Middle fan      OK       3420    Spinning at normal speed
      Top Right Rear fan        OK       3420    Spinning at normal speed
      Bottom Left Front fan     OK       3420    Spinning at normal speed
      Bottom Left Middle fan    OK       3420    Spinning at normal speed
      Bottom Left Rear fan      OK       3390    Spinning at normal speed
      Bottom Right Front fan    OK       3420    Spinning at normal speed
      Bottom Right Middle fan   OK       3390    Spinning at normal speed
      Bottom Right Rear fan     OK       3390    Spinning at normal speed
      Rear Tray Top fan         OK       7050    Spinning at normal speed
      Rear Tray Second fan      OK       7050    Spinning at normal speed
      Rear Tray Third fan       OK       7050    Spinning at normal speed
      Rear Tray Fourth fan      OK       7050    Spinning at normal speed
      Rear Tray Fifth fan       OK       7050    Spinning at normal speed
      Rear Tray Sixth fan       OK       7050    Spinning at normal speed
      Rear Tray Seventh fan     OK       7050    Spinning at normal speed
      Rear Tray Bottom fan      OK       7050    Spinning at normal speed
```

show chassis fan (TX Matrix Plus Router with 3D SIBs)

```
user@host> show chassis fan
sfc0-re0:
--------------------------------------------------------------------------
      Item                      Status   RPM     Measurement
      Fan Tray 0 Fan 1          OK       4830    Spinning at normal speed
      Fan Tray 0 Fan 2          OK       4860    Spinning at normal speed
      Fan Tray 0 Fan 3          OK       4830    Spinning at normal speed
      Fan Tray 0 Fan 4          OK       4800    Spinning at normal speed
      Fan Tray 0 Fan 5          OK       4830    Spinning at normal speed
      Fan Tray 0 Fan 6          OK       4770    Spinning at normal speed
      Fan Tray 1 Fan 1          OK       4800    Spinning at normal speed
      Fan Tray 1 Fan 2          OK       4770    Spinning at normal speed
      Fan Tray 1 Fan 3          OK       4800    Spinning at normal speed
      Fan Tray 1 Fan 4          OK       4770    Spinning at normal speed
      Fan Tray 1 Fan 5          OK       4770    Spinning at normal speed
      Fan Tray 1 Fan 6          OK       4800    Spinning at normal speed
      Fan Tray 2 Fan 1          OK       4800    Spinning at normal speed
      Fan Tray 2 Fan 2          OK       4800    Spinning at normal speed
      Fan Tray 2 Fan 3          OK       4830    Spinning at normal speed
      Fan Tray 2 Fan 4          OK       4830    Spinning at normal speed
      Fan Tray 2 Fan 5          OK       4830    Spinning at normal speed
      Fan Tray 2 Fan 6          OK       4830    Spinning at normal speed
```

```
      Fan Tray 2 Fan 7          OK       4800    Spinning at normal speed
      Fan Tray 2 Fan 8          OK       4830    Spinning at normal speed
      Fan Tray 2 Fan 9          OK       4800    Spinning at normal speed
      Fan Tray 3 Fan 1          OK       4860    Spinning at normal speed
      Fan Tray 3 Fan 2          OK       4860    Spinning at normal speed
      Fan Tray 3 Fan 3          OK       4800    Spinning at normal speed
      Fan Tray 3 Fan 4          OK       4830    Spinning at normal speed
      Fan Tray 3 Fan 5          OK       4830    Spinning at normal speed
      Fan Tray 3 Fan 6          OK       4830    Spinning at normal speed
      Fan Tray 3 Fan 7          OK       4830    Spinning at normal speed
      Fan Tray 3 Fan 8          OK       4800    Spinning at normal speed
      Fan Tray 3 Fan 9          OK       4800    Spinning at normal speed
      Fan Tray 4 Fan 1          OK       4830    Spinning at normal speed
      Fan Tray 4 Fan 2          OK       4830    Spinning at normal speed
      Fan Tray 4 Fan 3          OK       4830    Spinning at normal speed
      Fan Tray 4 Fan 4          OK       4830    Spinning at normal speed
      Fan Tray 4 Fan 5          OK       4830    Spinning at normal speed
      Fan Tray 4 Fan 6          OK       4860    Spinning at normal speed
      Fan Tray 4 Fan 7          OK       4800    Spinning at normal speed
      Fan Tray 4 Fan 8          OK       4860    Spinning at normal speed
      Fan Tray 4 Fan 9          OK       4770    Spinning at normal speed
      Fan Tray 5 Fan 1          OK       4830    Spinning at normal speed
      Fan Tray 5 Fan 2          OK       4830    Spinning at normal speed
      Fan Tray 5 Fan 3          OK       4830    Spinning at normal speed
      Fan Tray 5 Fan 4          OK       4800    Spinning at normal speed
      Fan Tray 5 Fan 5          OK       4800    Spinning at normal speed
      Fan Tray 5 Fan 6          OK       4800    Spinning at normal speed
      Fan Tray 5 Fan 7          OK       4830    Spinning at normal speed
      Fan Tray 5 Fan 8          OK       4830    Spinning at normal speed
      Fan Tray 5 Fan 9          Check    2010

lcc0-re0:
--------------------------------------------------------------------------
      Item                      Status   RPM     Measurement
      Top Left Front fan        OK       3420    Spinning at normal speed
      Top Left Middle fan       OK       3390    Spinning at normal speed
      Top Left Rear fan         OK       3390    Spinning at normal speed
      Top Right Front fan       OK       3420    Spinning at normal speed
      Top Right Middle fan      OK       3420    Spinning at normal speed
      Top Right Rear fan        OK       3450    Spinning at normal speed
      Bottom Left Front fan     OK       3420    Spinning at normal speed
      Bottom Left Middle fan    OK       3390    Spinning at normal speed
      Bottom Left Rear fan      OK       3420    Spinning at normal speed
```

```
      Bottom Right Front fan    OK       3420    Spinning at normal speed
      Bottom Right Middle fan   OK       3390    Spinning at normal speed
      Bottom Right Rear fan     OK       3420    Spinning at normal speed
      Rear Tray fan 1 (Top)     OK       7740    Spinning at normal speed
      Rear Tray fan 2           OK       7740    Spinning at normal speed
      Rear Tray fan 3           OK       7740    Spinning at normal speed
      Rear Tray fan 4           OK       7740    Spinning at normal speed
      Rear Tray fan 5           OK       7740    Spinning at normal speed
      Rear Tray fan 6           OK       7740    Spinning at normal speed
      Rear Tray fan 7           OK       7740    Spinning at normal speed
      Rear Tray fan 8           OK       7740    Spinning at normal speed
      Rear Tray fan 9           OK       7740    Spinning at normal speed
      Rear Tray fan 10          OK       7740    Spinning at normal speed
      Rear Tray fan 11          OK       7740    Spinning at normal speed
      Rear Tray fan 12          OK       7740    Spinning at normal speed
      Rear Tray fan 13          OK       7740    Spinning at normal speed
      Rear Tray fan 14          OK       7740    Spinning at normal speed
      Rear Tray fan 15          OK       7740    Spinning at normal speed
      Rear Tray fan 16 (Bottom) OK       7740    Spinning at normal speed

lcc2-re0:
--------------------------------------------------------------------------
      Item                      Status   RPM     Measurement
      Top Left Front fan        OK       3420    Spinning at normal speed
      Top Left Middle fan       OK       3390    Spinning at normal speed
      Top Left Rear fan         OK       3420    Spinning at normal speed
      Top Right Front fan       OK       3420    Spinning at normal speed
      Top Right Middle fan      OK       3420    Spinning at normal speed
      Top Right Rear fan        OK       3450    Spinning at normal speed
      Bottom Left Front fan     OK       3420    Spinning at normal speed
      Bottom Left Middle fan    OK       3390    Spinning at normal speed
      Bottom Left Rear fan      OK       3420    Spinning at normal speed
      Bottom Right Front fan    OK       3420    Spinning at normal speed
      Bottom Right Middle fan   OK       3390    Spinning at normal speed
      Bottom Right Rear fan     OK       3420    Spinning at normal speed
      Rear Tray fan 1 (Top)     OK       7740    Spinning at normal speed
      Rear Tray fan 2           OK       7740    Spinning at normal speed
      Rear Tray fan 3           OK       7740    Spinning at normal speed
      Rear Tray fan 4           OK       7740    Spinning at normal speed
      Rear Tray fan 5           OK       7740    Spinning at normal speed
      Rear Tray fan 6           OK       7740    Spinning at normal speed
      Rear Tray fan 7           OK       7740    Spinning at normal speed
      Rear Tray fan 8           OK       7740    Spinning at normal speed
```

```
      Rear Tray fan 9           OK       7740    Spinning at normal speed
      Rear Tray fan 10          OK       7740    Spinning at normal speed
      Rear Tray fan 11          OK       7740    Spinning at normal speed
      Rear Tray fan 12          OK       7740    Spinning at normal speed
      Rear Tray fan 13          OK       7740    Spinning at normal speed
      Rear Tray fan 14          OK       7740    Spinning at normal speed
      Rear Tray fan 15          OK       7740    Spinning at normal speed
      Rear Tray fan 16 (Bottom) OK       7740    Spinning at normal speed
```

show chassis fan (PTX5000 Packet Transport Router)

```
user@host> show chassis fan
user@host> show chassis fan
      Item                      Status   % RPM     Measurement
      Fan Tray 0 Fan 1          OK       29%       2700 RPM
      Fan Tray 0 Fan 2          OK       29%       2700 RPM
      Fan Tray 0 Fan 3          OK       29%       2742 RPM
      Fan Tray 0 Fan 4          OK       29%       2700 RPM
      Fan Tray 0 Fan 5          OK       30%       2828 RPM
      Fan Tray 0 Fan 6          OK       30%       2828 RPM
      Fan Tray 0 Fan 7          OK       29%       2700 RPM
      Fan Tray 0 Fan 8          OK       30%       2785 RPM
      Fan Tray 0 Fan 9          OK       30%       2828 RPM
      Fan Tray 0 Fan 10         OK       30%       2828 RPM
      Fan Tray 0 Fan 11         OK       30%       2785 RPM
      Fan Tray 0 Fan 12         OK       30%       2828 RPM
      Fan Tray 0 Fan 13         OK       31%       2871 RPM
      Fan Tray 0 Fan 14         OK       30%       2828 RPM
      Fan Tray 1 Fan 1          OK       42%       3033 RPM
      Fan Tray 1 Fan 2          OK       42%       3066 RPM
      Fan Tray 1 Fan 3          OK       43%       3099 RPM
      Fan Tray 1 Fan 4          OK       43%       3166 RPM
      Fan Tray 1 Fan 5          OK       45%       3266 RPM
      Fan Tray 1 Fan 6          OK       43%       3133 RPM
      Fan Tray 2 Fan 1          OK       29%       2099 RPM
      Fan Tray 2 Fan 2          OK       30%       2199 RPM
      Fan Tray 2 Fan 3          OK       30%       2166 RPM
      Fan Tray 2 Fan 4          OK       33%       2399 RPM
      Fan Tray 2 Fan 5          OK       29%       2133 RPM
      Fan Tray 2 Fan 6          OK       32%       2366 RPM
```

show chassis fan (MX150)

```
user@host > show chassis fan
Item                      Status   RPM     Measurement
      FPC 0 Tray 0 Fan 0        OK       7419    Spinning at normal speed
      FPC 0 Tray 1 Fan 0        OK       7419    Spinning at normal speed
```

show chassis fan (MX104 Router)

```
user@host > show chassis fan
Item                      Status   RPM     Measurement
      Fan 1                     OK       5640    Spinning at normal speed
      Fan 2                     OK       5640    Spinning at normal speed
      Fan 3                     OK       5760    Spinning at normal speed
      Fan 4                     OK       5640    Spinning at normal speed
      Fan 5                     OK       5640    Spinning at normal speed
```

show chassis fan (MX2010 Router)

```
user@host > show chassis fan
Item                      Status   % RPM     Measurement
      Fan Tray 0 Fan 1          OK       37%       3360 RPM
      Fan Tray 0 Fan 2          OK       38%       3480 RPM
      Fan Tray 0 Fan 3          OK       37%       3360 RPM
      Fan Tray 0 Fan 4          OK       37%       3360 RPM
      Fan Tray 0 Fan 5          OK       38%       3480 RPM
      Fan Tray 0 Fan 6          OK       37%       3360 RPM
      Fan Tray 1 Fan 1          OK       38%       3480 RPM
      Fan Tray 1 Fan 2          OK       40%       3600 RPM
      Fan Tray 1 Fan 3          OK       38%       3480 RPM
      Fan Tray 1 Fan 4          OK       38%       3480 RPM
      Fan Tray 1 Fan 5          OK       38%       3480 RPM
      Fan Tray 1 Fan 6          OK       38%       3480 RPM
      Fan Tray 2 Fan 1          OK       38%       3480 RPM
      Fan Tray 2 Fan 2          OK       41%       3720 RPM
      Fan Tray 2 Fan 3          OK       38%       3480 RPM
      Fan Tray 2 Fan 4          OK       38%       3480 RPM
      Fan Tray 2 Fan 5          OK       38%       3480 RPM
      Fan Tray 2 Fan 6          OK       38%       3480 RPM
```

```
      Fan Tray 3 Fan 1          OK       38%       3480 RPM
      Fan Tray 3 Fan 2          OK       40%       3600 RPM
      Fan Tray 3 Fan 3          OK       40%       3600 RPM
      Fan Tray 3 Fan 4          OK       40%       3600 RPM
      Fan Tray 3 Fan 5          OK       40%       3600 RPM
      Fan Tray 3 Fan 6          OK       38%       3480 RPM
```

show chassis fan (ACX4000 Router)

```
user@host > show chassis fan
      Item                      Status   RPM     Measurement
      Fan 1                     OK       4140    Spinning at normal speed
      Fan 2                     OK       4200    Spinning at normal speed
```

show chassis fan (ACX5048 Router)

```
user@host > show chassis fan
      Item                      Status   RPM     Measurement
      FPC 0 Tray 0 Fan 0        OK       18305   Spinning at normal speed
      FPC 0 Tray 0 Fan 1        OK       15743   Spinning at normal speed
      FPC 0 Tray 1 Fan 0        OK       18305   Spinning at normal speed
      FPC 0 Tray 1 Fan 1        OK       15606   Spinning at normal speed
      FPC 0 Tray 2 Fan 0        OK       19014   Spinning at normal speed
      FPC 0 Tray 2 Fan 1        OK       16167   Spinning at normal speed
      FPC 0 Tray 3 Fan 0        OK       18947   Spinning at normal speed
      FPC 0 Tray 3 Fan 1        OK       16265   Spinning at normal speed
      FPC 0 Tray 4 Fan 0        OK       18120   Spinning at normal speed
      FPC 0 Tray 4 Fan 1        OK       15743   Spinning at normal speed
```

show chassis fan (QFX5100 Switch and OCX Series)

```
user@switch > show chassis fan
Item                      Status   RPM     Measurement
FPC 0 Tray 0 Fan 0        OK       6428    Spinning at normal speed
FPC 0 Tray 0 Fan 1        OK       5515    Spinning at normal speed
FPC 0 Tray 1 Fan 0        OK       6360    Spinning at normal speed
FPC 0 Tray 1 Fan 1        OK       5532    Spinning at normal speed
```

show chassis fan (EX9251 switches)

```
user@switch > show chassis fan

       Item                      Status   % RPM     Measurement
       Fan Tray 0 Fan 0          OK       40%       9600 RPM
       Fan Tray 0 Fan 1          OK       40%       8832 RPM
       Fan Tray 1 Fan 0          OK       40%       9728 RPM
       Fan Tray 1 Fan 1          OK       40%       9088 RPM
       Fan Tray 2                Absent
```

show chassis fan (EX9253 switches)

```
user@switch > show chassis fan

       Item                      Status   % RPM    Measurement
       Fan Tray 0 Fan 0          OK       40%       7552 RPM
       Fan Tray 0 Fan 1          OK       40%       6272 RPM
       Fan Tray 0 Fan 2          OK       40%       7552 RPM
       Fan Tray 0 Fan 3          OK       40%       6272 RPM
       Fan Tray 1 Fan 0          OK       40%       7552 RPM
       Fan Tray 1 Fan 1          OK       40%       6272 RPM
       Fan Tray 1 Fan 2          OK       40%       7552 RPM
       Fan Tray 1 Fan 3          OK       40%       6272 RPM
       Fan Tray 2 Fan 0          OK       40%       7552 RPM
       Fan Tray 2 Fan 1          OK       40%       6400 RPM
       Fan Tray 2 Fan 2          OK       40%       7552 RPM
       Fan Tray 2 Fan 3          OK       40%       6272 RPM
       Fan Tray 3 Fan 0          OK       40%       7552 RPM
       Fan Tray 3 Fan 1          OK       40%       6400 RPM
       Fan Tray 3 Fan 2          OK       40%       7552 RPM
       Fan Tray 3 Fan 3          OK       40%       6272 RPM
```

show chassis fan (Junos OS Evolved)

```
user@device> show chassis fan
      Item                      Status   % RPM     Measurement
      Fan Tray 1 Fan 1          Ok       48%       6597 RPM
      Fan Tray 1 Fan 2          Ok       49%       5649 RPM
```

```
        Fan Tray 2 Fan 1          Ok        49%       6687 RPM
        Fan Tray 2 Fan 2          Ok        49%       5649 RPM
        Fan Tray 3 Fan 1          Ok        49%       6642 RPM
        Fan Tray 3 Fan 2          Ok        49%       5649 RPM
```

Release Information

Command introduced in Junos OS Release 10.0 on MX Series 5G Universal Routing Platforms, M120 routers, and M320 routers, T320 routers, T640 routers, T1600 routers, TX Matrix Routers, and TX Matrix Plus routers.

`satellite` option introduced in Junos OS Release 14.2R3.

Command output introduced for Junos OS Evolved Release 19.1R1.

show chassis feb

IN THIS SECTION

- Syntax | **1310**
- Description | **1310**
- Options | **1310**
- Required Privilege Level | **1310**
- Output Fields | **1310**
- Sample Output | **1312**
- Release Information | **1315**

Syntax

```
show chassis feb
```

Description

(ACX1000, ACX7509, M5, M10, and M120 routers only) Display Forwarding Engine Board (FEB) status information. Use this command to identify the memory allocated for each PFE (Packet Forwarding Engine).

Options

This command has no options.

Required Privilege Level

view

Output Fields

Table 76 on page 1311 lists the output fields for the `show chassis feb` command. Output fields are listed in the approximate order in which they appear.

Table 76: show chassis feb

Field Name	Field Description

State	State of the FEB:
	• **Offline**—FEB is powered down.
	• **Online**—FEB is operational and running.
	• **Check**—FEB is in alarmed state where the Switch Interface Board (SIB) plane is partially operational for the following reasons:
	  • FEB is not inserted properly.
	  • Two or more links between the FEB and Packet Forwarding Engine fail.

Temp (C) or Intake temperature	Temperature of the air passing by the FEB, in degrees Celsius or in both degrees Celsius and degrees Fahrenheit.
CPU Utilization (%)	Percentage of CPU being used: • **Total**—Total percentage of CPU being used by the FEB processor. • **Interrupt**—Of the total CPU being used by the FEB processor, the percentage being used for interrupts.
Memory DRAM (MB)	Total DRAM, in megabytes, available to the FEB processor.
Utilization (%)	Percentage of memory utilization: • **Heap**—Percentage of heap space (dynamic memory) being used by the FEB processor. If this number exceeds 80 percent, you might experience a software problem (memory leak). • **Buffer**—Percentage of buffer space being used by the FPC processor for buffering internal messages.
Exhaust A temperature	Temperature of the air flowing past Exhaust A.

Table 76: show chassis feb *(Continued)*

Field Name	Field Description
Exhaust B temperature	Temperature of the air flowing past Exhaust B.
Total DDR DRAM	Amount of double data rate dynamic random access memory (DDR DRAM) available to the FEB CPU.
Total RLDRAM	Amount of reduced latency dynamic random access memory (RLDRAM) available to the FEB CPU.
Start time (Detail output only)	Time when the Routing Engine detected that the FEB was running.
Uptime (Detail output only)	How long the Routing Engine has been connected to the FEB, and therefore, how long the Flexible PIC Concentrator (PIC) has been up and running.

Sample Output

show chassis feb (M10 Router)

```
user@host> show chassis feb

FEB status:
  Temperature                      27 degrees C / 80 degrees F
  CPU utilization                   3 percent
  Interrupt utilization             0 percent
  Heap utilization                 26 percent
  Buffer utilization               50 percent
  Total CPU DRAM                   64 MB
  Internet Processor II               Version 1, Foundry IBM, Part number 9
  Start time:                         2010-05-23 13:59:51 PDT
  Uptime:                             6 hours, 33 minutes, 11 seconds
```

show chassis feb (M120 Router)

```
user@host> show chassis feb
                    Temp  CPU Utilization (%)   Memory    Utilization (%)
Slot State            (C)  Total  Interrupt      DRAM (MB) Heap     Buffer
  0  Online            47      4          0       512         7         60
  1  Online            54      3          0       512         7         59
  2  Online            50      4          0       512         7         59
  3  Online            49      4          0       512         7         59
  4  Online            46      3          0       512         7         59
  5  Online            35      3          0       512         7         59
```

show chassis feb detail (M120 Router)

```
user@host> show chassis feb detail
Slot 0 information:
  State                               Online
  Intake temperature                48 degrees C / 118 degrees F
  Exhaust A temperature             51 degrees C / 123 degrees F
  Exhaust B temperature             52 degrees C / 125 degrees F
  Total DDR DRAM                   512 MB
  Total RLDRAM                      32 MB
  Start time:                          2006-06-28 15:00:40 PDT
  Uptime:                              10 minutes, 21 seconds
Slot 1 information:
  State                               Online
  Intake temperature                55 degrees C / 131 degrees F
  Exhaust A temperature             46 degrees C / 114 degrees F
  Exhaust B temperature             45 degrees C / 113 degrees F
  Total DDR DRAM                   512 MB
  Total RLDRAM                      32 MB
  Start time:                          2006-06-28 15:00:33 PDT
  Uptime:                              10 minutes, 28 seconds
Slot 2 information:
  State                               Online
  Intake temperature                50 degrees C / 122 degrees F
  Exhaust A temperature             47 degrees C / 116 degrees F
  Exhaust B temperature             47 degrees C / 116 degrees F
  Total DDR DRAM                   512 MB
  Total RLDRAM                      32 MB
```

```
  Start time:                          2006-06-28 15:00:35 PDT
  Uptime:                              10 minutes, 26 seconds
Slot 3 information:
  State                                Online
  Intake temperature                49 degrees C / 120 degrees F
  Exhaust A temperature             47 degrees C / 116 degrees F
  Exhaust B temperature             49 degrees C / 120 degrees F
  Total DDR DRAM                   512 MB
  Total RLDRAM                      32 MB
  Start time:                          2006-06-28 15:00:43 PDT
  Uptime:                              10 minutes, 18 seconds
Slot 4 information:
  State                                Online
  Intake temperature                45 degrees C / 113 degrees F
  Exhaust A temperature             42 degrees C / 107 degrees F
  Exhaust B temperature             42 degrees C / 107 degrees F
  Total DDR DRAM                   512 MB
  Total RLDRAM                      32 MB
  Start time:                          2006-06-28 15:00:29 PDT
  Uptime:                              10 minutes, 32 seconds
Slot 5 information:
  State                                Online
  Intake temperature                35 degrees C / 95 degrees F
  Exhaust A temperature             33 degrees C / 91 degrees F
  Exhaust B temperature             40 degrees C / 104 degrees F
  Total DDR DRAM                   512 MB
  Total RLDRAM                      32 MB
  Start time:                          2006-06-28 15:00:27 PDT
  Uptime:                              10 minutes, 34 seconds
```

show chassis feb detail (ACX1000 Universal Metro Router)

```
user@host> show chassis feb detail
FEB status:
Slot 0 information:
  State                                Online
  Temperature                       46 degrees C / 114 degrees F
  CPU utilization                   15 percent
  Interrupt utilization              5 percent
  Heap utilization                  45 percent
  Buffer utilization                37 percent
```

```
  Total CPU DRAM                  256 MB
  Start time:                         2012-06-05 19:51:53 PDT
  Uptime:                             19 minutes, 6 seconds
```

show chassis feb (ACX7509 Universal Metro Router)

```
user@host> show chassis feb
Slot 0 information:
  State                               Online
  Start time:                         2022-06-13 21:30:00 PDT
  Uptime:                             2 hours, 58 minutes, 40 seconds
Slot 1 information:
 State                               Online Standby
 Start time:                         2022-06-13 21:30:00 PDT
 Uptime:                             2 hours, 58 minutes, 40 seconds
```

Release Information

Command introduced before Junos OS Release 7.4.

Command support added for ACX7509 platform in Junos OS Evolved Release 22.2. Detail option is not supported on ACX7509 platform.

RELATED DOCUMENTATION

No Link Title

No Link Title

request chassis feb | 416

show chassis fabric feb | 1087

show chassis fpc-feb-connectivity | 1410

show chassis routing-engine | 1550

show chassis firmware

IN THIS SECTION

- Syntax | 1316
- Syntax (TX Matrix Routers) | 1316
- Syntax (TX Matrix Plus Routers) | 1317
- Syntax (MX Series Routers) | 1317
- Syntax (MX104, MX204, MX2010, MX2020, MX10003, and MX2008 Universal Routing Platforms) | 1317
- Syntax (QFX Series) | 1317
- Syntax (ACX5048 and ACX5096 Routers) | 1318
- Syntax (EX Series Switches) | 1318
- Description | 1318
- Options | 1318
- Required Privilege Level | 1320
- Output Fields | 1320
- Sample Output | 1321
- Release Information | 1336

Syntax

```
show chassis firmware
```

Syntax (TX Matrix Routers)

```
show chassis firmware
<lcc number | scc>
```

Syntax (TX Matrix Plus Routers)

```
show chassis firmware
<lcc number | sfc number>
```

Syntax (MX Series Routers)

```
show chassis firmware
<all-members>
<local>
<member member-id>
```

Syntax (MX104, MX204, MX2010, MX2020, MX10003, and MX2008 Universal Routing Platforms)

```
show chassis firmware
<satellite [slot-id slot-id |device-alias  alias-name]>
```

Syntax (QFX Series)

```
show chassis firmware
interconnect-device name
node-device name
```

Syntax (ACX5048 and ACX5096 Routers)

```
show chassis firmware
interconnect-device name
node-device name
```

Syntax (EX Series Switches)

```
show chassis firmware
<detail>
<satellite [slot-id slot-id |device-alias  alias-name]>
```

Description

On routers and switches, display the version levels of the firmware running on the System Control Board (SCB), Switching and Forwarding Module (SFM), System and Switch Board (SSB), Forwarding Engine Board (FEB), Flexible PIC Concentrators (FPCs), and Routing Engines. On a TX Matrix Plus router, display the version levels of the firmware running on the FPCs and the Switch Processor Mezzanine Board (SPMBs).

On EX2200, EX3200, EX4200, QFX Series, and OCX Series switches, display the version levels of the firmware running on the switch. On an EX8208 switch, display the version levels of the firmware running on the Switch Fabric and Routing Engine (SRE) modules and on the line cards (shown as FPCs). On an EX8216 switch, display the version levels of the firmware running on the Routing Engine (RE) modules and on the line cards (shown as FPCs).

Options

none Display the version levels of the firmware running. For an EX4200 switch that is a member of a Virtual Chassis, display version levels for all members. For a TX Matrix router, display version levels for the firmware on the TX Matrix router and on all the T640 routers connected to the TX Matrix router. For a TX Matrix Plus router,

display version levels for the firmware on the TX Matrix Plus router and on all the routers connected to the TX Matrix Plus router.

all-members (MX Series routers only) (Optional) Display the version levels of the firmware running for all members of the Virtual Chassis configuration.

interconnect-device *name* (QFabric systems) (Optional) Display the version levels of the firmware running on the Interconnect device.

lcc *number* (TX Matrix and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display version levels for the firmware on a specified T640 router (line-card chassis) that is connected to the TX Matrix router. On a TX Matrix Plus router, display the version levels for the firmware on a specified router (line-card chassis) that is connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local (MX Series routers only) (Optional) Display the version levels of the firmware running for the local Virtual Chassis member.

member *member-id* (MX Series routers only) (Optional) Display the version levels of the firmware running for the specified member of the Virtual Chassis configuration. Replace *member-id* with a value of 0 or 1.

node-device (QFabric systems only) (Optional) Display the version levels of the firmware running on the Node device.

satellite [slot-id *slot-id* | device-alias *alias-name*] (Junos Fusion only) (Optional) Display version levels of the firmware running for the specified satellite device or devices in a Junos Fusion, or for all satellite devices if no satellite devices are specified.

scc (TX Matrix router only) (Optional) Display version levels for the firmware on the TX Matrix router (switch-card chassis).

sfc *number* (TX Matrix Plus router only) (Optional) Display version levels for the firmware on the TX Matrix Plus router (or switch-fabric chassis). Replace *number* with 0.

detail (EX3200, EX3300, EX4200, and EX4500 standalone and Virtual Chassis member switches only) (Optional) Display version levels of the firmware running on the switch for its programmable hardware components.

Required Privilege Level

view

Output Fields

Table 77 on page 1320 lists the output fields for the show chassis firmware command. Output fields are listed in the approximate order in which they appear.

Table 77: show chassis firmware Output Fields

Field Name	Field Description
Part	(MX Series, MX2010, MX2020, and MX2008 routers) Chassis part name.
Type	(MX Series, MX2010, MX2020, and MX2008 routers) Type of firmware: On routers: ROM or O/S. On switches: uboot or loader.
Version	(MX Series, MX2010, MX2020, and MX2008 routers) Version of firmware running on the chassis part.
FPC	(*detail* option only) Number of FPC. For a standalone switch, the value is 0. For a Virtual Chassis configuration, value in the range of 0-9; refers to the member ID assigned to the switch.
AFEB	(MX104 routers) Version of the compact Forwarding Engine Board.

Table 77: show chassis firmware Output Fields *(Continued)*

Field Name	Field Description
Boot	(*detail* option only) Version of the SYSPLD.
PoE	(*detail* option only) Version of the PoE firmware.
PFE-*<number>*	(*detail* option only) Version of the Packet Forwarding Engine used in the switch.
PHY-	(*detail* option only) Version of the physical layer device (PHY) used in the switch.
microcode	(*detail* option only) Microcode of the physical layer devices (PHY) used in the switch.
uboot	(*detail* option only) Version of the u-boot used in the switch.
loader	(*detail* option only) Version of the loader used in the switch.

Sample Output

show chassis firmware (M10 Router)

```
user@host> show chassis firmware
Part                    Type       Version
Forwarding engine board  ROM        Juniper ROM Monitor Version 4.1b2
                         O/S        Version 4.1I1 by usera on 2000-04-24 11:27
```

show chassis firmware (M20 Router)

```
user@host> show chassis firmware
Part                    Type       Version
```

```
System switch board      ROM        Juniper ROM Monitor Version 3.4b26
                         O/S        Version 3.4I16 by userc on 2000-02-29 2
FPC 1                    ROM        Juniper ROM Monitor Version 3.0b1
                         O/S        Version 3.4I4 by userc on 2000-02-25 21
FPC 2                    ROM        Juniper ROM Monitor Version 3.0b1
                         O/S        Version 3.4I4 by userc on 2000-02-25 21
```

show chassis firmware (M40 Router)

```
user@host> show chassis firmware
Part                     Type       Version
System control board     ROM        Juniper ROM Monitor Version 2.0i126Copyri
                         O/S        Version 2.0i1 by root on Thu Jul 23 00:51
FPC 5                    ROM        Juniper ROM Monitor Version 2.0i49Copyrig
                         O/S        Version 2.0i1 by root on Thu Jul 23 00:59
```

show chassis firmware (M160 Router)

```
user@host> show chassis firmware
Part                     Type       Version
SFM 0                    ROM        Juniper ROM Monitor Version 4.0b2
                         O/S        Version 4.0I1 by usera on 2000-02-29 11:50
SFM 1                    ROM        Juniper ROM Monitor Version 4.0b2
                         O/S        Version 4.0I1 by usera on 2000-02-29 11:50
FPC 0                    ROM        Juniper ROM Monitor Version 4.0b2
                         O/S        Version 4.0I1 by usera on 2000-02-29 11:56
FPC 1                    ROM        Juniper ROM Monitor Version 4.0b2
                         O/S        Version 4.0I1 by usera on 2000-02-29 11:56
FPC 2                    ROM        Juniper ROM Monitor Version 4.0b3
                         O/S        Version 4.0I1 by usera on 2000-02-29 11:56
```

show chassis firmware (MX150)

```
user@host > show chassis firmware
Part                     Type       Version
FPC                      ROM        PC Bios
```

```
                        O/S        Version 17.2I20170220_0929_rohitn by rohitn on 2017-02-20
09:38:59 UTC
```

show chassis firmware (MX104 Router)

```
user@host > show chassis firmware
Part                    Type       Version
FPC 0                   ROM        Juniper ROM Monitor Version 13.1b24
                        O/S        Version 13.2-20130514.1 by userb on 2013-
FPC 1                   ROM        Juniper ROM Monitor Version 13.1b24
                        O/S        Version 13.2-20130514.1 by userb on 2013-
FPC 2                   ROM        Juniper ROM Monitor Version 13.1b24
                        O/S        Version 13.2-20130514.1 by userb on 2013-
AFEB                    ROM        Juniper ROM Monitor Version 13.1b24
                        O/S        Version 13.2-20130514.1 by userb on 2013-
```

show chassis firmware (MX240 Router)

```
user@host> show chassis firmware
Part                    Type       Version
FPC 1                   ROM        Juniper ROM Monitor Version 8.3b1
                        O/S        Version 9.0-20080103.0 by userb on 2008-0
FPC 2                   ROM        Juniper ROM Monitor Version 8.3b1
                        O/S        Version 9.0-20080103.0 by userb on 2008-0
```

show chassis firmware (MX480 Router)

```
user@host> show chassis firmware
Part                    Type       Version
FPC 1                   ROM        Juniper ROM Monitor Version 8.3b1
                        O/S        Version 9.0-20070916.3 by userb on 2007-0
```

show chassis firmware (MX960 Router)

```
user@host> show chassis firmware
Part                    Type       Version
```

```
FPC 4                    ROM        Juniper ROM Monitor Version 8.0b8
                         O/S        Version 8.2I59 by user3 on 2006-10-31 19:22
FPC 7                    ROM        Juniper ROM Monitor Version 8.2b1
                         O/S        Version 8.2-20061026.1 by userb on 2006-1
```

show chassis firmware (MX2020 Router)

```
user@host> show chassis firmware
Part                     Type       Version
FPC 0                    ROM        Juniper ROM Monitor Version 10.0b39
                         O/S        Version 12.3-20130415.0 by userb on 2013-
FPC 1                    ROM        Juniper ROM Monitor Version 10.0b39
                         O/S        Version 12.3-20130415.0 by userb on 2013-
FPC 2                    ROM        Juniper ROM Monitor Version 10.0b39
                         O/S        Version 12.3-20130415.0 by userb on 2013-
FPC 3                    ROM        Juniper ROM Monitor Version 10.0b39
                         O/S        Version 12.3-20130415.0 by userb on 2013-
FPC 4                    ROM        Juniper ROM Monitor Version 10.0b39
                         O/S        Version 12.3-20130415.0 by userb on 2013-
FPC 5                    ROM        Juniper ROM Monitor Version 10.0b39
                         O/S        Version 12.3-20130415.0 by userb on 2013-
FPC 6                    ROM        Juniper ROM Monitor Version 10.0b39
                         O/S        Version 12.3-20130415.0 by userb on 2013-
FPC 7                    ROM        Juniper ROM Monitor Version 10.0b39
                         O/S        Version 12.3-20130415.0 by userb on 2013-
FPC 8                    ROM        Juniper ROM Monitor Version 10.0b39
                         O/S        Version 12.3-20130415.0 by userb on 2013-
FPC 9                    ROM        Juniper ROM Monitor Version 10.0b39
                         O/S        Version 12.3-20130415.0 by userb on 2013-
FPC 10                   ROM        Juniper ROM Monitor Version 10.0b39
                         O/S        Version 12.3-20130415.0 by userb on 2013-
FPC 11                   ROM        Juniper ROM Monitor Version 10.0b39
                         O/S        Version 12.3-20130415.0 by userb on 2013-
FPC 12                   ROM        Juniper ROM Monitor Version 10.0b39
                         O/S        Version 12.3-20130415.0 by userb on 2013-
FPC 13                   ROM        Juniper ROM Monitor Version 10.0b39
                         O/S        Version 12.3-20130415.0 by userb on 2013-
FPC 14                   ROM        Juniper ROM Monitor Version 10.0b39
                         O/S        Version 12.3-20130415.0 by userb on 2013-
FPC 15                   ROM        Juniper ROM Monitor Version 10.0b39
                         O/S        Version 12.3-20130415.0 by userb on 2013-
```

```
FPC 16                   ROM        Juniper ROM Monitor Version 10.0b39
                         O/S        Version 12.3-20130415.0 by userb on 2013-
FPC 17                   ROM        Juniper ROM Monitor Version 10.0b39
                         O/S        Version 12.3-20130415.0 by userb on 2013-
FPC 18                   ROM        Juniper ROM Monitor Version 10.0b39
                         O/S        Version 12.3-20130415.0 by userb on 2013-
FPC 19                   ROM        Juniper ROM Monitor Version 10.0b39
                         O/S        Version 12.3-20130415.0 by userb on 2013-
SPMB 0                   ROM        Juniper ROM Monitor Version 12.1b1
                         O/S        Version 12.3-20130415.0 by userb on 2013-
SPMB 1                   ROM        Juniper ROM Monitor Version 12.1b1
                         O/S        Version 12.3-20130415.0 by userb on 2013-
```

show chassis firmware (MX204 Router)

```
user@host> show chassis firmware

Part                     Type       Version
RE 0                     PRI BIOS   CBEP_P_SUM1_00.11.01
                         RE-FPGA    300
FPC                      ROM        PC Bios
                         O/S        Version 17.4I20171105_0609_aahluwalia by aahluwalia on
2017-11-05 06:09:28 UTC
```

show chassis firmware (MX10008 Router)

```
user@host> show chassis firmware
Part                     Type       Version
RE 0                     PRI BIOS   CBEP_P_VAL0_00.14.1
                         FPGA       264.0
                         RE-FPGA    41.0
                         RE-SSD1    SF-SBR12050
                         RE-SSD2    SF-SBR12050
                         i40e-NVM   6.01
RE 1                     PRI BIOS   CBEP_P_VAL0_00.13.01
                         FPGA       261.0
                         RE-FPGA    41.0
                         RE-SSD1    SF-SBR12034
                         RE-SSD2    SF-SBR12034
                         i40e-NVM   5.02
```

```
FPC 0                    ROM        PC Bios
                         O/S        Version 18.4-20180716_dev_common.0 by builder on 2018-07-16
00:43:35 UTC
                         ROM Monitor 0 9.14.0
                         PCIE Sw(0) 1.0.0
                         MPCS(0)    0.2.0
                         I2CS CPLD  0.4.0
                         BOOT CPLD  0.4.0
FPC 2                    ROM        PC Bios
                         O/S        Version 18.4-20180716_dev_common.0 by builder on 2018-07-16
00:43:35 UTC
                         ROM Monitor 0 9.14.0
                         PCIE Sw(0) 1.0.0
                         MPCS(0)    0.2.0
                         I2CS CPLD  0.4.0
                         BOOT CPLD  0.4.0
FPC 3                    ROM        PC Bios
                         O/S        Version 18.4-20180716_dev_common.0 by builder on 2018-07-16
00:43:35 UTC
                         ROM Monitor 0 9.14.0
                         PCIE Sw(0) 1.0.0
                         MPCS(0)    0.4.0
                         I2CS CPLD  0.8.0
                         BOOT CPLD  0.8.0
FPM                      FPGA       1.9
FTC 0                    FPGA       2.0
FTC 1                    FPGA       2.0
SFB 0                    FPGA       3.0
SFB 1                    FPGA       3.0
SFB 2                    FPGA       3.0
SFB 3                    FPGA       3.0
SFB 4                    FPGA       3.0
SFB 5                    FPGA       3.0
```

show chassis firmware (MX240, MX480, MX960 Router with Application Services Modular Line Card)

```
user@host> show chassis firmware

Part                     Type       Version
```

```
FPC 1                   ROM        Juniper ROM Monitor Version 12.1b1
                        O/S        Version 12.2I21 by user1 on 2012-06-19 17:
```

show chassis firmware (EX4200 Switch)

```
user@switch> show chassis firmware

Part                  Type       Version
FPC 0                 uboot      U-Boot 1.1.6 (Feb  6 2008 - 11:27:42)
                      loader     FreeBSD/PowerPC U-Boot bootstrap loader 2.1
FPC 1                 uboot      U-Boot 1.1.6 (Feb  6 2008 - 11:27:42)
                      loader     FreeBSD/PowerPC U-Boot bootstrap loader 2.1
FPC 2                 uboot      U-Boot 1.1.6 (Feb  6 2008 - 11:27:42)
                      loader     FreeBSD/PowerPC U-Boot bootstrap loader 2.1
```

show chassis firmware (EX8200 Switch)

```
user@switch> show chassis firmware

Part                    Type       Version
FPC 0                   U-Boot     U-Boot 1.1.6 (Mar 25 2009 - 06:13:12) 2.4.0
                        loader     FreeBSD/PowerPC U-Boot bootstrap loader 2.2
FPC 3                   U-Boot     U-Boot 1.1.6 (Dec  4 2009 - 13:17:34) 3.1.0
                        loader     FreeBSD/PowerPC U-Boot bootstrap loader 2.2
FPC 5                   U-Boot     U-Boot 1.1.6 (Mar 25 2009 - 06:13:12) 2.4.0
                        loader     FreeBSD/PowerPC U-Boot bootstrap loader 2.2
FPC 7                   U-Boot     U-Boot 1.1.6 (Feb  6 2009 - 05:31:46) 2.4.0
                        loader     FreeBSD/PowerPC U-Boot bootstrap loader 2.2
Routing Engine 0        U-Boot     U-Boot 1.1.6 (Mar 25 2009 - 06:13:12) 2.4.0
                                   FreeBSD/PowerPC U-Boot bootstrap loader 2.2
                        loader
Routing Engine 1        U-Boot     U-Boot 1.1.6 (Mar 25 2009 - 06:13:12) 2.4.0
                        loader     FreeBSD/PowerPC U-Boot bootstrap loader 2.2
```

show chassis firmware (EX9200 Switch)

```
user@switch> show chassis firmware

 Part                    Type       Version
 FPC 2                   ROM        Juniper ROM Monitor Version 11.4b2
                         O/S        Version 14.1I20140312_0741 by userd o
FPC 3                    ROM        Juniper ROM Monitor Version 10.4b1
                         O/S        Version 14.1I20140312_0741 by userd o
```

show chassis firmware (EX9251 Switch)

```
user@switch> show chassis firmware

Part                     Type       Version
RE 0                     PRI BIOS   CBEP_P_SUM1_00.11.01
                         RE-FPGA    301
FPC                      ROM        PC Bios
                         O/S        Version 18.1R1.4 by builder on 2018-03-06 00:31:54 UTC
```

show chassis firmware (EX9253 Switch)

```
user@switch> show chassis firmware

Part                     Type       Version
RE 0                     PRI BIOS   CBEP_P_SUM1_00.11.01
                         RE-FPGA    402
RE 1                     PRI BIOS   CBEP_P_SUM1_00.11.01
                         RE-FPGA    402
FPC 0                    ROM        PC Bios
                         O/S        Version 18.2-20180129_dev_common.1 by builder on 2018-01-29
13:35:11 UTC
FPC 1                    ROM        PC Bios
                         O/S        Version 18.2-20180129_dev_common.1 by builder on 2018-01-29
13:35:11 UTC
```

show chassis firmware lcc (TX Matrix Router)

```
user@host> show chassis firmware lcc 0
lcc0-re0:
--------------------------------------------------------------------------
Part                    Type       Version
FPC 1                   ROM        Juniper ROM Monitor Version 6.4b18
                        O/S        Version 7.0-20040804.0 by userb on 2004-0
FPC 2                   ROM        Juniper ROM Monitor Version 6.4b20
                        O/S        Version 7.0-20040804.0 by userb on 2004-0
SPMB 0                  ROM        Juniper ROM Monitor Version 6.4b18
                        O/S        Version 7.0-20040804.0 by userb on 2004-0
```

show chassis firmware scc (TX Matrix Router)

```
user@host> show chassis firmware scc

scc-re0:
--------------------------------------------------------------------------
Part                    Type       Version
SPMB 0                  ROM        Juniper ROM Monitor Version 6.4b18
                        O/S        Version 7.0-20040804.0 by userb on 2004-0
```

show chassis firmware (TX Matrix Plus Router)

```
user@host> show chassis firmware
sfc0-re0:
--------------------------------------------------------------------------
Part                    Type       Version
Global FPC 4
Global FPC 6
Global FPC 7
Global FPC 12
Global FPC 14
Global FPC 15
Global FPC 20
Global FPC 21
Global FPC 22
Global FPC 23
```

```
Global FPC 24
Global FPC 25
Global FPC 26
Global FPC 28
Global FPC 29
Global FPC 31
SPMB 0                  ROM        Juniper ROM Monitor Version 9.5b1
                        O/S        Version 9.6-20090507.0 by userb on 2009-0
SPMB 1                  ROM        Juniper ROM Monitor Version 9.5b1
                        O/S        Version 9.6-20090507.0 by userb on 2009-0

lcc0-re1:
--------------------------------------------------------------------------
Part                    Type       Version
FPC 4                   ROM        Juniper ROM Monitor Version 9.0b2
                        O/S        Version 9.6-20090507.0 by userb on 2009-0
FPC 6                   ROM        Juniper ROM Monitor Version 9.0b2
                        O/S        Version 9.6-20090507.0 by userb on 2009-0
FPC 7                   ROM        Juniper ROM Monitor Version 9.0b2
                        O/S        Version 9.6-20090507.0 by userb on 2009-0
SPMB 0                  ROM        Juniper ROM Monitor Version 9.5b1
                        O/S        Version 9.6-20090507.0 by userb on 2009-0
SPMB 1                  ROM        Juniper ROM Monitor Version 9.5b1
                        O/S        Version 9.6-20090507.0 by userb on 2009-0

lcc1-re1:
--------------------------------------------------------------------------
Part                    Type       Version
FPC 4                   ROM        Juniper ROM Monitor Version 9.0b2
                        O/S        Version 9.6-20090507.0 by userb on 2009-0
FPC 6                   ROM        Juniper ROM Monitor Version 9.0b2
                        O/S        Version 9.6-20090507.0 by userb on 2009-0
FPC 7                   ROM        Juniper ROM Monitor Version 9.0b2
                        O/S        Version 9.6-20090507.0 by userb on 2009-0
SPMB 0                  ROM        Juniper ROM Monitor Version 9.5b1
                        O/S        Version 9.6-20090507.0 by userb on 2009-0
SPMB 1                  ROM        Juniper ROM Monitor Version 9.5b1
                        O/S        Version 9.6-20090507.0 by userb on 2009-0

lcc2-re1:
--------------------------------------------------------------------------
Part                    Type       Version
FPC 4                   ROM        Juniper ROM Monitor Version 9.0b2
```

```
                        O/S         Version 9.6-20090507.0 by userb on 2009-0
FPC 5                   ROM         Juniper ROM Monitor Version 9.0b2
                        O/S         Version 9.6-20090507.0 by userb on 2009-0
FPC 6                   ROM         Juniper ROM Monitor Version 9.0b2
                        O/S         Version 9.6-20090507.0 by userb on 2009-0
FPC 7                   ROM         Juniper ROM Monitor Version 7.5b4
                        O/S         Version 9.6-20090507.0 by userb on 2009-0
SPMB 0                  ROM         Juniper ROM Monitor Version 9.5b1
                        O/S         Version 9.6-20090507.0 by userb on 2009-0
SPMB 1                  ROM         Juniper ROM Monitor Version 9.5b1
                        O/S         Version 9.6-20090507.0 by userb on 2009-0

lcc3-re1:
--------------------------------------------------------------------------
Part                    Type        Version
FPC 0                   ROM         Juniper ROM Monitor Version 9.0b2
                        O/S         Version 9.6-20090507.0 by userb on 2009-0
FPC 1                   ROM         Juniper ROM Monitor Version 9.0b2
                        O/S         Version 9.6-20090507.0 by userb on 2009-0
FPC 2                   ROM         Juniper ROM Monitor Version 9.0b2
                        O/S         Version 9.6-20090507.0 by userb on 2009-0
FPC 4                   ROM         Juniper ROM Monitor Version 7.5b4
                        O/S         Version 9.6-20090507.0 by userb on 2009-0
FPC 5                   ROM         Juniper ROM Monitor Version 9.0b2
                        O/S         Version 9.6-20090507.0 by userb on 2009-0
FPC 7                   ROM         Juniper ROM Monitor Version 9.0b2
                        O/S         Version 9.6-20090507.0 by userb on 2009-0
SPMB 0                  ROM         Juniper ROM Monitor Version 9.5b1
                        O/S         Version 9.6-20090507.0 by userb on 2009-0
SPMB 1                  ROM         Juniper ROM Monitor Version 9.5b1
                        O/S         Version 9.6-20090507.0 by userb on 2009-0
```

show chassis firmware lcc (TX Matrix Plus Router)

```
user@host> show chassis firmware lcc 0
lcc0-re1:
--------------------------------------------------------------------------
Part                    Type        Version
FPC 4                   ROM         Juniper ROM Monitor Version 9.0b2
                        O/S         Version 9.6-20090507.0 by userb on 2009-0
FPC 6                   ROM         Juniper ROM Monitor Version 9.0b2
```

```
                        O/S         Version 9.6-20090507.0 by userb on 2009-0
FPC 7                   ROM         Juniper ROM Monitor Version 9.0b2
                        O/S         Version 9.6-20090507.0 by userb on 2009-0
SPMB 0                  ROM         Juniper ROM Monitor Version 9.5b1
                        O/S         Version 9.6-20090507.0 by userb on 2009-0
SPMB 1                  ROM         Juniper ROM Monitor Version 9.5b1
                        O/S         Version 9.6-20090507.0 by userb on 2009-0
```

show chassis firmware sfc (TX Matrix Plus Router)

```
user@host> show chassis firmware sfc 0
sfc0-re0:
--------------------------------------------------------------------------
Part                    Type        Version
Global FPC 4
Global FPC 6
Global FPC 7
Global FPC 12
Global FPC 14
Global FPC 15
Global FPC 20
Global FPC 21
Global FPC 22
Global FPC 23
Global FPC 24
Global FPC 25
Global FPC 26
Global FPC 28
Global FPC 29
Global FPC 31
SPMB 0                  ROM         Juniper ROM Monitor Version 9.5b1
                        O/S         Version 9.6-20090507.0 by userb on 2009-0
SPMB 1                  ROM         Juniper ROM Monitor Version 9.5b1
                        O/S         Version 9.6-20090507.0 by userb on 2009-0
```

show chassis firmware (QFX Series and OCX Series)

```
user@switch> show chassis firmware
Part                    Type        Version
FPC 0
```

```
Routing Engine 0         U-Boot     U-Boot 1.1.6 (Sep 15 2010 - 02:11:11) 1.0.5
                         loader     FreeBSD/MIPS U-Boot bootstrap loader 0.1
```

show chassis firmware (PTX1000 Packet Transport Routers)

```
user@host> show chassis firmware
Part                     Type       Version
FPC 0                    U-Boot      ***
                         loader           FreeBSD/i386 bootstrap loader 1.2
                         BIOS       V0018.2U
                         EC FPGA    2.0
                         MAIN_CPLD  1.f
                         MEZZ_CPLD  1.f
                         RE FPGA    2.3
```

show chassis firmware (PTX10008 Routers)

```
user@host> show chassis firmware
Part                     Type       Version
RE 0                     PRI BIOS   QFXS_SFP_00.31_01.01
                         GDN BIOS   QFXS_SFP_00.31_01.01
                         FPGA       2.4
                         RE-FPGA    3.2
RE 1                     PRI BIOS   QFXS_SFP_00.31_01.01
                         GDN BIOS   QFXS_SFP_00.31_01.01
                         FPGA       2.3
                         RE-FPGA    3.2
FPC 0                    U-Boot     Bank A: U-Boot 2011.12-gfbea47a (Feb 26 2016 - 22:56:52)
                         CTRL FPGA  4.1
                         PORT FPGA  2.0
FPC 5                    U-Boot     Bank A: U-Boot 2011.12-gfbea47a (Feb 26 2016 - 22:56:52)
                         CTRL FPGA  3.1
                         PORT FPGA  2.0
FPC 6                    U-Boot     Bank B: U-Boot 2011.12-gfbea47a (Feb 26 2016 - 22:56:52)
                         CTRL FPGA  3.1
                         PORT FPGA  2.0
FPM                      FPGA       1.9
FTC 0                    FPGA       2.0
FTC 1                    FPGA       2.0
```

```
SIB 0                    FPGA       3.0
SIB 1                    FPGA       3.0
```

show chassis firmware interconnect-device (QFabric System)

```
user@switch> show chassis firmware interconnect-device
interconnect1
Part                     Type       Version
Routing Engine 0         U-Boot     U-Boot 1.1.6 (May 10 2011 - 04:52:59) 1.1.1
                         loader     FreeBSD/MIPS U-Boot bootstrap loader 0.1
Routing Engine 1         U-Boot     U-Boot 1.1.6 (May 10 2011 - 04:52:59) 1.1.1
                         loader     FreeBSD/MIPS U-Boot bootstrap loader 0.1
```

show chassis firmware (ACX2000 Universal Metro Router)

```
user@switch> show chassis firmware
Part                     Type       Version
FPC                      O/S        Version 12.2I13 by user2 on 2012-05-29 06:
FEB                      O/S        Version 12.2I13 by user2 on 2012-05-29 06:
```

show chassis firmware detail (EX3300 Switch)

```
user@switch> show chassis firmware detail
FPC 0
   Boot SYSPLD             3
   PoE firmware            4.1.6
   PFE-0                   3
   PFE-1                   3
   PHY
      microcode            0x514
   Boot Firmware
      uboot                U-Boot 1.1.6 (Aug 21 2011 - 01:45:26)   1.0.0
      loader               FreeBSD/arm U-Boot loader 1.0
```

show chassis firmware (MX Routers with Media Services Blade [MSB])

```
user@switch> show chassis firmware
Part                    Type       Version
FPC 1                   ROM        Juniper ROM Monitor Version 12.1b1
                        O/S        Version 12.2I21 by user1 on 2012-06-19 17:
```

show chassis firmware (ACX5048 Router)

```
user@host> show chassis firmware
Part                    Type       Version
FPC                     loader           FreeBSD/i386 bootstrap loader 1.2
                        BIOS       V0018.7
                        TMC FPGA   6.d8
                        PIC0 CPLD0 7.b
                        PIC0 CPLD1 7.b
                        PIC0 CPLD2 7.b
                        PIC0 CPLD3 7.b
                        PIC0 CPLD4 7.b
                        PIC0 CPLD5 7.b
                        PIC0 CPLD6 6.a
                        MRE        17.9
                        Power CPLD 3.a
```

show chassis firmware (ACX5096 Router)

```
user@host> show chassis firmware
Part                    Type       Version
FPC                     loader           FreeBSD/i386 bootstrap loader 1.2
                        BIOS       V0018.7
                        TMC FPGA   3000001.5
                        PIC0 CPLD0 7.b
                        PIC0 CPLD1 7.b
                        PIC0 CPLD2 7.b
                        PIC0 CPLD3 7.b
                        PIC0 CPLD4 7.b
                        PIC0 CPLD5 7.b
                        PIC0 CPLD6 c6.a
                        PIC0 CPLD7 -NA-
```

```
                        PIC0 CPLD8 7.b
                        PIC0 CPLD9 7.b
                        PIC0 CPLD10 7.b
                        PIC0 CPLD11 7.b
                        PIC0 CPLD12 7.b
                        PIC0 CPLD13 7.b
                        PIC0 CPLD14 c6.a
                        MRE        7.5
                        Power CPLD 4.1
```

show chassis firmware (ACX500 Router)

```
user@host> show chassis firmware

Part                    Type       Version
FPC                     O/S        Version 15.2-20150815_dev_rbu_1_16q1.0 by userb on
2015-08-15 04:18:02 UTC
FEB                     O/S        Version 15.2-20150815_dev_rbu_1_16q1.0 by userb on
2015-08-15 04:18:02 UTC
```

Release Information

Command introduced before Junos OS Release 7.4.

sfc option introduced in Junos OS Release 9.6 for the TX Matrix Plus router.

Command introduced for EX8200 switches in Junos OS Release 10.2 for EX Series switches.

`satellite` option introduced in Junos OS Release 14.2R3.

show chassis forwarding

IN THIS SECTION

- Syntax | 1337
- Description | 1337
- Options | 1337
- Required Privilege Level | 1338
- Output Fields | 1338
- Sample Output | 1339
- Release Information | 1339

Syntax

```
show chassis forwarding
```

Description

Display status of the forwarding process (fwdd). This command is supported on Branch SRX Series Services Gateways.

Options

This command has no options.

Required Privilege Level

view

Output Fields

Table 78 on page 1338 lists the output fields for the `show chassis forwarding` command. Output fields are listed in the approximate order in which they appear.

Table 78: show chassis forwarding Output Fields

Field Name	Field Description

FWWD status	Forwarding status:
	• **State**:
	  • **Online**—FWDD is operational and running.
	  • **Offline**—FWDD is not running.
	• **Microkernel CPU utilization**—Percentage of microkernel CPU being used by the forwarding process.
	• **Real-time threads CPU utilization**—Percentage of CPU being used by the forwarding process.
	• **Heap utilization**—Percentage of heap space (dynamic memory) being used by the forwarding process. If this number exceeds 80 percent, there may be a software problem (memory leak).
	• **Buffer utilization**—Percentage of buffer space being used by the forwarding process for buffering internal messages.
	• **Uptime**—How long the forwarding process has been up and running.

Sample Output

show chassis forwarding

```
user@host> show chassis forwarding
FWDD status:
  State                                Online
  Microkernel CPU utilization        10 percent
  Real-time threads CPU utilization   4 percent
  Heap utilization                   26 percent
  Buffer utilization                  0 percent
  Uptime:                             1 day, 1 hour, 30 minutes, 11 seconds
```

Release Information

Current—Command introduced before Junos OS Release 7.4.

Now—Command introduced in Junos OS Release 7.4. Support for Branch SRX Series added in Junos OS Release 10.1

show chassis fpc

IN THIS SECTION

- Syntax | **1340**
- Syntax (EX Series Switches, PTX Series Routers, ACX Universal Series Routers, ACX500, ACX7509, TX Matrix and TX Matrix Plus Routers) | **1340**
- Syntax (T4000 Routers) | **1341**
- Syntax (MX Series Routers, EX Series, and PTX Series switches) | **1341**
- Syntax (PTX10008 and PTX10001-36MR) | **1341**
- Syntax (MX104, MX204, MX2010, MX2020, MX10003, and MX2008 Universal Routing Platforms) | **1341**
- Syntax (MX10008 Universal Routing Platforms) | **1342**

- Syntax (QFX Series) | **1342**
- Syntax (OCX Series) | **1342**
- Syntax (ACX500 Routers) | **1342**
- Syntax (Junos OS Evolved) | **1343**
- Description | **1343**
- Options | **1343**
- Required Privilege Level | **1350**
- Output Fields | **1350**
- Sample Output (Junos OS) | **1356**
- Sample Output (Junos OS Evolved) | **1399**
- Sample Output (Node Slicing) | **1402**
- Usage | **1404**
- Release Information | **1404**

Syntax

```
show chassis fpc
<detail <slot>> | <pic-status <slot>> | <pfe-instance <pfe-id>>
all
```

Syntax (EX Series Switches, PTX Series Routers, ACX Universal Series Routers, ACX500, ACX7509, TX Matrix and TX Matrix Plus Routers)

```
show chassis fpc
<detail <fpc-slot>> | <pic-status <fpc-slot>>
<fpc-slot> | <pfe <pfe-id>>
```

Syntax (T4000 Routers)

```
show chassis fpc
<detail <fpc-slot>>
<pic-status <fpc-slot>>
```

Syntax (MX Series Routers, EX Series, and PTX Series switches)

```
show chassis fpc
< <slot>> | <pic-status <slot>>
<all-members>
<local>
<member member-id>
```

Syntax (PTX10008 and PTX10001-36MR)

```
show chassis fpc
<slot> | <pic-status <slot>> | <pfe-instance <pfe-id>>
all
```

Syntax (MX104, MX204, MX2010, MX2020, MX10003, and MX2008 Universal Routing Platforms)

```
show chassis fpc
<slot> detail | <detail <slot>> | <pic-status <slot>>
<fpc-slot>
```

Syntax (MX10008 Universal Routing Platforms)

```
show chassis fpc
<detail>
<errors>
<fpc-slot>
pic-status <fpc-slot>
```

Syntax (QFX Series)

```
show chassis fpc
<detail>
<interconnect-device name <fpc-slot fpc-slot>>
<node-device name>
```

Syntax (OCX Series)

```
show chassis fpc
<detail>
```

Syntax (ACX500 Routers)

```
show chassis fpc
<fpc-slot>
detail <fpc-slot>
pic-status <fpc-slot>
```

Syntax (Junos OS Evolved)

```
show chassis fpc <fpc-slot>
<detail | pic-status | <pfe-instance <pfe-id>> | errors> all
```

Description

Display status information about the installed Flexible PIC Concentrators (FPCs) and PICs.

Options

none Display status information for all FPCs. On a TX Matrix router, display status information for all FPCs on the attached T640 routers in the routing matrix. On a TX Matrix Plus router, display status information for all FPCs on the attached routers in the routing matrix.

NOTE: In EX8200 switches, line cards initialize Packet Forwarding Engine during startup. If an error occurs during hardware initialization, the FPCs with bad hardware parts power down after transferring the debug information to the Routing Engine. The Routing Engine marks the FPC offline, logs the error `communication failure with /fpc8/hwdfpc/...` in system log messages (/var/log/messages), and generates an alarm to inform the user.

See the following sample output:

```
user@host> show chassis fpc
                    Temp  CPU Utilization (%)   Memory    Utilization (%)
Slot State           (C)  Total  Interrupt      DRAM (MB) Heap     Buffer
  0  Empty
  1  Empty
  2  Empty
  3  Empty
  4  Offline         ---Configured power off---
  5  Offline         ---Hard FPC error---
  6  Empty
```

```
  7  Online            26      4          0       1024        0         32
     error: communication failure with /fpc8/hwdfpc/
```

The following sample output shows the alarm raised for the failed FPCs:

```
user@host> show chassis alarms
4 alarms currently active
Alarm time               Class  Description
2011-03-24 00:52:51 UTC  Major  FPC 5 Hard errors
2011-03-24 00:52:31 UTC  Major  Fan Tray Failure
2011-03-24 00:52:31 UTC  Major  Fan Tray Failure
2011-03-24 00:51:26 UTC  Minor  Loss of communication with Backup RE
```

NOTE: On T4000 routers, when you include the `enhanced-mode` statement at the `[edit chassis network-services]` hierarchy level and reboot the system, only the T4000 Type 5 FPCs present on the router become online while the remaining FPCs are offline, and FPC misconfiguration alarms are generated. The `show chassis alarm` command output displays FPC misconfiguration (`FPC` *`fpc-slot`* `misconfig`) as the reason for the generation the alarms.

The following sample output shows the FPC status after the `enhanced-mode` statement is configured on the T4000 router. The T4000 Type 5 FPC present in slot 5 becomes online while the remaining FPCs are offline.

```
user@host> show chassis fpc
                    Temp  CPU Utilization (%)   Memory    Utilization (%)
Slot State           (C)  Total  Interrupt      DRAM (MB) Heap     Buffer
  0  offline        ---FPC misconfiguration---
  1  offline        ---FPC misconfiguration---
  2  offline        ---FPC misconfiguration---
  3  Empty
  4  Empty
  5  Online           66      50          0       2816       29      27
```

The following sample output shows FPC misconfiguration alarms:

```
user@host> show chassis alarms
3 alarms currently active
```

```
Alarm time               Class  Description
2011-03-24 00:52:51 PST  Major  FPC 1 misconfig
2011-03-24 00:52:31 PST  Major  FPC 2 misconfig
2011-03-24 00:52:31 PST  Major  FPC 3 misconfig
```

The following sample output shows FPC communication errors and error messages:

```
user@host> run show chassis fpc
                          Temp  CPU Utilization (%)   CPU Utilization
(%)  Memory    Utilization (%)
         Slot State           (C)  Total  Interrupt      1min   5min
15min  DRAM (MB) Heap     Buffer
           3  Online            57      3          0        3      3
3    31561      16          0
           8  Offlining       ---Configured power off---
          12  Online            49      2          0        2      2
2    31561      15          0
          13  Online            49      2          0        2      2
2    31561      14          0
          14  Offline         ---Configured power off---
          15  Offline         ---Configured power off---
 error: communication failure with /fpc8/hwdfpc/
 1. The producer app is either down or unresponsive
 Run "show system processes node <node> | grep <app>" to check if app is
running
 Run "show system application app <app>" to check the state of the app
 2. If there is a change in mastership recently, please wait for the
switchover to complete for the app to be online
 Run "request chassis routing-engine master switch check" to check the
status of switchover
```

detail (Optional) Display detailed status information for all FPCs or for the FPC in the specified slot (see *fpc-slot* or *slot*).

all-members (MX Series routers, EX Series switches, PTX10016 only) (Optional) Display status information for all FPCs on all members of the Virtual Chassis configuration.

interconnect-device *name* (QFabric systems only) (Optional) Display status information for all FPCs on the Interconnect device.

fpc-slot (Optional) FPC slot number:

- (TX Matrix and TX Matrix Plus routers only)—On a TX Matrix router, if you specify the number of the T640 router (line-card chassis) by using the `lcc` *number* option (the recommended method), replace *fpc-slot* with a value from `0` through `7`. Otherwise, replace *fpc-slot* with a value from `0` through `31`. Likewise, on a TX Matrix Plus router, if you specify the number of the specified router (line-card chassis) by using the `lcc` *number* option (the recommended method), replace *fpc-slot* with a value from `0` through `7`. Otherwise, replace *fpc-slot* with a value from `0` through `31`. For example, the following commands have the same result:

  ```
  user@host> show chassis fpc detail 1 lcc 1
  user@host> show chassis fpc detail 9
  ```

- M120 router—Replace *fpc-slot* with a value from `0` through `5`.
- MX80 router—Replace *fpc-slot* with a value from `0` through `1`.
- MX104 and MX104-40G routers—Replace *fpc-slot* with a value from `0` through `2`.
- MX240 router—Replace *fpc-slot* with a value from `0` through `2`.
- MX480 router—Replace *fpc-slot* with a value from `0` through `5`.
- MX-960 router—Replace *fpc-slot* with a value from `0` through `11`.
- MX2010 router—Replace *fpc-slot-number* with a value from `0` through `9`.
- MX2008 router—Replace *fpc-slot-number* with a value from `0` through `9`.
- MX2020 router—Replace *fpc-slot-number* with a value from `0` through `19`.
- Other routers—Replace *fpc-slot* with a value from `0` through `7`.
- EX Series switches:
  - EX3200 switches and EX4200 standalone switches—Replace *fpc-slot* with `0`.
  - EX4200 switches in a Virtual Chassis configuration—Replace *fpc-slot* with a value from `0` through `9`.
  - EX6210 switches—Replace *fpc-slot* with a value from `0` through `9`.
  - EX8208 switches—Replace *fpc-slot* with a value from `0` through `7`.

- EX8216 switches—Replace *fpc-slot* with a value from 0 through 15.
- EX9204 switches—Replace *fpc-slot* with a value from 0 through 2.
- EX9208 switches—Replace *fpc-slot* with a value from 0 through 5.
- EX9214 switches—Replace *fpc-slot* with a value from 0 through 11.

- QFX Series:
  - QFXSeries and OCX Series switches—Replace *fpc-slot* with 0.
  - QFabric systems—Replace *fpc-slot* with 0 through 31 on the Interconnect device.
- PTX Series Packet Transport Routers:
  - PTX5000 Packet Transport Router—Replace *fpc-slot* with a value from 0 through 7.
  - PTX10016 Packet Transport Router—Replace *fpc-slot* with a value from 0 through 15.
- ACX Universal Metro Routers, ACX7509:
  - ACX1000 and ACX2000 Universal Metro Routers—Replace *fpc-slot* with 0.

interconnect-device ***name*** (QFabric systems only) (Optional) Display status information for all FPCs on the Interconnect device.

lcc ***number*** (TX Matrix router and TX Matrix Plus router only) (Optional) Line-card chassis number.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local (MX Series routers and EX Series switches only) (Optional) Display status information for all FPCs on the local Virtual Chassis member.

member *member-id* (MX Series routers and EX Series switches only) (Optional) Display status information for all FPCs on the specified member of the Virtual Chassis configuration. Replace *member-id* with a value of 0 or 1.

node-device *name* (QFabric systems only) (Optional) Display status information for each Node device. Each Node device is equivalent to an FPC.

pic-status (Optional) Display status information for all PICs or for the PIC in the specified slot (see *fpc-slot*).

NOTE: On T1600 routers, Type 4 FPCs with ASICs based on the SL2.0 chipset do not support the 10-Gigabit Ethernet LAN/WAN PIC with SFP+ (10x10GE [LAN/WAN] SFPP). If you issue the `show chassis fpc` command with the `pic-status` option, the CLI displays the string "Not Supported" for 10x10GE(LAN/WAN) SFPP PICs installed on such FPCs. The following is a sample output:

```
user@host> show chassis fpc pic-status
Slot 0   Online       E2-FPC Type 1
  PIC 0  Online       1x G/E SFP, 1000 BASE
  PIC 1  Online       Adaptive Services-II
  PIC 2  Online       1x G/E IQ, 1000 BASE
  PIC 3  Online       1x G/E IQ, 1000 BASE
Slot 1   Online       FPC Type 3-ES
  PIC 0  Present      UNUSED- Not Supported
Slot 2   Online       FPC Type 4-ES
  PIC 0  Offline      4x OC-192 SONET XFP
  PIC 1  Present      10x10GE(LAN/WAN) SFPP- Not Supported        <<<<<<
Slot 4   Offline      FPC Type 1-ES
Slot 5   Offline      FPC Type 2-ES
Slot 6   Online       E2-FPC Type 3
  PIC 0  Online       1x OC-192 SONET XFP
  PIC 1  Online       4x OC-48 SONET
  PIC 2  Online       4x OC-48 SONET
  PIC 3  Online       MultiServices 500
Slot 7   Online       FPC Type 4-ES
  PIC 0  Online       4x 10GE (LAN/WAN) XFP
  PIC 1  Online       4x 10GE (LAN/WAN) XFP
```

In addition, an entry is logged in the system log messages (/var/log/messages) that the PIC is not supported. The following is a sample message logged in the system log:

```
Apr  5 08:47:36  router1 chassisd[2770]: CHASSISD_UNSUPPORTED_PIC: PIC 1 in
FPC 2 (type 763, version 257) is not supported
```

If you see this issue, contact Juniper Networks Technical Assistance Center (JTAC) for a possible fix.

NOTE: When there is a double-bit ECC error in a network processor's memory, the Channelized OC3/STM1 (Multi-Rate) Circuit Emulation MIC with SFP or Channelized E1/T1 Circuit Emulation MIC is switched to the offline state.

```
user@host> show chassis fpc pic-status
Slot 1   Online       MPC Type 2 3D Q
PIC 0  Offline      1xCOC12/4xCOC3 CH-CE- ECC error detected
```

pfe-instance

- *pfe-id*— (PTX Series Devices) (Optional) Display status information for the specific PFE instance on the FPCs.
- `all`—(PTX10008 and PTX10001-36MR) (Optional) Display status information for all PFE instances on the FPCs.

lcc *number*

(TX Matrix router and TX Matrix Plus router only) (Optional) Line-card chassis number.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

lcc *number*

(TX Matrix router and TX Matrix Plus router only) (Optional) Line-card chassis number.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.

Required Privilege Level

view

Output Fields

Table 79 on page 1351 lists the output fields for the `show chassis fpc` command. Output fields are listed in the approximate order in which they appear.

Table 79: show chassis fpc Output Fields

Field Name	Field Description	Level of Output

`Slot` or `Slot State`	Slot number and state. The state can be one of the following conditions:
	• `Dead`—Held in reset because of errors.
	• `Diag`—Slot is being ignored while the FPC is running diagnostics.
	• `Dormant`—Held in reset.
	• `Empty`—No FPC is present.
	• `Offline`—(PTX Series Packet Transport Routers only) One of the following two states is displayed:
	  • `FPC offlined due to unreachable destinations`
	  • `FPC Offlined due to degraded FPC action`
	• `Online`—FPC is online and running.
	• `Present`—FPC is detected by the chassis daemon but either is not supported by the current version of Junos OS or is inserted in the wrong slot. The output also states either `Hardware Not Supported` or `Hardware Not In Right Slot`. The FPC is coming up but not yet online.
	• `Probed`—Probe is complete; awaiting restart of the Packet Forwarding Engine.
	• `Probe-wait`—Waiting to be probed.
	• `Unknown`—FPC is present but the state is unknown.
	• `Present`—FPC is plugged in. The FPC is not powered on or operational.
	• `Onlining`—FPC is in the process of going online. ASIC and rest of the hardware is initializing.
	• `Offlining`—FPC is in the process of going offline. ASIC and rest of the hardware is being shutdown down to take the offline gracefully.
	• `Fault`—FPC is in an alarmed state in which none of the PICs are operational.
		all levels

Table 79: show chassis fpc Output Fields *(Continued)*

Field Name	Field Description	Level of Output
	• Fault-off—FPC is powered off due to a fault. • Spare—FPC is redundant and will move to active state if one of the working FPCs fails to pass traffic.	
Logical slot	Slot number.	all levels
Temp (C) or Temperature	Temperature of the air passing by the FPC, in degrees Celsius or in both Celsius and Fahrenheit.	all levels all levels
Temperature (PTX Series)	On PTX Series Packet Transport Routers, temperature details are provided in degrees Celsius and Fahrenheit. Output includes: • Temperature (PMB)—Temperature of the air passing by the Processor Mezzanine Board (PMB) at the bottom of the FPC. • Temperature (Intake)—Temperature of the air flowing into the chassis. • Temperature (Exhaust)—Exhaust temperatures for multiple zones (Exhaust A and Exhaust B). • Temperature (TL*n*)--Temperature of the specified Lookup ASIC (TL) of the packet forwarding engine on the FPC. • Temperature (TQ*n*)--Temperature of the specified Queuing and Memory Interface ASIC (TQ) of the packet forwarding engine on the FPC.	detail
Total CPU Utilization (%)	Total percentage of CPU being used by the FPC's processor.	all levels
Interrupt CPU Utilization (%)	Of the total CPU being used by the FPC's processor, the percentage being used for interrupts.	none specified

Table 79: show chassis fpc Output Fields *(Continued)*

Field Name	Field Description	Level of Output
`1 min CPU utilization (%)` **NOTE**: Supported only on MX240, MX480, MX960, MX2010, MX2020, and MX2008.	Information about the Routing Engine's CPU utilization in the past 1 minute.	none specified
`5 min CPU utilization (%)` **NOTE**: Supported only on MX240, MX480, MX960, MX2010, MX2020, and MX2008.	Information about the Routing Engine's CPU utilization in the past 5 minutes.	none specified
`15 min CPU utilization (%)` **NOTE**: Supported only on MX240, MX480, MX960, MX2010, MX2020, and MX2008.	Information about the Routing Engine's CPU utilization in the past 15 minutes.	none specified
`Memory DRAM (MB)`	Total DRAM, in megabytes, available to the FPC's processor.	none specified

Table 79: show chassis fpc Output Fields *(Continued)*

Field Name	Field Description	Level of Output
`Heap Utilization (%)`	Percentage of heap space (dynamic memory) being used by the FPC's processor. If this number exceeds 80 percent, there may be a software problem (memory leak). **NOTE**: On MX Series routers and EX Series switches in a broadband edge environment, heap utilization levels higher than 70 percent can affect unified ISSU, router stability, or scaling capability.	none specified
`Buffer Utilization (%)`	Percentage of buffer space being used by the FPC's processor for buffering internal messages.	none specified
`Total CPU DRAM`	Amount of DRAM available to the FPC's CPU.	`detail`
`Total RLDRAM`	Amount of reduced latency dynamic random access memory (RLDRAM) available to the FPC CPU.	`detail`
`Total DDR DRAM`	Amount of double data rate dynamic random access memory (DDR DRAM) available to the FPC CPU.	`detail`
`Total SRAM`	Amount of static RAM (SRAM) used by the FPC's CPU.	`detail`
`Total SDRAM`	Total amount of memory used for storing packets and notifications.	`detail`
`I/O Manager ASICs information`	I/O Manager version number, manufacturer, and part number.	`detail`
`Start time`	Time when the Routing Engine detected that the FPC was running.	`detail`
`Uptime`	How long the Routing Engine has been connected to the FPC and, therefore, how long the FPC has been up and running.	`detail`
`PIC type`	(`pic-status` output only) Type of PIC.	none specified

Table 79: show chassis fpc Output Fields *(Continued)*

Field Name	Field Description	Level of Output
`PFE-Instance` (PTX10008 and PTX10001-36MR)	The PFE instance ID for the specific FPC.	
`PFE-State` (PTX10008 and PTX10001-36MR)	The state of PFE, The possible PFE-States are: **ONLINE:** PFE is online. **Configured power off:** PFE Offlined through configuration. **Offlined by CLI:** PFE is offlined through the request command in CLI. **Offlined by CmError:**PFE offlined through CM-Error action. **Transition Offline:** Status During PFE Transition. **Fault:** If disable-pfe cmerror action is taken by system on Major/Fatal errors.	
GNF (Node slicing)	GNF identifier associated with each line card. (`pic-status` output only) GNF identifier associated with each PIC.	all levels
`Temperature Performance Throttle` (only for PTX10004, PTX10008, PTX10001-36MR, and PTX100016 with PTX10K-LC1201-36CD and PTX10K-LC1202-36MR line cards, and PTX10001-36MR FPC Junos Evolved)	Temperature performance throttle status associated with an FPC and PFE ID : "Enabled" or "Disabled". This feature is enabled by default on all PFE instances.	`pfe` *`pfe_id`*

Table 79: show chassis fpc Output Fields *(Continued)*

Field Name	Field Description	Level of Output
`Temperature voltage reduction` (only for PTX10004, PTX10008, PTX10001-36MR and PTX100016 with PTX10K-LC1201-36CD and PTX10K-LC1202-36MR line cards, and PTX10001-36MR FPC Junos Evolved)	Temperature voltage reduction status associated with an FPC and PFE ID: "Enabled" or "Disabled". This feature is enabled by default on all PFE instances.	`pfe` *pfe_id*
`PFE-Instance`	(`PFE-instance` output only) PFE instance ID.	none specified
`PFE-State`	State of PFE. (Enabled or Disabled)	all levels
`PPFE-ID`	Per PFE ID.	`pfe` *pfe_id*

Sample Output (Junos OS)

show chassis fpc (EX6210 Switch)

```
user@switch> show chassis fpc
                    Temp  CPU Utilization (%)   Memory    Utilization (%)
Slot State           (C)  Total  Interrupt      DRAM (MB) Heap     Buffer
  0  Empty
  1  Online            7      5          0       1024        0         32
  2  Empty
  3  Empty
```

```
  4  Online            25     17          2       2048        0         30
  5  Online            25      3          0       2048        0         24
  6  Online             6      5          0       1024        0         32
  7  Empty
  8  Empty
  9  Online             8      7          0       1024        0         32
```

show chassis fpc (M20 Router)

```
user@host> show chassis fpc
FPC status:
               Temp  CPU Utilization (%)   Memory    Utilization (%)
Slot State      (C)  Total  Interrupt      DRAM (MB) Heap     Buffer
  0  Empty        0      0          0         0         0          0
  1  Online      38      0          0         8         0          4
  2  Online      35      0          0         8         0          3
  3  Empty        0      0          0         0         0          0
```

show chassis fpc detail (M Series Routers)

```
user@host> show chassis fpc detail 1
Slot 1 information:
  State                               Online
  Temperature                      48 degrees C
  Total CPU DRAM                   32 MB
  Total SRAM                        4 MB
  Total SDRAM                     256 MB
  I/O Manager ASICs information       Version 2.0, Foundry IBM, Part number 0
  I/O Manager ASICs information       Version 2.0, Foundry IBM, Part number 0
  Start time                          2000-02-08 02:18:49 UTC
  Uptime                              14 hours, 41 minutes, 41 seconds
```

show chassis fpc detail (MX150)

```
user@host> show chassis fpc detail
Slot 0 information:
  State                               Online
  Temperature                      42 degrees C / 107 degrees F
```

```
  Total CPU DRAM                2048 MB
  Total RLDRAM                    10 MB
  Total DDR DRAM                   0 MB
  Start time                       2017-04-04 04:44:04 PDT
  Uptime                           7 days, 19 hours, 45 minutes, 50 seconds
```

show chassis fpc (MX104 Router)

```
user@host> show chassis fpc
Temp  CPU Utilization (%)   Memory    Utilization (%)
Slot State            (C)  Total  Interrupt      DRAM (MB) Heap     Buffer
  0  Online            32     15          5       2048       22         13
  1  Online            32     15          5       2048       22         13
  2  Online            32     15          5       2048       22         13
```

show chassis fpc detail (MX104 Router)

```
user@host> show chassis fpc detail
Slot 0 information:
  State                            Online
  Temperature                     32 (C)
  Total CPU DRAM                2048 MB
  Total SRAM                     403 MB
  Total SDRAM                   1316 MB
  Start time                       2013-05-23 14:39:18 IST
  Uptime                           1 hour, 20 minutes, 22 seconds
Slot 1 information:
  State                            Online
  Temperature                     32 (C)
  Total CPU DRAM                2048 MB
  Total SRAM                     403 MB
  Total SDRAM                   1316 MB
  Start time                       2013-05-23 14:39:18 IST
  Uptime                           1 hour, 20 minutes, 22 seconds
Slot 2 information:
  State                            Online
  Temperature                     32 (C)
  Total CPU DRAM                2048 MB
  Total SRAM                     403 MB
  Total SDRAM                   1316 MB
```

```
  Start time                          2013-05-23 14:39:18 IST
  Uptime                              1 hour, 20 minutes, 22 seconds
```

show chassis fpc pic-status (MX104 Router)

```
user@host> show chassis fpc pic-status
Slot 0   Online
Slot 1   Online
  PIC 0  Online       10x 1GE(LAN) -E  SFP
  PIC 1  Online       10x 1GE(LAN) -E  SFP
Slot 2   Online
  PIC 0  Online       4x 10GE(LAN) SFP+
```

show chassis fpc (MX240 Router)

```
user@host> show chassis fpc
               Temp    CPU Utilization (%)     Memory       Utilization (%)
Slot State            (C)  Total  Interrupt      DRAM (MB) Heap     Buffer
  0  Empty
  1  Online            34      6          0       1024       18         30
  2  Online            33      9          0       1024       24         30
```

If you have installed a Switch Control Board (SCB1) instead of a line card (DPC0) in the multifunction slot on the MX240, the `show chassis fpc` output shows the slot `0` as empty.

show chassis fpc detail (EX9200 Switch)

```
user@switch> show chassis fpc detail

Slot 2 information:
  State                               Online
  Temperature                          37
  Total CPU DRAM                     2048 MB
  Total RLDRAM                        331 MB
  Total DDR DRAM                     1536 MB
  Start time:                         2014-03-12 15:35:28 UTC
  Uptime:                             1 hour, 4 minutes, 29 seconds
  Max Power Consumption               239 Watts
Slot 3 information:
```

```
  State                                 Online
  Temperature                        39
  Total CPU DRAM                   2048 MB
  Total RLDRAM                     1036 MB
  Total DDR DRAM                   6656 MB
  Start time:                           2014-03-12 15:00:18 UTC
  Uptime:                               1 hour, 39 minutes, 39 seconds
  Max Power Consumption             520 Watts
```

show chassis fpc (MX480 Router)

```
user@host> show chassis fpc
                Temp  CPU Utilization (%)   CPU Utilization (%)  Memory    Utilization (%)
Slot State            (C)  Total  Interrupt      1min   5min   15min  DRAM (MB) Heap     Buffer
  0  Online                   1          0        1      2      3    1024        4         56
  1  Online                   1          0        2      2      3    1024        4         56
```

show chassis fpc (MX480 Router with 100-Gigabit Ethernet CFP)

```
user@host> show chassis fpc
        Temp  CPU Utilization (%)   Memory    Utilization (%)
Slot State     (C)  Total  Interrupt      DRAM (MB) Heap     Buffer
 0  Online      33   4      0              2048      10       13
 1  Online      36   7      0              2048      16       13
 2  Online      29   6      0              1024      27       29
 3  Online      33   0      0                 0       0        0
 4  Online      36   7      0              2048      19       13
 5  Online      34  31      11             2048      14       13
```

show chassis fpc pic-status (MX480 Router with 100-Gigabit Ethernet CFP)

```
user@host> show chassis fpc pic-status
Slot 1   Online       MPC Type 3
  PIC 2  Online       1X100GE CFP
 Slot 2  Online       DPCE 40x 1GE R EQ
  PIC 0  Online       10x 1GE(LAN) EQ
  PIC 1  Online       10x 1GE(LAN) EQ
  PIC 2  Online       10x 1GE(LAN) EQ
```

```
  PIC 3  Online       10x 1GE(LAN) EQ
 Slot 3  Online       MPC Type 3
  PIC 0  Online       1X100GE CFP
  PIC 2  Online       1X100GE CFP
 Slot 4  Online       MPC Type 3
  PIC 0  Online       1X100GE CFP
  PIC 2  Online       1X100GE CFP
 Slot 5  Online       MPC Type 2 3D EQ
  PIC 0  Online       2x 10GE  XFP
  PIC 1  Online       2x 10GE  XFP
  PIC 2  Online       10x 1GE(LAN) SFP
  PIC 3  Online       10x 1GE(LAN) SFP
```

show chassis fpc pic-status (EX Series Switch)

```
user@host> show chassis fpc pic-status
Slot 1   Online       EX9200 32x10G SFP
  PIC 0  Online       8X10GE SFPP
  PIC 1  Online       8X10GE SFPP
  PIC 2  Online       8X10GE SFPP
  PIC 3  Online       8X10GE SFPP
Slot 2   Online       EX9200 32x10G SFP
  PIC 0  Online       8X10GE SFPP
  PIC 1  Online       8X10GE SFPP
  PIC 2  Online       8X10GE SFPP
  PIC 3  Online       8X10GE SFPP
```

show chassis fpc (MX960 Router with MPC5EQ)

```
user@host> show chassis fpc
                    Temp  CPU Utilization (%)   Memory    Utilization (%)
Slot State           (C)  Total  Interrupt      DRAM (MB) Heap     Buffer
  0  Online           38     16          0       3584        7         13
  1  Online           31     15          0       2048       17         13
  2  Empty
  3  Online           31     14          0       2048       20         13
  4  Online           34     16          0       3584        7         13
  5  Online           34     16          0       3584        7         13
  6  Empty
  7  Online           32      9          0       2048       18         14
```

```
  8  Online            36     19          0       3584        7          13
  9  Online            31      9          0       2048       13          13
 10  Online            35     14          0       3584        7          13
 11  Online            33     11          0       2048       18          14
```

show chassis fpc (MX240, MX480, MX960 with Application Services Modular Line Card)

```
user@host> show chassis fpc 1 detail
Slot 1 information:
  State                                Online
  Temperature                        34
  Total CPU DRAM                   3072 MB
  Total RLDRAM                      259 MB
  Total DDR DRAM                   4864 MB
  Start time:                          2012-06-19 10:51:43 PDT
  Uptime:                              16 minutes, 48 seconds
  Max Power Consumption             550 Watts
```

show chassis fpc (MX240, MX480, MX960, MX2010, MX2020, and MX2008 Universal Routing Platforms with Dynamic Power Management)

```
user@host> show chassis fpc 2 detail

Slot 2 information:
  State                                Online
  Temperature                        37
  Total CPU DRAM                   3584 MB
  Total XR2                         275 MB
  Total DDR DRAM                  20352 MB
  Start time:                          2014-07-18 02:51:23 PDT
  Uptime:                              5 minutes, 19 seconds
  Max MPC Base Power Consumption   485 Watts
  Max MIC0 Power Consumption        50 Watts
  Max MIC1 Power Consumption        50 Watts
  Max MPC Total Power Consumption  585 Watts
```

show chassis fpc (MX2010 Router with Fabric Grant Bypass Enabled)

Following is the output of the `show chassis fpc` command on an MX2010 router with Switch Fabric Board (SFB), where fabric grant bypass is enabled by default. All MPCs power on.

```
user@host> show chassis fpc
Temp  CPU Utilization (%)   Memory    Utilization (%)
Slot State            (C)  Total  Interrupt      DRAM (MB) Heap     Buffer
  0  Online            34     20          0       2048        9         14
  1  Offline           33     22                0       2048        9         14
  2  Online            33     17          0       2048        9         14
  3  Offline           34     25                0       2048        9         14
  4  Online            32     27          0       2048        9         14
  5  Offline           32     26                0            2048        9         14
  6  Empty
  7  Empty
  8  Empty
  9  Empty
```

show chassis fpc (MX2010 Router with Fabric Grant Bypass Disabled)

Following is the output of the `show chassis fpc` command on an MX2010 router with Switch Fabric Board (SFB), where fabric grant bypass has been disabled. MPC1 (MX-MPC1-3D), MPC2 (MX-MPC2-3D), and the 16-port 10-Gigabit Ethernet MPC (MPC-3D-16XGE-SFP) do not power on after you disable fabric grant bypass and reboot the router. Also, FPC misconfiguration alarms are generated.

```
user@host> show chassis fpc
 Temp  CPU Utilization (%)   Memory    Utilization (%)
Slot State            (C)  Total  Interrupt      DRAM (MB) Heap     Buffer
  0  Online            34     20          0       2048        9         14
  1  Offline         ---FPC misconfiguration---
  2  Online            33     17          0       2048        9         14
  3  Offline         ---FPC misconfiguration---
  4  Online            32     27          0       2048        9         14
  5  Offline         ---FPC misconfiguration---
  6  Empty
  7  Empty
  8  Empty
  9  Empty
```

show chassis fpc pic-status (MX2010 Router with Fabric Grant Bypass Enabled)

Following is the output of the `show chassis fpc pic-status` command on an MX2010 router with Switch Fabric Board (SFB), where fabric grant bypass has been enabled by default. All MPCs power on.

```
user@host> show chassis fpc pic-status
Slot 0   Present      MPCE Type 3 3D
Slot 1   Present      MPC Type 2 3D EQ
Slot 2   Present      MPCE Type 3 3D
Slot 3   Present      MPC 3D 16x 10GE
Slot 4   Present      MPCE Type 3 3D
Slot 5   Present      MPCE Type 1 3D Q
```

show chassis fpc pic-status (MX2010 Router with Fabric Grant Bypass Disabled)

Following is the output of the `show chassis fpc pic-status` command on an MX2010 router with Switch Fabric Board (SFB), where fabric grant bypass has been disabled. MPC1 (MX-MPC1-3D), MPC2 (MX-MPC2-3D), and the 16-port 10-Gigabit Ethernet MPC (MPC-3D-16XGE-SFP) do not power on after you disable fabric grant bypass mode and reboot the router.

```
user@host> show chassis fpc pic-status
Slot 0   Present      MPCE Type 3 3D
Slot 1   Offline      MPC Type 2 3D EQ
Slot 2   Present      MPCE Type 3 3D
Slot 3   Offline      MPC 3D 16x 10GE
Slot 4   Present      MPCE Type 3 3D
Slot 5   Offline      MPCE Type 1 3D Q
```

show chassis fpc (MX2020 Routers)

```
user@host> show chassis fpc
                    Temp  CPU Utilization (%)   Memory    Utilization (%)
Slot State           (C)  Total  Interrupt      DRAM (MB) Heap     Buffer
  0  Online           10     12          0       2048       18         13
  1  Online            8      9          0       2048       18         13
  2  Online            7      9          0       2048       18         13
  3  Online            8     10          0       2048       18         13
  4  Online            9     10          0       2048       18         13
  5  Online            8      9          0       2048       18         13
```

```
  6  Online            8     10          0       2048       18         13
  7  Online            9      9          0       2048       18         13
  8  Online            9     10          0       2048       18         13
  9  Online           10      9          0       2048       18         13
 10  Online           16      8          0       2048       18         13
 11  Online           11     10          0       2048       18         13
 12  Online           10     10          0       2048       18         13
 13  Online           11      9          0       2048       18         13
 14  Online           12     10          0       2048       18         13
 15  Online           13      9          0       2048       18         13
 16  Online           13      9          0       2048       18         13
 17  Online           12      9          0       2048       18         13
 18  Online           12      8          0       2048       18         13
 19  Online           14     10          0       2048       18         13
```

show chassis fpc (MX10003 Router)

```
user@host> show chassis fpc

                     Temp  CPU Utilization (%)   CPU Utilization (%)  Memory    Utilization (%)
Slot State            (C)  Total  Interrupt      1min   5min   15min  DRAM (MB) Heap     Buffer
  0  Online           59     25          0       25     24     23    3136       12         11
  1  Online           62     29          0       26     24     23    3136       12         11
```

show chassis fpc detail (MX10003 Router)

```
user@host> show chassis fpc detail

Slot 0 information:
  State                               Online
  Total CPU DRAM                 3136 MB
  Total RLDRAM                    771 MB
  Total DDR DRAM                 18432 MB
  Temperature                      60 degrees C / 140 degrees F
  Start time                          2017-07-19 20:49:58 PDT
  Uptime                              2 hours, 29 minutes, 22 seconds
  Max MPC base power consumption   910 Watts
  Max MIC1 power consumption        95 Watts
  Max MPC total power consumption 1005 Watts
Slot 1 information:
```

```
  State                                Online
  Total CPU DRAM                  3136 MB
  Total RLDRAM                     771 MB
  Total DDR DRAM                  18432 MB
  Temperature                        63 degrees C / 145 degrees F
  Start time                           2017-07-19 20:48:01 PDT
  Uptime                               2 hours, 31 minutes, 19 seconds
  Max MPC base power consumption   910 Watts
  Max MIC1 power consumption       155 Watts
  Max MPC total power consumption 1065 Watts
```

show chassis fpc <fpc-slot> (MX10003 Router)

```
user@host> show chassis fpc 0

                     Temp  CPU Utilization (%)   CPU Utilization (%)  Memory    Utilization (%)
Slot State            (C)  Total  Interrupt      1min   5min   15min  DRAM (MB) Heap     Buffer
  0  Online           49     26          0       22     22     23    3136       12         11
```

show chassis fpc (MX204 Router)

```
user@host> show chassis fpc

                    Temp  CPU Utilization (%)   CPU Utilization (%)  Memory    Utilization (%)
Slot State            (C)  Total  Interrupt      1min   5min   15min  DRAM (MB) Heap     Buffer
  0  Online           Absent   8          0        8      8      8    3136        8          8
```

show chassis fpc detail (MX204 Router)

```
user@host> show chassis fpc detail
Slot 0 information:
  State                                Online
  Total CPU DRAM                  3136 MB
  Total RLDRAM                     257 MB
  Total DDR DRAM                  4096 MB
  Temperature                        Absent
```

```
  Start time                          2017-11-05 22:14:01 PST
  Uptime                              2 days, 8 hours, 5 minutes, 55 seconds
```

show chassis fpc <fpc-slot> (MX204 Router)

```
user@host> show chassis fpc 0

                     Temp  CPU Utilization (%)   CPU Utilization (%)  Memory    Utilization (%)
Slot State            (C)  Total  Interrupt      1min   5min   15min  DRAM (MB) Heap     Buffer
  0  Online           Absent   8          0        8      8      8    3136        8          8
```

show chassis fpc (MX2020 Router with MPC5EQ and MPC6E)

```
user@host> show chassis fpc
                     Temp  CPU Utilization (%)   Memory    Utilization (%)
Slot State            (C)  Total  Interrupt      DRAM (MB) Heap     Buffer
  0  Online            31     20          0       3584        7         13
  1  Online            28     19          0       2048       17         13
  2  Online            27     10          0       2048       18         14
  3  Online            26     10          0       2048       13         13
  4  Online            29     19          0       3584        7         13
  5  Online            28     68          0       2048       20         13
  6  Empty
  7  Empty
  8  Empty
  9  Online            36     19          0       3584       10         13
 10  Online            37     26          0       3584       10         13
 11  Empty
 12  Empty
 13  Empty
 14  Empty
 15  Empty
 16  Empty
 17  Online            28     43          0       3584       10         13
 18  Online            29     19          0       3584        7         13
 19  Online            31     19          0       3584        7         13
```

show chassis fpc detail (MX2020 Router with MPC5EQ and MPC6E)

```
user@host> show chassis fpc detail
Slot 0 information:
  State                                 Online
  Temperature                            31
  Total CPU DRAM                       3584 MB
  Total XR2                             291 MB
  Total DDR DRAM                      24960 MB
  Start time:                           2014-04-22 23:33:19 PDT
  Uptime:                               6 minutes, 24 seconds
  Max Power Consumption                 607 Watts
Slot 1 information:
  State                                 Online
  Temperature                            28
  Total CPU DRAM                       2048 MB
  Total RLDRAM                         1036 MB
  Total DDR DRAM                       6656 MB
  Start time:                           2014-04-22 23:33:24 PDT
  Uptime:                               6 minutes, 19 seconds
  Max Power Consumption                 520 Watts
Slot 2 information:
  State                                 Online
  Temperature                            27
  Total CPU DRAM                       2048 MB
  Total RLDRAM                         1036 MB
  Total DDR DRAM                      11264 MB
  Start time:                           2014-04-22 23:33:34 PDT
  Uptime:                               6 minutes, 9 seconds
  Max Power Consumption                 608 Watts
Slot 3 information:
  State                                 Online
  Temperature                            26
  Total CPU DRAM                       2048 MB
  Total RLDRAM                          734 MB
  Total DDR DRAM                       3108 MB
  Start time:                           2014-04-22 23:33:39 PDT
  Uptime:                               6 minutes, 4 seconds
  Max Power Consumption                 368 Watts
Slot 4 information:
  State                                 Online
  Temperature                            29
```

```
  Total CPU DRAM                  3584 MB
  Total XR2                        291 MB
  Total DDR DRAM                 24960 MB
  Start time:                         2014-04-22 23:33:51 PDT
  Uptime:                             5 minutes, 52 seconds
  Max Power Consumption            607 Watts
Slot 5 information:
  State                               Online
  Temperature                       28
  Total CPU DRAM                  2048 MB
  Total RLDRAM                    1324 MB
  Total DDR DRAM                  5120 MB
  Start time:                         2014-04-22 23:33:57 PDT
  Uptime:                             5 minutes, 46 seconds
  Max Power Consumption            440 Watts
Slot 9 information:
  State                               Online
 Temperature                        25
  Total CPU DRAM                  3584 MB
  Total XR2                        518 MB
  Total DDR DRAM                 49920 MB
  Start time:                         2014-04-22 23:31:20 PDT
  Uptime:                             8 minutes, 23 seconds
  Max Power Consumption           1130 Watts
Slot 10 information:
  State                               Online
  Temperature                       32
  Total CPU DRAM                  3584 MB
  Total XR2                        518 MB
  Total DDR DRAM                 49920 MB
  Start time:                         2014-04-22 23:31:25 PDT
  Uptime:                             8 minutes, 18 seconds
  Max Power Consumption           1130 Watts
Slot 17 information:
  State                               Online
  Temperature                       25
  Total CPU DRAM                  3584 MB
  Total XR2                        518 MB
  Total DDR DRAM                 49920 MB
  Start time:                         2014-04-22 23:31:29 PDT
  Uptime:                             8 minutes, 14 seconds
  Max Power Consumption           1130 Watts
Slot 18 information:
```

```
  State                                 Online
  Temperature                        29
  Total CPU DRAM                   3584 MB
  Total XR2                         291 MB
  Total DDR DRAM                   24960 MB
  Start time:                           2014-04-22 23:34:11 PDT
  Uptime:                               5 minutes, 32 seconds
  Max Power Consumption             607 Watts
Slot 19 information:
  State                                 Online
  Temperature                        32
  Total CPU DRAM                   3584 MB
  Total XR2                         291 MB
  Total DDR DRAM                   24960 MB
  Start time:                           2014-04-22 23:34:20 PDT
  Uptime:                               5 minutes, 23 seconds
  Max Power Consumption             607 Watts
```

show chassis fpc pic-status (MX2020 Router with MPC5EQ and MPC6E)

```
user@host> show chassis fpc pic-status
Slot 0   Online       MPC5E 3D Q 24XGE+6XLGE
  PIC 0  Online       12X10GE SFPP OTN
  PIC 1  Online       12X10GE SFPP OTN
  PIC 2  Offline      3X40GE QSFPP
  PIC 3  Offline      3X40GE QSFPP
Slot 1   Online       MPCE Type 3 3D
  PIC 0  Online       10X10GE SFPP
  PIC 2  Online       1X100GE CXP
Slot 2   Online       MPC4E 3D 2CGE+8XGE
  PIC 0  Online       4x10GE SFPP
  PIC 1  Online       1X100GE CFP
  PIC 2  Online       4x10GE SFPP
  PIC 3  Online       1X100GE CFP
Slot 3   Online       MPCE Type 2 3D P
  PIC 0  Online       2x 10GE  XFP
  PIC 1  Online       2x 10GE  XFP
Slot 4   Online       MPC5E 3D Q 2CGE+4XGE
  PIC 0  Online       2X10GE SFPP OTN
  PIC 1  Online       1X100GE CFP2 OTN
  PIC 2  Online       2X10GE SFPP OTN
```

```
  PIC 3  Online       1X100GE CFP2 OTN
Slot 5   Online       MPC 3D 16x 10GE
  PIC 0  Online       4x 10GE(LAN) SFP+
  PIC 1  Online       4x 10GE(LAN) SFP+
  PIC 2  Online       4x 10GE(LAN) SFP+
  PIC 3  Online       4x 10GE(LAN) SFP+
Slot 9   Online       MPC6E 3D
  PIC 0  Online       2X100GE CFP2 OTN
  PIC 1  Online       2X100GE CFP2 OTN
Slot 10  Online       MPC6E 3D
  PIC 0  Online       24X10GE SFPP OTN
  PIC 1  Online       4X100GE CXP
Slot 17  Online       MPC6E 3D
  PIC 0  Online       24X10GE SFPP
  PIC 1  Online       4X100GE CXP
Slot 18  Online       MPC5E 3D Q 24XGE+6XLGE
  PIC 0  Offline      12X10GE SFPP OTN
  PIC 1  Offline      12X10GE SFPP OTN
  PIC 2  Online       3X40GE QSFPP
  PIC 3  Online       3X40GE QSFPP
Slot 19  Online       MPC5E 3D Q 24XGE+6XLGE
  PIC 0  Online       12X10GE SFPP OTN
  PIC 1  Offline      12X10GE SFPP OTN
  PIC 2  Offline      3X40GE QSFPP
  PIC 3  Online       3X40GE QSFPP
```

show chassis fpc detail (MX Series Routers)

```
user@host> show chassis fpc detail 2
Slot 0 information:
  State                                 Online
  Temperature                        36 degrees C / 96 degrees F
  Total CPU DRAM                   1024 MB
  Total RLDRAM                      256 MB
  Total DDR DRAM                   4096 MB
  Start time:                           2009-08-11 21:20:30 PDT
  Uptime:                               2 hours, 8 minutes, 50 seconds
  Max Power Consumption             335 Watts
```

show chassis fpc detail (EX Series Switches)

```
user@host> show chassis fpc detail 2
Slot 1 information:
  State                                Online
  Temperature                           41
  Total CPU DRAM                     2048 MB
  Total RLDRAM                       1036 MB
  Total DDR DRAM                     11264 MB
  Start time:                          2013-04-02 00:04:52 PDT
  Uptime:                              7 days, 9 hours, 47 minutes, 46 seconds
  Max Power Consumption               610 Watts
Slot 2 information:
  State                                Online
  Temperature                           41
  Total CPU DRAM                     2048 MB
  Total RLDRAM                       1036 MB
  Total DDR DRAM                     11264 MB
  Start time:                          2013-04-02 00:04:56 PDT
  Uptime:                              7 days, 9 hours, 47 minutes, 42 seconds
  Max Power Consumption               610 Watts
```

show chassis fpc detail (EX9251 Switches)

```
user@switch> show chassis fpc detail 2
Slot 0 information:
  State                                Online
  Total CPU DRAM                  3136 MB
  Total RLDRAM                     257 MB
  Total DDR DRAM                  4096 MB
  Temperature                      Absent
  Start time                           2018-03-12 14:59:49 PDT
  Uptime                               1 day, 1 hour, 10 minutes, 48 seconds
```

show chassis fpc detail (EX9253 Switches)

```
user@switch> show chassis fpc detail 1
Slot 1 information:
  State                                Online
```

```
  Total CPU DRAM                3136 MB
  Total RLDRAM                   771 MB
  Total DDR DRAM                18432 MB
  Temperature                      59 degrees C / 138 degrees F
  Start time                          2018-03-04 14:20:42 PST
  Uptime                              3 days, 10 hours, 40 minutes, 57 seconds
  Max MPC base power consumption   910 Watts
  Max MIC1 power consumption        95 Watts
  Max MPC total power consumption 1005 Watts
```

show chassis fpc (Hardware Not Supported)

```
user@host> show chassis fpc
show chassis fpc
                     Temp  CPU Utilization (%)   Memory    Utilization (%)
 Slot State            (C)  Total  Interrupt      DRAM (MB) Heap     Buffer
  0  Online          -------------------- CPU less FPC --------------------
  1  Present         ------ Hardware Not In Right Slot ------
  2  Online                    0          0         0         0          0
  3  Present         ------ Hardware Not Supported ------
  4  Empty
  5  Empty
  6  Online                    0          0         0         0          0
```

show chassis fpc detail (Hardware Not Supported)

```
user@host> show chassis fpc detail
Slot 0 information:
  State                               Online
  Total CPU DRAM                      ---- CPU less FPC ----
  Start time                          2006-07-07 03:21:00 UTC
  Uptime                              27 minutes, 51 seconds
 Slot 1 information:
  State                               Present
  Reason                              --- Hardware Not In Right Slot ---
 Slot 2 information:
  State                               Online
  Total CPU DRAM                     32 MB
  Start time                          2006-07-07 03:20:59 UTC
  Uptime                              27 minutes, 52 seconds
```

```
 Slot 3 information:
  State                               Present
  Reason                              --- Hardware Not Supported ---
  Total CPU DRAM                   0 MB
 Slot 6 information:
  State                               Online
  Total CPU DRAM                  32 MB
  Start time                          2006-07-07 03:21:01 UTC
  Uptime                              27 minutes, 50 seconds
```

show chassis fpc pic-status

```
user@host> show chassis fpc pic-status
Slot 0 Online
  PIC 1    1x OC-12 ATM, MM
  PIC 2    1x OC-12 ATM, MM
  PIC 3    1x OC-12 ATM, MM
Slot 1 Online
  PIC 0    1x OC-48 SONET, SMIR
Slot 2 Online
  PIC 0    1x OC-192 SONET, SMSR
```

show chassis fpc pic-status (M Series Routers)

```
user@host> show chassis fpc pic-status
Slot 1   Online       FPC Type 1
  PIC 0  Present      2x OC-3 ATM, MM- Hardware Error
  PIC 1  Online       4x OC-3 SONET, SMIR
Slot 2   Online       E-FPC Type 2
  PIC 0  Online       4x G/E, 1000 BASE-SX
  PIC 1  Online       2x G/E SFP, 1000 BASE
  PIC 3  Online       1x Tunnel
Slot 3   Online       E-FPC Type 1
  PIC 0  Online       1x G/E IQ, 1000 BASE
  PIC 2  Online       1x G/E SFP, 1000 BASE
Slot 4   Online       E-FPC Type 2
  PIC 0  Online       4x G/E SFP, 1000 BASE
  PIC 1  Online       4x G/E SFP, 1000 BASE
  PIC 2  Online       4x G/E SFP, 1000 BASE
```

```
  PIC 3  Online       4x G/E SFP, 1000 BASE
Slot 5   Online       FPC Type 2
...
```

show chassis fpc pic-status (M120 Router)

```
user@host> show chassis fpc pic-status
Slot 1   Online       M120 CFPC 10GE
  PIC 0  Online       1x 10GE(LAN/WAN) XFP
Slot 3   Online       M120 FPC Type 2 (proto)
  PIC 0  Online       2x G/E IQ, 1000 BASE
  PIC 1  Online       4x OC-3 SONET, SMIR
  PIC 2  Online       2x G/E IQ, 1000 BASE
  PIC 3  Online       8x 1GE(LAN), IQ2
Slot 4   Online       M120 FPC Type 3 (proto)
  PIC 0  Online       10x 1GE(LAN), 1000 BASE
Slot 5   Online       M120 FPC Type 1 (proto)
  PIC 0  Present      1x G/E, 1000 BASE-LX- Not Supported
  PIC 1  Online       1x CHOC3 IQ SONET, SMLR
  PIC 2  Online       4x CHDS3 IQ
  PIC 3  Online       1x G/E SFP, 1000 BASE
```

show chassis fpc pic-status (MX240, MX480, and MX960 Routers with Application Services Modular Line Card)

In the following output **Slot 1 and Slot 5** are the Application Services Modular Carrier Cards (AS MCC), **PIC 0** is the Application Services Modular Storage Card (AS MSC), and **PIC 2** is the Application Services Modular Processing Card (AS MXC).

```
user@host>show chassis fpc pic-status
Slot 2   Online       MPC Type 1 3D Q
  Slot 1   Online       AS-MCC
  PIC 0  Online       AS-MSC
  PIC 2  Online       AS-MXC
Slot 4   Offline      MPC 3D 16x 10GE
Slot 5   Offline      AS-MCC
```

show chassis fpc lcc (TX Matrix Router)

```
user@host> show chassis fpc lcc 0
lcc0-re0:
--------------------------------------------------------------------------
                     Temp  CPU                        Utilization (%)     Memory    Utilization
(%)
Slot State                      (C)  Total  Interrupt        DRAM (MB)
Heap      Buffer
  0  Empty
  1  Online                     27      2          0             256         8         44
  2  Online                     27      3          0           256        15         44
  3  Empty
  4  Empty
  5  Empty
  6  Empty
  7  Empty
```

show chassis fpc pic-status (TX Matrix Router)

```
user@host> show chassis fpc pic-status
lcc0-re0:
--------------------------------------------------------------------------
Slot 0   Online       FPC Type 3
  PIC 0  Online       1x OC-192 SM SR1
  PIC 1  Online       1x OC-192 SM SR2
  PIC 2  Online       1x OC-192 SM SR1
  PIC 3  Online       1x Tunnel
Slot 1   Online       FPC Type 2
  PIC 0  Online       1x OC-48 SONET, SMSR
  PIC 1  Online       1x OC-48 SONET, SMSR

lcc1-re0:
--------------------------------------------------------------------------

lcc2-re0:
--------------------------------------------------------------------------
Slot 1   Online       FPC Type 3
  PIC 0  Online       1x OC-192 SM SR1
Slot 5   Online       FPC Type 2
```

```
  PIC 0  Online       1x OC-48 SONET, SMSR
  PIC 1  Online       2x G/E, 1000 BASE-LX
  PIC 2  Online       2x G/E, 1000 BASE-LX
  PIC 3  Online       1x OC-48 SONET, SMSR

lcc3-re0:
--------------------------------------------------------------------------
```

show chassis fpc pic-status lcc (TX Matrix Router)

```
user@host> show chassis fpc pic-status lcc 0
lcc0-re0:
--------------------------------------------------------------------------
Slot 0   Online       FPC Type 3
  PIC 0  Online       1x OC-192 SM SR2
Slot 1   Online       FPC Type 2
  PIC 0  Online       2x OC-12 ATM2 IQ, MM
  PIC 1  Online       1x OC-48 SONET, SMSR
  PIC 2  Online       1x OC-48 SONET, SMSR
  PIC 3  Online       4x G/E, 1000 BASE-SX
```

show chassis fpc (TX Matrix Plus Router)

```
user@host> show chassis fpc
lcc0-re0:
--------------------------------------------------------------------------
                     Temp  CPU Utilization (%)   Memory    Utilization (%)
Slot State            (C)  Total  Interrupt      DRAM (MB) Heap     Buffer
  0  Empty
  1  Online            38      4          0       2048        3         24
  2  Online            43      8          0       2048        6         24
  3  Empty
  4  Online            43      6          0       2048        6         24
  5  Empty
  6  Online            42     13          0       2048        6         24
  7  Online            45      7          0       2048        3         24

lcc2-re0:
--------------------------------------------------------------------------
                     Temp  CPU Utilization (%)   Memory    Utilization (%)
```

```
Slot State            (C)  Total  Interrupt      DRAM (MB) Heap     Buffer
  0  Online            42     10          0       2048        6         24
  1  Empty
  2  Online            42     11          0       2048        6         24
  3  Online            40      5          0       2048        3         24
  4  Online            33     26          0       1024        8         49
  5  Empty
  6  Online            43      8          0       2048        6         24
  7  Online            46      6          0       2048        3         24

lcc3-re0:
--------------------------------------------------------------------------
                     Temp  CPU Utilization (%)   Memory    Utilization (%)
Slot State            (C)  Total  Interrupt      DRAM (MB) Heap     Buffer
  0  Empty
  1  Empty
  2  Online            39     30          0       2048        7         24
  3  Empty
  4  Online            41      8          0       2048        6         24
  5  Online            41     12          0       2048        6         24
  6  Online            40      8          0       2048        6         24
  7  Online            42      4          0       2048        3         24
```

show chassis fpc lcc (TX Matrix Plus Router)

```
user@host> show chassis fpc lcc 0
lcc0-re0:
--------------------------------------------------------------------------
                     Temp  CPU Utilization (%)   Memory    Utilization (%)
Slot State            (C)  Total  Interrupt      DRAM (MB) Heap     Buffer
  0  Empty
  1  Online            38      4          0       2048        3         24
  2  Online            43      8          0       2048        6         24
  3  Empty
  4  Online            43      6          0       2048        6         24
  5  Empty
  6  Online            42     14          0       2048        6         24
  7  Online            45      6          0       2048        3         24
```

show chassis fpc detail (TX Matrix Plus Router)

```
user@host> show chassis fpc details

lcc0-re0:
--------------------------------------------------------------------------
Slot 1 information:
  State                               Online
  Temperature                      38 degrees C / 100 degrees F
  Total CPU DRAM                 2048 MB
  Total SRAM                       64 MB
  Total SDRAM                    1280 MB
  Start time                          2010-10-04 20:06:22 PDT
  Uptime                              1 hour, 32 minutes, 51 seconds
Slot 2 information:
  State                               Online
  Temperature                      43 degrees C / 109 degrees F
  Total CPU DRAM                 2048 MB
  Total SRAM                      128 MB
  Total SDRAM                    2560 MB
  Start time                          2010-10-04 20:06:37 PDT
  Uptime                              1 hour, 32 minutes, 36 seconds
Slot 4 information:
  State                               Online
  Temperature                      43 degrees C / 109 degrees F
  Total CPU DRAM                 2048 MB
  Total SRAM                      128 MB
  Total SDRAM                    2560 MB
  Start time                          2010-10-04 20:06:40 PDT
  Uptime                              1 hour, 32 minutes, 33 seconds
Slot 6 information:
  State                               Online
  Temperature                      42 degrees C / 107 degrees F
  Total CPU DRAM                 2048 MB
  Total SRAM                      128 MB
  Total SDRAM                    2560 MB
  Start time                          2010-10-04 20:06:42 PDT
  Uptime                              1 hour, 32 minutes, 31 seconds
Slot 7 information:
  State                               Online
  Temperature                      45 degrees C / 113 degrees F
  Total CPU DRAM                 2048 MB
```

```
  Total SRAM                       64 MB
  Total SDRAM                    1280 MB
  Start time                          2010-10-04 20:06:43 PDT
  Uptime                              1 hour, 32 minutes, 30 seconds

lcc2-re0:
--------------------------------------------------------------------------
Slot 0 information:
  State                               Online
  Temperature                      42 degrees C / 107 degrees F
  Total CPU DRAM                 2048 MB
  Total SRAM                      128 MB
  Total SDRAM                    2560 MB
  Start time                          2010-10-04 20:06:35 PDT
  Uptime                              1 hour, 32 minutes, 38 seconds
Slot 2 information:
  State                               Online
  Temperature                      42 degrees C / 107 degrees F
  Total CPU DRAM                 2048 MB
  Total SRAM                      128 MB
  Total SDRAM                    2560 MB
  Start time                          2010-10-04 20:06:37 PDT
  Uptime                              1 hour, 32 minutes, 36 seconds
Slot 3 information:
  State                               Online
  Temperature                      40 degrees C / 104 degrees F
  Total CPU DRAM                 2048 MB
  Total SRAM                       64 MB
  Total SDRAM                    1280 MB
  Start time                          2010-10-04 20:06:28 PDT
  Uptime                              1 hour, 32 minutes, 45 seconds
Slot 4 information:
  State                               Online
  Temperature                      33 degrees C / 91 degrees F
  Total CPU DRAM                 1024 MB
  Total SRAM                       64 MB
  Total SDRAM                    1280 MB
  Start time                          2010-10-04 20:08:03 PDT
  Uptime                              1 hour, 31 minutes, 10 seconds
Slot 6 information:
  State                               Online
  Temperature                      43 degrees C / 109 degrees F
  Total CPU DRAM                 2048 MB
```

```
  Total SRAM                      128 MB
  Total SDRAM                    2560 MB
  Start time                          2010-10-04 20:06:44 PDT
  Uptime                              1 hour, 32 minutes, 29 seconds
Slot 7 information:
  State                               Online
  Temperature                      46 degrees C / 114 degrees F
  Total CPU DRAM                 2048 MB
  Total SRAM                       64 MB
  Total SDRAM                    1280 MB
  Start time                          2010-10-04 20:06:46 PDT
  Uptime                              1 hour, 32 minutes, 27 seconds

lcc3-re0:
--------------------------------------------------------------------------
Slot 2 information:
  State                               Online
  Temperature                      38 degrees C / 100 degrees F
  Total CPU DRAM                 2048 MB
  Total SRAM                      128 MB
  Total SDRAM                    2560 MB
  Start time                          2010-10-04 20:17:31 PDT
  Uptime                              1 hour, 21 minutes, 42 seconds
Slot 4 information:
  State                               Online
  Temperature                      41 degrees C / 105 degrees F
  Total CPU DRAM                 2048 MB
  Total SRAM                      128 MB
  Total SDRAM                    2560 MB
  Start time                          2010-10-04 20:17:34 PDT
  Uptime                              1 hour, 21 minutes, 39 seconds
Slot 5 information:
  State                               Online
  Temperature                      41 degrees C / 105 degrees F
  Total CPU DRAM                 2048 MB
  Total SRAM                      128 MB
  Total SDRAM                    2560 MB
  Start time                          2010-10-04 20:17:36 PDT
  Uptime                              1 hour, 21 minutes, 37 seconds
Slot 6 information:
  State                               Online
  Temperature                      40 degrees C / 104 degrees F
  Total CPU DRAM                 2048 MB
```

```
  Total SRAM                      128 MB
  Total SDRAM                    2560 MB
  Start time                          2010-10-04 20:17:39 PDT
  Uptime                              1 hour, 21 minutes, 34 seconds
Slot 7 information:
  State                               Online
  Temperature                      42 degrees C / 107 degrees F
  Total CPU DRAM                 2048 MB
  Total SRAM                       64 MB
  Total SDRAM                    1280 MB
  Start time                          2010-10-04 20:17:41 PDT
  Uptime                              1 hour, 21 minutes, 32 seconds
```

show chassis fpc pic-status (TX Matrix Plus Router)

```
user@host> show chassis fpc pic-status

lcc0-re0:
--------------------------------------------------------------------------
Slot 1   Online       FPC Type 2-ES
  PIC 0  Online       8x 1GE(LAN), IQ2
Slot 2   Online       FPC Type 4-ES
  PIC 0  Online       4x 10GE (LAN/WAN) XFP
Slot 4   Online       FPC Type 4-ES
  PIC 0  Online       4x 10GE (LAN/WAN) XFP
Slot 6   Online       FPC Type 4-ES
  PIC 0  Online       4x 10GE (LAN/WAN) XFP
  PIC 1  Online       4x 10GE (LAN/WAN) XFP
Slot 7   Online       FPC Type 3-ES
  PIC 0  Online       10x 1GE(LAN), 1000 BASE
  PIC 2  Online       1x OC-192 SM SR2
  PIC 3  Online       10x 1GE(LAN), 1000 BASE

lcc2-re0:
--------------------------------------------------------------------------
Slot 0   Online       FPC Type 4-ES
  PIC 0  Online       4x 10GE (LAN/WAN) XFP
Slot 2   Online       FPC Type 4-ES
  PIC 0  Online       4x 10GE (LAN/WAN) XFP
  PIC 1  Online       4x 10GE (LAN/WAN) XFP
Slot 3   Online       FPC Type 2-ES
```

```
  PIC 0  Online       8x 1GE(LAN), IQ2
Slot 4   Online       FPC Type 4
  PIC 0  Online       10x10GE(LAN/WAN) SFPP
Slot 6   Online       FPC Type 4-ES
  PIC 0  Online       4x OC-192 SONET XFP
Slot 7   Online       FPC Type 3-ES
  PIC 0  Online       10x 1GE(LAN), 1000 BASE
  PIC 1  Offline      1x 10GE(LAN/WAN) IQ2E
  PIC 2  Online       1x OC-192 SM SR2
  PIC 3  Online       1x Tunnel

lcc3-re0:
--------------------------------------------------------------------------
Slot 2   Online       FPC Type 4-ES
  PIC 0  Online       10x10GE(LAN/WAN) SFPP
Slot 4   Online       FPC Type 4-ES
  PIC 0  Online       4x OC-192 SONET XFP
Slot 5   Online       FPC Type 4-ES
  PIC 0  Online       4x OC-192 SONET XFP
  PIC 1  Online       4x 10GE (LAN/WAN) XFP
Slot 6   Online       FPC Type 4-ES
  PIC 1  Online       4x 10GE (LAN/WAN) XFP
Slot 7   Online       FPC Type 3-ES
  PIC 0  Online       10x 1GE(LAN), 1000 BASE
  PIC 1  Online       8x 1GE(TYPE3), IQ2E
  PIC 2  Online       4x OC-48 SONET
```

show chassis fpc (T1600 Router)

```
user@host> show chassis fpc
                    Temp  CPU Utilization (%)   Memory    Utilization (%)
Slot State           (C)  Total  Interrupt      DRAM (MB) Heap     Buffer
  0  Empty
  1  Empty
  2  Online            49      3          0       2048        3         24
  3  Online            46      6          0       2048        6         24
  4  Empty
  5  Online            46      5          0       2048        3         24
  6  Empty
  7  Online            44      8          0       1024        7         49
```

show chassis fpc detail (T1600 Router)

```
user@host> show chassis fpc detail

show chassis fpc detail
Slot 2 information:
  State                               Online
  Temperature                      49 degrees C / 120 degrees F
  Total CPU DRAM                 2048 MB
  Total SRAM                       64 MB
  Total SDRAM                    1280 MB
  Start time                          2010-10-04 21:12:52 PDT
  Uptime                              32 minutes, 9 seconds
Slot 3 information:
  State                               Online
  Temperature                      47 degrees C / 116 degrees F
  Total CPU DRAM                 2048 MB
  Total SRAM                      128 MB
  Total SDRAM                    2560 MB
  Start time                          2010-10-04 21:13:06 PDT
  Uptime                              31 minutes, 55 seconds
Slot 5 information:
  State                               Online
  Temperature                      46 degrees C / 114 degrees F
  Total CPU DRAM                 2048 MB
  Total SRAM                       64 MB
  Total SDRAM                    1280 MB
  Start time                          2010-10-04 21:12:56 PDT
  Uptime                              32 minutes, 5 seconds
Slot 7 information:
  State                               Online
  Temperature                      44 degrees C / 111 degrees F
  Total CPU DRAM                 1024 MB
  Total SRAM                       64 MB
  Total SDRAM                    1280 MB
  Start time                          2010-10-04 21:14:34 PDT
  Uptime                              30 minutes, 27 seconds
```

show chassis fpc <fpc-slot> (EX Series Switch)

```
user@host> show chassis fpc 2

                     Temp  CPU Utilization (%)   Memory    Utilization (%)
Slot State            (C)  Total  Interrupt      DRAM (MB) Heap     Buffer
  2  Online            40     12          0       2048       19         14
```

show chassis fpc slot (T1600 Router)

```
user@host> show chassis fpc slot 2

                     Temp  CPU Utilization (%)   Memory    Utilization (%)
Slot State            (C)  Total  Interrupt      DRAM (MB) Heap     Buffer
  2  Online            49      3          0       2048        3         24
```

show chassis fpc pic-status (T1600 Router)

```
user@host> show chassis fpc pic-status

Slot 2   Online       FPC Type 1-ES
  PIC 0  Online       Load Type 1
  PIC 1  Online       4x 1GE(LAN), IQ2E
  PIC 3  Online       1x OC-12-3 SFP
Slot 3   Online       FPC Type 4-ES
  PIC 0  Online       4x 10GE (LAN/WAN) XFP
  PIC 1  Online       4x OC-192 SONET XFP
Slot 5   Online       FPC Type 2-ES
  PIC 0  Online       Load Type 2
  PIC 1  Online       8x 1GE(LAN), IQ2E
  PIC 2  Online       8x 1GE(LAN), IQ2E
  PIC 3  Online       1x OC-48-12-3 SFP
Slot 7   Online       FPC Type 4
  PIC 0  Online       4x 10GE (LAN/WAN) XFP
```

show chassis fpc (T4000 Router)

```
user@host> show chassis fpc

                    Temp  CPU Utilization (%)   Memory    Utilization (%)
Slot State           (C)  Total  Interrupt      DRAM (MB) Heap     Buffer
  0  Online           48     15          0       2816       21         27
  1  Empty
  2  Empty
  3  Online           51     15          0       2816       21         27
  4  Empty
  5  Online           39      8          0       2048        6         23
  6  Online           49     15          0       2816       21         27
  7  Empty
```

show chassis fpc detail (T4000 Router)

```
user@host> show chassis fpc detail
Slot 0 information:
  State                               Online
  Temperature                      48 degrees C / 118 degrees F
  Total CPU DRAM                 2816 MB
  Total SRAM                     1554 MB
  Total SDRAM                    10752 MB
  Start time                          2012-02-09 22:56:25 PST
  Uptime                              2 hours, 40 minutes, 52 seconds
Slot 3 information:
  State                               Online
  Temperature                      51 degrees C / 123 degrees F
  Total CPU DRAM                 2816 MB
  Total SRAM                     1554 MB
  Total SDRAM                    10752 MB
  Start time                          2012-02-09 22:56:22 PST
  Uptime                              2 hours, 40 minutes, 55 seconds
Slot 5 information:
  State                               Online
  Temperature                      39 degrees C / 102 degrees F
  Total CPU DRAM                 2048 MB
  Total SRAM                      128 MB
  Total SDRAM                    2560 MB
```

```
  Start time                          2012-02-09 22:51:27 PST
  Uptime                              2 hours, 45 minutes, 50 seconds
Slot 6 information:
  State                               Online
  Temperature                        49 degrees C / 120 degrees F
  Total CPU DRAM                  2816 MB
  Total SRAM                      1554 MB
  Total SDRAM                     10752 MB
  Start time                          2012-02-09 22:56:29 PST
  Uptime                              2 hours, 40 minutes, 48 seconds
```

show chassis fpc pic-status (T4000 Router)

```
user@host> show chassis fpc pic-status
Slot 0   Online       FPC Type 5-3D
  PIC 0  Online       12x10GE (LAN/WAN) SFPP
  PIC 1  Online       12x10GE (LAN/WAN) SFPP
Slot 3   Online       FPC Type 5-3D
  PIC 0  Online       1x100GE
  PIC 1  Online       12x10GE (LAN/WAN) SFPP
Slot 5   Online       FPC Type 4-ES
  PIC 0  Online       100GE
  PIC 1  Online       100GE CFP
Slot 6   Online       FPC Type 5-3D
  PIC 0  Online       12x10GE (LAN/WAN) SFPP
  PIC 1  Online       12x10GE (LAN/WAN) SFPP
```

show chassis fpc (MX10008 Router with MX10K-LC9600 and SFB)

MX10K-LC9600 supports SFB2 only. The following output indicates that MX10K-LC9600 doest support SFB.

```
user@host> show chassis fpc
Temp  CPU Utilization (%)   Memory    Utilization (%)
Slot State            (C)  Total  Interrupt      DRAM (MB) Heap     Buffer
0  Offline             Offlined due to Unsupported fabric
```

show chassis fpc (QFX Series and OCX Series)

```
user@switch> show chassis fpc
Temp  CPU Utilization (%)   Memory    Utilization (%)
Slot State            (C)  Total  Interrupt      DRAM (MB) Heap     Buffer
0  Online            26      2          0       2820        0         49
```

show chassis fpc detail (QFX3500 Switches)

```
user@switch> show chassis fpc detail
Slot 0 information:
  State                               Online
  Temperature                      28 degrees C / 82 degrees F
  Total CPU DRAM                 2820 MB
  Total SRAM                        0 MB
  Total SDRAM                       0 MB
  Start time                          2010-09-20 01:34:13 PDT
  Uptime                              3 days, 3 hours, 31 minutes, 48 seconds
```

show chassis fpc pic-status (QFX3500 Switches)

```
user@switch> show chassis fpc pic-status
Slot 0   Online       QFX 48x10G 4x40G Switch
  PIC 0  Online       48x 10G-SFP+
  PIC 1  Online       15x 10G-SFP+
```

show chassis fpc interconnect-device (QFabric System)

```
user@switch> show chassis fpc interconnect-device
interconnect1
FPC status:
                     Temp
Slot State            (C)
  0  Online             0
  1  Online             0
  2  Online             0
  3  Online             0
```

```
  4  Online             0
  5  Online             0
  6  Online             0
  7  Online             0
  8  Online             0
  9  Online             0
 10  Online             0
 11  Online             0
 12  Online             0
 13  Online             0
 14  Online             0
 15  Online             0
```

show chassis fpc interconnect-device (QFabric System)

```
user@switch> show chassis fpc interconnect-device
interconnect1 3
FPC status:
                    Temp
Slot State           (C)
  3  Online            0
```

show chassis fpc interconnect-device detail (QFabric System)

```
user@switch> show chassis fpc interconnect-device
interconnect1 3 detail
Slot 3 information:
  State                               Online
  Temperature                      0 degrees C / 32 degrees F
  Start time                          2011-08-18 10:45:04 PDT
  Uptime                              1 minute, 49 seconds
```

show chassis fpc pic-status interconnect-device (QFabric System)

```
user@switch> show chassis fpc pic-status interconnect-device
interconnect1
Slot 0   Online       QFX 16-port QSFP+ Front Card
  PIC 0  Online       16x 40G-QSFP+
```

```
  PIC 1  Online       16x 40G-GE
Slot 1   Online       QFX 16-port QSFP+ Front Card
  PIC 0  Online       16x 40G-QSFP+
 PIC 1  Online       16x 40G-GE
Slot 2   Online       QFX 16-port QSFP+ Front Card
  PIC 0  Online       16x 40G-QSFP+
  PIC 1  Online       16x 40G-GE
Slot 3   Online       QFX 16-port QSFP+ Front Card
  PIC 0  Online       16x 40G-QSFP+
  PIC 1  Online       16x 40G-GE
Slot 4   Online       QFX 16-port QSFP+ Front Card
  PIC 0  Online       16x 40G-QSFP+
  PIC 1  Online       16x 40G-GE
Slot 5   Online       QFX 16-port QSFP+ Front Card
  PIC 0  Online       16x 40G-QSFP+
  PIC 1  Online       16x 40G-GE
Slot 6   Online       QFX 16-port QSFP+ Front Card
  PIC 0  Online       16x 40G-QSFP+
  PIC 1  Online       16x 40G-GE
Slot 7   Online       QFX 16-port QSFP+ Front Card
  PIC 0  Online       16x 40G-QSFP+
  PIC 1  Online       16x 40G-GE
Slot 8   Online       QFX Fabric Rear Card
  PIC 0  Online       16x 40G-GE
Slot 9   Online       QFX Fabric Rear Card
  PIC 0  Online       16x 40G-GE
Slot 10  Online       QFX Fabric Rear Card
  PIC 0  Online       16x 40G-GE
Slot 11  Online       QFX Fabric Rear Card
  PIC 0  Online       16x 40G-GE
Slot 12  Online       QFX Fabric Rear Card
  PIC 0  Online       16x 40G-GE
Slot 13  Online       QFX Fabric Rear Card
  PIC 0  Online       16x 40G-GE
Slot 14  Online       QFX Fabric Rear Card
  PIC 0  Online       16x 40G-GE
Slot 15  Online       QFX Fabric Rear Card
  PIC 0  Online       16x 40G-GE
```

show chassis fpc pic-status node-device (QFabric System)

```
user@switch> show chassis fpc pic-status node-device
node1
Slot node1 Online      QFX 48x10G 4x40G Switch
  PIC 0  Online       48x 10G-SFP+
  PIC 1  Online       4x 40G-QSFP+
```

show chassis fpc (PTX5000 Packet Transport Router)

```
user@host> show chassis fpc
                    Temp  CPU Utilization (%)   Memory    Utilization (%)
Slot State           (C)  Total  Interrupt      DRAM (MB) Heap     Buffer
  0  Empty
  1  Empty
  2  Online           50      6          0       2816        5         27
  3  Empty
  4  Empty
  5  Online           48      9          0       2816        5         27
  6  Empty
  7  Online           49      8          0       2816        5         27
```

show chassis fpc detail (PTX5000 Packet Transport Router)

```
user@host> show chassis fpc detail
Slot 2 information:
  State                               Online
  Temperature                      35 degrees C / 95 degrees F (PMB)
  Temperature                      35 degrees C / 95 degrees F (Intake)
  Temperature                      50 degrees C / 122 degrees F (Exhaust A)
  Temperature                      54 degrees C / 129 degrees F (Exhaust B)
  Temperature                      54 degrees C / 129 degrees F (TL0)
  Temperature                      52 degrees C / 125 degrees F (TQ0)
  Temperature                      61 degrees C / 141 degrees F (TL1)
  Temperature                      58 degrees C / 136 degrees F (TQ1)
  Temperature                      57 degrees C / 134 degrees F (TL2)
  Temperature                      58 degrees C / 136 degrees F (TQ2)
  Temperature                      62 degrees C / 143 degrees F (TL3)
```

```
  Temperature                     61 degrees C / 141 degrees F (TQ3)
  Total CPU DRAM                2816 MB
  Total SRAM                       0 MB
  Total SDRAM                      0 MB
  Start time                       2012-01-12 12:05:42 PST
  Uptime                           3 hours, 14 minutes, 7 seconds
Slot 5 information:
  State                            Online
  Temperature                     35 degrees C / 95 degrees F (PMB)
  Temperature                     34 degrees C / 93 degrees F (Intake)
  Temperature                     48 degrees C / 118 degrees F (Exhaust A)
  Temperature                     53 degrees C / 127 degrees F (Exhaust B)
  Temperature                     54 degrees C / 129 degrees F (TL0)
  Temperature                     52 degrees C / 125 degrees F (TQ0)
  Temperature                     69 degrees C / 156 degrees F (TL1)
  Temperature                     56 degrees C / 132 degrees F (TQ1)
  Temperature                     54 degrees C / 129 degrees F (TL2)
  Temperature                     56 degrees C / 132 degrees F (TQ2)
  Temperature                     59 degrees C / 138 degrees F (TL3)
  Temperature                     60 degrees C / 140 degrees F (TQ3)
  Total CPU DRAM                2816 MB
  Total SRAM                       0 MB
  Total SDRAM                      0 MB
  Start time                       2012-01-12 12:05:43 PST
  Uptime                           3 hours, 14 minutes, 6 seconds
Slot 7 information:
  State                            Online
  Temperature                     35 degrees C / 95 degrees F (PMB)
  Temperature                     33 degrees C / 91 degrees F (Intake)
  Temperature                     50 degrees C / 122 degrees F (Exhaust A)
  Temperature                     55 degrees C / 131 degrees F (Exhaust B)
  Temperature                     56 degrees C / 132 degrees F (TL0)
  Temperature                     56 degrees C / 132 degrees F (TQ0)
  Temperature                     61 degrees C / 141 degrees F (TL1)
  Temperature                     57 degrees C / 134 degrees F (TQ1)
  Temperature                     55 degrees C / 131 degrees F (TL2)
  Temperature                     59 degrees C / 138 degrees F (TQ2)
  Temperature                     62 degrees C / 143 degrees F (TL3)
  Temperature                     62 degrees C / 143 degrees F (TQ3)
  Total CPU DRAM                2816 MB
  Total SRAM                       0 MB
  Total SDRAM                      0 MB
```

```
  Start time                          2012-01-12 12:05:44 PST
  Uptime                              3 hours, 14 minutes, 5 seconds
```

show chassis fpc pic-status (PTX5000 Packet Transport Router)

```
user@host> show chassis fpc pic-status
Slot 2   Online       FPC
  PIC 0  Online       24x 10GE(LAN) SFP+
  PIC 1  Online       24x 10GE(LAN) SFP+
Slot 5   Online       FPC
  PIC 0  Online       24x 10GE(LAN) SFP+
  PIC 1  Online       2x 40GE CFP
Slot 7   Online       FPC
  PIC 0  Online       24x 10GE(LAN) SFP+
  PIC 1  Online       2x 40GE CFP
```

show chassis fpc (PTX10008 and PTX10001-36MR Router)

```
user@host> show chassis fpc
                    Temp  CPU Utilization (%)   CPU Utilization (%)  Memory    Utilization (%)
Slot State           (C)  Total  Interrupt      1min   5min   15min  DRAM (MB) Heap     Buffer
  0  Online           38     26          2       26     26     26    1953       20         32
  1  Empty
  2  Empty
  3  Empty
  4  Empty
  5  Online           67     26          2       26     26     26    1953       25         32
  6  Online           52     26          2       26     26     26    1953       25         32
  7  Empty
```

show chassis fpc (PTX10008 and PTX10001-36MR Router)

To view the PFE state information for all FPCs and PFEs on the device:

```
user@host> show chassis fpc pfe-instance all

FPC 0
PFE-Instance   PFE-State
```

```
0               Configured power off
1               Configured power off
2               Configured power off
3               Configured power off
4               Configured power off

FPC 2
PFE-Instance   PFE-State
0             Configured power off
1             Configured power off
2             Configured power off
3             Configured power off
4             TRANSITION_OFFLINE

FPC 3
PFE-Instance   PFE-State
0             ONLINE
1             ONLINE
2             Offlined by CmError
3             ONLINE
4             Offlined by CLI
```

show chassis fpc detail (PTX10008 and PTX10001-36MR Router)

```
user@host> show chassis fpc detail

Slot 6 information:
  State                               Online
  Total CPU DRAM                 8192 MB
  Temperature                      42 degrees C / 107 degrees F
  Start time                          2018-09-17 02:42:16 PDT
  Uptime                              53 minutes, 40 seconds
  Max power consumption            675 Watts
Slot 7 information:
  State                               Online
  Total CPU DRAM                 8192 MB
  Temperature                      51 degrees C / 123 degrees F
  Start time                          2018-09-17 02:42:26 PDT
  Uptime                              53 minutes, 30 seconds
  Max power consumption           1150 Watts
```

show chassis fpc (PTX10016 Router)

```
user@host> show chassis fpc

                    Temp  CPU Utilization (%)   CPU Utilization (%)  Memory    Utilization (%)
Slot State           (C)  Total  Interrupt      1min   5min   15min  DRAM (MB) Heap     Buffer
  0  Empty
  1  Online            36     27          2       27     27     27    1953       22         32
  2  Empty
  3  Online            36     27          2       27     27     27    1953       22         32
  4  Empty
  5  Empty
  6  Online            35     27          2       27     27     27    1953       22         32
  7  Empty
  8  Online            34     27          2       27     27     27    1953       22         32
  9  Online            46     24          2       24     24     24    1953       26         32
 10  Empty
 11  Empty
 12  Empty
 13  Empty
 14  Empty
 15  Empty
```

show chassis fpc detail (PTX10016 Router)

```
user@host> show chassis fpc detail

Slot 0 information:
  State                               Online
  Total CPU DRAM                 8192 MB
  Temperature                      44 degrees C / 111 degrees F
  Start time                          2018-09-10 07:01:09 PDT
  Uptime                              6 days, 23 hours, 17 minutes, 9 seconds
  Max power consumption           1150 Watts
Slot 4 information:
  State                               Online
  Total CPU DRAM                 8192 MB
  Temperature                      40 degrees C / 104 degrees F
  Start time                          2018-09-10 07:01:17 PDT
  Uptime                              6 days, 23 hours, 17 minutes, 1 second
```

```
  Max power consumption           1150 Watts
Slot 6 information:
  State                               Online
  Total CPU DRAM                  8192 MB
  Temperature                      42 degrees C / 107 degrees F
  Start time                          2018-09-10 07:01:27 PDT
  Uptime                              6 days, 23 hours, 16 minutes, 51 seconds
  Max power consumption           1150 Watts
Slot 7 information:
  State                               Online
  Total CPU DRAM                  8192 MB
  Temperature                      41 degrees C / 105 degrees F
  Start time                          2018-09-10 07:01:32 PDT
  Uptime                              6 days, 23 hours, 16 minutes, 46 seconds
  Max power consumption           1150 Watts
Slot 9 information:
  State                               Online
  Total CPU DRAM                  16384 MB
  Temperature                      42 degrees C / 107 degrees F
  Start time                          2018-09-10 07:01:45 PDT
  Uptime                              6 days, 23 hours, 16 minutes, 33 seconds
  Max power consumption           1150 Watts
Slot 10 information:
  State                               Online
  Total CPU DRAM                  8192 MB
  Temperature                      41 degrees C / 105 degrees F
  Start time                          2018-09-10 07:01:46 PDT
  Uptime                              6 days, 23 hours, 16 minutes, 32 seconds
  Max power consumption           1150 Watts
Slot 11 information:
  State                               Online
  Total CPU DRAM                  16384 MB
  Temperature                      40 degrees C / 104 degrees F
  Start time                          2018-09-10 07:01:55 PDT
  Uptime                              6 days, 23 hours, 16 minutes, 23 seconds
  Max power consumption           1150 Watts
Slot 14 information:
  State                               Online
  Total CPU DRAM                  8192 MB
  Temperature                      42 degrees C / 107 degrees F
  Start time                          2018-09-10 07:01:54 PDT
  Uptime                              6 days, 23 hours, 16 minutes, 24 seconds
  Max power consumption           1150 Watts
```

```
Slot 15 information:
  State                               Online
  Total CPU DRAM                  16384 MB
  Temperature                       41 degrees C / 105 degrees F
  Start time                          2018-09-10 07:02:03 PDT
  Uptime                              6 days, 23 hours, 16 minutes, 15 seconds
  Max power consumption            1150 Watts
```

show chassis fpc (ACX2000 Universal Metro Router)

```
user@host> show chassis fpc
                    Temp  CPU Utilization (%)   Memory    Utilization (%)
Slot State           (C)  Total  Interrupt      DRAM (MB) Heap     Buffer
  0  Online           61     17          6       512        21         37
```

show chassis fpc 0 (ACX2000 Universal Metro Router)

```
user@host> show chassis fpc 0
                    Temp  CPU Utilization (%)   Memory    Utilization (%)
Slot State           (C)  Total  Interrupt      DRAM (MB) Heap     Buffer
  0  Online           61     17          6       512        21         37
```

show chassis fpc detail (ACX2000 Universal Metro Router)

```
user@host> show chassis fpc detail
Slot 0 information:
  State                               Online
  Temperature                       61 degrees C / 141 degrees F
  Total CPU DRAM                  512 MB
  Start time                          2012-05-29 02:52:06 PDT
  Uptime                              27 minutes, 17 seconds
```

show chassis fpc pic-status (ACX2000 Universal Metro Router)

```
user@host> show chassis fpc pic-status
Slot 0   Online
```

```
  PIC 0  Online       16x CHE1T1, RJ48
  PIC 1  Online       8x 1GE(LAN) RJ45
  PIC 2  Online       2x 1GE(LAN) SFP
  PIC 3  Online       2x 10GE(LAN) SFP+
```

show chassis FPC 1 (MX Routers with Media Services Blade [MSB])

```
user@switch> show chassis fpc 1
                  Temp  CPU Utilization (%)   Memory    Utilization (%)
Slot State            (C)  Total  Interrupt      DRAM (MB) Heap     Buffer
  1  Online            34      5          0       3072        5         13
```

show chassis FPC 1 detail (MX Routers with Media Services Blade [MSB])

```
user@switch> show chassis fpc 1 detail
Slot 1 information:
  State                                 Online
  Temperature                           34
  Total CPU DRAM                      3072 MB
  Total RLDRAM                         259 MB
  Total DDR DRAM                      4864 MB
  Start time:                           2012-06-19 10:51:43 PDT
  Uptime:                               16 minutes, 48 seconds
  Max Power Consumption                550 Watts
```

show chassis fpc pic-status (PTX5000 Router)

```
user@router>show chassis fpc pic-status

Slot 0   Online       FPC-P2
  PIC 0  Online       Universal pic 96x10_24x40
  PIC 1  Online       Universal pic 96x10_24x40
Slot 1   Online       FPC-P2
  PIC 1  Online       Universal pic 96x10_24x40
```

show chassis fpc detail (MX304)

```
user@router> show chassis fpc detail
Slot 0 information:
  State                               Online
  Total CPU DRAM                 32768 MB
  Total HBM                      65536 MB
  FIPS Capable                        True
  Temperature                      52 degrees C / 125 degrees F
  Start time                          2022-06-06 16:47:31 IST
  Uptime                              19 hours, 2 minutes, 33 seconds
  Max MPC base power consumption  1105 Watts
  Max MIC0 power consumption        95 Watts
  Max MIC1 power consumption        95 Watts
  Max MPC total power consumption 1295 Watts

PFE Information:

  PFE  Power ON/OFF  Bandwidth         SLC
  0    ON            800G
  1    ON            800G
  2    ON            800G
  3    ON            800G
  4    OFF           _
  5    OFF           _
```

Sample Output (Junos OS Evolved)

show chassis fpc (Junos OS Evolved)

```
user@router> show chassis fpc

                    Temp  CPU Utilization (%)   CPU Utilization (%)  Memory    Utilization (%)
Slot State           (C)  Total  Interrupt      1min   5min   15min  DRAM (MB) Heap     Buffer
  0  Online
  1  Online
```

```
  2  Online
  3  Online
```

On PTX10003-80C and PTX10003-160C devices, if you have configured a field-replaceable unit (FRU) to be powered off and rebooted the device, the `show chassis fpc` output will display the state of the FRU as Present and reason as `Configured power off`. See the following output:

```
user@router> show chassis fpc

                    Temp  CPU Utilization (%)   CPU Utilization (%)  Memory    Utilization (%)
Slot State           (C)  Total  Interrupt      1min   5min   15min  DRAM (MB) Heap     Buffer
  0  Present         ---Configured power off---
  1  Online
```

The `show chassis fpc` output displays the FPC offline reason as `Offlined by cli command` when the FPC becomes offline because of an fpc major or fatal error. This behavior is applicable only if you have configured the offline action for major or fatal error severity, by using the command `set chassis error major action offline`. See the following output:

```
user@router> show chassis fpc
                    Temp  CPU Utilization (%)   CPU Utilization (%)  Memory    Utilization (%)
Slot State           (C)  Total  Interrupt      1min   5min   15min  DRAM (MB) Heap     Buffer
  0  Offline         ---Offlined by cli command---
  1  Online
```

show chassis fpc pfe-instance (PTX1008, Junos OS Evolved)

```
user@host> run show chassis fpc pfe-instance all
FPC 0
PFE-Instance               PFE-State
    0                      Configured power off     <<< PFE Offline via
Config
    1                      ONLINE
    2                      ONLINE
    3                      ONLINE
    4                      ONLINE
```

show chassis fpc pic-status (PTX10016, Junos OS Evolved)

```
user@host> show chassis fpc pic-status
Slot 0   Online       JNP10K-LC1201
  PIC 0  Online       JNP10K-36QDD-LC-PIC
Slot 1  Online       JNP10K-LC1201
  PIC 0  Online       JNP10K-36QDD-LC-PIC
Slot 2   Online       JNP10K-LC1201
  PIC 0  Online       JNP10K-36QDD-LC-PIC
Slot 3  Online       JNP10K-LC1201
  PIC 0  Online       JNP10K-36QDD-LC-PIC
Slot 4   Online       JNP10K-LC1201
  PIC 0  Online       JNP10K-36QDD-LC-PIC
Slot 5  Online       JNP10K-LC1201
  PIC 0  Online       JNP10K-36QDD-LC-PIC
Slot 6   Online       JNP10K-LC1201
  PIC 0  Online       JNP10K-36QDD-LC-PIC
Slot 7  Online       JNP10K-LC1201
  PIC 0  Online       JNP10K-36QDD-LC-PIC
Slot 8   Online       JNP10K-LC1201
  PIC 0  Online       JNP10K-36QDD-LC-PIC
Slot 9  Online       JNP10K-LC1201
  PIC 0  Online       JNP10K-36QDD-LC-PIC
Slot 10   Online       JNP10K-LC1201
  PIC 0  Online       JNP10K-36QDD-LC-PIC
Slot 11  Online       JNP10K-LC1201
  PIC 0  Online       JNP10K-36QDD-LC-PIC
Slot 12   Online       JNP10K-LC1201
  PIC 0  Online       JNP10K-36QDD-LC-PIC
Slot 13  Online       JNP10K-LC1201
  PIC 0  Online       JNP10K-36QDD-LC-PIC
Slot 14   Online       JNP10K-LC1201
  PIC 0  Online       JNP10K-36QDD-LC-PIC
Slot 15  Online       JNP10K-LC1201
  PIC 0  Online       JNP10K-36QDD-LC-PIC
```

show chassis fpc pfe (PTX10004, PTX10008, PTX10001-36MR, PTX100016 with PTX10K-LC1201-36CD and PTX10K-LC1202-36MR line cards, and PTX10001-36MR)

```
user@router> show chassis fpc 0 pfe-instance all detail
    FPC 0
    PFE-Instance    PFE-State     PPFE-ID      Temp-Perf-Throttle       Temp-Volt-Reduction
       0            ONLINE        0, 1         Enabled                  Enabled|Nominal
       1            ONLINE        2, 3         Enabled                  Enabled|Nominal
       2            ONLINE        4, 5         Enabled                  Enabled|Nominal
       3            ONLINE        6, 7         Enabled                  Enabled|Optimized
       4            ONLINE        8            Enabled                  Enabled|Nominal
```

```
user@router> show chassis fpc 0 pfe-instance 0 detail
    FPC 0
    PFE-Instance    PFE-State     PPFE-ID      Temp-Perf-Throttle       Temp-Volt-Reduction
       0            ONLINE        0, 1         Enabled                  Enabled
```

Sample Output (Node Slicing)

show chassis fpc (Node Slicing)

```
user@router>show chassis fpc

                     Temp  CPU Utilization (%)   CPU Utilization (%)  Memory    Utilization (%)
Slot State            (C)  Total  Interrupt      1min   5min   15min  DRAM (MB) Heap
Buffer    GNF
  0  Online           45     12          0       12     12     12    3584        6
25       3
  1  Online           57     22          0       20     20     20    3136       16
22       2
  2  Online           50     19          0       17     17     16    3584        6
25       3
  3  Online           28     10          0       11     11     11    2048       10
20       6
  4  Online           42     20          0       20     19     19    3584        8
25       6
  5  Online           58     22          0       21     20     20    3136       16
```

```
22       4
  6  Online           49     17          0       15     16     16    3136       13
20       1
  7  Online           44     11          0       10     10     10    3584        6
25       5
  8  Online           40     19          0       18     18     18    3584        8
25       5
  9  Online           44     19          0       20     20     20    3584        8
25       5
```

show chassis fpc pic-status (Node Slicing)

```
user@router> show chassis fpc pic-status

Slot 0   Online       MPC5E 3D 24XGE+6XLGE                        GNF 3
  PIC 0  Online       12X10GE SFPP OTN
  PIC 1  Offline      12X10GE SFPP OTN
  PIC 2  Offline      3X40GE QSFPP
  PIC 3  Online       3X40GE QSFPP
Slot 1   Online       MPC9E 3D                                    GNF 2
  PIC 1  Online       MRATE-12xQSFPP-XGE-XLGE-CGE
Slot 2   Online       MPC5E 3D Q 2CGE+4XGE                        GNF 3
  PIC 0  Online       2X10GE SFPP OTN
  PIC 1  Online       1X100GE CFP2 OTN
  PIC 2  Online       2X10GE SFPP OTN
  PIC 3  Online       1X100GE CFP2 OTN
Slot 3   Online       MPCE Type 2 3D EQ                           GNF 6
Slot 4   Online       MPC6E 3D                                    GNF 6
  PIC 0  Online       24X10GE SFPP
  PIC 1  Online       2X100GE CFP2 OTN
Slot 5   Online       MPC9E 3D                                    GNF 4
  PIC 0  Online       MRATE-12xQSFPP-XGE-XLGE-CGE
Slot 6   Online       MPC7E 3D MRATE-12xQSFPP-XGE-XLGE-CGE        GNF 1
  PIC 0  Online       MRATE-6xQSFPP-XGE-XLGE-CGE
  PIC 1  Online       MRATE-6xQSFPP-XGE-XLGE-CGE
Slot 7   Online       MPC5E 3D 2CGE+4XGE                          GNF 5
  PIC 0  Online       2X10GE SFPP OTN
  PIC 1  Online       1X100GE CFP2 OTN
  PIC 2  Online       2X10GE SFPP OTN
  PIC 3  Online       1X100GE CFP2 OTN
Slot 8   Online       MPC6E 3D                                    GNF 5
```

```
  PIC 0  Online       24X10GE SFPP OTN
Slot 9   Online       MPC6E 3D                                        GNF 5
  PIC 0  Online       24X10GE SFPP
  PIC 1  Online       4X100GE CXP
```

Usage

- To display all PFE information along with temperature performance throttle status for FPC slot 1 (FPC 0), use the command `show chassis fpc 0 pfe-instance all detail`.
- To display only PFE 0 information along with temperature performance throttle status for FPC slot 1 (FPC 0), use the command `show chassis fpc 0 pfe-instance 0 detail`.

Release Information

Command introduced before Junos OS Release 7.4.

pfe-instance option added in Junos OS Evolved Release 21.4R1.

RELATED DOCUMENTATION

request chassis fpc | 420

show chassis fabric fpcs | 1096

show chassis fpc errors

IN THIS SECTION

Syntax | 1405

Description | 1405

- Options | **1406**
- Required Privilege Level | **1406**
- Output Fields | **1406**
- Sample Output | **1407**
- Release Information | **1409**

Syntax

```
show chassis fpc errors;
```

Description

Display chassis error information including FPC number, severity of error, number of error occurred, cleared, threshold, and corresponding action.

Error Severity Level	Default Threshold	Default Action
Fatal	1	Restart the FPC
Major	1	Get the current state of the FPC and raise an alarm.
Minor	10	Write a log for the event.

NOTE: The MX104 router does not support the `show chassis fpc error` CLI command. This command is not available in MX104 in the Junos OS releases 13.3R7, 15.1R2, 14.1R5, 14.2R4, 13.3R8, and later.

Options

detail Display the entire list of errors that contribute to a failure for all the FPCs.

fpc-slot Display the list of errors pertaining to the FPC installed in a particular slot

Required Privilege Level

view

Output Fields

Table 80 on page 1406 lists the output fields for the `show chassis fpc errors` command. Output fields are listed in the approximate order in which they appear.

Table 80: show chassis fpc errors Output Fields

Field Name	Field Description
`FPC`	The FPC number.
`Level`	The severity of the error. It can be configured as follows: • `fatal`—Fatal error on FPC • `major`—Major error on FPC • `minor`—Minor error on FPC
`Occurred`	Number of error instances occurred.
`Cleared`	Number of error instances cleared.
`Threshold`	Configured threshold value. The associated detection and recovery actions are triggered when this threshold value is crossed.

Table 80: show chassis fpc errors Output Fields *(Continued)*

Field Name	Field Description
Action-Taken	The number of instances of action taken.
Action	The detection and recovery actions that are triggered when the threshold value is crossed. • Restart the FPC. • Get the current state of the FPC and raise an alarm. • Write a log for the event. • Disable PFE. • Reset PFE.

Sample Output

show chassis fpc errors

```
user@host> show chassis fpc errors

FPC  Level Occurred Cleared Threshold Action-Taken Action
0   Minor      0      0     10          LOG|
    Major      0      0      1        GET STATE|ALARM|
    Fatal      0      0      1         TRAP
    Pfe-State: pfe-0 -ENABLED | pfe-1 -ENABLED | pfe-2 -ENABLED | pfe-3 -ENABLED | pfe-4 -
ENABLED | pfe-5 -ENABLED | pfe-6 -ENABLED | pfe-7 -ENABLED |
1   Minor      0      0     10          LOG|
    Major      0      0      1        GET STATE|ALARM|
    Fatal      0      0      1         TRAP
    Pfe-State: pfe-0 -ENABLED | pfe-1 -ENABLED | pfe-2 -ENABLED | pfe-3 -ENABLED | pfe-4 -
ENABLED | pfe-5 -ENABLED | pfe-6 -ENABLED | pfe-7 -ENABLED |
2   Minor      0      0     10          LOG|
    Major      0      0      1        GET STATE|ALARM|
    Fatal      0      0      1         TRAP
    Pfe-State: pfe-0 -ENABLED | pfe-1 -ENABLED | pfe-2 -ENABLED | pfe-3 -ENABLED | pfe-4 -
```

```
ENABLED | pfe-5 -ENABLED | pfe-6 -ENABLED | pfe-7 -ENABLED |
4   Minor      0      0     10          LOG|
    Major      0      0      1        GET STATE|ALARM|
    Fatal      0      0      1         TRAP
    Pfe-State: pfe-0 -ENABLED | pfe-1 -ENABLED | pfe-2 -ENABLED | pfe-3 -ENABLED | pfe-4 -
ENABLED | pfe-5 -ENABLED | pfe-6 -ENABLED | pfe-7 -ENABLED |
5   Minor      0      0     10          LOG|
    Major      0      0      1        GET STATE|ALARM|
    Fatal      0      0      1         TRAP
    Pfe-State: pfe-0 -ENABLED | pfe-1 -ENABLED | pfe-2 -ENABLED | pfe-3 -ENABLED | pfe-4 -
ENABLED | pfe-5 -ENABLED | pfe-6 -ENABLED | pfe-7 -ENABLED |
6   Minor      0      0     10          LOG|
    Major      0      0      1        GET STATE|ALARM|
    Fatal      0      0      1         TRAP
    Pfe-State: pfe-0 -ENABLED | pfe-1 -ENABLED | pfe-2 -ENABLED | pfe-3 -ENABLED | pfe-4 -
ENABLED | pfe-5 -ENABLED | pfe-6 -ENABLED | pfe-7 -ENABLED |
7   Minor      0      0     10          LOG|
    Major      0      0      1        GET STATE|ALARM|
    Fatal      0      0      1         TRAP
    Pfe-State: pfe-0 -ENABLED | pfe-1 -ENABLED | pfe-2 -ENABLED | pfe-3 -ENABLED | pfe-4 -
ENABLED | pfe-5 -ENABLED | pfe-6 -ENABLED | pfe-7 -ENABLED |
```

show chassis fpc errors (MX Series Routers)

```
user@host> show chassis fpc errors 0
FPC Scope    Category   Level Occurred Cleared Threshold Action-Taken Action
  0 board    functional Minor      1        0       1         2       LOG|CM ALARM|
                        Major      0        0       1         0       GET STATE|CM ALARM|
                        Fatal      0        0       1         0       GET STATE|RESET
             memory     Minor      0        0       1         0       LOG|CM ALARM|
                        Major      0        0       1         0       GET STATE|CM ALARM|
                        Fatal      0        0       1         0       GET STATE|RESET
             io         Minor      0        0       1         0       LOG|CM ALARM|
                        Major      0        0       1         0       GET STATE|CM ALARM|
                        Fatal      0        0       1         0       GET STATE|RESET
             storage    Minor      0        0       1         0       LOG|CM ALARM|
                        Major      0        0       1         0       GET STATE|CM ALARM|
                        Fatal      0        0       1         0       GET STATE|RESET
             switch     Minor      0        0       1         0       LOG|CM ALARM|
                        Major      0        0       1         0       GET STATE|CM ALARM|
                        Fatal      0        0       1         0       GET STATE|RESET
```

```
             processing Minor      0        0       1         0       LOG|CM ALARM|
                        Major      0        0       1         0       GET STATE|CM ALARM|
                        Fatal      0        0       1         0       GET STATE|RESET
             internal   Minor      0        0       1         0       LOG|CM ALARM|
                        Major      0        0       1         0       GET STATE|CM ALARM|
                        Fatal      0        0       1         0       GET STATE|RESET
    pfe      functional Minor      0        0       1         0       LOG|CM ALARM|
                        Major      0        0       1         0       GET STATE|CM ALARM|DISABLE
PFE|RESET PFE
                        Fatal      0        0       1         0       GET STATE|RESET
             memory     Minor      0        0       1         0       LOG|CM ALARM|
                        Major      0        0       1         0       GET STATE|CM ALARM|DISABLE
PFE|RESET PFE
                        Fatal      0        0       1         0       GET STATE|RESET
             io         Minor      0        0       1         0       LOG|CM ALARM|
                        Major      0        0       1         0       GET STATE|CM ALARM|DISABLE
PFE|RESET PFE
                        Fatal      0        0       1         0       GET STATE|RESET
             storage    Minor      0        0       1         0       LOG|CM ALARM|
                        Major      0        0       1         0       GET STATE|CM ALARM|DISABLE
PFE|RESET PFE
                        Fatal      0        0       1         0       GET STATE|RESET
             switch     Minor      0        0       1         0       LOG|CM ALARM|
                        Major      0        0       1         0       GET STATE|CM ALARM|DISABLE
PFE|RESET PFE
                        Fatal      0        0       1         0       GET STATE|RESET
             processing Minor      0        0       1         0       LOG|CM ALARM|
                        Major      0        0       1         0       GET STATE|CM ALARM|DISABLE
PFE|RESET PFE
                        Fatal      0        0       1         0       GET STATE|RESET
             internal   Minor      0        0       1         0       LOG|CM ALARM|
                        Major      0        0       1         0       GET STATE|CM ALARM|DISABLE
PFE|RESET PFE
                        Fatal      0        0       1         0       GET STATE|RESET
                        Pfe-State: pfe-0 -ENABLED | pfe-1 -ENABLED | pfe-2 -ENABLED | pfe-3 -
ENABLED | pfe-4 -ENABLED
```

Release Information

Command introduced in Junos OS Release 12.3.

Reset PFE output option added in Junos OS Release 21.4R3.

RELATED DOCUMENTATION

error | 275

show chassis fpc-feb-connectivity

IN THIS SECTION

- Syntax | 1410
- Description | 1410
- Options | 1411
- Required Privilege Level | 1411
- Output Fields | 1411
- Sample Output | 1413
- Release Information | 1414

Syntax

```
show chassis fpc-feb-connectivity
```

Description

(M120 router only) Display the Flexible PIC Concentrator (FPC) and Forwarding Engine Board (FEB) mapping and their respective states.

Options

This command has no options.

Required Privilege Level

view

Output Fields

Table 81 on page 1411 lists the output fields for the `show chassis fpc-feb-connectivity` command. Output fields are listed in the approximate order in which they appear.

Table 81: show chassis fpc-feb-connectivity Output Fields

Field Name	Field Description
FPC	Slot number of the Flexible PIC Concentrator (FPC).
FPC type	Type of FPC: **Type 1**, **Type 2**, **Type 3**, or **cFPC**.

Table 81: show chassis fpc-feb-connectivity Output Fields *(Continued)*

Field Name	Field Description
FPC state	State of the FPC. State can be any of the following: • **Announce offline**—Intermediate state where FPC is going down but is not offline and the Chassis manager acknowledges that the FPC is in the process of going offline. • **Announce online**—Intermediate state where FPC is coming up but is not online and the Chassis manager acknowledges that the FPC is in the process of coming online. • **Empty**—No FPC is present. • **Offline**—FPC is powered down. • **Online**—FPC is online and running. • **Present**—The chassis process has detected the FPC, but the FPC is either not supported by the current version of the Junos OS or FPC is coming up but is not online. • **Ready**—FPC is in transition state.
Connected FEB	Slot number of the Forwarding Engine Board (FEB) connected to the FPC or **None** if the FPC is not connected to a FEB.
FEB state	State of the FEB. State can be any of the following: • **Announce offline**—Intermediate state where FEB is going down but is not offline and the Chassis manager acknowledges that the FEB is in the process of going offline. • **Announce online**—Intermediate state where FEB is coming up but is not online and the Chassis manager acknowledges that the FEB is in the process of coming online. • **Empty**—No FEB is present. • **Offline**—FEB is powered down. • **Online**—FEB is online and running. • **Present**—The chassis process has detected the FEB, but the FEB is either not supported by the current version of the Junos OS or FEB is coming up but is not online. • **Ready**—FEB is in transition state.

Table 81: show chassis fpc-feb-connectivity Output Fields *(Continued)*

Field Name	Field Description
Link status	Status of the link connecting the R-FEB and R-FPC: • **Error** • **Misconfiguration**—Configuration between the R-FEB and the F-FPC is incorrect. • **OK**

Sample Output

show chassis fpc-feb-connectivity

```
user@host> show chassis fpc-feb-connectivity

FPC  FPC type  FPC state       Connected FEB  FEB state       Link status
0    cFPC      Online          0              Empty
1    cFPC      Online          1              Online          OK
2    Type 3    Online          3              Online          OK
3    Type 2    Online          None
4    Type 1    Online          4              Online          OK
5    Type 3    Online          None
    FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
  Egress queues: 8 supported, 8 in use
  Queue counters:       Queued packets  Transmitted packets      Dropped packets
    0 best-effort                    0                    0                    0
    1 expedited-fo                   0                    0                    0
    2 assured-forw                   0                    0                    0
    3 network-cont                   0                    0                    0
  Active alarms  : PLL, LOS, LINK
  Active defects : PLL, LOF, LOS, SEF, LOP, BERR-SF, PLM-P, LINK
  PCS statistics                      Seconds
    Bit errors                             0
    Errored blocks                         3
  MAC statistics:                      Receive         Transmit
```

```
    Total octets                          0              0
    Total packets                         0              0
```

Release Information

Command introduced in Junos OS Release 8.0.

RELATED DOCUMENTATION

- request chassis fpc | **420**
- show chassis fpc | **1339**
- show chassis fabric fpcs | **1096**
- Resynchronizing FPC Sequence Numbers with Active FPCs when an FPC Comes Online | **192**
- MX960 Flexible PIC Concentrator Description

show chassis fpc global pfe-id

IN THIS SECTION

- Syntax | **1415**
- Description | **1415**
- Additional Information | **1415**
- Required Privilege Level | **1415**
- Output Fields | **1415**
- Sample Output | **1416**
- Release Information | **1417**

Syntax

```
show chassis fpc global pfe-id
```

Description

Display the global pfe-id. The devices supported are MX10008, MX10016, MX2010, and MX2020.

Additional Information

The output is shown independent of the line card and the status of the FPC or PFE. This output is based on the chassis and the fabric card.

Required Privilege Level

view

Output Fields

Table 82 on page 1415 lists the output fields for the `show chassis fpc global pfe-id` command.

Table 82: show chassis fpc global pfe-id Output Fields

Field Name	Field Description
FPC	FPC slot number of the Flexible PIC Concentrator (FPC).
Global PFE ID	Unique Identifier for a PFE in a chassis. Local PFE ID = Unique identifier for a PFE in an FPC.

Sample Output

show chassis fpc global pfe-id (MX10008)

```
user@host> show chassis fpc global pfe-id
FPC                                                Global PFE ID
     PFE0  PFE1  PFE2  PFE3  PFE4  PFE5  PFE6  PFE7  PFE8  PFE9  PFE10  PFE11  PFE12  PFE13
PFE14  PFE15
-------------------------------------------------------------------------------------------------
---------
0      0     1     2     3     4     5     6     7     8     9    10     11     12     13
14     15
1     16    17    18    19    20    21    22    23    24    25    26     27     28     29
30     31
2     32    33    34    35    36    37    38    39    40    41    42     43     44     45
46     47
3     48    49    50    51    52    53    54    55    56    57    58     59     60     61
62     63
4     64    65    66    67    68    69    70    71    72    73    74     75     76     77
78     79
5     80    81    82    83    84    85    86    87    88    89    90     91     92     93
94     95
6     96    97    98    99   100   101   102   103   104   105   106    107    108    109
110    111
7    112   113   114   115   116   117   118   119   120   121   122    123    124    125
126    127
-------------------------------------------------------------------------------------------------
---------
```

show chassis fpc global pfe-id (MX2020 Routers)

```
user@host> show chassis fpc global pfe-id
FPC                      Global PFE ID
        PFE0  PFE1  PFE2  PFE3  PFE4  PFE5  PFE6  PFE7
-----------------------------------------------------------
0          0     1     2     3    80    81    82    83
1          4     5     6     7    84    85    86    87
2          8     9    10    11    88    89    90    91
3         12    13    14    15    92    93    94    95
4         16    17    18    19    96    97    98    99
```

```
5        20    21    22    23   100   101   102   103
6        24    25    26    27   104   105   106   107
7        28    29    30    31   108   109   110   111
8        32    33    34    35   112   113   114   115
9        36    37    38    39   116   117   118   119
10       40    41    42    43   120   121   122   123
11       44    45    46    47   124   125   126   127
12       48    49    50    51   128   129   130   131
13       52    53    54    55   132   133   134   135
14       56    57    58    59   136   137   138   139
15       60    61    62    63   140   141   142   143
16       64    65    66    67   144   145   146   147
17       68    69    70    71   148   149   150   151
18       72    73    74    75   152   153   154   155
19       76    77    78    79   156   157   158   159
-------------------------------------------------------
```

show chassis fpc global pfe-id (MX2010 Routers)

```
user@host> show chassis fpc global pfe-id
FPC                     Global PFE ID
        PFE0  PFE1  PFE2  PFE3  PFE4  PFE5  PFE6  PFE7
-------------------------------------------------------
0          0     1     2     3    80    81    82    83
1          4     5     6     7    84    85    86    87
2          8     9    10    11    88    89    90    91
3         12    13    14    15    92    93    94    95
4         16    17    18    19    96    97    98    99
5         20    21    22    23   100   101   102   103
6         24    25    26    27   104   105   106   107
7         28    29    30    31   108   109   110   111
8         32    33    34    35   112   113   114   115
9         36    37    38    39   116   117   118   119
-------------------------------------------------------
```

Release Information

Command introduced in Junos OS Release 21.4R1.

show chassis hardware

IN THIS SECTION

- Syntax | **1418**
- Syntax (EX Series, MX104, MX204, MX2010, MX2020, MX10003, MX10008, and MX2008 Universal Routing Platforms) | **1419**
- Syntax (TX Matrix Router) | **1419**
- Syntax (TX Matrix Plus Router) | **1419**
- Syntax (MX Series Routers) | **1419**
- Syntax (QFX Series) | **1420**
- Description | **1420**
- Options | **1421**
- Additional Information | **1422**
- Required Privilege Level | **1423**
- Output Fields | **1423**
- Sample Output | **1427**
- show chassis hardware (SRX5800) | **1441**
- Release Information | **1444**

Syntax

```
show chassis hardware
<detail | extensive>
<clei-models>
<models>
```

Syntax (EX Series, MX104, MX204, MX2010, MX2020, MX10003, MX10008, and MX2008 Universal Routing Platforms)

```
show chassis hardware
<clei-models>
<detail | extensive>
<models>
<satellite [slot-id slot-id |device-alias  alias-name]>
```

Syntax (TX Matrix Router)

```
show chassis hardware
<clei-models>
<detail | extensive>
<models>
<lcc number /  scc>
```

Syntax (TX Matrix Plus Router)

```
show chassis hardware
<clei-models>
<detail | extensive>
<models>
<lcc number /  sfc number>
```

Syntax (MX Series Routers)

```
show chassis hardware
<detail | extensive>
<clei-models>
<models>
```

```
<all-members>
<local>
<member member-id>
```

Syntax (QFX Series)

```
show chassis hardware
<detail | extensive>
<clei-models>
<interconnect-device name>
<node-device name>
<models>
```

Description

Display a list of all Flexible PIC Concentrators (FPCs) and PICs installed in the router or switch chassis, including the hardware version level and serial number.

In the EX Series switch command output, FPC refers to the following:

- On EX2200 switches, EX3200 switches, EX4200 standalone switches, and EX4500 switches—Refers to the switch; FPC *number* is always 0.
- On EX4200 switches in a Virtual Chassis configuration—Refers to the member of a Virtual Chassis; FPC *number* equals the member ID, from 0 through 9.
- On EX8208 and EX8216 switches—Refers to a line card; FPC *number* equals the slot number for the line card.

On QFX3500, QFX5100, and OCX Series standalone switches, and PTX1000 routers both the FPC and FPC *number* are always `0`.

On T4000 Type 5 FPCs, there are no `top temperature sensor` or `bottom temperature sensor` parameters. Instead, `fan intake temperature sensor` and `fan exhaust temperature sensors` parameters are displayed.

Starting from Junos OS Release 11.4, the output of the `show chassis hardware models` operational mode command displays the enhanced midplanes FRU model numbers (CHAS-BP3-MX240-S, CHAS-BP3-MX480-S or CHAS-BP3-MX960-S) based on the router. Prior to release 11.4, the FRU model numbers

are left blank when the router has enhanced midplanes. Note that the enhanced midplanes are introduced through the Junos OS Release 13.3, but can be supported on all Junos OS releases.

Starting with Junos OS Release 14.1, the output of the `show chassis hardware detail | extensive | clei-models | models` operational mode command displays the new DC power supply module (PSM) and power distribution unit (PDU) that are added to provide power to the high-density FPC (FPC2-PTX-P1A) and other components in a PTX5000 Packet Transport Router.

Options

none — Display information about hardware. For a TX Matrix router, display information about the TX Matrix router and its attached T640 routers. For a TX Matrix Plus router, display information about the TX Matrix Plus router and its attached routers.

clei-models — (Optional) Display Common Language Equipment Identifier (CLEI) barcode and model number for orderable field-replaceable units (FRUs).

detail — (Optional) Include RAM and disk information in output.

extensive — (Optional) Display ID EEPROM information.

all-members — (MX Series routers only) (Optional) Display hardware-specific information for all the members of the Virtual Chassis configuration.

interconnect-device *name* — (QFabric systems only) (Optional) Display hardware-specific information for the Interconnect device.

lcc *number* — (TX Matrix routers and TX Matrix Plus router only) (Optional) On a TX Matrix router, display hardware information for a specified T640 router (line-card chassis) that is connected to the TX Matrix router. On a TX Matrix Plus router, display hardware information for a specified router (line-card chassis) that is connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.

- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local — (MX Series routers only) (Optional) Display hardware-specific information for the local Virtual Chassis members.

member *member-id* — (MX Series routers and EX Series switches) (Optional) Display hardware-specific information for the specified member of the Virtual Chassis configuration. Replace *member-id* variable with a value 0 or 1.

models — (Optional) Display model numbers and part numbers for orderable FRUs and, for components that use ID EEPROM format v2, the CLEI code.

node-device *name* — (QFabric systems only) (Optional) Display hardware-specific information for the Node device.

satellite [slot-id *slot-id* **| device-alias** *alias-name***]** — (Junos Fusion only) (Optional) Display hardware information for the specified satellite device in a Junos Fusion, or for all satellite devices in the Junos Fusion if no satellite devices are specified.

scc — (TX Matrix router only) (Optional) Display hardware information for the TX Matrix router (switch-card chassis).

sfc *number* — (TX Matrix Plus router only) (Optional) Display hardware information for the TX Matrix Plus router (switch-fabric chassis). Replace *number* variable with `0`.

Additional Information

The `show chassis hardware detail` command now displays DIMM information for the following Routing Engines, as shown in Table 83 on page 1422.

Table 83: Routing Engines Displaying DIMM Information

Routing Engines	Routers
RE-S-1800x2 and RE-S-1800x4	MX240, MX480, and MX960 routers

Table 83: Routing Engines Displaying DIMM Information *(Continued)*

Routing Engines	Routers
RE-A-1800x2	M120 and M320 routers

In Junos OS Release 11.4 and later, the output for the `show chassis hardware models` operational mode command for MX Series routers display the enhanced midplanes FRU model numbers—CHAS-BP3-MX240-S, CHAS-BP3-MX480-S, or CHAS-BP3-MX960-S—based on the router. In releases before Junos OS Release 11.4, the FRU model numbers are left blank when the router has enhanced midplanes. Note that the enhanced midplanes are introduced through Junos OS Release 13.3, but can be supported on all Junos OS releases.

Starting with Junos OS Release 17.3R1, the output of the `show chassis hardware` command displays the mode in which vMX is running (performance mode or lite mode) in the part number field for the FPC. `RIOT-PERF` indicates performance mode and `RIOT-LITE` indicates lite mode.

Required Privilege Level

view

Output Fields

Table 84 on page 1423 lists the output fields for the `show chassis hardware` command. Output fields are listed in the approximate order in which they appear.

Table 84: show chassis hardware Output Fields

Field Name	Field Description	Level of Output
`Item`	Show information about the device hardware.	All levels
`Version`	Revision level of the chassis component.	All levels
`Part number`	Part number of the chassis component.	All levels

Table 84: show chassis hardware Output Fields *(Continued)*

Field Name	Field Description	Level of Output
`Serial number`	Serial number of the chassis component. The serial number of the backplane is also the serial number of the router chassis. Use this serial number when you need to contact Juniper Networks Customer Support about the router or switch chassis.	All levels
`Assb ID` or `Assembly ID`	(`extensive` keyword only) Identification number that describes the FRU hardware.	`extensive`
`Assembly Version`	(`extensive` keyword only) Version number of the FRU hardware.	`extensive`
`Assembly Flags`	(`extensive` keyword only) Flags.	`extensive`
`FRU model number`	(`clei-models`, `extensive`, and `models` keyword only) Model number of the FRU hardware component.	none specified
`CLEI code`	(`clei-models` and `extensive` keyword only) Common Language Equipment Identifier code. This value is displayed only for hardware components that use ID EEPROM format v2. This value is not displayed for components that use ID EEPROM format v1.	none specified
`EEPROM Version`	ID EEPROM version used by the hardware component: `0x00` (version 0), `0x01` (version 1), or `0x02` (version 2).	`extensive`

Table 84: show chassis hardware Output Fields *(Continued)*

Field Name	Field Description	Level of Output
`Description`	Brief description of the hardware item: • Type of power supply. • Type of PIC. If the PIC type is not supported on the current software release, the output states `Hardware Not Supported`. • Type of FPC: `FPC Type 1`, `FPC Type 2`, `FPC Type 3`, `FPC Type 4` , or `FPC TypeOC192`. On EX Series switches, a brief description of the FPC. The following list shows the PIM abbreviation in the output and the corresponding PIM name. • `2x FE`—Either two built-in Fast Ethernet interfaces (fixed PIM) or dual-port Fast Ethernet PIM • `4x FE`—4-port Fast Ethernet ePIM • `1x GE Copper`—Copper Gigabit Ethernet ePIM (one 10-Mbps, 100-Mbps, or 1000-Mbps port) • `1x GE SFP`—SFP Gigabit Ethernet ePIM (one fiber port) • `2x Serial`—Dual-port serial PIM • `2x T1`—Dual-port T1 PIM • `2x E1`—Dual-port E1 PIM • `2x CT1E1`—Dual-port channelized T1/E1 PIM • `1x T3`—T3 PIM (one port) • `1x E3`—E3 PIM (one port) • `4x BRI S/T`—4-port ISDN BRI S/T PIM • `4x BRI U`—4-port ISDN BRI U PIM • `1x ADSL Annex A`—ADSL 2/2+ Annex A PIM (one port, for POTS)	All levels

Table 84: show chassis hardware Output Fields *(Continued)*

Field Name	Field Description	Level of Output
	• 1x ADSL Annex B—ADSL 2/2+ Annex B PIM (one port, for ISDN) • 2x SHDSL (ATM)—G SHDSL PIM (2-port two-wire module or 1-port four-wire module) • 1x TGM550—TGM550 Telephony Gateway Module (Avaya VoIP gateway module with one console port, two analog LINE ports, and two analog TRUNK ports) • 1x DS1 TIM510—TIM510 E1/T1 Telephony Interface Module (Avaya VoIP media module with one E1 or T1 trunk termination port and ISDN PRI backup) • 4x FXS, 4xFX0, TIM514—TIM514 Analog Telephony Interface Module (Avaya VoIP media module with four analog LINE ports and four analog TRUNK ports) • 4x BRI TIM521—TIM521 BRI Telephony Interface Module (Avaya VoIP media module with four ISDN BRI ports) • Crypto Accelerator Module—For enhanced performance of cryptographic algorithms used in IP Security (IPsec) services • MPC M 16x 10GE—16-port 10-Gigabit Module Port Concentrator that supports SFP+ optical transceivers. (Not on EX Series switches.) • For hosts, the Routing Engine type. • For small form-factor pluggable transceiver (SFP) modules, the type of fiber: LX, SX, LH, or T. • LCD description for EX Series switches (except EX2200 switches). • MPC2—1-port MPC2 that supports two separate slots for MICs. • MPC3E—1-port MPC3E that supports two separate slots for MICs (MIC-3D-1X100GE-CFP and MIC-3D-20GE-SFP) on MX960, MX480, and MX240 routers. The MPC3E maps one MIC to one PIC (1 MIC, 1 PIC), which differs from the mapping of legacy MPCs. • 100GBASE-LR4, pluggable CFP optics	

Table 84: show chassis hardware Output Fields *(Continued)*

Field Name	Field Description	Level of Output
	• Supports the Enhanced MX Switch Control Board with fabric redundancy and existing SCBs without fabric redundancy. • Interoperates with existing MX Series line cards, including Flexible Port Concentrators (FPC), Dense Port Concentrators (DPCs), and Modular Port Concentrators (MPCs). • MPC4E—Fixed configuration MPC4E that is available in two flavors: MPC4E-3D-32XGE-SFPP and MPC4E-3D-2CGE-8XGE on MX2020, MX960, MX480, and MX240 routers. • LCD description for MX Series routers	

Sample Output

show chassis hardware (MX10008 Router)

```
user@host> show chassis hardware

Hardware inventory:
Item             Version  Part number  Serial number     Description
Chassis                                DE538             JNP10008 [MX10008]
Midplane         REV 27   750-054097   ACPD6954          Midplane 8
Routing Engine 0          BUILTIN      BUILTIN           RE X10
Routing Engine 1          BUILTIN      BUILTIN           RE X10 128
CB 0             REV 10   750-079562   CAKF2158          Control Board
CB 1             REV 05   711-065897   CAJG2680          Control Board
FPC 1            REV 04   750-084779   CAKN5706          JNP10K-LC2101
  CPU            REV 05   750-073391   CAKJ2864          LC 2101 PMB
  PIC 0                   BUILTIN      BUILTIN           4xQSFP28 SYNCE
    Xcvr 0       REV 01   740-046565   XXL0BQM           QSFP+-40G-SR4
    Xcvr 1       REV 01   740-032986   QB350242          QSFP+-40G-SR4
    Xcvr 2       REV 01   740-054053   QE408285          QSFP+-4X10G-SR
    Xcvr 3       REV 01   740-046565   QF3300Z9          QSFP+-40G-SR4
  PIC 1                   BUILTIN      BUILTIN           4xQSFP28 SYNCE
```

```
    Xcvr 0       REV 01   740-067442   QJ2200LD          QSFP+-40G-SR4
    Xcvr 1       REV 01   740-038153   APF170500382DP    QSFP+-40G-CU3M
    Xcvr 2       REV 01   740-067442   QI4302LC          QSFP+-40G-SR4
  PIC 2                   BUILTIN      BUILTIN           4xQSFP28 SYNCE
    Xcvr 0       REV 01   740-067442   1ACP1335119       QSFP+-40G-SR4
    Xcvr 1       REV 01   740-067442   1ACP1313156       QSFP+-40G-SR4
    Xcvr 2       REV 01   740-067442   QK050040          QSFP+-40G-SR4
    Xcvr 3       REV 01   740-067442   QJ2201BG          QSFP+-40G-SR4
  PIC 3                   BUILTIN      BUILTIN           4xQSFP28 SYNCE
    Xcvr 0       REV 01   740-058734   1ECQ12400CS       QSFP-100GBASE-SR4
    Xcvr 1       REV 01   740-046565   QF3300ZX          QSFP+-40G-SR4
    Xcvr 2       REV 01   740-061405   1ECQ12510FH       QSFP-100G-SR4-T2
    Xcvr 3       REV 01   740-032986   QB491182          QSFP+-40G-SR4
  PIC 4                   BUILTIN      BUILTIN           4xQSFP28 SYNCE
    Xcvr 0       REV 01   740-067442   QJ2200D5          QSFP+-40G-SR4
    Xcvr 1       REV 01   740-054053   XXS0L95           QSFP+-4X10G-SR
  PIC 5                   BUILTIN      BUILTIN           4xQSFP28 SYNCE
    Xcvr 0       REV 01   740-054053   QE251550          QSFP+-4X10G-SR
    Xcvr 1       REV 01   740-054053   XZB01D5           QSFP+-4X10G-SR
    Xcvr 3       REV 01   740-046565   QI1402F9          QSFP+-40G-SR4
FPD Board        REV 07   711-054687   ACPF2896          Front Panel Display
PEM 1            REV 02   740-049388   1EDL62102PR       Power Supply AC
PEM 2            REV 02   740-049388   1EDL60300H2       Power Supply AC
PEM 4            REV 02   740-049388   1EDL603003Z       Power Supply AC
PEM 5            REV 01   740-049388   1EDL339001B       Power Supply AC
FTC 0            REV 14   750-050108   ACNW3344          Fan Controller 8
FTC 1            REV 14   750-050108   ACPE3978          Fan Controller 8
Fan Tray 0       REV 09   760-054372   ACNV5507          Fan Tray 8
Fan Tray 1       REV 09   760-054372   ACNV5371          Fan Tray 8
SFB 0            REV 25   750-050058   ACPH6821          Switch Fabric (SIB) 8
SFB 1
SFB 2            REV 24   750-050058   ACNZ0641          Switch Fabric (SIB) 8
SFB 3            REV 27   750-050058   ACPH9127          Switch Fabric (SIB) 8
SFB 5            REV 24   750-050058   ACNX7396          Switch Fabric (SIB) 8
```

show chassis hardware (PTX10008 Router)

```
root@host> show chassis hardware
Hardware inventory:
Item             Version  Part number  Serial number     Description
Chassis                                DK404             JNP10008 [PTX10008]
```

```
Midplane          REV 28   750-054097   ACPP2394          Midplane 8
Routing Engine 0           BUILTIN      BUILTIN           RE-PTX-2X00x4
Routing Engine 1           BUILTIN      BUILTIN           RE-PTX-2X00x4
CB 0              REV 04   750-068820   ACPT5303          Control Board
CB 1              REV 04   750-068820   ACPR1627          Control Board
FPC 6             REV 13   750-068822   ACPB2753          LC1102 - 12C / 36Q /
14                                                                          4X
  CPU                      BUILTIN      BUILTIN           FPC CPU
  PIC 0                    BUILTIN      BUILTIN           12x100GE/36x40GE/
144x10                                                                        GE
    Xcvr 0        REV 01   740-067442   XV304N6           QSFP+-40G-SR4
    Xcvr 1        REV 01   740-067442   XV30A5M           QSFP+-40G-SR4
    Xcvr 2        REV 01   740-067442   XV300HC           QSFP+-40G-SR4
    Xcvr 3        REV 01   740-067443   XU20L17           QSFP+-40G-SR4
    Xcvr 4        REV 01   740-067442   XV303XG           QSFP+-40G-SR4
    Xcvr 5        REV 01   740-067443   XV306QC           QSFP+-40G-SR4
    Xcvr 6        REV 01   740-067442   XV303Y7           QSFP+-40G-SR4
    Xcvr 7        REV 01   740-067443   XX60DMR           QSFP+-40G-SR4
    Xcvr 9        REV 01   740-067443   XX60DNY           QSFP+-40G-SR4
    Xcvr 10       REV 01   740-054053   QF4605WF          QSFP+-4X10G-SR
    Xcvr 13       REV 01   740-058734   1ECQ115007D       QSFP-100GBASE-SR4
    Xcvr 15       REV 01   740-046565   QH06035R          QSFP+-40G-SR4
    Xcvr 16       REV 01   740-046565   QH0602KC          QSFP+-40G-SR4
    Xcvr 17       REV 01   740-046565   QH0507PA          QSFP+-40G-SR4
    Xcvr 18       REV 01   740-046565   QH06035M          QSFP+-40G-SR4
    Xcvr 24       REV 01   740-046565   QH0507QL          QSFP+-40G-SR4
    Xcvr 25       REV 01   740-067443   XV20CWP           QSFP+-40G-SR4
    Xcvr 34       REV 01   740-046565   QH06035U          QSFP+-40G-SR4
    Xcvr 35       REV 01   740-067443   XX60DN9           QSFP+-40G-SR4
FPC 7             REV 41   750-051357   ACPL3446          LC1101 - 30C / 30Q / 96X
  CPU                      BUILTIN      BUILTIN           FPC CPU
  PIC 0                    BUILTIN      BUILTIN           30x100GE/30x40GE/96x10GE
    Xcvr 0        REV 01   740-067443   XX60DPC           QSFP+-40G-SR4
    Xcvr 1        REV 01   740-054053   QF4605W7          QSFP+-4X10G-SR
    Xcvr 2        REV 01   740-067443   XX60DP8           QSFP+-40G-SR4
    Xcvr 3        REV 01   740-067442   XV30FYM           QSFP+-40G-SR4
    Xcvr 4        REV 01   740-067442   1ACP133406Z       QSFP+-40G-SR4
    Xcvr 5        REV 01   740-067443   XX60DP5           QSFP+-40G-SR4
    Xcvr 8        REV 01   740-046565   QH060355          QSFP+-40G-SR4
    Xcvr 12       REV 01   740-058734   1ECQ115008C       QSFP-100GBASE-SR4
    Xcvr 15       REV 01   740-046565   QH0602KG          QSFP+-40G-SR4
    Xcvr 16       REV 01   740-046565   QH0602LG          QSFP+-40G-SR4
    Xcvr 17       REV 01   740-046565   QH06035S          QSFP+-40G-SR4
```

```
    Xcvr 18      REV 01   740-046565   QH0602KS          QSFP+-40G-SR4
    Xcvr 24      REV 01   740-067443   QI2902DP          QSFP+-40G-SR4
Power Supply 2   REV 02   740-049388   1EDL70200NP       Power Supply AC
Power Supply 3   REV 02   740-049388   1EDL603005C       Power Supply AC
Power Supply 4   REV 02   740-049388   1EDL70200P1       Power Supply AC
Power Supply 5   REV 02   740-049388   1EDL70200B7       Power Supply AC
FTC 0            REV 16   750-050108   ACPK8682          Fan Controller 8
FTC 1            REV 16   750-050108   ACPR9530          Fan Controller 8
Fan Tray 0       REV 10   760-054372   ACPR9509          Fan Tray 8
Fan Tray 1       REV 10   760-054372   ACPV7260          Fan Tray 8
SIB 1            REV 28   750-050058   ACPV6306          Switch Fabric 8
SIB 2            REV 28                ACPR2569          Switch Fabric 8
SIB 3            REV 28   750-05       ACPW7402          Switch Fabric 8
SIB 4            REV 28   750-050058   ACPR2577          Switch Fabric 8
FPD Board        REV 07   711-054687   ACPM4965          Front Panel Display
```

show chassis hardware (PTX10016 Router Junos OS Evolved Release)

```
user@host> show chassis hardware
Hardware inventory:
Item             Version  Part number  Serial number     Description
Chassis                                DY814             JNP10016 [PTX10016]
Midplane 0       REV 02   750-085608   BCAW3258          Midplane 16
FPM 0            REV 01   711-086964   BCAR0775          Front Panel Display
PSM 0            Rev 03   740-069994   1F269200046       JNP10K 5500W AC/HVDC Power Supply Unit
PSM 1            Rev 03   740-069994   1F269170144       JNP10K 5500W AC/HVDC Power Supply Unit
PSM 2            REV 02   740-049388   1EDL60300C6      JNP10K 5500W AC/HVDC Power Supply Unit
PSM 3            REV 02   740-049388   1EDL603005X      JNP10K 5500W AC/HVDC Power Supply Unit
PSM 4            REV 02   740-049388   1EDL6170275      JNP10K 5500W AC/HVDC Power Supply Unit
PSM 5            REV 02   740-049388   1EDL61701WD      JNP10K 5500W AC/HVDC Power Supply Unit
Routing Engine 0          BUILTIN      BUILTIN           JNP10K-RE1-E
CB 0             REV 15   750-079562   BCAW3941          Control Board
Routing Engine 1          BUILTIN      BUILTIN           JNP10K-RE1-E
CB 1             REV 15   750-079562   BCAW3942          Control Board
FPC 0            REV 07   750-093524   BCAY8271          JNP10K-LC1201
CPU              REV 14   710-001726   HM1084            FPC CPU
FPC 10           REV 07   750-093524   BCAY8277          JNP10K-LC1201CPU              REV 05
710-010169   HZ3219            FPC CPU-Enhanced
SIB 0            REV 02   750-083426   BCAV7680          SIB-JNP10016
SIB 1            REV 02   750-083426   BCAV7682          SIB-JNP10016
SIB 2            REV 02   750-083426   BCAV7681          SIB-JNP10016
```

```
SIB 3            REV 02   750-083426   BCAV7684          SIB-JNP10016
SIB 4            REV 02   750-083426   BCAV7683          SIB-JNP10016
SIB 5            REV 02   750-083426   BCAV7685          SIB-JNP10016
FTC 0            REV 10   750-086270   BCAV0609          Fan Controller 16
Fan Tray 0       REV 02   750-103311   BCAY1793          Fan Tray 16
Fan Tray 1       REV 02   750-103311   BCAY1797          Fan Tray 16
```

show chassis hardware clei-models (PTX10016 Router)

```
user@host> show chassis hardware clei-models
Hardware inventory:
Item             Version  Part number  CLEI code         FRU model number
Midplane         REV 24   750-077138   CMMUN00ARA        JNP10016
CB 0             REV 04   711-065897   PROTOXCLEI        PROTO-ASSEMBLY
CB 1             REV 05   711-065897   PROTOXCLEI        PROTO-ASSEMBLY
FPC 2
  PIC 0                   BUILTIN
FPC 4            REV 35   750-071976   CMUIANABAA        JNP10K-LC1101
  PIC 0                   BUILTIN
FPC 5            REV 13   750-068822   CMUIAM9BAC        QFX10000-36Q
  PIC 0                   BUILTIN
FPC 6            REV 41   750-071976   CMUIANABAB        JNP10K-LC1101
  PIC 0                   BUILTIN
FPC 7            REV 35   750-071976   CMUIANABAA        JNP10K-LC1101
  PIC 0                   BUILTIN
FPC 8            REV 35   750-071976   CMUIANABAA        JNP10K-LC1101
  PIC 0                   BUILTIN
FPC 9            REV 41   750-071976   CMUIANABAB        JNP10K-LC1101
  PIC 0                   BUILTIN
FPC 10           REV 35   750-071976   CMUIANABAA        JNP10K-LC1101
  PIC 0                   BUILTIN
FPC 11           REV 35   750-071976   CMUIANABAA        JNP10K-LC1101
  PIC 0                   BUILTIN
FPC 13           REV 41   750-071976   CMUIANABAB        JNP10K-LC1101
  PIC 0                   BUILTIN
FPC 15           REV 37   750-071976   CMUIANABAA        JNP10K-LC1101
  PIC 0                   BUILTIN
Power Supply 0   REV 01   740-073147   CMUPADPBAA        JNP10K-PWR-DC
Power Supply 1   REV 01   740-073147   CMUPADPBAA        JNP10K-PWR-DC
Power Supply 2   REV 01   740-073147   CMUPADPBAA        JNP10K-PWR-DC
Power Supply 3   REV 01   740-073147   CMUPADPBAA        JNP10K-PWR-DC
```

```
Power Supply 4   REV 01   740-073147   CMUPADPBAA        JNP10K-PWR-DC
Power Supply 5   REV 01   740-073147   CMUPADPBAA        JNP10K-PWR-DC
Power Supply 6   REV 01   740-073147   CMUPADPBAA        JNP10K-PWR-DC
Power Supply 7   REV 01   740-073147   CMUPADPBAA        JNP10K-PWR-DC
Power Supply 8   REV 01   740-073147   CMUPADPBAA        JNP10K-PWR-DC
Power Supply 9   REV 01   740-073147   CMUPADPBAA        JNP10K-PWR-DC
Fan Tray 0                                              QFX5100-FAN-AFO
Fan Tray 1                                              QFX5100-FAN-AFO
SIB 0            REV 15   750-077140   CMUCAH6CAA        JNP10016-SF
SIB 1            REV 15   750-077140   CMUCAH6CAA        JNP10016-SF
SIB 2            REV 15   750-077140   CMUCAH6CAA        JNP10016-SF
SIB 3            REV 15   750-077140   CMUCAH6CAA        JNP10016-SF
SIB 4            REV 15   750-077140   CMUCAH6CAA        JNP10016-SF
SIB 5            REV 15   750-077140   CMUCAH6CAA        JNP10016-SF
FPD Board        REV 07   711-054687
```

show chassis hardware (QFX5700 Router)

```
user@host> show chassis hardware
Hardware inventory:
Item               Version        Part number   Serial number   Description
Chassis                           EC819         JNP5700         [QFX5700]
…..
…..
…..
Routing Engine 0                  BUILTIN       BUILTIN         JNP5700-RCB
Routing Engine 1                  BUILTIN       BUILTIN         JNP5700-RCB
CB 0               REV 15         750-079562    BCAV5526        Control Board
CB 1               REV 15         750-079562    BCAW0403        Control Board
```

show chassis hardware (SRX5800 Router)

```
user@host> show chassis hardware
show chassis hardware
Hardware inventory:
Item             Version  Part number  Serial number     Description
Chassis                                JN1080B50AFA      MX960
Midplane         REV 02   710-013698   CC6226            MX960 Backplane
Fan Extender     REV 02   710-018051   JY5235            Extended Cable Manager
FPM Board        REV 01   710-014974   JS4207            Front Panel Display
PEM 0            Rev 01   740-080280   1F238510008       MX960-UNIVERSAL-HV-PSM
```

```
PEM 1            Rev 01   740-080280   1F238510030       MX960-UNIVERSAL-HV-PSM
PEM 2            Rev 01   740-080280   1F238510023       MX960-UNIVERSAL-HV-PSM
PEM 3            Rev 01   740-080280   1F238510047       MX960-UNIVERSAL-HV-PSM
```

show chassis hardware detail (EX9251 Switch)

```
user@switch> show chassis hardware
Hardware inventory:
Item             Version  Part number  Serial number     Description
Chassis                                BLANK             EX9251
Routing Engine 0          BUILTIN      BUILTIN           RE-S-2X00x6
CB 0             REV 05   750-069579   CAGT1382          EX9251
FPC 0                     BUILTIN      BUILTIN           MPC
  PIC 0                   BUILTIN      BUILTIN           4XQSFP28 PIC
    Xcvr 0       REV 01   740-044512   APF14500007NHC    QSFP+-40G-CU50CM
    Xcvr 2       REV 01   740-046565   QH21035H          QSFP+-40G-SR4
  PIC 1                   BUILTIN      BUILTIN           8XSFPP PIC
    Xcvr 0       REV 01   740-031980   AA15393URH7       SFP+-10G-SR
    Xcvr 1       REV 01   740-031980   AA162832LVG       SFP+-10G-SR
    Xcvr 2       REV 01   740-031980   MXA0NKJ           SFP+-10G-SR
    Xcvr 3       REV 01   740-031980   MXA0K75           SFP+-10G-SR
    Xcvr 4       REV 01   740-021308   MXA138L           SFP+-10G-SR
    Xcvr 5       REV 01   740-021308   13T511102684      SFP+-10G-SR
    Xcvr 6       REV 01   740-021308   MXA138E           SFP+-10G-SR
    Xcvr 7       REV 01   740-021308   MXA152N           SFP+-10G-SR
PEM 0            REV 02   740-070749   1F186390060       AC AFO 650W PSU
PEM 1            REV 02   740-070749   1F186390045       AC AFO 650W PSU
Fan Tray 0                                               Fan Tray, Front to Back Airflow - AFO
Fan Tray 1                                               Fan Tray, Front to Back Airflow - AFO
```

show chassis hardware extensive (T640 Router)

```
user@host> show chassis hardware extensive
Hardware inventory:
Item             Version  Part number  Serial number     Description
Chassis                                                  T640
 Jedec Code:   0x7fb0           EEPROM Version:    0x01
 P/N:        ...........       S/N:             ...........
```

```
 Assembly ID:  0x0507            Assembly Version:  00.00
 Date:         00-00-0000        Assembly Flags:    0x00
 Version:    ...........
 ID: Gibson LCC Chassis
 Board Information Record:
  Address 0x00: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
 I2C Hex Data:
  Address 0x00: 7f b0 01 ff 05 07 00 00 00 00 00 00 00 00 00 00
  Address 0x10: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x20: ff ff ff ff ff ff ff ff ff ff ff ff 00 00 00 00
  Address 0x30: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
  Address 0x40: 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Midplane         REV 04   710-002726   AX5633
 Jedec Code:   0x7fb0            EEPROM Version:    0x01
 P/N:          710-002726.       S/N:               AX5633.
 Assembly ID:  0x0127            Assembly Version:  01.04
 Date:         06-27-2001        Assembly Flags:    0x00
 Version:      REV 04.....
 ID: Gibson Backplane
 Board Information Record:
  Address 0x00: ad 01 08 00 00 90 69 0e f8 00 ff ff ff ff ff ff
 I2C Hex Data:
  Address 0x00: 7f b0 01 ff 01 27 01 04 52 45 56 20 30 34 00 00
  Address 0x10: 00 00 00 00 37 31 30 2d 30 30 32 37 32 36 00 00
  Address 0x20: 53 2f 4e 20 41 58 35 36 33 33 00 00 00 1b 06 07
  Address 0x30: d1 ff ff ff ad 01 08 00 00 90 69 0e f8 00 ff ff
  Address 0x40: ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff ff
FPM GBUS         REV 02   710-002901   HE3245
 ...
FPM Display      REV 02   710-002897   HA4873
 ...
CIP              REV 05   710-002895   HA4729
...
PEM 1            RevX02   740-002595   MD21815           Power Entry Module
 ...
SCG 0            REV 04   710-003423   HF6023
 ...
SCG 1            REV 04   710-003423   HF6061
 ...
Routing Engine 0 REV 01   740-005022   210865700292      RE-3.0
...
CB 0             REV 06   710-002728   HE3614
...
```

```
FPC 1            REV 01   710-002385   HE3009           FPC Type 1
...              REV 06   710-001726   HC0010
```

show chassis hardware interconnect-device (QFabric Systems)

```
user@switch> show chassis hardware interconnect-device interconnect1
Hardware inventory:
Item             Version  Part number  Serial number     Description
Chassis          REV 07                                  QFX_olive
Midplane         REV 07   750-021261   BH0208188289      QFX Midplane
CB 0             REV 07   750-021261   BH0208188289      QFXIC08-CB4S
```

show chassis hardware lcc (TX Matrix Router)

```
user@host> show chassis hardware lcc 0
lcc0-re0:
--------------------------------------------------------------------------
Hardware inventory:
Item             Version  Part number  Serial number     Description
Chassis                                65751             T640
Midplane         REV 03   710-005608   RA1408            T640 Backplane
FPM GBUS         REV 09   710-002901   RA2784            T640 FPM Board
FPM Display      REV 05   710-002897   RA2825            FPM Display
CIP              REV 06   710-002895   HT0684            T Series CIP
PEM 0            Rev 11   740-002595   PM18483           Power Entry Module
PEM 1            Rev 11   740-002595   qb13984           Power Entry Module
SCG 0            REV 11   710-003423   HT0022            T640 Sonet Clock Gen.
Routing Engine 0 REV 13   740-005022   210865700363      RE-3.0 (RE-600)
CB 0             REV 03   710-007655   HW1195            Control Board (CB-T)
FPC 1            REV 05   710-007527   HM3245            FPC Type 2
  CPU            REV 14   710-001726   HM1084            FPC CPU
  PIC 0          REV 02   750-007218   AZ1112            2x OC-12 ATM2 IQ, SMIR
  PIC 1          REV 02   750-007745   HG3462            4x OC-3 SONET, SMIR
  PIC 2          REV 14   750-001901   BA5390            4x OC-12 SONET, SMIR
  PIC 3          REV 09   750-008155   HS3012            2x G/E IQ, 1000 BASE
    SFP 0                 NON-JNPR     P1186TY           SFP-S
    SFP 1        REV 01   740-007326   P11WLTF           SFP-SX
  MMB 1          REV 02   710-005555   HL7514            MMB-288mbit
  PPB 0          REV 04   710-003758   HM4405            PPB Type 2
  PPB 1          REV 04   710-003758   AV1960            PPB Type 2
```

```
FPC 2            REV 08   710-010154   HZ3578           E-FPC Type 3
  CPU            REV 05   710-010169   HZ3219           FPC CPU-Enhanced
  PIC 0          REV 02   750-009567   HX2882           1x 10GE(LAN),XENPAK
    SFP 0        REV 01   740-009898   USC202U709       XENPAK-LR
  PIC 1          REV 03   750-003336   HJ9954           4x OC-48 SONET, SMSR
  PIC 2          REV 01   750-004535   HC0235           1x OC-192 SM SR1
  PIC 3          REV 07   750-007141   HX1699           10x 1GE(LAN), 1000 BASE
    SFP 0        REV 01   740-007326   2441042          SFP-SX
    SFP 1        REV 01   740-007326   2441027          SFP-SX
  MMB 0          REV 03   710-010171   HV2365           MMB-5M3-288mbit
  MMB 1          REV 03   710-010171   HZ3888           MMB-5M3-288mbit
SPMB 0           REV 09   710-003229   HW5245           T Series Switch CPU
SIB 3            REV 07   710-005781   HR5927           SIB-L8-F16
  B Board        REV 06   710-005782   HR5971           SIB-L8-F16 (B)
SIB 4            REV 07   710-005781   HR5903           SIB-L8-F16
  B Board        REV 06   710-005782   HZ5275           SIB-L8-F16 (B)
```

show chassis hardware models (MX2010 Router)

```
user@host > show chassis hardware models
Hardware inventory:
Item             Version  Part number  Serial number     FRU model number
FPM Board        REV 06   711-032349   ZX8744            711-032349
PSM 4            REV 0C   740-033727   VK00254           00000000000000000000000
PSM 5            REV 0B   740-033727   VG00015           00000000000000000000000
PSM 6            REV 0B   740-033727   VH00097           00000000000000000000000
PSM 7            REV 0C   740-033727   VJ00151           00000000000000000000000
PSM 8            REV 0C   740-033727   VJ00149           00000000000000000000000
PDM 0            REV 0B   740-038109   WA00008
PDM 1            REV 0B   740-038109   WA00014
Routing Engine 0 REV 02   740-041821   9009094134        RE-S-1800X4-16G-S
Routing Engine 1 REV 02   740-041821   9009094141        RE-S-1800X4-16G-S
CB 0             REV 08   750-040257   CAAB3491          750-040257
CB 1             REV 08   750-040257   CAAB3489          750-040257
SFB 0            REV 06   711-032385   ZV1828            711-032385
SFB 1            REV 07   711-032385   ZZ2568            711-032385
SFB 2            REV 07   711-032385   ZZ2563            711-032385
SFB 3            REV 07   711-032385   ZZ2564            711-032385
SFB 4            REV 07   711-032385   ZZ2580            711-032385
SFB 5            REV 07   711-032385   ZZ2579            711-0323856
SFB 6            REV 07   711-032385   CAAB4882          711-044170
```

```
SFB 7            REV 07   711-032385   CAAB4898          711-044170
FPC 0            REV 33   750-028467   CAAB1919          MPC-3D-16XGE-SFPP
FPC 1            REV 21   750-033205   ZG5027            MX-MPC3-3D
  MIC 0          REV 03   750-033307   ZV6299            MIC3-3D-10XGE-SFPP
  MIC 1          REV 03   750-033307   ZV6268            MIC3-3D-10XGE-SFPP
FPC 8            REV 22   750-031089   ZT9746            MX-MPC2-3D
  MIC 0          REV 26   750-028392   ABBS1150          MIC-3D-20GE-SFP
  MIC 1          REV 26   750-028387   ABBR9582          MIC-3D-4XGE-XFP
FPC 9            REV 11   750-036284   ZL3591            MPCE-3D-16XGE-SFPP
ADC 0            REV 05   750-043596   CAAC2073          750-043596
ADC 1            REV 01   750-043596   ZV4117            750-043596
ADC 8            REV 01   750-043596   ZV4107            750-043596
ADC 9            REV 02   750-043596   ZW1555            750-043596
Fan Tray 0       REV 2A   760-046960   ACAY0015
Fan Tray 1       REV 2A   760-046960   ACAY0019
Fan Tray 2       REV 2A   760-046960   ACAY0020
Fan Tray 3       REV 2A   760-046960   ACAY0021
```

show chassis hardware node-device (QFabric Systems)

```
user@switch> show chassis hardware node-device node1
Routing Engine 0   BUILTIN      BUILTIN           QFX Routing Engine
node1            REV 05   711-032234   ED3694            QFX3500-48S4Q-AFI

  CPU                     BUILTIN      BUILTIN           FPC CPU
  PIC 0                   BUILTIN      BUILTIN           48x 10G-SFP+
    Xcvr 8         REV 01   740-030658   AD0946A028B       SFP+-10G-USR
```

show chassis hardware scc (TX Matrix Router)

```
user@host> show chassis hardware scc
scc-re0:
--------------------------------------------------------------------------
Hardware inventory:
Item             Version  Part number  Serial number     Description
Chassis                                                  TX Matrix
Midplane         REV 04   710-004396   RB0014            SCC Midplane
FPM GBUS         REV 04   710-004617   HW9141            SCC FPM Board
FPM Display      REV 04   710-004619   HS5950            SCC FPM
CIP 0            REV 01   710-010218   HV9151            SCC CIP
```

```
CIP 1            REV 01   710-010218   HV9152           SCC CIP
PEM 1            Rev 11   740-002595   QB13977          Power Entry Module
Routing Engine 0 REV 05   740-008883   P11123900153     RE-4.0 (RE-1600)
CB 0             REV 01   710-011709   HR5964           Control Board (CB-TX)
SPMB 0           REV 09   710-003229   HW5293           T Series Switch CPU
SIB 3
SIB 4            REV 01   710-005839   HW1177           SIB-S8-F16
  B Board        REV 01   710-005840   HW1202           SIB-S8-F16 (B)
```

show chassis hardware sfc (TX Matrix Plus Router)

```
user@host> show chassis hardware sfc 0
sfc0-re0:
--------------------------------------------------------------------------
Hardware inventory:
Item             Version  Part number  Serial number     Description
Chassis                                JN112F007AHB      TXP
Midplane         REV 05   710-022574   TS4027            SFC Midplane
FPM Display      REV 03   710-024027   DX0282            TXP FPM Display
CIP 0            REV 04   710-023792   DW4889            TXP CIP
CIP 1            REV 04   710-023792   DW4887            TXP CIP
PEM 0            Rev 07   740-027463   UM26368           Power Entry Module
Routing Engine 0 REV 01   740-026942   737A-1064         SFC RE
Routing Engine 1 REV 01   740-026942   737A-1082         SFC RE
CB 0             REV 09   710-022606   DW6099            SFC Control Board
CB 1             REV 09   710-022606   DW6096            SFC Control Board
SPMB 0                    BUILTIN                        SFC Switch CPU
SPMB 1                    BUILTIN                        SFC Switch CPU
SIB F13 0        REV 04   710-022600   DX0841            F13 SIB
  B Board        REV 03   710-023431   DX0966            F13 SIB Mezz
SIB F13 1        REV 04   750-024564   DW5776            F13 SIB
  B Board        REV 03   710-023431   DW9028            F13 SIB
SIB F13 3        REV 04   750-024564   DW5762            F13 SIB
  B Board        REV 03   710-023431   DW9059            F13 SIB
SIB F13 4        REV 04   750-024564   DW5797            F13 SIB
  B Board        REV 03   710-023431   DW9041            F13 SIB
SIB F13 6        REV 04   750-024564   DW5770            F13 SIB
  B Board        REV 03   710-023431   DW9079            F13 SIB Mezz
SIB F13 7        REV 04   750-024564   DW5758            F13 SIB
  B Board        REV 03   710-023431   DW9047            F13 SIB
SIB F13 8        REV 04   750-024564   DW5761            F13 SIB
```

```
  B Board        REV 03   710-023431   DW9043           F13 SIB Mezz
SIB F13 9        REV 04   750-024564   DW5754           F13 SIB
  B Board        REV 03   710-023431   DW9078           F13 SIB Mezz
SIB F13 11       REV 04   710-022600   DX0826           F13 SIB
  B Board        REV 03   710-023431   DX0967           F13 SIB Mezz
SIB F13 12       REV 04   750-024564   DW5794           F13 SIB
  B Board        REV 03   710-023431   DW9044           F13 SIB Mezz
SIB F2S 0/0      REV 05   710-022603   DW7897           F2S SIB
  B Board        REV 05   710-023787   DW7657           NEO PMB
SIB F2S 0/2      REV 05   710-022603   DW7833           F2S SIB
  B Board        REV 05   710-023787   DW7526           NEO PMB
SIB F2S 0/4      REV 05   710-022603   DW7875           F2S SIB
  B Board        REV 05   710-023787   DW7588           NEO PMB
SIB F2S 0/6      REV 05   710-022603   DW7860           F2S SIB
  B Board        REV 05   710-023787   DW7589           NEO PMB
SIB F2S 1/0      REV 04   710-022603   DW4820           F2S SIB
  B Board        REV 05   710-023787   DW8510           NEO PMB
SIB F2S 1/2      REV 05   710-022603   DW7849           F2S SIB
  B Board        REV 05   710-023787   DW7525           NEO PMB
SIB F2S 1/4      REV 05   710-022603   DW7927           F2S SIB
  B Board        REV 05   710-023787   DW7556           F2S SIB Mezz
SIB F2S 1/6      REV 05   710-022603   DW7866           F2S SIB
  B Board        REV 05   710-023787   DW7651           NEO PMB
SIB F2S 2/0      REV 05   710-022603   DW7880           F2S SIB
  B Board        REV 05   710-023787   DW7523           NEO PMB
SIB F2S 2/2      REV 05   710-022603   DW7895           F2S SIB
  B Board        REV 05   710-023787   DW7591           NEO PMB
SIB F2S 2/4      REV 05   710-022603   DW7907           F2S SIB
  B Board        REV 05   710-023787   DW7590           NEO PMB
SIB F2S 2/6      REV 05   710-022603   DW7785           F2S SIB
  B Board        REV 05   710-023787   DW7524           NEO PMB
SIB F2S 3/0      REV 05   710-022603   DW7782           F2S SIB
  B Board        REV 05   710-023787   DW7634           NEO PMB
SIB F2S 3/2      REV 05   710-022603   DW7793           F2S SIB
  B Board        REV 05   710-023787   DW7548           NEO PMB
SIB F2S 3/4      REV 05   710-022603   DW7779           F2S SIB
  B Board        REV 05   710-023787   DW7587           NEO PMB
SIB F2S 3/6      REV 05   710-022603   DW7930           F2S SIB
  B Board        REV 05   710-023787   DW7505           NEO PMB
SIB F2S 4/0      REV 05   710-022603   DW7867           F2S SIB
  B Board        REV 05   710-023787   DW7656           NEO PMB
SIB F2S 4/2      REV 05   710-022603   DW7917           F2S SIB
  B Board        REV 05   710-023787   DW7640           NEO PMB
```

```
SIB F2S 4/4      REV 05   710-022603   DW7929           F2S SIB
  B Board        REV 05   710-023787   DW7643           NEO PMB
SIB F2S 4/6      REV 05   710-022603   DW7870           F2S SIB
  B Board        REV 05   710-023787   DW7635           NEO PMB
Fan Tray 0       REV 06   760-024497   DV7831           Front Fan Tray
Fan Tray 1       REV 06   760-024497   DV9614           Front Fan Tray
Fan Tray 2       REV 06   760-024502   DV9618           Rear Fan Tray
Fan Tray 3       REV 06   760-024502   DV9616           Rear Fan Tray
Fan Tray 4       REV 06   760-024502   DV7807           Rear Fan Tray
Fan Tray 5       REV 06   760-024502   DV7828           Rear Fan Tray
```

show chassis hardware (ACX7100-48L)

```
user@host> show chassis hardware
Hardware inventory:
Item             Version  Part number  Serial number     Description
Chassis                                YW0220320039      JNP7100-48L
[ACX7100-48
  L]
PSM 1            REV 04   740-085431   1ED79520221       PSU 1600W AC, Front
to                                                                          Back
Airflow
Routing Engine 0 REV 04   611-112446   YY0220320013      RE-JNP-7100
CB 0             REV 05   650-113149   YW0220320039      Control Board
FPC 0                     BUILTIN      BUILTIN           ACX7100-48L
  PIC 0                   BUILTIN      BUILTIN           MRATE- 48xSFP56 +
6xQSF                                                                        P56-
DD
    Xcvr 0       REV 01   740-068639   1A1M31A311008     SFP28-25G-BASE-SR
    Xcvr 1       REV 01   740-030658   AA1230AZYWW       SFP+-10G-USR
    Xcvr 2       REV 01   740-031980   AP42G0C           SFP+-10G-SR
    Xcvr 3       REV 01   740-031980   ARN2FS9           SFP+-10G-SR
    Xcvr 4       REV 01   740-031980   AP4150P           SFP+-10G-SR
    Xcvr 5       REV 01   740-031980   123363A01134      SFP+-10G-SR
    Xcvr 6       REV 01   740-031980   B11E02539         SFP+-10G-SR
    Xcvr 7       REV 01   740-031980   ARQ0WRX           SFP+-10G-SR
    Xcvr 12      REV 01   740-031980   193363A00707      SFP+-10G-SR
    Xcvr 15      REV 01   740-031980   AMS15RT           SFP+-10G-SR
    Xcvr 18      REV 01   740-068639   1A1M31A5370MX     SFP28-25G-BASE-SR
    Xcvr 19      REV 01   740-068639   1A1M31A5370MS     SFP28-25G-BASE-SR
    Xcvr 21      REV 01   740-068639   1A1M31A5370MW     SFP28-25G-BASE-SR
```

```
    Xcvr 22      REV 01   740-068639   1A1M31A5370MT     SFP28-25G-BASE-SR
    Xcvr 43      REV 01   740-031980   CH09KN1H4         SFP+-10G-SR
    Xcvr 44      REV 01   740-031980   AMB0TC1           SFP+-10G-SR
    Xcvr 46      REV 01   740-031980   AP40WQN           SFP+-10G-SR
    Xcvr 47      REV 01   740-031980   APR1BCS           SFP+-10G-SR
    Xcvr 48      REV 01   740-054053   XXH0KH1           QSFP+-4X10G-SR
    Xcvr 49      REV 01   740-058734   1ECQ144605L       QSFP-100GBASE-SR4
    Xcvr 50      REV 01   740-054053   XWP0Q7D           QSFP+-4X10G-SR
    Xcvr 51      REV 01   740-058734   1ECQ144604H       QSFP-100GBASE-SR4
    Xcvr 52      REV 01   740-054053   XXH0KGC           QSFP+-4X10G-SR
    Xcvr 53      REV 01   740-058734   1ECQ144605K       QSFP-100GBASE-SR4
Fan Tray 0                                              JNP7100 Fan Tray,
Front                                                                                to
Back Airflow - AFO
Fan Tray 1                                              JNP7100 Fan Tray,
Front                                                                                to
Back Airflow - AFO
Fan Tray 2                                              JNP7100 Fan Tray,
Front                                                                                to
Back Airflow - AFO
Fan Tray 3                                              JNP7100 Fan Tray,
Front                                                                                to
Back Airflow - AFO
Fan Tray 4                                              JNP7100 Fan Tray,
Front                                                                                to
Back Airflow - AFO
Fan Tray 5                                              JNP7100 Fan Tray,
Front                                                                                to
Back Airflow - AFO
```

show chassis hardware (SRX5800)

```
user@host> show chassis hardware

Hardware inventory:
Item             Version  Part number  Serial number     Description
Chassis                                JN1080B50AFA      MX960
Midplane         REV 02   710-013698   CC6226            MX960 Backplane
Fan Extender     REV 02   710-018051   JY5235            Extended Cable Manager
```

```
FPM Board        REV 01   710-014974   JS4207           Front Panel Display
PEM 0            Rev 01   740-080280   1F238510008      SRX5800-UNIVERSAL-HV-PSM
PEM 1            Rev 01   740-080280   1F238510030      SRX5800-UNIVERSAL-HV-PSM
PEM 2            Rev 01   740-080280   1F238510023      SRX5800-UNIVERSAL-HV-PSM
PEM 3            Rev 01   740-080280   1F238510047      SRX5800-UNIVERSAL-HV-PSM
```

show chassis hardware (PTX10001-36MR) (400G ZR and 400G ZR-M optics)

```
user@host show chassis hardware
Hardware inventory:
    Item             Version  Part number  Serial number     Description
    Chassis                                EM436             JNP10001-36MR [PTX10001-36MR]
    PSM 0            REV 07   740-073765   1GE29391099       AC AFO 3000W PSU
    Routing Engine 0 REV 08   750-100243   BCBH4788          RE-JNP10001-36MR
    CB 0             REV 16   750-099260   BCBJ1424          Control Board
    FPC 0                     BUILTIN      BUILTIN           FPC-JNP10001-36MR
      PIC 0                   BUILTIN      BUILTIN           8X400GE-MR + 4X100GE-MR
        Xcvr 0       REV 01   740-032986   ECX40K80042       QSFP+-40G-SR4
        Xcvr 2       REV 01   740-032986   QF4804ZM          QSFP+-40G-SR4
        Xcvr 3       REV 01   740-046565   QD190447          QSFP+-40G-SR4
        Xcvr 4       REV 01   740-038624   S1810376855-1     QSFP+-40G-CU3M
        Xcvr 5       REV 01   740-032986   ECX40K80028       QSFP+-40G-SR4
        Xcvr 10      REV 01   740-131169   1T1TZFA70500D     QSFP56-DD-400G-ZR-M
      PIC 1                   BUILTIN      BUILTIN           8X400GE-MR + 4X100GE-MR
        Xcvr 0       REV 01   740-032986   XV303SF           QSFP+-40G-SR4
        Xcvr 1       REV 01   740-067442   QI1202B5          QSFP+-40G-SR4
        Xcvr 2       XXXX     NON-JNPR     204053396         QSFP56-DD-400G-ZR
        Xcvr 4       REV 01   740-061405   1ECQ13150KE       QSFP-100GBASE-SR4-T2
        Xcvr 10      REV 01   740-131169   1T1TZFA70500C     QSFP56-DD-400G-ZR-M
      PIC 2                   BUILTIN      BUILTIN           8X400GE-MR + 4X100GE-MR
        Xcvr 0       REV 01   740-032986   QD481959          QSFP+-40G-SR4
        Xcvr 1       REV 01   740-038624   C1909242760-1     QSFP+-40G-CU3M
        Xcvr 3       REV 01   740-032986   ECX02IC0146       QSFP+-40G-SR4
        Xcvr 4       REV 01   740-065631   1ACS12510R3       QSFP28-100G-AOC-3M
        Xcvr 5       REV 01   740-065631   1ACS1251023       QSFP28-100G-AOC-3M
        Xcvr 9       REV 01   740-061405   1ECQ13150A5       QSFP-100GBASE-SR4-T2
        Xcvr 10      XXXX     NON-JNPR     204053387         QSFP56-DD-400G-ZR
        Xcvr 11      REV 01   740-038623   MOC14256230865    QSFP+-40G-CU1M
    SIB 0                     BUILTIN      BUILTIN           SIB-JNP10001-36MR
    Fan Tray 0                                               JNP10001 Fan Tray, Front to Back
Airflow - AFO
```

```
    Fan Tray 1                                                JNP10001 Fan Tray, Front to Back
Airflow - AFO
    Fan Tray 2                                                JNP10001 Fan Tray, Front to Back
Airflow - AFO
    Fan Tray 3                                                JNP10001 Fan Tray, Front to Back
Airflow - AFO
    Fan Tray 4                                                JNP10001 Fan Tray, Front to Back
Airflow - AFO
    Fan Tray 5                                                JNP10001 Fan Tray, Front to Back
Airflow - AFO
```

show chassis hardware (MX304)

```
user@host show chassis hardware
Hardware inventory:
Item             Version  Part number  Serial number     Description
Chassis                                EU591             JNP304 [MX304]
Routing Engine 0 REV 01   750-123749   BCBZ3334          RE 2400 8C 128G
Routing Engine 1 REV 06   750-123749   BCCE2842          RE 2400 8C 128G
CB 0             REV 01   750-123404   BCBY2022          Control Board
FPC 0                     BUILTIN      BUILTIN           FPC-BUILTIN
  CPU            REV 01   750-122877   BCBX9348          JNP304 PMB
  PIC 0          REV 04   750-122718   BCBY7928          MRATE LMIC 16x100G/4x400G
    Xcvr 0       REV 01   740-065632   1FCS251700J       QSFP28-100G-AOC-5M
    Xcvr 3       REV 01   740-058734   1ACQ113404W       QSFP-100GBASE-SR4
    Xcvr 4       REV01    740-061002   LEO15180024       QSFP28-100G-CU5M
    Xcvr 5       REV 01   740-061405   1ECQ15200A9       QSFP-100G-SR4-T2
    Xcvr 7       REV 01   740-061405   1ECQ151819K       QSFP-100G-SR4-T2
    Xcvr 8       REV 01   740-058734   1ACQ11470MW       QSFP-100GBASE-SR4
    Xcvr 12      REV 01   740-065630   1FCS044402M       QSFP28-100G-AOC-1M
  PIC 1          REV 04   750-122718   BCBY7930          MRATE LMIC 16x100G/4x400G
    Xcvr 0       REV 01   740-090165   1W1CSAA539002     QSFP56-DD-400G-AOC-3M
    Xcvr 4       REV 01   740-067443   1ACP16161CQ       QSFP+-40G-SR4
    Xcvr 12      REV 01   740-065632   1FCS2517005       QSFP28-100G-AOC-5M
    Xcvr 14      REV 01   740-061405   1F1CQ1A5201F7     QSFP-100G-SR4-T2
PEM 0            Rev 01   740-110419   1F27B040062       AC AFO 2200W Power Supply
PEM 1
Fan Tray 0       REV 02   760-126744   BCCB3869          JNP304 Fan Tray, Front to Back Airflow
Fan Tray 1       REV 02   760-126744   BCCB3870          JNP304 Fan Tray, Front to Back Airflow
Fan Tray 2       REV 01   760-126744   BCBY4493          JNP304 Fan Tray, Front to Back Airflow
```

```
SFB 0            REV 01   750-122847   BCBX1427          Switch Fabric Board
TIB              REV 01   750-126514   BCBX9919          Timing Interface Board
```

Release Information

Command introduced before Junos OS Release 7.4.

`models` option introduced in Junos OS Release 8.2.

`sfc` option introduced in Junos OS Release 9.6 for the TX Matrix Plus router.

Information for `disk` and `usb` introduced in Junos OS Release 15.1X53-D60 for QFX10002, QFX10008, and QFX10016 switches.

`pem` detail output added in Junos OS Release 21.4R1 for SRX5800.

NOTE: Routers and routing platforms use the basic syntax, unless otherwise listed. For example, the EX Series has an additional satellite parameter available.

RELATED DOCUMENTATION

show chassis power

show chassis location

IN THIS SECTION

- Syntax | **1445**
- Syntax (TX Matrix Router) | **1445**
- Syntax (TX Matrix Plus Router) | **1445**
- Syntax (MX Series Router) | **1445**
- Syntax (QFX Series) | **1446**

- Description | **1446**
- Options | **1446**
- Required Privilege Level | **1448**
- Output Fields | **1448**
- Sample Output | **1449**
- Release Information | **1450**

Syntax

```
show chassis location
```

Syntax (TX Matrix Router)

```
show chassis location
<fpc | interface (by-name name | by-slot fpc number   lcc number) | lcc number | scc>
```

Syntax (TX Matrix Plus Router)

```
show chassis location
<fpc | interface (by-name name | by-slot fpc number   lcc number) | lcc number | sfc number>
```

Syntax (MX Series Router)

```
show chassis location
<all-members>
```

```
<local>
<member member-id>
```

Syntax (QFX Series)

```
show chassis location
<interconnect-device name>
<node-device name>
```

Description

Display the physical location of the chassis. This command can only be used on the primary Routing Engine.

Options

none — Display all information about the physical location of the chassis. On a TX Matrix router, display all information about the physical location of the TX Matrix router and its attached T640 routers. On a TX Matrix Plus router, display all information about the physical location of the TX Matrix Plus router and its attached routers.

all-members — (MX Series routers only) (Optional) Display the physical location of the chassis for all the member routers in the Virtual Chassis configuration.

fpc — (TX Matrix router and TX Matrix Plus router only) (Optional) Display the physical location of all Flexible PIC Concentrators (FPCs).

interconnect-device *name* — (QFabric systems only) (Optional) Display the physical location of the Interconnect device.

interface by-name *name* — (TX Matrix and TX Matrix Plus routers only) (Optional) Display the physical location of a specified interface name. On a TX Matrix router, this option displays the FPC number and T640 router (line-card chassis) number associated with the specified

interface. On a TX Matrix Plus router, this option displays the FPC number and router (line-card chassis) number associated with the specified interface.

interface by-slot fpc *number* lcc *number*

(TX Matrix and TX Matrix Plus router only) (Optional) On a TX Matrix router, display the global FPC number of an interface by specifying its local FPC number and T640 router (line-card chassis) number. On a TX Matrix Plus router, display the global FPC number of an interface by specifying its local FPC number and router (line-card chassis) number.

- The global FPC number is the FPC slot number when all the FPC slots in the routing matrix are considered: **0** through **31**. On TX Matrix Plus router with 3D SIBs, the value is `0` through `63`. The local FPC number is the FPC slot number on a particular T640 router.
- For **fpc**, replace ***number*** with a value from **0** through **7**.
- For **lcc**, replace ***number*** with a value from **0** through **7**.

lcc *number*

(TX Matrix and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display the physical location of a specified T640 router (line-card chassis) that is connected to a TX Matrix router. On a TX Matrix Plus router , display the physical location of a specified router (line-card chassis) that is connected to a TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local

(MX Series routers only) (Optional) Display the physical location of the chassis for the local Virtual Chassis member.

member *member-id*

(MX Series routers only) (Optional) Display the physical location of the chassis for the specified member of the Virtual Chassis configuration. Replace ***member-id*** with a value of 0 or 1.

node-device *name*	(QFabric systems only) (Optional) Display the physical location of the Node device.
scc	(TX Matrix routers only) (Optional) Display the physical location of the TX Matrix router (switch-card chassis).
sfc	(TX Matrix Plus routers only) (Optional) Display the physical location of the TX Matrix Plus router (or switch-fabric chassis).

Required Privilege Level

view

Output Fields

Table 85 on page 1448 lists the output fields for the `show chassis location` command. Output fields are listed in the approximate order in which they appear.

Table 85: show chassis location Output Fields

Field Name	Field Description
country-code	Country code information.
postal-code	Postal code information.
Building	Building information.
Floor	Floor information.
Global FPC	Global FPC number. The FPC slot number, when all FPC slots in the routing matrix are considered. The range of values is **0** through **31**. On TX Matrix Plus router with 3D SIBs the value is `0` through `63`.
`LATA`	Local access transport area information.

Table 85: show chassis location Output Fields *(Continued)*

Field Name	Field Description
LCC	Line-card chassis number. On a TX Matrix router, the number of a particular T640 router connected to the TX Matrix router. On a TX Matrix Plus router, the number of a particular router connected to the TX Matrix Plus router.
Local FPC	Local FPC number. On a TX Matrix router, the FPC slot number on a particular T640 router. On a TX Matrix Plus router, the FPC slot number on a particular router.

Sample Output

show chassis location

```
user@host> show chassis location
country-code: US
postal-code: 94404
Building: Building 2, Floor: 2
```

show chassis location fpc (TX Matrix Router)

```
user@host> show chassis location fpc
Global FPC    LCC     Local FPC
    17          2         1
    21          2         5
```

show chassis location interface by-slot (TX Matrix Router)

```
user@host> show chassis location interface by-slot
fpc 1 lcc 1
Global FPC: 9
```

show chassis location fpc (TX Matrix Plus Router)

```
user@host> show chassis location fpc
Global FPC    LCC     Local FPC
     0          0         0
     1          0         1
```

show chassis location interface by-slot (TX Matrix Plus Router)

```
user@host> show chassis location interface by-slot
fpc 2 lcc 1
Global FPC: 10
```

show chassis location (QFX Series and OCX Series)

```
user@switch> show chassis location
country-code: US
postal-code: 94404
Building: Building 2, Floor: 2
```

show chassis location (QFabric Systems)

```
user@switch> show chassis location interconnect-device
interconnect1
country-code: US
postal-code: 94404
Building: Building 2, Floor: 2
```

Release Information

Command introduced before Junos OS Release 7.4.

sfc option introduced for the TX Matrix Plus router in Junos OS Release 9.6.

RELATED DOCUMENTATION

Displaying Chassis Physical Locations for a Routing Matrix with a TX Matrix Plus Router

show chassis mac-addresses

IN THIS SECTION

- Syntax | 1451
- Syntax (TX Matrix Router) | 1451
- Syntax (TX Matrix Plus Router) | 1452
- Syntax (MX Series Router) | 1452
- Syntax (QFX Series) | 1452
- Description | 1452
- Options | 1452
- Required Privilege Level | 1454
- Output Fields | 1454
- Sample Output | 1455
- Release Information | 1459

Syntax

```
show chassis mac-addresses
```

Syntax (TX Matrix Router)

```
show chassis mac-addresses
<lcc number | scc>
```

Syntax (TX Matrix Plus Router)

```
show chassis mac-addresses
<lcc number | sfc number>
```

Syntax (MX Series Router)

```
show chassis mac-addresses
<all-members>
<local>
<member member-id>
```

Syntax (QFX Series)

```
show chassis mac-addresses
<interconnect-device name>
<node-group name>
```

Description

Display the media access control (MAC) addresses for the router, switch chassis, or switch.

Options

none	(TX Matrix, TX Matrix Plus routers, QFX Series, and OCX Series Switches) Display the MAC addresses for the router chassis or switch. On a TX Matrix router, display MAC addresses on the TX Matrix router and its attached T640 routers. On a TX Matrix Plus router, display MAC addresses on the TX Matrix Plus router and its attached routers.

all-members (MX Series routers only) (Optional) Display the MAC addresses for all the member routers of the Virtual Chassis configuration.

interconnect-device *name* (QFabric switches only) (Optional) Display the MAC addresses for the Interconnect device.

lcc *number* (TX Matrix and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display MAC addresses for a specified T640 router (or line-card chassis) that is connected to the TX Matrix Plus router. On a TX Matrix Plus router, display MAC addresses for a specified router (line-card chassis) that is connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local (MX Series routers only) (Optional) Display the MAC addresses for the local Virtual Chassis member.

member *member-id* (MX Series routers only) (Optional) Display the MAC addresses for the specified member of the Virtual Chassis configuration. Replace *member-id* with a value of 0 or 1.

node-group *name* (QFabric switches only) (Optional) Display the MAC addresses for the specified Node group.

scc (TX Matrix routers only) (Optional) Display MAC addresses for the TX Matrix router (or switch-card chassis).

sfc *number* (TX Matrix Plus routers only) (Optional) Display MAC addresses for the TX Matrix Plus router (or switch-fabric chassis).

Required Privilege Level

view

Output Fields

Table 86 on page 1454 lists the output fields for the `show chassis mac-addresses` command. Output fields are listed in the approximate order in which they appear.

Table 86: show chassis mac-addresses Output Fields

Field Name	Field Description
MAC address information	
Public base address	Base address of the MAC addresses allocated to this router or switch, for example 00:24:dc:18:09:40. This address is also printed on the box of the device. Public MAC addresses are those addresses your switch/router assigns to Ethernet interfaces. The public base address is the first MAC address your device assigns to an interface. Consecutive public count MAC addresses are reserved for additional interfaces.
	Number of allocated public addresses, for example 64. Public addresses are calculated starting with the public base address. If the public base address is 00:24:dc:18:09:40, then The MAC address of ge-0/0/0 on this device is 00:24:dc:18:09:40, and ge-0/0/1 is 00:24:dc:18:09:41, and so on, up to 64 available addresses.
Private base address	Base address of the private MAC addresses allocated to this router or switch. The private base address is the first MAC address after the allocated consecutive public count addresses. For example, if 00:24:dc:18:09:40 is the public base and 0x40 is the public count in hex, then 00:24:dc:18:09:80 would be the private base.
Private count	Number of allocated private addresses.

Sample Output

show chassis mac-addresses

```
user@host> show chassis mac-addresses
MAC address information
  Public base address   0:90:69:0:4:0
  Public count       1008
  Private base address   0:90:69:0:7:f0
  Private count       16
```

show chassis mac-addresses (MX2010 Router)

```
user@host> show chassis mac-addresses
MAC address information:
  Public base address     64:87:88:04:50:00
  Public count            1984
  Private base address    64:87:88:04:57:c0
  Private count           64
```

show chassis mac-addresses (PTX10008 Router)

```
user@host> show chassis mac-addresses
MAC address information:
  Public base address      30:b6:4f:0a:7a:bb
  Public count             1856
  Private base address     30:b6:4f:0a:81:fb
  Private count            192
```

show chassis mac-addresses (TX Matrix Router)

```
user@host> show chassis mac-addresses
scc-re0:
--------------------------------------------------------------------------
MAC address information:
  Public base address     00:05:85:9e:cc:00
  Public count            8064
```

```
  Private base address    00:05:85:9e:eb:80
  Private count           128
lcc0-re0:
--------------------------------------------------------------------------
MAC address information:
  Public base address     00:05:85:68:98:00
  Public count            2032
  Private base address    00:05:85:68:9f:f0
  Private count           16
lcc2-re0:
--------------------------------------------------------------------------
MAC address information:
  Public base address     00:05:85:68:78:00
  Public count            2032
  Private base address    00:05:85:68:7f:f0
  Private count           16
```

show chassis mac-addresses (TX Matrix Plus Router)

```
user@host> show chassis mac-addresses
sfc0-re0:
--------------------------------------------------------------------------
MAC address information:
  Public base address     00:1d:b5:14:00:00
  Public count            65023
  Private base address    00:1d:b5:14:fd:ff
  Private count           512

lcc0-re0:
--------------------------------------------------------------------------
MAC address information:
  Public base address     00:1f:12:7a:84:00
  Public count            2032
  Private base address    00:1f:12:7a:8b:f0
  Private count           16

lcc1-re0:
--------------------------------------------------------------------------
MAC address information:
  Public base address     00:22:83:42:48:00
  Public count            2032
```

```
  Private base address    00:22:83:42:4f:f0
  Private count           16

lcc2-re0:
--------------------------------------------------------------------------
MAC address information:
  Public base address     00:1f:12:c3:58:00
  Public count            2032
  Private base address    00:1f:12:c3:5f:f0
  Private count           16

lcc3-re0:
--------------------------------------------------------------------------
MAC address information:
  Public base address     00:21:59:ef:b8:00
  Public count            2032
  Private base address    00:21:59:ef:bf:f0
  Private count           16
```

show chassis mac-addresses (QFX Series and OCX Series)

```
user@switch> show chassis mac-addresses
MAC address information:
Public base address 02:00:08:00:00:00
Public count 512
Private base address 02:00:00:00:00:00
Private count 64
```

show chassis mac-addresses interconnect-device (QFabric Switches)

```
user@switch> show chassis mac-addresses interconnect-device
interconnect1
MAC address information:
  Public base address     00:1f:12:30:9c:c0
  Public count            58
  Private base address    00:1f:12:30:9c:fa
  Private count           6
```

show chassis mac-addresses node-group (QFabric Switches)

```
user@switch> show chassis mac-addresses node-group
NW-NG-0
MAC address information:
------------------------
RE:
  FC MAC base    00:11:00:00:00:00
  FC MAC count   2
  VLAN MAC       00:11:00:00:00:09
EC6007
  Base address   00:00:01:76:00:00
  Count          64
EC6008
  Base address   00:22:83:22:52:ae
  Count          260
```

show chassis mac-addresses (ACX5048 and ACX5096 Routers)

```
user@host> show chassis mac-addresses
FPC 0
    Base address   64:64:9b:5e:0a:00
    Count          1280
```

show chassis mac-addresses (ACX500 Routers)

```
user@host> show chassis mac-addresses
MAC address information:
  Public base address     f0:1c:2d:1b:60:80
  Public count            112
  Private base address    f0:1c:2d:1b:60:f0
  Private count           16
```

show chassis mac-addresses (EX9251 Switche)

```
user@switch> show chassis mac-addresses
 MAC address information:
```

```
  Public base address      4c:16:fc:90:68:00
  Public count             2032
  Private base address     4c:16:fc:90:6f:f0
  Private count            16
```

show chassis mac-addresses (EX9253 Switche)

```
user@switch> show chassis mac-addresses
 MAC address information:
  Public base address      38:4f:49:8f:00:b8
  Public count             2330
  Private base address     38:4f:49:8f:09:d2
  Private count            1766
```

Release Information

Command introduced before JUNOS Release 7.4.

sfc option introduced for the TX Matrix Plus router in JUNOS Release 9.6.

RELATED DOCUMENTATION

ACX2000 and ACX2100 Routers Hardware and CLI Terminology Mapping

show chassis network-services

IN THIS SECTION

- Syntax | **1460**
- Description | **1460**
- Options | **1460**
- Required Privilege Level | **1461**

- Output Fields | **1461**
- Sample Output | **1461**
- Release Information | **1463**

Syntax

```
show chassis network-services
```

Description

Display the network services mode that the router is configured to run in—IP Network Services mode, Ethernet Network Services mode, Enhanced IP Network Services mode, Enhanced Ethernet Network Services mode, or Enhanced mode.

Options

all-ethernet	All Ethernet network services
all-ip	All IP network services
enhanced-ethernet	Enhanced ethernet network services
enhanced-ip	Enhanced IP network services
enhanced-mode	Enhanced network services
ethernet	Ethernet network services
ip	IP network services
lan	Ethernet LAN services

Required Privilege Level

view

Output Fields

Table 87 on page 1461 lists the output fields for the `show chassis network services` command. Output fields are listed in the approximate order in which they appear.

Table 87: show chassis network services Output Fields

Field Name	Field Description
Network Services Mode	Network services mode configured for the router: • **IP**—IP Network Services mode. • **Ethernet**—Ethernet Network Services mode. • **enhanced-ip**—Enhanced IP Network Services mode • **enhanced-ethernet**—Enhanced Ethernet Network Services mode • `Enhanced-Mode`—Enhanced mode for PTX Series routers that have third-generation FPCs installed. See "enhanced-mode" on page 272.

Sample Output

show chassis network services

```
user@host> show chassis network services
Network Services Mode: IP
```

show chassis network services (MX104 Router)

```
user@host> show chassis network services
Network Services Mode: IP
```

show chassis network services (MX2010 Router)

```
user@host> show chassis network services
Network Services Mode: Enhanced-IP
```

show chassis network services (MX2020 Router)

```
user@host> show chassis network services
Network Services Mode: Enhanced-IP
```

show chassis network services (MX2008 Router)

```
user@host> show chassis network-services
Network Services Mode: Enhanced-IP
```

show chassis network-services (MX10003 Router)

```
user@host> show chassis network-services

Network Services Mode: Enhanced-IP
```

show chassis network-services (MX204 Router)

```
user@host> show chassis network-services

Network Services Mode: Enhanced-IP
```

show chassis network-services (MX10008 Router)

```
user@host> show chassis network-services
Network Services Mode: Enhanced-IP
```

show chassis network services (PTX Router with third-generation FPCs)

```
user@host> show chassis network services
Network Services Mode: Enhanced-Mode
```

Release Information

Command introduced in Junos OS Release 9.4.

RELATED DOCUMENTATION

enhanced-mode (Network Services) | 272

show chassis oss-map

IN THIS SECTION

- Syntax | 1464
- Description | 1464
- Required Privilege Level | 1464
- Output Fields | 1464
- Sample Output | 1465
- Release Information | 1465

Syntax

```
show chassis oss-map
```

Description

(T4000 routers only) Display the operations support systems (OSS) mapping details.

Required Privilege Level

view

Output Fields

Table 88 on page 1464 lists the output fields for the `show chassis oss-map` command. Output fields are listed in the approximate order in which they appear.

Table 88: show chassis oss-map Output Fields

Field Name	Field Description
`Chassis type`	Displays the original chassis type.
`Oss-map`	Displays the mapped chassis type.

Sample Output

command-name

```
user@T4000# show chassis oss-map
Chassis type             Oss-map
T4000                    T640
```

Release Information

Command introduced in Junos OS Release 12.3R3, 13.1R2, and 13.2R1.

RELATED DOCUMENTATION

- Configuring OSS Mapping to Represent a T4000 Chassis as a T1600 or a T640 Chassis | 233
- Example: Configuring a T4000 Chassis to Represent a T640 Chassis | 235
- oss-map | 335

show chassis pic

IN THIS SECTION

- Syntax | 1466
- Syntax (TX Matrix and TX Matrix Plus Routers) | 1466
- Syntax (MX Series Routers and EX Series Switches) | 1466
- Syntax (PTX Series Packet Transport Router and MX240, MX480, MX960, MX2010, and MX2020 Routers) | 1467
- Syntax (QFX Series) | 1467
- Syntax (ACX500, ACX5048, ACX5096, and ACX7509 Routers) | 1467
- Description | 1467

- Options | **1467**
- Required Privilege Level | **1470**
- Output Fields | **1470**
- Sample Output | **1475**
- Release Information | **1503**

Syntax

```
show chassis pic fpc-slot slot-number  pic-slot slot-number
```

Syntax (TX Matrix and TX Matrix Plus Routers)

```
show chassis pic fpc-slot slot-number  pic-slot slot-number
<lcc number>
```

Syntax (MX Series Routers and EX Series Switches)

```
show chassis pic fpc-slot slot-number   pic-slot slot-number
<all-members>
<local>
<member member-id>
```

Syntax (PTX Series Packet Transport Router and MX240, MX480, MX960, MX2010, and MX2020 Routers)

```
show chassis pic transport fpc-slot  slot-number pic-slot slot-number
```

Syntax (QFX Series)

```
show chassis pic fpc-slot slot-number  pic-slot slot-number
<interconnect-device name (fpc-slot slot-number | pic-slot slot-number)>
<node-device name pic-slot slot-number>
```

Syntax (ACX500, ACX5048, ACX5096, and ACX7509 Routers)

```
show chassis pic
(fpc-slot slot-number | pic-slot slot-number)
```

Description

Display status information about the PIC installed in the specified Flexible PIC Concentrator (FPC) and PIC slot.

Options

fpc-slot *slot-number* Display information about the PIC in this particular FPC slot:

- On a TX Matrix router, if you specify the number of the T640 router by using the `lcc` *number* option (the recommended method), replace *slot-number* with a value from `0` through `7`. Otherwise, replace *slot-number* with a value from `0` through `31`.

  Likewise, on a TX Matrix Plus router, if you specify the number of the T1600 router by using the `lcc` *number* option (the recommended method), replace *slot-number* with a value from `0` through `7`. Otherwise, replace *slot-number* with a value from `0` through `31`. For example, the following commands have the same result:

  ```
  user@host> show chassis pic fpc-slot 1 lcc 1 pic-slot 1
  user@host> show chassis pic fpc-slot 9 pic-slot 1
  ```

- M120 routers only—Replace *slot-number* with a value from `0` through `5`.
- MX80 routers only—Replace *slot-number* with a value from `0` through `1`.
- MX104 routers only—Replace *slot-number* with a value from `0` through `2`.
- MX240 routers only—Replace *slot-number* with a value from `0` through `2`.
- MX480 routers only—Replace *slot-number* with a value from `0` through `5`.
- MX960 routers only—Replace *slot-number* with a value from `0` through `11`.
- MX2010 routers only—Replace *slot-number* with a value from `0` through `9`.
- MX2020 routers only—Replace *slot-number* with a value from `0` through `19`.
- MX2008 routers only—Replace *slot-number* with a value from `0` through `9`.
- MX10003 routers only—Replace *slot-number* with a value from `0` through `1`.
- Other routers—Replace *slot-number* with a value from `0` through `7`.
- EX Series switches:
  - EX3200 switches and EX4200 standalone switches—Replace *slot-number* with 0.
  - EX4200 switches in a Virtual Chassis configuration—Replace *slot-number* with a value from 0 through 9 (switch's member ID).

- EX8208 switches—Replace *slot-number* with a value from 0 through 7 (line card).
- EX8216 switches—Replace *slot-number* with a value from 0 through 15 (line card).

- QFX Series:
  - QFX3500, QFX3600, QFX5100, and OCX Series standalone switches—Replace *slot-number* with 0. In the command output, FPC refers to a line card. The FPC number equals the slot number for the line card.
  - QFabric systems—Replace *slot-number* with any number between 0 and 15. In the command output, FPC refers to a line card. The FPC number equals the slot number for the line card.

all-members (MX Series routers and EX Series switches only) (Optional) Display PIC information for all member routers in the Virtual Chassis configuration.

interconnect-device *name* (QFabric systems only) (Optional) Display PIC information for a specified Interconnect device.

lcc *number* (TX Matrix and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display PIC information for a specified T640 router (or line-card chassis) that is connected to the TX Matrix router. On a TX Matrix Plus router, display PIC information for a specified router (line-card chassis) that is connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local (MX Series routers and EX Series switches only) (Optional) Display PIC information for the local Virtual Chassis member.

member *member-id*	(MX Series routers and EX Series switches only) (Optional) Display PIC information for the specified member of the Virtual Chassis configuration. Replace *member-id* with a value of 0 or 1.
node-device *name*	(QFabric systems only) (Optional) Display PIC information for a specified Node device.
pic-slot *slot-number*	Display information about the PIC in this particular PIC slot. For routers, replace *slot-number* with a value from 0 through 3. For EX3200 and EX4200 switches, replace *slot-number* with 0 for built-in network interfaces and 1 for interfaces on uplink modules. For EX8208 and EX8216 switches, replace *slot-number* with 0. For the QFX3500 standalone switch and the QFabric system, replace *slot-number* with 0 or 1.
transport	Display PIC information for optical transport network.

Required Privilege Level

view

Output Fields

Table 89 on page 1470 lists the output fields for the `show chassis pic` command. Output fields are listed in the approximate order in which they appear.

Table 89: show chassis pic Output Fields

Field Name	Field Description
`Type`	PIC type. **NOTE**: On the 1-port OC192/STM64 MICs with the SDH framing mode, the type is displayed as `MIC-3D-1STM64-XFP` and with the SONET framing mode, the type is displayed as `MIC-3D-1OC192-XFP`. By default, the 1-port OC192/STM64 MICs displays the type as `MIC-3D-1OC192-XFP`.

Table 89: show chassis pic Output Fields *(Continued)*

Field Name	Field Description
`Account Layer2 Overhead`	(MX Series routers) Indicates whether functionality to count the Layer 2 overhead bytes in the interface statistics at the PIC level is enabled or disabled.
`ASIC type`	Type of ASIC on the PIC.
`State`	Status of the PIC. State is displayed only when a PIC is in the slot. • `Online`— PIC is online and running. • `Offline`—PIC is powered down. • `Empty`—No PIC is present. • `Present`—PIC is plugged in. The PIC is not powered on or operational. • `Onlining`—PIC is in the process of going online. PICs and rest of the hardware is initializing. • `Offlining`—PIC is in the process of going offline. PIC and rest of the hardware is being shutdown down to take the offline gracefully. • `Fault`—PIC is in an alarmed state and the PIC is not operational.
`PIC version`	PIC hardware version.
`Uptime`	How long the PIC has been online.
`Package`	(Multiservices interfaces cards only) The following services package are supported: • `Layer-2` (not applicable to the MS-MPC and MS-MIC.) • `Layer-3` (not applicable to the MS-MPC and MS-MIC.) • `extension-provider` (PICs of MS-MPC and MS-MIC support only this package.)

Table 89: show chassis pic Output Fields *(Continued)*

Field Name	Field Description
`Port Number`	Port number for the PIC.
`Cable Type`	Type of cable connected to the port: `LH`, `LX`, or `SX`.
`PIC Port Information (MX480 Router 100-Gigabit Ethernet CFP)`	Port-level information for the PIC. • Port—Port number • Cable type—Type of optical transceiver installed. • Fiber type—Type of fiber. SM is single-mode. • Xcvr vendor—Transceiver vendor name. • Xcvr vendor part number—Transceiver vendor part number. • Wavelength—Wavelength of the transmitted signal. Uplinks and downlinks are always 1550 nm. There is a separate fiber for each direction • Xcvr Firmware—Transceiver firmware version.

Table 89: show chassis pic Output Fields *(Continued)*

Field Name	Field Description

`PIC Port Information (MX960 Router Bidirectional Optics )`	Port-level information for the PIC.
	• Port—Port number
	• Cable type—Type of small form-factor pluggable (SFP) optical transceiver installed. Uplink interfaces display -U. Down link interfaces display -D.
	• Fiber type—Type of fiber. SM is single-mode.
	• Xcvr vendor—Transceiver vendor name.
	• Xcvr vendor part number—Transceiver vendor part number.
	  • BX10-10-km bidirectional optics.
	  • BX40-40-km bidirectional optics.
	  • SFP-LX-40-km SFP optics.
	• Wavelength—Wavelength of the transmitted signal. Uplinks are always 1310 nm. Downlinks are either 1490 nm or 1550 nm.

`PIC Port Information (Next-Generation SONET/SDH SFP)`	Port-level information for the next-generation SONET/SDH SFP PIC. • Port—Port number. • Cable type—Type of small form-factor pluggable (SFP) optical transceiver installed. • Fiber type—Type of fiber: `SM` (single-mode) or `MM` (multimode). • Xcvr vendor—Transceiver vendor name. • Xcvr vendor part number—Transceiver vendor part number. • Wavelength—Wavelength of the transmitted signal. Next-generation SONET/SDH SFPs use 1310 nm.

Table 89: show chassis pic Output Fields *(Continued)*

Field Name	Field Description
`PIC port information (MX104 router)`	Port-level information for the PIC. • Port—Port number • Cable type—Type of optical transceiver installed. • Fiber type—Type of fiber. SM is single-mode. • Xcvr vendor—Transceiver vendor name. • Xcvr vendor part number—Transceiver vendor part number. • Wavelength—Wavelength of the transmitted signal. • Xcvr Firmware—Firmware version of the transceiver.
MSA Version	Multi-source Agreements (MSA) specification version that the specified optics is compliant to. Values supported are: • SFP+/SFP28—SFF 8472 (Versions 9.3 through 12,3) • QSFP+/QSFP28—SFF 8363 (Versions 1.3 through 2.10) • QSFP-DD—CMIS (Versions 3.0, 4.0, and 5.0)
Port speed information	Information pertaining to port speed: • Port—Port number. • PFE—Packet Forwarding Engine slot number. • Capable Port Speed—Speed supported by each port.
`Multirate Mode`	Rate-selectabilty status for the MIC: `Enabled` or `Disabled`.
`Channelization`	Indicates whether channelization is enabled or disabled on the DS3/E3 MIC.
`Administrative State`	Indicates the administrative state of the PIC. Possible values are: In Service (Default) and Out of Service.

Table 89: show chassis pic Output Fields *(Continued)*

Field Name	Field Description
Operational State	Indicates the operational state of the PIC. Possible values are: Normal and Fault.

Sample Output

show chassis pic fpc-slot pic-slot

```
user@host> show chassis pic fpc-slot 2 pic-slot 0
PIC fpc slot 2 pic slot 0 information:
  Type                            10x 1GE(LAN), 1000 BASE
  ASIC type                       H chip
  State                           Online
  PIC version                     1.1
  Uptime                          1 day, 50 minutes, 58 seconds
PIC Port Information:
  Port         Cable           Xcvr               Xcvr Vendor
  Number       Type            Vendor Name        Part Number
  0            GIGE 1000EX     FINISAR CORP.      FTRJ8519P1BNL-J3
  1            GIGE 1000EX     FINISAR CORP.      FTRJ-8519-7D-JUN
```

show chassis pic fpc-slot pic-slot (PIC Offline)

```
user@host> show chassis pic fpc-slot 1 pic-slot 0
PIC fpc slot 1 pic slot 0 information:
  State                           Offline
```

show chassis pic fpc-slot pic-slot (FPC Offline)

```
user@host> show chassis pic fpc-slot 1 pic-slot 0
FPC 1 is not online
```

show chassis pic fpc-slot pic-slot (FPC Not Present)

```
user@host> show chassis pic fpc-slot 4 pic-slot 0
FPC slot 4 is empty
```

show chassis pic fpc-slot pic-slot (PIC Not Present)

```
user@host> show chassis pic fpc-slot 5 pic-slot 2
FPC 5, PIC 2 is empty
```

show chassis pic fpc-slot 3 pic-slot 0 (M120 Router)

```
user@host> show chassis pic fpc-slot 3 pic-slot 0
PC slot 3, PIC slot 0 information:
  Type                            2x G/E IQ, 1000 BASE
  ASIC type                       IQ GE 2 VLAN-TAG FPGA
  State                           Online
  PIC version                1.16
  Uptime                       3 hours, 3 minutes

PIC Port Information:
  Port        Cable             Xcvr              Xcvr Vendor
  Number      Type              Vendor Name       Part Number
  0           GIGE 1000SX       FINISAR CORP.     FTRJ8519P1BNL-J3
  1           GIGE 1000SX       FINISAR CORP.     FTRJ-8519-7D-JUN
```

show chassis pic fpc-slot pic-slot (MX150)

```
user@host> show chassis pic fpc-slot 0 pic-slot 0
FPC slot 0, PIC slot 0 information:
  Type                            Virtual
  State                           Online
  PIC version                 0.0
  Uptime                        7 days, 19 hours, 44 minutes, 40 seconds

PIC port information:
                        Fiber                   Xcvr vendor       Wave-    Xcvr
```

```
  Port Cable type        type  Xcvr vendor        part number       length   Firmware
  10   GIGE 1000T        n/a   Methode Elec.      SP7041-M1-JN      n/a      0.0
  11   GIGE 1000T        n/a   Methode Elec.      SP7041-M1-JN      n/a      0.0
```

show chassis pic fpc-slot pic-slot (MX960 Router with Bidirectional Optics)

```
user@host> show chassis pic fpc-slot 4 pic-slot 1
FPC slot 4, PIC slot 1 information:
  Type                          10x 1GE(LAN)
  Account Layer2 Overhead       Enabled
  State                         Online
  PIC version                   0.0
  Uptime                        18 days, 5 hours, 41 minutes, 54 seconds

PIC port information:
                        Fiber                   Xcvr vendor
  Port  Cable type      type  Xcvr vendor       part number       Wavelength
  0     SFP-1000BASE-BX10-D SM  SumitomoElectric  SBP6H44-J3-BW-49  1490 nm
  1     SFP-1000BASE-BX10-D SM  SumitomoElectric  SBP6H44-J3-BW-49  1490 nm
  2     SFP-1000BASE-BX10-D SM  SumitomoElectric  SBP6H44-J3-BW-49  1490 nm
  3     SFP-1000BASE-BX10-D SM  OCP               TRXBG1LXDBVM2-JW  1490 nm
  4     SFP-1000BASE-BX10-D SM  OCP               TRXBG1LXDBVM2-JW  1490 nm
  5     SFP-1000BASE-BX10-U SM  SumitomoElectric  SBP6H44-J3-BW-31  1310 nm
  6     SFP-1000BASE-BX10-U SM  SumitomoElectric  SBP6H44-J3-BW-31  1310 nm
  7     SFP-1000BASE-BX10-U SM  OCP               TRXBG1LXDBBMH-J1  1310 nm
  8     SFP-1000BASE-BX10-U SM  OCP               TRXBG1LXDBBMH-J1  1310 nm
  9     SFP-1000BASE-BX10-U SM  SumitomoElectric  SBP6H44-J3-BW-31  1310 nm
```

show chassis pic fpc-slot pic-slot (MX480 Router with 100-Gigabit Ethernet MIC)

```
user@host> show chassis pic fpc-slot 1 pic-slot 2
FPC slot 1, PIC slot 2 information:
  Type                        1X100GE CFP
  State                       Online
  PIC version                 2.10
  Uptime                      4 minutes, 48 seconds

PIC port information:
        Fiber                   Xcvr vendor
  Port  Cable type        type  Xcvr vendor       part number       Wavelength
```

```
  0     100GBASE LR4      SM    FINISAR CORP.      FTLC1181RDNS-J3   1310 nm

        Xcvr vendor
        firmware version
        1.8
```

show chassis pic fpc-slot pic-slot (MX240, MX480, MX960 Routers with Application Services Modular Line Card)

```
user@host>show chassis pic fpc-slot 1 pic-slot 2
FPC slot 1, PIC slot 2 information:
  Type                            AS-MXC
  State                           Online
  PIC version                  1.0
  Uptime                         11 hours, 18 minutes, 3 seconds
```

show chassis pic fpc-slot pic-slot (MX960 Router with MPC5EQ)

```
user@host> show chassis pic fpc-slot 0 pic-slot 3
FPC slot 0, PIC slot 3 information:
  Type                            1X100GE CFP2 OTN
  State                           Online
  PIC version                  0.0
  Uptime                         1 hour, 22 minutes, 42 seconds

PIC port information:
                        Fiber                   Xcvr vendor       Wave-    Xcvr
  Port Cable type       type  Xcvr vendor       part number       length   Firmware
  0    100GBASE LR4     n/a   Oclaro Inc.       TRB5E20FNF-LF150  1309 nm  1.0
```

show chassis pic fpc-slot pic-slot (MX960 Router with MPC3E and 100-Gigabit DWDM OTN MIC)

```
user@host> show chassis pic fpc-slot 3 pic-slot 0
FPC slot 3, PIC slot 0 information:
  Type                            1X100GE DWDM CFP2-ACO
  State                           Online
  PIC version                  1.3
```

```
  Uptime                          9 hours, 4 minutes, 43 seconds

PIC port information:
                          Fiber                    Xcvr vendor       Wave-    Xcvr
  Port Cable type         type  Xcvr vendor        part number       length   Firmware
  0    100G LH            SM    OCLARO             TRB100AJ-01       1528.77 nm - 1568.36 nm 20.10
```

show chassis pic fpc-slot pic-slot (MX10003 Routers)

```
user@host > show chassis pic fpc-slot 0 pic-slot 0

FPC slot 0, PIC slot 1 information:
  Type                             MIC1
  State                            Online
  PIC version                   1.5
  Uptime                          13 hours, 54 minutes, 33 seconds

PIC port information:
                          Fiber                    Xcvr vendor       Wave-    Xcvr
  Port Cable type         type  Xcvr vendor        part number       length   Firmware
  0    40GBASE SR4        MM    AVAGO              AFBR-79EQDZ-JU2   850 nm   0.0
  11   40GBASE SR4        MM    AVAGO              AFBR-79EQDZ-JU2   850 nm   0.0

Port speed information:

  Port  PFE      Capable Port Speeds
  0      0       4x10GE, 40GE, 100GE
  1      0       4x10GE, 40GE, 100GE
  2      0       4x10GE, 40GE, 100GE
  3      0       4x10GE, 40GE, 100GE
  4      1       4x10GE, 40GE, 100GE
  5      1       4x10GE, 40GE, 100GE
  6      1       4x10GE, 40GE, 100GE
  7      1       4x10GE, 40GE, 100GE
  8      2       4x10GE, 40GE, 100GE
  9      2       4x10GE, 40GE, 100GE
  10     2       4x10GE, 40GE, 100GE
  11     2       4x10GE, 40GE, 100GE
```

show chassis pic fpc-slot pic-slot (PTX1000 and PTX10000)

```
user@host > show chassis pic fpc-slot 0 pic-slot 0
FPC slot 0, PIC slot 0 information:
  Type                              288X10GE/72X40GE/24X100GE
  State                             Online
  PIC version                  1.18
  Uptime                          9 day, 5 hours, 10 minutes, 56 seconds

PIC port information:
                         Fiber                    Xcvr vendor       Wave-    Xcvr
  Port Cable type        type  Xcvr vendor        part number       length   Firmware
  13   100GBASE LR4      SM    JUNIPER-SOURCE     SPQCELRCDFBJ2     1302 nm  0.0
  25   100GBASE LR4      SM    JUNIPER-SOURCE     SPQCELRCDFAJ2     1302 nm  0.0
  36   40GBASE LR4       SM    FINISAR CORP.      FTL4C1QE1C-J1     1301 nm  0.0
  37   40GBASE LR4       SM    FINISAR CORP.      FTL4C1QE1C-J1     1301 nm  0.0
  54   40GBASE SR4       MM    AVAGO              AFBR-79EQDZ-JU1   850 nm   0.0

Port speed information:
 Port  PFE      Capable Port Speeds
  0              4x10GE, 40GE
  1              4x10GE, 40GE, 100GE
  2              4x10GE, 40GE
  3              4x10GE, 40GE
  4              4x10GE, 40GE
  5              4x10GE, 40GE, 100GE
  6              4x10GE, 40GE
  7              4x10GE, 40GE, 100GE
  8              4x10GE, 40GE
  9              4x10GE, 40GE
  10             4x10GE, 40GE
  11             4x10GE, 40GE, 100GE
  12             4x10GE, 40GE
  13             4x10GE, 40GE, 100GE
  14             4x10GE, 40GE
  15             4x10GE, 40GE
  16             4x10GE, 40GE
  17             4x10GE, 40GE, 100GE
  18             4x10GE, 40GE
  19             4x10GE, 40GE, 100GE
  20             4x10GE, 40GE
  21             4x10GE, 40GE
```

```
22              4x10GE, 40GE
23              4x10GE, 40GE, 100GE
24              4x10GE, 40GE
25              4x10GE, 40GE, 100GE
26              4x10GE, 40GE
27              4x10GE, 40GE
28              4x10GE, 40GE
29              4x10GE, 40GE, 100GE
30              4x10GE, 40GE
31              4x10GE, 40GE, 100GE
32              4x10GE, 40GE
33              4x10GE, 40GE
34              4x10GE, 40GE
35              4x10GE, 40GE, 100GE
36              4x10GE, 40GE
37              4x10GE, 40GE, 100GE
38              4x10GE, 40GE
39              4x10GE, 40GE
40              4x10GE, 40GE
41              4x10GE, 40GE, 100GE
42              4x10GE, 40GE
43              4x10GE, 40GE, 100GE
44              4x10GE, 40GE
45              4x10GE, 40GE
46              4x10GE, 40GE
47              4x10GE, 40GE, 100GE
48              4x10GE, 40GE
49              4x10GE, 40GE, 100GE
50              4x10GE, 40GE
51              4x10GE, 40GE
52              4x10GE, 40GE
53              4x10GE, 40GE, 100GE
54              4x10GE, 40GE
55              4x10GE, 40GE, 100GE
56              4x10GE, 40GE
57              4x10GE, 40GE
58              4x10GE, 40GE
59              4x10GE, 40GE, 100GE
60              4x10GE, 40GE
61              4x10GE, 40GE, 100GE
62              4x10GE, 40GE
63              4x10GE, 40GE
64              4x10GE, 40GE
```

```
  65              4x10GE, 40GE, 100GE
  66              4x10GE, 40GE
  67              4x10GE, 40GE, 100GE
  68              4x10GE, 40GE
  69              4x10GE, 40GE
  70              4x10GE, 40GE
```

show chassis pic fpc-slot pic-slot (MSA Version)

```
user@host > show chassis pic fpc-slot pic-slot
..
PIC port information:
                     Fiber                Xcvr vendor     Wave-   Xcvr   JNPR   MSA
Port Cable type      type  Xcvr vendor    part number    length Firmware Rev   Version
0   2x100GBASE-SR4   MM   JUNIPER-1X1     740-084673      850 nm  6.0   REV 01 CMIS 3.0
1   2x100GBASE-SR4   MM   JUNIPER-1X1     740-084673      850 nm  6.0   REV 01 CMIS 3.0
3   10GBASE SR       MM   FINISAR CORP.   FTLX8571D3BNL-J1850 nm  0.0   REV 01 SFF-8472 ver 10.2
4   100GBASE SR4 T2  MM   JUNIPER-FINISAR FTLC9551REPM-J1 850 nm  0.0   REV 01 SFF-8636 ver 2.7
```

show chassis pic fpc-slot pic-slot (PTX3000 Router with 5-port 100-Gigabit DWDM OTN PIC)

```
user@host > show chassis pic fpc-slot 4 pic-slot 0
FPC slot 4, PIC slot 0 information:
  Type                            5X100GE DWDM CFP2-ACO
  State                           Online
  PIC version                1.17
  Uptime                        1 day, 5 hours, 15 minutes, 17 seconds

PIC port information:
                        Fiber                   Xcvr vendor       Wave-    Xcvr
  Port Cable type       type  Xcvr vendor       part number       length   Firmware
  0    100G LH          SM    MULTILANE SAL     ML4030-ACO-2      1528.77 nm - 1568.36 nm
1.0
  1    100G LH          SM    MULTILANE SAL     ML4030-ACO-2      1528.77 nm - 1568.36 nm
1.0
  2    100G LH          SM    JUNIPER-FUJITSU   FIM38500/222      1528.77 nm - 1568.36 nm
1.16
  3    100G LH          SM    FUJITSU           FIM38500/222      1528.77 nm - 1568.36 nm
```

```
1.16
  4    100G LH           SM    FUJITSU            FIM38500/222      1528.77 nm - 1568.36 nm 1.16
```

show chassis pic fpc-slot pic-slot (MX480 Router with MPC4E)

```
user@host> show chassis pic fpc-slot 3 pic-slot 0
FPC slot 3, PIC slot 0 information:
  Type                            4x10GE SFPP
  State                           Online
  PIC version                  0.0
  Uptime                         41 seconds

PIC port information:
                        Fiber                   Xcvr vendor       Wave-    Xcvr
  Port Cable type       type  Xcvr vendor       part number       length   Firmware
  0    10GBASE SR       MM    OPNEXT, INC.      TRS2001EM-0014    850 nm   0.0
  1    10GBASE SR       MM    OPNEXT, INC.      TRS2001EM-0014    850 nm   0.0
```

show chassis pic fpc-slot pic-slot (MX480 router with OTN Interface)

```
user@host> show chassis pci fpc-slot 4 pic-slot 0
FPC slot 4, PIC slot 0 information:
  Type                            12X10GE SFPP OTN
  State                           Online
  PIC version                  0.0
  Uptime                         5 hours, 28 minutes, 23 seconds

PIC port information:
                        Fiber                   Xcvr vendor       Wave-    Xcvr
  Port Cable type       type  Xcvr vendor       part number       length   Firmware
  0    10GBASE SR       MM    FINISAR CORP.     FTLX8571D3BNL-J1  850 nm   0.0
  1    10GBASE SR       MM    FINISAR CORP.     FTLX8571D3BCL-J1  850 nm   0.0
  2    10GBASE SR       MM    OPNEXT, INC.      TRS2001EM-0014    850 nm   0.0
```

show chassis pic fpc-slot pic-slot (MX2010 Router with OTN Interfaces)

```
user@host> show chassis pic fpc-slot 9 pic-slot 0
FPC slot 9, PIC slot 0 information:
```

```
  Type                              2X100GE CFP2 OTN
  State                             Online
  PIC version                  1.9
  Uptime                         3 hours, 56 minutes, 16 seconds

PIC port information:
                         Fiber                    Xcvr vendor       Wave-    Xcvr
  Port Cable type        type  Xcvr vendor        part number       length   Firmware
  0    100GBASE LR4-D    SM    FUJITSU           FIM37300/222      1310 nm  1.3
  1    100GBASE SR10     MM    AVAGO             AFBR-8420Z        n/a      1.0
```

show chassis pic fpc-slot pic-slot (MX2010 Router)

```
user@host> show chassis pic fpc-slot 9 pic-slot 3
FPC slot 9, PIC slot 3 information:
  Type                              1X100GE CFP
  Account Layer2 Overhead           Enabled
  State                             Online
  PIC version                       0.0
  Uptime                            14 hours, 51 seconds
```

show chassis pic fpc-slot pic-slot (MX2020 Router)

```
user@host> show chassis pic fpc-slot 19 pic-slot 3
FPC slot 19, PIC slot 3 information:
  Type                              4x 10GE(LAN) SFP+
  Account Layer2 Overhead           Enabled
  State                             Online
  PIC version                  0.0
  Uptime                         1 day, 11 hours, 26 minutes, 36 seconds

PIC port information:
                         Fiber                    Xcvr vendor       Wave-    Xcvr
  Port Cable type        type  Xcvr vendor        part number       length   Firmware
  0    10GBASE SR        MM    SumitomoElectric  SPP5200SR-J6-M    850 nm   0.0
  1    10GBASE SR        MM    SumitomoElectric  SPP5200SR-J6-M    850 nm   0.0
  2    10GBASE SR        MM    SumitomoElectric  SPP5200SR-J6-M    850 nm   0.0
  3    10GBASE SR        MM    SumitomoElectric  SPP5200SR-J6-M    850 nm   0.0
```

show chassis pic fpc-slot pic-slot (MX2020 Router with MPC5EQ and MPC6E)

```
user@host> show chassis pic fpc-slot 18 pic-slot 2
FPC slot 18, PIC slot 2 information:
  Type                            3X40GE QSFPP
  State                           Online
  PIC version                  0.0
  Uptime                         6 minutes, 31 seconds

PIC port information:
                         Fiber                    Xcvr vendor       Wave-    Xcvr
  Port Cable type        type  Xcvr vendor        part number       length   Firmware
  0    40GBASE SR4       MM    AVAGO              AFBR-79E4Z-D-JU2  850 nm   0.0
  1    40GBASE SR4       MM    AVAGO              AFBR-79E4Z-D-JU2  850 nm   0.0
  2    40GBASE SR4       MM    AVAGO              AFBR-79E4Z-D-JU2  850 nm   0.0
```

show chassis pic fpc-slot pic-slot (MX2020 Router with MPC6E and OTN MIC)

```
user@host> show chassis pic fpc-slot 3 pic-slot 0
FPC slot 0, PIC slot 1 information:
  Type                            24X10GE SFPP OTN
  State                           Online
  PIC version                  1.1
  Uptime                         1 hour, 33 minutes, 59 seconds

PIC port information:
                         Fiber                    Xcvr vendor       Wave-    Xcvr
  Port Cable type        type  Xcvr vendor        part number       length   Firmware
  7    10GBASE SR        MM    SumitomoElectric   SPP5200SR-J6-M    850 nm   0.0
  9    10GBASE SR        MM    FINISAR CORP.      FTLX8571D3BNL-J1  850 nm   0.0
  12   10GBASE LR        SM    FINISAR CORP.      FTLX1472M3BNL-J3  1310 nm  0.0
  20   10GBASE ZR        SM    FINISAR CORP.      FTLX1871M3BNL-J3  1550 nm  0.0
  21   10GBASE ER        SM    FINISAR CORP.      FTLX1671D3BTL-J4  1550 nm  0.0
  22   10GBASE LR        SM    SOURCEPHOTONICS    SPP10SLREDFCJNP   1310 nm  0.0
  23   10GBASE LR        SM    FINISAR CORP.      FTLX1471D3BNL-J1  1310 nm  0.0
```

show chassis pic fpc-slot pic-slot (MX2020 Router with MPC4E)

```
user@host> show chassis pic fpc-slot 14 pic-slot 0
FPC slot 14, PIC slot 2 information:
  Type                            4x10GE SFPP
  State                           Online
  PIC version                  0.0
  Uptime                          1 day, 14 hours, 49 minutes, 9 seconds

PIC port information:
                         Fiber                   Xcvr vendor       Wave-    Xcvr
  Port Cable type        type  Xcvr vendor       part number       length   Firmware
  0    10GBASE SR        MM    SumitomoElectric  SPP5100SR-J3      850 nm   0.0
  1    10GBASE SR        MM    SumitomoElectric  SPP5100SR-J3      850 nm   0.0
  3    10GBASE SR        MM    SumitomoElectric  SPP5100SR-J3      850 nm   0.0
```

show chassis pic fpc-slot pic-slot (MX2010 Router)

```
user@host> show chassis pic fpc-slot 9 pic-slot 3
FPC slot 9, PIC slot 3 information:
  Type                            1X100GE CFP
  Account Layer2 Overhead         Enabled
  State                           Online
  PIC version                     0.0
  Uptime                          14 hours, 51 seconds
```

show chassis pic fpc-slot pic-slot (T1600 Router with 100-Gigabit Ethernet PIC)

```
user@host> run show chassis pic fpc-slot 3 pic-slot 1
FPC slot 3, PIC slot 1 information:
  Type                            100GE SLOT1
  ASIC type                       Brooklyn 100GE FPGA
  State                           Online
  PIC version                  1.3
  Uptime                          10 minutes, 44 seconds

PIC port information:
                          Fiber                    Xcvr vendor
```

```
  Port  Cable type        type  Xcvr vendor        part number       Wavelength
  0     100GBASE LR4      SM    Opnext Inc.        TRC5E20ENFSF000F  1310 nm
```

show chassis pic fpc-slot pic-slot lcc (TX Matrix Router)

```
user@host> show chassis pic fpc-slot 1 pic-slot 1 lcc 0
lcc0-re0:
--------------------------------------------------------------------------
PIC fpc slot 1 pic slot 1 information:
  Type                            4x OC-3 SONET, SMIR
  ASIC type                       D chip
  State                           Online
  PIC version                  1.2
  Uptime                          5 days, 2 hours, 12 minutes, 8 seconds
```

show chassis pic fpc-slot pic-slot lcc (TX Matrix Plus Router)

```
user@host> show chassis pic pic-slot 0 fpc-slot 8
lcc0-re0:
--------------------------------------------------------------------------
FPC slot 8, PIC slot 0 information:
  Type                            1x 10GE(LAN/WAN)
  State                           Online
  Uptime                          2 hours, 46 minutes, 23 seconds

PIC port information:
                         Fiber
  Port  Cable type        type  Xcvr vendor         part number       Wavelength
  0     10GBASE ZR        SM    Opnext Inc.         TRF7061BN-LF150   1550 nm
  0     10GBASE ZR        SM    FINISAR CORP.       FTRX-1811-3-J2    1550 nm
```

show chassis pic fpc-slot pic-slot (Next-Generation SONET/SDH SFP)

```
user@host> show chassis pic fpc-slot 4 pic-slot 0
FPC slot 4, PIC slot 0 information:
   Type                            4x OC-3 1x OC-12 SFP
   ASIC type                       D FPGA
   State                           Online
```

```
  PIC version                 1.3
  Uptime                      1 day, 50 minutes, 4 seconds

PIC port information:
                          Fiber                   Xcvr vendor
  Port  Cable type        type  Xcvr vendor       part number       Wavelength
  0     OC48 short reach  SM    FINISAR CORP.     FTRJ1321P1BTL-J2  1310 nm
  1     OC3 short reach   MM    OCP               TRPA03MM3BAS-JE   1310 nm
  2     OC3 short reach   MM    OCP               TRXA03MM3BAS-JW   1310 nm
  3     OC12 inter reach  SM    FINISAR CORP.     FTLF1322P1BTR     1310 nm
```

show chassis pic fpc-slot pic-slot (12-Port T1/E1)

```
user@host> show chassis pic fpc-slot 0 pic-slot 3
FPC slot 0, PIC slot 3 information:
  Type                            12x T1/E1 CE
  State                           Online
  PIC version                 1.1
  CPU load average              1 percent
  Interrupt load average        0 percent
  Total DRAM size             128 MB
  Memory buffer utilization   100 percent
  Memory heap utilization       4 percent
  Uptime                        1 day, 22 hours, 28 minutes, 12 seconds
  Internal Clock Synchronization   Normal
```

show chassis pic fpc-slot 0 pic-slot 1 (4x CHOC3 SONET CE SFP)

```
user@host> show chassis pic fpc-slot 0 pic-slot 1
FPC slot 0, PIC slot 1 information:
  Type                            4x CHOC3 SONET CE SFP
  State                           Online
  PIC version                 1.3
  CPU load average              1 percent
  Interrupt load average        0 percent
  Total DRAM size             128 MB
  Memory buffer utilization    99 percent
  Memory heap utilization       4 percent
  Uptime                        1 day, 22 hours, 55 minutes, 37 seconds
  Internal Clock Synchronization   Normal
```

```
PIC port information:
                          Fiber                   Xcvr vendor
  Port  Cable type        type  Xcvr vendor       part number       Wavelength
  0     OC3 short reach   MM    AVAGO             HFBR-57E0P-JU2    n/a
  1     OC3 short reach   MM    AVAGO             HFBR-57E0P-JU2    n/a
  3     OC3 long reach    SM    OPNEXT INC        TRF5456AVLB314    1310 nm
```

show chassis pic fpc-slot 0 pic-slot 0 (SONET/SDH OC3/STM1 [Multi-Rate] MIC with SFP)

```
user@host> show chassis pic fpc-slot 0 pic-slot 0
FPC slot 0, PIC slot 0 information:
  Type                            MIC-3D-8OC3OC12-4OC48
  State                           Online
  PIC version                  1.8
  Uptime                          3 days, 22 hours, 3 minutes, 50 seconds

PIC port information:
                          Fiber                   Xcvr vendor
  Port  Cable type        type  Xcvr vendor       part number       Wavelength
  1     OC12 inter reach   SM   FINISAR CORP      FTRJ1322P1BTR-J3  1310 nm
  7     OC12 inter reach   SM   FINISAR CORP      FTRJ1322P1BTR-J3  1310 nm
Multirate Mode                    Enabled
```

show chassis pic fpc-slot 3 pic-slot 0 (8-port Channelized SONET/SDH OC3/STM1 [Multi-Rate] MIC with SFP)

```
user@host> show chassis pic fpc-slot 3 pic-slot 0
FPC slot 3, PIC slot 0 information:
  Type                            MIC-3D-8CHOC3-4CHOC12
  State                           Online
  PIC version                       1.9
  Uptime                              1 hour, 21 minutes, 24 seconds

PIC port information:
                          Fiber                   Xcvr vendor
  Port  Cable type        type  Xcvr vendor       part number       Wavelength
  0     OC12 short reach  SM    FINISAR CORP.     FTRJ1322P1BTR-J3  1310 nm
  1     OC12 short reach  SM    FINISAR CORP.     FTRJ1322P1BTR-J3  1310 nm
```

```
  2     OC12 inter reach  SM    FINISAR CORP.      FTRJ1322P1BTR-J2  1310 nm
  4     OC12 short reach  SM    FINISAR CORP.      FTRJ1322P1BTR-J3  1310 nm
  5     OC12 short reach  SM    FINISAR CORP.      FTRJ1322P1BTR-J3  1310 nm
  6     OC12 short reach  SM    FINISAR CORP.      FTRJ1322P1BTR-J3  1310 nm
  7     OC12 short reach  SM    FINISAR CORP.      FTRJ1322P1BTR-J3  1310 nm
```

show chassis pic fpc-slot 5 pic-slot 0 (4-port Channelized SONET/SDH OC3/STM1 [Multi-Rate] MIC with SFP)

```
user@host> show chassis pic fpc-slot 5 pic-slot 0
FPC slot 5, PIC slot 0 information:
  Type                          MIC-3D-4CHOC3-2CHOC12
  State                         Online
  PIC version                   1.9
  Uptime                        1 hour, 21 minutes

PIC port information:
                         Fiber                    Xcvr vendor
  Port  Cable type       type  Xcvr vendor        part number       Wavelength
  1     OC12 inter reach  SM    FINISAR CORP.      FTRJ1322P1BTR-J3  1310 nm
  2     OC12 inter reach  SM    FINISAR CORP.      FTRJ1322P1BTR-J3  1310 nm
  3     OC12 short reach  SM    FINISAR CORP.      FTRJ1322P1BTR-J3  1310 nm
```

show chassis pic fpc-slot 1 pic-slot 0 (1-port OC192/STM64 MIC with XFP)

```
user@host> show chassis pic fpc-slot 1 pic-slot 0
FPC slot 1, PIC slot 0 information:
  Type                            MIC-3D-1OC192-XFP
  State                           Online
  PIC version                     1.2
  Uptime                          1 day, 11 hours, 4 minutes, 6 seconds

PIC port information:
                         Fiber                    Xcvr vendor
  Port  Cable type       type  Xcvr vendor        part number       Wavelength
  0     OC192 short reach n/a   FINISAR CORP.      FTLX1412M3BCL-J3  1310 nm
```

show chassis pic fpc-slot 1 pic-slot 2 (8-port DS3/E3 MIC)

```
user@host> show chassis pic fpc-slot 1 pic-slot 2
FPC slot 1, PIC slot 2 information:
  Type                            MIC-3D-8DS3-E3
  State                           Online
  PIC version                        1.10
  Uptime                          4 days, 1 hour, 29 minutes, 19 seconds
  Channelization Mode             Disabled
```

show chassis pic fpc-slot pic-slot (OTN)

```
user@host> show chassis pic fpc-slot 5 pic-slot 0
PIC fpc slot 5 pic slot 0 information:
     Type                            1x10GE(LAN),OTN
     ASIC type                       H chip
     State                           Online
     PIC version                  1.0
     Uptime                       5 minutes, 50 seconds
```

show chassis pic fpc-slot pic-slot (QFX3500 Switch)

```
user@switch> show chassis pic fpc-slot 0 pic-slot 0
FPC slot 0, PIC slot 0 information:
Type 48x 10G-SFP+ Builtin
State Online
Uptime 3 days, 3 hours, 5 minutes, 20 seconds
```

show chassis pic fpc-slot pic-slot (QFX5100 Switches and OCX Series)

```
user@switch> show chassis pic fpc-slot 0 pic-slot 0
FPC slot 0, PIC slot 0 information:
  Type                            Unknown Builtin
  State                           Online
  Uptime                         1 day, 17 hours, 5 minutes, 9 seconds
```

show chassis pic interconnect-device fpc-slot pic-slot (QFabric Systems)

```
user@switch> show chassis pic interconnect-device interconnect1 fpc-slot 9 pic-slot 0
FPC slot 9, PIC slot 0 information:
  Type                            16x 40G-GEBuiltin
  State                           Online
  Uptime                         2 hours, 47 minutes, 40 seconds
```

show chassis pic node-device fpc-slot pic-slot (QFabric System)

```
user@switch> show chassis pic node-device node1 pic-slot 0
FPC slot node1, PIC slot 0 information:
  Type                            48x 10G-SFP+Builtin
  State                           Online
  Uptime                         2 hours, 52 minutes, 37 seconds

PIC port information:
                        Fiber                   Xcvr vendor
  Port  Cable type      type  Xcvr vendor       part number       Wavelength
  0     10GBASE SR      MM    SumitomoElectric  SPP5101SR-J3      850 nm
  1     10GBASE SR      MM    SumitomoElectric  SPP5101SR-J3      850 nm
  2     10GBASE SR      MM    SumitomoElectric  SPP5101SR-J3      850 nm
  3     10GBASE SR      MM    SumitomoElectric  SPP5101SR-J3      850 nm
  4     10GBASE SR      MM    SumitomoElectric  SPP5101SR-J3      850 nm
  5     10GBASE SR      MM    SumitomoElectric  SPP5101SR-J3      850 nm
  6     10GBASE SR      MM    SumitomoElectric  SPP5101SR-J3      850 nm
  7     10GBASE SR      MM    SumitomoElectric  SPP5101SR-J3      850 nm
  8     10GBASE SR      MM    SumitomoElectric  SPP5101SR-J3      850 nm
  9     10GBASE SR      MM    SumitomoElectric  SPP5101SR-J3      850 nm
  10    10GBASE SR      MM    SumitomoElectric  SPP5101SR-J3      850 nm
  11    10GBASE SR      MM    SumitomoElectric  SPP5101SR-J3      850 nm
  12    10GBASE SR      MM    SumitomoElectric  SPP5101SR-J3      850 nm
  13    10GBASE SR      MM    SumitomoElectric  SPP5101SR-J3      850 nm
  14    10GBASE SR      MM    SumitomoElectric  SPP5101SR-J3      850 nm
  15    10GBASE SR      MM    SumitomoElectric  SPP5101SR-J3      850 nm
  16    10GBASE SR      MM    SumitomoElectric  SPP5101SR-J3      850 nm
  17    10GBASE SR      MM    SumitomoElectric  SPP5101SR-J3      850 nm
  18    10GBASE SR      MM    SumitomoElectric  SPP5101SR-J3      850 nm
  19    10GBASE SR      MM    SumitomoElectric  SPP5101SR-J3      850 nm
  20    10GBASE SR      MM    SumitomoElectric  SPP5101SR-J3      850 nm
```

```
  21    10GBASE SR        MM    SumitomoElectric   SPP5101SR-J3      850 nm
  22    10GBASE SR        MM    SumitomoElectric   SPP5101SR-J3      850 nm
  23    10GBASE SR        MM    SumitomoElectric   SPP5101SR-J3      850 nm
  24    10GBASE SR        MM    SumitomoElectric   SPP5101SR-J3      850 nm
  25    10GBASE SR        MM    SumitomoElectric   SPP5101SR-J3      850 nm
  26    10GBASE SR        MM    SumitomoElectric   SPP5101SR-J3      850 nm
  27    10GBASE SR        MM    SumitomoElectric   SPP5101SR-J3      850 nm
  28    10GBASE SR        MM    SumitomoElectric   SPP5101SR-J3      850 nm
  29    10GBASE SR        MM    SumitomoElectric   SPP5101SR-J3      850 nm
  30    10GBASE SR        MM    SumitomoElectric   SPP5101SR-J3      850 nm
  31    10GBASE SR        MM    SumitomoElectric   SPP5101SR-J3      850 nm
  32    10GBASE SR        MM    SumitomoElectric   SPP5101SR-J3      850 nm
  33    10GBASE SR        MM    SumitomoElectric   SPP5101SR-J3      850 nm
  34    10GBASE SR        MM    SumitomoElectric   SPP5101SR-J3      850 nm
  35    10GBASE SR        MM    SumitomoElectric   SPP5101SR-J3      850 nm
  36    10GBASE SR        MM    SumitomoElectric   SPP5101SR-J3      850 nm
  37    10GBASE SR        MM    SumitomoElectric   SPP5101SR-J3      850 nm
  38    10GBASE SR        MM    SumitomoElectric   SPP5101SR-J3      850 nm
  39    10GBASE SR        MM    SumitomoElectric   SPP5101SR-J3      850 nm
  40    10GBASE SR        MM    SumitomoElectric   SPP5101SR-J3      850 nm
  41    10GBASE SR        MM    SumitomoElectric   SPP5101SR-J3      850 nm
  42    10GBASE SR        MM    SumitomoElectric   SPP5101SR-J3      850 nm
  43    10GBASE SR        MM    SumitomoElectric   SPP5101SR-J3      850 nm
  44    10GBASE SR        MM    SumitomoElectric   SPP5101SR-J3      850 nm
  45    10GBASE SR        MM    SumitomoElectric   SPP5101SR-J3      850 nm
  46    10GBASE SR        MM    SumitomoElectric   SPP5101SR-J3      850 nm
  47    10GBASE SR        MM    SumitomoElectric   SPP5101SR-J3      850 nm
```

show chassis pic fpc-slot 0 pic-slot 1 (ACX2000 Universal Access Router)

```
user@host> show chassis pic fpc-slot 0 pic-slot 1
FPC slot 0, PIC slot 1 information:
  Type                            8x 1GE(LAN) RJ45 Builtin
  State                           Online
  Uptime                         6 days, 2 hours, 51 minutes, 11 seconds
```

show chassis pic FPC-slot 1 PIC-slot 0 (MX Routers with Media Services Blade [MSB])

```
user@switch> show chassis pic fpc-slot 1 pic-slot 0
FPC slot 1, PIC slot 0 information:
```

```
  Type                              AS-MSC
  State                             Online
  PIC version                   1.6
  Uptime                            11 hours, 17 minutes, 56 seconds
```

show chassis pic FPC slot 1, PIC slot 2 (MX Routers with Media Services Blade [MSB])

```
user@switch> show chassis pic fpc-slot 1 pic-slot 2
Type                              AS-MXC
  State                             Online
  PIC version                   1.0
  Uptime                            11 hours, 18 minutes, 3 seconds
```

show chassis pic transport fpc-slot pic-slot (PTX Series Packet Transport Routers)

```
user@host> show chassis pic transport fpc-slot 2 pic-slot 0
Administrative State:      In Service
Operational    State:      Normal
```

show chassis pic transport fpc-slot pic-slot (MX960 Router with MPC3E and 100-Gigabit DWDM OTN MIC)

```
user@host> show chassis pic transport fpc-slot 3 pic-slot 0
Administrative State:      In Service
Operational    State:      Normal
```

show chassis pic fpc-slot 0 pic-slot 0 (ACX5096 Router)

```
user@host> show chassis pic fpc-slot 0 pic-slot 0
FPC slot 0, PIC slot 0 information:
  Type                              96x10G-8x40G
  State                             Online
  PIC version                   2.9
  Uptime                            21 hours, 28 minutes, 13 seconds
```

```
PIC port information:
                        Fiber                   Xcvr vendor       Wave-    Xcvr
  Port Cable type       type  Xcvr vendor       part number       length   Firmware
  0    10GBASE SR       MM    FINISAR CORP.     FTLX8571D3BCL-J1  850 nm   0.0
  1    10GBASE LR       SM    FINISAR CORP.     FTLX1471D3BCL-J1  1310 nm  0.0
  3    10GBASE SR       MM    FINISAR CORP.     FTLX8571D3BNL-J1  850 nm   0.0
  4    10GBASE SR       MM    SumitomoElectric  SPP5100SR-J3      850 nm   0.0
  5    10GBASE SR       MM    FINISAR CORP.     FTLX8571D3BNL-J1  850 nm   0.0
  6    10GBASE SR       MM    FINISAR CORP.     FTLX8571D3BNL-J1  850 nm   0.0
  7    10GBASE SR       MM    FINISAR CORP.     FTLX8571D3BNL-J1  850 nm   0.0
  8    10GBASE SR       MM    FINISAR CORP.     FTLX8571D3BNL-J1  850 nm   0.0
  9    10GBASE SR       MM    FINISAR CORP.     FTLX8571D3BNL-J1  850 nm   0.0
  10   10GBASE SR       MM    OPNEXT, INC.      TRS2001EN-0014    850 nm   0.0
  11   10GBASE SR       MM    SumitomoElectric  SPP5100SR-J3      850 nm   0.0
  12   10GBASE SR       MM    FINISAR CORP.     FTLX8571D3BNL-J1  850 nm   0.0
  13   10GBASE SR       MM    FINISAR CORP.     FTLX8571D3BCL-J1  850 nm   0.0
  14   10GBASE SR       MM    SumitomoElectric  SPP5100SR-J3      850 nm   0.0
  15   10GBASE SR       MM    FINISAR CORP.     FTLX8571D3BNL-J1  850 nm   0.0
  16   10GBASE SR       MM    FINISAR CORP.     FTLX8571D3BNL-J1  850 nm   0.0
  17   10GBASE SR       MM    FINISAR CORP.     FTLX8571D3BNL-J1  850 nm   0.0
  18   10GBASE SR       MM    FINISAR CORP.     FTLX8571D3BCL-J1  850 nm   0.0
  19   10GBASE LR       SM    FINISAR CORP.     FTLX1471D3BCL-J1  1310 nm  0.0
  20   10GBASE LR       SM    FINISAR CORP.     FTLX1471D3BNL-J1  1310 nm  0.0
  21   10GBASE SR       MM    SumitomoElectric  SPP5100SR-J3      850 nm   0.0
  22   10GBASE SR       MM    FINISAR CORP.     FTLX8571D3BNL-J1  850 nm   0.0
  23   10GBASE SR       MM    SumitomoElectric  SPP5100SR-J3      850 nm   0.0
  24   10GBASE SR       MM    FINISAR CORP.     FTLX8571D3BCL-J1  850 nm   0.0
  25   10GBASE USR      MM    FINISAR CORP.     FTLX8570D3BCL-J1  850 nm   0.0
  26   10GBASE SR       MM    FINISAR CORP.     FTLX8571D3BNL-J1  850 nm   0.0
  27   10GBASE SR       MM    FINISAR CORP.     FTLX8571D3BCL-J1  850 nm   0.0
  28   10GBASE SR       MM    FINISAR CORP.     FTLX8571D3BNL-J1  850 nm   0.0
  29   GIGE 1000SX      MM    FINISAR CORP.     FTLF8519P3BNL-J1  850 nm   0.0
  31   10GBASE SR       MM    FINISAR CORP.     FTLX8571D3BNL-J1  850 nm   0.0
  32   10GBASE SR       MM    SumitomoElectric  SPP5100SR-J3      850 nm   0.0
  33   10GBASE SR       MM    FINISAR CORP.     FTLX8571D3BCL-J1  850 nm   0.0
  34   10GBASE SR       MM    SumitomoElectric  SPP5100SR-J3      850 nm   0.0
  35   10GBASE USR      MM    FINISAR CORP.     FTLX8570D3BCL-J1  850 nm   0.0
  36   10GBASE USR      MM    FINISAR CORP.     FTLX8570D3BCL-J1  850 nm   0.0
  37   10GBASE SR       MM    FINISAR CORP.     FTLX8571D3BNL-J1  850 nm   0.0
  38   10GBASE SR       MM    FINISAR CORP.     FTLX8571D3BCL-J1  850 nm   0.0
  40   GIGE 1000LX10    SM    FINISAR CORP.     FTLF1318P2BTL-J1  1310 nm  0.0
  41   10GBASE LR       SM    OPNEXT,INC        TRS5021EN-S201    1310 nm  0.0
```

```
42   10GBASE LR        SM    FINISAR CORP.      FTLX1471D3BCL-J1  1310 nm  0.0
43   10GBASE LR        SM    SumitomoElectric   SPP5100LR-J3      1310 nm  0.0
44   10GBASE LR        SM    SumitomoElectric   SPP5100LR-J3      1310 nm  0.0
45   10GBASE LR        SM    FINISAR CORP.      FTLX1471D3BCL-J1  1310 nm  0.0
46   10GBASE LR        SM    FINISAR CORP.      FTLX1471D3BCL-J1  1310 nm  0.0
47   10GBASE SR        MM    FINISAR CORP.      FTLX8571D3BNL-J1  850 nm   0.0
48   10GBASE SR        MM    SumitomoElectric   SPP5100SR-J3      850 nm   0.0
49   10GBASE SR        MM    FINISAR CORP.      FTLX8571D3BNL-J1  850 nm   0.0
50   10GBASE SR        MM    FINISAR CORP.      FTLX8571D3BNL-J1  850 nm   0.0
51   10GBASE SR        MM    FINISAR CORP.      FTLX8571D3BCL-J1  850 nm   0.0
52   10GBASE SR        MM    FINISAR CORP.      FTLX8571D3BCL-J1  850 nm   0.0
53   10GBASE SR        MM    FINISAR CORP.      FTLX8571D3BCL-J1  850 nm   0.0
54   10GBASE SR        MM    FINISAR CORP.      FTLX8571D3BCL-J1  850 nm   0.0
55   10GBASE SR        MM    FINISAR CORP.      FTLX8571D3BCL-J1  850 nm   0.0
56   10GBASE SR        MM    FINISAR CORP.      FTLX8571D3BCL-J1  850 nm   0.0
57   10GBASE SR        MM    FINISAR CORP.      FTLX8571D3BCL-J1  850 nm   0.0
58   10GBASE SR        MM    FINISAR CORP.      FTLX8571D3BCL-J1  850 nm   0.0
59   10GBASE SR        MM    FINISAR CORP.      FTLX8571D3BCL-J1  850 nm   0.0
60   10GBASE SR        MM    FINISAR CORP.      FTLX8571D3BCL-J1  850 nm   0.0
61   10GBASE SR        MM    FINISAR CORP.      FTLX8571D3BCL-J1  850 nm   0.0
62   10GBASE SR        MM    FINISAR CORP.      FTLX8571D3BCL-J1  850 nm   0.0
63   10GBASE SR        MM    FINISAR CORP.      FTLX8571D3BCL-J1  850 nm   0.0
64   10GBASE SR        MM    FINISAR CORP.      FTLX8571D3BCL-J1  850 nm   0.0
65   10GBASE SR        MM    FINISAR CORP.      FTLX8571D3BCL-J1  850 nm   0.0
66   10GBASE SR        MM    SumitomoElectric   SPP5200SR-J6-M    850 nm   0.0
67   10GBASE SR        MM    FINISAR CORP.      FTLX8571D3BCL-J1  850 nm   0.0
68   10GBASE SR        MM    FINISAR CORP.      FTLX8571D3BCL-J1  850 nm   0.0
69   10GBASE SR        MM    FINISAR CORP.      FTLX8571D3BCL-J1  850 nm   0.0
70   10GBASE SR        MM    FINISAR CORP.      FTLX8571D3BCL-J1  850 nm   0.0
71   10GBASE LR        SM    FINISAR CORP.      FTLX1471D3BNL-J1  1310 nm  0.0
72   10GBASE LR        SM    FINISAR CORP.      FTLX1471D3BCL-J1  1310 nm  0.0
73   10GBASE SR        MM    FINISAR CORP.      FTLX8571D3BCL-J1  850 nm   0.0
74   10GBASE SR        MM    FINISAR CORP.      FTLX8571D3BCL-J1  850 nm   0.0
75   10GBASE SR        MM    FINISAR CORP.      FTLX8571D3BCL-J1  850 nm   0.0
76   10GBASE SR        MM    SumitomoElectric   SPP5100SR-J3      850 nm   0.0
77   10GBASE USR       MM    OPNEXT, INC.       TRS20A0EN-0014    850 nm   0.0
78   10GBASE USR       MM    OPNEXT, INC.       TRS20A0EN-0014    850 nm   0.0
79   10GBASE LRM       MM    OPNEXT INC         TRS5001EN-0014    1310 nm  0.0
80   10GBASE LRM       MM    OPNEXT INC         TRS5001EN-0014    1310 nm  0.0
81   10GBASE USR       MM    OPNEXT, INC.       TRS20A0EN-0014    850 nm   0.0
82   10GBASE USR       MM    OPNEXT, INC.       TRS20A0EN-0014    850 nm   0.0
83   10GBASE USR       MM    OPNEXT, INC.       TRS20A0EN-0014    850 nm   0.0
84   10GBASE USR       MM    OPNEXT, INC.       TRS20A0EN-0014    850 nm   0.0
```

```
  85   10GBASE LR        SM    OPNEXT,INC         TRS5021EN-S201    1310 nm  0.0
  86   10GBASE ER        SM    OPNEXT,INC         TRS7050EN-S201    1550 nm  0.0
  87   10GBASE LRM       MM    OPNEXT INC         TRS5001EN-0014    1310 nm  0.0
  88   10GBASE LRM       MM    OPNEXT INC         TRS5001EN-0014    1310 nm  0.0
  89   10GBASE LRM       MM    OPNEXT INC         TRS5001EN-0014    1310 nm  0.0
  90   10GBASE LRM       MM    OPNEXT INC         TRS5001EN-0014    1310 nm  0.0
  91   10GBASE USR       MM    FINISAR CORP.      FTLX8570D3BCL-J1  850 nm   0.0
  92   10GBASE USR       MM    FINISAR CORP.      FTLX8570D3BCL-J1  850 nm   0.0
  93   10GBASE LR        SM    SumitomoElectric   SPP5100LR-J3      1310 nm  0.0
  94   10GBASE LR        SM    FINISAR CORP.      FTLX1471D3BNL-J1  1310 nm  0.0
  95   10GBASE SR        MM    FINISAR CORP.      FTLX8571D3BNL-J1  850 nm   0.0
  96   40GBASE SR4       MM    AVAGO              AFBR-79E4Z-D-JU1  850 nm   0.0
  97   40GBASE SR4       MM    AVAGO              AFBR-79E4Z-D-JU1  850 nm   0.0
  98   40GBASE SR4       MM    AVAGO              AFBR-79EQDZ-JU1   850 nm   0.0
  99   40GBASE SR4       MM    AVAGO              AFBR-79EQDZ-JU1   850 nm   0.0
  100  40GBASE CU 1M     n/a   Molex Inc.         1110409055        n/a      0.0
  101  40GBASE CU 1M     n/a   Molex Inc.         1110409055        n/a      0.0
  102  40GBASE CU 1M     n/a   Molex Inc.         1110409055        n/a      0.0
  103  40GBASE CU 1M     n/a   Molex Inc.         1110409055        n/a      0.0
```

show chassis pic fpc-slot 0 pic-slot 0 (ACX5048 Router)

```
user@host> show chassis pic fpc-slot 0 pic-slot 0
FPC slot 0, PIC slot 0 information:
  Type                            96x10G-8x40G
  State                           Online
  PIC version                  2.9
  Uptime                         1 day, 5 hours, 27 minutes, 25 seconds

PIC port information:
                         Fiber                    Xcvr vendor       Wave-    Xcvr
  Port Cable type        type  Xcvr vendor        part number       length   Firmware
  0    10GBASE SR        MM    FINISAR CORP.      FTLX8571D3BCL-J1  850 nm   0.0
  10   GIGE 1000SX       MM    FINISAR CORP.      FTLF8519P3BNL-J1  850 nm   0.0
  14   10GBASE SR        MM    FINISAR CORP.      FTLX8571D3BNL-J1  850 nm   0.0
  20   10GBASE SR        MM    FINISAR CORP.      FTLX8571D3BCL-J1  850 nm   0.0
  30   GIGE 1000SX       MM    FINISAR CORP.      FTLF8519P2BNL-J1  850 nm   0.0
  41   10GBASE SR        MM    OPNEXT, INC.       TRS2001EN-0014    850 nm   0.0
  46   GIGE 1000SX       MM    FINISAR CORP.      FTLF8519P2BNL-J1  850 nm   0.0
  64   10GBASE SR        MM    FINISAR CORP.      FTLX8571D3BNL-J1  850 nm   0.0
```

```
  78   GIGE 1000SX       MM    AVAGO              AFBR-5715PZ-JU2   850 nm   0.0
  96   40GBASE SR4       MM    AVAGO              AFBR-79EQDZ-JU1   850 nm   0.0
  99   40GBASE SR4       MM    AVAGO              AFBR-79EQDZ-JU1   850 nm   0.0
  100  40GBASE SR4       MM    AVAGO              AFBR-79EQDZ-JU1   850 nm   0.0
```

show chassis pic fpc-slot 0 pic-slot 0 (ACX500 Router)

```
user@host> show chassis pic fpc-slot 0 pic-slot 0
FPC slot 0, PIC slot 0 information:
  Type                            2x 1GE(LAN) SFP Builtin
  State                           Online
  Uptime                         17 hours, 54 minutes, 45 seconds
```

show chassis pic fpc-slot 0 pic-slot 1 (ACX500 Router)

```
user@host> show chassis pic fpc-slot 0 pic-slot 1
FPC slot 0, PIC slot 1 information:
  Type                            4x 1GE(LAN) RJ45, SFP Builtin
  State                           Online
  Uptime                         17 hours, 54 minutes, 45 seconds
```

show chassis pic transport fpc-slot pic-slot (PTX Series Packet Transport Routers)

```
user@host> show chassis pic transport fpc-slot 2 pic-slot 0
Administrative State:      In Service
Operational    State:      Normal
```

show chassis pic transport fpc-slot pic-slot (MX960 Router with MPC3E and 100-Gigabit DWDM OTN MIC)

```
user@host> show chassis pic transport fpc-slot 3 pic-slot 0
Administrative State:      In Service
Operational    State:      Normal
```

show chassis pic fpc-slot 7 pic-slot 1 (MX960 Router MPC10E-15C-MRATE Line Card)

```
user@router> show chassis pic fpc-slot 7 pic-slot 1

FPC slot 7, PIC slot 1 information:
  Type                            MRATE-5xQSFPP
  State                           Online
  PIC version                  0.0
  Uptime                         3 hours, 33 minutes, 21 seconds

PIC port information:
                         Fiber                   Xcvr vendor       Wave-    Xcvr         JNPR
  Port Cable type        type  Xcvr vendor        part number       length   Firmware     Rev
  0    100GBASE LR4      SM    JUNIPER-FINISAR    FTLC1151RDPL-J3   1302 nm  0.0          REV 01

Port speed information:

  Port  PFE      Capable Port Speeds
  0      1       4x10GE, 40GE, 100GE
  1      1       4x10GE, 40GE, 100GE
  2      1       4x10GE, 40GE, 100GE
  3      1       4x10GE, 40GE, 100GE
  4      1       4x10GE, 40GE, 100GE
```

show chassis pic fpc-slot 0 pic-slot 1 (PTX10001-36MR) (400G ZR and 400G ZR-M optics)

```
user@router> show chassis pic fpc-slot 0 pic-slot 1
FPC slot 0, PIC slot 1 information:
  Type                            8X400GE-MR + 4X100GE-MR
  State                           Online
  PIC version               255.09
  Uptime                    2 hours, 37 minutes, 52 seconds

PIC port information:
                         Fiber                   Xcvr vendor       Wave-
Xcvr          JNPR     MSA
  Port Cable type        type  Xcvr vendor        part number       length
Firmware      Rev      Version
  0    40GBASE SR4       MM    FINISAR CORP       FTL410QE3C-J1     850 nm
0.0           REV 01
```

```
  1    40GBASE SR4       MM    AVAGO              AFBR-79EQPZ-JU1   850 nm
0.0           REV 01
  2    400G-ZR           SM    Acacia Comm Inc.   DP04QSDD-E20-00B  1528.77 nm - 1568.77 nm
161.20        XXXX
  4    100GBASE SR4 T2   MM    JUNIPER-AVAGO      AFBR-89CDDZ-JU1   850 nm
0.0           REV 01
  10   400G-ZR-M         SM    JUNIPER-1T1        740-131169        1528.77 nm - 1568.77 nm
61.20         REV 01

Port speed information:

  Port  PFE      Capable Port Speeds
  0      1       1x10G 4x10G 1x40G 4x25G 1x100G 2x50G 8x25G 8x50G 2x100G 1x200G 4x100G 2x200G
1x400G
  1      1       1x10G 4x10G 1x40G 4x25G 1x100G 2x50G 8x25G 8x50G 2x100G 1x200G 4x100G 2x200G
1x400G
  2      1       1x10G 4x10G 1x40G 4x25G 1x100G 2x50G 8x25G 8x50G 2x100G 1x200G 4x100G 2x200G
1x400G
  3      1       1x10G 4x10G 1x40G 4x25G 1x100G 2x50G 8x25G 8x50G 2x100G 1x200G 4x100G 2x200G
1x400G
  4      1       1x10G 4x10G 1x40G 4x25G 1x100G
  5      1       1x10G 1x100G
  6      1       1x10G 4x10G 1x40G 4x25G 1x100G
  7      1       1x10G 1x100G
  8      1       1x10G 4x10G 1x40G 4x25G 1x100G 2x50G 8x25G 8x50G 2x100G 1x200G 4x100G 2x200G
1x400G
  9      1       1x10G 4x10G 1x40G 4x25G 1x100G 2x50G 8x25G 8x50G 2x100G 1x200G 4x100G 2x200G
1x400G
  10     1       1x10G 4x10G 1x40G 4x25G 1x100G 2x50G 8x25G 8x50G 2x100G 1x200G 4x100G 2x200G
1x400G
  11     1       1x10G 4x10G 1x40G 4x25G 1x100G 2x50G 8x25G 8x50G 2x100G 1x200G 4x100G 2x200G
1x400G
```

show chassis pic fpc-slot 7 pic-slot 0 (ACX7509-FPC-20Y)

```
user@router> show chassis pic fpc-slot 7 pic-slot 0
FPC slot 7, PIC slot 0 information:
  Type                            20x1/10/25/50-SFP56
  State                           Online
  PIC version               255.09
  Uptime                         2 minutes, 16 seconds
```

```
PIC port information:
                          Fiber                    Xcvr vendor       Wave-
Xcvr          JNPR     MSA
  Port Cable type          type  Xcvr vendor        part number       length
Firmware      Rev      Version
  2    10GBASE SR          MM    AVAGO              AFBR-709ASMZ-JU3  850 nm
0.0           REV 01   SFF-8472 ver 10.2
  3    10GBASE SR          MM    AVAGO              AFBR-709ASMZ-JU3  850 nm
0.0           REV 01   SFF-8472 ver 10.2
  4    10GBASE SR          MM    OPNEXT, INC.       TRS2001EM-0014    850 nm
0.0           REV 01   SFF-8472 ver 10.2
  5    10GBASE SR          MM    FINISAR CORP.      FTLX8571D3BCL-J1  850 nm
0.0           REV 01   SFF-8472 ver 10.2
  6    SFP28-END 100G-4x25G DAC BO 1M n/a JUNIPER-AMPHENOL NDAQGF-J101 n/a
0.0           REV 01   SFF-8472 ver n/a
  7    SFP28-END 100G-4x25G DAC BO 1M n/a JUNIPER-AMPHENOL NDAQGF-J101 n/a
0.0           REV 01   SFF-8472 ver n/a
  8    SFP28-END 100G-4x25G DAC BO 1M n/a JUNIPER-AMPHENOL NDAQGF-J101 n/a
0.0           REV 01   SFF-8472 ver n/a
  9    SFP28-END 100G-4x25G DAC BO 1M n/a JUNIPER-AMPHENOL NDAQGF-J101 n/a
0.0           REV 01   SFF-8472 ver n/a
  10   GIGE 1000EX         n/a   SOURCEPHOTONICS    SPGBEXIDFCJNP     1310 nm
0.0           REV 01   SFF-8472 ver 9.5
  11   SFP28-25G-BASE-SR SM    JUNIPER-1A1        1A131A            850 nm
0.0           REV 01   SFF-8472 ver 12.3
  12   SFP28-25G-BASE-SR SM    JUNIPER-1A1        1A131A            850 nm
0.0           REV 01   SFF-8472 ver 12.3
  13   SFP28-25G-BASE-SR SM    JUNIPER-1A1        1A131A            850 nm
0.0           REV 01   SFF-8472 ver 12.3
  14   SFP28-25G-BASE-SR SM    JUNIPER-1A1        1A131A            850 nm
0.0           REV 01   SFF-8472 ver 12.3
  15   SFP28-25G-BASE-SR SM    JUNIPER-1A1        1A131A            850 nm
0.0           REV 01   SFF-8472 ver 12.3
  16   GIGE 1000SX         n/a   AVAGO              AFBR-5715PZ-JU3   850 nm
0.0           REV 01   SFF-8472 ver 9.3
  18   10GBASE CU 1M       n/a   Amphenol           584990001         n/a
0.0           REV 01   SFF-8472 ver n/a
  19   10GBASE CU 1M       n/a   Amphenol           584990001         n/a
0.0           REV 01   SFF-8472 ver n/a
Port speed information:
  Port  PFE      Capable Port Speeds
  0       1       1x1G 1x10G 1x25G
  1       1       1x1G 1x10G 1x25G
```

```
  2      1       1x1G 1x10G 1x25G
  3      1       1x1G 1x10G 1x25G
  4      1       1x1G 1x10G 1x25G
  5      1       1x1G 1x10G 1x25G
  6      1       1x1G 1x10G 1x25G
  7      1       1x1G 1x10G 1x25G
  8      1       1x1G 1x10G 1x25G
  9      1       1x1G 1x10G 1x25G
  10     1       1x1G 1x10G 1x25G
  11     1       1x1G 1x10G 1x25G
  12     1       1x1G 1x10G 1x25G
  13     1       1x1G 1x10G 1x25G
  14     1       1x1G 1x10G 1x25G
  15     1       1x1G 1x10G 1x25G
  16     1       1x1G 1x10G 1x25G
  17     1       1x1G 1x10G 1x25G
  18     1       1x1G 1x10G 1x25G
  19     1       1x1G 1x10G 1x25G
{master}
```

show chassis pic fpc-slot 0 pic-slot 0 (ACX7509-FPC-16C)

```
user@router> show chassis pic fpc-slot 0 pic-slot 0
Port speed information:
  Port  PFE      Capable Port Speeds
  0      0      1x40G 1x100G 4x25G 4x10G
  1      0      1x40G 1x100G 4x25G 4x10G
  4      0      1x40G 1x100G 4x25G 4x10G
  5      0      1x40G 1x100G 4x25G 4X10G
  8      0      1x40G 1x100G 4x25G 4x10G
  9      0      1x40G 1x100G 4x25G 4x10G
 12      0      1x40G 1x100G 4x25G 4x10G
 13      0      1x40G 1x100G 4x25G 4x10G
```

show chassis pic fpc-slot 0 pic-slot 0 (ACX7509-FPC-4CD)

```
user@router> show chassis pic fpc-slot 0 pic-slot 0
Port speed information:
  Port  PFE      Capable Port Speeds
  0      1       1x400G 4x100G 8x50G
```

```
1       1       1x400G 4x100G 8x50G
2       1       1x400G 4x100G 8x50G
3       1       1x400G 4x100G 8x50G
```

Release Information

Command introduced before Junos OS Release 7.4.

`transport` option introduced in Junos OS Release 16.1R1 for MX Series Routers.

RELATED DOCUMENTATION

request chassis pic

show chassis hardware

100-Gigabit Ethernet Type 4 PIC with CFP Overview

show chassis power

IN THIS SECTION

- Syntax | **1504**
- Syntax (MX Series Router) | **1504**
- Syntax (MX320, MX2010, MX2020, MX10003, MX2008, PTX Series, ACX7024, and SRX5400 routers; EX9200 and EX9253 Switches) | **1504**
- Syntax (MX10008 Universal Routing Platforms) | **1504**
- Description | **1505**
- Options | **1506**
- Required Privilege Level | **1506**
- Output Fields | **1507**
- Sample Output | **1512**
- show chassis power (SRX5800) | **1543**

- Release Information | **1544**

Syntax

```
show chassis power
```

Syntax (MX Series Router)

```
show chassis power
<all-members>
<local>
<member member-id>
<detail>
```

Syntax (MX320, MX2010, MX2020, MX10003, MX2008, PTX Series, ACX7024, and SRX5400 routers; EX9200 and EX9253 Switches)

```
show chassis power
<detail>
```

Syntax (MX10008 Universal Routing Platforms)

```
show chassis power
<detail>
<sequence>
```

Description

(EX9200 switches, MX Series 5G Universal Routing Platforms and PTX Series Packet Transport Routers only) Display power limits and usage information for the AC or DC power sources.

- On EX9200 switches, MX Series, ACX7024, and SRX5800 5G Universal Routing Platforms, power is supplied by Power Entry Modules (PEMs).

  NOTE: The new high-capacity (4100 W) enhanced DC PEM on MX960 routers includes a new design that can condition the input voltage. This results in the output voltage differing from the input voltage. The earlier generation of DC PEMs coupled the input power directly to the output, thereby making it safe to assume that the output voltage was equal to the input voltage.

- On the MX2020 Universal Routing Platforms, the power system consists of three components: the power supply modules (PSMs), the power distribution module (PDM), and the power midplane. The power feed is connected to the PDM. The PDM delivers power to the power midplane. The power midplane supplies power to the PSMs. The MX2020 router chassis provides 3+3 (2500W/80A) or 4+4 (2100W/60A) PSM redundancy for the critical FRUs with two power zones.

- On the MX2010 and MX2008 Universal Routing Platforms, the power system consists of three components: the power supply modules (PSMs), the power distribution module (PDM), and the power midplane. The power feed is connected to the PDM. The PDM delivers power to the power midplane. The power midplane supplies power to the PSMs. Unlike the MX2020 router chassis, the MX2010 and MX2008 router chassis does not provide redundancy for the critical FRUs because there is only one power zone.

  Starting from Junos OS Release 17.3, MX10003 routers support DC (1100W), AC High (1600W), and AC Low (800W) power supply units.

- Starting from Junos OS Release 21.4R1, SRX5800 power system consists of high-capacity second-generation AC power supply module (PSM). This single or dual PSM provides a maximum output power of 5100 W. In the single-feed mode, the PSM provides power at a reduced capacity (2550 W). In dualfeed mode, the PSM provides power at full capacity (5100W). The PSM supports 1+1 redundancy.

- Starting from Junos OS Evolved Release 22.3R1, ACX7024 supports single PSM mode and PSM 1+1 redundancy.

- On the PTX Series Packet Transport Routers, power is supplied by power supply modules (PSMs). On PTX5000 routers, the power feeds connect to the power distribution units (PDUs).

- Starting with Junos OS Release 14.1, the `show chassis power <detail>` operational mode command output displays power usage information for the new DC power supply module (PSM) and power distribution unit (PDU) that are added to provide power to the high-density FPC (FPC2-PTX-P1A) and other components in a PTX5000 Packet Transport Router. The output also displays power usage information for each PIC that is connected to the router. This command also displays power usage information for MX Series routers that have a MPC5EQ MPC installed.
- Starting in Junos OS Release 18.4R1, on MX240 routers and EX9204 switches, the enhanced AC PEM in high-line power configuration supplies a power output of 2400 W. On Junos OS versions prior to 18.4R1, this PEM supplied only 2050 W of power.
- Starting in Junos OS release 21.4R1, on SRX5400 routers the AC redundancy mode for high capacity high line PEMs is increased from 1+1 to 2+2 with a capacity of 4100W from earlier 2050W.

NOTE: The MX204 routers do not support the `show chassis power` command.

Options

none	Display basic power usage information for the AC and DC power sources.
all-members	(MX Series routers only) (Optional) Display power usage information for all members of the Virtual Chassis configuration.
detail	(Optional) Include power usage for specific FRUs.
local	(MX Series routers only) (Optional) Display power usage information for the local Virtual Chassis member.
member *member-id*	(MX Series routers only) (Optional) Display power usage information for the specified member of the Virtual Chassis configuration. For an MX Series Virtual Chassis, replace *member-id* with a value of 0 or 1.

Required Privilege Level

view

Output Fields

Table 90 on page 1508 lists the output fields for the `show chassis power` command. Output fields are listed in the approximate order in which they appear.

Table 90: show chassis power Output Fields:

Field Name	Field Description	Level of Output

PEM *number*	(EX9200 switches, SRX5800 and MX Series routers only) AC or DC PEM number on the chassis. The following output fields are displayed for the PEM:
	• State—State of the PEM:
	  • Online—PEM is present in the slot and online.
	  • Empty—PEM is not present in the slot.
	  • Present—PEM is present in the slot, but not online.
	• *AC/DC* Input—OK or Check—State of the AC or DC input power feed with the number of active and expected feeds (one or two).
	For a DC input power feed, this output field also displays the reference voltage input with maximum input voltage displayed in mV (in parentheses) for the AC or DC PEM.
	• Capacity—Actual power input capacity with maximum capacity displayed (in parentheses) in watts.
	NOTE: The maximum actual power capacity for AC and DC PEMs is:
	  • MX960 AC PEM—4100 W if two feeds are connected. 1700 W if one feed is connected.
	  • MX960 DC PEM—4100 W if two feeds are connected. 1700 W if one feed is connected.
	  • MX480 AC PEM—2520 W if it is high-line. 1450 W if it is low-line.
	  • MX480 DC PEM—2240 W if the DIP switch is off. 2440 W if the DIP switch is on.
	  • MX240 AC PEM—2240 W if it is high-line. 2440 W if it is low-line.
	  • MX240 DC PEM—2240 W if the DIP switch is off. 2440 W if the DIP switch is on.
	  • EX9204 AC PEM—2050 W if it is high-line. 1167 W if it is low-line.
		All levels

Table 90: show chassis power Output Fields: *(Continued)*

Field Name	Field Description	Level of Output
	• EX9204 DC PEM—2400 W if the DIP switch is off. 2600 W if the DIP switch is on. • EX9208 AC PEM—2050 W if it is high-line. 1167 W if it is low-line. • EX9208 DC PEM—2400 W if the DIP switch is off. 2600 W if the DIP switch is on. • EX9214 AC PEM—4100 W if two feeds are connected. 1700 W if one feed is connected. • EX9214 DC PEM—4100 W if two feeds are connected. 1700 W if one feed is connected. • `DC Output`—DC power output in Watts for the specified zone, at the specified amps and voltage (*A* @ *V*), and load and percentage utilization of the maximum capacity) for the zone.	

Table 90: show chassis power Output Fields: *(Continued)*

Field Name	Field Description	Level of Output

`System`	(EX9200 switches, MX Series, MX2020 routers, MX2010 routers, and MX2008 routers only) Overall power statistics for the system zone.
	
	The following output fields are displayed for MX Series routers:
	
	• Zone *number*:
	  • `Capacity`—Maximum power capacity applicable for the zone, in watts.
	  • `Allocated power`—Actual capacity allocated for the zone, in watts, with remaining power displayed in parentheses.
	  • `Actual usage`—Actual power usage for the zone, in watts.
	• `Total system capacity`—Cumulative power capacity of all the zones, in watts.
	• `Total remaining capacity`—Difference between the `Total system capacity` and cumulative `Allocated power` of all the zones, in watts.
	
	The following output fields are displayed for MX2010, MX2020, and MX2008 routers:
	
	• `Capacity`—Maximum power capacity applicable for the zone, in watts.
	• `Allocated power`—Actual capacity allocated for the zone, in watts, with remaining power displayed in parentheses.
	• `Actual usage`—Actual power usage for the zone, in watts.
	
	NOTE: For MX2020 routers, there are two power subsystems (Lower Zone and Upper Zone) and the listed output fields are displayed for each zone.
		All levels

`Total Power`	(PTX Series only) Total power used by the switch (displayed in watts).	All levels
`PDU` *number*	(PTX5000 only) ID number of the power distribution unit (PDU) on the chassis.	All levels

Table 90: show chassis power Output Fields: *(Continued)*

Field Name	Field Description	Level of Output

`PSM` *number*	(PTX Series, MX2020 routers, MX2010 routers, and MX2008 routers only) ID number of the power supply module..
	
	(PTX Series) The following output fields are displayed for each PSM:
	
	• `Input (V)`—Voltage supplied to the PSM.
	
	• `Used (W)`—Actual power usage for the PSM (measured in watts).
	
	NOTE: Starting with Junos OS Release 14.1, no output is displayed for `Input (v)` and `Used (W)` fields for missing PSMs; unlike in earlier releases where 0 was displayed for missing PSMs.
	
	(MX2010, MX2020, and MX2008 routers) The following output fields are displayed for each PSM:
	
	• `State`—State of the PSM:
	
	  • `Online`—PSM is present in the slot and online.
	
	  • `Empty`—PSM is not present in the slot.
	
	  • `Present`—PSM is present in the slot but not online.
	
	• `DC Input`—State of the DC input power feed with the number of active or expected feeds (in parantheses).
	
	• `Capacity`—Actual power input capacity and maximum capacity (in parantheses) displayed in watts.
	
	  NOTE: The maximum capacity for AC and DC PSMs is:
	
	  • MX2010/MX2020/MX2008 AC PSM—2500 W.
	
	  • MX2010/MX2020/MX2008 DC PSM—2100 W if the DIP switch is at 60A settings. 2500 W if the DIP switch is at 80A settings.
	
	• `DC Output`—DC power output in watts for the specified zone at the specified amperes and voltage (A at V), and load and percentage utilization of the maximum capacity for the zone.
		All levels

Table 90: show chassis power Output Fields: *(Continued)*

Field Name	Field Description	Level of Output
Item	Actual power usage (measured in watts) for the following FRUs: • Fan Tray *n*—Power usage for the specified fan tray. • RE*n*/CB*n*—Power usage for the specified Routing Engines and Control Boards • SIB/CCG/FPD—Power usage for the Switch Interface Board, Centralized Clock Generator (PTX5000 only), and Front Panel Display (craft interface). • FPC *n*—Power usage for the FPC in the slot specified. **NOTE**: MX Series routers must have a MPC5EQ MPC installed to view FRU power usage with the detail command.	detail

Sample Output

show chassis power (MX960 Router with DC PEM)

```
user@host> show chassis power
PEM 0:
  State:     Online
  DC input:  OK (2 feed expected, 2 feed connected)
  DC input:  48.0 V input (57000 mV)
  Capacity:  4100 W (maximum 4100 W)
  DC output: 513 W (zone 0, 9 A at 57 V, 12% of capacity)

PEM 1:
  State:     Online
  DC input:  OK (2 feed expected, 2 feed connected)
  DC input:  48.0 V input (57000 mV)
  Capacity:  4100 W (maximum 4100 W)
  DC output: 228 W (zone 1, 4 A at 57 V, 5% of capacity)

PEM 2:
  State:     Online
```

```
  DC input:  OK (2 feed expected, 2 feed connected)
  DC input:  48.0 V input (57000 mV)
  Capacity:  4100 W (maximum 4100 W)
  DC output: 513 W (zone 0, 9 A at 57 V, 12% of capacity)

PEM 3:
  State:     Online
  DC input:  OK (2 feed expected, 2 feed connected)
  DC input:  48.0 V input (57000 mV)
  Capacity:  4100 W (maximum 4100 W)
  DC output: 342 W (zone 1, 6 A at 57 V, 8% of capacity)

System:
  Zone 0:
      Capacity:          4100 W (maximum 4100 W)
      Allocated power:   1680 W (2420 W remaining)
      Actual usage:      1026 W
  Zone 1:
      Capacity:          4100 W (maximum 4100 W)
      Allocated power:   1263 W (2837 W remaining)
      Actual usage:      570 W
  Total system capacity: 8200 W (maximum 8200 W)
  Total remaining power: 5257 W
```

show chassis power (MX960 Router with AC PEM)

```
user@host> show chassis power
PEM 0:
  State:     Online
  AC input:  OK (2 feed expected, 2 feed connected)
  Capacity:  4100 W (maximum 4100 W)
  DC output: 0 W (zone 0, 0 A at 56 V, 0% of capacity)

PEM 1:
  State:     Present
  AC input:  Check (2 feed expected, 1 feed connected)
  Capacity:  1700 W (maximum 4100 W)

PEM 2:
  State:     Empty
  Input:     Absent
```

```
PEM 3:
  State:     Online
  AC input:  OK (1 feed expected, 1 feed connected)
  Capacity:  1700 W (maximum 1700 W)

System:
  Zone 0:
      Capacity:          4100 W (maximum 4100 W)
      Allocated power:   540 W (3560 W remaining)
      Actual usage:      0 W
  Zone 1:
      Capacity:          0 W (maximum 0 W)
      Allocated power:   0 W (0 W remaining)
      Actual usage:      0 W
  Total system capacity: 4100 W (maximum 4100 W)
  Total remaining power: 3560 W
```

show chassis power detail (MX960 Router with MPC5EQ)

```
user@host> show chassis power detail
PEM 0:
  State:     Online
  DC input:  OK (2 feed expected, 2 feed connected)
  DC input:  48.0 V input (57500 mV)
  Capacity:  4100 W (maximum 4100 W)
  DC output: 798 W (zone 0, 14 A at 57 V, 19% of capacity)

PEM 1:
  State:     Online
  DC input:  OK (2 feed expected, 2 feed connected)
  DC input:  48.0 V input (57500 mV)
  Capacity:  4100 W (maximum 4100 W)
  DC output: 1311 W (zone 1, 23 A at 57 V, 31% of capacity)

PEM 2:
  State:     Online
  DC input:  OK (2 feed expected, 2 feed connected)
  DC input:  48.0 V input (57500 mV)
  Capacity:  4100 W (maximum 4100 W)
  DC output: 855 W (zone 0, 15 A at 57 V, 20% of capacity)
```

```
PEM 3:
  State:     Online
  DC input:  OK (2 feed expected, 2 feed connected)
  DC input:  48.0 V input (57500 mV)
  Capacity:  4100 W (maximum 4100 W)
  DC output: 912 W (zone 1, 16 A at 57 V, 22% of capacity)

System:
  Zone 0:
      Capacity:          4100 W (maximum 4100 W)
      Allocated power:   2497 W (1603 W remaining)
      Actual usage:      1653 W
  Zone 1:
      Capacity:          4100 W (maximum 4100 W)
      Allocated power:   3336 W (764 W remaining)
      Actual usage:      2223 W
  Total system capacity: 8200 W (maximum 8200 W)
  Total remaining power: 2367 W

Item                 Used(W)
  FPC 0                 255
  FPC 10                341
```

show chassis power (MX480 Router with AC PEM)

```
user@host> show chassis power
PEM 0:
  State:     Online
  AC input:  OK (1 feed expected, 1 feed connected)
  Capacity:  2520 W (maximum 2520 W)
  DC output: 472 W (zone 0, 8 A at 59 V, 18% of capacity)

PEM 1:
  State:     Online
  AC input:  OK (1 feed expected, 1 feed connected)
  Capacity:  2520 W (maximum 2520 W)
  DC output: 472 W (zone 0, 8 A at 59 V, 18% of capacity)

PEM 2:
  State:     Online
```

```
  AC input:  OK (1 feed expected, 1 feed connected)
  Capacity:  2520 W (maximum 2520 W)
  DC output: 118 W (zone 0, 2 A at 59 V, 4% of capacity)

PEM 3:
  State:     Empty
  Input:     Absent

System:
  Maximum capacity:   5040 W
  Allocated capacity: 1675 W (33% of maximum)
  Remaining capacity: 3365 W
  Actual usage:       1062 W
```

show chassis power (MX2020 Router)

```
user@host > show chassis power
PSM 0:
  State:     Online
  DC input:  OK (INP0 feed expected, INP0 feed connected)
  Capacity:  2500 W (maximum 2500 W)
  DC output: 858.44 W (Lower Zone, 16.75 A at 51.25 V, 34.34% of capacity)

PSM 1:
  State:     Online
  DC input:  OK (INP0 feed expected, INP0 feed connected)
  Capacity:  2500 W (maximum 2500 W)
  DC output: 854.25 W (Lower Zone, 16.75 A at 51.00 V, 34.17% of capacity)

PSM 2:
  State:     Online
  DC input:  OK (INP0 feed expected, INP0 feed connected)
  Capacity:  2500 W (maximum 2500 W)
  DC output: 858.44 W (Lower Zone, 16.75 A at 51.25 V, 34.34% of capacity)

PSM 3:
  State:     Online
  DC input:  OK (INP0 feed expected, INP0 feed connected)
  Capacity:  2500 W (maximum 2500 W)
  DC output: 867.00 W (Lower Zone, 17.00 A at 51.00 V, 34.68% of capacity)
```

```
PSM 4:
  State:     Online
  DC input:  OK (INP0 feed expected, INP0 feed connected)
  Capacity:  2500 W (maximum 2500 W)
  DC output: 871.25 W (Lower Zone, 17.00 A at 51.25 V, 34.85% of capacity)

PSM 5:
  State:     Empty
  Input:     Absent

PSM 6:
  State:     Empty
  Input:     Absent

PSM 7:
  State:     Online
  DC input:  OK (INP0 feed expected, INP0 feed connected)
  Capacity:  2500 W (maximum 2500 W)
  DC output: 867.00 W (Lower Zone, 17.00 A at 51.00 V, 34.68% of capacity)

PSM 8:
  State:     Online
  DC input:  OK (INP0 feed expected, INP0 feed connected)
  Capacity:  2500 W (maximum 2500 W)
  DC output: 879.75 W (Lower Zone, 17.25 A at 51.00 V, 35.19% of capacity)

PSM 9:
  State:     Online
  DC input:  OK (INP0 feed expected, INP0 feed connected)
  Capacity:  2100 W (maximum 2500 W)
  DC output: 624.75 W (Upper Zone, 12.25 A at 51.00 V, 29.75% of capacity)

PSM 10:
  State:     Online
  DC input:  OK (INP0 feed expected, INP0 feed connected)
  Capacity:  2100 W (maximum 2500 W)
  DC output: 615.00 W (Upper Zone, 12.00 A at 51.25 V, 29.29% of capacity)

PSM 11:
  State:     Online
  DC input:  OK (INP0 feed expected, INP0 feed connected)
  Capacity:  2100 W (maximum 2500 W)
  DC output: 624.75 W (Upper Zone, 12.25 A at 51.00 V, 29.75% of capacity)
```

```
PSM 12:
  State:     Online
  DC input:  OK (INP0 feed expected, INP0 feed connected)
  Capacity:  2100 W (maximum 2500 W)
  DC output: 624.75 W (Upper Zone, 12.25 A at 51.00 V, 29.75% of capacity)

PSM 13:
  State:     Online
  DC input:  OK (INP0 feed expected, INP0 feed connected)
  Capacity:  2100 W (maximum 2500 W)
  DC output: 612.00 W (Upper Zone, 12.00 A at 51.00 V, 29.14% of capacity)

PSM 14:
  State:     Online
  DC input:  OK (INP0 feed expected, INP0 feed connected)
  Capacity:  2100 W (maximum 2500 W)
  DC output: 627.81 W (Upper Zone, 12.25 A at 51.25 V, 29.90% of capacity)

PSM 15:
  State:     Online
  DC input:  OK (INP0 feed expected, INP0 feed connected)
  Capacity:  2100 W (maximum 2500 W)
  DC output: 627.81 W (Upper Zone, 12.25 A at 51.25 V, 29.90% of capacity)

PSM 16:
  State:     Online
  DC input:  OK (INP0 feed expected, INP0 feed connected)
  Capacity:  2100 W (maximum 2500 W)
  DC output: 615.00 W (Upper Zone, 12.00 A at 51.25 V, 29.29% of capacity)

PSM 17:
  State:     Online
  DC input:  OK (INP0 feed expected, INP0 feed connected)
  Capacity:  2100 W (maximum 2500 W)
  DC output: 624.75 W (Upper Zone, 12.25 A at 51.00 V, 29.75% of capacity)

System:
  Upper Zone:
      Capacity:          18900 W (maximum 22500 W)
      Allocated power:   12900 W (6000 W remaining)
      Actual usage:      5596.62 W
  Lower Zone:
```

```
      Capacity:          17500 W (maximum 17500 W)
      Allocated power:   12900 W (4600 W remaining)
      Actual usage:      6056.12 W
  Total system capacity: 36400 W (maximum 40000 W)
  Total remaining power: 10600 W
```

show chassis power detail (MX2020 Router with MPC5EQ and MPC6E)

```
user@host> show chassis power detail
PSM 0:
  State:     Online
  DC input:  OK (INP0 feed expected, INP0 feed connected)
  Capacity:  2100 W (maximum 2500 W)
  DC output: 540.75 W (Lower Zone, 10.50 A at 51.50 V, 25.75% of capacity)

PSM 1:
  State:     Online
  DC input:  OK (INP0 feed expected, INP0 feed connected)
  Capacity:  2100 W (maximum 2500 W)
  DC output: 538.12 W (Lower Zone, 10.50 A at 51.25 V, 25.62% of capacity)

PSM 2:
  State:     Online
  DC input:  OK (INP0 feed expected, INP0 feed connected)
  Capacity:  2100 W (maximum 2500 W)
  DC output: 538.12 W (Lower Zone, 10.50 A at 51.25 V, 25.62% of capacity)

PSM 3:
  State:     Online
  DC input:  OK (INP0 feed expected, INP0 feed connected)
  Capacity:  2100 W (maximum 2500 W)
  DC output: 540.75 W (Lower Zone, 10.50 A at 51.50 V, 25.75% of capacity)

PSM 4:
  State:     Online
  DC input:  OK (INP0 feed expected, INP0 feed connected)
  Capacity:  2100 W (maximum 2500 W)
  DC output: 515.00 W (Lower Zone, 10.00 A at 51.50 V, 24.52% of capacity)

PSM 5:
  State:     Online
```

```
  DC input:  OK (INP0 feed expected, INP0 feed connected)
  Capacity:  2100 W (maximum 2500 W)
  DC output: 527.88 W (Lower Zone, 10.25 A at 51.50 V, 25.14% of capacity)

PSM 6:
  State:     Online
  DC input:  OK (INP0 feed expected, INP0 feed connected)
  Capacity:  2100 W (maximum 2500 W)
  DC output: 540.75 W (Lower Zone, 10.50 A at 51.50 V, 25.75% of capacity)

PSM 7:
  State:     Online
  DC input:  OK (INP0 feed expected, INP0 feed connected)
  Capacity:  2100 W (maximum 2500 W)
  DC output: 527.88 W (Lower Zone, 10.25 A at 51.50 V, 25.14% of capacity)

PSM 8:
  State:     Online
  DC input:  OK (INP0 feed expected, INP0 feed connected)
  Capacity:  2100 W (maximum 2500 W)
  DC output: 530.44 W (Lower Zone, 10.25 A at 51.75 V, 25.26% of capacity)

PSM 9:
  State:     Empty
  Input:     Absent

PSM 10:
  State:     Empty
  Input:     Absent

PSM 11:
  State:     Empty
  Input:     Absent

PSM 12:
  State:     Online
  DC input:  OK (INP0 feed expected, INP0 feed connected)
  Capacity:  2100 W (maximum 2500 W)
  DC output: 517.50 W (Upper Zone, 10.00 A at 51.75 V, 24.64% of capacity)

PSM 13:
  State:     Online
  DC input:  OK (INP0 feed expected, INP0 feed connected)
```

```
  Capacity:  2100 W (maximum 2500 W)
  DC output: 517.50 W (Upper Zone, 10.00 A at 51.75 V, 24.64% of capacity)

PSM 14:
  State:     Online
  DC input:  OK (INP0 feed expected, INP0 feed connected)
  Capacity:  2100 W (maximum 2500 W)
  DC output: 515.00 W (Upper Zone, 10.00 A at 51.50 V, 24.52% of capacity)

PSM 15:
  State:     Online
  DC input:  OK (INP0 feed expected, INP0 feed connected)
  Capacity:  2100 W (maximum 2500 W)
  DC output: 527.88 W (Upper Zone, 10.25 A at 51.50 V, 25.14% of capacity)

PSM 16:
  State:     Online
  DC input:  OK (INP0 feed expected, INP0 feed connected)
  Capacity:  2100 W (maximum 2500 W)
  DC output: 517.50 W (Upper Zone, 10.00 A at 51.75 V, 24.64% of capacity)

PSM 17:
  State:     Online
  DC input:  OK (INP0 feed expected, INP0 feed connected)
  Capacity:  2100 W (maximum 2500 W)
  DC output: 515.00 W (Upper Zone, 10.00 A at 51.50 V, 24.52% of capacity)

System:
  Upper Zone:
      Capacity:          12600 W (maximum 15000 W)
      Allocated power:   9436 W (3164 W remaining)
      Actual usage:      3110.38 W
  Lower Zone:
      Capacity:          18900 W (maximum 22500 W)
      Allocated power:   10842 W (8058 W remaining)
Actual usage:      4799.69 W
  Total system capacity: 31500 W (maximum 37500 W)
  Total remaining power: 11222 W

Item                 Used(W)
  FPC 0                   0
  FPC 4                   0
  FPC 9                 719
```

```
  FPC 10                681
  FPC 17                656
  FPC 18                  0
  FPC 19                  0
```

show chassis power (MX2020 Router with 240-V high-voltage DC PSMs and PDMs)

```
user@host> show chassis power

PSM 0:
  State:     Online
  DC input:  OK (INP1 feed expected, INP1 feed connected)
  Capacity:  2500 W (maximum 2500 W)
  DC output: 197.81 W (Lower Zone, 3.75 A at 52.75 V, 7.91% of capacity)

PSM 1:
  State:     Online
  DC input:  OK (INP1 feed expected, INP1 feed connected)
  Capacity:  2500 W (maximum 2500 W)
  DC output: 171.44 W (Lower Zone, 3.25 A at 52.75 V, 6.86% of capacity)

PSM 2:
  State:     Online
  DC input:  OK (INP1 feed expected, INP1 feed connected)
  Capacity:  2500 W (maximum 2500 W)
  DC output: 184.62 W (Lower Zone, 3.50 A at 52.75 V, 7.38% of capacity)

PSM 3:
  State:     Online
  DC input:  OK (INP1 feed expected, INP1 feed connected)
  Capacity:  2500 W (maximum 2500 W)
  DC output: 184.62 W (Lower Zone, 3.50 A at 52.75 V, 7.38% of capacity)

PSM 4:
  State:     Online
  DC input:  OK (INP1 feed expected, INP1 feed connected)
  Capacity:  2500 W (maximum 2500 W)
  DC output: 183.75 W (Lower Zone, 3.50 A at 52.50 V, 7.35% of capacity)

PSM 5:
```

```
  State:     Online
  DC input:  OK (INP1 feed expected, INP1 feed connected)
  Capacity:  2500 W (maximum 2500 W)
  DC output: 196.88 W (Lower Zone, 3.75 A at 52.50 V, 7.88% of capacity)

PSM 6:
  State:     Online
  DC input:  OK (INP1 feed expected, INP1 feed connected)
  Capacity:  2500 W (maximum 2500 W)
  DC output: 183.75 W (Lower Zone, 3.50 A at 52.50 V, 7.35% of capacity)

PSM 7:
  State:     Online
  DC input:  OK (INP1 feed expected, INP1 feed connected)
  Capacity:  2500 W (maximum 2500 W)
  DC output: 196.88 W (Lower Zone, 3.75 A at 52.50 V, 7.88% of capacity)

PSM 8:
  State:     Online
  DC input:  OK (INP1 feed expected, INP1 feed connected)
  Capacity:  2500 W (maximum 2500 W)
  DC output: 196.88 W (Lower Zone, 3.75 A at 52.50 V, 7.88% of capacity)

PSM 9:
  State:     Online
  DC input:  OK (INP0 feed expected, INP0 feed connected)
  Capacity:  2500 W (maximum 2500 W)
  DC output: 144.38 W (Upper Zone, 2.75 A at 52.50 V, 5.78% of capacity)

PSM 10:
  State:     Online
  DC input:  OK (INP0 feed expected, INP0 feed connected)
  Capacity:  2500 W (maximum 2500 W)
  DC output: 145.06 W (Upper Zone, 2.75 A at 52.75 V, 5.80% of capacity)

PSM 11:
  State:     Online
  DC input:  OK (INP0 feed expected, INP0 feed connected)
  Capacity:  2500 W (maximum 2500 W)
  DC output: 131.88 W (Upper Zone, 2.50 A at 52.75 V, 5.28% of capacity)

PSM 12:
  State:     Online
```

```
  DC input:  OK (INP0 feed expected, INP0 feed connected)
  Capacity:  2500 W (maximum 2500 W)
  DC output: 143.69 W (Upper Zone, 2.75 A at 52.25 V, 5.75% of capacity)

PSM 13:
  State:     Online
  DC input:  OK (INP0 feed expected, INP0 feed connected)
  Capacity:  2500 W (maximum 2500 W)
  DC output: 143.69 W (Upper Zone, 2.75 A at 52.25 V, 5.75% of capacity)

PSM 14:
  State:     Online
  DC input:  OK (INP0 feed expected, INP0 feed connected)
  Capacity:  2500 W (maximum 2500 W)
  DC output: 145.06 W (Upper Zone, 2.75 A at 52.75 V, 5.80% of capacity)

PSM 15:
  State:     Online
  DC input:  OK (INP0 feed expected, INP0 feed connected)
  Capacity:  2500 W (maximum 2500 W)
  DC output: 144.38 W (Upper Zone, 2.75 A at 52.50 V, 5.78% of capacity)

PSM 16:
  State:     Online
  DC input:  OK (INP0 feed expected, INP0 feed connected)
  Capacity:  2500 W (maximum 2500 W)
  DC output: 130.62 W (Upper Zone, 2.50 A at 52.25 V, 5.22% of capacity)

PSM 17:
  State:     Online
  DC input:  OK (INP0 feed expected, INP0 feed connected)
  Capacity:  2500 W (maximum 2500 W)
  DC output: 157.50 W (Upper Zone, 3.00 A at 52.50 V, 6.30% of capacity)

System:
  Upper Zone:
      Capacity:          22500 W (maximum 22500 W)
      Allocated power:   6757 W (15743 W remaining)
      Actual usage:      1286.25 W
  Lower Zone:
      Capacity:          22500 W (maximum 22500 W)
      Allocated power:   7240 W (15260 W remaining)
      Actual usage:      1696.62 W
```

```
  Total system capacity: 45000 W (maximum 45000 W)
  Total remaining power: 31003 W
```

show chassis power (MX10008)

```
user@host> show chassis power
PEM 0:
  State:     Online
  Capacity:  2700 W (maximum 2700 W)
  AC input:  OK (Both feed expected, Both feed connected)
  DC output: 1248 W (zone 0, 104 A at 12 V, 46% of capacity)

PEM 1:
  State:     Online
  Capacity:  2700 W (maximum 2700 W)
  AC input:  OK (Both feed expected, Both feed connected)
  DC output: 1248 W (zone 0, 104 A at 12 V, 46% of capacity)

PEM 2:
  State:     Online
  Capacity:  2700 W (maximum 2700 W)
  AC input:  OK (Both feed expected, Both feed connected)
  DC output: 1260 W (zone 0, 105 A at 12 V, 46% of capacity)

PEM 3:
  State:     Present
  Capacity:  2700 W (maximum 2700 W)
  AC input:  Not ready

PEM 4:
  State:     Present
  Capacity:  2700 W (maximum 2700 W)
  AC input:  Not ready

PEM 5:
  State:     Present
  Capacity:  2700 W (maximum 2700 W)
  AC input:  Not ready

System:
  Zone 0:
```

```
      Capacity:          8100 W (maximum 8100 W)
      Allocated power:   7105 W (995 W remaining)
      Actual usage:      3756 W
  Total system capacity: 8100 W (maximum 8100 W)
  Total remaining power: 995 W
```

show chassis power (PTX5000 Packet Transport Router)

```
user@host> show chassis power
Chassis Power        Input(V)      Used(W)

Total Power                         4006

  PDU 0                             1986
    PSM 0
      Input 1            54          149
    PSM 1
      Input 1            54          377
    PSM 2
      Input 1            54          745
    PSM 3
      Input 1            54          715

  PDU 1                             2020
    PSM 0
      Input 1            54          246
    PSM 1
      Input 1            54          332
    PSM 2
      Input 1            54          721
    PSM 3
      Input 1            54          721
```

show chassis power (PTX5000 Packet Transport Router with FPC2-PTX-P1A)

```
user@host> show chassis power

Chassis Power        Input(V)      Used(W)

Total Power                         4402
```

```
PDU 0                            2104
  PSM 0
    Input 1             53          229
    Input 2             53          375
  PSM 1
  PSM 2
    Input 1             53          248
    Input 2             53          323
  PSM 3
  PSM 4
    Input 1             53          206
    Input 2             53          255
  PSM 5
  PSM 6
    Input 1             53          206
    Input 2             53          262
  PSM 7

PDU 1                            2298
  PSM 0
  PSM 1
    Input 1             53          289
    Input 2             53          267
  PSM 2
  PSM 3
    Input 1             53          309
    Input 2             53          315
  PSM 4
  PSM 5
    Input 1             53          335
    Input 2             53          220
  PSM 6
  PSM 7
    Input 1             53          308
    Input 2             53          255
```

show chassis power detail (PTX5000 Packet Transport Router)

```
user@host> show chassis power detail
Chassis Power        Input(V)      Used(W)
```

```
Total Power                          3997

  PDU 0                              1975
    PSM 0
      Input 1            54           136
    PSM 1
      Input 1            54           377
    PSM 2
      Input 1            54           741
    PSM 3
      Input 1            54           721

  PDU 1                              2022
    PSM 0
      Input 1            54           235
    PSM 1
      Input 1            54           332
    PSM 2
      Input 1            54           726
    PSM 3
      Input 1            54           729

Item                 Used(W)
  Fan Tray 0              49
  Fan Tray 1             127
  Fan Tray 2             117
  RE0/CB0                109
  RE1/CB1                100
  SIB/CCG/FPD            375
  FPC 0                  381
  FPC 1                    0
  FPC 2                  447
  FPC 3                  560
  FPC 4                    0
  FPC 5                  448
  FPC 6                  379
  FPC 7                  388
```

show chassis power detail (PTX5000 Packet Transport Router with FPC2-PTX-P1A)

```
user@host> show chassis power detail
Chassis Power        Input(V)      Used(W)

Total Power                         4394

  PDU 0                             2095
    PSM 0
      Input 1            53          222
      Input 2            53          368
    PSM 1
    PSM 2
      Input 1            53          248
      Input 2            53          329
    PSM 3
    PSM 4
      Input 1            53          212
      Input 2            53          248
    PSM 5
    PSM 6
      Input 1            53          206
      Input 2            53          262
    PSM 7

  PDU 1                             2299
    PSM 0
    PSM 1
      Input 1            53          296
      Input 2            53          260
    PSM 2
    PSM 3
      Input 1            53          309
      Input 2            53          315
    PSM 4
    PSM 5
      Input 1            53          342
      Input 2            53          214
    PSM 6
    PSM 7
      Input 1            53          308
      Input 2            53          255
```

```
Item                 Used(W)
  Fan Trays             252
  RE0/CB0                93
  RE1/CB1                92
  SIB                   360
  FPC 0                 369
      PIC 0              16
      PIC 1               0
  FPC 1                   0
  FPC 2                 437
      PIC 0              44
      PIC 1              38
  FPC 3                 740
      PIC 0              41
      PIC 1              46
  FPC 4                 732
      PIC 0              74
      PIC 1              37
  FPC 5                   0
  FPC 6                   0
  FPC 7                   0
```

show chassis power detail (PTX10008 Router)

```
user@host> show chassis power detail

PEM 0:
  State:     Online
  Capacity:  2700 W (maximum 2700 W)
  AC input:  OK (No feed expected, Both feed connected)
  DC output: 1164 W (zone 0, 97 A at 12 V, 43% of capacity)

PEM 1:
  State:     Online
  Capacity:  2700 W (maximum 2700 W)
  AC input:  OK (Both feed expected, Both feed connected)
  DC output: 1188 W (zone 0, 99 A at 12 V, 44% of capacity)

PEM 2:
  State:     Online
```

```
  Capacity:  2700 W (maximum 2700 W)
  AC input:  OK (No feed expected, Both feed connected)
  DC output: 1188 W (zone 0, 99 A at 12 V, 44% of capacity)

PEM 3:
  State:     Empty
  Input:     Absent

PEM 4:
  State:     Empty
  Input:     Absent

PEM 5:
  State:     Empty
  Input:     Absent

System:
  Zone 0:
      Capacity:          8100 W (maximum 8100 W)
      Allocated power:   7160 W (940 W remaining)
      Actual usage:      3540 W
  Total system capacity: 8100 W (maximum 8100 W)
  Total remaining power: 940 W

Item                 Used(W)
  Fan Tray 0            475
  Fan Tray 1            475
  RE0/CB0                42
  RE1/CB1                46
```

show chassis power detail (PTX10016 Router)

```
user@host> show chassis power detail

PEM 0:
  State:     Online
  Capacity:  2500 W (maximum 2500 W)
  DC input:  OK (Both feed expected, Both feed connected)
  DC output: 432 W (zone 0, 36 A at 12 V, 17% of capacity)
```

```
PEM 1:
  State:     Online
  Capacity:  2500 W (maximum 2500 W)
  DC input:  OK (Both feed expected, Both feed connected)
  DC output: 456 W (zone 0, 38 A at 12 V, 18% of capacity)

PEM 2:
  State:     Online
  Capacity:  2500 W (maximum 2500 W)
  DC input:  OK (Both feed expected, Both feed connected)
  DC output: 432 W (zone 0, 36 A at 12 V, 17% of capacity)

PEM 3:
  State:     Online
  Capacity:  2500 W (maximum 2500 W)
  DC input:  OK (Both feed expected, Both feed connected)
  DC output: 432 W (zone 0, 36 A at 12 V, 17% of capacity)

PEM 4:
  State:     Online
  Capacity:  2500 W (maximum 2500 W)
  DC input:  OK (INP2 feed expected, INP2 feed connected)
  DC output: 432 W (zone 0, 36 A at 12 V, 17% of capacity)

PEM 5:
  State:     Online
  Capacity:  2500 W (maximum 2500 W)
  DC input:  OK (INP2 feed expected, INP2 feed connected)
  DC output: 432 W (zone 0, 36 A at 12 V, 17% of capacity)

PEM 6:
  State:     Online
  Capacity:  2500 W (maximum 2500 W)
  DC input:  OK (INP2 feed expected, INP2 feed connected)
  DC output: 420 W (zone 0, 35 A at 12 V, 16% of capacity)

PEM 7:
  State:     Online
  Capacity:  2500 W (maximum 2500 W)
  DC input:  OK (INP2 feed expected, INP2 feed connected)
  DC output: 432 W (zone 0, 36 A at 12 V, 17% of capacity)

PEM 8:
```

```
  State:     Online
  Capacity:  2500 W (maximum 2500 W)
  DC input:  OK (INP2 feed expected, INP2 feed connected)
  DC output: 432 W (zone 0, 36 A at 12 V, 17% of capacity)

PEM 9:
  State:     Online
  Capacity:  2500 W (maximum 2500 W)
  DC input:  OK (INP2 feed expected, INP2 feed connected)
  DC output: 420 W (zone 0, 35 A at 12 V, 16% of capacity)

System:
  Zone 0:
      Capacity:          25000 W (maximum 25000 W)
      Allocated power:   9550 W (15450 W remaining)
      Actual usage:      4320 W
  Total system capacity: 25000 W (maximum 25000 W)
  Total remaining power: 15450 W

Item                Used(W)
  Fan Tray 0           975
  Fan Tray 1           975
  RE0/CB0               42
  RE1/CB1               46
```

show chassis power detail (EX9208 Switch)

```
user@host> show chassis power detail
PEM 0:
  State:     Present
  AC input:  Out of range (1 feed expected, 1 feed connected)
  Capacity:  2050 W (maximum 2050 W)
  DC output: 0 W (zone 0, 0 A at 0 V, 0% of capacity)

PEM 1:
  State:     Present
  AC input:  Out of range (1 feed expected, 1 feed connected)
  Capacity:  2050 W (maximum 2050 W)
  DC output: 0 W (zone 0, 0 A at 0 V, 0% of capacity)

PEM 2:
```

```
  State:     Present
  AC input:  Out of range (1 feed expected, 1 feed connected)
  Capacity:  2050 W (maximum 2050 W)
  DC output: 0 W (zone 0, 0 A at 0 V, 0% of capacity)

PEM 3:
  State:     Online
  AC input:  OK (1 feed expected, 1 feed connected)
  Capacity:  2050 W (maximum 2050 W)
  DC output: 754 W (zone 0, 13 A at 58 V, 36% of capacity)

System:
  Zone 0:
      Capacity:          2050 W (maximum 2050 W)
      Allocated power:   1478 W (572 W remaining)
      Actual usage:      754 W
  Total system capacity: 2050 W (maximum 2050 W)
  Total remaining power: 572 W
```

show chassis power detail (EX9253 Switch)

```
user@switch> show chassis power detail
PEM 0:
  State:     Online
  Capacity:  1600 W (maximum 1600 W)
  AC input:  OK (1 feed expected, 1 feed connected)
  DC output: 564 W (zone 0, 47 A at 12 V, 35% of capacity)

PEM 1:
  State:     Present
  Input:     Absent

PEM 2:
  State:     Empty
  Input:     Absent

PEM 3:
  State:     Empty
  Input:     Absent

PEM 4:
```

```
  State:     Present
  Input:     Absent

PEM 5:
  State:     Online
  Capacity:  1600 W (maximum 1600 W)
  AC input:  OK (1 feed expected, 1 feed connected)
  DC output: 612 W (zone 0, 51 A at 12 V, 38% of capacity)

System:
  Zone 0:
      Capacity:          3200 W (maximum 3200 W)
      Allocated power:   2157 W (1043 W remaining)
      Actual usage:      1176 W
  Total system capacity: 3200 W (maximum 3200 W)
  Total remaining power: 1043 W

Item                 Used(W)
  FPC 0                 555
  FPC 1                 543
  Fan Tray 0             12
  Fan Tray 1             13
  Fan Tray 2             12
  Fan Tray 3             12
  RE0/CB0                55
```

show chassis power (PTX10008 with JNP10K-PWR-DC2 Power Supply Unit - Junos OS Evolved)

```
user@router> show chassis power
Chassis Power        Voltage(V)    Power(W)

Total Input Power                  10176
  PSM 0
    State: Online
    PS0                  51          912
         A0              52
         B0              52
    PS1                  51          936
         A1              52
         B1              52
```

```
  Output            12.29        1752.57   (80A input select)
PSM 1
  State: Online
  PS0                 51          912
       A0             52
       B0             52
  PS1                 51          936
       A1             52
       B1             52
  Output            12.25         1747     (80A input select)
PSM 2
  State: Online
  PS0                 51          888
       A0             52
       B0             52
  PS1                 51          912
       A1             52
       B1             52
  Output            12.51        1766.71   (80A input select)
PSM 3
  State: Online
  PS0                 51          936
       B0             50
  PS1                 51          984
       A1             51
       B1             51
  Output            12.49        1807.91   (80A input select)
PSM 4
  State: Online
  PS0                 51          864
       A0             51
       B0             52
  PS1                 51          936
       A1             51
       B1             52
  Output            12.45        1763.9    (80A input select)
PSM 5
  State: Fault
  PS0                 51          960
       A0             52
       B0             52
  PS1                 52            0
       A1             52
```

```
          B1              52
    Output            12.43        913.38    (80A input select)

System:
  Zone 0:
      Capacity:          27500 W (maximum 27500 W)
      Allocated power:   19840 W (7660 W remaining)
      Actual usage:      9216 W
  Total system capacity: 27500 W (maximum 27500 W)
  Total remaining power: 7660 W
```

show chassis power detail (PTX10008 with JNP10K-PWR-DC2 Power Supply Unit - Junos OS Evolved)

```
user@router> show chassis power detail
Chassis Power        Voltage(V)    Power(W)

Total Input Power                  10176
  PSM 0
    State: Online
    PS0                  52          912
         A0              52
         B0              52
    PS1                  52          936
         A1              52
         B1              52
    Output            12.29        1741.75   (80A input select)
    Capacity           5500 W (maximum 5500 W)
  PSM 1
    State: Online
    PS0                  51          912
         A0              52
         B0              52
    PS1                  51          936
         A1              52
         B1              52
    Output            12.25         1747     (80A input select)
    Capacity           5500 W (maximum 5500 W)
  PSM 2
    State: Online
    PS0                  52          888
```

```
          A0              52
          B0              52
    PS1                   51          912
          A1              52
          B1              52
    Output             12.51        1766.71   (80A input select)
    Capacity            5500 W (maximum 5500 W)
  PSM 3
    State: Online
    PS0                   51          936
          B0              50
    PS1                   51          984
          A1              52
          B1              52
    Output             12.49        1785.93   (80A input select)
    Capacity            5500 W (maximum 5500 W)
  PSM 4
    State: Online
    PS0                   51          864
          A0              52
          B0              52
    PS1                   51          936
          A1              52
          B1              52
    Output             12.47        1766.67   (80A input select)
    Capacity            5500 W (maximum 5500 W)
  PSM 5
    State: Fault
    PS0                   52          960
          A0              52
          B0              52
    PS1                   52            0
          A1              52
          B1              52
    Output             12.43        896.97    (80A input select)
    Capacity               0 W (maximum 0 W)

Item                 Used(W)
  CB 0                   80
  CB 1                   73
  FPC 0                1116
  FPC 1                1153
  FPC 2                 457
```

```
  FPC 3                  476
  FPC 4                  468
  FPC 5                  446
  FPC 6                 1100
  FPC 7                  477
  SIB 0                  392
  SIB 1                  374
  SIB 2                  395
  SIB 3                  385
  SIB 4                  380
  SIB 5                  389
  Fan Tray 0             629
  Fan Tray 1             609

System:
  Zone 0:
      Capacity:          27500 W (maximum 27500 W)
      Allocated power:   19840 W (7660 W remaining)
      Actual usage:      9264 W
  Total system capacity: 27500 W (maximum 27500 W)
  Total remaining power: 7660 W
```

show chassis power (PTX10008 with JNP10K-PWR-AC2 Power Supply - Junos OS Evolved)

```
user@router> show chassis power
Chassis Power        Voltage(V)    Power(W)

Total Input Power                   7248
  PSM 0
    State: Online
    INP1                203          600
    INP2                203          600
    Output            12.25       1105.35   (30A input select)
  PSM 1
    State: Online
    INP1                203          600
    INP2                201          600
    Output            12.29       1092.65   (30A input select)
  PSM 2
    State: Online
    INP1                205          600
```

```
    INP2                201          600
    Output            12.27        1117.92   (30A input select)
  PSM 3
    State: Online
    INP1                205          624
    INP2                201          624
    Output            12.27        1155.72   (30A input select)
  PSM 4
    State: Online
    INP1                203          600
    INP2                203          600
    Output            12.25        1094.57   (30A input select)
  PSM 5
    State: Online
    INP1                201          600
    INP2                201          600
    Output            12.25        1094.57   (30A input select)

System:
  Zone 0:
      Capacity:          33000 W (maximum 33000 W)
      Allocated power:   18810 W (14190 W remaining)
      Actual usage:      7248 W
  Total system capacity: 33000 W (maximum 33000 W)
  Total remaining power: 14190 W
```

show chassis power detail (PTX10008 with JNP10K-PWR-AC2 Power Supply - Junos OS Evolved)

```
user@router> show chassis power detail
Chassis Power        Voltage(V)    Power(W)

Total Input Power                  7248
  PSM 0
    State: Online
    INP1                201          600
    INP2                205          600
    Output            12.25        1094.57   (30A input select)
    Capacity           5500 W (maximum 5500 W)
  PSM 1
    State: Online
```

```
    INP1                203          600
    INP2                201          600
    Output            12.29        1087.24   (30A input select)
    Capacity           5500 W (maximum 5500 W)
  PSM 2
    State: Online
    INP1                201          600
    INP2                201          600
    Output            12.27        1112.52   (30A input select)
    Capacity           5500 W (maximum 5500 W)
  PSM 3
    State: Online
    INP1                203          624
    INP2                203          624
    Output            12.27        1155.72   (30A input select)
    Capacity           5500 W (maximum 5500 W)
  PSM 4
    State: Online
    INP1                203          600
    INP2                201          600
    Output            12.25        1094.57   (30A input select)
    Capacity           5500 W (maximum 5500 W)
  PSM 5
    State: Online
    INP1                201          600
    INP2                203          600
    Output            12.25        1099.96   (30A input select)
    Capacity           5500 W (maximum 5500 W)

Item                Used(W)
  CB 0                 86
  CB 1                 75
  FPC 0               966
  FPC 2               995
  FPC 3               793
  FPC 5               809
  FPC 7               856
  SIB 0               353
  SIB 1               330
  SIB 2               190
  SIB 3               333
  SIB 4                 0
  SIB 5               343
```

```
  Fan Tray 0            304
  Fan Tray 1            305

System:
  Zone 0:
      Capacity:          33000 W (maximum 33000 W)
      Allocated power:   18810 W (14190 W remaining)
      Actual usage:      7248 W
  Total system capacity: 33000 W (maximum 33000 W)
  Total remaining power: 14190 W
```

show chassis power (SRX5400)

```
user@router> show chassis power
PEM 0:
  State:     Online
  AC input:  OK (1 feed expected, 1 feed connected)
  Capacity:  2050 W (maximum 2050 W)
  DC output: 342 W (zone 0, 6 A at 57 V, 16% of capacity)

PEM 1:
  State:     Online
  AC input:  OK (1 feed expected, 1 feed connected)
  Capacity:  2050 W (maximum 2050 W)
  DC output: 232 W (zone 0, 4 A at 58 V, 11% of capacity)

PEM 2:
  State:     Online
  AC input:  OK (1 feed expected, 1 feed connected)
Capacity:  2050 W (maximum 2050 W)
  DC output: 228 W (zone 0, 4 A at 57 V, 11% of capacity)

PEM 3:
  State:     Online
  AC input:  OK (1 feed expected, 1 feed connected)
  Capacity:  2050 W (maximum 2050 W)
  DC output: 171 W (zone 0, 3 A at 57 V, 8% of capacity)

System:
  Zone 0:
      Capacity:          4100 W (maximum 4100 W)
```

```
      Allocated power:   1442 W (2658 W remaining)
      Actual usage:      973 W
  Total system capacity: 4100 W (maximum 4100 W)
  Total remaining power: 2658 W
```

show chassis power (SRX5800)

```
user@root> show chassis power

PEM 0:
  State:     Online
  AC input:  Check (2 feed expected, 2 feed connected)
  Capacity:  5100 W (maximum 5100 W)
  DC output: 114 W (zone 0, 2 A at 57 V, 2% of capacity)

PEM 1:
  State:     Online
  AC input:  Check (2 feed expected, 2 feed connected)
  Capacity:  5100 W (maximum 5100 W)
  DC output: 1197 W (zone 1, 21 A at 57 V, 29% of capacity)

PEM 2:
  State:     Online
  AC input:  OK (2 feed expected, 2 feed connected)
  Capacity:  5100 W (maximum 5100 W)
  DC output: 171 W (zone 0, 3 A at 57 V, 4% of capacity)

PEM 3:
  State:     Empty
  Input:     Absent

System:
  Zone 0:
      Capacity:          5100 W (maximum 5100 W)
      Allocated power:   595 W (4505 W remaining)
      Actual usage:      285 W
  Zone 1:
      Capacity:          5100 W (maximum 5100 W)
      Allocated power:   1815 W (3285 W remaining)
```

```
      Actual usage:      1197 W
  Total system capacity: 10200 W (maximum 10200 W)
  Total remaining power: 7790 W
```

show chassis power (ACX7024)

The command output is as follows when the default PSU 1+1 mode is active.

```
user@root> show chassis power
Chassis Power        Voltage(V)    Power(W)
Total Input Power                     109
  PSM 0
    State: Online
    Input               229           61
    Output            12.15         51.75
    Capacity           400 W (maximum 400 W)
  PSM 1
    State: Online
    Input               230           48
    Output            12.17        38.79
    Capacity            400 W (maximum 400 W)

System:
  Zone 0:
      Capacity:          800 W (maximum 800 W)
      Actual usage:      109 W
  Total system capacity: 800 W (maximum 800 W)
```

Release Information

Command introduced in Junos OS Release 10.0.

RELATED DOCUMENTATION

show chassis power sequence | 1545

Checklist for Monitoring Power Supplies

show chassis power sequence

IN THIS SECTION

- Syntax | 1545
- Description | 1545
- Options | 1545
- Required Privilege Level | 1546
- Output Fields | 1546
- Sample Output | 1546
- Release Information | 1547

Syntax

```
show chassis power sequence
```

Description

(MX Series 5G Universal Routing Platforms only) Show power-on sequence for the chassis Dense Port Concentrators (DPCs).

(PTX Series Packet Transport Routers, MX2010 and MX2020 routers only) Show power-on sequence for FPCs installed in the chassis.

Options

This command has no options.

Required Privilege Level

view

Output Fields

Table 91 on page 1546 lists the output fields for the `show chassis power sequence` command. Output fields are listed in the approximate order in which they appear.

Table 91: show chassis power sequence Output Fields

Field Name	Field Description
Chassis FRU Power Sequence	(MX Series) Power-on sequence for the DPCs in the chassis. The numbers indicate the slot number of the DPCs. (PTX Series, MX2010 and MX2020 routers only) Power-on sequence for the FPCs in the chassis. The numbers indicate the slot number of the FPC.

Sample Output

show chassis power sequence (MX Series)

```
user@host> show chassis power sequence
Chassis FRU Power Sequence: 3 4 5 6 7 8 9 10 11 0 1 2
```

show chassis power sequence (MX2010 Routers)

```
user@host > show chassis power sequence
Chassis FRU Power On Sequence: 0 1 2 3 4 5 6 7 8 9
```

show chassis power sequence (MX2020 Routers)

```
user@host > show chassis power sequence
Chassis FRU Power On Sequence: 0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19
```

show chassis power sequence (PTX5000 Packet Transport Router)

```
user@host> show chassis power sequence
Chassis FRU Power On Sequence: 0 1 2 3 4 5 6 7
```

Release Information

Command introduced in Junos OS Release 10.0.

Command introduces in Junos OS Release 12.1 for PTX Series Packet Transport Routers.

RELATED DOCUMENTATION

show chassis power | 1503

show chassis psd

IN THIS SECTION

- Syntax | 1548
- Description | 1548
- Options | 1548
- Additional Information | 1548
- Required Privilege Level | 1549
- Output Fields | 1549

Sample Output | 1549
Release Information | 1550

Syntax

```
show chassis psd
```

Description

(Root System Domain [RSD] only) Display information about Protected System Domains (PSDs). A PSD is initially created by the RSD configuration. An RSD and PSDs are supported on a T320 or T640 router, or a T1600 routing node, or a TX Matrix Plus Platform that is interconnected with the JCS1200 platform.

NOTE: RSD configuration is not supported on a routing matrix based on TX Matrix Plus router with 3D SIBs.

Options

This command has no options.

Additional Information

For more information about PSDs, RSDs, and the JCS1200 platform, see the *Junos OS Protected System Domain User Guide for Routing Devices*.

Required Privilege Level

view

Output Fields

Table 92 on page 1549 lists the output fields for the `show chassis psd` command. Output fields are listed in the approximate order in which they appear.

Table 92: show chassis psd Output Fields

Field Name	Field Description
Slot Description	PSD identification.
State	PSD status: • **Online**—PSD is online and running. • **Offline**—PSD is powered down.
Uptime	Length of time that the PSD has been up and running.

Sample Output

show chassis psd

```
{master}

user@host> show chassis psd
Slot Description         State              Uptime
 1                       Online             12 hours, 19 minutes, 51 seconds
 2                       Online             2 hours, 18 minutes, 17 seconds
 3                       Online             12 hours, 19 minutes, 51 seconds
```

Release Information

Command introduced in Junos OS Release 9.1.

show chassis routing-engine

IN THIS SECTION

- Syntax | **1551**
- Syntax (ACX Series, PTX Series, and MX104 Universal Routing Platforms.) | **1551**
- Syntax (EX Series Switches) | **1551**
- Syntax (QFX Series) | **1551**
- Syntax (MX Series Routers) | **1552**
- Syntax (MX204 and MX10003 Universal Routing Platforms) | **1552**
- Syntax (TX Matrix Routers) | **1552**
- Syntax (TX Matrix Plus Routers) | **1552**
- Syntax (Junos OS Evolved) | **1553**
- Description | **1553**
- Options | **1553**
- Required Privilege Level | **1554**
- Output Fields | **1555**
- Sample Output | **1559**
- show chassis routing engine (QFX5700 Switches) (Junos OS Evolved Release) | **1560**
- Usage | **1561**
- Release Information | **1561**

Syntax

```
show chassis routing-engine
<bios | slot>
```

Syntax (ACX Series, PTX Series, and MX104 Universal Routing Platforms.)

```
show chassis routing-engine
```

Syntax (EX Series Switches)

```
show chassis routing-engine
<slot>
<satellite [slot-id slot-id |device-alias alias-name>
```

Syntax (QFX Series)

```
show chassis routing-engine
<interconnect-device name>
<node-device name>
<slot>
<bios>
<errors>
```

Syntax (MX Series Routers)

```
show chassis routing-engine
<all-members>
<bios | slot>
<local>
<member member-id>
<satellite [slot-id slot-id |device-alias alias-name>
```

Syntax (MX204 and MX10003 Universal Routing Platforms)

```
show chassis routing-engine
<slot>
<bios>
<errors>
```

Syntax (TX Matrix Routers)

```
show chassis routing-engine
<bios | slot>
<lcc number  | scc>
```

Syntax (TX Matrix Plus Routers)

```
show chassis routing-engine
<bios | slot>
<lcc number  | sfc number>
```

Syntax (Junos OS Evolved)

```
show chassis routing-engine
<slot>
<bios>
<hard-disk-test>
```

Description

Display the status of the Routing Engine.

Options

none — Display information about one or more Routing Engines. On a TX Matrix router, display information about all Routing Engines on the TX Matrix router and its attached T640 routers. On a TX Matrix Plus router, display information about all Routing Engines on the TX Matrix Plus router and its attached routers.

all-members — (MX Series routers only) (Optional) Display Routing Engine information for all members of the Virtual Chassis configuration.

bios — (Optional) Display the (BIOS) firmware version.

errors — (Optional) Display routing engine errors.

hard-disk-test — (Junos OS Evolved only) (Optional) Display the health of the hard disk. Use `disk /dev/disk-name status` to display the status of a particular disk.

interconnect-device *number* — (QFabric systems only) (Optional) Display Routing Engine information for a specified Interconnect device.

lcc *number* — (TX Matrix and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display Routing Engine information for a specified T640 router (line-card chassis) that is connected to the TX Matrix router. On a TX Matrix Plus router, display Routing Engine information for a specified router (line-card chassis) that is connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local — (MX Series routers only) (Optional) Display Routing Engine information for the local Virtual Chassis member.

member *member-id* — (MX Series routers only) (Optional) Display Routing Engine information for the specified member of the Virtual Chassis configuration. For an MX Series Virtual Chassis, replace *member-id* with a value of 0 or 1.

node-device *number* — (QFabric systems only) (Optional) Display Routing Engine information for a specified Node device.

satellite [slot-id *slot-id* **|device-alias** *alias-name***]** — (Junos Fusion only) (Optional) Display Routing Engine information for the specified satellite device in a Junos Fusion, or for all satellite devices in the Junos Fusion if no satellite devices are specified.

scc — (TX Matrix routers only) (Optional) Display Routing Engine information for the TX Matrix router (switch-card chassis).

sfc *number* — (TX Matrix Plus routers only) (Optional) Display Routing Engine information for the TX Matrix Plus router (or switch-fabric chassis). Replace *number* with 0.

slot — (Systems with multiple Routing Engines) (Optional) Display information for an individual Routing Engine. Replace *slot* with 0 or 1. For QFX3500 switches, there is only one Routing Engine, so you do not need to specify the slot number.

Required Privilege Level

view

Output Fields

Table 93 on page 1555 lists the output fields for the `show chassis routing-engine` command. Output fields are listed in the approximate order in which they appear.

Table 93: show chassis routing-engine Output Fields

Field Name	Field Description
`Slot`	(Systems with single and multiple Routing Engines) Slot number.
`Current state`	(Systems with multiple Routing Engines) Current state of the Routing Engine: `Master`, `Backup`, or `Disabled`.
`Election priority`	(Systems with multiple Routing Engines) Election priority for the Routing Engine: `Master` or `Backup`.
`Temperature`	Temperature of the air flowing past the Routing Engine.
`CPU Temperature`	Temperature of the CPU.
`DRAM`	Total DRAM available to the Routing Engine's processor. **NOTE**: When the chassis has two Routing Engines, the amount of DRAM should be the same on both. A DRAM size mismatch error can result when the Routing Engines have different amounts of DRAM. Starting with Junos OS Release 12.3R1, the DRAM field displays both available memory and installed memory.
`Memory utilization`	Percentage of Routing Engine memory being used. **NOTE**: For platforms running Junos OS with upgraded FreeBSD, the way memory utilization is calculated has changed. Starting in Junos OS Release 15.1R1, inactive memory is no longer included in calculating memory utilization. Inactive memory is considered as free. The value for used memory decreases and results in more memory to be available for other processes. For platforms that run Junos OS with upgraded FreeBSD, see Release Information for Junos OS with Upgraded FreeBSD.

Table 93: show chassis routing-engine Output Fields *(Continued)*

Field Name	Field Description
`CPU utilization`	Information about the Routing Engine's CPU utilization: • `User`—Percentage of CPU time being used by user processes. • `Background`—Percentage of CPU time being used by background processes. • `Kernel`—Percentage of CPU time being used by kernel processes. • `Interrupt`—Percentage of CPU time being used by interrupts. • `Idle`—Percentage of CPU time that is idle.
`5 sec CPU Utilization`	Information about the Routing Engine's CPU utilization in the past 5 seconds: • `User`—Percentage of CPU time being used by user processes. • `Background`—Percentage of CPU time being used by background processes. • `Kernel`—Percentage of CPU time being used by kernel processes. • `Interrupt`—Percentage of CPU time being used by interrupts. • `Idle`—Percentage of CPU time that is idle.
`1 min CPU Utilization`	Information about the Routing Engine's CPU utilization in the past 1 minute: • `User`—Percentage of CPU time being used by user processes. • `Background`—Percentage of CPU time being used by background processes. • `Kernel`—Percentage of CPU time being used by kernel processes. • `Interrupt`—Percentage of CPU time being used by interrupts. • `Idle`—Percentage of CPU time that is idle.

Table 93: show chassis routing-engine Output Fields *(Continued)*

Field Name	Field Description
5 min CPU Utilization	Information about the Routing Engine's CPU utilization in the past 5 minutes: • User—Percentage of CPU time being used by user processes. • Background—Percentage of CPU time being used by background processes. • Kernel—Percentage of CPU time being used by kernel processes. • Interrupt—Percentage of CPU time being used by interrupts. • Idle—Percentage of CPU time that is idle.
15 min CPU Utilization	Information about the Routing Engine's CPU utilization in the past 15 minutes: • User—Percentage of CPU time being used by user processes. • Background—Percentage of CPU time being used by background processes. • Kernel—Percentage of CPU time being used by kernel processes. • Interrupt—Percentage of CPU time being used by interrupts. • Idle—Percentage of CPU time that is idle.
Model	Routing Engine model number.
Serial ID	(Systems with multiple Routing Engines) Identification number of the Routing Engine in this slot.
Start time	Time at which the Routing Engine started running.
Uptime	How long the Routing Engine has been running.
Routing Engine BIOS Version	BIOS version being run by the Routing Engine.

Table 93: show chassis routing-engine Output Fields *(Continued)*

Field Name	Field Description
`Last reboot reason`	Reason for last reboot, including: • `power cycle/failure`—Halt of the Routing Engine using the `halt` command, powering down using the power button on the chassis or any other method (such as removal of the control board or Routing Engine), and then powering back the Routing Engine. A halt of the operating system also occurs if you enter the `request system halt` command. You can enter this command to halt the system operations on the chassis or specific Routing Engines. To restart the software, press any key on the keyboard. • `watchdog`—Reboot due to a hardware watchdog. A watchdog is a hardware monitoring process that examines the health and performance of the router to enable the device to recover from failures. A watchdog checks for problems at certain intervals, and reboots the routing engine if a problem is encountered. • `reset-button reset`—(Not available on the EX Series switch) Reboot due to pressing of the reset button on the Routing Engine. • `power-button hard power off`—Reboot due to pressing of the power button on the chassis. A powering down of the software also occurs if you enter the `request system power-off` command. You can enter this command to power down the chassis or specific Routing Engines; you can then restart the software. • `misc hardware reason`—Reboot due to miscellaneous hardware reasons. • `thermal shutdown`—Reboot due to the router or switch reaching a critical temperature at which point it is unsafe to continue operations. • `hard disk failure`—Reboot due to a hard disk or solid-state drive (SSD) failure. • `reset from debugger`—Reboot due to reset from the debugger. • `chassis control reset`—Restart the chassis process that manages PICs, FPCs, and other hardware components. The chassis control module that runs the Routing Engine performs management and monitoring functions, and it provides a single access point for operational and maintenance functions. A reset of the chassis management process occurs when you enter the `restart chassis-control` command. • `bios auto recovery reset`—Reboot due to a BIOS auto-recovery reset. • `could not be determined`—Reboot due to an undetermined reason.

Table 93: show chassis routing-engine Output Fields *(Continued)*

Field Name	Field Description
	• `Router rebooted after a normal shutdown`—Reboot due to a normal shutdown. This reason is displayed if the Routing Engine is powered down by pushing and holding the online/offline button on the Routing Engine faceplate for 30 seconds, and then powered back. A reboot of the software also occurs if you enter the `request system reboot` command. You can enter this command to reboot the chassis or specific Routing Engines. • `Low battery detected` This reason is displayed if the Routing Engine is powered down due to detection of low battery and powered back when battery is charged. • `Catastrophic error` This reason is displayed if the Routing Engine is powered down due to catastrophic error (for example, link failure between FPC line card and PFE(packet forwarding engine)) and powered back. QFX5700 displays the following additional reboot reasons: • `FPGA reset` Reboot due to FPGA reset. • `MSMI error/hw misc` Reboot due to hardware MSMI (Microsoft Mail Connector interchange) Service Returned Service-Specific error. • `swizzle reset` Reboot due to swizzle reset, power off and turning back on. • `PCH cold reset` Reboot due to complete removal of power and restart of Intel PCH (Platform Controller Hub). • `software reboot` Reboot of system due to software reboot process. • `Straight to s5 reset` Reboot due to system in S5 state and does not retain memory state. • `iTCO watchdog` Linux TCO hardware watchdog reboots the system automatically when there is a systems pause.
`Load averages`	Routing Engine load averages for the last 1, 5, and 15 minutes.

Sample Output

The sample outputs for show chassis routing engine are as follows:

show chassis routing engine (QFX5700 Switches) (Junos OS Evolved Release)

```
user@switch> show chassis routing-engine
Routing Engine status:
  Slot 0:
  Current state         Master
  Election priority     Master
  Temperature           35 degrees C / 95 degrees F
  CPU temperature       39 degrees C / 102 degrees F
  DRAM                  25825 MB (31566 MB installed)
  Memory utilization    18 percent
  5 sec CPU utilization:
  User                   2 percent
  Background             0 percent
  Kernel                 2 percent
  Interrupt              0 percent
  Idle                   94 percent
  1 min CPU utilization:
  User                   2 percent
  Background             0 percent
  Kernel                 2 percent
  Interrupt              0 percent
  Idle                   94 percent
  5 min CPU utilization:
  User                   2 percent
  Background             0 percent
  Kernel                 2 percent
  Interrupt              0 percent
  Idle                   94 percent
  15 min CPU utilization:
   User                   2 percent
   Background             0 percent
   Kernel                 2 percent
   Interrupt              0 percent
   Idle                   94 percent
   Model                  QFX5700-RE
  Serial ID              BUILTIN
  Start time 2021-06-09 02:50:08 PDT
  Uptime 42 minutes, 48 seconds
  Load averages: 1 minute 5 minute 15 minute
```

```
    1.48 1.71 1.83
    Last reboot reason      power cycle
```

Usage

The `show chassis routing-engine` and `show chassis feb` commands can be used to find the memory allocated for each RE (Routing Engine) and Packet Forwarding Engine components.

Release Information

Command introduced before Junos OS Release 7.4.

`sfc` option introduced in Junos OS Release in 9.6 for the TX Matrix Plus router.

`5 sec CPU Utilization`, `1 min CPU Utilization`, `5 min CPU Utilization`, and `15 min CPU Utilization` output fields introduced in Junos OS Release 11.3R1.

`satellite` option introduced in Junos OS Release 14.2R3.

RELATED DOCUMENTATION

request chassis routing-engine master

Configuring Routing Engine Redundancy

Switching the Global Primary and Backup Roles in a Virtual Chassis Configuration

show chassis feb | **1309**

show chassis scb

IN THIS SECTION

- Syntax | **1562**
- Description | **1562**

- Options | 1562
- Required Privilege Level | 1562
- Output Fields | 1562
- Sample Output | 1564
- Release Information | 1564

Syntax

```
show chassis scb
```

Description

(M40 router only) Display System Control Board (SCB) status information.

Options

This command has no options.

Required Privilege Level

view

Output Fields

Table 94 on page 1563 lists the output fields for the `show chassis scb` command. Output fields are listed in the approximate order in which they appear.

Table 94: show chassis scb Output Fields

Field Name	Field Description
Temperature	Temperature of the air passing by the SCB, in degrees Celsius.
CPU utilization	Total percentage of CPU being used by the SCB's processor.
Interrupt utilization	Of the total CPU being used by the SCB's processor, the percentage being used for interrupts.
Heap utilization	Percentage of heap space being used by the SCB's processor.
Buffer utilization	Percentage of buffer space being used by the SCB's processor.
DRAM	Total DRAM available to the SCB's processor.
Start time	Time when the SCB started running.
Uptime	How long the SCB has been running.
Internet Processor memory	Information about the memory of the Internet Processor ASIC on the SCB: • **IP routes**—Number of IP routes known to the Internet Processor. • **MPLS routes**—Number of MPLS routes known to the Internet Processor. • **SRAM banks enabled**—Which SRAM banks are enabled. • **SRAM size**—Size of SCB SRAM, in bytes. • **SRAM used**—Amount of SRAM used, in bytes. • **SRAM utilization**—Percentage of SRAM used.

Sample Output

show chassis scb

```
user@host> show chassis scb
SCB status:
  Temperature                 30 Centigrade
  CPU utilization              5 percent
  Interrupt utilization        0 percent
  Heap utilization             0 percent
  Buffer utilization           2 percent
  DRAM                        64 Mbytes
  Start time                     1998-10-28 18:35:46 UTC
  Uptime                         6 minutes, 16 seconds
  Internet Processor memory:
    IP routes                 16
    MPLS routes                1
    SRAM banks enabled       [ 1 1 1 1 ]
    SRAM size                  4 Mbytes
    SRAM used                256 bytes
    SRAM utilization           0 percent
```

Release Information

Command introduced before Junos OS Release 7.4.

RELATED DOCUMENTATION

Checklist for Monitoring the SCB

show chassis sfb

IN THIS SECTION

- Syntax | 1565
- Syntax (, MX10008 Universal Edge Routers) | 1565
- Description | 1566
- Options | 1566
- Required Privilege Level | 1566
- Output Fields | 1566
- Sample Output | 1567
- Release Information | 1568

Syntax

```
show chassis sfb
<all-members>
<local>
<member member-id>
<slot sfb-slot-number>
```

Syntax (, MX10008 Universal Edge Routers)

```
show chassis sfb
<errors>
<slot sfb-slot-number>
```

Description

Display chassis information about the Switch Fabric Board (SFB, SFB2).

Options

none	Display chassis information about all Switch Fabric Boards.
all-members	(Optional) Display chassis information about the SFB in all members of the Virtual Chassis configuration.
local	(Optional) Display chassis information about the SFB in the local member of the Virtual Chassis.
member *member-id*	(Optional) Display chassis information about the SFB in the specified member of the Virtual Chassis. Replace *member-id* with the value 0 or 1.
errors	Show ASIC errors on sfb.
sfb-slot-number	(Optional) Display chassis information about the specified Switch Fabric Board. For MX2020, MX2010, and MX2008 routers, replace *sfb-slot-number* with a value from 0 through 7.

Required Privilege Level

view

Output Fields

Table 95 on page 1567 lists the output fields for the `show chassis sfb` command. Output fields are listed in the approximate order in which they appear.

Table 95: show chassis sfb Output Fields

Field Name	Field Description
`Slot`	Slot number.
`State`	Status of the SFB. • `Online`—The SFB is online and running. • `Offline`— SFB is powered down.
`Uptime`	How long the Routing Engine has been connected to the SFB and, therefore, how long the SFB has been up and running.

Sample Output

show chassis sfb (MX2020 Router)

```
user@host> show chassis sfb
Slot  State              Uptime
 0    Online              6 hours, 11 minutes, 33 seconds
 1    Online              6 hours, 11 minutes, 27 seconds
 2    Online              6 hours, 11 minutes, 21 seconds
 3    Online              6 hours, 11 minutes, 15 seconds
 4    Online              6 hours, 11 minutes, 8 seconds
 5    Online              6 hours, 11 minutes, 2 seconds
 6    Online              6 hours, 10 minutes, 57 seconds
 7    Online              6 hours, 10 minutes, 51 seconds
```

show chassis sfb (MX2010 Router)

```
user@host> show chassis sfb
Slot  State              Uptime
 0    Online              6 hours, 48 minutes, 28 seconds
 1    Online              6 hours, 48 minutes, 23 seconds
```

```
 2    Online              6 hours, 48 minutes, 17 seconds
 3    Offline              --- Restarting unresponsive board ---
 4    Online              6 hours, 48 minutes, 12 seconds
 5    Online              6 hours, 48 minutes, 6 seconds
 6    Online              6 hours, 48 minutes
 7    Online              6 hours, 47 minutes, 55 seconds
```

show chassis sfb (MX2008 Router)

```
user@host> show chassis sfb
Slot  State              Uptime
 0    Online              10 days, 6 hours, 52 minutes, 38 seconds
 1    Online              10 days, 6 hours, 52 minutes, 32 seconds
 2    Online              10 days, 6 hours, 52 minutes, 26 seconds
 3    Online              10 days, 6 hours, 52 minutes, 20 seconds
 4    Online              10 days, 6 hours, 52 minutes, 15 seconds
 5    Online              10 days, 6 hours, 52 minutes, 9 seconds
 6    Online              10 days, 6 hours, 52 minutes, 3 seconds
 7    Online              10 days, 6 hours, 51 minutes, 58 seconds
```

show chassis sfb (MX10008 Router)

```
user@host> show chassis sfb
Slot  State              Uptime
 0    Online              21 hours, 25 minutes, 50 seconds
 1    Online              21 hours, 25 minutes, 22 seconds
 2    Online              21 hours, 24 minutes, 55 seconds
 3    Online              21 hours, 24 minutes, 27 seconds
 4    Online              21 hours, 23 minutes, 56 seconds
 5    Online              21 hours, 23 minutes, 23 seconds
```

Release Information

Command introduced in Junos OS Release 12.3 for MX2010 and MX2020 Universal Routing Platforms.

`all-members`, `local`, and `member` *`member-id`* options introduced in Junos OS Release 15.1 for MX2020 and MX2010 routers.

RELATED DOCUMENTATION

request chassis sfb | 455

show chassis sfb errors

IN THIS SECTION

- Syntax | 1569
- Description | 1569
- Options | 1569
- Required Privilege Level | 1570
- Output Fields | 1570
- Sample Output | 1571
- Release Information | 1571

Syntax

```
show chassis sfb errors
< slot sfb-slot-number>
```

Description

Display information about errors pertaining to Switch Fabric Boards (SFBs).

Options

none	Display information about the errors pertaining to all the SFBs in the router.

sfb-slot-number (Optional) Display information about error for the specified Switch Fabric Board.

- **Range:** 0–5

Required Privilege Level

view

Output Fields

Table 96 on page 1570 lists the output fields for the `show chassis sfb errors` command. Output fields are listed in the approximate order in which they appear.

Table 96: show chassis sfb errors Output Fields

Field Name	Field Description
`Slot`	Displays the SFB slot number.
`Name`	Displays the name of the SFB. In MX10008 routers, SFB is identified as SIB.
`DeviceID`	Displays device ID.
Threshold	Displays the error threshold.
Active	Displays the number of active error instances.
Occurred	Displays the number of error instances occurred.
Cleared	Displays the number of error instances cleared.
Description	Displays error description.

Sample Output

show chassis sfb errors slot 1(MX10008 Router)

```
user@host> show chassis sfb errors slot 1

Slot Name              DeviceId    Threshold  Active  Occured  Cleared  Description
1    SIB 1_LTC3880_0   09204F8B00  1          0       0        0        PF0 Core 0.9V, voltage
                       09204FFFFF  1          0       0        0        PF0 Core 0.9V, I2C Access
     SIB 1_LTC3880_1   09204D8B00  1          0       0        0        PF0 AVDD 1V, voltage
                       09204DFFFF  1          0       0        0        PF0 AVDD 1V, I2C Access
     SIB 1_LTC3880_2   09204B8B00  1          0       0        0        PF1 Core 0.9V, voltage
                       09204BFFFF  1          0       0        0        PF1 Core 0.9V, I2C Access
     SIB 1_LTC3880_3   0920498B00  1          0       0        0        PF1 AVDD 1V, voltage
                       092049FFFF  1          0       0        0        PF1 AVDD 1V, I2C Access
     SIB 1_VT7505_0    0910408800  1          0       0        0        HOTSWAP 12V, voltage
                       091040FFFF  1          0       0        0        HOTSWAP 12V, I2C Access
     SIB 1_TEMP_0      0901000000  1          0       0        0        Intake-A Temp Sensor
                       0901000100  1          0       0        0        Intake-B Temp Sensor
                       0901002300  1          0       0        0        PF0 Temp Sensor
     SIB 1_TEMP_1      0902000000  1          0       0        0        Exhaust-A Temp Sensor
                       0902000100  1          0       0        0        Exhaust-B Temp Sensor
                       0902002300  1          0       0        0        PF1 Temp Sensor
```

Release Information

Command introduced in Junos OS Release 18.2.

RELATED DOCUMENTATION

request chassis sfb | 455

show chassis sfm

IN THIS SECTION

- Syntax | 1572
- Description | 1572
- Options | 1572
- Required Privilege Level | 1573
- Output Fields | 1573
- Sample Output | 1575
- Release Information | 1576

Syntax

```
show chassis sfm
<detail <sfm-slot>>
```

Description

(M40e and M160 routers only) Display Switching and Forwarding Module (SFM) status information.

Options

none Display standard status information about all SFMs.

detail (Optional) Display detailed SFM status information.

sfm-slot (Optional) Display status information about the SFM in the specified slot only. For the M40e router, replace ***sfm-slot*** with **0** or **1**. For the M160 router, replace ***sfm-slot*** with a value from **0** through **3**.

Required Privilege Level

view

Output Fields

Table 97 on page 1573 lists the output fields for the `show chassis sfm` command. Output fields are listed in the approximate order in which they appear.

Table 97: show chassis sfm Output Fields

Field Name	Field Description	Level of Output
Slot	Slot number.	All levels
State	Status of the SFM. State can be any of the following: • **Online**—SFM is online and running. • **Online-Standby** (M40e router only)—SFM is online, operating as Standby. • **Offline**—SFM is powered down. • **Empty**—No SFM is present.	All levels
Reason	If the status is **Offline**, reason for this state.	All levels
Temp	Temperature of air passing by the SFM, in degrees Celsius.	none specified
CPU Utilization (%)	Information about CPU usage.	none specified

Table 97: show chassis sfm Output Fields *(Continued)*

Field Name	Field Description	Level of Output
Total	Total percentage of the CPU being used by the SFM's processor.	All levels
Interrupt	Of the total CPU being used by the SFM's processor, the percentage being used for interrupts.	All levels
Memory Utilization	Information about memory usage.	none specified
DRAM	Total DRAM available to the SFM's processor, in megabytes (MB).	All levels
Heap	Percentage of heap space (dynamic memory) being used by the SFM's processor. If this number exceeds 80 percent, it might indicate a software problem (memory leak).	All levels
Buffer	Percentage of buffer space being used by the SFM's processor for buffering internal messages.	All levels
SPP Temperature	Temperature of air passing by the Switch Plane Processor card, in degrees Celsius and Fahrenheit	**detail**
SPR Temperature	Temperature of air passing by the Switch Plane Router card, in degrees Celsius and Fahrenheit.	**detail**
Total CPU DRAM	Total amount of CPU DRAM being used by the SFM's processor.	**detail**
Total SSRAM	Total amount of SSRAM being used by the SFM's processor.	**detail**
Internet processor II	(M160 router only) Processor type.	**detail**
Start time	Time this SFM became active.	**detail**
Uptime	How long the SFM has been up and running.	**detail**

Table 97: show chassis sfm Output Fields *(Continued)*

Field Name	Field Description	Level of Output
Packet scheduling mode	(M160 router only) Enabled or disabled.	**detail**

Sample Output

show chassis sfm (M160 Router)

```
user@host> show chassis sfm

SFM status:
                Temp  CPU Utilization (%)   Memory    Utilization (%)
Slot State      (C)  Total  Interrupt      DRAM (MB) Heap     Buffer
  0  Online      39      0          0        64         0          6
  1  Online      43      0          0        64         0          6
  2  Empty        0      0          0         0         0          0
  3  Empty        0      0          0         0         0          0
```

show chassis sfm detail (M40e Router)

```
user@host> show chassis sfm detail
Slot 0 information:
  State                               Offline
  Reason:                             - power configured off
Slot 1 information:
  State                               Present
  SPP temperature                   0 degrees C / 32 degrees F
  SPR temperature                   0 degrees C / 32 degrees F
  Total CPU DRAM                     0 MB
  Total SSRAM                        0 MB
```

show chassis sfm detail (M160 Router)

```
user@host> show chassis sfm detail
Slot 0 information:
  State                               Online
  SPP temperature                  37 degrees C / 98 degrees F
  SPR temperature                  39 degrees C / 102 degrees F
  Total CPU DRAM                   64 MB
  Total SSRAM                       8 MB
  Internet Processor II               Version 1, Foundry IBM, Part number 9
  Start time:                         2004-08-17 09:23:08 PDT
  Uptime:                            72 days, 1 hour, 15 minutes, 57 seconds
Slot 1 information:
  State                               Online
  SPP temperature                  36 degrees C / 96 degrees F
  SPR temperature                  37 degrees C / 98 degrees F
  Total CPU DRAM                   64 MB
  Total SSRAM                       8 MB
  Internet Processor II               Version 1, Foundry IBM, Part number 9
  Start time:                         2004-08-17 09:23:08 PDT
  Uptime:                            72 days, 1 hour, 15 minutes, 57 seconds
Slot 2 information:
....
Packet scheduling mode : Disabled
```

Release Information

Command introduced before Junos OS Release 7.4.

RELATED DOCUMENTATION

request chassis sfm | 458

request chassis sfm master switch

Switching the Global Primary and Backup Roles in a Virtual Chassis Configuration

show chassis sibs

IN THIS SECTION

- Syntax | 1577
- Syntax (TX Matrix Router) | 1577
- Syntax (TX Matrix Plus Router) | 1578
- Syntax (PTX Series Packet Transport Routers) | 1578
- Description | 1578
- Options | 1578
- Required Privilege Level | 1579
- Output Fields | 1579
- Sample Output | 1585
- Release Information | 1594

Syntax

```
show chassis sibs
```

Syntax (TX Matrix Router)

```
show chassis sibs
<lcc number | scc>
```

Syntax (TX Matrix Plus Router)

```
show chassis sibs
<lcc number | sfc number>
```

Syntax (PTX Series Packet Transport Routers)

```
show chassis sibs
<detail>
<slot>
```

Description

(M320,T Series routers, TX Matrix routers, TX Matrix Plus routers, and PTX Series routers only) Display Switch Interface Boards (SIBs) status information.

Options

none (TX Matrix routers and TX Matrix Plus routers only) On a TX Matrix router, display the SIB status for the TX Matrix router and its attached T640 routers. On a TX Matrix Plus router, display the SIB status for the TX Matrix Plus router and its attached routers.

detail (PTX Series) (Optional) Display detailed SIB status information.

lcc *number* (TX Matrix routers and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display SIB status information for a specified T640 router (line-card chassis or LCC) that is connected to the TX Matrix router. On a TX Matrix Plus router, display SIB status information for a specified T1600 or T4000 router (LCC) that is connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

scc (TX Matrix routers only) (Optional) Display SIB status information for the TX Matrix router (switch-card chassis).

sfc *number* (TX Matrix Plus routers only) (Optional) Display SIB status information for the TX Matrix Plus router (switch-fabric chassis or SFC). Replace *number* with **0**.

slot (PTX Series) (Optional) Display status information about the SIB in the specified slot only. The range of values is 0 through 8.

Required Privilege Level

view

Output Fields

Table 98 on page 1579 lists the output fields for the `show chassis sibs` command. Output fields are listed in the approximate order in which they appear.

Table 98: show chassis sibs Output Fields

Field Name	Field Description
Slot	SIB slot number.
Type	(TX Matrix Plus router only) SIB type.

Table 98: show chassis sibs Output Fields *(Continued)*

Field Name	Field Description
Uptime	How long the SIB has been up and running.

Table 98: show chassis sibs Output Fields *(Continued)*

Field Name	Field Description
State	SIB status: • **Activating**—SIB is coming online; this is a transitional state. • **Deactivating**—SIB is going offline; this is a transitional state. • **Connected**—SIBs on a T1600 router are connected and trained but are either not online or are spare, because the plane on the TX Matrix Plus router (or switch-fabric chassis) is still offline. • **Disconnected**—SIBs on all T640 routers on the TX Matrix router (switch-card chassis) are in the **Disconnected** state, because a SIB on the SCC has gone offline. Likewise, SIBs on all T1600 routers on the TX Matrix Plus router (or switch-fabric chassis) are in the **Disconnected** state, because a SIB on the SFC has gone offline. On the TX Matrix Plus router with 3D SIBs, the LCC SIB is also disconnected if the F13 SIB is online, but none of the cables are connected or trained. • `Onlining`—SIB is in the process of going online. ASICs , retimers and the rest of the hardware is initializing. • **Online**—SIB is operational and running. • `Offlining`—SIB is in the process of going offline. ASICs , retimers and rest of the hardware is being shutdown down to take the offline gracefully. • **Offline**—SIB is powered down. **NOTE**: If a SIB transitions to the **Offline** state, the command displays an appropriate reason in the output. For instance, if the SIB is taken offline using the `request chassis sib` command, the `show chassis sibs` command displays **--- Offlined by cli command ---** in the output. • **Spare**—SIB is redundant and will move to active state if one of the working SIBs fails to pass traffic. **NOTE**: **Spare** does not apply to PTX Series Packet Transport Routers, as there are no spare SIBs. • **Empty**—No SIB is present.

Table 98: show chassis sibs Output Fields *(Continued)*

Field Name	Field Description

	• **Fault**—SIB is in an alarmed state in which none of the SIB's planes are operational for one of the following reasons:
	  • All onboard fabric ASICs are not operational.
	  • Fiber-optic connector faults.
	  • FPC connector faults.
	  • SIB midplane connector faults.
	• `Fault-off`—SIB is powered off due to a fault in SIB.
	• **Check**—SIB is in an alarmed state due to link errors or destination errors. A SIB can transition to the **Check** state from the online or spare state.
	  The **Check** state can be caused by the following reasons:
	  • Unsupported FPC installed on a router.
	  • SIB not inserted properly (such as bent pins).
	  • Destination errors are detected on the SIB. In this case, the Packet Forwarding Engine stops using the SIB to send traffic to the affected destination Packet Forwarding Engine. When a Packet Forwarding Engine cannot be reached on that plane or SIB, a destination error is reported against that SIB.
	  NOTE: For SIBs in the **Check** state, the output displays some additional information:
	  • In Junos OS Release 9.6 and later, the **Check** state message shows the number of Packet Forwarding Engines in the plane having destination errors. For example, **Check (10 destination errors)** indicates 10 Packet Fowarding Engines cannot be reached on that particular SIB. If there are no destination errors, and if the SIB transitions to the **Check** state because of link errors only, the **Check** state message shows **Check (0 destination errors)**.

Table 98: show chassis sibs Output Fields *(Continued)*

Field Name	Field Description
	• In Junos OS Release 9.5 and earlier, the **Check** state message shows **Check (destination errors)** if there are Packet Forwarding Engines with destination errors in this plane. However, it does not show the number of Packet Forwarding Engines having destination errors. If there are no destination errors and if the SIB transitions to the **Check** state because of link errors only, the **Check** state message shows **Check (no destination errors)**. If the SIB is in a **Check** state, because of destination errors, the CLI displays an additional line in the output, **use "show chassis fabric fpcs" and "show chassis fabric sibs" for more details**. • Link errors are detected on the channel between the SIB and a Packet Forwarding Engine. Link errors can be detected at initialization time or runtime: • Link errors caused by a link training failure at initialization time—The Packet Forwarding Engine does not use the SIB to send traffic. The `show chassis fabric fpcs` command shows **Plane disabled** as status for this link. • Link errors caused by CRC errors detected at runtime—The Packet Forwarding Engine continues to use the SIB to send traffic. The `show chassis fabric fpcs` command shows **Link error** as the status for this link. **NOTE**: The **Check** state does not apply to PTX Series Packet Transport Routers. • **SFC Error**—If an F13 SIB on the TX Matrix Plus router (SFC) transitions to the **Fault** state (for instance, because of link errors), and then if an LCC SIB (connected to the F13 SIB) comes online, the LCC SIB transitions to the **SFC Error** state. This state indicates that the F13 SIB to which the LCC SIB is connected has errors. **NOTE**: The **Connected**, **Disconnected**, and **SFC Error** states are only applicable to the SIBs on an LCC. • **Invalid**—The specific SIB slot is not valid for 4-LCC chassis configuration. See the *TX Matrix Plus Hardware Guide* for more information about the supported SIB slots.

Table 98: show chassis sibs Output Fields *(Continued)*

Field Name	Field Description
	NOTE: The **Invalid** state is applicable to TX Matrix Plus routers only. • `Unknown`—SIB is present but the state is unknown. • `Present`—SIB is plugged in. The SIB is not powered on or operational.
Fabric links	Indicates status of fabric links on the SIB. • **Active**—All fabric links on SIB are active. Errors detected on the SIB's fabric links, if any, are reported in the Errors column. • **Unused**—All fabric links on the SIB are not used for fabric traffic.
Errors	Indicates if there is any error on the SIB. • **None**—No errors • **Link Errors**—Fabric link errors were found on SIB RX link. • **Cell drops**—Fabric cell drops were found on the SIB ASIC. • **Link Errors, Cell drops**—Both link errors and cell drops were detected on at least one of the SIB's fabric links. • `Asic Errors`—A fault affecting one of the ASICs on the SIB is detected. It can be an IO error or an internal error signaled by the ASIC.
Link Errors	indicate the number of links which are marked faulty because the errors on them have crossed threshold.
Cable Errors	Indicate the number of mandatory cables that are not connected, or in up state for that plane
Destination Errors	Indicate the number of destinations that are not reachable on this plane.

Sample Output

show chassis sibs (T640 Router)

```
user@host> show chassis sibs

Slot  State                       Uptime
 0    Empty
 1    Offline                          --- Offlined by cli command ---
 2    Check (21 destination errors)    1 day, 1 hour, 32 minutes, 55 seconds
 3    Check (0 destination errors)     1 day, 1 hour, 32 minutes, 45 seconds
 4    Empty

use "show chassis fabric fpcs" and "show chassis fabric sibs" for more details
```

show chassis sibs (T4000 Router)

```
user@host> show chassis sibs
Slot  State                           Uptime
 0    Spare
 1    Online                          3 hours, 48 minutes, 38 seconds
 2    Online                          3 hours, 48 minutes, 22 seconds
 3    Online                          3 hours, 48 minutes, 5 seconds
 4    Online                          3 hours, 47 minutes, 49 seconds
```

show chassis sibs (TX Matrix Router)

```
user@host> show chassis sibs
scc-re0:
--------------------------------------------------------------------------
Slot  State               Uptime
 0    Empty
 1    Empty
 2    Offline             --- Offlined by cli command ---
 3    Offline
 4    Online              7 days, 21 hours, 50 minutes, 4 seconds
lcc0-re0:
--------------------------------------------------------------------------
```

```
Slot  State                           Uptime
 0    Offline                         --- Offlined by cli command ---
 1    Empty
 2    Check (21 destination errors)   1 day, 1 hour, 32 minutes, 55 seconds
 3    Check (0 destination errors)    1 day, 1 hour, 32 minutes, 45 seconds
 4    Empty

use "show chassis fabric fpcs" and "show chassis fabric sibs" for more details
```

show chassis sibs (T1600 Router)

```
user@host> show chassis sibs

Slot
 Slot  State                           Uptime
  0    Check (destination errors)      2 hours, 23 minutes, 2 seconds
  1    Offline                         --- Offlined by cli command ---
  2    Check (destination errors)      2 hours, 23 minutes, 3 seconds
  3    Check (destination errors)      2 hours, 23 minutes, 3 seconds
  4    Check (destination errors)      2 hours, 23 minutes, 3 seconds

 use "show chassis fabric fpcs" and "show chassis fabric sibs" for more details
```

show chassis sibs (TX Matrix Plus Router)

```
user@host> show chassis sibs
sfc0-re0:
--------------------------------------------------------------------------
Slot  State              Type          Link errors  Destination errors  Uptime
 0    Spare              SIB F13          NONE             NONE
 1    Empty                               NONE             NONE
 2    Invalid                             NONE             NONE
 3    Online             SIB F13          NONE             NONE         1 hour, 53 minutes, 19
seconds
 4    Empty                               NONE             NONE
 5    Invalid                             NONE             NONE
 6    Online             SIB F13          NONE             NONE         1 hour, 53 minutes, 8
seconds
 7    Empty                               NONE             NONE
```

```
 8    Online              SIB F13          NONE             NONE          1 hour, 52 minutes, 57
seconds
 9    Empty                                NONE             NONE
10    Invalid                              NONE             NONE
11    Online              SIB F13          NONE             NONE          1 hour, 52 minutes, 46
seconds
12    Empty                                NONE             NONE
13    Invalid                              NONE             NONE
14    Invalid                              NONE             NONE
15    Invalid                              NONE             NONE
0/0   Spare               SIB F2S          NONE             NONE
0/2   Spare               SIB F2S          NONE             NONE
0/4   Spare               SIB F2S          NONE             NONE
0/6   Spare               SIB F2S          NONE             NONE
1/0   Online              SIB F2S          NONE             NONE          1 hour, 53 minutes, 29
seconds
1/2   Online              SIB F2S          NONE             NONE          1 hour, 53 minutes, 28
seconds
1/4   Online              SIB F2S          NONE             NONE          1 hour, 53 minutes, 27
seconds
1/6   Online              SIB F2S          NONE             NONE          1 hour, 53 minutes, 26
seconds
2/0   Online              SIB F2S          NONE             NONE          1 hour, 53 minutes, 18
seconds
2/2   Online              SIB F2S          NONE             NONE          1 hour, 53 minutes, 17
seconds
2/4   Online              SIB F2S          NONE             NONE          1 hour, 53 minutes, 16
seconds
2/6   Online              SIB F2S          NONE             NONE          1 hour, 53 minutes, 14
seconds
3/0   Online              SIB F2S          NONE             NONE          1 hour, 53 minutes, 7
seconds
3/2   Online              SIB F2S          NONE             NONE          1 hour, 53 minutes, 5
seconds
3/4   Online              SIB F2S          NONE             NONE          1 hour, 53 minutes, 4
seconds
3/6   Online              SIB F2S          NONE             NONE          1 hour, 53 minutes, 3
seconds
4/0   Online              SIB F2S          NONE             NONE          1 hour, 52 minutes, 56
seconds
4/2   Online              SIB F2S          NONE             NONE          1 hour, 52 minutes, 54
seconds
4/4   Online              SIB F2S          NONE             NONE          1 hour, 52 minutes, 53
```

```
seconds
4/6   Online             SIB F2S          NONE             NONE         1 hour, 52 minutes, 52
seconds

lcc0-re0:
--------------------------------------------------------------------------
Slot  State              Link errors  Destination errors  Uptime
 0    Spare                  NONE             NONE
 1    Online                 NONE             NONE         1 hour, 53 minutes, 31 seconds
 2    Online                 NONE             NONE         1 hour, 53 minutes, 27 seconds
 3    Online                 NONE             NONE         1 hour, 53 minutes, 23 seconds
 4    Online                 NONE             NONE         1 hour, 53 minutes, 19 seconds
```

show chassis sibs (TX Matrix Plus Router with 3D SIBs)

```
user@host> show chassis sibs
sfc0-re0:
--------------------------------------------------------------------------
Slot  State              Type          Cable errors  Link errors  Destination errors  Uptime
 0    Online             SIB F13            6           NONE             NONE         21 hours,
54 minutes, 28 seconds
 1    Online             SIB F13            8           NONE             NONE         21 hours,
54 minutes, 12 seconds
 2    Invalid                              NONE         NONE             NONE
 3    Online             SIB F13            6           NONE             NONE         21 hours,
57 minutes, 6 seconds
 4    Online             SIB F13            8            1               NONE         21 hours,
56 minutes, 49 seconds
 5    Invalid                              NONE         NONE             NONE
 6    Online             SIB F13            6           NONE             NONE         21 hours,
56 minutes, 25 seconds
 7    Online             SIB F13            8           NONE             NONE         21 hours,
56 minutes, 8 seconds
 8    Online             SIB F13            6           NONE             NONE         21 hours,
55 minutes, 43 seconds
 9    Online             SIB F13            8           NONE             NONE         21 hours,
55 minutes, 26 seconds
10    Invalid                              NONE         NONE             NONE
11    Empty                                NONE         NONE             NONE
12    Empty                                NONE         NONE             NONE
13    Invalid                              NONE         NONE             NONE
```

```
14    Invalid                          NONE         NONE         NONE
15    Invalid                          NONE         NONE         NONE
0/0   Online            SIB F2S        -n/a-        NONE         NONE         21 hours,
55 minutes, 16 seconds
0/2   Online            SIB F2S        -n/a-        NONE         NONE         21 hours,
54 minutes, 49 seconds
0/4   Online            SIB F2S        -n/a-        NONE         NONE         21 hours,
54 minutes, 47 seconds
0/6   Online            SIB F2S        -n/a-        NONE         NONE         21 hours,
54 minutes, 45 seconds
1/0   Online            SIB F2S        -n/a-        NONE         NONE         21 hours,
57 minutes, 29 seconds
1/2   Online            SIB F2S        -n/a-        NONE         NONE         21 hours,
57 minutes, 27 seconds
1/4   Online            SIB F2S        -n/a-        NONE         NONE         21 hours,
57 minutes, 25 seconds
1/6   Online            SIB F2S        -n/a-        NONE         NONE         21 hours,
57 minutes, 23 seconds
2/0   Online            SIB F2S        -n/a-        NONE         NONE         21 hours,
56 minutes, 48 seconds
2/2   Online            SIB F2S        -n/a-        NONE         NONE         21 hours,
56 minutes, 46 seconds
2/4   Online            SIB F2S        -n/a-        NONE         NONE         21 hours,
56 minutes, 43 seconds
2/6   Online            SIB F2S        -n/a-        NONE         NONE         21 hours,
56 minutes, 41 seconds
3/0   Online            SIB F2S        -n/a-        NONE         NONE         21 hours,
56 minutes, 6 seconds
3/2   Online            SIB F2S        -n/a-        NONE         NONE         21 hours,
56 minutes, 4 seconds
3/4   Online            SIB F2S        -n/a-        NONE         NONE         21 hours,
56 minutes, 2 seconds
3/6   Online            SIB F2S        -n/a-        NONE         NONE         21 hours,
56 minutes
4/0   Online            SIB F2S        -n/a-        NONE         NONE         21 hours,
55 minutes, 24 seconds
4/2   Online            SIB F2S        -n/a-        NONE         NONE         21 hours,
55 minutes, 22 seconds
4/4   Online            SIB F2S        -n/a-        NONE         NONE         21 hours,
55 minutes, 20 seconds
4/6   Online            SIB F2S        -n/a-        NONE         NONE         21 hours,
55 minutes, 18 seconds
```

```
lcc0-re0:
--------------------------------------------------------------------------
Slot  State            Cable errors  Link errors  Destination errors  Uptime
 0    Online                 6           NONE             NONE         21 hours, 47 minutes, 29
seconds
 1    Online                 6           NONE             NONE         21 hours, 47 minutes, 50
seconds
 2    Online                 6           NONE             NONE         21 hours, 47 minutes, 43
seconds
 3    Online                 6           NONE             NONE         21 hours, 47 minutes, 36
seconds
 4    Empty                 NONE         NONE             NONE
use "show chassis fabric fpcs" and "show chassis fabric sibs" for more details

lcc4-re0:
--------------------------------------------------------------------------
Slot  State            Cable errors  Link errors  Destination errors  Uptime
 0    Online                 6           NONE             NONE         21 hours, 57 minutes, 1
second
 1    Online                 6           NONE             NONE         21 hours, 57 minutes, 21
seconds
 2    Online                 6           NONE             NONE         21 hours, 57 minutes, 14
seconds
 3    Online                 6           NONE             NONE         21 hours, 57 minutes, 7
seconds
 4    Empty                 NONE         NONE             NONE
use "show chassis fabric fpcs" and "show chassis fabric sibs" for more details

lcc7-re0:
--------------------------------------------------------------------------
Slot  State            Cable errors  Link errors  Destination errors  Uptime
 0    Online                 2           NONE             NONE         21 hours, 56 minutes, 54
seconds
 1    Online                 2           NONE             NONE         21 hours, 57 minutes, 21
seconds
 2    Online                 2           NONE             NONE         21 hours, 57 minutes, 12
seconds
 3    Online                 2           NONE             NONE         21 hours, 57 minutes, 3
seconds
 4    Empty                 NONE         NONE             NONE
use "show chassis fabric fpcs" and "show chassis fabric sibs" for more details
```

show chassis sibs sfc (TX Matrix Plus Router))

```
user@host> show chassis sibs sfc 0
sfc0-re0:
--------------------------------------------------------------------------
Slot  State              Type          Link errors  Destination errors  Uptime
 0    Spare              SIB F13          NONE             NONE
 1    Empty                               NONE             NONE
 2    Invalid                             NONE             NONE
 3    Online             SIB F13          NONE             NONE         12 hours, 6 minutes, 22
seconds
 4    Empty                               NONE             NONE
 5    Invalid                             NONE             NONE
 6    Online             SIB F13          NONE             NONE         12 hours, 6 minutes, 11
seconds
 7    Empty                               NONE             NONE
 8    Online             SIB F13          NONE             NONE         12 hours, 6 minutes
 9    Empty                               NONE             NONE
10    Invalid                             NONE             NONE
11    Online             SIB F13          NONE             NONE         12 hours, 5 minutes, 49
seconds
12    Empty                               NONE             NONE
13    Invalid                             NONE             NONE
14    Invalid                             NONE             NONE
15    Invalid                             NONE             NONE
0/0   Spare              SIB F2S          NONE             NONE
0/2   Spare              SIB F2S          NONE             NONE
0/4   Spare              SIB F2S          NONE             NONE
0/6   Spare              SIB F2S          NONE             NONE
1/0   Online             SIB F2S          NONE             NONE         12 hours, 6 minutes, 32
seconds
1/2   Online             SIB F2S          NONE             NONE         12 hours, 6 minutes, 31
seconds
1/4   Online             SIB F2S          NONE             NONE         12 hours, 6 minutes, 30
seconds
1/6   Online             SIB F2S          NONE             NONE         12 hours, 6 minutes, 29
seconds
2/0   Online             SIB F2S          NONE             NONE         12 hours, 6 minutes, 21
seconds
2/2   Online             SIB F2S          NONE             NONE         12 hours, 6 minutes, 20
seconds
2/4   Online             SIB F2S          NONE             NONE         12 hours, 6 minutes, 19
```

```
seconds
2/6   Online            SIB F2S         NONE            NONE        12 hours, 6 minutes, 17
seconds
3/0   Online            SIB F2S         NONE            NONE        12 hours, 6 minutes, 10
seconds
3/2   Online            SIB F2S         NONE            NONE        12 hours, 6 minutes, 9
seconds
3/4   Online            SIB F2S         NONE            NONE        12 hours, 6 minutes, 7
seconds
3/6   Online            SIB F2S         NONE            NONE        12 hours, 6 minutes, 6
seconds
4/0   Online            SIB F2S         NONE            NONE        12 hours, 5 minutes, 59
seconds
4/2   Online            SIB F2S         NONE            NONE        12 hours, 5 minutes, 57
seconds
4/4   Online            SIB F2S         NONE            NONE        12 hours, 5 minutes, 56
seconds
4/6   Online            SIB F2S         NONE            NONE        12 hours, 5 minutes, 55
seconds
```

show chassis sibs lcc (TX Matrix Plus Router)

```
user@host> show chassis sibs lcc 0
lcc0-re0:
--------------------------------------------------------------------------
Slot  State             Link errors  Destination errors  Uptime
 0    Online               NONE            NONE         20 hours, 14 minutes, 50 seconds
 1    Fault                NONE            NONE
 2    Online               NONE            NONE         20 hours, 15 minutes, 2 seconds
 3    Online               NONE            NONE         20 hours, 14 minutes, 58 seconds
 4    Online               NONE            NONE         20 hours, 14 minutes, 54 seconds
```

show chassis sibs lcc (TX Matrix Plus Router with 3D SIBs)

```
user@host> show chassis sibs lcc 0
lcc0-re0:
--------------------------------------------------------------------------
Slot  State           Cable errors  Link errors  Destination errors  Uptime
 0    Disconnected         NONE         NONE             NONE         17 hours, 2 minutes, 37
seconds
```

```
 1    Online               NONE         NONE             NONE         17 hours, 3 minutes, 6
seconds
 2    Online               NONE         NONE             NONE         17 hours, 2 minutes, 59
seconds
 3    Online               NONE         NONE             NONE         17 hours, 2 minutes, 52
seconds
 4    Online               NONE         NONE             NONE         17 hours, 2 minutes, 44
seconds
```

show chassis sibs (M320 Router)

```
user@host> show chassis sibs

 0    Online             1 hour, 18 minutes, 3 seconds
 1    Offline            --- Offlined by cli command ---
 2    Online             1 hour, 18 minutes, 18 seconds
 3    Online             1 hour, 18 minutes, 3 seconds
```

show chassis sibs (PTX Series)

```
user@host> show chassis sibs
Slot  State         Fabric links       Errors
0    Online             Active         Asic Errors
1    Online             Active         Link Errors
2    Online             Active         None
3    Online             Active         Cell drops
4    Offline            Unused         None
5    Online             Active         None
6    Online             Active         None
7    Online             Active         None
8    Online             Active         None
```

show chassis sibs (PTX Series)

```
user@host> show chassis sibs detail
Slot 4 information
  State                               Offline
  Reason                              Offlined by cli command
```

```
  Fabric links                    Unused
  Errors                          None
```

show chassis sibs (PTX5000)

The `show chassis sibs` command displays only the non-empty slots.

```
user@host> show chassis sibs
Slot  State         Fabric links    Errors
 1    Online             Unused     None
 2    Online             Unused     None
 3    Online             Unused     None
 4    Online             Unused     None
 6    Fault              Unused     None
 7    Online             Unused     None
```

Release Information

Command introduced before Junos OS Release 7.4.

sfc option introduced for the TX Matrix Plus router in Junos OS Release 9.6.

detail and ***sib-slot*** options introduced for the PTX Packet Transport Router in Junos OS Release 12.1

Command introduced in Junos OS Release 17.2 for PTX10008 Routers.

RELATED DOCUMENTATION

- Monitoring the SIBs
- M320 SIB Description
- Routing Matrix with a TX Matrix Plus Router Solutions Page

show chassis spmb

IN THIS SECTION

- Syntax | 1595
- Syntax (MX Series Routers) | 1595
- Syntax (T4000 Routers) | 1596
- Syntax (TX Matrix Routers) | 1596
- Syntax (TX Matrix Plus Routers) | 1596
- Description | 1596
- Options | 1596
- Required Privilege Level | 1598
- Output Fields | 1598
- Sample Output | 1599
- Release Information | 1610

Syntax

```
show chassis spmb
```

Syntax (MX Series Routers)

```
show chassis spmb
<all-members>
<local>
<member member-id>
```

Syntax (T4000 Routers)

```
show chassis spmb
<sibs>
```

Syntax (TX Matrix Routers)

```
show chassis spmb
<sibs>
<lcc number | scc>
```

Syntax (TX Matrix Plus Routers)

```
show chassis spmb
<sibs>
<lcc number | sfc number>
```

Description

(T Series routers, MX2010, MX2020, and MX2008 routers only) Display Switch Processor Mezzanine Board (SPMB) status information.

Options

none (TX Matrix, TX Matrix Plus router, MX2010, MX2020, and MX2008 routers only) On a TX Matrix router, display SPMB status for the TX Matrix router and its attached T640 routers. On a TX Matrix Plus router, display SPMB status for the TX Matrix Plus router and its attached routers. On MX2010, MX2020, and MX2008 routers, display the SPMB status for the routers.

all-members (MX2010, MX2020, and MX2008 routers only) (Optional) Display status information for the SPMB in all members of the Virtual Chassis configuration.

lcc *number* (TX Matrix and TX Matrix Plus router only) (Optional) On a TX Matrix router, display information about the SPMB on a specified T640 router (line-card chassis) that is connected to the TX Matrix router. On a TX Matrix Plus router, display information about the SPMB on a specified router (line-card chassis) that is connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local (MX2010, MX2020, and MX2008 routers only) (Optional) Display status information for the SPMB in the local member of the Virtual Chassis.

member *member-id* (MX2010, MX2020 , and MX2008 routers only) (Optional) Display status information for the SPMB in the specified member of the Virtual Chassis. Replace *member-id* with the value 0 or 1.

scc (TX Matrix routers only) (Optional) Display information about the SPMB on the TX Matrix router (switch-card chassis).

sfc *number* (TX Matrix Plus router only) (Optional) Display information about the SPMB on the TX Matrix Plus router (switch-fabric chassis). Replace *number* with 0.

sibs (TX Matrix and TX Matrix Plus router only) (Optional) On a TX Matrix Plus router, display information about the SIBs on the TX Matrix router (switch-card chassis). On a TX Matrix Plus router, display information about the SIBs on The TX Matrix Plus router (switch-fabric chassis). The sibs option has the following sub-options:

lcc *number* (TX Matrix, TX Matrix Plus router only) (Optional) On a TX Matrix router, display information about the SIBs on a specified T640 router (line-card chassis) that is connected to the TX Matrix router. On a TX Matrix Plus router, display information about the SIBs on a specified router (line-card chassis) that is connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

`scc` *`number`*—(TX Matrix routers only) (Optional) Display information about the SIBs on the TX Matrix router (switch-card chassis). Replace *`number`* variable with `0`.

`sfc` *`number`*—(TX Matrix Plus router only) (Optional) Display information about the SIBs on the TX Matrix Plus router (switch-fabric chassis). Replace *`number`* variable with `0`.

Required Privilege Level

view

Output Fields

Table 99 on page 1598 lists the output fields for the `show chassis spmb` command. Output fields are listed in the approximate order in which they appear.

Table 99: show chassis spmb Output Fields

Field Name	Field Description
`Slot`	SPMB slot number: `0` or `1`.

Table 99: show chassis spmb Output Fields *(Continued)*

Field Name	Field Description
State	SPMB status: • Online—SPMB is operational and running. • Offline—SPMB is powered down.
Total CPU Utilization (%)	Total percentage of CPU being used by the SPMB processor.
Interrupt CPU Utilization (%)	Of the total CPU being used by the SPMB processor, the percentage being used for interrupts.
Memory Heap Utilization (%)	Percentage of heap space (dynamic memory) being used by the FPC processor. If this number exceeds 80 percent, there may be a software problem (memory leak).
Buffer Utilization (%)	Percentage of buffer space being used by the SPMB processor for buffering internal messages.
Start time	Time at which the SPMB last came online.
Uptime	How long the SPMB has been up and running.

Sample Output

show chassis spmb

```
user@host> show chassis spmb
Slot 0 information:
  State                          Online
  Total CPU Utilization             1%
  Interrupt CPU Utilization         0%
  Memory Heap Utilization           0%
```

```
  Buffer Utilization               40%
  Start time:                     2001-08-27 14:05:04 PDT
  Uptime:                          46 minutes, 36 seconds
```

show chassis spmb (MX2010 Router)

```
user@host> show chassis spmb
Slot 0 information:
  State                           Online
  Total CPU Utilization            12%
  Interrupt CPU Utilization         0%
  Memory Heap Utilization           1%
  Buffer Utilization               22%
  Start time:                     2012-10-04 15:34:29 PDT
  Uptime:                         7 hours, 10 minutes, 15 seconds
Slot 1 information:
  State                           Online - Standby
  Total CPU Utilization             1%
  Interrupt CPU Utilization         0%
  Memory Heap Utilization           0%
  Buffer Utilization               22%
  Start time:                     2012-10-02 14:34:54 PDT
  Uptime:                         2 days, 8 hours, 9 minutes, 50 seconds
```

show chassis spmb (MX2020 Router)

```
user@host> show chassis spmb
Slot 0 information:
  State                           Online
  Total CPU Utilization           100%
  Interrupt CPU Utilization         0%
  Memory Heap Utilization           3%
  Buffer Utilization               22%
  Start time:                     2012-10-03 14:58:26 PDT
  Uptime:                         1 day, 12 hours, 16 minutes, 14 seconds
Slot 1 information:
  State                           Online - Standby
  Total CPU Utilization             0%
  Interrupt CPU Utilization         0%
  Memory Heap Utilization           0%
```

```
  Buffer Utilization               22%
  Start time:                   2012-10-03 14:58:27 PDT
  Uptime:                       1 day, 12 hours, 16 minutes, 13 seconds
```

show chassis spmb (MX2008 Router)

```
user@host> show chassis spmb
Slot 0 information:
  State                         Online
  Start time:                   2017-05-04 02:53:36 PDT
  Uptime:                       10 days, 7 hours, 1 minute, 14 seconds
Slot 1 information:
  State                         Online - Standby
  Start time:                   2017-05-04 02:53:36 PDT
  Uptime:                       10 days, 7 hours, 1 minute, 14 seconds
```

show chassis spmb (T4000 Router)

```
user@host> show chassis spmb

Slot 0 information:
  State                         Online
  Total CPU Utilization           18%
  Interrupt CPU Utilization        0%
  Memory Heap Utilization          0%
  Buffer Utilization              22%
  Start time:                   2012-02-09 22:51:09 PST
  Uptime:                       2 hours, 25 minutes, 45 seconds
Slot 1 information:
  State                         Online - Standby
  Total CPU Utilization            0%
  Interrupt CPU Utilization        0%
  Memory Heap Utilization          0%
  Buffer Utilization              22%
  Start time:                   2012-02-09 22:51:10 PST
  Uptime:                       2 hours, 25 minutes, 44 seconds
```

show chassis spmb lcc (TX Matrix Router)

```
user@host> show chassis spmb lcc 0
lcc0-re0:
--------------------------------------------------------------------------
Slot 0 information:
  State                          Online
  Total CPU Utilization             0%
  Interrupt CPU Utilization         0%
  Memory Heap Utilization           0%
  Buffer Utilization               42%
  Start time:                    2004-08-05 18:43:38 PDT
  Uptime:                        8 days, 55 minutes, 52 seconds
```

show chassis spmb scc (TX Matrix Router)

```
user@host> show chassis spmb scc
scc-re0:
--------------------------------------------------------------------------
Slot 0 information:
  State                          Online
  Total CPU Utilization             1%
  Interrupt CPU Utilization         0%
  Memory Heap Utilization           0%
  Buffer Utilization               42%
  Start time:                    2004-08-05 18:43:37 PDT
  Uptime:                        8 days, 1 hour, 6 minutes, 51 seconds
```

show chassis spmb (T1600 Router)

```
user@host> show chassis spmb
Slot 0 information:
  State                          Online
  Total CPU Utilization             2%
  Interrupt CPU Utilization         0%
  Memory Heap Utilization           0%
  Buffer Utilization               24%
  Start time:                    2009-05-07 22:34:03 PDT
  Uptime:                        3 days, 4 hours, 14 minutes, 33 seconds
```

```
Slot 1 information:
  State                          Online - Standby
  Total CPU Utilization             0%
  Interrupt CPU Utilization         0%
  Memory Heap Utilization           0%
  Buffer Utilization               24%
  Start time:                    2009-05-07 22:34:02 PDT
  Uptime:                        3 days, 4 hours, 14 minutes, 34 seconds
```

show chassis spmb sibs (T1600 Router)

```
user@host> show chassis spmb sibs
Slot  State               Uptime
 0    Check              3 days, 4 hours, 11 minutes, 59 seconds
 1    Disconnected       3 days, 4 hours, 12 minutes, 36 seconds
 2    Disconnected       3 days, 4 hours, 12 minutes, 26 seconds
 3    Disconnected       3 days, 4 hours, 12 minutes, 17 seconds
 4    Disconnected       3 days, 4 hours, 12 minutes, 8 seconds
```

show chassis spmb (TX Matrix Plus Router)

```
user@host> show chassis spmb
sfc0-re0:
--------------------------------------------------------------------------
Slot 0 information:
  State                          Online
  Total CPU Utilization            84%
  Interrupt CPU Utilization         0%
  Memory Heap Utilization           0%
  Buffer Utilization               24%
  Start time:                    2009-05-11 01:25:20 PDT
  Uptime:                        46 minutes, 6 seconds
Slot 1 information:
  State                          Online - Standby
  Total CPU Utilization             0%
  Interrupt CPU Utilization         0%
  Memory Heap Utilization           0%
  Buffer Utilization               24%
  Start time:                    2009-05-11 01:25:20 PDT
  Uptime:                        46 minutes, 6 seconds
```

```
lcc0-re1:
--------------------------------------------------------------------------
Slot 0 information:
  State                          Online - Standby
  Total CPU Utilization             0%
  Interrupt CPU Utilization         0%
  Memory Heap Utilization           0%
  Buffer Utilization               24%
  Start time:                    2009-05-11 01:25:09 PDT
  Uptime:                        46 minutes, 24 seconds
Slot 1 information:
  State                          Online
  Total CPU Utilization             5%
  Interrupt CPU Utilization         0%
  Memory Heap Utilization           0%
  Buffer Utilization               24%
  Start time:                    2009-05-11 01:25:08 PDT
  Uptime:                        46 minutes, 25 seconds

lcc1-re1:
--------------------------------------------------------------------------
Slot 0 information:
  State                          Online - Standby
  Total CPU Utilization             1%
  Interrupt CPU Utilization         0%
  Memory Heap Utilization           0%
  Buffer Utilization               24%
  Start time:                    2009-05-11 01:25:09 PDT
  Uptime:                        46 minutes, 24 seconds
Slot 1 information:
  State                          Online
  Total CPU Utilization             5%
  Interrupt CPU Utilization         0%
  Memory Heap Utilization           0%
  Buffer Utilization               24%
  Start time:                    2009-05-11 01:25:10 PDT
  Uptime:                        46 minutes, 23 seconds

lcc2-re1:
--------------------------------------------------------------------------
Slot 0 information:
  State                          Online - Standby
```

```
  Total CPU Utilization             0%
  Interrupt CPU Utilization         0%
  Memory Heap Utilization           0%
  Buffer Utilization               24%
  Start time:                    2009-05-11 01:25:08 PDT
  Uptime:                        46 minutes, 25 seconds
Slot 1 information:
  State                          Online
  Total CPU Utilization             5%
  Interrupt CPU Utilization         0%
  Memory Heap Utilization           0%
  Buffer Utilization               24%
  Start time:                    2009-05-11 01:25:10 PDT
  Uptime:                        46 minutes, 23 seconds

lcc3-re1:
--------------------------------------------------------------------------
Slot 0 information:
  State                          Online - Standby
  Total CPU Utilization             1%
  Interrupt CPU Utilization         0%
  Memory Heap Utilization           0%
  Buffer Utilization               24%
  Start time:                    2009-05-11 01:25:10 PDT
  Uptime:                        46 minutes, 23 seconds
Slot 1 information:
  State                          Online
  Total CPU Utilization             5%
  Interrupt CPU Utilization         0%
  Memory Heap Utilization           0%
  Buffer Utilization               24%
  Start time:                    2009-05-11 01:25:09 PDT
  Uptime:                        46 minutes, 24 seconds
```

show chassis spmb lcc (TX Matrix Plus Router)

```
user@host> show chassis spmb lcc 2
lcc2-re1:
--------------------------------------------------------------------------
Slot 0 information:
  State                          Online - Standby
```

```
  Total CPU Utilization             0%
  Interrupt CPU Utilization         0%
  Memory Heap Utilization           0%
  Buffer Utilization               24%
  Start time:                   2009-05-11 01:25:08 PDT
  Uptime:                       45 minutes, 18 seconds
Slot 1 information:
  State                         Online
  Total CPU Utilization             6%
  Interrupt CPU Utilization         0%
  Memory Heap Utilization           0%
  Buffer Utilization               24%
  Start time:                   2009-05-11 01:25:10 PDT
  Uptime:                       45 minutes, 16 seconds
```

show chassis spmb scc (TX Matrix Plus Router)

```
user@host> show chassis spmb sfc 0
sfc0-re0:
--------------------------------------------------------------------------
Slot 0 information:
  State                         Online
  Total CPU Utilization           87%
  Interrupt CPU Utilization        0%
  Memory Heap Utilization          0%
  Buffer Utilization              24%
  Start time:                   2009-05-11 01:25:20 PDT
  Uptime:                       43 minutes, 32 seconds
Slot 1 information:
  State                         Online - Standby
  Total CPU Utilization             0%
  Interrupt CPU Utilization         0%
  Memory Heap Utilization           0%
  Buffer Utilization               24%
  Start time:                   2009-05-11 01:25:20 PDT
  Uptime:                       43 minutes, 32 seconds
```

show chassis spmb sibs (TX Matrix Plus Router)

```
user@host> show chassis spmb sibs
sfc0-re0:
--------------------------------------------------------------------------
Slot  State              Type          Uptime
 0    Online             SIB F13        1 hour, 18 minutes, 54 seconds
 1    Online             SIB F13        1 hour, 18 minutes, 45 seconds
 2    Invalid
 3    Online             SIB F13        1 hour, 20 minutes, 21 seconds
 4    Online             SIB F13        1 hour, 20 minutes, 18 seconds
 5    Invalid
 6    Online             SIB F13        1 hour, 19 minutes, 51 seconds
 7    Fault              SIB F13
 8    Online             SIB F13        1 hour, 19 minutes, 17 seconds
 9    Online             SIB F13        1 hour, 19 minutes, 13 seconds
10    Invalid
11    Online             SIB F13        1 hour, 17 minutes, 54 seconds
12    Online             SIB F13        1 hour, 17 minutes, 51 seconds
13    Invalid
14    Invalid
15    Invalid
0/0   Online             SIB F2S        1 hour, 18 minutes, 52 seconds
0/2   Online             SIB F2S        1 hour, 18 minutes, 51 seconds
0/4   Online             SIB F2S        1 hour, 18 minutes, 49 seconds
0/6   Online             SIB F2S        1 hour, 18 minutes, 48 seconds
1/0   Online             SIB F2S        1 hour, 20 minutes, 16 seconds
1/2   Online             SIB F2S        1 hour, 20 minutes, 15 seconds
1/4   Online             SIB F2S        1 hour, 20 minutes, 14 seconds
1/6   Online             SIB F2S        1 hour, 20 minutes, 13 seconds
2/0   Online             SIB F2S        1 hour, 19 minutes, 48 seconds
2/2   Online             SIB F2S        1 hour, 19 minutes, 47 seconds
2/4   Online             SIB F2S        1 hour, 19 minutes, 46 seconds
2/6   Online             SIB F2S        1 hour, 19 minutes, 44 seconds
3/0   Online             SIB F2S        1 hour, 19 minutes, 24 seconds
3/2   Online             SIB F2S        1 hour, 19 minutes, 22 seconds
3/4   Online             SIB F2S        1 hour, 19 minutes, 21 seconds
3/6   Online             SIB F2S        1 hour, 19 minutes, 20 seconds
4/0   Online             SIB F2S        1 hour, 18 minutes, 2 seconds
4/2   Online             SIB F2S        1 hour, 18 minutes
4/4   Online             SIB F2S        1 hour, 17 minutes, 58 seconds
4/6   Online             SIB F2S        1 hour, 17 minutes, 58 seconds
```

```
lcc0-re1:
--------------------------------------------------------------------------
Slot  State               Uptime
 0    Online             1 hour, 18 minutes, 58 seconds
 1    Online             1 hour, 20 minutes, 25 seconds
 2    Fault
 3    Online             1 hour, 18 minutes, 30 seconds
 4    Online             1 hour, 18 minutes, 28 seconds

lcc1-re1:
--------------------------------------------------------------------------
Slot  State               Uptime
 0    Online             1 hour, 18 minutes, 58 seconds
 1    Online             1 hour, 20 minutes, 26 seconds
 2    Fault
 3    Online             1 hour, 18 minutes, 22 seconds
 4    Online             1 hour, 18 minutes, 20 seconds

lcc2-re1:
--------------------------------------------------------------------------
Slot  State               Uptime
 0    Online             1 hour, 18 minutes, 19 seconds
 1    Online             1 hour, 20 minutes, 25 seconds
 2    Fault
 3    Online             1 hour, 18 minutes, 17 seconds
 4    Online             1 hour, 18 minutes, 15 seconds

lcc3-re1:
--------------------------------------------------------------------------
Slot  State               Uptime
 0    Online             1 hour, 18 minutes, 27 seconds
 1    Online             1 hour, 20 minutes, 24 seconds
 2    Fault
 3    Online             1 hour, 18 minutes, 25 seconds
 4    Online             1 hour, 18 minutes, 23 seconds
```

show chassis spmb lcc (TX Matrix Plus router with 3D SIBs)

```
user@host > show chassis spmb lcc 0
lcc0-re1:
```

```
---------------------------------------------------------------------------
Slot 0 information:
  State                          Online - Standby
  Total CPU Utilization             0%
  Interrupt CPU Utilization         0%
  Memory Heap Utilization           0%
  Buffer Utilization                0%
  Start time:                    2013-02-08 00:57:20 PST
  Uptime:                        19 minutes, 43 seconds
Slot 1 information:
  State                          Online
  Total CPU Utilization             0%
  Interrupt CPU Utilization         0%
  Memory Heap Utilization           0%
  Buffer Utilization               22%
  Start time:                    2013-02-08 00:56:59 PST
  Uptime:                        20 minutes, 4 seconds
```

show chassis spmb sfc (TX Matrix Plus router with 3D SIBs)

```
user@host> show chassis spmb sfc o
sfc0-re0:
---------------------------------------------------------------------------
Slot 0 information:
  State                          Online
  Total CPU Utilization             0%
  Interrupt CPU Utilization         0%
  Memory Heap Utilization           0%
  Buffer Utilization                0%
  Start time:                    2013-02-06 19:16:55 PST
  Uptime:                        1 day, 6 hours, 2 minutes, 59 seconds
Slot 1 information:
  State                          Online - Standby
  Total CPU Utilization             0%
  Interrupt CPU Utilization         0%
  Memory Heap Utilization           0%
  Buffer Utilization                0%
  Start time:                    2013-02-06 19:16:53 PST
  Uptime:                        1 day, 6 hours, 3 minutes, 1 second
```

Release Information

Command introduced before Junos OS Release 7.4.

`sibs` option introduced for the T1600 and TX Matrix Plus routers in Junos OS Release 9.6.

`all-members`, `local`, and `member` *`member-id`* options introduced in Junos OS Release 15.1 for MX2020 and MX2010 routers.

RELATED DOCUMENTATION

request chassis sib | **460**

request chassis spmb restart | **464**

show chassis spmb sibs | **1610**

show chassis spmb sibs

IN THIS SECTION

- Syntax | **1611**
- Syntax (TX Matrix Router) | **1611**
- Syntax (TX Matrix Plus Router) | **1611**
- Description | **1611**
- Options | **1611**
- Additional Information | **1612**
- Required Privilege Level | **1612**
- Output Fields | **1612**
- Sample Output | **1615**
- Release Information | **1618**

Syntax

```
show chassis spmb sibs
```

Syntax (TX Matrix Router)

```
show chassis spmb sibs
<lcc number | scc>
```

Syntax (TX Matrix Plus Router)

```
show chassis spmb sibs
<lcc number | sfc number>
```

Description

(T Series routers only) Display Switch Processor Mezzanine Board (SPMB) Switch Interface Board (SIB) status information.

Options

none (TX Matrix and TX Matrix Plus routers only) On a TX Matrix router, display the SIB status for the TX Matrix router and its attached T640 routers. On a TX Matrix Plus router, display the SIB status for the TX Matrix Plus router and its attached routers.

lcc *number* (TX Matrix and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display SIB status information for a specified T640 router (line-card chassis) that is connected to a TX Matrix router. On a TX Matrix Plus router, display SIB status information for a specified router (line-card chassis) that is connected to a TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

scc (TX Matrix router only) (Optional) Display SIB status information for the TX Matrix router (switch-card chassis).

sfc (TX Matrix Plus router only) (Optional) Display SIB status information for the TX Matrix Plus router (or switch-fabric chassis).

Additional Information

On a T Series router, you can use either this command or the `show chassis sibs` command to produce the same output. The `show chassis sibs` command is supported on the M320 router and on the T Series routers.

Required Privilege Level

view

Output Fields

Table 100 on page 1613 lists the output fields for the `show chassis spmb sibs` command. Output fields are listed in the approximate order in which they appear.

Table 100: show chassis spmb sibs Output Fields

Field Name	Field Description

Slot	SIB slot number:
	• T640 router, T1600 router or TX Matrix router—**0** through **4**
	• TX Matrix Plus router:
	  • TXP-F13 SIB Slots—**0** through **16**
	  • TXP-F2S SIB Slots —**0** – **4**/[**0**|**2**|**4**|**6**]
	• T320 router—**0** through **2**

Table 100: show chassis spmb sibs Output Fields *(Continued)*

Field Name	Field Description

State	SIB status:
	• **Disconnected**—SIBs on all T640 routers on the TX Matrix router (switch-card chassis) are in the **Disconnected** state, because a SIB on the SCC has gone offline. Likewise, SIBs on all T1600 or T4000 routers on the TX Matrix Plus router (or switch-fabric chassis) are in the **Disconnected** state, because a SIB on the SFC has gone offline.
	• **Online**—SPMB is operational and running.
	• **Offline**—SPMB is powered down.
	• **Spare**—SIB is redundant and will move to active state if one of the working SIBs fail to pass traffic.
	• **Empty**—No SPMB is present.
	• **Fault**— SIB is in alarmed state where the SIB's plane is not operational for the following reasons:
	  • On-board F-chip is not operational.
	  • Fiber optic connector faults.
	  • FPC connector faults.
	  • SIB midplane connector faults.
	• **Check**—SIB is in alarmed state where the SIB's plane is partially operational for the following reasons:
	  • SIB is not inserted properly.
	  • Two or more links between the SIB and PFE fails.

Uptime	How long the SIB has been up and running.

Sample Output

show chassis spmb sibs (T320 Router)

```
user@host> show chassis spmb sibs
Slot  State
 0    Spare
 1    Online
 2    Online
```

show chassis-spmb-sibs (T1600 Router)

```
user@host> show chassis spmb sibs
Slot  State
 0    Spare
 1    Online
 2    Empty
 3    Online
 4    Offline
```

show chassis spmb sibs (T4000 Router)

```
user@host> show chassis spmb sibs

Slot  State                          Uptime
 0    Spare
 1    Online                         2 hours, 28 minutes, 13 seconds
 2    Online                         2 hours, 27 minutes, 57 seconds
 3    Online                         2 hours, 27 minutes, 40 seconds
 4    Online                         2 hours, 27 minutes, 24 seconds
```

show chassis spmb sibs (TX Matrix Router)

```
user@host> show chassis spmb sibs
Slot  State
 0    Online
 1    Online
```

```
 2    Empty
 3    Online
 4    Offline
```

show chassis spmb sibs lcc (TX Matrix Router)

```
user@host> show chassis spmb sibs lcc 0
lcc0-re0:
--------------------------------------------------------------------------
Slot  State               Uptime
 0    Empty
 1    Empty
 2    Empty
 3    Disconnected           8 days, 48 minutes, 58 seconds
 4    Online                 8 days, 48 minutes, 57 seconds
```

show chassis spmb sibs scc (TX Matrix Router)

```
user@host> show chassis spmb sibs scc
scc-re0:
--------------------------------------------------------------------------
Slot  State                         Uptime
 0    Empty
 1    Empty
 2    Empty
 3    Offline
 4    Online             8 days, 54 minutes, 1 second
```

show chassis spmb sibs (TX Matrix Plus Router)

```
user@host> show chassis spmb sibs
sfc0-re0:
--------------------------------------------------------------------------
Slot  State              Type          Uptime
 0    Online             SIB F13        1 hour, 52 minutes, 55 seconds
 1    Empty
 2    Invalid
 3    Online             SIB F13        1 hour, 53 minutes, 3 seconds
```

```
 4    Empty
 5    Invalid
 6    Empty
 7    Empty
 8    Empty
 9    Empty
10    Invalid
11    Empty
12    Empty
13    Invalid
14    Invalid
15    Invalid
0/0   Online            SIB F2S       1 hour, 53 minutes, 2 seconds
0/2   Online            SIB F2S       1 hour, 53 minutes, 1 second
0/4   Online            SIB F2S       1 hour, 52 minutes, 59 seconds
0/6   Online            SIB F2S       1 hour, 52 minutes, 58 seconds
1/0   Online            SIB F2S       1 hour, 53 minutes, 10 seconds
1/2   Online            SIB F2S       1 hour, 53 minutes, 8 seconds
1/4   Online            SIB F2S       1 hour, 53 minutes, 7 seconds
1/6   Online            SIB F2S       1 hour, 53 minutes, 6 seconds
2/0   Empty
2/2   Empty
2/4   Empty
2/6   Empty
3/0   Empty
3/2   Empty
3/4   Empty
3/6   Empty
4/0   Empty
4/2   Empty
4/4   Empty
4/6   Empty

lcc0-re0:
--------------------------------------------------------------------------
Slot  State               Uptime
 0    Online            1 hour, 53 minutes, 1 second
 1    Online            1 hour, 53 minutes, 3 seconds
 2    Empty
 3    Empty
 4    Empty

lcc1-re1:
```

```
------------------------------------------------------------------------
Slot  State               Uptime
 0    Online             1 hour, 47 minutes, 13 seconds
 1    Online             1 hour, 47 minutes, 15 seconds
 2    Empty
 3    Empty
 4    Empty
```

show chassis spmb sibs sfc (TX Matrix Plus Router)

```
user@host> show chassis spmb sibs sfc 0
sfc0-re0:
------------------------------------------------------------------------
Slot 0 information:
  State                          Online
  Total CPU Utilization            16%
  Interrupt CPU Utilization         0%
  Memory Heap Utilization           0%
  Buffer Utilization               24%
  Start time:                    2009-06-17 20:59:47 PDT
  Uptime:                        1 hour, 56 minutes, 30 seconds
Slot 1 information:
  State                          Online - Standby
  Total CPU Utilization             0%
  Interrupt CPU Utilization         0%
  Memory Heap Utilization           0%
  Buffer Utilization               24%
  Start time:                    2009-06-17 20:59:48 PDT
  Uptime:                        1 hour, 56 minutes, 29 seconds
```

Release Information

Command introduced before Junos OS Release 7.4.

sfc option introduced for the TX Matrix Plus router in Junos OS Release 9.6.

RELATED DOCUMENTATION

show chassis sibs | 1577

request chassis sib | 460

request chassis spmb restart | 464

show chassis temperature-thresholds

IN THIS SECTION

- Syntax | 1619
- Syntax (TX Matrix Routers) | 1620
- Syntax (TX Matrix Plus Routers) | 1620
- Syntax (MX Series Routers) | 1620
- Syntax (QFX Series) | 1620
- Description | 1620
- Options | 1621
- Required Privilege Level | 1622
- Output Fields | 1622
- Sample Output | 1624
- Release Information | 1647

Syntax

```
show chassis temperature-thresholds
```

Syntax (TX Matrix Routers)

```
show chassis temperature-thresholds
<lcc number | scc>
```

Syntax (TX Matrix Plus Routers)

```
show chassis temperature-thresholds
<lcc number | sfc number>
```

Syntax (MX Series Routers)

```
show chassis temperature-thresholds
<all-members>
<local>
<member member-id>
<satellite [slot-id slot-ID |device-alias alias-name]>
```

Syntax (QFX Series)

```
show chassis temperature-thresholds
<interconnect-device name>
<node-device name>
```

Description

Display chassis temperature threshold settings, in degrees Celsius.

Options

none — Display the temperature threshold details.

all-members — (MX Series routers only) (Optional) Display the chassis temperature threshold settings of all member routers in the Virtual Chassis configuration.

interconnect-device *name* — (QFabric systems only) (Optional) Display the chassis temperature threshold settings of the Interconnect device.

lcc *number* — (TX Matrix and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display the temperature threshold details of a specified T640 router (line-card chassis) that is connected to a TX Matrix router. On a TX Matrix Plus router, display the temperature threshold details of a specified router (line-card chassis) that is connected to a TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local — (MX Series routers only) (Optional) Display the chassis temperature threshold settings of the local Virtual Chassis member.

member *member-id* — (MX Series routers only) (Optional) Display the chassis temperature threshold settings of the specified member of the Virtual Chassis configuration. Replace *member-id* with a value of 0 or 1.

node-device *name* — (QFabric systems only) (Optional) Display the chassis temperature threshold settings of the Node device.

satellite [slot-id *slot-ID* **| device-alias** *alias-name***]** — (Junos Fusion only) (Optional) Display the chassis temperature threshold settings for the specified satellite device or devices in a Junos Fusion, or for all satellite devices if no satellite devices are specified.

scc	(TX Matrix routers only) (Optional) Display the temperature threshold details of the TX Matrix router (switch-card chassis).
sfc *number*	(TX Matrix Plus routers only) (Optional) On TX Matrix Plus routers, display the temperature threshold details of the TX Matrix Plus router, which is the switch-fabric chassis. Replace *number* with 0.

Required Privilege Level

view

Output Fields

Table 101 on page 1622 lists the output fields for the `show chassis temperature-thresholds` command. Output fields are listed in the approximate order in which they appear.

Table 101: show chassis temperature-thresholds Output Fields

Field name	Field Description
Item	Chassis component. If per FRU per slot thresholds are configured, the components about which information is displayed include the chassis, the Routing Engines, CPUs, FPCs, and FEBs. If per FRU per slot thresholds are not configured, the components about which information is displayed include the chassis and the Routing Engines.

Table 101: show chassis temperature-thresholds Output Fields *(Continued)*

Field name	Field Description
Fan speed	**NOTE**: On the QFX3500 switch and QFX3600 switch, there are four fan speeds: `low`, `medium-low`, `medium-high`, and `high`. The fan speed changes at the threshold when going from a low speed to a higher speed. When the fan speed changes from a higher speed to a lower speed, the temperature changes two degrees below the threshold. Temperature threshold settings, in degrees Celsius, for the fans to operate at normal and high speeds. • Normal—The fans operate at normal speed if the component is at or below this temperature and all the fans are present and functioning normally. **NOTE**: On a TX Matrix Plus router with 3D SIBs, the threshold temperature at the XF junction is set to 70°C for `Normal` fan speed, which is less than or equal to 4800 RPM. • High—The fans operate at high speed if the component has exceeded this temperature or a fan has failed or is missing. **NOTE**: On a TX Matrix Plus router with 3D SIBs, the threshold temperature at the XF junction is set to 75°C for `High` fan speed, which is greater than or equal to 5000 RPM. **NOTE**: For MX480 Routers, there are three fan speeds: Low, Medium, and High. An alarm is not triggered until the temperature exceeds the threshold settings for a yellow alarm or a red alarm.
Yellow alarm	Temperature threshold settings, in degrees Celsius, that trigger a yellow alarm. • Normal—The temperature that must be exceeded on the component to trigger a yellow alarm when the fans are running at full speed. • Bad fan—The temperature that must be exceeded on the component to trigger a yellow alarm when one or more fans have failed or are missing.
Red alarm	Temperature threshold settings, in degrees Celsius, that trigger a red alarm. • Normal—The temperature that must be exceeded on the component to trigger a red alarm when the fans are running at full speed. • Bad fan—The temperature that must be exceeded on the component to trigger a red alarm when one or more fans have failed or are missing.

Table 101: show chassis temperature-thresholds Output Fields *(Continued)*

Field name	Field Description
Fire Shutdown	(T4000 routers, TX Matrix Plus router with 3D SIBs, and PTX Series Packet Transport Routers only)—Temperature threshold settings, in degrees Celsius, for the network device to shut down.

Sample Output

show chassis temperature-thresholds

```
user@host> show chassis temperature-thresholds

                        Fan speed        Yellow alarm        Red alarm
                       (degrees C)       (degrees C)       (degrees C)
Item                   Normal   High    Normal   Bad fan    Normal   Bad fan
Chassis default            48     54        65        55        75        65
Routing Engine 0           70     80        95        95       110       110
Routing Engine 1           70     80        95        95       110       110
FPC 0                      55     60        75        65        90        80
FPC 1                      55     60        75        65        90        80
FPC 2                      55     60        75        65        90        80
FPC 3                      55     60        75        65        90        80
FPC 4                      55     60        75        65        90        80
FPC 5                      55     60        75        65        90        80
FPC 6                      55     60        75        65        90        80
FPC 7                      55     60        75        65        90        80
FPC 8                      55     60        75        65        90        80
FPC 9                      55     60        75        65        90        80
FPC 10                     55     60        75        65        90        80
FPC 11                     55     60        75        65        90        80
```

show chassis temperature-thresholds (MX150)

```
user@host> show chassis temperature-thresholds
Fan speed      Yellow alarm      Red alarm      Fire Shutdown
```

```
                          (degrees C)      (degrees C)     (degrees C)      (degrees C)
Item                    Normal  High   Normal  Bad fan   Normal  Bad fan     Normal
FPC 0 Sensor 1              43    65       68       68       70       70       72
FPC 0 Sensor 2              43    65       68       68       70       70       72
FPC 0 Coretemp              78    94      100      100      105      105      110
```

show chassis temperature-thresholds (MX104 Router)

```
user@host> show chassis temperature-thresholds
                            Fan speed      Yellow alarm      Red alarm      Fire Shutdown
                          (degrees C)      (degrees C)     (degrees C)      (degrees C)
Item                    Normal  High   Normal  Bad fan   Normal  Bad fan     Normal
Chassis default             48    54       65       55       75       65      100
Routing Engine 0            55    80       95       95      105      100      108
```

show chassis temperature-thresholds (MX240, MX480, MX960 Routers with Application Services Modular Line Card)

```
user@host> show chassis temperature-thresholds
Fan speed      Yellow alarm      Red alarm      Fire Shutdown
                          (degrees C)      (degrees C)     (degrees C)      (degrees C)
Item                    Normal  High   Normal  Bad fan   Normal  Bad fan     Normal
Chassis default             48    54       65       55       75       65      100
Routing Engine 0            70    80       95       95      110      110      112
Routing Engine 1            70    80       95       95      110      110      112
FPC 0                       55    60       75       65       90       80       95
FPC 1                       55    60       75       65       90       80       95
FPC 2                       55    60       75       65       90       80       95
FPC 4                       55    60       75       65       90       80       95
FPC 5                       55    60       75       65       90       80       95
```

show chassis temperature-thresholds (MX480 Router with MPC4E)

```
user@ host> show chassis temperature-thresholds
                            Fan speed      Yellow alarm      Red alarm      Fire Shutdown
                          (degrees C)      (degrees C)     (degrees C)      (degrees C)
Item                    Normal  High   Normal  Bad fan   Normal  Bad fan     Normal
Chassis default             48    54       65       55       75       65      100
```

```
Routing Engine 0              70    80       95       95      110      110      112
Routing Engine 1              70    80       95       95      110      110      112
FPC 2                         55    60       75       65       95       80      100
FPC 3                         55    60       75       65       95       80      100
FPC 4                         55    60       75       65       90       80       95
```

show chassis temperature-thresholds (MX2010 Router with MPC7E, MPC8E, and MPC9E)

```
user@ host> show chassis temperature-thresholds
                                    Fan speed      Yellow alarm      Red alarm      Fire
Shutdown
                                   (degrees C)     (degrees C)     (degrees C)
(degrees C)
Item                              Normal  High   Normal  Bad fan   Normal  Bad fan     Normal

FPC 3 Intake                          53    59       72       67       80       75         85
FPC 3 Exhaust A                       77    85       98       93      103       98        108
FPC 3 Exhaust B                       54    62       80       75      103       98        108
FPC 3 EA0 Chip                        64    72       90       90      100      100        105
FPC 3 EA0_XR0 Chip                    79    87      102      102      106      106        108
FPC 3 EA0_XR1 Chip                    79    87      102      102      106      106        108
FPC 3 EA1 Chip                        64    72       90       90      100      100        105
FPC 3 EA1_XR0 Chip                    79    87      102      102      106      106        108
FPC 3 EA1_XR1 Chip                    79    87      102      102      106      106        108
FPC 3 PEX Chip                        74    82      100      100      105      105        110
FPC 3 EA2 Chip                        64    72       90       90      100      100        105
FPC 3 EA2_XR0 Chip                    79    87      102      102      106      106        108
FPC 3 EA2_XR1 Chip                    79    87      102      102      106      106        108
FPC 3 EA3 Chip                        64    72       90       90      100      100        105
FPC 3 EA3_XR0 Chip                    79    87      102      102      106      106        108
FPC 3 EA3_XR1 Chip                    79    87      102      102      106      106        108
FPC 3 EA0_HMC0 Logic die              81    89      103      103      107      107        111
FPC 3 EA0_HMC0 DRAM botm              76    84       98       98      102      102        106
FPC 3 EA0_HMC1 Logic die              81    89      103      103      107      107        111
FPC 3 EA0_HMC1 DRAM botm              76    84       98       98      102      102        106
FPC 3 EA0_HMC2 Logic die              81    89      103      103      107      107        111
FPC 3 EA0_HMC2 DRAM botm              76    84       98       98      102      102        106
FPC 3 EA1_HMC0 Logic die              81    89      103      103      107      107        111
FPC 3 EA1_HMC0 DRAM botm              76    84       98       98      102      102        106
FPC 3 EA1_HMC1 Logic die              81    89      103      103      107      107        111
FPC 3 EA1_HMC1 DRAM botm              76    84       98       98      102      102        106
```

FPC 3 EA1_HMC2 Logic die	81	89	103	103	107	107	111
FPC 3 EA1_HMC2 DRAM botm	76	84	98	98	102	102	106
FPC 3 EA2_HMC0 Logic die	81	89	103	103	107	107	111
FPC 3 EA2_HMC0 DRAM botm	76	84	98	98	102	102	106
FPC 3 EA2_HMC1 Logic die	81	89	103	103	107	107	111
FPC 3 EA2_HMC1 DRAM botm	76	84	98	98	102	102	106
FPC 3 EA2_HMC2 Logic die	81	89	103	103	107	107	111
FPC 3 EA2_HMC2 DRAM botm	76	84	98	98	102	102	106
FPC 3 EA3_HMC0 Logic die	81	89	103	103	107	107	111
FPC 3 EA3_HMC0 DRAM botm	76	84	98	98	102	102	106
FPC 3 EA3_HMC1 Logic die	81	89	103	103	107	107	111
FPC 3 EA3_HMC1 DRAM botm	76	84	98	98	102	102	106
FPC 3 EA3_HMC2 Logic die	81	89	103	103	107	107	111
FPC 3 EA3_HMC2 DRAM botm	76	84	98	98	102	102	106
FPC 4 Intake	46	55	65	60	81	76	90
FPC 4 Exhaust A	61	70	80	75	100	95	110
FPC 4 Exhaust B	61	70	80	75	95	90	105
FPC 4 EA0 Chip	86	95	105	100	117	112	123
FPC 4 EA0_XR0 Chip	86	95	105	100	110	105	116
FPC 4 EA0_XR1 Chip	86	95	105	100	115	110	121
FPC 4 EA1 Chip	86	95	105	100	117	112	123
FPC 4 EA1_XR0 Chip	86	95	105	100	110	105	116
FPC 4 EA1_XR1 Chip	86	95	105	100	115	110	121
FPC 4 PCIE_SW Chip	81	90	105	100	115	110	121
FPC 4 EA0_HMC0 DRAM botm	86	95	105	100	115	110	121
FPC 4 EA0_HMC1 DRAM botm	86	95	105	100	115	110	121
FPC 4 EA1_HMC0 DRAM botm	86	95	105	100	115	110	121
FPC 4 EA1_HMC1 DRAM botm	86	95	105	100	115	110	121
FPC 7 Intake	53	59	72	67	80	75	85
FPC 7 Exhaust A	77	85	98	93	103	98	108
FPC 7 Exhaust B	54	62	80	75	103	98	108
FPC 7 EA0 Chip	64	72	90	90	100	100	105
FPC 7 EA0_XR0 Chip	79	87	102	102	106	106	108
FPC 7 EA0_XR1 Chip	79	87	102	102	106	106	108
FPC 7 EA1 Chip	64	72	90	90	100	100	105
FPC 7 EA1_XR0 Chip	79	87	102	102	106	106	108
FPC 7 EA1_XR1 Chip	79	87	102	102	106	106	108
FPC 7 PEX Chip	74	82	100	100	105	105	110
FPC 7 EA2 Chip	64	72	90	90	100	100	105
FPC 7 EA2_XR0 Chip	79	87	102	102	106	106	108
FPC 7 EA2_XR1 Chip	79	87	102	102	106	106	108
FPC 7 EA3 Chip	64	72	90	90	100	100	105
FPC 7 EA3_XR0 Chip	79	87	102	102	106	106	108

```
FPC 7 EA3_XR1 Chip                      79    87      102      102      106      106      108
FPC 7 EA0_HMC0 Logic die                81    89      103      103      107      107      111
FPC 7 EA0_HMC0 DRAM botm                76    84       98       98      102      102      106
FPC 7 EA0_HMC1 Logic die                81    89      103      103      107      107      111
FPC 7 EA0_HMC1 DRAM botm                76    84       98       98      102      102      106
FPC 7 EA0_HMC2 Logic die                81    89      103      103      107      107      111
FPC 7 EA0_HMC2 DRAM botm                76    84       98       98      102      102      106
FPC 7 EA1_HMC0 Logic die                81    89      103      103      107      107      111
FPC 7 EA1_HMC0 DRAM botm                76    84       98       98      102      102      106
FPC 7 EA1_HMC1 Logic die                81    89      103      103      107      107      111
FPC 7 EA1_HMC1 DRAM botm                76    84       98       98      102      102      106
FPC 7 EA1_HMC2 Logic die                81    89      103      103      107      107      111
FPC 7 EA1_HMC2 DRAM botm                76    84       98       98      102      102      106
FPC 7 EA2_HMC0 Logic die                81    89      103      103      107      107      111
FPC 7 EA2_HMC0 DRAM botm                76    84       98       98      102      102      106
FPC 7 EA2_HMC1 Logic die                81    89      103      103      107      107      111
FPC 7 EA2_HMC1 DRAM botm                76    84       98       98      102      102      106
FPC 7 EA2_HMC2 Logic die                81    89      103      103      107      107      111
FPC 7 EA2_HMC2 DRAM botm                76    84       98       98      102      102      106
FPC 7 EA3_HMC0 Logic die                81    89      103      103      107      107      111
FPC 7 EA3_HMC0 DRAM botm                76    84       98       98      102      102      106
FPC 7 EA3_HMC1 Logic die                81    89      103      103      107      107      111
FPC 7 EA3_HMC1 DRAM botm                76    84       98       98      102      102      106
FPC 7 EA3_HMC2 Logic die                81    89      103      103      107      107      111
FPC 7 EA3_HMC2 DRAM botm                76    84       98       98      102      102      106
```

As per the above output, the MPC7E, MPC8E, and MPC9E are installed in the FPC slots 4, 7, and 3, respectively.

show chassis temperature-thresholds (MX2020 Router with MPC4E)

```
user@host> show chassis temperature-thresholds
                    Fan speed      Yellow alarm      Red alarm      Fire Shutdown
                     (degrees C)      (degrees C)     (degrees C)      (degrees C)
Item                 Normal  High   Normal  Bad fan  Normal  Bad fan     Normal
Routing Engine 0         70    80       95       95     110      110      112
Routing Engine 1         70    80       95       95     110      110      112
CB 0 IntakeA-Zone0       60    65       78       75      85       80       95
CB 0 IntakeB-Zone1       60    65       78       75      85       80       95
CB 0 IntakeC-Zone0       60    65       78       75      85       80       95
CB 0 ExhaustA-Zone0      60    65       78       75      85       80       95
CB 0 ExhaustB-Zone1      60    65       78       75      85       80       95
```

CB 0 TCBC-Zone0	60	65	78	75	85	80	95
CB 1 IntakeA-Zone0	60	65	78	75	85	80	95
CB 1 IntakeB-Zone1	60	65	78	75	85	80	95
CB 1 IntakeC-Zone0	60	65	78	75	85	80	95
CB 1 ExhaustA-Zone0	60	65	78	75	85	80	95
CB 1 ExhaustB-Zone1	60	65	78	75	85	80	95
CB 1 TCBC-Zone0	60	65	78	75	85	80	95
SPMB 0 Intake	56	62	75	63	83	76	95
SPMB 1 Intake	56	62	75	63	83	76	95
SFB 0 Intake-Zone0	56	62	70	70	85	85	89
SFB 0 Exhaust-Zone1	56	62	70	70	85	85	89
SFB 0 IntakeA-Zone0	56	62	70	70	85	85	89
SFB 0 IntakeB-Zone1	56	62	70	70	85	85	89
SFB 0 Exhaust-Zone0	56	62	70	70	85	85	89
SFB 0 SFB-XF2-Zone1	70	75	90	85	95	90	100
SFB 0 SFB-XF1-Zone0	70	75	90	85	95	90	100
SFB 0 SFB-XF0-Zone0	70	75	90	85	95	90	100
SFB 1 Intake-Zone0	56	62	70	70	85	85	89
SFB 1 Exhaust-Zone1	56	62	70	70	85	85	89
SFB 1 IntakeA-Zone0	56	62	70	70	85	85	89
SFB 1 IntakeB-Zone1	56	62	70	70	85	85	89
SFB 1 Exhaust-Zone0	56	62	70	70	85	85	89
SFB 1 SFB-XF2-Zone1	70	75	90	85	95	90	100
SFB 1 SFB-XF1-Zone0	70	75	90	85	95	90	100
SFB 1 SFB-XF0-Zone0	70	75	90	85	95	90	100
SFB 2 Intake-Zone0	56	62	70	70	85	85	89
SFB 2 Exhaust-Zone1	56	62	70	70	85	85	89
SFB 2 IntakeA-Zone0	56	62	70	70	85	85	89
SFB 2 IntakeB-Zone1	56	62	70	70	85	85	89
SFB 2 Exhaust-Zone0	56	62	70	70	85	85	89
SFB 2 SFB-XF2-Zone1	70	75	90	85	95	90	100
SFB 2 SFB-XF1-Zone0	70	75	90	85	95	90	100
SFB 2 SFB-XF0-Zone0	70	75	90	85	95	90	100
SFB 3 Intake-Zone0	56	62	70	70	85	85	89
SFB 3 Exhaust-Zone1	56	62	70	70	85	85	89
SFB 3 IntakeA-Zone0	56	62	70	70	85	85	89
SFB 3 IntakeB-Zone1	56	62	70	70	85	85	89
SFB 3 Exhaust-Zone0	56	62	70	70	85	85	89
SFB 3 SFB-XF2-Zone1	70	75	90	85	95	90	100
SFB 3 SFB-XF1-Zone0	70	75	90	85	95	90	100
SFB 3 SFB-XF0-Zone0	70	75	90	85	95	90	100
SFB 4 Intake-Zone0	56	62	70	70	85	85	89
SFB 4 Exhaust-Zone1	56	62	70	70	85	85	89

```
SFB 4 IntakeA-Zone0     56    62       70       70       85       85       89
SFB 4 IntakeB-Zone1     56    62       70       70       85       85       89
SFB 4 Exhaust-Zone0     56    62       70       70       85       85       89
SFB 4 SFB-XF2-Zone1     70    75       90       85       95       90      100
SFB 4 SFB-XF1-Zone0     70    75       90       85       95       90      100
SFB 4 SFB-XF0-Zone0     70    75       90       85       95       90      100
SFB 5 Intake-Zone0      56    62       70       70       85       85       89
SFB 5 Exhaust-Zone1     56    62       70       70       85       85       89
SFB 5 IntakeA-Zone0     56    62       70       70       85       85       89
SFB 5 IntakeB-Zone1     56    62       70       70       85       85       89
SFB 5 Exhaust-Zone0     56    62       70       70       85       85       89
SFB 5 SFB-XF2-Zone1     70    75       90       85       95       90      100
SFB 5 SFB-XF1-Zone0     70    75       90       85       95       90      100
SFB 5 SFB-XF0-Zone0     70    75       90       85       95       90      100
SFB 6 Intake-Zone0      56    62       70       70       85       85       89
SFB 6 Exhaust-Zone1     56    62       70       70       85       85       89
SFB 6 IntakeA-Zone0     56    62       70       70       85       85       89
SFB 6 IntakeB-Zone1     56    62       70       70       85       85       89
SFB 6 Exhaust-Zone0     56    62       70       70       85       85       89
SFB 6 SFB-XF2-Zone1     70    75       90       85       95       90      100
SFB 6 SFB-XF1-Zone0     70    75       90       85       95       90      100
SFB 6 SFB-XF0-Zone0     70    75       90       85       95       90      100
SFB 7 Intake-Zone0      56    62       70       70       85       85       89
SFB 7 Exhaust-Zone1     56    62       70       70       85       85       89
SFB 7 IntakeA-Zone0     56    62       70       70       85       85       89
SFB 7 IntakeB-Zone1     56    62       70       70       85       85       89
SFB 7 Exhaust-Zone0     56    62       70       70       85       85       89
SFB 7 SFB-XF2-Zone1     70    75       90       85       95       90      100
SFB 7 SFB-XF1-Zone0     70    75       90       85       95       90      100
SFB 7 SFB-XF0-Zone0     70    75       90       85       95       90      100
FPC 0                   55    60       75       65       90       80       95
FPC 9                   55    60       75       65       90       80       95
FPC 10                  55    60       75       65       90       80       95
FPC 14                  55    60       75       65       95       80      100
FPC 19                  55    60       75       65       90       80       95
ADC 0 Intake            50    55       60       60       65       65       80
ADC 0 Exhaust           50    55       60       60       65       65       80
ADC 0 ADC-XF1           70    75       90       85       95       90      100
ADC 0 ADC-XF0           70    75       90       85       95       90      100
ADC 9 Intake            50    55       60       60       65       65       80
ADC 9 Exhaust           50    55       60       60       65       65       80
ADC 9 ADC-XF1           70    75       90       85       95       90      100
ADC 9 ADC-XF0           70    75       90       85       95       90      100
```

```
ADC 10 Intake          50    55       60       60       65       65       80
ADC 10 Exhaust         50    55       60       60       65       65       80
ADC 10 ADC-XF1         70    75       90       85       95       90      100
ADC 10 ADC-XF0         70    75       90       85       95       90      100
ADC 14 Intake          50    55       60       60       65       65       80
ADC 14 Exhaust         50    55       60       60       65       65       80
ADC 14 ADC-XF1         70    75       90       85       95       90      100
ADC 14 ADC-XF0         70    75       90       85       95       90      100
ADC 19 Intake          50    55       60       60       65       65       80
ADC 19 Exhaust         50    55       60       60       65       65       80
ADC 19 ADC-XF1         70    75       90       85       95       90      100
ADC 19 ADC-XF0         70    75       90       85       95       90      100
```

show chassis temperature-thresholds (MX2008 Routers)

```
user@host> show chassis temperature-thresholds
                        Fan speed      Yellow alarm      Red alarm      Fire Shutdown
                        (degrees C)    (degrees C)       (degrees C)    (degrees C)
Item                    Normal  High   Normal  Bad fan   Normal  Bad fan    Normal
Routing Engine 0 CPU        58    63       78       75       93       90       98
Routing Engine 1 CPU        58    63       78       75       93       90       98
CB 0 Inlet1                 55    60       65       62       75       72       85
CB 0 Inlet2                 45    50       61       58       80       77       90
CB 0 Inlet3                 57    62       68       65       80       77       90
CB 0 Inlet4                 55    60       80       77       90       87       95
CB 0 Exhaust1               55    60       65       62       75       72       85
CB 0 Exhaust2               50    55       60       57       80       77       90
CB 0 Exhaust3               70    75       81       78       91       88       96
CB 0 Exhaust4               75    80       90       87      100       97      105
CB 1 Inlet1                 55    60       65       62       75       72       85
CB 1 Inlet2                 45    50       61       58       80       77       90
CB 1 Inlet3                 57    62       68       65       80       77       90
CB 1 Inlet4                 55    60       80       77       90       87       95
CB 1 Exhaust1               55    60       65       62       75       72       85
CB 1 Exhaust2               50    55       60       57       80       77       90
CB 1 Exhaust3               70    75       81       78       91       88       96
CB 1 Exhaust4               75    80       90       87      100       97      105
SFB 0 Inlet1                49    54       62       59       76       73       81
SFB 0 Inlet2                65    70       71       68       83       80       88
SFB 0 Exhaust1              45    50       61       58       75       72       80
SFB 0 Exhaust2              60    65       69       66       80       77       85
```

```
SFB 0 SFB2-PF-local          65    70       75       72       95       92       100
SFB 0 SFB2-PF-die            88    93       98       95       118      115      120
SFB 1 Inlet1                 49    54       62       59       76       73       81
SFB 1 Inlet2                 65    70       71       68       83       80       88
SFB 1 Exhaust1               45    50       61       58       75       72       80
SFB 1 Exhaust2               60    65       69       66       80       77       85
SFB 1 SFB2-PF-local          65    70       75       72       95       92       100
SFB 1 SFB2-PF-die            88    93       98       95       118      115      120
SFB 2 Inlet1                 49    54       62       59       76       73       81
SFB 2 Inlet2                 65    70       71       68       83       80       88
SFB 2 Exhaust1               45    50       61       58       75       72       80
SFB 2 Exhaust2               60    65       69       66       80       77       85
SFB 2 SFB2-PF-local          65    70       75       72       95       92       100
SFB 2 SFB2-PF-die            88    93       98       95       118      115      120
SFB 3 Inlet1                 49    54       62       59       76       73       81
SFB 3 Inlet2                 65    70       71       68       83       80       88
SFB 3 Exhaust1               45    50       61       58       75       72       80
SFB 3 Exhaust2               60    65       69       66       80       77       85
SFB 3 SFB2-PF-local          65    70       75       72       95       92       100
SFB 3 SFB2-PF-die            88    93       98       95       118      115      120
SFB 4 Inlet1                 49    54       62       59       76       73       81
SFB 4 Inlet2                 65    70       71       68       83       80       88
SFB 4 Exhaust1               45    50       61       58       75       72       80
SFB 4 Exhaust2               60    65       69       66       80       77       85
SFB 4 SFB2-PF-local          65    70       75       72       95       92       100
SFB 4 SFB2-PF-die            88    93       98       95       118      115      120
SFB 5 Inlet1                 49    54       62       59       76       73       81
SFB 5 Inlet2                 65    70       71       68       83       80       88
SFB 5 Exhaust1               45    50       61       58       75       72       80
SFB 5 Exhaust2               60    65       69       66       80       77       85
SFB 5 SFB2-PF-local          65    70       75       72       95       92       100
SFB 5 SFB2-PF-die            88    93       98       95       118      115      120
SFB 6 Inlet1                 49    54       62       59       76       73       81
SFB 6 Inlet2                 65    70       71       68       83       80       88
SFB 6 Exhaust1               45    50       61       58       75       72       80
SFB 6 Exhaust2               60    65       69       66       80       77       85
SFB 6 SFB2-PF-local          65    70       75       72       95       92       100
SFB 6 SFB2-PF-die            88    93       98       95       118      115      120
SFB 7 Inlet1                 49    54       62       59       76       73       81
SFB 7 Inlet2                 65    70       71       68       83       80       88
SFB 7 Exhaust1               45    50       61       58       75       72       80
SFB 7 Exhaust2               60    65       69       66       80       77       85
SFB 7 SFB2-PF-local          65    70       75       72       95       92       100
```

```
SFB 7 SFB2-PF-die           88    93       98       95      118      115      120
FPC 0                       55    60       75       65       90       80       95
FPC 3                       55    60       75       65      105       80      110
FPC 5                       55    60       75       65      105       80      110
FPC 7                       55    60       75       65       90       80       95
FPC 9 Intake                60    65       75       75       85       85       95
FPC 9 Exhaust A             60    65       75       75       85       85       95
FPC 9 Exhaust B             60    65       75       75       85       85       95
FPC 9 XL 0 Chip             70    75       85       85      102      102      110
FPC 9 XL 0 XR2 0 Chip       75    80       90       90      105      105      115
FPC 9 XL 0 XR2 1 Chip       75    80       90       90      105      105      115
FPC 9 XL 1 Chip             70    75       85       85      102      102      110
FPC 9 XL 1 XR2 0 Chip       75    80       90       90      105      105      115
FPC 9 XL 1 XR2 1 Chip       75    80       90       90      105      105      115
FPC 9 XM 0 Chip             70    75       85       85      100      100      110
FPC 9 XM 1 Chip             70    75       85       85      100      100      110
FPC 9 XM 2 Chip             70    75       85       85      100      100      110
FPC 9 XM 3 Chip             70    75       85       85      100      100      110
FPC 9 PCIe Switch Chip      80    85       95       95      105      105      120
ADC 0 Intake                50    55       65       65       75       75       80
ADC 0 Exhaust               50    55       65       65       75       75       80
ADC 0 ADC-XF1               70    75       90       85       95       90      100
ADC 0 ADC-XF0               70    75       90       85       95       90      100
ADC 3 Intake                50    55       65       65       75       75       80
ADC 3 Exhaust               50    55       65       65       75       75       80
ADC 3 ADC-XF1               70    75       90       85       95       90      100
ADC 3 ADC-XF0               70    75       90       85       95       90      100
ADC 5 Intake                50    55       65       65       75       75       80
ADC 5 Exhaust               50    55       65       65       75       75       80
ADC 5 ADC-XF1               70    75       90       85       95       90      100
ADC 5 ADC-XF0               70    75       90       85       95       90      100
ADC 7 Intake                50    55       65       65       75       75       80
ADC 7 Exhaust               50    55       65       65       75       75       80
ADC 7 ADC-XF1               70    75       90       85       95       90      100
ADC 7 ADC-XF0               70    75       90       85       95       90      100
```

show chassis temperature-thresholds (MX204 Router)

```
user@host> show chassis temperature-thresholds

                                    Fan speed      Yellow alarm      Red alarm      Fire
```

```
Shutdown
                                  (degrees C)     (degrees C)     (degrees C)
(degrees C)
Item                          Normal  High   Normal  Bad fan   Normal  Bad fan     Normal
Routing Engine                    48    54       85       85      100      100        102
CB Top Right Inlet Sensor         35    40       63       63       85       85         95
CB Top Left Inlet Sensor          40    45       65       65       85       85         95
CB Top Right Exhaust Sensor       45    50       68       68       85       85         95
CB Top Left Exhaust Sensor        65    70       78       78       85       85         95
CB CPU Core-0 Temp                65    70       80       80       90       90        100
CB CPU Core-1 Temp                65    70       80       80       90       90        100
CB CPU Core-2 Temp                65    70       80       80       90       90        100
CB CPU Core-3 Temp                65    70       80       80       90       90        100
CB CPU Core-4 Temp                65    70       80       80       90       90        100
CB CPU Core-5 Temp                65    70       80       80       90       90        100
CB CPU Core-6 Temp                65    70       80       80       90       90        100
CB CPU Core-7 Temp                65    70       80       80       90       90        100
FPC EA0_HMC0 Logic die            85    90       95       95      105      105        110
FPC EA0_HMC0 DRAM botm            80    85       90       90      105      105        110
FPC EA0_HMC1 Logic die            85    90       95       95      105      105        110
FPC EA0_HMC1 DRAM botm            80    85       90       90      105      105        110
FPC EA0 Chip                      92    97      103      103      109      109        115
FPC EA0-XR0 Chip                  85    90       98       98      103      103        110
FPC EA0-XR1 Chip                  85    90       98       98      103      103        110
```

show chassis temperature-thresholds (MX10008 Router)

```
 user@host> show chassis temperature-thresholds
                                  Fan speed      Yellow alarm      Red alarm      Fire
Shutdown
                                  (degrees C)     (degrees C)     (degrees C)
(degrees C)
Item                          Normal  High   Normal  Bad fan   Normal  Bad fan     Normal
SFB 0 Intake-Top Temp             58    63      100      100      105      105        115
SFB 0 Intake-Middle-High Temp     63    68      100      100      105      105        115
SFB 0 Intake-Middle-Low Temp      66    71      100      100      105      105        115
SFB 0 Intake-Bottom Temp          65    70      100      100      105      105        115
SFB 0 Exhaust-Top Temp            82    87      100      100      105      105        115
SFB 0 Exhaust-Middle Temp         76    81      100      100      105      105        115
SFB 0 Exhaust-Bottom Temp         77    82      100      100      105      105        115
SFB 0 PCIe Switch Temp            70    75      110      110      115      115        125
SFB 0 ZF0 External Temp           85    90       95       95      116      116        121
```

```
SFB 0 ZF1 External Temp                  84    89       95       95       116      116      121
SFB 0 ZF0 Internal Main                  85    90       95       95       116      116      121
SFB 0 ZF0 Internal Remote 0              87    92       95       95       116      116      121
SFB 0 ZF0 Internal Remote 1              89    94       95       95       116      116      121
SFB 0 ZF0 Internal Remote 2              86    91       95       95       116      116      121
SFB 0 ZF0 Internal Remote 3              88    93       95       95       116      116      121
SFB 0 ZF0 Internal Remote 4              88    93       95       95       116      116      121
SFB 0 ZF0 Internal Remote 5              87    92       95       95       116      116      121
SFB 0 ZF0 Internal Remote 6              86    91       95       95       116      116      121
SFB 0 ZF1 Internal Main                  84    89       95       95       116      116      121
SFB 0 ZF1 Internal Remote 0              85    90       95       95       116      116      121
SFB 0 ZF1 Internal Remote 1              88    93       95       95       116      116      121
SFB 0 ZF1 Internal Remote 2              86    91       95       95       116      116      121
SFB 0 ZF1 Internal Remote 3              88    93       95       95       116      116      121
SFB 0 ZF1 Internal Remote 4              87    92       95       95       116      116      121
SFB 0 ZF1 Internal Remote 5              85    90       95       95       116      116      121
SFB 0 ZF1 Internal Remote 6              87    92       95       95       116      116      121
```

show chassis temperature-thresholds (PTX10008 Routers)

```
user@host> show chassis temperature-thresholds
                         Fan speed      Yellow alarm      Red alarm      Fire Shutdown
                         (degrees C)    (degrees C)     (degrees C)      (degrees C)
Item                     Normal  High   Normal  Bad fan   Normal  Bad fan     Normal
Routing Engine 0             48    54       85       85      100      100      102
Routing Engine 1             48    54       85       85      100      100      102
CB 0 Intake Temp Sensor      30    35       80       80       85       85       95
CB 0 Exhaust Temp Sensor     30    35       80       80       85       85       95
CB 0 CPU Die Temp Sensor     40    45       95       95      100      100      110
CB 1 Intake Temp Sensor      30    35       80       80       85       85       95
CB 1 Exhaust Temp Sensor     30    35       80       80       85       85       95
CB 1 CPU Die Temp Sensor     40    45       95       95      100      100      110
FPC 0 Intake-A Temp Sensor   30    35       80       80       85       85       95
FPC 0 Intake-B Temp Sensor   30    35       80       80       85       85       95
FPC 0 Exhaust-A Temp Sensor   30   35       80       80       85       85       95
FPC 0 Exhaust-B Temp Sensor   30   35       80       80       85       85       95
FPC 0 Exhaust-C Temp Sensor   30   35       80       80       85       85       95
FPC 0 PE0 Temp Sensor        40    45      100      100      105      105      115
FPC 0 PE1 Temp Sensor        40    45      100      100      105      105      115
FPC 0 PE2 Temp Sensor        40    45      100      100      105      105      115
FPC 0 LCPU Temp Sensor       40    45       95       95      100      100      110
```

```
FPC 5 Intake-A Temp Sensor   30    35       80       80       85       85       95
FPC 5 Intake-B Temp Sensor   30    35       80       80       85       85       95
FPC 5 Exhaust-A Temp Sensor   30   35       80       80       85       85       95
FPC 5 Exhaust-B Temp Sensor   30   35       80       80       85       85       95
FPC 5 Exhaust-C Temp Sensor   30   35       80       80       85       85       95
FPC 5 PE0 Temp Sensor        40    45      100      100      105      105      115
FPC 5 PE1 Temp Sensor        40    45      100      100      105      105      115
FPC 5 PE2 Temp Sensor        40    45      100      100      105      105      115
FPC 5 PE3 Temp Sensor        40    45      100      100      105      105      115
FPC 5 PE4 Temp Sensor        40    45      100      100      105      105      115
FPC 5 PE5 Temp Sensor        40    45      100      100      105      105      115
FPC 5 LCPU Temp Sensor       40    45       95       95      100      100      110
FPC 6 Intake-A Temp Sensor   30    35       80       80       85       85       95
FPC 6 Intake-B Temp Sensor   30    35       80       80       85       85       95
FPC 6 Exhaust-A Temp Sensor   30   35       80       80       85       85       95
FPC 6 Exhaust-B Temp Sensor   30   35       80       80       85       85       95
FPC 6 Exhaust-C Temp Sensor   30   35       80       80       85       85       95
FPC 6 PE0 Temp Sensor        40    45      100      100      105      105      115
FPC 6 PE1 Temp Sensor        40    45      100      100      105      105      115
FPC 6 PE2 Temp Sensor        40    45      100      100      105      105      115
FPC 6 PE3 Temp Sensor        40    45      100      100      105      105      115
FPC 6 PE4 Temp Sensor        40    45      100      100      105      105      115
FPC 6 PE5 Temp Sensor        40    45      100      100      105      105      115
FPC 6 LCPU Temp Sensor       40    45       95       95      100      100      110
SIB 0 Intake-A Temp Sensor   40    45       90       90       95       95      105
SIB 0 Intake-B Temp Sensor   40    45       90       90       95       95      105
SIB 0 Exhaust-A Temp Sensor   40   45       90       90       95       95      105
SIB 0 Exhaust-B Temp Sensor   40   45       90       90       95       95      105
SIB 0 PF0 Temp Sensor        50    55      100      100      105      105      115
SIB 0 PF1 Temp Sensor        50    55      100      100      105      105      115
SIB 1 Intake-A Temp Sensor   40    45       90       90       95       95      105
SIB 1 Intake-B Temp Sensor   40    45       90       90       95       95      105
SIB 1 Exhaust-A Temp Sensor   40   45       90       90       95       95      105
SIB 1 Exhaust-B Temp Sensor   40   45       90       90       95       95      105
SIB 1 PF0 Temp Sensor        50    55      100      100      105      105      115
SIB 1 PF1 Temp Sensor        50    55      100      100      105      105      115
```

show chassis temperature-thresholds (T4000 Core Routers)

```
user@host> show chassis temperature-thresholds
```

```
                    Fan speed      Yellow alarm      Red alarm   Fire Shutdown
                    (degrees C)    (degrees C)     (degrees C)   (degrees C)
Item                Normal  High   Normal  Bad fan  Normal  Bad fan    Normal
Chassis default        48    54      65       55       75       65       100
Routing Engine 0       55    65      85       85      100      100       102
Routing Engine 1       55    65      85       85      100      100       102
FPC 0                  63    68      75       70       90       83        95
FPC 3                  63    68      75       70       90       83        95
FPC 5                  56    62      75       63       83       76        95
FPC 6                  63    68      75       70       90       83        95
SIB 0                  64    70      76       72       87       84        95
SIB 1                  64    70      76       72       87       84        95
SIB 2                  64    70      76       72       87       84        95
SIB 3                  64    70      76       72       87       84        95
SIB 4                  64    70      76       72       87       84        95
```

show chassis temperature-thresholds (TX Matrix Plus Router)

```
user@host> show chassis temperature-thresholds
sfc0-re0:
--------------------------------------------------------------------------
                         Fan speed        Yellow alarm        Red alarm
                         (degrees C)      (degrees C)       (degrees C)
Item                     Normal   High    Normal   Bad fan   Normal   Bad fan
Chassis default             48     54       65        55        75        65
Routing Engine 0            55     65       85        85       100       100
Routing Engine 1            55     65       85        85       100       100
SIB F13 0                   64     70       76        72        90        84
SIB F13 3                   64     70       76        72        90        84
SIB F13 6                   64     70       76        72        90        84
SIB F13 8                   64     70       76        72        90        84
SIB F13 11                  64     70       76        72        90        84
SIB F13 12                  64     70       76        72        90        84
SIB F2S 16                  64     70       76        72        90        84
SIB F2S 17                  64     70       76        72        90        84
SIB F2S 18                  64     70       76        72        90        84
SIB F2S 19                  64     70       76        72        90        84
SIB F2S 20                  64     70       76        72        90        84
SIB F2S 21                  64     70       76        72        90        84
SIB F2S 22                  64     70       76        72        90        84
SIB F2S 23                  64     70       76        72        90        84
```

```
SIB F2S 24                    64     70        76        72        90        84
SIB F2S 25                    64     70        76        72        90        84
SIB F2S 26                    64     70        76        72        90        84
SIB F2S 27                    64     70        76        72        90        84
SIB F2S 28                    64     70        76        72        90        84
SIB F2S 29                    64     70        76        72        90        84
SIB F2S 30                    64     70        76        72        90        84
SIB F2S 31                    64     70        76        72        90        84
SIB F2S 32                    64     70        76        72        90        84
SIB F2S 33                    64     70        76        72        90        84
SIB F2S 34                    64     70        76        72        90        84
SIB F2S 35                    64     70        76        72        90        84

lcc0-re0:
--------------------------------------------------------------------------
                         Fan speed        Yellow alarm        Red alarm
                        (degrees C)       (degrees C)       (degrees C)
Item                   Normal   High    Normal   Bad fan    Normal   Bad fan
Chassis default            48     54        65        55        75        65
Routing Engine 0           55     65        85        85       100       100
Routing Engine 1           55     65        85        85       100       100
FPC 1                      56     62        75        63        83        76
FPC 3                      56     62        75        63        83        76
FPC 4                      56     62        75        63        83        76
FPC 6                      56     62        75        63        83        76
FPC 7                      56     62        75        63        83        76
SIB 0                      48     54        65        60        80        75
SIB 1                      48     54        65        60        80        75
SIB 2                      48     54        65        60        80        75
SIB 3                      48     54        65        60        80        75
SIB 4                      48     54        65        60        80        75

lcc1-re0:
--------------------------------------------------------------------------
                         Fan speed        Yellow alarm        Red alarm
                        (degrees C)       (degrees C)       (degrees C)
Item                   Normal   High    Normal   Bad fan    Normal   Bad fan
Chassis default            48     54        65        55        75        65
Routing Engine 0           55     65        85        85       100       100
Routing Engine 1           55     65        85        85       100       100
FPC 1                      56     62        75        63        83        76
FPC 3                      56     62        75        63        83        76
FPC 4                      56     62        75        63        83        76
```

```
FPC 6                        56     62        75        63        83        76
...
```

show chassis temperature-thresholds lcc (TX Matrix Plus Router)

```
user@host> show chassis temperature-thresholds lcc 1
lcc1-re0:
--------------------------------------------------------------------------
                          Fan speed        Yellow alarm        Red alarm
                         (degrees C)       (degrees C)       (degrees C)
Item                    Normal   High    Normal   Bad fan    Normal   Bad fan
Chassis default             48     54        65        55        75        65
Routing Engine 0            55     65        85        85       100       100
Routing Engine 1            55     65        85        85       100       100
FPC 1                       56     62        75        63        83        76
FPC 3                       56     62        75        63        83        76
FPC 4                       56     62        75        63        83        76
FPC 6                       56     62        75        63        83        76
SIB 0                       48     54        65        60        80        75
SIB 1                       48     54        65        60        80        75
SIB 2                       48     54        65        60        80        75
SIB 3                       48     54        65        60        80        75
SIB 4                       48     54        65        60        80        75
```

show chassis temperature-thresholds sfc (TX Matrix Plus Router)

```
user@host> show chassis temperature-thresholds sfc 0
sfc0-re0:
--------------------------------------------------------------------------
                          Fan speed        Yellow alarm        Red alarm
                         (degrees C)       (degrees C)       (degrees C)
Item                    Normal   High    Normal   Bad fan    Normal   Bad fan
Chassis default             48     54        65        55        75        65
Routing Engine 0            55     65        85        85       100       100
Routing Engine 1            55     65        85        85       100       100
SIB F13 0                   64     70        76        72        90        84
SIB F13 3                   64     70        76        72        90        84
SIB F13 6                   64     70        76        72        90        84
SIB F13 8                   64     70        76        72        90        84
SIB F13 11                  64     70        76        72        90        84
```

```
SIB F13 12                  64     70        76        72        90        84
SIB F2S 16                  64     70        76        72        90        84
SIB F2S 17                  64     70        76        72        90        84
SIB F2S 18                  64     70        76        72        90        84
SIB F2S 19                  64     70        76        72        90        84
SIB F2S 20                  64     70        76        72        90        84
SIB F2S 21                  64     70        76        72        90        84
SIB F2S 22                  64     70        76        72        90        84
SIB F2S 23                  64     70        76        72        90        84
SIB F2S 24                  64     70        76        72        90        84
SIB F2S 25                  64     70        76        72        90        84
SIB F2S 26                  64     70        76        72        90        84
SIB F2S 27                  64     70        76        72        90        84
SIB F2S 28                  64     70        76        72        90        84
SIB F2S 29                  64     70        76        72        90        84
SIB F2S 30                  64     70        76        72        90        84
SIB F2S 31                  64     70        76        72        90        84
SIB F2S 32                  64     70        76        72        90        84
SIB F2S 33                  64     70        76        72        90        84
SIB F2S 34                  64     70        76        72        90        84
SIB F2S 35                  64     70        76        72        90        84
```

show chassis temperature-thresholds (TX Matrix Plus routers with 3D SIBs)

```
user@host> show chassis temperature-thresholds
sfc0-re0:
--------------------------------------------------------------------------
                          Fan speed      Yellow alarm      Red alarm      Fire Shutdown
                         (degrees C)     (degrees C)     (degrees C)     (degrees C)
Item                    Normal  High   Normal  Bad fan   Normal  Bad fan    Normal
Chassis default             48    54       65       55       75       65       100
Routing Engine 0            70    75       90       87      102       97       115
Routing Engine 1            70    75       90       87      102       97       115
SIB F13 0 Board             60    65       78       75       85       80        95
SIB F13 0 XF Junction       70    75       82       74      105      100       107
SIB F13 4 Board             60    65       78       75       85       80        95
SIB F13 4 XF Junction       70    75       82       74      105      100       107
SIB F13 6 Board             60    65       78       75       85       80        95
SIB F13 6 XF Junction       70    75       82       74      105      100       107
SIB F2S 16 Board            60    65       78       75       85       80        95
SIB F2S 16 XF Junction      70    75       82       74      105      100       107
```

```
SIB F2S 17 Board             60    65       78       75       85       80       95
SIB F2S 17 XF Junction       70    75       82       74      105      100      107
SIB F2S 18 Board             60    65       78       75       85       80       95
SIB F2S 18 XF Junction       70    75       82       74      105      100      107
SIB F2S 19 Board             60    65       78       75       85       80       95
SIB F2S 19 XF Junction       70    75       82       74      105      100      107
SIB F2S 24 Board             60    65       78       75       85       80       95
SIB F2S 24 XF Junction       70    75       82       74      105      100      107
SIB F2S 25 Board             60    65       78       75       85       80       95
SIB F2S 25 XF Junction       70    75       82       74      105      100      107
SIB F2S 26 Board             60    65       78       75       85       80       95
SIB F2S 26 XF Junction       70    75       82       74      105      100      107
SIB F2S 27 Board             60    65       78       75       85       80       95
SIB F2S 27 XF Junction       70    75       82       74      105      100      107

lcc0-re0:
--------------------------------------------------------------------------
                          Fan speed      Yellow alarm      Red alarm      Fire Shutdown
                         (degrees C)      (degrees C)     (degrees C)      (degrees C)
Item                     Normal  High   Normal  Bad fan   Normal  Bad fan     Normal
Chassis default              48    54       65       55       75       65      100
Routing Engine 0             55    65       85       85      100      100      102
FPC 0                        63    68       75       70       90       83       95
FPC 1                        56    62       75       63       83       76       95
FPC 7                        56    62       75       63       83       76       95
SIB 0                        64    70       76       72       87       84       95
SIB 0 ASIC Junction          63    68       75       70      105      100      107
SIB 2                        64    70       76       72       87       84       95
SIB 2 ASIC Junction          63    68       75       70      105      100      107
SIB 3                        64    70       76       72       87       84       95
SIB 3 ASIC Junction          63    68       75       70      105      100      107
```

show chassis temperature-thresholds (QFX3500 Switch and QFX3600)

```
user@switch> show chassis temperature-thresholds
                          Fan speed      Yellow alarm      Red alarm
                         (degrees C)      (degrees C)     (degrees C)
Item                     Normal  High   Normal  Bad fan   Normal  Bad fan
rmal
FPC Sensor TopLeft I         48    56       53       43       56       46
FPC Sensor TopRight I        46    54       51       41       54       44
```

```
FPC Sensor TopLeft E          58    65       62       52       65       55
FPC Sensor TopRight E         56    64       61       51       64       54
FPC Sensor TopMiddle I        58    64       61       51       64       54
FPC Sensor TopMiddle E        67    74       71       61       74       64
FPC Sensor Bottom I           59    67       64       54       67       57
FPC Sensor Bottom E           66    73       70       60       73       63
FPC Sensor Die Temp           69    75       72       62       75       65
FPC Sensor Mgmnt Brd I        46    54       51       41       54       44
FPC Sensor Switch I           56    63       60       50       63       53
```

show chassis temperature-thresholds interconnect-device (QFabric System)

```
user@switch> show chassis temperature-thresholds interconnect-device
interconnect1
temperature-thresholds interconnect-device interconnect1
                          Fan speed        Yellow alarm         Red alarm
Item                    Normal   High    Normal   Bad fan    Normal   Bad fan
Chassis default             48     54        65        55        75        65
```

show chassis temperature-thresholds (QFX5700)

```
user@switch> show chassis temperature-thresholds
                          Fan speed        Yellow alarm         Red alarm
Item                    Normal   High    Normal   Bad fan    Normal   Bad fan

Routing Engine 0 CPU Temperature          48    54       85       85      100      100        102
Routing Engine 1 CPU Temperature          48    54       85       85      100      100        102
CB 0 Intake 1 Temp Sensor                 60    65       75       75       85       85         95
CB 0 Intake 2 Temp Sensor                 60    65       75       75       85       85         95
CB 0 Middle Temp Sensor                   83    90       98       98      105      105        110
CB 1 Intake 1 Temp Sensor                 60    65       75       75       85       85         95
CB 1 Intake 2 Temp Sensor                 60    65       75       75       85       85         95
CB 1 Exhaust 1 Temp Sensor                83    90       98       98      105      105        110
CB 1 Exhaust 2 Temp Sensor                83    90       98       98      105      105        110
CB 1 Middle Temp Sensor                   83    90       98       98      105      105        110
```

show chassis temperature-thresholds (PTX5000 Packet Transport Router)

```
user@switch> show chassis temperature-thresholds
user@switch> show chassis temperature-thresholds

                         Fan speed      Yellow alarm      Red alarm      Fire Shutdown
                         (degrees C)    (degrees C)     (degrees C)      (degrees C)
Item                     Normal  High   Normal  Bad fan  Normal  Bad fan     Normal
Routing Engine 0             80    90       95       85      105       95      115
CB 0 Exhaust A               60    65       78       75       85       80       95
CB 0 Exhaust B               60    65       78       75       85       80       95
CB 1 Exhaust A               60    65       78       75       85       80       95
CB 1 Exhaust B               60    65       78       75       85       80       95
FPC 3 Exhaust A              80    90       95       85      105       95      115
FPC 3 Exhaust B              80    90       95       85      105       95      115
FPC 3 TL5                    80    90       95       85      105       95      115
FPC 3 TQ5                    80    90       95       85      105       95      115
FPC 3 TL6                    80    90       95       85      105       95      115
FPC 3 TQ6                    80    90       95       85      105       95      115
FPC 3 TL1                    80    90       95       85      105       95      115
FPC 3 TQ1                    80    90       95       85      105       95      115
FPC 3 TL2                    80    90       95       85      105       95      115
FPC 3 TQ2                    80    90       95       85      105       95      115
FPC 3 TL4                    80    90       95       85      105       95      115
FPC 3 TQ4                    80    90       95       85      105       95      115
FPC 3 TL7                    80    90       95       85      105       95      115
FPC 3 TQ7                    80    90       95       85      105       95      115
FPC 3 TL0                    80    90       95       85      105       95      115
FPC 3 TQ0                    80    90       95       85      105       95      115
FPC 3 TL3                    80    90       95       85      105       95      115
FPC 3 TQ3                    80    90       95       85      105       95      115
SIB 0 Exhaust                60    65       78       75       85       80       95
SIB 0 Junction               75    80       90       85      105       95      115
SIB 1 Exhaust                60    65       78       75       85       80       95
SIB 1 Junction               75    80       90       85      105       95      115
SIB 2 Exhaust                60    65       78       75       85       80       95
SIB 2 Junction               75    80       90       85      105       95      115
SIB 3 Exhaust                60    65       78       75       85       80       95
SIB 3 Junction               75    80       90       85      105       95      115
SIB 4 Exhaust                60    65       78       75       85       80       95
SIB 4 Junction               75    80       90       85      105       95      115
SIB 5 Exhaust                60    65       78       75       85       80       95
```

```
SIB 5 Junction              75    80       90       85      105       95      115
SIB 6 Exhaust               60    65       78       75       85       80       95
SIB 6 Junction              75    80       90       85      105       95      115
SIB 7 Exhaust               60    65       78       75       85       80       95
SIB 7 Junction              75    80       90       85      105       95      115
SIB 8 Exhaust               60    65       78       75       85       80       95
SIB 8 Junction              75    80       90       85      105       95      115
```

show chassis temperature-thresholds (PTX1000 Packet Transport Router)

```
user@host> show chassis temperature-thresholds

                         Fan speed      Yellow alarm      Red alarm      Fire Shutdown
                         (degrees C)      (degrees C)     (degrees C)      (degrees C)
Item                     Normal  High   Normal  Bad fan   Normal  Bad fan     Normal
FPC 0 Intake Temp Sensor     30    65       65       65       70       70       75
FPC 0 Exhaust Temp Sensor    30    65       65       65       70       70       75
FPC 0 Mezz Temp Sensor 0     30    65       65       65       70       70       75
FPC 0 Mezz Temp Sensor 1     30    65       65       65       70       70       75
FPC 0 PE2 Temp Sensor        50    90       90       90      100      100      103
FPC 0 PE1 Temp Sensor        50    90       90       90      100      100      103
FPC 0 PF0 Temp Sensor        50    90       90       90      100      100      103
FPC 0 PE0 Temp Sensor        50    90       90       90      100      100      103
FPC 0 PE5 Temp Sensor        50    90       90       90      100      100      103
FPC 0 PE4 Temp Sensor        50    90       90       90      100      100      103
FPC 0 PF1 Temp Sensor        50    90       90       90      100      100      103
FPC 0 PE3 Temp Sensor        50    90       90       90      100      100      103
FPC 0 CPU Die Temp Sensor    50    90       90       90      100      100      103
FPC 0 OCXO Temp Sensor       50    90       90       90      100      100      103
```

show chassis temperature-thresholds (MX Routers with Media Services Blade [MSB])

```
user@switch> show chassis temperature-thresholds
  Fan speed      Yellow alarm      Red alarm      Fire Shutdown
                         (degrees C)      (degrees C)     (degrees C)      (degrees C)
Item                     Normal  High   Normal  Bad fan   Normal  Bad fan     Normal
Chassis default              48    54       65       55       75       65      100
```

```
Routing Engine 0              70    80       95       95      110      110      112
Routing Engine 1              70    80       95       95      110      110      112
FPC 0                         55    60       75       65       90       80       95
FPC 1                         55    60       75       65       90       80       95
FPC 2                         55    60       75       65       90       80       95
FPC 4                         55    60       75       65       90       80       95
FPC 5                         55    60       75       65       90       80       95
```

show chassis temperature-thresholds (EX9251 Switches)

```
user@switch> show chassis temperature-thresholds

                         Fan speed      Yellow alarm      Red alarm      Fire Shutdown
                         (degrees C)      (degrees C)     (degrees C)      (degrees C)
Item                     Normal  High   Normal  Bad fan   Normal  Bad fan     Normal
Routing Engine                          48    54       85       85      100      100        102
CB Top Right Inlet Sensor               35    40       63       63       85       85         95
CB Top Left Inlet Sensor                40    45       65       65       85       85         95
CB Top Right Exhaust Sensor             45    50       68       68       85       85         95
CB Top Left Exhaust Sensor              65    70       78       78       85       85         95
CB CPU Core-0 Temp                      65    70       80       80       90       90        100
CB CPU Core-1 Temp                      65    70       80       80       90       90        100
CB CPU Core-2 Temp                      65    70       80       80       90       90        100
CB CPU Core-3 Temp                      65    70       80       80       90       90        100
CB CPU Core-4 Temp                      65    70       80       80       90       90        100
CB CPU Core-5 Temp                      65    70       80       80       90       90        100
CB CPU Core-6 Temp                      65    70       80       80       90       90        100
CB CPU Core-7 Temp                      65    70       80       80       90       90        100
FPC EA0_HMC0 Logic die                  85    90       95       95      105      105        110
FPC EA0_HMC0 DRAM botm                  80    85       90       90      105      105        110
FPC EA0_HMC1 Logic die                  85    90       95       95      105      105        110
FPC EA0_HMC1 DRAM botm                  80    85       90       90      105      105        110
FPC EA0 Chip                            92    97      103      103      109      109        115
FPC EA0-XR0 Chip                        85    90       98       98      103      103        110
FPC EA0-XR1 Chip                        85    90       98       98      103      103        110
```

show chassis temperature-thresholds (EX9253 witches)

```
user@switch> show chassis temperature-thresholds

                         Fan speed      Yellow alarm      Red alarm      Fire Shutdown
                         (degrees C)      (degrees C)     (degrees C)      (degrees C)
Item                     Normal  High   Normal  Bad fan   Normal  Bad fan     Normal
Routing Engine 0                        48    54       85       85      100      100        102
CB 0 Exhaust Temp Sensor                60    65       75       75       85       85         95
CB 0 Inlet Temp Sensor                  60    65       75       75       85       85         95
CB 0 CPU DIE Temp Sensor                83    90       98       98      105      105        110
CB 1 Exhaust Temp Sensor                60    65       75       75       85       85         95
CB 1 Inlet Temp Sensor                  60    65       75       75       85       85         95
CB 1 CPU DIE Temp Sensor                83    90       98       98      105      105        110
FPC 0 Intake Temp Sensor                40    45       75       70       85       80         95
FPC 0 Exhaust-A Temp Sensor             55    60       85       80       90       90        100
FPC 0 Exhaust-B Temp Sensor             55    60       85       80       90       90        100
FPC 0 EA0 Chip                          87    92       97       97      105      105        110
FPC 0 EA0-XR0 Chip                      88    93       98       98      120      120        125
FPC 0 EA0-XR1 Chip                      88    93       98       98      120      120        125
FPC 0 EA1 Chip                          87    92       97       97      105      105        110
FPC 0 EA1-XR0 Chip                      88    93       98       98      120      120        125
FPC 0 EA1-XR1 Chip                      88    93       98       98      120      120        125
FPC 0 EA2 Chip                          87    92       97       97      105      105        110
FPC 0 EA2-XR0 Chip                      88    93       98       98      120      120        125
FPC 0 EA2-XR1 Chip                      88    93       98       98      120      120        125
FPC 0 PF Chip                           89    94      104      104      120      120        120
FPC 0 EA0_HMC0 Logic die                88    93      103      103      120      120        125
FPC 0 EA0_HMC0 DRAM botm                83    88       98       98      120      120        125
FPC 0 EA0_HMC1 Logic die                88    93      103      103      120      120        125
FPC 0 EA0_HMC1 DRAM botm                83    88       98       98      120      120        125
FPC 0 EA0_HMC2 Logic die                88    93      103      103      120      120        125
FPC 0 EA0_HMC2 DRAM botm                83    88       98       98      120      120        125
FPC 0 EA1_HMC0 Logic die                88    93      103      103      120      120        125
FPC 0 EA1_HMC0 DRAM botm                83    88       98       98      120      120        125
FPC 0 EA1_HMC1 Logic die                88    93      103      103      120      120        125
FPC 0 EA1_HMC1 DRAM botm                83    88       98       98      120      120        125
FPC 0 EA1_HMC2 Logic die                88    93      103      103      120      120        125
FPC 0 EA1_HMC2 DRAM botm                83    88       98       98      120      120        125
FPC 0 EA2_HMC0 Logic die                88    93      103      103      120      120        125
FPC 0 EA2_HMC0 DRAM botm                83    88       98       98      120      120        125
FPC 0 EA2_HMC1 Logic die                88    93      103      103      120      120        125
```

FPC 0 EA2_HMC1 DRAM botm	83	88	98	98	120	120	125
FPC 0 EA2_HMC2 Logic die	88	93	103	103	120	120	125
FPC 0 EA2_HMC2 DRAM botm	83	88	98	98	120	120	125
FPC 1 Intake Temp Sensor	40	45	75	70	85	80	95
FPC 1 Exhaust-A Temp Sensor	55	60	85	80	90	90	100
FPC 1 Exhaust-B Temp Sensor	55	60	85	80	90	90	100
FPC 1 EA0 Chip	87	92	97	97	105	105	110
FPC 1 EA0-XR0 Chip	88	93	98	98	120	120	125
FPC 1 EA0-XR1 Chip	88	93	98	98	120	120	125
FPC 1 EA1 Chip	87	92	97	97	105	105	110
FPC 1 EA1-XR0 Chip	88	93	98	98	120	120	125
FPC 1 EA1-XR1 Chip	88	93	98	98	120	120	125
FPC 1 EA2 Chip	87	92	97	97	105	105	110
FPC 1 EA2-XR0 Chip	88	93	98	98	120	120	125
FPC 1 EA2-XR1 Chip	88	93	98	98	120	120	125
FPC 1 PF Chip	89	94	104	104	120	120	120
FPC 1 EA0_HMC0 Logic die	88	93	103	103	120	120	125
FPC 1 EA0_HMC0 DRAM botm	83	88	98	98	120	120	125
FPC 1 EA0_HMC1 Logic die	88	93	103	103	120	120	125
FPC 1 EA0_HMC1 DRAM botm	83	88	98	98	120	120	125
FPC 1 EA0_HMC2 Logic die	88	93	103	103	120	120	125
FPC 1 EA0_HMC2 DRAM botm	83	88	98	98	120	120	125
FPC 1 EA1_HMC0 Logic die	88	93	103	103	120	120	125
FPC 1 EA1_HMC0 DRAM botm	83	88	98	98	120	120	125
FPC 1 EA1_HMC1 Logic die	88	93	103	103	120	120	125
FPC 1 EA1_HMC1 DRAM botm	83	88	98	98	120	120	125
FPC 1 EA1_HMC2 Logic die	88	93	103	103	120	120	125
FPC 1 EA1_HMC2 DRAM botm	83	88	98	98	120	120	125
FPC 1 EA2_HMC0 Logic die	88	93	103	103	120	120	125
FPC 1 EA2_HMC0 DRAM botm	83	88	98	98	120	120	125
FPC 1 EA2_HMC1 Logic die	88	93	103	103	120	120	125
FPC 1 EA2_HMC1 DRAM botm	83	88	98	98	120	120	125
FPC 1 EA2_HMC2 Logic die	88	93	103	103	120	120	125
FPC 1 EA2_HMC2 DRAM botm	83	88	98	98	120	120	125

Release Information

Command introduced in Junos OS Release 8.0.

`sfc` command introduced in Junos OS Release 9.6 for the TX Matrix Plus router.

`satellite` option introduced in Junos OS Release 14.2R3.

Command introduced in Junos OS Release 18.2R1 for MX10008 Routers and EX9253 Switches.

show chassis zones

IN THIS SECTION

- Syntax | **1648**
- Syntax (MX Series Routers) | **1648**
- Syntax (QFX Series) | **1649**
- Description | **1649**
- Options | **1649**
- Required Privilege Level | **1650**
- Output Fields | **1650**
- Sample Output | **1652**
- Release Information | **1660**

Syntax

```
show chassis zones
<detail>
```

Syntax (MX Series Routers)

```
show chassis zones
<detail>
<all-members>
```

```
<local>
<member member-id>
```

Syntax (QFX Series)

```
show chassis zones
<detail>
<interconnect-device name>
```

Description

(QFabric systems only) Display the status of the two cooling system zones on the Interconnect device. Zone 1 consists of eight (0 – 7) front cards, which are cooled by two fan trays. Zone 2 consists of two control boards and eight rear cards, which are cooled by eight (0 – 7) fan trays.

(MX2010, MX2020, and MX2008 routers only) Display the status of the cooling system zones of the chassis. Zone 0 consists of the Control Board, ten (0–9) FPCs, and their respective PICs, Switch Fabric Boards, and Adapter Cards. Zone 1 consists of the Routing Engine, Control Board, and Switch Processor Mezzanine Boards.

(PTX5000 Packet Transport Router only) Display the status of the two cooling system zones of the chassis. Zone 0 consists of the Routing Engine, Control Board, SIB, PMB, and the CCG, and is cooled by the vertical fan tray. Zone 1 consists of the eight (0–7) FPCs, and their respective PICs, and is cooled by the horizontal fan trays. The vertical fan tray is located at the front of the chassis. One horizontal fan tray is located at the front top of the chassis, and another is located at the front bottom of the chassis.

Options

all-members	(MX2010, MX2020, and MX2008 routers only) (Optional) Display the status of the cooling system zones in all members of the Virtual Chassis configuration.
detail	(MX2010, MX2020, and MX2008 routers only) (Optional) Display detailed status of the cooling system zones.

detail *device-name* (QFabric systems only) (Optional) Display detailed status of the two cooling systems on the Interconnect device.

interconnect-device *name* (QFabric systems only) (Optional) Display the status of the cooling zones on the Interconnect device.

local (MX2010, MX2020, and MX2008 routers only) (Optional) Display the status of the cooling system zones in the local member of the Virtual Chassis.

member *member-id* (MX2010, MX2020, and MX2008 routers only) (Optional) Display the status of the cooling system zones in the specified member of the Virtual Chassis. Replace *member-id* with the value 0 or 1.

Required Privilege Level

view

Output Fields

Table 102 on page 1650 lists the output fields for the `show chassis zones` command. Output fields are listed in the approximate order in which they appear.

Table 102: show chassis zones Output Fields

Field Name	Field Description
`Slot`	FPC slot number of the device whose content is being displayed. On QFX3500 standalone switches, the number is always `0`.
`Beacon State`	Status of the beacon state: • Off—The beacon is `OFF`. • On—The beacon is `ON`.
`show chassis zones` command output fields for MX2020, MX2010, and MX2008 routers:	

Table 102: show chassis zones Output Fields *(Continued)*

Field Name	Field Description
`Driving FRU`	Field replacable unit (FRU).
`Temperature`	Temperature of the specified FRU in degrees Celsius and degrees Fahrenheit.
`Condition`	Condition of the specified FRU. Condition can be `HIGH TEMP`, `WARM TEMP`, `OK`, and `Offline`.
`Num Fans Missing`	Number of fans or fan trays missing.
`Num Fans Failed`	Number of fans or fan trays that have failed.
`Fan Duty Cycle`	Fan duty cycle value.
`show chassis zones detail` command output fields for MX2020, MX2010, and MX2008 routers:	
`Item`	Chassis component: • Information about the chassis, Routing Engines, Control Boards (CBs), Switch Fabric Boards (SFBs), PICs, Flexible PIC Concentrators (FPCs), and Adapter Cards (ADCs).
`Measurement`	Fan tray speed utilization in percentage.
`Status`	Status of the specified item. Status can be `OK`, `Absent`, or `Offline`.

Sample Output

show chassis zones interconnect-device (QFabric System)

```
user@switch> show chassis zones interconnect-device
interconnect1
Slot            Beacon State
            FPC     0           OFF
```

show chassis zones (MX2010 Router)

```
user@host> show chassis zones
ZONE 0 Status
    Driving FRU                 FPC 6
    Temperature                 81 degrees C / 177 degrees F
    Condition                   HIGH TEMP
    Num Fans Missing            0
    Num Fans Failed             0
    Fan Duty Cycle              30

ZONE 1 Status
    Driving FRU                 SFB 0 Exhaust-Zone1
    Temperature                 71 degrees C / 159 degrees F
    Condition                   WARM TEMP
    Num Fans Missing            0
    Num Fans Failed             0
    Fan Duty Cycle              30
```

show chassis zones detail (MX2010 Router)

```
user@host > show chassis zones
ZONE 0 Status
Item                    Status                Measurement
CB 0                    WARM TEMP
CB 1                    WARM TEMP
FPC 0                   HIGH TEMP
FPC 1                   HIGH TEMP
FPC 2                   WARM TEMP
```

```
FPC 3                  HIGH TEMP
FPC 4                  HIGH TEMP
FPC 5                  HIGH TEMP
FPC 6                  HIGH TEMP
FPC 7                  HIGH TEMP
FPC 8                  HIGH TEMP
FPC 9                  HIGH TEMP
ADC 0                  WARM TEMP
ADC 1                  WARM TEMP
ADC 2                  WARM TEMP
ADC 3                  WARM TEMP
ADC 4                  WARM TEMP
ADC 5                  WARM TEMP
ADC 6                  WARM TEMP
ADC 7                  WARM TEMP
ADC 8                  WARM TEMP
ADC 9                  WARM TEMP
SFB 0                  WARM TEMP
SFB 1                  WARM TEMP
SFB 2                  WARM TEMP
SFB 3                  Offline
SFB 4                  HIGH TEMP
SFB 5                  WARM TEMP
SFB 6                  HIGH TEMP
SFB 7                  WARM TEMP
Fan Tray 0             OK                  Spinning at 98% fan tray speed
Fan Tray 1             OK                  Spinning at 98% fan tray speed

ZONE 1 Status
Item                   Status              Measurement
CB 0                   WARM TEMP
CB 1                   WARM TEMP
Routing Engine 0       OK
Routing Engine 1       OK
SFB 0                  WARM TEMP
SFB 1                  WARM TEMP
SFB 2                  WARM TEMP
SFB 3                  Offline
SFB 4                  HIGH TEMP
SFB 5                  WARM TEMP
SFB 6                  HIGH TEMP
SFB 7                  WARM TEMP
SPMB 0                 OK
```

```
SPMB 1                  OK
Fan Tray 2              OK                    Spinning at 64% fan tray speed
Fan Tray 3              OK                    Spinning at 64% fan tray speed
```

show chassis zones (MX2020 Router)

```
user@host> show chassis zones
ZONE 0 Status
    Driving FRU                 FPC 0
    Temperature                 31 degrees C / 87 degrees F
    Condition                   OK
    Num Fans Missing            0
    Num Fans Failed             0
    Fan Duty Cycle              30

ZONE 1 Status
    Driving FRU                 FPC 19
    Temperature                 32 degrees C / 89 degrees F
    Condition                   OK
    Num Fans Missing            0
    Num Fans Failed             0
    Fan Duty Cycle              30
```

show chassis zones detail (MX2020 Router)

```
user@host> show chassis zones detail
ZONE 0 Status
Item                    Status                Measurement
CB 0                    OK
CB 1                    OK
FPC 0                   OK
FPC 1                   OK
FPC 2                   OK
FPC 3                   OK
FPC 4                   OK
FPC 5                   OK
FPC 6                   OK
FPC 7                   OK
FPC 8                   OK
FPC 9                   OK
```

```
ADC 0                   OK
ADC 1                   OK
ADC 2                   OK
ADC 3                   OK
ADC 4                   OK
ADC 5                   OK
ADC 6                   OK
ADC 7                   OK
ADC 8                   OK
ADC 9                   OK
SFB 0                   OK
SFB 1                   OK
SFB 2                   OK
SFB 3                   OK
SFB 4                   OK
SFB 5                   OK
SFB 6                   OK
SFB 7                   OK
Fan Tray 0              OK                  Spinning at 38% fan tray speed
Fan Tray 1              OK                  Spinning at 37% fan tray speed

ZONE 1 Status
Item                    Status              Measurement
CB 0                    OK
CB 1                    OK
Routing Engine 0        OK
Routing Engine 1        OK
FPC 10                  OK
FPC 11                  OK
FPC 12                  OK
FPC 13                  OK
FPC 14                  OK
FPC 15                  OK
FPC 16                  OK
FPC 17                  OK
FPC 18                  OK
FPC 19                  OK
ADC 10                  OK
ADC 11                  OK
ADC 12                  OK
ADC 13                  OK
ADC 14                  OK
ADC 15                  OK
```

```
ADC 16                  OK
ADC 17                  OK
ADC 18                  OK
ADC 19                  OK
SFB 0                   OK
SFB 1                   OK
SFB 2                   OK
SFB 3                   OK
SFB 4                   OK
SFB 5                   OK
SFB 6                   OK
SFB 7                   OK
SPMB 0                  OK
SPMB 1                  OK
Fan Tray 2              OK                    Spinning at 38% fan tray speed
Fan Tray 3              OK                    Spinning at 38% fan tray speed
```

show chassis zones (MX2008 Router)

```
user@host> show chassis zones

ZONE 0 Status
    Driving FRU                 Routing Engine 0
    Temperature                 67 degrees C / 152 degrees F
    Condition                   WARM TEMP
    Num Fans Missing            0
    Num Fans Failed             0
    Fan Duty Cycle              27
```

show chassis zones detail (MX2008 Router)

```
user@host> show chassis zones detail
ZONE 0 Status
Item                    Status                Measurement
CB 0                    OK
CB 1                    OK
Routing Engine 0        OK
Routing Engine 1        OK
FPC 0                   OK
FPC 1                   Absent
```

```
FPC 2                   Absent
FPC 3                   OK
FPC 4                   Absent
FPC 5                   OK
FPC 6                   Absent
FPC 7                   OK
FPC 8                   Absent
FPC 9                   OK
ADC 0                   OK
ADC 1                   Absent
ADC 2                   Absent
ADC 3                   OK
ADC 4                   Absent
ADC 5                   OK
ADC 6                   Absent
ADC 7                   OK
ADC 8                   Absent
ADC 9                   Absent
SFB 0                   OK
SFB 1                   OK
SFB 2                   OK
SFB 3                   OK
SFB 4                   OK
SFB 5                   OK
SFB 6                   OK
SFB 7                   OK
SPMB 0                  OK
SPMB 1                  OK
Fan Tray 0              OK                    Spinning at 60% fan tray speed
Fan Tray 1              OK                    Spinning at 58% fan tray speed
```

show chassis beacon interconnect-device (QFabric System)

```
user@switch> show chassis beacon interconnect-device
interconnect1
Chassis              OFF
CB 0                 OFF
CB 1                 OFF
FC 0 FPC 0           OFF
FC 1 FPC 1           OFF
RC 0 FPC 8           OFF
```

```
RC 1 FPC 9           OFF
```

show chassis beacon interconnect-device fpc (QFabric System)

```
user@switch> show chassis beacon interconnect-device
interconnect1 fpc 0
FPC 0                ON
```

show chassis beacon node-device (QFabric System)

```
user@switch> show chassis beacon node-device
node1
node1               ON
```

show chassis beacon node-device fpc (QFabric System)

```
user@switch> show chassis beacon node-device
node1 fpc 0
FPC 0              ON
```

show chassis zones (PTX5000 Packet Transport Router)

```
user@host> show chassis zones
ZONE 0 Status
    Driving FRU                Routing Engine 1
    Temperature                62 degrees C / 143 degrees F
    Condition                  OK
    Num Fans Missing           0
    Num Fans Failed            0
    Fan Duty Cycle             0

ZONE 1 Status
    Driving FRU                FPC 0 TL0
    Temperature                71 degrees C / 159 degrees F
    Condition                  OK
```

```
    Num Fans Missing            0
    Num Fans Failed             0
    Fan Duty Cycle              0
```

show chassis zones detail (PTX5000 Packet Transport Router)

```
user@host> show chassis zones detail
ZONE 0 Status
Item                    Status               Measurement
CB 0                    OK
CB 1                    OK
Routing Engine 0        OK
Routing Engine 1        OK
SIB 0                   OK
SIB 1                   OK
SIB 2                   OK
SIB 3                   OK
SIB 4                   OK
SIB 5                   Absent
SIB 6                   Absent
SIB 7                   Absent
SIB 8                   Absent
Fan Tray 0              OK                   Spinning at 30% fan tray speed

ZONE 1 Status
Item                    Status               Measurement
FPC 0                   OK
FPC 1                   OK
FPC 2                   OK
FPC 3                   OK
FPC 4                   OK
FPC 5                   Absent
FPC 6                   Offline
FPC 7                   OK
Fan Tray 1              OK                   Spinning at 33% fan tray speed
Fan Tray 2              OK                   Spinning at 36% fan tray speed
```

Release Information

Command introduced in Junos OS Release 11.3.

`all-members`, `local`, and `member` *`member-id`* options introduced in Junos OS Release 15.1 for MX2020 and MX2010 routers.

RELATED DOCUMENTATION

show chassis fan | **1291**

show chassis temperature-thresholds | **1619**

show pfe cfeb

IN THIS SECTION

- Syntax | **1660**
- Description | **1661**
- Options | **1661**
- Required Privilege Level | **1661**
- Output Fields | **1661**
- Sample Output | **1664**
- Release Information | **1667**

Syntax

```
show pfe cfeb
```

Description

(M7i routers only) Display Packet Forwarding Engine Compact Forwarding Engine Board (CFEB) status and statistics information.

Options

This command has no options.

Required Privilege Level

admin

Output Fields

Table 103 on page 1662 lists the output fields for the `show pfe cfeb` command. Output fields are listed in the approximate order in which they appear.

Table 103: show pfe cfeb Output Fields

Field Name	Field Description

CFEB status	Status of CFEB:
	• Slot—CFEB slot number.
	• State—Status of the CFEB:
	  • Online—CFEB is online and running.
	  • Offline—CFEB is powered down.
	• Last State Change—Date and time the CFEB state last changed.
	• Uptime (total)—How long the Routing Engine has been connected to the CFEB and, therefore, how long the Flexible PIC Concentrator (FPC) has been up and running.
	• Failures—Number of PFE Peer detach failures.
	• Pending—Number of messages waiting to be sent.
	• Policer Drop Probability—Current policer drop probability. The default is high, and can be configured using the `policer-drop-probability-low` statement.

Peer message type receive qualifiers	• Message Type—IPC Message Type. For example, interface and nexthop.
	• Receive Qualifier – Message receive qualifier for a peer (non-None only):
	  • All
	  • Only this slot
	  • Selective slot

Table 103: show pfe cfeb Output Fields *(Continued)*

Field Name	Field Description
PFE listener statistics	PFE listener statistics: • Open—Number of times a peer was opened. • Close—Number of times a peer was closed. • Sleep—Number of times a thread slept. • Wakeup—Number of times wakeup was issued. • Resync Request—Number of resync requests. • Resync Done—Number of successful resyncs. • Resync Fail—Number of failed resyncs. • Resync Time—Time the resync last happened.
PFE IPC statistics	• type—IPC Message Type. • TX Messages—Number of Tx messages. • RX Messages—Number of Rx messages.
PFE socket-buffer mbuf depth	• bucket—Bucket number. • count—Number of messages in the bucket.
PFE socket-buffer bytes pending transmit	• bucket—Bucket number. • count—Number of bytes pending transmit.

Sample Output

show pfe cfeb

```
user@host> show pfe cfeb

CFEB status:
  Slot:                 Present
  State:                Online
  Last State Change:    2005-03-10 09:01:25 PST
  Uptime (total):       2d 00:44
  Failures:             0
  Pending:              0
..Policer Drop Probability: HIGH

Peer message type receive qualifiers:
 Message Type      Receive Qualifier
 ---------------  -----------------
             TTP  All
             IFD  All
             IFL  All
         Nexthop  All
             COS  All
           Route  All
      SW Firewall  All
      HW Firewall  All
   PFE Statistics  All
   PIC Statistics  All
         Sampling  All
       Monitoring  None
              ASP  None
            L2TP  None
        Collector  None
 PIC Configuration  All
 Queue Statistics  All
          (null)  None

PFE listener statistics:
  Open:                 1
  Close:                0
  Sleep:                0
```

```
  Wakeup:               0
  Resync Request:       0
  Resync Done:          1
  Resync Fail:          0
  Resync Time:          0

PFE IPC statistics:
 type        TX Messages  RX messages
 ----------- -----------  -----------
      Header            0            0
        Test            0            0
   Interface          562        14582
     Chassis            0            0
        Boot            0            0
    Next-hop          104            0
       Jtree            0            0
       Cprod            0            0
       Route          103            1
         Pfe         3770         2925
         Dfw           10            0
  Mastership            0            0
    Sampling            0            0
        GUCP            0            0
         CoS           50            0
        GCCP            0            0
        GHCP            0            0
        IRSD            0            0
  Monitoring            0            0
          RE            0            0
         PIC            0            0
     ASP cfg            0            0
     ASP cmd            0            0
    L2TP cfg            0            0
   Collector            0            0
   PIC state            0            0
  Aggregator            0            0
       Empty            0            0

PFE socket-buffer mbuf depth:
 bucket          count
 ------          -----
     0               0
     1               0
```

```
      2               0
      3               0
      4               0
      5               0
      6               0
      7               0
      8               0
      9               0
     10               0
     11               0
     12               0
     13               0
     14               0
     15               0
     16               0
     17               0
     18               0
     19               0
     20               0
     21               0

PFE socket-buffer bytes pending transmit:
 bucket          count
 ------          -----
      0              0
      1              0
      2              0
      3              0
      4              0
      5              0
      6              0
      7              0
      8              0
      9              0
     10              0
     11              0
     12              0
     13              0
     14              0
     15              0
     16              0
     17              0
     18              0
```

```
19              0
20              0
21              0
```

Release Information

Command introduced before Junos OS Release 7.4.

show pfe feb

IN THIS SECTION

- Syntax | **1667**
- Description | **1668**
- Options | **1668**
- Required Privilege Level | **1668**
- Output Fields | **1668**
- Sample Output | **1671**
- Release Information | **1677**

Syntax

```
show pfe feb
```

Description

(M5 and M10 routers only) Display Packet Forwarding Engine Forwarding Engine Board (FEB) status and statistics information.

Options

This command has no options.

Required Privilege Level

admin

Output Fields

Table 104 on page 1669 lists the output fields for the `show pfe feb` command. Output fields are listed in the approximate order in which they appear.

Table 104: show pfe feb Output Fields

Field Name	Field Description

FEB status	Status of FEB:
	• Slot—FEB slot number.
	• State—State of the FEB:
	  • Offline—FEB is powered down.
	  • Online—FEB is operational and running.
	  • Check—FEB is in alarmed state where the Switch Interface Board (SIB) plane is partially operational for the following reasons:
	  • FEB is not inserted properly.
	  • Two or more links between the FEB and Packet Forwarding Engine fail.
	• Last State Change—Date and time the CFEB state last changed.
	• Uptime (total)—How long the Routing Engine has been connected to the FEB and, therefore, how long the Flexible PIC Concentrator (FPC) has been up and running.
	• Failures—Number of PFE Peer detach failures.
	• Pending—Number of messages waiting to be sent.
	• Policer Drop Probability—Current policer drop probability. The default is high, and can be configured using the `policer-drop-probability-low` statement.

Peer message type receive qualifiers	• Message Type—IPC Message Type. For example, interface and nexthop.
	• Receive Qualifier – Message receive qualifier for a peer (non-None only):
	  • All
	  • Only this slot
	  • Selective slot

Table 104: show pfe feb Output Fields *(Continued)*

Field Name	Field Description
PFE listener statistics	PFE listener statistics: • Open—Number of times a peer was opened. • Close—Number of times a peer was closed. • Sleep—Number of times a thread slept. • Wakeup—Number of times wakeup was issued. • Resync Request—Number of resync requests. • Resync Done—Number of successful resyncs. • Resync Fail—Number of failed resyncs. • Resync Time—Time the resync last happened.
PFE IPC statistics	• type—IPC Message Type. • TX Messages—Number of Tx messages. • RX Messages—Number of Rx messages.
PFE socket-buffer mbuf depth	• bucket—Bucket number. • count—Number of messages in the bucket.
PFE socket-buffer bytes pending transmit	• bucket—Bucket number. • count—Number of bytes pending transmit.

Sample Output

show pfe feb

```
user@host> show pfe feb

FEB status:
  Slot:                 Present
  State:                Online
  Last State Change:    2005-03-11 00:33:57 PST
  Uptime (total):       1d 09:14
  Failures:             0
  Pending:              0
..Policer Drop Probability: HIGH

Peer message type receive qualifiers:
 Message Type      Receive Qualifier
 ---------------  -----------------
              TTP  All
              IFD  All
              IFL  All
          Nexthop  All
              COS  All
            Route  All
      SW Firewall  All
      HW Firewall  All
   PFE Statistics  All
   PIC Statistics  All
         Sampling  All
       Monitoring  None
              ASP  None
             L2TP  None
        Collector  None
 PIC Configuration  All
 Queue Statistics  All
           (null)  None

PFE listener statistics:
  Open:                 1
  Close:                0
  Sleep:                0
```

```
  Wakeup:               0
  Resync Request:       0
  Resync Done:          1
  Resync Fail:          0
  Resync Time:          0

PFE IPC statistics:
 type        TX Messages  RX messages
 ----------- -----------  -----------
      Header           0            0
        Test           0            0
   Interface         639        11889
     Chassis           0            0
        Boot           0            0
    Next-hop         104            0
       Jtree           0            0

       Cprod           0            0
       Route         940            0
         Pfe        3008         1995
         Dfw           9            0
  Mastership           0            0
    Sampling           0            0
        GUCP           0            0
         CoS          35            0
        GCCP           0            0
        GHCP           0            0
        IRSD           0            0
  Monitoring           0            0
          RE           0            0
         PIC           0            0
     ASP cfg           0            0
     ASP cmd           0            0
    L2TP cfg           0            0
   Collector           0            0
   PIC state           0            0
  Aggregator           0            0
       Empty           0            0

PFE socket-buffer mbuf depth:
 bucket          count
 ------          -----
     0               0
```

```
      1                0
      2                0
      3                0
      4                0
      5                0
      6                0
      7                0
      8                0
      9                0
     10                0
     11                0
     12                0
     13                0
     14                0
     15                0
     16                0
     17                0
     18                0
     19                0
     20                0
     21                0

PFE socket-buffer bytes pending transmit:
 bucket           count
 ------           -----
      0               0
      1               0
      2               0
      3               0
      4               0
      5               0
      6               0
      7               0
      8               0
      9               0
     10               0
     11               0
     12               0
     13               0
     14               0
     15               0
     16               0
     17               0
```

```
    18              0
    19              0
    20              0
    21              0
```

show pfe feb

```
user@host> show pfe feb

FEB status:
  Slot:                 Present
  State:                Online
  Last State Change:    2005-03-11 00:33:57 PST
  Uptime (total):       1d 09:14
  Failures:             0
  Pending:              0

Peer message type receive qualifiers:
 Message Type      Receive Qualifier
 ---------------  -----------------
             TTP  All
             IFD  All
             IFL  All
         Nexthop  All
             COS  All
           Route  All
      SW Firewall  All
      HW Firewall  All
   PFE Statistics  All
   PIC Statistics  All
         Sampling  All
       Monitoring  None
              ASP  None
            L2TP  None
        Collector  None
 PIC Configuration  All
 Queue Statistics  All
           (null)  None

PFE listener statistics:
  Open:                 1
```

```
  Close:                0
  Sleep:                0
  Wakeup:               0
  Resync Request:       0
  Resync Done:          1
  Resync Fail:          0
  Resync Time:          0

PFE IPC statistics:
 type        TX Messages  RX messages
 ----------- -----------  -----------
      Header            0            0
        Test            0            0
   Interface          639        11889
     Chassis            0            0
        Boot            0            0
    Next-hop          104            0
       Jtree            0            0

       Cprod            0            0
       Route          940            0
         Pfe         3008         1995
         Dfw            9            0
  Mastership            0            0
    Sampling            0            0
        GUCP            0            0
         CoS           35            0
        GCCP            0            0
        GHCP            0            0
        IRSD            0            0
  Monitoring            0            0
          RE            0            0
         PIC            0            0
     ASP cfg            0            0
     ASP cmd            0            0
    L2TP cfg            0            0
   Collector            0            0
   PIC state            0            0
  Aggregator            0            0
       Empty            0            0

PFE socket-buffer mbuf depth:
 bucket          count
```

```
 ------          -----
     0               0
     1               0
     2               0
     3               0
     4               0
     5               0
     6               0
     7               0
     8               0
     9               0
    10               0
    11               0
    12               0
    13               0
    14               0
    15               0
    16               0
    17               0
    18               0
    19               0
    20               0
    21               0

PFE socket-buffer bytes pending transmit:
 bucket          count
 ------          -----
     0               0
     1               0
     2               0
     3               0
     4               0
     5               0
     6               0
     7               0
     8               0
     9               0
    10               0
    11               0
    12               0
    13               0
    14               0
    15               0
```

```
16              0
17              0
18              0
19              0
20              0
21              0
```

Release Information

Command introduced before Junos OS Release 7.4.

show pfe fpc

IN THIS SECTION

- Syntax | **1677**
- Syntax (TX Matrix and TX Matrix Plus Router) | **1678**
- Syntax (MX Series Router) | **1678**
- Description | **1678**
- Options | **1678**
- Required Privilege Level | **1679**
- Output Fields | **1679**
- Sample Output | **1684**
- Release Information | **1704**

Syntax

```
show pfe fpc slot
<detail | extensive>
```

Syntax (TX Matrix and TX Matrix Plus Router)

```
show pfe fpc
<lcc number>
```

Syntax (MX Series Router)

```
show pfe fpc slot
<detail | extensive>
<all-members>
<local>
<member member-id>
```

Description

Display Packet Forwarding Engine statistics for the specified Flexible PIC Concentrator (FPC).

Options

slot	FPC slot number. Replace ***slot*** with a value from **0** through **2**.
detail | extensive	(Optional) Display the specified level of detail.
all-members	(MX Series routers only) (Optional) Display Packet Forwarding Engine statistics for the specified FPC in all members of the Virtual Chassis configuration.
lcc *number*	(TX Matrix and TX Matrix Plus routers only) (Optional) On a TX Matrix router, the slot number of the T640 router (or line-card chassis) that houses the FPC. On a TX Matrix Plus router, **lcc *number*** represents the slot number of the router (or line-card chassis) that houses the FPC. Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

local (MX Series routers only) (Optional) Display Packet Forwarding Engine statistics for the specified FPC in the local Virtual Chassis member.

member ***member-id*** (MX Series routers only) (Optional) Display Packet Forwarding Engine statistics for the specified FPC in the specified member of the Virtual Chassis configuration. Replace ***member-id*** with a value of 0 or 1.

Required Privilege Level

admin

Output Fields

Table 105 on page 1680 lists the output fields for the `show pfe fpc` command. Output fields are listed in the approximate order in which they appear.

Table 105: show pfe fpc Output Fields

Field Name	Field Description

FPC 1 status	Status of FPC 1:
	• Slot—FPC slot number – 1.
	• State—State of FPC1:
	  • Dead—Held in reset because of errors.
	  • Diag—Slot is being ignored while the FPC is running diagnostics.
	  • Dormant—Held in reset.
	  • Empty—No FPC is present.
	  • Online—FPC is online and running.
	  • Present—FPC is detected by the chassis daemon but either is not supported by the current version of Junos OS or is inserted in the wrong slot. The output also states either Hardware Not Supported or Hardware Not in Right Slot. The FPC is coming up but not yet online.
	  • Probed—Probe is complete; awaiting restart of the Packet Forwarding Engine (PFE).
	  • Probe-wait—Waiting to be probed.
	• Last State Change—Date and time the FPC state last changed.
	• Uptime—How long the Routing Engine has been connected to the FEB and, therefore, how long the Flexible PIC Concentrator (FPC) has been up and running.
	• Failures—Number of PFE Peer detach failures.
	• Pending—Number of messages waiting to be sent.
	• Route Memory Enhanced—Reallocation of the jtree memory on the Packet Forwarding Engine to allocate more memory for routing tables. Can be configured with the `memory-enhanced` statement.

Table 105: show pfe fpc Output Fields *(Continued)*

Field Name	Field Description
PFE listener statistics	PFE listener statistics: • Open—Number of times a peer was opened. • Close—Number of times a peer was closed. • Sleep—Number of times a thread slept. • Wakeup—Number of times wakeup was issued. • Resync Request—Number of resync requests. • Resync Done—Number of successful resyncs. • Resync Fail—Number of failed resyncs. • Resync Time—Time the resync last happened.
PFE IPC statistics	• type—IPC Message Type. • TX Messages—Number of Tx messages. • RX Messages—Number of Rx messages.
GFPC 0 status	Status of GFPC 0: • Slot—GFPC slot number – 0. • State—State of GFPC. • Last State Change—Date and time the GFPC state last changed.
Peer message type receive qualifiers [non-NONE(s) only]	• IPC Msg Type—IPC Message Type. For example, interface, nexthop. • Receive Qualifier—Message receive qualifier for a peer (non-NONE(s) only):
IFSTATE BITS SET	IFSTATE clients that have registered to receive the message types this slot is listening to.

Table 105: show pfe fpc Output Fields *(Continued)*

Field Name	Field Description
PFE listener statistics	PFE listener statistics: • Open—Number of times a peer was opened. • Close—Number of times a peer was closed. • Sleep—Number of times a thread slept. • Wakeup—Number of times wakeup was issued. • Resync Request—Number of resync requests. • Resync Done—Number of successful resyncs. • Resync Fail—Number of failed resyncs. • Resync Time—Time the resync last happened.
PFE IPC statistics	• type—IPC Message Type. • TX Messages—Number of Tx messages. • RX Messages—Number of Rx messages.
PFE socket-buffer mbuf depth	• bucket—Bucket number. • count—Number of messages in the bucket.
PFE socket-buffer bytes pending transmit	• bucket—Bucket number. • count—Number of bytes pending transmit.

Table 105: show pfe fpc Output Fields *(Continued)*

Field Name	Field Description
GFPC 2 status	Status of GFPC 2: • Slot—GFPC slot number – 2. • State—State of GFPC. • Last State Change—Date and time the GFPC state last changed. • Route Memory Enhanced—Reallocation of the jtree memory on the Packet Forwarding Engine to allocate more memory for routing tables. Can be configured with the `memory-enhanced` statement. • Filter Memory Enhanced—Reallocation of the jtree memory on the Packet Forwarding Engine to allocate more memory for firewall filters. Can be configured with the `memory-enhanced` statement.
XDPC status	XDPC status: • Slot—Present or empty. • State—Online or offline. • Last State Change—Date and time the DPC state last changed. • Uptime (total)—Length of time the DPC has been online. • Failures—Number of DPC failures. • Pending—Number of messages waiting to be sent. • Route Memory Enhanced—Reallocation of the jtree memory on the Packet Forwarding Engine to allocate more memory for routing tables. Can be configured with the `memory-enhanced` statement. • Policer Drop Probability—Current policer drop probability. The default is high, and can be configured using the `policer-drop-probability-low` statement.

Sample Output

show pfe fpc

```
user@host> show pfe fpc 1

FPC 1 status:
  Slot:                   Present
  State:                  Online
  Last State Change:      2000-01-10 18:12:27 UTC
  Uptime:                 1d 03:31
  Failures:               0
  Pending:                0
  Route Memory Enhanced: 0
PFE listener statistics:
  Open:                  1
  Close:                 0
  Sleep:                 0
  Wakeup:                0
  Resync Request:        0
  Resync Done:           0
  Resync Fail:           0
  Resync Time:           0

PFE IPC statistics:
 type        TX Messages  RX messages
 ----------- -----------  -----------
      Header            0            0
        Test            0            0
   Interface         2251         2219
     Chassis            0            0
        Boot            0            0
    Next-hop            0            0
       Jtree            0            0
       Cprod            0            0
       Route            0            0
         Pfe            0            1
         Dfw
```

show pfe fpc lcc

```
user@host> show pfe fpc 0 lcc 0
lcc0-re0:
--------------------------------------------------------------------------
GFPC 0 status:
  Slot:                 Present
  State:                Online
  Last State Change:    2009-06-17 21:00:35 PDT
  Uptime (total):       02:31:45
  Failures:             0
  Pending:              0

Peer message type receive qualifiers [ non-NONE(s) only ]:
 IPC Msg Type (subtype)     Receive Qualifier
 ---------------  -----------------
 Interface        (0)           All
 Interface        (1)           All
 Interface        (2)           All
 Interface        (3)           All
 Interface        (4)           All
 Interface        (5)           All
 Interface        (6)           All
 Interface        (7)           All
 Interface        (8)           All
 Interface        (9)           All
 Interface        (10)          All
 Interface        (11)          All
 Interface        (12)          All
 Interface        (13)          All
 Interface        (14)          All
 Interface        (15)          All
 Interface        (16)          All
 Interface        (17)          All
 Interface        (18)          All
 Interface        (19)          All
 Interface        (20)          Slot only
 Interface        (21)          All
...
 Next-hop         (0)           All
 Next-hop         (1)           All
 Next-hop         (2)           All
```

```
 Next-hop          (3)           All
 Next-hop          (4)           All
 Next-hop          (5)           Always TRUE
...
 Route             (0)           All
 Route             (1)           All
 Route             (2)           All
 Route             (3)           All
 Route             (4)           All
 Route             (5)           All
 Route             (6)           All
 Route             (7)           All
 Route             (8)           All

...
 Pfe               (1)           Always TRUE
 Pfe               (3)           Always TRUE
 Pfe               (5)           Always TRUE
...
 Dfw               (0)           All
 Dfw               (1)           All
 Dfw               (2)           All
 Dfw               (3)           All

...
 Sampling          (1)           All
 Sampling          (2)           All
 Sampling          (3)           All
 CoS               (0)           All
 CoS               (1)           All
 CoS               (2)           All
 CoS               (3)           All
...
 PIC               (1)           Always TRUE
 PIC               (3)           Always TRUE
...
 GenCfg            (8)           All
 GenCfg            (15)          All
...
 IFSTATE BITS SET:
 ----------------
        IFD
        IFL
```

```
        IFF
        IFA
        RTTABLE
        ROUTE
        NEXTHOP
        FIREWALL
        NAME TABLE
        COS_FABRIC
        COS_POLICY
        COS_RED
        COS_REWRT_TABLE
        COS_REWRT_IFLMAP
        COS_CLASS_TABLE
        COS_CLASS_IFLMAP
        COS_POLICER
        COS_SHAPER
        SAMPLE
        RTCOS
        SYSCONF
        IFVP
        SADB
        IFVC
        COS_FC_QUEUE
        COS_FRAGMAP_TABLE
        COS_FRAGMAP_IFLMAP
        Generic config
        Mesh group

PFE listener statistics:
  Open:                 1
  Close:                0
  Sleep:                0
  Wakeup:               0
  Resync Request:       0
  Resync Done:          1
  Resync Fail:          0
  Resync Time:          0

PFE IPC statistics:
 Type (subtype)            TX Messages    RX messages
 --------------            -----------   -----------
 Interface  ( 3)               165            0
 Interface  ( 4)                81            0
```

```
 Interface  ( 5)                  0          190
 Interface  ( 8)                145            0
 Interface  ( 9)                425            0
 Interface  (10)                 24            0
...
PFE socket-buffer mbuf depth:
 bucket          count
 ------          -----
     0               0
     1               0
     2               0

PFE socket-buffer bytes pending transmit:
 bucket          count
 ------          -----
     0               0
     1               0
...
```

show pfe fpc 0 detail

```
user@host> show pfe fpc 0 detail

GFPC 2 status:
  Slot:                 Present
  State:                Online
  Last State Change:    2010-11-16 03:55:25 PST
  Uptime (total):       00:11:06
  Failures:             1
  Pending:              0
  Route Memory Enhanced: 0
 Filter Memory Enhanced: 1

Peer message type receive qualifiers [ non-NONE(s) only ]:
 IPC Msg Type (subtype)     Receive Qualifier
 ----------------  -----------------
 Interface        (0)           All
 Interface        (1)           All
 Interface        (2)           All
 Interface        (3)           All
 Interface        (4)           All
```

```
 Interface        (5)          All
 Interface        (6)          All
 Interface        (7)          All
 Interface        (8)          All
 Interface        (9)          All
 Interface        (10)         All
 Interface        (11)         All
 ...
 Next-hop         (0)          All
 Next-hop         (1)          All
 Next-hop         (2)          All
 Next-hop         (3)          All
 Next-hop         (4)          All
 Next-hop         (5)          All
...
 Route            (0)          All
 Route            (1)          All
 Route            (2)          All
 Route            (3)          All
 Route            (4)          All
 Route            (5)          All
...
 Pfe              (1)          Always TRUE
 Pfe              (3)          Always TRUE
 Pfe              (5)          Always TRUE
...
 Dfw              (0)          All
 Dfw              (1)          All
 Dfw              (2)          All
 Dfw              (3)          All
...
 Sampling         (1)          All
 Sampling         (2)          All
 Sampling         (3)          All
 CoS              (0)          All
 CoS              (1)          All
 CoS              (2)          All
 CoS              (3)          All
 CoS              (4)          All
...
 PIC              (1)          Always TRUE
 PIC              (3)          Always TRUE
...
```

```
 GenCfg           (8)          All
 GenCfg           (15)         All
...
 IFSTATE BITS SET:
 ----------------
        IFD
        IFL
        IFF
        IFA
        RTTABLE
        ROUTE
        NEXTHOP
        FIREWALL
        NAME TABLE
        COS_FABRIC
        COS_POLICY
        COS_RED
        COS_REWRT_TABLE
        COS_REWRT_IFLMAP
        COS_CLASS_TABLE
        COS_CLASS_IFLMAP
        COS_POLICER
        COS_SHAPER
        SAMPLE
        RTCOS
        SYSCONF
        IFVP
        SADB
        IFVC
        COS_FC_QUEUE
        COS_FRAGMAP_TABLE
        COS_FRAGMAP_IFLMAP
        Generic config
        Mesh group

PFE listener statistics:
  Open:                 2
  Close:                1
  Sleep:                0
  Wakeup:               0
  Resync Request:       0
  Resync Done:          2
  Resync Fail:          0
```

```
  Resync Time:          0

PFE IPC statistics:
 Type (subtype)             TX Messages    RX messages
 --------------             -----------   -----------
 Interface  ( 3)                104            0
 Interface  ( 5)                  0            8
 Interface  ( 8)                 85            0
 Interface  ( 9)                 67            0
 Interface  (10)                  4            0
...
 Next-hop   ( 1)                364            0
 Next-hop   ( 3)                 12            0
 Next-hop   (11)                 33            0
 Next-hop   (23)                 39            0
 Route      ( 1)                331            0
 Route      ( 2)                 34            0
 Route      ( 3)                  1            0
 Route      ( 6)                  1            0
 Route      ( 9)                 48            0
 Pfe        ( 1)                  0            1
 Pfe        ( 3)                  1            0
 Pfe        ( 4)                  0            1
 Pfe        ( 5)                  1            0
...
 Dfw        ( 1)                 20            0
 Dfw        (18)                  1            0
 GenCfg     ( 8)                 45            0
 GenCfg     (15)                  1            0
```

show pfe fpc 0 (MX 960 with DPC)

```
user@host> show pfe fpc 0

XDPC 0 status:
  Slot:                 Present
  State:                Online
  Last State Change:    2012-08-07 13:13:01 PDT
  Uptime (total):       21:01:41
  Failures:             0
```

```
  Pending:              0
  Route Memory Enhanced: 0
  Policer Drop Probability: HIGH

Peer message type receive qualifiers [ non-NONE(s) only ]:
 IPC Msg Type (subtype)     Receive Qualifier
 ---------------  -----------------
 Interface        (0)           All
 Interface        (1)           All
 Interface        (2)           All
 Interface        (3)           All
 Interface        (4)           All
 Interface        (5)           All
 Interface        (6)           All
 Interface        (7)           All
 Interface        (8)           All
 Interface        (9)           All
 Interface        (10)          All
 Interface        (11)          All
 Interface        (12)          All
 Interface        (13)          All
 Interface        (14)          All
 Interface        (15)          All
 Interface        (16)          All
 Interface        (17)          All
 Interface        (18)          All
 Interface        (19)          All
 Interface        (20)          Slot only
 Interface        (21)          All
 Interface        (22)          Slot only
 Interface        (23)          All
 Interface        (24)          All
 Interface        (25)          All
 Interface        (26)          All
 Interface        (27)          All
 Interface        (28)          All
 Interface        (29)          All
 Interface        (30)          All
 Interface        (31)          All
 Interface        (32)          All
 Interface        (33)          All
 Interface        (34)          All
 Interface        (35)          All
```

```
Interface       (36)        All
Interface       (37)        All
Interface       (38)        All
Interface       (39)        All
Interface       (40)        All
Interface       (41)        All
Interface       (42)        Slot only
Interface       (43)        Slot only
Interface       (44)        Slot only
Interface       (45)        All
Interface       (46)        All
Interface       (47)        All
Interface       (48)        Slot only
Interface       (49)        Slot only
Interface       (50)        Slot only
Interface       (51)        Slot only
Interface       (52)        All
Interface       (53)        All
Interface       (54)        All
Interface       (55)        All
Interface       (56)        Slot only
Interface       (57)        All
Interface       (58)        All
Interface       (59)        All
Interface       (60)        All
Interface       (61)        All
Interface       (62)        All
Interface       (63)        All
Interface       (64)        Slot only
Interface       (65)        All
Interface       (66)        All
Interface       (67)        All
Interface       (68)        All
Interface       (69)        All
Interface       (70)        All
Interface       (71)        All
Interface       (72)        All
Interface       (73)        All
Interface       (74)        All
Interface       (75)        All
Interface       (76)        Slot only
Interface       (77)        Slot only
Interface       (78)        Slot only
```

```
Interface       (79)        All
Interface       (80)        All
Interface       (81)        All
Interface       (82)        All
Interface       (83)        Slot only
Interface       (84)        All
Interface       (85)        All
Interface       (86)        All
Interface       (87)        All
Interface       (88)        All
Interface       (89)        All
Interface       (90)        All
Interface       (91)        All
Interface       (92)        All
Interface       (93)        Slot only
Interface       (94)        Slot only
Interface       (95)        Slot only
Interface       (96)        All
Interface       (97)        All
Interface       (98)        All
Interface       (99)        All
Interface       (100)       All
Interface       (101)       All
Interface       (102)       All
Interface       (103)       All
Interface       (104)       All
Interface       (105)       Slot only
Interface       (106)       Slot only
Interface       (107)       All
Interface       (108)       All
Interface       (109)       All
Interface       (110)       All
Interface       (111)       All
Interface       (112)       All
Interface       (113)       All
Interface       (114)       All
Interface       (115)       All
Interface       (116)       All
Interface       (117)       All
Interface       (118)       All
Interface       (119)       All
Interface       (120)       All
Interface       (121)       Slot only
```

```
Interface       (122)       All
Interface       (123)       All
Interface       (124)       All
Interface       (125)       Slot only
Interface       (126)       Slot only
Interface       (127)       Slot only
Interface       (128)       All
Interface       (129)       All
Interface       (130)       All
Interface       (131)       All
Interface       (132)       All
Interface       (133)       All
Interface       (134)       All
Interface       (135)       All
Interface       (138)       All
Interface       (139)       All
Interface       (142)       All
Interface       (145)       All
Interface       (146)       All
Interface       (147)       All
Interface       (148)       All
Interface       (149)       All
Interface       (150)       Slot only
Interface       (151)       All
Interface       (152)       Slot only
Interface       (153)       All
Interface       (154)       All
Interface       (155)       All
Interface       (156)       All
Interface       (157)       All
Interface       (158)       All
Interface       (159)       Slot only
Interface       (160)       All
Interface       (161)       All
Interface       (163)       All
Interface       (164)       Slot only
Interface       (165)       Slot only
Interface       (167)       All
Interface       (168)       All
Interface       (169)       All
Interface       (170)       Slot only
Interface       (171)       Slot only
Interface       (172)       All
```

```
Interface       (173)       All
Interface       (174)       All
Interface       (175)       All
Interface       (176)       All
Interface       (177)       All
Interface       (178)       All
Interface       (179)       All
Interface       (180)       All
Interface       (181)       All
Interface       (182)       All
Interface       (183)       All
Interface       (184)       All
Interface       (185)       All
Interface       (186)       All
Interface       (187)       All
Interface       (188)       All
Interface       (189)       All
Interface       (190)       All
Interface       (191)       All
Interface       (192)       All
Interface       (193)       All
Interface       (194)       All
Interface       (195)       All
Interface       (196)       All
Interface       (197)       All
Interface       (198)       All
Interface       (199)       All
Interface       (200)       All
Interface       (201)       All
Interface       (202)       All
Interface       (204)       All
Interface       (205)       All
Interface       (206)       All
Interface       (207)       All
Interface       (208)       All
Interface       (209)       All
Interface       (210)       All
Interface       (211)       All
Interface       (212)       All
Interface       (213)       All
Interface       (214)       All
Interface       (215)       All
Interface       (216)       All
```

```
Interface       (217)       All
Interface       (218)       All
Interface       (219)       All
Interface       (220)       All
Interface       (221)       All
Interface       (222)       All
Interface       (223)       All
Interface       (224)       All
Interface       (225)       All
Interface       (226)       All
Interface       (227)       All
Interface       (229)       All
Interface       (230)       All
Interface       (231)       All
Interface       (232)       All
Interface       (233)       All
Interface       (234)       All
Interface       (235)       All
Interface       (236)       All
Interface       (237)       All
Interface       (238)       All
Interface       (239)       All
Next-hop        (0)         All
Next-hop        (1)         All
Next-hop        (2)         All
Next-hop        (3)         All
Next-hop        (4)         All
Next-hop        (5)         All
Next-hop        (6)         All
Next-hop        (7)         All
Next-hop        (8)         All
Next-hop        (9)         All
Next-hop        (10)        All
Next-hop        (11)        All
Next-hop        (12)        All
Next-hop        (13)        All
Next-hop        (14)        All
Next-hop        (15)        All
Next-hop        (16)        All
Next-hop        (17)        All
Next-hop        (18)        All
Next-hop        (19)        All
Next-hop        (20)        All
```

```
Next-hop         (21)         All
Next-hop         (22)         All
Next-hop         (23)         All
Next-hop         (24)         All
Next-hop         (25)         All
Next-hop         (26)         All
Next-hop         (27)         All
Next-hop         (28)         All
Next-hop         (29)         All
Next-hop         (30)         All
Next-hop         (31)         All
Next-hop         (32)         All
Next-hop         (33)         All
Next-hop         (34)         All
Next-hop         (35)         All
Next-hop         (36)         All
Next-hop         (37)         All
Next-hop         (39)         Always TRUE
Next-hop         (40)         All
Next-hop         (41)         All
Next-hop         (42)         All
Next-hop         (43)         All
Route            (0)          All
Route            (1)          All
Route            (2)          All
Route            (3)          All
Route            (4)          All
Route            (5)          All
Route            (6)          All
Route            (7)          All
Route            (8)          All
Route            (9)          All
Route            (10)         All
Route            (11)         All
Route            (12)         All
Route            (13)         All
Route            (14)         All
Route            (15)         All
Route            (16)         All
Route            (17)         All
Route            (18)         All
Route            (19)         All
Route            (20)         All
```

```
Route           (22)        All
Route           (23)        All
Route           (24)        All
Route           (25)        All
Route           (26)        All
Route           (27)        All
Route           (28)        All
Route           (29)        Always TRUE
Route           (30)        Always TRUE
Pfe             (1)         Always TRUE
Pfe             (3)         Always TRUE
Pfe             (5)         Always TRUE
Pfe             (7)         Always TRUE
Pfe             (10)        Always TRUE
Pfe             (11)        Always TRUE
Pfe             (12)        Always TRUE
Pfe             (13)        Always TRUE
Pfe             (14)        Always TRUE
Pfe             (15)        Always TRUE
Pfe             (35)        Always TRUE
Dfw             (0)         All
Dfw             (1)         All
Dfw             (2)         All
Dfw             (3)         All
Dfw             (4)         All
Dfw             (5)         All
Dfw             (6)         All
Dfw             (7)         All
Dfw             (8)         All
Dfw             (9)         All
Dfw             (10)        All
Dfw             (11)        All
Dfw             (12)        All
Dfw             (13)        All
Dfw             (14)        All
Dfw             (18)        All
Dfw             (19)        All
Sampling        (1)         All
Sampling        (2)         All
Sampling        (3)         All
CoS             (0)         All
CoS             (1)         All
CoS             (2)         All
```

```
CoS             (3)          All
CoS             (4)          All
CoS             (5)          All
CoS             (6)          All
CoS             (7)          All
CoS             (8)          All
CoS             (9)          All
CoS             (10)         All
CoS             (11)         All
CoS             (12)         All
CoS             (13)         All
CoS             (14)         All
CoS             (15)         All
CoS             (16)         All
CoS             (17)         All
CoS             (18)         All
CoS             (19)         All
CoS             (20)         All
CoS             (21)         All
CoS             (22)         All
CoS             (23)         All
CoS             (27)         All
CoS             (29)         All
CoS             (31)         All
CoS             (32)         All
PIC             (1)          Always TRUE
PIC             (3)          Always TRUE
PIC             (5)          Always TRUE
PIC             (7)          Always TRUE
PIC             (10)         Always TRUE
PIC             (11)         Always TRUE
PIC             (12)         Always TRUE
PIC             (13)         Always TRUE
PIC             (14)         Always TRUE
PIC             (15)         Always TRUE
GenCfg          (2)          All
GenCfg          (4)          All
GenCfg          (5)          All
GenCfg          (6)          All
GenCfg          (8)          All
GenCfg          (9)          All
GenCfg          (10)         All
GenCfg          (15)         All
```

```
GenCfg          (17)          All
GenCfg          (24)          All
GenCfg          (27)          All
GenCfg          (29)          All
GenCfg          (31)          All
STP             (1)           All
BD              (0)           All
BD              (1)           All
BD              (2)           All
IFSTATE BITS SET:
---------------
       IFD
       IFL
       IFF
       IFA
       RTTABLE
       ROUTE
       NEXTHOP
       FIREWALL
       NAME TABLE
       COS_FABRIC
       COS_POLICY
       COS_RED
       COS_REWRT_TABLE
       COS_REWRT_IFLMAP
       COS_CLASS_TABLE
       COS_CLASS_IFLMAP
       COS_POLICER
       COS_SHAPER
       SAMPLE
       RTCOS
       SYSCONF
       IFVP
       SADB
       IFVC
       COS_FC_QUEUE
       COS_FRAGMAP_TABLE
       COS_FRAGMAP_IFLMAP
       Generic config
       STP
       Mesh group
       Bridge Domain
       IFBD
```

```
PFE listener statistics:
  Open:                 1
  Close:                0
  Sleep:                0
  Wakeup:               0
  Resync Request:       0
  Resync Done:          1
  Resync Fail:          0
  Resync Time:          0

PFE IPC statistics:
 Type (subtype)             TX Messages    RX messages
 --------------             -----------   -----------
 Interface  ( 3)                131            0
 Interface  ( 5)                  0          379
 Interface  ( 9)                 48            0
 Interface  (10)                102            0
 Interface  (11)                  1            0
 Interface  (12)                204            0
 Interface  (13)                177            0
 Interface  (15)                 90            0
 Interface  (23)                 49            0
 Interface  (24)                  8            0
 Interface  (29)                 27            0
 Interface  (30)                 11            0
 Interface  (33)                101            0
 Interface  (34)                101            0
 Interface  (35)                 84            0
 Interface  (36)                 18            0
 Interface  (37)                 38            0
 Interface  (39)                  0            1
 Interface  (53)                  0          379
 Interface  (54)                620            0
 Interface  (55)               2064            0
 Interface  (56)                  0          379
 Interface  (57)                 57            0
 Interface  (58)                  1            0
 Interface  (90)                  0           21
 Interface  (91)                  0           13
 Interface  (92)                  0           12
 Interface  (117)                 0         1516
 Interface  (138)                 0          758
```

```
  Interface  (151)              244            0
  Interface  (163)              124            0
  Interface  (201)              101            0
  Interface  (226)               91            0
  Interface  (229)              124            0
  Interface  (238)              205            0
  Next-hop   ( 1)               159            0
  Next-hop   ( 2)                 5            0
  Next-hop   ( 3)                16            0
  Next-hop   (11)                51            0
  Next-hop   (23)                12            0
  Next-hop   (40)                 3            0
  Route      ( 1)               164            0
  Route      ( 2)                70            0
  Route      ( 3)                11            0
  Route      ( 6)                 1            0
  Route      ( 9)                14            0
  Route      (12)                 2            0
  Route      (13)                 1            0
  Route      (22)                 4            0
  Pfe        ( 1)                 0            1
  Pfe        ( 3)               157            0
  Pfe        ( 4)                 0          157
  Pfe        ( 5)               158            0
  Pfe        ( 6)                 0          158
  Pfe        ( 7)               158            0
  Pfe        ( 8)                 0          158
  Pfe        ( 9)                 0            1
  Pfe        (10)                 1            0
  Pfe        (11)                 1            0
  Pfe        (12)              2772            0
  Pfe        (13)               108          108
  Pfe        (15)               158            0
  Pfe        (16)                 0          158
  Pfe        (47)                 0            1
  Dfw        ( 1)                23            0
  Dfw        ( 2)                 1            0
  Dfw        ( 6)                 0            6
  Dfw        (18)               175            0
  GenCfg     ( 5)                 1            0
  GenCfg     ( 8)               157            0
  GenCfg     ( 9)                21            0
  GenCfg     (15)                57            0
```

```
STP         ( 1)              112            0
STP         ( 2)                0           98
STP         ( 5)                0           97
```

Release Information

Command introduced before Junos OS Release 7.4.

show system errors active

IN THIS SECTION

- Syntax | **1704**
- Description | **1705**
- Options | **1705**
- Required Privilege Level | **1705**
- Output Fields | **1706**
- Sample Output | **1707**
- Release Information | **1711**

Syntax

```
show system errors active
<detail [fru slot-number [scope error-scope] [category error-category]]>
<fru slot-number>
```

Description

Display information collected by the J-Insight fault monitoring feature. Specifically, display summary or detailed information about the active errors based on FRU, error scope, or error category.

> **NOTE**: In PTX Series routers with Junos OS Evolved, the details of the Packet Forwarding Engine errors (reported through CMError), when set and cleared, are moved from the output of `show system errors active` command to the output of `show system errors inactive` command. However, the output of the `show system errors inactive detail` does not contain the details of the active FRU board errors that are cleared.

Options

none	Display a brief summary of the system error information for all applicable FRUs.
category *error-category*	(Optional) Display system error information based on error category. An error category categorizes errors into various subgroups under a specific error scope level. Values include: core, functional, io, memory, processing, storage, and switch.
detail	(Optional) Display detailed system error information.
fru slot-number	(Optional) Display system error information for a specific FRU. For devices running Junos OS, output displays error details for FPC FRUs. For devices running Junos OS Evolved, output displays error details for FPC and other components such as fan, PSM, CB, and chassis.
scope *error-scope*	(Optional) Display system error information based on error scope. An error scope provides a level of classification above error category. Values include: board, pfe, and scope-all.

Required Privilege Level

admin

Output Fields

Table 106 on page 1706 list the output fields for the `show system errors active` command. Output fields are listed in the approximate order in which they appear.

Table 106: show system errors active Output Fields

Field Name	Field Description
Error Name	Name of error.
Identifier	Each error is uniquely identified with an error ID that is represented as a Uniform Resource Identifier (URI).
Description	Description of the error.
State	State of the error. Values are: enabled or disabled.
Scope	Scope classification to which the error belongs. Values include board and pfe.
Category	Category subgroup under the scope level to which the error belongs. Values include: core, functional, io, memory, processing, storage, and switch.
Level	Severity level of the error.
Threshold	Configured threshold value. The associated detection and recovery actions are triggered when this value is exceeded.
Error Limit	The maximum number of times the error is reported.
Support	Support details for the error type.
Occur count	Number of times errors of a specific scope, category, and severity level has occurred.
Clear count	Number of times error instances have been cleared.

Table 106: show system errors active Output Fields *(Continued)*

Field Name	Field Description
Last occurred (ms ago)	Amount of time (in milliseconds) passed since the error last occurred.

Sample Output

show system errors active

For devices running Junos OS, output displays error details for FPC FRUs. For devices running Junos OS Evolved, output displays error details for FPC and other components such as fan, PSM, CB, and chassis.

```
user@host> show system errors active

System Active Errors Information
CB 0
---------------------------------
Active Minor Errors           : 0
Active Major Errors           : 0
Active Fatal Errors           : 0
CHASSIS 0
---------------------------------
Active Minor Errors           : 0
Active Major Errors           : 5
Active Fatal Errors           : 0
FAN 0
---------------------------------
Active Minor Errors           : 0
Active Major Errors           : 0
Active Fatal Errors           : 0
FAN 1
---------------------------------
Active Minor Errors           : 0
Active Major Errors           : 0
Active Fatal Errors           : 0
FAN 2
```

```
---------------------------------
Active Minor Errors           : 0
Active Major Errors           : 0
Active Fatal Errors           : 0
FAN 3
---------------------------------
Active Minor Errors           : 0
Active Major Errors           : 0
Active Fatal Errors           : 0
FAN 4
---------------------------------
Active Minor Errors           : 0
Active Major Errors           : 0
Active Fatal Errors           : 0
FPC 0
---------------------------------
Active Minor Errors           : 0
Active Major Errors           : 0
Active Fatal Errors           : 0
FPC 1
---------------------------------
Active Minor Errors           : 0
Active Major Errors           : 0
Active Fatal Errors           : 0
FPC 2
---------------------------------
Active Minor Errors           : 0
Active Major Errors           : 0
Active Fatal Errors           : 0
FPC 3
---------------------------------
Active Minor Errors           : 0
Active Major Errors           : 0
Active Fatal Errors           : 0
FPM 0
---------------------------------
Active Minor Errors           : 0
Active Major Errors           : 0
Active Fatal Errors           : 0
PDU 0
---------------------------------
Active Minor Errors           : 0
Active Major Errors           : 0
```

```
Active Fatal Errors           : 0
PICS 0
---------------------------------
Active Minor Errors           : 0
Active Major Errors           : 0
Active Fatal Errors           : 0
PICS 1
---------------------------------
Active Minor Errors           : 0
Active Major Errors           : 0
Active Fatal Errors           : 0
PSM 0
---------------------------------
Active Minor Errors           : 0
Active Major Errors           : 0
Active Fatal Errors           : 0
PSM 1
---------------------------------
Active Minor Errors           : 0
Active Major Errors           : 0
Active Fatal Errors           : 0
PSM 2
---------------------------------
Active Minor Errors           : 0
Active Major Errors           : 0
Active Fatal Errors           : 0
PSM 3
---------------------------------
Active Minor Errors           : 0
Active Major Errors           : 0
Active Fatal Errors           : 0
RE 0
---------------------------------
Active Minor Errors           : 0
Active Major Errors           : 0
Active Fatal Errors           : 0
SIB 0
---------------------------------
Active Minor Errors           : 0
Active Major Errors           : 0
Active Fatal Errors           : 0
SIB 1
---------------------------------
```

```
Active Minor Errors           : 0
Active Major Errors           : 0
Active Fatal Errors           : 0
```

show system errors active fpc-slot

```
user@host> show system errors active fpc-slot
0
System Active Errors Information
FPC 0
-------------------------------------------------
Active Minor Errors: 0
Active Major Errors: 1
Active Fatal Errors: 0
```

show system errors active detail

```
user@host> show system errors active detail

System Active Errors Detail Information
FPC 7
---------------------------------------------------------------
Error Name : btchip_temp_monitor_pfe_throttled_bandwidth
Identifier : /fpc/7/evo-cda-bt/0/cm/0/btchip/0/btchip_temp_monitor_pfe_throttled_bandwidth
Description : btchip_temp_monitor_pfe_throttled_bandwidth
State : enabled
Scope : pfe
Category : functional
Level : minor
Threshold : 10
Error limit : 30
Occur count : 1
Clear count : 0
Last occurred(ms ago) : 2021-07-07 18:32:43 PDT (211961 ms ago)
```

show system errors active detail (PTX series: PTX10004, PTX10008, and PTX10016)

```
user@host> show system errors active detail
System Active Errors Detail Information
CHASSIS 0
---------------------------------------------------------------
Error Name : fan_tray_removal
Identifier : /chassis/0/hwdre/0/cm/0/fan_tray/Fan Tray 0/fan_tray_removal
Description : Fan_tray_absent
State : disabled
Scope : board
Category : functional
Level : major
Threshold : 1
Error limit : 1
Support : No help info provided
Occur count : 1
Clear count : 0
Last occurred(ms ago) : 339112691
```

Release Information

Command introduced in Junos OS Release 18.2R1.

Command enhanced to include automatic temperature performance throttle and "btchip_temp_monitor_pfe_throttled_bandwidth" option error display in Junos OS Release 21.4R1.

RELATED DOCUMENTATION

- show system errors count | 1712
- show system errors error-id | 1714
- show system errors fru | 1718

show system errors count

IN THIS SECTION

- Syntax | 1712
- Description | 1712
- Options | 1712
- Required Privilege Level | 1713
- Output Fields | 1713
- Sample Output | 1713
- Release Information | 1714

Syntax

```
show system errors count
```

Description

Display information collected by the J-Insight fault monitoring feature. Specifically, display information about the number of detected errors and recovery actions triggered based on error severity level.

Options

This command has no options.

Required Privilege Level

admin

Output Fields

Table 107 on page 1713 lists the output fields for the `show system errors count` command. Output fields are listed in the approximate order in which they appear.

Table 107: show system errors count Output Fields

Field Name	Field Description
Level	Severity level of the error. Values are: Minor, Major, or Fatal.
Occurred	Number of times errors of a specific severity level occurred.
Cleared	Number of times errors of a specific severity level were cleared.
Action-Taken	Number of times a recovery action was triggered for a specific severity level.

Sample Output

show system errors count

```
user@host> show system errors count
Level   Occurred   Cleared      Action-Taken
-------------------------------------------------------
 Minor:  0          0            0
 Major:  1          0            1
 Fatal:  0          0            0
```

Release Information

Command introduced in Junos OS Release 18.2R1.

RELATED DOCUMENTATION

show system errors active | 1704
show system errors error-id | 1714
show system errors fru | 1718

show system errors error-id

IN THIS SECTION

- Syntax | 1714
- Description | 1715
- Options | 1715
- Additional Information | 1715
- Required Privilege Level | 1715
- Output Fields | 1715
- Sample Output | 1717
- Release Information | 1717

Syntax

```
show system errors error-id error-id-uri
```

Description

Display information collected by the J-Insight fault monitoring feature. Specifically, display information about detected errors based on the error ID Uniform Resource Identifier (URI). For devices running Junos OS Evolved, output displays only errors that have occurred at least once in the system.

Options

This command has no options.

Additional Information

Required Privilege Level

admin

Output Fields

Table 108 on page 1715 lists the output fields for the `show system errors error-id` command. Output fields are listed in the approximate order in which they appear.

Table 108: show system errors error-id Output Fields

Field Name	Field Description
Error Name	Name of error.
Identifier	Each error is uniquely identified with an error ID that is represented as a Uniform Resource Identifier (URI).

Table 108: show system errors error-id Output Fields *(Continued)*

Field Name	Field Description
Description	Description of the error.
State	State of the error. Values are: enabled or disabled.
Scope	Scope classification to which the error belongs. Values include board and pfe.
Category	Category subgroup under the scope level to which the error belongs. Values include: core, functional, io, memory, processing, storage, and switch.
Level	Severity level of the error.
Threshold	Configured threshold value. The associated detection and recovery actions are triggered when this value is exceeded.
Error Limit	The maximum number of times the error is reported.
Support	Support details for the error type.
Occur count	Number of times errors of a specific scope, category, and severity level has occurred.
Clear count	Number of times error instances have been cleared.
Last occurred (ms ago)	Amount of time (in milliseconds) passed since the error last occurred.

Sample Output

show system errors error-id

```
user@host> show system errors error-id "/chassis/0/hwdre/0/cm/0/fan_tray/Fan
Tray 0/fan_tray_removal"
System Errors Detail Information
CHASSIS 0
-----------------------------------------------------------------
Error Name            : fan_tray_removal
Identifier            : /chassis/0/hwdre/0/cm/0/fan_tray/Fan Tray 0/fan_tray_removal
Description           : Fan_tray_absent
State                 : enabled
Scope                 : board
Category              : functional
Level                 : major
Threshold             : 1
Error limit           : 1
Support               : No help info provided
Occur count           : 1
Clear count           : 0
Last occurred(ms ago) : 84091182
```

Release Information

Command introduced in Junos OS Release 19.1R1.

RELATED DOCUMENTATION

- show system errors active | 1704
- show system errors count | 1712
- show system errors fru | 1718

show system errors fru

IN THIS SECTION

- Syntax | 1718
- Description | 1718
- Options | 1718
- Required Privilege Level | 1719
- Output Fields | 1719
- Sample Output (Junos OS) | 1720
- Sample Output (Junos OS Evolved) | 1723
- Release Information | 1725

Syntax

```
show system errors fru detail [fru slot-number]
```

Description

Display information collected by the J-Insight fault monitoring feature. Specifically, display information about detected errors based on the FRU.

Options

none	Display a brief summary of the system error information for the FRU.
detail	(Optional) Display detailed system error information.

fru slot-number (Optional) Display system error information for a specific FRU. For devices running Junos OS, output displays error details for FPC FRUs. For devices running Junos OS Evolved, output displays error details for FPC and other components such as fan, PSM, CB, and chassis.

Required Privilege Level

admin

Output Fields

Table 109 on page 1719 lists the output fields for the `show system errors fru` command. Output fields are listed in the approximate order in which they appear.

Table 109: show system errors fru Output Fields

Field Name	Field Description
FRU	FRU identification number.
Scope	An error scope provides a level of classification above error category. Error scope values are: pfe and board.
Category	An error category categorizes errors into various subgroups under a specific error scope level. Values include: functional, io, memory, processing, storage, and switch.
Level	Severity level of the error.
Occurred	Number of times errors of a specific scope, category, and severity level has occurred.
Cleared	Number of times errors of a specific scope, category, and severity level were cleared.
Threshold	Configured threshold value. The associated detection and recovery actions are triggered when this value is exceeded.

Table 109: show system errors fru Output Fields *(Continued)*

Field Name	Field Description
Action-Taken	Number of times a user-configured recovery action was triggered for errors of a specific scope, category, and severity level.
Action	Action that is triggered when the threshold value is exceeded.

Sample Output (Junos OS)

show system errors fru detail

```
user@host> show system errors fru detail
Fru     Scope   Category    Level   Occurred    Cleared     Threshold   Action-Taken    Action
FPC 0
        board
                functional  Minor        0           0           10          0            LOG|
                            Major        0           0            1          0          GET
STATE|CM ALARM|
                            Fatal        0           0            1          0          DISABLE
PFE
                  memory    Minor        0           0           10          0            LOG|
                            Major        0           0            1          0          GET
STATE|CM ALARM|
                            Fatal        0           0            1          0          DISABLE
PFE
                      io    Minor        0           0           10          0            LOG|
                            Major        0           0            1          0          GET
STATE|CM ALARM|
                            Fatal        0           0            1          0          DISABLE
PFE
                 storage    Minor        0           0           10          0            LOG|
                            Major        0           0            1          0          GET
STATE|CM ALARM|
                            Fatal        0           0            1          0          DISABLE
PFE
                  switch    Minor        0           0           10          0            LOG|
```

```
                            Major       0           0           1           0          GET
STATE|CM ALARM|
                            Fatal       0           0           1           0          DISABLE
PFE
                processing  Minor       0           0          10           0            LOG|
                            Major       0           0           1           0          GET
STATE|CM ALARM|
                            Fatal       0           0           1           0          DISABLE
PFE
        pfe
                functional  Minor       0           0          10           0            LOG|
                            Major       0           0           1           0          GET
STATE|CM ALARM|
                            Fatal       0           0           1           0          DISABLE
PFE
                  memory    Minor       0           0          10           0            LOG|
                            Major       0           0           1           0          GET
STATE|CM ALARM|
                            Fatal       0           0           1           0          DISABLE
PFE
                      io    Minor       0           0          10           0            LOG|
                            Major       0           0           1           0          GET
STATE|CM ALARM|
                            Fatal       0           0           1           0          DISABLE
PFE
                 storage    Minor       0           0          10           0            LOG|
                            Major       0           0           1           0          GET
STATE|CM ALARM|
                            Fatal       0           0           1           0          DISABLE
PFE
                  switch    Minor       0           0          10           0            LOG|
                            Major       0           0           1           0          GET
STATE|CM ALARM|
                            Fatal       0           0           1           0          DISABLE
PFE
                processing  Minor       0           0          10           0            LOG|
                            Major       0           0           1           0          GET
STATE|CM ALARM|
                            Fatal       0           0           1           0          DISABLE
PFE
```

show system errors fru detail (MX240, MX480, MX960, MX2008, MX2010, MX2020)

```
user@host> show system errors fru detail
Fru     Scope   Category    Level   Occurred    Cleared     Threshold   Action-Taken    Action
FPC 0
        board
                functional  Minor       0           0           1           0           LOG|CM
ALARM|
                            Major       0           0           1           0           GET
STATE|CM ALARM|
                            Fatal       0           0           1           0           DISABLE
PFE
                  memory    Minor       0           0           1           0           LOG|CM
ALARM|
                            Major       0           0           1           0           GET
STATE|CM ALARM|
                            Fatal       0           0           1           0           DISABLE
PFE
                       io   Minor       0           0           1           0           LOG|CM
ALARM|
                            Major       0           0           1           0           GET
STATE|CM ALARM|
                            Fatal       0           0           1           0           DISABLE
PFE
                 storage    Minor       0           0           1           0           LOG|CM
ALARM|
                            Major       0           0           1           0           GET
STATE|CM ALARM|
                            Fatal       0           0           1           0           DISABLE
PFE
                  switch    Minor       0           0           1           0           LOG|CM
ALARM|
                            Major       0           0           1           0           GET
STATE|CM ALARM|
                            Fatal       0           0           1           0           DISABLE
PFE
                processing  Minor       0           0           1           0           LOG|CM
ALARM|
                            Major       0           0           1           0           GET
STATE|CM ALARM|
                            Fatal       0           0           1           0           DISABLE
PFE
```

```
        pfe
                functional  Minor       0          0           1          0          LOG|CM
ALARM|
                            Major       0          0           1          0            LOG|
RESET PFE
```

Sample Output (Junos OS Evolved)

show system errors fru detail (PTX10003)

The following output has been shortened for clarity. For each part of a FRU, the full output displays any errors in the functional, io, memory, processing, storage, and switch categories, similar to the CB 0 FRU below.

```
user@host> show system errors fru detail

Fru     Scope   Category    Level   Occurred    Cleared     Threshold   Action-Taken    Action
CB 0
        board
                functional  Minor       0          0           10         0            LOG|
                            Major       0          0           1          0          GET
STATE|CM ALARM|
                            Fatal       0          0           1          0          CM ALARM|
RESET
                      io    Minor       0          0           10         0            LOG|
                            Major       0          0           1          0          GET
STATE|CM ALARM|
                            Fatal       0          0           1          0          CM ALARM|
RESET
                  memory    Minor       0          0           10         0            LOG|
                            Major       0          0           1          0          GET
STATE|CM ALARM|
                            Fatal       0          0           1          0          CM ALARM|
RESET
                processing  Minor       0          0           10         0            LOG|
                            Major       0          0           1          0          GET
STATE|CM ALARM|
                            Fatal       0          0           1          0          CM ALARM|
RESET
```

```
                storage    Minor       0          0          10         0           LOG|
                           Major       0          0           1         0         GET
STATE|CM ALARM|
                           Fatal       0          0           1         0       CM ALARM|
RESET
                 switch    Minor       0          0          10         0           LOG|
                           Major       0          0           1         0         GET
STATE|CM ALARM|
                           Fatal       0          0           1         0       CM ALARM|
RESET
CHASSIS 0
        board
...
FAN 0
        board
...
FAN 1
        board
...
FPC 0
        board

...
        pfe
...
FPC 1
        board
...

        pfe
...
FPM 0
        board
...
PDU 0
        board
...
PICS 0
        board
...
PICS 1
        board
...
```

```
PSM 0
        board
...
PSM 1
        board
...
RE 0
        board
 ...
SIB 0
        board
...
        switch
...
SIB 1
        board
...
        switch
...
```

Release Information

Command introduced in Junos OS Release 18.2R1.

Reset-pfe option added in Junos OS Release 21.4R1.

RELATED DOCUMENTATION

- show system errors active | 1704
- show system errors count | 1712
- show system errors error-id | 1714

show system errors inactive

IN THIS SECTION

- Syntax | 1726
- Description | 1726
- Options | 1726
- Required Privilege Level | 1727
- Output Fields | 1727
- Sample Output | 1728
- Release Information | 1733

Syntax

```
show system errors inactive
<detail>
```

Description

Display information collected by the J-Insight fault monitoring feature. Specifically, display summary or detailed information about the inactive errors in the system. This commands shows the information about errors that had occurred and were then cleared.

Options

none Display a brief summary of the system error information for all applicable FRUs.

detail (Optional) Display detailed system error information.

Required Privilege Level

admin

Output Fields

Table 110 on page 1727 list the output fields for the `show system errors inactive` command. Output fields are listed in the approximate order in which they appear.

Table 110: show system errors inactive Output Fields

Field Name	Field Description
Error Name	Name of error.
Identifier	Each error is uniquely identified with an error ID that is represented as a Uniform Resource Identifier (URI).
Description	Description of the error.
State	State of the error. Values are: enabled or disabled.
Scope	Scope classification to which the error belongs. Values include board and pfe.
Category	Category subgroup under the scope level to which the error belongs. Values include: core, functional, io, memory, processing, storage, and switch.
Level	Severity level of the error.
Threshold	Configured threshold value. The associated detection and recovery actions are triggered when this value is exceeded.
Error Limit	The maximum number of times the error is reported.
Support	Support details for the error type.

Table 110: show system errors inactive Output Fields *(Continued)*

Field Name	Field Description
Occur count	Number of times errors of a specific scope, category, and severity level has occurred.
Clear count	Number of times error instances have been cleared.
Last occurred (ms ago)	Amount of time (in milliseconds) passed since the error last occurred.

Sample Output

show system errors inactive

```
user@host> show system errors inactive
System Inactive Errors Information
CB 0
---------------------------------
Inactive Minor Errors           : 0
Inactive Major Errors           : 0
Inactive Fatal Errors           : 0
CB 1
---------------------------------
Inactive Minor Errors           : 0
Inactive Major Errors           : 0
Inactive Fatal Errors           : 0
CHASSIS 0
---------------------------------
Inactive Minor Errors           : 0
Inactive Major Errors           : 0
Inactive Fatal Errors           : 0
FAN 0
---------------------------------
Inactive Minor Errors           : 0
Inactive Major Errors           : 0
Inactive Fatal Errors           : 0
```

```
FAN 1
---------------------------------
Inactive Minor Errors           : 0
Inactive Major Errors           : 0
Inactive Fatal Errors           : 0
FPC 0
---------------------------------
Inactive Minor Errors           : 0
Inactive Major Errors           : 0
Inactive Fatal Errors           : 0
FPC 1
---------------------------------
Inactive Minor Errors           : 0
Inactive Major Errors           : 0
Inactive Fatal Errors           : 0
FPC 2
---------------------------------
Inactive Minor Errors           : 0
Inactive Major Errors           : 0
Inactive Fatal Errors           : 0
FPC 3
---------------------------------
Inactive Minor Errors           : 0
Inactive Major Errors           : 0
Inactive Fatal Errors           : 0
FPC 4
---------------------------------
Inactive Minor Errors           : 0
Inactive Major Errors           : 0
Inactive Fatal Errors           : 0
FPC 5
---------------------------------
Inactive Minor Errors           : 0
Inactive Major Errors           : 0
Inactive Fatal Errors           : 0
FPC 6
---------------------------------
Inactive Minor Errors           : 0
Inactive Major Errors           : 0
Inactive Fatal Errors           : 0
FPC 7
---------------------------------
Inactive Minor Errors           : 0
```

```
Inactive Major Errors           : 0
Inactive Fatal Errors           : 0
FPM 0
---------------------------------
Inactive Minor Errors           : 0
Inactive Major Errors           : 0
Inactive Fatal Errors           : 0
PICS 0
---------------------------------
Inactive Minor Errors           : 0
Inactive Major Errors           : 0
Inactive Fatal Errors           : 0
PSM 0
---------------------------------
Inactive Minor Errors           : 0
Inactive Major Errors           : 0
Inactive Fatal Errors           : 0
PSM 1
---------------------------------
Inactive Minor Errors           : 0
Inactive Major Errors           : 0
Inactive Fatal Errors           : 0
PSM 2
---------------------------------
Inactive Minor Errors           : 0
Inactive Major Errors           : 0
Inactive Fatal Errors           : 0
PSM 3
---------------------------------
Inactive Minor Errors           : 0
Inactive Major Errors           : 0
Inactive Fatal Errors           : 0
PSM 4
---------------------------------
Inactive Minor Errors           : 0
Inactive Major Errors           : 0
Inactive Fatal Errors           : 0
PSM 5
---------------------------------
Inactive Minor Errors           : 0
Inactive Major Errors           : 0
Inactive Fatal Errors           : 0
RE 0
```

```
---------------------------------
Inactive Minor Errors           : 0
Inactive Major Errors           : 0
Inactive Fatal Errors           : 0
RE 1
---------------------------------
Inactive Minor Errors           : 0
Inactive Major Errors           : 0
Inactive Fatal Errors           : 0
SIB 0
---------------------------------
Inactive Minor Errors           : 0
Inactive Major Errors           : 3
Inactive Fatal Errors           : 0
SIB 1
---------------------------------
Inactive Minor Errors           : 0
Inactive Major Errors           : 0
Inactive Fatal Errors           : 0
SIB 2
---------------------------------
Inactive Minor Errors           : 0
Inactive Major Errors           : 0
Inactive Fatal Errors           : 0
SIB 3
---------------------------------
Inactive Minor Errors           : 0
Inactive Major Errors           : 0
Inactive Fatal Errors           : 0
SIB 4
---------------------------------
Inactive Minor Errors           : 0
Inactive Major Errors           : 0
Inactive Fatal Errors           : 0
SIB 5
---------------------------------
Inactive Minor Errors           : 0
Inactive Major Errors           : 0
Inactive Fatal Errors           : 0
```

show system errors inactive detail

```
user@host> show system errors inactive detail
System Inactive Errors Detail Information
SIB 0
------------------------------------------------------------------
Error Name            : Cell_drop_errors
Identifier            : /sib/0/fabspoked-fchip/0/cm/0/fchip/0/Cell_drop_errors
Description           : Cell drop errors
State                 : enabled
Scope                 : board
Category              : internal
Level                 : major
Threshold             : 10
Error limit           : 0
Support               : No help info provided
Occur count           : 1
Clear count           : 1
Last occurred(ms ago) : 973151
System Inactive Errors Detail Information
SIB 0
------------------------------------------------------------------
Error Name            : Sib_Asic_PIO_Fault
Identifier            : /sib/0/fabspoked-fchip/0/cm/0/fchip/0/Sib_Asic_PIO_Fault
Description           : Sib Asic PIO Fault
State                 : enabled
Scope                 : switch
Category              : internal
Level                 : major
Threshold             : 10
Error limit           : 0
Support               : No help info provided
Occur count           : 1
Clear count           : 1
Last occurred(ms ago) : 777971
System Inactive Errors Detail Information
SIB 0
------------------------------------------------------------------
Error Name            : sib_link_to_fpc_fault
Identifier            : /sib/0/fabspoked-fchip/0/cm/0/fchip/0/sib_link_to_fpc_fault
Description           : sib_link_to_fpc_fault
State                 : enabled
```

```
Scope                  : board
Category               : internal
Level                  : major
Threshold              : 10
Error limit            : 0
Support                : No help info provided
Occur count            : 1
Clear count            : 1
Last occurred(ms ago) : 862333
```

Release Information

Command introduced in Junos OS Evolved Release 19.4R1.

RELATED DOCUMENTATION

- show system errors count | 1712
- show system errors error-id | 1714
- show system errors fru | 1718