


## Removing a JCS 1200 Network Clock Filler

---

Figure 1 on page 1 shows how to remove and install a network clock filler.

**Figure 1: Removing and Installing a JCS 1200 Network Clock Filler**

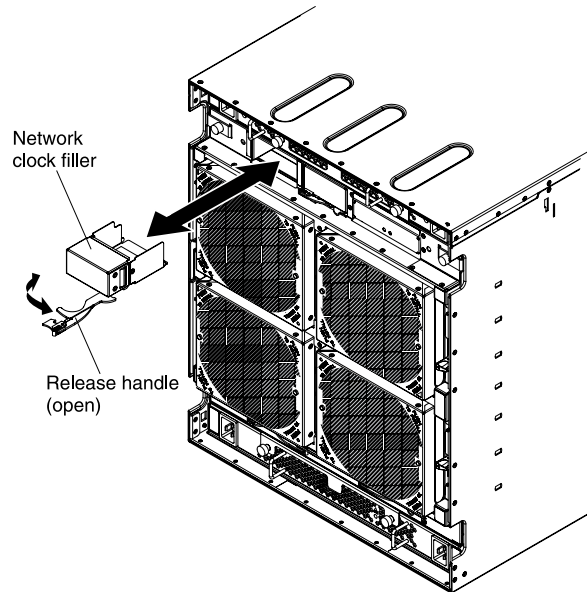

To remove a network clock filler (see Figure 1 on page 1):

1. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Pull the release handle to the open position. The network clock filler moves out of the bay approximately 0.25 in. (0.6 cm).
3. Slide the network clock filler out of the bay.

- Related Topics**
- Preventing Electrostatic Discharge Damage to the JCS 1200 Platform
  - Installing a JCS 1200 Network Clock Filler

