



---

# Traffic Management Feature Guide for the NFX250 Network Services Platform

Release

15.1X53-D40



---

Modified: 2016-04-06

Juniper Networks, Inc.  
1133 Innovation Way  
Sunnyvale, California 94089  
USA  
408-745-2000  
[www.juniper.net](http://www.juniper.net)

Juniper Networks, Junos, Steel-Belted Radius, NetScreen, and ScreenOS are registered trademarks of Juniper Networks, Inc. in the United States and other countries. The Juniper Networks Logo, the Junos logo, and JunosE are trademarks of Juniper Networks, Inc. All other trademarks, service marks, registered trademarks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

*Traffic Management Feature Guide for the NFX250 Network Services Platform*  
15.1X53-D40  
Copyright © 2016, Juniper Networks, Inc.  
All rights reserved.

The information in this document is current as of the date on the title page.

#### YEAR 2000 NOTICE

Juniper Networks hardware and software products are Year 2000 compliant. Junos OS has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

#### END USER LICENSE AGREEMENT

The Juniper Networks product that is the subject of this technical documentation consists of (or is intended for use with) Juniper Networks software. Use of such software is subject to the terms and conditions of the End User License Agreement ("EULA") posted at <http://www.juniper.net/support/eula.html>. By downloading, installing or using such software, you agree to the terms and conditions of that EULA.

# Table of Contents

	About the Documentation . . . . .	xv
	Documentation and Release Notes . . . . .	xv
	Using the Examples in This Manual . . . . .	xv
	Merging a Full Example . . . . .	xvi
	Merging a Snippet . . . . .	xvi
	Documentation Conventions . . . . .	xvii
	Documentation Feedback . . . . .	xix
	Requesting Technical Support . . . . .	xix
	Self-Help Online Tools and Resources . . . . .	xix
	Opening a Case with JTAC . . . . .	xx
<b>Part 1</b>	<b>CoS Overview</b>	
<b>Chapter 1</b>	<b>Basic Concepts . . . . .</b>	<b>3</b>
	Overview of Junos OS CoS . . . . .	3
	CoS Standards . . . . .	4
	How Junos OS CoS Works . . . . .	5
	Default CoS Behavior . . . . .	6
	Configuring CoS . . . . .	6
	Understanding Junos CoS Components . . . . .	9
	Code-Point Aliases . . . . .	9
	Policers . . . . .	9
	Classifiers . . . . .	9
	Forwarding Classes . . . . .	10
	Forwarding Class Sets . . . . .	11
	Flow Control (Ethernet PAUSE, PFC, and ECN) . . . . .	12
	WRED Profiles and Tail Drop . . . . .	13
	Schedulers . . . . .	13
	Rewrite Rules . . . . .	14
	Assigning CoS Components to Interfaces . . . . .	14
	Understanding CoS Packet Flow . . . . .	15
	Understanding Default CoS Settings . . . . .	18
	Default Forwarding Classes and Queue Mapping . . . . .	18
	Default Forwarding Class Sets (Priority Groups) . . . . .	19
	Default Code-Point Aliases . . . . .	19
	Default Classifiers . . . . .	21
	Default Rewrite Rules . . . . .	23
	Default Drop Profile . . . . .	24
	Default Schedulers . . . . .	24
	Default Scheduler Maps . . . . .	25
	CoS Inputs and Outputs Overview . . . . .	26

	Overview of Policers . . . . .	27
	Policer Overview . . . . .	27
	Policer Types . . . . .	28
	Policer Actions . . . . .	29
	Policer Colors . . . . .	29
	Filter-Specific Policers . . . . .	30
	Suggested Naming Convention for Policers . . . . .	30
	Policer Counters . . . . .	30
	Policer Algorithms . . . . .	31
	How Many Policers Are Supported? . . . . .	31
	Policers Can Limit Egress Firewall Filters . . . . .	31
<b>Part 2</b>	<b>Classifying and Rewriting Traffic</b>	
<b>Chapter 2</b>	<b>Using Classifiers, Forwarding Classes, and Rewrite Rules . . . . .</b>	<b>35</b>
	Understanding CoS Classifiers . . . . .	35
	Interfaces and Output Queues . . . . .	36
	Classifier Support by Type . . . . .	37
	Behavior Aggregate Classifiers . . . . .	37
	Default Behavior Aggregate Classification . . . . .	38
	Importing a Classifier . . . . .	38
	PFC Priorities . . . . .	39
	Fixed Classifiers on Ethernet Interfaces . . . . .	40
	Multifield Classifiers . . . . .	40
	MPLS EXP Classifiers . . . . .	41
	Packet Classification for IRB Interfaces . . . . .	41
	Defining CoS BA Classifiers (DSCP, DSCP IPv6, IEEE 802.1p) . . . . .	41
	Example: Configuring Classifiers . . . . .	43
	Understanding Default CoS Scheduling and Classification . . . . .	45
	Default Classification . . . . .	46
	Default Scheduling . . . . .	49
	Default DCBX Advertisement . . . . .	51
	Default Scheduling and Classification Summary . . . . .	51
	Understanding Applying CoS Classifiers and Rewrite Rules to Interfaces . . . . .	51
	Supported Classifier and Rewrite Rule Types . . . . .	52
	Ethernet Interfaces Supported for Classifier and Rewrite Rule	
	Configuration . . . . .	54
	Interface Types That Support Classifier and Rewrite Rule	
	Configuration . . . . .	54
	Classifier and Rewrite Rule Physical and Logical Ethernet Interface	
	Support . . . . .	54
	Routed VLAN Interfaces (RVIs) and Integrated Routing and Bridging	
	(IRB) Interfaces . . . . .	57
	Default Classifiers . . . . .	57
	Default Rewrite Rules . . . . .	58

Classifier Precedence . . . . .	58
Classifier Precedence on Physical Ethernet Interfaces (QFX5200, QFX5100, EX4600, QFX3500, and QFX3600 Switches, and QFabric Systems) . . . . .	58
Classifier Precedence on Logical Ethernet Interfaces (All Switches) . . . . .	59
Classifier Behavior and Limitations . . . . .	59
Rewrite Rule Precedence and Behavior . . . . .	60
Classifier and Rewrite Rule Configuration Interaction with Ethernet Interface Configuration . . . . .	61
QFX5100, QFX5200, EX4600, QFX3500, and QFX3600 Switch Scenarios . . . . .	63
Understanding CoS Code-Point Aliases . . . . .	64
Defining CoS Code-Point Aliases . . . . .	67
Understanding CoS Forwarding Classes . . . . .	67
Default Forwarding Classes . . . . .	68
Forwarding Class Configuration Rules . . . . .	69
Queue Assignment Rules . . . . .	69
Scheduling Rules . . . . .	70
Rewrite Rules . . . . .	71
Lossless Transport Support . . . . .	71
Defining CoS Forwarding Classes . . . . .	71
Example: Configuring Forwarding Classes . . . . .	72
Understanding CoS Rewrite Rules . . . . .	74
Defining CoS Rewrite Rules . . . . .	77
Troubleshooting an Unexpected Rewrite Value . . . . .	79

## Part 3

### Chapter 3

## Scheduling Traffic

Using Schedulers . . . . .	85
Understanding Default CoS Scheduling and Classification . . . . .	85
Default Classification . . . . .	86
Default Scheduling . . . . .	89
Default DCBX Advertisement . . . . .	91
Default Scheduling and Classification Summary . . . . .	91
Understanding CoS Scheduling Behavior and Configuration Considerations . . . . .	91
Defining CoS Queue Schedulers for Port Scheduling . . . . .	97
Defining CoS Queue Scheduling Priority . . . . .	100
Example: Configuring Queue Scheduling Priority . . . . .	102
Understanding CoS Traffic Control Profiles . . . . .	105
Understanding CoS Priority Group Scheduling . . . . .	107
Priority Group Scheduling Components . . . . .	108
Default Traffic Control Profile . . . . .	108
Guaranteed Rate (Minimum Guaranteed Bandwidth) . . . . .	108
Sharing Extra Bandwidth . . . . .	109
Shaping Rate (Maximum Bandwidth) . . . . .	109
Scheduler Maps . . . . .	109
Defining CoS Traffic Control Profiles (Priority Group Scheduling) . . . . .	110
Example: Configuring Traffic Control Profiles (Priority Group Scheduling) . . . . .	111

	Understanding CoS Priority Group and Queue Guaranteed Minimum Bandwidth . . . . .	114
	Bandwidth . . . . .	114
	Guaranteeing Bandwidth Using Hierarchical Scheduling . . . . .	114
	Priority Group Guaranteed Rate (Guaranteed Minimum Bandwidth) . . . . .	116
	Queue Transmit Rate (Guaranteed Minimum Bandwidth) . . . . .	116
	Example: Configuring Minimum Guaranteed Output Bandwidth . . . . .	117
	Understanding CoS Priority Group Shaping and Queue Shaping (Maximum Bandwidth) . . . . .	121
	Priority Group Shaping . . . . .	122
	Queue Shaping . . . . .	122
	Shaping Maximum Bandwidth Using Hierarchical Scheduling . . . . .	123
	Example: Configuring Maximum Output Bandwidth . . . . .	124
<b>Part 4</b>	<b>Configuration Statements and Operational Commands</b>	
<b>Chapter 4</b>	<b>Configuration Statements (Basic Concepts) . . . . .</b>	<b>131</b>
	class-of-service . . . . .	132
	traceoptions (Class of Service) . . . . .	136
<b>Chapter 5</b>	<b>Configuration Statements (Classifiers and Rewrite Rules) . . . . .</b>	<b>139</b>
	class (Forwarding Classes) . . . . .	140
	class (Forwarding Class Sets) . . . . .	141
	classifiers . . . . .	142
	code-point (Rewrite Rules) . . . . .	144
	code-point-aliases . . . . .	145
	code-points (CoS) . . . . .	146
	dscp . . . . .	147
	dscp-ipv6 . . . . .	149
	exp . . . . .	151
	forwarding-class . . . . .	153
	forwarding-classes . . . . .	155
	ieee-802.1 . . . . .	157
	import . . . . .	159
	interfaces (Class of Service) . . . . .	160
	loss-priority (Classifiers) . . . . .	162
	loss-priority (Rewrite Rules) . . . . .	163
	queue-num . . . . .	164
	rewrite-rules . . . . .	166
	unit . . . . .	167
<b>Chapter 6</b>	<b>Configuration Statements (Scheduling) . . . . .</b>	<b>169</b>
	buffer-size . . . . .	170
	excess-rate . . . . .	175
	fill-level . . . . .	176
	forwarding-class . . . . .	178
	guaranteed-rate . . . . .	180
	interpolate . . . . .	181
	output-traffic-control-profile . . . . .	182
	priority (Schedulers) . . . . .	183
	scheduler . . . . .	184

	scheduler-map . . . . .	185
	scheduler-maps . . . . .	185
	schedulers . . . . .	186
	shaping-rate . . . . .	187
	traffic-control-profiles . . . . .	189
	transmit-rate . . . . .	190
<b>Chapter 7</b>	<b>Operational Commands (Basic Concepts) . . . . .</b>	<b>195</b>
	Monitoring Interfaces That Have CoS Components . . . . .	195
	show class-of-service . . . . .	197
	show class-of-service interface . . . . .	202
	show class-of-service shared-buffer . . . . .	231
	show pfe filter hw summary . . . . .	234
	show pfe next-hop . . . . .	236
	show pfe route . . . . .	241
	show pfe terse . . . . .	250
	show pfe version . . . . .	252
	show interfaces voq . . . . .	253
<b>Chapter 8</b>	<b>Operational Commands (Classifiers and Rewrite Rules) . . . . .</b>	<b>267</b>
	Monitoring CoS Classifiers . . . . .	267
	Monitoring CoS Forwarding Classes . . . . .	268
	Monitoring CoS Rewrite Rules . . . . .	271
	Monitoring CoS Code-Point Value Aliases . . . . .	272
	show class-of-service classifier . . . . .	274
	show class-of-service code-point-aliases . . . . .	277
	show class-of-service forwarding-class . . . . .	279
	show class-of-service forwarding-table . . . . .	281
	show class-of-service forwarding-table classifier . . . . .	285
	show class-of-service forwarding-table classifier mapping . . . . .	287
	show class-of-service forwarding-table rewrite-rule . . . . .	289
	show class-of-service forwarding-table rewrite-rule mapping . . . . .	291
	show class-of-service interface . . . . .	293
	show class-of-service rewrite-rule . . . . .	322
<b>Chapter 9</b>	<b>Operational Commands (Scheduling) . . . . .</b>	<b>325</b>
	Monitoring CoS Scheduler Maps . . . . .	325
	show class-of-service drop-profile . . . . .	327
	show class-of-service forwarding-table . . . . .	330
	show class-of-service forwarding-table drop-profile . . . . .	334
	show class-of-service forwarding-table scheduler-map . . . . .	336
	show class-of-service interface . . . . .	338
	show class-of-service scheduler-map . . . . .	367
	show interfaces queue . . . . .	370
	show interfaces voq . . . . .	409





# List of Figures

<b>Part 1</b>	<b>CoS Overview</b>	
<b>Chapter 1</b>	<b>Basic Concepts</b> .....	<b>3</b>
	Figure 1: Packet Flow Across the Network .....	6
	Figure 2: CoS Classifier, Queues, and Scheduler .....	17
	Figure 3: Packet Flow Through Configurable CoS Components .....	17
	Figure 4: Flow of Tricolor Marking Policer Operation .....	27
<b>Part 3</b>	<b>Scheduling Traffic</b>	
<b>Chapter 3</b>	<b>Using Schedulers</b> .....	<b>85</b>
	Figure 5: Allocating Guaranteed Bandwidth Using Hierarchical Scheduling .....	115
	Figure 6: Setting Maximum Bandwidth Using Hierarchical Scheduling .....	123



# List of Tables

	<b>About the Documentation</b> . . . . .	<b>xv</b>
	Table 1: Notice Icons . . . . .	xvii
	Table 2: Text and Syntax Conventions . . . . .	xvii
<b>Part 1</b>	<b>CoS Overview</b>	
<b>Chapter 1</b>	<b>Basic Concepts</b> . . . . .	<b>3</b>
	Table 3: Default Forwarding Classes and Queue Mapping . . . . .	18
	Table 4: Default IEEE 802.1 Code-Point Aliases . . . . .	19
	Table 5: Default DSCP and DCSP IPv6 Code-Point Aliases . . . . .	20
	Table 6: Default IEEE 802.1 Classifiers for Ports in Trunk Mode (Trusted Classifier) . . . . .	21
	Table 7: Default IEEE 802.1 Classifiers for Ports in Access Mode (Untrusted Classifier) . . . . .	22
	Table 8: Default DSCP IP and IPv6 Classifiers . . . . .	22
	Table 9: Default EXP Classifiers . . . . .	23
	Table 10: Default Drop Profile . . . . .	24
	Table 11: Default Schedulers . . . . .	24
	Table 12: Default Scheduler Maps . . . . .	25
	Table 13: CoS Mappings—Inputs and Outputs . . . . .	26
	Table 14: Policer Actions . . . . .	29
<b>Part 2</b>	<b>Classifying and Rewriting Traffic</b>	
<b>Chapter 2</b>	<b>Using Classifiers, Forwarding Classes, and Rewrite Rules</b> . . . . .	<b>35</b>
	Table 15: Classifier Support by Classifier Type . . . . .	37
	Table 16: Default BA Classification . . . . .	38
	Table 17: Default IEEE 802.1p Code Point to PFC Priority, Output Queue, and Forwarding Class Mapping . . . . .	39
	Table 18: ba-classifier Loss Priority Assignments . . . . .	44
	Table 19: Default IEEE 802.1 Classifiers for Ports in Trunk Mode (Trusted Classifier) . . . . .	47
	Table 20: Default IEEE 802.1 Classifiers for Ports in Access Mode (Untrusted Classifier) . . . . .	47
	Table 21: Default DSCP IP and IPv6 Classifiers . . . . .	48
	Table 22: Default EXP Classifiers . . . . .	49
	Table 23: Default Scheduler Configuration . . . . .	49
	Table 24: Supported Classifiers and Rewrite Rules . . . . .	52
	Table 25: Ethernet Interface Support for Classifier and Rewrite Rule Configuration (QFX5100, QFX5200, EX4600, QFX3500, and QFX3600 Switches, and QFabric Systems) . . . . .	55

	Table 26: Ethernet Interface Support for Classifier and Rewrite Rule Configuration (QFX10000 Switches) . . . . .	56
	Table 27: Default IEEE 802.1 Code-Point Aliases . . . . .	65
	Table 28: Default DSCP and DSCP IPv6 Code-Point Aliases . . . . .	66
	Table 29: Default Forwarding Classes . . . . .	68
	Table 30: Forwarding-Class-to-Queue Example Configuration . . . . .	73
	Table 31: Configuring Rewrite Rules . . . . .	76
<b>Part 3</b>	<b>Scheduling Traffic</b>	
<b>Chapter 3</b>	<b>Using Schedulers . . . . .</b>	<b>85</b>
	Table 32: Default IEEE 802.1 Classifiers for Ports in Trunk Mode (Trusted Classifier) . . . . .	87
	Table 33: Default IEEE 802.1 Classifiers for Ports in Access Mode (Untrusted Classifier) . . . . .	87
	Table 34: Default DSCP IP and IPv6 Classifiers . . . . .	88
	Table 35: Default EXP Classifiers . . . . .	89
	Table 36: Default Scheduler Configuration . . . . .	89
	Table 37: Components of the Queue Scheduler Priority Configuration Example . . . . .	103
	Table 38: Priority Group Scheduler Components . . . . .	108
	Table 39: Other Scheduling Components . . . . .	108
	Table 40: Components of the Minimum Guaranteed Output Bandwidth Configuration Example . . . . .	119
	Table 41: Components of the Maximum Output Bandwidth Configuration Example . . . . .	125
<b>Part 4</b>	<b>Configuration Statements and Operational Commands</b>	
<b>Chapter 6</b>	<b>Configuration Statements (Scheduling) . . . . .</b>	<b>169</b>
	Table 42: Default Output Queue Buffer Sizes (QFX10000 Switches) . . . . .	173
	Table 43: Default Output Queue Buffer Sizes (QFX5100, EX4600, QFX3500, and QFX3600 Switches, and QFabric Systems) . . . . .	174
	Table 44: Default Transmit Rates for QFX5100, EX4600, QFX3500, and QFX3600 Switches, and QFabric Systems . . . . .	192
	Table 45: Default Transmit Rates for QFX10000 Switches . . . . .	193
<b>Chapter 7</b>	<b>Operational Commands (Basic Concepts) . . . . .</b>	<b>195</b>
	Table 46: Summary of Key CoS Interfaces Output Fields . . . . .	195
	Table 47: show class-of-service Output Fields . . . . .	197
	Table 48: show class-of-service interface Output Fields . . . . .	203
	Table 49: show class-of-service shared-buffer Output Fields . . . . .	231
	Table 50: show pfe filter hw summary Output Fields . . . . .	234
	Table 51: show pfe next-hop Output Fields . . . . .	238
	Table 52: show pfe route Output Fields . . . . .	243
	Table 53: QFX Series, EX4600 switches, and OCX Series show pfe route Hardware Table Output Fields . . . . .	244
	Table 54: show interfaces voq Output Fields . . . . .	254
<b>Chapter 8</b>	<b>Operational Commands (Classifiers and Rewrite Rules) . . . . .</b>	<b>267</b>

	Table 55: Summary of Key CoS Classifier Output Fields . . . . .	268
	Table 56: Summary of Key CoS Forwarding Class Output Fields on Switches that Separate Unicast and Multidestination Traffic . . . . .	269
	Table 57: Summary of Key CoS Forwarding Class Output Fields on Switches That Do Not Separate Unicast and Multidestination Traffic . . . . .	270
	Table 58: Summary of Key CoS Rewrite Rule Output Fields . . . . .	272
	Table 59: Summary of Key CoS Value Alias Output Fields . . . . .	273
	Table 60: show class-of-service classifier Output Fields . . . . .	274
	Table 61: show class-of-service code-point-aliases Output Fields . . . . .	277
	Table 62: show class-of-service forwarding-class Output Fields . . . . .	279
	Table 63: show class-of-service forwarding-table classifier Output Fields . . . . .	285
	Table 64: show class-of-service forwarding-table classifier mapping Output Fields . . . . .	287
	Table 65: show class-of-service forwarding-table rewrite-rule Output Fields . . . . .	289
	Table 66: show class-of-service forwarding-table rewrite-rule mapping Output Fields . . . . .	291
	Table 67: show class-of-service interface Output Fields . . . . .	294
	Table 68: show class-of-service rewrite-rule Output Fields . . . . .	322
<b>Chapter 9</b>	<b>Operational Commands (Scheduling) . . . . .</b>	<b>325</b>
	Table 69: Summary of Key CoS Scheduler Maps Output Fields . . . . .	325
	Table 70: show class-of-service drop-profile Output Fields . . . . .	327
	Table 71: show class-of-service forwarding-table drop-profile Output Fields . . . . .	334
	Table 72: show class-of-service forwarding-table scheduler-map Output Fields . . . . .	336
	Table 73: show class-of-service interface Output Fields . . . . .	339
	Table 74: show class-of-service scheduler-map Output Fields . . . . .	367
	Table 75: Layer 2 Overhead and Transmitted Packets or Byte Counts . . . . .	371
	Table 76: show interfaces queue Output Fields . . . . .	374
	Table 77: Byte Count by Interface Hardware . . . . .	377
	Table 78: show interfaces voq Output Fields . . . . .	410



# About the Documentation

- Documentation and Release Notes on page xv
- Using the Examples in This Manual on page xv
- Documentation Conventions on page xvii
- Documentation Feedback on page xix
- Requesting Technical Support on page xix

## Documentation and Release Notes

---

To obtain the most current version of all Juniper Networks® technical documentation, see the product documentation page on the Juniper Networks website at <http://www.juniper.net/techpubs/>.

If the information in the latest release notes differs from the information in the documentation, follow the product Release Notes.

Juniper Networks Books publishes books by Juniper Networks engineers and subject matter experts. These books go beyond the technical documentation to explore the nuances of network architecture, deployment, and administration. The current list can be viewed at <http://www.juniper.net/books>.

## Using the Examples in This Manual

---

If you want to use the examples in this manual, you can use the **load merge** or the **load merge relative** command. These commands cause the software to merge the incoming configuration into the current candidate configuration. The example does not become active until you commit the candidate configuration.

If the example configuration contains the top level of the hierarchy (or multiple hierarchies), the example is a *full example*. In this case, use the **load merge** command.

If the example configuration does not start at the top level of the hierarchy, the example is a *snippet*. In this case, use the **load merge relative** command. These procedures are described in the following sections.

## Merging a Full Example

To merge a full example, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration example into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following configuration to a file and name the file **ex-script.conf**. Copy the **ex-script.conf** file to the **/var/tmp** directory on your routing platform.

```
system {
  scripts {
    commit {
      file ex-script.xml;
    }
  }
}
interfaces {
  fxp0 {
    disable;
    unit 0 {
      family inet {
        address 10.0.0.1/24;
      }
    }
  }
}
```

2. Merge the contents of the file into your routing platform configuration by issuing the **load merge** configuration mode command:

```
[edit]
user@host# load merge /var/tmp/ex-script.conf
load complete
```

## Merging a Snippet

To merge a snippet, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration snippet into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following snippet to a file and name the file **ex-script-snippet.conf**. Copy the **ex-script-snippet.conf** file to the **/var/tmp** directory on your routing platform.

```
commit {
  file ex-script-snippet.xml; }
```

2. Move to the hierarchy level that is relevant for this snippet by issuing the following configuration mode command:

```
[edit]
user@host# edit system scripts
[edit system scripts]
```



3. Merge the contents of the file into your routing platform configuration by issuing the **load merge relative** configuration mode command:

```
[edit system scripts]
user@host# load merge relative /var/tmp/ex-script-snippet.conf
load complete
```

For more information about the **load** command, see the *CLI User Guide*.

## Documentation Conventions

Table 1 on page xvii defines notice icons used in this guide.

Table 1: Notice Icons







Icon	Meaning	Description
	Informational note	Indicates important features or instructions.
	Caution	Indicates a situation that might result in loss of data or hardware damage.
	Warning	Alerts you to the risk of personal injury or death.
	Laser warning	Alerts you to the risk of personal injury from a laser.
	Tip	Indicates helpful information.
	Best practice	Alerts you to a recommended use or implementation.

Table 2 on page xvii defines the text and syntax conventions used in this guide.

Table 2: Text and Syntax Conventions

Convention	Description	Examples
<b>Bold text like this</b>	Represents text that you type.	To enter configuration mode, type the <b>configure</b> command:  user@host> <b>configure</b>
Fixed-width text like this	Represents output that appears on the terminal screen.	user@host> <b>show chassis alarms</b> No alarms currently active

Table 2: Text and Syntax Conventions (*continued*)

Convention	Description	Examples
<i>Italic text like this</i>	<ul style="list-style-type: none"><li>Introduces or emphasizes important new terms.</li><li>Identifies guide names.</li><li>Identifies RFC and Internet draft titles.</li></ul>	<ul style="list-style-type: none"><li>A policy <i>term</i> is a named structure that defines match conditions and actions.</li><li><i>Junos OS CLI User Guide</i></li><li>RFC 1997, <i>BGP Communities Attribute</i></li></ul>
<i>Italic text like this</i>	Represents variables (options for which you substitute a value) in commands or configuration statements.	Configure the machine's domain name:  [edit] root@# set system domain-name <i>domain-name</i>
<b>Text like this</b>	Represents names of configuration statements, commands, files, and directories; configuration hierarchy levels; or labels on routing platform components.	<ul style="list-style-type: none"><li>To configure a stub area, include the <b>stub</b> statement at the [edit protocols ospf area area-id] hierarchy level.</li><li>The console port is labeled <b>CONSOLE</b>.</li></ul>
< > (angle brackets)	Encloses optional keywords or variables.	<b>stub</b> <default-metric <i>metric</i> >;
(pipe symbol)	Indicates a choice between the mutually exclusive keywords or variables on either side of the symbol. The set of choices is often enclosed in parentheses for clarity.	<b>broadcast</b>   <b>multicast</b>  ( <i>string1</i>   <i>string2</i>   <i>string3</i> )
# (pound sign)	Indicates a comment specified on the same line as the configuration statement to which it applies.	<b>rsvp { # Required for dynamic MPLS only</b>
[ ] (square brackets)	Encloses a variable for which you can substitute one or more values.	<b>community name members [</b> <b>community-ids ]</b>
Indentation and braces ( { } )	Identifies a level in the configuration hierarchy.	[edit] routing-options { static { route default { nexthop <i>address</i> ; retain; } } }
;(semicolon)	Identifies a leaf statement at a configuration hierarchy level.	
GUI Conventions		
<b>Bold text like this</b>	Represents graphical user interface (GUI) items you click or select.	<ul style="list-style-type: none"><li>In the Logical Interfaces box, select <b>All Interfaces</b>.</li><li>To cancel the configuration, click <b>Cancel</b>.</li></ul>
> (bold right angle bracket)	Separates levels in a hierarchy of menu selections.	In the configuration editor hierarchy, select <b>Protocols&gt;Ospf</b> .

## Documentation Feedback

---

We encourage you to provide feedback, comments, and suggestions so that we can improve the documentation. You can provide feedback by using either of the following methods:

- Online feedback rating system—On any page of the Juniper Networks TechLibrary site at <http://www.juniper.net/techpubs/index.html>, simply click the stars to rate the content, and use the pop-up form to provide us with information about your experience. Alternately, you can use the online feedback form at <http://www.juniper.net/techpubs/feedback/>.
- E-mail—Send your comments to [techpubs-comments@juniper.net](mailto:techpubs-comments@juniper.net). Include the document or topic name, URL or page number, and software version (if applicable).

## Requesting Technical Support

---

Technical product support is available through the Juniper Networks Technical Assistance Center (JTAC). If you are a customer with an active J-Care or Partner Support Service support contract, or are covered under warranty, and need post-sales technical support, you can access our tools and resources online or open a case with JTAC.

- JTAC policies—For a complete understanding of our JTAC procedures and policies, review the *JTAC User Guide* located at <http://www.juniper.net/us/en/local/pdf/resource-guides/7100059-en.pdf>.
- Product warranties—For product warranty information, visit <http://www.juniper.net/support/warranty/>.
- JTAC hours of operation—The JTAC centers have resources available 24 hours a day, 7 days a week, 365 days a year.

## Self-Help Online Tools and Resources

For quick and easy problem resolution, Juniper Networks has designed an online self-service portal called the Customer Support Center (CSC) that provides you with the following features:

- Find CSC offerings: <http://www.juniper.net/customers/support/>
- Search for known bugs: <http://www2.juniper.net/kb/>
- Find product documentation: <http://www.juniper.net/techpubs/>
- Find solutions and answer questions using our Knowledge Base: <http://kb.juniper.net/>
- Download the latest versions of software and review release notes: <http://www.juniper.net/customers/csc/software/>
- Search technical bulletins for relevant hardware and software notifications: <http://kb.juniper.net/InfoCenter/>

- Join and participate in the Juniper Networks Community Forum:  
<http://www.juniper.net/company/communities/>
- Open a case online in the CSC Case Management tool: <http://www.juniper.net/cm/>

To verify service entitlement by product serial number, use our Serial Number Entitlement (SNE) Tool: <https://tools.juniper.net/SerialNumberEntitlementSearch/>

## Opening a Case with JTAC

You can open a case with JTAC on the Web or by telephone.

- Use the Case Management tool in the CSC at <http://www.juniper.net/cm/>.
- Call 1-888-314-JTAC (1-888-314-5822 toll-free in the USA, Canada, and Mexico).

For international or direct-dial options in countries without toll-free numbers, see <http://www.juniper.net/support/requesting-support.html>.

## PART 1

# CoS Overview

- [Basic Concepts on page 3](#)



## CHAPTER 1

# Basic Concepts

- [Overview of Junos OS CoS on page 3](#)
- [Configuring CoS on page 6](#)
- [Understanding Junos CoS Components on page 9](#)
- [Assigning CoS Components to Interfaces on page 14](#)
- [Understanding CoS Packet Flow on page 15](#)
- [Understanding Default CoS Settings on page 18](#)
- [CoS Inputs and Outputs Overview on page 26](#)
- [Overview of Policers on page 27](#)

## Overview of Junos OS CoS

---

**Supported Platforms**   [EX4600, OCX1100, QFabric System, QFX Series standalone switches](#)

When a network experiences congestion and delay, some packets must be dropped. Junos OS class of service (CoS) enables you to divide traffic into classes and set various levels of throughput and packet loss when congestion occurs. You have greater control over packet loss because you can configure rules tailored to your needs.

You can configure CoS features to provide multiple classes of service for different applications. CoS also allows you to rewrite the Differentiated Services code point (DSCP) or IEEE 802.1p code-point bits of packets leaving an interface, thus allowing you to tailor packets for the network requirements of the remote peers.

CoS provides multiple classes of service for different applications. You can configure multiple forwarding classes for transmitting packets, define which packets are placed into each output queue, schedule the transmission service level for each queue, and manage congestion using a weighted random early detection (WRED) algorithm.

In designing CoS applications, you must carefully consider your service needs, and you must thoroughly plan and design your CoS configuration to ensure consistency and interoperability across all platforms in a CoS domain.

Because CoS is implemented in hardware rather than in software, you can experiment with and deploy CoS features without affecting packet forwarding and switching performance.



**NOTE:** CoS policies can be enabled or disabled on each switch interface. Also, each physical and logical interface on the switch can have associated custom CoS rules.

When you change or when you deactivate and then reactivate the class-of-service configuration, the system experiences packet drops because the system momentarily blocks traffic to change the mapping of incoming traffic to input queues.

---

This topic describes:

- [CoS Standards on page 4](#)
- [How Junos OS CoS Works on page 5](#)
- [Default CoS Behavior on page 6](#)

## CoS Standards

The following RFCs define the standards for CoS capabilities:

- RFC 2474, *Definition of the Differentiated Services Field in the IPv4 and IPv6 Headers*
- RFC 2597, *Assured Forwarding PHB Group*
- RFC 2598, *An Expedited Forwarding PHB*
- RFC 2698, *A Two Rate Three Color Marker*
- RFC 3168, *The Addition of Explicit Congestion Notification (ECN) to IP*



The following data center bridging (DCB) standards are also supported to provide the CoS (and other characteristics) that Fibre Channel over Ethernet (FCoE) requires for transmitting storage traffic over an Ethernet network:

- IEEE 802.1Qbb, priority-based flow control (PFC)
- IEEE 802.1Qaz, enhanced transmission selection (ETS)
- IEEE 802.1AB (LLDP) extension called Data Center Bridging Capability Exchange Protocol (DCBX)



**NOTE:** OCX Series switches do not support PFC and DCBX.

Juniper Networks QFX10000 switches support both enhanced transmission selection (ETS) hierarchical port scheduling and direct port scheduling.

## How Junos OS CoS Works


Junos OS CoS works by examining traffic entering the edge of your network. The switch classifies traffic into defined service groups to provide the special treatment of traffic across the network. For example, you can send voice traffic across certain links and data traffic across other links. In addition, the data traffic streams can be serviced differently along the network path to ensure that higher-paying customers receive better service. As the traffic leaves the network at the far edge, you can reclassify the traffic to meet the policies of the targeted peer by rewriting the DSCP or IEEE 802.1 code-point bits.

To support CoS, you must configure each switch in the network. Generally, each switch examines the packets that enter it to determine their CoS settings. These settings dictate which packets are transmitted first to the next downstream switch. Switches at the edges of the network might be required to alter the CoS settings of the packets that enter the network to classify the packets into the appropriate service groups.

In [Figure 1 on page 6](#), Switch A is receiving traffic. As each packet enters, Switch A examines the packet's current CoS settings and classifies the traffic into one of the groupings defined on the switch. This definition allows Switch A to prioritize its resources for servicing the traffic streams it receives. Switch A might alter the CoS settings (forwarding class and loss priority) of the packets to better match the defined traffic groups.

When Switch B receives the packets, it examines the CoS settings, determines the appropriate traffic groups, and processes the packet according to those settings. It then transmits the packets to Switch C, which performs the same actions. Switch D also examines the packets and determines the appropriate groups. Because Switch D sits at the far end of the network, it can reclassify (rewrite) the CoS code-point bits of the packets before transmitting them.

Figure 1: Packet Flow Across the Network

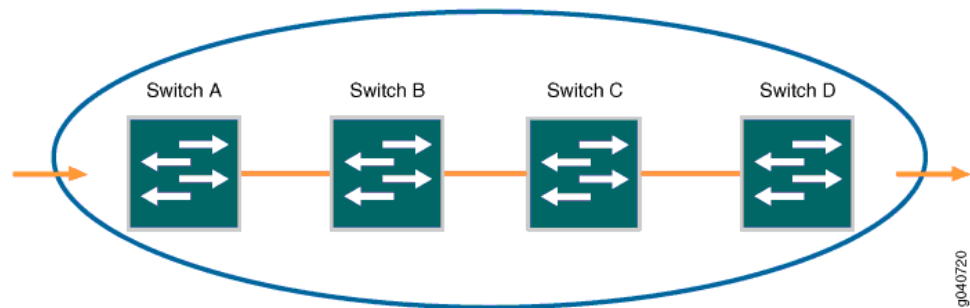

## Default CoS Behavior

If you do not configure CoS settings, the software performs some CoS functions to ensure that the system forwards traffic and protocol packets with minimum delay when the network is experiencing congestion. Some CoS settings, such as classifiers, are automatically applied to each logical interface that you configure. Other settings, such as rewrite rules, are applied only if you explicitly associate them with an interface.

### Related Documentation

- [CoS Support on QFX Series Switches, EX4600 Switches, and QFabric Systems](#)
- [Overview of Policers on page 27](#)
- [Understanding Junos CoS Components on page 9](#)
- [Understanding CoS Packet Flow on page 15](#)
- [Understanding CoS Hierarchical Port Scheduling \(ETS\)](#)

## Configuring CoS

**Supported Platforms** [EX4600, OCX1100, QFabric System, QFX Series standalone switches](#)

The traffic management class-of-service topics describe how to configure the Junos OS class-of-service (CoS) components. Junos CoS provides a flexible set of tools that enable you to fine tune control over the traffic on your network.

You can define classifiers that classify incoming traffic into forwarding classes to place traffic in groups for transmission. You can map forwarding classes to output queues to define the type of traffic on each output queue. You can configure schedulers for each output queue to control the service level (priority, bandwidth characteristics) of each type of traffic. You can provide different service levels for the same forwarding classes on different interfaces. Some switches support data center bridging standards so that you can configure lossless transport across the Ethernet network using priority-based flow control (PFC), Data Center Bridging Exchange protocol (DCBX), and enhanced transmission selection (ETS) hierarchical scheduling (OCX Series switches do not support lossless transport, PFC, and DCBX).

You can configure various CoS components individually or in combination to define CoS services.



**NOTE:** When you change the CoS configuration or when you deactivate and then reactivate the CoS configuration, the system experiences packet drops because the system momentarily blocks traffic to change the mapping of incoming traffic to input queues.

The following topics describe how to configure CoS components.



**NOTE:** Links to features that are not supported on the platform for which you are looking up information might not be functional. The platforms that support each feature are listed before each topic link. Feature topics that do not list platforms apply to all platforms.

- (QFX3500, QFX3600, EX4600, QFX5100, QFX5200, and OCX1100 switches, and QFabric systems) *Defining CoS Unicast BA Classifiers (DSCP, DSCP IPv6, IEEE 802.1p)*
- (QFX10000 switches) [“Example: Configuring Classifiers” on page 43](#)
- (QFX3500, QFX3600, EX4600, QFX5100, QFX5200, and OCX1100 switches, and QFabric systems) *Example: Configuring Multidestination (Multicast, Broadcast, DLF) Classifiers*
- (QFX3500, QFX3600, EX4600, QFX5100, QFX5200, and OCX1100 switches, and QFabric systems) *Example: Configuring WRED Drop Profiles*
- (QFX10000 switches) *Example: Configuring WRED Drop Profiles*
- (All switches) *Example: Configuring Drop Profile Maps*
- (QFX3500, QFX3600, EX4600, QFX5100, QFX5200, and OCX1100 switches, and QFabric systems) *Example: Configuring Forwarding Classes*
- (QFX10000 switches) [“Example: Configuring Forwarding Classes” on page 72](#)
- (All switches) *Example: Configuring Forwarding Class Sets*
- (QFX3500, QFX3600, EX4600, QFX5100, QFX5200, and OCX1100 switches, and QFabric systems) *Example: Configuring Queue Schedulers*
- (QFX10000 switches) *Example: Configuring Queue Schedulers for Port Scheduling*
- (All switches) [“Example: Configuring Queue Scheduling Priority” on page 102](#)
- (All switches) [“Example: Configuring Traffic Control Profiles \(Priority Group Scheduling\)” on page 111](#)
- (All switches) [“Example: Configuring Minimum Guaranteed Output Bandwidth” on page 117](#)
- (All switches) [“Example: Configuring Maximum Output Bandwidth” on page 124](#)
- (QFX3500, QFX3600, EX4600, QFX5100, and QFX10000 switches, and QFabric systems) *Example: Configuring DCBX Application Protocol TLV Exchange*
- (All switches) *Example: Configuring CoS Hierarchical Port Scheduling (ETS)*

- (QFX3500, QFX3600, EX4600, QFX5100, QFX5200, and QFX10000 switches, and QFabric systems) *Example: Configuring CoS PFC for FCoE Traffic*
- (QFX3500, QFX3600, EX4600, QFX5100, QFX5200, and QFX10000 switches, and QFabric systems) *Example: Configuring CoS for FCoE Transit Switch Traffic Across an MC-LAG*
- (QFX3500 switches and QFabric systems) *Example: Configuring IEEE 802.1p Priority Remapping on an FCoE-FC Gateway*
- (QFX3500, QFX3600, EX4600, QFX5100, QFX5200, and QFX10000 switches, and QFabric systems) *Example: Configuring Two or More Lossless FCoE IEEE 802.1p Priorities on Different FCoE Transit Switch Interfaces*
- (QFX3500, QFX3600, EX4600, QFX5100, QFX5200, and QFX10000 switches, and QFabric systems) *Example: Configuring Lossless FCoE Traffic When the Converged Ethernet Network Does Not Use IEEE 802.1p Priority 3 for FCoE Traffic (FCoE Transit Switch)*
- (QFX3500, QFX3600, EX4600, QFX5100, QFX5200, and QFX10000 switches, and QFabric systems) *Example: Configuring Two or More Lossless FCoE Priorities on the Same FCoE Transit Switch Interface*
- (QFX3500, QFX3600, EX4600, QFX5100, QFX5200, and QFX10000 switches, and QFabric systems) *Example: Configuring Lossless IEEE 802.1p Priorities on Ethernet Interfaces for Multiple Applications (FCoE and iSCSI)*
- (All switches) [“Defining CoS Code-Point Aliases” on page 67](#)
- (All switches) [“Defining CoS Rewrite Rules” on page 77](#)
- (QFX3500, QFX3600, EX4600, QFX5100, QFX5200, and QFX10000 switches, and QFabric systems) *Configuring CoS PFC (Congestion Notification Profiles)*
- (QFX3500 switches and QFabric systems) *Configuring CoS Fixed Classifier Rewrite Values for Native FC Interfaces (NP\_Ports)*
- (All switches) [“Assigning CoS Components to Interfaces” on page 14](#)
- (QFX3500, QFX3600, EX4600, QFX5100, QFX5200, and OCX1100 switches, and QFabric systems) *Changing the Host Outbound Traffic Default Queue Mapping*
- (All switches) [“Defining CoS Traffic Control Profiles \(Priority Group Scheduling\)” on page 110](#)
- (QFX3500, QFX3600, EX4600, QFX5100, QFX5200, and OCX1100 switches, and QFabric systems) *Enabling and Disabling CoS Symmetric Ethernet PAUSE Flow Control*
- (QFX3500, QFX3600, EX4600, QFX5200, and QFX5100 switches, and QFabric systems) *Configuring CoS Asymmetric Ethernet PAUSE Flow Control*
- (QFX3500, QFX3600, EX4600, QFX5100, QFX5200, and QFX10000 switches, and QFabric systems) *Configuring the DCBX Mode*
- (QFX3500, QFX3600, EX4600, QFX5100, QFX5200, and QFX10000 switches, and QFabric systems) *Configuring DCBX Autonegotiation*

- (QFX3500, QFX3600, EX4600, QFX5100, and QFX10000 switches, and QFabric systems) *Disabling the ETS Recommendation TLV*
- (QFX3500, QFX3600, EX4600, QFX5100, QFX5200, and QFX10000 switches, and QFabric systems) *Defining an Application for DCBX Application Protocol TLV Exchange*
- (QFX3500, QFX3600, EX4600, QFX5100, QFX5200, and QFX10000 switches, and QFabric systems) *Configuring an Application Map for DCBX Application Protocol TLV Exchange*
- (QFX3500, QFX3600, EX4600, QFX5100, QFX5200, and QFX10000 switches, and QFabric systems) *Applying an Application Map to an Interface for DCBX Application Protocol TLV Exchange*

## Understanding Junos CoS Components

**Supported Platforms** [EX4600, OCX1100, QFabric System, QFX Series standalone switches](#)

This topic describes the Junos OS class-of-service (CoS) components:

- [Code-Point Aliases on page 9](#)
- [Policers on page 9](#)
- [Classifiers on page 9](#)
- [Forwarding Classes on page 10](#)
- [Forwarding Class Sets on page 11](#)
- [Flow Control \(Ethernet PAUSE, PFC, and ECN\) on page 12](#)
- [WRED Profiles and Tail Drop on page 13](#)
- [Schedulers on page 13](#)
- [Rewrite Rules on page 14](#)

### Code-Point Aliases

A *code-point alias* assigns a name to a pattern of code-point bits. You can use this name instead of the bit pattern when you configure other CoS components such as classifiers and rewrite rules.

### Policers

*Policers* limit traffic of a certain class to a specified bandwidth and burst size. Packets exceeding the policer limits can be discarded, or can be assigned to a different forwarding class, a different loss priority, or both. You define policers with filters that you can associate with input interfaces.

### Classifiers

Packet classification associates incoming packets with a particular CoS servicing level. In Junos OS, *classifiers* associate packets with a forwarding class and loss priority and assign packets to output queues based on the associated forwarding class. Junos OS supports two general types of classifiers:

- Behavior aggregate (BA) or CoS value traffic classifiers—Examine the CoS value in the packet header. The value in this single field determines the CoS settings applied to the packet. BA classifiers allow you to set the forwarding class and loss priority of a packet based on the Differentiated Services code point (DSCP) value, IEEE 802.1p value, or MPLS EXP value.



**NOTE:** OCX Series switches do not support MPLS.

- Multifield traffic classifiers—Examine multiple fields in the packet, such as source and destination addresses and source and destination port numbers of the packet. With multifield classifiers, you set the forwarding class and loss priority of a packet based on firewall filter rules.

On switches that require the separation of unicast and multideestination (multicast, broadcast, and destination lookup fail) traffic, you create separate unicast classifiers and multideestination classifiers. You cannot assign unicast traffic and multideestination traffic to the same classifier. You can apply unicast classifiers to one or more interfaces. Multideestination classifiers apply to all of the switch interfaces and cannot be applied to individual interfaces. Switches that require the separation of unicast and multideestination traffic have 12 output queues to provide 4 output queues reserved for multideestination traffic.

On switches that do not separate unicast and multideestination traffic, unicast and multideestination traffic use the same classifiers, and you do not create a separate special classifier for multideestination traffic. Switches that do not separate unicast and multideestination traffic have eight output queues because no extra queues are required to separate the traffic.

## Forwarding Classes

*Forwarding classes* group packets for transmission and CoS. You assign each packet to an output queue based on the packet's forwarding class. Forwarding classes affect the forwarding, scheduling, and rewrite marking policies applied to packets as they transit the switch.

Switches provide up to five default forwarding classes:

- best-effort—Best-effort traffic
- fcoe—Fibre Channel over Ethernet traffic
- no-loss—Lossless traffic
- network-control—Network control traffic
- mcast—Multicast traffic



**NOTE:** The default mcast forwarding class applies only to switches that require the separation of unicast and multidestination (multicast, broadcast, and destination lookup fail) traffic. On these switches, you create separate forwarding classes for the two types of traffic. The default mcast forwarding class transports only multidestination traffic, and the default best-effort, fcoe, no-loss, and network-control forwarding classes transport only unicast traffic. Unicast forwarding classes map to unicast output queues, and multidestination forwarding classes map to multidestination output queues. You cannot assign unicast traffic and multidestination traffic to the same forwarding class or to the same output queue. Switches that require the separation of unicast and multidestination traffic have 12 output queues, 8 for unicast traffic and 4 for multidestination traffic.

On switches that do not separate unicast and multidestination traffic, unicast and multidestination traffic use the same forwarding classes and output queues, so the mcast forwarding class is not valid. You do not create separate forwarding classes for multidestination traffic. Switches that do not separate unicast and multidestination traffic have eight output queues because no extra queues are required to separate the traffic.



**NOTE:** On OCX Series switches only, do not map traffic to the default fcoe and no-loss forwarding classes. By default, the DSCP default classifier does not map traffic to the fcoe and no-loss forwarding classes, so by default, OCX Series switches do not classify traffic into those forwarding classes. (On other switches, the fcoe and no-loss forwarding classes provide lossless transport for Layer 2 traffic. OCX Series switches do not support lossless Layer 2 transport.)

Switches support a total of either 12 forwarding classes (8 unicast forwarding classes and 4 multicast forwarding classes), or 8 forwarding classes (unicast and multidestination traffic use the same forwarding classes), which provides flexibility in classifying traffic.

## Forwarding Class Sets

You can group forwarding classes (output queues) into *forwarding class sets* to apply CoS to groups of traffic that require similar treatment. Forwarding class sets map traffic into priority groups to support enhanced transmission selection (ETS), which is described in IEEE 802.1Qaz.

You can configure up to three unicast forwarding class sets and one multicast forwarding class set. For example, you can configure different forwarding class sets to apply CoS to unicast groups of local area network (LAN) traffic, storage area network (SAN) traffic, and high-performance computing (HPC) traffic, and configure another group for multicast traffic.

Within each forwarding class set, you can configure special CoS treatment for the traffic mapped to each individual queue. This provides the ability to configure CoS in a two-tier

hierarchical manner. At the forwarding class set tier, you configure CoS for groups of traffic using a *traffic control profile*. At the queue tier, you configure CoS for individual output queues within a forwarding class set using a *scheduler* that you map to a queue (forwarding class) using a *scheduler map*.

## Flow Control (Ethernet PAUSE, PFC, and ECN)

*Ethernet PAUSE* (described in IEEE 802.3X) is a link-level flow control mechanism. During periods of network congestion, Ethernet PAUSE stops all traffic on a full-duplex Ethernet link for a period of time specified in the PAUSE message.



**NOTE:** QFX10000 switches do not support Ethernet PAUSE.

*Priority-based flow control* (PFC) is described in IEEE 802.1Qbb as part of the IEEE data center bridging (DCB) specifications for creating a lossless Ethernet environment to transport loss-sensitive flows such as Fibre Channel over Ethernet (FCoE) traffic.



**NOTE:** OCX Series switches do not support PFC.

PFC is a link-level flow control mechanism similar to Ethernet PAUSE. However, Ethernet PAUSE stops all traffic on a link for a period of time. PFC decouples the pause function from the physical link and divides the traffic on the link into eight priorities (3-bit IEEE 802.1p code points). You can think of the eight priorities as eight “lanes” of traffic. You can apply pause selectively to the traffic on any priority without pausing the traffic on other priorities on the same link.

The granularity that PFC provides allows you to configure different levels of CoS for different types of traffic on the link. You can create lossless lanes for traffic such as FCoE, LAN backup, or management, while using standard frame-drop methods of congestion management for IP traffic on the same link.



**NOTE:** If you transport FCoE traffic, you must enable PFC on the priority assigned to FCoE traffic (usually IEEE 802.1p code point 011 on interfaces that carry FCoE traffic).

*Explicit congestion notification* (ECN) enables end-to-end congestion notification between two endpoints on TCP/IP based networks. ECN must be enabled on both endpoints and on all of the intermediate devices between the endpoints for ECN to work properly. Any device in the transmission path that does not support ECN breaks the end-to-end ECN functionality. ECN notifies networks about congestion with the goal of reducing packet loss and delay by making the sending device decrease the transmission rate until the congestion clears, without dropping packets. RFC 3168, *The Addition of Explicit Congestion Notification (ECN) to IP*, defines ECN.



## WRED Profiles and Tail Drop

A weighted random early detection (WRED) profile (drop profile) defines parameters that enable the network to drop packets during periods of congestion. A *drop profile* defines the conditions under which packets of different loss priorities drop, by determining the probability of dropping a packet for each loss priority when output queues become congested. Drop profiles essentially set a value for a level of queue fullness—when the queue fills to the level of the queue fullness value, packets drop. The combination of queue fill level, the probability of dropping a packet at that fill level, and loss priority of the packet, determine whether a packet is dropped or forwarded. Each pairing of a fill level with a drop probability creates a point on a drop profile curve.

You can associate different drop profiles with different loss priorities to set the probability of dropping packets. You can apply a drop profile for each loss priority to a forwarding class (output queue) by applying a drop profile to a scheduler, and then mapping the scheduler to a forwarding class using a scheduler map. When the queue mapped to the forwarding class experiences congestion, the drop profile determines the level of packet drop for traffic of each loss priority in that queue.

Loss priority affects the scheduling of a packet without affecting the packet's relative ordering. Typically you mark packets exceeding a particular service level with a high loss priority.

Tail drop is a simple drop mechanism that drops all packets indiscriminately during periods of congestion, without differentiating among the packet loss priorities of traffic flows. Tail drop requires only one curve point that corresponds to the maximum depth of the output queue, and drop probability when traffic exceeds the buffer depth is 100 percent (all packets that cannot be stored in the queue are dropped). WRED is superior to tail-drop because WRED enables you to treat traffic of different priorities in a differentiated manner, so that higher priority traffic receives preference, and because of the ability to set multiple points on the drop curve.

## Schedulers

Each switch interface has multiple queues assigned to store packets. The switch determines which queue to service based on a particular method of scheduling. This process often involves determining the sequence in which different types of packets should be transmitted.

You can define the scheduling priority (**priority**), minimum guaranteed bandwidth (**transmit-rate**), maximum bandwidth (**shaping-rate**), and WRED profiles to be applied to a particular queue (forwarding class) for packet transmission. By default, extra bandwidth is shared among queues in proportion to the minimum guaranteed bandwidth of each queue. On switches that support the **excess-rate** statement, you can configure the percentage of shared extra bandwidth an output queue receives independently from the minimum guaranteed bandwidth transmit rate, or you can use default bandwidth sharing based on the transmit rate.

A scheduler map associates a specified forwarding class with a scheduler configuration. You can associate up to four user-defined scheduler maps with the interfaces.

## Rewrite Rules

A *rewrite rule* sets the appropriate CoS bits in the outgoing packet. This allows the next downstream device to classify the packet into the appropriate service group. Rewriting (marking) outbound packets is useful when the switch is at the border of a network and must change the CoS values to meet the policies of the targeted peer.



**NOTE:** Ingress firewall filters can also rewrite forwarding class and loss priority values.

### Related Documentation

- *CoS Support on QFX Series Switches, EX4600 Switches, and QFabric Systems*
- [Understanding CoS Packet Flow on page 15](#)

---

## Assigning CoS Components to Interfaces

**Supported Platforms** [EX4600, OCX1100, QFabric System, QFX Series standalone switches](#)

After you define the following CoS components, you assign them to physical or logical interfaces. Components that you assign to physical interfaces are valid for all of the logical interfaces configured on the physical interface. Components that you assign to a logical interface are valid only for that logical interface.

- Classifiers—Assign only to logical interfaces; on some switches, you can apply classifiers to physical Layer 3 interfaces and the classifiers are applied to all logical interfaces on the physical interface.
- Congestion notification profiles—Assign only to physical interfaces.



**NOTE:** OCX Series switches do not support congestion notification profiles.

- Forwarding classes—Assign to interfaces by mapping to forwarding class sets.
- Forwarding class sets—Assign only to physical interfaces.
- Output traffic control profiles—Assign only to physical interfaces (with a forwarding class set).
- Port schedulers—Assign only to physical interfaces on switches that support port scheduling. Associate the scheduler with a forwarding class in a scheduler map and apply the scheduler map to the physical interface.
- Rewrite rules—Assign only to logical interfaces; on some switches, you can apply classifiers to physical Layer 3 interfaces and the classifiers are applied to all logical interfaces on the physical interface.

You can assign a CoS component to a single interface or to multiple interfaces using wildcards. You can also assign a congestion notification profile or a forwarding class set globally to all interfaces.

To assign CoS components to interfaces:

Assign a CoS component to a physical interface by associating a CoS component (for example, a forwarding class set named **be-priority-group**) with an interface:

```
[edit class-of-service interfaces]
user@switch# set xe-0/0/7 forwarding-class-set be-priority-group
```

Assign a CoS component to a logical interface by associating a CoS component (for example, a classifier named **be\_classifier**) with a logical interface:

```
[edit class-of-service interfaces]
user@switch# set xe-0/0/7 unit 0 classifiers dscp be_classifier
```

Assign a CoS component to multiple interfaces by associating a CoS component (for example, a rewrite rule named **customup-rw**) to all 10-Gigabit Ethernet interfaces on the switch, use wildcard characters for the interface name and logical interface (unit) number:

```
[edit class-of-service interfaces]
user@switch# set xe-* unit * rewrite-rules ieee-802.1 customup-rw
```

Assign a congestion notification profile or a forwarding class set globally to all interfaces using the **set class-of-service interfaces all** statement. For example, to assign a forwarding class set named **be-priority-group** to all interfaces:

```
[edit class-of-service interfaces]
user@switch# set all forwarding-class-set be-priority-group
```



**NOTE:** If there is an existing CoS configuration of any type on an interface, the global configuration is not applied to that particular interface. The global configuration is applied to all interfaces that do not have an existing CoS configuration.

For example, if you configure a rewrite rule, assign it to interfaces **xe-0/0/20.0** and **xe-0/0/22.0**, and then configure a forwarding class set and apply it to all interfaces, the forwarding class set is applied to every interface except **xe-0/0/20** and **xe-0/0/22**.

#### Related Documentation

- [Monitoring Interfaces That Have CoS Components on page 195](#)
- [Understanding Junos CoS Components on page 9](#)

## Understanding CoS Packet Flow

**Supported Platforms**    EX4600, OCX1100, QFabric System, QFX Series standalone switches

When a packet traverses a switch, the switch provides the appropriate level of service to the packet using either default class-of-service (CoS) settings or CoS settings that you configure. On ingress ports, the switch classifies packets into appropriate forwarding classes and assigns a loss priority to the packets. On egress ports, the switch applies packet scheduling and (if you have configured them) rewrite rules to re-mark packets.

You can configure CoS on Layer 2 logical interfaces, and you can configure CoS on Layer 3 physical interfaces if you have defined at least one logical interface on the Layer 3 physical interface. You cannot configure CoS on Layer 2 physical interfaces and Layer 3 logical interfaces.

For Layer 2 traffic, either use the default CoS settings or configure CoS on each logical interface. You can apply different CoS settings to different Layer 2 logical interfaces.



**NOTE:** OCX Series switches do not support Layer 2 interfaces (family ethernet-switching).

For Layer 3 traffic, either use the default CoS settings or configure CoS on the physical interface (not on the logical unit). The switch uses the CoS applied on the physical Layer 3 interface for all logical Layer 3 interfaces configured on the physical Layer 3 interface.

The switch applies CoS to packets as they flow through the system:

- An interface has one or more classifiers of different types applied to it (configure this at the **[edit class-of-service interfaces]** hierarchy level). The classifier types are based on the portion of the incoming packet that the classifier examines (IEEE 802.1p code point bits or DSCP code point bits).
- When a packet enters an ingress port, the classifier assigns the packet to a forwarding class and a loss priority based on the code point bits of the packet (configure this at the **[edit class-of-service classifiers]** hierarchy level).
- The switch assigns each forwarding class to an output queue (configure this at the **[edit class-of-service forwarding-classes]** hierarchy level).
- Input (and output) policers meter traffic and can change the forwarding class and loss priority if a traffic flow exceeds its service level.
- A scheduler map is applied to each interface. When a packet exits an egress port, the scheduler map controls how it is treated (configure this at the **[edit class-of-service interfaces]** hierarchy level). A scheduler map assigns schedulers to forwarding classes (configure this at the **[edit class-of-service scheduler-maps]** hierarchy level).
- A scheduler defines how traffic is treated at the egress interface output queue (configure this at the **[edit class-of-service schedulers]** hierarchy level). You control the transmit rate, shaping rate, priority, and drop profile of each forwarding class by mapping schedulers to forwarding classes in scheduler maps, then applying scheduler maps to interfaces.

- A drop-profile defines how aggressively to drop packets that are mapped to a particular scheduler (configure this at the **[edit class-of-service drop-profiles]** hierarchy level).
- A rewrite rule takes effect as the packet leaves an interface that has a rewrite rule configured (configure this at the **[edit class-of-service rewrite-rules]** hierarchy level). The rewrite rule writes information to the packet (for example, a rewrite rule can re-mark the code point bits of outgoing traffic) according to the forwarding class and loss priority of the packet.

Figure 2 on page 17 is a high-level flow diagram of how packets from various sources enter switch interfaces, are classified at the ingress, and then scheduled (provided bandwidth) at the egress queues.

Figure 2: CoS Classifier, Queues, and Scheduler


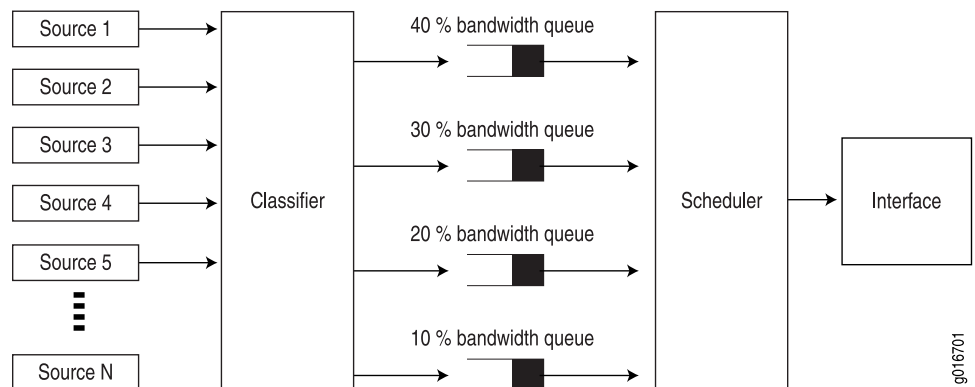


Figure 3 on page 17 shows the packet flow through the CoS components that you can configure.

Figure 3: Packet Flow Through Configurable CoS Components

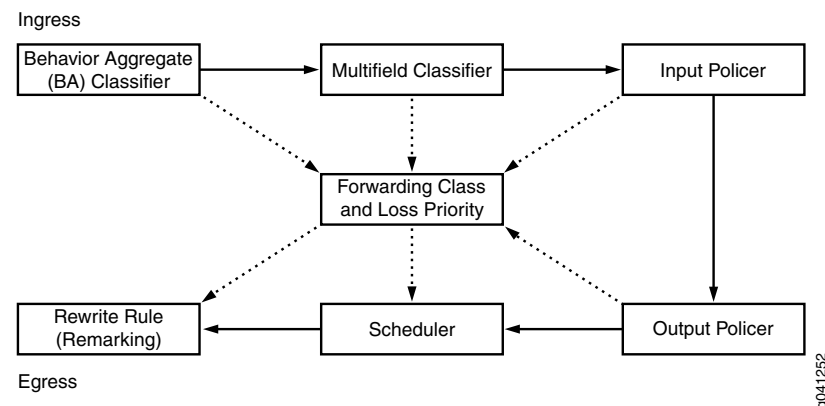

The middle box (Forwarding Class and Loss Priority) represents two values that you can use on ingress and egress interfaces. The system uses these values for classifying traffic on ingress interfaces and for rewrite rule re-marking on egress interfaces. Each outer box represents a process component. The components in the top row apply to incoming packets. The components in the bottom row apply to outgoing packets.

The solid-line arrows show the direction of packet flow from ingress to egress. The dotted-line arrows that point to the forwarding class and loss priority box indicate processes that configure (set) the forwarding class and loss priority. The dotted-line arrows that point away from the forwarding class and loss priority box indicate processes that use forwarding class and loss priority as input values on which to base actions.

For example, the BA classifier sets the forwarding class and loss priority of incoming packets, so the forwarding class and loss priority are outputs of the classifier and the arrow points away from the classifier. The scheduler receives the forwarding class and loss priority settings, and queues the outgoing packets based on those settings, so the arrow points toward the scheduler.

## Understanding Default CoS Settings

### Supported Platforms [QFX Series standalone switches](#)

If you do not configure CoS settings, Junos OS performs some CoS functions to ensure that traffic and protocol packets are forwarded with minimum delay when the network experiences congestion. Some default mappings are automatically applied to each logical interface that you configure.

You can display default CoS settings by issuing the **show class-of-service** operational mode command.

This topic describes the default configurations for the following CoS components:

- [Default Forwarding Classes and Queue Mapping on page 18](#)
- [Default Forwarding Class Sets \(Priority Groups\) on page 19](#)
- [Default Code-Point Aliases on page 19](#)
- [Default Classifiers on page 21](#)
- [Default Rewrite Rules on page 23](#)
- [Default Drop Profile on page 24](#)
- [Default Schedulers on page 24](#)
- [Default Scheduler Maps on page 25](#)

### Default Forwarding Classes and Queue Mapping

[Table 3 on page 18](#) shows the default forwarding class to queue mapping along with the packet drop attribute.

**Table 3: Default Forwarding Classes and Queue Mapping**

Default Forwarding Class	Description	Default Queue Mapping	Packet Drop Attribute
best-effort (be)	Best-effort traffic class (priority 0, IEEE 802.1p code point 000)	0	drop

**Table 3: Default Forwarding Classes and Queue Mapping (*continued*)**

Default Forwarding Class	Description	Default Queue Mapping	Packet Drop Attribute
fcoe	Guaranteed delivery for FCoE traffic (priority 3, IEEE 802.1p code point 011)	3	no-loss
no-loss	Guaranteed delivery for TCP no-loss traffic (priority 4, IEEE 802.1p code point 100)	4	no-loss
network-control (nc)	Network control traffic (priority 7, IEEE 802.1p code point 111)	7	drop

Unicast and multidestination (multicast, broadcast, and destination lookup fail) traffic use the same forwarding classes and output queues.

### Default Forwarding Class Sets (Priority Groups)

If you do not explicitly configure forwarding class sets, the system automatically creates a default forwarding class set that contains all of the forwarding classes on the switch. The system assigns 100 percent of the port output bandwidth to the default forwarding class set.

Ingress traffic is classified based on the default classifier settings. The forwarding classes (queues) in the default forwarding class set receive bandwidth based on the default scheduler settings. Forwarding classes that are not part of the default scheduler receive no bandwidth.

The default forwarding class set is transparent. It does not appear in the configuration and is used for Data Center Bridging Capability Exchange (DCBX) protocol advertisement.

### Default Code-Point Aliases

[Table 4 on page 19](#) shows the default mapping of code-point aliases to IEEE code points.

**Table 4: Default IEEE 802.1 Code-Point Aliases**

CoS Value Types	Mapping
be	000
be1	001
ef	010
ef1	011
af11	100

**Table 4: Default IEEE 802.1 Code-Point Aliases (*continued*)**

CoS Value Types	Mapping
af12	101
nc1	110
nc2	111

[Table 5 on page 20](#) shows the default mapping of code-point aliases to DSCP and DSCP IPv6 code points.

**Table 5: Default DSCP and DCSP IPv6 Code-Point Aliases**

CoS Value Types	Mapping
ef	101110
af11	001010
af12	001100
af13	001110
af21	010010
af22	010100
af23	010110
af31	011010
af32	011100
af33	011110
af41	100010
af42	100100
af43	100110
be	000000
cs1	001000
cs2	010000
cs3	011000



Table 5: Default DSCP and DCSP IPv6 Code-Point Aliases (*continued*)

CoS Value Types	Mapping
cs4	100000
cs5	101000
nc1	110000
nc2	111000

## Default Classifiers

The switch applies default IEEE 802.1 and DSCP classifiers to each interface that does not have explicitly configured classifiers. If you explicitly configure one type of classifier but not other types of classifiers, the system uses only the configured classifier and does not use default classifiers for other types of traffic. The switch applies the default MPLS EXP classifier to a logical interface if you enable the MPLS protocol family on that interface.

There are two different default IEEE 802.1 classifiers, a trusted classifier for ports in trunk mode, and an untrusted classifier for ports in access mode. [Table 6 on page 21](#) shows the default mapping of IEEE 802.1 code-point values to forwarding classes and loss priorities for ports in trunk mode.

Table 6: Default IEEE 802.1 Classifiers for Ports in Trunk Mode (Trusted Classifier)

Code Point	Forwarding Class	Loss Priority
be (000)	best-effort	low
be1 (001)	best-effort	low
ef (010)	best-effort	low
ef1 (011)	fcoe	low
af11 (100)	no-loss	low
af12 (101)	best-effort	low
nc1 (110)	network-control	low
nc2 (111)	network-control	low

[Table 7 on page 22](#) shows the default mapping of IEEE 802.1p code-point values to forwarding classes and loss priorities for ports in access mode (all incoming traffic is mapped to best-effort forwarding classes).

**Table 7: Default IEEE 802.1 Classifiers for Ports in Access Mode (Untrusted Classifier)**

Code Point	Forwarding Class	Loss Priority
000	best-effort	low
001	best-effort	low
010	best-effort	low
011	best-effort	low
100	best-effort	low
101	best-effort	low
110	best-effort	low
111	best-effort	low

[Table 8 on page 22](#) shows the default mapping of DSCP code-point values to forwarding classes and loss priorities for DSCP IP and DCSP IPv6.

**Table 8: Default DSCP IP and IPv6 Classifiers**

Code Point	Forwarding Class	Loss Priority
ef (101110)	best-effort	low
af11 (001010)	best-effort	low
af12 (001100)	best-effort	low
af13 (001110)	best-effort	low
af21 (010010)	best-effort	low
af22 (010100)	best-effort	low
af23 (010110)	best-effort	low
af31 (011010)	best-effort	low
af32 (011100)	best-effort	low
af33 (011110)	best-effort	low
af41 (100010)	best-effort	low
af42 (100100)	best-effort	low

**Table 8: Default DSCP IP and IPv6 Classifiers (*continued*)**

Code Point	Forwarding Class	Loss Priority
af43 (100110)	best-effort	low
be (000000)	best-effort	low
cs1 (001000)	best-effort	low
cs2 (010000)	best-effort	low
cs3 (011000)	best-effort	low
cs4 (100000)	best-effort	low
cs5 (101000)	best-effort	low
nc1 (110000)	network-control	low
nc2 (111000)	network-control	low

[Table 9 on page 23](#) shows the default mapping of MPLS EXP code-point values to forwarding classes and loss priorities.

**Table 9: Default EXP Classifiers**

Code Point	Forwarding Class	Loss Priority
000	best-effort	low
001	best-effort	high
010	expedited-forwarding	low
011	expedited-forwarding	high
100	assured-forwarding	low
101	assured-forwarding	high
110	network-control	low
111	network-control	high

## Default Rewrite Rules

There are no default rewrite rules. If you do not explicitly configure rewrite rules, the switch does not reclassify egress traffic.

## Default Drop Profile

Table 10 on page 24 shows the default drop profile configuration.

**Table 10: Default Drop Profile**

Fill Level	Drop Probability
100	100

## Default Schedulers

Table 11 on page 24 shows the default scheduler configuration.

**Table 11: Default Schedulers**

Default Scheduler and Queue Number	Transmit Rate (Guaranteed Minimum Bandwidth)	Rate Shaping (Maximum Bandwidth)	Excess Bandwidth Sharing	Priority	Buffer Size
best-effort forwarding class scheduler (queue 0)	15%	None	15%	low	15%
fcoe forwarding class scheduler (queue 3)	35%	None	35%	low	35%
no-loss forwarding class scheduler (queue 4)	35%	None	35%	low	35%
network-control forwarding class scheduler (queue 7)	15%	None	15%	low	15%



**NOTE:** By default, the minimum guaranteed bandwidth (transmit rate) also determines the amount of excess (extra) bandwidth that the queue can share. Extra bandwidth is allocated to queues in proportion to the transmit rate of each queue. You can use the `excess-rate` statement to override the default setting and configure the excess bandwidth percentage independently of the transmit rate.

By default, only the four default schedulers shown in Table 11 on page 24 have traffic mapped to them. Only the forwarding classes and queues associated with the default schedulers receive default bandwidth, based on the default scheduler transmit rate. (You can configure schedulers and forwarding classes to allocate bandwidth to other queues or to change the default bandwidth of a default queue.) If a forwarding class does not transport traffic, the bandwidth allocated to that forwarding class is available to other forwarding classes. Unicast and multdestination (multicast, broadcast, and destination lookup fail) traffic use the same forwarding classes and output queues.

Default scheduling is port scheduling.

Default hierarchical scheduling, known as enhanced transmission selection (ETS, defined in IEEE 802.1Qaz), allocates the total port bandwidth to the four default forwarding classes served by the four default schedulers, as defined by the four default schedulers. The result is the same as direct port scheduling. Configuring hierarchical port scheduling, however, enables you to group forwarding classes that carry similar types of traffic into forwarding class sets (also called priority groups), and to assign port bandwidth to each forwarding class set. The port bandwidth assigned to the forwarding class set is then assigned to the forwarding classes within the forwarding class set. This hierarchy enables you to control port bandwidth allocation with greater granularity, and enables hierarchical sharing of extra bandwidth to better utilize link bandwidth.

Default scheduling uses weighted round-robin (WRR) scheduling. Each queue receives a portion (weight) of the total available interface bandwidth. The scheduling weight is based on the transmit rate of the default scheduler for that queue. For example, queue 7 receives a default scheduling weight of 15 percent of the available bandwidth, and queue 4 receives a default scheduling weight of 35 percent of the available bandwidth. Queues are mapped to forwarding classes (for example, queue 7 is mapped to the network-control forwarding class and queue 4 is mapped to the no-loss forwarding class), so forwarding classes receive the default bandwidth for the queues to which they are mapped. Unused bandwidth is shared with other default queues.

If you want non-default (unconfigured) queues to forward traffic, you should explicitly map traffic to those queues (configure the forwarding classes and queue mapping) and create schedulers to allocate bandwidth to those queues. By default, queues 1, 2, 5, and 6 are unconfigured. Unconfigured queues have a default scheduling weight of 1 so that they can receive a small amount of bandwidth in case they need to forward traffic.

If you map traffic to an unconfigured queue and do not schedule port resources for the queue (configure a scheduler, map it to the forwarding class that is mapped to the queue, and apply the scheduler mapping to the port), the queue receives only the amount of excess bandwidth proportional to its default weight (1). The actual amount of bandwidth an unconfigured queue gets depends on how much bandwidth the other queues on the port are using.

If the other queues use less than their allocated amount of bandwidth, the unconfigured queues can share the unused bandwidth. Configured queues have higher priority for bandwidth than unconfigured queues, so if a configured queue needs more bandwidth, then less bandwidth is available for unconfigured queues. Unconfigured queues always receive a minimum amount of bandwidth based on their scheduling weight (1). If you map traffic to an unconfigured queue, to allocate bandwidth to that queue, configure a scheduler for the forwarding class that is mapped to the queue and apply it to the port.

## Default Scheduler Maps

Table 12 on page 25 shows the default mapping of forwarding classes to schedulers.

**Table 12: Default Scheduler Maps**

Forwarding Class	Scheduler
best-effort	Default BE scheduler

Table 12: Default Scheduler Maps (*continued*)

Forwarding Class	Scheduler
fcoe	Default FCoE scheduler
no-loss	No-loss scheduler
network-control	Default network-control scheduler

#### Related Documentation

- [Overview of Junos OS CoS on page 3](#)
- [CoS Support on QFX Series Switches, EX4600 Switches, and QFabric Systems](#)
- [Understanding Junos CoS Components on page 9](#)
- [Understanding Default CoS Scheduling and Classification on page 45](#)
- [Understanding CoS Classifiers on page 35](#)
- [Understanding Applying CoS Classifiers and Rewrite Rules to Interfaces on page 51](#)
- [Understanding CoS Code-Point Aliases on page 64](#)
- [Understanding CoS Forwarding Classes on page 67](#)
- [Understanding CoS Rewrite Rules on page 74](#)
- [Understanding CoS Port Schedulers on QFX Switches](#)
- [Understanding CoS WRED Drop Profiles](#)

## CoS Inputs and Outputs Overview

**Supported Platforms** EX4600, OCX1100, QFabric System, QFX Series standalone switches

Some CoS components map one set of values to another set of values. Each mapping contains one or more inputs and one or more outputs. When you configure a mapping, you set the outputs for a given set of inputs, as shown in [Table 13 on page 26](#).

Table 13: CoS Mappings—Inputs and Outputs

CoS Mappings	Inputs	Outputs	Comments
classifiers	code-points	forwarding-class, loss-priority	The map sets the forwarding class and packet loss priority (PLP) for a specific set of code points.
drop-profile-map	loss-priority, protocol	drop-profile	The map sets the drop profile for a specific PLP and protocol type.
rewrite-rules	loss-priority, forwarding-class	code-points	The map sets the code points for a specific forwarding class and PLP.
rewrite-value (Fibre Channel Interfaces)	forwarding-class	code-point	(Systems that support native Fibre Channel interfaces only) The map sets the code point for the forwarding class specified in the fixed classifier attached to the native Fibre Channel (NP_Port) interface.

- Related Documentation**
- [Understanding CoS Packet Flow on page 15](#)

## Overview of Policers

**Supported Platforms** [EX4600, OCX1100, QFabric System, QFX Series standalone switches](#)

A switch polices traffic by limiting the input or output transmission rate of a class of traffic according to user-defined criteria. Policing (or rate-limiting) traffic allows you to control the maximum rate of traffic sent or received on an interface and to provide multiple priority levels or classes of service.


- [Policer Overview on page 27](#)
- [Policer Types on page 28](#)
- [Policer Actions on page 29](#)
- [Policer Colors on page 29](#)
- [Filter-Specific Policers on page 30](#)
- [Suggested Naming Convention for Policers on page 30](#)
- [Policer Counters on page 30](#)
- [Policer Algorithms on page 31](#)
- [How Many Policers Are Supported? on page 31](#)
- [Policers Can Limit Egress Firewall Filters on page 31](#)

## Policer Overview

You use policers to apply limits to traffic flow and set consequences for packets that exceed these limits—usually applying a higher loss priority—so that if packets encounter downstream congestion, they can be discarded first. Policers apply only to unicast packets.

Policers provide two functions: metering and marking. A policer meters (measures) each packet against traffic rates and burst sizes that you configure. It then passes the packet and the metering result to the marker, which assigns a packet loss priority that corresponds to the metering result. [Figure 4 on page 27](#) illustrates this process.

**Figure 4: Flow of Tricolor Marking Policer Operation**

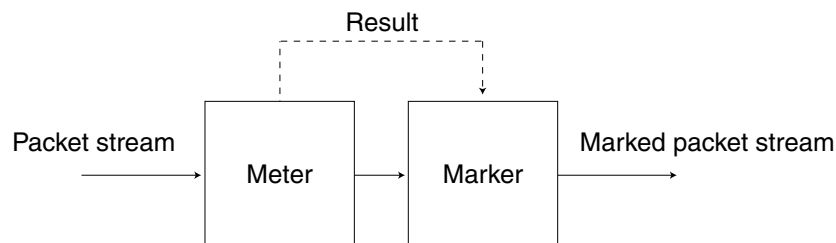

After you name and configure a policer, you can use it by specifying it as an action in one or more firewall filters.

g017049

## Policer Types

A switch supports three types of policers:

- Single-rate two-color marker—A two-color policer (or “policer” when used without qualification) meters the traffic stream and classifies packets into two categories of packet loss priority (PLP) according to a configured bandwidth and burst-size limit. You can mark packets that exceed the bandwidth and burst-size limit with a specified PLP or simply discard them.

You can specify this type of policer in an ingress or egress firewall.



**NOTE:** A two-color policer is most useful for metering traffic at the port (physical interface) level.

- Single-rate three-color marker—This type of policer is defined in RFC 2697, *A Single Rate Three Color Marker*, as part of an assured forwarding (AF) per-hop-behavior (PHB) classification system for a Differentiated Services (DiffServ) environment. This type of policer meters traffic based on one rate—the configured committed information rate (CIR) as well as the committed burst size (CBS) and the excess burst size (EBS). The CIR specifies the average rate at which bits are admitted to the switch. The CBS specifies the usual burst size in bytes and the EBS specifies the maximum burst size in bytes. The EBS must be greater than or equal to the CBS, and neither can be 0.

You can specify this type of policer in an ingress or egress firewall.



**NOTE:** A single-rate three-color marker (TCM) is most useful when a service is structured according to packet length and not peak arrival rate.

- Two-rate three-color marker—This type of policer is defined in RFC 2698, *A Two Rate Three Color Marker*, as part of an assured forwarding per-hop-behavior classification system for a Differentiated Services environment. This type of policer meters traffic based on two rates—the CIR and peak information rate (PIR) along with their associated burst sizes, the CBS and peak burst size (PBS). The PIR specifies the maximum rate at which bits are admitted to the network and must be greater than or equal to the CIR.

You can specify this type of policer in an ingress or egress firewall.



**NOTE:** A two-rate three-color policer is most useful when a service is structured according to arrival rates and not necessarily packet length.

See [Table 14 on page 29](#) for information about how metering results are applied for each of these policer types.



## Policer Actions

Policer actions are implicit or explicit and vary by policer type. *Implicit* means that Junos OS assigns the loss priority automatically. [Table 14 on page 29](#) describes the policer actions.

**Table 14: Policer Actions**

Policer	Marking	Implicit Action	Configurable Action
Single-rate two-color	Green (conforming)	Assign low loss priority	None
	Red (nonconforming)	None	Discard
Single-rate three-color	Green (conforming)	Assign low loss priority	None
	Yellow (above the CIR and CBS)	Assign medium-high loss priority	None
	Red (above the EBS)	Assign high loss priority	Discard
Two-rate three-color	Green (conforming)	Assign low loss priority	None
	Yellow (above the CIR and CBS)	Assign medium-high loss priority	None
	Red (above the PIR and PBS)	Assign high loss priority	Discard



**NOTE:** If you specify a policer in an egress firewall filter, the only supported action is discard.

## Policer Colors

Single-rate and two-rate three-color policers can operate in two modes:

- **Color-blind**—In color-blind mode, the three-color policer assumes that all packets examined have not been previously marked or metered. In other words, the three-color policer is “blind” to any previous coloring a packet might have had.
- **Color-aware**—In color-aware mode, the three-color policer assumes that all packets examined have been previously marked or metered. In other words, the three-color policer is “aware” of the previous coloring a packet might have had. In color-aware mode, the three-color policer can increase the PLP of a packet but cannot decrease it. For example, if a color-aware three-color policer meters a packet with a medium PLP marking, it can raise the PLP level to high but cannot reduce the PLP level to low.

## Filter-Specific Policers

You can configure policers to be filter-specific, which means that Junos OS creates only one policer instance regardless of how many times the policer is referenced. When you do this on some QFX switches, rate limiting is applied in aggregate, so if you configure a policer to discard traffic that exceeds 1 Gbps and reference that policer in three different terms, the total bandwidth allowed by the filter is 1 Gbps. However, the behavior of a filter-specific policer is affected by how the firewall filter terms that reference the policer are stored in TCAM. If you create a filter-specific policer and reference it in multiple firewall filter terms, the policer allows more traffic than expected if the terms are stored in different TCAM slices. For example, if you configure a policer to discard traffic that exceeds 1 Gbps and reference that policer in three different terms that are stored in three separate memory slices, the total bandwidth allowed by the filter is 3 Gbps, not 1 Gbps. (This behavior does not occur in QFX10000 switches.)

To prevent this unexpected behavior from occurring, use the information about TCAM slices presented in *Planning the Number of Firewall Filters to Create* to organize your configuration file so that all the firewall filter terms that reference a given filter-specific policer are stored in the same TCAM slice.

## Suggested Naming Convention for Policers

We recommend that you use the naming convention ***policertypeTCM#-color type*** when configuring three-color policers and ***policer#*** when configuring two-color policers. TCM stands for three-color marker. Because policers can be numerous and must be applied correctly to work, a simple naming convention makes it easier to apply the policers properly. For example, the first single-rate, color-aware three-color policer configured would be named ***srTCM1-ca***. The second two-rate, color-blind three-color configured would be named ***trTCM2-cb***. The elements of this naming convention are explained below:

- sr (single-rate)
- tr (two-rate)
- TCM (tricolor marking)
- 1 or 2 (number of marker)
- ca (color-aware)
- cb (color-blind)

## Policer Counters

On some QFX switches, each policer that you configure includes an implicit counter that counts the number of packets that exceed the rate limits that are specified for the policer. If you use the same policer in multiple terms—either within the same filter or in different filters—the implicit counter counts all the packets that are policed in all of these terms and provides the total amount. (This does not apply to QFX10000 switches.) If you want to obtain separate packet counts for each term on an affected switch, use these options:

- Configure a unique policer for each term.

- Configure only one policer, but use a unique, explicit counter in each term.

## Policer Algorithms

Policing uses the *token-bucket algorithm*, which enforces a limit on average bandwidth while allowing bursts up to a specified maximum value. It offers more flexibility than the *leaky bucket algorithm* in allowing a certain amount of bursty traffic before it starts discarding packets.



**NOTE:** In an environment of light bursty traffic, QFX5200 might not replicate all multicast packets to two or more downstream interfaces. This occurs only at a line rate burst—if traffic is consistent, the issue does not occur. In addition, the issue occurs only when packet size increases beyond 6k in a one gigabit traffic flow.

## How Many Policers Are Supported?

QFX10000 switches support 8K policers (all policer types). QFX5100 and QFX5200 switches support 1535 ingress policers and 1024 egress policers (assuming one policer per firewall filter term).

QFX3500 and QFX3600 standalone switches and QFabric Node devices support the following numbers of policers (assuming one policer per firewall filter term):

- Two-color policers used in ingress firewall filters: 767
- Three-color policers used in ingress firewall filters: 767
- Two-color policers used in egress firewall filters: 1022
- Three-color policers used in egress firewall filters: 512

## Policers Can Limit Egress Firewall Filters

On some switches, the number of egress policers that you configure can affect the total number of allowed egress firewall filters. (This issue does not affect QFX10000 switches.) On the affected switches, every policer has two implicit counters that consume two entries in a 1024-entry TCAM that is used for counters, including counters that are configured as action modifiers in firewall filter terms. (Policers consume two entries because one is used for green packets and one is used for nongreen packets regardless of policer type.) If the TCAM becomes full, you cannot commit any more egress firewall filters that have terms with counters. For example, if you configure and commit 512 egress policers (two-color, three-color, or a combination of both policer types), all of the memory entries for counters are used up. If later in your configuration file you insert additional egress firewall filters with terms that also include counters, *none* of the terms in those filters are committed because there is no available memory space for the counters.

Here are some additional examples:

- Assume that you configure egress filters that include a total of 512 policers and no counters. Later in your configuration file you include another egress filter with 10 terms,

1 of which has a counter action modifier. None of the terms in this filter are committed because there is not enough TCAM space for the counter.

- Assume that you configure egress filters that include a total of 500 policers, so 1000 TCAM entries are occupied. Later in your configuration file you include the following two egress filters:
  - Filter A with 20 terms and 20 counters. All the terms in this filter are committed because there is enough TCAM space for all the counters.
  - Filter B comes after Filter A and has five terms and five counters. *None* of the terms in this filter are committed because there is not enough memory space for *all* the counters. (Five TCAM entries are required but only four are available.)

You can prevent this problem by ensuring that egress firewall filter terms with counter actions are placed earlier in your configuration file than terms that include policers. In this circumstance, Junos OS commits policers even if there is not enough TCAM space for the implicit counters. For example, assume the following:

- You have 1024 egress firewall filter terms with counter actions.
- Later in your configuration file you have an egress filter with 10 terms. None of the terms have counters but one has a policer action modifier.

You can successfully commit the filter with 10 terms even though there is not enough TCAM space for the implicit counters of the policer. The policer is committed without the counters.

**Related  
Documentation**

- *Understanding Color-Blind Mode for Single-Rate Tricolor Marking*
- *Understanding Color-Blind Mode for Two-Rate Tricolor Marking*
- *Understanding Color-Aware Mode for Single-Rate Tricolor Marking*
- *Understanding Color-Aware Mode for Two-Rate Tricolor Marking*
- *Configuring Two-Color and Three-Color Policers to Control Traffic Rates*

## PART 2

# Classifying and Rewriting Traffic

- [Using Classifiers, Forwarding Classes, and Rewrite Rules on page 35](#)



## CHAPTER 2

# Using Classifiers, Forwarding Classes, and Rewrite Rules

- [Understanding CoS Classifiers on page 35](#)
- [Defining CoS BA Classifiers \(DSCP, DSCP IPv6, IEEE 802.1p\) on page 41](#)
- [Example: Configuring Classifiers on page 43](#)
- [Understanding Default CoS Scheduling and Classification on page 45](#)
- [Understanding Applying CoS Classifiers and Rewrite Rules to Interfaces on page 51](#)
- [Understanding CoS Code-Point Aliases on page 64](#)
- [Defining CoS Code-Point Aliases on page 67](#)
- [Understanding CoS Forwarding Classes on page 67](#)
- [Defining CoS Forwarding Classes on page 71](#)
- [Example: Configuring Forwarding Classes on page 72](#)
- [Understanding CoS Rewrite Rules on page 74](#)
- [Defining CoS Rewrite Rules on page 77](#)
- [Troubleshooting an Unexpected Rewrite Value on page 79](#)

## Understanding CoS Classifiers

---

**Supported Platforms**   [QFX Series standalone switches](#)

Packet classification maps incoming packets to a particular class-of-service (CoS) servicing level. Classifiers map packets to a forwarding class and a loss priority, and they assign packets to output queues based on the forwarding class. There are three general types of classifiers:

- Behavior aggregate (BA) classifiers—DSCP and DSCP IPv6 classify IP and IPv6 traffic, EXP classifies MPLS traffic, and IEEE 802.1p classifies all other traffic. (Although this topic covers EXP classifiers, fsee *Understanding CoS MPLS EXP Classifiers and Rewrite Rules* for more details. EXP classifiers are applied only on **family mpls** interfaces.)
- Fixed classifiers—Fixed classifiers classify all ingress traffic on a physical interface into one forwarding class, regardless of the CoS bits in the packet header.
- Multifield (MF) classifiers—MF classifiers classify traffic based on more than one field in the packet header and take precedence over BA and fixed classifiers.

Classifiers assign incoming unicast and multdestination (multicast, broadcast, and destination lookup fail) traffic to forwarding classes, so that different classes of traffic can receive different treatment. Classification is based on CoS bits, DSCP bits, EXP bits, a forwarding class (fixed classifier), or packet headers (multifield classifiers). Each classifier assigns all incoming traffic that matches the classifier configuration to a particular forwarding class. A classifier can assign both unicast and multdestination traffic to the same forwarding class.

- [Interfaces and Output Queues on page 36](#)
- [Classifier Support by Type on page 37](#)
- [Behavior Aggregate Classifiers on page 37](#)
- [Fixed Classifiers on Ethernet Interfaces on page 40](#)
- [Multifield Classifiers on page 40](#)
- [MPLS EXP Classifiers on page 41](#)
- [Packet Classification for IRB Interfaces on page 41](#)

## Interfaces and Output Queues

On Gigabit Ethernet interfaces, 10-Gigabit Ethernet interfaces, and link aggregation (LAG) interfaces, you can apply classifiers to Layer 2 logical interface unit 0 (but not to other logical interfaces), and to Layer 3 logical interfaces (you can apply different classifiers to different Layer 3 logical interfaces). You cannot apply classifiers to physical interfaces. “[Understanding Applying CoS Classifiers and Rewrite Rules to Interfaces](#)” on page 51 describes the interaction between classifiers and interfaces in greater detail.

You can configure both a BA classifier and an MF classifier on an interface. If you do this, the BA classification is performed first, and then the MF classification is performed. If the two classification results conflict, the MF classification result overrides the BA classification result.

You cannot configure a fixed classifier and a BA classifier on the same interface.

You can configure either a DSCP or a DSCP IPv6 classifier and also an IEEE 802.1p classifier on the same interface. IP traffic uses the DSCP or DSCP IPv6 classifier. If you configure



an interface as **family mpls**, then the interface uses the default MPLS EXP classifier. If you configure an MPLS EXP classifier, then all MPLS traffic on the switch uses the global EXP classifier. All other traffic uses the IEEE classifier. You can configure up to 64 EXP classifiers with up to 8 entries per classifier (one entry for each forwarding class) and apply them to logical interfaces. After you configure an MPLS EXP classifier, you can configure it as the global EXP classifier by including the EXP classifier at the **[edit class-of-service system-defaults classifiers exp]** hierarchy level. All switch interfaces that are configured as **family mpls** use either the default EXP classifier or the global EXP classifier specified in this configuration statement to classify MPLS traffic.

You can apply classifiers to one or more interfaces.

## Classifier Support by Type

You can configure enough classifiers to handle most, if not all, network scenarios. [Table 15 on page 37](#) shows how many of each type of classifiers you can configure, and how many entries you can configure per classifier.

**Table 15: Classifier Support by Classifier Type**

Classifier Type	Default Classifier Name	Maximum Number of Classifiers	Maximum Number of Entries per Classifier
IEEE 802.1p (Layer 2)	ieee8021p-default (for ports in trunk mode)	64	16
	ieee8021p-untrust (for ports in access mode)		
DSCP (Layer 3)	dscp-default	64	64
DSCP IPv6 (Layer 3)	dscp-ipv6-default	64	64
EXP (MPLS)	exp-default	64	8
Fixed	There is no default fixed classifier	8	16

The number of fixed classifiers supported (8) equals the number of supported forwarding classes (fixed classifiers assign all incoming traffic on an interface to one forwarding class).

## Behavior Aggregate Classifiers

Behavior aggregate classifiers map a class-of-service (CoS) value to a forwarding class and loss priority. The forwarding class determines the output queue. A scheduler uses the loss priority to control packet discard during periods of congestion by associating different drop profiles with different loss priorities.

The switch supports three types of BA classifiers:

- Differentiated Services code point (DSCP) for IP DiffServ (IP and IPv6)

- IEEE 802.1p CoS bits
- MPLS EXP (applies only to interfaces configured as **family mpls**)

BA classifiers are based on fixed-length fields, which makes them computationally more efficient than MF classifiers. Therefore, core devices, which handle high traffic volumes, are normally configured to perform BA classification.

### Default Behavior Aggregate Classification

Juniper Networks Junos OS automatically assigns implicit default classifiers to all logical interfaces based on the type of interface. [Table 16 on page 38](#) lists different types of interfaces and the corresponding implicit default BA classifiers.

**Table 16: Default BA Classification**

Type of Interface	Default BA Classification
Layer 2 interface in trunk mode	<b>ieee8021p-default</b>
Layer 2 interface in access mode	<b>ieee8021p-untrusted</b>
Layer 3 interface	<b>dscp-default</b> <b>dscp-ipv6-default</b>
MPLS interface	<b>exp-default</b>



**NOTE:** Default BA classifiers assign traffic only to the best-effort, **coae**, **no-loss**, and **network-control** forwarding classes.

When you explicitly associate a classifier with a logical interface, you override the default classifier with the explicit classifier.



**NOTE:** You can apply only one DSCP and one IEEE 802.1p classifier to a Layer 2 interface. If both types of classifiers are present, DSCP classifiers take precedence over IEEE 802.1p classifiers. If you configure an EXP classifier and apply it on interfaces configured as **family mpls**, then MPLS traffic uses the EXP classifier on those interfaces.

### Importing a Classifier

You can use any existing classifier, including the default classifiers, as the basis for defining a new classifier. You accomplish this using the **import** statement.

The imported classifier is used as a template and is not modified. The modifications you make become part of a new classifier (and a new template) identified by the name of the new classifier. Whenever you commit a configuration that assigns a new forwarding class-name and loss-priority value to a code-point alias or set of bits, it replaces the old

entry in the new classifier template. As a result, you must explicitly specify every CoS value in every packet classification that requires modification.

### PFC Priorities

The eight IEEE 802.1p code points correspond to the eight priorities that priority-based flow control (PFC) uses to differentiate traffic classes for lossless transport. When you map a forwarding class (which maps to an output queue) to an IEEE 802.1p CoS value, the IEEE 802.1p CoS value identifies the PFC priority.

Although you can map a priority to any output queue (by mapping the IEEE 802.1p code point value to a forwarding class), we recommend that the priority and the forwarding class match in a one-to-one correspondence. For example, priority 0 is assigned to queue 0, priority 1 is assigned to queue 1, and so on, as shown in [Table 17 on page 39](#). A one-to-one correspondence of queue and priority numbers makes it easier to configure and maintain the mapping of forwarding classes to priorities and queues.

**Table 17: Default IEEE 802.1p Code Point to PFC Priority, Output Queue, and Forwarding Class Mapping**

IEEE 802.1p Code Point	PFC Priority	Output Queue	Forwarding Class and Packet Drop Attribute
000	0	0	best-effort (drop)
001	1	1	best-effort (drop)
010	2	2	best-effort (drop)
011	3	3	fcoe (no-loss)
100	4	4	no-loss (no-loss)
101	5	5	best-effort (drop)
110	6	6	network-control (drop)
111	7	7	network-control (drop)



**NOTE:** By convention, deployments with converged server access typically use IEEE 802.1p priority 3 (011) for FCoE traffic. The default mapping of the fcoe forwarding class is to queue 3. Apply priority-based flow control (PFC) to the entire FCoE data path to configure the end-to-end lossless behavior that FCoE requires. We recommend that you use priority 3 for FCoE traffic unless your network architecture requires that you use a different priority.

## Fixed Classifiers on Ethernet Interfaces

Fixed classifiers map all traffic on a physical interface to a forwarding class and a loss priority (as opposed to BA classifiers, which map traffic into multiple different forwarding classes based on the IEEE 802.1p CoS bits field value in the VLAN header or the DSCP field value in the type-of-service bits in the packet IP header). Each forwarding class maps to an output queue. However, when you use a fixed classifier, regardless of the CoS or DSCP bits, all Incoming traffic is classified into the forwarding class specified in the fixed classifier. A scheduler uses the loss priority to control packet discard during periods of congestion by associating different drop profiles with different loss priorities.

You cannot configure a fixed classifier and a DSCP or IEEE 802.1p BA classifier on the same interface. If you configure a fixed classifier on an interface, you cannot configure a DSCP or an IEEE classifier on that interface. If you configure a DSCP classifier, an IEEE classifier, or both classifiers on an interface, you cannot configure a fixed classifier on that interface.



**NOTE:** You can configure both an EXP classifier for MPLS traffic and a fixed classifier on the same interface. When both an EXP classifier and a fixed classifier are applied to an interface, MPLS traffic on interfaces configured as `family mpls` uses the EXP classifier, and all other traffic uses the fixed classifier.

To switch from a fixed classifier to a BA classifier, or to switch from a BA classifier to a fixed classifier, deactivate the existing classifier attachment on the interface, and then attach the new classifier to the interface.



**NOTE:** If you configure a fixed classifier that classifies all incoming traffic into the `fcoe` forwarding class (or any forwarding class designed to handle FCoE traffic), you must ensure that all traffic that enters the interface is FCoE traffic and is tagged with the FCoE IEEE 802.1p code point (priority).

## Multifield Classifiers

Multifield classifiers examine multiple fields in a packet such as source and destination addresses and source and destination port numbers of the packet. With MF classifiers, you set the forwarding class and loss priority of a packet based on firewall filter rules.

MF classification is normally performed at the network edge because of the general lack of DiffServ code point (DSCP) support in end-user applications. On a switch at the edge of a network, an MF classifier provides the filtering functionality that scans through a variety of packet fields to determine the forwarding class for a packet. Typically, a classifier performs matching operations on the selected fields against a configured value.

## MPLS EXP Classifiers

You can configure up to 64 EXP classifiers for MPLS traffic and apply them to **family mpls** interfaces. On **family mpls** interfaces, if a fixed classifier is present on the interface, the EXP classifier overrides the fixed classifier for MPLS traffic only.

You can use the default MPLS EXP classifier or you can configure an EXP classifier and apply it globally to all interfaces that are configured as **family mpls** by including it in the **[edit class-of-service system-defaults classifiers exp]** hierarchy level. On **family mpls** interfaces, if a fixed classifier is present on the interface, the EXP classifier overrides the fixed classifier for MPLS traffic only.

Because the EXP classifier is global, you cannot configure some ports to use a fixed IEEE 802.1p classifier for MPLS traffic on some interfaces and the global EXP classifier for MPLS traffic on other interfaces. When you configure a global EXP classifier, all MPLS traffic on all interfaces uses the EXP classifier, even interfaces that have a fixed classifier.

For details about EXP classifiers, see *Understanding CoS MPLS EXP Classifiers and Rewrite Rules*. EXP classifiers are applied only on **family mpls** interfaces.)

## Packet Classification for IRB Interfaces

You cannot apply classifiers directly to integrated routing and bridging (IRB) interfaces because the members of IRBs are VLANs, not ports. However, you can apply classifiers to the VLAN port members of an IRB interface. You can also apply MF classifiers to IRBs.

### Related Documentation

- [Understanding CoS MPLS EXP Classifiers and Rewrite Rules](#)
- [Understanding CoS Packet Flow on page 15](#)
- [Understanding Default CoS Settings on page 18](#)
- [Understanding Applying CoS Classifiers and Rewrite Rules to Interfaces on page 51](#)
- [Example: Configuring Classifiers on page 43](#)
- [Configuring a Global MPLS EXP Classifier](#)

---

## Defining CoS BA Classifiers (DSCP, DSCP IPv6, IEEE 802.1p)

**Supported Platforms**   [QFX Series standalone switches](#)

Packet classification associates incoming packets with a particular CoS servicing level. Behavior aggregate (BA) classifiers examine the Differentiated Services code point (DSCP or DSCP IPv6) value, the IEEE 802.1p CoS value, or the MPLS EXP value in the packet header to determine the CoS settings applied to the packet. (See *Configuring a Global MPLS EXP Classifier* to learn how to define EXP classifiers for MPLS traffic.) BA classifiers allow you to set the forwarding class and loss priority of a packet based on the incoming CoS value.

Unicast and multdestination (multicast, broadcast, and destination lookup fail) traffic use the same classifiers and forwarding classes.

To configure a DSCP, DSCP IPv6, or IEEE 802.1p BA classifier using the CLI:

1. Create a BA classifier:

- To create a DSCP, DSCP IPv6, or IEEE 802.1p BA classifier based on the default classifier, import the default DSCP, DSCP IPv6, or IEEE 802.1p classifier and associate it with a forwarding class, a loss priority, and a code point:

```
[edit class-of-service classifiers]
user@switch# set (dscp | dscp-ipv6 | ieee-802.1) classifier-name import default
forwarding-class forwarding-class-name loss-priority level code-points [aliases]
[bit-patterns]
```

- To create a BA classifier that is not based on the default classifier, create a DSCP, DSCP IPv6, or IEEE 802.1p classifier and associate it with a forwarding class, a loss priority, and a code point:

```
[edit class-of-service classifiers]
user@switch# set (dscp | dscp-ipv6 | ieee-802.1) classifier-name forwarding-class
forwarding-class-name loss-priority level code-points [aliases] [bit-patterns]
```

2. Apply the classifier to a specific Ethernet interface or to all Ethernet interfaces on the switch.

- To apply the classifier to a specific interface:

```
[edit class-of-service interfaces]
user@switch# set interface-name unit unit classifiers (dscp | dscp-ipv6 | ieee-802.1)
classifier-name
```

- To apply the classifier to all Ethernet interfaces on the switch, use wildcards for the interface name and the logical interface (unit) number:

```
[edit class-of-service interfaces]
user@switch# set xe-* unit * classifiers (dscp | dscp-ipv6 | ieee-802.1) classifier-name
```

**Related Documentation**

- [Example: Configuring CoS Hierarchical Port Scheduling \(ETS\)](#)
- [Example: Configuring Classifiers on page 43](#)
- [Configuring a Global MPLS EXP Classifier](#)
- [Monitoring CoS Classifiers on page 267](#)
- [Understanding CoS Classifiers on page 35](#)
- [Understanding CoS MPLS EXP Classifiers and Rewrite Rules](#)
- [Understanding Applying CoS Classifiers and Rewrite Rules to Interfaces on page 51](#)

## Example: Configuring Classifiers

**Supported Platforms** [QFX Series standalone switches](#)

Packet classification associates incoming packets with a particular CoS servicing level. Classifiers associate packets with a forwarding class and loss priority and assign packets to output queues based on the associated forwarding class. You apply classifiers to ingress interfaces.

- [Requirements on page 43](#)
- [Overview on page 43](#)
- [Configuring Classifiers on page 44](#)
- [Verification on page 44](#)

### Requirements

This example uses the following hardware and software components:

- One switch.
- Junos OS Release 15.1X53-D10 or later for the QFX Series.

### Overview

Junos OS supports three general types of classifiers:

- Behavior aggregate or CoS value traffic classifiers—Examine the CoS value in the packet header. The value in this single field determines the CoS settings applied to the packet. BA classifiers allow you to set the forwarding class and loss priority of a packet based on the Differentiated Services code point (DSCP or DSCP IPv6) value, IEEE 802.1p value, or MPLS EXP value. (EXP classifiers can be applied only to **family mpls** interfaces.)
- Fixed classifiers. Fixed classifiers classify all ingress traffic on a physical interface into one forwarding class, regardless of the CoS bits in the VLAN header or the DSCP bits in the IP packet header.
- Multifield traffic classifiers—Examine multiple fields in the packet, such as source and destination addresses and source and destination port numbers of the packet. With multifield classifiers, you set the forwarding class and loss priority of a packet based on firewall filter rules.

This example describes how to configure a BA classifier called **ba-classifier** as the default IEEE 802.1 mapping of incoming traffic to forwarding classes, and apply it to ingress interface **xe-0/0/10**. The BA classifier assigns loss priorities, as shown in [Table 18 on page 44](#), to incoming packets in the four default forwarding classes. You can adapt the example to DSCP traffic by specifying a DSCP classifier instead of an IEEE classifier, and by applying DSCP bits instead of CoS bits.

To set multifield classifiers, use firewall filter rules.

Table 18: ba-classifier Loss Priority Assignments

Forwarding Class	CoS Traffic Type	ba-classifier Loss Priority to IEEE 802.1p Code Point Mapping	Packet Drop Attribute
<b>be</b>	Best-effort traffic	Low loss priority code point: <b>000</b>	drop
<b>fcoe</b>	Guaranteed delivery for Fibre Channel over Ethernet (FCoE) traffic	Low loss priority code point: <b>011</b>	no-loss
<b>no-loss</b>	Guaranteed delivery for TCP traffic	Low loss priority code point: <b>100</b>	no-loss
<b>nc</b>	Network-control traffic	Low loss priority code point: <b>110</b>	drop

## Configuring Classifiers

To configure an IEEE 802.1 BA classifier named **ba-classifier** as the default IEEE 802.1 classifier:

- Associate code point **000** with forwarding class **be** and loss priority **low**:  

```
[edit class-of-service classifiers]
user@switch# set ieee-802.1 ba-classifier import default forwarding-class be loss-priority low code-points 000
```
- Associate code point **011** with forwarding class **fcoe** and loss priority **low**:  

```
[edit class-of-service classifiers]
user@switch# set ieee-802.1 ba-classifier forwarding-class fcoe loss-priority low code-points 011
```
- Associate code point **100** with forwarding class **no-loss** and loss priority **low**:  

```
[edit class-of-service classifiers]
user@switch# set ieee-802.1 ba-classifier forwarding-class no-loss loss-priority low code-points 100
```
- Associate code point **110** with forwarding class **nc** and loss priority **low**:  

```
[edit class-of-service classifiers]
user@switch# set ieee-802.1 ba-classifier forwarding-class nc loss-priority low code-points 110
```
- Apply the classifier to ingress interface **xe-0/0/10**:  

```
[edit class-of-service interfaces]
user@switch# set xe-0/0/10 unit 0 classifiers ieee-802.1 ba-classifier
```

## Verification

To verify the classifier configuration, perform these tasks:

- [Verifying the Classifier Configuration on page 45](#)
- [Verifying the Ingress Interface Configuration on page 45](#)



### Verifying the Classifier Configuration

**Purpose** Verify that you configured the classifier with the correct forwarding classes, loss priorities, and code points.

**Action** List the classifier configuration using the operational mode command **show configuration class-of-service classifiers ieee-802.1 ba-classifier**:

```
user@switch> show configuration class-of-service classifiers ieee-802.1 ba-classifier
  forwarding-class be {
    loss-priority low code-points 000;
  }
  forwarding-class fcoe {
    loss-priority low code-points 011;
  }
  forwarding-class no-loss {
    loss-priority low code-points 100;
  }
  forwarding-class nc
    loss-priority low code-points 110;
  }
```

### Verifying the Ingress Interface Configuration

**Purpose** Verify that the classifier **ba-classifier** is attached to ingress interface **xe-0/0/10**.

**Action** List the ingress interface using the operational mode command **show configuration class-of-service interfaces xe-0/0/10**:

```
user@switch> show configuration class-of-service interfaces xe-0/0/10
congestion-notification-profile fcoe-cnp;
unit 0 {
  classifiers {
    ieee-802.1 ba-classifier;
  }
}
```

- Related Documentation**
- [Defining CoS BA Classifiers \(DSCP, DSCP IPv6, IEEE 802.1p\) on page 41](#)
  - [Configuring a Global MPLS EXP Classifier](#)
  - [Configuring Rewrite Rules for MPLS EXP Classifiers](#)
  - [Monitoring CoS Classifiers on page 267](#)
  - [Understanding CoS Classifiers on page 35](#)
  - [Understanding Applying CoS Classifiers and Rewrite Rules to Interfaces on page 51](#)

## Understanding Default CoS Scheduling and Classification

**Supported Platforms** [QFX Series standalone switches](#)

If you do not explicitly configure classifiers and apply them to interfaces, the switch uses the default classifier to group ingress traffic into forwarding classes. If you do not configure scheduling on an interface, the switch uses the default schedulers to provide egress port resources for traffic. Default classification maps all traffic into the default forwarding classes (best-effort, fcoe, no-loss, and network-control). Each default forwarding class has a default scheduler, so traffic mapped to each default forwarding class receives port bandwidth, prioritization, and packet drop characteristics.

The switch supports direct port scheduling and enhanced transmission selection (ETS), also known as hierarchical port scheduling.

Hierarchical scheduling groups IEEE 802.1p priorities (IEEE 802.1p code points, which classifiers map to forwarding classes, which in turn are mapped to output queues) into priority groups (forwarding class sets). If you use only the default traffic scheduling and classification, the switch automatically creates a default priority group that contains all of the priorities (which are mapped to forwarding classes and output queues), and assigns 100 percent of the port output bandwidth to that priority group. The forwarding classes (queues) in the default forwarding class set receive bandwidth based on the default classifier settings. The default priority group is transparent. It does not appear in the configuration and is used for Data Center Bridging Capability Exchange (DCBX) protocol advertisement.



.....

**NOTE:** If you explicitly configure ETS by configuring one or more priority groups on an interface, any forwarding class that is not assigned to a priority group on that interface receives *no bandwidth*. This means that if you configure hierarchical scheduling on an interface, every forwarding class (priority) that you want to forward traffic on that interface must belong to a forwarding class set (priority group). ETS is not supported on QFX5200.

.....

This topic describes:

- [Default Classification on page 46](#)
- [Default Scheduling on page 49](#)
- [Default DCBX Advertisement on page 51](#)
- [Default Scheduling and Classification Summary on page 51](#)

## Default Classification

The default classifiers assign ingress traffic to default forwarding classes and loss priorities. The switch applies default IEEE 802.1, DSCP, and DSCP IPv6 classifiers to each interface that does not have explicitly configured classifiers. If you do not configure and apply EXP classifiers for MPLS traffic to logical interfaces, MPLS traffic on interfaces configured as **family mpls** uses the IEEE classifier.

If you explicitly configure one type of classifier but not other types of classifiers, the system uses only the configured classifier and does not use default classifiers for other types of traffic. There are two default IEEE 802.1 classifiers, a trusted classifier for ports that are in trunk mode, and an untrusted classifier for ports that are in access mode.

Table 19 on page 47 shows the default mapping of IEEE 802.1 code-point values to forwarding classes and loss priorities for ports in trunk mode.

**Table 19: Default IEEE 802.1 Classifiers for Ports in Trunk Mode (Trusted Classifier)**

Code Point	Forwarding Class	Loss Priority
be (000)	best-effort	low
be1 (001)	best-effort	low
ef (010)	best-effort	low
ef1 (011)	fcoe	low
af11 (100)	no-loss	low
af12 (101)	best-effort	low
nc1 (110)	network-control	low
nc2 (111)	network-control	low

Table 20 on page 47 shows the default mapping of IEEE 802.1p code-point values to forwarding classes and loss priorities for ports in access mode (all incoming traffic is mapped to best-effort forwarding classes).

**Table 20: Default IEEE 802.1 Classifiers for Ports in Access Mode (Untrusted Classifier)**

Code Point	Forwarding Class	Loss Priority
000	best-effort	low
001	best-effort	low
010	best-effort	low
011	best-effort	low
100	best-effort	low
101	best-effort	low
110	best-effort	low
111	best-effort	low

Table 21 on page 48 shows the default mapping of DSCP code-point values to forwarding classes and loss priorities for DSCP IP and DCSP IPv6.

Table 21: Default DSCP IP and IPv6 Classifiers

Code Point	Forwarding Class	Loss Priority
ef (101110)	best-effort	low
af11 (001010)	best-effort	low
af12 (001100)	best-effort	low
af13 (001110)	best-effort	low
af21 (010010)	best-effort	low
af22 (010100)	best-effort	low
af23 (010110)	best-effort	low
af31 (011010)	best-effort	low
af32 (011100)	best-effort	low
af33 (011110)	best-effort	low
af41 (100010)	best-effort	low
af42 (100100)	best-effort	low
af43 (100110)	best-effort	low
be (000000)	best-effort	low
cs1 (001000)	best-effort	low
cs2 (010000)	best-effort	low
cs3 (011000)	best-effort	low
cs4 (100000)	best-effort	low
cs5 (101000)	best-effort	low
nc1 (110000)	network-control	low
nc2 (111000)	network-control	low

Table 22 on page 49 shows the default mapping of MPLS EXP code-point values to forwarding classes and loss priorities.

Table 22: Default EXP Classifiers

Code Point	Forwarding Class	Loss Priority
000	best-effort	low
001	best-effort	high
010	expedited-forwarding	low
011	expedited-forwarding	high
100	assured-forwarding	low
101	assured-forwarding	high
110	network-control	low
111	network-control	high

## Default Scheduling

The default schedulers allocate egress bandwidth resources to egress traffic as shown in [Table 23 on page 49](#):

Table 23: Default Scheduler Configuration

Default Scheduler and Queue Number	Transmit Rate (Guaranteed Minimum Bandwidth)	Rate Shaping (Maximum Bandwidth)	Excess Bandwidth Sharing	Priority	Buffer Size
best-effort forwarding class scheduler (queue 0)	15%	None	15%	low	15%
fcoe forwarding class scheduler (queue 3)	35%	None	35%	low	35%
no-loss forwarding class scheduler (queue 4)	35%	None	35%	low	35%
network-control forwarding class scheduler (queue 7)	15%	None	15%	low	15%



**NOTE:** By default, the minimum guaranteed bandwidth (transmit rate) determines the amount of excess (extra) bandwidth a queue can share. Extra bandwidth is allocated to queues in proportion to the transmit rate of each queue. On switches that support the excess-rate statement, you can override the default setting and configure the excess bandwidth percentage independently of the transmit rate on queues that are not strict-high priority queues.

By default, only the four default schedulers shown in [Table 23 on page 49](#) have traffic mapped to them. Only the forwarding classes and queues associated with the default schedulers receive default bandwidth, based on the default scheduler transmit rate. (You can configure schedulers and forwarding classes to allocate bandwidth to other queues or to change the bandwidth and other scheduling properties of a default queue.) If a forwarding class does not transport traffic, the bandwidth allocated to that forwarding class is available to other forwarding classes. Unicast and multidestination (multicast, broadcast, and destination lookup fail) traffic use the same forwarding classes and output queues.

Default scheduling is port scheduling.

Default hierarchical scheduling, known as enhanced transmission selection (ETS, defined in IEEE 802.1Qaz), allocates the total port bandwidth to the four default forwarding classes served by the four default schedulers, as defined by the four default schedulers. The result is the same as direct port scheduling. Configuring hierarchical port scheduling, however, enables you to group forwarding classes that carry similar types of traffic into forwarding class sets (also called priority groups), and to assign port bandwidth to each forwarding class set. The port bandwidth assigned to the forwarding class set is then assigned to the forwarding classes within the forwarding class set. This hierarchy enables you to control port bandwidth allocation with greater granularity, and enables hierarchical sharing of extra bandwidth to better utilize link bandwidth.

Default scheduling uses weighted round-robin (WRR) scheduling. Each queue receives a portion (weight) of the total available interface bandwidth. The scheduling weight is based on the transmit rate (minimum guaranteed bandwidth) of the default scheduler for that queue. For example, queue 7 receives a default scheduling weight of 15 percent of the available bandwidth, and queue 4 receives a default scheduling weight of 35 percent of the available bandwidth. Queues are mapped to forwarding classes (for example, queue 7 is mapped to the network-control forwarding class and queue 4 is mapped to the no-loss forwarding class). Each forwarding class receives the default bandwidth for the queue to which it is mapped. Unused bandwidth is shared with other default queues.

If you want non-default (unconfigured) queues to forward traffic, you should explicitly map traffic to those queues (configure the forwarding classes and queue mapping) and create schedulers to allocate bandwidth to those queues. By default, queues 1, 2, 5, and 6 are unconfigured. Unconfigured queues have a default scheduling weight of 1 so that they can receive a small amount of bandwidth in case they need to forward traffic.

If you map traffic to an unconfigured queue and do not schedule port resources for the queue (configure a scheduler, map it to the forwarding class that is mapped to the queue, and apply the scheduler mapping to the port), the queue receives only the amount of excess bandwidth proportional to its default weight (1). The actual amount of bandwidth an unconfigured queue gets depends on how much bandwidth the other queues on the port are using.

If the other queues use less than their allocated amount of bandwidth, the unconfigured queues can share the unused bandwidth. Configured queues have higher priority for bandwidth than unconfigured queues, so if a configured queue needs more bandwidth, then less bandwidth is available for unconfigured queues. Unconfigured queues always

receive a minimum amount of bandwidth based on their scheduling weight (1). If you map traffic to an unconfigured queue, to allocate bandwidth to that queue, configure a scheduler for the forwarding class that is mapped to the queue, and apply it to the port.

## Default DCBX Advertisement

When you configure hierarchical scheduling on an interface, DCBX advertises each priority group, the priorities in each priority group, and the bandwidth properties of each priority and priority group.

If you do not configure hierarchical scheduling on an interface, DCBX advertises the automatically created default priority group and its priorities. DCBX also advertises the default bandwidth allocation of the priority group, which is 100 percent of the port bandwidth.

## Default Scheduling and Classification Summary

If you do not configure scheduling on an interface:

- Default classifiers classify ingress traffic.
- Default schedulers schedule egress traffic.
- DCBX advertises a single default priority group with 100 percent of the port bandwidth allocated to that priority group. All priorities (forwarding classes) are assigned to the default priority group and receive bandwidth based on their default schedulers. The default priority group is generated automatically and is not user-configurable.

### Related Documentation

- [Understanding CoS Packet Flow on page 15](#)
- [Understanding CoS Hierarchical Port Scheduling \(ETS\)](#)
- [Understanding Default CoS Settings on page 18](#)
- [CoS Support on QFX Series Switches, EX4600 Switches, and QFabric Systems](#)
- [Understanding CoS Virtual Output Queues \(VOQs\) on QFX10000 Switches](#)
- [Understanding Applying CoS Classifiers and Rewrite Rules to Interfaces on page 51](#)
- [Understanding DCB Features and Requirements](#)
- [Example: Configuring Classifiers on page 43](#)
- [Example: Configuring Queue Schedulers for Port Scheduling](#)

---

## Understanding Applying CoS Classifiers and Rewrite Rules to Interfaces

**Supported Platforms**    EX4600, QFabric System, QFX Series standalone switches

At ingress interfaces, classifiers group incoming traffic into classes based on the IEEE 802.1p, DSCP, or MPLS EXP class of service (CoS) code point bits in the packet header. At egress interfaces, you can use rewrite rules to change (re-mark) the code point bits before the interface forwards the packets.

You can apply classifiers and rewrite rules to interfaces to control the level of CoS applied to each packet as it traverses the system and the network. This topic describes:

- [Supported Classifier and Rewrite Rule Types on page 52](#)
- [Ethernet Interfaces Supported for Classifier and Rewrite Rule Configuration on page 54](#)
- [Default Classifiers on page 57](#)
- [Default Rewrite Rules on page 58](#)
- [Classifier Precedence on page 58](#)
- [Classifier Behavior and Limitations on page 59](#)
- [Rewrite Rule Precedence and Behavior on page 60](#)
- [Classifier and Rewrite Rule Configuration Interaction with Ethernet Interface Configuration on page 61](#)

## Supported Classifier and Rewrite Rule Types

Table 24 on page 52 shows the supported types of classifiers and rewrite rules supports:

**Table 24: Supported Classifiers and Rewrite Rules**

Classifier or Rewrite Rule Type	Description
Fixed classifier	Classifies all ingress traffic on a physical interface into one fixed forwarding class, regardless of the CoS bits in the packet header.
DSCP and DSCP IPv6 unicast classifiers	Classifies IP and IPv6 traffic into forwarding classes and assigns loss priorities to the traffic based on DSCP code point bits.
IEEE 802.1p unicast classifier	Classifies Ethernet traffic into forwarding classes and assigns loss priorities to the traffic based on IEEE 802.1p code point bits.
MPLS EXP classifier	<p>Classifies MPLS traffic into forwarding classes and assigns loss priorities to the traffic on interfaces configured as <b>family mpls</b>.</p> <p>QFX5200, QFX5100, EX4600, QFX3500, and QFX3600 switches, and QFabric systems, use one global EXP classifier on all <b>family mpls</b> switch interfaces.</p> <p>QFX10000 switches do not support global EXP classifiers. You can apply the same EXP classifier or different EXP classifiers to different <b>family mpls</b> interfaces.</p>



Table 24: Supported Classifiers and Rewrite Rules (*continued*)

Classifier or Rewrite Rule Type	Description
DSCP multidestination classifier (also used for IPv6 multidestination traffic)  <b>NOTE:</b> This applies only to switches that use different classifiers for unicast and multidestination traffic. It does not apply to switches that use the same classifiers for unicast and multidestination traffic.	Classifies IP and IPv6 multicast, broadcast, and destination lookup fail (DLF) traffic into multidestination forwarding classes. Multidestination classifiers are applied to all interfaces and cannot be applied to individual interfaces.
IEEE 802.1p multidestination classifier  <b>NOTE:</b> This applies only to switches that use different classifiers for unicast and multidestination traffic. It does not apply to switches that use the same classifiers for unicast and multidestination traffic.	Classifies Ethernet multicast, broadcast, and destination lookup fail (DLF) traffic into multidestination forwarding classes. Multidestination classifiers are applied to all interfaces and cannot be applied to individual interfaces.
DSCP and DSCP IPv6 rewrite rules	Re-marks the DSCP code points of IP and IPv6 packets before forwarding the packets.
IEEE 802.1p rewrite rule	Re-marks the IEEE 802.1p code points of Ethernet packets before forwarding the packets.
MPLS EXP rewrite rule	Re-marks the EXP code points of MPLS packets before forwarding the packets on interfaces configured as <b>family mpls</b> .



**NOTE:** On switches that support native Fibre Channel (FC) interfaces, you can specify a rewrite value on native FC interfaces (NP\_Ports) to set the IEEE 802.1p code point of incoming FC traffic when the NP\_Port encapsulates the FC packet in Ethernet before forwarding it to the FCoE network (see *Understanding CoS IEEE 802.1p Priority Remapping on an FCoE-FC Gateway*).

DSCP, IEEE 802.1p, and MPLS EXP classifiers are behavior aggregate (BA) classifiers. On QFX5100, QFX5200, EX4600, QFX3500, and QFX3600 switches, and on QFabric systems, unlike DSCP and IEEE 802.1p classifiers, EXP classifiers are global and apply only to all interfaces that are configured as **family mpls**. On QFX10000 switches, you apply EXP classifiers to individual logical interfaces, and different interfaces can use different EXP classifiers.

Unlike DSCP and IEEE 802.1p BA classifiers, there is no default EXP classifier. Also unlike DSCP and IEEE 802.1p classifiers, for MPLS traffic on **family mpls** interfaces only, EXP classifiers overwrite fixed classifiers. (An interface that has a fixed classifier uses the EXP classifier for MPLS traffic, not the fixed classifier, and the fixed classifier is used for all other traffic.)

On switches that use different classifiers for unicast and multdestination traffic, multdestination classifiers are global and apply to all interfaces; you cannot apply a multdestination classifier to individual interfaces.

Classifying packets into forwarding classes assigns packets to the output queues mapped to those forwarding classes. The traffic classified into a forwarding class receives the CoS scheduling configured for the output queue mapped to that forwarding class.



**NOTE:** In addition to BA classifiers and fixed classifiers, which classify traffic based on the CoS field in the packet header, you can use firewall filters to configure multfield (MF) classifiers. MF classifiers classify traffic based on more than one field in the packet header and take precedence over BA and fixed classifiers.

---

## Ethernet Interfaces Supported for Classifier and Rewrite Rule Configuration

To apply a classifier to incoming traffic or a rewrite rule to outgoing traffic, you need to apply the classifier or rewrite rule to one or more interfaces. When you apply a classifier or rewrite rule to an interface, the interface uses the classifier to group incoming traffic into forwarding classes and uses the rewrite rule to re-mark the CoS code point value of each packet before it leaves the system.

Not all interfaces types support all types of CoS configuration. This section describes:

- [Interface Types That Support Classifier and Rewrite Rule Configuration on page 54](#)
- [Classifier and Rewrite Rule Physical and Logical Ethernet Interface Support on page 54](#)
- [Routed VLAN Interfaces \(RVIs\) and Integrated Routing and Bridging \(IRB\) Interfaces on page 57](#)

---

### Interface Types That Support Classifier and Rewrite Rule Configuration

You can apply classifiers and rewrite rules to Ethernet interfaces. For Layer 3 LAGs, configure BA or fixed classifiers on the LAG (ae) interface. The classifier configured on the LAG is valid on all of the LAG member interfaces.

On switches that support native FC interfaces, you can apply fixed classifiers to native FC interfaces (NP\_Ports). You cannot apply other types of classifiers or rewrite rules to native FC interfaces. You can rewrite the value of the IEEE 802.1p code point of incoming FC traffic when the interface encapsulates it in Ethernet before forwarding it to the FCoE network as described in *Understanding CoS IEEE 802.1p Priority Remapping on an FCoE-FC Gateway*.

---

### Classifier and Rewrite Rule Physical and Logical Ethernet Interface Support

The Ethernet ports can function as:

- Layer 2 physical interfaces (family ethernet-switching)
- Layer 2 logical interfaces (family ethernet-switching)
- Layer 3 physical interfaces (family inet/inet6)

- Layer 3 logical interfaces (family inet/inet6)
- MPLS interfaces (family mpls)

You can apply CoS classifiers and rewrite rules only to the following interfaces:

- Layer 2 logical interface unit 0



**NOTE:** On a Layer 2 interface, the CoS you configure on logical interface unit 0 applies to all of the logical units on that interface.

- On QFX5100, QFX5200, EX4600, QFX3500, and QFX3600 switches, and on QFabric systems, Layer 3 physical interfaces if at least one logical Layer 3 interface is configured on the physical interface



**NOTE:** The CoS you configure on a Layer 3 physical interface is applied to all of the Layer 3 logical interfaces on that physical interface. This means that each Layer 3 interface uses the same classifiers and rewrite rules for all of the Layer 3 traffic on that interface.

- On QFX10000 switches, Layer 3 logical interfaces. You can apply different classifiers and rewrite rules to different Layer 3 logical interfaces.

#### ***Ethernet Interface Support for Most QFX Series Switches, and QFabric Systems***

You cannot apply classifiers or rewrite rules to Layer 2 physical interfaces or to Layer 3 logical interfaces. [Table 25 on page 55](#) shows on which interfaces you can configure and apply classifiers and rewrite rules.

**Table 25: Ethernet Interface Support for Classifier and Rewrite Rule Configuration (QFX5100, QFX5200, EX4600, QFX3500, and QFX3600 Switches, and QFabric Systems)**

CoS Classifiers and Rewrite Rules	Layer 2 Physical Interfaces	Layer 2 Logical Interface (Unit 0 Only)	Layer 3 Physical Interfaces (If at Least One Logical Layer 3 Interface Is Defined)	Layer 3 Logical Interfaces
Fixed classifier	No	Yes	Yes	No
DSCP classifier	No	Yes	Yes	No
DSCP IPv6 classifier	No	Yes	Yes	No
IEEE 802.1p classifier	No	Yes	Yes	No
EXP classifier	Global classifier, applies only to all switch interfaces that are configured as <b>family mpls</b> . Cannot be configured on individual interfaces.			
DSCP rewrite rule	No	Yes	Yes	No

Table 25: Ethernet Interface Support for Classifier and Rewrite Rule Configuration (QFX5100, QFX5200, EX4600, QFX3500, and QFX3600 Switches, and QFabric Systems) (*continued*)

CoS Classifiers and Rewrite Rules	Layer 2 Physical Interfaces	Layer 2 Logical Interface (Unit 0 Only)	Layer 3 Physical Interfaces (If at Least One Logical Layer 3 Interface Is Defined)	Layer 3 Logical Interfaces
DSCP IPv6 rewrite rule	No	Yes	Yes	No
IEEE 802.1p rewrite rule	No	Yes	Yes	No
EXP rewrite rule	No	Yes	Yes	No



**NOTE:** IEEE 802.1p multidestination and DSCP multidestination classifiers are applied to all interfaces and cannot be applied to individual interfaces. No DSCP IPv6 multidestination classifier is supported. IPv6 multidestination traffic uses the DSCP multidestination classifier.

#### ***Ethernet Interface Support for QFX10000 Switches***

You cannot apply classifiers or rewrite rules to Layer 2 or Layer 3 physical interfaces. You can apply classifiers and rewrite rules only to Layer 2 logical interface unit 0. You can apply different classifiers and rewrite rules to different Layer 3 logical interfaces.

[Table 26 on page 56](#) shows on which interfaces you can configure and apply classifiers and rewrite rules.

Table 26: Ethernet Interface Support for Classifier and Rewrite Rule Configuration (QFX10000 Switches)

CoS Classifiers and Rewrite Rules	Layer 2 Physical Interfaces	Layer 2 Logical Interface (Unit 0 Only)	Layer 3 Physical Interfaces	Layer 3 Logical Interfaces
Fixed classifier	No	Yes	No	Yes
DSCP classifier	No	Yes	No	Yes
DSCP IPv6 classifier	No	Yes	No	Yes
IEEE 802.1p classifier	No	Yes	No	Yes
EXP classifier	No	Yes	No	Yes
DSCP rewrite rule	No	Yes	No	Yes
DSCP IPv6 rewrite rule	No	Yes	No	Yes
IEEE 802.1p rewrite rule	No	Yes	No	Yes

Table 26: Ethernet Interface Support for Classifier and Rewrite Rule Configuration (QFX10000 Switches) (*continued*)

CoS Classifiers and Rewrite Rules	Layer 2 Physical Interfaces	Layer 2 Logical Interface (Unit 0 Only)	Layer 3 Physical Interfaces	Layer 3 Logical Interfaces
EXP rewrite rule	No	Yes	No	Yes

### Routed VLAN Interfaces (RVIs) and Integrated Routing and Bridging (IRB) Interfaces

You cannot apply classifiers and rewrite rules directly to routed VLAN interfaces (RVIs) or integrated routing and bridging (IRB) interfaces because the members of RVIs and IRBs are VLANs, not ports. However, you can apply classifiers and rewrite rules to the VLAN port members of an RVI or an IRB. You can also apply MF classifiers to RVIs and IRBs.

### Default Classifiers

If you do not explicitly configure classifiers on an Ethernet interface, the switch applies default classifiers so that the traffic receives basic CoS treatment. The factors that determine the default classifier applied to the interface include the interface type (Layer 2 or Layer 3), the port mode (trunk, tagged-access, or access), and whether logical interfaces have been configured.

The switch applies default classifiers using the following rules:

- If the physical interface has at least one Layer 3 logical interface configured, the logical interfaces use the default DSCP classifier.
- If the physical interface has a Layer 2 logical interface in trunk mode or tagged-access mode, it uses the default IEEE 802.1p trusted classifier.



**NOTE:** Tagged-access mode is available only on QFX3500 and QFX3600 devices when used as standalone switches or as QFabric system Node devices.

- If the physical interface has a Layer 2 logical interface in access mode, it uses the default IEEE 802.1p untrusted classifier.
- If the physical interface has no logical interface configured, no default classifier is applied.
- On switches that use different classifiers for unicast and multidestination traffic, the default multidestination classifier is the IEEE 802.1p multidestination classifier.
- There is no default MPLS EXP classifier. If you want to classify MPLS traffic using EXP bits on these switches, on QFX10000 switches, configure an EXP classifier and apply it to a logical interface that is configured as **family mpls**. On QFX5100, QFX5200, EX4600, QFX3500 and QFX3600 switches, and on QFabric systems, configure an EXP classifier and configure it as the global system default EXP classifier.

## Default Rewrite Rules

No default rewrite rules are applied to interfaces. If you want to re-mark packets at the egress interface, you must explicitly configure a rewrite rule.

## Classifier Precedence

You can apply multiple classifiers (MF, fixed, IEEE 802.1p, DSCP, or EXP) to an Ethernet interface to handle different types of traffic. (EXP classifiers are global and apply only to all MPLS traffic on all **family mpls** interfaces.) When you apply more than one classifier to an interface, the system uses an order of precedence to determine which classifier to use on interfaces:

- [Classifier Precedence on Physical Ethernet Interfaces \(QFX5200, QFX5100, EX4600, QFX3500, and QFX3600 Switches, and QFabric Systems\)](#) on page 58
- [Classifier Precedence on Logical Ethernet Interfaces \(All Switches\)](#) on page 59

### [Classifier Precedence on Physical Ethernet Interfaces \(QFX5200, QFX5100, EX4600, QFX3500, and QFX3600 Switches, and QFabric Systems\)](#)

---

QFX10000 switches do not support configuring classifiers on physical interfaces. The precedence of classifiers on physical interfaces, from the highest-priority classifier to the lowest-priority classifier, is:

- MF classifier on a logical interface (no classifier has a higher priority than MF classifiers)
- Fixed classifier on the physical interface
- DSCP or DSCP IPv6 classifier on the physical interface
- IEEE 802.1p classifier on the physical interface



**NOTE:** If an EXP classifier is configured, MPLS traffic uses the EXP classifier on all **family mpls** interfaces, even if an MF or fixed classifier is applied to the interface. If an EXP classifier is not configured, then if a fixed classifier is applied to the interface, the MPLS traffic uses the fixed classifier. If no EXP classifier and no fixed classifier is applied to the interface, MPLS traffic is treated as best-effort traffic. DSCP classifiers are not applied to MPLS traffic.

---

You can apply a DSCP classifier, an IEEE 802.1p classifier, and an EXP classifier on a physical interface. When all three classifiers are on an interface, IP traffic uses the DSCP classifier, MPLS traffic on **family mpls** interfaces uses the EXP classifier, and all other traffic uses the IEEE classifier.



**NOTE:** You cannot apply a fixed classifier and a DSCP or IEEE classifier to the same interface. If a DSCP classifier, an IEEE classifier, or both are on an interface, you cannot apply a fixed classifier to that interface unless you first delete the DSCP and IEEE classifiers. If a fixed classifier is on an interface, you cannot apply a DSCP classifier or an IEEE classifier unless you first delete the fixed classifier.

### Classifier Precedence on Logical Ethernet Interfaces (All Switches)

The precedence of classifiers on logical interfaces, from the highest priority classifier to the lowest priority classifier, is:

- MF classifier on a logical interface (no classifier has a higher priority than MF classifiers).
- Fixed classifier on the logical interface.
- DSCP or DSCP IPv6 classifier on the physical or logical interface..
- IEEE 802.1p classifier on the physical or logical interface.



**NOTE:** If a global EXP classifier is configured, MPLS traffic uses the EXP classifier on all **family mpls** interfaces, even if a fixed classifier is applied to the interface. If a global EXP classifier is not configured, then:

- If a fixed classifier is applied to the interface, the MPLS traffic uses the fixed classifier. If no EXP classifier and no fixed classifier is applied to the interface, MPLS traffic is treated as best-effort traffic.

You can apply both a DSCP classifier and an IEEE 802.1p classifier on a logical interface. When both a DSCP and an IEEE classifier are on an interface, IP traffic uses the DSCP classifier, and all other traffic uses the IEEE classifier. Only MPLS traffic on interfaces configured as **family mpls** uses the EXP classifier.

### Classifier Behavior and Limitations

Consider the following behaviors and constraints when you apply classifiers to Ethernet interfaces. Behaviors for applying classifiers to physical interfaces do not pertain to QFX10000 switches.

- You can configure only one DSCP classifier (IP or IPv6) on a physical interface. You cannot configure both types of DSCP classifier on one physical interface. Both IP and IPv6 traffic use whichever DSCP classifier is configured on the interface.
- When you configure a DSCP or a DSCP IPv6 classifier on a physical interface and the physical interface has at least one logical Layer 3 interface, all packets (IP, IPv6, and non-IP) use that classifier.
- An interface with both a DSCP classifier (IP or IPv6) and an IEEE 802.1p classifier uses the DSCP classifier for IP and IPv6 packets, and uses the IEEE classifier for all other packets.

- Fixed classifiers and BA classifiers (DSCP and IEEE classifiers) are not permitted simultaneously on an interface. If you configure a fixed classifier on an interface, you cannot configure a DSCP or an IEEE classifier on that interface. If you configure a DSCP classifier, an IEEE classifier, or both classifiers on an interface, you cannot configure a fixed classifier on that interface.
- When you configure an IEEE 802.1p classifier on a physical interface and a DSCP classifier is not explicitly configured on that interface, the interface uses the IEEE classifier for all types of packets. No default DSCP classifier is applied to the interface. (In this case, if you want a DSCP classifier on the interface, you must explicitly configure it and apply it to the interface.)
- The system does not apply a default classifier to a physical interface until you create a logical interface on that physical interface. If you configure a Layer 3 logical interface, the system uses the default DSCP classifier. If you configure a Layer 2 logical interface, the system uses the default IEEE 802.1p trusted classifier if the port is in trunk mode or tagged-access mode, or the default IEEE 802.1p untrusted classifier if the port is in access mode.
- MF classifiers configured on logical interfaces take precedence over BA and fixed classifiers, with the exception of the global EXP classifier, which is always used for MPLS traffic on **family mpls** interfaces. (Use firewall filters to configure MF classifiers.) When BA or fixed classifiers are present on an interface, you can still configure an MF classifier on that interface.
- There is no default EXP classifier for MPLS traffic.
- You can configure up to 64 EXP classifiers. On QFX10000 switches, you can apply different EXP classifiers to different interfaces.

However, on On QFX5200, QFX5100, EX4600, QFX3500, and QFX3600 switches, and on QFabric systems, the switch uses only one MPLS EXP classifier as a global classifier on all **family mpls** interfaces. After you configure an MPLS EXP classifier, you can configure it as the global EXP classifier by including the EXP classifier in the **[edit class-of-service system-defaults classifiers exp]** hierarchy level.

All **family mpls** switch interfaces use the EXP classifier specified using this configuration statement to classify MPLS traffic, even on interfaces that have a fixed classifier. No other traffic uses the EXP classifier.

## Rewrite Rule Precedence and Behavior

The following rules apply on Ethernet interfaces for rewrite rules:

- If you configure one DSCP (or DSCP IPv6) rewrite rule and one IEEE 802.1p rewrite rule on an interface, both rewrite rules take effect. Traffic with IP and IPv6 headers use the DSCP rewrite rule, and traffic with a VLAN tag uses the IEEE rewrite rule.
- If you do not explicitly configure a rewrite rule, there is no default rewrite rule, so the system does not apply any rewrite rule to the interface.
- You can apply a DSCP rewrite rule or a DSCP IPv6 rewrite rule to an interface, but you cannot apply both a DSCP and a DSCP IPv6 rewrite rule to the same interface. Both



IP and IPv6 packets use the same DSCP rewrite rule, regardless of whether the configured rewrite rule is DSCP or DSCP IPv6.

- MPLS EXP rewrite rules apply only to logical interfaces on **family mpls** interfaces. You cannot apply to an EXP rewrite rule to a physical interface. You can configure up to 64 EXP rewrite rules, but you can only use 16 EXP rewrite rules at any time on the switch.
- A logical interface can use both DSCP (or DSCP IPv6) and EXP rewrite rules.
- DSCP and DSCP IPv6 rewrite rules are not applied to MPLS traffic.
- If the switch is performing penultimate hop popping (PHP), EXP rewrite rules do not take effect. If both an EXP classifier and an EXP rewrite rule are configured on the switch, then the EXP value from the last popped label is copied into the inner label. If either an EXP classifier or an EXP rewrite rule (but not both) is configured on the switch, then the inner label EXP value is sent unchanged.



**NOTE:** On each physical interface, either all forwarding classes that are being used on the interface must have rewrite rules configured or no forwarding classes that are being used on the interface can have rewrite rules configured. On any physical port, do not mix forwarding classes with rewrite rules and forwarding classes without rewrite rules.



**NOTE:** Rewrite rules are applied *before* the egress filter is matched to traffic. Because the code point rewrite occurs before the egress filter is matched to traffic, the egress filter match is based on the rewrite value, not on the original code point value in the packet.

## Classifier and Rewrite Rule Configuration Interaction with Ethernet Interface Configuration

On QFX5100, QFX5200, EX4600, QFX3500, and QFX3600 switches used as standalone switches or as QFabric system Node devices, you can apply classifiers and rewrite rules only on Layer 2 logical interface unit 0 and Layer 3 physical interfaces (if the Layer 3 physical interface has at least one defined logical interface). On QFX10000 switches, you can apply classifiers and rewrite rules only to Layer 2 logical interface unit 0 and to Layer 3 logical interfaces. This section focuses on BA classifiers, but the interaction between BA classifiers and interfaces described in this section also applies to fixed classifiers and rewrite rules.



**NOTE:** On QFX5100, QFX5200, EX4600, QFX3500, and QFX3600 switches used as standalone switches or as QFabric system Node devices, EXP classifiers, are global and apply to all switch interfaces. See *Defining CoS Multidestination (Multicast, Broadcast, DLF) BA Classifiers* for how to configure multidestination classifiers and see *Configuring a Global MPLS EXP Classifier* for how to configure EXP classifiers.

On switches that use different classifiers for unicast and multidestination traffic, multidestination classifiers are global and apply to all switch interfaces.

There are two components to applying classifiers or rewrite rules to interfaces:

1. Setting the interface family (inet, inet6, or ethernet-switching; ethernet-switching is the default interface family) in the **[edit interfaces]** configuration hierarchy.
2. Applying a classifier or rewrite rule to the interface in the **[edit class-of-service]** hierarchy.

These are separate operations that can be set and committed at different times. Because the type of classifier or rewrite rule you can apply to an interface depends on the interface family configuration, the system performs checks to ensure that the configuration is valid. The method the system uses to notify you of an invalid configuration depends on the **set** operation that causes the invalid configuration.



**NOTE:** QFX10000 switches cannot be misconfigured in the following two ways because you can configure classifiers only on logical interfaces. Only switches that allow classifier configuration on physical and logical interfaces can experience the following misconfigurations.

If applying the classifier or rewrite rule to the interface in the **[edit class-of-service]** hierarchy causes an invalid configuration, the system rejects the configuration and returns a commit check error.

If setting the interface family in the **[edit interfaces]** configuration hierarchy causes an invalid configuration, the system creates a syslog error message. If you receive the error message, you need to remove the classifier or rewrite rule configuration from the logical interface and apply it to the physical interface, or remove the classifier or rewrite rule configuration from the physical interface and apply it to the logical interface. For classifiers, if you do not take action to correct the error, the system programs the default classifier for the interface family on the interface. (There are no default rewrite rules. If the commit check fails, no rewrite rule is applied to the interface.)

Two scenarios illustrate these situations:

- Applying a classifier to an Ethernet interface causes a commit check error
- Configuring the Ethernet interface family causes a syslog error

These scenarios differ on different switches because some switches support classifiers on physical Layer 3 interfaces but not on logical Layer 3 interfaces, while other switches support classifiers on logical Layer 3 interfaces but not on physical Layer 3 interfaces.

Two scenarios illustrate these situations:

- [QFX5100, QFX5200, EX4600, QFX3500, and QFX3600 Switch Scenarios on page 63](#)



**NOTE:** Both of these scenarios also apply to fixed classifiers and rewrite rules.

### [QFX5100, QFX5200, EX4600, QFX3500, and QFX3600 Switch Scenarios](#)

The following scenarios also apply the QFX5100, QFX5200, EX4600, QFX3500, and QFX3600 switches when they are used as QFabric system Node devices.

#### *Scenario 1: Applying a Classifier to an Ethernet Interface Causes a Commit Check Error*

In Scenario 1, we set the interface family, and then specify an invalid classifier.

1. Set and commit the interface as a Layer 3 (family **inet**) interface:

```
[edit interfaces]
user@switch# set xe-0/0/20 unit 0 family inet
user@switch# commit
```

This commit operation succeeds.

2. Set and commit a DSCP classifier on the logical interface (this example uses a DSCP classifier named **dscp1**):

```
[edit class-of-service]
user@switch# set interfaces xe-0/0/20 unit 0 classifiers dscp dscp1
user@switch# commit
```

This configuration is not valid, because it attempts to apply a classifier to a Layer 3 logical interface. Because the failure is caused by the class-of-service configuration and not by the interface configuration, the system rejects the commit operation and issues a commit error, not a syslog message.

Note that the commit operation succeeds if you apply the classifier to the physical Layer 3 interface as follows:

```
[edit class-of-service]
user@switch# set interfaces xe-0/0/20 classifiers dscp dscp1
user@switch# commit
```

Because the logical unit is not specified, the classifier is applied to the physical Layer 3 interface in a valid configuration, and the commit check succeeds.

#### *Scenario 2: Configuring the Ethernet Interface Family Causes a Syslog Error*

In Scenario 2, we set the classifier first, and then set an invalid interface type.

1. Set and commit a DSCP classifier on a logical interface that has no existing configuration:

```
[edit class-of-service]
```

```
user@switch# set interfaces xe-0/0/20 unit 0 classifiers dscp dscp1
user@switch# commit
```

This commit succeeds. Because no explicit configuration existed on the interface, it is by default a Layer 2 (**family ethernet-switching**) interface. Layer 2 logical interfaces support BA classifiers, so applying the classifier is a valid configuration.

2. Set and commit the interface as a Layer 3 interface (**family inet**) interface:

```
[edit interfaces]
user@switch# set xe-0/0/20 unit 0 family inet
user@switch# commit
```

This configuration is not valid because it attempts to change an interface from Layer 2 (**family ethernet-switching**) to Layer 3 (**family inet**) when a classifier has already been applied to a logical interface. Layer 3 logical interfaces do not support classifiers. Because the failure is caused by the interface configuration and not by the class-of-service configuration, the system does not issue a commit error, but instead issues a syslog message.

When the system issues the syslog message, it programs the default classifier for the interface type on the interface. In this scenario, the interface has been configured as a Layer 3 interface, so the system applies the default DSCP profile to the physical Layer 3 interface.

In this scenario, to install a configured DSCP classifier, remove the misconfigured classifier from the Layer 3 logical interface and apply it to the Layer 3 physical interface. For example:

```
[edit]
user@switch# delete class-of-service interfaces xe-0/0/20 unit 0 classifiers dscp dscp1
user@switch# commit
user@switch# set class-of-service interfaces xe-0/0/20 classifiers dscp dscp1
user@switch# commit
```

- Related Documentation**
- [Understanding CoS Packet Flow on page 15](#)
  - [Configuring CoS on page 6](#)

---

## Understanding CoS Code-Point Aliases

**Supported Platforms**    [EX4600, OCX1100, QFabric System, QFX Series standalone switches](#)

A code-point alias assigns a name to a pattern of code-point bits. You can use this name instead of the bit pattern when you configure other CoS components such as classifiers and rewrite rules.



**NOTE:** This topic applies to all EX Series switches except the EX4600. Because the EX4600 uses a different chipset than other EX Series switches, the code-point aliases on EX4600 match those on QFX Series switches. For EX4600 code-point aliases, see [“Understanding CoS Code-Point Aliases” on page 64](#).

Behavior aggregate classifiers use class-of-service (CoS) values such as Differentiated Services Code Points (DSCPs) or IEEE 802.1 bits to associate incoming packets with a particular forwarding class and the CoS servicing level associated with that forwarding class. You can assign a meaningful name or alias to the CoS values and use that alias instead of bits when configuring CoS components. These aliases are not part of the specifications but are well known through usage. For example, the alias for DSCP 101110 is widely accepted as ef (expedited forwarding).

When you configure forwarding classes and define classifiers, you can refer to the markers by alias names. You can configure code point alias names for user-defined classifiers. If the value of an alias changes, it alters the behavior of any classifier that references it.

You can configure code-point aliases for the following type of CoS markers:

- dscp or dscp-ipv6—Handles incoming IP and IPv6 packets.
- ieee-802.1—Handles Layer 2 frames.

[Table 27 on page 65](#) shows the default mapping of code-point aliases to IEEE code points.

**Table 27: Default IEEE 802.1 Code-Point Aliases**

CoS Value Types	Mapping
be	000
be1	001
ef	010
ef1	011
af11	100
af12	101
nc1	110
nc2	111

Table 28 on page 66 shows the default mapping of code-point aliases to DSCP and DSCP IPv6 code points.

**Table 28: Default DSCP and DSCP IPv6 Code-Point Aliases**

CoS Value Types	Mapping
ef	101110
af11	001010
af12	001100
af13	001110
af21	010010
af22	010100
af23	010110
af31	011010
af32	011100
af33	011110
af41	100010
af42	100100
af43	100110
be	000000
cs1	001000
cs2	010000
cs3	011000
cs4	100000
cs5	101000
nc1	110000
nc2	111000

**Related Documentation**

- [Understanding Junos CoS Components on page 9](#)

- [Defining CoS Code-Point Aliases on page 67](#)

## Defining CoS Code-Point Aliases

---

**Supported Platforms** [EX4600, OCX1100, QFabric System, QFX Series standalone switches](#)

You can use code-point aliases to streamline the process of configuring CoS features on your switch. A code-point alias assigns a name to a pattern of code-point bits. You can use this name instead of the bit pattern when you configure other CoS components such as classifiers and rewrite rules.

You can configure code-point aliases for the following CoS marker types:

- DSCP or DSCP IPv6—Handles incoming IPv4 or IPv6 packets.
- IEEE 802.1p—Handles Layer 2 frames.

To configure a code-point alias:

1. Specify a CoS marker type (IEEE 802.1 or DSCP).
2. Assign an alias.
3. Specify the code point that corresponds to the alias.

```
[edit class-of-service code-point-aliases]
user@switch# set (dscp | dscp-ipv6 | ieee-802.1) alias-name code-point-bits
```

For example, to configure a code-point alias for an IEEE 802.1 CoS marker type that has the alias name be2 and maps to the code-point bits 001:

```
[edit class-of-service code-point-aliases]
user@switch# set ieee-802.1 be2 001
```

- Related Documentation**
- [Monitoring CoS Code-Point Value Aliases on page 272](#)
  - [Understanding CoS Code-Point Aliases on page 64](#)

## Understanding CoS Forwarding Classes

---

**Supported Platforms** [QFX Series standalone switches](#)

Forwarding classes group traffic and assign the traffic to output queues. Each forwarding class is mapped to an output queue. Classification maps incoming traffic to forwarding classes based on the code point bits in the packet or frame header. Forwarding class to queue mapping defines the output queue used for the traffic classified into a forwarding class.

A classifier must associate each packet with one of the following four default forwarding classes or with a user-configured forwarding class to assign an output queue to the packet:

- **fcoe**—Guaranteed delivery for Fibre Channel over Ethernet (FCoE) traffic.
- **no-loss**—Guaranteed delivery for TCP lossless traffic.
- **best-effort**—Provides best-effort delivery without a service profile. Loss priority is typically not carried in a class-of-service (CoS) value.
- **network-control**—Supports protocol control.

The switch supports up to eight forwarding classes, thus enabling flexible, differentiated, packet classification. For example, you can configure multiple classes of best-effort traffic such as **best-effort**, **best-effort1**, and **best-effort2**.

The switch supports eight output queues (queues 0 through 7). Unicast and multdestination (multicast, broadcast, and destination lookup fail) traffic use the same forwarding classes and output queues.

- [Default Forwarding Classes on page 68](#)
- [Forwarding Class Configuration Rules on page 69](#)
- [Lossless Transport Support on page 71](#)

## Default Forwarding Classes

[Table 29 on page 68](#) shows the four default forwarding classes. You can rename the forwarding classes. Assigning a new forwarding class name does not alter the default classification or scheduling applied to the queue that is mapped to that forwarding class. CoS configurations can be complex, so unless it is required by your scenario, we recommend that you use the default class names and queue number associations.

**Table 29: Default Forwarding Classes**

Forwarding Class Name	Default Queue Mapping	Comments
best-effort	0	<p>The software does not apply any special CoS handling to best-effort traffic. This is a backward compatibility feature. Best-effort traffic is usually the first traffic to be dropped during periods of network congestion.</p> <p>By default, this is a lossy forwarding class with a packet drop attribute of <b>drop</b>.</p>



Table 29: Default Forwarding Classes (*continued*)

Forwarding Class Name	Default Queue Mapping	Comments
fcoe	3	<p>By default, the <b>fcoe</b> forwarding class is a lossless forwarding class designed to handle Fibre Channel over Ethernet (FCoE) traffic. The <b>no-loss</b> packet drop attribute is applied by default.</p> <p><b>NOTE:</b> By convention, deployments with converged server access typically use IEEE 802.1p priority 3 (011) for FCoE traffic. The default mapping of the <b>fcoe</b> forwarding class is to queue 3. Apply priority-based flow control (PFC) to the entire FCoE data path to configure the end-to-end lossless behavior that FCoE requires.</p> <p>We recommend that you use priority 3 for FCoE traffic unless your network architecture requires that you use a different priority.</p>
no-loss	4	<p>By default, this is a lossless forwarding class with a packet drop attribute of <b>no-loss</b>.</p>
network-control	7	<p>The software delivers packets in this service class with a high priority. (These packets are not delay-sensitive.)</p> <p>Typically, these packets represent routing protocol hello or keepalive messages. Because loss of these packets jeopardizes proper network operation, packet delay is preferable to packet discard.</p> <p>By default, this is a lossy forwarding class with a packet drop attribute of <b>drop</b>.</p>

## Forwarding Class Configuration Rules

Take the following rules into account when you configure forwarding classes:

- [Queue Assignment Rules on page 69](#)
- [Scheduling Rules on page 70](#)
- [Rewrite Rules on page 71](#)

### Queue Assignment Rules

The following rules govern queue assignment:

- CoS configurations that specify more queues than the switch can support are not accepted. The commit operation fails with a detailed message that states the total number of queues available.
- All default CoS configurations are based on queue number. The name of the forwarding class that appears in the default configuration is the forwarding class currently mapped to that queue.
- If you map more than one forwarding class to a queue, all of the forwarding classes mapped to the same queue must have the same packet drop attribute (all of the

forwarding classes must be lossy, or all of the forwarding classes mapped to a queue must be lossless).

You limit the amount of traffic that receives strict-high priority treatment on a strict-high priority queue by configuring a transmit rate. The transmit rate sets the amount of traffic on the queue that receives strict-high priority treatment. The switch treats traffic that exceeds the transmit rate as low priority traffic that receives the queue excess rate bandwidth. Limiting the amount of traffic that receives strict-high priority treatment prevents other queues from being starved while also ensuring that the amount of traffic specified in the transmit rate receives strict-high priority treatment.

If you configure one strict-high priority queue on a port, we strongly recommend that you configure a transmit rate on the queue to prevent it from starving low priority queues on that port. Although it is not mandatory to configure a transmit rate on a strict-high priority queue when there is only one strict-high priority queue on a port, if you do not configure a transmit rate, the strict-high priority queue can consume all of the port bandwidth and starve the other queues.

If you configure more than one strict-high priority queue on a port, you must configure a transmit rate on each of the strict-high priority queues. If you configure more than one strict-high priority queue on a port and you do not configure a transmit rate on the strict-high priority queues, the switch treats only the first queue you configure as a strict-high priority queue. The switch treats the other queues as low priority queues. If you configure a transmit rate on some strict-high priority queues but not on other strict-high priority queues on a port, the switch treats the queues that have a transmit rate as strict-high priority queues, and treats the queues that do not have a transmit rate as low priority queues.

### Scheduling Rules

---

When you configure a forwarding class and map traffic to it (that is, you are not using a default classifier and forwarding class), you must also define a scheduling policy for the forwarding class. You can configure either port scheduling or enhanced transmission selection (ETS) hierarchical port scheduling.

Defining a scheduling policy using port scheduling means:

- Mapping a scheduler to the forwarding class in a scheduler map.
- Applying the scheduler map to one or more interfaces.

Defining a scheduling policy using ETS means:

- Mapping a scheduler to the forwarding class in a scheduler map.
- Including the forwarding class in a forwarding class set.
- Associating the scheduler map with a traffic control profile.
- Attaching the traffic control profile to a forwarding class set and applying the traffic control profile to an interface.

## Rewrite Rules

---

On each physical interface, either all forwarding classes that are being used on the interface must have rewrite rules configured, or no forwarding classes that are being used on the interface can have rewrite rules configured. On any physical port, do not mix forwarding classes with rewrite rules and forwarding classes without rewrite rules.

## Lossless Transport Support

The switch supports up to six lossless forwarding classes. For lossless transport, you must enable PFC on the IEEE 802.1p code point of lossless forwarding classes. The following limitations apply to support lossless transport:

- The external cable length from the switch to other devices cannot exceed 300 meters.
- For FCoE traffic, the interface maximum transmission unit (MTU) must be at least 2180 bytes to accommodate the packet payload, headers, and checks.
- Changing any portion of a PFC configuration on a port blocks the entire port until the change is completed. After a PFC change is completed, the port is unblocked and traffic resumes. Changing the PFC configuration means any change to a congestion notification profile that is configured on a port (enabling or disabling PFC on a code point, changing the MRU or cable-length value, or specifying an output flow control queue). Blocking the port stops ingress and egress traffic, and causes packet loss on all queues on the port until the port is unblocked.

### Related Documentation

- [Understanding Junos CoS Components on page 9](#)
- [Understanding CoS Packet Flow on page 15](#)
- *Understanding CoS Flow Control (Ethernet PAUSE and PFC)*
- [Example: Configuring Forwarding Classes on page 72](#)

## Defining CoS Forwarding Classes

---

### Supported Platforms [QFX Series standalone switches](#)

Forwarding classes allow you to group packets for transmission. The switch supports a total of eight forwarding classes. To forward traffic, you map (assign) the forwarding classes to output queues.

The switch has eight output queues, queues 0 through 7. The default forwarding classes are:

- **best-effort**—Best-effort traffic
- **fcoe**—Guaranteed delivery for Fibre Channel over Ethernet traffic
- **no-loss**—Guaranteed delivery for TCP no-loss traffic
- **network-control**—Network control traffic

Map forwarding classes to queues using the **class** statement. You can map more than one forwarding class to a single queue, but all forwarding classes mapped to a particular queue must have the same packet drop attribute (all of the forwarding classes must be lossy, or all of the forwarding classes mapped to a queue must be lossless).

```
[edit class-of-service forwarding-classes]
user@switch# set class class-name queue-num queue-number <no-loss>
```

For example, to create a forwarding class named **be2** and map it to queue 1:

```
[edit class-of-service forwarding-classes]
user@switch# set class be2 queue-num 1
```

Another example is to create a lossless forwarding class named **fcoe2** and map it to queue 5:

```
[edit class-of-service forwarding-classes]
user@switch# set class fcoe2 queue-num 5 no-loss
```

#### Related Documentation

- [Example: Configuring Forwarding Classes on page 72](#)
- [Monitoring CoS Forwarding Classes on page 268](#)
- [Understanding CoS Forwarding Classes on page 67](#)
- [Understanding CoS Port Schedulers on QFX Switches](#)

---

## Example: Configuring Forwarding Classes

**Supported Platforms**   [QFX Series standalone switches](#)

Forwarding classes group packets for transmission. Forwarding classes map to output queues, so the packets assigned to a forwarding class use the output queue mapped to that forwarding class.

- [Requirements on page 72](#)
- [Overview on page 72](#)
- [Configuration on page 74](#)
- [Verification on page 74](#)

### Requirements

This example uses the following hardware and software components:

- One switch.
- Junos OS Release 15.1X53-D10 or later for the QFX Series.

### Overview

The switch supports a total of eight forwarding classes; you can configure up to six forwarding classes as lossless forwarding classes. To forward traffic, you must map (assign) the forwarding classes to output queues. The switch has eight output queues,

queues 0 through 7. The switch provides four default forwarding classes. You can define the remaining four forwarding classes and map them to output queues.

The four default forwarding classes are:

- **be**—Best-effort traffic
- **fcoe**—Guaranteed delivery for Fibre Channel over Ethernet traffic
- **no-loss**—Guaranteed delivery for TCP no-loss traffic
- **nc**—Network control traffic

Map forwarding classes to queues using the **class** statement. You can map more than one forwarding class to a single queue, but all forwarding classes mapped to a particular queue must have the same packet drop attribute (all of the forwarding classes must be lossy, or all of the forwarding classes mapped to a queue must be lossless). The statement format is:

```
[edit class-of-service forwarding-classes]
user@switch# set class class-name queue-num queue-number;
```



**NOTE:** When you configure a forwarding class and map traffic to it (that is, you are not using a default classifier and forwarding class), you must also define a scheduling policy for the forwarding class. You can configure either port scheduling or enhanced transmission selection (ETS) hierarchical port scheduling.

Defining a scheduling policy using port scheduling means:

- Mapping a scheduler to the forwarding class in a scheduler map.
- Applying the scheduler map to one or more interfaces.

Defining a scheduling policy using ETS means:

- Mapping a scheduler to the forwarding class in a scheduler map.
- Including the forwarding class in a forwarding class set.
- Associating the scheduler map with a traffic control profile.
- Attaching the traffic control profile to a forwarding class set and applying the traffic control profile to an interface.

Table 30 on page 73 shows the configuration forwarding-class-to-queue mapping for this example:

**Table 30: Forwarding-Class-to-Queue Example Configuration**

Forwarding Class	Queue
best-effort	0
be1	1

Table 30: Forwarding-Class-to-Queue Example Configuration (*continued*)

Forwarding Class	Queue
nc	7

## Configuration

To configure CoS forwarding classes:

1. Map the **best-effort** forwarding class to queue 0:

```
[edit class-of-service forwarding-classes]
user@switch# set class best-effort queue-num 0
```

2. Map the **be1** forwarding class to queue 1:

```
[edit class-of-service forwarding-classes]
user@switch# set class be1 queue-num 1
```

3. Map the **nc** forwarding class to queue 7:

```
[edit class-of-service forwarding-classes]
user@switch# set class nc queue-num 7
```

## Verification

### Verifying the Forwarding-Class-to-Queue Mapping

**Purpose** Verify the forwarding-class-to-queue mapping. (The system shows only the explicitly configured forwarding classes; it does not show default forwarding classes such as **fcoe** and **no-loss**.)

**Action** Verify the results of the forwarding class configuration using the operational mode command **show configuration class-of-service forwarding-classes**:

```
user@switch> show configuration class-of-service forwarding-classes
class best-effort queue-num 0;
class be1 queue-num 1;
class network-control queue-num 7;
```

**Related Documentation**

- [Defining CoS Forwarding Classes on page 71](#)
- [Monitoring CoS Forwarding Classes on page 268](#)
- [Understanding CoS Forwarding Classes on page 67](#)

## Understanding CoS Rewrite Rules

**Supported Platforms** EX4600, OCX1100, QFabric System, QFX Series standalone switches

As packets enter or exit a network, edge switches might be required to alter the class-of-service (CoS) settings of the packets. Rewrite rules set the value of the code point bits (Layer 3 DSCP bits, Layer 2 CoS bits, or MPLS EXP bits) within the header of the outgoing packet. Each rewrite rule:

1. Reads the current forwarding class and loss priority associated with the packet.
2. Locates the new (rewrite) code point value from a table.
3. Writes that code point value into the packet header, replacing the old code point value.

Rewrite rules must be assigned to an interface for rewrites to take effect.

You can apply (bind) one DSCP or DSCP IPv6 rewrite rule and one IEEE 802.1p rewrite rule to each interface. You can also bind EXP rewrite rules to **family mpls** logical interfaces to rewrite the CoS bits of MPLS traffic.



**NOTE:** OCX Series switches do not support MPLS and do not support EXP rewrite rules.

You cannot apply both a DSCP and a DSCP IPv6 rewrite rule to the same physical interface. Each physical interface supports only one DSCP rewrite rule. Both IP and IPv6 packets use the same DSCP rewrite rule, regardless if the configured rewrite rule is DSCP or DSCP IPv6. You can apply an EXP rewrite rule on an interface that has DSCP or IEEE rewrite rules. Only MPLS traffic on **family mpls** interfaces uses the EXP rewrite rule.

You can apply both a DSCP rewrite rule and a DSCP IPv6 rewrite rule to a logical interface. IPv6 packets are rewritten with DSCP-IPv6 rewrite-rules and IPv4 packets are remarked with DSCP rewrite-rules.



**NOTE:** There are no default rewrite rules. If you want to apply a rewrite rule to outgoing packets, you must explicitly configure the rewrite rule.

You can look at behavior aggregate (BA) classifiers and rewrite rules as two sides of the same coin. A BA classifier reads the code point bits of incoming packets and classifies the packets into forwarding classes, then the system applies the CoS configured for the forwarding class to those packets. Rewrite rules change (rewrite) the code point bits just before the packets leave the system so that the next switch or router can apply the appropriate level of CoS to the packets. When you apply a rewrite rule to an interface, the rewrite rule is the last CoS action performed on the packet before it is forwarded.

Rewrite rules alter CoS values in outgoing packets on the outbound interfaces of an edge switch to accommodate the policies of a targeted peer. This allows the downstream switch in a neighboring network to classify each packet into the appropriate service group.



**NOTE:** On each physical interface, either all forwarding classes that are being used on the interface must have rewrite rules configured or no forwarding classes that are being used on the interface can have rewrite rules configured. On any physical port, do not mix forwarding classes with rewrite rules and forwarding classes without rewrite rules.



**NOTE:** Rewrite rules are applied *before* the egress filter is matched to traffic. Because the code point rewrite occurs before the egress filter is matched to traffic, the egress filter match is based on the rewrite value, not on the original code point value in the packet.

For packets that carry both an inner VLAN tag and an outer VLAN tag, the rewrite rule rewrites only the outer VLAN tag.

MPLS EXP rewrite rules apply only to **family mpls** logical interfaces. You cannot apply to an EXP rewrite rule to a physical interface. You can configure up to 64 EXP rewrite rules, but you can only use 16 EXP rewrite rules at any time on the switch. On a given logical interface, all pushed MPLS labels have the same EXP rewrite rule applied to them. You can apply different EXP rewrite rules to different logical interfaces on the same physical interface.



**NOTE:** If the switch is performing penultimate hop popping (PHP), EXP rewrite rules do not take effect. If both an EXP classifier and an EXP rewrite rule are configured on the switch, then the EXP value from the last popped label is copied into the inner label. If either an EXP classifier or an EXP rewrite rule (but not both) is configured on the switch, then the inner label EXP value is sent unchanged.

You can configure enough rewrite rules to handle most, if not all, network scenarios. [Table 31 on page 76](#) shows how many of each type of rewrite rules you can configure, and how many entries you can configure per rewrite rule.

**Table 31: Configuring Rewrite Rules**

Rewrite Rule Type	Maximum Number of Rewrite Rules	Maximum Number of Entries per Rewrite Rule
IEEE 802.1p	64	128
DSCP	32	128
DSCP IPv6	32	128
MPLS EXP	64	128



You cannot apply rewrite rules directly to integrated routing and bridging (IRB), also known as routed VLAN interfaces (RVIs), because the members of IRBs/RVIs are VLANs, not ports. However, you can apply rewrite rules to the VLAN port members of an IRB/RVI.



**NOTE:** OCX Series switches do not support IRBs/RVIs.

**Related  
Documentation**

- [Understanding Junos CoS Components on page 9](#)
- [Defining CoS Rewrite Rules on page 77](#)
- *Configuring Rewrite Rules for MPLS EXP Classifiers*

---

## Defining CoS Rewrite Rules

**Supported Platforms**    EX4600, OCX1100, QFabric System, QFX Series standalone switches

Edge switches might need to change the class-of-service (CoS) settings of the packets. You can configure rewrite rules to alter code point bit values in outgoing packets on the outbound interfaces of a switch so that the CoS treatment matches the policies of a targeted peer. Policy matching allows the downstream routing platform or switch in a neighboring network to classify each packet into the appropriate service group.

To configure a CoS rewrite rule, create the rule by giving it a name and associating it with a forwarding class, loss priority, and code point. This creates a rewrite table. After the rewrite rule is created, enable it on an interface (EXP rewrite rules can only be enabled on **family mpls** logical interfaces, not on physical interfaces). You can also apply an existing rewrite rule on an interface.



**NOTE:** OCX Series switches do not support MPLS, so they do not support EXP rewrite rules.



**NOTE:** On each physical interface, either all forwarding classes that are being used on the interface must have rewrite rules configured, or no forwarding classes that are being used on the interface can have rewrite rules configured. On any physical port, do not mix forwarding classes with rewrite rules and forwarding classes without rewrite rules.



**NOTE:** To replace an existing rewrite rule on the interface with a new rewrite rule of the same type, first explicitly remove the existing rewrite rule and then apply the new rule.



**NOTE:** For packets that carry both an inner VLAN tag and an outer VLAN tag, the rewrite rule rewrites only the outer VLAN tag.

To create rewrite rules and enable them on interfaces:

- To create an 802.1p rewrite rule named **customup-rw** in the rewrite table for all Layer 2 interfaces:

[edit **class-of-service** **rewrite-rules**]

```
user@switch# set ieee-802.1 customup-rw forwarding-class be loss-priority low code-point 000
```

```
user@switch# set ieee-802.1 customup-rw forwarding-class be loss-priority high code-point 001
```

```
user@switch# set ieee-802.1 customup-rw forwarding-class be loss-priority low code-point 010
```

```
user@switch# set ieee-802.1 customup-rw forwarding-class fcsoe loss-priority low code-point 011
```

```
user@switch# set ieee-802.1 customup-rw forwarding-class ef-no-loss loss-priority low code-point 100
```

```
user@switch# set ieee-802.1 customup-rw forwarding-class ef-no-loss loss-priority high code-point 101
```

```

user@switch# set ieee-802.1 customup-rw forwarding-class nc loss-priority low code-point
110
user@switch# set ieee-802.1 customup-rw forwarding-class nc loss-priority high code-point
111

```

- To enable an 802.1p rewrite rule named **customup-rw** on a Layer 2 interface:

```

[edit]
user@switch# set class-of-service interfaces xe-0/0/7 unit 0 rewrite-rules ieee-802.1
customup-rw

```



**NOTE:** All forwarding classes assigned to port xe-0/0/7 must have rewrite rules. Do not mix forwarding classes that have rewrite rules with forwarding classes that do not have rewrite rules on the same physical interface.

- To enable an 802.1p rewrite rule named **customup-rw** on all 10-Gigabit Ethernet interfaces on the switch, use wildcards for the interface name and logical interface (unit) number:

```

[edit]
user@switch# set class-of-service interfaces xe-* unit * rewrite-rules customup-rw

```



**NOTE:** In this case, *all* forwarding classes assigned to *all* 10-Gigabit Ethernet ports must have rewrite rules. Do not mix forwarding classes that have rewrite rules with forwarding classes that do not have rewrite rules on the same physical interface.

#### Related Documentation

- [Monitoring CoS Rewrite Rules on page 271](#)
- [Configuring Rewrite Rules for MPLS EXP Classifiers](#)
- [Understanding CoS Rewrite Rules on page 74](#)
- [Understanding CoS MPLS EXP Classifiers and Rewrite Rules](#)

## Troubleshooting an Unexpected Rewrite Value

**Supported Platforms** EX4600, OCX1100, QFabric System, QFX Series standalone switches

**Problem** **Description:** Traffic from one or more forwarding classes on an egress port is assigned an unexpected rewrite value.



**NOTE:** For packets that carry both an inner VLAN tag and an outer VLAN tag, the rewrite rules rewrite only the outer VLAN tag.

**Cause** If you configure a rewrite rule for a forwarding class on an egress port, but you do not configure a rewrite rule for every forwarding class on that egress port, then the forwarding classes that do not have a configured rewrite rule are assigned random rewrite values.

For example:

1. Configure forwarding classes **fc1**, **fc2**, and **fc3**.
2. Configure rewrite rules for forwarding classes **fc1** and **fc2**, but not for forwarding class **fc3**.
3. Assign forwarding classes **fc1**, **fc2**, and **fc3** to a port.

When traffic for these forwarding classes flows through the port, traffic for forwarding classes **fc1** and **fc2** is rewritten correctly. However, traffic for forwarding class **fc3** is assigned a random rewrite value.

**Solution** If any forwarding class on an egress port has a configured rewrite rule, then all forwarding classes on that egress port must have a configured rewrite rule. Configuring a rewrite rule for any forwarding class that is assigned a random rewrite value solves the problem.



**TIP:** If you want the forwarding class to use the same code point value assigned to it by the ingress classifier, specify that value as the rewrite rule value. For example, if a forwarding class has the IEEE 802.1 ingress classifier code point value 011, configure a rewrite rule for that forwarding class that uses the IEEE 802.1p code point value 011.



**NOTE:** There are no default rewrite rules. You can bind one rewrite rule for DSCP traffic and one rewrite rule for IEEE 802.1p traffic to an interface. A rewrite rule can contain multiple forwarding-class-to-rewrite-value mappings.

1. To assign a rewrite value to a forwarding class, add the new rewrite value to the same rewrite rule as the other forwarding classes on the port:

```
[edit class-of-service rewrite-rules]
user@switch# set (dscp | ieee-802.1) rewrite-name forwarding-class class-name loss-priority
priority code-point (alias | bits)
```

For example, if the other forwarding classes on the port use rewrite values defined in the rewrite rule **custom-rw**, the forwarding class **be2** is being randomly rewritten, and you want to use IEEE 802.1 code point **002** for the **be2** forwarding class:

```
[edit class-of-service rewrite-rules]
user@switch# set ieee-802.1 custom-rw forwarding-class be2 loss-priority low code-point
002
```

2. Enable the rewrite rule on an interface if it is not already enabled on the desired interface:

```
[edit]
user@switch# set class-of-service interfaces interface-name unit unit rewrite-rules (dscp |
ieee-802.1) rewrite-rule-name
```

For example, to enable the rewrite rule **custom-rw** on interface **xe-0/0/24.0**:

```
[edit]
user@switch# set class-of-service interfaces xe-0/0/24 unit 0 rewrite-rules ieee-802.1
custom-rw
```

**Related  
Documentation**

- [interfaces on page 160](#)
- [rewrite-rules on page 166](#)
- [Defining CoS Rewrite Rules on page 77](#)
- [Monitoring CoS Rewrite Rules on page 271](#)



## PART 3

# Scheduling Traffic

- [Using Schedulers on page 85](#)





## CHAPTER 3

# Using Schedulers

- [Understanding Default CoS Scheduling and Classification on page 85](#)
- [Understanding CoS Scheduling Behavior and Configuration Considerations on page 91](#)
- [Defining CoS Queue Schedulers for Port Scheduling on page 97](#)
- [Defining CoS Queue Scheduling Priority on page 100](#)
- [Example: Configuring Queue Scheduling Priority on page 102](#)
- [Understanding CoS Traffic Control Profiles on page 105](#)
- [Understanding CoS Priority Group Scheduling on page 107](#)
- [Defining CoS Traffic Control Profiles \(Priority Group Scheduling\) on page 110](#)
- [Example: Configuring Traffic Control Profiles \(Priority Group Scheduling\) on page 111](#)
- [Understanding CoS Priority Group and Queue Guaranteed Minimum Bandwidth on page 114](#)
- [Example: Configuring Minimum Guaranteed Output Bandwidth on page 117](#)
- [Understanding CoS Priority Group Shaping and Queue Shaping \(Maximum Bandwidth\) on page 121](#)
- [Example: Configuring Maximum Output Bandwidth on page 124](#)

## Understanding Default CoS Scheduling and Classification

---

**Supported Platforms**   [QFX Series standalone switches](#)

If you do not explicitly configure classifiers and apply them to interfaces, the switch uses the default classifier to group ingress traffic into forwarding classes. If you do not configure scheduling on an interface, the switch uses the default schedulers to provide egress port resources for traffic. Default classification maps all traffic into the default forwarding classes (best-effort, fcoe, no-loss, and network-control). Each default forwarding class has a default scheduler, so traffic mapped to each default forwarding class receives port bandwidth, prioritization, and packet drop characteristics.

The switch supports direct port scheduling and enhanced transmission selection (ETS), also known as hierarchical port scheduling.

Hierarchical scheduling groups IEEE 802.1p priorities (IEEE 802.1p code points, which classifiers map to forwarding classes, which in turn are mapped to output queues) into priority groups (forwarding class sets). If you use only the default traffic scheduling and classification, the switch automatically creates a default priority group that contains all of the priorities (which are mapped to forwarding classes and output queues), and assigns 100 percent of the port output bandwidth to that priority group. The forwarding classes (queues) in the default forwarding class set receive bandwidth based on the default classifier settings. The default priority group is transparent. It does not appear in the configuration and is used for Data Center Bridging Capability Exchange (DCBX) protocol advertisement.



.....

**NOTE:** If you explicitly configure ETS by configuring one or more priority groups on an interface, any forwarding class that is not assigned to a priority group on that interface receives *no bandwidth*. This means that if you configure hierarchical scheduling on an interface, every forwarding class (priority) that you want to forward traffic on that interface must belong to a forwarding class set (priority group). ETS is not supported on QFX5200.

.....

This topic describes:

- [Default Classification on page 86](#)
- [Default Scheduling on page 89](#)
- [Default DCBX Advertisement on page 91](#)
- [Default Scheduling and Classification Summary on page 91](#)

## Default Classification

The default classifiers assign ingress traffic to default forwarding classes and loss priorities. The switch applies default IEEE 802.1, DSCP, and DSCP IPv6 classifiers to each interface that does not have explicitly configured classifiers. If you do not configure and apply EXP classifiers for MPLS traffic to logical interfaces, MPLS traffic on interfaces configured as **family mpls** uses the IEEE classifier.

If you explicitly configure one type of classifier but not other types of classifiers, the system uses only the configured classifier and does not use default classifiers for other types of traffic. There are two default IEEE 802.1 classifiers, a trusted classifier for ports that are in trunk mode, and an untrusted classifier for ports that are in access mode.

Table 19 on page 47 shows the default mapping of IEEE 802.1 code-point values to forwarding classes and loss priorities for ports in trunk mode.

**Table 32: Default IEEE 802.1 Classifiers for Ports in Trunk Mode (Trusted Classifier)**

Code Point	Forwarding Class	Loss Priority
be (000)	best-effort	low
be1 (001)	best-effort	low
ef (010)	best-effort	low
ef1 (011)	fcoe	low
af11 (100)	no-loss	low
af12 (101)	best-effort	low
nc1 (110)	network-control	low
nc2 (111)	network-control	low

Table 20 on page 47 shows the default mapping of IEEE 802.1p code-point values to forwarding classes and loss priorities for ports in access mode (all incoming traffic is mapped to best-effort forwarding classes).

**Table 33: Default IEEE 802.1 Classifiers for Ports in Access Mode (Untrusted Classifier)**

Code Point	Forwarding Class	Loss Priority
000	best-effort	low
001	best-effort	low
010	best-effort	low
011	best-effort	low
100	best-effort	low
101	best-effort	low
110	best-effort	low
111	best-effort	low

Table 21 on page 48 shows the default mapping of DSCP code-point values to forwarding classes and loss priorities for DSCP IP and DCSP IPv6.

Table 34: Default DSCP IP and IPv6 Classifiers

Code Point	Forwarding Class	Loss Priority
ef (101110)	best-effort	low
af11 (001010)	best-effort	low
af12 (001100)	best-effort	low
af13 (001110)	best-effort	low
af21 (010010)	best-effort	low
af22 (010100)	best-effort	low
af23 (010110)	best-effort	low
af31 (011010)	best-effort	low
af32 (011100)	best-effort	low
af33 (011110)	best-effort	low
af41 (100010)	best-effort	low
af42 (100100)	best-effort	low
af43 (100110)	best-effort	low
be (000000)	best-effort	low
cs1 (001000)	best-effort	low
cs2 (010000)	best-effort	low
cs3 (011000)	best-effort	low
cs4 (100000)	best-effort	low
cs5 (101000)	best-effort	low
nc1 (110000)	network-control	low
nc2 (111000)	network-control	low

Table 22 on page 49 shows the default mapping of MPLS EXP code-point values to forwarding classes and loss priorities.

Table 35: Default EXP Classifiers

Code Point	Forwarding Class	Loss Priority
000	best-effort	low
001	best-effort	high
010	expedited-forwarding	low
011	expedited-forwarding	high
100	assured-forwarding	low
101	assured-forwarding	high
110	network-control	low
111	network-control	high

## Default Scheduling

The default schedulers allocate egress bandwidth resources to egress traffic as shown in [Table 23 on page 49](#):

Table 36: Default Scheduler Configuration

Default Scheduler and Queue Number	Transmit Rate (Guaranteed Minimum Bandwidth)	Rate Shaping (Maximum Bandwidth)	Excess Bandwidth Sharing	Priority	Buffer Size
best-effort forwarding class scheduler (queue 0)	15%	None	15%	low	15%
fcoe forwarding class scheduler (queue 3)	35%	None	35%	low	35%
no-loss forwarding class scheduler (queue 4)	35%	None	35%	low	35%
network-control forwarding class scheduler (queue 7)	15%	None	15%	low	15%



**NOTE:** By default, the minimum guaranteed bandwidth (transmit rate) determines the amount of excess (extra) bandwidth a queue can share. Extra bandwidth is allocated to queues in proportion to the transmit rate of each queue. On switches that support the excess-rate statement, you can override the default setting and configure the excess bandwidth percentage independently of the transmit rate on queues that are not strict-high priority queues.

By default, only the four default schedulers shown in [Table 23 on page 49](#) have traffic mapped to them. Only the forwarding classes and queues associated with the default schedulers receive default bandwidth, based on the default scheduler transmit rate. (You can configure schedulers and forwarding classes to allocate bandwidth to other queues or to change the bandwidth and other scheduling properties of a default queue.) If a forwarding class does not transport traffic, the bandwidth allocated to that forwarding class is available to other forwarding classes. Unicast and multidestination (multicast, broadcast, and destination lookup fail) traffic use the same forwarding classes and output queues.

Default scheduling is port scheduling.

Default hierarchical scheduling, known as enhanced transmission selection (ETS, defined in IEEE 802.1Qaz), allocates the total port bandwidth to the four default forwarding classes served by the four default schedulers, as defined by the four default schedulers. The result is the same as direct port scheduling. Configuring hierarchical port scheduling, however, enables you to group forwarding classes that carry similar types of traffic into forwarding class sets (also called priority groups), and to assign port bandwidth to each forwarding class set. The port bandwidth assigned to the forwarding class set is then assigned to the forwarding classes within the forwarding class set. This hierarchy enables you to control port bandwidth allocation with greater granularity, and enables hierarchical sharing of extra bandwidth to better utilize link bandwidth.

Default scheduling uses weighted round-robin (WRR) scheduling. Each queue receives a portion (weight) of the total available interface bandwidth. The scheduling weight is based on the transmit rate (minimum guaranteed bandwidth) of the default scheduler for that queue. For example, queue 7 receives a default scheduling weight of 15 percent of the available bandwidth, and queue 4 receives a default scheduling weight of 35 percent of the available bandwidth. Queues are mapped to forwarding classes (for example, queue 7 is mapped to the network-control forwarding class and queue 4 is mapped to the no-loss forwarding class). Each forwarding class receives the default bandwidth for the queue to which it is mapped. Unused bandwidth is shared with other default queues.

If you want non-default (unconfigured) queues to forward traffic, you should explicitly map traffic to those queues (configure the forwarding classes and queue mapping) and create schedulers to allocate bandwidth to those queues. By default, queues 1, 2, 5, and 6 are unconfigured. Unconfigured queues have a default scheduling weight of 1 so that they can receive a small amount of bandwidth in case they need to forward traffic.

If you map traffic to an unconfigured queue and do not schedule port resources for the queue (configure a scheduler, map it to the forwarding class that is mapped to the queue, and apply the scheduler mapping to the port), the queue receives only the amount of excess bandwidth proportional to its default weight (1). The actual amount of bandwidth an unconfigured queue gets depends on how much bandwidth the other queues on the port are using.

If the other queues use less than their allocated amount of bandwidth, the unconfigured queues can share the unused bandwidth. Configured queues have higher priority for bandwidth than unconfigured queues, so if a configured queue needs more bandwidth, then less bandwidth is available for unconfigured queues. Unconfigured queues always

receive a minimum amount of bandwidth based on their scheduling weight (1). If you map traffic to an unconfigured queue, to allocate bandwidth to that queue, configure a scheduler for the forwarding class that is mapped to the queue, and apply it to the port.

## Default DCBX Advertisement

When you configure hierarchical scheduling on an interface, DCBX advertises each priority group, the priorities in each priority group, and the bandwidth properties of each priority and priority group.

If you do not configure hierarchical scheduling on an interface, DCBX advertises the automatically created default priority group and its priorities. DCBX also advertises the default bandwidth allocation of the priority group, which is 100 percent of the port bandwidth.

## Default Scheduling and Classification Summary

If you do not configure scheduling on an interface:

- Default classifiers classify ingress traffic.
- Default schedulers schedule egress traffic.
- DCBX advertises a single default priority group with 100 percent of the port bandwidth allocated to that priority group. All priorities (forwarding classes) are assigned to the default priority group and receive bandwidth based on their default schedulers. The default priority group is generated automatically and is not user-configurable.

### Related Documentation

- [Understanding CoS Packet Flow on page 15](#)
- [Understanding CoS Hierarchical Port Scheduling \(ETS\)](#)
- [Understanding Default CoS Settings on page 18](#)
- [CoS Support on QFX Series Switches, EX4600 Switches, and QFabric Systems](#)
- [Understanding CoS Virtual Output Queues \(VOQs\) on QFX10000 Switches](#)
- [Understanding Applying CoS Classifiers and Rewrite Rules to Interfaces on page 51](#)
- [Understanding DCB Features and Requirements](#)
- [Example: Configuring Classifiers on page 43](#)
- [Example: Configuring Queue Schedulers for Port Scheduling](#)

---

## Understanding CoS Scheduling Behavior and Configuration Considerations

**Supported Platforms**    [EX4600, OCX1100, QFabric System, QFX Series standalone switches](#)

Many factors affect scheduling configuration and bandwidth requirements, including:

- When you configure bandwidth for a forwarding class (each forwarding class is mapped to a queue) or a forwarding class set (priority group), the switch considers only the data as the configured bandwidth. The switch does not account for the bandwidth consumed by the preamble and the interframe gap (IFG). Therefore, when you calculate and configure the bandwidth requirements for a forwarding class or for a forwarding class set, consider the preamble and the IFG as well as the data in the calculations.
- When you configure a forwarding class to carry traffic on the switch (instead of using only default forwarding classes), you must also define a scheduling policy for the user-configured forwarding class. Some switches support enhanced transmission selection (ETS) hierarchical port scheduling, some switches support direct port scheduling, and some switches support both methods of scheduling.

For ETS hierarchical port scheduling, defining a hierarchical scheduling policy using ETS means:

- Mapping a scheduler to the forwarding class in a scheduler map
- Including the forwarding class in a forwarding class set
- Associating the scheduler map with a traffic control profile
- Attaching the traffic control profile to a forwarding class set and an interface

On switches that support port scheduling, defining a scheduling policy means:

- Mapping a scheduler to the forwarding class in a scheduler map.
- Applying the scheduler map to one or more interfaces.
- On each physical interface, either all forwarding classes that are being used on the interface must have rewrite rules configured, or no forwarding classes that are being used on the interface can have rewrite rules configured. On any physical port, do not mix forwarding classes with rewrite rules and forwarding classes without rewrite rules.
- For packets that carry both an inner VLAN tag and an outer VLAN tag, rewrite rules rewrite only the outer VLAN tag.
- For ETS hierarchical port scheduling, configuring the minimum guaranteed bandwidth (**transmit-rate**) for a forwarding class does not work unless you also configure the minimum guaranteed bandwidth (**guaranteed-rate**) for the forwarding class set in the traffic control profile.

Additionally, the sum of the transmit rates of the forwarding classes in a forwarding class set should not exceed the guaranteed rate for the forwarding class set. (You cannot guarantee a minimum bandwidth for the queues that is greater than the minimum bandwidth guaranteed for the entire set of queues.) If you configure transmit rates whose sum exceeds the guaranteed rate of the forwarding class set, the commit check fails and the system rejects the configuration.

- For ETS hierarchical port scheduling, the sum of the forwarding class set guaranteed rates cannot exceed the total port bandwidth. If you configure guaranteed rates whose sum exceeds the port bandwidth, the system sends a syslog message to notify you that the configuration is not valid. However, the system does not perform a commit



check. If you commit a configuration in which the sum of the guaranteed rates exceeds the port bandwidth, the hierarchical scheduler behaves unpredictably.

- For ETS hierarchical port scheduling, if you configure the **guaranteed-rate** of a forwarding class set as a percentage, configure all of the transmit rates associated with that forwarding class set as percentages. In this case, if any of the transmit rates are configured as absolute values instead of percentages, the configuration is not valid and the system sends a syslog message.
- There are several factors to consider if you want to configure a strict-high priority queue (forwarding class):

- You can configure only one strict-high priority queue (forwarding class) on QFX5200, QFX5100, EX4600, QFX3500, and QFX3600 switches, and on QFabric systems.

On QFX10000 switches, there is no limit to the number of strict-high priority queues you can configure.

- You cannot configure a minimum guaranteed bandwidth (**transmit-rate**) for a strict-high priority queue on QFX5200, QFX5100, EX4600, QFX3500, and QFX3600 switches, and on QFabric systems.

On QFX5200 and QFX10000 switches, you can set the **transmit-rate** on strict-high priority queues to set a limit on the amount of traffic that the queue treats as strict-high priority traffic. Traffic in excess of the **transmit-rate** is treated as best-effort traffic, and receives an excess bandwidth sharing weight of “1”, which is the proportion of extra bandwidth the strict-high priority queue can share on the port. Queues that are not strict-high priority queues use the transmit rate (default) or the configured excess rate to determine the proportion (weight) of extra port bandwidth the queue can share. However, you cannot configure an excess rate on a strict-high priority queue, and you cannot change the excess bandwidth sharing weight of “1” on a strict-high priority queue.

For ETS hierarchical port scheduling, you cannot configure a minimum guaranteed bandwidth (**guaranteed-rate**) for a forwarding class set that includes a strict-high priority queue.

- Except on QFX10000 switches, for ETS hierarchical port scheduling only, you must create a separate forwarding class set for a strict-high priority queue. On QFX10000 switches, you can mix strict-high priority and low priority queues in the same forwarding class set.
- Except on QFX10000 switches, for ETS hierarchical port scheduling, only one forwarding class set can contain a strict-high priority queue. On QFX10000 switches, this restriction does not apply.
- Except on QFX10000 switches, for ETS hierarchical port scheduling, a strict-high priority queue cannot belong to the same forwarding class set as queues that are not strict-high priority. (You cannot mix a strict-high priority forwarding class with forwarding classes that are not strict-high priority in one forwarding class set.) On QFX10000 switches, you can mix strict-high priority and low priority queues in the same forwarding class set.
- For ETS hierarchical port scheduling on switches that use different forwarding class sets for unicast and multdestination (multicast, broadcast, and destination lookup

fail) traffic, a strict-high priority queue cannot belong to a multidestination forwarding class set.

- On QFX10000 systems, we recommend that you always configure a transmit rate on strict-high priority queues to prevent them from starving other queues. If you do not apply a transmit rate to limit the amount of bandwidth strict-high priority queues can use, then strict-high priority queues can use all of the available port bandwidth and starve other queues on the port.

On QFX5200, QFX5100, EX4600, QFX3500, and QFX3600 switches, and on QFabric systems, we recommend that you always apply a shaping rate to the strict-high priority queue to prevent it from starving other queues. If you do not apply a shaping rate to limit the amount of bandwidth a strict-high priority queue can use, then the strict-high priority queue can use all of the available port bandwidth and starve other queues on the port.

- On QFabric systems, if any queue that contains outgoing packets does not transmit packets for 12 consecutive seconds, the port automatically resets. Failure of a queue to transmit packets for 12 consecutive seconds might be due to:
  - A strict-high priority queue consuming all of the port bandwidth
  - Several queues consuming all of the port bandwidth
  - Any queue or port receiving continuous priority-based flow control (PFC) or 802.3x Ethernet PAUSE messages (received PFC and PAUSE messages prevent a queue or a port, respectively, from transmitting packets because of network congestion)
  - Other conditions that prevent a queue from obtaining port bandwidth for 12 consecutive seconds

If the cause is a strict-high priority queue consuming all of the port bandwidth, use rate shaping to configure a maximum rate for the strict-high priority queue and prevent it from using all of the port bandwidth. To configure rate shaping, include the **shaping-rate (rate | percent percentage)** statement at the **[edit class-of-service schedulers scheduler-name]** hierarchy level and apply the shaping rate to the strict-high priority scheduler. We recommend that you always apply a shaping rate to strict-high priority traffic to prevent the strict-high priority queue from starving other queues.

If several queues consume all of the port bandwidth, you can use a scheduler to rate shape those queues and prevent them from using all of the port bandwidth.

- For transmit rates below 1 Gbps, we recommend that you configure the transmit rate as a percentage instead of as a fixed rate. This is because the system converts fixed rates into percentages and might round small fixed rates to a lower percentage. For example, a fixed rate of 350 Mbps is rounded down to 3 percent instead of 3.5 percent.
- When you set the maximum bandwidth for a queue or for a priority group (**shaping-rate**) at 100 Kbps or lower, the traffic shaping behavior is accurate only within +/– 20 percent of the configured **shaping-rate**.
- On QFX10000 switches, configuring rate shaping (**[set class-of-service schedulers scheduler-name transmit-rate (rate | percent percentage) exact]**) on a LAG interface using the **[edit class-of-service interfaces lag-interface-name scheduler-map scheduler-map-name]**

statement can result in scheduled traffic streams receiving more LAG link bandwidth than expected.

You configure rate shaping in a scheduler to set the maximum bandwidth for traffic assigned to a forwarding class on a particular output queue on a port. For example, you can use a scheduler to configure rate shaping on traffic assigned to the best-effort forwarding class mapped to queue 0, and then apply the scheduler to an interface using a scheduler map, to set the maximum bandwidth for best-effort traffic mapped to queue 0 on that port. Traffic in the best-effort forwarding can use no more than the amount of port bandwidth specified by the transmit rate when you use the **exact** option.

LAG interfaces are composed of two or more Ethernet links bundled together to function as a single interface. The switch can hash traffic entering a LAG interface onto any member link in the LAG interface. When you configure rate shaping and apply it to a LAG interface, the way that the switch applies the rate shaping to traffic depends on how the switch hashes the traffic onto the LAG links.

To illustrate how link hashing affects the way the switch applies a shaping rate to LAG traffic, let's look at a LAG interface (**ae0**) that has two member links (**xe-0/0/20** and **xe-0/0/21**). On LAG **ae0**, we configure rate shaping of **2g** for traffic assigned to the **best-effort** forwarding class, which is mapped to output queue **0**. When traffic in the **best-effort** forwarding class reaches the LAG interface, the switch hashes the traffic onto one of the two member links.

If the switch hashes all of the **best-effort** traffic onto the same LAG link, the traffic receives a maximum of 2g bandwidth on that link. In this case, the intended cumulative limit of 2g for best-effort traffic on the LAG is enforced.

However, if the switch hashes the **best-effort** traffic onto both of the LAG links, the traffic receives a maximum of 2g bandwidth on *each* LAG link, not 2g as a cumulative total for the entire LAG, so the best-effort traffic receives a maximum of 4g on the LAG, not the 2g set by the rate shaping configuration. When hashing spreads the traffic assigned to an output queue (which is mapped to a forwarding class) across multiple LAG links, the effective rate shaping (cumulative maximum bandwidth) on the LAG is:

(number of LAG member interfaces) x (rate shaping for the output queue) = cumulative LAG rate shaping

- On switches that do not use virtual output queues (VOQs), ingress port congestion can occur during periods of egress port congestion if an ingress port forwards traffic to more than one egress port, and at least one of those egress ports experiences congestion. If this occurs, the congested egress port can cause the ingress port to exceed its fair allocation of ingress buffer resources. When the ingress port exceeds its buffer resource allocation, frames are dropped at the ingress. Ingress port frame drop affects not only the congested egress ports, but also all of the egress ports to which the congested ingress port forwards traffic.

If a congested ingress port drops traffic that is destined for one or more uncongested egress ports, configure a weighted random early detection (WRED) drop profile and apply it to the egress queue that is causing the congestion. The drop profile prevents the congested egress queue from affecting egress queues on other ports by dropping frames at the egress instead of causing congestion at the ingress port.



**NOTE:** On systems that support lossless transport, do not configure drop profiles for lossless forwarding classes such as the default **fcoe** and **no-loss** forwarding classes. FCoE and other lossless traffic queues require lossless behavior. Use priority-based flow control (PFC) to prevent frame drop on lossless priorities.

- On systems that use different classifiers for unicast and multdestination traffic and that support lossless transport, on an ingress port, do not configure classifiers that map the same IEEE 802.1p code point to both a multdestination traffic flow and a lossless unicast traffic flow (such as the default lossless **fcoe** or **no-loss** forwarding classes). Any code point used for multdestination traffic on a port should not be used to classify unicast traffic into a lossless forwarding class on the same port.

If a multdestination traffic flow and a lossless unicast traffic flow use the same code point on a port, the multdestination traffic is treated the same way as the lossless traffic. For example, if priority-based flow control (PFC) is applied to the lossless traffic, the multdestination traffic of the same code point is also paused. During periods of congestion, treating multdestination traffic the same as lossless unicast traffic can create ingress port congestion for the multdestination traffic and affect the multdestination traffic on all of the egress ports the multdestination traffic uses.

For example, the following configuration can cause ingress port congestion for the multdestination flow:

- For unicast traffic, IEEE 802.1p code point 011 is classified into the **fcoe** forwarding class:  

```
user@switch# set class-of-service classifiers ieee-802.1 ucast-cl forwarding-class fcoe loss-priority low code-points 011
```
- For multdestination traffic, IEEE 802.1p code point 011 is classified into the **mcast** forwarding class:  

```
user@switch# set class-of-service classifiers ieee-802.1 mcast-cl forwarding-class mcast loss-priority low code-points 011
```
- The unicast classifier that maps traffic with code point 011 to the **fcoe** forwarding class is mapped to interface **xe-0/0/1**:  

```
user@switch# set class-of-service interfaces xe-0/0/1 unit 0 classifiers ieee-802.1 ucast-cl
```
- The multdestination classifier that maps traffic with code point 011 to the **mcast** forwarding class is mapped to all interfaces (multdestination traffic maps to all interfaces and cannot be mapped to individual interfaces):  

```
user@switch# set class-of-service multi-destination classifiers ieee-802.1 mcast-cl
```

Because the same code point (011) maps unicast traffic to a lossless traffic flow and also maps multdestination traffic to a multdestination traffic flow, the multdestination traffic flow might experience ingress port congestion during periods of congestion.

To avoid ingress port congestion, do not map the code point used by the multdestination traffic to lossless unicast traffic. For example:

1. Instead of classifying code point 011 into the **fcoe** forwarding class, classify code point 011 into the **best-effort** forwarding class:

```
user@switch# set class-of-service classifiers ieee-802.1 ucast-cl forwarding-class  
best-effort loss-priority low code-points 011
```

2. user@switch# set class-of-service classifiers ieee-802.1 mcast-cl forwarding-class mcast  
loss-priority low code-points 011
3. user@switch# set class-of-service interfaces xe-0/0/1 unit 0 classifiers ieee-802.1 ucast-cl
4. user@switch# set class-of-service multi-destination classifiers ieee-802.1 mcast-cl

Because the code point 011 does not map unicast traffic to a lossless traffic flow, the multidestination traffic flow does not experience ingress port congestion during periods of congestion.

The best practice is to classify unicast traffic with IEEE 802.1p code points that are also used for multidestination traffic into best-effort forwarding classes.

---

## Defining CoS Queue Schedulers for Port Scheduling

### Supported Platforms [QFX Series standalone switches](#)

Schedulers define the CoS properties of output queues. You configure CoS properties in a scheduler, then map the scheduler to a forwarding class. Forwarding classes are in turn mapped to output queues. Classifiers map incoming traffic into forwarding classes based on IEEE 802.1p, DSCP, or EXP code points. CoS scheduling properties include the amount of interface bandwidth assigned to the queue, the priority of the queue, whether explicit congestion notification (ECN) is enabled on the queue, and the WRED packet drop profiles associated with the queue.

The parameters you configure in a scheduler define the following characteristics for the queues mapped to the scheduler:

- **priority**—One of two bandwidth priorities that queues associated with a scheduler can receive:
  - **low**—The scheduler has low priority.
  - **strict-high**—The scheduler has strict-high priority. Strict-high priority queues receive preferential treatment over low-priority queues and receive all of their configured bandwidth before low-priority queues are serviced. Low-priority queues do not transmit traffic until strict-high priority queues are empty.



**NOTE:** We strongly recommend that you configure a transmit rate on all strict-high priority queues to limit the amount of traffic the switch treats as strict-high priority traffic and prevent strict-high priority queues from starving other queues on the port. This is especially important if you configure more than one strict-high priority queue on a port. If you do not configure a transmit rate to limit the amount of bandwidth strict-high priority queues can use, then the strict-high priority queues can use all of the available port bandwidth and starve other queues on the port.

The switch treats traffic in excess of the transmit rate as best-effort traffic that receives bandwidth from the leftover (excess) port bandwidth pool. On strict-high priority queues, all traffic that exceeds the transmit rate shares in the port excess bandwidth pool based on the strict-high priority excess bandwidth sharing weight of “1”, which is not configurable. The actual amount of extra bandwidth that traffic exceeding the transmit rate receives depends on how many other queues consume excess bandwidth and the excess rates of those queues.

- **transmit-rate**—Minimum guaranteed bandwidth, also known as the *committed information rate (CIR)*, set as a percentage rate or as an absolute value in bits per second. By default, the transmit rate also determines the amount of excess (extra) port bandwidth the queue can share if you do not explicitly configure an excess rate. Extra bandwidth is allocated among the queues on the port in proportion to the transmit rate of each queue. On queues that are not strict-high priority queues, you can configure a transmit rate as **exact**, which shapes the transmission by setting the transmit rate as the maximum bandwidth the queue can consume on the port.

On strict-high priority queues, the transmit rate sets the amount of bandwidth used for strict-high priority forwarding; traffic in excess of the transmit rate is treated as best-effort traffic that receives the queue excess rate.



**NOTE:** Include the preamble bytes and interframe gap (IFG) bytes as well as the data bytes in your bandwidth calculations.

- **excess-rate**—Percentage of extra bandwidth (bandwidth that is not used by other queues) a low-priority queue can receive. If not set, the switch uses the transmit rate to determine extra bandwidth sharing. You cannot set an excess rate on a strict-high priority queue.
- **drop-profile-map**—Drop profile mapping to a packet loss priority to apply WRED to the scheduler and control packet drop for different packet loss priorities during periods of congestion.

- **buffer-size**—Size of the queue buffer as a percentage of the dedicated buffer space on the port, or as a proportional share of the dedicated buffer space on the port that remains after the explicitly configured queues are served.
- **explicit-congestion-notification**—ECN enable on a best-effort queue. ECN enables end-to-end congestion notification between two ECN-enabled endpoints on TCP/IP based networks. ECN must be enabled on both endpoints and on all of the intermediate devices between the endpoints for ECN to work properly. ECN is disabled by default.



**NOTE:** Do not configure drop profiles for the `fcoe` and `no-loss` forwarding classes. FCoE and other lossless traffic queues require lossless behavior. Use priority-based flow control (PFC) to prevent frame drop on lossless priorities.

To apply scheduling properties to traffic, map schedulers to forwarding classes using a scheduler map, and then apply the scheduler map to interfaces. Using different scheduler maps, you can map different schedulers to the same forwarding class on different interfaces, to apply different scheduling to that traffic on different interfaces.

To configure a scheduler using the CLI:

1. Name the scheduler and set the minimum guaranteed bandwidth for the queue; optionally, set a maximum bandwidth limit (shaping rate) on a low priority queue by specifying the **exact** option:

```
[edit class-of-service]
user@switch# set schedulers scheduler-name transmit-rate (rate | percent percentage)
<exact>
```

2. Set the amount of excess bandwidth a low-priority queue can share:

```
[edit class-of-service]
user@switch# set schedulers scheduler-name excess-rate percent percentage
```

3. Set the queue priority:

```
[edit class-of-service schedulers scheduler-name]
user@switch# set priority level
```

4. Specify drop profiles for packet loss priorities using a drop profile map:

```
[edit class-of-service schedulers scheduler-name]
user@switch# set drop-profile-map loss-priority (low | medium-high | high) drop-profile
drop-profile-name
```

5. Configure the size of the buffer space for the queue:

```
[edit class-of-service schedulers scheduler-name]
user@switch# set buffer-size (percent percent | remainder)
```

6. Enable ECN, if desired (on best-effort traffic only):

```
[edit class-of-service schedulers scheduler-name]
user@switch# set explicit-congestion-notification
```

7. Configure a scheduler map to map the scheduler to a forwarding class, which applies the scheduler's properties to the traffic in that forwarding class:

```
[edit class-of-service]
```

```
user@switch# set scheduler-maps scheduler-map-name forwarding-class  
forwarding-class-name scheduler scheduler-name
```

8. Assign the scheduler map and its associated schedulers to one or more interfaces.

```
[edit class-of-service]  
user@switch# set interfaces interface-name scheduler-map scheduler-map-name
```

**Related  
Documentation**

- *Example: Configuring Queue Schedulers for Port Scheduling*
- *Example: Configuring ECN*
- [Defining CoS Queue Scheduling Priority on page 100](#)
- *Configuring CoS WRED Drop Profiles*
- [Monitoring CoS Scheduler Maps on page 325](#)
- *Understanding CoS Port Schedulers on QFX Switches*
- *Understanding CoS Explicit Congestion Notification*

---

## Defining CoS Queue Scheduling Priority

**Supported Platforms**    EX4600, OCX1100, QFabric System, QFX Series standalone switches



You can configure the scheduling priority of individual queues by specifying the priority in a scheduler, and then associating the scheduler with a queue by using a scheduler map.



**NOTE:** By default, all queues are low priority queues.

The switch services low priority queues after servicing any queue that has strict-high priority traffic. Strict-high priority queues receive preferential treatment over all other queues and receive all of their configured bandwidth before other queues are serviced. Low-priority queues do not transmit traffic until strict-high priority queues are empty, and receive the bandwidth that remains after the strict-high queues have been serviced.

Different switches handle traffic configured as **strict-high** priority traffic in different ways:

- QFX5100, QFX5200, QFX3500, QFX3600, and EX4600 switches, and QFabric systems—You can configure only one queue as a strict-high priority queue.

On these switches, we recommend that you always apply a shaping rate to strict-high priority queues to prevent them from starving other queues. If you do not apply a shaping rate to limit the amount of bandwidth a strict-high priority queue can use, then the strict-high priority queue can use all of the available port bandwidth and starve other queues on the port.

- QFX10000 switches—You can configure as many queues as you want as strict-high priority. However, keep in mind that too much strict-high priority traffic can starve low priority queues on the port.



**NOTE:** We strongly recommend that you configure a transmit rate on all strict-high priority queues to limit the amount of traffic the switch treats as strict-high priority traffic and prevent strict-high priority queues from starving other queues on the port. This is especially important if you configure more than one strict-high priority queue on a port. If you do not configure a transmit rate to limit the amount of bandwidth strict-high priority queues can use, then the strict-high priority queues can use all of the available port bandwidth and starve other queues on the port.

The switch treats traffic in excess of the transmit rate as best-effort traffic that receives bandwidth from the leftover (excess) port bandwidth pool. On strict-high priority queues, all traffic that exceeds the transmit rate shares in the port excess bandwidth pool based on the strict-high priority excess bandwidth sharing weight of “1”, which is not configurable. The actual amount of extra bandwidth that traffic exceeding the transmit rate receives depends on how many other queues consume excess bandwidth and the excess rates of those queues.

- To configure queue priority using the CLI:

```
[edit class-of-service]
user@switch# set schedulers scheduler-name priority level
```

- Related Documentation**
- [Example: Configuring Queue Scheduling Priority on page 102](#)
  - [Monitoring CoS Scheduler Maps on page 325](#)

---

## Example: Configuring Queue Scheduling Priority

---

**Supported Platforms** [EX4600, OCX1100, QFabric System, QFX Series standalone switches](#)

You can configure the bandwidth scheduling priority of individual queues by specifying the priority in a scheduler, and then using a scheduler map to associate the scheduler with a queue.

- [Requirements on page 102](#)
- [Overview on page 102](#)
- [Configuring Queue Scheduling Priority on page 104](#)
- [Verification on page 105](#)

### Requirements

This example uses the following hardware and software components:

- One switch.
- Junos OS Release 11.1 or later for the QFX Series or Junos OS Release 14.1X53-D20 or later for the OCX Series.

### Overview

Queues can have one of several bandwidth priorities:

- **strict-high**—Strict-high priority allocates bandwidth to the queue before any other queue receives bandwidth. Other queues receive the bandwidth that remains after the strict-high queue has been serviced. On QFX10000 switches, you can configure as many queues as you want as strict-high priority queues. On QFX5200, QFX5100, QFX3500, QFX3600, and EX4600 switches and on QFabric systems, you can configure only one queue as a strict-high queue.



**NOTE:** On QFX5200 switches, it is not possible to support multiple queues with strict-high priority because QFX5200 doesn't support flexible hierarchical scheduling. When multiple strict-high priority queues are configured, all of those queues are treated as strict-high priority but the higher number queue among them is given highest priority.

---

On QFX10000 switches, if you configure strict-high priority queues on a port, we strongly recommend that you configure a transmit rate on those queues. The transmit rate sets the amount of traffic that the switch forwards as strict-high priority; traffic in excess of the transmit rate is treated as best-effort traffic that receives the queue excess rate. Even if you configure only one strict-high priority queue, we strongly recommend that you configure a transmit rate the queue to prevent it from starving other queues. If you

do not configure a transmit rate to limit the amount of bandwidth a strict-high priority queue can use, then the strict-high priority queue can use all of the available port bandwidth and starve other queues on the port.

On QFX5200, QFX5100, QFX3500, QFX3600, and EX4600 switches and on QFabric systems, we recommend that you always apply a shaping rate to strict-high priority queues to prevent them from starving other queues. If you do not apply a shaping rate to limit the amount of bandwidth a strict-high priority queue can use, then the strict-high priority queue can use all of the available port bandwidth and starve other queues on the port.



**NOTE:** On switches that support enhanced transmission selection (ETS) hierarchical scheduling, if you use ETS and you configure a **strict-high** priority queue, you must create an **fc-set** that is dedicated only to strict-high priority traffic. Only one **fc-set** can contain strict-a high priority queue. Queues that are not strict-high priority cannot belong to the same **fc-set** as strict-high priority queues.

On switches that use different output queues for unicast and multidestination traffic, the multidestination **fc-set** cannot contain strict-high priority queues.

- **low**—Low priority. Traffic with low priority is serviced after any queue that has a **strict-high** priority.



**NOTE:** By default, all queues are low priority queues.

Table 37 on page 103 shows the configuration components for this example.

This example describes how to set the queue priority for two forwarding classes (queues) named **fcoe** and **no-loss**. Both queues have a priority of **low**. The scheduler for the **fcoe** queue is named **fcoe-sched** and the scheduler for the **no-loss** queue is named **nl-sched**. One scheduler map, **schedmap1**, associates the schedulers to the queues.

**Table 37: Components of the Queue Scheduler Priority Configuration Example**

Component	Settings
Hardware	One switch
Schedulers	<b>fcoe-sched</b> for FCoE traffic <b>nl-sched</b> for no-loss traffic
Priority	<b>low</b> for FCoE traffic <b>low</b> for no-loss traffic

Table 37: Components of the Queue Scheduler Priority Configuration Example (*continued*)

Component	Settings
Scheduler map	<b>schedmap1:</b>  FCoE mapping: scheduler <b>fcoe-sched</b> to forwarding class <b>fcoe</b>  No-loss mapping: scheduler <b>nl-sched</b> to forwarding class <b>no-loss</b>



**NOTE:** OCX Series switches do not support lossless transport. On OCX Series switches, the default DSCP classifier does not map traffic to the default fcoe and no-loss forwarding classes. On an OCX Series switch, you could use this example by substituting other forwarding classes (for example, best-effort or network-control) for the fcoe and no-loss forwarding classes, and naming the schedulers appropriately. The active forwarding classes (**best-effort**, **network-control**, and **mcast**) share the unused bandwidth assigned to the fcoe and no-loss forwarding classes.

## Configuring Queue Scheduling Priority

### CLI Quick Configuration

To quickly configure queue scheduling priority, copy the following commands, paste them in a text file, remove line breaks, change variables and details to match your network configuration, and then copy and paste the commands into the CLI at the [edit] hierarchy level:

```
[edit class-of-service]
set schedulers fcoe-sched priority low
set schedulers nl-sched priority low
set scheduler-maps schedmap1 forwarding-class fcoe scheduler fcoe-sched
set scheduler-maps schedmap1 forwarding-class no-loss scheduler nl-sched
```

To configure queue priority using the CLI:

1. Create the FCoE scheduler with **low** priority:

```
[edit class-of-service]
user@switch# set schedulers fcoe-sched priority low
```

2. Create the no-loss scheduler with **low** priority:

```
[edit class-of-service]
user@switch# set schedulers nl-sched priority low
```

3. Associate the schedulers with the desired queues in the scheduler map:

```
[edit class-of-service]
user@switch# set scheduler-maps schedmap1 forwarding-class fcoe scheduler fcoe-sched
user@switch# set scheduler-maps schedmap1 forwarding-class no-loss scheduler nl-sched
```

## Verification

To verify that you configured the queue scheduling priority for bandwidth and mapped the schedulers to the correct forwarding classes, perform these tasks:

- [Verifying the Queue Scheduling Priority on page 105](#)
- [Verifying the Scheduler-to-Forwarding-Class Mapping on page 105](#)

---

### Verifying the Queue Scheduling Priority

**Purpose** Verify that you configured the queue schedulers **fcoe-sched** and **nl-sched** with **low** queue scheduling priority.

**Action** Display the **fcoe-sched** scheduler priority configuration using the operational mode command **show configuration class-of-service schedulers fcoe-sched priority**:

```
user@switch> show configuration class-of-service schedulers fcoe-sched priority
priority low;
```

Display the **nl-sched** scheduler priority configuration using the operational mode command **show configuration class-of-service schedulers nl-sched priority**:

```
user@switch> show configuration class-of-service schedulers nl-sched priority
priority low;
```

---

### Verifying the Scheduler-to-Forwarding-Class Mapping

**Purpose** Verify that you configured the scheduler map **schedmap1** to map scheduler **fcoe-sched** to forwarding class **fcoe** and schedule **nl-sched** to forwarding class **no-loss**.

**Action** Display the scheduler map **schedmap1** using the operational mode command **show configuration class-of-service scheduler-maps schedmap1**:

```
user@switch> show configuration class-of-service scheduler-maps schedmap1
forwarding-class fcoe scheduler fcoe-sched;
forwarding-class no-loss scheduler nl-sched;
```

**Related Documentation**

- [Defining CoS Queue Scheduling Priority on page 100](#)
- [Monitoring CoS Scheduler Maps on page 325](#)

---

## Understanding CoS Traffic Control Profiles

**Supported Platforms** [EX4600, OCX1100, QFabric System, QFX Series standalone switches](#)

A traffic control profile defines the output bandwidth and scheduling characteristics of forwarding class sets (priority groups). The forwarding classes (which are mapped to output queues) that belong to a forwarding class set (fc-set) share the bandwidth that you assign to the fc-set in the traffic control profile.

This two-tier hierarchical scheduling architecture provides flexibility in allocating resources among forwarding classes, and also:

- Assigns a portion of port bandwidth to an fc-set. You define the port resources for the fc-set in a traffic control profile.
- Allocates fc-set bandwidth among the forwarding classes (queues) that belong to the fc-set. A scheduler map attached to the traffic control profile defines the amount of the fc-set's resources that each forwarding class can use.

Attaching an fc-set and a traffic control profile to a port defines the hierarchical scheduling properties of the group and the forwarding classes that belong to the group.

The ability to create fc-sets supports enhanced transmission selection (ETS), which is described in IEEE 802.1Qaz. When an fc-set does not use its allocated port bandwidth, ETS shares the excess port bandwidth among other fc-sets on the port in proportion to their guaranteed minimum bandwidth (guaranteed rate). This utilizes the port bandwidth better than scheduling schemes that reserve bandwidth for groups even if that bandwidth is not used. ETS shares unused port bandwidth, so traffic groups that need extra bandwidth can use it if the bandwidth is available, while preserving the ability to specify the minimum guaranteed bandwidth for traffic groups.

Traffic control profiles define the following CoS properties for fc-sets:

- Minimum guaranteed bandwidth—Also known as the *committed information rate (CIR)*. This is the minimum amount of port bandwidth the priority group receives. Priorities in the priority group receive their minimum guaranteed bandwidth as a portion of the priority group's minimum guaranteed bandwidth. The **guaranteed-rate** statement defines the minimum guaranteed bandwidth.



**NOTE:** You cannot apply a traffic control profile with a minimum guaranteed bandwidth to a priority group that includes strict-high priority queues.

- Shared excess (extra) bandwidth—When the priority groups on a port do not consume the full amount of bandwidth allocated to them or there is unallocated link bandwidth available, priority groups can contend for that extra bandwidth if they need it. Priorities in the priority group contend for extra bandwidth as a portion of the priority group's extra bandwidth. The amount of extra bandwidth for which a priority group can contend is proportional to the priority group's guaranteed minimum bandwidth (guaranteed rate).
- Maximum bandwidth—Also known as *peak information rate (PIR)*. This is the maximum amount of port bandwidth the priority group receives. Priorities in the priority group

receive their maximum bandwidth as a portion of the priority group's maximum bandwidth. The **shaping-rate** statement defines the maximum bandwidth.

- Queue scheduling—Each traffic control profile includes a scheduler map. The scheduler map maps forwarding classes (priorities) to schedulers to define the scheduling characteristics of the individual forwarding classes in the fc-set. The resources scheduled for each forwarding class represent portions of the resources that the traffic control profile schedules for the entire fc-set, not portions of the total link bandwidth. The **scheduler-maps** statement defines the mapping of forwarding classes to schedulers.

#### Related Documentation

- [Understanding CoS Hierarchical Port Scheduling \(ETS\)](#)
- [Example: Configuring CoS Hierarchical Port Scheduling \(ETS\)](#)
- [Example: Configuring Traffic Control Profiles \(Priority Group Scheduling\) on page 111](#)
- [Defining CoS Traffic Control Profiles \(Priority Group Scheduling\) on page 110](#)

## Understanding CoS Priority Group Scheduling

**Supported Platforms** [EX4600, OCX1100, QFabric System, QFX Series standalone switches](#)

Priority group scheduling defines the class-of-service (CoS) properties of a group of output queues (priorities). Priority group scheduling works with output queue scheduling to create a two-tier hierarchical scheduler. The hierarchical scheduler allocates bandwidth to a group of queues (a priority group, called a forwarding class set in Junos OS configuration). Queue scheduling determines the portion of the priority group bandwidth that the particular queue can use.

You configure priority group scheduling in a traffic control profile and then associate the traffic control profile with a forwarding class set and an interface. You attach a scheduler map to the traffic control profile to specify the queue scheduling characteristics.



**NOTE:** When you configure bandwidth for a queue or a priority group, the switch considers only the data as the configured bandwidth. The switch does not account for the bandwidth consumed by the preamble and the interframe gap (IFG). Therefore, when you calculate and configure the bandwidth requirements for a queue or for a priority group, consider the preamble and the IFG as well as the data in the calculations.

- [Priority Group Scheduling Components on page 108](#)
- [Default Traffic Control Profile on page 108](#)
- [Guaranteed Rate \(Minimum Guaranteed Bandwidth\) on page 108](#)
- [Sharing Extra Bandwidth on page 109](#)
- [Shaping Rate \(Maximum Bandwidth\) on page 109](#)
- [Scheduler Maps on page 109](#)

## Priority Group Scheduling Components

[Table 38 on page 108](#) provides a quick reference to the traffic control profile components you can configure to determine the bandwidth properties of priority groups, and [Table 39 on page 108](#) provides a quick reference to some related scheduling configuration components.

**Table 38: Priority Group Scheduler Components**

Traffic Control Profile Component	Description
Guaranteed rate	Sets the minimum guaranteed port bandwidth for the priority group. Extra port bandwidth is shared among priority groups in proportion to the guaranteed rate of each priority group on the port.
Shaping rate	Sets the maximum port bandwidth the priority group can consume.
Scheduler map	Maps schedulers to queues (forwarding classes, also called priorities). This determines the portion of the priority group bandwidth that a queue receives.

**Table 39: Other Scheduling Components**

Other Scheduling Components	Description
Forwarding class	Maps traffic to a queue (priority).
Forwarding class set	Name of a priority group. You map forwarding classes to priority groups. A forwarding class set consists of one or more forwarding classes.
Scheduler	Sets the bandwidth and scheduling priority of individual queues (forwarding classes).

## Default Traffic Control Profile

There is no default traffic control profile.

### Guaranteed Rate (Minimum Guaranteed Bandwidth)

The guaranteed rate determines the minimum guaranteed bandwidth for each priority group. It also determines how much excess (extra) port bandwidth the priority group can share; each priority group shares extra port bandwidth in proportion to its guaranteed rate. You specify the rate in bits per second as a fixed value such as 3 Mbps or as a percentage of the total port bandwidth.

The minimum transmission bandwidth can exceed the configured rate if additional bandwidth is available from other priority groups on the port. In case of congestion, the configured guaranteed rate is guaranteed for the priority group. This property enables you to ensure that each priority group receives the amount of bandwidth appropriate to its level of service.





**NOTE:** Configuring the minimum guaranteed bandwidth (transmit rate) for a forwarding class does not work unless you also configure the minimum guaranteed bandwidth (guaranteed rate) for the forwarding class set in the traffic control profile.

Additionally, the sum of the transmit rates of the queues in a forwarding class set should not exceed the guaranteed rate for the forwarding class set. (You cannot guarantee a minimum bandwidth for the queues that is greater than the minimum bandwidth guaranteed for the entire set of queues.)

You cannot configure a guaranteed rate for forwarding class sets that include strict-high priority queues.

---

## Sharing Extra Bandwidth

Extra bandwidth is available to priority groups when the priority groups do not use the full amount of available port bandwidth. This extra port bandwidth is shared among the priority groups based on the minimum guaranteed bandwidth of each priority group.

For example, Port A has three priority groups: fc-set-1, fc-set-2, and fc-set-3. Fc-set-1 has a guaranteed rate of 2 Gbps, fc-set-2 has a guaranteed rate of 2 Gbps, and fc-set-3 has a guaranteed rate of 4 Gbps. After servicing the minimum guaranteed bandwidth of these priority groups, the port has an extra 2 Gbps of available bandwidth, and all three priority groups have still have packets to forward. The priority groups receive the extra bandwidth in proportion to their guaranteed rates, so fc-set-1 receives an extra 500 Mbps, fc-set-2 receives an extra 500 Mbps, and fc-set-3 receives an extra 1 Gbps.

## Shaping Rate (Maximum Bandwidth)

The shaping rate determines the maximum bandwidth the priority group can consume. You specify the rate in bits per second as a fixed value such as 5 Mbps or as a percentage of the total port bandwidth.

The maximum bandwidth for a priority group depends on the total bandwidth available on the port and how much bandwidth the other priority groups on the port consume.

## Scheduler Maps

A scheduler map maps schedulers to queues. When you associate a scheduler map with a traffic control profile, then associate the traffic control profile with an interface and a forwarding class set, the scheduling defined by the scheduler map determines the portion of the priority group resources that each individual queue can use.

You can associate up to four user-defined scheduler maps with traffic control profiles.

### Related Documentation

- [Understanding Junos CoS Components on page 9](#)
- [Understanding CoS Output Queue Schedulers](#)
- [Understanding CoS Hierarchical Port Scheduling \(ETS\)](#)
- [Understanding CoS Scheduling Behavior and Configuration Considerations on page 91](#)

- [Understanding CoS Scheduling on QFabric System Node Device Fabric \(fte\) Ports](#)
- [Understanding Default CoS Scheduling on QFabric System Interconnect Devices \(Junos OS Release 13.1 and Later Releases\)](#)
- [Example: Configuring CoS Hierarchical Port Scheduling \(ETS\)](#)
- [Example: Configuring Minimum Guaranteed Output Bandwidth on page 117](#)
- [Example: Configuring Maximum Output Bandwidth on page 124](#)
- [Example: Configuring Queue Schedulers](#)
- [Example: Configuring Traffic Control Profiles \(Priority Group Scheduling\) on page 111](#)
- [Example: Configuring WRED Drop Profiles](#)
- [Example: Configuring Drop Profile Maps](#)

---

## Defining CoS Traffic Control Profiles (Priority Group Scheduling)

---

**Supported Platforms**    EX4600, OCX1100, QFabric System, QFX Series standalone switches

A traffic control profile defines the output bandwidth and scheduling characteristics of forwarding class sets (priority groups). The forwarding classes (which are mapped to output queues) contained in a forwarding class set (fc-set) share the bandwidth resources that you configure in the traffic control profile. A scheduler map associates forwarding classes with schedulers to define how the individual forwarding classes that belong to an fc-set share the bandwidth allocated to that fc-set.

The parameters you configure in a traffic control profile define the following characteristics for the fc-set:

- **guaranteed-rate**—Minimum bandwidth, also known as the *committed information rate (CIR)*. The guaranteed rate also determines the amount of excess (extra) port bandwidth that the fc-set can share. Extra port bandwidth is allocated among the fc-sets on a port in proportion to the guaranteed rate of each fc-set.



**NOTE:** You cannot configure a guaranteed rate for a, fc-set that includes strict-high priority queues. If the traffic control profile is for an fc-set that contains strict-high priority queues, do not configure a guaranteed rate.

- **shaping-rate**—Maximum bandwidth, also known as the *peak information rate (PIR)*.
- **scheduler-map**—Bandwidth and scheduling characteristics for the queues, defined by mapping forwarding classes to schedulers. (The queue scheduling characteristics represent amounts or percentages of the fc-set bandwidth, not the amounts or percentages of total link bandwidth.)



**NOTE:** Because a port can have more than one fc-set, when you assign resources to an fc-set, keep in mind that the total port bandwidth must serve all of the queues associated with that port.

To configure a traffic control profile using the CLI:

1. Name the traffic control profile and define the minimum guaranteed bandwidth for the fc-set:

```
[edit class-of-service ]
user@switch# set traffic-control-profiles traffic-control-profile-name guaranteed-rate (rate
| percent percentage)
```

2. Define the maximum bandwidth for the fc-set:

```
[edit class-of-service traffic-control-profiles traffic-control-profile-name]
user@switch# set shaping-rate (rate | percent percentage)
```

3. Attach a scheduler map to the traffic control profile:

```
[edit class-of-service traffic-control-profiles traffic-control-profile-name]
user@switch# set scheduler-map scheduler-map-name
```

#### Related Documentation

- [Example: Configuring CoS Hierarchical Port Scheduling \(ETS\)](#)
- [Example: Configuring Traffic Control Profiles \(Priority Group Scheduling\) on page 111](#)
- [Example: Configuring Minimum Guaranteed Output Bandwidth on page 117](#)
- [Example: Configuring Maximum Output Bandwidth on page 124](#)
- [Defining CoS Queue Schedulers](#)
- [Understanding CoS Traffic Control Profiles on page 105](#)

## Example: Configuring Traffic Control Profiles (Priority Group Scheduling)

### Supported Platforms [QFX Series](#)

A traffic control profile defines the output bandwidth and scheduling characteristics of forwarding class sets (priority groups). The forwarding classes (queues) mapped to a forwarding class set share the bandwidth resources that you configure in the traffic control profile. A scheduler map associates forwarding class classes with schedulers to define how the individual queues in a forwarding class set share the bandwidth allocated to that forwarding class set.

- [Requirements on page 112](#)
- [Overview on page 112](#)
- [Configuring a Traffic Control Profile on page 113](#)
- [Verification on page 113](#)

## Requirements

This example uses the following hardware and software components:

- A Juniper Networks QFX3500 Switch
- Junos OS Release 11.1 or later for the QFX Series

## Overview

The parameters you configure in a traffic control profile define the following characteristics for the priority group:

- **guaranteed-rate**—Minimum bandwidth, also known as the *committed information rate (CIR)*. Each fc-set receives a minimum of either the configured amount of absolute bandwidth or the configured percentage of bandwidth. The guaranteed rate also determines the amount of excess (extra) port bandwidth that the fc-set can share. Extra port bandwidth is allocated among the fc-sets on a port in proportion to the guaranteed rate of each fc-set.



**NOTE:** In order for the **transmit-rate** option (minimum bandwidth for a queue that you set using scheduler configuration) to work properly, you must configure the **guaranteed-rate** for the fc-set. If an fc-set does not have a guaranteed minimum bandwidth, the forwarding classes that belong to the fc-set cannot have a guaranteed minimum bandwidth.



**NOTE:** Include the preamble bytes and interframe gap bytes as well as the data bytes in your bandwidth calculations.

- **shaping-rate**—Maximum bandwidth, also known as the *peak information rate (PIR)*. Each fc-set receives a maximum of the configured amount of absolute bandwidth or the configured percentage of bandwidth, even if more bandwidth is available.



**NOTE:** Include the preamble bytes and interframe gap bytes as well as the data bytes in your bandwidth calculations.

- **scheduler-map**—Bandwidth and scheduling characteristics for the queues, defined by mapping forwarding classes to schedulers. (The queue scheduling characteristics represent amounts or percentages of the fc-set bandwidth, not the amounts or percentages of total link bandwidth.)



**NOTE:** Because a port can have more than one fc-set, when you assign resources to an fc-set, keep in mind that the total port bandwidth must serve all of the queues associated with that port.

For example, if you map three fc-sets to a 10-Gigabit Ethernet port, the queues associated with all three of the fc-sets share the 10-Gbps bandwidth as defined by the traffic control profiles. Therefore, the total combined **guaranteed-rate** value of the three fc-sets should not exceed 10 Gbps. If you configure guaranteed rates whose sum exceeds the port bandwidth, the system sends a syslog message to notify you that the configuration is not valid. However, the system does not perform a commit check. If you commit a configuration in which the sum of the guaranteed rates exceeds the port bandwidth, the hierarchical scheduler behaves unpredictably.

The sum of the forwarding class (queue) transmit rates cannot exceed the total **guaranteed-rate** of the fc-set to which the forwarding classes belong. If you configure transmit rates whose sum exceeds the fc-set guaranteed rate, the commit check fails and the system rejects the configuration.

If you configure the **guaranteed-rate** of an fc-set as a percentage, configure all of the transmit rates associated with that fc-set as percentages. In this case, if any of the transmit rates are configured as absolute values instead of percentages, the configuration is not valid and the system sends a syslog message.

## Configuring a Traffic Control Profile

This example describes how to configure a traffic control profile named **san-tcp** with a scheduler map named **san-map1** and allocate to it a minimum bandwidth of 4 Gbps and a maximum bandwidth of 8 Gbps:

1. Create the traffic control profile and set the **guaranteed-rate** (minimum guaranteed bandwidth) to **4g**:

```
[edit class-of-service]
user@switch# set traffic-control-profiles san-tcp guaranteed-rate 4g
```

2. Set the **shaping-rate** (maximum guaranteed bandwidth) to **8g**:

```
[edit class-of-service]
user@switch# set traffic-control-profiles san-tcp shaping-rate 8g
```

3. Associate the scheduler map **san-map1** with the traffic control profile:

```
[edit class-of-service]
user@switch# set traffic-control-profiles san-tcp scheduler-map san-map1
```

## Verification

### Verifying the Traffic Control Profile Configuration

**Purpose** Verify that you created the traffic control profile **san-tcp** with a minimum guaranteed bandwidth of 4 Gbps, a maximum bandwidth of 8 Gbps, and the scheduler map **san-map1**.

**Action** List the traffic control profile using the operational mode command **show configuration class-of-service traffic-control-profiles san-tcp**:

```
user@switch> show configuration class-of-service traffic-control-profiles san-tcp
scheduler-map san-map1;
shaping-rate percent 8g;
guaranteed-rate 4g;
```

**Related Documentation**

- [Example: Configuring CoS Hierarchical Port Scheduling \(ETS\)](#)
- [Example: Configuring Minimum Guaranteed Output Bandwidth on page 117](#)
- [Example: Configuring Maximum Output Bandwidth on page 124](#)
- [Example: Configuring Queue Schedulers](#)
- [Defining CoS Traffic Control Profiles \(Priority Group Scheduling\) on page 110](#)
- [Understanding CoS Traffic Control Profiles on page 105](#)
- [Understanding CoS Hierarchical Port Scheduling \(ETS\)](#)

---

## Understanding CoS Priority Group and Queue Guaranteed Minimum Bandwidth

---

**Supported Platforms** EX4600, OCX1100, QFabric System, QFX Series standalone switches

You can set a guaranteed minimum bandwidth for individual forwarding classes (queues) and for groups of forwarding classes called *forwarding class sets* (priority groups). Setting a minimum guaranteed bandwidth ensures that priority groups and queues receive the bandwidth required to support the expected traffic.

This topic covers:

- [Guaranteeing Bandwidth Using Hierarchical Scheduling on page 114](#)
- [Priority Group Guaranteed Rate \(Guaranteed Minimum Bandwidth\) on page 116](#)
- [Queue Transmit Rate \(Guaranteed Minimum Bandwidth\) on page 116](#)

### Guaranteeing Bandwidth Using Hierarchical Scheduling

The **guaranteed-rate** value for the priority group (configured in a traffic control profile) defines the minimum amount of bandwidth allocated to a forwarding class set on a port, whereas the **transmit-rate** value of the queue (configured in a scheduler) defines the minimum amount of bandwidth allocated to a particular queue in a priority group. The queue bandwidth is a portion of the priority group bandwidth.




**NOTE:** You cannot configure a minimum guaranteed bandwidth (transmit rate) for a forwarding class that is mapped to a strict-high priority queue, and you cannot configure a minimum guaranteed bandwidth (guaranteed rate) for a priority group that includes strict-high priority queues.

---

Figure 5 on page 115 shows how the total port bandwidth is allocated to priority groups (forwarding class sets) based on the guaranteed rate of each priority group. It also shows

how the guaranteed bandwidth of each priority group is allocated to the queues in the priority group based on the transmit rate of each queue.

**Figure 5: Allocating Guaranteed Bandwidth Using Hierarchical Scheduling**

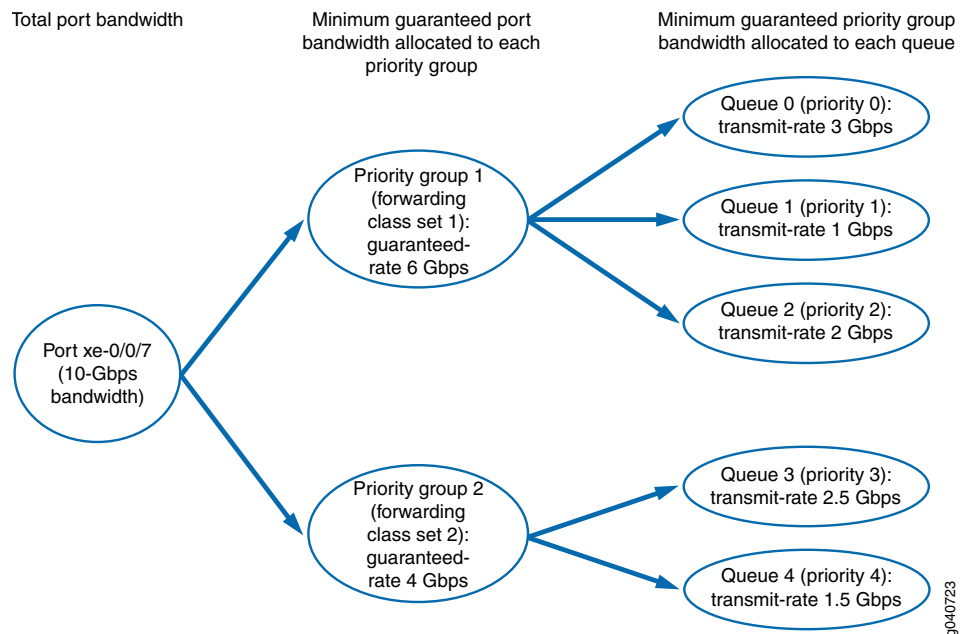

The sum of the priority group guaranteed rates cannot exceed the total port bandwidth. If you configure guaranteed rates whose sum exceeds the port bandwidth, the system sends a syslog message to notify you that the configuration is not valid. However, the system does not perform a commit check. If you commit a configuration in which the sum of the guaranteed rates exceeds the port bandwidth, the hierarchical scheduler behaves unpredictably.

The sum of the queue transmit rates cannot exceed the total guaranteed rate of the priority group to which the queues belong. If you configure transmit rates whose sum exceeds the priority group guaranteed rate, the commit check fails and the system rejects the configuration.



**NOTE:** You must set both the priority group **guaranteed-rate** value and the queue **transmit-rate** value in order to configure the minimum bandwidth for individual queues. If you set the **transmit-rate** value but do not set the **guaranteed-rate** value, the configuration fails.

You can set the **guaranteed-rate** value for a priority group without setting the **transmit-rate** value for individual queues in the priority group. However, queues that do not have a configured **transmit-rate** value can become starved for bandwidth if other higher-priority queues need the priority group's bandwidth. To avoid starving a queue, it is a good practice to configure a **transmit-rate** value for most queues.

If you configure the guaranteed rate of a priority group as a percentage, configure all of the transmit rates associated with that priority group as percentages. In this case, if any of the transmit rates are configured as absolute values instead of percentages, the configuration is not valid and the system sends a syslog message.

---

## Priority Group Guaranteed Rate (Guaranteed Minimum Bandwidth)

Setting a priority group (forwarding class set) **guaranteed-rate** enables you to reserve a portion of the port bandwidth for the forwarding classes (queues) in that forwarding class set. The minimum bandwidth (**guaranteed-rate**) that you configure for a priority group sets the minimum bandwidth available to all of the forwarding classes in the forwarding class set.

The combined **guaranteed-rate** value of all of the forwarding class sets associated with an interface cannot exceed the amount of bandwidth available on that interface.

You configure the priority group **guaranteed-rate** in the traffic control profile. You cannot apply a traffic control profile that has a guaranteed rate to a priority group that includes a strict-high priority queue.

## Queue Transmit Rate (Guaranteed Minimum Bandwidth)

Setting a queue (forwarding class) **transmit-rate** enables you to reserve a portion of the priority group bandwidth for the individual queue. For example, a queue that handles Fibre Channel over Ethernet (FCoE) traffic might require a minimum rate of 4 Gbps to ensure the class of service that storage area network (SAN) traffic requires.

The priority group **guaranteed-rate** sets the aggregate minimum amount of bandwidth available to the queues that belong to the priority group. The cumulative total minimum bandwidth the queues consume cannot exceed the minimum bandwidth allocated to the priority group to which they belong. (The combined transmit rates of the queues in a priority group cannot exceed the priority group's guaranteed rate.)

You must configure the **guaranteed-rate** value of the priority group in order to set a **transmit-rate** value for individual queues that belong to the priority group. The reason is



that if there is no guaranteed bandwidth for a priority group, there is no way to guarantee bandwidth for queues in that priority group.

You configure the queue **transmit-rate** in the scheduler configuration. You cannot configure a transmit rate for a strict-high priority queue.

#### Related Documentation

- [Understanding CoS Output Queue Schedulers](#)
- [Understanding CoS Traffic Control Profiles on page 105](#)
- [Example: Configuring CoS Hierarchical Port Scheduling \(ETS\)](#)
- [Example: Configuring Queue Schedulers](#)
- [Example: Configuring Traffic Control Profiles \(Priority Group Scheduling\) on page 111](#)
- [Defining CoS Queue Schedulers](#)
- [Defining CoS Traffic Control Profiles \(Priority Group Scheduling\) on page 110](#)

---

## Example: Configuring Minimum Guaranteed Output Bandwidth

---

### Supported Platforms [QFX Series](#)

Scheduling the minimum guaranteed output bandwidth for a queue (forwarding class) requires configuring both tiers of the two-tier hierarchical scheduler. One tier is scheduling the resources for the individual queue. The other tier is scheduling the resources for the priority group (forwarding class set) to which the queue belongs. You set a minimum guaranteed bandwidth to ensure that priority groups and queues receive the bandwidth required to support the expected traffic.

- [Requirements on page 117](#)
- [Overview on page 117](#)
- [Configuring Guaranteed Minimum Bandwidth on page 119](#)
- [Verification on page 120](#)

### Requirements

This example uses the following hardware and software components:

- A Juniper Networks QFX3500 Switch
- Junos OS Release 11.1 or later for the QFX Series or Junos OS Release 14.1X53-D20 or later for the OCX Series

### Overview

The priority group minimum guaranteed bandwidth defines the minimum total amount of bandwidth available for all of the queues in the priority group to meet their minimum bandwidth requirements.

The **transmit-rate** setting in the scheduler configuration determines the minimum guaranteed bandwidth for an individual queue. The transmit rate also determines the

amount of excess (extra) priority group bandwidth that the queue can share. Extra priority group bandwidth is allocated among the queues in the priority group in proportion to the transmit rate of each queue.

The **guaranteed-rate** setting in the traffic control profile configuration determines the minimum guaranteed bandwidth for a priority group. The guaranteed rate also determines the amount of excess (extra) port bandwidth that the priority group can share. Extra port bandwidth is allocated among the priority groups on a port in proportion to the guaranteed rate of each priority group.



**NOTE:** You must configure both the **transmit-rate** value for the queue and the **guaranteed-rate** value for the priority group to set a valid minimum bandwidth guarantee for a queue. (If the priority group does not have a guaranteed minimum bandwidth, there is no guaranteed bandwidth pool from which the queue can take its guaranteed minimum bandwidth.)

The sum of the queue transmit rates in a priority group should not exceed the guaranteed rate for the priority group. (You cannot guarantee a minimum bandwidth for the queues that is greater than the minimum bandwidth guaranteed for the entire set of queues.)



**NOTE:** When you configure bandwidth for a queue or a priority group, the switch considers only the data as the configured bandwidth. The switch does not account for the bandwidth consumed by the preamble and the interframe gap (IFG). Therefore, when you calculate and configure the bandwidth requirements for a queue or for a priority group, consider the preamble and the IFG as well as the data in the calculations.



**NOTE:** You cannot configure minimum guaranteed bandwidth on strict-high priority queues or on a priority group that contains strict-high priority queues.

This example describes how to:

- Configure a transmit rate (minimum guaranteed queue bandwidth) of 2 Gbps for queues in a scheduler named **be-sched**.
- Configure a guaranteed rate (minimum guaranteed priority group bandwidth) of 4 Gbps for a priority group in a traffic control profile named **be-tcp**.
- Assign the scheduler to a queue named **best-effort** by using a scheduler map named **be-map**.
- Associate the scheduler map **be-map** with the traffic control profile **be-tcp**.
- Assign the queue **best-effort** to a priority group named **be-pg**.
- Assign the priority group and the minimum guaranteed bandwidth scheduling to the egress interface **xe-0/0/7**.

Table 40 on page 119 shows the configuration components for this example:

**Table 40: Components of the Minimum Guaranteed Output Bandwidth Configuration Example**

Component	Settings
Hardware	QFX3500 switch
Minimum guaranteed queue bandwidth	Transmit rate: <b>2g</b>
Minimum guaranteed priority group bandwidth	Guaranteed rate: <b>4g</b>
Scheduler	<b>be-sched</b>
Scheduler map	<b>be-map</b>
Traffic control profile	<b>be-tcp</b>
Forwarding class set (priority group)	<b>be-pg</b>
Queue (forwarding class)	<b>best-effort</b>
Egress interface	<b>xe-0/0/7</b>

## Configuring Guaranteed Minimum Bandwidth

**CLI Quick Configuration** To quickly configure the minimum guaranteed bandwidth for a priority group and a queue, copy the following commands, paste them in a text file, remove line breaks, change variables and details to match your network configuration, and then copy and paste the commands into the CLI at the [edit] hierarchy level:

```
[edit class-of-service]
set schedulers be-sched transmit-rate percent 2g
set traffic-control-profiles be-tcp guaranteed-rate 4g
set scheduler-maps be-map forwarding-class best-effort scheduler be-sched
set traffic-control-profiles be-tcp scheduler-map be-map
set forwarding-class-sets be-pg class best-effort
set interfaces xe-0/0/7 forwarding-class-set be-pg output-traffic-control-profile be-tcp
```

To configure the minimum guaranteed bandwidth hierarchical scheduling for a queue and a priority group:

1. Configure the minimum guaranteed queue bandwidth of 2 Gbps for scheduler **be-sched**:

```
[edit class-of-service schedulers]
user@switch# set be-sched transmit-rate 2g
```

2. Configure the minimum guaranteed priority group bandwidth of 4 Gbps for traffic control profile **be-tcp**:

```
[edit class-of-service traffic-control-profiles]
user@switch# set be-tcp guaranteed-rate 4g
```

3. Associate the scheduler **be-sched** with the **best-effort** queue in the scheduler map **be-map**:

```
[edit class-of-service scheduler-maps]
user@switch# set be-map forwarding-class best-effort scheduler be-sched
```

4. Associate the scheduler map with the traffic control profile:

```
[edit class-of-service traffic-control-profiles]
user@switch# set be-tcp scheduler-map be-map
```

5. Assign the **best-effort** queue to the priority group **be-pg**:

```
[edit class-of-service forwarding-class-sets]
user@switch# set be-pg class best-effort
```

6. Apply the configuration to interface **xe-0/0/7**:

```
[edit class-of-service interfaces]
user@switch# set xe-0/0/7 forwarding-class-set be-pg output-traffic-control-profile be-tcp
```

## Verification

To verify the minimum guaranteed output bandwidth configuration, perform these tasks:

- [Verifying the Minimum Guaranteed Queue Bandwidth on page 120](#)
- [Verifying the Priority Group Minimum Guaranteed Bandwidth and Scheduler Map Association on page 120](#)
- [Verifying the Scheduler Map Configuration on page 121](#)
- [Verifying Queue \(Forwarding Class\) Membership in the Priority Group on page 121](#)
- [Verifying the Egress Interface Configuration on page 121](#)

### Verifying the Minimum Guaranteed Queue Bandwidth

---

**Purpose** Verify that you configured the minimum guaranteed queue bandwidth as **2g** in the scheduler **be-sched**.

**Action** Display the minimum guaranteed bandwidth in the **be-sched** scheduler configuration using the operational mode command **show configuration class-of-service schedulers be-sched transmit-rate**:

```
user@switch> show configuration class-of-service schedulers be-sched transmit-rate
2g;
```

### Verifying the Priority Group Minimum Guaranteed Bandwidth and Scheduler Map Association

---

**Purpose** Verify that the minimum guaranteed priority group bandwidth is **4g** and the attached scheduler map is **be-map** in the traffic control profile **be-tcp**.

**Action** Display the minimum guaranteed bandwidth in the **be-tcp** traffic control profile configuration using the operational mode command **show configuration class-of-service traffic-control-profiles be-tcp guaranteed-rate**:

```
user@switch> show configuration class-of-service traffic-control-profiles be-tcp guaranteed-rate
4g;
```

Display the scheduler map in the **be-tcp** traffic control profile configuration using the operational mode command **show configuration class-of-service traffic-control-profiles be-tcp scheduler-map**:

```
user@switch> show configuration class-of-service traffic-control-profiles be-tcp scheduler-map
```

```
scheduler-map be-map;
```

### Verifying the Scheduler Map Configuration

**Purpose** Verify that the scheduler map **be-map** maps the forwarding class **best-effort** to the scheduler **be-sched**.

**Action** Display the **be-map** scheduler map configuration using the operational mode command **show configuration class-of-service schedulers maps be-map**:

```
user@switch> show configuration class-of-service scheduler-maps be-map
forwarding-class best-effort scheduler be-sched;
```

### Verifying Queue (Forwarding Class) Membership in the Priority Group

**Purpose** Verify that the forwarding class set **be-pg** includes the forwarding class **best-effort**.

**Action** Display the **be-pg** forwarding class set configuration using the operational mode command **show configuration class-of-service forwarding-class-sets be-pg**:

```
user@switch> show configuration class-of-service forwarding-class-sets be-pg
class best-effort;
```

### Verifying the Egress Interface Configuration

**Purpose** Verify that the forwarding class set **be-pg** and the traffic control profile **be-tcp** are attached to egress interface **xe-0/0/7**.

**Action** Display the egress interface using the operational mode command **show configuration class-of-service interfaces xe-0/0/7**:

```
user@switch> show configuration class-of-service interfaces xe-0/0/7
forwarding-class-set {
    be-pg {
        output-traffic-control-profile be-tcp;
    }
}
```

#### Related Documentation

- [Example: Configuring CoS Hierarchical Port Scheduling \(ETS\)](#)
- [Example: Configuring Queue Schedulers](#)
- [Example: Configuring Traffic Control Profiles \(Priority Group Scheduling\) on page 111](#)
- [Example: Configuring Queue Scheduling Priority on page 102](#)
- [Example: Configuring Forwarding Class Sets](#)
- [Understanding CoS Traffic Control Profiles on page 105](#)
- [Understanding CoS Hierarchical Port Scheduling \(ETS\)](#)

## Understanding CoS Priority Group Shaping and Queue Shaping (Maximum Bandwidth)

**Supported Platforms** EX4600, OCX1100, QFabric System, QFX Series standalone switches

If the amount of traffic on an interface exceeds the maximum bandwidth available on the interface, it leads to congestion. You can use priority group (forwarding class set) shaping and queue (forwarding class) shaping to manage traffic and avoid congestion.

Configuring a maximum bandwidth sets the most bandwidth a priority group or a queue can use after all of the priority group and queue minimum bandwidth requirements are met, even if more bandwidth is available.

This topic covers:

- [Priority Group Shaping on page 122](#)
- [Queue Shaping on page 122](#)
- [Shaping Maximum Bandwidth Using Hierarchical Scheduling on page 123](#)

## Priority Group Shaping

Priority group shaping enables you to shape the aggregate traffic of a forwarding class set on a port to a maximum rate that is less than the line or port rate. The maximum bandwidth (**shaping-rate**) that you configure for a priority group sets the maximum bandwidth available to all of the forwarding classes (queues) in the forwarding class set.

If a port has more than one priority group and the combined **shaping-rate** value of the priority groups is greater than the amount of port bandwidth available, the bandwidth is shared proportionally among the priority groups.

You configure the priority group **shaping-rate** in the traffic control profile.

## Queue Shaping

Queue shaping throttles the rate at which queues transmit packets. For example, using queue shaping, you can rate-limit a strict-high priority queue so that the strict-priority queue does not lock out (or starve) low-priority queues.



.....  
**NOTE:** We recommend that you always apply a shaping rate to strict-high priority queues to prevent them from starving other queues. If you do not apply a shaping rate to limit the amount of bandwidth a strict-high priority queue can use, then the strict-high priority queue can use all of the available port bandwidth and starve other queues on the port.  
.....

Similarly, for any queue, you can configure queue shaping (**shaping-rate**) to set the maximum bandwidth for a particular queue.

The **shaping-rate** value of the priority group sets the aggregate maximum amount of bandwidth available to the queues that belong to the priority group. On a port, the cumulative total bandwidth the queues consume cannot exceed the maximum bandwidth of the priority group to which they belong.

If a priority group has more than one queue, and the combined **shaping-rate** of the queues is greater than the amount of bandwidth available to the priority group, the bandwidth is shared proportionally among the queues.


You configure the queue **shaping-rate** in the scheduler configuration, and you set the **shaping-rate** for priority groups in the traffic control profile configuration.

## Shaping Maximum Bandwidth Using Hierarchical Scheduling

Priority group shaping defines the maximum bandwidth allocated to a forwarding class set on a port, whereas queue shaping defines a limit on maximum bandwidth usage per queue. The queue bandwidth is a portion of the priority group bandwidth.

Figure 6 on page 123 shows how the port bandwidth is allocated to priority groups (forwarding class sets) based on the shaping rate of each priority group, and how the bandwidth of each priority group is allocated to the queues in the priority group based on the shaping rate of each queue.

**Figure 6: Setting Maximum Bandwidth Using Hierarchical Scheduling**

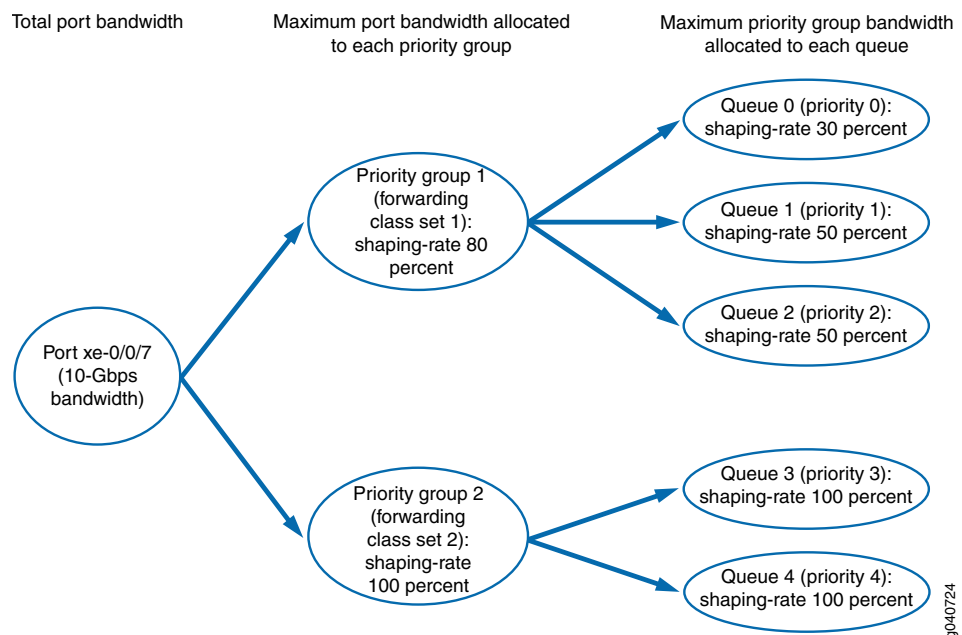

### Related Documentation

- [Understanding CoS Output Queue Schedulers](#)
- [Understanding CoS Traffic Control Profiles on page 105](#)
- [Example: Configuring CoS Hierarchical Port Scheduling \(ETS\)](#)
- [Example: Configuring Queue Schedulers](#)
- [Example: Configuring Traffic Control Profiles \(Priority Group Scheduling\) on page 111](#)
- [Defining CoS Queue Schedulers](#)
- [Defining CoS Traffic Control Profiles \(Priority Group Scheduling\) on page 110](#)

## Example: Configuring Maximum Output Bandwidth

---

**Supported Platforms** [EX4600, OCX1100, QFabric System, QFX Series standalone switches](#)

Scheduling the maximum output bandwidth for a queue (forwarding class) requires configuring both tiers of the hierarchical scheduler. One tier is scheduling the resources for the individual queue. The other tier is scheduling the resources for the priority group (forwarding class set) to which the queue belongs. You can use priority group and queue shaping to prevent traffic from using more bandwidth than you want the traffic to receive.

- [Requirements on page 124](#)
- [Overview on page 124](#)
- [Configuring Maximum Bandwidth on page 125](#)
- [Verification on page 126](#)

### Requirements

This example uses the following hardware and software components:

- A Juniper Networks QFX3500 Switch
- Junos OS Release 11.1 or later for the QFX Series

### Overview

The priority group maximum bandwidth defines the maximum total amount of bandwidth available for all of the queues in the priority group.

The **shaping-rate** setting in the scheduler configuration determines the maximum bandwidth for an individual queue.

The **shaping-rate** setting in the traffic control profile configuration determines the maximum bandwidth for a priority group.



**NOTE:** When you configure bandwidth for a queue or a priority group, the switch considers only the data as the configured bandwidth. The switch does not account for the bandwidth consumed by the preamble and the interframe gap (IFG). Therefore, when you calculate and configure the bandwidth requirements for a queue or for a priority group, consider the preamble and the IFG as well as the data in the calculations.



**NOTE:** When you set the maximum bandwidth (**shaping-rate**) for a queue or for a priority group at 100 Kbps or less, the traffic shaping behavior is accurate only within +/- 20 percent of the configured **shaping-rate** value.



This example describes how to:

- Configure a maximum rate of 4 Gbps for queues in a scheduler named **be-sched**.
- Configure a maximum rate of 6 Gbps for a priority group in a traffic control profile named **be-tcp**.
- Assign the scheduler to a queue named **best-effort** by using a scheduler map named **be-map**.
- Associate the scheduler map **be-map** with the traffic control profile **be-tcp**.
- Assign the queue **best-effort** to a priority group named **be-pg**.
- Assign the priority group and the bandwidth scheduling to the interface **xe-0/0/7**.

Table 41 on page 125 shows the configuration components for this example:

**Table 41: Components of the Maximum Output Bandwidth Configuration Example**

Component	Settings
Hardware	QFX3500 switch
Maximum queue bandwidth	Shaping rate: <b>4g</b>
Maximum priority group bandwidth	Shaping rate: <b>6g</b>
Scheduler	<b>be-sched</b>
Scheduler map	<b>be-map</b>
Traffic control profile	<b>be-tcp</b>
Forwarding class set (priority group)	<b>be-pg</b>
Queue (forwarding class)	<b>best-effort</b>
Egress interface	<b>xe-0/0/7</b>

## Configuring Maximum Bandwidth

**CLI Quick Configuration** To quickly configure the maximum bandwidth for a priority group and a queue, copy the following commands, paste them in a text file, remove line breaks, change variables and details to match your network configuration, and then copy and paste the commands into the CLI at the [edit] hierarchy level:

```
[edit class-of-service]
set schedulers be-sched shaping-rate percent 4g
set traffic-control-profiles be-tcp shaping-rate 6g
set scheduler-maps be-map forwarding-class best-effort scheduler be-sched
set traffic-control-profiles be-tcp scheduler-map be-map
set forwarding-class-sets be-pg class best-effort
set interfaces xe-0/0/7 forwarding-class-set be-pg output-traffic-control-profile be-tcp
```

To configure the maximum bandwidth hierarchical scheduling for a queue and a priority group:

1. Configure the maximum queue bandwidth of 4 Gbps for scheduler **be-sched**:

```
[edit class-of-service schedulers]
user@switch# set be-sched shaping-rate 4g
```

2. Configure the maximum priority group bandwidth of 6 Gbps for traffic control profile **be-tcp**:

```
[edit class-of-service traffic-control-profiles]
user@switch# set be-tcp shaping-rate 6g
```

3. Associate the scheduler **be-sched** with the **best-effort** queue in the scheduler map **be-map**:

```
[edit class-of-service scheduler-maps]
user@switch# set be-map forwarding-class best-effort scheduler be-sched
```

4. Associate the scheduler map with the traffic control profile:

```
[edit class-of-service traffic-control-profiles]
user@switch# set be-tcp scheduler-map be-map
```

5. Assign the **best-effort** queue to the priority group **be-pg**:

```
[edit class-of-service forwarding-class-sets]
user@switch# set be-pg class best-effort
```

6. Apply the configuration to interface **xe-0/0/7**:

```
[edit class-of-service interfaces]
user@switch# set xe-0/0/7 forwarding-class-set be-pg output-traffic-control-profile be-tcp
```

## Verification

To verify the maximum output bandwidth configuration, perform these tasks:

- [Verifying the Maximum Queue Bandwidth on page 126](#)
- [Verifying the Priority Group Maximum Bandwidth and Scheduler Map Association on page 126](#)
- [Verifying the Scheduler Map Configuration on page 127](#)
- [Verifying Queue \(Forwarding Class\) Membership in the Priority Group on page 127](#)
- [Verifying the Egress Interface Configuration on page 127](#)

### Verifying the Maximum Queue Bandwidth

**Purpose** Verify that you configured the maximum queue bandwidth as **4g** in the scheduler **be-sched**.

**Action** List the maximum bandwidth in the **be-sched** scheduler configuration using the operational mode command **show configuration class-of-service schedulers be-sched shaping-rate**:

```
user@switch> show configuration class-of-service schedulers be-sched shaping-rate
4g;
```

### Verifying the Priority Group Maximum Bandwidth and Scheduler Map Association

**Purpose** Verify that the maximum priority group bandwidth is **6g** and the attached scheduler map is **be-map** in the traffic control profile **be-tcp**.

**Action** List the maximum bandwidth in the **be-tcp** traffic control profile configuration using the operational mode command **show configuration class-of-service traffic-control-profiles be-tcp shaping-rate**:

```
user@switch> show configuration class-of-service traffic-control-profiles be-tcp shaping-rate
4g;
```

List the scheduler map in the **be-tcp** traffic control profile configuration using the operational mode command **show configuration class-of-service traffic-control-profiles be-tcp scheduler-map**:

```
user@switch> show configuration class-of-service traffic-control-profiles be-tcp scheduler-map
scheduler-map be-map;
```

---

### Verifying the Scheduler Map Configuration

**Purpose** Verify that the scheduler map **be-map** maps the forwarding class **best-effort** to the scheduler **be-sched**.

**Action** List the **be-map** scheduler map configuration using the operational mode command **show configuration class-of-service schedulers maps be-map**:

```
user@switch> show configuration class-of-service scheduler-maps be-map
forwarding-class best-effort scheduler be-sched;
```

---

### Verifying Queue (Forwarding Class) Membership in the Priority Group

**Purpose** Verify that the forwarding class set **be-pg** includes the forwarding class **best-effort**.

**Action** List the **be-pg** forwarding class set configuration using the operational mode command **show configuration class-of-service forwarding-class-sets be-pg**:

```
user@switch> show configuration class-of-service forwarding-class-sets be-pg
class best-effort;
```

---

### Verifying the Egress Interface Configuration

**Purpose** Verify that the forwarding class set **be-pg** and the traffic control profile **be-tcp** are attached to egress interface **xe-0/0/7**.

**Action** List the egress interface using the operational mode command **show configuration class-of-service interfaces xe-0/0/7**:

```
user@switch> show configuration class-of-service interfaces xe-0/0/7
forwarding-class-set {
    be-pg {
        output-traffic-control-profile be-tcp;
    }
}
```

**Related Documentation**

- [Example: Configuring CoS Hierarchical Port Scheduling \(ETS\)](#)
- [Example: Configuring Queue Schedulers](#)
- [Example: Configuring Traffic Control Profiles \(Priority Group Scheduling\) on page 111](#)

- *Example: Configuring Forwarding Class Sets*
- [Understanding CoS Traffic Control Profiles on page 105](#)
- *Understanding CoS Hierarchical Port Scheduling (ETS)*

## PART 4

# Configuration Statements and Operational Commands

- [Configuration Statements \(Basic Concepts\) on page 131](#)
- [Configuration Statements \(Classifiers and Rewrite Rules\) on page 139](#)
- [Configuration Statements \(Scheduling\) on page 169](#)
- [Operational Commands \(Basic Concepts\) on page 195](#)
- [Operational Commands \(Classifiers and Rewrite Rules\) on page 267](#)
- [Operational Commands \(Scheduling\) on page 325](#)



## CHAPTER 4

# Configuration Statements (Basic Concepts)

- [class-of-service](#) on page 132
- [traceoptions \(Class of Service\)](#) on page 136

## class-of-service

**Supported Platforms** EX4600, OCX1100, QFabric System, QFX Series standalone switches

**Syntax**

```

class-of-service {
  classifiers {
    (dscp | dscp-ipv6 | ieee-802.1 | exp) classifier-name {
      import (classifier-name | default);
      forwarding-class class-name {
        loss-priority level {
          code-points [ aliases ] [ bit-patterns ];
        }
      }
    }
  }
  code-point-aliases {
    (dscp | dscp-ipv6 | ieee-802.1) {
      alias-name bits;
    }
  }
  congestion-notification-profile profile-name {
    input {
      ieee-802.1 {
        code-point [code-point-bits] {
          pfc {
            mru mru-value;
          }
        }
      }
      cable-length cable-length-value;
    }
    output {
      ieee-802.1 {
        code-point [code-point-bits] {
          flow-control-queue [queue | list-of-queues];
        }
      }
    }
  }
  drop-profiles {
    profile-name {
      interpolate {
        fill-level low-value fill-level high-value drop-probability 0 drop-probability high-value;
      }
    }
  }
  forwarding-class class-name {
    loss-priority level {
      code-points [ aliases ] [ bit-patterns ];
    }
  }
  forwarding-class class-name {
    scheduler scheduler-name;
  }
  forwarding-class-sets forwarding-class-set-name {

```



```

    class class-name;
  }
  forwarding-classes {
    class {
      class-name {
        queue-num queue-number <no-loss>;
      }
    }
  }
  host-outbound-traffic {
    forwarding-class class-name;
    dscp-code-point code-point;
  }
  interfaces {
    interface-name {
      congestion-notification-profile profile-name {
      }
      forwarding-class lossless-forwarding-class-name;
      forwarding-class-set forwarding-class-set-name {
        output-traffic-control-profile profile-name;
      }
      rewrite-value {
        input {
          ieee-802.1 {
            code-point code-point-bits;
          }
        }
      }
      scheduler-map scheduler-map-name
      unit logical-unit-number {
        classifiers {
          (dscp | dscp-ipv6 | ieee-802.1 | exp) (classifier-name | default);
        }
        forwarding-class class-name;
        rewrite-rules {
          (dscp | dscp-ipv6 | ieee-802.1 | exp) (classifier-name | default);
        }
      }
    }
  }
  multi-destination {
    classifiers {
      (dscp | ieee-802.1) classifier-name;
    }
  }
  rewrite-rules {
    (dscp | dscp-ipv6 | ieee-802.1 | exp) classifier-name {
      import (rewrite-name | default);
      forwarding-class class-name {
        loss-priority priority code-point (alias | bits);
      }
    }
  }
  scheduler-map-forwarding-class-sets {
    fabric-scheduler-map-name {
      forwarding-class-set fabric-forwarding-class-set-name scheduler scheduler-name;
    }
  }

```

```

    }
  }
  scheduler-maps {
    map-name {
      forwarding-class class-name scheduler scheduler-name;
    }
  }
  schedulers {
    scheduler-name {
      buffer-size (percent percentage | remainder);
      drop-profile-map loss-priority (low | medium-high | high) protocol protocol drop-profile
        drop-profile-name;
      excess-rate percent percentage;
      explicit-congestion-notification;
      priority priority;
      shaping-rate (rate | percent percentage);
      transmit-rate (percent percentage) <exact>;
    }
  }
  shared-buffer {
    egress {
      percent percent;
      buffer-partition (lossless | lossy | multicast) {
        percent percent
      }
    }
    ingress {
      percent percent;
      buffer-partition (lossless | lossless-headroom | lossy) {
        percent percent
      }
    }
  }
  system-defaults {
    classifiers exp classifier-name;
  }
  traffic-control-profiles profile-name {
    guaranteed-rate(rate| percent percentage);
    scheduler-map map-name;
    shaping-rate (rate| percent percentage);
  }
}

```

Hierarchy Level [\[edit\]](#)

**Release Information** Statement introduced in Junos OS Release 11.1 for the QFX Series.  
Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.



**NOTE:** Not all switches support all portions of the class of service hierarchy. For example, some switches use the same classifiers for unicast and multidestination traffic, and those switches do not support the multi-destination classifier hierarchy, and some switches do not support shared buffer configuration, and those switches do not support the shared-buffer hierarchy.



**NOTE:** OCX Series switches do not support MPLS exp classifiers and rewrite rules (including MPLS system defaults), and they do not support congestion notification profiles.

**Description** Configure class-of-service parameters on the switch.

The remaining statements are explained separately.

**Default** If you do not configure any CoS features, the default CoS settings are used.

**Required Privilege Level** interfaces—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- [Assigning CoS Components to Interfaces on page 14](#)
- [Overview of Junos OS CoS on page 3](#)

## traceoptions (Class of Service)

**Supported Platforms** EX4600, OCX1100, QFabric System, QFX Series standalone switches

**Syntax**

```
traceoptions {
    file filename <size size> <files number>
    <world-readable | no-world-readable>;
    flag flag <flag-modifier>;
    no-remote-trace
}
```

**Hierarchy Level** [edit [class-of-service](#)]

**Release Information** Statement introduced in Junos OS Release 11.1 for the QFX Series.  
Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

**Description** Set class-of-service (CoS) tracing options.



**NOTE:** The `traceoptions` statement is not supported on the QFabric system.

**Default** Traceoptions is disabled.

**Options** **file *filename***—Name of the file to receive the tracing operation output. Enclose the name in quotation marks. Traceoption output files are located in the `/var/log/` directory.

**files *number***—(Optional) Maximum number of trace files. When a trace file named ***trace-file*** reaches its maximum size, it is renamed ***trace-file.0***. The traceoption output continues in a second trace file named ***trace-file.1***. When ***trace-file.1*** reaches its maximum size, output continues in a third file named ***trace-file.2***, and so on. When the maximum number of trace files is reached, the oldest trace file is overwritten.

If you specify a maximum number of files, you must also specify a maximum file size with the size option.

**Range:** 2 through 1000 files

**Default:** 1 trace file

**flag**—Tracing operation to perform. To specify more than one tracing operation, include multiple **flag** statements:

- **all**—Trace all operations.
- **asynch**—Trace asynchronous configuration processing.
- **chassis-scheduler**—Trace chassis stream scheduler processing.
- **cos-adjustment**—Trace CoS rate adjustments.
- **dynamic**—Trace dynamic CoS functions.

- **hardware-database**—Trace the chassis hardware database related processing.
- **init**—Trace initialization events.
- **performance-monitor**—Trace performance monitor counters.
- **process**—Trace configuration processing.
- **restart**—Trace restart processing.
- **route-socket**—Trace route-socket events.
- **show**—Trace show command servicing.
- **snmp**—Trace SNMP-related processing.
- **util**—Trace utilities.

The following are the global tracing options:

- **all**—Perform all tracing operations
- **parse**—Trace parser processing.

**no-remote-trace**—(Optional) Disable remote tracing.

**no-world-readable**—(Optional) Prevent any user from reading the log file.

**size size**—(Optional) Maximum size of each trace file, in kilobytes (KB), megabytes (MB), or gigabytes (GB). When a trace file named **trace-file** reaches its maximum size, it is renamed **trace-file.0**. Incoming tracefile data is logged in the now empty **trace-file**. When **trace-file** again reaches its maximum size, **trace-file.0** is renamed **trace-file.1** and **trace-file** is renamed **trace-file.0**. This renaming scheme continues until the maximum number of trace files is reached. Then the oldest trace file is overwritten.

If you specify a maximum file size, you must also specify a maximum number of trace files with the **files** option.

**Syntax:** *xk* to specify KB, *xm* to specify MB, or *xg* to specify GB

**Range:** 10 KB through the maximum file size of 4 GB (maximum is lower if 4 GB is not supported on your system)

**Default:** 1 MB

**world-readable**—(Optional) Allow any user to read the log file.

<b>Required Privilege Level</b>	routing—To view this statement in the configuration. routing-control—To add this statement to the configuration.
---------------------------------	---



## CHAPTER 5

# Configuration Statements (Classifiers and Rewrite Rules)

- [class \(Forwarding Classes\) on page 140](#)
- [class \(Forwarding Class Sets\) on page 141](#)
- [classifiers on page 142](#)
- [code-point \(Rewrite Rules\) on page 144](#)
- [code-point-aliases on page 145](#)
- [code-points \(CoS\) on page 146](#)
- [dscp on page 147](#)
- [dscp-ipv6 on page 149](#)
- [exp on page 151](#)
- [forwarding-class on page 153](#)
- [forwarding-classes on page 155](#)
- [ieee-802.1 on page 157](#)
- [import on page 159](#)
- [interfaces \(Class of Service\) on page 160](#)
- [loss-priority \(Classifiers\) on page 162](#)
- [loss-priority \(Rewrite Rules\) on page 163](#)
- [queue-num on page 164](#)
- [rewrite-rules on page 166](#)
- [unit on page 167](#)

## class (Forwarding Classes)

**Supported Platforms** EX4600, OCX1100, QFabric System, QFX Series standalone switches

**Syntax**

```
class {
  class-name {
    queue-num queue-number <no-loss>;
  }
}
```

**Hierarchy Level** [edit [class-of-service forwarding-classes](#)]

**Release Information** Statement introduced in Junos OS Release 11.1 for the QFX Series.  
No-loss option introduced in Junos OS Release 12.3 for the QFX Series.  
Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

**Description** Map one or more forwarding classes to a single queue. You can map unicast forwarding classes to a unicast queue (0 through 7) and multdestination forwarding classes to a multicast queue (8 through 11). The queue to which you map a forwarding class determines if the forwarding class is a unicast or multicast forwarding class.



**NOTE:** On systems that do not use the ELS CLI, if you are using Junos OS Release 12.2, use the default forwarding-class-to-queue mapping for the lossless fcoe and no-loss forwarding classes. If you explicitly configure the lossless forwarding classes, the traffic mapped to those forwarding classes is treated as lossy (best effort) traffic and does *not* receive lossless treatment.



**NOTE:** On systems that do not use the ELS CLI, if you are using Junos OS Release 12.3 or later, the default configuration is the same as the default configuration for Junos OS Release 12.2, and the default behavior is the same (the fcoe and no-loss forwarding classes receive lossless treatment). However, if you explicitly configure lossless forwarding classes, you can configure up to six lossless forwarding classes by specifying the no-loss option. If you do not specify the no-loss option in an explicit forwarding class configuration, the forwarding class is lossy. For example, if you explicitly configure the fcoe forwarding class and you do not include the no-loss option, the fcoe forwarding class is lossy, not lossless.

**Options** *class-name* —Name of the forwarding class.

The remaining statement is explained separately.

**Required Privilege Level** interfaces—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.



- Related Documentation**
- *Example: Configuring Forwarding Classes*
  - [Example: Configuring Forwarding Classes on page 72](#)
  - *Understanding CoS Forwarding Classes*
  - [Understanding CoS Forwarding Classes on page 67](#)
  - *Understanding CoS Forwarding Classes*

## class (Forwarding Class Sets)

**Supported Platforms** EX4600, OCX1100, QFabric System, QFX Series standalone switches

**Syntax** `class class-name;`

**Hierarchy Level** [edit [class-of-service](#) forwarding-class-sets *forwarding-class-set-name*]

**Release Information** Statement introduced in Junos OS Release 11.1 for the QFX Series.  
Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

**Description** Group forwarding classes into sets of forwarding classes (priority groups). You can group some or all of the configured forwarding classes into up to three unicast forwarding class sets and one multidestination forwarding class set.

**Options** *class-name* —Name of the forwarding class.

**Required Privilege Level** interfaces—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

- Related Documentation**
- *Example: Configuring CoS Hierarchical Port Scheduling (ETS)*
  - *Example: Configuring Forwarding Class Sets*
  - *Understanding CoS Forwarding Class Sets (Priority Groups)*

## classifiers

<b>Supported Platforms</b>	EX4600, OCX1100, QFabric System, QFX Series standalone switches
<b>List of Syntax</b>	<p>Syntax (BA Classifiers) on page 142</p> <p>Syntax (Multidestination BA Classifiers) on page 142</p> <p>Syntax (Interface Classifier Association: DSCP, DSCP IPv6, IEEE) on page 142</p> <p>Syntax (Global EXP Interface Classifier Association with Interfaces) on page 142</p>
<b>Syntax (BA Classifiers)</b>	<pre> classifiers {   (dscp   dscp-ipv6   ieee-802.1) classifier-name {     import (classifier-name   default);     forwarding-class class-name {       loss-priority level {         code-points [ aliases ] [ bit-patterns ];       }     }   } } </pre>
<b>Syntax (Multidestination BA Classifiers)</b>	<pre> classifiers {   (dscp   ieee-802.1) classifier-name; } </pre>
<b>Syntax (Interface Classifier Association: DSCP, DSCP IPv6, IEEE)</b>	<pre> classifiers {   (dscp   dscp-ipv6   ieee-802.1) (default   classifier-name); } </pre>
<b>Syntax (Global EXP Interface Classifier Association with Interfaces)</b>	<pre> classifiers {   exp classifier-name; } </pre>
<b>Hierarchy Level (BA Classifiers)</b>	[edit <a href="#">class-of-service</a> ],
<b>Hierarchy Level (Multidestination BA Classifiers)</b>	[edit <a href="#">class-of-service</a> multi-destination],
<b>Hierarchy Level (Interface Classifier Association: DSCP, DSCP IPv6, IEEE)</b>	[edit <a href="#">class-of-service</a> <a href="#">interfaces</a> <i>interface-name</i> <a href="#">unit</a> <i>logical-unit-number</i> ]
<b>Hierarchy Level (Global EXP Classifier)</b>	[edit <a href="#">class-of-service</a> system-defaults]
<b>Release Information</b>	<p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>EXP statement introduced in Junos OS Release 12.3 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
<b>Description</b>	Define a unicast or multidestination CoS behavior aggregate (BA) classifier.



**NOTE:** OCX Series switches do not support MPLS, so they do not support EXP classifier configuration.

<b>Options</b>	The statements are explained separately.
<b>Required Privilege Level</b>	<p>interfaces—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <i>Defining CoS Unicast BA Classifiers (DSCP, DSCP IPv6, IEEE 802.1p)</i></li> <li>• <a href="#">Defining CoS BA Classifiers (DSCP, DSCP IPv6, IEEE 802.1p) on page 41</a></li> <li>• <i>Configuring a Global MPLS EXP Classifier</i></li> <li>• <i>Example: Configuring Unicast Classifiers</i></li> <li>• <i>Example: Configuring Multidestination (Multicast, Broadcast, DLF) Classifiers</i></li> <li>• <i>Understanding CoS Classifiers</i></li> <li>• <a href="#">Understanding CoS Classifiers on page 35</a></li> <li>• <i>Understanding CoS Classifiers</i></li> <li>• <i>Understanding CoS MPLS EXP Classifiers and Rewrite Rules</i></li> </ul>

## code-point (Rewrite Rules)

---

Supported Platforms	EX4600, OCX1100, QFabric System, QFX Series standalone switches
Syntax	code-point [ <i>alias</i> ] [ <i>bit-pattern</i> ];
Hierarchy Level	[edit <a href="#">class-of-service rewrite-rules</a> ( <a href="#">dscp</a>   <a href="#">ieee-802.1</a> ) <a href="#">forwarding-class</a> <i>class-name</i> <a href="#">loss-priority</a> <i>level</i> ]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Configure a code-point alias or bit set to apply to a forwarding class for a rewrite rule.



**NOTE:** OCX Series switches do not support MPLS, so they do not support EXP rewrite rules.

---

Options	<i>alias</i> —Name of the alias.  <i>bit-pattern</i> —Value of the code-point bits, in decimal form.
Required Privilege Level	interfaces—To view this statement in the configuration. interface-control—To add this statement to the configuration.
Related Documentation	<ul style="list-style-type: none"><li>• <a href="#">Defining CoS Rewrite Rules on page 77</a></li><li>• <i>Understanding CoS Classifiers</i></li><li>• <i>Understanding CoS Classifiers</i></li></ul>

## code-point-aliases

**Supported Platforms** [QFX Series](#)

**Syntax**

```
code-point-aliases {
  (dscp| dscp-ipv6 | ieee-802.1 | exp) {
    alias-name bits;
  }
}
```

**Hierarchy Level** [edit [class-of-service](#)]

**Release Information** Statement introduced in Junos OS Release 11.1 for the QFX Series.  
Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

**Description** Define an alias for a CoS marker. You can use the alias instead of the bit pattern when you specify the code point during configuration.



**NOTE:** OCX Series switches do not support MPLS, so they do not support EXP code-point aliases.

**Options** (dscp | dscp-ipv6 | ieee-802.1 | exp)—Set the type of classifier for which you are creating an alias.

*alias-name*—Name of the code-point alias.

*bits* —Value of the code-point bits, in decimal form.

**Required Privilege Level** interfaces—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- [Defining CoS Code-Point Aliases on page 67](#)
- [Understanding CoS Code-Point Aliases on page 64](#)

## code-points (CoS)

---

**Supported Platforms** [SRX Series](#), [vSRX](#)

**Syntax** `code-points [ aliases ] [ bit-patterns ];`

**Hierarchy Level** [edit class-of-service classifiers (dscp | ieee-802.1) *classifier-name* forwarding-class *class-name* loss-priority *level*]

**Release Information** Statement introduced in Junos OS Release 11.1 for the QFX Series.  
Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

**Description** Configure one or more code-point aliases or bit sets to apply to a forwarding class.



**NOTE:** OCX Series switches do not support MPLS, so they do not support EXP code points or code point aliases.

---

**Options** *aliases*—Name of the alias or aliases.

*bit-patterns*—Value of the code-point bits, in decimal form.

**Required Privilege Level** interfaces—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- [Understanding Interfaces](#)
- [Example: Configuring BA Classifiers on Transparent Mode Devices](#)

## dscp

Supported Platforms	EX4600, OCX1100, QFabric System, QFX Series standalone switches
List of Syntax	<a href="#">Syntax (Classifier) on page 147</a> <a href="#">Syntax (Code-Point Alias) on page 147</a> <a href="#">Syntax (Multidestination Classifier) on page 147</a> <a href="#">Syntax (Interface Classifier Association) on page 147</a> <a href="#">Syntax (Rewrite Rule) on page 147</a>
Syntax (Classifier)	<pre>dscp classifier-name {   import (classifier-name   default);   forwarding-class class-name {     loss-priority level {       code-points [ aliases ] [ bit-patterns ];     }   } }</pre>
Syntax (Code-Point Alias Configuration)	<pre>dscp alias-name bit-pattern;</pre>
Syntax (Multidestination Classifier Configuration)	<pre>dscp classifier-name;</pre>
Syntax (Interface Classifier Association)	<pre>dscp (classifier-name   default);</pre>
Syntax (Rewrite Rule Configuration)	<pre>dscp rewrite-name {   import (rewrite-name   default);   forwarding-class class-name {     loss-priority level {       code-point [ aliases ] [ bit-patterns ];     }   } }</pre>
Hierarchy Level (Classifier)	[edit <a href="#">class-of-service classifiers</a> ],
Hierarchy Level (Code-Point Aliases)	[edit <a href="#">class-of-service code-point-aliases</a> ],
Hierarchy Level (Multidestination Classifier)	[edit <a href="#">class-of-service</a> multi-destination <a href="#">classifiers</a> ],
Hierarchy Level (Interface Classifier Association)	[edit <a href="#">class-of-service interfaces</a> <i>interface-name</i> <a href="#">unit</a> <i>logical-unit-number</i> <a href="#">classifiers</a> ], [edit <a href="#">class-of-service interfaces</a> <i>interface-name</i> <a href="#">unit</a> <i>logical-unit-number</i> <a href="#">rewrite-rules</a> ],
Hierarchy Level (Rewrite Rule)	[edit <a href="#">class-of-service rewrite-rules</a> ]

<b>Release Information</b>	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Define the Differentiated Services code point (DSCP) mapping that is applied to the packets.
<b>Options</b>	<i>classifier-name</i> —Name of the classifier.  The remaining statements are explained separately.
<b>Required Privilege Level</b>	interfaces—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Example: Configuring Unicast Classifiers</i></li><li>• <a href="#">Example: Configuring Classifiers on page 43</a></li><li>• <a href="#">Defining CoS Code-Point Aliases on page 67</a></li><li>• <a href="#">Defining CoS Rewrite Rules on page 77</a></li><li>• <a href="#">Assigning CoS Components to Interfaces on page 14</a></li><li>• <i>Understanding CoS Classifiers</i></li><li>• <a href="#">Understanding CoS Classifiers on page 35</a></li><li>• <i>Understanding CoS Classifiers</i></li><li>• <a href="#">Understanding CoS Rewrite Rules on page 74</a></li><li>• <a href="#">Understanding Applying CoS Classifiers and Rewrite Rules to Interfaces on page 51</a></li><li>• <i>Understanding Applying CoS Classifiers and Rewrite Rules to Interfaces</i></li></ul>



## dscp-ipv6

<b>Supported Platforms</b>	EX4600, OCX1100, QFabric System, QFX Series standalone switches
<b>List of Syntax</b>	<a href="#">Syntax (Classifier) on page 149</a> <a href="#">Syntax (Code-Point Alias) on page 149</a> <a href="#">Syntax (Interface Classifier Association) on page 149</a> <a href="#">Syntax (Rewrite Rule) on page 149</a>
<b>Syntax (Classifier)</b>	<pre>dscp-ipv6 classifier-name {   import (classifier-name   default);   forwarding-class class-name {     loss-priority level {       code-points [ aliases ] [ bit-patterns ];     }   } }</pre>
<b>Syntax (Code-Point Alias)</b>	<pre>dscp-ipv6 alias-name bit-pattern;</pre>
<b>Syntax (Interface Classifier Association)</b>	<pre>dscp-ipv6 (classifier-name   default);</pre>
<b>Syntax (Rewrite Rule)</b>	<pre>dscp-ipv6 rewrite-name {   import (rewrite-name   default);   forwarding-class class-name {     loss-priority level {       code-point [ aliases ] [ bit-patterns ];     }   } }</pre>
<b>Hierarchy (Classifier)</b>	[edit <a href="#">class-of-service classifiers</a> ],
<b>Hierarchy (Code-Point Alias)</b>	[edit <a href="#">class-of-service code-point-aliases</a> ],
<b>Hierarchy (Interface Classifier Association)</b>	[edit <a href="#">class-of-service interfaces interface-name unit logical-unit-number classifiers</a> ], [edit <a href="#">class-of-service interfaces interface-name unit logical-unit-number rewrite-rules</a> ],
<b>Hierarchy (Rewrite Rule)</b>	[edit <a href="#">class-of-service rewrite-rules</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 12.2 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series
<b>Description</b>	Define the Differentiated Services code point (DSCP) IPv6 mapping that is applied to the packets.



**NOTE:** On switches that use different classifiers for unicast and multdestination (multicast, broadcast, and destination lookup fail) traffic, there is no DSCP IPv6 classifier for multdestination (multicast, broadcast,

and destination lookup fail) traffic. Multidestination IPv6 traffic uses the multidestination DSCP classifier.

.....

<b>Options</b>	The statements are explained separately.
<b>Required Privilege Level</b>	interfaces—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Defining CoS Code-Point Aliases on page 67</a></li><li>• <a href="#">Understanding Applying CoS Classifiers and Rewrite Rules to Interfaces on page 51</a></li><li>• <i>Understanding Applying CoS Classifiers and Rewrite Rules to Interfaces</i></li></ul>

## exp

Supported Platforms	EX4600, QFX Series standalone switches
Syntax	<pre>exp classifier-name {   import (classifier-name   default);   forwarding-class class-name {     loss-priority level {       code-points [ aliases ] [ bit-patterns ];     }   } }</pre>
Rewrite Rule Configuration	<pre>exp rewrite-name {   import (rewrite-name   default);   forwarding-class class-name {     loss-priority level {       code-point [ aliases ] [ bit-patterns ];     }   } }</pre>
Global Classifier Association with Interfaces	exp classifier-name;
Hierarchy Level	<pre>[edit class-of-service classifiers] [edit class-of-service rewrite-rules] [edit class-of-service system-defaults classifiers]</pre>
Release Information	Statement introduced in Junos OS Release 12.3X50 for the QFX Series.
Description	<p>Define the EXP code point mapping that is applied to MPLS packets. EXP classifiers are not applied to any traffic except MPLS traffic. EXP classifiers are applied only to interfaces that are configured as <b>family mpls</b> (for example, <b>set interfaces xe-0/0/35 unit 0 family mpls.</b>)</p> <p>There are no default EXP classifiers. You can configure up to 64 EXP classifiers.</p> <p>On QFX10000 switches, you can configure and apply EXP classifiers to interfaces in the same way that you configure and apply DSCP, DSCP IPv6, and IEEE classifiers to interfaces. Different interfaces can have different EXP classifiers. QFX10000 switches do not support global EXP classifiers.</p> <p>However, QFX5100, EX4600, QFX3500, and QFX3600 switches, and on QFabric systems, the switch uses only one EXP classifier as a global MPLS classifier on all interfaces. You specify the global EXP classifier in the <b>[edit class-of-service system-defaults]</b> hierarchy.</p>
Options	<b>classifier-name</b> —Name of the EXP classifier.
Required Privilege Level	<p>interfaces—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>

**Related  
Documentation**

- *Configuring Rewrite Rules for MPLS EXP Classifiers*
- *Understanding CoS MPLS EXP Classifiers and Rewrite Rules*
- [Understanding Applying CoS Classifiers and Rewrite Rules to Interfaces on page 51](#)

## forwarding-class

<b>Supported Platforms</b>	EX4600, OCX1100, QFabric System, QFX Series standalone switches
<b>List of Syntax</b>	<a href="#">Classifier on page 153</a> <a href="#">Rewrite Rule on page 153</a> <a href="#">Scheduler Map on page 153</a> <a href="#">Interface on page 153</a>
<b>Classifier</b>	<pre>forwarding-class class-name {   loss-priority level {     code-points [ aliases ] [ bit-patterns ];   } }</pre>
<b>Rewrite Rule</b>	<pre>forwarding-class class-name {   loss-priority level {     code-point [ aliases ] [ bit-patterns ];   } }</pre>
<b>Scheduler Map</b>	<pre>forwarding-class class-name {   scheduler scheduler-name; }</pre>
<b>Interface</b>	<pre>forwarding-class class-name;</pre>
<b>Classifier Hierarchy Level</b>	[edit <a href="#">class-of-service classifiers</a> (dscp   dscp-ipv6   ieee-802.1   exp) classifier-name],
<b>Rewrite Rule Hierarchy Level</b>	[edit <a href="#">class-of-service rewrite-rules</a> ] (dscp   dscp-ipv6   ieee-802.1) rewrite-name   exp],
<b>Scheduler Map Hierarchy Level</b>	[edit <a href="#">class-of-service scheduler-maps</a> map-name],
<b>Interface Hierarchy Level</b>	[edit <a href="#">class-of-service interfaces</a> interface-name unit logical-unit-number]
<b>Release Information</b>	<p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
<b>Description</b>	<ul style="list-style-type: none"> <li>Classifiers—Assign incoming traffic to the specified forwarding class based on the specified code point values and assign that traffic the specified loss priority</li> <li>Rewrite rules—At the egress interface, change (rewrite) the value of the code point bits and the loss priority to specified new values for traffic assigned to the specified forwarding class, before forwarding the traffic to the next hop.</li> <li>Scheduler maps—Apply the specified scheduler to the specified forwarding class.</li> <li>Interfaces—Assign the specified forwarding class to the interface to use as a fixed classifier (all incoming traffic on the interface is classified into that forwarding class).</li> </ul>



**NOTE:** OCX Series switches do not support MPLS, so they do not support EXP classifiers or rewrite rules.

**Options**    *class-name*—Name of the forwarding class.

The remaining statements are explained separately.

**Required Privilege**    interfaces—To view this statement in the configuration.  
**Level**                    interface-control—To add this statement to the configuration.

## forwarding-classes

**Supported Platforms** EX4600, OCX1100, QFabric System, QFX Series standalone switches

**Syntax**

```
forwarding-classes {
  class {
    class-name {
      queue-num queue-number
      no-loss {
      }
    }
  }
}
```

**Hierarchy Level** [edit [class-of-service](#)]

**Release Information** Statement introduced in Junos OS Release 11.1 for the QFX Series.  
No-loss option introduced in Junos OS Release 12.3 for the QFX Series.  
Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series

**Description** Map one or more forwarding classes to a single output queue.

Switches that use different forwarding classes for unicast and multdestination (multicast, broadcast, and destination lookup fail) traffic support 12 forwarding classes and 12 output queues (0 through 11). You map unicast forwarding classes to a unicast queue (0 through 7) and multdestination forwarding classes to a multdestination queue (8 through 11). The queue to which you map a forwarding class determines if the forwarding class is a unicast or multdestination forwarding class.

Switches that use the same forwarding classes for unicast and multdestination traffic support eight forwarding classes and eight output queues (0 through 7). You map forwarding classes to output queues. All traffic classified into one forwarding class (unicast and multdestination) uses the same output queue.

You cannot configure weighted random early detection (WRED) packet drop on forwarding classes configured with the no-loss packet drop attribute. Do not associate a drop profile with lossless forwarding classes.



**NOTE:** If you map more than one forwarding class to a queue, all of the forwarding classes mapped to the queue must have the same packet drop attribute (all of the forwarding classes must be lossy, or all of the forwarding classes mapped to a queue must be lossless).

OCX Series switches do not support the no-loss packet drop attribute and do not support lossless forwarding classes. On OCX Series switches, do not configure the no-loss packet drop attribute on forwarding classes, and do not map traffic to the default fcoe and no-loss forwarding classes (both of these default forwarding classes carry the no-loss packet drop attribute).



NOTE: On switches that do not use the ELS CLI, if you are using Junos OS Release 12.2, use the default forwarding-class-to-queue mapping for the lossless fcoe and no-loss forwarding classes. If you explicitly configure the lossless forwarding classes, the traffic mapped to those forwarding classes is treated as lossy (best effort) traffic and does *not* receive lossless treatment.



NOTE: On switches that do not use the ELS CLI, if you are using Junos OS Release 12.3 or later, the default configuration is the same as the default configuration for Junos OS Release 12.2, and the default behavior is the same (the fcoe and no-loss forwarding classes receive lossless treatment). However, if you explicitly configure lossless forwarding classes, you can configure up to six lossless forwarding classes by specifying the no-loss option. If you do not specify the no-loss option in an explicit forwarding class configuration, the forwarding class is lossy. For example, if you explicitly configure the fcoe forwarding class and you do not include the no-loss option, the fcoe forwarding class is lossy, not lossless.

**Options**     The statements are explained separately.

**Required Privilege**     interfaces—To view this statement in the configuration.  
**Level**                     interface-control—To add this statement to the configuration.



## ieee-802.1

Supported Platforms	QFX Series
List of Syntax	<a href="#">Syntax (Classifier) on page 157</a> <a href="#">Syntax (Code-Point Alias) on page 157</a> <a href="#">Syntax (Multidestination Classifier) on page 157</a> <a href="#">Syntax (Interface Classifier Association) on page 157</a> <a href="#">Syntax (Rewrite Rule) on page 157</a>
Syntax (Classifier)	<pre>ieee-802.1 classifier-name {   import (classifier-name   default);   forwarding-class class-name {     loss-priority level {       code-points [ aliases ] [ bit-patterns ];     }   } }</pre>
Syntax (Code-Point Alias Configuration)	<pre>ieee-802.1 alias-name bit-pattern;</pre>
Syntax (Multidestination Classifier Configuration)	<pre>ieee-802.1 classifier-name;</pre>
Syntax (Interface Classifier Association)	<pre>ieee-802.1 (classifier-name   default);</pre>
Syntax (Rewrite Rule Configuration)	<pre>ieee-802.1 rewrite-name {   import (rewrite-name   default);   forwarding-class class-name {     loss-priority level {       code-point [ aliases ] [ bit-patterns ];     }   } }</pre>
Hierarchy Level (Classifier)	[edit <a href="#">class-of-service classifiers</a> ],
Hierarchy Level (Code-Point Alias)	[edit <a href="#">class-of-service code-point-aliases</a> ],
Hierarchy Level (Multidestination Classifier)	[edit <a href="#">class-of-service</a> multi-destination <a href="#">classifiers</a> ],
Hierarchy Level (Interface Classifier Association)	[edit <a href="#">class-of-service interfaces</a> <i>interface-name</i> <a href="#">unit</a> <i>logical-unit-number</i> <a href="#">classifiers</a> ], [edit <a href="#">class-of-service interfaces</a> <i>interface-name</i> <a href="#">unit</a> <i>logical-unit-number</i> <a href="#">rewrite-rules</a> ],
Hierarchy Level (Rewrite Rule)	[edit <a href="#">class-of-service rewrite-rules</a> ]

<b>Release Information</b>	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Configure an IEEE 802.1 classifier, configure an IEEE 802.1 code-point alias, apply a fixed IEEE 802.1 classifier to an interface, or apply an IEEE-802.1 rewrite rule.
<b>Options</b>	<i>classifier-name</i> —Name of the classifier.  The remaining statements are explained separately.
<b>Required Privilege Level</b>	interfaces—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <i>Example: Configuring Unicast Classifiers</i></li><li>• <a href="#">Defining CoS Code-Point Aliases on page 67</a></li><li>• <a href="#">Defining CoS Rewrite Rules on page 77</a></li><li>• <a href="#">Assigning CoS Components to Interfaces on page 14</a></li><li>• <a href="#">Understanding Applying CoS Classifiers and Rewrite Rules to Interfaces on page 51</a></li><li>• <i>Understanding Applying CoS Classifiers and Rewrite Rules to Interfaces</i></li><li>• <i>Understanding CoS Classifiers</i></li><li>• <i>Understanding CoS Classifiers</i></li><li>• <a href="#">Understanding CoS Rewrite Rules on page 74</a></li></ul>

## import

**Supported Platforms** [QFX Series](#)

**Syntax** `import (import | default);`

**Hierarchy Level** `[edit class-of-service classifiers (dscp | dscp-ipv6 | ieee-802.1 | exp) classifier-name],`  
`[edit class-of-service rewrite-rules (dscp | dscp-ipv6 | ieee-802.1 | exp) classifier-name]`

**Release Information** Statement introduced in Junos OS Release 11.1 for the QFX Series.  
Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

**Description** Specify a default or previously defined classifier.



**NOTE:** OCX Series switches do not support MPLS, so they do not support EXP classifiers and rewrite rules.

**Options** *import*—Name of the classifier mapping configured at the `[edit class-of-service classifiers]` hierarchy level.

*default*—Default classifier mapping.

The remaining statements are explained separately.

**Required Privilege Level** *interfaces*—To view this statement in the configuration.  
*interface-control*—To add this statement to the configuration.

- Related Documentation**
- [Example: Configuring Unicast Classifiers](#)
  - [Defining CoS BA Classifiers \(DSCP, DSCP IPv6, IEEE 802.1p\) on page 41](#)
  - [Defining CoS Rewrite Rules on page 77](#)
  - [Understanding CoS Classifiers](#)
  - [Understanding CoS Classifiers](#)
  - [Understanding CoS Classifiers on page 35](#)
  - [Understanding CoS Rewrite Rules on page 74](#)

## interfaces (Class of Service)

**Supported Platforms** EX4600, OCX1100, QFabric System, QFX Series standalone switches

**Syntax**

```

interfaces {
  interface-name {
    congestion-notification-profile profile-name {
    }
    forwarding-class forwarding-class-name;
    forwarding-class-set forwarding-class-set-name {
      output-traffic-control-profile profile-name;
    }
    rewrite-value {
      input {
        ieee-802.1 {
          code-point code-point-bits;
        }
      }
    }
  }
  scheduler-map scheduler-map-name
  unit logical-unit-number {
    classifiers {
      (dscp | dscp-ipv6 | ieee-802.1 | exp) (classifier-name | default);
    }
    forwarding-class class-name;
    rewrite-rules {
      (dscp | dscp-ipv6 | ieee-802.1 | exp) (classifier-name | default);
    }
  }
}

```

**Hierarchy Level** [edit [class-of-service](#)]

**Release Information** Statement introduced in Junos OS Release 11.1 for the QFX Series.  
Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series

**Description** Configure interface-specific CoS properties for incoming packets.



**NOTE:** Only switches that support direct port scheduling also support applying a scheduler map directly to an interface. When using enhanced transmission selection (ETS) hierarchical port scheduling, you cannot apply a scheduler map directly to an interface; instead, you associate the scheduler map with a traffic control profile and apply the traffic control profile to the interface.



**NOTE:** Only switches that support native Fibre Channel interfaces support the rewrite-value statement, which enables you to rewrite the IEEE 802.1p code points on native Fibre Channel interfaces.



**NOTE:** OCX Series switches do not support MPLS, so they do not support EXP classifiers or rewrite rules. OCX Series switches do not support the congestion-notification-profile configuration statement, which applies priority-based flow control (PFC) to interface output queues.

**Options** *interface-name*—Name of the interface.

The statements are explained separately.

**Required Privilege Level** interfaces—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

**Related Documentation**

- [Assigning CoS Components to Interfaces on page 14](#)
- *Interfaces Overview*

## loss-priority (Classifiers)


<b>Supported Platforms</b>	EX4600, OCX1100, QFabric System, QFX Series standalone switches
<b>Syntax</b>	<pre>loss-priority level {   code-points [ aliases ] [ bit-patterns ]; }</pre>
<b>Hierarchy Level</b>	[edit <a href="#">class-of-service classifiers</a> ( <a href="#">dscp</a>   <a href="#">dscp-ipv6</a>   <a href="#">ieee-802.1</a> ) <i>classifier-name</i> forwarding-class <i>class-name</i> ]
<b>Release Information</b>	<p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
<b>Description</b>	Configure packet loss priority value for a specific set of code-point aliases and bit patterns.



**NOTE:** OCX Series switches do not support MPLS, so they do not support EXP classifiers.

<b>Options</b>	<p><i>level</i>—Can be one of the following:</p> <ul style="list-style-type: none"> <li><b>low</b>—Packet has low loss priority.</li> <li><b>medium-high</b>—Packet has medium-high loss priority.</li> <li><b>high</b>—Packet has high loss priority.</li> </ul> <p>The remaining statement is explained separately.</p>
<b>Required Privilege Level</b>	<p>interfaces—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li><i>Example: Configuring Unicast Classifiers</i></li> <li><a href="#">Defining CoS BA Classifiers (DSCP, DSCP IPv6, IEEE 802.1p) on page 41</a></li> <li><i>Understanding CoS Classifiers</i></li> <li><a href="#">Understanding CoS Classifiers on page 35</a></li> <li><i>Understanding CoS Classifiers</i></li> </ul>

## loss-priority (Rewrite Rules)

<b>Supported Platforms</b>	EX4600, OCX1100, QFabric System, QFX Series standalone switches
<b>Syntax</b>	<pre>loss-priority <i>level</i> {   code-point (<i>alias</i>   <i>bit-pattern</i>); }</pre>
<b>Hierarchy Level</b>	[edit <b>class-of-service</b> <b>rewrite-rules</b> ( <b>dscp</b>   <b>ieee-802.1</b> ) <i>rewrite-name</i> <b>forwarding-class</b> <i>class-name</i> ]
<b>Release Information</b>	<p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
<b>Description</b>	Specify a loss priority to which to apply a rewrite rule. The rewrite rule sets the code-point aliases and bit patterns for a specific forwarding class and loss priority. Packets that match the forwarding class and loss priority are rewritten with the rewrite code-point alias or bit pattern.
<div>  <p><b>NOTE:</b> OCX Series switches do not support MPLS, so they do not support EXP rewrite rules.</p> </div>	
<b>Options</b>	<p><b>level</b>—Can be one of the following:</p> <ul style="list-style-type: none"> <li><b>low</b>—Packet has low loss priority.</li> <li><b>medium-high</b>—Packet has medium-high loss priority.</li> <li><b>high</b>—Packet has high loss priority.</li> </ul> <p>The remaining statement is explained separately.</p>
<b>Required Privilege Level</b>	<p><b>interfaces</b>—To view this statement in the configuration.</p> <p><b>interface-control</b>—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>Defining CoS Rewrite Rules on page 77</li> <li>Understanding CoS Rewrite Rules on page 74</li> </ul>

## queue-num

---

**Supported Platforms** EX4600, OCX1100, QFabric System, QFX Series standalone switches

**Syntax** queue-num *queue-number* <no-loss>;

**Hierarchy Level** [edit **class-of-service forwarding-classes class** *class-name*]

**Release Information** Statement introduced in Junos OS Release 11.1 for the QFX Series.  
No-loss option introduced in Junos OS Release 12.3 for the QFX Series.  
Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

**Description** Map a forwarding class to an output queue number. Optionally, configure the forwarding class as a lossless forwarding class. Each switch provides enough output queues so that you can map forwarding classes to queues on a one-to-one basis, so each forwarding class can have a dedicated output queue.

On switches that use different forwarding classes and output queues for unicast and multdestination (multicast, broadcast, destination lookup fail) traffic, the switch supports 12 forwarding classes and 12 output queues, eight of each for unicast traffic and four of each for multdestination traffic. You can map some or all of the eight unicast forwarding classes to a unicast queue (0 through 7) and some or all of the four multdestination forwarding classes to the a multdestination queue (8 through 11). You cannot map a forwarding class to more than one queue (each forwarding class maps to one and only one queue), but you can map multiple forwarding classes to one queue. The queue to which you map a forwarding class determines if the forwarding class is a unicast or multdestination forwarding class.

On switches that use the same forwarding classes and output queues for unicast and multdestination traffic, the switch supports eight forwarding classes and eight output queues. You can map some or all of the eight of the forwarding classes to queues (0 through 7). You cannot map a forwarding class to more than one queue (each forwarding class maps to one and only one queue), but you can map multiple forwarding classes to one queue.

You cannot configure weighted random early detection (WRED) packet drop on forwarding classes configured with the no-loss packet drop attribute. Do not associate a drop profile with lossless forwarding classes. Instead, use priority-based flow control (PFC) to prevent frame drop on lossless forwarding classes.



**NOTE:** If you map more than one forwarding class to a queue, all of the forwarding classes mapped to the same queue must have the same packet drop attribute (all of the forwarding classes must be lossy, or all of the forwarding classes mapped to a queue must be lossless).

OCX Series switches do not support the no-loss packet drop attribute and do not support lossless forwarding classes. On OCX Series switches, do not configure the no-loss packet drop attribute on forwarding classes, and do



not map traffic to the default `fcoe` and `no-loss` forwarding classes (both of these default forwarding classes carry the `no-loss` packet drop attribute).



**NOTE:** On systems that do not use the ELS CLI, if you are using Junos OS Release 12.2, use the default forwarding-class-to-queue mapping for the lossless `fcoe` and `no-loss` forwarding classes. If you explicitly configure lossless forwarding classes, the traffic mapped to those forwarding classes is treated as lossy (best effort) traffic and does *not* receive lossless treatment.



**NOTE:** On systems that do not use the ELS CLI, if you are using Junos OS Release 12.3 or later, the default configuration is the same as the default configuration for Junos OS Release 12.2, and the default behavior is the same (the `fcoe` and `no-loss` forwarding classes receive lossless treatment). However, if you explicitly configure lossless forwarding classes, you can configure up to six lossless forwarding classes by specifying the `no-loss` option. If you do not specify the `no-loss` option in an explicit forwarding class configuration, the forwarding class is lossy. For example, if you explicitly configure the `fcoe` forwarding class and you do not include the `no-loss` option, the `fcoe` forwarding class is lossy, not lossless.


**Options** *queue-number*—(Switches that use different output queues for unicast and multidestination traffic) Number of the CoS unicast queue (0 through 7) or the CoS multidestination queue (8 through 11).

*queue-number*—(Switches that use the same output queues for unicast and multidestination traffic) Number of the CoS queue (0 through 7).

*no-loss*—Optional packet drop attribute keyword to configure the forwarding class as lossless.

**Required Privilege Level** *interfaces*—To view this statement in the configuration.  
*interface-control*—To add this statement to the configuration.

## rewrite-rules

<b>Supported Platforms</b>	EX4600, OCX1100, QFabric System, QFX Series standalone switches
<b>List of Syntax</b>	Syntax (Rewrite Rule Configuration) on page 166 Syntax (Rewrite Rule Association with Interface) on page 166
<b>Syntax (Rewrite Rule Configuration)</b>	<pre>rewrite-rules {   (dscp   dscp-ipv6   ieee-802.1   exp) rewrite-name {     import (rewrite-name   default);     forwarding-class class-name {       loss-priority priority code-point (alias   bits);     }   } }</pre>
<b>Syntax (Rewrite Rule Association with Interface)</b>	<pre>rewrite-rules {   (dscp   dscp-ipv6   ieee-802.1   exp) rewrite-name; }</pre>
<b>Hierarchy Level (Rewrite Rule Configuration)</b>	[edit <a href="#">class-of-service</a> ],
<b>Hierarchy Level (Rewrite Rule Association with Interface)</b>	[edit <a href="#">class-of-service interfaces</a> <i>interface-name</i> <a href="#">unit</a> <i>logical-unit-number</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.1 for the QFX Series. EXP statement introduced in Junos OS Release 12.3 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	<p>Configure rewrite rules that map traffic to code points when traffic exits the system, and apply the rewrite rules to a specific interface.</p> <p>MPLS EXP rewrite rules can only be bound to logical interfaces, not to physical interfaces. You can configure up to 64 EXP rewrite rules, but you can use only 16 EXP rewrite rules on switch interfaces at any given time.</p>
	<div>  <p><b>NOTE:</b> OCX Series switches do not support MPLS, so they do not support EXP rewrite rules.</p> </div>
<b>Options</b>	The statements are explained separately.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>Defining CoS Rewrite Rules on page 77</li> </ul>

- [Configuring Rewrite Rules for MPLS EXP Classifiers](#)
- [Understanding CoS Rewrite Rules on page 74](#)
- [Understanding CoS MPLS EXP Classifiers and Rewrite Rules](#)

## unit

**Supported Platforms** [EX4600, OCX1100, QFabric System, QFX Series standalone switches](#)

**Syntax** `unit logical-unit-number {  
     classifiers {  
         (dscp | dscp-ipv6 | ieee-802.1 | exp) (classifier-name | default);  
     }  
     forwarding-class class-name;  
     rewrite-rules {  
         (dscp | dscp-ipv6 | ieee-802.1 | exp) (classifier-name | default);  
     }  
 }`

**Hierarchy Level** [edit [class-of-service interfaces](#) *interface-name*]

**Release Information** Statement introduced in Junos OS Release 11.1 for the QFX Series.  
 Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

**Description** Configure a logical interface on the physical device. You must configure a logical interface to use the physical device.



**NOTE:** OCX Series switches do not support MPLS, so they do not support EXP classifiers and rewrite rules.

**Options** *logical-unit-number*—Number of the logical unit.

**Range:** 0 through 16,385

The remaining statements are explained separately.

**Required Privilege Level** *interfaces*—To view this statement in the configuration.  
*interface-control*—To add this statement to the configuration.

**Related Documentation** • [Assigning CoS Components to Interfaces on page 14](#)



## CHAPTER 6

# Configuration Statements (Scheduling)

- [buffer-size on page 170](#)
- [excess-rate on page 175](#)
- [fill-level on page 176](#)
- [forwarding-class on page 178](#)
- [guaranteed-rate on page 180](#)
- [interpolate on page 181](#)
- [output-traffic-control-profile on page 182](#)
- [priority \(Schedulers\) on page 183](#)
- [scheduler on page 184](#)
- [scheduler-map on page 185](#)
- [scheduler-maps on page 185](#)
- [schedulers on page 186](#)
- [shaping-rate on page 187](#)
- [traffic-control-profiles on page 189](#)
- [transmit-rate on page 190](#)

## buffer-size

---

**Supported Platforms** EX4600, OCX1100, QFX Series standalone switches

**Syntax** buffer-size (percent *percent* | remainder);

**Hierarchy Level** [edit [class-of-service schedulers](#) *scheduler-name*]

**Release Information** Statement introduced in Junos OS Release 12.3 for the QFX Series.  
Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

**Description** On all switches, you configure the proportion of port buffers allocated to a particular output queue using the following process:

1. Configure a scheduler and set the **buffer-size** option.
2. Use a scheduler map to map the scheduler to the forwarding class that is mapped to the queue to which you want to apply the buffer size.  
  
For example, suppose that you want to change the dedicated buffer allocation for FCoE traffic. FCoE traffic is mapped to the fcoe forwarding class, and the fcoe forwarding class is mapped to queue 3 (this is the default configuration). To use default FCoE traffic mapping, in the scheduler map configuration, map the scheduler to the **fcoe** forwarding class.
3. If you are using enhanced transmission selection (ETS) hierarchical scheduling, associate the scheduler map with the traffic control profile you want to use on the egress ports that carry FCoE traffic. If you are using direct port scheduling, skip this step.
4. If you are using ETS, associate the traffic control profile that includes the scheduler map with the desired egress ports. For this example, you associate the traffic control profile with the ports that carry FCoE traffic. If you are using port scheduling, associate the scheduler map with the desired egress ports.

Queue 3, which is mapped to the fcoe forwarding class and therefore to the FCoE traffic, receives the dedicated buffer allocation specified in the **buffer-size** statement.



**NOTE:** The total of all of the explicitly configured buffer size percentages for all of the queues on a port cannot exceed 100 percent.

---

### QFX10000 Switches

On QFX10000 switches, the buffer size is the amount of time in milliseconds of port bandwidth that a queue can use to continue to transmit packets during periods of congestion, before the buffer runs out and packets begin to drop.

The switch can use up to 100 ms total (combined) buffer space for all queues on a port. A buffer-size configured as one percent is equal to 1 ms of buffer usage. A buffer-size of 15 percent (the default value for the best effort and network control queues) is equal to 15 ms of buffer usage.

The total buffer size of the switch is 4 GB. A 40-Gigabit port can use up to 500 MB of buffer space, which is equivalent to 100 ms of port bandwidth on a 40-Gigabit port. A 10-Gigabit port can use up to 125 MB of buffer space, which is equivalent to 100 ms of port bandwidth on a 10-Gigabit port. The total buffer sizes of the eight output queues on a port cannot exceed 100 percent, which is equal to the full 100 ms total buffer available to a port. The maximum amount of buffer space any queue can use is also 100 ms (which equates to a 100 percent buffer-size configuration), but if one queue uses all of the buffer, then no other queue receives buffer space.

There is no minimum buffer allocation, so you can set the buffer-size to zero (0) for a queue. However, we recommend that on queues on which you enable PFC to support lossless transport, you allocate a minimum of 5 ms (a minimum buffer-size of 5 percent). The two default lossless queues, fcoe and no-loss, have buffer-size default values of 35 ms (35 percent).

Queue buffer allocation is dynamic, shared among ports as needed. However, a queue cannot use more than its configured amount of buffer space. For example, if you are using the default CoS configuration, the best-effort queue receives a maximum of 15 ms of buffer space because the default transmit rate for the best-effort queue is 15 percent.

If a switch experiences congestion, queues continue to receive their full buffer allocation until 90 percent of the 4 GB buffer space is consumed. When 90 percent of the buffer space is in use, the amount of buffer space per port, per queue, is reduced in proportion to the configured buffer size for each queue. As the percentage of consumed buffer space rises above 90 percent, the amount of buffer space per port, per queue, continues to be reduced.

On 40-Gigabit ports, because the total buffer is 4 GB and the maximum buffer a port can use is 500 MB, up to seven 40-Gigabit ports can consume their full 100 ms allocation of buffer space. However, if an eighth 40-Gigabit port requires the full 500 MB of buffer space, then the buffer allocations are proportionally reduced because the buffer consumption is above 90 percent.

On 10-Gigabit ports, because the total buffer is 4 GB and the maximum buffer a port can use is 125 MB, up to 28 10-Gigabit ports can consume their full 100 ms allocation of buffer space. However, if a 29th 10-Gigabit port requires the full 125 MB of buffer space, then the buffer allocations are proportionally reduced because the buffer consumption is above 90 percent.

**QFX5100, EX4600,  
QFX3500, and  
QFX3600 Switches,  
and QFabric Systems**

Set the dedicated buffer size of the egress queue that you bind the scheduler to in the scheduler map configuration. The switch allocates space from the global dedicated buffer pool to ports and queues in a hierarchical manner. The switch allocates an equal number of dedicated buffers to each egress port, so each egress port receives the same amount of dedicated buffer space. The amount of dedicated buffer space per port is not configurable.

However, the **buffer-size** statement allows you to control the way each port allocates its share of dedicated buffers to its queues. For example, if a port only uses two queues to forward traffic, you can configure the port to allocate all of its dedicated buffer space to those two ports and avoid wasting buffer space on queues that are not in use. We recommend that the buffer size should be the same size as the minimum guaranteed transmission rate (the **transmit-rate**).



**Default** The default behavior of the differs on different switches.

#### QFX10000 Switches

If you do not configure buffer-size and you do not explicitly configure a queue scheduler, the default buffer-size is the default transmit rate of the queue. If you explicitly configure a queue scheduler, the default buffer allocations are not used. If you explicitly configure a queue scheduler, configure the buffer-size for each queue in the scheduler, keeping in mind that the total buffer-size of the queues cannot exceed 100 percent (100 ms).

[Table 42 on page 173](#) shows the default queue buffer sizes on QFX10000 switches. The default buffer size is the same as the default transmit rate for each default queue:

**Table 42: Default Output Queue Buffer Sizes (QFX10000 Switches)**

Queue Number	Forwarding Class	Transmit Rate	Buffer Size
0	best-effort	15%	15%
3	fcoe	35%	35%
4	no-loss	35%	35%
7	network-control	15%	15%

By default, only the queues mapped to the default forwarding classes receive buffer space from the port buffer pool. (Buffers are not wasted on queues that do not carry traffic.)

#### QFX5100, EX4600, QFX3500, and QFX3600 Switches, and QFabric Systems

The port allocates dedicated buffers to queues that have an explicitly configured scheduler buffer size. If you do not explicitly configure a scheduler buffer size for a queue, the port serves the explicitly configured queues first. Then the port divides the remaining dedicated buffers equally among the queues that have an explicitly attached scheduler *without* an explicitly configured buffer size configuration. (If you configure a scheduler, but you do not configure the buffer size parameter, the default is equivalent to configuring the buffer size with the **remainder** option.)

If you use the default scheduler and scheduler map on a port (no explicit scheduler configuration), then the port allocates its dedicated buffer pool to queues based on the default scheduling. [Table 43 on page 174](#) shows the default queue buffer sizes. The default buffer size is the same as the default transmit rate for each default queue:

Table 43: Default Output Queue Buffer Sizes (QFX5100, EX4600, QFX3500, and QFX3600 Switches, and QFabric Systems)

Queue Number	Forwarding Class	Transmit Rate	Buffer Size
0	best-effort	5%	5%
3	fcoe	35%	35%
4	no-loss	35%	35%
7	network-control	5%	5%
8	mcast	20%	20%

By default, only the queues mapped to the default forwarding classes receive buffer space from the port buffer pool. (Buffers are not wasted on queues that do not carry traffic.)



**NOTE:** OCX Series switches do not support lossless transport. On OCX Series switches, do not map traffic to the lossless default fcoe and no-loss forwarding classes. OCX Series default DSCP classification does not map traffic to the fcoe and no-loss forwarding classes, so by default, the OCX system does not classify traffic into those forwarding classes. (On other switches, the fcoe and no-loss forwarding classes provide lossless transport for Layer 2 traffic. OCX Series switches do not support lossless Layer 2 transport.) The active forwarding classes (best-effort, network-control, and mcast) share the unused bandwidth assigned to the fcoe and no-loss forwarding classes.

**Options**    **percent percent**—Percentage of the port dedicated buffer pool allocated to the queue (or queues) mapped to the scheduler.

**remainder**—Remaining dedicated buffer pool after the port satisfies the needs of the explicitly configured buffers. The port divides the remaining buffers equally among the queues that are explicitly attached to a scheduler but that do not have an explicit buffer size configuration (or are configured with **remainder** as the buffer size).


**Required Privilege Level**    interfaces—To view this statement in the configuration.  
    interface-control—To add this statement to the configuration.

## excess-rate

---

<b>Supported Platforms</b>	QFX Series standalone switches
<b>Syntax</b>	excess-rate percent <i>percentage</i> ;
<b>Hierarchy Level</b>	[edit <a href="#">class-of-service traffic-control-profiles</a> <i>profile-name</i> ], [edit <a href="#">class-of-service schedulers</a> <i>scheduler-name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 15.1X53-D10 for the QFX Series.
<b>Description</b>	<p>Determine the percentage of excess port bandwidth for which a queue (forwarding class) that is not a strict-high priority queue or forwarding class set (priority group) can contend. Excess bandwidth is the extra port bandwidth left after strict-high priority queues and the guaranteed minimum bandwidth requirements of other queues (as determined by each queue's transmit rate) are satisfied. With the exception of strict-high priority queues, the switch allocates extra port bandwidth to queues or to priority groups based on the configured excess rate. If you do not configure an excess rate for a queue, the default excess rate is the same as the transmit rate.</p> <p>You cannot configure an excess rate on strict-high priority queues. Strict-high priority queues receive extra bandwidth based on an extra bandwidth sharing weight of "1", which is not configurable. However, the switch serves traffic on strict-high priority queues up to the configured transmit rate before it serves any other queues, so by configuring an appropriate transmit rate on a strict-high priority queue, you can guarantee strict-high priority traffic on that queue is treated in the manner you want.</p>
<b>Options</b>	<p><b>percent <i>percentage</i></b>—Percentage of the excess bandwidth to share.</p> <p><b>Range:</b> 0 through 100 percent</p>
<b>Required Privilege Level</b>	<p>interface—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Defining CoS Queue Schedulers for Port Scheduling on page 97</a></li> <li>• <a href="#">Example: Configuring Traffic Control Profiles (Priority Group Scheduling) on page 111</a></li> <li>• <a href="#">Understanding CoS Port Schedulers on QFX Switches</a></li> <li>• <a href="#">Understanding CoS Traffic Control Profiles on page 105</a></li> </ul>

## fill-level

Supported Platforms	EX4600, OCX1100, QFabric System, QFX Series standalone switches
List of Syntax	QFX5100, EX4600, QFX3500, and QFX3600, Switches, QFabric Systems on page 176 QFX10000 Switches on page 176
QFX5100, EX4600, QFX3500, and QFX3600, Switches, QFabric Systems	fill-level <i>low-value</i> fill-level <i>high-value</i> ;
QFX10000 Switches	fill-level <i>level1 level2 ... level32</i> ;
Hierarchy Level	[edit <a href="#">class-of-service</a> drop-profiles <i>profile-name</i> <a href="#">interpolate</a> ]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	<p>When configuring weighted random early detection (WRED), map the fullness of a queue to a packet <i>drop-probability</i> value. You configure the <b>fill-level</b> and <b>drop-probability</b> statements in related pairs. The pairs of fill level and drop probability values set a probability of dropping packets at a specified queue fullness value.</p> <p>The first fill level is the packet drop start point. Packets do not drop until the queue fullness reaches the first fill level. The last fill level is the packet drop end point. After the queue exceeds the fullness set by the drop end point, all non-ECN packets are dropped. As the queue fills from the drop start point to the drop end point, the rate of packet drop increases in a curve pattern. The higher the queue fill level, the higher the probability of dropping packets.</p> <p>On switches that support only two fill level/drop probability pairs, the two pairs are the drop start point and the drop end point. On switches that support up to 32 fill level/drop probability pairs, you can configure intermediate interpolations between the drop start point and the drop end point, which provides greater flexibility in controlling the packet drop curve.</p>
	<p> <b>NOTE:</b> Do not configure the last fill level as 100 percent.</p>
Options	<p><b>low-value</b> (switches that support only two fill level/drop probability pairs)—Fullness of the queue before packets begin to drop, expressed as a percentage. The low value must be less than the high value.</p> <p><b>Range:</b> 0 through 100</p> <p><b>high-value</b> (switches that support only two fill level/drop probability pairs)—Fullness of the queue before it reaches the maximum drop probability. If the queue fills beyond the fill level high value, all packets drop. The high value must be greater than the low value.</p>

**Range:** 0 through 100

*level1 level2 ... level32* (switches that support 32 fill level/drop probability pairs)—The queue fullness level, expressed as a percentage. Each fill level pairs with a drop probability to define the probability of a packet dropping at a specified queue fullness.

**Range:** 0 through 100

<b>Required Privilege</b>	interface—To view this statement in the configuration.
<b>Level</b>	interface-control—To add this statement to the configuration.

## forwarding-class

<b>Supported Platforms</b>	EX4600, OCX1100, QFabric System, QFX Series standalone switches
<b>List of Syntax</b>	<a href="#">Classifier on page 178</a> <a href="#">Rewrite Rule on page 178</a> <a href="#">Scheduler Map on page 178</a> <a href="#">Interface on page 178</a>
<b>Classifier</b>	<pre>forwarding-class class-name {   loss-priority level {     code-points [ aliases ] [ bit-patterns ];   } }</pre>
<b>Rewrite Rule</b>	<pre>forwarding-class class-name {   loss-priority level {     code-point [ aliases ] [ bit-patterns ];   } }</pre>
<b>Scheduler Map</b>	<pre>forwarding-class class-name {   scheduler scheduler-name; }</pre>
<b>Interface</b>	<pre>forwarding-class class-name;</pre>
<b>Classifier Hierarchy Level</b>	[edit <a href="#">class-of-service classifiers</a> (dscp   dscp-ipv6   ieee-802.1   exp) classifier-name],
<b>Rewrite Rule Hierarchy Level</b>	[edit <a href="#">class-of-service rewrite-rules</a> ] (dscp   dscp-ipv6   ieee-802.1) rewrite-name   exp],
<b>Scheduler Map Hierarchy Level</b>	[edit <a href="#">class-of-service scheduler-maps</a> map-name],
<b>Interface Hierarchy Level</b>	[edit <a href="#">class-of-service interfaces</a> interface-name unit logical-unit-number]
<b>Release Information</b>	<p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
<b>Description</b>	<ul style="list-style-type: none"> <li>Classifiers—Assign incoming traffic to the specified forwarding class based on the specified code point values and assign that traffic the specified loss priority</li> <li>Rewrite rules—At the egress interface, change (rewrite) the value of the code point bits and the loss priority to specified new values for traffic assigned to the specified forwarding class, before forwarding the traffic to the next hop.</li> <li>Scheduler maps—Apply the specified scheduler to the specified forwarding class.</li> <li>Interfaces—Assign the specified forwarding class to the interface to use as a fixed classifier (all incoming traffic on the interface is classified into that forwarding class).</li> </ul>



**NOTE:** OCX Series switches do not support MPLS, so they do not support EXP classifiers or rewrite rules.

**Options** *class-name*—Name of the forwarding class.

The remaining statements are explained separately.

**Required Privilege** interfaces—To view this statement in the configuration.  
**Level** interface-control—To add this statement to the configuration.

## guaranteed-rate

<b>Supported Platforms</b>	EX4600, OCX1100, QFabric System, QFX Series standalone switches
<b>Syntax</b>	guaranteed-rate ( <i>rate</i>   percent <i>percentage</i> );
<b>Hierarchy Level</b>	[edit <a href="#">class-of-service traffic-control-profiles</a> <i>traffic-control-profile-name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Configure a guaranteed minimum rate of transmission for a traffic control profile. The sum of the guaranteed rates of all of the forwarding class sets (priority groups) on a port should not exceed the total port bandwidth. The guaranteed rate also determines the amount of excess (extra) port bandwidth that the priority group (forwarding class set) can share. Extra port bandwidth is allocated among the priority groups on a port in proportion to the guaranteed rate of each priority group.



**NOTE:** You cannot configure a guaranteed rate for a forwarding class set (priority group) that includes strict-high priority queues. If the traffic control profile is for a forwarding class set that contains strict-high priority queues, do not configure a guaranteed rate.

**Default** If you do not specify a guaranteed rate, the guaranteed rate is zero (0) and there is no minimum guaranteed bandwidth.



**NOTE:** If you do not configure a guaranteed rate for a traffic control profile, the queues that belong to any forwarding class set (priority group) that uses that traffic control profile cannot have a configured transmit rate. The result is that there is no minimum guaranteed bandwidth for those queues and that those queues can be starved during periods of congestion.

**Options** **percent *percentage***—Minimum percentage of transmission capacity allocated to the forwarding class set or logical interface.  
**Range:** 1 through 100 percent

***rate***—Minimum transmission rate allocated to the forwarding class set or logical interface, in bits per second (bps). You can specify a value in bits per second either as a complete decimal number or as a decimal number followed by the abbreviation **k** (1000), **m** (1,000,000), or **g** (1,000,000,000).  
**Range:** 1000 through 10,000,000,000 bps

**Required Privilege Level** interfaces—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.



- Related Documentation**
- [Example: Configuring CoS Hierarchical Port Scheduling \(ETS\)](#)
  - [Example: Configuring Traffic Control Profiles \(Priority Group Scheduling\) on page 111](#)
  - [Example: Configuring Minimum Guaranteed Output Bandwidth on page 117](#)
  - [Understanding CoS Traffic Control Profiles on page 105](#)
  - [output-traffic-control-profile on page 182](#)

## interpolate

<b>Supported Platforms</b>	EX4600, OCX1100, QFabric System, QFX Series standalone switches
<b>List of Syntax</b>	QFX5100, EX4600, QFX3500, and QFX3600, Switches, QFabric Systems on page 181 QFX10000 Switches on page 181
QFX5100, EX4600, QFX3500, and QFX3600, Switches, QFabric Systems	<pre>interpolate {   fill-level low-value fill-level high-value;   drop-probability 0 drop-probability high-value; }</pre>
QFX10000 Switches	<pre>interpolate {   fill-level level1 level2 ... level32 drop-probability percent1 percent2 ... percent32; }</pre>
<b>Hierarchy Level</b>	[edit class-of-service drop-profiles <i>profile-name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Specify values for interpolating the relationship between queue fill level and drop probability for weighted random early detection (WRED) drop profiles.  The statements are explained separately.
<b>Required Privilege Level</b>	interface—To view this statement in the configuration. interface-control—To add this statement to the configuration.

## output-traffic-control-profile

---

<b>Supported Platforms</b>	EX4600, OCX1100, QFabric System, QFX Series standalone switches
<b>Syntax</b>	output-traffic-control-profile <i>profile-name</i> ;
<b>Hierarchy Level</b>	[edit <a href="#">class-of-service interfaces</a> <i>interface-name</i> forwarding-class-set <i>forwarding-class-set-name</i> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Apply an output traffic scheduling and shaping profile to a forwarding class set (priority group).
<b>Options</b>	<i>profile-name</i> —Name of the traffic-control profile to apply to the specified forwarding class set.
<b>Required Privilege Level</b>	interfaces—To view this statement in the configuration. interface-control—To add this statement to the configuration.
<b>Related Documentation</b>	<ul style="list-style-type: none"><li>• <a href="#">Example: Configuring CoS Hierarchical Port Scheduling (ETS)</a></li><li>• <a href="#">Example: Configuring Traffic Control Profiles (Priority Group Scheduling) on page 111</a></li><li>• <a href="#">Assigning CoS Components to Interfaces on page 14</a></li><li>• <a href="#">Understanding CoS Traffic Control Profiles on page 105</a></li></ul>

## priority (Schedulers)

<b>Supported Platforms</b>	EX4600, OCX1100, QFabric System, QFX Series standalone switches
<b>Syntax</b>	<code>priority priority;</code>
<b>Hierarchy Level</b>	[edit <code>class-of-service schedulers scheduler-name</code> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Specify the packet bandwidth-scheduling priority value.



**NOTE:** On QFabric systems, the `priority` statement is valid only for Node device queue scheduling. The `priority` statement is not allowed for Interconnect device queue scheduling. If you map a scheduler that includes a `priority` configuration to a fabric forwarding class at the [edit `class-of-service scheduler-map-fcset`] hierarchy level, the system generates a commit error. (On the Interconnect device, fabric `fc-sets` are not user-definable. Only the `fabric_fcset_strict_high` fabric `fc-set` is configured with high priority, and this configuration cannot be changed.)

**Options** `priority`—It can be one of the following:

- **low**—Scheduler has low priority.
- **strict-high**—Scheduler has strict high priority. On QFX5100, EX4600, QFX3500, and QFX3600 switches, and on QFabric systems, you can configure only one queue as a strict-high priority queue. On QFX10000 switches, you can configure as many strict-high priority queues as you want. However, because strict-high priority traffic takes precedence over all other traffic, too much strict-high priority traffic can starve the other output queues.

Strict-high priority allocates the scheduled bandwidth to the packets on the queue before any other queue receives bandwidth. Other queues receive the bandwidth that remains after the strict-high queue has been serviced.



**NOTE:** On QFX10000 switches, we strongly recommend that you apply a transmit rate to strict-high priority queues to prevent them from starving other queues. A transmit rate configured on a strict-high priority queue limits the amount of traffic that receives strict-high priority treatment to the amount or percentage set by the transmit rate. The switch treats traffic in excess of the transmit rate as best-effort traffic that receives bandwidth from the leftover (excess) port bandwidth pool. On strict-high priority queues, all traffic that exceeds the transmit rate shares in the port excess bandwidth pool based on the strict-high priority excess bandwidth sharing weight of “1”, which is not configurable. The actual amount of extra

bandwidth that traffic exceeding the transmit rate receives depends on how many other queues consume excess bandwidth and the excess rates of those queues.

On QFX5100, EX4600, QFX3500, and QFX3600 switches, and on QFabric systems, we recommend that you always apply a shaping rate to strict-high priority queues to prevent them from starving other queues. A shaping rate (shaper) sets the maximum amount of bandwidth a queue can consume. (Unlike using the transmit rate on a QFX10000 switch to limit traffic that receives strict-high priority treatment, traffic that exceeds the shaping rate is dropped, and is not treated as best-effort traffic that shares in excess bandwidth.) If you do not apply a shaping rate to limit the amount of bandwidth a strict-high priority queue can use, then the strict-high priority queue can use all of the available port bandwidth and starve other queues on the port.

**Required Privilege Level** interfaces—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

## scheduler

**Supported Platforms** EX4600, OCX1100, QFabric System, QFX Series standalone switches

**Syntax** scheduler *scheduler-name*;

**Hierarchy Level** [edit [class-of-service scheduler-maps map-name forwarding-class class-name](#)]

**Release Information** Statement introduced in Junos OS Release 11.1 for the QFX Series.  
Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

**Description** Map a scheduler to a forwarding class using a scheduler map.



**NOTE:** On QFX5200 only, absolute CoS rate limits for transmit rate and shaping rate do not reflect 50g and 100g interfaces. Therefore this statement does not affect those interfaces for QFX5200 in release 15.1X53-D30.

**Options** *scheduler-name*—Name of the scheduler to map to the forwarding class.

**Required Privilege Level** interfaces—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.

## scheduler-map

<b>Supported Platforms</b>	EX4600, OCX1100, QFabric System, QFX Series standalone switches
<b>Syntax</b>	<code>scheduler-map map-name;</code>
<b>Enhanced Transmission Selection (ETS) Hierarchical Scheduling</b>	[edit <code>class-of-service traffic-control-profiles traffic-control-profile-name</code> ]
<b>Port Scheduling</b>	[edit <code>class-of-service interfaces interface-name</code> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Associate a scheduler map with a traffic control profile.
<b>Options</b>	<i>map-name</i> —Name of the scheduler map.
<b>Required Privilege Level</b>	interfaces—To view this statement in the configuration. interface-control—To add this statement to the configuration.

## scheduler-maps

<b>Supported Platforms</b>	EX4600, OCX1100, QFabric System, QFX Series standalone switches
<b>Syntax</b>	<pre>scheduler-maps {   map-name {     forwarding-class class-name scheduler scheduler-name;   } }</pre>
<b>Hierarchy Level</b>	[edit <code>class-of-service</code> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Specify a scheduler map name to map a scheduler configuration to a forwarding class.
<b>Options</b>	<i>map-name</i> —Name of the scheduler map.  The remaining statements are explained separately.
<b>Required Privilege Level</b>	interfaces—To view this statement in the configuration. interface-control—To add this statement to the configuration.

## schedulers

Supported Platforms	EX4600, OCX1100, QFabric System, QFX Series standalone switches
List of Syntax	QFX5100, EX4600, QFX3500, and QFX3600, Switches, QFabric Systems on page 186 QFX10000 Switches on page 186
QFX5100, EX4600, QFX3500, and QFX3600, Switches, QFabric Systems	<pre> schedulers {   scheduler-name {     buffer-size (percent <i>percentage</i>   remainder);     drop-profile-map loss-priority (low   medium-high   high) protocol <i>protocol</i> drop-profile       drop-profile-name;     explicit-congestion-notification;     priority <i>priority</i>;     shaping-rate (rate   percent <i>percentage</i>);     transmit-rate (percent <i>percentage</i>);   } } </pre>
QFX10000 Switches	<pre> schedulers {   scheduler-name {     buffer-size (percent <i>percentage</i>   remainder);     drop-profile-map loss-priority (low   medium-high   high) protocol <i>protocol</i> drop-profile       drop-profile-name;     excess-rate;     explicit-congestion-notification;     priority <i>priority</i>;     shaping-rate (rate   percent <i>percentage</i>);     transmit-rate (percent <i>percentage</i>) &lt;exact&gt;;   } } </pre>
Hierarchy Level	[edit <a href="#">class-of-service</a> ]
Release Information	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Specify scheduler name and parameter values such as minimum bandwidth ( <a href="#">transmit-rate</a> ), maximum bandwidth ( <a href="#">shaping-rate</a> ), and priority ( <a href="#">priority</a> ).
Options	<p><b><i>scheduler-name</i></b> —Name of the scheduler.</p> <p>The remaining statements are explained separately.</p>
Required Privilege Level	<p>interfaces—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>

## shaping-rate

**Supported Platforms** EX4600, OCX1100, QFabric System, QFX Series standalone switches

**Syntax** `shaping-rate (rate | percent percentage);`

**Hierarchy Level** [edit `class-of-service schedulers scheduler-name`],  
[edit `class-of-service traffic-control-profiles profile-name`]



**NOTE:** Only switches that support enhanced transmission selection (ETS) hierarchical scheduling support the `traffic-control-profiles` hierarchy.

**Release Information** Statement introduced in Junos OS Release 11.1 for the QFX Series.  
Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

**Description** Configure the shaping rate. The shaping rate throttles the rate of packet transmission by setting a maximum bandwidth (rate in bits per second) or a maximum percentage of bandwidth for a queue or a forwarding class set. You specify the maximum bandwidth for a queue by using a scheduler map to associate a forwarding class (queue) with a scheduler that has a configured shaping rate.

For ETS configuration, you specify the maximum bandwidth for a forwarding class set by setting the shaping rate for a traffic control profile, then you associate the scheduler map with the traffic control profile, and then you apply the traffic control profile and a forwarding class set to an interface.

For simple port scheduling configuration, you apply the scheduler map directly to an interface (instead of indirectly through the traffic control profile as in ETS).

We recommend that you configure the shaping rate as an absolute maximum usage and not as additional usage beyond the configured transmit rate (the minimum guaranteed bandwidth for a queue) or the configured guaranteed rate (the minimum guaranteed bandwidth for a forwarding class set).



**NOTE:** When you set the maximum bandwidth (`shaping-rate` value) for a queue or for a priority group at 100 Kbps or less, the traffic shaping behavior is accurate only within +/- 20 percent of the configured `shaping-rate` value.



**NOTE:** On QFX5200, QFX5100, EX4600, QFX3500, and QFX3600 switches, and on QFabric systems, we recommend that you always apply a shaping rate to strict-high priority queues to prevent them from starving other queues. If you do not apply a shaping rate to limit the amount of bandwidth a strict-high priority queue can use, then the strict-high priority queue can use all of the available port bandwidth and starve other queues on the port.



**NOTE:** On QFX5200 Series switches, a granularity of 64kbps is supported for the shaping rate. Therefore, the shaping rate on queues for 100g interfaces might not be applied correctly.



**NOTE:** QFX10000 Series switches do not support the shaping-rate statement. However, you can configure the transmit-rate exact option to prevent a queue from consuming more bandwidth than you want the queue to consume.

On QFX10000 Series switches, we recommend that you use the transmit rate to set a limit on the amount of bandwidth that receives strict-high priority treatment on a strict-high priority queue. Traffic up to the transmit rate receives strict-high priority treatment. Traffic in excess of the transmit rate is treated as best-effort traffic that receives the strict-high priority queue excess rate weight of “1”. Do not use a shaping rate to set a maximum bandwidth limit on strict-high priority queues on QFX10000 Series switches.

<b>Default</b>	If you do not configure a shaping rate, the default shaping rate is 100 percent (all of the available bandwidth), which is the equivalent of no rate shaping.
<b>Options</b>	<p><b>percent <i>percentage</i></b>—Shaping rate as a percentage of the available interface bandwidth.  <b>Range:</b> 1 through 100 percent</p> <p><b>rate</b>—Peak (maximum) rate, in bits per second (bps). You can specify a value in bits per second either as a complete decimal number or as a decimal number followed by the abbreviation k (1000), m (1,000,000), or g (1,000,000,000).  <b>Range:</b> 1000 through 10,000,000,000 bps</p>
<b>Required Privilege Level</b>	<p>interfaces—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Example: Configuring CoS Hierarchical Port Scheduling (ETS)</a></li> <li>• <a href="#">Example: Configuring Queue Schedulers</a></li> <li>• <a href="#">Example: Configuring Queue Schedulers for Port Scheduling</a></li> <li>• <a href="#">Example: Configuring Traffic Control Profiles (Priority Group Scheduling) on page 111</a></li> <li>• <a href="#">Understanding CoS Output Queue Schedulers</a></li> <li>• <a href="#">Understanding CoS Port Schedulers on QFX Switches</a></li> <li>• <a href="#">Understanding CoS Traffic Control Profiles on page 105</a></li> </ul>



## traffic-control-profiles

<b>Supported Platforms</b>	EX4600, OCX1100, QFabric System, QFX Series standalone switches
<b>Syntax</b>	<pre>traffic-control-profiles <i>profile-name</i> {     <b>guaranteed-rate</b> (<i>rate</i>  percent <i>percentage</i>);     <b>scheduler-map</b> <i>map-name</i>;     <b>shaping-rate</b> (<i>rate</i>  percent <i>percentage</i>); }</pre>
<b>Hierarchy Level</b>	[edit <a href="#">class-of-service</a> ]
<b>Release Information</b>	<p>Statement introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
<b>Description</b>	Configure traffic shaping and scheduling profiles for forwarding class sets (priority groups) to implement enhanced transmission selection (ETS) or for logical interfaces.
<b>Options</b>	<p><b><i>profile-name</i></b>—Name of the traffic-control profile. This name is also used to specify an output traffic control profile.</p> <p>The remaining statements are explained separately.</p>
<b>Required Privilege Level</b>	<p>interfaces—To view this statement in the configuration.</p> <p>interface-control—To add this statement to the configuration.</p>
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>• <a href="#">Example: Configuring CoS Hierarchical Port Scheduling (ETS)</a></li> <li>• <a href="#">Example: Configuring Traffic Control Profiles (Priority Group Scheduling) on page 111</a></li> <li>• <a href="#">Example: Configuring Forwarding Class Sets</a></li> <li>• <a href="#">Assigning CoS Components to Interfaces on page 14</a></li> <li>• <a href="#">output-traffic-control-profile on page 182</a></li> <li>• <a href="#">Understanding CoS Traffic Control Profiles on page 105</a></li> </ul>

## transmit-rate

<b>Supported Platforms</b>	EX4600, OCX1100, QFabric System, QFX Series standalone switches
<b>List of Syntax</b>	QFX5100, EX4600, QFX3500, and QFX3600, Switches, QFabric Systems on page 190 QFX10000 Switches on page 190
QFX5100, EX4600, QFX3500, and QFX3600, Switches, QFabric Systems	transmit-rate ( <i>rate</i>   percent <i>percentage</i> );
QFX10000 Switches	transmit-rate ( <i>rate</i>   percent <i>percentage</i> ) <exact>;
<b>Hierarchy Level</b>	[edit <a href="#">class-of-service schedulers scheduler-name</a> ]
<b>Release Information</b>	Statement introduced in Junos OS Release 11.1 for the QFX Series. Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series. Exact option introduced in Junos OS Release 15.1X53-D10 for the QFX Series.
<b>Description</b>	<p>On QFX5100, EX4600, QFX3500, and QFX3600 switches, and on QFabric systems, the transmit rate specifies the minimum guaranteed transmission rate or percentage for a queue (forwarding class) scheduler. The queue transmit rate also determines the amount of excess (extra) priority group bandwidth that the queue can share on switches that support enhanced transmission selection (ETS) hierarchical scheduling.</p> <p>On QFX10000 switches, the transmit rate specifies the minimum guaranteed transmission rate or percentage for a queue (forwarding class) scheduler. The queue transmit rate also determines the amount of excess (extra) port bandwidth the queue can share if you do not explicitly configure an excess rate in the scheduler. The transmit rate also determines the amount of excess (extra) priority group bandwidth that the queue can share on switches that support enhanced transmission selection (ETS) hierarchical scheduling.</p> <p>On QFX10000 switch strict-high priority queues, the transmit rate limits the amount of traffic the switch treats as strict-high priority traffic. Traffic up to the transmit rate receives strict-high priority treatment. The switch treats traffic that exceeds the transmit rate as best-effort traffic that receives an excess bandwidth sharing weight of "1"; you cannot configure an excess rate on a strict-high priority queue, and unlike queues with other scheduling priorities, the switch does not use the transmit rate to determine extra bandwidth sharing for strict-high priority queues.</p>



**CAUTION:** We strongly recommend that you configure a transmit rate on strict-high priority queues to limit the amount of traffic the switch treats as strict-high priority traffic on those queues. This is especially important if you configure more than one strict-high priority queue on a port. To prevent a strict-high priority queue from starving the other queues on a port, we recommend that you always configure a transmit rate, even if you only configure one strict-high priority queue.



NOTE: For ETS, the transmit-rate setting works only if you also configure the **guaranteed-rate** in the traffic control profile that is attached to the forwarding class set to which the queue belongs. If you do not configure the guaranteed rate, the minimum guaranteed rate for individual queues that you set using the transmit-rate statement does not work. The sum of all queue transmit rates in a forwarding class set should not exceed the traffic control profile guaranteed rate.



NOTE: On QFX5100, EX4600, QFX3500, and QFX3600 switches, and on QFabric systems, you cannot configure a transmit rate for a strict-high priority queue. Queues (forwarding classes) with a configured transmit rate cannot be included in a forwarding class set that has a strict-high priority queue. To prevent strict-high priority queues from consuming all of the available bandwidth on these switches, we recommend that you configure a shaping rate to set a maximum amount of bandwidth for strict-high priority queues.



NOTE: For transmit rates below 1 Gbps, we recommend that you configure the transmit rate as a percentage instead of as a fixed rate. This is because the system converts fixed rates into percentages and may round small fixed rates to a lower percentage. For example, a fixed rate of 350 Mbps is rounded down to 3 percent instead of 3.5 percent.

**Default** On QFX5100, EX4600, QFX3500, and QFX3600 switches, and on QFabric systems, if you do not configure the transmit rate, the default scheduler transmission rate and buffer size percentages for queues 0 through 11 are:

**Table 44: Default Transmit Rates for QFX5100, EX4600, QFX3500, and QFX3600 Switches, and QFabric Systems**

Queue Number	Default Minimum Guaranteed Bandwidth (Transmit Rate)
0 (best-effort)	5 %
1	0
2	0
3 (fcoe)	35 %
4 (no-loss)	35 %
5	0
6	0
7 (network control)	5 %
8 (mcast)	20 %
9	0
10	0
11	0



**NOTE:** OCX Series switches do not support lossless transport. The OCX Series default DSCP classifier does not classify traffic into the default lossless fcoe and no-loss forwarding classes. The bandwidth that the default scheduler allocates to the default fcoe and no-loss forwarding classes on other switches is allocated to the default best-effort, network-control, and mcast forwarding classes on OCX Series switches.

On QFX10000 switches, if you do not configure the transmit rate, the default scheduler transmission rate and buffer size percentages for queues 0 through 7 are:

Table 45: Default Transmit Rates for QFX10000 Switches

Queue Number	Default Minimum Guaranteed Bandwidth (Transmit Rate)
0 (best-effort)	15 %
1	0
2	0
3 (fcoe)	35 %
4 (no-loss)	35 %
5	0
6	0
7 (network control)	15 %

Configure schedulers if you want to change the minimum guaranteed bandwidth and other queue characteristics.

**Options** **rate**—Minimum transmission rate for the queue, in bps. You can specify a value in bits-per-second either as a complete decimal number or as a decimal number followed by the abbreviation **k** (1000), **m** (1,000,000), or **g** (1,000,000,000).

**Range:** 1000 through 10,000,000,000 bps on 10-Gigabit interfaces, 1000 through 40,000,000,000 bps on 40-Gigabit interfaces.

**percent** **percentage**—Minimum percentage of transmission capacity allocated to the queue. A percentage of zero means that there is no minimum bandwidth guarantee for the queue.

**Range:** 0 through 100 percent

**exact**—(QFX10000 switches only) Shape queues that are not strict-high priority queues to the transmit rate so that the transmit rate is the maximum bandwidth limit. Traffic that exceeds the exact transmit rate is dropped. You cannot set an excess rate on queues configured as **transmit-rate (rate | percentage) exact** because the purpose of setting an exact transmit rate is to set a maximum bandwidth (shaping rate) on the traffic.

**Required Privilege Level** interfaces—To view this statement in the configuration.  
interface-control—To add this statement to the configuration.



## CHAPTER 7

# Operational Commands (Basic Concepts)

- [Monitoring Interfaces That Have CoS Components on page 195](#)
- [show class-of-service](#)
- [show class-of-service interface](#)
- [show class-of-service shared-buffer](#)
- [show pfe filter hw summary](#)
- [show pfe next-hop](#)
- [show pfe route](#)
- [show pfe terse](#)
- [show pfe version](#)
- [show interfaces voq](#)

### Monitoring Interfaces That Have CoS Components

---

**Supported Platforms** [EX4600, OCX1100, QFabric System, QFX Series standalone switches](#)

**Purpose** Use the monitoring functionality to display details about the physical and logical interfaces and the CoS components assigned to them.

**Action** To monitor interfaces that have CoS components in the CLI, enter the command:

```
user@switch> show class-of-service interface
```

To monitor a specific interface in the CLI, enter the command:

```
user@switch> show class-of-service interface interface-name
```

**Meaning** [Table 46 on page 195](#) summarizes key output fields for CoS interfaces.

**Table 46: Summary of Key CoS Interfaces Output Fields**

Field	Values
Physical interface	Name of a physical interface to which CoS components are assigned.
Index	Index of this interface or the internal index of a specific object.

Table 46: Summary of Key CoS Interfaces Output Fields (*continued*)

Field	Values
Queues supported	Number of queues you can configure on the interface.
Queues in use	Number of queues currently configured.
Scheduler map	Name of the scheduler map associated with this interface.
Congestion-notification	Status of congestion notification (enabled or disabled).  <b>NOTE:</b> OCX Series switches do not support congestion notification profiles.
Rewrite Input IEEE Code-point	(Fibre Channel NP_Port interfaces only) IEEE 802.1p code point (priority) the interface assigns to incoming Fibre Channel (FC) traffic when the interface encapsulates the FC traffic in Ethernet before forwarding it onto the FCoE network.
Logical Interface	Name of a logical interface on the physical interface to which CoS components are assigned.
Object	Category of an object—for example, <b>classifier</b> , <b>scheduler-map</b> , or <b>rewrite</b> .
Name	Name of the object—for example, <b>ba-classifier</b> .
Type	Type of the object—for example, <b>ieee8021p</b> for a classifier.

**Related Documentation** • [Assigning CoS Components to Interfaces on page 14](#)



## show class-of-service

**Supported Platforms** [EX4600, OCX1100, QFabric System, QFX Series standalone switches](#)

**Syntax** `show class-of-service`

**Release Information** Command introduced in Junos OS Release 11.1 for the QFX Series.  
Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

**Description** Display the class-of-service (CoS) information.

**Required Privilege Level** view

**Related Documentation**

- [Monitoring CoS Code-Point Value Aliases on page 272](#)
- [Monitoring CoS Classifiers on page 267](#)
- [Monitoring CoS Forwarding Classes on page 268](#)
- [Monitoring Interfaces That Have CoS Components on page 195](#)
- [Monitoring CoS Scheduler Maps on page 325](#)
- [Monitoring CoS Rewrite Rules on page 271](#)

**List of Sample Output** [show class-of- service on page 199](#)

**Output Fields** [Table 47 on page 197](#) lists the output fields for the `show class-of-service` command. Output fields are listed in the approximate order in which they appear.

**Table 47: show class-of-service Output Fields**

Field Name	Field Description	Level of Output
<b>Forwarding class</b>	The forwarding class configuration: <ul style="list-style-type: none"> <li>• <b>Forwarding class</b>—Name of the forwarding class.</li> <li>• <b>ID</b>—Forwarding class ID.</li> <li>• <b>Queue</b>—Queue number.</li> </ul>	All levels
<b>Code point type</b>	The type of code-point alias: <ul style="list-style-type: none"> <li>• <b>dscp</b>—Aliases for DiffServ code point (DSCP) values.</li> <li>• <b>ieee-802.1</b>—Aliases for IEEE 802.1p values.</li> <li>• <b>exp</b>—Aliases for MPLS EXP values.</li> </ul>	All levels
<b>Alias</b>	Names given to CoS values.	All levels
<b>Bit pattern</b>	Set of bits associated with an alias.	All levels
<b>Classifier</b>	Name of the classifier.	All levels
<b>Code point</b>	Code-point values.	All levels

Table 47: show class-of-service Output Fields (*continued*)

Field Name	Field Description	Level of Output
<b>Loss priority</b>	Loss priority assigned to specific CoS values and aliases of the classifier.	All levels
<b>Rewrite rule</b>	Name of the rewrite rule if one has been configured.	All levels
<b>Drop profile</b>	Name of the drop profile.	All levels
<b>Type</b>	Type of drop profile. QFX Series supports only the <b>discrete</b> type of drop-profile.	All levels
<b>Fill level</b>	Percentage of queue buffer fullness in a drop profile at which packets begin to drop during periods of congestion.	All levels
<b>Scheduler map</b>	Name of the scheduler map.	All levels
<b>Scheduler</b>	Name of the scheduler.	All levels
<b>Transmit rate</b>	Transmission rate of the scheduler.	All levels
<b>Buffer size</b>	Delay buffer size in the queue.	All levels
<b>Drop profiles</b>	Drop profiles configured for the specified scheduler.	All levels
<b>Protocol</b>	Transport protocol corresponding to the drop profile.	All levels
<b>Name</b>	Name of the drop profile.	All levels
<b>Queues supported</b>	Number of queues that can be configured on the interface.	All levels
<b>Queues in use</b>	Number of queues currently configured.	All levels
<b>Physical interface</b>	Name of the physical interface.	All levels
<b>Scheduler map</b>	Name of the scheduler map.	All levels
<b>Congestion-notification</b>	Enabled if a congestion notification profile is applied to the interface; disabled if no congestion notification profile is applied to the interface.  <b>NOTE:</b> OCX Series switches do not support congestion notification profiles.	All levels
<b>Forwarding class set</b>	Name of the forwarding class set (priority group).  <b>NOTE:</b> Only on systems that support enhanced transmission selection (ETS) hierarchical port scheduling.	
<b>Index</b>	Internal index of an object.	All levels

## Sample Output

### show class-of- service

```

user@switch> show class-of-service
Forwarding class          ID      Queue
best-effort              0        0
fcoe                     1        3
no-loss                  2        4
network-control          3        7
mcast                    8        8

Code point type: dscp
Alias      Bit pattern
af11      001010
af12      001100
...       ...

Code point type: ieee-802.1
Alias      Bit pattern
af11      100
...       ...

Classifier: dscp-default, Code point type: dscp, Index: 7
Code point  Forwarding class  Loss priority
000000      best-effort        low
000001      best-effort        low
...         ...         ...

Classifier: ieee8021p-default, Code point type: ieee-802.1, Index: 11
Code point  Forwarding class  Loss priority
000         best-effort        low
001         best-effort        low
010         best-effort        low
011         fcoe              low
100         no-loss           low
101         best-effort        low
110         network-control    low
111         network-control    low

Drop profile:<default-drop-profile>, Type: discrete, Index: 1
Fill level
100

Scheduler map: <default>, Index: 2

Scheduler: <default-be>, Forwarding class: best-effort, Index: 21
Transmit rate: 5 percent, Rate Limit: none, Buffer size: 5 percent, Buffer
Limit: none,
Priority: low
Excess Priority: low
drop-profile-map-set-type: mark
Drop profiles:
Loss priority  Protocol  Index  Name
Low           any      1      <default-drop-profile>
Medium high   any      1      <default-drop-profile>
High          any      1      <default-drop-profile>

Scheduler: <default-fcoe>, Forwarding class: fcoe, Index: 50
Transmit rate: 35 percent, Rate Limit: none, Buffer size: 35 percent, Buffer
Limit: none,

```

```

Priority: low
Excess Priority: low
drop-profile-map-set-type: mark
Drop profiles:
  Loss priority  Protocol  Index  Name
  Low           any       1      <default-drop-profile>
  Medium high   any       1      <default-drop-profile>
  High          any       1      <default-drop-profile>

Scheduler: <default-noloss>, Forwarding class: no-loss, Index: 51
  Transmit rate: 35 percent, Rate Limit: none, Buffer size: 35 percent, Buffer
Limit: none,
  Priority: low
  Excess Priority: low
  drop-profile-map-set-type: mark
  Drop profiles:
    Loss priority  Protocol  Index  Name
    Low           any       1      <default-drop-profile>
    Medium high   any       1      <default-drop-profile>
    High          any       1      <default-drop-profile>

Scheduler: <default-nc>, Forwarding class: network-control, Index: 23
  Transmit rate: 5 percent, Rate Limit: none, Buffer size: 5 percent, Buffer
Limit: none,
  Priority: low
  Excess Priority: low
  drop-profile-map-set-type: mark
  Drop profiles:
    Loss priority  Protocol  Index  Name
    Low           any       1      <default-drop-profile>
    Medium high   any       1      <default-drop-profile>
    High          any       1      <default-drop-profile>

Scheduler: <default-mcast>, Forwarding class: mcast, Index: 49
  Transmit rate: 20 percent, Rate Limit: none, Buffer size: 20 percent, Buffer
Limit: none,
  Priority: low
  Excess Priority: low
  drop-profile-map-set-type: mark
  Drop profiles:
    Loss priority  Protocol  Index  Name
    Low           any       1      <default-drop-profile>
    Medium high   any       1      <default-drop-profile>
    High          any       1      <default-drop-profile>

Physical interface: xe-0/0/0, Index: 129
Queues supported: 12, Queues in use: 12
Scheduler map: <default>, Index: 2
Congestion-notification: Disabled

Physical interface: xe-0/0/1, Index: 130
Queues supported: 12, Queues in use: 12
Scheduler map: <default>, Index: 2
Congestion-notification: Disabled

...           ...           ...

Forwarding class set: lan-fcset, Type: normal-type, Forwarding class set index:
7
  Forwarding class          Index
  best-effort               0

```



## show class-of-service interface

**Supported Platforms** ACX Series, EX Series, M Series, MX Series, PTX Series, QFX Series, T Series

**Syntax** show class-of-service interface  
<comprehensive | detail> <interface-name>

**Release Information** Command introduced before Junos OS Release 7.4.  
Command introduced in Junos OS Release 9.0 for EX Series switches.  
Forwarding class map information added in Junos OS Release 9.4.  
Command introduced in Junos OS Release 11.1 for the QFX Series.  
Command introduced in Junos OS Release 12.1 for the PTX Series Packet Transport Switches.  
Command introduced in Junos OS Release 12.2 for the ACX Series Universal Access routers.  
Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.  
Options **detail** and **comprehensive** introduced in Junos OS Release 11.4.  
Command introduced in Junos OS Release 15.1 on MX Series routers for enhanced subscriber management.

**Description** Display the logical and physical interface associations for the classifier, rewrite rules, and scheduler map objects.



**NOTE:** On routing platforms with dual Routing Engines, running this command on the backup Routing Engine, with or without any of the available options, is not supported and produces the following error message:

**error: the class-of-service subsystem is not running**

**Options** **none**—Display CoS associations for all physical and logical interfaces.

**comprehensive**—(M Series, MX Series, and T Series routers) (Optional) Display comprehensive quality-of-service (QoS) information about all physical and logical interfaces.

**detail**—(M Series, MX Series, and T Series routers) (Optional) Display QoS and CoS information based on the interface.

If the **interface** *interface-name* is a physical interface, the output includes:

- Brief QoS information about the physical interface
- Brief QoS information about the logical interface
- CoS information about the physical interface
- Brief information about filters or policers of the logical interface
- Brief CoS information about the logical interface

If the **interface** *interface-name* is a logical interface, the output includes:

- Brief QoS information about the logical interface
- Information about filters or policers for the logical interface
- CoS information about the logical interface

**interface-name**—(Optional) Display class-of-service (CoS) associations for the specified interface.

**none**—Display CoS associations for all physical and logical interfaces.

**Required Privilege Level**

view

**Related Documentation**

- *Verifying and Managing Junos OS Enhanced Subscriber Management*

**List of Sample Output**

[show class-of-service interface \(Physical\) on page 214](#)  
[show class-of-service interface \(Logical\) on page 215](#)  
[show class-of-service interface \(Gigabit Ethernet\) on page 215](#)  
[show class-of-service interface \(ANCP\) on page 215](#)  
[show class-of-service interface \(PPPoE Interface\) on page 215](#)  
[show class-of-service interface \(T4000 Routers with Type 5 FPCs\) on page 215](#)  
[show class-of-service interface detail on page 216](#)  
[show class-of-service interface comprehensive on page 216](#)  
[show class-of-service interface \(ACX Series Routers\) on page 227](#)  
[show class-of-service interface \(PPPoE Subscriber Interface for Enhanced Subscriber Management\) on page 230](#)

**Output Fields** [Table 48 on page 203](#) describes the output fields for the **show class-of-service interface** command. Output fields are listed in the approximate order in which they appear.

**Table 48: show class-of-service interface Output Fields**

Field Name	Field Description	
Physical interface	Name of a physical interface.	
Index	Index of this interface or the internal index of this object.  (Enhanced subscriber management for MX Series routers) Index values for dynamic CoS traffic control profiles and dynamic scheduler maps are larger for enhanced subscriber management than they are for legacy subscriber management.	
Dedicated Queues	Status of dedicated queues configured on an interface. Supported only on Trio MPC/MIC interfaces on MX Series routers.	Number of queues you can configure on the interface.
Queues supported	Number of queues you can configure on the interface.	
Queues in use	Number of queues currently configured.	

Table 48: show class-of-service interface Output Fields (*continued*)

Field Name	Field Description
<b>Total non-default queues created</b>	Number of queues created in addition to the default queues. Supported only on Trio MPC/MIC interfaces on MX Series routers.  (Enhanced subscriber management for MX Series routers) This field is not displayed for enhanced subscriber management.
<b>Rewrite Input IEEE Code-point</b>	(QFX Series only) IEEE 802.1p code point (priority) rewrite value. Incoming traffic from the Fibre Channel (FC) SAN is classified into the forwarding class specified in the native FC interface (NP_Port) fixed classifier and uses the priority specified as the IEEE 802.1p rewrite value.
<b>Shaping rate</b>	Maximum transmission rate on the physical interface. You can configure the shaping rate on the physical interface, or on the logical interface, but not on both. Therefore, the <b>Shaping rate</b> field is displayed for either the physical interface or the logical interface.
<b>Scheduler map</b>	Name of the output scheduler map associated with this interface.  (Enhanced subscriber management for MX Series routers) The name of the dynamic scheduler map object is associated with a generated UID (for example, <b>SMAP-1_UID1002</b> ) instead of with a subscriber interface.
<b>Scheduler map forwarding class sets</b>	(QFX Series only) Name of the output fabric scheduler map associated with a QFabric system Interconnect device interface.
<b>Input shaping rate</b>	For Gigabit Ethernet IQ2 PICs, maximum transmission rate on the input interface.
<b>Input scheduler map</b>	For Gigabit Ethernet IQ2 PICs, name of the input scheduler map associated with this interface.
<b>Chassis scheduler map</b>	Name of the scheduler map associated with the packet forwarding component queues.
<b>Rewrite</b>	Name and type of the rewrite rules associated with this interface.
<b>Traffic-control-profile</b>	Name of the associated traffic control profile.  (Enhanced subscriber management for MX Series routers) The name of the dynamic traffic control profile object is associated with a generated UID (for example, <b>TC_PROF_100_199_SERIES_UID1006</b> ) instead of with a subscriber interface.
<b>Classifier</b>	Name and type of classifiers associated with this interface.
<b>Forwarding-class-map</b>	Name of the forwarding map associated with this interface.
<b>Congestion-notification</b>	(QFX Series and EX4600 switches only) Congestion notification state, <b>enabled</b> or <b>disabled</b> .
<b>Logical interface</b>	Name of a logical interface.
<b>Object</b>	Category of an object: <b>Classifier</b> , <b>Fragmentation-map</b> (for LSQ interfaces only), <b>Scheduler-map</b> , <b>Rewrite</b> , <b>Translation Table</b> (for IQE PICs only), or <b>traffic-class-map</b> (for T4000 routers with Type 5 FPCs).
<b>Name</b>	Name of an object.



Table 48: show class-of-service interface Output Fields (*continued*)

Field Name	Field Description
<b>Type</b>	Type of an object: <b>dscp</b> , <b>dscp-ipv6</b> , <b>exp</b> , <b>ieee-802.1</b> , <b>ip</b> , <b>inet-precedence</b> , or <b>ieee-802.1ad</b> (for traffic class map on T4000 routers with Type 5 FPCs)..
<b>Link-level type</b>	Encapsulation on the physical interface.
<b>MTU</b>	MTU size on the physical interface.
<b>Speed</b>	Speed at which the interface is running.
<b>Loopback</b>	Whether loopback is enabled and the type of loopback.
<b>Source filtering</b>	Whether source filtering is enabled or disabled.
<b>Flow control</b>	Whether flow control is enabled or disabled.
<b>Auto-negotiation</b>	(Gigabit Ethernet interfaces) Whether autonegotiation is enabled or disabled.
<b>Remote-fault</b>	(Gigabit Ethernet interfaces) Remote fault status. <ul style="list-style-type: none"> <li>• <b>Online</b>—Autonegotiation is manually configured as online.</li> <li>• <b>Offline</b>—Autonegotiation is manually configured as offline.</li> </ul>
<b>Device flags</b>	The <b>Device flags</b> field provides information about the physical device and displays one or more of the following values: <ul style="list-style-type: none"> <li>• <b>Down</b>—Device has been administratively disabled.</li> <li>• <b>Hear-Own-Xmit</b>—Device receives its own transmissions.</li> <li>• <b>Link-Layer-Down</b>—The link-layer protocol has failed to connect with the remote endpoint.</li> <li>• <b>Loopback</b>—Device is in physical loopback.</li> <li>• <b>Loop-Detected</b>—The link layer has received frames that it sent, thereby detecting a physical loopback.</li> <li>• <b>No-Carrier</b>—On media that support carrier recognition, no carrier is currently detected.</li> <li>• <b>No-Multicast</b>—Device does not support multicast traffic.</li> <li>• <b>Present</b>—Device is physically present and recognized.</li> <li>• <b>Promiscuous</b>—Device is in promiscuous mode and recognizes frames addressed to all physical addresses on the media.</li> <li>• <b>Quench</b>—Transmission on the device is quenched because the output buffer is overflowing.</li> <li>• <b>Recv-All-Multicasts</b>—Device is in multicast promiscuous mode and therefore provides no multicast filtering.</li> <li>• <b>Running</b>—Device is active and enabled.</li> </ul>

Table 48: show class-of-service interface Output Fields (*continued*)

Field Name	Field Description
<b>Interface flags</b>	<p>The <b>Interface flags</b> field provides information about the physical interface and displays one or more of the following values:</p> <ul style="list-style-type: none"> <li>• <b>Admin-Test</b>—Interface is in test mode and some sanity checking, such as loop detection, is disabled.</li> <li>• <b>Disabled</b>—Interface is administratively disabled.</li> <li>• <b>Down</b>—A hardware failure has occurred.</li> <li>• <b>Hardware-Down</b>—Interface is nonfunctional or incorrectly connected.</li> <li>• <b>Link-Layer-Down</b>—Interface keepalives have indicated that the link is incomplete.</li> <li>• <b>No-Multicast</b>—Interface does not support multicast traffic.</li> <li>• <b>No-receive No-transmit</b>—Passive monitor mode is configured on the interface.</li> <li>• <b>Point-To-Point</b>—Interface is point-to-point.</li> <li>• <b>Pop all MPLS labels from packets of depth</b>—MPLS labels are removed as packets arrive on an interface that has the <b>pop-all-labels</b> statement configured. The depth value can be one of the following: <ul style="list-style-type: none"> <li>• <b>1</b>—Takes effect for incoming packets with one label only.</li> <li>• <b>2</b>—Takes effect for incoming packets with two labels only.</li> <li>• <b>[ 1 2 ]</b>—Takes effect for incoming packets with either one or two labels.</li> </ul> </li> <li>• <b>Promiscuous</b>—Interface is in promiscuous mode and recognizes frames addressed to all physical addresses.</li> <li>• <b>Recv-All-Multicasts</b>—Interface is in multicast promiscuous mode and provides no multicast filtering.</li> <li>• <b>SNMP-Traps</b>—SNMP trap notifications are enabled.</li> <li>• <b>Up</b>—Interface is enabled and operational.</li> </ul>
<b>Flags</b>	<p>The <b>Logical interface flags</b> field provides information about the logical interface and displays one or more of the following values:</p> <ul style="list-style-type: none"> <li>• <b>ACFC Encapsulation</b>—Address control field Compression (ACFC) encapsulation is enabled (negotiated successfully with a peer).</li> <li>• <b>Device-down</b>—Device has been administratively disabled.</li> <li>• <b>Disabled</b>—Interface is administratively disabled.</li> <li>• <b>Down</b>—A hardware failure has occurred.</li> <li>• <b>Clear-DF-Bit</b>—GRE tunnel or IPsec tunnel is configured to clear the Don't Fragment (DF) bit.</li> <li>• <b>Hardware-Down</b>—Interface protocol initialization failed to complete successfully.</li> <li>• <b>PFC</b>—Protocol field compression is enabled for the PPP session.</li> <li>• <b>Point-To-Point</b>—Interface is point-to-point.</li> <li>• <b>SNMP-Traps</b>—SNMP trap notifications are enabled.</li> <li>• <b>Up</b>—Interface is enabled and operational.</li> </ul>
<b>Encapsulation</b>	Encapsulation on the logical interface.
<b>Admin</b>	Administrative state of the interface ( <b>Up</b> or <b>Down</b> ).
<b>Link</b>	Status of physical link ( <b>Up</b> or <b>Down</b> ).
<b>Proto</b>	Protocol configured on the interface.

Table 48: show class-of-service interface Output Fields (*continued*)

Field Name	Field Description
<b>Input Filter</b>	Names of any firewall filters to be evaluated when packets are received on the interface, including any filters attached through activation of dynamic service.
<b>Output Filter</b>	Names of any firewall filters to be evaluated when packets are transmitted on the interface, including any filters attached through activation of dynamic service.
<b>Link flags</b>	<p>Provides information about the physical link and displays one or more of the following values:</p> <ul style="list-style-type: none"> <li>• <b>ACFC</b>—Address control field compression is configured. The Point-to-Point Protocol (PPP) session negotiates the ACFC option.</li> <li>• <b>Give-Up</b>—Link protocol does not continue connection attempts after repeated failures.</li> <li>• <b>Loose-LCP</b>—PPP does not use the Link Control Protocol (LCP) to indicate whether the link protocol is operational.</li> <li>• <b>Loose-LMI</b>—Frame Relay does not use the Local Management Interface (LMI) to indicate whether the link protocol is operational.</li> <li>• <b>Loose-NCP</b>—PPP does not use the Network Control Protocol (NCP) to indicate whether the device is operational.</li> <li>• <b>Keepalives</b>—Link protocol keepalives are enabled.</li> <li>• <b>No-Keepalives</b>—Link protocol keepalives are disabled.</li> <li>• <b>PFC</b>—Protocol field compression is configured. The PPP session negotiates the PFC option.</li> </ul>
<b>Hold-times</b>	Current interface hold-time up and hold-time down, in milliseconds.
<b>CoS queues</b>	Number of CoS queues configured.
<b>Last flapped</b>	Date, time, and how long ago the interface went from down to up. The format is <b>Last flapped: year-month-day hour:minute:second:timezone (hour:minute:second ago)</b> . For example, <b>Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago)</b> .
<b>Statistics last cleared</b>	<p>Number and rate of bytes and packets received and transmitted on the physical interface.</p> <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface.</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface.</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul>
<b>IPv6 transit statistics</b>	Number of IPv6 transit bytes and packets received and transmitted on the logical interface if IPv6 statistics tracking is enabled.

Table 48: show class-of-service interface Output Fields (*continued*)

Field Name	Field Description
<b>Input errors</b>	<p>Input errors on the interface. The labels are explained in the following list:</p> <ul style="list-style-type: none"> <li>• <b>Errors</b>—Sum of the incoming frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>Framing errors</b>—Number of packets received with an invalid frame checksum (FCS).</li> <li>• <b>Runts</b>—Number of frames received that are smaller than the runt threshold.</li> <li>• <b>Giants</b>—Number of frames received that are larger than the giant threshold.</li> <li>• <b>Bucket Drops</b>—Drops resulting from the traffic load exceeding the interface transmit or receive leaky bucket configuration.</li> <li>• <b>Policed discards</b>—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that Junos OS does not handle.</li> <li>• <b>L3 incompletes</b>—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded. Layer 3 incomplete errors can be ignored by configuring the <b>ignore-l3-incompletes</b> statement.</li> <li>• <b>L2 channel errors</b>—Number of times the software did not find a valid logical interface for an incoming frame.</li> <li>• <b>L2 mismatch timeouts</b>—Number of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable.</li> <li>• <b>HS link CRC errors</b>—Number of errors on the high-speed links between the ASICs responsible for handling the router interfaces.</li> <li>• <b>HS link FIFO overflows</b>—Number of FIFO overflows on the high-speed links between the ASICs responsible for handling the router interfaces.</li> </ul>
<b>Output errors</b>	<p>Output errors on the interface. The labels are explained in the following list:</p> <ul style="list-style-type: none"> <li>• <b>Carrier transitions</b>—Number of times the interface has gone from <b>down</b> to <b>up</b>. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC is malfunctioning.</li> <li>• <b>Errors</b>—Sum of the outgoing frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> </ul> <p><b>NOTE:</b> Due to accounting space limitations on certain Type 3 FPCs (which are supported in M320 and T640 routers), the <b>Drops</b> field does not always use the correct value for queue 6 or queue 7 for interfaces on 10-port 1-Gigabit Ethernet PICs.</p> <ul style="list-style-type: none"> <li>• <b>Aged packets</b>—Number of packets that remained in shared packet SDRAM so long that the system automatically purged them. The value in this field should never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware.</li> <li>• <b>HS link FIFO underflows</b>—Number of FIFO underflows on the high-speed links between the ASICs responsible for handling the router interfaces.</li> <li>• <b>MTU errors</b>—Number of packets whose size exceeds the MTU of the interface.</li> </ul>
<b>Egress queues</b>	Total number of egress queues supported on the specified interface.

Table 48: show class-of-service interface Output Fields (*continued*)

Field Name	Field Description
<b>Queue counters</b>	<p>CoS queue number and its associated user-configured forwarding class name.</p> <ul style="list-style-type: none"> <li>• <b>Queued packets</b>—Number of queued packets.</li> <li>• <b>Transmitted packets</b>—Number of transmitted packets.</li> <li>• <b>Dropped packets</b>—Number of packets dropped by the ASIC's RED mechanism.</li> </ul> <p><b>NOTE:</b> Due to accounting space limitations on certain Type 3 FPCs (which are supported in M320 and T640 routers), the <b>Dropped packets</b> field does not always display the correct value for queue 6 or queue 7 for interfaces on 10-port 1-Gigabit Ethernet PICs.</p>
<b>SONET alarms</b> <b>SONET defects</b>	<p>(SONET) SONET media-specific alarms and defects that prevent the interface from passing packets. When a defect persists for a certain period, it is promoted to an alarm. Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router or light the red or yellow alarm LED on the craft interface. See these fields for possible alarms and defects: <b>SONET PHY</b>, <b>SONET section</b>, <b>SONET line</b>, and <b>SONET path</b>.</p>
<b>SONET PHY</b>	<p>Counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. A state other than <b>OK</b> indicates a problem.</li> </ul> <p>The <b>SONET PHY</b> field has the following subfields:</p> <ul style="list-style-type: none"> <li>• <b>PLL Lock</b>—Phase-locked loop</li> <li>• <b>PHY Light</b>—Loss of optical signal</li> </ul>
<b>SONET section</b>	<p>Counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. A state other than <b>OK</b> indicates a problem.</li> </ul> <p>The <b>SONET section</b> field has the following subfields:</p> <ul style="list-style-type: none"> <li>• <b>BIP-BI</b>—Bit interleaved parity for SONET section overhead</li> <li>• <b>SEF</b>—Severely errored framing</li> <li>• <b>LOS</b>—Loss of signal</li> <li>• <b>LOF</b>—Loss of frame</li> <li>• <b>ES-S</b>—Errored seconds (section)</li> <li>• <b>SES-S</b>—Severely errored seconds (section)</li> <li>• <b>SEFS-S</b>—Severely errored framing seconds (section)</li> </ul>

Table 48: show class-of-service interface Output Fields (*continued*)

Field Name	Field Description
<b>SONET line</b>	<p>Active alarms and defects, plus counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. A state other than <b>OK</b> indicates a problem.</li> </ul> <p>The <b>SONET line</b> field has the following subfields:</p> <ul style="list-style-type: none"> <li>• <b>BIP-B2</b>—Bit interleaved parity for SONET line overhead</li> <li>• <b>REI-L</b>—Remote error indication (near-end line)</li> <li>• <b>RDI-L</b>—Remote defect indication (near-end line)</li> <li>• <b>AIS-L</b>—Alarm indication signal (near-end line)</li> <li>• <b>BERR-SF</b>—Bit error rate fault (signal failure)</li> <li>• <b>BERR-SD</b>—Bit error rate defect (signal degradation)</li> <li>• <b>ES-L</b>—Errored seconds (near-end line)</li> <li>• <b>SES-L</b>—Severely errored seconds (near-end line)</li> <li>• <b>UAS-L</b>—Unavailable seconds (near-end line)</li> <li>• <b>ES-LFE</b>—Errored seconds (far-end line)</li> <li>• <b>SES-LFE</b>—Severely errored seconds (far-end line)</li> <li>• <b>UAS-LFE</b>—Unavailable seconds (far-end line)</li> </ul>
<b>SONET path</b>	<p>Active alarms and defects, plus counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. A state other than <b>OK</b> indicates a problem.</li> </ul> <p>The <b>SONET path</b> field has the following subfields:</p> <ul style="list-style-type: none"> <li>• <b>BIP-B3</b>—Bit interleaved parity for SONET section overhead</li> <li>• <b>REI-P</b>—Remote error indication</li> <li>• <b>LOP-P</b>—Loss of pointer (path)</li> <li>• <b>AIS-P</b>—Path alarm indication signal</li> <li>• <b>RDI-P</b>—Path remote defect indication</li> <li>• <b>UNEQ-P</b>—Path unequipped</li> <li>• <b>PLM-P</b>—Path payload (signal) label mismatch</li> <li>• <b>ES-P</b>—Errored seconds (near-end STS path)</li> <li>• <b>SES-P</b>—Severely errored seconds (near-end STS path)</li> <li>• <b>UAS-P</b>—Unavailable seconds (near-end STS path)</li> <li>• <b>ES-PFE</b>—Errored seconds (far-end STS path)</li> <li>• <b>SES-PFE</b>—Severely errored seconds (far-end STS path)</li> <li>• <b>UAS-PFE</b>—Unavailable seconds (far-end STS path)</li> </ul>

Table 48: show class-of-service interface Output Fields (*continued*)

Field Name	Field Description
Received SONET overhead	Values of the received and transmitted SONET overhead: <ul style="list-style-type: none"> <li>• <b>C2</b>—Signal label. Allocated to identify the construction and content of the STS-level SPE and for PDI-P.</li> <li>• <b>F1</b>—Section user channel byte. This byte is set aside for the purposes of users.</li> <li>• <b>K1 and K2</b>—These bytes are allocated for APS signaling for the protection of the multiplex section.</li> <li>• <b>J0</b>—Section trace. This byte is defined for STS-1 number 1 of an STS-N signal. Used to transmit a 1-byte fixed-length string or a 16-byte message so that a receiving terminal in a section can verify its continued connection to the intended transmitter.</li> <li>• <b>S1</b>—Synchronization status. The S1 byte is located in the first STS-1 number of an STS-N signal.</li> <li>• <b>Z3 and Z4</b>—Allocated for future use.</li> </ul>
Transmitted SONET overhead	
Received path trace	SONET/SDH interfaces allow path trace bytes to be sent inband across the SONET/SDH link. Juniper Networks and other router manufacturers use these bytes to help diagnose misconfigurations and network errors by setting the transmitted path trace message so that it contains the system hostname and name of the physical interface. The received path trace value is the message received from the router at the other end of the fiber. The transmitted path trace value is the message that this router transmits.
Transmitted path trace	
HDLC configuration	Information about the HDLC configuration. <ul style="list-style-type: none"> <li>• <b>Policing bucket</b>—Configured state of the receiving policer.</li> <li>• <b>Shaping bucket</b>—Configured state of the transmitting shaper.</li> <li>• <b>Giant threshold</b>—Giant threshold programmed into the hardware.</li> <li>• <b>Runt threshold</b>—Runt threshold programmed into the hardware.</li> </ul>
Packet Forwarding Engine configuration	Information about the configuration of the Packet Forwarding Engine: <ul style="list-style-type: none"> <li>• <b>Destination slot</b>—FPC slot number.</li> <li>• <b>PLP byte</b>—Packet Level Protocol byte.</li> </ul>
CoS information	Information about the CoS queue for the physical interface. <ul style="list-style-type: none"> <li>• <b>CoS transmit queue</b>—Queue number and its associated user-configured forwarding class name.</li> <li>• <b>Bandwidth %</b>—Percentage of bandwidth allocated to the queue.</li> <li>• <b>Bandwidth bps</b>—Bandwidth allocated to the queue (in bps).</li> <li>• <b>Buffer %</b>—Percentage of buffer space allocated to the queue.</li> <li>• <b>Buffer usec</b>—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time.</li> <li>• <b>Priority</b>—Queue priority: <b>low</b> or <b>high</b>.</li> <li>• <b>Limit</b>—Displayed if rate limiting is configured for the queue. Possible values are <b>none</b> and <b>exact</b>. If <b>exact</b> is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If <b>none</b> is configured, the queue transmits beyond the configured bandwidth if bandwidth is available.</li> </ul>
Forwarding classes	Total number of forwarding classes supported on the specified interface.
Egress queues	Total number of egress queues supported on the specified interface.

Table 48: show class-of-service interface Output Fields (*continued*)

Field Name	Field Description
Queue	Queue number.
Forwarding classes	Forwarding class name.
Queued Packets	Number of packets queued to this queue.
Queued Bytes	Number of bytes queued to this queue. The byte counts vary by PIC type.
Transmitted Packets	Number of packets transmitted by this queue. When fragmentation occurs on the egress interface, the first set of packet counters shows the postfragmentation values. The second set of packet counters (displayed under the <b>Packet Forwarding Engine Chassis Queues</b> field) shows the prefragmentation values.
Transmitted Bytes	Number of bytes transmitted by this queue. The byte counts vary by PIC type.
Tail-dropped packets	Number of packets dropped because of tail drop.
RED-dropped packets	<p>Number of packets dropped because of random early detection (RED).</p> <ul style="list-style-type: none"> <li>• (M Series and T Series routers only) On M320 and M120 routers and the T Series routers, the total number of dropped packets is displayed. On all other M Series routers, the output classifies dropped packets into the following categories: <ul style="list-style-type: none"> <li>• <b>Low, non-TCP</b>—Number of low-loss priority non-TCP packets dropped because of RED.</li> <li>• <b>Low, TCP</b>—Number of low-loss priority TCP packets dropped because of RED.</li> <li>• <b>High, non-TCP</b>—Number of high-loss priority non-TCP packets dropped because of RED.</li> <li>• <b>High, TCP</b>—Number of high-loss priority TCP packets dropped because of RED.</li> </ul> </li> <li>• (MX Series routers with enhanced DPCs, and T Series routers with enhanced FPCs only) The output classifies dropped packets into the following categories: <ul style="list-style-type: none"> <li>• <b>Low</b>—Number of low-loss priority packets dropped because of RED.</li> <li>• <b>Medium-low</b>—Number of medium-low loss priority packets dropped because of RED.</li> <li>• <b>Medium-high</b>—Number of medium-high loss priority packets dropped because of RED.</li> <li>• <b>High</b>—Number of high-loss priority packets dropped because of RED.</li> </ul> </li> </ul> <p><b>NOTE:</b> Due to accounting space limitations on certain Type 3 FPCs (which are supported in M320 and T640 routers), this field does not always display the correct value for queue 6 or queue 7 for interfaces on 10-port 1-Gigabit Ethernet PICs.</p>



Table 48: show class-of-service interface Output Fields (*continued*)

Field Name	Field Description
RED-dropped bytes	<p>Number of bytes dropped because of RED. The byte counts vary by PIC type.</p> <ul style="list-style-type: none"> <li>(M Series and T Series routers only) On M320 and M120 routers and the T Series routers, only the total number of dropped bytes is displayed. On all other M Series routers, the output classifies dropped bytes into the following categories: <ul style="list-style-type: none"> <li><b>Low, non-TCP</b>—Number of low-loss priority non-TCP bytes dropped because of RED.</li> <li><b>Low, TCP</b>—Number of low-loss priority TCP bytes dropped because of RED.</li> <li><b>High, non-TCP</b>—Number of high-loss priority non-TCP bytes dropped because of RED.</li> <li><b>High, TCP</b>—Number of high-loss priority TCP bytes dropped because of RED.</li> </ul> </li> </ul> <p><b>NOTE:</b> Due to accounting space limitations on certain Type 3 FPCs (which are supported in M320 and T640 routers), this field does not always display the correct value for queue 6 or queue 7 for interfaces on 10-port 1-Gigabit Ethernet PICs.</p>
Transmit rate	Configured transmit rate of the scheduler. The rate is a percentage of the total interface bandwidth.
Rate Limit	<p>Rate limiting configuration of the queue. Possible values are :</p> <ul style="list-style-type: none"> <li><b>None</b>—No rate limit.</li> <li><b>exact</b>—Queue transmits at the configured rate.</li> </ul>
Buffer size	Delay buffer size in the queue.
Priority	Scheduling priority configured as <b>low</b> or <b>high</b> .
Excess Priority	Priority of the excess bandwidth traffic on a scheduler: <b>low</b> , <b>medium-low</b> , <b>medium-high</b> , <b>high</b> , or <b>none</b> .
Drop profiles	<p>Display the assignment of drop profiles.</p> <ul style="list-style-type: none"> <li><b>Loss priority</b>—Packet loss priority for drop profile assignment.</li> <li><b>Protocol</b>—Transport protocol for drop profile assignment.</li> <li><b>Index</b>—Index of the indicated object. Objects that have indexes in this output include schedulers and drop profiles.</li> <li><b>Name</b>—Name of the drop profile.</li> <li><b>Type</b>—Type of the drop profile: <b>discrete</b> or <b>interpolated</b>.</li> <li><b>Fill Level</b>—Percentage fullness of a queue.</li> <li><b>Drop probability</b>—Drop probability at this fill level.</li> </ul>
Excess Priority	Priority of the excess bandwidth traffic on a scheduler.

Table 48: show class-of-service interface Output Fields (*continued*)

Field Name	Field Description
<b>Drop profiles</b>	<p>Display the assignment of drop profiles.</p> <ul style="list-style-type: none"> <li>• <b>Loss priority</b>—Packet loss priority for drop profile assignment.</li> <li>• <b>Protocol</b>—Transport protocol for drop profile assignment.</li> <li>• <b>Index</b>—Index of the indicated object. Objects that have indexes in this output include schedulers and drop profiles.</li> <li>• <b>Name</b>—Name of the drop profile.</li> <li>• <b>Type</b>—Type of the drop profile: <b>discrete</b> or <b>interpolated</b>.</li> <li>• <b>Fill Level</b>—Percentage fullness of a queue.</li> <li>• <b>Drop probability</b>—Drop probability at this fill level.</li> </ul>
<b>Adjustment information</b>	<p>Display the assignment of shaping-rate adjustments on a scheduler node or queue.</p> <ul style="list-style-type: none"> <li>• <b>Adjusting application</b>—Application that is performing the shaping-rate adjustment. <ul style="list-style-type: none"> <li>• The adjusting application can appear as <b>ancp LS-0</b>, which is the Junos OS Access Node Control Profile process (<b>ancpd</b>) that performs shaping-rate adjustments on schedule nodes.</li> <li>• The adjusting application can also appear as <b>pppoe</b>, which adjusts the shaping-rate and overhead-accounting class-of-service attributes on dynamic subscriber interfaces in a broadband access network based on access line parameters in Point-to-Point Protocol over Ethernet (PPPoE) Tags [TR-101]. This feature is supported on MPC/MIC interfaces on MX Series routers. The shaping rate is based on the actual-data-rate-downstream attribute. The overhead accounting value is based on the access-loop-encapsulation attribute and specifies whether the access loop uses Ethernet (frame mode) or ATM (cell mode).</li> </ul> </li> <li>• <b>Adjustment type</b>—Type of adjustment: <b>absolute</b> or <b>delta</b>.</li> <li>• <b>Configured shaping rate</b>—Shaping rate configured for the scheduler node or queue.</li> <li>• <b>Adjustment value</b>—Value of adjusted shaping rate.</li> <li>• <b>Adjustment target</b>—Level of shaping-rate adjustment performed: <b>node</b> or <b>queue</b>.</li> <li>• <b>Adjustment overhead-accounting mode</b>—Configured shaping mode: <b>frame</b> or <b>cell</b>.</li> <li>• <b>Adjustment overhead bytes</b>—Number of bytes that the ANCP agent adds to or subtracts from the actual downstream frame overhead before reporting the adjusted values to CoS.</li> <li>• <b>Adjustment target</b>—Level of shaping-rate adjustment performed: <b>node</b> or <b>queue</b>.</li> <li>• <b>Adjustment multicast index</b>—</li> </ul>

## Sample Output

### show class-of-service interface (Physical)

```

user@host> show class-of-service interface so-0/2/3
Physical interface: so-0/2/3, Index: 135
Queues supported: 8, Queues in use: 4
Total non-default queues created: 4
Scheduler map: <default>, Index: 2032638653

Logical interface: fe-0/0/1.0, Index: 68, Dedicated Queues: no
Shaping rate: 32000
Object          Name                Type                Index
Scheduler-map   <default>           exp                 27
Rewrite         exp-default         exp                 21
Classifier      exp-default         exp                 5

```

Classifier	ipprec-compatibility	ip	8
Forwarding-class-map	exp-default	exp	5

#### show class-of-service interface (Logical)

```

user@host> show class-of-service interface so-0/2/3.0
Logical interface: so-0/2/3.0, Index: 68, Dedicated Queues: no
Shaping rate: 32000
Object      Name      Type      Index
Scheduler-map <default>      27
Rewrite     exp-default   exp      21
Classifier   exp-default   exp      5
Classifier   ipprec-compatibility ip      8
Forwarding-class-map exp-default   exp      5

```

#### show class-of-service interface (Gigabit Ethernet)

```

user@host> show class-of-service interface ge-6/2/0
Physical interface: ge-6/2/0, Index: 175
Queues supported: 4, Queues in use: 4
Scheduler map: <default>, Index: 2
Input scheduler map: <default>, Index: 3
Chassis scheduler map: <default-chassis>, Index: 4

```

#### show class-of-service interface (ANCP)

```

user@host> show class-of-service interface pp0.1073741842
Logical interface: pp0.1073741842, Index: 341
Object      Name      Type      Index
Traffic-control-profile TCP-CVLAN   Output    12408
Classifier   dscp-ipv6-compatibility dscp-ipv6 9
Classifier   ipprec-compatibility ip      13

Adjusting application: ancp LS-0
Adjustment type: absolute
Configured shaping rate: 4000000
Adjustment value: 11228000
Adjustment overhead-accounting mode: Frame Mode
Adjustment overhead bytes: 50
Adjustment target: node

```

#### show class-of-service interface (PPPoE Interface)

```

user@host> show class-of-service interface pp0.1
Logical interface: pp0.1, Index: 85
Object      Name      Type      Index
Traffic-control-profile tcp-pppoe.o.pp0.1 Output    2726446535
Classifier   ipprec-compatibility ip      13

Adjusting application: PPPoE
Adjustment type: absolute
Adjustment value: 5000000
Adjustment overhead-accounting mode: cell
Adjustment target: node

```

#### show class-of-service interface (T4000 Routers with Type 5 FPCs)

```

user@host> show class-of-service interface xe-4/0/0
Physical interface: xe-4/0/0, Index: 153
Queues supported: 8, Queues in use: 4
Shaping rate: 5000000000 bps
Scheduler map: <default>, Index: 2

```

```

Congestion-notification: Disabled

Logical interface: xe-4/0/0.0, Index: 77
  Object      Name      Type
Index
  Classifier  ipprec-compatibility  ip
13

```

### show class-of-service interface detail

```
user@host> show class-of-service interface ge-0/3/0 detail
```

```

Physical interface: ge-0/3/0, Enabled, Physical link is Up
Link-level type: Ethernet, MTU: 1518, Speed: 1000mbps, Loopback: Disabled,
Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,
Remote fault: Online
Device flags   : Present Running
Interface flags: SNMP-Traps Internal: 0x4000

```

```

Physical interface: ge-0/3/0, Index: 138
Queues supported: 4, Queues in use: 5
Shaping rate: 50000 bps
Scheduler map: interface-scheduler-map, Index: 58414
Input shaping rate: 10000 bps
Input scheduler map: scheduler-map, Index: 15103
Chassis scheduler map: <default-chassis>, Index: 4
Congestion-notification: Disabled

```

```

Logical interface ge-0/3/0.0
Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.1 ] Encapsulation: ENET2
inet
mpls

```

Interface	Admin	Link	Proto	Input Filter	Output Filter
ge-0/3/0.0	up	up	inet		
			mpls		
Interface	Admin	Link	Proto	Input Policer	Output Policer
ge-0/3/0.0	up	up	inet		
			mpls		

```

Logical interface: ge-0/3/0.0, Index: 68
Object      Name      Type      Index
Rewrite     exp-default  exp (mpls-any)  33
Classifier  exp-default  exp        10
Classifier  ipprec-compatibility  ip        13

```

```

Logical interface ge-0/3/0.1
Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.2 ] Encapsulation: ENET2
inet

```

Interface	Admin	Link	Proto	Input Filter	Output Filter
ge-0/3/0.1	up	up	inet		
Interface	Admin	Link	Proto	Input Policer	Output Policer
ge-0/3/0.1	up	up	inet		

```

Logical interface: ge-0/3/0.1, Index: 69
Object      Name      Type      Index
Classifier  ipprec-compatibility  ip        13

```

### show class-of-service interface comprehensive

```
user@host> show class-of-service interface ge-0/3/0 comprehensive
```

```

Physical interface: ge-0/3/0, Enabled, Physical link is Up
  Interface index: 138, SNMP ifIndex: 601, Generation: 141
  Link-level type: Ethernet, MTU: 1518, Speed: 1000Mbps, BPDU Error: None,
  MAC-REWRITE Error: None, Loopback: Disabled, Source filtering: Disabled, Flow
  control: Enabled,
  Auto-negotiation: Enabled, Remote fault: Online
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  CoS queues     : 4 supported, 4 maximum usable queues
  Schedulers     : 256
  Hold-times     : Up 0 ms, Down 0 ms
  Current address: 00:14:f6:f4:b4:5d, Hardware address: 00:14:f6:f4:b4:5d
  Last flapped   : 2010-09-07 06:35:22 PDT (15:14:42 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes : 0 0 bps
    Output bytes : 0 0 bps
    Input packets: 0 0 pps
    Output packets: 0 0 pps
  IPv6 total statistics:
    Input bytes : 0
    Output bytes : 0
    Input packets: 0
    Output packets: 0
  Ingress traffic statistics at Packet Forwarding Engine:
    Input bytes : 0 0 bps
    Input packets: 0 0 pps
    Drop bytes : 0 0 bps
    Drop packets: 0 0 pps
  Label-switched interface (LSI) traffic statistics:
    Input bytes : 0 0 bps
    Input packets: 0 0 pps
  Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Runt: 0, Policed discards: 0, L3
  incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0, FIFO errors: 0,
  Resource errors: 0
  Output errors:
    Carrier transitions: 5, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,
  FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
  Ingress queues: 4 supported, 5 in use
  Queue counters:
    Queued packets  Transmitted packets  Dropped packets

    0 af3           0           0           0
    1 af2           0           0           0
    2 ef2           0           0           0
    3 ef1           0           0           0

  Egress queues: 4 supported, 5 in use
  Queue counters:
    Queued packets  Transmitted packets  Dropped packets

    0 af3           0           0           0
    1 af2           0           0           0
    2 ef2           0           0           0
    3 ef1           0           0           0

```

```

Active alarms : None
Active defects : None
MAC statistics:
    Total octets          Receive      Transmit
    Total packets        0          0
    Unicast packets      0          0
    Broadcast packets    0          0
    Multicast packets    0          0
    CRC/Align errors     0          0
    FIFO errors          0          0
    MAC control frames   0          0
    MAC pause frames     0          0
    Oversized frames     0
    Jabber frames        0
    Fragment frames      0
    VLAN tagged frames   0
    Code violations      0
Filter statistics:
    Input packet count   0
    Input packet rejects 0
    Input DA rejects     0
    Input SA rejects     0
    Output packet count  0
    Output packet pad count
    Output packet error count
    CAM destination filters: 0, CAM source filters: 0
Autonegotiation information:
    Negotiation status: Complete
    Link partner:
        Link mode: Full-duplex, Flow control: Symmetric/Asymmetric, Remote fault:
OK
    Local resolution:
        Flow control: Symmetric, Remote fault: Link OK
Packet Forwarding Engine configuration:
    Destination slot: 0
CoS information:
    Direction : Output
    CoS transmit queue      Bandwidth      Buffer Priority
Limit
    %      bps      %      usec
    2 ef2      39      19500      0      120      high
none
    Direction : Input
    CoS transmit queue      Bandwidth      Buffer Priority
Limit
    %      bps      %      usec
    0 af3      30      3000      45      0      low
none

Physical interface: ge-0/3/0, Enabled, Physical link is Up
    Interface index: 138, SNMP ifIndex: 601
Forwarding classes: 16 supported, 5 in use
Ingress queues: 4 supported, 5 in use
Queue: 0, Forwarding classes: af3
Queued:
    Packets      :      0      0 pps
    Bytes      :      0      0 bps
Transmitted:
    Packets      :      0      0 pps
    Bytes      :      0      0 bps
Tail-dropped packets : Not Available

```

```

RED-dropped packets : 0 0 pps
RED-dropped bytes : 0 0 bps
Queue: 1, Forwarding classes: af2
  Queued:
    Packets : 0 0 pps
    Bytes : 0 0 bps
  Transmitted:
    Packets : 0 0 pps
    Bytes : 0 0 bps
    Tail-dropped packets : Not Available
    RED-dropped packets : 0 0 pps
    RED-dropped bytes : 0 0 bps
Queue: 2, Forwarding classes: ef2
  Queued:
    Packets : 0 0 pps
    Bytes : 0 0 bps
  Transmitted:
    Packets : 0 0 pps
    Bytes : 0 0 bps
    Tail-dropped packets : Not Available
    RED-dropped packets : 0 0 pps
    RED-dropped bytes : 0 0 bps
Queue: 3, Forwarding classes: ef1
  Queued:
    Packets : 0 0 pps
    Bytes : 0 0 bps
  Transmitted:
    Packets : 0 0 pps
    Bytes : 0 0 bps
    Tail-dropped packets : Not Available
    RED-dropped packets : 0 0 pps
    RED-dropped bytes : 0 0 bps
Forwarding classes: 16 supported, 5 in use
Egress queues: 4 supported, 5 in use
Queue: 0, Forwarding classes: af3
  Queued:
    Packets : 0 0 pps
    Bytes : 0 0 bps
  Transmitted:
    Packets : 0 0 pps
    Bytes : 0 0 bps
    Tail-dropped packets : Not Available
    RL-dropped packets : 0 0 pps
    RL-dropped bytes : 0 0 bps
    RED-dropped packets : 0 0 pps
    RED-dropped bytes : 0 0 bps
Queue: 1, Forwarding classes: af2
  Queued:
    Packets : 0 0 pps
    Bytes : 0 0 bps
  Transmitted:
    Packets : 0 0 pps
    Bytes : 0 0 bps
    Tail-dropped packets : Not Available
    RL-dropped packets : 0 0 pps
    RL-dropped bytes : 0 0 bps
    RED-dropped packets : 0 0 pps
    RED-dropped bytes : 0 0 bps
Queue: 2, Forwarding classes: ef2
  Queued:
    Packets : 0 0 pps

```

```

    Bytes                :                0                0 bps
Transmitted:
  Packets                :                0                0 pps
  Bytes                  :                0                0 bps
  Tail-dropped packets : Not Available
  RL-dropped packets    :                0                0 pps
  RL-dropped bytes      :                0                0 bps
  RED-dropped packets   :                0                0 pps
  RED-dropped bytes     :                0                0 bps
Queue: 3, Forwarding classes: ef1
Queued:
  Packets                :                0                0 pps
  Bytes                  :                0                0 bps
Transmitted:
  Packets                :                0                0 pps
  Bytes                  :                0                0 bps
  Tail-dropped packets : Not Available
  RL-dropped packets    :                0                0 pps
  RL-dropped bytes      :                0                0 bps
  RED-dropped packets   :                0                0 pps
  RED-dropped bytes     :                0                0 bps

Packet Forwarding Engine Chassis Queues:
Queues: 4 supported, 5 in use
Queue: 0, Forwarding classes: af3
Queued:
  Packets                :                0                0 pps
  Bytes                  :                0                0 bps
Transmitted:
  Packets                :                0                0 pps
  Bytes                  :                0                0 bps
  Tail-dropped packets :                0                0 pps
  RED-dropped packets   : Not Available
  RED-dropped bytes     : Not Available
Queue: 1, Forwarding classes: af2
Queued:
  Packets                :                0                0 pps
  Bytes                  :                0                0 bps
Transmitted:
  Packets                :                0                0 pps
  Bytes                  :                0                0 bps
  Tail-dropped packets :                0                0 pps
  RED-dropped packets   : Not Available
  RED-dropped bytes     : Not Available
Queue: 2, Forwarding classes: ef2
Queued:
  Packets                :                0                0 pps
  Bytes                  :                0                0 bps
Transmitted:
  Packets                :                0                0 pps
  Bytes                  :                0                0 bps
  Tail-dropped packets :                0                0 pps
  RED-dropped packets   : Not Available
  RED-dropped bytes     : Not Available
Queue: 3, Forwarding classes: ef1
Queued:
  Packets                :            108546                0 pps
  Bytes                  :        12754752        376 bps
Transmitted:
  Packets                :            108546                0 pps
  Bytes                  :        12754752        376 bps

```



```

Tail-dropped packets : 0 0 pps
RED-dropped packets : Not Available
RED-dropped bytes : Not Available

```

```

Physical interface: ge-0/3/0, Index: 138
Queues supported: 4, Queues in use: 5
Shaping rate: 50000 bps

```

```
Scheduler map: interface-scheduler-map, Index: 58414
```

```

Scheduler: ef2, Forwarding class: ef2, Index: 39155
  Transmit rate: 39 percent, Rate Limit: none, Buffer size: 120 us, Buffer
  Limit: none, Priority: high
  Excess Priority: unspecified
  Drop profiles:
    Loss priority  Protocol  Index  Name
    Low           any       1      < default-drop-profile>
    Medium low    any       1      < default-drop-profile>
    Medium high   any       1      < default-drop-profile>
    High          any       1      < default-drop-profile>
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Input shaping rate: 10000 bps
  Input scheduler map: scheduler-map

```

```
Scheduler map: scheduler-map, Index: 15103
```

```

Scheduler: af3, Forwarding class: af3, Index: 35058
  Transmit rate: 30 percent, Rate Limit: none, Buffer size: 45 percent, Buffer
  Limit: none, Priority: low
  Excess Priority: unspecified
  Drop profiles:
    Loss priority  Protocol  Index  Name
    Low           any       40582  green
    Medium low    any       1      < default-drop-profile>
    Medium high   any       1      < default-drop-profile>
    High          any       18928  yellow
  Drop profile: green, Type: discrete, Index: 40582
    Fill level  Drop probability
    50          0
    100         100
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Drop profile: yellow, Type: discrete, Index: 18928
    Fill level  Drop probability
    50          0
    100         100

```

```

Chassis scheduler map: < default-drop-profile>
Scheduler map: < default-drop-profile>, Index: 4

Scheduler: < default-drop-profile>, Forwarding class: af3, Index: 25
  Transmit rate: 25 percent, Rate Limit: none, Buffer size: 25 percent, Buffer
  Limit: none, Priority: low
  Excess Priority: low
  Drop profiles:
    Loss priority  Protocol  Index  Name
    Low           any       1      < default-drop-profile>
    Medium low    any       1      < default-drop-profile>
    Medium high   any       1      < default-drop-profile>
    High          any       1      < default-drop-profile>
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100

Scheduler: < default-drop-profile>, Forwarding class: af2, Index: 25
  Transmit rate: 25 percent, Rate Limit: none, Buffer size: 25 percent, Buffer
  Limit: none, Priority: low
  Excess Priority: low
  Drop profiles:
    Loss priority  Protocol  Index  Name
    Low           any       1      < default-drop-profile>
    Medium low    any       1      < default-drop-profile>
    Medium high   any       1      < default-drop-profile>
    High          any       1      < default-drop-profile>
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100

Scheduler: < default-drop-profile>, Forwarding class: ef2, Index: 25
  Transmit rate: 25 percent, Rate Limit: none, Buffer size: 25 percent, Buffer
  Limit: none, Priority: low
  Excess Priority: low
  Drop profiles:
    Loss priority  Protocol  Index  Name
    Low           any       1      < default-drop-profile>
    Medium low    any       1      < default-drop-profile>
    Medium high   any       1      < default-drop-profile>
    High          any       1      < default-drop-profile>
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100

```

```

100          100
Drop profile: < default-drop-profile>, Type: discrete, Index: 1
  Fill level  Drop probability
100          100
Drop profile: < default-drop-profile>, Type: discrete, Index: 1
  Fill level  Drop probability
100          100
Drop profile: < default-drop-profile>, Type: discrete, Index: 1
  Fill level  Drop probability
100          100

Scheduler: < default-drop-profile>, Forwarding class: ef1, Index: 25
  Transmit rate: 25 percent, Rate Limit: none, Buffer size: 25 percent, Buffer
Limit: none, Priority: low
  Excess Priority: low
  Drop profiles:
    Loss priority  Protocol  Index  Name
    Low           any       1      < default-drop-profile>
    Medium low    any       1      < default-drop-profile>
    Medium high   any       1      < default-drop-profile>
    High          any       1      < default-drop-profile>
Drop profile: , Type: discrete, Index: 1
  Fill level  Drop probability
100          100
Drop profile: < default-drop-profile>, Type: discrete, Index: 1
  Fill level  Drop probability
100          100
Drop profile: < default-drop-profile>, Type: discrete, Index: 1
  Fill level  Drop probability
100          100
Drop profile: < default-drop-profile>, Type: discrete, Index: 1
  Fill level  Drop probability
100          100
  Congestion-notification: Disabled
Forwarding class
priority Policing priority          ID      Queue  Restricted queue  Fabric
af3      normal                0       0           0           low
af2      normal                1       1           1           low
ef2      normal                2       2           2           high
ef1      normal                3       3           3           high
af1      normal                4       4           0           low

Logical interface ge-0/3/0.0 (Index 68) (SNMP ifIndex 152) (Generation 159)
  Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.1 ] Encapsulation: ENET2
  Traffic statistics:
    Input bytes :          0
    Output bytes :          0
    Input packets:          0
    Output packets:          0
  Local statistics:
    Input bytes :          0
    Output bytes :          0
    Input packets:          0
    Output packets:          0
  Transit statistics:
    Input bytes :          0          0 bps

```

```

Output bytes : 0 0 bps
Input packets: 0 0 pps
Output packets: 0 0 pps
Protocol inet, MTU: 1500, Generation: 172, Route table: 0
  Flags: Sendbcst-pkt-to-re
  Input Filters: filter-in-ge-0/3/0.0-i,
  Policar: Input: p1-ge-0/3/0.0-inet-i
Protocol mpls, MTU: 1488, Maximum labels: 3, Generation: 173, Route table: 0
  Flags: Is-Primary
  Output Filters: exp-filter,,,,,

Logical interface ge-1/2/0.0 (Index 347) (SNMP ifIndex 638) (Generation 156)

Forwarding class ID Queue Restricted queue Fabric priority Policing priority
  SPU priority
best-effort 0 0 0 low normal
  low

Aggregate Forwarding-class statistics per forwarding-class
Aggregate Forwarding-class statistics:
Forwarding-class statistics:

Forwarding-class best-effort statistics:
  Input unicast bytes: 0
  Output unicast bytes: 0
  Input unicast packets: 0
  Output unicast packets: 0

  Input multicast bytes: 0
  Output multicast bytes: 0
  Input multicast packets: 0
  Output multicast packets: 0

Forwarding-class expedited-forwarding statistics:
  Input unicast bytes: 0
  Output unicast bytes: 0
  Input unicast packets: 0
  Output unicast packets: 0

  Input multicast bytes: 0
  Output multicast bytes: 0
  Input multicast packets: 0
  Output multicast packets: 0

IPv4 protocol forwarding-class statistics:
Forwarding-class statistics:
Forwarding-class best-effort statistics:

  Input unicast bytes: 0
  Output unicast bytes: 0
  Input unicast packets: 0
  Output unicast packets: 0

  Input multicast bytes: 0
  Output multicast bytes: 0
  Input multicast packets: 0
  Output multicast packets: 0

Forwarding-class expedited-forwarding statistics:
  Input unicast bytes: 0

```

```

Output unicast bytes:    0
Input unicast packets:  0
Output unicast packets: 0

```

```

Input multicast bytes:   0
Output multicast bytes:  0
Input multicast packets: 0
Output multicast packets: 0

```

```

IPv6 protocol forwarding-class statistics:
Forwarding-class statistics:
  Forwarding-class best-effort statistics:

```

```

Input unicast bytes:    0
Output unicast bytes:   0
Input unicast packets:  0
Output unicast packets: 0

```

```

Input multicast bytes:   0
Output multicast bytes:  0
Input multicast packets: 0
Output multicast packets: 0

```

```
Forwarding-class expedited-forwarding statistics:
```

```

Input unicast bytes:    0
Output unicast bytes:   0
Input unicast packets:  0
Output unicast packets: 0

```

```
Logical interface ge-0/3/0.0 (Index 68) (SNMP ifIndex 152)
```

```

Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.1 ] Encapsulation: ENET2
Input packets : 0
Output packets: 0

```

Interface	Admin	Link	Proto	Input Filter	Output Filter
ge-0/3/0.0	up	up	inet	filter-in-ge-0/3/0.0-i	
			mpls		exp-filter

Interface	Admin	Link	Proto	Input Policer	Output Policer
ge-0/3/0.0	up	up			
			inet	p1-ge-0/3/0.0-inet-i	
			mpls		

```
Filter: filter-in-ge-0/3/0.0-i
```

```
Counters:
```

Name	Bytes	Packets
count-filter-in-ge-0/3/0.0-i	0	0

```
Filter: exp-filter
```

```
Counters:
```

Name	Bytes	Packets
count-exp-seven-match	0	0
count-exp-zero-match	0	0

```
Policers:
```

Name	Packets
p1-ge-0/3/0.0-inet-i	0

```
Logical interface: ge-0/3/0.0, Index: 68
```

Object	Name	Type	Index
Rewrite	exp-default	exp (mpls-any)	33

Rewrite rule: exp-default, Code point type: exp, Index: 33

Forwarding class	Loss priority	Code point	
af3	low	000	
af3	high	001	
af2	low	010	
af2	high	011	
ef2	low	100	
ef2	high	101	
ef1	low	110	
ef1	high	111	
Object	Name	Type	Index
Classifier	exp-default	exp	10

Classifier: exp-default, Code point type: exp, Index: 10

Code point	Forwarding class	Loss priority	
000	af3	low	
001	af3	high	
010	af2	low	
011	af2	high	
100	ef2	low	
101	ef2	high	
110	ef1	low	
111	ef1	high	
Object	Name	Type	Index
Classifier	ipprec-compatibility	ip	13

Classifier: ipprec-compatibility, Code point type: inet-precedence, Index: 13

Code point	Forwarding class	Loss priority		
000	af3	low		
001	af3	high		
010	af3	low		
011	af3	high		
100	af3	low		
101	af3	high		
110	ef1	low		
111	ef1	high		
Forwarding class	ID	Queue	Restricted queue	Fabric
priority				
af3	0	0	0	low
normal				
af2	1	1	1	low
normal				
ef2	2	2	2	high
normal				
ef1	3	3	3	high
normal				
af1	4	4	0	low
normal				

Logical interface ge-0/3/0.1 (Index 69) (SNMP ifIndex 154) (Generation 160)

Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.2 ] Encapsulation: ENET2

Traffic statistics:

Input bytes :	0
Output bytes :	0
Input packets:	0
Output packets:	0
Local statistics:	
Input bytes :	0

```

Output bytes : 0
Input packets: 0
Output packets: 0
Transit statistics:
Input bytes : 0 0 bps
Output bytes : 0 0 bps
Input packets: 0 0 pps
Output packets: 0 0 pps
Protocol inet, MTU: 1500, Generation: 174, Route table: 0
Flags: Sendbroadcast-pkt-to-re

```

```

Logical interface ge-0/3/0.1 (Index 69) (SNMP ifIndex 154)
Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.2 ] Encapsulation: ENET2
Input packets : 0
Output packets: 0

```

```

Interface      Admin Link Proto Input Filter      Output Filter
ge-0/3/0.1     up   up   mpls
Interface      Admin Link Proto Input Policer      Output Policer
ge-0/3/0.1     up   up   mpls

```

```
Logical interface: ge-0/3/0.1, Index: 69
```

Object	Name	Type	Index
Classifier	ipprec-compatibility	ip	13

```
Classifier: ipprec-compatibility, Code point type: inet-precedence, Index: 13
```

Code point	Forwarding class	Loss priority
000	af3	low
001	af3	high
010	af3	low
011	af3	high
100	af3	low
101	af3	high
110	ef1	low
111	ef1	high

Forwarding class	ID	Queue	Restricted queue	Fabric
priority				
af3	0	0	0	low
af2	1	1	1	low
ef2	2	2	2	high
ef1	3	3	3	high
af1	4	4	0	low

### show class-of-service interface (ACX Series Routers)

```

user@host-g11# show class-of-service interface
Physical interface: at-0/0/0, Index: 130
Queues supported: 4, Queues in use: 4
Scheduler map: <default>, Index: 2
Congestion-notification: Disabled

```

Logical interface: at-0/0/0.0, Index: 69

Logical interface: at-0/0/0.32767, Index: 70

Physical interface: at-0/0/1, Index: 133

Queues supported: 4, Queues in use: 4

Scheduler map: <default>, Index: 2

Congestion-notification: Disabled

Logical interface: at-0/0/1.0, Index: 71

Logical interface: at-0/0/1.32767, Index: 72

Physical interface: ge-0/1/0, Index: 146

Queues supported: 8, Queues in use: 5

Scheduler map: <default>, Index: 2

Congestion-notification: Disabled

Object	Name	Type	Index
Rewrite	dscp-default	dscp	31
Classifier	d1	dscp	11331
Classifier	ci	ieee8021p	583

Logical interface: ge-0/1/0.0, Index: 73

Object	Name	Type	Index
Rewrite	custom-exp	exp (mpls-any)	46413

Logical interface: ge-0/1/0.1, Index: 74

Logical interface: ge-0/1/0.32767, Index: 75

Physical interface: ge-0/1/1, Index: 147

Queues supported: 8, Queues in use: 5

Scheduler map: <default>, Index: 2

Congestion-notification: Disabled

Object	Name	Type	Index
Classifier	ipprec-compatibility	ip	13

Logical interface: ge-0/1/1.0, Index: 76

Physical interface: ge-0/1/2, Index: 148

Queues supported: 8, Queues in use: 5

Scheduler map: <default>, Index: 2

Congestion-notification: Disabled

Object	Name	Type	Index
Rewrite	ri	ieee8021p (outer)	35392
Classifier	ci	ieee8021p	583

Physical interface: ge-0/1/3, Index: 149

Queues supported: 8, Queues in use: 5

Scheduler map: <default>, Index: 2

Congestion-notification: Disabled

Object	Name	Type	Index
Classifier	ipprec-compatibility	ip	13

Logical interface: ge-0/1/3.0, Index: 77

Object	Name	Type	Index
Rewrite	custom-exp2	exp (mpls-any)	53581

Physical interface: ge-0/1/4, Index: 150

Queues supported: 8, Queues in use: 5

Scheduler map: <default>, Index: 2



```

Congestion-notification: Disabled
Object      Name      Type      Index
Classifier  ipprec-compatibility ip         13

Physical interface: ge-0/1/5, Index: 151
Queues supported: 8, Queues in use: 5
Scheduler map: <default>, Index: 2
Congestion-notification: Disabled
Object      Name      Type      Index
Classifier  ipprec-compatibility ip         13

Physical interface: ge-0/1/6, Index: 152
Queues supported: 8, Queues in use: 5
Scheduler map: <default>, Index: 2
Congestion-notification: Disabled
Object      Name      Type      Index
Classifier  ipprec-compatibility ip         13

Physical interface: ge-0/1/7, Index: 153
Queues supported: 8, Queues in use: 5
Scheduler map: <default>, Index: 2
Congestion-notification: Disabled
Object      Name      Type      Index
Classifier  d1        dscp      11331

Physical interface: ge-0/2/0, Index: 154
Queues supported: 8, Queues in use: 5
Scheduler map: <default>, Index: 2
Congestion-notification: Disabled
Object      Name      Type      Index
Classifier  ipprec-compatibility ip         13

Physical interface: ge-0/2/1, Index: 155
Queues supported: 8, Queues in use: 5
Scheduler map: <default>, Index: 2
Congestion-notification: Disabled
Object      Name      Type      Index
Classifier  ipprec-compatibility ip         13

Logical interface: ge-0/2/1.0, Index: 78

Logical interface: ge-0/2/1.32767, Index: 79

Physical interface: xe-0/3/0, Index: 156
Queues supported: 8, Queues in use: 5
Scheduler map: <default>, Index: 2
Congestion-notification: Disabled
Object      Name      Type      Index
Classifier  ipprec-compatibility ip         13

Logical interface: xe-0/3/0.0, Index: 80

Physical interface: xe-0/3/1, Index: 157
Queues supported: 8, Queues in use: 5
Scheduler map: <default>, Index: 2
Congestion-notification: Disabled
Object      Name      Type      Index
Classifier  ipprec-compatibility ip         13

Logical interface: xe-0/3/1.0, Index: 81

```

```
[edit]
user@host-g11#
```

#### show class-of-service interface (PPPoE Subscriber Interface for Enhanced Subscriber Management)

```
user@host> show class-of-service interface pp0.3221225474
  Logical interface: pp0.3221225475, Index: 3221225475
Object      Name                               Type                               Index
Traffic-control-profile TC_PROF_100_199_SERIES_UID1006 Output 4294967312
Scheduler-map SMAP-1_UID1002                     Output 4294967327
Rewrite-Output ieee-rewrite                       ieee8021p 60432
Rewrite-Output rule1                  ip      50463

  Adjusting application: PPPoE IA tags
    Adjustment type: absolute
    Configured shaping rate: 11000000
    Adjustment value: 5000000
    Adjustment target: node

  Adjusting application: ucac
    Adjustment type: delta
    Configured shaping rate: 5000000
    Adjustment value: 100000
    Adjustment target: node
```

## show class-of-service shared-buffer

**Supported Platforms** [EX4600, OCX1100, QFX Series standalone switches](#)

**Syntax** `show class-of-service shared-buffer`  
`<egress | ingress>`

**Release Information** Command introduced in Junos OS Release 12.3 for the QFX Series.  
 Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

**Description** Display the shared buffer allocation and partitioning configuration.



**NOTE:** Due to QFX5200 cross-point architecture, all buffer usage counters are maintained separately. When usage counters are displayed with the command `show class-of-service shared-buffer` on QFX5200, various pipe counters are displayed separately.

**Options** **none**—Display ingress and egress shared buffer settings.  
**egress**—(Optional) Display the egress shared buffer settings.  
**ingress**—(Optional) Display the ingress shared buffer settings.

**Required Privilege Level** view

**Related Documentation**

- *Example: Recommended Configuration of the Shared Buffer Pool for Networks with Mostly Best-Effort Unicast Traffic*
- *Example: Recommended Configuration of the Shared Buffer Pool for Networks with Mostly Multicast Traffic*
- *Example: Recommended Configuration of the Shared Buffer Pool for Networks with Mostly Lossless Traffic*
- *Configuring Global Ingress and Egress Shared Buffers*
- *Understanding CoS Buffer Configuration*

**List of Sample Output** [show class-of-service shared-buffer on page 232](#)

**Output Fields** [Table 49 on page 231](#) describes the output fields for the `show class-of-service shared-buffer` command. Output fields are listed in the approximate order in which they appear.

**Table 49: show class-of-service shared-buffer Output Fields**

Field Name	Field Description
Ingress	Ingress shared buffer configuration.

Table 49: show class-of-service shared-buffer Output Fields (*continued*)

Field Name	Field Description
<b>Total Buffer</b>	Total buffer space available to the ports in KB. This is the combined dedicated buffer pool and shared buffer pool.
<b>Dedicated Buffer</b>	Buffer space allocated to the dedicated buffer pool in KB.
<b>Shared Buffer</b>	Buffer space allocated to the shared buffer pool in KB.
<b>Lossless</b>	Buffer space allocated to the lossless traffic buffer pool in KB.
<b>Lossless Headroom</b>	Buffer space allocated to the lossless headroom traffic buffer pool to support priority-based flow control (PFC) and Ethernet PAUSE in KB. (Ingress ports only.)  <i>NOTE:</i> OCX Series switches do not support PFC.
<b>Lossy</b>	Buffer space allocated to the lossy (best-effort) traffic buffer pool in KB.
<b>Lossless Headroom Utilization</b>	Utilization of the ingress lossless headroom buffer pool. (These fields can help you to determine how much headroom buffer space you need to reserve to support PFC and Ethernet PAUSE for lossless flows.)  <i>NOTE:</i> OCX Series switches do not support PFC.
<b>Node Device</b>	Index number that identifies the switch. On a QFX3500 switch, this field always has a value of zero (0).
<b>Total</b>	Size of the lossless headroom ingress buffer pool in KB.
<b>Used</b>	Amount in KB of lossless headroom ingress buffer used.
<b>Free</b>	Amount in KB of lossless headroom ingress buffer free (unused).
<b>Egress</b>	Egress shared buffer configuration.
<b>Multicast</b>	Buffer space allocated to the multicast traffic buffer pool in KB. (Egress ports only.)

## Sample Output

### show class-of-service shared-buffer

```

user@switch> show class-of-service shared-buffer
Ingress:
  Total Buffer      : 9360.00 KB
  Dedicated Buffer  : 2158.00 KB
  Shared Buffer     : 7202.00 KB
  Lossless         : 648.18 KB
  Lossless Headroom : 3240.90 KB
  Lossy            : 3312.92 KB

```

## Lossless Headroom Utilization:

Node Device	Total	Used	Free
0	3240.90 KB	0.00 KB	3240.90 KB

## Egress:

Total Buffer	:	9360.00 KB
Dedicated Buffer	:	2704.00 KB
Shared Buffer	:	6656.00 KB
Lossless	:	3328.00 KB
Multicast	:	1264.64 KB
Lossy	:	2063.36 KB

## show pfe filter hw summary

**Supported Platforms** [QFX Series standalone switches](#)

**Syntax** `show pfe filter hw summary`

**Release Information** Command introduced in Junos OS Release 14.1X53-D10 for the QFX Series.

**Description** Display a summary of the access control list (ACL; also known as firewall filter) ternary content-addressable memory (TCAM) hardware utilization to show the allocated, used, and free TCAM entry space.

Command supported on standalone QFX Series switches, QFX5100-only (pure QFX5100) Virtual Chassis Fabric (VCF), QFX5100-only (pure QFX5100) Virtual Chassis (VC), and QFX3500-only (pure QFX3500) VC.

**Required Privilege Level** view

**Related Documentation**

- [Planning the Number of Firewall Filters to Create](#)

**List of Sample Output** [show pfe filter hw summary on page 235](#)

**Output Fields** [Table 50 on page 234](#) lists the output fields for the `show pfe filter hw summary` command. Output fields are listed in the approximate order in which they appear.

**Table 50: show pfe filter hw summary Output Fields**

Field Name	Field Description
<b>Group</b>	ACL ingress and egress filter groups: <ul style="list-style-type: none"> <li>• iRACL group—ingress routing ACL filter group</li> <li>• iVACL group—ingress VLAN ACL filter group</li> <li>• iPACL group—ingress port ACL filter group</li> <li>• ePACL group—egress port ACL filter group</li> <li>• eVACL group—egress VLAN ACL filter group</li> <li>• eRACL group—egress routing ACL filter group</li> <li>• eRACL IPv6 group—egress IPv6 routing ACL filter group</li> </ul>
<b>Group-ID</b>	Internal identification number of the filter group.
<b>Allocated</b>	Number of TCAM filter entries allocated to the filter group.
<b>Used</b>	Number of TCAM filter entries used by the filter group.
<b>Free</b>	Number of TCAM filter entries available for use by the filter group.

## Sample Output

### show pfe filter hw summary

```
user@switch> show pfe filter hw summary
```

Group	Group-ID	Allocated	Used	Free
-----				
> Ingress filter groups:				
iRACL group	14	512	4	508
iVACL group	13	512	2	510
iPACL group	12	256	2	254
> Egress filter groups:				
ePACL group	20	256	3	253
eVACL group	21	256	4	252
eRACL group	22	256	245	11
eRACL IPV6 group	24	256	3	253

## show pfe next-hop

---

Supported Platforms	EX Series, M Series, MX Series, PTX Series, QFX Series, T Series
List of Syntax	<a href="#">Syntax on page 236</a> <a href="#">Syntax (TX Matrix and TX Matrix Plus Routers) on page 236</a>
Syntax	<code>show pfe next-hop</code> <code>&lt;interface <i>interface-name</i>&gt;</code>
Syntax (TX Matrix and TX Matrix Plus Routers)	<code>show pfe next-hop</code> <code>&lt;fpc <i>slot</i>&gt;</code> <code>&lt;interface <i>interface-name</i>&gt;</code> <code>&lt;lcc <i>number</i>&gt;</code>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Display Packet Forwarding Engine next-hop information.
Options	<p><b>none</b>—Display all Packet Forwarding Engine next-hop information.</p> <p><b>fpc <i>slot</i></b>—(TX Matrix and TX Matrix Plus routers only) (Optional) Show the next hops for a Flexible PIC Concentrator (FPC) slot.</p> <p>On a TX Matrix router, if you specify the number of a T640 router by using the <b>lcc <i>number</i></b> option (the recommended method), replace <b><i>slot</i></b> with a value from 0 through 7. Otherwise, replace <b><i>slot</i></b> with a value from 0 through 31. On a TX Matrix Plus router, if you specify the number of a T1600 router by using the <b>lcc <i>number</i></b> option (the recommended method), replace <b><i>slot</i></b> with a value from 0 through 7. Otherwise, replace <b><i>slot</i></b> with a value from 0 through 31. For example, the following commands have the same result:</p> <pre>user@host&gt; show pfe next-hop fpc 1 lcc 1 user@host&gt; show pfe next-hop fpc 9</pre> <p><b>interface <i>interface-name</i></b>—(Optional) Display the Packet Forwarding Engine next-hop interface.</p> <p><b>lcc <i>number</i></b>—(TX Matrix and TX Matrix Plus routers only) (Optional) On a TX Matrix router, the slot number of the T640 router (or line-card chassis) that houses the FPC. On a TX Matrix Plus router, the slot number of the T1600 router (or line-card chassis) that houses the FPC. Replace <b><i>number</i></b> with a value from 0 through 3.</p>
Required Privilege Level	admin
Related Documentation	<ul style="list-style-type: none"><li>• <i>Routing Matrix with TXP-T1600 Configuration</i></li><li>• <i>Routing Matrix with TXP-T1600-3D Configuration</i></li></ul>



- *Routing Matrix with TXP-T4000-3D Configuration*
- *Routing Matrix with a TXP-Mixed-LCC-3D Configuration*

**List of Sample Output**   [show pfe next-hop on page 238](#)  
[show pfe next-hop fpc \(TX Matrix Router\) on page 238](#)  
[show pfe next-hop fpc \(TX Matrix Plus Router\) on page 239](#)

**Output Fields** Table 51 on page 238 lists the output fields for the **show pfe next hop** command. Output fields are listed in the approximate order in which they appear.

**Table 51: show pfe next-hop Output Fields**

Field Name	Field Description
ID	The next-hop ID for the entry.
Type	The next-hop type for the entry.
Interface	The interface to which the next-hop entry is assigned.
Protocol	The protocol type for the next-hop entry.
Encap	Encapsulation type for the next-hop entry.
Next Hop Addr	Next-hop address for the next-hop entry.
MTU	MTU value for the nexthop entry.

## Sample Output

### show pfe next-hop

```

user@host> show pfe next-hop
Nexthop Info:
  ID      Type      Interface      Protocol      Encap      Next Hop Addr      MTU
  ----      -      -      -      -      -      -
  4         Mcast      -              IPv4          -      0.0.0.0              0
  5         Bcast      -              IPv4          -      -                    0
  7         Discard      -              IPv4          -      -                    0
  8         MDiscard      -              IPv4          -      -                    0
  9         Reject      -              IPv4          -      -                    0
  13        Local      -              IPv4          -      192.168.4.60         0
  14        Resolve      fxp0.0         IPv4          Unspecified      -                    0
  17        Local      -              IPv4          -      127.0.0.1            0
  18        Unicast      fxp0.0         IPv4          Unspecified      192.168.4.254       0
  21        Local      -              IPv4          -      11.1.0.1             0
  22        Unicast      at-0/1/0.0     IPv4          ATM SNAP         11.1.0.2            4482
  ...

```

### show pfe next-hop fpc (TX Matrix Router)

```

user@host> show pfe next-hop fpc 1
Slot 1
Nexthop Info:
  ID      Type      Interface      Next Hop Addr      Protocol      Encap      MTU
  ----      -      -      -      -      -      -
  5         Mcast      -              default            IPv4          -          0
  6         Bcast      -              -                  IPv4          -          0
  8         Discard      -              -                  IPv4          -          0
  9         MDiscard      -              -                  IPv4          -          0
  13        Mcast      -              default            IPV6          -          0
  17        MDiscard      -              -                  IPV6          -          0
  18        Reject      -              -                  IPV6          -          0
  24        Discard      -              -                  None          -          0

```

```

68      Local - 192.168.66.113 IPv4 - 0
69      Resolve fxp0.0 - IPv4 Unspecified 0
70      Unicast fxp0.0 192.168.71.254 IPv4 Unspecified 0
256     Local - 10.71.71.1 IPv4 - 0
257     Local - 127.0.0.1 IPv4 - 0
258     Mcast.local..1 default IPv4 Unspecified 0
259     Bcast.local..1 - IPv4 Unspecified 0
261     Discard.local..1 - IPv4 Unspecified 0
262     MDiscard.local..1 - IPv4 Unspecified 0
269     Mcast.local..1 default IPV6 Unspecified 0
271     Discard.local..1 - IPV6 Unspecified 0
...

```

### show pfe next-hop fpc (TX Matrix Plus Router)

```
user@host> show pfe next-hop fpc 0
```

Slot 0

ID	Type	Interface	Next Hop Addr	Protocol	Encap	MTU
31	Mcast	-	default	IPv4	-	0
32	Bcast	-	-	IPv4	-	0
34	Discard	-	-	IPv4	-	0
35	MDiscard	-	-	IPv4	-	0
36	Reject	-	-	IPv4	-	0
39	Mcast	-	default	IPv6	-	0
42	Discard	-	-	IPv6	-	0
43	MDiscard	-	-	IPv6	-	0
44	Reject	-	-	IPv6	-	0
49	Receive	-	-	MPLS	-	0
50	Discard	-	-	MPLS	-	0
111	Mcast	.local..1	default	IPv4	Unspecified	0
112	Bcast	.local..1	-	IPv4	Unspecified	0
114	Discard	.local..1	-	IPv4	Unspecified	0
115	MDiscard	.local..1	-	IPv4	Unspecified	0
116	Reject	.local..1	-	IPv4	Unspecified	0
119	Mcast	.local..1	default	IPv6	Unspecified	0
122	Discard	.local..1	-	IPv6	Unspecified	0
123	MDiscard	.local..1	-	IPv6	Unspecified	0
124	Reject	.local..1	-	IPv6	Unspecified	0
191	Mcast	.local..2	default	IPv4	Unspecified	0
192	Bcast	.local..2	-	IPv4	Unspecified	0
194	Discard	.local..2	-	IPv4	Unspecified	0
195	MDiscard	.local..2	-	IPv4	Unspecified	0
196	Reject	.local..2	-	IPv4	Unspecified	0
322	Local	-	10.1.0.5	IPv4	-	0
323	Resolve	bcm0.0	-	IPv4	Unspecified	0
326	Local	-	129.0.0.5	IPv4	-	0
327	Resolve	bcm0.0	-	IPv4	Unspecified	0
328	Local	-	fe80::201:ff:fe01:5	IPv6	-	0
329	Receive	bcm0.0	ff02::1:ff01:5	IPv6	Unspecified	0
330	Receive	bcm0.0	fe80::	IPv6	Unspecified	0
331	Resolve	bcm0.0	-	IPv6	Unspecified	0
332	Local	-	fec0::a:1:0:5	IPv6	-	0
333	Receive	bcm0.0	ff02::1:ff00:5	IPv6	Unspecified	0
334	Receive	bcm0.0	fec0::	IPv6	Unspecified	0
335	Resolve	bcm0.0	-	IPv6	Unspecified	0
348	Local	-	192.168.178.4	IPv4	-	0
349	Resolve	em0.0	-	IPv4	Unspecified	0

350	Unicast	em0.0	192.168.178.126	IPv4	Unspecified	0
357	Local	-	fe80::201:1ff:fe01:5	IPv6	-	0
512	Local	-	10.255.178.11	IPv4	-	0
513	Local	-	127.0.0.1	IPv4	-	0
515	Local	-	abcd::10:255:178:11	IPv6	-	0
516	Local	-	fe80::200:ff:fe00:0	IPv6	-	0
517	Local	-	127.0.0.1	IPv4	-	0
518	Mcast	.local..3	default	IPv4	Unspecified	0
519	Bcast	.local..3	-	IPv4	Unspecified	0
521	Discard	.local..3	-	IPv4	Unspecified	0
522	MDiscard	.local..3	-	IPv4	Unspecified	0
523	Reject	.local..3	-	IPv4	Unspecified	0
531	Mcast	.local..3	default	IPv6	Unspecified	0
533	Discard	.local..3	-	IPv6	Unspecified	0
534	MDiscard	.local..3	-	IPv6	Unspecified	0
535	Reject	.local..3	-	IPv6	Unspecified	0
539	Mgroup	-	-	IPv4	-	0
540	Bcast	ge-15/0/3.0	-	IPv4	Ethernet	0
541	Receive	ge-15/0/3.0	14.2.1.0	IPv4	Ethernet	0
542	Local	-	14.2.1.1	IPv4	-	0
543	Resolve	ge-15/0/3.0	-	IPv4	Ethernet	0
544	Bcast	ge-31/0/4.0	-	IPv4	Ethernet	0
545	Receive	ge-31/0/4.0	14.1.1.0	IPv4	Ethernet	0
546	Local	-	14.1.1.1	IPv4	-	0
547	Resolve	ge-31/0/4.0	-	IPv4	Ethernet	0
548	Unicast	ge-31/0/4.0	14.1.1.2	IPv4	Ethernet	0
549	Unicast	ge-15/0/3.0	14.2.1.2	IPv4	Ethernet	0
550	Bcast	ae1.0	-	IPv4	Ethernet	0
551	Receive	ae1.0	11.1.1.0	IPv4	Ethernet	0
552	Local	-	11.1.1.1	IPv4	-	0
553	Resolve	ae1.0	-	IPv4	Ethernet	0
554	Aggreg.	ae1.0	-	IPv4	Ethernet	0
555	Unicast	ge-23/0/8.0	11.1.1.2	IPv4	Ethernet	0
556	Unicast	ge-7/0/9.0	11.1.1.2	IPv4	Ethernet	0
557	Aggreg.	ae1.0	-	MPLS	Ethernet	0
558	Unicast	ge-23/0/8.0	-	MPLS	Ethernet	0
559	Unicast	ge-7/0/9.0	-	MPLS	Ethernet	0
560	Aggreg.	ae1.0	-	MPLS	Ethernet	0
561	Unicast	ge-23/0/8.0	-	MPLS	Ethernet	0
562	Unicast	ge-7/0/9.0	-	MPLS	Ethernet	0

## show pfe route

<b>Supported Platforms</b>	EX Series, M Series, MX Series, PTX Series, QFX Series, T Series
<b>List of Syntax</b>	<a href="#">Syntax on page 241</a> <a href="#">Syntax (EX Series Switch and QFX Series) on page 241</a> <a href="#">Syntax (QFX Series) on page 241</a> <a href="#">Syntax (MX Series) on page 241</a> <a href="#">Syntax (TX Matrix and TX Matrix Plus Routers) on page 241</a>
<b>Syntax</b>	<pre>show pfe route &lt;&lt;inet6   ip   iso&gt; &lt;prefix prefix&gt;   &lt;table &lt;table-name&gt; &lt;index index&gt; &lt;prefix prefix&gt;&gt;&gt; &lt;mpls&gt; &lt;summary&gt;</pre>
<b>Syntax (EX Series Switch and QFX Series)</b>	<pre>show pfe route &lt;&lt;inet6   ip&gt; &lt;prefix prefix&gt;   &lt;table &lt;table-name&gt; &lt;index index&gt; &lt;prefix prefix&gt;&gt;&gt; &lt;mpls&gt; &lt;summary&gt;</pre>
<b>Syntax (QFX Series)</b>	<pre>show pfe route &lt;&lt;inet6   ip&gt; &lt;prefix prefix&gt;   &lt;table &lt;table-name&gt; &lt;index index&gt; &lt;prefix prefix&gt;&gt; &lt;hw (host   lpm   multicast)&gt;&gt; &lt;&lt;clnp&gt; &lt;prefix prefix&gt;   &lt;table &lt;table-name&gt; &lt;index index&gt; &lt;prefix prefix&gt;&gt;&gt; &lt;mpls&gt; &lt;summary&gt; &lt;hw&gt;</pre>
<b>Syntax (MX Series)</b>	<pre>show pfe route &lt;&lt;inet6   ip&gt; &lt;prefix prefix&gt;   &lt;table &lt;table-name&gt; &lt;index index&gt; &lt;prefix prefix&gt;&gt;&gt; &lt;dhcp&gt; &lt;mpls&gt; &lt;summary&gt;</pre>
<b>Syntax (TX Matrix and TX Matrix Plus Routers)</b>	<pre>show pfe route &lt;fpc slot&gt; &lt;&lt;inet6   ip   iso&gt; &lt;prefix prefix&gt;   &lt;table &lt;table-name&gt; &lt;index index&gt; &lt;prefix prefix&gt;&gt;&gt; &lt;lcc number&gt; &lt;mpls&gt; &lt;summary&gt;</pre>
<b>Release Information</b>	<p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Command introduced in Junos OS Release 11.1 for the QFX Series.</p> <p>Command introduced in Junos OS Release 13.3 for the MX Series.</p> <p>Command option <b>hw</b> introduced in Junos OS Release 14.1X53-D10 for the QFX Series.</p> <p>Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>
<b>Description</b>	Display the routes in the Packet Forwarding Engine forwarding table. The Packet Forwarding Engine forwards packets between input and output interfaces.



**NOTE:** The Routing Engine maintains a master copy of the forwarding table. It copies the forwarding table to the Packet Forwarding Engine, which is the part of the router or switch responsible for forwarding packets. To display the routes in the Routing Engine forwarding table, use the `show route forwarding table` command. For more information, see the [CLI Explorer](#).

**Options** **none**—Display all Packet Forwarding Engine forwarding table information.

**clnp**—(Optional) Show International Standards Organization (ISO) connectionless-mode network protocol (CLNP) route table information.

**dhcp**—(Optional) Display Packet Forwarding Engine DHCP-Snooping route table information.

**fpc slot**—(TX Matrix and TX Matrix Plus routers only) (Optional) Show the next hops for a Flexible PIC Concentrator (FPC) slot.

- On a TX Matrix router, if you specify the number of a T640 router by using the *lcc number* option (the recommended method), replace **slot** with a value from **0** through **7**. Otherwise, replace **slot** with a value from **0** through **31**.
- On a TX Matrix Plus router, if you specify the number of a T1600 router by using the *lcc number* option (the recommended method), replace **slot** with a value from **0** through **7**. Otherwise, replace **slot** with a value from **0** through **31**.
- On a TX Matrix Plus router in the TXP-T1600-3D, TXP-T4000-3D, or TXP-Mixed-LCC-3D configuration, if you specify the number of a T1600 or T4000 router by using the *lcc number* option (the recommended method), replace **slot** with a value from **0** through **7**. Otherwise, replace **slot** with a value from **0** through **63**.

For example, the following commands have the same result:

```
user@host> show pfe route fpc 1 lcc 1
user@host> show pfe route fpc 9
```

**host**—(QFX standalone switches, pure mode QFX5100-only VCF and VC, and pure mode QFX3500-only VC) (Optional) Display host routes installed in the on-chip hardware table.

**hw**—(QFX standalone switches, pure mode QFX5100-only VCF and VC, and pure mode QFX3500-only VC) (Optional) Display routes installed in the on-chip hardware table (as opposed to displaying routes from the routing table and the PFE forwarding table before they are installed in the hardware).

**index index**—(Optional) Display table index.

**inet6**—(Optional) Display Packet Forwarding Engine IPv6 routes.

**ip**—(Optional) Display Packet Forwarding Engine IPv4 routes.

**iso**—(Optional) Display ISO version routing tables.

**lcc *number***—(TX Matrix and TX Matrix Plus routers only) (Optional) On a TX Matrix router, the slot number of the T640 router (or line-card chassis) that houses the FPC. On a TX Matrix Plus router, the slot number of the T1600 router (or line-card chassis) that houses the FPC. Replace *number* with a value from 0 through 3.

**mpls**—(Optional) Display Packet Forwarding Engine MPLS information.

**multicast**—(QFX standalone switches, pure mode QFX5100-only VCF and VC, and pure mode QFX3500-only VC) (Optional) Display multicast routes installed in the on-chip hardware table.

**prefix *prefix***—(Optional) IPv4 or IPv6 prefix for which to show table entries.

**summary**—(Optional) Display summary of Packet Forwarding Engine information.

**table <table-name>**—(Optional) Display table information.

**Required Privilege Level**

admin

**Related Documentation**

- *Routing Matrix with TXP-T1600 Configuration*
- *Routing Matrix with TXP-T1600-3D Configuration*
- *Routing Matrix with TXP-T4000-3D Configuration*
- *Routing Matrix with a TXP-Mixed-LCC-3D Configuration*

**List of Sample Output**

[show pfe route ip on page 245](#)  
[show pfe route iso on page 245](#)  
[show pfe route lcc summary \(TX Matrix Router\) on page 245](#)  
[show pfe route lcc summary \(TX Matrix Plus Router\) on page 247](#)  
[show pfe route summary \(MX Series Router\) on page 248](#)  
[show pfe route summary hw \(QFX Series, EX4600 Switches, OCX Series\) on page 248](#)  
[show pfe route ip hw host \(QFX Series\) on page 249](#)

**Output Fields**

Table 52 on page 243 lists the output fields for the **show pfe route** command. Output fields are listed in the approximate order in which they appear.

**Table 52: show pfe route Output Fields**

Field Name	Field Description
Destination	Destination address for the entry.
NH IP Addr	Next-hop IP address for the entry.
Type	Next-hop type for the entry
NH ID	Next-hop ID for the entry

Table 52: show pfe route Output Fields (*continued*)

Field Name	Field Description
<b>Encap</b>	Encapsulation type for the next-hop entry.
<b>Interface</b>	Interface to which the next-hop entry is assigned.

Table 53 on page 244 lists the output fields for the QFX Series **show pfe route** hardware table (**hw**) commands. Output fields are listed in the approximate order in which they appear.

Table 53: QFX Series, EX4600 switches, and OCX Series show pfe route Hardware Table Output Fields

Field Name	Field Description
<b>Max</b>	Maximum routing entries per route type.
<b>Used</b>	Number of routing entries consumed per route type.
<b>Free</b>	Number of unused routing entries per route type.
<b>% Free</b>	Percentage of unused routing entries per route type.
<b>Rtt</b>	Internal routing engine index number of the route table.
<b>VRF</b>	Internal hardware index number for the corresponding route table.
<b>Destination</b>	Destination address for the entry.
<b>Type</b>	( <b>show pfe route summary hw</b> )—Route type for the entry: IPv4 or IPv6 route, and host, LPM, or multicast route.  ( <b>show pfe route (ip   inet6) hw</b> )—Next-hop type for the entry.
<b>NH ID</b>	Next-hop ID for the entry
<b>Interface</b>	Interface to which the next-hop entry is assigned.
<b>HW NH-ID</b>	Internal hardware index number of the next-hop.
<b>Src-MAC-Address</b>	Source MAC address.
<b>Port</b>	Port number.
<b>Dst-MAC-Address</b>	Destination MAC address.
<b>VLAN</b>	ID of the multicast group VLAN.
<b>GROUP</b>	Internal hardware index number of the multicast group next-hop.



Table 53: QFX Series, EX4600 switches, and OCX Series show pfe route Hardware Table Output Fields (*continued*)

Field Name	Field Description
CLASS	Internal class number of the multicast group.

## Sample Output

### show pfe route ip

```
user@host> show pfe route ip
```

```
IPv4 Route Table 0, default.0, 0x0:
Destination                NH IP Addr      Type      NH ID Interface
-----
default                    127.0.0.1      Discard    8
127.0.0.1                  127.0.0.1      Local      256
172.16/12                  192.168.71.254 Unicast    68 fxp0.0
192.168.0/18               192.168.71.254 Unicast    68 fxp0.0
192.168.40/22              192.168.71.254 Unicast    68 fxp0.0
192.168.64/18              192.168.71.254 Unicast    68 fxp0.0
192.168.64/21              192.168.71.254 Resolve    67 fxp0.0
192.168.71.249             192.168.71.249 Local      66
192.168.220.0/30           192.168.220.0 Resolve    303 fe-0/0/0.0
192.168.220.0              192.168.220.0 Receive    301 fe-0/0/0.0
224.0.0.1                  Mcast         5
255.255.255.255           Bcast         6
```

```
...
```

### show pfe route iso

```
user@host# show pfe route iso
```

```
CLNS Route Table 0, CLNP.0, 0x0:
Destination                Type      NH ID Interface
-----
default                    Reject    60
47.0005.80ff.f800.0000.0108.0001.0102.5508.2159/152 Local     514
49.0001.00a0.c96b.c491/72 Local     536
```

### show pfe route lcc summary (TX Matrix Router)

```
user@host> show pfe route lcc 2 summary
```

```
Slot 0
```

```
IPv4 Route Tables:
Index      Routes      Size(b)
-----
Default    43           3081
1          4            281
```

```
MPLS Route Tables:
Index      Routes      Size(b)
-----
Default    1           68
```

## IPv6 Route Tables:

Index	Routes	Size(b)
-----	-----	-----
Default	9	717
1	5	389

## Slot 1

## IPv4 Route Tables:

Index	Routes	Size(b)
-----	-----	-----
Default	43	3081
1	4	281

## MPLS Route Tables:

Index	Routes	Size(b)
-----	-----	-----
Default	1	68

## IPv6 Route Tables:

Index	Routes	Size(b)
-----	-----	-----
Default	9	717
1	5	389

## Slot 16

## IPv4 Route Tables:

Index	Routes	Size(b)
-----	-----	-----
Default	41	2938
1	4	281

## MPLS Route Tables:

Index	Routes	Size(b)
-----	-----	-----
Default	1	68

## IPv6 Route Tables:

Index	Routes	Size(b)
-----	-----	-----
Default	9	717
1	5	389

## Slot 17

## IPv4 Route Tables:

Index	Routes	Size(b)
-----	-----	-----
Default	41	2938
1	4	281

## MPLS Route Tables:

Index	Routes	Size(b)
-----	-----	-----
Default	1	68

## IPv6 Route Tables:

Index	Routes	Size(b)
-----	-----	-----
Default	9	717
1	5	389

### show pfe route lcc summary (TX Matrix Plus Router)

user@host> show pfe route lcc 2 summary

Slot 0

IPv4 Route Tables:		
Index	Routes	Size(b)
-----	-----	-----
Default	25	2266
1	9	815
2	6	545
3	5	453
4	15	1371
5	5	453
6	13	1187

MPLS Route Tables:		
Index	Routes	Size(b)
-----	-----	-----
Default	1	88
4	5	452

IPv6 Route Tables:		
Index	Routes	Size(b)
-----	-----	-----
Default	7	697
1	13	1305
3	4	385
4	4	385
5	4	385
6	18	1833

Slot 6

IPv4 Route Tables:		
Index	Routes	Size(b)
-----	-----	-----
Default	25	2266
1	9	815
2	6	545
3	5	453
4	15	1371
5	5	453
6	13	1187

MPLS Route Tables:		
Index	Routes	Size(b)
-----	-----	-----
Default	1	88
4	5	452

IPv6 Route Tables:		
Index	Routes	Size(b)

```

-----
Default      7      697
1            13     1305
3            4      385
4            4      385
5            4      385
6            18     1833
...

```

### show pfe route summary (MX Series Router)

```
user@host> show pfe route summary
```

```
Slot 0
```

```

DHCP-Snooping Route Tables:
Index      Routes      Size(b)
-----
Default    1      144

```

```

IPv4 Route Tables:
Index      Routes      Size(b)
-----
Default    25     2266
1          9      815
2          6      545
3          5      453
4         15     1371
5          5      453
6         13     1187

```

```

MPLS Route Tables:
Index      Routes      Size(b)
-----
Default    1      88
4          5     452

```

```

IPv6 Route Tables:
Index      Routes      Size(b)
-----
Default    7      697
1         13     1305
3          4      385
4          4      385
5          4      385
6         18     1833

```

```
...
```

### show pfe route summary hw (QFX Series, EX4600 Switches, OCX Series)

```
user@switch> show pfe route summary hw
```

```
Slot 0
```

```
Unit: 0
```

```
Profile active: l2-profile-three
```

```

Type      Max      Used      Free      % free
-----
IPv4 Host  8192    103     8073     98.55
IPv4 LPM   16384    9     16369     99.91
IPv4 Mcast 4096     2     4037     98.56

```

IPv6 Host	4096	6	4037	98.56
IPv6 LPM(< 64)	8192	3	8185	99.91
IPv6 LPM(> 64)	256	1	255	99.61
IPv6 Mcast	2048	0	2019	98.58

### show pfe route ip hw host (QFX Series)

```
user@switch> show pfe route ip host hw
```

```
Slot 0
```

```
Unit: 0
```

```
IPv4 Host entries present: 103
```

Rtt	VRF	Destination	Type	NH-ID	Interface
		HW NH-ID Src-MAC-Address Port Dst-MAC-Address			
4	3	255.255.255.255	Bcast	1695	.local. .4
ifl 550	100003	00:00:00:01:02:03 127	00:00:00:01:02:03		
0	1	200.1.1.42	Unicast	1743	et-0/1/1 .0
ifl 559	100268	84:18:88:de:96:fd 53	00:00:00:21:12:23		
0	1	200.1.1.56	Unicast	1743	et-0/1/1 .0
ifl 559	100268	84:18:88:de:96:fd 53	00:00:00:21:12:23		
0	1	200.1.1.61	Unicast	1743	et-0/1/1 .0
ifl 559	100268	84:18:88:de:96:fd 53	00:00:00:21:12:23		
0	1	11.1.1.2	Unicast	1743	et-0/1/1 .0
ifl 559	100268	84:18:88:de:96:fd 53	00:00:00:21:12:23		
0	1	200.1.1.73	Unicast	1743	et-0/1/1 .0
ifl 559	100268	84:18:88:de:96:fd 53	00:00:00:21:12:23		
0	1	200.1.1.76	Unicast	1743	et-0/1/1 .0
ifl 559	100268	84:18:88:de:96:fd 53	00:00:00:21:12:23		
0	1	200.1.1.18	Unicast	1743	et-0/1/1 .0
ifl 559	100268	84:18:88:de:96:fd 53	00:00:00:21:12:23		
0	1	200.1.1.5	Unicast	1743	et-0/1/1 .0
ifl 559	100268	84:18:88:de:96:fd 53	00:00:00:21:12:23		
0	1	200.1.1.23	Unicast	1743	et-0/1/1 .0
ifl 559	100268	84:18:88:de:96:fd 53	00:00:00:21:12:23		
0	1	101.1.1.255	Bcast	1664	ae0 .0
ifl 544	100003	00:00:00:01:02:03 127	00:00:00:01:02:03		
0	1	200.1.1.40	Unicast	1743	et-0/1/1 .0
ifl 559	100268	84:18:88:de:96:fd 53	00:00:00:21:12:23		
0	1	200.1.1.58	Unicast	1743	et-0/1/1 .0
ifl 559	100268	84:18:88:de:96:fd 53	00:00:00:21:12:23		
. . .					

## show pfe terse

---

Supported Platforms	EX Series, M Series, MX Series, PTX Series, QFX Series, T Series
List of Syntax	<a href="#">Syntax on page 250</a> <a href="#">Syntax (TX Matrix and TX Matrix Plus Router) on page 250</a> <a href="#">Syntax (MX Series Router) on page 250</a>
Syntax	show pfe terse
Syntax (TX Matrix and TX Matrix Plus Router)	show pfe terse <lcc <i>number</i>   scc> <sfc <i>number</i> >
Syntax (MX Series Router)	show pfe terse <all-members> <local> <member <i>member-id</i> >
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Display Packet Forwarding Engine status information.
Options	<b>none</b> —Display brief information about the Packet Forwarding Engine.  <b>all-members</b> —(MX Series routers only) (Optional) Display Packet Forwarding Engine status information for all members in the Virtual Chassis configuration.  <b>lcc <i>number</i></b> —(TX Matrix and TX Matrix Plus routers only) (Optional) On a TX Matrix router, display Packet Forwarding Engine information for a specific T640 router (or line-card chassis) that is connected to a TX Matrix router. On a TX Matrix Plus router, display Packet Forwarding Engine information for a specific T1600 router (or line-card chassis) that is connected to a TX Matrix Plus router. Replace <b><i>number</i></b> with a value from 0 through 3.  <b>local</b> —(MX Series routers only) (Optional) Display Packet Forwarding Engine status information for the local Virtual Chassis member.  <b>member <i>member-id</i></b> —(MX Series routers only) (Optional) Display Packet Forwarding Engine status information for the specified member of the Virtual Chassis configuration. Replace <b><i>member-id</i></b> with a value of 0 or 1.  <b>scc</b> —(TX Matrix routers only) (Optional) Display Packet Forwarding Engine information for the TX Matrix router (or switch-card chassis).  <b>sfc</b> —(TX Matrix Plus routers only) (Optional) Display Packet Forwarding Engine information for the TX Matrix Plus router (or switch-fabric chassis).

**Required Privilege Level** admin

**List of Sample Output** [show pfe terse \(TX Matrix Router\) on page 251](#)  
[show pfe terse \(TX Matrix Plus Router\) on page 251](#)  
[show pfe terse sfc \(TX Matrix Plus Router\) on page 251](#)

## Sample Output

### show pfe terse (TX Matrix Router)

```
user@host> show pfe terse
Slot Type Slot State Flags Uptime
0 SFM Present Online 0x0bf 01:25:42
2 SFM Present Online 0x0bf 01:25:40
0 FPC Present Online 0x102 01:25:57
1 FPC Present Online 0x102 01:25:55
2 FPC Present Online 0x102 01:25:53
```

### show pfe terse (TX Matrix Plus Router)

```
user@host> show pfe terse
sfc0-re0:
-----
Slot Type Slot State Uptime
0 LCC Present Online 2d 05:26

lcc0-re0:
-----
Slot Type Slot State Uptime
0 GFPC Present Online 2d 05:25
1 GFPC Present Online 2d 05:25
```

### show pfe terse sfc (TX Matrix Plus Router)

```
user@host> show pfe terse sfc 0
sfc0-re0:
-----
Slot Type Slot State Uptime
0 LCC Present Online 2d 05:25
```

## show pfe version

---

**Supported Platforms** [PTX Series, QFX Series](#)

**Syntax** `show pfe version <brief | detail>`

**Release Information** Command introduced before Junos OS Release 7.4.  
Command introduced in Junos OS Release 11.1 for the QFX Series.  
Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

**Description** Display Packet Forwarding Engine version information.

**Options** `brief | detail`—Display the specified level of output.

**Required Privilege Level** admin

**List of Sample Output** [show pfe version brief on page 252](#)  
[show pfe version detail on page 252](#)

### Sample Output

#### show pfe version brief

```
user@host> show pfe version brief
PFED release 11.1D0 built by builder on 2010-11-11 05:16:11 UTC
```

#### show pfe version detail

```
user@host> show pfe version detail
PFED release 11.1D0 built by builder on 2010-11-11 05:16:11 UTC

junos-core01.juniper.net:/volume/build/junos/rpd_feb11/11.1/development/20101111.0/obj-i386/
junos/usr.sbin/pfed
```



## show interfaces voq

**Supported Platforms** PTX Series, QFX Series standalone switches

**Syntax** `show interfaces voq interface-name`  
`<forwarding-class forwarding-class-name>`  
`<non-zero>`  
`<source-fpc source-fpc-number>`

**Release Information** Command introduced in Junos OS Release 14.1 for the PTX Series Routers  
 Command introduced in Junos OS Release 15.1X53-D20 for QFX10000 switches.

**Description** Display the random early detection (RED) drop statistics from all ingress Packet Forwarding Engines associated with the specified physical egress interface. In the VOQ architecture, egress output queues (shallow buffers) buffer data in virtual queues on ingress Packet Forwarding Engines. In cases of congestion, you can use this command to identify which ingress Packet Forwarding Engine is the source of RED-dropped packets contributing to congestion.



**NOTE:** On the PTX Series routers and QFX10000 switches, these statistics include tail-dropped packets.

**Options** `interface interface-name`—Display the ingress VOQ RED drop statistics for the specified egress interface.

`forwarding-class forwarding-class-name`—Display VOQ RED drop statistics for a specified forwarding class.

`non-zero`—Display only non-zero VOQ RED drop statistics counters.

`source-fpc source-fpc-number`—Display VOQ RED drop statistics for the specified source FPC.

**Additional Information**

- On PTX Series routers, you can display VOQ statistics for only the WAN physical interface.
- VOQ statistics for aggregated physical interfaces are not supported. Statistics for an aggregated interface are the summation of the queue statistics of the child links of that aggregated interface. You can use the **show interfaces queue** command to identify the child link which is experiencing congestion and then view the VOQ statistics on the respective child link using the **show interfaces voq** command.

For information on virtual output queuing on PTX routers, see *Understanding Virtual Output Queues on PTX Series Packet Transport Routers*. For information on virtual output queueing on QFX10000 switches, see *Understanding CoS Virtual Output Queues (VOQs) on QFX10000 Switches*.

**Required Privilege Level** view

**Related Documentation**

- [Understanding Virtual Output Queues on PTX Series Packet Transport Routers](#)
- [Understanding CoS Virtual Output Queues \(VOQs\) on QFX10000 Switches](#)

**List of Sample Output**

[show interfaces voq \(For a Specific Physical Interface\) \(PTX Series Routers\) on page 255](#)  
[show interfaces voq \(For a Specific Physical Interface\) \(QFX10000 Switches\) on page 260](#)  
[show interfaces voq et-7/0/0 \(For a Specific Forwarding Class\) on page 261](#)  
[show interfaces voq et-5/0/12 \(For a Specific Source FPC\) on page 263](#)  
[show interfaces voq et-5/0/12 \(For a Specific Forwarding Class and Source FPC\) on page 264](#)  
[show interfaces voq et-7/0/0 \(Non-Zero\) on page 264](#)  
[show interfaces voq et-7/0/0 \(For a Specific Forwarding Class and Non-Zero\) on page 265](#)

**Output Fields** [Table 54 on page 254](#) lists the output fields for the show interfaces queue command. Output fields are listed in the approximate order in which they appear.

**Table 54: show interfaces voq Output Fields**

Field Name	Field Description
Physical interface	Name of the physical interface.
Enabled	State of the interface. Possible values are described in the "Enabled Field" section under <i>Common Output Fields Description</i> .
Interface index	Physical interface's index number, which reflects its initialization sequence.
SNMP ifIndex	SNMP index number for the interface.
Queue	Egress queue number.
Forwarding classes	Forwarding class name.
FPC number	Number of the Flexible PIC Concentrator (FPC) located on ingress.
PFE	Number of the Packet Forwarding Engine providing virtual output queues on the ingress.
RED-dropped packets	Number of packets per second (pps) dropped because of random early detection (RED).  <b>NOTE:</b> On the PTX Series routers, these statistics include tail-dropped packets.

Table 54: show interfaces voq Output Fields (*continued*)

Field Name	Field Description
RED-dropped bytes	Number of bytes per second dropped because of RED. The byte counts vary by interface hardware.
	<b>NOTE:</b> On the PTX Series routers, these statistics include tail-dropped packets.

## Sample Output

### show interfaces voq (For a Specific Physical Interface) (PTX Series Routers)

The following example shows ingress RED-dropped statistics for the egress Ethernet interface configured on port 0 of Physical Interface Card (PIC) 0, located on the FPC in slot 7.

The sample output below shows that the cause of the congestion is ingress Packet Forwarding Engine PFE 0, which resides on FPC number 4, as denoted by the count of RED-dropped packets and RED-dropped bytes for egress queue 0, forwarding classes best-effort and egress queue 3, forwarding class network control.

```

user@host> show interfaces voq et-7/0/0
Physical interface: et-7/0/0, Enabled, Physical link is Up
  Interface index: 155, SNMP ifIndex: 699

Queue: 0, Forwarding classes: best-effort

FPC number: 1
  PFE: 0
    RED-dropped packets :                0                0 pps
    RED-dropped bytes   :                0                0 bps
  PFE: 1
    RED-dropped packets :                0                0 pps
    RED-dropped bytes   :                0                0 bps
  PFE: 2
    RED-dropped packets :                0                0 pps
    RED-dropped bytes   :                0                0 bps
  PFE: 3
    RED-dropped packets :                0                0 pps
    RED-dropped bytes   :                0                0 bps

FPC number: 4
  PFE: 0
    RED-dropped packets :           19969426           2323178 pps
    RED-dropped bytes   :           2196636860       2044397464 bps
  PFE: 1
    RED-dropped packets :                0                0 pps
    RED-dropped bytes   :                0                0 bps
  PFE: 2
    RED-dropped packets :                0                0 pps
    RED-dropped bytes   :                0                0 bps
  PFE: 3
    RED-dropped packets :                0                0 pps
    RED-dropped bytes   :                0                0 bps

FPC number: 6

```

```

PFE: 0
  RED-dropped packets :          19969424          2321205 pps
  RED-dropped bytes   :          2196636640          2042660808 bps
PFE: 1
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 2
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 3
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 4
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 5
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 6
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 7
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps

FPC number: 7
PFE: 0
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 1
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 2
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 3
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps

Queue: 1, Forwarding classes: expedited-forwarding

FPC number: 1
PFE: 0
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 1
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 2
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 3
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps

FPC number: 4
PFE: 0
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 1
  RED-dropped packets :              0              0 pps

```

```

        RED-dropped bytes      :                0                0 bps
PFE: 2
        RED-dropped packets    :                0                0 pps
        RED-dropped bytes      :                0                0 bps
PFE: 3
        RED-dropped packets    :                0                0 pps
        RED-dropped bytes      :                0                0 bps

FPC number: 6
PFE: 0
        RED-dropped packets    :                0                0 pps
        RED-dropped bytes      :                0                0 bps
PFE: 1
        RED-dropped packets    :                0                0 pps
        RED-dropped bytes      :                0                0 bps
PFE: 2
        RED-dropped packets    :                0                0 pps
        RED-dropped bytes      :                0                0 bps
PFE: 3
        RED-dropped packets    :                0                0 pps
        RED-dropped bytes      :                0                0 bps
PFE: 4
        RED-dropped packets    :                0                0 pps
        RED-dropped bytes      :                0                0 bps
PFE: 5
        RED-dropped packets    :                0                0 pps
        RED-dropped bytes      :                0                0 bps
PFE: 6
        RED-dropped packets    :                0                0 pps
        RED-dropped bytes      :                0                0 bps
PFE: 7
        RED-dropped packets    :                0                0 pps
        RED-dropped bytes      :                0                0 bps

FPC number: 7
PFE: 0
        RED-dropped packets    :                0                0 pps
        RED-dropped bytes      :                0                0 bps
PFE: 1
        RED-dropped packets    :                0                0 pps
        RED-dropped bytes      :                0                0 bps
PFE: 2
        RED-dropped packets    :                0                0 pps
        RED-dropped bytes      :                0                0 bps
PFE: 3
        RED-dropped packets    :                0                0 pps
        RED-dropped bytes      :                0                0 bps

Queue: 2, Forwarding classes: assured-forwarding

FPC number: 1
PFE: 0
        RED-dropped packets    :                0                0 pps
        RED-dropped bytes      :                0                0 bps
PFE: 1
        RED-dropped packets    :                0                0 pps
        RED-dropped bytes      :                0                0 bps
PFE: 2
        RED-dropped packets    :                0                0 pps
        RED-dropped bytes      :                0                0 bps
PFE: 3

```

```

    RED-dropped packets : 0 0 pps
    RED-dropped bytes : 0 0 bps

FPC number: 4
PFE: 0
    RED-dropped packets : 0 0 pps
    RED-dropped bytes : 0 0 bps
PFE: 1
    RED-dropped packets : 0 0 pps
    RED-dropped bytes : 0 0 bps
PFE: 2
    RED-dropped packets : 0 0 pps
    RED-dropped bytes : 0 0 bps
PFE: 3
    RED-dropped packets : 0 0 pps
    RED-dropped bytes : 0 0 bps

FPC number: 6
PFE: 0
    RED-dropped packets : 0 0 pps
    RED-dropped bytes : 0 0 bps
PFE: 1
    RED-dropped packets : 0 0 pps
    RED-dropped bytes : 0 0 bps
PFE: 2
    RED-dropped packets : 0 0 pps
    RED-dropped bytes : 0 0 bps
PFE: 3
    RED-dropped packets : 0 0 pps
    RED-dropped bytes : 0 0 bps
PFE: 4
    RED-dropped packets : 0 0 pps
    RED-dropped bytes : 0 0 bps
PFE: 5
    RED-dropped packets : 0 0 pps
    RED-dropped bytes : 0 0 bps
PFE: 6
    RED-dropped packets : 0 0 pps
    RED-dropped bytes : 0 0 bps
PFE: 7
    RED-dropped packets : 0 0 pps
    RED-dropped bytes : 0 0 bps

FPC number: 7
PFE: 0
    RED-dropped packets : 0 0 pps
    RED-dropped bytes : 0 0 bps
PFE: 1
    RED-dropped packets : 0 0 pps
    RED-dropped bytes : 0 0 bps
PFE: 2
    RED-dropped packets : 0 0 pps
    RED-dropped bytes : 0 0 bps
PFE: 3
    RED-dropped packets : 0 0 pps
    RED-dropped bytes : 0 0 bps

Queue: 3, Forwarding classes: network-control

FPC number: 1
PFE: 0
```

```

RED-dropped packets : 0 0 pps
RED-dropped bytes : 0 0 bps
PFE: 1
RED-dropped packets : 0 0 pps
RED-dropped bytes : 0 0 bps
PFE: 2
RED-dropped packets : 0 0 pps
RED-dropped bytes : 0 0 bps
PFE: 3
RED-dropped packets : 0 0 pps
RED-dropped bytes : 0 0 bps

FPC number: 4
PFE: 0
RED-dropped packets : 16338670 1900314 pps
RED-dropped bytes : 1797253700 1672276976 bps
PFE: 1
RED-dropped packets : 0 0 pps
RED-dropped bytes : 0 0 bps
PFE: 2
RED-dropped packets : 0 0 pps
RED-dropped bytes : 0 0 bps
PFE: 3
RED-dropped packets : 0 0 pps
RED-dropped bytes : 0 0 bps

FPC number: 6
PFE: 0
RED-dropped packets : 16338698 1899163 pps
RED-dropped bytes : 1797256780 1671263512 bps
PFE: 1
RED-dropped packets : 0 0 pps
RED-dropped bytes : 0 0 bps
PFE: 2
RED-dropped packets : 0 0 pps
RED-dropped bytes : 0 0 bps
PFE: 3
RED-dropped packets : 0 0 pps
RED-dropped bytes : 0 0 bps
PFE: 4
RED-dropped packets : 0 0 pps
RED-dropped bytes : 0 0 bps
PFE: 5
RED-dropped packets : 0 0 pps
RED-dropped bytes : 0 0 bps
PFE: 6
RED-dropped packets : 0 0 pps
RED-dropped bytes : 0 0 bps
PFE: 7
RED-dropped packets : 0 0 pps
RED-dropped bytes : 0 0 bps

FPC number: 7
PFE: 0
RED-dropped packets : 0 0 pps
RED-dropped bytes : 0 0 bps
PFE: 1
RED-dropped packets : 0 0 pps
RED-dropped bytes : 0 0 bps
PFE: 2
RED-dropped packets : 0 0 pps

```

```

RED-dropped bytes      :                0                0 bps
PFE: 3
RED-dropped packets    :                0                0 pps
RED-dropped bytes      :                0                0 bps

```

### show interfaces voq (For a Specific Physical Interface) (QFX10000 Switches)

The sample output below shows congestion on ingress PFE 1 on FPC number 0, and on ingress PFE 2 on FPC number 1, as denoted by the count of RED-dropped packets and RED-dropped bytes for best-effort egress queue 0.

```

user@host> show interfaces voq et-1/0/0
Physical interface: et-1/0/0, Enabled, Physical link is Up
  Interface index: 659, SNMP ifIndex: 539

Queue: 0, Forwarding classes: best-effort

  FPC number: 0
    PFE: 0
      RED-dropped packets :                0                0 pps
      RED-dropped bytes   :                0                0 bps
    PFE: 1
      RED-dropped packets :          411063248          16891870 pps
      RED-dropped bytes   :        52616095744        17297275600 bps
    PFE: 2
      RED-dropped packets :                0                0 pps
      RED-dropped bytes   :                0                0 bps

  FPC number: 1
    PFE: 0
      RED-dropped packets :                0                0 pps
      RED-dropped bytes   :                0                0 bps
    PFE: 1
      RED-dropped packets :                0                0 pps
      RED-dropped bytes   :                0                0 bps
    PFE: 2
      RED-dropped packets :          411063012          16891870 pps
      RED-dropped bytes   :        52616065536        17297275376 bps

Queue: 3, Forwarding classes: fcoe

  FPC number: 0
    PFE: 0
      RED-dropped packets :                0                0 pps
      RED-dropped bytes   :                0                0 bps
    PFE: 1
      RED-dropped packets :                0                0 pps
      RED-dropped bytes   :                0                0 bps
    PFE: 2
      RED-dropped packets :                0                0 pps
      RED-dropped bytes   :                0                0 bps

  FPC number: 1
    PFE: 0
      RED-dropped packets :                0                0 pps
      RED-dropped bytes   :                0                0 bps
    PFE: 1
      RED-dropped packets :                0                0 pps
      RED-dropped bytes   :                0                0 bps
    PFE: 2
      RED-dropped packets :                0                0 pps

```



```

        RED-dropped bytes      :                0                0 bps
Queue: 4, Forwarding classes: no-loss

FPC number: 0
PFE: 0
    RED-dropped packets :                0                0 pps
    RED-dropped bytes   :                0                0 bps
PFE: 1
    RED-dropped packets :                0                0 pps
    RED-dropped bytes   :                0                0 bps
PFE: 2
    RED-dropped packets :                0                0 pps
    RED-dropped bytes   :                0                0 bps

FPC number: 1
PFE: 0
    RED-dropped packets :                0                0 pps
    RED-dropped bytes   :                0                0 bps
PFE: 1
    RED-dropped packets :                0                0 pps
    RED-dropped bytes   :                0                0 bps
PFE: 2
    RED-dropped packets :                0                0 pps
    RED-dropped bytes   :                0                0 bps

Queue: 7, Forwarding classes: network-control

FPC number: 0
PFE: 0
    RED-dropped packets :                0                0 pps
    RED-dropped bytes   :                0                0 bps
PFE: 1
    RED-dropped packets :                0                0 pps
    RED-dropped bytes   :                0                0 bps
PFE: 2
    RED-dropped packets :                0                0 pps
    RED-dropped bytes   :                0                0 bps

FPC number: 1
PFE: 0
    RED-dropped packets :                0                0 pps
    RED-dropped bytes   :                0                0 bps
PFE: 1
    RED-dropped packets :                0                0 pps
    RED-dropped bytes   :                0                0 bps
PFE: 2
    RED-dropped packets :                0                0 pps
    RED-dropped bytes   :                0                0 bps

```

#### show interfaces voq et-7/0/0 (For a Specific Forwarding Class)

```

user@host> show interfaces voq et-7/0/0 forwarding-class best-effort
Physical interface: et-7/0/0, Enabled, Physical link is Up
Interface index: 155, SNMP ifIndex: 699

Queue: 0, Forwarding classes: best-effort

FPC number: 1
PFE: 0
    RED-dropped packets :                0                0 pps

```

```

    RED-dropped bytes      :                0                0 bps
PFE: 1
    RED-dropped packets    :                0                0 pps
    RED-dropped bytes      :                0                0 bps
PFE: 2
    RED-dropped packets    :                0                0 pps
    RED-dropped bytes      :                0                0 bps
PFE: 3
    RED-dropped packets    :                0                0 pps
    RED-dropped bytes      :                0                0 bps

FPC number: 4
PFE: 0
    RED-dropped packets    :          66604786          2321519 pps
    RED-dropped bytes      :          7326526460          2042936776 bps
PFE: 1
    RED-dropped packets    :                0                0 pps
    RED-dropped bytes      :                0                0 bps
PFE: 2
    RED-dropped packets    :                0                0 pps
    RED-dropped bytes      :                0                0 bps
PFE: 3
    RED-dropped packets    :                0                0 pps
    RED-dropped bytes      :                0                0 bps

FPC number: 6
PFE: 0
    RED-dropped packets    :          66604794          371200 pps
    RED-dropped bytes      :          7326527340          326656000 bps
PFE: 1
    RED-dropped packets    :                0                0 pps
    RED-dropped bytes      :                0                0 bps
PFE: 2
    RED-dropped packets    :                0                0 pps
    RED-dropped bytes      :                0                0 bps
PFE: 3
    RED-dropped packets    :                0                0 pps
    RED-dropped bytes      :                0                0 bps
PFE: 4
    RED-dropped packets    :                0                0 pps
    RED-dropped bytes      :                0                0 bps
PFE: 5
    RED-dropped packets    :                0                0 pps
    RED-dropped bytes      :                0                0 bps
PFE: 6
    RED-dropped packets    :                0                0 pps
    RED-dropped bytes      :                0                0 bps
PFE: 7
    RED-dropped packets    :                0                0 pps
    RED-dropped bytes      :                0                0 bps

FPC number: 7
PFE: 0
    RED-dropped packets    :                0                0 pps
    RED-dropped bytes      :                0                0 bps
PFE: 1
    RED-dropped packets    :                0                0 pps
    RED-dropped bytes      :                0                0 bps
PFE: 2
    RED-dropped packets    :                0                0 pps
    RED-dropped bytes      :                0                0 bps

```

```

PFE: 3
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps

```

### show interfaces voq et-5/0/12 (For a Specific Source FPC)

```
user@host> show interfaces voq et-5/0/12 source-fpc 0
```

```
Physical interface: et-5/0/12, Enabled, Physical link is Up
Interface index: 166, SNMP ifIndex: 1104
```

```
Queue: 0, Forwarding classes: best-effort
```

```
FPC number: 0
```

```

PFE: 0
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps
PFE: 1
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps
PFE: 2
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps
PFE: 3
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps

```

```
Queue: 1, Forwarding classes: expedited-forwarding
```

```
FPC number: 0
```

```

PFE: 0
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps
PFE: 1
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps
PFE: 2
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps
PFE: 3
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps

```

```
Queue: 2, Forwarding classes: assured-forwarding
```

```
FPC number: 0
```

```

PFE: 0
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps
PFE: 1
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps
PFE: 2
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps
PFE: 3
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps

```

```
Queue: 3, Forwarding classes: network-control
```

```
FPC number: 0
```

```

PFE: 0
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps
PFE: 1
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps
PFE: 2
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps
PFE: 3
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps

```

### show interfaces voq et-5/0/12 (For a Specific Forwarding Class and Source FPC)

```

user@host> show interfaces voq et-5/0/12 forwarding-class best-effort source-fpc 5
Physical interface: et-5/0/12, Enabled, Physical link is Up
Interface index: 166, SNMP ifIndex: 1104

```

Queue: 0, Forwarding classes: best-effort

```

FPC number: 5
PFE: 0
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps
PFE: 1
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps
PFE: 2
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps
PFE: 3
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps
PFE: 4
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps
PFE: 5
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps
PFE: 6
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps
PFE: 7
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps

```

### show interfaces voq et-7/0/0 (Non-Zero)

```

user@host> show interfaces voq et-7/0/0 non-zero

```

```

Physical interface: et-7/0/0, Enabled, Physical link is Up
Interface index: 155, SNMP ifIndex: 699

```

Queue: 0, Forwarding classes: best-effort

```

FPC number: 4
PFE: 0
  RED-dropped packets : 95862238 2301586 pps
  RED-dropped bytes   : 10544846180 2025396264 bps

```

```

FPC number: 6
PFE: 0
  RED-dropped packets :          95866639          2322569 pps
  RED-dropped bytes   :          10545330290        2043860728 bps

```

Queue: 3, Forwarding classes: network-control

```

FPC number: 4
PFE: 0
  RED-dropped packets :          78433066          1899727 pps
  RED-dropped bytes   :          8627637260        1671760384 bps

```

```

FPC number: 6
PFE: 0
  RED-dropped packets :          78436704          1900628 pps
  RED-dropped bytes   :          8628037440        1672553432 bps

```

### show interfaces voq et-7/0/0 (For a Specific Forwarding Class and Non-Zero)

```

user@host show interfaces voq et-7/0/0 forwarding-class best-effort non-zero
Physical interface: et-7/0/0, Enabled, Physical link is Up
Interface index: 155, SNMP ifIndex: 699

```

Queue: 0, Forwarding classes: best-effort

```

FPC number: 4
PFE: 0
  RED-dropped packets :          119540012          2322319 pps
  RED-dropped bytes   :          13149401320        2043640784 bps

```

```

FPC number: 6
PFE: 0
  RED-dropped packets :          119540049          2322988 pps
  RED-dropped bytes   :          13149405390        2044229744 bps

```



## CHAPTER 8

# Operational Commands (Classifiers and Rewrite Rules)

- [Monitoring CoS Classifiers on page 267](#)
- [Monitoring CoS Forwarding Classes on page 268](#)
- [Monitoring CoS Rewrite Rules on page 271](#)
- [Monitoring CoS Code-Point Value Aliases on page 272](#)
- [show class-of-service classifier](#)
- [show class-of-service code-point-aliases](#)
- [show class-of-service forwarding-class](#)
- [show class-of-service forwarding-table](#)
- [show class-of-service forwarding-table classifier](#)
- [show class-of-service forwarding-table classifier mapping](#)
- [show class-of-service forwarding-table rewrite-rule](#)
- [show class-of-service forwarding-table rewrite-rule mapping](#)
- [show class-of-service interface](#)
- [show class-of-service rewrite-rule](#)

## Monitoring CoS Classifiers

---

**Supported Platforms** [EX4600, OCX1100, QFabric System, QFX Series standalone switches](#)

**Purpose** Display the mapping of incoming CoS values to forwarding class and loss priority for each classifier.

**Action** To monitor CoS classifiers in the CLI, enter the CLI command:

```
user@switch> show class-of-service classifier
```

To monitor a particular classifier in the CLI, enter the CLI command:

```
user@switch> show class-of-service classifier name classifier-name
```

To monitor a particular type of classifier in the CLI, enter the CLI command:

```
user@switch> show class-of-service classifier type classifier-type
```

**Meaning** Table 55 on page 268 summarizes key output fields for CoS classifiers.

**Table 55: Summary of Key CoS Classifier Output Fields**

Field	Values
Classifier	Name of a classifier.
Code point type	<p>Type of classifier:</p> <ul style="list-style-type: none"> <li>• <b>dscp</b>—All classifiers of the DSCP type.</li> <li>• <b>ieee-802.1</b>—All classifiers of the IEEE 802.1 type.</li> <li>• <b>ieee-mcast</b>—All classifiers of the IEEE 802.1 multicast type.</li> </ul> <p><b>NOTE:</b> QFX10000 switches do not use different classifiers for unicast and multideestination (multicast, broadcast, destination lookup fail) traffic, so multicast-specific classifiers are not supported.</p> <ul style="list-style-type: none"> <li>• <b>exp</b>—All classifiers of the MPLS exp type.</li> </ul> <p><b>NOTE:</b> OCX Series switches do not support MPLS.</p>
Index	Internal index of the classifier.
Code point	DSCP or IEEE 802.1 code point value of the incoming packets, in bits. These values are used for classification.
Forwarding Class	Name of the forwarding class that the classifier assigns to an incoming packet. This class affects the forwarding and scheduling policies that are applied to the packet as it transits the switch.
Loss Priority	Loss priority value that the classifier assigns to the incoming packet based on its code point value.

## Monitoring CoS Forwarding Classes

**Supported Platforms** EX4600, OCX1100, QFabric System, QFX Series standalone switches

**Purpose** Use the monitoring functionality to view the current assignment of CoS forwarding classes to queue numbers on the system.

**Action** To monitor CoS forwarding classes in the CLI, enter the following CLI command:

```
user@switch> show class-of-service forwarding-class
```

**Meaning** Some switches use different forwarding classes, output queues, and classifiers for unicast and multideestination (multicast, broadcast, destination lookup fail) traffic. These switches support 12 forwarding classes and output queues, eight for unicast traffic and four for multideestination traffic.



Some switches use the same forwarding classes, output queues, and classifiers for unicast and multdestination traffic. These switches support eight forwarding classes and eight output queues.

[Table 56 on page 269](#) summarizes key output fields on switches that use different forwarding classes and output queues for unicast and multdestination traffic.

**Table 56: Summary of Key CoS Forwarding Class Output Fields on Switches that Separate Unicast and Multidestination Traffic**

Field	Values
Forwarding Class	<p>Names of forwarding classes assigned to queue numbers. By default, the following unicast forwarding classes are assigned to queues 0, 3, 4, and 7, respectively:</p> <ul style="list-style-type: none"> <li>• <b>best-effort</b>—Provides no special CoS handling of packets. Loss priority is typically not carried in a CoS value.</li> <li>• <b>fcoe</b>—Provides guaranteed delivery for Fibre Channel over Ethernet (FCoE) traffic.</li> <li>• <b>no-loss</b>—Provides guaranteed delivery for TCP lossless traffic</li> <li>• <b>network-control</b>—Packets can be delayed but not dropped.</li> </ul> <p>By default, the following multdestination forwarding class is assigned to queue 8:</p> <ul style="list-style-type: none"> <li>• <b>mcast</b>—Provides no special CoS handling of packets.</li> </ul>
Queue	<p>Queue number corresponding to (mapped to) the forwarding class name.</p> <p>By default, four queues (0, 3, 4, and 7) are assigned to unicast forwarding classes and one queue (8) is assigned to a multdestination forwarding class:</p> <ul style="list-style-type: none"> <li>• Queue 0—<b>best-effort</b></li> <li>• Queue 3—<b>fcoe</b></li> <li>• Queue 4—<b>no-loss</b></li> <li>• Queue 7—<b>network-control</b></li> <li>• Queue 8—<b>mcast</b></li> </ul>

**Table 56: Summary of Key CoS Forwarding Class Output Fields on Switches that Separate Unicast and Multidestination Traffic (*continued*)**

Field	Values
No-Loss	<p>Packet drop attribute associated with each forwarding class:</p> <ul style="list-style-type: none"> <li>Disabled—The forwarding class is configured for lossy transport (packets might drop during periods of congestion)</li> <li>Enabled—The forwarding class is configured for lossless transport</li> </ul> <p><b>NOTE:</b> To achieve lossless transport, you must ensure that priority-based flow control (PFC) and DCBX are properly configured on the lossless priority (IEEE 802.1p code point), and that sufficient port bandwidth is reserved for the lossless traffic flows.</p> <p>OCX Series switches do not support lossless transport.</p>



**NOTE:** OCX Series switches do not support the default lossless forwarding classes `fcoe` and `no-loss`, and do not support the no-loss packet drop attribute used to configure lossless forwarding classes. On OCX Series switches, do not map traffic to the default `fcoe` and `no-loss` forwarding classes (both of these default forwarding classes carry the no-loss packet drop attribute), and do not configure the no-loss packet drop attribute on forwarding classes.

Table 57 on page 270 summarizes key output fields on switches that use the same forwarding classes and output queues for unicast and multidestination traffic.

**Table 57: Summary of Key CoS Forwarding Class Output Fields on Switches That Do Not Separate Unicast and Multidestination Traffic**

Field	Values
Forwarding Class	<p>Names of forwarding classes assigned to queue numbers. By default, the following forwarding classes are assigned to queues 0, 3, 4, and 7, respectively:</p> <ul style="list-style-type: none"> <li><b>best-effort</b>—Provides no special CoS handling of packets. Loss priority is typically not carried in a CoS value.</li> <li><b>fcoe</b>—Provides guaranteed delivery for Fibre Channel over Ethernet (FCoE) traffic.</li> <li><b>no-loss</b>—Provides guaranteed delivery for TCP lossless traffic</li> <li><b>network-control</b>—Packets can be delayed but not dropped.</li> </ul>

**Table 57: Summary of Key CoS Forwarding Class Output Fields on Switches That Do Not Separate Unicast and Multidestination Traffic (*continued*)**

Field	Values
Queue	<p>Queue number corresponding to (mapped to) the forwarding class name.</p> <p>By default, four queues (0, 3, 4, and 7) are assigned to forwarding classes:</p> <ul style="list-style-type: none"> <li>• Queue 0—<b>best-effort</b></li> <li>• Queue 3—<b>fcoe</b></li> <li>• Queue 4—<b>no-loss</b></li> <li>• Queue 7—<b>network-control</b></li> </ul>
No-Loss	<p>Packet drop attribute associated with each forwarding class:</p> <ul style="list-style-type: none"> <li>• Disabled—The forwarding class is configured for lossy transport (packets might drop during periods of congestion).</li> <li>• Enabled—The forwarding class is configured for lossless transport.</li> </ul> <p><b>NOTE:</b> To achieve lossless transport, you must ensure that priority-based flow control (PFC) and DCBX are properly configured on the lossless priority (IEEE 802.1p code point), and that sufficient port bandwidth is reserved for the lossless traffic flows.</p> <p>OCX Series switches do not support lossless transport.</p>

## Monitoring CoS Rewrite Rules

**Supported Platforms** EX4600, OCX1100, QFabric System, QFX Series standalone switches

**Purpose** Use the monitoring functionality to display information about CoS value rewrite rules, which are based on the forwarding class and loss priority.

**Action** To monitor CoS rewrite rules in the CLI, enter the CLI command:

```
user@switch> show class-of-service rewrite-rule
```

To monitor a particular rewrite rule in the CLI, enter the CLI command:

```
user@switch> show class-of-service rewrite-rule name rewrite-rule-name
```

To monitor a particular type of rewrite rule (for example, DSCP, DSCP IPv6, IEEE-802.1, or MPLS EXP) in the CLI, enter the CLI command:

```
user@switch> show class-of-service rewrite-rule type rewrite-rule-type
```

**Meaning** [Table 58 on page 272](#) summarizes key output fields for CoS rewrite rules.

**Table 58: Summary of Key CoS Rewrite Rule Output Fields**

Field	Values
Rewrite rule	Name of the rewrite rule.
Code point type	Rewrite rule type: <ul style="list-style-type: none"> <li>• <b>dscp</b>—For IPv4 DiffServ traffic.</li> <li>• <b>dscp-ipv6</b>—For IPv6 Diffserv traffic.</li> <li>• <b>ieee-802.1</b>—For Layer 2 traffic.</li> <li>• <b>exp</b>—For MPLS traffic.</li> </ul> <p><b>NOTE:</b> OCX Series switches do not support MPLS.</p>
Index	Internal index for the rewrite rule.
Forwarding class	Name of the forwarding class that is used to determine CoS values for rewriting in combination with loss priority.  Rewrite rules are applied to CoS values in outgoing packets based on forwarding class and loss priority setting.
Loss priority	Level of loss priority that is used to determine CoS values for rewriting in combination with forwarding class.
Code point	Rewrite code point value.

**Related Documentation** • [Defining CoS Rewrite Rules on page 77](#)

## Monitoring CoS Code-Point Value Aliases

**Supported Platforms** [EX4600, OCX1100, QFabric System, QFX Series standalone switches](#)

**Purpose** Use the monitoring functionality to display information about the CoS code-point value aliases that the system is currently using to represent DSCP and IEEE 802.1p code point bits.

**Action** To monitor CoS value aliases in the CLI, enter the CLI command:

```
user@switch> show class-of-service code-point-aliases
```

To monitor a specific type of code-point alias (DSCP, DSCP IPv6, IEEE 802.1, or MPLS EXP) in the CLI, enter the CLI command:

```
user@switch> show class-of-service code-point-aliases ieee-802.1
```

**Meaning** [Table 59 on page 273](#) summarizes key output fields for CoS value aliases.

Table 59: Summary of Key CoS Value Alias Output Fields

Field	Values
Code point type	Type of the CoS value: <ul style="list-style-type: none"><li>• <b>dscp</b>—Examines Layer 3 packet headers for IP packet classification.</li><li>• <b>dscp-ipv6</b>—Examines Layer 3 packet headers for IPv6 packet classification.</li><li>• <b>ieee-802.1</b>—Examines Layer 2 packet headers for packet classification.</li><li>• <b>exp</b>—Examines MPLS packet headers for packet classification.</li></ul> <p><b>NOTE:</b> OCX Series switches do not support MPLS.</p>
Alias	Name given to a set of bits—for example, <b>af11</b> is a name for bits <b>001010</b> .
Bit pattern	Set of bits associated with the alias.

**Related Documentation** • [Defining CoS Code-Point Aliases on page 67](#)

## show class-of-service classifier

**Supported Platforms** [EX Series](#), [M Series](#), [MX Series](#), [OCX1100](#), [PTX Series](#), [QFabric System](#), [QFX Series standalone switches](#), [T Series](#)

**Syntax** `show class-of-service classifier`  
`<name name>`  
`<type dscp | type dscp-ipv6 | type exp | type ieee-802.1 | type inet-precedence>`

**Release Information** Command introduced before Junos OS Release 7.4.  
 Command introduced in Junos OS Release 9.0 for EX Series switches.  
 Command introduced in Junos OS Release 11.1 for the QFX Series.  
 Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

**Description** For each class-of-service (CoS) classifier, display the mapping of code point value to forwarding class and loss priority.

**Options** `none`—Display all classifiers.

`name name`—(Optional) Display named classifier.

`type dscp`—(Optional) Display all classifiers of the Differentiated Services code point (DSCP) type.

`type dscp-ipv6`—(Optional) Display all classifiers of the DSCP for IPv6 type.

`type exp`—(Optional) Display all classifiers of the MPLS experimental (EXP) type.

`type ieee-802.1`—(Optional) Display all classifiers of the ieee-802.1 type.

`type inet-precedence`—(Optional) Display all classifiers of the inet-precedence type.

**Required Privilege Level** view

**List of Sample Output** [show class-of-service classifier type ieee-802.1 on page 275](#)  
[show class-of-service classifier type ieee-802.1 \(QFX Series\) on page 275](#)

**Output Fields** [Table 60 on page 274](#) describes the output fields for the `show class-of-service classifier` command. Output fields are listed in the approximate order in which they appear.

**Table 60: show class-of-service classifier Output Fields**

Field Name	Field Description
Classifier	Name of the classifier.
Code point type	Type of the classifier: <code>exp</code> (not on EX Series switch), <code>dscp</code> , <code>dscp-ipv6</code> (not on EX Series switch), <code>ieee-802.1</code> , or <code>inet-precedence</code> .
Index	Internal index of the classifier.
Code point	Code point value used for classification

Table 60: show class-of-service classifier Output Fields (*continued*)

Field Name	Field Description
<b>Forwarding class</b>	Classification of a packet affecting the forwarding, scheduling, and marking policies applied as the packet transits the router.
<b>Loss priority</b>	Loss priority value used for classification. For most platforms, the value is <b>high</b> or <b>low</b> . For some platforms, the value is <b>high</b> , <b>medium-high</b> , <b>medium-low</b> , or <b>low</b> .

## Sample Output

### show class-of-service classifier type ieee-802.1

```

user@host> show class-of-service classifier type ieee-802.1
Classifier: ieee802.1-default, Code point type: ieee-802.1, Index: 3
Code Point      Forwarding Class      Loss priority
000             best-effort           low
001             best-effort           high
010             expedited-forwarding  low
011             expedited-forwarding  high
100             assured-forwarding    low
101             assured-forwarding    medium-high
110             network-control       low
111             network-control       high

Classifier: users-ieee802.1, Code point type: ieee-802.1
Code point      Forwarding class      Loss priority
100             expedited-forwarding  low

```

### show class-of-service classifier type ieee-802.1 (QFX Series)

```

user@switch> show class-of-service classifier type ieee-802.1
Classifier: ieee8021p-default, Code point type: ieee-802.1, Index: 11
Code point      Forwarding class      Loss priority
000             best-effort           low
001             best-effort           low
010             best-effort           low
011             fcoe                  low
100             no-loss               low
101             best-effort           low
110             network-control       low
111             network-control       low

Classifier: ieee8021p-untrust, Code point type: ieee-802.1, Index: 16
Code point      Forwarding class      Loss priority
000             best-effort           low
001             best-effort           low
010             best-effort           low
011             best-effort           low
100             best-effort           low
101             best-effort           low
110             best-effort           low
111             best-effort           low

Classifier: ieee-mcast, Code point type: ieee-802.1, Index: 46
Code point      Forwarding class      Loss priority
000             mcast                 low

```

001	mcast	low
010	mcast	low
011	mcast	low
100	mcast	low
101	mcast	low
110	mcast	low
111	mcast	low



## show class-of-service code-point-aliases

**Supported Platforms** [EX Series](#), [M Series](#), [MX Series](#), [PTX Series](#), [QFX Series](#), [T Series](#)

**Syntax** `show class-of-service code-point-aliases`  
`<dscp | dscp-ipv6 | exp | ieee-802.1 | inet-precedence>`

**Release Information** Command introduced before Junos OS Release 7.4.  
 Command introduced in Junos OS Release 9.0 for EX Series switches.  
 Command introduced in Junos OS Release 11.1 for the QFX Series.  
 Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

**Description** Display the mapping of class-of-service (CoS) code point aliases to corresponding bit patterns.

**Options** **none**—Display code point aliases of all code point types.

**dscp**—(Optional) Display Differentiated Services code point (DSCP) aliases.

**dscp-ipv6**—(Optional) Display IPv6 DSCP aliases.

**exp**—(Optional) Display MPLS EXP code point aliases.

**ieee-802.1**—(Optional) Display IEEE-802.1 code point aliases.

**inet-precedence**—(Optional) Display IPv4 precedence code point aliases.

**Required Privilege Level** view

**List of Sample Output** [show class-of-service code-point-aliases exp on page 278](#)

**Output Fields** [Table 61 on page 277](#) describes the output fields for the **show class-of-service code-point-aliases** command. Output fields are listed in the approximate order in which they appear.

**Table 61: show class-of-service code-point-aliases Output Fields**

Field Name	Field Description
<b>Code point type</b>	Type of the code points displayed: <b>dscp</b> , <b>dscp-ipv6</b> (not on EX Series switch), <b>exp</b> (not on EX Series switch or the QFX Series), <b>ieee-802.1</b> , or <b>inet-precedence</b> (not on the QFX Series).
<b>Alias</b>	Alias for a bit pattern.
<b>Bit pattern</b>	Bit pattern for which the alias is displayed.

## Sample Output

### show class-of-service code-point-aliases exp

```
user@host> show class-of-service code-point-aliases exp
Code point type: exp
  Alias      Bit pattern
  af11       100
  af12       101
  be         000
  be1        001
  cs6        110
  cs7        111
  ef         010
  ef1        011
  nc1        110
  nc2        111
```

## show class-of-service forwarding-class

<b>Supported Platforms</b>	EX Series, OCX1100, QFabric System, QFX Series standalone switches
<b>Syntax</b>	show class-of-service forwarding-class
<b>Release Information</b>	Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Display information about forwarding classes, including the mapping of forwarding classes to queue numbers.
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>Monitoring CoS Forwarding Classes</li> <li>Monitoring CoS Forwarding Classes on page 268</li> </ul>

**List of Sample Output** [show class-of-service forwarding-class on page 280](#)  
[show class-of-service forwarding-class \(EX8200 Switch\) on page 280](#)  
[show class-of-service forwarding-class \(QFX Series\) on page 280](#)

**Output Fields** Table 62 on page 279 describes the output fields for the **show class-of-service forwarding-class** command. Output fields are listed in the approximate order in which they appear.

**Table 62: show class-of-service forwarding-class Output Fields**

Field Name	Field Description
<b>Forwarding class</b>	Name of the forwarding class.
<b>ID</b>	Forwarding class identifier.
<b>Queue</b>	CoS output queue mapped to the forwarding class.
<b>Policing priority</b>	Not supported on EX Series switches or the QFX Series and can be ignored.
<b>Fabric priority</b>	(EX8200 switches only) Fabric priority for the forwarding class, either <b>high</b> or <b>low</b> . Determines the priority of packets entering the switch fabric.
<b>No-Loss</b>	(QFX Series only) Packet loss attribute to differentiate lossless forwarding classes from lossy forwarding classes: <ul style="list-style-type: none"> <li>Disabled—Lossless transport is not configured on the forwarding class (packet drop attribute is <b>drop</b>).</li> <li>Enabled—Lossless transport is configured on the forwarding class (packet drop attribute is <b>no-loss</b>).</li> </ul>

## Sample Output

### show class-of-service forwarding-class

```
user@switch> show class-of-service forwarding-class
Forwarding class      ID      Queue Policing priority
best-effort           0        0      normal
expedited-forwarding  1        5      normal
assured-forwarding    2        1      normal
network-control       3        7      normal
```

## Sample Output

### show class-of-service forwarding-class (EX8200 Switch)

```
user@switch> show class-of-service forwarding-class
Forwarding class      ID      Queue Fabric priority
best-effort           0        0      low
expedited-forwarding  1        5      low
assured-forwarding    2        1      low
network-control       3        7      low
mcast-be              4        2      low
mcast-ef              5        4      low
mcast-af              6        6      low
```

## Sample Output

### show class-of-service forwarding-class (QFX Series)

```
user@switch> show class-of-service forwarding-class
Forwarding class      ID      Queue Policing priority No-Loss
best-effort           0        0      normal      Disabled
fcoe                  1        3      normal      Enabled
no-loss               2        4      normal      Enabled
network-control       3        7      normal      Disabled
mcast                 8        8      normal      Disabled
```

On switches that do not use different forwarding classes and output queues for unicast and multidestination (multicast, broadcast, destination lookup fail) traffic, there is no **mcast** forwarding class and there is no queue 8. (Switches that use different forwarding classes and output queues for unicast and multidestination traffic support 12 forwarding classes and output queues, of which four of each are dedicated to multidestination traffic. Switches that use the same forwarding classes and output queues for unicast and multidestination traffic support eight forwarding classes and eight output queues.)

## show class-of-service forwarding-table

<b>Supported Platforms</b>	EX Series, M Series, MX Series, OCX1100, PTX Series, QFabric System, QFX Series standalone switches, T Series
<b>List of Syntax</b>	<a href="#">Syntax on page 281</a> <a href="#">Syntax (TX Matrix and TX Matrix Plus Router) on page 281</a>
<b>Syntax</b>	show class-of-service forwarding-table
<b>Syntax (TX Matrix and TX Matrix Plus Router)</b>	show class-of-service forwarding-table <lcc number>   <sfc number>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Display the entire class-of-service (CoS) configuration as it exists in the forwarding table. Executing this command is equivalent to executing all <b>show class-of-service forwarding-table</b> commands in succession.
<b>Options</b>	<p><b>lcc number</b>—(TX Matrix and TX Matrix Plus router only) (Optional) On a TX Matrix router, display the forwarding table configuration for a specific T640 router (or line-card chassis) configured in a routing matrix. On a TX Matrix Plus router, display the forwarding table configuration for a specific router (or line-card chassis) configured in the routing matrix.</p> <p>Replace <i>number</i> with the following values depending on the LCC configuration:</p> <ul style="list-style-type: none"> <li>• 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.</li> <li>• 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.</li> <li>• 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.</li> <li>• 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.</li> </ul> <p><b>sfc number</b>—(TX Matrix Plus routers only) (Optional) Display the forwarding table configuration for the TX Matrix Plus router. Replace <i>number</i> with 0.</p>
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show class-of-service forwarding-table on page 282</a> <a href="#">show class-of-service forwarding-table lcc (TX Matrix Plus Router) on page 283</a>
<b>Output Fields</b>	See the output field descriptions for <b>show class-of-service forwarding-table</b> commands:

- [show class-of-service forwarding-table classifier](#)
- [show class-of-service forwarding-table classifier mapping](#)
- [show class-of-service forwarding-table drop-profile](#)
- [show class-of-service forwarding-table fabric scheduler-map](#)
- [show class-of-service forwarding-table rewrite-rule](#)
- [show class-of-service forwarding-table rewrite-rule mapping](#)
- [show class-of-service forwarding-table scheduler-map](#)

## Sample Output

### show class-of-service forwarding-table

```

user@host> show class-of-service forwarding-table
Classifier table index: 9, # entries: 8, Table type: EXP
Entry #   Code point   Forwarding-class #   PLP
0         000           0                   0
1         001           0                   1
2         010           1                   0
3         011           1                   1
4         100           2                   0
5         101           2                   1
6         110           3                   0
7         111           3                   1

Interface      Index      Table Index/      Q num      Table type
sp-0/0/0.1001   66         11                11         IPv4 precedence
sp-0/0/0.2001   67         11                11         IPv4 precedence
sp-0/0/0.16383  68         11                11         IPv4 precedence
fe-0/0/0.0      69         11                11         IPv4 precedence

Interface: sp-0/0/0 (Index: 129, Map index: 2, Map type: FINAL,
Num of queues: 2):
  Entry 0 (Scheduler index: 16, Forwarding-class #: 0):
    Tx rate: 0 Kb (95%), Buffer size: 95 percent
  Priority low
    PLP high: 1, PLP low: 1, PLP medium-high: 1, PLP medium-low: 1
  Entry 1 (Scheduler index: 18, Forwarding-class #: 3):
    Tx rate: 0 Kb (5%), Buffer size: 5 percent
  Priority low
    PLP high: 1, PLP low: 1, PLP medium-high: 1, PLP medium-low: 1

Interface: fe-0/0/0 (Index: 137, Map index: 2, Map type: FINAL,
Num of queues: 2):
  Entry 0 (Scheduler index: 16, Forwarding-class #: 0):
    Tx rate: 0 Kb (95%), Buffer size: 95 percent
  Priority low
    PLP high: 1, PLP low: 1, PLP medium-high: 1, PLP medium-low: 1
  Entry 1 (Scheduler index: 18, Forwarding-class #: 3):
    Tx rate: 0 Kb (5%), Buffer size: 5 percent
  Priority low
    PLP high: 1, PLP low: 1, PLP medium-high: 1, PLP medium-low: 1

Interface: fe-0/0/1 (Index: 138, Map index: 2, Map type: FINAL,
Num of queues: 2):
  Entry 0 (Scheduler index: 16, Forwarding-class #: 0):

```

```

    Tx rate: 0 Kb (95%), Buffer size: 95 percent
Priority low
    PLP high: 1, PLP low: 1, PLP medium-high: 1, PLP medium-low: 1
    Entry 1 (Scheduler index: 18, Forwarding-class #: 3):
        Tx rate: 0 Kb (5%), Buffer size: 5 percent
Priority low
    PLP high: 1, PLP low: 1, PLP medium-high: 1, PLP medium-low: 1
...

RED drop profile index: 1, # entries: 1
    Drop
Entry      Fullness(%)  Probability(%)
  0           100           100

```

### show class-of-service forwarding-table lcc (TX Matrix Plus Router)

```

user@host> show class-of-service forwarding-table lcc 0
lcc0-re0:

```

```

-----

Classifier table index: 9, # entries: 64, Table type: IPv6 DSCP
Entry #   Code point   Forwarding-class #   PLP
  0         000000         0         0
  1         000001         0         0
  2         000010         0         0
  3         000011         0         0
  4         000100         0         0
  5         000101         0         0
  6         000110         0         0
  7         000111         0         0
  8         001000         0         0
  9         001001         0         0
 10         001010         0         0
 11         001011         0         0
 12         001100         0         0
 13         001101         0         0
 14         001110         0         0
 15         001111         0         0
 16         010000         0         0
 17         010001         0         0
 18         010010         0         0
 19         010011         0         0
 20         010100         0         0
 21         010101         0         0
 22         010110         0         0
 23         010111         0         0
 24         011000         0         0
 25         011001         0         0
 26         011010         0         0
 27         011011         0         0
 28         011100         0         0
 29         011101         0         0
 30         011110         0         0
 31         011111         0         0
 32         100000         0         0
 33         100001         0         0
 34         100010         0         0
 35         100011         0         0
 36         100100         0         0
 37         100101         0         0

```

38	100110	0	0
39	100111	0	0
40	101000	0	0
41	101001	0	0
42	101010	0	0
43	101011	0	0
44	101100	0	0
45	101101	0	0
46	101110	0	0
...			



## show class-of-service forwarding-table classifier

<b>Supported Platforms</b>	EX Series, M Series, MX Series, OCX1100, PTX Series, QFabric System, QFX Series standalone switches, T Series
<b>Syntax</b>	show class-of-service forwarding-table classifier
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Display the mapping of code point value to queue number and loss priority for each classifier as it exists in the forwarding table.
<b>Options</b>	This command has no options.
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show class-of-service forwarding-table classifier on page 286</a>
<b>Output Fields</b>	<a href="#">Table 63 on page 285</a> describes the output fields for the <b>show class-of-service forwarding-table classifier</b> command. Output fields are listed in the approximate order in which they appear.

**Table 63: show class-of-service forwarding-table classifier Output Fields**

Field Name	Field Description
Classifier table index	Index of the classifier table.
entries	Total number of entries.
Table type	Type of code points in the table: <b>DSCP</b> , <b>EXP</b> (not on the QFX Series), <b>IEEE 802.1</b> , <b>IPv4 precedence</b> (not on the QFX Series), or <b>IPv6 DSCP</b> .
Entry #	Entry number.
Code point	Code point value used for classification.
Forwarding-class #	Forwarding class to which the code point is assigned.
PLP	Packet loss priority value set by classification. For most platforms, the value can be 0 or 1. For some platforms, the value is 0, 1, 2, or 3. The value 0 represents low PLP. The value 1 represents high PLP. The value 2 represents medium-low PLP. The value 3 represents medium-high PLP.

## Sample Output

### show class-of-service forwarding-table classifier

```
user@host> show class-of-service forwarding-table classifier
Classifier table index: 62436, # entries: 64, Table type: DSCP
```

Entry #	Code point	Forwarding-class #	PLP
0	000000	0	0
1	000001	0	0
2	000010	0	0
3	000011	0	0
4	000100	0	0
5	000101	0	0
6	000110	0	0
7	000111	0	0
8	001000	0	0
9	001001	0	0
10	001010	1	1
11	001011	0	0
...			
60	111100	0	0
61	111101	0	0
62	111110	0	0
63	111111	0	0

## show class-of-service forwarding-table classifier mapping

<b>Supported Platforms</b>	EX Series, M Series, MX Series, OCX1100, PTX Series, QFabric System, QFX Series standalone switches, T Series
<b>Syntax</b>	show class-of-service forwarding-table classifier mapping
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	For each logical interface, display either the table index of the classifier for a given code point type or the queue number (if it is a fixed classification) in the forwarding table.
<b>Options</b>	This command has no options.
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show class-of-service forwarding-table classifier mapping on page 287</a>
<b>Output Fields</b>	<a href="#">Table 64 on page 287</a> describes the output fields for the <b>show class-of-service forwarding-table classifier mapping</b> command. Output fields are listed in the approximate order in which they appear.

**Table 64: show class-of-service forwarding-table classifier mapping Output Fields**

Field Name	Field Description
<b>Table index/ Q num</b>	If the table type is <b>Fixed</b> , the number of the queue to which the interface is mapped. For all other types, this value is the classifier index number.
<b>Interface</b>	Name of the logical interface. This field can also show the physical interface (QFX Series).
<b>Index</b>	Logical interface index.
<b>Table type</b>	Type of code points in the table: <b>DSCP</b> , <b>EXP</b> (not on the QFX Series), <b>Fixed</b> , <b>IEEE 802.1</b> , <b>IPv4 precedence</b> (not on the QFX Series), or <b>IPv6 DSCP</b> .

## Sample Output

### show class-of-service forwarding-table classifier mapping

```

user@host> show class-of-service forwarding-table classifier mapping
          Table index/
Interface  Index  Q num  Table type
so-5/0/0.0   10   62436   DSCP
so-0/1/0.0   11   62436   DSCP
so-0/2/0.0   12     1   Fixed

```

so-0/2/1.0	13	62436	DSCP
so-0/2/1.0	13	62437	IEEE 802.1
so-0/2/2.0	14	62436	DSCP
so-0/2/2.0	14	62438	IPv4 precedence

## show class-of-service forwarding-table rewrite-rule

<b>Supported Platforms</b>	EX Series, M Series, MX Series, OCX1100, PTX Series, QFabric System, QFX Series standalone switches, T Series
<b>Syntax</b>	show class-of-service forwarding-table rewrite-rule
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Display mapping of queue number and loss priority to code point value for each rewrite rule as it exists in the forwarding table.
<b>Options</b>	This command has no options.
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show class-of-service forwarding-table rewrite-rule on page 289</a>
<b>Output Fields</b>	<a href="#">Table 65 on page 289</a> describes the output fields for the <b>show class-of-service forwarding-table rewrite-rule</b> command. Output fields are listed in the approximate order in which they appear.

**Table 65: show class-of-service forwarding-table rewrite-rule Output Fields**

Field Name	Field Description
Rewrite table index	Index for this rewrite rule.
# entries	Number of entries in this rewrite rule.
Table type	Type of table: <b>DSCP</b> , <b>EXP</b> (not on the QFX Series), <b>EXP-PUSH-3</b> (not on the QFX Series), <b>IEEE 802.1,IPv4 precedence</b> (not on the QFX Series), <b>IPv6 DSCP</b> , or <b>Fixed</b> .
Q#	Queue number to which this entry is assigned.
Low bits	Code point value for low-priority loss profile.
State	State of this code point: <b>enabled</b> , <b>rewritten</b> , or <b>disabled</b> .
High bits	Code point value for high-priority loss profile.

## Sample Output

### show class-of-service forwarding-table rewrite-rule

```
user@host> show class-of-service forwarding-table rewrite-rule
```

Rewrite table index: 3753, # entries: 4, Table type: DSCP

Q#	Low bits	State	High bits	State
0	000111	Enabled	001010	Enabled
2	000000	Disabled	001100	Enabled
1	101110	Enabled	110111	Enabled
3	110000	Enabled	111000	Enabled

## show class-of-service forwarding-table rewrite-rule mapping

<b>Supported Platforms</b>	EX Series, M Series, MX Series, OCX1100, PTX Series, QFabric System, QFX Series standalone switches, T Series
<b>Syntax</b>	show class-of-service forwarding-table rewrite-rule mapping
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	For each logical interface, display the table identifier of the rewrite rule map for each code point type.
<b>Options</b>	This command has no options.
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show class-of-service forwarding-table rewrite-rule mapping on page 291</a>
<b>Output Fields</b>	<a href="#">Table 66 on page 291</a> describes the output fields for the <b>show class-of-service forwarding-table rewrite-rule mapping</b> command. Output fields are listed in the approximate order in which they appear.

**Table 66: show class-of-service forwarding-table rewrite-rule mapping Output Fields**

Field Name	Field Description
<b>Interface</b>	Name of the logical interface. This field can also show the physical interface (QFX Series).
<b>Index</b>	Logical interface index.
<b>Table index</b>	Rewrite table index.
<b>Type</b>	Type of classifier: <b>DSCP</b> , <b>EXP</b> (not on the QFX Series), <b>EXP-PUSH-3</b> (not on the QFX Series), <b>EXP-SWAP-PUSH-2</b> (not on the QFX Series), <b>IEEE 802.1</b> , <b>IPv4 precedence</b> (not on the QFX Series), <b>IPv6 DSCP</b> , or <b>Fixed</b> .

## Sample Output

### show class-of-service forwarding-table rewrite-rule mapping

```

user@host> show class-of-service forwarding-table rewrite-rule mapping
Interface      Index  Table index  Type
so-5/0/0.0     10     3753        DSCP
so-0/1/0.0     11     3753        DSCP
so-0/2/0.0     12     3753        DSCP
so-0/2/1.0     13     3753        DSCP

```

so-0/2/2.0	14	3753	DSCP
so-0/2/3.0	15	3753	DSCP



## show class-of-service interface

**Supported Platforms** ACX Series, EX Series, M Series, MX Series, PTX Series, QFX Series, T Series

**Syntax** show class-of-service interface  
<comprehensive | detail> <interface-name>

**Release Information** Command introduced before Junos OS Release 7.4.  
Command introduced in Junos OS Release 9.0 for EX Series switches.  
Forwarding class map information added in Junos OS Release 9.4.  
Command introduced in Junos OS Release 11.1 for the QFX Series.  
Command introduced in Junos OS Release 12.1 for the PTX Series Packet Transport Switches.  
Command introduced in Junos OS Release 12.2 for the ACX Series Universal Access routers.  
Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.  
Options **detail** and **comprehensive** introduced in Junos OS Release 11.4.  
Command introduced in Junos OS Release 15.1 on MX Series routers for enhanced subscriber management.

**Description** Display the logical and physical interface associations for the classifier, rewrite rules, and scheduler map objects.



**NOTE:** On routing platforms with dual Routing Engines, running this command on the backup Routing Engine, with or without any of the available options, is not supported and produces the following error message:

**error: the class-of-service subsystem is not running**

**Options** **none**—Display CoS associations for all physical and logical interfaces.

**comprehensive**—(M Series, MX Series, and T Series routers) (Optional) Display comprehensive quality-of-service (QoS) information about all physical and logical interfaces.

**detail**—(M Series, MX Series, and T Series routers) (Optional) Display QoS and CoS information based on the interface.

If the **interface** *interface-name* is a physical interface, the output includes:

- Brief QoS information about the physical interface
- Brief QoS information about the logical interface
- CoS information about the physical interface
- Brief information about filters or policers of the logical interface
- Brief CoS information about the logical interface

If the **interface** *interface-name* is a logical interface, the output includes:

- Brief QoS information about the logical interface
- Information about filters or policers for the logical interface
- CoS information about the logical interface

**interface-name**—(Optional) Display class-of-service (CoS) associations for the specified interface.

**none**—Display CoS associations for all physical and logical interfaces.

**Required Privilege Level**

view

**Related Documentation**

- *Verifying and Managing Junos OS Enhanced Subscriber Management*

**List of Sample Output**

[show class-of-service interface \(Physical\) on page 305](#)  
[show class-of-service interface \(Logical\) on page 306](#)  
[show class-of-service interface \(Gigabit Ethernet\) on page 306](#)  
[show class-of-service interface \(ANCP\) on page 306](#)  
[show class-of-service interface \(PPPoE Interface\) on page 306](#)  
[show class-of-service interface \(T4000 Routers with Type 5 FPCs\) on page 306](#)  
[show class-of-service interface detail on page 307](#)  
[show class-of-service interface comprehensive on page 307](#)  
[show class-of-service interface \(ACX Series Routers\) on page 318](#)  
[show class-of-service interface \(PPPoE Subscriber Interface for Enhanced Subscriber Management\) on page 321](#)

**Output Fields** [Table 48 on page 203](#) describes the output fields for the **show class-of-service interface** command. Output fields are listed in the approximate order in which they appear.

**Table 67: show class-of-service interface Output Fields**

Field Name	Field Description	
Physical interface	Name of a physical interface.	
Index	Index of this interface or the internal index of this object.  (Enhanced subscriber management for MX Series routers) Index values for dynamic CoS traffic control profiles and dynamic scheduler maps are larger for enhanced subscriber management than they are for legacy subscriber management.	
Dedicated Queues	Status of dedicated queues configured on an interface. Supported only on Trio MPC/MIC interfaces on MX Series routers.	Number of queues you can configure on the interface.
Queues supported	Number of queues you can configure on the interface.	
Queues in use	Number of queues currently configured.	

Table 67: show class-of-service interface Output Fields (*continued*)

Field Name	Field Description
<b>Total non-default queues created</b>	Number of queues created in addition to the default queues. Supported only on Trio MPC/MIC interfaces on MX Series routers.  (Enhanced subscriber management for MX Series routers) This field is not displayed for enhanced subscriber management.
<b>Rewrite Input IEEE Code-point</b>	(QFX Series only) IEEE 802.1p code point (priority) rewrite value. Incoming traffic from the Fibre Channel (FC) SAN is classified into the forwarding class specified in the native FC interface (NP_Port) fixed classifier and uses the priority specified as the IEEE 802.1p rewrite value.
<b>Shaping rate</b>	Maximum transmission rate on the physical interface. You can configure the shaping rate on the physical interface, or on the logical interface, but not on both. Therefore, the <b>Shaping rate</b> field is displayed for either the physical interface or the logical interface.
<b>Scheduler map</b>	Name of the output scheduler map associated with this interface.  (Enhanced subscriber management for MX Series routers) The name of the dynamic scheduler map object is associated with a generated UID (for example, <b>SMAP-1_UID1002</b> ) instead of with a subscriber interface.
<b>Scheduler map forwarding class sets</b>	(QFX Series only) Name of the output fabric scheduler map associated with a QFabric system Interconnect device interface.
<b>Input shaping rate</b>	For Gigabit Ethernet IQ2 PICs, maximum transmission rate on the input interface.
<b>Input scheduler map</b>	For Gigabit Ethernet IQ2 PICs, name of the input scheduler map associated with this interface.
<b>Chassis scheduler map</b>	Name of the scheduler map associated with the packet forwarding component queues.
<b>Rewrite</b>	Name and type of the rewrite rules associated with this interface.
<b>Traffic-control-profile</b>	Name of the associated traffic control profile.  (Enhanced subscriber management for MX Series routers) The name of the dynamic traffic control profile object is associated with a generated UID (for example, <b>TC_PROF_100_199_SERIES_UID1006</b> ) instead of with a subscriber interface.
<b>Classifier</b>	Name and type of classifiers associated with this interface.
<b>Forwarding-class-map</b>	Name of the forwarding map associated with this interface.
<b>Congestion-notification</b>	(QFX Series and EX4600 switches only) Congestion notification state, <b>enabled</b> or <b>disabled</b> .
<b>Logical interface</b>	Name of a logical interface.
<b>Object</b>	Category of an object: <b>Classifier</b> , <b>Fragmentation-map</b> (for LSQ interfaces only), <b>Scheduler-map</b> , <b>Rewrite</b> , <b>Translation Table</b> (for IQE PICs only), or <b>traffic-class-map</b> (for T4000 routers with Type 5 FPCs).
<b>Name</b>	Name of an object.

Table 67: show class-of-service interface Output Fields (*continued*)

Field Name	Field Description
<b>Type</b>	Type of an object: <b>dscp</b> , <b>dscp-ipv6</b> , <b>exp</b> , <b>ieee-802.1</b> , <b>ip</b> , <b>inet-precedence</b> , or <b>ieee-802.1ad</b> (for traffic class map on T4000 routers with Type 5 FPCs)..
<b>Link-level type</b>	Encapsulation on the physical interface.
<b>MTU</b>	MTU size on the physical interface.
<b>Speed</b>	Speed at which the interface is running.
<b>Loopback</b>	Whether loopback is enabled and the type of loopback.
<b>Source filtering</b>	Whether source filtering is enabled or disabled.
<b>Flow control</b>	Whether flow control is enabled or disabled.
<b>Auto-negotiation</b>	(Gigabit Ethernet interfaces) Whether autonegotiation is enabled or disabled.
<b>Remote-fault</b>	(Gigabit Ethernet interfaces) Remote fault status. <ul style="list-style-type: none"> <li>• <b>Online</b>—Autonegotiation is manually configured as online.</li> <li>• <b>Offline</b>—Autonegotiation is manually configured as offline.</li> </ul>
<b>Device flags</b>	The <b>Device flags</b> field provides information about the physical device and displays one or more of the following values: <ul style="list-style-type: none"> <li>• <b>Down</b>—Device has been administratively disabled.</li> <li>• <b>Hear-Own-Xmit</b>—Device receives its own transmissions.</li> <li>• <b>Link-Layer-Down</b>—The link-layer protocol has failed to connect with the remote endpoint.</li> <li>• <b>Loopback</b>—Device is in physical loopback.</li> <li>• <b>Loop-Detected</b>—The link layer has received frames that it sent, thereby detecting a physical loopback.</li> <li>• <b>No-Carrier</b>—On media that support carrier recognition, no carrier is currently detected.</li> <li>• <b>No-Multicast</b>—Device does not support multicast traffic.</li> <li>• <b>Present</b>—Device is physically present and recognized.</li> <li>• <b>Promiscuous</b>—Device is in promiscuous mode and recognizes frames addressed to all physical addresses on the media.</li> <li>• <b>Quench</b>—Transmission on the device is quenched because the output buffer is overflowing.</li> <li>• <b>Recv-All-Multicasts</b>—Device is in multicast promiscuous mode and therefore provides no multicast filtering.</li> <li>• <b>Running</b>—Device is active and enabled.</li> </ul>

Table 67: show class-of-service interface Output Fields (*continued*)

Field Name	Field Description
<b>Interface flags</b>	<p>The <b>Interface flags</b> field provides information about the physical interface and displays one or more of the following values:</p> <ul style="list-style-type: none"> <li>• <b>Admin-Test</b>—Interface is in test mode and some sanity checking, such as loop detection, is disabled.</li> <li>• <b>Disabled</b>—Interface is administratively disabled.</li> <li>• <b>Down</b>—A hardware failure has occurred.</li> <li>• <b>Hardware-Down</b>—Interface is nonfunctional or incorrectly connected.</li> <li>• <b>Link-Layer-Down</b>—Interface keepalives have indicated that the link is incomplete.</li> <li>• <b>No-Multicast</b>—Interface does not support multicast traffic.</li> <li>• <b>No-receive No-transmit</b>—Passive monitor mode is configured on the interface.</li> <li>• <b>Point-To-Point</b>—Interface is point-to-point.</li> <li>• <b>Pop all MPLS labels from packets of depth</b>—MPLS labels are removed as packets arrive on an interface that has the <b>pop-all-labels</b> statement configured. The depth value can be one of the following: <ul style="list-style-type: none"> <li>• <b>1</b>—Takes effect for incoming packets with one label only.</li> <li>• <b>2</b>—Takes effect for incoming packets with two labels only.</li> <li>• <b>[ 1 2 ]</b>—Takes effect for incoming packets with either one or two labels.</li> </ul> </li> <li>• <b>Promiscuous</b>—Interface is in promiscuous mode and recognizes frames addressed to all physical addresses.</li> <li>• <b>Recv-All-Multicasts</b>—Interface is in multicast promiscuous mode and provides no multicast filtering.</li> <li>• <b>SNMP-Traps</b>—SNMP trap notifications are enabled.</li> <li>• <b>Up</b>—Interface is enabled and operational.</li> </ul>
<b>Flags</b>	<p>The <b>Logical interface flags</b> field provides information about the logical interface and displays one or more of the following values:</p> <ul style="list-style-type: none"> <li>• <b>ACFC Encapsulation</b>—Address control field Compression (ACFC) encapsulation is enabled (negotiated successfully with a peer).</li> <li>• <b>Device-down</b>—Device has been administratively disabled.</li> <li>• <b>Disabled</b>—Interface is administratively disabled.</li> <li>• <b>Down</b>—A hardware failure has occurred.</li> <li>• <b>Clear-DF-Bit</b>—GRE tunnel or IPsec tunnel is configured to clear the Don't Fragment (DF) bit.</li> <li>• <b>Hardware-Down</b>—Interface protocol initialization failed to complete successfully.</li> <li>• <b>PFC</b>—Protocol field compression is enabled for the PPP session.</li> <li>• <b>Point-To-Point</b>—Interface is point-to-point.</li> <li>• <b>SNMP-Traps</b>—SNMP trap notifications are enabled.</li> <li>• <b>Up</b>—Interface is enabled and operational.</li> </ul>
<b>Encapsulation</b>	Encapsulation on the logical interface.
<b>Admin</b>	Administrative state of the interface ( <b>Up</b> or <b>Down</b> ).
<b>Link</b>	Status of physical link ( <b>Up</b> or <b>Down</b> ).
<b>Proto</b>	Protocol configured on the interface.

Table 67: show class-of-service interface Output Fields (*continued*)

Field Name	Field Description
<b>Input Filter</b>	Names of any firewall filters to be evaluated when packets are received on the interface, including any filters attached through activation of dynamic service.
<b>Output Filter</b>	Names of any firewall filters to be evaluated when packets are transmitted on the interface, including any filters attached through activation of dynamic service.
<b>Link flags</b>	Provides information about the physical link and displays one or more of the following values: <ul style="list-style-type: none"> <li>• <b>ACFC</b>—Address control field compression is configured. The Point-to-Point Protocol (PPP) session negotiates the ACFC option.</li> <li>• <b>Give-Up</b>—Link protocol does not continue connection attempts after repeated failures.</li> <li>• <b>Loose-LCP</b>—PPP does not use the Link Control Protocol (LCP) to indicate whether the link protocol is operational.</li> <li>• <b>Loose-LMI</b>—Frame Relay does not use the Local Management Interface (LMI) to indicate whether the link protocol is operational.</li> <li>• <b>Loose-NCP</b>—PPP does not use the Network Control Protocol (NCP) to indicate whether the device is operational.</li> <li>• <b>Keepalives</b>—Link protocol keepalives are enabled.</li> <li>• <b>No-Keepalives</b>—Link protocol keepalives are disabled.</li> <li>• <b>PFC</b>—Protocol field compression is configured. The PPP session negotiates the PFC option.</li> </ul>
<b>Hold-times</b>	Current interface hold-time up and hold-time down, in milliseconds.
<b>CoS queues</b>	Number of CoS queues configured.
<b>Last flapped</b>	Date, time, and how long ago the interface went from down to up. The format is <b>Last flapped: year-month-day hour:minute:second:timezone (hour:minute:second ago)</b> . For example, <b>Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago)</b> .
<b>Statistics last cleared</b>	Number and rate of bytes and packets received and transmitted on the physical interface. <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface.</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface.</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul>
<b>IPv6 transit statistics</b>	Number of IPv6 transit bytes and packets received and transmitted on the logical interface if IPv6 statistics tracking is enabled.

Table 67: show class-of-service interface Output Fields (*continued*)

Field Name	Field Description
<b>Input errors</b>	<p>Input errors on the interface. The labels are explained in the following list:</p> <ul style="list-style-type: none"> <li>• <b>Errors</b>—Sum of the incoming frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>Framing errors</b>—Number of packets received with an invalid frame checksum (FCS).</li> <li>• <b>Runts</b>—Number of frames received that are smaller than the runt threshold.</li> <li>• <b>Giants</b>—Number of frames received that are larger than the giant threshold.</li> <li>• <b>Bucket Drops</b>—Drops resulting from the traffic load exceeding the interface transmit or receive leaky bucket configuration.</li> <li>• <b>Policed discards</b>—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that Junos OS does not handle.</li> <li>• <b>L3 incompletes</b>—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded. Layer 3 incomplete errors can be ignored by configuring the <b>ignore-l3-incompletes</b> statement.</li> <li>• <b>L2 channel errors</b>—Number of times the software did not find a valid logical interface for an incoming frame.</li> <li>• <b>L2 mismatch timeouts</b>—Number of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable.</li> <li>• <b>HS link CRC errors</b>—Number of errors on the high-speed links between the ASICs responsible for handling the router interfaces.</li> <li>• <b>HS link FIFO overflows</b>—Number of FIFO overflows on the high-speed links between the ASICs responsible for handling the router interfaces.</li> </ul>
<b>Output errors</b>	<p>Output errors on the interface. The labels are explained in the following list:</p> <ul style="list-style-type: none"> <li>• <b>Carrier transitions</b>—Number of times the interface has gone from <b>down</b> to <b>up</b>. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC is malfunctioning.</li> <li>• <b>Errors</b>—Sum of the outgoing frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> </ul> <p><b>NOTE:</b> Due to accounting space limitations on certain Type 3 FPCs (which are supported in M320 and T640 routers), the <b>Drops</b> field does not always use the correct value for queue 6 or queue 7 for interfaces on 10-port 1-Gigabit Ethernet PICs.</p> <ul style="list-style-type: none"> <li>• <b>Aged packets</b>—Number of packets that remained in shared packet SDRAM so long that the system automatically purged them. The value in this field should never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware.</li> <li>• <b>HS link FIFO underflows</b>—Number of FIFO underflows on the high-speed links between the ASICs responsible for handling the router interfaces.</li> <li>• <b>MTU errors</b>—Number of packets whose size exceeds the MTU of the interface.</li> </ul>
<b>Egress queues</b>	Total number of egress queues supported on the specified interface.

Table 67: show class-of-service interface Output Fields (*continued*)

Field Name	Field Description
<b>Queue counters</b>	<p>CoS queue number and its associated user-configured forwarding class name.</p> <ul style="list-style-type: none"> <li>• <b>Queued packets</b>—Number of queued packets.</li> <li>• <b>Transmitted packets</b>—Number of transmitted packets.</li> <li>• <b>Dropped packets</b>—Number of packets dropped by the ASIC's RED mechanism.</li> </ul> <p><b>NOTE:</b> Due to accounting space limitations on certain Type 3 FPCs (which are supported in M320 and T640 routers), the <b>Dropped packets</b> field does not always display the correct value for queue 6 or queue 7 for interfaces on 10-port 1-Gigabit Ethernet PICs.</p>
<b>SONET alarms</b> <b>SONET defects</b>	<p>(SONET) SONET media-specific alarms and defects that prevent the interface from passing packets. When a defect persists for a certain period, it is promoted to an alarm. Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router or light the red or yellow alarm LED on the craft interface. See these fields for possible alarms and defects: <b>SONET PHY</b>, <b>SONET section</b>, <b>SONET line</b>, and <b>SONET path</b>.</p>
<b>SONET PHY</b>	<p>Counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. A state other than <b>OK</b> indicates a problem.</li> </ul> <p>The <b>SONET PHY</b> field has the following subfields:</p> <ul style="list-style-type: none"> <li>• <b>PLL Lock</b>—Phase-locked loop</li> <li>• <b>PHY Light</b>—Loss of optical signal</li> </ul>
<b>SONET section</b>	<p>Counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. A state other than <b>OK</b> indicates a problem.</li> </ul> <p>The <b>SONET section</b> field has the following subfields:</p> <ul style="list-style-type: none"> <li>• <b>BIP-BI</b>—Bit interleaved parity for SONET section overhead</li> <li>• <b>SEF</b>—Severely errored framing</li> <li>• <b>LOS</b>—Loss of signal</li> <li>• <b>LOF</b>—Loss of frame</li> <li>• <b>ES-S</b>—Errored seconds (section)</li> <li>• <b>SES-S</b>—Severely errored seconds (section)</li> <li>• <b>SEFS-S</b>—Severely errored framing seconds (section)</li> </ul>



Table 67: show class-of-service interface Output Fields (*continued*)

Field Name	Field Description
<b>SONET line</b>	<p>Active alarms and defects, plus counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. A state other than <b>OK</b> indicates a problem.</li> </ul> <p>The <b>SONET line</b> field has the following subfields:</p> <ul style="list-style-type: none"> <li>• <b>BIP-B2</b>—Bit interleaved parity for SONET line overhead</li> <li>• <b>REI-L</b>—Remote error indication (near-end line)</li> <li>• <b>RDI-L</b>—Remote defect indication (near-end line)</li> <li>• <b>AIS-L</b>—Alarm indication signal (near-end line)</li> <li>• <b>BERR-SF</b>—Bit error rate fault (signal failure)</li> <li>• <b>BERR-SD</b>—Bit error rate defect (signal degradation)</li> <li>• <b>ES-L</b>—Errored seconds (near-end line)</li> <li>• <b>SES-L</b>—Severely errored seconds (near-end line)</li> <li>• <b>UAS-L</b>—Unavailable seconds (near-end line)</li> <li>• <b>ES-LFE</b>—Errored seconds (far-end line)</li> <li>• <b>SES-LFE</b>—Severely errored seconds (far-end line)</li> <li>• <b>UAS-LFE</b>—Unavailable seconds (far-end line)</li> </ul>
<b>SONET path</b>	<p>Active alarms and defects, plus counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. A state other than <b>OK</b> indicates a problem.</li> </ul> <p>The <b>SONET path</b> field has the following subfields:</p> <ul style="list-style-type: none"> <li>• <b>BIP-B3</b>—Bit interleaved parity for SONET section overhead</li> <li>• <b>REI-P</b>—Remote error indication</li> <li>• <b>LOP-P</b>—Loss of pointer (path)</li> <li>• <b>AIS-P</b>—Path alarm indication signal</li> <li>• <b>RDI-P</b>—Path remote defect indication</li> <li>• <b>UNEQ-P</b>—Path unequipped</li> <li>• <b>PLM-P</b>—Path payload (signal) label mismatch</li> <li>• <b>ES-P</b>—Errored seconds (near-end STS path)</li> <li>• <b>SES-P</b>—Severely errored seconds (near-end STS path)</li> <li>• <b>UAS-P</b>—Unavailable seconds (near-end STS path)</li> <li>• <b>ES-PFE</b>—Errored seconds (far-end STS path)</li> <li>• <b>SES-PFE</b>—Severely errored seconds (far-end STS path)</li> <li>• <b>UAS-PFE</b>—Unavailable seconds (far-end STS path)</li> </ul>

Table 67: show class-of-service interface Output Fields (*continued*)

Field Name	Field Description
Received SONET overhead	Values of the received and transmitted SONET overhead: <ul style="list-style-type: none"> <li>• <b>C2</b>—Signal label. Allocated to identify the construction and content of the STS-level SPE and for PDI-P.</li> <li>• <b>F1</b>—Section user channel byte. This byte is set aside for the purposes of users.</li> <li>• <b>K1 and K2</b>—These bytes are allocated for APS signaling for the protection of the multiplex section.</li> <li>• <b>J0</b>—Section trace. This byte is defined for STS-1 number 1 of an STS-N signal. Used to transmit a 1-byte fixed-length string or a 16-byte message so that a receiving terminal in a section can verify its continued connection to the intended transmitter.</li> <li>• <b>S1</b>—Synchronization status. The S1 byte is located in the first STS-1 number of an STS-N signal.</li> <li>• <b>Z3 and Z4</b>—Allocated for future use.</li> </ul>
Transmitted SONET overhead	
Received path trace	SONET/SDH interfaces allow path trace bytes to be sent inband across the SONET/SDH link. Juniper Networks and other router manufacturers use these bytes to help diagnose misconfigurations and network errors by setting the transmitted path trace message so that it contains the system hostname and name of the physical interface. The received path trace value is the message received from the router at the other end of the fiber. The transmitted path trace value is the message that this router transmits.
Transmitted path trace	
HDLC configuration	Information about the HDLC configuration. <ul style="list-style-type: none"> <li>• <b>Policing bucket</b>—Configured state of the receiving policer.</li> <li>• <b>Shaping bucket</b>—Configured state of the transmitting shaper.</li> <li>• <b>Giant threshold</b>—Giant threshold programmed into the hardware.</li> <li>• <b>Runt threshold</b>—Runt threshold programmed into the hardware.</li> </ul>
Packet Forwarding Engine configuration	Information about the configuration of the Packet Forwarding Engine: <ul style="list-style-type: none"> <li>• <b>Destination slot</b>—FPC slot number.</li> <li>• <b>PLP byte</b>—Packet Level Protocol byte.</li> </ul>
CoS information	Information about the CoS queue for the physical interface. <ul style="list-style-type: none"> <li>• <b>CoS transmit queue</b>—Queue number and its associated user-configured forwarding class name.</li> <li>• <b>Bandwidth %</b>—Percentage of bandwidth allocated to the queue.</li> <li>• <b>Bandwidth bps</b>—Bandwidth allocated to the queue (in bps).</li> <li>• <b>Buffer %</b>—Percentage of buffer space allocated to the queue.</li> <li>• <b>Buffer usec</b>—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time.</li> <li>• <b>Priority</b>—Queue priority: <b>low</b> or <b>high</b>.</li> <li>• <b>Limit</b>—Displayed if rate limiting is configured for the queue. Possible values are <b>none</b> and <b>exact</b>. If <b>exact</b> is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If <b>none</b> is configured, the queue transmits beyond the configured bandwidth if bandwidth is available.</li> </ul>
Forwarding classes	Total number of forwarding classes supported on the specified interface.
Egress queues	Total number of egress queues supported on the specified interface.

Table 67: show class-of-service interface Output Fields (*continued*)

Field Name	Field Description
Queue	Queue number.
Forwarding classes	Forwarding class name.
Queued Packets	Number of packets queued to this queue.
Queued Bytes	Number of bytes queued to this queue. The byte counts vary by PIC type.
Transmitted Packets	Number of packets transmitted by this queue. When fragmentation occurs on the egress interface, the first set of packet counters shows the postfragmentation values. The second set of packet counters (displayed under the <b>Packet Forwarding Engine Chassis Queues</b> field) shows the prefragmentation values.
Transmitted Bytes	Number of bytes transmitted by this queue. The byte counts vary by PIC type.
Tail-dropped packets	Number of packets dropped because of tail drop.
RED-dropped packets	<p>Number of packets dropped because of random early detection (RED).</p> <ul style="list-style-type: none"> <li>• (M Series and T Series routers only) On M320 and M120 routers and the T Series routers, the total number of dropped packets is displayed. On all other M Series routers, the output classifies dropped packets into the following categories: <ul style="list-style-type: none"> <li>• <b>Low, non-TCP</b>—Number of low-loss priority non-TCP packets dropped because of RED.</li> <li>• <b>Low, TCP</b>—Number of low-loss priority TCP packets dropped because of RED.</li> <li>• <b>High, non-TCP</b>—Number of high-loss priority non-TCP packets dropped because of RED.</li> <li>• <b>High, TCP</b>—Number of high-loss priority TCP packets dropped because of RED.</li> </ul> </li> <li>• (MX Series routers with enhanced DPCs, and T Series routers with enhanced FPCs only) The output classifies dropped packets into the following categories: <ul style="list-style-type: none"> <li>• <b>Low</b>—Number of low-loss priority packets dropped because of RED.</li> <li>• <b>Medium-low</b>—Number of medium-low loss priority packets dropped because of RED.</li> <li>• <b>Medium-high</b>—Number of medium-high loss priority packets dropped because of RED.</li> <li>• <b>High</b>—Number of high-loss priority packets dropped because of RED.</li> </ul> </li> </ul> <p><b>NOTE:</b> Due to accounting space limitations on certain Type 3 FPCs (which are supported in M320 and T640 routers), this field does not always display the correct value for queue 6 or queue 7 for interfaces on 10-port 1-Gigabit Ethernet PICs.</p>

Table 67: show class-of-service interface Output Fields (*continued*)

Field Name	Field Description
RED-dropped bytes	<p>Number of bytes dropped because of RED. The byte counts vary by PIC type.</p> <ul style="list-style-type: none"> <li>(M Series and T Series routers only) On M320 and M120 routers and the T Series routers, only the total number of dropped bytes is displayed. On all other M Series routers, the output classifies dropped bytes into the following categories: <ul style="list-style-type: none"> <li><b>Low, non-TCP</b>—Number of low-loss priority non-TCP bytes dropped because of RED.</li> <li><b>Low, TCP</b>—Number of low-loss priority TCP bytes dropped because of RED.</li> <li><b>High, non-TCP</b>—Number of high-loss priority non-TCP bytes dropped because of RED.</li> <li><b>High, TCP</b>—Number of high-loss priority TCP bytes dropped because of RED.</li> </ul> </li> </ul> <p><b>NOTE:</b> Due to accounting space limitations on certain Type 3 FPCs (which are supported in M320 and T640 routers), this field does not always display the correct value for queue 6 or queue 7 for interfaces on 10-port 1-Gigabit Ethernet PICs.</p>
Transmit rate	Configured transmit rate of the scheduler. The rate is a percentage of the total interface bandwidth.
Rate Limit	<p>Rate limiting configuration of the queue. Possible values are :</p> <ul style="list-style-type: none"> <li><b>None</b>—No rate limit.</li> <li><b>exact</b>—Queue transmits at the configured rate.</li> </ul>
Buffer size	Delay buffer size in the queue.
Priority	Scheduling priority configured as <b>low</b> or <b>high</b> .
Excess Priority	Priority of the excess bandwidth traffic on a scheduler: <b>low</b> , <b>medium-low</b> , <b>medium-high</b> , <b>high</b> , or <b>none</b> .
Drop profiles	<p>Display the assignment of drop profiles.</p> <ul style="list-style-type: none"> <li><b>Loss priority</b>—Packet loss priority for drop profile assignment.</li> <li><b>Protocol</b>—Transport protocol for drop profile assignment.</li> <li><b>Index</b>—Index of the indicated object. Objects that have indexes in this output include schedulers and drop profiles.</li> <li><b>Name</b>—Name of the drop profile.</li> <li><b>Type</b>—Type of the drop profile: <b>discrete</b> or <b>interpolated</b>.</li> <li><b>Fill Level</b>—Percentage fullness of a queue.</li> <li><b>Drop probability</b>—Drop probability at this fill level.</li> </ul>
Excess Priority	Priority of the excess bandwidth traffic on a scheduler.

Table 67: show class-of-service interface Output Fields (*continued*)

Field Name	Field Description
<b>Drop profiles</b>	<p>Display the assignment of drop profiles.</p> <ul style="list-style-type: none"> <li>• <b>Loss priority</b>—Packet loss priority for drop profile assignment.</li> <li>• <b>Protocol</b>—Transport protocol for drop profile assignment.</li> <li>• <b>Index</b>—Index of the indicated object. Objects that have indexes in this output include schedulers and drop profiles.</li> <li>• <b>Name</b>—Name of the drop profile.</li> <li>• <b>Type</b>—Type of the drop profile: <b>discrete</b> or <b>interpolated</b>.</li> <li>• <b>Fill Level</b>—Percentage fullness of a queue.</li> <li>• <b>Drop probability</b>—Drop probability at this fill level.</li> </ul>
<b>Adjustment information</b>	<p>Display the assignment of shaping-rate adjustments on a scheduler node or queue.</p> <ul style="list-style-type: none"> <li>• <b>Adjusting application</b>—Application that is performing the shaping-rate adjustment. <ul style="list-style-type: none"> <li>• The adjusting application can appear as <b>ancp LS-0</b>, which is the Junos OS Access Node Control Profile process (<b>ancpd</b>) that performs shaping-rate adjustments on schedule nodes.</li> <li>• The adjusting application can also appear as <b>pppoe</b>, which adjusts the shaping-rate and overhead-accounting class-of-service attributes on dynamic subscriber interfaces in a broadband access network based on access line parameters in Point-to-Point Protocol over Ethernet (PPPoE) Tags [TR-101]. This feature is supported on MPC/MIC interfaces on MX Series routers. The shaping rate is based on the actual-data-rate-downstream attribute. The overhead accounting value is based on the access-loop-encapsulation attribute and specifies whether the access loop uses Ethernet (frame mode) or ATM (cell mode).</li> </ul> </li> <li>• <b>Adjustment type</b>—Type of adjustment: <b>absolute</b> or <b>delta</b>.</li> <li>• <b>Configured shaping rate</b>—Shaping rate configured for the scheduler node or queue.</li> <li>• <b>Adjustment value</b>—Value of adjusted shaping rate.</li> <li>• <b>Adjustment target</b>—Level of shaping-rate adjustment performed: <b>node</b> or <b>queue</b>.</li> <li>• <b>Adjustment overhead-accounting mode</b>—Configured shaping mode: <b>frame</b> or <b>cell</b>.</li> <li>• <b>Adjustment overhead bytes</b>—Number of bytes that the ANCP agent adds to or subtracts from the actual downstream frame overhead before reporting the adjusted values to CoS.</li> <li>• <b>Adjustment target</b>—Level of shaping-rate adjustment performed: <b>node</b> or <b>queue</b>.</li> <li>• <b>Adjustment multicast index</b>—</li> </ul>

## Sample Output

### show class-of-service interface (Physical)

```

user@host> show class-of-service interface so-0/2/3
Physical interface: so-0/2/3, Index: 135
Queues supported: 8, Queues in use: 4
Total non-default queues created: 4
Scheduler map: <default>, Index: 2032638653

Logical interface: fe-0/0/1.0, Index: 68, Dedicated Queues: no
Shaping rate: 32000
Object          Name                Type                Index
Scheduler-map   <default>           exp                 27
Rewrite         exp-default         exp                 21
Classifier      exp-default         exp                 5

```

Classifier	ipprec-compatibility	ip	8
Forwarding-class-map	exp-default	exp	5

### show class-of-service interface (Logical)

```

user@host> show class-of-service interface so-0/2/3.0
Logical interface: so-0/2/3.0, Index: 68, Dedicated Queues: no
Shaping rate: 32000
Object      Name                Type      Index
Scheduler-map <default>          27
Rewrite     exp-default         exp       21
Classifier   exp-default         exp       5
Classifier   ipprec-compatibility ip        8
Forwarding-class-map exp-default         exp       5

```

### show class-of-service interface (Gigabit Ethernet)

```

user@host> show class-of-service interface ge-6/2/0
Physical interface: ge-6/2/0, Index: 175
Queues supported: 4, Queues in use: 4
Scheduler map: <default>, Index: 2
Input scheduler map: <default>, Index: 3
Chassis scheduler map: <default-chassis>, Index: 4

```

### show class-of-service interface (ANCP)

```

user@host> show class-of-service interface pp0.1073741842
Logical interface: pp0.1073741842, Index: 341
Object      Name                Type      Index
Traffic-control-profile TCP-CVLAN          Output    12408
Classifier   dscp-ipv6-compatibility dscp-ipv6 9
Classifier   ipprec-compatibility ip        13

Adjusting application: ancp LS-0
Adjustment type: absolute
Configured shaping rate: 4000000
Adjustment value: 11228000
Adjustment overhead-accounting mode: Frame Mode
Adjustment overhead bytes: 50
Adjustment target: node

```

### show class-of-service interface (PPPoE Interface)

```

user@host> show class-of-service interface pp0.1
Logical interface: pp0.1, Index: 85
Object      Name                Type      Index
Traffic-control-profile tcp-pppoe.o.pp0.1    Output    2726446535
Classifier   ipprec-compatibility ip        13

Adjusting application: PPPoE
Adjustment type: absolute
Adjustment value: 5000000
Adjustment overhead-accounting mode: cell
Adjustment target: node

```

### show class-of-service interface (T4000 Routers with Type 5 FPCs)

```

user@host> show class-of-service interface xe-4/0/0
Physical interface: xe-4/0/0, Index: 153
Queues supported: 8, Queues in use: 4
Shaping rate: 5000000000 bps
Scheduler map: <default>, Index: 2

```

	Logical interface: xe-4/0/0.0, Index: 77		
	Object	Name	Type
Index	Classifier	ipprec-compatibility	ip
13			

[show class-of-service interface detail](#)

```
user@host> show class-of-service interface ge-0/3/0 detail
```

```
Physical interface: ge-0/3/0, Enabled, Physical link is Up
  Link-level type: Ethernet, MTU: 1518, Speed: 1000mbps, Loopback: Disabled,
Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,
Remote fault: Online
  Device flags      : Present Running
  Interface flags:  SNMP-Traps Internal: 0x4000
```

```
Physical interface: ge-0/3/0, Index: 138
Queues supported: 4, Queues in use: 5
Shaping rate: 50000 bps
Scheduler map: interface-scheduler-map, Index: 58414
Input shaping rate: 10000 bps
Input scheduler map: scheduler-map, Index: 15103
Chassis scheduler map: <default-chassis>, Index: 4
Congestion-notification: Disabled
```

```
Logical interface ge-0/3/0.0
  Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.1 ]  Encapsulation: ENET2
  inet
  mpls
```

Interface ge-0/3/0.0	Admin up	Link up	Proto inet mpls	Input Filter	Output Filter
Interface ge-0/3/0.0	Admin up	Link up	Proto inet mpls	Input Policer	Output Policer

Logical interface: ge-0/3/0.0, Index: 68			
Object	Name	Type	Index
Rewrite	exp-default	exp (mpls-any)	33
Classifier	exp-default	exp	10
Classifier	ipprec-compatibility	ip	13

```
Logical interface ge-0/3/0.1
  Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.2 ]  Encapsulation: ENET2
  inet
```

Interface	Admin	Link	Proto	Input	Filter	Output	Filter
ge-0/3/0.1	up	up	inet				
Interface	Admin	Link	Proto	Input	Policer	Output	Policer
ge-0/3/0.1	up	up	inet				

```
Logical interface: ge-0/3/0.1, Index: 69
  Object      Name                Type      Index
  Classifier  ipprec-compatibility  ip        13
```

show class-of-service interface comprehensive

```
user@host> show class-of-service interface ge-0/3/0 comprehensive
```

```

Physical interface: ge-0/3/0, Enabled, Physical link is Up
  Interface index: 138, SNMP ifIndex: 601, Generation: 141
  Link-level type: Ethernet, MTU: 1518, Speed: 1000mbps, BPDU Error: None,
  MAC-REWRITE Error: None, Loopback: Disabled, Source filtering: Disabled, Flow
  control: Enabled,
  Auto-negotiation: Enabled, Remote fault: Online
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  CoS queues     : 4 supported, 4 maximum usable queues
  Schedulers     : 256
  Hold-times     : Up 0 ms, Down 0 ms
  Current address: 00:14:f6:f4:b4:5d, Hardware address: 00:14:f6:f4:b4:5d
  Last flapped   : 2010-09-07 06:35:22 PDT (15:14:42 ago)
  Statistics last cleared: Never
Traffic statistics:
  Input bytes : 0 0 bps
  Output bytes : 0 0 bps
  Input packets: 0 0 pps
  Output packets: 0 0 pps
IPv6 total statistics:
  Input bytes : 0
  Output bytes : 0
  Input packets: 0
  Output packets: 0
Ingress traffic statistics at Packet Forwarding Engine:
  Input bytes : 0 0 bps
  Input packets: 0 0 pps
  Drop bytes : 0 0 bps
  Drop packets: 0 0 pps
Label-switched interface (LSI) traffic statistics:
  Input bytes : 0 0 bps
  Input packets: 0 0 pps
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runt: 0, Policed discards: 0, L3
  incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0, FIFO errors: 0,
  Resource errors: 0
Output errors:
  Carrier transitions: 5, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,
  FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
Ingress queues: 4 supported, 5 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0 af3                0                0                0
  1 af2                0                0                0
  2 ef2                0                0                0
  3 ef1                0                0                0

Egress queues: 4 supported, 5 in use
Queue counters:      Queued packets  Transmitted packets      Dropped packets

  0 af3                0                0                0
  1 af2                0                0                0
  2 ef2                0                0                0
  3 ef1                0                0                0

```



```

Active alarms : None
Active defects : None
MAC statistics:
    Receive      Transmit
Total octets    0      0
Total packets  0      0
Unicast packets 0      0
Broadcast packets 0    0
Multicast packets 0    0
CRC/Align errors 0    0
FIFO errors     0    0
MAC control frames 0    0
MAC pause frames 0    0
Oversized frames 0
Jabber frames   0
Fragment frames 0
VLAN tagged frames 0
Code violations 0
Filter statistics:
Input packet count 0
Input packet rejects 0
Input DA rejects 0
Input SA rejects 0
Output packet count 0
Output packet pad count 0
Output packet error count 0
CAM destination filters: 0, CAM source filters: 0
Autonegotiation information:
Negotiation status: Complete
Link partner:
Link mode: Full-duplex, Flow control: Symmetric/Asymmetric, Remote fault:
OK
Local resolution:
Flow control: Symmetric, Remote fault: Link OK
Packet Forwarding Engine configuration:
Destination slot: 0
CoS information:
Direction : Output
CoS transmit queue      Bandwidth      Buffer Priority
Limit
%      bps      %      usec
2 ef2      39      19500      0      120      high
none
Direction : Input
CoS transmit queue      Bandwidth      Buffer Priority
Limit
%      bps      %      usec
0 af3      30      3000      45      0      low
none

Physical interface: ge-0/3/0, Enabled, Physical link is Up
Interface index: 138, SNMP ifIndex: 601
Forwarding classes: 16 supported, 5 in use
Ingress queues: 4 supported, 5 in use
Queue: 0, Forwarding classes: af3
Queued:
Packets      :      0      0 pps
Bytes      :      0      0 bps
Transmitted:
Packets      :      0      0 pps
Bytes      :      0      0 bps
Tail-dropped packets : Not Available

```

```

RED-dropped packets : 0 0 pps
RED-dropped bytes : 0 0 bps
Queue: 1, Forwarding classes: af2
  Queued:
    Packets : 0 0 pps
    Bytes : 0 0 bps
  Transmitted:
    Packets : 0 0 pps
    Bytes : 0 0 bps
    Tail-dropped packets : Not Available
    RED-dropped packets : 0 0 pps
    RED-dropped bytes : 0 0 bps
Queue: 2, Forwarding classes: ef2
  Queued:
    Packets : 0 0 pps
    Bytes : 0 0 bps
  Transmitted:
    Packets : 0 0 pps
    Bytes : 0 0 bps
    Tail-dropped packets : Not Available
    RED-dropped packets : 0 0 pps
    RED-dropped bytes : 0 0 bps
Queue: 3, Forwarding classes: ef1
  Queued:
    Packets : 0 0 pps
    Bytes : 0 0 bps
  Transmitted:
    Packets : 0 0 pps
    Bytes : 0 0 bps
    Tail-dropped packets : Not Available
    RED-dropped packets : 0 0 pps
    RED-dropped bytes : 0 0 bps
Forwarding classes: 16 supported, 5 in use
Egress queues: 4 supported, 5 in use
Queue: 0, Forwarding classes: af3
  Queued:
    Packets : 0 0 pps
    Bytes : 0 0 bps
  Transmitted:
    Packets : 0 0 pps
    Bytes : 0 0 bps
    Tail-dropped packets : Not Available
    RL-dropped packets : 0 0 pps
    RL-dropped bytes : 0 0 bps
    RED-dropped packets : 0 0 pps
    RED-dropped bytes : 0 0 bps
Queue: 1, Forwarding classes: af2
  Queued:
    Packets : 0 0 pps
    Bytes : 0 0 bps
  Transmitted:
    Packets : 0 0 pps
    Bytes : 0 0 bps
    Tail-dropped packets : Not Available
    RL-dropped packets : 0 0 pps
    RL-dropped bytes : 0 0 bps
    RED-dropped packets : 0 0 pps
    RED-dropped bytes : 0 0 bps
Queue: 2, Forwarding classes: ef2
  Queued:
    Packets : 0 0 pps

```

```

    Bytes                :                0                0 bps
  Transmitted:
    Packets              :                0                0 pps
    Bytes                :                0                0 bps
    Tail-dropped packets : Not Available
    RL-dropped packets   :                0                0 pps
    RL-dropped bytes     :                0                0 bps
    RED-dropped packets  :                0                0 pps
    RED-dropped bytes    :                0                0 bps
Queue: 3, Forwarding classes: ef1
  Queued:
    Packets              :                0                0 pps
    Bytes                :                0                0 bps
  Transmitted:
    Packets              :                0                0 pps
    Bytes                :                0                0 bps
    Tail-dropped packets : Not Available
    RL-dropped packets   :                0                0 pps
    RL-dropped bytes     :                0                0 bps
    RED-dropped packets  :                0                0 pps
    RED-dropped bytes    :                0                0 bps

Packet Forwarding Engine Chassis Queues:
Queues: 4 supported, 5 in use
Queue: 0, Forwarding classes: af3
  Queued:
    Packets              :                0                0 pps
    Bytes                :                0                0 bps
  Transmitted:
    Packets              :                0                0 pps
    Bytes                :                0                0 bps
    Tail-dropped packets :                0                0 pps
    RED-dropped packets  : Not Available
    RED-dropped bytes    : Not Available
Queue: 1, Forwarding classes: af2
  Queued:
    Packets              :                0                0 pps
    Bytes                :                0                0 bps
  Transmitted:
    Packets              :                0                0 pps
    Bytes                :                0                0 bps
    Tail-dropped packets :                0                0 pps
    RED-dropped packets  : Not Available
    RED-dropped bytes    : Not Available
Queue: 2, Forwarding classes: ef2
  Queued:
    Packets              :                0                0 pps
    Bytes                :                0                0 bps
  Transmitted:
    Packets              :                0                0 pps
    Bytes                :                0                0 bps
    Tail-dropped packets :                0                0 pps
    RED-dropped packets  : Not Available
    RED-dropped bytes    : Not Available
Queue: 3, Forwarding classes: ef1
  Queued:
    Packets              :            108546                0 pps
    Bytes                :        12754752        376 bps
  Transmitted:
    Packets              :            108546                0 pps
    Bytes                :        12754752        376 bps

```

```

Tail-dropped packets : 0 0 pps
RED-dropped packets : Not Available
RED-dropped bytes : Not Available

```

```

Physical interface: ge-0/3/0, Index: 138
Queues supported: 4, Queues in use: 5
Shaping rate: 50000 bps

```

```
Scheduler map: interface-scheduler-map, Index: 58414
```

```

Scheduler: ef2, Forwarding class: ef2, Index: 39155
  Transmit rate: 39 percent, Rate Limit: none, Buffer size: 120 us, Buffer
  Limit: none, Priority: high
  Excess Priority: unspecified
  Drop profiles:
    Loss priority  Protocol  Index  Name
    Low           any       1      < default-drop-profile>
    Medium low    any       1      < default-drop-profile>
    Medium high   any       1      < default-drop-profile>
    High          any       1      < default-drop-profile>
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Input shaping rate: 10000 bps
  Input scheduler map: scheduler-map

```

```
Scheduler map: scheduler-map, Index: 15103
```

```

Scheduler: af3, Forwarding class: af3, Index: 35058
  Transmit rate: 30 percent, Rate Limit: none, Buffer size: 45 percent, Buffer
  Limit: none, Priority: low
  Excess Priority: unspecified
  Drop profiles:
    Loss priority  Protocol  Index  Name
    Low           any       40582  green
    Medium low    any       1      < default-drop-profile>
    Medium high   any       1      < default-drop-profile>
    High          any       18928  yellow
  Drop profile: green, Type: discrete, Index: 40582
    Fill level  Drop probability
    50          0
    100         100
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Drop profile: yellow, Type: discrete, Index: 18928
    Fill level  Drop probability
    50          0
    100         100

```

Chassis scheduler map: < default-drop-profile>  
 Scheduler map: < default-drop-profile>, Index: 4

Scheduler: < default-drop-profile>, Forwarding class: af3, Index: 25  
 Transmit rate: 25 percent, Rate Limit: none, Buffer size: 25 percent, Buffer  
 Limit: none, Priority: low  
 Excess Priority: low  
 Drop profiles:

Loss priority	Protocol	Index	Name
Low	any	1	< default-drop-profile>
Medium low	any	1	< default-drop-profile>
Medium high	any	1	< default-drop-profile>
High	any	1	< default-drop-profile>

Drop profile: < default-drop-profile>, Type: discrete, Index: 1  
 Fill level      Drop probability  
                     100                      100

Drop profile: < default-drop-profile>, Type: discrete, Index: 1  
 Fill level      Drop probability  
                     100                      100

Drop profile: < default-drop-profile>, Type: discrete, Index: 1  
 Fill level      Drop probability  
                     100                      100

Drop profile: < default-drop-profile>, Type: discrete, Index: 1  
 Fill level      Drop probability  
                     100                      100

Scheduler: < default-drop-profile>, Forwarding class: af2, Index: 25  
 Transmit rate: 25 percent, Rate Limit: none, Buffer size: 25 percent, Buffer  
 Limit: none, Priority: low  
 Excess Priority: low  
 Drop profiles:

Loss priority	Protocol	Index	Name
Low	any	1	< default-drop-profile>
Medium low	any	1	< default-drop-profile>
Medium high	any	1	< default-drop-profile>
High	any	1	< default-drop-profile>

Drop profile: < default-drop-profile>, Type: discrete, Index: 1  
 Fill level      Drop probability  
                     100                      100

Drop profile: < default-drop-profile>, Type: discrete, Index: 1  
 Fill level      Drop probability  
                     100                      100

Drop profile: < default-drop-profile>, Type: discrete, Index: 1  
 Fill level      Drop probability  
                     100                      100

Drop profile: < default-drop-profile>, Type: discrete, Index: 1  
 Fill level      Drop probability  
                     100                      100

Scheduler: < default-drop-profile>, Forwarding class: ef2, Index: 25  
 Transmit rate: 25 percent, Rate Limit: none, Buffer size: 25 percent, Buffer  
 Limit: none, Priority: low  
 Excess Priority: low  
 Drop profiles:

Loss priority	Protocol	Index	Name
Low	any	1	< default-drop-profile>
Medium low	any	1	< default-drop-profile>
Medium high	any	1	< default-drop-profile>
High	any	1	< default-drop-profile>

Drop profile: < default-drop-profile>, Type: discrete, Index: 1  
 Fill level      Drop probability

```

100 100
Drop profile: < default-drop-profile>, Type: discrete, Index: 1
  Fill level  Drop probability
100 100
Drop profile: < default-drop-profile>, Type: discrete, Index: 1
  Fill level  Drop probability
100 100
Drop profile: < default-drop-profile>, Type: discrete, Index: 1
  Fill level  Drop probability
100 100

Scheduler: < default-drop-profile>, Forwarding class: ef1, Index: 25
  Transmit rate: 25 percent, Rate Limit: none, Buffer size: 25 percent, Buffer
Limit: none, Priority: low
  Excess Priority: low
  Drop profiles:
    Loss priority  Protocol  Index  Name
    Low           any       1      < default-drop-profile>
    Medium low    any       1      < default-drop-profile>
    Medium high   any       1      < default-drop-profile>
    High          any       1      < default-drop-profile>
Drop profile: , Type: discrete, Index: 1
  Fill level  Drop probability
100 100
Drop profile: < default-drop-profile>, Type: discrete, Index: 1
  Fill level  Drop probability
100 100
Drop profile: < default-drop-profile>, Type: discrete, Index: 1
  Fill level  Drop probability
100 100
Drop profile: < default-drop-profile>, Type: discrete, Index: 1
  Fill level  Drop probability
100 100
  Congestion-notification: Disabled
Forwarding class
priority Policing priority  ID  Queue  Restricted queue  Fabric
af3      normal            0    0          0          low
af2      normal            1    1          1          low
ef2      normal            2    2          2          high
ef1      normal            3    3          3          high
af1      normal            4    4          0          low

Logical interface ge-0/3/0.0 (Index 68) (SNMP ifIndex 152) (Generation 159)
  Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.1 ] Encapsulation: ENET2
  Traffic statistics:
    Input bytes : 0
    Output bytes : 0
    Input packets: 0
    Output packets: 0
  Local statistics:
    Input bytes : 0
    Output bytes : 0
    Input packets: 0
    Output packets: 0
  Transit statistics:
    Input bytes : 0 0 bps

```

```

Output bytes : 0 0 bps
Input packets: 0 0 pps
Output packets: 0 0 pps
Protocol inet, MTU: 1500, Generation: 172, Route table: 0
  Flags: Sendbroadcast-pkt-to-re
  Input Filters: filter-in-ge-0/3/0.0-i,
  Policier: Input: p1-ge-0/3/0.0-inet-i
Protocol mpls, MTU: 1488, Maximum labels: 3, Generation: 173, Route table: 0
  Flags: Is-Primary
  Output Filters: exp-filter,,,,,

Logical interface ge-1/2/0.0 (Index 347) (SNMP ifIndex 638) (Generation 156)

Forwarding class ID Queue Restricted queue Fabric priority Policing priority
  SPU priority
best-effort 0 0 0 low normal
  low

Aggregate Forwarding-class statistics per forwarding-class
Aggregate Forwarding-class statistics:
Forwarding-class statistics:

Forwarding-class best-effort statistics:
  Input unicast bytes: 0
  Output unicast bytes: 0
  Input unicast packets: 0
  Output unicast packets: 0

  Input multicast bytes: 0
  Output multicast bytes: 0
  Input multicast packets: 0
  Output multicast packets: 0

Forwarding-class expedited-forwarding statistics:
  Input unicast bytes: 0
  Output unicast bytes: 0
  Input unicast packets: 0
  Output unicast packets: 0

  Input multicast bytes: 0
  Output multicast bytes: 0
  Input multicast packets: 0
  Output multicast packets: 0

IPv4 protocol forwarding-class statistics:
Forwarding-class statistics:
Forwarding-class best-effort statistics:

  Input unicast bytes: 0
  Output unicast bytes: 0
  Input unicast packets: 0
  Output unicast packets: 0

  Input multicast bytes: 0
  Output multicast bytes: 0
  Input multicast packets: 0
  Output multicast packets: 0

Forwarding-class expedited-forwarding statistics:
  Input unicast bytes: 0

```

```

Output unicast bytes:    0
Input unicast packets:  0
Output unicast packets: 0

```

```

Input multicast bytes:   0
Output multicast bytes:  0
Input multicast packets: 0
Output multicast packets: 0

```

```

IPv6 protocol forwarding-class statistics:
Forwarding-class statistics:
  Forwarding-class best-effort statistics:

```

```

Input unicast bytes:    0
Output unicast bytes:   0
Input unicast packets:  0
Output unicast packets: 0

```

```

Input multicast bytes:   0
Output multicast bytes:  0
Input multicast packets: 0
Output multicast packets: 0

```

```
Forwarding-class expedited-forwarding statistics:
```

```

Input unicast bytes:    0
Output unicast bytes:   0
Input unicast packets:  0
Output unicast packets: 0

```

```
Logical interface ge-0/3/0.0 (Index 68) (SNMP ifIndex 152)
```

```
Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.1 ] Encapsulation: ENET2
```

```
Input packets : 0
```

```
Output packets: 0
```

Interface	Admin	Link	Proto	Input Filter	Output Filter
ge-0/3/0.0	up	up	inet	filter-in-ge-0/3/0.0-i	
			mpls		exp-filter

Interface	Admin	Link	Proto	Input Policer	Output Policer
ge-0/3/0.0	up	up			
			inet	p1-ge-0/3/0.0-inet-i	
			mpls		

```
Filter: filter-in-ge-0/3/0.0-i
```

```
Counters:
```

Name	Bytes	Packets
count-filter-in-ge-0/3/0.0-i	0	0

```
Filter: exp-filter
```

```
Counters:
```

Name	Bytes	Packets
count-exp-seven-match	0	0
count-exp-zero-match	0	0

```
Policers:
```

Name	Packets
p1-ge-0/3/0.0-inet-i	0

```
Logical interface: ge-0/3/0.0, Index: 68
```

Object	Name	Type	Index
Rewrite	exp-default	exp (mpls-any)	33



Rewrite rule: exp-default, Code point type: exp, Index: 33

Forwarding class	Loss priority	Code point	
af3	low	000	
af3	high	001	
af2	low	010	
af2	high	011	
ef2	low	100	
ef2	high	101	
ef1	low	110	
ef1	high	111	
Object	Name	Type	Index
Classifier	exp-default	exp	10

Classifier: exp-default, Code point type: exp, Index: 10

Code point	Forwarding class	Loss priority	
000	af3	low	
001	af3	high	
010	af2	low	
011	af2	high	
100	ef2	low	
101	ef2	high	
110	ef1	low	
111	ef1	high	
Object	Name	Type	Index
Classifier	ipprec-compatibility	ip	13

Classifier: ipprec-compatibility, Code point type: inet-precedence, Index: 13

Code point	Forwarding class	Loss priority		
000	af3	low		
001	af3	high		
010	af3	low		
011	af3	high		
100	af3	low		
101	af3	high		
110	ef1	low		
111	ef1	high		
Forwarding class	ID	Queue	Restricted queue	Fabric
priority				
af3	0	0	0	low
normal				
af2	1	1	1	low
normal				
ef2	2	2	2	high
normal				
ef1	3	3	3	high
normal				
af1	4	4	0	low
normal				

Logical interface ge-0/3/0.1 (Index 69) (SNMP ifIndex 154) (Generation 160)

Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.2 ] Encapsulation: ENET2

Traffic statistics:

Input bytes :	0
Output bytes :	0
Input packets:	0
Output packets:	0
Local statistics:	
Input bytes :	0

```

Output bytes : 0
Input packets: 0
Output packets: 0
Transit statistics:
Input bytes : 0 0 bps
Output bytes : 0 0 bps
Input packets: 0 0 pps
Output packets: 0 0 pps
Protocol inet, MTU: 1500, Generation: 174, Route table: 0
Flags: Sendbcst-pkt-to-re

```

```

Logical interface ge-0/3/0.1 (Index 69) (SNMP ifIndex 154)
Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.2 ] Encapsulation: ENET2
Input packets : 0
Output packets: 0

```

```

Interface      Admin Link Proto Input Filter      Output Filter
ge-0/3/0.1     up   up   mpls
Interface      Admin Link Proto Input Policer      Output Policer
ge-0/3/0.1     up   up   mpls

```

```
Logical interface: ge-0/3/0.1, Index: 69
```

Object	Name	Type	Index
Classifier	ipprec-compatibility	ip	13

```
Classifier: ipprec-compatibility, Code point type: inet-precedence, Index: 13
```

Code point	Forwarding class	Loss priority
000	af3	low
001	af3	high
010	af3	low
011	af3	high
100	af3	low
101	af3	high
110	ef1	low
111	ef1	high

Forwarding class	ID	Queue	Restricted queue	Fabric
priority				
af3	0	0	0	low
af2	1	1	1	low
ef2	2	2	2	high
ef1	3	3	3	high
af1	4	4	0	low

### show class-of-service interface (ACX Series Routers)

```

user@host-g11# show class-of-service interface
Physical interface: at-0/0/0, Index: 130
Queues supported: 4, Queues in use: 4
Scheduler map: <default>, Index: 2
Congestion-notification: Disabled

```

Logical interface: at-0/0/0.0, Index: 69

Logical interface: at-0/0/0.32767, Index: 70

Physical interface: at-0/0/1, Index: 133

Queues supported: 4, Queues in use: 4

Scheduler map: <default>, Index: 2

Congestion-notification: Disabled

Logical interface: at-0/0/1.0, Index: 71

Logical interface: at-0/0/1.32767, Index: 72

Physical interface: ge-0/1/0, Index: 146

Queues supported: 8, Queues in use: 5

Scheduler map: <default>, Index: 2

Congestion-notification: Disabled

Object	Name	Type	Index
Rewrite	dscp-default	dscp	31
Classifier	d1	dscp	11331
Classifier	ci	ieee8021p	583

Logical interface: ge-0/1/0.0, Index: 73

Object	Name	Type	Index
Rewrite	custom-exp	exp (mpls-any)	46413

Logical interface: ge-0/1/0.1, Index: 74

Logical interface: ge-0/1/0.32767, Index: 75

Physical interface: ge-0/1/1, Index: 147

Queues supported: 8, Queues in use: 5

Scheduler map: <default>, Index: 2

Congestion-notification: Disabled

Object	Name	Type	Index
Classifier	ipprec-compatibility	ip	13

Logical interface: ge-0/1/1.0, Index: 76

Physical interface: ge-0/1/2, Index: 148

Queues supported: 8, Queues in use: 5

Scheduler map: <default>, Index: 2

Congestion-notification: Disabled

Object	Name	Type	Index
Rewrite	ri	ieee8021p (outer)	35392
Classifier	ci	ieee8021p	583

Physical interface: ge-0/1/3, Index: 149

Queues supported: 8, Queues in use: 5

Scheduler map: <default>, Index: 2

Congestion-notification: Disabled

Object	Name	Type	Index
Classifier	ipprec-compatibility	ip	13

Logical interface: ge-0/1/3.0, Index: 77

Object	Name	Type	Index
Rewrite	custom-exp2	exp (mpls-any)	53581

Physical interface: ge-0/1/4, Index: 150

Queues supported: 8, Queues in use: 5

Scheduler map: <default>, Index: 2

Congestion-notification: Disabled			
Object	Name	Type	Index
Classifier	ipprec-compatibility	ip	13
Physical interface: ge-0/1/5, Index: 151			
Queues supported: 8, Queues in use: 5			
Scheduler map: <default>, Index: 2			
Congestion-notification: Disabled			
Object	Name	Type	Index
Classifier	ipprec-compatibility	ip	13
Physical interface: ge-0/1/6, Index: 152			
Queues supported: 8, Queues in use: 5			
Scheduler map: <default>, Index: 2			
Congestion-notification: Disabled			
Object	Name	Type	Index
Classifier	ipprec-compatibility	ip	13
Physical interface: ge-0/1/7, Index: 153			
Queues supported: 8, Queues in use: 5			
Scheduler map: <default>, Index: 2			
Congestion-notification: Disabled			
Object	Name	Type	Index
Classifier	d1	dscp	11331
Physical interface: ge-0/2/0, Index: 154			
Queues supported: 8, Queues in use: 5			
Scheduler map: <default>, Index: 2			
Congestion-notification: Disabled			
Object	Name	Type	Index
Classifier	ipprec-compatibility	ip	13
Physical interface: ge-0/2/1, Index: 155			
Queues supported: 8, Queues in use: 5			
Scheduler map: <default>, Index: 2			
Congestion-notification: Disabled			
Object	Name	Type	Index
Classifier	ipprec-compatibility	ip	13
Logical interface: ge-0/2/1.0, Index: 78			
Logical interface: ge-0/2/1.32767, Index: 79			
Physical interface: xe-0/3/0, Index: 156			
Queues supported: 8, Queues in use: 5			
Scheduler map: <default>, Index: 2			
Congestion-notification: Disabled			
Object	Name	Type	Index
Classifier	ipprec-compatibility	ip	13
Logical interface: xe-0/3/0.0, Index: 80			
Physical interface: xe-0/3/1, Index: 157			
Queues supported: 8, Queues in use: 5			
Scheduler map: <default>, Index: 2			
Congestion-notification: Disabled			
Object	Name	Type	Index
Classifier	ipprec-compatibility	ip	13
Logical interface: xe-0/3/1.0, Index: 81			

```
[edit]
user@host-g11#
```

### show class-of-service interface (PPPoE Subscriber Interface for Enhanced Subscriber Management)

```
user@host> show class-of-service interface pp0.3221225474
  Logical interface: pp0.3221225475, Index: 3221225475
Object      Name                               Type      Index
Traffic-control-profile TC_PROF_100_199_SERIES_UID1006 Output    4294967312
Scheduler-map      SMAP-1_UID1002      Output    4294967327
Rewrite-Output     ieee-rewrite         ieee8021p 60432
Rewrite-Output     rule1                ip        50463

  Adjusting application: PPPoE IA tags
    Adjustment type: absolute
    Configured shaping rate: 11000000
    Adjustment value: 5000000
    Adjustment target: node

  Adjusting application: ucac
    Adjustment type: delta
    Configured shaping rate: 5000000
    Adjustment value: 100000
    Adjustment target: node
```

## show class-of-service rewrite-rule

**Supported Platforms** [SRX Series, vSRX](#)

**Syntax** `show class-of-service rewrite-rule`  
`<name name>`  
`<type type>`

**Release Information** Command introduced before Junos OS Release 7.4.

**Description** Display the mapping of forwarding classes and loss priority to code point values.

**Options** **none**—Display all rewrite rules.

**name *name***—(Optional) Display the specified rewrite rule.

**type *type***—(Optional) Display the rewrite rule of the specified type. The rewrite rule type can be one of the following:

- **dscp**—For IPv4 traffic.
- **dscp-ipv6**—For IPv6 traffic.
- **exp**—For MPLS traffic.
- **frame-relay-de**— For Frame Relay traffic.
- **ieee-802.1**—For Layer 2 traffic.
- **inet-precedence**—For IPv4 traffic.

**Required Privilege Level** view

**Related Documentation** [• Rewrite Rules Overview](#)

**List of Sample Output** [show class-of-service rewrite-rule type dscp on page 323](#)

**Output Fields** [Table 68 on page 322](#) describes the output fields for the **show class-of-service rewrite-rule** command. Output fields are listed in the approximate order in which they appear.

**Table 68: show class-of-service rewrite-rule Output Fields**

Field Name	Field Description
Rewrite rule	Name of the rewrite rule.
Code point type	Type of rewrite rule: <b>dscp</b> , <b>dscp-ipv6</b> , <b>exp</b> , <b>frame-relay-de</b> , or <b>inet-precedence</b> .
Forwarding class	Classification of a packet affecting the forwarding, scheduling, and marking policies applied as the packet transits the router or switch.
Index	Internal index for this particular rewrite rule.

Table 68: show class-of-service rewrite-rule Output Fields (*continued*)

Field Name	Field Description
Loss priority	Loss priority for rewriting.
Code point	Code point value to rewrite.

## Sample Output

### show class-of-service rewrite-rule type dscp

```

user@host> show class-of-service rewrite-rule type dscp
Rewrite rule: dscp-default, Code point type: dscp
  Forwarding class      Loss priority      Code point
  gold                  high               000000
  silver                low                110000
  silver                high               111000
  bronze                low                001010
  bronze                high               001100
  lead                  high               101110

Rewrite rule: abc-dscp-rewrite, Code point type: dscp, Index: 3245
Forwarding class      Loss priority      Code point
  gold                low                000111
  gold                high               001010
  silver              low                110000
  silver              high               111000
  bronze              high               001100
  lead                low                101110
  lead                high               110111

```





## CHAPTER 9

# Operational Commands (Scheduling)

- [Monitoring CoS Scheduler Maps on page 325](#)
- [show class-of-service drop-profile](#)
- [show class-of-service forwarding-table](#)
- [show class-of-service forwarding-table drop-profile](#)
- [show class-of-service forwarding-table scheduler-map](#)
- [show class-of-service interface](#)
- [show class-of-service scheduler-map](#)
- [show interfaces queue](#)
- [show interfaces voq](#)

### Monitoring CoS Scheduler Maps

---

**Supported Platforms** [EX4600, OCX1100, QFabric System, QFX Series standalone switches](#)

**Purpose** Use the monitoring functionality to display assignments of CoS forwarding classes to schedulers.

**Action** To monitor CoS scheduler maps in the CLI, enter the CLI command:

```
user@switch> show class-of-service scheduler-map
```

To monitor a specific scheduler map in the CLI, enter the CLI command:

```
user@switch> show class-of-service scheduler-map scheduler-map-name
```

**Meaning** [Table 69 on page 325](#) summarizes key output fields for CoS scheduler maps.

**Table 69: Summary of Key CoS Scheduler Maps Output Fields**

Field	Values
Scheduler map	Name of a scheduler map that maps forwarding classes to schedulers.
Index	Index of a specific object—scheduler maps, schedulers, or drop profiles.

Table 69: Summary of Key CoS Scheduler Maps Output Fields (*continued*)

Field	Values
Scheduler	Name of a scheduler that controls queue properties such as bandwidth and scheduling priority.
Forwarding class	Name(s) of the forwarding class(es) to which the scheduler is mapped.
Transmit rate	Guaranteed minimum bandwidth configured on the queue mapped to the scheduler. On strict-high priority queues on QFX10000 switches, defines the maximum amount of traffic on the queue that is treated as strict-high priority traffic.
Priority	<p>Scheduling priority of traffic on a queue:</p> <ul style="list-style-type: none"> <li>• <b>strict-high</b>—Packets on a strict-high priority queue are transmitted first, before all other traffic, up to the configured maximum bandwidth (shaping rate). On QFX3500, QFX3600, EX4600, and OCX series switches, and on QFabric system, only one queue can be configured as <b>strict-high</b> priority. On QFX10000 switches, you can configure more than one strict-high priority queue.</li> <li>• <b>low</b>—Packets in this queue are transmitted after packets in the <b>strict-high</b> queue.</li> </ul>
Drop Profiles	Name and index of a drop profile that is mapped to a specific loss priority and protocol pair. The drop profile determines the way best effort queues drop packets during periods of congestion.
Loss Priority	Packet loss priority mapped to the drop profile. You can configure different drop profiles for <b>low</b> , <b>medium-high</b> , and <b>high</b> loss priority traffic.
Protocol	Transport protocol of the drop profile for the particular priority.
Name	Name of the drop profile.

## show class-of-service drop-profile

<b>Supported Platforms</b>	EX Series, M Series, MX Series, OCX1100, PTX Series, QFabric System, QFX Series standalone switches, T Series
<b>Syntax</b>	show class-of-service drop-profile <profile-name <i>profile-name</i> >
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Display data points for each class-of-service (CoS) random early detection (RED) drop profile.
<b>Options</b>	<b>none</b> —Display all drop profiles.  <b>profile-name <i>profile-name</i></b> —(Optional) Display the specified profile only.
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show class-of-service drop-profile on page 328</a> <a href="#">show class-of-service drop-profile (EX4200 Switch) on page 328</a> <a href="#">show class-of-service drop-profile (EX8200 Switch) on page 328</a>
<b>Output Fields</b>	<a href="#">Table 70 on page 327</a> describes the output fields for the <b>show class-of-service drop-profile</b> command. Output fields are listed in the approximate order in which they appear.

**Table 70: show class-of-service drop-profile Output Fields**

Field Name	Field Description
Drop profile	Name of a drop profile.
Type	Type of drop profile: <ul style="list-style-type: none"> <li><b>discrete</b> (default)</li> <li><b>interpolated</b> (EX8200 switches, QFX Series switches, QFabric systems, EX4600 switches, OCX Series switches only)</li> </ul>
Index	Internal index of this drop profile.
Fill Level	Percentage fullness of a queue.
Drop probability	Drop probability at this fill level.

## Sample Output

### show class-of-service drop-profile

```
user@host> show class-of-service drop-profile
Drop profile: <default-drop-profile>, Type: discrete, Index: 1
  Fill level    Drop probability
    100         100
Drop profile: user-drop-profile, Type: interpolated, Index: 2989
  Fill level    Drop probability
     0           0
     1           1
     2           2
     4           4
     5           5
     6           6
     8           8
    10          10
    12          15
    14          20
    15          23
... 64 entries total
    90          96
    92          96
    94          97
    95          98
    96          98
    98          99
    99          99
   100         100
```

### show class-of-service drop-profile (EX4200 Switch)

```
user@switch> show class-of-service drop-profile
Drop profile: <default-drop-profile>, Type: discrete, Index: 1
  Fill level
    100
Drop profile: dp1, Type: discrete, Index: 40496
  Fill level
    10
```

### show class-of-service drop-profile (EX8200 Switch)

```
user@switch> show class-of-service drop-profile
Drop profile: <default-drop-profile>, Type: discrete, Index: 1
  Fill level    Drop probability
    100         100
Drop profile: dp1, Type: interpolated, Index: 40496
  Fill level    Drop probability
     0           0
     1          80
     2          90
     4          90
     5          90
     6          90
     8          90
    10          90
    12          91
    14          91
    15          91
    16          91
```

18	91
20	91
22	92
24	92
25	92
26	92
28	92
30	92
32	93
34	93
35	93
36	93
38	93
40	93
42	94
44	94
45	94
46	94
48	94
49	94
51	95
52	95
54	95
55	95
56	95
58	95
60	95
62	96
64	96
65	96
66	96
68	96
70	96
72	97
74	97
75	97
76	97
78	97
80	97
82	98
84	98
85	98
86	98
88	98
90	98
92	99
94	99
95	99
96	99
98	99
99	99
100	100
Drop profile: dp2, Type: discrete, Index: 40499	
Fill level	Drop probability
10	5
50	50

## show class-of-service forwarding-table

---

Supported Platforms	EX Series, M Series, MX Series, OCX1100, PTX Series, QFabric System, QFX Series standalone switches, T Series
List of Syntax	<a href="#">Syntax on page 330</a> <a href="#">Syntax (TX Matrix and TX Matrix Plus Router) on page 330</a>
Syntax	show class-of-service forwarding-table
Syntax (TX Matrix and TX Matrix Plus Router)	show class-of-service forwarding-table <lcc number>   <sfc number>
Release Information	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
Description	Display the entire class-of-service (CoS) configuration as it exists in the forwarding table. Executing this command is equivalent to executing all <b>show class-of-service forwarding-table</b> commands in succession.
Options	<p><b>lcc number</b>—(TX Matrix and TX Matrix Plus router only) (Optional) On a TX Matrix router, display the forwarding table configuration for a specific T640 router (or line-card chassis) configured in a routing matrix. On a TX Matrix Plus router, display the forwarding table configuration for a specific router (or line-card chassis) configured in the routing matrix.</p> <p>Replace <i>number</i> with the following values depending on the LCC configuration:</p> <ul style="list-style-type: none"><li>• 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.</li><li>• 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.</li><li>• 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.</li><li>• 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.</li></ul> <p><b>sfc number</b>—(TX Matrix Plus routers only) (Optional) Display the forwarding table configuration for the TX Matrix Plus router. Replace <i>number</i> with 0.</p>
Required Privilege Level	view
List of Sample Output	<a href="#">show class-of-service forwarding-table on page 331</a> <a href="#">show class-of-service forwarding-table lcc (TX Matrix Plus Router) on page 332</a>
Output Fields	See the output field descriptions for <b>show class-of-service forwarding-table</b> commands:

- `show class-of-service forwarding-table classifier`
- `show class-of-service forwarding-table classifier mapping`
- `show class-of-service forwarding-table drop-profile`
- `show class-of-service forwarding-table fabric scheduler-map`
- `show class-of-service forwarding-table rewrite-rule`
- `show class-of-service forwarding-table rewrite-rule mapping`
- `show class-of-service forwarding-table scheduler-map`

## Sample Output

### show class-of-service forwarding-table

```

user@host> show class-of-service forwarding-table
Classifier table index: 9, # entries: 8, Table type: EXP
Entry #   Code point   Forwarding-class #   PLP
0         000           0                   0
1         001           0                   1
2         010           1                   0
3         011           1                   1
4         100           2                   0
5         101           2                   1
6         110           3                   0
7         111           3                   1

Interface      Index      Table Index/      Q num      Table type
sp-0/0/0.1001   66         11                11         IPv4 precedence
sp-0/0/0.2001   67         11                11         IPv4 precedence
sp-0/0/0.16383  68         11                11         IPv4 precedence
fe-0/0/0.0      69         11                11         IPv4 precedence

Interface: sp-0/0/0 (Index: 129, Map index: 2, Map type: FINAL,
Num of queues: 2):
  Entry 0 (Scheduler index: 16, Forwarding-class #: 0):
    Tx rate: 0 Kb (95%), Buffer size: 95 percent
  Priority low
    PLP high: 1, PLP low: 1, PLP medium-high: 1, PLP medium-low: 1
  Entry 1 (Scheduler index: 18, Forwarding-class #: 3):
    Tx rate: 0 Kb (5%), Buffer size: 5 percent
  Priority low
    PLP high: 1, PLP low: 1, PLP medium-high: 1, PLP medium-low: 1

Interface: fe-0/0/0 (Index: 137, Map index: 2, Map type: FINAL,
Num of queues: 2):
  Entry 0 (Scheduler index: 16, Forwarding-class #: 0):
    Tx rate: 0 Kb (95%), Buffer size: 95 percent
  Priority low
    PLP high: 1, PLP low: 1, PLP medium-high: 1, PLP medium-low: 1
  Entry 1 (Scheduler index: 18, Forwarding-class #: 3):
    Tx rate: 0 Kb (5%), Buffer size: 5 percent
  Priority low
    PLP high: 1, PLP low: 1, PLP medium-high: 1, PLP medium-low: 1

Interface: fe-0/0/1 (Index: 138, Map index: 2, Map type: FINAL,
Num of queues: 2):
  Entry 0 (Scheduler index: 16, Forwarding-class #: 0):

```

```

    Tx rate: 0 Kb (95%), Buffer size: 95 percent
Priority low
    PLP high: 1, PLP low: 1, PLP medium-high: 1, PLP medium-low: 1
    Entry 1 (Scheduler index: 18, Forwarding-class #: 3):
    Tx rate: 0 Kb (5%), Buffer size: 5 percent
Priority low
    PLP high: 1, PLP low: 1, PLP medium-high: 1, PLP medium-low: 1

```

```
...
```

```
RED drop profile index: 1, # entries: 1
```

```
Drop
```

Entry	Fullness(%)	Probability(%)
0	100	100

### show class-of-service forwarding-table lcc (TX Matrix Plus Router)

```

user@host> show class-of-service forwarding-table lcc 0
lcc0-re0:

```

```
-----
```

```
Classifier table index: 9, # entries: 64, Table type: IPv6 DSCP
```

Entry #	Code point	Forwarding-class #	PLP
0	000000	0	0
1	000001	0	0
2	000010	0	0
3	000011	0	0
4	000100	0	0
5	000101	0	0
6	000110	0	0
7	000111	0	0
8	001000	0	0
9	001001	0	0
10	001010	0	0
11	001011	0	0
12	001100	0	0
13	001101	0	0
14	001110	0	0
15	001111	0	0
16	010000	0	0
17	010001	0	0
18	010010	0	0
19	010011	0	0
20	010100	0	0
21	010101	0	0
22	010110	0	0
23	010111	0	0
24	011000	0	0
25	011001	0	0
26	011010	0	0
27	011011	0	0
28	011100	0	0
29	011101	0	0
30	011110	0	0
31	011111	0	0
32	100000	0	0
33	100001	0	0
34	100010	0	0
35	100011	0	0
36	100100	0	0
37	100101	0	0



38	100110	0	0
39	100111	0	0
40	101000	0	0
41	101001	0	0
42	101010	0	0
43	101011	0	0
44	101100	0	0
45	101101	0	0
46	101110	0	0
...			

## show class-of-service forwarding-table drop-profile

<b>Supported Platforms</b>	EX Series, M Series, MX Series, OCX1100, PTX Series, QFabric System, QFX Series standalone switches, T Series
<b>Syntax</b>	show class-of-service forwarding-table drop-profile
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	Display the data points of all random early detection (RED) drop profiles as they exist in the forwarding table.
<b>Options</b>	This command has no options.
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show class-of-service forwarding-table drop-profile on page 334</a>
<b>Output Fields</b>	<a href="#">Table 71 on page 334</a> describes the output fields for the <b>show class-of-service forwarding-table drop-profile</b> command. Output fields are listed in the approximate order in which they appear.

**Table 71: show class-of-service forwarding-table drop-profile Output Fields**

Field Name	Field Description
RED drop profile index	Index of this drop profile.
# entries	Number of entries in a particular RED drop profile index.
Entry	Drop profile entry number.
Fullness(%)	Percentage fullness of a queue.
Drop probability(%)	Drop probability at this fill level.

## Sample Output

### show class-of-service forwarding-table drop-profile

```

user@host> show class-of-service forwarding-table drop-profile
RED drop profile index: 4, # entries: 1
      Drop
Entry  Fullness(%)  Probability(%)
  0         100         100

RED drop profile index: 8742, # entries: 3
      Drop
Entry  Fullness(%)  Probability(%)

```

0	10	10
1	20	20
2	30	30

RED drop profile index: 24627, # entries: 64

Entry	Fullness(%)	Drop Probability(%)
0	0	0
1	1	1
2	2	2
3	4	4
...		
61	98	99
62	99	99
63	100	100

RED drop profile index: 25393, # entries: 64

Entry	Fullness(%)	Drop Probability(%)
0	0	0
1	1	1
2	2	2
3	4	4
...		
61	98	98
62	99	99
63	100	100

## show class-of-service forwarding-table scheduler-map

<b>Supported Platforms</b>	EX Series, M Series, MX Series, OCX1100, PTX Series, QFabric System, QFX Series standalone switches, T Series
<b>Syntax</b>	show class-of-service forwarding-table scheduler-map
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.
<b>Description</b>	For each physical interface, display the scheduler map information as it exists in the forwarding table.
<b>Options</b>	This command has no options.
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show class-of-service forwarding-table scheduler-map on page 337</a>
<b>Output Fields</b>	<a href="#">Table 72 on page 336</a> describes the output fields for the <b>show class-of-service forwarding-table scheduler-map</b> command. Output fields are listed in the approximate order in which they appear.

Table 72: show class-of-service forwarding-table scheduler-map Output Fields

Field Name	Field Description
Interface	Name of the physical interface.
Index	Physical interface index.
Map index	Scheduler map index.
Num of queues	Number of queues defined in this scheduler map.
Entry	Number of this entry in the scheduler map.
Scheduler index	Scheduler policy index.
Forwarding-class #	Forwarding class number to which this entry is applied.
Tx rate	Configured transmit rate of the scheduler (in bps). The rate is a percentage of the total interface bandwidth, or the keyword <b>remainder</b> , which indicates that the scheduler receives the remaining bandwidth of the interface.
Max buffer delay	Amount of transmit delay (in milliseconds) or buffer size of the queue. This amount is a percentage of the total interface buffer allocation or the keyword <b>remainder</b> , which indicates that the buffer is sized according to what remains after other scheduler buffer allocations.

Table 72: show class-of-service forwarding-table scheduler-map Output Fields (*continued*)

Field Name	Field Description
Priority	<ul style="list-style-type: none"> <li><b>high</b>—Queue priority is high.</li> <li><b>low</b>—Queue priority is low.</li> </ul>
PLP high	Drop profile index for a high packet loss priority profile.
PLP low	Drop profile index for a low packet loss priority profile.
PLP medium-high	Drop profile index for a medium-high packet loss priority profile.
PLP medium-low	Drop profile index for a medium-low packet loss priority profile.
TCP PLP high	Drop profile index for a high TCP packet loss priority profile.
TCP PLP low	Drop profile index for a low TCP packet loss priority profile.
Policy is exact	If this line appears in the output, exact rate limiting is enabled. Otherwise, no rate limiting is enabled.

## Sample Output

### show class-of-service forwarding-table scheduler-map

```

user@host> show class-of-service forwarding-table scheduler-map
Interface: so-5/0/0 (Index: 9, Map index: 17638, Num of queues: 2):
  Entry 0 (Scheduler index: 6090, Forwarding-class #: 0):
    Tx rate: 0 Kb (30%), Max buffer delay: 39 bytes (0%)
    Priority low
    PLP high: 25393, PLP low: 24627, TCP PLP high: 25393, TCP PLP low: 8742
    Policy is exact
  Entry 1 (Scheduler index: 38372, Forwarding-class #: 1):
    Traffic chunk: Max = 0 bytes, Min = 0 bytes
    Tx rate: 0 Kb (40%), Max buffer delay: 68 bytes (0%)
    Priority high
    PLP high: 25393, PLP low: 24627, TCP PLP high: 25393, TCP PLP low: 8742

Interface: at-6/1/0 (Index: 10, Map index: 17638, Num of queues: 2):
  Entry 0 (Scheduler index: 6090, Forwarding-class #: 0):
    Traffic chunk: Max = 0 bytes, Min = 0 bytes
    Tx rate: 0 Kb (30%), Max buffer delay: 39 bytes (0%)
    Priority high
    PLP high: 25393, PLP low: 24627, TCP PLP high: 25393, TCP PLP low: 8742
  Entry 1 (Scheduler index: 38372, Forwarding-class #: 1):
    Traffic chunk: Max = 0 bytes, Min = 0 bytes
    Tx rate: 0 Kb (40%), Max buffer delay: 68 bytes (0%)
    Priority low
    PLP high: 25393, PLP low: 24627, TCP PLP high: 25393, TCP PLP low: 8742

```

## show class-of-service interface

**Supported Platforms** ACX Series, QFX Series

**Syntax** show class-of-service interface  
<comprehensive | detail> <interface-name>

**Release Information** Command introduced before Junos OS Release 7.4.  
Command introduced in Junos OS Release 9.0 for EX Series switches.  
Forwarding class map information added in Junos OS Release 9.4.  
Command introduced in Junos OS Release 11.1 for the QFX Series.  
Command introduced in Junos OS Release 12.1 for the PTX Series Packet Transport Switches.  
Command introduced in Junos OS Release 12.2 for the ACX Series Universal Access routers.  
Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.  
Options **detail** and **comprehensive** introduced in Junos OS Release 11.4.  
Command introduced in Junos OS Release 15.1 on MX Series routers for enhanced subscriber management.

**Description** Display the logical and physical interface associations for the classifier, rewrite rules, and scheduler map objects.



**NOTE:** On routing platforms with dual Routing Engines, running this command on the backup Routing Engine, with or without any of the available options, is not supported and produces the following error message:

**error: the class-of-service subsystem is not running**

**Options** **none**—Display CoS associations for all physical and logical interfaces.

**comprehensive**—(M Series, MX Series, and T Series routers) (Optional) Display comprehensive quality-of-service (QoS) information about all physical and logical interfaces.

**detail**—(M Series, MX Series, and T Series routers) (Optional) Display QoS and CoS information based on the interface.

If the **interface** *interface-name* is a physical interface, the output includes:

- Brief QoS information about the physical interface
- Brief QoS information about the logical interface
- CoS information about the physical interface
- Brief information about filters or policers of the logical interface
- Brief CoS information about the logical interface

If the **interface** *interface-name* is a logical interface, the output includes:

- Brief QoS information about the logical interface
- Information about filters or policers for the logical interface
- CoS information about the logical interface

**interface-name**—(Optional) Display class-of-service (CoS) associations for the specified interface.

**none**—Display CoS associations for all physical and logical interfaces.

**Required Privilege Level**

view

**Related Documentation**

- *Verifying and Managing Junos OS Enhanced Subscriber Management*

**List of Sample Output**

[show class-of-service interface \(Physical\) on page 350](#)  
[show class-of-service interface \(Logical\) on page 351](#)  
[show class-of-service interface \(Gigabit Ethernet\) on page 351](#)  
[show class-of-service interface \(ANCP\) on page 351](#)  
[show class-of-service interface \(PPPoE Interface\) on page 351](#)  
[show class-of-service interface \(T4000 Routers with Type 5 FPCs\) on page 351](#)  
[show class-of-service interface detail on page 352](#)  
[show class-of-service interface comprehensive on page 352](#)  
[show class-of-service interface \(ACX Series Routers\) on page 363](#)  
[show class-of-service interface \(PPPoE Subscriber Interface for Enhanced Subscriber Management\) on page 366](#)

**Output Fields** [Table 48 on page 203](#) describes the output fields for the **show class-of-service interface** command. Output fields are listed in the approximate order in which they appear.

**Table 73: show class-of-service interface Output Fields**

Field Name	Field Description	
Physical interface	Name of a physical interface.	
Index	Index of this interface or the internal index of this object.  (Enhanced subscriber management for MX Series routers) Index values for dynamic CoS traffic control profiles and dynamic scheduler maps are larger for enhanced subscriber management than they are for legacy subscriber management.	
Dedicated Queues	Status of dedicated queues configured on an interface. Supported only on Trio MPC/MIC interfaces on MX Series routers.	Number of queues you can configure on the interface.
Queues supported	Number of queues you can configure on the interface.	
Queues in use	Number of queues currently configured.	

Table 73: show class-of-service interface Output Fields (*continued*)

Field Name	Field Description
<b>Total non-default queues created</b>	Number of queues created in addition to the default queues. Supported only on Trio MPC/MIC interfaces on MX Series routers.  (Enhanced subscriber management for MX Series routers) This field is not displayed for enhanced subscriber management.
<b>Rewrite Input IEEE Code-point</b>	(QFX Series only) IEEE 802.1p code point (priority) rewrite value. Incoming traffic from the Fibre Channel (FC) SAN is classified into the forwarding class specified in the native FC interface (NP_Port) fixed classifier and uses the priority specified as the IEEE 802.1p rewrite value.
<b>Shaping rate</b>	Maximum transmission rate on the physical interface. You can configure the shaping rate on the physical interface, or on the logical interface, but not on both. Therefore, the <b>Shaping rate</b> field is displayed for either the physical interface or the logical interface.
<b>Scheduler map</b>	Name of the output scheduler map associated with this interface.  (Enhanced subscriber management for MX Series routers) The name of the dynamic scheduler map object is associated with a generated UID (for example, <b>SMAP-1_UID1002</b> ) instead of with a subscriber interface.
<b>Scheduler map forwarding class sets</b>	(QFX Series only) Name of the output fabric scheduler map associated with a QFabric system Interconnect device interface.
<b>Input shaping rate</b>	For Gigabit Ethernet IQ2 PICs, maximum transmission rate on the input interface.
<b>Input scheduler map</b>	For Gigabit Ethernet IQ2 PICs, name of the input scheduler map associated with this interface.
<b>Chassis scheduler map</b>	Name of the scheduler map associated with the packet forwarding component queues.
<b>Rewrite</b>	Name and type of the rewrite rules associated with this interface.
<b>Traffic-control-profile</b>	Name of the associated traffic control profile.  (Enhanced subscriber management for MX Series routers) The name of the dynamic traffic control profile object is associated with a generated UID (for example, <b>TC_PROF_100_199_SERIES_UID1006</b> ) instead of with a subscriber interface.
<b>Classifier</b>	Name and type of classifiers associated with this interface.
<b>Forwarding-class-map</b>	Name of the forwarding map associated with this interface.
<b>Congestion-notification</b>	(QFX Series and EX4600 switches only) Congestion notification state, <b>enabled</b> or <b>disabled</b> .
<b>Logical interface</b>	Name of a logical interface.
<b>Object</b>	Category of an object: <b>Classifier</b> , <b>Fragmentation-map</b> (for LSQ interfaces only), <b>Scheduler-map</b> , <b>Rewrite</b> , <b>Translation Table</b> (for IQE PICs only), or <b>traffic-class-map</b> (for T4000 routers with Type 5 FPCs).
<b>Name</b>	Name of an object.



Table 73: show class-of-service interface Output Fields (*continued*)

Field Name	Field Description
<b>Type</b>	Type of an object: <b>dscp</b> , <b>dscp-ipv6</b> , <b>exp</b> , <b>ieee-802.1</b> , <b>ip</b> , <b>inet-precedence</b> , or <b>ieee-802.1ad</b> (for traffic class map on T4000 routers with Type 5 FPCs)..
<b>Link-level type</b>	Encapsulation on the physical interface.
<b>MTU</b>	MTU size on the physical interface.
<b>Speed</b>	Speed at which the interface is running.
<b>Loopback</b>	Whether loopback is enabled and the type of loopback.
<b>Source filtering</b>	Whether source filtering is enabled or disabled.
<b>Flow control</b>	Whether flow control is enabled or disabled.
<b>Auto-negotiation</b>	(Gigabit Ethernet interfaces) Whether autonegotiation is enabled or disabled.
<b>Remote-fault</b>	(Gigabit Ethernet interfaces) Remote fault status. <ul style="list-style-type: none"> <li>• <b>Online</b>—Autonegotiation is manually configured as online.</li> <li>• <b>Offline</b>—Autonegotiation is manually configured as offline.</li> </ul>
<b>Device flags</b>	The <b>Device flags</b> field provides information about the physical device and displays one or more of the following values: <ul style="list-style-type: none"> <li>• <b>Down</b>—Device has been administratively disabled.</li> <li>• <b>Hear-Own-Xmit</b>—Device receives its own transmissions.</li> <li>• <b>Link-Layer-Down</b>—The link-layer protocol has failed to connect with the remote endpoint.</li> <li>• <b>Loopback</b>—Device is in physical loopback.</li> <li>• <b>Loop-Detected</b>—The link layer has received frames that it sent, thereby detecting a physical loopback.</li> <li>• <b>No-Carrier</b>—On media that support carrier recognition, no carrier is currently detected.</li> <li>• <b>No-Multicast</b>—Device does not support multicast traffic.</li> <li>• <b>Present</b>—Device is physically present and recognized.</li> <li>• <b>Promiscuous</b>—Device is in promiscuous mode and recognizes frames addressed to all physical addresses on the media.</li> <li>• <b>Quench</b>—Transmission on the device is quenched because the output buffer is overflowing.</li> <li>• <b>Recv-All-Multicasts</b>—Device is in multicast promiscuous mode and therefore provides no multicast filtering.</li> <li>• <b>Running</b>—Device is active and enabled.</li> </ul>

Table 73: show class-of-service interface Output Fields (*continued*)

Field Name	Field Description
<b>Interface flags</b>	<p>The <b>Interface flags</b> field provides information about the physical interface and displays one or more of the following values:</p> <ul style="list-style-type: none"> <li>• <b>Admin-Test</b>—Interface is in test mode and some sanity checking, such as loop detection, is disabled.</li> <li>• <b>Disabled</b>—Interface is administratively disabled.</li> <li>• <b>Down</b>—A hardware failure has occurred.</li> <li>• <b>Hardware-Down</b>—Interface is nonfunctional or incorrectly connected.</li> <li>• <b>Link-Layer-Down</b>—Interface keepalives have indicated that the link is incomplete.</li> <li>• <b>No-Multicast</b>—Interface does not support multicast traffic.</li> <li>• <b>No-receive No-transmit</b>—Passive monitor mode is configured on the interface.</li> <li>• <b>Point-To-Point</b>—Interface is point-to-point.</li> <li>• <b>Pop all MPLS labels from packets of depth</b>—MPLS labels are removed as packets arrive on an interface that has the <b>pop-all-labels</b> statement configured. The depth value can be one of the following: <ul style="list-style-type: none"> <li>• <b>1</b>—Takes effect for incoming packets with one label only.</li> <li>• <b>2</b>—Takes effect for incoming packets with two labels only.</li> <li>• <b>[ 1 2 ]</b>—Takes effect for incoming packets with either one or two labels.</li> </ul> </li> <li>• <b>Promiscuous</b>—Interface is in promiscuous mode and recognizes frames addressed to all physical addresses.</li> <li>• <b>Recv-All-Multicasts</b>—Interface is in multicast promiscuous mode and provides no multicast filtering.</li> <li>• <b>SNMP-Traps</b>—SNMP trap notifications are enabled.</li> <li>• <b>Up</b>—Interface is enabled and operational.</li> </ul>
<b>Flags</b>	<p>The <b>Logical interface flags</b> field provides information about the logical interface and displays one or more of the following values:</p> <ul style="list-style-type: none"> <li>• <b>ACFC Encapsulation</b>—Address control field Compression (ACFC) encapsulation is enabled (negotiated successfully with a peer).</li> <li>• <b>Device-down</b>—Device has been administratively disabled.</li> <li>• <b>Disabled</b>—Interface is administratively disabled.</li> <li>• <b>Down</b>—A hardware failure has occurred.</li> <li>• <b>Clear-DF-Bit</b>—GRE tunnel or IPsec tunnel is configured to clear the Don't Fragment (DF) bit.</li> <li>• <b>Hardware-Down</b>—Interface protocol initialization failed to complete successfully.</li> <li>• <b>PFC</b>—Protocol field compression is enabled for the PPP session.</li> <li>• <b>Point-To-Point</b>—Interface is point-to-point.</li> <li>• <b>SNMP-Traps</b>—SNMP trap notifications are enabled.</li> <li>• <b>Up</b>—Interface is enabled and operational.</li> </ul>
<b>Encapsulation</b>	Encapsulation on the logical interface.
<b>Admin</b>	Administrative state of the interface ( <b>Up</b> or <b>Down</b> ).
<b>Link</b>	Status of physical link ( <b>Up</b> or <b>Down</b> ).
<b>Proto</b>	Protocol configured on the interface.

Table 73: show class-of-service interface Output Fields (*continued*)

Field Name	Field Description
<b>Input Filter</b>	Names of any firewall filters to be evaluated when packets are received on the interface, including any filters attached through activation of dynamic service.
<b>Output Filter</b>	Names of any firewall filters to be evaluated when packets are transmitted on the interface, including any filters attached through activation of dynamic service.
<b>Link flags</b>	Provides information about the physical link and displays one or more of the following values: <ul style="list-style-type: none"> <li>• <b>ACFC</b>—Address control field compression is configured. The Point-to-Point Protocol (PPP) session negotiates the ACFC option.</li> <li>• <b>Give-Up</b>—Link protocol does not continue connection attempts after repeated failures.</li> <li>• <b>Loose-LCP</b>—PPP does not use the Link Control Protocol (LCP) to indicate whether the link protocol is operational.</li> <li>• <b>Loose-LMI</b>—Frame Relay does not use the Local Management Interface (LMI) to indicate whether the link protocol is operational.</li> <li>• <b>Loose-NCP</b>—PPP does not use the Network Control Protocol (NCP) to indicate whether the device is operational.</li> <li>• <b>Keepalives</b>—Link protocol keepalives are enabled.</li> <li>• <b>No-Keepalives</b>—Link protocol keepalives are disabled.</li> <li>• <b>PFC</b>—Protocol field compression is configured. The PPP session negotiates the PFC option.</li> </ul>
<b>Hold-times</b>	Current interface hold-time up and hold-time down, in milliseconds.
<b>CoS queues</b>	Number of CoS queues configured.
<b>Last flapped</b>	Date, time, and how long ago the interface went from down to up. The format is <b>Last flapped: year-month-day hour:minute:second:timezone (hour:minute:second ago)</b> . For example, <b>Last flapped: 2002-04-26 10:52:40 PDT (04:33:20 ago)</b> .
<b>Statistics last cleared</b>	Number and rate of bytes and packets received and transmitted on the physical interface. <ul style="list-style-type: none"> <li>• <b>Input bytes</b>—Number of bytes received on the interface.</li> <li>• <b>Output bytes</b>—Number of bytes transmitted on the interface.</li> <li>• <b>Input packets</b>—Number of packets received on the interface.</li> <li>• <b>Output packets</b>—Number of packets transmitted on the interface.</li> </ul>
<b>IPv6 transit statistics</b>	Number of IPv6 transit bytes and packets received and transmitted on the logical interface if IPv6 statistics tracking is enabled.

Table 73: show class-of-service interface Output Fields (*continued*)

Field Name	Field Description
<b>Input errors</b>	<p>Input errors on the interface. The labels are explained in the following list:</p> <ul style="list-style-type: none"> <li>• <b>Errors</b>—Sum of the incoming frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the input queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> <li>• <b>Framing errors</b>—Number of packets received with an invalid frame checksum (FCS).</li> <li>• <b>Runts</b>—Number of frames received that are smaller than the runt threshold.</li> <li>• <b>Giants</b>—Number of frames received that are larger than the giant threshold.</li> <li>• <b>Bucket Drops</b>—Drops resulting from the traffic load exceeding the interface transmit or receive leaky bucket configuration.</li> <li>• <b>Policed discards</b>—Number of frames that the incoming packet match code discarded because they were not recognized or not of interest. Usually, this field reports protocols that Junos OS does not handle.</li> <li>• <b>L3 incompletes</b>—Number of incoming packets discarded because they failed Layer 3 (usually IPv4) sanity checks of the header. For example, a frame with less than 20 bytes of available IP header is discarded. Layer 3 incomplete errors can be ignored by configuring the <b>ignore-l3-incompletes</b> statement.</li> <li>• <b>L2 channel errors</b>—Number of times the software did not find a valid logical interface for an incoming frame.</li> <li>• <b>L2 mismatch timeouts</b>—Number of malformed or short packets that caused the incoming packet handler to discard the frame as unreadable.</li> <li>• <b>HS link CRC errors</b>—Number of errors on the high-speed links between the ASICs responsible for handling the router interfaces.</li> <li>• <b>HS link FIFO overflows</b>—Number of FIFO overflows on the high-speed links between the ASICs responsible for handling the router interfaces.</li> </ul>
<b>Output errors</b>	<p>Output errors on the interface. The labels are explained in the following list:</p> <ul style="list-style-type: none"> <li>• <b>Carrier transitions</b>—Number of times the interface has gone from <b>down</b> to <b>up</b>. This number does not normally increment quickly, increasing only when the cable is unplugged, the far-end system is powered down and up, or another problem occurs. If the number of carrier transitions increments quickly (perhaps once every 10 seconds), the cable, the far-end system, or the PIC is malfunctioning.</li> <li>• <b>Errors</b>—Sum of the outgoing frame aborts and FCS errors.</li> <li>• <b>Drops</b>—Number of packets dropped by the output queue of the I/O Manager ASIC. If the interface is saturated, this number increments once for every packet that is dropped by the ASIC's RED mechanism.</li> </ul> <p><b>NOTE:</b> Due to accounting space limitations on certain Type 3 FPCs (which are supported in M320 and T640 routers), the <b>Drops</b> field does not always use the correct value for queue 6 or queue 7 for interfaces on 10-port 1-Gigabit Ethernet PICs.</p> <ul style="list-style-type: none"> <li>• <b>Aged packets</b>—Number of packets that remained in shared packet SDRAM so long that the system automatically purged them. The value in this field should never increment. If it does, it is most likely a software bug or possibly malfunctioning hardware.</li> <li>• <b>HS link FIFO underflows</b>—Number of FIFO underflows on the high-speed links between the ASICs responsible for handling the router interfaces.</li> <li>• <b>MTU errors</b>—Number of packets whose size exceeds the MTU of the interface.</li> </ul>
<b>Egress queues</b>	Total number of egress queues supported on the specified interface.

Table 73: show class-of-service interface Output Fields (*continued*)

Field Name	Field Description
<b>Queue counters</b>	<p>CoS queue number and its associated user-configured forwarding class name.</p> <ul style="list-style-type: none"> <li>• <b>Queued packets</b>—Number of queued packets.</li> <li>• <b>Transmitted packets</b>—Number of transmitted packets.</li> <li>• <b>Dropped packets</b>—Number of packets dropped by the ASIC's RED mechanism.</li> </ul> <p><b>NOTE:</b> Due to accounting space limitations on certain Type 3 FPCs (which are supported in M320 and T640 routers), the <b>Dropped packets</b> field does not always display the correct value for queue 6 or queue 7 for interfaces on 10-port 1-Gigabit Ethernet PICs.</p>
<b>SONET alarms</b> <b>SONET defects</b>	<p>(SONET) SONET media-specific alarms and defects that prevent the interface from passing packets. When a defect persists for a certain period, it is promoted to an alarm. Based on the router configuration, an alarm can ring the red or yellow alarm bell on the router or light the red or yellow alarm LED on the craft interface. See these fields for possible alarms and defects: <b>SONET PHY</b>, <b>SONET section</b>, <b>SONET line</b>, and <b>SONET path</b>.</p>
<b>SONET PHY</b>	<p>Counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. A state other than <b>OK</b> indicates a problem.</li> </ul> <p>The <b>SONET PHY</b> field has the following subfields:</p> <ul style="list-style-type: none"> <li>• <b>PLL Lock</b>—Phase-locked loop</li> <li>• <b>PHY Light</b>—Loss of optical signal</li> </ul>
<b>SONET section</b>	<p>Counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. A state other than <b>OK</b> indicates a problem.</li> </ul> <p>The <b>SONET section</b> field has the following subfields:</p> <ul style="list-style-type: none"> <li>• <b>BIP-BI</b>—Bit interleaved parity for SONET section overhead</li> <li>• <b>SEF</b>—Severely errored framing</li> <li>• <b>LOS</b>—Loss of signal</li> <li>• <b>LOF</b>—Loss of frame</li> <li>• <b>ES-S</b>—Errored seconds (section)</li> <li>• <b>SES-S</b>—Severely errored seconds (section)</li> <li>• <b>SEFS-S</b>—Severely errored framing seconds (section)</li> </ul>

Table 73: show class-of-service interface Output Fields (*continued*)

Field Name	Field Description
<b>SONET line</b>	<p>Active alarms and defects, plus counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. A state other than <b>OK</b> indicates a problem.</li> </ul> <p>The <b>SONET line</b> field has the following subfields:</p> <ul style="list-style-type: none"> <li>• <b>BIP-B2</b>—Bit interleaved parity for SONET line overhead</li> <li>• <b>REI-L</b>—Remote error indication (near-end line)</li> <li>• <b>RDI-L</b>—Remote defect indication (near-end line)</li> <li>• <b>AIS-L</b>—Alarm indication signal (near-end line)</li> <li>• <b>BERR-SF</b>—Bit error rate fault (signal failure)</li> <li>• <b>BERR-SD</b>—Bit error rate defect (signal degradation)</li> <li>• <b>ES-L</b>—Errored seconds (near-end line)</li> <li>• <b>SES-L</b>—Severely errored seconds (near-end line)</li> <li>• <b>UAS-L</b>—Unavailable seconds (near-end line)</li> <li>• <b>ES-LFE</b>—Errored seconds (far-end line)</li> <li>• <b>SES-LFE</b>—Severely errored seconds (far-end line)</li> <li>• <b>UAS-LFE</b>—Unavailable seconds (far-end line)</li> </ul>
<b>SONET path</b>	<p>Active alarms and defects, plus counts of specific SONET errors with detailed information.</p> <ul style="list-style-type: none"> <li>• <b>Seconds</b>—Number of seconds the defect has been active.</li> <li>• <b>Count</b>—Number of times that the defect has gone from inactive to active.</li> <li>• <b>State</b>—State of the error. A state other than <b>OK</b> indicates a problem.</li> </ul> <p>The <b>SONET path</b> field has the following subfields:</p> <ul style="list-style-type: none"> <li>• <b>BIP-B3</b>—Bit interleaved parity for SONET section overhead</li> <li>• <b>REI-P</b>—Remote error indication</li> <li>• <b>LOP-P</b>—Loss of pointer (path)</li> <li>• <b>AIS-P</b>—Path alarm indication signal</li> <li>• <b>RDI-P</b>—Path remote defect indication</li> <li>• <b>UNEQ-P</b>—Path unequipped</li> <li>• <b>PLM-P</b>—Path payload (signal) label mismatch</li> <li>• <b>ES-P</b>—Errored seconds (near-end STS path)</li> <li>• <b>SES-P</b>—Severely errored seconds (near-end STS path)</li> <li>• <b>UAS-P</b>—Unavailable seconds (near-end STS path)</li> <li>• <b>ES-PFE</b>—Errored seconds (far-end STS path)</li> <li>• <b>SES-PFE</b>—Severely errored seconds (far-end STS path)</li> <li>• <b>UAS-PFE</b>—Unavailable seconds (far-end STS path)</li> </ul>

Table 73: show class-of-service interface Output Fields (*continued*)

Field Name	Field Description
Received SONET overhead	Values of the received and transmitted SONET overhead: <ul style="list-style-type: none"> <li>• <b>C2</b>—Signal label. Allocated to identify the construction and content of the STS-level SPE and for PDI-P.</li> <li>• <b>F1</b>—Section user channel byte. This byte is set aside for the purposes of users.</li> <li>• <b>K1 and K2</b>—These bytes are allocated for APS signaling for the protection of the multiplex section.</li> <li>• <b>J0</b>—Section trace. This byte is defined for STS-1 number 1 of an STS-N signal. Used to transmit a 1-byte fixed-length string or a 16-byte message so that a receiving terminal in a section can verify its continued connection to the intended transmitter.</li> <li>• <b>S1</b>—Synchronization status. The S1 byte is located in the first STS-1 number of an STS-N signal.</li> <li>• <b>Z3 and Z4</b>—Allocated for future use.</li> </ul>
Transmitted SONET overhead	
Received path trace	SONET/SDH interfaces allow path trace bytes to be sent inband across the SONET/SDH link. Juniper Networks and other router manufacturers use these bytes to help diagnose misconfigurations and network errors by setting the transmitted path trace message so that it contains the system hostname and name of the physical interface. The received path trace value is the message received from the router at the other end of the fiber. The transmitted path trace value is the message that this router transmits.
Transmitted path trace	
HDLC configuration	Information about the HDLC configuration. <ul style="list-style-type: none"> <li>• <b>Policing bucket</b>—Configured state of the receiving policer.</li> <li>• <b>Shaping bucket</b>—Configured state of the transmitting shaper.</li> <li>• <b>Giant threshold</b>—Giant threshold programmed into the hardware.</li> <li>• <b>Runt threshold</b>—Runt threshold programmed into the hardware.</li> </ul>
Packet Forwarding Engine configuration	Information about the configuration of the Packet Forwarding Engine: <ul style="list-style-type: none"> <li>• <b>Destination slot</b>—FPC slot number.</li> <li>• <b>PLP byte</b>—Packet Level Protocol byte.</li> </ul>
CoS information	Information about the CoS queue for the physical interface. <ul style="list-style-type: none"> <li>• <b>CoS transmit queue</b>—Queue number and its associated user-configured forwarding class name.</li> <li>• <b>Bandwidth %</b>—Percentage of bandwidth allocated to the queue.</li> <li>• <b>Bandwidth bps</b>—Bandwidth allocated to the queue (in bps).</li> <li>• <b>Buffer %</b>—Percentage of buffer space allocated to the queue.</li> <li>• <b>Buffer usec</b>—Amount of buffer space allocated to the queue, in microseconds. This value is nonzero only if the buffer size is configured in terms of time.</li> <li>• <b>Priority</b>—Queue priority: <b>low</b> or <b>high</b>.</li> <li>• <b>Limit</b>—Displayed if rate limiting is configured for the queue. Possible values are <b>none</b> and <b>exact</b>. If <b>exact</b> is configured, the queue transmits only up to the configured bandwidth, even if excess bandwidth is available. If <b>none</b> is configured, the queue transmits beyond the configured bandwidth if bandwidth is available.</li> </ul>
Forwarding classes	Total number of forwarding classes supported on the specified interface.
Egress queues	Total number of egress queues supported on the specified interface.

Table 73: show class-of-service interface Output Fields (*continued*)

Field Name	Field Description
Queue	Queue number.
Forwarding classes	Forwarding class name.
Queued Packets	Number of packets queued to this queue.
Queued Bytes	Number of bytes queued to this queue. The byte counts vary by PIC type.
Transmitted Packets	Number of packets transmitted by this queue. When fragmentation occurs on the egress interface, the first set of packet counters shows the postfragmentation values. The second set of packet counters (displayed under the <b>Packet Forwarding Engine Chassis Queues</b> field) shows the prefragmentation values.
Transmitted Bytes	Number of bytes transmitted by this queue. The byte counts vary by PIC type.
Tail-dropped packets	Number of packets dropped because of tail drop.
RED-dropped packets	<p>Number of packets dropped because of random early detection (RED).</p> <ul style="list-style-type: none"> <li>• (M Series and T Series routers only) On M320 and M120 routers and the T Series routers, the total number of dropped packets is displayed. On all other M Series routers, the output classifies dropped packets into the following categories: <ul style="list-style-type: none"> <li>• <b>Low, non-TCP</b>—Number of low-loss priority non-TCP packets dropped because of RED.</li> <li>• <b>Low, TCP</b>—Number of low-loss priority TCP packets dropped because of RED.</li> <li>• <b>High, non-TCP</b>—Number of high-loss priority non-TCP packets dropped because of RED.</li> <li>• <b>High, TCP</b>—Number of high-loss priority TCP packets dropped because of RED.</li> </ul> </li> <li>• (MX Series routers with enhanced DPCs, and T Series routers with enhanced FPCs only) The output classifies dropped packets into the following categories: <ul style="list-style-type: none"> <li>• <b>Low</b>—Number of low-loss priority packets dropped because of RED.</li> <li>• <b>Medium-low</b>—Number of medium-low loss priority packets dropped because of RED.</li> <li>• <b>Medium-high</b>—Number of medium-high loss priority packets dropped because of RED.</li> <li>• <b>High</b>—Number of high-loss priority packets dropped because of RED.</li> </ul> </li> </ul> <p><b>NOTE:</b> Due to accounting space limitations on certain Type 3 FPCs (which are supported in M320 and T640 routers), this field does not always display the correct value for queue 6 or queue 7 for interfaces on 10-port 1-Gigabit Ethernet PICs.</p>



Table 73: show class-of-service interface Output Fields (*continued*)

Field Name	Field Description
RED-dropped bytes	<p>Number of bytes dropped because of RED. The byte counts vary by PIC type.</p> <ul style="list-style-type: none"> <li>(M Series and T Series routers only) On M320 and M120 routers and the T Series routers, only the total number of dropped bytes is displayed. On all other M Series routers, the output classifies dropped bytes into the following categories: <ul style="list-style-type: none"> <li><b>Low, non-TCP</b>—Number of low-loss priority non-TCP bytes dropped because of RED.</li> <li><b>Low, TCP</b>—Number of low-loss priority TCP bytes dropped because of RED.</li> <li><b>High, non-TCP</b>—Number of high-loss priority non-TCP bytes dropped because of RED.</li> <li><b>High, TCP</b>—Number of high-loss priority TCP bytes dropped because of RED.</li> </ul> </li> </ul> <p><b>NOTE:</b> Due to accounting space limitations on certain Type 3 FPCs (which are supported in M320 and T640 routers), this field does not always display the correct value for queue 6 or queue 7 for interfaces on 10-port 1-Gigabit Ethernet PICs.</p>
Transmit rate	Configured transmit rate of the scheduler. The rate is a percentage of the total interface bandwidth.
Rate Limit	<p>Rate limiting configuration of the queue. Possible values are :</p> <ul style="list-style-type: none"> <li><b>None</b>—No rate limit.</li> <li><b>exact</b>—Queue transmits at the configured rate.</li> </ul>
Buffer size	Delay buffer size in the queue.
Priority	Scheduling priority configured as <b>low</b> or <b>high</b> .
Excess Priority	Priority of the excess bandwidth traffic on a scheduler: <b>low</b> , <b>medium-low</b> , <b>medium-high</b> , <b>high</b> , or <b>none</b> .
Drop profiles	<p>Display the assignment of drop profiles.</p> <ul style="list-style-type: none"> <li><b>Loss priority</b>—Packet loss priority for drop profile assignment.</li> <li><b>Protocol</b>—Transport protocol for drop profile assignment.</li> <li><b>Index</b>—Index of the indicated object. Objects that have indexes in this output include schedulers and drop profiles.</li> <li><b>Name</b>—Name of the drop profile.</li> <li><b>Type</b>—Type of the drop profile: <b>discrete</b> or <b>interpolated</b>.</li> <li><b>Fill Level</b>—Percentage fullness of a queue.</li> <li><b>Drop probability</b>—Drop probability at this fill level.</li> </ul>
Excess Priority	Priority of the excess bandwidth traffic on a scheduler.

Table 73: show class-of-service interface Output Fields (*continued*)

Field Name	Field Description
<b>Drop profiles</b>	<p>Display the assignment of drop profiles.</p> <ul style="list-style-type: none"> <li>• <b>Loss priority</b>—Packet loss priority for drop profile assignment.</li> <li>• <b>Protocol</b>—Transport protocol for drop profile assignment.</li> <li>• <b>Index</b>—Index of the indicated object. Objects that have indexes in this output include schedulers and drop profiles.</li> <li>• <b>Name</b>—Name of the drop profile.</li> <li>• <b>Type</b>—Type of the drop profile: <b>discrete</b> or <b>interpolated</b>.</li> <li>• <b>Fill Level</b>—Percentage fullness of a queue.</li> <li>• <b>Drop probability</b>—Drop probability at this fill level.</li> </ul>
<b>Adjustment information</b>	<p>Display the assignment of shaping-rate adjustments on a scheduler node or queue.</p> <ul style="list-style-type: none"> <li>• <b>Adjusting application</b>—Application that is performing the shaping-rate adjustment. <ul style="list-style-type: none"> <li>• The adjusting application can appear as <b>ancp LS-0</b>, which is the Junos OS Access Node Control Profile process (<b>ancpd</b>) that performs shaping-rate adjustments on schedule nodes.</li> <li>• The adjusting application can also appear as <b>pppoe</b>, which adjusts the shaping-rate and overhead-accounting class-of-service attributes on dynamic subscriber interfaces in a broadband access network based on access line parameters in Point-to-Point Protocol over Ethernet (PPPoE) Tags [TR-101]. This feature is supported on MPC/MIC interfaces on MX Series routers. The shaping rate is based on the actual-data-rate-downstream attribute. The overhead accounting value is based on the access-loop-encapsulation attribute and specifies whether the access loop uses Ethernet (frame mode) or ATM (cell mode).</li> </ul> </li> <li>• <b>Adjustment type</b>—Type of adjustment: <b>absolute</b> or <b>delta</b>.</li> <li>• <b>Configured shaping rate</b>—Shaping rate configured for the scheduler node or queue.</li> <li>• <b>Adjustment value</b>—Value of adjusted shaping rate.</li> <li>• <b>Adjustment target</b>—Level of shaping-rate adjustment performed: <b>node</b> or <b>queue</b>.</li> <li>• <b>Adjustment overhead-accounting mode</b>—Configured shaping mode: <b>frame</b> or <b>cell</b>.</li> <li>• <b>Adjustment overhead bytes</b>—Number of bytes that the ANCP agent adds to or subtracts from the actual downstream frame overhead before reporting the adjusted values to CoS.</li> <li>• <b>Adjustment target</b>—Level of shaping-rate adjustment performed: <b>node</b> or <b>queue</b>.</li> <li>• <b>Adjustment multicast index</b>—</li> </ul>

## Sample Output

### show class-of-service interface (Physical)

```

user@host> show class-of-service interface so-0/2/3
Physical interface: so-0/2/3, Index: 135
Queues supported: 8, Queues in use: 4
Total non-default queues created: 4
Scheduler map: <default>, Index: 2032638653

Logical interface: fe-0/0/1.0, Index: 68, Dedicated Queues: no
Shaping rate: 32000
Object          Name                Type                Index
Scheduler-map   <default>           exp                 27
Rewrite         exp-default         exp                 21
Classifier      exp-default         exp                 5

```

Classifier	ipprec-compatibility	ip	8
Forwarding-class-map	exp-default	exp	5

### show class-of-service interface (Logical)

```

user@host> show class-of-service interface so-0/2/3.0
Logical interface: so-0/2/3.0, Index: 68, Dedicated Queues: no
Shaping rate: 32000
Object      Name      Type      Index
Scheduler-map <default>      27
Rewrite     exp-default    exp      21
Classifier   exp-default    exp      5
Classifier   ipprec-compatibility ip      8
Forwarding-class-map exp-default    exp      5

```

### show class-of-service interface (Gigabit Ethernet)

```

user@host> show class-of-service interface ge-6/2/0
Physical interface: ge-6/2/0, Index: 175
Queues supported: 4, Queues in use: 4
Scheduler map: <default>, Index: 2
Input scheduler map: <default>, Index: 3
Chassis scheduler map: <default-chassis>, Index: 4

```

### show class-of-service interface (ANCP)

```

user@host> show class-of-service interface pp0.1073741842
Logical interface: pp0.1073741842, Index: 341
Object      Name      Type      Index
Traffic-control-profile TCP-CVLAN    Output    12408
Classifier   dscp-ipv6-compatibility dscp-ipv6 9
Classifier   ipprec-compatibility ip      13

Adjusting application: ancp LS-0
Adjustment type: absolute
Configured shaping rate: 4000000
Adjustment value: 11228000
Adjustment overhead-accounting mode: Frame Mode
Adjustment overhead bytes: 50
Adjustment target: node

```

### show class-of-service interface (PPPoE Interface)

```

user@host> show class-of-service interface pp0.1
Logical interface: pp0.1, Index: 85
Object      Name      Type      Index
Traffic-control-profile tcp-pppoe.o.pp0.1 Output    2726446535
Classifier   ipprec-compatibility ip      13

Adjusting application: PPPoE
Adjustment type: absolute
Adjustment value: 5000000
Adjustment overhead-accounting mode: cell
Adjustment target: node

```

### show class-of-service interface (T4000 Routers with Type 5 FPCs)

```

user@host> show class-of-service interface xe-4/0/0
Physical interface: xe-4/0/0, Index: 153
Queues supported: 8, Queues in use: 4
Shaping rate: 5000000000 bps
Scheduler map: <default>, Index: 2

```

```

Congestion-notification: Disabled

Logical interface: xe-4/0/0.0, Index: 77
  Object      Name      Type
Index
  Classifier  ipprec-compatibility ip
13

```

### show class-of-service interface detail

```
user@host> show class-of-service interface ge-0/3/0 detail
```

```

Physical interface: ge-0/3/0, Enabled, Physical link is Up
Link-level type: Ethernet, MTU: 1518, Speed: 1000mbps, Loopback: Disabled,
Source filtering: Disabled, Flow control: Enabled, Auto-negotiation: Enabled,
Remote fault: Online
Device flags   : Present Running
Interface flags: SNMP-Traps Internal: 0x4000

```

```

Physical interface: ge-0/3/0, Index: 138
Queues supported: 4, Queues in use: 5
Shaping rate: 50000 bps
Scheduler map: interface-scheduler-map, Index: 58414
Input shaping rate: 10000 bps
Input scheduler map: scheduler-map, Index: 15103
Chassis scheduler map: <default-chassis>, Index: 4
Congestion-notification: Disabled

```

```

Logical interface ge-0/3/0.0
Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.1 ] Encapsulation: ENET2
inet
mpls

```

Interface	Admin	Link	Proto	Input Filter	Output Filter
ge-0/3/0.0	up	up	inet		
				mpls	
Interface	Admin	Link	Proto	Input Policer	Output Policer
ge-0/3/0.0	up	up	inet		
				mpls	

```

Logical interface: ge-0/3/0.0, Index: 68
Object      Name      Type      Index
Rewrite     exp-default exp (mpls-any) 33
Classifier  exp-default exp      10
Classifier  ipprec-compatibility ip      13

```

```

Logical interface ge-0/3/0.1
Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.2 ] Encapsulation: ENET2
inet

```

Interface	Admin	Link	Proto	Input Filter	Output Filter
ge-0/3/0.1	up	up	inet		
Interface	Admin	Link	Proto	Input Policer	Output Policer
ge-0/3/0.1	up	up	inet		

```

Logical interface: ge-0/3/0.1, Index: 69
Object      Name      Type      Index
Classifier  ipprec-compatibility ip      13

```

### show class-of-service interface comprehensive

```
user@host> show class-of-service interface ge-0/3/0 comprehensive
```

```

Physical interface: ge-0/3/0, Enabled, Physical link is Up
  Interface index: 138, SNMP ifIndex: 601, Generation: 141
  Link-level type: Ethernet, MTU: 1518, Speed: 1000mbps, BPDU Error: None,
  MAC-REWRITE Error: None, Loopback: Disabled, Source filtering: Disabled, Flow
  control: Enabled,
  Auto-negotiation: Enabled, Remote fault: Online
  Device flags   : Present Running
  Interface flags: SNMP-Traps Internal: 0x4000
  CoS queues     : 4 supported, 4 maximum usable queues
  Schedulers     : 256
  Hold-times     : Up 0 ms, Down 0 ms
  Current address: 00:14:f6:f4:b4:5d, Hardware address: 00:14:f6:f4:b4:5d
  Last flapped   : 2010-09-07 06:35:22 PDT (15:14:42 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes : 0 0 bps
    Output bytes : 0 0 bps
    Input packets: 0 0 pps
    Output packets: 0 0 pps
  IPv6 total statistics:
    Input bytes : 0
    Output bytes : 0
    Input packets: 0
    Output packets: 0
  Ingress traffic statistics at Packet Forwarding Engine:
    Input bytes : 0 0 bps
    Input packets: 0 0 pps
    Drop bytes : 0 0 bps
    Drop packets: 0 0 pps
  Label-switched interface (LSI) traffic statistics:
    Input bytes : 0 0 bps
    Input packets: 0 0 pps
  Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Policed discards: 0, L3
  incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0, FIFO errors: 0,
  Resource errors: 0
  Output errors:
    Carrier transitions: 5, Errors: 0, Drops: 0, Collisions: 0, Aged packets: 0,
  FIFO errors: 0, HS link CRC errors: 0, MTU errors: 0, Resource errors: 0
  Ingress queues: 4 supported, 5 in use
  Queue counters:
    Queued packets  Transmitted packets  Dropped packets

    0 af3           0           0           0
    1 af2           0           0           0
    2 ef2           0           0           0
    3 ef1           0           0           0

  Egress queues: 4 supported, 5 in use
  Queue counters:
    Queued packets  Transmitted packets  Dropped packets

    0 af3           0           0           0
    1 af2           0           0           0
    2 ef2           0           0           0
    3 ef1           0           0           0

```

```

Active alarms : None
Active defects : None
MAC statistics:
    Total octets          Receive      Transmit
    Total packets        0          0
    Unicast packets      0          0
    Broadcast packets    0          0
    Multicast packets    0          0
    CRC/Align errors     0          0
    FIFO errors          0          0
    MAC control frames   0          0
    MAC pause frames     0          0
    Oversized frames     0
    Jabber frames        0
    Fragment frames      0
    VLAN tagged frames   0
    Code violations      0
Filter statistics:
    Input packet count    0
    Input packet rejects  0
    Input DA rejects     0
    Input SA rejects     0
    Output packet count   0
    Output packet pad count 0
    Output packet error count 0
    CAM destination filters: 0, CAM source filters: 0
Autonegotiation information:
    Negotiation status: Complete
    Link partner:
        Link mode: Full-duplex, Flow control: Symmetric/Asymmetric, Remote fault:
OK
    Local resolution:
        Flow control: Symmetric, Remote fault: Link OK
Packet Forwarding Engine configuration:
    Destination slot: 0
CoS information:
    Direction : Output
    CoS transmit queue      Bandwidth      Buffer Priority
Limit
    %      bps      %      usec
    2 ef2    39    19500    0    120    high
none
    Direction : Input
    CoS transmit queue      Bandwidth      Buffer Priority
Limit
    %      bps      %      usec
    0 af3    30    3000    45    0    low
none

Physical interface: ge-0/3/0, Enabled, Physical link is Up
    Interface index: 138, SNMP ifIndex: 601
Forwarding classes: 16 supported, 5 in use
Ingress queues: 4 supported, 5 in use
Queue: 0, Forwarding classes: af3
Queued:
    Packets      :      0      0 pps
    Bytes        :      0      0 bps
Transmitted:
    Packets      :      0      0 pps
    Bytes        :      0      0 bps
Tail-dropped packets : Not Available

```

```

RED-dropped packets : 0 0 pps
RED-dropped bytes : 0 0 bps
Queue: 1, Forwarding classes: af2
  Queued:
    Packets : 0 0 pps
    Bytes : 0 0 bps
  Transmitted:
    Packets : 0 0 pps
    Bytes : 0 0 bps
    Tail-dropped packets : Not Available
    RED-dropped packets : 0 0 pps
    RED-dropped bytes : 0 0 bps
Queue: 2, Forwarding classes: ef2
  Queued:
    Packets : 0 0 pps
    Bytes : 0 0 bps
  Transmitted:
    Packets : 0 0 pps
    Bytes : 0 0 bps
    Tail-dropped packets : Not Available
    RED-dropped packets : 0 0 pps
    RED-dropped bytes : 0 0 bps
Queue: 3, Forwarding classes: ef1
  Queued:
    Packets : 0 0 pps
    Bytes : 0 0 bps
  Transmitted:
    Packets : 0 0 pps
    Bytes : 0 0 bps
    Tail-dropped packets : Not Available
    RED-dropped packets : 0 0 pps
    RED-dropped bytes : 0 0 bps
Forwarding classes: 16 supported, 5 in use
Egress queues: 4 supported, 5 in use
Queue: 0, Forwarding classes: af3
  Queued:
    Packets : 0 0 pps
    Bytes : 0 0 bps
  Transmitted:
    Packets : 0 0 pps
    Bytes : 0 0 bps
    Tail-dropped packets : Not Available
    RL-dropped packets : 0 0 pps
    RL-dropped bytes : 0 0 bps
    RED-dropped packets : 0 0 pps
    RED-dropped bytes : 0 0 bps
Queue: 1, Forwarding classes: af2
  Queued:
    Packets : 0 0 pps
    Bytes : 0 0 bps
  Transmitted:
    Packets : 0 0 pps
    Bytes : 0 0 bps
    Tail-dropped packets : Not Available
    RL-dropped packets : 0 0 pps
    RL-dropped bytes : 0 0 bps
    RED-dropped packets : 0 0 pps
    RED-dropped bytes : 0 0 bps
Queue: 2, Forwarding classes: ef2
  Queued:
    Packets : 0 0 pps

```

```

    Bytes                :                0                0 bps
Transmitted:
  Packets                :                0                0 pps
  Bytes                  :                0                0 bps
  Tail-dropped packets : Not Available
  RL-dropped packets    :                0                0 pps
  RL-dropped bytes      :                0                0 bps
  RED-dropped packets   :                0                0 pps
  RED-dropped bytes     :                0                0 bps
Queue: 3, Forwarding classes: ef1
Queued:
  Packets                :                0                0 pps
  Bytes                  :                0                0 bps
Transmitted:
  Packets                :                0                0 pps
  Bytes                  :                0                0 bps
  Tail-dropped packets : Not Available
  RL-dropped packets    :                0                0 pps
  RL-dropped bytes      :                0                0 bps
  RED-dropped packets   :                0                0 pps
  RED-dropped bytes     :                0                0 bps

Packet Forwarding Engine Chassis Queues:
Queues: 4 supported, 5 in use
Queue: 0, Forwarding classes: af3
Queued:
  Packets                :                0                0 pps
  Bytes                  :                0                0 bps
Transmitted:
  Packets                :                0                0 pps
  Bytes                  :                0                0 bps
  Tail-dropped packets :                0                0 pps
  RED-dropped packets   : Not Available
  RED-dropped bytes     : Not Available
Queue: 1, Forwarding classes: af2
Queued:
  Packets                :                0                0 pps
  Bytes                  :                0                0 bps
Transmitted:
  Packets                :                0                0 pps
  Bytes                  :                0                0 bps
  Tail-dropped packets :                0                0 pps
  RED-dropped packets   : Not Available
  RED-dropped bytes     : Not Available
Queue: 2, Forwarding classes: ef2
Queued:
  Packets                :                0                0 pps
  Bytes                  :                0                0 bps
Transmitted:
  Packets                :                0                0 pps
  Bytes                  :                0                0 bps
  Tail-dropped packets :                0                0 pps
  RED-dropped packets   : Not Available
  RED-dropped bytes     : Not Available
Queue: 3, Forwarding classes: ef1
Queued:
  Packets                :            108546                0 pps
  Bytes                  :        12754752        376 bps
Transmitted:
  Packets                :            108546                0 pps
  Bytes                  :        12754752        376 bps

```



```

Tail-dropped packets :          0          0 pps
RED-dropped packets  : Not Available
RED-dropped bytes    : Not Available

```

```

Physical interface: ge-0/3/0, Index: 138
Queues supported: 4, Queues in use: 5
Shaping rate: 50000 bps

```

```
Scheduler map: interface-scheduler-map, Index: 58414
```

```

Scheduler: ef2, Forwarding class: ef2, Index: 39155
  Transmit rate: 39 percent, Rate Limit: none, Buffer size: 120 us, Buffer
  Limit: none, Priority: high
  Excess Priority: unspecified
  Drop profiles:
    Loss priority  Protocol  Index  Name
    Low            any       1      < default-drop-profile>
    Medium low     any       1      < default-drop-profile>
    Medium high    any       1      < default-drop-profile>
    High           any       1      < default-drop-profile>
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Input shaping rate: 10000 bps
  Input scheduler map: scheduler-map

```

```
Scheduler map: scheduler-map, Index: 15103
```

```

Scheduler: af3, Forwarding class: af3, Index: 35058
  Transmit rate: 30 percent, Rate Limit: none, Buffer size: 45 percent, Buffer
  Limit: none, Priority: low
  Excess Priority: unspecified
  Drop profiles:
    Loss priority  Protocol  Index  Name
    Low            any       40582  green
    Medium low     any       1      < default-drop-profile>
    Medium high    any       1      < default-drop-profile>
    High           any       18928  yellow
  Drop profile: green, Type: discrete, Index: 40582
    Fill level  Drop probability
    50          0
    100         100
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Drop profile: yellow, Type: discrete, Index: 18928
    Fill level  Drop probability
    50          0
    100         100

```

```

Chassis scheduler map: < default-drop-profile>
Scheduler map: < default-drop-profile>, Index: 4

Scheduler: < default-drop-profile>, Forwarding class: af3, Index: 25
  Transmit rate: 25 percent, Rate Limit: none, Buffer size: 25 percent, Buffer
  Limit: none, Priority: low
  Excess Priority: low
  Drop profiles:
    Loss priority  Protocol  Index  Name
    Low           any       1      < default-drop-profile>
    Medium low    any       1      < default-drop-profile>
    Medium high   any       1      < default-drop-profile>
    High          any       1      < default-drop-profile>
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100

Scheduler: < default-drop-profile>, Forwarding class: af2, Index: 25
  Transmit rate: 25 percent, Rate Limit: none, Buffer size: 25 percent, Buffer
  Limit: none, Priority: low
  Excess Priority: low
  Drop profiles:
    Loss priority  Protocol  Index  Name
    Low           any       1      < default-drop-profile>
    Medium low    any       1      < default-drop-profile>
    Medium high   any       1      < default-drop-profile>
    High          any       1      < default-drop-profile>
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100

Scheduler: < default-drop-profile>, Forwarding class: ef2, Index: 25
  Transmit rate: 25 percent, Rate Limit: none, Buffer size: 25 percent, Buffer
  Limit: none, Priority: low
  Excess Priority: low
  Drop profiles:
    Loss priority  Protocol  Index  Name
    Low           any       1      < default-drop-profile>
    Medium low    any       1      < default-drop-profile>
    Medium high   any       1      < default-drop-profile>
    High          any       1      < default-drop-profile>
  Drop profile: < default-drop-profile>, Type: discrete, Index: 1
    Fill level  Drop probability
    100         100

```

```

100          100
Drop profile: < default-drop-profile>, Type: discrete, Index: 1
  Fill level  Drop probability
    100      100
Drop profile: < default-drop-profile>, Type: discrete, Index: 1
  Fill level  Drop probability
    100      100
Drop profile: < default-drop-profile>, Type: discrete, Index: 1
  Fill level  Drop probability
    100      100

Scheduler: < default-drop-profile>, Forwarding class: ef1, Index: 25
  Transmit rate: 25 percent, Rate Limit: none, Buffer size: 25 percent, Buffer
Limit: none, Priority: low
  Excess Priority: low
  Drop profiles:
    Loss priority  Protocol  Index  Name
    Low           any       1      < default-drop-profile>
    Medium low    any       1      < default-drop-profile>
    Medium high   any       1      < default-drop-profile>
    High          any       1      < default-drop-profile>
Drop profile: , Type: discrete, Index: 1
  Fill level  Drop probability
    100      100
Drop profile: < default-drop-profile>, Type: discrete, Index: 1
  Fill level  Drop probability
    100      100
Drop profile: < default-drop-profile>, Type: discrete, Index: 1
  Fill level  Drop probability
    100      100
Drop profile: < default-drop-profile>, Type: discrete, Index: 1
  Fill level  Drop probability
    100      100
  Congestion-notification: Disabled
Forwarding class
priority Policing priority      ID      Queue  Restricted queue  Fabric
af3      normal                0       0           0           low
af2      normal                1       1           1           low
ef2      normal                2       2           2           high
ef1      normal                3       3           3           high
af1      normal                4       4           0           low
          normal

Logical interface ge-0/3/0.0 (Index 68) (SNMP ifIndex 152) (Generation 159)
  Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.1 ] Encapsulation: ENET2
  Traffic statistics:
    Input bytes :          0
    Output bytes :          0
    Input packets:          0
    Output packets:         0
  Local statistics:
    Input bytes :          0
    Output bytes :          0
    Input packets:          0
    Output packets:         0
  Transit statistics:
    Input bytes :          0          0 bps

```

```

Output bytes : 0 0 bps
Input packets: 0 0 pps
Output packets: 0 0 pps
Protocol inet, MTU: 1500, Generation: 172, Route table: 0
  Flags: Sendbcst-pkt-to-re
  Input Filters: filter-in-ge-0/3/0.0-i,
  Policer: Input: p1-ge-0/3/0.0-inet-i
Protocol mpls, MTU: 1488, Maximum labels: 3, Generation: 173, Route table: 0
  Flags: Is-Primary
  Output Filters: exp-filter,,,,,

Logical interface ge-1/2/0.0 (Index 347) (SNMP ifIndex 638) (Generation 156)

Forwarding class ID Queue Restricted queue Fabric priority Policing priority
  SPU priority
best-effort 0 0 0 low normal
  low

Aggregate Forwarding-class statistics per forwarding-class
Aggregate Forwarding-class statistics:
Forwarding-class statistics:

Forwarding-class best-effort statistics:
  Input unicast bytes: 0
  Output unicast bytes: 0
  Input unicast packets: 0
  Output unicast packets: 0

  Input multicast bytes: 0
  Output multicast bytes: 0
  Input multicast packets: 0
  Output multicast packets: 0

Forwarding-class expedited-forwarding statistics:
  Input unicast bytes: 0
  Output unicast bytes: 0
  Input unicast packets: 0
  Output unicast packets: 0

  Input multicast bytes: 0
  Output multicast bytes: 0
  Input multicast packets: 0
  Output multicast packets: 0

IPv4 protocol forwarding-class statistics:
Forwarding-class statistics:
Forwarding-class best-effort statistics:

  Input unicast bytes: 0
  Output unicast bytes: 0
  Input unicast packets: 0
  Output unicast packets: 0

  Input multicast bytes: 0
  Output multicast bytes: 0
  Input multicast packets: 0
  Output multicast packets: 0

Forwarding-class expedited-forwarding statistics:
  Input unicast bytes: 0

```

```

Output unicast bytes:    0
Input unicast packets:  0
Output unicast packets: 0

```

```

Input multicast bytes:   0
Output multicast bytes:  0
Input multicast packets: 0
Output multicast packets: 0

```

```

IPv6 protocol forwarding-class statistics:
Forwarding-class statistics:
  Forwarding-class best-effort statistics:

```

```

Input unicast bytes:    0
Output unicast bytes:   0
Input unicast packets:  0
Output unicast packets: 0

```

```

Input multicast bytes:   0
Output multicast bytes:  0
Input multicast packets: 0
Output multicast packets: 0

```

```
Forwarding-class expedited-forwarding statistics:
```

```

Input unicast bytes:    0
Output unicast bytes:   0
Input unicast packets:  0
Output unicast packets: 0

```

```

Logical interface ge-0/3/0.0 (Index 68) (SNMP ifIndex 152)
Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.1 ] Encapsulation: ENET2
Input packets : 0
Output packets: 0

```

Interface	Admin	Link	Proto	Input Filter	Output Filter
ge-0/3/0.0	up	up	inet	filter-in-ge-0/3/0.0-i	
			mpls		exp-filter

Interface	Admin	Link	Proto	Input Policer	Output Policer
ge-0/3/0.0	up	up			
			inet	p1-ge-0/3/0.0-inet-i	
			mpls		

```
Filter: filter-in-ge-0/3/0.0-i
```

```
Counters:
```

Name	Bytes	Packets
count-filter-in-ge-0/3/0.0-i	0	0

```
Filter: exp-filter
```

```
Counters:
```

Name	Bytes	Packets
count-exp-seven-match	0	0
count-exp-zero-match	0	0

```
Policers:
```

Name	Packets
p1-ge-0/3/0.0-inet-i	0

```
Logical interface: ge-0/3/0.0, Index: 68
```

Object	Name	Type	Index
Rewrite	exp-default	exp (mpls-any)	33

Rewrite rule: exp-default, Code point type: exp, Index: 33

Forwarding class	Loss priority	Code point	
af3	low	000	
af3	high	001	
af2	low	010	
af2	high	011	
ef2	low	100	
ef2	high	101	
ef1	low	110	
ef1	high	111	
Object	Name	Type	Index
Classifier	exp-default	exp	10

Classifier: exp-default, Code point type: exp, Index: 10

Code point	Forwarding class	Loss priority	
000	af3	low	
001	af3	high	
010	af2	low	
011	af2	high	
100	ef2	low	
101	ef2	high	
110	ef1	low	
111	ef1	high	
Object	Name	Type	Index
Classifier	ipprec-compatibility	ip	13

Classifier: ipprec-compatibility, Code point type: inet-precedence, Index: 13

Code point	Forwarding class	Loss priority		
000	af3	low		
001	af3	high		
010	af3	low		
011	af3	high		
100	af3	low		
101	af3	high		
110	ef1	low		
111	ef1	high		
Forwarding class	ID	Queue	Restricted queue	Fabric
priority				
af3	0	0	0	low
normal				
af2	1	1	1	low
normal				
ef2	2	2	2	high
normal				
ef1	3	3	3	high
normal				
af1	4	4	0	low
normal				

Logical interface ge-0/3/0.1 (Index 69) (SNMP ifIndex 154) (Generation 160)

Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.2 ] Encapsulation: ENET2

Traffic statistics:

Input bytes :	0
Output bytes :	0
Input packets:	0
Output packets:	0
Local statistics:	
Input bytes :	0

```

Output bytes : 0
Input packets: 0
Output packets: 0
Transit statistics:
Input bytes : 0 0 bps
Output bytes : 0 0 bps
Input packets: 0 0 pps
Output packets: 0 0 pps
Protocol inet, MTU: 1500, Generation: 174, Route table: 0
Flags: Sendbcst-pkt-to-re

```

```

Logical interface ge-0/3/0.1 (Index 69) (SNMP ifIndex 154)
Flags: SNMP-Traps 0x4000 VLAN-Tag [ 0x8100.2 ] Encapsulation: ENET2
Input packets : 0
Output packets: 0

```

```

Interface      Admin Link Proto Input Filter      Output Filter
ge-0/3/0.1     up   up   mpls
Interface      Admin Link Proto Input Policer      Output Policer
ge-0/3/0.1     up   up   mpls

```

```
Logical interface: ge-0/3/0.1, Index: 69
```

Object	Name	Type	Index
Classifier	ipprec-compatibility	ip	13

```
Classifier: ipprec-compatibility, Code point type: inet-precedence, Index: 13
```

Code point	Forwarding class	Loss priority
000	af3	low
001	af3	high
010	af3	low
011	af3	high
100	af3	low
101	af3	high
110	ef1	low
111	ef1	high

Forwarding class	ID	Queue	Restricted queue	Fabric
priority				
af3	0	0	0	low
af2	1	1	1	low
ef2	2	2	2	high
ef1	3	3	3	high
af1	4	4	0	low

### show class-of-service interface (ACX Series Routers)

```

user@host-g11# show class-of-service interface
Physical interface: at-0/0/0, Index: 130
Queues supported: 4, Queues in use: 4
Scheduler map: <default>, Index: 2
Congestion-notification: Disabled

```

Logical interface: at-0/0/0.0, Index: 69

Logical interface: at-0/0/0.32767, Index: 70

Physical interface: at-0/0/1, Index: 133

Queues supported: 4, Queues in use: 4

Scheduler map: <default>, Index: 2

Congestion-notification: Disabled

Logical interface: at-0/0/1.0, Index: 71

Logical interface: at-0/0/1.32767, Index: 72

Physical interface: ge-0/1/0, Index: 146

Queues supported: 8, Queues in use: 5

Scheduler map: <default>, Index: 2

Congestion-notification: Disabled

Object	Name	Type	Index
Rewrite	dscp-default	dscp	31
Classifier	d1	dscp	11331
Classifier	ci	ieee8021p	583

Logical interface: ge-0/1/0.0, Index: 73

Object	Name	Type	Index
Rewrite	custom-exp	exp (mpls-any)	46413

Logical interface: ge-0/1/0.1, Index: 74

Logical interface: ge-0/1/0.32767, Index: 75

Physical interface: ge-0/1/1, Index: 147

Queues supported: 8, Queues in use: 5

Scheduler map: <default>, Index: 2

Congestion-notification: Disabled

Object	Name	Type	Index
Classifier	ipprec-compatibility	ip	13

Logical interface: ge-0/1/1.0, Index: 76

Physical interface: ge-0/1/2, Index: 148

Queues supported: 8, Queues in use: 5

Scheduler map: <default>, Index: 2

Congestion-notification: Disabled

Object	Name	Type	Index
Rewrite	ri	ieee8021p (outer)	35392
Classifier	ci	ieee8021p	583

Physical interface: ge-0/1/3, Index: 149

Queues supported: 8, Queues in use: 5

Scheduler map: <default>, Index: 2

Congestion-notification: Disabled

Object	Name	Type	Index
Classifier	ipprec-compatibility	ip	13

Logical interface: ge-0/1/3.0, Index: 77

Object	Name	Type	Index
Rewrite	custom-exp2	exp (mpls-any)	53581

Physical interface: ge-0/1/4, Index: 150

Queues supported: 8, Queues in use: 5

Scheduler map: <default>, Index: 2



```

    Congestion-notification: Disabled
Object      Name      Type      Index
Classifier  ipprec-compatibility ip         13

Physical interface: ge-0/1/5, Index: 151
Queues supported: 8, Queues in use: 5
Scheduler map: <default>, Index: 2
Congestion-notification: Disabled
Object      Name      Type      Index
Classifier  ipprec-compatibility ip         13

Physical interface: ge-0/1/6, Index: 152
Queues supported: 8, Queues in use: 5
Scheduler map: <default>, Index: 2
Congestion-notification: Disabled
Object      Name      Type      Index
Classifier  ipprec-compatibility ip         13

Physical interface: ge-0/1/7, Index: 153
Queues supported: 8, Queues in use: 5
Scheduler map: <default>, Index: 2
Congestion-notification: Disabled
Object      Name      Type      Index
Classifier  d1        dscp      11331

Physical interface: ge-0/2/0, Index: 154
Queues supported: 8, Queues in use: 5
Scheduler map: <default>, Index: 2
Congestion-notification: Disabled
Object      Name      Type      Index
Classifier  ipprec-compatibility ip         13

Physical interface: ge-0/2/1, Index: 155
Queues supported: 8, Queues in use: 5
Scheduler map: <default>, Index: 2
Congestion-notification: Disabled
Object      Name      Type      Index
Classifier  ipprec-compatibility ip         13

    Logical interface: ge-0/2/1.0, Index: 78

    Logical interface: ge-0/2/1.32767, Index: 79

Physical interface: xe-0/3/0, Index: 156
Queues supported: 8, Queues in use: 5
Scheduler map: <default>, Index: 2
Congestion-notification: Disabled
Object      Name      Type      Index
Classifier  ipprec-compatibility ip         13

    Logical interface: xe-0/3/0.0, Index: 80

Physical interface: xe-0/3/1, Index: 157
Queues supported: 8, Queues in use: 5
Scheduler map: <default>, Index: 2
Congestion-notification: Disabled
Object      Name      Type      Index
Classifier  ipprec-compatibility ip         13

    Logical interface: xe-0/3/1.0, Index: 81

```

```
[edit]
user@host-g11#
```

#### show class-of-service interface (PPPoE Subscriber Interface for Enhanced Subscriber Management)

```
user@host> show class-of-service interface pp0.3221225474
  Logical interface: pp0.3221225475, Index: 3221225475
Object      Name                               Type                               Index
Traffic-control-profile TC_PROF_100_199_SERIES_UID1006 Output 4294967312
Scheduler-map      SMAP-1_UID1002      Output 4294967327
Rewrite-Output     ieee-rewrite        ieee8021p 60432
Rewrite-Output     rule1               ip        50463

  Adjusting application: PPPoE IA tags
    Adjustment type: absolute
    Configured shaping rate: 11000000
    Adjustment value: 5000000
    Adjustment target: node

  Adjusting application: ucac
    Adjustment type: delta
    Configured shaping rate: 5000000
    Adjustment value: 100000
    Adjustment target: node
```

## show class-of-service scheduler-map

<b>Supported Platforms</b>	EX Series, M Series, MX Series, PTX Series, QFX Series, T Series
<b>Syntax</b>	show class-of-service scheduler-map <name>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 11.1 for the QFX Series. Command introduced in Junos OS Release 15.1 on MX Series routers for enhanced subscriber management.
<b>Description</b>	Display the mapping of schedulers to forwarding classes and a summary of scheduler parameters for each entry.
<b>Options</b>	<b>none</b> —Display all scheduler maps.  <b>name</b> —(Optional) Display a summary of scheduler parameters for each forwarding class to which the named scheduler is assigned.
<b>Required Privilege Level</b>	view
<b>Related Documentation</b>	<ul style="list-style-type: none"> <li>Verifying and Managing Junos OS Enhanced Subscriber Management</li> </ul>
<b>List of Sample Output</b>	<a href="#">show class-of-service scheduler-map on page 368</a>
<b>Output Fields</b>	<a href="#">Table 74 on page 367</a> describes the output fields for the <b>show class-of-service scheduler-map</b> command. Output fields are listed in the approximate order in which they appear.

Table 74: show class-of-service scheduler-map Output Fields

Field Name	Field Description
<b>Scheduler map</b>	Name of the scheduler map.  (Enhanced subscriber management for MX Series routers) The name of the dynamic scheduler map object is associated with a generated UID (for example, <b>SMAP-1_UID1002</b> ) instead of with a subscriber interface.
<b>Index</b>	Index of the indicated object. Objects having indexes in this output include scheduler maps, schedulers, and drop profiles.  (Enhanced subscriber management for MX Series routers) Index values for dynamic CoS traffic control profiles are larger for enhanced subscriber management than they are for legacy subscriber management.
<b>Scheduler</b>	Name of the scheduler.
<b>Forwarding class</b>	Classification of a packet affecting the forwarding, scheduling, and marking policies applied as the packet transits the router.

Table 74: show class-of-service scheduler-map Output Fields (*continued*)

Field Name	Field Description
<b>Transmit rate</b>	Configured transmit rate of the scheduler (in bps). The rate is a percentage of the total interface bandwidth, or the keyword <b>remainder</b> , which indicates that the scheduler receives the remaining bandwidth of the interface.
<b>Rate Limit</b>	Rate limiting configuration of the queue. Possible values are <b>none</b> , meaning no rate limiting, and <b>exact</b> , meaning the queue only transmits at the configured rate.
<b>Maximum buffer delay</b>	Amount of transmit delay (in milliseconds) or the buffer size of the queue. The buffer size is shown as a percentage of the total interface buffer allocation, or by the keyword <b>remainder</b> to indicate that the buffer is sized according to what remains after other scheduler buffer allocations.
<b>Priority</b>	Scheduling priority: <b>low</b> or <b>high</b> .
<b>Excess priority</b>	Priority of excess bandwidth: <b>low</b> , <b>medium-low</b> , <b>medium-high</b> , <b>high</b> , or <b>none</b> .
<b>Explicit Congestion Notification</b>	(QFX Series, OCX Series, and EX4600 switches only) Explicit congestion notification (ECN) state: <ul style="list-style-type: none"> <li>• <b>Disable</b>—ECN is disabled on the specified scheduler</li> <li>• <b>Enable</b>—ECN is enabled on the specified scheduler</li> </ul> ECN is disabled by default.
<b>Adjust minimum</b>	Minimum shaping rate for an adjusted queue, in bps.
<b>Adjust percent</b>	Bandwidth adjustment applied to a queue, in percent.
<b>Drop profiles</b>	Table displaying the assignment of drop profiles by name and index to a given loss priority and protocol pair.
<b>Loss priority</b>	Packet loss priority for drop profile assignment.
<b>Protocol</b>	Transport protocol for drop profile assignment.
<b>Name</b>	Name of the drop profile.

## Sample Output

### show class-of-service scheduler-map

```
user@host> show class-of-service scheduler-map
Scheduler map: dd-scheduler-map, Index: 84
```

```
Scheduler: aa-scheduler, Index: 8721, Forwarding class: aa-forwarding-class
Transmit rate: 30 percent, Rate Limit: none, Maximum buffer delay: 39 ms,
Priority: high
Drop profiles:
  Loss priority  Protocol  Index  Name
  Low           non-TCP   8724   aa-drop-profile
  Low           TCP       9874   bb-drop-profile
  High          non-TCP   8833   cc-drop-profile
  High          TCP       8484   dd-drop-profile
```

Scheduler: bb-scheduler, Forwarding class: aa-forwarding-class  
Transmit rate: 40 percent, Rate limit: none, Maximum buffer delay: 68 ms,  
Priority: high  
Drop profiles:

Loss priority	Protocol	Index	Name
Low	non-TCP	8724	aa-drop-profile
Low	TCP	9874	bb-drop-profile
High	non-TCP	8833	cc-drop-profile
High	TCP	8484	dd-drop-profile

## show interfaces queue

---

**Supported Platforms** EX Series, MX Series, OCX1100, OCX1100, PTX Series, QFabric System, QFX Series standalone switches, T Series

**Syntax** show interfaces queue  
<aggregate | remaining-traffic>  
<both-ingress-egress>  
<egress>  
<forwarding-class *forwarding-class*>  
<ingress>  
<interface-name *interface-name*>  
<l2-statistics>

**Release Information** Command introduced before Junos OS Release 7.4.  
**both-ingress-egress**, **egress**, and **ingress** options introduced in Junos OS Release 7.6.  
Command introduced in Junos OS Release 11.1 for the QFX Series.  
**l2-statistics** option introduced in Junos OS Release 12.1.  
Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

**Description** Display class-of-service (CoS) queue information for physical interfaces.

**Options** **none**—Show detailed CoS queue statistics for all physical interfaces.

**aggregate**—(Optional) Display the aggregated queuing statistics of all logical interfaces that have traffic-control profiles configured. (Not on the QFX Series.)

**both-ingress-egress**—(Optional) On Gigabit Ethernet Intelligent Queuing 2 (IQ2) PICs, display both ingress and egress queue statistics. (Not on the QFX Series.)

**egress**—(Optional) Display egress queue statistics.

**forwarding-class *forwarding-class***—(Optional) Forwarding class name for this queue.  
Shows detailed CoS statistics for the queue associated with the specified forwarding class.

**ingress**—(Optional) On Gigabit Ethernet IQ2 PICs, display ingress queue statistics. (Not on the QFX Series.)

**interface-name *interface-name***—(Optional) Show detailed CoS queue statistics for the specified interface.

**l2-statistics**—(Optional) Display Layer 2 statistics for MLPPP, FRF.15, and FRF.16 bundles

**remaining-traffic**—(Optional) Display the remaining-traffic queue statistics of all logical interfaces that have traffic-control profiles configured.

### Overhead for Layer 2 Statistics

Transmitted packets and transmitted byte counts are displayed for the Layer 2 level with the addition of encapsulation overheads applied for fragmentation, as shown in [Table 75 on page 371](#). Others counters, such as packets and bytes queued (input)

and drop counters, are displayed at the Layer 3 level. In the case of link fragmentation and interleaving (LFI) for which fragmentation is not applied, corresponding Layer 2 overheads are added, as shown in [Table 75 on page 371](#).

**Table 75: Layer 2 Overhead and Transmitted Packets or Byte Counts**

Protocol	Fragmentation		LFI
	First fragmentation	Second to <i>n</i> fragmentations	
	Bytes	Bytes	
MLPPP (Long)	13	12	8
MLPPP (short)	11	10	8
MLFR (FRF15)	12	10	8
MFR (FRF16)	10	8	-
MCMLPPP(Long)	13	12	-
MCMLPPP(Short)	11	10	-

#### Layer 2 Statistics—Fragmentation Overhead Calculation

##### MLPPP/MC-MLPPP Overhead details:

=====

##### Fragment 1:

```

Outer PPP header           : 4 bytes
Long or short sequence MLPPP header : 4 bytes or 2 bytes
Inner PPP header           : 1 byte
HDLC flag and FCS bytes    : 4 bytes

```

##### Fragments 2 .. n :

```

Outer PPP header           : 4 bytes
Long or short sequence MLPPP header : 4 bytes or 2 bytes
HDLC flag and FCS bytes    : 4 bytes

```

##### MLFR (FRF15) Overhead details:

=====

##### Fragment 1:

```

Framereelay header        : 2 bytes
Control,NLPID              : 2 bytes
Fragmentaion header        : 2 bytes
Inner proto                : 2 bytes
HDLC flag and FCS          : 4 bytes

```

##### Fragments 2 ...n :

```

Framereelay header        : 2 bytes
Control,NLPID              : 2 bytes
Fragmentaion header        : 2 bytes
HDLC flag and FCS          : 4 bytes

```

**MFR (FRF16) Overhead details:**

```
=====
Fragment 1:
  Fragmentation header : 2 bytes
  Framereelay header   : 2 bytes
  Inner proto          : 2 bytes
  HDLC flag and FCS    : 4 bytes

Fragments 2 ...n :
  Fragmentation header : 2 bytes
  Framereelay header    : 2 bytes
  HDLC flag and FCS     : 4 bytes
```

**Overhead with LFI****MLPPP(Long & short sequence):**

```
=====
  Outer PPP header      : 4 bytes
  HDLC flag and FCS     : 4 bytes
```

**MLFR (FRF15):**

```
=====
  Framereelay header    : 2 bytes
  Control,NLPID         : 2 bytes
  HDLC flag and FCS     : 4 bytes
```

The following examples show overhead for different cases:

- A 1000-byte packet is sent to a mlppp bundle without any fragmentation. At the Layer 2 level, bytes transmitted is 1013 in 1 packet. This overhead is for MLPPP long sequence encap.
- A 1000-byte packet is sent to a mlppp bundle with a fragment threshold of 250byte. At the Layer 2 level, bytes transmitted is 1061 bytes in 5 packets.
- A 1000-byte LFI packet is sent to an mlppp bundle. At the Layer 2 level, bytes transmitted is 1008 in 1 packet.

**remaining-traffic**—(Optional) Display the queuing statistics of all logical interfaces that do not have traffic-control profiles configured. (Not on the QFX Series.)

**Additional Information** For rate-limited interfaces hosted on Modular Interface Cards (MICs), Modular Port Concentrators (MPCs), or Enhanced Queuing DPCs, rate-limit packet-drop operations occur *before* packets are queued for transmission scheduling. For such interfaces, the statistics for queued traffic do not include the packets that have already been dropped due to rate limiting, and consequently the displayed statistics for queued traffic are the same as the displayed statistics for transmitted traffic.





**NOTE:** For rate-limited interfaces hosted on other types of hardware, rate-limit packet-drop operations occur *after* packets are queued for transmission scheduling. For these other interface types, the statistics for queued traffic include the packets that are later dropped due to rate limiting, and consequently the displayed statistics for queued traffic equals the sum of the statistics for transmitted and rate-limited traffic.

On M Series routers (except for the M320 and M120 routers), this command is valid only for a PIC installed on an enhanced Flexible PIC Concentrator (FPC).

Queue statistics for aggregated interfaces are supported on the M Series and T Series routers only. Statistics for an aggregated interface are the summation of the queue statistics of the child links of that aggregated interface. You can view the statistics for a child interface by using the **show interfaces statistics** command for that child interface.

When you configure tricolor marking on a 10-port 1-Gigabit Ethernet PIC, for queues 6 and 7 only, the output does not display the number of queued bytes and packets, or the number of bytes and packets dropped because of RED. If you do not configure tricolor marking on the interface, these statistics are available for all queues.

For the 4-port Channelized OC12 IQE PIC and 1-port Channelized OC48 IQE PIC, the **Packet Forwarding Engine Chassis Queues** field represents traffic bound for a particular physical interface on the PIC. For all other PICs, the **Packet Forwarding Engine Chassis Queues** field represents the total traffic bound for the PIC.

For Gigabit Ethernet IQ2 PICs, the **show interfaces queue** command output does not display the number of tail-dropped packets. This limitation does not apply to Packet Forwarding Engine chassis queues.

When fragmentation occurs on the egress interface, the first set of packet counters shows the postfragmentation values. The second set of packet counters (under the **Packet Forwarding Engine Chassis Queues** field) shows the prefragmentation values.

The behavior of the **egress** queues for the **Routing Engine-Generated Traffic** is not same as the configured queue for MLPPP and MFR configurations.

For information about how to configure CoS, see the *Junos OS Network Interfaces Library for Routing Devices*. For related CoS operational mode commands, see the [CLI Explorer](#).

**Required Privilege Level**

view

**List of Sample Output**

[show interfaces queue \(Rate-Limited Interface on a Gigabit Ethernet MIC in an MPC\) on page 378](#)

[show interfaces queue \(Aggregated Ethernet on a T320 Router\) on page 379](#)

[show interfaces queue \(Gigabit Ethernet on a T640 Router\) on page 381](#)

[show interfaces queue aggregate \(Gigabit Ethernet Enhanced DPC\) on page 381](#)

[show interfaces queue \(Gigabit Ethernet IQ2 PIC\) on page 385](#)

[show interfaces queue both-ingress-egress \(Gigabit Ethernet IQ2 PIC\) on page 388](#)

[show interfaces queue ingress \(Gigabit Ethernet IQ2 PIC\) on page 390](#)  
[show interfaces queue egress \(Gigabit Ethernet IQ2 PIC\) on page 391](#)  
[show interfaces queue remaining-traffic \(Gigabit Ethernet Enhanced DPC\) on page 393](#)  
[show interfaces queue \(Channelized OC12 IQE Type 3 PIC in SONET Mode\) on page 395](#)  
[show interfaces queue \(QFX Series\) on page 405](#)  
[show interfaces queue l2-statistics \(lsq interface\) on page 406](#)  
[show interfaces queue lsq \(lsq-ifd\) on page 407](#)

**Output Fields** Table 76 on page 374 lists the output fields for the **show interfaces queue** command. Output fields are listed in the approximate order in which they appear.

**Table 76: show interfaces queue Output Fields**

Field Name	Field Description
<b>Physical interface</b>	Name of the physical interface.
<b>Enabled</b>	State of the interface. Possible values are described in the “Enabled Field” section under <i>Common Output Fields Description</i> .
<b>Interface index</b>	Physical interface's index number, which reflects its initialization sequence.
<b>SNMP ifIndex</b>	SNMP index number for the interface.
<b>Forwarding classes supported</b>	Total number of forwarding classes supported on the specified interface.
<b>Forwarding classes in use</b>	Total number of forwarding classes in use on the specified interface.
<b>Ingress queues supported</b>	On Gigabit Ethernet IQ2 PICs only, total number of ingress queues supported on the specified interface.
<b>Ingress queues in use</b>	On Gigabit Ethernet IQ2 PICs only, total number of ingress queues in use on the specified interface.
<b>Output queues supported</b>	Total number of output queues supported on the specified interface.
<b>Output queues in use</b>	Total number of output queues in use on the specified interface.
<b>Egress queues supported</b>	Total number of egress queues supported on the specified interface.
<b>Egress queues in use</b>	Total number of egress queues in use on the specified interface.
<b>Queue counters (Ingress)</b>	<p>CoS queue number and its associated user-configured forwarding class name. Displayed on IQ2 interfaces.</p> <ul style="list-style-type: none"> <li>• <b>Queued packets</b>—Number of queued packets.</li> <li>• <b>Transmitted packets</b>—Number of transmitted packets.</li> <li>• <b>Dropped packets</b>—Number of packets dropped by the ASIC's RED mechanism.</li> </ul>

Table 76: show interfaces queue Output Fields (*continued*)

Field Name	Field Description
<b>Burst size</b>	(Logical interfaces on IQ PICs only) Maximum number of bytes up to which the logical interface can burst. The burst size is based on the shaping rate applied to the interface.
The following output fields are applicable to both interface component and Packet Forwarding component in the <b>show interfaces queue</b> command:	
<b>Queue</b>	Queue number.
<b>Forwarding classes</b>	Forwarding class name.
<b>Queued Packets</b>	<p>Number of packets queued to this queue.</p> <p><b>NOTE:</b> For Gigabit Ethernet IQ2 interfaces, the Queued Packets count is calculated by the Junos OS interpreting one frame buffer as one packet. If the queued packets are very large or very small, the calculation might not be completely accurate for transit traffic. The count is completely accurate for traffic terminated on the router.</p> <p>For rate-limited interfaces hosted on MICs or MPCs only, this statistic does not include traffic dropped due to rate limiting. For more information, see <a href="#">“Additional Information” on page 372</a>.</p>
<b>Queued Bytes</b>	<p>Number of bytes queued to this queue. The byte counts vary by interface hardware. For more information, see <a href="#">Table 77 on page 377</a>.</p> <p>For rate-limited interfaces hosted on MICs or MPCs only, this statistic does not include traffic dropped due to rate limiting. For more information, see <a href="#">“Additional Information” on page 372</a>.</p>
<b>Transmitted Packets</b>	<p>Number of packets transmitted by this queue. When fragmentation occurs on the egress interface, the first set of packet counters shows the postfragmentation values. The second set of packet counters (displayed under the <b>Packet Forwarding Engine Chassis Queues</b> field) shows the prefragmentation values.</p> <p><b>NOTE:</b> For Layer 2 statistics, see <a href="#">“Overhead for Layer 2 Statistics” on page 370</a></p>
<b>Transmitted Bytes</b>	<p>Number of bytes transmitted by this queue. The byte counts vary by interface hardware. For more information, see <a href="#">Table 77 on page 377</a>.</p> <p><b>NOTE:</b> On MX Series routers, this number can be inaccurate when you issue the command for a physical interface repeatedly and in quick succession, because the statistics for the child nodes are collected infrequently. Wait ten seconds between successive iterations to avoid this situation.</p> <p><b>NOTE:</b> For Layer 2 statistics, see <a href="#">“Overhead for Layer 2 Statistics” on page 370</a></p>
<b>Tail-dropped packets</b>	<p>Number of packets dropped because of tail drop.</p> <p><b>NOTE:</b> The <b>Tail-dropped packets</b> counter is not supported on the PTX Series Packet Transport Routers.</p>
<b>RL-dropped packets</b>	<p>Number of packets dropped due to rate limiting.</p> <p>For rate-limited interfaces hosted on MICs, MPCs, and Enhanced Queuing DPCs only, this statistic is not included in the queued traffic statistics. For more information, see <a href="#">“Additional Information” on page 372</a>.</p> <p><b>NOTE:</b> The <b>RL-dropped packets</b> counter is not supported on the PTX Series Packet Transport Routers, and is omitted from the output.</p>

Table 76: show interfaces queue Output Fields (*continued*)

Field Name	Field Description
<b>RL-dropped bytes</b>	<p>Number of bytes dropped due to rate limiting.</p> <p>For rate-limited interfaces hosted on MICs, MPCs, and Enhanced Queuing DPCs only, this statistic is not included in the queued traffic statistics. For more information, see <a href="#">“Additional Information” on page 372</a>.</p>
<b>RED-dropped packets</b>	<p>Number of packets dropped because of random early detection (RED).</p> <ul style="list-style-type: none"> <li>• (M Series and T Series routers only) On M320 and M120 routers and the T Series routers, the total number of dropped packets is displayed. On all other M Series routers, the output classifies dropped packets into the following categories: <ul style="list-style-type: none"> <li>• <b>Low, non-TCP</b>—Number of low-loss priority non-TCP packets dropped because of RED.</li> <li>• <b>Low, TCP</b>—Number of low-loss priority TCP packets dropped because of RED.</li> <li>• <b>High, non-TCP</b>—Number of high-loss priority non-TCP packets dropped because of RED.</li> <li>• <b>High, TCP</b>—Number of high-loss priority TCP packets dropped because of RED.</li> </ul> </li> <li>• (MX Series routers with enhanced DPCs, and T Series routers with enhanced FPCs only) The output classifies dropped packets into the following categories: <ul style="list-style-type: none"> <li>• <b>Low</b>—Number of low-loss priority packets dropped because of RED.</li> <li>• <b>Medium-low</b>—Number of medium-low loss priority packets dropped because of RED.</li> <li>• <b>Medium-high</b>—Number of medium-high loss priority packets dropped because of RED.</li> <li>• <b>High</b>—Number of high-loss priority packets dropped because of RED.</li> </ul> </li> </ul> <p><b>NOTE:</b> Due to accounting space limitations on certain Type 3 FPCs (which are supported in M320 and T640 routers), this field does not always display the correct value for queue 6 or queue 7 for interfaces on 10-port 1-Gigabit Ethernet PICs.</p>
<b>RED-dropped bytes</b>	<p>Number of bytes dropped because of RED. The byte counts vary by interface hardware. For more information, see <a href="#">Table 77 on page 377</a>.</p> <ul style="list-style-type: none"> <li>• (M Series and T Series routers only) On M320 and M120 routers and the T Series routers, only the total number of dropped bytes is displayed. On all other M Series routers, the output classifies dropped bytes into the following categories: <ul style="list-style-type: none"> <li>• <b>Low, non-TCP</b>—Number of low-loss priority non-TCP bytes dropped because of RED.</li> <li>• <b>Low, TCP</b>—Number of low-loss priority TCP bytes dropped because of RED.</li> <li>• <b>High, non-TCP</b>—Number of high-loss priority non-TCP bytes dropped because of RED.</li> <li>• <b>High, TCP</b>—Number of high-loss priority TCP bytes dropped because of RED.</li> </ul> </li> </ul> <p><b>NOTE:</b> Due to accounting space limitations on certain Type 3 FPCs (which are supported in M320 and T640 routers), this field does not always display the correct value for queue 6 or queue 7 for interfaces on 10-port 1-Gigabit Ethernet PICs.</p>

Byte counts vary by interface hardware. [Table 77 on page 377](#) shows how the byte counts on the outbound interfaces vary depending on the interface hardware. [Table 77 on page 377](#) is based on the assumption that outbound interfaces are sending IP traffic with 478 bytes per packet.

Table 77: Byte Count by Interface Hardware

Interface Hardware	Output Level	Byte Count Includes	Comments
Gigabit Ethernet IQ and IQE PICs	Interface	<p>Queued: 490 bytes per packet, representing 478 bytes of Layer 3 packet + 12 bytes</p> <p>Transmitted: 490 bytes per packet, representing 478 bytes of Layer 3 packet + 12 bytes</p> <p>RED dropped: 496 bytes per packet representing 478 bytes of Layer 3 packet + 18 bytes</p>	<p>The 12 additional bytes include 6 bytes for the destination MAC address + 4 bytes for the VLAN + 2 bytes for the Ethernet type.</p> <p>For RED dropped, 6 bytes are added for the source MAC address.</p>
	Packet forwarding component	<p>Queued: 478 bytes per packet, representing 478 bytes of Layer 3 packet</p> <p>Transmitted: 478 bytes per packet, representing 478 bytes of Layer 3 packet</p>	—
Non-IQ PIC	Interface	<p>T Series, TX Series, T1600, and MX Series routers:</p> <ul style="list-style-type: none"> <li>• Queued: 478 bytes of Layer 3 packet.</li> <li>• Transmitted: 478 bytes of Layer 3 packet.</li> </ul> <p>T4000 routers with Type 5 FPCs :</p> <ul style="list-style-type: none"> <li>• Queued: 478 bytes of Layer 3 packet + the full Layer 2 overhead including 4 bytes CRC + the full Layer 1 overhead 8 bytes preamble + 12 bytes Inter frame Gap.</li> <li>• Transmitted: 478 bytes of Layer 3 packet + the full Layer 2 overhead including 4 bytes CRC + the full Layer 1 overhead 8 bytes preamble + 12 bytes Interframe Gap.</li> </ul> <p>M Series routers:</p> <ul style="list-style-type: none"> <li>• Queued: 478 bytes of Layer 3 packet.</li> <li>• Transmitted: 478 bytes of Layer 3 packet + the full Layer 2 overhead.</li> </ul> <p>PTX Series Packet Transport Routers:</p> <ul style="list-style-type: none"> <li>• Queued: The sum of the transmitted bytes and the RED dropped bytes.</li> <li>• Transmitted: Full Layer 2 overhead (including all L2 encapsulation and CRC) + 12 inter-packet gap + 8 for the preamble.</li> <li>• RED dropped: Full Layer 2 overhead (including all L2 encapsulation and CRC) + 12 inter-packet gap + 8 for the preamble (does not include the VLAN header or MPLS pushed bytes).</li> </ul>	<p>The Layer 2 overhead is 14 bytes for non-VLAN traffic and 18 bytes for VLAN traffic.</p>

Table 77: Byte Count by Interface Hardware (*continued*)

Interface Hardware	Output Level	Byte Count Includes	Comments
IQ and IQE PICs with a SONET/SDH interface	Interface	<p>Queued: 482 bytes per packet, representing 478 bytes of Layer 3 packet + 4 bytes</p> <p>Transmitted: 482 bytes per packet, representing 478 bytes of Layer 3 packet + 4 bytes</p> <p>RED dropped: 482 bytes per packet, representing 478 bytes of Layer 3 packet + 4 bytes</p>	The additional 4 bytes are for the Layer 2 Point-to-Point Protocol (PPP) header.
	Packet forwarding component	<p>Queued: 478 bytes per packet, representing 478 bytes of Layer 3 packet</p> <p>Transmitted: 486 bytes per packet, representing 478 bytes of Layer 3 packet + 8 bytes</p>	For transmitted packets, the additional 8 bytes includes 4 bytes for the PPP header and 4 bytes for a cookie.
Non-IQ PIC with a SONET/SDH interface	Interface	<p>T Series, TX Series, T1600, and MX Series routers:</p> <ul style="list-style-type: none"> <li>Queued: 478 bytes of Layer 3 packet.</li> <li>Transmitted: 478 bytes of Layer 3 packet.</li> </ul> <p>M Series routers:</p> <ul style="list-style-type: none"> <li>Queued: 478 bytes of Layer 3 packet.</li> <li>Transmitted: 483 bytes per packet, representing 478 bytes of Layer 3 packet + 5 bytes</li> <li>RED dropped: 478 bytes per packet, representing 478 bytes of Layer 3 packet</li> </ul>	For transmitted packets, the additional 5 bytes includes 4 bytes for the PPP header and 1 byte for the packet loss priority (PLP).
Interfaces configured with Frame Relay Encapsulation	Interface	The default Frame Relay overhead is 7 bytes. If you configure the Frame Check Sequence (FCS) to 4 bytes, then the overhead increases to 10 bytes.	
1-port 10-Gigabit Ethernet IQ2 and IQ2-E PICs	Interface	<p>Queued: 478 bytes of Layer 3 packet + the full Layer 2 overhead including CRC.</p> <p>Transmitted: 478 bytes of Layer 3 packet + the full Layer 2 overhead including CRC.</p>	The Layer 2 overhead is 18 bytes for non-VLAN traffic and 22 bytes for VLAN traffic.
4-port 1G IQ2 and IQ2-E PICs	Packet forwarding component	Queued: 478 bytes of Layer 3 packet.	—
8-port 1G IQ2 and IQ2-E PICs		Transmitted: 478 bytes of Layer 3 packet.	

## Sample Output

### show interfaces queue (Rate-Limited Interface on a Gigabit Ethernet MIC in an MPC)

The following example shows queue information for the rate-limited interface ge-4/2/0 on a Gigabit Ethernet MIC in an MPC. For rate-limited queues for interfaces hosted on MICs or MPCs, rate-limit packet drops occur prior to packet output queuing. In the

command output, the nonzero statistics displayed in the **RL-dropped packets** and **RL-dropped bytes** fields quantify the traffic dropped to rate-limit queue 0 output to 10 percent of 1 gigabyte (100 megabits) per second. Because the RL-dropped traffic is not included in the **Queued** statistics, the statistics displayed for queued traffic are the same as the statistics for transmitted traffic.

```
user@host> show interfaces queue ge-4/2/0
Physical interface: ge-4/2/0, Enabled, Physical link is Up
  Interface index: 203, SNMP ifIndex: 1054
Forwarding classes: 16 supported, 4 in use
Egress queues: 8 supported, 4 in use
Queue: 0, Forwarding classes: best-effort
  Queued:
    Packets          :          131300649          141751 pps
    Bytes            :          11287964840        99793248 bps
  Transmitted:
    Packets          :          131300649          141751 pps
    Bytes            :          11287964840        99793248 bps
    Tail-dropped packets :          0          0 pps
    RL-dropped packets  :          205050862        602295 pps
    RL-dropped bytes    :          13595326612      327648832 bps
    RED-dropped packets :          0          0 pps
      Low              :          0          0 pps
      Medium-low       :          0          0 pps
      Medium-high      :          0          0 pps
      High              :          0          0 pps
    RED-dropped bytes   :          0          0 bps
      Low              :          0          0 bps
      Medium-low       :          0          0 bps
      Medium-high      :          0          0 bps
      High              :          0          0 bps
Queue: 1, Forwarding classes: expedited-forwarding
  Queued:
    Packets          :          0          0 pps
    Bytes            :          0          0 bps
```

### show interfaces queue (Aggregated Ethernet on a T320 Router)

The following example shows that the aggregated Ethernet interface, **ae1**, has traffic on queues **af1** and **af12**:

```
user@host> show interfaces queue ae1
Physical interface: ae1, Enabled, Physical link is Up
  Interface index: 158, SNMP ifIndex: 33 Forwarding classes: 8 supported, 8 in use
Output queues: 8 supported, 8 in use
Queue: 0, Forwarding classes: be
  Queued:
    Packets          :          5          0 pps
    Bytes            :          242          0 bps
  Transmitted:
    Packets          :          5          0 pps
    Bytes            :          242          0 bps
    Tail-dropped packets :          0          0 pps
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps
Queue: 1, Forwarding classes: af1
  Queued:
    Packets          :          42603765        595484 pps
```

```

Bytes          :          5453281920          609776496 bps
Transmitted:
Packets        :          42603765          595484 pps
Bytes          :          5453281920          609776496 bps
Tail-dropped packets :          0          0 pps
RED-dropped packets :          0          0 pps
RED-dropped bytes  :          0          0 bps
Queue: 2, Forwarding classes: ef1
Queued:
Packets        :          0          0 pps
Bytes          :          0          0 bps
Transmitted:
Packets        :          0          0 pps
Bytes          :          0          0 bps
Tail-dropped packets :          0          0 pps
RED-dropped packets :          0          0 pps
RED-dropped bytes  :          0          0 bps
Queue: 3, Forwarding classes: nc
Queued:
Packets        :          45          0 pps
Bytes          :          3930          0 bps
Transmitted:
Packets        :          45          0 pps
Bytes          :          3930          0 bps
Tail-dropped packets :          0          0 pps
RED-dropped packets :          0          0 pps
RED-dropped bytes  :          0          0 bps
Queue: 4, Forwarding classes: af11
Queued:
Packets        :          0          0 pps
Bytes          :          0          0 bps
Transmitted:
Packets        :          0          0 pps
Bytes          :          0          0 bps
Tail-dropped packets :          0          0 pps
RED-dropped packets :          0          0 pps
RED-dropped bytes  :          0          0 bps
Queue: 5, Forwarding classes: ef11
Queued:
Packets        :          0          0 pps
Bytes          :          0          0 bps
Transmitted:
Packets        :          0          0 pps
Bytes          :          0          0 bps
Tail-dropped packets :          0          0 pps
RED-dropped packets :          0          0 pps
RED-dropped bytes  :          0          0 bps
Queue: 6, Forwarding classes: af12
Queued:
Packets        :          31296413          437436 pps
Bytes          :          4005940864          447935200 bps
Transmitted:
Packets        :          31296413          437436 pps
Bytes          :          4005940864          447935200 bps
Tail-dropped packets :          0          0 pps
RED-dropped packets :          0          0 pps
RED-dropped bytes  :          0          0 bps
Queue: 7, Forwarding classes: nc2
Queued:
Packets        :          0          0 pps
Bytes          :          0          0 bps

```



```

Transmitted:
Packets      :          0          0 pps
Bytes        :          0          0 bps
Tail-dropped packets :          0          0 pps
RED-dropped packets :          0          0 pps
RED-dropped bytes  :          0          0 bps

```

### show interfaces queue (Gigabit Ethernet on a T640 Router)

```

user@host> show interfaces queue
Physical interface: ge-7/0/1, Enabled, Physical link is Up
  Interface index: 150, SNMP ifIndex: 42
  Forwarding classes: 8 supported, 8 in use
  Output queues: 8 supported, 8 in use
  Queue: 0, Forwarding classes: be
    Queued:
      Packets      :          13          0 pps
      Bytes        :         622          0 bps
    Transmitted:
      Packets      :          13          0 pps
      Bytes        :         622          0 bps
      Tail-dropped packets :          0          0 pps
      RED-dropped packets :          0          0 pps
      RED-dropped bytes  :          0          0 bps
  Queue: 1, Forwarding classes: af1
    Queued:
      Packets      :      1725947945      372178 pps
      Bytes        :      220921336960      381110432 bps
    Transmitted:
      Packets      :      1725947945      372178 pps
      Bytes        :      220921336960      381110432 bps
      Tail-dropped packets :          0          0 pps
      RED-dropped packets :          0          0 pps
      RED-dropped bytes  :          0          0 bps
  Queue: 2, Forwarding classes: ef1
    Queued:
      Packets      :          0          0 pps
      Bytes        :          0          0 bps
    Transmitted:
      Packets      :          0          0 pps
      Bytes        :          0          0 bps
      Tail-dropped packets :          0          0 pps
      RED-dropped packets :          0          0 pps
      RED-dropped bytes  :          0          0 bps
  Queue: 3, Forwarding classes: nc
    Queued:
      Packets      :          571          0 pps
      Bytes        :         49318         336 bps
    Transmitted:
      Packets      :          571          0 pps
      Bytes        :         49318         336 bps
      Tail-dropped packets :          0          0 pps
      RED-dropped packets :          0          0 pps
      RED-dropped bytes  :          0          0 bps

```

### show interfaces queue aggregate (Gigabit Ethernet Enhanced DPC)

```

user@host> show interfaces queue ge-2/2/9 aggregate

```

```

Physical interface: ge-2/2/9, Enabled, Physical link is Up
Interface index: 238, SNMP ifIndex: 71
Forwarding classes: 16 supported, 4 in use
Ingress queues: 4 supported, 4 in use
Queue: 0, Forwarding classes: best-effort
  Queued:
    Packets      :      148450735      947295 pps
    Bytes        :      8016344944     409228848 bps
  Transmitted:
    Packets      :      76397439       487512 pps
    Bytes        :     4125461868     210602376 bps
    Tail-dropped packets : Not Available
    RED-dropped packets :      72053285      459783 pps
      Low        :      72053285      459783 pps
      Medium-low :           0          0 pps
      Medium-high:           0          0 pps
      High       :           0          0 pps
    RED-dropped bytes  :     3890877444     198626472 bps
      Low            :     3890877444     198626472 bps
      Medium-low     :           0          0 bps
      Medium-high    :           0          0 bps
      High           :           0          0 bps
Queue: 1, Forwarding classes: expedited-forwarding
  Queued:
    Packets      :           0          0 pps
    Bytes        :           0          0 bps
  Transmitted:
    Packets      :           0          0 pps
    Bytes        :           0          0 bps
    Tail-dropped packets : Not Available
    RED-dropped packets :           0          0 pps
      Low        :           0          0 pps
      Medium-low :           0          0 pps
      Medium-high:           0          0 pps
      High       :           0          0 pps
    RED-dropped bytes  :           0          0 bps
      Low            :           0          0 bps
      Medium-low     :           0          0 bps
      Medium-high    :           0          0 bps
      High           :           0          0 bps
Queue: 2, Forwarding classes: assured-forwarding
  Queued:
    Packets      :      410278257      473940 pps
    Bytes        :     22156199518     204742296 bps
  Transmitted:
    Packets      :      4850003        4033 pps
    Bytes        :     261900162     1742256 bps
    Tail-dropped packets : Not Available
    RED-dropped packets :      405425693      469907 pps
      Low        :      405425693      469907 pps
      Medium-low :           0          0 pps
      Medium-high:           0          0 pps
      High       :           0          0 pps
    RED-dropped bytes  :     21892988124     203000040 bps
      Low            :     21892988124     203000040 bps
      Medium-low     :           0          0 bps
      Medium-high    :           0          0 bps
      High           :           0          0 bps
Queue: 3, Forwarding classes: network-control
  Queued:
    Packets      :           0          0 pps

```

```

Bytes : 0 0 bps
Transmitted:
Packets : 0 0 pps
Bytes : 0 0 bps
Tail-dropped packets : Not Available
RED-dropped packets : 0 0 pps
Low : 0 0 pps
Medium-low : 0 0 pps
Medium-high : 0 0 pps
High : 0 0 pps
RED-dropped bytes : 0 0 bps
Low : 0 0 bps
Medium-low : 0 0 bps
Medium-high : 0 0 bps
High : 0 0 bps
Forwarding classes: 16 supported, 4 in use
Egress queues: 4 supported, 4 in use
Queue: 0, Forwarding classes: best-effort
Queued:
Packets : 76605230 485376 pps
Bytes : 5209211400 264044560 bps
Transmitted:
Packets : 76444631 484336 pps
Bytes : 5198235612 263478800 bps
Tail-dropped packets : Not Available
RED-dropped packets : 160475 1040 pps
Low : 160475 1040 pps
Medium-low : 0 0 pps
Medium-high : 0 0 pps
High : 0 0 pps
RED-dropped bytes : 10912300 565760 bps
Low : 10912300 565760 bps
Medium-low : 0 0 bps
Medium-high : 0 0 bps
High : 0 0 bps
Queue: 1, Forwarding classes: expedited-forwarding
Queued:
Packets : 0 0 pps
Bytes : 0 0 bps
Transmitted:
Packets : 0 0 pps
Bytes : 0 0 bps
Tail-dropped packets : Not Available
RED-dropped packets : 0 0 pps
Low : 0 0 pps
Medium-low : 0 0 pps
Medium-high : 0 0 pps
High : 0 0 pps
RED-dropped bytes : 0 0 bps
Low : 0 0 bps
Medium-low : 0 0 bps
Medium-high : 0 0 bps
High : 0 0 bps
Queue: 2, Forwarding classes: assured-forwarding
Queued:
Packets : 4836136 3912 pps
Bytes : 333402032 2139056 bps
Transmitted:
Packets : 3600866 1459 pps
Bytes : 244858888 793696 bps
Tail-dropped packets : Not Available

```

```

RED-dropped packets :          1225034          2450 pps
  Low                :          1225034          2450 pps
  Medium-low         :              0              0 pps
  Medium-high        :              0              0 pps
  High               :              0              0 pps
RED-dropped bytes   :          83302312        1333072 bps
  Low                :          83302312        1333072 bps
  Medium-low         :              0              0 bps
  Medium-high        :              0              0 bps
  High               :              0              0 bps
Queue: 3, Forwarding classes: network-control
Queued:
  Packets            :              0              0 pps
  Bytes              :              0              0 bps
Transmitted:
  Packets            :              0              0 pps
  Bytes              :              0              0 bps
Tail-dropped packets : Not Available
RED-dropped packets :              0              0 pps
  Low                :              0              0 pps
  Medium-low         :              0              0 pps
  Medium-high        :              0              0 pps
  High               :              0              0 pps
RED-dropped bytes   :              0              0 bps
  Low                :              0              0 bps
  Medium-low         :              0              0 bps
  Medium-high        :              0              0 bps
  High               :              0              0 bps

```

#### Packet Forwarding Engine Chassis Queues:

Queues: 4 supported, 4 in use

Queue: 0, Forwarding classes: best-effort

```

Queued:
  Packets            :          77059796        486384 pps
  Bytes              :          3544750624      178989576 bps
Transmitted:
  Packets            :          77059797        486381 pps
  Bytes              :          3544750670      178988248 bps
Tail-dropped packets :              0              0 pps
RED-dropped packets :              0              0 pps
  Low                :              0              0 pps
  Medium-low         :              0              0 pps
  Medium-high        :              0              0 pps
  High               :              0              0 pps
RED-dropped bytes   :              0              0 bps
  Low                :              0              0 bps
  Medium-low         :              0              0 bps
  Medium-high        :              0              0 bps
  High               :              0              0 bps

```

Queue: 1, Forwarding classes: expedited-forwarding

```

Queued:
  Packets            :              0              0 pps
  Bytes              :              0              0 bps
Transmitted:
  Packets            :              0              0 pps
  Bytes              :              0              0 bps
Tail-dropped packets :              0              0 pps
RED-dropped packets :              0              0 pps
  Low                :              0              0 pps
  Medium-low         :              0              0 pps
  Medium-high        :              0              0 pps

```

```

      High : 0 0 pps
    RED-dropped bytes : 0 0 bps
      Low : 0 0 bps
    Medium-low : 0 0 bps
    Medium-high : 0 0 bps
      High : 0 0 bps
Queue: 2, Forwarding classes: assured-forwarding
  Queued:
    Packets : 4846580 3934 pps
    Bytes : 222942680 1447768 bps
  Transmitted:
    Packets : 4846580 3934 pps
    Bytes : 222942680 1447768 bps
    Tail-dropped packets : 0 0 pps
    RED-dropped packets : 0 0 pps
      Low : 0 0 pps
    Medium-low : 0 0 pps
    Medium-high : 0 0 pps
      High : 0 0 pps
    RED-dropped bytes : 0 0 bps
      Low : 0 0 bps
    Medium-low : 0 0 bps
    Medium-high : 0 0 bps
      High : 0 0 bps
Queue: 3, Forwarding classes: network-control
  Queued:
    Packets : 0 0 pps
    Bytes : 0 0 bps
  Transmitted:
    Packets : 0 0 pps
    Bytes : 0 0 bps
    Tail-dropped packets : 0 0 pps
    RED-dropped packets : 0 0 pps
      Low : 0 0 pps
    Medium-low : 0 0 pps
    Medium-high : 0 0 pps
      High : 0 0 pps
    RED-dropped bytes : 0 0 bps
      Low : 0 0 bps
    Medium-low : 0 0 bps
    Medium-high : 0 0 bps
      High : 0 0 bps

```

#### show interfaces queue (Gigabit Ethernet IQ2 PIC)

```

user@host> show interfaces queue ge-7/1/3
Physical interface: ge-7/1/3, Enabled, Physical link is Up
  Interface index: 170, SNMP ifIndex: 70 Forwarding classes: 16 supported, 4 in
  use Ingress queues: 4 supported, 4 in use
Queue: 0, Forwarding classes: best-effort
  Queued:
    Packets : 418390039 10 pps
    Bytes : 38910269752 7440 bps
  Transmitted:
    Packets : 418390039 10 pps
    Bytes : 38910269752 7440 bps
    Tail-dropped packets : Not Available
    RED-dropped packets : 0 0 pps
    RED-dropped bytes : 0 0 bps
Queue: 1, Forwarding classes: expedited-forwarding

```

```

Queued:
  Packets      :           0           0 pps
  Bytes       :           0           0 bps
Transmitted:
  Packets      :           0           0 pps
  Bytes       :           0           0 bps
  Tail-dropped packets : Not Available
  RED-dropped packets :           0           0 pps
  RED-dropped bytes  :           0           0 bps
Queue: 2, Forwarding classes: assured-forwarding
Queued:
  Packets      :           0           0 pps
  Bytes       :           0           0 bps
Transmitted:
  Packets      :           0           0 pps
  Bytes       :           0           0 bps
  Tail-dropped packets : Not Available
  RED-dropped packets :           0           0 pps
  RED-dropped bytes  :           0           0 bps
Queue: 3, Forwarding classes: network-control
Queued:
  Packets      :          7055           1 pps
  Bytes       :         451552          512 bps
Transmitted:
  Packets      :          7055           1 pps
  Bytes       :         451552          512 bps
  Tail-dropped packets : Not Available
  RED-dropped packets :           0           0 pps
  RED-dropped bytes  :           0           0 bps
Forwarding classes: 16 supported, 4 in use Egress queues: 4 supported, 4 in use
Queue: 0, Forwarding classes: best-effort
Queued:
  Packets      :          1031           0 pps
  Bytes       :         143292           0 bps
Transmitted:
  Packets      :          1031           0 pps
  Bytes       :         143292           0 bps
  Tail-dropped packets : Not Available
  RL-dropped packets :           0           0 pps
  RL-dropped bytes  :           0           0 bps
  RED-dropped packets :           0           0 pps
  RED-dropped bytes  :           0           0 bps
Queue: 1, Forwarding classes: expedited-forwarding
Queued:
  Packets      :           0           0 pps
  Bytes       :           0           0 bps
Transmitted:
  Packets      :           0           0 pps
  Bytes       :           0           0 bps
  Tail-dropped packets : Not Available
  RL-dropped packets :           0           0 pps
  RL-dropped bytes  :           0           0 bps
  RED-dropped packets :           0           0 pps
  RED-dropped bytes  :           0           0 bps
Queue: 2, Forwarding classes: assured-forwarding
Queued:
  Packets      :           0           0 pps
  Bytes       :           0           0 bps
Transmitted:
  Packets      :           0           0 pps
  Bytes       :           0           0 bps

```

```

Tail-dropped packets : Not Available
RL-dropped packets   :                0                0 pps
RL-dropped bytes     :                0                0 bps
RED-dropped packets   :                0                0 pps
RED-dropped bytes     :                0                0 bps
Queue: 3, Forwarding classes: network-control
Queued:
Packets               :                77009            11 pps
Bytes                 :            6894286            7888 bps
Transmitted:
Packets               :                77009            11 pps
Bytes                 :            6894286            7888 bps
Tail-dropped packets : Not Available
RL-dropped packets   :                0                0 pps
RL-dropped bytes     :                0                0 bps
RED-dropped packets   :                0                0 pps
RED-dropped bytes     :                0                0 bps

```

#### Packet Forwarding Engine Chassis Queues:

Queues: 4 supported, 4 in use

Queue: 0, Forwarding classes: best-effort

```

Queued:
Packets               :                1031            0 pps
Bytes                 :            147328            0 bps
Transmitted:
Packets               :                1031            0 pps
Bytes                 :            147328            0 bps
Tail-dropped packets :                0                0 pps
RED-dropped packets   :                0                0 pps
Low, non-TCP          :                0                0 pps
Low, TCP               :                0                0 pps
High, non-TCP         :                0                0 pps
High, TCP              :                0                0 pps
RED-dropped bytes     :                0                0 bps
Low, non-TCP          :                0                0 bps
Low, TCP               :                0                0 bps
High, non-TCP         :                0                0 bps
High, TCP              :                0                0 bps

```

Queue: 1, Forwarding classes: expedited-forwarding

```

Queued:
Packets               :                0                0 pps
Bytes                 :                0                0 bps
Transmitted:
Packets               :                0                0 pps
Bytes                 :                0                0 bps
Tail-dropped packets :                0                0 pps
RED-dropped packets   :                0                0 pps
Low, non-TCP          :                0                0 pps
Low, TCP               :                0                0 pps
High, non-TCP         :                0                0 pps
High, TCP              :                0                0 pps
RED-dropped bytes     :                0                0 bps
Low, non-TCP          :                0                0 bps
Low, TCP               :                0                0 bps
High, non-TCP         :                0                0 bps
High, TCP              :                0                0 bps

```

Queue: 2, Forwarding classes: assured-forwarding

```

Queued:
Packets               :                0                0 pps
Bytes                 :                0                0 bps
Transmitted:

```

```

Packets          : 0 0 pps
Bytes            : 0 0 bps
Tail-dropped packets : 0 0 pps
RED-dropped packets : 0 0 pps
  Low, non-TCP    : 0 0 pps
  Low, TCP        : 0 0 pps
  High, non-TCP   : 0 0 pps
  High, TCP       : 0 0 pps
RED-dropped bytes : 0 0 bps
  Low, non-TCP    : 0 0 bps
  Low, TCP        : 0 0 bps
  High, non-TCP   : 0 0 bps
  High, TCP       : 0 0 bps
Queue: 3, Forwarding classes: network-control
Queued:
  Packets          : 94386 12 pps
  Bytes            : 13756799 9568 bps
Transmitted:
  Packets          : 94386 12 pps
  Bytes            : 13756799 9568 bps
Tail-dropped packets : 0 0 pps
RED-dropped packets : 0 0 pps
  Low, non-TCP    : 0 0 pps
  Low, TCP        : 0 0 pps
  High, non-TCP   : 0 0 pps
  High, TCP       : 0 0 pps
RED-dropped bytes : 0 0 bps
  Low, non-TCP    : 0 0 bps
  Low, TCP        : 0 0 bps
  High, non-TCP   : 0 0 bps
  High, TCP       : 0 0 bps

```

#### show interfaces queue both-ingress-egress (Gigabit Ethernet IQ2 PIC)

```

user@host> show interfaces queue ge-6/2/0 both-ingress-egress
Physical interface: ge-6/2/0, Enabled, Physical link is Up
Interface index: 175, SNMP ifIndex: 121
Forwarding classes: 8 supported, 4 in use
Ingress queues: 4 supported, 4 in use
Queue: 0, Forwarding classes: best-effort
Queued:
  Packets          : Not Available
  Bytes            : 0 0 bps
Transmitted:
  Packets          : 254 0 pps
  Bytes            : 16274 0 bps
Tail-dropped packets : Not Available
RED-dropped packets : 0 0 pps
RED-dropped bytes : 0 0 bps
Queue: 1, Forwarding classes: expedited-forwarding
Queued:
  Packets          : Not Available
  Bytes            : 0 0 bps
Transmitted:
  Packets          : 0 0 pps
  Bytes            : 0 0 bps
Tail-dropped packets : Not Available
RED-dropped packets : 0 0 pps
RED-dropped bytes : 0 0 bps
Queue: 2, Forwarding classes: assured-forwarding

```



```

Queued:
  Packets          : Not Available
  Bytes           :                0                0 bps
Transmitted:
  Packets          :                0                0 pps
  Bytes           :                0                0 bps
  Tail-dropped packets : Not Available
  RED-dropped packets :                0                0 pps
  RED-dropped bytes  :                0                0 bps
Queue: 3, Forwarding classes: network-control
Queued:
  Packets          : Not Available
  Bytes           :                0                0 bps
Transmitted:
  Packets          :                0                0 pps
  Bytes           :                0                0 bps
  Tail-dropped packets : Not Available
  RED-dropped packets :                0                0 pps
  RED-dropped bytes  :                0                0 bps
Forwarding classes: 8 supported, 4 in use
Egress queues: 4 supported, 4 in use
Queue: 0, Forwarding classes: best-effort
Queued:
  Packets          : Not Available
  Bytes           :                0                0 bps
Transmitted:
  Packets          :                3                0 pps
  Bytes           :               126                0 bps
  Tail-dropped packets : Not Available
  RED-dropped packets :                0                0 pps
  RED-dropped bytes  :                0                0 bps
Queue: 1, Forwarding classes: expedited-forwarding
Queued:
  Packets          : Not Available
  Bytes           :                0                0 bps
Transmitted:
  Packets          :                0                0 pps
  Bytes           :                0                0 bps
  Tail-dropped packets : Not Available
  RED-dropped packets :                0                0 pps
  RED-dropped bytes  :                0                0 bps
Queue: 2, Forwarding classes: assured-forwarding
Queued:
  Packets          : Not Available
  Bytes           :                0                0 bps
Transmitted:
  Packets          :                0                0 pps
  Bytes           :                0                0 bps
  Tail-dropped packets : Not Available
  RED-dropped packets :                0                0 pps
  RED-dropped bytes  :                0                0 bps
Queue: 3, Forwarding classes: network-control
Queued:
  Packets          : Not Available
  Bytes           :                0                0 bps
Transmitted:
  Packets          :                0                0 pps
  Bytes           :                0                0 bps
  Tail-dropped packets : Not Available
  RED-dropped packets :                0                0 pps
  RED-dropped bytes  :                0                0 bps

```

```

Packet Forwarding Engine Chassis Queues:
Queues: 4 supported, 4 in use
Queue: 0, Forwarding classes: best-effort
  Queued:
    Packets      :      80564692      0 pps
    Bytes        :      3383717100    0 bps
  Transmitted:
    Packets      :      80564692      0 pps
    Bytes        :      3383717100    0 bps
    Tail-dropped packets :      0      0 pps
    RED-dropped packets :      0      0 pps
    RED-dropped bytes  :      0      0 bps
Queue: 1, Forwarding classes: expedited-forwarding
  Queued:
    Packets      :      80564685      0 pps
    Bytes        :      3383716770    0 bps
  Transmitted:
    Packets      :      80564685      0 pps
    Bytes        :      3383716770    0 bps
    Tail-dropped packets :      0      0 pps
    RED-dropped packets :      0      0 pps
    RED-dropped bytes  :      0      0 bps
Queue: 2, Forwarding classes: assured-forwarding
  Queued:
    Packets      :      0      0 pps
    Bytes        :      0      0 bps
  Transmitted:
    Packets      :      0      0 pps
    Bytes        :      0      0 bps
    Tail-dropped packets :      0      0 pps
    RED-dropped packets :      0      0 pps
    RED-dropped bytes  :      0      0 bps
Queue: 3, Forwarding classes: network-control
  Queued:
    Packets      :      9397      0 pps
    Bytes        :      3809052      232 bps
  Transmitted:
    Packets      :      9397      0 pps
    Bytes        :      3809052      232 bps
    Tail-dropped packets :      0      0 pps
    RED-dropped packets :      0      0 pps
    RED-dropped bytes  :      0      0 bps

```

### show interfaces queue ingress (Gigabit Ethernet IQ2 PIC)

```

user@host> show interfaces queue ge-6/2/0 ingress
Physical interface: ge-6/2/0, Enabled, Physical link is Up
  Interface index: 175, SNMP ifIndex: 121
Forwarding classes: 8 supported, 4 in use
Ingress queues: 4 supported, 4 in use
Queue: 0, Forwarding classes: best-effort
  Queued:
    Packets      : Not Available
    Bytes        :      0      0 bps
  Transmitted:
    Packets      :      288      0 pps
    Bytes        :      18450    0 bps
    Tail-dropped packets : Not Available
    RED-dropped packets :      0      0 pps
    RED-dropped bytes  :      0      0 bps

```

```

Queue: 1, Forwarding classes: expedited-forwarding
  Queued:
    Packets      : Not Available
    Bytes        :                0                0 bps
  Transmitted:
    Packets      :                0                0 pps
    Bytes        :                0                0 bps
    Tail-dropped packets : Not Available
    RED-dropped packets :                0                0 pps
    RED-dropped bytes  :                0                0 bps
Queue: 2, Forwarding classes: assured-forwarding
  Queued:
    Packets      : Not Available
    Bytes        :                0                0 bps
  Transmitted:
    Packets      :                0                0 pps
    Bytes        :                0                0 bps
    Tail-dropped packets : Not Available
    RED-dropped packets :                0                0 pps
    RED-dropped bytes  :                0                0 bps
Queue: 3, Forwarding classes: network-control
  Queued:
    Packets      : Not Available
    Bytes        :                0                0 bps
  Transmitted:
    Packets      :                0                0 pps
    Bytes        :                0                0 bps
    Tail-dropped packets : Not Available
    RED-dropped packets :                0                0 pps
    RED-dropped bytes  :                0                0 bps

```

#### show interfaces queue egress (Gigabit Ethernet IQ2 PIC)

```

user@host> show interfaces queue ge-6/2/0 egress
Physical interface: ge-6/2/0, Enabled, Physical link is Up
  Interface index: 175, SNMP ifIndex: 121
Forwarding classes: 8 supported, 4 in use
Egress queues: 4 supported, 4 in use
Queue: 0, Forwarding classes: best-effort
  Queued:
    Packets      : Not Available
    Bytes        :                0                0 bps
  Transmitted:
    Packets      :                3                0 pps
    Bytes        :               126                0 bps
    Tail-dropped packets : Not Available
    RED-dropped packets :                0                0 pps
    RED-dropped bytes  :                0                0 bps
Queue: 1, Forwarding classes: expedited-forwarding
  Queued:
    Packets      : Not Available
    Bytes        :                0                0 bps
  Transmitted:
    Packets      :                0                0 pps
    Bytes        :                0                0 bps
    Tail-dropped packets : Not Available
    RED-dropped packets :                0                0 pps
    RED-dropped bytes  :                0                0 bps
Queue: 2, Forwarding classes: assured-forwarding
  Queued:

```

```

Packets          : Not Available
Bytes            :                      0          0 bps
Transmitted:
Packets          :                      0          0 pps
Bytes            :                      0          0 bps
Tail-dropped packets : Not Available
RED-dropped packets :                      0          0 pps
RED-dropped bytes  :                      0          0 bps
Queue: 3, Forwarding classes: network-control
Queued:
Packets          : Not Available
Bytes            :                      0          0 bps
Transmitted:
Packets          :                      0          0 pps
Bytes            :                      0          0 bps
Tail-dropped packets : Not Available
RED-dropped packets :                      0          0 pps
RED-dropped bytes  :                      0          0 bps
Packet Forwarding Engine Chassis Queues:
Queues: 4 supported, 4 in use
Queue: 0, Forwarding classes: best-effort
Queued:
Packets          :                      80564692      0 pps
Bytes            :                      3383717100     0 bps
Transmitted:
Packets          :                      80564692      0 pps
Bytes            :                      3383717100     0 bps
Tail-dropped packets :                      0          0 pps
RED-dropped packets :                      0          0 pps
RED-dropped bytes  :                      0          0 bps
Queue: 1, Forwarding classes: expedited-forwarding
Queued:
Packets          :                      80564685      0 pps
Bytes            :                      3383716770     0 bps
Transmitted:
Packets          :                      80564685      0 pps
Bytes            :                      3383716770     0 bps
Tail-dropped packets :                      0          0 pps
RED-dropped packets :                      0          0 pps
RED-dropped bytes  :                      0          0 bps
Queue: 2, Forwarding classes: assured-forwarding
Queued:
Packets          :                      0          0 pps
Bytes            :                      0          0 bps
Transmitted:
Packets          :                      0          0 pps
Bytes            :                      0          0 bps
Tail-dropped packets :                      0          0 pps
RED-dropped packets :                      0          0 pps
RED-dropped bytes  :                      0          0 bps
Queue: 3, Forwarding classes: network-control
Queued:
Packets          :                      9538          0 pps
Bytes            :                      3819840        0 bps
Transmitted:
Packets          :                      9538          0 pps
Bytes            :                      3819840        0 bps
Tail-dropped packets :                      0          0 pps
RED-dropped packets :                      0          0 pps
RED-dropped bytes  :                      0          0 bps

```

## show interfaces queue remaining-traffic (Gigabit Ethernet Enhanced DPC)

```

user@host> show interfaces queue ge-2/2/9 remaining-traffic
Physical interface: ge-2/2/9, Enabled, Physical link is Up
  Interface index: 238, SNMP ifIndex: 71
Forwarding classes: 16 supported, 4 in use
Ingress queues: 4 supported, 4 in use
Queue: 0, Forwarding classes: best-effort
  Queued:
    Packets      :          110208969          472875 pps
    Bytes        :          5951284434        204282000 bps
  Transmitted:
    Packets      :          110208969          472875 pps
    Bytes        :          5951284434        204282000 bps
  Tail-dropped packets : Not Available
  RED-dropped packets :
    Low          :              0              0 pps
    Medium-low   :              0              0 pps
    Medium-high  :              0              0 pps
    High         :              0              0 pps
  RED-dropped bytes :
    Low          :              0              0 bps
    Medium-low   :              0              0 bps
    Medium-high  :              0              0 bps
    High         :              0              0 bps
Queue: 1, Forwarding classes: expedited-forwarding
  Queued:
    Packets      :              0              0 pps
    Bytes        :              0              0 bps
  Transmitted:
    Packets      :              0              0 pps
    Bytes        :              0              0 bps
  Tail-dropped packets : Not Available
  RED-dropped packets :
    Low          :              0              0 pps
    Medium-low   :              0              0 pps
    Medium-high  :              0              0 pps
    High         :              0              0 pps
  RED-dropped bytes :
    Low          :              0              0 bps
    Medium-low   :              0              0 bps
    Medium-high  :              0              0 bps
    High         :              0              0 bps
Queue: 2, Forwarding classes: assured-forwarding
  Queued:
    Packets      :              0              0 pps
    Bytes        :              0              0 bps
  Transmitted:
    Packets      :              0              0 pps
    Bytes        :              0              0 bps
  Tail-dropped packets : Not Available
  RED-dropped packets :
    Low          :              0              0 pps
    Medium-low   :              0              0 pps
    Medium-high  :              0              0 pps
    High         :              0              0 pps
  RED-dropped bytes :
    Low          :              0              0 bps
    Medium-low   :              0              0 bps
    Medium-high  :              0              0 bps

```

```

    High : 0 0 bps
Queue: 3, Forwarding classes: network-control
Queued:
  Packets : 0 0 pps
  Bytes : 0 0 bps
Transmitted:
  Packets : 0 0 pps
  Bytes : 0 0 bps
Tail-dropped packets : Not Available
RED-dropped packets : 0 0 pps
  Low : 0 0 pps
  Medium-low : 0 0 pps
  Medium-high : 0 0 pps
  High : 0 0 pps
RED-dropped bytes : 0 0 bps
  Low : 0 0 bps
  Medium-low : 0 0 bps
  Medium-high : 0 0 bps
  High : 0 0 bps
Forwarding classes: 16 supported, 4 in use
Egress queues: 4 supported, 4 in use
Queue: 0, Forwarding classes: best-effort
Queued:
  Packets : 109355853 471736 pps
  Bytes : 7436199152 256627968 bps
Transmitted:
  Packets : 109355852 471736 pps
  Bytes : 7436198640 256627968 bps
Tail-dropped packets : Not Available
RED-dropped packets : 0 0 pps
  Low : 0 0 pps
  Medium-low : 0 0 pps
  Medium-high : 0 0 pps
  High : 0 0 pps
RED-dropped bytes : 0 0 bps
  Low : 0 0 bps
  Medium-low : 0 0 bps
  Medium-high : 0 0 bps
  High : 0 0 bps
Queue: 1, Forwarding classes: expedited-forwarding
Queued:
  Packets : 0 0 pps
  Bytes : 0 0 bps
Transmitted:
  Packets : 0 0 pps
  Bytes : 0 0 bps
Tail-dropped packets : Not Available
RED-dropped packets : 0 0 pps
  Low : 0 0 pps
  Medium-low : 0 0 pps
  Medium-high : 0 0 pps
  High : 0 0 pps
RED-dropped bytes : 0 0 bps
  Low : 0 0 bps
  Medium-low : 0 0 bps
  Medium-high : 0 0 bps
  High : 0 0 bps
Queue: 2, Forwarding classes: assured-forwarding
Queued:
  Packets : 0 0 pps
  Bytes : 0 0 bps

```

```

Transmitted:
Packets          :                0                0 pps
Bytes            :                0                0 bps
Tail-dropped packets : Not Available
RED-dropped packets :                0                0 pps
  Low            :                0                0 pps
  Medium-low     :                0                0 pps
  Medium-high    :                0                0 pps
  High           :                0                0 pps
RED-dropped bytes  :                0                0 bps
  Low            :                0                0 bps
  Medium-low     :                0                0 bps
  Medium-high    :                0                0 bps
  High           :                0                0 bps
Queue: 3, Forwarding classes: network-control
Queued:
Packets          :                0                0 pps
Bytes            :                0                0 bps
Transmitted:
Packets          :                0                0 pps
Bytes            :                0                0 bps
Tail-dropped packets : Not Available
RED-dropped packets :                0                0 pps
  Low            :                0                0 pps
  Medium-low     :                0                0 pps
  Medium-high    :                0                0 pps
  High           :                0                0 pps
RED-dropped bytes  :                0                0 bps
  Low            :                0                0 bps
  Medium-low     :                0                0 bps
  Medium-high    :                0                0 bps
  High           :                0                0 bps

```

#### show interfaces queue (Channelized OC12 IQE Type 3 PIC in SONET Mode)

```

user@host> show interfaces queue t3-1/1/0:7
Physical interface: t3-1/1/0:7, Enabled, Physical link is Up

  Interface index: 192, SNMP ifIndex: 1948

  Description: full T3 interface connect to 6ce13 t3-3/1/0:7 for FR testing -
  Lam

  Forwarding classes: 16 supported, 9 in use

  Egress queues: 8 supported, 8 in use

  Queue: 0, Forwarding classes: DEFAULT

  Queued:

    Packets          :                214886                13449 pps

    Bytes            :                9884756                5164536 bps

  Transmitted:

    Packets          :                214886                13449 pps

    Bytes            :                9884756                5164536 bps

```

Tail-dropped packets :	0	0 pps
RED-dropped packets :	0	0 pps
Low :	0	0 pps
Medium-low :	0	0 pps
Medium-high :	0	0 pps
High :	0	0 pps
RED-dropped bytes :	0	0 bps
Low :	0	0 bps
Medium-low :	0	0 bps
Medium-high :	0	0 bps
High :	0	0 bps

Queue: 1, Forwarding classes: REALTIME

Queued:

Packets :	0	0 pps
Bytes :	0	0 bps

Transmitted:

Packets :	0	0 pps
Bytes :	0	0 bps
Tail-dropped packets :	0	0 pps
RED-dropped packets :	0	0 pps
Low :	0	0 pps
Medium-low :	0	0 pps
Medium-high :	0	0 pps
High :	0	0 pps
RED-dropped bytes :	0	0 bps
Low :	0	0 bps
Medium-low :	0	0 bps
Medium-high :	0	0 bps
High :	0	0 bps

Queue: 2, Forwarding classes: PRIVATE



## Queued:

Packets	:	0	0 pps
---------	---	---	-------

Bytes	:	0	0 bps
-------	---	---	-------

## Transmitted:

Packets	:	0	0 pps
---------	---	---	-------

Bytes	:	0	0 bps
-------	---	---	-------

Tail-dropped packets	:	0	0 pps
----------------------	---	---	-------

RED-dropped packets	:	0	0 pps
---------------------	---	---	-------

Low	:	0	0 pps
-----	---	---	-------

Medium-low	:	0	0 pps
------------	---	---	-------

Medium-high	:	0	0 pps
-------------	---	---	-------

High	:	0	0 pps
------	---	---	-------

RED-dropped bytes	:	0	0 bps
-------------------	---	---	-------

Low	:	0	0 bps
-----	---	---	-------

Medium-low	:	0	0 bps
------------	---	---	-------

Medium-high	:	0	0 bps
-------------	---	---	-------

High	:	0	0 bps
------	---	---	-------

## Queue: 3, Forwarding classes: CONTROL

## Queued:

Packets	:	60	0 pps
---------	---	----	-------

Bytes	:	4560	0 bps
-------	---	------	-------

## Transmitted:

Packets	:	60	0 pps
---------	---	----	-------

Bytes	:	4560	0 bps
-------	---	------	-------

Tail-dropped packets	:	0	0 pps
----------------------	---	---	-------

RED-dropped packets	:	0	0 pps
---------------------	---	---	-------

Low	:	0	0 pps
-----	---	---	-------

Medium-low	:	0	0 pps
------------	---	---	-------

Medium-high	:	0	0 pps
-------------	---	---	-------

High	:	0	0 pps
------	---	---	-------

RED-dropped bytes	:	0	0 bps
-------------------	---	---	-------

Low	:	0	0 bps
Medium-low	:	0	0 bps
Medium-high	:	0	0 bps
High	:	0	0 bps

Queue: 4, Forwarding classes: CLASS\_B\_OUTPUT

Queued:

Packets	:	0	0 pps
Bytes	:	0	0 bps

Transmitted:

Packets	:	0	0 pps
Bytes	:	0	0 bps
Tail-dropped packets	:	0	0 pps
RED-dropped packets	:	0	0 pps
Low	:	0	0 pps
Medium-low	:	0	0 pps
Medium-high	:	0	0 pps
High	:	0	0 pps
RED-dropped bytes	:	0	0 bps
Low	:	0	0 bps
Medium-low	:	0	0 bps
Medium-high	:	0	0 bps
High	:	0	0 bps

Queue: 5, Forwarding classes: CLASS\_C\_OUTPUT

Queued:

Packets	:	0	0 pps
Bytes	:	0	0 bps

Transmitted:

Packets	:	0	0 pps
Bytes	:	0	0 bps
Tail-dropped packets	:	0	0 pps

RED-dropped packets	:	0	0 pps
Low	:	0	0 pps
Medium-low	:	0	0 pps
Medium-high	:	0	0 pps
High	:	0	0 pps
RED-dropped bytes	:	0	0 bps
Low	:	0	0 bps
Medium-low	:	0	0 bps
Medium-high	:	0	0 bps
High	:	0	0 bps

Queue: 6, Forwarding classes: CLASS\_V\_OUTPUT

Queued:

Packets	:	0	0 pps
Bytes	:	0	0 bps

Transmitted:

Packets	:	0	0 pps
Bytes	:	0	0 bps
Tail-dropped packets	:	0	0 pps
RED-dropped packets	:	0	0 pps
Low	:	0	0 pps
Medium-low	:	0	0 pps
Medium-high	:	0	0 pps
High	:	0	0 pps
RED-dropped bytes	:	0	0 bps
Low	:	0	0 bps
Medium-low	:	0	0 bps
Medium-high	:	0	0 bps
High	:	0	0 bps

Queue: 7, Forwarding classes: CLASS\_S\_OUTPUT, GETS

Queued:

Packets	:	0	0 pps
---------	---	---	-------

Bytes	:	0	0 bps
Transmitted:			
Packets	:	0	0 pps
Bytes	:	0	0 bps
Tail-dropped packets	:	0	0 pps
RED-dropped packets	:	0	0 pps
Low	:	0	0 pps
Medium-low	:	0	0 pps
Medium-high	:	0	0 pps
High	:	0	0 pps
RED-dropped bytes	:	0	0 bps
Low	:	0	0 bps
Medium-low	:	0	0 bps
Medium-high	:	0	0 bps
High	:	0	0 bps

Packet Forwarding Engine Chassis Queues:

Queues: 8 supported, 8 in use

Queue: 0, Forwarding classes: DEFAULT

Queued:

Packets	:	371365	23620 pps
Bytes	:	15597330	7936368 bps

Transmitted:

Packets	:	371365	23620 pps
Bytes	:	15597330	7936368 bps
Tail-dropped packets	:	0	0 pps
RED-dropped packets	:	0	0 pps
Low	:	0	0 pps
Medium-low	:	0	0 pps
Medium-high	:	0	0 pps

High	:	0	0 pps
RED-dropped bytes	:	0	0 bps
Low	:	0	0 bps
Medium-low	:	0	0 bps
Medium-high	:	0	0 bps
High	:	0	0 bps

Queue: 1, Forwarding classes: REALTIME

Queued:

Packets	:	0	0 pps
Bytes	:	0	0 bps

Transmitted:

Packets	:	0	0 pps
Bytes	:	0	0 bps
Tail-dropped packets	:	0	0 pps
RED-dropped packets	:	0	0 pps
Low	:	0	0 pps
Medium-low	:	0	0 pps
Medium-high	:	0	0 pps
High	:	0	0 pps
RED-dropped bytes	:	0	0 bps
Low	:	0	0 bps
Medium-low	:	0	0 bps
Medium-high	:	0	0 bps
High	:	0	0 bps

Queue: 2, Forwarding classes: PRIVATE

Queued:

Packets	:	0	0 pps
Bytes	:	0	0 bps

Transmitted:

Packets	:	0	0 pps
Bytes	:	0	0 bps

Tail-dropped packets :	0	0 pps
RED-dropped packets :	0	0 pps
Low :	0	0 pps
Medium-low :	0	0 pps
Medium-high :	0	0 pps
High :	0	0 pps
RED-dropped bytes :	0	0 bps
Low :	0	0 bps
Medium-low :	0	0 bps
Medium-high :	0	0 bps
High :	0	0 bps

Queue: 3, Forwarding classes: CONTROL

Queued:

Packets :	32843	0 pps
Bytes :	2641754	56 bps

Transmitted:

Packets :	32843	0 pps
Bytes :	2641754	56 bps
Tail-dropped packets :	0	0 pps
RED-dropped packets :	0	0 pps
Low :	0	0 pps
Medium-low :	0	0 pps
Medium-high :	0	0 pps
High :	0	0 pps
RED-dropped bytes :	0	0 bps
Low :	0	0 bps
Medium-low :	0	0 bps
Medium-high :	0	0 bps
High :	0	0 bps

Queue: 4, Forwarding classes: CLASS\_B\_OUTPUT

## Queued:

Packets	:	0	0 pps
---------	---	---	-------

Bytes	:	0	0 bps
-------	---	---	-------

## Transmitted:

Packets	:	0	0 pps
---------	---	---	-------

Bytes	:	0	0 bps
-------	---	---	-------

Tail-dropped packets	:	0	0 pps
----------------------	---	---	-------

RED-dropped packets	:	0	0 pps
---------------------	---	---	-------

Low	:	0	0 pps
-----	---	---	-------

Medium-low	:	0	0 pps
------------	---	---	-------

Medium-high	:	0	0 pps
-------------	---	---	-------

High	:	0	0 pps
------	---	---	-------

RED-dropped bytes	:	0	0 bps
-------------------	---	---	-------

Low	:	0	0 bps
-----	---	---	-------

Medium-low	:	0	0 bps
------------	---	---	-------

Medium-high	:	0	0 bps
-------------	---	---	-------

High	:	0	0 bps
------	---	---	-------

## Queue: 5, Forwarding classes: CLASS\_C\_OUTPUT

## Queued:

Packets	:	0	0 pps
---------	---	---	-------

Bytes	:	0	0 bps
-------	---	---	-------

## Transmitted:

Packets	:	0	0 pps
---------	---	---	-------

Bytes	:	0	0 bps
-------	---	---	-------

Tail-dropped packets	:	0	0 pps
----------------------	---	---	-------

RED-dropped packets	:	0	0 pps
---------------------	---	---	-------

Low	:	0	0 pps
-----	---	---	-------

Medium-low	:	0	0 pps
------------	---	---	-------

Medium-high	:	0	0 pps
-------------	---	---	-------

High	:	0	0 pps
------	---	---	-------

RED-dropped bytes	:	0	0 bps
-------------------	---	---	-------

Low	:	0	0 bps
Medium-low	:	0	0 bps
Medium-high	:	0	0 bps
High	:	0	0 bps

Queue: 6, Forwarding classes: CLASS\_V\_OUTPUT

Queued:

Packets	:	0	0 pps
Bytes	:	0	0 bps

Transmitted:

Packets	:	0	0 pps
Bytes	:	0	0 bps
Tail-dropped packets	:	0	0 pps
RED-dropped packets	:	0	0 pps
Low	:	0	0 pps
Medium-low	:	0	0 pps
Medium-high	:	0	0 pps
High	:	0	0 pps
RED-dropped bytes	:	0	0 bps
Low	:	0	0 bps
Medium-low	:	0	0 bps
Medium-high	:	0	0 bps
High	:	0	0 bps

Queue: 7, Forwarding classes: CLASS\_S\_OUTPUT, GETS

Queued:

Packets	:	0	0 pps
Bytes	:	0	0 bps

Transmitted:

Packets	:	0	0 pps
Bytes	:	0	0 bps
Tail-dropped packets	:	0	0 pps



RED-dropped packets	:	0	0 pps
Low	:	0	0 pps
Medium-low	:	0	0 pps
Medium-high	:	0	0 pps
High	:	0	0 pps
RED-dropped bytes	:	0	0 bps
Low	:	0	0 bps
Medium-low	:	0	0 bps
Medium-high	:	0	0 bps
High	:	0	0 bps

### show interfaces queue (QFX Series)

```

user@switch> show interfaces queue xe-0/0/15
Physical interface: xe-0/0/15, Enabled, Physical link is Up
Interface index: 49165, SNMP ifIndex: 539
Forwarding classes: 12 supported, 8 in use
Egress queues: 12 supported, 8 in use
Queue: 0, Forwarding classes: best-effort
  Queued:
    Packets      : 0      0 pps
    Bytes        : 0      0 bps
  Transmitted:
    Packets      : 0      0 pps
    Bytes        : 0      0 bps
    Tail-dropped packets : Not Available
    Total-dropped packets: 0      0 pps
    Total-dropped bytes  : 0      0 bps
Queue: 3, Forwarding classes: fcoe
  Queued:
    Packets      : 0      0 pps
    Bytes        : 0      0 bps
  Transmitted:
    Packets      : 0      0 pps
    Bytes        : 0      0 bps
    Tail-dropped packets : Not Available
    Total-dropped packets: 0      0 pps
    Total-dropped bytes  : 0      0 bps
0 bps
Queue: 4, Forwarding classes: no-loss
  Queued:
    Packets      : 0      0 pps
    Bytes        : 0      0 bps
  Transmitted:
    Packets      : 0      0 pps
    Bytes        : 0      0 bps
    Tail-dropped packets : Not Available
    Total-dropped packets: 0      0 pps
    Total-dropped bytes  : 0      0 bps
Queue: 7, Forwarding classes: network-control

```

```

Queued:
  Packets      :          0          0 pps
  Bytes       :          0          0 bps
Transmitted:
  Packets      :          0          0 pps
  Bytes       :          0          0 bps
Tail-dropped packets : Not Available
Total-dropped packets:          0          0 pps
Total-dropped bytes  :          0          0 bps
Queue: 8, Forwarding classes: mcast
Queued:
  Packets      :          0          0 pps
  Bytes       :          0          0 bps
Transmitted:
  Packets      :          0          0 pps
  Bytes       :          0          0 bps
Tail-dropped packets : Not Available
Total-dropped packets:          0          0 pps
Total-dropped bytes  :          0          0 bps

```

#### show interfaces queue l2-statistics (lsq interface)

```

user@switch> show interfaces queue lsq-2/2/0.2 l2-statistics
Logical interface lsq-2/2/0.2 (Index 69) (SNMP ifIndex 1598)
Forwarding classes: 16 supported, 4 in use
Egress queues: 8 supported, 4 in use
Burst size: 0
Queue: 0, Forwarding classes: be
Queued:
  Packets      :          1          0 pps
  Bytes       :        1001          0 bps
Transmitted:
  Packets      :          5          0 pps
  Bytes       :        1062          0 bps
Tail-dropped packets :          0          0 pps
RED-dropped packets :          0          0 pps
RED-dropped bytes  :          0          0 bps
Queue: 1, Forwarding classes: ef
Queued:
  Packets      :          1          0 pps
  Bytes       :        1500          0 bps
Transmitted:
  Packets      :          6          0 pps
  Bytes       :       1573          0 bps
Tail-dropped packets :          0          0 pps
RED-dropped packets :          0          0 pps
RED-dropped bytes  :          0          0 bps
Queue: 2, Forwarding classes: af
Queued:
  Packets      :          1          0 pps
  Bytes       :         512          0 bps
Transmitted:
  Packets      :          3          0 pps
  Bytes       :         549          0 bps
Tail-dropped packets :          0          0 pps
RED-dropped packets :          0          0 pps
RED-dropped bytes  :          0          0 bps
Queue: 3, Forwarding classes: nc
Queued:
  Packets      :          0          0 pps

```

```

Bytes : 0 0 bps
Transmitted:
Packets : 0 0 pps
Bytes : 0 0 bps
Tail-dropped packets : 0 0 pps
RED-dropped packets : 0 0 pps
RED-dropped bytes : 0 0 bps
=====

```

### show interfaces queue lsq (lsq-ifd)

```

user@switch> show interfaces queue lsq-1/0/0
Logical interface lsq-1/0/0 (Index 348) (SNMP ifIndex 660)
Forwarding classes: 16 supported, 4 in use
Egress queues: 8 supported, 4 in use
Burst size: 0
Queue: 0, Forwarding classes: be
  Queued:
    Packets : 55576 1206 pps
    Bytes : 29622008 5145472 bps
  Transmitted:
    Packets : 55576 1206 pps
    Bytes : 29622008 5145472 bps
    Tail-dropped packets : 0 0 pps
    RL-dropped packets : 0 0 pps
    RL-dropped bytes : 0 0 bps
    RED-dropped packets : 0 0 pps
    Low : 0 0 pps
    Medium-low : 0 0 pps
    Medium-high : 0 0 pps
    High : 0 0 pps
    RED-dropped bytes : 0 0 bps
    Low : 0 0 bps
    Medium-low : 0 0 bps
    Medium-high : 0 0 bps
    High : 0 0 bps
Queue: 1, Forwarding classes: ef
  Queued:
    Packets : 0 0 pps
    Bytes : 0 0 bps
  Transmitted:
    Packets : 0 0 pps
    Bytes : 0 0 bps
    Tail-dropped packets : 0 0 pps
    RL-dropped packets : 0 0 pps
    RL-dropped bytes : 0 0 bps
    RED-dropped packets : 0 0 pps
    Low : 0 0 pps
    Medium-low : 0 0 pps
    Medium-high : 0 0 pps
    High : 0 0 pps
    RED-dropped bytes : 0 0 bps
    Low : 0 0 bps
    Medium-low : 0 0 bps
    Medium-high : 0 0 bps
    High : 0 0 bps
Queue: 2, Forwarding classes: af
  Queued:
    Packets : 0 0 pps
    Bytes : 0 0 bps

```

```
Transmitted:
Packets      :                0                0 pps
Bytes        :                0                0 bps
Tail-dropped packets :                0                0 pps
RL-dropped packets :                0                0 pps
RL-dropped bytes  :                0                0 bps
RED-dropped packets :                0                0 pps
  Low          :                0                0 pps
  Medium-low    :                0                0 pps
  Medium-high   :                0                0 pps
  High          :                0                0 pps
RED-dropped bytes :                0                0 bps
  Low          :                0                0 bps
  Medium-low    :                0                0 bps
  Medium-high   :                0                0 bps
  High          :                0                0 bps
Queue: 3, Forwarding classes: nc
Queued:
Packets      :                22231            482 pps
Bytes        :            11849123          2057600 bps
Transmitted:
Packets      :                22231            482 pps
Bytes        :            11849123          2057600 bps
Tail-dropped packets :                0                0 pps
RL-dropped packets :                0                0 pps
RL-dropped bytes  :                0                0 bps
RED-dropped packets :                0                0 pps
  Low          :                0                0 pps
  Medium-low    :                0                0 pps
  Medium-high   :                0                0 pps
  High          :                0                0 pps
RED-dropped bytes :                0                0 bps
  Low          :                0                0 bps
  Medium-low    :                0                0 bps
  Medium-high   :                0                0 bps
  High          :                0                0 bps
```

## show interfaces voq

**Supported Platforms** PTX Series, QFX Series standalone switches

**Syntax** `show interfaces voq interface-name`  
`<forwarding-class forwarding-class-name>`  
`<non-zero>`  
`<source-fpc source-fpc-number>`

**Release Information** Command introduced in Junos OS Release 14.1 for the PTX Series Routers  
 Command introduced in Junos OS Release 15.1X53-D20 for QFX10000 switches.

**Description** Display the random early detection (RED) drop statistics from all ingress Packet Forwarding Engines associated with the specified physical egress interface. In the VOQ architecture, egress output queues (shallow buffers) buffer data in virtual queues on ingress Packet Forwarding Engines. In cases of congestion, you can use this command to identify which ingress Packet Forwarding Engine is the source of RED-dropped packets contributing to congestion.



**NOTE:** On the PTX Series routers and QFX10000 switches, these statistics include tail-dropped packets.

**Options** `interface interface-name`—Display the ingress VOQ RED drop statistics for the specified egress interface.

`forwarding-class forwarding-class-name`—Display VOQ RED drop statistics for a specified forwarding class.

`non-zero`—Display only non-zero VOQ RED drop statistics counters.

`source-fpc source-fpc-number`—Display VOQ RED drop statistics for the specified source FPC.

**Additional Information**

- On PTX Series routers, you can display VOQ statistics for only the WAN physical interface.
- VOQ statistics for aggregated physical interfaces are not supported. Statistics for an aggregated interface are the summation of the queue statistics of the child links of that aggregated interface. You can use the **show interfaces queue** command to identify the child link which is experiencing congestion and then view the VOQ statistics on the respective child link using the **show interfaces voq** command.

For information on virtual output queuing on PTX routers, see *Understanding Virtual Output Queues on PTX Series Packet Transport Routers*. For information on virtual output queueing on QFX10000 switches, see *Understanding CoS Virtual Output Queues (VOQs) on QFX10000 Switches*.

**Required Privilege Level** view

**Related Documentation**

- [Understanding Virtual Output Queues on PTX Series Packet Transport Routers](#)
- [Understanding CoS Virtual Output Queues \(VOQs\) on QFX10000 Switches](#)

**List of Sample Output**

[show interfaces voq \(For a Specific Physical Interface\) \(PTX Series Routers\) on page 411](#)

[show interfaces voq \(For a Specific Physical Interface\) \(QFX10000 Switches\) on page 416](#)

[show interfaces voq et-7/0/0 \(For a Specific Forwarding Class\) on page 417](#)

[show interfaces voq et-5/0/12 \(For a Specific Source FPC\) on page 419](#)

[show interfaces voq et-5/0/12 \(For a Specific Forwarding Class and Source FPC\) on page 420](#)

[show interfaces voq et-7/0/0 \(Non-Zero\) on page 420](#)

[show interfaces voq et-7/0/0 \(For a Specific Forwarding Class and Non-Zero\) on page 421](#)

**Output Fields** [Table 54 on page 254](#) lists the output fields for the show interfaces queue command. Output fields are listed in the approximate order in which they appear.

**Table 78: show interfaces voq Output Fields**

Field Name	Field Description
Physical interface	Name of the physical interface.
Enabled	State of the interface. Possible values are described in the "Enabled Field" section under <i>Common Output Fields Description</i> .
Interface index	Physical interface's index number, which reflects its initialization sequence.
SNMP ifIndex	SNMP index number for the interface.
Queue	Egress queue number.
Forwarding classes	Forwarding class name.
FPC number	Number of the Flexible PIC Concentrator (FPC) located on ingress.
PFE	Number of the Packet Forwarding Engine providing virtual output queues on the ingress.
RED-dropped packets	<p>Number of packets per second (pps) dropped because of random early detection (RED).</p> <p><b>NOTE:</b> On the PTX Series routers, these statistics include tail-dropped packets.</p>

Table 78: show interfaces voq Output Fields (*continued*)

Field Name	Field Description
RED-dropped bytes	Number of bytes per second dropped because of RED. The byte counts vary by interface hardware.  <b>NOTE:</b> On the PTX Series routers, these statistics include tail-dropped packets.

## Sample Output

### show interfaces voq (For a Specific Physical Interface) (PTX Series Routers)

The following example shows ingress RED-dropped statistics for the egress Ethernet interface configured on port 0 of Physical Interface Card (PIC) 0, located on the FPC in slot 7.

The sample output below shows that the cause of the congestion is ingress Packet Forwarding Engine PFE 0, which resides on FPC number 4, as denoted by the count of RED-dropped packets and RED-dropped bytes for egress queue 0, forwarding classes best-effort and egress queue 3, forwarding class network control.

```

user@host> show interfaces voq et-7/0/0
Physical interface: et-7/0/0, Enabled, Physical link is Up
  Interface index: 155, SNMP ifIndex: 699

Queue: 0, Forwarding classes: best-effort

FPC number: 1
  PFE: 0
    RED-dropped packets :                0                0 pps
    RED-dropped bytes   :                0                0 bps
  PFE: 1
    RED-dropped packets :                0                0 pps
    RED-dropped bytes   :                0                0 bps
  PFE: 2
    RED-dropped packets :                0                0 pps
    RED-dropped bytes   :                0                0 bps
  PFE: 3
    RED-dropped packets :                0                0 pps
    RED-dropped bytes   :                0                0 bps

FPC number: 4
  PFE: 0
    RED-dropped packets :           19969426           2323178 pps
    RED-dropped bytes   :           2196636860       2044397464 bps
  PFE: 1
    RED-dropped packets :                0                0 pps
    RED-dropped bytes   :                0                0 bps
  PFE: 2
    RED-dropped packets :                0                0 pps
    RED-dropped bytes   :                0                0 bps
  PFE: 3
    RED-dropped packets :                0                0 pps
    RED-dropped bytes   :                0                0 bps

FPC number: 6

```

```

PFE: 0
  RED-dropped packets :          19969424          2321205 pps
  RED-dropped bytes   :          2196636640          2042660808 bps
PFE: 1
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 2
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 3
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 4
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 5
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 6
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 7
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps

FPC number: 7
PFE: 0
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 1
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 2
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 3
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps

Queue: 1, Forwarding classes: expedited-forwarding

FPC number: 1
PFE: 0
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 1
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 2
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 3
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps

FPC number: 4
PFE: 0
  RED-dropped packets :              0              0 pps
  RED-dropped bytes   :              0              0 bps
PFE: 1
  RED-dropped packets :              0              0 pps

```



```

        RED-dropped bytes      :                0                0 bps
PFE: 2
        RED-dropped packets    :                0                0 pps
        RED-dropped bytes      :                0                0 bps
PFE: 3
        RED-dropped packets    :                0                0 pps
        RED-dropped bytes      :                0                0 bps

FPC number: 6
PFE: 0
        RED-dropped packets    :                0                0 pps
        RED-dropped bytes      :                0                0 bps
PFE: 1
        RED-dropped packets    :                0                0 pps
        RED-dropped bytes      :                0                0 bps
PFE: 2
        RED-dropped packets    :                0                0 pps
        RED-dropped bytes      :                0                0 bps
PFE: 3
        RED-dropped packets    :                0                0 pps
        RED-dropped bytes      :                0                0 bps
PFE: 4
        RED-dropped packets    :                0                0 pps
        RED-dropped bytes      :                0                0 bps
PFE: 5
        RED-dropped packets    :                0                0 pps
        RED-dropped bytes      :                0                0 bps
PFE: 6
        RED-dropped packets    :                0                0 pps
        RED-dropped bytes      :                0                0 bps
PFE: 7
        RED-dropped packets    :                0                0 pps
        RED-dropped bytes      :                0                0 bps

FPC number: 7
PFE: 0
        RED-dropped packets    :                0                0 pps
        RED-dropped bytes      :                0                0 bps
PFE: 1
        RED-dropped packets    :                0                0 pps
        RED-dropped bytes      :                0                0 bps
PFE: 2
        RED-dropped packets    :                0                0 pps
        RED-dropped bytes      :                0                0 bps
PFE: 3
        RED-dropped packets    :                0                0 pps
        RED-dropped bytes      :                0                0 bps

Queue: 2, Forwarding classes: assured-forwarding

FPC number: 1
PFE: 0
        RED-dropped packets    :                0                0 pps
        RED-dropped bytes      :                0                0 bps
PFE: 1
        RED-dropped packets    :                0                0 pps
        RED-dropped bytes      :                0                0 bps
PFE: 2
        RED-dropped packets    :                0                0 pps
        RED-dropped bytes      :                0                0 bps
PFE: 3

```

```

    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps

FPC number: 4
PFE: 0
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps
PFE: 1
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps
PFE: 2
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps
PFE: 3
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps

FPC number: 6
PFE: 0
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps
PFE: 1
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps
PFE: 2
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps
PFE: 3
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps
PFE: 4
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps
PFE: 5
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps
PFE: 6
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps
PFE: 7
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps

FPC number: 7
PFE: 0
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps
PFE: 1
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps
PFE: 2
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps
PFE: 3
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps

Queue: 3, Forwarding classes: network-control

FPC number: 1
PFE: 0
```

```

    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps
PFE: 1
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps
PFE: 2
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps
PFE: 3
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps

FPC number: 4
PFE: 0
    RED-dropped packets :      16338670      1900314 pps
    RED-dropped bytes   :      1797253700      1672276976 bps
PFE: 1
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps
PFE: 2
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps
PFE: 3
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps

FPC number: 6
PFE: 0
    RED-dropped packets :      16338698      1899163 pps
    RED-dropped bytes   :      1797256780      1671263512 bps
PFE: 1
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps
PFE: 2
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps
PFE: 3
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps
PFE: 4
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps
PFE: 5
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps
PFE: 6
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps
PFE: 7
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps

FPC number: 7
PFE: 0
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps
PFE: 1
    RED-dropped packets :          0          0 pps
    RED-dropped bytes   :          0          0 bps
PFE: 2
    RED-dropped packets :          0          0 pps

```

```

RED-dropped bytes      :                0                0 bps
PFE: 3
RED-dropped packets    :                0                0 pps
RED-dropped bytes      :                0                0 bps

```

### show interfaces voq (For a Specific Physical Interface) (QFX10000 Switches)

The sample output below shows congestion on ingress PFE 1 on FPC number 0, and on ingress PFE 2 on FPC number 1, as denoted by the count of RED-dropped packets and RED-dropped bytes for best-effort egress queue 0.

```

user@host> show interfaces voq et-1/0/0
Physical interface: et-1/0/0, Enabled, Physical link is Up
Interface index: 659, SNMP ifIndex: 539

```

Queue: 0, Forwarding classes: best-effort

```

FPC number: 0
PFE: 0
RED-dropped packets    :                0                0 pps
RED-dropped bytes      :                0                0 bps
PFE: 1
RED-dropped packets    :          411063248          16891870 pps
RED-dropped bytes      :          52616095744          17297275600 bps
PFE: 2
RED-dropped packets    :                0                0 pps
RED-dropped bytes      :                0                0 bps

FPC number: 1
PFE: 0
RED-dropped packets    :                0                0 pps
RED-dropped bytes      :                0                0 bps
PFE: 1
RED-dropped packets    :                0                0 pps
RED-dropped bytes      :                0                0 bps
PFE: 2
RED-dropped packets    :          411063012          16891870 pps
RED-dropped bytes      :          52616065536          17297275376 bps

```

Queue: 3, Forwarding classes: fcoe

```

FPC number: 0
PFE: 0
RED-dropped packets    :                0                0 pps
RED-dropped bytes      :                0                0 bps
PFE: 1
RED-dropped packets    :                0                0 pps
RED-dropped bytes      :                0                0 bps
PFE: 2
RED-dropped packets    :                0                0 pps
RED-dropped bytes      :                0                0 bps

FPC number: 1
PFE: 0
RED-dropped packets    :                0                0 pps
RED-dropped bytes      :                0                0 bps
PFE: 1
RED-dropped packets    :                0                0 pps
RED-dropped bytes      :                0                0 bps
PFE: 2
RED-dropped packets    :                0                0 pps

```

```

        RED-dropped bytes      :                0                0 bps
Queue: 4, Forwarding classes: no-loss

FPC number: 0
PFE: 0
    RED-dropped packets :                0                0 pps
    RED-dropped bytes   :                0                0 bps
PFE: 1
    RED-dropped packets :                0                0 pps
    RED-dropped bytes   :                0                0 bps
PFE: 2
    RED-dropped packets :                0                0 pps
    RED-dropped bytes   :                0                0 bps

FPC number: 1
PFE: 0
    RED-dropped packets :                0                0 pps
    RED-dropped bytes   :                0                0 bps
PFE: 1
    RED-dropped packets :                0                0 pps
    RED-dropped bytes   :                0                0 bps
PFE: 2
    RED-dropped packets :                0                0 pps
    RED-dropped bytes   :                0                0 bps

Queue: 7, Forwarding classes: network-control

FPC number: 0
PFE: 0
    RED-dropped packets :                0                0 pps
    RED-dropped bytes   :                0                0 bps
PFE: 1
    RED-dropped packets :                0                0 pps
    RED-dropped bytes   :                0                0 bps
PFE: 2
    RED-dropped packets :                0                0 pps
    RED-dropped bytes   :                0                0 bps

FPC number: 1
PFE: 0
    RED-dropped packets :                0                0 pps
    RED-dropped bytes   :                0                0 bps
PFE: 1
    RED-dropped packets :                0                0 pps
    RED-dropped bytes   :                0                0 bps
PFE: 2
    RED-dropped packets :                0                0 pps
    RED-dropped bytes   :                0                0 bps

```

#### show interfaces voq et-7/0/0 (For a Specific Forwarding Class)

```

user@host> show interfaces voq et-7/0/0 forwarding-class best-effort
Physical interface: et-7/0/0, Enabled, Physical link is Up
Interface index: 155, SNMP ifIndex: 699

Queue: 0, Forwarding classes: best-effort

FPC number: 1
PFE: 0
    RED-dropped packets :                0                0 pps

```

```

    RED-dropped bytes      :                0                0 bps
PFE: 1
    RED-dropped packets    :                0                0 pps
    RED-dropped bytes      :                0                0 bps
PFE: 2
    RED-dropped packets    :                0                0 pps
    RED-dropped bytes      :                0                0 bps
PFE: 3
    RED-dropped packets    :                0                0 pps
    RED-dropped bytes      :                0                0 bps

FPC number: 4
PFE: 0
    RED-dropped packets    :          66604786          2321519 pps
    RED-dropped bytes      :          7326526460          2042936776 bps
PFE: 1
    RED-dropped packets    :                0                0 pps
    RED-dropped bytes      :                0                0 bps
PFE: 2
    RED-dropped packets    :                0                0 pps
    RED-dropped bytes      :                0                0 bps
PFE: 3
    RED-dropped packets    :                0                0 pps
    RED-dropped bytes      :                0                0 bps

FPC number: 6
PFE: 0
    RED-dropped packets    :          66604794          371200 pps
    RED-dropped bytes      :          7326527340          326656000 bps
PFE: 1
    RED-dropped packets    :                0                0 pps
    RED-dropped bytes      :                0                0 bps
PFE: 2
    RED-dropped packets    :                0                0 pps
    RED-dropped bytes      :                0                0 bps
PFE: 3
    RED-dropped packets    :                0                0 pps
    RED-dropped bytes      :                0                0 bps
PFE: 4
    RED-dropped packets    :                0                0 pps
    RED-dropped bytes      :                0                0 bps
PFE: 5
    RED-dropped packets    :                0                0 pps
    RED-dropped bytes      :                0                0 bps
PFE: 6
    RED-dropped packets    :                0                0 pps
    RED-dropped bytes      :                0                0 bps
PFE: 7
    RED-dropped packets    :                0                0 pps
    RED-dropped bytes      :                0                0 bps

FPC number: 7
PFE: 0
    RED-dropped packets    :                0                0 pps
    RED-dropped bytes      :                0                0 bps
PFE: 1
    RED-dropped packets    :                0                0 pps
    RED-dropped bytes      :                0                0 bps
PFE: 2
    RED-dropped packets    :                0                0 pps
    RED-dropped bytes      :                0                0 bps

```

```

PFE: 3
  RED-dropped packets :          0          0 pps
  RED-dropped bytes   :          0          0 bps

```

### show interfaces voq et-5/0/12 (For a Specific Source FPC)

```
user@host> show interfaces voq et-5/0/12 source-fpc 0
```

```
Physical interface: et-5/0/12, Enabled, Physical link is Up
Interface index: 166, SNMP ifIndex: 1104
```

```
Queue: 0, Forwarding classes: best-effort
```

```
FPC number: 0
```

```

PFE: 0
  RED-dropped packets :          0          0 pps
  RED-dropped bytes   :          0          0 bps
PFE: 1
  RED-dropped packets :          0          0 pps
  RED-dropped bytes   :          0          0 bps
PFE: 2
  RED-dropped packets :          0          0 pps
  RED-dropped bytes   :          0          0 bps
PFE: 3
  RED-dropped packets :          0          0 pps
  RED-dropped bytes   :          0          0 bps

```

```
Queue: 1, Forwarding classes: expedited-forwarding
```

```
FPC number: 0
```

```

PFE: 0
  RED-dropped packets :          0          0 pps
  RED-dropped bytes   :          0          0 bps
PFE: 1
  RED-dropped packets :          0          0 pps
  RED-dropped bytes   :          0          0 bps
PFE: 2
  RED-dropped packets :          0          0 pps
  RED-dropped bytes   :          0          0 bps
PFE: 3
  RED-dropped packets :          0          0 pps
  RED-dropped bytes   :          0          0 bps

```

```
Queue: 2, Forwarding classes: assured-forwarding
```

```
FPC number: 0
```

```

PFE: 0
  RED-dropped packets :          0          0 pps
  RED-dropped bytes   :          0          0 bps
PFE: 1
  RED-dropped packets :          0          0 pps
  RED-dropped bytes   :          0          0 bps
PFE: 2
  RED-dropped packets :          0          0 pps
  RED-dropped bytes   :          0          0 bps
PFE: 3
  RED-dropped packets :          0          0 pps
  RED-dropped bytes   :          0          0 bps

```

```
Queue: 3, Forwarding classes: network-control
```

```
FPC number: 0
```

```

PFE: 0
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps
PFE: 1
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps
PFE: 2
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps
PFE: 3
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps

```

### show interfaces voq et-5/0/12 (For a Specific Forwarding Class and Source FPC)

```

user@host> show interfaces voq et-5/0/12 forwarding-class best-effort source-fpc 5
Physical interface: et-5/0/12, Enabled, Physical link is Up
Interface index: 166, SNMP ifIndex: 1104

```

Queue: 0, Forwarding classes: best-effort

```

FPC number: 5
PFE: 0
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps
PFE: 1
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps
PFE: 2
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps
PFE: 3
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps
PFE: 4
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps
PFE: 5
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps
PFE: 6
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps
PFE: 7
  RED-dropped packets : 0 0 pps
  RED-dropped bytes   : 0 0 bps

```

### show interfaces voq et-7/0/0 (Non-Zero)

```

user@host> show interfaces voq et-7/0/0 non-zero

```

```

Physical interface: et-7/0/0, Enabled, Physical link is Up
Interface index: 155, SNMP ifIndex: 699

```

Queue: 0, Forwarding classes: best-effort

```

FPC number: 4
PFE: 0
  RED-dropped packets : 95862238 2301586 pps
  RED-dropped bytes   : 10544846180 2025396264 bps

```



```

FPC number: 6
PFE: 0
  RED-dropped packets :          95866639          2322569 pps
  RED-dropped bytes   :          10545330290        2043860728 bps

```

Queue: 3, Forwarding classes: network-control

```

FPC number: 4
PFE: 0
  RED-dropped packets :          78433066          1899727 pps
  RED-dropped bytes   :          8627637260        1671760384 bps

```

```

FPC number: 6
PFE: 0
  RED-dropped packets :          78436704          1900628 pps
  RED-dropped bytes   :          8628037440        1672553432 bps

```

#### show interfaces voq et-7/0/0 (For a Specific Forwarding Class and Non-Zero)

```

user@host show interfaces voq et-7/0/0 forwarding-class best-effort non-zero
Physical interface: et-7/0/0, Enabled, Physical link is Up
Interface index: 155, SNMP ifIndex: 699

```

Queue: 0, Forwarding classes: best-effort

```

FPC number: 4
PFE: 0
  RED-dropped packets :          119540012          2322319 pps
  RED-dropped bytes   :          13149401320        2043640784 bps

```

```

FPC number: 6
PFE: 0
  RED-dropped packets :          119540049          2322988 pps
  RED-dropped bytes   :          13149405390        2044229744 bps

```

