



---

# Junos<sup>®</sup> OS

## RSVP LSP Tunnels Feature Guide

Release

# 10.4



Published: 2010-10-05

Revision 1

Juniper Networks, Inc.  
1194 North Mathilda Avenue  
Sunnyvale, California 94089  
USA  
408-745-2000  
www.juniper.net

This product includes the Envoy SNMP Engine, developed by Epilogue Technology, an Integrated Systems Company. Copyright © 1986-1997, Epilogue Technology Corporation. All rights reserved. This program and its documentation were developed at private expense, and no part of them is in the public domain.

This product includes memory allocation software developed by Mark Moraes, copyright © 1988, 1989, 1993, University of Toronto.

This product includes FreeBSD software developed by the University of California, Berkeley, and its contributors. All of the documentation and software included in the 4.4BSD and 4.4BSD-Lite Releases is copyrighted by the Regents of the University of California. Copyright © 1979, 1980, 1983, 1986, 1988, 1989, 1991, 1992, 1993, 1994. The Regents of the University of California. All rights reserved.

GateD software copyright © 1995, the Regents of the University. All rights reserved. Gate Daemon was originated and developed through release 3.0 by Cornell University and its collaborators. Gated is based on Kirton's EGP, UC Berkeley's routing daemon (routed), and DCN's HELLO routing protocol. Development of Gated has been supported in part by the National Science Foundation. Portions of the GateD software copyright © 1988, Regents of the University of California. All rights reserved. Portions of the GateD software copyright © 1991, D. L. S. Associates.

This product includes software developed by Maker Communications, Inc., copyright © 1996, 1997, Maker Communications, Inc.

Juniper Networks, Junos, Steel-Belted Radius, NetScreen, and ScreenOS are registered trademarks of Juniper Networks, Inc. in the United States and other countries. The Juniper Networks Logo, the Junos logo, and JunosE are trademarks of Juniper Networks, Inc. All other trademarks, service marks, registered trademarks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

Products made or sold by Juniper Networks or components thereof might be covered by one or more of the following patents that are owned by or licensed to Juniper Networks: U.S. Patent Nos. 5,473,599, 5,905,725, 5,909,440, 6,192,051, 6,333,650, 6,359,479, 6,406,312, 6,429,706, 6,459,579, 6,493,347, 6,538,518, 6,538,899, 6,552,918, 6,567,902, 6,578,186, and 6,590,785.

#### *Junos® OS RSVP LSP Tunnels Feature Guide*

Release 10.4

Copyright © 2010, Juniper Networks, Inc.

All rights reserved. Printed in USA.

Writing: Roy Spencer, Fawn Damitio, Ines Salazar, Richard Hendricks, and Walter Goralski

Editing: Nancy Kurahashi, Dawn Spencer

Illustration: Faith Bradford, Fawn Damitio, Nathaniel Woodward, Richard Hendricks, and Dawn Spencer

Cover Design: Edmonds Design

#### Revision History

October 2010—R1 Junos 10.4

The information in this document is current as of the date listed in the revision history.

#### YEAR 2000 NOTICE

Juniper Networks hardware and software products are Year 2000 compliant. The Junos OS has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

## END USER LICENSE AGREEMENT

**READ THIS END USER LICENSE AGREEMENT ("AGREEMENT") BEFORE DOWNLOADING, INSTALLING, OR USING THE SOFTWARE.** BY DOWNLOADING, INSTALLING, OR USING THE SOFTWARE OR OTHERWISE EXPRESSING YOUR AGREEMENT TO THE TERMS CONTAINED HEREIN, YOU (AS CUSTOMER OR IF YOU ARE NOT THE CUSTOMER, AS A REPRESENTATIVE/AGENT AUTHORIZED TO BIND THE CUSTOMER) CONSENT TO BE BOUND BY THIS AGREEMENT. IF YOU DO NOT OR CANNOT AGREE TO THE TERMS CONTAINED HEREIN, THEN (A) DO NOT DOWNLOAD, INSTALL, OR USE THE SOFTWARE, AND (B) YOU MAY CONTACT JUNIPER NETWORKS REGARDING LICENSE TERMS.

1. **The Parties.** The parties to this Agreement are (i) Juniper Networks, Inc. (if the Customer's principal office is located in the Americas) or Juniper Networks (Cayman) Limited (if the Customer's principal office is located outside the Americas) (such applicable entity being referred to herein as "Juniper"), and (ii) the person or organization that originally purchased from Juniper or an authorized Juniper reseller the applicable license(s) for use of the Software ("Customer") (collectively, the "Parties").

2. **The Software.** In this Agreement, "Software" means the program modules and features of the Juniper or Juniper-supplied software, for which Customer has paid the applicable license or support fees to Juniper or an authorized Juniper reseller, or which was embedded by Juniper in equipment which Customer purchased from Juniper or an authorized Juniper reseller. "Software" also includes updates, upgrades and new releases of such software. "Embedded Software" means Software which Juniper has embedded in or loaded onto the Juniper equipment and any updates, upgrades, additions or replacements which are subsequently embedded in or loaded onto the equipment.

3. **License Grant.** Subject to payment of the applicable fees and the limitations and restrictions set forth herein, Juniper grants to Customer a non-exclusive and non-transferable license, without right to sublicense, to use the Software, in executable form only, subject to the following use restrictions:

- a. Customer shall use Embedded Software solely as embedded in, and for execution on, Juniper equipment originally purchased by Customer from Juniper or an authorized Juniper reseller.
- b. Customer shall use the Software on a single hardware chassis having a single processing unit, or as many chassis or processing units for which Customer has paid the applicable license fees; provided, however, with respect to the Steel-Belted Radius or Odyssey Access Client software only, Customer shall use such Software on a single computer containing a single physical random access memory space and containing any number of processors. Use of the Steel-Belted Radius or IMS AAA software on multiple computers or virtual machines (e.g., Solaris zones) requires multiple licenses, regardless of whether such computers or virtualizations are physically contained on a single chassis.
- c. Product purchase documents, paper or electronic user documentation, and/or the particular licenses purchased by Customer may specify limits to Customer's use of the Software. Such limits may restrict use to a maximum number of seats, registered endpoints, concurrent users, sessions, calls, connections, subscribers, clusters, nodes, realms, devices, links, ports or transactions, or require the purchase of separate licenses to use particular features, functionalities, services, applications, operations, or capabilities, or provide throughput, performance, configuration, bandwidth, interface, processing, temporal, or geographical limits. In addition, such limits may restrict the use of the Software to managing certain kinds of networks or require the Software to be used only in conjunction with other specific Software. Customer's use of the Software shall be subject to all such limitations and purchase of all applicable licenses.
- d. For any trial copy of the Software, Customer's right to use the Software expires 30 days after download, installation or use of the Software. Customer may operate the Software after the 30-day trial period only if Customer pays for a license to do so. Customer may not extend or create an additional trial period by re-installing the Software after the 30-day trial period.
- e. The Global Enterprise Edition of the Steel-Belted Radius software may be used by Customer only to manage access to Customer's enterprise network. Specifically, service provider customers are expressly prohibited from using the Global Enterprise Edition of the Steel-Belted Radius software to support any commercial network access services.

The foregoing license is not transferable or assignable by Customer. No license is granted herein to any user who did not originally purchase the applicable license(s) for the Software from Juniper or an authorized Juniper reseller.

4. **Use Prohibitions.** Notwithstanding the foregoing, the license provided herein does not permit the Customer to, and Customer agrees not to and shall not: (a) modify, unbundle, reverse engineer, or create derivative works based on the Software; (b) make unauthorized copies of the Software (except as necessary for backup purposes); (c) rent, sell, transfer, or grant any rights in and to any copy of the Software, in any form, to any third party; (d) remove any proprietary notices, labels, or marks on or in any copy of the Software or any product in which the Software is embedded; (e) distribute any copy of the Software to any third party, including as may be embedded in Juniper equipment sold in the secondhand market; (f) use any 'locked' or key-restricted feature, function, service, application, operation, or capability without first purchasing the applicable license(s) and obtaining a valid key from Juniper, even if such feature, function, service, application, operation, or capability is enabled without a key; (g) distribute any key for the Software provided by Juniper to any third party; (h) use the

Software in any manner that extends or is broader than the uses purchased by Customer from Juniper or an authorized Juniper reseller; (i) use Embedded Software on non-Juniper equipment; (j) use Embedded Software (or make it available for use) on Juniper equipment that the Customer did not originally purchase from Juniper or an authorized Juniper reseller; (k) disclose the results of testing or benchmarking of the Software to any third party without the prior written consent of Juniper; or (l) use the Software in any manner other than as expressly provided herein.

5. **Audit.** Customer shall maintain accurate records as necessary to verify compliance with this Agreement. Upon request by Juniper, Customer shall furnish such records to Juniper and certify its compliance with this Agreement.

6. **Confidentiality.** The Parties agree that aspects of the Software and associated documentation are the confidential property of Juniper. As such, Customer shall exercise all reasonable commercial efforts to maintain the Software and associated documentation in confidence, which at a minimum includes restricting access to the Software to Customer employees and contractors having a need to use the Software for Customer's internal business purposes.

7. **Ownership.** Juniper and Juniper's licensors, respectively, retain ownership of all right, title, and interest (including copyright) in and to the Software, associated documentation, and all copies of the Software. Nothing in this Agreement constitutes a transfer or conveyance of any right, title, or interest in the Software or associated documentation, or a sale of the Software, associated documentation, or copies of the Software.

8. **Warranty, Limitation of Liability, Disclaimer of Warranty.** The warranty applicable to the Software shall be as set forth in the warranty statement that accompanies the Software (the "Warranty Statement"). Nothing in this Agreement shall give rise to any obligation to support the Software. Support services may be purchased separately. Any such support shall be governed by a separate, written support services agreement. TO THE MAXIMUM EXTENT PERMITTED BY LAW, JUNIPER SHALL NOT BE LIABLE FOR ANY LOST PROFITS, LOSS OF DATA, OR COSTS OR PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES, OR FOR ANY SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES ARISING OUT OF THIS AGREEMENT, THE SOFTWARE, OR ANY JUNIPER OR JUNIPER-SUPPLIED SOFTWARE. IN NO EVENT SHALL JUNIPER BE LIABLE FOR DAMAGES ARISING FROM UNAUTHORIZED OR IMPROPER USE OF ANY JUNIPER OR JUNIPER-SUPPLIED SOFTWARE. EXCEPT AS EXPRESSLY PROVIDED IN THE WARRANTY STATEMENT TO THE EXTENT PERMITTED BY LAW, JUNIPER DISCLAIMS ANY AND ALL WARRANTIES IN AND TO THE SOFTWARE (WHETHER EXPRESS, IMPLIED, STATUTORY, OR OTHERWISE), INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NONINFRINGEMENT. IN NO EVENT DOES JUNIPER WARRANT THAT THE SOFTWARE, OR ANY EQUIPMENT OR NETWORK RUNNING THE SOFTWARE, WILL OPERATE WITHOUT ERROR OR INTERRUPTION, OR WILL BE FREE OF VULNERABILITY TO INTRUSION OR ATTACK. In no event shall Juniper's or its suppliers' or licensors' liability to Customer, whether in contract, tort (including negligence), breach of warranty, or otherwise, exceed the price paid by Customer for the Software that gave rise to the claim, or if the Software is embedded in another Juniper product, the price paid by Customer for such other product. Customer acknowledges and agrees that Juniper has set its prices and entered into this Agreement in reliance upon the disclaimers of warranty and the limitations of liability set forth herein, that the same reflect an allocation of risk between the Parties (including the risk that a contract remedy may fail of its essential purpose and cause consequential loss), and that the same form an essential basis of the bargain between the Parties.

9. **Termination.** Any breach of this Agreement or failure by Customer to pay any applicable fees due shall result in automatic termination of the license granted herein. Upon such termination, Customer shall destroy or return to Juniper all copies of the Software and related documentation in Customer's possession or control.

10. **Taxes.** All license fees payable under this agreement are exclusive of tax. Customer shall be responsible for paying Taxes arising from the purchase of the license, or importation or use of the Software. If applicable, valid exemption documentation for each taxing jurisdiction shall be provided to Juniper prior to invoicing, and Customer shall promptly notify Juniper if their exemption is revoked or modified. All payments made by Customer shall be net of any applicable withholding tax. Customer will provide reasonable assistance to Juniper in connection with such withholding taxes by promptly: providing Juniper with valid tax receipts and other required documentation showing Customer's payment of any withholding taxes; completing appropriate applications that would reduce the amount of withholding tax to be paid; and notifying and assisting Juniper in any audit or tax proceeding related to transactions hereunder. Customer shall comply with all applicable tax laws and regulations, and Customer will promptly pay or reimburse Juniper for all costs and damages related to any liability incurred by Juniper as a result of Customer's non-compliance or delay with its responsibilities herein. Customer's obligations under this Section shall survive termination or expiration of this Agreement.

11. **Export.** Customer agrees to comply with all applicable export laws and restrictions and regulations of any United States and any applicable foreign agency or authority, and not to export or re-export the Software or any direct product thereof in violation of any such restrictions, laws or regulations, or without all necessary approvals. Customer shall be liable for any such violations. The version of the Software supplied to Customer may contain encryption or other capabilities restricting Customer's ability to export the Software without an export license.

12. **Commercial Computer Software.** The Software is "commercial computer software" and is provided with restricted rights. Use, duplication, or disclosure by the United States government is subject to restrictions set forth in this Agreement and as provided in DFARS 227.7201 through 227.7202-4, FAR 12.212, FAR 27.405(b)(2), FAR 52.227-19, or FAR 52.227-14 (ALT III) as applicable.

13. **Interface Information.** To the extent required by applicable law, and at Customer's written request, Juniper shall provide Customer with the interface information needed to achieve interoperability between the Software and another independently created program, on payment of applicable fee, if any. Customer shall observe strict obligations of confidentiality with respect to such information and shall use such information in compliance with any applicable terms and conditions upon which Juniper makes such information available.

14. **Third Party Software.** Any licensor of Juniper whose software is embedded in the Software and any supplier of Juniper whose products or technology are embedded in (or services are accessed by) the Software shall be a third party beneficiary with respect to this Agreement, and such licensor or vendor shall have the right to enforce this Agreement in its own name as if it were Juniper. In addition, certain third party software may be provided with the Software and is subject to the accompanying license(s), if any, of its respective owner(s). To the extent portions of the Software are distributed under and subject to open source licenses obligating Juniper to make the source code for such portions publicly available (such as the GNU General Public License ("GPL") or the GNU Library General Public License ("LGPL")), Juniper will make such source code portions (including Juniper modifications, as appropriate) available upon request for a period of up to three years from the date of distribution. Such request can be made in writing to Juniper Networks, Inc., 1194 N. Mathilda Ave., Sunnyvale, CA 94089, ATTN: General Counsel. You may obtain a copy of the GPL at <http://www.gnu.org/licenses/gpl.html>, and a copy of the LGPL at <http://www.gnu.org/licenses/lgpl.html>.

15. **Miscellaneous.** This Agreement shall be governed by the laws of the State of California without reference to its conflicts of laws principles. The provisions of the U.N. Convention for the International Sale of Goods shall not apply to this Agreement. For any disputes arising under this Agreement, the Parties hereby consent to the personal and exclusive jurisdiction of, and venue in, the state and federal courts within Santa Clara County, California. This Agreement constitutes the entire and sole agreement between Juniper and the Customer with respect to the Software, and supersedes all prior and contemporaneous agreements relating to the Software, whether oral or written (including any inconsistent terms contained in a purchase order), except that the terms of a separate written agreement executed by an authorized Juniper representative and Customer shall govern to the extent such terms are inconsistent or conflict with terms contained herein. No modification to this Agreement nor any waiver of any rights hereunder shall be effective unless expressly assented to in writing by the party to be charged. If any portion of this Agreement is held invalid, the Parties agree that such invalidity shall not affect the validity of the remainder of this Agreement. This Agreement and associated documentation has been written in the English language, and the Parties agree that the English version will govern. (For Canada: Les parties aux présentes confirment leur volonté que cette convention de même que tous les documents y compris tout avis qui s'y rattache, soient rédigés en langue anglaise. (Translation: The parties confirm that this Agreement and all related documentation is and will be in the English language)).



# Table of Contents

<b>Part 1</b>	<b>RSVP LSP Tunnels</b>	
<b>Chapter 1</b>	<b>RSVP LSP Tunnels Concepts and Reference Materials</b>	<b>3</b>
	RSVP LSP Tunnels Overview	3
	RSVP LSP Tunneling Operation	4
	Creating End-to-End LSPs to Traverse the FA-LSP	4
	RSVP LSP Tunnels System Requirements	5
	RSVP LSP Tunnels Terms and Acronyms	5
<b>Chapter 2</b>	<b>RSVP LSP Tunnels Configuration</b>	<b>7</b>
	Configuring Link Management Protocol Traffic Engineering Links	7
	Configuring Link Management Protocol Peers	8
	Configuring Peer Interfaces in OSPF and RSVP	8
	Establishing FA-LSP Path Information	9
	Defining Label-Switched Paths for the FA-LSP	9
	Option: Tearing Down RSVP LSPs Gracefully	9
<b>Chapter 3</b>	<b>RSVP LSP Tunnels Configuration Example</b>	<b>11</b>
	Example: RSVP LSP Tunnel Configuration	11
	Verifying Your Work	23
	Router 0	23
	Router 1	28
	Related Topics	29
<b>Part 2</b>	<b>Index</b>	
	Index	33





# List of Figures

## Part 1

### Chapter 3

## RSVP LSP Tunnels

<b>RSVP LSP Tunnels Configuration Example .....</b>	<b>11</b>
Figure 1: RSVP LSP Tunnel Topology Diagram .....	11



## PART 1

# RSVP LSP Tunnels

- RSVP LSP Tunnels Concepts and Reference Materials on page 3
- RSVP LSP Tunnels Configuration on page 7
- RSVP LSP Tunnels Configuration Example on page 11



## CHAPTER 1

# RSVP LSP Tunnels Concepts and Reference Materials

This chapter covers these topics:

- RSVP LSP Tunnels Overview on page 3
- RSVP LSP Tunneling Operation on page 4
- Creating End-to-End LSPs to Traverse the FA-LSP on page 4
- RSVP LSP Tunnels System Requirements on page 5
- RSVP LSP Tunnels Terms and Acronyms on page 5

## RSVP LSP Tunnels Overview

---

A Resource Reservation Protocol (RSVP) label-switched path (LSP) tunnel enables you to send RSVP LSPs inside other RSVP LSPs. This enables a network administrator to provide traffic engineering from one end of the network to the other. A useful application for this feature is to connect customer edge (CE) routers with provider edge (PE) routers by using an RSVP LSP, and then tunnel this edge LSP inside a second RSVP LSP traveling across the network core.

You should have a general understanding of MPLS and label switching concepts. For more information about MPLS, see the *Junos MPLS Applications Configuration Guide*.

An RSVP LSP tunnel adds the concept of a forwarding adjacency, similar to the one used for generalized Multiprotocol Label Switching (GMPLS). (For more information about GMPLS, see GMPLS Overview.)

The forwarding adjacency creates a tunneled path for sending data between peer devices in an RSVP LSP network. Once a forwarding adjacency LSP (FA-LSP) has been established, other LSPs can be sent over the FA-LSP by using Constrained Shortest Path First (CSPF), Link Management Protocol (LMP), Open Shortest Path First (OSPF), and RSVP.

To enable an RSVP LSP tunnel, the Junos OS uses the following mechanisms:

- LMP—Originally designed for GMPLS, LMP establishes forwarding adjacencies between RSVP LSP tunnel peers, and maintains and allocates resources for traffic engineering links.

- OSPF extensions—OSPF was designed to route packets to physical and logical interfaces related to a Physical Interface Card (PIC). This protocol has been extended to route packets to virtual peer interfaces defined in an LMP configuration.
- RSVP-TE extensions—RSVP-TE was designed to signal the setup of packet LSPs to physical interfaces. The protocol has been extended to request path setup for packet LSPs traveling to virtual peer interfaces defined in an LMP configuration.

The following limitations exist for LSP hierarchies:

- Circuit cross-connect (CCC)-based LSPs are not supported.
- Graceful restart is not supported.
- Link protection is not available for FA-LSPs or at the egress point of the forwarding adjacency.
- Point-to-multipoint LSPs are not supported across FA-LSPs.

---

## RSVP LSP Tunneling Operation

An RSVP LSP tunnel requires close interaction between LMP, RSVP, and OSPF. The following sequence of events describes how this works:

1. LMP notifies RSVP and OSPF of the control peer, the control adjacency, and resources for the traffic engineering link.
2. GMPLS extracts the LSP attributes from the configuration and requests that RSVP signal one or more specific paths specified by the traffic engineering link addresses.
3. RSVP determines the local traffic engineering link, corresponding control adjacency and active control channel, and transmission parameters (such as IP destination). It requests that LMP allocate a resource from the traffic engineering link with the specified attributes. If LMP successfully finds a resource matching the attributes, label allocation succeeds. RSVP sends a PathMsg hop by hop until it reaches the target router.
4. The target router, on receiving the RSVP PathMsg, requests that LMP allocate a resource based on the signaled parameters. If label allocation succeeds, it sends back a ResvMsg.
5. If the signaling is successful, an RSVP LSP tunnel is provisioned.

---

## Creating End-to-End LSPs to Traverse the FA-LSP

After you create the FA-LSPs and traffic engineering links, you can configure end-to-end LSPs to travel across the FA-LSPs. Here are some general guidelines for this step:

- In general, it is best to start your end-to-end LSP at least one hop before the ingress of the FA-LSP and terminate your LSP at least one hop after the egress of the FA-LSP. If you do originate both the end-to-end LSP and the FA-LSP on the same routing platform, you must disable CSPF and configure strict paths for the LSPs.

- If you configure CSPF, OSPF, and RSVP to create the FA-LSP, the LSP should automatically use the FA-LSP because of the preferred lower metric generated by the reduced number of hops.
- If you disable CSPF on the FA-LSP with the **no-cspf** option at the **[edit protocols mpls label-switched-path *lsp-name*]** hierarchy level, you must configure the peer interface as a strict next hop in the path for your regular LSP. To manually configure an LSP to travel over the FA-LSP, include the **address** statement at the **[edit protocols mpls path *path-name*]** hierarchy level and include the **strict** option.

For more information about creating RSVP LSPs, see the *Junos MPLS Applications Configuration Guide*.

## RSVP LSP Tunnels System Requirements

---

To implement an RSVP LSP tunnel, your system must meet these minimum requirements:

- Junos OS Release 8.2 or later for support on MX Series routing platforms
- Junos OS Release 7.4 or later for RSVP LSP tunnel support on M Series and T Series routers
- Two Juniper Networks M Series, MX Series, or T Series routers for the ingress and egress points of the forwarding adjacency, and two Juniper Networks M Series, MX Series, or T Series routers for the ingress and egress PE routers

## RSVP LSP Tunnels Terms and Acronyms

---

### F

**forwarding adjacency** A forwarding path for sending data between peer devices in an RSVP LSP tunnel network.

**forwarding adjacency LSP (FA-LSP)** A hierarchical RSVP LSP that provides a tunnel-like forwarding adjacency for other packet-based LSPs.

### L

**Link Management Protocol** A protocol used to define forwarding adjacencies between RSVP LSP tunnel peers and to maintain and allocate resources on traffic engineering links.

### T

**traffic engineering link** A logical connection between devices used to support RSVP LSP tunnels. traffic engineering links can have addresses or IDs and are associated with certain resources or interfaces. Each traffic engineering link represents a forwarding adjacency between a pair of devices.





## CHAPTER 2

# RSVP LSP Tunnels Configuration

You must complete the following tasks to implement an RSVP LSP tunnel:

- Configuring Link Management Protocol Traffic Engineering Links on page 7
- Configuring Link Management Protocol Peers on page 8
- Configuring Peer Interfaces in OSPF and RSVP on page 8
- Establishing FA-LSP Path Information on page 9
- Defining Label-Switched Paths for the FA-LSP on page 9
- Option: Tearing Down RSVP LSPs Gracefully on page 9

## Configuring Link Management Protocol Traffic Engineering Links

---

To begin your RSVP LSP tunnel configuration, configure LMP traffic engineering links on both the ingress and egress routing platforms. Because traffic engineering links define a unidirectional connection between peer devices, you must configure traffic engineering links in both directions between peers to enable the bidirectional transport of packets.

To configure traffic engineering links in LMP, include the **te-link *te-link-name*** statement at the **[edit protocols link-management]** hierarchy level. Define the traffic engineering link options shown below, especially the label-switched path to be used as the FA-LSP to reach the peer. Optionally, you can specify the traffic engineering metric for the traffic engineering link (TE link). By default, the traffic engineering metric is derived from the CSPF computation.

```
[edit]
protocols {
  link-management {
    te-link te-link-name { # Name of the TE link.
      label-switched-path lsp-name; # LSP used for the forwarding adjacency.
      local-address ip-address; # Local IP address associated with the TE link.
      remote-address ip-address; # Remote IP address mapped to the TE link.
      te-metric value; # Traffic engineering metric used for the TE link.
    }
  }
}
```

## Configuring Link Management Protocol Peers

---

After you set up traffic engineering links, configure LMP network peers with the **peer** *peer-name* statement at the **[edit protocols link-management]** hierarchy level. A peer is the network device with which your routing platform communicates and establishes an FA-LSP. Designate a peer name, configure the peer router ID as the address (often a loopback address), and apply the traffic engineering link to be associated with this peer. Remember to configure both sides of a peering relationship to enable bidirectional communication.

Unlike GMPLS, you must not configure a control channel for a peer. If you include a control channel, the commit operation fails.

```
[edit]
protocols {
  link-management {
    peer peer-name { # Configure the name of your network peer.
      address ip-address; # Include the router ID of the peer.
      te-link te-link-name; # Assign a TE link to this peer.
    }
  }
}
```

## Configuring Peer Interfaces in OSPF and RSVP

---

After you establish LMP peers, you must add peer interfaces to OSPF and RSVP. A peer interface is a virtual interface used to support the control adjacency between two peers.

The peer interface name must match the **peer** *peer-name* statement configured in LMP at the **[edit protocols link-management]** hierarchy level. Because actual protocol packets are sent and received by peer interfaces, the peer interfaces can be signaled and advertised to peers like any other physical interface configured for OSPF and RSVP. To configure OSPF routing for LMP peers, include the **peer-interface** statement at the **[edit protocols ospf area *area-number*]** hierarchy level. To configure RSVP signaling for LMP peers, include the **peer-interface** statement at the **[edit protocols rsvp]** hierarchy level.

```
[edit]
protocols {
  rsvp {
    peer-interface peer-name { # Configure the name of your LMP peer.
    }
  }
  ospf {
    area area-number {
      peer-interface peer-name { # Configure the name of your LMP peer.
      }
    }
  }
}
```

## Establishing FA-LSP Path Information

When you configure explicit LSP paths for an FA-LSP, you must use the traffic engineering link remote address as your next-hop address. When CSPF is supported, you can use any path option you wish. However, when CSPF is disabled with the **no-cspf** statement at the **[edit protocols mpls label-switched-path *lsp-name*]** hierarchy level, you must use strict paths.

```
[edit]
protocols {
  mpls {
    path path-name {
      next-hop-address (strict | loose);
    }
  }
}
```



**NOTE:** If the end-to-end LSP originates on the same routing platform as the FA-LSP, you must disable CSPF and use strict paths.

## Defining Label-Switched Paths for the FA-LSP

Next, define your FA-LSP by including the **label-switched-path** statement at the **[edit protocols mpls]** hierarchy level. Include the router ID of the peer in the **to** statement at the **[edit protocols mpls label-switched-path]** hierarchy level. Because packet LSPs are unidirectional, you must create one FA-LSP to reach the peer and a second FA-LSP to return from the peer.

```
[edit]
protocols {
  mpls {
    label-switched-path lsp-name {
      from ip-address;
      to ip-address;
      primary path-name;
      secondary path-name;
      no-cspf; # This statement to disable CSPF is optional.
    }
  }
}
```

## Option: Tearing Down RSVP LSPs Gracefully

You can tear down an RSVP LSP in a two-step process that gracefully withdraws the RSVP session used by the LSP. For all neighbors that support graceful teardown, a request for the teardown is sent by the routing platform to the destination endpoint for the LSP and all RSVP neighbors in the path. The request is included within the **ADMIN\_STATUS** field of the RSVP packet. When neighbors receive the request, they prepare for the RSVP session to be withdrawn. A second message is sent by the routing platform to complete

the teardown of the RSVP session. If a neighbor does not support graceful teardown, the request is handled as a standard session teardown rather than a graceful one.

To perform a graceful teardown of an RSVP session, issue the **clear rsvp session gracefully** command. Optionally, you can specify the source and destination address of the RSVP session, the LSP identifier of the RSVP sender, and the tunnel identifier of the RSVP session. To use these qualifiers, include the **connection-source**, **connection-destination**, **lsp-id**, and **tunnel-id** options when you issue the **clear rsvp session gracefully** command.

You can also configure the amount of time that the routing platform waits for neighbors to receive the graceful teardown request before initiating the actual teardown by including the **graceful-deletion-timeout** statement at the **[edit protocols rsvp]** hierarchy level. The default graceful deletion timeout value is 30 seconds, with a minimum value of 1 second and a maximum value of 300 seconds. To view the current value configured for graceful deletion timeout, issue the **show rsvp version** operational mode command.

## CHAPTER 3

# RSVP LSP Tunnels Configuration Example

This chapter covers these topics:

- Example: RSVP LSP Tunnel Configuration on page 11
- Related Topics on page 29

### Example: RSVP LSP Tunnel Configuration

Figure 1: RSVP LSP Tunnel Topology Diagram

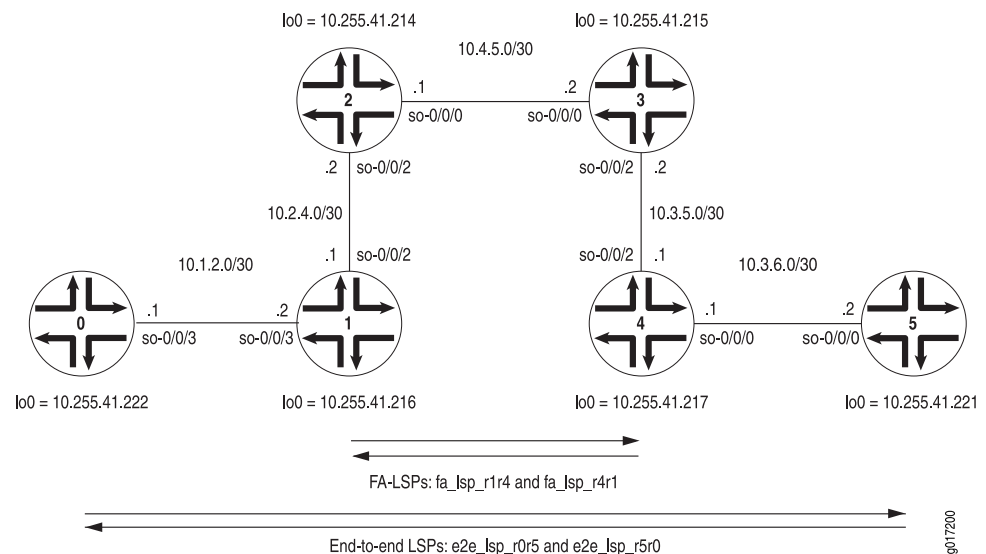


Figure 1 on page 11 shows an end-to-end RSVP LSP called **e2e\_lsp\_r0r5** that originates on Router 0 and terminates on Router 5. In transit, this LSP traverses the FA-LSP **fa\_lsp\_r1r4**. The return path is represented by the end-to-end RSVP LSP **e2e\_lsp\_r5r0** that travels over the FA-LSP **fa\_lsp\_r4r1**.

On Router 0, configure the end-to-end RSVP LSP that travels to Router 5. Use a strict path that traverses Router 1 and the LMP traffic engineering link traveling from Router 1 to Router 4.

```
Router 0 [edit]
interfaces {
  so-0/0/3 {
    unit 0 {
```

```
        family inet {
            address 10.1.2.1/30;
        }
        family mpls;
    }
}
lo0 {
    unit 0 {
        family inet {
            address 10.255.41.222/32;
        }
        family mpls;
    }
}
routing-options {
    forwarding-table {
        export pplb;
    }
}
protocols {
    rsvp {
        interface all;
        interface fxp0.0 {
            disable;
        }
    }
}
mpls {
    admin-groups {
        fa 1;
        backup 2;
        other 3;
    }
    label-switched-path e2e_lsp_r0r5 { # An end-to-end LSP traveling to Router 5.
        to 10.255.41.221;
        bandwidth 30k;
        primary path-fa; # Reference the requested path here.
    }
    path path-fa { # Configure the strict path here.
        10.1.2.2 strict;
        172.16.30.2 strict; # This traverses the TE link heading to Router 4.
    }
    interface all;
    interface fxp0.0 {
        disable;
    }
    interface so-3/2/1.0 {
        admin-group other;
    }
    interface so-0/0/3.0 {
        admin-group other;
    }
}
ospf {
    traffic-engineering;
    area 0.0.0.0 {
```

```

        interface fxp0.0 {
            disable;
        }
        interface all;
    }
}
policy-options {
    policy-statement pplb {
        then {
            load-balance per-packet;
        }
    }
}

```

On Router 1, configure an FA-LSP to reach Router 4. Establish an LMP traffic engineering link and LMP peer relationship with Router 4. Reference the FA-LSP in the traffic engineering link and add the peer interface into both OSPF and RSVP.

When the return path end-to-end LSP arrives at Router 1, the routing platform performs a routing lookup and can forward traffic to Router 0. Make sure you configure OSPF correctly between Routers 0 and 1.

```

Router 1 [edit]
interfaces {
    so-0/0/1 {
        unit 0 {
            family inet {
                address 10.2.3.1/30;
            }
            family mpls;
        }
    }
    so-0/0/2 {
        unit 0 {
            family inet {
                address 10.2.4.1/30;
            }
            family mpls;
        }
    }
    so-0/0/3 {
        unit 0 {
            family inet {
                address 10.1.2.2/30;
            }
            family mpls;
        }
    }
    fe-0/1/2 {
        unit 0 {
            family inet {
                address 10.2.5.1/30;
            }
            family mpls;
        }
    }
}

```

```
}
at-1/0/0 {
  atm-options {
    vpi 1;
  }
  unit 0 {
    vci 1.100;
    family inet {
      address 10.2.3.5/30;
    }
    family mpls;
  }
}
}
routing-options {
  forwarding-table {
    export [ pplb choose_lsp ];
  }
}
protocols {
  rsvp {
    interface all;
    interface fxp0.0 {
      disable;
    }
    peer-interface r4; # Apply the LMP peer interface here.
  }
  mpls {
    admin-groups {
      fa 1;
      backup 2;
      other 3;
    }
    label-switched-path fa_lsp_r1r4 { # Configure your FA-LSP to Router 4 here.
      to 10.255.41.217;
      bandwidth 400k;
      primary path_r1r4; # Apply the FA-LSP path here.
    }
    path path_r1r4 { # Configure the FA-LSP path here.
      10.2.4.2;
      10.4.5.2;
      10.3.5.1;
    }
    interface so-0/0/3.0 {
      admin-group other;
    }
    interface so-0/0/1.0 {
      admin-group fa;
    }
    interface at-1/0/0.0 {
      admin-group backup;
    }
    interface fe-0/1/2.0 {
      admin-group backup;
    }
    interface so-0/0/2.0 {
```



```

        admin-group fa;
    }
}
ospf {
    traffic-engineering;
    area 0.0.0.0 {
        interface fxp0.0 {
            disable;
        }
        interface all;
        peer-interface r4; # Apply the LMP peer interface here.
    }
}
link-management { # Configure LMP statements here.
    te-link link_r1r4 { # Assign a name to the TE link here.
        local-address 172.16.30.1; # Configure a local address for the TE link.
        remote-address 172.16.30.2; # Configure a remote address for the TE link.
        te-metric 1; # Manually set a metric here if you are not relying on CSPF.
        label-switched-path fa_lsp_r1r4; # Reference the FA-LSP here.
    }
    peer r4 { # Configure LMP peers here.
        address 10.255.41.217; # Configure the loopback address of your peer here.
        te-link link_r1r4; # Apply the LMP TE link here.
    }
}
}
policy-options {
    policy-statement choose_lsp {
        term A {
            from community choose_e2e_lsp;
            then {
                install-nexthop strict lsp e2e_lsp_r1r4;
                accept;
            }
        }
        term B {
            from community choose_fa_lsp;
            then {
                install-nexthop strict lsp fa_lsp_r1r4;
                accept;
            }
        }
    }
    policy-statement pplb {
        then {
            load-balance per-packet;
        }
    }
    community choose_e2e_lsp members 1000:1000;
    community choose_fa_lsp members 2000:2000;
    community set_e2e_lsp members 1000:1000;
    community set_fa_lsp members 2000:2000;
}

```

On Router 2, configure OSPF, MPLS, and RSVP on all interfaces that transport the FA-LSPs across the core network.

```
Router 2 [edit]
interfaces {
  so-0/0/0 {
    unit 0 {
      family inet {
        address 10.4.5.1/30;
      }
      family mpls;
    }
  }
  so-0/0/1 {
    unit 0 {
      family inet {
        address 10.1.4.2/30;
      }
      family mpls;
    }
  }
  so-0/0/2 {
    unit 0 {
      family inet {
        address 10.2.4.2/30;
      }
      family mpls;
    }
  }
  fe-0/1/2 {
    unit 0 {
      family inet {
        address 10.3.4.2/30;
      }
      family mpls;
    }
  }
}
routing-options {
  forwarding-table {
    export pplb;
  }
}
protocols { # OSPF, MPLS, and RSVP form the core backbone for the FA-LSPs.
  rsvp {
    interface all;
    interface fxp0.0 {
      disable;
    }
  }
  mpls {
    admin-groups {
      fa 1;
      backup 2;
      other 3;
    }
    path path_r1 {
      10.2.4.1;
    }
  }
}
```

```

path path_r3r4 {
    10.4.5.2;
    10.3.5.1;
}
interface all;
interface fxp0.0 {
    disable;
}
interface so-0/0/1.0 {
    admin-group other;
}
interface fe-0/1/2.0 {
    admin-group backup;
}
interface so-0/0/2.0 {
    admin-group fa;
}
interface so-0/0/0.0 {
    admin-group fa;
}
}
ospf {
    traffic-engineering;
    area 0.0.0.0 {
        interface fxp0.0 {
            disable;
        }
        interface all;
    }
}
}
policy-options {
    policy-statement pplb {
        then {
            load-balance per-packet;
        }
    }
}
}

```

On Router 3, configure OSPF, MPLS, and RSVP on all interfaces that transport the FA-LSPs across the core network.

```

Router 3 [edit]
interfaces {
    so-0/0/0 {
        unit 0 {
            family inet {
                address 10.4.5.2/30;
            }
            family mpls;
        }
    }
    so-0/0/1 {
        unit 0 {
            family inet {
                address 10.5.6.1/30;
            }
        }
    }
}

```

```
    }
    family mpls;
  }
}
so-0/0/2 {
  unit 0 {
    family inet {
      address 10.3.5.2/30;
    }
    family mpls;
  }
}
fe-0/1/2 {
  unit 0 {
    family inet {
      address 10.2.5.2/30;
    }
    family mpls;
  }
}
}
routing-options {
  forwarding-table {
    export pplb;
  }
}
protocols { # OSPF, MPLS, and RSVP form the core backbone for the FA-LSPs.
  rsvp {
    interface all;
    interface fxp0.0 {
      disable;
    }
  }
  mpls {
    admin-groups {
      fa 1;
      backup 2;
      other 3;
    }
    path path_r4 {
      10.3.5.1;
    }
    path path_r2r1 {
      10.4.5.1;
      10.2.4.1;
    }
    interface all;
    interface fxp0.0 {
      disable;
    }
    interface so-0/0/2.0 {
      admin-group fa;
    }
    interface fe-0/1/2.0 {
      admin-group backup;
    }
  }
}
```

```

interface so-0/0/1.0 {
  admin-group other;
}
interface so-0/0/0.0 {
  admin-group fa;
}
}
ospf {
  traffic-engineering;
  area 0.0.0.0 {
    interface fxp0.0 {
      disable;
    }
    interface all;
  }
}
}
policy-options {
  policy-statement pplb {
    then {
      load-balance per-packet;
    }
  }
}
}

```

On Router 4, configure a return path FA-LSP to reach Router 1. Establish an LMP traffic engineering link and LMP peer relationship with Router 1. Reference the FA-LSP in the traffic engineering link and add the peer interface into both OSPF and RSVP.

When the initial end-to-end LSP arrives at Router 4, the routing platform performs a routing lookup and can forward traffic to Router 5. Make sure you configure OSPF correctly between Router 4 and Router 5.

```

Router 4 [edit]
interfaces {
  so-0/0/0 {
    unit 0 {
      family inet {
        address 10.3.6.1/30;
      }
      family mpls;
    }
  }
  so-0/0/1 {
    unit 0 {
      family inet {
        address 10.2.3.2/30;
      }
      family mpls;
    }
  }
  so-0/0/2 {
    unit 0 {
      family inet {
        address 10.3.5.1/30;
      }
    }
  }
}

```

```
        family mpls;
    }
}
fe-0/1/2 {
    unit 0 {
        family inet {
            address 10.3.4.1/30;
        }
        family mpls;
    }
}
at-1/0/0 {
    atm-options {
        vpi 1;
    }
    unit 0 {
        vci 1.100;
        family inet {
            address 10.2.3.6/30;
        }
        family mpls;
    }
}
}
routing-options {
    forwarding-table {
        export [ pplb choose_lsp ];
    }
}
protocols {
    rsvp {
        interface all;
        interface fxp0.0 {
            disable;
        }
        peer-interface r1; # Apply the LMP peer interface here.
    }
    mpls {
        admin-groups {
            fa 1;
            backup 2;
            other 3;
        }
        label-switched-path fa_lsp_r4r1 { # Configure your FA-LSP here.
            to 10.255.41.216;
            bandwidth 400k;
            primary path_r4r1; # Apply the FA-LSP path here.
        }
        path path_r4r1 { # Configure the FA-LSP path here.
            10.3.5.2;
            10.4.5.1;
            10.2.4.1;
        }
        interface all;
        interface fxp0.0 {
            disable;
        }
    }
}
```

```

}
interface at-1/0/0.0 {
    admin-group backup;
}
interface so-0/0/2.0 {
    admin-group fa;
}
interface fe-0/1/2.0 {
    admin-group backup;
}
interface so-0/0/0.0 {
    admin-group other;
}
interface so-0/0/1.0 {
    admin-group fa;
}
}
ospf {
    traffic-engineering;
    area 0.0.0.0 {
        interface fxp0.0 {
            disable;
        }
        interface all;
        peer-interface r1; # Apply the LMP peer interface here.
    }
}
link-management { # Configure LMP statements here.
    te-link link_r4r1 { # Assign a name to the TE link here.
        local-address 172.16.30.2; # Configure a local address for the TE link.
        remote-address 172.16.30.1; # Configure a remote address for the TE link.
        te-metric 1; # Manually set a metric here if you are not relying on CSPF.
        label-switched-path fa_lsp_r4r1; # Reference the FA-LSP here.
    }
    peer r1 { # Configure LMP peers here.
        address 10.255.41.216; # Configure the loopback address of your peer here.
        te-link link_r4r1; # Apply the LMP TE link here.
    }
}
}
policy-options {
    policy-statement choose_lsp {
        term A {
            from community choose_e2e_lsp;
            then {
                install-nexthop strict lsp e2e_lsp_r4r1;
                accept;
            }
        }
        term B {
            from community choose_fa_lsp;
            then {
                install-nexthop strict lsp fa_lsp_r4r1;
                accept;
            }
        }
    }
}

```

```
}
policy-statement pplb {
  then {
    load-balance per-packet;
  }
}
community choose_e2e_lsp members 1000:1000;
community choose_fa_lsp members 2000:2000;
community set_e2e_lsp members 1000:1000;
community set_fa_lsp members 2000:2000;
}
```

On Router 5, configure the return path end-to-end RSVP LSP that travels to Router 0. Use a strict path that traverses Router 4 and the LMP traffic engineering link traveling from Router 4 to Router 1.

```
Router 5 [edit]
interfaces {
  so-0/0/2 {
    unit 0 {
      family inet {
        address 10.3.6.2/30;
      }
      family mpls;
    }
  }
  lo0 {
    unit 0 {
      family inet {
        address 10.255.41.221/32;
      }
    }
  }
}
routing-options {
  forwarding-table {
    export pplb;
  }
}
protocols {
  rsvp {
    interface all;
    interface fxp0.0 {
      disable;
    }
  }
}
mpls {
  admin-groups {
    fa 1;
    backup 2;
    other 3;
  }
  label-switched-path e2e_lsp_r5r0 { # An end-to-end LSP returning to Router 0.
    to 10.255.41.222;
    bandwidth 30k;
    primary path-fa; # Reference the requested path here.
  }
}
```



```

    }
    path path-fa { # Configure the strict path here.
        10.3.6.1 strict;
        172.16.30.1 strict; # This traverses the TE link heading to Router 1.
    }
    interface all;
    interface fxp0.0 {
        disable;
    }
    interface so-0/0/2.0 {
        admin-group other;
    }
    interface so-0/0/1.0 {
        admin-group other;
    }
    }
}
ospf {
    traffic-engineering;
    area 0.0.0.0 {
        interface fxp0.0 {
            disable;
        }
        interface all;
    }
}
}
policy-options {
    policy-statement pplb {
        then {
            load-balance per-packet;
        }
    }
}
}

```

## Verifying Your Work

To verify that your RSVP LSP tunnel is working correctly, issue the following commands:

- **show ted database (extensive)**
- **show rsvp session name (extensive)**
- **show link-management**
- **show link-management te-link name (detail)**

To see these commands used with the configuration example, see the following sections:

- Router 0 on page 23
- Router 1 on page 28

### Router 0

On Router 0, you can verify that the FA-LSPs appear as valid paths in the traffic engineering database. In this case, look for the paths from Router 1 (**10.255.41.216**) and Router 4 (**10.255.41.217**) that reference the LMP traffic engineering link addresses of

172.16.30.1 and 172.16.30.2. You can also issue the **show rsvp session extensive** command to look for the path of the end-to-end LSP as it travels to Router 5 over the FA-LSP.

```

user@router0> show ted database
TED database: 0 ISIS nodes 8 INET nodes
ID                               Type Age(s) LnkIn LnkOut Protocol
10.255.41.214                    Rtr   486    4    4 OSPF(0.0.0.0)
  To: 10.255.41.222, Local: 10.1.4.2, Remote: 10.1.4.1
  To: 10.255.41.216, Local: 10.2.4.2, Remote: 10.2.4.1
  To: 10.255.41.215, Local: 10.4.5.1, Remote: 10.4.5.2
  To: 10.3.4.1-1, Local: 10.3.4.2, Remote: 0.0.0.0
ID                               Type Age(s) LnkIn LnkOut Protocol
10.255.41.215                    Rtr   187    4    4 OSPF(0.0.0.0)
  To: 10.255.41.214, Local: 10.4.5.2, Remote: 10.4.5.1
  To: 10.255.41.217, Local: 10.3.5.2, Remote: 10.3.5.1
  To: 10.255.41.221, Local: 10.5.6.1, Remote: 10.5.6.2
  To: 10.2.5.1-1, Local: 10.2.5.2, Remote: 0.0.0.0
ID                               Type Age(s) LnkIn LnkOut Protocol
10.255.41.216                    Rtr   396    6    6 OSPF(0.0.0.0)
  To: 10.255.41.222, Local: 10.1.2.2, Remote: 10.1.2.1
  To: 10.255.41.214, Local: 10.2.4.1, Remote: 10.2.4.2
  To: 10.255.41.217, Local: 10.2.3.1, Remote: 10.2.3.2
  To: 10.255.41.217, Local: 172.16.30.1, Remote: 172.16.30.2
  To: 10.255.41.217, Local: 10.2.3.5, Remote: 10.2.3.6
  To: 10.2.5.1-1, Local: 10.2.5.1, Remote: 0.0.0.0
ID                               Type Age(s) LnkIn LnkOut Protocol
10.255.41.217                    Rtr   404    6    6 OSPF(0.0.0.0)
  To: 10.255.41.216, Local: 10.2.3.2, Remote: 10.2.3.1
  To: 10.255.41.216, Local: 172.16.30.2, Remote: 172.16.30.1
  To: 10.255.41.216, Local: 10.2.3.6, Remote: 10.2.3.5
  To: 10.255.41.215, Local: 10.3.5.1, Remote: 10.3.5.2
  To: 10.255.41.221, Local: 10.3.6.1, Remote: 10.3.6.2
  To: 10.3.4.1-1, Local: 10.3.4.1, Remote: 0.0.0.0
ID                               Type Age(s) LnkIn LnkOut Protocol
10.255.41.221                    Rtr   481    2    2 OSPF(0.0.0.0)
  To: 10.255.41.215, Local: 10.5.6.2, Remote: 10.5.6.1
  To: 10.255.41.217, Local: 10.3.6.2, Remote: 10.3.6.1
ID                               Type Age(s) LnkIn LnkOut Protocol
10.255.41.222                    Rtr  2883    2    2 OSPF(0.0.0.0)
  To: 10.255.41.216, Local: 10.1.2.1, Remote: 10.1.2.2
  To: 10.255.41.214, Local: 10.1.4.1, Remote: 10.1.4.2

user@router0> show ted database 10.255.41.216 extensive
TED database: 0 ISIS nodes 8 INET nodes
NodeID: 10.255.41.216
  Type: Rtr, Age: 421 secs, LinkIn: 6, LinkOut: 6
  Protocol: OSPF(0.0.0.0)
  To: 10.255.41.222, Local: 10.1.2.2, Remote: 10.1.2.1
  Color: 0x8 other
  Metric: 1
  Static BW: 155.52Mbps
  Reservable BW: 155.52Mbps
  Available BW [priority] bps:
    [0] 155.4Mbps [1] 155.4Mbps [2] 155.4Mbps [3] 155.4Mbps
    [4] 155.4Mbps [5] 155.4Mbps [6] 155.4Mbps [7] 155.4Mbps
  Interface Switching Capability Descriptor(1):
  Switching type: Packet
  Encoding type: Packet
  Maximum LSP BW [priority] bps:
    [0] 155.4Mbps [1] 155.4Mbps [2] 155.4Mbps [3] 155.4Mbps
    [4] 155.4Mbps [5] 155.4Mbps [6] 155.4Mbps [7] 155.4Mbps

```

```

To: 10.255.41.214, Local: 10.2.4.1, Remote: 10.2.4.2
Color: 0x2 fa
Metric: 1
Static BW: 155.52Mbps
Reservable BW: 155.52Mbps
Available BW [priority] bps:
    [0] 155.12Mbps    [1] 155.12Mbps    [2] 155.12Mbps    [3] 155.12Mbps
    [4] 155.12Mbps    [5] 155.12Mbps    [6] 155.12Mbps    [7] 155.12Mbps
Interface Switching Capability Descriptor(1):
    Switching type: Packet
    Encoding type: Packet
    Maximum LSP BW [priority] bps:
        [0] 155.12Mbps    [1] 155.12Mbps    [2] 155.12Mbps    [3] 155.12Mbps
        [4] 155.12Mbps    [5] 155.12Mbps    [6] 155.12Mbps    [7] 155.12Mbps
To: 10.255.41.217, Local: 10.2.3.1, Remote: 10.2.3.2
Color: 0x2 fa
Metric: 1
Static BW: 155.52Mbps
Reservable BW: 155.52Mbps
Available BW [priority] bps:
    [0] 155.52Mbps    [1] 155.52Mbps    [2] 155.52Mbps    [3] 155.52Mbps
    [4] 155.52Mbps    [5] 155.52Mbps    [6] 155.52Mbps    [7] 155.52Mbps
Interface Switching Capability Descriptor(1):
    Switching type: Packet
    Encoding type: Packet
    Maximum LSP BW [priority] bps:
        [0] 155.52Mbps    [1] 155.52Mbps    [2] 155.52Mbps    [3] 155.52Mbps
        [4] 155.52Mbps    [5] 155.52Mbps    [6] 155.52Mbps    [7] 155.52Mbps
To: 10.255.41.217, Local: 172.16.30.1, Remote: 172.16.30.2
Metric: 1
Static BW: 400kbps
Reservable BW: 400kbps
Available BW [priority] bps:
    [0] 370kbps      [1] 370kbps      [2] 370kbps      [3] 370kbps
    [4] 370kbps      [5] 370kbps      [6] 370kbps      [7] 370kbps
Interface Switching Capability Descriptor(1):
    Switching type: Packet
    Encoding type: Packet
    Maximum LSP BW [priority] bps:
        [0] 370kbps      [1] 370kbps      [2] 370kbps      [3] 370kbps
        [4] 370kbps      [5] 370kbps      [6] 370kbps      [7] 370kbps
To: 10.255.41.217, Local: 10.2.3.5, Remote: 10.2.3.6
Color: 0x4 backup
Metric: 1
Static BW: 155.52Mbps
Reservable BW: 155.52Mbps
Available BW [priority] bps:
    [0] 155.52Mbps    [1] 155.52Mbps    [2] 155.52Mbps    [3] 155.52Mbps
    [4] 155.52Mbps    [5] 155.52Mbps    [6] 155.52Mbps    [7] 155.52Mbps
Interface Switching Capability Descriptor(1):
    Switching type: Packet
    Encoding type: Packet
    Maximum LSP BW [priority] bps:
        [0] 155.52Mbps    [1] 155.52Mbps    [2] 155.52Mbps    [3] 155.52Mbps
        [4] 155.52Mbps    [5] 155.52Mbps    [6] 155.52Mbps    [7] 155.52Mbps
To: 10.2.5.1-1, Local: 10.2.5.1, Remote: 0.0.0.0
Color: 0x4 backup
Metric: 1
Static BW: 100Mbps
Reservable BW: 100Mbps
Available BW [priority] bps:

```

```

        [0] 100Mbps      [1] 100Mbps      [2] 100Mbps      [3] 100Mbps
        [4] 100Mbps      [5] 100Mbps      [6] 100Mbps      [7] 100Mbps
Interface Switching Capability Descriptor(1):
Switching type: Packet
Encoding type: Packet
Maximum LSP BW [priority] bps:
        [0] 100Mbps      [1] 100Mbps      [2] 100Mbps      [3] 100Mbps
        [4] 100Mbps      [5] 100Mbps      [6] 100Mbps      [7] 100Mbps

```

user@router0> show ted database 10.255.41.217 extensive

TED database: 0 ISIS nodes 8 INET nodes

NodeID: 10.255.41.217

Type: Rtr, Age: 473 secs, LinkIn: 6, LinkOut: 6

Protocol: OSPF(0.0.0.0)

To: 10.255.41.216, Local: 10.2.3.2, Remote: 10.2.3.1

Color: 0x2 fa

Metric: 1

Static BW: 155.52Mbps

Reservable BW: 155.52Mbps

Available BW [priority] bps:

```

        [0] 155.52Mbps    [1] 155.52Mbps    [2] 155.52Mbps    [3] 155.52Mbps
        [4] 155.52Mbps    [5] 155.52Mbps    [6] 155.52Mbps    [7] 155.52Mbps

```

Interface Switching Capability Descriptor(1):

Switching type: Packet

Encoding type: Packet

Maximum LSP BW [priority] bps:

```

        [0] 155.52Mbps    [1] 155.52Mbps    [2] 155.52Mbps    [3] 155.52Mbps
        [4] 155.52Mbps    [5] 155.52Mbps    [6] 155.52Mbps    [7] 155.52Mbps

```

To: 10.255.41.216, Local: 172.16.30.2, Remote: 172.16.30.1

Metric: 1

Static BW: 400kbps

Reservable BW: 400kbps

Available BW [priority] bps:

```

        [0] 370kbps       [1] 370kbps       [2] 370kbps       [3] 370kbps
        [4] 370kbps       [5] 370kbps       [6] 370kbps       [7] 370kbps

```

Interface Switching Capability Descriptor(1):

Switching type: Packet

Encoding type: Packet

Maximum LSP BW [priority] bps:

```

        [0] 370kbps       [1] 370kbps       [2] 370kbps       [3] 370kbps
        [4] 370kbps       [5] 370kbps       [6] 370kbps       [7] 370kbps

```

To: 10.255.41.216, Local: 10.2.3.6, Remote: 10.2.3.5

Color: 0x4 backup

Metric: 1

Static BW: 155.52Mbps

Reservable BW: 155.52Mbps

Available BW [priority] bps:

```

        [0] 155.52Mbps    [1] 155.52Mbps    [2] 155.52Mbps    [3] 155.52Mbps
        [4] 155.52Mbps    [5] 155.52Mbps    [6] 155.52Mbps    [7] 155.52Mbps

```

Interface Switching Capability Descriptor(1):

Switching type: Packet

Encoding type: Packet

Maximum LSP BW [priority] bps:

```

        [0] 155.52Mbps    [1] 155.52Mbps    [2] 155.52Mbps    [3] 155.52Mbps
        [4] 155.52Mbps    [5] 155.52Mbps    [6] 155.52Mbps    [7] 155.52Mbps

```

To: 10.255.41.215, Local: 10.3.5.1, Remote: 10.3.5.2

Color: 0x2 fa

Metric: 1

Static BW: 155.52Mbps

Reservable BW: 155.52Mbps

Available BW [priority] bps:

```

        [0] 155.12Mbps [1] 155.12Mbps [2] 155.12Mbps [3] 155.12Mbps
        [4] 155.12Mbps [5] 155.12Mbps [6] 155.12Mbps [7] 155.12Mbps
Interface Switching Capability Descriptor(1):
  Switching type: Packet
  Encoding type: Packet
  Maximum LSP BW [priority] bps:
        [0] 155.12Mbps [1] 155.12Mbps [2] 155.12Mbps [3] 155.12Mbps
        [4] 155.12Mbps [5] 155.12Mbps [6] 155.12Mbps [7] 155.12Mbps
To: 10.255.41.221, Local: 10.3.6.1, Remote: 10.3.6.2
Color: 0x8 other
Metric: 1
Static BW: 155.52Mbps
Reservable BW: 155.52Mbps
Available BW [priority] bps:
        [0] 155.52Mbps [1] 155.52Mbps [2] 155.52Mbps [3] 155.52Mbps
        [4] 155.52Mbps [5] 155.52Mbps [6] 155.52Mbps [7] 155.52Mbps
Interface Switching Capability Descriptor(1):
  Switching type: Packet
  Encoding type: Packet
  Maximum LSP BW [priority] bps:
        [0] 155.52Mbps [1] 155.52Mbps [2] 155.52Mbps [3] 155.52Mbps
        [4] 155.52Mbps [5] 155.52Mbps [6] 155.52Mbps [7] 155.52Mbps
To: 10.3.4.1-1, Local: 10.3.4.1, Remote: 0.0.0.0
Color: 0x4 backup
Metric: 1
Static BW: 100Mbps
Reservable BW: 100Mbps
Available BW [priority] bps:
        [0] 100Mbps [1] 100Mbps [2] 100Mbps [3] 100Mbps
        [4] 100Mbps [5] 100Mbps [6] 100Mbps [7] 100Mbps
Interface Switching Capability Descriptor(1):
  Switching type: Packet
  Encoding type: Packet
  Maximum LSP BW [priority] bps:
        [0] 100Mbps [1] 100Mbps [2] 100Mbps [3] 100Mbps
        [4] 100Mbps [5] 100Mbps [6] 100Mbps [7] 100Mbps

user@router0> show rsvp session name e2e_lsp_r0r5 extensive
Ingress RSVP: 1 sessions
10.255.41.221
  From: 10.255.41.222, LSPstate: Up, ActiveRoute: 2
  LSPname: e2e_lsp_r0r5, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 101584
  Resv style: 1 FF, Label in: -, Label out: 101584
  Time left: -, Since: Wed Sep 7 19:02:56 2005
  Tspec: rate 30kbps size 30kbps peak Infbps m 20 M 1500
  Port number: sender 2 receiver 29458 protocol 0
  PATH rcvfrom: localclient
  Adspec: sent MTU 1500
  Path MTU: received 1500
  PATH sentto: 10.1.2.2 (so-0/0/3.0) 15 pkts
  RESV rcvfrom: 10.1.2.2 (so-0/0/3.0) 16 pkts
  Explicit route: 10.1.2.2 172.16.30.2 10.3.6.2
  Record route: <self> 10.1.2.2 172.16.30.2 10.3.6.2
Total 1 displayed, Up 1, Down 0

Egress RSVP: 1 sessions
Total 0 displayed, Up 0, Down 0

```

Transit RSVP: 0 sessions  
Total 0 displayed, Up 0, Down 0

### Router 1

On Router 1, verify that your LMP traffic engineering link configuration is working and that the end-to-end LSP is traversing the traffic engineering link by issuing the **show link-management** set of commands. You can also issue the **show rsvp session extensive** command to confirm that the FA-LSP is operational.

```
user@router1> show link-management
Peer name: r4 , System identifier: 10758
State: Up, Control address: 10.255.41.217
  TE links:
    link_r1r4

TE link name: link_r1r4, State: Up
  Local identifier: 16299, Remote identifier: 0, Local address: 172.16.30.1, Remote
address: 172.16.30.2,
  Encoding: Packet, Switching: Packet, Minimum bandwidth: 0bps, Maximum bandwidth:
400kbps,
  Total bandwidth: 400kbps, Available bandwidth: 370kbps
    Name          State Local ID Remote ID      Bandwidth Used  LSP-name
    fa_lsp_r1r4 Up    22642    0    400kbps Yes  e2e_lsp_r0r5

user@router1> show link-management te-link name link_r1r4 detail
TE link name: link_r1r4, State: Up
  Local identifier: 16299, Remote identifier: 0, Local address: 172.16.30.1, Remote
address: 172.16.30.2,
  Encoding: Packet, Switching: Packet, Minimum bandwidth: 0bps, Maximum bandwidth:
400kbps,
  Total bandwidth: 400kbps, Available bandwidth: 370kbps
  Resource: fa_lsp_r1r4, Type: LSP, System identifier: 2147483683, State: Up,
Local identifier: 22642,
  Remote identifier: 0
  Total bandwidth: 400kbps, Unallocated bandwidth: 370kbps
  Traffic parameters: Encoding: Packet, Switching: Packet, Granularity: Unknown

    Number of allocations: 1, In use: Yes
    LSP name: e2e_lsp_r0r5, Allocated bandwidth: 30kbps
```

```
user@router1> show rsvp session name fa_lsp_r1r4 extensive
Ingress RSVP: 1 sessions
10.255.41.217
  From: 10.255.41.216, LSPstate: Up, ActiveRoute: 0
  LSPname: fa_lsp_r1r4, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 100816
  Resv style: 1 FF, Label in: -, Label out: 100816
  Time left: -, Since: Wed Sep 7 19:02:33 2005
  Tspec: rate 400kbps size 400kbps peak Infbps m 20 M 1500
  Port number: sender 2 receiver 5933 protocol 0
  PATH rcvfrom: localclient
  Adspec: sent MTU 1500
  Path MTU: received 1500
  PATH sentto: 10.2.4.2 (so-0/0/2.0) 28 pkts
  RESV rcvfrom: 10.2.4.2 (so-0/0/2.0) 26 pkts
  Explct route: 10.2.4.2 10.4.5.2 10.3.5.1
  Record route: <self> 10.2.4.2 10.4.5.2 10.3.5.1
Total 1 displayed, Up 1, Down 0
```

Egress RSVP: 1 sessions  
Total 0 displayed, Up 0, Down 0

Transit RSVP: 2 sessions  
Total 0 displayed, Up 0, Down 0

---

## Related Topics

- *Junos MPLS Applications Configuration Guide*
- RFC 2205, *Resource ReSerVation Protocol (RSVP)*
- Internet draft draft-ietf-mpls-bundle-04.txt, *Link Bundling in MPLS Traffic Engineering* (expires January 2003)
- Internet draft draft-ietf-ccamp-lmp-10.txt, *Link Management Protocol (LMP)* (expires April 2004)
- Internet draft draft-ietf-mpls-lsp-hierarchy-08.txt, *LSP Hierarchy with Generalized MPLS TE* (expires March 2003)





## PART 2

# Index

- Index on page 33



# Index

## R

### RSVP LSP tunnels

configuration procedure.....	7
operational mode commands.....	23
options	
graceful teardown.....	9
overview.....	3
sample configuration.....	11
system requirements.....	5

## S

### system requirements

RSVP LSP tunnels.....	5
-----------------------	---

