

Network Configuration Example

Interconnecting a Layer 2 Circuit with a Layer 2 Circuit

Release
11.2



Published: 2011-05-17

Juniper Networks, Inc.
1194 North Mathilda Avenue
Sunnyvale, California 94089
USA
408-745-2000
www.juniper.net

This product includes the Envoy SNMP Engine, developed by Epilogue Technology, an Integrated Systems Company. Copyright © 1986-1997, Epilogue Technology Corporation. All rights reserved. This program and its documentation were developed at private expense, and no part of them is in the public domain.

This product includes memory allocation software developed by Mark Moraes, copyright © 1988, 1989, 1993, University of Toronto.

This product includes FreeBSD software developed by the University of California, Berkeley, and its contributors. All of the documentation and software included in the 4.4BSD and 4.4BSD-Lite Releases is copyrighted by the Regents of the University of California. Copyright © 1979, 1980, 1983, 1986, 1988, 1989, 1991, 1992, 1993, 1994. The Regents of the University of California. All rights reserved.

GateD software copyright © 1995, the Regents of the University. All rights reserved. Gate Daemon was originated and developed through release 3.0 by Cornell University and its collaborators. Gated is based on Kirton's EGP, UC Berkeley's routing daemon (routed), and DCN's HELLO routing protocol. Development of Gated has been supported in part by the National Science Foundation. Portions of the GateD software copyright © 1988, Regents of the University of California. All rights reserved. Portions of the GateD software copyright © 1991, D. L. S. Associates.

This product includes software developed by Maker Communications, Inc., copyright © 1996, 1997, Maker Communications, Inc.

Juniper Networks, Junos, Steel-Belted Radius, NetScreen, and ScreenOS are registered trademarks of Juniper Networks, Inc. in the United States and other countries. The Juniper Networks Logo, the Junos logo, and JunosE are trademarks of Juniper Networks, Inc. All other trademarks, service marks, registered trademarks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

Products made or sold by Juniper Networks or components thereof might be covered by one or more of the following patents that are owned by or licensed to Juniper Networks: U.S. Patent Nos. 5,473,599, 5,905,725, 5,909,440, 6,192,051, 6,333,650, 6,359,479, 6,406,312, 6,429,706, 6,459,579, 6,493,347, 6,538,518, 6,538,899, 6,552,918, 6,567,902, 6,578,186, and 6,590,785.

Network Configuration Example Interconnecting a Layer 2 Circuit with a Layer 2 Circuit

Release 11.2

Copyright © 2011, Juniper Networks, Inc.

All rights reserved.

Revision History

April 2011—R1 Junos OS 11.2

The information in this document is current as of the date listed in the revision history.

YEAR 2000 NOTICE

Juniper Networks hardware and software products are Year 2000 compliant. The Junos OS has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

END USER LICENSE AGREEMENT

READ THIS END USER LICENSE AGREEMENT ("AGREEMENT") BEFORE DOWNLOADING, INSTALLING, OR USING THE SOFTWARE. BY DOWNLOADING, INSTALLING, OR USING THE SOFTWARE OR OTHERWISE EXPRESSING YOUR AGREEMENT TO THE TERMS CONTAINED HEREIN, YOU (AS CUSTOMER OR IF YOU ARE NOT THE CUSTOMER, AS A REPRESENTATIVE/AGENT AUTHORIZED TO BIND THE CUSTOMER) CONSENT TO BE BOUND BY THIS AGREEMENT. IF YOU DO NOT OR CANNOT AGREE TO THE TERMS CONTAINED HEREIN, THEN (A) DO NOT DOWNLOAD, INSTALL, OR USE THE SOFTWARE, AND (B) YOU MAY CONTACT JUNIPER NETWORKS REGARDING LICENSE TERMS.

1. **The Parties.** The parties to this Agreement are (i) Juniper Networks, Inc. (if the Customer's principal office is located in the Americas) or Juniper Networks (Cayman) Limited (if the Customer's principal office is located outside the Americas) (such applicable entity being referred to herein as "Juniper"), and (ii) the person or organization that originally purchased from Juniper or an authorized Juniper reseller the applicable license(s) for use of the Software ("Customer") (collectively, the "Parties").

2. **The Software.** In this Agreement, "Software" means the program modules and features of the Juniper or Juniper-supplied software, for which Customer has paid the applicable license or support fees to Juniper or an authorized Juniper reseller, or which was embedded by Juniper in equipment which Customer purchased from Juniper or an authorized Juniper reseller. "Software" also includes updates, upgrades and new releases of such software. "Embedded Software" means Software which Juniper has embedded in or loaded onto the Juniper equipment and any updates, upgrades, additions or replacements which are subsequently embedded in or loaded onto the equipment.

3. **License Grant.** Subject to payment of the applicable fees and the limitations and restrictions set forth herein, Juniper grants to Customer a non-exclusive and non-transferable license, without right to sublicense, to use the Software, in executable form only, subject to the following use restrictions:

- a. Customer shall use Embedded Software solely as embedded in, and for execution on, Juniper equipment originally purchased by Customer from Juniper or an authorized Juniper reseller.
- b. Customer shall use the Software on a single hardware chassis having a single processing unit, or as many chassis or processing units for which Customer has paid the applicable license fees; provided, however, with respect to the Steel-Belted Radius or Odyssey Access Client software only, Customer shall use such Software on a single computer containing a single physical random access memory space and containing any number of processors. Use of the Steel-Belted Radius or IMS AAA software on multiple computers or virtual machines (e.g., Solaris zones) requires multiple licenses, regardless of whether such computers or virtualizations are physically contained on a single chassis.
- c. Product purchase documents, paper or electronic user documentation, and/or the particular licenses purchased by Customer may specify limits to Customer's use of the Software. Such limits may restrict use to a maximum number of seats, registered endpoints, concurrent users, sessions, calls, connections, subscribers, clusters, nodes, realms, devices, links, ports or transactions, or require the purchase of separate licenses to use particular features, functionalities, services, applications, operations, or capabilities, or provide throughput, performance, configuration, bandwidth, interface, processing, temporal, or geographical limits. In addition, such limits may restrict the use of the Software to managing certain kinds of networks or require the Software to be used only in conjunction with other specific Software. Customer's use of the Software shall be subject to all such limitations and purchase of all applicable licenses.
- d. For any trial copy of the Software, Customer's right to use the Software expires 30 days after download, installation or use of the Software. Customer may operate the Software after the 30-day trial period only if Customer pays for a license to do so. Customer may not extend or create an additional trial period by re-installing the Software after the 30-day trial period.
- e. The Global Enterprise Edition of the Steel-Belted Radius software may be used by Customer only to manage access to Customer's enterprise network. Specifically, service provider customers are expressly prohibited from using the Global Enterprise Edition of the Steel-Belted Radius software to support any commercial network access services.

The foregoing license is not transferable or assignable by Customer. No license is granted herein to any user who did not originally purchase the applicable license(s) for the Software from Juniper or an authorized Juniper reseller.

4. **Use Prohibitions.** Notwithstanding the foregoing, the license provided herein does not permit the Customer to, and Customer agrees not to and shall not: (a) modify, unbundle, reverse engineer, or create derivative works based on the Software; (b) make unauthorized copies of the Software (except as necessary for backup purposes); (c) rent, sell, transfer, or grant any rights in and to any copy of the Software, in any form, to any third party; (d) remove any proprietary notices, labels, or marks on or in any copy of the Software or any product in which the Software is embedded; (e) distribute any copy of the Software to any third party, including as may be embedded in Juniper equipment sold in the secondhand market; (f) use any 'locked' or key-restricted feature, function, service, application, operation, or capability without first purchasing the applicable license(s) and obtaining a valid key from Juniper, even if such feature, function, service, application, operation, or capability is enabled without a key; (g) distribute any key for the Software provided by Juniper to any third party; (h) use the

Software in any manner that extends or is broader than the uses purchased by Customer from Juniper or an authorized Juniper reseller; (i) use Embedded Software on non-Juniper equipment; (j) use Embedded Software (or make it available for use) on Juniper equipment that the Customer did not originally purchase from Juniper or an authorized Juniper reseller; (k) disclose the results of testing or benchmarking of the Software to any third party without the prior written consent of Juniper; or (l) use the Software in any manner other than as expressly provided herein.

5. **Audit.** Customer shall maintain accurate records as necessary to verify compliance with this Agreement. Upon request by Juniper, Customer shall furnish such records to Juniper and certify its compliance with this Agreement.

6. **Confidentiality.** The Parties agree that aspects of the Software and associated documentation are the confidential property of Juniper. As such, Customer shall exercise all reasonable commercial efforts to maintain the Software and associated documentation in confidence, which at a minimum includes restricting access to the Software to Customer employees and contractors having a need to use the Software for Customer's internal business purposes.

7. **Ownership.** Juniper and Juniper's licensors, respectively, retain ownership of all right, title, and interest (including copyright) in and to the Software, associated documentation, and all copies of the Software. Nothing in this Agreement constitutes a transfer or conveyance of any right, title, or interest in the Software or associated documentation, or a sale of the Software, associated documentation, or copies of the Software.

8. **Warranty, Limitation of Liability, Disclaimer of Warranty.** The warranty applicable to the Software shall be as set forth in the warranty statement that accompanies the Software (the "Warranty Statement"). Nothing in this Agreement shall give rise to any obligation to support the Software. Support services may be purchased separately. Any such support shall be governed by a separate, written support services agreement. TO THE MAXIMUM EXTENT PERMITTED BY LAW, JUNIPER SHALL NOT BE LIABLE FOR ANY LOST PROFITS, LOSS OF DATA, OR COSTS OR PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES, OR FOR ANY SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES ARISING OUT OF THIS AGREEMENT, THE SOFTWARE, OR ANY JUNIPER OR JUNIPER-SUPPLIED SOFTWARE. IN NO EVENT SHALL JUNIPER BE LIABLE FOR DAMAGES ARISING FROM UNAUTHORIZED OR IMPROPER USE OF ANY JUNIPER OR JUNIPER-SUPPLIED SOFTWARE. EXCEPT AS EXPRESSLY PROVIDED IN THE WARRANTY STATEMENT TO THE EXTENT PERMITTED BY LAW, JUNIPER DISCLAIMS ANY AND ALL WARRANTIES IN AND TO THE SOFTWARE (WHETHER EXPRESS, IMPLIED, STATUTORY, OR OTHERWISE), INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NONINFRINGEMENT. IN NO EVENT DOES JUNIPER WARRANT THAT THE SOFTWARE, OR ANY EQUIPMENT OR NETWORK RUNNING THE SOFTWARE, WILL OPERATE WITHOUT ERROR OR INTERRUPTION, OR WILL BE FREE OF VULNERABILITY TO INTRUSION OR ATTACK. In no event shall Juniper's or its suppliers' or licensors' liability to Customer, whether in contract, tort (including negligence), breach of warranty, or otherwise, exceed the price paid by Customer for the Software that gave rise to the claim, or if the Software is embedded in another Juniper product, the price paid by Customer for such other product. Customer acknowledges and agrees that Juniper has set its prices and entered into this Agreement in reliance upon the disclaimers of warranty and the limitations of liability set forth herein, that the same reflect an allocation of risk between the Parties (including the risk that a contract remedy may fail of its essential purpose and cause consequential loss), and that the same form an essential basis of the bargain between the Parties.

9. **Termination.** Any breach of this Agreement or failure by Customer to pay any applicable fees due shall result in automatic termination of the license granted herein. Upon such termination, Customer shall destroy or return to Juniper all copies of the Software and related documentation in Customer's possession or control.

10. **Taxes.** All license fees payable under this agreement are exclusive of tax. Customer shall be responsible for paying Taxes arising from the purchase of the license, or importation or use of the Software. If applicable, valid exemption documentation for each taxing jurisdiction shall be provided to Juniper prior to invoicing, and Customer shall promptly notify Juniper if their exemption is revoked or modified. All payments made by Customer shall be net of any applicable withholding tax. Customer will provide reasonable assistance to Juniper in connection with such withholding taxes by promptly: providing Juniper with valid tax receipts and other required documentation showing Customer's payment of any withholding taxes; completing appropriate applications that would reduce the amount of withholding tax to be paid; and notifying and assisting Juniper in any audit or tax proceeding related to transactions hereunder. Customer shall comply with all applicable tax laws and regulations, and Customer will promptly pay or reimburse Juniper for all costs and damages related to any liability incurred by Juniper as a result of Customer's non-compliance or delay with its responsibilities herein. Customer's obligations under this Section shall survive termination or expiration of this Agreement.

11. **Export.** Customer agrees to comply with all applicable export laws and restrictions and regulations of any United States and any applicable foreign agency or authority, and not to export or re-export the Software or any direct product thereof in violation of any such restrictions, laws or regulations, or without all necessary approvals. Customer shall be liable for any such violations. The version of the Software supplied to Customer may contain encryption or other capabilities restricting Customer's ability to export the Software without an export license.

12. **Commercial Computer Software.** The Software is "commercial computer software" and is provided with restricted rights. Use, duplication, or disclosure by the United States government is subject to restrictions set forth in this Agreement and as provided in DFARS 227.7201 through 227.7202-4, FAR 12.212, FAR 27.405(b)(2), FAR 52.227-19, or FAR 52.227-14 (ALT III) as applicable.

13. **Interface Information.** To the extent required by applicable law, and at Customer's written request, Juniper shall provide Customer with the interface information needed to achieve interoperability between the Software and another independently created program, on payment of applicable fee, if any. Customer shall observe strict obligations of confidentiality with respect to such information and shall use such information in compliance with any applicable terms and conditions upon which Juniper makes such information available.

14. **Third Party Software.** Any licensor of Juniper whose software is embedded in the Software and any supplier of Juniper whose products or technology are embedded in (or services are accessed by) the Software shall be a third party beneficiary with respect to this Agreement, and such licensor or vendor shall have the right to enforce this Agreement in its own name as if it were Juniper. In addition, certain third party software may be provided with the Software and is subject to the accompanying license(s), if any, of its respective owner(s). To the extent portions of the Software are distributed under and subject to open source licenses obligating Juniper to make the source code for such portions publicly available (such as the GNU General Public License ("GPL") or the GNU Library General Public License ("LGPL")), Juniper will make such source code portions (including Juniper modifications, as appropriate) available upon request for a period of up to three years from the date of distribution. Such request can be made in writing to Juniper Networks, Inc., 1194 N. Mathilda Ave., Sunnyvale, CA 94089, ATTN: General Counsel. You may obtain a copy of the GPL at <http://www.gnu.org/licenses/gpl.html>, and a copy of the LGPL at <http://www.gnu.org/licenses/lgpl.html>.

15. **Miscellaneous.** This Agreement shall be governed by the laws of the State of California without reference to its conflicts of laws principles. The provisions of the U.N. Convention for the International Sale of Goods shall not apply to this Agreement. For any disputes arising under this Agreement, the Parties hereby consent to the personal and exclusive jurisdiction of, and venue in, the state and federal courts within Santa Clara County, California. This Agreement constitutes the entire and sole agreement between Juniper and the Customer with respect to the Software, and supersedes all prior and contemporaneous agreements relating to the Software, whether oral or written (including any inconsistent terms contained in a purchase order), except that the terms of a separate written agreement executed by an authorized Juniper representative and Customer shall govern to the extent such terms are inconsistent or conflict with terms contained herein. No modification to this Agreement nor any waiver of any rights hereunder shall be effective unless expressly assented to in writing by the party to be charged. If any portion of this Agreement is held invalid, the Parties agree that such invalidity shall not affect the validity of the remainder of this Agreement. This Agreement and associated documentation has been written in the English language, and the Parties agree that the English version will govern. (For Canada: Les parties aux présentes confirment leur volonté que cette convention de même que tous les documents y compris tout avis qui s'y rattache, soient rédigés en langue anglaise. (Translation: The parties confirm that this Agreement and all related documentation is and will be in the English language)).

Table of Contents

Layer 2 Circuit Overview	1
Applications for Interconnecting a Layer 2 Circuit with a Layer 2 Circuit	3
Example: Interconnecting a Layer 2 Circuit with a Layer 2 Circuit	5

Layer 2 Circuit Overview

A Layer 2 circuit is a point-to-point Layer 2 connection transported using Multiprotocol Label Switching (MPLS) or other tunneling technology on the service provider's network. A Layer 2 circuit is similar to a circuit cross-connect (CCC), except that multiple virtual circuits (VCs) are transported over a single shared label-switched path (LSP) tunnel between two provider edge (PE) routers. In contrast, each CCC requires a separate dedicated LSP.

To establish a Layer 2 circuit, the Link Integrity Protocol (LIP) is used as the signaling protocol to advertise the ingress label to the remote PE routers. For this purpose, a targeted remote LDP neighbor session is established using the extended discovery mechanism described in LDP, and the session is brought up to the remote PE loopback IP address. Because LDP looks at the Layer 2 circuit configuration and initiates extended neighbor discovery for all the Layer 2 circuit neighbors (the remote PEs), no new configuration is necessary in LDP. Each Layer 2 circuit is represented by the logical interface connecting the local PE router to the local customer edge (CE) router. Note that LDP must be enabled on the lo0.0 interface for extended neighbor discovery to function correctly.

Packets are sent to remote CE routers over an egress VPN label advertised by the remote PE router, using a targeted LDP session. The VPN label is sent over an LDP LSP to the remote PE router connected to the remote CE router. Return traffic from the remote CE router destined to the local CE router is sent using an ingress VPN label advertised by the local PE router, which is also sent over the LDP LSP to the local PE router from the remote PE router.

Related Documentation

- [Layer 3 VPN Overview](#)
- [Layer 2 VPN Overview](#)
- [Layer 2 VPN Applications](#)
- [Applications for Interconnecting a Layer 2 Circuit with a Layer 2 Circuit on page 3](#)
- [Applications for Interconnecting a Layer 2 Circuit with a Layer 3 VPN](#)
- [Example: Interconnecting a Layer 2 Circuit with a Layer 2 Circuit on page 5](#)
- [Example: Interconnecting a Layer 2 Circuit with a Layer 3 VPN](#)
- [Example: Interconnecting a Layer 2 Circuit with a Layer 2 VPN](#)

Applications for Interconnecting a Layer 2 Circuit with a Layer 2 Circuit

MPLS-based Layer 2 services are growing in demand among enterprise and service providers. This creates new challenges for service providers who want to provide end-to-end value-added services. There are various reasons to stitch different Layer 2 services to one another and to Layer 3 services, for example, to expand the service offerings and to expand geographically. The Junos OS has various features to address the needs of the service provider.

Interconnecting a Layer 2 circuit with a Layer 2 circuit includes the following benefits:

- Interconnecting a Layer 2 circuit with a Layer 2 circuit enables the sharing of a service provider's core network infrastructure between Layer 2 circuit services, reducing the cost of providing those services. A Layer 2 MPLS circuit allows service providers to create a Layer 2 circuit service over an existing IP and MPLS backbone.
- Service providers do not have to invest in separate Layer 2 equipment to provide Layer 2 circuit service. A service provider can configure a provider edge router to run any Layer 2 protocol. Customers who prefer to maintain control over most of the administration of their own networks want Layer 2 circuit connections with their service provider instead of a Layer 3 VPN connection.

Related Documentation

- Layer 2 Circuit Overview on page 1
- Example: Interconnecting a Layer 2 Circuit with a Layer 2 Circuit on page 5

Example: Interconnecting a Layer 2 Circuit with a Layer 2 Circuit

This example provides a step-by-step procedure and commands for configuring and verifying a Layer 2 circuit to a Layer 2 circuit interconnection. It contains the following sections:

- Requirements on page 5
- Overview and Topology on page 5
- Configuration on page 6

Requirements


This example uses the following hardware and software components:

- Junos OS Release 9.3 or later
- 2 MX Series routers
- 2 M Series routers
- 1 T Series router
- 1 EX Series router
- 1 J Series router

Overview and Topology


The physical topology of a Layer 2 circuit to Layer 2 circuit interconnection is shown in Figure 1 on page 5

Figure 1: Physical Topology of a Layer 2 Circuit Terminating into a Layer 2 Circuit

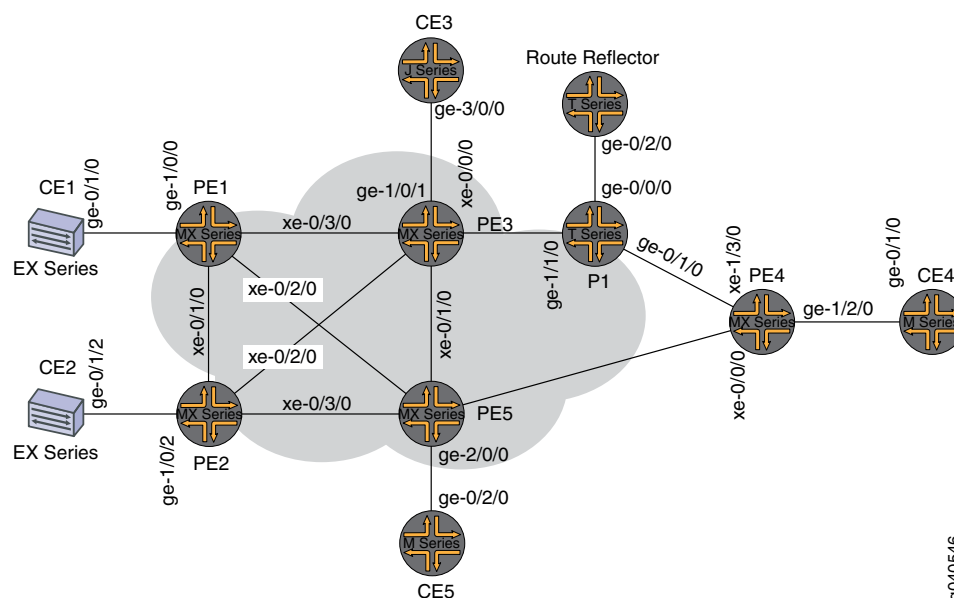

The logical topology of a Layer 2 circuit to Layer 2 circuit interconnection is shown in Figure 2 on page 6

Figure 2: Logical Topology of a Layer 2 Circuit Terminating into a Layer 2 Circuit

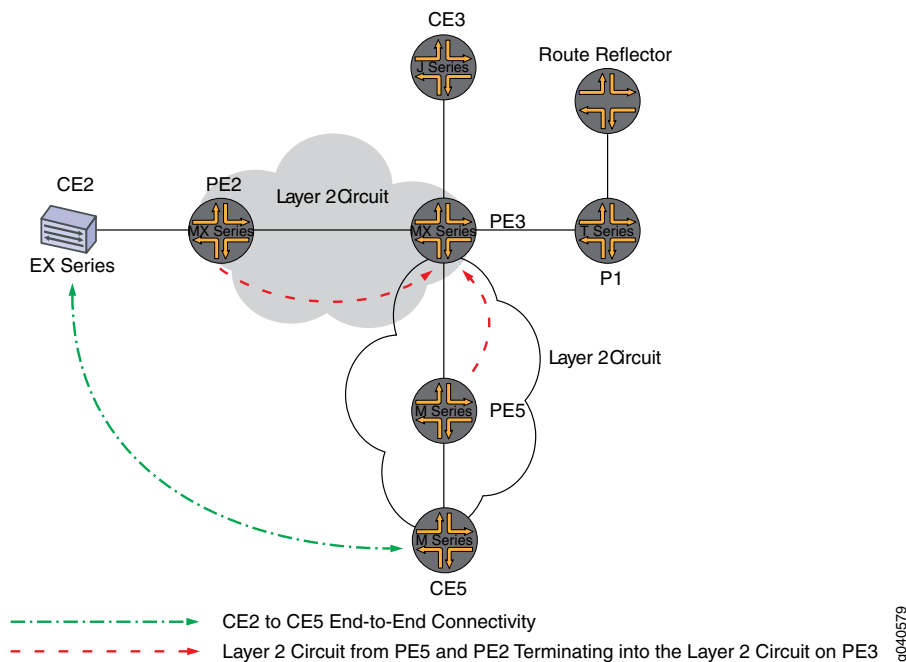

Configuration



NOTE: In any configuration session, it is good practice to verify periodically that the configuration can be committed using the `commit check` command.

In this example, the router being configured is identified using the following command prompts:

- **CE2** identifies the customer edge 2 (CE2) router
- **PE1** identifies the provider edge 1 (PE1) router
- **CE3** identifies the customer edge 3 (CE3) router
- **PE3** identifies the provider edge 3 (PE3) router
- **CE5** identifies the customer edge 5 (CE5) router
- **PE5** identifies the provider edge 5 (PE5) router

This example contains the following procedures:

- Configuring PE Router Customer-facing and Loopback Interfaces on page 7
- Configuring Core-facing Interfaces on page 8
- Configuring Protocols on page 9

- Configuring the Layer 2 Circuits on page 10
- Interconnecting the Layer 2 Circuits on page 12
- Verifying the Layer 2 Circuit to Layer 2 Circuit Interconnection on page 13

Configuring PE Router Customer-facing and Loopback Interfaces

Step-by-Step Procedure

To begin building the interconnection, configure the interfaces on the PE routers. If your network contains provider (P) routers, configure the interfaces on the P routers also. This example shows the configuration for Router PE1 and Router PE5.

1. On Router PE1, configure the **ge-1/0/0** interface encapsulation. To configure the interface encapsulation, include the **encapsulation** statement and specify the **ethernet-ccc** option (vlan-ccc encapsulation is also supported). Configure the **ge-1/0/0.0** logical interface family for circuit cross-connect functionality. To configure the logical interface family, include the **family** statement and specify the **ccc** option.

```
[edit interfaces]
ge-1/0/0 {
  encapsulation ethernet-ccc;
  unit 0 {
    family ccc;
  }
}
lo0 {
  unit 0 {
    family inet {
      address 1.1.1.1/32;
    }
  }
}
```

2. On Router PE5, configure the **ge-2/0/0** interface encapsulation. To configure the interface encapsulation, include the **encapsulation** statement and specify the **ethernet-ccc** option. Configure the **ge-2/0/0.0** logical interface family for circuit cross-connect functionality. To configure the logical interface family, include the **family** statement and specify the **ccc** option

```
[edit interfaces]
ge-2/0/0 {
  encapsulation ethernet-ccc;
  unit 0 {
    family ccc;
  }
}
lo0 {
  unit 0 {
    family inet {
      address 5.5.5.5/32;
    }
  }
}
```

3. On Router PE3, configure the logical loopback interface. The loopback interface is used to establish the targeted LDP sessions to Routers PE1 and PE5.

```
[edit interfaces]
lo0 {
  unit 0 {
    family inet {
      address 3.3.3.3/32;
    }
  }
}
```

Configuring Core-facing Interfaces

Step-by-Step Procedure

This procedure describes how to configure the core-facing interfaces on the PE routers. This example does not include all the core-facing interfaces shown in the physical topology illustration. Enable the **mpls** and **inet** address families on the core-facing interfaces.

1. On Router PE1, configure the **xe-0/3/0** interface. Include the **family** statement and specify the **inet** address family. Include the **address** statement and specify **10.10.1.1/30** as the interface address. Include the **family** statement and specify the **mpls** address family.

```
[edit interfaces]
xe-0/3/0 {
  unit 0 {
    family inet {
      address 10.10.1.1/30;
    }
    family mpls;
  }
}
```

2. On Router PE3, configure the core-facing interfaces. Include the **family** statement and specify the **inet** address family. Include the **address** statement and specify the IPv4 addresses shown in the example as the interface addresses. Include the **family** statement and specify the **mpls** address family. In the example, the **xe-0/0/0** interface is connected to the route reflector, the **xe-0/1/0** interface is connected to Router PE5, the **xe-0/2/0** interface is connected to Router PE2, and the **xe-0/3/0** interface is connected to Router PE1.

```
[edit interfaces]
xe-0/0/0 {
  unit 0 {
    family inet {
      address 10.10.20.2/30;
    }
    family mpls;
  }
}
xe-0/1/0 {
  unit 0 {
    family inet {
      address 10.10.6.1/30;
    }
    family mpls;
  }
}
```



```

}
xe-0/2/0 {
  unit 0 {
    family inet {
      address 10.10.5.2/30;
    }
    family mpls;
  }
}
xe-0/3/0 {
  unit 0 {
    family inet {
      address 10.10.1.2/30;
    }
    family mpls;
  }
}

```

3. On Router PE5, configure the **xe-0/1/0** interface. Include the **family** statement and specify the **inet** address family. Include the **address** statement and specify **10.10.6.2/30** as the interface address. Include the **family** statement and specify the **mpls** address family.

```

[edit interfaces]
xe-0/1/0 {
  unit 0 {
    family inet {
      address 10.10.6.2/30;
    }
    family mpls;
  }
}

```

Configuring Protocols

Step-by-Step Procedure

This procedure describes how to configure the protocols used in this example. If your network contains P routers, configure the protocols on the P routers also.

Configure all of the PE routers and P routers with OSPF as the IGP protocol. Enable MPLS and LDP protocols on all of the interfaces except **fxp0.0**.

1. On Router PE1, enable OSPF as the IGP. Enable the MPLS and LDP protocols on all interfaces except **fxp0.0**. LDP is used as the signaling protocol on Router PE1 for the Layer 2 circuit. The following configuration snippet shows the protocol configuration for Router PE1:

```

[edit]
protocols {
  mpls {
    interface all;
    interface fxp0.0 {
      disable;
    }
  }
  ospf {
    traffic-engineering;
  }
}

```

```

        area 0.0.0.0 {
            interface all;
            interface fxp0.0 {
                disable;
            }
        }
    }
    ldp {
        interface all;
        interface fxp0.0 {
            disable;
        }
    }
}

```

2. Configure the PE and P routers with OSPF as the IGP. Enable the MPLS and LDP protocols on all interfaces except **fxp0.0**. The following configuration snippet shows the protocol configuration for Router PE3:

```

[edit]
protocols {
    mpls {
        interface all;
        interface fxp0.0 {
            disable;
        }
    }
    ospf {
        traffic-engineering;
        area 0.0.0.0 {
            interface all;
            interface fxp0.0 {
                disable;
            }
        }
    }
    ldp {
        interface all;
        interface fxp0.0 {
            disable;
        }
    }
}

```

Configuring the Layer 2 Circuits

Step-by-Step Procedure

This procedure describes how to configure the Layer 2 circuits.



NOTE: In this example the **ignore-mtu-mismatch** statement is required for the circuit to come up.

1. On Router PE1, configure the Layer 2 circuit. Include the **l2circuit** statement. Include the **neighbor** statement and specify the loopback IPv4 address of Router PE3 as

the neighbor. Include the interface statement and specify **ge-1/0/0.0** as the logical interface that is participating in the Layer 2 circuit. Include the **virtual-circuit-id** statement and specify **100** as the identifier. Include the **ignore-mtu-mismatch** statement to allow a Layer 2 circuit to be established even though the maximum transmission unit (MTU) configured on the local PE router does not match the MTU configured on the remote PE router.

```
[edit]
protocols {
  l2circuit {
    neighbor 3.3.3.3 {
      interface ge-1/0/0.0 {
        virtual-circuit-id 100;
        ignore-mtu-mismatch;
      }
    }
  }
}
```

2. On Router PE5, configure the Layer 2 circuit. Include the **l2circuit** statement. Include the **neighbor** statement and specify the loopback IPv4 address of Router PE3 as the neighbor. Include the interface statement and specify **ge-2/0/0.0** as the logical interface that is participating in the Layer 2 circuit. Include the **virtual-circuit-id** statement and specify **200** as the identifier. Include the **ignore-mtu-mismatch** statement to allow a Layer 2 circuit to be established even though the MTU configured on the local PE router does not match the MTU configured on the remote PE router.

```
[edit]
protocols {
  l2circuit {
    neighbor 3.3.3.3 {
      interface ge-2/0/0.0 {
        virtual-circuit-id 200;
        ignore-mtu-mismatch;
      }
    }
  }
}
```

3. On Router PE3, configure the Layer 2 circuit to Router PE1. Include the **l2circuit** statement. Include the **neighbor** statement and specify the loopback IPv4 address of Router PE1 as the neighbor. Include the interface statement and specify **iw0.0** as the logical interworking interface that is participating in the Layer 2 circuit. Include the **virtual-circuit-id** statement and specify **100** as the identifier. Include the **ignore-mtu-mismatch** statement to allow a Layer 2 circuit to be established even though the MTU configured on the local PE router does not match the MTU configured on the remote PE router.

On Router PE3, configure the Layer 2 circuit to Router PE5. Include the **l2circuit** statement. Include the **neighbor** statement and specify the loopback IPv4 address of Router PE5 as the neighbor. Include the interface statement and specify **iw0.1** as the logical interworking interface that is participating in the Layer 2 circuit. Include

the **virtual-circuit-id** statement and specify **200** as the identifier. Include the **ignore-mtu-mismatch** statement.

```
[edit protocols]
l2circuit {
  neighbor 1.1.1.1 {
    interface iw0.0 {
      virtual-circuit-id 100;
      ignore-mtu-mismatch;
    }
  }
  neighbor 5.5.5.5 {
    interface iw0.1 {
      virtual-circuit-id 200;
      ignore-mtu-mismatch;
    }
  }
}
```

Interconnecting the Layer 2 Circuits

Step-by-Step Procedure

Router PE3 is the router that is *stitching* the Layer 2 circuits together using the interworking interface. The configuration of the peer unit interfaces is what makes the interconnection.

1. On Router PE3, configure the **iw0.0** interface. Include the **encapsulation** statement and specify the **ethernet-ccc** option. Include the **peer-unit** statement and specify the logical interface unit 1 as the peer tunnel interface.

On Router PE3, configure the **iw0.1** interface. Include the **encapsulation** statement and specify the **ethernet-ccc** option. Include the **peer-unit** statement and specify the logical interface unit 0 as the peer tunnel interface.

```
[edit interfaces]
iw0 {
  unit 0 {
    encapsulation ethernet-ccc;
    peer-unit 1;
  }
  unit 1 {
    encapsulation ethernet-ccc;
    peer-unit 0;
  }
}
```

2. On Router PE3, configure the Layer 2 interworking **l2iw** protocol. To configure the Layer 2 interworking protocol, include the **l2iw** statement at the **[edit protocols]** hierarchy level.

```
[edit]
protocols {
  l2iw;
}
```

3. On each router, commit the configuration.

```
user@host> commit check
configuration check succeeds
```

```
user@host> commit
```

Verifying the Layer 2 Circuit to Layer 2 Circuit Interconnection

Step-by-Step Procedure Verify that the Layer 2 circuit connection on Router PE1 is up, the LDP neighbors are correct, and the MPLS label operations are correct.

1. On Router PE1, use the **show l2circuit connections** command to verify that the Layer 2 circuit from Router PE1 to Router PE3 is **Up**.

```
user@PE1> show l2circuit connections
```

Layer-2 Circuit Connections:

Legend for connection status (St)

EI -- encapsulation invalid	NP -- interface h/w not present
MM -- mtu mismatch	Dn -- down
EM -- encapsulation mismatch	VC-Dn -- Virtual circuit Down
CM -- control-word mismatch	Up -- operational
VM -- vlan id mismatch	CF -- Call admission control failure
OL -- no outgoing label	IB -- TDM incompatible bitrate
NC -- intf encaps not CCC/TCC	TM -- TDM misconfiguration
BK -- Backup Connection	ST -- Standby Connection
CB -- rcvd cell-bundle size bad	XX -- unknown
SP -- Static Pseudowire	

Legend for interface status

Up -- operational

Dn -- down

Neighbor: 3.3.3.3

Interface	Type	St	Time last up	# Up trans
ge-1/0/0.0(vc 100)	rmt	Up	Jan 5 22:00:49 2010	1

Remote PE: 3.3.3.3, Negotiated control-word: Yes (Null)
Incoming label: 301328, Outgoing label: 314736
Local interface: ge-1/0/0.0, Status: Up, Encapsulation: ETHERNET

2. On Router PE1, use the **show ldp neighbor** command to verify that the IPv4 address of Router PE3 is shown as the LDP neighbor.

```
user@PE1> show ldp neighbor
```

Address	Interface	Label space ID	Hold time
3.3.3.3	lo0.0	3.3.3.3:0	41

3. On Router PE1, use the **show route table mpls.0** command to verify the Layer 2 circuit is using the LDP label to Router PE3 in both directions (Push and Pop). In the example below, the Layer 2 circuit is associated with LDP label **301328**.

```
user@PE1> show route table mpls.0
```

mpls.0: 13 destinations, 13 routes (13 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

0	*[MPLS/0] 1w1d 08:25:39, metric 1 Receive
1	*[MPLS/0] 1w1d 08:25:39, metric 1 Receive
2	*[MPLS/0] 1w1d 08:25:39, metric 1 Receive

```

300432          *[LDP/9] 3d 01:13:57, metric 1
> to 10.10.2.2 via xe-0/1/0.0, Pop
300432(S=0)     *[LDP/9] 3d 01:13:57, metric 1
> to 10.10.2.2 via xe-0/1/0.0, Pop
300768          *[LDP/9] 3d 01:13:57, metric 1
> to 10.10.3.2 via xe-0/2/0.0, Pop
300768(S=0)     *[LDP/9] 3d 01:13:57, metric 1
> to 10.10.3.2 via xe-0/2/0.0, Pop
300912          *[LDP/9] 3d 01:13:57, metric 1
> to 10.10.3.2 via xe-0/2/0.0, Swap 299856
301264          *[LDP/9] 3d 01:13:53, metric 1
> to 10.10.1.2 via xe-0/3/0.0, Swap 308224
301312          *[LDP/9] 3d 01:13:56, metric 1
> to 10.10.1.2 via xe-0/3/0.0, Pop
301312(S=0)     *[LDP/9] 3d 01:13:56, metric 1
> to 10.10.1.2 via xe-0/3/0.0, Pop
301328          *[L2CKT/7] 02:33:26
> via ge-1/0/0.0, Pop Offset: 4
ge-1/0/0.0     *[L2CKT/7] 02:33:26, metric 2 1
> to 10.10.1.2 via xe-0/3/0.0, Push 314736 Offset: -4

```

- On Router PE3, use the **show l2circuit connections** command to verify that the Layer 2 circuit from Router PE3 to Router PE5 is **Up**, that the Layer 2 circuit from Router PE3 to Router PE1 is **Up**, that the connections to Router PE1 and Router PE5 use the **iw0** interface, and that the status for both local **iw0** interfaces is **Up**.

```
user@PE3> show l2circuit connections
```

Layer-2 Circuit Connections:

Legend for connection status (St)

EI -- encapsulation invalid	NP -- interface h/w not present
MM -- mtu mismatch	Dn -- down
EM -- encapsulation mismatch	VC-Dn -- Virtual circuit Down
CM -- control-word mismatch	Up -- operational
VM -- vlan id mismatch	CF -- Call admission control failure
OL -- no outgoing label	IB -- TDM incompatible bitrate
NC -- intf encaps not CCC/TCC	TM -- TDM misconfiguration
BK -- Backup Connection	ST -- Standby Connection
CB -- rcvd cell-bundle size bad	XX -- unknown
SP -- Static Pseudowire	

Legend for interface status

Up -- operational

Dn -- down

Neighbor: 1.1.1.1

Interface	Type	St	Time last up	# Up trans
iw0.0(vc 100)	rmt	Up	Jan 5 13:50:14 2010	1
Remote PE: 1.1.1.1, Negotiated control-word: Yes (Null)				
Incoming label: 314736, Outgoing label: 301328				
Local interface: iw0.0, Status: Up, Encapsulation: ETHERNET				

Neighbor: 5.5.5.5

Interface	Type	St	Time last up	# Up trans
iw0.1(vc 200)	rmt	Up	Jan 5 13:49:58 2010	1
Remote PE: 5.5.5.5, Negotiated control-word: Yes (Null)				
Incoming label: 314752, Outgoing label: 300208				
Local interface: iw0.1, Status: Up, Encapsulation: ETHERNET				

- On Router PE3, use the **show ldp neighbor** command to verify that the correct IPv4 addresses are shown as the LDP neighbor.

```
user@PE3> show ldp neighbor
```

Address	Interface	Label space ID	Hold time
1.1.1.1	lo0.0	1.1.1.1:0	44
2.2.2.2	lo0.0	2.2.2.2:0	42
4.4.4.4	lo0.0	4.4.4.4:0	31
5.5.5.5	lo0.0	5.5.5.5:0	44

6. On Router PE3, use the **show route table mpls.0** command to verify that the **mpls.0** routing table is populated with the Layer 2 interworking routes. Notice that in this example, the router is swapping label **314736** received from Router PE1 on the **iw0.0** to label **301328**.

```
user@PE3> show route table mpls.0
```

```
mpls.0: 16 destinations, 18 routes (16 active, 2 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both
```

```
0          *[MPLS/0] 1w1d 08:28:24, metric 1
            Receive
1          *[MPLS/0] 1w1d 08:28:24, metric 1
            Receive
2          *[MPLS/0] 1w1d 08:28:24, metric 1
            Receive
308160     *[LDP/9] 3d 01:16:55, metric 1
            > to 10.10.1.1 via xe-0/3/0.0, Pop
308160(S=0) *[LDP/9] 3d 01:16:55, metric 1
            > to 10.10.1.1 via xe-0/3/0.0, Pop
308176     *[LDP/9] 3d 01:16:54, metric 1
            > to 10.10.6.2 via xe-0/1/0.0, Pop
308176(S=0) *[LDP/9] 3d 01:16:54, metric 1
            > to 10.10.6.2 via xe-0/1/0.0, Pop
308192     *[LDP/9] 00:21:40, metric 1
            > to 10.10.20.1 via xe-0/0/0.0, Swap 601649
            to 10.10.6.2 via xe-0/1/0.0, Swap 299856
308208     *[LDP/9] 3d 01:16:54, metric 1
            > to 10.10.5.1 via xe-0/2/0.0, Pop
308208(S=0) *[LDP/9] 3d 01:16:54, metric 1
            > to 10.10.5.1 via xe-0/2/0.0, Pop
308224     *[LDP/9] 3d 01:16:52, metric 1
            > to 10.10.20.1 via xe-0/0/0.0, Pop
308224(S=0) *[LDP/9] 3d 01:16:52, metric 1
            > to 10.10.20.1 via xe-0/0/0.0, Pop
314736     *[L2IW/6] 02:35:31, metric2 1
            > to 10.10.6.2 via xe-0/1/0.0, Swap 300208
            [L2CKT/7] 02:35:31
            > via iw0.0, Pop          Offset: 4
314752     *[L2IW/6] 02:35:31, metric2 1
            > to 10.10.1.1 via xe-0/3/0.0, Swap 301328
            [L2CKT/7] 02:35:47
            > via iw0.1, Pop          Offset: 4
iw0.0     *[L2CKT/7] 02:35:31, metric2 1
            > to 10.10.1.1 via xe-0/3/0.0, Push 301328 Offset: -4
iw0.1     *[L2CKT/7] 02:35:47, metric2 1
            > to 10.10.6.2 via xe-0/1/0.0, Push 300208 Offset:
-4
```

7. Verify that Router CE1 can send traffic to and receive traffic from Router CE5 across the interconnection, using the **ping** command.

```
user@CE1> ping 40.40.40.11
```

```
PING 40.40.40.11 (40.40.40.11): 56 data bytes
64 bytes from 40.40.40.11: icmp_seq=1 ttl=64 time=22.425 ms
64 bytes from 40.40.40.11: icmp_seq=2 ttl=64 time=1.299 ms
64 bytes from 40.40.40.11: icmp_seq=3 ttl=64 time=1.032 ms
64 bytes from 40.40.40.11: icmp_seq=4 ttl=64 time=1.029 ms
```

8. Verify that Router CE5 can send traffic to and receive traffic from Router CE1 across the interconnection, using the **ping** command.

```
user@CE5>ping 40.40.40.1

PING 40.40.40.1 (40.40.40.1): 56 data bytes
64 bytes from 40.40.40.1: icmp_seq=0 ttl=64 time=1.077 ms
64 bytes from 40.40.40.1: icmp_seq=1 ttl=64 time=0.957 ms
64 bytes from 40.40.40.1: icmp_seq=2 ttl=64 time=1.057 ms 1.017 ms
```

Results The configuration and verification of this example has been completed. The following section is for your reference.

The relevant sample configuration for Router PE1 follows.

```
Router PE1 [edit]
interfaces {
  xe-0/1/0 {
    unit 0 {
      family inet {
        address 10.10.2.1/30;
      }
      family mpls;
    }
  }
  xe-0/2/0 {
    unit 0 {
      family inet {
        address 10.10.3.1/30;
      }
      family mpls;
    }
  }
  xe-0/3/0 {
    unit 0 {
      family inet {
        address 10.10.1.1/30;
      }
      family mpls;
    }
  }
  ge-1/0/0 {
    encapsulation ethernet-ccc;
    unit 0 {
      family ccc;
    }
  }
  lo0 {
    unit 0 {
      family inet {
        address 1.1.1.1/32;
      }
    }
  }
}
```



```

    }
  }
}
forwarding-options {
  hash-key {
    family inet {
      layer-3;
      layer-4;
    }
    family mpls {
      label-1;
      label-2;
    }
  }
}
routing-options {
  static {
    route 172.0.0.0/8 next-hop 172.19.59.1;
  }
  autonomous-system 65000;
}
protocols {
  mpls {
    interface all;
    interface fxp0.0 {
      disable;
    }
  }
  ospf {
    traffic-engineering;
    area 0.0.0.0 {
      interface all;
      interface fxp0.0 {
        disable;
      }
    }
  }
  ldp {
    interface all;
    interface fxp0.0 {
      disable;
    }
  }
  l2circuit {
    neighbor 3.3.3.3 {
      interface ge-1/0/0.0 {
        virtual-circuit-id 100;
        ignore-mtu-mismatch;
      }
    }
  }
}

```

The relevant sample configuration for Router PE3 follows.

```
Router PE3 [edit]
interfaces {
  xe-0/0/0 {
    unit 0 {
      family inet {
        address 10.10.20.2/30;
      }
      family mpls;
    }
  }
  xe-0/1/0 {
    unit 0 {
      family inet {
        address 10.10.6.1/30;
      }
      family mpls;
    }
  }
  xe-0/2/0 {
    unit 0 {
      family inet {
        address 10.10.5.2/30;
      }
      family mpls;
    }
  }
  xe-0/3/0 {
    unit 0 {
      family inet {
        address 10.10.1.2/30;
      }
      family mpls;
    }
  }
  ge-1/0/1 {
    encapsulation ethernet-ccc;
    unit 0 {
      family ccc;
    }
  }
  iwo {
    unit 0 {
      encapsulation ethernet-ccc;
      peer-unit 1;
    }
    unit 1 {
      encapsulation ethernet-ccc;
      peer-unit 0;
    }
  }
  lo0 {
    unit 0 {
      family inet {
        address 3.3.3.3/32;
      }
    }
  }
}
```

```

    }
  }
  routing-options {
    static {
      route 172.0.0.0/8 next-hop 172.19.59.1;
    }
    autonomous-system 65000;
  }
  protocols {
    l2iw;
    mpls {
      interface all;
      interface fxp0.0 {
        disable;
      }
    }
    ospf {
      area 0.0.0.0 {
        interface all;
        interface fxp0.0 {
          disable;
        }
      }
    }
    ldp {
      interface all;
      interface fxp0.0 {
        disable;
      }
    }
    l2circuit {
      neighbor 1.1.1.1 {
        interface iw0.0 {
          virtual-circuit-id 100;
          ignore-mtu-mismatch;
        }
      }
      neighbor 5.5.5.5 {
        interface iw0.1 {
          virtual-circuit-id 200;
          ignore-mtu-mismatch;
        }
      }
    }
  }
}

```

Related Documentation

- [Layer 2 Circuit Overview on page 1](#)
- [Applications for Interconnecting a Layer 2 Circuit with a Layer 2 Circuit on page 3](#)

