

# Channelized IQ Interfaces

Release

11.3



---

Published: 2011-09-21

Juniper Networks, Inc.  
1194 North Mathilda Avenue  
Sunnyvale, California 94089  
USA  
408-745-2000  
www.juniper.net

This product includes the Envoy SNMP Engine, developed by Epilogue Technology, an Integrated Systems Company. Copyright © 1986-1997, Epilogue Technology Corporation. All rights reserved. This program and its documentation were developed at private expense, and no part of them is in the public domain.

This product includes memory allocation software developed by Mark Moraes, copyright © 1988, 1989, 1993, University of Toronto.

This product includes FreeBSD software developed by the University of California, Berkeley, and its contributors. All of the documentation and software included in the 4.4BSD and 4.4BSD-Lite Releases is copyrighted by the Regents of the University of California. Copyright © 1979, 1980, 1983, 1986, 1988, 1989, 1991, 1992, 1993, 1994. The Regents of the University of California. All rights reserved.

GateD software copyright © 1995, the Regents of the University. All rights reserved. Gate Daemon was originated and developed through release 3.0 by Cornell University and its collaborators. Gated is based on Kirton's EGP, UC Berkeley's routing daemon (routed), and DCN's HELLO routing protocol. Development of Gated has been supported in part by the National Science Foundation. Portions of the GateD software copyright © 1988, Regents of the University of California. All rights reserved. Portions of the GateD software copyright © 1991, D. L. S. Associates.

This product includes software developed by Maker Communications, Inc., copyright © 1996, 1997, Maker Communications, Inc.

Juniper Networks, Junos, Steel-Belted Radius, NetScreen, and ScreenOS are registered trademarks of Juniper Networks, Inc. in the United States and other countries. The Juniper Networks Logo, the Junos logo, and JunosE are trademarks of Juniper Networks, Inc. All other trademarks, service marks, registered trademarks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

Products made or sold by Juniper Networks or components thereof might be covered by one or more of the following patents that are owned by or licensed to Juniper Networks: U.S. Patent Nos. 5,473,599, 5,905,725, 5,909,440, 6,192,051, 6,333,650, 6,359,479, 6,406,312, 6,429,706, 6,459,579, 6,493,347, 6,538,518, 6,538,899, 6,552,918, 6,567,902, 6,578,186, and 6,590,785.

#### *Channelized IQ Interfaces*

Copyright © 2011, Juniper Networks, Inc.  
All rights reserved.

Revision History  
September 2011—R1 Junos OS 11.3

The information in this document is current as of the date listed in the revision history.

## END USER LICENSE AGREEMENT

The Juniper Networks product that is the subject of this technical documentation consists of (or is intended for use with) Juniper Networks software. Use of such software is subject to the terms and conditions of the End User License Agreement ("EULA") posted at <http://www.juniper.net/support/eula.html>. By downloading, installing or using such software, you agree to the terms and conditions of that EULA.



# Table of Contents

<b>Part 1</b>	<b>Overview</b>	
<b>Chapter 1</b>	<b>Product Overview</b> .....	<b>3</b>
	Overview of Channelized IQ Interfaces .....	3
	Guidelines for Configuring Channelized IQ Interfaces .....	5
	Frame Relay DLCI Limitations for Channelized IQ Interfaces .....	8
<b>Chapter 2</b>	<b>System Requirements</b> .....	<b>11</b>
	System Requirements for Channelized IQ Interfaces .....	11
<b>Chapter 3</b>	<b>Glossary</b> .....	<b>13</b>
	Terms and Acronyms for Channelized IQ Interfaces .....	13
<b>Part 2</b>	<b>Configuration</b>	
<b>Chapter 4</b>	<b>Configuration Overview</b> .....	<b>17</b>
	Roadmap for Configuring Channelized IQ Interfaces .....	17
<b>Chapter 5</b>	<b>Basic Configuration Steps</b> .....	<b>19</b>
	Configuring a Clear Channel on a Channelized IQ Interface .....	19
	Configuring Single-Level Channels on a Channelized IQ Interface .....	20
	Configuring Multilevel Channels on a Channelized IQ Interface .....	20
<b>Chapter 6</b>	<b>Configuring Class of Service on a Channelized IQ Interface</b> .....	<b>23</b>
	Configuring a Class-of-Service Scheduler Map .....	23
	Associating the Scheduler with a DLCI on a Channelized IQ Interface .....	24
	Scheduler Limitations for Channelized IQ Interfaces .....	24
	Verifying Class-of-Service Schedulers on Channelized IQ Interfaces .....	25
<b>Part 3</b>	<b>Examples</b>	
<b>Chapter 7</b>	<b>Example Overview</b> .....	<b>29</b>
	Roadmap for Channelized IQ Interface Configuration Examples .....	29
<b>Chapter 8</b>	<b>Examples</b> .....	<b>31</b>
	Merging Examples .....	31
	Example: OC12 Clear Channel on a Channelized OC12 IQ Interface .....	32
	Verifying Your Work .....	33
	Example: Complex Configuration for a Channelized OC12 IQ Interface .....	36
	Verifying Your Work .....	42
	Channelized OC12 .....	46
	SONET OC3 .....	47
	T3 .....	48

	Channelized T3 .....	50
	Channelized OC1 .....	52
	Channelized T1 .....	53
	T1 .....	55
	DS0 .....	56
	Example: Converting a Channelized OC12 IQ PIC to a Channelized STM4 IQ Interface .....	57
	Verifying Your Configuration .....	61
	Example: Channelized OC3 IQ Interface Configuration .....	63
	Verifying Your Work .....	66
	Channelized OC3 .....	67
	Channelized OC1 .....	67
	T3 .....	67
	Channelized T3 .....	68
	T1 .....	68
	Channelized T1 .....	69
	NxDS0 .....	69
	Clear Channel SONET OC3 .....	69
	Example: Channelized DS3 IQ Interface Configuration .....	70
	Verifying Your Work .....	72
	Example: Channelized T1 IQ Interface Configuration .....	76
	Verifying Your Work .....	77
	Example: Channelized STM1 IQ Interface Configuration .....	80
	Verifying Your Work .....	83
	Example: Channelized E1 IQ Interface Configuration .....	87
	Verifying Your Work .....	88
	Example: DLCI Class of Service on a Channelized IQ Interface Configuration . . .	91
	Verifying Your Work .....	92
<b>Part 4</b>	<b>Administration</b>	
<b>Chapter 9</b>	<b>Commands .....</b>	<b>97</b>
	show class-of-service interface .....	98
	show class-of-service forwarding-table .....	101
	show interfaces controller (Channelized E1 IQ) .....	104
	show interfaces controller (Channelized OC12 IQ and IQE) .....	105
	show interfaces controller (Channelized OC3 IQ and IQE) .....	107
	show interfaces controller (Channelized STM1 IQ) .....	108
	show interfaces controller (Channelized T1 IQ) .....	109
	show interfaces controller (Channelized T3 IQ) .....	110
<b>Part 5</b>	<b>Index</b>	
	Index .....	113

# List of Figures

<b>Part 3</b>	<b>Examples</b>	
<b>Chapter 8</b>	<b>Examples</b> .....	<b>31</b>
	Figure 1: OC12 Clear Channel on a Channelized OC12 IQ Interface .....	32
	Figure 2: Complex Configuration for a Channelized OC12 IQ Interface .....	36
	Figure 3: Channelized OC12 IQ Interface in SDH Mode Example .....	58
	Figure 4: Converted Channelized OC12 IQ Interface SDH Mapping Method .....	61
	Figure 5: Channelized OC3 IQ Interface Example .....	63
	Figure 6: Channelized DS3 IQ Interface Example .....	70
	Figure 7: Channelized T1 IQ Interface Example .....	76
	Figure 8: Channelized STM1 IQ Interface Example .....	80
	Figure 9: Channelized STM1 IQ Interface SDH Mapping Method .....	83
	Figure 10: Channelized E1 IQ Interface Example .....	87





# List of Tables

<b>Part 1</b>	<b>Overview</b>	
<b>Chapter 1</b>	<b>Product Overview</b> .....	<b>3</b>
	Table 1: Frame Relay DLCI Limitations for Channelized Interfaces .....	8
<b>Part 2</b>	<b>Configuration</b>	
<b>Chapter 6</b>	<b>Configuring Class of Service on a Channelized IQ Interface</b> .....	<b>23</b>
	Table 2: Scheduler Limitations for Channelized IQ Interfaces .....	24
<b>Part 3</b>	<b>Examples</b>	
<b>Chapter 8</b>	<b>Examples</b> .....	<b>31</b>
	Table 3: Complex Channelization for a Channelized OC12 IQ Interface .....	36
<b>Part 4</b>	<b>Administration</b>	
<b>Chapter 9</b>	<b>Commands</b> .....	<b>97</b>
	Table 4: show class-of-service interface Output Fields .....	98
	Table 5: Channelized E1 IQ show interfaces controller Output Fields .....	104
	Table 6: Channelized OC12 IQ and IQE show interfaces controller Output Fields .....	105
	Table 7: Channelized OC3 IQ and IQE show interfaces controller Output Fields .....	107
	Table 8: Channelized STM1 IQ show interfaces controller Output Fields .....	108
	Table 9: Channelized T1 IQ show interfaces controller Output Fields .....	109
	Table 10: Channelized T3 IQ show interfaces controller Output Fields .....	110



## PART 1

# Overview

- [Product Overview on page 3](#)
- [System Requirements on page 11](#)
- [Glossary on page 13](#)



## CHAPTER 1

# Product Overview

- [Overview of Channelized IQ Interfaces on page 3](#)
- [Guidelines for Configuring Channelized IQ Interfaces on page 5](#)
- [Frame Relay DLCI Limitations for Channelized IQ Interfaces on page 8](#)

## Overview of Channelized IQ Interfaces

---

Channelized interfaces allow service providers to customize bandwidth to satisfy the needs of their customers. Whether the subscriber needs DS0, T1, fractional T1, E1, fractional E1, E3, T3, STM1, OC3, or OC12 service, a channelized interface can provide the necessary bandwidth today and can be reconfigured to support the customer's expanding network tomorrow. Standard channelized interfaces have been available on Juniper Networks routing platforms since JUNOS Release 3.4.

The original channelized interfaces for Juniper Networks M-series routers are available in the following models:

- 1-port Channelized OC12 PIC
- 10-port Channelized E1 PIC
- 1-port Channelized STM1 PIC
- 4-port Channelized DS3 PIC
- 1-port and 2-port multichannel Channelized DS3 PIC

These channelized interfaces provide a single level of channelization and require at both the **[edit chassis]** and the **[edit interfaces]** hierarchy levels. Most configuration options must be set on channel 0 and apply to all channels on these channelized interfaces.

The new channelized interfaces with intelligent queuing offer several advantages over the original channelized interfaces:

- Complete configuration tasks for channelized IQ interfaces are now centralized at the **[edit interfaces]** hierarchy level.
- Multiple levels of channelization are now possible with channelized IQ interfaces. For example, a channelized OC12 IQ interface can be divided into channelized OC1 interfaces, then subdivided into channelized T1 interfaces, and further split into NxDS0 channels.

- You can now configure interface statements, such as **clocking**, on individual channels rather than configuring them on channel 0 for all channels at the same hierarchy level.
- Class-of-service (CoS) processing now occurs on the PIC for channelized IQ interfaces rather than in the FPC.

The following M-series and T-series PICs support channelized interfaces with intelligent queuing:

- 1-port Channelized OC12 IQ PIC
- 1-port Channelized OC3 PIC
- 4-port Channelized DS3 IQ PIC
- 10-port Channelized T1 IQ PIC
- 10-port Channelized E1 IQ PIC
- 1-port Channelized STM1 IQ PIC

To determine which PIC is installed, issue the **show chassis hardware** command:

```
user@RouterA> show chassis hardware
```

Hardware inventory:

Item	Version	Part number	Serial number	Description
Chassis			20070	M160
Midplane	REV 03	710-001245	AB4123	
FPM CMB	REV 02	710-001642	AB3266	
FPM Display	REV 02	710-001647	AB3038	
CIP	REV 04	710-001593	AB3276	
PEM 0	Rev 03	740-001243	KM28410	DC
PEM 1	Rev 03	740-001243	LF21558	Power Entry Module
PCG 0	REV 03	710-001568	AB3006	
PCG 1	REV 02	710-001568	AB2992	
Routing Engine 0			20000005dfae3a01	RE-2.0
MCS 0	REV 04	710-001226	AB3208	
MCS 1	REV 04	710-001226	AB3212	
SFM 0 SPP	REV 06	710-001228	AB3103	
SFM 0 SPR	REV 01	710-002189	AB2936	Internet Processor II
SFM 1 SPP	REV 07	710-001228	AG2634	
SFM 1 SPR	REV 03	710-002189	AE3503	Internet Processor II
SFM 2 SPP	REV 06	710-001228	AB2976	
SFM 2 SPR	REV 01	710-002189	AB2938	Internet Processor II
SFM 3 SPP	REV 06	710-001228	AB5826	
SFM 3 SPR	REV 01	710-002189	AB2917	Internet Processor II
FPC 0	REV 03	710-003947	HE0614	E-FPC Type 1
CPU	REV 01	710-004600	AT3217	
PIC 0	REV 03	750-005636	BE1826	4x CHDS3 IQ

# This is the Channelized DS3 IQ PIC.

PIC 1	REV 07	750-003846	HG5572	1x 800M Crypto
PIC 2	REV 01	750-004507	BA5341	10x CE1-NxDS0
PIC 3	REV 06	750-003009	AM6929	4x CT3

# This is the original Channelized T3 PIC.

FPC 1	REV 03	710-003309	AD9434	E-FPC Type 2
CPU	REV 05	710-001217	AH2707	

PIC 2	REV 05	750-001900	AD5738	1x OC-48 SONET, SMSR
PIC 3	REV 04	750-003737	BC1106	4x G/E, 1000 BASE-SX

- Related Documentation**
- Channelized IQ Interfaces
  - [Roadmap for Configuring Channelized IQ Interfaces on page 17](#)
  - [Roadmap for Channelized IQ Interface Configuration Examples on page 29](#)

## Guidelines for Configuring Channelized IQ Interfaces

When you configure channelized IQ interfaces, keep in mind these rules of thumb:

- You normally configure media-related statements and options at the physical interface level (also known as the controller level). This level is indicated by the **[edit interfaces *cxx-fpc/pic/port*]** hierarchy level.
- You should always configure HDLC-related statements (for example, **bytes**, **fcs**, **idle-cycle-flag**, **mtu**, **receive-bucket**, **start-end-flag**, and **transmit-bucket**) and logical interfaces (for example, **[edit interfaces *interface-name unit unit-number*]**) on end channels such as DS0 and T1. Never configure these statements at the controller level.
- Pay attention to the channel numbering rules:
  - OC3 data channels configured on channelized OC12 IQ interfaces are numbered from 1 to 4.
  - T3 channels configured on a channelized OC12 IQ or channelized OC3 IQ interface are numbered from 1 to 12.
  - T1 channels on a channelized OC12 IQ, channelized OC3 IQ, channelized DS3 IQ, or channelized T1 IQ interface are numbered from 1 to 28.
  - E1 channels configured on a channelized STM1 IQ interface are numbered from 1 to 63.
  - NxDS0 time slots configured on a channelized OC12 IQ, channelized OC3 IQ, channelized DS3 IQ, or channelized T1 IQ interface are numbered from 1 to 24.
  - NxDS0 time slots configured on either a channelized STM1 IQ interface or channelized E1 IQ interface are numbered from 2 to 32 (1 is reserved).
- You can configure Automatic Protection Switching (APS) on channelized OC12 IQ interfaces and Multiplex Section Protection (MSP) on channelized STM1 IQ interfaces. The JUNOS implementation of APS and MSP allows you to protect against circuit failures between a SONET/SDH add/drop multiplexer (ADM) and one or more routers, and between multiple interfaces in the same router. When a device fails, a backup device immediately takes over.

You configure APS and MSP at the controller level only. To configure, include the **working-circuit** and **protect-circuit** statements at the **[edit interfaces *coc12-fpc/pic/port sonet-options aps*]** or **[edit interfaces *coc3-fpc/pic/port sonet-options aps*]** hierarchy

level for APS and the **[edit interfaces cstm1-fpc/pic/port sonet-options aps]** hierarchy level for MSP.

When you enable the controller-level interface as the working circuit, all partitions under the working circuit are also enabled. This is the default behavior even when APS or MSP is not configured. When the backup circuit interface is disabled, all partitions under this protected circuit are also disabled. If the working circuit fails, the interfaces are switched: The working circuit and all its partitions are disabled, and the protect circuit and all its partitions are enabled. You can verify this behavior by entering the **show interfaces controller** command. The disabled interfaces are shown as “admin down” and the enabled interfaces are shown as “admin up.”

- You can delete several channelized interfaces simultaneously by using a single command and regular expressions. To delete sequential channelized interfaces, issue the **wildcard** command with the **delete** option at the **[edit]** hierarchy level. Specify the hierarchy level and the channelized interfaces to be summarized with a regular expression. For example, to delete channelized interfaces in the range of **ds-0/0/0:0** through **ds-0/0/0:23**, issue the following command:

```
user@router# wildcard delete interfaces ds-0/0/0:0:.*
```

- In JUNOS Release 6.2 and later, additional Frame Relay encapsulation types on physical interfaces and channels of channelized IQ interfaces are available:
  - Extended Frame Relay circuit cross-connect (CCC)—Allows you to assign any DLCI number from 1 to 1022 on Frame Relay CCC logical interfaces. To configure, include the **extended-frame-relay-ccc** statement at the **[edit interfaces interface-name encapsulation]** hierarchy level.
  - Extended Frame Relay translational cross-connect (TCC)—Allows you to assign any DLCI number from 1 to 1022 on Frame Relay TCC logical interfaces. To configure, include the **extended-frame-relay-tcc** statement at the **[edit interfaces interface-name encapsulation]** hierarchy level.
  - Flexible Frame Relay—Allows you to configure any DLCI number from 1 to 1022 and any combination of Frame Relay encapsulation types on logical interfaces. To configure, include the **flexible-frame-relay** statement at the **[edit interfaces interface-name encapsulation]** hierarchy level.
- When you configure clocking, bit error rate testing (BERT), C-bit parity, and loopback statements on T3, T1, or DS0 channels on channelized IQ interfaces, you must follow these guidelines:
  - If you include the statements at both the **[edit interfaces ct3-fpc /pic /port:channel t3-options]** and **[edit interfaces t3-fpc/pic/port:channel t3-options]** hierarchy levels, channelized T3-level statements are operational and T3-level statements are ignored.
  - If you include the statements at both the **[edit interfaces ct3-fpc/pic/port:channel t3-options]** and **[edit interfaces t1-fpc/pic/port:channel t1-options]** hierarchy levels, the channelized T3-level statements are operational for the T3 connections and the T1-level statements are operational for the T1 connections.



- Because DS0 channels do not have a valid clocking option, you must configure clocking for all *NxDS0s* at the **[edit interfaces ct1-fpc/pic/port:channel t1-options]** hierarchy level.
- You configure BERT at the **[edit interfaces ct3-fpc/pic/port:channel t3-options]** hierarchy level or on any partitioned subchannel of the channelized T3 interface. There are 12 BERT patterns available for DS0 channels and 28 BERT patterns for T1, channelized T1, T3, and channelized T3 channels within channelized IQ interfaces.
- For Channelized OC3 IQ PICs, if you need a remote loopback on a far-end *NxDS0* interface, and you are running a BERT test from the local *NxDS0* interface, you must configure a remote loopback on the associated channelized T1 interface (**ct1**) for the far-end routing platform. To do this, include the **loopback remote** statement at the **[edit interfaces ct1-fpc/pic/port t1-options]** hierarchy level.
- You can configure loopbacks at the **[edit interfaces ct3-fpc/pic/port:channel t3-options]** hierarchy level. Local loopbacks recirculate framing information within the local router. Remote loopbacks resend entire frames back to the remote sender. A new loopback called a *payload loopback* is similar to a remote loopback, but it resends only the data portion of a frame back to the remote sender.
- You can configure C-bit parity at the **[edit interfaces ct3-fpc/pic/port:channel t3-options]** hierarchy level or on any partitioned subchannel of the channelized T3 interface.
- In JUNOS Release 7.5 and later, you can increase the delay buffer for E1, T1, and *NxDS0* channels on all Channelized IQ PICs (except the Channelized OC12 IQ PIC) by including the **q-pic-large-buffer** statement at the **[edit chassis fpc fpc-slot pic pic-slot]** hierarchy level. By doing so, you enable the slower interfaces to handle bursts of traffic from faster upstream neighbors. As a result, any class-of-service (CoS) scheduler that you apply to an interface will inherit the larger delay buffer and the buffer is shared across all four CoS queues. For more information about increasing the delay buffer, see the *JUNOS Class of Service Configuration Guide*.



**NOTE:** If you configure the **q-pic-large-buffer** statement and APS in a multirouter topology, the Channelized IQ PIC resets and causes an APS switchover.

#### Related Documentation

- [Channelized IQ Interfaces Solutions Page](#)
- [Overview of Channelized IQ Interfaces on page 3](#)
- [Roadmap for Configuring Channelized IQ Interfaces on page 17](#)
- [Roadmap for Channelized IQ Interface Configuration Examples on page 29](#)

## Frame Relay DLCI Limitations for Channelized IQ Interfaces

If you use Frame Relay encapsulation on a channelized interface, see Table 7 on page 8 for the maximum number of data-link connection identifiers (DLCIs) per channel that you can configure at each channel level for various channelized PICs.



**NOTE:** The actual number of DLCIs you can configure for each channel is determined by the capabilities of your system, such as the number and type of PICs installed. If the number of DLCIs in the configuration exceeds the capabilities of your system, the router might not be able to support the maximum DLCI values shown in Table 7 on page 8. To determine the capabilities of your system, contact Juniper Networks customer support.

**Table 1: Frame Relay DLCI Limitations for Channelized Interfaces**

Channelized PIC Type		
<b>Original Channelized PICs</b>	<b>Number of DLCIs per Level</b>	<b>Range</b>
T3 and T1 level channels	64 for regular mode	0–63 for regular mode
	3 for sparse mode	1–1022 for sparse mode (0 is reserved for the Local Management Interface or LMI)
DS0 level channels	3 for sparse mode	1–1022 for sparse mode (0 is reserved for LMI)
<b>Channelized IQ PICs</b>	<b>Number of DLCIs per Level</b>	<b>Range</b>
OC12 level channels (Channelized OC12 IQ PIC)	64	1–1022 (0 is reserved for LMI)
OC3 level channels (Channelized OC12 IQ and Channelized OC3 IQ PICs)	64	1–1022 (0 is reserved for LMI)
T3 level channel (Channelized OC12 IQ, Channelized OC3 IQ, and Channelized DS3 IQ PICs)	256	1–1022 (0 is reserved for LMI)
STM1 level channel (Channelized STM1 IQ PIC)	64	1–1022 (0 is reserved for LMI)
E1 level channels (Channelized STM1 IQ and Channelized E1 IQ PICs)	64	1–1022 (0 is reserved for LMI)
T1 level channels (Channelized OC12 IQ, Channelized OC3 IQ, Channelized DS3 IQ, and Channelized T1 IQ PICs)	64	1–1022 (0 is reserved for LMI)

Table 1: Frame Relay DLCI Limitations for Channelized Interfaces (*continued*)

Channelized PIC Type		
DS0 level channels (Channelized OC12 IQ, Channelized OC3 IQ, Channelized DS3 IQ, Channelized T1 IQ, Channelized STM1 IQ, and Channelized E1 IQ PICs)	16	1–1022 (0 is reserved for LMI)

- Related Documentation**
- [Overview of Channelized IQ Interfaces on page 3](#)
  - [Roadmap for Configuring Channelized IQ Interfaces on page 17](#)
  - [Roadmap for Channelized IQ Interface Configuration Examples on page 29](#)



## CHAPTER 2

# System Requirements

- [System Requirements for Channelized IQ Interfaces on page 11](#)

### System Requirements for Channelized IQ Interfaces

---

To implement channelized IQ interfaces, your system must meet these requirements:

- JUNOS Release 8.0 or later for DLCI-level scheduler support on E1 channels configured on Channelized STM1 IQ PICs
- JUNOS Release 7.6 or later for converting a Channelized OC12 IQ PIC to a channelized STM4 SDH interface
- JUNOS Release 7.5 or later for increased delay buffers on channelized E1 IQ, channelized DS3 IQ, channelized OC3 IQ, channelized STM1 IQ, and channelized T1 IQ interfaces; support for rate limiting on physical interfaces; and support for channelized STM1 IQ interfaces on T-series platforms
- JUNOS Release 7.4 or later for channelized T1 IQ interfaces
- JUNOS Release 7.1 or later for channelized OC3 IQ interfaces
- JUNOS Release 6.3 or later for configuration of 256 DLCIs at the T3 channel level for channelized OC12 IQ interfaces
- JUNOS Release 6.2 or later for configuration of 64 DLCIs at the T1 channel level for channelized OC12 IQ interfaces, 64 DLCIs at the E1 channel level for channelized STM1 IQ interfaces, and 256 DLCIs at the T3 channel level for channelized DS3 IQ interfaces
- JUNOS Release 6.2 or later for configuration of flexible Frame Relay, extended Frame Relay CCC, and extended Frame Relay TCC encapsulation types
- JUNOS Release 6.2 or later for support of E3 IQ interfaces
- JUNOS Release 6.0 or later for logical interface-level class of service on channelized STM1 IQ interfaces, and APS/MSP on channelized OC12 IQ and channelized STM1 IQ interfaces
- JUNOS Release 5.7 or later for channelized STM1 IQ interfaces
- JUNOS Release 5.7 or later for logical interface-level class of service on the channelized DS3 IQ, channelized E1 IQ, and channelized OC12 IQ interfaces

- JUNOS Release 5.6 or later for channelized DS3 IQ, channelized E1 IQ, and channelized OC12 IQ interfaces
- Two Juniper Networks M-series or T-series routers equipped with an Enhanced Type 1 or Type 2 Flexible PIC Concentrator (FPC)

**Related  
Documentation**

- [Channelized IQ Interfaces Solutions Page](#)
- [Overview of Channelized IQ Interfaces on page 3](#)
- [Roadmap for Configuring Channelized IQ Interfaces on page 17](#)
- [Roadmap for Channelized IQ Interface Configuration Examples on page 29](#)

## CHAPTER 3

# Glossary

- [Terms and Acronyms for Channelized IQ Interfaces on page 13](#)

### Terms and Acronyms for Channelized IQ Interfaces

---

#### P

<b>Performance Processor (QPP) ASIC</b>	A next-generation processor that provides enhanced capabilities for channelized IQ interfaces.
---	--





## PART 2

# Configuration

- [Configuration Overview on page 17](#)
- [Basic Configuration Steps on page 19](#)
- [Configuring Class of Service on a Channelized IQ Interface on page 23](#)



## CHAPTER 4

# Configuration Overview

- [Roadmap for Configuring Channelized IQ Interfaces on page 17](#)

### Roadmap for Configuring Channelized IQ Interfaces

---

To configure a channelized IQ interface, you must perform one or more of the following procedures:

- Configure a clear channel. A clear channel consolidates the entire bandwidth of a channelized interface into a single unpartitioned stream that looks like a standard interface. For example, a channelized OC12 IQ interface configured as a clear channel appears to have an OC12 SONET interface.

See [“Configuring a Clear Channel on a Channelized IQ Interface” on page 19](#).

- Configure single-level channels. By configuring single-level channels, you subdivide a channelized interface into a set of large end channels.

See [“Configuring Single-Level Channels on a Channelized IQ Interface” on page 20](#).

- Configure multilevel channels. You can subdivide a channelized interface and then split these subchannelized interfaces into end channels. Creating small end channels might require you to configure multilevel channels.

See [“Configuring Multilevel Channels on a Channelized IQ Interface” on page 20](#).

- Configure class of service. On channelized IQ interfaces, you can apply class of service at the logical interface level for Frame Relay data-link connection identifiers (DLCIs).

See [“Configuring a Class-of-Service Scheduler Map” on page 23](#).

#### Related Documentation

- [Channelized IQ Interfaces Solutions Page](#)
- [Overview of Channelized IQ Interfaces on page 3](#)
- [Roadmap for Channelized IQ Interface Configuration Examples on page 29](#)



## CHAPTER 5

# Basic Configuration Steps

- [Configuring a Clear Channel on a Channelized IQ Interface on page 19](#)
- [Configuring Single-Level Channels on a Channelized IQ Interface on page 20](#)
- [Configuring Multilevel Channels on a Channelized IQ Interface on page 20](#)

### Configuring a Clear Channel on a Channelized IQ Interface

---

A clear channel consolidates the entire bandwidth of a channelized interface into a single unpartitioned stream that looks like a standard interface. For example, a channelized OC12 IQ interface configured as a clear channel appears to have an OC12 SONET interface. To configure a clear channel on a channelized IQ interface, include the **no-partition** statement at the **[edit interfaces cxx-fpc/pic/port]** hierarchy level. Include the **interface-type** option to set the channelized interface type. Once the interface is established, you can configure it the same way as a regular interface.

```
[edit]
interfaces {
  coc12-1/1/0 {
    no-partition interface-type so; # This creates a SONET OC12 interface:
  }
  so-1/1/0 {
    unit 0 {
      family inet {
        address 10.245.1.1/30;
      }
    }
  }
}
```

#### Related Documentation

- [Channelized IQ Interfaces Solutions Page](#)
- [Overview of Channelized IQ Interfaces on page 3](#)
- [Roadmap for Configuring Channelized IQ Interfaces on page 17](#)
- [Roadmap for Channelized IQ Interface Configuration Examples on page 29](#)

## Configuring Single-Level Channels on a Channelized IQ Interface

---

You can subdivide a channelized interface directly into a set of large end channels. To configure part of a channelized IQ interface as a channel, include the **partition** statement at the **[edit interfaces cxx-fpc/pic/port]** hierarchy level. On a channelized OC12 IQ interface, use the **oc-slice** option to create slice sizes corresponding to the desired bandwidth. On a channelized E1 IQ interface, use the **timeslots** option to define *N*×DS0 channels or channel groups. On all channelized IQ interfaces, use the **interface-type** option to set the interface type (such as SONET OC3 or T3). Once the channel interfaces are established, you can configure them the same way as regular interfaces.



**NOTE:** One **oc-slice** in a channelized OC12 IQ interface partition is equivalent to one OC1/DS3-sized channel. If you add three slices together in sequence as a triplet, these pieces become an OC3-sized interface. However, you can configure triplets only with the following sequential slices: 1–3, 4–6, 7–9, 10–12.

```
[edit]
interfaces {
  coc12-0/0/0 {
    partition 1 oc-slice 1-3 interface-type so; # Creates an OC3 SONET
  }
  so-0/0/0:1 {
    encapsulation ppp;
    unit 0 {
      family inet {
        address 10.255.0.2/30;
      }
    }
  }
}
```

### Related Documentation

- [Channelized IQ Interfaces Solutions Page](#)
- [Roadmap for Configuring Channelized IQ Interfaces on page 17](#)
- [Overview of Channelized IQ Interfaces on page 3](#)
- [Roadmap for Channelized IQ Interface Configuration Examples on page 29](#)

## Configuring Multilevel Channels on a Channelized IQ Interface

---

You can subdivide a channelized interface and then split these subchannelized interfaces into end channels. Creating small end channels might require multiple levels of channelization.

To configure a subdivided channelized interface within a partition of a channelized IQ interface, include the **partition** statement at the **[edit interfaces cxx-fpc/pic/port]** hierarchy level. On a channelized OC12 IQ interface, use the **oc-slice** option to create slice sizes

corresponding to the desired bandwidth. On all channelized IQ interfaces, use the **interface-type** option to set the channelized interface type (such as channelized OC1).

On a channelized OC12 IQ interface, you can convert a subdivided channelized OC1 interface into a T3 or channelized T3 interface. To configure, include the **no-partition** statement at the **[edit interfaces coc1-fpc/pic/port:channel]** hierarchy level and set the **interface-type** to **ct3**. A **ct3-fpc/pic/port:channel** interface is the result. Such a conversion is known as M13 with C-bit parity mapping. T1 and DS0 channels created directly from a **coc-1** interface use VT mapping.

To further split your channelized interfaces into even smaller channelized interfaces, use the **partition** and **interface-type** statements at the **[edit interfaces cxx-fpc/pic/port:channel]** hierarchy level. You can create channelized OC1, channelized T3, and channelized T1 interfaces, depending on the PIC type.

Finally, you configure these “channels of channels” as end channels. To configure end channels on a segmented channelized IQ interface, include the **partition** statement at the **[edit interfaces cxx-fpc/pic/port:channel]** hierarchy level. The number of channels in the hierarchy depends on how finely you partition the channelized IQ interface. Use the **timeslots** option to select *N*xDS0 level channels and the **interface-type** option to set the interface type (such as T1 or *N*xDS0). Once the resulting channels have been established, you can configure them as regular interfaces.

```
[edit]
interfaces {
  coc12-0/0/0 {
    partition 2 oc-slice 4 interface-type coc1; # Creates channelized OC1
    partition 3 oc-slice 5 interface-type coc1; # interfaces: coc1-0/0/0:2,
    partition 4 oc-slice 6 interface-type coc1; # :3, and :4.
  }
  coc1-0/0/0:2 {
    no-partition interface-type t3; # Converts a channelized OC1 to
  }
  t3-0/0/0:2 {
    encapsulation ppp;
    unit 0 {
      family inet {
        address 10.255.0.6/30;
      }
    }
  }
  coc1-0/0/0:3 {
    no-partition interface-type ct3; # Creates a channelized T3 interface:
  }
  ct3-0/0/0:3 {
    partition 1-28 interface-type t1; # Creates 28 T1 interfaces:
  }
  coc1-0/0/0:4 {
    partition 1 interface-type ct1; # Creates a channelized T1 interface:
  }
  ct1-0/0/0:4:1 {
    partition 1 timeslots 1 interface-type ds; # Creates a 1xDS0 interface:
    ...# ds-0/0/0:4:1:1.
    partition 24 timeslots 24 interface-type ds; # Creates a 1xDS0 interface:
  }
}
```

```
t1-0/0/0:3:1 {
  encapsulation ppp;
  unit 0 {
    family inet {
      address 10.255.0.26/30;
    }
  }
}
...
}
ds-0/0/0:4:1:24 {
  encapsulation ppp;
  unit 0 {
    family inet {
      address 10.255.0.214/30;
    }
  }
}
}
```

**Related  
Documentation**

- [Channelized IQ Interfaces Solutions Page](#)
- [Overview of Channelized IQ Interfaces on page 3](#)
- [Roadmap for Configuring Channelized IQ Interfaces on page 17](#)
- [Roadmap for Channelized IQ Interface Configuration Examples on page 29](#)



## CHAPTER 6

# Configuring Class of Service on a Channelized IQ Interface

- [Configuring a Class-of-Service Scheduler Map on page 23](#)
- [Associating the Scheduler with a DLCI on a Channelized IQ Interface on page 24](#)
- [Scheduler Limitations for Channelized IQ Interfaces on page 24](#)
- [Verifying Class-of-Service Schedulers on Channelized IQ Interfaces on page 25](#)

## Configuring a Class-of-Service Scheduler Map

---

To configure a class-of-service scheduler map, include the **scheduler-map** statement at the **[edit class-of-service interfaces *interface-name* unit *logical-unit-number*]** hierarchy level.

To specify the amount of bandwidth allocated to the logical interface, you must also include the **shaping-rate** statement at the **[edit class-of-service interfaces *interface-name* unit *logical-unit-number*]** hierarchy level. You can specify a peak bandwidth rate in bits per second (bps), either as a complete decimal number or as a decimal number followed by the abbreviation **k** (1000), **m** (1,000,000), or **g** (1,000,000,000). The range is 1000 through 32,000,000,000 bps.

```
[edit]
class-of-service {
  interfaces {
    interface-name {
      unit logical-unit-number {
        scheduler-map map-name;
        shaping-rate rate;
      }
    }
  }
}
```

If you do not include the **shaping-rate** statement in the configuration, the logical interface might not be able to transmit traffic unless surplus bandwidth is available on the physical interface. The sum of the bandwidth you allocate to all the logical interfaces on a physical interface should not exceed the bandwidth of the physical interface.

- Related Documentation**
- [Channelized IQ Interfaces Solutions Page](#)
  - [Overview of Channelized IQ Interfaces on page 3](#)
  - [System Requirements for Channelized IQ Interfaces on page 11](#)
  - [Example: DLCI Class of Service on a Channelized IQ Interface Configuration on page 91](#)

---

## Associating the Scheduler with a DLCI on a Channelized IQ Interface

For channelized OC12 IQ, channelized OC3 IQ, channelized DS3 IQ, channelized T1 IQ, channelized STM1 IQ, and channelized E1 IQ interfaces with Frame Relay encapsulation, you can associate a scheduler map name with a logical interface. To activate transmission scheduling on a DLCI, include the **per-unit-scheduler** statement at the **[edit interfaces interface-name]** hierarchy level.

```
[edit]
interfaces {
  interface-name {
    per-unit-scheduler;
  }
}
```

- Related Documentation**
- [Channelized IQ Interfaces Solutions Page](#)
  - [Overview of Channelized IQ Interfaces on page 3](#)
  - [Roadmap for Configuring Channelized IQ Interfaces on page 17](#)
  - [Example: DLCI Class of Service on a Channelized IQ Interface Configuration on page 91](#)

---

## Scheduler Limitations for Channelized IQ Interfaces

You can configure logical interface scheduling on up to 16 channelized interfaces per channelized IQ PIC. For channelized IQ interfaces, the number of schedulers you can apply varies by channel level. [Table 2 on page 24](#) shows the number of schedulers you can apply at each channel level.

**Table 2: Scheduler Limitations for Channelized IQ Interfaces**

Channelized IQ Interfaces	Number of Schedulable DLCIs per Level
Channelized OC12 IQ interfaces	63 for OC3 and OC12 channels, 255 for T3 channels
Channelized OC3 IQ interfaces	63 for OC3 channels, 255 for T3 channels, 63 for T1 channels
Channelized DS3 IQ interfaces	255 for T3 channels
Channelized T1 IQ interfaces	63 for T1 channels
Channelized STM1 IQ interfaces	63 for STM1 channels, 63 for E1 channels

**Table 2: Scheduler Limitations for Channelized IQ Interfaces (*continued*)**

Channelized IQ Interfaces	Number of Schedulable DLCIs per Level
Channelized E1 IQ interfaces	63 for E1 channels

You can associate up to four forwarding classes per physical interface. Keep in mind that you can configure either a physical interface scheduler or a logical interface scheduler, but not both on the same interface simultaneously.

If you use a Gigabit Ethernet IQ interface, you can apply schedulers on up to 768 VLANs per PIC. For more information on class of service for VLANs on a Gigabit Ethernet IQ interface, see the *JUNOS Network Interfaces Configuration Guide*.

**Related Documentation**

- [Channelized IQ Interfaces Solutions Page](#)
- [Overview of Channelized IQ Interfaces on page 3](#)
- [Roadmap for Configuring Channelized IQ Interfaces on page 17](#)
- [Roadmap for Channelized IQ Interface Configuration Examples on page 29](#)

## Verifying Class-of-Service Schedulers on Channelized IQ Interfaces

**Purpose** To verify the correct operation of class-of-service schedulers on channelized IQ interfaces.

**Action** Verify the correct operation of class-of-service schedulers on channelized interfaces:

- **show class of service forwarding-table**
- **show class-of-service interface**

```
user@router> show class-of-service interface t3-3/1/0
Physical interface: t3-3/1/0, Index: 169
Scheduler map: <default>, Index: 1
Logical interface: t3-3/1/0.0, Index: 68
  Object      Name                Type      Index
  Scheduler-map sched-0                      11204
  Rewrite      exp-default          exp        2
  Classifier    ipprec-compatibility ip          5
Logical interface: t3-3/1/0.1, Index: 69
  Object      Name                Type      Index
  Scheduler-map sched-1                      7038
  Rewrite      exp-default          exp        2
  Classifier    ipprec-compatibility ip          5
```

**Related Documentation**

- [Channelized IQ Interfaces Solutions Page](#)
- [Overview of Channelized IQ Interfaces on page 3](#)
- [Roadmap for Configuring Channelized IQ Interfaces on page 17](#)
- [Example: DLCI Class of Service on a Channelized IQ Interface Configuration on page 91](#)



## PART 3

# Examples

- [Example Overview on page 29](#)
- [Examples on page 31](#)



## CHAPTER 7

# Example Overview

- [Roadmap for Channelized IQ Interface Configuration Examples on page 29](#)

### Roadmap for Channelized IQ Interface Configuration Examples

The following examples give typical topologies and configurations for some of the more common channelized IQ interface configurations:

- [Example: OC12 Clear Channel on a Channelized OC12 IQ Interface on page 32](#)
- [Example: Complex Configuration for a Channelized OC12 IQ Interface on page 36](#)
- [Example: Converting a Channelized OC12 IQ PIC to a Channelized STM4 IQ Interface on page 57](#)
- [Example: Channelized OC3 IQ Interface Configuration on page 63](#)
- [Example: Channelized DS3 IQ Interface Configuration on page 70](#)
- [Example: Channelized T1 IQ Interface Configuration on page 76](#)
- [Example: Channelized STM1 IQ Interface Configuration on page 80](#)
- [Example: Channelized E1 IQ Interface Configuration on page 87](#)
- [Example: DLCI Class of Service on a Channelized IQ Interface Configuration on page 91](#)

#### **Related Documentation**

- [Channelized IQ Interfaces Solutions Page](#)
- [Overview of Channelized IQ Interfaces on page 3](#)
- [Roadmap for Configuring Channelized IQ Interfaces on page 17](#)





## CHAPTER 8

# Examples

- [Merging Examples on page 31](#)
- [Example: OC12 Clear Channel on a Channelized OC12 IQ Interface on page 32](#)
- [Example: Complex Configuration for a Channelized OC12 IQ Interface on page 36](#)
- [Example: Converting a Channelized OC12 IQ PIC to a Channelized STM4 IQ Interface on page 57](#)
- [Example: Channelized OC3 IQ Interface Configuration on page 63](#)
- [Example: Channelized DS3 IQ Interface Configuration on page 70](#)
- [Example: Channelized T1 IQ Interface Configuration on page 76](#)
- [Example: Channelized STM1 IQ Interface Configuration on page 80](#)
- [Example: Channelized E1 IQ Interface Configuration on page 87](#)
- [Example: DLCI Class of Service on a Channelized IQ Interface Configuration on page 91](#)

## Merging Examples

---

To merge a full example, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration example into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following configuration to a file and name the file **ex-script.conf**. Copy the **ex-script.conf** file to the **/var/tmp** directory on your routing platform.

```
system {
  scripts {
    commit {
      file ex-script.xsl;
    }
  }
}
interfaces {
  fxp0 {
    disable;
    unit 0 {
      family inet {
        address 10.0.0.1/24;
      }
    }
  }
}
```

```

    }
  }
}

```

2. Merge the contents of the file into your routing platform configuration by issuing the **load merge** configuration mode command:

```

[edit]
user@host#load merge /var/tmp/ex-script.conf
load complete

```

To merge a snippet, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration snippet into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following snippet to a file and name the file **ex-script-snippet.conf**. Copy the **ex-script-snippet.conf** file to the **/var/tmp** directory on your routing platform.

```

commit {
  file ex-script-snippet.xml; }

```

2. Move to the hierarchy level that is relevant for this snippet by issuing the following configuration mode command:

```

[edit]
user@host# edit system scripts
[edit system scripts]

```

3. Merge the contents of the file into your routing platform configuration by issuing the **load merge relative** configuration mode command:

```

[edit system scripts]
user@host# load merge relative /var/tmp/ex-script-snippet.conf
load complete


```

#### Related Documentation

- For more information about the load command, see the [Junos OS CLI User Guide](#).

## Example: OC12 Clear Channel on a Channelized OC12 IQ Interface

Figure 1: OC12 Clear Channel on a Channelized OC12 IQ Interface

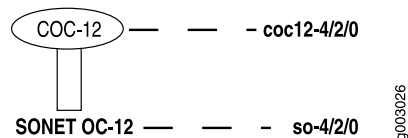

The key to this simple example is to remove all partitions from the channelized interface. To configure a clear channel on a channelized IQ interface, include the **no-partition** statement at the **[edit interfaces coc12-fpc/pic/0]** hierarchy level and select the interface type. After you commit this part of the configuration, the clear channel is set and you can configure the resulting SONET interface normally.

```

Router A [edit]
          interfaces {

```

```

coc12-4/2/0 {
  no-partition interface-type so;
}
so-4/2/0 {
  unit 0 {
    family inet {
      address 10.245.1.1/30;
    }
  }
}
}

```

## Verifying Your Work

To verify correct operation of a channelized OC12 IQ interface configured as a clear channel, use the following commands:

- **show interfaces**
- **show interfaces controller**

To view the interface names of the physical channelized OC12 IQ interface and the clear channel OC12 interface configured on the channelized IQ interface, use the **show interfaces controller** command:

```

user@RouterA> show interfaces controller
Controller
coc12-4/2/0                               Admin Link
                                           up    up

# This is the physical channelized OC12 IQ interface.

so-4/2/0                                   up    up

# This is the resulting SONET OC12 interface.

```

To view information about the physical channelized interface, include the **cxx-fpc/pic/O** option with the **show interfaces** command:

```
user@RouterA> show interfaces extensive coc12-4/2/0
```

```

Physical interface: coc12-4/2/0, Enabled, Physical link is Up
  Interface index: 74, SNMP ifIndex: 1269, Generation: 73
  Link-level type: Controller, MTU: 4474, Clocking: Internal, SONET mode, Speed: OC12, Loopback: None,
  FCS: 16, Payload scrambler: Disabled, Parent: None
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link flags     : None
  Hold-times     : Up 0 ms, Down 0 ms
  Last flapped   : 2002-10-09 10:56:45 PDT (05:14:39 ago)
  Statistics last cleared: Never
  Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0, Bucket drops: 0, Policed discards: 0,
    L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0, HS link CRC errors: 0,
    HS link FIFO overflows: 0
  Output errors:
    Carrier transitions: 0, Errors: 0, Drops: 0, Aged packets: 0, HS link FIFO underflows: 0
  SONET alarms   : None
  SONET defects  : None

```

```

SONET PHY:           Seconds      Count  State
  PLL Lock           0             0  OK
  PHY Light          0             0  OK
SONET section:
  BIP-B1             10            55
  SEF                 0             0  OK
  LOS                 0             0  OK
  LOF                 0             0  OK
  ES-S               10
  SES-S              0
  SEFS-S              0
SONET line:
  BIP-B2             10            144
  REI-L              0             0
  RDI-L              3             1  OK
  AIS-L              0             0  OK
  BERR-SF            0             0  OK
  BERR-SD            1             1  OK
  ES-L               10
  SES-L              0
  UAS-L              0
  ES-LFE              3
  SES-LFE             3
  UAS-LFE             0
Received SONET overhead:
  F1      : 0x00, J0      : 0x00, K1      : 0x00, K2      : 0x00
  S1      : 0x00
Transmitted SONET overhead:
  F1      : 0x00, J0      : 0x01, K1      : 0x00, K2      : 0x00
  S1      : 0x00

```

To view information about the clear channel SONET interface, include the *so-fpc/pic/0* (interface name) option with the **show interfaces** command:

```
user@RouterA> show interfaces extensive so-4/2/0
```

```

Physical interface: so-4/2/0, Enabled, Physical link is Up
  Interface index: 261, SNMP ifIndex: 2000, Generation: 260
  Link-level type: PPP, MTU: 4474, Clocking: Internal, SONET mode,
Speed: OC12, Loopback: None, FCS: 16,
  Payload scrambler: Enabled, Parent: coc12-4/2/0 (Index 74)
Device flags   : Present Running
Interface flags: Point-To-Point SNMP-Traps
Link flags     : Keepalives
Hold-times     : Up 0 ms, Down 0 ms
Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
Keepalive statistics:
  Input  : 37 (last seen 00:00:04 ago)
  Output : 36 (last sent 00:00:09 ago)
LCP state: Opened
NCP state: inet: Opened, inet6: Not-configured, iso: Not-configured, mpls: Not-configured
CHAP state: Not-configured
Last flapped   : 2002-10-09 16:04:18 PDT (00:07:26 ago)
Statistics last cleared: Never
Traffic statistics:
  Input bytes   :          80461791          7435000 bps
  Output bytes  :          81637408          7502352 bps
  Input packets:           34017          275 pps
  Output packets:         34298          278 pps
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0,

```

```

Bucket drops: 0, Policed discards: 0,
  L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0, HS link CRC errors: 0,
  HS link FIFO overflows: 0
Output errors:
  Carrier transitions: 1, Errors: 0, Drops: 0, Aged packets: 0, HS link FIFO underflows: 0
Queue counters:
  Queued packets    Transmitted packets    Dropped packets
0 best-effort      34129                34129                0
1 expedited-fo      0                    0                    0
2 assured-forw      0                    0                    0
3 network-cont      0                    0                    0
SONET alarms       : None
SONET defects      : None
SONET path:
  BIP-B3            0                0
  REI-P             0                0
  LOP-P             0                0 OK
  AIS-P             0                0 OK
  RDI-P             0                0 OK
  UNEQ-P            0                0 OK
  PLM-P             0                0 OK
  ES-P              0
  SES-P             0
  UAS-P             0
  ES-PFE            0
  SES-PFE           0
  UAS-PFE           0
Received SONET overhead:
  C2      : 0xcf, C2(cmp) : 0xcf, F2      : 0x00, Z3      : 0x00
  Z4      : 0x00, S1(cmp) : 0x00
Transmitted SONET overhead:
  C2      : 0xcf, F2      : 0x00, Z3      : 0x00, Z4      : 0x00
Received path trace: RouterB so-2/2/0
  61 72 6d 61 67 6e 61 63 20 73 6f 2d 32 2f 32 2f RouterB so-2/2/0
  30 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
  00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
  00 00 00 00 00 00 00 00 00 00 00 00 00 00 0d 0a .....
Transmitted path trace: RouterA so-4/2/0
  74 69 6d 6d 65 73 73 71 75 61 72 65 20 73 6f 2d RouterA so-4/2/0
  34 2f 32 2f 30 00 00 00 00 00 00 00 00 00 00 00 .....
  00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
  00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
HDLC configuration:
  Policing bucket: Disabled
  Shaping bucket : Disabled
  Giant threshold: 0, Runt threshold: 0
Packet Forwarding Engine configuration:
  Destination slot: 4, PLP byte: 4 (0x00)
  CoS transmit queue    Bandwidth    Buffer Priority    Limit
                        %      bps      %      bytes
0 best-effort           95    590976000 95        0    low    none
3 network-control        5     31104000 5         0    low    none
Logical interface so-4/2/0.0 (Index 7) (SNMP ifIndex 2001) (Generation 12)
  Flags: Point-To-Point SNMP-Traps Encapsulation: PPP
  Protocol inet, MTU: 4470, Generation: 18, Route table: 0
  Flags: None
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 10.245.1.0/30, Local: 10.245.1.1, Broadcast: Unspecified, Generation: 21

```

**Related** • [Channelized IQ Interfaces Solutions Page](#)  
**Documentation**

- [Roadmap for Channelized IQ Interface Configuration Examples on page 29](#)
- [Roadmap for Configuring Channelized IQ Interfaces on page 17](#)

## Example: Complex Configuration for a Channelized OC12 IQ Interface

Figure 2: Complex Configuration for a Channelized OC12 IQ Interface

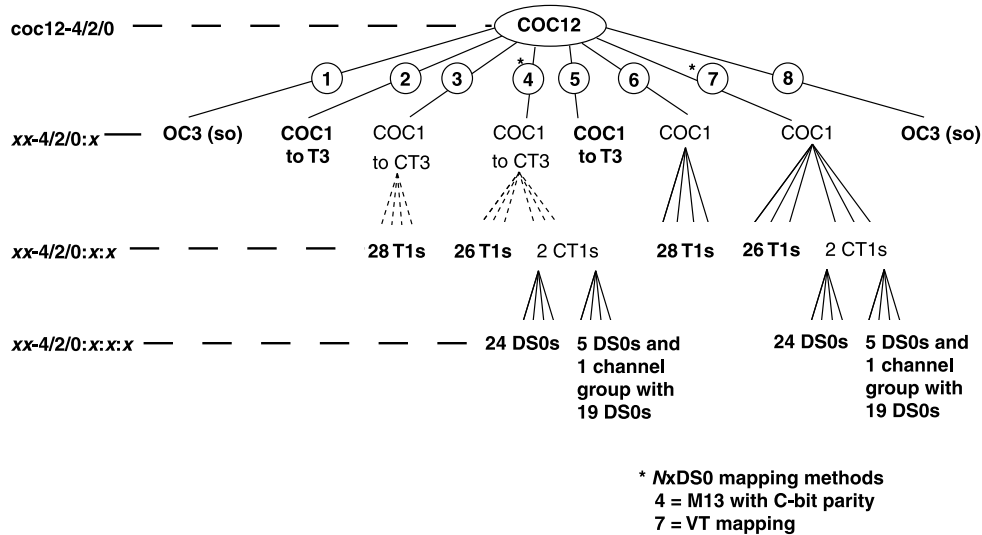


Table 3: Complex Channelization for a Channelized OC12 IQ Interface

Partition	Slices	Interface Type	Interface Level 2	Interface Level 3
1	1–3	OC3	–	–
2	4	Channelized OC1 converted to T3	–	–
3	5	Channelized OC1 converted to channelized T3	28 T1s	–
4	6	Channelized OC1 converted to channelized T3	26 T1s	–
–	–	–	2 CT1s	24 DS0s
–	–	–	–	5 DS0s and 1 channel group of 19 DS0s
5	7	Channelized OC1 converted to T3	–	–
6	8	Channelized OC1	28 T1s	–

**Table 3: Complex Channelization for a Channelized OC12 IQ Interface** (*continued*)

Partition	Slices	Interface Type	Interface Level 2	Interface Level 3
7	9	Channelized OC1	26 T1s	–
–	–	–	2 CT1s	24 DS0s
–	–	–	–	5 DS0s and 1 channel group of 19 DS0s
8	10–12	OC3	–	–

Figure 2 on page 36 and Table 3 on page 36 show a complex channelization structure that you might encounter if you use the full capabilities of a channelized OC12 IQ interface. Partitions 1 and 8 create an OC3 interface, while Partitions 2 and 5 create T3 interfaces out of channelized OC1 interfaces. Partition 3 (channelized OC1 converted to channelized T3) and Partition 6 (channelized OC1) are channelized interfaces that each subdivide into 28 T1 interfaces. Finally, Partition 4 (channelized OC1 converted to channelized T3) and Partition 7 (channelized OC1) are channelized interfaces that each split into 2 channelized T1 interfaces and 26 T1 interfaces. The first channelized T1 splits into 24 DS0 time slots, whereas the second channelized T1 subdivides into 5 DS0 channels and 1 channel group comprised of 19 DS0 channels.

This example shows two  $N \times \text{DS0}$  mapping methods. Partition 4 uses M13 mapping for North American T-carrier equipment and Partition 7 uses VT mapping for SONET/SDH equipment.

This example also assumes corresponding interfaces. For example, for every sublevel T1 interface you configure on Router A, assume you have configured a matching sublevel or physical T1 interface on a neighboring router.

```
Router A [edit]
interfaces {
  coc12-4/2/0 {
    partition 1 oc-slice 1-3 interface-type so; # Creates OC3 interface so-4/2/0:1.
    partition 2 oc-slice 4 interface-type coc1; # Creates interface coc1-4/2/0:2.
    partition 3 oc-slice 5 interface-type coc1; # Creates interface coc1-4/2/0:3.
    partition 4 oc-slice 6 interface-type coc1; # Creates interface coc1-4/2/0:4.
    partition 5 oc-slice 7 interface-type coc1; # Creates interface coc1-4/2/0:5.
    partition 6 oc-slice 8 interface-type coc1; # Creates interface coc1-4/2/0:6.
    partition 7 oc-slice 9 interface-type coc1; # Creates interface coc1-4/2/0:7.
    partition 8 oc-slice 10-12 interface-type so; # Creates an OC3 SONET interface:
    }                                     # so-4/2/0:8.
  so-4/2/0:1 {
    encapsulation ppp;
    unit 0 {
      family inet {
        address 10.255.0.2/30;
      }
    }
  }
}
```

```
coc1-4/2/0:2 {
    no-partition interface-type t3; # This converts the coc1 interface into a
}                                     # T3 interface: t3-4/2/0:2.
t3-4/2/0:2 {
    encapsulation ppp;
    unit 0 {
        family inet {
            address 10.255.0.6/30;
        }
    }
}
coc1-4/2/0:3 {
    no-partition interface-type ct3; # This converts the coc1 interface into a
}                                     # channelized T3 interface: ct3-4/2/0:3.
ct3-4/2/0:3 {
    partition 1-28 interface-type t1; # This converts the channelized T3 interface
}                                     # into 28 T1 channels: t1-4/2/0:3:1 through t1-4/2/0:3:28.
coc1-4/2/0:4 {
    no-partition interface-type ct3; # This converts the coc1 interface into a
}                                     # channelized T3 interface: ct3-4/2/0:4.
ct3-4/2/0:4 {
    partition 1-2 interface-type ct1; # This creates ct1-4/2/0:4:1 and ct1-4/2/0:4:2.
    partition 3-28 interface-type t1; # This creates t1-4/2/0:4:3 through
}                                     # t1-4/2/0:4:28.
coc1-4/2/0:5 {
    no-partition interface-type t3; # This converts the coc1 interface to a T3:
}                                     # t3-4/2/0:5.
t3-4/2/0:5 {
    encapsulation ppp;
    unit 0 {
        family inet {
            address 10.255.1.90/30;
        }
    }
}
coc1-4/2/0:6 {
    partition 1-28 interface-type t1; # This converts the channelized OC1 interface
}                                     # into 28 T1s: t1-4/2/0:6:1 through t1-4/2/0:6:28.
coc1-4/2/0:7 {
    partition 1-2 interface-type ct1; # This creates ct1-4/2/0:7:1 and :2.
    partition 3-28 interface-type t1; # This creates t1-4/2/0:7:3 through :28.
}
so-4/2/0:8 {
    encapsulation ppp;
    unit 0 {
        family inet {
            address 10.255.2.174/30;
        }
    }
}
t1-4/2/0:3:1 {
    encapsulation ppp;
    unit 0 {
        family inet {
            address 10.255.0.10/30;
        }
    }
}
```



```

    }
  }
  ...
  t1-4/2/0:3:28 {
    encapsulation ppp;
    unit 0 {
      family inet {
        address 10.255.0.118/30;
      }
    }
  }
  }
  ct1-4/2/0:4:1 {
    partition 1 timeslots 1 interface-type ds; # This creates 24 DSO channels:
    partition 2 timeslots 2 interface-type ds; # ds-4/2/0:4:1:1 through
    partition 3 timeslots 3 interface-type ds; # ds-4/2/0:4:1:24.
    partition 4 timeslots 4 interface-type ds;
    partition 5 timeslots 5 interface-type ds;
    partition 6 timeslots 6 interface-type ds;
    partition 7 timeslots 7 interface-type ds;
    partition 8 timeslots 8 interface-type ds;
    partition 9 timeslots 9 interface-type ds;
    partition 10 timeslots 10 interface-type ds;
    partition 11 timeslots 11 interface-type ds;
    partition 12 timeslots 12 interface-type ds;
    partition 13 timeslots 13 interface-type ds;
    partition 14 timeslots 14 interface-type ds;
    partition 15 timeslots 15 interface-type ds;
    partition 16 timeslots 16 interface-type ds;
    partition 17 timeslots 17 interface-type ds;
    partition 18 timeslots 18 interface-type ds;
    partition 19 timeslots 19 interface-type ds;
    partition 20 timeslots 20 interface-type ds;
    partition 21 timeslots 21 interface-type ds;
    partition 22 timeslots 22 interface-type ds;
    partition 23 timeslots 23 interface-type ds;
    partition 24 timeslots 24 interface-type ds;
  }
  ds-4/2/0:4:1:1 {
    encapsulation ppp;
    unit 0 {
      family inet {
        address 10.255.0.122/30;
      }
    }
  }
  }
  ...
  ds-4/2/0:4:1:24 {
    encapsulation ppp;
    unit 0 {
      family inet {
        address 10.255.0.214/30;
      }
    }
  }
  }
  ct1-4/2/0:4:2 {
    partition 1 timeslots 1-19 interface-type ds; # This creates a channel group.

```

```
partition 2 timeslots 20 interface-type ds; # ds-4/2/0:4:2:2 through
partition 3 timeslots 21 interface-type ds; # ds-4/2/0:4:2:6 are single 64-Kbps
partition 4 timeslots 22 interface-type ds; # NxDS0 channels.
partition 5 timeslots 23 interface-type ds;
partition 6 timeslots 24 interface-type ds;
}
ds-4/2/0:4:2:1 { # This is a channel group with 19 DS0s bundled as one.
  encapsulation ppp;
  unit 0 {
    family inet {
      address 10.255.0.218/30;
    }
  }
}
ds-4/2/0:4:2:2 {
  encapsulation ppp;
  unit 0 {
    family inet {
      address 10.120.0.222/30;
    }
  }
}
...
ds-4/2/0:4:2:6 {
  encapsulation ppp;
  unit 0 {
    family inet {
      address 10.120.0.238/30;
    }
  }
}
t1-4/2/0:4:3 {
  encapsulation ppp;
  unit 0 {
    family inet {
      address 10.120.0.242/30;
    }
  }
}
...
t1-4/2/0:4:28 {
  encapsulation ppp;
  unit 0 {
    family inet {
      address 10.255.1.86/30;
    }
  }
}
t1-4/2/0:6:1 {
  encapsulation ppp;
  unit 0 {
    family inet {
      address 10.255.1.94/30;
    }
  }
}
```

```

...
tl-4/2/0:6:28 {
    encapsulation ppp;
    unit 0 {
        family inet {
            address 10.255.1.202/30;
        }
    }
}
ct1-4/2/0:7:1 {
    partition 1 timeslots 1 interface-type ds; # This creates 24 DSO channels:
    partition 2 timeslots 2 interface-type ds; # ds-4/2/0:7:1:1 through
    partition 3 timeslots 3 interface-type ds; # ds-4/2/0:7:1:24.
    partition 4 timeslots 4 interface-type ds;
    partition 5 timeslots 5 interface-type ds;
    partition 6 timeslots 6 interface-type ds;
    partition 7 timeslots 7 interface-type ds;
    partition 8 timeslots 8 interface-type ds;
    partition 9 timeslots 9 interface-type ds;
    partition 10 timeslots 10 interface-type ds;
    partition 11 timeslots 11 interface-type ds;
    partition 12 timeslots 12 interface-type ds;
    partition 13 timeslots 13 interface-type ds;
    partition 14 timeslots 14 interface-type ds;
    partition 15 timeslots 15 interface-type ds;
    partition 16 timeslots 16 interface-type ds;
    partition 17 timeslots 17 interface-type ds;
    partition 18 timeslots 18 interface-type ds;
    partition 19 timeslots 19 interface-type ds;
    partition 20 timeslots 20 interface-type ds;
    partition 21 timeslots 21 interface-type ds;
    partition 22 timeslots 22 interface-type ds;
    partition 23 timeslots 23 interface-type ds;
    partition 24 timeslots 24 interface-type ds;
}
ds-4/2/0:7:1:1 {
    encapsulation ppp;
    unit 0 {
        family inet {
            address 10.255.1.206/30;
        }
    }
}
...
ds-4/2/0:7:1:24 {
    encapsulation ppp;
    unit 0 {
        family inet {
            address 10.255.2.42/30;
        }
    }
}
ct1-4/2/0:7:2 {
    partition 1 timeslots 1-19 interface-type ds; # This is a channel group.
    partition 2 timeslots 20 interface-type ds; # ds-4/2/0:7:2:2 through
    partition 3 timeslots 21 interface-type ds; # ds-4/2/0:7:2:6 are single 64-Kbps

```

```
partition 4 timeslots 22 interface-type ds; # NxDS0 channels.
partition 5 timeslots 23 interface-type ds;
partition 6 timeslots 24 interface-type ds;
}
ds-4/2/0:7:2:1 { # This is a channel group with 19 DS0s bundled as one.
    encapsulation ppp;
    unit 0 {
        family inet {
            address 10.255.2.46/30;
        }
    }
}
ds-4/2/0:7:2:2 {
    encapsulation ppp;
    unit 0 {
        family inet {
            address 10.255.2.50/30;
        }
    }
}
...
ds-4/2/0:7:2:6 {
    encapsulation ppp;
    unit 0 {
        family inet {
            address 10.255.2.66/30;
        }
    }
}
t1-4/2/0:7:3 {
    encapsulation ppp;
    unit 0 {
        family inet {
            address 10.255.2.70/30;
        }
    }
}
...
t1-4/2/0:7:28 {
    encapsulation ppp;
    unit 0 {
        family inet {
            address 10.255.2.170/30;
        }
    }
}
}
```

## Verifying Your Work

To verify correct operation of a channelized OC12 IQ interface configured for complex channelization, use the following commands:

- **show interfaces controller**

- To view the names of the resulting interfaces and channelized interfaces configured on a channelized OC12 IQ interface, use the **show interfaces controller** command:

Controller	Admin	Link
coc12-4/2/0	up	up
so-4/2/0:1	up	up
t3-4/2/0:2	up	up
ct3-4/2/0:3	up	up
t1-4/2/0:3:1	up	up
t1-4/2/0:3:2	up	up
t1-4/2/0:3:3	up	up
t1-4/2/0:3:4	up	up
t1-4/2/0:3:5	up	up
t1-4/2/0:3:6	up	up
t1-4/2/0:3:7	up	up
t1-4/2/0:3:8	up	up
t1-4/2/0:3:9	up	up
t1-4/2/0:3:10	up	up
t1-4/2/0:3:11	up	up
t1-4/2/0:3:12	up	up
t1-4/2/0:3:13	up	up
t1-4/2/0:3:14	up	up
t1-4/2/0:3:15	up	up
t1-4/2/0:3:16	up	up
t1-4/2/0:3:17	up	up
t1-4/2/0:3:18	up	up
t1-4/2/0:3:19	up	up
t1-4/2/0:3:20	up	up
t1-4/2/0:3:21	up	up
t1-4/2/0:3:22	up	up
t1-4/2/0:3:23	up	up
t1-4/2/0:3:24	up	up
t1-4/2/0:3:25	up	up
t1-4/2/0:3:26	up	up
t1-4/2/0:3:27	up	up
t1-4/2/0:3:28	up	up
ct3-4/2/0:4	up	up
ct1-4/2/0:4:1	up	up
ds-4/2/0:4:1:1	up	up
ds-4/2/0:4:1:2	up	up
ds-4/2/0:4:1:3	up	up
ds-4/2/0:4:1:4	up	up
ds-4/2/0:4:1:5	up	up
ds-4/2/0:4:1:6	up	up
ds-4/2/0:4:1:7	up	up
ds-4/2/0:4:1:8	up	up
ds-4/2/0:4:1:9	up	up
ds-4/2/0:4:1:10	up	up
ds-4/2/0:4:1:11	up	up
ds-4/2/0:4:1:12	up	up
ds-4/2/0:4:1:13	up	up
ds-4/2/0:4:1:14	up	up
ds-4/2/0:4:1:15	up	up
ds-4/2/0:4:1:16	up	up
ds-4/2/0:4:1:17	up	up

ds-4/2/0:4:1:18	up	up
ds-4/2/0:4:1:19	up	up
ds-4/2/0:4:1:20	up	up
ds-4/2/0:4:1:21	up	up
ds-4/2/0:4:1:22	up	up
ds-4/2/0:4:1:23	up	up
ds-4/2/0:4:1:24	up	up
ct1-4/2/0:4:2	up	up
ds-4/2/0:4:2:1	up	up
ds-4/2/0:4:2:2	up	up
ds-4/2/0:4:2:3	up	up
ds-4/2/0:4:2:4	up	up
ds-4/2/0:4:2:5	up	up
ds-4/2/0:4:2:6	up	up
t1-4/2/0:4:3	up	up
t1-4/2/0:4:4	up	up
t1-4/2/0:4:5	up	up
t1-4/2/0:4:6	up	up
t1-4/2/0:4:7	up	up
t1-4/2/0:4:8	up	up
t1-4/2/0:4:9	up	up
t1-4/2/0:4:10	up	up
t1-4/2/0:4:11	up	up
t1-4/2/0:4:12	up	up
t1-4/2/0:4:13	up	up
t1-4/2/0:4:14	up	up
t1-4/2/0:4:15	up	up
t1-4/2/0:4:16	up	up
t1-4/2/0:4:17	up	up
t1-4/2/0:4:18	up	up
t1-4/2/0:4:19	up	up
t1-4/2/0:4:20	up	up
t1-4/2/0:4:21	up	up
t1-4/2/0:4:22	up	up
t1-4/2/0:4:23	up	up
t1-4/2/0:4:24	up	up
t1-4/2/0:4:25	up	up
t1-4/2/0:4:26	up	up
t1-4/2/0:4:27	up	up
t1-4/2/0:4:28	up	up
t3-4/2/0:5	up	up
coc1-4/2/0:6	up	up
t1-4/2/0:6:1	up	up
t1-4/2/0:6:2	up	up
t1-4/2/0:6:3	up	up
t1-4/2/0:6:4	up	up
t1-4/2/0:6:5	up	up
t1-4/2/0:6:6	up	up
t1-4/2/0:6:7	up	up
t1-4/2/0:6:8	up	up
t1-4/2/0:6:9	up	up
t1-4/2/0:6:10	up	up
t1-4/2/0:6:11	up	up
t1-4/2/0:6:12	up	up
t1-4/2/0:6:13	up	up
t1-4/2/0:6:14	up	up
t1-4/2/0:6:15	up	up
t1-4/2/0:6:16	up	up
t1-4/2/0:6:17	up	up
t1-4/2/0:6:18	up	up
t1-4/2/0:6:19	up	up

t1-4/2/0:6:20	up	up
t1-4/2/0:6:21	up	up
t1-4/2/0:6:22	up	up
t1-4/2/0:6:23	up	up
t1-4/2/0:6:24	up	up
t1-4/2/0:6:25	up	up
t1-4/2/0:6:26	up	up
t1-4/2/0:6:27	up	up
t1-4/2/0:6:28	up	up
coc1-4/2/0:7	up	up
ct1-4/2/0:7:1	up	up
ds-4/2/0:7:1:1	up	up
ds-4/2/0:7:1:2	up	up
ds-4/2/0:7:1:3	up	up
ds-4/2/0:7:1:4	up	up
ds-4/2/0:7:1:5	up	up
ds-4/2/0:7:1:6	up	up
ds-4/2/0:7:1:7	up	up
ds-4/2/0:7:1:8	up	up
ds-4/2/0:7:1:9	up	up
ds-4/2/0:7:1:10	up	up
ds-4/2/0:7:1:11	up	up
ds-4/2/0:7:1:12	up	up
ds-4/2/0:7:1:13	up	up
ds-4/2/0:7:1:14	up	up
ds-4/2/0:7:1:15	up	up
ds-4/2/0:7:1:16	up	up
ds-4/2/0:7:1:17	up	up
ds-4/2/0:7:1:18	up	up
ds-4/2/0:7:1:19	up	up
ds-4/2/0:7:1:20	up	up
ds-4/2/0:7:1:21	up	up
ds-4/2/0:7:1:22	up	up
ds-4/2/0:7:1:23	up	up
ds-4/2/0:7:1:24	up	up
ct1-4/2/0:7:2	up	up
ds-4/2/0:7:2:1	up	up
ds-4/2/0:7:2:2	up	up
ds-4/2/0:7:2:3	up	up
ds-4/2/0:7:2:4	up	up
ds-4/2/0:7:2:5	up	up
ds-4/2/0:7:2:6	up	up
t1-4/2/0:7:3	up	up
t1-4/2/0:7:4	up	up
t1-4/2/0:7:5	up	up
t1-4/2/0:7:6	up	up
t1-4/2/0:7:7	up	up
t1-4/2/0:7:8	up	up
t1-4/2/0:7:9	up	up
t1-4/2/0:7:10	up	up
t1-4/2/0:7:11	up	up
t1-4/2/0:7:12	up	up
t1-4/2/0:7:13	up	up
t1-4/2/0:7:14	up	up
t1-4/2/0:7:15	up	up
t1-4/2/0:7:16	up	up
t1-4/2/0:7:17	up	up
t1-4/2/0:7:18	up	up
t1-4/2/0:7:19	up	up
t1-4/2/0:7:20	up	up
t1-4/2/0:7:21	up	up

t1-4/2/0:7:22	up	up
t1-4/2/0:7:23	up	up
t1-4/2/0:7:24	up	up
t1-4/2/0:7:25	up	up
t1-4/2/0:7:26	up	up
t1-4/2/0:7:27	up	up
t1-4/2/0:7:28	up	up
so-4/2/0:8	up	up

To verify that your channelized IQ interfaces are working as expected, use the **show interfaces** command. Use the **show interfaces controller** command to find the name of the channelized interface you want to view; then include this channelized name (for example, **ct3-4/2/0:4**) as an option with the **show interfaces** command.

The next sections provide sample **show interfaces** output for each of the major interface types configured in this example:

- [Channelized OC12 on page 46](#)
- [SONET OC3 on page 47](#)
- [T3 on page 48](#)
- [Channelized T3 on page 50](#)
- [Channelized OC1 on page 52](#)
- [Channelized T1 on page 53](#)
- [T1 on page 55](#)
- [DS0 on page 56](#)

### Channelized OC12

```
user@RouterA> show interfaces extensive coc12-4/2/0
```

```
Physical interface: coc12-4/2/0, Enabled, Physical link is Up
Interface index: 266, SNMP ifIndex: 1269, Generation: 601
Link-level type: Controller, MTU: 4474, Clocking: Internal, SONET mode, Speed: OC12, Loopback: None,
FCS: 16, Payload scrambler: Disabled, Parent: None
Device flags   : Present Running
Interface flags: Point-To-Point SNMP-Traps
Link flags     : None
Hold-times     : Up 0 ms, Down 0 ms
Last flapped   : 2002-10-09 17:45:15 PDT (00:14:38 ago)
Statistics last cleared: Never
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0, Bucket drops: 0, Policed discards: 0,
  L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0, HS link CRC errors: 0,
  HS link FIFO overflows: 0
Output errors:
  Carrier transitions: 0, Errors: 0, Drops: 0, Aged packets: 0, HS link FIFO underflows: 0
SONET alarms   : None
SONET defects  : None
SONET PHY:
  Seconds      Count  State
  PLL Lock     0      0 OK
  PHY Light    0      0 OK
SONET section:
  BIP-B1       14     83
  SEF          0      0 OK
  LOS          0      0 OK
  LOF          0      0 OK
```



```

ES-S          14
SES-S         0
SEFS-S        0
SONET line:
BIP-B2        14      162
REI-L         0      0
RDI-L         3      1 OK
AIS-L         0      0 OK
BERR-SF       0      0 OK
BERR-SD       0      0 OK
ES-L          14
SES-L         0
UAS-L         0
ES-LFE        3
SES-LFE       3
UAS-LFE       0
Received SONET overhead:
F1      : 0x00, J0      : 0x00, K1      : 0x00, K2      : 0x00
S1      : 0x00
Transmitted SONET overhead:
F1      : 0x00, J0      : 0x01, K1      : 0x00, K2      : 0x00
S1      : 0x00

```

### SONET OC3

user@RouterA> show interfaces extensive so-4/2/0:8

```

Physical interface: so-4/2/0:8, Enabled, Physical link is Up
Interface index: 440, SNMP ifIndex: 2640, Generation: 787
Link-level type: PPP, MTU: 4474, Clocking: Internal, SONET mode, Speed: OC3, Loopback: None, FCS: 16,
Payload scrambler: Enabled, Parent: coc12-4/2/0 (Index 266)
Device flags   : Present Running
Interface flags: Point-To-Point SNMP-Traps
Link flags     : Keepalives
Hold-times     : Up 0 ms, Down 0 ms
Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
Keepalive statistics:
  Input : 0 (last seen: never)
  Output: 0 (last sent: never)
LCP state: Conf-ack-sent
NCP state: inet: Down, inet6: Not-configured, iso: Not-configured, mpls: Not-configured
CHAP state: Not-configured
Last flapped   : 2002-10-09 17:45:18 PDT (00:11:45 ago)
Statistics last cleared: Never
Traffic statistics:
Input bytes   :          5967          56 bps
Output bytes  :         12672         128 bps
Input packets :          351           0 pps
Output packets:          704           0 pps
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0, Bucket drops: 0, Policed discards: 0,
L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0, HS link CRC errors: 0,
HS link FIFO overflows: 0
Output errors:
Carrier transitions: 1, Errors: 0, Drops: 0, Aged packets: 0, HS link FIFO underflows: 0
Queue counters:
  Queued packets  Transmitted packets  Dropped packets
0 best-effort    704                0                0
1 expedited-fo   0                  0                0
2 assured-forw   0                  0                0
3 network-cont   0                  0                0
SONET alarms    : None

```

```

SONET defects : None
SONET path:
  BIP-B3          0          0
  REI-P           0          0
  LOP-P           0          0 OK
  AIS-P           0          0 OK
  RDI-P           0          0 OK
  UNEQ-P          0          0 OK
  PLM-P           0          0 OK
  ES-P            0
  SES-P           0
  UAS-P           0
  ES-PFE          0
  SES-PFE         0
  UAS-PFE         0
Received SONET overhead:
  C2      : 0xcf, C2(cmp) : 0xcf, F2      : 0x00, Z3      : 0x00
  Z4      : 0x00, S1(cmp) : 0x00
Transmitted SONET overhead:
  C2      : 0xcf, F2      : 0x00, Z3      : 0x00, Z4      : 0x00
Received path trace: RouterB so-2/2/0:8
  61 72 6d 61 67 6e 61 63 20 73 6f 2d 32 2f 32 2f RouterB so-2/2/
  30 3a 38 00 00 00 00 00 00 00 00 00 00 00 00 00 0:8.....
  00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
  00 00 00 00 00 00 00 00 00 00 00 00 00 00 0d 0a .....
Transmitted path trace: RouterA so-4/2/0:8
  74 69 6d 6d 65 73 73 71 75 61 72 65 20 73 6f 2d RouterA so-
  34 2f 32 2f 30 3a 38 00 00 00 00 00 00 00 00 00 4/2/0:8.....
  00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
  00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
HDLC configuration:
  Policing bucket: Disabled
  Shaping bucket : Disabled
  Giant threshold: 0, Runt threshold: 0
Packet Forwarding Engine configuration:
  Destination slot: 4, PLP byte: 4 (0x2a)
  CoS transmit queue      Bandwidth      Buffer Priority  Limit
                           %      bps      %      bytes
  0 best-effort            95      147744000 95      0      low      none
  3 network-control        5       7776000  5       0      low      none
Logical interface so-4/2/0:8.0 (Index 180) (SNMP ifIndex 2641) (Generation 512)
Flags: Hardware-Down Point-To-Point SNMP-Traps Encapsulation: PPP
Protocol inet, MTU: 4470, Generation: 519, Route table: 0
Flags: Protocol-Down
Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
  Destination: 10.255.2.172/30, Local: 10.255.2.174, Broadcast: Unspecified, Generation: 1029

```

### T3

```
user@RouterA> show interfaces extensive t3-4/2/0:2
```

```

Physical interface: t3-4/2/0:2, Enabled, Physical link is Up
  Interface index: 274, SNMP ifIndex: 1982, Generation: 609
  Link-level type: PPP, MTU: 4474, Clocking: Internal, Speed: T3, Loopback:None,
FCS: 16,
  Mode: C/Bit parity, Parent: coc12-4/2/0 (Index 266)
  Device flags : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link flags : Keepalives
  Hold-times : Up 0 ms, Down 0 ms
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3

```

```

Keepalive statistics:
  Input : 85 (last seen 00:00:00 ago)
  Output: 82 (last sent 00:00:01 ago)
LCP state: Opened
NCP state: inet: Opened, inet6: Not-configured, iso: Not-configured, mpls: Not-configured
CHAP state: Not-configured
Last flapped   : 2002-10-09 17:45:15 PDT (00:13:24 ago)
Statistics last cleared: Never
Traffic statistics:
  Input  bytes :           2546           56 bps
  Output bytes :           2732           56 bps
  Input  packets:            170            0 pps
  Output packets:            171            0 pps
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Bucket drops: 0, Policed discards: 0, L3 incompletes: 0,
  L2 channel errors: 0, L2 mismatch timeouts: 0, HS link CRC errors: 0, SRAM errors: 0
Output errors:
  Carrier transitions: 1, Errors: 0, Drops: 0, Aged packets: 0
Queue counters:
  Queued packets  Transmitted packets  Dropped packets
0 best-effort      171              171              0
1 expedited-fo      0                0                0
2 assured-forw      0                0                0
3 network-cont      0                0                0
Active alarms : None
Active defects : None
DS3 media:
  Seconds      Count  State
PLL Lock       0        0 OK
Reframing      0        0 OK
AIS            0        0 OK
LOF            0        0 OK
LOS            0        0 OK
IDLE           0        0 OK
YELLOW         0        0 OK
BPV            0        0
EXZ            0        0
LCV            0        0
PCV            1      6827
CCV            0        0
LES            0
PES            1
PSES           1
CES            0
CSES           0
SEFS           0
UAS            0
HDLC configuration:
  Policing bucket: Disabled
  Shaping bucket : Disabled
  Giant threshold: 4484, Runt threshold: 0
DSU configuration:
  Compatibility mode: None, Scrambling: Disabled, Subrate: Disabled
  FEAC loopback: Inactive, Response: Disabled, Count: 0
DS-3 BERT configuration:
  BERT time period: 10 seconds, Elapsed: 0 seconds
  Algorithm: 2^3 - 1, Pseudorandom (1), Induced error rate: 10e-0
SONET alarms : None
SONET defects : None
SONET path:
  BIP-B3        0        0
  REI-P         0        0
  LOP-P         0        0 OK

```

```

AIS-P           0          0 OK
RDI-P           0          0 OK
UNEQ-P          0          0 OK
PLM-P           0          0 OK
ES-P            0
SES-P           0
UAS-P           0
ES-PFE          0
SES-PFE         0
UAS-PFE         0
Received SONET overhead:
  C2      : 0x04, C2(cmp) : 0x04, F2      : 0x00, Z3      : 0x00
  Z4      : 0x00, S1(cmp) : 0x00
Transmitted SONET overhead:
  C2      : 0x04, F2      : 0x00, Z3      : 0x00, Z4      : 0x00
Received path trace:
  5d 14 d6 ef 81 93 78 71 98 ec 55 27 35 84 3a 2c   ].Vo..xq.1U'5.:
Transmitted path trace: t3-4/2/0:2
  74 33 2d 34 2f 32 2f 30 3a 32 00 00 00 00 00 00   t3-4/2/0:2.....
Packet Forwarding Engine configuration:
  Destination slot: 4, PLP byte: 4 (0x00)
  CoS transmit queue      Bandwidth      Buffer Priority  Limit
                           %      bps      %      bytes
  0 best-effort            95      42499200  95      0      low  none
  3 network-control        5      2236800   5      0      low  none
Logical interface t3-4/2/0:2.0 (Index 10) (SNMP ifIndex 1983) (Generation 340)
  Flags: Point-To-Point SNMP-Traps Encapsulation: PPP
  Bandwidth: 0
  Protocol inet, MTU: 4470, Generation: 347, Route table: 0
  Flags: None
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 10.255.0.4/30, Local: 10.255.0.6, Broadcast: Unspecified, Generation: 685

```

### Channelized T3

```
user@RouterA> show interfaces extensive ct3-4/2/0:4
```

```

Physical interface: ct3-4/2/0:4, Enabled, Physical link is Up
  Interface index: 304, SNMP ifIndex: 2409, Generation: 639
  Link-level type: Controller, MTU: 4474, Clocking: Internal, Speed: T3, Loopback: None, FCS: 16,
  Mode: C/Bit parity, Parent: coc12-4/2/0 (Index 266)
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link flags     : None
  Hold-times     : Up 0 ms, Down 0 ms
  Last flapped   : 2002-10-09 17:45:16 PDT (00:12:56 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes   :          0          0 bps
    Output bytes  :          0          0 bps
    Input packets :          0          0 pps
    Output packets:          0          0 pps
  Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Bucket drops: 0, Policed discards: 0, L3 incompletes: 0,
    L2 channel errors: 0, L2 mismatch timeouts: 0, HS link CRC errors: 0, SRAM errors: 0
  Output errors:
    Carrier transitions: 0, Errors: 0, Drops: 0, Aged packets: 0
  Active alarms  : None
  Active defects : None
  DS3 media:
    Seconds      Count  State
    PLL Lock     0      0 OK

```

Reframing	0	0	OK
AIS	0	0	OK
LOF	0	0	OK
LOS	0	0	OK
IDLE	0	0	OK
YELLOW	0	0	OK
BPV	0	0	
EXZ	0	0	
LCV	0	0	
PCV	1	1	
CCV	1	1	
LES	0		
PES	1		
PSES	0		
CES	1		
CSSES	0		
SEFS	0		
UAS	0		

HDLC configuration:

- Policing bucket: Disabled
- Shaping bucket : Disabled
- Giant threshold: 0, Runt threshold: 0

DSU configuration:

- Compatibility mode: None, Scrambling: Disabled, Subrate: Disabled
- FEAC loopback: Inactive, Response: Disabled, Count: 0

DS-3 BERT configuration:

- BERT time period: 10 seconds, Elapsed: 0 seconds
- Algorithm:  $2^3 - 1$ , Pseudorandom (1), Induced error rate: 10e-0

SONET alarms : None

SONET defects : None

SONET PHY:	Seconds	Count	State
PLL Lock	0	0	OK
PHY Light	0	0	OK

SONET section:

BIP-B1	14	83	
SEF	0	0	OK
LOS	0	0	OK
LOF	0	0	OK
ES-S	14		
SES-S	0		
SEFS-S	0		

SONET line:

BIP-B2	14	162	
REI-L	0	0	
RDI-L	3	1	OK
AIS-L	0	0	OK
BERR-SF	0	0	OK
BERR-SD	0	0	OK
ES-L	14		
SES-L	0		
UAS-L	0		
ES-LFE	3		
SES-LFE	3		
UAS-LFE	0		

SONET path:

BIP-B3	0	0	
REI-P	0	0	
LOP-P	0	0	OK
AIS-P	0	0	OK
RDI-P	0	0	OK
UNEQ-P	0	0	OK

```

PLM-P          0          0 OK
ES-P           0
SES-P           0
UAS-P           0
ES-PFE         0
SES-PFE         0
UAS-PFE        0
Received SONET overhead:
F1      : 0x00, J0      : 0x00, K1      : 0x00, K2      : 0x00
S1      : 0x00, C2      : 0x04, C2(cmp) : 0x04, F2      : 0x00
Z3      : 0x00, Z4      : 0x00, S1(cmp) : 0x00
Transmitted SONET overhead:
F1      : 0x00, J0      : 0x00, K1      : 0x00, K2      : 0x00
S1      : 0x00, C2      : 0x04, F2      : 0x00, Z3      : 0x00
Z4      : 0x00
Received path trace:
39 b8 27 50 44 b6 5f c3 f3 de 27 9a a0 31 40 5c 98'PD6-Cs^'. 1@\
Transmitted path trace: RouterA ct3-4/2/0:4
74 69 6d 6d 65 73 73 71 75 61 72 65 20 63 74 33 RouterA ct3
Packet Forwarding Engine configuration:
Destination slot: 0 (0x00)
CoS transmit queue      Bandwidth      Buffer Priority Limit
                        %      bps      %      bytes
0 best-effort            95      42499200 95      0      low  none
3 network-control        5      2236800  5      0      low  none

```

### Channelized OC1

user@RouterA> show interfaces extensive coc1-4/2/0:7

```

Physical interface: coc1-4/2/0:7, Enabled, Physical link is Up
Interface index: 381, SNMP ifIndex: 2524, Generation: 728
Link-level type: Controller, MTU: 4474, Clocking: Internal, SONET mode, Speed: 51840kbps, Loopback:
None,
FCS: 16, Payload scrambler: Disabled, Parent: coc12-4/2/0 (Index 266)
Device flags   : Present Running
Interface flags: Point-To-Point SNMP-Traps
Link flags     : None
Hold-times    : Up 0 ms, Down 0 ms
Last flapped  : 2002-10-09 17:45:31 PDT (00:12:11 ago)
Statistics last cleared: Never
Traffic statistics:
Input bytes   :          0          0 bps
Output bytes  :          0          0 bps
Input packets:          0          0 pps
Output packets:        0          0 pps
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0, Bucket drops: 0, Policed discards: 0,
L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0, HS link CRC errors: 0,
HS link FIFO overflows: 0
Output errors:
Carrier transitions: 0, Errors: 0, Drops: 0, Aged packets: 0, HS link FIFO underflows: 0
SONET alarms      : None
SONET defects     : None
SONET section:
BIP-B1            14          83
SEF               0          0 OK
LOS               0          0 OK
LOF               0          0 OK
ES-S              14
SES-S             0

```

```

SEFS-S                                0
SONET line:
BIP-B2                                14          162
REI-L                                 0            0
RDI-L                                 3            1 OK
AIS-L                                 0            0 OK
BERR-SF                               0            0 OK
BERR-SD                               0            0 OK
ES-L                                  14
SES-L                                 0
UAS-L                                 0
ES-LFE                                3
SES-LFE                               3
UAS-LFE                               0
SONET path:
BIP-B3                                0            0
REI-P                                 0            0
LOP-P                                 0            0 OK
AIS-P                                 0            0 OK
RDI-P                                 0            0 OK
UNEQ-P                                3            1 OK
PLM-P                                 3            1 OK
ES-P                                  3
SES-P                                  3
UAS-P                                 0
ES-PFE                                0
SES-PFE                               0
UAS-PFE                               0
Received SONET overhead:
F1      : 0x00, J0      : 0x00, K1      : 0x00, K2      : 0x00
S1      : 0x00, C2      : 0x00, C2(cmp) : 0x00, F2      : 0x00
Z3      : 0x00, Z4      : 0x00, S1(cmp) : 0x00
Transmitted SONET overhead:
F1      : 0x00, J0      : 0x01, K1      : 0x00, K2      : 0x00
S1      : 0x00, C2      : 0x00, F2      : 0x00, Z3      : 0x00
Z4      : 0x00
Received path trace:
a0 6a b2 b6 97 aa 25 5e 54 e3 59 2a 80 84 dd fa   j26.*%^TcY*..]z
af ec 42 d3 21 45 5d 48 f4 5a dd e5 1c be e7 65   /lBS!E]HtZ]e.>ge
e7 f2 94 71 f1 d7 d7 86 98 83 d5 e2 ec 67 1d db   gr.qqWW...Ub1g.[
5b 72 29 b3 b9 97 98 c9 c1 a3 af e2 ab db d0 be   [r]39..IA#/b+[P>
Transmitted path trace: RouterA coc1-4/2/0:7
74 69 6d 6d 65 73 73 71 75 61 72 65 20 63 6f 63   RouterA coc
31 2d 34 2f 32 2f 30 3a 37 00 00 00 00 00 00 00   1-4/2/0:7.....
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00   .....
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00   .....
HDLC configuration:
  Policing bucket: Disabled
  Shaping bucket : Disabled
  Giant threshold: 0, Runt threshold: 0
Packet Forwarding Engine configuration:
  Destination slot: 0 (0x00)
  CoS transmit queue      Bandwidth      Buffer Priority  Limit
                           %      bps      %      bytes
0 best-effort             95      49248000 95      0      low    none
3 network-control          5      2592000  5      0      low    none

```

### Channelized T1

```
user@RouterA> show interfaces extensive ct1-4/2/0:4:1
```

Physical interface: ct1-4/2/0:4:1, Enabled, Physical link is Up  
 Interface index: 305, SNMP ifIndex: 2410, Generation: 640  
 Link-level type: Controller, MTU: 1504, Clocking: Internal, Speed: T1, Loopback: None, FCS: 16,  
 Framing: ESF, Parent: ct3-4/2/0:4 (Index 304)  
 Device flags : Present Running  
 Interface flags: Point-To-Point SNMP-Traps  
 Link flags : None  
 Hold-times : Up 0 ms, Down 0 ms  
 Last flapped : 2002-10-09 17:45:19 PDT (00:16:49 ago)  
 Statistics last cleared: Never  
 Traffic statistics:  
 Input bytes : 0 0 bps  
 Output bytes : 0 0 bps  
 Input packets: 0 0 pps  
 Output packets: 0 0 pps  
 Input errors:  
 Errors: 0, Drops: 0, Framing errors: 0, Policed discards: 0,  
 L3 incompletes:0, L2 channel errors: 0,  
 L2 mismatch timeouts: 0, HS link CRC errors: 0, SRAM errors: 0  
 Output errors:  
 Carrier transitions: 0, Errors: 0, Drops: 0, Aged packets: 0  
 DS1 alarms : None  
 DS1 defects : None  
 T1 media:

	Seconds	Count	State
SEF	1	1	OK
BEE	1	1	OK
AIS	0	0	OK
LOF	1	1	OK
LOS	0	0	OK
YELLOW	0	0	OK
BPV	0	0	
EXZ	0	0	
LCV	0	0	
PCV	0	0	
CS	0	0	
LES	1		
ES	1		
SES	2		
SEFS	2		
BES	0		
UAS	0		

HDLC configuration:  
 Policing bucket: Disabled  
 Shaping bucket : Disabled  
 Giant threshold: 0, Runt threshold: 0  
 Timeslots : All active  
 Line encoding: B8ZS, Byte encoding: Nx64K  
 Buildout : 0 to 132 feet  
 Data inversion: Disabled  
 DS1 BERT configuration:  
 BERT time period: 10 seconds, Elapsed: 0 seconds  
 Induced Error rate: 10e-0, Algorithm: 2^15 - 1, 0.151, Pseudorandom (9)  
 Packet Forwarding Engine configuration:  
 Destination slot: 0 (0x00)

CoS transmit queue	%	Bandwidth bps	%	Buffer bytes	Priority	Limit
0 best-effort	95	1459200	95	0	low	none
3 network-control	5	76800	5	0	low	none



## T1

user@RouterA> show interfaces extensive t1-4/2/0:7:3

```
Physical interface: t1-4/2/0:7:3, Enabled, Physical link is Up
  Interface index: 414, SNMP ifIndex: 2587, Generation: 761
  Link-level type: PPP, MTU: 1504, Clocking: Internal, Speed: T1, Loopback: None, FCS: 16, Framing:ESF,
  Parent: coc1-4/2/0:7 (Index 381)
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link flags     : Keepalives
  Hold-times     : Up 0 ms, Down 0 ms
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive statistics:
    Input : 0 (last seen: never)
    Output: 0 (last sent: never)
  LCP state: Conf-ack-sent
  NCP state: inet: Down, inet6: Not-configured, iso: Not-configured, mpls: Not-configured
  CHAP state: Not-configured
  Last flapped   : 2002-10-09 17:45:34 PDT (00:10:33 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes   :           10778           112 bps
    Output bytes  :           11412           128 bps
    Input packets :           634           0 pps
    Output packets:           634           0 pps
  Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Policed discards: 0,
  L3 incompletes: 0, L2 channel errors: 0,
    L2 mismatch timeouts: 0, HS link CRC errors: 0, SRAM errors: 0
  Output errors:
    Carrier transitions: 1, Errors: 0, Drops: 0, Aged packets: 0
  Queue counters:
    Queued packets  Transmitted packets  Dropped packets
    0 best-effort    633                633                0
    1 expedited-fo   0                  0                  0
    2 assured-forw   0                  0                  0
    3 network-cont   0                  0                  0
  DS1 alarms   : None
  DS1 defects  : None
  T1 media:
    Seconds      Count  State
    SEF          1       1 OK
    BEE          1       1 OK
    AIS          3       1 OK
    LOF         17       1 OK
    LOS          0       0 OK
    YELLOW       0       0 OK
    BPV          0       0
    EXZ          0       0
    LCV          0       0
    PCV          0       0
    CS           0       0
    LES         17       0
    ES          17       0
    SES         34       0
    SEFS        34       0
    BES         0       0
    UAS         14       0
  HDLC configuration:
    Policing bucket: Disabled
    Shaping bucket  : Disabled
    Giant threshold: 1514, Runt threshold: 0
```

```

Timeslots      : All active
Line encoding: B8ZS, Byte encoding: Nx64K
Buildout       : 0 to 132 feet
Data inversion: Disabled
DS1 BERT configuration:
  BERT time period: 10 seconds, Elapsed: 0 seconds
  Induced Error rate: 10e-0, Algorithm: 2^15 - 1, 0.151, Pseudorandom (9)
SONET alarms   : None
SONET defects   : None
SONET vt:
  BIP-BIP2      648      0
  REI-V         651      1
  LOP-V         0        0 OK
  AIS-V         0        0 OK
  RDI-V         651      1 Defect Active
  UNEQ-V        0        0 OK
  PLM-V         0        0 OK
  ES-V          651
  SES-V         3
  UAS-V         0
  ES-VFE        0
  SES-VFE       0
  UAS-VFE       0
Received SONET overhead:
  V5           : 0x02, V5(cmp) : 0x02
Transmitted SONET overhead:
  V5           : 0x02
Packet Forwarding Engine configuration:
  Destination slot: 4, PLP byte: 4 (0x24)
  CoS transmit queue      Bandwidth      Buffer Priority  Limit
                           %      bps      %      bytes
  0 best-effort           95      1459200 95      0      low  none
  3 network-control       5       76800  5       0      low  none
Logical interface t1-4/2/0:7:3.0 (Index 152) (SNMP ifIndex 2588)
(Generation 484)
  Flags: Hardware-Down Point-To-Point SNMP-Traps Encapsulation: PPP
  Bandwidth: 0
  Protocol inet, MTU: 1500, Generation: 491, Route table: 0
  Flags: Protocol-Down
  Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
  Destination: 10.255.2.68/30, Local: 10.255.2.70, Broadcast: Unspecified, Generation: 973

```

## DS0

```
user@RouterA> show interfaces extensive ds-4/2/0:4:1:1
```

```

Physical interface: ds-4/2/0:4:1:1, Enabled, Physical link is Up
Interface index: 306, SNMP ifIndex: 2411, Generation: 641
Link-level type: PPP, MTU: 1504, Clocking: Internal, Speed: 64kbps, Loopback: None, FCS: 16,
Parent: ct1-4/2/0:4:1 (Index 305)
Device flags   : Present Running
Interface flags: Point-To-Point SNMP-Traps
Link flags     : Keepalives
Hold-times     : Up 0 ms, Down 0 ms
Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
Keepalive statistics:
  Input : 98 (last seen 00:00:01 ago)
  Output: 100 (last sent 00:00:00 ago)
LCP state: Opened
NCP state: inet: Opened, inet6: Not-configured, iso: Not-configured, mpls: Not-configured
CHAP state: Not-configured

```

```

Last flapped   : 2002-10-09 17:45:15 PDT (00:16:20 ago)
Statistics last cleared: Never
Traffic statistics:
  Input bytes   :          3013          0 bps
  Output bytes  :          3228          0 bps
  Input packets :          201          0 pps
  Output packets:          202          0 pps
Input errors:
  Errors: 0, Drops: 0, Framing errors: 0, Policed discards: 0,
L3 incompletes: 0, L2 channel errors: 0,
  L2 mismatch timeouts: 0, HS link CRC errors: 0
Output errors:
  Carrier transitions: 1, Errors: 0, Drops: 0, Aged packets: 0
Queue counters:
  Queued packets  Transmitted packets  Dropped packets
0 best-effort      202                202                0
1 expedited-fo      0                  0                  0
2 assured-forw      0                  0                  0
3 network-cont      0                  0                  0
Interface transmit queues:
      B/W  WRR    Packets      Bytes      Drops      Errors
Queue0    0    0         0         0         0         0
Queue1    0    0         0         0         0         0
HDLC configuration:
  Giant threshold: 0, Runt threshold: 0
  Timeslots      : 1
  Byte encoding: Nx64K, Data inversion: Disabled
  Idle cycle flag: flags, Start end flag: shared
Packet Forwarding Engine configuration:
  Destination slot: 4, PLP byte: 4 (0x07)
  CoS transmit queue      Bandwidth      Buffer Priority  Limit
                        %      bps      %      bytes
0 best-effort             95      60800  95         0    low    none
3 network-control         5       3200   5         0    low    none
Logical interface ds-4/2/0:4:1:1.0 (Index 39) (SNMP ifIndex 2412)
(Generation 369)
  Flags: Point-To-Point SNMP-Traps Encapsulation: PPP
  Bandwidth: 0
  Protocol inet, MTU: 1500, Generation: 376, Route table: 0
  Flags: None
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 10.255.0.120/30, Local: 10.255.0.122, Broadcast: Unspecified, Generation: 743

```

- Related Documentation**
- [Channelized IQ Interfaces Solutions Page](#)
  - [Roadmap for Channelized IQ Interface Configuration Examples on page 29](#)
  - [Roadmap for Configuring Channelized IQ Interfaces on page 17](#)

## Example: Converting a Channelized OC12 IQ PIC to a Channelized STM4 IQ Interface

The JUNOS software allows you to convert a Channelized OC12 IQ PIC into a channelized STM4 IQ interface. The conversion process enables the Channelized OC12 IQ PIC to interconnect with European SDH telecommunications equipment at the STM4 and STM1 levels, then channelize the data into North American T3, T1, and NxDS0 interfaces. To place the Channelized OC12 IQ PIC in SDH mode, include the **sdh** option at the **[edit chassis fpc slot-number pic pic-number framing]** hierarchy level.

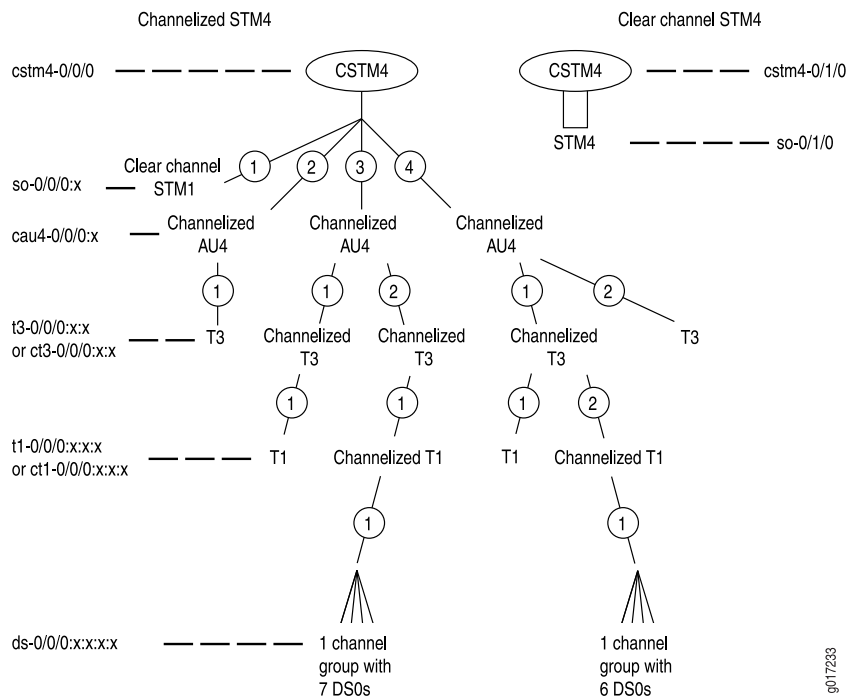
**Figure 3: Channelized OC12 IQ Interface in SDH Mode Example**

Figure 3 on page 58 and the following configuration example show how the converted channelized STM4 IQ interface can be turned into a clear channel STM4 (VC4-4c) SDH interface, or further subdivided into STM1 (VC4) interfaces and channelized administrative unit 4 (CAU4) interfaces, T3 and channelized T3 interfaces, T1 and channelized T1 interfaces, and NxDS0 channels.

```

Router A [edit]
chassis {
  fpc 0 {
    pic 0 {
      framing sdh; # Converts the Channelized OC12 IQ PIC
    } # into a channelized STM4 SDH interface.
  }
}
interfaces {
  cstm4-0/0/0 {
    partition 1 oc-slice 1-3 interface-type so; # Creates an STM1 SDH interface.
    partition 2 oc-slice 4-6 interface-type cau4; # Partitions 2, 3, and 4 create
    partition 3 oc-slice 7-9 interface-type cau4; # three channelized AU4 channels.
    partition 4 oc-slice 10-12 interface-type cau4;
  }
  so-0/0/0:1 { # A clear channel STM1 SDH (VC4) interface.
    encapsulation frame-relay;
    unit 0 {
      dlci 16;
      family inet {
        address 10.0.0.1/30;
      }
      family inet6 {
        address abcd::10.0.0.1/126;
      }
    }
  }
}

```

```

    }
  }
}
cau4-0/0/0:2 {
  partition 1 interface-type t3; # Creates a T3 interface from the
}      # channelized AU4 interface.
t3-0/0/0:2:1 {
  encapsulation frame-relay;
  unit 0 {
    dlci 16;
    family inet {
      address 10.0.0.5/30;
    }
    family inet6 {
      address abcd::10.0.0.5/126;
    }
  }
}
cau4-0/0/0:3 {
  partition 1 interface-type ct3; # Creates channelized T3 interfaces from the
  partition 2 interface-type ct3; # second channelized AU4.
}
ct3-0/0/0:3:1 {
  partition 1 interface-type t1; # Creates a T1 interface from the channelized T3.
}
t1-0/0/0:3:1:1 {
  encapsulation frame-relay;
  unit 0 {
    dlci 16;
    family inet {
      address 10.0.0.9/30;
    }
    family inet6 {
      address abcd::10.0.0.9/126;
    }
  }
}
ct3-0/0/0:3:2 {
  partition 1 interface-type ct1; # Creates a channelized T1 interface
}      # from the channelized T3.
ct1-0/0/0:3:2:1 {
  partition 1 timeslots 1,3-7,24 interface-type ds; # Creates an NxDSO channel
}      # group with seven time slots.
ds-0/0/0:3:2:1:1 {
  encapsulation frame-relay;
  unit 0 {
    dlci 16;
    family inet {
      address 10.0.0.13/30;
    }
    family inet6 {
      address abcd::10.0.0.13/126;
    }
  }
}
cau4-0/0/0:4 {


```

```
partition 2 interface-type t3; # Creates a T3 interface.
partition 1 interface-type ct3; # Creates a channelized T3 interface
}      # from the channelized AU4.
ct3-0/0/0:4:1 {
    partition 1 interface-type t1; # Creates a T1 interface.
    partition 2 interface-type ct1; # Creates a channelized T1 interface
}      # from the channelized T3.
t1-0/0/0:4:1:1 {
    encapsulation frame-relay;
    unit 0 {
        dlci 16;
        family inet {
            address 10.0.0.21/30;
        }
        family inet6 {
            address abcd::10.0.0.21/126;
        }
    }
}
ct1-0/0/0:4:1:2 {
    partition 1 timeslots 6,8-11,7 interface-type ds; # Creates an NxDS0 channel
}      # group with six time slots.
ds-0/0/0:4:1:2:1 {
    encapsulation frame-relay;
    unit 0 {
        dlci 16;
        family inet {
            address 10.0.0.25/30;
        }
        family inet6 {
            address abcd::10.0.0.25/126;
        }
    }
}
t3-0/0/0:4:2 {
    encapsulation frame-relay;
    unit 0 {
        dlci 16;
        family inet {
            address 10.0.0.17/30;
        }
        family inet6 {
            address abcd::10.0.0.17/126;
        }
    }
}
cstm4-0/1/0 {
    no-partition interface-type so; # Creates a clear channel SDH STM4 interface.
}
so-0/1/0 { # This is the clear channel SDH STM4 (VC4-4c) interface so-0/1/0.
    unit 0 {
        family inet {
            address 10.22.22.1/30;
        }
    }
}
```

}

Figure 4 on page 61 shows a visual representation of the T3/channelized T3-to-STM4 SDH mapping method used by the JUNOS Software for channelized OC12 IQ interfaces configured in SDH mode.

Figure 4: Converted Channelized OC12 IQ Interface SDH Mapping Method

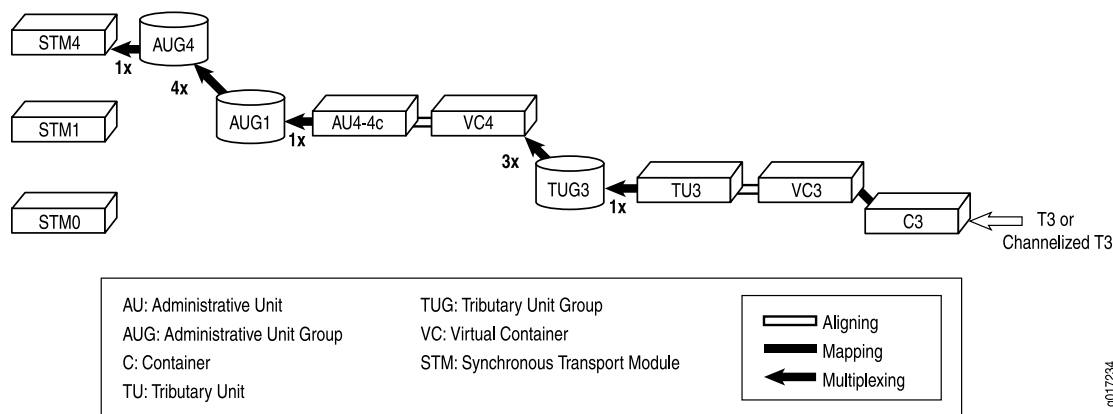

## Verifying Your Configuration

To verify correct operation of a Channelized OC12 IQ PIC converted to a channelized STM4 IQ interface, use the following commands:

- **show interfaces**
- **show interfaces controller**

To view the interface names of the physical channelized STM4 IQ interface and the resulting interfaces configured on the channelized IQ interface, use the **show interfaces controller** and **show interfaces terse** commands:

```
user@host> show interfaces controller cstm4-0/0/0
Controller
cstm4-0/0/0
  so-0/0/0:1
  cau4-0/0/0:2
    t3-0/0/0:2:1
  cau4-0/0/0:3
    ct3-0/0/0:3:1
      t1-0/0/0:3:1:1
    ct3-0/0/0:3:2
      ct1-0/0/0:3:2:1
        ds-0/0/0:3:2:1:1
  cau4-0/0/0:4
    ct3-0/0/0:4:1
      t1-0/0/0:4:1:1
    ct1-0/0/0:4:1:2
      ds-0/0/0:4:1:2:1
  t3-0/0/0:4:2
```

	Admin	Link
cstm4-0/0/0	up	up
so-0/0/0:1	up	up
cau4-0/0/0:2	up	up
t3-0/0/0:2:1	up	up
cau4-0/0/0:3	up	up
ct3-0/0/0:3:1	up	up
t1-0/0/0:3:1:1	up	up
ct3-0/0/0:3:2	up	up
ct1-0/0/0:3:2:1	up	up
ds-0/0/0:3:2:1:1	up	up
cau4-0/0/0:4	up	up
ct3-0/0/0:4:1	up	up
t1-0/0/0:4:1:1	up	up
ct1-0/0/0:4:1:2	up	up
ds-0/0/0:4:1:2:1	up	up
t3-0/0/0:4:2	up	up

```
user@host> show interfaces terse *-0/0/0*
```

Interface	Admin	Link	Proto	Local	Remote
cstm4-0/0/0	up	up			
so-0/0/0:1	up	up			
so-0/0/0:1.0	up	up	inet inet6	10.0.0.1/30 abcd::a00:1/126 fe80::2a0:a5ff:fe5c:15a6/64	
cau4-0/0/0:2	up	up			
t3-0/0/0:2:1	up	up			
t3-0/0/0:2:1.0	up	up	inet inet6	10.0.0.5/30 abcd::a00:5/126 fe80::2a0:a5ff:fe5c:15a6/64	
cau4-0/0/0:3	up	up			
ct3-0/0/0:3:1	up	up			
t1-0/0/0:3:1:1	up	up			
t1-0/0/0:3:1:1.0	up	up	inet inet6	10.0.0.9/30 abcd::a00:9/126 fe80::2a0:a5ff:fe5c:15a6/64	
ct3-0/0/0:3:2	up	up			
ct1-0/0/0:3:2:1	up	up			
ds-0/0/0:3:2:1:1	up	up			
ds-0/0/0:3:2:1:1.0	up	up	inet inet6	10.0.0.13/30 abcd::a00:d/126 fe80::2a0:a5ff:fe5c:15a6/64	
cau4-0/0/0:4	up	up			
ct3-0/0/0:4:1	up	up			
t1-0/0/0:4:1:1	up	up			
t1-0/0/0:4:1:1.0	up	up	inet inet6	10.0.0.21/30 abcd::a00:15/126 fe80::2a0:a5ff:fe5c:15a6/64	
ct1-0/0/0:4:1:2	up	up			
ds-0/0/0:4:1:2:1	up	up			
ds-0/0/0:4:1:2:1.0	up	up	inet inet6	10.0.0.25/30 abcd::a00:19/126 fe80::2a0:a5ff:fe5c:15a6/64	
t3-0/0/0:4:2	up	up			
t3-0/0/0:4:2.0	up	up	inet inet6	10.0.0.17/30 abcd::a00:11/126 fe80::2a0:a5ff:fe5c:15a6/64	

#### Related Documentation

- [Channelized IQ Interfaces Solutions Page](#)
- [Roadmap for Channelized IQ Interface Configuration Examples on page 29](#)
- [Roadmap for Configuring Channelized IQ Interfaces on page 17](#)



## Example: Channelized OC3 IQ Interface Configuration

Figure 5: Channelized OC3 IQ Interface Example

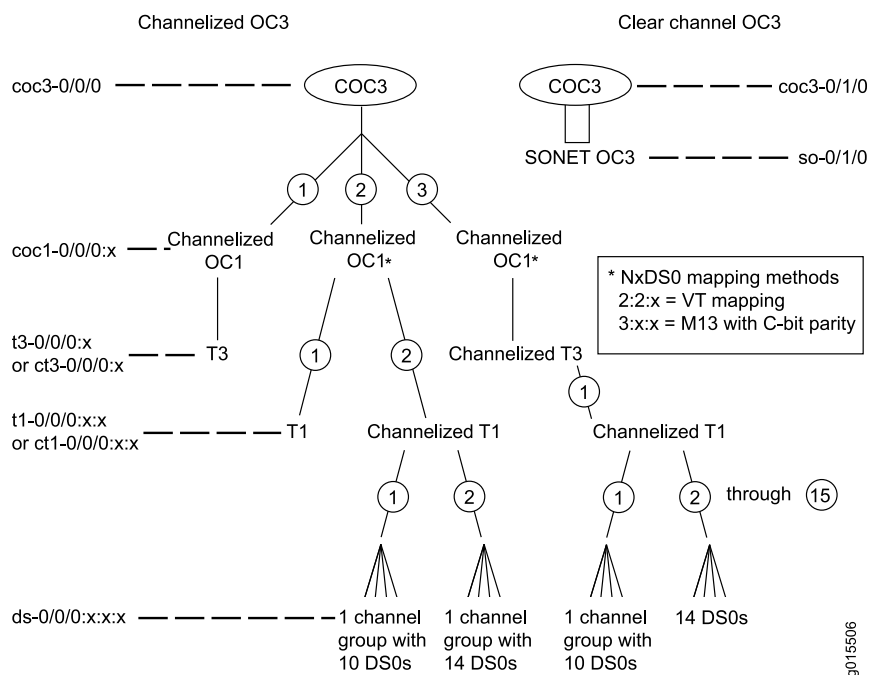


Figure 5 on page 63 shows a sample channelization structure for a channelized OC3 IQ interface. Top-level partitions 1, 2, and 3 create channelized OC1 interfaces. The first channelized OC1 interface, **coc1-0/0/0:1**, is converted directly into the T3 interface **t3-0/0/0:1**. The second channelized OC1 interface, **coc1-0/0/0:2**, is partitioned into a T1 interface and a channelized T1 interface. The channelized T1 interface, **t1-0/0/0:2:2**, is then further subdivided into two NxDS0 channel groups: **ds-0/0/0:2:2:1** and **ds-0/0/0:2:2:2**.

The remaining channelized OC1 interface, **coc1-0/0/0:3**, is converted to a channelized T3 interface, then to a channelized T1 interface, and ultimately to 14 individual NxDS0 channels and a channel group containing 10 NxDS0 channels. Additionally, channelized OC3 IQ interface **coc3-0/1/0** uses the **no-partition** statement at the **[edit interface interface-name]** hierarchy level to create a clear channel SONET OC3 interface **so-0/1/0**. This example shows two NxDS0 mapping methods. Partition 2:x:x uses VT mapping for SONET/SDH equipment, while partition 3:x:x uses M13 mapping for North American T-carrier equipment.

This example also assumes corresponding interfaces. For example, for every sublevel T1 interface you configure on Router A, assume you have configured a matching sublevel or physical T1 interface on a neighboring router.

```
Router A [edit]
interfaces {
  coc3-0/0/0 {
    partition 1 oc-slice 1 interface-type coc1; # Creates three channelized OC1
    partition 2 oc-slice 2 interface-type coc1; # interfaces: coc1-0/0/0:1 through
```

```
    partition 3 oc-slice 3 interface-type coc1; # coc1-0/0/0:3.
}
coc1-0/0/0:1 {
    no-partition interface-type t3; # This converts the COC1 interface into
}    # T3 interface t3-0/0/0:1.
t3-0/0/0:1 {
    no-keepalives;
    encapsulation cisco-hdlc;
    t3-options {
        fcs 32;
        feac-loop-respond;
    }
    unit 0 {
        family inet {
            address 10.21.21.2/30;
        }
    }
}
coc1-0/0/0:2 {
    partition 1 interface-type t1; # Creates the T1 interface t1-0/0/0:2:1.
    partition 2 interface-type ct1; # Creates the channelized T1 interface
}    # ct1-0/0/0:2:2.
t1-0/0/0:2:1 {
    no-keepalives;
    encapsulation cisco-hdlc;
    t1-options {
        fcs 32;
    }
    unit 0 {
        family inet {
            address 10.12.12.2/30;
        }
    }
}
ct1-0/0/0:2:2 {
    partition 1 timeslots 1-10 interface-type ds; # This converts the channelized T1
    partition 2 timeslots 11-24 interface-type ds; # interface into two channel
}    # groups: ds-0/0/0:2:2:1 and ds-0/0/0:2:2:2.
ds-0/0/0:2:2:1 { # This is a channel group with 10 NxDSOs bundled as one.
    no-keepalives;
    encapsulation cisco-hdlc;
    unit 0 {
        family inet {
            address 10.13.13.2/30;
        }
    }
}
ds-0/0/0:2:2:2 { # This is a channel group with 14 NxDSOs bundled as one.
    encapsulation frame-relay;
    unit 0 {
        dlci 10;
        family inet {
            address 10.14.14.2/30;
        }
    }
}
```

```

coc1-0/0/0:3 {
    partition 1 interface-type ct3; # Creates the channelized T3 interface
}
# ct3-0/0/0:3.
ct1-0/0/0:3:1 {
    partition 1 timeslots 1-10 interface-type ds; # Creates a channel group.
    partition 2 timeslots 11 interface-type ds; # Creates single NxDS0 channels.
    partition 3 timeslots 12 interface-type ds;
    partition 4 timeslots 13 interface-type ds;
    partition 5 timeslots 14 interface-type ds;
    partition 6 timeslots 15 interface-type ds;
    partition 7 timeslots 16 interface-type ds;
    partition 8 timeslots 17 interface-type ds;
    partition 9 timeslots 18 interface-type ds;
    partition 10 timeslots 19 interface-type ds;
    partition 11 timeslots 20 interface-type ds;
    partition 12 timeslots 21 interface-type ds;
    partition 13 timeslots 22 interface-type ds;
    partition 14 timeslots 23 interface-type ds;
    partition 15 timeslots 24 interface-type ds;
}
ds-0/0/0:3:1:1 { # This is a channel group with 10 NxDS0s bundled as one.
    no-keepalives;
    encapsulation cisco-hdlc;
    unit 0 {
        family inet {
            address 10.31.31.2/30;
        }
    }
}
ds-0/0/0:3:1:2 { # ds-0/0/0:3:1:2 through :15 are single NxDS0s channels.
    encapsulation frame-relay;
    unit 0 {
        dlci 10;
        family inet {
            address 10.32.32.2/30;
        }
    }
}
# Assume ds-0/0/0:3:1:3 through :14 are configured here.
ds-0/0/0:3:1:15 { # ds-0/0/0:3:1:2 through :15 are single NxDS0s channels.
    encapsulation frame-relay;
    unit 0 {
        dlci 10;
        family inet {
            address 10.45.45.2/30;
        }
    }
}
coc3-0/1/0 {
    no-partition interface-type so; # Creates a clear channel SONET OC3 interface.
}
so-0/1/0 { # This is the clear channel SONET OC3 interface so-0/1/0.
    dce;
    encapsulation frame-relay;
    unit 1 {
        dlci 11;
    }
}

```

```
        family inet {
            address 10.22.22.1/30;
        }
    }
}
```

## Verifying Your Work

To verify correct operation of a channelized OC3 IQ interface, use the following commands:

- **show interfaces**
- **show interfaces controller**
- **show interfaces interval** (for channelized OC3, OC3, T3, channelized T3, T1, and channelized T1 channels)

To view the interface names of the physical channelized OC3 IQ interface and the resulting interfaces configured on the channelized IQ interface, use the **show interfaces controller** command:

```
user@host> show interfaces controller coc3-0/0/0
Controller
coc3-0/0/0
    coc1-0/0/0:1
    t3-0/0/0:1
    coc1-0/0/0:2
        t1-0/0/0:2:1
        ct1-0/0/0:2:2
            ds-0/0/0:2:2:1
            ds-0/0/0:2:2:2
    coc1-0/0/0:3
    ct3-0/0/0:3
        ct1-0/0/0:3:1
            ds-0/0/0:3:1:1
            ds-0/0/0:3:1:2
            ds-0/0/0:3:1:3
            ds-0/0/0:3:1:4
            ds-0/0/0:3:1:5
            ds-0/0/0:3:1:6
            ds-0/0/0:3:1:7
            ds-0/0/0:3:1:8
            ds-0/0/0:3:1:9
            ds-0/0/0:3:1:10
            ds-0/0/0:3:1:11
            ds-0/0/0:3:1:12
            ds-0/0/0:3:1:13
            ds-0/0/0:3:1:14
            ds-0/0/0:3:1:15
```

	Admin	Link
coc3-0/0/0	up	up
coc1-0/0/0:1	up	up
t3-0/0/0:1	up	up
coc1-0/0/0:2	up	up
t1-0/0/0:2:1	up	up
ct1-0/0/0:2:2	up	up
ds-0/0/0:2:2:1	up	up
ds-0/0/0:2:2:2	up	up
coc1-0/0/0:3	up	up
ct3-0/0/0:3	up	up
ct1-0/0/0:3:1	up	up
ds-0/0/0:3:1:1	up	up
ds-0/0/0:3:1:2	up	up
ds-0/0/0:3:1:3	up	up
ds-0/0/0:3:1:4	up	up
ds-0/0/0:3:1:5	up	up
ds-0/0/0:3:1:6	up	up
ds-0/0/0:3:1:7	up	up
ds-0/0/0:3:1:8	up	up
ds-0/0/0:3:1:9	up	up
ds-0/0/0:3:1:10	up	up
ds-0/0/0:3:1:11	up	up
ds-0/0/0:3:1:12	up	up
ds-0/0/0:3:1:13	up	up
ds-0/0/0:3:1:14	up	up
ds-0/0/0:3:1:15	up	up

To verify that your channelized IQ interfaces are working as expected, use the **show interfaces** command. Use the **show interfaces controller** command to find the name of the channelized interface you want to view; then include this channelized name (for example, **ct3-0/0/0:3**) as an option with the **show interfaces** command.

The next sections provide sample **show interfaces** output for each of the major interface types configured in this example:

- [Channelized OC3 on page 67](#)
- [Channelized OC1 on page 67](#)
- [T3 on page 67](#)
- [Channelized T3 on page 68](#)
- [T1 on page 68](#)
- [Channelized T1 on page 69](#)
- [NxDS0 on page 69](#)
- [Clear Channel SONET OC3 on page 69](#)

### Channelized OC3

```
user@host> show interfaces coc3-0/0/0
Physical interface: coc3-0/0/0, Enabled, Physical link is Up
  Interface index: 128, SNMP ifIndex: 1954
  Link-level type: Controller, Clocking: Internal, SONET mode,
  Speed: OC3, Loopback: None, Parent: None
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps 16384
  Link flags     : None
  CoS queues     : 4 supported
  Last flapped   : 2005-02-15 20:35:24 PST (22:10:54 ago)
  SONET alarms   : None
  SONET defects  : None
```

### Channelized OC1

```
user@host> show interfaces coc1-0/0/0:1
Physical interface: coc1-0/0/0:1, Enabled, Physical link is Up
  Interface index: 226, SNMP ifIndex: 1957
  Link-level type: Controller, Clocking: Internal, SONET mode, Speed: 51840kbps,
  Loopback: None,
  Parent: coc3-0/0/0 Interface index 138
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps 16384
  Link flags     : None
  CoS queues     : 4 supported
  Last flapped   : 2004-11-04 10:55:50 PST (05:38:36 ago)
  SONET alarms   : None
  SONET defects  : None
```

### T3

```
user@host> show interfaces t3-0/0/0:1
Physical interface: t3-0/0/0:1, Enabled, Physical link is Up
  Interface index: 227, SNMP ifIndex: 43
  Link-level type: Cisco-HDLC, MTU: 4474, Clocking: Internal, Speed: T3, Loopback:
  None, FCS: 16, Mode: C/Bit parity,
  Parent: coc1-0/0/0:1 Interface index 226
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps 16384
  Link flags     : No-Keepalives
  CoS queues     : 4 supported
```

```
Last flapped      : Never
Input rate       : 0 bps (0 pps)
Output rate      : 0 bps (0 pps)
Active alarms    : None
Active defects   : None
DS3 BERT configuration:
  BERT time period: 10 seconds, Elapsed: 0 seconds
  Algorithm: 2^15 - 1, 0.151, Pseudorandom (9), Induced error rate: 10e-0
Logical interface t3-0/0/0:1.0 (Index 69) (SNMP ifIndex 1960)
  Flags: Point-To-Point SNMP-Traps Encapsulation: Cisco-HDLC
  Protocol inet, MTU: 4470
  Flags: None
  Addresses, Flags: Is-Preferred Is-Primary
  Destination: 10.21.21.0/30, Local: 10.21.21.2, Broadcast: 10.21.21.3
```

---

### Channelized T3

```
user@host> show interfaces ct3-0/0/0:3
Physical interface: ct3-0/0/0:3, Enabled, Physical link is Up
  Interface index: 234, SNMP ifIndex: 2218
  Link-level type: Controller, Clocking: Internal, Speed: T3, Loopback: None,
Mode: C/Bit parity,
  Parent: coc1-0/0/0:3 Interface index 233
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps 16384
  Link flags     : None
  CoS queues    : 4 supported
  Last flapped  : Never
  Active alarms : None
  Active defects: None
DS3 BERT configuration:
  BERT time period: 10 seconds, Elapsed: 0 seconds
  Algorithm: 2^15 - 1, 0.151, Pseudorandom (9), Induced error rate: 10e-0
```

---

### T1

```
user@host> show interfaces t1-0/0/0:2:1
Physical interface: t1-0/0/0:2:1, Enabled, Physical link is Up
  Interface index: 229, SNMP ifIndex: 2091
  Link-level type: Cisco-HDLC, MTU: 1504, Clocking: Internal, Speed: T1,
Loopback: None, FCS: 32, Framing: ESF,
  Parent: coc1-0/0/0:2 Interface index 228
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps 16384
  Link flags     : No-Keepalives
  CoS queues    : 4 supported
  Last flapped  : Never
  Input rate    : 0 bps (0 pps)
  Output rate   : 0 bps (0 pps)
  DS1 alarms    : None
  DS1 defects   : None
  SONET alarms  : None
  SONET defects : None
Logical interface t1-0/0/0:2:1.0 (Index 70) (SNMP ifIndex 2092)
  Flags: Point-To-Point SNMP-Traps Encapsulation: Cisco-HDLC
  Protocol inet, MTU: 1500
  Flags: None
```

Addresses, Flags: Is-Preferred Is-Primary  
 Destination: 10.12.12.0/30, Local: 10.12.12.2, Broadcast: 10.12.12.3

### Channelized T1

```
user@host> show interfaces ct1-0/0/0:2:2
Physical interface: ct1-0/0/0:2:2, Enabled, Physical link is Up
  Interface index: 230, SNMP ifIndex: 13985
  Link-level type: Controller, Clocking: Internal, Speed: T1, Loopback: None,
  Framing: ESF,
  Parent: coc1-0/0/0:2 Interface index 228
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps 16384
  Link flags     : None
  CoS queues     : 4 supported
  Last flapped   : Never
  DS1 alarms     : None
  DS1 defects    : None
  SONET alarms   : None
  SONET defects  : None
```

### NxDSO

```
user@host> show interfaces ds-0/0/0:2:1
Physical interface: ds-0/0/0:2:1, Enabled, Physical link is Up
  Interface index: 231, SNMP ifIndex: 14016
  Link-level type: Cisco-HDLC, MTU: 1504, Clocking: Internal, Speed: 640kbps,
  Loopback: None, FCS: 16,
  Parent: ct1-0/0/0:2:2 Interface index 230
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps 16384
  Link flags     : No-Keepalives
  CoS queues     : 8 maximum usable queues, 4 in use
  Egress queues  : 8 supported, 4 in use4 supported
  Last flapped   : Never
  Input rate     : 0 bps (0 pps)
  Output rate    : 0 bps (0 pps)
  DSO BERT configuration:
    BERT time period: 10 seconds, Elapsed: 0 seconds
    Induced Error rate: 10e-0, Algorithm: 2^15 - 1, 0.151, Pseudorandom (9)
  Logical interface ds-0/0/0:2:1.0 (Index 71) (SNMP ifIndex 20889)
  Flags: Point-To-Point SNMP-Traps Encapsulation: Cisco-HDLC
  Protocol inet, MTU: 1500
  Flags: None
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 10.13.13.0/30, Local: 10.13.13.2, Broadcast: 10.13.13.3
```

### Clear Channel SONET OC3

```
user@host> show interfaces so-0/1/0
Physical interface: so-0/1/0, Enabled, Physical link is Down
  Interface index: 128, SNMP ifIndex: 15684
  Link-level type: Cisco-HDLC, MTU: 4474, Clocking: Internal, SONET mode, Speed:
  OC3, Loopback: None, FCS: 16,
  Payload scrambler: Enabled
  Parent: coc3-0/1/0 Interface index 142
  Device flags   : Present Running Down
  Interface flags: Hardware-Down Point-To-Point SNMP-Traps 16384
  Link flags     : Keepalives
  CoS queues     : 4 supported
```

```


Last flapped   : 2004-11-04 10:53:54 PST (05:51:04 ago)
Input rate    : 0 bps (0 pps)
Output rate   : 0 bps (0 pps)
SONET alarms  : PLM-P
SONET defects : PLM-P
Logical interface so-0/1/0.0 (Index 67) (SNMP ifIndex 15686)
  Flags: Device-Down Point-To-Point SNMP-Traps Encapsulation: Cisco-HDLC
  Protocol inet, MTU: 4470
  Flags: None
  Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
    Destination: 10.22.22.0/30, Local: 10.22.22.1, Broadcast: 10.22.22.3

```

- Related Documentation**
- [Channelized IQ Interfaces Solutions Page](#)
  - [Roadmap for Channelized IQ Interface Configuration Examples on page 29](#)
  - [Roadmap for Configuring Channelized IQ Interfaces on page 17](#)

## Example: Channelized DS3 IQ Interface Configuration

Figure 6: Channelized DS3 IQ Interface Example

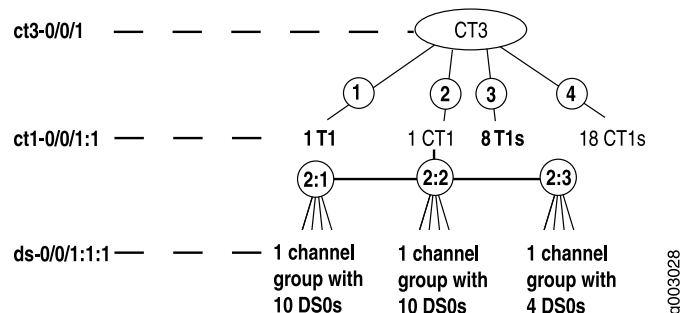

This example shows how to configure a channelized DS3 IQ interface. [Figure 6 on page 70](#) shows the breakdown of a DS3 interface into a variety of channels. The path that leads to  $N \times$ DS0 channels is similar to the M13 with C-bit parity method seen previously in the complex OC12 configuration example (see [“Example: Complex Configuration for a Channelized OC12 IQ Interface” on page 36](#)). This method breaks the channelized DS3 IQ interface into channelized T1s before additional splits create DS0 time slots.

To create T1 channels, include the **partition** statement at the `[edit interfaces ct3-fpc/pic/port]` hierarchy level with the **interface-type t1** option. To create channelized T1 channels, include the **partition** statement at the `[edit interfaces ct3-fpc/pic/port]` hierarchy level with the **interface-type ct1** option.

After you have established a channelized T1 channel, you can split it into a maximum of 24  $N \times$ DS0 channels. To configure  $N \times$ DS0 channels, include the **partition** statement at the `[edit interfaces ct1-fpc/pic/port:channel]` hierarchy level with the **timeslots** and **interface-type ds** options to create the desired number of  $N \times$ DS0 channels or channel groups.



Although it is not part of the example shown, you can also create a clear channel T3 or a fractional T3 interface on a channelized DS3 IQ interface. To configure a clear channel T3 or fractional T3 interface, include the **no-partition** statement at the **[edit interfaces ct3-fpc/pic /port]** hierarchy level. After you commit this part of the configuration, a clear channel T3 interface is established. You can configure standard T3 options on this interface. To fractionalize the T3 interface, include the **timeslots** statement at the **[edit interfaces t3-fpc/pic/port t3-options]** hierarchy level.

```
Router A [edit]
interfaces {
  ct3-0/0/1 { # This is the controller level for the channelized DS3 IQ interface.
    partition 1 interface-type t1; # This creates the t1-0/0/1:1 channel.
    partition 2 interface-type ct1; # This creates the ct1-0/0/1:2 channel.
    partition 3-10 interface-type t1; # This creates channels t1-0/0/1:3 through :10.
    partition 11-28 interface-type ct1; # This creates channels ct1-0/0/1:11 to :28.
  }
  t1-0/0/1:1 {
    ...
  }
  ct1-0/0/1:2 {
    partition 1 timeslots 1-10 interface-type ds; # These statements create
    partition 2 timeslots 11-20 interface-type ds; # three channel groups.
    partition 3 timeslots 21-24 interface-type ds;
  }
  ds-0/0/1:2:1 { # This channel group contains 10 NxDS0s.
    unit 0 {
      family inet {
        address 10.25.1.2/24;
      }
    }
  }
  ds-0/0/1:2:2 { # This channel group contains 10 NxDS0s.
    unit 0 {
      family inet {
        address 10.25.2.2/24;
      }
    }
  }
  ds-0/0/1:2:3 { # This channel group contains 4 NxDS0s.
    unit 0 {
      family inet {
        address 10.25.3.2/24;
      }
    }
  }
  t1-0/0/1:3 {
    ...
  }
  t1-0/0/1:10 {
    ...
  }
  ct1-0/0/1:11 {
    ...
  }
  ct1-0/0/1:28 {
```

```
    ...  
  }  
}
```

## Verifying Your Work

To verify correct operation of a channelized DS3 IQ interface, use the following commands:

- **show interfaces**
- **show interfaces controller**
- **show interfaces interval** (for T3, channelized T3, T1, and channelized T1 channels)

To view the interface names of the physical channelized DS3 IQ interface and the channels configured on this interface, use the **show interfaces controller** command:

```
user@RouterA> show interfaces controller ct3-0/0/1
Controller
ct3-0/0/1
# This is the physical channelized DS3 (channelized T3) IQ interface.
  t1-0/0/1:1
# Channel 1 is a channelized T1 interface.
  ct1-0/0/1:2
    ds-0/0/1:2:1
    ds-0/0/1:2:2
    ds-0/0/1:2:3
  t1-0/0/1:3
  t1-0/0/1:4
  t1-0/0/1:5
  t1-0/0/1:6
  t1-0/0/1:7
  t1-0/0/1:8
  t1-0/0/1:9
  t1-0/0/1:10
# Channels 3 through 10 are T1 interfaces.
  ct1-0/0/1:11
  ct1-0/0/1:12
  ct1-0/0/1:13
  ct1-0/0/1:14
  ct1-0/0/1:15
  ct1-0/0/1:16
  ct1-0/0/1:17
  ct1-0/0/1:18
  ct1-0/0/1:19
  ct1-0/0/1:20
  ct1-0/0/1:21
  ct1-0/0/1:22
  ct1-0/0/1:23
  ct1-0/0/1:24
  ct1-0/0/1:25
  ct1-0/0/1:26
  ct1-0/0/1:27
  ct1-0/0/1:28
# Channels 11 through 28 are channelized T1 interfaces.
```

	Admin	Link
ct3-0/0/1	up	up
t1-0/0/1:1	up	up
ct1-0/0/1:2	up	up
ds-0/0/1:2:1	up	up
ds-0/0/1:2:2	up	up
ds-0/0/1:2:3	up	up
t1-0/0/1:3	up	down
t1-0/0/1:4	up	up
t1-0/0/1:5	up	up
t1-0/0/1:6	up	up
t1-0/0/1:7	up	up
t1-0/0/1:8	up	up
t1-0/0/1:9	up	up
t1-0/0/1:10	up	up
ct1-0/0/1:11	up	up
ct1-0/0/1:12	up	up
ct1-0/0/1:13	up	up
ct1-0/0/1:14	up	up
ct1-0/0/1:15	up	up
ct1-0/0/1:16	up	up
ct1-0/0/1:17	up	up
ct1-0/0/1:18	up	up
ct1-0/0/1:19	up	up
ct1-0/0/1:20	up	up
ct1-0/0/1:21	up	up
ct1-0/0/1:22	up	up
ct1-0/0/1:23	up	up
ct1-0/0/1:24	up	up
ct1-0/0/1:25	up	up
ct1-0/0/1:26	up	up
ct1-0/0/1:27	up	up
ct1-0/0/1:28	up	up

To view information about the physical channelized interface, include the **ct3-fpc/pic/port** option with the **show interfaces** command:

```
user@RouterA> show interfaces extensive ct3-0/0/1
```

```

Physical interface: ct3-0/0/1, Enabled, Physical link is Up
Interface index: 30, SNMP ifIndex: 317, Generation: 29
Link-level type: Controller, MTU: 4474, Clocking: Internal, Speed: T3,
Loopback: None, FCS: 16, Mode: C/Bit parity, Parent: None
Device flags   : Present Running
Interface flags: Point-To-Point SNMP-Traps
Link flags     : None
Hold-times     : Up 0 ms, Down 0 ms
Last flapped   : 2002-10-04 10:24:18 PDT (01:40:40 ago)
Statistics last cleared: 2002-10-04 11:47:27 PDT (00:17:31 ago)
Traffic statistics:
Input bytes   : 0          0 bps
Output bytes  : 0          0 bps
Input packets : 0          0 pps
Output packets: 0          0 pps
Input errors:
Errors: 0, Drops: 0, Framing errors: 0, Bucket drops: 0,
Policed discards: 0, L3 incompletes: 0, L2 channel errors: 0,
L2 mismatch timeouts: 0, HS link CRC errors: 0, SRAM errors: 0
Output errors:
Carrier transitions: 0, Errors: 0, Drops: 0, Aged packets: 0
Active alarms   : None
Active defects  : None
DS3 media:
Seconds      Count  State
PLL Lock     0       0 OK
Reframing    0       0 OK
AIS          0       0 OK
LOF          0       0 OK
LOS          0       0 OK
IDLE         0       0 OK
YELLOW       0       0 OK
BPV          0       0
EXZ          0       0
LCV          0       0
PCV          0       0
CCV          0       0
LES          0
PES          0
PSES         0
CES          0
CSES         0
SEFS         0
HDLC configuration:
Policing bucket: Disabled
Shaping bucket : Disabled
Giant threshold: 0, Runt threshold: 0
DSU configuration:
Compatibility mode: None, Scrambling: Disabled, Subrate: Disabled
FEAC loopback: Inactive, Response: Disabled, Count: 0
DS-3 BERT configuration:
BERT time period: 10 seconds, Elapsed: 0 seconds
Algorithm: 2^3 - 1, Pseudorandom (1), Induced error rate: 10e-0
Packet Forwarding Engine configuration:
Destination slot: 0 (0x00)
CoS transmit queue      Bandwidth      Buffer Priority  Limit
                        %      bps      %      bytes
0 best-effort           95    42499200 95        0    low    none
3 network-control       5     2236800  5         0    low    none

```

To view information about a channelized T1 channel, include the **ct1-fpc/pic/port:channel** option with the **show interfaces** command:

```

user@RouterA> show interfaces extensive ct1-0/0/1:2
Physical interface: ct1-0/0/1:2, Enabled, Physical link is Up
  Interface index: 175, SNMP ifIndex: 1505, Generation: 174
  Link-level type: Controller, MTU: 1504, Clocking: Internal, Speed: T1,
  Loopback: None, FCS: 16, Framing: ESF, Parent: ct3-0/0/1 (Index 32)
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link flags     : None
  Hold-times     : Up 0 ms, Down 0 ms
  Last flapped   : 2002-10-04 12:08:23 PDT (00:05:57 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes   :                0                0 bps
    Output bytes  :                0                0 bps
    Input packets :                0                0 pps
    Output packets:                0                0 pps
  Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Policed discards: 0,
    L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0,
    HS link CRC errors: 0, SRAM errors: 0
  Output errors:
    Carrier transitions: 0, Errors: 0, Drops: 0, Aged packets: 0
  DS1 alarms   : None
  DS1 defects  : AIS, LOF
  T1 media:
    Seconds      Count  State
    SEF          0       0 OK
    BEE          1       1 OK
    AIS          355      1 Defect Active
    LOF          355      1 Defect Active
    LOS          0       0 OK
    YELLOW       0       0 OK
    BPV          0       0
    EXZ          0       0
    LCV          0       0
    PCV          0       0
    CS           0       0
    LES          355      0
    ES           355      0
    SES          355      0
    SEFS         355      0
    BES          0       0
    UAS          0       0
  HDLC configuration:
    Policing bucket: Disabled
    Shaping bucket  : Disabled
    Giant threshold: 1514, Runt threshold: 0
    Timeslots      : All active
    Line encoding: B8ZS, Byte encoding: Nx64K
    Buildout       : 0 to 132 feet
    Data inversion: Disabled
  DS1 BERT configuration:
    BERT time period: 10 seconds, Elapsed: 0 seconds
    Induced Error rate: 10e-0, Algorithm: 2^15 - 1, 0.151, Pseudorandom (9)
  Packet Forwarding Engine configuration:
    Destination slot: 0 (0x00)
    CoS transmit queue      Bandwidth      Buffer Priority  Limit
                             %      bps      %      bytes
    0 best-effort           95      1459200  95       0      low      none
    3 network-control        5       76800   5       0      low      none

```

To view information about an NxDSO interface, include the **ds-fpc/pic/port:channel** option with the **show interfaces** command. In this case, the speed is 640 Kbps because this channel contains 10 DSOs ( $64 \times 10 = 640$ ).

```
user@RouterA> show interfaces extensive ds-0/0/1:2:1
Physical interface: ds-0/0/1:2:1, Enabled, Physical link is Up
  Interface index: 176, SNMP ifIndex: 1563, Generation: 175
  Link-level type: PPP, MTU: 1504, Clocking: Internal, Speed: 640kbps,
  Loopback: None, FCS: 16, Parent: ct1-0/0/1:2 (Index 175)
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link flags     : Keepalives
  Hold-times     : Up 0 ms, Down 0 ms
  Last flapped   : 2002-10-04 12:09:06 PDT (00:05:54 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes  :                0                0 bps
    Output bytes :                0                0 bps
    Input packets:                0                0 pps
    Output packets:              0                0 pps
  Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Policed discards: 0,
    L3 incompletes: 0, L2 channel errors: 0, L2 mismatch timeouts: 0,
    HS link CRC errors: 0
  Output errors:
    Carrier transitions: 1, Errors: 0, Drops: 0, Aged packets: 0
  Queue counters:      Queued packets  Transmitted packets  Dropped packets

    0 best-effort                0                0                0
    1 expedited-fo                0                0                0
    2 assured-forw                0                0                0
    3 network-cont                0                0                0


  Interface transmit queues:
        B/W  WRR      Packets      Bytes      Drops      Errors
  Queue0    0    0          0          0          0          0
  Queue1    0    0          0          0          0          0
  HDLC configuration:
    Giant threshold: 0, Runt threshold: 0
    Timeslots      : 1-10
    Byte encoding: Nx64K, Data inversion: Disabled
  Packet Forwarding Engine configuration:
    Destination slot: 0, PLP byte: 4 (0x10)
    CoS transmit queue      Bandwidth      Buffer Priority  Limit
                             %      bps      %      bytes
    0 best-effort            95      608000  95      0      low  none
    3 network-control        5       32000   5       0      low  none
```

#### Related Documentation

- [Channelized IQ Interfaces Solutions Page](#)
- [Roadmap for Channelized IQ Interface Configuration Examples on page 29](#)
- [Roadmap for Configuring Channelized IQ Interfaces on page 17](#)

## Example: Channelized T1 IQ Interface Configuration

Figure 7: Channelized T1 IQ Interface Example

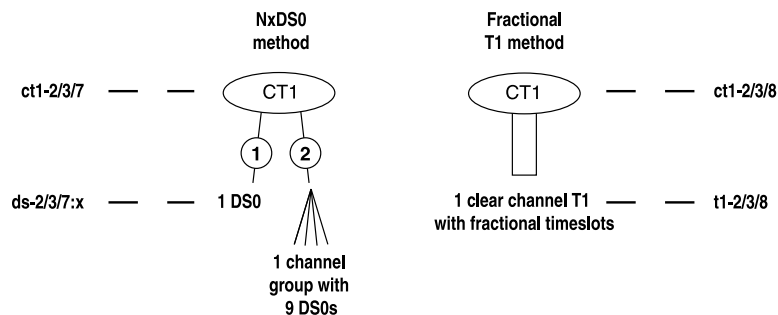

The following example shows two ways to configure a channelized T1 IQ interface. Figure 7 on page 76 shows a fractional T1 method and the NxDS0 method seen previously in the complex OC12 configuration example (see “Example: Complex Configuration for a Channelized OC12 IQ Interface” on page 36). The NxDS0 method breaks the channelized T1 IQ interface into discrete DS0 blocks, whereas the fractional method creates a clear channel T1 that is segmented by time slots.

To configure NxDS0 channels, include the **partition** statement at the **[edit interfaces ct1-fpc/pic/port]** hierarchy level. Include the **timeslots** and **interface-type ds** options to create the desired number of NxDS0 interfaces in time slots 1 through 24.

To configure a clear channel T1 on a channelized T1 IQ interface, include the **no-partition** statement with the **interface-type t1** option at the **[edit interfaces ct1-fpc/pic/port]** hierarchy level. After you commit this configuration, you can create a fractional T1 on the clear channel T1 interface. To do so, include the **timeslots** statement at the **[edit interfaces t1-fpc/pic/port t1-options]** hierarchy level and specify the number of DS0 blocks to be allowed in the fractional T1 interface. The minimum number of 64-Kbps DS0 blocks you can configure is 1 and the maximum is 24.

Usually, you configure loopback statements at the controller level for all IQ-based channelized interfaces. One exception for channelized T1 IQ interfaces is that you must configure a payload loopback on a T1 IQ interface instead of the controller-level channelized T1 IQ interface. To configure, include the **payload** option at the **[edit interfaces t1-fpc/pic/port t1-options loopback]** hierarchy level.

```
Router A—NxDS0 Method
[edit]
interfaces {
  ct1-2/3/7 {
    partition 1 timeslots 10 interface-type ds; # Creates NxDS0 channel ds-2/3/7:1.
    partition 2 timeslots 1-9 interface-type ds; # Creates a channel group with
  } # 9 NxDS0s.
  ds-2/3/7:1 {
    unit 0 {
      family inet {
        address 10.25.1.2/24;
      }
    }
  }
}
```

```

ds-2/3/7:2 {
  unit 0 {
    family inet {
      address 10.25.2.2/24;
    }
  }
}

```

#### Router A—Fractional T1 Method

```

[edit]
interfaces {
  ct1-2/3/8 {
    no-partition interface-type t1; # This creates a single T1 channel: t1-2/3/8.
  }
  t1-2/3/8 {
    t1-options {
      timeslots 1-2; # This statement enables only 2 of the 24 NxDS0 time slots
                    # available on t1-2/3/8.
    }
    unit 0 {
      family inet {
        address 10.255.126.2/24;
      }
    }
  }
}

```

### Verifying Your Work

To verify correct operation of a channelized T1 IQ interface, use the following commands:

- **show interfaces**
- **show interfaces controller**

To view the interface names of the physical channelized T1 IQ interface and the resulting interfaces configured on the channelized IQ interface, use the **show interfaces controller** command:

```

user@RouterA> show interfaces controller ct1-2/3/7
Controller                               Admin Link
ct1-2/3/7                                up      up
      ds-2/3/7:1                          up      up
      ds-2/3/7:2                          up      up
# ct1-2/3/7 is the physical channelized T1 IQ interface, and ds-2/3/7:1 and
ds-2/3/7:2 are the resulting N xDS0 interfaces.
user@RouterA> show interfaces controller ct1-2/3/8
Controller                               Admin Link
ct1-2/3/8                                up      up
t1-2/3/8                                  up      up
# ct1-2/3/8 is the physical channelized T1 IQ interface, and t1-2/3/8 is the
resulting T1 interface.

```

To view information about the physical channelized interface, include the **ct1-fpc/pic/port** option with the **show interfaces** command:

```

user@RouterA> show interfaces ct1-2/3/7

```

```
Physical interface: ct1-2/3/7, Enabled, Physical link is Up
  Interface index: 18, SNMP ifIndex: 1128, Generation: 27
  Link-level type: Controller, Clocking: Internal, Speed: T1,
  Loopback: None, Framing: ESF, Parent: None
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps 16384
  Link flags     : None
  Hold-times     : Up 0 ms, Down 0 ms
  CoS queues     : 4 supported
  Last flapped   : 2005-08-01 18:00:12 PDT (1d 00:31 ago)
  Input rate     : 0 bps (0 pps)
  Output rate    : 0 bps (0 pps)
  Statistics last cleared: Never
  DS1 alarms    : None
  DS1 defects    : None
  Line encoding  : B8ZS
```

```
user@RouterA> show interfaces ct1-2/3/8
```

```
Physical interface: ct1-2/3/8, Enabled, Physical link is Up
  Interface index: 25, SNMP ifIndex: 1134, Generation: 28
  Link-level type: Controller, Clocking: Internal, Speed: T1,
  Loopback: None, Framing: ESF, Parent: None
  FCS: 16, Framing: G704, Parent: None
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps 16384
  Link flags     : None
  Hold-times     : Up 0 ms, Down 0 ms
  CoS queues     : 4 supported
  Last flapped   : 2005-08-01 18:00:11 PDT (1d 00:30 ago)
  Input rate     : 0 bps (0 pps)
  Output rate    : 0 bps (0 pps)
  Statistics last cleared: Never
  DS1 alarms    : None
  DS1 defects    : None
  Line encoding  : B8ZS
```

To view information about an NxDS0 interface, include the **ds-fpc/pic/port:channel** option with the **show interfaces** command:

```
user@RouterA> show interfaces ds-2/3/7:1 detail
```

```
Physical interface: ds-2/3/7:1, Enabled, Physical link is Up
  Interface index: 73, SNMP ifIndex: 1202, Generation: 325
  Link-level type: PPP, MTU: 1504, Clocking: Internal, Speed: 64kbps, Loopback: None,
  FCS: 16, Parent: ct1-2/3/7 Interface index 18
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps 16384
  Link flags     : Keepalives
  Hold-times     : Up 0 ms, Down 0 ms
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive statistics:
    Input : 11 (last seen 00:00:02 ago)
    Output: 10 (last sent 00:00:06 ago)
  LCP state: Opened
  NCP state: inet: Opened, inet6: Opened, iso: Opened, mpls: Not-configured
  CHAP state: Not-configured
  CoS queues     : 4 supported
  Last flapped   : 2005-08-03 12:30:37 PDT (00:10:26 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes :          559          56 bps
    Output bytes :          656          56 bps
```



```

Input packets:          33          0 pps
Output packets:         36          0 pps
Queue counters:         Queued packets  Transmitted packets  Dropped packets
0 best-effort           40              40              0
1 expedited-fo           0              0              0
2 assured-forw           0              0              0
3 network-cont           0              0              0
Logical interface ds-2/3/7:1.0 (Index 36) (SNMP ifIndex 1266) (Generation 153)
Flags: Point-To-Point SNMP-Traps Encapsulation: PPP
Protocol inet, MTU: 1500, Generation: 352, Route table: 0
Flags: None
Addresses, Flags: Is-Preferred Is-Primary
Destination: 10.25.1/24, Local: 10.25.1.2, Broadcast: 10.25.1.255,
Generation: 445
Protocol iso, MTU: 1500, Generation: 353, Route table: 0
Flags: Is-Primary
Protocol inet6, MTU: 1500, Generation: 354, Route table: 0
Flags: Is-Primary
Addresses, Flags: Is-Preferred
Destination: fe80::/64, Local: fe80::2a0:a5ff:fe3d:ac6, Broadcast: Unspecified,
Generation: 446
Addresses, Flags: Is-Preferred Is-Primary
Destination: feee::10:25:1:0/126, Local: feee::10:25:1:2,
Broadcast: Unspecified, Generation: 448

```

To view information about a T1 or fractional T1 interface, include the **t1-*fpc/pic* /port** option with the **show interfaces** command. The **Speed:** field shows if the interface is a full T1(T1) or a fractional T1 (increments of 64 Kbps). In this case, **t1-2/3/8** is a fractional T1 using two 64-Kbps time slots for a total speed of 128 Kbps.

```

user@RouterA> show interfaces t1-2/3/8 detail
Physical interface: t1-2/3/8, Enabled, Physical link is Up
Interface index: 89, SNMP ifIndex: 1278, Generation: 341
Link-level type: PPP, MTU: 1504, Clocking: Internal, Speed: 128kbps,
Loopback: None, FCS: 16, Parent: ct1-2/3/8 Interface index 25
Device flags   : Present Running
Interface flags: Point-To-Point SNMP-Traps 16384
Link flags     : Keepalives
Hold-times     : Up 0 ms, Down 0 ms
Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
Keepalive statistics:
  Input : 4 (last seen 00:00:05 ago)
  Output: 3 (last sent 00:00:09 ago)
LCP state: Opened
NCP state: inet: Opened, inet6: Not-configured, iso: Not-configured, mpls:
Not-configured
CHAP state: Not-configured
CoS queues   : 4 supported
Last flapped : 2005-08-03 12:30:37 PDT (01:17:36 ago)
Statistics last cleared: Never
Traffic statistics:
  Input bytes :          189          0 bps
  Output bytes :          478          0 bps
  Input packets:          13          0 pps
  Output packets:         28          0 pps
Queue counters:         Queued packets  Transmitted packets  Dropped packets
0 best-effort           28              28              0
1 expedited-fo           0              0              0

```

2 assured-forw	0	0	0
3 network-cont	0	0	0

DS1 alarms : None

DS1 defects : None

Logical interface t1-2/3/8.0 (Index 52) (SNMP ifIndex 1279) (Generation 169)

Flags: Point-To-Point SNMP-Traps Encapsulation: PPP

Protocol inet, MTU: 1500, Generation: 401, Route table: 0

Flags: None


Addresses, Flags: Is-Preferred Is-Primary

Destination: 10.255.126/24, Local: 10.255.126.2,

Broadcast: 10.255.126.255, Generation: 525

**Related Documentation**

- [Channelized IQ Interfaces Solutions Page](#)
- [Roadmap for Channelized IQ Interface Configuration Examples on page 29](#)
- [Roadmap for Configuring Channelized IQ Interfaces on page 17](#)

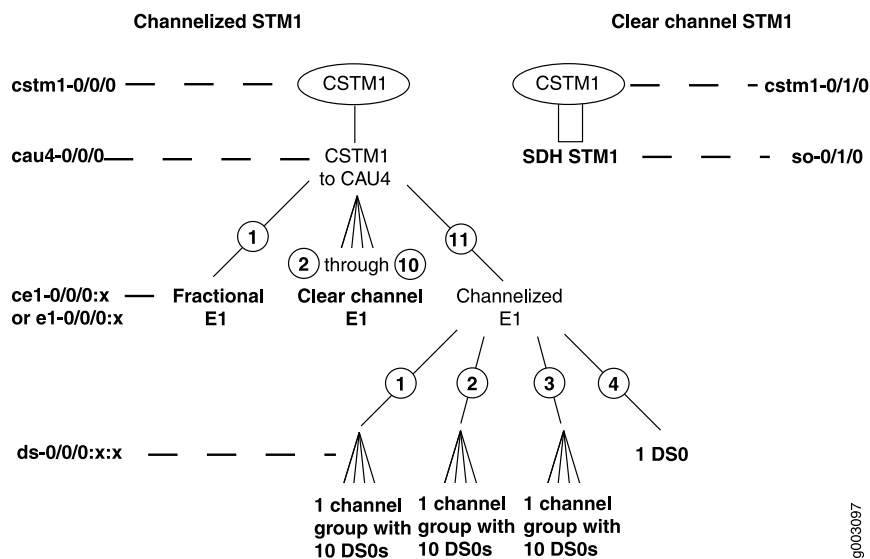**Example: Channelized STM1 IQ Interface Configuration****Figure 8: Channelized STM1 IQ Interface Example**

This example shows how to configure a channelized STM1 IQ interface on M-series or T-series routing platforms. [Figure 8 on page 80](#) shows the breakdown of one channelized STM1 IQ interface into a variety of channels and the conversion of the second interface into a clear channel STM1.

For the first interface, you must first convert the STM1 interface into a channelized Administrative Unit 4 (AU-4) interface with the **no-partition** and **interface-type cau-4** statements at the `[edit interfaces cstm1-fpc/pic/port]` hierarchy level. You must specify KLM or ITU-T AU-4 formatting with the **vtmapping** statement at the `[edit interfaces cau4-fpc/pic/port sonet-options]` hierarchy level. From the channelized AU-4 interface,

you can create E1 channels or channelized E1 channels. The channelized E1 channels can be further broken into DS0 time slots.

To create E1 channels, include the **partition** statement at the **[edit interfaces cau4-fpc/pic/port]** hierarchy level with the **interface-type e1** option. To create channelized E1 channels, include the **partition** statement at the **[edit interfaces cau4-fpc/pic/port]** hierarchy level with the **interface-type ce1** option.

After you have established a channelized E1 channel, you can split it into a maximum of 31 NxDS0 channels. To create the desired number of NxDS0 channels, include the **partition** statement with the **timeslots** and **interface-type ds** options at the **[edit interfaces ce1-fpc/pic/port:channel]** hierarchy level. Time slot 1 is reserved in an NxDS0-based channelized E1 channel, so you can use time slots 2 through 32.

To create an NxDS0 channel group, include a range of time slots after the **timeslots** option.

You can also create fractional E1 interfaces on a channelized STM1 IQ interface. To configure a fractional E1 interface, include the **partition** statement at the **[edit interfaces cau4-fpc/pic/port]** hierarchy level and select the **interface-type e1** option. After you commit this part of the configuration, a clear channel E1 interface is established. You can configure standard E1 options on this interface. To fractionalize the E1 interface, include the **timeslots** statement at the **[edit interfaces e1-fpc/pic/port e1-options]** hierarchy level. Time slot 1 is reserved in a fractional E1 channel, so you can use time slots 2 through 32.

In the second interface shown in [Figure 8 on page 80](#), you convert the channelized STM1 IQ interface into a clear channel STM1 interface. To configure, include the **no-partition** and **interface-type so** statements at the **[edit interfaces cstml-fpc/pic/port]** hierarchy level.

```
[edit]
interfaces {
  cau4-0/0/0 {
    partition 1-10 interface-type e1; # Creates interfaces e1-0/0/0:1 through :10.
    partition 11 interface-type ce1; # Creates a single channelized E1 interface:
    sonet-options {          # e1-0/0/0:11.
      vtmapping itu-t; # This selects ITU-T as the VT mapping frame format.
    }
  }
  cstml-0/0/0 {
    no-partition interface-type cau4; # Creates a channelized AU-4 interface:
    # cau4-0/0/0.
    e1-0/0/0:1 { # Channel e1-0/0/0:1 is a fractional E1 interface.
      encapsulation ppp;
      e1-options {
        timeslots 2-21; # Setting time slots on an E1 channel makes a fractional E1.
      }
    }
    unit 0 {
      family inet {
        address 10.133.0.1/30;
      }
    }
  }
  e1-0/0/0:2 { # Channels e1-0/0/0:2 through :10 are standard E1 interfaces.
```


```

encapsulation ppp;
unit 0 {
    family inet {
        address 10.133.0.5/30;
    }
}
...
e1-0/0/0:10 {
    encapsulation ppp;
    unit 0 {
        family inet {
            address 10.133.0.37/30;
        }
    }
}
ce1-0/0/0:11 { # Channel ce1-0/0/0:11 is a channelized E1 interface.
    partition 1 timeslots 2-11 interface-type ds; # These statements
    partition 2 timeslots 12-21 interface-type ds; # create channel groups.
    partition 3 timeslots 22-31 interface-type ds;
    partition 4 timeslots 32 interface-type ds; # This statement creates a single NXDSO
    channel.
}
ds-0/0/0:11:1 { # This channel group contains 10 DS0s.
    unit 0 {
        family inet {
            address 10.134.1.1/30;
        }
    }
}
ds-0/0/0:11:2 { # This channel group contains 10 DS0s.
    unit 0 {
        family inet {
            address 10.134.2.1/30;
        }
    }
}
ds-0/0/0:11:3 { # This channel group contains 10 DS0s.
    unit 0 {
        family inet {
            address 10.134.3.1/30;
        }
    }
}
ds-0/0/0:11:4 { # Channel ds-0/0/0:11:4 is a standard DS0 interface.
    unit 0 {
        family inet {
            address 10.134.4.1/30;
        }
    }
}
}

```

Figure 9 on page 83 shows a visual representation of the E1-to-STM1 SDH mapping method used by Juniper Networks in its channelized STM1 IQ interface.

Figure 9: Channelized STM1 IQ Interface SDH Mapping Method

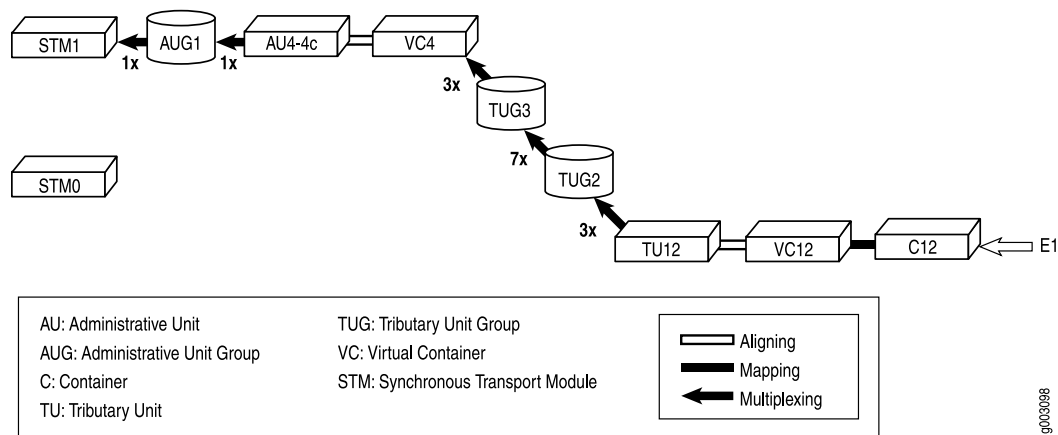

## Verifying Your Work

To verify correct operation of a channelized STM1 IQ interface, use the following commands:

- **show interfaces**
- **show interfaces controller**
- **show interfaces interval** (for channelized STM1, E1, and channelized E1 channels)

To view the interface names of the physical channelized STM1 IQ interface and the channels configured on this interface, use the **show interfaces controller** command:

```
user@router> show interfaces controller cstm1-0/0/0
Controller
cstm1-0/0/0
cau4-0/0/0
  e1-0/0/0:1
  e1-0/0/0:2
  e1-0/0/0:3
  e1-0/0/0:4
  e1-0/0/0:5
  e1-0/0/0:6
  e1-0/0/0:7
  e1-0/0/0:8
  e1-0/0/0:9
  e1-0/0/0:10
  ce1-0/0/0:11
    ds-0/0/0:11:1
    ds-0/0/0:11:2
    ds-0/0/0:11:3
    ds-0/0/0:11:4
```

Controller	Admin	Link
cstm1-0/0/0	up	up
cau4-0/0/0	up	up
e1-0/0/0:1	up	up
e1-0/0/0:2	up	up
e1-0/0/0:3	up	up
e1-0/0/0:4	up	up
e1-0/0/0:5	up	up
e1-0/0/0:6	up	up
e1-0/0/0:7	up	up
e1-0/0/0:8	up	up
e1-0/0/0:9	up	up
e1-0/0/0:10	up	up
ce1-0/0/0:11	up	up
ds-0/0/0:11:1	up	up
ds-0/0/0:11:2	up	up
ds-0/0/0:11:3	up	up
ds-0/0/0:11:4	up	up

To view information about the physical channelized interface, include the **cstm1-fpc/pic/port** option with the **show interfaces** command:

```
user@router> show interfaces cstm1-0/0/0
Physical interface: cstm1-0/0/0, Enabled, Physical link is Up
Interface index: 146, SNMP ifIndex: 35
Link-level type: Controller, Clocking: Internal, SDH mode, Speed: OC3,
Loopback: None, Parent: None
```

```
Device flags    : Present Running
Interface flags: Point-To-Point SNMP-Traps
Link flags      : None
Last flapped    : 2003-02-06 15:01:56 PST (07:15:06 ago)
SDH alarms      : None
SDH defects     : None
```

To view information about the channelized AU-4 channel, include the **cau4-fpc/pic/port** option with the **show interfaces** command:

```
user@router> show interfaces cau4-0/0/0
Physical interface: cau4-0/0/0, Enabled, Physical link is Up
  Interface index: 147, SNMP ifIndex: 36
  Link-level type: Controller, Clocking: Internal, SDH mode, Speed: OC3,
Loopback: None, Parent: cstm1-0/0/0 Interface index 146
  Device flags    : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link flags      : None
  Last flapped    : 2003-02-06 19:36:31 PST (02:40:42 ago)
  SDH alarms      : None
  SDH defects     : None
```

To view information about an E1 channel, include the **e1-fpc/pic/port:channel** option with the **show interfaces** command. In this case, the fractional E1 appears as channel **e1-0/0/0:1** and the normal E1 appears as channel **e1-0/0/0:2**.

```
user@router> show interfaces e1-0/0/0:1
Physical interface: e1-0/0/0:1, Enabled, Physical link is Up
  Interface index: 148, SNMP ifIndex: 33
  Link-level type: PPP, MTU: 1504, Clocking: Internal, Speed: 1280kbps ,
# Because the fractional E1 uses 20 time slots, 20 x 64 Kbps = 1280 Kbps.
Loopback: None, FCS: 16, Framing: G704,
  Parent: cau4-0/0/0 Interface index 147
  Device flags    : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link flags      : Keepalives
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive: Input: 1055 (00:00:03 ago), Output: 1059 (00:00:06 ago)
  LCP state: Opened
  NCP state: inet: Opened, inet6: Not-configured, iso: Not-configured,
mpls: Not-configured
  CHAP state: Not-configured
  Last flapped    : Never
  Input rate      : 16 bps (0 pps)
  Output rate     : 16 bps (0 pps)
  DS1 alarms      : None
  DS1 defects     : None
  SDH alarms      : None
  SDH defects     : None
Logical interface e1-0/0/0:1.0 (Index 67) (SNMP ifIndex 169)
  Flags: Point-To-Point SNMP-Traps Encapsulation: PPP
  Bandwidth: 0
  Protocol inet, MTU: 1500
  Flags: None
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 10.133.0.0/30, Local: 10.133.0.1
```

```
user@router> show interfaces e1-0/0/0:2
Physical interface: e1-0/0/0:2, Enabled, Physical link is Up
  Interface index: 149, SNMP ifIndex: 34
  Link-level type: PPP, MTU: 1504, Clocking: Internal, Speed: E1,
```

```

Loopback: None, FCS: 16, Framing: G704,
Parent: cau4-0/0/0 Interface index 147
Device flags : Present Running
Interface flags: Point-To-Point SNMP-Traps
Link flags : Keepalives
Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
Keepalive: Input: 917 (00:00:05 ago), Output: 915 (00:00:01 ago)
LCP state: Opened
NCP state: inet: Opened, inet6: Not-configured, iso: Not-configured,
mpls: Not-configured
CHAP state: Not-configured
Last flapped : Never
Input rate : 16 bps (0 pps)
Output rate : 16 bps (0 pps)
DS1 alarms : None
DS1 defects : None
SDH alarms : None
SDH defects : None
Logical interface e1-0/0/0:2.0 (Index 68) (SNMP ifIndex 170)
Flags: Point-To-Point SNMP-Traps Encapsulation: PPP
Bandwidth: 0
Protocol inet, MTU: 1500
Flags: None
Addresses, Flags: Is-Preferred Is-Primary
Destination: 10.133.0.4/30, Local: 10.133.0.5

```

To view information about a CE1 channel, include the **ce1-fpc/pic/port:channel** option with the **show interfaces** command:

```

user@router> show interfaces ce1-0/0/0:11
Physical interface: ce1-0/0/0:11, Enabled, Physical link is Up
Interface index: 169, SNMP ifIndex: 288
Link-level type: Controller, Clocking: Internal, Speed: E1, Loopback: None,
Framing: G704, Parent: cau4-0/0/0 Interface index 147
Device flags : Present Running
Interface flags: Point-To-Point SNMP-Traps
Link flags : None
Last flapped : 2003-02-06 22:05:23 PST (00:13:45 ago)
DS1 alarms : None
DS1 defects : None
SDH alarms : None
SDH defects : None

```

To view information about an NxDS0 interface, include the **ds-fpc/pic/port:channel:channel** option with the **show interfaces** command. For channel group **ds-0/0/0:11:1**, the speed of the link is 640 Kbps because it contains 10 DS0s ( $64 \times 10 = 640$ ). For single DS0 channel **ds-0/0/0:11:4**, the speed of the link is the standard 64 Kbps.

```

user@router> show interfaces ds-0/0/0:11:1
Physical interface: ds-0/0/0:11:1, Enabled, Physical link is Up
Interface index: 170, SNMP ifIndex: 289
Link-level type: PPP, MTU: 1504, Clocking: Internal, Speed: 640kbps,
Loopback: Illegal, FCS: 16,
Parent: ce1-0/0/0:11 Interface index 169
Device flags : Present Running
Interface flags: Point-To-Point SNMP-Traps
Link flags : Keepalives
Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
Keepalive: Input: 0 (never), Output: 0 (never)
LCP state: Conf-req-sent
NCP state: inet: Down, inet6: Not-configured, iso: Not-configured, mpls:

```

```
Not-configured
  CHAP state: Not-configured
  Last flapped   : Never
  Input rate     : 0 bps (0 pps)
  Output rate    : 0 bps (0 pps)
  DSO BERT configuration:
    BERT time period: 10 seconds, Elapsed: 0 seconds
    Induced Error rate: 10e-0, Algorithm: 2^15 - 1, 0.151, Pseudorandom (9)
  Logical interface ds-0/0/0:11:1.0 (Index 77) (SNMP ifIndex 290)
  Flags: Hardware-Down Point-To-Point SNMP-Traps Encapsulation: PPP
  Bandwidth: 0
  Protocol inet, MTU: 1500
  Flags: Protocol-Down
  Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
    Destination: 10.134.1.0/30, Local: 10.134.1.1
user@router> show interfaces ds-0/0/0:11:4
Physical interface: ds-0/0/0:11:4, Enabled, Physical link is Up
  Interface index: 173, SNMP ifIndex: 295
  Link-level type: PPP, MTU: 1504, Clocking: Internal, Speed: 64kbps, Loopback:
Illegal, FCS: 16,
  Parent: ce1-0/0/0:11 Interface index 169
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link flags     : Keepalives
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive: Input: 0 (never), Output: 0 (never)
  LCP state: Conf-req-sent
  NCP state: inet: Down, inet6: Not-configured, iso: Not-configured, mpls:
Not-configured
  CHAP state: Not-configured
  Last flapped   : Never
  Input rate     : 0 bps (0 pps)
  Output rate    : 0 bps (0 pps)
  DSO BERT configuration:
    BERT time period: 10 seconds, Elapsed: 0 seconds
    Induced Error rate: 10e-0, Algorithm: 2^15 - 1, 0.151, Pseudorandom (9)
  Logical interface ds-0/0/0:11:4.0 (Index 80) (SNMP ifIndex 296)
  Flags: Hardware-Down Point-To-Point SNMP-Traps Encapsulation: PPP
  Bandwidth: 0
  Protocol inet, MTU: 1500
  Flags: Protocol-Down
  Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
    Destination: 10.134.4.0/30, Local: 10.134.4.1
```


**Related  
Documentation**

- [Channelized IQ Interfaces Solutions Page](#)
- [Roadmap for Channelized IQ Interface Configuration Examples on page 29](#)
- [Roadmap for Configuring Channelized IQ Interfaces on page 17](#)



## Example: Channelized E1 IQ Interface Configuration

Figure 10: Channelized E1 IQ Interface Example

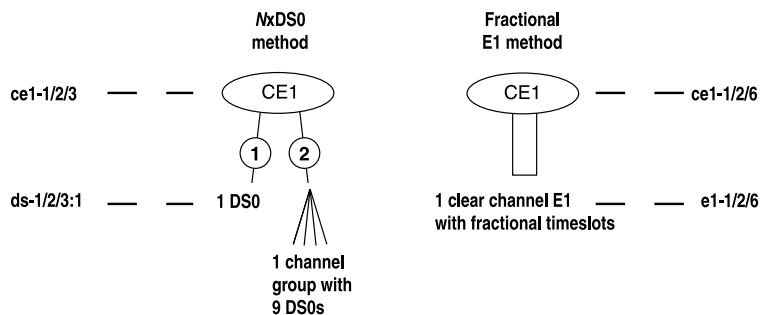

This example shows two ways to configure a channelized E1 IQ interface. [Figure 10 on page 87](#) shows a fractional E1 method and the NxDS0 method seen previously in the complex OC12 configuration example (see “[Example: Complex Configuration for a Channelized OC12 IQ Interface](#)” on page 36). The NxDS0 method breaks the channelized E1 IQ interface into discrete DS0 blocks, whereas the fractional method creates a clear channel E1 that is segmented by time slots.

To configure NxDS0 channels, include the **partition** statement at the **[edit interfaces ce1-fpc/pic/port]** hierarchy level. Include the **timeslots** and **interface-type ds** options to create the desired number of NxDS0 interfaces in time slots 2 through 32.

To configure a fractional E1 on a channelized E1 IQ interface, include the **no-partition** statement at the **[edit interfaces ce1-fpc/pic/port]** hierarchy level. After you commit this configuration, configure standard E1 options on the clear channel E1 interface. Include the **timeslots** statement at the **[edit interfaces e1-fpc/pic/port e1-options]** hierarchy level. Time slot 1 is reserved; use time slots 2 through 32.

### Router A—NxDS0 Method

```
[edit]
interfaces {
  ce1-1/2/3 {
    partition 1 timeslots 11 interface-type ds; # Creates NxDS0 channel ds-1/2/3:1.
    partition 2 timeslots 2-10 interface-type ds; # Creates a channel group with
  } # 9 NxDS0s.
  ds-1/2/3:1 {
    unit 0 {
      family inet {
        address 10.25.1.2/24;
      }
    }
  }
  ds-1/2/3:2 {
    unit 0 {
      family inet {
        address 10.25.2.2/24;
      }
    }
  }
}
```

```

    }
  }
}

Router A—Fractional E1
Method
[edit]
interfaces {
  ce1-1/2/6 {
    no-partition interface-type e1; # This creates a single E1 channel: e1-1/2/6.
  }
  e1-1/2/6 {
    e1-options {
      timeslots 2-3; # This statement enables only 2 of the 31 NxDS0 time slots
    } # available on e1-1/2/6. You can use time slots 2 through 32.
    unit 0 {
      family inet {
        address 10.255.126.2/24;
      }
    }
  }
}
}

```

## Verifying Your Work

To verify correct operation of a channelized E1 IQ interface, use the following commands:

- **show interfaces**
- **show interfaces controller**
- **show interfaces interval** (for E1 and channelized E1 channels)

To view the interface names of the physical channelized E1 IQ interface and the resulting interfaces configured on the channelized IQ interface, use the **show interfaces controller** command:

```

user@RouterA> show interfaces controller ce1-1/2/3
Controller
ce1-1/2/3
# This is the physical channelized E1 IQ interface.
ds-1/2/3:1
ds-1/2/3:2
# These are the resulting N xDS0 interfaces.
user@RouterA> show interfaces controller ce1-1/2/6
Controller
ce1-1/2/6
# This is the physical channelized E1 IQ interface.
e1-1/2/6
# This is the resulting E1 interface.

```

	Admin	Link
	up	up
	up	up
	up	up

To view information about the physical channelized interface, include the **ce1-fpc/pic/port** option with the **show interfaces** command:

```

user@RouterA> show interfaces ce1-1/2/3
Physical interface: ce1-1/2/3, Enabled, Physical link is Up
Interface index: 18, SNMP ifIndex: 1128
Link-level type: Controller, MTU: 1504, Clocking: Internal, Speed: E1,
Loopback: None, FCS: 16, Framing: G704, Parent: None
Device flags : Present Running
Interface flags: Point-To-Point SNMP-Traps

```

```

Link flags      : None
Last flapped    : 2002-10-04 17:52:51 PDT (00:32:57 ago)
Input rate      : 0 bps (0 pps)
Output rate     : 0 bps (0 pps)
DS1 alarms      : None
DS1 defects     : None
user@RouterA> show interfaces ce1-1/2/6
Physical interface: ce1-1/2/6, Enabled, Physical link is Up
  Interface index: 25, SNMP ifIndex: 1134
  Link-level type: Controller, MTU: 1504, Clocking: Internal, Speed: E1, Loopback:
  None,
  FCS: 16, Framing: G704, Parent: None
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link flags     : None
  Last flapped   : 2002-10-04 17:52:51 PDT (00:34:49 ago)
  Input rate     : 0 bps (0 pps)
  Output rate    : 0 bps (0 pps)
  DS1 alarms     : None
  DS1 defects    : None

```

To view information about an NxDSO interface, include the **ds-fpc/pic/port:channel** option with the **show interfaces** command:

```

user@RouterA> show interfaces ds-1/2/3:1 detail

Physical interface: ds-1/2/3:1, Enabled, Physical link is Up
  Interface index: 73, SNMP ifIndex: 1202, Generation: 325
  Link-level type: PPP, MTU: 1504, Clocking: Internal, Speed: 64kbps, Loopback: None,
  FCS: 16, Parent: ce1-1/2/3 (Index 18)
  Device flags   : Present Running
  Interface flags: Point-To-Point SNMP-Traps
  Link flags     : Keepalives
  Hold-times     : Up 0 ms, Down 0 ms
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive statistics:
    Input : 11 (last seen 00:00:02 ago)
    Output: 10 (last sent 00:00:06 ago)
  LCP state: Opened
  NCP state: inet: Opened, inet6: Opened, iso: Opened, mpls: Not-configured
  CHAP state: Not-configured
  Last flapped   : 2002-10-04 18:24:32 PDT (00:01:46 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes   : 559          56 bps
    Output bytes  : 656          56 bps
    Input packets : 33           0 pps
    Output packets: 36           0 pps
  Queue counters:
    Queued packets  Transmitted packets  Dropped packets
    0 best-effort   40                40                0
    1 expedited-fo  0                 0                 0
    2 assured-forw  0                 0                 0
    3 network-cont  0                 0                 0
  Logical interface ds-1/2/3:1.0 (Index 36) (SNMP ifIndex 1266) (Generation 153)
  Flags: Point-To-Point SNMP-Traps Encapsulation: PPP
  Protocol inet, MTU: 1500, Generation: 352, Route table: 0
  Flags: None
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 10.25.1/24, Local: 10.25.1.2, Broadcast: Unspecified,
    Generation: 445
  Protocol iso, MTU: 1500, Generation: 353, Route table: 0

```

```

Flags: Is-Primary
Protocol inet6, MTU: 1500, Generation: 354, Route table: 0
Flags: Is-Primary
Addresses, Flags: Is-Preferred
  Destination: fe80::/64, Local: fe80::2a0:a5ff:fe3d:ac6, Broadcast: Unspecified,
  Generation: 446
Addresses, Flags: Is-Preferred Is-Primary
  Destination: feee::10:25:1:0/126, Local: feee::10:25:1:2,
  Broadcast: Unspecified, Generation: 448

```

To view information about the fractional E1 interface, include the *e1-fpc/pic/port* option with the **show interfaces** command:

```

user@RouterA> show interfaces e1-1/2/6 detail
Physical interface: e1-1/2/6, Enabled, Physical link is Up
  Interface index: 89, SNMP ifIndex: 1278, Generation: 341
  Link-level type: PPP, MTU: 1504, Clocking: Internal, Speed: E1, Loopback:None,

FCS: 16, Framing: G704, Parent: ce1-1/2/6 (Index 25)
Device flags   : Present Running
Interface flags: Point-To-Point SNMP-Traps
Link flags     : Keepalives
Hold-times     : Up 0 ms, Down 0 ms
Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
Keepalive statistics:
  Input : 4 (last seen 00:00:05 ago)
  Output: 3 (last sent 00:00:09 ago)
LCP state: Opened
NCP state: inet: Opened, inet6: Not-configured, iso: Not-configured, mp1s:
Not-configured
CHAP state: Not-configured
Last flapped   : 2002-10-04 18:28:27 PDT (00:01:07 ago)
Statistics last cleared: Never
Traffic statistics:
  Input bytes   :           189           0 bps
  Output bytes  :           478           0 bps
  Input packets :            13           0 pps
  Output packets:            28           0 pps
Queue counters:      Queued packets  Transmitted packets  Dropped packets

  0 best-effort           28             28             0
  1 expedited-fo           0             0             0
  2 assured-forw           0             0             0
  3 network-cont           0             0             0

DS1  alarms   : None
DS1  defects  : None
DS1 BERT configuration:
  BERT time period: 10 seconds, Elapsed: 0 seconds
  Induced Error rate: 10e-0, Algorithm: Unknown (0)
Logical interface e1-1/2/6.0 (Index 52) (SNMP ifIndex 1279) (Generation 169)
  Flags: Point-To-Point SNMP-Traps Encapsulation: PPP
  Bandwidth: 0
  Protocol inet, MTU: 1500, Generation: 401, Route table: 0
  Flags: None
  Addresses, Flags: Is-Preferred Is-Primary
    Destination: 10.255.126/24, Local: 10.255.126.2, Broadcast: Unspecified,

```

Generation: 525

- Related Documentation**
- [Channelized IQ Interfaces Solutions Page](#)
  - [Roadmap for Channelized IQ Interface Configuration Examples on page 29](#)
  - [Roadmap for Configuring Channelized IQ Interfaces on page 17](#)

## Example: DLCI Class of Service on a Channelized IQ Interface Configuration

This example applies class of service at the logical interface level on a clear channel T3 interface derived from a channelized DS3 IQ interface. (For more information on configuring a channelized DS3 IQ interface, see [“Example: Channelized DS3 IQ Interface Configuration” on page 70.](#))

Configure a scheduler map, complete with the desired transmit rates, buffer sizes, and service classes. Once the scheduler map is ready, enable logical interface-level class of service with the **per-unit-scheduler** statement at the **[edit interfaces *interface-name*]** hierarchy level. Also, configure a DLCI for each logical interface with the **dcli *dcli-number*** statement at the **[edit interfaces *interface-name* unit *unit-number*]** hierarchy level. Finally, configure the logical interfaces for class of service with the **scheduler-map** and **shaping-rate** statements at the **[edit class-of-service interfaces *interface-name* unit *unit-number*]** hierarchy level. These statements specify which scheduler map to associate with each logical interface and how much bandwidth to reserve for the DLCI queues.

```
[edit]
interfaces {
  ct3-3/1/0 {
    no-partition interface-type t3; # This converts the channelized DS3 IQ
  }
  t3-3/1/0 {
    per-unit-scheduler; # This enables scheduling at the logical interface level.
    encapsulation frame-relay;
    unit 0 { # The logical interface where scheduler map sched-0 takes effect.
      dcli 100; # The DLCI affected by scheduler map sched-0.
      family inet {
        address 10.40.1.1/30;
      }
    }
    unit 1 { # The logical interface where scheduler map sched-1 takes effect.
      dcli 101; # The DLCI affected by scheduler map sched-1.
      family inet {
        address 10.40.2.1/30;
      }
    }
  }
}
class-of-service {
  interfaces {
    t3-3/1/0 { # This specifies the channel where the scheduled DLCI is located.
      unit 0 { # This specifies the logical interface for the first scheduled DLCI.
        scheduler-map sched-0; # This applies a scheduler map to the first DLCI.
```

```
        shaping-rate 10m; # This reserves bandwidth for scheduler map sched-0.
    }
    unit 1 { # This specifies the logical interface for the second scheduled DLCI.
        scheduler-map sched-1; # Applies a scheduler map to the second DLCI.
        shaping-rate 10m; # This reserves bandwidth for scheduler map sched-1.
    }
}
scheduler-maps {
    sched-0 { # This is where classes of service are associated with a scheduler.
        forwarding-class assured-forwarding scheduler af;
        forwarding-class best-effort scheduler be;
        forwarding-class expedited-forwarding scheduler ef;
    }
    sched-1 { # This is where classes of service are associated with a scheduler.
        forwarding-class assured-forwarding scheduler af-1;
        forwarding-class best-effort scheduler be-1;
        forwarding-class expedited-forwarding scheduler ef-1;
    }
}
schedulers {
    af {
        transmit-rate percent 10;
        buffer-size percent 10;
    }
    be {
        transmit-rate percent 20;
        buffer-size percent 20;
    }
    ef {
        transmit-rate percent 70;
        buffer-size percent 70;
    }
    af-1 {
        transmit-rate percent 10;
        buffer-size percent 10;
    }
    be-1 {
        transmit-rate percent 30;
        buffer-size percent 30;
    }
    ef-1 {
        transmit-rate percent 60;
        buffer-size percent 60;
    }
}
}
```

## Verifying Your Work

To verify correct operation of class-of-service schedulers on a channelized IQ interface, use the following commands:

- **show class-of-service forwarding-table**
- **show class-of-service interface**

```
user@router> show class-of-service interface t3-3/1/0
Physical interface: t3-3/1/0, Index: 169
Scheduler map: <default>, Index: 1
Logical interface: t3-3/1/0.0, Index: 68
  Object      Name      Type      Index
  Scheduler-map sched-0      11204
  Rewrite      exp-default  exp        2
  Classifier    ipprec-compatibility ip          5
Logical interface: t3-3/1/0.1, Index: 69
  Object      Name      Type      Index
  Scheduler-map sched-1      7038
  Rewrite      exp-default  exp        2
  Classifier    ipprec-compatibility ip          5
```

**Related  
Documentation**

- [Channelized IQ Interfaces Solutions Page](#)
- [Roadmap for Channelized IQ Interface Configuration Examples on page 29](#)
- [Roadmap for Configuring Channelized IQ Interfaces on page 17](#)





## PART 4

# Administration

- [Commands on page 97](#)



## CHAPTER 9

# Commands

## show class-of-service interface

<b>Syntax</b>	<code>show class-of-service interface</code> <code>&lt;interface-name&gt;</code>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 9.0 for EX Series switches. Forwarding class map information added in Junos OS Release 9.4. Command introduced in Junos OS Release 11.1 for the QFX Series.
<b>Description</b>	Display the logical and physical interface associations for the classifier, rewrite rules, and scheduler map objects.
<b>Options</b>	<code>none</code> —Display class-of-service (CoS) associations for all physical and logical interfaces.  <code>interface-name</code> —(Optional) Display CoS associations for the specified interface.
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show class-of-service interface (Physical) on page 99</a> <a href="#">show class-of-service interface (Logical) on page 99</a> <a href="#">show class-of-service interface (Gigabit Ethernet) on page 100</a>
<b>Output Fields</b>	<a href="#">Table 4 on page 98</a> describes the output fields for the <b>show class-of-service interface</b> command. Output fields are listed in the approximate order in which they appear.

**Table 4: show class-of-service interface Output Fields**

Field Name	Field Description
Physical interface	Name of a physical interface.
Index	Index of this interface or the internal index of this object.
Dedicated Queues	Status of dedicated queues configured on an interface. Supported on Trio MPC/MIC interfaces on MX Series routers only.
Queues supported	Number of queues you can configure on the interface.
Queues in use	Number of queues currently configured.
Total non-default queues created	Number of queues created in addition to the default queues. Supported on Trio MPC/MIC interfaces on MX Series routers.
Shaping rate	Maximum transmission rate on the physical interface. You can configure the shaping rate on the physical interface, or on the logical interface, but not both. Therefore, the <b>Shaping rate</b> field is displayed for the physical interface or the logical interface, but not both.
Scheduler map	Name of the output scheduler map associated with this interface.
Input shaping rate	For Gigabit Ethernet IQ2 PICs, maximum transmission rate on the input interface.

Table 4: show class-of-service interface Output Fields (*continued*)

Field Name	Field Description
<b>Input scheduler map</b>	For Gigabit Ethernet IQ2 PICs, name of the input scheduler map associated with this interface.
<b>Chassis scheduler map</b>	Name of the scheduler map associated with the packet forwarding component queues.
<b>Rewrite</b>	Name and type of the rewrite rules associated with this interface.
<b>Classifier</b>	Name and type of classifiers associated with this interface.
<b>Forwarding-class-map</b>	Name of the forwarding map associated with this interface.
<b>Congestion-notification</b>	Congestion notification state, <b>enabled</b> or <b>disabled</b> (QFX Series only).
<b>Logical interface</b>	Name of a logical interface.
<b>Shaping rate</b>	Maximum transmission rate on the logical interface. You can configure the shaping rate on the physical interface, or on the logical interface, but not both. Therefore, the <b>Shaping rate</b> field is displayed for the physical interface or the logical interface, but not both.
<b>Object</b>	Category of an object: <b>Classifier</b> , <b>Fragmentation-map</b> (for LSQ interfaces only), <b>Scheduler-map</b> , <b>Rewrite</b> , or <b>Translation Table</b> (for IQE PICs only).
<b>Name</b>	Name of an object.
<b>Type</b>	Type of an object: <b>dscp</b> , <b>dscp-ipv6</b> , <b>exp</b> , <b>ieee-802.1</b> , <b>ip</b> , or <b>inet-precedence</b> .

## Sample Output

```

user@host> show class-of-service interface so-0/2/3
show class-of-service interface (Physical) Physical interface: so-0/2/3, Index: 135
Queues supported: 8, Queues in use: 4
Total non-default queues created: 4
Scheduler map: <default>, Index: 2032638653

Logical interface: fe-0/0/1.0, Index: 68, Dedicated Queues: no
Shaping rate: 32000
Object      Name      Type
Index
Scheduler-map  <default>
27 Rewrite      exp-default  exp
21 Classifier   exp-default  exp
5 Classifier   ipprec-compatibility  ip
8 Forwarding-class-map  exp-default  exp
5

```

```

user@host> show class-of-service interface so-0/2/3.0
show class-of-service interface (Logical)

```

Logical interface: so-0/2/3.0, Index: 68, Dedicated Queues: no  
Shaping rate: 32000

Object	Name	Type
Index		
Scheduler-map	<default>	
27		
Rewrite	exp-default	exp
21		
Classifier	exp-default	exp
5		
Classifier	ipprec-compatibility	ip
8		
Forwarding-class-map	exp-default	exp
5		

**show class-of-service  
interface  
(Gigabit Ethernet)**

user@host> show class-of-service interface ge-6/2/0  
Physical interface: ge-6/2/0, Index: 175  
Queues supported: 4, Queues in use: 4  
Scheduler map: <default>, Index: 2  
Input scheduler map: <default>, Index: 3  
Chassis scheduler map: <default-chassis>, Index: 4

## show class-of-service forwarding-table

<b>Syntax</b>	show class-of-service forwarding-table
<b>Syntax (TX Matrix and TX Matrix Plus Router)</b>	show class-of-service forwarding-table <fcc <i>number</i> >
<b>Release Information</b>	Command introduced before Junos OS Release 7.4. Command introduced in Junos OS Release 11.1 for the QFX Series.
<b>Description</b>	Display the entire class-of-service (CoS) configuration as it exists in the forwarding table. Executing this command is equivalent to executing all <b>show class-of-service forwarding-table</b> commands in succession.
<b>Options</b>	fcc <i>number</i> —(TX Matrix and TX Matrix Plus router only) (Optional) On a TX Matrix router, display the forwarding table configuration for a specific T640 router (or line-card chassis) configured in a routing matrix. On a TX Matrix Plus router, display the forwarding table configuration for a specific T1600 router (or line-card chassis) configured in the routing matrix. Replace <i>number</i> with a value from 0 through 3.
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show class-of-service forwarding-table on page 101</a> <a href="#">show class-of-service forwarding-table fcc (TX Matrix Plus Router) on page 102</a>
<b>Output Fields</b>	See the output field descriptions for <b>show class-of-service forwarding-table</b> commands: <ul style="list-style-type: none"> <li>show class-of-service forwarding-table classifier</li> <li>show class-of-service forwarding-table classifier mapping</li> <li>show class-of-service forwarding-table drop-profile</li> <li>show class-of-service forwarding-table fabric scheduler-map</li> <li>show class-of-service forwarding-table loss-priority-map</li> <li>show class-of-service forwarding-table loss-priority-map mapping</li> <li>show class-of-service forwarding-table rewrite-rule</li> <li>show class-of-service forwarding-table rewrite-rule mapping</li> <li>show class-of-service forwarding-table scheduler-map</li> </ul>

## Sample Output

```

show class-of-service forwarding-table user@host> show class-of-service forwarding-table
Classifier table index: 9, # entries: 8, Table type: EXP
Entry #   Code point   Forwarding-class #   PLP
0         000           0                   0
1         001           0                   1
2         010           1                   0
3         011           1                   1

```

4	100	2	0
5	101	2	1
6	110	3	0
7	111	3	1

Interface	Index	Table Index/ Q num	Table type
sp-0/0/0.1001	66	11	IPv4 precedence
sp-0/0/0.2001	67	11	IPv4 precedence
sp-0/0/0.16383	68	11	IPv4 precedence
fe-0/0/0.0	69	11	IPv4 precedence

Interface: sp-0/0/0 (Index: 129, Map index: 2, Map type: FINAL,  
Num of queues: 2):

Entry 0 (Scheduler index: 16, Forwarding-class #: 0):

Tx rate: 0 Kb (95%), Buffer size: 95 percent

Priority low

PLP high: 1, PLP low: 1, PLP medium-high: 1, PLP medium-low: 1

Entry 1 (Scheduler index: 18, Forwarding-class #: 3):

Tx rate: 0 Kb (5%), Buffer size: 5 percent

Priority low

PLP high: 1, PLP low: 1, PLP medium-high: 1, PLP medium-low: 1

Interface: fe-0/0/0 (Index: 137, Map index: 2, Map type: FINAL,  
Num of queues: 2):

Entry 0 (Scheduler index: 16, Forwarding-class #: 0):

Tx rate: 0 Kb (95%), Buffer size: 95 percent

Priority low

PLP high: 1, PLP low: 1, PLP medium-high: 1, PLP medium-low: 1

Entry 1 (Scheduler index: 18, Forwarding-class #: 3):

Tx rate: 0 Kb (5%), Buffer size: 5 percent

Priority low

PLP high: 1, PLP low: 1, PLP medium-high: 1, PLP medium-low: 1

Interface: fe-0/0/1 (Index: 138, Map index: 2, Map type: FINAL,  
Num of queues: 2):

Entry 0 (Scheduler index: 16, Forwarding-class #: 0):

Tx rate: 0 Kb (95%), Buffer size: 95 percent

Priority low

PLP high: 1, PLP low: 1, PLP medium-high: 1, PLP medium-low: 1

Entry 1 (Scheduler index: 18, Forwarding-class #: 3):

Tx rate: 0 Kb (5%), Buffer size: 5 percent

Priority low

PLP high: 1, PLP low: 1, PLP medium-high: 1, PLP medium-low: 1

...

RED drop profile index: 1, # entries: 1

Drop

Entry	Fullness(%)	Probability(%)
0	100	100

**show class-of-service  
forwarding-table lcc  
(TX Matrix Plus  
Router)**

user@host> show class-of-service forwarding-table lcc 0  
lcc0-re0:

Classifier table index: 9, # entries: 64, Table type: IPv6 DSCP

Entry #	Code point	Forwarding-class #	PLP
0	000000	0	0
1	000001	0	0
2	000010	0	0
3	000011	0	0



4	000100	0	0
5	000101	0	0
6	000110	0	0
7	000111	0	0
8	001000	0	0
9	001001	0	0
10	001010	0	0
11	001011	0	0
12	001100	0	0
13	001101	0	0
14	001110	0	0
15	001111	0	0
16	010000	0	0
17	010001	0	0
18	010010	0	0
19	010011	0	0
20	010100	0	0
21	010101	0	0
22	010110	0	0
23	010111	0	0
24	011000	0	0
25	011001	0	0
26	011010	0	0
27	011011	0	0
28	011100	0	0
29	011101	0	0
30	011110	0	0
31	011111	0	0
32	100000	0	0
33	100001	0	0
34	100010	0	0
35	100011	0	0
36	100100	0	0
37	100101	0	0
38	100110	0	0
39	100111	0	0
40	101000	0	0
41	101001	0	0
42	101010	0	0
43	101011	0	0
44	101100	0	0
45	101101	0	0
46	101110	0	0
...			

## show interfaces controller (Channelized E1 IQ)

<b>Syntax</b>	<code>show interfaces controller ce1-fpc/pic/port</code>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	Display the interface names of the physical channelized E1 IQ interface and the channels configured on each interface.
<b>Options</b>	<code>ce1-fpc/pic/port</code> —Basic Rate Interface (BRI) interface name.
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show interfaces controller (Channelized E1 IQ with Logical E1) on page 104</a> <a href="#">show interfaces controller (Channelized E1 IQ with Logical DS0) on page 104</a>
<b>Output Fields</b>	Table 5 on page 104 lists the output fields for the <b>show interfaces controller</b> (Channelized E1 IQ) command. Output fields are listed in the approximate order in which they appear.

**Table 5: Channelized E1 IQ show interfaces controller Output Fields**

Field Name	Field Description
<b>Controller</b>	Physical channelized interface name and the names of any channels configured on it.
<b>Admin</b>	Administrative status of the interface.
<b>Link</b>	Link status of the interface.

## Sample Output

<b>show interfaces controller (Channelized E1 IQ with Logical E1)</b>	<pre> user@host&gt; show interfaces controller ce1-1/2/6  Controller ce1-1/2/6 e1-1/2/6 </pre>	<pre> Admin Link up      up up      up </pre>
<b>show interfaces controller (Channelized E1 IQ with Logical DS0)</b>	<pre> user@host&gt; show interfaces controller ce1-1/2/3  Controller ce1-1/2/3 ds-1/2/3:1 ds-1/2/3:2 </pre>	<pre> Admin Link up      up up      up up      up up      up </pre>

**Output Fields** Table 6 on page 105 lists the output fields for the **show interfaces controller** (Channelized OC12 IQ and IQE) command. Output fields are listed in the approximate order in which they appear.

Field Name	Field Description
Controller	Physical channelized interface name and the names of any channels configured on it.
Admin	Administrative status of the interface.
Link	Link status of the interface.

show interfaces	user@host> show interfaces controller		
controller	Controller	Admin	Link
(Channelized OC12 IQ)	coc12-4/2/0	up	up
	so-4/2/0:1	up	up
	t3-4/2/0:2	up	up
	ct3-4/2/0:3	up	up
	t1-4/2/0:3:1	up	up
	t1-4/2/0:3:2	up	up
	...		
	t1-4/2/0:3:28	up	up
	ct3-4/2/0:4	up	up
	ct1-4/2/0:4:1	up	up
	ds-4/2/0:4:1:1	up	up
	ds-4/2/0:4:1:2	up	up
	...		
	ds-4/2/0:4:1:24	up	up
	ct1-4/2/0:4:2	up	up
	ds-4/2/0:4:2:1	up	up
	ds-4/2/0:4:2:2	up	up
	...		
	ds-4/2/0:4:2:6	up	up

t1-4/2/0:4:3	up	up
t1-4/2/0:4:4	up	up
...		
t1-4/2/0:4:28	up	up
t3-4/2/0:5	up	up
coc1-4/2/0:6	up	up
t1-4/2/0:6:1	up	up
t1-4/2/0:6:2	up	up
...		
t1-4/2/0:6:28	up	up
coc1-4/2/0:7	up	up
ct1-4/2/0:7:1	up	up
ds-4/2/0:7:1:1	up	up
ds-4/2/0:7:1:2	up	up
...		
ds-4/2/0:7:1:24	up	up
ct1-4/2/0:7:2	up	up
ds-4/2/0:7:2:1	up	up
ds-4/2/0:7:2:2	up	up
...		
ds-4/2/0:7:2:6	up	up
t1-4/2/0:7:3	up	up
t1-4/2/0:7:4	up	up
...		
t1-4/2/0:7:28	up	up
so-4/2/0:8	up	up

## show interfaces controller (Channelized OC3 IQ and IQE)

<b>Syntax</b>	<code>show interfaces controller coc3-fpc/pic/slot</code>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	Display a list of channels configured on a channelized OC3 IQ and IQE interface.
<b>Options</b>	<code>coc3-fpc/pic/slot</code> —channelized OC3 IQ or IQE interface name.
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show interfaces controller (Channelized OC3 IQ) on page 107</a>
<b>Output Fields</b>	<a href="#">Table 7 on page 107</a> lists the output fields for the <b>show interfaces controller</b> (Channelized OC3 IQ) command. Output fields are listed in the approximate order in which they appear.

**Table 7: Channelized OC3 IQ and IQE show interfaces controller Output Fields**

Field Name	Field Description
<b>Controller</b>	Physical channelized interface name and the names of any channels configured on it.
<b>Admin</b>	Administrative status of the interface.
<b>Link</b>	Link status of the interface.

### Sample Output

<b>show interfaces controller (Channelized OC3 IQ)</b>	<pre> user@host&gt; show interfaces controller coc3-4/2/0 Controller coc3-4/2/0   coc1-4/2/0:1     ct1-4/2/0:1:1       ds-4/2/0:1:1:1 ct3-0/2/0 ct3-0/2/1 ct3-0/2/2 ct3-0/2/3 </pre>	<pre> Admin Link up      up up      up up      up up      up up      up up      up up      up up      up </pre>
--	--	---

## show interfaces controller (Channelized STM1 IQ)

<b>Syntax</b>	<code>show interfaces controller cstm1-<i>fpc/pic/port</i></code>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	(M Series and T Series routers only) Display the interface names of the physical channelized STM1 IQ interface and the channels configured on each interface.
<b>Options</b>	<code>cstm1-<i>fpc/pic/slot</i></code> —Channelized STM1 IQ interface name.
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show interfaces controller (Physical Channelized STM1 IQ with Logical E1) on page 108</a>
<b>Output Fields</b>	<a href="#">Table 8 on page 108</a> lists the output fields for the <b>show interfaces controller</b> (Channelized STM1 IQ) command. Output fields are listed in the approximate order in which they appear.

**Table 8: Channelized STM1 IQ show interfaces controller Output Fields**

Field Name	Field Description
<b>Controller</b>	Physical channelized interface name and the names of any channels configured on it.
<b>Admin</b>	Administrative status of the interface.
<b>Link</b>	Link status of the interface.

## Sample Output

<b>show interfaces controller (Physical Channelized STM1 IQ with Logical E1)</b>	<pre> user@host&gt; show interfaces controller cstm1-0/0/0 Controller cstm1-0/0/0 cau4-0/0/0   e1-0/0/0:1   e1-0/0/0:2   e1-0/0/0:3   e1-0/0/0:4   e1-0/0/0:5   e1-0/0/0:6   e1-0/0/0:7   e1-0/0/0:8   e1-0/0/0:9   e1-0/0/0:10   ce1-0/0/0:11     ds-0/0/0:11:1     ds-0/0/0:11:2     ds-0/0/0:11:3     ds-0/0/0:11:4 </pre>	<table border="0"> <tr> <td style="text-align: right;">Admin</td> <td style="text-align: right;">Link</td> </tr> <tr><td style="text-align: right;">up</td><td style="text-align: right;">up</td></tr> <tr><td style="text-align: right;">up</td><td style="text-align: right;">up</td></tr> <tr><td style="text-align: right;">up</td><td style="text-align: right;">up</td></tr> <tr><td style="text-align: right;">up</td><td style="text-align: right;">up</td></tr> <tr><td style="text-align: right;">up</td><td style="text-align: right;">up</td></tr> <tr><td style="text-align: right;">up</td><td style="text-align: right;">up</td></tr> <tr><td style="text-align: right;">up</td><td style="text-align: right;">up</td></tr> <tr><td style="text-align: right;">up</td><td style="text-align: right;">up</td></tr> <tr><td style="text-align: right;">up</td><td style="text-align: right;">up</td></tr> <tr><td style="text-align: right;">up</td><td style="text-align: right;">up</td></tr> <tr><td style="text-align: right;">up</td><td style="text-align: right;">up</td></tr> <tr><td style="text-align: right;">up</td><td style="text-align: right;">up</td></tr> <tr><td style="text-align: right;">up</td><td style="text-align: right;">up</td></tr> <tr><td style="text-align: right;">up</td><td style="text-align: right;">up</td></tr> </table>	Admin	Link	up	up	up	up	up	up	up	up	up	up	up	up	up	up	up	up	up	up	up	up	up	up	up	up	up	up	up	up
Admin	Link																															
up	up																															
up	up																															
up	up																															
up	up																															
up	up																															
up	up																															
up	up																															
up	up																															
up	up																															
up	up																															
up	up																															
up	up																															
up	up																															
up	up																															

## show interfaces controller (Channelized T1 IQ)

<b>Syntax</b>	<code>show interfaces controller ct1-fpc/pic/slot</code>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	(M Series and T Series routers only) Display the interface names of the specified physical channelized T1 IQ interface and the channels configured on it.
<b>Options</b>	<code>ct1-fpc/pic/slot</code> —Channelized T1 IQ interface name.
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show interfaces controller (T1 IQ) (Clear-Channel T1) on page 109</a> <a href="#">show interfaces controller (T1 IQ) (Channelized DS) on page 109</a>
<b>Output Fields</b>	Table 9 on page 109 lists the output fields for the <b>show interfaces controller</b> (Channelized T1 IQ) command. Output fields are listed in the approximate order in which they appear.

**Table 9: Channelized T1 IQ show interfaces controller Output Fields**

Field Name	Field Description
<b>Controller</b>	Physical channelized interface name and the names of any channels configured on it.
<b>Admin</b>	Administrative status of the interface.
<b>Link</b>	Link status of the interface.

## Sample Output

**show interfaces controller (T1 IQ) (Clear-Channel T1)** The following sample output displays the channelized T1 IQ interface when it is configured as a clear-channel T1 interface:

```
user@host> show interfaces controller ct1-0/2/0
```

Controller	Admin	Link
ct1-0/2/0	up	up
ct1-0/2/0	up	up

**show interfaces controller (T1 IQ) (Channelized DS)** The following sample output displays the channelized T1 IQ interfaces when it is configured down to the channelized DS level:

```
user@host> show interfaces controller ct1-0/2/1
```

Controller	Admin	Link
ct1-0/2/1	up	up
ds-0/2/1:1	up	up
ds-0/2/1:2	up	up

## show interfaces controller (Channelized T3 IQ)

<b>Syntax</b>	<code>show interfaces controller ct3-<i>fpc/pic/slot</i></code>
<b>Release Information</b>	Command introduced before Junos OS Release 7.4.
<b>Description</b>	(M Series and T Series routers only) Display the interface names of the specified physical channelized T3 IQ interface and the channels configured on it.
<b>Options</b>	<code>ct3-<i>fpc/pic /slot</i></code> —Channelized T3 IQ interface name.
<b>Required Privilege Level</b>	view
<b>List of Sample Output</b>	<a href="#">show interfaces controller (T3 IQ) on page 110</a>
<b>Output Fields</b>	<a href="#">Table 10 on page 110</a> lists the output fields for the <b>show interfaces controller</b> (Channelized T3 IQ) command. Output fields are listed in the approximate order in which they appear.

**Table 10: Channelized T3 IQ show interfaces controller Output Fields**

Field Name	Field Description
<b>Controller</b>	Physical channelized interface name and the names of any channels configured on it.
<b>Admin</b>	Administrative status of the interface.
<b>Link</b>	Link status of the interface.

### Sample Output

```

show interfaces controller (T3 IQ) user@host> show interfaces controller ct3-0/0/1
Controller
ct3-0/0/1
    t1-0/0/1:1
    ct1-0/0/1:2
        ds-0/0/1:2:1
        ds-0/0/1:2:2
        ds-0/0/1:2:3
    t1-0/0/1:3
    ...
    t1-0/0/1:10
    ct1-0/0/1:11
    ...
    ct1-0/0/1:28

```

Admin	Link
up	up
up	up
up	up
up	up
up	up
up	up
up	up
up	up
up	down
up	up
up	up
up	up



## PART 5

# Index

- [Index on page 113](#)



# Index

## C

channelized DS3 IQ interfaces	
example configuration.....	70
operational mode commands.....	72
channelized E1 IQ interfaces	
controller information, displaying.....	104
example configuration.....	87
operational mode commands.....	88
channelized IQ interfaces	
configuration procedure.....	17
example configuration	
clear channel OC12.....	32
complex OC12.....	36
convert OC12 to STM4.....	57
CoS.....	91
DS3.....	70
E1.....	87
OC3.....	63
STM1.....	80
T1.....	76
operational mode	
commands.....	33, 42, 61, 66, 72, 77, 83, 88, 92
overview.....	3
system requirements.....	11
channelized OC12 IQ interfaces	
controller information, displaying.....	105
example configuration.....	32, 36, 57
operational mode commands.....	33, 42, 61
SDH mode.....	57
channelized OC12 IQE interfaces	
controller information, displaying.....	105
channelized OC3 IQ interfaces	
controller information, displaying.....	107
example configuration.....	63
operational mode commands.....	66
channelized OC3 IQE interfaces	
controller information, displaying.....	107
channelized STM1 IQ interfaces	
controller information, displaying.....	108
example configuration.....	80
operational mode commands.....	83

channelized T1 IQ interfaces	
controller information, displaying.....	109
example configuration.....	76
operational mode commands.....	77
channelized T3 IQ interfaces	
controller information, displaying.....	110
class of service	
operational mode commands.....	92
CoS	
channelized IQ interfaces	
example configuration.....	91
forwarding table, displaying	
configuration.....	101
interfaces, displaying.....	98

## F

forwarding table	
CoS information, displaying	
configuration.....	101

## S

show class-of-service forwarding-table	
command.....	101
show class-of-service interface command.....	98
show interfaces controller (Channelized E1 IQ)	
command.....	104
show interfaces controller (Channelized OC12 IQ)	
command.....	105
show interfaces controller (Channelized OC3 IQ	
and IQE) command.....	107
show interfaces controller (Channelized STM1 IQ)	
command.....	108
show interfaces controller (Channelized T1 IQ)	
command.....	109
show interfaces controller (Channelized T3 IQ)	
command.....	110
system requirements	
channelized IQ interfaces.....	11

