



---

Junos<sup>®</sup> OS

## MPLS Applications Feature Guide



---

Modified: 2017-02-01

Juniper Networks, Inc.  
1133 Innovation Way  
Sunnyvale, California 94089  
USA  
408-745-2000  
[www.juniper.net](http://www.juniper.net)

Juniper Networks, Junos, Steel-Belted Radius, NetScreen, and ScreenOS are registered trademarks of Juniper Networks, Inc. in the United States and other countries. The Juniper Networks Logo, the Junos logo, and JunosE are trademarks of Juniper Networks, Inc. All other trademarks, service marks, registered trademarks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

*Junos<sup>®</sup> OS MPLS Applications Feature Guide*  
Copyright © 2017, Juniper Networks, Inc.  
All rights reserved.

The information in this document is current as of the date on the title page.

#### YEAR 2000 NOTICE

Juniper Networks hardware and software products are Year 2000 compliant. Junos OS has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

#### END USER LICENSE AGREEMENT

The Juniper Networks product that is the subject of this technical documentation consists of (or is intended for use with) Juniper Networks software. Use of such software is subject to the terms and conditions of the End User License Agreement ("EULA") posted at <http://www.juniper.net/support/eula.html>. By downloading, installing or using such software, you agree to the terms and conditions of that EULA.

# Table of Contents

	About the Documentation . . . . .	xlvi
	Documentation and Release Notes . . . . .	xlvi
	Supported Platforms . . . . .	xlvi
	Using the Examples in This Manual . . . . .	xlvi
	Merging a Full Example . . . . .	xlvi
	Merging a Snippet . . . . .	xlvi
	Documentation Conventions . . . . .	xlvi
	Documentation Feedback . . . . .	xlix
	Requesting Technical Support . . . . .	xlix
	Self-Help Online Tools and Resources . . . . .	xlix
	Opening a Case with JTAC . . . . .	l
<b>Part 1</b>	<b>Understanding Traffic Engineering</b>	
<b>Chapter 1</b>	<b>Traffic Engineering Overview . . . . .</b>	<b>3</b>
	Traffic Engineering Capabilities . . . . .	3
	Components of Traffic Engineering . . . . .	4
	Packet Forwarding Component . . . . .	4
	Packet Forwarding Based on Label Swapping . . . . .	4
	How a Packet Traverses an MPLS Backbone . . . . .	5
	Information Distribution Component . . . . .	5
	Path Selection Component . . . . .	6
	Offline Path Planning and Analysis . . . . .	6
	Signaling Component . . . . .	7
	Flexible LSP Calculation and Configuration . . . . .	7
	Link-State Distribution Using BGP Overview . . . . .	8
	Role of an Interior Gateway Protocol . . . . .	8
	Limitations of an Interior Gateway Protocol . . . . .	9
	Need for Spanning Link-State Distribution . . . . .	9
	Using BGP as a Solution . . . . .	10
	Overview . . . . .	10
	Implementation . . . . .	11
	Supported and Unsupported Features . . . . .	15
<b>Part 2</b>	<b>Configuring MPLS</b>	
<b>Chapter 2</b>	<b>MPLS Overview . . . . .</b>	<b>19</b>
	Introduction to MPLS . . . . .	20
	Supported MPLS Standards . . . . .	20
	Link-Layer Support in MPLS . . . . .	23
	MPLS and Traffic Engineering . . . . .	24

MPLS Label Overview .....	24
Special MPLS Labels .....	25
MPLS Label Allocation .....	26
Operations on MPLS Labels .....	27
Entropy Label Support in Mixed Mode Overview .....	28
Routers in an LSP .....	28
How a Packet Travels Along an LSP .....	28
Types of LSPs .....	29
Scope of LSPs .....	29
Constrained-Path LSP Computation .....	30
How CSPF Selects a Path .....	31
CSPF Path Selection Tie-Breaking .....	32
Computing CSPF Paths Offline .....	33
Path Computation for LSPs on an Overloaded Router .....	33
Computing Backup Paths for LSPs Using Fate Sharing .....	34
Using Labeled-Switched Paths to Augment SPF to Compute IGP Shortcuts . . .	34
Enabling IGP Shortcuts .....	36
LSPs Qualified in IGP Shortcut Computations .....	36
IGP Shortcut Applications .....	36
IGP Shortcuts and Routing Tables .....	37
IGP Shortcuts and VPNs .....	37
Advertising LSPs into IGP .....	38
IP and MPLS Packets on Aggregated Interfaces .....	39
MPLS Applications .....	39
BGP Destinations .....	40
IGP and BGP Destinations .....	41
Selecting a Forwarding LSP Next Hop .....	42
Example: Assigning Different Forwarding Next-Hop LSPs to Different Destination Prefixes .....	42
MPLS and Routing Tables .....	43
MPLS and Traffic Protection .....	45
Fast Reroute Overview .....	46
Detour Merging Process .....	48
Detour Computations .....	49
Fast Reroute Path Optimization .....	50
On-Demand Packet Loss and Delay Measurement for UHP LSPs Overview . . .	50
Importance of Measuring Packet Loss and Delay .....	50
Defining Packet Loss, Delay, and Throughput .....	51
Packet Loss and Delay Measurement Mechanisms .....	51
Packet Loss and Delay Metrics .....	52
Packet Loss and Delay Measurement Concepts .....	52
Packet Loss and Delay Measurement Functionality .....	55
Packet Loss and Delay Features .....	56



<b>Chapter 3</b>	<b>Configuring MPLS Routers</b>	<b>59</b>
	Configuring the Ingress Router for MPLS-Signaled LSPs	60
	Creating Named Paths	60
	Examples: Creating Named Paths	61
	Configuring Alternate Backup Paths Using Fate Sharing	62
	Configuring Fate Sharing	62
	Implications for CSPF	63
	Implications for CSPF When Fate Sharing with Bypass LSPs	64
	Example: Configuring Fate Sharing	64
	Example: Configuring an Explicit-Path LSP	64
	Example: Configuring a Constrained-Path LSP for Which Junos OS Makes All	
	Forwarding Decisions	65
	Example: Configuring a Constrained-Path LSP for Which Junos OS Makes Most	
	Forwarding Decisions and Considers Hop Constraints	66
	Example: Configuring a Constrained-Path LSP for Which Junos OS Makes Most	
	Forwarding Decisions and the Secondary Path Is Explicit	66
	Abstract Hops For MPLS LSPs Overview	67
	Understanding Abstract Hops	67
	Benefits of Using Abstract Hops	68
	Specifying a Sequence of Constraint Combinations	69
	Avoiding New Network Configuration on Transit Nodes	69
	Combining Centralized and Distributed Path Computation	
	Paradigms	69
	Junos Implementation of Abstract Hops	70
	Defining Abstract Hops	70
	Using Abstract Hops in Path Constraint	74
	Path Computation and Backtracking	77
	Sample Backtracking	77
	Improving Traffic Engineering Database Accuracy with RSVP PathErr	
	Messages	78
	PathErr Messages	79
	Identifying the Problem Link	80
	Configuring the Router to Improve Traffic Engineering Database	
	Accuracy	80
	Configuring MPLS-Signaled LSPs to Use GRE Tunnels	80
	Example: Configuring MPLS-Signaled LSPs to Use GRE Tunnels	81
	Example: Tunneling IPv6 Traffic over MPLS IPv4 Networks	82
	SRLG Overview	90
	Example: Configuring SRLG	92
	Example: Excluding SRLG Links Completely for the Secondary LSP	101
	Example: Configuring SRLG with Link Protection	106

Example: Configuring SRLG with Link Protection with the exclude-srlg Option . . . . .	127
Configuring the MPLS Transport Profile for OAM . . . . .	147
MPLS Transport Profile Overview . . . . .	147
Example: Configuring the MPLS Transport Profile for OAM . . . . .	147
Configuring MPLS Inter-AS Link-Node Protection with Labeled BGP . . . . .	160
Understanding MPLS Inter-AS Link Protection . . . . .	160
Example: Configuring MPLS Inter-AS Link-Node Protection . . . . .	162
Configuring Egress Protection Service Mirroring for BGP Signaled Layer 2 Services . . . . .	176
Example: Configuring MPLS Egress Protection Service Mirroring for BGP Signaled Layer 2 Services . . . . .	180
Example: Configuring Layer 3 VPN Egress Protection with PLR as Protector . . . . .	196
Example: Configuring Next-Hop-Based MPLS-Over-UDP Dynamic Tunnels . . . . .	222
Anti-spoofing Protection for Next-Hop-Based Dynamic Tunnels . . . . .	235
<b>Chapter 4 Configuring MPLS-Signaled LSPs . . . . .</b>	<b>239</b>
Configuring the Ingress and Egress Router Addresses for LSPs . . . . .	240
Configuring the Ingress Router Address for LSPs . . . . .	240
Configuring the Egress Router Address for LSPs . . . . .	240
Preventing the Addition of Egress Router Addresses to Routing Tables . . . . .	241
Configuring Primary and Secondary LSPs . . . . .	242
Configuring Primary and Secondary Paths for an LSP . . . . .	242
Configuring the Revert Timer for LSPs . . . . .	243
Specifying the Conditions for Path Selection . . . . .	244
Configuring a Text Description for LSPs . . . . .	245
Configuring the Entropy Label for LSPs . . . . .	246
Configuring Corouted Bidirectional LSPs . . . . .	248
Configuring Ultimate-Hop Popping for LSPs . . . . .	250
Configuring an LSP Across ASs . . . . .	253
Configuring Fast Reroute . . . . .	254
Configuring the Optimization Interval for Fast Reroute Paths . . . . .	256
Adding LSP-Related Routes to the inet.3 or inet6.3 Routing Table . . . . .	256
Configuring the Connection Between Ingress and Egress Routers . . . . .	257
Configuring LSP Metrics . . . . .	258
Configuring Dynamic LSP Metrics . . . . .	258
Configuring Static LSP Metrics . . . . .	259
Configuring CSPF Tie Breaking . . . . .	260
Configuring Load Balancing Based on MPLS Labels . . . . .	260
Disabling Normal TTL Decrementing . . . . .	264
Configuring MPLS Soft Preemption . . . . .	266
Disabling Constrained-Path LSP Computation . . . . .	267
Configuring Administrative Groups for LSPs . . . . .	268
Configuring Extended Administrative Groups for LSPs . . . . .	270
Configuring Preference Values for LSPs . . . . .	271
Disabling Path Route Recording by LSPs . . . . .	272
Configuring Class of Service for MPLS LSPs . . . . .	272
Class of Service for MPLS Overview . . . . .	272
Configuring the MPLS CoS Values . . . . .	273

Rewriting IEEE 802.1p Packet Headers with the MPLS CoS Value . . . . .	275
Achieving a Make-Before-Break, Hitless Switchover for LSPs . . . . .	275
Specifying the Amount of Time the Router Waits to Switch Over to New Paths . . . . .	277
Specifying the Amount of Time to Delay the Tear Down of Old Paths . . . . .	277
Achieving a Hitless, MBB Switchover Without Artificial Delays . . . . .	277
Configuring Adaptive LSPs . . . . .	278
Configuring Priority and Preemption for LSPs . . . . .	280
Optimizing Signaled LSPs . . . . .	280
Configuring the Smart Optimize Timer for LSPs . . . . .	284
Limiting the Number of Hops in LSPs . . . . .	285
Configuring the Bandwidth Value for LSPs . . . . .	285
Automatic Bandwidth Allocation for LSPs . . . . .	286
Configuring Automatic Bandwidth Allocation for LSPs . . . . .	286
Configuring Automatic Bandwidth Allocation on LSPs . . . . .	287
Configuring the Automatic Bandwidth Allocation Interval . . . . .	288
Configuring the Maximum and Minimum Bounds of the LSP's Bandwidth . . . . .	289
Configuring the Automatic Bandwidth Adjustment Threshold . . . . .	289
Configuring a Limit on Bandwidth Overflow and Underflow Samples . . . . .	290
Configuring Passive Bandwidth Utilization Monitoring . . . . .	292
Requesting Automatic Bandwidth Allocation Adjustment . . . . .	292
Configuring Reporting of Automatic Bandwidth Allocation Statistics for LSPs . . . . .	293
Configuring Hot Standby of Secondary Paths for LSPs . . . . .	297
Damping Advertisement of LSP State Changes . . . . .	298
<b>Chapter 5</b>	
<b>Configuring Static and Explicit-Path LSPs . . . . .</b>	<b>299</b>
Configuring Static LSPs . . . . .	299
Configuring the Ingress Router for Static LSPs . . . . .	299
Example: Configuring the Ingress Router . . . . .	301
Configuring the Intermediate (Transit) and Egress Routers for Static LSPs . . . . .	302
Example: Configuring an Intermediate Router . . . . .	303
Example: Configuring an Egress Router . . . . .	304
Configuring a Bypass LSP for the Static LSP . . . . .	304
Configuring the Protection Revert Timer for Static LSPs . . . . .	305
Configuring Static Unicast Routes for Point-to-Multipoint LSPs . . . . .	305
Configuring Explicit-Path LSPs . . . . .	306

<b>Chapter 6</b>	<b>Configuring Point-to-Multipoint LSPs . . . . .</b>	<b>309</b>
	Point-to-Multipoint LSPs Overview . . . . .	309
	Configuring Primary and Branch LSPs for Point-to-Multipoint LSPs . . . . .	311
	Configuring the Primary Point-to-Multipoint LSP . . . . .	311
	Configuring a Branch LSP for Point-to-Multipoint LSPs . . . . .	311
	Configuring the Branch LSP as a Dynamic Path . . . . .	312
	Configuring the Branch LSP as a Static Path . . . . .	312
	Example: Configuring a Collection of Paths to Create an RSVP-Signaled Point-to-Multipoint LSP . . . . .	313
	Configuring Inter-Domain Point-to-Multipoint LSPs . . . . .	331
	Configuring Link Protection for Point-to-Multipoint LSPs . . . . .	332
	Configuring Graceful Restart for Point-to-Multipoint LSPs . . . . .	333
	Configuring a Multicast RPF Check Policy for Point-to-Multipoint LSPs . . . . .	334
	Example: Configuring Multicast RPF Check Policy for a Point-to-Multipoint LSP . . . . .	334
	Configuring Ingress PE Router Redundancy for Point-to-Multipoint LSPs . . . . .	335
	Enabling Point-to-Point LSPs to Monitor Egress PE Routers . . . . .	335
	Preserving Point-to-Multipoint LSP Functioning with Different Junos OS Releases . . . . .	336
<b>Chapter 7</b>	<b>Configuring DiffServ-Aware Traffic Engineering to Achieve Service Level Guarantees on an MPLS network . . . . .</b>	<b>337</b>
	DiffServ-Aware Traffic Engineering Introduction . . . . .	338
	DiffServ-Aware Traffic Engineering Standards . . . . .	338
	DiffServ-Aware Traffic Engineering Terminology . . . . .	338
	DiffServ-Aware Traffic Engineering Features . . . . .	339
	DiffServ-Aware Traffic Engineered LSPs . . . . .	340
	DiffServ-Aware Traffic Engineered LSPs Overview . . . . .	340
	DiffServ-Aware Traffic Engineered LSPs Operation . . . . .	341
	Multiclass LSPs . . . . .	341
	Multiclass LSP Overview . . . . .	342
	Establishing a Multiclass LSP on the Differentiated Services Domain . . . . .	342
	Configuring Routers for DiffServ-Aware Traffic Engineering . . . . .	343
	Configuring the Bandwidth Model . . . . .	344
	Configuring Traffic Engineering Classes . . . . .	345
	Requirements and Limitations for the Traffic Engineering Class Matrix . . . . .	346
	Configuring Class of Service for DiffServ-Aware Traffic Engineering . . . . .	346
	LSP Bandwidth Oversubscription Overview . . . . .	347
	LSP Size Oversubscription . . . . .	348
	LSP Link Size Oversubscription . . . . .	348
	Class Type Oversubscription and Local Oversubscription Multipliers . . . . .	348
	Class Type Bandwidth and the LOM . . . . .	349
	LOM Calculation for the MAM and Extended MAM Bandwidth Models . . . . .	349
	LOM Calculation for the Russian Dolls Bandwidth Model . . . . .	350
	Example: LOM Calculation . . . . .	350
	Configuring the Bandwidth Subscription Percentage for LSPs . . . . .	351
	Constraints on Configuring Bandwidth Subscription . . . . .	352

	Configuring LSPs for DiffServ-Aware Traffic Engineering . . . . .	353
	Configuring Class of Service for the Interfaces . . . . .	354
	Configuring IGP . . . . .	354
	Configuring Traffic-Engineered LSPs . . . . .	354
	Configuring Policing for LSPs . . . . .	355
	Configuring Fast Reroute for Traffic-Engineered LSPs . . . . .	355
	Configuring Multiclass LSPs . . . . .	356
	Configuring Class of Service for the Interfaces . . . . .	356
	Configuring the IGP . . . . .	357
	Configuring Class-Type Bandwidth Constraints for Multiclass LSPs . . . . .	357
	Configuring Policing for Multiclass LSPs . . . . .	358
	Configuring Fast Reroute for Multiclass LSPs . . . . .	358
<b>Chapter 8</b>	<b>Configuring Miscellaneous MPLS Properties . . . . .</b>	<b>361</b>
	Configuring the Maximum Number of MPLS Labels . . . . .	362
	Configuring MPLS to Pop the Label on the Ultimate-Hop Router . . . . .	363
	Advertising Explicit Null Labels to BGP Peers . . . . .	364
	Configuring Traffic Engineering for LSPs . . . . .	365
	Using LSPs for Both BGP and IGP Traffic Forwarding . . . . .	365
	Using LSPs for Forwarding in Virtual Private Networks . . . . .	366
	Using RSVP and LDP Routes for Forwarding but Not Route Selection . . . . .	366
	Advertising the LSP Metric in Summary LSAs . . . . .	367
	Enabling Interarea Traffic Engineering . . . . .	367
	Enabling Inter-AS Traffic Engineering for LSPs . . . . .	368
	Inter-AS Traffic Engineering Requirements . . . . .	369
	Inter-AS Traffic Engineering Limitations . . . . .	369
	Configuring OSPF Passive TE Mode . . . . .	370
	Configuring MPLS to Gather Statistics . . . . .	371
	Configuring System Log Messages and SNMP Traps for LSPs . . . . .	372
	Configuring MPLS Firewall Filters and Policers . . . . .	373
	Configuring MPLS Firewall Filters . . . . .	373
	Examples: Configuring MPLS Firewall Filters . . . . .	374
	Configuring Policers for LSPs . . . . .	375
	LSP Policer Limitations . . . . .	376
	Example: Configuring an LSP Policer . . . . .	377
	Configuring Automatic Policers . . . . .	377
	Configuring Automatic Policers for LSPs . . . . .	378
	Configuring Automatic Policers for DiffServ-Aware Traffic Engineering LSPs . . . . .	379
	Configuring Automatic Policers for Point-to-Multipoint LSPs . . . . .	379
	Disabling Automatic Policing on an LSP . . . . .	380
	Example: Configuring Automatic Policing for an LSP . . . . .	380
	Writing Different DSCP and EXP Values in MPLS-Tagged IP Packets . . . . .	381
	Configuring MPLS Rewrite Rules . . . . .	381
	Rewriting the EXP Bits of All Three Labels of an Outgoing Packet . . . . .	381
	Rewriting MPLS and IPv4 Packet Headers . . . . .	382

Configuring BFD for MPLS IPv4 LSPs .....	382
Configuring BFD for RSVP-Signaled LSPs .....	383
Configuring a Failure Action for the BFD Session on an RSVP LSP .....	384
BFD-Triggered Local Repair for Rapid Convergence .....	385
Understanding BFD-Triggered Local Protection .....	385
Purpose of BFD-Triggered Local Repair .....	386
Configuring BFD-Triggered Local Repair .....	387
Disabling BFD-Triggered Local Repair .....	387
Disabling BFD-Triggered Local Repair .....	387
Pinging LSPs .....	388
Pinging MPLS LSPs .....	388
Pinging Point-to-Multipoint LSPs .....	388
Pinging the Endpoint Address of MPLS LSPs .....	389
Pinging CCC LSPs .....	389
Pinging Layer 3 VPNs .....	389
Support for LSP Ping and Traceroute Commands Based on RFC 4379 .....	389
Tracing MPLS and LSP Packets and Operations .....	389
Configuring Link State Distribution Using BGP .....	390
Example: Configuring Link State Distribution Using BGP .....	393
Dynamic Bandwidth Management Using Container LSP Overview .....	410
Understanding RSVP Multipath Extensions .....	410
Junos OS RSVP Multipath Implementation .....	411
Current Traffic Engineering Challenges .....	411
Using Container LSP as a Solution .....	414
Accommodating the New Demand X .....	415
Creating New LSPs to Meet Demand X .....	415
Assigning Bandwidth to the New LSPs .....	415
Controlling the LSP Paths .....	415
Junos OS Container LSP Implementation .....	416
Container LSP Terminology .....	416
LSP Splitting .....	417
LSP Merging .....	419
Node and Link Protection .....	421
Naming Convention .....	421
Normalization .....	422
Constraint-Based Routing Path Computation .....	427
Sampling .....	428
Support for NSR, IPG-FA, and Static Routes .....	428
Configuration Statements Supported for Container LSPs .....	431
Impact of Configuring Container LSPs on Network Performance .....	435
Supported and Unsupported Features .....	436
Configuring Dynamic Bandwidth Management Using Container LSP .....	437
Example: Configuring Dynamic Bandwidth Management Using Container LSP .....	441
Configuring On-Demand Loss and Delay Measurement .....	466
Example: Configuring On-Demand Loss and Delay Measurement .....	467
Configuring Pro-Active Loss and Delay Measurements .....	476

	Example: Configuring Pro-active Loss and Delay Measurements for Bidirectional MPLS LSPs . . . . .	478
	MPLS Encapsulated Payload Load-balancing Overview . . . . .	485
	Configuring MPLS Encapsulated Payload for Load Balancing . . . . .	486
<b>Part 3</b>	<b>Configuring RSVP</b>	
<b>Chapter 9</b>	<b>RSVP Overview . . . . .</b>	<b>489</b>
	RSVP Overview . . . . .	489
	Supported RSVP Standards . . . . .	490
	Junos OS RSVP Protocol Implementation . . . . .	491
	RSVP Operation Overview . . . . .	492
	RSVP Authentication . . . . .	492
	RSVP and IGP Hello Packets and Timers . . . . .	492
	RSVP Message Types . . . . .	493
	Understanding RSVP Automatic Mesh . . . . .	493
	Path Messages . . . . .	495
	Resv Messages . . . . .	495
	PathTear Messages . . . . .	495
	ResvTear Messages . . . . .	495
	PathErr Messages . . . . .	496
	ResvErr Messages . . . . .	496
	ResvConfirm Messages . . . . .	496
	RSVP Reservation Styles . . . . .	496
	RSVP Refresh Reduction . . . . .	497
	MTU Signaling in RSVP . . . . .	498
	How the Correct MTU Is Signaled in RSVP . . . . .	499
	Determining an Outgoing MTU Value . . . . .	500
	MTU Signaling in RSVP Limitations . . . . .	500
<b>Chapter 10</b>	<b>Configuring RSVP . . . . .</b>	<b>501</b>
	Minimum RSVP Configuration . . . . .	501
	Configuring RSVP and MPLS . . . . .	502
	Example: Configuring RSVP and MPLS . . . . .	502
	Configuring RSVP Interfaces . . . . .	503
	Configuring RSVP Refresh Reduction . . . . .	503
	Determining the Refresh Reduction Capability of RSVP Neighbors . . . . .	505
	Configuring the RSVP Hello Interval . . . . .	505
	Configuring RSVP Authentication . . . . .	506
	Configuring the Bandwidth Subscription for Class Types . . . . .	506
	Configuring the RSVP Update Threshold on an Interface . . . . .	506
	Configuring RSVP for Unnumbered Interfaces . . . . .	507
	Configuring RSVP Node-ID Hellos . . . . .	508
	Example: Configuring RSVP Automatic Mesh . . . . .	509
	Configuring Hello Acknowledgments for Nonsession RSVP Neighbors . . . . .	512
	Switching LSPs Away from a Network Node . . . . .	513
	Configuring RSVP Setup Protection . . . . .	514
	Configuring Load Balancing Across RSVP LSPs . . . . .	514
	Configuring RSVP Automatic Mesh . . . . .	515
	Configuring Timers for RSVP Refresh Messages . . . . .	516

	Preempting RSVP Sessions . . . . .	517
	Configuring MTU Signaling in RSVP . . . . .	518
	Enabling MTU Signaling in RSVP . . . . .	518
	Enabling Packet Fragmentation . . . . .	519
	Configuring Ultimate-Hop Popping for LSPs . . . . .	519
	Configuring RSVP to Pop the Label on the Ultimate-Hop Router . . . . .	523
	Enabling Ultimate-Hop Popping on Point-to-Multipoint LSPs . . . . .	523
	Tracing RSVP Protocol Traffic . . . . .	524
	Examples: Tracing RSVP Protocol Traffic . . . . .	525
	show rsvp route-session-id . . . . .	528
<b>Chapter 11</b>	<b>Configuring RSVP Link Protection and Node Protection to Protect from Traffic Failures . . . . .</b>	<b>529</b>
	Link Protection . . . . .	529
	Multiple Bypass LSPs for Link Protection . . . . .	530
	Node Protection . . . . .	531
	Fast Reroute, Node Protection, and Link Protection . . . . .	532
	LSP Protection Overview . . . . .	532
	LSP Protection Types Comparison . . . . .	533
	One-to-One Backup Implementation . . . . .	533
	Facility Backup Implementation . . . . .	534
	Configuring Link Protection on Interfaces Used by LSPs . . . . .	536
	Configuring Bypass LSPs . . . . .	537
	Configuring the Next-Hop or Next-Next-Hop Node Address for Bypass LSPs . . . . .	538
	Configuring Administrative Groups for Bypass LSPs . . . . .	538
	Configuring the Bandwidth for Bypass LSPs . . . . .	538
	Configuring Class of Service for Bypass LSPs . . . . .	539
	Configuring the Hop Limit for Bypass LSPs . . . . .	539
	Configuring the Maximum Number of Bypass LSPs . . . . .	540
	Disabling CSPF for Bypass LSPs . . . . .	540
	Disabling Node Protection for Bypass LSPs . . . . .	541
	Configuring the Optimization Interval for Bypass LSPs . . . . .	541
	Configuring an Explicit Path for Bypass LSPs . . . . .	542
	Configuring the Amount of Bandwidth Subscribed for Bypass LSPs . . . . .	542
	Configuring Priority and Preemption for Bypass LSPs . . . . .	543
	Configuring Node Protection or Link Protection for LSPs . . . . .	543
	Configuring Inter-AS Node and Link Protection . . . . .	544
<b>Chapter 12</b>	<b>Configuring RSVP Graceful Restart for High Availability . . . . .</b>	<b>545</b>
	RSVP Graceful Restart . . . . .	545
	RSVP Graceful Restart Standard . . . . .	545
	RSVP Graceful Restart Terminology . . . . .	546
	RSVP Graceful Restart Operation . . . . .	546
	Processing the Restart Cap Object . . . . .	547
	Configuring RSVP Graceful Restart . . . . .	548
	Enabling Graceful Restart for All Routing Protocols . . . . .	548
	Disabling Graceful Restart for RSVP . . . . .	548
	Disabling RSVP Helper Mode . . . . .	549
	Configuring the Maximum Helper Recovery Time . . . . .	549



	Configuring the Maximum Helper Restart Time . . . . .	549
<b>Chapter 13</b>	<b>Configuring RSVP LSP Tunnels . . . . .</b>	<b>551</b>
	RSVP LSP Tunnels Overview . . . . .	551
	Example: RSVP LSP Tunnel Configuration . . . . .	553
	Verifying Your Work . . . . .	565
	Router 0 . . . . .	565
	Router 1 . . . . .	569
	Configuring Link Management Protocol Peers . . . . .	571
	Configuring Link Management Protocol Traffic Engineering Links . . . . .	571
	Configuring Peer Interfaces in OSPF and RSVP . . . . .	572
	Defining Label-Switched Paths for the FA-LSP . . . . .	572
	Establishing FA-LSP Path Information . . . . .	573
	Option: Tearing Down RSVP LSPs Gracefully . . . . .	573
<b>Part 4</b>	<b>Configuring LDP</b>	
<b>Chapter 14</b>	<b>LDP Overview . . . . .</b>	<b>577</b>
	LDP Introduction . . . . .	577
	Supported LDP Standards . . . . .	578
	Junos OS LDP Protocol Implementation . . . . .	578
	LDP Operation . . . . .	579
	LDP Message Types . . . . .	579
	Discovery Messages . . . . .	579
	Session Messages . . . . .	580
	Advertisement Messages . . . . .	580
	Notification Messages . . . . .	580
	Discovery Messages . . . . .	580
	Session Messages . . . . .	581
	Advertisement Messages . . . . .	581
	Notification Messages . . . . .	581
	Tunneling LDP LSPs in RSVP LSPs . . . . .	582
	Tunneling LDP LSPs in RSVP LSPs Overview . . . . .	582
	Label Operations . . . . .	583
	LDP Session Protection . . . . .	584
	LDP Native IPv6 Support Overview . . . . .	585
	Longest Match Support for LDP Overview . . . . .	585
<b>Chapter 15</b>	<b>Configuring LDP . . . . .</b>	<b>587</b>
	Minimum LDP Configuration . . . . .	588
	Enabling and Disabling LDP . . . . .	588
	Configuring the LDP Timer for Hello Messages . . . . .	589
	Configuring the LDP Timer for Link Hello Messages . . . . .	589
	Configuring the LDP Timer for Targeted Hello Messages . . . . .	589
	Configuring the Delay Before LDP Neighbors Are Considered Down . . . . .	589
	Configuring the LDP Hold Time for Link Hello Messages . . . . .	590
	Configuring the LDP Hold Time for Targeted Hello Messages . . . . .	591
	Enabling Strict Targeted Hello Messages for LDP . . . . .	591
	Configuring the Interval for LDP Keepalive Messages . . . . .	591

Configuring the LDP Keepalive Timeout . . . . .	592
Configuring Longest Match for LDP . . . . .	592
Example: Configuring Longest Match for LDP . . . . .	593
Configuring LDP Route Preferences . . . . .	609
LDP Graceful Restart . . . . .	609
Configuring LDP Graceful Restart . . . . .	610
Enabling Graceful Restart . . . . .	610
Disabling LDP Graceful Restart or Helper Mode . . . . .	611
Configuring Reconnect Time . . . . .	612
Configuring Recovery Time and Maximum Recovery Time . . . . .	612
Filtering Inbound LDP Label Bindings . . . . .	613
Examples: Filtering Inbound LDP Label Bindings . . . . .	614
Filtering Outbound LDP Label Bindings . . . . .	615
Examples: Filtering Outbound LDP Label Bindings . . . . .	616
Specifying the Transport Address Used by LDP . . . . .	617
Configuring the Prefixes Advertised into LDP from the Routing Table . . . . .	617
Example: Configuring the Prefixes Advertised into LDP . . . . .	618
Configuring FEC Deaggregation . . . . .	618
Configuring Policers for LDP FECs . . . . .	619
Configuring LDP IPv4 FEC Filtering . . . . .	620
Configuring BFD for LDP LSPs . . . . .	620
Configuring ECMP-Aware BFD for LDP LSPs . . . . .	623
Configuring a Failure Action for the BFD Session on an LDP LSP . . . . .	624
Configuring the Holddown Interval for the BFD Session . . . . .	625
Configuring OAM Ingress Policies for LDP . . . . .	625
Configuring LDP Link Protection . . . . .	625
Example: Configuring LDP Link Protection . . . . .	627
LDP Link Protection Overview . . . . .	627
Introduction to LDP . . . . .	627
Junos OS LDP Protocol Implementation . . . . .	628
Understanding Multipoint Extensions to LDP . . . . .	628
Using Multipoint Extensions to LDP on Targeted LDP Sessions . . . . .	628
Current Limitations of LDP Link Protection . . . . .	629
Using RSVP LSP as a Solution . . . . .	630
Understanding Multicast LDP Link Protection . . . . .	632
Different Modes for Providing LDP Link Protection . . . . .	633
Label Operation for LDP Link Protection . . . . .	635
Sample Multicast LDP Link Protection Configuration . . . . .	641
Make-Before-Break . . . . .	642
Caveats and Limitations . . . . .	644
Understanding Multicast-Only Fast Reroute . . . . .	644
PIM Functionality . . . . .	647
Multipoint LDP Functionality . . . . .	648
Packet Forwarding . . . . .	649
Limitations and Caveats . . . . .	650
Configuring Multicast-Only Fast Reroute . . . . .	651
Example: Configuring Multicast-Only Fast Reroute in a Multipoint LDP Domain . . . . .	654
Example: Configuring LDP Downstream on Demand . . . . .	670

Configuring LDP Native IPv6 Support . . . . .	675
Example: Configuring LDP Native IPv6 Support . . . . .	676
Example: Configuring Multipoint LDP In-Band Signaling for Point-to-Multipoint LSPs . . . . .	691
Understanding Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs . . . . .	692
How M-LDP Works . . . . .	693
Terminology . . . . .	697
Ingress Join Translation and Pseudo Interface Handling . . . . .	698
Ingress Splicing . . . . .	698
Reverse Path Forwarding . . . . .	698
LSP Root Detection . . . . .	698
Egress Join Translation and Pseudo Interface Handling . . . . .	699
Egress Splicing . . . . .	699
Supported Functionality . . . . .	699
Unsupported Functionality . . . . .	700
LDP Functionality . . . . .	700
Egress LER Functionality . . . . .	700
Transit LSR Functionality . . . . .	701
Ingress LER Functionality . . . . .	701
Example: Configuring Multipoint LDP In-Band Signaling for Point-to-Multipoint LSPs . . . . .	701
Configuring Miscellaneous LDP Properties . . . . .	722
Configuring LDP to Use the IGP Route Metric . . . . .	723
Preventing Addition of Ingress Routes to the inet.0 Routing Table . . . . .	723
Multiple-Instance LDP and Carrier-of-Carriers VPNs . . . . .	723
Configuring MPLS and LDP to Pop the Label on the Ultimate-Hop Router . . . . .	724
Enabling LDP over RSVP-Established LSPs . . . . .	724
Enabling LDP over RSVP-Established LSPs in Heterogeneous Networks . . . . .	724
Configuring the TCP MD5 Signature for LDP Sessions . . . . .	725
Configuring LDP Session Protection . . . . .	726
Disabling SNMP Traps for LDP . . . . .	727
Configuring LDP Synchronization with the IGP on LDP Links . . . . .	727
Configuring LDP Synchronization with the IGP on the Router . . . . .	728
Configuring the Label Withdrawal Timer . . . . .	728
Ignoring the LDP Subnet Check . . . . .	728
Configuring LDP LSP Traceroute . . . . .	729
Collecting LDP Statistics . . . . .	730
LDP Statistics Output . . . . .	730
Disabling LDP Statistics on the Penultimate-Hop Router . . . . .	731
LDP Statistics Limitations . . . . .	732
Tracing LDP Protocol Traffic . . . . .	732
Tracing LDP Protocol Traffic at the Protocol and Routing Instance Levels . . . . .	732
Tracing LDP Protocol Traffic Within FECs . . . . .	733
Examples: Tracing LDP Protocol Traffic . . . . .	734

<b>Part 5</b>	<b>Configuring Circuit Cross-Connect (CCC) and Translational Cross-Connect (TCC)</b>	
<b>Chapter 16</b>	<b>CCC and TCC Overview</b>	<b>739</b>
	CCC Overview	739
	Transmitting Nonstandard BPDUs	740
	TCC Overview	740
<b>Chapter 17</b>	<b>Configuring CCC and TCC</b>	<b>743</b>
	Configuring Layer 2 Switching Cross-Connects Using CCC	743
	Configuring the CCC Encapsulation for Layer 2 Switching	
	Cross-Connects	744
	Configuring ATM Encapsulation for Layer 2 Switching	
	Cross-Connects	744
	Configuring Ethernet Encapsulation for Layer 2 Switching	
	Cross-Connects	745
	Configuring Ethernet VLAN Encapsulation for Layer 2 Switching	
	Cross-Connects	745
	Configuring Aggregated Ethernet Encapsulation for Layer 2 Switching	
	Cross-Connects	746
	Configuring Frame Relay Encapsulation for Layer 2 Switching	
	Cross-Connects	747
	Configuring PPP and Cisco HDLC Encapsulation for Layer 2 Switching	
	Cross-Connects	748
	Configuring the CCC Connection for Layer 2 Switching Cross-Connects	748
	Configuring MPLS for Layer 2 Switching Cross-Connects	748
	Example: Configuring a Layer 2 Switching Cross-Connect	749
	Configuring MPLS LSP Tunnel Cross-Connects Using CCC	751
	Configuring the CCC Encapsulation for LSP Tunnel Cross-Connects	752
	Configuring the CCC Connection for LSP Tunnel Cross-Connects	753
	Example: Configuring an LSP Tunnel Cross-Connect	754
	Configuring TCC	755
	Configuring the Encapsulation for Layer 2 Switching TCCs	755
	Configuring PPP and Cisco HDLC Encapsulation for Layer 2 Switching	
	TCCs	756
	Configuring ATM Encapsulation for Layer 2 Switching TCCs	756
	Configuring Frame Relay Encapsulation for Layer 2 Switching TCCs	756
	Configuring Ethernet Encapsulation for Layer 2 Switching TCCs	757
	Configuring Ethernet Extended VLAN Encapsulation for Layer 2	
	Switching TCCs	757
	Configuring ARP for Ethernet and Ethernet Extended VLAN	
	Encapsulations	758
	Configuring the Connection for Layer 2 Switching TCCs	759
	Configuring MPLS for Layer 2 Switching TCCs	759
	CCC and TCC Graceful Restart	760
	Configuring CCC and TCC Graceful Restart	761
	Configuring CCC Switching for Point-to-Multipoint LSPs	761
	Configuring the Point-to-Multipoint LSP Switch on Ingress PE Routers	762
	Configuring Local Receivers on a Point-to-Multipoint CCC LSP Switch on	
	Ingress PE Routers	762

	Configuring the Point-to-Multipoint LSP Switch on Egress PE Routers . . .	763
<b>Part 6</b>	<b>Configuring GMPLS</b>	
<b>Chapter 18</b>	<b>GMPLS Overview . . . . .</b>	<b>767</b>
	Introduction to GMPLS . . . . .	767
	GMPLS Terms and Acronyms . . . . .	768
	Supported GMPLS Standards . . . . .	769
	GMPLS Operation . . . . .	770
	GMPLS and OSPF . . . . .	771
	GMPLS and CSPF . . . . .	771
	GMPLS Features . . . . .	772
<b>Chapter 19</b>	<b>Configuring GMPLS . . . . .</b>	<b>773</b>
	LMP Configuration Overview . . . . .	773
	Configuring LMP Traffic Engineering Links . . . . .	774
	Configuring the Local IP Address for Traffic Engineering Links . . . . .	775
	Configuring the Remote IP Address for Traffic Engineering Links . . . . .	775
	Configuring the Remote ID for Traffic Engineering Links . . . . .	776
	Configuring LMP Peers . . . . .	776
	Configuring the ID for LMP Peers . . . . .	777
	Configuring the Interface for Control Channels Between LMP Peers . . . . .	777
	Configuring the LMP Control Channel Interface for the Peer . . . . .	777
	Configuring the Remote IP Address for LMP Control Channels . . . . .	778
	Configuring Hello Message Intervals for LMP Control Channels . . . . .	779
	Controlling Message Exchange for LMP Control Channels . . . . .	780
	Preventing the Local Peer from Initiating LMP Negotiation . . . . .	780
	Associating Traffic Engineering Links with LMP Peers . . . . .	780
	Disabling the Traffic Engineering Link for LMP Peers . . . . .	781
	Configuring RSVP and OSPF for LMP Peer Interfaces . . . . .	781
	Configuring RSVP Signaling for LMP Peer Interfaces . . . . .	781
	Configuring OSPF Routing for LMP Peer Interfaces . . . . .	782
	Configuring the Hello Interval for LMP Peer Interfaces . . . . .	782
	Configuring MPLS Paths for GMPLS . . . . .	782
	Tracing LMP Traffic . . . . .	783
	Configuring MPLS LSPs for GMPLS . . . . .	784
	Configuring the Encoding Type . . . . .	784
	Configuring the GPID . . . . .	785
	Configuring the Signal Bandwidth Type . . . . .	785
	Configuring GMPLS Bidirectional LSPs . . . . .	785
	Allowing Nonpacket GMPLS LSPs to Establish Paths Through Routers	
	Running Junos OS . . . . .	786
	Gracefully Tearing Down GMPLS LSPs . . . . .	786
	Temporarily Deleting GMPLS LSPs . . . . .	786
	Permanently Deleting GMPLS LSPs . . . . .	787
	Configuring the Graceful Deletion Timeout Interval . . . . .	787
	GMPLS RSVP-TE VLAN LSP Signaling Overview . . . . .	788
	Understanding GMPLS RSVP-TE Signaling . . . . .	788
	Need for GMPLS RSVP-TE VLAN LSP Signaling . . . . .	788
	GMPLS RSVP-TE VLAN LSP Signaling Functionality . . . . .	790

	LSP Hierarchy with GMPLS RSVP-TE VLAN LSP . . . . .	791
	Path Specification for GMPLS RSVP-TE VLAN LSP . . . . .	791
	GMPLS RSVP-TE VLAN LSP Configuration . . . . .	791
	Associated Bidirectional Packet LSP . . . . .	792
	Make-Before-Break for Associated Bidirectional Packet and GMPLS RSVP-TE VLAN LSP . . . . .	793
	Supported and Unsupported Features . . . . .	794
	Example: Configuring GMPLS RSVP-TE VLAN LSP Signaling . . . . .	794
<b>Chapter 20</b>	<b>Using a Hierarchy of RSVP LSPs to Tunnel Multiple RSVP LSPs over a Single RSVP LSP . . . . .</b>	<b>819</b>
	Hierarchy of RSVP LSPs Overview . . . . .	819
	Hierarchy of RSVP LSPs Terminology . . . . .	819
	Hierarchy of RSVP LSPs Standard . . . . .	820
	Hierarchy of RSVP LSPs . . . . .	820
	Advertising the Forwarding Adjacency with OSPF . . . . .	820
	Configuring a Hierarchy of RSVP LSPs to Tunnel Multiple RSVP LSPs Over a Single RSVP LSP . . . . .	820
	Configuring an RSVP LSP on Ingress Routers . . . . .	821
	Configuring Forwarding Adjacencies . . . . .	821
	Configuring the Local IP Address for Forwarding Adjacencies . . . . .	821
	Configuring the Remote IP Address for Forwarding Adjacencies . . . . .	822
	Configuring the LSP for Forwarding Adjacencies . . . . .	822
	Configuring RSVP for Forwarding Adjacencies . . . . .	822
	Advertising Forwarding Adjacencies Using OSPF . . . . .	823
<b>Part 7</b>	<b>Configuring Path Computation Element Protocol (PCEP)</b>	
<b>Chapter 21</b>	<b>PCEP Overview . . . . .</b>	<b>827</b>
	PCEP Overview . . . . .	827
	Support of the Path Computation Element Protocol for RSVP-TE Overview . . . . .	828
	Understanding MPLS RSVP-TE . . . . .	828
	Current MPLS RSVP-TE Limitations . . . . .	830
	Use of an External Path Computing Entity . . . . .	831
	Components of External Path Computing . . . . .	832
	Path Computation Element . . . . .	832
	Path Computation Client . . . . .	833
	Path Computation Element Protocol . . . . .	833
	Interaction Between a PCE and a PCC Using PCEP . . . . .	834
	LSP Behavior with External Computing . . . . .	836
	LSP Types . . . . .	837
	LSP Control Mode . . . . .	838
	Configuration Statements Supported for External Computing . . . . .	838
	PCE-Controlled LSP Protection . . . . .	839
	PCE Controlled Point-to-Multipoint RSVP-TE LSPs . . . . .	839
	Auto-Bandwidth and PCE-Controlled LSP . . . . .	840
	TCP-MD5 Authentication for PCEP Sessions . . . . .	840
	Impact of Client-Side PCE Implementation on Network Performance . . . . .	841

<b>Chapter 22</b>	<b>Configuring PCEP</b> . . . . .	<b>843</b>
	Example: Configuring the Path Computation Element Protocol for MPLS RSVP-TE . . . . .	843
	Example: Configuring Path Computation Element Protocol with Support of PCE-Initiated LSPs . . . . .	856
	Configuring Path Computation Element Protocol with Support of PCE Initiated LSPs for MPLS RSVP TE . . . . .	866
	Example: Configuring Path Computation Element Protocol with Support for PCE Controlled Point-to-Multipoint RSVP-TE LSPs . . . . .	869
<b>Part 8</b>	<b>Troubleshooting Information</b>	
<b>Chapter 23</b>	<b>Troubleshooting MPLS</b> . . . . .	<b>887</b>
	Verify MPLS Interfaces . . . . .	893
	Verify the MPLS Configuration . . . . .	895
	Verify That Node-Link Protection Is Up . . . . .	897
	Node-Link Protection Overview . . . . .	903
	Verify That Link Protection Is Up . . . . .	905
	Many-to-One Link Protection (Facility Backup) Overview . . . . .	909
	Verify One-to-One Backup . . . . .	910
	Verify That the Primary Path Is Operational . . . . .	917
	Preventing Use of a Path That Previously Failed . . . . .	918
	Verify That the Secondary Path Is Established . . . . .	919
	Checklist for Checking the MPLS Layer . . . . .	921
	Checking the MPLS Layer . . . . .	921
	Verify the LSP . . . . .	923
	Verify the LSP Route on the Transit Router . . . . .	926
	Verify the LSP Route on the Ingress Router . . . . .	927
	Verify MPLS Labels with the traceroute Command . . . . .	929
	Verify MPLS Labels with the ping Command . . . . .	930
	Verify the MPLS Configuration . . . . .	931
	Take Appropriate Action . . . . .	933
	Verify the LSP Again . . . . .	934
	Verify the LSP . . . . .	937
	Verify the LSP Route on the Transit Router . . . . .	940
	Verify the LSP Route on the Ingress Router . . . . .	941
	Verify MPLS Labels with the traceroute Command . . . . .	942
	Verify MPLS Labels with the ping Command . . . . .	943
	Take Appropriate Action . . . . .	944
	Verify the LSP Again . . . . .	945
	Checklist for Working with the Layered MPLS Troubleshooting Model . . . . .	948
	Understanding the Layered MPLS Troubleshooting Model . . . . .	948
	Checklist for Verifying the Physical Layer . . . . .	955
	Verifying the Physical Layer . . . . .	956
	Verify the LSP . . . . .	958
	Verify Router Connection . . . . .	959
	Verify Interfaces . . . . .	959
	Take Appropriate Action . . . . .	960
	Verify the LSP Again . . . . .	961

Verify the LSP . . . . .	962
Verify Router Connection . . . . .	964
Verify Interfaces . . . . .	964
Take Appropriate Action . . . . .	965
Verify the LSP Again . . . . .	966
Checklist for Checking the Data Link Layer . . . . .	967
Checking the Data Link Layer . . . . .	968
Verify the LSP . . . . .	969
Verify Interfaces . . . . .	970
Take Appropriate Action . . . . .	974
Verify the LSP Again . . . . .	975
Verify the LSP . . . . .	978
Verify Interfaces . . . . .	979
Take Appropriate Action . . . . .	982
Verify the LSP Again . . . . .	983
Checklist for Verifying the IP and IGP Layers . . . . .	986
Verifying the IP and IGP Layers . . . . .	988
Verifying the IP Layer . . . . .	990
Verify the LSP . . . . .	991
Verify IP Addressing . . . . .	992
Verify Neighbors or Adjacencies at the IP Layer . . . . .	993
Take Appropriate Action . . . . .	996
Verify the LSP Again . . . . .	997
Verify the LSP . . . . .	1000
Verify IP Addressing . . . . .	1001
Verify Neighbors or Adjacencies at the IP Layer . . . . .	1002
Take Appropriate Action . . . . .	1005
Verify the LSP Again . . . . .	1006
Verifying the OSPF Protocol . . . . .	1009
Verify the LSP . . . . .	1010
Verify OSPF Interfaces . . . . .	1012
Verify OSPF Neighbors . . . . .	1014
Verify the OSPF Protocol Configuration . . . . .	1014
Take Appropriate Action . . . . .	1015
Verify the LSP Again . . . . .	1017
Verify the LSP . . . . .	1020
Verify OSPF Interfaces . . . . .	1023
Verify OSPF Neighbors . . . . .	1024
Verify the LSP Again . . . . .	1025
Verify the LSP . . . . .	1027
Verify IS-IS Adjacencies and Interfaces . . . . .	1028
Verify the IS-IS Configuration . . . . .	1030
Verify the LSP Again . . . . .	1031
Checklist for Checking the RSVP Layer . . . . .	1033
Checking the RSVP Layer . . . . .	1034
Verify the LSP . . . . .	1036
Verify RSVP Sessions . . . . .	1038
Verify RSVP Neighbors . . . . .	1039
Verify RSVP Interfaces . . . . .	1040



Verify the RSVP Protocol Configuration . . . . .	1042
Take Appropriate Action . . . . .	1043
Verify the LSP Again . . . . .	1044
Verify the LSP . . . . .	1046
Verify RSVP Sessions . . . . .	1048
Verify RSVP Neighbors . . . . .	1049
Verify RSVP Interfaces . . . . .	1050
Verify the RSVP Protocol Configuration . . . . .	1052
Take Appropriate Action . . . . .	1052
Verify the LSP Again . . . . .	1053
Checklist for Determining LSP Status . . . . .	1056
Determining LSP Statistics . . . . .	1056
Checklist for Verifying LSP Use . . . . .	1058
Verifying LSP Use in Your Network . . . . .	1058
Verifying an LSP on the Ingress Router . . . . .	1059
Verifying an LSP on a Transit Router . . . . .	1060
Verifying an LSP on the Ingress Router . . . . .	1062
Verifying an LSP on a Transit Router . . . . .	1063
Verify That Load Balancing Is Working . . . . .	1064
Example: Load-Balanced MPLS Network . . . . .	1067
Router Configurations for the Load-Balanced MPLS Network . . . . .	1068
Traffic Flows Before Load Balancing . . . . .	1080
Verify the Operation of Uneven Bandwidth Load Balancing . . . . .	1082
Checklist for Collecting Crash Data . . . . .	1084
Understand Crash Data Collection . . . . .	1085
Collect Crash Data for a Routing Engine Kernel . . . . .	1086
Check the Routing Engine Core Files . . . . .	1086
List the Core Files . . . . .	1087
Compress the vmcore File . . . . .	1087
Log Software Version Information . . . . .	1088
Open a Case with JTAC . . . . .	1089
Check the Routing Engine Core Files . . . . .	1089
List the Core Files . . . . .	1089
Compress the vmcore File . . . . .	1090
Log Software Version Information . . . . .	1090
Open a Case with JTAC . . . . .	1091
Collect Crash Data for Routing Engine Daemons . . . . .	1091
Check for Daemon Core Files . . . . .	1091
List the Daemon Core Files . . . . .	1093
Compress the Daemon Core Files . . . . .	1093
Log Software Version Information . . . . .	1094
Open a Case with JTAC . . . . .	1095
Collect and Send Routing Engine Crash Data to JTAC . . . . .	1095
Check for Daemon Core Files . . . . .	1096
List the Daemon Core Files . . . . .	1097
Compress the Daemon Core Files . . . . .	1098

Collect Crash Data for the Packet Forwarding Engine Microkernel . . . . .	1098
Display the Crash Stack Traceback and Registration Information . . . . .	1099
Clear the NVRAM Contents . . . . .	1102
Check Packet Forwarding Engine Microkernel Core Files . . . . .	1103
List the Core Files Generated by the Crash . . . . .	1103
Compress the Core Files . . . . .	1104
Log Software Version Information . . . . .	1104
Open a Case with JTAC . . . . .	1105
Display the Crash Stack Traceback and Registration Information . . . . .	1105
Clear the NVRAM Contents . . . . .	1108
Check Packet Forwarding Engine Microkernel Core Files . . . . .	1109
List the Core Files Generated by the Crash . . . . .	1109
Compress the Core Files . . . . .	1110
Path Protection Overview . . . . .	1110
Configure a Primary Path . . . . .	1111
Ensuring That Secondary Paths Establish When Resources Are Diminished . . . . .	1113
One-to-One Backup Overview . . . . .	1114
Configure Link Protection . . . . .	1115
Configuring and Verifying Link Protection . . . . .	1117
Configure Link Protection . . . . .	1117
Verify That Link Protection Is Up . . . . .	1119
Configure Node-Link Protection . . . . .	1123
Configuring and Verifying Node-Link Protection . . . . .	1124
Configure Node-Link Protection . . . . .	1125
Verify That Node-Link Protection Is Up . . . . .	1126
Configure IS-IS as the IGP . . . . .	1133
Enable IS-IS on Routers in Your Network . . . . .	1134
Configure ISO Addressing . . . . .	1136
Enable IS-IS on Router Interfaces . . . . .	1137
Verify That IS-IS Adjacencies Are Established . . . . .	1138
Verify That IS-IS Adjacencies Are Established . . . . .	1139
Configure OSPF as the IGP . . . . .	1140
Enable OSPF on Routers in Your Network . . . . .	1142
Verify That OSPF Neighbors Are Established . . . . .	1144
Set Up BGP on Routers in Your Network . . . . .	1144
Define the Local Autonomous System . . . . .	1145
Configure BGP Neighbor Connections . . . . .	1146
Configure a Simple Routing Policy . . . . .	1148
Verify That BGP Sessions Are Up . . . . .	1149
Define the Local Autonomous System . . . . .	1150
Enable MPLS and RSVP . . . . .	1151
Enable MPLS and RSVP on Routers . . . . .	1151
Enable MPLS on Transit Router Interfaces . . . . .	1152
Enable MPLS and RSVP on Routers . . . . .	1153
Enable MPLS on Transit Router Interfaces . . . . .	1155
Verifying the MPLS Configuration . . . . .	1156
Verify MPLS Interfaces . . . . .	1157
Verify the RSVP Protocol . . . . .	1159
Verify RSVP Interfaces . . . . .	1160

Verify Protocol Families . . . . .	1162
Verify the RSVP Protocol . . . . .	1164
Define a Load-Balancing Policy . . . . .	1166
Use the traceroute Command to Verify MPLS Labels . . . . .	1167
Apply the Load-Balancing Policy to the Forwarding Table . . . . .	1168
Fast Reroute Problem Overview . . . . .	1168
Problem Establishing a GRE Tunnel Checklist . . . . .	1189
Troubleshooting GMPLS and GRE Tunnel . . . . .	1190
Verify Protocol Families . . . . .	1207
Determining LSP Status . . . . .	1210
Check the Status of the LSP . . . . .	1210
Display Extensive Status About the LSP . . . . .	1211
Check the Status of the LSP . . . . .	1215
Display Extensive Status About the LSP . . . . .	1215
Checking That RSVP Path Messages Are Sent and Received . . . . .	1219
Determining the Current RSVP Neighbor State . . . . .	1221
Take Appropriate Action . . . . .	1222
Examine BGP Routes . . . . .	1223
CLI Operational Mode Top-Level Commands . . . . .	1224
CLI Keyboard Shortcuts . . . . .	1226
Manage Output at the ---(more)--- Prompt . . . . .	1227
Working with Problems on Your Network . . . . .	1228
Isolating a Broken Network Connection . . . . .	1229
Identifying the Symptoms of a Broken Network Connection . . . . .	1230
Isolating the Causes of a Network Problem . . . . .	1231
Taking Appropriate Action for Resolving the Network Problem . . . . .	1232
Evaluating the Solution to Check Whether the Network Problem Is Resolved . . . . .	1232
Display Junos OS Information . . . . .	1233
Display Version Information for Junos OS Packages . . . . .	1234
Display the Current Active Router Configuration . . . . .	1235
Copy Junos OS to the Router . . . . .	1239
Add New Software . . . . .	1239
Compare Information Logged Before and After the Upgrade . . . . .	1240
Displaying LSP Status Events . . . . .	1240
Call Was Cleared by RSVP Event . . . . .	1243
Change in Active Path Event . . . . .	1243
Clear Call Event . . . . .	1244
Deselected as Active Event . . . . .	1244
Link Protection Down Event . . . . .	1245
Originate Call Event . . . . .	1247
ResvTear Received Event . . . . .	1247
Session Preempted Event . . . . .	1248
Displaying General LSP Error Events . . . . .	1249
Admission Control Failure Event . . . . .	1249
Explicit Route: Bad Loose Route Event . . . . .	1250
Explicit Route: Bad Strict Route Event . . . . .	1252
Explicit Route: Format Error Event . . . . .	1254
Explicit Route: Wrong Delivery Event . . . . .	1254

Invalid Destination Address Event . . . . .	1256
Invalid Filter for Policing Event . . . . .	1256
MPLS Graceful Restart: Recovery Failed Event . . . . .	1257
MPLS Label Allocation Failure Event . . . . .	1257
Non-RSVP Capable Router Detected Event . . . . .	1258
No Route Toward Destination Event . . . . .	1258
Unsupported Traffic Class Event . . . . .	1259
CSPF: Computation Result Accepted Event . . . . .	1260
CSPF: Reroute Due to Re-Optimization Event . . . . .	1260
Retry Limit Exceeded Event . . . . .	1260
Log the Software Version Information . . . . .	1261
Log the Hardware Version Information . . . . .	1262
Log the System Boot-Message Information . . . . .	1263
Log the BGP, IS-IS, and OSPF Adjacency Information . . . . .	1265
Back Up the Currently Running and Active File System . . . . .	1266
Reinstall Junos OS . . . . .	1267
Reconfigure Junos OS . . . . .	1267
Configure Host Names, Domain Names, and IP Addresses . . . . .	1268
Protecting Network Security by Configuring the Root Password . . . . .	1269
Check Network Connectivity . . . . .	1270
Copy Backup Configurations to the Router . . . . .	1271
Configure Host Names, Domain Names, and IP Addresses . . . . .	1271
Check Network Connectivity . . . . .	1272
Automatic Autobandwidth Adjustment Failed Event . . . . .	1272
Displaying DiffServ-Aware Traffic-Engineered LSP Events . . . . .	1274
Unsupported Traffic Class Event . . . . .	1275
Traffic Class Value Out of Allowed Range Event . . . . .	1275
The Combination of Setup Priority and Traffic Class Is Not One of the Configured TE Classes Event . . . . .	1275
RSVP Error, Subcode 7, Signal Type Does Not Match Link Encoding Event . . . .	1276
Unacceptable Label Value Event . . . . .	1276
Unsupported Switching Type Event . . . . .	1276
Gather Component Alarm Information . . . . .	1277
Display the Current Router Alarms . . . . .	1277
Display Error Messages in the Messages Log File . . . . .	1277
Display Error Messages in the Chassis Process Log File . . . . .	1278
Case Study for a CSPF Failure . . . . .	1278
Verify That the LSP Is Established . . . . .	1279
Check the Administrative Group Configuration . . . . .	1281
Examining a CSPF Failure . . . . .	1284
Verify the CSPF Failure . . . . .	1284
Examine the CSPF Log File . . . . .	1286
Examine the Traffic Engineering Database . . . . .	1287
Check the Administrative Group Configuration on R5 . . . . .	1290
Verify the CSPF Failure . . . . .	1291
Examining the Hello Message . . . . .	1293
Displaying the Status of IS-IS Adjacencies . . . . .	1295
Verifying Adjacent Routers . . . . .	1296
Examine the Forwarding Table . . . . .	1297

Check OSPF on a Stub Router . . . . .	1298
Checklist for Verifying the BGP Protocol and Peers . . . . .	1299
Verify BGP Peers . . . . .	1300
Verify BGP on an Internal Router . . . . .	1302
Verify BGP on a Border Router . . . . .	1304
Verify Advertised BGP Routes . . . . .	1307
Verify That a Particular BGP Route Is Received on Your Router . . . . .	1308
Examine the EBGp over IBGP Selection . . . . .	1308
Examine BGP Routes and Route Selection . . . . .	1309
Examine the Local Preference Selection . . . . .	1311
Examine the Multiple Exit Discriminator Route Selection . . . . .	1312
Examine the EBGp over IBGP Selection . . . . .	1313
Examine the IGP Cost Selection . . . . .	1314
Examine the Local Preference Selection . . . . .	1315
Examine the Multiple Exit Discriminator Route Selection . . . . .	1316
Examine the EBGp over IBGP Selection . . . . .	1317
Examine the IGP Cost Selection . . . . .	1318
Examine Routes in the Forwarding Table . . . . .	1319
Ping the Egress Router . . . . .	1320
View the RSVP Log File on Transit Routers . . . . .	1320
Check the RSVP Log File on the Egress Router . . . . .	1322
Determine and Correct the Problem on the Egress Router . . . . .	1322
Check the Routing CPU Memory Usage . . . . .	1325
Check Overall CPU and Memory Usage . . . . .	1325
Check Routing Protocol Process (rpd) Memory Usage . . . . .	1327
Display Tasks . . . . .	1330
Run Snmpwalk from an NMS System to a Juniper Router . . . . .	1332
Configure Trace Operations for SNMP . . . . .	1334
Query a MIB With SNMPGet . . . . .	1335
Check CPU Utilization . . . . .	1335
Check CPU Utilization per Process . . . . .	1337
Retrieve Version Information about Router Software Components . . . . .	1340
Checklist for Displaying Basic Chassis Information . . . . .	1341
Display Basic Chassis Information . . . . .	1341
Maintain a Single Configuration File for Both Routing Engines . . . . .	1344
Configure the New Group . . . . .	1344
Apply the New Group . . . . .	1345
Configure the New Group . . . . .	1346
Apply the New Group . . . . .	1348
List Files and Directories on a Router . . . . .	1349
Display File Contents . . . . .	1349
Rename a File on a Router . . . . .	1350
Delete a File on a Router . . . . .	1350
Check the Time on a Router . . . . .	1350
Check for Users in Configuration Mode . . . . .	1351
Check the Commands That Users Are Entering . . . . .	1352
Configure the Log File for Tracking CLI Commands . . . . .	1352
Display the Configured Log File . . . . .	1353
Configure the Log File for Tracking CLI Commands . . . . .	1354

Check When the Last Configuration Change Occurred .....	1354
Configure Configuration Change Tracking .....	1355
Display the Configured Log File .....	1355
Configure Configuration Change Tracking .....	1356
Display a Log File .....	1356
Configure IS-IS-Specific Options .....	1357
Displaying Detailed IS-IS Protocol Information .....	1357
Displaying Sent or Received IS-IS Protocol Packets .....	1360
Analyzing IS-IS Link-State PDUs in Detail .....	1361
Displaying Detailed IS-IS Protocol Information .....	1363
Analyzing IS-IS Link-State PDUs in Detail .....	1365
Configure OSPF-Specific Options .....	1367
Diagnose OSPF Session Establishment Problems .....	1367
Analyze OSPF Link-State Advertisement Packets in Detail .....	1371
Diagnose OSPF Session Establishment Problems .....	1372
Analyze OSPF Link-State Advertisement Packets in Detail .....	1375
Chassis .....	1376
Physical Interface Cards .....	1377
Routing Engine .....	1377
Compare Information Logged Before and After the Reinstall .....	1377
Back Up the New Software .....	1378
Monitor Hardware Components .....	1378
Log Software Version Information .....	1378
Hardware Components .....	1379
Chassis .....	1380
Flexible PIC Concentrators .....	1380
Physical Interface Cards .....	1380
Routing Engine .....	1381
Power Supplies .....	1381
Cooling System .....	1381

## Part 9

### Chapter 24

## Configuration Statements

<b>MPLS Configuration Statements .....</b>	<b>1385</b>
adaptive .....	1390
adjust-interval .....	1390
adjust-threshold .....	1391
adjust-threshold-activate-bandwidth .....	1391
adjust-threshold-overflow-limit .....	1392
adjust-threshold-underflow-limit .....	1392
admin-down .....	1393
admin-group (for Interfaces) .....	1393
admin-group (for LSPs) .....	1394
admin-group-extended .....	1395
admin-groups .....	1396
admin-groups-extended .....	1397
admin-groups-extended-range .....	1398
advertise-mode (MPLS) .....	1399
advertisement-hold-time .....	1400

allow-fragmentation	1400
always-mark-connection-protection-tlv	1401
associate-backup-pe-groups	1401
associate-lsp	1402
auto-bandwidth (MPLS Tunnel)	1403
auto-bandwidth (MPLS Statistics)	1404
auto-policing	1405
backup-pe-group	1406
bandwidth (Fast Reroute, Signaled, and Multiclass LSPs)	1407
bandwidth (Static LSP)	1408
bandwidth-model	1409
bandwidth-percent	1410
bfd-liveness-detection (Protocols MPLS)	1411
class-of-service (Protocols MPLS)	1412
container-label-switched-path	1413
corouted-bidirectional	1414
corouted-bidirectional-passive	1414
credibility	1415
database	1416
delay (querier)	1417
delay (responder)	1418
description (Protocols MPLS)	1419
deselect-on-bandwidth-failure	1420
diffserv-te	1421
disable (Protocols MPLS)	1422
dual-transport	1423
dynamic-tunnels	1424
egress-protection (MPLS)	1425
encoding-type	1426
entropy-label	1426
ethernet-vlan (Protocols Link Management)	1427
ether-pseudowire	1427
exclude (for Administrative Groups)	1428
exclude (for Fast Reroute)	1428
exclude-srlg	1429
expand-loose-hop	1430
explicit-null (Protocols MPLS)	1431
export (MPLS Traffic engineering database)	1432
failure-action (Protocols MPLS)	1433
family	1434
family mpls	1435
fast-reroute (Protocols MPLS)	1438
fate-sharing	1439
from (Protocols MPLS)	1440
gpid	1441
gre (Routing Options)	1442
hop-limit	1443
import (MPLS Traffic Engineering Database)	1444
ip-tunnel-rpf-check	1445

include-all (for Administrative Groups) .....	1446
include-all (for Fast Reroute) .....	1446
include-any (for Administrative Groups) .....	1447
include-any (for Fast Reroute) .....	1447
ingress (LSP) .....	1448
install (Protocols MPLS) .....	1449
ingress-policy .....	1450
interface (Protocols MPLS) .....	1451
inter-domain .....	1452
ipv6-tunneling .....	1452
label-switched-path (Protocols MPLS) .....	1453
label-switched-path-template (Container LSP) .....	1456
ldp-tunneling .....	1456
least-fill .....	1456
link-protection (Dynamic LSPs) .....	1457
link-protection (Static LSPs) .....	1458
load-balance-label-capability .....	1458
log-updown (Protocols MPLS) .....	1459
longest-match .....	1460
loss (querier) .....	1461
loss (responder) .....	1462
loss-delay (querier) .....	1463
lsp-attributes .....	1464
lsping-channel-type .....	1465
maximum-bandwidth (Protocols MPLS) .....	1465
maximum-labels .....	1466
minimum-bandwidth-adjust-interval .....	1467
minimum-bandwidth-adjust-threshold-change .....	1467
minimum-bandwidth-adjust-threshold-value .....	1468
metric (Protocols MPLS) .....	1469
minimum-bandwidth .....	1469
monitor-bandwidth .....	1470
most-fill .....	1470
mpls (Protocols) .....	1470
mpls-tp-mode .....	1471
mtu-signaling .....	1471
next-hop (Protocols MPLS) .....	1472
no-bfd-triggered-local-repair .....	1473
no-cspf .....	1474
no-decrement-ttl .....	1475
no-install-to-address .....	1476
no-load-balance-label-capability .....	1476
no-mcast-replication .....	1477
no-propagate-ttl .....	1478
no-transit-statistics .....	1479
no-trap .....	1479
node-protection (Static LSP) .....	1480
normalization .....	1481
oam (Protocols MPLS) .....	1482



optimize-adaptive-teardown	1483
optimize-aggressive	1484
optimize-hold-dead-delay	1485
optimize-switchover-delay	1486
optimize-timer (Protocols MPLS)	1487
p2mp (Protocols MPLS)	1488
p2mp-lsp-next-hop	1489
path (Protocols MPLS)	1490
path-mtu	1491
per-prefix-label	1492
performance-monitoring (Protocols MPLS)	1493
policing (Protocols MPLS)	1494
pop	1495
preference (Protocols MPLS)	1496
primary (Protocols MPLS)	1497
priority (Protocols MPLS)	1498
protection-revert-time	1499
push	1500
random	1501
record	1502
retry-limit	1503
retry-timer	1503
revert-timer	1504
responder (performance-monitoring)	1505
rpf-check-policy (Routing Options)	1506
rsvp-error-hold-time	1507
sampling (Protocols MPLS)	1508
secondary (Protocols MPLS)	1509
select	1510
signal-bandwidth	1510
smart-optimize-timer	1511
soft-preemption (Protocols MPLS)	1512
splitting-merging	1513
srlg	1514
srlg-cost	1515
srlg-value	1515
standby	1516
static-label-switched-path	1517
statistics (Protocols MPLS)	1519
swap	1520
switch-away-lsps	1521
switching-type	1522
sync-active-path-bandwidth	1523
te-class-matrix	1524
to	1525
traceoptions (Protocols MPLS)	1526
traffic-class (delay)	1528
traffic-class (loss)	1530
traffic-class (loss-delay)	1532

**Chapter 25**

traffic-engineering (Protocols MPLS) .....	1534
traffic-engineering (Protocols BGP) .....	1535
transit-lsp-association .....	1536
ultimate-hop-popping .....	1537
<b>RSVP Configuration Statements .....</b>	<b>1539</b>
admin-group .....	1541
aggregate (Protocols RSVP) .....	1542
authentication-key (Protocols RSVP) .....	1543
bandwidth (Protocols RSVP) .....	1544
bypass (Signaled LSP) .....	1545
bypass (Static LSP) .....	1546
class-of-service (Protocols RSVP) .....	1547
destination-networks .....	1548
devices .....	1549
disable (Protocols RSVP) .....	1550
dynamic-bidirectional-transport .....	1551
fast-reroute (Protocols RSVP) .....	1551
graceful-deletion-timeout .....	1552
graceful-restart (Protocols RSVP) .....	1553
hello-acknowledgements .....	1554
hello-interval (Protocols RSVP) .....	1554
hop-limit .....	1555
interface (Protocols RSVP) .....	1556
keep-multiplier .....	1558
label-switched-path-template (Multicast) .....	1559
link-protection (RSVP) .....	1561
load-balance (Protocols RSVP) .....	1562
max-bypasses .....	1563
no-local-reversion .....	1564
node-hello .....	1565
no-adjacency-down-notification (Protocols IS-IS) .....	1566
no-cspf (Protocols RSVP) .....	1567
no-enhanced-frr-profile (Protocols RSVP) .....	1567
no-interface-hello .....	1568
no-neighbor-down-notification .....	1569
no-node-id-subobject .....	1569
no-p2mp-sublsp .....	1570
node-link-protection (Protocols MPLS) .....	1570
optimize-timer (Protocols RSVP) .....	1571
path (Protocols RSVP) .....	1572
peer-interface (Protocols RSVP) .....	1573
preemption .....	1574
priority (Protocols RSVP) .....	1575
refresh-time .....	1576
reliable .....	1577
rsvp .....	1578
rsvp-te (Routing Options) .....	1579
setup-protection .....	1579

	soft-preemption (Protocols RSVP) .....	1580
	static-label-switched-path .....	1581
	subscription .....	1582
	traceoptions (Protocols RSVP) .....	1583
	transit .....	1585
	tunnel-services (RSVP) .....	1586
	ultimate-hop-popping .....	1587
	update-threshold .....	1588
<b>Chapter 26</b>	<b>LDP Configuration Statements .....</b>	<b>1589</b>
	allow-subnet-mismatch .....	1591
	authentication-algorithm .....	1592
	authentication-key (Protocols LDP) .....	1594
	authentication-key-chain (Protocols LDP) .....	1595
	auto-targeted-session .....	1596
	bfd-liveness-detection (Protocols LDP) .....	1597
	deaggregate .....	1598
	disable (Protocols LDP) .....	1599
	dod-request-policy .....	1600
	downstream-on-demand .....	1600
	ecmp .....	1601
	egress-policy .....	1601
	explicit-null (Protocols LDP) .....	1602
	export (Protocols LDP) .....	1602
	failure-action (Protocols LDP) .....	1603
	fec .....	1604
	graceful-restart (Protocols LDP) .....	1605
	hello-interval (Protocols LDP) .....	1606
	helper-disable (LDP) .....	1607
	holddown-interval .....	1608
	hold-time (Protocols LDP) .....	1609
	ignore-lsp-metrics .....	1610
	igp-synchronization .....	1610
	import (Protocols LDP) .....	1611
	ingress-policy .....	1612
	interface (Protocols LDP) .....	1613
	keepalive-interval .....	1614
	keepalive-timeout .....	1615
	l2-smart-policy .....	1615
	label-withdrawal-delay .....	1616
	ldp .....	1617
	ldp-synchronization .....	1620
	log-updown (Protocols LDP) .....	1621
	make-before-break (LDP) .....	1622
	maximum-neighbor-recovery-time .....	1623
	mldp-inband-signalling (Protocols Multipoint LDP) .....	1624
	mofrr-asm-starg (Multicast-Only Fast Reroute in a PIM Domain) .....	1625
	mofrr-disjoint-upstream-only (Multicast-Only Fast Reroute in a PIM Domain) .....	1626

	mofrr-no-backup-join (Multicast-Only Fast Reroute in a PIM Domain) . . . . .	1627
	mofrr-primary-path-selection-by-routing (Multicast-Only Fast Reroute) . . . .	1628
	no-forwarding . . . . .	1629
	oam (Protocols LDP) . . . . .	1630
	p2mp (Protocols LDP) . . . . .	1631
	p2mp-ldp-next-hop . . . . .	1632
	periodic-traceroute . . . . .	1633
	policing (Protocols LDP) . . . . .	1635
	policy (Multicast-Only Fast Reroute) . . . . .	1636
	policy (Protocols Multipoint LDP) . . . . .	1638
	preference (Protocols LDP) . . . . .	1639
	reconnect-time . . . . .	1640
	recovery-time . . . . .	1640
	session (ldp) . . . . .	1641
	session-protection . . . . .	1642
	stream-protection (Multicast-Only Fast Reroute) . . . . .	1643
	strict-targeted-hellos . . . . .	1644
	targeted-hello . . . . .	1644
	traceoptions (Protocols LDP) . . . . .	1645
	track-igp-metric . . . . .	1647
	traffic-statistics (Protocols LDP) . . . . .	1648
	transport-address . . . . .	1650
	version (BFD) . . . . .	1651
<b>Chapter 27</b>	<b>CCC and TCC Configuration Statements . . . . .</b>	<b>1653</b>
	connections (Circuits) . . . . .	1654
	encapsulation (Logical Interface) . . . . .	1655
	encapsulation (Physical Interface) . . . . .	1659
	interface-switch . . . . .	1665
	lsp-switch . . . . .	1666
	output-interface (CCC) . . . . .	1666
	p2mp-receive-switch . . . . .	1667
	p2mp-transmit-switch . . . . .	1668
	remote-interface-switch . . . . .	1669
<b>Chapter 28</b>	<b>GMPLS Configuration Statements . . . . .</b>	<b>1671</b>
	address (Peer) . . . . .	1672
	control-channel (Protocols Link Management Peer) . . . . .	1672
	dead-interval . . . . .	1673
	disable (GMPLS) . . . . .	1674
	disable (OSPF) . . . . .	1675
	hello-dead-interval . . . . .	1676
	hello-interval (LMP) . . . . .	1677
	hello-interval (Protocols OSPF) . . . . .	1678
	interface (Protocols Link Management) . . . . .	1679
	label-switched-path (Protocols Link Management) . . . . .	1679
	link-management . . . . .	1680
	lmp-control-channel . . . . .	1681
	lmp-protocol . . . . .	1681
	local-address (Protocols Link Management) . . . . .	1682

	passive (Protocols Link Management) . . . . .	1682
	peer (Protocols LMP) . . . . .	1683
	peer-interface (Protocols OSPF) . . . . .	1684
	remote-address (for LMP Control Channel) . . . . .	1685
	remote-address (for LMP Traffic Engineering) . . . . .	1685
	remote-id . . . . .	1686
	retransmission-interval . . . . .	1686
	retransmit-interval (OSPF) . . . . .	1687
	retry-limit (Protocols Link Management) . . . . .	1688
	te-link . . . . .	1689
	traceoptions (Protocols Link Management) . . . . .	1690
	transit-delay (OSPF) . . . . .	1692
	upstream-label . . . . .	1693
<b>Chapter 29</b>	<b>PCEP Configuration Statements . . . . .</b>	<b>1695</b>
	pcep . . . . .	1696
	delegation-cleanup-timeout . . . . .	1697
	delegation-priority . . . . .	1698
	destination-ipv4-address . . . . .	1698
	destination-port . . . . .	1699
	lsp-external-controller . . . . .	1699
	max-unknown-messages . . . . .	1700
	message-rate-limit . . . . .	1701
	pce . . . . .	1702
	pce-group (PCE) . . . . .	1703
	pce-group (Protocols PCEP) . . . . .	1704
	pce-type . . . . .	1705
	querier (performance-monitoring) . . . . .	1706
	traceoptions (PCE) . . . . .	1708
	traceoptions (Protocols PCEP) . . . . .	1710
	update-rate-limit . . . . .	1711
<b>Part 10</b>	<b>Operational Commands</b>	
<b>Chapter 30</b>	<b>MPLS Operational Commands . . . . .</b>	<b>1715</b>
	clear mpls lsp . . . . .	1717
	clear mpls container-lsp . . . . .	1719
	clear performance-monitoring mpls lsp . . . . .	1721
	monitor mpls delay rsvp . . . . .	1722
	monitor mpls loss rsvp . . . . .	1726
	monitor mpls loss-delay rsvp . . . . .	1731
	ping mpls bgp . . . . .	1735
	ping mpls lsp-end-point . . . . .	1737
	request mpls container-lsp . . . . .	1739
	request mpls lsp adjust-autobandwidth . . . . .	1740
	show connections . . . . .	1742
	show link-management . . . . .	1745
	show link-management peer . . . . .	1749
	show link-management routing . . . . .	1751
	show link-management statistics . . . . .	1754

	show link-management te-link . . . . .	1756
	show mpls admin-groups . . . . .	1758
	show mpls association . . . . .	1760
	show mpls call-admission-control . . . . .	1762
	show mpls container-lsp . . . . .	1764
	show mpls context-identifier . . . . .	1771
	show mpls correlation label . . . . .	1773
	show mpls correlation nexthop-id . . . . .	1775
	show mpls cspf . . . . .	1776
	show mpls diffserv-te . . . . .	1778
	show mpls egress-protection . . . . .	1780
	show mpls interface . . . . .	1782
	show mpls label usage . . . . .	1784
	show mpls lsp . . . . .	1786
	show mpls lsp autobandwidth . . . . .	1804
	show mpls path . . . . .	1807
	show mpls srlg . . . . .	1809
	show mpls static-lsp . . . . .	1810
	show performance-monitoring mpls lsp . . . . .	1814
	show ted database . . . . .	1820
	show ted link . . . . .	1828
	show ted protocol . . . . .	1831
	traceroute mpls bgp . . . . .	1833
	transit (Chained Composite Next Hops) . . . . .	1837
<b>Chapter 31</b>	<b>RSVP Operational Commands . . . . .</b>	<b>1839</b>
	clear rsvp session . . . . .	1840
	clear rsvp statistics . . . . .	1842
	monitor label-switched-path . . . . .	1843
	ping mpls rsvp . . . . .	1846
	show rsvp interface . . . . .	1851
	show rsvp neighbor . . . . .	1856
	show rsvp session . . . . .	1861
	show rsvp statistics . . . . .	1871
	show rsvp version . . . . .	1876
	traceroute mpls rsvp . . . . .	1879
<b>Chapter 32</b>	<b>LDP Operational Commands . . . . .</b>	<b>1883</b>
	clear ldp neighbor . . . . .	1884
	clear ldp session . . . . .	1885
	clear ldp statistics . . . . .	1886
	ping mpls ldp . . . . .	1887
	show ldp database . . . . .	1890
	show ldp fec-filters . . . . .	1899
	show ldp interface . . . . .	1900
	show ldp neighbor . . . . .	1902
	show ldp overview . . . . .	1904
	show ldp p2mp tunnel . . . . .	1908
	show ldp path . . . . .	1909
	show ldp route . . . . .	1911

---

	show ldp session . . . . .	1919
	show ldp statistics . . . . .	1926
	show ldp traffic-statistics . . . . .	1930
	show security keychain . . . . .	1934
	traceroute mpls ldp . . . . .	1937
<b>Chapter 33</b>	<b>CCC and TCC Operational Commands . . . . .</b>	<b>1941</b>
	show connections . . . . .	1942
	show route ccc . . . . .	1945
	show route forwarding-table . . . . .	1946
<b>Chapter 34</b>	<b>PCEP Operational Commands . . . . .</b>	<b>1961</b>
	clear path-computation-client statistics . . . . .	1962
	request path-computation-client active-pce . . . . .	1963
	show path-computation-client active-pce . . . . .	1964
	show path-computation-client statistics . . . . .	1968





# List of Figures

<b>Part 1</b>	<b>Understanding Traffic Engineering</b>	
<b>Chapter 1</b>	<b>Traffic Engineering Overview</b>	<b>3</b>
	Figure 1: Junos OS Implementation of BGP Link-State Distribution	11
<b>Part 2</b>	<b>Configuring MPLS</b>	
<b>Chapter 2</b>	<b>MPLS Overview</b>	<b>19</b>
	Figure 2: Label Encoding	26
	Figure 3: Class-of-Service Bits	27
	Figure 4: CSPF Computation Process	31
	Figure 5: Aggregation Router A Dual-Homed on Core Routers B and C	34
	Figure 6: Typical SPF Tree, Sourced from Router A	35
	Figure 7: Modified SPF Tree, Using LSP A–D as a Shortcut	35
	Figure 8: IGP Shortcuts	36
	Figure 9: IGP Shortcuts in a Bigger Network	37
	Figure 10: SPF Computations with Advertised LSPs	38
	Figure 11: MPLS Application Topology	40
	Figure 12: How BGP Determines How to Reach Next-Hop Addresses	41
	Figure 13: Routing and Forwarding Tables, traffic-engineering bgp	44
	Figure 14: Routing and Forwarding Tables, traffic-engineering bgp-igp	45
	Figure 15: Detours Established for an LSP Using Fast Reroute	47
	Figure 16: Detour After the Link from Router B to Router C Fails	47
	Figure 17: Detours Merging into Other Detours	48
	Figure 18: Basic Bidirectional Measurement	55
<b>Chapter 3</b>	<b>Configuring MPLS Routers</b>	<b>59</b>
	Figure 19: Ingress View of Abstract Hops	74
	Figure 20: Sample Path Constraints for Abstract Hops	77
	Figure 21: IPv6 Networks Linked by MPLS IPv4 Tunnels	83
	Figure 22: MPLS-TP OAM Associated Bidirectional LSPs	150
	Figure 23: MPLS Inter-AS Link-Node Protection Conceptual Topology	161
	Figure 24: MPLS Inter-AS Link-Node Protection Example Topology	163
	Figure 25: Egress Protection LSP Configured from Router PE1 to Router PE2	176
	Figure 26: Egress Protection LSP Configured from Router PE1 to Router PE2	181
	Figure 27: Co-located PLR and protector in collocated protector model	197
	Figure 28: Dynamic MPLS-over-UDP Tunnels	224
	Figure 29: Anti-Spoofing Protection for Next-hop-based Dynamic Tunnels	236
<b>Chapter 4</b>	<b>Configuring MPLS-Signaled LSPs</b>	<b>239</b>
	Figure 30: Corouted Bidirectional LSP	248
	Figure 31: Penultimate-Hop Popping for an LSP	250

	Figure 32: Ultimate-Hop Popping for an LSP . . . . .	250
	Figure 33: least-fill Load Balancing Algorithm Example . . . . .	282
<b>Chapter 5</b>	<b>Configuring Static and Explicit-Path LSPs . . . . .</b>	<b>299</b>
	Figure 34: Static MPLS Configuration . . . . .	301
<b>Chapter 6</b>	<b>Configuring Point-to-Multipoint LSPs . . . . .</b>	<b>309</b>
	Figure 35: Point-to-Multipoint LSPs . . . . .	310
	Figure 36: RSVP-Signaled Point-to-Multipoint LSP . . . . .	314
<b>Chapter 8</b>	<b>Configuring Miscellaneous MPLS Properties . . . . .</b>	<b>361</b>
	Figure 37: Topology with BFD-Triggered Local Repair . . . . .	386
	Figure 38: Link-State Distribution Using BGP . . . . .	394
	Figure 39: Sample Topology . . . . .	412
	Figure 40: Dynamic Bandwidth Management Using Container LSP . . . . .	442
	Figure 41: Configuring On-Demand Loss and Delay Measurement . . . . .	468
	Figure 42: Configuring Pro-Active Loss and Delay Measurements . . . . .	479
<b>Part 3</b>	<b>Configuring RSVP</b>	
<b>Chapter 10</b>	<b>Configuring RSVP . . . . .</b>	<b>501</b>
	Figure 43: Service Provider Network with PE Routers . . . . .	510
	Figure 44: Penultimate-Hop Popping for an LSP . . . . .	519
	Figure 45: Ultimate-Hop Popping for an LSP . . . . .	520
<b>Chapter 11</b>	<b>Configuring RSVP Link Protection and Node Protection to Protect from Traffic Failures . . . . .</b>	<b>529</b>
	Figure 46: Link Protection Creating a Bypass LSP for the Protected Interface . .	530
	Figure 47: Node Protection Creating a Next-Next-Hop Bypass LSP . . . . .	531
	Figure 48: One-to-One Backup . . . . .	534
	Figure 49: Facility Backup . . . . .	535
<b>Chapter 13</b>	<b>Configuring RSVP LSP Tunnels . . . . .</b>	<b>551</b>
	Figure 50: RSVP LSP Tunnel Topology Diagram . . . . .	553
<b>Part 4</b>	<b>Configuring LDP</b>	
<b>Chapter 14</b>	<b>LDP Overview . . . . .</b>	<b>577</b>
	Figure 51: Swap and Push When LDP LSPs Are Tunneled Through RSVP LSPs . . . . .	583
	Figure 52: Double Push When LDP LSPs Are Tunneled Through RSVP LSPs . .	584
<b>Chapter 15</b>	<b>Configuring LDP . . . . .</b>	<b>587</b>
	Figure 53: Example Longest Match for LDP . . . . .	594
	Figure 54: Multicast LDP Support for Targeted LDP Session . . . . .	629
	Figure 55: Incomplete Coverage Problem with LFA . . . . .	630
	Figure 56: Manually Configured RSVP LSP Coverage . . . . .	631
	Figure 57: Dynamically Configured RSVP LSP Coverage . . . . .	632
	Figure 58: Multicast LDP Link Protection Sample Topology . . . . .	634
	Figure 59: LDP Label Operation Sample Topology . . . . .	635
	Figure 60: Unicast LDP Label Operation . . . . .	637
	Figure 61: Multicast LDP Label Operation . . . . .	638

	Figure 62: LDP Link Protection Label Operation . . . . .	641
	Figure 63: MoFRR Sample Topology . . . . .	646
	Figure 64: MoFRR IP Route Lookup in the Packet Forwarding Engine . . . . .	649
	Figure 65: MoFRR MPLS Route Lookup in the Packet Forwarding Engine . . . . .	650
	Figure 66: MoFRR in a Multipoint LDP Domain . . . . .	655
	Figure 67: Example LDP Native IPv6 Support . . . . .	677
	Figure 68: Label Bindings in M-LDP Signaling . . . . .	693
	Figure 69: Sample M-LDP Topology in PIM-Free MPLS Core . . . . .	694
	Figure 70: Sample M-LDP Topology in PIM-Enabled MPLS Core . . . . .	695
	Figure 71: M-LDP In-Band Signaling for Point-to-Multipoint LSPs Example Topology . . . . .	702
<b>Part 5</b>	<b>Configuring Circuit Cross-Connect (CCC) and Translational Cross-Connect (TCC)</b>	
<b>Chapter 16</b>	<b>CCC and TCC Overview . . . . .</b>	<b>739</b>
	Figure 72: TCC Example . . . . .	740
<b>Chapter 17</b>	<b>Configuring CCC and TCC . . . . .</b>	<b>743</b>
	Figure 73: Layer 2 Switching Cross-Connect . . . . .	743
	Figure 74: Topology of a Frame Relay Layer 2 Switching Cross-Connect . . . . .	749
	Figure 75: Sample Topology of a VLAN Layer 2 Switching Cross-Connect . . . . .	750
	Figure 76: MPLS Tunnel Cross-Connect . . . . .	751
	Figure 77: Example Topology of MPLS LSP Tunnel Cross-Connect . . . . .	754
	Figure 78: Remote Interface Switch Connecting Two CE Routers Using CCC . . . . .	760
<b>Part 6</b>	<b>Configuring GMPLS</b>	
<b>Chapter 19</b>	<b>Configuring GMPLS . . . . .</b>	<b>773</b>
	Figure 79: Traditional Layer 2 Point-to-Point Services . . . . .	789
	Figure 80: GMPLS RSVP-TE VLAN LSP . . . . .	790
	Figure 81: Setting Up a GMPLS VLAN LSP . . . . .	796
	Figure 82: Data Traffic Flow of GMPLS VLAN LSP . . . . .	800
	Figure 83: Configuring GMPLS RSVP-TE VLAN LSP Signaling . . . . .	801
<b>Part 7</b>	<b>Configuring Path Computation Element Protocol (PCEP)</b>	
<b>Chapter 21</b>	<b>PCEP Overview . . . . .</b>	<b>827</b>
	Figure 84: PCEP Session . . . . .	827
	Figure 85: Example MPLS Traffic Engineering . . . . .	831
	Figure 86: PCC and RSVP-TE . . . . .	834
	Figure 87: Example PCE for MPLS RSVP-TE . . . . .	836
<b>Chapter 22</b>	<b>Configuring PCEP . . . . .</b>	<b>843</b>
	Figure 88: Configuring PCEP for MPLS RSVP-TE . . . . .	845
	Figure 89: Example PCE-Initiated LSP for MPLS RSVP-TE . . . . .	858
	Figure 90: Example PCE-Controlled Point-to-Multipoint LSPs . . . . .	870
<b>Part 8</b>	<b>Troubleshooting Information</b>	
<b>Chapter 23</b>	<b>Troubleshooting MPLS . . . . .</b>	<b>887</b>

Figure 91: Node-Link Protection . . . . .	904
Figure 92: Many-to-One or Link Protection . . . . .	909
Figure 93: Checking the MPLS Layer . . . . .	922
Figure 94: MPLS Network Broken at the MPLS Layer . . . . .	923
Figure 95: Layered MPLS Network Troubleshooting Model . . . . .	949
Figure 96: MPLS Basic Network Topology Example . . . . .	951
Figure 97: Verifying the Physical Layer . . . . .	956
Figure 98: MPLS Network Broken at the Physical Layer . . . . .	957
Figure 99: Checking the Data Link Layer . . . . .	968
Figure 100: MPLS Network Broken at the Data Link Layer . . . . .	969
Figure 101: IP and IGP Layers . . . . .	989
Figure 102: MPLS Network Broken at the IP and IGP Layers . . . . .	990
Figure 103: MPLS Network Broken at the IP Layer . . . . .	991
Figure 104: MPLS Network Broken at the OSPF Protocol Layer . . . . .	1009
Figure 105: Checking the RSVP Layer . . . . .	1035
Figure 106: MPLS Network Broken at the RSVP Layer . . . . .	1036
Figure 107: MPLS Topology for Verifying LSP Use . . . . .	1059
Figure 108: Load-Balancing Network Topology . . . . .	1068
Figure 109: Three Areas Where a Software Crash Can Occur . . . . .	1086
Figure 110: Path Protection . . . . .	1111
Figure 111: One-to-One Backup Detours . . . . .	1115
Figure 112: IS-IS Network Topology . . . . .	1133
Figure 113: OSPF Network Topology . . . . .	1141
Figure 114: BGP Network Topology . . . . .	1145
Figure 115: MPLS Network Topology . . . . .	1157
Figure 116: Fast Reroute Problem Network . . . . .	1169
Figure 117: GMPLS Network Topology . . . . .	1192
Figure 118: MPLS Network Topology . . . . .	1210
Figure 119: Process for Diagnosing Problems in Your Network . . . . .	1229
Figure 120: Network with a Problem . . . . .	1229
Figure 121: CSPF Topology with Administrative Group Coloring . . . . .	1279
Figure 122: User-Provided Constraints . . . . .	1288
Figure 123: RSVP Hello Message . . . . .	1293
Figure 124: IS-IS Network Topology . . . . .	1296
Figure 125: BGP Network Topology . . . . .	1301
Figure 126: BGP Network Topology . . . . .	1310
Figure 127: Chassis MIB Tree . . . . .	1336
Figure 128: System Application MIB Tree . . . . .	1338

# List of Tables

	<b>About the Documentation</b> . . . . .	<b>xlvi</b>
	Table 1: Notice Icons . . . . .	xlvii
	Table 2: Text and Syntax Conventions . . . . .	xlviii
<b>Part 2</b>	<b>Configuring MPLS</b>	
<b>Chapter 3</b>	<b>Configuring MPLS Routers</b> . . . . .	<b>59</b>
	Table 3: Hybrid Computation for Abstract Hops . . . . .	70
	Table 4: Using Abstract Hops in Path Constraints . . . . .	75
<b>Chapter 4</b>	<b>Configuring MPLS-Signaled LSPs</b> . . . . .	<b>239</b>
	Table 5: MPLS LSP Load Balancing Options . . . . .	262
	Table 6: MPLS CoS Values . . . . .	274
<b>Chapter 7</b>	<b>Configuring DiffServ-Aware Traffic Engineering to Achieve Service Level Guarantees on an MPLS network</b> . . . . .	<b>337</b>
	Table 7: Default Values for the Traffic Engineering Class Matrix . . . . .	345
<b>Chapter 8</b>	<b>Configuring Miscellaneous MPLS Properties</b> . . . . .	<b>361</b>
	Table 8: Sample Scenarios for Using 3, 4, or 5 MPLS Labels . . . . .	362
	Table 9: LSP Sequence Order for Bin Packing . . . . .	412
	Table 10: LSP Sequence Order for Deadlock . . . . .	413
	Table 11: LSP Sequence Order for Predictability . . . . .	414
	Table 12: LSP Sequence Order for Predictability . . . . .	414
	Table 13: Normalization with Per-LSP Autobandwidth Adjustment Changes . . . . .	424
	Table 14: Normalization with Traffic Growth . . . . .	425
	Table 15: Applicability of RSVP LSPs Configuration to a Container LSP . . . . .	432
<b>Part 3</b>	<b>Configuring RSVP</b>	
<b>Chapter 10</b>	<b>Configuring RSVP</b> . . . . .	<b>501</b>
	Table 16: show rsvp route-session-id Output Fields . . . . .	528
<b>Chapter 11</b>	<b>Configuring RSVP Link Protection and Node Protection to Protect from Traffic Failures</b> . . . . .	<b>529</b>
	Table 17: One-to-One Backup Compared with Facility Backup . . . . .	533
<b>Part 4</b>	<b>Configuring LDP</b>	
<b>Chapter 15</b>	<b>Configuring LDP</b> . . . . .	<b>587</b>
	Table 18: from Operators That Apply to LDP Received-Label Filtering . . . . .	613
	Table 19: to Operators for LDP Outbound-Label Filtering . . . . .	615

<b>Part 7</b>	<b>Configuring Path Computation Element Protocol (PCEP)</b>
<b>Chapter 21</b>	<b>PCEP Overview ..... 827</b>
	Table 20: Applicability of MPLS and Existing LSP Configurations to a PCE-Controlled LSP ..... 838
<b>Part 8</b>	<b>Troubleshooting Information</b>
<b>Chapter 23</b>	<b>Troubleshooting MPLS ..... 887</b>
	Table 21: Checklist for Checking the MPLS Layer ..... 921
	Table 22: Checklist for Working with the Layered MPLS Troubleshooting Model ..... 948
	Table 23: Checklist for Verifying the Physical Layer ..... 955
	Table 24: Checklist for Checking the Data Link Layer ..... 967
	Table 25: Checklist for Verifying the IP and IGP Layers ..... 987
	Table 26: Checklist for Checking the RSVP Layer ..... 1033
	Table 27: Checklist for Determining the LSP State ..... 1056
	Table 28: Checklist for Verifying LSP Use ..... 1058
	Table 29: MPLS Label Range Allocations ..... 1061
	Table 30: MPLS Label Range Allocations ..... 1064
	Table 31: Checklist for Collecting Crash Data ..... 1084
	Table 32: Major Routing Engine Daemons ..... 1092
	Table 33: Major Routing Engine Daemons ..... 1096
	Table 34: NVRAM Location on the Microkernel of the Packet Forwarding Engine Components ..... 1099
	Table 35: Problem Establishing a GRE Tunnel Checklist ..... 1190
	Table 36: CLI Operational Mode Top-Level Commands ..... 1224
	Table 37: CLI Keyboard Shortcuts ..... 1226
	Table 38: Keyboard Shortcuts at the ---(more)--- Prompt ..... 1227
	Table 39: Checklist for Working with Problems on Your Network ..... 1228
	Table 40: Checklist for Verifying the BGP Protocol and Peers ..... 1300
	Table 41: Checklist for Displaying Basic Chassis Information ..... 1341
	Table 42: Output fields for the show chassis hardware command ..... 1343
	Table 43: Severity Levels ..... 1353
	Table 44: Severity Levels ..... 1354
	Table 45: IS-IS Protocol Tracing Flags ..... 1359
	Table 46: IS-IS Protocol Tracing Flags ..... 1364
	Table 47: OSPF Protocol Tracing Flags ..... 1368
	Table 48: OSPF Protocol Tracing Flags ..... 1373
	Table 49: Maximum Number of Routers per Rack ..... 1376
	Table 50: Maximum Number of Routers per Rack ..... 1380
<b>Part 10</b>	<b>Operational Commands</b>
<b>Chapter 30</b>	<b>MPLS Operational Commands ..... 1715</b>
	Table 51: monitor mpls delay rsvp Output Fields ..... 1723
	Table 52: monitor mpls loss rsvp Output Fields ..... 1727
	Table 53: show connections Output Fields ..... 1743
	Table 54: show link-management Output Fields ..... 1745
	Table 55: show link-management peer Output Fields ..... 1749

	Table 56: show link-management routing Output Fields . . . . .	1751
	Table 57: show link-management statistics Output Fields . . . . .	1754
	Table 58: show link-management te-link Output Fields . . . . .	1756
	Table 59: show mpls admin-groups Output Fields . . . . .	1758
	Table 60: show mpls association Output Fields . . . . .	1760
	Table 61: show mpls call-admission-control Output Fields . . . . .	1762
	Table 62: show mpls container-lsp Output Fields . . . . .	1765
	Table 63: show mpls lsp Output Fields . . . . .	1771
	Table 64: show mpls correlation label Output Fields . . . . .	1773
	Table 65: show mpls correlation nexthop-id Output Fields . . . . .	1775
	Table 66: show mpls cspf Output Fields . . . . .	1776
	Table 67: show mpls diffserv-te Output Fields . . . . .	1778
	Table 68: show mpls lsp Output Fields . . . . .	1780
	Table 69: show mpls interface Output Fields . . . . .	1782
	Table 70: show mpls label usage Fields . . . . .	1784
	Table 71: show mpls lsp Output Fields . . . . .	1788
	Table 72: show mpls lsp autobandwidth Output Fields . . . . .	1804
	Table 73: show mpls path Output Fields . . . . .	1807
	Table 74: show mpls srlg Output Fields . . . . .	1809
	Table 75: show mpls static-lsp Output Fields . . . . .	1811
	Table 76: show performance-monitoring mpls lsp Output Fields . . . . .	1815
	Table 77: show ted database Output Fields . . . . .	1820
	Table 78: show ted link Output Fields . . . . .	1828
	Table 79: show ted protocol Output Fields . . . . .	1831
	Table 80: traceroute mpls bgp Output Fields . . . . .	1834
<b>Chapter 31</b>	<b>RSVP Operational Commands . . . . .</b>	<b>1839</b>
	Table 81: Output Control Keys for the monitor label-switched-path Command . . . . .	1843
	Table 82: monitor label-switched-path Output Fields . . . . .	1844
	Table 83: show rsvp interface Output Fields . . . . .	1852
	Table 84: show rsvp neighbor Output Fields . . . . .	1856
	Table 85: show rsvp session Output Fields . . . . .	1863
	Table 86: show rsvp statistics Output Fields . . . . .	1871
	Table 87: show rsvp version Output Fields . . . . .	1876
	Table 88: traceroute mpls rsvp Output Fields . . . . .	1880
<b>Chapter 32</b>	<b>LDP Operational Commands . . . . .</b>	<b>1883</b>
	Table 89: show ldp database Output Fields . . . . .	1891
	Table 90: show ldp fec-filters Output Fields . . . . .	1899
	Table 91: show ldp interface Output Fields . . . . .	1900
	Table 92: show ldp neighbor Output Fields . . . . .	1902
	Table 93: show ldp overview Output Fields . . . . .	1904
	Table 94: show ldp path Output Fields . . . . .	1909
	Table 95: show ldp route Output Fields . . . . .	1912
	Table 96: show ldp session Output Fields . . . . .	1919
	Table 97: show ldp statistics Output Fields . . . . .	1926
	Table 98: show ldp traffic-statistics Output Fields . . . . .	1931
	Table 99: show security keychain Output Fields . . . . .	1934
	Table 100: traceroute mpls ldp Output Fields . . . . .	1938

<b>Chapter 33</b>	<b>CCC and TCC Operational Commands . . . . .</b>	<b>1941</b>
	Table 101: show connections Output Fields . . . . .	1943
	Table 102: show route forwarding-table Output Fields . . . . .	1949
<b>Chapter 34</b>	<b>PCEP Operational Commands . . . . .</b>	<b>1961</b>
	Table 103: show path-computation-client active-pce Output Fields . . . . .	1964
	Table 104: show path-computation-client statistics Output Fields . . . . .	1968



# About the Documentation

- [Documentation and Release Notes on page xlv](#)
- [Supported Platforms on page xlv](#)
- [Using the Examples in This Manual on page xlv](#)
- [Documentation Conventions on page xlvii](#)
- [Documentation Feedback on page xlix](#)
- [Requesting Technical Support on page xlix](#)

## Documentation and Release Notes

---

To obtain the most current version of all Juniper Networks<sup>®</sup> technical documentation, see the product documentation page on the Juniper Networks website at <http://www.juniper.net/techpubs/>.

If the information in the latest release notes differs from the information in the documentation, follow the product Release Notes.

Juniper Networks Books publishes books by Juniper Networks engineers and subject matter experts. These books go beyond the technical documentation to explore the nuances of network architecture, deployment, and administration. The current list can be viewed at <http://www.juniper.net/books>.

## Supported Platforms

---

For the features described in this document, the following platforms are supported:

- [ACX Series](#)
- [T Series](#)
- [MX Series](#)
- [M Series](#)
- [PTX Series](#)

## Using the Examples in This Manual

---

If you want to use the examples in this manual, you can use the **load merge** or the **load merge relative** command. These commands cause the software to merge the incoming

configuration into the current candidate configuration. The example does not become active until you commit the candidate configuration.

If the example configuration contains the top level of the hierarchy (or multiple hierarchies), the example is a *full example*. In this case, use the **load merge** command.

If the example configuration does not start at the top level of the hierarchy, the example is a *snippet*. In this case, use the **load merge relative** command. These procedures are described in the following sections.

## Merging a Full Example

To merge a full example, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration example into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following configuration to a file and name the file **ex-script.conf**. Copy the **ex-script.conf** file to the **/var/tmp** directory on your routing platform.

```
system {
  scripts {
    commit {
      file ex-script.xsl;
    }
  }
}
interfaces {
  fxp0 {
    disable;
    unit 0 {
      family inet {
        address 10.0.0.1/24;
      }
    }
  }
}
```

2. Merge the contents of the file into your routing platform configuration by issuing the **load merge** configuration mode command:

```
[edit]
user@host# load merge /var/tmp/ex-script.conf
load complete
```

## Merging a Snippet

To merge a snippet, follow these steps:

1. From the HTML or PDF version of the manual, copy a configuration snippet into a text file, save the file with a name, and copy the file to a directory on your routing platform.

For example, copy the following snippet to a file and name the file **ex-script-snippet.conf**. Copy the **ex-script-snippet.conf** file to the **/var/tmp** directory on your routing platform.

```
commit {
  file ex-script-snippet.xml; }
```

2. Move to the hierarchy level that is relevant for this snippet by issuing the following configuration mode command:

```
[edit]
user@host# edit system scripts
[edit system scripts]
```

3. Merge the contents of the file into your routing platform configuration by issuing the **load merge relative** configuration mode command:







```
[edit system scripts]
user@host# load merge relative /var/tmp/ex-script-snippet.conf
load complete
```

For more information about the **load** command, see [CLI Explorer](#).

## Documentation Conventions

[Table 1 on page xlvii](#) defines notice icons used in this guide.

**Table 1: Notice Icons**

Icon	Meaning	Description
	Informational note	Indicates important features or instructions.
	Caution	Indicates a situation that might result in loss of data or hardware damage.
	Warning	Alerts you to the risk of personal injury or death.
	Laser warning	Alerts you to the risk of personal injury from a laser.
	Tip	Indicates helpful information.
	Best practice	Alerts you to a recommended use or implementation.

[Table 2 on page xlviii](#) defines the text and syntax conventions used in this guide.

Table 2: Text and Syntax Conventions

Convention	Description	Examples
<b>Bold text like this</b>	Represents text that you type.	To enter configuration mode, type the <b>configure</b> command:  user@host> <b>configure</b>
Fixed-width text like this	Represents output that appears on the terminal screen.	user@host> <b>show chassis alarms</b>  No alarms currently active
<i>Italic text like this</i>	<ul style="list-style-type: none"> <li>Introduces or emphasizes important new terms.</li> <li>Identifies guide names.</li> <li>Identifies RFC and Internet draft titles.</li> </ul>	<ul style="list-style-type: none"> <li>A policy <i>term</i> is a named structure that defines match conditions and actions.</li> <li><i>Junos OS CLI User Guide</i></li> <li>RFC 1997, <i>BGP Communities Attribute</i></li> </ul>
<i>Italic text like this</i>	Represents variables (options for which you substitute a value) in commands or configuration statements.	Configure the machine's domain name:  [edit] root@# <b>set system domain-name</b> <i>domain-name</i>
Text like this	Represents names of configuration statements, commands, files, and directories; configuration hierarchy levels; or labels on routing platform components.	<ul style="list-style-type: none"> <li>To configure a stub area, include the <b>stub</b> statement at the [edit protocols ospf area area-id] hierarchy level.</li> <li>The console port is labeled <b>CONSOLE</b>.</li> </ul>
< > (angle brackets)	Encloses optional keywords or variables.	<b>stub &lt;default-metric metric&gt;;</b>
(pipe symbol)	Indicates a choice between the mutually exclusive keywords or variables on either side of the symbol. The set of choices is often enclosed in parentheses for clarity.	<b>broadcast   multicast</b>  <b>(string1   string2   string3)</b>
# (pound sign)	Indicates a comment specified on the same line as the configuration statement to which it applies.	<b>rsvp { # Required for dynamic MPLS only</b>
[ ] (square brackets)	Encloses a variable for which you can substitute one or more values.	<b>community name members [ community-ids ]</b>
Indentation and braces ( { } )	Identifies a level in the configuration hierarchy.	[edit] routing-options { static { route default { nexthop address; retain; } } }
;(semicolon)	Identifies a leaf statement at a configuration hierarchy level.	

---

## GUI Conventions

---

Table 2: Text and Syntax Conventions (*continued*)

Convention	Description	Examples
<b>Bold text like this</b>	Represents graphical user interface (GUI) items you click or select.	<ul style="list-style-type: none"> <li>In the Logical Interfaces box, select <b>All Interfaces</b>.</li> <li>To cancel the configuration, click <b>Cancel</b>.</li> </ul>
<b>&gt;</b> (bold right angle bracket)	Separates levels in a hierarchy of menu selections.	In the configuration editor hierarchy, select <b>Protocols&gt;Ospf</b> .

## Documentation Feedback

We encourage you to provide feedback, comments, and suggestions so that we can improve the documentation. You can provide feedback by using either of the following methods:

- Online feedback rating system—On any page of the Juniper Networks TechLibrary site at <http://www.juniper.net/techpubs/index.html>, simply click the stars to rate the content, and use the pop-up form to provide us with information about your experience. Alternately, you can use the online feedback form at <http://www.juniper.net/techpubs/feedback/>.
- E-mail—Send your comments to [techpubs-comments@juniper.net](mailto:techpubs-comments@juniper.net). Include the document or topic name, URL or page number, and software version (if applicable).

## Requesting Technical Support

Technical product support is available through the Juniper Networks Technical Assistance Center (JTAC). If you are a customer with an active J-Care or Partner Support Service support contract, or are covered under warranty, and need post-sales technical support, you can access our tools and resources online or open a case with JTAC.

- JTAC policies—For a complete understanding of our JTAC procedures and policies, review the *JTAC User Guide* located at <http://www.juniper.net/us/en/local/pdf/resource-guides/7100059-en.pdf>.
- Product warranties—For product warranty information, visit <http://www.juniper.net/support/warranty/>.
- JTAC hours of operation—The JTAC centers have resources available 24 hours a day, 7 days a week, 365 days a year.

## Self-Help Online Tools and Resources

For quick and easy problem resolution, Juniper Networks has designed an online self-service portal called the Customer Support Center (CSC) that provides you with the following features:

- Find CSC offerings: <http://www.juniper.net/customers/support/>
- Search for known bugs: <http://www2.juniper.net/kb/>
- Find product documentation: <http://www.juniper.net/techpubs/>
- Find solutions and answer questions using our Knowledge Base: <http://kb.juniper.net/>
- Download the latest versions of software and review release notes: <http://www.juniper.net/customers/csc/software/>
- Search technical bulletins for relevant hardware and software notifications: <http://kb.juniper.net/InfoCenter/>
- Join and participate in the Juniper Networks Community Forum: <http://www.juniper.net/company/communities/>
- Open a case online in the CSC Case Management tool: <http://www.juniper.net/cm/>

To verify service entitlement by product serial number, use our Serial Number Entitlement (SNE) Tool: <https://tools.juniper.net/SerialNumberEntitlementSearch/>

## Opening a Case with JTAC

You can open a case with JTAC on the Web or by telephone.

- Use the Case Management tool in the CSC at <http://www.juniper.net/cm/>.
- Call 1-888-314-JTAC (1-888-314-5822 toll-free in the USA, Canada, and Mexico).

For international or direct-dial options in countries without toll-free numbers, see <http://www.juniper.net/support/requesting-support.html>.

## PART 1

# Understanding Traffic Engineering

- [Traffic Engineering Overview on page 3](#)





## CHAPTER 1

# Traffic Engineering Overview

- [Traffic Engineering Capabilities on page 3](#)
- [Components of Traffic Engineering on page 4](#)
- [Packet Forwarding Component on page 4](#)
- [Packet Forwarding Based on Label Swapping on page 4](#)
- [How a Packet Traverses an MPLS Backbone on page 5](#)
- [Information Distribution Component on page 5](#)
- [Path Selection Component on page 6](#)
- [Offline Path Planning and Analysis on page 6](#)
- [Signaling Component on page 7](#)
- [Flexible LSP Calculation and Configuration on page 7](#)
- [Link-State Distribution Using BGP Overview on page 8](#)

## Traffic Engineering Capabilities

---

The task of mapping traffic flows onto an existing physical topology is called *traffic engineering*. Traffic engineering provides the ability to move traffic flow away from the shortest path selected by the interior gateway protocol (IGP) and onto a potentially less congested physical path across a network.

Traffic engineering provides the capabilities to do the following:

- Route primary paths around known bottlenecks or points of congestion in the network.
- Provide precise control over how traffic is rerouted when the primary path is faced with single or multiple failures.
- Provide more efficient use of available aggregate bandwidth and long-haul fiber by ensuring that subsets of the network do not become overutilized while other subsets of the network along potential alternate paths are underutilized.
- Maximize operational efficiency.
- Enhance the traffic-oriented performance characteristics of the network by minimizing packet loss, minimizing prolonged periods of congestion, and maximizing throughput.
- Enhance statistically bound performance characteristics of the network (such as loss ratio, delay variation, and transfer delay) required to support a multiservices Internet.

## Components of Traffic Engineering

---

In the Junos<sup>®</sup> operating system (OS), traffic engineering is implemented with MPLS and RSVP. Traffic engineering is composed of four functional components:

- [Packet Forwarding Component on page 4](#)
- [Information Distribution Component on page 5](#)
- [Path Selection Component on page 6](#)
- [Signaling Component on page 7](#)

## Packet Forwarding Component

---

The packet forwarding component of the Junos traffic engineering architecture is MPLS, which is responsible for directing a flow of IP packets along a predetermined path across a network. This path is called a *label-switched path (LSP)*. LSPs are simplex; that is, the traffic flows in one direction from the head-end (ingress) router to a tail-end (egress) router. Duplex traffic requires two LSPs: one LSP to carry traffic in each direction. An LSP is created by the concatenation of one or more label-switched hops, allowing a packet to be forwarded from one router to another across the MPLS domain.

When an ingress router receives an IP packet, it adds an MPLS header to the packet and forwards it to the next router in the LSP. The labeled packet is forwarded along the LSP by each router until it reaches the tail end of the LSP, the egress router. At this point the MPLS header is removed, and the packet is forwarded based on Layer 3 information such as the IP destination address. The value of this scheme is that the physical path of the LSP is not limited to what the IGP would choose as the shortest path to reach the destination IP address.

This section discusses the following topics:

- [Packet Forwarding Based on Label Swapping on page 4](#)
- [How a Packet Traverses an MPLS Backbone on page 5](#)

### Related Documentation

- [Components of Traffic Engineering on page 4](#)

## Packet Forwarding Based on Label Swapping

---

The packet forwarding process at each router is based on the concept of label swapping. This concept is similar to what occurs at each Asynchronous Transfer Mode (ATM) switch in a permanent virtual circuit (PVC). Each MPLS packet carries a 4-byte encapsulation header that contains a 20-bit, fixed-length label field. When a packet containing a label arrives at a router, the router examines the label and copies it as an index to its MPLS forwarding table. Each entry in the forwarding table contains an interface-inbound label pair mapped to a set of forwarding information that is applied to all packets arriving on the specific interface with the same inbound label.

---

## How a Packet Traverses an MPLS Backbone

---

This section describes how an IP packet is processed as it traverses an MPLS backbone network.

At the entry edge of the MPLS backbone, the IP header is examined by the ingress router. Based on this analysis, the packet is classified, assigned a label, encapsulated in an MPLS header, and forwarded toward the next hop in the LSP. MPLS provides a high degree of flexibility in the way that an IP packet can be assigned to an LSP. For example, in the Junos traffic engineering implementation, all packets arriving at the ingress router that are destined to exit the MPLS domain at the same egress router are forwarded along the same LSP.

Once the packet begins to traverse the LSP, each router uses the label to make the forwarding decision. The MPLS forwarding decision is made independently of the original IP header: the incoming interface and label are used as lookup keys into the MPLS forwarding table. The old label is replaced with a new label, and the packet is forwarded to the next hop along the LSP. This process is repeated at each router in the LSP until the packet reaches the egress router.

When the packet arrives at the egress router, the label is removed and the packet exits the MPLS domain. The packet is then forwarded based on the destination IP address contained in the packet's original IP header according to the traditional shortest path calculated by the IP routing protocol.

---

## Information Distribution Component

---

Traffic engineering requires detailed knowledge about the network topology as well as dynamic information about network loading. To implement the information distribution component, simple extensions to the IGP are defined. Link attributes are included as part of each router's link-state advertisement. IS-IS extensions include the definition of new type length values (TLVs), whereas OSPF extensions are implemented with opaque link-state advertisements (LSAs). The standard flooding algorithm used by the link-state IGPs ensures that link attributes are distributed to all routers in the routing domain. Some of the traffic engineering extensions to be added to the IGP link-state advertisement include maximum link bandwidth, maximum reserved link bandwidth, current bandwidth reservation, and link coloring.

Each router maintains network link attributes and topology information in a specialized traffic engineering database. The traffic engineering database is used exclusively for calculating explicit paths for the placement of LSPs across the physical topology. A separate database is maintained so that the subsequent traffic engineering computation is independent of the IGP and the IGP's link-state database. Meanwhile, the IGP continues its operation without modification, performing the traditional shortest-path calculation based on information contained in the router's link-state database.

**Related Documentation**

- [Components of Traffic Engineering on page 4](#)

## Path Selection Component

---

After network link attributes and topology information are flooded by the IGP and placed in the traffic engineering database, each ingress router uses the traffic engineering database to calculate the paths for its own set of LSPs across the routing domain. The path for each LSP can be represented by either a strict or loose explicit route. An explicit route is a preconfigured sequence of routers that should be part of the physical path of the LSP. If the ingress router specifies all the routers in the LSP, the LSP is said to be identified by a strict explicit route. If the ingress router specifies only some of the routers in the LSP, the LSP is described as a loose explicit route. Support for strict and loose explicit routes allows the path selection process to be given broad latitude whenever possible, but to be constrained when necessary.

The ingress router determines the physical path for each LSP by applying a Constrained Shortest Path First (CSPF) algorithm to the information in the traffic engineering database. CSPF is a shortest-path-first algorithm that has been modified to take into account specific restrictions when the shortest path across the network is calculated. Input into the CSPF algorithm includes:

- Topology link-state information learned from the IGP and maintained in the traffic engineering database
- Attributes associated with the state of network resources (such as total link bandwidth, reserved link bandwidth, available link bandwidth, and link color) that are carried by IGP extensions and stored in the traffic engineering database
- Administrative attributes required to support traffic traversing the proposed LSP (such as bandwidth requirements, maximum hop count, and administrative policy requirements) that are obtained from user configuration

As CSPF considers each candidate node and link for a new LSP, it either accepts or rejects a specific path component based on resource availability or whether selecting the component violates user policy constraints. The output of the CSPF calculation is an explicit route consisting of a sequence of router addresses that provides the shortest path through the network that meets the constraints. This explicit route is then passed to the signaling component, which establishes the forwarding state in the routers along the LSP.

### Related Documentation

- [Components of Traffic Engineering on page 4](#)

## Offline Path Planning and Analysis

---

Despite the reduced management effort resulting from online path calculation, an offline planning and analysis tool is still required to optimize traffic engineering globally. Online calculation takes resource constraints into account and calculates one LSP at a time. The challenge with this approach is that it is not deterministic. The order in which LSPs are calculated plays a critical role in determining each LSP's physical path across the network. LSPs that are calculated early in the process have more resources available to them than LSPs calculated later in the process because previously calculated LSPs

consume network resources. If the order in which the LSPs are calculated is changed, the resulting set of physical paths for the LSPs also can change.

An offline planning and analysis tool simultaneously examines each link's resource constraints and the requirements of each LSP. Although the offline approach can take several hours to complete, it performs global calculations, compares the results of each calculation, and then selects the best solution for the network as a whole. The output of the offline calculation is a set of LSPs that optimizes utilization of network resources. After the offline calculation is completed, the LSPs can be established in any order because each is installed according to the rules for the globally optimized solution.

## Signaling Component

---

An LSP is not known to be workable until it is actually established by the signaling component. The signaling component, which is responsible for establishing LSP state and distributing labels, relies on a number of extensions to RSVP:

- The Explicit Route object allows an RSVP path message to traverse an explicit sequence of routers that is independent of conventional shortest-path IP routing. The explicit route can be either strict or loose.
- The Label Request object permits the RSVP path message to request that intermediate routers provide a label binding for the LSP that it is establishing.
- The Label object allows RSVP to support the distribution of labels without changing its existing mechanisms. Because the RSVP Resv message follows the reverse path of the RSVP path message, the Label object supports the distribution of labels from downstream nodes to upstream nodes.

### Related Documentation

- [Components of Traffic Engineering on page 4](#)

## Flexible LSP Calculation and Configuration

---

Traffic engineering involves mapping traffic flow onto a physical topology. You can determine the paths online using constraint-based routing. Regardless of how the physical path is calculated, the forwarding state is installed across the network through RSVP.

The Junos OS supports the following ways to route and configure an LSP:

- You can calculate the full path for the LSP offline and individually configure each router in the LSP with the necessary static forwarding state. This is analogous to the way some Internet service providers (ISPs) configure their IP-over-ATM cores.
- You can calculate the full path for the LSP offline and statically configure the ingress router with the full path. The ingress router then uses RSVP as a dynamic signaling protocol to install a forwarding state in each router along the LSP.
- You can rely on constraint-based routing to perform dynamic online LSP calculation. You configure the constraints for each LSP; then the network itself determines the path that best meets those constraints. Specifically, the ingress router calculates the entire LSP based on the constraints and then initiates signaling across the network.

- You can calculate a partial path for an LSP offline and statically configure the ingress router with a subset of the routers in the path; then you can permit online calculation to determine the complete path.

For example, consider a topology that includes two east-west paths across the United States: one in the north through Chicago and one in the south through Dallas. If you want to establish an LSP between a router in New York and one in San Francisco, you can configure the partial path for the LSP to include a single loose-routed hop of a router in Dallas. The result is an LSP routed along the southern path. The ingress router uses CSPF to compute the complete path and RSVP to install the forwarding state along the LSP.

- You can configure the ingress router with no constraints whatsoever. In this case, normal IGP shortest-path routing is used to determine the path of the LSP. This configuration does not provide any value in terms of traffic engineering. However, it is easy and might be useful in situations when services such as virtual private networks (VPNs) are needed.

In all these cases, you can specify any number of LSPs as backups for the primary LSP, thus allowing you to combine more than one configuration approach. For example, you might explicitly compute the primary path offline, set the secondary path to be constraint-based, and have the tertiary path be unconstrained. If a circuit on which the primary LSP is routed fails, the ingress router notices the outage from error notifications received from a downstream router or by the expiration of RSVP soft-state information. Then the router dynamically forwards traffic to a hot-standby LSP or calls on RSVP to create a forwarding state for a new backup LSP.

---

## Link-State Distribution Using BGP Overview

- [Role of an Interior Gateway Protocol on page 8](#)
- [Limitations of an Interior Gateway Protocol on page 9](#)
- [Need for Spanning Link-State Distribution on page 9](#)
- [Using BGP as a Solution on page 10](#)
- [Supported and Unsupported Features on page 15](#)

### Role of an Interior Gateway Protocol

An interior gateway protocol (IGP) is a type of protocol used for exchanging routing information between devices within an autonomous system (AS). Based on the method of computing the best path to a destination, the IGPs are divided into two categories:

- Link-state protocols—Advertise information about the network topology (directly connected links and the state of those links) to all routers using multicast addresses and triggered routing updates until all the routers running the link-state protocol have identical information about the internetwork. The best path to a destination is calculated based on constraints such as maximum delay, minimum available bandwidth, and resource class affinity.

OSPF and IS-IS are examples of link-state protocols.

- Distance vector protocols—Advertise complete routing table information to directly connected neighbors using a broadcast address. The best path is calculated based on the number of hops to the destination network.

RIP is an example of a distance vector protocol.

As the name implies, the role of an IGP is to provide routing connectivity within or internal to a given routing domain. A routing domain is a set of routers under common administrative control that share a common routing protocol. An AS can consist of multiple routing domains, where IGP functions to advertise and learn network prefixes (routes) from neighboring routers to build a route table that ultimately contains entries for all sources advertising reachability for a given prefix. IGP executes a route selection algorithm to select the best path between the local router and each destination, and provides full connectivity among the routers making up a routing domain.

In addition to advertising internal network reachability, IGPs are often used to advertise routing information that is external to that IGP's routing domain through a process known as route redistribution. Route redistribution is the process of exchanging routing information among distinct routing protocols to tie multiple routing domains together when intra-AS connectivity is desired.

## Limitations of an Interior Gateway Protocol

While each individual IGP has its own advantages and limitations, the biggest limitations of IGP in general are performance and scalability.

IGPs are designed to handle the task of acquiring and distributing network topology information for traffic engineering purposes. While this model has served well, IGPs have inherent scaling limitations when it comes to distributing large databases. IGPs can autodetect neighbors, with which they acquire intra-area network topology information. However, the link-state database or a traffic engineering database has the scope of a single area or AS, thereby limiting applications, such as end-to-end traffic engineering, the benefit of having external visibility to make better decisions.

For label-switched networks, such as MPLS and Generalized MPLS (GMPLS), most existing traffic engineering solutions work in a single routing domain. These solutions do not work when a route from the ingress node to the egress node leaves the routing area or AS of the ingress node. In such cases, the path computation problem becomes complicated because of the unavailability of the complete routing information throughout the network. This is because service providers usually choose not to leak routing information beyond the routing area or AS for scalability constraints and confidentiality concerns.

## Need for Spanning Link-State Distribution

One of the limitations of IGP is its inability to span link-state distribution outside a single area or AS. However, spanning link-state information acquired by an IGP across multiple areas or ASs has the following needs:

- LSP path computation—This information is used to compute the path for MPLS LSPs across multiple routing domains, for example an inter-area TE LSP.

- External path computing entities—External path computing entities, such as Application Layer Traffic Optimization (ALTO) and Path Computation Elements (PCE), perform path computations based on the network topology and current state of connections within the network, including traffic engineering information. This information is typically distributed by IGPs within the network.

However, because the external path computing entities cannot extract this information from the IGPs, they perform network monitoring to optimize network services.

## Using BGP as a Solution

- [Overview on page 10](#)
- [Implementation on page 11](#)

### Overview

---

To meet the needs for spanning link-state distribution across multiple domains, an exterior gateway protocol (EGP) is required to collect link-state and traffic engineering information from an IGP area, share it with external component, and use it for computing paths for interdomain MPLS LSPs.

BGP is a standardized EGP designed to exchange routing and reachability information between autonomous systems (ASs). BGP is a proven protocol that has better scaling properties because it can distribute millions of entries (for example, VPN prefixes) in a scalable fashion. BGP is the only routing protocol in use today that is suited to carry all of the routes in the Internet. This is largely because BGP runs on top of TCP and can make use of TCP flow control. In contrast, the internal gateway protocols (IGPs) do not have flow control. When IGPs have too much route information, they begin to churn. When BGP has a neighboring speaker that is sending information too quickly, BGP can throttle down the neighbor by delaying TCP acknowledgments.

Another benefit of BGP is that it uses type, length, value (TLV) tuples and network layer reachability information (NLRI) that provide seemingly endless extensibility without the need for the underlying protocol to be altered.

The distribution of link-state information across domains is regulated using policies to protect the interests of the service provider. This requires a control over the topology distribution using policies. BGP with its implemented policy framework serves well in the interdomain route distribution. In Junos OS, BGP is completely policy driven. The operator must explicitly configure neighbors to peer with and explicitly accept routes into BGP. Furthermore, routing policy is used to filter and modify routing information. Thus, routing policies provide complete administrative control over the routing tables.

Although, within an AS, both IGP-TE and BGP-TE provide the same set of information, BGP-TE has better scaling characteristics that are inherited from the standard BGP protocol. This makes BGP-TE a more scalable choice for acquiring multi-area/multi-AS topology information.

By using BGP as a solution, the IGP-acquired information is used for distribution into BGP. The ISPs can selectively expose this information with other ISPs, service providers, and content distribution networks (CDNs) through normal BGP peering. This allows for




aggregation of the IGP-acquired information across multiple areas and ASs, such that an external path computing entity can access the information by passively listening to a route reflector.

### Implementation

In Junos OS, the IGPs install topology information into a database called the traffic engineering database. The traffic engineering database contains the aggregated topology information. The mechanism to distribute link-state information using BGP includes the process of advertising the traffic engineering database into BGP-TE (import), and installing entries from BGP-TE into the traffic engineering database (export).

**Figure 1: Junos OS Implementation of BGP Link-State Distribution**

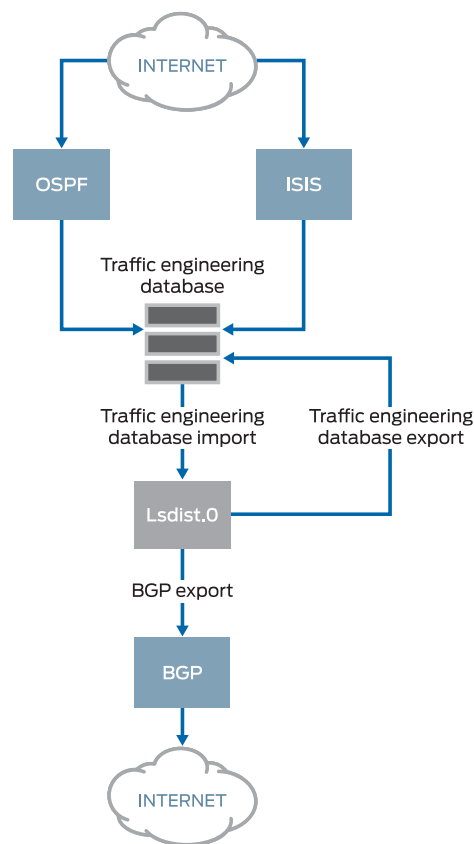

- [Traffic Engineering Database Import on page 11](#)
- [Traffic Engineering Database Export on page 12](#)
- [Assigning Credibility Values on page 12](#)
- [BGP-TE NLRIs and TLVs on page 13](#)

#### ***Traffic Engineering Database Import***

To advertise the traffic engineering database into BGP-TE, the link and node entries in the traffic engineering database are converted in the form of routes. These converted

routes are then installed by the traffic engineering database on behalf of the corresponding IGP, into a user-visible routing table called **lsdist.0**, on conditions subject to route policies. The procedure of leaking entries from the traffic engineering database into **lsdist.0** is called traffic engineering database import as illustrated in [Figure 1 on page 11](#).

There are policies to govern the traffic engineering database import process. By default, no entries are leaked from the traffic engineering database into the **lsdist.0** table.

### ***Traffic Engineering Database Export***

BGP can be configured to export or advertise routes from the **lsdist.0** table, subject to policy. This is common for any kind of route origination in BGP. In order to advertise BGP-TE into the traffic engineering database, BGP needs to be configured with the BGP-TE address family, and an export policy that selects routes for redistribution into BGP.

BGP then propagates these routes like any other NLRI. BGP peers that have the BGP-TE family configured and negotiated receive BGP-TE NLRIs. BGP stores the received BGP-TE NLRIs in the form of routes in the **lsdist.0** table, which is the same table that stores locally originated BGP-TE routes. The BGP-installed routes in **lsdist.0** are then distributed to other peers like any other route. Thus, the standard route selection procedure applies to BGP-TE NLRIs received from multiple speakers.

To achieve interdomain TE, the routes in **lsdist.0** are leaked into the traffic engineering database through a policy. This process is called traffic engineering database export as illustrated in [Figure 1 on page 11](#).

There are policies to govern the traffic engineering database export process. By default, no entries are leaked from the **lsdist.0** table into the traffic engineering database.



**NOTE:** For SDN applications, such as PCE and ALTO, the BGP-TE advertised information cannot leak into the traffic engineering database of a router. In such cases, an external server that peers with the routers using BGP-TE is used to move topology information up into the sky/orchestration system that spans the network. These external servers can be deemed as BGP-TE consumers, where they receive BGP-TE routes, but do not advertise them.

---

### ***Assigning Credibility Values***

Once the entries are installed in the traffic engineering database, the BGP-TE learned information is made available for CSPF path computation. The traffic engineering database uses a protocol preference scheme that is based on credibility values. A protocol with a higher credibility value is preferred over a protocol with a lower credibility value. BGP-TE has the capability to advertise information learned from multiple protocols at the same time, and so in addition to the IGP-installed entries in the traffic engineering database, there can be BGP-TE installed entries that correspond to more than one protocol. The traffic engineering database export component creates a traffic engineering database protocol and credibility level for each protocol that BGP-TE supports. These credibility values are configurable in the CLI.

The credibility order for the BGP-TE protocols is as follows:

- Unknown—80
- OSPF—81
- ISIS Level 1—82
- ISIS Level 2—83
- Static—84
- Direct—85

### ***BGP-TE NLRIs and TLVs***

Like other BGP routes, BGP-TE NLRIs can also be distributed through a route reflector that speaks BGP-TE NLRI. Junos OS implements the route reflection support for the BGP-TE family.

The following is a list of supported NLRIs:

- Link NLRI
- Node NLRI
- IPv4 Prefix NLRI (receive and propagate)
- IPv6 Prefix NLRI (receive and propagate)



**NOTE:** Junos OS does not provide support for the route-distinguisher form of the above NLRIs.

The following is a list of supported fields in link and node NLRIs:

- Protocol-ID—NLRI originates with the following protocol values:
  - ISIS-L1
  - ISIS-L2
  - OSPF
- Identifier—This value is configurable. By default, the identifier value is set to 0.
- Local/Remote node descriptor—These include:
  - Autonomous system
  - BGP-LS Identifier—This value is configurable. By default, the BGP-LS identifier value is set to 0
  - Area-ID
  - IGP router-ID
- Link descriptors (Only for link NLRI)—This includes:

- Link Local/Remote Identifiers
- IPv4 interface address
- IPv4 neighbor address
- IPv6 neighbor/interface address—The IPv6 neighbor and interface addresses are not originated, but only stored and propagated when received.
- Multi-topology ID—This value is not originated, but stored and propagated when received.

The following is a list of supported LINK\_STATE attribute TLVs:

- Link attributes:
  - Administrative group
  - Max link bandwidth
  - Max reservable bandwidth
  - Unreserved bandwidth
  - TE default metric
  - SRLG
  - The following TLVs, which are not originated, but only stored and propagated when received:
    - Opaque link attributes
    - MPLS protocol mask
    - Metric
    - Link protection type
    - Link name attribute
- Node attributes:
  - IPv4 Router-ID
  - Node flag bits—Only the overload bit is set.
  - The following TLVs, which are not originated, but only stored and propagated when received:
    - Multi-topology
    - OSPF-specific node properties
    - Opaque node properties
    - Node name

- IS-IS area identifier
- IPv6 Router-ID
- Prefix attributes—These TLVs are stored and propagated like any other unknown TLVs.

## Supported and Unsupported Features

Junos OS supports the following features with link-state distribution using BGP:

- Advertisement of multiprotocol assured forwarding capability
- Transmission and reception of node and link-state BGP and BGP-TE NLRIs
- Nonstop active routing for BGP-TE NLRIs
- Policies

Junos OS does **not** support the following functionality for link-state distribution using BGP:

- Aggregated topologies, links, or nodes
- Route distinguisher support for BGP-TE NLRIs
- Multi-topology identifiers
- Multi-instance identifiers (excluding the default instance ID 0)
- Advertisement of the link and node area TLV
- Advertisement of MPLS signaling protocols
- Importing node and link information with overlapping address

### Related Documentation

- [Example: Configuring Link State Distribution Using BGP on page 393](#)



## PART 2

# Configuring MPLS

- [MPLS Overview on page 19](#)
- [Configuring MPLS Routers on page 59](#)
- [Configuring MPLS-Signaled LSPs on page 239](#)
- [Configuring Static and Explicit-Path LSPs on page 299](#)
- [Configuring Point-to-Multipoint LSPs on page 309](#)
- [Configuring DiffServ-Aware Traffic Engineering to Achieve Service Level Guarantees on an MPLS network on page 337](#)
- [Configuring Miscellaneous MPLS Properties on page 361](#)





## CHAPTER 2

# MPLS Overview

- [Introduction to MPLS on page 20](#)
- [Supported MPLS Standards on page 20](#)
- [Link-Layer Support in MPLS on page 23](#)
- [MPLS and Traffic Engineering on page 24](#)
- [MPLS Label Overview on page 24](#)
- [Special MPLS Labels on page 25](#)
- [MPLS Label Allocation on page 26](#)
- [Operations on MPLS Labels on page 27](#)
- [Entropy Label Support in Mixed Mode Overview on page 28](#)
- [Routers in an LSP on page 28](#)
- [How a Packet Travels Along an LSP on page 28](#)
- [Types of LSPs on page 29](#)
- [Scope of LSPs on page 29](#)
- [Constrained-Path LSP Computation on page 30](#)
- [How CSPF Selects a Path on page 31](#)
- [CSPF Path Selection Tie-Breaking on page 32](#)
- [Computing CSPF Paths Offline on page 33](#)
- [Path Computation for LSPs on an Overloaded Router on page 33](#)
- [Computing Backup Paths for LSPs Using Fate Sharing on page 34](#)
- [Using Labeled-Switched Paths to Augment SPF to Compute IGP Shortcuts on page 34](#)
- [Enabling IGP Shortcuts on page 36](#)
- [LSPs Qualified in IGP Shortcut Computations on page 36](#)
- [IGP Shortcut Applications on page 36](#)
- [IGP Shortcuts and Routing Tables on page 37](#)
- [IGP Shortcuts and VPNs on page 37](#)
- [Advertising LSPs into IGP on page 38](#)
- [IP and MPLS Packets on Aggregated Interfaces on page 39](#)
- [MPLS Applications on page 39](#)

- [BGP Destinations on page 40](#)
- [IGP and BGP Destinations on page 41](#)
- [Selecting a Forwarding LSP Next Hop on page 42](#)
- [Example: Assigning Different Forwarding Next-Hop LSPs to Different Destination Prefixes on page 42](#)
- [MPLS and Routing Tables on page 43](#)
- [MPLS and Traffic Protection on page 45](#)
- [Fast Reroute Overview on page 46](#)
- [Detour Merging Process on page 48](#)
- [Detour Computations on page 49](#)
- [Fast Reroute Path Optimization on page 50](#)
- [On-Demand Packet Loss and Delay Measurement for UHP LSPs Overview on page 50](#)

---

## Introduction to MPLS

MPLS provides a mechanism for engineering network traffic patterns that is independent of routing tables. MPLS assigns short labels to network packets that describe how to forward them through the network. MPLS is independent of any routing protocol and can be used for unicast packets.

In the traditional Level 3 forwarding paradigm, as a packet travels from one router to the next, an independent forwarding decision is made at each hop. The IP network layer header is analyzed, and the next hop is chosen based on this analysis and on the information in the routing table. In an MPLS environment, the analysis of the packet header is performed just once, when a packet enters the MPLS cloud. The packet is then assigned to a stream, which is identified by a *label*, which is a short (20-bit), fixed-length value at the front of the packet. Labels are used as lookup indexes for the label forwarding table. For each label, this table stores forwarding information. You can associate additional information with a label—such as class-of-service (CoS) values—that can be used to prioritize packet forwarding.

---

## Supported MPLS Standards

Junos OS substantially supports the following RFCs and Internet drafts, which define standards for MPLS and traffic engineering.

- RFC 2858, *Multiprotocol Extensions for BGP-4*
- RFC 3031, *Multiprotocol Label Switching Architecture*
- RFC 3032, *MPLS Label Stack Encoding*
- RFC 3140, *Per Hop Behavior Identification Codes*
- RFC 3270, *Multi-Protocol Label Switching (MPLS) Support of Differentiated Services*

Only E-LSPs are supported.

- RFC 3443, *Time To Live (TTL) Processing in Multi-Protocol Label Switching (MPLS) Networks*
- RFC 3478, *Graceful Restart Mechanism for Label Distribution Protocol*
- RFC 4090, *Fast Reroute Extensions to RSVP-TE for LSP Tunnels*

Node protection in facility backup is not supported.

- RFC 4124, *Protocol Extensions for Support of Diffserv-aware MPLS Traffic Engineering*
- RFC 4364, *BGP/MPLS IP Virtual Private Networks (VPNs)*
- RFC 4379, *Detecting Multi-Protocol Label Switched (MPLS) Data Plane Failures*
- RFC 4385, *Pseudowire Emulation Edge-to-Edge (PWE3) Control Word for Use over an MPLS PSN.*

Supported on MX Series routers with the Channelized OC3/STM1 (Multi-Rate) Circuit Emulation MIC with SFP.

- RFC 4875, *Extensions to RSVP-TE for Point-to-Multipoint TE LSPs*
- RFC 4950, *ICMP Extensions for Multiprotocol Label Switching*
- RFC 5317, *Joint Working Team (JWT) Report on MPLS Architectural Considerations for a Transport Profile*
- RFC 5586, *MPLS Generic Associated Channel*
- RFC 5654, *Requirements of an MPLS Transport Profile*

The following capabilities are supported in the Junos OS implementation of MPLS Transport Profile (MPLS-TP):

- MPLS-TP OAM can send and receive packets with GAL and G-Ach, without IP encapsulation.
- Two unidirectional RSVP LSPs between a pair of routers can be associated with each other to create an associated bidirectional LSP for binding a path for the GAL and G-Ach OAM messages. A single Bidirectional Forwarding Detection (BFD) session is established for the associated bidirectional LSP.
- RFC 5712, *MPLS Traffic Engineering Soft Preemption*
- RFC 5718, *An In-Band Data Communication Network For the MPLS Transport Profile*
- RFC 5860, *Requirements for Operations, Administration, and Maintenance (OAM) in MPLS Transport Networks*
- RFC 5884, *Bidirectional Forwarding Detection (BFD) for MPLS Label Switched Paths (LSPs)*
- RFC 5921, *A Framework for MPLS in Transport Networks*
- RFC 5950, *Network Management Framework for MPLS-based Transport Networks*
- RFC 5951, *Network Management Requirements for MPLS-based Transport Networks*
- RFC 5960, *MPLS Transport Profile Data Plane Architecture*

- RFC 6215, *MPLS Transport Profile User-to-Network and Network-to-Network Interfaces*
- RFC 6291, *Guidelines for the Use of the “OAM” Acronym in the IETF.*
- RFC 6370, *MPLS Transport Profile (MPLS-TP) Identifiers*
- RFC 6371, *Operations, Administration, and Maintenance Framework for MPLS-Based Transport Networks.*
- RFC 6372, *MPLS Transport Profile (MPLS-TP) Survivability Framework*
- RFC 6373, *MPLS-TP Control Plane Framework*
- RFC 6388, *Label Distribution Protocol Extensions for Point-to-Multipoint and Multipoint-to-Multipoint Label Switched Paths*

Only Point-to-Multipoint LSPs are supported.

- RFC 6424, *Mechanism for Performing Label Switched Path Ping (LSP Ping) over MPLS Tunnels*
- RFC 6425, *Detecting Data-Plane Failures in Point-to-Multipoint MPLS - Extensions to LSP Ping*
- RFC 6426, *MPLS On-Demand Connectivity Verification and Route Tracing*
- RFC 6428, *Proactive Connectivity Verification, Continuity Check, and Remote Defect Indication for the MPLS Transport Profile*
- RFC 6510, *Resource Reservation Protocol (RSVP) Message Formats for Label Switched Path (LSP) Attributes Objects*
- Internet draft draft-ietf-mpls-rsvp-te-no-php-oob-mapping-01.txt, *Non PHP behavior and Out-of-Band Mapping for RSVP-TE LSPs*

The following RFCs and Internet drafts do not define standards, but provide information about MPLS, traffic engineering, and related technologies. The IETF classifies them variously as “Experimental,” “Historic,” or “Informational.”

- RFC 2547, *BGP/MPLS VPNs*
- RFC 2702, *Requirements for Traffic Engineering Over MPLS*
- RFC 2917, *A Core MPLS IP VPN Architecture*
- RFC 3063, *MPLS Loop Prevention Mechanism*
- RFC 3208, *PGM Reliable Transport Protocol Specification*

Only the network element is supported.

- RFC 3469, *Framework for Multi-Protocol Label Switching (MPLS)-based Recovery*
- RFC 3564, *Requirements for Support of Differentiated Services-aware MPLS Traffic Engineering*
- RFC 4125, *Maximum Allocation Bandwidth Constraints Model for Diffserv-aware MPLS Traffic Engineering*
- RFC 4127, *Russian Dolls Bandwidth Constraints Model for Diffserv-aware MPLS Traffic Engineering*

- Internet draft draft-martini-l2circuit-encap-mpls-11.txt, *Encapsulation Methods for Transport of Layer 2 Frames Over IP and MPLS Networks*

Junos OS differs from the Internet draft in the following ways:

- A packet with a sequence number of 0 is treated as out of sequence.
- Any packet that does not have the next incremental sequence number is considered out of sequence.
- When out-of-sequence packets arrive, the expected sequence number for the neighbor is set to the sequence number in the Layer 2 circuit control word.
- Internet draft draft-martini-l2circuit-trans-mpls-19.txt, *Transport of Layer 2 Frames Over MPLS*
- Internet draft draft-raggarwa-mpls-p2mp-te-02.txt, *Establishing Point to Multipoint MPLS TE LSPs*

The features discussed in the indicated sections of the draft are not supported:

- Nonadjacent signaling for branch LSPs (section 7.1)
- Make-before-break and fast reroute (section 9)
- LSP hierarchy using point-to-point LSPs (section 10)

#### Related Documentation

- [Supported GMPLS Standards on page 769](#)
- [Supported LDP Standards on page 578](#)
- [Supported RSVP Standards on page 490](#)
- [Accessing Standards Documents on the Internet](#)

## Link-Layer Support in MPLS

MPLS supports the following link-layer protocols, which are all supported in the Junos OS MPLS implementation:

- Point-to-Point Protocol (PPP)—Protocol ID 0x0281, Network Control Protocol (NCP) protocol ID 0x8281.
- Ethernet/Cisco High-level Data Link Control (HDLC)—Ethernet type 0x8847.
- Asynchronous Transfer Mode (ATM)—Subnetwork attachment point encoded (SNAP-encoded) Ethernet type 0x8847. Support is included for both point-to-point mode or nonbroadcast multiaccess (NBMA) mode. Support is not included for encoding MPLS labels as part of ATM virtual path identifier/virtual circuit identifier (VPI/VCI).
- Frame Relay—SNAP-encoded, Ethernet type 0x8847. Support is not included for encoding MPLS labels as part of Frame Relay data-link connection identifier (DLCI).
- Generic routing encapsulation (GRE) tunnel—Ethernet type 0x8847.

## MPLS and Traffic Engineering

---

Traffic engineering allows you to control the path that data packets follow, bypassing the standard routing model, which uses routing tables. Traffic engineering moves flows from congested links to alternate links that would not be selected by the automatically computed destination-based shortest path. With traffic engineering, you can:

- Make more efficient use of expensive long-haul fibers.
- Control how traffic is rerouted in the face of single or multiple failures.
- Classify critical and regular traffic on a per-path basis.

The core of the traffic engineering design is based on building label-switched paths (LSPs) among routers. An LSP is connection-oriented, like a virtual circuit in Frame Relay or ATM. LSPs are not reliable: Packets entering an LSP do not have delivery guarantees, although preferential treatment is possible. LSPs also are similar to unidirectional tunnels in that packets entering a path are encapsulated in an envelope and switched across the entire path without being touched by intermediate nodes. LSPs provide fine-grained control over how packets are forwarded in a network. To provide reliability, an LSP can use a set of primary and secondary paths.

LSPs can be configured for BGP traffic only (traffic whose destination is outside of an autonomous system [AS]). In this case, traffic within the AS is not affected by the presence of LSPs. LSPs can also be configured for both BGP and interior gateway protocol (IGP) traffic; therefore, both intra-AS and inter-AS traffic is affected by the LSPs.

This section discusses the following topics:

- [MPLS Label Overview on page 24](#)
- [MPLS Label Allocation on page 26](#)
- [Routers in an LSP on page 28](#)
- [How a Packet Travels Along an LSP on page 28](#)
- [Types of LSPs on page 29](#)
- [Scope of LSPs on page 29](#)
- [Constrained-Path LSP Computation on page 30](#)
- [Path Computation for LSPs on an Overloaded Router on page 33](#)
- [Computing Backup Paths for LSPs Using Fate Sharing on page 34](#)
- [Using Labeled-Switched Paths to Augment SPF to Compute IGP Shortcuts on page 34](#)
- [Advertising LSPs into IGP on page 38](#)

## MPLS Label Overview

---

Packets traveling along an LSP are identified by a label—a 20-bit, unsigned integer in the range 0 through 1,048,575. For push labels on ingress routers, no labels in this range are

restricted. For incoming labels on the transit static LSP, the label value is restricted to 1,000,000 through 1,048,575.

On MX Series, PTX Series, and T Series routers, the value for entropy and flow labels is restricted to 16 through 1,048,575.

## Special MPLS Labels

Some of the reserved labels (in the 0 through 15 range) have well-defined meanings. For more complete details, see RFC 3032, *MPLS Label Stack Encoding*.

- 0, IPv4 Explicit Null label—This value is legal only when it is the sole label entry (no label stacking). It indicates that the label must be popped upon receipt. Forwarding continues based on the IP version 4 (IPv4) packet.
- 1, Router Alert label—When a packet is received with a top label value of 1, it is delivered to the local software module for processing.
- 2, IPv6 Explicit Null label—This value is legal only when it is the sole label entry (no label stacking). It indicates that the label must be popped on receipt. Forwarding continues based on the IP version 6 (IPv6) packet.
- 3, Implicit Null label—This label is used in the control protocol (LDP or RSVP) only to request label popping by the downstream router. It never actually appears in the encapsulation. Labels with a value of 3 should not be used in the data packet as real labels. No payload type (IPv4 or IPv6) is implied with this label.
- 4 through 6—Unassigned.
- 7, Entropy label indicator—This label is used when an Entropy label is in the label stack and precedes the Entropy label.
- 8 through 15—Unassigned.

Special labels are commonly used between the egress and penultimate routers of an LSP. If the LSP is configured to carry IPv4 packets only, the egress router might signal the penultimate router to use 0 as a final-hop label. If the LSP is configured to carry IPv6 packets only, the egress router might signal the penultimate router to use 2 as a final-hop label.

The egress router might simply signal the penultimate router to use 3 as the final label, which is a request to perform penultimate-hop label popping. The egress router will not process a labeled packet; rather, it receives the payload (IPv4, IPv6, or others) directly, reducing one MPLS lookup at egress.

For label-stacked packets, the egress router receives an MPLS label packet with its top label already popped by the penultimate router. The egress router cannot receive label-stacked packets that use label 0 or 2. It typically requests label 3 from the penultimate router.

## MPLS Label Allocation

In the Junos OS, label values are allocated per router or switch—the rest of this explanation uses router to cover both. The display output shows only the label (for example, **01024**). Labels for multicast packets are independent of those for unicast packets. Currently, the Junos OS does not support multicast labels.

Labels are assigned by downstream routers relative to the flow of packets. A router receiving labeled packets (the next-hop router) is responsible for assigning incoming labels. A received packet containing a label that is unrecognized (unassigned) is dropped. For unrecognized labels, the router does not attempt to unwrap the label to analyze the network layer header, nor does it generate an Internet Control Message Protocol (ICMP) destination unreachable message.

A packet can carry a number of labels, organized as a last-in, first-out stack. This is referred to as a *label stack*. At a particular router, the decision about how to forward a labeled packet is based exclusively on the label at the top of the stack.

Figure 2 on page 26 shows the encoding of a single label. The encoding appears after data link layer headers, but before any network layer header.

**Figure 2: Label Encoding**


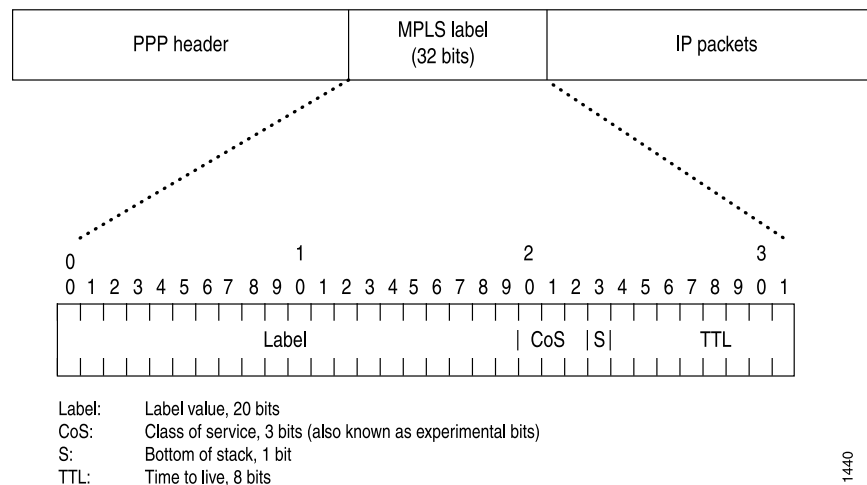


Figure 3 on page 27 illustrates the purpose of the class-of-service bits (also known as the EXP or experimental bits). Bits 20 and 21 specify the queue number. Bit 22 is the packet loss priority (PLP) bit used to specify the random early detection (RED) drop profile. For more information about class of service and the class-of-service bits, see “Configuring Class of Service for MPLS LSPs” on page 272.



Figure 3: Class-of-Service Bits

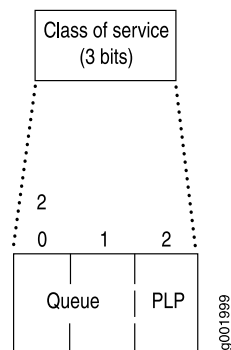

Related Documentation

- [per-prefix-label on page 1492](#)

## Operations on MPLS Labels

The router supports the following label operations:

- **Push**—Add a new label to the top of the packet. For IPv4 packets, the new label is the first label. The time-to-live (TTL) and s bits are derived from the IP packet header. The MPLS class of service (CoS) is derived from the queue number. If the push operation is performed on an existing MPLS packet, you will have a packet with two or more labels. This is called label stacking. The top label must have its s bit set to 0, and might derive CoS and TTL from lower levels. The new top label in a label stack always initializes its TTL to 255, regardless of the TTL value of lower labels.
- **Pop**—Remove the label from the beginning of the packet. Once the label is removed, the TTL is copied from the label into the IP packet header, and the underlying IP packet is forwarded as a native IP packet. In the case of multiple labels in a packet (label stacking), removal of the top label yields another MPLS packet. The new top label might derive CoS and TTL from a previous top label. The popped TTL value from the previous top label is not written back to the new top label.
- **Swap**—Replace the label at the top of the label stack with a new label. The S and CoS bits are copied from the previous label, and the TTL value is copied and decremented (unless the **no-decrement-ttl** or **no-propagate-ttl** statement is configured). A transit router supports a label stack of any depth.
- **Multiple Push**—Add multiple labels (up to three) on top of existing packets. This operation is equivalent to pushing multiple times.
- **Swap and Push**—Replace the existing top of the label stack with a new label, and then push another new label on top.

## Entropy Label Support in Mixed Mode Overview

Starting with Junos OS Release 14.2, entropy label is supported in mixed mode chassis where the entropy label can be configured without enhanced-ip configuration. The entropy label helps transit routers load-balance MPLS traffic across ECMP paths or link aggregation groups. The entropy label introduces a load-balancing label to be used by routers to load balance traffic rather than relying on deep packet inspection, reducing the packet processing requirements in the forwarding plane at the expense of increased label stack depth. Junos OS supports the entropy label only for MX Series routers with MPCs or MICs and can be enabled with enhanced-ip mode. But, this leads to a packet drop if the core-facing interface has an entropy label configured on the MPC or MIC and the other end of this core-facing connection has a DPC line card. In order to avoid this, the entropy label is now supported in mixed mode where the entropy label can be configured without enhanced-ip configuration. This allows MX Series router DPCs to support a pop out entropy label. However, this does not support a flow label.

Release History Table

Release	Description
14.2	Starting with Junos OS Release 14.2, entropy label is supported in mixed mode chassis where the entropy label can be configured without enhanced-ip configuration.

## Routers in an LSP

Each router in an LSP performs one of the following functions:

- Ingress router—The router at the beginning of an LSP. This router encapsulates IP packets with an MPLS Layer 2 frame and forwards it to the next router in the path. Each LSP can have only one ingress router.
- Egress router—The router at the end of an LSP. This router removes the MPLS encapsulation, thus transforming it from an MPLS packet to an IP packet, and forwards the packet to its final destination using information in the IP forwarding table. Each LSP can have only one egress router. The ingress and egress routers in an LSP cannot be the same router.
- Transit router—Any intermediate router in the LSP between the ingress and egress routers. A transit router forwards received MPLS packets to the next router in the MPLS path. An LSP can contain zero or more transit routers, up to a maximum of 253 transit routers in a single LSP.

A single router can be part of multiple LSPs. It can be the ingress or egress router for one or more LSPs, and it also can be a transit router in one or more LSPs. The functions that each router supports depend on your network design.

## How a Packet Travels Along an LSP

When an IP packet enters an LSP, the ingress router examines the packet and assigns it a label based on its destination, placing the label in the packet's header. The label

transforms the packet from one that is forwarded based on its IP routing information to one that is forwarded based on information associated with the label.

The packet is then forwarded to the next router in the LSP. This router and all subsequent routers in the LSP do not examine any of the IP routing information in the labeled packet. Rather, they use the label to look up information in their label forwarding table. They then replace the old label with a new label and forward the packet to the next router in the path.

When the packet reaches the egress router, the label is removed, and the packet again becomes a native IP packet and is again forwarded based on its IP routing information.

## Types of LSPs

---

There are three types of LSPs:

- Static LSPs—For static paths, you must manually assign labels on all routers involved (ingress, transit, and egress). No signaling protocol is needed. This procedure is similar to configuring static routes on individual routers. Like static routes, there is no error reporting, liveliness detection, or statistics reporting.
- LDP-signaled LSPs—See [“LDP Introduction” on page 577](#).
- RSVP-signaled LSPs—For signaled paths, RSVP is used to set up the path and dynamically assign labels. (RSVP signaling messages are used to set up signaled paths.) You configure only the ingress router. The transit and egress routers accept signaling information from the ingress router, and they set up and maintain the LSP cooperatively. Any errors encountered while establishing an LSP are reported to the ingress router for diagnostics. For signaled LSPs to work, a version of RSVP that supports tunnel extensions must be enabled on all routers.

There are two types of RSVP-signaled LSPs:

- Explicit-path LSPs—All intermediate hops of the LSP are manually configured. The intermediate hops can be strict, loose, or any combination of the two. Explicit path LSPs provide you with complete control over how the path is set up. They are similar to static LSPs but require much less configuration.
- Constrained-path LSPs—The intermediate hops of the LSP are automatically computed by the software. The computation takes into account information provided by the topology information from the IS-IS or OSPF link-state routing protocol, the current network resource utilization determined by RSVP, and the resource requirements and constraints of the LSP. For signaled constrained-path LSPs to work, either the IS-IS or OSPF protocol and the IS-IS or OSPF traffic engineering extensions must be enabled on all routers.

## Scope of LSPs

---

For constrained-path LSPs, the LSP computation is confined to one IGP domain, and cannot cross any AS boundary. This prevents an AS from extending its IGP into another AS.

Explicit-path LSPs, however, can cross as many AS boundaries as necessary. Because intermediate hops are manually specified, the LSP does not depend on the IGP topology or a local forwarding table.

## Constrained-Path LSP Computation

---

The Constrained Shortest Path First (CSPF) algorithm is an advanced form of the shortest-path-first (SPF) algorithm used in OSPF and IS-IS route computations. CSPF is used in computing paths for LSPs that are subject to multiple constraints. When computing paths for LSPs, CSPF considers not only the topology of the network, but also the attributes of the LSP and the links, and it attempts to minimize congestion by intelligently balancing the network load.


The constraints that CSPF considers include:

- LSP attributes
  - Administrative groups (that is, link color requirements)
  - Bandwidth requirements
  - Explicit route (strict or loose)
  - Hop limitations
  - Priority (setup and hold)
- Link attributes
  - Administrative groups (that is, link colors assigned to the link)
  - Reservable bandwidth of the links (static bandwidth minus the currently reserved bandwidth)

The data that CSPF considers comes from the following sources:

- Traffic engineering database—Provides CSPF with up-to-date topology information, the current reservable bandwidth of links, and the link colors. For the CSPF algorithm to perform its computations, a link-state IGP (such as OSPF or IS-IS) with special extensions is needed. For CSPF to be effective, the link-state IGP on all routers must support the special extensions. While building the topology database, the extended IGP must take into consideration the current LSPs and must flood the route information everywhere. Because changes in the reserved link bandwidth and link color cause database updates, an extended IGP tends to flood more frequently than a normal IGP. See [Figure 4 on page 31](#) for a diagram of the relationships between these components.
- Currently active LSPs—Includes all the LSPs that should originate from the router and their current operational status (up, down, or timeout).

Figure 4: CSPF Computation Process

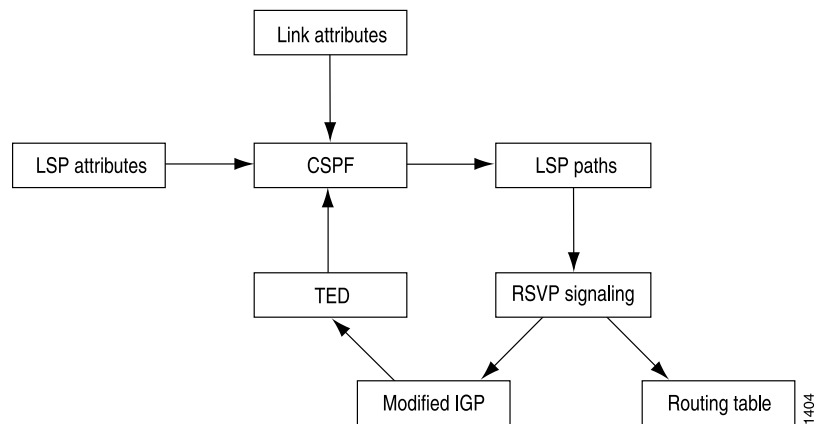

This section discusses the following topics:

- [How CSPF Selects a Path on page 31](#)
- [CSPF Path Selection Tie-Breaking on page 32](#)
- [Computing CSPF Paths Offline on page 33](#)

## How CSPF Selects a Path

To select a path, CSPF follows certain rules. The rules are as follows:

1. Computes LSPs one at a time, beginning with the highest priority LSP (the one with the lowest setup priority value). Among LSPs of equal priority, CSPF services the LSPs in alphabetical order of the LSP names.
2. Prunes the traffic engineering database of all the links that are not full duplex and do not have sufficient reservable bandwidth.
3. If the LSP configuration includes the **include** statement, prunes all links that do not share any included colors.
4. If the LSP configuration includes the **exclude** statement, prunes all links that contain excluded colors. If the link does not have a color, it is accepted.
5. If several paths have equal cost, chooses the one whose last-hop address is the same as the LSP's destination.
6. If several equal cost paths remain, selects the one with the fewest number of hops.
7. If several equal-cost paths remain, applies the CSPF load-balancing rule configured on the LSP (least fill, most fill, or random).

CSPF finds the shortest path toward the LSP's egress router, taking into account explicit-path constraints. For example, if the path must pass through Router A, two separate SPF computations are performed, one from the ingress router to Router A, the other from Router A to the egress router. All CSPF rules are applied to both computations.

- Related Documentation**
- [Configuring CSPF Tie Breaking on page 260](#)
  - [CSPF Path Selection Tie-Breaking on page 32](#)

---

## CSPF Path Selection Tie-Breaking

If more than one path is still available after the CSPF rules ([“How CSPF Selects a Path” on page 31](#)) have been applied, a tie-breaking rule is applied to choose the path for the LSP. The rule used depends on the configuration. There are three tie-breaking rules:

- **Random**—One of the remaining paths is picked at random. This rule tends to place an equal number of LSPs on each link, regardless of the available bandwidth ratio. This is the default behavior.
- **Least fill**—The path with the largest minimum available bandwidth ratio is preferred. This rule tries to equalize the reservation on each link.
- **Most fill**—The path with the smallest minimum available bandwidth ratio is preferred. This rule tries to fill a link before moving on to alternative links.

The following definitions describe how a figure for minimum available bandwidth ratio is derived for the least fill and most fill rules:

- Reservable bandwidth = bandwidth of link x subscription factor of link
- Available bandwidth = reservable bandwidth – (sum of the bandwidths of the LSPs traversing the link)
- Available bandwidth ratio = available bandwidth/reservable bandwidth
- Minimum available bandwidth ratio (for a path) = the smallest available bandwidth ratio of the links in a path



**NOTE:** For the least fill or most fill behaviors to be used, the paths must have their bandwidth (specified using the `bandwidth` statement at the `[edit protocols mpls label-switched-path lsp-name]` hierarchy level) or minimum bandwidth (specified using the `minimum-bandwidth` statement at the `[edit protocols mpls label-switched-path lsp-name auto-bandwidth]` hierarchy level) configured to a value greater than 0. If the bandwidth or minimum bandwidth for the paths is either not configured or configured as 0, the minimum available bandwidth cannot be calculated and the random path selection behavior is used instead.

---

- Related Documentation**
- [How CSPF Selects a Path on page 31](#)
  - [Configuring CSPF Tie Breaking on page 260](#)
  - [Configuring the Bandwidth Value for LSPs on page 285](#)
  - [Configuring the Maximum and Minimum Bounds of the LSP's Bandwidth on page 289](#)

---

## Computing CSPF Paths Offline

---

The Junos OS provides online, real-time CSPF computation only; each router performs CSPF calculations independent of the other routers in the network. These calculations are based on currently available topology information—information that is usually recent, but not completely accurate. LSP placements are locally optimized, based on current network status.

To optimize links globally across the network, you can use an offline tool to perform the CSPF calculations and determine the paths for the LSPs. You can create such a tool yourself, or you can modify an existing network design tool to perform these calculations. You should run the tool periodically (daily or weekly) and download the results into the router. An offline tool should take the following into account when performing the optimized calculations:

- All the LSP's requirements
- All link attributes
- Complete network topology

---

## Path Computation for LSPs on an Overloaded Router

---

Setting the overload bit in a router running IS-IS causes it to appear overloaded and prevents it from being used for transit traffic. Any new MPLS LSPs, including RSVP-signaled or LDP-signaled LSPs, are re-routed away from an overloaded router. In the case of RSVP, this behavior applies to both Constrained Shortest Path First (CSPF) and non-CSPF LSPs. However, this behavior does not apply to new or existing bypass LSPs. Bypass LSPs are recalculated only when a different event triggers a path recalculation. For example, if you set the smart optimize timer with the `smart-optimize-timer` statement, the bypass LSP is rerouted away from the overloaded router only after the specified time elapses. Otherwise, the bypass LSP continues to transit the overloaded router.

You cannot establish any new transit LSPs through an overloaded router. However, you can configure ingress and egress LSPs through an overloaded router.




**NOTE:** When you set the overload bit on an IS-IS router, any new LSPs transiting through it are recomputed and re-routed away from it. However, existing CSPF LSPs remain active and are not torn down.

An example of when you might want to establish transit LSPs through an overloaded router is illustrated in [Figure 5 on page 34](#), which shows an aggregation router (Router A) dual-homed on two core routers (Router B and Router C). You want to include the aggregation router in the LSP mesh, but transit LSPs should not pass through it, because it is a less capable router with relatively low-bandwidth uplinks to the core. Certain failure and rerouting scenarios could make it impossible for the aggregation router

to establish some of its LSPs. Consequently, you run the router in a steady state with the overload bit set, but you are still able to establish ingress and egress LSPs through it.

**Figure 5: Aggregation Router A Dual-Homed on Core Routers B and C**

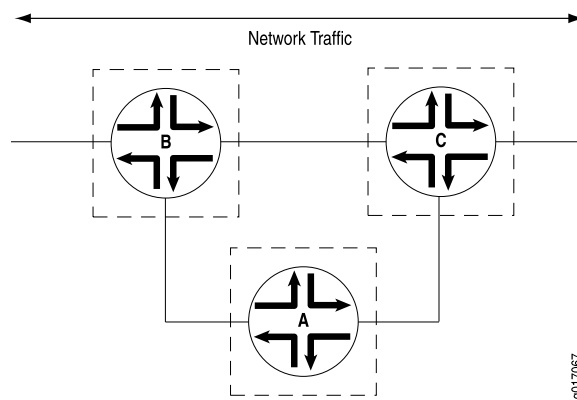

- Related Documentation**
- [Constrained-Path LSP Computation on page 30](#)
  - *overload*

## Computing Backup Paths for LSPs Using Fate Sharing

Fate sharing allows you to create a database of information that CSPF uses to compute one or more backup paths to use in case the primary path becomes unstable. The database describes the relationships between elements of the network, such as routers and links. You can specify one or more elements within a group.

Through fate sharing, you can configure backup paths that minimize the number of shared links and fiber paths with the primary paths as much as possible, to ensure that if a fiber is cut, the minimum amount of data is lost and a path still exists to the destination.

For a backup path to work optimally, it must not share links or physical fiber paths with the primary path, ensuring that a single point of failure will not affect the primary and backup paths simultaneously.

- Related Documentation**
- [Configuring the Ingress Router for MPLS-Signaled LSPs on page 60](#)
  - [fate-sharing on page 1439](#)

## Using Labeled-Switched Paths to Augment SPF to Compute IGP Shortcuts

Link-state protocols, such as OSPF and IS-IS, use the shortest-path-first (SPF) algorithm to compute the shortest-path tree to all nodes in the network. The results of such computations can be represented by the destination node, next-hop address, and output interface, where the output interface is a physical interface. Label-switched paths (LSPs) can be used to augment the SPF algorithm.

IGP typically performs two independent computations. The first is performed without considering any LSP. The result of the computation is stored in the inet.0 table. This step




is no different from traditional SPF computations and is always performed even if IGP shortcut is disabled.

The second computation is performed considering only LSPs as a logical interface. Each LSP's egress router is considered. The list of destinations whose shortest path traverses the egress router (established during the first computation) is placed in the inet.3 routing table. These destinations are given the egress router of the LSP as a next hop, enabling BGP on the local router to use these LSPs to access BGP next hops beyond the egress router. Normally, BGP can use only LSPs that terminate at the BGP next hop.


As an illustration, begin with a typical SPF tree (see [Figure 6 on page 35](#)).

**Figure 6: Typical SPF Tree, Sourced from Router A**

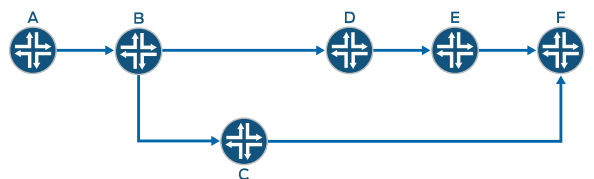

If an LSP connects Router A to Router D and if IGP shortcuts are enabled on Router A, you might have the SPF tree shown in [Figure 7 on page 35](#).

**Figure 7: Modified SPF Tree, Using LSP A–D as a Shortcut**

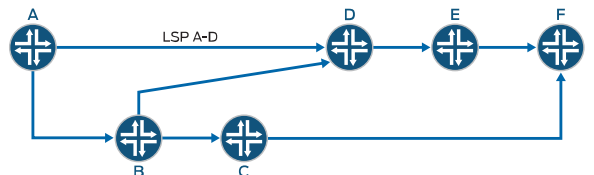

Note that Router D is now reachable through LSP A–D.

When computing the shortest path to reach Router D, Router A has two choices:

- Use IGP path A–B–D.
- Use LSP A–D.

Router A decides between the two choices by comparing the IGP metrics for path A–B–D with the LSP metrics for LSP A–D. If the IGP metric is lower, path A–B–D is chosen ([Figure 6 on page 35](#)). This path A–B–D is valid only when node D is not the tail-end of the LSP. If node D is the tail end of the LSP, even if the LSP metric is lower or both IGP and LSP metrics are equal, LSP A–D is used ([Figure 7 on page 35](#)).

Note that Router E is reachable through LSP A–D and Router F will take the IGP path.

#### Related Documentation

- [traffic-engineering](#)
- [OSPF Support for Traffic Engineering](#)
- [IGP Shortcuts and Routing Tables on page 37](#)

## Enabling IGP Shortcuts

IGP shortcuts are supported for both IS-IS and OSPF. A link-state protocol is required for IGP shortcuts. Shortcuts are disabled by default. You can enable IGP shortcuts on a per-router basis; you do not need to enable shortcuts globally. A router's shortcut computation does not depend on another router performing similar computations, and shortcuts performed by other routers are irrelevant.

### Related Documentation

- [Example: Enabling IS-IS Traffic Engineering Support](#)
- [Example: Enabling OSPF Traffic Engineering Support](#)
- [Using Labeled-Switched Paths to Augment SPF to Compute IGP Shortcuts on page 34](#)

## LSPs Qualified in IGP Shortcut Computations

Not all LSPs are used in IGP shortcuts. Only those LSPs whose egress point (using the **to** statement) matches the router ID of the egress node are considered. Other LSPs, whose egress point matches the egress node interface address, are ignored in IGP shortcuts.


There are exceptions, however. If an LSP has an alias egress point (using the **install** statement) and it matches certain router IDs, it is included in the shortcut computation as well. If multiple equal metric LSPs destined to the same router ID exist, traffic can load-share among them.

## IGP Shortcut Applications

You can use shortcuts to engineer traffic traveling toward destination nodes that do not support MPLS LSPs. For example, in [“Modified SPF Tree, Using LSP A–D and LSP A–E as Shortcuts” on page 34](#), traffic traveling toward Router F enters LSP A–E. You can control traffic between Router A and Router F by manipulating LSP A–E; you do not need to explicitly set up an LSP between Router A and Router F.

In [Figure 8 on page 36](#), all traffic from Region 1 to Region 2 traverses LSP A–B if IGP shortcuts are enabled on the ingress router (Router A), permitting aggregation of interregional traffic into one LSP. To perform traffic engineering on the interregional traffic, you have to manipulate LSP A-B only, which avoids creating n2 LSPs from all routers in Region 1 to all routers in Region 2 and allows efficient resource controls on the backbone network.


Figure 8: IGP Shortcuts

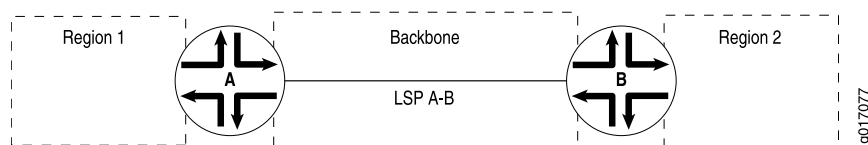

Shortcuts allow you to deploy LSPs into a network in an incremental, hierarchical fashion. In [Figure 9 on page 37](#), each region can choose to implement traffic engineering LSPs

independently, without requiring cooperation from other regions. Each region can choose to deploy intraregion LSPs to fit the region's bandwidth needs, at the pace appropriate for the region.

**Figure 9: IGP Shortcuts in a Bigger Network**

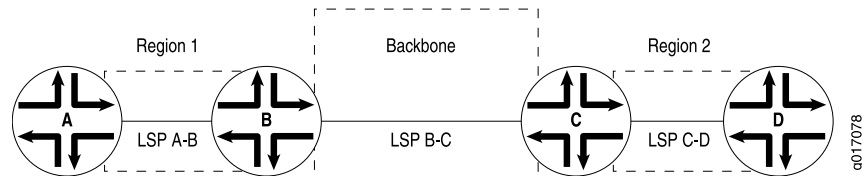

When intraregion LSPs are in place, interregional traffic automatically traverses the intraregion LSPs as needed, eliminating the need for a full mesh of LSPs between edge routers. For example, traffic from Router A to Router D traverses LSPs A–B, B–C, and C–D.

## IGP Shortcuts and Routing Tables

IGP typically performs two independent computations. The first is performed without considering any LSP. The result of the computation is stored in the inet.0 table. This step is no different from traditional SPF computations and is always performed even if IGP shortcut is disabled.

The second computation is performed considering only LSPs as a logical interface. Each LSP's egress router is considered. The list of destinations whose shortest path traverses the egress router (established during the first computation) is placed in the inet.3 routing table. These destinations are given the egress router of the LSP as a next hop, enabling BGP on the local router to use these LSPs to access BGP next hops beyond the egress router. Normally, BGP can use only LSPs that terminate at the BGP next hop. Note that BGP is the only protocol that uses the inet.3 routing table. Other protocols will not route traffic through these LSPs.

If traffic engineering for IGP and BGP is enabled (see [“IGP and BGP Destinations” on page 41](#)), IGP moves all routes in inet.3 into inet.0, merging all routes while emptying the inet.3 table. The number of routes in inet.0 will be exactly the same as before. Route next-hops can traverse a physical interface, an LSP, or the combination of the two if the metrics are equal.

IGP shortcuts are enabled on a per-node basis. You do not need to coordinate with other nodes.

## IGP Shortcuts and VPNs

You can configure IGP shortcuts for either IS-IS or OSPF. IGP shortcuts allow the IGP to use an LSP as the next hop instead of the IGP route. IGP shortcuts can also be enabled for VPNs by also specifying the **bgp-igp-both-ribs** or **mpls-forwarding** options for the **traffic-engineering** statement at the **[edit protocols mpls]** hierarchy level. VPNs are dependant on routes stored in the inet.3 routing table. The **bgp-igp** option for the **traffic-engineering** statement moves all routes from the inet.3 routing table to the inet.0 routing table and is therefore incompatible with VPNs.


- Related Documentation**
- [Configuring Traffic Engineering for LSPs on page 365](#)
  - [traffic-engineering](#)
  - [OSPF Support for Traffic Engineering](#)

## Advertising LSPs into IGPs

You can configure your IGP to treat an LSP as a link. IGP shortcuts allow only the ingress router of an LSP to use the LSP in its SPF computation. However, other routers on the network do not know of the existence of that LSP, so they cannot use it. This can lead to suboptimal traffic engineering. In addition, only BGP can use an IGP shortcut to an LSP. When you advertise an LSP as a link into the IGP, all traffic can traverse it, and all routers know about it.

As an example, consider the network shown in [Figure 10 on page 38](#).

**Figure 10: SPF Computations with Advertised LSPs**

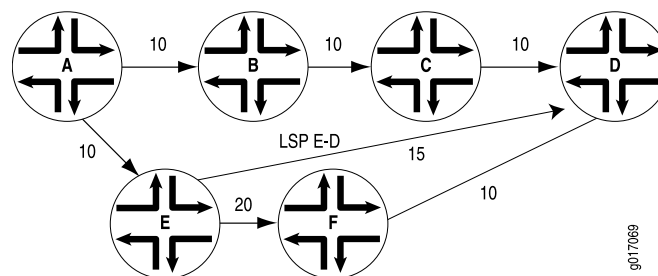

Assume that Router A is computing a path to Router D. The link between Router E and Router F has a metric of 20; all other links have a metric of 10. Here, the path chosen by Router A is A–B–C–D, which has a metric of 30, instead of A–E–F–D, which has a metric of 40.

If Router E has an LSP to Router D with a metric of 15, you want traffic from Router A to Router D to use the path A–E–D, which has a metric of 25, instead of the path A–B–C–D. However, because Router A does not know about the LSP between Router E and Router D, it cannot route traffic through this path.

For all routers on the network to know about the LSP between Router E and Router D, you need to advertise it. This advertisement announces the LSP as a unidirectional, point-to-point link in the link-state database, and all routers can compute paths using the LSP. The link-state database maintains information about the AS topology and contains information about the router's local state (for example, the router's usable interfaces and reachable neighbors). In [Figure 10 on page 38](#), Router A will see the link from Router E to Router D and route traffic along this lower-metric path.

Because an LSP is announced as a unidirectional link, you might need to configure a reverse LSP (one that starts at the egress router and ends at the ingress router) so that the SPF bidirectionality check succeeds. As a step in the SPF computation, IS-IS considers a link from Router E to Router D. Before IS-IS uses any link, it verifies that there is a link

from Router D to Router E (there is bidirectional connectivity between router E and D). Otherwise, the SPF computation will not use an announced LSP.

When an LSP is advertised to the IGP, the advertising router uses the LSP as the forwarding path for regular routes after installing them in the inet.0 routing table. All packets traversing the router could be forwarded through the LSP. Conversely, IGP shortcuts are used only to forward packets that are following BGP routes.



**NOTE:** Do not configure IGP shortcuts and advertise LSPs to the IGP at the same time.

## IP and MPLS Packets on Aggregated Interfaces

You can send IP and MPLS packets over aggregated interfaces. To the IP or MPLS session, there is a single LSP composed of the aggregated interfaces. Packets sent to an LSP that is part of an aggregated interface are redistributed over the aggregated member interfaces.

Sending IP and MPLS packets over aggregated interfaces has the following benefits:

- **Bandwidth aggregation**—You can increase the number of MPLS packet flows sent over each connection. In MPLS, a set of packets sharing the same label is considered a part of the same flow.
- **Link redundancy**—If a link or a line card failure affects an aggregate member link, the traffic flowing across that link is immediately forwarded across one of the remaining links.

The Junos OS supports aggregated SONET and Ethernet interfaces.

Note that the Junos implementation of IP and MPLS over aggregated interfaces (aggregated Ethernet devices only) complies with IEEE 802.3ad.

For information about how to configure aggregated Ethernet or aggregated SONET interfaces, see *Ethernet Interfaces Feature Guide for Routing Devices* and *Configuring Aggregated SONET/SDH Interfaces*.

### Related Documentation

- *Ethernet Interfaces Feature Guide for Routing Devices*
- *Configuring Aggregated SONET/SDH Interfaces*

## MPLS Applications

In the Junos OS implementation of MPLS, establishing an LSP installs on the ingress router a host route (a 32-bit mask) toward the egress router. The address of the host route is the destination address of the LSP. By default, the route has a preference value of 7, a value that is higher than all routes except direct interface and static routes. The 32-bit mask ensures that the route is more specific (that is, a longer match) than all other

subnet routes. The host routes can be used to traffic-engineer BGP destinations only, or both IGP and BGP destinations.

This section discusses the following topics:

- BGP Destinations on page 40
- IGP and BGP Destinations on page 41
- Selecting a Forwarding LSP Next Hop on page 42


## BGP Destinations

You can configure MPLS to control the paths that traffic takes to destinations outside an AS.

Both IBGP and EBGP take advantage of the LSP host routes without requiring extra configuration. BGP compares the BGP next-hop address with the LSP host route. If a match is found, the packets for the BGP route are label-switched over the LSP. If multiple BGP routes share the same next-hop address, all the BGP routes are mapped to the same LSP route, regardless of which BGP peer the routes are learned from. If the BGP next-hop address does not match an LSP host route, BGP routes continue to be forwarded based on the IGP routes within the routing domain. In general, when both an LSP route and an IGP route exist for the same BGP next-hop address, the one with the lowest preference is chosen.


Figure 11 on page 40 shows an MPLS topology that illustrates how MPLS and LSPs work. This topology consists of a single domain with four routers. The two routers at the edges of the domain, Router 1 and Router 4, are running EBGP to communicate with peers outside the domain and IBGP to communicate between themselves. For intradomain communication, all four routers are running an IGP. Finally, an LSP tunnel exists from Router 1 to Router 4.

Figure 11: MPLS Application Topology

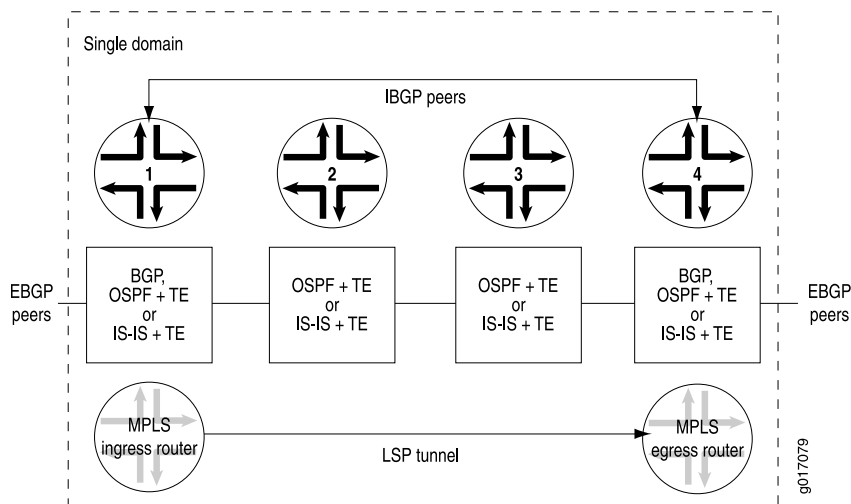

When BGP on Router 1 receives prefixes from Router 4, it must determine how to reach a BGP next-hop address. Typically, when traffic engineering is not enabled, BGP uses IGP routes to determine how to reach next-hop addresses. (See the left side of [Figure 12 on page 41](#).) However, when traffic engineering is enabled, if the BGP next-hop matches the LSP tunnel endpoint (that is, the MPLS egress router), those prefixes enter the LSP tunnel. (To track these prefixes, look at the **Active Route** field in the **show mpls lsp** command output or at the output of the **show route label-switched-path path-name** command.) If the BGP next hop does not match an LSP tunnel endpoint, those prefixes are sent following the IGP's shortest path. (See [Figure 12 on page 41](#).)

**Figure 12: How BGP Determines How to Reach Next-Hop Addresses**

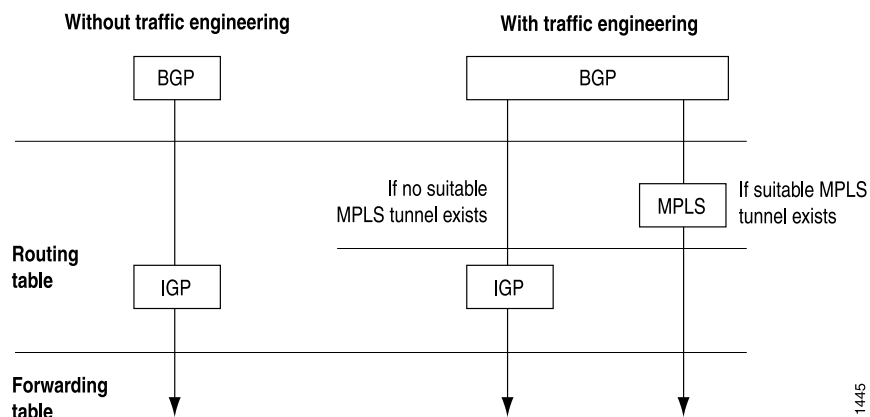

1445

## IGP and BGP Destinations

You can configure MPLS to control the paths that traffic takes to destinations within an AS.

When traffic engineering is for BGP destinations only, the MPLS host routes are installed in the inet.3 routing table (see [Figure 13 on page 44](#)), separate from the routes learned from other routing protocols. Not all inet.3 routes are downloaded into the forwarding table. Packets directly addressed to the egress router do not follow the LSP, which prevents routes learned from LSPs from overriding routes learned from IGP or other sources.

Traffic within a domain, including BGP control traffic between BGP peers, is not affected by LSPs. MPLS affects interdomain traffic only; that is, it affects only those BGP prefixes that are learned from an external domain. MPLS does not disrupt intradomain traffic, so IS-IS or OSPF routes remain undisturbed. If you issue a **ping** or **traceroute** command to any destination within the domain, the **ping** or **traceroute** packets follow the IGP path. However, if you issue a **ping** or **traceroute** command from Router 1 in [Figure 11 on page 40](#) (the LSP ingress router) to a destination outside of the domain, the packets use the LSP tunnel.

When traffic engineering for IGP and BGP destinations is enabled, the MPLS host routes are installed in the inet.0 table (see [Figure 14 on page 45](#)) and downloaded into the forwarding table. Any traffic destined to the egress router could enter the LSP. In effect, it moves all the routes in inet.3 into inet.0, causing the inet.3 table to be emptied.

RSVP packets automatically avoid all MPLS LSPs, including those established by RSVP or LDP. This prevents placing one RSVP session into another LSP, or in other words, nesting one LSP into another.

## Selecting a Forwarding LSP Next Hop

---

If more than one LSP tunnel to a BGP next hop exists, the prefixes learned from the BGP next hop are randomly divided among the LSP tunnels. To control which LSP BGP uses to forward data for a given prefix, use the **install-nexthop** statement in the export policy applied to the forwarding table.

- Related Documentation**
- *Configuring Policies for Layer 2 Circuits*
  - *install-nexthop*

## Example: Assigning Different Forwarding Next-Hop LSPs to Different Destination Prefixes

---

Assign different forwarding next-hop LSPs to different destination prefixes learned from BGP.

```
routing-options {
  router-id 10.10.20.101;
  autonomous-system 2;
  forwarding-table {
    export forwarding-policy;
  }
}
policy-options {
  policy-statement forwarding-policy {
    term one {
      from {
        protocol bgp;
        route-filter 10.1.0.0/16 orlonger;
      }
      then {
        install-nexthop lsp mc-c-lsp-1;
        accept;
      }
    }
    term two {
      from {
        protocol bgp;
        route-filter 10.2.0.0/16 orlonger;
      }
      then {
        install-nexthop lsp mc-c-lsp-2;
        accept;
      }
    }
    term three {
      from {
        protocol bgp;
```



```


        route-filter 10.3.0.0/16 orlonger;
    }
    then {
        install-nexthop lsp mc-c-lsp-3;
        accept;
    }
}
}
}
protocols {
    mpls {
        label-switched-path mc-c-lsp-1 {
            from 10.10.20.101;
            to 10.10.20.103;
        }
        label-switched-path mc-c-lsp-2 {
            from 10.10.20.101;
            to 10.10.20.103;
        }
        label-switched-path mc-c-lsp-3 {
            from 10.10.20.101;
            to 10.10.20.103;
        }
    }
}
}

```

## MPLS and Routing Tables

The IGPs and BGP store their routing information in the inet.0 routing table, the main IP routing table. If the **traffic-engineering bgp** command is configured, thereby allowing only BGP to use MPLS paths for forwarding traffic, MPLS path information is stored in a separate routing table, inet.3. Only BGP accesses the inet.3 routing table. BGP uses both inet.0 and inet.3 to resolve next-hop addresses. If the **traffic-engineering bgp-igp** command is configured, thereby allowing the IGPs to use MPLS paths for forwarding traffic, MPLS path information is stored in the inet.0 routing table. ([Figure 13 on page 44](#) and [Figure 14 on page 45](#) illustrate the routing tables in the two traffic engineering configurations.)

Figure 13: Routing and Forwarding Tables, traffic-engineering bgp

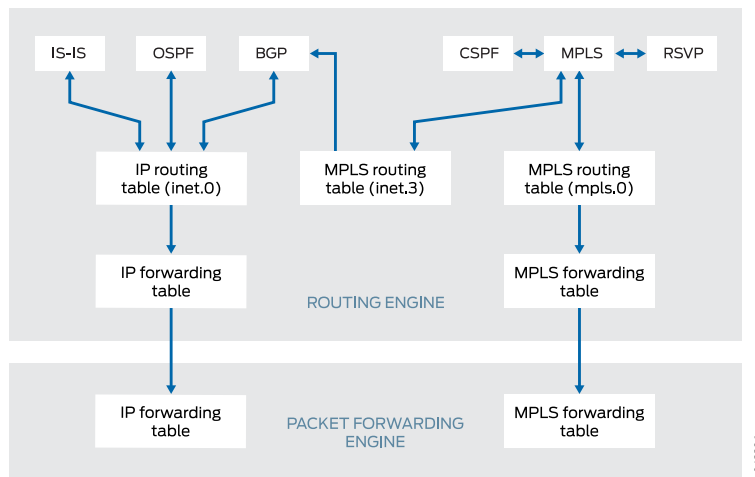

The inet.3 routing table contains the host address of each LSP's egress router. This routing table is used on ingress routers to route packets to the destination egress router. BGP uses the inet.3 routing table on the ingress router to help in resolving next-hop addresses.


MPLS also maintains an MPLS path routing table (mpls.0), which contains a list of the next label-switched router in each LSP. This routing table is used on transit routers to route packets to the next router along an LSP.

Typically, the egress router in an LSP does not consult the mpls.0 routing table. (This router does not need to consult mpls.0 because the penultimate router in the LSP either changes the packet's label to a value of 0 or pops the label.) In either case, the egress router forwards it as an IPv4 packet, consulting the IP routing table, inet.0, to determine how to forward the packet.

When a transit or egress router receives an MPLS packet, information in the MPLS forwarding table is used to determine the next transit router in the LSP or to determine that this router is the egress router.

When BGP resolves a next-hop prefix, it examines both the inet.0 and inet.3 routing tables, seeking the next hop with the lowest preference. If it finds a next-hop entry with an equal preference in both routing tables, BGP prefers the entry in the inet.3 routing table.

Figure 14: Routing and Forwarding Tables, traffic-engineering bgp-igp

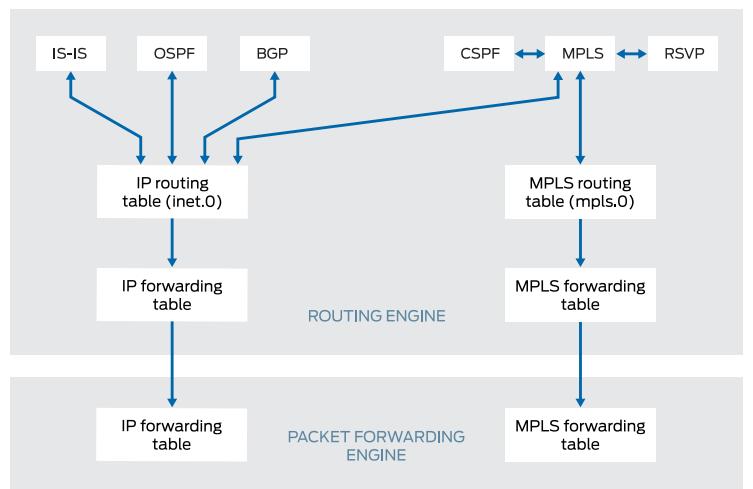

Generally, BGP selects next-hop entries in the inet.3 routing table because their preferences are always lower than OSPF and IS-IS next-hop preferences. When you configure LSPs, you can override the default preference for MPLS LSPs, which might alter the next-hop selection process.

When BGP selects a next-hop entry from the inet.3 routing table, it installs that LSP into the forwarding table in the Packet Forwarding Engine, which causes packets destined for that next hop to enter and travel along the LSP. If the LSP is removed or fails, the path is removed from the inet.3 routing table and from the forwarding table, and BGP reverts to using a next hop from the inet.0 routing table.

## MPLS and Traffic Protection

Typically, when an LSP fails, the router immediately upstream from the failure signals the outage to the ingress router. The ingress router calculates a new path to the egress router, establishes the new LSP, and then directs the traffic from the failed path to the new path. This rerouting process can be time-consuming and prone to failure. For example, the outage signals to the ingress router might get lost, or the new path might take too long to come up, resulting in significant packet drops. The Junos OS provides several complementary mechanisms for protecting against LSP failures:

- Standby secondary paths—You can configure primary and secondary paths. You configure secondary paths with the **standby** statement. To activate traffic protection, you need to configure these standby paths only on the ingress router. If the primary path fails, the ingress router immediately reroutes traffic from the failed path to the standby path, thereby eliminating the need to calculate a new route and signal a new path. For information about configuring standby LSPs, see [“Configuring Hot Standby of Secondary Paths for LSPs” on page 297](#).
- Fast reroute—You configure fast reroute on an LSP to minimize the effect of a failure in the LSP. Fast reroute enables a router upstream from the failure to route around the failure quickly to the router downstream of the failure. The upstream router then signals

the outage to the ingress router, thereby maintaining connectivity before a new LSP is established. For a detailed overview of fast reroute, see [“Fast Reroute Overview” on page 46](#). For information about configuring fast reroute, see [“Configuring Fast Reroute” on page 254](#).

- **Link protection**—You can configure link protection to help ensure that traffic traversing a specific interface from one router to another can continue to reach its destination in the event that this interface fails. When link protection is configured for an interface and configured for an LSP that traverses this interface, a bypass LSP is created that handles this traffic if the interface fails. The bypass LSP uses a different interface and path to reach the same destination. For information about configuring link protection, see [“Configuring Link Protection on Interfaces Used by LSPs” on page 536](#).

When standby secondary path, and fast reroute or link protection are configured on an LSP, full traffic protection is enabled. When a failure occurs in an LSP, the router upstream from the failure routes traffic around the failure and notifies the ingress router of the failure. This rerouting keeps the traffic flowing while waiting for the notification to be processed at the ingress router. After receiving the failure notification, the ingress router immediately reroutes the traffic from the patched primary path to the more optimal standby path.

Fast reroute and link protection provide a similar type of traffic protection. Both features provide a quick transfer service and employ a similar design. Fast reroute and link protection are both described in RFC 4090, *Fast Reroute Extensions to RSVP-TE for LSP Tunnels*. However, you need to configure only one or the other. Although you can configure both, there is little, if any, benefit in doing so.

**Related  
Documentation**

- [Configuring Hot Standby of Secondary Paths for LSPs on page 297](#)
- [Fast Reroute Overview on page 46](#)
- [Configuring Fast Reroute on page 254](#)
- [Configuring Link Protection on Interfaces Used by LSPs on page 536](#)


---

## Fast Reroute Overview

Fast reroute provides redundancy for an LSP path. When you enable fast reroute, detours are precomputed and preestablished along the LSP. In case of a network failure on the current LSP path, traffic is quickly routed to one of the detours. [Figure 15 on page 47](#) illustrates an LSP from Router A to Router F, showing the established detours. Each detour is established by an upstream node to avoid the link toward the immediate downstream node and the immediate downstream node itself. Each detour might traverse through one or more label-switched routers (or switches) that are not shown in the figure.

Fast reroute protects traffic against any single point of failure between the ingress and egress routers (or switches). If there are multiple failures along an LSP, fast reroute itself might fail. Also, fast reroute does not protect against failure of the ingress or egress routers.


Figure 15: Detours Established for an LSP Using Fast Reroute

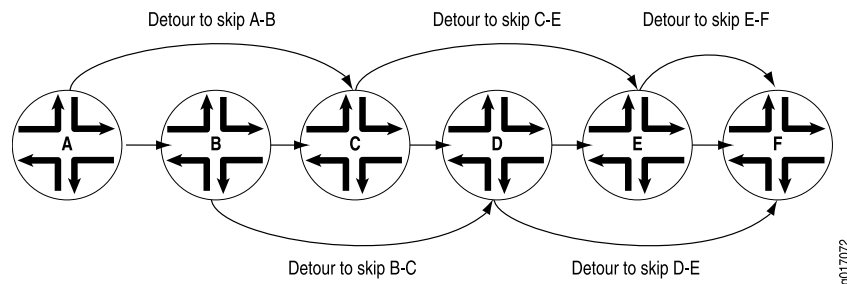

If a node detects that a downstream link has failed (using a link-layer-specific liveness detection mechanism) or that a downstream node has failed (for example, using the RSVP neighbor hello protocol), the node quickly switches the traffic to the detour and, at the same time, signals the ingress router about the link or node failure.

Figure 16 on page 47 illustrates the detour taken when the link between Router B and Router C fails.

Figure 16: Detour After the Link from Router B to Router C Fails

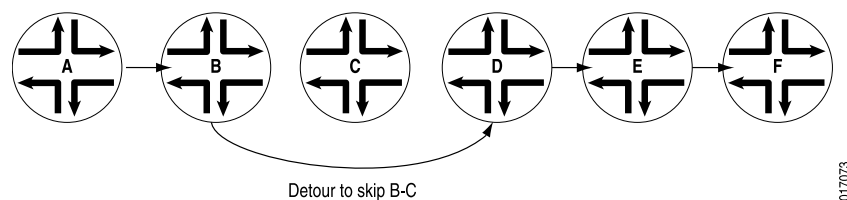

If the network topology is not rich enough (there are not enough routers with sufficient links to other routers), some of the detours might not succeed. For example, the detour from Router A to Router C in Figure 15 on page 47 cannot traverse link A-B and Router B. If such a path is not possible, the detour does not occur.

Note that after the node switches traffic to the detour, it might switch the traffic again to a newly calculated detour soon after. This is because the initial detour route might not be the best route. To make rerouting as fast as possible, the node switches traffic onto the initial detour without first verifying that the detour is valid. Once the switch is made, the node recomputes the detour. If the node determines that the initial detour is still valid, traffic continues to flow over this detour. If the node determines that the initial detour is no longer valid, it again switches the traffic to a newly computed detour.



**NOTE:** If you issue `show` commands after the node has switched traffic to the initial detour, the node might indicate that the traffic is still flowing over the original LSP. This situation is temporary and should correct itself quickly.

The time required for a fast-rerouting detour to take effect depends on two independent time intervals:

- Amount of time to detect that there is a link or node failure—This interval depends greatly on the link layer in use and the nature of the failure. For example, failure detection

on an SONET/SDH link typically is much faster than on a Gigabit Ethernet link, and both are much faster than detection of a router failure.


- Amount of time required to splice the traffic onto the detour—This operation is performed by the Packet Forwarding Engine, which requires little time to splice traffic onto the detour. The time needed can vary depending on the number of LSPs being switched to detours.

Fast reroute is a short-term patch to reduce packet loss. Because detour computation might not reserve adequate bandwidth, the detours might introduce congestion on the alternate links. The ingress router is the only router that is fully aware of LSP policy constraints and, therefore, is the only router able to come up with adequate long-term alternate paths.

Detours are created by use of RSVP and, like all RSVP sessions, they require extra state and overhead in the network. For this reason, each node establishes at most one detour for each LSP that has fast reroute enabled. Creating more than one detour for each LSP increases the overhead, but serves no practical purpose.

To reduce network overhead further, each detour attempts to merge back into the LSP as soon as possible after the failed node or link. If you can consider an LSP that travels through  $n$  router nodes, it is possible to create  $n - 1$  detours. For instance, in [Figure 17 on page 48](#), the detour tries to merge back into the LSP at Router D instead of at Router E or Router F. Merging back into the LSP makes the detour scalability problem more manageable. If topology limitations prevent the detour from quickly merging back into the LSP, detours merge with other detours automatically.

**Figure 17: Detours Merging into Other Detours**

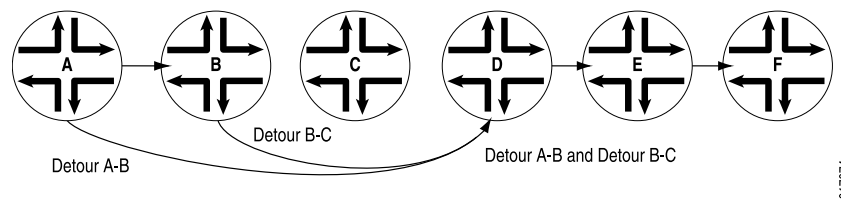

#### Related Documentation

- [fast-reroute on page 1438](#)
- [Configuring Fast Reroute on page 254](#)
- *MPLS Feature Support on QFX Series and EX4600 Switches*
- *Interprovider and Carrier-of-Carriers VPNs*

## Detour Merging Process

This section describes the process used by a router to determine which LSP to select when the router receives path messages from different interfaces with identical Session and Sender Template objects. When this occurs, the router needs to merge the path states.

The router employs the following process to determine when and how to merge path states:

- When all the path messages do not include a fast reroute or a detour object, or when the router is the egress of the LSP, no merging is required. The messages are processed according to RSVP traffic engineering.
- Otherwise, the router *must* record the path state in addition to the incoming interface. If the path messages do not share the same outgoing interface and next-hop router, the router considers them to be independent LSPs and does not merge them.
- For all the path messages that share the same outgoing interface and next-hop router, the router uses the following process to select the final LSP:
  - If only one LSP originates from this node, select it as the final LSP.
  - If only one LSP contains a fast reroute object, select it as the final LSP.
  - If there are several LSPs and some of them have a detour object, eliminate those containing a detour object from the final LSP selection process.
  - If several final LSP candidates remain (that is, there are still both detour and protected LSPs), select the LSPs with fast reroute objects.
  - If none of the LSPs have fast reroute objects, select the ones without detour objects. If all the LSPs have detour objects, select them all.
  - Of the remaining LSP candidates, eliminate from consideration those that traverse nodes that other LSPs avoid.
  - If several candidate LSPs still remain, select the one with the shortest explicit route object (ERO) path length. If more than one LSP has the same path length, select one randomly.
- Once the final LSP has been identified, the router must transmit only the path messages that correspond to this LSP. All other LSPs are considered merged at this node.

## Detour Computations

Computing and setting up detours is done independently at each node. On a node, if an LSP has fast reroute enabled and if a downstream link or node can be identified, the router performs a Constrained Shortest Path First (CSPF) computation using the information in the local traffic engineering database. For this reason, detours rely on your IGP supporting traffic engineering extensions. Without the traffic engineering database, detours cannot be established.

CSPF initially attempts to find a path that skips the next downstream node. Attempting to find this path provides protection against downstream failures in either nodes or links. If a node-skipping path is not available, CSPF attempts to find a path on an alternate link to the next downstream node. Attempting to find an alternate link provides protection against downstream failures in links only. Detour computations might not succeed the first time. If a computation fails, the router recomputes detours approximately once every refresh interval until the computation succeeds. The RSVP metric for each detour is set to a value in the range from 10,000 through 19,999.

## Fast Reroute Path Optimization

---

A fast reroute protection path is nondeterministic. The actual protection path of a particular node depends on the history of the LSP and the network topology when the fast reroute path was computed. The lack of deterministic behavior can lead to operational difficulties and poorly optimized paths after multiple link flaps in a network. Even in a small network, after a few link flaps fast reroute paths can traverse an arbitrarily large number of nodes and can remain in that state indefinitely. This is inefficient and makes the network less predictable.

Fast reroute optimization addresses this deficiency. It provides a global path optimization timer, allowing you to optimize all LSPs that have fast reroute enabled and a detour path up and running. The timer value can be varied depending on the expected RE processing load.

The fast reroute optimization algorithm is based on the IGP metric only. As long as the new path's IGP metric is lower than the old path's, the CSPF result is accepted, even if the new path might be more congested (higher bandwidth utilization) or traverses more hops.

In conformance with RFC 4090, *Fast Reroute Extensions to RSVP-TE for LSP Tunnels*, when a new path is computed and accepted for fast reroute optimization, the existing detour is destroyed first and then the new detour is established. To prevent traffic loss, detours actively protecting traffic are not optimized.

## On-Demand Packet Loss and Delay Measurement for UHP LSPs Overview

---

This topic describes methods for measuring packet loss, delay, and throughput for point-to-point ultimate hop popping (UHP) label-switched paths (LSPs) in MPLS networks to enable monitoring of network performance.

- [Importance of Measuring Packet Loss and Delay on page 50](#)
- [Defining Packet Loss, Delay, and Throughput on page 51](#)
- [Packet Loss and Delay Measurement Mechanisms on page 51](#)
- [Packet Loss and Delay Metrics on page 52](#)
- [Packet Loss and Delay Measurement Concepts on page 52](#)
- [Packet Loss and Delay Measurement Functionality on page 55](#)
- [Packet Loss and Delay Features on page 56](#)

### Importance of Measuring Packet Loss and Delay

The rise of bandwidth-consuming applications, such as IPTV and mobile video, coupled with the pressure to minimize the cost per bit and maximize the value per bit, is forcing carriers to transition their transport networks from circuit-based technologies to packet-based technologies. MPLS is a widely successful, connection-oriented packet transport technology that is ideally suited for packet-based transport networks.



With the emergence of new applications on data networks, it is becoming increasingly important for service providers to accurately predict the impact of new application rollouts. Understanding and modelling network performance in the network is especially relevant for deployment of new-world applications to ensure successful implementations. In packet networks, packet loss and delay are two of the most fundamental measures of performance. Their role is even more central when it comes to end-to-end measurements.

The traffic belonging to most of the end-to-end user applications is either loss sensitive (file transfer), delay sensitive (voice or video applications), or both (interactive computing applications). The service-level agreements (SLAs) of service providers depend on the ability to measure and monitor these network performance metrics, as the SLAs are directly or indirectly dependent on the loss and delay the customer traffic experiences in the service provider network.

To ensure compliance to the SLA, service providers need tools to measure and monitor the performance metrics for packet loss, one-way delay and two-way delay, and related metrics, such as delay variation and channel throughput. This measurement capability provides service providers with greater visibility into the performance characteristics of their networks, thereby facilitating planning, troubleshooting, and network performance evaluation.

## Defining Packet Loss, Delay, and Throughput

In packet networks, packet loss and delay are two of the most fundamental measures of performance.

- **Loss**—Packet loss is the failure of one or more transmitted packets to arrive at their destination. Packet loss refers to the packets of data that are dropped by the network to manage congestion.

Data applications are very tolerant to packet loss, as they are generally not time sensitive and can retransmit the packets that were dropped. However, in video conference environments and pure audio communications, such as VoIP, packet loss can create jitter.

- **Delay**—Packet delay (also called latency) is the amount of time it takes for a packet of data to get from one designated point to another, depending on the speed of the transmission medium, such as copper wire, optical fiber, or radio waves, and the delays in transmission by devices along the way, such as routers and modems.

A low latency indicates a high network efficiency.

- **Throughput**—Packet delay measures the amount of time between the start of an action and its completion, whereas throughput is the total number of such actions that occur in a given amount of time.

## Packet Loss and Delay Measurement Mechanisms

Packet delay and loss are two fundamental measures of network performance. Junos OS provides an on-demand mechanism to measure packet loss and delay over associated bidirectional MPLS ultimate hop popping (UHP) label-switched paths (LSPs).

The on-demand delay and packet loss measurement mechanism is initiated using the following CLI commands:

- **monitor mpls loss rsvp**—Performs an on-demand loss measurement for associated bidirectional UHP LSPs.
- **monitor mpls delay rsvp**—Performs an on-demand delay measurement for associated bidirectional UHP LSPs.
- **monitor mpls loss-delay rsvp**—Performs an on-demand combined loss and delay measurement for associated bidirectional UHP LSPs.

For initiating the delay and packet loss measuring mechanism, the desired parameters for measurement, such as the type of measurement and LSP name, need to be entered. On receiving the parameters, a summary of the performance monitoring data is displayed and the mechanism is terminated.

## Packet Loss and Delay Metrics

The following performance metrics are measured using the on-demand packet loss and delay mechanisms:

- Loss measurement (packet and octet)
- Throughput measurement (packet and octet)
- Two-way channel delay
- Round-trip delay
- Inter-packet delay variation (IPDV)

The **monitor mpls loss rsvp** command performs the loss and throughput measurement, and the **monitor mpls delay rsvp** command performs the two-way channel delay, round-trip delay, and IPDV measurements. The **monitor mpls loss-delay rsvp** command performs a combined loss and delay measurement and measures all of the above-mentioned performance metrics simultaneously.

## Packet Loss and Delay Measurement Concepts

The following concepts help to better understand the functionality of packet loss and delay:

- **Querier**—A querier is the ingress provider edge (PE) router, which originates the query message for loss or delay measurement.
- **Responder**—A responder is the egress PE router, which receives and responds to the query messages from a querier.
- **Associated bidirectional LSP**—An associated bidirectional LSP consists of two unidirectional LSPs that are tied together (or associated with each other) through configuration on both of the LSP end points.

The on-demand loss and delay measurement can be carried out only on associated bidirectional UHP LSPs.

- **Generic associated channel (G-Ach)**—The performance monitoring messages for the on-demand loss and delay measurement flow over the MPLS G-Ach. This type of channel supports only in-band responses, and does not provide support for out-of-band or no-response modes.
- **Measurement point (MP)**—MP is the location at which a condition is described for the measurement.

The MP for packet loss on the transmit side is between the switching fabric and the transmit interface. The counter value is stamped in the loss measurement message in the hardware before it is queued for transmission.

The MP for packet loss on the receive side is between the receive interface and the switching fabric. The MP is distributed on the receive side. Furthermore, when the transmit interface is an aggregate interface, the MP is distributed as well.

- **Query rate**—Query rate is the interval between two queries sent for loss and delay measurement.

Because the loss and delay measurement messages originate from the Routing Engine, a high query rate for multiple channels puts a heavy burden on the Routing Engine. The minimum query interval supported is 1 second.

The query rate should be high for 32-bit counters, because the counters might wrap quickly when data traffic rate is very high. The query rate can be low when 64-bit counters are in use at all the four measurement point locations involved in loss measurement. Junos OS supports only 64-bit counters.

- **Traffic class**—By default, loss measurement is supported for the whole channel. Junos OS also supports traffic class scoped packet loss measurement, where counters that maintain data traffic statistics per traffic class have to be created.

Per traffic class counters are not created by default. To configure traffic class scoped loss measurement, include the **traffic-class-statistics** statement at the **[edit protocols mpls statistics]** hierarchy level.

When **traffic-class-statistics** is configured, control packets flowing over the G-Ach are not counted in the transmit and receive counters.



**NOTE:** Enabling and disabling of traffic class statistics results in the resetting of all counters (aggregate counter and per-class counters) for the LSPs.

- **Loss measurement mode**—Junos OS supports the direct-mode of on-demand loss measurement, and does not provide support for the inferred-mode.

Direct loss measurement requires data traffic statistics to be maintained at the ingress and egress of two unidirectional LSPs of the associated bidirectional LSP. When an MX Series router is using only MPCs and MICs, counters to maintain data traffic statistics are created by default at the ingress of all types of LSPs and egress of UHP LSPs.

However, the direct-mode of loss measurement is not fully accurate due to the following reasons:

- Parallel forwarding nature of the hardware.
- Presence of equal cost multipath (ECMP) in the network, such as aggregated Ethernet interfaces, which can result in re-ordering of data packets relative to the loss measurement messages.
- Control packets that do not flow over G-Ach are not counted at the LSP ingress, but are counted at the LSP egress.
- Data traffic re-ordering relative to the loss measurement message when a Diffserv is implemented in the MPLS network and loss measurement scope is the complete channel and not traffic class scoped.

To overcome this limitation, perform traffic class scoped loss measurement when a Diffserv is implemented.



**NOTE:** Direct mode loss measurement is vulnerable to disruption when the ingress or egress interface associated with the LSP changes.

- **Loss measurement synchronization**—The synchronization conditions specified in section 2.9.8 of RFC 6374 do not hold true in the absolute sense. However, as the loss measurement counters are stamped in hardware, the errors introduced due to not satisfying the synchronization conditions are relatively small. These errors need to be quantified.

When the transmit or receive interface of the LSP is an aggregate interface, more errors are introduced as compared to when the interfaces are non-aggregate interfaces. In any case, the loss measurement counters are stamped in hardware, and the error needs to be quantified.

- **Delay measurement accuracy**—When the transmit and receive interfaces reside on different Packet Forwarding Engines, the clock must be synchronized on these Packet Forwarding Engines for two-way delay measurements. This condition holds true for the platform on which the on-demand delay measurement feature is implemented.

When there are aggregate interfaces or ECMP, the delay is measured for only one of the potential paths.

When a combined loss and delay message is used for delay calculation, the accuracy of delay is lower compared to when the delay measurement message is used in some cases, such as when the transmit or receive interface is an aggregate interface.


Delay measurement is always performed on a per-traffic-class basis, and the accuracy of the measurement needs to be quantified after testing.

- **Timestamp format**—Junos OS supports only the IEEE 1588 Precision Time Protocol (PTP) [IEEE1588] format for recording delay measurement messages. Network Time Format (NTP) is not supported.
- **Operations, administration, and maintenance (OAM)**—To indicate that all the OAM messages for MPLS LSPs flow over the MPLS G-Ach, and to enable the MPLS performance monitoring messages to be carried over the MPLS G-Ach, the **oam mpls-tp-mode** statement must be included at the **[edit protocols mpls label-switched-path lsp-name]** hierarchy level.

## Packet Loss and Delay Measurement Functionality

Figure 18 on page 55 illustrates the basic methods used for the bidirectional measurement of packet loss and delay. A bidirectional channel exists between the two routers, Router A and Router B. The temporal reference points – T1, T2, T3, and T4 – are associated with a measurement operation that takes place at Router A. The operation consists of Router A sending a query message to Router B, and Router B sending back a response. Each reference point indicates the point of time at which either the query or the response message is transmitted or received over the channel.

Figure 18: Basic Bidirectional Measurement

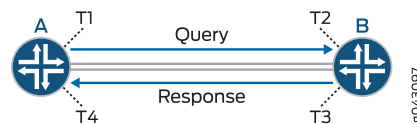

In Figure 18 on page 55, Router A can arrange to measure the packet loss over the channel in the forward and reverse directions by sending loss measurement query messages to Router B. Each of the forward and reverse messages contain the count of packets transmitted prior to time T1 over the channel to Router B (A\_TxP).

When the message reaches Router B, two values are appended to the message and the message is reflected back to Router A. The two values are the count of packets received prior to time T2 over the channel from Router A (B\_RxP) and the count of packets transmitted prior to time T3 over the channel to Router A (B\_TxP).

When the response reaches Router A, a fourth value is appended to the message – the count of packets received prior to time T4 over the channel from Router B (A\_RxP).

These four counter values – (A\_TxP), (B\_RxP), (B\_TxP), and (A\_RxP) – enable Router A to compute the desired loss statistics. Because the transmit count at Router A and the receive count at Router B (and vice versa) might not be synchronized at the time of the first message, and to limit the effects of counter wrap, the loss is computed in the form of a delta between the messages.

The transmit loss (A\_TxLoss[n-1,n]) and receive loss (A\_RxLoss[n-1,n]) within the measurement interval marked by the messages LM[n-1] and LM[n] are computed by Router A as follows:

$$A\_TxLoss[n-1,n] = (A\_TxP[n] - A\_TxP[n-1]) - (B\_RxP[n] - B\_RxP[n-1])$$

$$A\_RxLoss[n-1,n] = (B\_TxP[n] - B\_TxP[n-1]) - (A\_RxP[n] - A\_RxP[n-1])$$

The arithmetic is modulo the counter size.

To measure at Router A the delay over the channel to Router B, a delay measurement query message is sent from Router A to Router B containing a timestamp recording the instant at which it is transmitted. In [Figure 18 on page 55](#), the timestamp is recorded in T1.

When the message reaches Router B, a timestamp is added, recording the instant at which it is received (T2). The message can now be reflected from Router B to Router A, with Router B adding its transmit timestamp (T3) and Router A adding its receive timestamp (T4).

These four timestamps – T1, T2, T3, and T4 – enable Router A to compute the one-way delay in each direction, as well as the two-way delay for the channel. The one-way delay computations require that the clocks of Routers A and B be synchronized.

At this point, Router A can compute the two-way channel delay and round-trip delay associated with the channel as follows:

$$\text{Two-way channel delay} = (T4 - T1) - (T3 - T2)$$

$$\text{Round-trip delay} = T4 - T1$$

## Packet Loss and Delay Features

### Supported Features of Packet Loss and Delay

Junos OS supports the following features with on-demand loss and delay measurement:

- Performance monitoring for associated bidirectional MPLS point-to-point UHP LSPs only
- Loss measurement
- Throughput measurement
- Two-way delay measurement (channel delay and round-trip delay)
- Inter-packet delay variation (IPDV)
- Direct-mode loss measurement
- Aggregated Ethernet and aggregated SONET interfaces
- Multichassis support
- 64-bit compatible

### Unsupported Features of Packet Loss and Delay

Junos OS does not support the following on-demand loss and delay measurement functionality:

- Loss and delay measurement for pseudowires (section 2.9.1 of RFC 6374)
- Unidirectional measurement (section 2.6 of RFC 6374)
- Dyadic measurement (section 2.7 of RFC 6374)
- Loss and delay measurement in loopback mode (section 2.8 of RFC 6374)
- Loss and delay measurement to an intermediate node from an LSP endpoint (section 2.9.5 of RFC 6374)
- External post-processing (section 2.9.7 of RFC 6374)
- Inferred-mode loss measurement (section 2.9.8 of RFC 6374)
- Pro-active mode
- Logical systems
- SNMP

**Related  
Documentation**

- [Example: Configuring On-Demand Loss and Delay Measurement on page 467](#)
- [monitor mpls loss rsvp on page 1726](#)
- [monitor mpls delay rsvp on page 1722](#)
- [monitor mpls loss-delay rsvp on page 1731](#)





## CHAPTER 3

# Configuring MPLS Routers

- [Configuring the Ingress Router for MPLS-Signaled LSPs on page 60](#)
- [Example: Configuring an Explicit-Path LSP on page 64](#)
- [Example: Configuring a Constrained-Path LSP for Which Junos OS Makes All Forwarding Decisions on page 65](#)
- [Example: Configuring a Constrained-Path LSP for Which Junos OS Makes Most Forwarding Decisions and Considers Hop Constraints on page 66](#)
- [Example: Configuring a Constrained-Path LSP for Which Junos OS Makes Most Forwarding Decisions and the Secondary Path Is Explicit on page 66](#)
- [Abstract Hops For MPLS LSPs Overview on page 67](#)
- [Improving Traffic Engineering Database Accuracy with RSVP PathErr Messages on page 78](#)
- [Configuring MPLS-Signaled LSPs to Use GRE Tunnels on page 80](#)
- [Example: Tunneling IPv6 Traffic over MPLS IPv4 Networks on page 82](#)
- [SRLG Overview on page 90](#)
- [Example: Configuring SRLG on page 92](#)
- [Example: Excluding SRLG Links Completely for the Secondary LSP on page 101](#)
- [Example: Configuring SRLG with Link Protection on page 106](#)
- [Example: Configuring SRLG with Link Protection with the exclude-srlg Option on page 127](#)
- [Configuring the MPLS Transport Profile for OAM on page 147](#)
- [Configuring MPLS Inter-AS Link-Node Protection with Labeled BGP on page 160](#)
- [Configuring Egress Protection Service Mirroring for BGP Signaled Layer 2 Services on page 176](#)
- [Example: Configuring MPLS Egress Protection Service Mirroring for BGP Signaled Layer 2 Services on page 180](#)
- [Example: Configuring Layer 3 VPN Egress Protection with PLR as Protector on page 196](#)
- [Example: Configuring Next-Hop-Based MPLS-Over-UDP Dynamic Tunnels on page 222](#)
- [Anti-spoofing Protection for Next-Hop-Based Dynamic Tunnels on page 235](#)

## Configuring the Ingress Router for MPLS-Signaled LSPs

---

MPLS-signaled label-switched paths (LSPs) run from a specific ingress router to a specific egress router. For basic MPLS-signaled LSP function, you must configure the ingress router, but do not have to configure any other routers.

To configure signaled LSPs, perform the following tasks on the ingress router:

- [Creating Named Paths on page 60](#)
- [Configuring Alternate Backup Paths Using Fate Sharing on page 62](#)

### Creating Named Paths

To configure signaled LSPs, you must first create one or more named paths on the ingress router. For each path, you can specify some or all transit routers in the path, or you can leave it empty.

Each pathname can contain up to 32 characters and can include letters, digits, periods, and hyphens. The name must be unique within the ingress router. Once a named path is created, you can use the named path with the **primary** or **secondary** statement to configure LSPs at the **[edit protocols mpls label-switched-path *label-path-name*]** hierarchy level. You can specify the same named path on any number of LSPs.

To determine whether an LSP is associated with the primary or secondary path in an RSVP session, issue the **show rsvp session detail** command.

To create an empty path, create a named path by including the following form of the **path** statement. This form of the **path** statement is empty, which means that any path between the ingress and egress routers is accepted. In actuality, the path used tends to be the same path as is followed by destination-based, best-effort traffic.

```
path path-name;
```

You can include this statement at the following hierarchy levels:

- **[edit protocols mpls]**
- **[edit logical-systems *logical-system-name* protocols mpls]**

To create a path in which you specify some or all transit routers in the path, include the following form of the **path** statement, specifying one address for each transit router:

```
path path-name {  
  (address | hostname) <strict | loose>;  
}
```

You can include this statement at the following hierarchy levels:

- **[edit protocols mpls]**
- **[edit logical-systems *logical-system-name* protocols mpls]**

In this form of the **path** statement, you specify one or more transit router addresses. Specifying the ingress or egress routers is optional. You can specify the address or

hostname of each transit router, although you do not need to list each transit router if its type is **loose**. Specify the addresses in order, starting with the ingress router (optional) or the first transit router, and continuing sequentially along the path up to the egress router (optional) or the router immediately before the egress router. You need to specify only one address per router hop. If you specify more than one address for the same router, only the first address is used; the additional addresses are ignored and truncated.

For each router address, you specify the type, which can be one of the following:

- **strict**—(Default) The route taken from the previous router to this router is a direct path and cannot include any other routers. If **address** is an interface address, this router also ensures that the incoming interface is the one specified. Ensuring that the incoming interface is the one specified is important when there are parallel links between the previous router and this router. It also ensures that routing can be enforced on a per-link basis.

For strict addresses, you must ensure that the router immediately preceding the router you are configuring has a direct connection to that router. The address can be a loopback interface address, in which case the incoming interface is not checked.

- **loose**—The route taken from the previous router to this router need not be a direct path, can include other routers, and can be received on any interface. The address can be any interface address or the address of the loopback interface.

### Examples: Creating Named Paths

Configure a path, **to-hastings**, to specify the complete strict path from the ingress to the egress routers through 14.1.1.1, 13.1.1.1, 12.1.1.1, and 11.1.1.1, in that order. There cannot be any intermediate routers except the ones specified. However, there can be intermediate routers between 11.1.1.1 and the egress router because the egress router is not specifically listed in the **path** statement. To prevent intermediate routers before egress, configure the egress router as the last router, with a **strict** type.

```
[edit protocols mpls]
path to-hastings {
  14.1.1.1 strict;
  13.1.1.1 strict;
  12.1.1.1 strict;
  11.1.1.1 strict;
}
```

Create a path, **alt-hastings**, to allow any number of intermediate routers between routers 14.1.1.1 and 11.1.1.1. In addition, intermediate routers are permitted between 11.1.1.1 and the egress router.

```
[edit protocols mpls]
path alt-hastings {
  14.1.1.1 strict;
  11.1.1.1 loose;
}
```

## Configuring Alternate Backup Paths Using Fate Sharing

You can create a database of information that Constrained Shortest Path First (CSPF) uses to compute one or more backup paths in case the primary path becomes unstable. The database describes the relationships between elements of the network, such as routers and links. Because these network elements share the same fate, this relationship is called fate sharing.

You can configure backup paths that minimize the number of shared links and fiber paths with the primary paths as much as possible to ensure that, if a fiber is cut, the minimum amount of data is lost and a path still exists to the destination.

For a backup path to work optimally, it must not share links or physical fiber paths with the primary path. This ensures that a single point of failure will not affect the primary and backup paths at the same time.

The following sections describe how to configure fate sharing and how it affects CSPF, and provides a fate sharing configuration example:

- [Configuring Fate Sharing on page 62](#)
- [Implications for CSPF on page 63](#)
- [Implications for CSPF When Fate Sharing with Bypass LSPs on page 64](#)
- [Example: Configuring Fate Sharing on page 64](#)

---

### Configuring Fate Sharing

To configure fate sharing, include the **fate-sharing** statement:

```
fate-sharing {  
  group group-name {  
    cost value;  
    from address <to address>;  
  }  
}
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

Each fate-sharing group must have a name, which can be up to 32 characters long and can contain letters, digits, periods (.) and hyphens (-). You can define up to 512 groups.

Fate-sharing groups contain three types of objects:

- Point-to-point links—Identified by the IP addresses at each end of the link. Unnumbered point-to-point links are typically identified by borrowing IP addresses from other interfaces. Order is not important; **from 1.2.3.4 to 1.2.3.5** and **from 1.2.3.5 to 1.2.3.4** have the same meaning.
- Non-point-to-point links—Include links on a LAN interface (such as Gigabit Ethernet interfaces) or nonbroadcast multiaccess (NBMA) interfaces (such as Asynchronous Transfer Mode [ATM] or Frame Relay). You identify these links by their individual

interface address. For example, if the LAN interface **192.168.200.0/24** has four routers attached to it, each router link is individually identified:

```
from 192.168.200.1; # LAN interface of router 1
from 192.168.200.2; # LAN interface of router 2
from 192.168.200.3; # LAN interface of router 3
from 192.168.200.4; # LAN interface of router 4
```

You can list the addresses in any order.

- A router node—Identified by its configured router ID.

All objects in a group share certain similarities. For example, you can define a group for all fibers that share the same fiber conduit, all optical channels that share the same fiber, all links that connect to the same LAN switch, all equipment that shares the same power source, and so on. All objects are treated as /32 host addresses.

For a group to be meaningful, it should contain at least two objects. You can configure groups with zero or one object; these groups are ignored during processing.

An object can be in any number of groups, and a group can contain any number of objects. Each group has a configurable cost attributed to it, which represents the level of impact this group has on CSPF computations. The higher the cost, the less likely a backup path will share with the primary path any objects in the group. The cost is directly comparable to traffic engineering metrics. By default, the cost is 1. Changing the fate-sharing database does not affect established LSPs until the next reoptimization of CSPF. The fate-sharing database does influence fast-reroute computations.

### Implications for CSPF

When CSPF computes the primary paths of an LSP (or secondary paths when the primary path is not active), it ignores the fate-sharing information. You always want to find the best possible path (least IGP cost) for the primary path.

When CSPF computes a secondary path while the primary path (of the same LSP) is active, the following occurs:

1. CSPF identifies all fate-sharing groups that are associated with the primary path. CSPF does this by identifying all links and nodes that the primary path traverses and compiling group lists that contain at least one of the links or nodes. CSPF ignores the ingress and egress nodes in the search.
2. CSPF checks each link in the traffic engineering database against the compiled group list. If the link is a member of a group, the cost of the link is increased by the cost of the group. If a link is a member of multiple groups, all group costs are added together.
3. CSPF performs the check for every node in the traffic engineering database, except the ingress and egress node. Again, a node can belong to multiple groups, so costs are additive.
4. The router performs regular CSPF computation with the adjusted topology.

### Implications for CSPF When Fate Sharing with Bypass LSPs

---

When fate sharing is enabled with link protection or link-node protection, CSPF operates as follows when calculating the bypass LSP path:

- CSPF identifies the fate-sharing groups that are associated with the primary LSP path. CSPF does this by identifying the immediate downstream link and immediate downstream nodes that the bypass is trying to protect. CSPF compiles group lists that contain the immediate downstream link and immediate downstream nodes.
- CSPF checks each link (from ingress to the immediate downstream node) in the traffic engineering database against the compiled group list. If the link is a member of a group, the cost of the link is increased by the cost of the group.
- CSPF identifies the downstream link that is not in the fate-shared path.

This calculation prevents bypasses from using the same physical link as the primary LSP path when viable alternatives are available.

### Example: Configuring Fate Sharing

---

Configure fate-sharing groups **east** and **west**. Because **west** has no objects, it is ignored during processing.

```
[edit routing-options]
fate-sharing {
  group east {
    cost 20; # Optional, default value is 1
    from 1.2.3.4 to 1.2.3.5; # A point-to-point link
    from 192.168.200.1; # LAN interface
    from 192.168.200.2; # LAN interface
    from 192.168.200.3; # LAN interface
    from 192.168.200.4; # LAN interface
    from 10.168.1.220; # Router ID of a router node
    from 10.168.1.221; # Router ID of a router node
  }
  group west {
    .....
  }
}
```

### Example: Configuring an Explicit-Path LSP

---

On the ingress router, create an explicit-path LSP, and specify the transit routers between the ingress and egress routers. In this configuration, no constrained-path computation is performed. For the primary path, all intermediate hops are strictly specified so that its route cannot change. The secondary path must travel through router 14.1.1.1 first, then take whatever route is available to reach the destination. The remaining route taken by the secondary path is typically the shortest path computed by the IGP.

```
[edit]
interfaces {
  so-0/0/0 {
    unit 0 {
```

```

        family mpls;
    }
}
protocols {
    rsvp {
        interface so-0/0/0;
    }
    mpls {
        path to-hastings {
            14.1.1.1 strict;
            13.1.1.1 strict;
            12.1.1.1 strict;
            11.1.1.1 strict;
        }
        path alt-hastings {
            14.1.1.1 strict;
            11.1.1.1 loose; # Any IGP route is acceptable
        }
        label-switched-path hastings {
            to 11.1.1.1;
            hop-limit 32;
            bandwidth 10m; # Reserve 10 Mbps
            no-cspf; # do not perform constrained-path computation
            primary to-hastings;
            secondary alt-hastings;
        }
    }
    interface so-0/0/0;
}
}

```

### Example: Configuring a Constrained-Path LSP for Which Junos OS Makes All Forwarding Decisions

On the ingress router, create a constrained-path LSP in which the Junos OS makes all the forwarding decisions. When the LSP is successfully set up, a route toward 10.1.1.1/32 is installed in the inet.3 table so that all BGP routes with matching BGP next-hop addresses can be forwarded through the LSP.

```

[edit]
interfaces {
    so-0/0/0 {
        unit 0 {
            family mpls;
        }
    }
}
protocols {
    rsvp {
        interface so-0/0/0;
    }
    mpls {
        label-switched-path to-hastings {
            to 10.1.1.1;
        }
    }
}

```

```
        interface so-0/0/0;  
    }  
}
```

---

### Example: Configuring a Constrained-Path LSP for Which Junos OS Makes Most Forwarding Decisions and Considers Hop Constraints

---

On the ingress router, create a constrained-path LSP in which the Junos OS makes most of the forwarding decisions, taking into account the hop constraints listed in the **path** statements. The LSP is adaptive so that no bandwidth double-counting occurs on links shared by primary and secondary paths. To acquire the necessary link bandwidth, this LSP is allowed to preempt lower priority sessions. Finally, this path always keeps the secondary path in hot-standby state for quick failover.

```
[edit protocols]  
mpls {  
  path to-hastings {  
    14.1.1.1 loose;  
  }  
  path alt-hastings {  
    12.1.1.1 loose;  
    11.1.1.1 strict;  
  }  
  label-switched-path hastings {  
    to 11.1.1.1;  
    bandwidth 10m; # Reserve 10 Mbps  
    priority 0 0; # Preemptive, but not preemptable  
    adaptive; # Set adaptivity  
    primary to-hastings;  
    secondary alt-hastings {  
      standby;  
      bandwidth 1m; # Reserve only 1 Mbps for the secondary path  
    }  
  }  
  interface all;  
}
```

---

### Example: Configuring a Constrained-Path LSP for Which Junos OS Makes Most Forwarding Decisions and the Secondary Path Is Explicit

---

On the ingress router, create a constrained-path LSP in which the Junos OS makes most of the forwarding decisions for the primary path, subject to constraints of the path **to-hastings**, and in which the secondary path is an explicit path. The primary path must transit green or yellow links and must stay away from red links. The primary path is periodically recomputed and reoptimized. Finally, this path always keeps the secondary path in hot-standby state for quick failover.

When the LSP is up—either because the primary or secondary path is up, or because both paths are up—the prefix 16.0.0.0/8 is installed in the inet.3 table so that all BGP routes whose BGP next hop falls within that range can use the LSP. Also, the prefix 17/8 is installed in the inet.0 table so that BGP can resolve only its next hop through that prefix. The route also can be reached with the **traceroute** or **ping** command. These two routes are in addition to the 11.1.1.1/32 route.



```

[edit protocols]
mpls {
  admin-groups {
    green 1;
    yellow 2;
    red 3;
  }
  path to-hastings {
    14.1.1.1 loose;
  }
  path alt-hastings {
    14.1.1.1 strict;
    13.1.1.1 strict;
    12.1.1.1 strict;
    11.1.1.1 strict;
  }
  label-switched-path hastings {
    to 11.1.1.1;
    bandwidth 100m;
    install 16.0.0.0/8; # in inet.3; cannot use to traceroute or ping
    install 17.0.0.0/8 active; # installed in inet.0; can use to traceroute or ping
    primary to-hastings {
      admin-group { # further constraints for path computation
        include-all [ green yellow ];
        exclude red;
      }
      optimize-timer 3600; # reoptimize every hour
    }
    secondary alt-hastings {
      standby;
      no-cspf; # do not perform constrained-path computation
    }
  }
}
interface all;

```

## Abstract Hops For MPLS LSPs Overview

An abstract hop is a logical combination of the existing traffic engineering constraints, such as admin groups, extended admin groups, and Shared Risk Link Group (SRLG), along with the ordering property of real hops, resulting in a user-defined group or cluster of routers that can be used as constraint for setting up an MPLS LSP. Abstract hops overcome the limitations of existing path constraint specifications and provide several benefits to the traffic engineering capabilities of MPLS.

- [Understanding Abstract Hops on page 67](#)
- [Benefits of Using Abstract Hops on page 68](#)
- [Junos Implementation of Abstract Hops on page 70](#)

## Understanding Abstract Hops

The path constraint for setting up of an MPLS label-switched path (LSP) can either be specified as individual routers in the form of real hops, or as a set of routers by way of administrative group or color specification. When a path constraint uses real hops (strict

or loose), the LSP is set up along a specified sequence of routers (for example, R1, R2, ...Rn). When a path constraint uses administrative group or color specification, a group of routers that meet the specified criteria is used to set up the LSP (for example, Ga, Gb, ...Gn), and unlike real hop constraint, there is no sequence among the different groups of routers used in the constraint.

The drawback of real hop constraint is that in a failure scenario, if any of the router hops goes down or the bandwidth utilization of the attached interface gets saturated, the path goes down (or relies on local/end to end protection). Setting up an LSP with the real hop constraint would not be possible, and although other alternative routers may be available to recover or set up the LSP, the LSP remains down until the operator configures another router hop sequence as the path constraint to bring the path up again or to disengage the protection path.

The administrative group or color specification constraints overcome this limitation of real hop constraint to a certain extent. Here, when one of the routers in the group goes down or has its link capacity saturated, setting up of the LSP is not affected. This is because the next hop router to be used in the path constraint is not picked beforehand, and the LSP is set up along other routers that have the same administrative group or color. However, the drawback with router group constraint is that a sequence cannot be specified among the hop constraints.

Abstract hops overcome these drawbacks, by logically combining the existing traffic engineering constraints, such as admin groups, extended admin groups, and Shared Risk Link Group (SRLG) along with the ordering property of real hops, resulting in a capability to define sequenced set of routers as path constraint. As a result, when a sequence of abstract hops is used in a path constraint, ordering is achieved among the groups of routers that meet a logical combination of link or node attributes called constituent attributes.

A path can use a combination of real and abstract hops as constraints. When using abstract hops, instead of specifying a sequence of routers (R1, R2, ...Rn) as with real hops, a sequence set of router groups or abstract hops (G1, G2...Gn) is specified as path constraint. Each specified router group, Gi for example, consists of some user defined set of routers - R1, R2, Rj...Rn. When one of the routers in the group goes down, say Router Rj in group Gi, another router, say Router Rk, from the same group Gi is picked up by path computation to replace the router that went down (that is, Router Rj). This is because the path constraint is sequenced and has to go through a sequence of abstract hops, instead of a sequence of individual routers.

## Benefits of Using Abstract Hops

Abstract hops are user defined router groups. Similar to real hop constraints that use a sequence of individual routers, a sequence of abstract hops can be used for setting up a label-switched path (LSP). This provides resiliency to sequenced path constraints. The other benefits of using abstract hops include:

- [Specifying a Sequence of Constraint Combinations on page 69](#)
- [Avoiding New Network Configuration on Transit Nodes on page 69](#)
- [Combining Centralized and Distributed Path Computation Paradigms on page 69](#)

### Specifying a Sequence of Constraint Combinations

---

Currently, it is possible to specify a path that can go through links that satisfy multiple attributes. Such a path constraint is called a compound constraint combination; for example, a constraint (Ci) that includes low latency links of green color and also excludes SRLG north.

However, there is no support for specifying a path with a sequence of compound constraint combinations. For example, a sequenced constraint (C1, C2, Ci, ...Cn) that includes low latency green links, no latency blue links, and then low latency red links.

The need for such a sequenced compound constraint combination arises when there is a requirement to establish paths through a sequence of geographical regions with a different link affinity (attributes) requirement in each region. Abstract hops meet this requirement by allowing computing nodes to map each constraint combination (Ci, for example) with the user-defined group of routers, that is the abstract hops.

### Avoiding New Network Configuration on Transit Nodes

---

With current path constraint specification capabilities, it is possible to include or exclude links of certain attributes along an entire path; for example, excluding SRLG west from a path. However, there is no support to either conditionally exclude or include attributes, or to apply different exclude or include attributes in different parts of the path; for example, excluding SRLG west only when traversing red links.

As a workaround, a new admin group can be created to identify all such red links that do not have SRLG west, and configure all the relevant links appropriately with that admin group. The drawback of this approach is that configuration changes is required throughout the network to reflect the new admin-group membership.

Instead, by using abstract hops, the configuration changes can be contained on the ingress router only. At the ingress router, the constraint combination is mapped to the abstract hop, thereby meeting the above-mentioned requirement without making any new configuration on the transit nodes.

### Combining Centralized and Distributed Path Computation Paradigms

---

Traffic engineering of MPLS paths can be achieved by distributed computing or with a centralized controller for computing paths. A combination of both the computation types is called the hybrid computation paradigm. The key feature of the hybrid computation approach is the ability of the centralized controller [referred to as a Path Computation Element (PCE)] to loosely specify the path computation directives, per path, to the ingress router [referred to as a Path Computation Client (PCC)], and the ability of the ingress router to use it as input for path computation.

A sequence of abstract hops serves the purpose of acting as the guideline from the centralized controller. Abstract hops provide the flexibility to the controller to weave into the path constraint and attributes. This also enables the controller to build in the element of sequence in the constraint. The controller does not have to specify the very hops the path needs to take, leaving room for the ingress router to act within the limits of the guideline or directive.

[Table 3 on page 70](#) lists the key features of the hybrid computation paradigm and provides a comparison of this approach with the current path computation methods.

**Table 3: Hybrid Computation for Abstract Hops**

Features	Distributed Constrained Shortest Path First	Centralized Constrained Shortest Path First	Hybrid Constrained Shortest Path First
React to frequent changes in a large network	Yes		Yes
Sophisticated path computation with global view		Yes	Yes
Incorporation of business logic in path computation		Yes	Yes
Resilience (no single point of failure)	Yes		Yes
Predictability		Yes	Yes
React to network load in (close to) real-time	Yes		Yes
Field tested (versus early adoption)	Yes		Yes

## Junos Implementation of Abstract Hops

The order-aware abstract hops is introduced in Junos OS Release 17.1. The following sections describe the implementation of abstract hops in Junos OS:

- [Defining Abstract Hops on page 70](#)
- [Using Abstract Hops in Path Constraint on page 74](#)
- [Path Computation and Backtracking on page 77](#)
- [Sample Backtracking on page 77](#)

### Defining Abstract Hops

An abstract hop is a group of routers that users can define. The user can control which routers to include in the group by defining a logical combination of heterogeneous link attributes or constraints called constituent attributes. The routers whose emanating links satisfy the defined constituent attributes make it into the group of routers representing the abstract hop.

The mapping of constituent attributes with the abstract hop is local to the computing node or the ingress of the LSP being setup. As a result, abstract hops do not have associated interior gateway protocol updates or signaling protocol extensions, and implementing abstract hops in a network does not require new configuration on the transit nodes.

The logical combination of constituent attributes is enabled with the **constituent-list** configuration statement using the **constituent-any-list** and **constituent-all-list** properties. The constituent attributes in the constituent list (any or all) can be of the same or of different type.

- **constituent-any-list**—List of constituent attributes where any one of the defined constituent attributes should be met to satisfy the overall constituent list criteria.
- **constituent-all-list**—List of constituent attributes where all of the defined constituent attributes have to be met to satisfy the overall constituent list criteria.

Abstract hops definition allows one level of nesting, where the abstract hop can be defined as a list of one or more of such constituent lists. To do this, the abstract hop itself is used as a **OR-list** or **AND-list**, where each element is a **constituent-all-list** or a **constituent-any-list**. For example, ( ( A AND B ) OR ( C AND D ) ) and ( ( A OR B ) AND ( C AND D ) ).

- **OR-list**—At least one of the constituent-all-list or constituent-any-list in the abstract hop definition should be satisfied by a link or node to be part of the abstract hop.
- **AND-list**—All of the constituent-all-list or constituent-any-list in the abstract hop definition should be satisfied by the link or node to be part of the abstract hop.

#### **Sample Abstract Hop Definition**

Taking as an example, the definition of abstract hops hopA and hopB is as follows:

Abstract hops hopA and hopB should include all routers whose emanating links satisfy the logical combination of the following link attributes, respectively:

- **hopA**—((Admin group red && Srlg south) || (Admin group green || Srlg north)), where:
  - *Admin group red* and *Srlg south* belong to include-all constituent list (listA1, in this example).
  - *Admin group green* and *Srlg north* belong to include-any constituent list (listA2, in this example).
  - || is the OR operator.
- **hopB**—((Extended admin group g1 || Srlg south) && ! (Admin group blue && srlg-west)), where:
  - *Extended admin group g1* and *Srlg south* belong to the include-any constituent list (listB1, in this example).
  - *Admin group blue* and *srlg-west* belong to the exclude-all constituent list (listB2, in this example).
  - && ! is the AND operator.

The configuration for abstract hops hopA and hopB is as follows:

- **hopA configuration**  
[edit protocols mpls]

```
Constituent-list listA1 {
  Admin-group red;
  Srlg south;
}
Constituent-list listA2 {
  Admin-group green;
  Srlg north;
}
Abstract-hop hopA{
  Operator OR;
  Constituent-list listA1 include-all-list;
  Constituent-list listA2 include-any-list;
}
```

- **hopB configuration**

```
[edit protocols mpls]
Constituent-list listB1 {
  Extended Admin-group g1;
  Srlg south;
}
Constituent-list listB2 {
  Admin-group blue;
  Srlg west;
}
Abstract-hop hopB{
  Operator AND;
  Constituent-list listB1 include-any-list;
  Constituent-list listB2 exclude-all-list;
}
```

### Verifying abstract hop configuration

The **show mpls abstract hop membership <abstract hop name>** command is used to check members of an abstract hop. The command output provides the abstract hop to traffic engineering database node mapping.

```
user@host> show mpls abstract-hop-membership
```

```
Abstract hop: hop1
  Credibility: 0
Address: 128.102.165.105
Address: 128.102.166.237
Address: 128.102.168.0
Address: 128.102.173.123
```

```
Abstract hop: hop2
  Credibility: 0
Address: 128.102.160.211
Address: 128.102.165.5
Address: 128.102.166.237
Address: 128.102.172.157
Address: 128.102.172.196
```

```
Abstract hop: hop3
  Credibility: 0
Address: 128.102.160.211
Address: 128.102.165.5
Address: 128.102.165.105
Address: 128.102.168.0
```

Here, **Credibility** is the credibility associated with interior gateway protocol in use.

The **show ted database extensive local** command output provides the view captured in traffic engineering database. A keyword **local** is added to indicate that the output would include any local instrumentation. The command output shows abstract hop as attribute of links that satisfy the associated logical combination of link attributes.


```

user@host> show ted database extensive local
TED database: 0 ISIS nodes 8 INET nodes
NodeID: 128.102.173.123
Type: Rtr, Age: 3098 secs, LinkIn: 4, LinkOut: 3
Protocol: OSPF(0.0.0.0)
  To: 128.102.168.0, Local: 1.3.0.1, Remote: 1.3.0.2
    Local interface index: 332, Remote interface index: 0
    Color: 0x2 green
    Abstract hops: hopA
    Metric: 1
    Static BW: 1000Mbps
    Reservable BW: 1000Mbps
    Available BW [priority] bps:
      [0] 970Mbps      [1] 970Mbps      [2] 970Mbps      [3] 970Mbps
      [4] 970Mbps      [5] 970Mbps      [6] 970Mbps      [7] 970Mbps
    Interface Switching Capability Descriptor(1):
      Switching type: Packet
      Encoding type: Packet
      Maximum LSP BW [priority] bps:
        [0] 970Mbps      [1] 970Mbps      [2] 970Mbps      [3] 970Mbps
        [4] 970Mbps      [5] 970Mbps      [6] 970Mbps      [7] 970Mbps
  To: 128.102.165.105, Local: 1.1.0.1, Remote: 1.1.0.2
    Local interface index: 330, Remote interface index: 0
    Srlg: south
    Abstract hops: hopB
    Metric: 1
    Static BW: 1000Mbps
    Reservable BW: 1000Mbps
    Available BW [priority] bps:
      [0] 960Mbps      [1] 960Mbps      [2] 960Mbps      [3] 960Mbps
      [4] 960Mbps      [5] 960Mbps      [6] 960Mbps      [7] 960Mbps
    Interface Switching Capability Descriptor(1):
      Switching type: Packet
      Encoding type: Packet
      Maximum LSP BW [priority] bps:
        [0] 960Mbps      [1] 960Mbps      [2] 960Mbps      [3] 960Mbps
        [4] 960Mbps      [5] 960Mbps      [6] 960Mbps      [7] 960Mbps

```

Abstract hop hopA is for low latency AND SRLG west, and abstract hop hopB is for excluding SRLG west. [Figure 19 on page 74](#) displays the ingress view of these abstract hops.

Figure 19: Ingress View of Abstract Hops

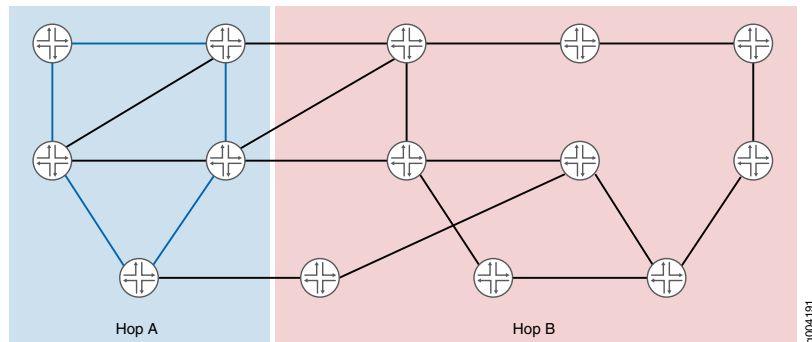

### Using Abstract Hops in Path Constraint

The user associates a unique identifier with each abstract hop definition. This identifier is used for referring to the abstract hop in the path constraint. A sequence of abstract hops can be specified as path constraint, similar to the usage of real IP hops. The path constraint could also be a sequence of abstract hops interleaved by real IP hops.

Using abstract hops or real hops in a path constraint requires more than one Constrained Shortest Path First pass to the destination, typically one pass per hop. When real hops are provided as path constraint, the constraint computation involves as many passes as the number of hops in the path constraint, where each pass ends on reaching a hop in the constraint list. The starting point for each pass is the destination of the previous pass, with the first pass using the ingress router as the start.

On the other hand, when path constraint uses strict or loose abstract hops, constraint computation comprises of passes where each pass is to process the subsequent abstract hop in the constraint list. In such a case, more than one node qualifies to be the destination for the pass. The set of nodes is called the viable router set for the pass.

An abstract hop traverses member nodes by using the following:

- Links that satisfy the logical combination of defined constituent attributes
- Any kind of links

The means of abstract hops traversing the member nodes is controlled by the use of the abstract hop qualifiers—strict, loose, and loose-link—in defining the path constraint. Taking for example, abstract hop A is processed differently with different qualifiers.

- **Strict**—After the last processed hop in the constraint list, the path traverses only links or nodes having membership of abstract hop A, before reaching a node with A's membership that is a feasible starting point for processing the next abstract hop.
- **Loose**—After the last processed hop in the constraint list, the path can traverse any real nodes that do not have abstract hop membership of A, before reaching a node with abstract hop membership A, that is a feasible starting point for processing the next abstract hop.



- **Loose-link**—After the last processed hop in the constraint list, the path can traverse any real nodes that do not have abstract hop membership of A, before reaching a node with abstract hop membership A, that is a feasible starting point for processing the next abstract hop. But the path should have traversed at least one link of abstract hop A membership in the course of the same.

In other words the abstract hop of type loose-link is said to be processed only if any of the viable routers is reached in constraint through a link of associated abstract hop membership.

### Sample Abstract Hops Specification

Table 4 on page 75 provides sample use case for using abstract hops in path constraints.

**Table 4: Using Abstract Hops in Path Constraints**


Purpose of Path Constraint	Abstract Hop Qualifier	Configuration	Viable Router Set	Affinity
Traverse nodes that are members of hopA taking only links that satisfy hopA.	Strict	<pre>[edit protocols mpls] Path path_hopA_s {   hopA abstract strict; }</pre>	All members of abstract hopA. That is, A1, A2...An.	hopA (Pick only links that satisfy abstract hopA).
Traverse nodes that are members of hopA but not necessarily links that satisfy hopA	Loose	<pre>[edit protocols mpls] Path path_hopA_l {   hopA abstract loose; }</pre>	All members of abstract hopA. That is, A1, A2...An.	None (Any kind of links).
Traverse nodes that are members of hopA by taking at least one link that satisfies hopA.	Loose-link  <b>NOTE:</b> The loose-link qualifier is viewed as loose followed by strict for the same abstract hop. In other words, hopA loose-link is the same as hopA loose and hopA strict.	<pre>[edit protocols mpls] Path path_hopA_ll {   hopA abstract loose-link; }</pre>	In this case, there are two constraint passes associated with hopA in the path constraint. The viable router set for both passes is:  All members of abstract hopA. That is, A1, A2...An.  <b>NOTE:</b> During path computation, a router is traversed only once.	In this case, there are two constraint passes associated with hopA in the path constraint. The affinity for the two passes is:  <ul style="list-style-type: none"> <li>• Pass 1—None (Any kind of links).</li> <li>• Pass 2—hopA (Pick only links that satisfy abstract hopA).</li> </ul>

Table 4: Using Abstract Hops in Path Constraints (*continued*)

Purpose of Path Constraint	Abstract Hop Qualifier	Configuration	Viable Router Set	Affinity
Traverse nodes that are members of hopA, taking only links that satisfy hopA, followed by nodes that are members of hopB taking only links that satisfy hopB.	Strict	<pre>[edit protocols mpls] Path path_hopA_hopB_s {   hopA abstract strict;   hopB abstract strict; }</pre>	<ul style="list-style-type: none"> <li>hopA—Intersection of member set of hopA and hopB.</li> <li><b>NOTE:</b> When an abstract hop is followed by a strict abstract hop, the intersection of the two member sets is considered as viable router set.</li> <li>hopB—All members of abstract hopB. That is, B1, B2...Bn.</li> </ul>	<ul style="list-style-type: none"> <li>hopA—hopA (Pick only links that satisfy abstract hopA).</li> <li>hopB—hopB (Pick only links that satisfy abstract hopB).</li> </ul>
Traverse nodes that are members of hopA taking only links that satisfy hopA, followed by nodes that are members of hopB taking any kind of links.	Strict and loose	<pre>[edit protocols mpls] Path path_hopA_s_hopB_l {   hopA abstract strict;   hopB abstract loose; }</pre>	<ul style="list-style-type: none"> <li>hopA—All members of abstract hopA. That is, A1, A2...An.</li> <li>hopB—All members of abstract hopB. That is, B1, B2...Bn.</li> </ul>	<ul style="list-style-type: none"> <li>hopA—hopA (Pick only links that satisfy abstract hopA).</li> <li>hopB—None (Pick any links).</li> </ul>
Traverse nodes that are members of hopA by taking any kinds of links, followed by nodes that are members of hopB taking any kind of links.	Loose	<pre>[edit protocols mpls] Path path_hopA_l_hopB_l {   hopA abstract loose;   hopB abstract loose; }</pre>	<ul style="list-style-type: none"> <li>hopA—All members of abstract hopA. That is, A1, A2...An.</li> <li>hopB—All members of abstract hopB. That is, B1, B2...Bn.</li> </ul>	None (pick any links).
Traverse nodes that are members of hopA by taking any kinds of links, followed by nodes that are members of hopB taking only links that satisfy hopB.	Loose and strict	<pre>[edit protocols mpls] Path path_hopA_l_hopB_s {   hopA abstract loose;   hopB abstract strict; }</pre>	<ul style="list-style-type: none"> <li>hopA—Intersection of the members of hopA and hopB. When an abstract hop is followed by a strict abstract hop, the intersection of the two member sets is considered as viable router set.</li> <li>hopB—All members of abstract hopB. That is, B1, B2...Bn.</li> </ul>	<ul style="list-style-type: none"> <li>hopA—None (pick any links).</li> <li>hopB—hopB (Pick only links that satisfy abstract hopB).</li> </ul>

Figure 20 on page 77 displays path constraints for abstract hops hopA, hopB, and hopC with loose, strict, and loose abstract hop qualifiers, respectively.

Figure 20: Sample Path Constraints for Abstract Hops

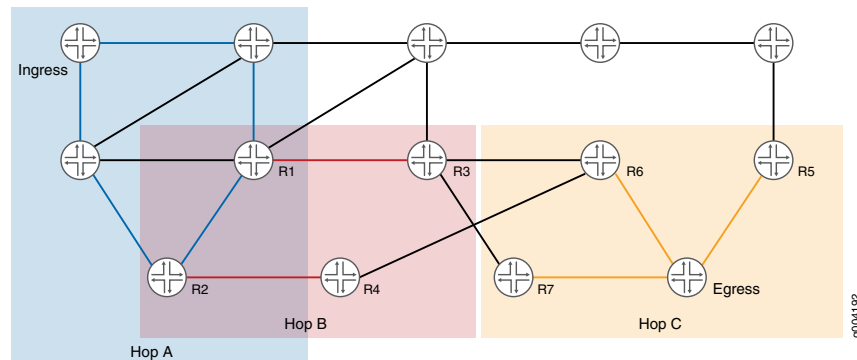

The Constrained Shortest Path First passes for the abstract hops are as follows:

- Pass 1 associated with hopA
  - Viable routers—Routers R1 and R2 (Intersection of hopA and hopB, as hopB is a strict abstract hop).
  - Affinity—None (as hopA is loose).
- Pass 2 associated with hopB
  - Viable routers—Routers R1, R2, R3, and R4
  - Affinity—Pick only hopB compliant links (as hopB is a strict abstract hop).
- Pass 3 associated with hopC
  - Viable routers—Routers R5, R6, R7, and the egress router.
  - Affinity—None (as hopC is a loose abstract hop).

### Path Computation and Backtracking

In each Constrained Shortest Path First pass, when the nearest router from viable router set is reached using links satisfying affinity figured for the pass, the abstract hop associated with the pass is said to be processed. The viable router thus reached serves as the start for the next constraint pass. If any constraint pass fails, and it is not the one with the ingress router as start, then the pass is backtracked to the previous pass and the process is repeated.

### Sample Backtracking

When a Constrained Shortest Path First pass  $p$  (other than the first one) fails, the exit router of the previous pass ( $p-1$ ) that served as start for the current pass  $p$  is disqualified in the viable router set of the previous pass ( $p-1$ ). Then the previous pass ( $p-1$ ) is re-executed to find the next best exit router or destination for the pass  $p-1$  from the viable router set.

The router thus determined serves as the new start router for the pass  $p$ . This procedure is repeated as long as there are failures and there are viable routers that are not explored.

The **show mpls lsp abstract-hop-computation name *lsp-name*** command provides the various constraint passes involved per LSP and the qualifying exit routers for each pass. The command output also gives the affinity per pass, and shows the current start router chosen for the pass. For each viable router, the state of backtracking is displayed, where it can either be valid or disqualified.

```
user@host> show mpls lsp abstract-computation
Path computation using abstract hops for LSP: lsp1
Path type: Primary, Path name: path1

Credibility: 0, Total no of CSPF passes: 2
CSPF pass no: 0 Start address of the pass: 128.102.173.123
Affinity: hop1
CSPF pass no: 1 Start address of the pass: 0.0.0.0
Destination: 128.102.172.157, , State: VALID

Path type: Standby, Path name: path2

Credibility: 0, Total no of CSPF passes: 3
CSPF pass no: 0 Start address of the pass: 128.102.173.123
Destination: 128.102.166.237, , State: VALID
Affinity: hop1
CSPF pass no: 1 Start address of the pass: 128.102.166.237
Destination: 128.102.160.211, , State: VALID
Destination: 128.102.165.5, , State: VALID
Destination: 128.102.166.237, , State: VALID
Destination: 128.102.172.157, , State: VALID
Destination: 128.102.172.196, , State: VALID
Affinity: hop2
CSPF pass no: 2 Start address of the pass: 128.102.172.196
Destination: 128.102.172.157, , State: VALID
```

The output field **Credibility** is the credibility associated with the interior gateway protocol in use.

Related •  
Documentation

---

## Improving Traffic Engineering Database Accuracy with RSVP PathErr Messages

---

An essential element of RSVP-based traffic engineering is the traffic engineering database. The traffic engineering database contains a complete list of all network nodes and links participating in traffic engineering, and a set of attributes each of those links can hold. (For more information about the traffic engineering database, see [“Constrained-Path LSP Computation” on page 30](#).) One of the most important link attributes is bandwidth.

Bandwidth availability on links changes quickly as RSVP LSPs are established and terminated. It is likely that the traffic engineering database will develop inconsistencies relative to the real network. These inconsistencies cannot be fixed by increasing the rate of IGP updates.

Link availability can share the same inconsistency problem. A link that becomes unavailable can break all existing RSVP LSPs. However, its unavailability might not readily be known by the network.

When you configure the **rsvp-error-hold-time** statement, a source node (ingress of an RSVP LSP) learns from the failures of its LSP by monitoring PathErr messages transmitted from downstream nodes. Information from the PathErr messages is incorporated into subsequent LSP computations, which can improve the accuracy and speed of LSP setup. Some PathErr messages are also used to update traffic engineering database bandwidth information, reducing inconsistencies between the traffic engineering database and the network.

You can control the frequency of IGP updates by using the **update-threshold** statement. See [“Configuring the RSVP Update Threshold on an Interface” on page 506](#).

This section discusses the following topics:

- [PathErr Messages on page 79](#)
- [Identifying the Problem Link on page 80](#)
- [Configuring the Router to Improve Traffic Engineering Database Accuracy on page 80](#)

## PathErr Messages

PathErr messages report a wide variety of problems by means of different code and subcode numbers. You can find a complete list of these PathErr messages in RFC 2205, *Resource Reservation Protocol (RSVP), Version 1, Functional Specification* and RFC 3209, *RSVP-TE: Extensions to RSVP for LSP Tunnels*.

When you configure the **rsvp-error-hold-time** statement, two categories of PathErr messages, which specifically represent link failures, are examined:

- Link bandwidth is low for this LSP: Requested bandwidth unavailable—code 1, subcode 2

This type of PathErr message represents a global problem that affects all LSPs transiting the link. They indicate that the actual link bandwidth is lower than that required by the LSP, and that it is likely that the bandwidth information in the traffic engineering database is an overestimate.

When this type of error is received, the available link bandwidth is reduced in the local traffic engineering database, affecting all future LSP computations.

- Link unavailable for this LSP:
  - Admission Control failure—code 1, any subcode except 2
  - Policy Control failures—code 2
  - Service Preempted—code 12
  - Routing problem—no route available toward destination—code 24, subcode 5

These types of PathErr messages are generally pertinent to the specified LSP. The failure of this LSP does not necessarily imply that other LSPs could also fail. These errors can indicate maximum transfer unit (MTU) problems, service preemption (either manually initiated by the operator or by another LSP with a higher priority), that a next-hop link is down, that a next-hop neighbor is down, or service rejection because of policy considerations. It is best to route this particular LSP away from the link.

## Identifying the Problem Link

Each PathErr message includes the sender's IP address. This information is propagated unchanged toward the ingress router. A lookup in the traffic engineering database can identify the node that originated the PathErr message.

Each PathErr message carries enough information to identify the RSVP session that triggered the message. If this is a transit router, it simply forwards the message. If this router is the ingress router (for this RSVP session), it has the complete list of all nodes and links the session should traverse. Coupled with the originating node information, the link can be uniquely identified.

## Configuring the Router to Improve Traffic Engineering Database Accuracy

To improve the accuracy of the traffic engineering database, configure the **rsvp-error-hold-time** statement. When this statement is configured, a source node (ingress of an RSVP LSP) learns from the failures of its LSP by monitoring PathErr messages transmitted from downstream nodes. Information from the PathErr messages is incorporated into subsequent LSP computations, which can improve the accuracy and speed of LSP setup. Some PathErr messages also are used to update traffic engineering database bandwidth information, reducing inconsistencies between the traffic engineering database and the network.

To configure how long MPLS should remember RSVP PathErr messages and consider them in CSPF computation, include the **rsvp-error-hold-time** statement:

```
rsvp-error-hold-time seconds;
```

You can include this statement at the following hierarchy levels:

- **[edit protocols mpls]**
- **[edit logical-systems *logical-system-name* protocols mpls]**

The time can be a value from 1 to 240 seconds. The default is 25 seconds. Configuring a value of 0 disables the monitoring of PathErr messages.

## Configuring MPLS-Signaled LSPs to Use GRE Tunnels

---

MPLS LSPs can use generic routing encapsulation (GRE) tunnels to cross routing areas, autonomous systems, and ISPs. Bridging MPLS LSPs over an intervening IP domain is possible without disrupting the outlying MPLS domain.

LSPs can reach any destination that the GRE tunnels can reach. MPLS applications can be deployed without requiring all transit nodes to support MPLS, or requiring all transit nodes to support the same label distribution protocols (LDP or RSVP). If you use CSPF, you must configure OSPF or IS-IS through the GRE tunnel. Traffic engineering is not supported over GRE tunnels; for example, you cannot reserve bandwidth or set priority or preemption.



**NOTE:** Use the `no-control word` statement to disable the control word when the topology uses GRE as the connection mechanism between provider edge routers and one of the provider edge routers is an M Series Multiservice Edge Router.

For more information about GRE tunnels, see the *Junos OS Services Interfaces Library for Routing Devices*.

## Example: Configuring MPLS-Signaled LSPs to Use GRE Tunnels

To configure MPLS over GRE tunnels:

1. Enable **family mpls** under the GRE interface configuration:

```
[edit interfaces]
interface gr-1/2/0 {
  unit 0 {
    tunnel {
      source 192.168.1.1;
      destination 192.168.1.2;
    }
    family inet {
      address 5.1.1.1/30;
    }
    family iso;
    family mpls;
  }
}
```

2. Enable RSVP and MPLS over the GRE tunnel:

```
[edit protocols]
rsvp {
  interface gr-1/2/0.0;
}
mpls {
  ...
  interface gr-1/2/0.0;
}
```

3. Configure LSPs to travel through the GRE tunnel endpoint address:

```
[edit protocols]
mpls {
  label-switched-path gre-tunnel {
    to 5.1.1.2;
    ...
  }
}
```

Standard LSP configuration options apply. If the routing table specifies that a particular route will traverse a GRE tunnel, the RSVP packets will traverse the tunnel as well.

## Example: Tunneling IPv6 Traffic over MPLS IPv4 Networks

---

This example shows how to configure the Junos OS to tunnel IPv6 over an MPLS-based IPv4 network. External BGP (EBGP) is used between the customer edge (CE) and provider edge (PE) devices. The remote CE devices have different AS numbers for loop detection.

- [Requirements on page 82](#)
- [Overview on page 82](#)
- [Configuration on page 85](#)
- [Verification on page 90](#)

### Requirements

No special configuration beyond device initialization is required before you configure this example.

### Overview

Detailed information about the Juniper Networks implementation of IPv6 over MPLS is described in the following Internet drafts:

- Internet draft draft-ietf-l3vpn-bgp-ipv6-07.txt, *BGP-MPLS IP VPN extension for IPv6 VPN* (expires January 2006)
- Internet draft draft-ooms-v6ops-bgp-tunnel-06.txt, *Connecting IPv6 Islands over IPv4 MPLS using IPv6 Provider Edge Routers* (expires July 2006)


These Internet drafts are available on the IETF website at <http://www.ietf.org/>.

This example shows you how to interconnect a two IPv6 networks over an IPv4-based network core, giving you the ability to provide IPv6 service without having to upgrade the routers in your core network. Multiprotocol Border Gateway Protocol (MP-BGP) is configured to exchange routes between the IPv6 networks, and data is tunneled between these IPv6 networks by means of IPv4-based MPLS.

In [Figure 21 on page 83](#), Routers PE1 and PE2 are dual-stack BGP routers, meaning they have both IPv4 and IPv6 stacks. The PE routers link the IPv6 networks through the customer edge (CE) routers to the IPv4 core network. The CE routers and the PE routers connect through a link layer that can carry IPv6 traffic. The PE routers use IPv6 on the CE router-facing interfaces and use IPv4 and MPLS on the core-facing interfaces. Note that one of the connected IPv6 networks could be the global IPv6 Internet.



Figure 21: IPv6 Networks Linked by MPLS IPv4 Tunnels

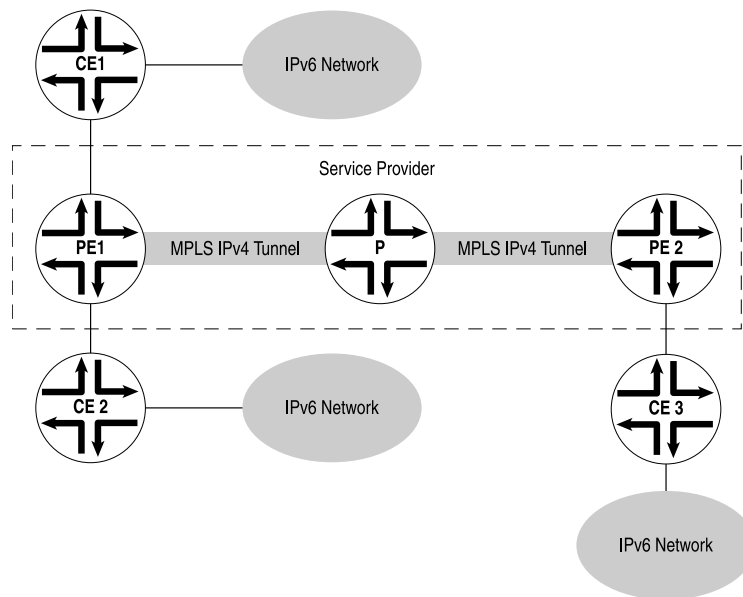

The two PE routers are linked through an MP-BGP session using IPv4 addresses. They use the session to exchange IPv6 routes with an IPv6 (value 2) address family indicator (AFI) and a subsequent AFI (SAFI) (value 4). Each PE router sets the next hop for the IPv6 routes advertised on this session to its own IPv4 address. Because MP-BGP requires the BGP next hop to correspond to the same address family as the network layer reachability information (NLRI), this IPv4 address needs to be embedded within an IPv6 format.

The PE routers can learn the IPv6 routes from the CE routers connected to them using routing protocols Routing Information Protocol next generation (RIPng) or MP-BGP, or through static configuration. Note that if BGP is used as the PE-router-to-CE-router protocol, the MP-BGP session between the PE router and CE router could occur over an IPv4 or IPv6 Transmission Control Protocol (TCP) session. Also, the BGP routes exchanged on that session would have SAFI unicast. You must configure an export policy to pass routes between IBGP and EBGP, and between BGP and any other protocol.

The PE routers have MPLS LSPs routed to each others' IPv4 addresses. IPv4 provides signaling for the LSPs by means of either LDP or RSVP. These LSPs are used to resolve the next-hop addresses of the IPv6 routes learned from MP-BGP. The next hops use IPv4-mapped IPv6 addresses, while the LSPs use IPv4 addresses.

The PE routers always advertise IPv6 routes to each other using a label value of 2, the explicit null label for IPv6 as defined in RFC 3032, *MPLS Label Stack Encoding*. As a consequence, each of the forwarding next hops for the IPv6 routes learned from remote PE routers normally push two labels. The inner label is 2 (this label could be different if the advertising PE router is not a Juniper Networks routing platform), and the outer label is the LSP label. If the LSP is a single-hop LSP, then only Label 2 is pushed.

It is also possible for the PE routers to exchange plain IPv6 routes using SAFI unicast. However, there is one major advantage in exchanging labeled IPv6 routes. The

penultimate-hop router for an MPLS LSP can pop the outer label and then send the packet with the inner label as an MPLS packet. Without the inner label, the penultimate-hop router would need to discover whether the packet is an IPv4 or IPv6 packet to set the protocol field in the Layer 2 header correctly.

When the PE1 router in [Figure 21 on page 83](#) receives an IPv6 packet from the CE1 router, it performs a lookup in the IPv6 forwarding table. If the destination matches a prefix learned from the CE2 router, then no labels need to be pushed and the packet is simply sent to the CE2 router. If the destination matches a prefix that was learned from the PE2 router, then the PE1 router pushes two labels onto the packet and sends it to the provider router. The inner label is 2 and the outer label is the LSP label for the PE2 router.

Each provider router in the service provider's network handles the packet as it would any MPLS packet, swapping labels as it passes from provider router to provider router. The penultimate-hop provider router for the LSP pops the outer label and sends the packet to the PE2 router. When the PE2 router receives the packet, it recognizes the IPv6 explicit null label on the packet (Label 2). It pops this label and treats it as an IPv6 packet, performing a lookup in the IPv6 forwarding table and forwarding the packet to the CE3 router.

This example includes the following settings:

- In addition to configuring the **family inet6** statement on all the CE router-facing interfaces, you must also configure the statement on all the core-facing interfaces running MPLS. Both configurations are necessary because the router must be able to process any IPv6 packets it receives on these interfaces. You should not see any regular IPv6 traffic arrive on these interfaces, but you will receive MPLS packets tagged with Label 2. Even though Label 2 MPLS packets are sent in IPv4, these packets are treated as native IPv6 packets.
- You enable IPv6 tunneling by including the **ipv6-tunneling** statement in the configuration for the PE routers. This statement allows IPv6 routes to be resolved over an MPLS network by converting all routes stored in the inet.3 routing table to IPv4-mapped IPv6 addresses and then copying them into the inet6.3 routing table. This routing table can be used to resolve next hops for both inet6 and inet6-vpn routes.



**NOTE:** BGP automatically runs its import policy even when copying routes from a primary routing table group to a secondary routing table group. If IPv4 labeled routes arrive from a BGP session (for example, when you have configured the **labeled-unicast** statement at the `[edit protocols bgp family inet]` hierarchy level on the PE router), the BGP neighbor's import policy also accepts IPv6 routes, since the neighbor's import policy is run while doing the copy operation to the inet6.3 routing table.

---

- When you configure MP-BGP to carry IPv6 traffic, the IPv4 MPLS label is removed at the destination PE router. The remaining IPv6 packet without a label can then be forwarded to the IPv6 network. To enable this, include the **explicit-null** statement in the BGP configuration.

## Configuration

**CLI Quick Configuration** To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

**Device PE1**

```

set interfaces fe-1/2/0 unit 2 family inet6 address ::10.1.1.2/126
set interfaces fe-1/2/0 unit 2 family mpls
set interfaces fe-1/2/1 unit 5 family inet address 10.1.1.5/30
set interfaces fe-1/2/1 unit 5 family inet6
set interfaces fe-1/2/1 unit 5 family mpls
set interfaces lo0 unit 2 family inet address 1.1.1.2/32
set protocols mpls ipv6-tunneling
set protocols mpls interface fe-1/2/0.2
set protocols mpls interface fe-1/2/1.5
set protocols bgp group toCE1 type external
set protocols bgp group toCE1 local-address ::10.1.1.2
set protocols bgp group toCE1 family inet6 unicast
set protocols bgp group toCE1 export send-bgp6
set protocols bgp group toCE1 peer-as 1
set protocols bgp group toCE1 neighbor ::10.1.1.1
set protocols bgp group toPE2 type internal
set protocols bgp group toPE2 local-address 1.1.1.2
set protocols bgp group toPE2 family inet6 labeled-unicast explicit-null
set protocols bgp group toPE2 export next-hop-self
set protocols bgp group toPE2 export send-v6
set protocols bgp group toPE2 neighbor 1.1.1.4
set protocols ospf area 0.0.0.0 interface fe-1/2/1.5
set protocols ospf area 0.0.0.0 interface lo0.2 passive
set protocols ldp interface fe-1/2/1.5
set policy-options policy-statement next-hop-self then next-hop self
set policy-options policy-statement send-bgp6 from family inet6
set policy-options policy-statement send-bgp6 from protocol bgp
set policy-options policy-statement send-bgp6 then accept
set policy-options policy-statement send-v6 from family inet6
set policy-options policy-statement send-v6 from protocol bgp
set policy-options policy-statement send-v6 from protocol direct
set policy-options policy-statement send-v6 then accept
set routing-options router-id 1.1.1.2
set routing-options autonomous-system 2

```

**Device PE2**

```

set interfaces fe-1/2/0 unit 10 family inet address 10.1.1.10/30
set interfaces fe-1/2/0 unit 10 family inet6
set interfaces fe-1/2/0 unit 10 family mpls
set interfaces fe-1/2/1 unit 13 family inet6 address ::10.1.1.13/126
set interfaces fe-1/2/1 unit 13 family mpls
set interfaces lo0 unit 4 family inet address 1.1.1.4/32
set protocols mpls ipv6-tunneling
set protocols mpls interface fe-1/2/0.10
set protocols mpls interface fe-1/2/1.13
set protocols bgp group toPE1 type internal
set protocols bgp group toPE1 local-address 1.1.1.4
set protocols bgp group toPE1 family inet6 labeled-unicast explicit-null
set protocols bgp group toPE1 export next-hop-self

```

```
set protocols bgp group toPE1 export send-v6
set protocols bgp group toPE1 neighbor 1.1.1.2
set protocols bgp group toCE3 type external
set protocols bgp group toCE3 local-address ::10.1.1.13
set protocols bgp group toCE3 family inet6 unicast
set protocols bgp group toCE3 export send-bgp6
set protocols bgp group toCE3 peer-as 3
set protocols bgp group toCE3 neighbor ::10.1.1.14
set protocols ospf area 0.0.0.0 interface fe-1/2/0.10
set protocols ospf area 0.0.0.0 interface lo0.4 passive
set protocols ldp interface fe-1/2/0.10
set policy-options policy-statement next-hop-self then next-hop self
set policy-options policy-statement send-bgp6 from family inet6
set policy-options policy-statement send-bgp6 from protocol bgp
set policy-options policy-statement send-bgp6 then accept
set policy-options policy-statement send-v6 from family inet6
set policy-options policy-statement send-v6 from protocol bgp
set policy-options policy-statement send-v6 from protocol direct
set policy-options policy-statement send-v6 then accept
set routing-options router-id 1.1.1.4
set routing-options autonomous-system 2
```

Device P

```
set interfaces fe-1/2/0 unit 6 family inet address 10.1.1.6/30
set interfaces fe-1/2/0 unit 6 family inet6
set interfaces fe-1/2/0 unit 6 family mpls
set interfaces fe-1/2/1 unit 9 family inet address 10.1.1.9/30
set interfaces fe-1/2/1 unit 9 family inet6
set interfaces fe-1/2/1 unit 9 family mpls
set interfaces lo0 unit 3 family inet address 1.1.1.3/32
set protocols mpls interface fe-1/2/0.6
set protocols mpls interface fe-1/2/1.9
set protocols ospf area 0.0.0.0 interface fe-1/2/0.6
set protocols ospf area 0.0.0.0 interface fe-1/2/1.9
set protocols ospf area 0.0.0.0 interface lo0.3 passive
set protocols ldp interface fe-1/2/0.6
set protocols ldp interface fe-1/2/1.9
set routing-options router-id 1.1.1.3
set routing-options autonomous-system 2
```

Device CE1

```
set interfaces fe-1/2/0 unit 1 family inet6 address ::10.1.1.1/126
set interfaces fe-1/2/0 unit 1 family mpls
set interfaces lo0 unit 1 family inet6 address ::1.1.1.1/128
set protocols bgp group toPE1 type external
set protocols bgp group toPE1 local-address ::10.1.1.1
set protocols bgp group toPE1 family inet6 unicast
set protocols bgp group toPE1 export send-v6
set protocols bgp group toPE1 peer-as 2
set protocols bgp group toPE1 neighbor ::10.1.1.2
set policy-options policy-statement send-v6 from family inet6
set policy-options policy-statement send-v6 from protocol direct
set policy-options policy-statement send-v6 then accept
set routing-options router-id 1.1.1.1
set routing-options autonomous-system 1
```

Device CE3

```
set interfaces fe-1/2/0 unit 14 family inet6 address ::10.1.1.14/126
```

```

set interfaces fe-1/2/0 unit 14 family mpls
set interfaces lo0 unit 5 family inet6 address ::1.1.1.5/128
set protocols bgp group toPE2 type external
set protocols bgp group toPE2 local-address ::10.1.1.14
set protocols bgp group toPE2 family inet6 unicast
set protocols bgp group toPE2 export send-v6
set protocols bgp group toPE2 peer-as 2
set protocols bgp group toPE2 neighbor ::10.1.1.13
set policy-options policy-statement send-v6 from family inet6
set policy-options policy-statement send-v6 from protocol direct
set policy-options policy-statement send-v6 then accept
set routing-options router-id 1.1.1.5
set routing-options autonomous-system 3

```

### Configuring Device PE1

**Step-by-Step Procedure** The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure Device PE1:

1. Configure the interfaces.

```

[edit interfaces]
user@PE1# set fe-1/2/0 unit 2 family inet6 address ::10.1.1.2/126
user@PE1# set fe-1/2/0 unit 2 family mpls

user@PE1# set fe-1/2/1 unit 5 family inet address 10.1.1.5/30
user@PE1# set fe-1/2/1 unit 5 family inet6
user@PE1# set fe-1/2/1 unit 5 family mpls

user@PE1# set lo0 unit 2 family inet address 1.1.1.2/32

```

2. Configure MPLS on the interfaces.

```

[edit protocols mpls]
user@PE1# set ipv6-tunneling
user@PE1# set interface fe-1/2/0.2
user@PE1# set interface fe-1/2/1.5

```

3. Configure BGP.

```

[edit protocols bgp]
user@PE1# set group toCE1 type external
user@PE1# set group toCE1 local-address ::10.1.1.2
user@PE1# set group toCE1 family inet6 unicast
user@PE1# set group toCE1 export send-bgp6
user@PE1# set group toCE1 peer-as 1
user@PE1# set group toCE1 neighbor ::10.1.1.1

user@PE1# set group toPE2 type internal
user@PE1# set group toPE2 local-address 1.1.1.2
user@PE1# set group toPE2 family inet6 labeled-unicast explicit-null
user@PE1# set group toPE2 export next-hop-self
user@PE1# set group toPE2 export send-v6

```

- ```
user@PE1# set group toPE2 neighbor 1.1.1.4
```
4. Configure OSPF

```
[edit protocols ospf area 0.0.0.0]
user@PE1# set interface fe-1/2/1.5
user@PE1# set interface lo0.2 passive
```
  5. Configure a signaling protocol.

```
[edit protocols]
user@PE1# set ldp interface fe-1/2/1.5
```
  6. Configure the routing policies.

```
[edit policy-options]
user@PE1# set policy-statement next-hop-self then next-hop self

user@PE1# set policy-statement send-bgp6 from family inet6
user@PE1# set policy-statement send-bgp6 from protocol bgp
user@PE1# set policy-statement send-bgp6 then accept

user@PE1# set policy-statement send-v6 from family inet6
user@PE1# set policy-statement send-v6 from protocol bgp
user@PE1# set policy-statement send-v6 from protocol direct
user@PE1# set policy-statement send-v6 then accept
```
  7. Configure the router ID and the autonomous system (AS) number.

```
[edit routing-options]
user@PE1# set router-id 1.1.1.2
user@PE1# set autonomous-system 2
```

**Results** From configuration mode, confirm your configuration by entering the **show interfaces**, **show policy-options**, **show protocols**, and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@R1# show interfaces
fe-1/2/0 {
  unit 2 {
    family inet6 {
      address ::10.1.1.2/126;
    }
    family mpls;
  }
}
fe-1/2/1 {
  unit 5 {
    family inet {
      address 10.1.1.5/30;
    }
    family inet6;
    family mpls;
  }
}
lo0 {
```

```

    unit 2 {
        family inet {
            address 1.1.1.2/32;
        }
    }
}

user@R1# show policy-options
policy-statement next-hop-self {
    then {
        next-hop self;
    }
}
policy-statement send-bgp6 {
    from {
        family inet6;
        protocol bgp;
    }
    then accept;
}
policy-statement send-v6 {
    from {
        family inet6;
        protocol [ bgp direct ];
    }
    then accept;
}

user@R1# show protocols
mpls {
    ipv6-tunneling;
    interface fe-1/2/0.2;
    interface fe-1/2/1.5;
}
bgp {
    group toCE1 {
        type external;
        local-address ::10.1.1.2;
        family inet6 {
            unicast;
        }
        export send-bgp6;
        peer-as 1;
        neighbor ::10.1.1.1;
    }
    group toPE2 {
        type internal;
        local-address 1.1.1.2;
        family inet6 {
            labeled-unicast {
                explicit-null;
            }
        }
        export [ next-hop-self send-v6 ];
        neighbor 1.1.1.4;
    }
}

```

```
ospf {  
  area 0.0.0.0 {  
    interface fe-1/2/1.5;  
    interface lo0.2 {  
      passive;  
    }  
  }  
}  
ldp {  
  interface fe-1/2/1.5;  
}  
  
user@R1# show routing-options  
router-id 1.1.1.2;  
autonomous-system 2;
```

If you are done configuring the device, enter **commit** from configuration mode. Configure the other devices in the topology, as shown in [“CLI Quick Configuration” on page 85](#).

## Verification

Confirm that the configuration is working properly.

### Verifying That the CE Devices Have Connectivity

---

**Purpose** Make sure that the tunnel is operating.

**Action** From operational mode, enter the **ping** command.

```
user@CE1> ping ::10.1.1.14  
PING6(56=40+8+8 bytes) ::10.1.1.1 --> ::10.1.1.14  
16 bytes from ::10.1.1.14, icmp_seq=0 hlim=61 time=10.687 ms  
16 bytes from ::10.1.1.14, icmp_seq=1 hlim=61 time=9.239 ms  
16 bytes from ::10.1.1.14, icmp_seq=2 hlim=61 time=1.842 ms  
  
user@CE3> ping ::10.1.1.1  
PING6(56=40+8+8 bytes) ::10.1.1.14 --> ::10.1.1.1  
16 bytes from ::10.1.1.1, icmp_seq=0 hlim=61 time=1.484 ms  
16 bytes from ::10.1.1.1, icmp_seq=1 hlim=61 time=1.338 ms  
16 bytes from ::10.1.1.1, icmp_seq=2 hlim=61 time=1.351 ms
```

**Meaning** The IPv6 CE devices can communicate over the core IPv4 network.

**Related Documentation**

- [Configuring the Ingress Router for MPLS-Signaled LSPs on page 60](#)
- [Configuring the Intermediate and Egress Routers for MPLS-Signaled LSPs](#)
- [Minimum RSVP Configuration on page 501](#)

## SRLG Overview

---

In MPLS traffic engineering, a Shared Risk Link Group (SRLG) is a set of links sharing a common resource, which affects all links in the set if the common resource fails. These



links share the same risk of failure and are therefore considered to belong to the same SRLG. For example, links sharing a common fiber are said to be in the same SRLG because a fault with the fiber might cause all links in the group to fail.

An SRLG is represented by a 32-bit number unique within an IGP (OSPFv2 and IS-IS) domain. A link might belong to multiple SRLGs. The SRLG of a path in a label-switched path (LSP) is the set of SRLGs for all the links in the path. When computing the secondary path for an LSP, it is preferable to find a path such that the secondary and primary paths do not have any links in common in case the SRLGs for the primary and secondary paths are disjoint. This ensures that a single point of failure on a particular link does not bring down both the primary and secondary paths in the LSP.

When the SRLG is configured, the device uses the Constrained Shortest Path First (CSPF) algorithm and tries to keep the links used for the primary and secondary paths mutually exclusive. If the primary path goes down, the CSPF algorithm computes the secondary path by trying to avoid links that share any SRLG with the primary path. In addition, when computing the path for a bypass LSP, CSPF tries to avoid links that share any SRLG with the protected links.

When the SRLG is not configured, CSPF only takes into account the costs of the links when computing the secondary path.

Any change in link SRLG information triggers the IGP to send LSP updates for the new link SRLG information. CSPF recomputes the paths during the next round of reoptimization.

Junos OS Release 11.4 and later supports SRLG based on the following RFCs:

- RFC 4203, *OSPF Extensions in Support of Generalized Multi-Protocol Label Switching (GMPLS)*.
- RFC 5307, *IS-IS Extensions in Support of Generalized Multi-Protocol Label Switching (GMPLS)*.



**NOTE:** Currently, the “Fate Sharing” feature continues to be supported with the SRLG feature.

#### Related Documentation

- [Example: Configuring SRLG on page 92](#)
- [Example: Excluding SRLG Links Completely for the Secondary LSP on page 101](#)
- [Example: Configuring SRLG with Link Protection on page 106](#)
- [Example: Configuring SRLG with Link Protection with the exclude-srlg Option on page 127](#)
- [Computing Backup Paths for LSPs Using Fate Sharing on page 34](#)

## Example: Configuring SRLG

---

This example shows how to configure Shared Risk Link Groups (SRLGs) on a device.

- [Requirements on page 92](#)
- [Overview on page 92](#)
- [Configuration on page 93](#)
- [Verification on page 98](#)

### Requirements

This example uses the following hardware and software components:

- Seven routers that can be a combination of M Series, MX Series, or T Series routers
- Junos OS Release 11.4 or later running on all the devices

### Overview

Junos OS Release 11.4 and later support SRLG configuration in an IGP (OSPFv2 and IS-IS) domain. In this example, you configure SRLG and associate it with the MPLS interface on a device.

The device uses the SRLG cost parameter for the Constrained Shortest Path First (CSPF) algorithm and tries to keep the links used for the primary and secondary paths mutually exclusive by avoiding links that share any SRLG with the primary path.


To configure the SRLG, you first define the SRLG parameters at the **[edit routing-options srlg srlg-name]** hierarchy level and then associate the SRLG with an MPLS interface at the **[edit mpls interface interface-name]** hierarchy level.

The **srlg srlg-name** statement has the following options:

- **srlg-cost**—Include a cost for the SRLG ranging from 1 through 65535. The cost of the SRLG determines the level of impact this SRLG has on the CSPF algorithm for path computations. The higher the cost, the less likely it is for a secondary path to share the same SRLG as the primary path. By default, the **srlg-cost** is 1.
- **srlg-value**—Include a group ID for the SRLG ranging from 1 through 4294967295.

In this example, PE1 is the ingress router and PE2 is the egress router. P1, P2, and P3, P4, and P5 are transit routers. OSPF is configured on all the routers as the interior gateway protocol (IGP). SRLG is configured on all seven routers. The primary path includes SRLG **srlg-a**. For the standby secondary path, the link P2>PE2 belongs to SRLG **srlg-a**. The

effective link metric, with the added **srlg-cost** of 10, becomes 11. Therefore, the computed secondary path is PE1>P3>P4>P5>PE2 with a CSPF link metric of 4.

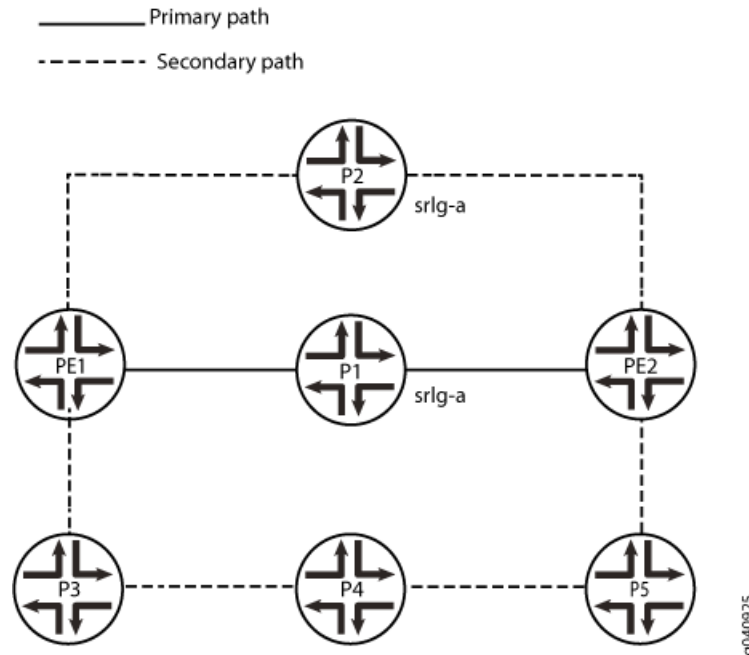

## Configuration

**CLI Quick Configuration** To quickly configure this section of the example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

```

Router PE1
set interfaces ge-0/0/1 unit 0 family inet address 192.168.12.1/24
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 192.168.13.1/24
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces ge-0/0/3 unit 0 family inet address 192.168.14.1/24
set interfaces ge-0/0/3 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.0.1/32
set routing-options srlg srlg-a srlg-value 101
set routing-options srlg srlg-a srlg-cost 10
set protocols rsvp interface ge-0/0/1.0
set protocols rsvp interface ge-0/0/2.0
set protocols rsvp interface ge-0/0/3.0
set protocols mpls optimize-timer 120
set protocols mpls label-switched-path pe1-pe2 to 10.255.0.7
set protocols mpls label-switched-path pe1-pe2 primary via-p1
set protocols mpls label-switched-path pe1-pe2 secondary path2 standby
set protocols mpls path via-p1 10.255.0.2 strict
set protocols mpls path path2
set protocols mpls interface ge-0/0/1.0
set protocols mpls interface ge-0/0/2.0
set protocols mpls interface ge-0/0/3.0
set protocols ospf traffic-engineering
  
```

```
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface ge-0/0/2.0
set protocols ospf area 0.0.0.0 interface ge-0/0/3.0
set protocols ospf area 0.0.0.0 interface lo0.0
```

**Router P1**

```
set interfaces ge-0/0/1 unit 0 family inet address 192.168.12.2/24
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 192.168.27.2/24
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.0.2/32
set routing-options srlg srlg-a srlg-value 101
set routing-options srlg srlg-a srlg-cost 10
set protocols rsvp interface ge-0/0/1.0
set protocols rsvp interface ge-0/0/2.0
set protocols mpls interface ge-0/0/1.0
set protocols mpls interface ge-0/0/2.0 srlg srlg-a
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface ge-0/0/2.0
set protocols ospf area 0.0.0.0 interface lo0.0
```

**Router P2**

```
set interfaces ge-0/0/1 unit 0 family inet address 192.168.13.3/24
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 192.168.37.3/24
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.0.3/32
set routing-options srlg srlg-a srlg-value 101
set routing-options srlg srlg-a srlg-cost 10
set protocols rsvp interface ge-0/0/1.0
set protocols rsvp interface ge-0/0/2.0
set protocols mpls interface ge-0/0/1.0
set protocols mpls interface ge-0/0/2.0 srlg srlg-a
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface ge-0/0/2.0
set protocols ospf area 0.0.0.0 interface lo0.0
```

**Router P3**

```
set interfaces ge-0/0/1 unit 0 family inet address 192.168.14.4/24
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 192.168.45.4/24
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.0.4/32
set routing-options srlg srlg-a srlg-value 101
set routing-options srlg srlg-a srlg-cost 10
set protocols rsvp interface ge-0/0/1.0
set protocols rsvp interface ge-0/0/2.0
set protocols mpls interface ge-0/0/1.0
set protocols mpls interface ge-0/0/2.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface ge-0/0/2.0
set protocols ospf area 0.0.0.0 interface lo0.0
```

**Router P4**

```
set interfaces ge-0/0/1 unit 0 family inet address 192.168.45.5/24
set interfaces ge-0/0/1 unit 0 family mpls
```

```

set interfaces ge-0/0/2 unit 0 family inet address 192.168.56.5/24
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.0.5/32
set routing-options srlg srlg-a srlg-value 101
set routing-options srlg srlg-a srlg-cost 10
set protocols rsvp interface ge-0/0/1.0
set protocols rsvp interface ge-0/0/2.0
set protocols mpls interface ge-0/0/1.0
set protocols mpls interface ge-0/0/2.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface ge-0/0/2.0
set protocols ospf area 0.0.0.0 interface lo0.0

```

**Router P5**

```

set interfaces ge-0/0/1 unit 0 family inet address 192.168.56.6/24
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 192.168.67.6/24
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.0.6/32
set routing-options srlg srlg-a srlg-value 101
set routing-options srlg srlg-a srlg-cost 10
set protocols rsvp interface ge-0/0/1.0
set protocols rsvp interface ge-0/0/2.0
set protocols mpls interface ge-0/0/1.0
set protocols mpls interface ge-0/0/2.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface ge-0/0/2.0
set protocols ospf area 0.0.0.0 interface lo0.0

```

**Router PE2**

```

set interfaces ge-0/0/1 unit 0 family inet address 192.168.27.7/24
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 192.168.37.7/24
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces ge-0/0/3 unit 0 family inet address 192.168.67.7/24
set interfaces ge-0/0/3 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.0.7/32
set routing-options srlg srlg-a srlg-value 101
set routing-options srlg srlg-a srlg-cost 10
set protocols rsvp interface ge-0/0/1.0
set protocols rsvp interface ge-0/0/2.0
set protocols rsvp interface ge-0/0/3.0
set protocols mpls interface ge-0/0/1.0
set protocols mpls interface ge-0/0/2.0
set protocols mpls interface ge-0/0/3.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface ge-0/0/2.0
set protocols ospf area 0.0.0.0 interface ge-0/0/3.0
set protocols ospf area 0.0.0.0 interface lo0.0

```

**Step-by-Step Procedure** The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see the *CLI User Guide*.

To configure the ingress router PE1:

1. Configure the device interfaces.

```
[edit interfaces]
```

```
user@PE1# set ge-0/0/1 unit 0 family inet address 192.168.12.1/24
user@PE1# set ge-0/0/1 unit 0 family mpls
user@PE1# set ge-0/0/2 unit 0 family inet address 192.168.13.1/24
user@PE1# set ge-0/0/2 unit 0 family mpls
user@PE1# set ge-0/0/3 unit 0 family inet address 192.168.14.1/24
user@PE1# set ge-0/0/3 unit 0 family mpls
user@PE1# set lo0 unit 0 family inet address 10.255.0.1/32
```

2. Configure OSPF on the interfaces.

```
[edit protocols ospf]
```

```
user@PE1# set traffic-engineering
user@PE1# set area 0.0.0.0 interface ge-0/0/1.0
user@PE1# set area 0.0.0.0 interface ge-0/0/2.0
user@PE1# set area 0.0.0.0 interface ge-0/0/3.0
user@PE1# set area 0.0.0.0 interface lo0.0
```

3. Configure the SRLG definitions.

```
[edit routing-options]
```

```
user@PE1# set srlg srlg-a srlg-value 101
user@PE1# set srlg srlg-a srlg-cost 10
```

4. Configure MPLS and the LSPs.

```
[edit protocols mpls]
```

```
user@PE1# set interface ge-0/0/1.0
user@PE1# set interface ge-0/0/2.0
user@PE1# set interface ge-0/0/3.0
user@PE1# set optimize-timer 120
user@PE1# set label-switched-path pe1-pe2 to 10.255.0.7
user@PE1# set label-switched-path pe1-pe2 primary via-p1
user@PE1# set label-switched-path pe1-pe2 secondary path2 standby
user@PE1# set path via-p1 10.255.0.2 strict
user@PE1# set path path2
```

5. Enable RSVP on the interfaces.

```
[edit protocols rsvp]
```

```
user@PE1# set interface ge-0/0/1.0
user@PE1# set interface ge-0/0/2.0
user@PE1# set interface ge-0/0/3.0
```

**Results** From configuration mode, confirm your configuration by entering the **show interfaces**, **show protocols ospf**, **show routing-options**, **show protocols mpls**, and **show protocols rsvp** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@PE1# show interfaces
interfaces {
```

```

ge-0/0/1 {
  unit 0 {
    family inet {
      address 192.168.12.1/24;
    }
    family mpls;
  }
}
ge-0/0/2 {
  unit 0 {
    family inet {
      address 192.168.13.1/24;
    }
    family mpls;
  }
}
ge-0/0/3 {
  unit 0 {
    family inet {
      address 192.168.14.1/24;
    }
    family mpls;
  }
}
lo0 {
  unit 0 {
    family inet {
      address 10.255.0.1/32;
    }
  }
}
}

```

```

user@PE1# show protocols ospf
traffic-engineering;
area 0.0.0.0 {
  interface ge-0/0/1.0;;
  interface ge-0/0/2.0;
  interface ge-0/0/3.0;
  interface lo0.0;
}

```

```

user@PE1# show protocols mpls
optimize-timer 120;
label-switched-path pe1-pe2 {
  to 10.255.0.7;
  primary via-p1;
  secondary path2 {
    standby;
  }
}
path via-p1 {
  10.255.0.2 strict;
}
path path2;
interface ge-0/0/1.0;
interface ge-0/0/2.0;

```

```
interface ge-0/0/3.0;

user@PE1# show protocols rsvp
interface ge-0/0/1.0;
interface ge-0/0/2.0;
interface ge-0/0/3.0;

user@PE1# show routing-options
routing-options {
  srlg {
    srlg-a {
      srlg-value 101;
      srlg-cost 10;
    }
  }
}
```

If you are done configuring the device, enter **commit** from configuration mode.



**NOTE:** Repeat this procedure for every Juniper Networks router in the IGP domain, after modifying the appropriate interface names, addresses, and any other parameters for each router.

---

## Verification

Confirm that the configuration is working properly.

- [Verifying SRLG Definitions on page 98](#)
- [Verify TE-Link SRLG on page 98](#)
- [Verify Standby Secondary Path on page 99](#)

---

### Verifying SRLG Definitions

**Purpose** Verify SRLG-to-value mappings and SRLG cost.

**Action** user@PE1> show mpls srlg

| SRLG   | Value | Cost |
|--------|-------|------|
| srlg-a | 101   | 10   |

---

### Verify TE-Link SRLG

**Purpose** Verify the traffic engineering link SRLG association.



**Action** user@PE1> show ted link detail

```

...
10.255.0.2->192.168.27.7-1, Local: 192.168.27.2, Remote: 0.0.0.0
  Local interface index: 0, Remote interface index: 0
  LocalPath: 1, Metric: 1, StaticBW: 1000Mbps, AvailBW: 1000Mbps
  Color: 0 <none>
  SRLGs: srlg-a
  localBW [0] 0bps [1] 0bps [2] 0bps [3] 0bps
  localBW [4] 0bps [5] 0bps [6] 0bps [7] 0bps

...
10.255.0.3->192.168.37.7-1, Local: 192.168.37.3, Remote: 0.0.0.0
  Local interface index: 0, Remote interface index: 0
  LocalPath: 0, Metric: 1, StaticBW: 1000Mbps, AvailBW: 1000Mbps
  Color: 0 <none>
  SRLGs: srlg-a
  localBW [0] 0bps [1] 0bps [2] 0bps [3] 0bps
  localBW [4] 0bps [5] 0bps [6] 0bps [7] 0bps

...

```

**Meaning** Links P1-PE2 and P2-PE2 are associated with SRLG **srlg-a**.

### Verify Standby Secondary Path

**Purpose** Check the SRLG link cost and its impact on the CSPF computation of the standby secondary path link.

**Action** user@PE1> show mpls lsp ingress extensive  
Ingress LSP: 1 sessions

```

10.255.0.7
  From: 10.255.0.1, State: Up, ActiveRoute: 0, LSPname: pe1-pe2
  ActivePath: via-p1 (primary)
  LSPtype: Static Configured
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary via-p1 State: Up
    Priorities: 7 0
    OptimizeTimer: 120
    SmartOptimizeTimer: 180
    SRLG: srlg-a
    Reoptimization in 110 second(s).
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 2)
192.168.12.2 S 192.168.27.7 S
  Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
20=Node-ID):
    192.168.12.2 192.168.27.7
    7 Oct 13 15:17:11.310 CSPF: computation result ignored, new path no benefit
    6 Oct 13 15:15:14.959 Selected as active path
    5 Oct 13 15:15:14.958 Record Route: 192.168.12.2 192.168.27.7
    4 Oct 13 15:15:14.954 Up
    3 Oct 13 15:15:14.793 Originate Call
    2 Oct 13 15:15:14.793 CSPF: computation result accepted 192.168.12.2
192.168.27.7
  1 Oct 13 15:14:46.214 CSPF failed: no route toward 10.255.0.2
  Standby path2 State: Up
    Priorities: 7 0
    OptimizeTimer: 120
    SmartOptimizeTimer: 180
    Reoptimization in 115 second(s).
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 4)
192.168.14.4 S 192.168.45.5 S 192.168.56.6 S 192.168.67.7 S
  Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
20=Node-ID):
    192.168.14.4 192.168.45.5 192.168.56.6 192.168.67.7
    10 Oct 13 15:17:11.929 Record Route: 192.168.14.4 192.168.45.5 192.168.56.6
192.168.67.7
    9 Oct 13 15:17:11.929 Up
    8 Oct 13 15:17:11.729 Originate Call
    7 Oct 13 15:17:11.729 Clear Call
    6 Oct 13 15:17:11.729 CSPF: computation result accepted 192.168.14.4
192.168.45.5 192.168.56.6 192.168.67.7
    5 Oct 13 15:17:11.729 CSPF: Reroute due to re-optimization
    4 Oct 13 15:15:14.984 Record Route: 192.168.13.3 192.168.37.7
    3 Oct 13 15:15:14.984 Up
    2 Oct 13 15:15:14.830 Originate Call
    1 Oct 13 15:15:14.830 CSPF: computation result accepted 192.168.13.3
192.168.37.7
  Created: Thu Oct 13 15:13:46 2011
  Total 1 displayed, Up 1, Down 0

```

**Meaning** Check the standby secondary path. The effective link cost for P2>PE2 is 11 (with the added **srlg-cost** of 10). CSPF computes the secondary path as PE1>P3>P4>P5>PE2 with a CSPF link metric of 4.

- Related Documentation**
- [SRLG Overview on page 90](#)
  - [Example: Excluding SRLG Links Completely for the Secondary LSP on page 101](#)
  - [srlg on page 1514](#)
  - [srlg-cost on page 1515](#)
  - [srlg-value on page 1515](#)

## Example: Excluding SRLG Links Completely for the Secondary LSP

This example shows how to configure the **exclude-srlg** option to exclude Shared Risk Link Group (SRLG) links for the secondary label-switched path (LSP).

- [Requirements on page 101](#)
- [Overview on page 101](#)
- [Configuration on page 102](#)
- [Verification on page 105](#)

### Requirements

This example uses the following hardware and software components:

- M Series, MX Series, or T Series devices
- Junos OS Release 11.4 or later running on all the devices


### Overview

For critical links where it is imperative to keep the secondary and primary paths completely disjoint from any common SRLG, you can optionally configure the **exclude-srlg** statement at the **[edit protocols mpls]** or **[edit protocols mpls label-switched-path *path-name*]** hierarchy levels. For logical systems, you configure the **exclude-srlg** statement at the **edit logical-systems protocols mpls[edit logical-systems *logical-system-name* protocols mpls label-switched-path *path-name*]** hierarchy level.

If **exclude-srlg** is configured, the Constrained Shortest Path First (CSPF) algorithm excludes any link belonging to the set of SRLGs in the primary path. If **exclude-srlg** is not configured, and if a link belongs to the set of SRLGs in the primary path, CSPF adds the SRLG cost to the metric, but still accepts the link for computing the path.

In this example, PE1 is the ingress router and PE2 is the egress router. P1, P2, and P3, P4, and P5 are transit routers. OSPF is configured on all the routers as the interior gateway protocol (IGP). SRLG is configured on all seven routers. The primary path includes SRLG **srlg-a**. For the standby secondary path, the link P2>PE2 belongs to SRLG **srlg-a**. Because

**exclude-srlg** is configured, CSPF rejects link P2>PE2 as the link belongs to the SRLG **srlg-a**. Therefore, the computed standby secondary path is PE1>P3>P4>P5>PE2.

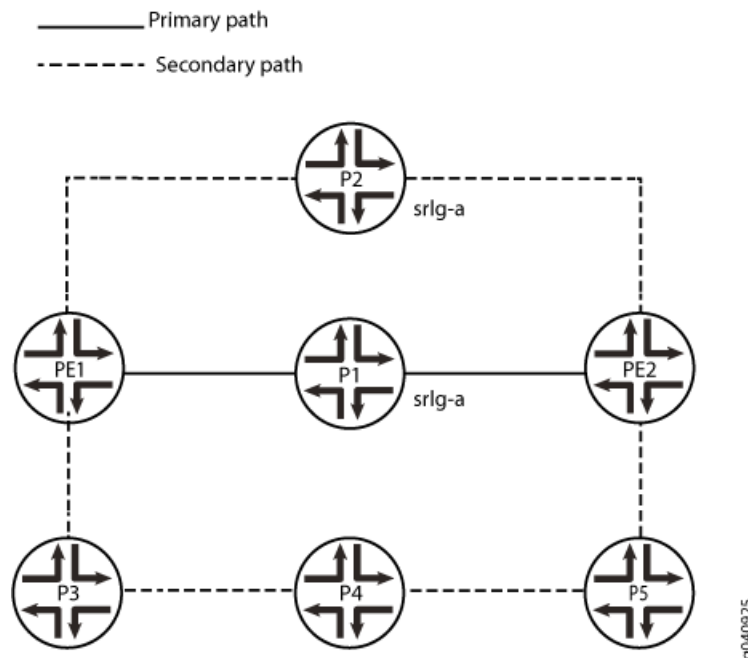

## Configuration

**CLI Quick Configuration** To quickly configure this section of the example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

```

Router PE1
set interfaces ge-0/0/1 unit 0 family inet address 192.168.12.1/24
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 192.168.13.1/24
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces ge-0/0/3 unit 0 family inet address 192.168.14.1/24
set interfaces ge-0/0/3 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.0.1/32
set routing-options srlg srlg-a srlg-value 101
set protocols rsvp interface ge-0/0/1.0
set protocols rsvp interface ge-0/0/2.0
set protocols rsvp interface ge-0/0/3.0
set protocols mpls optimize-timer 120
set protocols mpls exclude-srlg
set protocols mpls label-switched-path pe1-pe2 to 10.255.0.7
set protocols mpls label-switched-path pe1-pe2 primary via-p1
set protocols mpls label-switched-path pe1-pe2 secondary path2 standby
set protocols mpls path via-p1 10.255.0.2 strict
set protocols mpls path path2
set protocols mpls interface ge-0/0/1.0
set protocols mpls interface ge-0/0/2.0
set protocols mpls interface ge-0/0/3.0
set protocols ospf traffic-engineering
  
```

```

set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface ge-0/0/2.0
set protocols ospf area 0.0.0.0 interface ge-0/0/3.0
set protocols ospf area 0.0.0.0 interface lo0.0

```

**Step-by-Step Procedure** The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see the *CLI User Guide*.

1. Configure the device interfaces.

```

[edit interfaces]
user@PE1# set ge-0/0/1 unit 0 family inet address 192.168.12.1/24
user@PE1# set ge-0/0/1 unit 0 family mpls
user@PE1# set ge-0/0/2 unit 0 family inet address 192.168.13.1/24
user@PE1# set ge-0/0/2 unit 0 family mpls
user@PE1# set ge-0/0/3 unit 0 family inet address 192.168.14.1/24
user@PE1# set ge-0/0/3 unit 0 family mpls
user@PE1# set lo0 unit 0 family inet address 10.255.0.1/32

```

2. Configure OSPF on the interfaces.

```

[edit protocols ospf]
user@PE1# set traffic-engineering
user@PE1# set area 0.0.0.0 interface ge-0/0/1.0
user@PE1# set area 0.0.0.0 interface ge-0/0/2.0
user@PE1# set area 0.0.0.0 interface ge-0/0/3.0
user@PE1# set area 0.0.0.0 interface lo0.0

```

3. Configure the SRLG definitions.

```

[edit routing-options]
user@PE1# set routing-options srlg srlg-a srlg-value 101

```

4. Configure MPLS and the LSPs.

```

[edit protocols mpls]
user@PE1# set interface ge-0/0/1.0
user@PE1# set interface ge-0/0/2.0
user@PE1# set interface ge-0/0/3.0
user@PE1# set optimize-timer 120
user@PE1# set exclude-srlg
user@PE1# set label-switched-path pe1-pe2 to 10.255.0.7
user@PE1# set label-switched-path pe1-pe2 primary via-p1
user@PE1# set label-switched-path pe1-pe2 secondary path2 standby
user@PE1# set path via-p1 10.255.0.2 strict
user@PE1# set path path2

```

5. Configure the **exclude-srlg** statement to forcibly keep the links for the secondary path completely disjoint from the primary LSP path.

```

user@PE1 set protocols mpls exclude-srlg

```

6. Enable RSVP on the interfaces.

```

[edit protocols rsvp]
user@PE1# set interface ge-0/0/1.0
user@PE1# set interface ge-0/0/2.0
user@PE1# set interface ge-0/0/3.0

```

**Results** From configuration mode, confirm your configuration by entering the **show interfaces**, **show protocols ospf**, **show routing-options**, **show protocols mpls**, and **show protocols rsvp** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@PE1# show interfaces
interfaces {
  ge-0/0/1 {
    unit 0 {
      family inet {
        address 192.168.12.1/24;
      }
      family mpls;
    }
  }
  ge-0/0/2 {
    unit 0 {
      family inet {
        address 192.168.13.1/24;
      }
      family mpls;
    }
  }
  ge-0/0/3 {
    unit 0 {
      family inet {
        address 192.168.14.1/24;
      }
      family mpls;
    }
  }
  lo0 {
    unit 0 {
      family inet {
        address 10.255.0.1/32;
      }
    }
  }
}

user@PE1# show protocols ospf
traffic-engineering;
area 0.0.0.0 {
  interface ge-0/0/1.0;;
  interface ge-0/0/2.0;
  interface ge-0/0/3.0;
  interface lo0.0;
}

user@PE1# show protocols mpls
optimize-timer 120;
label-switched-path pe1-pe2 {
  to 10.255.0.7;
  primary via-p1;
  secondary path2 {
    standby;
  }
}
```

```

    }
  }
  path via-p1 {
    10.255.0.2 strict;
  }
  path path2;
  interface ge-0/0/1.0;
  interface ge-0/0/2.0;
  interface ge-0/0/3.0;

  user@PE1# show protocols rsvp
  interface ge-0/0/1.0;
  interface ge-0/0/2.0;
  interface ge-0/0/3.0;

  user@PE1# show routing-options
  routing-options {
    srlg {
      srlg-a srlg-value 101;
    }
  }
}

```

If you are done configuring the device, enter **commit** from configuration mode.



**NOTE:** Repeat this procedure for every Juniper Networks router in the IGP domain, after modifying the appropriate interface names, addresses, and any other parameters for each router.

## Verification

Confirm that the configuration is working properly.

### Verifying the Secondary Path Link for the LSP

**Purpose** Verify that the link for the secondary path is completely disjoint from the primary path.

**Action** user@PE1> show mpls lsp detail  
Ingress LSP: 1 sessions

```

10.255.0.7
  From: 10.255.0.1, State: Up, ActiveRoute: 0, LSPname: pe1-pe2
  ActivePath: via-p1 (primary)
  LSPtype: Static Configured
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary via-p1 State: Up
    Priorities: 7 0
    OptimizeTimer: 120
    SmartOptimizeTimer: 180
    SRLG: srlg-a
    Reoptimization in 77 second(s).
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 2)
192.168.12.2 S 192.168.27.7 S
  Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
20=Node-ID):
    192.168.12.2 192.168.27.7
  Standby path2 State: Up
    Priorities: 7 0
    OptimizeTimer: 120
    SmartOptimizeTimer: 180
    Reoptimization in 106 second(s).
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 4)
192.168.14.4 S 192.168.45.5 S 192.168.56.6 S 192.168.67.7 S
  Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
20=Node-ID):
    192.168.14.4 192.168.45.5 192.168.56.6 192.168.67.7
Total 1 displayed, Up 1, Down 0

Link P1->PE2: SRLG srlg-a
Link P2->PE2: SRLG srlg-a

Primary path: PE1-P1-PE2 (CSPF metric: 2)
Standby secondary: PE1-P3-P4-P5-PE2 (CSPF metric: 4)

```

**Meaning** Primary path includes SRLG **srlg-a**. For the standby secondary path, the link P2>PE2 belongs to SRLG **srlg-a**. CSPF rejects link P2>PE2 because the link belongs to the SRLG **srlg-a**.

- Related Documentation**
- [SRLG Overview on page 90](#)
  - [Example: Configuring SRLG on page 92](#)
  - [exclude-srlg on page 1429](#)

## Example: Configuring SRLG with Link Protection

This example shows how to configure SRLG with link protection without the **exclude-srlg** option.

- [Requirements on page 107](#)
- [Overview on page 107](#)



- [Configuration on page 107](#)
- [Verification on page 125](#)

## Requirements

This example uses the following hardware and software components:


- M Series, MX Series, or T Series devices
- Junos OS Release 11.4 or later running on all the devices

## Overview

In this example, PE1 is the ingress router and PE2 is the egress router. P1, P2, and P3, P4, and P5 are transit routers. OSPF is configured on all the routers as the interior gateway protocol (IGP). SRLG is configured on all seven routers. The link P1>PE2 (primary path) and the link P2>PE2 belong to SRLG srlg-a.

You configure link protection for the interface P1>PE2 by including the **link-protection** statement.

When SRLG srlg-a is configured on the link P1>PE2 and P2>PE2, the bypass takes the longer path P1>P4>P5>PE2, not selecting the link P2>PE2 because of the added SRLG cost for srlg-a.

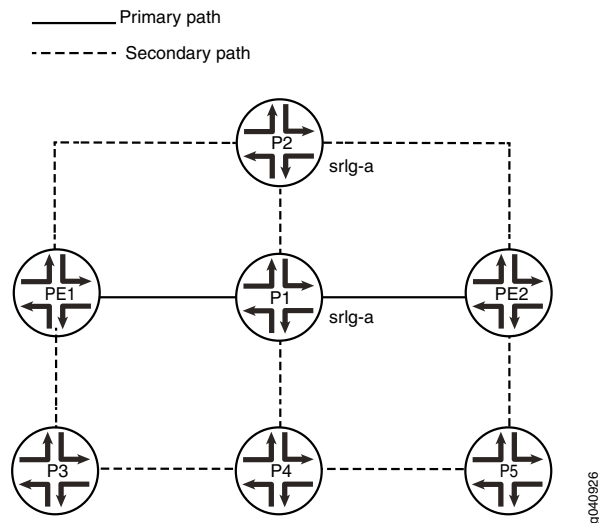

## Configuration

### CLI Quick Configuration

To quickly configure this section of the example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

**Router PE1**

```
set interfaces ge-0/0/1 unit 0 family inet address 192.168.12.1/24
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 192.168.13.1/24
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces ge-0/0/3 unit 0 family inet address 192.168.14.1/24
set interfaces ge-0/0/3 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.0.1/32
set routing-options srlg srlg-a srlg-value 101
set routing-options srlg srlg-a srlg-cost 10
set protocols rsvp interface ge-0/0/1.0
set protocols rsvp interface ge-0/0/2.0
set protocols rsvp interface ge-0/0/3.0
set protocols mpls optimize-timer 120
set protocols mpls label-switched-path pe1-pe2 to 10.255.0.7
set protocols mpls label-switched-path pe1-pe2 link-protection
set protocols mpls label-switched-path pe1-pe2 primary via-p1
set protocols mpls label-switched-path pe1-pe2 secondary path2 standby
set protocols mpls path via-p1 10.255.0.2 strict
set protocols mpls path path2
set protocols mpls interface ge-0/0/1.0
set protocols mpls interface ge-0/0/2.0
set protocols mpls interface ge-0/0/3.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface ge-0/0/2.0
set protocols ospf area 0.0.0.0 interface ge-0/0/3.0
set protocols ospf area 0.0.0.0 interface lo0.0
```

**Router P1**

```
set interfaces ge-0/0/1 unit 0 family inet address 192.168.12.2/24
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 192.168.27.2/24
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces ge-0/0/3 unit 0 family inet address 192.168.23.2/24
set interfaces ge-0/0/3 unit 0 family mpls
set interfaces ge-0/0/4 unit 0 family inet address 192.168.25.2/24
set interfaces ge-0/0/4 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.0.2/32
set routing-options srlg srlg-a srlg-value 101
set routing-options srlg srlg-a srlg-cost 10
set protocols rsvp interface ge-0/0/1.0
set protocols rsvp interface ge-0/0/2.0 link-protection
set protocols rsvp interface ge-0/0/3.0
set protocols rsvp interface ge-0/0/4.0
set protocols mpls interface ge-0/0/1.0
set protocols mpls interface ge-0/0/2.0 srlg srlg-a
set protocols mpls interface ge-0/0/3.0
set protocols mpls interface ge-0/0/4.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface ge-0/0/2.0
set protocols ospf area 0.0.0.0 interface ge-0/0/3.0
set protocols ospf area 0.0.0.0 interface ge-0/0/4.0
set protocols ospf area 0.0.0.0 interface lo0.0
```

**Router P2**      set interfaces ge-0/0/1 unit 0 family inet address 192.168.13.3/24

```

set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 192.168.37.3/24
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces ge-0/0/3 unit 0 family inet address 192.168.23.3/24
set interfaces ge-0/0/3 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.0.3/32
set routing-options srlg srlg-a srlg-value 101
set routing-options srlg srlg-a srlg-cost 10
set protocols rsvp interface ge-0/0/1.0
set protocols rsvp interface ge-0/0/2.0
set protocols rsvp interface ge-0/0/3.0
set protocols mpls interface ge-0/0/1.0
set protocols mpls interface ge-0/0/2.0 srlg srlg-a
set protocols mpls interface ge-0/0/3.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface ge-0/0/2.0
set protocols ospf area 0.0.0.0 interface ge-0/0/3.0
set protocols ospf area 0.0.0.0 interface lo0.0

```

Router P3

```

set interfaces ge-0/0/1 unit 0 family inet address 192.168.14.4/24
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 192.168.45.4/24
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.0.4/32
set routing-options srlg srlg-a srlg-value 101
set routing-options srlg srlg-a srlg-cost 10
set protocols rsvp interface ge-0/0/1.0
set protocols rsvp interface ge-0/0/2.0
set protocols mpls interface ge-0/0/1.0
set protocols mpls interface ge-0/0/2.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface ge-0/0/2.0
set protocols ospf area 0.0.0.0 interface lo0.0

```

Router P4

```

set interfaces ge-0/0/1 unit 0 family inet address 192.168.45.5/24
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 192.168.56.5/24
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces ge-0/0/3 unit 0 family inet address 192.168.25.5/24
set interfaces ge-0/0/3 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.0.5/32
set routing-options srlg srlg-a srlg-value 101
set routing-options srlg srlg-a srlg-cost 10
set protocols rsvp interface ge-0/0/1.0
set protocols rsvp interface ge-0/0/2.0
set protocols rsvp interface ge-0/0/3.0
set protocols mpls interface ge-0/0/1.0
set protocols mpls interface ge-0/0/2.0
set protocols mpls interface ge-0/0/3.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface ge-0/0/2.0
set protocols ospf area 0.0.0.0 interface ge-0/0/3.0

```

```
set protocols ospf area 0.0.0.0 interface lo0.0
```

**Router P5**

```
set interfaces ge-0/0/1 unit 0 family inet address 192.168.56.6/24
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 192.168.67.6/24
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.0.6/32
set routing-options srlg srlg-a srlg-value 101
set routing-options srlg srlg-a srlg-cost 10
set protocols rsvp interface ge-0/0/1.0
set protocols rsvp interface ge-0/0/2.0
set protocols mpls interface ge-0/0/1.0
set protocols mpls interface ge-0/0/2.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface ge-0/0/2.0
set protocols ospf area 0.0.0.0 interface lo0.0
```

**Router PE2**

```
set interfaces ge-0/0/1 unit 0 family inet address 192.168.27.7/24
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 192.168.37.7/24
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces ge-0/0/3 unit 0 family inet address 192.168.67.7/24
set interfaces ge-0/0/3 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.0.7/32
set routing-options srlg srlg-a srlg-value 101
set routing-options srlg srlg-a srlg-cost 10
set protocols rsvp interface ge-0/0/1.0
set protocols rsvp interface ge-0/0/2.0
set protocols rsvp interface ge-0/0/3.0
set protocols mpls interface ge-0/0/1.0
set protocols mpls interface ge-0/0/2.0
set protocols mpls interface ge-0/0/3.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface ge-0/0/2.0
set protocols ospf area 0.0.0.0 interface ge-0/0/3.0
set protocols ospf area 0.0.0.0 interface lo0.0
```

---

### Configuring Device PE1

**Step-by-Step Procedure** The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see the *CLI User Guide*.

To configure the ingress router PE1:

1. Configure the device interfaces.

```
[edit interfaces]
user@PE1# set ge-0/0/1 unit 0 family inet address 192.168.12.1/24
user@PE1# set ge-0/0/1 unit 0 family mpls
user@PE1# set ge-0/0/2 unit 0 family inet address 192.168.13.1/24
user@PE1# set ge-0/0/2 unit 0 family mpls
user@PE1# set ge-0/0/3 unit 0 family inet address 192.168.14.1/24
user@PE1# set ge-0/0/3 unit 0 family mpls
```

```
user@PE1# set lo0 unit 0 family inet address 10.255.0.1/32
```

2. Configure OSPF on the interfaces.

```
[edit protocols ospf]
user@PE1# set traffic-engineering
user@PE1# set area 0.0.0.0 interface ge-0/0/1.0
user@PE1# set area 0.0.0.0 interface ge-0/0/2.0
user@PE1# set area 0.0.0.0 interface ge-0/0/3.0
user@PE1# set area 0.0.0.0 interface lo0.0
```

3. Configure the SRLG definitions.

```
[edit routing-options]
user@PE1# set srlg srlg-a srlg-value 101
user@PE1# set srlg srlg-a srlg-cost 10
```

4. Configure MPLS and the LSPs and configure link protection for the **pe1-pe2** LSP.

```
[edit protocols mpls]
user@PE1# set interface ge-0/0/1.0
user@PE1# set interface ge-0/0/2.0
user@PE1# set interface ge-0/0/3.0
user@PE1# set optimize-timer 120
user@PE1# set label-switched-path pe1-pe2 to 10.255.0.7
user@PE1# set protocols mpls label-switched-path pe1-pe2 link-protection
user@PE1# set label-switched-path pe1-pe2 primary via-p1
user@PE1# set label-switched-path pe1-pe2 secondary path2 standby
user@PE1# set path via-p1 10.255.0.2 strict
user@PE1# set path path2
```

5. Enable RSVP on the interfaces.

```
[edit protocols rsvp]
user@PE1# set interface ge-0/0/1.0
user@PE1# set interface ge-0/0/2.0
user@PE1# set interface ge-0/0/3.0
```

**Results** From configuration mode, confirm your configuration by entering the **show interfaces**, **show protocols ospf**, **show routing-options**, **show protocols mpls**, and **show protocols rsvp** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@PE1# show interfaces
ge-0/0/1 {
  unit 0 {
    family inet {
      address 192.168.12.1/24;
    }
    family mpls;
  }
}
ge-0/0/2 {
  unit 0 {
    family inet {
      address 192.168.13.1/24;
    }
    family mpls;
  }
}
```

```
    }  
  }  
  ge-0/0/3 {  
    unit 0 {  
      family inet {  
        address 192.168.14.1/24;  
      }  
      family mpls;  
    }  
  }  
  lo0 {  
    unit 0 {  
      family inet {  
        address 10.255.0.1/32;  
      }  
    }  
  }  
}  
  
user@PE1# show protocols ospf  
traffic-engineering;  
area 0.0.0.0 {  
  interface ge-0/0/1.0;  
  interface ge-0/0/2.0;  
  interface ge-0/0/3.0;  
  interface lo0.0;  
}  
  
user@PE1# show protocols mpls  
optimize-timer 120;  
label-switched-path pe1-pe2 {  
  to 10.255.0.7;  
  link-protection;  
  primary via-p1;  
  secondary path2 {  
    standby;  
  }  
}  
path via-p1 {  
  10.255.0.2 strict;  
}  
path path2;  
interface ge-0/0/1.0;  
interface ge-0/0/2.0;  
interface ge-0/0/3.0;  
  
user@PE1# show protocols rsvp  
interface ge-0/0/1.0;  
interface ge-0/0/2.0;  
interface ge-0/0/3.0;  
  
user@PE1# show routing-options  
srlg {  
  srlg-a {  
    srlg-value 101;  
    srlg-cost 10;  
  }  
}
```

```
}
```

If you are done configuring the device, enter **commit** from configuration mode.

### Configuring Device P1

#### Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see the *CLI User Guide*.

To configure device P1:

1. Configure the device interfaces.

##### [edit interfaces]

```
user@P1# set ge-0/0/1 unit 0 family inet address 192.168.12.2/24
user@P1# set ge-0/0/1 unit 0 family mpls
user@P1# set ge-0/0/2 unit 0 family inet address 192.168.27.2/24
user@P1# set ge-0/0/2 unit 0 family mpls
user@P1# set ge-0/0/3 unit 0 family inet address 192.168.23.2/24
user@P1# set ge-0/0/3 unit 0 family mpls
user@P1# set ge-0/0/4 unit 0 family inet address 192.168.25.2/24
user@P1# set ge-0/0/4 unit 0 family mpls
user@P1# set lo0 unit 0 family inet address 10.255.0.2/32
```

2. Configure OSPF on the interfaces.

##### [edit protocols ospf]

```
user@P1# set traffic-engineering
user@P1# set area 0.0.0.0 interface ge-0/0/1.0
user@P1# set area 0.0.0.0 interface ge-0/0/2.0
user@P1# set area 0.0.0.0 interface ge-0/0/3.0
user@P1# set area 0.0.0.0 interface ge-0/0/4.0
user@P1# set area 0.0.0.0 interface lo0.0
```

3. Configure the SRLG definitions.

##### [edit routing-options]

```
user@P1# set srlg srlg-a srlg-value 101
user@P1# set srlg srlg-a srlg-cost 10
```

4. Configure MPLS on the interfaces and associate the SRLG **srlg-a** with interface **ge-0/0/2.0** for the P1>PE2 link.

##### [edit protocols mpls]

```
user@P1# set interface ge-0/0/1.0
user@P1# set interface ge-0/0/2.0 srlg srlg-a
user@P1# set interface ge-0/0/3.0
user@P1# set interface ge-0/0/4.0
```

5. Enable RSVP on the interfaces and configure **link-protection** for interface **ge-0/0/2.0**.

##### [edit protocols rsvp]

```
user@P1# set interface ge-0/0/1.0
user@P1# set interface ge-0/0/2.0 link-protection
user@P1# set interface ge-0/0/3.0
user@P1# set interface ge-0/0/4.0
```

**Results** From configuration mode, confirm your configuration by entering the **show interfaces**, **show protocols ospf**, **show protocols mpls**, **show protocols rsvp**, and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@P1# show interfaces
ge-0/0/1 {
  unit 0 {
    family inet {
      address 192.168.12.2/24;
    }
    family mpls;
  }
}
ge-0/0/2 {
  unit 0 {
    family inet {
      address 192.168.27.2/24;
    }
    family mpls;
  }
}
ge-0/0/3 {
  unit 0 {
    family inet {
      address 192.168.23.2/24;
    }
    family mpls;
  }
}
ge-0/0/4 {
  unit 0 {
    family inet {
      address 192.168.25.2/24;
    }
    family mpls;
  }
}
lo0 {
  unit 0 {
    family inet {
      address 10.255.0.2/32;
    }
  }
}

user@P1# show protocols ospf
traffic-engineering;
area 0.0.0.0 {
  interface ge-0/0/1.0;
  interface ge-0/0/2.0;
  interface ge-0/0/3.0;
  interface ge-0/0/4.0;
  interface lo0.0;
}
```



```

user@P1# show protocols mpls
interface ge-0/0/1.0;
interface ge-0/0/2.0 {
  srlg srlg-a;
}
interface ge-0/0/3.0;
interface ge-0/0/4.0;

user@P1# show protocols rsvp
interface ge-0/0/1.0;
interface ge-0/0/2.0 {
  link-protection;
}
interface ge-0/0/3.0;
interface ge-0/0/4.0;

user@P1# show routing-options
srlg {
  srlg-a {
    srlg-value 101;
    srlg-cost 10;
  }
}

```

If you are done configuring the device, enter **commit** from configuration mode.

### Configuring Device P2

**Step-by-Step Procedure** The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see the *CLI User Guide*.

To configure P2:

1. Configure the device interfaces.

```

[edit interfaces]
user@P2# set ge-0/0/1 unit 0 family inet address 192.168.13.3/24
user@P2# set ge-0/0/1 unit 0 family mpls
user@P2# set ge-0/0/2 unit 0 family inet address 192.168.37.3/24
user@P2# set ge-0/0/2 unit 0 family mpls
user@P2# set ge-0/0/3 unit 0 family inet address 192.168.23.3/24
user@P2# set ge-0/0/3 unit 0 family mpls
user@P2# set lo0 unit 0 family inet address 10.255.0.3/32

```

2. Configure OSPF on the interfaces.

```

[edit protocols ospf]
user@P2# set traffic-engineering
user@P2# set area 0.0.0.0 interface ge-0/0/1.0
user@P2# set area 0.0.0.0 interface ge-0/0/2.0
user@P2# set area 0.0.0.0 interface ge-0/0/3.0
user@P2# set area 0.0.0.0 interface lo0.0

```

3. Configure the SRLG definitions.

```

[edit routing-options]
user@P2# set srlg srlg-a srlg-value 101
user@P2# set srlg srlg-a srlg-cost 10

```

4. Configure MPLS on the interfaces and associate the SRLG **srlg-a** with interface **ge-0/0/2.0** for the P2>PE2 link.

```
[edit protocols mpls]
user@P2# set interface ge-0/0/1.0
user@P2# set interface ge-0/0/2.0 srlg srlg-a
user@P2# set interface ge-0/0/3.0
```

5. Enable RSVP on the interfaces.

```
[edit protocols rsvp]
user@P2# set interface ge-0/0/1.0
user@P2# set interface ge-0/0/2.0
user@P2# set interface ge-0/0/3.0
```

**Results** From configuration mode, confirm your configuration by entering the **show interfaces**, **show protocols ospf**, **show protocols mpls**, **show protocols rsvp**, and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@P2# show interfaces
ge-0/0/1 {
  unit 0 {
    family inet {
      address 192.168.13.3/24;
    }
    family mpls;
  }
}
ge-0/0/2 {
  unit 0 {
    family inet {
      address 192.168.37.3/24;
    }
    family mpls;
  }
}
ge-0/0/3 {
  unit 0 {
    family inet {
      address 192.168.23.3/24;
    }
    family mpls;
  }
}
lo0 {
  unit 0 {
    family inet {
      address 10.255.0.3/32;
    }
  }
}
}
}

user@P2# show protocols ospf
traffic-engineering;
```

```

area 0.0.0.0 {
    interface ge-0/0/1.0;
    interface ge-0/0/2.0;
    interface ge-0/0/3.0;
    interface lo0.0;
}

user@P2# show protocols mpls
interface ge-0/0/1.0;
interface ge-0/0/2.0 {
    srlg srlg-a;
}
interface ge-0/0/3.0;
}

user@P2# show protocols rsvp
interface ge-0/0/1.0;
interface ge-0/0/2.0;
interface ge-0/0/3.0;

user@P2# show routing-options
srlg {
    srlg-a {
        srlg-value 101;
        srlg-cost 10;
    }
}

```

If you are done configuring the device, enter **commit** from configuration mode.

### Configuring Device P3

#### Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see the *CLI User Guide*.

To configure P3:

1. Configure the device interfaces.

#### [edit interfaces]

```

user@P3# set ge-0/0/1 unit 0 family inet address 192.168.14.4/24
user@P3# set ge-0/0/1 unit 0 family mpls
user@P3# set ge-0/0/2 unit 0 family inet address 192.168.45.4/24
user@P3# set ge-0/0/2 unit 0 family mpls
user@P3# set lo0 unit 0 family inet address 10.255.0.4/32

```

2. Configure OSPF on the interfaces.

#### [edit protocols ospf]

```

user@P3# set traffic-engineering
user@P3# set area 0.0.0.0 interface ge-0/0/1.0
user@P3# set area 0.0.0.0 interface ge-0/0/2.0
user@P3# set area 0.0.0.0 interface lo0.0

```

3. Configure the SRLG definitions.

#### [edit routing-options]

```

user@P3# set srlg srlg-a srlg-value 101
user@P3# set srlg srlg-a srlg-cost 10

```

4. Configure MPLS on the interfaces.

```
[edit protocols mpls]
user@P3# set interface ge-0/0/1.0
user@P3# set interface ge-0/0/2.0
```

5. Enable RSVP on the interfaces.

```
[edit protocols rsvp]
user@P3# set interface ge-0/0/1.0
user@P3# set interface ge-0/0/2.0
```

**Results** From configuration mode, confirm your configuration by entering the **show interfaces**, **show protocols ospf**, **show protocols mpls**, **show protocols rsvp**, and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@P3# show interfaces
interfaces {
  ge-0/0/1 {
    unit 0 {
      family inet {
        address 192.168.14.4/24;
      }
      family mpls;
    }
  }
  ge-0/0/2 {
    unit 0 {
      family inet {
        address 192.168.45.4/24;
      }
      family mpls;
    }
  }
  lo0 {
    unit 0 {
      family inet {
        address 10.255.0.4/32;
      }
    }
  }
}

user@P3# show protocols ospf
traffic-engineering;
area 0.0.0.0 {
  interface ge-0/0/1.0;
  interface ge-0/0/2.0;
  interface lo0.0;
}

user@P3# show protocols mpls
interface ge-0/0/1.0;
interface ge-0/0/2.0;

user@P3# show protocols rsvp
```

```

interface ge-0/0/1.0;
interface ge-0/0/2.0;

user@P3# show routing-options
srlg {
  srlg-a {
    srlg-value 101;
    srlg-cost 10;
  }
}

```

If you are done configuring the device, enter **commit** from configuration mode.

### Configuring Device P4

**Step-by-Step Procedure** The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see the *CLI User Guide*.

To configure P4:

1. Configure the device interfaces.

```

[edit interfaces]
user@P4# set ge-0/0/1 unit 0 family inet address 192.168.45.5/24
user@P4# set ge-0/0/1 unit 0 family mpls
user@P4# set ge-0/0/2 unit 0 family inet address 192.168.56.5/24
user@P4# set ge-0/0/2 unit 0 family mpls
user@P4# set ge-0/0/3 unit 0 family inet address 192.168.25.5/24
user@P4# set ge-0/0/3 unit 0 family mpls
user@P4# set lo0 unit 0 family inet address 10.255.0.5/32

```

2. Configure OSPF on the interfaces.

```

[edit protocols ospf]
user@P4# set traffic-engineering
user@P4# set area 0.0.0.0 interface ge-0/0/1.0
user@P4# set area 0.0.0.0 interface ge-0/0/2.0
user@P4# set area 0.0.0.0 interface ge-0/0/3.0
user@P4# set area 0.0.0.0 interface lo0.0

```

3. Configure the SRLG definitions.

```

[edit routing-options]
user@P4# set srlg srlg-a srlg-value 101
user@P4# set srlg srlg-a srlg-cost 10

```

4. Configure MPLS on the interfaces.

```

[edit protocols mpls]
user@P4# set interface ge-0/0/1.0
user@P4# set interface ge-0/0/2.0
user@P4# set interface ge-0/0/3.0

```

5. Enable RSVP on the interfaces.

```

[edit protocols rsvp]
user@P4# set interface ge-0/0/1.0
user@P4# set interface ge-0/0/2.0
user@P4# set interface ge-0/0/3.0

```

**Results** From configuration mode, confirm your configuration by entering the **show interfaces**, **show protocols ospf**, **show protocols mpls**, **show protocols rsvp**, and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@P4# show interfaces
ge-0/0/1 {
  unit 0 {
    family inet {
      address 192.168.45.5/24;
    }
    family mpls;
  }
}
ge-0/0/2 {
  unit 0 {
    family inet {
      address 192.168.56.5/24;
    }
    family mpls;
  }
}
ge-0/0/3 {
  unit 0 {
    family inet {
      address 192.168.25.5/24;
    }
    family mpls;
  }
}
lo0 {
  unit 0 {
    family inet {
      address 10.255.0.5/32;
    }
  }
}

user@P4# show protocols ospf
traffic-engineering;
area 0.0.0.0 {
  interface ge-0/0/1.0;
  interface ge-0/0/2.0;
  interface ge-0/0/3.0;
  interface lo0.0;
}

user@P4# show protocols mpls
interface ge-0/0/1.0;
interface ge-0/0/2.0;
interface ge-0/0/3.0;

user@P4# show protocols rsvp
interface ge-0/0/1.0;
interface ge-0/0/2.0;
interface ge-0/0/3.0;
```

```

user@P4# show routing-options
srlg {
  srlg-a {
    srlg-value 101;
    srlg-cost 10;
  }
}

```

If you are done configuring the device, enter **commit** from configuration mode.

### Configuring Device P5

**Step-by-Step Procedure** The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see the *CLI User Guide*.

To configure P5:

1. Configure the device interfaces.

```

[edit interfaces]
user@P5# set ge-0/0/1 unit 0 family inet address 192.168.56.6/24
user@P5# set ge-0/0/1 unit 0 family mpls
user@P5# set ge-0/0/2 unit 0 family inet address 192.168.67.6/24
user@P5# set ge-0/0/2 unit 0 family mpls
user@P5# set lo0 unit 0 family inet address 10.255.0.6/32

```

2. Configure OSPF on the interfaces.

```

[edit protocols ospf]
user@P5# set traffic-engineering
user@P5# set area 0.0.0.0 interface ge-0/0/1.0
user@P5# set area 0.0.0.0 interface ge-0/0/2.0
user@P5# set area 0.0.0.0 interface lo0.0

```

3. Configure the SRLG definitions.

```

[edit routing-options]
user@P5# set srlg srlg-a srlg-value 101
user@P5# set srlg srlg-a srlg-cost 10

```

4. Configure MPLS on the interfaces.

```

[edit protocols mpls]
user@P5# set interface ge-0/0/1.0
user@P5# set interface ge-0/0/2.0

```

5. Enable RSVP on the interfaces.

```

[edit protocols rsvp]
user@P5# set interface ge-0/0/1.0
user@P5# set interface ge-0/0/2.0

```

**Results** From configuration mode, confirm your configuration by entering the **show interfaces**, **show protocols ospf**, **show protocols mpls**, **show protocols rsvp**, and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```

user@P5# show interfaces

```

```
ge-0/0/1 {  
  unit 0 {  
    family inet {  
      address 192.168.56.6/24;  
    }  
    family mpls;  
  }  
}  
ge-0/0/2 {  
  unit 0 {  
    family inet {  
      address 192.168.67.6/24;  
    }  
    family mpls;  
  }  
}  
lo0 {  
  unit 0 {  
    family inet {  
      address 10.255.0.6/32;  
    }  
  }  
}
```

```
user@P5# show protocols ospf  
traffic-engineering;  
area 0.0.0.0 {  
  interface ge-0/0/1.0;  
  interface ge-0/0/2.0;  
  interface lo0.0;  
}
```

```
user@P5# show protocols mpls  
interface ge-0/0/1.0;  
interface ge-0/0/2.0;
```

```
user@P5# show protocols rsvp  
interface ge-0/0/1.0;  
interface ge-0/0/2.0;
```

```
user@P5# show routing-options  
srlg {  
  srlg-a {  
    srlg-value 101;  
    srlg-cost 10;  
  }  
}
```

If you are done configuring the device, enter **commit** from configuration mode.



## Configuring Device PE2

**Step-by-Step Procedure** The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see the *CLI User Guide*.

To configure PE2:

1. Configure the device interfaces.

```
[edit interfaces]
user@PE2# set ge-0/0/1 unit 0 family inet address 192.168.27.7/24
user@PE2# set ge-0/0/1 unit 0 family mpls
user@PE2# set ge-0/0/2 unit 0 family inet address 192.168.37.7/24
user@PE2# set ge-0/0/2 unit 0 family mpls
user@PE2# set ge-0/0/3 unit 0 family inet address 192.168.67.7/24
user@PE2# set ge-0/0/3 unit 0 family mpls
user@PE2# set lo0 unit 0 family inet address 10.255.0.7/32
```

2. Configure OSPF on the interfaces.

```
[edit protocols ospf]
user@PE2# set traffic-engineering
user@PE2# set area 0.0.0.0 interface ge-0/0/1.0
user@PE2# set area 0.0.0.0 interface ge-0/0/2.0
user@PE2# set area 0.0.0.0 interface ge-0/0/3.0
user@PE2# set area 0.0.0.0 interface lo0.0
```

3. Configure the SRLG definitions.

```
[edit routing-options]
user@PE2# set srlg srlg-a srlg-value 101
user@PE2# set srlg srlg-a srlg-cost 10
```

4. Configure MPLS on the interfaces.

```
[edit protocols mpls]
user@PE2# set interface ge-0/0/1.0
user@PE2# set interface ge-0/0/2.0
user@PE2# set interface ge-0/0/3.0
```

5. Enable RSVP on the interfaces.

```
[edit protocols rsvp]
user@PE2# set interface ge-0/0/1.0
user@PE2# set interface ge-0/0/2.0
user@PE2# set interface ge-0/0/3.0
```

**Results** From configuration mode, confirm your configuration by entering the **show interfaces**, **show protocols ospf**, **show protocols mpls**, **show protocols rsvp**, and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@PE2# show interfaces
interfaces {
  ge-0/0/1 {
    unit 0 {
      family inet {
        address 192.168.27.7/24;
```

```
    }
    family mpls;
  }
}
ge-0/0/2 {
  unit 0 {
    family inet {
      address 192.168.37.7/24;
    }
    family mpls;
  }
}
ge-0/0/3 {
  unit 0 {
    family inet {
      address 192.168.67.7/24;
    }
    family mpls;
  }
}
lo0 {
  unit 0 {
    family inet {
      address 10.255.0.7/32;
    }
  }
}
}
```

```
user@PE2# show protocols ospf
traffic-engineering;
area 0.0.0.0 {
  interface ge-0/0/1.0;
  interface ge-0/0/2.0;
  interface ge-0/0/3.0;
  interface lo0.0;
}
```

```
user@PE2# show protocols mpls
interface ge-0/0/1.0;
interface ge-0/0/2.0;
interface ge-0/0/3.0;
```

```
user@PE2# show protocols rsvp
interface ge-0/0/1.0;
interface ge-0/0/2.0;
interface ge-0/0/3.0;
```

```
user@PE2# show routing-options
srlg {
  srlg-a {
    srlg-value 101;
    srlg-cost 10;
  }
}
```

If you are done configuring the device, enter **commit** from configuration mode.

## Verification

Confirm that the configuration is working properly.

### Verifying the SRLG Cost Is Added to the TE Link

**Purpose** Verify that the SRLG cost is added to the TE link if it belongs to the SRLG of the protected link. Issue the **show ted link detail** and **show rsvp session extensive bypass** commands on device P1.

**Action** user@P1> show ted link detail

```
...
10.255.0.2->192.168.27.7-1, Local: 192.168.27.2, Remote: 0.0.0.0
  Local interface index: 0, Remote interface index: 0
  LocalPath: 0, Metric: 1, StaticBW: 1000Mbps, AvailBW: 1000Mbps
  Color: 0 <none>
  SRLGs: srlg-a
    localBW [0] 0bps [1] 0bps [2] 0bps [3] 0bps
    localBW [4] 0bps [5] 0bps [6] 0bps [7] 0bps
[...]
```

```
10.255.0.3->192.168.37.7-1, Local: 192.168.37.3, Remote: 0.0.0.0
  Local interface index: 0, Remote interface index: 0
  LocalPath: 0, Metric: 1, StaticBW: 1000Mbps, AvailBW: 1000Mbps
  Color: 0 <none>
  SRLGs: srlg-a
    localBW [0] 0bps [1] 0bps [2] 0bps [3] 0bps
    localBW [4] 0bps [5] 0bps [6] 0bps [7] 0bps
...
```

user@P1> show rsvp session extensive bypass

Ingress RSVP: 1 sessions

```
10.255.0.7
  From: 10.255.0.2, LSPstate: Up, ActiveRoute: 0
  LSPname: Bypass->192.168.27.7
  LSPtype: Static Configured
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 299776
  Resv style: 1 SE, Label in: -, Label out: 299776
  Time left: -, Since: Fri Oct 21 13:19:21 2011
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 52081 protocol 0
  Type: Bypass LSP
    Number of data route tunnel through: 1
    Number of RSVP session tunnel through: 0
  PATH rcvfrom: localclient
  Adspec: sent MTU 1500
  Path MTU: received 1500
  PATH sentto: 192.168.25.5 (ge-0/0/4.0) 26 pkts
  RESV rcvfrom: 192.168.25.5 (ge-0/0/4.0) 26 pkts
  Explct route: 192.168.25.5 192.168.56.6 192.168.67.7
  Record route: <self> 192.168.25.5 192.168.56.6 192.168.67.7
Total 1 displayed, Up 1, Down 0
```

**Meaning** The shortest path for the bypass protecting the link P1->PE2 would have been P1->P2->PE2. Because the links P1>PE2 and P2>PE2 both belong to SRLG **srlg-a**, the SRLG cost of 10 for **srlg-a** is added to the metric for the link P2>PE2. This makes the metric for the link P2>PE2 too high to be selected for the shortest path. Therefore, the CSPF result for the computed path for the bypass becomes P1>P4>P5>PE2.

**Related Documentation**

- [SRLG Overview on page 90](#)
- [Example: Configuring SRLG on page 92](#)
- [Example: Configuring SRLG with Link Protection with the exclude-srlg Option on page 127](#)

## Example: Configuring SRLG with Link Protection with the `exclude-srlg` Option

---

This example shows how to configure SRLG with link protection with the **`exclude-srlg`** option.

- [Requirements on page 127](#)
- [Overview on page 127](#)
- [Configuration on page 128](#)
- [Verification on page 145](#)

### Requirements

This example uses the following hardware and software components:


- M Series, MX Series, or T Series devices
- Junos OS Release 11.4 or later running on all the devices

### Overview

In this example, PE1 is the ingress router and PE2 is the egress router. P1, P2, and P3, P4, and P5 are transit routers. OSPF is configured on all the routers as the interior gateway protocol (IGP). SRLG is configured on all seven routers. The link P1>PE2 (primary path) and the link P2>PE2 belong to SRLG **`srlg-a`**.

You configure link protection for the interface P1>PE2 by including the **`link-protection`** statement along with the **`exclude-srlg`** option. This makes the bypass LSP and the protected link completely disjoint in any SRLG.

When SRLG **srlg-a** is configured on the link P1>PE2 and P2>PE2, the link P2>PE2 is rejected for CSPF consideration due to the **exclude-srlg** configuration. Therefore, the computed path for the bypass becomes P1>P4>P5>PE2.

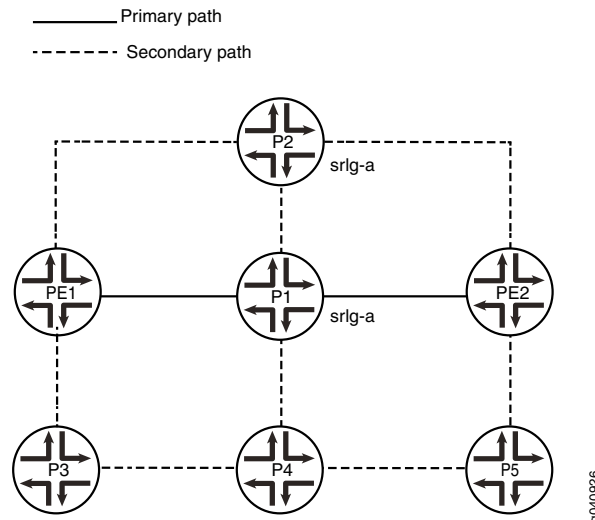

## Configuration

### CLI Quick Configuration

To quickly configure this section of the example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

#### Router PE1

```
set interfaces ge-0/0/1 unit 0 family inet address 192.168.12.1/24
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 192.168.13.1/24
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces ge-0/0/3 unit 0 family inet address 192.168.14.1/24
set interfaces ge-0/0/3 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.0.1/32
set routing-options srlg srlg-a srlg-value 101
set protocols rsvp interface ge-0/0/1.0
set protocols rsvp interface ge-0/0/2.0
set protocols rsvp interface ge-0/0/3.0
set protocols mpls optimize-timer 120
set protocols mpls label-switched-path pe1-pe2 to 10.255.0.7
set protocols mpls label-switched-path pe1-pe2 link-protection
set protocols mpls label-switched-path pe1-pe2 primary via-p1
set protocols mpls label-switched-path pe1-pe2 secondary path2 standby
set protocols mpls path via-p1 10.255.0.2 strict
set protocols mpls path path2
set protocols mpls interface ge-0/0/1.0
set protocols mpls interface ge-0/0/2.0
set protocols mpls interface ge-0/0/3.0
```

```

set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface ge-0/0/2.0
set protocols ospf area 0.0.0.0 interface ge-0/0/3.0
set protocols ospf area 0.0.0.0 interface lo0.0

```

```

Router P1
set interfaces ge-0/0/1 unit 0 family inet address 192.168.12.2/24
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 192.168.27.2/24
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces ge-0/0/3 unit 0 family inet address 192.168.23.2/24
set interfaces ge-0/0/3 unit 0 family mpls
set interfaces ge-0/0/4 unit 0 family inet address 192.168.25.2/24
set interfaces ge-0/0/4 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.0.2/32
set routing-options srlg srlg-a srlg-value 101
set routing-options srlg srlg-a srlg-cost 10
set protocols rsvp interface ge-0/0/1.0
set protocols rsvp interface ge-0/0/2.0 link-protection exclude-srlg
set protocols mpls interface ge-0/0/1.0
set protocols mpls interface ge-0/0/2.0 srlg srlg-a
set protocols mpls interface ge-0/0/3.0
set protocols mpls interface ge-0/0/4.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface ge-0/0/2.0
set protocols ospf area 0.0.0.0 interface ge-0/0/3.0
set protocols ospf area 0.0.0.0 interface ge-0/0/4.0
set protocols ospf area 0.0.0.0 interface lo0.0

```

```

Router P2
set interfaces ge-0/0/1 unit 0 family inet address 192.168.13.3/24
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 192.168.37.3/24
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces ge-0/0/3 unit 0 family inet address 192.168.23.3/24
set interfaces ge-0/0/3 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.0.3/32
set routing-options srlg srlg-a srlg-value 101
set routing-options srlg srlg-a srlg-cost 10
set protocols rsvp interface ge-0/0/1.0
set protocols rsvp interface ge-0/0/2.0
set protocols rsvp interface ge-0/0/3.0
set protocols mpls interface ge-0/0/1.0
set protocols mpls interface ge-0/0/2.0 srlg srlg-a
set protocols mpls interface ge-0/0/3.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface ge-0/0/2.0
set protocols ospf area 0.0.0.0 interface ge-0/0/3.0
set protocols ospf area 0.0.0.0 interface lo0.0

```

```

Router P3
set interfaces ge-0/0/1 unit 0 family inet address 192.168.14.4/24
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 192.168.45.4/24
set interfaces ge-0/0/2 unit 0 family mpls

```

```
set interfaces lo0 unit 0 family inet address 10.255.0.4/32
set routing-options srlg srlg-a srlg-value 101
set routing-options srlg srlg-a srlg-cost 10
set protocols rsvp interface ge-0/0/1.0
set protocols rsvp interface ge-0/0/2.0
set protocols mpls interface ge-0/0/1.0
set protocols mpls interface ge-0/0/2.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface ge-0/0/2.0
set protocols ospf area 0.0.0.0 interface lo0.0
```

**Router P4**

```
set interfaces ge-0/0/1 unit 0 family inet address 192.168.45.5/24
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 192.168.56.5/24
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces ge-0/0/3 unit 0 family inet address 192.168.25.5/24
set interfaces ge-0/0/3 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.0.5/32
set routing-options srlg srlg-a srlg-value 101
set routing-options srlg srlg-a srlg-cost 10
set protocols rsvp interface ge-0/0/1.0
set protocols rsvp interface ge-0/0/2.0
set protocols rsvp interface ge-0/0/3.0
set protocols mpls interface ge-0/0/1.0
set protocols mpls interface ge-0/0/2.0
set protocols mpls interface ge-0/0/3.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface ge-0/0/2.0
set protocols ospf area 0.0.0.0 interface ge-0/0/3.0
set protocols ospf area 0.0.0.0 interface lo0.0
```

**Router P5**

```
set interfaces ge-0/0/1 unit 0 family inet address 192.168.56.6/24
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 192.168.67.6/24
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.0.6/32
set routing-options srlg srlg-a srlg-value 101
set routing-options srlg srlg-a srlg-cost 10
set protocols rsvp interface ge-0/0/1.0
set protocols rsvp interface ge-0/0/2.0
set protocols mpls interface ge-0/0/1.0
set protocols mpls interface ge-0/0/2.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface ge-0/0/2.0
set protocols ospf area 0.0.0.0 interface lo0.0
```

**Router PE2**

```
set interfaces ge-0/0/1 unit 0 family inet address 192.168.27.7/24
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 192.168.37.7/24
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces ge-0/0/3 unit 0 family inet address 192.168.67.7/24
set interfaces ge-0/0/3 unit 0 family mpls
```



```

set interfaces lo0 unit 0 family inet address 10.255.0.7/32
set routing-options srlg srlg-a srlg-value 101
set routing-options srlg srlg-a srlg-cost 10
set protocols rsvp interface ge-0/0/1.0
set protocols rsvp interface ge-0/0/2.0
set protocols rsvp interface ge-0/0/3.0
set protocols mpls interface ge-0/0/1.0
set protocols mpls interface ge-0/0/2.0
set protocols mpls interface ge-0/0/3.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface ge-0/0/2.0
set protocols ospf area 0.0.0.0 interface ge-0/0/3.0
set protocols ospf area 0.0.0.0 interface lo0.0

```

### Configuring Device PE1

**Step-by-Step Procedure** The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see the *CLI User Guide*.

To configure the ingress router PE1:

1. Configure the device interfaces.

**[edit interfaces]**

```

user@PE1# set ge-0/0/1 unit 0 family inet address 192.168.12.1/24
user@PE1# set ge-0/0/1 unit 0 family mpls
user@PE1# set ge-0/0/2 unit 0 family inet address 192.168.13.1/24
user@PE1# set ge-0/0/2 unit 0 family mpls
user@PE1# set ge-0/0/3 unit 0 family inet address 192.168.14.1/24
user@PE1# set ge-0/0/3 unit 0 family mpls
user@PE1# set lo0 unit 0 family inet address 10.255.0.1/32

```

2. Configure OSPF on the interfaces.

**[edit protocols ospf]**

```

user@PE1# set traffic-engineering
user@PE1# set area 0.0.0.0 interface ge-0/0/1.0
user@PE1# set area 0.0.0.0 interface ge-0/0/2.0
user@PE1# set area 0.0.0.0 interface ge-0/0/3.0
user@PE1# set area 0.0.0.0 interface lo0.0

```

3. Configure the SRLG definitions.

**[edit routing-options]**

```

user@PE1# set routing-options srlg srlg-a srlg-value 101
user@PE1# set routing-options srlg srlg-a srlg-cost 10

```

4. Configure MPLS and the LSPs and configure link protection for the **pe1-pe2** LSP.

**[edit protocols mpls]**

```

user@PE1# set interface ge-0/0/1.0
user@PE1# set interface ge-0/0/2.0
user@PE1# set interface ge-0/0/3.0
user@PE1# set optimize-timer 120
user@PE1# set label-switched-path pe1-pe2 to 10.255.0.7
user@PE1# set protocols mpls label-switched-path pe1-pe2 link-protection
user@PE1# set label-switched-path pe1-pe2 primary via-pl

```

```
user@PE1# set label-switched-path pe1-pe2 secondary path2 standby
user@PE1# set path via-p1 10.255.0.2 strict
user@PE1# set path path2
```

5. Enable RSVP on the interfaces.

```
[edit protocols rsvp]
user@PE1# set interface ge-0/0/1.0
user@PE1# set interface ge-0/0/2.0
user@PE1# set interface ge-0/0/3.0
```

**Results** From configuration mode, confirm your configuration by entering the **show interfaces**, **show protocols ospf**, **show routing-options**, **show protocols mpls**, and **show protocols rsvp** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@PE1# show interfaces
ge-0/0/1 {
  unit 0 {
    family inet {
      address 192.168.12.1/24;
    }
    family mpls;
  }
}
ge-0/0/2 {
  unit 0 {
    family inet {
      address 192.168.13.1/24;
    }
    family mpls;
  }
}
ge-0/0/3 {
  unit 0 {
    family inet {
      address 192.168.14.1/24;
    }
    family mpls;
  }
}
lo0 {
  unit 0 {
    family inet {
      address 10.255.0.1/32;
    }
  }
}

user@PE1# show protocols ospf
traffic-engineering;
area 0.0.0.0 {
  interface ge-0/0/1.0;
  interface ge-0/0/2.0;
  interface ge-0/0/3.0;
```

```

    interface lo0.0;
  }

user@PE1# show protocols mpls
optimize-timer 120;
label-switched-path pe1-pe2 {
  to 10.255.0.7;
  link-protection;
  primary via-p1;
  secondary path2 {
    standby;
  }
}
path via-p1 {
  10.255.0.2 strict;
}
path path2;
interface ge-0/0/1.0;
interface ge-0/0/2.0;
interface ge-0/0/3.0;

user@PE1# show protocols rsvp
interface ge-0/0/1.0;
interface ge-0/0/2.0;
interface ge-0/0/3.0;

user@PE1# show routing-options
srlg {
  srlg-a {
    srlg-value 101;
    srlg-cost 10;
  }
}

```

If you are done configuring the device, enter **commit** from configuration mode.

### Configuring Device P1

#### Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see the *CLI User Guide*.

To configure device P1:

1. Configure the device interfaces.

#### [edit interfaces]

```

user@P1# set ge-0/0/1 unit 0 family inet address 192.168.12.2/24
user@P1# set ge-0/0/1 unit 0 family mpls
user@P1# set ge-0/0/2 unit 0 family inet address 192.168.27.2/24
user@P1# set ge-0/0/2 unit 0 family mpls
user@P1# set ge-0/0/3 unit 0 family inet address 192.168.23.2/24
user@P1# set ge-0/0/3 unit 0 family mpls
user@P1# set ge-0/0/4 unit 0 family inet address 192.168.25.2/24
user@P1# set ge-0/0/4 unit 0 family mpls
user@P1# set lo0 unit 0 family inet address 10.255.0.2/32

```

2. Configure OSPF on the interfaces.

```
[edit protocols ospf]
user@P1# set traffic-engineering
user@P1# set area 0.0.0.0 interface ge-0/0/1.0
user@P1# set area 0.0.0.0 interface ge-0/0/2.0
user@P1# set area 0.0.0.0 interface ge-0/0/3.0
user@P1# set area 0.0.0.0 interface ge-0/0/4.0
user@P1# set area 0.0.0.0 interface lo0.0
```

3. Configure the SRLG definitions.

```
[edit routing-options]
user@P1# set routing-options srlg srlg-a srlg-value 101
user@P1# set routing-options srlg srlg-a srlg-cost 10
```

4. Configure MPLS on the interfaces and associate the SRLG with interface **ge-0/0/2.0** for the P1>PE2 link.

```
[edit protocols mpls]
user@P1# set interface ge-0/0/1.0
user@P1# set interface ge-0/0/2.0 srlg srlg-a
user@P1# set interface ge-0/0/3.0
user@P1# set interface ge-0/0/4.0
```

5. Enable RSVP on the interfaces and include the **link-protection** statement with the **exclude-srlg** option for interface **ge-0/0/2.0**.

```
[edit protocols rsvp]
user@P1# set interface ge-0/0/1.0
user@P1# set interface ge-0/0/2.0 link-protection exclude-srlg
user@P1# set interface ge-0/0/3.0
user@P1# set interface ge-0/0/4.0
```

**Results** From configuration mode, confirm your configuration by entering the **show interfaces**, **show protocols ospf**, **show protocols mpls**, **show protocols rsvp**, and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@P1# show interfaces
ge-0/0/1 {
  unit 0 {
    family inet {
      address 192.168.12.2/24;
    }
    family mpls;
  }
}
ge-0/0/2 {
  unit 0 {
    family inet {
      address 192.168.27.2/24;
    }
    family mpls;
  }
}
ge-0/0/3 {
  unit 0 {
    family inet {
```

```

        address 192.168.23.2/24;
    }
    family mpls;
}
}
ge-0/0/4 {
    unit 0 {
        family inet {
            address 192.168.25.2/24;
        }
        family mpls;
    }
}
lo0 {
    unit 0 {
        family inet {
            address 10.255.0.2/32;
        }
    }
}
}

user@P1# show protocols ospf
traffic-engineering;
area 0.0.0.0 {
    interface ge-0/0/1.0;
    interface ge-0/0/2.0;
    interface ge-0/0/3.0;
    interface ge-0/0/4.0;
    interface lo0.0;
}

user@P1# show protocols mpls
interface ge-0/0/1.0;
interface ge-0/0/2.0 {
    srlg srlg-a;
}
interface ge-0/0/3.0;
interface ge-0/0/4.0;

user@P1# show protocols rsvp
interface ge-0/0/1.0;
interface ge-0/0/2.0 {
    link-protection {
        exclude-srlg;
    }
}
interface ge-0/0/3.0;
interface ge-0/0/4.0;
}

user@P1# show routing-options
srlg {
    srlg-a {
        srlg-value 101;
        srlg-cost 10;
    }
}
}

```

If you are done configuring the device, enter **commit** from configuration mode.

## Configuring Device P2

**Step-by-Step Procedure** The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see the *CLI User Guide*.

To configure P2:

1. Configure the device interfaces.

```
[edit interfaces]
user@P2# set ge-0/0/1 unit 0 family inet address 192.168.13.3/24
user@P2# set ge-0/0/1 unit 0 family mpls
user@P2# set ge-0/0/2 unit 0 family inet address 192.168.37.3/24
user@P2# set ge-0/0/2 unit 0 family mpls
user@P2# set ge-0/0/3 unit 0 family inet address 192.168.23.3/24
user@P2# set ge-0/0/3 unit 0 family mpls
user@P2# set lo0 unit 0 family inet address 10.255.0.3/32
```

2. Configure OSPF on the interfaces.

```
[edit protocols ospf]
user@P2# set traffic-engineering
user@P2# set area 0.0.0.0 interface ge-0/0/1.0
user@P2# set area 0.0.0.0 interface ge-0/0/2.0
user@P2# set area 0.0.0.0 interface ge-0/0/3.0
user@P2# set area 0.0.0.0 interface lo0.0
```

3. Configure the SRLG definitions.

```
[edit routing-options]
user@P2# set routing-options srlg srlg-a srlg-value 101
user@P2# set routing-options srlg srlg-a srlg-cost 10
```

4. Configure MPLS on the interfaces and associate the SRLG with interface **ge-0/0/2.0** for the P2>PE2 link.

```
[edit protocols mpls]
user@P2# set interface ge-0/0/1.0
user@P2# set interface ge-0/0/2.0 srlg srlg-a
user@P2# set interface ge-0/0/3.0
```

5. Enable RSVP on the interfaces.

```
[edit protocols rsvp]
user@P2# set interface ge-0/0/1.0
user@P2# set interface ge-0/0/2.0
user@P2# set interface ge-0/0/3.0
```

**Results** From configuration mode, confirm your configuration by entering the **show interfaces**, **show protocols ospf**, **show protocols mpls**, **show protocols rsvp**, and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@P2# show interfaces
ge-0/0/1 {
  unit 0 {
    family inet {
```

```

        address 192.168.13.3/24;
    }
    family mpls;
}
}
ge-0/0/2 {
    unit 0 {
        family inet {
            address 192.168.37.3/24;
        }
        family mpls;
    }
}
ge-0/0/3 {
    unit 0 {
        family inet {
            address 192.168.23.3/24;
        }
        family mpls;
    }
}
lo0 {
    unit 0 {
        family inet {
            address 10.255.0.3/32;
        }
    }
}
}
}

```

```

user@P2# show protocols ospf
traffic-engineering;
area 0.0.0.0 {
    interface ge-0/0/1.0;
    interface ge-0/0/2.0;
    interface ge-0/0/3.0;
    interface lo0.0;
}

```

```

user@P2# show protocols mpls
interface ge-0/0/1.0;
interface ge-0/0/2.0 {
    srlg srlg-a;
}
interface ge-0/0/3.0;
}

```

```

user@P2# show protocols rsvp
interface ge-0/0/1.0;
interface ge-0/0/2.0;
interface ge-0/0/3.0;

```

```

user@P2# show routing-options
srlg {
    srlg-a {
        srlg-value 101;
        srlg-cost 10;
    }
}

```

```
}  
}
```

If you are done configuring the device, enter **commit** from configuration mode.

---

### Configuring Device P3

**Step-by-Step Procedure** The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see the *CLI User Guide*.

To configure P3:

1. Configure the device interfaces.

```
[edit interfaces]
```

```
user@P3# set ge-0/0/1 unit 0 family inet address 192.168.14.4/24
```

```
user@P3# set ge-0/0/1 unit 0 family mpls
```

```
user@P3# set ge-0/0/2 unit 0 family inet address 192.168.45.4/24
```

```
user@P3# set ge-0/0/2 unit 0 family mpls
```

```
user@P3# set lo0 unit 0 family inet address 10.255.0.4/32
```

2. Configure OSPF on the interfaces.

```
[edit protocols ospf]
```

```
user@P3# set traffic-engineering
```

```
user@P3# set area 0.0.0.0 interface ge-0/0/1.0
```

```
user@P3# set area 0.0.0.0 interface ge-0/0/2.0
```

```
user@P3# set area 0.0.0.0 interface lo0.0
```

3. Configure the SRLG definitions.

```
[edit routing-options]
```

```
user@P3# set routing-options srlg srlg-a srlg-value 101
```

```
user@P3# set routing-options srlg srlg-a srlg-cost 10
```

4. Configure MPLS on the interfaces.

```
[edit protocols mpls]
```

```
user@P3# set interface ge-0/0/1.0
```

```
user@P3# set interface ge-0/0/2.0
```

5. Enable RSVP on the interfaces.

```
[edit protocols rsvp]
```

```
user@P3# set interface ge-0/0/1.0
```

```
user@P3# set interface ge-0/0/2.0
```

**Results** From configuration mode, confirm your configuration by entering the **show interfaces**, **show protocols ospf**, **show protocols mpls**, **show protocols rsvp**, and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@P3# show interfaces  
interfaces {  
  ge-0/0/1 {  
    unit 0 {  
      family inet {  
        address 192.168.14.4/24;
```



```

    }
    family mpls;
  }
}
ge-0/0/2 {
  unit 0 {
    family inet {
      address 192.168.45.4/24;
    }
    family mpls;
  }
}
lo0 {
  unit 0 {
    family inet {
      address 10.255.0.4/32;
    }
  }
}
}

user@P3# show protocols ospf
traffic-engineering;
area 0.0.0.0 {
  interface ge-0/0/1.0;
  interface ge-0/0/2.0;
  interface lo0.0;
}

user@P3# show protocols mpls
interface ge-0/0/1.0;
interface ge-0/0/2.0;

user@P3# show protocols rsvp
interface ge-0/0/1.0;
interface ge-0/0/2.0;

user@P3# show routing-options
srlg {
  srlg-a {
    srlg-value 101;
    srlg-cost 10;
  }
}

```

If you are done configuring the device, enter **commit** from configuration mode.

### Configuring Device P4

**Step-by-Step Procedure** The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see the *CLI User Guide*.

To configure P4:

1. Configure the device interfaces.

**[edit interfaces]**

```
user@P4# set ge-0/0/1 unit 0 family inet address 192.168.45.5/24
```

```
user@P4# set ge-0/0/1 unit 0 family mpls
user@P4# set ge-0/0/2 unit 0 family inet address 192.168.56.5/24
user@P4# set ge-0/0/2 unit 0 family mpls
user@P4# set ge-0/0/3 unit 0 family inet address 192.168.25.5/24
user@P4# set ge-0/0/3 unit 0 family mpls
user@P4# set lo0 unit 0 family inet address 10.255.0.5/32
```

2. Configure OSPF on the interfaces.

```
[edit protocols ospf]
user@P4# set traffic-engineering
user@P4# set area 0.0.0.0 interface ge-0/0/1.0
user@P4# set area 0.0.0.0 interface ge-0/0/2.0
user@P4# set area 0.0.0.0 interface ge-0/0/3.0
user@P4# set area 0.0.0.0 interface lo0.0
```

3. Configure the SRLG definitions.

```
[edit routing-options]
user@P4# set routing-options srlg srlg-a srlg-value 101
user@P4# set routing-options srlg srlg-a srlg-cost 10
```

4. Configure MPLS on the interfaces.

```
[edit protocols mpls]
user@P4# set interface ge-0/0/1.0
user@P4# set interface ge-0/0/2.0
user@P4# set interface ge-0/0/3.0
```

5. Enable RSVP on the interfaces.

```
[edit protocols rsvp]
user@P4# set interface ge-0/0/1.0
user@P4# set interface ge-0/0/2.0
user@P4# set interface ge-0/0/3.0
```

**Results** From configuration mode, confirm your configuration by entering the **show interfaces**, **show protocols ospf**, **show protocols mpls**, **show protocols rsvp**, and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@P4# show interfaces
ge-0/0/1 {
  unit 0 {
    family inet {
      address 192.168.45.5/24;
    }
    family mpls;
  }
}
ge-0/0/2 {
  unit 0 {
    family inet {
      address 192.168.56.5/24;
    }
    family mpls;
  }
}
}
```

```

ge-0/0/3 {
  unit 0 {
    family inet {
      address 192.168.25.5/24;
    }
    family mpls;
  }
}
lo0 {
  unit 0 {
    family inet {
      address 10.255.0.5/32;
    }
  }
}

user@P4# show protocols ospf
traffic-engineering;
area 0.0.0.0 {
  interface ge-0/0/1.0;
  interface ge-0/0/2.0;
  interface ge-0/0/3.0;
  interface lo0.0;
}

user@P4# show protocols mpls
interface ge-0/0/1.0;
interface ge-0/0/2.0;
interface ge-0/0/3.0;

user@P4# show protocols rsvp
interface ge-0/0/1.0;
interface ge-0/0/2.0;
interface ge-0/0/3.0;

user@P4# show routing-options
srlg {
  srlg-a {
    srlg-value 101;
    srlg-cost 10;
  }
}

```

If you are done configuring the device, enter **commit** from configuration mode.

### Configuring Device P5

#### Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see the *CLI User Guide*.

To configure P5:

1. Configure the device interfaces.

#### [edit interfaces]

```

user@P5# set ge-0/0/1 unit 0 family inet address 192.168.56.6/24
user@P5# set ge-0/0/1 unit 0 family mpls
user@P5# set ge-0/0/2 unit 0 family inet address 192.168.67.6/24

```

```
user@P5# set ge-0/0/2 unit 0 family mpls
user@P5# set lo0 unit 0 family inet address 10.255.0.6/32
```

2. Configure OSPF on the interfaces.

```
[edit protocols ospf]
user@P5# set traffic-engineering
user@P5# set area 0.0.0.0 interface ge-0/0/1.0
user@P5# set area 0.0.0.0 interface ge-0/0/2.0
user@P5# set area 0.0.0.0 interface lo0.0
```

3. Configure the SRLG definitions.

```
[edit routing-options]
user@P5# set routing-options srlg srlg-a srlg-value 101
user@P5# set routing-options srlg srlg-a srlg-cost 10
```

4. Configure MPLS on the interfaces.

```
[edit protocols mpls]
user@P5# set interface ge-0/0/1.0
user@P5# set interface ge-0/0/2.0
```

5. Enable RSVP on the interfaces.

```
[edit protocols rsvp]
user@P5# set interface ge-0/0/1.0
user@P5# set interface ge-0/0/2.0
```

**Results** From configuration mode, confirm your configuration by entering the **show interfaces**, **show protocols ospf**, **show protocols mpls**, **show protocols rsvp**, and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@P5# show interfaces
ge-0/0/1 {
  unit 0 {
    family inet {
      address 192.168.56.6/24;
    }
    family mpls;
  }
}
ge-0/0/2 {
  unit 0 {
    family inet {
      address 192.168.67.6/24;
    }
    family mpls;
  }
}
lo0 {
  unit 0 {
    family inet {
      address 10.255.0.6/32;
    }
  }
}
```

```

user@P5# show protocols ospf
traffic-engineering;
area 0.0.0.0 {
    interface ge-0/0/1.0;
    interface ge-0/0/2.0;
    interface lo0.0;
}

user@P5# show protocols mpls
interface ge-0/0/1.0;
interface ge-0/0/2.0;

user@P5# show protocols rsvp
interface ge-0/0/1.0;
interface ge-0/0/2.0;

user@P5# show routing-options
srlg {
    srlg-a {
        srlg-value 101;
        srlg-cost 10;
    }
}

```

If you are done configuring the device, enter **commit** from configuration mode.

### Configuring Device PE2

#### Step-by-Step Procedure

The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see the *CLI User Guide*.

To configure PE2:

1. Configure the device interfaces.

#### [edit interfaces]

```

user@PE2# set ge-0/0/1 unit 0 family inet address 192.168.27.7/24
user@PE2# set ge-0/0/1 unit 0 family mpls
user@PE2# set ge-0/0/2 unit 0 family inet address 192.168.37.7/24
user@PE2# set ge-0/0/2 unit 0 family mpls
user@PE2# set ge-0/0/3 unit 0 family inet address 192.168.67.7/24
user@PE2# set ge-0/0/3 unit 0 family mpls
user@PE2# set lo0 unit 0 family inet address 10.255.0.7/32

```

2. Configure OSPF on the interfaces.

#### [edit protocols ospf]

```

user@PE2# set traffic-engineering
user@PE2# set area 0.0.0.0 interface ge-0/0/1.0
user@PE2# set area 0.0.0.0 interface ge-0/0/2.0
user@PE2# set area 0.0.0.0 interface ge-0/0/3.0
user@PE2# set area 0.0.0.0 interface lo0.0

```

3. Configure the SRLG definitions.

#### [edit routing-options]

```

user@PE2# set routing-options srlg srlg-a srlg-value 101
user@PE2# set routing-options srlg srlg-a srlg-cost 10

```

4. Configure MPLS on the interfaces.

```
[edit protocols mpls]
user@PE2# set interface ge-0/0/1.0
user@PE2# set interface ge-0/0/2.0
user@PE2# set interface ge-0/0/3.0
```

5. Enable RSVP on the interfaces.

```
[edit protocols rsvp]
user@PE2# set interface ge-0/0/1.0
user@PE2# set interface ge-0/0/2.0
user@PE2# set interface ge-0/0/3.0
```

**Results** From configuration mode, confirm your configuration by entering the **show interfaces**, **show protocols ospf**, **show protocols mpls**, **show protocols rsvp**, and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@PE2# show interfaces
interfaces {
  ge-0/0/1 {
    unit 0 {
      family inet {
        address 192.168.27.7/24;
      }
      family mpls;
    }
  }
  ge-0/0/2 {
    unit 0 {
      family inet {
        address 192.168.37.7/24;
      }
      family mpls;
    }
  }
  ge-0/0/3 {
    unit 0 {
      family inet {
        address 192.168.67.7/24;
      }
      family mpls;
    }
  }
  lo0 {
    unit 0 {
      family inet {
        address 10.255.0.7/32;
      }
    }
  }
}

user@PE2# show protocols ospf
traffic-engineering;
```

```

area 0.0.0.0 {
    interface ge-0/0/1.0;
    interface ge-0/0/2.0;
    interface ge-0/0/3.0;
    interface lo0.0;
}

user@PE2# show protocols mpls
interface ge-0/0/1.0;
interface ge-0/0/2.0;
interface ge-0/0/3.0;

user@PE2# show protocols rsvp
interface ge-0/0/1.0;
interface ge-0/0/2.0;
interface ge-0/0/3.0;

user@PE2# show routing-options
srlg {
    srlg-a {
        srlg-value 101;
        srlg-cost 10;
    }
}

```

If you are done configuring the device, enter **commit** from configuration mode.

## Verification

Confirm that the configuration is working properly.

### Verifying the SRLG Cost Is Added to the TE Link

**Purpose** Verify that the TE link is excluded if it belongs to the SRLG of the protected link when **link-protection** is configured with **exclude-srlg**. Issue the **show ted link detail** and **show rsvp session extensive bypass** commands on device P1.

**Action** user@P1> show ted link detail

```
...
10.255.0.2->192.168.27.7-1, Local: 192.168.27.2, Remote: 0.0.0.0
  Local interface index: 0, Remote interface index: 0
  LocalPath: 0, Metric: 1, StaticBW: 1000Mbps, AvailBW: 1000Mbps
  Color: 0 <none>
  SRLGs: srlg-a
    localBW [0] 0bps [1] 0bps [2] 0bps [3] 0bps
    localBW [4] 0bps [5] 0bps [6] 0bps [7] 0bps
[...]
10.255.0.3->192.168.37.7-1, Local: 192.168.37.3, Remote: 0.0.0.0
  Local interface index: 0, Remote interface index: 0
  LocalPath: 0, Metric: 1, StaticBW: 1000Mbps, AvailBW: 1000Mbps
  Color: 0 <none>
  SRLGs: srlg-a
    localBW [0] 0bps [1] 0bps [2] 0bps [3] 0bps
    localBW [4] 0bps [5] 0bps [6] 0bps [7] 0bps
...
```

user@P1> show rsvp session extensive bypass

```
Ingress RSVP: 1 sessions

10.255.0.7
  From: 10.255.0.2, LSPstate: Up, ActiveRoute: 0
  LSPname: Bypass->192.168.27.7
  LSPtype: Static Configured
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 299776
  Resv style: 1 SE, Label in: -, Label out: 299776
  Time left: -, Since: Fri Oct 21 13:19:21 2011
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 52081 protocol 0
  Type: Bypass LSP
    Number of data route tunnel through: 1
    Number of RSVP session tunnel through: 0
  PATH rcvfrom: localclient
  Adspec: sent MTU 1500
  Path MTU: received 1500
  PATH sentto: 192.168.25.5 (ge-0/0/4.0) 63 pkts
  RESV rcvfrom: 192.168.25.5 (ge-0/0/4.0) 63 pkts
  Explct route: 192.168.25.5 192.168.56.6 192.168.67.7
  Record route: <self> 192.168.25.5 192.168.56.6 192.168.67.7
Total 1 displayed, Up 1, Down 0
```

**Meaning** The shortest path for the bypass protecting the link P1>PE2 would have been P1>P2>PE2. Because the links P1>PE2 and P2>PE2 both belong to SRLG **srlg-a**, the link P2>PE2 is rejected for CSPF consideration due to the **exclude-srlg** constraint. Therefore, the computed path for the bypass becomes P1>P4>P5>PE2.

**Related Documentation**

- [SRLG Overview on page 90](#)
- [Example: Configuring SRLG on page 92](#)
- [Example: Configuring SRLG with Link Protection on page 106](#)
- [exclude-srlg on page 1429](#)



---

## Configuring the MPLS Transport Profile for OAM

---

- [MPLS Transport Profile Overview on page 147](#)
- [Example: Configuring the MPLS Transport Profile for OAM on page 147](#)

### MPLS Transport Profile Overview

RFC 5654, *Requirements of an MPLS Transport Profile*, describes the requirements for the MPLS Transport Profile (MPLS-TP) that extends capabilities for Operation, Administration, and Maintenance (OAM) when MPLS is used for transport services and transport network operations. These capabilities help in troubleshooting and maintenance of a pseudowire or label-switched path (LSP).

MPLS-TP mechanisms for OAM contain two main components:

- Generic Associated Channel Label (GAL)—A special label that enables an exception mechanism that informs the egress label-switching router (LSR) that a packet it receives on an LSP belongs to an associated control channel or the control plane.
- Generic Associated Channel Header (G-Ach)—A special header field that identifies the type of payload contained in the MPLS label-switched paths (LSPs). G-Ach has the same format as a pseudowire associated control channel header.

For more information about MPLS-TP, see RFC 5654, *Requirements of an MPLS Transport Profile*. For specific information about GAL and G-Ach, see RFC 5586, *MPLS Generic Associated Channel*.

The following capabilities are supported in the Junos OS implementation of MPLS-TP:

- MPLS-TP OAM can send and receive packets with GAL and G-Ach, without IP encapsulation.
- Two unidirectional RSVP LSPs between a pair of routers can be associated with each other to create an associated bidirectional LSP for binding a path for the GAL and G-Ach OAM messages. A single Bidirectional Forwarding Detection (BFD) session is established for the associated bidirectional LSP.

### Example: Configuring the MPLS Transport Profile for OAM

This example shows how to configure the MPLS Transport Profile (MPLS-TP) for sending and receiving of OAM GAL and G-Ach messages across a label-switched path (LSP).

- [Requirements on page 148](#)
- [Overview on page 148](#)
- [Configuration on page 150](#)
- [Verification on page 157](#)

## Requirements

---

This example uses the following hardware and software components:

- Six devices that can be a combination of M Series, MX Series, and T Series routers
- Junos OS Release 12.1 or later running on the devices

## Overview

---

Junos OS Release 12.1 and later support MPLS Transport Profile (MPLS-TP) Operation, Administration, and Maintenance (OAM) capabilities. MPLS-TP introduces new capabilities for OAM when MPLS is used for transport services and transport network operations. This includes configuring Generic Associated Channel Label (GAL) and Generic Associated Channel Header (G-Ach) for OAM messages.

This example shows how to configure MPLS-TP OAM capability to send and receive GAL and G-Ach OAM messages without IP encapsulation. In addition, it also shows how to associate two unidirectional RSVP label-switched paths (LSPs) between a pair of routers to create an associated bidirectional LSP for binding a path for the GAL and G-Ach OAM messages.

Junos OS Release 12.1 and later support the following MPLS-TP capabilities:

- MPLS-TP OAM capability and the infrastructure required for MPLS applications to send and receive packets with GAL and G-Ach, without IP encapsulation.
- LSP-ping and Bidirectional Forwarding Detection (BFD) applications to send and receive packets using GAL and G-Ach, without IP encapsulation on transport LSPs.
- The association of two unidirectional RSVP LSPs, between a pair of routers, with each other to create an associated bidirectional LSP for binding a path for the GAL and G-Ach OAM messages. The associated bidirectional LSP model is supported only for associating the primary paths. A single BFD session is established for the associated bidirectional LSP.

Junos OS Release 12.1 and later does not support the following MPLS-TP capabilities:

- Point-to-multipoint RSVP LSPs and BGP LSPs
- Loss Measurement and Delay Measurement

You can enable GAL and G-Ach OAM operation using the following configuration statements:

- **mpls-tp-mode**—Include this statement at the **[edit protocols mpls oam]** hierarchy level to enable GAL and G-Ach OAM operation, without IP encapsulation, on all LSPs in the MPLS network.

```
[edit protocols mpls oam]  
mpls-tp-mode;
```

Include this statement at the `[edit protocols mpls label-switched-path lsp-name oam]` hierarchy level to enable GAL and G-Ach OAM operation without IP encapsulation on a specific LSP in the network.

```
[edit protocols mpls label-switched-path lsp-name oam]
mpls-tp-mode;
```



**NOTE:** Starting with Junos OS Release 16.1, MPLS-TP supports two additional channel types for the default LSPING (0x0008) channel type under the `mpls-tp-mode` statement. These additional channel types provide on-demand connectivity verification (CV) with and without IP/UDP encapsulation.

- On-demand CV (0x0025)—This channel type is a new pseudowire channel type and is used for on-demand CV without IP/UDP encapsulation, where IP addressing is not available or non-IP encapsulation is preferred.
- IPv4 (0x0021)—This channel type uses the IP/UDP encapsulation and provides interoperability support with other vendor devices using IP addressing.

The GACH-TLV is used along with the default LSPING channel type. As per RFC 7026, GACH-TLV is deprecated for 0x0021 and 0x0025 channel types.

To configure a channel type for MPLS-TP, include the `lsping-channel-type channel-type` statement at the `[edit protocols mpls label-switched-path lsp-name oam mpls-tp-mode]` and `[edit protocols mpls oam mpls-tp-mode]` hierarchy levels.

- **associate-lsp *lsp-name* from *from-ip-address***—Include this statement at the `[edit protocols mpls label-switched-path lsp-name]` hierarchy level to configure associated bidirectional LSPs on the two ends of the LSP.

```
[edit protocols mpls label-switched-path lsp-name ]
associate-lsp lsp-name {
  from from-ip-address;
}
```

The **from *from-ip-address*** configuration for the LSP is optional. If omitted, it is derived from the **to** address of the ingress LSP configuration.

- **transit-lsp-association**—Include this statement at the `[edit protocols mpls]` hierarchy level to associate two LSPs at a transit router.


```
[edit protocols mpls]
transit-lsp-association transit-association-lsp-group-name {
  lsp-name-1 name-of-associated-lsp-1;
  from-1 address-of-associated-lsp-1;
  lsp-name-2 name-of-associated-lsp-2;
  from-2 address-of-associated-lsp-2;
}
```

The association of the LSPs in the transit nodes is useful for the return LSP path for TTL-expired LSP ping packets or traceroute.

In this example, R0 is the ingress router and R4 is the egress router. R1, R2, R3, and R5 are transit routers. The associated bidirectional LSP is established between the transit routers for sending and receiving the GAL and G-Ach OAM messages.

Figure 22 on page 150 shows the topology used in this example.

**Figure 22: MPLS-TP OAM Associated Bidirectional LSPs**

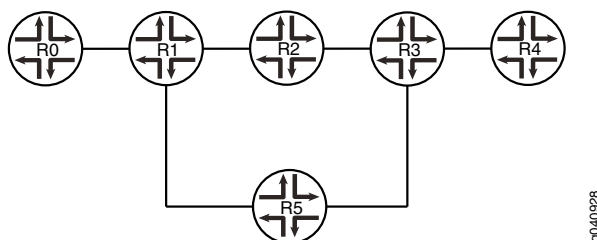

g040928

## Configuration

### CLI Quick Configuration



**NOTE:** This example shows the configuration on all devices and shows step-by-step procedures for configuring the ingress router, R0, and transit router R1. Repeat the step-by-step procedure described for the ingress router, R0, on the egress router, R4. Repeat the step-by-step procedure for the transit router, R1, on the other transit routers, R2, R3, and R5. Be sure to modify the appropriate interface names, addresses, and other parameters appropriately.

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

**Router R0**

```
set interfaces ge-4/1/1 unit 0 family inet address 10.10.11.1/30
set interfaces ge-4/1/1 unit 0 family iso
set interfaces ge-4/1/1 unit 0 family inet6
set interfaces ge-4/1/1 unit 0 family mpls
```

```

set interfaces ge-5/0/0 unit 0 family inet address 10.10.10.1/30
set interfaces ge-5/0/0 unit 0 family iso
set interfaces ge-5/0/0 unit 0 family inet6
set interfaces ge-5/0/0 unit 0 family mpls
set protocols rsvp interface ge-5/0/0.0
set protocols rsvp interface ge-4/1/1.0
set protocols mpls label-switched-path r0-to-r4 to 10.255.8.86
set protocols mpls label-switched-path r0-to-r4 oam mpls-tp-mode
set protocols mpls label-switched-path r0-to-r4 associate-lsp r4-to-r0 from 10.255.8.86
set protocols mpls interface ge-5/0/0.0
set protocols mpls interface ge-4/1/1.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-5/0/0.0
set protocols ospf area 0.0.0.0 interface ge-4/1/1.0
set protocols ospf area 0.0.0.0 interface lo0.0 passive

```

**Router R1**

```

set interfaces ge-0/0/5 unit 0 family inet address 10.10.10.2/30
set interfaces ge-0/0/5 unit 0 family iso
set interfaces ge-0/0/5 unit 0 family inet6
set interfaces ge-0/0/5 unit 0 family mpls
set interfaces ge-0/2/2 unit 0 family inet address 10.10.12.2/30
set interfaces ge-0/2/2 unit 0 family iso
set interfaces ge-0/2/2 unit 0 family inet6
set interfaces ge-0/2/2 unit 0 family mpls
set interfaces ge-1/0/2 unit 0 family inet address 10.10.13.2/30
set interfaces ge-1/0/2 unit 0 family iso
set interfaces ge-1/0/2 unit 0 family inet6
set interfaces ge-1/0/2 unit 0 family mpls
set interfaces ge-2/0/2 unit 0 family inet address 10.10.11.2/30
set interfaces ge-2/0/2 unit 0 family iso
set interfaces ge-2/0/2 unit 0 family inet6
set interfaces ge-2/0/2 unit 0 family mpls
set protocols rsvp interface ge-0/2/2.0
set protocols rsvp interface ge-0/0/5.0
set protocols rsvp interface ge-1/0/2.0
set protocols rsvp interface ge-2/0/2.0
set protocols mpls transit-lsp-association trace1 lsp-name-1 r0-to-r4
set protocols mpls transit-lsp-association trace1 from-1 10.255.8.207
set protocols mpls transit-lsp-association trace1 lsp-name-2 r4-to-r0
set protocols mpls transit-lsp-association trace1 from-2 10.255.8.86
set protocols mpls interface ge-0/0/5.0
set protocols mpls interface ge-2/0/2.0
set protocols mpls interface ge-1/0/2.0
set protocols mpls interface ge-0/2/2.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-0/0/5.0
set protocols ospf area 0.0.0.0 interface ge-0/2/2.0 metric 100
set protocols ospf area 0.0.0.0 interface ge-1/0/2.0
set protocols ospf area 0.0.0.0 interface ge-2/0/2.0
set protocols ospf area 0.0.0.0 interface lo0.0 passive

```

**Router R2**

```

set interfaces ge-0/2/3 unit 0 family inet address 10.10.13.1/30
set interfaces ge-0/2/3 unit 0 family iso
set interfaces ge-0/2/3 unit 0 family inet6
set interfaces ge-0/2/3 unit 0 family mpls

```

```
set interfaces ge-1/3/2 unit 0 family inet address 10.10.14.1/30
set interfaces ge-1/3/2 unit 0 family iso
set interfaces ge-1/3/2 unit 0 family inet6
set interfaces ge-1/3/2 unit 0 family mpls
set interfaces ge-1/3/4 unit 0 family inet address 10.10.15.1/30
set interfaces ge-1/3/4 unit 0 family iso
set interfaces ge-1/3/4 unit 0 family inet6
set interfaces ge-1/3/4 unit 0 family mpls
set protocols rsvp interface ge-0/2/3.0
set protocols rsvp interface ge-1/3/2.0
set protocols rsvp interface ge-1/3/4.0
set protocols mpls transit-lsp-association trace1 lsp-name-1 r0-to-r4
set protocols mpls transit-lsp-association trace1 from-1 10.255.8.207
set protocols mpls transit-lsp-association trace1 lsp-name-2 r4-to-r0
set protocols mpls transit-lsp-association trace1 from-2 10.255.8.86
set protocols mpls interface ge-0/2/3.0
set protocols mpls interface ge-1/3/2.0
set protocols mpls interface ge-1/3/4.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-0/2/3.0
set protocols ospf area 0.0.0.0 interface ge-1/3/2.0
set protocols ospf area 0.0.0.0 interface ge-1/3/4.0 metric 100
set protocols ospf area 0.0.0.0 interface lo0.0 passive
```

Router R3

```
set interfaces ge-1/2/1 unit 0 family inet address 10.10.16.2/30
set interfaces ge-1/2/1 unit 0 family iso
set interfaces ge-1/2/1 unit 0 family inet6
set interfaces ge-1/2/1 unit 0 family mpls
set interfaces ge-2/0/7 unit 0 family inet address 10.10.17.2/30
set interfaces ge-2/0/7 unit 0 family iso
set interfaces ge-2/0/7 unit 0 family inet6
set interfaces ge-2/0/7 unit 0 family mpls
set interfaces ge-2/2/0 unit 0 family inet address 10.10.14.2/30
set interfaces ge-2/2/0 unit 0 family iso
set interfaces ge-2/2/0 unit 0 family inet6
set interfaces ge-2/2/0 unit 0 family mpls
set protocols rsvp interface ge-2/2/0.0
set protocols rsvp interface ge-1/2/1.0
set protocols rsvp interface ge-2/0/7.0
set protocols mpls transit-lsp-association trace1 lsp-name-1 r0-to-r4
set protocols mpls transit-lsp-association trace1 from-1 10.255.8.207
set protocols mpls transit-lsp-association trace1 lsp-name-2 r4-to-r0
set protocols mpls transit-lsp-association trace1 from-2 10.255.8.86
set protocols mpls interface ge-2/2/0.0
set protocols mpls interface ge-1/2/1.0
set protocols mpls interface ge-2/0/7.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-2/2/0.0
set protocols ospf area 0.0.0.0 interface ge-1/2/1.0
set protocols ospf area 0.0.0.0 interface ge-2/0/7.0 metric 100
set protocols ospf area 0.0.0.0 interface lo0.0 passive
```

Router R4

```
set interfaces ge-0/0/3 unit 0 family inet address 10.10.16.1/30
set interfaces ge-0/0/3 unit 0 family iso
set interfaces ge-0/0/3 unit 0 family inet6
```

```

set interfaces ge-0/0/3 unit 0 family mpls
set protocols rsvp interface ge-0/0/3.0
set protocols mpls label-switched-path r4-to-r0 to 10.255.8.207
set protocols mpls label-switched-path r4-to-r0 oam mpls-tp-mode
set protocols mpls label-switched-path r4-to-r0 associate-lsp r0-to-r4 from 10.255.8.207
set protocols mpls interface ge-0/0/3.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-0/0/3.0
set protocols ospf area 0.0.0.0 interface lo0.0 passive

```

**Router R5**

```

set interfaces ge-1/2/0 unit 0 family inet address 10.10.15.2/30
set interfaces ge-1/2/0 unit 0 family iso
set interfaces ge-1/2/0 unit 0 family inet6
set interfaces ge-1/2/0 unit 0 family mpls
set interfaces ge-2/0/0 unit 0 family inet address 10.10.12.1/30
set interfaces ge-2/0/0 unit 0 family iso
set interfaces ge-2/0/0 unit 0 family inet6
set interfaces ge-2/0/0 unit 0 family mpls
set interfaces ge-4/0/7 unit 0 family inet address 10.10.17.1/30
set interfaces ge-4/0/7 unit 0 family iso
set interfaces ge-4/0/7 unit 0 family inet6
set interfaces ge-4/0/7 unit 0 family mpls
set protocols rsvp interface ge-2/0/0.0
set protocols rsvp interface ge-1/2/0.0
set protocols rsvp interface ge-4/0/7.0
set protocols mpls transit-lsp-association trace1 lsp-name-1 r0-to-r4
set protocols mpls transit-lsp-association trace1 from-1 10.255.8.207
set protocols mpls transit-lsp-association trace1 lsp-name-2 r4-to-r0
set protocols mpls transit-lsp-association trace1 from-2 10.255.8.86
set protocols mpls interface ge-2/0/0.0
set protocols mpls interface ge-1/2/0.0
set protocols mpls interface ge-4/0/7.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-2/0/0.0 metric 100
set protocols ospf area 0.0.0.0 interface ge-1/2/0.0 metric 100
set protocols ospf area 0.0.0.0 interface ge-4/0/7.0 metric 100
set protocols ospf area 0.0.0.0 interface lo0.0 passive

```

### *Configuring Device R0*

**Step-by-Step Procedure** To configure the ingress router, R0:

1. Configure the interfaces.

**[edit interfaces]**

```

user@R0# set ge-4/1/1 unit 0 family inet address 10.10.11.1/30
user@R0# set ge-4/1/1 unit 0 family iso
user@R0# set ge-4/1/1 unit 0 family inet6
user@R0# set ge-4/1/1 unit 0 family mpls
user@R0# set ge-5/0/0 unit 0 family inet address 10.10.10.1/30
user@R0# set ge-5/0/0 unit 0 family iso
user@R0# set ge-5/0/0 unit 0 family inet6
user@R0# set ge-5/0/0 unit 0 family mpls

```

2. Configure MPLS on the interfaces.

**[edit protocols mpls]**

- ```
user@R0# set interface ge-5/0/0.0
user@R0# set interface ge-4/1/1.0
```
3. Configure an interior gateway protocol, such as OSPF.  

```
[edit protocols ospf]
user@R0# set traffic-engineering
user@R0# set area 0.0.0.0 interface ge-5/0/0.0
user@R0# set area 0.0.0.0 interface ge-4/1/1.0
user@R0# set area 0.0.0.0 interface lo0.0 passive
```
  4. Configure a signaling protocol, such as RSVP.  

```
[edit protocols rsvp]
user@R0# set interface ge-5/0/0.0
user@R0# set interface ge-4/1/1.0
```
  5. Configure the LSP.  

```
[edit protocols mpls]
user@R0# set label-switched-path r0-to-r4 to 10.255.8.86
```
  6. Enable GAL and G-Ach OAM operation without IP encapsulation on the LSPs.  

```
[edit protocols mpls]
user@R0# set label-switched-path r0-to-r4 oam mpls-tp-mode
```
  7. Configure associated bidirectional LSPs on the two ends of the LSP.  

```
[edit protocols mpls]
user@R0# set label-switched-path r0-to-r4 associate-lsp to-r0 from 10.255.8.86
```
  8. After you are done configuring the device, commit the configuration.  

```
[edit]
user@R0# commit
```

**Results** Confirm your configuration by issuing the **show interfaces** and **show protocols** commands.

```
user@R0# show interfaces
ge-4/1/1 {
  unit 0 {
    family inet {
      address 10.10.11.1/30;
    }
    family iso;
    family inet6;
    family mpls;
  }
}
ge-5/0/0 {
  unit 0 {
    family inet {
      address 10.10.10.1/30;
    }
    family iso;
    family inet6;
    family mpls;
  }
}
```



```

user@R0# show protocols
rsvp {
  interface ge-5/0/0.0;
  interface ge-4/1/1.0;
}
mpls {
  label-switched-path r0-to-r4 {
    to 10.255.8.86;
    oam mpls-tp-mode;
    associate-lsp r4-to-r0 {
      from 10.255.8.86;
    }
  }
  interface ge-4/1/1.0;
  interface ge-5/0/0.0;
}
ospf {
  traffic-engineering;
  area 0.0.0.0 {
    interface ge-5/0/0.0;
    interface ge-4/1/1.0;
    interface lo0.0 {
      passive;
    }
  }
}
}

```

### Configuring Device R1

**Step-by-Step Procedure** To configure the transit router, R1:

1. Configure the interfaces.
 

```

[edit interfaces]
user@R1# set ge-0/0/5 unit 0 family inet address 10.10.10.2/30
user@R1# set ge-0/0/5 unit 0 family iso
user@R1# set ge-0/0/5 unit 0 family inet6
user@R1# set ge-0/0/5 unit 0 family mpls
user@R1# set ge-0/2/2 unit 0 family inet address 10.10.12.2/30
user@R1# set ge-0/2/2 unit 0 family iso
user@R1# set ge-0/2/2 unit 0 family inet6
user@R1# set ge-0/2/2 unit 0 family mpls
user@R1# set ge-2/0/2 unit 0 family inet address 10.10.11.2/30
user@R1# set ge-2/0/2 unit 0 family iso
user@R1# set ge-2/0/2 unit 0 family inet6
user@R1# set ge-2/0/2 unit 0 family mpls
user@R1# set ge-1/0/2 unit 0 family inet address 10.10.13.2/30
user@R1# set ge-1/0/2 unit 0 family iso
user@R1# set ge-1/0/2 unit 0 family inet6
user@R1# set ge-1/0/2 unit 0 family mpls

```
2. Configure MPLS on the interfaces.
 

```

[edit protocols mpls]
user@R1# set interface ge-0/0/5.0
user@R1# set interface ge-2/0/2.0
user@R1# set interface ge-1/0/2.0

```

```
user@R1# set interface ge-0/2/2.0
```

3. Configure an interior gateway protocol, such as OSPF.

```
[edit protocols ospf]
user@R1# set traffic-engineering
user@R1# set area 0.0.0.0 interface ge-0/0/5.0
user@R1# set area 0.0.0.0 interface ge-2/0/2.0
user@R1# set area 0.0.0.0 interface ge-1/0/2.0
user@R1# set area 0.0.0.0 interface ge-0/2/2.0 metric 100
user@R1# set area 0.0.0.0 interface lo0.0 passive
```

4. Configure a signaling protocol, such as RSVP.

```
[edit protocols rsvp]
user@R1# set interface ge-0/0/5.0
user@R1# set interface ge-2/0/2.0
user@R1# set interface ge-1/0/2.0
user@R1# set interface ge-0/2/2.0
```

5. Configure the association of the two LSPs on the transit router.

```
[edit protocols mpls]
user@R1# set transit-lsp-association trace1 lsp-name-1 r0-to-r4
user@R1# set transit-lsp-association trace1 from-1 10.255.8.207
user@R1# set transit-lsp-association trace1 lsp-name-2 r4-to-r0
user@R1# set transit-lsp-association trace1 from-2 10.255.8.86
```

6. If you are done configuring the device, commit the configuration.

```
[edit]
user@R1# commit
```

**Results** Confirm your configuration by issuing the **show interfaces** and **show protocols** commands.

```
user@R1# show interfaces
ge-0/0/5 {
  unit 0 {
    family inet {
      address 10.10.10.2/30;
    }
    family iso;
    family inet6;
    family mpls;
  }
}
ge-0/2/2 {
  unit 0 {
    family inet {
      address 10.10.12.2/30;
    }
    family iso;
    family inet6;
    family mpls;
  }
}
ge-2/0/2 {
  unit 0 {
```

```

        family inet {
            address 10.10.11.2/30;
        }
        family iso;
        family inet6;
        family mpls;
    }
}
ge-1/0/2 {
    unit 0 {
        family inet {
            address 10.10.13.2/30;
        }
        family iso;
        family inet6;
        family mpls;
    }
}

user@R1# show protocols
rsvp {
    interface ge-0/0/5.0;
    interface ge-2/0/2.0;
    interface ge-1/0/2.0;
    interface ge-0/2/2.0;
}
mpls {
    transit-lsp-association trace1 {
        lsp-name-1 r0-to-r4;
        from-1 10.255.8.207;
        lsp-name-2 r4-to-r0;
        from-2 10.255.8.86;
    }
    interface ge-0/0/5.0;
    interface ge-2/0/2.0;
    interface ge-1/0/2.0;
    interface ge-0/2/2.0;
}
ospf {
    traffic-engineering;
    area 0.0.0.0 {
        interface ge-0/0/5.0;
        interface ge-1/0/2.0;
        interface ge-2/0/2.0;
        interface ge-0/2/2.0 {
            metric 100;
        }
        interface lo0.0 {
            passive;
        }
    }
}
}

```

### Verification

Confirm that the configuration is working properly.

### *Verifying Associated Bidirectional LSPs*

**Purpose** Verify that the associated bidirectional LSP configuration is working properly.

**Action** user@host> show mpls lsp

Ingress LSP: 1 sessions

To	From	State	Rt	P	ActivePath	LSPName
10.10.11.1	10.255.8.86	Up	0	*		r0-to-r4 Assoc-Bidir

Total 1 displayed, Up 1, Down 0

Egress LSP: 1 sessions

To	From	State	Rt	Style	Labelin	Labelout	LSPName
10.10.16.1	10.255.8.207	Up	0	1 FF	3		r4-to-r0 Assoc-Bidir

Total 2 displayed, Up 2, Down 0

Transit LSP: 1 sessions

To	From	State	Rt	Style	Labelin	Labelout	LSPName
10.10.10.2	10.255.8.168	Up	1	1 FF	301264	3	r0-to-r4 Assoc-Bidir

Total 3 displayed, Up 3, Down 0

## user@host&gt; show mpls lsp detail

Ingress LSP: 1 sessions

10.10.11.1

From: 10.255.8.86, State: Up, ActiveRoute: 0, LSPName: r0-to-r4

Associated Bidirectional

Associated LSP: r0-to-r4, 10.255.8.86

ActivePath: (primary)

LSPTYPE: Static Configured

LoadBalance: Random

Encoding type: Packet, Switching type: PSC-1, GPID: Unknown

\*Primary State: Up

Egress LSP: 1 sessions

10.255.102.29

From: 10.255.102.172, LSPstate: Up, ActiveRoute: 0

LSPName: r4-to-r0, LSPpath: Primary

Associated Bidirectional

Associated LSP: 10.10.16.1, to-r0&gt;

Suggested label received: -, Suggested label sent: -

Recovery label received: -, Recovery label sent: -

Resv style: 1 FF, Label in: 3, Label out: -

Time left: 144, Since: Fri Jun 17 21:41:05 2011

Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500

Port number: sender 6 receiver 14468 protocol 0

PATH rcvfrom: 10.10.13.1 (ge-2/0/0.0) 84 pkts

Adspec: received MTU 1500

PATH sentto: localclient

RESV rcvfrom: localclient

Record route: 10.10.14.2 10.10.13.1 &lt;self&gt;

Transit LSP: 1 sessions

10.255.102.30

From: 10.255.102.172, LSPstate: Up, ActiveRoute: 1

LSPName: to\_airstream, LSPpath: Primary

Associated Bidirectional

Associated LSP: r0-to-r4, 10.255.8.168

Suggested label received: -, Suggested label

Recovery label received: -, Recovery label sent: 3

Resv style: 1 FF, Label in: 301264, Label out: 3

Time left: 132, Since: Fri Jun 17 21:40:56 2011

```

Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
Port number: sender 28 receiver 14465 protocol 0
PATH rcvfrom: 10.10.13.1 (ge-2/0/0.0) 84 pkts
Adspec: received MTU 1500 sent MTU 1500
PATH sentto: 10.10.10.1 (ge-3/0/0.0) 84 pkts
RESV rcvfrom: 10.10.10.1 (ge-3/0/0.0) 84 pkts
Explct route: 10.10.10.1
Record route: 10.10.16.1 10.10.15.2 10.10.13.1 <self> 10.10.10.1

```

```

user@host> show mpls lsp bidirectional
Ingress LSP: 1 session
To          From          State Rt P    ActivePath    LSPname
10.255.8.86 10.255.8.207 Up    0 *           r0-to-r4
Assoc-Bidir
Total 1 displayed, Up 1, Down 0
Aug 28 06:56:26 [TRACE] [R0 coleman re0]
Egress LSP: 1 session
To          From          State Rt Style Labelin Labelout LSPname
10.255.8.207 10.255.8.86 Up    0 1 FF      3      - to-r0
Assoc-Bidir
Total 1 displayed, Up 1, Down 0
Aug 28 06:56:26 [TRACE] [R0 coleman re0]
Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

**Meaning** The output of the `show mpls lsp`, `show mpls detail`, and `show mpls bidirectional` commands displays the details of the associated bidirectional LSPs and the LSP association information.

#### Release History Table

Release	Description
16.1	Starting with Junos OS Release 16.1, MPLS-TP supports two additional channel types for the default LSPING (0x0008) channel type under the <code>mpls-tp-mode</code> statement.

## Configuring MPLS Inter-AS Link-Node Protection with Labeled BGP

- [Understanding MPLS Inter-AS Link Protection on page 160](#)
- [Example: Configuring MPLS Inter-AS Link-Node Protection on page 162](#)

### Understanding MPLS Inter-AS Link Protection

Link protection is essential in an MPLS network to ensure traffic restoration in case of an interface failure. The ingress router chooses an alternate link through another interface to send traffic to its destination.


In [Figure 23 on page 161](#), autonomous system border routers (ASBRs) run external BGP (EBGP) to ASBRs in another autonomous system (AS) to exchange labels for /32 IPv4 routes. Inside the ASs, internal BGP (IBGP) propagates the routes to provider edge (PE) devices. If the link from Device ASBR3 to Device ASBR1 goes down, until Device ASBR3 reinstalls the new next hop, all traffic going toward AS 64510 from AS 64511 through the ASBR3-ASBR1 link is dropped. A fast traffic restoration can be achieved if Device ASBR3

preprograms a backup path either through Device ASBR4 or through a direct path to Device ASBR2 if one exists (not shown in the diagram). This assumes that Device ASBR3 learns a loop-free MPLS path for routes that need to be protected either through IBGP or EBGP.

This solution does not handle a failure on Device ASBR3 for traffic going toward AS 64511 from AS 64510 through the ASBR3-ASBR1 link. This solution is limited to downstream inter-AS link-node protection with labeled BGP. This solution does not support service restoration between provider (P) and ASBR routers when there is an ASBR failure. For example, this solution does not handle a failure on the P3-ASBR3 link.

This supported functionality is similar to BGP multipath, except only one next hop is used for active forwarding, and a second path is in protected mode.

**Figure 23: MPLS Inter-AS Link-Node Protection Conceptual Topology**

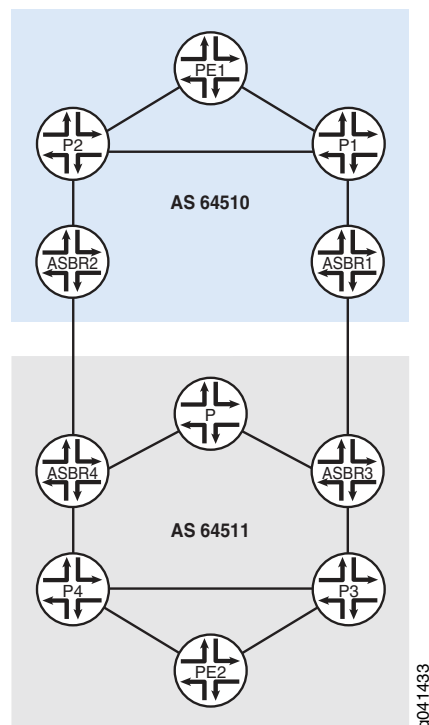

In an MPLS inter-AS environment, link protection can be enabled when **labeled-unicast** is used to send traffic between ASs. Hence, MPLS inter-AS link protection is configured on the link between two routers in different ASs.

To configure link protection on an interface, use the **protection** statement at the **[edit protocols bgp group group-name family inet labeled-unicast]** hierarchy level:

```
protocols {
  bgp {
    group test1 {
      type external;
      local-address 192.168.1.2;
      family inet {
```

```
labeled-unicast {  
    protection;  
}  
}  
}  
}
```



**NOTE:** MPLS inter-AS link protection is supported only with `labeled-unicast` and external peers in a master routing instance.

The link on which protection is configured is known as the protection path. A protection path is selected only after the best path selection and is not selected in the following cases:

- The best path is a non-BGP path.
- Multiple next hops are active, as in BGP multipath.

## Example: Configuring MPLS Inter-AS Link-Node Protection

This example shows how to configure tail-end protection in an inter-AS deployment with Layer 3 VPNs.

- [Requirements on page 162](#)
- [Overview on page 162](#)
- [Configuration on page 164](#)
- [Verification on page 173](#)

---

### Requirements

No special configuration beyond device initialization is required before configuring this example.

---

### Overview

In [Figure 24 on page 163](#), autonomous system border routers (ASBRs) run external BGP (EBGP) to ASBRs in another autonomous system (AS) to exchange labels for /32 IPv4 routes. Inside the ASs, internal BGP (IBGP) propagates the routes to provider edge (PE) devices.

If the link from Device ASBR3 to Device ASBR1 goes down, until ASBR3 reinstalls the new next hop, all traffic going toward AS 64510 from AS 64511 through the ASBR3-ASBR1 link is dropped.


This example shows how to achieve fast traffic restoration by configuring Device ASBR3 to preprogram a backup path through Device ASBR2.





**NOTE:** This solution does not handle the Device P3 to Device ASBR3 failure. Nor does it handle a failure on Device ASBR3 for traffic going toward AS 64511 from AS 64510 through the ASBR3-ASBR1 link. This traffic is dropped.

Figure 24: MPLS Inter-AS Link-Node Protection Example Topology

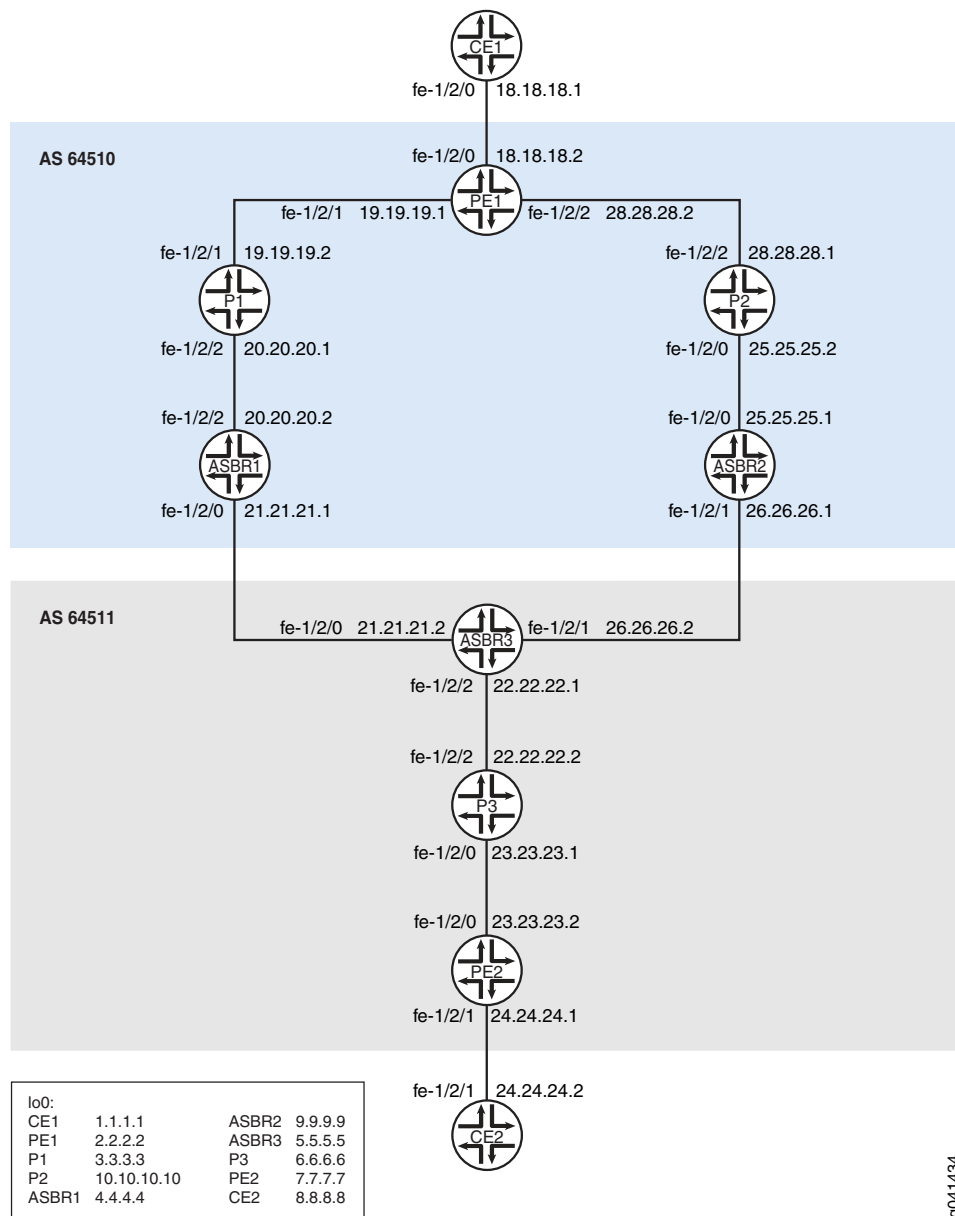

g041434

“CLI Quick Configuration” on page 164 shows the configuration for all of the devices in Figure 24 on page 163.

The section “Step-by-Step Procedure” on page 169 describes the steps on Device ASBR3.

## Configuration

<b>CLI Quick Configuration</b>	To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the <b>[edit]</b> hierarchy level.
<b>Device ASBR1</b>	<pre> set interfaces fe-1/2/0 unit 6 family inet address 20.20.20.2/30 set interfaces fe-1/2/2 unit 0 family mpls set interfaces fe-1/2/0 unit 0 family inet address 21.21.21.1/30 set interfaces fe-1/2/0 unit 0 family mpls set interfaces lo0 unit 0 family inet address 4.4.4.4/32 set protocols rsvp interface fe-1/2/2.0 set protocols rsvp interface lo0.0 set protocols mpls traffic-engineering bgp-igp-both-ribs set protocols mpls label-switched-path To_PE1 to 2.2.2.2 set protocols mpls interface fe-1/2/2.0 set protocols mpls interface fe-1/2/0.0 set protocols mpls interface lo0.0 set protocols bgp group To-PE1 type internal set protocols bgp group To-PE1 local-address 4.4.4.4 set protocols bgp group To-PE1 family inet unicast set protocols bgp group To-PE1 family inet labeled-unicast set protocols bgp group To-PE1 export next-hop-self set protocols bgp group To-PE1 neighbor 2.2.2.2 family inet labeled-unicast set protocols bgp group To-ASBR3 type external set protocols bgp group To-ASBR3 family inet labeled-unicast set protocols bgp group To-ASBR3 export To-ASBR3 set protocols bgp group To-ASBR3 neighbor 21.21.21.2 peer-as 64511 set protocols ospf traffic-engineering set protocols ospf area 0.0.0.0 interface fe-1/2/2.0 set protocols ospf area 0.0.0.0 interface lo0.0 passive set policy-options policy-statement To-ASBR3 term 1 from route-filter 2.2.2.2/32 exact set policy-options policy-statement To-ASBR3 term 1 then accept set policy-options policy-statement To-ASBR3 term 2 then reject set policy-options policy-statement next-hop-self then next-hop self set routing-options autonomous-system 64510 </pre>
<b>Device ASBR2</b>	<pre> set interfaces fe-1/2/0 unit 0 description to-P2 set interfaces fe-1/2/0 unit 0 family inet address 25.25.25.1/30 set interfaces fe-1/2/0 unit 0 family mpls set interfaces fe-1/2/1 unit 0 description to-ASBR3 set interfaces fe-1/2/1 unit 0 family inet address 26.26.26.1/30 set interfaces fe-1/2/1 unit 0 family mpls set interfaces lo0 unit 0 family inet address 9.9.9.9/32 set protocols rsvp interface fe-1/2/0.0 set protocols rsvp interface lo0.0 set protocols mpls traffic-engineering bgp-igp-both-ribs set protocols mpls label-switched-path To_PE1 to 2.2.2.2 set protocols mpls interface fe-1/2/0.0 set protocols mpls interface fe-1/2/1.0 set protocols mpls interface lo0.0 set protocols bgp group To-PE1 type internal set protocols bgp group To-PE1 local-address 9.9.9.9 set protocols bgp group To-PE1 family inet unicast </pre>

```

set protocols bgp group To-PE1 family inet labeled-unicast
set protocols bgp group To-PE1 export next-hop-self
set protocols bgp group To-PE1 neighbor 2.2.2.2 family inet labeled-unicast
set protocols bgp group To-ASBR3 type external
set protocols bgp group To-ASBR3 family inet labeled-unicast
set protocols bgp group To-ASBR3 export To-ASBR3
set protocols bgp group To-ASBR3 neighbor 26.26.26.2 peer-as 64511
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface fe-1/2/0.0
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set policy-options policy-statement To-ASBR3 term 1 from route-filter 2.2.2.2/32 exact
set policy-options policy-statement To-ASBR3 term 1 then accept
set policy-options policy-statement To-ASBR3 term 2 then reject
set policy-options policy-statement next-hop-self then next-hop self
set routing-options autonomous-system 64510

```

**Device ASBR3**

```

set interfaces fe-1/2/0 unit 0 description to-ASBR1
set interfaces fe-1/2/0 unit 0 family inet address 21.21.21.2/30
set interfaces fe-1/2/0 unit 0 family mpls
set interfaces fe-1/2/2 unit 0 description to-P3
set interfaces fe-1/2/2 unit 0 family inet address 22.22.22.1/30
set interfaces fe-1/2/2 unit 0 family mpls
set interfaces fe-1/2/1 unit 0 description to-ASBR2
set interfaces fe-1/2/1 unit 0 family inet address 26.26.26.2/30
set interfaces fe-1/2/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 5.5.5.5/32
set protocols rsvp interface fe-1/2/2.0
set protocols rsvp interface lo0.0
set protocols rsvp interface fe-1/2/0.0
set protocols rsvp interface fe-1/2/1.0
set protocols mpls traffic-engineering bgp-igp-both-ribs
set protocols mpls label-switched-path To-PE2 to 7.7.7.7
set protocols mpls interface lo0.0
set protocols mpls interface fe-1/2/0.0
set protocols mpls interface fe-1/2/2.0
set protocols mpls interface fe-1/2/1.0
set protocols bgp group To-PE2 type internal
set protocols bgp group To-PE2 local-address 5.5.5.5
set protocols bgp group To-PE2 family inet unicast
set protocols bgp group To-PE2 export next-hop-self
set protocols bgp group To-PE2 neighbor 7.7.7.7 family inet labeled-unicast
set protocols bgp group To-ASBR1 type external
set protocols bgp group To-ASBR1 family inet labeled-unicast protection
set protocols bgp group To-ASBR1 family inet labeled-unicast pre-prefix-label
set protocols bgp group To-ASBR1 export To-ASBR1
set protocols bgp group To-ASBR1 neighbor 21.21.21.1 peer-as 64510
set protocols bgp group To-ASBR2 type external
set protocols bgp group To-ASBR2 family inet labeled-unicast protection
set protocols bgp group To-ASBR2 family inet labeled-unicast pre-prefix-label
set protocols bgp group To-ASBR2 export To-ASBR2
set protocols bgp group To-ASBR2 neighbor 26.26.26.1 peer-as 64510
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface fe-1/2/2.0
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ospf area 0.0.0.0 interface fe-1/2/1.0
set policy-options policy-statement To-ASBR1 term 1 from route-filter 7.7.7.7/32 exact

```

```
set policy-options policy-statement To-ASBR1 term 1 then accept
set policy-options policy-statement To-ASBR1 term 2 then reject
set policy-options policy-statement To-ASBR2 term 1 from route-filter 7.7.7.7/32 exact
set policy-options policy-statement To-ASBR2 term 1 then accept
set policy-options policy-statement To-ASBR2 term 2 then reject
set policy-options policy-statement next-hop-self then next-hop self
set routing-options autonomous-system 64511
```

Device CE1

```
set interfaces fe-1/2/0 unit 0 family inet address 18.18.18.1/30
set interfaces lo0 unit 0 family inet address 1.1.1.1/32
set protocols ospf area 0.0.0.2 interface fe-1/2/0.0
set protocols ospf area 0.0.0.2 interface lo0.0 passive
```

Device CE2

```
set interfaces fe-1/2/1 unit 0 family inet address 24.24.24.2/30
set interfaces lo0 unit 0 family inet address 8.8.8.8/32
set protocols bgp group To_PE2 neighbor 24.24.24.1 export myroutes
set protocols bgp group To_PE2 neighbor 24.24.24.1 peer-as 64511
set policy-options policy-statement myroutes from protocol direct
set policy-options policy-statement myroutes then accept
set routing-options autonomous-system 64509
```

Device P1

```
set interfaces fe-1/2/1 unit 0 family inet address 19.19.19.2/30
set interfaces fe-1/2/1 unit 0 family mpls
set interfaces fe-1/2/2 unit 0 family inet address 20.20.20.1/30
set interfaces fe-1/2/2 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 3.3.3.3/32
set protocols rsvp interface fe-1/2/1.0
set protocols rsvp interface fe-1/2/2.0
set protocols rsvp interface lo0.0
set protocols mpls interface fe-1/2/1.0
set protocols mpls interface fe-1/2/2.0
set protocols mpls interface lo0.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface fe-1/2/1.0
set protocols ospf area 0.0.0.0 interface fe-1/2/2.0
set protocols ospf area 0.0.0.0 interface lo0.0 passive
```

Device P2

```
set interfaces fe-1/2/0 unit 0 description to-ASBR2
set interfaces fe-1/2/0 unit 0 family inet address 25.25.25.2/30
set interfaces fe-1/2/0 unit 0 family mpls
set interfaces fe-1/2/2 unit 0 description to-PE1
set interfaces fe-1/2/2 unit 0 family inet address 28.28.28.1/30
set interfaces fe-1/2/2 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.10.10.10/32
set protocols rsvp interface fe-1/2/0.0
set protocols rsvp interface fe-1/2/2.0
set protocols rsvp interface lo0.0
set protocols mpls interface fe-1/2/0.0
set protocols mpls interface fe-1/2/2.0
set protocols mpls interface lo0.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface fe-1/2/0.0
set protocols ospf area 0.0.0.0 interface fe-1/2/2.0
set protocols ospf area 0.0.0.0 interface lo0.0 passive
```

```

Device P3    set interfaces fe-1/2/2 unit 0 family inet address 22.22.22.2/30
              set interfaces fe-1/2/2 unit 0 family mpls
              set interfaces fe-1/2/0 unit 0 family inet address 23.23.23.1/30
              set interfaces fe-1/2/0 unit 0 family mpls
              set interfaces lo0 unit 0 family inet address 6.6.6.6/32
              set protocols rsvp interface fe-1/2/2.0
              set protocols rsvp interface fe-1/2/0.0
              set protocols rsvp interface lo0.0
              set protocols mpls interface fe-1/2/2.0
              set protocols mpls interface fe-1/2/0.0
              set protocols mpls interface lo0.0
              set protocols ospf traffic-engineering
              set protocols ospf area 0.0.0.0 interface fe-1/2/2.0
              set protocols ospf area 0.0.0.0 interface fe-1/2/0.0
              set protocols ospf area 0.0.0.0 interface lo0.0 passive

Device PE1   set interfaces fe-1/2/0 unit 0 family inet address 18.18.18.2/30
              set interfaces fe-1/2/1 unit 0 family inet address 19.19.19.1/30
              set interfaces fe-1/2/1 unit 0 family mpls
              set interfaces fe-1/2/2 unit 0 description to-P2
              set interfaces fe-1/2/2 unit 0 family inet address 28.28.28.2/30
              set interfaces lo0 unit 0 family inet address 2.2.2.2/32
              set protocols rsvp interface fe-1/2/0.0
              set protocols rsvp interface lo0.0
              set protocols rsvp interface fe-1/2/2.0
              set protocols mpls label-switched-path To-ASBR1 to 4.4.4.4
              set protocols mpls label-switched-path To-ASBR2 to 9.9.9.9
              set protocols mpls interface fe-1/2/0.0
              set protocols mpls interface lo0.0
              set protocols mpls interface fe-1/2/2.0
              set protocols bgp group To_ASBR1 type internal
              set protocols bgp group To_ASBR1 local-address 2.2.2.2
              set protocols bgp group To_ASBR1 family inet labeled-unicast
              set protocols bgp group To_ASBR1 neighbor 4.4.4.4 family inet labeled-unicast resolve-vpn
              set protocols bgp group To_PE2 type external
              set protocols bgp group To_PE2 multihop ttl 20
              set protocols bgp group To_PE2 local-address 2.2.2.2
              set protocols bgp group To_PE2 family inet-vpn unicast
              set protocols bgp group To_PE2 neighbor 7.7.7.7 peer-as 64511
              set protocols bgp group To_ASBR2 type internal
              set protocols bgp group To_ASBR2 local-address 2.2.2.2
              set protocols bgp group To_ASBR2 family inet labeled-unicast
              set protocols bgp group To_ASBR2 neighbor 9.9.9.9 family inet labeled-unicast resolve-vpn
              set protocols ospf traffic-engineering
              set protocols ospf area 0.0.0.0 interface fe-1/2/0.0
              set protocols ospf area 0.0.0.0 interface lo0.0 passive
              set protocols ospf area 0.0.0.0 interface fe-1/2/2.0
              set policy-options policy-statement bgp-to-ospf term 1 from protocol bgp
              set policy-options policy-statement bgp-to-ospf term 1 then accept
              set policy-options policy-statement bgp-to-ospf term 2 then reject
              set policy-options policy-statement vpnexport term 1 from protocol ospf
              set policy-options policy-statement vpnexport term 1 then community add test_comm
              set policy-options policy-statement vpnexport term 1 then accept
              set policy-options policy-statement vpnexport term 2 then reject
              set policy-options policy-statement vpnimport term 1 from protocol bgp

```

```
set policy-options policy-statement vpnimport term 1 from community test_comm
set policy-options policy-statement vpnimport term 1 then accept
set policy-options policy-statement vpnimport term 2 then reject
set policy-options community test_comm members target:1:64510
set routing-instances vpn2CE1 instance-type vrf
set routing-instances vpn2CE1 interface fe-1/2/0.0
set routing-instances vpn2CE1 route-distinguisher 1:64510
set routing-instances vpn2CE1 vrf-import vpnimport
set routing-instances vpn2CE1 vrf-export vpnexport
set routing-instances vpn2CE1 protocols ospf export bgp-to-ospf
set routing-instances vpn2CE1 protocols ospf area 0.0.0.2 interface fe-1/2/0.0
set routing-options autonomous-system 64510
```

```
Device PE2
set interfaces fe-1/2/0 unit 0 family inet address 23.23.23.2/30
set interfaces fe-1/2/0 unit 0 family mpls
set interfaces fe-1/2/1 unit 0 family inet address 24.24.24.1/30
set interfaces lo0 unit 0 family inet address 7.7.7/32
set protocols rsvp interface fe-1/2/0.0
set protocols rsvp interface lo0.0
set protocols mpls label-switched-path To-ASBR3 to 5.5.5.5
set protocols mpls interface fe-1/2/0.0
set protocols mpls interface lo0.0
set protocols bgp group To_ASBR3 type internal
set protocols bgp group To_ASBR3 local-address 7.7.7
set protocols bgp group To_ASBR3 family inet labeled-unicast
set protocols bgp group To_ASBR3 neighbor 5.5.5.5 family inet labeled-unicast resolve-vpn
set protocols bgp group To_PE1 type external
set protocols bgp group To_PE1 multihop ttl 20
set protocols bgp group To_PE1 local-address 7.7.7
set protocols bgp group To_PE1 family inet-vpn unicast
set protocols bgp group To_PE1 neighbor 2.2.2.2 peer-as 64510
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface fe-1/2/0.0
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set policy-options policy-statement vpnexport term 1 from protocol bgp
set policy-options policy-statement vpnexport term 1 then community add test_comm
set policy-options policy-statement vpnexport term 1 then accept
set policy-options policy-statement vpnexport term 2 then reject
set policy-options policy-statement vpnimport term 1 from protocol bgp
set policy-options policy-statement vpnimport term 1 from community test_comm
set policy-options policy-statement vpnimport term 1 then accept
set policy-options policy-statement vpnimport term 2 then reject
set policy-options community test_comm members target:1:64510
set routing-instances vpn2CE2 instance-type vrf
set routing-instances vpn2CE2 interface fe-1/2/1.0
set routing-instances vpn2CE2 route-distinguisher 1:64510
set routing-instances vpn2CE2 vrf-import vpnimport
set routing-instances vpn2CE2 vrf-export vpnexport
set routing-instances vpn2CE2 protocols bgp group To_CE2 peer-as 64509
set routing-instances vpn2CE2 protocols bgp group To_CE2 neighbor 24.24.24.2
set routing-options autonomous-system 64511
```

**Step-by-Step Procedure** The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure the EBGp scenario:

1. Configure the router interfaces.

```
[edit interfaces]
user@ASBR3# set fe-1/2/0 unit 0 description to-ASBR1
user@ASBR3# set fe-1/2/0 unit 0 family inet address 21.21.21.2/30
user@ASBR3# set fe-1/2/0 unit 0 family mpls

user@ASBR3# set fe-1/2/2 unit 0 description to-P3
user@ASBR3# set fe-1/2/2 unit 0 family inet address 22.22.22.1/30
user@ASBR3# set fe-1/2/2 unit 0 family mpls

user@ASBR3# set fe-1/2/1 unit 0 description to-ASBR2
user@ASBR3# set fe-1/2/1 unit 0 family inet address 26.26.26.2/30
user@ASBR3# set fe-1/2/1 unit 0 family mpls

user@ASBR3# set lo0 unit 0 family inet address 5.5.5.5/32
```

2. Configure an interior gateway protocol (IGP), such as OSPF or IS-IS.

```
[edit protocols ospf]
user@ASBR3# set traffic-engineering

[edit protocols ospf area 0.0.0.0]
user@ASBR3# set interface fe-1/2/2.0
user@ASBR3# set interface lo0.0 passive
user@ASBR3# set interface fe-1/2/1.0
```

3. Configure the autonomous system (AS) number.

```
[edit routing-options]
user@ASBR3# set autonomous-system 64511
```

4. Configure the routing policy.

```
[edit policy-options policy-statement To-ASBR1]
user@ASBR3# set term 1 from route-filter 7.7.7.7/32 exact
user@ASBR3# set term 1 then accept
user@ASBR3# set term 2 then reject
```

```
[edit policy-options policy-statement To-ASBR2]
user@ASBR3# set term 1 from route-filter 7.7.7.7/32 exact
user@ASBR3# set term 1 then accept
user@ASBR3# set term 2 then reject
```

```
[edit policy-options policy-statement next-hop-self]
user@ASBR3# set then next-hop self
```

5. Configure the EBGp sessions.

```
[edit protocols bgp group To-ASBR1]
user@ASBR3# set type external
```

```

user@ASBR3# set family inet labeled-unicast protection
user@ASBR3# set family inet labeled-unicast per-prefix-label
user@ASBR3# set export To-ASBR1
user@ASBR3# set neighbor 21.21.21.1 peer-as 64510

```

```

[edit protocols bgp group To-ASBR2]
user@ASBR3# set type external
user@ASBR3# set family inet labeled-unicast protection
user@ASBR3# set family inet labeled-unicast per-prefix-label
user@ASBR3# set export To-ASBR2
user@ASBR3# set neighbor 26.26.26.1 peer-as 64510

```

6. Configure the IBGP sessions.

```

[edit protocols bgp group To-PE2]
user@ASBR3# set type internal
user@ASBR3# set local-address 5.5.5.5
user@ASBR3# set family inet unicast
user@ASBR3# set export next-hop-self
user@ASBR3# set neighbor 7.7.7.7 family inet labeled-unicast

```

7. Configure MPLS.

```

[edit protocols mpls]
user@ASBR3# set traffic-engineering bgp-igp-both-ribs
user@ASBR3# set label-switched-path To_PE2 to 7.7.7.7
user@ASBR3# set interface lo0.0
user@ASBR3# set interface fe-1/2/0.0
user@ASBR3# set interface fe-1/2/2.0
user@ASBR3# set interface fe-1/2/1.0

```

8. Configure a signaling protocol.

```

[edit protocols rsvp]
user@ASBR3# set interface fe-1/2/2.0
user@ASBR3# set interface lo0.0
user@ASBR3# set interface fe-1/2/0.0
user@ASBR3# set interface fe-1/2/1.0

```

**Results** From configuration mode, confirm your configuration by entering the **show interfaces**, **show protocols**, **show policy-options**, and **show routing-options**, commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```

user@ASBR3# show interfaces
fe-1/2/0 {
  unit 0 {
    description to-ASBR1;
    family inet {
      address 21.21.21.2/30;
    }
    family mpls;
  }
}
fe-1/2/1 {
  unit 0 {
    description to-ASBR2;

```



```

        family inet {
            address 26.26.26.2/30;
        }
        family mpls;
    }
}
fe-1/2/2 {
    unit 0 {
        description to-P3;
        family inet {
            address 22.22.22.1/30;
        }
        family mpls;
    }
}
lo0 {
    unit 0 {
        family inet {
            address 5.5.5.5/32;
        }
    }
}
}

user@ASBR3# show protocols
rsvp {
    interface fe-1/2/2.0;
    interface lo0.0;
    interface fe-1/2/0.0;
    interface fe-1/2/1.0;
}
mpls {
    traffic-engineering bgp-igp-both-ribs;
    label-switched-path To_PE2 {
        to 7.7.7.7;
    }
    interface lo0.0;
    interface fe-1/2/0.0;
    interface fe-1/2/2.0;
    interface fe-1/2/1.0;
}
bgp {
    group To-PE2 {
        type internal;
        local-address 5.5.5.5;
        family inet {
            unicast;
        }
        export next-hop-self;
        neighbor 7.7.7.7 {
            family inet {
                labeled-unicast;
            }
        }
    }
    group To-ASBR1 {
        type external;
    }
}

```

```
family inet {
    labeled-unicast {
        protection;
    }
}
export To-ASBR1;
neighbor 21.21.21.1 {
    peer-as 64510;
}
}
group To-ASBR2 {
    type external;
    family inet {
        labeled-unicast {
            protection;
        }
    }
    export To-ASBR2;
    neighbor 26.26.26.1 {
        peer-as 64510;
    }
}
}
ospf {
    traffic-engineering;
    area 0.0.0.0 {
        interface fe-1/2/2.0;
        interface lo0.0 {
            passive;
        }
        interface fe-1/2/1.0;
    }
}
}

user@ASBR3# show policy-options
policy-statement To-ASBR1 {
    term 1 {
        from {
            route-filter 7.7.7.7/32 exact;
        }
        then accept;
    }
    term 2 {
        then reject;
    }
}
policy-statement To-ASBR2 {
    term 1 {
        from {
            route-filter 7.7.7.7/32 exact;
        }
        then accept;
    }
    term 2 {
        then reject;
    }
}
```

```
}  
policy-statement next-hop-self {  
  then {  
    next-hop self;  
  }  
}  
  
user@ASBR3# show routing-options  
autonomous-system 64511;
```

If you are done configuring the devices, enter **commit** from configuration mode.

---

### Verification

Confirm that the configuration is working properly.

- [Checking the BGP Neighbor Sessions on page 173](#)
- [Checking the Routes on page 175](#)

#### *Checking the BGP Neighbor Sessions*

**Purpose** Verify that BGP protection is enabled.

```

Action user@ASBR3# show bgp neighbor 21.21.21.1
Peer: 21.21.21.1+58259 AS 64510 Local: 21.21.21.2+179 AS 64511
  Type: External    State: Established    Flags: <ImportEval Sync>
  Last State: OpenConfirm    Last Event: RecvKeepAlive
  Last Error: None
  Export: [ To-ASBR1 ]
  Options: <Preference AddressFamily PeerAS Refresh>
  Options: <Protection>
  Address families configured: inet-labeled-unicast
  Holdtime: 90 Preference: 170
NLRI configured with protection: inet-labeled-unicast
  Number of flaps: 0
  Peer ID: 4.4.4.4      Local ID: 5.5.5.5      Active Holdtime: 90
  Keepalive Interval: 30      Group index: 4      Peer index: 0
  BFD: disabled, down
  Local Interface: fe-1/2/0.0
  NLRI for restart configured on peer: inet-labeled-unicast
  NLRI advertised by peer: inet-labeled-unicast
  NLRI for this session: inet-labeled-unicast
  Peer supports Refresh capability (2)
  Stale routes from peer are kept for: 300
  Peer does not support Restarter functionality
  NLRI that restart is negotiated for: inet-labeled-unicast
  NLRI of received end-of-rib markers: inet-labeled-unicast
  NLRI of all end-of-rib markers sent: inet-labeled-unicast
  Peer supports 4 byte AS extension (peer-as 64510)
  Peer does not support Addpath
  Table inet.0 Bit: 10001
    RIB State: BGP restart is complete
    Send state: in sync
    Active prefixes:      2
    Received prefixes:    1
    Accepted prefixes:    1
    Suppressed due to damping: 0
    Advertised prefixes:  1
  Last traffic (seconds): Received 7    Sent 20    Checked 32
  Input messages: Total 170    Updates 2    Refreshes 0    Octets 3326
  Output messages: Total 167    Updates 1    Refreshes 0    Octets 3288
  Output Queue[0]: 0

user@ASBR3# show bgp neighbor 26.26.26.1
Peer: 26.26.26.1+61072 AS 64510 Local: 26.26.26.2+179 AS 64511
  Type: External    State: Established    Flags: <ImportEval Sync>
  Last State: OpenConfirm    Last Event: RecvKeepAlive
  Last Error: None
  Export: [ To-ASBR2 ]
  Options: <Preference AddressFamily PeerAS Refresh>
  Options: <Protection>
  Address families configured: inet-labeled-unicast
  Holdtime: 90 Preference: 170
NLRI configured with protection: inet-labeled-unicast
  Number of flaps: 0
  Peer ID: 9.9.9.9      Local ID: 5.5.5.5      Active Holdtime: 90
  Keepalive Interval: 30      Group index: 5      Peer index: 0
  BFD: disabled, down
  Local Interface: fe-1/2/1.0
  NLRI for restart configured on peer: inet-labeled-unicast
  NLRI advertised by peer: inet-labeled-unicast
  NLRI for this session: inet-labeled-unicast
  Peer supports Refresh capability (2)

```

```

Stale routes from peer are kept for: 300
Peer does not support Restarter functionality
NLRI that restart is negotiated for: inet-labeled-unicast
NLRI of received end-of-rib markers: inet-labeled-unicast
NLRI of all end-of-rib markers sent: inet-labeled-unicast
Peer supports 4 byte AS extension (peer-as 64510)
Peer does not support Addpath
Table inet.0 Bit: 10002
  RIB State: BGP restart is complete
  Send state: in sync
  Active prefixes:          1
  Received prefixes:        1
  Accepted prefixes:        1
  Suppressed due to damping: 0
  Advertised prefixes:      1
Last traffic (seconds): Received 21   Sent 9   Checked 42
Input messages: Total 170   Updates 2   Refreshes 0   Octets 3326
Output messages: Total 168   Updates 1   Refreshes 0   Octets 3307
Output Queue[0]: 0

```

**Meaning** The output shows that the **Protection** option is enabled for the EBGp peers, Device ASBR1 and Device ASBR2.

This is also shown with the **NLRI configured with protection: inet-labeled-unicast** screen output.

### *Checking the Routes*

**Purpose** Make sure that the backup path is installed in the routing table.

```

Action user@ASBR3> show route 2.2.2.2
inet.0: 12 destinations, 14 routes (12 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

2.2.2.2/32          *[BGP/170] 01:36:25, MED 2, localpref 100
                   AS path: 64510 I, validation-state: unverified
                   > to 21.21.21.1 via fe-1/2/0.0, Push 299824
                   to 26.26.26.1 via fe-1/2/1.0, Push 299808
                   [BGP/170] 01:36:25, MED 2, localpref 100
                   AS path: 64510 I, validation-state: unverified
                   > to 26.26.26.1 via fe-1/2/1.0, Push 299808

```

**Meaning** The **show route** command displays active as well as backup paths to Device PE1.

**Related Documentation**


- *Example: Configuring Provider Edge Link Protection in Layer 3 VPNs*

## Configuring Egress Protection Service Mirroring for BGP Signaled Layer 2 Services

Starting in Junos OS Release 14.2, Junos OS supports the restoration of egress traffic when there is a link or node failure in the egress PE node. If there is a link or node failure in the core network, a protection mechanism such as MPLS fast reroute can be triggered on the transport LSPs between the PE routers to repair the connection within tens of milliseconds. An egress protection LSP addresses the problem of a node-link failure at the edge of the network (for example, a failure of a PE router).

Figure 1 shows a simplified topology of the use case that explains this feature.

**Figure 25: Egress Protection LSP Configured from Router PE1 to Router PE2**

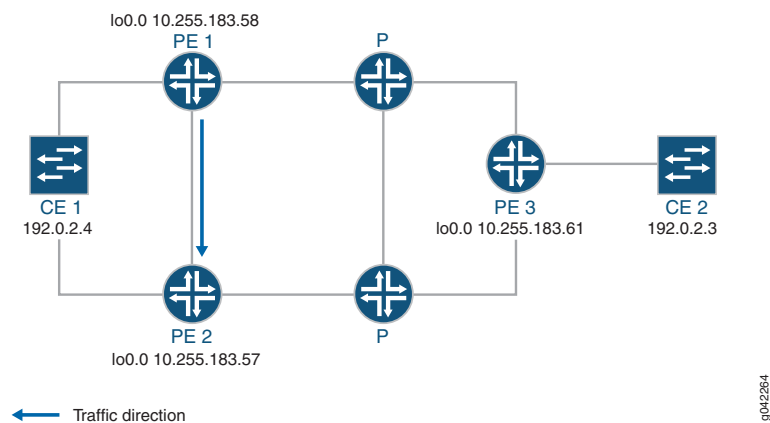

CE1 is multihomed to PE1 and PE2. There are two paths connecting CE1 and CE2. The working path is CE2-PE3-P-PE1-CE1, via pseudowire PW21. The protecting path is CE2-PE3-P-PE2-CE1, via pseudowire PW22. Traffic is flowing through the working path under normal circumstances. When the end-to-end OAM between CE1 and CE2 detects failure on the working path, traffic will be switched from the working path to the protecting path. The end-to-end failure detection and recovery relies on control plane hence should be relatively slow. To achieve faster protection, local repair mechanisms similar to those used by MPLS fast reroute should be used. In Figure 1 above, if link or node failed in the core network (like link failure on P-PE1, P-PE3, or node failure on P), the MPLS fast reroute will happen on the transport LSPs between PE1 and PE3. The failure could be locally repaired within tens of milliseconds. However, if link or node failure happens at the edge (like link failure on PE3-CE2 or node failure on PE3), there is no local repair currently so we have to rely on the CE1-CE2 end-to-end protection to repair the failure.

- Device CE2—Traffic origin
- Router PE3—Ingress PE router
- Router PE1— (Primary) Egress PE router
- Router PE2—Protector PE router
- Device CE1—Traffic destination

When the link between CE1– PE1 goes down, PE1 will briefly redirect that traffic towards CE1, to PE2. PE2 forwards it to CE1 until ingress router PE3 recalculates to forward the traffic to PE2.

Initially the traffic direction was; CE2 – PE3 – P – PE1 – CE1.

When the link between CE1– PE1 goes down, the traffic will be; CE2 – PE3 – P – PE1 – PE2 – CE1. PE3 then recalculates the path; CE2 – PE3 – P – PE2 – CE1.

1. Configure RSVP on PE1, PE2, and PE3.

```
[edit protocols]
user@PE1# set interface all
user@PE2# set interface all
user@PE3# set interface all
```

2. Configure MPLS.

```
[edit protocols mpls]
user@PE1# set interface all
user@PE2# set interface all
user@PE3# set interface all
```

3. Set PE1 as **primary** and PE2 as **protector** nodes.

```
[edit protocols mpls]
user@PE1# set egress-protection context-identifier address primary
user@PE2# set egress-protection context-identifier address protector
```

4. Enable **egress-protection** on PE1 and PE2.

```
[edit protocols bgp]
user@PE1# set group ibgp family l2vpn egress-protection
user@PE2# set group ibgp family l2vpn egress-protection
```

5. Configure LDP and ISIS on PE1, PE2, and PE3.

```
[edit protocols ldp]
user@PE1# set interface all
user@PE2# set interface all
user@PE3# set interface all

[edit protocols isis]
user@PE1# set interface all point-to-point
user@PE2# set interface all point-to-point
user@PE3# set interface all point-to-point
```

6. Configure a load balancing policy at PE1, PE2, and PE3.

```
[edit]
user@PE1# set policy-options policy-statement lb then load-balance per-packet
user@PE2# set policy-options policy-statement lb then load-balance per-packet
user@PE3# set policy-options policy-statement lb then load-balance per-packet
```

7. Configure the routing options at PE1, PE2, and PE3, to export routes based on the load balancing policy.

```
[edit]
user@PE1# set routing-options traceoptions file ro.log
user@PE1# set routing-options traceoptions flag normal
user@PE1# set routing-options traceoptions flag route
```

```
user@PE1# set routing-options autonomous-system 100
user@PE1# set routing-options forwarding-table export lb
```

```
[edit]
user@PE2# set routing-options traceoptions file ro.log
user@PE2# set routing-options traceoptions flag normal
user@PE2# set routing-options traceoptions flag route
user@PE2# set routing-options autonomous-system 100
user@PE2# set routing-options forwarding-table export lb
```

```
[edit]
user@PE3# set routing-options traceoptions file ro.log
user@PE3# set routing-options traceoptions flag normal
user@PE3# set routing-options traceoptions flag route
user@PE3# set routing-options autonomous-system 100
user@PE3# set routing-options forwarding-table export lb
```

8. Configure BGP at PE1 to advertise nrli from the routing instance with context-ID as next-hop.

```
[edit]
user@PE1# set routing-instances foo egress-protection context-identifier
context-identifier
```

9. Configure l2vpn at PE1, PE2, and PE3

At PE1:

```
[edit routing-instances]
foo {
  instance-type l2vpn;
  egress-protection {
    context-identifier {
      198.51.100.0;
    }
  }
  interface ge-2/0/2.0;
  route-distinguisher 10.255.183.58:1;
  vrf-target target:9000:1;
  protocols {
    l2vpn {
      encapsulation-type ethernet-vlan;
      site foo {
        site-identifier 1;
        multi-homing;
        site-preference primary;
        interface ge-2/0/2.0 {
          remote-site-id 2;
        }
      }
    }
  }
}
```

At PE2:

```
[edit routing-instances]
foo {
  instance-type l2vpn;
```



```
egress-protection {
  protector;
}
interface ge-2/0/2.0;
route-distinguisher 10.255.183.57:1;
vrf-target target:9000:1;
protocols {
  l2vpn {
    encapsulation-type ethernet-vlan;
    site foo {
      site-identifier 1;
      multi-homing;
      site-preference backup;
      interface ge-2/0/2.0 {
        remote-site-id 2;
      }
    }
  }
}
```

At PE3:

```
[edit routing-instances]
foo {
  instance-type l2vpn;
  interface ge-2/1/2.0;
  route-distinguisher 10.255.183.61:1;
  vrf-target target:9000:1;
  protocols {
    l2vpn {
      encapsulation-type ethernet-vlan;
      site foo {
        site-identifier 2;
        interface ge-2/1/2.0;
      }
    }
  }
}
```

Release History Table

Release	Description
14.2	Starting in Junos OS Release 14.2, Junos OS supports the restoration of egress traffic when there is a link or node failure in the egress PE node.

Related Documentation

- [Example: Configuring MPLS Egress Protection Service Mirroring for BGP Signaled Layer 2 Services on page 180](#)
- *site-preference*

## Example: Configuring MPLS Egress Protection Service Mirroring for BGP Signaled Layer 2 Services

---

Starting in Junos OS Release 14.2, Junos OS supports the restoration of egress traffic when there is a link or node failure in the egress PE node. If there is a link or node failure in the core network, a protection mechanism such as MPLS fast reroute can be triggered on the transport LSPs between the PE routers to repair the connection within tens of milliseconds. An egress protection LSP addresses the problem of a node-link failure at the edge of the network (for example, a failure of a PE router).

This example shows how to configure link protection for BGP signaled Layer 2 services.

- [Requirements on page 180](#)
- [Overview on page 180](#)
- [Configuration on page 181](#)
- [Verification on page 194](#)

### Requirements

MX Series Routers running Junos OS Release 14.2 or later.


### Overview

If there is a link or node failure in the core network, a protection mechanism such as MPLS fast reroute can be triggered on the transport LSPs between the PE routers to repair the connection within tens of milliseconds. An egress protection LSP addresses the problem of a node-link failure at the edge of the network (for example, a failure of a PE router).

This example includes the following configuration concepts and statements that are unique to the configuration of an egress protection LSP:

- **context-identifier**—Specifies an IPv4 or IPv6 address used to define the pair of PE routers participating in the egress protection LSP. It is assigned to each ordered pair of primary PE and the protector to facilitate protection establishment. This address is globally unique, or unique in the address space of the network where the primary PE and the protector reside.
- **egress-protection**—Configures the protector information for the protected Layer 2 circuit and configures the protector Layer 2 circuit at the **[edit protocols mpls]** hierarchy level. Configures an LSP as an egress protection LSP at the **[edit protocols mpls]** hierarchy level.
- **protector**—Configures the creation of standby pseudowires on the backup PE for link or node protection for the instance.

Figure 26: Egress Protection LSP Configured from Router PE1 to Router PE2

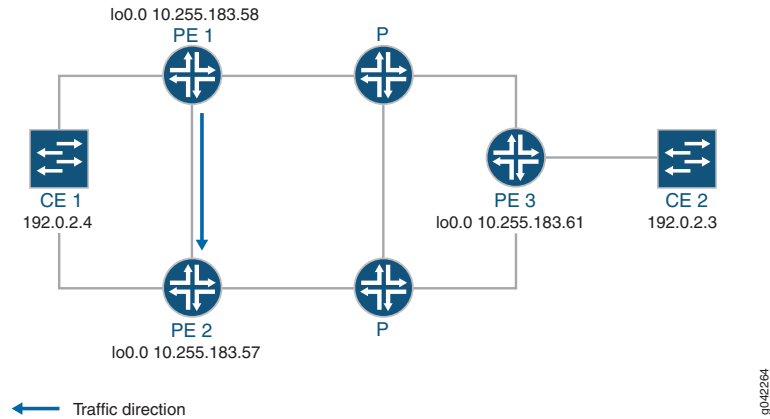

In the event of a failure of the egress PE Router PE1, traffic is switched to the egress protection LSP configured between Router PE1 and Router PE2 (the protector PE router):

- Device CE2—Traffic origin
- Router PE3—Ingress PE router
- Router PE1— (Primary) Egress PE router
- Router PE2—Protector PE router
- Device CE1—Traffic destination

When the link between CE1– PE1 goes down, PE1 will briefly redirect that traffic toward CE1, to PE2. PE2 forwards it to CE1 until ingress router PE3 recalculates to forward the traffic to PE2.

Initially the traffic direction was: CE2 – PE3 – P – PE1 – CE1.

When the link between CE1– PE1 goes down, the traffic will be: CE2 – PE3 – P – PE1 – PE2 –CE1. PE3 then recalculates the path: CE2 – PE3 – P – PE2 – CE1.

This example shows how to configure routers PE1, PE2, and PE3.

## Configuration

- [Step-by-Step Procedure on page 184](#)
- [Results on page 188](#)

### CLI Quick Configuration

To quickly configure an egress protection LSP, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configurations, copy and then paste the commands into the CLI and enter **commit** from configuration mode.

PE1

```
set protocols rsvp interface all
```

```
set protocols rsvp interface fxp0.0 disable
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols mpls egress-protection context-identifier 198.51.100.3 primary
set protocols mpls egress-protection context-identifier 198.51.100.3 advertise-mode
  stub-alias
set protocols mpls egress-protection traceoptions file ep size 100m
set protocols mpls egress-protection traceoptions flag all
set protocols bgp traceoptions file bgp.log world-readable
set protocols bgp group ibgp type internal
set protocols bgp group ibgp local-address 10.255.183.58
set protocols bgp group ibgp family inet unicast
set protocols bgp group ibgp family l2vpn signaling egress-protection
set protocols bgp group ibgp neighbor 192.0.2.3
set protocols bgp group ibgp neighbor 192.0.2.4
set protocols isis traceoptions file isis-edge size 10m world-readable
set protocols isis traceoptions flag error
set protocols isis level 1 disable
set protocols isis level 2 wide-metrics-only
set protocols isis interface all point-to-point
set protocols isis interface all level 2 metric 10
set protocols isis interface fxp0.0 disable
set protocols ldp interface all
set protocols ldp interface fxp0.0 disable
set policy-options policy-statement lb then load-balance per-packet
set routing-options traceoptions file ro.log
set routing-options traceoptions flag all
set routing-options traceoptions flag route
set routing-options autonomous-system 100
set routing-options forwarding-table export lb
set routing-instances foo instance-type l2vpn
set routing-instances foo egress-protection context-identifier 198.51.100.3
set routing-instances foo interface ge-2/0/2.0
set routing-instances foo route-distinguisher 10.255.183.58:1
set routing-instances foo vrf-target target:9000:1
set routing-instances foo protocols l2vpn encapsulation-type ethernet-vlan
set routing-instances foo protocols l2vpn site foo site-identifier 1
set routing-instances foo protocols l2vpn site foo multi-homing
set routing-instances foo protocols l2vpn site foo site-preference primary
set routing-instances foo protocols l2vpn site foo interface ge-2/0/2.0 remote-site-id 2
```

## PE2

```
set protocols rsvp interface all
set protocols rsvp interface fxp0.0 disable
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols mpls egress-protection context-identifier 198.51.100.3 protector
set protocols mpls egress-protection context-identifier 198.51.100.3 advertise-mode
  stub-alias
set protocols mpls egress-protection traceoptions file ep size 100m
set protocols mpls egress-protection traceoptions flag all
set protocols bgp traceoptions file bgp.log world-readable
set protocols bgp group ibgp type internal
set protocols bgp group ibgp local-address 10.255.183.57
set protocols bgp group ibgp family inet unicast
```

```

set protocols bgp group ibgp family l2vpn signaling egress-protection
set protocols bgp group ibgp neighbor 192.0.2.3
set protocols bgp group ibgp neighbor 192.0.2.4
set protocols isis traceoptions file isis-edge size 10m world-readable
set protocols isis traceoptions flag error
set protocols isis level 1 disable
set protocols isis level 2 wide-metrics-only
set protocols isis interface all point-to-point
set protocols isis interface all level 2 metric 10
set protocols isis interface fxp0.0 disable
set protocols ldp interface all
set protocols ldp interface fxp0.0 disable
set policy-options policy-statement lb then load-balance per-packet
set routing-options traceoptions file ro.log
set routing-options traceoptions flag normal
set routing-options traceoptions flag route
set routing-options autonomous-system 100
set routing-options forwarding-table export lb
set routing-instances foo instance-type l2vpn
set routing-instances foo egress-protection protector
set routing-instances foo interface ge-2/0/2.0
set routing-instances foo route-distinguisher 10.255.183.57:1
set routing-instances foo vrf-target target:9000:1
set routing-instances foo protocols l2vpn encapsulation-type ethernet-vlan
set routing-instances foo protocols l2vpn site foo hot-standby
set routing-instances foo protocols l2vpn site foo site-identifier 1
set routing-instances foo protocols l2vpn site foo multi-homing
set routing-instances foo protocols l2vpn site foo site-preference backup
set routing-instances foo protocols l2vpn site foo interface ge-2/0/2.0 remote-site-id 2

```

### PE3

```

set protocols rsvp interface all
set protocols rsvp interface fxp0.0 disable
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols bgp traceoptions file bgp.log world-readable
set protocols bgp group ibgp type internal
set protocols bgp group ibgp local-address 10.255.183.61
set protocols bgp group ibgp family inet unicast
set protocols bgp group ibgp family l2vpn signaling
set protocols bgp group ibgp neighbor 192.0.2.3
set protocols bgp group ibgp neighbor 192.0.2.4
set protocols isis traceoptions file isis-edge size 10m world-readable
set protocols isis traceoptions flag error
set protocols isis level 1 disable
set protocols isis level 2 wide-metrics-only
set protocols isis interface all point-to-point
set protocols isis interface all level 2 metric 10
set protocols isis interface fxp0.0 disable
set protocols ldp interface all
set protocols ldp interface fxp0.0 disable
set policy-options policy-statement lb then load-balance per-packet
set routing-options traceoptions file ro.log
set routing-options traceoptions flag normal
set routing-options traceoptions flag route

```

```

set routing-options autonomous-system 100
set routing-options forwarding-table export lb
set routing-instances foo instance-type l2vpn
set routing-instances foo interface ge-2/1/2.0
set routing-instances foo route-distinguisher 10.255.183.61:1
set routing-instances foo vrf-target target:9000:1
set routing-instances foo protocols l2vpn encapsulation-type ethernet-vlan
set routing-instances foo protocols l2vpn site foo site-identifier 2
set routing-instances foo protocols l2vpn site foo interface ge-2/1/2.0 remote-site-id 1

```

### Step-by-Step Procedure

**Step-by-Step Procedure** The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode*.

To configure an egress protection LSP for router PE1:

1. Configure RSVP.

```

[edit protocols rsvp]
user@PE1# set interface all
user@PE1# set interface fxp0.0 disable

```

2. Configure MPLS to use the egress protection LSP to protect against a link failure to Device CE1.

```

[edit protocols mpls]
user@PE1# set interface all
user@PE1# set interface fxp0.0 disable
user@PE1# set egress-protection context-identifier 198.51.100.3 primary
user@PE1# set egress-protection context-identifier 198.51.100.3 advertise-mode
  stub-alias
user@PE1# set egress-protection traceoptions file ep size 100m
user@PE1# set egress-protection traceoptions flag all

```

3. Configure BGP.

```

[edit protocols bgp]
user@PE1# set traceoptions file bgp.log world-readable
user@PE1# set group ibgp type internal
user@PE1# set group ibgp local-address 10.255.183.58
user@PE1# set group ibgp family inet unicast
user@PE1# set group ibgp family l2vpn signaling egress-protection
user@PE1# set group ibgp neighbor 192.0.2.3
user@PE1# set group ibgp neighbor 192.0.2.4

```

4. Configure IS-IS.

```

[edit protocols isis]
user@PE1# set traceoptions file isis-edge size 10m world-readable
user@PE1# set traceoptions flag error
user@PE1# set level 1 disable
user@PE1# set level 2 wide-metrics-only
user@PE1# set interface all point-to-point
user@PE1# set interface all level 2 metric 10
user@PE1# set interface fxp0.0 disable

```

5. Configure LDP.
 

```
[edit protocols ldp]
user@PE1# set interface all
user@PE1# set interface fxp0.0 disable
```
6. Configure a load-balancing policy.
 

```
[edit]
user@PE1# set policy-options policy-statement lb then load-balance per-packet
```
7. Configure the routing options to export routes based on the load-balancing policy.
 

```
[edit routing-options]
user@PE1# set traceoptions file ro.log
user@PE1# set traceoptions flag all
user@PE1# set autonomous-system 100
user@PE1# set forwarding-table export lb
```
8. Configure BGP to advertise nrli from the routing instance with context-ID as next-hop.
 

```
[edit routing-instances]
user@PE1# set foo instance-type l2vpn
user@PE1# set foo egress-protection context-identifier 198.51.100.3
user@PE1# set foo interface ge-2/0/2.0
user@PE1# set foo route-distinguisher 10.255.183.58:1
user@PE1# set foo vrf-target target:9000:1
```
9. Configure l2vpn instance to use the egress LSP configured.
 

```
[edit routing-instances]
user@PE1# set foo protocols l2vpn encapsulation-type ethernet-vlan
user@PE1# set foo protocols l2vpn site foo site-identifier 1
user@PE1# set foo protocols l2vpn site foo multi-homing
user@PE1# set foo protocols l2vpn site foo site-preference primary
user@PE1# set foo protocols l2vpn site foo interface ge-2/0/2.0 remote-site-id 2
```
10. If you are done configuring the device, enter **commit** from configuration mode.

#### Step-by-Step Procedure

To configure an egress protection LSP for Router PE2:

1. Configure RSVP.
 

```
[edit protocols rsvp]
user@PE2# set interface all
user@PE2# set interface fxp0.0 disable
```
2. Configure MPLS and the LSP that acts as the egress protection LSP.
 

```
[edit protocols mpls]
user@PE2# set interface all
user@PE2# set interface fxp0.0 disable
user@PE2# set egress-protection context-identifier 198.51.100.3 protector
user@PE2# set egress-protection context-identifier 198.51.100.3 advertise-mode stub-alias
user@PE2# set egress-protection traceoptions file ep size 100m
user@PE2# set egress-protection traceoptions flag all
```
3. Configure BGP.
 

```
[edit protocols bgp]
```

- ```
user@PE2# set traceoptions file bgp.log world-readable
user@PE2# set group ibgp type internal
user@PE2# set group ibgp local-address 10.255.183.57
user@PE2# set group ibgp family inet unicast
user@PE2# set group ibgp family l2vpn signaling
user@PE2# set group ibgp family l2vpn egress-protection
user@PE2# set group ibgp neighbor 192.0.2.3
user@PE2# set group ibgp neighbor 192.0.2.4
```
4. Configure IS-IS.

```
[edit protocols isis]
user@PE2# set traceoptions file isis-edge size 10m world-readable
user@PE2# set traceoptions flag error
user@PE2# set level 1 disable
user@PE2# set level 2 wide-metrics-only
user@PE2# set interface all point-to-point
user@PE2# set interface all level 2 metric 10
user@PE2# set interface fxp0.0 disable
```
  5. Configure LDP.

```
[edit protocols ldp]
user@PE2# set interface all
user@PE2# set interface fxp0.0 disable
```
  6. Configure a load-balancing policy.

```
[edit]
user@PE2# set policy-options policy-statement lb then load-balance per-packet
```
  7. Configure the routing options to export routes based on the load-balancing policy.

```
[edit routing-options]
user@PE2# set traceoptions file ro.log
user@PE2# set traceoptions flag all
user@PE2# set autonomous-system 100
user@PE2# set forwarding-table export lb
```
  8. Configure BGP to advertise nrli from the routing instance with context-ID as next-hop.

```
[edit routing-instances]
user@PE2# set foo instance-type l2vpn
user@PE2# set foo egress-protection protector
user@PE2# set foo interface ge-2/0/2.0
user@PE2# set foo route-distinguisher 10.255.183.57:1
user@PE2# set foo vrf-target target:9000:1
```
  9. Configure l2vpn instance to use the egress LSP configured.

```
[edit routing-instances]
user@PE2# set foo protocols l2vpn encapsulation-type ethernet-vlan
user@PE2# set foo protocols l2vpn site foo hot-standby
user@PE2# set foo protocols l2vpn site foo site-identifier 1
user@PE2# set foo protocols l2vpn site foo multi-homing
user@PE2# set foo protocols l2vpn site foo site-preference backup
user@PE2# set foo protocols l2vpn site foo interface ge-2/0/2.0 remote-site-id 2
```
  10. If you are done configuring the device, enter **commit** from configuration mode.



**Step-by-Step Procedure**

To configure an egress protection LSP for Router PE3:

1. Configure RSVP.
 

```
[edit protocols rsvp]
user@PE3# set interface all
user@PE3# set interface fxp0.0 disable
```
2. Configure MPLS.
 

```
[edit protocols mpls]
user@PE3# set interface all
user@PE3# set interface fxp0.0 disable
```
3. Configure BGP.
 

```
[edit protocols bgp]
user@PE3# set traceoptions file bgp.log world-readable
user@PE3# set group ibgp type internal
user@PE3# set group ibgp local-address 10.255.183.61
user@PE3# set group ibgp family inet unicast
user@PE3# set group ibgp family l2vpn signaling
user@PE3# set group ibgp neighbor 192.0.2.3
user@PE3# set group ibgp neighbor 192.0.2.4
```
4. Configure IS-IS.
 

```
[edit protocols isis]
user@PE3# set traceoptions file isis-edge size 10m world-readable
user@PE3# set traceoptions flag error
user@PE3# set level 1 disable
user@PE3# set level 2 wide-metrics-only
user@PE3# set protocols isis interface all point-to-point
[edit protocols isis]
user@PE3# set protocols isis interface all level 2 metric 10
[edit protocols isis]
user@PE3# set protocols isis interface fxp0.0 disable
```
5. Configure LDP.
 

```
[edit protocols ldp]
user@PE3# set interface all
user@PE3# set interface fxp0.0 disable
```
6. Configure a load-balancing policy.
 

```
[edit]
user@PE3# set policy-options policy-statement lb then load-balance per-packet
```
7. Configure the routing options to export routes based on the load-balancing policy.
 

```
[edit routing-options]
user@PE3# set traceoptions file ro.log
user@PE3# set traceoptions flag normal
user@PE3# set traceoptions flag route
user@PE3# set autonomous-system 100
user@PE3# set forwarding-table export lb
```
8. Configure BGP to advertise nlri from the routing instance with context-ID as next-hop.
 

```
[edit]
```

```

user@PE3# set routing-instances foo instance-type l2vpn
user@PE3# set routing-instances foo interface ge-2/1/2.0
user@PE3# set routing-instances foo route-distinguisher 10.255.183.61:1
user@PE3# set routing-instances foo vrf-target target:9000:1

```

9. Configure l2vpn to specify the interface that connects to the site and the remote interface to which you want the specified interface to connect.

```

[edit routing-instances]
user@PE3# set foo protocols l2vpn encapsulation-type ethernet-vlan
user@PE3# set foo protocols l2vpn site foo site-identifier 2
user@PE3# set foo protocols l2vpn site foo interface ge-2/1/2.0 remote-site-id 1

```

10. If you are done configuring the device, enter **commit** from configuration.

## Results

From configuration mode, confirm your configuration on Router PE1 by entering the **show protocols**, **show policy-options**, and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```

[edit]
user@PE1# show protocols
rsvp {
  interface all;
  interface fxp0.0 {
    disable;
  }
}
mpls {
  interface all;
  interface fxp0.0 {
    disable;
  }
  egress-protection {
    context-identifier 198.51.100.3 {
      primary;
      advertise-mode stub-alias;
    }
    traceoptions {
      file ep size 100m;
      flag all;
    }
  }
}
}
bgp {
  traceoptions {
    file bgp.log world-readable;
  }
  group ibgp {
    type internal;
    local-address 10.255.183.58;
    family inet {
      unicast;
    }
  }
}

```

```

        family l2vpn {
            signaling {
                egress-protection;
            }
        }
        neighbor 192.0.2.3;
        neighbor 192.0.2.4;
    }
}
isis {
    traceoptions {
        file isis-edge size 10m world-readable;
        flag error;
    }
    level 1 disable;
    level 2 wide-metrics-only;
    interface all {
        point-to-point;
        level 2 metric 10;
    }
    interface fxp0.0 {
        disable;
    }
}
ldp {
    interface all;
    interface fxp0.0 {
        disable;
    }
}

```

```

[edit]
user@PE1# show policy-options
policy-statement lb {
    then {
        load-balance per-packet;
    }
}

```

```

[edit]
user@PE1# show routing-options
traceoptions {
    file ro.log;
    flag all;
}
autonomous-system 100;
forwarding-table {
    export lb;
}

```

```

[edit]
user@PE1# show routing-instances
foo {
    instance-type l2vpn;
    egress-protection {
        context-identifier {

```

```
        198.51.100.3;
    }
}
interface ge-2/0/2.0;
route-distinguisher 10.255.183.58:1;
vrf-target target:9000:1;
protocols {
  l2vpn {
    encapsulation-type ethernet-vlan;
    site foo {
      site-identifier 1;
      multi-homing;
      site-preference primary;
      interface ge-2/0/2.0 {
        remote-site-id 2;
      }
    }
  }
}
}
```

From configuration mode, confirm your configuration on Router PE2 by entering the **show protocols**, **show policy-options**, and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
[edit]
user@PE2# show protocols
rsvp {
  interface all;
  interface fxp0.0 {
    disable;
  }
}
mpls {
  interface all;
  interface fxp0.0 {
    disable;
  }
  egress-protection {
    context-identifier 198.51.100.3 {
      protector;
      advertise-mode stub-alias;
    }
    traceoptions {
      file ep size 100m;
      flag all;
    }
  }
}
}
bgp {
  traceoptions {
    file bgp.log world-readable;
  }
  group ibgp {
    type internal;
  }
}
```

```

    local-address 10.255.183.57;
    family inet {
        unicast;
    }
    family l2vpn {
        signaling {
            egress-protection;
        }
    }
    neighbor 192.0.2.3;
    neighbor 192.0.2.4;
}
}
isis {
    traceoptions {
        file isis-edge size 10m world-readable;
        flag error;
    }
    level 1 disable;
    level 2 wide-metrics-only;
    interface all {
        point-to-point;
        level 2 metric 10;
    }
    interface fxp0.0 {
        disable;
    }
}
ldp {
    interface all;
    interface fxp0.0 {
        disable;
    }
}

```

```

[edit]
user@PE2# show policy-options
policy-statement lb {
    then {
        load-balance per-packet;
    }
}

```

```

[edit]
user@PE2# show routing-options
traceoptions {
    file ro.log;
    flag normal;
    flag route;
}
autonomous-system 100;
forwarding-table {
    export lb;
}

```

```
[edit]
user@PE2# show routing-instances
foo {
  instance-type l2vpn;
  egress-protection {
    protector;
  }
  interface ge-2/0/2.0;
  route-distinguisher 10.255.183.57:1;
  vrf-target target:9000:1;
  protocols {
    l2vpn {
      encapsulation-type ethernet-vlan;
      site foo {
        hot-standby;
        site-identifier 1;
        multi-homing;
        site-preference backup;
        interface ge-2/0/2.0 {
          remote-site-id 2;
        }
      }
    }
  }
}
```

From configuration mode, confirm your configuration on Router PE3 by entering the **show protocols**, **show policy-options**, and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
[edit]
user@PE3# show protocols
rsvp {
  interface all;
  interface fxp0.0 {
    disable;
  }
}
mpls {
  interface all;
  interface fxp0.0 {
    disable;
  }
}
bgp {
  traceoptions {
    file bgp.log world-readable;
  }
  group ibgp {
    type internal;
    local-address 10.255.183.61;
    family inet {
      unicast;
    }
    family l2vpn {
```

```

        signaling;
    }
    neighbor 192.0.2.3;
    neighbor 192.0.2.4;
}
isis {
    traceoptions {
        file isis-edge size 10m world-readable;
        flag error;
    }
    level 1 disable;
    level 2 wide-metrics-only;
    interface all {
        point-to-point;
        level 2 metric 10;
    }
    interface fxp0.0 {
        disable;
    }
}
ldp {
    interface all;
    interface fxp0.0 {
        disable;
    }
}

```

```

[edit]
user@PE3# show policy-options
policy-statement lb {
    then {
        load-balance per-packet;
    }
}

```

```

[edit]
user@PE3# show routing-options
traceoptions {
    file ro.log;
    flag normal;
    flag route;
}
autonomous-system 100;
forwarding-table {
    export lb;
}

```

```

[edit]
user@PE3# show routing-instances
foo {
    instance-type l2vpn;
    interface ge-2/1/2.0;
    route-distinguisher 10.255.183.61:1;
    vrf-target target:9000:1;
}

```

```

protocols {
  l2vpn {
    encapsulation-type ethernet-vlan;
    site foo {
      site-identifier 2;
      interface ge-2/1/2.0 {
        remote-site-id 1;
      }
    }
  }
}

```

## Verification

Confirm that the configuration is working properly.

- [Verifying the L2VPN Configuration on page 194](#)
- [Verifying the Routing Instance Details on page 195](#)
- [Verifying the IS-IS Configuration on page 195](#)
- [Verifying the MPLS Configuration on page 196](#)

### Verifying the L2VPN Configuration

**Purpose** Verify that LSP is protected by the connection protection logic.

**Action** From operational mode, run the **show l2vpn connections extensive** command.

```
user@PE2> show l2vpn connections extensive
```

```

Layer-2 VPN connections:
Legend for connection status (St)
EI -- encapsulation invalid      NC -- interface encapsulation not CCC/TCC/VPLS
EM -- encapsulation mismatch    WE -- interface and instance encaps not same
VC-Dn -- Virtual circuit down  NP -- interface hardware not present
CM -- control-word mismatch     -> -- only outbound connection is up
CN -- circuit not provisioned   <- -- only inbound connection is up
OR -- out of range             Up -- operational
OL -- no outgoing label        Dn -- down
LD -- local site signaled down  CF -- call admission control failure
RD -- remote site signaled down SC -- local and remote site ID collision
LN -- local site not designated LM -- local site ID not minimum designated
RN -- remote site not designated RM -- remote site ID not minimum designated
XX -- unknown connection status IL -- no incoming label
MM -- MTU mismatch             MI -- Mesh-Group ID not available
BK -- Backup connection        ST -- Standby connection
PF -- Profile parse failure     PB -- Profile busy
RS -- remote site standby       SN -- Static Neighbor
LB -- Local site not best-site  RB -- Remote site not best-site
VM -- VLAN ID mismatch

Legend for interface status
Up -- operational
Dn -- down
Instance: foo
Local site: foo (1)
connection-site      Type  St  Time last up      # Up trans

```



```

2                                rmt  Up  Aug 3 00:08:14 2001          1
Local circuit: ge-2/0/2.0, Status: Up
Remote PE: 192.0.2.3
Incoming label: 32769, Outgoing label: 32768
Egress Protection: Yes
  Time      Event                      Interface/Lbl/PE
  Aug 3 00:08:14 2001 PE route up
  Aug 3 00:08:14 2001 Out lbl Update          32768
  Aug 3 00:08:14 2001 In lbl Update           32769
  Aug 3 00:08:14 2001 ckt0 up                  fe-0/0/0.0

```

**Meaning** The **Egress Protection: Yes** output shows that the given PVC is protected by connection protection logic.

### Verifying the Routing Instance Details

**Purpose** Verify the routing instance information and the context identifier configured on the primary, which is used as the next-hop address in case of node-link failure.

**Action** From operational mode, run the **show route foo detail** command.

```

user@PE2> show route foo detail

foo:
Router ID: 0.0.0.0
Type: l2vpn non-forwarding State: Active
Interfaces:
  lt-1/2/0.56
Route-distinguisher: 10.255.255.11:1
Vrf-import: [ __vrf-import-foo-internal__ ]
Vrf-export: [ __vrf-export-foo-internal__ ]
Vrf-import-target: [ target:100:200 ]
Vrf-export-target: [ target:100:200 ]
Fast-reroute-priority: low
Vrf-edge-protection-id: 198.51.100.3
Tables:
  foo.l2vpn.0          : 5 routes (3 active, 0 holddown, 0 hidden)
  foo.l2id.0           : 6 routes (2 active, 0 holddown, 0 hidden)

```

**Meaning** The context-id is set to **198.51.100.3** and the **Vrf-import: [ \_\_vrf-import-foo-internal\_\_ ]** in the output mentions the policy used for rewriting the next-hop address.

### Verifying the IS-IS Configuration

**Purpose** Verify the IS-IS context identifier information.

**Action** From operational mode, run the **show isis context-identifier detail** command.

```

user@PE2> show isis context-identifier detail

IS-IS context database:
Context      L  Owner      Role      Primary      Metric
198.51.100.3 2  MPLS      Protector pro17-b-lr-R1 0
Advertiser pro17-b, Router ID 10.255.107.49, Level 2, tlv protector
Advertiser pro17-b-lr-R1, Router ID 10.255.255.11, Metric 1, Level 2, tlv prefix

```

**Meaning** Router PE2 is the protector and the configured context identifier is in use for the MPLS protocol.

### Verifying the MPLS Configuration

**Purpose** Verify the context identifier details on the primary and protector PEs.

**Action** From operational mode, run the **show mpls context-identifier detail** command.

```

user@PE1> show mpls context-identifier detail

ID: 198.51.100.3
  Type: primary, Metric: 1, Mode: alias

Total 1, Primary 1, Protector 0

user@PE2> show mpls context-identifier detail

ID: 198.51.100.3
  Type: protector, Metric: 16777215, Mode: alias
  Context table: __198.51.100.3__.mpls.0, Label out: 299968

user@PE2> show mpls egress-protection detail

```

```

Instance          Type      Protection-Type
foo               local-l2vpn Protector
  Route Target 100:200

```

**Meaning** Context-id is **198.51.100.3**, advertise-mode is **alias**, the MPLS table created for egress protection is **\_\_198.51.100.3\_\_.mpls.0**, and the egress instance name is **foo**, which is of type **local-l2vpn**.

### Release History Table

| Release | Description                                                                                                                                        |
|---------|----------------------------------------------------------------------------------------------------------------------------------------------------|
| 14.2    | Starting in Junos OS Release 14.2, Junos OS supports the restoration of egress traffic when there is a link or node failure in the egress PE node. |

**Related Documentation**

- *Configuring Per-Packet Load Balancing*
- *Introduction to Configuring Layer 2 VPNs*
- *site-preference*

## Example: Configuring Layer 3 VPN Egress Protection with PLR as Protector

This example shows how to configure fast service restoration at the egress of a Layer 3 VPN when the customer is multihomed to the service provider.

Starting in Junos OS Release 15.1, the enhanced point of local repair (PLR) functionality addresses a special scenario of egress node protection, where the PLR and the protector are co-located as one router. In this case, there is no need to have a bypass LSP reroute

traffic during local repair. Instead, the PLR or the protector can send the traffic directly to the target CE (in Co-located protector model where the PLR or the protector is also the backup PE that is directly connected to the CE) or to the backup PE (in Centralized protector model where the backup PE is a separate router).

- [Requirements on page 197](#)
- [Overview on page 197](#)
- [Configuration on page 198](#)
- [Verification on page 214](#)

## Requirements

No special configuration beyond device initialization is required before configuring this example.

This example requires Junos OS Release 15.1 or later.

## Overview


As a special scenario of egress node protection, if a router is both a Protector and a PLR, it installs backup next hops to protect the transport LSP. In particular, it does not need a bypass LSP for local repair.

In the Co-located protector model, the PLR or the Protector is directly connected to the CE via a backup AC, while in the Centralized protector model, the PLR or the protector has an MPLS tunnel to the backup PE. In either case, the PLR or the Protector will install a backup next hop with a label followed by a lookup in a **context label** table, i.e. **\_\_context\_\_.mpls.0**. When the egress node fails, the PLR or the Protector will switch traffic to this backup next hop in PFE. The outer label (the transport LSP label) of packets is popped, and the inner label (the layer 3 VPN label allocated by the egress node) is looked up in **\_\_context\_\_.mpls.0**, which results in forwarding the packets directly to the CE (in Collocated protector model) or the backup PE (in Centralized protector model).

## Topology

[Figure 27 on page 197](#) shows the sample network.

**Figure 27: Co-located PLR and protector in collocated protector model**

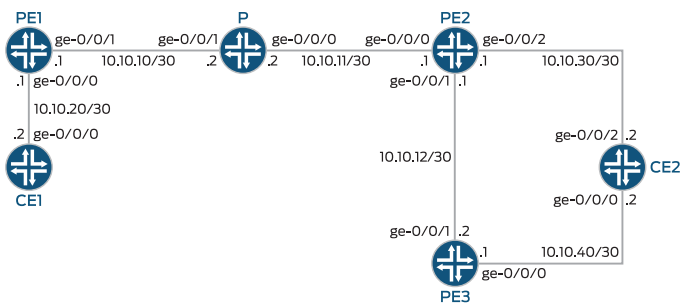

## Configuration

- [Configuring Device CE1 on page 201](#)
- [Configuring Device PE1 on page 201](#)
- [Configuring Device P on page 203](#)
- [Configuring Device PE2 on page 204](#)
- [Configuring Device PE3 on page 205](#)
- [Configuring Device CE2 on page 207](#)
- [Results on page 207](#)

**CLI Quick Configuration** To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

**Device CE1**      `set interfaces ge-0/0/0 unit 0 family inet address 10.10.20.2/30`  
`set interfaces lo0 unit 0 family inet address 10.255.162.87/32`

**Device PE1**      `set interfaces ge-0/0/0 unit 0 family inet address 10.10.20.1/30`  
`set interfaces ge-0/0/1 unit 0 family inet address 10.10.10.1/30`  
`set interfaces ge-0/0/1 unit 0 family inet6`  
`set interfaces ge-0/0/1 unit 0 family iso`  
`set interfaces ge-0/0/1 unit 0 family mpls`  
`set interfaces lo0 unit 0 family inet address 127.0.0.1/32`  
`set interfaces lo0 unit 0 family inet address 10.255.162.84/32 primary`  
`set interfaces lo0 unit 0 family inet6 address abcd::10:255:162:84/128 primary`  
`set interfaces lo0 unit 0 family iso address`  
`47.0005.80ff.f800.0000.0108.0001.0102.5516.2084.00`  
`set policy-options policy-statement vpn-exp term 1 from protocol direct`  
`set policy-options policy-statement vpn-exp term 1 from route filter 10.10.20.0/24 exact`  
`set policy-options policy-statement vpn-exp term 1 then community add vpn`  
`set policy-options policy-statement vpn-exp term 1 then accept`  
`set policy-options policy-statement vpn-imp term 1 from community vpn`  
`set policy-options policy-statement vpn-imp term 1 then accept`  
`set policy-options policy-statement vpn-imp term 2 then reject`  
`set policy-options community vpn members target:1:1`  
`set routing-options autonomous-system 65000`  
`set protocols rsvp interface all link-protection`  
`set protocols rsvp interface fxp0.0 disable`  
`set protocols mpls interface all`  
`set protocols mpls interface fxp0.0 disable`  
`set protocols bgp vpn-apply-export`  
`set protocols bgp group vpn type internal`  
`set protocols bgp group vpn local-address 10.255.162.84`  
`set protocols bgp group vpn family inet-vpn unicast`  
`set protocols bgp group vpn neighbor 10.255.162.91`  
`set protocols bgp group vpn neighbor 10.255.162.89`  
`set protocols isis interface all`  
`set protocols isis interface fxp0.0 disable`  
`set protocols isis interface lo0.0 passive`  
`set routing-instances vpn instance-type vrf`  
`set routing-instances vpn interface ge-1/0/0.0`

```

set routing-instances vpn route-distinguisher 100:100
set routing-instances vpn vrf-import vpn-imp
set routing-instances vpn vrf-export vpn-exp
set routing-instances vpn vrf-table-label
set routing-instances vpn protocols bgp group vpn type external
set routing-instances vpn protocols bgp group vpn family inet unicast
set routing-instances vpn protocols bgp group vpn family inet6 unicast
set routing-instances vpn protocols bgp group vpn peer-as 65001
set routing-instances vpn protocols bgp group vpn as-override
set routing-instances vpn protocols bgp group vpn neighbor 10.10.20.2

```

Device P

```

set interfaces ge-0/0/0 unit 0 family inet address 10.10.11.2/30
set interfaces ge-0/0/0 unit 0 family inet6
set interfaces ge-0/0/0 unit 0 family iso
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 unit 0 family inet address 10.10.10.2/30
set interfaces ge-0/0/1 unit 0 family inet6
set interfaces ge-0/0/1 unit 0 family iso
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 127.0.0.1/32
set interfaces lo0 unit 0 family inet address 10.255.162.86/32 primary
set interfaces lo0 unit 0 family inet6 address abcd::10:255:162:86/128 primary
set interfaces lo0 unit 0 family iso address
    47.0005.80ff.f800.0000.0108.0001.0102.5516.2086.00
set protocols rsvp interface all link-protection
set protocols rsvp interface fxp0.0 disable
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols isis interface all
set protocols isis interface fxp0.0 disable

```

Device PE2

```

set interfaces ge-0/0/0 unit 0 family inet address 10.10.11.1/30
set interfaces ge-0/0/0 unit 0 family iso
set interfaces ge-0/0/0 unit 0 family inet6
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 unit 0 family inet address 10.10.12.1/30
set interfaces ge-0/0/1 unit 0 family iso
set interfaces ge-0/0/1 unit 0 family inet6
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 10.10.30.1/30
set interfaces lo0 unit 0 family inet address 127.0.0.1/32
set interfaces lo0 unit 0 family inet address 10.255.162.91/32 primary
set interfaces lo0 unit 0 family iso address
    47.0005.80ff.f800.0000.0108.0001.0102.5516.2091.00
set interfaces lo0 unit 0 family inet6 address abcd::10:255:162:91/128 primary
set routing-options graceful-restart
set routing-options autonomous-system 65000
set routing-options forwarding-table export pplb
set protocols rsvp interface all link-protection
set protocols rsvp interface fxp0.0 disable
set protocols mpls label-switched-path to_PE1 to 10.255.162.84
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols mpls egress-protection context-identifier 1.1.1.1 protector
set protocols mpls egress-protection context-identifier 1.1.1.1 advertise-mode stub-alias

```

```

set protocols bgp vpn-apply-export
set protocols bgp group vpn type internal
set protocols bgp group vpn local-address 10.255.162.91
set protocols bgp group vpn family inet-vpn unicast egress-protection
set protocols bgp group vpn neighbor 10.255.162.84
set protocols bgp group vpn neighbor 10.255.162.89
set protocols isis traceoptions file isis.log
set protocols isis traceoptions flag all detail
set protocols isis level 2 disable
set protocols isis interface all
set protocols isis interface fxp0.0 disable
set protocols isis interface lo0.0 passive
set policy-options policy-statement pplb term 1 then load-balance per-packet
set policy-options policy-statement vpn-exp term 1 from protocol bgp
set policy-options policy-statement vpn-exp term 1 then community add vpn
set policy-options policy-statement vpn-exp term 1 then accept
set policy-options policy-statement vpn-imp term 1 from community vpn
set policy-options policy-statement vpn-imp term 1 then accept
set policy-options policy-statement vpn-imp term 2 then reject
set policy-options community vpn members target:1:1
set routing-instances vpn instance-type vrf
set routing-instances vpn interface ge-3/2/4.0
set routing-instances vpn route-distinguisher 100:100
set routing-instances vpn vrf-import vpn-imp
set routing-instances vpn vrf-export vpn-exp
set routing-instances vpn vrf-table-label
set routing-instances vpn protocols bgp group vpn type external
set routing-instances vpn protocols bgp group vpn family inet unicast
set routing-instances vpn protocols bgp group vpn family inet6 unicast
set routing-instances vpn protocols bgp group vpn peer-as 65001
set routing-instances vpn protocols bgp group vpn as-override
set routing-instances vpn protocols bgp group vpn neighbor 10.10.30.2

```

**Device PE3**

```

set interfaces ge-0/0/0 unit 0 family inet address 10.10.40.1/30
set interfaces ge-0/0/1 unit 0 family inet address 10.10.12.2/30
set interfaces ge-0/0/1 unit 0 family iso
set interfaces ge-0/0/1 unit 0 family inet6
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 127.0.0.1/32
set interfaces lo0 unit 0 family inet address 10.255.162.89/32 primary
set interfaces lo0 unit 0 family iso address
    47.0005.80ff.f800.0000.0108.0001.0102.5516.2089.00
set interfaces lo0 unit 0 family inet6 address abcd::10:255:162:89/128 primary
set routing-options graceful-restart
set routing-options autonomous-system 65000
set routing-options forwarding-table export pplb
set protocols rsvp interface all link-protection
set protocols rsvp interface fxp0.0 disable
set protocols mpls label-switched-path to_PE2 to 10.255.162.91
set protocols mpls label-switched-path to_PE1 to 10.255.162.84
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols mpls egress-protection context-identifier 1.1.1.1 primary
set protocols mpls egress-protection context-identifier 1.1.1.1 advertise-mode stub-alias
set protocols bgp vpn-apply-export
set protocols bgp group vpn type internal

```

```

set protocols bgp group vpn local-address 10.255.162.89
set protocols bgp group vpn family inet-vpn unicast
set protocols bgp group vpn neighbor 10.255.162.84 local-preference 300
set protocols bgp group vpn neighbor 10.255.162.91
set protocols isis level 2 disable
set protocols isis interface all
set protocols isis interface fxp0.0 disable
set protocols isis interface lo0.0 passive
set routing-instances vpn instance-type vrf
set routing-instances vpn egress-protection context-identifier 1.1.1.1
set routing-instances vpn interface ge-1/1/0.0
set routing-instances vpn route-distinguisher 100:100
set routing-instances vpn vrf-import vpn-imp
set routing-instances vpn vrf-export vpn-exp
set routing-instances vpn vrf-table-label
set routing-instances vpn protocols bgp group vpn type external
set routing-instances vpn protocols bgp group vpn family inet unicast
set routing-instances vpn protocols bgp group vpn family inet6 unicast
set routing-instances vpn protocols bgp group vpn peer-as 65001
set routing-instances vpn protocols bgp group vpn as-override
set routing-instances vpn protocols bgp group vpn neighbor 10.10.40.2

```

**Device CE2**

```

set interfaces ge-0/0/0 unit 0 family inet address 10.10.40.2/30
set interfaces ge-0/0/2 unit 0 family inet address 10.10.30.2/30
set interfaces lo0 unit 0 family inet address 127.0.0.1/32
set interfaces lo0 unit 0 family inet address 10.255.162.88/32 primary
set interfaces lo0 unit 0 family iso address
    47.0005.80ff.f800.0000.0108.0001.0102.5516.2088.00
set interfaces lo0 unit 0 family inet6 address abcd::10:255:162:88/128 primary

```

### Configuring Device CE1

**Step-by-Step Procedure** The following example requires that you navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

1. Configure interfaces.
 

```

[edit interfaces]
user@CE1# set ge-0/0/0 unit 0 family inet address 10.10.20.2/30
user@CE1# set lo0 unit 0 family inet address 10.255.162.87/32

```

### Configuring Device PE1

- Step-by-Step Procedure**
1. Configure the interfaces.
 

```

[edit interfaces]
user@PE1# set ge-0/0/0 unit 0 family inet address 10.10.20.1/30
user@PE1# set ge-0/0/1 unit 0 family inet address 10.10.10.1/30
user@PE1# set ge-0/0/1 unit 0 family iso
user@PE1# set ge-0/0/1 unit 0 family inet6
user@PE1# set ge-0/0/1 unit 0 family mpls
user@PE1# set lo0 unit 0 family inet address 127.0.0.1/32
user@PE1# set lo0 unit 0 family inet address 10.255.162.84/32 primary

```

- ```
user@PE1# set lo0 unit 0 family iso address
47.0005.80ff.f800.0000.0108.0001.0102.5516.2084.00
user@PE1# set lo0 unit 0 family inet6 address abcd::10:255:162:84/128 primary
```
2. Configure the autonomous system (AS) number.

```
[edit routing-options]
user@PE1# set autonomous-system 65000
user@PE1# set forwarding-table export pplb
```
  3. Configure RSVP.

```
[edit protocols rsvp]
user@PE1# set interface all link-protection
user@PE1# set interface fxp0.0 disable
```
  4. Enable MPLS.

```
[edit protocols mpls]
user@PE1# set interface all
user@PE1# set interface fxp0.0 disable
```
  5. Configure BGP.

```
[edit protocols bgp]
user@PE1# set group vpn type internal
user@PE1# set group vpn local-address 10.255.162.84
user@PE1# set group vpn family inet-vpn unicast
user@PE1# set group vpn neighbor 10.255.162.91
user@PE1# set group vpn neighbor 10.255.162.89
user@PE1# set vpn-apply-export
```
  6. Enable IS-IS.

```
[edit protocols isis]
user@PE1# set interface all
user@PE1# set interface fxp0.0 disable
user@PE1# set interface lo0.0 passive
```
  7. (Optional) Configure OSPF

```
[edit protocols ospf]
user@PE1# set area 0.0.0.0 interface all
user@PE1# set area 0.0.0.0 interface fxp0.0 disable
user@PE1# set area 0.0.0.0 interface lo0.0 passive
user@PE1# set traffic-engineering
```
  8. Configure the routing instance.

```
[edit routing-instances]
user@PE1# set vpn instance-type vrf
user@PE1# set vpn interface ge-1/0/0.0
user@PE1# set vpn route-distinguisher 100:100
user@PE1# set vpn vrf-import vpn-imp
user@PE1# set vpn vrf-export vpn-exp
user@PE1# set vpn vrf-table-label
user@PE1# set vpn protocols bgp group vpn type external
user@PE1# set vpn protocols bgp group vpn family inet unicast
user@PE1# set vpn protocols bgp group vpn family inet6 unicast
user@PE1# set vpn protocols bgp group vpn peer-as 65001
user@PE1# set vpn protocols bgp group vpn as-override
```



```
user@PE1# set vpn protocols bgp group vpn neighbor 10.10.20.2
```

9. Configure the routing policy.

```
[edit]
user@PE1# set policy-options policy-statement vpn-exp term 1 from protocol direct
user@PE1# set policy-options policy-statement vpn-exp term 1 from route filter
10.10.20.0/24 exact
user@PE1# set policy-options policy-statement vpn-exp term 1 then community
add vpn
user@PE1# set policy-options policy-statement vpn-exp term 1 then accept
user@PE1# set policy-options policy-statement vpn-imp term 1 from community
vpn
user@PE1# set policy-options policy-statement vpn-imp term 1 then accept
user@PE1# set policy-options policy-statement vpn-imp term 2 then reject
user@PE1# set policy-options community vpn members target:1:1
```

### Configuring Device P

#### Step-by-Step Procedure

1. Configure the device interfaces.

```
[edit interfaces]
user@P# set ge-0/0/0 unit 0 family inet address 10.10.11.2/30
user@P# set ge-0/0/0 unit 0 family inet6
user@P# set ge-0/0/0 unit 0 family iso
user@P# set ge-0/0/0 unit 0 family mpls
user@P# set ge-0/0/1 unit 0 family inet address 10.10.10.2/30
user@P# set ge-0/0/1 unit 0 family inet6
user@P# set ge-0/0/1 unit 0 family iso
user@P# set ge-0/0/1 unit 0 family mpls
user@P# set lo0 unit 0 family inet address 127.0.0.1/32
user@P# set lo0 unit 0 family inet address 10.255.162.86/32 primary
user@P# set lo0 unit 0 family inet6 address abcd::10:255:162:86/128 primary
user@P# set lo0 unit 0 family iso address
47.0005.80ff.f800.0000.0108.0001.0102.5516.2086.00
```

2. Enable IS-IS.

```
[edit protocols isis]
user@P# set interface all
user@P# set interface fxp0.0 disable
```

3. Enable MPLS.

```
[edit protocols mpls ]
user@P# set interface all
user@P# set interface fxp0.0 disable
```

4. Configure RSVP.

```
[edit protocols rsvp]
user@P# set interface all link-protection
user@P# set interface fxp0.0 disable
```

5. (Optional) Configure OSPF.

```
[edit protocols ospf]
user@P# set area 0.0.0.0 interface all
user@P# set area 0.0.0.0 interface fxp0.0 disable
```

```

user@P# set area 0.0.0.0 interface lo0.0 passive
user@P# set traffic-engineering

```

## Configuring Device PE2

### Step-by-Step Procedure

1. Configure the interfaces.
 

```

[edit interfaces]
user@PE2# set ge-0/0/0 unit 0 family inet address 10.10.11.1/30
user@PE2# set ge-0/0/0 unit 0 family iso
user@PE2# set ge-0/0/0 unit 0 family inet6
user@PE2# set ge-0/0/0 unit 0 family mpls
user@PE2# set ge-0/0/1 unit 0 family inet address 10.10.12.1/30
user@PE2# set ge-0/0/1 unit 0 family iso
user@PE2# set ge-0/0/1 unit 0 family inet6
user@PE2# set ge-0/0/1 unit 0 family mpls
user@PE2# set ge-0/0/2 unit 0 family inet address 10.10.30.1/30
user@PE2# set lo0 unit 0 family inet address 127.0.0.1/32
user@PE2# set lo0 unit 0 family inet address 10.255.162.91/32 primary
user@PE2# set lo0 unit 0 family iso address
47.0005.80ff.f800.0000.0108.0001.0102.5516.2091.00
user@PE2# set lo0 unit 0 family inet6 address abcd::10:255:162:91/128 primary

```
2. Configure autonomous number(AS).
 

```

[edit routing-options]
user@PE2# set autonomous-system 65000
user@PE2# set forwarding-table export pplb

```
3. Configure RSVP.
 

```

[edit protocols rsvp]
user@PE2# set interface all link-protection
user@PE2# set interface fxp0.0 disable

```
4. Configure MPLS.
 

```

[edit protocols mpls]
user@PE2# set label-switched-path to_PE1 to 10.255.162.84
user@PE2# set interface all
user@PE2# set interface fxp0.0 disable
user@PE2# set egress-protection context-identifier 1.1.1.1 protector
user@PE2# set egress-protection context-identifier 1.1.1.1 advertise-mode stub-alias

```
5. Configure BGP.
 

```

[edit protocols bgp]
user@PE2# set group vpn family inet-vpn unicast egress-protection
user@PE2# set group vpn local-address 10.255.162.91
user@PE2# set group vpn neighbor 10.255.162.84
user@PE2# set group vpn neighbor 10.255.162.89
user@PE2# set group vpn type internal
user@PE2# set vpn-apply-export

```
6. Configure IS-IS.
 

```

[edit protocols isis]
user@PE2# set interface all
user@PE2# set interface fxp0.0 disable

```

```

user@PE2# set interface lo0.0 passive
user@PE2# set level 2 disable
user@PE2# set traceoptions file isis.log
user@PE2# set traceoptions flag all detail

```

7. (Optional) Configure OSPF.

```

[edit protocols ospf]
user@PE2# set area 0.0.0.0 interface all
user@PE2# set area 0.0.0.0 interface fxp0.0 disable
user@PE2# set area 0.0.0.0 interface lo0.0 passive
user@PE2# set traffic-engineering

```

8. Configure the routing policy.

```

[edit policy-options]
user@PE2# set community vpn members target:1:1
user@PE2# set policy-statement pplb term 1 then load-balance per-packet
user@PE2# set policy-statement vpn-exp term 1 from protocol bgp
user@PE2# set policy-statement vpn-exp term 1 then community add vpn
user@PE2# set policy-statement vpn-exp term 1 then accept
user@PE2# set policy-statement vpn-imp term 1 from community vpn
user@PE2# set policy-statement vpn-imp term 1 then accept
user@PE2# set policy-statement vpn-imp term 2 then reject

```

9. Configure the routing instance.

```

[edit routing-instances]
user@PE2# set vpn instance-type vrf
user@PE2# set vpn interface ge-3/2/4.0
user@PE2# set vpn route-distinguisher 100:100
user@PE2# set vpn vrf-import vpn-imp
user@PE2# set vpn vrf-export vpn-exp
user@PE2# set vpn vrf-table-label
user@PE2# set vpn protocols bgp group vpn type external
user@PE2# set vpn protocols bgp group vpn family inet unicast
user@PE2# set vpn protocols bgp group vpn family inet6 unicast
user@PE2# set vpn protocols bgp group vpn peer-as 65001
user@PE2# set vpn protocols bgp group vpn as-override
user@PE2# set vpn protocols bgp group vpn neighbor 10.10.30.2

```

### Configuring Device PE3

#### Step-by-Step Procedure

1. Configure the interfaces.

```

[edit interfaces]
user@PE3# set ge-0/0/0 unit 0 family inet address 10.10.40.1/30
user@PE3# set ge-0/0/1 unit 0 family inet address 10.10.12.2/30
user@PE3# set ge-0/0/1 unit 0 family iso
user@PE3# set ge-0/0/1 unit 0 family inet6
user@PE3# set ge-0/0/1 unit 0 family mpls
user@PE3# set lo0 unit 0 family inet address 127.0.0.1/32
user@PE3# set lo0 unit 0 family inet address 10.255.162.89/32 primary
user@PE3# set lo0 unit 0 family iso address
47.0005.80ff.f800.0000.0108.0001.0102.5516.2089.00
user@PE3# set lo0 unit 0 family inet6 address abcd::10:255:162:89/128 primary

```

2. Configure the autonomous number (AS).

- ```
[edit routing-options]
user@PE3# set autonomous-system 65000
user@PE3# set forwarding-table export pplb
```
3. Configure RSVP.

```
[edit protocols rsvp]
user@PE3# set interface all link-protection
user@PE3# set interface fxp0.0 disable
```
  4. Configure MPLS.

```
[edit protocols mpls]
user@PE3# set interface all
user@PE3# set interface fxp0.0 disable
user@PE3# set egress-protection context-identifier 1.1.1.1 primary
user@PE3# set egress-protection context-identifier 1.1.1.1 advertise-mode stub-alias
user@PE3# set label-switched-path to_PE2 to 10.255.162.91
user@PE3# set label-switched-path to_PE1 to 10.255.162.84
```
  5. Configure BGP.

```
[edit protocols bgp]
user@PE3# set group vpn type internal
user@PE3# set group vpn local-address 10.255.162.89
user@PE3# set group vpn family inet-vpn unicast
user@PE3# set group vpn neighbor 10.255.162.84 local-preference 300
user@PE3# set group vpn neighbor 10.255.162.91
user@PE3# set vpn-apply-export
```
  6. Configure IS-IS.

```
[edit protocols isis]
user@PE3# set interface all
user@PE3# set interface fxp0.0 disable
user@PE3# set interface lo0.0 passive
user@PE3# set level 2 disable
```
  7. (Optional) Configure OSPF.

```
[edit protocols ospf]
user@PE3# set area 0.0.0.0 interface all
user@PE3# set area 0.0.0.0 interface fxp0.0 disable
user@PE3# set area 0.0.0.0 interface lo0.0 passive
user@PE3# set traffic-engineering
```
  8. Configure the routing instance.

```
[edit routing-instances]
user@PE3# set vpn egress-protection context-identifier 1.1.1.1
user@PE3# set vpn instance-type vrf
user@PE3# set vpn interface ge-1/1/0.0
user@PE3# set vpn protocols bgp group vpn type external
user@PE3# set vpn protocols bgp group vpn family inet unicast
user@PE3# set vpn protocols bgp group vpn family inet6 unicast
user@PE3# set vpn protocols bgp group vpn peer-as 65001
user@PE3# set vpn protocols bgp group vpn as-override
user@PE3# set vpn protocols bgp group vpn neighbor 10.10.40.2
user@PE3# set vpn route-distinguisher 100:100
user@PE3# set vpn vrf-export vpn-exp
```

```

user@PE3# set vpn vrf-import vpn-imp
user@PE3# set vpn vrf-table-label

```

### Configuring Device CE2

#### Step-by-Step Procedure

1. Configure the interfaces.  

```

[edit interfaces]
user@CE2# set ge-0/0/0 unit 0 family inet address 10.10.40.2/30
user@CE2# set ge-0/0/2 unit 0 family inet address 10.10.30.2/30
user@CE2# set lo0 unit 0 family inet address 127.0.0.1/32
user@CE2# set lo0 unit 0 family inet address 10.255.162.88/32 primary
user@CE2# set lo0 unit 0 family iso address
47.0005.80ff.f800.0000.0108.0001.0102.5516.2088.00
user@CE2# set lo0 unit 0 family inet6 address abcd::10:255:162:88/128 primary

```

### Results

From configuration mode, confirm your configuration by entering the **show interfaces** and **show protocols** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```

Device CE1 user@CE1# show interfaces
ge-0/0/0 {
  unit 0 {
    family inet {
      address 10.10.20.2/30;
    }
  }
}

Device PE1 user@PE1# show interfaces
ge-0/0/0 {
  unit 0 {
    family inet {
      address 10.10.20.1/30;
    }
  }
}
ge-0/0/1 {
  unit 0 {
    family inet {
      address 10.10.10.1/30;
    }
    family iso;
    family inet6;
    family mpls;
  }
}
lo0 {
  unit 0 {
    family inet {
      address 127.0.0.1/32;
      address 10.255.162.84/32 {
        primary;
      }
    }
  }
}

```

```
    }  
  }  
  family iso {  
    address 47.0005.80ff.f800.0000.0108.0001.0102.5516.2084.00;  
  }  
  family inet6 {  
    address abcd::10:255:162:84/128 {  
      primary;  
    }  
  }  
}
```

user@PE1# show protocols

```
rsvp {  
  interface all {  
    link-protection;  
  }  
  interface fxp0.0 {  
    disable;  
  }  
}  
mpls {  
  interface all;  
  interface fxp0.0 {  
    disable;  
  }  
}  
bgp {  
  vpn-apply-export;  
  group vpn {  
    type internal;  
    local-address 10.255.162.84;  
    family inet-vpn {  
      unicast;  
    }  
    neighbor 10.255.162.91;  
    neighbor 10.255.162.89;  
  }  
}  
isis {  
  interface all;  
  interface fxp0.0 {  
    disable;  
  }  
  interface lo0.0 {  
    passive;  
  }  
}
```

**Device P** user@P# show interfaces  
ge-0/0/0 {  
 unit 0 {  
 family inet {  
 address 10.10.11.2/30;  
 }  
 }  
}

```

        family iso;
        family inet6;
        family mpls;
    }
}
ge-0/0/1 {
    unit 0 {
        family inet {
            address 10.10.10.2/30;
        }
        family iso;
        family inet6;
        family mpls;
    }
}
lo0 {
    unit 0 {
        family inet {
            address 127.0.0.1/32;
            address 10.255.162.86/32 {
                primary;
            }
        }
        family iso {
            address 47.0005.80ff.f800.0000.0108.0001.0102.5516.2086.00;
        }
        family inet6 {
            address abcd::10:255:162:86/128 {
                primary;
            }
        }
    }
}

```

**user@P# show protocols**

```

rsvp {
    interface all {
        link-protection;
    }
    interface fxp0.0 {
        disable;
    }
}
mpls {
    interface all;
    interface fxp0.0 {
        disable;
    }
}
isis {
    interface all;
    interface fxp0.0 {
        disable;
    }
}

```

```
Device PE2      user@PE2# show interfaces
ge-0/0/0 {
  unit 0 {
    family inet {
      address 10.10.11.1/30;
    }
    family iso;
    family inet6;
    family mpls;
  }
}
ge-0/0/1 {
  unit 0 {
    family inet {
      address 10.10.12.1/30;
    }
    family iso;
    family inet6;
    family mpls;
  }
}
ge-0/0/2 {
  unit 0 {
    family inet {
      address 10.10.30.1/30;
    }
  }
}
lo0 {
  unit 0 {
    family inet {
      address 127.0.0.1/32;
      address 10.255.162.91/32 {
        primary;
      }
    }
    family iso {
      address 47.0005.80ff.f800.0000.0108.0001.0102.5516.2091.00;
    }
    family inet6 {
      address abcd::10:255:162:91/128 {
        primary;
      }
    }
  }
}

user@PE2# show protocols
rsvp {
  interface all {
    link-protection;
  }
  interface fxp0.0 {
    disable;
  }
}
```



```

}
mpls {
  label-switched-path to_PE1 {
    to 10.255.162.84;
  }
  interface all;
  interface fxp0.0 {
    disable;
  }
  egress-protection {
    context-identifier 1.1.1.1 {
      protector;
      advertise-mode stub-alias;
    }
  }
}
}
bgp {
  vpn-apply-export;
  group vpn {
    type internal;
    local-address 10.255.162.91;
    family inet-vpn {
      unicast {
        egress-protection;
      }
    }
    neighbor 10.255.162.84;
    neighbor 10.255.162.89;
  }
}
isis {
  traceoptions {
    file isis.log;
    flag all detail;
  }
  level 2 disable;
  interface all;
  interface fxp0.0 {
    disable;
  }
  interface lo0.0 {
    passive;
  }
}
}

```

```

Device PE3 user@PE3# show interfaces
ge-0/0/0 {
  unit 0 {
    family inet {
      address 10.10.40.1/30;
    }
  }
}
ge-0/0/1 {
  unit 0 {
    family inet {

```

```
        address 10.10.12.2/30;
    }
    family iso;
    family inet6;
    family mpls;
}
}
lo0 {
    unit 0 {
        family inet {
            address 127.0.0.1/32;
            address 10.255.162.89/32 {
                primary;
            }
        }
        family iso {
            address 47.0005.80ff.f800.0000.0108.0001.0102.5516.2089.00;
        }
        family inet6 {
            address abcd::10:255:162:89/128 {
                primary;
            }
        }
    }
}
}
```

```
user@PE3# show protocols
rsvp {
    interface all {
        link-protection;
    }
    interface fxp0.0 {
        disable;
    }
}
mpls {
    label-switched-path to_PE2 {
        to 10.255.162.91;
    }
    label-switched-path to_PE1 {
        to 10.255.162.84;
    }
    interface all;
    interface fxp0.0 {
        disable;
    }
    egress-protection {
        context-identifier 1.1.1.1 {
            primary;
            advertise-mode stub-alias;
        }
    }
}
}
bgp {
    vpn-apply-export;
    group vpn {
```

```

    type internal;
    local-address 10.255.162.89;
    family inet-vpn {
        unicast;
    }
    neighbor 10.255.162.84 {
        local-preference 300;
    }
    neighbor 10.255.162.91;
}
}
isis {
    level 2 disable;
    interface all;
    interface fxp0.0 {
        disable;
    }
    interface lo0.0 {
        passive;
    }
}
}

```

**Device CE2**

```

user@CE2# show interfaces
ge-0/0/0 {
    unit 0 {
        family inet {
            address 10.10.40.2/30;
        }
    }
}
ge-0/0/2 {
    unit 0 {
        family inet {
            address 10.10.30.2/30;
        }
    }
}
lo0 {
    unit 0 {
        family inet {
            address 127.0.0.1/32;
            address 10.255.162.88/32 {
                primary;
            }
        }
        family iso {
            address 47.0005.80ff.f800.0000.0108.0001.0102.5516.2088.00;
        }
        family inet6 {
            address abcd::10:255:162:88/128 {
                primary;
            }
        }
    }
}
}

```

## Verification

- [Verifying the Routing Instance on page 214](#)
- [Checking the Context Identifier Route on page 220](#)

### Verifying the Routing Instance

---

**Purpose** Check the routes in the routing table.

```

Action user@PE1> show route 10.10.50 table vpn.inet.0
vpn.inet.0: 6 destinations, 7 routes (6 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

10.10.50.0/24      *[BGP/170] 00:01:26, localpref 100, from 10.255.162.96
                   AS path: 65001 I, validation-state: unverified
                   > to 10.10.10.2 via ge-2/0/2.0, Push 16, Push 300064(top)
                   [BGP/170] 00:06:22, localpref 50, from 10.255.162.91
                   AS path: 65001 I, validation-state: unverified
                   > to 10.10.10.2 via ge-2/0/2.0, Push 17, Push 299920(top)

```

```

user@PE1>show route 10.10.50 extensive table vpn.inet.0

```

```

vpn.inet.0: 6 destinations, 7 routes (6 active, 0 holddown, 0 hidden)
10.10.50.0/24 (2 entries, 1 announced)
TSI:
KRT in-kernel 10.10.50.0/24 -> {indirect(1048575)}
Page 0 idx 1, (group vpn type External) Type 1 val 0x9e33490 (adv_entry)
  Advertised metrics:
    Nexthop: Self
    AS path: [65000] 65000 I
    Communities: target:1:1
Path 10.10.50.0 from 10.255.162.96 Vector len 4. Val: 1
  *BGP Preference: 170/-101
    Route Distinguisher: 200:100
    Next hop type: Indirect, Next hop index: 0
    Address: 0x9db63f0
    Next-hop reference count: 6
    Source: 10.255.162.96
    Next hop type: Router, Next hop index: 635
    Next hop: 10.10.10.2 via ge-2/0/2.0, selected
    Label operation: Push 16, Push 300064(top)
    Label TTL action: prop-ttl, prop-ttl(top)
    Load balance label: Label 16: None; Label 300064: None;
    Label element ptr: 0x9db60e0
    Label parent element ptr: 0x9db5e40
    Label element references: 1
    Label element child references: 0
    Label element lsp id: 0
    Session Id: 0x146
    Protocol next hop: 1.1.1.1
    Label operation: Push 16
    Label TTL action: prop-ttl
    Load balance label: Label 16: None;
    Indirect next hop: 0x9e55440 1048575 INH Session ID: 0x14d
    State: < Secondary Active Int Ext ProtectionCand >
    Local AS: 65000 Peer AS: 65000
    Age: 1:28 Metric2: 1
    Validation State: unverified
    Task: BGP_65000.10.255.162.96
    Announcement bits (2): 0-KRT 1-BGP_RT_Background
    AS path: 65001 I
    Communities: target:1:1
    Import Accepted
    VPN Label: 16
    Localpref: 100
    Router ID: 10.255.162.96
    Primary Routing Table bgp.13vpn.0
    Indirect next hops: 1
      Protocol next hop: 1.1.1.1 Metric: 1

```

```

Label operation: Push 16
Label TTL action: prop-ttl
Load balance label: Label 16: None;
Indirect next hop: 0x9e55440 1048575 INH Session ID: 0x14d

Indirect path forwarding next hops: 1
    Next hop type: Router
    Next hop: 10.10.10.2 via ge-2/0/2.0
    Session Id: 0x146
1.1.1.1/32 Originating RIB: inet.3
    Metric: 1    Node path count: 1
    Forwarding nexthops: 1
    Nexthop: 10.10.10.2 via ge-2/0/2.0
BGP    Preference: 170/-51
    Route Distinguisher: 100:100
    Next hop type: Indirect, Next hop index: 0
    Address: 0x9db6390
    Next-hop reference count: 5
    Source: 10.255.162.91
    Next hop type: Router, Next hop index: 636
    Next hop: 10.10.10.2 via ge-2/0/2.0, selected
    Label operation: Push 17, Push 299920(top)
    Label TTL action: prop-ttl, prop-ttl(top)
    Load balance label: Label 17: None; Label 299920: None;
    Label element ptr: 0x9db62c0
    Label parent element ptr: 0x9dc0d00
    Label element references: 1
    Label element child references: 0
    Label element lsp id: 0
    Session Id: 0x146
    Protocol next hop: 10.255.162.91
    Label operation: Push 17
    Label TTL action: prop-ttl
    Load balance label: Label 17: None;
    Indirect next hop: 0x9e55580 1048574 INH Session ID: 0x14c
    State: < Secondary Int Ext ProtectionCand >
    Inactive reason: Local Preference
    Local AS: 65000 Peer AS: 65000
    Age: 6:24 Metric2: 1
    Validation State: unverified
    Task: BGP_65000.10.255.162.91
    AS path: 65001 I
    Communities: target:1:1
    Import Accepted
    VPN Label: 17
    Localpref: 50
    Router ID: 10.255.162.91
    Primary Routing Table bgp.l3vpn.0
    Indirect next hops: 1
        Protocol next hop: 10.255.162.91 Metric: 1
        Label operation: Push 17
        Label TTL action: prop-ttl
        Load balance label: Label 17: None;
        Indirect next hop: 0x9e55580 1048574 INH Session ID: 0x14c

Indirect path forwarding next hops: 1
    Next hop type: Router
    Next hop: 10.10.10.2 via ge-2/0/2.0
    Session Id: 0x146
10.255.162.91/32 Originating RIB: inet.3
    Metric: 1    Node path count: 1

```

```
Forwarding nexthops: 1
Nexthop: 10.10.10.2 via ge-2/0/2.0
```

```
user@PE2> show route table mpls.0
```

```
mpls.0: 15 destinations, 15 routes (15 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both
```

```
0          *[MPLS/0] 00:23:33, metric 1
           to table inet.0
0(S=0)     *[MPLS/0] 00:23:33, metric 1
           to table mpls.0
1          *[MPLS/0] 00:23:33, metric 1
           Receive
2          *[MPLS/0] 00:23:33, metric 1
           to table inet6.0
2(S=0)     *[MPLS/0] 00:23:33, metric 1
           to table mpls.0
13         *[MPLS/0] 00:23:33, metric 1
           Receive
17         *[VPN/0] 00:23:33
           to table vpn.inet.0, Pop
299856(S=0) *[MPLS/0] 00:23:33
           to table __1.1.1.1__.mpls.0
299904     *[LDP/9] 00:01:50, metric 1
           > to 10.10.11.2 via xe-8/2/5.0, Pop
299904(S=0) *[LDP/9] 00:01:50, metric 1
           > to 10.10.11.2 via xe-8/2/5.0, Pop
299920     *[LDP/9] 00:01:50, metric 1
           > to 10.10.11.2 via xe-8/2/5.0, Swap 299904
300016     *[LDP/9] 00:01:50, metric 1
           > to 10.10.12.1 via ge-3/0/2.0, Pop
           to table __1.1.1.1__.mpls.0
300016(S=0) *[LDP/9] 00:01:50, metric 1
           > to 10.10.12.1 via ge-3/0/2.0, Pop
           to table __1.1.1.1__.mpls.0
300048     *[LDP/9] 00:01:50, metric 1
           > to 10.10.12.1 via ge-3/0/2.0, Pop
300048(S=0) *[LDP/9] 00:01:50, metric 1
           > to 10.10.12.1 via ge-3/0/2.0, Pop
```

```
user@PE2> show route table __1.1.1.1__.mpls.0
```

```
__1.1.1.1__.mpls.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both
```

```
16          *[Egress-Protection/170] 00:22:57
           to table __1.1.1.1-vpn__.inet.0
```

```
user@PE2> show route table __1.1.1.1__.mpls.0 extensive
```

```
__1.1.1.1__.mpls.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
16 (1 entry, 1 announced)
```

```
State: < CalcForwarding >
```

```
TSI:
```

```
KRT in-kernel 16 /52 -> {Table}
```

```
*Egress-Protection Preference: 170
```

```
Next table: __1.1.1.1-vpn__.inet.0
```

```
Next-hop index: 649
```

```
Address: 0x9dc2690
```

```
Next-hop reference count: 2
```

```
State: < Active NoReadvrt ForwardingOnly Int Ext >
```

```

Local AS: 65000
Age: 22:59
Validation State: unverified
Task: Protection
Announcement bits (1): 0-KRT
AS path: I
Protecting 2 routes

user@PE2> show route table __1.1.1.1-vpn__.inet.0
__1.1.1.1-vpn__.inet.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

10.10.30.0/24      *[Egress-Protection/170] 00:02:11
                   to table vpn.inet.0
10.10.50.0/24      *[Egress-Protection/170] 00:02:11
                   > to 10.10.30.2 via ge-3/2/4.0

user@PE2> show route table __1.1.1.1-vpn__.inet.0 extensive
__1.1.1.1-vpn__.inet.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
10.10.30.0/24 (1 entry, 1 announced)
    State: < CalcForwarding >
    TSI:
    KRT in-kernel 10.10.30.0/24 -> {Table}
        *Egress-Protection Preference: 170
        Next table: vpn.inet.0
        Next-hop index: 592
        Address: 0x9dc2630
        Next-hop reference count: 2
        State: < Active NoReadvrt ForwardingOnly Int Ext >
        Local AS: 65000
        Age: 2:13
        Validation State: unverified
        Task: Protection
        Announcement bits (1): 0-KRT
        AS path: I
        Backup route 10.10.30.0 table vpn.inet.0

10.10.50.0/24 (1 entry, 1 announced)
    State: < CalcForwarding >
    TSI:
    KRT in-kernel 10.10.50.0/24 -> {10.10.30.2}
        *Egress-Protection Preference: 170
        Next hop type: Router, Next hop index: 630
        Address: 0x9dc1d90
        Next-hop reference count: 7
        Next hop: 10.10.30.2 via ge-3/2/4.0, selected
        Session Id: 0x147
        State: < Active NoReadvrt ForwardingOnly Int Ext >
        Local AS: 65000
        Age: 2:13
        Validation State: unverified
        Task: Protection
        Announcement bits (1): 0-KRT
        AS path: I
        Backup route 10.10.50.0 table vpn.inet.0

user@PE2> show route table mpls.0 label 17
mpls.0: 15 destinations, 15 routes (15 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

17                  *[VPN/0] 00:25:06

```



to table vpn.inet.0, Pop

user@PE2> show route table mpls.0 label 17 extensive

mpls.0: 15 destinations, 15 routes (15 active, 0 holddown, 0 hidden)

17 (1 entry, 0 announced)

```
*VPN      Preference: 0
           Next table: vpn.inet.0
           Next-hop index: 0
           Label operation: Pop
           Load balance label: None;
           Label element ptr: 0x9db3920
           Label parent element ptr: 0x0
           Label element references: 1
           Label element child references: 0
           Label element lsp id: 0
           Address: 0x9db3990
           Next-hop reference count: 1
           State: < Active NotInstall Int Ext >
Age: 25:30
           Validation State: unverified
           Task: RT
           AS path: I
```

user@PE3> show route table mpls.0

mpls.0: 11 destinations, 11 routes (11 active, 0 holddown, 0 hidden)

+ = Active Route, - = Last Active, \* = Both

```
0          *[MPLS/0] 00:24:16, metric 1
           to table inet.0
0(S=0)     *[MPLS/0] 00:24:16, metric 1
           to table mpls.0
1          *[MPLS/0] 00:24:16, metric 1
           Receive
2          *[MPLS/0] 00:24:16, metric 1
           to table inet6.0
2(S=0)     *[MPLS/0] 00:24:16, metric 1
           to table mpls.0
13         *[MPLS/0] 00:24:16, metric 1
           Receive
16         *[VPN/0] 00:24:15
           to table vpn.inet.0, Pop
300096     *[LDP/9] 00:02:33, metric 1
           > to 10.10.12.2 via ge-1/1/4.0, Swap 299920
300112     *[LDP/9] 00:02:33, metric 1
           > to 10.10.12.2 via ge-1/1/4.0, Swap 299904
300128     *[LDP/9] 00:02:33, metric 1
           > to 10.10.12.2 via ge-1/1/4.0, Pop
300128(S=0) *[LDP/9] 00:02:33, metric 1
           > to 10.10.12.2 via ge-1/1/4.0, Pop
```

user@PE3> show route table mpls.0 label 16

mpls.0: 11 destinations, 11 routes (11 active, 0 holddown, 0 hidden)

+ = Active Route, - = Last Active, \* = Both

```
16         *[VPN/0] 00:24:22
           to table vpn.inet.0, Pop
```

user@PE3> show route table mpls.0 label 16 extensive

mpls.0: 11 destinations, 11 routes (11 active, 0 holddown, 0 hidden)

16 (1 entry, 0 announced)

```
*VPN      Preference: 0
          Next table: vpn.inet.0
          Next-hop index: 0
          Label operation: Pop
          Load balance label: None;
          Label element ptr: 0x31d1ec0
          Label parent element ptr: 0x0
          Label element references: 1
          Label element child references: 0
          Label element lsp id: 0
          Address: 0x31d1f30
          Next-hop reference count: 1
          State: < Active NotInstall Int Ext >
          Age: 24:24
          Validation State: unverified
          Task: RT
          AS path: I
```

---

### Checking the Context Identifier Route

**Purpose** Examine the information about the context identifier (1.1.1.1).

```

Action user@PE1> show route 1.1.1.1
inet.0: 47 destinations, 47 routes (46 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both

1.1.1.1/32          *[IS-IS/15] 00:04:08, metric 31
                    > to 10.10.10.2 via ge-2/0/2.0

inet.3: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

1.1.1.1/32          *[LDP/9] 00:04:08, metric 1
                    > to 10.10.10.2 via ge-2/0/2.0, Push 300064

inet.5: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

1.1.1.1/32          *[IS-IS/15] 00:04:08, metric 31, metric2 1
                    > to 10.10.10.2 via ge-2/0/2.0, Push 299856, Push 299920(top)

user@PE2> show route 1.1.1.1
inet.0: 48 destinations, 49 routes (47 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both

1.1.1.1/32          *[MPLS/2] 00:26:00, metric 16777215
                    Receive
                    [IS-IS/15] 00:04:17, metric 11
                    > to 10.10.12.1 via ge-3/0/2.0

inet.3: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

1.1.1.1/32          *[LDP/9] 00:04:17, metric 1
                    > to 10.10.12.1 via ge-3/0/2.0

user@PE2> show mpls context-identifier
ID          Type      Metric    ContextTable
1.1.1.1     protector  16777215  __1.1.1.1__.mpls.0
Total 1, Primary 0, Protector 1

user@PE2> show mpls context-identifier detail
ID: 1.1.1.1
  Type: protector, Metric: 16777215, Mode: alias
  Context table: __1.1.1.1__.mpls.0, Label out: 299856

Total 1, Primary 0, Protector 1

user@PE3> show route 1.1.1.1
inet.0: 47 destinations, 47 routes (46 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both

1.1.1.1/32          *[MPLS/1] 00:26:09, metric 1
                    Receive

inet.3: 4 destinations, 4 routes (4 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

1.1.1.1/32          *[MPLS/1] 00:26:09, metric 1
                    Receive

```

```
inet.5: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both
```

```
1.1.1.1/32          *[IS-IS/15] 00:04:27, metric 1, metric2 1
                    > to 10.10.12.2 via ge-1/1/4.0, Push 299856
```

```
user@PE3> show mpls context-identifier
```

```
ID                Type        Metric    ContextTable
1.1.1.1           primary    1
Total 1, Primary 1, Protector 0
```

```
user@PE3> show mpls context-identifier detail
```

```
ID: 1.1.1.1
   Type: primary, Metric: 1, Mode: alias
```

```
Total 1, Primary 1, Protector 0
```

#### Release History Table

| Release | Description                                                                                                                                                                                                                                                                                              |
|---------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 15.1    | Starting in Junos OS Release 15.1, the enhanced point of local repair (PLR) functionality addresses a special scenario of egress node protection, where the PLR and the protector are co-located as one router. In this case, there is no need to have a bypass LSP reroute traffic during local repair. |

**Related Documentation**

- [Egress Protection for Layer 3 VPN Edge Protection Overview](#)

## Example: Configuring Next-Hop-Based MPLS-Over-UDP Dynamic Tunnels

This example shows how to configure a dynamic MPLS-over-UDP tunnel that includes a tunnel composite next hop. With the MPLS-over-UDP tunnel configured, a device can scale up to 4,000 dynamic UDP tunnels. Because of this advantage, configuring the MPLS-over-UDP tunnels is beneficial for data center deployments that require mesh IP connectivity from one provider edge (PE) device to all other PE devices in the network.

- [Requirements on page 222](#)
- [Overview on page 223](#)
- [Configuration on page 225](#)
- [Verification on page 230](#)
- [Troubleshooting on page 234](#)

### Requirements

This example uses the following hardware and software components:

- Five routers that can be a combination of M Series Multiservice Edge Routers, MX Series 3D Universal Edge Routers, T Series Core Routers, and PTX Series Packet Transport Routers.
- Junos OS Release 16.2 or later running on the PE routers.

Before you begin:

1. Enable a tunnel services configuration on the Flexible PIC Concentrator.
2. Configure the device interfaces, including the loopback interface.
3. Configure the router ID and autonomous system number for the device.
4. Establish an internal BGP (IBGP) session with the remote PE device.
5. Establish OSPF peering among the devices.

## Overview

Starting with Junos OS Release 16.2, a dynamic UDP tunnel supports the creation of a tunnel composite next hop for every UDP tunnel configured. These next-hop-based dynamic UDP tunnels are referred to as MPLS-over-UDP tunnels. The tunnel composite next hop are enabled by default for the MPLS-over-UDP tunnels, and they include the dynamic tunnel's encapsulation data and a VPN label (when chained composite next hop is not enabled).

With this feature, a device can scale up to 4,000 UDP tunnels. This scaling advantage is beneficial for data center deployments that require mesh IP connectivity from one PE device to all other PE devices in the network.



**NOTE:** For the same tunnel destination, the next-hop-based dynamic tunnel encapsulation can either be GRE or UDP. Having both tunnel encapsulations for the same tunnel destination causes a commit error under the dynamic-tunnel configuration.

When configuring a next-hop-based dynamic MPLS-over-UDP tunnel, be aware of the following considerations:

- An IBGP session must be configured between the PE devices.
- A switchover between the next-hop-based dynamic tunnel encapsulations (UDP and GRE) is allowed,
- Having both GRE and UDP next-hop-based dynamic tunnel encapsulation types for the same tunnel destination leads to a commit failure.
- Graceful Routing Engine switchover (GRES) is supported with MPLS-over-UDP, and the MPLS-over-UDP tunnel type flags are unified ISSU and NSR compliant.
- MPLS-over-UDP tunnels are supported on virtual MX (vMX).
- MPLS-over-UDP tunnels support dynamic GRE tunnel creation based upon new IPv4-mapped-IPv6 next hops.
- MPLS-over-UDP tunnel are supported in interoperability with contrail, wherein the MPLS-over-UDP tunnels are created from the contrail vRouter to an MX gateway. To enable this, the following community is required to be advertised in the route from the MX Series router to the contrail vRouter:

```
[edit policy-options community]
  udp members 0x030c:64512:13;
```


At a given point in time, only one tunnel type is supported on the contrail vRouter—next-hop-based dynamic GRE tunnels, MPLS-over-UDP tunnels, or VXLAN.

- The following features are not supported with the next-hop-based dynamic MPLS-over-UDP tunnel configuration:
  - RSVP automatic mesh
  - Plain IPV6 GRE and UDP tunnel configuration
  - Logical systems

### Topology

Figure 28 on page 224 illustrates a Layer 3 VPN scenario over dynamic MPLS-over-UDP tunnels. The customer edge (CE) devices, CE1 and CE2, connect to provider edge (PE) devices, PE1 and PE2, respectively. The PE devices are connected to a provider device (Device P1), and an internal BGP (IBGP) session interconnects the two PE devices. Two dynamic next-hop-based MPL-over-UDP tunnels are configured between the PE devices.

**Figure 28: Dynamic MPLS-over-UDP Tunnels**

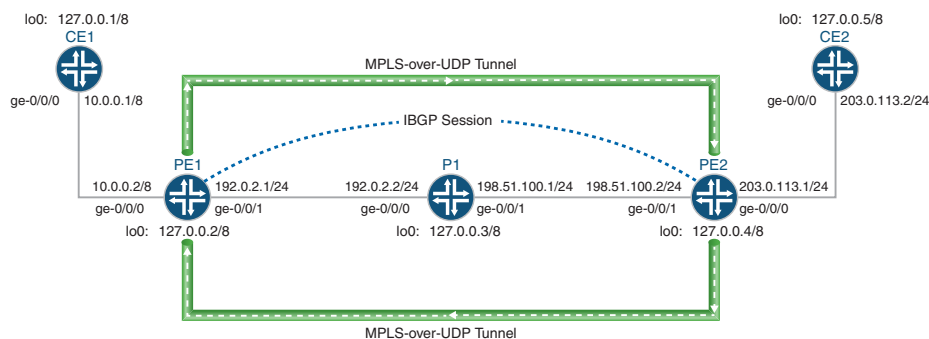

g040335

The MPLS-over-UDP tunnel is handled as follows:

1. After a MPLS-over-UDP tunnel is configured, a tunnel destination mask route with a tunnel composite next hop is created for the tunnel in the inet.3 routing table. This IP tunnel route is withdrawn only when the dynamic tunnel configuration is deleted.

The tunnel composite next-hop attributes include the following:

- When Layer 3 VPN composite next hop is disabled—Source and destination address, encapsulation string, and VPN label.
  - When Layer 3 VPN composite next hop and per-prefix VPN label allocation are enabled—Source address, destination address, and encapsulation string.
  - When Layer 3 VPN composite next hop is enabled and per-prefix VPN label allocation is disabled—Source address, destination address, and encapsulation string. The route in this case is added to the other virtual routing and forwarding instance table with a secondary route.
2. The PE devices are interconnected using an IBGP session. The IBGP route next hop to a remote BGP neighbor is the protocol next hop, which is resolved using the tunnel mask route with the tunnel next hop.
  3. After the protocol next hop is resolved over the tunnel composite next hop, indirect next hops with forwarding next hops are created.
  4. The tunnel composite next hop is used to forward the next hops of the indirect next hops.

## Configuration

**CLI Quick Configuration** To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the **[edit]** hierarchy level, and then enter **commit** from configuration mode.

```

CE1  set interfaces ge-0/0/0 unit 0 family inet address 10.0.0.1/8
      set interfaces lo0 unit 0 family inet address 127.0.0.1/8
      set routing-options router-id 127.0.0.1
      set routing-options autonomous-system 200
      set protocols bgp group ce1-pe1 export export-loopback-direct
      set protocols bgp group ce1-pe1 peer-as 100
      set protocols bgp group ce1-pe1 neighbor 10.0.0.2
      set policy-options policy-statement export-loopback-direct term term-1 from interface
        lo0.0
      set policy-options policy-statement export-loopback-direct term term-1 from route-filter
        127.0.0.1/8 exact
      set policy-options policy-statement export-loopback-direct term term-1 then accept

CE2  set interfaces ge-0/0/0 unit 0 family inet address 203.0.113.2/24
      set interfaces lo0 unit 0 family inet address 127.0.0.5/8
      set routing-options router-id 127.0.0.5
      set routing-options autonomous-system 200
      set protocols bgp group ce1-pe1 export export-loopback-direct
      set protocols bgp group ce1-pe1 peer-as 100
      set protocols bgp group ce1-pe1 neighbor 203.0.113.1

```

```

set policy-options policy-statement export-loopback-direct term term-1 from interface
  lo0.0
set policy-options policy-statement export-loopback-direct term term-1 from route-filter
  127.0.0.5/8 exact
set policy-options policy-statement export-loopback-direct term term-1 then accept

PE1 set chassis fpc 0 pic 1 tunnel-services
set interfaces ge-0/0/0 unit 0 family inet address 10.0.0.2/8
set interfaces ge-0/0/1 unit 0 family inet address 192.0.2.1/24
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 127.0.0.2/8
set routing-options static route 33.0.0.0/8 next-hop 192.0.2.2
set routing-options router-id 127.0.0.2
set routing-options autonomous-system 100
set routing-options forwarding-table export pplib
set routing-options dynamic-tunnels gre next-hop-based-tunnel
set routing-options dynamic-tunnels udp-dyn-tunnel-to-pe2 source-address 127.0.0.2
set routing-options dynamic-tunnels udp-dyn-tunnel-to-pe2 udp
set routing-options dynamic-tunnels udp-dyn-tunnel-to-pe2 destination-networks
  127.0.0.0/8
set protocols bgp group IBGP type internal
set protocols bgp group IBGP local-address 127.0.0.2
set protocols bgp group IBGP family inet-vpn unicast
set protocols bgp group IBGP neighbor 127.0.0.4
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set policy-options policy-statement pplib term 1 then load-balance per-packet
set policy-options policy-statement pplib term 1 then accept
set routing-instances MPLS-over-UDP-PE1 instance-type vrf
set routing-instances MPLS-over-UDP-PE1 interface ge-0/0/0.0
set routing-instances MPLS-over-UDP-PE1 route-distinguisher 127.0.0.2:1
set routing-instances MPLS-over-UDP-PE1 vrf-target target:600:1
set routing-instances MPLS-over-UDP-PE1 protocols bgp group pe1-ce1 peer-as 200
set routing-instances MPLS-over-UDP-PE1 protocols bgp group pe1-ce1 neighbor 10.0.0.1
  as-override

P1 set interfaces ge-0/0/0 unit 0 family inet address 192.0.2.2/24
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 unit 0 family inet address 198.51.100.1/24
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 127.0.0.3/8
set routing-options router-id 127.0.0.3
set routing-options autonomous-system 100
set protocols ospf area 0.0.0.0 interface ge-0/0/0.0
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface lo0.0 passive

PE2 set interfaces ge-0/0/0 unit 0 family inet address 203.0.113.1/24
set interfaces ge-0/0/1 unit 0 family inet address 198.51.100.2/24
set interfaces lo0 unit 0 family inet address 127.0.0.4/8
set routing-options nonstop-routing
set routing-options router-id 127.0.0.4
set routing-options autonomous-system 100
set routing-options forwarding-table export pplib
set routing-options dynamic-tunnels udp-dyn-tunnel-to-pe1 source-address 127.0.0.4

```



```

set routing-options dynamic-tunnels udp-dyn-tunnel-to-pe1 udp
set routing-options dynamic-tunnels udp-dyn-tunnel-to-pe1 destination-networks
  127.0.0.0/8
set protocols bgp group IBGP type internal
set protocols bgp group IBGP local-address 127.0.0.4
set protocols bgp group IBGP family inet-vpn unicast
set protocols bgp group IBGP neighbor 127.0.0.2
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set routing-instances MPLS-over-UDP-PE2 instance-type vrf
set routing-instances MPLS-over-UDP-PE2 interface ge-0/0/0.0
set routing-instances MPLS-over-UDP-PE2 route-distinguisher 127.0.0.4:1
set routing-instances MPLS-over-UDP-PE2 vrf-target target:600:1
set routing-instances MPLS-over-UDP-PE2 protocols bgp group ebgp peer-as 200
set routing-instances MPLS-over-UDP-PE2 protocols bgp group ebgp neighbor 203.0.113.2
as-override

```

### Step-by-Step Procedure

The following example requires that you navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure Device PE1:

1. Enable tunnel services configuration on the device.  

```

[edit chassis]
user@PE1# set fpc 0 pic 1 tunnel-services

```
2. Configure the device interfaces including the loopback interface of the device.  

```

[edit interfaces]
user@PE1# set ge-0/0/0 unit 0 family inet address 10.0.0.2/8

user@PE1# set ge-0/0/1 unit 0 family inet address 192.0.2.1/24
user@PE1# set ge-0/0/1 unit 0 family mpls

user@PE1# set lo0 unit 0 family inet address 127.0.0.2/8

```
3. Configure a static route for routes from Device PE1 with Device P1 as the next-hop destination.  

```

[edit routing-options]
user@PE1# set static route 33.0.0.0/8 next-hop 192.0.2.2

```
4. Configure the router-ID and autonomous system number for Device PE1.  

```

[edit routing-options]
user@PE1# set router-id 127.0.0.2
user@PE1# set autonomous-system 100

```
5. Configure IBGP peering between the PE devices.  

```

[edit protocols]
user@PE1# set bgp group IBGP type internal
user@PE1# set bgp group IBGP local-address 127.0.0.2
user@PE1# set bgp group IBGP family inet-vpn unicast
user@PE1# set bgp group IBGP neighbor 127.0.0.4

```

6. Configure OSPF on all the interfaces of Device PE1, excluding the management interface.  

```
[edit protocols]
user@PE1# set ospf area 0.0.0.0 interface ge-0/0/1.0
user@PE1# set ospf area 0.0.0.0 interface lo0.0 passive
```
7. Enable next-hop-based dynamic GRE tunnel configuration on Device PE1.  

```
[edit routing-options]
user@PE1# set dynamic-tunnels gre next-hop-based-tunnel
```
8. Configure the MPLS-over-UDP tunnel parameters from Device PE1 to Device PE2.  

```
[edit routing-options]
user@PE1# set dynamic-tunnels udp-dyn-tunnel-to-pe2 source-address 127.0.0.2
user@PE1# set dynamic-tunnels udp-dyn-tunnel-to-pe2 udp
user@PE1# set dynamic-tunnels udp-dyn-tunnel-to-pe2 destination-networks
127.0.0.0/8
```
9. Configure a policy to enable load balancing on a per-packet basis.  

```
[edit policy-options]
user@PE1# set policy-statement pplb term 1 then load-balance per-packet
user@PE1# set policy-statement pplb term 1 then accept
```
10. Export the load-balancing policy to the forwarding table.  

```
[edit routing-options]
user@PE1# set forwarding-table export pplb
```
11. Configure a VRF routing instance on Device PE1 and other routing instance parameters.  

```
[edit routing-instances]
user@PE1# set MPLS-over-UDP-PE1 instance-type vrf
user@PE1# set MPLS-over-UDP-PE1 interface ge-0/0/0.0
user@PE1# set MPLS-over-UDP-PE1 route-distinguisher 127.0.0.2:1
user@PE1# set MPLS-over-UDP-PE1 vrf-target target:600:1
```
12. Enable BGP in the routing instance configuration for peering with Device CE1.  

```
[edit routing-instances]
user@PE1# set MPLS-over-UDP-PE1 protocols bgp group pe1-ce1 peer-as 200
user@PE1# set MPLS-over-UDP-PE1 protocols bgp group pe1-ce1 neighbor 10.0.0.1
as-override
```

---

## Results

From configuration mode, confirm your configuration by entering the **show interfaces**, **show routing-options**, **show protocols**, **show policy-options**, and **show routing-instances** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@PE1# show interfaces
ge-0/0/0 {
  unit 0 {
    family inet {
      address 10.0.0.2/8;
```

```

    }
  }
}
ge-0/0/1 {
  unit 0 {
    family inet {
      address 192.0.2.1/24;
    }
    family mpls;
  }
}
lo0 {
  unit 0 {
    family inet {
      address 127.0.0.2/8;
    }
  }
}

user@PE1# show routing-options
static {
  route 33.0.0.0/8 next-hop 192.0.2.2;
}
router-id 127.0.0.2;
autonomous-system 100;
forwarding-table {
  export pplb;
}
dynamic-tunnels {
  gre next-hop-based-tunnel;
  udp-dyn-tunnel-to-pe2 {
    source-address 127.0.0.2;
    udp;
    destination-networks {
      127.0.0.0/8;
    }
  }
}

user@PE1# show protocols
bgp {
  group IBGP {
    type internal;
    local-address 127.0.0.2;
    family inet-vpn {
      unicast;
    }
    neighbor 127.0.0.4;
  }
}
ospf {
  area 0.0.0.0 {
    interface ge-0/0/1.0;
    interface lo0.0 {
      passive;
    }
  }
}

```

```
}
user@PE1# show policy-options
policy-statement pplb {
  term 1 {
    then {
      load-balance per-packet;
      accept;
    }
  }
}

user@PE1# show routing-instances
MPLS-over-UDP-PE1 {
  instance-type vrf;
  interface ge-0/0/0.0;
  route-distinguisher 127.0.0.2:1;
  vrf-target target:600:1;
  protocols {
    bgp {
      group pe1-ce1 {
        peer-as 200;
        neighbor 10.0.0.1 {
          as-override;
        }
      }
    }
  }
}
```

If you are done configuring the device, enter **commit** from configuration mode.

## Verification

Confirm that the configuration is working properly.

- [Verifying the Connection Between PE Devices on page 230](#)
- [Verify the Dynamic Tunnel Routes on Device PE1 on page 231](#)
- [Verify the Dynamic Tunnel Routes on Device PE2 on page 233](#)
- [Verifying That the Routes Have the Expected Indirect-Next-Hop Flag on page 233](#)

---

### Verifying the Connection Between PE Devices

**Purpose** Verify the BGP peering status between Device PE1 and Device PE2, and the BGP routes received from Device PE2.

**Action** From operational mode, run the **show bgp summary** and **show route receive-protocol bgp ip-address table bgp.l3vpn.0** commands.

```
user@PE1> show bgp summary
Groups: 2 Peers: 2 Down peers: 0
Table Tot Paths Act Paths Suppressed History Damp State Pending
bgp.l3vpn.0
                2          2          0          0          0          0
Peer          AS      InPkt    OutPkt    OutQ    Flaps Last Up/Dwn
State|#Active/Received/Accepted/Damped...
127.0.0.4      100      139      136       0       0      58:23 Establ

    bgp.l3vpn.0: 2/2/2/0
    MPLS-over-UDP-PE1.inet.0: 2/2/2/0
10.0.0.1        200      135      136       0       0      58:53
Establ
    MPLS-over-UDP-PE1.inet.0: 1/1/1/0

user@PE1> show route receive-protocol bgp 127.0.0.4 table bgp.l3vpn.0
bgp.l3vpn.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
Prefix          Nexthop          MED    Lclpref    AS path
127.0.0.4:1:127.0.0.5/8
*                127.0.0.4              100      200 I
127.0.0.4:1:200.1.1.0/24
*                127.0.0.4              100      I
```

- Meaning**
- In the first output, the BGP session state is **Establ**, which means that the session is up and the PE devices are peered.
  - In the second output, Device PE1 has learned two BGP routes from Device PE2.

#### Verify the Dynamic Tunnel Routes on Device PE1

**Purpose** Verify the routes in the inet.3 routing table and the dynamic tunnel database information on Device PE1.

**Action** From operational mode, run the **show route table inet.3**, **show dynamic-tunnels database terse**, **show dynamic-tunnels database**, and **show dynamic-tunnels database summary** commands.

```

user@PE1> show route table inet.3
inet.3: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

127.0.0.0/8      *[Tunnel/300] 00:21:18
                  Tunnel
127.0.0.4/8      *[Tunnel/300] 00:21:18
                  Tunnel Composite

user@PE1> show dynamic-tunnels database terse
Table: inet.3

Destination-network: 127.0.0.0/8
Destination      Source      Next-hop      Type      Status
127.0.0.4/8      127.0.0.2   0xb395b10 nhid 613   udp      Up

user@PE1> show dynamic-tunnels database
Table: inet.3

Destination-network: 55.0.0.0/8

Destination-network: 55.66.0.0/16

Destination-network: 55.66.77.0/24
Tunnel to: 127.0.0.4/8
Reference count: 2
Next-hop type: UDP
Source address: 127.0.0.2 Tunnel Id: 2
Next hop: tunnel-composite, 0xb395b10, nhid 613
VPN Label: Push 299776 Reference count: 3
Traffic Statistics: Packets 0, Bytes 0
State: Up

user@PE1> show dynamic-tunnels database summary
Dynamic Tunnels, Total 1 displayed
GRE Tunnel:
Active Tunnel Mode, Next Hop Base
IFL Based, Total 0 displayed, Up 0, Down 0
Nexthop Based, Total 0 displayed, Up 0, Down 0
RSVP Tunnel:
Total 0 displayed
UDP Tunnel:
Total 1 displayed, Up 1, Down 0

```

**Meaning**

- In the first output, because Device PE1 is configured with the MPLS-over-UDP tunnel, a tunnel composite route is created for the inet.3 routing table route entry.
- In the remaining outputs, the MPLS-over-UDP tunnel is displayed with the tunnel encapsulation type, tunnel next hop parameters, and tunnel status.

### Verify the Dynamic Tunnel Routes on Device PE2

**Purpose** Verify the routes in the inet.3 routing table and the dynamic tunnel database information on Device PE2.

**Action** From operational mode, run the **show route table inet.3**, and the **show dynamic-tunnels database terse** commands.

```
user@PE2> show route table inet.3
inet.3: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both
```

```
127.0.0.0/8      *[Tunnel/300] 00:39:31
                  Tunnel
127.0.0.2/8      *[Tunnel/300] 00:24:53
                  Tunnel Composite
```

```
user@PE1> show dynamic-tunnels database terse
Table: inet.3
```

```
Destination-network: 127.0.0.0/8
Destination      Source      Next-hop      Type      Status
127.0.0.2/8      127.0.0.4    0xb395450 nhid 615    udp      Up
```

**Meaning** The outputs show the MPLS-over-UDP tunnel creation and the next-hop ID assigned as the next-hop interface, similar to Device PE1.

### Verifying That the Routes Have the Expected Indirect-Next-Hop Flag

**Purpose** Verify that Device PE1 and Device PE2 are configured to maintain the indirect next hop to forwarding next-hop binding on the Packet Forwarding Engine forwarding table.

**Action** From operational mode, run the **show krt indirect-next-hop** command on Device PE1 and Device PE2.

```
user@PE1> show krt indirect-next-hop
Indirect Nexthop:
Index: 1048574 Protocol next-hop address: 127.0.0.4
RIB Table: bgp.l3vpn.0
Label: Push 299776
Policy Version: 1                      References: 1
Locks: 3                               0xb2ab630
Flags: 0x0
INH Session ID: 0x0
INH Version ID: 0
Ref RIB Table: unknown
    Tunnel type: UDP, Reference count: 3, nhid: 613
    Destination address: 127.0.0.4, Source address: 127.0.0.2
    Tunnel id: 2, VPN Label: Push 299776, TTL action: prop-ttl
IGP FRR Interesting proto count : 1
Chain IGP FRR Node Num          : 1
    IGP Resolver node(hex)       : 0xb3c70dc
    IGP Route handle(hex)        : 0xb1ae688      IGP rt_entry protocol
: Tunnel
```

```

IGP Actual Route handle(hex) : 0x0          IGP Actual rt_entry protocol
: Any

user@PE2> show krt indirect-next-hop
Indirect Nexthop:
Index: 1048575 Protocol next-hop address: 127.0.0.2
RIB Table: bgp.l3vpn.0
Label: Push 299776
Policy Version: 1                      References: 2
Locks: 3                               0xb2ab740
Flags: 0x0
INH Session ID: 0x0
INH Version ID: 0
Ref RIB Table: unknown
  Tunnel type: UDP, Reference count: 3, nhid: 615
  Destination address: 127.0.0.2, Source address: 127.0.0.4
  Tunnel id: 1, VPN Label: Push 299776, TTL action: prop-ttl
  IGP FRR Interesting proto count : 2
  Chain IGP FRR Node Num          : 1
    IGP Resolver node(hex)        : 0xb3d3a28
    IGP Route handle(hex)         : 0xb1ae634    IGP rt_entry protocol
: Tunnel
  IGP Actual Route handle(hex) : 0x0          IGP Actual rt_entry protocol
: Any

```

**Meaning** The outputs show that a next-hop-based dynamic MPLS-over-UDP tunnel is created between the PE devices.

## Troubleshooting

To troubleshoot the next-hop-based dynamic tunnels, see:

- [Troubleshooting Commands on page 234](#)

### Troubleshooting Commands

**Problem** The next-hop-based dynamic MPLS-over-UDP tunnel configuration is not taking effect.

**Solution** To troubleshoot the next-hop-based MPLS-over-UDP tunnel configuration, use the following **traceroute** commands at the **[edit routing-options dynamic-tunnels]** statement hierarchy:

- **traceoptions file *file-name***
- **traceoptions file size *file-size***
- **traceoptions flag all**

For example:

```

[edit routing-options dynamic-tunnels]
traceoptions {
  file udp_dyn_pe1.wri size 4294967295;
  flag all;
}

```



- Related Documentation**
- *Configuring GRE Tunnels for Layer 3 VPNs*
  - *Example: Configuring a Next-Hop-Based Dynamic GRE Tunnels*

## Anti-spoofing Protection for Next-Hop-Based Dynamic Tunnels


With increasing deployment of high-scale IP tunnels in data centers, there is a need to add security measures that allow users to limit malicious traffic from compromised virtual machines (VMs) into the data centers. One possible attack is the injecting of traffic into an arbitrary customer VPN from a compromised VM through the gateway router. In such cases, anti-spoofing checks on IP tunnels ensure that only legitimate sources are injecting traffic into the data centers from their designated IP tunnels.

Next-hop-based dynamic IP tunnels create a tunnel composite next hop for every dynamic tunnel created on the device. The tunnel composite next hop includes the dynamic tunnel's source and destination IP address, encapsulation data, and a VPN label (when chained composite next hop is not enabled). Configuring next-hop-based dynamic tunnels provides a scaling advantage over the number of dynamic tunnels that can be created on a device. It also benefits data center deployments that require mesh IP connectivity from one provider edge (PE) device to all other PE devices in the network. In addition to these benefits, Junos OS Release 17.1 and future releases provide anti-spoofing capabilities for the next-hop-based dynamic IP tunnels. With this addition, a security measure is implemented to prevent spurious virtual machines from accessing and consuming resources from a wrong VPN.

Anti-spoofing is implemented using reverse path forwarding checks in the Packet Forwarding Engine. The checks are placed in the downstream direction of the tunnels terminating at the gateway router. Currently, when the gateway router receives traffic from a tunnel, only the destination from the inner IP header is checked and the packet is forwarded accordingly. When anti-spoofing protection is enabled, the gateway router also does a source look-up of the inner IP header in the VPN, in addition to checking the tunnel destination. This ensures that the source is reachable on the same tunnel on which the packet was received. As a result, in addition to checking the tunnel destination, anti-spoofing protection ensures that the tunnel traffic is received from a legitimate source on the designated tunnels.

[Figure 29 on page 236](#) illustrates a sample topology with the requirements for anti-spoofing protection.

Figure 29: Anti-Spoofing Protection for Next-hop-based Dynamic Tunnels

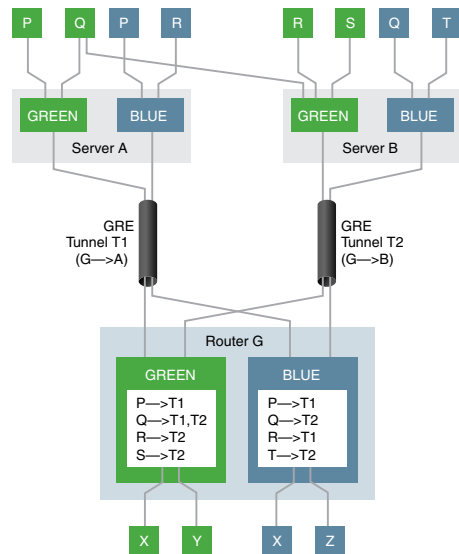

In this example, the gateway router is Router G. Router G has two VPNs—Red and Blue. The two servers, Server A and Server B, can reach the Red and Blue VPNs on Router G through the next-hop-based dynamic tunnels T1 and T2, respectively. Several hosts and virtual machines, P, Q, R, S, T, connected to the servers can reach the VPNs through the gateway router, Router G. Router G has the virtual routing and forwarding tables for Red and Blue VPNs, each populated with the reachability information for the virtual machines in those VPNs.

For example, in VPN Red, Router G uses tunnel T1 to reach host P, tunnel T2 to reach hosts R and S, and load balancing is done between tunnels T1 and T2 to reach the multi-homed host Q. In VPN Blue, Router G uses tunnel T1 to reach hosts P and R, and tunnel T2 to reach hosts Q and T.

The benefits of the anti-spoofing reverse path forwarding checks are as follows:

- Reverse path forwarding check passes when:

- Packet comes from a legitimate source on its designated tunnel.

Host P in VPN Red sends a packet to host X using tunnel T1. Because Router G can reach host P through tunnel T1, it allows the packet to pass and forwards the packet to host X.

- Packet comes from a multi-homed source on its designated tunnels.

Host Q in VPN Red is multi-homed on servers A and B, and can reach Router G through tunnels T1 and T2. Host Q sends a packet to host Y using tunnel T1, and a packet to host X using tunnel T2. Because Router G can reach host Q through tunnels T1 and T2, it allows the packets to pass and forwards them to hosts Y and X, respectively.

In cases where per-next-hop label is configured, there is no VPN context in the data-path to do a source IP lookup for reverse path forwarding checks. To enable this, the MPLS

route lookup should provide the VPN ID, using which the Packet Forwarding Engine can lookup the inner source IP address.

Layer 3 VPNs do not have anti-spoofing protection enabled by default. To enable anti-spoofing for next-hop based dynamic tunnels, include the **ip-tunnel-rpf-check** statement at the **[edit routing-instances *routing-instance-name* routing-options forwarding-table]** hierarchy level. The reverse path forwarding check is applied to the virtual routing and forwarding routing instance only, and the default mode is set to **strict**, where the packet that comes from a source on a non-designated tunnel does not pass the check. The **ip-tunnel-rpf-check** mode can be set as **loose**, where the reverse path forwarding check fails when the packet comes from a non-existing source. An optional firewall filter can be configured under the **ip-tunnel-rpf-check** statement to count and log the packets that failed the reverse path forwarding check.

Sample anti-spoofing configuration:

```
[edit routing-instances routing-instance-name routing-options forwarding-table]
ip-tunnel-rpf-check {
    mode loose;
    fail-filter filter-name;
}
```

While configuring the anti-spoofing protection for next-hop based dynamic tunnels, take the following into consideration:

- Anti-spoofing protection can be enabled for IPv4 tunnels and IPv4 data traffic only. The anti-spoofing capabilities are not supported on IPv6 tunnels and IPv6 data traffic.
- Anti-spoofing for next-hop based dynamic tunnels can detect and prevent the case of a compromised virtual machine (inner source reverse path forwarding check) and not a compromised server, that is label-spoofing.
- The next-hop based IP tunnels can originate and terminate on inet.0 routing table.
- The **rpf fail-filter** is applicable to the inner IP packet. However, for virtual tunnels, the outer header (GRE) is stripped off by the time the packet reaches the virtual tunnel Packet forwarding Engine.
- Enabling anti-spoofing checks does not affect the scaling limit of the next-hop based dynamic tunnels on a device.
- The system resource utilization with anti-spoofing protection enabled for the virtual routing and forwarding routing instance is slightly higher than the utilization of next-hop based dynamic tunnels without the anti-spoofing protection enabled.
- Anti-spoofing protection requires additional source IP address checks, which might have an impact on the network performance.
- Graceful Routing Engine switchover (GRES) and in-service software upgrade are supported with the anti-spoofing protection.

#### Related Documentation

- [ip-tunnel-rpf-check on page 1445](#)



## CHAPTER 4

# Configuring MPLS-Signaled LSPs

- [Configuring the Ingress and Egress Router Addresses for LSPs on page 240](#)
- [Configuring Primary and Secondary LSPs on page 242](#)
- [Configuring a Text Description for LSPs on page 245](#)
- [Configuring the Entropy Label for LSPs on page 246](#)
- [Configuring Corouted Bidirectional LSPs on page 248](#)
- [Configuring Ultimate-Hop Popping for LSPs on page 250](#)
- [Configuring an LSP Across ASs on page 253](#)
- [Configuring Fast Reroute on page 254](#)
- [Configuring the Optimization Interval for Fast Reroute Paths on page 256](#)
- [Adding LSP-Related Routes to the inet.3 or inet6.3 Routing Table on page 256](#)
- [Configuring the Connection Between Ingress and Egress Routers on page 257](#)
- [Configuring LSP Metrics on page 258](#)
- [Configuring CSPF Tie Breaking on page 260](#)
- [Configuring Load Balancing Based on MPLS Labels on page 260](#)
- [Disabling Normal TTL Decrementing on page 264](#)
- [Configuring MPLS Soft Preemption on page 266](#)
- [Disabling Constrained-Path LSP Computation on page 267](#)
- [Configuring Administrative Groups for LSPs on page 268](#)
- [Configuring Extended Administrative Groups for LSPs on page 270](#)
- [Configuring Preference Values for LSPs on page 271](#)
- [Disabling Path Route Recording by LSPs on page 272](#)
- [Configuring Class of Service for MPLS LSPs on page 272](#)
- [Achieving a Make-Before-Break, Hitless Switchover for LSPs on page 275](#)
- [Configuring Adaptive LSPs on page 278](#)
- [Configuring Priority and Preemption for LSPs on page 280](#)
- [Optimizing Signaled LSPs on page 280](#)
- [Configuring the Smart Optimize Timer for LSPs on page 284](#)
- [Limiting the Number of Hops in LSPs on page 285](#)

- [Configuring the Bandwidth Value for LSPs on page 285](#)
- [Automatic Bandwidth Allocation for LSPs on page 286](#)
- [Configuring Automatic Bandwidth Allocation for LSPs on page 286](#)
- [Configuring Reporting of Automatic Bandwidth Allocation Statistics for LSPs on page 293](#)
- [Configuring Hot Standby of Secondary Paths for LSPs on page 297](#)
- [Damping Advertisement of LSP State Changes on page 298](#)

## Configuring the Ingress and Egress Router Addresses for LSPs

---

The following sections describe how to specify the addresses of an LSP's ingress and egress routers:

- [Configuring the Ingress Router Address for LSPs on page 240](#)
- [Configuring the Egress Router Address for LSPs on page 240](#)
- [Preventing the Addition of Egress Router Addresses to Routing Tables on page 241](#)

### Configuring the Ingress Router Address for LSPs

The local router always is considered to be the ingress router, which is the beginning of the LSP. The software automatically determines the proper outgoing interface and IP address to use to reach the next router in an LSP.

By default, the router ID is chosen as the address of the ingress router. To override the automatic selection of the source address, specify a source address in the **from** statement:

```
from address;
```

You can include this statement at the following hierarchy levels:

- `[edit protocols mpls label-switched-path lsp-name]`
- `[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name]`

The outgoing interface used by the LSP is not affected by the source address that you configure.

### Configuring the Egress Router Address for LSPs

When configuring an LSP, you must specify the address of the egress router by including the **to** statement:

```
to address;
```

You can include this statement at the following hierarchy levels:

- `[edit protocols mpls label-switched-path lsp-name]`
- `[edit protocols mpls static-label-switched-path lsp-name]`
- `[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name]`
- `[edit logical-systems logical-system-name protocols mpls static-label-switched-path lsp-name]`

When you are setting up a signaled LSP, the **to** statement is the only required statement. All other statements are optional.

After the LSP is established, the address of the egress router is installed as a host route in the routing table. This route can then be used by BGP to forward traffic.

To have the software send BGP traffic over an LSP, the address of the egress router is the same as the address of the BGP next hop. You can specify the egress router's address as any one of the router's interface addresses or as the BGP router ID. If you specify a different address, even if the address is on the same router, BGP traffic is not sent over the LSP.

To determine the address of the BGP next hop, use the **show route detail** command. To determine the destination address of an LSP, use the **show mpls lsp** command. To determine whether a route has gone through an LSP, use the **show route** or **show route forwarding-table** command. In the output of these last two commands, the **label-switched-path** or **push** keyword included with the route indicates it has passed through an LSP. Also, use the **traceroute** command to trace the actual path to which the route leads. This is another indication whether a route has passed through an LSP.

You also can manipulate the address of the BGP next hop by defining a BGP import policy filter that sets the route's next-hop address.

## Preventing the Addition of Egress Router Addresses to Routing Tables

You must configure an address using the **to** statement for all LSPs. This address is always installed as a /32 prefix in the inet.3 or inet.0 routing tables. You can prevent the egress router address configured using the **to** statement from being added to the inet.3 and inet.0 routing tables by including the **no-install-to-address** statement.

Some reasons not to install the **to** statement address in the inet.3 and inet.0 routing tables include the following:

- Allow Constrained Shortest Path First (CSPF) RSVP LSPs to be mapped to traffic intended for secondary loopback addresses. If you configure an RSVP tunnel, including the **no-install-to-address** statement, and then configure an **install pfx/ <active>** policy later, you can do the following:
  - Verify that the LSP was set up correctly without impacting traffic.
  - Map traffic to the LSP in incremental steps.
  - Map traffic to the destination loopback address (the BGP next hop) by removing the **no-install-to-address** statement once troubleshooting is complete.
- Prevent CCC connections from losing IP traffic. When an LSP determines that it does not belong to a connection, it installs the address specified with the **to** statement in the inet.3 routing table. IP traffic is then forwarded to the CCC remote endpoint, which can cause some types of PICs to fail.

To prevent the egress router address configured using the **to** statement from being added to the inet.3 and inet.0 routing tables, include the **no-install-to-address** statement:

`no-install-to-address;`

You can include this statement at the following hierarchy levels:

- [edit protocols mpls `label-switched-path` *lsp-name*]
- [edit protocols mpls `static-label-switched-path` *lsp-name*]
- [edit logical-systems *logical-system-name* protocols mpls `label-switched-path` *lsp-name*]
- [edit logical-systems *logical-system-name* protocols mpls `static-label-switched-path` *lsp-name*]

---

## Configuring Primary and Secondary LSPs

By default, an LSP routes itself hop-by-hop toward the egress router. The LSP tends to follow the shortest path as dictated by the local routing table, usually taking the same path as destination-based, best-effort traffic. These paths are “soft” in nature because they automatically re-route themselves whenever a change occurs in a routing table or in the status of a node or link.

To configure the path so that it follows a particular route, create a named path using the **path** statement, as described in [“Creating Named Paths” on page 60](#). Then apply the named path by including the **primary** or **secondary** statement. A named path can be referenced by any number of LSPs.

To configure primary and secondary paths for an LSP, complete the steps in the following sections:

- [Configuring Primary and Secondary Paths for an LSP on page 242](#)
- [Configuring the Revert Timer for LSPs on page 243](#)
- [Specifying the Conditions for Path Selection on page 244](#)

### Configuring Primary and Secondary Paths for an LSP

The **primary** statement creates the primary path, which is the LSP's preferred path. The **secondary** statement creates an alternative path. If the primary path can no longer reach the egress router, the alternative path is used.

To configure primary and secondary paths, include the **primary** and **secondary** statements:

```
primary path-name {  
  ...  
}  
secondary path-name {  
  ...  
}
```

You can include these statements at the following hierarchy levels:

- [edit protocols mpls `label-switched-path` *lsp-name*]
- [edit logical-systems *logical-system-name* protocols mpls `label-switched-path` *lsp-name*]



When the software switches from the primary to a secondary path, it continuously attempts to revert to the primary path, switching back to it when it is again reachable, but no sooner than the retry time specified in the **retry-timer** statement. (For more information, see [“Configuring the Connection Between Ingress and Egress Routers” on page 257.](#))

You can configure zero or one primary path. If you do not configure a primary path, the first secondary path that is established is selected as the path.

You can configure zero or more secondary paths. All secondary paths are equal. The software does not attempt to switch among secondary paths. If the current secondary path is not available, the next one is tried in no particular order. To create a set of equal paths, specify secondary paths without specifying a primary path.

If you do not specify any named paths, or if the path that you specify is empty, the software makes all routing decisions necessary to reach the egress router.

## Configuring the Revert Timer for LSPs

For LSPs configured with both primary and secondary paths, it is possible to configure the revert timer. If a primary path goes down and traffic is switched to the secondary path, the revert timer specifies the amount of time (in seconds) that the LSP must wait before it can revert traffic back to a primary path. If during this time, the primary path experiences any connectivity problems or stability problems, the timer is restarted. You can configure the revert timer for both static and dynamic LSPs.

The Junos OS also makes a determination as to which path is the preferred path. The preferred path is the path that has not encountered any difficulty in the last revert timer period. If both the primary and secondary paths have encountered difficulty, neither path is considered preferred. However, if one of the paths is dynamic and the other static, the dynamic path is selected as the preferred path.

If you have configured BFD on the LSP, Junos OS waits until the BFD session comes up on the primary path before starting the revert timer counter.

The range of values you can configure for the revert timer is 0 through 65,535 seconds. The default value is 60 seconds.

If you configure a value of 0 seconds, the traffic on the LSP, once switched from the primary path to the secondary path, remains on the secondary path permanently (until the network operator intervenes or until the secondary path goes down).

You can configure the revert timer for all LSPs on the router at the **[edit protocols mpls]** hierarchy level or for a specific LSP at the **[edit protocols mpls label-switched-path *lsp-name*]** hierarchy level.

To configure the revert timer, include the **revert-timer** statement:

```
revert-timer seconds;
```

For a list of hierarchy levels at which you can include this statement, see the summary section for this statement.

## Specifying the Conditions for Path Selection

When you have configured both primary and secondary paths for an LSP, you may need to ensure that only a specific path is used.

The **select** statement is optional. If you do not include it, MPLS uses an automatic path selection algorithm.

The **manual** and **unconditional** options do the following:

- **manual**—The path is immediately selected for carrying traffic as long as it is up and stable. Traffic is sent to other working paths if the current path is down or degraded (receiving errors). This parameter overrides all other path attributes except the **select unconditional** statement.
- **unconditional**—The path is selected for carrying traffic unconditionally, regardless of whether the path is currently down or degraded (receiving errors). This parameter overrides all other path attributes.

Because the **unconditional** option switches to a path without regard to its current status, be aware of the following potential consequences of specifying it:

- If a path is not currently up when you enable the **unconditional** option, traffic can be disrupted. Ensure that the path is functional before specifying the **unconditional** option.
- Once a path is selected because it has the **unconditional** option enabled, all other paths for the LSP are gradually cleared, including the primary and standby paths. No path can act as a standby to an unconditional path, so signaling those paths serves no purpose.

For a specific path, the **manual** and **unconditional** options are mutually exclusive. You can include the **select** statement with the **manual** option in the configuration of only one of an LSP's paths, and the **select** statement with the **unconditional** option in the configuration of only one other of its paths.

Enabling or disabling the **manual** and **unconditional** options for the **select** statement while LSPs and their paths are up does not disrupt traffic.

To specify that a path be selected for carrying traffic if it is up and stable for at least the revert timer window, include the **select** statement with the **manual** option:

```
select manual;
```

To specify that a path should always be selected for carrying traffic, even if it is currently down or degraded, include the **select** statement with the **unconditional** option:

```
select unconditional;
```

You can include the **select** statement at the following hierarchy levels:

- [edit protocols mpls **label-switched-path** *lsp-name* (**primary** | **secondary**) *path-name*]
- [edit logical-systems *logical-system-name* protocols mpls **label-switched-path** *lsp-name* (**primary** | **secondary**) *path-name*]

## Configuring a Text Description for LSPs

You can provide a textual description for an LSP by enclosing any descriptive text that includes spaces within quotation marks (" "). The descriptive text you include is displayed in the detail output of the **show mpls lsp** or the **show mpls container-lsp** command.

Adding a text description for an LSP has no effect on the operation of the LSP. The LSP text description can be no more than 80 characters in length.

To provide a textual description for an LSP, include the **description** statement at any of the following hierarchy levels:

- [edit protocols mpls **label-switched-path** *lsp-name*]
- [edit protocols mpls **container-label-switched-path** *lsp-name*]
- [edit protocols mpls **static-label-switched-path** *lsp-name*]
- [edit logical-systems *logical-system-name* protocols mpls **label-switched-path** *lsp-name*]
- [edit logical-systems *logical-system-name* protocols mpls **static-label-switched-path** *lsp-name*]

Before you begin:

- Configure the device interfaces.
- Configure the device for network communication.
- Enable MPLS on the device interfaces.
- Configure an LSP in the MPLS domain.

To add a text description for an LSP:

1. Enter any text describing the LSP.

```
[edit protocols mpls lsp lsp-name]
user@host# set description text
```

For example:

```
[edit protocols mpls lsp LSP1]
user@host# set description "Connecting remote device"
```

2. Verify and commit the configuration.

For example:

```
[edit protocols mpls lsp]
user@host# set protocols mpls label-switched-path LSP1 to 1.1.1.1
user@host# set protocols mpls label-switched-path LSP1 description "Connecting
remote device"
user@host# set protocols mpls interface ge-1/0/8.0

[edit]
user@host# commit
commit complete
```

3. View the description of an LSP using the **show mpls lsp detail** or **show mpls container-lsp detail** command, depending on the type of LSP configured.

```
user@host> show mpls lsp detail
```

```
Ingress LSP: 1 sessions
```

```
1.1.1.1
```

```
From: 0.0.0.0, State: Up, ActiveRoute: 1, LSPname: LSP1
```

```
Description: Connecting remote device
```

```
ActivePath: (none)
```

```
LSPtype: Static Configured, Penultimate hop popping
```

```
LoadBalance: Random
```

```
Encoding type: Packet, Switching type: Packet, GPID: IPv4
```

```
Primary State: Up
```

```
Priorities: 7 0
```

```
SmartOptimizeTimer: 180
```

```
No computed ERO.
```

```
Total 1 displayed, Up 1, Down 0
```

```
Egress LSP: 0 sessions
```

```
Total 0 displayed, Up 0, Down 0
```

```
Transit LSP: 0 sessions
```

```
Total 0 displayed, Up 0, Down 0
```

- Related Documentation
- [label-switched-path on page 1453](#)
  - [Configuring LSP Metrics on page 258](#)

## Configuring the Entropy Label for LSPs

The insertion of entropy labels for an LSP enables transit routers to load-balance MPLS traffic across ECMP paths or Link Aggregation groups using just the MPLS label stack as a hash input without having to rely on deep packet inspection. Deep packet inspection requires more of the router's processing power and different routers have differing deep-packet inspection capabilities.

To configure the entropy label for an LSP, complete the following steps:

1. On the ingress router, include the **entropy-label** statement at the **[edit protocols mpls labeled-switched-path *labeled-switched-path-name*]** hierarchy level or at the **[edit protocols mpls static-labeled-switched-path *labeled-switched-path-name* ingress]** hierarchy level. The entropy label is added to the MPLS label stack and can be processed in the forwarding plane.

```
entropy-label;
```



**NOTE:** This is only applicable for RSVP and static LSPs.

2. On the ingress router, you can configure an ingress policy for LDP-signaled LSPs:

```
entropy-label {
  ingress-policy policy-name;
```

```
}
```

Configure the ingress policy at the **[edit policy-options]** hierarchy level:

```
policy-options {
  policy-statement policy-name {
    term term-name {
      from {
        prefix-list prefix-list-name;
      }
      then actions;
    }
  }
}
```

The following shows an example of an entropy label ingress policy.

```
policy-options {
  policy-statement entropy-policy {
    term no-insert-entropy-label {
      from {
        prefix-list no-entropy-label-fec;
      }
      then accept;
    }
  }
}
```

3. (Optional) By default, routers that support the pushing and popping of entropy labels are configured with the **load-balance-label-capability** statement at the **[edit forwarding-options]** hierarchy level to signal the labels on a per-LSP basis. If the peer router is not equipped to handle load-balancing labels, you can prevent the provider edge (PE) router from signaling the entropy label capability by configuring the **no-load-balance-label-capability** statement at the **[edit forwarding-options]** hierarchy level.

```
[edit forwarding-options]
user@PE no-load-balance-label-capability;
```

Transit routers require no configuration. The presence of the entropy label indicates to the transit router to load balance based solely on the MPLS label stack.

Penultimate hop routers pop the entropy label by default.

#### Related Documentation


- [Configuring Per-Packet Load Balancing](#)
- [enhanced-hash-key](#)
- [entropy-label on page 1426](#)
- [hash-key](#)
- [ingress-policy on page 1450](#)

## Configuring Corouted Bidirectional LSPs

A corouted bidirectional packet LSP is a combination of two LSPs sharing the same path between a pair of ingress and egress nodes, as shown in [Figure 30 on page 248](#). It is established using the GMPLS extensions to RSVP-TE. This type of LSP can be used to carry any of the standard types of MPLS-based traffic, including Layer 2 VPNs, Layer 2 circuits, and Layer 3 VPNs. You can configure a single BFD session for the bidirectional LSP (you do not need to configure a BFD session for each LSP in each direction). You can also configure a single standby bidirectional LSP to provide a backup for the primary bidirectional LSP. Corouted bidirectional LSPs are supported for both penultimate hop popping (PHP) and ultimate hop popping (UHP).

High availability is available for bidirectional LSPs. You can enable graceful restart and nonstop active routing. Graceful restart and nonstop active routing are supported when the restarting router is the ingress, egress, or transit router for the bidirectional LSP.

Figure 30: Corouted Bidirectional LSP

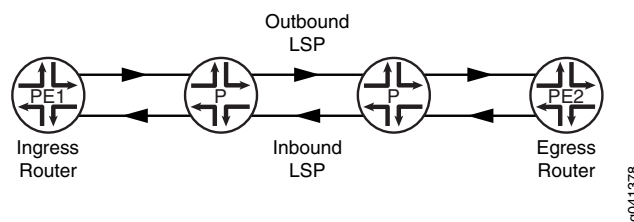

To configure a corouted bidirectional LSP:

1. In configuration mode, configure the ingress router for the LSP and include the **corouted-bidirectional** statement to specify that the LSP be established as a corouted bidirectional LSP.

The path is computed using CSPF and initiated using RSVP signaling (just like a unidirectional RSVP signaled LSP). Both the path to the egress router and the reverse path from the egress router are created when this configuration is committed.

```
[edit protocols mpls]
user@PE1# set label-switched-path sample-lsp corouted-bidirectional
```

2. (Optional) For a reverse path, configure an LSP on the egress router and include the **corouted-bidirectional-passive** statement to associate the LSP with another LSP.

No path computation or signaling is used for this LSP since it relies on the path computation and signaling provided by the ingress LSP. You cannot configure both the **corouted-bidirectional** statement and the **corouted-bidirectional-passive** statement on the same LSP.

```
[edit protocols mpls]
user@PE1# set label-switched-path sample-lsp-reverse-path
corouted-bidirectional-passive
```

This statement also makes it easier to debug corouted bidirectional LSPs. If you configure the **corouted-bidirectional-passive** statement (again, on the egress router), you can issue **ping mpls lsp-end-point**, **ping mpls ldp**, **ping mpls rsvp**, **traceroute mpls**

`ldp`, and `traceroute mpls rsvp` commands to test the coreouted bidirectional LSP from the egress router.

3. Use the `show mpls lsp extensive` and the `show rsvp session extensive` commands to display information about the bidirectional LSP.

The following shows output for the `show rsvp session extensive` command when run on an ingress router with a bidirectional LSP configured:

```
user@PE1> show rsvp session extensive
Ingress RSVP: 2 sessions

10.255.14.39
  From: 10.255.14.43, LSPstate: Up, ActiveRoute: 0
  LSPname: l-to-h, LSPpath: Primary
  LSPtype: Static Configured
  Bidirectional, Upstream label in: 3, Upstream label out: -
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 300032
  Resv style: 1 FF, Label in: -, Label out: 300032
  Time left: -, Since: Tue May 31 08:49:25 2011
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 24617 protocol 0
  PATH rcvfrom: localclient
  Adspec: sent MTU 1500
  Path MTU: received 1500
  PATH sentto: 10.1.1.2 (ge-0/0/0.0) 3396 pkts
  RESV rcvfrom: 10.1.1.2 (ge-0/0/0.0) 3394 pkts
  PATH notifyto: localclient
  RESV notifyto: 10.255.14.39
  Protection attributes: primary, working, 1:N protection
  Association attributes: recovery, src 10.255.14.43, id 1
  Explct route: 10.1.1.2 10.1.2.2 10.1.3.2
  Record route: 10.1.1.2 10.1.2.2 10.1.3.2

10.255.14.39
  From: 10.255.14.43, LSPstate: Up, ActiveRoute: 0
  LSPname: l-to-h, LSPpath: Secondary
  LSPtype: Static Configured
  Bidirectional, Upstream label in: 3, Upstream label out: -
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 300032
  Resv style: 1 FF, Label in: -, Label out: 300032
  Time left: -, Since: Tue May 31 08:49:25 2011
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 2 receiver 24617 protocol 0
  PATH rcvfrom: localclient
  Adspec: sent MTU 1500
  Path MTU: received 1500
  PATH sentto: 10.1.1.2 (ge-0/0/0.0) 3396 pkts
  RESV rcvfrom: 10.1.1.2 (ge-0/0/0.0) 3394 pkts
  Protection attributes: primary, protecting
  Association attributes: recovery, src 10.255.14.43, id 1
  Explct route: 10.2.1.2 10.2.2.2 10.2.3.2
  Record route: 10.2.1.2 10.2.2.2 10.2.3.2
Total 2 displayed, Up 2, Down 0

Egress RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0
```


Transit RSVP: 0 sessions  
Total 0 displayed, Up 0, Down 0

- Related Documentation**
- [Configuring Ultimate-Hop Popping for LSPs on page 250](#)
  - [Configuring LDP Graceful Restart on page 610](#)
  - [Configuring RSVP Graceful Restart on page 548](#)
  - [Configuring Nonstop Active Routing](#)

## Configuring Ultimate-Hop Popping for LSPs


By default, RSVP-signaled LSPs use penultimate-hop popping (PHP). [Figure 31 on page 250](#) illustrates a penultimate-hop popping LSP between Router PE1 and Router PE2. Router CE1 forwards a packet to its next hop (Router PE1), which is also the LSP ingress. Router PE1 pushes label 1 on the packet and forwards the labeled packet to Router P1. Router P1 completes the standard MPLS label swapping operation, swapping label 1 for label 2, and forwards the packet to Router P2. Since Router P2 is the penultimate-hop router for the LSP to Router PE2, it first pops the label and then forwards the packet to Router PE2. When Router PE2 receives it, the packet can have a service label, an explicit-null label, or just be a plain IP or VPLS packet. Router PE2 forwards the unlabeled packet to Router CE2.

**Figure 31: Penultimate-Hop Popping for an LSP**

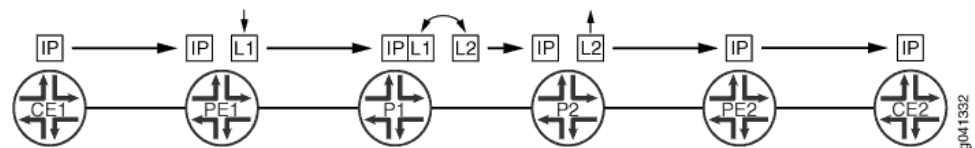

You can also configure ultimate-hop popping (UHP) (as shown in [Figure 32 on page 250](#)) for RSVP-signaled LSPs. Some network applications can require that packets arrive at the egress router (Router PE2) with a non-null outer label. For an ultimate-hop popping LSP, the penultimate router (Router P2 in [Figure 32 on page 250](#)) performs the standard MPLS label swapping operation (in this example, label 2 for label 3) before forwarding the packet to egress Router PE2. Router PE2 pops the outer label and performs a second lookup of the packet address to determine the end destination. It then forwards the packet to the appropriate destination (either Router CE2 or Router CE4).

**Figure 32: Ultimate-Hop Popping for an LSP**

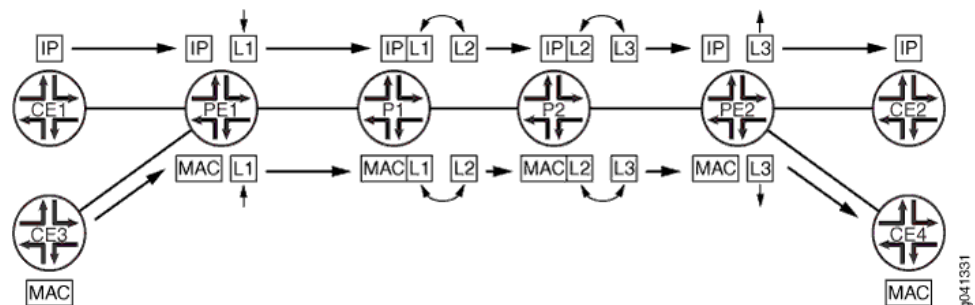



The following network applications require that you configure UHP LSPs:

- MPLS-TP for performance monitoring and in-band OAM
- Edge protection virtual circuits

The following features do not support the UHP behavior:

- LDP-signaled LSPs
- Static LSPs
- Point-to-multipoint LSPs
- CCC
- **traceroute** command

For more information about UHP behavior, see Internet draft [draft-ietf-mpls-rsvp-te-no-php-oob-mapping-01.txt](#), *Non PHP behavior and Out-of-Band Mapping for RSVP-TE LSPs*.

For point-to-point RSVP-signaled LSPs, UHP behavior is signaled from the LSP ingress. Based on the ingress router configuration, RSVP can signal the UHP LSP with the non-PHP flag set. RSVP PATH messages carry the two flags in the LSP-ATTRIBUTES object. When the egress router receives the PATH message, it assigns a non-null label to the LSP. RSVP also creates and installs two routes in the mpls.0 routing table. S refers to the S bit of the MPLS label, which indicates whether or not the bottom of the label stack has been reached.

- Route S=0—Indicates that there are more labels in the stack. The next hop for this route points to the mpls.0 routing table, triggering a chained MPLS label lookup to discover the remaining MPLS labels in the stack.
- Route S=1—Indicates that there are no more labels. The next hop points to the inet.0 routing table if the platform supports chained and multi-family lookup. Alternatively, the label route can point to a VT interface to initiate IP forwarding.

If you enable UHP LSPs, MPLS applications such as Layer 3 VPNs, VPLS, Layer 2 VPNs, and Layer 2 circuits can use the UHP LSPs. The following explains how UHP LSPs affect the different types of MPLS applications:

- Layer 2 VPNs and Layer 2 circuits—A packet arrives at the PE router (egress of the UHP LSP) with two labels. The outer label (S=0) is the UHP label, and the inner label (S=1) is the VC label. A lookup based on the transport label results in a table handle for the mpls.0 routing table. There is an additional route in the mpls.0 routing table corresponding to the inner label. A lookup based on the inner label results in the CE router next hop.
- Layer 3 VPN—A packet arrives at the PE router (egress of the UHP LSP) with two labels. The outer label (S=0) is the UHP label, and the inner label is the VPN label (S=1). A lookup based on the transport label results in the table handle for the mpls.0 routing table. There are two cases in this scenario. By default, Layer 3 VPNs advertise the per-next hop label. A lookup based on the inner label results in the next hop toward

the CE router. However, if you have configured the **vrf-table-label** statement for the Layer 3 VPN routing instance, the inner LSI label points to the VRF routing table. An IP lookup is also completed for the VRF routing table.



**NOTE:** UHP for Layer 3 VPNs configured with the **vrf-table-label** statement is supported on MX 3D Universal Edge Routers only.

- **VPLS**—A packet arrives at the PE router (egress of the UHP LSP) with two labels. The outer label is the transport label (S=0) and the inner label is the VPLS label (S=1). A lookup based on the transport label results in the table handle for the mpls.0 routing table. A lookup based on the inner label in mpls.0 routing table results in the LSI tunnel interface of the VPLS routing instance if tunnel-services is not configured (or a VT interface not available). MX 3D Series routers support chained lookup and multi-family lookup.



**NOTE:** UHP for VPLS configured with the **no-tunnel-service** statement is supported on MX 3D Series routers only.

- **IPv4 over MPLS**—A packet arrives at the PE router (egress of the UHP LSP) with one label (S=1). A lookup based on this label returns a VT tunnel interface. Another IP lookup is completed on the VT interface to determine where to forward the packet. If the routing platform supports multi-family and chained lookups (for example, MX 3D routers and PTX Series Packet Transport Routers), lookup based on label route (S=1) points to the inet.0 routing table.
- **IPv6 over MPLS**—For IPv6 tunneling over MPLS, PE routers advertise IPv6 routes to each other with a label value of 2. This is the explicit null label for IPv6. As a result, the forwarding next hops for IPv6 routes that are learned from remote PE routers normally push two labels. The inner label is 2 (it could be different if the advertising PE router is from another vendor), and the router label is the LSP label. Packets arrive at the PE router (egress of the UHP LSP) with two labels. The outer label is the transport label (S=0), and the inner label is the IPv6 explicit-null label (label 2). Lookup based on the inner label in the mpls.0 routing table redirects back to the mpls.0 routing table. On MX 3D Series routers, the inner label (label 2) is stripped off and an IPv6 lookup is done using the inet6.0 routing table.
- **Enabling both PHP and UHP LSPs**—You can configure both PHP and UHP LSPs over the same network paths. You can separate PHP and UHP traffic by selecting forwarding LSP next hops using a regular expression with the **install-nexthop** statement. You can also separate traffic by simply naming the LSPs appropriately.

The following statements enable ultimate-hop popping for an LSP. You can enable this feature on a specific LSP or for all of the ingress LSPs configured on the router. Configure these statements on the router at the LSP ingress.

1. To enable ultimate-hop popping, include the **ultimate-hop-popping** statement:

```
ultimate-hop-popping;
```

Include this statement at the **[edit protocols mpls label-switched-path *label-switched-path-name*]** hierarchy level to enable ultimate-hop popping on a specific LSP. Include this statement at the **[edit protocols mpls]** hierarchy level to enable ultimate-hop popping on all of the ingress LSPs configured on the router. You can also configure the **ultimate-hop-popping** statement under the equivalent **[edit logical-routers]** hierarchy levels.



**NOTE:** When you enable ultimate-hop popping, RSVP attempts to resignal existing LSPs as ultimate-hop popping LSPs in a make-before-break fashion. If an egress router does not support ultimate-hop popping, the existing LSP is torn down (RSVP sends a PathTear message along an LSP's path, removing the path state and dependent reservation state and releasing the associated networking resources).

If you disable ultimate-hop popping, RSVP resignals existing LSPs as penultimate-hop popping LSPs in a make-before-break fashion.

2. If you want to enable both ultimate-hop-popping and chained next hops on MX 3D Series routers only, you also need to configure the **enhanced-ip** option for the **network-services** statement:

```
network-services enhanced-ip;
```

You configure this statement at the **[edit chassis]** hierarchy level. Once you have configured the **network-services** statement, you need to reboot the router to enable UHP behavior.

#### Related Documentation

- [MPLS Label Allocation on page 26](#)
- [Configuring Corouted Bidirectional LSPs on page 248](#)
- [network-services](#)
- [ultimate-hop-popping on page 1537](#)

## Configuring an LSP Across ASs

You can configure an LSP to traverse multiple areas in a network by including the **inter-domain** statement as a part of the LSP configuration. This statement allows the router to search for routes in the IGP database. You need to configure this statement on routers that might be unable to locate a path using intra-domain CSPF (by looking in the traffic engineering database (TED)). When you configure inter-area LSPs, the **inter-domain** statement is required.

Before you begin:

- Configure the device interfaces with family MPLS.
- Configure the device router ID and autonomous system number.
- Enable MPLS and RSVP on the router and transit interfaces.

- Configure your IGP to support traffic engineering.
- Set up an LSP from the ingress to the egress router.

To configure an LSP across multiple ASs on the ingress label-switched router (LER):

1. Enable MPLS on all the interfaces (excluding the management interface).

```
[edit protocols]
user@LER# set mpls interface all
user@LER# set mpls interface fxp0.0 disable
```

2. Enable RSVP on all the interfaces (excluding the management interface).

```
[edit protocols]
user@LER# set rsvp interface all
user@LER# set rsvp interface fxp0.0 disable
```

3. Configure the inter-area LSP.

```
[edit protocols]
user@LER# set mpls label-switched-path inter-area-LSP-name to
    egress-LER-ip-address
user@LER# set mpls label-switched-path inter-area-LSP-name inter-domain
```

4. Verify and commit the configuration.

```
[edit protocols]
user@LER# set rsvp interface ge-0/0/0.0
user@LER# set rsvp interface lo0.0
user@LER# set rsvp interface fxp0.0 disable
user@LER# set mpls statistics traffic-class-statistics
user@LER# set mpls label-switched-path R1-R2 to 20.0.0.1
user@LER# set mpls label-switched-path R1-R2 inter-domain
user@LER# set mpls interface ge-0/0/0.0
user@LER# set mpls interface lo0.0
user@LER# set mpls interface fxp0.0 disable
user@LER# set ospf traffic-engineering
user@LER# set ospf area 0.0.0.0 interface ge-0/0/0.0
user@LER# set ospf area 0.0.0.0 interface lo0.0
```

Related Documentation

- [inter-domain on page 1452](#)

---

## Configuring Fast Reroute

Fast reroute provides a mechanism for automatically rerouting traffic on an LSP if a node or link in an LSP fails, thus reducing the loss of packets traveling over the LSP.

To configure fast reroute on an LSP, include the **fast-reroute** statement on the ingress router (or switch):

```
fast-reroute {
  (bandwidth bps | bandwidth-percent percentage);
  (exclude [ group-names ] | no-exclude );
  hop-limit number;
  (include-all [ group-names ] | no-include-all);
}
```

```
(include-any [ group-names ] | no-include-any);
}
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls **label-switched-path** *lsp-name*]
- [edit logical-systems *logical-system-name* protocols mpls **label-switched-path** *lsp-name*]

You do not need to configure fast reroute on the LSP's transit and egress routers (or switches). Once fast reroute is enabled, the ingress router (or switch) signals all the downstream routers (or switches) that fast reroute is enabled on the LSP, and each downstream router does its best to set up detours for the LSP. If a downstream router does not support fast reroute, it ignores the request to set up detours and continues to support the LSP. A router that does not support fast reroute will cause some of the detours to fail, but otherwise has no impact on the LSP.



**NOTE:** To enable PFE fast reroute, configure a routing policy statement with the **load-balance per-packet** statement at the [edit policy-options policy-statement *policy-name* then] hierarchy level on each of the routers where traffic might be rerouted. See also “[Configuring Load Balancing Across RSVP LSPs](#)” on page 514.

By default, no bandwidth is reserved for the rerouted path. To allocate bandwidth for the rerouted path, include either the **bandwidth** statement or the **bandwidth-percent** statement. You can only include one of these statements at a time. If you do not include either the **bandwidth** statement or the **bandwidth-percent** statement, the default setting is to not reserve bandwidth for the detour path.

When you include the **bandwidth** statement, you can specify the specific amount of bandwidth (in bits per second [bps]) you want to reserve for the detour path. The bandwidth does not need to be identical to that allocated for the LSP.

When you specify a bandwidth percent using the **bandwidth-percent** statement, the detour path bandwidth is computed by multiplying the bandwidth percentage by the bandwidth configured for the main traffic-engineered LSP. For information about how to configure the bandwidth for a traffic-engineered LSP, see “[Configuring Traffic-Engineered LSPs](#)” on page 354.

Hop-limit constraints define how many more routers a detour is allowed to traverse compared with the LSP itself. By default, the hop limit is set to 6. For example, if an LSP traverses 4 routers, any detour for the LSP can be up to 10 (that is, 4 + 6) router hops, including the ingress and egress routers.

By default, a detour inherits the same administrative (coloring) group constraints as its parent LSP when CSPF is determining the alternate path. Administrative groups, also known as link coloring or resource class, are manually assigned attributes that describe the “color” of links, such that links with the same color conceptually belong to the same class. If you specify the **include-any** statement when configuring the parent LSP, all links traversed by the alternate session must have at least one color found in the list of groups.

If you specify the **include-all** statement when configuring the parent LSP, all links traversed by the alternate session must have all of the colors found in the list of groups. If you specify the **exclude** statement when configuring the parent LSP, none of the links must have a color found in the list of groups. For more information about administrative group constraints, see [“Configuring Administrative Groups for LSPs” on page 268](#).

**Related  
Documentation**

- [Fast Reroute Overview on page 46](#)
- *MPLS Feature Support on QFX Series and EX4600 Switches*

---

## Configuring the Optimization Interval for Fast Reroute Paths

You can enable path optimization for fast reroute by configuring the fast reroute optimize timer. The optimize timer triggers a periodic optimization process that recomputes the fast reroute detour LSPs to use network resources more efficiently.

To enable fast reroute path optimization, specify the number of seconds using the `optimize-timer` option for the **fast-reroute** statement:

```
fast-reroute seconds;
```

You can include this statement at the following hierarchy levels:

- `[edit protocols rsvp]`
- `[edit logical-systems logical-system-name protocols rsvp]`

---

## Adding LSP-Related Routes to the inet.3 or inet6.3 Routing Table

By default, a host route toward the egress router is installed in the `inet.3` or `inet6.3` routing table. (The host route address is the one you configure in the **to** statement.) Installing the host route allows BGP to perform next-hop resolution. It also prevents the host route from interfering with prefixes learned from dynamic routing protocols and stored in the `inet.0` or `inet6.0` routing table.

Unlike the routes in the `inet.0` or `inet6.0` table, routes in the `inet.3` or `inet6.3` table are not copied to the Packet Forwarding Engine, and hence they cause no changes in the system forwarding table directly. You cannot use the **ping** or **traceroute** command through these routes. The only use for `inet.3` or `inet6.3` is to permit BGP to perform next-hop resolution. To examine the `inet.3` or `inet6.3` table, use the **show route table inet.3** or **show route table inet6.3** command.

To inject additional routes into the `inet.3` or `inet6.3` routing table, include the **install** statement:

```
install {  
    destination-prefix <active>;  
}
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls **label-switched-path** *lsp-name*]
- [edit protocols mpls **static-label-switched-path** *lsp-name*]
- [edit logical-systems *logical-system-name* protocols mpls **label-switched-path** *lsp-name*]
- [edit logical-systems *logical-system-name* protocols mpls **static-label-switched-path** *lsp-name*]

The specified routes are installed as aliases into the routing table when the LSP is established. Installing additional routes allows BGP to resolve next hops within the specified prefix and to direct additional traffic for these next hops to a particular LSP.

Including the **active** option with the **install** statement installs the specified prefix into the inet.0 or inet6.0 routing table, which is the primary forwarding table. The result is a route that is installed in the forwarding table any time the LSP is established, which means you can ping or trace the route. Use this option with care, because this type of prefix is very similar to a static route.

You use alias routes for routers that have multiple addresses being used as BGP next hops, or for routers that are not MPLS capable. In either of these cases, the LSP can be configured to another MPLS capable system within the local domain, which then acts as a “border” router. The LSP then terminates on the border router and, from that router, Layer 3 forwarding takes the packet to the true next-hop router.

In the case of an interconnect, the domain's border router can act as the proxy router and can advertise the prefix for the interconnect if the border router is not setting the BGP next hop to itself.

In the case of a point of presence (POP) that has routers that do not support MPLS, one router (for example, a core router) that supports MPLS can act as a proxy for the entire POP and can inject a set of prefixes that cover the POP. Thus, all routers within the POP can advertise themselves as interior BGP (IBGP) next hops, and traffic can follow the LSP to reach the core router. This means that normal IGP routing would prevail within the POP.

You cannot use the **ping** or **traceroute** commands on routes in the inet.3 or inet6.3 routing table.

For BGP next-hop resolution, it makes no difference whether a route is in inet.0/inet6.0 or inet.3/inet6.3; the route with the best match (longest mask) is chosen. Among multiple best-match routes, the one with the highest preference value is chosen.

---

## Configuring the Connection Between Ingress and Egress Routers

The ingress router might make many attempts to connect and reconnect to the egress router using the primary path. You can control how often the ingress router tries to establish a connection using the primary path and how long it waits between retry attempts.

The retry timer configures how long the ingress router waits before trying to connect again to the egress router using the primary path. The default retry time is 30 seconds. The time can be from 1 through 600 seconds. To modify this value, include the **retry-timer** statement:

**retry-timer** *seconds*;

You can configure this statement at the following hierarchy levels:

- [edit protocols mpls **label-switched-path** *lsp-name*]
- [edit logical-systems *logical-system-name* protocols mpls **label-switched-path** *lsp-name*]

By default, no limit is set to the number of times an ingress router attempts to establish or reestablish a connection to the egress router using the primary path. To limit the number of attempts, include the **retry-limit** statement:

**retry-limit** *number*;

You can configure this statement at the following hierarchy levels:

- [edit protocols mpls **label-switched-path** *lsp-name*]
- [edit logical-systems *logical-system-name* protocols mpls **label-switched-path** *lsp-name*]

The limit can be a value up to 10,000. When the retry limit is exceeded, no more attempts are made to establish a path connection. At this point, intervention is required to restart the primary path.

If you set a retry limit, it is reset to 1 each time a successful primary path is created.

---

## Configuring LSP Metrics

The LSP metric is used to indicate the ease or difficulty of sending traffic over a particular LSP. Lower LSP metric values (lower cost) increase the likelihood of an LSP being used. Conversely, high LSP metric values (higher cost) decrease the likelihood of an LSP being used.

The LSP metric can be specified dynamically by the router or explicitly by the user as described in the following sections:

- [Configuring Dynamic LSP Metrics on page 258](#)
- [Configuring Static LSP Metrics on page 259](#)

### Configuring Dynamic LSP Metrics

If no specific metric is configured, an LSP attempts to track the IGP metric toward the same destination (the **to** address of the LSP). IGP includes OSPF, IS-IS, Routing Information Protocol (RIP), and static routes. BGP and other RSVP or LDP routes are excluded.

For example, if the OSPF metric toward a router is 20, all LSPs toward that router automatically inherit metric 20. If the OSPF toward a router later changes to a different



value, all LSP metrics change accordingly. If there are no IGP routes toward the router, the LSP raises its metric to 65,535.

Note that in this case, the LSP metric is completely determined by IGP; it bears no relationship to the actual path the LSP is currently traversing. If LSP reroutes (such as through reoptimization), its metric does not change, and thus it remains transparent to users. Dynamic metric is the default behavior; no configuration is required.

## Configuring Static LSP Metrics

You can manually assign a fixed metric value to an LSP. Once configured with the **metric** statement, the LSP metric is fixed and cannot change:

**metric** *number*;

You can include this statement at the following hierarchy levels:

- [edit protocols mpls **label-switched-path** *lsp-name*]
- [edit protocols mpls **static-label-switched-path** *lsp-name*]
- [edit logical-systems *logical-system-name* protocols mpls **label-switched-path** *lsp-name*]
- [edit logical-systems *logical-system-name* protocols mpls **static-label-switched-path** *lsp-name*]

The LSP metric has several uses:

- When there are parallel LSPs with the same egress router, the metrics are compared to determine which LSP has the lowest metric value (the lowest cost) and therefore the preferred path to the destination. If the metrics are the same, the traffic is shared.

Adjusting the metric values can force traffic to prefer some LSPs over others, regardless of the underlying IGP metric.

- When an IGP shortcut is enabled (see [“Using Labeled-Switched Paths to Augment SPF to Compute IGP Shortcuts” on page 34](#)), an IGP route might be installed in the routing table with an LSP as the next hop, if the LSP is on the shortest path to the destination. In this case, the LSP metric is added to the other IGP metrics to determine the total path metric. For example, if an LSP whose ingress router is X and egress router is Y is on the shortest path to destination Z, the LSP metric is added to the metric for the IGP route from Y to Z to determine the total cost of the path. If several LSPs are potential next hops, the total metrics of the paths are compared to determine which path is preferred (that is, has the lowest total metric). Or, IGP paths and LSPs leading to the same destination could be compared by means of the metric value to determine which path is preferred.

By adjusting the LSP metric, you can force traffic to prefer LSPs, prefer the IGP path, or share the load among them.

- If router X and Y are BGP peers and if there is an LSP between them, the LSP metric represents the total cost to reach Y from X. If for any reason the LSP reroutes, the underlying path cost might change significantly, but X’s cost to reach Y remains the same (the LSP metric), which allows X to report through a BGP multiple exit

discriminator (MED) a stable metric to downstream neighbors. As long as Y remains reachable through the LSP, no changes are visible to downstream BGP neighbors.

It is possible to configure IS-IS to ignore the configured LSP metric by including the **ignore-lsp-metrics** statement at the **[edit protocols isis traffic-engineering shortcuts]** hierarchy level. This statement removes the mutual dependency between IS-IS and MPLS for path computation. For more information, see the *Junos OS Routing Protocols Library*.

---

## Configuring CSPF Tie Breaking

When selecting a path for an LSP, CSPF uses a tie-breaking process if there are several equal-cost paths. For information about how CSPF selects a path, see [“How CSPF Selects a Path” on page 31](#).

You can configure one of the following statements (you can only configure one of these statements at a time) to alter the behavior of CSPF tie-breaking:

- By default, a random tie-breaking rule for CSPF is used to select a path from the set of equal-cost paths. However, you can also explicitly configure this behavior using the **random** statement:

**random;**

- To prefer the path with the least-utilized links, include the **least-fill** statement:

**least-fill;**

- To prefer the path with the most-utilized links, include the **most-fill** statement:

**most-fill;**

You can include each of these statements at the following hierarchy levels:

- **[edit protocols mpls label-switched-path *lsp-name*]**
- **[edit logical-systems *logical-system-name* protocols mpls label-switched-path *lsp-name*]**

**Related Documentation**

- [How CSPF Selects a Path on page 31](#)

---

## Configuring Load Balancing Based on MPLS Labels

Load balancing occurs on a per-packet basis for MPLS flows on supported platforms. Entropy, or random distribution, is essential for the uniform distribution of packets to their next hops. By default, when load balancing is used to help distribute traffic, Junos OS employs a hash algorithm to select a next-hop address to install into the forwarding table. Whenever the set of next hops for a destination changes, the next-hop address is reselected by means of the hash algorithm. You can configure how the hash algorithm is used to load-balance traffic across a set of equal-cost label switched paths (LSPs).

To ensure entropy for VPLS & VPWS traffic, Junos OS can create a hash based on data from the IP header and as many as three MPLS labels (the so-called top labels).

In some cases, as the number of network feature that use labels grows (such as MPLS Fast Reroute, and RFC 3107, RSVP and VPN) data in the top three labels can become static and thus not a sufficient source for entropy. Load balancing can become skewed as a result, or the incidence of out-of-order packet delivery may rise. For these cases, labels from the bottom of the label stack can be used (see Table 1, below for qualifications). Top labels and bottom labels cannot be used at the same time.



**NOTE:** MPC cards do not support the regular hash key configuration. For the MPC-based hash key configuration to be effective, you need an **enhanced-hash-key** configuration.

Load balancing is used to evenly distribute traffic when the following conditions apply:

- There are multiple equal-cost next hops over different interfaces to the same destination.
- There is a single next hop over an aggregated interface.

An LSP tends to load-balance its placement by randomly selecting one of the equal-cost next hops and using it exclusively. The random selection is made independently at each transit router, which compares Interior Gateway Protocol (IGP) metrics alone. No consideration is given to bandwidth or congestion levels.

This feature applies to aggregated Ethernet and aggregated SONET/SDH interfaces as well as multiple equal-cost MPLS next hops. In addition, on the T Series, MX Series, M120, and M320 routers only, you can configure load balancing for IPv4 traffic over Layer 2 Ethernet pseudowires. You can also configure load balancing for Ethernet pseudowires based on IP information. The option to include IP information in the hash key provides support for Ethernet circuit cross-connect (CCC) connections.

To load-balance based on the MPLS label information, configure the **family mpls** statement:

```
[edit forwarding-options hash-key]
family mpls {
  all-labels;
  bottom-label-1;
  bottom-label-2;
  bottom-label-3;
  label-1;
  label-2;
  label-3;
  no-labels;
  no-label-1-exp;
  payload {
    ether-pseudowire;
    ip {
      disable;
      layer-3-only;
      port-data {
        destination-lsb;
        destination-msb;
      }
    }
  }
}
```

```

        source-lsb;
        source-msb;
    }
}
}

```

You can include this statement at the following hierarchy levels:

- **[edit forwarding-options hash-key]**

[Table 5 on page 262](#) provides detailed information about all of the possible MPLS LSP load-balancing options.

**Table 5: MPLS LSP Load Balancing Options**

| Statement             | Supported Platforms                                                | MPLS LSP Load Balancing Options                                                                                                                                                                                                                                                                                                                                                                                                                        |
|-----------------------|--------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>all-labels</b>     | PTX Series                                                         | Up to eight MPLS labels are included in the hash key to identify the uniqueness of a flow in the Packet Forwarding Engine. This value is set by default.                                                                                                                                                                                                                                                                                               |
| <b>bottom-label-1</b> | MX Series with DPC (I-Chip). Not supported on M10i, M7i, and M120. | Uses the bottom-most label for calculating the hash key, for example if the top labels do not provide sufficient variable for the required level of entropy.                                                                                                                                                                                                                                                                                           |
| <b>bottom-label-2</b> | MX Series with DPC (I-Chip). Not supported on M10i, M7i, and M120. | Uses the second label from the bottom for calculating the hash key, for example if the top labels do not provide sufficient variable for the required level of entropy.                                                                                                                                                                                                                                                                                |
| <b>bottom-label-3</b> | MX Series with DPC (I-Chip). Not supported on M10i, M7i, and M120. | Uses the third label from the bottom for calculating the hash key, for example if the top labels do not provide sufficient variable for the required level of entropy.                                                                                                                                                                                                                                                                                 |
| <b>label-1</b>        | M Series, MX Series, T Series                                      | Include the first label in the hash key. Use this option for single label packets.                                                                                                                                                                                                                                                                                                                                                                     |
| <b>label-2</b>        | M Series, MX Series, T Series                                      | Include the second label in the hash key. You must also configure the <b>label-1</b> option. The entire first label and the first 16 bits of the second label are used in the hash key.                                                                                                                                                                                                                                                                |
| <b>label-3</b>        | M Series, MX Series, T Series                                      | Include the third label in the hash key. You must also configure the <b>label-1</b> option and the <b>label-2</b> option.                                                                                                                                                                                                                                                                                                                              |
| <b>no-labels</b>      | All                                                                | Excludes MPLS labels from the hash key.                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>no-label-1-exp</b> | M Series, MX Series, T Series                                      | Excludes the EXP bit of the top label from the hash key. You must also configure the <b>label-1</b> option.<br><br>For Layer 2 VPNs, the router could encounter a packet reordering problem. When a burst of traffic pushes the customer traffic bandwidth to exceed its limits, the traffic might be affected in mid flow. Packets might be reordered as a result. By excluding the EXP bit from the hash key, you can avoid this reordering problem. |

Table 5: MPLS LSP Load Balancing Options (*continued*)

| Statement                   | Supported Platforms             | MPLS LSP Load Balancing Options                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|-----------------------------|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>payload</b>              | All                             | Allows you to configure which parts of the IP packet payload to include in the hash key. For the PTX Series Packet Transport Router, this value is set by default.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>disable</b>              | PTX Series                      | Exclude IP payload from the hash key.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <del>ether-pseudowire</del> | M120, M320, MX Series, T Series | Load-balance IPv4 traffic over Layer 2 Ethernet pseudowires.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>ip</b>                   | All                             | Include the IPv4 or IPv6 address in the hash key. You must also configure either <b>label-l</b> or <b>no-labels</b> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>layer-3-only</b>         | All                             | Include only the Layer 3 IP information in the hash key. Excludes all of the <b>port-data</b> bytes from the hash key.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>port-data</b>            | M Series, MX Series, T Series   | Include the source and destination port field information. By default, the most significant byte and least significant byte of the source and destination port fields are used in the hash key. To select specific bytes to use in the hash key, include one or more of the <b>source-msb</b> , <b>source-lsb</b> , <b>destination-msb</b> , and <b>destination-lsb</b> options at the <b>[edit forwarding-options hash-key family mpls payload ip port-data]</b> hierarchy level. To prevent all four bytes from being hashed, include the <b>layer-3-only</b> statement at the <b>[edit forwarding-options hash-key family mpls payload ip]</b> hierarchy level. |
| <del>destination-lsb</del>  | M Series, MX Series, T Series   | Include the least significant byte of the destination port in the hash key. Can be combined with any of the other <b>port-data</b> options.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <del>destination-msb</del>  | M Series, MX Series, T Series   | Include the most significant byte of the destination port in the hash key. Can be combined with any of the other <b>port-data</b> options.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>source-lsb</b>           | M Series, MX Series, T Series   | Include the least significant byte of the source port in the hash key. Can be combined with any of the other <b>port-data</b> options.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>source-msb</b>           | M Series, MX Series, T Series   | Include the most significant byte of the source port in the hash key. Can be combined with any of the other <b>port-data</b> options.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |

The following examples illustrate ways in which you can configure MPLS LSP load balancing:

- To include the IP address as well as the first label in the hash key:
  - For M Series, MX Series, and T Series routers, configure the **label-l** statement and the **ip** option for the **payload** statement at the **[edit forwarding-options hash-key family mpls]** hierarchy level:

```
[edit forwarding-options hash-key family mpls]
label-l;
payload {
  ip;
}
```

- For PTX Series Packet Transport Routers, the **all-labels** and **ip payload** options are configured by default, so no configuration is necessary.
- (M320 and T Series routers only) To include the IP address as well as both the first and second labels in the hash key, configure the **label-1** and **label-2** options and the **ip** option for the **payload** statement at the **[edit forwarding-options hash-key family mpls]** hierarchy level:

```
[edit forwarding-options hash-key family mpls]
label-1;
label-2;
payload {
  ip;
}
```



**NOTE:** You can include this combination of statements on M320 and T Series routers only. If you include them on an M Series Multiservice Edge Router, only the first MPLS label and the IP payload are used in the hash key.

- For T Series routers, ensure proper load balancing by including the **label-1**, **label-2**, and **label-3** options at the **[edit forwarding-options hash-key family mpls]** hierarchy level:

```
[edit forwarding-options hash-key family mpls]
label-1;
label-2;
label-3;
```

- (M Series, MX Series, and T Series routers only) For Layer 2 VPNs, the router could encounter a packet reordering problem. When a burst of traffic pushes the customer traffic bandwidth to exceed its limits, the traffic might be affected in mid flow. Packets might be reordered as a result. By excluding the EXP bit from the hash key, you can avoid this reordering problem. To exclude the EXP bit of the first label from the hash calculations, include the **no-label-1-exp** statement at the **[edit forwarding-options hash-key family mpls]** hierarchy level:

```
[edit forwarding-options hash-key family mpls]
label-1;
no-label-1-exp;
payload {
  ip;
}
```

**Related  
Documentation**

- *Configuring Load Balancing for Ethernet Pseudowires*

---

## Disabling Normal TTL Decrementing

By default, the time-to-live (TTL) field value in the packet header is decremented by 1 for every hop the packet traverses in the LSP, thereby preventing loops. If the TTL field value reaches 0, packets are dropped, and an Internet Control Message Protocol (ICMP) error packet is sent to the originating router.

If the normal TTL decrement is disabled, the TTL field of IP packets entering LSPs are decremented by only 1 on transiting the LSP, making the LSP appear as a one-hop router to diagnostic tools, such as **traceroute**. Decrementing the TTL field by 1 is done by the ingress router, which pushes a label on IP packets with the TTL field in the label initialized to 255. The label's TTL field value is decremented by 1 for every hop the MPLS packet traverses in the LSP. On the penultimate hop of the LSP, the router pops the label but does not write the label's TTL field value to the IP packet's TTL field. Instead, when the IP packet reaches the egress router, the IP packet's TTL field value is decremented by 1.

When you use **traceroute** to diagnose problems with an LSP from outside that LSP, **traceroute** sees the ingress router, even though the egress router performs the TTL decrement. The behavior of **traceroute** is different if it is initiated from the ingress router of the LSP. In this case, the egress router would be the first router to respond to **traceroute**.

You can disable normal TTL decrementing in an LSP so that the TTL field value does not reach 0 before the packet reaches its destination, thus preventing the packet from being dropped. You can also disable normal TTL decrementing to make the MPLS cloud appear as a single hop, thereby hiding the network topology.

There are two ways to disable TTL decrementing:

- On the ingress of the LSP, if you include the **no-decrement-ttl** statement, the ingress router negotiates with all downstream routers using a proprietary RSVP object, to ensure all routers are in agreement. If negotiation succeeds, the whole LSP behaves as one hop to transit IP traffic.

**no-decrement-ttl;**

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.



**NOTE:** The RSVP object is proprietary to the Junos OS and might not work with other software. This potential incompatibility applies only to RSVP-signaled LSPs. When you include the **no-decrement-ttl** statement, TTL hiding can be enforced on a per-LSP basis.

- On the ingress router, you can include the **no-propagate-ttl** statement. The **no-propagate-ttl** statement applies to all LSPs, regardless of whether they are RSVP-signaled or LDP-signaled. Once set, all future LSPs traversing through this router behave as a single hop to IP packets. LSPs established before you configure this statement are not affected.

**no-propagate-ttl;**

You can include this statement at the following hierarchy levels:

- **[edit protocols mpls]**
- **[edit logical-systems *logical-system-name* protocols mpls]**

The operation of the **no-propagate-ttl** statement is interoperable with other vendors' equipment. However, you must ensure that all routers are configured identically.

To configure the TTL behavior for a single VRF routing instance, include the **no-vrf-propagate-ttl** or the **vrf-propagate-ttl** statement in the routing instance configuration at the `[edit routing-instances instance-name]` hierarchy level. The **no-vrf-propagate-ttl** or the **vrf-propagate-ttl** statement overrides the behavior configured globally for the router. If the router is operating in default mode with normal TTL decrementing, the **no-vrf-propagate-ttl** overrides the global behavior for the routing instance on which the **no-vrf-propagate-ttl** statement is configured.

- Related Documentation**
- *Example: Diagnosing Networking Problems Related to Layer 3 VPNs by Disabling TTL Decrementing* (on Layer 3 VPNs Feature Guide for Routing Devices in the Junos VPNs Configuration Guide)

---

## Configuring MPLS Soft Preemption

Soft preemption attempts to establish a new path for a preempted LSP before tearing down the original LSP. The default behavior is to tear down a preempted LSP first, signal a new path, and then reestablish the LSP over the new path. In the interval between when the path is taken down and the new LSP is established, any traffic attempting to use the LSP is lost. Soft preemption prevents this type of traffic loss. The trade-off is that during the time when an LSP is being soft preempted, two LSPs with their corresponding bandwidth requirements are used until the original path is torn down.

MPLS soft preemption is useful for network maintenance. For example, you can move all LSPs away from a particular interface, then take the interface down for maintenance without interrupting traffic. MPLS soft preemption is described in detail in RFC 5712, *MPLS Traffic Engineering Soft Preemption*.

Soft preemption is a property of the LSP and is disabled by default. You configure it at the ingress of an LSP by including the **soft-preemption** statement:

```
soft-preemption;
```

You can include this statement at the following hierarchy levels:

- `[edit protocols mpls label-switched-path lsp-name]`
- `[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name]`

You can also configure a timer for soft preemption. The timer designates the length of time the router should wait before initiating a hard preemption of the LSP. At the end of the time specified, the LSP is torn down and resignaled. The soft-preemption cleanup timer has a default value of 30 seconds; the range of permissible values is 0 through 180 seconds. A value of 0 means that soft preemption is disabled. The soft-preemption cleanup timer is global for all LSPs.

Configure the timer by including the **cleanup-timer** statement:

```
cleanup-timer seconds;
```

You can include this statement at the following hierarchy levels:

- `[edit protocols rsvp preemption soft-preemption]`



- [edit logical-systems *logical-system-name* protocols rsvp **preemption soft-preemption**]



**NOTE:** Soft preemption cannot be configured on LSPs for which secondary paths or fast reroute has been configured. The configuration fails to commit. However, you can enable soft preemption in conjunction with node and link protection.

## Disabling Constrained-Path LSP Computation

If the IGP is a link-state protocol (such as IS-IS or OSPF) and supports extensions that allow the current bandwidth reservation on each router's link to be reported, constrained-path LSPs are computed by default.

The Junos implementations of IS-IS and OSPF include the extensions that support constrained-path LSP computation.

- IS-IS—These extensions are enabled by default. To disable this support, include the **disable** statement at the [edit protocols isis **traffic-engineering**] hierarchy level, as discussed in the *Junos OS Routing Protocols Library*.
- OSPF—These extensions are disabled by default. To enable this support, include the **traffic-engineering** statement in the configurations of all routers running OSPF, as described in the *Junos OS Routing Protocols Library*.

If IS-IS is enabled on a router or you enable OSPF traffic engineering extensions, MPLS performs the constrained-path LSP computation by default. For information about how constrained-path LSP computation works, see [“Constrained-Path LSP Computation” on page 30](#).

Constrained-path LSPs have a greater chance of being established quickly and successfully for the following reasons:

- The LSP computation takes into account the current bandwidth reservation.
- Constrained-path LSPs reroute themselves away from node failures and congestion.

When constrained-path LSP computation is enabled, you can configure the LSP so that it is periodically reoptimized, as described in [“Optimizing Signaled LSPs” on page 280](#).

When an LSP is being established or when an existing LSP fails, the constrained-path LSP computation is repeated periodically at the interval specified by the retry timer until the LSP is set up successfully. Once the LSP is set up, no recomputation is done. For more information about the retry timer, see [“Configuring the Connection Between Ingress and Egress Routers” on page 257](#).

By default, constrained-path LSP computation is enabled. You might want to disable constrained-path LSP computation when all nodes do not support the necessary traffic engineering extensions. To disable constrained-path LSP computation, include the **no-cspf** statement:

**no-cspf;**

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

If you disable constrained-path LSP computation on LSPs by configuring the **no-cspf** statement and then attempt to advertise other LSPs with lower metrics than the IGP from this router in either IS-IS or OSPF, new LSPs cannot be established.

---

## Configuring Administrative Groups for LSPs

---

Administrative groups, also known as link coloring or resource class, are manually assigned attributes that describe the “color” of links, such that links with the same color conceptually belong to the same class. You can use administrative groups to implement a variety of policy-based LSP setups.

Administrative groups are meaningful only when constrained-path LSP computation is enabled.

You can assign up to 32 names and values (in the range 0 through 31), which define a series of names and their corresponding values. The administrative names and values must be identical across all routers within a single domain.



**NOTE:** The administrative value is distinct from the priority. You configure the priority for an LSP using the **priority** statement. See “[Configuring Priority and Preemption for LSPs](#)” on page 280.

To configure administrative groups, follow these steps:

1. Define multiple levels of service quality by including the **admin-groups** statement:

```
admin-groups {  
    group-name group-value;  
}
```

You can include this statement at the following hierarchy levels:

- **[edit protocols mpls]**
- **[edit logical-systems *logical-system-name* protocols mpls]**

The following configuration example illustrates how you might configure a set of administrative names and values for a domain:

```
[edit protocols mpls]  
admin-groups {  
    gold 1;  
    silver 2;  
    copper 3;  
    best-effort 4;  
}
```

2. Define the administrative groups to which an interface belongs. You can assign multiple groups to an interface. Include the **interface** statement:

```
interface interface-name {
  admin-group [ group-names ];
}
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls]
- [edit logical-systems *logical-system-name* protocols mpls]

If you do not include the **admin-group** statement, an interface does not belong to any group.

IGPs use the group information to build link-state packets, which are then flooded throughout the network, providing information to all nodes in the network. At any router, the IGP topology, as well as administrative groups of all the links, is available.

Changing the interface's administrative group affects only new LSPs. Existing LSPs on the interface are not preempted or recomputed to keep the network stable. If LSPs need to be removed because of a group change, issue the **clear RSVP session** command.

3. Configure an administrative group constraint for each LSP or for each primary or secondary LSP path. Include the **label-switched-path** statement:

```
label-switched-path lsp-name {
  to address;
  ...
  admin-group {
    exclude [ group-names ];
    include-all [ group-names ];
    include-any [ group-names ];
  }
  primary path-name {
    admin-group {
      exclude [ group-names ];
      include-all [ group-names ];
      include-any [ group-names ];
    }
  }
  secondary path-name {
    admin-group {
      exclude [ group-names ];
      include-all [ group-names ];
      include-any [ group-names ];
    }
  }
}
```

You can include the **label-switched-path** statement at the following hierarchy levels:

- [edit protocols mpls]
- [edit logical-systems *logical-system-name* protocols mpls]

If you omit the **include-all**, **include-any**, or **exclude** statements, the path computation proceeds unchanged. The path computation is based on the constrained-path LSP computation. For information about how the constrained-path LSP computation is calculated, see [“How CSPF Selects a Path” on page 31](#).



**NOTE:** Changing the LSP's administrative group causes an immediate recomputation of the route; therefore, the LSP might be rerouted.

---

## Configuring Extended Administrative Groups for LSPs

---

In MPLS traffic engineering, a link can be configured with a set of administrative groups (also known as colors or resource classes). Administrative groups are carried in the interior gateway protocol (IGP) (OSPFv2 and IS-IS) as a 32-bit value assigned to each link. Juniper Networks routers normally interpret this 32-bit value as a bit mask with each bit representing a group, limiting each network to a total of 32 distinct administrative groups (value range 0 through 31).

You configure extended administrative groups, represented by a 32-bit value, expanding the number of administrative groups supported in the network beyond just 32. The original range of values available for administrative groups is still supported for backwards compatibility.

The extended administrative groups configuration accepts a set of interfaces with a corresponding set of extended administrative group names. It converts the names into a set of 32-bit values and propagates this information into the IGP. The extended administrative group values are global and must be identically configured on all the supported routers participating in the network. The domain-wide extended administrative groups database, learned from other routers through IGP flooding, is used by Constrained Shortest Path First (CSPF) for path computation.

The following procedure describes how to configure extended administrative groups:

1. Configure the `admin-groups-extended-range` statement:

```
admin-groups-extended-range {  
    maximum maximum-number;  
    minimum minimum-number;  
}
```

You can include this statement at the following hierarchy levels:

- `[edit routing-options]`
- `[edit logical-systems logical-system-name routing-options]`

The `admin-groups-extended-range` statement includes the `minimum` and `maximum` options. The range maximum must be greater than the range minimum.

2. Configure the `admin-groups-extended` statement:

```
admin-groups-extended group-name {  
    group-value group-identifier;  
}
```

You can include this statement at the following hierarchy levels:

- `[edit routing-options]`

- [edit logical-systems *logical-system-name* routing-options]

The **admin-groups-extended** statement enables you to configure a group name and group value for the administrative group. The group value must be within the range of values configured using the **admin-groups-extended-range** statement.

3. The extended administrative groups for an MPLS interface consist of the set of extended administrative group names assigned for the interface. The interface extended administrative group names must be configured for the global extended administrative groups.

To configure an extended administrative group for an MPLS interface, specify the administrative group name within the MPLS interface configuration using the **admin-groups-extended** statement:

```
admin-groups-extended group-name;
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls interface *interface-name*]
- [edit logical-systems *logical-system-name* protocols mpls interface *interface-name*]

4. The LSP extended administrative groups define the set of include and exclude constraints for an LSP and for a path's primary and secondary paths. The extended administrative group names must be configured for the global extended administrative groups.

To configure extended administrative groups for an LSP, include the **admin-group-extended** statement at an LSP hierarchy level:

```
admin-group-extended {
  apply-groups group-value;
  apply-groups-except group-value;
  exclude group-value;
  include-all group-value;
  include-any group-value;
}
```

The **admin-group-extended** statement includes the following options: **apply-groups**, **apply-groups-except**, **exclude**, **include-all**, and **include-any**. Each option enables you to configure one or more extended administrative groups.

For the list of the hierarchy levels at which you can configure this statement, see the statement summary for this statement.

5. To display the currently configured extended administrative groups, issue the **show mpls admin-groups-extended** command.

#### Related Documentation

- [Configuring Administrative Groups for LSPs on page 268](#)

## Configuring Preference Values for LSPs

As an option, you can configure multiple LSPs between the same pair of ingress and egress routers. This is useful for balancing the load among the LSPs because all LSPs,

by default, have the same preference level. To prefer one LSP over another, set different preference levels for individual LSPs. The LSP with the lowest preference value is used. The default preference for RSVP LSPs is 7 and for LDP LSPs is 9. These preference values are lower (more preferred) than all learned routes except direct interface routes.

To change the default preference value, include the **preference** statement:

```
preference preference;
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

---

## Disabling Path Route Recording by LSPs

The Junos implementation of RSVP supports the Record Route object, which allows an LSP to actively record the routers through which it transits. You can use this information for troubleshooting and to prevent routing loops. By default, path route information is recorded. To disable recording, include the **no-record** statement:

```
no-record;
```

For a list of hierarchy levels at which you can include the **record** and **no-record** statements, see the statement summary section for the statement.

---

## Configuring Class of Service for MPLS LSPs

The following sections provide an overview of MPLS class of service (CoS) and describe how to configure the MPLS CoS value:

- [Class of Service for MPLS Overview on page 272](#)
- [Configuring the MPLS CoS Values on page 273](#)
- [Rewriting IEEE 802.1p Packet Headers with the MPLS CoS Value on page 275](#)

---

### Class of Service for MPLS Overview

When IP traffic enters an LSP tunnel, the ingress router marks all packets with a CoS value, which is used to place the traffic into a transmission priority queue. On the router, for SDH/SONET and T3 interfaces, each interface has four transmit queues. The CoS value is encoded as part of the MPLS header and remains in the packets until the MPLS header is removed when the packets exit from the egress router. The routers within the LSP utilize the CoS value set at the ingress router. The CoS value is encoded by means of the CoS bits (also known as the EXP or experimental bits). For more information, see [“MPLS Label Allocation” on page 26](#).

MPLS class of service works in conjunction with the router’s general CoS functionality. If you do not configure any CoS features, the default general CoS settings are used. For MPLS class of service, you might want to prioritize how the transmit queues are serviced by configuring weighted round-robin, and to configure congestion avoidance using random early detection (RED)..

## Configuring the MPLS CoS Values

When traffic enters an LSP tunnel, the CoS value in the MPLS header is set in one of three ways:

- The number of the output queue into which the packet was buffered and the packet loss priority (PLP) bit are written into the MPLS header and are used as the packet's CoS value. This behavior is the default, and no configuration is required. *Default MPLS EXP Classifier* explains the default MPLS CoS values, and summarizes how the CoS values are treated.
- You set a fixed CoS value on all packets entering the LSP tunnel. A fixed CoS value means that all packets entering the LSP receive the same class of service.
- You set an MPLS EXP rewrite rule to override the default behavior.

To set a fixed CoS value on all packets entering the LSP, include the **class-of-service** statement:

```
class-of-service cos-value;
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls]
- [edit protocols mpls label-switched-path *path-name*]
- [edit protocols mpls label-switched-path *path-name* primary *path-name*]
- [edit protocols mpls label-switched-path *path-name* secondary *path-name*]
- [edit protocols rsvp interface *interface-name* link-protection]
- [edit protocols rsvp interface *interface-name* link-protection bypass *destination*]
- [edit logical-systems *logical-system-name* protocols mpls]
- [edit logical-systems *logical-system-name* protocols mpls label-switched-path *path-name*]
- [edit logical-systems *logical-system-name* protocols mpls label-switched-path *path-name* primary *path-name*]
- [edit logical-systems *logical-system-name* protocols mpls label-switched-path *path-name* secondary *path-name*]
- [edit logical-systems *logical-system-name* protocols rsvp interface *interface-name* link-protection ]
- [edit logical-systems *logical-system-name* protocols rsvp interface *interface-name* link-protection bypass *destination*]

The CoS value set using the **class-of-service** statement at the [edit protocols mpls] hierarchy level supersedes the CoS value set at the [edit class-of-service] hierarchy level for an interface. Effectively, the CoS value configured for an LSP overrides the CoS value set for an interface.

The **class-of-service** statement at the **[edit protocols mpls label-switched-path]** hierarchy level assigns an initial EXP value for the MPLS shim header of packets in the LSP. This value is initialized at the ingress routing device only and overrides the rewrite configuration established for that forwarding class. However, the CoS processing (weighted round robin [WRR] and RED) of packets entering the ingress routing device is not changed by the **class-of-service** statement on an MPLS LSP. Classification is still based on the behavior aggregate (BA) classifier at the **[edit class-of-service]** hierarchy level or the multifield classifier at the **[edit firewall]** hierarchy level.



**BEST PRACTICE:** We recommend configuring all routing devices along the LSP to have the same input classifier for EXP, and, if a rewrite rule is configured, all routing devices should have the same rewrite configuration. Otherwise, traffic at the next LSR might be classified into a different forwarding class, resulting in a different EXP value being written to the EXP header.

The CoS value can be a decimal number from 0 through 7. This number corresponds to a 3-bit binary number. The high-order 2 bits of the CoS value select which transmit queue to use on the outbound interface card.

The low-order bit of the CoS value is treated as the PLP bit and is used to select the RED drop profile to use on the output queue. If the low-order bit is 0, the non-PLP drop profile is used, and if the low-order bit is 1, the PLP drop profile is used. It is generally expected that RED will more aggressively drop packets that have the PLP bit set. For more information about RED and drop profiles, see *Managing Congestion Using RED Drop Profiles and Packet Loss Priorities*.



**NOTE:** Configuring the PLP drop profile to drop packets more aggressively (for example, setting the CoS value from 6 to 7) decreases the likelihood of traffic getting through.

Table 6 on page 274 summarizes how MPLS CoS values correspond to the transmit queue and PLP bit. Note that in MPLS, the mapping between the CoS bit value and the output queue is hard-coded. You cannot configure the mapping for MPLS; you can configure it only for IPv4 traffic flows, as described in *Understanding How Forwarding Classes Assign Classes to Output Queues*.

**Table 6: MPLS CoS Values**

| MPLS CoS Value | Bits | Transmit Queue | PLP Bit |
|----------------|------|----------------|---------|
| 0              | 000  | 0              | Not set |
| 1              | 001  | 0              | Set     |
| 2              | 010  | 1              | Not set |



Table 6: MPLS CoS Values (*continued*)

| MPLS CoS Value | Bits | Transmit Queue | PLP Bit |
|----------------|------|----------------|---------|
| 3              | 011  | 1              | Set     |
| 4              | 100  | 2              | Not set |
| 5              | 101  | 2              | Set     |
| 6              | 110  | 3              | Not set |
| 7              | 111  | 3              | Set     |

Because the CoS value is part of the MPLS header, the value is associated with the packets only as they travel through the LSP tunnel. The value is not copied back to the IP header when the packets exit from the LSP tunnel.

To configure class of service (CoS) for Multiprotocol Label Switching (MPLS) packets in a label-switched path (LSP):

1. Specify the CoS value

If you do not specify a CoS value, the IP precedence bits from the packet's IP header are used as the packet's CoS value.

## Rewriting IEEE 802.1p Packet Headers with the MPLS CoS Value

For Ethernet interfaces installed on a T Series router or an M320 router with a peer connection to an M Series router or a T Series router, you can rewrite both MPLS CoS and IEEE 802.1p values to a configured value (the MPLS CoS values are also known as the EXP or experimental bits). Rewriting these values allows you to pass the configured value to the Layer 2 VLAN path. To rewrite both the MPLS CoS and IEEE 802.1p values, you must include the EXP and IEEE 802.1p rewrite rules in the class of service interface configuration. The EXP rewrite table is applied when you configure the IEEE 802.1p and EXP rewrite rules.

For information about how to configure the EXP and IEEE 802.1p rewrite rules, see *Rewriting Packet Headers to Ensure Forwarding Behavior*.

**Related Documentation**

- *Default MPLS EXP Classifier*

## Achieving a Make-Before-Break, Hitless Switchover for LSPs

Adaptive label-switched paths (LSPs) might need to establish a new LSP instance and transfer traffic from an old LSP instance onto the new LSP instance before tearing down the old one. This type of configuration is referred to as a *make before break* (MBB).

RSVP-TE is a protocol used to establish LSPs in MPLS networks. The Junos OS implementation of RSVP-TE to achieve a hitless (no traffic loss) MBB switchover has relied on configuring the timer values in the following configuration statements:

- **optimize-switchover-delay**—Amount of time to wait before switching to the new LSP instance.
- **optimize-hold-dead-delay**—Amount of time to wait after switchover and before deletion of the old LSP instance.

Both the **optimize-switchover-delay** and **optimize-hold-dead-delay** statements apply to all LSPs that use the make-before-break behavior for LSP setup and teardown, not just for LSPs for which the **optimize-timer** statement has also been configured. The following MPLS features cause LSPs to be set up and torn down using make-before-break behavior:

- Adaptive LSPs
- Automatic bandwidth allocation
- BFD for LSPs
- Graceful Routing Engine switchover
- Link and node protection
- Nonstop active routing
- Optimized LSPs
- Point-to-multipoint (P2MP) LSPs
- Soft preemption
- Standby secondary paths

Both the **optimize-switchover-delay** and **optimize-hold-dead-delay** statements when configured add an artificial delay to the MBB process. The value of the **optimize-switchover-delay** statement varies with the size of the Explicit Route Objects (EROs). An ERO is an extension to RSVP that allows an RSVP PATH message to traverse an explicit sequence of routers that is independent of conventional shortest-path IP routing. The value of the **optimize-switchover-delay** statement also depends on the CPU load on each of the routers on the path. Customers set the **optimize-switchover-delay** statement by trial and error.

The value of the **optimize-hold-dead-delay** statement depends on how fast the ingress router moves all application prefixes to point to the new LSP. This is determined by the Packet Forwarding Engine load, which can vary from platform to platform. Customers have to set the **optimize-hold-dead-delay** statement by trial and error.

However, as of Release 15.1, Junos OS is able to achieve a hitless MBB switchover without configuring the artificial delays that such timer values introduce.

This topic summarizes the three methods of achieving a MBB switchover from an old LSP to a new LSP using Junos OS:

- [Specifying the Amount of Time the Router Waits to Switch Over to New Paths on page 277](#)
- [Specifying the Amount of Time to Delay the Tear Down of Old Paths on page 277](#)
- [Achieving a Hitless, MBB Switchover Without Artificial Delays on page 277](#)

## Specifying the Amount of Time the Router Waits to Switch Over to New Paths

To specify the amount of time the router waits to switch over LSP instances to newly optimized paths, use the **optimize-switchover-delay** statement. You only need to configure this statement on routers acting as the ingress for the affected LSPs (you do not need to configure this statement on transit or egress routers). The timer in this statement helps to ensure that the new optimized paths have been established before traffic is switched over from the old paths. This timer can only be enabled or disabled for all of the LSPs configured on the router.

To configure the amount of time the router waits to switch over LSP instances to newly optimized paths, specify the time in seconds by using the **optimize-switchover-delay** statement:

```
optimize-switchover-delay seconds;
```

You can include this statement at the following hierarchy levels:

- **[edit protocols mpls]**
- **[edit logical-systems *logical-system-name* protocols mpls]**

## Specifying the Amount of Time to Delay the Tear Down of Old Paths

To specify the amount of time to delay the tear down of old paths after the router has switched traffic to new optimized paths, use the **optimize-hold-dead-delay** statement. You only need to configure this statement on routers acting as the ingress for the affected LSPs (you do not need to configure this statement on transit or egress routers). The timer in this statement helps to ensure that old paths are not torn down before all routes have been switched over to the new optimized paths. This timer can be enabled for specific LSPs or for all of the LSPs configured on the router.

To configure the amount of time in seconds to delay the tear down of old paths after the router has switched traffic to new optimized paths, use the **optimize-hold-dead-delay** statement:

```
optimize-hold-dead-delay seconds;
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

## Achieving a Hitless, MBB Switchover Without Artificial Delays

As of Junos OS Release 15.1, there is another way to relinquish the old LSP instances after MBB switchover without relying on the arbitrary time intervals set up by the

**optimize-switchover-delay** or **optimize-hold-dead-delay** statement. For example, if you use the **optimize-hold-dead-delay** statement, you configure a time you think it is safe to wait before tearing down the old LSP instance after MBB. However, some routes might still be in the process of shifting to the new instance. Tearing down the old LSP instance prematurely results in one of the transit nodes dropping the traffic for those routes that have not shifted to the new LSP instance.

To avoid traffic loss, instead of using the **optimize-switchover-delay** statement, you can use MPLS-OAM (lsp ping), which confirms that the LSP data plane is established end-to-end. Instead of using the **optimize-hold-dead-delay** statement, you can use a feedback mechanism from the rpd infrastructure that confirms that all prefixes referring to the old LSP have been switched over. The feedback mechanism is sourced from the Tag library and relies on the routing protocol process (rpd) infrastructure to determine when all the routes using the old LSP instance have fully shifted to the new LSP instance after MBB switchover.

The feedback mechanism is always in place, and it is optional. Configure the **optimize-adaptive-teardown** statement to have the feedback mechanism used during MBB switchover. This feature is not supported for RSVP point-to-multipoint (P2MP) LSP instances. Global configuration of the **optimize-adaptive-teardown** statement only affects the point-to-point LSPs that are configured in the system.

You only need to configure the **optimize-adaptive-teardown** statement on routers acting as the ingress for the affected LSPs (you do not need to configure this statement on transit or egress routers). This feedback mechanism ensures that old paths are not torn down before all routes have been switched over to the new optimized paths. The global configuration of this configuration statement affects only the point-to-point LSPs that are configured in the system.

```
optimize-adaptive-teardown {  
  p2p:  
}
```

You can include this statement at the **[edit protocols mpls]** hierarchy level.

#### Related Documentation

- [Configuring Adaptive LSPs on page 278](#)
- [Configuring Automatic Bandwidth Allocation for LSPs on page 286](#)
- [Configuring MPLS Soft Preemption on page 266](#)
- [Configuring the Smart Optimize Timer for LSPs on page 284](#)
- [Configuring Hot Standby of Secondary Paths for LSPs on page 297](#)

---

## Configuring Adaptive LSPs

An LSP occasionally might need to reroute itself for these reasons:

- The continuous reoptimization process is configured with the **optimize-timer** statement.
- The current path has connectivity problems.

- The LSP is preempted by another LSP configured with the **priority** statement and is forced to reroute.
- The explicit-path information for an active LSP is modified, or the LSP's bandwidth is increased.

You can configure an LSP to be *adaptive* when it is attempting to reroute itself. When it is adaptive, the LSP holds onto existing resources until the new path is successfully established and traffic has been cut over to the new LSP. To retain its resources, an adaptive LSP does the following:

- Maintains existing paths and allocated bandwidths—This ensures that the existing path is not torn down prematurely and allows the current traffic to continue flowing while the new path is being set up.
- Avoids double-counting for links that share the new and old paths—Double-counting occurs when an intermediate router does not recognize that the new and old paths belong to the same LSP and counts them as two separate LSPs, requiring separate bandwidth allocations. If some links are close to saturation, double-counting might cause the setup of the new path to fail.

By default, adaptive behavior is disabled. You can include the **adaptive** statement in two different hierarchy levels.

If you specify the **adaptive** statement at the LSP hierarchy levels, the adaptive behavior is enabled on all primary/secondary paths of the LSP. This means both the primary and secondary paths share the same bandwidth on common links.

To configure adaptive behavior for all LSP paths, include the **adaptive** statement in the LSP configuration:

```
adaptive;
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls **label-switched-path** *lsp-name*]
- [edit logical-systems *logical-system-name* protocols mpls **label-switched-path** *lsp-name*]

If you specify the **adaptive** statement at the [edit protocols mpls **label-switched-path** *lsp-name* (**primary** | **secondary**) *path-name*] hierarchy level, adaptive behavior is enabled only on the path on which it is specified. Bandwidth double-counting occurs between different paths. However, if you also have the **adaptive** statement configured at the [edit protocols mpls **label-switched-path** *lsp-name*] hierarchy level, it overrides the adaptive behavior of each individual path.

To configure adaptive behavior for either the primary or secondary level, include the **adaptive** statement:

```
adaptive;
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls **label-switched-path** *lsp-name* (**primary** | **secondary**) *path-name*]

- [edit logical-systems *logical-system-name* protocols mpls label-switched-path *lsp-name* (*primary* | *secondary*) *path-name*]

## Configuring Priority and Preemption for LSPs

---

When there is insufficient bandwidth to establish a more important LSP, you might want to tear down a less important existing LSP to free the bandwidth. You do this by preempting the existing LSP.

Whether an LSP can be preempted is determined by two properties associated with the LSP:

- Setup priority—Determines whether a new LSP that preempts an existing LSP can be established. For preemption to occur, the setup priority of the new LSP must be higher than that of the existing LSP. Also, the act of preempting the existing LSP must produce sufficient bandwidth to support the new LSP. That is, preemption occurs only if the new LSP can be set up successfully.
- Reservation priority—Determines the degree to which an LSP holds on to its session reservation after the LSP has been set up successfully. When the reservation priority is high, the existing LSP is less likely to give up its reservation, and hence it is unlikely that the LSP can be preempted.

You cannot configure an LSP with a high setup priority and a low reservation priority, because permanent preemption loops might result if two LSPs are allowed to preempt each other. You must configure the reservation priority to be higher than or equal to the setup priority.

The setup priority also defines the relative importance of LSPs on the same ingress router. When the software starts, when a new LSP is established, or during fault recovery, the setup priority determines the order in which LSPs are serviced. Higher-priority LSPs tend to be established first and hence enjoy more optimal path selection.

To configure the LSP's preemption properties, include the **priority** statement:

**priority** *setup-priority reservation-priority*;

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

Both **setup-priority** and **reservation-priority** can be a value from 0 through 7. The value 0 corresponds to the highest priority, and the value 7 to the lowest. By default, an LSP has a setup priority of 7 (that is, it cannot preempt any other LSPs) and a reservation priority of 0 (that is, other LSPs cannot preempt it). These defaults are such that preemption does not happen. When you are configuring these values, the setup priority should always be less than or equal to the hold priority.

## Optimizing Signaled LSPs

---

Once an LSP has been established, topology or resources changes might, over time, make the path suboptimal. A new path might have become available that is less

congested, has a lower metric, and traverses fewer hops. You can configure the router to recompute paths periodically to determine whether a more optimal path has become available.

If reoptimization is enabled, an LSP can be rerouted through different paths by constrained-path recomputations. However, if reoptimization is disabled, the LSP has a fixed path and cannot take advantage of newly available network resources. The LSP is fixed until the next topology change breaks the LSP and forces a recomputation.

Reoptimization is not related to failover. A new path is always computed when topology failures occur that disrupt an established path.

Because of the potential system overhead involved, you need to carefully control the frequency of reoptimization. Network stability might suffer when reoptimization is enabled. By default, the **optimize-timer** statement is set to 0 (that is, it is disabled).

LSP optimization is meaningful only when constrained-path LSP computation is enabled, which is the default behavior. For more information about constrained-path LSP computation, see [“Disabling Constrained-Path LSP Computation” on page 267](#). Also, LSP optimization is only applicable to ingress LSPs, so it is only necessary to configure the **optimize-timer** statement on the ingress router. The transit and egress routers require no specific configuration to support LSP optimization (other than to have MPLS enabled).

To enable path reoptimization, include the **optimize-timer** statement:

**optimize-timer** *seconds*;

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

Once you have configured the **optimize-timer** statement, the reoptimization timer continues its countdown to the configured value even if you delete the **optimize-timer** statement from the configuration. The next optimization uses the new value. You can force the Junos OS to use a new value immediately by deleting the old value, committing the configuration, configuring the new value for the **optimize-timer** statement, and then committing the configuration again.

After reoptimization is run, the result is accepted only if it meets the following criteria:

1. The new path is not higher in IGP metric. (The metric for the old path is updated during computation, so if a recent link metric changed somewhere along the old path, it is accounted for.)
2. If the new path has the same IGP metric, it is not more hops away.
3. The new path does not cause preemption. (This is to reduce the ripple effect of preemption causing more preemption.)
4. The new path does not worsen congestion overall.

The relative congestion of the new path is determined as follows:


- a. The percentage of available bandwidth on each link traversed by the new path is compared to that for the old path, starting from the most congested links.
- b. For each current (old) path, the software stores the four smallest values for bandwidth availability for the links traversed in ascending order.
- c. The software also stores the four smallest bandwidth availability values for the new path, corresponding to the links traversed in ascending order.
- d. If any of the four new available bandwidth values are smaller than any of the corresponding old bandwidth availability values, the new path has at least one link that is more congested than the link used by the old path. Because using the link would cause more congestion, traffic is not switched to this new path.
- e. If none of the four new available bandwidth values is smaller than the corresponding old bandwidth availability values, the new path is less congested than the old path.

When all the above conditions are met, then:

5. If the new path has a lower IGP metric, it is accepted.
6. If the new path has an equal IGP metric and lower hop count, it is accepted.
7. If you choose **least-fill** as a load balancing algorithm, LSPs are load balanced as follows:
  - a. The LSP is moved to a new path that is utilized at least 10% less than the current path. This might reduce congestion on the current path by only a small amount. For example, if an LSP with 1 MB of bandwidth is moved off a path carrying a minimum of 200 MB, congestion on the original path is reduced by less than 1%.
  - b. For **random** or **most-fill** algorithms, this rule does not apply.

The following example illustrates how the **least-fill** load balancing algorithm works.

**Figure 33: least-fill Load Balancing Algorithm Example**



As shown in [Figure 33 on page 282](#), there are two potential paths for an LSP to traverse from router A to router H, the odd links from L1 through L13 and the even links from L2 through L14. Currently, the router is using the even links as the active path for the LSP. Each link between the same two routers (for example, router A and router B) has the same bandwidth:

- L1, L2 = 10GE
- L3, L4 = 1GE
- L5, L6 = 1GE
- L7, L8 = 1GE
- L9, L10 = 1GE



- L11, L12 = 10GE
- L13, L14 = 10GE

The 1GE links are more likely to be congested. In this example, the odd 1GE links have the following available bandwidth:

- L3 = 41%
- L5 = 56%
- L7 = 66%
- L9 = 71%

The even 1GE links have the following available bandwidth:

- L4 = 37%
- L6 = 52%
- L8 = 61%
- L10 = 70%

Based on this information, the router would calculate the difference in available bandwidth between the odd links and the even links as follows:

- $L4 - L3 = 41\% - 37\% = 4\%$
- $L6 - L5 = 56\% - 52\% = 4\%$
- $L8 - L7 = 66\% - 61\% = 5\%$
- $L10 - L9 = 71\% - 70\% = 1\%$

The total additional bandwidth available over the odd links is 14% ( $4\% + 4\% + 5\% + 1\%$ ). Since 14% is greater than 10% (the least-fill algorithm minimum threshold), the LSP is moved to the new path over the odd links from the original path using the even links.

8. Otherwise, the new path is rejected.

You can disable the following reoptimization criteria (a subset of the criteria listed previously):

- If the new path has the same IGP metric, it is not more hops away.
- The new path does not cause preemption. (This is to reduce the ripple effect of preemption causing more preemption.)
- The new path does not worsen congestion overall.
- If the new path has an equal IGP metric and lower hop count, it is accepted.

To disable them, either issue the **clear mpls lsp optimize-aggressive** command or include the **optimize-aggressive** statement:

```
optimize-aggressive;
```

You can include this statement at the following hierarchy levels:

- **[edit protocols mpls]**
- **[edit logical-systems *logical-system-name* protocols mpls]**

Including the **optimize-aggressive** statement in the configuration causes the reoptimization procedure to be triggered more often. Paths are rerouted more frequently. It also limits the reoptimization algorithm to the IGP metric only.

**Related  
Documentation**

- [Configuring Adaptive LSPs on page 278](#)
- [Configuring Automatic Bandwidth Allocation for LSPs on page 286](#)
- [Configuring MPLS Soft Preemption on page 266](#)
- [Configuring the Smart Optimize Timer for LSPs on page 284](#)
- [Configuring Hot Standby of Secondary Paths for LSPs on page 297](#)

---

## Configuring the Smart Optimize Timer for LSPs

---

Because of network and router resource constraints, it is typically inadvisable to configure a short interval for the optimize timer. However, under certain circumstances, it might be desirable to reoptimize a path sooner than would normally be provided by the optimize timer.

For example, an LSP is traversing a preferred path that subsequently fails. The LSP is then switched to a less desirable path to reach the same destination. Even if the original path is quickly restored, it could take an excessively long time for the LSP to use it again, because it has to wait for the optimize timer to reoptimize the network paths. For such situations, you might want to configure the smart optimize timer.

When you enable the smart optimize timer, an LSP is switched back to its original path so long as the original path has been restored within 3 minutes of going down. Also, if the original path goes down again within 60 minutes, the smart optimize timer is disabled, and path optimization behaves as it normally does when the optimize timer alone is enabled. This prevents the router from using a flapping link.

The smart optimize timer is dependant on other MPLS features to function properly. For the scenario described here in which an LSP is switched to an alternate path in the event of a failure on the original path, it is assumed that you have configured one or more of the MPLS traffic protection features, including fast reroute, link protection, and standby secondary paths. These features help to ensure that traffic can reach its destination in the event of a failure.

At the least, you must configure a standby secondary path for the smart optimize timer feature to work properly. Fast reroute and link protection are more temporary solutions to a network outage. A secondary path ensures that there is a stable alternate path in the event the primary path fails. If you have not configured any sort of traffic protection for an LSP, the smart optimize timer by itself does not ensure that traffic can reach its

destination. For more information about MPLS traffic protection, see [“MPLS and Traffic Protection” on page 45](#).

When a primary path fails and the smart optimize timer switches traffic to the secondary path, the router might continue to use the secondary path even after the primary path has been restored. If the ingress router completes a CSPF calculation, it might determine that the secondary path is the better path.

This might be undesirable if the primary path should be the active path and the secondary path should be used as a backup only. Also, if the secondary path is being used as the active path (even though the primary path has been reestablished) and the secondary path fails, the smart optimize timer feature will not automatically switch traffic back to the primary path. However, you can enable protection for the secondary path by configuring node and link protection or an additional standby secondary path, in which case, the smart optimize timer can be effective.

Specify the time in seconds for the smart optimize timer using the **smart-optimize-timer** statement:

```
smart-optimize-timer seconds;
```

You can include this statement at the following hierarchy levels:

- **[edit protocols mpls]**
- **[edit logical-systems *logical-system-name* protocols mpls]**

#### Related Documentation

- [MPLS and Traffic Protection on page 45](#)
- [Optimizing Signaled LSPs on page 280](#)

## Limiting the Number of Hops in LSPs

By default, each LSP can traverse a maximum of 255 hops, including the ingress and egress routers. To modify this value, include the **hop-limit** statement:

```
hop-limit number;
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

The number of hops can be from 2 through 255. (A path with two hops consists of the ingress and egress routers only.)

## Configuring the Bandwidth Value for LSPs

Each LSP has a bandwidth value. This value is included in the sender's Tspec field in RSVP path setup messages. You can specify a bandwidth value in bits per second. If you configure more bandwidth for an LSP, it should be able to carry a greater volume of traffic. The default bandwidth is 0 bits per second.

A nonzero bandwidth requires that transit and egress routers reserve capacity along the outbound links for the path. The RSVP reservation scheme is used to reserve this capacity.

Any failure in bandwidth reservation (such as failures at RSVP policy control or admission control) might cause the LSP setup to fail. If there is insufficient bandwidth on the interfaces for the transit or egress routers, the LSP is not established.

To specify a bandwidth value for a signaled LSP, include the **bandwidth** statement:

```
bandwidth bps;
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

---

## Automatic Bandwidth Allocation for LSPs

Automatic bandwidth allocation allows an MPLS tunnel to automatically adjust its bandwidth allocation based on the volume of traffic flowing through the tunnel. You can configure an LSP with minimal bandwidth; this feature can dynamically adjust the LSP's bandwidth allocation based on current traffic patterns. The bandwidth adjustments do not interrupt traffic flow through the tunnel.

You set a sampling interval on an LSP configured with automatic bandwidth allocation. The average bandwidth is monitored during this interval. At the end of the interval, an attempt is made to signal a new path for the LSP with the bandwidth allocation set to the maximum average value for the preceding sampling interval. If the new path is successfully established and the original path is removed, the LSP is switched over to the new path. If a new path is not created, the LSP continues to use its current path until the end of the next sampling interval, when another attempt is made to establish a new path. Note that you can set minimum and maximum bandwidth values for the LSP.

During the automatic bandwidth allocation interval, the router might receive a steady increase in traffic (increasing bandwidth utilization) on an LSP, potentially causing congestion or packet loss. To prevent this, you can define a second trigger to prematurely expire the automatic bandwidth adjustment timer before the end of the current adjustment interval.

---

## Configuring Automatic Bandwidth Allocation for LSPs

Automatic bandwidth allocation allows an MPLS tunnel to automatically adjust its bandwidth allocation based on the volume of traffic flowing through the tunnel. You can configure an LSP with minimal bandwidth, and this feature can dynamically adjust the LSP's bandwidth allocation based on current traffic patterns. The bandwidth adjustments do not interrupt traffic flow through the tunnel.

At the end of the automatic bandwidth allocation time interval, the current maximum average bandwidth usage is compared with the allocated bandwidth for the LSP. If the LSP needs more bandwidth, an attempt is made to set up a new path where bandwidth is equal to the current maximum average usage. If the attempt is successful, the LSP's traffic is routed through the new path and the old path is removed. If the attempt fails, the LSP continues to use its current path.

If you have configured link and node protection for the LSP and traffic has been switched to the bypass LSP, the automatic bandwidth allocation feature continues to operate and

take bandwidth samples from the bypass LSP. For the first bandwidth adjustment cycle, the maximum average bandwidth usage taken from the original link and node-protected LSP is used to resignal the bypass LSP if more bandwidth is needed. (Link and node protection are not supported on QFX Series switches.)

If you have configured fast-reroute for the LSP, you might not be able to use this feature to adjust the bandwidth. Because the LSPs use a fixed filter (FF) reservation style, when a new path is signaled, the bandwidth might be double-counted. Double-counting can prevent a fast-reroute LSP from ever adjusting its bandwidth when automatic bandwidth allocation is enabled. (Fast reroute is not supported on QFX Series switches.)

To configure automatic bandwidth allocation, complete the steps in the following sections:

- [Configuring Automatic Bandwidth Allocation on LSPs on page 287](#)
- [Requesting Automatic Bandwidth Allocation Adjustment on page 292](#)



**NOTE:** On the QFX10000 switches, you can only configure automatic bandwidth allocation at the `edit protocols mpls` hierarchy level. Logical systems are not supported.

## Configuring Automatic Bandwidth Allocation on LSPs

To enable automatic bandwidth allocation on an LSP, include the **auto-bandwidth** statement:

```
auto-bandwidth (MPLS Tunnel) {
  adjust-interval seconds;
  adjust-threshold percent;
  adjust-threshold-overflow-limit number;
  adjust-threshold-underflow-limit number;
  maximum-bandwidth bps;
  minimum-bandwidth bps;
  minimum-bandwidth-adjust-interval
  minimum-bandwidth-adjust-threshold-change
  minimum-bandwidth-adjust-threshold-value
  monitor-bandwidth;
}
```

You can include this statement at the following hierarchy levels:

- `[edit protocols mpls label-switched-path lsp-name]`
- `[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name]`

If an LSP has an automatic bandwidth configuration, you can disable automatic bandwidth adjustments on a particular path (either primary or secondary) by configuring a static bandwidth value and by disabling the CSPF computation (using the **no-cspf** statement).

For example:

```
user@host> show protocols mpls
```

```

label-switched-path primary-path {
  to 192.168.0.1;
  ldp-tunneling;
  optimize-timer 3571;
  least-fill;
  link-protection;
  adaptive;
  auto-bandwidth {
    adjust-interval 7177;
    adjust-threshold 5;
    minimum-bandwidth 1m;
    maximum-bandwidth 2500000000;
    adjust-threshold-overflow-limit 2;
    resignal-minimum-bandwidth;
  }
  primary primary-path;
  secondary secondary-path {
    bandwidth 0;
    no-cspf;
    priority 0 0;
  }
}

```

The statements configured at the **[edit protocols mpls label-switched-path *label-switched-path-name* auto-bandwidth]** hierarchy level are optional and explained in the following sections:

- [Configuring the Automatic Bandwidth Allocation Interval on page 288](#)
- [Configuring the Maximum and Minimum Bounds of the LSP's Bandwidth on page 289](#)
- [Configuring the Automatic Bandwidth Adjustment Threshold on page 289](#)
- [Configuring a Limit on Bandwidth Overflow and Underflow Samples on page 290](#)
- [Configuring Passive Bandwidth Utilization Monitoring on page 292](#)

### Configuring the Automatic Bandwidth Allocation Interval

At the end of the automatic bandwidth allocation interval, the automatic bandwidth computation and new path setup process is triggered.



**NOTE:** To prevent unnecessary resignaling of LSPs, it is best to configure an LSP adjustment interval that is at least three times longer than the MPLS automatic bandwidth statistics interval. For example, if you configure a value of 30 seconds for the MPLS automatic bandwidth statistics interval (**interval** statement at the **[edit protocols mpls statistics]** hierarchy level), you should configure a value of at least 90 seconds for the LSP adjustment interval (**adjust-interval** statement at the **[edit protocols mpls label-switched-path *label-switched-path-name* auto-bandwidth]** hierarchy level). See also [“Configuring Reporting of Automatic Bandwidth Allocation Statistics for LSPs” on page 293](#).

To specify the bandwidth reallocation interval in seconds for a specific LSP, include the **adjust-interval** statement:

```
adjust-interval seconds;
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls label-switched-path *lsp-name* **auto-bandwidth** (MPLS Tunnel)]
- [edit logical-systems *logical-system-name* protocols mpls label-switched-path *lsp-name* **auto-bandwidth** (MPLS Tunnel)]

### Configuring the Maximum and Minimum Bounds of the LSP's Bandwidth

You can maintain the LSP's bandwidth between minimum and maximum bounds by specifying values for the **minimum-bandwidth** and **maximum-bandwidth** statements.

To specify the minimum amount of bandwidth allocated for a specific LSP, include the **minimum-bandwidth** statement:

```
minimum-bandwidth bps;
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls **label-switched-path** *lsp-name* **auto-bandwidth** (MPLS Tunnel)]
- [edit logical-systems *logical-system-name* protocols mpls **label-switched-path** *lsp-name* **auto-bandwidth** (MPLS Tunnel)]

To specify the maximum amount of bandwidth allocated for a specific LSP, include the **maximum-bandwidth** statement:

```
maximum-bandwidth bps;
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls **label-switched-path** *lsp-name* **auto-bandwidth** (MPLS Tunnel)]
- [edit logical-systems *logical-system-name* protocols mpls **label-switched-path** *lsp-name* **auto-bandwidth** (MPLS Tunnel)]

### Configuring the Automatic Bandwidth Adjustment Threshold

Use the **adjust-threshold** statement to specify the sensitivity of the automatic bandwidth adjustment of an LSP to changes in bandwidth utilization. You can set the threshold for when to trigger automatic bandwidth adjustments. When configured, bandwidth demand for the current interval is determined and compared to the LSP's current bandwidth allocation. If the percentage difference in bandwidth is greater than or equal to the specified **adjust-threshold** percentage, the LSP's bandwidth is adjusted to the current bandwidth demand.

For example, assume that the current bandwidth allocation is 100 megabits per second (Mbps) and that the percentage configured for the **adjust-threshold** statement is 15 percent. If the bandwidth demand increases to 110 Mbps, the bandwidth allocation is not adjusted. However, if the bandwidth demand increases to 120 Mbps (20 percent over

the current allocation) or decreases to 80 Mbps (20 percent under the current allocation), the bandwidth allocation is increased to 120 Mbps or decreased to 80 Mbps, respectively.

To configure the threshold for automatic bandwidth adjustment, include the **adjust-threshold** statement:

```
adjust-threshold percent;
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls label-switched-path *lsp-name* auto-bandwidth (MPLS Tunnel)]
- [edit logical-systems *logical-system-name* protocols mpls label-switched-path *lsp-name* auto-bandwidth (MPLS Tunnel)]

---

### Configuring a Limit on Bandwidth Overflow and Underflow Samples

The automatic bandwidth adjustment timer is a periodic timer which is triggered every adjust interval to determine whether any bandwidth adjustments are required on the LSP's active path. This interval is typically configured as a long period of time, usually hours. If, at the end of adjust interval, the change in bandwidth is above a certain adjust threshold, the LSP is resigaled with the new bandwidth.

During the automatic bandwidth adjustment interval, the router might receive a steady increase in traffic (increasing bandwidth utilization) on an LSP, potentially causing congestion or packet loss. To prevent this, you can define a second trigger to prematurely expire the automatic bandwidth adjustment timer before the end of the current adjustment interval.

Every statistics interval, the router samples the average bandwidth utilization of an LSP and if this has exceeded the current maximum average bandwidth utilization, the maximum average bandwidth utilization is updated.

During each sample period, the following conditions are also checked:

- Is the current average bandwidth utilization above the active bandwidth of the path?
- Has the difference between the average bandwidth utilization and the active bandwidth exceeded the adjust threshold (bandwidth utilization has changed significantly)?

If these conditions are true, it is considered to be one bandwidth overflow sample. Using the **adjust-threshold-overflow-limit** statement, you can define a limit on the number of bandwidth overflow samples such that when the limit is reached, the current automatic bandwidth adjustment timer is expired and a bandwidth adjustment is triggered. Once this adjustment is complete, the normal automatic bandwidth adjustment timer is reset to expire after the periodic adjustment interval.

To specify a limit on the number of bandwidth overflow samples before triggering an automatic bandwidth allocation adjustment, configure the **adjust-threshold-overflow-limit** statement:

```
adjust-threshold-overflow-limit number;
```



Similarly, if the current average bandwidth utilization is below the active bandwidth of the path by the configured adjusted threshold (meaning that bandwidth utilization has gone down significantly), the sample is considered to be an underflow sample. The adjusted (new signaling) bandwidth after an adjustment due to underflow is the maximum average bandwidth among the underflow samples. You can specify a limit on the number of bandwidth underflow samples before triggering an automatic bandwidth allocation adjustment by configuring the **adjust-threshold-underflow-limit** statement:

**adjust-threshold-underflow-limit** *number*;

These statements can be configured at the following hierarchy levels:

- [edit protocols mpls label-switched-path *lsp-name* auto-bandwidth (MPLS Tunnel)]
- [edit logical-systems *logical-system-name* protocols mpls label-switched-path *lsp-name* auto-bandwidth (MPLS Tunnel)]

You must configure the **adjust-threshold** and **minimum-bandwidth** statements whenever you configure the **adjust-threshold-underflow-limit** statement. You must configure the **adjust-threshold** and **maximum-bandwidth** statements whenever you configure the **adjust-threshold-overflow-limit** statement.

- You must configure a nonzero value for the **adjust-threshold** statement if you configure the **adjust-threshold-overflow-limit** or **adjust-threshold-underflow-limit** statement.
- Any bandwidth increase or decrease below the value configured for the **adjust-threshold** statement does not constitute an overflow or underflow condition.
- To prevent unlimited increases in LSP bandwidth (to limit overflow beyond a certain bandwidth), you must also configure the **maximum-bandwidth** statement when you configure the **adjust-threshold-overflow-limit** statement.

The following describes the other aspects of the **adjust-threshold-overflow-limit** statement:

- It only applies to bandwidth overflows. If the bandwidth is decreasing, the normal automatic bandwidth adjustment interval is used.
- It does not affect manually triggered automatic bandwidth adjustment.
- It applies to single-class DiffServ-TE LSPs.
- Because the **adjust-threshold-overflow-limit** statement can trigger a bandwidth adjustment, it cannot be enabled at the same time as the **monitor-bandwidth** statement (for information about that statement, see [“Configuring Passive Bandwidth Utilization Monitoring” on page 292](#)).
- You cannot configure automatic bandwidth adjustments to occur more often than every 300 seconds. The **adjust-threshold-overflow-limit** statement is subject to the same minimum value with regard to the minimum frequency of adjustment allowed. Overflow condition based adjustments can occur no sooner than 300 seconds from the start of the overflow condition. Therefore it is required that:

**sample interval x adjust-threshold-overflow-limit >= 300s**

These values are checked during the commit operation. An error is returned if the value is less than 300 seconds.

- If you change the value of the **adjust-threshold-overflow-limit** statement on a working router, you can expect the following behavior:
  - If you increase the current value of the **adjust-threshold-overflow-limit** statement, the old value is replaced with the new one.
  - If you decrease the current value of the **adjust-threshold-overflow-limit** statement and the current bandwidth overflow count is less than the new value, the old value is replaced with the new one.
  - If you decrease the current value of the **adjust-threshold-overflow-limit** statement and the current bandwidth overflow count is greater than the new value, the adjustment timer is immediately expired and a bandwidth adjustment is initiated.

### Configuring Passive Bandwidth Utilization Monitoring

---

Use the **monitor-bandwidth** statement to switch to a passive bandwidth utilization monitoring mode. In this mode, no automatic bandwidth adjustments are made, but the maximum average bandwidth utilization is continuously monitored and recorded.

To configure passive bandwidth utilization monitoring, include the **monitor-bandwidth** statement:

```
monitor-bandwidth;
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls **label-switched-path** *lsp-name* **auto-bandwidth** (MPLS Tunnel)]
- [edit logical-systems *logical-system-name* protocols mpls **label-switched-path** *lsp-name* **auto-bandwidth** (MPLS Tunnel)]

If you have configured an LSP with primary and secondary paths, the automatic bandwidth allocation statistics are carried over to the secondary path if the primary path fails. For example, consider a primary path whose adjustment interval is half complete and whose maximum average bandwidth usage is currently calculated as 50 Mbps. If the primary path suddenly fails, the time remaining for the next adjustment and the maximum average bandwidth usage are carried over to the secondary path.

### Requesting Automatic Bandwidth Allocation Adjustment

For MPLS LSP automatic bandwidth allocation adjustment, the minimum value for the adjustment interval is 5 minutes (300 seconds). You might find it necessary to trigger a bandwidth allocation adjustment manually, for example in the following circumstances:

- When you are testing automatic bandwidth allocation in a network lab.
- When the LSP is configured for automatic bandwidth allocation in monitor mode (the **monitor-bandwidth** statement is included in the configuration as described in [“Configuring Passive Bandwidth Utilization Monitoring” on page 292](#)), and want to initiate an immediate bandwidth adjustment.

To use the **request mpls lsp adjust-autobandwidth** command, the following must be true:

- Automatic bandwidth allocation must be enabled on the LSP.
- The criteria required to trigger a bandwidth adjustment have been met (the difference between the adjust bandwidth and the current LSP path bandwidth is greater than the threshold limit).

A manually triggered bandwidth adjustment operates only on the active LSP path. Also, if you have enabled periodic automatic bandwidth adjustment, the periodic automatic bandwidth adjustment parameters (the adjustment interval and the maximum average bandwidth) are not reset after a manual adjustment.

For example, suppose the periodic adjust interval is 10 hours and there are currently 5 hours remaining before an automatic bandwidth adjustment is triggered. If you initiate a manual adjustment with the **request mpls lsp adjust-autobandwidth** command, the adjust timer is not reset and still has 5 hours remaining.

To manually trigger a bandwidth allocation adjustment, you need to use the **request mpls lsp adjust-autobandwidth** command. You can trigger the command for all affected LSPs on the router, or you can specify a particular LSP:

```
user@host> request mpls lsp adjust-autobandwidth
```

Once you execute this command, the automatic bandwidth adjustment validation process is triggered. If all the criteria for adjustment are met, the LSP's active path bandwidth is adjusted to the adjusted bandwidth value determined during the validation process.

#### Related Documentation

- [Configuring MPLS to Gather Statistics on page 371](#)
- [Configuring Reporting of Automatic Bandwidth Allocation Statistics for LSPs on page 293](#)
- [request mpls lsp adjust-autobandwidth on page 1740](#)
- [show mpls lsp on page 1786](#)

## Configuring Reporting of Automatic Bandwidth Allocation Statistics for LSPs

Automatic bandwidth allocation allows an MPLS tunnel to automatically adjust its bandwidth allocation based on the volume of traffic flowing through the tunnel. You can configure the device to collect statistics related to automatic bandwidth allocation by completing the following steps:

1. To collect statistics related to automatic bandwidth allocation, configure the **auto-bandwidth** option for the **statistics** statement at the **[edit protocols mpls]** hierarchy level. These settings apply to all LSPs configured on the router on which you have also configured the **auto-bandwidth** statement at the **[edit protocols mpls label-switched-path label-switched-path-name]** hierarchy level.

```
statistics {
  auto-bandwidth (MPLS Statistics);
  file filename <files number> <size size> <world-readable | no-world-readable>;
  interval seconds;
  no-transit-statistics;
```

```
transit-statistics-polling;
}
```

- Specify the **filename** for the files used to store the MPLS trace operation output using the **file** option. All files are placed in the directory **/var/log**. We recommend that you place MPLS tracing output in the file **mpls-log**.
- Specify the maximum number of trace files using the **files number** option. When a trace file named **trace-file** reaches its maximum size, it is renamed **trace-file.0**, then **trace-file.1**, and so on, until the maximum number of trace files is reached. Then the oldest trace file is overwritten.
- Specify the interval for calculating the average bandwidth usage by configuring a time in seconds using the **interval** option. You can also set the adjustment interval on a specific LSP by configuring the **interval** option at the **[edit protocols mpls label-switch-path label-switched-path-name statistics]** hierarchy level.



**NOTE:** To prevent unnecessary resignaling of LSPs, it is best to configure an LSP adjustment interval that is at least three times longer than the MPLS automatic bandwidth statistics interval. For example, if you configure a value of 30 seconds for the MPLS automatic bandwidth statistics interval (interval statement at the **[edit protocols mpls statistics]** hierarchy level), you should configure a value of at least 90 seconds for the LSP adjustment interval (adjust-interval statement at the **[edit protocols mpls label-switched-path label-switched-path-name auto-bandwidth]** hierarchy level).

- To trace automatic bandwidth allocation, include the **autobw-state flag** for the MPLS **traceoptions** statement at the **[edit protocols mpls]** hierarchy level.

The following configuration enables the MPLS traceoptions for automatic bandwidth allocation. The trace records are stored in a file called **auto-band-trace** (the filename is user configurable):

```
[edit protocols mpls]
traceoptions {
  file auto-band-trace size 10k files 10 world-readable;
  flag autobw-state;
}
```

- Using the **show log** command, you can display the automatic bandwidth allocation statistics file generated when you configure the **auto-bandwidth (MPLS Statistics)** statement. The following shows sample log file output taken from an MPLS statistics file named **auto-band-stats** on a router configured with an LSP named **E-D**. The log file shows that LSP **E-D** is operating over its reserved bandwidth limit initially. Before **Oct 30 17:14:57**, the router triggered an automatic bandwidth adjustment (you might see two sessions for an LSP undergoing an automatic bandwidth adjustment). By **Oct 30 17:16:57**, the LSP has been reestablished at a higher bandwidth and is now shown using less than 100 percent of its **Reserved Bw** (reserved bandwidth).

```
user@host> show log auto-band-stats
```

```

E-D          (LSP ID 5, Tunnel ID 6741)          209 pkt          17094 Byte          1 pps          90 Bps Util
240.01% Reserved Bw          37 Bps
decr nh 0x952c224, type 4, flags 0x0, n_gw 1, nhid 0 to refcount 10ct 30 17:13:57 Total 1 sessions: 1
success, 0 fail, 0 ignored
E-D          (LSP ID 5, Tunnel ID 6741)          241 pkt          19737 Byte          1 pps          88 Bps Util
234.67% Reserved Bw          37 Bps
decr nh 0x952c224, type 4, flags 0x0, n_gw 1, nhid 0 to refcount 10ct 30 17:14:27 Total 1 sessions: 1
success, 0 fail, 0 ignored
E-D          (LSP ID 5, Tunnel ID 6741)          276 pkt          22607 Byte          1 pps          95 Bps Util
253.34% Reserved Bw          37 Bps
decr nh 0x952c224, type 4, flags 0x0, n_gw 1, nhid 0 to refcount 10ct 30 17:14:57 Total 1 sessions: 1
success, 0 fail, 0 ignored
E-D          (LSP ID 5, Tunnel ID 6741)           0 pkt              0 Byte            0 pps           0 Bps Util
0.00% Reserved Bw          37 Bps
E-D          (LSP ID 6, Tunnel ID 6741)           0 pkt              0 Byte            0 pps           0 Bps Util
0.00% Reserved Bw          101 Bps
decr nh 0x952c224, type 4, flags 0x0, n_gw 1, nhid 0 to refcount 1decr nh 0x952c308, type 4, flags 0x0,
n_gw 1, nhid 0 to refcount 10ct 30 17:15:27 Total 2 sessions: 2 success, 0 fail, 0 ignored
E-D          (LSP ID 5, Tunnel ID 6741)           0 pkt              0 Byte            0 pps           0 Bps Util
0.00% Reserved Bw          37 Bps
E-D          (LSP ID 6, Tunnel ID 6741)          33 pkt          2695 Byte          1 pps          89 Bps Util
87.69% Reserved Bw          101 Bps
decr nh 0x952c224, type 4, flags 0x0, n_gw 1, nhid 0 to refcount 1decr nh 0x952c308, type 4, flags 0x0,
n_gw 1, nhid 0 to refcount 10ct 30 17:15:57 Total 2 sessions: 2 success, 0 fail, 0 ignored
E-D          (LSP ID 5, Tunnel ID 6741)           0 pkt              0 Byte            0 pps           0 Bps Util
0.00% Reserved Bw          37 Bps
E-D          (LSP ID 6, Tunnel ID 6741)          65 pkt          5338 Byte          1 pps          88 Bps Util
86.70% Reserved Bw          101 Bps
decr nh 0x952c224, type 4, flags 0x0, n_gw 1, nhid 0 to refcount 1decr nh 0x952c308, type 4, flags 0x0,
n_gw 1, nhid 0 to refcount 10ct 30 17:16:27 Total 2 sessions: 2 success, 0 fail, 0 ignored
E-D          (LSP ID 6, Tunnel ID 6741)          97 pkt          7981 Byte          1 pps          88 Bps Util
86.70% Reserved Bw          101 Bps
decr nh 0x952c308, type 4, flags 0x0, n_gw 1, nhid 0 to refcount 10ct 30 17:16:57 Total 1 sessions: 1
success, 0 fail, 0 ignored

```

7. Issue the `show mpls lsp autobandwidth` command to display current information about automatic bandwidth allocation. The following shows sample output from the `show mpls lsp autobandwidth` command taken at about the same time as the log file shown previously:

```

user@host> show mpls lsp autobandwidth
Lspname          Last      Requested   Reserved   Highwater   AdjustTime LastAdjust
BW              BW              BW          mark        Left (sec)
E-D              300bps        812.005bps  812bps      1.56801kbps 294 sec     Wed Oct 30 17:15:26 2013

```

8. Issue the `file show` command to display the MPLS trace file. You need to specify the file location and file name (the file is located in `/var/log/`). The following shows sample trace file output is taken from an MPLS trace file named `auto-band-trace.0.gz` on a router configured with an LSP named **E-D**. The trace file shows that LSP **E-D** is operating over its reserved bandwidth limit initially. At **Oct 30 17:15:26**, the router triggers an automatic bandwidth adjustment (you might see two sessions for an LSP undergoing an automatic bandwidth adjustment). By **Oct 30 17:15:57**, the LSP has been reestablished at a higher bandwidth and is now shown using less than 100 percent of its **Reserved Bw** (reserved bandwidth).

```

user@host> file show /var/log/auto-band-trace.0.gz
Oct 30 17:13:57 trace_on: Tracing to "/var/log/E/auto-band-trace" started
Oct 30 17:13:57.466825 LSP E-D (id 5) new bytes arrived          2714 in 29
sec

```

```

Oct 30 17:14:27.466713 E-D (LSP ID 5, Tunnel ID 6741) 241
pkt 19737 Byte 1 pps 88 Bps Util 234.67% Reserved Bw
37 Bps
Oct 30 17:14:27.466962 LSP E-D (id 5, old id 5); sampled bytes 19737 >
bytes recorded 17094
Oct 30 17:14:27.467035 LSP E-D (id 5) new bytes arrived 2643 in 29
sec
Oct 30 17:14:57.466599 E-D (LSP ID 5, Tunnel ID 6741) 276
pkt 22607 Byte 1 pps 95 Bps Util 253.34% Reserved Bw
37 Bps
Oct 30 17:14:57.466758 LSP E-D (id 5, old id 5); sampled bytes 22607 >
bytes recorded 19737
Oct 30 17:14:57.466825 LSP E-D (id 5) new bytes arrived 2870 in 29
sec
Oct 30 17:15:26.265816 Adjust Autobw: LSP E-D (id 5) curr adj bw 300bps updated
with 812.005bps
Oct 30 17:15:26.266064 mpls LSP E-D Autobw change 512.005bps >= threshold 75bps
Oct 30 17:15:26.363372 Autobw Success: LSP E-D ( ) (old id 5 new id 6) update
prev active bw 300 bps with 812 bps
Oct 30 17:15:26.363686 RPD_MPLS_PATH_BANDWIDTH_CHANGE: MPLS path (lsp E-D)
bandwidth changed, path bandwidth 812 bps
Oct 30 17:15:27.364751 RPD_MPLS_LSP_BANDWIDTH_CHANGE: MPLS LSP E-D bandwidth
changed, lsp bandwidth 812 bps
Oct 30 17:15:27.466849 E-D (LSP ID 5, Tunnel ID 6741) 0
pkt 0 Byte 0 pps 0 Bps Util 0.00% Reserved Bw
37 Bps
Oct 30 17:15:27.467050 E-D (LSP ID 6, Tunnel ID 6741) 0
pkt 0 Byte 0 pps 0 Bps Util 0.00% Reserved Bw
101 Bps
Oct 30 17:15:57.466858 E-D (LSP ID 5, Tunnel ID 6741) 0
pkt 0 Byte 0 pps 0 Bps Util 0.00% Reserved Bw
37 Bps
Oct 30 17:15:57.467106 E-D (LSP ID 6, Tunnel ID 6741) 33
pkt 2695 Byte 1 pps 89 Bps Util 87.69% Reserved Bw
101 Bps
Oct 30 17:15:57.467201 LSP E-D (id 6, old id 5); LSP up after autobw adjustment
and active for 30 sec
Oct 30 17:15:57.467398 LSP E-D (id 6) psb bytes 2695 < bytes recorded
22607 total bytes 2695 in 30 sec
Oct 30 17:15:57.467461 First sample of the adjust interval after automatic bw
adjustment
Oct 30 17:15:57.467594 Update curr max avg bw 0bps of LSP E-D with new bw
716.225bps
Oct 30 17:16:27.466830 E-D (LSP ID 5, Tunnel ID 6741) 0
pkt 0 Byte 0 pps 0 Bps Util 0.00% Reserved Bw
37 Bps
Oct 30 17:16:27.467079 E-D (LSP ID 6, Tunnel ID 6741) 65
pkt 5338 Byte 1 pps 88 Bps Util 86.70% Reserved Bw
101 Bps
Oct 30 17:16:27.467171 LSP E-D (id 6, old id 6); sampled bytes 5338 >
bytes recorded 2695
Oct 30 17:16:27.467237 LSP E-D (id 6) new bytes arrived 2643 in 29
sec
Oct 30 17:16:57.466712 E-D (LSP ID 6, Tunnel ID 6741) 97
pkt 7981 Byte 1 pps 88 Bps Util 86.70% Reserved Bw
101 Bps
Oct 30 17:16:57.466870 LSP E-D (id 6, old id 6); sampled bytes 7981 >
bytes recorded 5338

```

- Related Documentation**
- [Configuring Automatic Bandwidth Allocation for LSPs on page 286](#)
  - [show mpls lsp autobandwidth on page 1804](#)

## Configuring Hot Standby of Secondary Paths for LSPs

By default, secondary paths are set up only as needed. To have the system maintain a secondary path in a hot-standby state indefinitely, include the **standby** statement:

**standby;**

You can include this statement at the following hierarchy levels:

- **[edit protocols mpls label-switched-path *lsp-name* secondary]**
- **[edit logical-systems *logical-system-name* protocols mpls label-switched-path *lsp-name* secondary]**

The hot-standby state is meaningful only on secondary paths. Maintaining a path in a hot-standby state enables swift cutover to the secondary path when downstream routers on the current active path indicate connectivity problems. Although it is possible to configure the **standby** statement at the **[edit protocols mpls label-switched-path *lsp-name* primary *path-name*]** hierarchy level, it has no effect on router behavior.

If you configure the **standby** statement at the following hierarchy levels, the hot-standby state is activated on all secondary paths configured beneath that hierarchy level:

- **[edit protocols mpls]**
- **[edit protocols mpls label-switched-path *lsp-name*]**
- **[edit logical-systems *logical-system-name* protocols mpls]**
- **[edit logical-systems *logical-system-name* protocols mpls label-switched-path *lsp-name*]**

The hot-standby state has two advantages:

- It eliminates the call-setup delay during network topology changes. Call setup can suffer from significant delays when network failures trigger large numbers of LSP reroutes at the same time.
- A cutover to the secondary path can be made before RSVP learns that an LSP is down. There can be significant delays between the time the first failure is detected by protocol machinery (which can be an interface down, a neighbor becoming unreachable, a route becoming unreachable, or a transient routing loop being detected) and the time an LSP actually fails (which requires a timeout of soft state information between adjacent RSVP routers). When topology failures occur, hot-standby secondary paths can usually achieve the smallest cutover delays with minimal disruptions to user traffic.

When the primary path is considered to be stable again, traffic is automatically switched from the standby secondary path back to the primary path. The switch is performed no faster than twice the retry-timer interval and only if the primary path exhibits stability throughout the entire switch interval.

The drawback of the hot-standby state is that more state information must be maintained by all the routers along the path, which requires overhead from each of the routers.

## Damping Advertisement of LSP State Changes

---

When an LSP changes from being up to being down, or from down to up, this transition takes effect immediately in the router software and hardware. However, when advertising LSPs into IS-IS and OSPF, you may want to damp LSP transitions, thereby not advertising the transition until a certain period of time has transpired (known as the hold time). In this case, if the LSP goes from up to down, the LSP is not advertised as being down until it has remained down for the hold-time period. Transitions from down to up are advertised into IS-IS and OSPF immediately. Note that LSP damping affects only the IS-IS and OSPF advertisements of the LSP; other routing software and hardware react immediately to LSP transitions.

To damp LSP transitions, include the **advertisement-hold-time** statement:

**advertisement-hold-time** *seconds*;

*seconds* can be a value from 0 through 65,535 seconds. The default is 5 seconds.

You can include this statement at the following hierarchy levels:

- [edit protocols mpls]
- [edit logical-systems *logical-system-name* protocols mpls]



## CHAPTER 5

# Configuring Static and Explicit-Path LSPs

- [Configuring Static LSPs on page 299](#)
- [Configuring Explicit-Path LSPs on page 306](#)

## Configuring Static LSPs

---

To configure static LSPs, configure the ingress router and each router along the path up to and including the egress router.

To configure static MPLS, perform the following tasks:

- [Configuring the Ingress Router for Static LSPs on page 299](#)
- [Configuring the Intermediate \(Transit\) and Egress Routers for Static LSPs on page 302](#)
- [Configuring a Bypass LSP for the Static LSP on page 304](#)
- [Configuring the Protection Revert Timer for Static LSPs on page 305](#)
- [Configuring Static Unicast Routes for Point-to-Multipoint LSPs on page 305](#)

## Configuring the Ingress Router for Static LSPs

The ingress router checks the IP address in the incoming packet's destination address field and, if it finds a match in the routing table, applies the label associated with that address to the packets. The label has forwarding information associated with it, including the address of the next-hop router, and the route preference and CoS values.

To configure static LSPs on the ingress router, include the **ingress** statement:

```
ingress {  
  bandwidth bps;  
  class-of-service cos-value;  
  description string;  
  install {  
    destination-prefix <active>;  
  }  
  link-protection bypass-name name;  
  metric metric;  
  next-hop (address | interface-name | address/interface-name);  
  no-install-to-address;  
  node-protection bypass-name name next-next-label label;  
  policing {  
    filter filter-name;
```

```
        no-auto-policing;
    }
    preference preference;
    push out-label;
    to address;
}
```

You can include these statements at the following hierarchy levels:

- [edit protocols mpls static-label-switched-path *static-lsp-name*]
- [edit logical-systems *logical-system-name* protocols mpls static-label-switched-path *static-lsp-name*]

When you configure a static LSP on the ingress router, the **next-hop**, **push**, and **to** statements are required; the other statements are optional.

The configuration for a static LSP on the ingress router requires you to configure the following parts:

- Criteria for analyzing an incoming packet:
  - The **install** statement creates an LSP that handles IPv4 packets. All static MPLS routes created using the **install** statement are installed in inet.3 routing table, and the creating protocol is identified as static. This process is no different from creating static IPv4 routes at the [edit routing-options static] hierarchy level.
  - In the **to** statement, you configure the IP destination address to check when incoming packets are analyzed. If the address matches, the specified outgoing label (**push out-label**) is assigned to the packet, and the packet enters an LSP. Manually assigned outgoing labels can have values from 0 through 1,048,575. Each prefix that you specify is installed as a static route in the routing table.
- The **next-hop** statement, which supplies the IP address of the next hop to the destination. You can specify this as the IP address of the next hop, the interface name (for point-to-point interfaces only), or as **address/interface-name** to specify an IP address on an operational interface. When the next hop is on a directly attached interface, the route is installed in the routing table. You cannot configure a LAN or nonbroadcast multiaccess (NBMA) interface as a next-hop interface.
- Properties to apply to the LSP (all are optional):
  - Bandwidth reserved for this LSP (**bandwidth bps**)
  - Link protection and node protection to apply to the LSP (**bypass bypass-name**, **link-protection bypass-name name**, **node-protection bypass-name next-next-label label**)
  - Metric value to apply to the LSP (**metric**)
  - Class-of-service value to apply to the LSP (**class-of-service**)
  - Preference value to apply to the LSP (**preference**)
  - Traffic policing to apply to the LSP (**policing**)

- Text description to apply to the LSP ([description](#))
- Install or no-install policy ([install](#) or [no-install-to-address](#))


To determine whether a static ingress route is installed, use the command **show route table inet.3 protocol static**. Sample output follows. The **push** keyword denotes that a label is to be added in front of an IP packet.

```
10.0.0.0      *[Static/5] 00:01:48
> to 11.1.1.1 via so-0/0/0, push 1000123
```

### Example: Configuring the Ingress Router

Configure the ingress router for a static LSP that consists of three routers (see [Figure 34 on page 301](#)).

Figure 34: Static MPLS Configuration

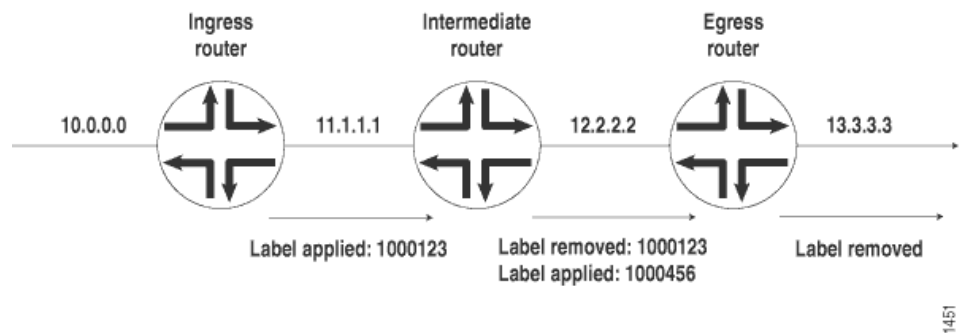

For packets addressed to 10.0.0.0, assign label 1000123 and transmit them to the next-hop router at 11.1.1.1:

```
[edit]
interfaces {
  so-0/0/0 {
    unit 0 {
      family mpls;
    }
  }
}
protocols {
  mpls {
    static-label-switched-path path1 {
      ingress {
        next-hop 11.1.1.1;
        to 10.0.0.0;
        push 1000123;
      }
    }
  }
  interface so-0/0/0.0;
}
routing-options {
  static {
    route 10.0.0.0/8 {
```

```

        static-lsp-next-hop path];
    }
}

```

To determine whether the static ingress route is installed, use the following command:

```
user@host> show route table inet.0 protocol static
```

Sample output follows. The **push 1000123** keyword identifies the route.

```

10.0.0.0/8          *[Static/5] 00:01:48
> to 11.1.1.1 via so-0/0/0.0, push 1000123

```

## Configuring the Intermediate (Transit) and Egress Routers for Static LSPs

Intermediate (transit) and egress routers perform similar functions—they modify the label that has been applied to a packet. An intermediate router can change the label. An egress router removes the label (if the packet still contains a label) and continues forwarding the packet to its destination.

To configure static LSPs on intermediate and egress routers, include the **transit** statement:

```

static-label-switched-path lsp-name {
    transit incoming-label {
        bandwidth bps;
        description string;
        link-protection bypass-name name;
        next-hop (address | interface-name | address/interface-name);
        node-protection bypass-name name next-next-label label;
        pop;
        swap out-label;
    }
}

```

You can include these statements at the following hierarchy levels:

- [edit protocols mpls static-label-switched-path *static-lsp-name*]
- [edit logical-systems *logical-system-name* protocols mpls static-label-switched-path *static-lsp-name*]

For the **transit** statement configuration, the **next-hop** and **pop** | **swap** statements are required. The remaining statements are optional.

Each statement within the **transit** statement consists of the following parts:

- Packet label (specified in the **transit** statement)
- The **next-hop** statement, which supplies the IP address of the next hop to the destination. The address is specified as the IP address of the next hop, or the interface name (for point-to-point interfaces only), or **address** and **interface-name** to specify an IP address on an operational interface. When the specified next hop is on a directly attached interface, this route is installed in the routing table. You cannot configure a LAN or NBMA interface as a next-hop interface.

- Operation to perform on the labeled packet:
  - For egress routers, you generally just remove the packet's label altogether (**pop**) and continue forwarding the packet to the next hop. However, if the previous router removed the label, the egress router examines the packet's IP header and forwards the packet toward its IP destination.
  - For intermediate (transit) routers only, exchange the label for another label (**swap out-label**). Manually assigned incoming labels can have values from 1,000,000 through 1,048,575. Manually assigned outgoing labels can have values from 0 through 1,048,575.
- Label properties to apply to the packet (all are optional):
  - Bandwidth reserved for this route (**bandwidth bps**).
  - Link-protection and node-protection to apply to the LSP (**bypass bypass-name, link-protection bypass-name name, node-protection bypass-name next-next-label label**).
  - Text description to apply to the LSP (specified in the **description** statement).

The static routes are installed in the default MPLS routing table, `mpls.0`, and the creating protocol is identified as static. To verify that a static route is properly installed, use the command **show route table mpls.0 protocol static**. Sample output follows:

```
1000123      *[Static/5] 00:00:38
> to 12.2.2.2 via so-5/0/0.0, swap 1000456
```

You can configure a revert timer for a static LSP transiting an intermediate router. After traffic has been switched to a bypass static LSP, it is typically switched back to the primary static LSP when it comes back up. There is a configurable delay in the time (called the revert timer) between when the primary static LSP comes up and when traffic is reverted back to it from the bypass static LSP. This delay is needed because when the primary LSP comes back up, it is not certain whether all of the interfaces on the downstream node of the primary path have come up yet. You can display the revert timer value for an interface using the **show mpls interface detail** command. For more information, see [“Configuring the Revert Timer for LSPs” on page 243](#).

### Example: Configuring an Intermediate Router

For packets labeled **1000123** arriving on interface **so-0/0/0**, assign the label **1000456**, and transmit them to the next-hop router at **12.2.2.2**:

```
[edit]
interfaces {
  so-0/0/0 {
    unit 0 {
      family mpls;
    }
  }
}
protocols {
  mpls {
    static-label-switched-path path1 {
```

```
        transit 1000123 {
            next-hop 12.2.2.2;
            swap 1000456;
        }
    }
    interface so-0/0/0.0;
}
}
```

To determine whether the static intermediate route is installed, use the following command:

```
user@host> show route table mpls.0 protocol static
```

Sample output follows. The **swap 1000456** keyword identifies the route.

```
1000123          *[Static/5] 00:01:48
> to 12.2.2.2 via so-0/0/0, swap 1000456
```

---

### Example: Configuring an Egress Router

For packets labeled **1000456** arriving on interface **so-0/0/0**, remove the label and transmit the packets to the next-hop router at **13.3.3.3**:

```
[edit]
interfaces {
    so-0/0/0 {
        unit 0 {
            family mpls;
        }
    }
}
protocols {
    mpls {
        static-label-switched-path path1 {
            transit 1000456 {
                next-hop 13.3.3.3;
                pop;
            }
        }
        interface so-0/0/0.0;
    }
}
```

To determine whether the static egress route is installed, use the following command:

```
user@host> show route table mpls.0 protocol static
```

Sample output follows. The **pop** keyword identifies the egress route.

```
1000456          *[Static/5] 00:01:48
> to 13.3.3.3 via so-0/0/0, pop
```

### Configuring a Bypass LSP for the Static LSP

To enable a bypass LSP for the static LSP, configure the **bypass** statement:

```
bypass bypass-name {
    bandwidth bps;
```

```

description string;
next-hop (address | interface-name | address/interface-name);
push out-label;
to address;
}

```

## Configuring the Protection Revert Timer for Static LSPs

For static LSPs configured with a bypass static LSP, it is possible to configure the protection revert timer. If a static LSP goes down and traffic is switched to the bypass LSP, the protection revert timer specifies the amount of time (in seconds) that the LSP must wait before it can revert back to the original static LSP.

The range of values you can configure for the protection revert timer is 0 through 65,535 seconds. The default value is 5 seconds.

If you configure a value of 0 seconds, the traffic on the LSP, once switched from the original static LSP to the bypass static LSP, remains on the bypass LSP permanently (until the network operator intervenes or until the bypass LSP goes down).

You can configure the protection revert timer for all LSPs on the router at the **[edit protocols mpls]** hierarchy level or for a specific LSP at the **[edit protocols mpls label-switched-path *lsp-name*]** hierarchy level.

To configure the protection revert timer for static LSPs include the **protection-revert-time** statement:

```

protection-revert-time seconds;

```

For a list of hierarchy levels at which you can include this statement, see the summary section for this statement.

## Configuring Static Unicast Routes for Point-to-Multipoint LSPs

You can configure a static unicast IP route with a point-to-multipoint LSP as the next hop. For more information about point-to-multipoint LSPs, see [“Point-to-Multipoint LSPs Overview” on page 309](#), [“Configuring Primary and Branch LSPs for Point-to-Multipoint LSPs” on page 311](#), and [“Configuring CCC Switching for Point-to-Multipoint LSPs” on page 761](#).

To configure a static unicast route for a point-to-multipoint LSP, complete the following steps:

1. On the ingress PE router, configure a static IP unicast route with the point-to-multipoint LSP name as the next hop by including the **p2mp-lsp-next-hop** statement:

```

p2mp-lsp-next-hop point-to-multipoint-lsp-next-hop;

```

You can include this statement at the following hierarchy levels:

- **[edit routing-options static route *route-name*]**
- **[edit logical-systems *logical-system-name* routing-options static route *route-name*]**

2. On the egress PE router, configure a static IP unicast route with the same destination address configured in Step 1 (the address configured at the **[edit routing-options static route]** hierarchy level) by including the **next-hop** statement:

```
next-hop address;
```

You can include this statement at the following hierarchy levels:

- **[edit routing-options static route route-name]**
- **[edit logical-systems logical-system-name routing-options static route route-name]**



**NOTE:** CCC and static routes cannot use the same point-to-multipoint LSP.

For more information on static routes, see the *Junos OS Routing Protocols Library*.

The following **show route** command output displays a unicast static route pointing to a point-to-multipoint LSP on the ingress PE router where the LSP has two branch next hops:

```
user@host> show route 5.5.5.5 detail
inet.0: 29 destinations, 30 routes (28 active, 0 holddown, 1 hidden)
5.5.5.5/32 (1 entry, 1 announced)
  *Static Preference: 5
    Next hop type: Flood
    Next hop: via so-0/3/2.0 weight 1
    Label operation: Push 100000
    Next hop: via tl-0/1/1.0 weight 1
    Label operation: Push 100064
    State: <Active Int Ext>
    Local AS: 10458
    Age: 2:41:15
    Task: RT
    Announcement bits (2): 0-KRT 3-BGP.0.0.0.0+179
    AS path: I
```

## Configuring Explicit-Path LSPs

If you disable constrained-path label-switched path (LSP) computation, as described in [“Disabling Constrained-Path LSP Computation” on page 267](#), you can configure LSPs manually or allow the LSPs to follow the IGP path.

When explicit-path LSPs are configured, the LSP is established along the path you specified. If the path is topologically not feasible, either because the network is partitioned or insufficient resources are available along some parts of the path, the LSP will fail. No alternative paths can be used. If the setup succeeds, the LSP stays on the defined path indefinitely.



To configure an explicit-path LSP, follow these steps:

1. Configure the path information in a named path, as described in [“Creating Named Paths” on page 60](#). To configure complete path information, specify every router hop between the ingress and egress routers, preferably using the **strict** attribute. To configure incomplete path information, specify only a subset of router hops, using the **loose** attribute in places where the path is incomplete.

For incomplete paths, the MPLS routers complete the path by querying the local routing table. This query is done on a hop-by-hop basis, and each router can figure out only enough information to reach the next explicit hop. It might be necessary to traverse a number of routers to reach the next (loose) explicit hop.

Configuring incomplete path information creates portions of the path that depend on the current routing table, and this portion of the path can reroute itself as the topology changes. Therefore, an explicit-path LSP that contains incomplete path information is not completely fixed. These types of LSPs have only a limited ability to repair themselves, and they tend to create loops or flaps depending on the contents of the local routing table.

2. To configure the LSP and point it to the named path, use either the **primary** or **secondary** statement, as described in [“Configuring Primary and Secondary LSPs” on page 242](#).
3. Disable constrained-path LSP computation by including the **no-cspf** statement either as part of the LSP or as part of a **primary** or **secondary** statement. For more information, see [“Disabling Constrained-Path LSP Computation” on page 267](#).
4. Configure any other LSP properties.

Using explicit-path LSPs has the following drawbacks:

- More configuration effort is required.
- Configured path information cannot take into account dynamic network bandwidth reservation, so the LSPs tend to fail when resources become depleted.
- When an explicit-path LSP fails, you might need to manually repair it.

Because of these limitations, we recommend that you use explicit-path LSPs only in controlled situations, such as to enforce an optimized LSP placement strategy resulting from computations with an offline simulation software package.



## CHAPTER 6

# Configuring Point-to-Multipoint LSPs

- [Point-to-Multipoint LSPs Overview on page 309](#)
- [Configuring Primary and Branch LSPs for Point-to-Multipoint LSPs on page 311](#)
- [Example: Configuring a Collection of Paths to Create an RSVP-Signaled Point-to-Multipoint LSP on page 313](#)
- [Configuring Inter-Domain Point-to-Multipoint LSPs on page 331](#)
- [Configuring Link Protection for Point-to-Multipoint LSPs on page 332](#)
- [Configuring Graceful Restart for Point-to-Multipoint LSPs on page 333](#)
- [Configuring a Multicast RPF Check Policy for Point-to-Multipoint LSPs on page 334](#)
- [Configuring Ingress PE Router Redundancy for Point-to-Multipoint LSPs on page 335](#)
- [Enabling Point-to-Point LSPs to Monitor Egress PE Routers on page 335](#)
- [Preserving Point-to-Multipoint LSP Functioning with Different Junos OS Releases on page 336](#)

### Point-to-Multipoint LSPs Overview


---

A point-to-multipoint MPLS LSP is an LSP with a single source and multiple destinations. By taking advantage of the MPLS packet replication capability of the network, point-to-multipoint LSPs avoid unnecessary packet replication at the ingress router. Packet replication takes place only when packets are forwarded to two or more different destinations requiring different network paths.

This process is illustrated in [Figure 35 on page 310](#). Router PE1 is configured with a point-to-multipoint LSP to Routers PE2, PE3, and PE4. When Router PE1 sends a packet on the point-to-multipoint LSP to Routers P1 and P2, Router P1 replicates the packet and forwards it to Routers PE2 and PE3. Router P2 sends the packet to Router PE4.

This feature is described in detail in the Internet drafts [draft-raggarwa-mpls-p2mp-te-02.txt](#) (expired February 2004), *Establishing Point to Multipoint MPLS TE LSPs*, [draft-ietf-mpls-rsvp-te-p2mp-02.txt](#), *Extensions to Resource Reservation Protocol-Traffic Engineering (RSVP-TE) for Point-to-Multipoint TE Label-Switched Paths (LSPs)*, and RFC 6388, *Label Distribution Protocol Extensions for Point-to-Multipoint and Multipoint-to-Multipoint Label Switched Paths* (only point-to-multipoint LSPs are supported).

Figure 35: Point-to-Multipoint LSPs

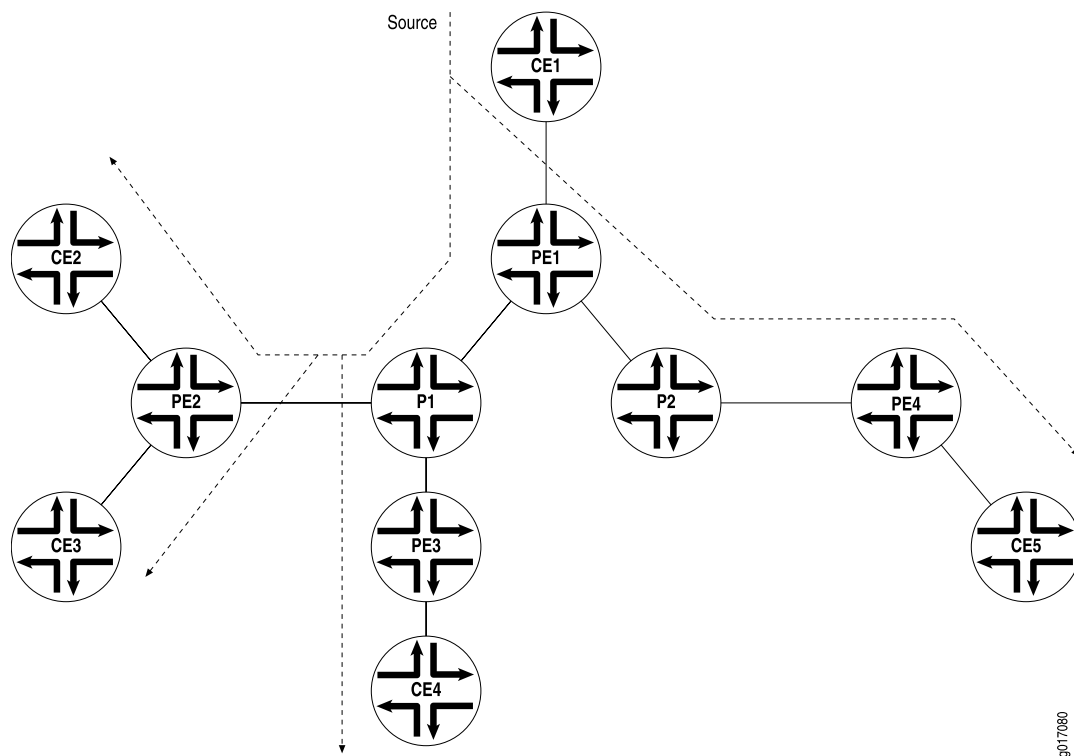

The following are some of the properties of point-to-multipoint LSPs:

- A point-to-multipoint LSP enables you to use MPLS for point-to-multipoint data distribution. This functionality is similar to that provided by IP multicast.
- You can add and remove branch LSPs from a main point-to-multipoint LSP without disrupting traffic. The unaffected parts of the point-to-multipoint LSP continue to function normally.
- You can configure a node to be both a transit and an egress router for different branch LSPs of the same point-to-multipoint LSP.
- You can enable link protection on a point-to-multipoint LSP. Link protection can provide a bypass LSP for each of the branch LSPs that make up the point-to-multipoint LSP. If any of the primary paths fail, traffic can be quickly switched to the bypass.
- You can configure branch LSPs either statically, dynamically, or as a combination of static and dynamic LSPs.
- You can enable graceful Routing Engine switchover (GRES) and graceful restart for point-to-multipoint LSPs at ingress and egress routers. The point-to-multipoint LSPs must be configured using either static routes or circuit cross-connect (CCC). GRES and graceful restart allow the traffic to be forwarded at the Packet Forwarding Engine based on the old state while the control plane recovers. Feature parity for GRES and graceful restart for MPLS point-to-multipoint LSPs on the Junos Trio chipset is supported in Junos OS Releases 11.1R2, 11.2R2, and 11.4.

- Related Documentation**
- *Junos OS High Availability Library for Routing Devices*
  - *Example: Configuring an RSVP-Signaled Point-to-Multipoint LSP on Logical Systems*
  - *Example: NG-VPLS Using Point-to-Multipoint LSPs*
  - *Example: Configuring Point-to-Multipoint LDPLSPs as the Data Plane for Intra-AS MBGP MVPNs*

## Configuring Primary and Branch LSPs for Point-to-Multipoint LSPs

A point-to-multipoint MPLS label-switched path (LSP) is an RSVP LSP with multiple destinations. By taking advantage of the MPLS packet replication capability of the network, point-to-multipoint LSPs avoid unnecessary packet replication at the ingress router. For more information about point-to-multipoint LSPs, see [“Point-to-Multipoint LSPs Overview” on page 309](#).

To configure a point-to-multipoint LSP, you need to configure the primary LSP from the ingress router and the branch LSPs that carry traffic to the egress routers, as described in the following sections:

- [Configuring the Primary Point-to-Multipoint LSP on page 311](#)
- [Configuring a Branch LSP for Point-to-Multipoint LSPs on page 311](#)

### Configuring the Primary Point-to-Multipoint LSP

A point-to-multipoint LSP must have a configured primary point-to-multipoint LSP to carry traffic from the ingress router. The configuration of the primary point-to-multipoint LSP is similar to a signaled LSP. See [“Configuring the Ingress Router for MPLS-Signaled LSPs” on page 60](#) for more information. In addition to the conventional LSP configuration, you need to specify a path name for the primary point-to-multipoint LSP by including the **p2mp** statement:

```
p2mp p2mp-lsp-name;
```

You can include this statement at the following hierarchy levels:

- **[edit protocols mpls label-switched-path lsp-name]**
- **[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name]**

You can enable the optimization timer for point-to-multipoint LSPs. See [“Optimizing Signaled LSPs” on page 280](#) for more information.

### Configuring a Branch LSP for Point-to-Multipoint LSPs

The primary point-to-multipoint LSP sends traffic to two or more branch LSPs carrying traffic to each of the egress provider edge (PE) routers. In the configuration for each of these branch LSPs, the point-to-multipoint LSP path name you specify must be identical to the path name configured for the primary point-to-multipoint LSP. See [“Configuring the Primary Point-to-Multipoint LSP” on page 311](#) for more information.

To associate a branch LSP with the primary point-to-multipoint LSP, specify the point-to-multipoint LSP name by including the **p2mp** statement:

```
p2mp p2mp-lsp-name;
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls **label-switched-path** *lsp-name*]
- [edit logical-systems *logical-system-name* protocols mpls **label-switched-path** *lsp-name*]



**NOTE:** Any change in any of the branch LSPs of a point-to-multipoint LSP, either due to a user action or an automatic adjustment made by the router, causes the primary and branch LSPs to be resigaled. The new point-to-multipoint LSP is signaled first before the old path is taken down.

The following sections describe how you can configure the branch LSP as a dynamically signaled path using Constrained Shortest Path First (CSPF), as a static path, or as a combination of dynamic and static paths:

- [Configuring the Branch LSP as a Dynamic Path on page 312](#)
- [Configuring the Branch LSP as a Static Path on page 312](#)

---

### Configuring the Branch LSP as a Dynamic Path

By default, the branch LSP for a point-to-multipoint LSP is signaled dynamically using CSPF and requires no configuration.

When a point-to-multipoint LSP is changed, either by the addition or deletion of new destinations or by the recalculation of the path to existing destinations, certain nodes in the tree might receive data from more than one incoming interface. This can happen under the following conditions:

- Some of the branch LSPs to destinations are statically configured and might intersect with statically or dynamically calculated paths to other destinations.
- When a dynamically calculated path for a branch LSP results in a change of incoming interface for one of the nodes in the network, the older path is not immediately torn down after the new one has been signaled. This ensures that any data in transit relying on the older path can reach its destination. However, network traffic can potentially use either path to reach the destination.
- A faulty router at the ingress calculates the paths to two different branch destinations such that a different incoming interface is chosen for these branch LSPs on a router node common to these branch LSPs.

---

### Configuring the Branch LSP as a Static Path

You can configure the branch LSP for a point-to-multipoint LSP as a static path. See [“Configuring Static LSPs” on page 299](#) for more information.

## Example: Configuring a Collection of Paths to Create an RSVP-Signaled Point-to-Multipoint LSP

---

This example shows how to configure a collection of paths to create an RSVP-signaled point-to-multipoint label-switched path (LSP).

- [Requirements on page 313](#)
- [Overview on page 313](#)
- [Configuration on page 314](#)
- [Verification on page 330](#)

### Requirements

In this example, no special configuration beyond device initialization is required.

### Overview

In this example, multiple routing devices serve as the transit, branch, and leaf nodes of a single point-to-multipoint LSP. On the provider edge (PE), Device PE1 is the ingress node. The branches go from PE1 to PE2, PE1 to PE3, and PE1 to PE4. Static unicast routes on the ingress node (PE1) point to the egress nodes.

This example also demonstrates static routes with a next hop that is a point-to-multipoint LSP, using the `p2mp-lsp-next-hop` statement. This is useful when implementing filter-based forwarding.




**NOTE:** Another option is to use the `lsp-next-hop` statement to configure a regular point-to-point LSP to be the next hop. Though not shown in this example, you can optionally assign an independent preference and metric to the next hop.

---

### Topology Diagram

Figure 36 on page 314 shows the topology used in this example.

Figure 36: RSVP-Signaled Point-to-Multipoint LSP

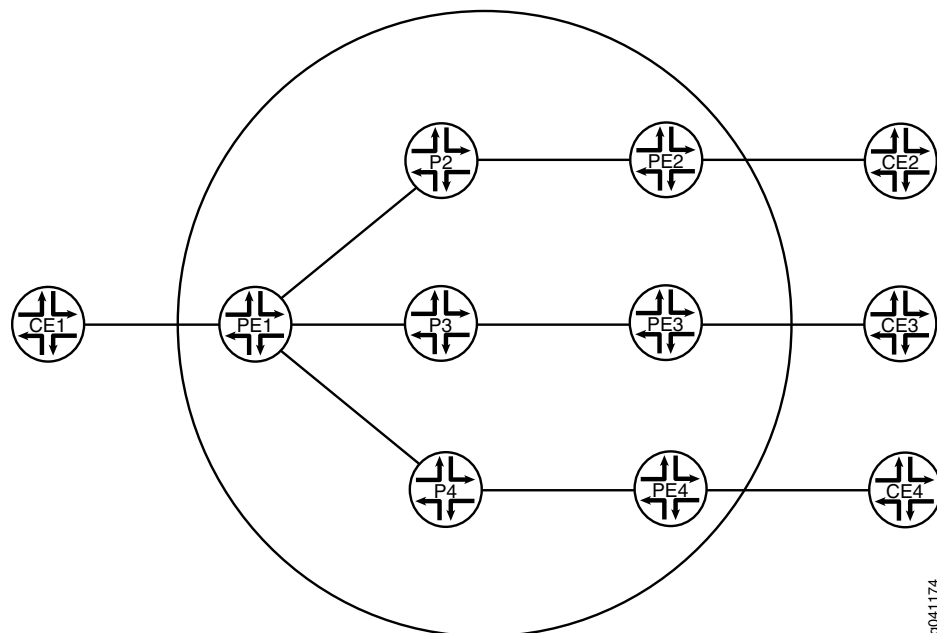

g041174

## Configuration

### CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

#### Device PE1

```
set interfaces ge-2/0/2 unit 0 description PE1-to-CE1
set interfaces ge-2/0/2 unit 0 family inet address 10.0.244.10/30
set interfaces fe-2/0/10 unit 1 description PE1-to-P2
set interfaces fe-2/0/10 unit 1 family inet address 2.2.2.1/24
set interfaces fe-2/0/10 unit 1 family mpls
set interfaces fe-2/0/9 unit 8 description PE1-to-P3
set interfaces fe-2/0/9 unit 8 family inet address 6.6.6.1/24
set interfaces fe-2/0/9 unit 8 family mpls
set interfaces fe-2/0/8 unit 9 description PE1-to-P4
set interfaces fe-2/0/8 unit 9 family inet address 3.3.3.1/24
set interfaces fe-2/0/8 unit 9 family mpls
set interfaces lo0 unit 1 family inet address 100.10.10.10/32
set protocols rsvp interface fe-2/0/10.1
set protocols rsvp interface fe-2/0/9.8
set protocols rsvp interface fe-2/0/8.9
set protocols rsvp interface lo0.1
set protocols mpls traffic-engineering bgp-igp
set protocols mpls label-switched-path PE1-PE2 to 100.50.50.50
set protocols mpls label-switched-path PE1-PE2 link-protection
set protocols mpls label-switched-path PE1-PE2 p2mp p2mp1
set protocols mpls label-switched-path PE1-PE3 to 100.70.70.70
set protocols mpls label-switched-path PE1-PE3 link-protection
set protocols mpls label-switched-path PE1-PE3 p2mp p2mp1
set protocols mpls label-switched-path PE1-PE4 to 100.40.40.40
set protocols mpls label-switched-path PE1-PE4 link-protection
```



```

set protocols mpls label-switched-path PE1-PE4 p2mp p2mp1
set protocols mpls interface fe-2/0/10.1
set protocols mpls interface fe-2/0/9.8
set protocols mpls interface fe-2/0/8.9
set protocols mpls interface lo0.1
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-2/0/2.0
set protocols ospf area 0.0.0.0 interface fe-2/0/10.1
set protocols ospf area 0.0.0.0 interface fe-2/0/9.8
set protocols ospf area 0.0.0.0 interface fe-2/0/8.9
set protocols ospf area 0.0.0.0 interface lo0.1
set routing-options static route 5.5.5.0/24 p2mp-lsp-next-hop p2mp1
set routing-options static route 7.7.7.0/24 p2mp-lsp-next-hop p2mp1
set routing-options static route 4.4.4.0/24 p2mp-lsp-next-hop p2mp1
set routing-options router-id 100.10.10.10

```

|            |                                                                                                                                                                                                                                                                                                                                                 |
|------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Device CE1 | <pre> set interfaces ge-1/3/2 unit 0 family inet address 10.0.244.9/30 set interfaces ge-1/3/2 unit 0 description CE1-to-PE1 set routing-options static route 10.0.104.8/30 next-hop 10.0.244.10 set routing-options static route 10.0.134.8/30 next-hop 10.0.244.10 set routing-options static route 10.0.224.8/30 next-hop 10.0.244.10 </pre> |
| Device CE2 | <pre> set interfaces ge-1/3/3 unit 0 family inet address 10.0.224.9/30 set interfaces ge-1/3/3 unit 0 description CE2-to-PE2 set routing-options static route 10.0.244.8/30 next-hop 10.0.224.10 </pre>                                                                                                                                         |
| Device CE3 | <pre> set interfaces ge-2/0/1 unit 0 family inet address 10.0.134.9/30 set interfaces ge-2/0/1 unit 0 description CE3-to-PE3 set routing-options static route 10.0.244.8/30 next-hop 10.0.134.10 </pre>                                                                                                                                         |
| Device CE4 | <pre> set interfaces ge-3/1/3 unit 0 family inet address 10.0.104.10/30 set interfaces ge-3/1/3 unit 0 description CE4-to-PE4 set routing-options static route 10.0.244.8/30 next-hop 10.0.104.9 </pre>                                                                                                                                         |

### Configuring the Ingress Label-Switched Router (LSR) (Device PE1)

#### Step-by-Step Procedure

To configure Device PE1:

1. Configure the interfaces, interface encapsulation, and protocol families.

```

[edit interfaces]
user@PE1# set ge-2/0/2 unit 0 description PE1-to-CE1
user@PE1# set ge-2/0/2 unit 0 family inet address 10.0.244.10/30
user@PE1# set fe-2/0/10 unit 1 description PE1-to-P2
user@PE1# set fe-2/0/10 unit 1 family inet address 2.2.2.1/24
user@PE1# set fe-2/0/10 unit 1 family mpls
user@PE1# set fe-2/0/9 unit 8 description PE1-to-P3
user@PE1# set fe-2/0/9 unit 8 family inet address 6.6.6.1/24
user@PE1# set fe-2/0/9 unit 8 family mpls
user@PE1# set fe-2/0/8 unit 9 description PE1-to-P4
user@PE1# set fe-2/0/8 unit 9 family inet address 3.3.3.1/24
user@PE1# set fe-2/0/8 unit 9 family mpls
user@PE1# set lo0 unit 1 family inet address 100.10.10.10/32

```

2. Enable RSVP, MPLS, and OSPF on the interfaces.

```
[edit protocols]
user@PE1# set rsvp interface fe-2/0/10.1
user@PE1# set rsvp interface fe-2/0/9.8
user@PE1# set rsvp interface fe-2/0/8.9
user@PE1# set rsvp interface lo0.1
user@PE1# set mpls interface fe-2/0/10.1
user@PE1# set mpls interface fe-2/0/9.8
user@PE1# set mpls interface fe-2/0/8.9
user@PE1# set mpls interface lo0.1
user@PE1# set ospf area 0.0.0.0 interface ge-2/0/2.0
user@PE1# set ospf area 0.0.0.0 interface fe-2/0/10.1
user@PE1# set ospf area 0.0.0.0 interface fe-2/0/9.8
user@PE1# set ospf area 0.0.0.0 interface fe-2/0/8.9
user@PE1# set ospf area 0.0.0.0 interface lo0.1
```

3. Configure the MPLS point-to-multipoint LSPs.

```
[edit protocols]
user@PE1# set mpls label-switched-path PE1-PE2 to 100.50.50.50
user@PE1# set mpls label-switched-path PE1-PE2 p2mp p2mp1
user@PE1# set mpls label-switched-path PE1-PE3 to 100.70.70.70
user@PE1# set mpls label-switched-path PE1-PE3 p2mp p2mp1
user@PE1# set mpls label-switched-path PE1-PE4 to 100.40.40.40
user@PE1# set mpls label-switched-path PE1-PE4 p2mp p2mp1
```

4. (Optional) Enable link protection on the LSPs.

Link protection helps to ensure that traffic sent over a specific interface to a neighboring router can continue to reach the router if that interface fails.

```
[edit protocols]
user@PE1# set mpls label-switched-path PE1-PE2 link-protection
user@PE1# set mpls label-switched-path PE1-PE3 link-protection
user@PE1# set mpls label-switched-path PE1-PE4 link-protection
```

5. Enable MPLS to perform traffic engineering for OSPF.

```
[edit protocols]
user@PE1# set mpls traffic-engineering bgp-igp
```

This causes the ingress routes to be installed in the inet.0 routing table. By default, MPLS performs traffic engineering for BGP only. You need to enable MPLS traffic engineering on the ingress LSR only.

6. Enable traffic engineering for OSPF.

```
[edit protocols]
user@PE1# set ospf traffic-engineering
```

This causes the shortest-path first (SPF) algorithm to take into account the LSPs configured under MPLS.

7. Configure the router ID.

```
[edit routing-options]
user@PE1# set router-id 100.10.10.10
```

8. Configure static IP unicast routes with the point-to-multipoint LSP name as the next hop for each route.

```
[edit routing-options]
user@PE1# set static route 5.5.5.0/24 p2mp-lsp-next-hop p2mp1
user@PE1# set static route 7.7.7.0/24 p2mp-lsp-next-hop p2mp1
user@PE1# set static route 4.4.4.0/24 p2mp-lsp-next-hop p2mp1
```

9. If you are done configuring the device, commit the configuration.

```
[edit]
user@PE1# commit
```

### Configuring the Transit and Egress LSRs (Devices P2, P3, P4, PE2, PE3, and PE4)

#### Step-by-Step Procedure

To configure the transit and egress LSRs:

1. Configure the interfaces, interface encapsulation, and protocol families.

```
[edit]
user@P2# set interfaces fe-2/0/10 unit 2 description P2-to-PE1
user@P2# set interfaces fe-2/0/10 unit 2 family inet address 2.2.2.2/24
user@P2# set interfaces fe-2/0/10 unit 2 family mpls
user@P2# set interfaces fe-2/0/9 unit 10 description P2-to-PE2
user@P2# set interfaces fe-2/0/9 unit 10 family inet address 5.5.5.1/24
user@P2# set interfaces fe-2/0/9 unit 10 family mpls
user@P2# set interfaces lo0 unit 2 family inet address 100.20.20.20/32

user@PE2# set interfaces ge-2/0/3 unit 0 description PE2-to-CE2
user@PE2# set interfaces ge-2/0/3 unit 0 family inet address 10.0.224.10/30
user@PE2# set interfaces fe-2/0/10 unit 5 description PE2-to-P2
user@PE2# set interfaces fe-2/0/10 unit 5 family inet address 5.5.5.2/24
user@PE2# set interfaces fe-2/0/10 unit 5 family mpls
user@PE2# set interfaces lo0 unit 5 family inet address 100.50.50.50/32

user@P3# set interfaces fe-2/0/10 unit 6 description P3-to-PE1
user@P3# set interfaces fe-2/0/10 unit 6 family inet address 6.6.6.2/24
user@P3# set interfaces fe-2/0/10 unit 6 family mpls
user@P3# set interfaces fe-2/0/9 unit 11 description P3-to-PE3
user@P3# set interfaces fe-2/0/9 unit 11 family inet address 7.7.7.1/24
user@P3# set interfaces fe-2/0/9 unit 11 family mpls
user@P3# set interfaces lo0 unit 6 family inet address 100.60.60.60/32

user@PE3# set interfaces ge-2/0/1 unit 0 description PE3-to-CE3
user@PE3# set interfaces ge-2/0/1 unit 0 family inet address 10.0.134.10/30
user@PE3# set interfaces fe-2/0/10 unit 7 description PE3-to-P3
user@PE3# set interfaces fe-2/0/10 unit 7 family inet address 7.7.7.2/24
user@PE3# set interfaces fe-2/0/10 unit 7 family mpls
user@PE3# set interfaces lo0 unit 7 family inet address 100.70.70.70/32

user@P4# set interfaces fe-2/0/10 unit 3 description P4-to-PE1
user@P4# set interfaces fe-2/0/10 unit 3 family inet address 3.3.3.2/24
user@P4# set interfaces fe-2/0/10 unit 3 family mpls
user@P4# set interfaces fe-2/0/9 unit 12 description P4-to-PE4
user@P4# set interfaces fe-2/0/9 unit 12 family inet address 4.4.4.1/24
```

```
user@P4# set interfaces fe-2/0/9 unit 12 family mpls
user@P4# set interfaces lo0 unit 3 family inet address 100.30.30.30/32
```

```
user@PE4# set interfaces ge-2/0/0 unit 0 description PE4-to-CE4
user@PE4# set interfaces ge-2/0/0 unit 0 family inet address 10.0.104.9/30
user@PE4# set interfaces fe-2/0/10 unit 4 description PE4-to-P4
user@PE4# set interfaces fe-2/0/10 unit 4 family inet address 4.4.4.2/24
user@PE4# set interfaces fe-2/0/10 unit 4 family mpls
user@PE4# set interfaces lo0 unit 4 family inet address 100.40.40.40/32
```

2. Enable RSVP, MPLS, and OSPF on the interfaces.

```
[edit]
user@P2# set protocols rsvp interface fe-2/0/10.2
user@P2# set protocols rsvp interface fe-2/0/9.10
user@P2# set protocols rsvp interface lo0.2
user@P2# set protocols mpls interface fe-2/0/10.2
user@P2# set protocols mpls interface fe-2/0/9.10
user@P2# set protocols mpls interface lo0.2
user@P2# set protocols ospf area 0.0.0.0 interface fe-2/0/10.2
user@P2# set protocols ospf area 0.0.0.0 interface fe-2/0/9.10
user@P2# set protocols ospf area 0.0.0.0 interface lo0.2

user@PE2# set protocols rsvp interface fe-2/0/10.5
user@PE2# set protocols rsvp interface lo0.5
user@PE2# set protocols mpls interface fe-2/0/10.5
user@PE2# set protocols mpls interface lo0.5
user@PE2# set protocols ospf area 0.0.0.0 interface ge-2/0/3.0
user@PE2# set protocols ospf area 0.0.0.0 interface fe-2/0/10.5
user@PE2# set protocols ospf area 0.0.0.0 interface lo0.5

user@P3# set protocols rsvp interface fe-2/0/10.6
user@P3# set protocols rsvp interface fe-2/0/9.11
user@P3# set protocols rsvp interface lo0.6
user@P3# set protocols mpls interface fe-2/0/10.6
user@P3# set protocols mpls interface fe-2/0/9.11
user@P3# set protocols mpls interface lo0.6
user@P3# set protocols ospf area 0.0.0.0 interface fe-2/0/10.6
user@P3# set protocols ospf area 0.0.0.0 interface fe-2/0/9.11
user@P3# set protocols ospf area 0.0.0.0 interface lo0.6

user@PE3# set protocols rsvp interface fe-2/0/10.7
user@PE3# set protocols rsvp interface lo0.7
user@PE3# set protocols mpls interface fe-2/0/10.7
user@PE3# set protocols mpls interface lo0.7
user@PE3# set protocols ospf area 0.0.0.0 interface ge-2/0/1.0
user@PE3# set protocols ospf area 0.0.0.0 interface fe-2/0/10.7
user@PE3# set protocols ospf area 0.0.0.0 interface lo0.7

user@P4# set protocols rsvp interface fe-2/0/10.3
user@P4# set protocols rsvp interface fe-2/0/9.12
user@P4# set protocols rsvp interface lo0.3
user@P4# set protocols mpls interface fe-2/0/10.3
user@P4# set protocols mpls interface fe-2/0/9.12
```

```

user@P4# set protocols mpls interface lo0.3
user@P4# set protocols ospf area 0.0.0.0 interface fe-2/0/10.3
user@P4# set protocols ospf area 0.0.0.0 interface fe-2/0/9.12
user@P4# set protocols ospf area 0.0.0.0 interface lo0.3

```

```

user@PE4# set protocols rsvp interface fe-2/0/10.4
user@PE4# set protocols rsvp interface lo0.4
user@PE4# set protocols mpls interface fe-2/0/10.4
user@PE4# set protocols mpls interface lo0.4
user@PE4# set protocols ospf area 0.0.0.0 interface ge-2/0/0.0
user@PE4# set protocols ospf area 0.0.0.0 interface fe-2/0/10.4
user@PE4# set protocols ospf area 0.0.0.0 interface lo0.4

```

3. Enable traffic engineering for OSPF.

```

[edit]
user@P2# set protocols ospf traffic-engineering

```

```

user@P3# set protocols ospf traffic-engineering

```

```

user@P4# set protocols ospf traffic-engineering

```

```

user@PE2# set protocols ospf traffic-engineering

```

```

user@PE3# set protocols ospf traffic-engineering

```

```

user@PE4# set protocols ospf traffic-engineering

```

This causes the shortest-path first (SPF) algorithm to take into account the LSPs configured under MPLS.

4. Configure the router IDs.

```

[edit]
user@P2# set routing-options router-id 100.20.20.20

```

```

user@P3# set routing-options router-id 100.60.60.60

```

```

user@P4# set routing-options router-id 100.30.30.30

```

```

user@PE2# set routing-options router-id 100.50.50.50

```

```

user@PE3# set routing-options router-id 100.70.70.70

```

```

user@PE4# set routing-options router-id 100.40.40.40

```

5. If you are done configuring the devices, commit the configuration.

```

[edit]
user@host# commit

```

**Results** From configuration mode, confirm your configuration by entering the **show interfaces**, **show protocols**, and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
Device PE1 user@PE1# show interfaces
ge-2/0/2 {
  unit 0 {
    description R1-to-CE1;
    family inet {
      address 10.0.244.10/30;
    }
  }
}
fe-2/0/10 {
  unit 1 {
    description PE1-to-P2;
    family inet {
      address 2.2.2.1/24;
    }
    family mpls;
  }
}
fe-2/0/9 {
  unit 8 {
    description PE1-to-P2;
    family inet {
      address 6.6.6.1/24;
    }
    family mpls;
  }
}
fe-2/0/8 {
  unit 9 {
    description PE1-to-P3;
    family inet {
      address 3.3.3.1/24;
    }
    family mpls;
  }
}
lo0 {
  unit 1 {
    family inet {
      address 100.10.10.10/32;
    }
  }
}

user@PE1# show protocols
rsvp {
  interface fe-2/0/10.1;
  interface fe-2/0/9.8;
  interface fe-2/0/8.9;
  interface lo0.1;
}
```

```

mpls {
    traffic-engineering bgp-igp;
    label-switched-path PE1-to-PE2 {
        to 100.50.50.50;
        link-protection;
        p2mp p2mp1;
    }
    label-switched-path PE1-to-PE3 {
        to 100.70.70.70;
        link-protection;
        p2mp p2mp1;
    }
    label-switched-path PE1-to-PE4 {
        to 100.40.40.40;
        link-protection;
        p2mp p2mp1;
    }
    interface fe-2/0/10.1;
    interface fe-2/0/9.8;
    interface fe-2/0/8.9;
    interface lo0.1;
}
ospf {
    traffic-engineering;
    area 0.0.0.0 {
        interface ge-2/0/2.0;
        interface fe-2/0/10.1;
        interface fe-2/0/9.8;
        interface fe-2/0/8.9;
        interface lo0.1;
    }
}

user@PE1# show routing-options
static {
    route 5.5.5.0/24 {
        p2mp-lsp-next-hop p2mp1;
    }
    route 7.7.7.0/24 {
        p2mp-lsp-next-hop p2mp1;
    }
    route 4.4.4.0/24 {
        p2mp-lsp-next-hop p2mp1;
    }
}
router-id 100.10.10.10;

Device P2 user@P2# show interfaces
fe-2/0/10 {
    unit 2 {
        description P2-to-PE1;
        family inet {
            address 2.2.2.2/24;
        }
        family mpls;
    }
}
fe-2/0/9 {

```

```
    unit 10 {
      description P2-to-PE2;
      family inet {
        address 5.5.5.1/24;
      }
      family mpls;
    }
  }
  lo0 {
    unit 2 {
      family inet {
        address 100.20.20.20/32;
      }
    }
  }
}
```

```
user@P2# show protocols
```

```
rsvp {
  interface fe-2/0/10.2;
  interface fe-2/0/9.10;
  interface lo0.2;
}
mpls {
  interface fe-2/0/10.2;
  interface fe-2/0/9.10;
  interface lo0.2;
}
ospf {
  traffic-engineering;
  area 0.0.0.0 {
    interface fe-2/0/10.2;
    interface fe-2/0/9.10;
    interface lo0.2;
  }
}
```

```
user@P2# show routing-options
router-id 100.20.20.20;
```

**Device P3**

```
user@P3# show interfaces
```

```
fe-2/0/10 {
  unit 6 {
    description P3-to-PE1;
    family inet {
      address 6.6.6.2/24;
    }
    family mpls;
  }
}
fe-2/0/9 {
  unit 11 {
    description P3-to-PE3;
    family inet {
      address 7.7.7.1/24;
    }
    family mpls;
  }
}
```



```

    }
  }
  lo0 {
    unit 6 {
      family inet {
        address 100.60.60.60/32;
      }
    }
  }
}

```

user@P3# show protocols

```

rsvp {
  interface fe-2/0/10.6;
  interface fe-2/0/9.11;
  interface lo0.6;
}
mpls {
  interface fe-2/0/10.6;
  interface fe-2/0/9.11;
  interface lo0.6;
}
ospf {
  traffic-engineering;
  area 0.0.0.0 {
    interface fe-2/0/10.6;
    interface fe-2/0/9.11;
    interface lo0.6;
  }
}

```

user@P2# show routing-options  
router-id 100.60.60.60;

#### Device P4

user@P4# show interfaces

```

fe-2/0/10 {
  unit 3 {
    description P4-to-PE1;
    family inet {
      address 3.3.3.2/24;
    }
    family mpls;
  }
}
fe-2/0/9 {
  unit 12 {
    description P4-to-PE4;
    family inet {
      address 4.4.4.1/24;
    }
    family mpls;
  }
}
lo0 {
  unit 3 {
    family inet {
      address 100.30.30.30/32;
    }
  }
}

```

```
    }  
  }  
}  
  
user@P4# show protocols  
rsvp {  
  interface fe-2/0/10.3;  
  interface fe-2/0/9.12;  
  interface lo0.3;  
}  
mpls {  
  interface fe-2/0/10.3;  
  interface fe-2/0/9.12;  
  interface lo0.3;  
}  
ospf {  
  traffic-engineering;  
  area 0.0.0.0 {  
    interface fe-2/0/10.3;  
    interface fe-2/0/9.12;  
    interface lo0.3;  
  }  
}
```

```
user@P3# show routing-options  
router-id 100.30.30.30;
```

**Device PE2**

```
user@PE2# show interfaces  
ge-2/0/3 {  
  unit 0 {  
    description PE2-to-CE2;  
    family inet {  
      address 10.0.224.10/30;  
    }  
  }  
}  
fe-2/0/10 {  
  unit 5 {  
    description PE2-to-P2;  
    family inet {  
      address 5.5.5.2/24;  
    }  
    family mpls;  
  }  
}  
lo0 {  
  unit 5 {  
    family inet {  
      address 100.50.50.50/32;  
    }  
  }  
}  
  
user@PE2# show protocols  
rsvp {
```

```

        interface fe-2/0/10.5;
        interface lo0.5;
    }
    mpls {
        interface fe-2/0/10.5;
        interface lo0.5;
    }
    ospf {
        traffic-engineering;
        area 0.0.0.0 {
            interface ge-2/0/3.0;
            interface fe-2/0/10.5;
            interface lo0.5;
        }
    }
}

user@PE2# show routing-options
router-id 100.50.50.50;

Device PE3 user@PE3# show interfaces
ge-2/0/1 {
    unit 0 {
        description PE3-to-CE3;
        family inet {
            address 10.0.134.10/30;
        }
    }
}
fe-2/0/10 {
    unit 7 {
        description PE3-to-P3;
        family inet {
            address 7.7.7.2/24;
        }
        family mpls;
    }
}
lo0 {
    unit 7 {
        family inet {
            address 100.70.70.70/32;
        }
    }
}
}

user@PE3# show protocols
rsvp {
    interface fe-2/0/10.7;
    interface lo0.7;
}
mpls {
    interface fe-2/0/10.7;
    interface lo0.7;
}
ospf {

```

```
        traffic-engineering;
        area 0.0.0.0 {
            interface ge-2/0/1.0;
            interface fe-2/0/10.7;
            interface lo0.7;
        }
    }

user@PE3# show routing-options
router-id 100.70.70.70;

Device PE4 user@PE4# show interfaces
ge-2/0/0 {
    unit 0 {
        description PE4-to-CE4;
        family inet {
            address 10.0.104.9/30;
        }
    }
}
fe-2/0/10 {
    unit 4 {
        description PE4-to-P4;
        family inet {
            address 4.4.4.2/24;
        }
        family mpls;
    }
}
lo0 {
    unit 4 {
        family inet {
            address 100.40.40.40/32;
        }
    }
}

user@PE4# show protocols
rsvp {
    interface fe-2/0/10.4;
    interface lo0.4;
}
mpls {
    interface fe-2/0/10.4;
    interface lo0.4;
}
ospf {
    traffic-engineering;
    area 0.0.0.0 {
        interface ge-2/0/0.0;
        interface fe-2/0/10.4;
        interface lo0.4;
    }
}

user@PE4# show routing-options
```

```
router-id 100.40.40.40;
```

### Configuring Device CE1

#### Step-by-Step Procedure

To configure Device CE1:

1. Configure an interface to Device PE1.

```
[edit interfaces]
user@CE1# set ge-1/3/2 unit 0 family inet address 10.0.244.9/30
user@CE1# set ge-1/3/2 unit 0 description CE1-to-PE1
```

2. Configure static routes from Device CE1 to the three other customer networks, with Device PE1 as the next hop.

```
[edit routing-options]
user@CE1# set static route 10.0.104.8/30 next-hop 10.0.244.10
user@CE1# set static route 10.0.134.8/30 next-hop 10.0.244.10
user@CE1# set static route 10.0.224.8/30 next-hop 10.0.244.10
```

3. If you are done configuring the device, commit the configuration.

```
[edit]
user@CE1# commit
```

**Results** From configuration mode, confirm your configuration by entering the **show interfaces** and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@CE1# show interfaces
ge-1/3/2 {
  unit 0 {
    family inet {
      address 10.0.244.9/30;
      description CE1-to-PE1;
    }
  }
}

user@CE1# show routing-options
static {
  route 10.0.104.8/30 next-hop 10.0.244.10;
  route 10.0.134.8/30 next-hop 10.0.244.10;
  route 10.0.224.8/30 next-hop 10.0.244.10;
}
```

### Configuring Device CE2

#### Step-by-Step Procedure

To configure Device CE2:

1. Configure an interface to Device PE2.

```
[edit interfaces]
user@CE2# set ge-1/3/3 unit 0 family inet address 10.0.224.9/30
user@CE2# set ge-1/3/3 unit 0 description CE2-to-PE2
```

2. Configure a static route from Device CE2 to CE1, with Device PE2 as the next hop.

```
[edit routing-options]
user@CE2# set static route 10.0.244.8/30 next-hop 10.0.224.10
```

3. If you are done configuring the device, commit the configuration.

```
[edit]
user@CE2# commit
```

**Results** From configuration mode, confirm your configuration by entering the **show interfaces** and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@CE2# show interfaces
ge-1/3/3 {
  unit 0 {
    family inet {
      address 10.0.224.9/30;
      description CE2-to-PE2;
    }
  }
}

user@CE2# show routing-options
static {
  route 10.0.244.8/30 next-hop 10.0.224.10;
}
```

---

### Configuring Device CE3

**Step-by-Step Procedure** To configure Device CE3:

1. Configure an interface to Device PE3.

```
[edit interfaces]
user@CE3# set ge-2/0/1 unit 0 family inet address 10.0.134.9/30
user@CE3# set ge-2/0/1 unit 0 description CE3-to-PE3
```

2. Configure a static route from Device CE3 to CE1, with Device PE3 as the next hop.

```
[edit routing-options]
user@CE3# set static route 10.0.244.8/30 next-hop 10.0.134.10
```

3. If you are done configuring the device, commit the configuration.

```
[edit]
user@CE3# commit
```

**Results** From configuration mode, confirm your configuration by entering the **show interfaces** and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@CE3# show interfaces
ge-2/0/1 {
  unit 0 {
```

```

        family inet {
            address 10.0.134.9/30;
            description CE3-to-PE3;
        }
    }
}

user@CE3# show routing-options
static {
    route 10.0.244.8/30 next-hop 10.0.134.10;
}

```

### Configuring Device CE4

#### Step-by-Step Procedure

To configure Device CE4:

1. Configure an interface to Device PE4.

```

[edit interfaces]
user@CE4# set ge-3/1/3 unit 0 family inet address 10.0.104.10/30
user@CE4# set ge-3/1/3 unit 0 description CE4-to-PE4

```

2. Configure a static route from Device CE4 to CE1, with Device PE4 as the next hop.

```

[edit routing-options]
user@CE4# set static route 10.0.244.8/30 next-hop 10.0.104.9

```

3. If you are done configuring the device, commit the configuration.

```

[edit]
user@CE4# commit

```

**Results** From configuration mode, confirm your configuration by entering the **show interfaces** and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```

user@CE4# show interfaces
ge-3/1/3 {
    unit 0 {
        family inet {
            address 10.0.104.10/30;
            description CE4-to-PE4;
        }
    }
}

user@CE4# show routing-options
static {
    route 10.0.244.8/30 next-hop 10.0.104.9;
}

```

## Verification

Confirm that the configuration is working properly.

- [Verifying Connectivity on page 330](#)
- [Verifying the State of the Point-to-Multipoint LSP on page 330](#)
- [Checking the Forwarding Table on page 331](#)

---

### Verifying Connectivity

**Purpose** Make sure that the devices can ping each other.

**Action** Run the **ping** command from CE1 to the interface on CE2 connecting to PE2.

```
user@CE1> ping 10.0.224.9
PING 10.0.224.9 (10.0.224.9): 56 data bytes
64 bytes from 10.0.224.9: icmp_seq=0 ttl=61 time=1.387 ms
64 bytes from 10.0.224.9: icmp_seq=1 ttl=61 time=1.394 ms
64 bytes from 10.0.224.9: icmp_seq=2 ttl=61 time=1.506 ms
^C
--- 10.0.224.9 ping statistics ---
3 packets transmitted, 3 packets received, 0% packet loss
round-trip min/avg/max/stddev = 1.387/1.429/1.506/0.055 ms
```

Run the **ping** command from CE1 to the interface on CE3 connecting to PE3.

```
user@CE1> ping 10.0.134.9
PING 10.0.134.9 (10.0.134.9): 56 data bytes
64 bytes from 10.0.134.9: icmp_seq=0 ttl=61 time=1.068 ms
64 bytes from 10.0.134.9: icmp_seq=1 ttl=61 time=1.062 ms
64 bytes from 10.0.134.9: icmp_seq=2 ttl=61 time=1.053 ms
^C
--- 10.0.134.9 ping statistics ---
3 packets transmitted, 3 packets received, 0% packet loss
round-trip min/avg/max/stddev = 1.053/1.061/1.068/0.006 ms
```

Run the **ping** command from CE1 to the interface on CE4 connecting to PE4.

```
user@CE1> ping 10.0.104.10
PING 10.0.104.10 (10.0.104.10): 56 data bytes
64 bytes from 10.0.104.10: icmp_seq=0 ttl=61 time=1.079 ms
64 bytes from 10.0.104.10: icmp_seq=1 ttl=61 time=1.048 ms
64 bytes from 10.0.104.10: icmp_seq=2 ttl=61 time=1.070 ms
^C
--- 10.0.104.10 ping statistics ---
3 packets transmitted, 3 packets received, 0% packet loss
round-trip min/avg/max/stddev = 1.048/1.066/1.079/0.013 ms
```

---

### Verifying the State of the Point-to-Multipoint LSP

**Purpose** Make sure that the ingress, transit, and egress LSRs are in the Up state.



**Action** Run the `show mpls lsp p2mp` command on all of the LSRs. Only the ingress LSR is shown here.

```
user@PE1> show mpls lsp p2mp
Ingress LSP: 1 sessions
P2MP name: p2mp1, P2MP branch count: 3
To          From          State Rt P    ActivePath    LSPname
100.40.40.40 100.10.10.10 Up    0 *          PE1-PE4
100.70.70.70 100.10.10.10 Up    0 *          PE1-PE3
100.50.50.50 100.10.10.10 Up    0 *          PE1-PE2
Total 3 displayed, Up 3, Down 0
...
```

### Checking the Forwarding Table

**Purpose** Make sure that the routes are set up as expected by running the `show route forwarding-table` command. Only the routes to the remote customer networks are shown here.

**Action** user@PE1> show route forwarding-table

```
Routing table: default.inet
Internet:
Destination          Type RtRef Next hop          Type Index NhRef Netif
...
10.0.104.8/30         user    0 3.3.3.2          ucst  1006   6 fe-2/0/8.9
10.0.134.8/30         user    0 6.6.6.2          ucst  1010   6 fe-2/0/9.8
10.0.224.8/30         user    0 2.2.2.2          ucst  1008   6 fe-2/0/10.1
...
```

**Related Documentation**

- *MPLS Applications Feature Guide*

## Configuring Inter-Domain Point-to-Multipoint LSPs

An inter-domain P2MP LSP is a P2MP LSP that has one or more sub-LSPs (branches) that span multiple domains in a network. Examples of such domains include IGP areas and autonomous systems (ASs). A sub-LSP of an inter-domain P2MP LSP may be intra-area, inter-area, or inter-AS, depending on the location of the egress node (leaf) with respect to the ingress node (source).

On the ingress node, a name is assigned to the inter-domain P2MP LSP and shared by all constituent sub-LSPs. Each sub-LSP is configured separately, with its own egress node and optionally an explicit path. The location of the egress node of the sub-LSP with respect to the ingress node determines whether the sub-LSP is intra-area, inter-area, or inter-AS.

Inter-domain P2MP LSPs can be used to transport traffic in the following applications in a multi-area or multi-AS network:

- Layer 2 broadcast and multicast over MPLS
- Layer 3 BGP/MPLS VPN

- VPLS

On each domain boundary node (ABR or ASBR) along the path of the P2MP LSP, the **expand-loose-hop** statement must be configured at the **[edit protocols mpls]** hierarchy level so that CSPF can extend a loose-hop ERO (usually the first entry of the ERO list carried by RSVP Path message) towards the egress node or the next domain boundary node.

CSPF path computation for inter-domain P2MP LSPs:

- CSPF path computation is supported on each sub-LSP for inter-domain P2MP LSPs. A sub-LSP may be intra-area, inter-area, or inter-AS. CSPF treats an inter-area or inter-AS sub-LSP in the same manner as an inter-domain P2P LSP.
- On an ingress node or a domain boundary node (ABR or ASBR), CSPF can perform an Explicit Route Object (ERO) expansion per-RSVP query. The destination queried could be an egress node or a received loose-hop ERO. If the destination resides in a neighboring domain that the node is connected to, CSPF generates either a sequence of strict-hop EROs towards it or a sequence of strict-hop EROs towards another domain boundary node that can reach the destination.
- If RSVP fails to signal a path through a previously selected domain boundary node, RSVP attempts to signal a path through other available domain boundary nodes in a round-robin fashion.
- When a sub-LSP is added or removed to or from an inter-domain P2MP LSP, causing its path (branch) to be merged or pruned with or from the current P2MP tree, the paths being taken by the other sub-LSPs should not be affected, helping to prevent traffic disruption on those sub-LSPs.

Be aware of the following when deploying inter-domain P2MP LSPs in your network:

- Periodic path re-optimization is supported for inter-domain P2MP LSPs on ingress nodes. It can be turned on for an inter-domain P2MP LSP by configuring the **optimize-timer** statement at the **[edit protocols mpls label-switched-path *lsp-name*]** hierarchy level with the same interval for every sub-LSP.
- Only link protection bypass LSPs are supported for inter-domain P2MP LSPs. To enable it for an inter-domain P2MP LSP, link-protection must be configured for all sub-LSPs and on all of the RSVP interfaces that the P2MP LSP might travel through.
- Only OSPF areas are supported for inter-domain P2MP LSPs. IS-IS levels are not supported.

---

## Configuring Link Protection for Point-to-Multipoint LSPs

---

Link protection helps to ensure that traffic going over a specific interface to a neighboring router can continue to reach this router if that interface fails. When link protection is configured for an interface and a point-to-multipoint LSP that traverses this interface, a bypass LSP is created that handles this traffic if the interface fails. The bypass LSP uses a different interface and path to reach the same destination.

To extend link protection to all of the paths used by a point-to-multipoint LSP, link protection must be configured on each router that each branch LSP traverses. If you enable link protection on a point-to-multipoint LSP, you must enable link protection on all of the branch LSPs.

The Internet draft [draft-ietf-mpls-rsvp-te-p2mp-01.txt](#), *Extensions to RSVP-TE for Point to Multipoint TE LSPs*, describes link protection for point-to-multipoint LSPs.

To enable link protection on point-to-multipoint LSPs, complete the following steps:

1. Configure link protection on each branch LSP. To configure link protection, include the **link-protection** statement:

```
link-protection;
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls **label-switched-path** *branch-lsp-name*]
  - [edit logical-systems *logical-system-name* protocols mpls **label-switched-path** *branch-lsp-name*]
2. Configure link protection for each RSVP interface on each router that the branch LSP traverses. For information about how to configure link protection on RSVP interfaces, see [“Configuring Link Protection on Interfaces Used by LSPs” on page 536](#).

For more information on how to configure link protection, see [“Configuring Node Protection or Link Protection for LSPs” on page 543](#).

## Configuring Graceful Restart for Point-to-Multipoint LSPs

You can configure graceful restart on point-to-multipoint LSPs. Graceful restart allows a router undergoing a restart to inform its adjacent neighbors of its condition. The restarting router requests a grace period from the neighbor or peer, which can then cooperate with the restarting router. The restarting router can still forward MPLS traffic during the restart period; convergence in the network is not disrupted. The restart is not apparent to the rest of the network, and the restarting router is not removed from the network topology. RSVP graceful restart can be enabled on both transit routers and ingress routers.

To enable graceful restart on a router handling point-to-multipoint LSP traffic, include the **graceful-restart** statement:

```
graceful-restart;
```

You can include this statement at the following hierarchy levels:

- [edit routing-options]
- [edit logical-systems *logical-system-name* routing-options]

The graceful restart configuration for point-to-multipoint LSPs is identical to that of point-to-point LSPs. For more information on how to configure graceful restart, see [“Configuring RSVP Graceful Restart” on page 548](#).

## Configuring a Multicast RPF Check Policy for Point-to-Multipoint LSPs

You can control whether a reverse path forwarding (RPF) check is performed for a source and group entry before installing a route in the multicast forwarding cache. This makes it possible to use point-to-multipoint LSPs to distribute multicast traffic to PIM islands situated downstream from the egress routers of the point-to-multipoint LSPs.

By configuring the **rpf-check-policy** statement, you can disable RPF checks for a source and group pair. You would typically configure this statement on the egress routers of a point-to-multipoint LSP, because the interface receiving the multicast traffic on a point-to-multipoint LSP egress router might not always be the RPF interface.

You can also configure a routing policy to act upon a source and group pair. This policy behaves like an import policy, so if no policy term matches the input data, the default policy action is “acceptance.” An accept policy action enables RPF checks. A reject policy action (applied to all source and group pairs that are not accepted) disables RPF checks for the pair.

To configure a multicast RPF check policy for a point-to-multipoint LSP, specify the RPF check policy using the **rpf-check-policy** statement:

```
rpf-check-policy policy;
```

You can include this statement at the following hierarchy levels:

- [edit routing-options multicast]
- [edit logical-systems *logical-system-name* routing-options multicast]

You also must configure a policy for the multicast RPF check. You configure policies at the [edit policy-options] hierarchy level. For more information, see the *Routing Policies, Firewall Filters, and Traffic Policers Feature Guide for Routing Devices*.



**NOTE:** When you configure the **rpf-check-policy** statement, the Junos OS cannot perform RPF checks on incoming traffic and therefore cannot detect traffic arriving on the wrong interface. This might cause routing loops to form.

### Example: Configuring Multicast RPF Check Policy for a Point-to-Multipoint LSP

Configure a policy to ensure that an RPF check is not performed for sources with prefix **128.83/16** or longer that belong to groups having a prefix of **228/8** or longer:

```
[edit]
policy-options {
  policy-statement rpf-sg-policy {
    from {
      route-filter 228.0.0.0/8 orlonger;
      source-address-filter 128.83.0.0/16 orlonger;
    }
    then {
      reject;
    }
  }
}
```

```

    }
  }
}

```

## Configuring Ingress PE Router Redundancy for Point-to-Multipoint LSPs

You can configure one or more PE routers as part of a backup PE router group to enable ingress PE router redundancy. You accomplish this by configuring the IP addresses of the backup PE routers (at least one backup PE router is required) and the local IP address used by the local PE router.

You must also configure a full mesh of point-to-point LSPs between the primary and backup PE routers. You also need to configure BFD on these LSPs. See [“Configuring BFD for RSVP-Signaled LSPs” on page 383](#) and [“Configuring BFD for LDP LSPs” on page 620](#) for more information.

To configure ingress PE router redundancy for point-to-multipoint LSPs, include the **backup-pe-group** statement:

```

backup-pe-group pe-group-name {
  backups [addresses];
  local-address address;
}

```

For a list of hierarchy levels at which you can include these statements, see the statement summary sections for these statements.

After you configure the ingress PE router redundancy backup group, you must also apply the group to a static route on the PE router. This ensures that the static route is active (installed in the forwarding table) when the local PE router is the designated forwarder for the backup PE group. You can only associate a backup PE router group with a static route that also has the **p2mp-lsp-next-hop** statement configured. For more information, see [“Configuring Static Unicast Routes for Point-to-Multipoint LSPs” on page 305](#).

## Enabling Point-to-Point LSPs to Monitor Egress PE Routers

Configuring an LSP with the **associate-backup-pe-groups** statement enables it to monitor the status of the PE router to which it is configured. You can configure multiple backup PE router groups using the same router's address. A failure of this LSP indicates to all of the backup PE router groups that the destination PE router is down. The **associate-backup-pe-groups** statement is not tied to a specific backup PE router group. It applies to all groups that are interested in the status of the LSP to that address.

To allow an LSP to monitor the status of the egress PE router, include the **associate-backup-pe-groups** statement:

```

associate-backup-pe-groups;

```

This statement can be configured at the following hierarchy levels:

- [edit protocols mpls **label-switched-path** *lsp-name*]
- [edit logical-systems *logical-system-name* protocols mpls **label-switched-path** *lsp-name*]

If you configure the **associate-backup-pe-groups** statement, you must configure BFD for the point-to-point LSP. For information about how to configure BFD for an LSP, see [“Configuring BFD for MPLS IPv4 LSPs” on page 382](#) and [“Configuring BFD for LDP LSPs” on page 620](#).

You also must configure a full mesh of point-to-point LSPs between the PE routers in the backup PE router group. A full mesh is required so that each PE router within the group can independently determine the status of the other PE routers, allowing each router to independently determine which PE router is currently the designated forwarder for the backup PE router group.

If you configure multiple LSPs with the **associate-backup-pe-groups** statement to the same destination PE router, the first LSP configured is used to monitor the forwarding state to that PE router. If you configure multiple LSPs to the same destination, make sure to configure similar parameters for the LSPs. With this configuration scenario, a failure notification might be triggered even though the remote PE router is still up.

## Preserving Point-to-Multipoint LSP Functioning with Different Junos OS Releases

In Junos OS Release 9.1 and earlier, Resv messages that include the S2L\_SUB\_LSP object are rejected by default. In Junos OS Release 9.2 and later, such messages are accepted by default. To ensure proper functioning of point-to-multipoint LSPs in a network that includes both devices running Junos OS Release 9.1 and earlier and devices running Junos 9.2 and later, you must include the **no-p2mp-sublsp** statement in the configuration of the devices running Junos 9.2 and later:

```
no-p2mp-sublsp;
```

You can include this statement at the following hierarchy levels:

- **[edit protocols rsvp]**
- **[edit logical-systems *logical-system-name* protocols rsvp]**

## CHAPTER 7

# Configuring DiffServ-Aware Traffic Engineering to Achieve Service Level Guarantees on an MPLS network

- [DiffServ-Aware Traffic Engineering Introduction on page 338](#)
- [DiffServ-Aware Traffic Engineering Standards on page 338](#)
- [DiffServ-Aware Traffic Engineering Terminology on page 338](#)
- [DiffServ-Aware Traffic Engineering Features on page 339](#)
- [DiffServ-Aware Traffic Engineered LSPs on page 340](#)
- [DiffServ-Aware Traffic Engineered LSPs Overview on page 340](#)
- [DiffServ-Aware Traffic Engineered LSPs Operation on page 341](#)
- [Multiclass LSPs on page 341](#)
- [Multiclass LSP Overview on page 342](#)
- [Establishing a Multiclass LSP on the Differentiated Services Domain on page 342](#)
- [Configuring Routers for DiffServ-Aware Traffic Engineering on page 343](#)
- [LSP Bandwidth Oversubscription Overview on page 347](#)
- [LSP Size Oversubscription on page 348](#)
- [LSP Link Size Oversubscription on page 348](#)
- [Class Type Oversubscription and Local Oversubscription Multipliers on page 348](#)
- [Class Type Bandwidth and the LOM on page 349](#)
- [LOM Calculation for the MAM and Extended MAM Bandwidth Models on page 349](#)
- [LOM Calculation for the Russian Dolls Bandwidth Model on page 350](#)
- [Example: LOM Calculation on page 350](#)
- [Configuring the Bandwidth Subscription Percentage for LSPs on page 351](#)
- [Configuring LSPs for DiffServ-Aware Traffic Engineering on page 353](#)
- [Configuring Multiclass LSPs on page 356](#)

## DiffServ-Aware Traffic Engineering Introduction

---

Differentiated Services (DiffServ)-aware traffic engineering provides a way to guarantee a specified level of service over an MPLS network. The routers providing DiffServ-aware traffic engineering are part of a differentiated services network domain. All routers participating in a differentiated services domain must have DiffServ-aware traffic engineering enabled.

To help ensure that the specified service level is provided, it is necessary to ensure that no more than the amount of traffic specified is sent over the differentiated services domain. You can accomplish this goal by configuring a policer to police or rate-limit the volume of traffic transiting the differentiated service domain. For more information about how to configure policers for label-switched paths (LSPs), see “[Configuring Policers for LSPs](#)” on page 375.

This feature can help to improve the quality of Internet services such as voice over IP (VoIP). It also makes it possible to better emulate an Asynchronous Transfer Mode (ATM) circuit over an MPLS network.

## DiffServ-Aware Traffic Engineering Standards

---

The following RFCs provide information on DiffServ-aware traffic engineering and multiclass LSPs:

- RFC 3270, *Multi-Protocol Label Switching (MPLS) Support of Differentiated Services*
- RFC 3564, *Requirements for Support of Differentiated Services-aware MPLS Traffic Engineering*
- RFC 4124, *Protocol Extensions for Support of Differentiated-Service-Aware MPLS Traffic Engineering*
- RFC 4125, *Maximum Allocation Bandwidth Constraints Model for Diff-Serv-aware MPLS Traffic Engineering*
- RFC 4127, *Russian Dolls Bandwidth Constraints Model for Diff-Serv-aware MPLS*

These RFCs are available on the IETF website at <http://www.ietf.org/>.

## DiffServ-Aware Traffic Engineering Terminology

---

### B

**Bandwidth model** The bandwidth model determines the values of the available bandwidth advertised by the interior gateway protocols (IGPs).

### C

**CAC** Call admission control (CAC) checks to ensure there is adequate bandwidth on the path before the LSP is established. If the bandwidth is insufficient, the LSP is not established and an error is reported.



|                                           |                                                                                                                                                                                                                                          |
|-------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Class type</b>                         | A collection of traffic flows that is treated equivalently in a differentiated services domain. A class type maps to a queue and is much like a class-of-service (CoS) forwarding class in concept. It is also known as a traffic class. |
| <b>D</b>                                  |                                                                                                                                                                                                                                          |
| <b>Differentiated Services</b>            | Differentiated Services make it possible to give different treatment to traffic based on the EXP bits in the MPLS header. Traffic must be marked appropriately and CoS must be configured.                                               |
| <b>Differentiated Services domain</b>     | The routers in a network that have Differentiated Services enabled.                                                                                                                                                                      |
| <b>DiffServ-aware traffic engineering</b> | A type of constraint-based routing. It can enforce different bandwidth constraints for different classes of traffic. It can also do CAC on each traffic engineering class when an LSP is established.                                    |
| <b>M</b>                                  |                                                                                                                                                                                                                                          |
| <b>MAM</b>                                | The maximum allocation bandwidth constraint model divides the available bandwidth between the different classes. Sharing of bandwidth between the class types is not allowed.                                                            |
| <b>Multiclass LSP</b>                     | A multiclass LSP functions like a standard LSP, but it also allows you to reserve bandwidth from multiple class types. The EXP bits of the MPLS header are used to distinguish between class types.                                      |
| <b>R</b>                                  |                                                                                                                                                                                                                                          |
| <b>RDM</b>                                | The Russian dolls bandwidth constraint model makes efficient use of bandwidth by allowing the class types to share bandwidth.                                                                                                            |
| <b>T</b>                                  |                                                                                                                                                                                                                                          |
| <b>Traffic engineering class</b>          | A paired class type and priority.                                                                                                                                                                                                        |
| <b>Traffic engineering class map</b>      | A map between the class types, priorities, and traffic engineering classes. The traffic engineering class mapping must be consistent across the Differentiated Services domain.                                                          |

---

## DiffServ-Aware Traffic Engineering Features

DiffServ-aware traffic engineering provides the following features:

- Traffic engineering at a per-class level rather than at an aggregate level
- Different bandwidth constraints for different class types (traffic classes)
- Different queuing behaviors per class, allowing the router to forward traffic based on the class type

In comparison, standard traffic engineering does not consider CoS, and it completes its work on an aggregate basis across all Differentiated Service classes.

DiffServ-aware traffic engineering provides the following advantages:

- Traffic engineering can be performed on a specific class type instead of at the aggregate level.
- Bandwidth constraints can be enforced on each specific class type.
- It forwards traffic based on the EXP bits.

This makes it possible to guarantee service and bandwidth across an MPLS network. With DiffServ-aware traffic engineering, among other services, you can provide ATM circuit emulation, VoIP, and a guaranteed bandwidth service.

The following describes how the IGP, Constrained Shortest Path First (CSPF), and RSVP participate in DiffServ-aware traffic engineering:

- The IGP can advertise the unreserved bandwidth for each traffic engineering class to the other members of the differentiated services domain. The traffic engineering database stores this information.
- A CSPF calculation is performed considering the bandwidth constraints for each class type. If all the constraints are met, the CSPF calculation is considered successful.
- When RSVP signals an LSP, it requests bandwidth for specified class types.

---

## DiffServ-Aware Traffic Engineered LSPs

A DiffServ-aware traffic engineered LSP is an LSP configured to reserve bandwidth for one of the supported class types and to carry traffic for that class type. The following sections discuss this type of LSPs:

- [DiffServ-Aware Traffic Engineered LSPs Overview on page 340](#)
- [DiffServ-Aware Traffic Engineered LSPs Operation on page 341](#)

---

## DiffServ-Aware Traffic Engineered LSPs Overview

A DiffServ-aware traffic engineered LSP is an LSP configured with a bandwidth reservation for a specific class type. This LSP can carry traffic for a single class type. On the packets, the class type is specified by the EXP bits (also known as the class-of-service bits) and the per-hop behavior (PHB) associated with the EXP bits. The mapping between the EXP bits and the PHB is static, rather than being signaled in RSVP.

The class type must be configured consistently across the Differentiated Services domain, meaning the class type configuration must be consistent from router to router in the network. You can unambiguously map a class type to a queue. On each node router, the class-of-service queue configuration for an interface translates to the available bandwidth for a particular class type on that link.

For more information about topics related to LSPs and DiffServ-aware traffic engineering, see the following:

- For forwarding classes and class of service, see the *Class of Service Feature Guide for Routing Devices*.
- For EXP bits, see [“MPLS Label Allocation” on page 26](#).
- For differentiated services, see RFC 3270, *Multi-Protocol Label Switching (MPLS) Support of Differentiated Services*.
- For information about how the IGPs and RSVP have been modified to support Differentiated Services-aware MPLS traffic engineering, see RFC 4124, *Protocol Extensions for Support of Differentiated-Service-Aware MPLS Traffic Engineering*.

## DiffServ-Aware Traffic Engineered LSPs Operation

---

When configuring a DiffServ-aware traffic engineered LSP, you specify the class type and the bandwidth associated with it. The following occurs when an LSP is established with bandwidth reservation from a specific class type:

1. The IGPs advertise how much unreserved bandwidth is available for the traffic engineering classes.
2. When calculating the path for an LSP, CSPF is used to ensure that the bandwidth constraints are met for the class type carried by the LSP at the specified priority level.  
  
CSPF also checks to ensure that the bandwidth model is configured consistently on each router participating in the LSP. If the bandwidth model is inconsistent, CSPF does not compute the path (except for LSPs from class type ct0).
3. Once a path is found, RSVP signals the LSP using the Classtype object in the path message. At each node in the path, the available bandwidth for the class types is adjusted as the path is set up.

An LSP that requires bandwidth from a particular class (except class type ct0) cannot be established through routers that do not understand the Classtype object. Preventing the use of routers that do not understand the Classtype object helps to ensure consistency throughout the Differentiated Services domain by preventing the LSP from using a router that cannot support Differentiated Services.

By default, LSPs are signaled with setup priority 7 and holding priority 0. An LSP configured with these values cannot preempt another LSP at setup time and cannot be preempted.

It is possible to have both LSPs configured for DiffServ-aware traffic engineering and regular LSPs configured at the same time on the same physical interfaces. For this type of heterogeneous environment, regular LSPs carry best-effort traffic by default. Traffic carried in the regular LSPs must have the correct EXP settings (either by remarking the EXP settings or by assuming that the traffic arrived with the correct EXP settings from the upstream router).

## Multiclass LSPs

---

Multiclass LSPs function like standard LSPs, but they also allow you to configure multiple class types with guaranteed bandwidth. The EXP bits of the MPLS header are used to distinguish between class types. Multiclass LSPs can be configured for a variety of

purposes. For example, you can configure a multiclass LSP to emulate the behavior of an ATM circuit. An ATM circuit can provide service-level guarantees to a class type. A multiclass LSP can provide a similar guaranteed level of service.

The following sections discuss multiclass LSPs:

- [Multiclass LSP Overview on page 342](#)
- [Establishing a Multiclass LSP on the Differentiated Services Domain on page 342](#)

---

## Multiclass LSP Overview

A multiclass LSP is an LSP that can carry several class types. One multiclass LSP can be used to support up to four class types. On the packets, the class type is specified by the EXP bits (also known as the class-of-service bits) and the per-hop behavior (PHB) associated with the EXP bits. The mapping between the EXP bits and the PHB is static, rather than being signaled in RSVP.

Once a multiclass LSP is configured, traffic from all of the class types can:

- Follow the same path
- Be rerouted along the same path
- Be taken down at the same time

Class types must be configured consistently across the Differentiated Services domain, meaning the class type configuration must be consistent from router to router in the network.

You can unambiguously map a class type to a queue. On each node router, the CoS queue configuration for an interface translates to the available bandwidth for a particular class type on that link.

The combination of a class type and a priority level forms a traffic engineering class. The IGP can advertise up to eight traffic engineering classes for each link.

For more information about the EXP bits, see [“MPLS Label Allocation” on page 26](#).

For more information about forwarding classes, see the *Class of Service Feature Guide for Routing Devices*.

---

## Establishing a Multiclass LSP on the Differentiated Services Domain

The following occurs when a multiclass LSP is established on the differentiated services domain:

1. The IGPs advertise how much unreserved bandwidth is available for the traffic engineering classes.
2. When calculating the path for a multiclass LSP, CSPF is used to ensure that the constraints are met for all the class types carried by the multiclass LSP (a set of constraints instead of a single constraint).

3. Once a path is found, RSVP signals the LSP using an RSVP object in the path message. At each node in the path, the available bandwidth for the class types is adjusted as the path is set up. The RSVP object is a hop-by-hop object. Multiclass LSPs cannot be established through routers that do not understand this object. Preventing routers that do not understand the RSVP object from carrying traffic helps to ensure consistency throughout the differentiated services domain by preventing the multiclass LSP from using a router that is incapable of supporting differentiated services.

By default, multiclass LSPs are signaled with setup priority 7 and holding priority 0. A multiclass LSP configured with these values cannot preempt another LSP at setup time and cannot be preempted.

It is possible to have both multiclass LSPs and regular LSPs configured at the same time on the same physical interfaces. For this type of heterogeneous environment, regular LSPs carry best-effort traffic by default. Traffic carried in the regular LSPs must have the correct EXP settings.

## Configuring Routers for DiffServ-Aware Traffic Engineering

To configure DiffServ-aware traffic engineering, include the **diffserv-te** statement:

```
diffserv-te {
  bandwidth-model {
    extended-mam;
    mam;
    rdm;
  }
  te-class-matrix {
    traffic-class {
      tenumber {
        priority priority;
        traffic-class ctnumber priority priority;
      }
    }
  }
}
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls]
- [edit logical-systems *logical-system-name* protocols mpls]

You must include the **diffserv-te** statement in the configuration on all routers participating in the Differentiated Services domain. However, you are not required to configure the traffic engineering class matrix (by including the **te-class-matrix** statement at the [edit protocols mpls **diffserv-te**] or [edit logical-systems *logical-system-name* protocols mpls **diffserv-te**] hierarchy level).



**NOTE:** To prevent the possibility of an incorrect configuration when migrating to Diffserv-aware traffic engineering, a policy control failure error might be triggered if there is conflict between the old LSPs and the newly configured TE-class matrix.

An old node might request an LSP with setup and hold priorities in such a way that the combination of the ct0 class and the priority does not match with the configured TE-class matrix. All LSPs on the router that are configured prior to configuring diffserv-aware traffic engineering are designated as being from class ct0.

The error appears in the RSVP tracing logs as a **Session preempted** error. For the router where the error originates, the error could appear as follows:

```
Jun 17 16:35:59 RSVP error for session 10.255.245.6(port/tunnel ID 31133)
  Proto 0: (class ct0, priority 2) is not a valid TE-class Jun 17
16:35:59 RSVP originate PathErr 192.168.37.22->192.168.37.23 Session
preempted
```

For the router receiving the error, the error can appear as follows:

```
Jun 17 16:37:51 RSVP recv PathErr 192.168.37.22->192.168.37.23 Session
preempted LSP to-f(2/31133)
```

To configure DiffServ-aware traffic engineering, complete the procedures in the following sections:

- [Configuring the Bandwidth Model on page 344](#)
- [Configuring Traffic Engineering Classes on page 345](#)
- [Configuring Class of Service for DiffServ-Aware Traffic Engineering on page 346](#)

## Configuring the Bandwidth Model

You must configure a bandwidth model on all routers participating in the Differentiated Services domain. The bandwidth models available are MAM, extended MAM, and RDM:

- Maximum allocation bandwidth constraints model (MAM)—Defined in RFC 4125, *Maximum Allocation Bandwidth Constraints Model for Diffserv-aware MPLS Traffic Engineering*.
- Extended MAM—A proprietary bandwidth model that behaves much like standard MAM. If you configure multiclass LSPs, you must configure the extended MAM bandwidth model.
- Russian-dolls bandwidth allocation model (RDM)—Makes efficient use of bandwidth by allowing the class types to share bandwidth. RDM is defined in RFC 4127, *Russian Dolls Bandwidth Constraints Model for Diffserv-aware MPLS Traffic Engineering*.

To configure a bandwidth model, include the **bandwidth-model** statement and specify one of the bandwidth model options:

```
bandwidth-model {
  extended-mam;
```

```

    mam;
    rdm;
}

```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls [diffserv-te](#)]
- [edit logical-systems *logical-system-name* protocols mpls [diffserv-te](#)]



**NOTE:** If you change the bandwidth model on an ingress router, all the LSPs enabled on the router are taken down and resigaled.

## Configuring Traffic Engineering Classes

Configuring traffic engineering classes is optional. [Table 7 on page 345](#) shows the default values for everything in the traffic engineering class matrix. The default mapping is expressed in terms of the default forwarding classes defined in the CoS configuration.

**Table 7: Default Values for the Traffic Engineering Class Matrix**

| Traffic Engineering Class | Class Type | Queue | Priority |
|---------------------------|------------|-------|----------|
| te0                       | ct0        | 0     | 7        |
| te1                       | ct1        | 1     | 7        |
| te2                       | ct2        | 2     | 7        |
| te3                       | ct3        | 3     | 7        |
| te4                       | ct0        | 0     | 0        |
| te5                       | ct1        | 1     | 0        |
| te6                       | ct2        | 2     | 0        |
| te7                       | ct3        | 3     | 0        |

If you want to override the default mappings, you can configure traffic engineering classes 0 through 7. For each traffic engineering class, you configure a class type (or queue) from 0 through 3. For each class type, you configure a priority from 0 through 7.

To configure traffic engineering classes explicitly, include the **te-class-matrix** statement:

```

te-class-matrix {
  tnumber {
    priority priority;
    traffic-class {
      ctnumber priority priority;
    }
  }
}

```

```

    }
  }

```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls [diffserv-te](#)]
- [edit logical-systems *logical-system-name* protocols mpls [diffserv-te](#)]

The following example shows how to configure traffic engineering class **te0** with class type **ct1** and a priority of 4:

```

[edit protocols mpls diffserv-te]
te-class-matrix {
  te0 traffic-class ct1 priority 4;
}

```



**NOTE:** If you explicitly configure a value for one of the traffic engineering classes, all the default values in the traffic engineering class matrix are dropped.

When you explicitly configure traffic engineering classes, you must also configure a bandwidth model; otherwise, the configuration commit operation fails.

### Requirements and Limitations for the Traffic Engineering Class Matrix

When you configure a traffic engineering class matrix, be aware of the following requirements and limitations:

- A mapping configuration is local and affects only the router on which it is configured. It does not affect other systems participating in the differentiated services domain. However, for a Differentiated Services domain to function properly, you need to configure the same traffic engineering class matrix on all the routers participating in the same domain.
- When explicitly configuring traffic engineering classes, you must configure the classes in sequence (**te0**, **te1**, **te2**, **te3**, and so on); otherwise, the configuration commit operation fails.

The first traffic engineering class you configure must be **te0**; otherwise, the configuration commit operation fails.

### Configuring Class of Service for DiffServ-Aware Traffic Engineering

To configure DiffServ-aware traffic engineering, you must also configure class of service. The following example illustrates a class-of-service configuration that would allocate 25 percent of the link bandwidth to each class:

```

class-of-service {
  interfaces {
    all {
      scheduler-map simple-map;
    }
  }
}

```



```

    }
  }
  scheduler-maps {
    simple-map {
      forwarding-class assured-forwarding scheduler simple_sched;
      forwarding-class best-effort scheduler simple_sched;
      forwarding-class network-control scheduler simple_sched;
      forwarding-class expedited-forwarding scheduler simple_sched;
    }
  }
  schedulers {
    simple_sched {
      transmit-rate percent 25;
      buffer-size percent 25;
    }
  }
}

```

For more information on how to configure class of service, see the *Class of Service Feature Guide for Routing Devices*.

## LSP Bandwidth Oversubscription Overview

LSPs are established with bandwidth reservations configured for the maximum amount of traffic you expect to traverse the LSP. Not all LSPs carry the maximum amount of traffic over their links at all times. For example, even if the bandwidth for link A has been completely reserved, actual bandwidth might still be available but not currently in use. This excess bandwidth can be used by allowing other LSPs to also use link A, oversubscribing the link. You can oversubscribe the bandwidth configured for individual class types or specify a single value for all of the class types using an interface.

You can use oversubscription to take advantage of the statistical nature of traffic patterns and to permit higher utilization of links.

The following examples describe how you might use bandwidth oversubscription and undersubscription:

- Use oversubscription on class types where peak periods of traffic do not coincide in time.
- Use oversubscription of class types carrying best-effort traffic. You take the risk of temporarily delaying or dropping traffic in exchange for making better utilization of network resources.
- Give different degrees of oversubscription or undersubscription of traffic for the different class types. For instance, you configure the subscription for classes of traffic as follows:
  - Best effort—**ct0 1000**
  - Voice—**ct3 1**

When you undersubscribe a class type for a multiclass LSP, the total demand of all RSVP sessions is always less than the actual capacity of the class type. You can use undersubscription to limit the utilization of a class type.

The bandwidth oversubscription calculation occurs on the local router only. Because no signaling or other interaction is required from other routers in the network, the feature can be enabled on individual routers without being enabled or available on other routers which might not support this feature. Neighboring routers do not need to know about the oversubscription calculation, they rely on the IGP.

The following sections describe the types of bandwidth oversubscription available in the Junos OS:

- [LSP Size Oversubscription on page 348](#)
- [LSP Link Size Oversubscription on page 348](#)
- [Class Type Oversubscription and Local Oversubscription Multipliers on page 348](#)

---

## LSP Size Oversubscription

For LSP size oversubscription, you simply configure less bandwidth than the peak rate expected for the LSP. You also might need to adjust the configuration for automatic policers. Automatic policers manage the traffic assigned to an LSP, ensuring that it does not exceed the configured bandwidth values. LSP size oversubscription requires that the LSP can exceed its configured bandwidth allocation.

Policing is still possible. However, the policer must be manually configured to account for the maximum bandwidth planned for the LSP, rather than for the configured value.

---

## LSP Link Size Oversubscription

You can increase the maximum reservable bandwidth on the link and use the inflated values for bandwidth accounting. Use the **subscription** statement to oversubscribe the link. The configured value is applied to all class type bandwidth allocations on the link. For more information about link size oversubscription, see [“Configuring the Bandwidth Subscription Percentage for LSPs” on page 351](#).

---

## Class Type Oversubscription and Local Oversubscription Multipliers

Local oversubscription multipliers (LOMs) allow different oversubscription values for different class types. LOMs are useful for networks where the oversubscription ratio needs to be configured differently on different links and where oversubscription values are required for different classes. You might use this feature to oversubscribe class types handling best-effort traffic, but use no oversubscription for class types handling voice traffic. An LOM is calculated locally on the router. No information related to an LOM is signaled to other routers in the network.

An LOM is configurable on each link and for each class type. The per-class type LOM allows you to increase or decrease the oversubscription ratio. The per-class-type LOM is factored into all local bandwidth accounting for admission control and IGP advertisement of unreserved bandwidths.

The LOM calculation is tied to the bandwidth model (MAM, extended MAM, and Russian dolls) used, because the effect of oversubscription across class types must be accounted for accurately.



**NOTE:** All LOM calculations are performed by the Junos OS and require no user intervention.

The formulas related to the oversubscription of class types are described in the following sections:

- [Class Type Bandwidth and the LOM on page 349](#)
- [LOM Calculation for the MAM and Extended MAM Bandwidth Models on page 349](#)
- [LOM Calculation for the Russian Dolls Bandwidth Model on page 350](#)
- [Example: LOM Calculation on page 350](#)

## Class Type Bandwidth and the LOM

The following formula expresses the relationship between the bandwidth of the class type and the LOM. The normalized bandwidth of the class type ( $N_B$ ) is equal to the reserved bandwidth of the class type ( $R_B$ ) divided by the LOM of the class type ( $L_C$ ):

$$N_B = R_B / L_C$$

When calculating available bandwidth, you need to subtract the normalized bandwidth from the relevant bandwidth constraint.



**NOTE:** When using an LOM, values advertised for the available bandwidth might be larger than the bandwidth constraint values. However, the values advertised in the maximum link bandwidth advertisement are not affected by local oversubscription.

## LOM Calculation for the MAM and Extended MAM Bandwidth Models

The following formulas show how the LOM is calculated for the MAM and extended MAM bandwidth models.

$$\text{Unreserved TE-Class}(i) = \text{LOM}_c \times [ \text{BC}_c - \text{SUM} ( \text{Normalized} ( \text{CT}_c, q ) ) ] \text{ for } q \leq p$$

Or

$$\text{Unreserved TE-Class}(i) = ( \text{LOM}_c \times \text{BC}_c ) - \text{SUM} ( \text{Reserved} ( \text{CT}_c, q ) ) \text{ for } q \leq p$$

where:

- LOM<sub>c</sub>—LOM for class type *c*.
- BC<sub>c</sub>—Bandwidth constraint for class type *c*.
- CT<sub>c</sub>—Class type *c*.
- TE-Class(*i*) ↔ (CT<sub>c</sub>, preemption *p*) in the configured TE-Class mapping.

## LOM Calculation for the Russian Dolls Bandwidth Model

The following formulas show how the LOM is calculated for the Russian dolls bandwidth model:

$$\text{Unreserved TE-Class (i)} = \text{LOM}_c \times \text{MIN} [$$

$$[ \text{BC}_c - \text{SUM} ( \text{Normalized} ( \text{CT}_b, q ) ) ] \text{ for } q \leq p \text{ and } c \leq b \leq 7,$$

$$\vdots$$

$$[ \text{BC}_0 - \text{SUM} ( \text{Normalized} ( \text{CT}_b, q ) ) ] \text{ for } q \leq p \text{ and } 0 \leq b \leq 7,$$

$$]$$

where:

- LOM<sub>c</sub>—LOM for class type *c*.
- BC<sub>c</sub>—Bandwidth constraint for class type *c*.
- TE-Class(*i*) ↔ (CT<sub>c</sub>, preemption *p*) in the configured TE-Class mapping.

Note that the impact of an LSP on the unreserved bandwidth of a class type does not depend only on the LOM for that class type—it also depends on the LOM for the class type of the LSP.

## Example: LOM Calculation

The following example illustrates how an LOM calculation is made for four classes of traffic: **ct0**, **ct1**, **ct2**, and **ct3**.

The class types have been assigned the following values:

```
ct0 = 40
ct1 = 30
ct2 = 20
ct3 = 10
```

These class type values yield the following bandwidth constraints:

```
BC0 = (ct3 + ct2 + ct1 + ct0) = 100
BC1 = (ct3 + ct2 + ct1) = 60
BC2 = (ct3 + ct2) = 30
BC3 = (ct3) = 10
```

LSPs from class type **ct0** can take up to 100 percent of bandwidth on the link. LSPs from class type **ct1** can take up to 60 percent of the bandwidth on the link, and so on.

If you assume for this example that the class types have the following LOM values:

LOM(ct0) = 8  
LOM(ct1) = 4  
LOM(ct2) = 2  
LOM(ct3) = 1

In the absence of any other reservation, LSPs from class type **ct0** can take up to 800 percent of the available bandwidth ( $8 \times 100 = 800$ ). In the absence of any other reservation, LSPs from class type **ct1** can take up to 240 percent of the available bandwidth ( $4 \times 60 = 240$ ), and so on.

The maximum amount of bandwidth that can be reserved is:

ct0 = LOM(ct0) x BC0 = 800  
ct1 = LOM(ct1) x BC1 = 240  
ct2 = LOM(ct2) x BC2 = 60  
ct3 = LOM(ct3) x BC3 = 10

For the undersubscribed class type **ct3**, the maximum reservable bandwidth is the same as the bandwidth constraint. For the overbooked class types, these values are not the values of the bandwidth constraint-taking into account the oversubscription for each class type separately. The oversubscription per class type in the sum is not taken into account because ultimately the entire bandwidth constraint can be filled with the bandwidth reservation of just one class type, so you have to account for that class type's bandwidth oversubscription only.

When calculating the available bandwidth for **CTc**, you need to express reservations from other classes as if they were from **CTc**. The reservation from class **ctx** is normalized with the LOM of **ctx**, but it is then multiplied by the LOM of **CTc**.

For the previous example, assume that **LSP1** has class type **ct3** configured with bandwidth of 10 and a priority of 0.

The values for the reservable bandwidth will be:

ct0 =  $8 \times (100 - 10) = 720$   
ct1 =  $4 \times \min((100-10), (60-10)) = 200$   
ct2 =  $2 \times \min((100-10), (60-10), (30-10)) = 40$   
ct3 =  $1 \times \min((100-10), (60-10), (30-10), (10-10)) = 0$

These numbers can be rationalized as follows: the normalized reservation is 10 percent. If this bandwidth came from class type **ct0**, it would be equivalent to an overbooked reservation of 80 percent. You can see that 720 percent ( $800 - 80 = 720$ ) of the bandwidth remains available for other LSPs.

---

## Configuring the Bandwidth Subscription Percentage for LSPs

---

By default, RSVP allows all of a class type's bandwidth (100 percent) to be used for RSVP reservations. When you oversubscribe a class type for a multiclass LSP, the aggregate demand of all RSVP sessions is allowed to exceed the actual capacity of the class type.

If you want to oversubscribe or undersubscribe all of the class types on an interface using the same percentage bandwidth, configure the percentage using the **subscription** statement:

**subscription percentage;**

For a list of hierarchy levels at which you can include this statement, see the statement summary section.

To undersubscribe or oversubscribe the bandwidth for each class type, configure a percentage for each class type (**ct0**, **ct1**, **ct2**, and **ct3**) option for the **subscription** statement. When you oversubscribe a class type, an LOM is applied to calculate the actual bandwidth reserved. See “[Class Type Oversubscription and Local Oversubscription Multipliers](#)” on [page 348](#) for more information.

```
subscription {
  ct0 percentage;
  ct1 percentage;
  ct2 percentage;
  ct3 percentage;
}
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section.

**percentage** is the percentage of class type bandwidth that RSVP allows to be used for reservations. It can be a value from 0 through 65,000 percent. If you specify a value greater than 100, you are oversubscribing the interface or class type.

The value you configure when you oversubscribe a class type is a percentage of the class type bandwidth that can actually be used. The default subscription value is 100 percent.

You can use the **subscription** statement to disable new RSVP sessions for one or more class types. If you configure a percentage of 0, no new sessions (including those with zero bandwidth requirements) are permitted for the class type.

Existing RSVP sessions are not affected by changing the subscription factor. To clear an existing session, issue the **clear rsvp session** command. For more information on the **clear rsvp session** command, see the [CLI Explorer](#).

## Constraints on Configuring Bandwidth Subscription

Be aware of the following issues when configuring bandwidth subscription:

- If you configure bandwidth constraints at the **[edit class-of-service interface *interface-name*]** hierarchy level, they override any bandwidth configuration you specify at the **[edit protocols rsvp interface *interface-name* bandwidth]** hierarchy level for Diffserv-TE. Also note that either of the CoS or RSVP bandwidth constraints can override the interface hardware bandwidth constraints.
- If you configure a bandwidth subscription value for a specific interface that differs from the value configured for all interfaces (by including different values for the **subscription** statement at the **[edit protocols rsvp interface *interface-name*]** and **[edit protocols rsvp interface all]** hierarchy levels), the interface-specific value is used for that interface.
- You can configure subscription for each class type only if you also configure a bandwidth model. If no bandwidth model is configured, the commit operation fails with the following error message:

```

user@host# commit check
[edit protocols rsvp interface all]
'subscription'
RSVP: Must have a diffserv-te bandwidth model configured when configuring
subscription per traffic class.
error: configuration check-out failed

```

- You cannot include the **subscription** statement both in the configuration for a specific class type and the configuration for the entire interface. The commit operation fails with the following error message:

```

user@host# commit check
[edit protocols rsvp interface all]
'subscription'
RSVP: Cannot configure both link subscription and per traffic class
subscription.
error: configuration check-out failed

```

## Configuring LSPs for DiffServ-Aware Traffic Engineering

You must configure the Differentiated Services domain (see [“Configuring Routers for DiffServ-Aware Traffic Engineering” on page 343](#)) before you can enable DiffServ-aware traffic engineering for LSPs. The Differentiated Services domain provides the underlying class types and corresponding traffic engineering classes that you reference in the LSP configuration. The traffic engineering classes must be configured consistently on each router participating in the Differentiated Services domain for the LSP to function properly.



**NOTE:** You must configure either MAM or RDM as the bandwidth model when you configure DiffServ-aware traffic engineering for LSPs. See [“Configuring the Bandwidth Model” on page 344](#).

The actual data transmitted over this Differentiated Services domain is carried by an LSP. Each LSP relies on the EXP bits of the MPLS packets to enable DiffServ-aware traffic engineering. Each LSP can carry traffic for a single class type.

All the routers participating in the LSP must be Juniper Networks routers running Junos OS Release 6.3 or later. The network can include routers from other vendors and Juniper Networks routers running earlier versions of the Junos OS. However, the DiffServ-aware traffic engineering LSP cannot traverse these routers.



**NOTE:** You cannot simultaneously configure multiclass LSPs and DiffServ-aware traffic engineering LSPs on the same router.

To enable DiffServ-aware traffic engineering for LSPs, you need to configure the following:

- [Configuring Class of Service for the Interfaces on page 354](#)
- [Configuring IGP on page 354](#)
- [Configuring Traffic-Engineered LSPs on page 354](#)

- [Configuring Policing for LSPs on page 355](#)
- [Configuring Fast Reroute for Traffic-Engineered LSPs on page 355](#)

## Configuring Class of Service for the Interfaces

The existing class-of-service (CoS) infrastructure ensures that traffic that is consistently marked receives the scheduling guarantees for its class. The classification, marking, and scheduling necessary to accomplish this are configured using the existing Junos OS CoS features.



**NOTE:** The Junos OS does not support CoS on ATM interfaces.

For information about how to configure CoS, see the *Class of Service Feature Guide for Routing Devices*.

## Configuring IGP

You can configure either IS-IS or OSPF as the IGP. The IS-IS and OSPF configurations for routers supporting LSPs are standard. For information about how to configure these protocols, see the *Junos OS Routing Protocols Library*.

## Configuring Traffic-Engineered LSPs

You configure an LSP by using the standard LSP configuration statements and procedures. To configure DiffServ-aware traffic engineering for the LSP, specify a class type bandwidth constraint by including the **bandwidth** statement:

```
label-switched-path lsp-name {  
  bandwidth {  
    ctnumber bps;  
  }  
}
```

For a list of hierarchy levels at which you can include the **bandwidth** statement, see the statement summary sections for this statement.

If you do not specify a bandwidth for a class type, **ct0** is automatically specified as the queue for the LSP. You can configure only one class type for each LSP, unlike multiclass LSPs.

The class type statements specify bandwidth (in bits per second) for the following classes:

- **ct0**—Bandwidth reserved for class 0
- **ct1**—Bandwidth reserved for class 1
- **ct2**—Bandwidth reserved for class 2
- **ct3**—Bandwidth reserved for class 3



You can configure setup and holding priorities for an LSP, but the following restrictions apply:

- The combination of class and priority must be one of the configured traffic engineering classes. The default setup priority is 7 and the default holding priority is 0.
- Configuring an invalid combination of class type and priority causes the commit operation to fail.
- Automatic bandwidth allocation is not supported. If you configure automatic bandwidth allocation, the commit operation fails.
- LSPs configured with the **bandwidth** statement but without specifying a class type use the default class type **ct0**.
- For migration issues, see Internet draft [draft-ietf-tewg-diff-te-07.txt](#).

## Configuring Policing for LSPs

Policing allows you to control the amount of traffic forwarded through a particular LSP. Policing helps to ensure that the amount of traffic forwarded through an LSP never exceeds the requested bandwidth allocation. You can configure multiple policers for each LSP.

For information about how to configure a policer for an LSP, see [“Configuring Policers for LSPs” on page 375](#).

## Configuring Fast Reroute for Traffic-Engineered LSPs

You can configure fast reroute for traffic engineered LSPs (LSPs carrying a single class of traffic). It is also possible to reserve bandwidth on the detour path for the class of traffic when fast reroute is enabled. The same class type number is used for both the traffic engineered LSP and its detour.

If you configure the router to reserve bandwidth for the detour path, a check is made to ensure that the link is capable of handling DiffServ-aware traffic engineering and for CoS capability before accepting it as a potential detour path. Unsupported links are not used.

You can configure the amount of bandwidth to reserve for detours using either the **bandwidth** statement or the **bandwidth-percent** statement. You can only configure one of these statements at a time. If you do not configure either the **bandwidth** statement or the **bandwidth-percent** statement, the default setting is to not reserve bandwidth for the detour path (the bandwidth guarantee will be lost if traffic is switched to the detour).

When you configure the **bandwidth** statement, you can specify the specific amount of bandwidth (in bits per second [bps]) you want to reserve for the detour path. For information, see [“Configuring Fast Reroute” on page 254](#).

The **bandwidth-percent** statement allows you to specify the bandwidth of the detour path as a percentage of the bandwidth configured for the protected path. For example, if you configure 100 millions bps of bandwidth for the protected path and configure 20 for the **bandwidth-percent** statement, the detour path will have 20 million bps of bandwidth reserved for its use.

To configure the percent of bandwidth used by the detour path based on the bandwidth of the protected path, include the **bandwidth-percent** statement:

```
bandwidth-percent percentage;
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls **label-switched-path** *lsp-name* **fast-reroute**]
- [edit logical-systems *logical-system-name* protocols mpls **label-switched-path** *lsp-name* **fast-reroute**]

---

## Configuring Multiclass LSPs

A multiclass LSP is an LSP configured to reserve bandwidth for multiple class types and also carries the traffic for these class types. The differentiated service behavior is determined by the EXP bits.

You must configure the Differentiated Services domain (see “[Configuring Routers for DiffServ-Aware Traffic Engineering](#)” on page 343) before you can enable a multiclass LSP. The Differentiated Services domain provides the underlying class types and corresponding traffic engineering classes that you reference in a multiclass LSP configuration. The traffic engineering classes must be configured consistently on each router participating in the Differentiated Services domain for the multiclass LSP to function properly.



**NOTE:** You must configure extended MAM as the bandwidth model when you configure multiclass LSPs. See “[Configuring the Bandwidth Model](#)” on page 344.

All the routers participating in a multiclass LSP must be Juniper Networks routers running Junos OS Release 6.2 or later. The network can include routers from other vendors and Juniper Networks routers running earlier versions of the Junos OS. However, the multiclass LSP cannot traverse these routers.

To enable multiclass LSPs, you need to configure the following:

- [Configuring Class of Service for the Interfaces](#) on page 356
- [Configuring the IGP](#) on page 357
- [Configuring Class-Type Bandwidth Constraints for Multiclass LSPs](#) on page 357
- [Configuring Policing for Multiclass LSPs](#) on page 358
- [Configuring Fast Reroute for Multiclass LSPs](#) on page 358

## Configuring Class of Service for the Interfaces

The existing class-of-service infrastructure ensures that traffic that is consistently marked receives the scheduling guarantees for its class. The classification, marking, and scheduling necessary to consistently mark traffic are configured with the existing Junos OS CoS features.



**NOTE:** The Junos OS does not support ATM interfaces.

For information about how to configure CoS, see the *Class of Service Feature Guide for Routing Devices*.

## Configuring the IGP

You can configure either IS-IS or OSPF. The IS-IS and OSPF configurations for routers supporting multiclass LSPs are standard. For information about how to configure these protocols, see the *Junos OS Routing Protocols Library*.

## Configuring Class-Type Bandwidth Constraints for Multiclass LSPs

You configure a multiclass LSP by using the standard LSP configuration statements and procedures. To configure an LSP as a multiclass LSP, specify the class type bandwidth constraints by including the **bandwidth** statement:

```
bandwidth {
  ct0 bps;
  ct1 bps;
  ct2 bps;
  ct3 bps;
}
```

For a list of hierarchy levels at which you can include the **bandwidth** statement, see the statement summary sections for these statements.

The class type statements specify bandwidth (in bits per second) for the following classes:

- **ct0**—Bandwidth reserved for class 0
- **ct1**—Bandwidth reserved for class 1
- **ct2**—Bandwidth reserved for class 2
- **ct3**—Bandwidth reserved for class 3

For example, to configure 50 megabytes of bandwidth for class type 1 and 30 megabytes of bandwidth for class type 2, include the **bandwidth** statement as follows:

```
[edit protocols mpls]
label-switched-path traffic-class {
  bandwidth {
    ct1 50M;
    ct2 30M;
  }
}
```

You cannot configure a bandwidth for a class type and also configure a bandwidth at the **[edit protocols mpls label-switched-path *lsp-name* bandwidth]** hierarchy level. For example, the following configuration cannot be committed:

```
[edit protocols mpls]
label-switched-path traffic-class {
```

```
    bandwidth {  
      20M;  
      ct1 10M;  
    }  
  }
```

You can configure setup and holding priorities for a multiclass LSP, but the following restrictions apply:

- The setup and holding priorities apply to all classes for which bandwidth is requested.
- The combination of class and priority must be one of the configured traffic engineering classes. The default traffic engineering class configuration results in multiclass LSPs that cannot preempt and cannot be preempted. The default setup priority is 7 and the default holding priority is 0.
- Configuring an invalid combination of class type and priority causes the commit operation to fail.
- Automatic bandwidth allocation is not supported for multiclass LSPs. If you configure automatic bandwidth allocation, the commit operation fails.
- LSPs configured with the **bandwidth** statement but without specifying a class type use the default class type **ct0**.

## Configuring Policing for Multiclass LSPs

Policing allows you to control the amount of traffic forwarded through a particular multiclass LSP. Policing helps to ensure that the amount of traffic forwarded through an LSP never exceeds the requested bandwidth allocation. You can configure multiple policers for each multiclass LSP. You can also enable automatic policing for multiclass LSPs.

For information about how to configure a policer for a multiclass LSP, see [“Configuring Policers for LSPs” on page 375](#) and [“Configuring Automatic Policers” on page 377](#).

## Configuring Fast Reroute for Multiclass LSPs

You can enable fast reroute for multiclass LSPs. The bandwidth guarantees for the class types can be carried over to the detour path in case the primary path of the multiclass LSP fails. The same traffic class types configured for the primary multiclass LSP are also signaled for the detour LSP.

The bandwidth guarantee for the detour path is a percentage of the bandwidth configured for the class types of the primary path. For example, you configure a value of 50 percent for the detour path and the protected LSP carries traffic for class types CT0 through CT3. The detour path is signaled with the same class types (CT0 through CT3) but with 50 percent of the bandwidth configured for the protected LSP.

If you configure the router to reserve bandwidth for the detour path, a check is made to ensure that the link is capable of handling DiffServ-aware traffic engineering, that all of the traffic class types needed are available, and for CoS capability before accepting it as a potential detour path. Unsupported links are not used.

The bandwidth percentage for fast reroute is signaled from the ingress router to the egress router. All of the intermediate devices must complete their own CSPF computations and signaling.

When you configure the **bandwidth-percent** statement, the detour path bandwidth is computed by multiplying by the bandwidth configured for the primary multiclass LSP. For information about how to configure the bandwidth for the multiclass LSP, see [“Configuring Traffic-Engineered LSPs” on page 354](#).

To configure the percentage of bandwidth used by the detour path based on the bandwidth of the protected path, include the **bandwidth-percent** statement:

```
bandwidth-percent percentage;
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls **label-switched-path** *lsp-name fast-reroute*]
- [edit logical-systems *logical-system-name* protocols mpls **label-switched-path** *lsp-name fast-reroute*]



## CHAPTER 8

# Configuring Miscellaneous MPLS Properties

- [Configuring the Maximum Number of MPLS Labels on page 362](#)
- [Configuring MPLS to Pop the Label on the Ultimate-Hop Router on page 363](#)
- [Advertising Explicit Null Labels to BGP Peers on page 364](#)
- [Configuring Traffic Engineering for LSPs on page 365](#)
- [Enabling Interarea Traffic Engineering on page 367](#)
- [Enabling Inter-AS Traffic Engineering for LSPs on page 368](#)
- [Configuring MPLS to Gather Statistics on page 371](#)
- [Configuring System Log Messages and SNMP Traps for LSPs on page 372](#)
- [Configuring MPLS Firewall Filters and Policers on page 373](#)
- [Configuring MPLS Rewrite Rules on page 381](#)
- [Configuring BFD for MPLS IPv4 LSPs on page 382](#)
- [BFD-Triggered Local Repair for Rapid Convergence on page 385](#)
- [Pinging LSPs on page 388](#)
- [Tracing MPLS and LSP Packets and Operations on page 389](#)
- [Configuring Link State Distribution Using BGP on page 390](#)
- [Example: Configuring Link State Distribution Using BGP on page 393](#)
- [Dynamic Bandwidth Management Using Container LSP Overview on page 410](#)
- [Configuring Dynamic Bandwidth Management Using Container LSP on page 437](#)
- [Example: Configuring Dynamic Bandwidth Management Using Container LSP on page 441](#)
- [Configuring On-Demand Loss and Delay Measurement on page 466](#)
- [Example: Configuring On-Demand Loss and Delay Measurement on page 467](#)
- [Configuring Pro-Active Loss and Delay Measurements on page 476](#)
- [Example: Configuring Pro-active Loss and Delay Measurements for Bidirectional MPLS LSPs on page 478](#)
- [MPLS Encapsulated Payload Load-balancing Overview on page 485](#)
- [Configuring MPLS Encapsulated Payload for Load Balancing on page 486](#)

## Configuring the Maximum Number of MPLS Labels

For interfaces that you configure for MPLS applications, you can set the maximum number of labels upon which MPLS can operate.

By default, the maximum number of labels is three. You can change the maximum to four labels or five labels for applications that require four or five labels.



**NOTE:** When the maximum number of MPLS labels of an interface is modified, the MPLS interface is bounced. All LDP and RSVP sessions on that interface are restarted, resulting in all LSPs over that interface to flap.

For example, suppose you configure a two-tier carrier-of-carriers VPN service for customers who provide VPN service. A carrier-of-carrier VPN is a two-tiered relationship between a provider carrier (Tier 1 ISP) and a customer carrier (Tier 2 ISP). In a carrier-of-carrier VPN, the provider carrier provides a VPN backbone network for the customer carrier. The customer carrier in turn provides Layer 3 VPN service to its end customers. The customer carrier sends labeled traffic to the provider carrier to deliver it to the next hop on the other side of the provider carrier's network. This scenario requires a three-label stack: one label for the provider carrier VPN, another label for the customer carrier VPN, and a third label for the transport route.

If you add fast reroute service, the PE routers in the provider carrier's network must be configured to support a fourth label (the reroute label). If the customer carrier is using LDP as its signaling protocol and the provider carrier is using RSVP, the provider carrier must support LDP over RSVP tunnel service. This additional service requires an additional label, for a total of five labels.

To the customer carrier, the router it uses to connect to the provider carrier's VPN is a PE router. However, the provider carrier views this device as a CE router.

Table 8 on page 362 summarizes the label requirements.

**Table 8: Sample Scenarios for Using 3, 4, or 5 MPLS Labels**

| Number of Labels Required | Scenarios                                                                                                          |
|---------------------------|--------------------------------------------------------------------------------------------------------------------|
| 3                         | Carrier-of-carriers VPN or a VPN with two labels and fast reroute                                                  |
| 4                         | Combination of carrier-of-carriers and fast reroute                                                                |
| 5                         | Carrier-of-carriers with fast reroute and the customer carrier running LDP, with the provider carrier running RSVP |

The system reserves label space when you configure the maximum number of labels on the interface. When you configure features that require MPLS labels, the label push is automatic. You do not need to explicitly push the labels. The transport route can be a static, LDP-signaled, or RSVP-signaled LSP.



This feature is supported on the following routers:

- MX Series 3D Universal Edge Router
- M120 Multiservice Edge Router
- M320 Multiservice Edge Router with Enhanced III FPCs
- M7i Multiservice Edge Router and M10i Multiservice Edge Router with Enhanced Compact Forwarding Engine Board (CFEB-E)
- T640, T1600, TX Matrix, and TX Matrix Plus routers with Enhanced Scaling FPC1, Enhanced Scaling FP2, Enhanced Scaling FPC3, and Enhanced Scaling FPC4.

To configure and monitor the maximum number of labels:

1. Specify the maximum on the logical interface. Apply this configuration to the carrier's PE routers.

```
[edit interfaces ge-0/1/3 unit 0 family mpls]
user@switch# set maximum-labels 5
```

2. Verify the configuration.

```
[edit system]
user@switch# show interfaces ge-0/1/3.0
Logical interface ge-0/1/3.0 (Index 77) (SNMP ifIndex 507)
  Flags: SNMP-Traps Encapsulation: ENET2
  Input packets : 0
  Output packets: 0
  Protocol mpls, MTU: 1480, Maximum labels: 5
  Flags: Is-Primary
```

The command output includes the **Maximum labels: 5** field under the logical interface unit 0.

#### Related Documentation

- [Fast Reroute Overview on page 46](#)
- [Tunneling LDP LSPs in RSVP LSPs Overview on page 582](#)
- *Junos VPNs Configuration Guide* for a carrier-of-carriers configuration example

## Configuring MPLS to Pop the Label on the Ultimate-Hop Router

You can control the label value advertised on the egress router of a label-switched path (LSP). The default advertised label is label 3 (Implicit Null Label). If label 3 is advertised, the penultimate-hop router removes the label and sends the packet to the egress router. By enabling ultimate-hop popping, label 0 (IPv4 Explicit Null Label) is advertised. Ultimate-hop popping ensures that any packets traversing an MPLS network include a label.



**NOTE:** Juniper Networks routers queue packets based on the incoming label. Routers from other vendors might queue packets differently. Keep this in mind when working with networks containing routers from multiple vendors.

To configure MPLS to pop the label on the ultimate-hop router, include the **explicit-null** statement:

```
explicit-null;
```

You can configure this statement at the following hierarchy levels:

- [edit protocols mpls]
- [edit logical-systems *logical-system-name* protocols mpls]

**Related  
Documentation**

- [MPLS Label Overview on page 24](#)
- [MPLS Label Allocation on page 26](#)

---

## Advertising Explicit Null Labels to BGP Peers

For the IPv4 (**inet**) family only, BGP peers in a routing group can send an explicit NULL label for a set of connected routes (direct and loopback routes) for the inet labeled-unicast and inet6 labeled-unicast NLRI. By default, peers advertise label 3 (implicit NULL). If the **explicit-null** statement is enabled, peers advertise label 0 (explicit NULL). The explicit NULL labels ensures that labels are always present on packets traversing an MPLS network. If the implicit NULL label is used, the penultimate hop router removes the label and sends the packet as a plain IP packet to the egress router. This might cause issues in queuing the packet properly on the penultimate hop router if the penultimate hop is another vendor's router. Some other vendors queue packets based on the CoS bits in the outgoing label rather than the incoming label.

To advertise an explicit null label, include the following statements in the configuration:

```
family inet {  
  labeled-unicast {  
    aggregate-label {  
      community community-name;  
    }  
    explicit-null {  
      connected-only;  
    }  
  }  
}
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

The **connected-only** statement is required to advertise explicit null labels.

To verify that the explicit NULL label is being advertised for connected routes, use the **show route advertising-protocol bgp *neighbor-address*** command.

**Related  
Documentation**

- [Configuring MPLS and LDP to Pop the Label on the Ultimate-Hop Router on page 724](#)
- [Configuring RSVP to Pop the Label on the Ultimate-Hop Router on page 523](#)

## Configuring Traffic Engineering for LSPs

When you configure an LSP, a host route (a 32-bit mask) is installed in the ingress router toward the egress router; the address of the host route is the destination address of the LSP. The **bgp** option for the **traffic engineering** statement at the **[edit protocols mpls]** hierarchy level is enabled by default (you can also explicitly configure the **bgp** option), allowing only BGP to use LSPs in its route calculations. The other **traffic-engineering** statement options allow you to alter this behavior in the master routing instance. This functionality is not available for specific routing instances. Also, you can enable only one of the **traffic-engineering** statement options (**bgp**, **bgp-igp**, **bgp-igp-both-ribs**, or **mpls-forwarding**) at a time.



**NOTE:** Enabling or disabling any of the **traffic-engineering** statement options causes all the MPLS routes to be removed and then reinserted into the routing tables.

You can configure OSPF and traffic engineering to advertise the LSP metric in summary link-state advertisements (LSAs) as described in the section [“Advertising the LSP Metric in Summary LSAs” on page 367](#).

The following sections describe how to configure traffic engineering for LSPs:

- [Using LSPs for Both BGP and IGP Traffic Forwarding on page 365](#)
- [Using LSPs for Forwarding in Virtual Private Networks on page 366](#)
- [Using RSVP and LDP Routes for Forwarding but Not Route Selection on page 366](#)
- [Advertising the LSP Metric in Summary LSAs on page 367](#)

### Using LSPs for Both BGP and IGP Traffic Forwarding

You can configure BGP and the IGPs to use LSPs for forwarding traffic destined for egress routers by including the **bgp-igp** option for the **traffic-engineering** statement. The **bgp-igp** option causes all inet.3 routes to be moved to the inet.0 routing table.

On the ingress router, include **bgp-igp** option for the **traffic-engineering** statement:

```
traffic-engineering bgp-igp;
```

You can include this statement at the following hierarchy levels:

- **[edit protocols mpls]**
- **[edit logical-systems *logical-system-name* protocols mpls]**



**NOTE:** The **bgp-igp** option for the **traffic-engineering** statement cannot be configured for VPN). VPNs require that routes be in the inet.3 routing table.

## Using LSPs for Forwarding in Virtual Private Networks

VPNs require that routes remain in the inet.3 routing table to function properly. For VPNs, configure the **bgp-igp-both-ribs** option of the **traffic-engineering** statement to cause BGP and the IGP to use LSPs for forwarding traffic destined for egress routers. The **bgp-igp-both-ribs** option installs the ingress routes in both the inet.0 routing table (for IPv4 unicast routes) and the inet.3 routing table (for MPLS path information).

On the ingress router, include the **traffic-engineering bgp-igp-both-ribs** statement:

```
traffic-engineering bgp-igp-both-ribs;
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls]
- [edit logical-systems *logical-system-name* protocols mpls]

When you use the **bgp-igp-both-ribs** statement, the routes from the inet.3 table get copied into the inet.0 table. The copied routes are LDP-signaled or RSVP-signaled, and are likely to have a lower preference than other routes in inet.0. Routes with a lower preference are more likely to be chosen as the active routes. This can be a problem because routing policies only act upon active routes. To prevent this problem, use the **mpls-forwarding** option instead.

## Using RSVP and LDP Routes for Forwarding but Not Route Selection

If you configure the **bgp-igp** or **bgp-igp-both-ribs** options for the **traffic-engineering** statement, high-priority LSPs can supersede IGP routes in the inet.0 routing table. IGP routes might no longer be redistributed since they are no longer the active routes.

If you configure the **mpls-forwarding** option for the **traffic-engineering** statement, LSPs are used for forwarding but are excluded from route selection. These routes are added to both the inet.0 and inet.3 routing tables. LSPs in the inet.0 routing table are given a low preference when the active route is selected. However, LSPs in the inet.3 routing table are given a normal preference and are therefore used for selecting forwarding next hops.

When you activate the **mpls-forwarding** option, routes whose state is **ForwardingOnly** are preferred for forwarding even if their preference is lower than that of the currently active route. To examine the state of a route, execute a **show route detail** command.

To use LSPs for forwarding but exclude them from route selection, include the **mpls-forwarding** option for the **traffic-engineering** statement:

```
traffic-engineering mpls-forwarding;
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls]
- [edit logical-systems *logical-system-name* protocols mpls]

When you configure the **mpls-forwarding** option, IGP shortcut routes are copied to the inet.0 routing table only.

Unlike the **bgp-igp-both-ribs** option, the **mpls-forwarding** option allows you to use the LDP-signaled and RSVP-signaled routes for forwarding, and keep the BGP and IGP routes active for routing purposes so that routing policies can act upon them.

For example, suppose a router is running BGP and it has a BGP route of 10.10.10.1/32 that it needs to send to another BGP speaker. If you use the **bgp-igp-both-ribs** option, and your router also has a label-switched-path (LSP) to 10.10.10.1, the MPLS route for 10.10.10.1 becomes active in the inet.0 routing table. This prevents your router from advertising the 10.10.10.1 route to the other BGP router. On the other hand, if you use the **mpls-forwarding** option instead of the **bgp-igp-both-ribs** option, the 10.10.10.1/32 BGP route is advertised to the other BGP speaker, and the LSP is still used to forward traffic to the 10.10.10.1 destination.

## Advertising the LSP Metric in Summary LSAs

You can configure MPLS and OSPF to treat an LSP as a link. This configuration allows other routers in the network to use this LSP. To accomplish this goal, you need to configure MPLS and OSPF traffic engineering to advertise the LSP metric in summary LSAs.

For MPLS, include the **traffic-engineering bgp-igp** and **label-switched-path** statements:

```
traffic-engineering bgp-igp;
label-switched-path lsp-name {
    to address;
}
```

You can include these statements at the following hierarchy levels:

- [edit protocols mpls]
- [edit logical-systems *logical-system-name* protocols mpls]

For OSPF, include the **lsp-metric-into-summary** statement:

```
lsp-metric-into-summary;
```

You can include this statement at the following hierarchy levels:

- [edit protocols ospf traffic-engineering shortcuts]
- [edit logical-systems *logical-system-name* protocols ospf traffic-engineering shortcuts]

For more information about OSPF traffic engineering, see the *Junos OS Routing Protocols Library*.

## Enabling Interarea Traffic Engineering

The Junos OS can signal a contiguous traffic-engineered LSP across multiple OSPF areas. The LSP signaling must be done using either nesting or contiguous signaling, as described in RFC 4206, *Label-Switched Paths (LSP) Hierarchy with Generalized Multi-Protocol Label*

*Switching (GMPLS) Traffic Engineering (TE)*. However, contiguous signaling support is limited to just basic signaling. Reoptimization is not supported with contiguous signaling.

The following describes some of the interarea traffic engineering features:

- Interarea traffic engineering can be enabled when the loose-hop area border routers (ABRs) are configured on the ingress router using CSPF for the Explicit Route Object (ERO) calculation within an OSPF area. ERO expansion is completed on the ABRs.
- Interarea traffic engineering can be enabled when CSPF is enabled, but without ABRs specified in the LSP configuration on the ingress router (ABRs can be automatically designated).
- Differentiated Services (DiffServ) traffic engineering is supported as long as the class type mappings are uniform across multiple areas.

To enable interarea traffic engineering, include the **expand-loose-hop** statement in the configuration for each LSP transit router:

```
expand-loose-hop;
```

You can include this statement at the following hierarchy levels:

- **[edit protocols mpls]**
- **[edit logical-systems *logical-system-name* protocols mpls]**

---

## Enabling Inter-AS Traffic Engineering for LSPs

Generally, traffic engineering is possible for LSPs that meet the following conditions:

- Both ends of the LSP are in the same OSPF area or at the same IS-IS level.
- The two ends of the LSP are in different OSPF areas within the same autonomous system (AS). LSPs that end in different IS-IS levels are not supported.
- The two ends of an explicit-path LSP are in different OSPF ASs and the autonomous system border routers (ASBRs) are configured statically as the loose hops supported on the explicit-path LSP. For more information, see [“Configuring Explicit-Path LSPs” on page 306](#).

Without statically defined ASBRs on LSPs, traffic engineering is not possible between one routing domain, or AS, and another. However, when the ASs are under the control of single service provider, it is possible in some cases to have traffic engineered LSPs span the ASs and dynamically discover the OSPF ASBRs linking them (IS-IS is not supported with this feature).

Inter-AS traffic engineered LSPs are possible as long as certain network requirements are met, none of the limiting conditions apply, and OSPF passive mode is configured with EBGp. Details are provided in the following sections:

- [Inter-AS Traffic Engineering Requirements on page 369](#)
- [Inter-AS Traffic Engineering Limitations on page 369](#)
- [Configuring OSPF Passive TE Mode on page 370](#)

## Inter-AS Traffic Engineering Requirements

The proper establishment and functioning of inter-AS traffic engineered LSPs depend on the following network requirements, all of which must be met:

- All ASs are under control of a single service provider.
- OSPF is used as the routing protocol within each AS, and EBGp is used as the routing protocol between the ASs.
- ASBR information is available inside each AS.
- EBGp routing information is distributed by OSPF, and an IBGP full mesh is in place within each AS.
- Transit LSPs are *not* configured on the inter-AS links, but *are* configured between entry and exit point ASBRs on each AS.
- The EBGp link between ASBRs in different ASs is a direct link and must be configured as a passive traffic engineering link under OSPF. The remote link address itself, not the loopback or any other link address, is used as the remote node identifier for this passive link. For more information about OSPF passive traffic engineering mode configuration, see [“Configuring OSPF Passive TE Mode” on page 370](#).

In addition, the address used for the remote node of the OSPF passive traffic engineering link must be the same as the address used for the EBGp link. For more information about OSPF and BGP in general, see the *Junos OS Routing Protocols Library*.

## Inter-AS Traffic Engineering Limitations

Only LSP hierarchical, or nested, signaling is supported for inter-AS traffic engineered LSPs. Only point-to-point LSPs are supported (there is no point-to-multipoint support).

In addition, the following limitations apply. Any one of these conditions is sufficient to render inter-AS traffic engineered LSPs impossible, even if the above requirements are met.

- The use of multihop BGP is not supported.
- The use of policers or topologies that prevent BGP routes from being known inside the AS is not supported.
- Multiple ASBRs on a LAN between EBGp peers are not supported. Only one ASBR on a LAN between EBGp peers is supported (others ASBRs can exist on the LAN, but cannot be advertised).

- Route reflectors or policies that hide ASBR information or prevent ASBR information from being distributed inside the ASs are not supported.
- Bidirectional LSPs are not supported (LSPs are unidirectional from the traffic engineering perspective).
- Topologies with both inter-AS and intra-AS paths to the same destination are not supported.

In addition, several features that are routine with all LSPs are not supported with inter-AS traffic engineering:

- Admin group link colors are not supported.
- Secondary standby is not supported.
- Reoptimization is not supported.
- Crankback on transit routers is not supported.
- Diverse path calculation is not supported.
- Graceful restart is not supported.

These lists of limitations or unsupported features with inter-AS traffic engineered LSPs are not exhaustive.

## Configuring OSPF Passive TE Mode

Ordinarily, interior routing protocols such as OSPF are not run on links between ASs. However, for inter-AS traffic engineering to function properly, information about the inter-AS link, in particular, the address on the remote interface, must be made available inside the AS. This information is not normally included either in EBGp reachability messages or in OSPF routing advertisements.

To flood this link address information within the AS and make it available for traffic engineering calculations, you must configure OSPF passive mode for traffic engineering on each inter-AS interface. You must also supply the remote address for OSPF to distribute and include in the traffic engineering database.

To configure OSPF passive mode for traffic engineering on an inter-AS interface, include the **passive** statement for the link at the **[edit protocols ospf area *area-id* interface *interface-name*]** hierarchy level:

```
passive {
  traffic-engineering {
    remote-node-id ip-address; /* IP address at far end of inter-AS link */
  }
}
```

OSPF must be properly configured on the router. The following example configures the inter-AS link **so-1/1/0** to distribute traffic engineering information with OSPF within the AS. The remote IP address is **192.168.207.2**.

```
[edit protocols ospf area 0.0.0.0]
interface so-1/1/0 {
```



```

unit 0 {
  passive {
    traffic-engineering {
      remote-node-id 192.168.207.2;
    }
  }
}

```

## Configuring MPLS to Gather Statistics

You can configure MPLS so that it periodically gathers traffic statistics about all MPLS sessions, including transit sessions, by configuring the **statistics** statement. You must configure the **statistics** statement if you want to collect MPLS traffic statistics using SNMP polling of MPLS Management Information Bases (MIBs).

To enable or disable MPLS statistics collection, include the **statistics** statement:

```

statistics {
  auto-bandwidth (MPLS Statistics);
  file filename <files number> <size size> <world-readable | no-world-readable>;
  interval seconds;
  no-transit-statistics;
  transit-statistics-polling;
}

```

You can configure these statements at the following hierarchy levels:

- [edit protocols mpls]
- [edit logical-systems *logical-system-name* protocols mpls]

The default interval is 300 seconds.

If you configure the **file** option, the statistics are placed in a file, with one entry per LSP. During the specified interval, the following information is recorded in this file:

- The number of packets, number of bytes, packets per second, and bytes per second transmitted by each LSP. Feature parity for the display of packet and byte statistics for sub-LSPs of a point-to-multipoint LSP on the Junos Trio chipset is supported in Junos OS Releases 11.1R2, 11.2R2, and 11.4.
- The percent of bandwidth transmitted over a given LSP in relation to the bandwidth percentage configured for that LSP. If no bandwidth is configured for an LSP, 0 percent is recorded in the percentage column.

At the end of each periodic report, a summary shows the current time, total number of sessions, number of sessions read, number of sessions ignored, and read errors, if any. Ignored sessions are typically those not in the up state or those with a reserved (0 through 15) incoming label (typically the egress point of an LSP). The reason for a read error appears on the same line as the entry for the LSP on which the error occurred.

Gathering statistics is an unreliable process; occasional read errors might affect their accuracy. Sample output follows:

```
lsp6          0 pkt          0 Byte      0 pps      0 Bps      0
lsp5          0 pkt          0 Byte      0 pps      0 Bps      0
lsp6.1        34845 pkt      2926980 Byte 1049 pps   88179 Bps 132
lsp5.1        0 pkt          0 Byte      0 pps      0 Bps      0
lsp4          0 pkt          0 Byte      0 pps      0 Bps      0
Dec  7 17:28:38 Total 6 sessions: 5 success, 0 fail, 1 ignored
```

**Related Documentation**

- [Configuring Automatic Bandwidth Allocation for LSPs on page 286](#)

## Configuring System Log Messages and SNMP Traps for LSPs

Whenever an LSP makes a transition from up to down, or down to up, and whenever an LSP switches from one active path to another, the ingress router generates a system log message and sends an SNMP trap. The following shows a sample system log message:

```
RPD_MPLS_LSP_UP: MPLS LSP sheep1 up on primary(any) Route 192.168.1.1 192.168.1.2
192.168.1.3
RPD_MPLS_LSP_CHANGE: MPLS LSP sheep1 change on primary(any) Route 192.168.1.1
192.168.1.2 192.168.1.3
RPD_MPLS_LSP_DOWN: MPLS LSP sheep1 down on primary(any)
```

For information about the MPLS SNMP traps and the proprietary MPLS MIBs, see the *Network Management Administration Guide*.

System log messages for LSPs are generated by default. To disable the default logging of messages for LSPs, configure the **no-syslog** option under the **log-updown** statement:

```
log-updown {
  no-syslog;
}
```

To generate SNMP traps for LSPs, include the **trap** option to the **log-updown** statement:

```
log-updown {
  trap;
}
```

To generate SNMP traps whenever an LSP path goes down, include the **trap-path-down** option to the **log-updown** statement:

```
log-updown {
  trap-path-down;
}
```

To generate SNMP traps whenever an LSP path comes up, include the **trap-path-up** option to the **log-updown** statement:

```
log-updown {
  trap-path-up;
}
```

To disable the generation of system log messages, include the **no-syslog** option to the **log-updown** statement:

```
log-updown {
  no-syslog;
}
```

To disable the generation of SNMP traps, include the **no-trap** statement:

```
no-trap {
  mpls-lsp-traps;
  rfc3812-traps;
}
```

You can include this statement at the following hierarchy levels:

- **[edit protocols mpls log-updown]**
- **[edit logical-systems *logical-system-name* protocols mpls log-updown]**

For scalability reasons, only the ingress router generates SNMP traps. By default, MPLS issues traps for all configured LSPs. If you have many LSPs, the number of traps can become quite large. To disable the generation of SNMP traps, configure the **no-trap** statement.

The **no-trap** statement also includes the following options which allow you to block certain categories of MPLS SNMP traps:

- **mpls-lsp-traps**—Blocks the MPLS LSP traps defined in the **jnx-mpls.mib**, but allows the **rfc3812.mib** traps.
- **rfc-3812-traps**—Blocks the traps defined in the **rfc3812.mib**, but allows the MPLS LSP traps defined in the **jnx-mpls.mib**.

## Configuring MPLS Firewall Filters and Policers

You can configure an MPLS firewall filter to count packets based on the EXP bits for the top-level MPLS label in a packet. You can also configure policers for MPLS LSPs.

The following sections discuss MPLS firewall filters and policers:

- [Configuring MPLS Firewall Filters on page 373](#)
- [Examples: Configuring MPLS Firewall Filters on page 374](#)
- [Configuring Policers for LSPs on page 375](#)
- [Example: Configuring an LSP Policer on page 377](#)
- [Configuring Automatic Policers on page 377](#)
- [Writing Different DSCP and EXP Values in MPLS-Tagged IP Packets on page 381](#)

### Configuring MPLS Firewall Filters

You can configure an MPLS firewall filter to count packets based on the EXP bits for the top-level MPLS label in a packet. You can then apply this filter to a specific interface. You can also configure a policer for the MPLS filter to police (that is, rate-limit) the traffic on the interface to which the filter is attached. You cannot apply MPLS firewall filters to Ethernet (fxp0) or loopback (lo0) interfaces.

You can configure an MPLS firewall filter on the M Series Multiservice Edge Routers and the T Series Core Routers.

You can configure the following match criteria attributes for MPLS filters at the **[edit firewall family mpls filter *filter-name* term *term-name* from]** hierarchy level:

- **exp**
- **exp-exception**

These attributes can accept EXP bits in the range 0 through 7. You can configure the following choices:

- A single EXP bit—for example, **exp 3;**
- Several EXP bits—for example, **exp 0, 4;**
- A range of EXP bits—for example, **exp [0-5];**

If you do not specify a match criterion (that is, you do not configure the **from** statement and use only the **then** statement with the **count** action keyword), all the MPLS packets passing through the interface on which the filter is applied will be counted.

You also can configure any of the following action keywords at the **[edit firewall family mpls filter *filter-name* term *term-name* then]** hierarchy level:

- **count**
- **accept**
- **discard**
- **next**
- **policer**

For more information about how to configure firewall filters, see the *Routing Policies, Firewall Filters, and Traffic Policers Feature Guide for Routing Devices*. For more information about how to configure interfaces, see the *Junos OS Network Interfaces Library for Routing Devices* and the *Junos OS Services Interfaces Library for Routing Devices*.

## Examples: Configuring MPLS Firewall Filters

The following examples illustrate how you might configure an MPLS firewall filter and then apply the filter to an interface. This filter is configured to count MPLS packets with EXP bits set to either 0 or 4.

The following shows a configuration for an MPLS firewall filter:

```
[edit firewall]
family mpls {
  filter expf {
    term expt0 {
      from {
        exp 0,4;
      }
    }
  }
}
```

```

        then {
            count counter0;
            accept;
        }
    }
}

```

The following shows how to apply the MPLS firewall filter to an interface:

```

[edit interfaces]
so-0/0/0 {
    mtu 4474;
    encapsulation ppp;
    sonet-options {
        fcs 32;
    }
    unit 0 {
        point-to-point;
        family mpls {
            filter {
                input expf;
                output expf;
            }
        }
    }
}

```

The MPLS firewall filter is applied to the input and output of an interface (see the **input** and **output** statements in the preceding example).

## Configuring Policers for LSPs

MPLS LSP policing allows you to control the amount of traffic forwarded through a particular LSP. Policing helps to ensure that the amount of traffic forwarded through an LSP never exceeds the requested bandwidth allocation. LSP policing is supported on regular LSPs, LSPs configured with DiffServ-aware traffic engineering, and multiclass LSPs. You can configure multiple policers for each multiclass LSP. For regular LSPs, each LSP policer is applied to all of the traffic traversing the LSP. The policer's bandwidth limitations become effective as soon as the total sum of traffic traversing the LSP exceeds the configured limit.

You configure the multiclass LSP and DiffServ-aware traffic engineering LSP policers in a filter. The filter can be configured to distinguish between the different class types and apply the relevant policer to each class type. The policers distinguish between class types based on the EXP bits.

You configure LSP policers under the **family any** filter. The **family any** filter is used because the policer is applied to traffic entering the LSP. This traffic might be from different families: IPv6, MPLS, and so on. You do not need to know what sort of traffic is entering the LSP, as long as the match conditions apply to all types of traffic.

You can configure only those match conditions that apply across all types of traffic. The following are the supported match conditions for LSP policers:

- **forwarding-class**
- **packet-length**
- **interface**
- **interface-set**

To enable a policer on an LSP, first you need to configure a policing filter and then include it in the LSP configuration. For information about how to configure policers, see the *Routing Policies, Firewall Filters, and Traffic Policers Feature Guide for Routing Devices*.

To configure a policer for an LSP, specify a filter by including the **filter** option to the **policing** statement:

```
policing {  
    filter filter-name;  
}
```

You can include the **policing** statement at the following hierarchy levels:

- [edit protocols mpls **label-switched-path** *lsp-name*]
- [edit protocols mpls **static-label-switched-path** *lsp-name*]
- [edit logical-systems *logical-system-name* protocols mpls **label-switched-path** *lsp-name*]
- [edit logical-systems *logical-system-name* protocols mpls **static-label-switched-path** *lsp-name*]

---

### LSP Policer Limitations

When configuring MPLS LSP policers, be aware of the following limitations:

- LSP policers are supported for packet LSPs only.
- LSP policers are supported for unicast next hops only. Multicast next hops are not supported.
- LSP policers are not supported on aggregated interfaces.
- The LSP policer runs before any output filters.
- Traffic sourced from the Routing Engine (for example, ping traffic) does not take the same forwarding path as transit traffic. This type of traffic cannot be policed.
- LSP policers work on all T Series routers and on M Series routers that have the Internet Processor II application-specific integrated circuit (ASIC).



**NOTE:** Starting with Junos OS Release 12.2R2, on T Series routers only, you can configure an LSP policer for a specific LSP to be shared across different protocol family types. To do so, you must configure the *logical-interface-policer* statement at the [edit firewall policer *policer-name*] hierarchy level.

---

## Example: Configuring an LSP Policer

The following example shows how you can configure a policing filter for an LSP:

```
[edit firewall]
policer police-ct1 {
  if-exceeding {
    bandwidth-limit 50m;
    burst-size-limit 1500;
  }
  then {
    discard;
  }
}
policer police-ct0 {
  if-exceeding {
    bandwidth-limit 200m;
    burst-size-limit 1500;
  }
  then {
    discard;
  }
}
family any {
  filter bar {
    term discard-ct0 {
      then {
        policer police-ct0;
        accept;
      }
    }
    term discard-ct1 {
      then {
        policer police-ct1;
        accept;
      }
    }
  }
}
```

## Configuring Automatic Policers

Automatic policing of LSPs allows you to provide strict service guarantees for network traffic. Such guarantees are especially useful in the context of Differentiated Services for traffic engineered LSPs, providing better emulation for ATM wires over an MPLS network. For more information about Differentiated Services for LSPs, see [“DiffServ-Aware Traffic Engineering Introduction” on page 338](#).

Differentiated Services for traffic engineered LSPs allow you to provide differential treatment to MPLS traffic based on the EXP bits. To ensure these traffic guarantees, it is insufficient to simply mark the traffic appropriately. If traffic follows a congested path, the requirements might not be met.

LSPs are guaranteed to be established along paths where enough resources are available to meet the requirements. However, even if the LSPs are established along such paths and are marked properly, these requirements cannot be guaranteed unless you ensure that no more traffic is sent to an LSP than there is bandwidth available.

It is possible to police LSP traffic by manually configuring an appropriate filter and applying it to the LSP in the configuration. However, for large deployments it is cumbersome to configure thousands of different filters. Configuration groups cannot solve this problem either, since different LSPs might have different bandwidth requirements, requiring different filters. To police traffic for numerous LSPs, it is best to configure automatic policers.

When you configure automatic policers for LSPs, a policer is applied to all of the LSPs configured on the router. However, you can disable automatic policing on specific LSPs.



**NOTE:** When you configure automatic policers for DiffServ-aware traffic engineering LSP, GRES is not supported.



**NOTE:** You cannot configure automatic policing for LSPs carrying CCC traffic.

The following sections describe how to configure automatic policers for LSPs:

- [Configuring Automatic Policers for LSPs on page 378](#)
- [Configuring Automatic Policers for DiffServ-Aware Traffic Engineering LSPs on page 379](#)
- [Configuring Automatic Policers for Point-to-Multipoint LSPs on page 379](#)
- [Disabling Automatic Policing on an LSP on page 380](#)
- [Example: Configuring Automatic Policing for an LSP on page 380](#)

---

### Configuring Automatic Policers for LSPs

---

To configure automatic policers for standard LSPs (neither DiffServ-aware traffic engineered LSPs nor multiclass LSPs), include the **auto-policing** statement with either the **class all *policer-action*** option or the **class ct0 *policer-action*** option:

```
auto-policing {  
    class all policer-action;  
    class ct0 policer-action;  
}
```

You can include this statement at the following hierarchy levels:

- **[edit protocols mpls]**
- **[edit logical-systems *logical-system-name* protocols mpls]**

You can configure the following policer actions for automatic policers:

- **drop**—Drop all packets.



- **loss-priority-high**—Set the packet loss priority (PLP) to high.
- **loss-priority-low**—Set the PLP to low.

These policer actions are applicable to all types of LSPs. The default policer action is to do nothing.

Automatic policers for LSPs police traffic based on the amount of bandwidth configured for the LSPs. You configure the bandwidth for an LSP using the **bandwidth** statement at the **[edit protocols mpls label-switched-path *lsp-path-name*]** hierarchy level. If you have enabled automatic policers on a router, change the bandwidth configured for an LSP, and commit the revised configuration, the change does not take effect on the active LSPs. To force the LSPs to use the new bandwidth allocation, issue a **clear mpls lsp** command.



**NOTE:** You cannot configure automatic policers for LSPs that traverse aggregated interfaces or Multilink Point-to-Point Protocol (MLPPP) interfaces.

### Configuring Automatic Policers for DiffServ-Aware Traffic Engineering LSPs

To configure automatic policers for DiffServ-aware traffic engineering LSPs and for multiclass LSPs, include the **auto-policing** statement:

```
auto-policing {
  class all policer-action;
  class ctnumber policer-action;
}
```

You can include this statement at the following hierarchy levels:

- **[edit protocols mpls]**
- **[edit logical-systems *logical-system-name* protocols mpls]**

You include either the **class all *policer-action*** statement or a **class *ctnumber* *policer-action*** statement for each of one or more classes (you can configure a different policer action for each class). For a list of the actions that you can substitute for the ***policer-action*** variable, see “[Configuring Automatic Policers for LSPs](#)” on page 378. The default policer action is to do nothing.



**NOTE:** You cannot configure automatic policers for LSPs that traverse aggregated interfaces or MLPPP interfaces.

### Configuring Automatic Policers for Point-to-Multipoint LSPs

You can configure automatic policers for point-to-multipoint LSPs by including the **auto-policing** statement with either the **class all *policer-action*** option or the **class *ct0* *policer-action*** option. You only need to configure the **auto-policing** statement on the primary point-to-multipoint LSP (for more information on primary point-to-multipoint LSPs, see “[Configuring the Primary Point-to-Multipoint LSP](#)” on page 311). No additional

configuration is required on the subLSPs for the point-to-multipoint LSP.

Point-to-multipoint automatic policing is applied to all branches of the point-to-multipoint LSP. In addition, automatic policing is applied to any local VRF interfaces that have the same forwarding entry as a point-to-multipoint branch. Feature parity for automatic policers for MPLS point-to-multipoint LSPs on the Junos Trio chipset is supported in Junos OS Releases 11.1R2, 11.2R2, and 11.4.

The automatic policer configuration for point-to-multipoint LSPs is identical to the automatic policer configuration for standard LSPs. For more information, see [“Configuring Automatic Policers for LSPs” on page 378](#).

---

### Disabling Automatic Policing on an LSP

When you enable automatic policing, all of the LSPs on the router or logical system are affected. To disable automatic policing on a specific LSP on a router where you have enabled automatic policing, include the **policing** statement with the **no-auto-policing** option:

```
policing no-auto-policing;
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls [label-switched-path](#) *lsp-name*]
- [edit logical-systems *logical-system-name* protocols mpls [label-switched-path](#) *lsp-name*]

---

### Example: Configuring Automatic Policing for an LSP

Configure automatic policing for a multiclass LSP, specifying different actions for class types **ct0**, **ct1**, **ct2**, and **ct3**.

```
[edit protocols mpls]
diffserv-te {
  bandwidth-model extended-mam;
}
auto-policing {
  class ct1 loss-priority-low;
  class ct0 loss-priority-high;
  class ct2 drop;
  class ct3 loss-priority-low;
}
traffic-engineering bgp-igp;
label-switched-path sample-lsp {
  to 3.3.3.3;
  bandwidth {
    ct0 11;
    ct1 1;
    ct2 1;
    ct3 1;
  }
}
interface fxp0.0 {
  disable;
}
interface tl-0/5/3.0;
```

```
interface t1-0/5/4.0;
```

## Writing Different DSCP and EXP Values in MPLS-Tagged IP Packets

You can selectively set the DiffServ code point (DSCP) field of MPLS-tagged IPv4 and IPv6 packets to 0 without affecting output queue assignment, and continue to set the MPLS EXP field according to the configured rewrite table, which is based on forwarding classes. You can accomplish this by configuring a firewall filter for the MPLS-tagged packets.

For instructions on how to write different DSCP and EXP values in MPLS-tagged IP packets, see the *Class of Service Feature Guide for Routing Devices*. For instructions on how to configure firewall filters, see the *Routing Policies, Firewall Filters, and Traffic Policers Feature Guide for Routing Devices*.

**Related Documentation**

- [Firewall Filter Match Conditions for MPLS Traffic](#)

## Configuring MPLS Rewrite Rules

You can apply a number of different rewrite rules to MPLS packets.

For more information about how to configure statements at the **[edit class-of-service]** hierarchy level, see the *Class of Service Feature Guide for Routing Devices*.

The following sections describe how you can apply rewrite rules to MPLS packets:

- [Rewriting the EXP Bits of All Three Labels of an Outgoing Packet on page 381](#)
- [Rewriting MPLS and IPv4 Packet Headers on page 382](#)

### Rewriting the EXP Bits of All Three Labels of an Outgoing Packet

In interprovider, carrier-of-carrier, and complex traffic engineering scenarios, it is sometimes necessary to push three labels on the next hop.

By default, on M Series routers except the M320, the top MPLS EXP label of an outgoing packet is not rewritten when you configure swap-push-push and triple-push operations. You can rewrite the EXP bits of all three labels of an outgoing packet, thereby maintaining the class of service (CoS) of an incoming MPLS or non-MPLS packet.

To push three labels on incoming MPLS packets, include the **exp-swap-push-push default** statement at the **[edit class-of-service interfaces *interface-name* unit *logical-unit-number* rewrite-rules]** hierarchy level:

```
[edit class-of-service interfaces interface-name unit logical-unit-number rewrite-rules]
exp-swap-push-push default;
```

To push three labels on incoming non-MPLS packets, include the **exp-push-push-push default** statement at the **[edit class-of-service interfaces *interface-name* unit *logical-unit-number* rewrite-rules]** hierarchy level:

```
[edit class-of-service interfaces interface-name unit logical-unit-number rewrite-rules]
exp-push-push-push default;
```

For more information about how to configure statements at the **[edit class-of-service]** hierarchy level, see the *Class of Service Feature Guide for Routing Devices*.

## Rewriting MPLS and IPv4 Packet Headers

You can apply a rewrite rule to MPLS and IPv4 packet headers simultaneously. This allows you to initialize MPLS EXP and IP precedence bits at LSP ingress. You can configure different rewrite rules depending on whether the traffic is VPN or non-VPN.

To rewrite MPLS and IPv4 packet headers, include the **protocol** statement at the **[edit class-of-service interfaces *interface-name* unit *logical-unit-number* rewrite-rules exp *rewrite-rule-name*]** hierarchy level:

```
[edit class-of-service interfaces interface-name unit logical-unit-number rewrite-rules exp  
  rewrite-rule-name]  
  protocol types;
```

Use the **protocol** statement to specify the types of MPLS packets and packet headers to which to apply the rewrite rule. The MPLS packet can be a standard MPLS packet or an MPLS packet with an IPv4 payload. Specify the type of MPLS packet by using the following options:

- **mpls-any**—Applies the rewrite rule to MPLS packets and writes the code point value to MPLS headers.
- **mpls-inet-both**—Applies the rewrite rule to VPN MPLS packets with IPv4 payloads. Writes the code point value to the MPLS and IPv4 headers in T Series (except T4000 routers) and M320 routers. On M Series routers, except the M320, the **mpls-inet-both** option causes all ingress MPLS LSP packets with IPv4 payloads to be initialized with 000 code points for IP precedence and MPLS EXP values.
- **mpls-inet-both-non-vpn**—Applies the rewrite rule to any non-VPN MPLS packets with IPv4 payloads. Writes the code point value to the MPLS and IPv4 headers in T Series and M320 routers. On M Series routers, except the M320, the **mpls-inet-both-non-vpn** option causes all ingress MPLS LSP packets with IPv4 payloads to be initialized with 000 code points for IP precedence and MPLS EXP values.

For a detailed example on how to configure rewrite rules for MPLS and IPv4 packets and for more information about how to configure class of service, see the *Class of Service Feature Guide for Routing Devices*.

---

## Configuring BFD for MPLS IPv4 LSPs

You can configure Bidirectional Forwarding Detection (BFD) protocol on MPLS IPv4 LSPs as outlined in the Internet draft draft-ietf-bfd-mpls-02.txt, *BFD for MPLS LSPs*. BFD is used as a periodic Operation, Administration, and Maintenance (OAM) feature for LSPs to detect LSP data plane faults. You can configure BFD for LSPs that use either LDP or RSVP as the signaling protocol.

You can also use the LSP **ping** commands to detect LSP data plane faults. However, BFD has a couple of benefits: it requires less computer processing than LSP **ping** commands and can quickly detect faults in large numbers of LSPs (LSP **ping** commands must be issued for each LSP individually). On the other hand, BFD cannot be used to

verify the control plane against the data plane at the egress LSR, which is possible when an LSP **ping** echo request is associated with a forwarding equivalence class (FEC).

The BFD failure detection timers are adaptive and can be adjusted to be more or less aggressive. For example, the timers can adapt to a higher value if the adjacency fails, or a neighbor can negotiate a higher value for a timer than the configured value. The timers adapt to a higher value when a BFD session flap occurs more than three times in a span of 15 seconds. A back-off algorithm increases the receive (Rx) interval by two if the local BFD instance is the reason for the session flap. The transmission (Tx) interval is increased by two if the remote BFD instance is the reason for the session flap. You can use the **clear bfd adaptation** command to return BFD interval timers to their configured values. The **clear bfd adaptation** command is hitless, meaning that the command does not affect traffic flow on the routing device.

Starting from Junos OS Release 13.2R4, 13.3R2, and 14.1, you can set the time interval between LSP ping messages and the number of LSP ping responses, respectively, after which the Bidirectional Forwarding Detection (BFD) session is brought down. To so do, you configure the **lsp-ping-interval** statement and the **lsp-ping-multiplier** statement at the **[edit protocols mpls oam]** hierarchy level.

For configuration instructions for LDP-signaled LSPs, see [“Configuring BFD for LDP LSPs” on page 620](#). For configuration instructions for RSVP-signaled LSPs, see the following section.

## Configuring BFD for RSVP-Signaled LSPs

BFD for RSVP supports unicast IPv4 LSPs. When BFD is configured for an RSVP LSP on the ingress router, it is enabled on the primary path and on all standby secondary paths for that LSP. The source IP address for outgoing BFD packets from the egress side of an MPLS BFD session is based on the outgoing interface IP address. You can enable BFD for all LSPs on a router or for specific LSPs. If you configure BFD for a specific LSP, whatever values configured globally for BFD are overridden. The BFD sessions originate only at the ingress router and terminate at the egress router.

An error is logged whenever a BFD session for a path fails. The following example shows how BFD for RSVP LSP log messages might appear:

```
RPD_MPLS_PATH_BFD_UP: MPLS BFD session for path path1 up on LSP R0_to_R3
RPD_MPLS_PATH_BFD_DOWN: MPLS BFD session for path path1 down on LSP R0_to_R3
```

You can configure BFD for all of the RSVP LSPs on the router, a specific LSP, or the primary path of a specific LSP. To configure BFD for RSVP LSPs, include the **oam** and **bfd-liveness-detection** statements.

```
oam {
  bfd-liveness-detection {
    failure-action {
      make-before-break teardown-timeout seconds;
      teardown;
    }
    failure-action teardown;
    minimum-interval milliseconds;
    minimum-receive-interval milliseconds;
```

```

        minimum-transmit-interval milliseconds;
        multiplier detection-time-multiplier;
    }
    lsp-ping-interval time-interval;
    lsp-ping-multiplier multiplier;
}

```

You can configure this statement at the following hierarchy levels:

- [edit protocols mpls]
- [edit protocols mpls **label-switched-path** *lsp-name*]
- [edit protocols mpls **label-switched-path** *lsp-name* **primary** *path-name*]

The **bfd-liveness-detection** statement includes the following options:

- **minimum-interval**—Specifies the minimum transmit and receive interval.
- **minimum-receive-interval**—Specifies the minimum receive interval. The range is from 1 through 255,000 milliseconds.
- **minimum-transmit-interval**—Specifies the minimum transmit interval. The range is from 1 through 255,000 milliseconds.
- **lsp-ping-multiplier**—Specifies the detection time multiplier. The range is from 1 through 255.



**NOTE:** To avoid triggering false negatives, configure a BFD fault detection time that is longer than the fast reroute time.

You can also configure the **lsp-ping-interval** option to adjust the time interval between LSP pings. The LSP ping command for RSVP-signaled LSPs is **ping mpls rsvp**. For more information on the **ping mpls rsvp** command, see the [CLI Explorer](#).

## Configuring a Failure Action for the BFD Session on an RSVP LSP

When the BFD session for an RSVP LSP goes down, the LSP is torn down and resigaled. Traffic can be switched to a standby LSP, or you can simply tear down the LSP path. Any actions performed are logged.

When a BFD session for an RSVP LSP path goes down, you can configure the Junos OS to resignal the LSP path or to simply disable the LSP path. A standby LSP path could be configured to handle traffic while the primary LSP path is unavailable. The router can automatically recover from LSP failures that can be detected by BFD. By default, if a BFD session fails, the event is simply logged.

To enable the Junos OS to tear down an RSVP LSP path in the event of a BFD event, include the **failure-action** statement:

```

failure-action {
    make-before-break teardown-timeout seconds;
    teardown;
}

```

For a list of the hierarchy levels at which you can include this statement, see the statement summary section for this statement.

You can configure either the **teardown** or **make-before-break** options:

- **teardown**—Causes the LSP path to be taken down and resigaled immediately.
- **make-before-break**—Causes the Junos OS to attempt to signal a new LSP path before tearing down the old LSP path. You can also configure the **teardown-timeout** option to automatically tear down the LSP after the time period specified if the attempt to resignal the LSP fails within the **teardown-timeout** interval. If you specify a value of 0 for the **teardown-timeout** interval, the LSP is taken down and resigaled immediately (the same behavior as when you configure the **teardown** option).

To configure a failure action for all of the RSVP LSPs, include the **failure-action** statement at the **[edit protocols mpls oam bfd-liveness-detection]** hierarchy level. To configure a failure action for a specific RSVP LSP, include the **failure-action** statement at the **[edit protocols mpls label-switched-path *lsp-name* oam bfd-liveness-detection]** hierarchy level.

To configure a failure action for a specific primary path, include the **failure-action** statement at the **[edit protocols mpls label-switched path *lsp-name* primary *path-name* oam bfd-liveness-detection]** hierarchy level. To configure a failure action for a specific secondary LSP path, include the **failure-action** statement at the **[edit protocols mpls label-switched-path *lsp-name* secondary *path-name* oam bfd-liveness-detection]** hierarchy level.

Release History Table

| Release | Description                                                                                                                                                                                                                                            |
|---------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 13.2R4  | Starting from Junos OS Release 13.2R4, 13.3R2, and 14.1, you can set the time interval between LSP ping messages and the number of LSP ping responses, respectively, after which the Bidirectional Forwarding Detection (BFD) session is brought down. |

## BFD-Triggered Local Repair for Rapid Convergence

- [Understanding BFD-Triggered Local Protection on page 385](#)
- [Disabling BFD-Triggered Local Repair on page 387](#)

### Understanding BFD-Triggered Local Protection

The time it takes for a network to converge following a link or node failure can vary dramatically based on a number of factors, including network size, the protocols used, and network design. However, while each particular convergence event is different, the process of convergence is essentially consistent. The failure is detected, the failure is reported (flooded) in the network, an alternate path is found for traffic, and the forwarding plane is updated to pass traffic on a new path.

This overview discusses how Bidirectional Forwarding Detection (BFD)-triggered local repair contributes to a quicker restoration time for rapid convergence in an MPLS network.

- [Purpose of BFD-Triggered Local Repair on page 386](#)
- [Configuring BFD-Triggered Local Repair on page 387](#)


### Purpose of BFD-Triggered Local Repair

In Junos OS, general MPLS traffic protection for RSVP-signaled label-switched path (LSP) failures is provided by several complementary mechanisms. These protection mechanisms include local protection (fast reroute, link protection, and node-link protection) and path protection (primary and secondary paths). Local protection in conjunction with path protection can provide minimum packet loss for an LSP, and control the way the LSP is rerouted after a failure. Traditionally, both types of protection rely on fast detection of connectivity failure at the physical level. However, for transmission media without fast physical level detection, Junos OS supports BFD and MPLS ping for fast failure detection.

With links between routers, when a route goes down, the routing protocol process recalculates the next best path. When MPLS fast reroute (FRR) is enabled, ifl messages are flooded to all Flexible PIC Concentrators (FPCs). The edge FPC enables the bypass MPLS LSP tunnel. Lastly, all routes are repaired and sent through the bypass MPLS LSP tunnel. The amount of time it takes to repair all routes is proportional to the number of routes.

This repair scenario becomes more difficult when a switch lies between two links. See [Figure 37 on page 386](#).

**Figure 37: Topology with BFD-Triggered Local Repair**

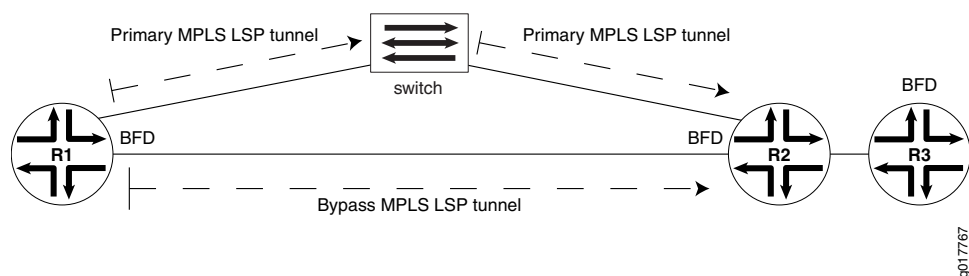

When a link goes down at the remote end, the failure is not detected at the local end until the interior gateway protocol (IGP) goes down. To wait for the routing protocol process to recalculate the next best path takes too much time.

With BFD-triggered local repair enabled, the Packet Forwarding Engine completes the repair first, using the bypass MPLS LSP tunnel (that is preconfigured and installed), then informs the routing protocol process to recalculate a new route. By doing this, when the primary MPLS LSP tunnel goes down, the FPC can intermittently and immediately divert traffic to the FPC with the bypass MPLS LSP tunnel.

Using local repair in this way achieves a faster restoration time of less than 50 ms.



### Configuring BFD-Triggered Local Repair

BFD-triggered local repair is not configurable, but is part of the default configuration.

BFD-triggered local repair works within the legacy Junos OS features MPLS-FRR, BFD for IGP, and loop-free alternates (LFAs).

### Disabling BFD-Triggered Local Repair

By default, BFD-triggered local repair is enabled for all routing interfaces. If desired, you can disable BFD-triggered local repair at the **[edit routing-options]** hierarchy level.

#### Disabling BFD-Triggered Local Repair

To explicitly disable BFD-triggered local repair:

1. Include the **no-bfd-triggered-local-repair** statement at the **[edit routing-options]** hierarchy level:

```
user@host# set no-bfd-triggered-local-repair
```

2. (Optional) Verify your configuration settings before committing them by using the **show routing-options** command.

```
user@host# run show routing-options
```

Confirm your configuration by issuing the **show routing-options** command.

```
user@host# show routing-options
...
no-bfd-triggered-local-repair;
}
```



**NOTE:** When you disable this feature, you must also restart routing by including the **graceful-restart** statement for the IGP. For example, for OSPF, this is accomplished by including the **graceful-restart** statement at the **[edit protocols ospf]** hierarchy level.

#### Related Documentation

- [Configuring BFD for LDP LSPs on page 620](#)
- [Configuring Link Protection on Interfaces Used by LSPs on page 536](#)
- [Configuring Fast Reroute on page 254](#)
- [Configuring Graceful Restart for Point-to-Multipoint LSPs on page 333](#)
- *graceful-restart (Protocols OSPF)*

## Pinging LSPs

---

The following sections describe how to use the **ping mpls** command to confirm LSP functioning.

- [Pinging MPLS LSPs on page 388](#)
- [Pinging Point-to-Multipoint LSPs on page 388](#)
- [Pinging the Endpoint Address of MPLS LSPs on page 389](#)
- [Pinging CCC LSPs on page 389](#)
- [Pinging Layer 3 VPNs on page 389](#)
- [Support for LSP Ping and Traceroute Commands Based on RFC 4379 on page 389](#)

### Pinging MPLS LSPs

You can ping a specific LSP. Echo requests are sent over the LSP as MPLS packets. The payload is a User Datagram Protocol (UDP) packet forwarded to an address in the 127/8 range (127.0.0.1 by default, this address is configurable) and port 3503. The label and interface information for building and sending this information as an MPLS packet is the same as for standard LSP traffic.

When the echo request arrives at the egress node, the receiver checks the contents of the packet and sends a reply containing the correct return value, by using UDP. The router sending the echo request waits to receive an echo reply after a timeout of 2 seconds (you cannot configure this value).

You must configure MPLS at the **[edit protocols mpls]** hierarchy level on the remote router to be able to ping an LSP terminating there. You must configure MPLS even if you intend to ping only LDP forwarding equivalence classes (FECs).

To ping an MPLS LSP use the **ping mpls <count count> <ldp <fec>> <rsvp <exp forwarding-class> <lsp-name>>** command. To ping a secondary MPLS LSP, use the **ping mpls <count count> <rsvp <lsp-name>> standby path-name** command. For a detailed description of this command, see the [CLI Explorer](#).



**NOTE:** The **ping mpls** command is not supported within routing instances.

---

### Pinging Point-to-Multipoint LSPs

To ping a point-to-multipoint LSP, use the **ping mpls rsvp lsp-name multipoint** or **ping mpls rsvp egress address** commands. The **ping mpls rsvp lsp-name multipoint** command returns a list of all of the egress router identifiers and the current status of the point-to-multipoint LSP egress routers. The **ping mpls rsvp lsp-name multipoint egress address** command returns the current status of the specified egress router.

## Pinging the Endpoint Address of MPLS LSPs

To determine whether an LSP between two provider edge (PE) routers is up and running, you can ping the endpoint address of the LSP. To ping an MPLS LSP endpoint, use the **ping mpls lsp-end-point address** command. This command tells you what type of LSP (RSVP or LDP) terminates at the address specified and whether that LSP is up or down.

For a detailed description of this command, see the [CLI Explorer](#).

## Pinging CCC LSPs

You can ping a specific CCC LSP. The CCC LSP ping command is identical to the one used for MPLS LSPs. The command you use is **ping mpls <count count> <rsvp <lsp-name>>**. You can also ping a secondary standby CCC LSP by using the **ping mpls <count count> <rsvp <lsp-name>> standby path-name** command.

For a detailed description of this command, see the [CLI Explorer](#).

## Pinging Layer 3 VPNs

You can use a similar command, **ping mpls l3vpn vpn-name prefix prefix <count count>**, to ping a Layer 3 VPN. For more information about this command, see the *Junos OS VPNs Library for Routing Devices* and the [CLI Explorer](#).

## Support for LSP Ping and Traceroute Commands Based on RFC 4379

The Junos OS supports LSP **ping** and **traceroute** commands based on RFC 4379, *Detecting Multi-Protocol Label Switched (MPLS) Data Plane Failures*.

LSP **ping** and **traceroute** commands based on RFC 4379 attempt to trace the path taken by an LSP by relying on MPLS TTL expiration. An LSP can take multiple paths from ingress to egress. This occurs in particular with Equal Cost Multipath (ECMP). The LSP **traceroute** command can trace all possible paths to an LSP node.

## Tracing MPLS and LSP Packets and Operations

To trace MPLS and LSP packets and operations, include the **traceoptions** statement:

```
traceoptions {
  file filename <files number> <size size> <world-readable | no-world-readable>;
  flag flag;
}
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

You can specify the following MPLS-specific flags in the MPLS **traceoptions** statement:

- **all**—Trace all operations.
- **connection**—Trace all circuit cross-connect (CCC) activity.
- **connection-detail**—Trace detailed CCC activity.

- **cspf**—Trace CSPF computations.
- **cspf-link**—Trace links visited during CSPF computations.
- **cspf-node**—Trace nodes visited during CSPF computations.
- **error**—Trace MPLS error conditions.
- **graceful-restart**—Trace MPLS graceful restart events.
- **lsping**—Trace LSP ping packets and return codes.
- **nsr-synchronization**—Trace nonstop routing (NSR) synchronization events.
- **nsr-synchronization-detail**—Trace NSR synchronization events in detail.
- **state**—Trace all LSP state transitions.
- **static**—Trace static label-switched path.

When you configure trace options to track an MPLS LSP using the **cspf** option, the CSPF log displays information about the MPLS LSP using the term “generalized MPLS” (GMPLS). For example, a message in the CSPF log might state that the “link passes GMPLS constraints”. Generalized MPLS (GMPLS) is a superset of MPLS, so this message is normal and does not affect proper MPLS LSP operation.

For general information about tracing and global tracing options, see the *Junos OS Routing Protocols Library*.

---

## Configuring Link State Distribution Using BGP

---

You can enable distribution of topology information across multiple areas and autonomous systems (ASs) by extending the BGP protocol to carry link-state information, which was initially acquired using IGP. The IGP protocols have scaling limitations when it comes to distributing large databases. BGP is not only a more scalable vehicle for carrying multi-area and multi-AS topology information, but also provides the policy controls that can be useful for multi-AS topology distribution. The BGP link-state topology information is used for computing paths for MPLS LSPs spanning multiple domains, such as inter-area TE LSP, and providing a scalable and policy-controlled means for external path computing entities, such as ALTO and PCE, to acquire network topology.

Before you begin:

1. Configure the device interfaces.
2. Configure the router ID and autonomous system number for the device.
3. Configure the following protocols:
  - RSVP
  - MPLS
  - IS-IS
  - OSPF

To enable link-state distribution using BGP:

1. Configure an internal BGP group, and assign the local address and neighbor address for the group.

```
[edit protocols]
user@R1# set bgp group internal-group-name type internal
user@R1# set bgp group internal-group-name local-address ip-address
user@R1# set bgp group internal-group-name neighbor ip-address
```

2. Include the BGP-TE signaling network layer reachability information (NLRI) to the internal BGP group.

```
[edit protocols]
user@R1# set bgp group internal-group-name family traffic-engineering unicast
```

3. Enable export of policy on the device.

```
[edit protocols]
user@R1# set bgp group internal-group-name export second-policy-name
```

4. Configure an external BGP group, and assign the local address and neighbor autonomous system to the group.

```
[edit protocols]
user@R1# set bgp group external-group-name type external
user@R1# set bgp group external-group-name neighbor ip-address local-address ip-address
user@R1# set bgp group external-group-name neighbor ip-address peer-as as-number
```

5. Include the BGP-TE signaling NLRI to the external BGP group.

```
[edit protocols]
user@R1# set bgp group external-group-name family traffic-engineering unicast
```

6. In configuration mode, go to the following hierarchy level:

```
[edit]
user@R1# edit policy-options
```

7. Configure policies to accept traffic from the BGP-TE NLRI.

```
[edit policy-options]
user@R1# set policy-statement policy-name from family traffic-engineering
user@R1# set policy-statement policy-name then accept
```

```
user@R1# set policy-statement bgp-import-policy term 1 from family traffic-engineering
user@R1# set policy-statement bgp-import-policy term 1 then next-hop self
user@R1# set policy-statement bgp-import-policy term 1 then accept
```

8. On the remote connecting device, configure policy to accept the OSPF and IS-IS traffic.

```
[edit policy-options]
user@R2# set policy-statement bgp-export-policy term 1 from protocol isis
user@R2# set policy-statement bgp-export-policy term 1 from protocol ospf
user@R2# set policy-statement bgp-export-policy term 1 then accept
user@R2# set policy-statement bgp-export-policy term 2 then reject
```

9. Verify and commit the configuration.

For example:

**R1**

```
[edit protocols]
user@R1# set rsvp interface all
user@R1# set rsvp interface fxp0.0 disable
user@R1# set mpls interface all
user@R1# set mpls interface fxp0.0 disable
user@R1# set bgp group ibgp type internal
user@R1# set bgp group ibgp local-address 10.255.105.141
user@R1# set bgp group ibgp family traffic-engineering unicast
user@R1# set bgp group ibgp export nlri2bgp
user@R1# set bgp group ibgp neighbor 10.255.105.137
user@R1# set bgp group ebgp type external
user@R1# set bgp group ebgp family traffic-engineering unicast
user@R1# set bgp group ebgp neighbor 8.42.1.104 local-address 8.42.1.102
user@R1# set bgp group ebgp neighbor 8.42.1.104 peer-as 65534
user@R1# set isis interface ge-0/0/1.0 passive remote-node-iso 0102.5502.4211
user@R1# set isis interface ge-0/0/1.0 passive remote-node-id 8.42.1.104
user@R1# set ospf traffic-engineering
user@R1# set ospf area 0.0.0.0 interface lo0.0
user@R1# set ospf area 0.0.0.0 interface ge-0/0/0.0
user@R1# set ospf area 0.0.0.0 interface ge-0/0/1.0 passive traffic-engineering
remote-node-id 8.42.1.104
user@R1# set ospf area 0.0.0.0 interface ge-0/0/1.0 passive traffic-engineering
remote-node-router-id 10.255.105.139

[edit policy-options]
user@R1# set policy-statement accept-all from family traffic-engineering
user@R1# set policy-statement accept-all then accept
user@R1# set policy-statement nlri2bgp term 1 from family traffic-engineering
user@R1# set policy-statement nlri2bgp term 1 then next-hop self
user@R1# set policy-statement nlri2bgp term 1 then accept

[edit]
user@R1# commit
commit complete
```

**R2**

```
[edit policy-options]
user@R2# set policy-statement accept-all from family traffic-engineering
user@R2# set policy-statement accept-all then accept
user@R2# set policy-statement nlri2bgp term 1 from family traffic-engineering
user@R2# set policy-statement nlri2bgp term 1 then next-hop self
user@R2# set policy-statement nlri2bgp term 1 then accept
user@R2# set policy-statement ted2nlri term 1 from protocol isis
user@R2# set policy-statement ted2nlri term 1 from protocol ospf
user@R2# set policy-statement ted2nlri term 1 then accept
user@R2# set policy-statement ted2nlri term 2 then reject

[edit]
user@R2# commit
commit complete
```

- Related Documentation**
- [Link-State Distribution Using BGP Overview on page 8](#)
  - [Example: Configuring Link State Distribution Using BGP on page 393](#)

---

## Example: Configuring Link State Distribution Using BGP

---

This example shows how to configure BGP to carry link-state information across multiple domains, which is used for computing paths for MPLS LSPs spanning multiple domains, such as inter-area TE LSP, and providing a scalable and policy-controlled means for external path computing entities, such as ALTO and PCE, to acquire network topology.

- [Requirements on page 393](#)
- [Overview on page 393](#)
- [Configuration on page 394](#)
- [Verification on page 404](#)

### Requirements

This example uses the following hardware and software components:

- Four routers that can be a combination of M Series, MX Series, or T Series routers
- Junos OS Release 14.2 or later running on all the routers

Before you begin:


1. Configure the device interfaces.
2. Configure the autonomous system numbers and router IDs for the devices.
3. Configure the following protocols:
  - RSVP
  - MPLS
  - BGP
  - IS-IS
  - OSPF

### Overview

Starting with Junos OS Release 14.2, a new mechanism to distribute topology information across multiple areas and autonomous systems (ASs) is introduced by extending the BGP protocol to carry link-state information, which was initially acquired using IGP. The IGP protocols have scaling limitations when it comes to distributing large databases. BGP is not only a more scalable vehicle for carrying multi-area and multi-AS topology information, but also provides the policy controls that can be useful for multi-AS topology distribution. The BGP link-state topology information is used for computing paths for MPLS label-switched paths (LSPs) spanning multiple domains, such as inter-area TE LSP, and providing a scalable and policy-controlled means for external path computing entities, such as ALTO and PCE, to acquire network topology.

## Topology

Figure 38: Link-State Distribution Using BGP

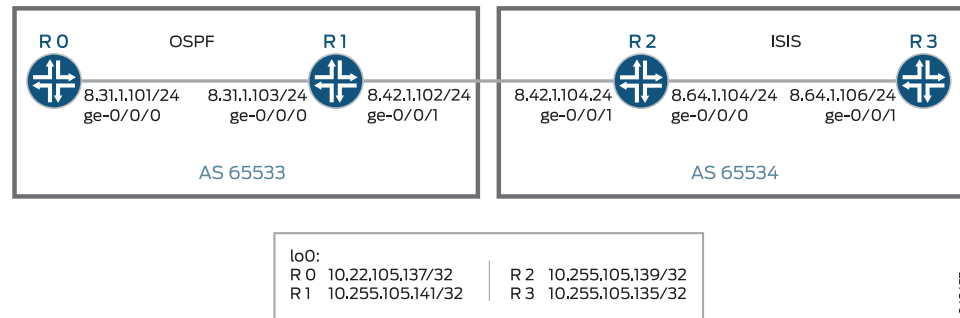

In Figure 38 on page 394, Routers R0 and R1 and Routers R2 and R3 belong to different autonomous systems. Routers R0 and R1 run OSPF, and Routers R2 and R3 run IS-IS.

## Configuration

### CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the **[edit]** hierarchy level, and then enter **commit** from configuration mode.

```

R0
set interfaces ge-0/0/0 unit 0 family inet address 8.31.1.101/24
set interfaces ge-0/0/0 unit 0 family iso
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.105.137/32
set routing-options router-id 10.255.105.137
set routing-options autonomous-system 65533
set protocols rsvp interface all
set protocols rsvp interface fxp0.0 disable
set protocols mpls traffic-engineering database export policy accept-all
set protocols mpls cross-credibility-cspf
set protocols mpls label-switched-path to-R3-inter-as to 10.255.105.135
set protocols mpls label-switched-path to-R3-inter-as bandwidth 40m
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols bgp group ibgp type internal
set protocols bgp group ibgp local-address 10.255.105.137
set protocols bgp group ibgp family traffic-engineering unicast
set protocols bgp group ibgp neighbor 10.255.105.141
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface lo0.0
set protocols ospf area 0.0.0.0 interface ge-0/0/0.0
set policy-options policy-statement accept-all from family traffic-engineering
set policy-options policy-statement accept-all then accept

R1
set interfaces ge-0/0/0 unit 0 family inet address 8.31.1.103/24
set interfaces ge-0/0/0 unit 0 family iso
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 unit 0 family inet address 8.42.1.102/24

```



```

set interfaces ge-0/0/1 unit 0 family iso
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.105.141/32
set routing-options router-id 10.255.105.141
set routing-options autonomous-system 65533
set protocols rsvp interface all
set protocols rsvp interface fxp0.0 disable
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols bgp group ibgp type internal
set protocols bgp group ibgp local-address 10.255.105.141
set protocols bgp group ibgp family traffic-engineering unicast
set protocols bgp group ibgp export nlri2bgp
set protocols bgp group ibgp neighbor 10.255.105.137
set protocols bgp group ebgp type external
set protocols bgp group ebgp family traffic-engineering unicast
set protocols bgp group ebgp neighbor 8.42.1.104 local-address 8.42.1.102
set protocols bgp group ebgp neighbor 8.42.1.104 peer-as 65534
set protocols isis interface ge-0/0/1.0 passive remote-node-iso 0102.5502.4211
set protocols isis interface ge-0/0/1.0 passive remote-node-id 8.42.1.104
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface lo0.0
set protocols ospf area 0.0.0.0 interface ge-0/0/0.0
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0 passive traffic-engineering
  remote-node-id 8.42.1.104
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0 passive traffic-engineering
  remote-node-router-id 10.255.105.139
set policy-options policy-statement accept-all from family traffic-engineering
set policy-options policy-statement accept-all then accept
set policy-options policy-statement nlri2bgp term 1 from family traffic-engineering
set policy-options policy-statement nlri2bgp term 1 then next-hop self
set policy-options policy-statement nlri2bgp term 1 then accept

```

```

R2 set interfaces ge-0/0/0 unit 0 family inet address 8.64.1.104/24
set interfaces ge-0/0/0 unit 0 family iso
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 unit 0 family inet address 8.42.1.104/24
set interfaces ge-0/0/1 unit 0 family iso
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.105.139/32
set interfaces lo0 unit 0 family iso
set routing-options router-id 10.255.105.139
set routing-options autonomous-system 65534
set protocols rsvp interface all
set protocols rsvp interface fxp0.0 disable
set protocols mpls traffic-engineering database import policy ted2nlri
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols bgp group ebgp type external
set protocols bgp group ebgp family traffic-engineering unicast
set protocols bgp group ebgp export nlri2bgp
set protocols bgp group ebgp peer-as 65533
set protocols bgp group ebgp neighbor 8.42.1.102
set protocols isis level 1 disable
set protocols isis interface ge-0/0/0.0
set protocols isis interface ge-0/0/1.0 passive remote-node-iso 0102.5501.8181

```

```

set protocols isis interface ge-0/0/1.0 passive remote-node-id 8.42.1.102
set protocols isis interface lo0.0
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0 passive traffic-engineering
  remote-node-id 8.42.1.102
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0 passive traffic-engineering
  remote-node-router-id 10.255.105.141
set policy-options policy-statement accept-all from family traffic-engineering
set policy-options policy-statement accept-all then accept
set policy-options policy-statement nlri2bgp term 1 from family traffic-engineering
set policy-options policy-statement nlri2bgp term 1 then next-hop self
set policy-options policy-statement nlri2bgp term 1 then accept
set policy-options policy-statement ted2nlri term 1 from protocol isis
set policy-options policy-statement ted2nlri term 1 from protocol ospf
set policy-options policy-statement ted2nlri term 1 then accept
set policy-options policy-statement ted2nlri term 2 then reject

```

```

R3  set interfaces ge-0/0/0 unit 0 family inet address 8.64.1.106/24
    set interfaces ge-0/0/0 unit 0 family iso
    set interfaces ge-0/0/0 unit 0 family mpls
    set interfaces lo0 unit 0 family inet address 10.255.105.135/32
    set interfaces lo0 unit 0 family iso
    set routing-options router-id 10.255.105.135
    set routing-options autonomous-system 65534
    set protocols rsvp interface all
    set protocols rsvp interface fxp0.0 disable
    set protocols mpls interface all
    set protocols mpls interface fxp0.0 disable
    set protocols bgp group ibgp type internal
    set protocols bgp group ibgp local-address 10.255.105.135
    set protocols bgp group ibgp family traffic-engineering unicast
    set protocols bgp group ibgp neighbor 10.255.105.139
    set protocols isis interface ge-0/0/0.0 level 1 disable
    set protocols isis interface lo0.0
    set protocols ospf traffic-engineering
    set protocols ospf area 0.0.0.0 interface lo0.0
    set protocols ospf area 0.0.0.0 interface ge-0/0/0.0
    set policy-options policy-statement accept-all from family traffic-engineering
    set policy-options policy-statement accept-all then accept
    set policy-options policy-statement nlri2bgp term 1 from family traffic-engineering
    set policy-options policy-statement nlri2bgp term 1 then next-hop self
    set policy-options policy-statement nlri2bgp term 1 then accept
    set policy-options policy-statement ted2nlri term 1 from protocol isis
    set policy-options policy-statement ted2nlri term 1 from protocol ospf
    set policy-options policy-statement ted2nlri term 1 then accept
    set policy-options policy-statement ted2nlri term 2 then reject

```

**Step-by-Step Procedure** The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode*.

To configure Router R1:

1. Configure the Router R1 interfaces.

```
[edit interfaces]
user@R1# set ge-0/0/0 unit 0 family inet address 8.31.1.103/24
user@R1# set ge-0/0/0 unit 0 family iso
user@R1# set ge-0/0/0 unit 0 family mpls
```

```
user@R1# set ge-0/0/1 unit 0 family inet address 8.42.1.102/24
user@R1# set ge-0/0/1 unit 0 family iso
user@R1# set ge-0/0/1 unit 0 family mpls
```

```
user@R1# set lo0 unit 0 family inet address 10.255.105.141/32
```

2. Configure the router ID and autonomous system of Router R1.

```
[edit routing-options]
user@R1# set router-id 10.255.105.141
user@R1# set autonomous-system 65533
```

3. Enable RSVP on all the interfaces of Router R1 (excluding the management interface).

```
[edit protocols]
user@R1# set rsvp interface all
user@R1# set rsvp interface fxp0.0 disable
```

4. Enable MPLS on all the interfaces of Router R1 (excluding the management interface).

```
[edit protocols]
user@R1# set mpls interface all
user@R1# set mpls interface fxp0.0 disable
```

5. Configure the BGP group for Router R1 to peer with Router R0, and assign the local address and neighbor address.

```
[edit protocols]
user@R1# set bgp group ibgp type internal
user@R1# set bgp group ibgp local-address 10.255.105.141
user@R1# set bgp group ibgp neighbor 10.255.105.137
```

6. Include the BGP-TE signaling network layer reachability information (NLRI) to the ibgp BGP group.

```
[edit protocols]
user@R1# set bgp group ibgp family traffic-engineering unicast
```

7. Enable export of policy nlri2bgp on Router R1.

```
[edit protocols]
user@R1# set bgp group ibgp export nlri2bgp
```

8. Configure the BGP group for Router R1 to peer with Router R2, and assign the local address and neighbor autonomous system to the ebgp BGP group.

```
[edit protocols]
user@R1# set bgp group ebgp type external
user@R1# set bgp group ebgp neighbor 8.42.1.104 local-address 8.42.1.102
user@R1# set bgp group ebgp neighbor 8.42.1.104 peer-as 65534
```

9. Include the BGP-TE signaling NLRI to the ebgp BGP group.

```
[edit protocols]
```

```
user@R1# set bgp group ebgp family traffic-engineering unicast
```

10. Enable passive traffic-engineering on the inter-AS link.

```
[edit protocols]
```

```
user@R1# set isis interface ge-0/0/1.0 passive remote-node-iso 0102.5502.4211
```

```
user@R1# set isis interface ge-0/0/1.0 passive remote-node-id 8.42.1.104
```

11. Enable OSPF on the interface connecting Router R1 to Router R0 and on the loopback interface of Router R1, and enable traffic engineering capabilities.

```
[edit protocols]
```

```
user@R1# set ospf traffic-engineering
```

```
user@R1# set ospf area 0.0.0.0 interface lo0.0
```

```
user@R1# set ospf area 0.0.0.0 interface ge-0/0/0.0
```

12. Enable passive traffic-engineering on the inter-AS link.

```
[edit protocols]
```

```
user@R1# set ospf area 0.0.0.0 interface ge-0/0/1.0 passive traffic-engineering  
remote-node-id 8.42.1.104
```

```
user@R1# set ospf area 0.0.0.0 interface ge-0/0/1.0 passive traffic-engineering  
remote-node-router-id 10.255.105.139
```

13. Configure policies to accept traffic from BGP-TE NLRI.

```
[edit policy-options]
```

```
user@R1# set policy-statement accept-all from family traffic-engineering
```

```
user@R1# set policy-statement accept-all then accept
```

```
user@R1# set policy-statement nlri2bgp term 1 from family traffic-engineering
```

```
user@R1# set policy-statement nlri2bgp term 1 then next-hop self
```

```
user@R1# set policy-statement nlri2bgp term 1 then accept
```

**Results** From configuration mode, confirm your configuration by entering the **show interfaces**, **show routing-options**, **show protocols**, and **show policy-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@R1# show interfaces
ge-0/0/0 {
  unit 0 {
    family inet {
      address 8.31.1.103/24;
    }
    family iso;
    family mpls;
  }
}
ge-0/0/1 {
  unit 0 {
    family inet {
      address 8.42.1.102/24;
    }
    family iso;
    family mpls;
  }
}
```

```
lo0 {
  unit 0 {
    family inet {
      address 10.255.105.141/32;
    }
  }
}

user@R1# show routing-options
router-id 10.255.105.141;
autonomous-system 65533;

user@R1# show protocols
rsvp {
  interface all;
  interface fxp0.0 {
    disable;
  }
}
mpls {
  interface all;
  interface fxp0.0 {
    disable;
  }
}
bgp {
  group ibgp {
    type internal;
    local-address 10.255.105.141;
    family traffic-engineering {
      unicast;
    }
    export nlri2bgp;
    neighbor 10.255.105.137;
  }
  group ebgp {
    type external;
    family traffic-engineering {
      unicast;
    }
    neighbor 8.42.1.104 {
      local-address 8.42.1.102;
      peer-as 65534;
    }
  }
}
isis {
  interface ge-0/0/1.0 {
    passive {
      remote-node-iso 0102.5502.4211;
      remote-node-id 8.42.1.104;
    }
  }
}
ospf {
  traffic-engineering;
  area 0.0.0.0 {
```

```

interface lo0.0;
interface ge-0/0/0.0;
interface ge-0/0/1.0 {
    passive {
        traffic-engineering {
            remote-node-id 8.42.1.104;
            remote-node-router-id 10.255.105.139;
        }
    }
}
}
}

user@R1# show policy-options
policy-statement accept-all {
    from family traffic-engineering;
    then accept;
}
policy-statement nlri2bgp {
    term 1 {
        from family traffic-engineering;
        then {
            next-hop self;
            accept;
        }
    }
}

```

**Step-by-Step Procedure** The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode*.

To configure Router R2:

1. Configure the Router R2 interfaces.

```

[edit interfaces]
user@R2# set ge-0/0/0 unit 0 family inet address 8.64.1.104/24
user@R2# set ge-0/0/0 unit 0 family iso
user@R2# set ge-0/0/0 unit 0 family mpls

```

```

user@R2# set ge-0/0/1 unit 0 family inet address 8.42.1.104/24
user@R2# set ge-0/0/1 unit 0 family iso
user@R2# set ge-0/0/1 unit 0 family mpls

```

```

user@R2# set lo0 unit 0 family inet address 10.255.105.139/32
user@R2# set lo0 unit 0 family iso

```

2. Configure the router ID and autonomous system of Router R2.

```

[edit routing-options]
user@R2# set router-id 10.255.105.139
user@R2# set autonomous-system 65534

```

3. Enable RSVP on all the interfaces of Router R2 (excluding the management interface).

- ```
[edit routing-options]
user@R2# set rsvp interface all
user@R2# set rsvp interface fxp0.0 disable
```
4. Enable MPLS on all the interfaces of Router R2 (excluding the management interface).
 

```
[edit routing-options]
user@R2# set mpls interface all
user@R2# set mpls interface fxp0.0 disable
```
  5. Enable import of traffic engineering database parameters using the ted2nlri policy.
 

```
[edit protocols]
user@R2# set mpls traffic-engineering database import policy ted2nlri
```
  6. Configure the BGP group for Router R2 to peer with Router R1.
 

```
[edit protocols]
user@R2# set bgp group ebgp type external
```
  7. Include the BGP-TE signaling NLRI to the ebgp BGP group.
 

```
[edit protocols]
user@R2# set bgp group ebgp family traffic-engineering unicast
```
  8. Assign the local address and neighbor autonomous system to the ebgp BGP group.
 

```
[edit protocols]
user@R2# set bgp group ebgp peer-as 65533
user@R2# set bgp group ebgp neighbor 8.42.1.102
```
  9. Enable export of policy nlri2bgp on Router R2.
 

```
[edit protocols]
user@R2# set bgp group ebgp export nlri2bgp
```
  10. Enable IS-IS on the interface connecting Router R2 with Router R3 and the loopback interface of Router R2.
 

```
[edit protocols]
user@R2# set isis level 1 disable
user@R2# set isis interface ge-0/0/0.0
user@R2# set isis interface lo0.0
```
  11. Enable only IS-IS advertising on the interface connecting Router R2 with Router R1.
 

```
[edit protocols]
user@R2# set isis interface ge-0/0/1.0 passive remote-node-iso 0102.5501.8181
user@R2# set isis interface ge-0/0/1.0 passive remote-node-id 8.42.1.102
```
  12. Configure traffic engineering capability on Router R2.
 

```
[edit protocols]
user@R2# set ospf traffic-engineering
```
  13. Enable only OSPF advertisements on the interface connecting Router R2 with Router R1.
 

```
[edit protocols]
user@R2# set ospf area 0.0.0.0 interface ge-0/0/1.0 passive traffic-engineering
remote-node-id 8.42.1.102
```

```
user@R2# set ospf area 0.0.0.0 interface ge-0/0/1.0 passive traffic-engineering
remote-node-router-id 10.255.105.141
```

14. Configure policies to accept traffic from the BGP-TE NLRI.

```
[edit policy-options]
user@R2# set policy-statement accept-all from family traffic-engineering
user@R2# set policy-statement accept-all then accept
user@R2# set policy-statement nlri2bgp term 1 from family traffic-engineering
user@R2# set policy-statement nlri2bgp term 1 then next-hop self
user@R2# set policy-statement nlri2bgp term 1 then accept
user@R2# set policy-statement ted2nlri term 1 from protocol isis
user@R2# set policy-statement ted2nlri term 1 from protocol ospf
user@R2# set policy-statement ted2nlri term 1 then accept
user@R2# set policy-statement ted2nlri term 2 then reject
```

**Results** From configuration mode, confirm your configuration by entering the **show interfaces**, **show routing-options**, **show protocols**, and **show policy-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@R2# show interfaces
ge-0/0/0 {
  unit 0 {
    family inet {
      address 8.64.1.104/24;
    }
    family iso;
    family mpls;
  }
}
ge-0/0/1 {
  unit 0 {
    family inet {
      address 8.42.1.104/24;
    }
    family iso;
    family mpls;
  }
}
lo0 {
  unit 0 {
    family inet {
      address 10.255.105.139/32;
    }
    family iso;
  }
}

user@R2# show routing-options
router-id 10.255.105.139;
autonomous-system 65534;

user@R2# show protocols
rsvp {
  interface all;
```



```

interface fxp0.0 {
  disable;
}
}
mpls {
  traffic-engineering {
    database {
      import {
        policy ted2nlri;
      }
    }
  }
  interface all;
  interface fxp0.0 {
    disable;
  }
}
bgp {
  group ebgp {
    type external;
    family traffic-engineering {
      unicast;
    }
    export nlri2bgp;
    peer-as 65533;
    neighbor 8.42.1.102;
  }
}
isis {
  level 1 disable;
  interface ge-0/0/0.0;
  interface ge-0/0/1.0 {
    passive {
      remote-node-iso 0102.5501.8181;
      remote-node-id 8.42.1.102;
    }
  }
  interface lo0.0;
}
ospf {
  traffic-engineering;
  area 0.0.0.0 {
    interface ge-0/0/1.0 {
      passive {
        traffic-engineering {
          remote-node-id 8.42.1.102;
          remote-node-router-id 10.255.105.141;
        }
      }
    }
  }
}
}

user@R2# show policy-options
policy-statement accept-all {
  from family traffic-engineering;

```

```
        then accept;
    }
    policy-statement nlri2bgp {
        term 1 {
            from family traffic-engineering;
            then {
                next-hop self;
                accept;
            }
        }
    }
    policy-statement ted2nlri {
        term 1 {
            from protocol [ isis ospf ];
            then accept;
        }
        term 2 {
            then reject;
        }
    }
}
```

## Verification

Verify that the configuration is working properly.

- [Verifying the BGP Summary Status on page 404](#)
- [Verifying the MPLS LSP Status on page 405](#)
- [Verifying the Lsdist.0 Routing Table Entries on page 405](#)
- [Verifying the Traffic Engineering Database Entries on page 408](#)

### Verifying the BGP Summary Status

---

**Purpose** Verify that BGP is up and running on Routers R0 and R1.

**Action** From operational mode, run the **show bgp summary** command.

```
user@R0> show bgp summary
Groups: 1 Peers: 1 Down peers: 0
Table Tot Paths Act Paths Suppressed History Damp State Pending
lsdist.0
10 10 0 0 0 0
Peer AS InPkt OutPkt OutQ Flaps Last Up/Dwn
State|#Active/Received/Accepted/Damped...
10.255.105.141 65533 20 14 0 79 5:18
Establish
lsdist.0: 10/10/10/0
```

From operational mode, run the **show bgp summary** command.

```
user@R1> show bgp summary
Groups: 2 Peers: 2 Down peers: 0
Table Tot Paths Act Paths Suppressed History Damp State Pending
lsdist.0
10 10 0 0 0 0
Peer AS InPkt OutPkt OutQ Flaps Last Up/Dwn
State|#Active/Received/Accepted/Damped...
8.42.1.104 65534 24 17 0 70 6:43
Establish
lsdist.0: 10/10/10/0
10.255.105.137 65533 15 23 0 79 6:19
Establish
lsdist.0: 0/0/0/0
```

**Meaning** Router R0 is peered with Router R1.

### Verifying the MPLS LSP Status

**Purpose** Verify the status of the MPLS LSP on Router R0.

**Action** From operational mode, run the **show mpls lsp** command.

```
user@R0> show mpls lsp
Ingress LSP: 1 sessions
To From State Rt P ActivePath LSPname
10.255.105.135 10.255.105.137 Up 0 * to-R3-inter-as
Total 1 displayed, Up 1, Down 0

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

**Meaning** The MPLS LSP from Router R0 to Router R3 is established.

### Verifying the lsdist.0 Routing Table Entries

**Purpose** Verify the lsdist.0 routing table entries on Routers R0, R1, and R2.

**Action** From operational mode, run the **show route table lsdist.0** command.

```

user@R0> show route table lsdist.0
lsdist.0: 10 destinations, 10 routes (10 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

NODE { AS:65534 ISO:0102.5502.4211.00 ISIS-L2:0 }/1152
    * [BGP/170] 00:17:32, localpref 100, from 10.255.105.141
      AS path: 65534 I, validation-state: unverified
      > to 8.31.1.103 via ge-0/0/0.0
NODE { AS:65534 ISO:0102.5502.4250.00 ISIS-L2:0 }/1152
    * [BGP/170] 00:17:32, localpref 100, from 10.255.105.141
      AS path: 65534 I, validation-state: unverified
      > to 8.31.1.103 via ge-0/0/0.0
NODE { AS:65534 ISO:0102.5502.4250.02 ISIS-L2:0 }/1152
    * [BGP/170] 00:17:32, localpref 100, from 10.255.105.141
      AS path: 65534 I, validation-state: unverified
      > to 8.31.1.103 via ge-0/0/0.0
NODE { AS:65534 Area:0.0.0.0 IPv4:10.255.105.139 OSPF:0 }/1152
    * [BGP/170] 00:17:32, localpref 100, from 10.255.105.141
      AS path: 65534 I, validation-state: unverified
      > to 8.31.1.103 via ge-0/0/0.0
LINK { Local { AS:65534 ISO:0102.5502.4211.00 }. { IPv4:8.42.1.104 } Remote {
AS:65534 ISO:0102.5501.8181.00 }. { IPv4:8.42.1.102 } ISIS-L2:0 }/1152
    * [BGP/170] 00:17:32, localpref 100, from 10.255.105.141
      AS path: 65534 I, validation-state: unverified
      > to 8.31.1.103 via ge-0/0/0.0
LINK { Local { AS:65534 ISO:0102.5502.4211.00 }. { IPv4:8.64.1.104 } Remote {
AS:65534 ISO:0102.5502.4250.02 }. { } ISIS-L2:0 }/1152
    * [BGP/170] 00:02:03, localpref 100, from 10.255.105.141
      AS path: 65534 I, validation-state: unverified
      > to 8.31.1.103 via ge-0/0/0.0
LINK { Local { AS:65534 ISO:0102.5502.4250.00 }. { IPv4:8.64.1.106 } Remote {
AS:65534 ISO:0102.5502.4250.02 }. { } ISIS-L2:0 }/1152
    * [BGP/170] 00:17:32, localpref 100, from 10.255.105.141
      AS path: 65534 I, validation-state: unverified
      > to 8.31.1.103 via ge-0/0/0.0
LINK { Local { AS:65534 ISO:0102.5502.4250.02 }. { } Remote { AS:65534
ISO:0102.5502.4211.00 }. { } ISIS-L2:0 }/1152
    * [BGP/170] 00:17:32, localpref 100, from 10.255.105.141
      AS path: 65534 I, validation-state: unverified
      > to 8.31.1.103 via ge-0/0/0.0
LINK { Local { AS:65534 ISO:0102.5502.4250.02 }. { } Remote { AS:65534
ISO:0102.5502.4250.00 }. { } ISIS-L2:0 }/1152
    * [BGP/170] 00:17:32, localpref 100, from 10.255.105.141
      AS path: 65534 I, validation-state: unverified
      > to 8.31.1.103 via ge-0/0/0.0
LINK { Local { AS:65534 Area:0.0.0.0 IPv4:10.255.105.139 }. { IPv4:8.42.1.104 }
Remote { AS:65534 Area:0.0.0.0 IPv4:10.255.105.141 }. { IPv4:8.42.1.102 } OSPF:0
}/1152
    * [BGP/170] 00:17:32, localpref 100, from 10.255.105.141
      AS path: 65534 I, validation-state: unverified
      > to 8.31.1.103 via ge-0/0/0.0

```

From operational mode, run the **show route table lsdist.0** command.

```

user@R1> show route table lsdist.0
lsdist.0: 10 destinations, 10 routes (10 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

```

```

NODE { AS:65534 ISO:0102.5502.4211.00 ISIS-L2:0 }/1152
    *[BGP/170] 00:18:00, localpref 100
    AS path: 65534 I, validation-state: unverified
    > to 8.42.1.104 via ge-0/0/1.0
NODE { AS:65534 ISO:0102.5502.4250.00 ISIS-L2:0 }/1152
    *[BGP/170] 00:18:00, localpref 100
    AS path: 65534 I, validation-state: unverified
    > to 8.42.1.104 via ge-0/0/1.0
NODE { AS:65534 ISO:0102.5502.4250.02 ISIS-L2:0 }/1152
    *[BGP/170] 00:18:00, localpref 100
    AS path: 65534 I, validation-state: unverified
    > to 8.42.1.104 via ge-0/0/1.0
NODE { AS:65534 Area:0.0.0.0 IPv4:10.255.105.139 OSPF:0 }/1152
    *[BGP/170] 00:18:00, localpref 100
    AS path: 65534 I, validation-state: unverified
    > to 8.42.1.104 via ge-0/0/1.0
LINK { Local { AS:65534 ISO:0102.5502.4211.00 }.{ IPv4:8.42.1.104 } Remote {
AS:65534 ISO:0102.5501.8181.00 }.{ IPv4:8.42.1.102 } ISIS-L2:0 }/1152
    *[BGP/170] 00:18:00, localpref 100
    AS path: 65534 I, validation-state: unverified
    > to 8.42.1.104 via ge-0/0/1.0
LINK { Local { AS:65534 ISO:0102.5502.4211.00 }.{ IPv4:8.64.1.104 } Remote {
AS:65534 ISO:0102.5502.4250.02 }.{ } ISIS-L2:0 }/1152
    *[BGP/170] 00:02:19, localpref 100
    AS path: 65534 I, validation-state: unverified
    > to 8.42.1.104 via ge-0/0/1.0
LINK { Local { AS:65534 ISO:0102.5502.4250.00 }.{ IPv4:8.64.1.106 } Remote {
AS:65534 ISO:0102.5502.4250.02 }.{ } ISIS-L2:0 }/1152
    *[BGP/170] 00:18:00, localpref 100
    AS path: 65534 I, validation-state: unverified
    > to 8.42.1.104 via ge-0/0/1.0
LINK { Local { AS:65534 ISO:0102.5502.4250.02 }.{ } Remote { AS:65534
ISO:0102.5502.4211.00 }.{ } ISIS-L2:0 }/1152
    *[BGP/170] 00:18:00, localpref 100
    AS path: 65534 I, validation-state: unverified
    > to 8.42.1.104 via ge-0/0/1.0
LINK { Local { AS:65534 ISO:0102.5502.4250.02 }.{ } Remote { AS:65534
ISO:0102.5502.4250.00 }.{ } ISIS-L2:0 }/1152
    *[BGP/170] 00:18:00, localpref 100
    AS path: 65534 I, validation-state: unverified
    > to 8.42.1.104 via ge-0/0/1.0
LINK { Local { AS:65534 Area:0.0.0.0 IPv4:10.255.105.139 }.{ IPv4:8.42.1.104 }
Remote { AS:65534 Area:0.0.0.0 IPv4:10.255.105.141 }.{ IPv4:8.42.1.102 } OSPF:0
}/1152
    *[BGP/170] 00:18:00, localpref 100
    AS path: 65534 I, validation-state: unverified
    > to 8.42.1.104 via ge-0/0/1.0

```

From operational mode, run the **show route table lsdist.0** command.

```

user@R2> show route table lsdist.0
lsdist.0: 10 destinations, 10 routes (10 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

NODE { AS:65534 ISO:0102.5502.4211.00 ISIS-L2:0 }/1152
    *[IS-IS/18] 1d 00:24:39
    Fictitious
NODE { AS:65534 ISO:0102.5502.4250.00 ISIS-L2:0 }/1152
    *[IS-IS/18] 00:20:45

```

```

Fictitious
NODE { AS:65534 ISO:0102.5502.4250.02 ISIS-L2:0 }/1152
    *[IS-IS/18] 00:20:45
Fictitious
NODE { AS:65534 Area:0.0.0.0 IPv4:10.255.105.139 OSPF:0 }/1152
    *[OSPF/10] 1d 00:24:39
Fictitious
LINK { Local { AS:65534 ISO:0102.5502.4211.00 }.{ IPv4:8.42.1.104 } Remote {
AS:65534 ISO:0102.5501.8181.00 }.{ IPv4:8.42.1.102 } ISIS-L2:0 }/1152
    *[IS-IS/18] 00:20:58
Fictitious
LINK { Local { AS:65534 ISO:0102.5502.4211.00 }.{ IPv4:8.64.1.104 } Remote {
AS:65534 ISO:0102.5502.4250.02 }.{ } ISIS-L2:0 }/1152
    *[IS-IS/18] 00:02:34
Fictitious
LINK { Local { AS:65534 ISO:0102.5502.4250.00 }.{ IPv4:8.64.1.106 } Remote {
AS:65534 ISO:0102.5502.4250.02 }.{ } ISIS-L2:0 }/1152
    *[IS-IS/18] 00:20:45
Fictitious
LINK { Local { AS:65534 ISO:0102.5502.4250.02 }.{ } Remote { AS:65534
ISO:0102.5502.4211.00 }.{ } ISIS-L2:0 }/1152
    *[IS-IS/18] 00:20:45
Fictitious
LINK { Local { AS:65534 ISO:0102.5502.4250.02 }.{ } Remote { AS:65534
ISO:0102.5502.4250.00 }.{ } ISIS-L2:0 }/1152
    *[IS-IS/18] 00:20:45
Fictitious
LINK { Local { AS:65534 Area:0.0.0.0 IPv4:10.255.105.139 }.{ IPv4:8.42.1.104 }
Remote { AS:65534 Area:0.0.0.0 IPv4:10.255.105.141 }.{ IPv4:8.42.1.102 } OSPF:0
}/1152
    *[OSPF/10] 00:20:57
Fictitious
```

**Meaning** The routes are appearing in the lsdist.0 routing table.

---

### Verifying the Traffic Engineering Database Entries

**Purpose** Verify the traffic engineering database entries on Router R0.

**Action** From operational mode, run the **show ted database** command.

```

user@R0> show ted database
TED database: 5 ISIS nodes 5 INET nodes
ID                               Type Age(s) LnkIn LnkOut Protocol
0102.5501.8168.00(10.255.105.137) Rtr  1046   1     1 OSPF(0.0.0.0)
  To: 8.31.1.101-1, Local: 8.31.1.101, Remote: 0.0.0.0
  Local interface index: 0, Remote interface index: 0
ID                               Type Age(s) LnkIn LnkOut Protocol
0102.5501.8181.00                ---   1033   1     0
0102.5502.4211.00(10.255.105.139) Rtr  3519   2     3 Exported ISIS-L2(1)
  To: 0102.5502.4250.02, Local: 8.64.1.104, Remote: 0.0.0.0
  Local interface index: 0, Remote interface index: 0
  To: 0102.5501.8181.00, Local: 8.42.1.104, Remote: 8.42.1.102
  Local interface index: 0, Remote interface index: 0
ID                               Type Age(s) LnkIn LnkOut Protocol
                                Exported OSPF(2)
  To: 10.255.105.141, Local: 8.42.1.104, Remote: 8.42.1.102
  Local interface index: 0, Remote interface index: 0
ID                               Type Age(s) LnkIn LnkOut Protocol
0102.5502.4250.00(10.255.105.135) Rtr  1033   1     1 Exported ISIS-L2(1)
  To: 0102.5502.4250.02, Local: 8.64.1.106, Remote: 0.0.0.0
  Local interface index: 0, Remote interface index: 0
ID                               Type Age(s) LnkIn LnkOut Protocol
0102.5502.4250.02                Net   1033   2     2 Exported ISIS-L2(1)
  To: 0102.5502.4211.00(10.255.105.139), Local: 0.0.0.0, Remote: 0.0.0.0
  Local interface index: 0, Remote interface index: 0
  To: 0102.5502.4250.00(10.255.105.135), Local: 0.0.0.0, Remote: 0.0.0.0
  Local interface index: 0, Remote interface index: 0
ID                               Type Age(s) LnkIn LnkOut Protocol
8.31.1.101-1                    Net   1046   2     2 OSPF(0.0.0.0)
  To: 0102.5501.8168.00(10.255.105.137), Local: 0.0.0.0, Remote: 0.0.0.0
  Local interface index: 0, Remote interface index: 0
  To: 10.255.105.141, Local: 0.0.0.0, Remote: 0.0.0.0
  Local interface index: 0, Remote interface index: 0
ID                               Type Age(s) LnkIn LnkOut Protocol
10.255.105.141                  Rtr   1045   2     2 OSPF(0.0.0.0)
  To: 0102.5502.4211.00(10.255.105.139), Local: 8.42.1.102, Remote: 8.42.1.104

  Local interface index: 0, Remote interface index: 0
  To: 8.31.1.101-1, Local: 8.31.1.103, Remote: 0.0.0.0
  Local interface index: 0, Remote interface index: 0

```

**Meaning** The routes are appearing in the traffic engineering database.

**Related Documentation** • [Link-State Distribution Using BGP Overview on page 8](#)

## Dynamic Bandwidth Management Using Container LSP Overview

---

RSVP LSPs with the autobandwidth feature are increasingly deployed in networks to meet traffic engineering needs. However, the current traffic engineering solutions for point-to-point LSPs are inefficient in terms of network bandwidth utilization, mainly because the ingress routers originating the RSVP LSPs either try to fit the LSPs along a particular path without creating parallel LSPs, or do not interact with the other routers in the network and probe for additional available bandwidth.

This feature provides an ingress router with the capability of acquiring as much network bandwidth as possible by creating parallel LSPs dynamically.

- [Understanding RSVP Multipath Extensions on page 410](#)
- [Junos OS RSVP Multipath Implementation on page 411](#)
- [Current Traffic Engineering Challenges on page 411](#)
- [Using Container LSP as a Solution on page 414](#)
- [Junos OS Container LSP Implementation on page 416](#)
- [Configuration Statements Supported for Container LSPs on page 431](#)
- [Impact of Configuring Container LSPs on Network Performance on page 435](#)
- [Supported and Unsupported Features on page 436](#)

### Understanding RSVP Multipath Extensions

The RSVP multipath extensions proposed in the IETF [KOMPELLA-MLSP] allow the setup of traffic engineered multipath label-switched paths (container LSPs). The container LSPs, in addition to conforming to traffic engineering constraints, use multiple independent paths from a source to a destination, thereby facilitating load balancing of traffic. The multipath extensions require changes to the RSVP-TE protocol and allow for merging of labels at the downstream nodes (similar to LDP), which also helps in preserving forwarding resources.

The multipath extensions to RSVP provide the following benefits:

- Ease of configuration. Typically, multiple RSVP LSPs are configured for either load balancing or bin packing. With a container LSP, there is a single entity to provision, manage, and monitor LSPs. Changes in topology are handled easily and autonomously by the ingress LSP, by adding, changing, or removing member LSPs to rebalance traffic, while maintaining the same traffic engineering constraints.
- RSVP equal-cost multipath (ECMP) inherits the standard benefits of ECMP by absorbing traffic surges.
- Multipath traffic engineering allows for better and complete usage of network resources.
- Knowing the relationship among LSPs helps in computing diverse paths with constraint-based routing. It allows adjustment of member LSPs while other member LSPs continue to carry traffic.



- The intermediate routers have an opportunity to merge the labels of member LSPs. This reduces the number of labels that need to get added to the forwarding plane and in turn reduces the convergence time.

If the number of independent ECMP paths is huge, label merging overcomes the platform limitations on maximum (ECMP) next hops. With point-to-point RSVP LSPs that require link or node protection, the next hops are doubled as each LSP is programmed with both primary and backup next hops. RSVP multipath (or ECMP) obviates the need for backup next hops.

- When there is a link failure, the router upstream to the link failure can distribute traffic from the failed link to the remaining ECMP branches, obviating the need for bypass LSPs. The bypass LSP approach not only requires more state when signaling backup LSPs, but also suffers from scaling issues that result in merge-point timing out a protected path state block (PSB) before point of local repair (PLR) gets a chance to signal the backup LSP.

## Junos OS RSVP Multipath Implementation

In order to deploy RSVP multipath (ECMP) in a network, all the nodes through which ECMP LSPs pass must understand RSVP ECMP protocol extensions. This can be a challenge, especially in a multivendor networks.


Junos OS implements the RSVP multipath extensions without the need for protocol extensions. A single container LSP, which has the characteristics of ECMP and RSVP TE, is provisioned. A container LSP consists of several member LSPs and is set up between the ingress and egress routing device. Each member LSP takes a different path to the same destination. The ingress routing device is configured with all the required parameters to compute the RSVP ECMP LSP. The parameters configured to compute a set of RSVP point-to-point LSPs can be used by the ingress routing device to compute the container LSP as well.

## Current Traffic Engineering Challenges

The main challenge for traffic engineering is to cope with the dynamics of both topology and traffic demands. Mechanisms are needed that can handle traffic load dynamics in scenarios with sudden changes in traffic demand and dynamically distribute traffic to benefit from available resources.

[Figure 39 on page 412](#) illustrates a sample network topology with all the LSPs having the same hold and setup priorities, and admission control restricted on the ingress router. All the links are annotated with a tuple (cost and capacity).

Figure 39: Sample Topology

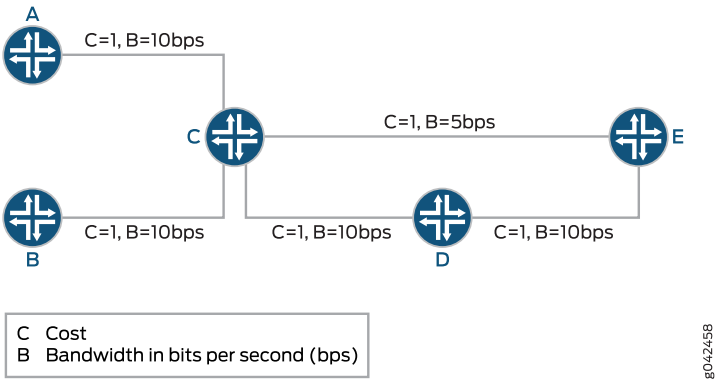

Some of the traffic engineering problems seen in [Figure 39 on page 412](#) are listed here:

• **Bin Packing**

This problem arises because of a particular order in which LSPs are signaled. The ingress routers might not be able to signal some LSPs with required demands although bandwidth is available in the network, leading to under-utilization of link capacity.

For example, the following LSPs arrive in the sequence mentioned in [Table 9 on page 412](#).

Table 9: LSP Sequence Order for Bin Packing

Time	Source	Destination	Demand	ERO
1	A	E	5	A-C-D-E
2	B	E	10	No ERO

The LSP originating at Router B is not routable as constraint-based routing fails to find a feasible path. However, if Router B is signaled first, both the LSPs are routable. Bin packing happens because of lack of visibility of individual per-LSP, per-device bandwidth demands at the ingress routing device.

Bin packing can also happen when there is no requirement for ordering of LSPs. For example, if there is an LSP with demand X and there are two different paths to the destination from the ingress router with available bandwidths Y1 and Y2, such that Y1 is less than X, Y2 is less than X, and Y1 plus Y2 is greater than or equal to X.

In this case, even though there are enough network resources in terms of available bandwidth to satisfy the aggregate LSP demand X, the LSP might not be signaled or re-optimized with the new demand. In [Figure 39 on page 412](#), with container LSP support, the ingress B creates two LSPs each of size 5 when demand 10 is posed. One LSP is routed along B-C-E and another one along B-C-D-E.

• **Deadlock**

Considering [Figure 39 on page 412](#), the LSPs follow the sequence mentioned in [Table 10 on page 413](#).

Table 10: LSP Sequence Order for Deadlock

Time	Source	Destination	Demand	ERO	Event
1	A	E	2	A-C-D-E	Constraint-based routing with RSVP signaling
2	B	E	2	B-C-D-E	Constraint-based routing with RSVP signaling
3	A	E	2 to 20	A-C-D-E	Constraint-based routing fails, no RSVP signaling

At time 3, the demand on LSP from A to E increases from 2 to 20. If autobandwidth is configured, the change does not get detected until the adjustment timer expires. In the absence of admission control at A, the increased traffic demand might cause traffic to drop on other LSPs that share common links with the mis-behaving LSP.

This happens due to the following reasons:

- Lack of global state at all the ingress routers
- Signaling of mis-behaving demands
- Tearing down of mis-behaving demands

With container LSP configured, ingress A has more chances of splitting the load (even incrementally if not fully) across multiple LSPs. So, LSP from A is less likely to see prolonged traffic loss.

#### • Latency Inflation

Latency inflation is caused by the autobandwidth and other LSPs parameters. Some of the other factors that contribute to latency inflation include:

- LSP priority

LSPs choose longer paths because shorter paths between data centers located in the same city can be congested. The bandwidth on the shorter paths can get exhausted by equal or higher priority LSPs. Due to periodic LSP optimization by autobandwidth, LSP can get rerouted to a higher delay path. When many LSPs undergo less than optimal path selection, they can potentially form a chain of dependencies. Modifying the LSP priorities dynamically is a workaround to the issue; however, dynamically adjusting LSP priorities to find shorter paths is a challenging task.

- All or Nothing policy

When the demand on an LSP increases and at least one of the links along the shorter path is close to its reservation limit, LSP optimization can force the LSP to move to a longer latency path. LSP has to traverse a long path even though the short path is capable of carrying most of the traffic.

- Minimum and maximum bandwidth

Minimum and maximum bandwidth specify the boundaries for LSP sizes. If minimum bandwidth is small, an LSP is more prone to autobandwidth adjustment because a

small change in bandwidth is enough to cross the threshold limits. LSPs might reroute although bandwidth is available. On the other hand, if the minimum bandwidth is large, network bandwidth might be wasted. If the maximum bandwidth value is small, a large number of LSPs might be needed at the ingress router to accommodate the application demand. If the maximum bandwidth is large, the LSPs can grow larger in size. Such LSPs can suffer because of an all or nothing policy.

- Autobandwidth adjustment threshold

Bandwidth threshold dictates if LSPs need to be re-optimized and resized. If the value is small, LSPs are frequently re-optimized and rerouted. That might cause CPU spike because applications or protocols, such as BGP resolving over the LSPs, might keep the Routing Engine busy doing next-hop resolution. A large value might make an LSP immobile. With container LSP configured, an LSP is less likely to get subjected to one or no policy. An ingress router originates multiple LSPs, although not all LSPs potentially traverse high latency paths.

- Predictability

Service providers often want predictable behavior in terms of how LSPs get signaled and routed. Currently, without any global coordination, it is difficult to set up the same set of LSPs in a predictable way. Consider the two different orderings in [Table 11 on page 414](#) and [Table 12 on page 414](#). The ERO that an LSP uses depends on its signaling time.

**Table 11: LSP Sequence Order for Predictability**

Time	Source	Destination	Demand	ERO
1	A	E	5	A-C-D-E
2	B	E	5	B-C-E

**Table 12: LSP Sequence Order for Predictability**

Time	Source	Destination	Demand	ERO
1	B	E	5	B-C-E
2	A	E	5	A-C-D-E

Container LSP does not directly help LSPs find predictable EROs. If LSPs are getting rerouted because of an all or no policy without container LSP configured, such LSPs might see less churn if container LSPs are configured, because smaller LSPs have better chances of finding a shorter or same path.

## Using Container LSP as a Solution

A container LSP can be used as a solution to the challenges faced by the current traffic engineering features. Considering [Figure 39 on page 412](#), when the demand X on a container

LSP increases with the network capacity (max-flow) being more than the demand, the following approaches come into effect with a container LSP:

- [Accommodating the New Demand X on page 415](#)
- [Creating New LSPs to Meet Demand X on page 415](#)
- [Assigning Bandwidth to the New LSPs on page 415](#)
- [Controlling the LSP Paths on page 415](#)

---

### Accommodating the New Demand X

In the current implementation, autobandwidth attempts to re-signal an LSP with the new demand X and follows the all or nothing policy as mentioned earlier.

The container LSP approach computes several small (smaller than demand X) bandwidth LSPs such that the aggregate bandwidth is not less than X, and the ingress router performs this adjustment periodically. One of the triggers to create new LSPs or to delete old LSPs can be changed in aggregate bandwidth. The ingress router then load-balances the incoming traffic across the newly created LSPs.

---

### Creating New LSPs to Meet Demand X

Although the number of new LSPs created can be a maximum of the allowed configurable limit, there is not much benefit from these LSPs once the number of LSPs exceeds the number of possible diverse paths or equal-cost multipaths (ECMPs). The benefit of creating the smaller LSPs is seen when an ingress router uses the newly created LSPs for load-balancing traffic. This, however, depends on the network topology and state.

Creating multiple parallel LSPs by all the ingress routers in the network can lead to scaling issues at the transit routers. Thus, the number of new LSPs to be created depends on the size of the individual LSPs and the given aggregate demand, X in this case.

---

### Assigning Bandwidth to the New LSPs

In general, there can be a number of heuristics to allocate bandwidths to the newly created LSPs. An ingress router can solve an optimization problem in which it can maximize a given utility function. The output of an optimization problem is assigning optimal bandwidth values. However, to solve an optimization problem, the number of newly created LSPs has to be fixed. Therefore, it is complex to optimize the number and size of each LSP. Thus, to simplify the problem, the same amount of bandwidth is assumed for all the newly created LSPs, and then the number of required LSPs is computed.

---

### Controlling the LSP Paths

The flexibility to control the LSP paths is expressed in terms of the configuration for point-to-point LSPs and container LSPs. Controlling the LSP paths using the configuration parameters can be applied under two different aspects:

- **Topology**—There are no topology constraints with this feature. Each member LSP is treated like a point-to-point LSP and is re-optimized individually. An ingress router does not try to compute equal IGP cost paths for all its LSPs, but instead it computes paths for all the LSPs using current traffic engineering database information. While computing a path, constraint-based routing adheres to any constraints specified

through the configuration, although there is no change in the constraint-based routing method for path computation.

- **When to create a new LSP**—When to create a new LSP can be explicitly specified. By default, an ingress router periodically computes the aggregate traffic rate by adding up the traffic rate of all the individual LSPs. Looking at the aggregate bandwidth and configuration, the ingress router recomputes the number of LSPs and the bandwidths of the LSPs. The new LSPs are then signaled or the existing LSPs are re-signaled with the updated bandwidth. Instead of looking at the instantaneous aggregate rate, the ingress routers can compute an average (of aggregates) over some duration by removing outlier samples (of aggregates). Managing the LSPs that remain outstanding and active by considering aggregate bandwidth is more scalable than creating the new LSPs based on the usage of a particular LSP. The intervals and thresholds can be configured to track the aggregate traffic and trigger adjustment. These dynamic LSPs co-exist and interoperate with per-LSP autobandwidth configuration.

## Junos OS Container LSP Implementation

A container LSP is an ECMP TE LSP that acts like a container LSP consisting of one or more member LSPs. A point-to-point TE LSP is equivalent to a container LSP with a single member LSP. Member LSPs are added to the container LSP through a process called splitting, and removed from the container LSP through a process called merging.

- [Container LSP Terminology on page 416](#)
- [LSP Splitting on page 417](#)
- [LSP Merging on page 419](#)
- [Node and Link Protection on page 421](#)
- [Naming Convention on page 421](#)
- [Normalization on page 422](#)
- [Constraint-Based Routing Path Computation on page 427](#)
- [Sampling on page 428](#)
- [Support for NSR, IPG-FA, and Static Routes on page 428](#)

---

### Container LSP Terminology

The following terms are defined in the context of a container LSP:

- **Normalization**—An event occurring periodically when an action is taken to adjust the member LSPs, either to adjust their bandwidths, their number, or both. A normalization process is associated with a sampling process and periodically estimates aggregate utilization of a container LSP.
- **Nominal LSP**—The instance of a container LSP that is always present.
- **Supplementary LSP**—The instances or sub-LSPs of a container LSP, which are dynamically created or removed.

Autobandwidth is run over each of the member LSPs, and each LSP is resized according to the traffic it carries and the autobandwidth configuration parameters. The aggregate

demand on a container LSP is tracked by adding up the bandwidth across all the member LSPs.

- **Minimum signaling-bandwidth**—The minimum bandwidth with which a member LSP is signaled at the time of normalization or initialization. This could be different from the minimum-bandwidth defined under autobandwidth.
- **Maximum signaling-bandwidth** —The maximum bandwidth with which a member LSP is signaled at the time of normalization or initialization. This could be different from the maximum-bandwidth defined under autobandwidth.
- **Merging-bandwidth** —Specifies the lower bandwidth threshold on the aggregate bandwidth usage, such that if the aggregate usage falls below this value, the ingress router merges the member LSPs at the time of normalization.
- **Splitting-bandwidth** —Specifies the upper bandwidth threshold on the aggregate bandwidth usage, such that if the aggregate usage exceeds this value, the ingress router splits the member LSPs at the time of normalization.
- **Aggregate minimum-bandwidth** —Sum of merging-bandwidth of the current active member LSPs. This minimum bandwidth is different from the autobandwidth minimum-bandwidth.
- **Aggregate maximum-bandwidth**—Sum of the splitting-bandwidth of the current active member LSPs. This maximum bandwidth is different from the autobandwidth maximum-bandwidth.

---

### LSP Splitting

- [Operational Overview on page 417](#)
- [Operational Constraints on page 418](#)
- [Supported Criteria on page 418](#)
- [Splitting Triggers on page 419](#)

#### **Operational Overview**

The LSP splitting mechanism enables an ingress router to create new member LSPs or to re-signal existing LSPs with different bandwidths within a container LSP when a demand X is placed on the container LSP. With LSP splitting enabled, an ingress router periodically creates a number of LSPs (by signaling new ones or re-signaling existing ones) to accommodate a new aggregate demand X. In the current implementation, an ingress router tries to find an LSP path satisfying a demand X and other constraints. If no path is found, either the LSP is not signaled or it remains up, but with the old reserved bandwidth.

Between two normalization events (splitting or merging), individual LSPs might get re-sigaled with different bandwidths due to the autobandwidth adjustments. If a container LSP is not configured with autobandwidth, then the member LSPs are signaled with the static bandwidth value, if configured. There is no dynamic splitting in this case, as there is no dynamic estimation of aggregate bandwidth. The splitting adjustments with a specific bandwidth value can be manually triggered.

**NOTE:**

Be aware of the following considerations for LSP splitting:

- After LSP splitting, the ingress router continues to inject one forwarding adjacency. Forwarding adjacencies are not supported in IGP for this feature.
- Between two normalization events, two LSPs might have different bandwidths subjected to autobandwidth constraints.
- After LSPs are split (or merged), make-before-break uses the fixed filter (FF) style sharing unless the adaptive option is configured. However, two different LSPs do not do the shared explicit (SE) style sharing for this feature.
- When LSPs are re-signaled with modified bandwidths, some of the LSPs might not get signaled successfully, leading to failover options.

---

**Operational Constraints**

LSP splitting has the following operational constraints:

- LSP bandwidth—Although there are a number of ways to allocate bandwidth values to the LSPs, the Junos OS implementation supports only an equal-bandwidth allocation policy when normalization is done, wherein all the member LSPs are signaled or re-signaled with equal bandwidth.
- Number of LSPs—If an ingress router is configured to have a minimum number of LSPs, it maintains the minimum number of LSPs even if the demand can be satisfied with less than the minimum number of LSPs. In case the ingress router is unable to do constraint-based routing for computations on the sufficient number of LSPs or signal sufficient number of LSPs, the ingress router resorts to a number of fallback options.

By default, an incremental approach is supported as a fallback option (unless configured differently), where an ingress router makes attempts to bring up the sufficient number of LSPs, such that the new aggregate bandwidth exceeds the old aggregate bandwidth (and is as close to the desired demand as possible). The ingress router then load-balances traffic using the LSPs. The LSPs that could not be brought up are removed by the ingress router.

**Supported Criteria**

When a container LSP signals a member LSP, the member LSP gets signaled with minimum-signaling-bandwidth. Since each member LSP is configured with autobandwidth, between two normalization events, each LSP can undergo autobandwidth adjustment multiple times. As the traffic demand increases, the ingress router creates additional supplementary LSPs. All member LSPs are used for ECMP, so they should roughly have the same reserved bandwidth after normalization.

For example, if there are K LSPs signaled after normalization, each LSP is signaled with equal bandwidth B. The total aggregate bandwidth reserved is B.K, where B satisfies the following condition:



- Minimum signaling-bandwidth is less than or equal to B, which in turn is less than or equal to the maximum signaling-bandwidth

(minimum-signaling-bandwidth  $\leq$  B  $\leq$  maximum-signaling-bandwidth)

Until the next normalization event, each member LSP undergoes several autobandwidth adjustments. After any autobandwidth adjustment, if there are N LSPs with reserved bandwidths  $b_i$ , where  $i=1,2,\dots, N$ , each  $b_i$  should satisfy the following condition:

- Minimum bandwidth is less than or equal to  $b_i$ , which in turn is less than or equal to the maximum bandwidth

(minimum-bandwidth  $\leq b_i \leq$  maximum-bandwidth)

Both the above-mentioned conditions are applicable for per member LSP (nominal and supplementary), and essentially have the reserved bandwidth to exist within a range.

### ***Splitting Triggers***

Every time the normalization timer expires, the ingress router decides if LSP splitting is required. The ingress router works with the aggregate bandwidth instead of the individual LSP bandwidths. The following two variables are defined for aggregate bandwidth:

- **Current-Aggr-Bw**—Sum of reserved bandwidths of all current member LSPs.
- **New-Aggr-Bw**—Sum of traffic rates on all current member LSPs based on sampling.

Taking for example, if there are N member LSPs in the network at the time of normalization, the two approaches to trigger LSP splitting are as follows:

- **Absolute trigger**—LSP splitting is performed when **New-Aggr-Bw** is greater than **Aggregate-maximum-bandwidth**.

(**New-Aggr-Bw** > **Aggregate-maximum-bandwidth**)

- **Relative trigger**—The **Current-Aggr-Bw** is compared with **New-Aggr-Bw** at the ingress routing device. LSP splitting is performed when the difference in the bandwidth amount is off by a threshold.

( $[1-a] \times \text{Current-Aggr-Bw} < \text{New-Aggr-Bw} < [1+a] \times \text{Current-Aggr-Bw}$ , where  $0 \leq a \leq 1$ )

When **New-Aggr-Bw** is greater than or equal to  $[1+a]$  multiplied by **Current-Aggr-Bw**, the ingress routing device does not perform normalization, but instead LSP splitting is done. However, when both LSP splitting and LSP merging are configured on the ingress router, LSP splitting is triggered on the ingress router when one of the two conditions is satisfied.

### ***LSP Merging***

- [Operational Overview on page 420](#)
- [Operational Constraints on page 420](#)
- [Merging Triggers on page 420](#)

### **Operational Overview**

Junos OS supports two kinds of LSPs – CLI-configured LSPs and dynamically created LSPs. The CLI-configured LSPs are created manually and remain in the system until the configuration is modified. The dynamic LSPs are created dynamically by next generation MVPN, BGP virtual private LAN service (VPLS), or LDP, based on a template configuration, and are removed from the system when not used by any application for a certain duration. LSP merging follows a similar approach as dynamic LSPs.

LSP merging enables an ingress routing device to dynamically eliminate some member LSPs of the container LSP so less state information is maintained in the network. If an ingress router provisions several member LSPs between the ingress and egress routers, and there is an overall reduction in aggregate bandwidth (resulting in some LSPs being under-utilized), the ingress router distributes the new traffic load among fewer LSPs.

Although there are a number of ways to merge the member LSPs, Junos OS supports only overall-merge when normalization is being performed. An ingress router considers the aggregate demand and the minimum (or maximum) number of LSPs and revises the number of LSPs that should be active at an ingress routing device. As a result, the following can take place periodically as the normalization timer fires:

- Re-signaling some of the existing LSPs with updated bandwidth
- Creating new LSPs
- Removing some of the existing LSPs

### **Operational Constraints**

If a container LSP is not configured with autobandwidth, then the member LSPs are signaled with the static bandwidth value, if configured. LSP merging does not happen because there is no dynamic estimation of aggregate bandwidth. However, a manual trigger for splitting and adjusting with a specific bandwidth value can be configured.



#### **NOTE:**

- Nominal LSPs are never deleted as part of LSP merging.
  - Before deleting an LSP, the LSP is made inactive, so that traffic shifts to other LSPs before removing the LSP. This is because RSVP sends PathTear before deleting routes and next hops from the Packet Forwarding Engine.
  - When member LSPs are re-signaled with modified bandwidth, it might happen that some LSPs do not get signaled successfully.
- 

### **Merging Triggers**

Every time the normalization timer expires, the ingress router decides if LSP merging is required. The ingress router works with the aggregate bandwidth instead of the individual LSP bandwidths. The following two variables are defined for aggregate bandwidth:

- **Current-Aggr-Bw**—Sum of reserved bandwidths of all current member LSPs.

- **New-Aggr-Bw**—Sum of traffic rates on all current member LSPs based on sampling.

For example, if there are N member LSPs in the network at the time of normalization, the two approaches to trigger LSP merging are as follows:

- Absolute trigger—LSP merging is performed when **New-Aggr-Bw** is less than **Aggregate-minimum-bandwidth**.

$$(\text{New-Aggr-Bw} < \text{Aggregate-maximum-bandwidth})$$

- Relative trigger—The **Current-Aggr-Bw** is compared with **New-Aggr-Bw** at the ingress routing device. LSP merging is performed when the difference in the bandwidth amount is off by a threshold.

$$([1-a] \times \text{Current-Aggr-Bw} < \text{New-Aggr-Bw} < [1+a] \times \text{Current-Aggr-Bw}, \text{ where } 0 \leq a \leq 1)$$

When the **New-Aggr-Bw** value is less than or equal to  $[1+a]$  multiplied by the **Current-Aggr-Bw** value, the ingress routing device does not perform normalization, but instead LSP merging is done. However, when both LSP splitting and LSP merging are configured on the ingress router, LSP splitting is triggered on the ingress router when one of the two conditions is satisfied.

### Node and Link Protection

Junos OS supports the following mechanisms for node and link protection:

- Fast-reroute
- Link protection
- Node-link protection

Only one of the above-mentioned modes of protection can be configured on an ingress routing device at any given time. All member LSPs (nominal and supplementary) use the same mode of protection that is configured.

### Naming Convention

While configuring a container LSP, a name is assigned to the LSP. The name of a nominal and a supplementary LSP is formed by adding the configured-name suffix and an auto-generated suffix to the name of the container LSP. The name of the container LSP is unique and is checked for accuracy during the configuration parsing. The container LSP name should uniquely identify parameters, such as the ingress and egress router names.



**NOTE:** A container LSP member LSP and a point-to-point LSP on an ingress routing device cannot have the same LSP name.

The container LSPs follow a number-based LSP naming convention. For example, if the nominal LSP's configured name is **bob** and the number of member LSPs is N, the member LSPs are named **bob-*<configured-suffix>-1***, **bob-*<configured-suffix>-2***, ..., and **bob-*<configured-suffix>-N***.

After a normalization event, the number of member LSPs can change. For example, if the number of member LSPs increases from six to eight, then the ingress routing device keeps the first six LSPs named **bob-*<configured-suffix>-1***, **bob-*<configured-suffix>-2***, ..., and **bob-*<configured-suffix>-6***. The two additional LSPs are named **bob-7** and **bob-8**. The original LSPs might need to be re-optimized if their signaled bandwidth changes.

Similarly, if the number of member LSPs reduces from eight to six, the ingress routing device re-signals the member LSPs in such a way that the remaining active LSPs in the system are named **bob-*<configured-suffix>-1***, **bob-*<configured-suffix>-2***, ..., and **bob-*<configured-suffix>-6***.

In the process of creating new LSPs, an RSVP LSP named **bob-*<configured-suffix>-7*** can be configured.

---

### Normalization

- [Operational Overview on page 422](#)
- [Operational Constraints on page 422](#)
- [Inter-Operation with Autobandwidth on page 423](#)

#### **Operational Overview**

Normalization is an event that happens periodically. When it happens, a decision is made on the number of member LSPs that should remain active and their respective bandwidths in a container LSP. More specifically, the decision is made on whether new supplementary LSPs are to be created, or any existing LSPs are required to be re-signaled or deleted during the normalization event.

Between two normalization events, a member LSP can undergo several autobandwidth adjustments. A normalization timer, similar to re-optimization timer, is configured. The normalization timer interval should be no less than the adjustment interval or optimization timer.



**NOTE:** Normalization is not triggered based on network events, such as topology changes.

---

#### **Operational Constraints**

Normalization has the following operational constraints:

- Normalization happens only when none of the member LSPs are undergoing re-optimization or make-before-break. Normalization starts when all the member LSPs complete their ongoing make-before-break. If normalization is pending, new optimization should not be attempted until the normalization is complete.
- After normalization, an ingress routing device first computes a set of bandwidth-feasible paths using constraint-based routing computations. If enough constraint-based routing computed paths are not brought up with an aggregate bandwidth value that exceeds the desired bandwidth, several failover actions are taken.

- After a set of bandwidth-feasible paths are available, the ingress routing device signals those paths while keeping the original set of paths up with the old bandwidth values. The make-before-break is done with shared explicit (SE) sharing style, and when some of the LSPs do not get successfully re-signaled, a bounded number of retries is attempted for a specified duration. Only when all the LSPs are successfully signaled does the ingress router switch from the old instance of the container LSP to the newer instance. If all LSPs could not be successfully signaled, the ingress router keeps those instances of members that are up with higher bandwidth values.

For example, if the bandwidth of an old instance of a member LSP (LSP-1) is 1G, the LSP is split into LSP-1 with bandwidth 2G and LSP-2 with bandwidth 2G. If the signaling of LSP-1 with bandwidth 2G fails, the ingress router keeps LSP-1 with bandwidth 1G and LSP-2 with bandwidth 2G.

When there is a signaling failure, the ingress routing device stays in the error state, where some LSPs have updated bandwidth values only if the aggregate bandwidth has increased. The ingress router makes an attempt to bring up those LSPs that could not be successfully signaled, resulting in minimum traffic loss.

- If an LSP goes down between two normalization events, it can increase the load on other LSPs that are up. In order to prevent overuse of other LSPs, premature normalization can be configured in case of LSP failure. LSPs can go down because of pre-emption or lack of node or link protection. It might not be necessary to bring up the LSPs that are down because the normalization process re-runs the constraint-based routing path computations.

### ***Inter-Operation with Autobandwidth***

Taking as an example, there is one nominal LSP named LSP-1 configured with the following parameters:

- Splitting-bandwidth and maximum-signaling-bandwidth of 1G
- Merging-bandwidth and minimum-signaling-bandwidth of 0.8G
- Autobandwidth

Normalization is performed differently in the following scenarios:

- [Changes in Per-LSP Autobandwidth Adjustments on page 423](#)
- [Changes in Traffic Growth on page 425](#)
- [Computed Range and Configured Feasible Ranges on page 425](#)

### ***Changes in Per-LSP Autobandwidth Adjustments***

[Table 13 on page 424](#) illustrates how normalization splits and merges member LSPs as autobandwidth adjustments change per-LSP bandwidth with unconditional normalization.

Table 13: Normalization with Per-LSP Autobandwidth Adjustment Changes

Normalization Time	Current State	Events	Adjusted State
T0	No state.	Initialization	LSP-1 is signaled with bandwidth of 0.8G
T1	LSP-1 usage increases to 1.5G	<ul style="list-style-type: none"> <li>Multiple autobandwidth adjustments since T0 is possible.</li> <li>The ingress router decides to split LSP-1 into two LSPs, and creates LSP-2.</li> </ul>	LSP-1 = 0.8G LSP-2 = 0.8G
T2	LSP-1 usage increase to 2G LSP-2 usage increases to 0.9G (within limits)	<ul style="list-style-type: none"> <li>Aggregate bandwidth is 2.9G, which exceeds aggregate splitting maximum of 2G.</li> <li>The ingress router decides to split LSP-1 into three LSPs, and creates LSP-3.</li> </ul>	LSP-1 = 1G LSP-2 = 1G LSP-3 = 1G
T3	LSP-3 usage increases to 1.5G	<ul style="list-style-type: none"> <li>Aggregate bandwidth is 3.5G with a maximum aggregate splitting of 3G.</li> <li>The ingress router decides to split LSP-1 into four LSPs, and creates LSP-4.</li> </ul>	LSP-1 = 1G LSP-2 = 1G LSP-3 = 1G LSP-4 = 1G
T4	LSP-2 usage drops to 0.5G	<ul style="list-style-type: none"> <li>Aggregate bandwidth is 3G.</li> <li>The ingress router decides to merge LSP-1 and removes LSP-4.</li> </ul>	LSP-1 = 1G LSP-2 = 1G LSP-3 = 1G

Because autobandwidth is configured on a per-LSP basis, every time there is an autobandwidth adjustment, the ingress router re-signals each LSP with **Max Avg Bw**.

Another approach to handling the changes in per-LSP autobandwidth adjustments is to not allow individual LSPs to run autobandwidth on the ingress router, but to run autobandwidth in passive (monitor) mode. This way, sampling is done at every statistics interval for member LSPs only, and normalization is performed for the container LSP alone instead of acting on individual LSPs adjustment timer expiry.

As a result, the number of re-signaling attempts and bandwidth fluctuations for a given member LSP is reduced. Only the computed bandwidth-values per-member LSP is used by the ingress router to find an aggregate bandwidth to be used during normalization. Configuring autobandwidth adjustment followed by normalization (adjustments and normalization intervals are comparable) can lead to considerable overhead because of re-signaling.

Taking the same example, and applying the second approach, LSP-1 goes from 0.8G to 1.5G and then back to 0.8G. If the normalization timer is of the same order as the adjustment interval, the ingress router leaves LSP-1 alone with its original 0.8G and only signals LSP-2 with 0.8G. This helps achieve the final result of normalization, thus avoiding the extra signaling attempt on LSP-1 with 1.5G at adjustment timer expiry.

Because member LSPs always use equal bandwidth, any adjustment done on member LSPs is undone. The member LSPs are re-signaled with reduced bandwidth when compared to the reserved capacity in adjustment trigger with normalization trigger. Therefore, avoiding adjustment trigger for member LSPs might be useful assuming that normalization and adjustment intervals are of the same order.



**NOTE:** We recommend that the normalization timer be higher than the autobandwidth adjustment interval and regular optimization duration, as the traffic trends are observed at a longer time scale and normalization is performed one-to-three times per day. An LSP can undergo optimization for the following reasons:

- Normal optimization
- Autobandwidth adjustment
- Normalization

#### *Changes in Traffic Growth*

Table 14 on page 425 illustrates how normalization is performed when traffic grows in large factor.

**Table 14: Normalization with Traffic Growth**

Normalization Time	Current State	Events	Adjusted State
T0	No state		LSP-1 is signaled with bandwidth of 0.8G
T1	LSP-1 usage increase to 3G	<ul style="list-style-type: none"> <li>• Aggregate usage exceeds maximum splitting bandwidth</li> <li>• The ingress router decides to split LSP-1, and creates two more supplementary LSPs</li> </ul>	LSP-1 = 1G LSP-2 = 1G LSP-3 = 1G

Having fewer LSPs is preferred over signaling four LSPs each with 0.8G bandwidth, unless there is a constraint on the minimum number of LSPs.

#### ***Computed Range and Configured Feasible Ranges***

When an ingress router is configured with the minimum and maximum number of LSPs, and per LSP splitting-bandwidth and merging-bandwidth values, the bandwidth thresholds are used for splitting and merging. For this, the number of LSPs (N) should satisfy the following constraints:

$$\text{minimum-member-lsps} \leq N \leq \text{maximum-member-lsps}$$

At the time of normalization, based on the aggregate demand X:

$$\lceil X/\text{splitting-bandwidth} \rceil \leq N \leq \lfloor X/\text{merging-bandwidth} \rfloor$$

The above-mentioned constraints provide two ranges for N to work from. If the two ranges for N are overlapping, N will be selected from the overlapping interval (lowest possible N) to keep the number of LSPs small in the network.

Otherwise, if maximum-member-lsps is less than  $\lceil X/\text{splitting-bandwidth} \rceil$ , the ingress router keeps (at maximum) the maximum-member-lsps in the system, and the bandwidth of each LSP is  $\lceil X/\text{maximum-member-lsps} \rceil$  or the maximum-signaling-bandwidth, whichever is less. It is possible that some LSPs might not get signaled successfully.

Similarly, if minimum-member-lsps is greater than  $\lceil X/\text{merging-bandwidth} \rceil$ , the ingress router keeps (at minimum) the minimum-member-lsps in the system, and the bandwidth of each LSP is  $\lceil X/\text{minimum-member-lsps} \rceil$  or the minimum-signaling-bandwidth, whichever is less.

Taking as an example, normalization is performed as following in these cases:

- Case 1
  - minimum-member-lsps = 2
  - maximum-member-lsps = 10
  - aggregate demand = 10G
  - merging-bandwidth = 1G
  - splitting-bandwidth = 2.5G

In this case, the ingress routing device signals four member LSPs each with a bandwidth of 2G.

- Case 2
  - minimum-member-lsps = 5
  - maximum-member-lsps = 10
  - aggregate demand = 10G
  - merging-bandwidth = 2.5G
  - splitting-bandwidth = 10G

In this case, the ingress routing device signals five member LSPs each with a bandwidth of 2G. Here, the static configuration on the number of member LSPs takes precedence.

- Case 3
  - minimum-signaling-bandwidth = 5G
  - maximum-signaling-bandwidth = 40G
  - merging-bandwidth = 10G
  - splitting-bandwidth = 50G

When a container LSP comes up, the nominal LSP is signaled with minimum-signaling-bandwidth. At the time of normalization, the



new-aggregate-bandwidth is 100G. To find N and the bandwidth of each LSP, N should satisfy the following constraint:

$$100/50 \leq N \leq 100/10, \text{ which gives } 2 \leq N \leq 10$$

Therefore, N is equal to:

- N = 2, bandwidth =  $\min \{100/2G, 40G\} = 40G$

This option does not satisfy the new aggregate of 100G.

- N = 3, bandwidth =  $\min \{100/3G, 40G\} = 33.3G$

This option makes the aggregate bandwidth equal to 100G.

In this case, the ingress routing device signals three LSPs each with a bandwidth of 33.3G.



**NOTE:** The ingress router does not signal an LSP smaller than the minimum-signaling-bandwidth.

### Constraint-Based Routing Path Computation

Although there are no changes in the general constraint-based routing path computation, with a container LSP, there is a separate module that oversees the normalization process, schedules constraint-based routing events, and schedules switchover from an old instance to a new instance, when appropriate. An ingress routing device has to handle the constraint-based routing path computation periodically. When normalization occurs, an ingress router has to compute constraint-based routing paths, if the number of LSPs or the bandwidth of the LSPs needs to be changed.

For example, there are K LSPs at the ingress router with bandwidth values X-1, X-2, ..., and X-K. The current aggregate bandwidth value is Y, which is the sum of X-1 plus X-2 plus X-K. If there is a new demand of W, the ingress router first computes how many LSPs are required. If the ingress router only needs N LSPs (LSP-1, LSP-2, ..., and LSP-N) each with bandwidth value B, the task of the constraint-based routing module is to provide a set of bandwidth-feasible LSPs that can accommodate the new aggregate demand which is not less than Y.

The ingress router then tries to see if the constraint-based routing paths can be computed successfully for all N LSPs. If the paths for all the LSPs are found successfully, the constraint-based routing module returns the set to the normalization module.

It is possible that the constraint-based routing computation is not successful for some LSPs. In this case, the ingress routing device takes the following action:

- If the configuration allows for incremental-normalization, implying if the ingress router has enough LSPs whose aggregate exceeds Y, the constraint-based routing module returns that set of paths.
- Whether increment-normalization is configured or not, if constraint-based routing paths could not be computed for a sufficient number of LSPs, the ingress router has to repeat the process of finding a new set of LSPs. Initially, the ingress router starts

with the lowest value of N from the feasible region. Every time, the ingress router has to revise the number, it linearly increases it by 1. As a result, per LSP bandwidth becomes less and therefore, there is a greater chance of successful signaling. The process is repeated for all feasible values of N (or some bounded number of times or duration as configured).

The ingress router signals the LSPs after successful computations of the constraint-based routing path computation. It might happen that when the LSPs are signaled, signaling of many LSPs fail. In addition to the constraint-based routing path computations to be successful, the RSVP signaling should also succeed, such that the new aggregate is not less than the old aggregate bandwidth.

---

### Sampling

Sampling is important for normalization to function. With sampling configured, an ingress routing device is able to make a statistical estimate of the aggregate traffic demands. Every time the sampling timer fires, the ingress routing device can consider traffic rates on different LSPs and compute an aggregate bandwidth sample. This sampling timer is different from the statistics sampling done periodically by RSVP on all LSPs. The aggregate bandwidth is a sample to be used at the time of normalization. An ingress routing device can save past samples to compute an average (or some other statistical measure) and use it the next time normalization happens.

To remove any outlier samples, a sampling token is configured. In other words, from all the aggregate samples collected during the configured time, the bottom and top outliers are ignored before computing a statistical measure from the remaining samples.

The following two methods of computing an aggregate bandwidth value are supported:

- **Average**—All the aggregate bandwidth samples are considered by the ingress routing device, and then all the outlier samples are removed. The average bandwidth value is computed from the remaining samples to be used during normalization.
- **Max**—All the aggregate bandwidth samples are considered by the ingress routing device, and then all the outlier samples are removed. The maximum bandwidth value is picked from the remaining samples to be used during normalization.

The time duration, the number of past aggregate samples to store, the percentile value to determine, and the ignore outliers are user-configurable parameters.

---

### Support for NSR, IPG-FA, and Static Routes

Starting with Junos OS Release 15.1, container label-switched paths (LSPs) provide support for nonstop active routing (NSR), IGP forwarding adjacency (FA), and static routes to address the requirements of wider business cases.

- [NSR Support on page 429](#)
- [IPG-FA Support on page 430](#)
- [Static Route Support on page 431](#)

### NSR Support

A container LSP has the characteristics of ECMP and RSVP traffic engineering. Because a container LSP consists of several member LSPs between an ingress and an egress router, with each member LSP taking a different path to the same destination, the ingress router is configured with all the parameters necessary to compute an RSVP ECMP LSP. These parameters along with the forwarding state information have to be synchronized between the master and backup Routing Engines to enable the support for nonstop active routing (NSR) for container LSPs. While some of the forwarding state information on the backup Routing Engine is locally built based on the configuration, most of it is built based on periodic updates from the master Routing Engine. The container LSPs are created dynamically using the replicated states on the backup Routing Engine.

By default, normalization occurs once in every 6 hours and during this time, a number of autobandwidth adjustments happen over each member LSP. A member LSP is resized according to the traffic it carries and the configured autobandwidth configuration parameters. The aggregate demand on a container LSP is tracked by summing up the bandwidth across all the member LSPs.

For RSVP point-to-point LSPs, a Routing Engine switchover can be under any one of the following:

- **Steady state**

In the steady state, the LSP state is up and forwards traffic; however, no other event, such as the make-before-break (MBB), occurs on the LSP. At this stage, the RPD runs on both the Routing Engines, and the switchover event toggles between the master and backup Routing Engine. The backup Routing Engine has the LSP information replicated already. After the switchover, the new master uses the information of the replicated structure to construct the container LSP and en-queues the path (ERO) of LSP in the retrace mode. RSVP signals and checks if the path mentioned in the ERO is reachable. If the RSVP checks fail, then the LSP is restarted. If the RSVP checks succeed, the LSP state remains up.

- **Action leading to make-before-break (MBB)**

A container LSP can be optimized with updated bandwidth, and this change is done in a MBB fashion. During an MBB process, there are two path instances for a given LSP, and the LSP switches from one instance to another. For every Routing Engine switchover, the path is checked to find out where in the MBB process the path is. If the path is in the middle of the MBB process, with the main instance being down and the re-optimized path being up, then MBB can switch over to the new instance. The **show mpls lsp extensive** command output, in this case, is as follows:

```
13 Dec 3 01:33:38.941 Make-before-break: Switched to new instance
12 Dec 3 01:33:37.943 Record Route: 10.1.1.1
11 Dec 3 01:33:37.942 Up
10 Dec 3 01:33:37.942 Automatic Autobw adjustment succeeded: BW changes
from 100 bps to 281669 bps
9 Dec 3 01:33:37.932 Originate make-before-break call
8 Dec 3 01:33:37.931 CSPF: computation result accepted 10.1.1.1
7 Dec 3 01:28:44.228 CSPF: ERO retrace was successful 10.1.1.1
6 Dec 3 01:19:39.931 10.1.1.2 Down: mbb/reopt
5 Dec 3 01:18:29.286 Up: mbb/reopt
```

```

4 Dec 3 01:14:47.119 10.1.1.2 Down: mbb/reopt
3 Dec 3 01:13:29.285 Up: mbb/reopt
2 Dec 3 01:10:59.755 Selected as active path: selected by master RE

```

A similar behavior is retained for member LSPs during bandwidth optimization.

A Routing Engine switchover under the steady state (when normalization is not in progress), keeps the container LSPs up and running without any traffic loss. Events, such as an MBB due to autobandwidth adjustments, link status being down, or double failure, in the steady state are similar to a normal RSVP point-to-point LSP.

If the container LSP is in the process of normalization, and the normalization event is triggered either manually or periodically, it goes through the computation and execution phase. In either of the cases, zero percent traffic loss is not guaranteed.

- Normalization in the computation phase

During the computation phase, the master Routing Engine calculates the targeted member LSP count and bandwidth with which each member LSP should be re-signaled. The backup Routing Engine has limited information about the container LSP, such as the LSP name, LSP ID, current bandwidth of its member LSP, member LSP count, and the normalization retry count. If the switchover happens during the computation phase, then the backup Routing Engine is not aware of the targeted member LSP count and the bandwidth to be signaled. Since traffic statistics are not copied to the backup Routing Engine, it cannot compute the targeted member count and bandwidth. In this case, the new master Routing Engine uses the old data stored in the targeted member LSP count and the targeted bandwidth to signal the LSPs.

- Normalization in the execution phase

During the execution phase, RSVP of the master Routing Engine tries to signal the LSPs with the newly calculated bandwidth. If the switchover occurs during the signaling of LSPs with greater bandwidth or during LSP splitting or merging, then the new master Routing Engine uses the information of the targeted member count and bandwidth value to be signaled with, to bring up the LSPs.

### ***IPG-FA Support***

A forwarding adjacency (FA) is a traffic engineering label-switched path (LSP) that is configured between two nodes and used by an interior gateway protocol (IGP) to forward traffic. By default, an IGP does not consider MPLS traffic-engineering tunnels between sites, for traffic forwarding. Forwarding adjacency treats a traffic engineering LSP tunnel as a link in an IGP topology, thus allowing the nodes in the network also to forward the IP traffic to reach the destination over this FA LSP. A forwarding adjacency can be created between routing devices regardless of their location in the network.

To advertise a container LSP as an IGP-FA, the LSP name needs to be configured either under IS-IS or OSPF. For example:

```

IS-IS [edit]
protocols {
  isis {
    label-switched-path container-lsp-name;
  }
}

```

```

OSPF    [edit]
        protocols {
          ospf {
            area 0.0.0.0 {
              label-switched-path container-lsp-name;
            }
          }
        }

```



**NOTE:** The IGP-FA is applied to both container LSPs and regular point-to-point LSPs. If a container LSP and a point-to-point LSP share the same name, the point-to-point LSP is given preference for FA.

### Static Route Support

Static routes often include only one or very few paths to a destination and generally do not change. These routes are used for stitching services when policies and other protocols are not configured.

To advertise a container LSP as a static route, the LSP name needs to be configured under the static route configuration. For example:

```

Static Route  [edit]
              routing-options {
                static {
                  route destination {
                    lsp-next-hop container-lsp-name;
                  }
                }
              }

```



**NOTE:** The static route support is applied to both container LSPs and regular point-to-point LSPs. If a container LSP and a point-to-point LSP share the same name, the point-to-point LSP is given preference for static routing.

## Configuration Statements Supported for Container LSPs

Table 15 on page 432 lists the MPLS LSP configuration statements that apply to RSVP LSP and a container LSP (nominal and supplementary).

The configuration support is defined using the following terms:

- Yes—The configuration statement is supported for this type of LSP.
- No—The configuration statement is not supported for this type of LSP.
- N/A—The configuration statement is not applicable for this type of LSP.

Table 15: Applicability of RSVP LSPs Configuration to a Container LSP

Configuration Statement	RSVP LSP (Ingress)	Member LSP (Ingress)
adaptive (Default: non-adaptive)	Yes	Yes
admin-down	Yes	Yes
admin-group	Yes	Yes
admin-groups-except	Yes	Yes
apply-groups	Yes	Yes
apply-groups-except	Yes	Yes
associate-backup-pe-groups	Yes	No
associate-lsp (No bidirectional support)	Yes	No
auto-bandwidth	Yes	Yes
backup	Yes	No
bandwidth	Yes	Yes
class-of-service	Yes	Yes
corouted-bidirectional (No bidirectional support)	Yes	No
corouted-bidirectional-passive (No bidirectional support)	Yes	No
description	Yes	Yes
disable	Yes	Yes
egress-protection	Yes	No
exclude-srlg	Yes	Yes
fast-reroute (Same fast reroute for all member LSPs)	Yes	Yes

Table 15: Applicability of RSVP LSPs Configuration to a Container LSP (*continued*)

Configuration Statement	RSVP LSP (Ingress)	Member LSP (Ingress)
from	Yes	Yes
hop-limit	Yes	Yes
install	Yes	Yes
inter-domain (Same termination router)	Yes	Yes
secondary (All LSPs are primary)	Yes	No
ldp-tunneling (All LSPs do tunneling)	Yes	Yes
least-fill	Yes	Yes
link-protection (All LSPs share same link protection mechanism)	Yes	Yes
lsp-attributes	Yes	Yes
lsp-external-controller	Yes	No
metric (All LSPs are same)	Yes	Yes
most-fill	Yes	Yes
no-cspf (LSPs use IGP)	Yes	Yes
no-decrement-ttl (All LSPs share same TTL behavior)	Yes	Yes
no-install-to-address	Yes	Yes
no-record	Yes	Yes
node-link-protection (All LSPs share same node-link protection mechanism)	Yes	Yes

Table 15: Applicability of RSVP LSPs Configuration to a Container LSP (*continued*)

Configuration Statement	RSVP LSP (Ingress)	Member LSP (Ingress)
oam	Yes	Yes
optimize-hold-dead-delay (All LSPs have same value)	Yes	Yes
optimize-switchover-delay (All LSPs have same value)	Yes	Yes
optimize-timer (All LSPs have same value)	Yes	Yes
p2mp	Yes	N/A
policing (Variable traffic)	Yes	No
preference	Yes	Yes
primary (All paths are primary)	Yes	No
random	Yes	Yes
record	Yes	Yes
retry-limit (Applicable to members)	Yes	Yes
retry-timer (Applicable to members)	Yes	Yes
revert-timer (No secondary LSP)	Yes	No
secondary (All LSPs are primary)	Yes	No
soft-preemption	Yes	Yes



Table 15: Applicability of RSVP LSPs Configuration to a Container LSP (*continued*)

Configuration Statement	RSVP LSP (Ingress)	Member LSP (Ingress)
standby (All LSPs are standby)	Yes	No
template	Yes	No
to	Yes	Yes
traceoptions	Yes	Yes
ultimate-hop-popping	Yes	Yes

### Impact of Configuring Container LSPs on Network Performance

A container LSP is a container LSP that allows multiple member LSPs to co-exist and be managed as a bundle. The member LSPs are similar to independent point-to-point RSVP LSPs. As a result, resource consumption is similar to the sum of resources consumed by each point-to-point RSVP LSP. However, provisioning a container LSP is more efficient, as under-utilized member LSPs are dynamically removed, thus saving memory and CPU resources.

The container LSP features are dependent on the presence of a functional base MPLS RSVP implementation. As a result, a container LSP does not introduce any security considerations beyond the existing considerations for the base MPLS RSVP functionality. The categories of possible attacks and countermeasures are as follows:

- Interaction with processes and router configuration

No new communication mechanisms with external hosts are required for a container LSP. Data arrives at the RSVP module through local software processes and router configuration, other than RSVP neighbor adjacency. Junos OS provides security controls on access to the router and router configuration.

- Communication with external RSVP neighbors

RSVP signaled MPLS LSPs depend on the services of RSVP and IGP to communicate RSVP messages among neighboring routers across the network. Because the RSVP sessions involve communication outside of the local router, they are subject to many forms of attack, such as spoofing of peers, injection of falsified RSVP messages and route updates, and attacks on the underlying TCP/UDP transport for sessions. Junos OS provides countermeasures for such attack vectors.

- Resource limits and denial of service

Junos OS provides several mechanisms through policers and filters to protect against denial-of-service attacks based on injecting higher than the expected traffic demands. At the MPLS LSP level, Junos OS allows operators to configure limits on the LSP

bandwidth and the number of LSPs. However, like point-to-point RSVP LSPs, container LSPs do not enforce limits on the volume of traffic forwarded over these LSPs.

## Supported and Unsupported Features

Junos OS supports the following container LSP features:

- Equal-bandwidth-based LSP splitting mechanism
- Aggregate-bandwidth-based LSP splitting and merging in a make-before-break way
- LSP-number-based naming mechanism for dynamically created member LSPs
- Periodic sampling mechanisms to estimate aggregate bandwidth
- Interoperability with auto-bandwidth feature
- ECMP using the dynamically created LSPs
- LDP-tunneling on the dynamically created LSP
- Configuring container LSP using IGP shortcuts
- Aggregated Ethernet links
- Logical systems

Junos OS does **not** support the following container LSP functionality:

- Node and link disjoint paths for different LSPs between an ingress and an egress routing device
- Bandwidth allocation policy different from equal bandwidth policy at the normalization event
- Constraint-based routing path computation to find equal IGP cost paths for different LSPs
- RSVP objects, such as **MLSP\_TUNNEL Sender Template**, and **MLSP\_TUNNEL Filter Specification** defined in [KOMPELLA-MLSP]
- Change in topology as a trigger for LSP splitting and merging
- Change in topology and link failure as a trigger for normalization, unless member LSPs go down
- Egress protection on container LSP
- Container LSP as a backup LSP for IGP interface
- Container LSP configured as IGP interface as forwarding address
- Container LSP as provider tunnel for multicast VPNs
- Dynamic LSPs for normalization
- CCC using container LSP
- Secondary paths for container LSP
- Bidirectional container LSP

- Policing
- Static routes using container LSPs as next hops on a best-effort basis
- External path computing entity, such as PCE
- Graceful Routing Engine switchover
- Nonstop active routing
- Unified ISSU
- Multichassis
- IPv6

**Related Documentation**

- [Example: Configuring Dynamic Bandwidth Management Using Container LSP on page 441](#)
- [Maximize Bandwidth Utilization with Juniper Networks TE++](#)

---

## Configuring Dynamic Bandwidth Management Using Container LSP

---

You can configure a container LSP to enable load balancing across multiple point-to-point LSPs dynamically. A container LSP includes one or more member LSPs between the same ingress and egress routing devices. The member LSPs are similar to independent point-to-point LSPs, and each member LSP takes a different path to the same destination and can be routed along a different IGP cost path.

A container LSP provides support for dynamic bandwidth management by enabling the ingress router to dynamically add and remove member LSPs through a process called LSP splitting and LSP merging, respectively, based on configuration and aggregate traffic. Besides addition and deletion, member LSPs can also be re-optimized with different bandwidth values in a make-before-break way.

Before you begin:

1. Configure the device interfaces.
2. Configure the device router ID and autonomous system number.
3. Configure the following protocols:
  - RSVP
  - BGP
    - Configure a BGP group to peer device with remote provider edge (PE) device.
  - OSPF
    - Enable traffic engineering capabilities.
4. Configure a VRF routing instance.

To configure the PE device:

1. Enable MPLS on all the interfaces (excluding the management interface).

```
[edit protocols]
user@PE1# set mpls interface all
user@PE1# set mpls interface fxp0.0 disable
```

2. Configure the MPLS statistics parameters.

```
[edit protocols]
user@PE1# set mpls statistics file file-name
user@PE1# set mpls statistics file size size
user@PE1# set mpls statistics interval seconds
user@PE1# set mpls statistics auto-bandwidth
```

3. Configure the label-switched path (LSP) template parameters.

```
[edit protocols]
user@PE1# set mpls label-switched-path template-name template
user@PE1# set mpls label-switched-path template-name optimize-timer seconds
user@PE1# set mpls label-switched-path template-name link-protection
user@PE1# set mpls label-switched-path template-name adaptive
user@PE1# set mpls label-switched-path template-name auto-bandwidth
    adjust-interval seconds
user@PE1# set mpls label-switched-path template-name auto-bandwidth
    adjust-threshold seconds
user@PE1# set mpls label-switched-path template-name auto-bandwidth
    minimum-bandwidth mbps
user@PE1# set mpls label-switched-path template-name auto-bandwidth
    maximum-bandwidth mbps
```

4. Configure a container LSP between the two PE routers, and assign the LSP template.

```
[edit protocols]
user@PE1# set mpls container-label-switched-path container-lsp-name to
    remote-PE-ip-address
user@PE1# set mpls container-label-switched-path container-lsp-name
    label-switched-path-template template-name
```

5. Configure the container LSP parameters.

```
[edit protocols]
user@PE1# set mpls container-label-switched-path container-lsp-name
    splitting-merging maximum-member-lsps number
user@PE1# set mpls container-label-switched-path container-lsp-name
    splitting-merging minimum-member-lsps number
user@PE1# set mpls container-label-switched-path container-lsp-name
    splitting-merging splitting-bandwidth mbps
user@PE1# set mpls container-label-switched-path container-lsp-name
    splitting-merging merging-bandwidth mbps
user@PE1# set mpls container-label-switched-path container-lsp-name
    splitting-merging maximum-signaling-bandwidth mbps
user@PE1# set mpls container-label-switched-path container-lsp-name
    splitting-merging minimum-signaling-bandwidth mbps
user@PE1# set mpls container-label-switched-path container-lsp-name
    splitting-merging normalization normalize-interval seconds
user@PE1# set mpls container-label-switched-path container-lsp-name
    splitting-merging normalization failover-normalization
```

```

user@PE1# set mpls container-label-switched-path container-lsp-name
splitting-merging normalization normalization-retry-duration seconds
user@PE1# set mpls container-label-switched-path container-lsp-name
splitting-merging normalization normalization-retry-limits number
user@PE1# set mpls container-label-switched-path container-lsp-name
splitting-merging sampling cut-off-threshold number
user@PE1# set mpls container-label-switched-path container-lsp-name
splitting-merging sampling use-percentile number

```

6. Configure the policy statement to load-balance traffic.

```

[edit policy-options]
user@PE1# set policy-statement first-policy-name term 1 from protocol direct
user@PE1# set policy-statement first-policy-name term 1 then accept
user@PE1# set policy-statement second-policy-name then load-balance per-packet

```



**NOTE:** The policy to load-balance traffic should be assigned to the forwarding table configuration under the [edit routing-options] hierarchy level.

```

user@PE1# set forwarding-table export pplb

```

7. Verify and commit the configuration.

For example:

```

[edit protocols]
user@PE1# set rsvp preemption aggressive
user@PE1# set rsvp interface all aggregate
user@PE1# set rsvp interface fxp0.0 disable
user@PE1# set rsvp interface ge-0/0/1.0
user@PE1# set rsvp interface ge-0/0/2.0
user@PE1# set mpls statistics file auto-bw
user@PE1# set mpls statistics file size 10m
user@PE1# set mpls statistics interval 10
user@PE1# set mpls statistics auto-bandwidth
user@PE1# set mpls label-switched-path PE1-to-PE2-template1 template
user@PE1# set mpls label-switched-path PE1-to-PE2-template1 optimize-timer 30
user@PE1# set mpls label-switched-path PE1-to-PE2-template1 link-protection
user@PE1# set mpls label-switched-path PE1-to-PE2-template1 adaptive
user@PE1# set mpls label-switched-path PE1-to-PE2-template1 auto-bandwidth
adjust-interval 300
user@PE1# set mpls label-switched-path PE1-to-PE2-template1 auto-bandwidth
adjust-threshold 5
user@PE1# set mpls label-switched-path PE1-to-PE2-template1 auto-bandwidth
minimum-bandwidth 10m
user@PE1# set mpls label-switched-path PE1-to-PE2-template1 auto-bandwidth
maximum-bandwidth 10m
user@PE1# set mpls label-switched-path PE1-PE2-template-1 template
user@PE1# set mpls label-switched-path PE1-PE2-template-1 auto-bandwidth
adjust-interval 8000
user@PE1# set mpls label-switched-path PE1-PE2-template-1 auto-bandwidth
minimum-bandwidth 5m
user@PE1# set mpls label-switched-path PE1-PE2-template-1 auto-bandwidth
maximum-bandwidth 10m

```

```
user@PE1# set mpls container-label-switched-path PE1-PE2-container-100
label-switched-path-template PE1-to-PE2-template1
user@PE1# set mpls container-label-switched-path PE1-PE2-container-100 to
10.255.102.128
user@PE1# set mpls container-label-switched-path PE1-PE2-container-100
splitting-merging maximum-member-lsps 20
user@PE1# set mpls container-label-switched-path PE1-PE2-container-100
splitting-merging minimum-member-lsps 2
user@PE1# set mpls container-label-switched-path PE1-PE2-container-100
splitting-merging splitting-bandwidth 40m
user@PE1# set mpls container-label-switched-path PE1-PE2-container-100
splitting-merging merging-bandwidth 6m
user@PE1# set mpls container-label-switched-path PE1-PE2-container-100
splitting-merging maximum-signaling-bandwidth 10m
user@PE1# set mpls container-label-switched-path PE1-PE2-container-100
splitting-merging minimum-signaling-bandwidth 10m
user@PE1# set mpls container-label-switched-path PE1-PE2-container-100
splitting-merging normalization normalize-interval 400
user@PE1# set mpls container-label-switched-path PE1-PE2-container-100
splitting-merging normalization failover-normalization
user@PE1# set mpls container-label-switched-path PE1-PE2-container-100
splitting-merging normalization normalization-retry-duration 20
user@PE1# set mpls container-label-switched-path PE1-PE2-container-100
splitting-merging normalization normalization-retry-limits 3
user@PE1# set mpls container-label-switched-path PE1-PE2-container-100
splitting-merging sampling cut-off-threshold 1
user@PE1# set mpls container-label-switched-path PE1-PE2-container-100
splitting-merging sampling use-percentile 90
user@PE1# set mpls interface all
user@PE1# set mpls interface fxp0.0 disable
user@PE1# set bgp group to-PE2 type internal
user@PE1# set bgp group to-PE2 local-address 10.255.102.166
user@PE1# set bgp group to-PE2 family inet-vpn unicast
user@PE1# set bgp group to-PE2 export direct
user@PE1# set bgp group to-PE2 neighbor 10.255.102.128
user@PE1# set ospf traffic-engineering
user@PE1# set ospf area 0.0.0.0 interface all
user@PE1# set ospf area 0.0.0.0 interface fxp0.0 disable
user@PE1# set ospf area 0.0.0.0 interface ge-0/0/2.0 metric 100

[edit policy-options]
user@PE1# set policy-statement direct term 1 from protocol direct
user@PE1# set policy-statement direct term 1 then accept
user@PE1# set policy-statement pplb then load-balance per-packet

[edit]
user@PE1# commit
commit complete
```

- Related Documentation**
- [Dynamic Bandwidth Management Using Container LSP Overview on page 410](#)
  - [Example: Configuring Dynamic Bandwidth Management Using Container LSP on page 441](#)

## Example: Configuring Dynamic Bandwidth Management Using Container LSP

---

This example shows how to enable dynamic bandwidth management by configuring container label-switched paths (LSPs) that enable load balancing across multiple point-to-point member LSPs.

- [Requirements on page 441](#)
- [Overview on page 441](#)
- [Configuration on page 442](#)
- [Verification on page 450](#)

### Requirements

This example uses the following hardware and software components:

- Five routers that can be a combination of M Series, MX Series, or T Series routers, out of which two routers are provider edge (PE) routers and three routers are provider (P) routers
- Junos OS Release 14.2 or later running on all the routers

Before you begin:

1. Configure the device interfaces.
2. Configure the autonomous system numbers and router IDs for the devices.
3. Configure the following protocols:
  - RSVP
  - MPLS
  - BGP
  - OSPF

### Overview


Starting with Junos OS Release 14.2, a new type of LSP, called a container LSP, is introduced to enable load balancing across multiple point-to-point LSPs. A container LSP includes one or more member LSPs between the same ingress and egress routing devices. The member LSPs are similar to independent point-to-point LSPs, and each member LSP takes a different path to the same destination and can be routed along a different IGP cost path.

A container LSP provides support for dynamic bandwidth management by enabling the ingress router to dynamically add and remove member LSPs through a process called LSP splitting and LSP merging, respectively, based on configuration and aggregate traffic. Besides addition and deletion, member LSPs can also be re-optimized with different bandwidth values in a make-before-break way.

## Topology

Figure 40 on page 442 is a sample topology configured with container LSPs.

Figure 40: Dynamic Bandwidth Management Using Container LSP

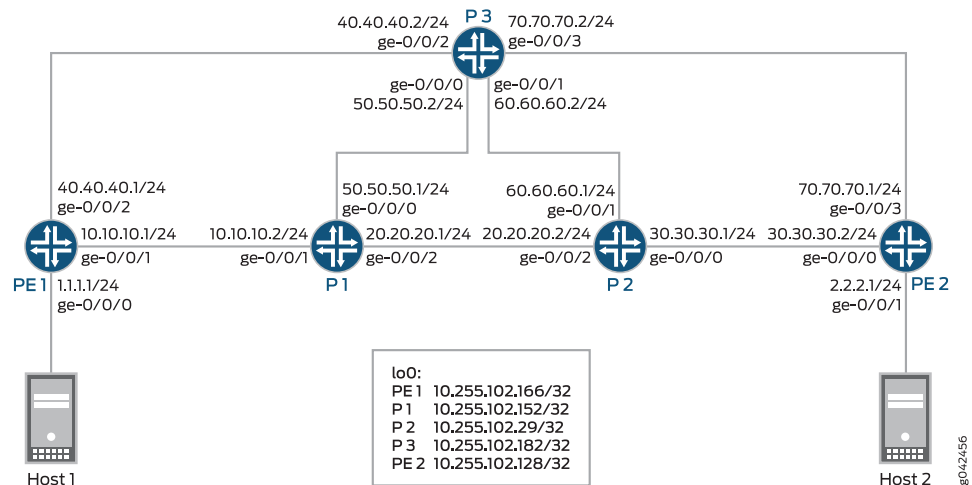

In this example, Routers PE1 and PE2 are the PE routers connected to hosts Host1 and Host2, respectively. The core routers, Routers P1, and P2, and P3 connect to the PE routers.

## Configuration

### CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the **[edit]** hierarchy level, and then enter **commit** from configuration mode.

```

PE1 set interfaces ge-0/0/0 unit 0 family inet address 1.1.1/24
    set interfaces ge-0/0/1 unit 0 family inet address 10.10.10.1/24
    set interfaces ge-0/0/1 unit 0 family mpls
    set interfaces ge-0/0/2 unit 0 family inet address 40.40.40.1/24
    set interfaces ge-0/0/2 unit 0 family mpls
    set interfaces lo0 unit 0 family inet address 10.255.102.166/32
    set interfaces lo0 unit 0 family mpls
    set routing-options router-id 10.255.102.166
    set routing-options autonomous-system 1234
    set routing-options forwarding-table export pplib
    set protocols rsvp preemption aggressive
    set protocols rsvp interface all aggregate
    set protocols rsvp interface fxp0.0 disable
    set protocols rsvp interface ge-0/0/1.0
    set protocols rsvp interface ge-0/0/2.0
    set protocols mpls statistics file auto-bw
    set protocols mpls statistics file size 10m
    set protocols mpls statistics interval 10
    set protocols mpls statistics auto-bandwidth
    set protocols mpls label-switched-path PE1-to-PE2-template1 template
  
```



```

set protocols mpls label-switched-path PE1-to-PE2-template1 optimize-timer 30
set protocols mpls label-switched-path PE1-to-PE2-template1 link-protection
set protocols mpls label-switched-path PE1-to-PE2-template1 adaptive
set protocols mpls label-switched-path PE1-to-PE2-template1 auto-bandwidth
  adjust-interval 300
set protocols mpls label-switched-path PE1-to-PE2-template1 auto-bandwidth
  adjust-threshold 5
set protocols mpls label-switched-path PE1-to-PE2-template1 auto-bandwidth
  minimum-bandwidth 10m
set protocols mpls label-switched-path PE1-to-PE2-template1 auto-bandwidth
  maximum-bandwidth 10m
set protocols mpls container-label-switched-path PE1-PE2-container-100
  label-switched-path-template PE1-to-PE2-template1
set protocols mpls container-label-switched-path PE1-PE2-container-100 to
  10.255.102.128
set protocols mpls container-label-switched-path PE1-PE2-container-100
  splitting-merging maximum-member-lsps 20
set protocols mpls container-label-switched-path PE1-PE2-container-100
  splitting-merging minimum-member-lsps 2
set protocols mpls container-label-switched-path PE1-PE2-container-100
  splitting-merging splitting-bandwidth 40m
set protocols mpls container-label-switched-path PE1-PE2-container-100
  splitting-merging merging-bandwidth 6m
set protocols mpls container-label-switched-path PE1-PE2-container-100
  splitting-merging maximum-signaling-bandwidth 10m
set protocols mpls container-label-switched-path PE1-PE2-container-100
  splitting-merging minimum-signaling-bandwidth 10m
set protocols mpls container-label-switched-path PE1-PE2-container-100
  splitting-merging normalization normalize-interval 400
set protocols mpls container-label-switched-path PE1-PE2-container-100
  splitting-merging normalization failover-normalization
set protocols mpls container-label-switched-path PE1-PE2-container-100
  splitting-merging normalization normalization-retry-duration 20
set protocols mpls container-label-switched-path PE1-PE2-container-100
  splitting-merging normalization normalization-retry-limits 3
set protocols mpls container-label-switched-path PE1-PE2-container-100
  splitting-merging sampling cut-off-threshold 1
set protocols mpls container-label-switched-path PE1-PE2-container-100
  splitting-merging sampling use-percentile 90
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols bgp group to-PE2 type internal
set protocols bgp group to-PE2 local-address 10.255.102.166
set protocols bgp group to-PE2 family inet-vpn unicast
set protocols bgp group to-PE2 export direct
set protocols bgp group to-PE2 neighbor 10.255.102.128
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface fxp0.0 disable
set protocols ospf area 0.0.0.0 interface ge-0/0/2.0 metric 100
set policy-options policy-statement direct term 1 from protocol direct
set policy-options policy-statement direct term 1 then accept
set policy-options policy-statement pplb then load-balance per-packet
set routing-instances vpn1 instance-type vrf
set routing-instances vpn1 interface ge-0/0/0.0
set routing-instances vpn1 route-distinguisher 10.255.102.166:1

```

```
set routing-instances vpn1 vrf-target target:1:1
set routing-instances vpn1 vrf-table-label

P1  set interfaces ge-0/0/0 unit 0 family inet address 50.50.50.1/24
    set interfaces ge-0/0/0 unit 0 family mpls
    set interfaces ge-0/0/1 unit 0 family inet address 10.10.10.2/24
    set interfaces ge-0/0/1 unit 0 family mpls
    set interfaces ge-0/0/2 unit 0 family inet address 20.20.20.1/24
    set interfaces ge-0/0/2 unit 0 family mpls
    set interfaces lo0 unit 0 family inet address 10.255.102.152/32
    set protocols rsvp interface all aggregate
    set protocols rsvp interface fxp0.0 disable
    set protocols mpls interface all
    set protocols mpls interface fxp0.0 disable
    set protocols ospf traffic-engineering
    set protocols ospf area 0.0.0.0 interface all
    set protocols ospf area 0.0.0.0 interface fxp0.0 disable
    set protocols ospf area 0.0.0.0 interface ge-0/0/0.0 metric 100

P2  set interfaces ge-0/0/0 unit 0 family inet address 30.30.30.1/24
    set interfaces ge-0/0/0 unit 0 family mpls
    set interfaces ge-0/0/1 unit 0 family inet address 60.60.60.1/24
    set interfaces ge-0/0/1 unit 0 family mpls
    set interfaces ge-0/0/2 unit 0 family inet address 20.20.20.2/24
    set interfaces ge-0/0/2 unit 0 family mpls
    set interfaces lo0 unit 0 family inet address 10.255.102.29/32
    set protocols rsvp interface all aggregate
    set protocols rsvp interface fxp0.0 disable
    set protocols mpls statistics file auto_bw
    set protocols mpls statistics file size 10m
    set protocols mpls statistics interval 5
    set protocols mpls statistics auto-bandwidth
    set protocols mpls icmp-tunneling
    set protocols mpls interface all
    set protocols mpls interface fxp0.0 disable
    set protocols ospf traffic-engineering
    set protocols ospf area 0.0.0.0 interface all
    set protocols ospf area 0.0.0.0 interface fxp0.0 disable
    set protocols ospf area 0.0.0.0 interface ge-0/0/1.0 metric 100

P3  set interfaces ge-0/0/0 unit 0 family inet address 50.50.50.2/24
    set interfaces ge-0/0/0 unit 0 family mpls
    set interfaces ge-0/0/1 unit 0 family inet address 60.60.60.2/24
    set interfaces ge-0/0/1 unit 0 family mpls
    set interfaces ge-0/0/2 unit 0 family inet address 40.40.40.2/24
    set interfaces ge-0/0/2 unit 0 family mpls
    set interfaces ge-0/0/3 unit 0 family inet address 70.70.70.2/24
    set interfaces ge-0/0/3 unit 0 family mpls
    set interfaces lo0 unit 0 family inet address 10.255.102.182/32
    set protocols rsvp interface all aggregate
    set protocols rsvp interface fxp0.0 disable
    set protocols mpls icmp-tunneling
    set protocols mpls interface all
    set protocols mpls interface fxp0.0 disable
    set protocols ospf traffic-engineering
```

```
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface fxp0.0 disable
```

```
PE2 set interfaces ge-0/0/0 unit 0 family inet address 30.30.30.2/24
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 unit 0 family inet address 2.2.2.1/24
set interfaces ge-0/0/3 unit 0 family inet address 70.70.70.1/24
set interfaces ge-0/0/3 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.102.128/32
set interfaces lo0 unit 0 family mpls
set routing-options router-id 10.255.102.128
set routing-options autonomous-system 1234
set protocols rsvp interface all aggregate
set protocols rsvp interface fxp0.0 disable
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols bgp group to-PE1 type internal
set protocols bgp group to-PE1 local-address 10.255.102.128
set protocols bgp group to-PE1 family inet-vpn unicast
set protocols bgp group to-PE1 neighbor 10.255.102.166
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface fxp0.0 disable
set policy-options policy-statement direct from protocol direct
set policy-options policy-statement direct then accept
set routing-instances vpn1 instance-type vrf
set routing-instances vpn1 interface ge-0/0/1.0
set routing-instances vpn1 route-distinguisher 10.255.102.128:1
set routing-instances vpn1 vrf-target target:1:1
set routing-instances vpn1 vrf-table-label
```

**Step-by-Step Procedure** The following example requires that you navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure Router PE1:

1. Configure the Router PE1 interfaces.

```
[edit interfaces]
user@PE1# set ge-0/0/0 unit 0 family inet address 1.1.1.1/24

user@PE1# set ge-0/0/1 unit 0 family inet address 10.10.10.1/24
user@PE1# set ge-0/0/1 unit 0 family mpls

user@PE1# set ge-0/0/2 unit 0 family inet address 40.40.40.1/24
user@PE1# set ge-0/0/2 unit 0 family mpls

user@PE1# set lo0 unit 0 family inet address 10.255.102.166/32
user@PE1# set lo0 unit 0 family mpls
```

2. Configure the router ID and autonomous system number for Router PE1.

```
[edit routing-options]
user@PE1# set router-id 10.255.102.166
```

- ```
user@PE1# set autonomous-system 1234
```
3. Enable the policy to load-balance traffic.  

```
[edit routing-options]  
user@PE1# set forwarding-table export pplb
```
  4. Enable RSVP on all Router PE1 interfaces (excluding the management interface).  

```
[edit protocols]  
user@PE1# set rsvp preemption aggressive  
user@PE1# set rsvp interface all aggregate  
user@PE1# set rsvp interface fxp0.0 disable  
user@PE1# set rsvp interface ge-0/0/1.0  
user@PE1# set rsvp interface ge-0/0/2.0
```
  5. Enable MPLS on all the interfaces of Router PE1 (excluding the management interface).  

```
[edit protocols]  
user@PE1# set mpls interface all  
user@PE1# set mpls interface fxp0.0 disable
```
  6. Configure the MPLS statistics parameters.  

```
[edit protocols]  
user@PE1# set mpls statistics file auto-bw  
user@PE1# set mpls statistics file size 10m  
user@PE1# set mpls statistics interval 10  
user@PE1# set mpls statistics auto-bandwidth
```
  7. Configure the label-switched path (LSP) template parameters.  

```
[edit protocols]  
user@PE1# set mpls label-switched-path PE1-to-PE2-template1 template  
user@PE1# set mpls label-switched-path PE1-to-PE2-template1 optimize-timer 30  
user@PE1# set mpls label-switched-path PE1-to-PE2-template1 link-protection  
user@PE1# set mpls label-switched-path PE1-to-PE2-template1 adaptive  
user@PE1# set mpls label-switched-path PE1-to-PE2-template1 auto-bandwidth  
adjust-interval 300  
user@PE1# set mpls label-switched-path PE1-to-PE2-template1 auto-bandwidth  
adjust-threshold 5  
user@PE1# set mpls label-switched-path PE1-to-PE2-template1 auto-bandwidth  
minimum-bandwidth 10m  
user@PE1# set mpls label-switched-path PE1-to-PE2-template1 auto-bandwidth  
maximum-bandwidth 10m
```
  8. Configure a container LSP between Router PE1 and Router PE2, and assign the PE1-to-PE2-template1 LSP template.  

```
[edit protocols]  
user@PE1# set mpls container-label-switched-path PE1-PE2-container-100 to  
10.255.102.128  
user@PE1# set mpls container-label-switched-path PE1-PE2-container-100  
label-switched-path-template PE1-to-PE2-template1
```
  9. Configure the container LSP parameters.  

```
[edit protocols]  
user@PE1# set mpls container-label-switched-path PE1-PE2-container-100  
splitting-merging maximum-member-lsps 20
```

```

user@PE1# set mpls container-label-switched-path PE1-PE2-container-100
splitting-merging minimum-member-lsps 2
user@PE1# set mpls container-label-switched-path PE1-PE2-container-100
splitting-merging splitting-bandwidth 40m
user@PE1# set mpls container-label-switched-path PE1-PE2-container-100
splitting-merging merging-bandwidth 6m
user@PE1# set mpls container-label-switched-path PE1-PE2-container-100
splitting-merging maximum-signaling-bandwidth 10m
user@PE1# set mpls container-label-switched-path PE1-PE2-container-100
splitting-merging minimum-signaling-bandwidth 10m
user@PE1# set mpls container-label-switched-path PE1-PE2-container-100
splitting-merging normalization normalize-interval 400
user@PE1# set mpls container-label-switched-path PE1-PE2-container-100
splitting-merging normalization failover-normalization
user@PE1# set mpls container-label-switched-path PE1-PE2-container-100
splitting-merging normalization normalization-retry-duration 20
user@PE1# set mpls container-label-switched-path PE1-PE2-container-100
splitting-merging normalization normalization-retry-limits 3
user@PE1# set mpls container-label-switched-path PE1-PE2-container-100
splitting-merging sampling cut-off-threshold 1
user@PE1# set mpls container-label-switched-path PE1-PE2-container-100
splitting-merging sampling use-percentile 90

```

10. Configure the BGP group, and assign the local and neighbor IP addresses.

```

[edit protocols]
user@PE1# set bgp group to-PE2 type internal
user@PE1# set bgp group to-PE2 local-address 10.255.102.166
user@PE1# set bgp group to-PE2 neighbor 10.255.102.128
user@PE1# set bgp group to-PE2 family inet-vpn unicast
user@PE1# set bgp group to-PE2 export direct

```

11. Enable OSPF on all the interfaces of Router PE1 (excluding the management interface) along with traffic engineering capabilities.

```

[edit protocols]
user@PE1# set ospf traffic-engineering
user@PE1# set ospf area 0.0.0.0 interface all
user@PE1# set ospf area 0.0.0.0 interface fxp0.0 disable
user@PE1# set ospf area 0.0.0.0 interface ge-0/0/2.0 metric 100

```

12. Configure the policy statement to load-balance traffic.

```

[edit policy-options]
user@PE1# set policy-statement direct term 1 from protocol direct
user@PE1# set policy-statement direct term 1 then accept
user@PE1# set policy-statement pplb then load-balance per-packet

```

13. Configure a routing instance on Router PE1, and assign the routing instance interface.

```

[edit routing-instances]
user@PE1# set vpn1 instance-type vrf
user@PE1# set vpn1 interface ge-0/0/0.0

```

14. Configure the route distinguisher, vrf target, and vrf-table label values for the VRF routing instance.

```

[edit routing-instances]
user@PE1# set vpn1 route-distinguisher 10.255.102.166:1

```

```
user@PE1# set vpn1 vrf-target target:1:1
user@PE1# set vpn1 vrf-table-label
```

**Results** From configuration mode, confirm your configuration by entering the **show interfaces**, **show routing-options**, **show protocols**, **show policy-options**, and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@PE1# show interfaces
ge-0/0/0 {
  unit 0 {
    family inet {
      address 1.1.1.1/24;
    }
  }
}
ge-0/0/1 {
  unit 0 {
    family inet {
      address 10.10.10.1/24;
    }
    family mpls;
  }
}
ge-0/0/2 {
  unit 0 {
    family inet {
      address 40.40.40.1/24;
    }
    family mpls;
  }
}
lo0 {
  unit 0 {
    family inet {
      address 10.255.102.166/32;
    }
    family mpls;
  }
}

user@PE1# show routing-options
router-id 10.255.102.166;
autonomous-system 1234;
forwarding-table {
  export pplb;
}

user@PE1# show protocols
rsvp {
  preemption aggressive;
  interface all {
    aggregate;
  }
  interface fxp0.0 {
    disable;
  }
}
```

```

    }
    interface ge-0/0/1.0;
    interface ge-0/0/2.0;
  }
  mpls {
    statistics {
      file auto-bw size 10m;
      interval 10;
      auto-bandwidth;
    }
    label-switched-path PE1-to-PE2-template1 {
      template;
      optimize-timer 30;
      link-protection;
      adaptive;
      auto-bandwidth {
        adjust-interval 300;
        adjust-threshold 5;
        minimum-bandwidth 10m;
        maximum-bandwidth 10m;
      }
    }
  }
  container-label-switched-path PE1-PE2-container-100 {
    label-switched-path-template {
      PE1-to-PE2-template1;
    }
    to 10.255.102.128;
    splitting-merging {
      maximum-member-lsps 20;
      minimum-member-lsps 2;
      splitting-bandwidth 40m;
      merging-bandwidth 6m;
      maximum-signaling-bandwidth 10m;
      minimum-signaling-bandwidth 10m;
      normalization {
        normalize-interval 400;
        failover-normalization;
        normalization-retry-duration 20;
        normalization-retry-limits 3;
      }
      sampling {
        cut-off-threshold 1;
        use-percentile 90;
      }
    }
  }
  interface all;
  interface fxp0.0 {
    disable;
  }
}
bgp {
  group to-PE2 {
    type internal;
    local-address 10.255.102.166;
    family inet-vpn {

```

```
        unicast;
    }
    export direct;
    neighbor 10.255.102.128;
}
}
ospf {
    traffic-engineering;
    area 0.0.0.0 {
        interface all;
        interface fxp0.0 {
            disable;
        }
        interface ge-0/0/2.0 {
            metric 100;
        }
    }
}
}

user@PE1# show policy-options
policy-statement direct {
    term 1 {
        from protocol direct;
        then accept;
    }
}
policy-statement pplb {
    then load-balance {
        per-packet;
    }
}

user@PE1# show routing-instances
vpn1 {
    instance-type vrf;
    interface ge-0/0/0.0;
    route-distinguisher 10.255.102.166:1;
    vrf-target target:1:1;
    vrf-table-label;
}
```

## Verification

Confirm that the configuration is working properly.

- [Verifying the Container LSP Status Without Bandwidth on page 451](#)
- [Verifying the Container LSP Status with Increased Bandwidth \(Before Normalization\) on page 454](#)
- [Verifying the Container LSP Status with Increased Bandwidth \(After Normalization\) on page 456](#)
- [Verifying the Container LSP Splitting Process on page 460](#)
- [Verifying the Container LSP Statistics on page 460](#)



- [Verifying the Container LSP Status with Decreased Bandwidth \(Before Normalization\) on page 460](#)
- [Verifying the Container LSP Status with Decreased Bandwidth \(After Normalization\) on page 461](#)
- [Verifying the Container LSP Merging Process on page 462](#)
- [Verifying Failover Normalization on page 462](#)
- [Verifying Incremental Normalization on page 463](#)

---

### **[Verifying the Container LSP Status Without Bandwidth](#)**

---

**Purpose**    Verify the status of the container LSP.

**Action** From operational mode, run the **show mpls container-lsp extensive** command.

```

user@PE1> show mpls container-lsp extensive
Ingress LSP: 1 sessions
Container LSP name: PE1-PE2-container-100, State: Up, Member count: 2
Normalization
  Min LSPs: 2, Max LSPs: 20
  Aggregate bandwidth: 20Mbps, Sampled Aggregate bandwidth: 0bps
  NormalizeTimer: 400 secs, NormalizeThreshold: 10%
  Max Signaling BW: 10Mbps, Min Signaling BW: 10Mbps, Splitting BW: 40Mbps, Merging
  BW: 6Mbps
  Mode: incremental-normalization, failover-normalization
  Sampling: Outlier cut-off 1, Percentile 90 of Aggregate
  Normalization in 143 second(s)
  36 Jun  5 04:12:17.497 Clear history and statistics: on container
  (PE1-PE2-container-100)
  35 Jun  5 04:12:17.497 Avoid normalization: not needed with bandwidth 0 bps
  34 Jun  5 04:05:37.484 Clear history and statistics: on container
  (PE1-PE2-container-100)
  33 Jun  5 04:05:37.484 Avoid normalization: not needed with bandwidth 0 bps
  32 Jun  5 03:58:57.470 Clear history and statistics: on container
  (PE1-PE2-container-100)
  31 Jun  5 03:58:57.470 Avoid normalization: not needed with bandwidth 0 bps
  30 Jun  5 03:52:17.455 Clear history and statistics: on container
  (PE1-PE2-container-100)
  29 Jun  5 03:52:17.455 Avoid normalization: not needed with bandwidth 0 bps
  28 Jun  5 03:45:37.440 Clear history and statistics: on container
  (PE1-PE2-container-100)
  27 Jun  5 03:45:37.440 Avoid normalization: not needed with bandwidth 0 bps
  26 Jun  5 03:38:59.013 Normalization complete: container (PE1-PE2-container-100)
  with 2 members
  25 Jun  5 03:38:57.423 Delete member LSPs: PE1-PE2-container-100-3 through
  PE1-PE2-container-100-7
  24 Jun  5 03:38:57.423 Normalize: container (PE1-PE2-container-100) create 2
  LSPs, min bw 10000000bps, member count 7
  23 Jun  5 03:38:57.423 Normalize: normalization with aggregate bandwidth 0 bps

  22 Jun  5 03:32:19.019 Normalization complete: container (PE1-PE2-container-100)
  with 7 members
  21 Jun  5 03:32:17.404 Clear history and statistics: on container
  (PE1-PE2-container-100)
  20 Jun  5 03:32:17.403 Normalize: container (PE1-PE2-container-100) into 7
  members - each with bandwidth 10000000 bps
  19 Jun  5 03:32:17.403 Normalize: normalization with aggregate bandwidth
  62914560 bps
  18 Jun  5 03:32:17.403 Normalize: normalizaton with 62914560 bps
  17 Jun  5 03:32:09.219 Normalization complete: container (PE1-PE2-container-100)
  with 7 members
  16 Jun  5 03:32:07.600 Clear history and statistics: on container
  (PE1-PE2-container-100)
  15 Jun  5 03:32:07.600 Normalize: container (PE1-PE2-container-100) into 7
  members - each with bandwidth 10000000 bps
  14 Jun  5 03:32:07.599 Normalize: normalization with aggregate bandwidth
  62914560 bps
  13 Jun  5 03:32:07.599 Normalize: normalizaton with 62914560 bps
  12 Jun  5 03:26:57.295 Clear history and statistics: on container
  (PE1-PE2-container-100)
  11 Jun  5 03:26:57.295 Avoid normalization: not needed with bandwidth 0 bps
  10 Jun  5 03:20:18.297 Normalization complete: container (PE1-PE2-container-100)
  with 2 members

```

```

    9 Jun  5 03:20:17.281 Normalize: container (PE1-PE2-container-100) create 2
LSPs, min bw 10000000bps, member count 0
    8 Jun  5 03:20:17.281 Normalize: normalization with aggregate bandwidth 0 bps

    7 Jun  5 03:17:43.218 Clear history and statistics: on container
(PE1-PE2-container-100)
    6 Jun  5 03:17:43.218 Avoid normalization: not needed with bandwidth 0 bps
    5 Jun  5 03:17:43.212 Normalize: container (PE1-PE2-container-100) received
PathErr on member PE1-PE2-container-100-2
    4 Jun  5 03:17:43.212 Normalize: container (PE1-PE2-container-100) received
PathErr on member PE1-PE2-container-100-1
    3 Jun  5 03:12:47.323 Normalization complete: container (PE1-PE2-container-100)
with 2 members
    2 Jun  5 03:12:16.555 Normalize: container (PE1-PE2-container-100) create 2
LSPs, min bw 10000000bps, member count 0
    1 Jun  5 03:12:16.555 Normalize: normalization with aggregate bandwidth 0 bps

10.255.102.128
  From: 10.255.102.166, State: Up, ActiveRoute: 0, LSPname: PE1-PE2-container-100-1

  ActivePath: (primary)
  LSPTYPE: Dynamic Configured, Penultimate hop popping
  LoadBalance: Random
  Autobandwidth
  MinBW: 10Mbps, MaxBW: 10Mbps
  AdjustTimer: 300 secs
  Max AvgBW util: 0bps, Bandwidth Adjustment in 12 second(s).
  Overflow limit: 0, Overflow sample count: 0
  Underflow limit: 0, Underflow sample count: 0, Underflow Max AvgBW: 0bps
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary                               State: Up
    Priorities: 7 0
    Bandwidth: 10Mbps
    SmartOptimizeTimer: 180
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 3)
10.10.10.2 S 20.20.20.2 S 30.30.30.2 S
  Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
20=Node-ID):
    10.10.10.2 20.20.20.2 30.30.30.2
    17 Jun  5 03:38:59.013 Make-before-break: Switched to new instance
    16 Jun  5 03:38:58.003 Record Route: 10.10.10.2 20.20.20.2 30.30.30.2
    15 Jun  5 03:38:58.003 Up
    14 Jun  5 03:38:57.423 Originate make-before-break call
    13 Jun  5 03:38:57.423 CSPF: computation result accepted 10.10.10.2 20.20.20.2
30.30.30.2
    12 Jun  5 03:33:30.400 CSPF: computation result ignored, new path no benefit
    11 Jun  5 03:32:17.403 Pending old path instance deletion
    10 Jun  5 03:32:09.218 Make-before-break: Switched to new instance
    9 Jun  5 03:32:08.202 Record Route: 10.10.10.2 20.20.20.2 30.30.30.2
    8 Jun  5 03:32:08.202 Up
    7 Jun  5 03:32:07.603 Originate make-before-break call
    6 Jun  5 03:32:07.603 CSPF: computation result accepted 10.10.10.2 20.20.20.2
30.30.30.2
    5 Jun  5 03:20:18.278 Selected as active path
    4 Jun  5 03:20:18.277 Record Route: 10.10.10.2 20.20.20.2 30.30.30.2
    3 Jun  5 03:20:18.277 Up
    2 Jun  5 03:20:17.281 Originate Call
    1 Jun  5 03:20:17.281 CSPF: computation result accepted 10.10.10.2 20.20.20.2
30.30.30.2
  Created: Thu Jun  5 03:20:16 2014

```

```

10.255.102.128
  From: 10.255.102.166, State: Up, ActiveRoute: 0, LSPName: PE1-PE2-container-100-2

  ActivePath: (primary)
  LSPType: Dynamic Configured, Penultimate hop popping
  LoadBalance: Random
  Autobandwidth
  MinBW: 10Mbps, MaxBW: 10Mbps
  AdjustTimer: 300 secs
  Max AvgBW util: 0bps, Bandwidth Adjustment in 76 second(s).
  Overflow limit: 0, Overflow sample count: 0
  Underflow limit: 0, Underflow sample count: 0, Underflow Max AvgBW: 0bps
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary State: Up
    Priorities: 7 0
    Bandwidth: 10Mbps
    SmartOptimizeTimer: 180
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 3)
10.10.10.2 S 20.20.20.2 S 30.30.30.2 S
  Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
20=Node-ID):
    10.10.10.2 20.20.20.2 30.30.30.2
    17 Jun 5 03:38:59.013 Make-before-break: Switched to new instance
    16 Jun 5 03:38:58.002 Record Route: 10.10.10.2 20.20.20.2 30.30.30.2
    15 Jun 5 03:38:58.002 Up
    14 Jun 5 03:38:57.423 Originate make-before-break call
    13 Jun 5 03:38:57.423 CSPF: computation result accepted 10.10.10.2 20.20.20.2
30.30.30.2
    12 Jun 5 03:33:26.189 CSPF: computation result ignored, new path no benefit
    11 Jun 5 03:32:17.403 Pending old path instance deletion
    10 Jun 5 03:32:09.219 Make-before-break: Switched to new instance
    9 Jun 5 03:32:08.204 Record Route: 10.10.10.2 20.20.20.2 30.30.30.2
    8 Jun 5 03:32:08.204 Up
    7 Jun 5 03:32:07.603 Originate make-before-break call
    6 Jun 5 03:32:07.603 CSPF: computation result accepted 10.10.10.2 20.20.20.2
30.30.30.2
    5 Jun 5 03:20:18.297 Selected as active path
    4 Jun 5 03:20:18.295 Record Route: 10.10.10.2 20.20.20.2 30.30.30.2
    3 Jun 5 03:20:18.295 Up
    2 Jun 5 03:20:17.281 Originate Call
    1 Jun 5 03:20:17.281 CSPF: computation result accepted 10.10.10.2 20.20.20.2
30.30.30.2
  Created: Thu Jun 5 03:20:16 2014
Total 2 displayed, Up 2, Down 0

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

**Meaning** The container LSP is established between Routers PE1 and PE2.

### Verifying the Container LSP Status with Increased Bandwidth (Before Normalization)

**Purpose** Verify the status of the container LSP with increased bandwidth before normalization happens.

**Action** From operational mode, run the **show mpls container-lsp extensive** command.

```

user@PE1> show mpls container-lsp extensive
Ingress LSP: 1 sessions
Container LSP name: PE1-PE2-container-100, State: Up, Member count: 2
Normalization
  Min LSPs: 2, Max LSPs: 20
  Aggregate bandwidth: 20Mbps, Sampled Aggregate bandwidth: 42.6984Mbps
  NormalizeTimer: 400 secs, NormalizeThreshold: 10%
  Max Signaling BW: 10Mbps, Min Signaling BW: 10Mbps, Splitting BW: 40Mbps, Merging
  BW: 6Mbps
  Mode: incremental-normalization, failover-normalization
  Sampling: Outlier cut-off 1, Percentile 90 of Aggregate
  Normalization in 321 second(s)
    3 Jun  5 21:22:34.731 Normalization complete: container (PE1-PE2-container-100)
    with 2 members
    2 Jun  5 21:22:15.503 Normalize: container (PE1-PE2-container-100) create 2
    LSPs, min bw 100000000bps, member count 0
    1 Jun  5 21:22:15.503 Normalize: normalization with aggregate bandwidth 0 bps

10.255.102.128
  From: 10.255.102.166, State: Up, ActiveRoute: 0, LSPname: PE1-PE2-container-100-1

  ActivePath: (primary)
  Link protection desired
  LSPtype: Dynamic Configured, Penultimate hop popping
  LoadBalance: Random
  Autobandwidth
  MinBW: 10Mbps, MaxBW: 10Mbps
  AdjustTimer: 300 secs AdjustThreshold: 5%
  Max AvgBW util: 23.9893Mbps, Bandwidth Adjustment in 221 second(s).
  Overflow limit: 0, Overflow sample count: 6
  Underflow limit: 0, Underflow sample count: 0, Underflow Max AvgBW: 0bps
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary                               State: Up
    Priorities: 7 0
    Bandwidth: 10Mbps
    OptimizeTimer: 30
    SmartOptimizeTimer: 180
    Reoptimization in 9 second(s).
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 3)
10.10.10.2 S 20.20.20.2 S 30.30.30.2 S
    Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
    20=Node-ID):
      10.255.102.166(flag=0x20) 10.10.10.2(Label=303440)
10.255.102.29(flag=0x20) 20.20.20.2(Label=302144) 10.255.102.128(flag=0x20)
30.30.30.2(Label=3)

10.255.102.128
  From: 10.255.102.166, State: Up, ActiveRoute: 0, LSPname: PE1-PE2-container-100-2

  ActivePath: (primary)
  Link protection desired
  LSPtype: Dynamic Configured, Penultimate hop popping
  LoadBalance: Random
  Autobandwidth
  MinBW: 10Mbps, MaxBW: 10Mbps
  AdjustTimer: 300 secs AdjustThreshold: 5%
  Max AvgBW util: 22.1438Mbps, Bandwidth Adjustment in 221 second(s).
  Overflow limit: 0, Overflow sample count: 6

```

```
Underflow limit: 0, Underflow sample count: 0, Underflow Max AvgBW: 0bps
Encoding type: Packet, Switching type: Packet, GPID: IPv4
*Primary                               State: Up
  Priorities: 7 0
  Bandwidth: 10Mbps
  OptimizeTimer: 30
  SmartOptimizeTimer: 180
  Reoptimization in 9 second(s).
  Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 3)
10.10.10.2 S 20.20.20.2 S 30.30.30.2 S
  Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
20=Node-ID):
      10.255.102.166(flag=0x20) 10.10.10.2(Label=303456)
10.255.102.29(flag=0x20) 20.20.20.2(Label=302160) 10.255.102.128(flag=0x20)
30.30.30.2(Label=3)

Total 2 displayed, Up 2, Down 0
```

**Meaning** Because normalization has not happened, the member LSP count remains at 2.

#### Verifying the Container LSP Status with Increased Bandwidth (After Normalization)

---

**Purpose** Verify the status of the container LSP with increased bandwidth after normalization happens.

**Action** From operational mode, run the **show mpls container-lsp extensive** command.

```

user@PE1> show mpls container-lsp extensive
Ingress LSP: 1 sessions
Container LSP name: PE1-PE2-container-100, State: Up, Member count: 5
Normalization
  Min LSPs: 2, Max LSPs: 20
  Aggregate bandwidth: 50Mbps, Sampled Aggregate bandwidth: 45.8873Mbps
  NormalizeTimer: 400 secs, NormalizeThreshold: 10%
  Max Signaling BW: 10Mbps, Min Signaling BW: 10Mbps, Splitting BW: 40Mbps, Merging
  BW: 6Mbps
  Mode: incremental-normalization, failover-normalization
  Sampling: Outlier cut-off 1, Percentile 90 of Aggregate
  Normalization in 169 second(s)
    7 Jun 5 21:29:02.921 Normalization complete: container (PE1-PE2-container-100)
    with 5 members
    6 Jun 5 21:28:55.505 Clear history and statistics: on container
    (PE1-PE2-container-100)
    5 Jun 5 21:28:55.505 Normalize: container (PE1-PE2-container-100) into 5
    members - each with bandwidth 10000000 bps
    4 Jun 5 21:28:55.504 Normalize: normalization with aggregate bandwidth
    45281580 bps
    3 Jun 5 21:22:34.731 Normalization complete: container (PE1-PE2-container-100)
    with 2 members
    2 Jun 5 21:22:15.503 Normalize: container (PE1-PE2-container-100) create 2
    LSPs, min bw 10000000bps, member count 0
    1 Jun 5 21:22:15.503 Normalize: normalization with aggregate bandwidth 0 bps

10.255.102.128
  From: 10.255.102.166, State: Up, ActiveRoute: 0, LSPname: PE1-PE2-container-100-1

  ActivePath: (primary)
  Link protection desired
  LSPtype: Dynamic Configured, Penultimate hop popping
  LoadBalance: Random
  Autobandwidth
  MinBW: 10Mbps, MaxBW: 10Mbps
  AdjustTimer: 300 secs AdjustThreshold: 5%
  Max AvgBW util: 11.0724Mbps, Bandwidth Adjustment in 129 second(s).
  Overflow limit: 0, Overflow sample count: 1
  Underflow limit: 0, Underflow sample count: 0, Underflow Max AvgBW: 0bps
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary State: Up
    Priorities: 7 0
    Bandwidth: 10Mbps
    OptimizeTimer: 30
    SmartOptimizeTimer: 180
    Reoptimization in 12 second(s).
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 3)
    10.10.10.2 S 20.20.20.2 S 30.30.30.2 S
    Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
    20=Node-ID):
      10.255.102.166(flag=0x20) 10.10.10.2(Label=303488)
    10.255.102.29(flag=0x20) 20.20.20.2(Label=302224) 10.255.102.128(flag=0x20)
    30.30.30.2(Label=3)

10.255.102.128
  From: 10.255.102.166, State: Up, ActiveRoute: 0, LSPname: PE1-PE2-container-100-2

  ActivePath: (primary)

```

```

Link protection desired
LSPTYPE: Dynamic Configured, Penultimate hop popping
LoadBalance: Random
Autobandwidth
MinBW: 10Mbps, MaxBW: 10Mbps
AdjustTimer: 300 secs AdjustThreshold: 5%
Max AvgBW util: 8.50751Mbps, Bandwidth Adjustment in 189 second(s).
Overflow limit: 0, Overflow sample count: 0
Underflow limit: 0, Underflow sample count: 11, Underflow Max AvgBW: 8.50751Mbps

Encoding type: Packet, Switching type: Packet, GPID: IPv4
*Primary                               State: Up
    Priorities: 7 0
    Bandwidth: 10Mbps
    OptimizeTimer: 30
    SmartOptimizeTimer: 180
    Reoptimization in 6 second(s).
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 3)
10.10.10.2 S 20.20.20.2 S 30.30.30.2 S
    Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
20=Node-ID):
        10.255.102.166(flag=0x20) 10.10.10.2(Label=303504)
10.255.102.29(flag=0x20) 20.20.20.2(Label=302240) 10.255.102.128(flag=0x20)
30.30.30.2(Label=3)

10.255.102.128
From: 10.255.102.166, State: Up, ActiveRoute: 0, LSPName: PE1-PE2-container-100-3

ActivePath: (primary)
Link protection desired
LSPTYPE: Dynamic Configured, Penultimate hop popping
LoadBalance: Random
Autobandwidth
MinBW: 10Mbps, MaxBW: 10Mbps
AdjustTimer: 300 secs AdjustThreshold: 5%
Max AvgBW util: 9.59422Mbps, Bandwidth Adjustment in 249 second(s).
Overflow limit: 0, Overflow sample count: 0
Underflow limit: 0, Underflow sample count: 5, Underflow Max AvgBW: 9.59422Mbps

Encoding type: Packet, Switching type: Packet, GPID: IPv4
*Primary                               State: Up
    Priorities: 7 0
    Bandwidth: 10Mbps
    OptimizeTimer: 30
    SmartOptimizeTimer: 180
    Reoptimization in 25 second(s).
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 3)
10.10.10.2 S 20.20.20.2 S 30.30.30.2 S
    Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
20=Node-ID):
        10.255.102.166(flag=0x20) 10.10.10.2(Label=303472)
10.255.102.29(flag=0x20) 20.20.20.2(Label=302176) 10.255.102.128(flag=0x20)
30.30.30.2(Label=3)

10.255.102.128
From: 10.255.102.166, State: Up, ActiveRoute: 0, LSPName: PE1-PE2-container-100-4

ActivePath: (primary)
Link protection desired
LSPTYPE: Dynamic Configured, Penultimate hop popping
LoadBalance: Random

```



```

Autobandwidth
MinBW: 10Mbps, MaxBW: 10Mbps
AdjustTimer: 300 secs AdjustThreshold: 5%
Max AvgBW util: 9.16169Mbps, Bandwidth Adjustment in 9 second(s).
Overflow limit: 0, Overflow sample count: 0
Underflow limit: 0, Underflow sample count: 29, Underflow Max AvgBW: 9.16169Mbps

Encoding type: Packet, Switching type: Packet, GPID: IPv4
*Primary                               State: Up
  Priorities: 7 0
  Bandwidth: 10Mbps
  OptimizeTimer: 30
  SmartOptimizeTimer: 180
  Reoptimization in 1 second(s).
  Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 3)
10.10.10.2 S 20.20.20.2 S 30.30.30.2 S
  Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
20=Node-ID):
    10.255.102.166(flag=0x20) 10.10.10.2(Label=303520)
10.255.102.29(flag=0x20) 20.20.20.2(Label=302192) 10.255.102.128(flag=0x20)
30.30.30.2(Label=3)

10.255.102.128
  From: 10.255.102.166, State: Up, ActiveRoute: 0, LSPname: PE1-PE2-container-100-5

ActivePath: (primary)
Link protection desired
LSptype: Dynamic Configured, Penultimate hop popping
LoadBalance: Random
Autobandwidth
MinBW: 10Mbps, MaxBW: 10Mbps
AdjustTimer: 300 secs AdjustThreshold: 5%
Max AvgBW util: 8.39908Mbps, Bandwidth Adjustment in 69 second(s).
Overflow limit: 0, Overflow sample count: 0
Underflow limit: 0, Underflow sample count: 23, Underflow Max AvgBW: 8.39908Mbps

Encoding type: Packet, Switching type: Packet, GPID: IPv4
*Primary                               State: Up
  Priorities: 7 0
  Bandwidth: 10Mbps
  OptimizeTimer: 30
  SmartOptimizeTimer: 180
  Reoptimization in 17 second(s).
  Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 3)
10.10.10.2 S 20.20.20.2 S 30.30.30.2 S
  Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
20=Node-ID):
    10.255.102.166(flag=0x20) 10.10.10.2(Label=303536)
10.255.102.29(flag=0x20) 20.20.20.2(Label=302208) 10.255.102.128(flag=0x20)
30.30.30.2(Label=3)
Total 5 displayed, Up 5, Down 0

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

**Meaning** At the expiry of the normalization timer, the container LSP is split into five member LSPs, each with 10 Mbps (minimum and maximum signaling bandwidth). As a result, the

aggregate bandwidth is 50 Mbps.

### Verifying the Container LSP Splitting Process

**Purpose** Verify the container LSP splitting process after normalization happens.

**Action** From operational mode, run the **show route 2.2.2** command.

```
user@PE1> show route 2.2.2
vpn1.inet.0: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

2.2.2.0/24          *[BGP/170] 00:12:14, localpref 100, from 10.255.102.128
                    AS path: I, validation-state: unverified
>to 10.10.10.2 via ge-0/0/1.0, label-switched-path PE1-PE2-container100-1
to 10.10.10.2 via ge-0/0/1.0, label-switched-path PE1-PE2-container100-2
to 10.10.10.2 via ge-0/0/1.0, label-switched-path PE1-PE2-container100-3
to 10.10.10.2 via ge-0/0/1.0, label-switched-path PE1-PE2-container100-4
to 10.10.10.2 via ge-0/0/1.0, label-switched-path PE1-PE2-container100-5
```

**Meaning** After LSP splitting, Router PE1 has injected the forwarding adjacency.

### Verifying the Container LSP Statistics

**Purpose** Verify the container LSP statistics after normalization happens.

**Action** From operational mode, run the **show mpls container-lsp statistics** command.

```
user@PE1> show mpls container-lsp statistics
Ingress LSP: 1 sessions
Container LSP name                                State      Member LSP count
PE1-PE2-container-100                             Up          5
To          From          State      Packets      Bytes  LSPname
10.255.102.128 10.255.102.166 Up    15166271    2062612856
PE1-PE2-container-100-1
10.255.102.128 10.255.102.166 Up    12289912    1671428032
PE1-PE2-container-100-2
10.255.102.128 10.255.102.166 Up    13866911    1885899896
PE1-PE2-container-100-3
10.255.102.128 10.255.102.166 Up    12558707    1707984152
PE1-PE2-container-100-4
10.255.102.128 10.255.102.166 Up    11512151    1565652536
PE1-PE2-container-100-5
```

**Meaning** Traffic is load-balanced across the newly created member LSPs.

### Verifying the Container LSP Status with Decreased Bandwidth (Before Normalization)

**Purpose** Verify the status of the container LSP with decreased bandwidth before normalization happens.

**Action** From operational mode, run the **show mpls container-lsp detail** command.

```
user@PE1> show mpls container-lsp detail
Ingress LSP: 1 sessions
Container LSP name: PE1-PE2-container-100, State: Up, Member count: 5
Normalization
  Min LSPs: 2, Max LSPs: 20
  Aggregate bandwidth: 50Mbps, Sampled Aggregate bandwidth: 2.0215Mbps
  NormalizeTimer: 400 secs, NormalizeThreshold: 10%
  Max Signaling BW: 10Mbps, Min Signaling BW: 10Mbps, Splitting BW: 40Mbps, Merging
  BW: 6Mbps
  Mode: incremental-normalization, failover-normalization
  Sampling: Outlier cut-off 1, Percentile 90 of Aggregate
  Normalization in 384 second(s)
---Output truncated---
```

**Meaning** Because normalization has not happened, the member LSP count remains at 5.

### Verifying the Container LSP Status with Decreased Bandwidth (After Normalization)

**Purpose** Verify the status of the container LSP with decreased bandwidth after normalization happens.

**Action** From operational mode, run the **show mpls container-lsp detail** command.

```
user@PE1> show mpls container-lsp detail
Ingress LSP: 1 sessions
Container LSP name: PE1-PE2-container-100, State: Up, Member count: 2
Normalization
  Min LSPs: 2, Max LSPs: 20
  Aggregate bandwidth: 20Mbps, Sampled Aggregate bandwidth: 0bps
  NormalizeTimer: 400 secs, NormalizeThreshold: 10%
  Max Signaling BW: 10Mbps, Min Signaling BW: 10Mbps, Splitting BW: 40Mbps, Merging
  BW: 6Mbps
  Mode: incremental-normalization, failover-normalization
  Sampling: Outlier cut-off 1, Percentile 90 of Aggregate
  Normalization in 397 second(s)
  22 Jun  5 22:30:37.094 Clear history and statistics: on container
  (PE1-PE2-container-100)
  21 Jun  5 22:30:37.094 Delete member LSPs: PE1-PE2-container-100-3 through
  PE1-PE2-container-100-5
  20 Jun  5 22:30:37.090 Normalize: container (PE1-PE2-container-100) into 2
  members - each with bandwidth 10000000 bps
  19 Jun  5 22:30:37.090 Normalize: normalization with aggregate bandwidth 2037595
  bps
  18 Jun  5 22:30:37.090 Normalize: normalization with 2037595 bps
---Output truncated---
```

**Meaning** At the expiry of the normalization timer, the container LSP merging takes place because there is an overall reduction in bandwidth. The member LSPs are merged, and the member LSP count is 2 after normalization.

### Verifying the Container LSP Merging Process

---

**Purpose** Verify the container LSP splitting process after normalization happens.

**Action** From operational mode, run the **show route 2.2.2** command.

```
user@PE1> show route 2.2.2
vpn1.inet.0: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

2.2.2.0/24          *[BGP/170] 01:09:45, localpref 100, from 10.255.102.128
                   AS path: I, validation-state: unverified
                   > to 10.10.10.2 via ge-0/0/1.0, label-switched-path
PE1-PE2-container-100-1
                   to 10.10.10.2 via ge-0/0/1.0, label-switched-path
PE1-PE2-container-100-2
```

**Meaning** After LSP merging, Router PE1 has deleted the merged member LSPs.

### Verifying Failover Normalization

---

**Purpose** Verify load redistribution when traffic is sent at 35 Mbps and the link between Routers P1 and P2 is disabled. Arrival of PathErr on link failure triggers immediate normalization.

To enable failover normalization, include the **failover-normalization** configuration statement at the **[edit protocols mpls container-label-switched-path container-lsp-name splitting-merging normalization]** hierarchy level.

**Action** From operational mode, run the **show mpls container-lsp** command.

```
user@PE1> show mpls container-lsp
Ingress LSP: 1 sessions
Container LSP name
PE1-PE2-container-100
To From State Rt P State Member LSP count
Up ActivePath 2
10.255.102.128 10.255.102.166 Up 0 *
PE1-PE2-container-100-1
10.255.102.128 10.255.102.166 Up 0 *
PE1-PE2-container-100-2
Total 2 displayed, Up 2, Down 0
```

After the ge-0/0/2 link between Routers P1 and P2 goes down, normalization is immediately triggered.

From operational mode, run the **show mpls container-lsp detail** command.

```
user@PE1> show mpls container-lsp detail
Ingress LSP: 1 sessions
Container LSP name: PE1-PE2-container-100, State: Up, Member count: 4
Normalization
Min LSPs: 2, Max LSPs: 20
Aggregate bandwidth: 40Mbps, Sampled Aggregate bandwidth: 34.5538Mbps
NormalizeTimer: 3000 secs, NormalizeThreshold: 10%
Max Signaling BW: 10Mbps, Min Signaling BW: 10Mbps, Splitting BW: 40Mbps, Merging
BW: 6Mbps
Mode: incremental-normalization, failover-normalization
Sampling: Outlier cut-off 1, Percentile 90 of Aggregate
Normalization in 2970 second(s)
11 Jun 5 19:28:27.564 Normalization complete: container (PE1-PE2-container-100)
with 4 members
10 Jun 5 19:28:20.315 Normalize: container (PE1-PE2-container-100) received PathErr
on member PE1-PE2-container-100-2[2 times]
9 Jun 5 19:28:20.315 Normalize: container (PE1-PE2-container-100) received
PathErr on member PE1-PE2-container-100-1[2 times]
8 Jun 5 19:28:20.311 Clear history and statistics: on container
(PE1-PE2-container-100)
7 Jun 5 19:28:20.311 Normalize: container (PE1-PE2-container-100) into 4
members - each with bandwidth 10000000 bps
6 Jun 5 19:28:20.311 Normalize: normalization with aggregate bandwidth 33665020
bps
5 Jun 5 19:28:20.308 Normalize: container (PE1-PE2-container-100) received
PathErr on member PE1-PE2-container-100-2
4 Jun 5 19:28:20.308 Normalize: container (PE1-PE2-container-100) received
PathErr on member PE1-PE2-container-100-1
3 Jun 5 19:27:48.574 Normalization complete: container (PE1-PE2-container-100)
with 2 members
2 Jun 5 19:27:28.644 Normalize: container (PE1-PE2-container-100) create 2
LSPs, min bw 10000000bps, member count 0
1 Jun 5 19:27:28.644 Normalize: normalization with aggregate bandwidth 0 bps
----Output truncated----
```

**Meaning** Arrival of PathErr message on link failure triggers immediate normalization.

### Verifying Incremental Normalization

**Purpose** Verify incremental normalization when enough bandwidth is not available.

On Router PE1, the RSVP interfaces static bandwidth is restricted to 22 Mbps each.

**Action** From operational mode, run the **show rsvp interface** command.

```
user@PE1> show rsvp interface
RSVP interface: 4 active
```

| Interface  | State | Active resv | Subscription | Static BW | Available BW | Reserved BW | Highwater mark |
|------------|-------|-------------|--------------|-----------|--------------|-------------|----------------|
| ge-0/0/2.0 | Up    | 0           | 100%         | 22Mbps    | 22Mbps       | 0bps        | 21.4031Mbps    |
| ge-0/0/1.0 | Up    | 2           | 100%         | 22Mbps    | 12Mbps       | 10Mbps      | 21.7011Mbps    |

Before normalization happens:

From operational mode, run the **show mpls container-lsp** command.

```
user@PE1> show mpls container-lsp
Ingress LSP: 1 sessions
Container LSP name
PE1-PE2-container-100
To From State Rt P State Up Member LSP count
ActivePath LSPname
10.255.102.128 10.255.102.166 Up 0 * PE1-PE2-container-100-1
PE1-PE2-container-100-1
10.255.102.128 10.255.102.166 Up 0 * PE1-PE2-container-100-2
PE1-PE2-container-100-2
```

After normalization happens:

From operational mode, run the **show mpls container-lsp** command.

```
user@PE1> show mpls container-lsp
Ingress LSP: 1 sessions
Container LSP name
PE1-PE2-container-100
To From State Rt P State Up Member LSP count
ActivePath LSPname
10.255.102.128 10.255.102.166 Up 0 * PE1-PE2-container-100-1
10.255.102.128 10.255.102.166 Up 0 * PE1-PE2-container-100-2
10.255.102.128 10.255.102.166 Up 0 * PE1-PE2-container-100-3
10.255.102.128 10.255.102.166 Up 0 * PE1-PE2-container-100-4
10.255.102.128 10.255.102.166 Up 0 * PE1-PE2-container-100-5
10.255.102.128 10.255.102.166 Up 0 * PE1-PE2-container-100-6
10.255.102.128 0.0.0.0 Dn 0 - PE1-PE2-container-100-7
Total 7 displayed, Up 6, Down 1
```

From operational mode, run the **show mpls container-lsp detail** command.

```
user@PE1> show mpls container-lsp detail
Ingress LSP: 1 sessions
Container LSP name: PE1-PE2-container-100, State: Up, Member count: 7
Normalization
Min LSPs: 2, Max LSPs: 10
Aggregate bandwidth: 40.8326Mbps, Sampled Aggregate bandwidth: 50.129Mbps
NormalizeTimer: 9000 secs, NormalizeThreshold: 10%
Max Signaling BW: 10Mbps, Min Signaling BW: 5Mbps, Splitting BW: 40Mbps, Merging BW: 5Mbps
Mode: incremental-normalization, failover-normalization
Sampling: Outlier cut-off 1, Percentile 90 of Aggregate
Normalization in 8072 second(s)
10 Jun 5 18:40:17.812 Normalization complete: container (PE1-PE2-container-100) with 7 members, retry-limit reached
9 Jun 5 18:40:08.028 Normalize: container (PE1-PE2-container-100) for target member count 7, member bandwidth 6805439 bps
8 Jun 5 18:39:58.301 Normalize: container (PE1-PE2-container-100) for target
```

```
member count 6, member bandwidth 7939679 bps
7 Jun 5 18:39:48.470 Clear history and statistics: on container
(PE1-PE2-container-100)
6 Jun 5 18:39:48.470 Normalize: container (PE1-PE2-container-100) into 5
members - each with bandwidth 9527615 bps
5 Jun 5 18:39:48.469 Normalize: normalization with aggregate bandwidth 47638076
bps
4 Jun 5 18:39:48.469 Normalize: normalization with 47638076 bps
3 Jun 5 18:39:09.471 Normalization complete: container (PE1-PE2-container-100)
with 2 members
2 Jun 5 18:38:59.822 Normalize: container (PE1-PE2-container-100) create 2
LSPs, min bw 5000000bps, member count 0
1 Jun 5 18:38:59.822 Normalize: normalization with aggregate bandwidth 0 bps
```

**Meaning** After normalization, the aggregate bandwidth after three retries is 40.8326 Mbps.

**Related Documentation** • [Dynamic Bandwidth Management Using Container LSP Overview on page 410](#)

---

## Configuring On-Demand Loss and Delay Measurement

---

You can configure an on-demand loss and delay measurement for point-to-point ultimate hop popping (UHP) label-switched paths (LSPs) in MPLS networks to monitor network performance. The **monitor mpls loss rsvp**, **monitor mpls delay rsvp**, and **monitor mpls loss-delay rsvp** CLI commands provide an on-demand summary of performance metrics for direct mode packet loss, two-way packet delay, and related metrics, such as inter-packet delay variation and channel throughput measurement.

This functionality provides real-time visibility into network performance, thereby facilitating network performance planning, troubleshooting, and evaluation.

Before you begin:

1. Configure the device interfaces.
2. Configure the device router ID.
3. Configure the following protocols:
  - RSVP
  - OSPFEnable traffic engineering capabilities.
- MPLS

To configure the PE device:

1. Enable the chassis with tunnel services and enhanced IP network services configuration.

```
[edit chassis]
user@R1# set fpc fpc-slot pic pic-slot tunnel-services bandwidth bandwidth
user@R1# set network-services enhanced-ip
```
2. Configure an associated bidirectional LSP to the remote router.



```
[edit protocols]
user@R1# set mpls label-switched-path lsp-name to remote-router-ip-address
user@R1# set mpls label-switched-path lsp-name oam mpls-tp-mode
user@R1# set mpls label-switched-path lsp-name ultimate-hop-popping
user@R1# set mpls label-switched-path lsp-name associate-lsp lsp-name
```

3. Create traffic classes for maintaining data traffic statistics per traffic class.

This enables traffic class scoped loss measurement.

```
[edit protocols]
user@R1# set mpls statistics traffic-class-statistics
```

#### Related Documentation

- [On-Demand Packet Loss and Delay Measurement for UHP LSPs Overview on page 50](#)
- [Example: Configuring On-Demand Loss and Delay Measurement on page 467](#)
- [monitor mpls loss rsvp on page 1726](#)
- [monitor mpls delay rsvp on page 1722](#)
- [monitor mpls loss-delay rsvp on page 1731](#)

## Example: Configuring On-Demand Loss and Delay Measurement

This example shows how to enable on-demand loss and delay measurement for point-to-point ultimate hop popping (UHP) label-switched paths (LSPs) in MPLS networks to monitor network performance.

- [Requirements on page 467](#)
- [Overview on page 468](#)
- [Configuration on page 468](#)
- [Verification on page 472](#)

### Requirements

This example uses the following hardware and software components:

- Two MX Series 3D Universal Edge routers that contain MPC/MICs only
- Junos OS Release 14.2 or later running on all the routers

Before you begin:

1. Configure the device interfaces.
2. Configure the autonomous system numbers and router IDs for the devices.
3. Configure the following protocols:
  - RSVP
  - MPLS
  - OSPF

## Overview

Starting with Junos OS Release 14.2, an on-demand tool to monitor and measure packet loss, packet delay, or both for associated bidirectional MPLS ultimate hop popping (UHP) point-to-point label-switched paths (LSPs) is introduced. The tool can be enabled using the following CLI commands – **monitor mpls loss rsvp**, **monitor mpls delay rsvp**, and **monitor mpls loss-delay rsvp**.


These commands provide an on-demand summary of performance metrics for direct mode packet loss, two-way packet delay, and related metrics, such as inter-packet delay variation and channel throughput measurement.

This functionality provides real-time visibility into network performance, thereby facilitating network performance planning, troubleshooting, and evaluation.

## Topology

Figure 41 on page 468 illustrates the on-demand loss and delay measurement using a simple two-router topology.

**Figure 41: Configuring On-Demand Loss and Delay Measurement**

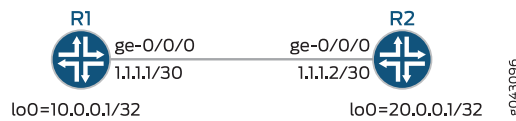

In this example, an associated bidirectional LSP is configured between Routers R1 and R2, for which the performance metrics is measured.

## Configuration

**CLI Quick Configuration** To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the **[edit]** hierarchy level, and then enter **commit** from configuration mode.

```

R1 set chassis fpc 0 pic 3 tunnel-services bandwidth 1g
   set chassis network-services enhanced-ip
   set interfaces ge-0/0/0 unit 0 family inet address 1.1.1.1/30
   set interfaces ge-0/0/0 unit 0 family mpls
   set interfaces lo0 unit 0 family inet address 10.0.0.1/32
   set interfaces lo0 unit 0 family mpls
   set routing-options router-id 10.0.0.1
   set protocols rsvp interface ge-0/0/0.0
   set protocols rsvp interface lo0.0
   set protocols rsvp interface fxp0.0 disable
   set protocols mpls statistics traffic-class-statistics
   set protocols mpls label-switched-path R1-R2 to 20.0.0.1
   set protocols mpls label-switched-path R1-R2 oam mpls-tp-mode
   set protocols mpls label-switched-path R1-R2 ultimate-hop-popping
   set protocols mpls label-switched-path R1-R2 associate-lsp R2-R1
   set protocols mpls interface ge-0/0/0.0
   set protocols mpls interface lo0.0
   set protocols mpls interface fxp0.0 disable
  
```

```

set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface ge-0/0/0.0
set protocols ospf area 0.0.0.0 interface lo0.0
set protocols ospf area 0.0.0.0 interface fxp0.0 disable

```

```

R2  set chassis fpc 0 pic 3 tunnel-services bandwidth 1g
    set chassis network-services enhanced-ip
    set interfaces ge-0/0/0 unit 0 family inet address 1.1.1.2/30
    set interfaces ge-0/0/0 unit 0 family mpls
    set interfaces lo0 unit 0 family inet address 20.0.0.1/32
    set interfaces lo0 unit 0 family mpls
    set routing-options router-id 20.0.0.1
    set protocols rsvp interface ge-0/0/0.0
    set protocols rsvp interface lo0.0
    set protocols rsvp interface fxp0.0 disable
    set protocols mpls statistics traffic-class-statistics
    set protocols mpls label-switched-path R2-R1 to 10.0.0.1
    set protocols mpls label-switched-path R2-R1 oam mpls-tp-mode
    set protocols mpls label-switched-path R2-R1 ultimate-hop-popping
    set protocols mpls label-switched-path R2-R1 associate-lsp R1-R2
    set protocols mpls interface ge-0/0/0.0
    set protocols mpls interface lo0.0
    set protocols mpls interface fxp0.0 disable
    set protocols ospf traffic-engineering
    set protocols ospf area 0.0.0.0 interface ge-0/0/0.0
    set protocols ospf area 0.0.0.0 interface lo0.0
    set protocols ospf area 0.0.0.0 interface fxp0.0 disable

```

**Step-by-Step Procedure** The following example requires that you navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure Router R1:

1. Enable the chassis with tunnel services and enhanced IP network services configuration.  

```

[edit chassis]
user@R1# set fpc 0 pic 3 tunnel-services bandwidth 1g
user@R1# set network-services enhanced-ip

```
2. Configure the interfaces for Router R1.  

```

[edit interfaces]
user@R1# set ge-0/0/0 unit 0 family inet address 1.1.1.1/30
user@R1# set ge-0/0/0 unit 0 family mpls

user@R1# set lo0 unit 0 family inet address 10.0.0.1/32
user@R1# set lo0 unit 0 family mpls

```
3. Configure the router ID for Router R1.  

```

[edit routing-options]
user@R1# set router-id 10.0.0.1

```
4. Enable RSVP on all the interfaces of Router R1, excluding the management interface.

```
[edit protocols]
user@R1# set rsvp interface ge-0/0/0.0
user@R1# set rsvp interface lo0.0
user@R1# set rsvp interface fxp0.0 disable
```

5. Enable MPLS on all the interfaces of Router R1, excluding the management interface.

```
[edit protocols]
user@R1# set mpls interface ge-0/0/0.0
user@R1# set mpls interface lo0.0
user@R1# set mpls interface fxp0.0 disable
```

6. Configure an associated bidirectional LSP to Router R2.

```
[edit protocols]
user@R1# set mpls label-switched-path R1-R2 to 20.0.0.1
user@R1# set mpls label-switched-path R1-R2 oam mpls-tp-mode
user@R1# set mpls label-switched-path R1-R2 ultimate-hop-popping
user@R1# set mpls label-switched-path R1-R2 associate-lsp R2-R1
```

7. Create traffic classes for maintaining data traffic statistics per traffic class.

This enables traffic class scoped loss measurement.

```
[edit protocols]
user@R1# set mpls statistics traffic-class-statistics
```

8. Configure OSPF with traffic engineering capabilities, and enable OSPF on all the interfaces of Router R1, excluding the management interface.

```
[edit protocols]
user@R1# set ospf traffic-engineering
user@R1# set ospf area 0.0.0.0 interface ge-0/0/0.0
user@R1# set ospf area 0.0.0.0 interface lo0.0
user@R1# set ospf interface fxp0.0 disable
```

---

## Results

From configuration mode, confirm your configuration by entering the **show chassis**, **show interfaces**, **show routing-options**, and **show protocols** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@R1# show chassis
fpc 0 {
  pic 3 {
    tunnel-services {
      bandwidth 1g;
    }
  }
}
network-services enhanced-ip;

user@R1# show interfaces
ge-0/0/0 {
  unit 0 {
    family inet {
      address 1.1.1.1/30;
    }
  }
}
```

```

    }
    family mpls;
  }
}
lo0 {
  unit 0 {
    family inet {
      address 10.0.0.1/32;
    }
    family mpls;
  }
}

user@R1# show routing-options
router-id 10.0.0.1;

user@R1# show protocols
rsvp {
  interface ge-0/0/0.0;
  interface lo0.0;
  interface fxp0.0 {
    disable;
  }
}
mpls {
  statistics {
    traffic-class-statistics;
  }
  label-switched-path R1-R2 {
    to 20.0.0.1;
    oam mpls-tp-mode;
    ultimate-hop-popping;
    associate-lsp R2-R1;
  }
  interface ge-0/0/0.0;
  interface lo0.0;
  interface fxp0.0 {
    disable;
  }
}
ospf {
  traffic-engineering;
  area 0.0.0.0 {
    interface ge-0/0/0.0;
    interface lo0.0;
    interface fxp0.0 {
      disable;
    }
  }
}
}

```

## Verification

Confirm that the configuration is working properly.

- [Verifying the LSP Status on page 472](#)
- [Verifying Packet Loss Measurement on page 472](#)
- [Verifying Packet Delay Measurement on page 474](#)
- [Verifying Packet Loss-Delay Measurement on page 474](#)

---

### Verifying the LSP Status

**Purpose** Verify that the associated bidirectional LSP between Routers R1 and R2 is up.

**Action** From operational mode, run the **show mpls lsp** command.

```
user@R1> show mpls lsp
Ingress LSP: 1 sessions
To          From          State Rt P    ActivePath      LSPname
20.0.0.1    10.0.0.1                Up    0 *              R1-R2 Assoc-Bidir
Total 1 displayed, Up 1, Down 0

Egress LSP: 1 sessions
To          From          State Rt Style Labelin Labelout LSPname
10.0.0.1    20.0.0.1      Up    0  1 FF  299776      - R2-R1 Assoc-Bidir
Total 1 displayed, Up 1, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

**Meaning** The associated bidirectional LSP R1-R2 is up and active.

---

### Verifying Packet Loss Measurement

**Purpose** Verify the on-demand loss measurement result.

**Action** From operational mode, run the **monitor mpls loss rsvp R1-R2 count 2 detail** command.

```

user@R1> monitor mpls loss rsvp R1-R2 count 2 detail
(0)
Response code                : Success
Origin timestamp             : 1404129082 secs, 905571890 nsecs
Forward transmit count       : 83040
Forward receive count        : 83040
Reverse transmit count       : 83100
Reverse receive count        : 83100
(1)
Response code                : Success
Origin timestamp             : 1404129083 secs, 905048410 nsecs
Forward transmit count       : 83841
Forward receive count        : 83841
Reverse transmit count       : 83904
Reverse receive count        : 83904
Current forward transmit count : 801
Current forward receive count : 801
Current forward loss          : 0 packets
Current forward loss ratio    : 0.000000
Current forward throughput    : 0.801 kpps
Current reverse transmit count : 804
Current reverse receive count : 804
Current reverse loss          : 0 packets
Current reverse loss ratio    : 0.000000
Current reverse throughput    : 0.804 kpps
(2)
Response code                : Success
Origin timestamp             : 1404129084 secs, 904828715 nsecs
Forward transmit count       : 84423
Forward receive count        : 84423
Reverse transmit count       : 84487
Reverse receive count        : 84487
Current forward transmit count : 582
Current forward receive count : 582
Current forward loss          : 0 packets
Current forward loss ratio    : 0.000000
Current forward throughput    : 0.582 kpps
Current reverse transmit count : 583
Current reverse receive count : 583
Current reverse loss          : 0 packets
Current reverse loss ratio    : 0.000000
Current reverse throughput    : 0.583 kpps

Cumulative forward transmit count : 1383
Cumulative forward loss          : 0 packets
Average forward loss ratio       : 0.000000
Average forward throughput       : 0.692 kpps
Cumulative reverse transmit count : 1387
Cumulative reverse loss          : 0 packets
Average reverse loss ratio       : 0.000000
Average reverse throughput       : 0.694 kpps

LM queries sent                 : 3
LM responses received           : 3
LM queries timedout             : 0
LM responses dropped due to errors : 0

```

**Meaning** The packet loss measurement for two counts is displayed.

### Verifying Packet Delay Measurement

---

**Purpose** Verify the on-demand delay measurement result.

**Action** From operational mode, run the **monitor mpls delay rsvp R1-R2 count 2 detail** command.

```
user@R1> monitor mpls delay rsvp R1-R2 count 2 detail
(1)
Response code                               : Success
Querier transmit timestamp                   : 1404129122 secs, 479955401 nsecs
Responder receive timestamp                   : 1404129122 secs, 468519022 nsecs
Responder transmit timestamp                  : 1404129122 secs, 470255123 nsecs
Querier receive timestamp                     : 1404129122 secs, 481736403 nsecs
Current two-way channel delay                 : 44 usecs
Current round-trip-time                      : 1781 usecs
(2)
Response code                               : Success
Querier transmit timestamp                   : 1404129123 secs, 480926210 nsecs
Responder receive timestamp                   : 1404129123 secs, 469488696 nsecs
Responder transmit timestamp                  : 1404129123 secs, 471130706 nsecs
Querier receive timestamp                     : 1404129123 secs, 482613911 nsecs
Current two-way channel delay                 : 45 usecs
Current round-trip-time                      : 1687 usecs

Best two-way channel delay                   : 44 usecs
Worst two-way channel delay                   : 45 usecs
Average two-way channel delay                 : 45 usecs
Best round-trip-time                        : 1687 usecs
Worst round-trip-time                       : 1781 usecs
Average round-trip-time                     : 1734 usecs
Average forward delay variation               : 1 usecs
Average reverse delay variation              : 1 usecs

DM queries sent                             : 2
DM responses received                       : 2
DM queries timedout                         : 0
DM responses dropped due to errors           : 0
```

**Meaning** The packet delay measurement for two counts is displayed.

### Verifying Packet Loss-Delay Measurement

---

**Purpose** Verify the on-demand loss and delay measurement result.



**Action** From operational mode, run the **monitor mpls loss-delay rsvp R1-R2 count 2 detail** command.

```

user@R1> monitor mpls loss-delay rsvp R1-R2 count 2 detail
(0)
Response code                               : Success
Forward transmit count                       : 142049
Forward receive count                       : 142049
Reverse transmit count                      : 142167
Reverse receive count                      : 142167
Querier transmit timestamp                  : 1404129161 secs, 554422723 nsecs
Responder receive timestamp                 : 1404129161 secs, 542877570 nsecs
Responder transmit timestamp               : 1404129161 secs, 546004545 nsecs
Querier receive timestamp                  : 1404129161 secs, 557599327 nsecs
(1)
Response code                               : Success
Forward transmit count                       : 143049
Forward receive count                       : 143049
Reverse transmit count                      : 143168
Reverse receive count                      : 143168
Current forward transmit count              : 1000
Current forward receive count              : 1000
Current forward loss                       : 0 packets
Current forward loss ratio                 : 0.000000
Current forward throughput                 : 1.000 kpps
Current reverse transmit count             : 1001
Current reverse receive count             : 1001
Current reverse loss                      : 0 packets
Current reverse loss ratio                 : 0.000000
Current reverse throughput                 : 1.001 kpps
Querier transmit timestamp                 : 1404129162 secs, 554465742 nsecs
Responder receive timestamp               : 1404129162 secs, 542919166 nsecs
Responder transmit timestamp              : 1404129162 secs, 545812736 nsecs
Querier receive timestamp                 : 1404129162 secs, 557409175 nsecs
Current two-way channel delay              : 49 usecs
Current round-trip-time                   : 2943 usecs
(2)
Response code                               : Success
Forward transmit count                       : 143677
Forward receive count                       : 143677
Reverse transmit count                      : 143799
Reverse receive count                      : 143799
Current forward transmit count             : 628
Current forward receive count             : 628
Current forward loss                      : 0 packets
Current forward loss ratio                 : 0.000000
Current forward throughput                 : 0.627 kpps
Current reverse transmit count             : 631
Current reverse receive count             : 631
Current reverse loss                      : 0 packets
Current reverse loss ratio                 : 0.000000
Current reverse throughput                 : 0.630 kpps
Querier transmit timestamp                 : 1404129163 secs, 556698575 nsecs
Responder receive timestamp               : 1404129163 secs, 545150128 nsecs
Responder transmit timestamp              : 1404129163 secs, 546918408 nsecs
Querier receive timestamp                 : 1404129163 secs, 558515047 nsecs
Current two-way channel delay              : 48 usecs
Current round-trip-time                   : 1816 usecs

Cumulative forward transmit count          : 1628

```

|                                     |              |
|-------------------------------------|--------------|
| Cumulative forward loss             | : 0 packets  |
| Average forward loss ratio          | : 0.000000   |
| Average forward throughput          | : 0.813 kpps |
| Cumulative reverse transmit count   | : 1632       |
| Cumulative reverse loss             | : 0 packets  |
| Average reverse loss ratio          | : 0.000000   |
| Average reverse throughput          | : 0.815 kpps |
| Best two-way channel delay          | : 48 usecs   |
| Worst two-way channel delay         | : 49 usecs   |
| Average two-way channel delay       | : 49 usecs   |
| Best round-trip-time                | : 1816 usecs |
| Worst round-trip-time               | : 3176 usecs |
| Average round-trip-time             | : 2645 usecs |
| Average forward delay variation     | : 1 usecs    |
| Average reverse delay variation     | : 0 usecs    |
| LDM queries sent                    | : 3          |
| LDM responses received              | : 3          |
| LDM queries timedout                | : 0          |
| LDM responses dropped due to errors | : 0          |

**Meaning** The packet loss and delay measurement for two counts is displayed.

**Related Documentation**

- [On-Demand Packet Loss and Delay Measurement for UHP LSPs Overview on page 50](#)
- [monitor mpls loss rsvp on page 1726](#)
- [monitor mpls delay rsvp on page 1722](#)
- [monitor mpls loss-delay rsvp on page 1731](#)

---

## Configuring Pro-Active Loss and Delay Measurements

You can configure pro-active loss and delay measurements for point-to-point ultimate-hop popping label-switched paths (LSPs) in MPLS networks to monitor network performance. The **show performance-monitoring mpls lsp** CLI command provides a summary of performance metrics for direct mode packet loss, two-way packet delay, and related metrics, such as inter-packet delay variation and channel throughput measurement.

This functionality provides real-time visibility into network performance, thereby facilitating network performance planning, troubleshooting, and evaluation.

This feature provides the following performance metrics:

- Inter-packet delay variation (IPDV)
- Loss measurement
- Round-trip delay (RTT)
- Throughput measurement
- Two-way channel delay

Before you begin:

1. Configure the device interfaces.
2. Configure the autonomous system numbers and router IDs for the devices.
3. Configure the following protocols:
  - MPLS
  - OSPF
  - RSVP

To configure pro-active loss and delay measurements on the PE device:

1. Configure an associated bidirectional LSP to Router R2.

```
[edit protocols]
user@host# set mpls label-switched-path lsp-name to remote-router-ip-address
user@host# set mpls label-switched-path lsp-name install
destination-prefix/prefix-length active
user@host# set mpls label-switched-path lsp-name oam mpls-tp-mode
user@host# set mpls label-switched-path lsp-name ultimate-hop-popping
user@host# set mpls label-switched-path lsp-name associate-lsp remote-lsp-name
```

2. Create traffic classes for maintaining data traffic statistics per traffic class.

This enables traffic class scoped loss and delay measurements.

```
[edit protocols]
user@host# set mpls statistics traffic-class-statistics
```

3. Configure performance monitoring at the querier side.

```
[edit protocols]
user@host# set mpls label-switched-path lsp-name oam performance-monitoring
querier delay traffic-class tc-value query-interval milliseconds
user@host# set mpls label-switched-path lsp-name oam performance-monitoring
querier loss traffic-class tc-value query-interval milliseconds
user@host# set mpls label-switched-path lsp-name oam performance-monitoring
querier loss-delay traffic-class tc-value query-interval milliseconds
```

4. Configure performance monitoring at the responder side.

```
[edit protocols]
user@host# set mpls label-switched-path lsp-name oam performance-monitoring
responder delay min-query-interval milliseconds
user@host# set mpls label-switched-path lsp-name oam performance-monitoring
responder loss min-query-interval milliseconds
```

#### Related Documentation

- [Example: Configuring Pro-active Loss and Delay Measurements for Bidirectional MPLS LSPs on page 478](#)
- [performance-monitoring \(Protocols MPLS\) on page 1493](#)
- [show performance-monitoring mpls lsp on page 1814](#)

## Example: Configuring Pro-active Loss and Delay Measurements for Bidirectional MPLS LSPs

---

This example shows how to configure pro-active loss and delay measurements for point-to-point ultimate-hop popping label-switched paths (LSPs) in MPLS networks to monitor network performance.

- [Requirements on page 478](#)
- [Overview on page 478](#)
- [Configuration on page 479](#)
- [Verification on page 483](#)

### Requirements

This example uses the following hardware and software components:

- Two MX Series 3D Universal Edge routers that contain MPC/MICs only
- Junos OS Release 15.1 or later running on all the routers

Before you begin:

1. Configure the device interfaces.
2. Configure the autonomous system numbers and router IDs for the devices.
3. Configure the following protocols:
  - a. MPLS
  - b. OSPF
  - c. RSVP

### Overview

Starting with Junos OS Release 15.1, a pro-active tool to monitor and measure packet loss, packet delay, or both for associated bidirectional MPLS ultimate-hop popping point-to-point label-switched paths (LSPs) is introduced.

This feature provides the following performance metrics:


- Inter-packet delay variation (IPDV)
- Loss measurement
- Round-trip delay (RTT)
- Throughput measurement
- Two-way channel delay

This functionality provides real-time visibility into network performance, thereby facilitating network performance planning, troubleshooting, and evaluation.

## Topology

Figure 41 on page 468 illustrates the pro-active loss and delay measurements using a simple two-router topology.

Figure 42: Configuring Pro-Active Loss and Delay Measurements



In this example, an associated bidirectional LSP is configured between Routers R1 and R2, for which the performance metrics are measured.

## Configuration

**CLI Quick Configuration** To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the **[edit]** hierarchy level, and then enter **commit** from configuration mode.

```
R1  set chassis network-services enhanced-ip
    set interfaces ge-0/0/0 unit 0 family inet address 1.1.1.1/30
    set interfaces ge-0/0/0 unit 0 family mpls
    set interfaces lo0 unit 0 family inet address 10.0.0.1/32
    set interfaces lo0 unit 0 family mpls
    set protocols mpls interface ge-0/0/0.0
    set protocols mpls interface lo0.0
    set protocols mpls interface fxp0.0 disable
    set protocols mpls label-switched-path R1-R2 associate-lsp R2-R1
    set protocols mpls label-switched-path R1-R2 install 20.10.30.0/24 active
    set protocols mpls label-switched-path R1-R2 oam mpls-tp-mode
    set protocols mpls label-switched-path R1-R2 oam performance-monitoring querier delay
      traffic-class tc-0 query-interval 1000
    set protocols mpls label-switched-path R1-R2 oam performance-monitoring querier loss
      traffic-class none query-interval 1000
    set protocols mpls label-switched-path R1-R2 oam performance-monitoring querier
      loss-delay traffic-class tc-0 query-interval 1000
    set protocols mpls label-switched-path R1-R2 oam performance-monitoring responder
      delay min-query-interval 1000
    set protocols mpls label-switched-path R1-R2 oam performance-monitoring responder
      loss min-query-interval 1000
    set protocols mpls label-switched-path R1-R2 to 20.0.0.1
    set protocols mpls label-switched-path R1-R2 ultimate-hop-popping
    set protocols mpls statistics traffic-class-statistics
    set protocols ospf area 0.0.0.0 interface ge-0/0/0.0
    set protocols ospf area 0.0.0.0 interface lo0.0
    set protocols ospf area 0.0.0.0 interface fxp0.0 disable
    set protocols ospf traffic-engineering
    set protocols rsvp interface ge-0/0/0.0
    set protocols rsvp interface lo0.0
    set protocols rsvp interface fxp0.0 disable
    set routing-options router-id 10.0.0.1

R2  set chassis network-services enhanced-ip
```

```
set interfaces ge-0/0/0 unit 0 family inet address 1.1.1.2/30
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 20.0.0.1/32
set interfaces lo0 unit 0 family mpls
set protocols mpls interface ge-0/0/0.0
set protocols mpls interface lo0.0
set protocols mpls interface fxp0.0 disable
set protocols mpls label-switched-path R2-R1 associate-lsp R1-R2
set protocols mpls label-switched-path R2-R1 install 10.10.20.0/24 active
set protocols mpls label-switched-path R2-R1 oam mpls-tp-mode
set protocols mpls label-switched-path R2-R1 oam performance-monitoring responder
    delay min-query-interval 1000
set protocols mpls label-switched-path R2-R1 oam performance-monitoring responder
    loss min-query-interval 1000
set protocols mpls label-switched-path R2-R1 oam performance-monitoring querier delay
    traffic-class tc-0 query-interval 1000
set protocols mpls label-switched-path R2-R1 oam performance-monitoring querier loss
    traffic-class none query-interval 1000
set protocols mpls label-switched-path R2-R1 oam performance-monitoring querier
    loss-delay traffic-class tc-0 query-interval 1000
set protocols mpls label-switched-path R2-R1 to 10.0.0.1
set protocols mpls label-switched-path R2-R1 ultimate-hop-popping
set protocols mpls statistics traffic-class-statistics
set protocols ospf area 0.0.0.0 interface ge-0/0/0.0
set protocols ospf area 0.0.0.0 interface lo0.0
set protocols ospf area 0.0.0.0 interface fxp0.0 disable
set protocols ospf traffic-engineering
set protocols rsvp interface ge-0/0/0.0
set protocols rsvp interface lo0.0
set protocols rsvp interface fxp0.0 disable
set routing-options router-id 20.0.0.1
```

**Step-by-Step Procedure** The following example requires that you navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure Router R1:

1. Enable the enhanced IP network services configuration.  

```
[edit chassis]
user@R1# set network-services enhanced-ip
```
2. Configure the interfaces for Router R1.  

```
[edit interfaces]
user@R1# set ge-0/0/0 unit 0 family inet address 1.1.1.1/30
user@R1# set ge-0/0/0 unit 0 family mpls

user@R1# set lo0 unit 0 family inet address 10.0.0.1/32
user@R1# set lo0 unit 0 family mpls
```
3. Configure the router ID for Router R1.  

```
[edit routing-options]
user@R1# set router-id 10.0.0.1
```

4. Enable RSVP on all the interfaces of Router R1, excluding the management interface.
 

```
[edit protocols]
user@R1# set rsvp interface ge-0/0/0.0
user@R1# set rsvp interface lo0.0
user@R1# set rsvp interface fxp0.0 disable
```
5. Enable MPLS on all the interfaces of Router R1, excluding the management interface.
 

```
[edit protocols]
user@R1# set mpls interface ge-0/0/0.0
user@R1# set mpls interface lo0.0
user@R1# set mpls interface fxp0.0 disable
```
6. Configure an associated bidirectional LSP to Router R2.
 

```
[edit protocols]
user@R1# set mpls label-switched-path R1-R2 to 20.0.0.1
user@R1# set mpls label-switched-path R1-R2 install 20.10.30.0/24 active
user@R1# set mpls label-switched-path R1-R2 oam mpls-tp-mode
user@R1# set mpls label-switched-path R1-R2 ultimate-hop-popping
user@R1# set mpls label-switched-path R1-R2 associate-lsp R2-R1
```
7. Create traffic classes for maintaining data traffic statistics per traffic class.
 

This enables traffic class scoped loss and delay measurement.

```
[edit protocols]
user@R1# set mpls statistics traffic-class-statistics
```
8. Configure performance monitoring at the querier side.
 

```
[edit protocols]
user@R1# set mpls label-switched-path R1-R2 oam performance-monitoring querier
  delay traffic-class tc-0 query-interval 1000
user@R1# set mpls label-switched-path R1-R2 oam performance-monitoring querier
  loss traffic-class none query-interval 1000
user@R1# set mpls label-switched-path R1-R2 oam performance-monitoring querier
  loss-delay traffic-class tc-0 query-interval 1000
```
9. Configure performance monitoring at the responder side.
 

```
[edit protocols]
user@R1# set mpls label-switched-path R1-R2 oam performance-monitoring
  responder delay min-query-interval 1000
user@R1# set mpls label-switched-path R1-R2 oam performance-monitoring
  responder loss min-query-interval 1000
```
10. Configure OSPF with traffic engineering capabilities, and enable OSPF on all the interfaces of Router R1, excluding the management interface.
 

```
[edit protocols]
user@R1# set ospf traffic-engineering
user@R1# set ospf area 0.0.0.0 interface ge-0/0/0.0
user@R1# set ospf area 0.0.0.0 interface lo0.0
user@R1# set ospf interface fxp0.0 disable
```

## Results

---

From configuration mode, confirm your configuration by entering the **show chassis**, **show interfaces**, **show routing-options**, and **show protocols** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@R1# show chassis
network-services enhanced-ip;

user@R1# show interfaces
ge-0/0/0 {
  unit 0 {
    family inet {
      address 1.1.1.1/30;
    }
    family mpls;
  }
}
lo0 {
  unit 0 {
    family inet {
      address 10.0.0.1/32;
    }
    family mpls;
  }
}

user@R1# show routing-options
router-id 10.0.0.1;

user@R1# show protocols
rsvp {
  interface ge-0/0/0.0;
  interface lo0.0;
  interface fxp0.0 {
    disable;
  }
}
mpls {
  label-switched-path R1-R2 {
    to 20.0.0.1;
    install 20.10.30.0/24 active;
    oam {
      mpls-tp-mode;
      performance-monitoring {
        querier {
          loss {
            traffic-class none {
              query-interval 1000;
            }
          }
        }
        delay {
          traffic-class tc-0 {
            query-interval 1000;
          }
        }
      }
    }
  }
}
```



```

    }
    loss-delay {
        traffic-class none {
            query-interval 1000;
        }
    }
}
responder {
    loss {
        min-query-interval 1000;
    }
    delay {
        min-query-interval 1000;
    }
}
}
ultimate-hop-popping;
associate-lsp R2-R1;
}
}
ospf {
    traffic-engineering;
    area 0.0.0.0 {
        interface ge-0/0/0.0;
        interface lo0.0;
        interface fxp0.0 {
            disable;
        }
    }
}
}

```

## Verification

### Verifying Loss and Delay Measurement

**Purpose** Verify the loss and delay measurement.

**Action** From operational mode, run the **show performance-monitoring mpls lsp** command.

```
user@R1> show performance-monitoring mpls lsp
Session Total: 3 Up: 3 Down: 0
LSP name:R1-R2, PM State:Up
  Loss measurement Data:
    Duration: 00:04:43
    Traffic-class: None
    Queries sent: 282
    Responses received: 282
    Responses dropped due to errors: 0
    Queries timeout: 0
    Forward loss measurement:
      Average packet loss: 0
      Average packet throughput: 554338
    Reverse loss measurement:
      Average packet loss: 0
      Average packet throughput: 1352077
LSP name:R1-R2, PM State:Up
  Delay measurement Data:
    Duration: 00:04:43
    Traffic-class: 0
    Queries sent: 282
    Responses received: 282
    Responses dropped due to errors: 0
    Queries timeout: 0
    Best 2-way channel delay: 72 usecs
    Worst 2-way channel delay: 365 usecs
    Best round trip time: 843 usecs
    Worst round trip time: 105523 usecs
    Avg absolute fw delay variation: 1619 usecs
    Avg absolute rv delay variation: 1619 usecs
LSP name:R1-R2, PM State:Up
  Loss measurement Data:
    Duration: 00:04:43
    Traffic-class: None
    Queries sent: 282
    Responses received: 282
    Responses dropped due to errors: 0
    Queries timeout: 0
    Forward loss measurement:
      Average packet loss: 0
      Average packet throughput: 553927
    Reverse loss measurement:
      Average packet loss: 0
      Average packet throughput: 1351531
  Delay measurement Data:
    Best 2-way channel delay: 76 usecs
    Worst 2-way channel delay: 368 usecs
    Best round trip time: 1082 usecs
    Worst round trip time: 126146 usecs
    Avg absolute fw delay variation: 1618 usecs
    Avg absolute rv delay variation: 1619 usecs
```

**Meaning** The packet loss and delay measurement metrics for LSP are displayed.

**Related Documentation**

- [performance-monitoring \(Protocols MPLS\) on page 1493](#)
- [show performance-monitoring mpls lsp on page 1814](#)

## MPLS Encapsulated Payload Load-balancing Overview

Routers can load-balance on a per-packet basis in MPLS. Load balancing can be performed on the information in both the IP header and on up to three MPLS labels, providing a more uniform distribution of MPLS traffic to next hops.

Load balancing is used to evenly distribute traffic when the following conditions apply:

- There are multiple equal-cost next hops over different interfaces to the same destination.
- There is a single next hop over an aggregated interface.

By default, when load balancing is used to help distribute traffic, a hash algorithm is used to select a next-hop address to install into the forwarding table. Whenever the set of next hops for a destination changes in any way, the next-hop address is reselected by means of the hash algorithm.

In case of multiple transport layer networks such as Ethernet over MPLS or Ethernet pseudowire, the hash algorithm needs to look beyond the outer header of the payload and into the inner headers to generate an even distribution. To determine the inner encapsulation, the PFE relies on the presence of certain codes or numbers at fixed payload offsets; for example the presence of payload type 0X800 or the presence of protocol number 4 for an IPv4 packet. In Junos OS, you can configure **zero-control-word** option to indicate the start of an Ethernet frame in an MPLS ether-pseudowire payload. On seeing this control word, which is four bytes having a numerical value of all zeros, the hash generator assumes the start of an Ethernet frame at the end of the control word in an MPLS ether-pseudowire packet.



**NOTE:** For DPC I-chip-based cards, configure the **zero-control-word** option at the **[edit forwarding-options hash-key family mpls ether-pseudowire]** hierarchy level; and for MPC cards, configure the **zero-control-word** option at the **[edit forwarding-options enhanced-hash-key family mpls ether-pseudowire]** hierarchy level.

### Related Documentation

- [Configuring MPLS Encapsulated Payload for Load Balancing on page 486](#)
- [\*enhanced-hash-key\*](#)
- [ether-pseudowire on page 1427](#)
- [\*hash-key\*](#)
- [family mpls on page 1435](#)

## Configuring MPLS Encapsulated Payload for Load Balancing

---

By default, when load balancing is used to help distribute traffic, a hash algorithm is used to select a next-hop address to install into the forwarding table. Whenever the set of next hops for a destination changes in any way, the next-hop address is reselected by means of the hash algorithm. Configure the **zero-control-word** option to indicate the start of an Ethernet frame in an MPLS ether-pseudowire payload. On seeing this control word, four bytes having a numerical value of all zeros, the hash generator assumes the start of the Ethernet frame at the end of the control word in an MPLS ether-pseudowire packet.

Before you begin to configure MPLS encapsulated payload for load balancing, configure routing and signaling protocols.

To configure MPLS encapsulated payload for load balancing:

1. Configure the **zero-control-word** option to indicate the start of an Ethernet frame in an MPLS ether-pseudowire payload.
  - For DPC I-chip-based cards, configure the **zero-control-word** option at the **[edit forwarding-options hash-key family mpls ether-pseudowire]** hierarchy level.  

```
[edit forwarding-options hash-key family mpls ether-pseudowire]  
user@host# set zero-control-word
```
  - For MPC cards, configure the **zero-control-word** option at the **[edit forwarding-options enhanced-hash-key family mpls ether-pseudowire]** hierarchy level.  

```
[edit forwarding-options hanced-hash-key family mpls ether-pseudowire]  
user@host# set zero-control-word
```

### Related Documentation

- [MPLS Encapsulated Payload Load-balancing Overview on page 485](#)
- [\*enhanced-hash-key\*](#)
- [ether-pseudowire on page 1427](#)
- [\*hash-key\*](#)
- [family mpls on page 1435](#)

## PART 3

# Configuring RSVP

- [RSVP Overview on page 489](#)
- [Configuring RSVP on page 501](#)
- [Configuring RSVP Link Protection and Node Protection to Protect from Traffic Failures on page 529](#)
- [Configuring RSVP Graceful Restart for High Availability on page 545](#)
- [Configuring RSVP LSP Tunnels on page 551](#)



## CHAPTER 9

# RSVP Overview

- [RSVP Overview on page 489](#)
- [Supported RSVP Standards on page 490](#)
- [Junos OS RSVP Protocol Implementation on page 491](#)
- [RSVP Operation Overview on page 492](#)
- [RSVP Authentication on page 492](#)
- [RSVP and IGP Hello Packets and Timers on page 492](#)
- [RSVP Message Types on page 493](#)
- [Understanding RSVP Automatic Mesh on page 493](#)
- [Path Messages on page 495](#)
- [Resv Messages on page 495](#)
- [PathTear Messages on page 495](#)
- [ResvTear Messages on page 495](#)
- [PathErr Messages on page 496](#)
- [ResvErr Messages on page 496](#)
- [ResvConfirm Messages on page 496](#)
- [RSVP Reservation Styles on page 496](#)
- [RSVP Refresh Reduction on page 497](#)
- [MTU Signaling in RSVP on page 498](#)
- [How the Correct MTU Is Signaled in RSVP on page 499](#)
- [Determining an Outgoing MTU Value on page 500](#)
- [MTU Signaling in RSVP Limitations on page 500](#)

## RSVP Overview

---

RSVP is a resource reservation setup protocol that is used by both network hosts and routers. Hosts use RSVP to request a specific class of service (CoS) from the network for particular application flows. Routers use RSVP to deliver CoS requests to all routers along the data path. RSVP also can maintain and refresh states for a requested CoS application flow.

RSVP treats an application flow as a simplex connection. That is, the CoS request travels only in one direction—from the sender to the receiver. RSVP is a transport layer protocol that uses IP as its network layer. However, RSVP does not transport application flows. Rather, it is more of an Internet control protocol, similar to the Internet Control Message Protocol (ICMP) and Internet Group Management Protocol (IGMP). RSVP runs as a separate software process in the Junos OS and is not in the packet forwarding path.

RSVP is not a routing protocol, but rather is designed to operate with current and future unicast and multicast routing protocols. The routing protocols are responsible for choosing the routes to use to forward packets, and RSVP consults local routing tables to obtain routes. RSVP only ensures the CoS of packets traveling along a data path.

The receiver in an application flow requests the preferred CoS from the sender. To do this, the receiver issues an RSVP CoS request on behalf of the local application. The request propagates to all routers in reverse direction of the data paths toward the sender. In this process, RSVP requests might be merged, resulting in a protocol that scales well when there are a large number of receivers.

Because the number of receivers in an application flow is likely to change and the flow of delivery paths might change during the life of an application flow, RSVP takes a soft-state approach in its design, creating and removing the protocol states in routers and hosts incrementally over time. RSVP sends periodic refresh messages to maintain its state and to recover from occasional lost messages. In the absence of refresh messages, RSVP states automatically time out and are deleted.

---

## Supported RSVP Standards

Junos OS substantially supports the following RFCs and Internet drafts, which define standards for RSVP.

- RFC 2205, *Resource ReSerVation Protocol (RSVP)—Version 1 Functional Specification*
- RFC 2210, *The Use of RSVP with IETF Integrated Services*
- RFC 2211, *Specification of the Controlled-Load Network Element Service*
- RFC 2212, *Specification of Guaranteed Quality of Service*
- RFC 2215, *General Characterization Parameters for Integrated Service Network Elements*
- RFC 2745, *RSVP Diagnostic Messages*
- RFC 2747, *RSVP Cryptographic Authentication* (updated by RFC 3097)
- RFC 2961, *RSVP Refresh Overhead Reduction Extensions*
- RFC 3097, *RSVP Cryptographic Authentication—Updated Message Type Value*
- RFC 3209, *RSVP-TE: Extensions to RSVP for LSP Tunnels*

The Null Service Object for maximum transmission unit (MTU) signaling in RSVP is not supported.

- RFC 3473, *Generalized Multi-Protocol Label Switching (GMPLS) Signaling Resource ReserVation Protocol-Traffic Engineering (RSVP-TE) Extensions*



Only Section 9, “Fault Handling,” is supported.

- RFC 3477, *Signalling Unnumbered Links in Resource ReSerVation Protocol - Traffic Engineering (RSVP-TE)*
- RFC 4090, *Fast Reroute Extensions to RSVP-TE for LSP Tunnels*
- RFC 4203, *OSPF Extensions in Support of Generalized Multi-Protocol Label Switching (GMPLS)*  
(OSPF extensions can carry traffic engineering information over unnumbered links.)
- RFC 4558, *Node-ID Based Resource Reservation Protocol (RSVP) Hello: A Clarification Statement*
- RFC 4561, *Definition of a Record Route Object (RRO) Node-Id Sub-Object*  
The RRO node ID subobject is for use in inter-AS link and node protection configurations.
- RFC 4875, *Extensions to RSVP-TE for Point-to-Multipoint TE LSPs*

The following RFCs do not define standards, but provide information about RSVP and related technologies. The IETF classifies them variously as “Experimental” or “Informational.”

- RFC 2209, *Resource ReSerVation Protocol (RSVP)—Version 1 Message Processing Rules*
- RFC 2216, *Network Element Service Specification Template*
- RFC 4125, *Maximum Allocation Bandwidth Constraints Model for Diffserv-aware MPLS Traffic Engineering*
- RFC 4127, *Russian Dolls Bandwidth Constraints Model for Diffserv-aware MPLS Traffic Engineering*

#### Related Documentation

- [Supported GMPLS Standards on page 769](#)
- [Supported LDP Standards on page 578](#)
- [Supported MPLS Standards on page 20](#)
- [Accessing Standards Documents on the Internet](#)

## Junos OS RSVP Protocol Implementation

The Junos implementation of RSVP supports RSVP version 1. The software includes support for all mandatory objects and RSVP message types, and supports message integrity and node authentications through the Integrity object.

The primary purpose of the Junos RSVP software is to support dynamic signaling within MPLS label-switched paths (LSPs). Supporting resource reservations over the Internet is only a secondary purpose of the Junos OS implementation. Since supporting resource reservations is secondary, the Junos RSVP software does not support the following features:

- IP multicasting sessions.

- Traffic control. The software cannot make resource reservations for real-time video or audio sessions.

With regard to the protocol mechanism, packet processing, and RSVP objects supported, the Junos OS implementation of the software is interoperable with other RSVP implementations.

## RSVP Operation Overview

---

RSVP creates independent sessions to handle each data flow. A session is identified by a combination of the destination address, an optional destination port, and a protocol. Within a session, there can be one or more senders. Each sender is identified by a combination of its source address and source port. An out-of-band mechanism, such as a session announcement protocol or human communication, is used to communicate the session identifier to all senders and receivers.

A typical RSVP session involves the following sequence of events:

1. A potential sender starts sending RSVP path messages to the session address.
2. A receiver, wanting to join the session, registers itself if necessary. For example, a receiver in a multicast application would register itself with IGMP.
3. The receiver receives the path messages.
4. The receiver sends appropriate Resv messages toward the sender. These messages carry a flow descriptor, which is used by routers along the path to make reservations in their link-layer media.
5. The sender receives the Resv message and then starts sending application data.

This sequence of events is not necessarily strictly synchronized. For example, receivers can register themselves before receiving path messages from the sender, and application data can flow before the sender receives Resv messages. Application data that is delivered before the actual reservation contained in the Resv message typically is treated as best-effort, non-real-time traffic with no CoS guarantee.

## RSVP Authentication

---

The Junos OS supports both the RSVP authentication style described in RFC 2747 (allowing for multivendor compatibility) and the RSVP authentication style described in Internet draft draft-ietf-rsvp-md5-03.txt. The Junos OS uses the authentication style described in Internet draft draft-ietf-rsvp-md5-08.txt by default. If the router receives an RFC 2747-style RSVP authentication from a neighbor, it switches to this style of authentication for that neighbor. The RSVP authentication style for each neighboring router is determined separately.

## RSVP and IGP Hello Packets and Timers

---

RSVP monitors the status of the interior gateway protocol (IGP) (IS-IS or OSPF) neighbors and relies on the IGP protocols to detect when a node fails. If an IGP protocol declares a neighbor down (because hello packets are no longer being received), RSVP also brings

down that neighbor. However, the IGP protocols and RSVP still act independently when bringing a neighbor up.

In the Junos OS, RSVP typically relies on IGP hello packet detection to check for node failures. RSVP sessions are kept up even if RSVP hello packets are no longer being received, so long as the router continues to receive IGP hello packets. RSVP sessions are maintained until either the router stops receiving IGP hello packets or the RSVP Path and Resv messages time out. Configuring a short time for the IS-IS or OSPF hello timers allows these protocols to detect node failures quickly.

RSVP hellos can be relied on when the IGP does not recognize a particular neighbor (for example, if IGP is not enabled on the interface) or if the IGP is RIP (not IS-IS or OSPF). Also, the equipment of other vendors might be configured to monitor RSVP sessions based on RSVP hello packets. This equipment might also take an RSVP session down due to a loss of RSVP hello packets.

We do not recommend configuring a short RSVP hello timer. If quick discovery of a failed neighbor is needed, configure short IGP (OSPF or IS-IS) hello timers.

OSPF and IS-IS have infrastructure to manage rapid hello message sending and receiving reliably, even if the routing protocols or some other process are straining the processing capability of the router. Under the same circumstances, RSVP hellos might time out prematurely even though the neighbor is functioning normally.

---

## RSVP Message Types

RSVP uses the following types of messages to establish and remove paths for data flows, establish and remove reservation information, confirm the establishment of reservations, and report errors:

- [Path Messages on page 495](#)
- [Resv Messages on page 495](#)
- [PathTear Messages on page 495](#)
- [ResvTear Messages on page 495](#)
- [PathErr Messages on page 496](#)
- [ResvErr Messages on page 496](#)
- [ResvConfirm Messages on page 496](#)

---

## Understanding RSVP Automatic Mesh

When adding sites to BGP and MPLS VPNs that use RSVP signaling, more configuration is needed to add provider edge (PE) routers than is needed to add customer edge (CE) devices. RSVP automatic mesh helps to reduce this configuration burden.

Service providers often use BGP and MPLS VPNs to efficiently scale the network while delivering revenue-generating services. In these environments, BGP is used to distribute the VPN routing information across the service provider's network, while MPLS is used

to forward that VPN traffic from one VPN site to another. BGP and MPLS VPNs are based on a peer model. To add a new CE device (site) to an existing VPN, you need to configure the CE router at the new site and the PE router connected to the CE router. You do not have to modify the configuration of all of the other PE routers participating in the VPN. The other PE routers automatically learn about the routes associated with the new site, a process called automatic discovery (AD).

The requirements are a bit different if you need to add a new PE router to the network. A BGP and MPLS VPN requires that the BGP session be fully meshed and that there also be a full mesh of PE router-to-PE router MPLS label-switched paths (LSPs) between all of the PE routers in the network. When you add a new PE router to the network, all of the existing PE routers must be reconfigured to peer with the new PE router. Much of the configuration effort can be reduced if you configure BGP route reflectors (mitigating the full mesh requirement for BGP) and if you configure (LDP) as the signaling protocol for MPLS.

However, if you need to add a new PE router to a network configured with a full mesh of RSVP-signaled LSPs, you must reconfigure each of the PE routers to have a peer relationship with the new PE router. You can configure RSVP automatic mesh to address this particular operational scenario. When you enable RSVP automatic mesh, RSVP LSPs are dynamically created between a new PE router and the existing PE routers, eliminating the need to reconfigure all of the PE routers manually. For dynamic LSP creation to function properly, BGP must be configured to exchange routes between all of the participating PE routers. If two BGP peers do not exchange routes, it is not possible to configure a dynamic LSP between them. The local router's inet.0 routing table must include a labeled route to each potential IBGP next-hop (future potential PE routers or LSP destinations).

RSVP includes numerous capabilities that are not available in LDP, including fast reroute, end-point control, and link management. RSVP automatic mesh helps to reduce the operation and maintenance requirements for RSVP, making it possible to deploy RSVP in larger and more complicated networks.

Every PE router can reach every other PE router in the network because this information is distributed by the IGP. A PE router can set up a point-to-point RSVP LSP to any other PE router in the network as long as it knows that such an LSP is required. To build a full mesh of LSPs between the PE routers requires that each PE router know which of the other PE routers make up the full mesh.



**NOTE:** In Junos OS, RSVP automatic mesh is configured using the `rsvp-te` configuration statement at the `[edit routing-options dynamic-tunnels dynamic-tunnel-name]` hierarchy level. The `rsvp-te` configuration statement is also available for use in routing instances as a provider-tunnel option. When implemented as a provider-tunnel option, `rsvp-te` is used to configure the RSVP point-to-multipoint LSPs for multiprotocol BGP multicast VPNs, not to configure RSVP automatic mesh.

---

**Related Documentation**

- [Configuring RSVP Automatic Mesh on page 515](#)
- [Example: Configuring RSVP Automatic Mesh on page 509](#)
- [label-switched-path-template \(Multicast\) on page 1559](#)

## Path Messages

Each sender host transmits path messages downstream along the routes provided by the unicast and multicast routing protocols. Path messages follow the exact paths of application data, creating path states in the routers along the way, thus enabling routers to learn the previous-hop and next-hop node for the session. Path messages are sent periodically to refresh path states.

The refresh interval is controlled by a variable called the *refresh-time*, which is the periodical refresh timer expressed in seconds. A path state times out if a router does not receive a specified number of consecutive path messages. This number is specified by a variable called *keep-multiplier*. Path states are kept for  $(\text{keep-multiplier} + 0.5) \times 1.5 \times \text{refresh-time}$  seconds.

## Resv Messages

Each receiver host sends reservation request (Resv) messages upstream toward senders and sender applications. Resv messages must follow exactly the reverse path of path messages. Resv messages create and maintain a reservation state in each router along the way.

Resv messages are sent periodically to refresh reservation states. The refresh interval is controlled by the same refresh time variable, and reservation states are kept for  $(\text{keep-multiplier} + 0.5) \times 1.5 \times \text{refresh-time}$  seconds.

## PathTear Messages

PathTear messages remove (tear down) path states as well as dependent reservation states in any routers along a path. PathTear messages follow the same path as path messages. A PathTear typically is initiated by a sender application or by a router when its path state times out.

PathTear messages are not required, but they enhance network performance because they release network resources quickly. If PathTear messages are lost or not generated, path states eventually time out when they are not refreshed, and the resources associated with the path are released.

## ResvTear Messages

ResvTear messages remove reservation states along a path. These messages travel upstream toward senders of the session. In a sense, ResvTear messages are the reverse of Resv messages. ResvTear messages typically are initiated by a receiver application or by a router when its reservation state times out.

ResvTear messages are not required, but they enhance network performance because they release network resources quickly. If ResvTear messages are lost or not generated, reservation states eventually time out when they are not refreshed, and the resources associated with the reservation are released.

## PathErr Messages

---

When path errors occur (usually because of parameter problems in a path message), the router sends a unicast PathErr message to the sender that issued the path message. PathErr messages are advisory; these messages do not alter any path state along the way.

## ResvErr Messages

---

When a reservation request fails, a ResvErr error message is delivered to all the receivers involved. ResvErr messages are advisory; these messages do not alter any reservation state along the way.

## ResvConfirm Messages

---

Receivers can request confirmation of a reservation request, and this confirmation is sent with a ResvConfirm message. Because of the complex RSVP flow-merging rules, a confirmation message does not necessarily provide end-to-end confirmation of the entire path. Therefore, ResvConfirm messages are an indication, not a guarantee, of potential success.

Juniper Networks routers never request confirmation using the ResvConfirm message; however, a Juniper Networks router can send a ResvConfirm message if it receives a request from another vendor's equipment.

## RSVP Reservation Styles

---

A reservation request includes options for specifying the reservation style. The reservation styles define how reservations for different senders within the same session are treated and how senders are selected.

Two options specify how reservations for different senders within the same session are treated:

- Distinct reservation—Each receiver establishes its own reservation with each upstream sender.
- Shared reservation—All receivers make a single reservation that is shared among many senders.

Two options specify how senders are selected:

- Explicit sender—List all selected senders.
- Wildcard sender—Select all senders, which then participate in the session.

The following reservation styles, formed by a combination of these four options, currently are defined:

- **Fixed filter (FF)**—This reservation style consists of distinct reservations among explicit senders. Examples of applications that use fixed-filter-style reservations are video applications and unicast applications, which both require flows that have a separate reservation for each sender. The fixed filter reservation style is enabled on RSVP LSPs by default.
- **Wildcard filter (WF)**—This reservation style consists of shared reservations among wildcard senders. This type of reservation reserves bandwidth for any and all senders, and propagates upstream toward all senders, automatically extending to new senders as they appear. A sample application for wildcard filter reservations is an audio application in which each sender transmits a distinct data stream. Typically, only a few senders are transmitting at any one time. Such a flow does not require a separate reservation for each sender; a single reservation is sufficient.
- **Shared explicit (SE)**—This reservation style consists of shared reservations among explicit senders. This type of reservation reserves bandwidth for a limited group of senders. A sample application is an audio application similar to that described for wildcard filter reservations.

## RSVP Refresh Reduction

RSVP relies on soft-state to maintain the path and reservation states on each router. If the corresponding refresh messages are not sent periodically, the states eventually time out and reservations are deleted. RSVP also sends its control messages as IP datagrams with no reliability guarantee. It relies on periodic refresh messages to handle the occasional loss of Path or Resv messages.

The RSVP refresh reduction extensions, based on RFC 2961, addresses the following problems that result from relying on periodic refresh messages to handle message loss:

- **Scalability**—The scaling problem arises from the periodic transmission and processing overhead of refresh messages, which increases as the number of RSVP sessions increases.
- **Reliability and latency**—The reliability and latency problem stems from the loss of nonrefresh RSVP messages or one-time RSVP messages such as PathTear or PathErr. The time to recover from such a loss is usually tied to refresh interval and the keepalive timer.

The RSVP refresh reduction capability is advertised by enabling the refresh reduction (RR) capable bit in the RSVP common header. This bit is only significant between RSVP neighbors.

RSVP refresh reduction includes the following features:

- RSVP message bundling using the bundle message
- RSVP Message ID to reduce message processing overhead

- Reliable delivery of RSVP messages using Message ID, Message Ack, and Message Nack
- Summary refresh to reduce the amount of information transmitted every refresh interval

The RSVP refresh reduction specification (RFC 2961) allows you to enable some or all of the above capabilities on a router. It also describes various procedures that a router can use to detect the refresh reduction capabilities of its neighbor.

The Junos OS supports all of the refresh reduction extensions, some of which can be selectively enabled or disabled. The Junos OS supports Message ID and therefore can perform reliable message delivery only for Path and Resv messages.

For information about how to configure RSVP refresh reduction, see [“Configuring RSVP Refresh Reduction” on page 503](#).

---

## MTU Signaling in RSVP

The maximum transmission unit (MTU) is the largest size packet or frame, in bytes, that can be sent in a network. An MTU that is too large might cause retransmissions. Too small an MTU might cause the router to send and handle relatively more header overhead and acknowledgments. There are default values for MTUs associated with various protocols. You can also explicitly configure an MTU on an interface.

When an LSP is created across a set of links with different MTU sizes, the ingress router does not know what the smallest MTU is on the LSP path. By default, the MTU for an LSP is 1,500 bytes.

If this MTU is larger than the MTU of one of the intermediate links, traffic might be dropped, because MPLS packets cannot be fragmented. Also, the ingress router is not aware of this type of traffic loss, because the control plane for the LSP would still function normally.

To prevent this type of packet loss in MPLS LSPs, you can configure MTU signaling in RSVP. This feature is described in RFC 3209. Juniper Networks supports the Integrated Services object for MTU signaling in RSVP. The Integrated Services object is described in RFCs 2210 and 2215. MTU signaling in RSVP is disabled by default.

To avoid packet loss due to MTU mismatches, the ingress router needs to do the following:

- Signal the MTU on the RSVP LSP—To prevent packet loss from an MTU mismatch, the ingress router needs to know what the smallest MTU value is along the path taken by the LSP. Once this MTU value is obtained, the ingress router can assign it to the LSP.
- Fragment packets—Using the assigned MTU value, packets that exceed the size of the MTU can be fragmented into smaller packets on the ingress router before they are encapsulated in MPLS and sent over the RSVP-signaled LSP.

Once both MTU signaling and packet fragmentation have been enabled on an ingress router, any route resolving to an RSVP LSP on this router uses the signaled MTU value. For information about how to configure this feature, see [“Configuring MTU Signaling in RSVP” on page 518](#).



The following sections describe how MTU signaling in RSVP works:

- [How the Correct MTU Is Signaled in RSVP on page 499](#)
- [Determining an Outgoing MTU Value on page 500](#)
- [MTU Signaling in RSVP Limitations on page 500](#)

## How the Correct MTU Is Signaled in RSVP

How the correct MTU is signaled in RSVP varies depending on whether the network devices (for example, routers) explicitly support MTU signaling in RSVP or not.

If the network devices support MTU signaling in RSVP, the following occur when you enable MTU signaling:

- The MTU is signaled from the ingress router to the egress router by means of the Adspec object. Before forwarding this object, the ingress router enters the MTU value associated with the interface over which the path message is sent. At each hop in the path, the MTU value in the Adspec object is updated to the minimum of the received value and the value of the outgoing interface.
- The ingress router uses the traffic specification (Tspec) object to specify the parameters for the traffic it is going to send. The MTU value signaled for the Tspec object at the ingress router is the maximum MTU value (9192 bytes for M Series and T Series routers, 9500 bytes for PTX Series Packet Transport Routers). This value does not change en route to the egress router.
- When the Adspec object arrives at the egress router, the MTU value is correct for the path (meaning it is the smallest MTU value discovered). The egress router compares the MTU value in the Adspec object to the MTU value in the Tspec object. It signals the smaller MTU using the Flowspec object in the Resv message.
- When the Resv object arrives at the ingress router, the MTU value in this object is used as the MTU for the next hops that use the LSP.

In a network where there are devices that do not support MTU signaling in RSVP, you might have the following behaviors:

- If the egress router does not support MTU signaling in RSVP, the MTU is set to 1,500 bytes by default.
- A Juniper Networks transit router that does not support MTU signaling in RSVP sets an MTU value of 1,500 bytes in the Adspec object by default.

### Related Documentation

- [Media MTU Overview](#)
- [Configuring the Media MTU](#)

## Determining an Outgoing MTU Value

---

The outgoing MTU value is the smaller of the values received in the Adspec object compared to the MTU value of the outgoing interface. The MTU value of the outgoing interface is determined as follows:

- If you configure an MTU value under the **[family mpls]** hierarchy level, this value is signaled.
- If you do not configure an MTU, the **inet** MTU is signaled.

## MTU Signaling in RSVP Limitations

---

The following are limitations to MTU signaling in RSVP:

- Changes in the MTU value might cause a temporary loss of traffic in the following situations:
  - For link protection and node protection, the MTU of the bypass is only signaled at the time the bypass becomes active. During the time it takes for the new path MTU to be propagated, packet loss might occur because of an MTU mismatch.
  - For fast reroute, the MTU of the path is updated only after the detour becomes active, causing a delay in an update to the MTU at the ingress router. Until the MTU is updated, packet loss might occur if there is an MTU mismatch.

In both cases, only packets that are larger than the detour or bypass MTU are lost.

- When an MTU is updated, it triggers a change in the next hop. Any change in the next hop causes the route statistics to be lost.
- The minimum MTU supported for MTU signaling in RSVP is 1,488 bytes. This value prevents a false or incorrectly configured value from being used.
- For single-hop LSPs, the MTU value displayed by the **show** commands is the RSVP-signaled value. However, this MPLS value is ignored and the correct IP value is used.

## CHAPTER 10

# Configuring RSVP

- [Minimum RSVP Configuration on page 501](#)
- [Configuring RSVP and MPLS on page 502](#)
- [Configuring RSVP Interfaces on page 503](#)
- [Configuring RSVP Node-ID Hellos on page 508](#)
- [Example: Configuring RSVP Automatic Mesh on page 509](#)
- [Configuring Hello Acknowledgments for Nonsession RSVP Neighbors on page 512](#)
- [Switching LSPs Away from a Network Node on page 513](#)
- [Configuring RSVP Setup Protection on page 514](#)
- [Configuring Load Balancing Across RSVP LSPs on page 514](#)
- [Configuring RSVP Automatic Mesh on page 515](#)
- [Configuring Timers for RSVP Refresh Messages on page 516](#)
- [Preempting RSVP Sessions on page 517](#)
- [Configuring MTU Signaling in RSVP on page 518](#)
- [Configuring Ultimate-Hop Popping for LSPs on page 519](#)
- [Configuring RSVP to Pop the Label on the Ultimate-Hop Router on page 523](#)
- [Enabling Ultimate-Hop Popping on Point-to-Multipoint LSPs on page 523](#)
- [Tracing RSVP Protocol Traffic on page 524](#)
- `show rsvp route-session-id`

### Minimum RSVP Configuration

---

To enable RSVP on a single interface, include the **rsvp** statement and specify the interface using the **interface** statement. This is the minimum RSVP configuration. All other RSVP configuration statements are optional.

```
rsvp {  
  interface interface-name;  
}
```

You can include these statements at the following hierarchy levels:

- **[edit protocols]**
- **[edit logical-systems *logical-system-name* protocols]**

To enable RSVP on all interfaces, substitute **all** for the *interface-name* variable.

If you have configured interface properties on a group of interfaces and want to disable RSVP on one of the interfaces, include the **disable** statement:

```
interface interface-name {  
  disable;  
}
```

You can include this statement at the following hierarchy levels:

- [edit protocols rsvp interface interface-name ]
- [edit logical-systems logical-system-name protocols rsvp interface interface-name ]

---

## Configuring RSVP and MPLS

The primary purpose of the Junos RSVP software is to support dynamic signaling within label-switched paths (LSPs). When you enable both MPLS and RSVP on a router, MPLS becomes a client of RSVP. No additional configuration is required to bind MPLS and RSVP.

You can configure MPLS to set up signaled paths by using the **label-switched-path** statement at the [edit protocols mpls] hierarchy level. Each LSP translates into a request for RSVP to initiate an RSVP session. This request is passed through the internal interface between label switching and RSVP. After examining the request information, checking RSVP states, and checking the local routing tables, RSVP initiates one session for each LSP. The session is sourced from the local router and is destined for the target of the LSP.

When an RSVP session is successfully created, the LSP is set up along the paths created by the RSVP session. If the RSVP session is unsuccessful, RSVP notifies MPLS of its status. It is up to MPLS to initiate backup paths or continue retrying the initial path.

To pass label-switching signaling information, RSVP supports four additional objects: Label Request object, Label object, Explicit Route object, and Record Route object. For an LSP to be set up successfully, all routers along the path must support MPLS, RSVP, and the four objects. Of the four objects, the Record Route object is not mandatory.

To configure MPLS and make it a client of RSVP, do the following:

- Enable MPLS on all routers that will participate in the label switching (this is, on all routers that might be part of a label-switching path).
- Enable RSVP on all routers and on all router interfaces that form the LSP.
- Configure the routers at the beginning of the LSP.

### Example: Configuring RSVP and MPLS

The following shows a sample configuration for a router at the beginning of an LSP:

```
[edit]  
protocols {
```

```

mpls {
  label-switched-path sf-to-london {
    to 192.168.1.4;
  }
}
rsvp {
  interface so-0/0/0;
}
}

```

The following shows a sample configuration for all the other routers that form the LSP:

```

[edit]
protocols {
  mpls {
    interface so-0/0/0;
  }
  rsvp {
    interface so-0/0/0;
  }
}

```

## Configuring RSVP Interfaces

The following sections describe how to configure RSVP interfaces:

- [Configuring RSVP Refresh Reduction on page 503](#)
- [Configuring the RSVP Hello Interval on page 505](#)
- [Configuring RSVP Authentication on page 506](#)
- [Configuring the Bandwidth Subscription for Class Types on page 506](#)
- [Configuring the RSVP Update Threshold on an Interface on page 506](#)
- [Configuring RSVP for Unnumbered Interfaces on page 507](#)

## Configuring RSVP Refresh Reduction

You can configure RSVP refresh reduction on each interface by including the following statements in the interface configuration:

- **aggregate** and **reliable**—Enable all RSVP refresh reduction features: RSVP message bundling, RSVP message ID, reliable message delivery, and summary refresh.

In order to have refresh reduction and reliable delivery, you must include the **aggregate** and **reliable** statements.

- **no-aggregate**—Disable RSVP message bundling and summary refresh.
- **no-reliable**—Disable RSVP message ID, reliable message delivery, and summary refresh.

For more information on RSVP refresh reduction, see [“RSVP Refresh Reduction” on page 497](#).

If the **no-reliable** statement is configured on the router (reliable message delivery is disabled), the router accepts RSVP messages that include the Message ID object but

ignores the Message ID object and continues performing standard message processing. No error is generated in this case, and RSVP operates normally.

However, not all combinations between two neighbors with different refresh reduction capabilities function correctly. For example, a router is configured with either the **aggregate** statement and **no-reliable** statement or with the **reliable** and **no-aggregate** statements. If an RSVP neighbor sends a Summary Refresh object to this router, no error is generated, but the Summary Refresh object cannot be processed. Consequently, RSVP states can time out on this router if the neighbor is relying only on Summary Refresh to refresh those RSVP states.

We recommend, unless there are specific requirements, that you configure RSVP refresh reduction in a similar manner on each RSVP neighbor.

To enable all RSVP refresh reduction features on an interface, include the **aggregate** statement:

```
aggregate;
```

You can include this statement at the following hierarchy levels:

- [edit protocols rsvp **interface** *interface-name*]
- [edit logical-systems *logical-system-name* protocols rsvp **interface** *interface-name*]

To disable RSVP message bundling and summary refresh, include the **no-aggregate** statement:

```
no-aggregate;
```

You can include this statement at the following hierarchy levels:

- [edit protocols rsvp **interface** *interface-name*]
- [edit logical-systems *logical-system-name* protocols rsvp **interface** *interface-name*]

To enable RSVP message ID and reliable message delivery on an interface, include the **reliable** statement:

```
reliable;
```

You can include this statement at the following hierarchy levels:

- [edit protocols rsvp **interface** *interface-name*]
- [edit logical-systems *logical-system-name* protocols rsvp **interface** *interface-name*]

To disable RSVP message ID, reliable message delivery, and summary refresh, include the **no-reliable** statement:

```
no-reliable;
```

You can include this statement at the following hierarchy levels:

- [edit protocols rsvp **interface** *interface-name*]
- [edit logical-systems *logical-system-name* protocols rsvp **interface** *interface-name*]

### Determining the Refresh Reduction Capability of RSVP Neighbors

To determine the RSVP refresh reduction capability of an RSVP neighbor, you need the following information:

- The RR bit advertised by the neighbor
- The local configuration of RSVP refresh reduction
- The actual RSVP messages received from the neighbor

To obtain this information, you can issue a **show rsvp neighbor detail** command. Sample output follows:

```
user@host> show rsvp neighbor detail
RSVP neighbor: 6 learned
  Address: 192.168.224.178 via: fxp1.0 status: Up
    Last changed time: 10:06, Idle: 5 sec, Up cnt: 1, Down cnt: 0
    Message received: 36
    Hello: sent 69, received: 69, interval: 9 sec
    Remote instance: 0x60b8feba, Local instance: 0x74bc7a8d
    Refresh reduction: not operational

  Address: 192.168.224.186 via: fxp2.0 status: Down
    Last changed time: 10:17, Idle: 40 sec, Up cnt: 0, Down cnt: 0
    Message received: 6
    Hello: sent 20, received: 0, interval: 9 sec
    Remote instance: 0x0, Local instance: 0x2ae1b339
    Refresh reduction: incomplete
    Remote end: disabled, Ack-extension: enabled

  Address: 192.168.224.188 via: fxp2.0 status: Up
    Last changed time: 4:15, Idle: 0 sec, Up cnt: 1, Down cnt: 0
    Message received: 55
    Hello: sent 47, received: 31, interval: 9 sec
    Remote instance: 0x6436a35b, Local instance: 0x663849f0
    Refresh reduction: operational
    Remote end: enabled, Ack-extension: enabled
```

For more information on the **show rsvp neighbor detail** command.

### Configuring the RSVP Hello Interval

RSVP monitors the status of the interior gateway protocol (IGP) (IS-IS or OSPF) neighbors and relies on the IGP protocols to detect when a node fails. If an IGP protocol declares a neighbor down (because hello packets are no longer being received), RSVP also brings down that neighbor. However, the IGP protocols and RSVP still act independently when bringing a neighbor up.

For Juniper Networks routers, configuring a shorter or longer RSVP hello interval has no impact on whether or not an RSVP session is brought down. RSVP sessions are kept up even if RSVP hello packets are no longer being received. RSVP sessions are maintained until either the router stops receiving IGP hello packets or the RSVP Path and Resv messages time out.

However, the RSVP hello interval might impact when another vendor's equipment brings down an RSVP session. For example, a neighboring non-Juniper Networks router might be configured to monitor RSVP hello packets.

To modify how often RSVP sends hello packets, include the **hello-interval** statement:

```
hello-interval seconds;
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section.

## Configuring RSVP Authentication

All RSVP protocol exchanges can be authenticated to guarantee that only trusted neighbors participate in setting up reservations. By default, RSVP authentication is disabled.

RSVP authentication uses a Hashed Message Authentication Code (HMAC)-MD5 message-based digest. This scheme produces a message digest based on a secret authentication key and the message contents. (The message contents also include a sequence number.) The computed digest is transmitted with RSVP messages. Once you have configured authentication, all received and transmitted RSVP messages with all neighbors are authenticated on this interface.

MD5 authentication provides protection against forgery and message modification. It also can prevent replay attacks. However, it does not provide confidentiality, because all messages are sent in clear text.

By default, authentication is disabled. To enable authentication, configure a key on each interface by including the **authentication-key** statement:

```
authentication-key key;
```

You can include this statement at the following hierarchy levels:

- [edit protocols **rsvp** **interface** *interface-name*]
- [edit logical-systems *logical-system-name* protocols **rsvp** **interface** *interface-name*]

## Configuring the Bandwidth Subscription for Class Types

By default, RSVP allows 100 percent of the bandwidth for a class type to be used for RSVP reservations. When you oversubscribe a class type for a multiclass LSP, the aggregate demand of all RSVP sessions is allowed to exceed the actual capacity of the class type.

For detailed instructions on how to configure the bandwidth subscription for class types, see [“Configuring the Bandwidth Subscription Percentage for LSPs” on page 351](#).

## Configuring the RSVP Update Threshold on an Interface

The interior gateway protocols (IGPs) maintain the traffic engineering database, but the current available bandwidth on the traffic engineering database links originates from RSVP. When a link's bandwidth changes, RSVP informs the IGPs, which can then update the traffic engineering database and forward the new bandwidth information to all



network nodes. The network nodes then know how much bandwidth is available on the traffic engineering database link (local or remote), and CSPF can correctly compute the paths.

However, IGP updates can consume excessive system resources. Depending on the number of nodes in a network, it might not be desirable to perform an IGP update for small changes in bandwidth. By configuring the **update-threshold** statement at the **[edit protocols rsvp]** hierarchy level, you can adjust the threshold at which a change in the reserved bandwidth triggers an IGP update.

You can configure a value of from 1 percent through 20 percent (the default is 10 percent) for when to trigger an IGP update. If the change in the reserved bandwidth is greater than or equal to the configured threshold percentage of the static bandwidth on that interface, then an IGP update occurs. For example, if you have configured the **update-threshold** statement to be 15 percent and the router discovers that the reserved bandwidth on a link has changed by 10 percent of the link bandwidth, RSVP does not trigger an IGP update. However, if the reserved bandwidth on a link changes by 20 percent of the link bandwidth, RSVP triggers an IGP update.

To adjust the threshold at which a change in the reserved bandwidth triggers an IGP update, include the **update-threshold** statement:

```
update-threshold percentage;
```

You can include this statement at the following hierarchy levels:

- **[edit protocols rsvp interface interface-name]**
- **[edit logical-systems logical-system-name protocols rsvp interface interface-name]**

Because of the update threshold, it is possible for Constrained Shortest Path First (CSPF) to compute a path using outdated traffic engineering database bandwidth information on a link. If RSVP attempts to establish an LSP over that path, it might find that there is insufficient bandwidth on that link. When this happens, RSVP triggers an IGP traffic engineering database update, flooding the updated bandwidth information on the network. CSPF can then recompute the path by using the updated bandwidth information, and attempt to find a different path, avoiding the congested link. Note that this functionality is the default and does not need any additional configuration.

You can configure the **rsvp-error-hold-time** statement at the **[edit protocols mpls]** hierarchy level or the **[edit logical-systems logical-system-name protocols mpls]** hierarchy level to improve the accuracy of the traffic engineering database (including the accuracy of bandwidth estimates for LSPs) using information provided by PathErr messages. See [“Improving Traffic Engineering Database Accuracy with RSVP PathErr Messages” on page 78](#).

## Configuring RSVP for Unnumbered Interfaces

The Junos OS supports RSVP traffic engineering over unnumbered interfaces. Traffic engineering information about unnumbered links is carried in the IGP traffic engineering extensions for OSPF and IS-IS as described in RFC 4203, *OSPF Extensions in Support of Generalized Multi-Protocol Label Switching (GMPLS)*, and RFC 4205, *Intermediate System to Intermediate System (IS-IS) Extensions in Support of Generalized Multi-Protocol Label*

*Switching (GMPLS)*. Unnumbered links can also be specified in the MPLS traffic engineering signaling as described in RFC 3477, *Signalling Unnumbered Links in Resource ReSerVation Protocol - Traffic Engineering (RSVP-TE)*. This feature allows you avoid having to configure IP addresses for each interface participating in the RSVP-signaled network.

To configure RSVP for unnumbered interfaces, you must configure the router with a router ID using the **router-id** statement specified at the **[edit routing-options]** hierarchy level. The router ID must be available for routing (you can typically use the loopback address). The RSVP control messages for the unnumbered links are sent using the router ID address (rather than a randomly selected address).

To configure link protection and fast reroute on a router with unnumbered interfaces enabled, you must configure at least two addresses. We recommend that you configure a secondary interface on the loopback in addition to configuring the router ID.

---

## Configuring RSVP Node-ID Hellos

You can configure node-ID based RSVP hellos to ensure that Juniper Networks routers can interoperate with the equipment of other vendors. By default, Junos OS uses interface-based RSVP hellos. Node-ID based RSVP hellos are specified in RFC 4558, *Node-ID Based Resource Reservation Protocol (RSVP) Hello: A Clarification Statement*. RSVP node-ID hellos are useful if you have configured BFD to detect problems over RSVP interfaces, allowing you to disable interface hellos for these interfaces. You can also use node-ID hellos for graceful restart procedures.

Node-ID hellos can be enabled globally for all RSVP neighbors. By default, node-ID hello support is disabled. If you have not enabled RSVP node IDs on the router, the Junos OS does not accept any node-ID hello packets.

To enable RSVP node-ID hellos globally on the router, include the **node-hello** statement at the following hierarchy levels:

- **[edit protocols rsvp]**
- **[edit logical-systems *logical-systems-name* protocols rsvp]**

You can also explicitly disable RSVP interface hellos globally. This type of configuration might be necessary in networks where the Juniper Networks router has numerous RSVP connections with equipment from other vendors. However, if you disable RSVP interface hellos globally, you can also configure a hello interval on an RSVP interface using the **hello-interval** statement. This configuration disables RSVP interface hellos globally, but enables RSVP interface hellos on the specified interface (the RSVP interface you configure the **hello-interval** statement on). This configuration might be necessary in a heterogeneous network in which some devices support RSVP node-ID hellos and other devices support RSVP interface hellos.

To disable RSVP interface hellos globally on the router, include the **no-interface-hello** statement at the following hierarchy levels:

- **[edit protocols rsvp]**

- [\[edit logical-systems \*logical-systems-name\* protocols rsvp\]](#)

- Related Documentation
- [no-interface-hello on page 1568](#)
  - [node-hello on page 1565](#)

## Example: Configuring RSVP Automatic Mesh

Service providers often use BGP and MPLS VPNs to efficiently scale the network while delivering revenue-generating services. In these environments, BGP is used to distribute the VPN routing information across the service provider's network, while MPLS is used to forward that VPN traffic from one VPN site to another.

When adding a new PE router that will participate in BGP and MPLS VPNs, all of the previously existing PE routers must be configured to peer with the new PE router for both BGP and MPLS. As each new PE router is added to the service provider's network, the configuration burden soon becomes too much to handle.

The configuration requirements for BGP peering can be reduced with the use of route reflectors. In RSVP signaled MPLS networks, RSVP automatic mesh can minimize the configuration burden for the MPLS portion of the network. Configuring **rsvp-te** on all PE routers allows RSVP to automatically create the needed LSPs when a new PE router is added.

- [Requirements on page 509](#)
- [Overview on page 509](#)
- [Configuration on page 510](#)
- [Verification on page 511](#)

### Requirements

This example uses the following hardware and software components:

- A router running Junos OS Release 10.1 or later.
- A BGP and MPLS VPN using RSVP as the MPLS label-switched path (LSP) signaling protocol.

### Overview


This example shows how to configure RSVP automatic mesh on a PE router using the **rsvp-te** configuration statement. In order for RSVP automatic mesh to function properly, all of the PE routers in the full mesh configuration must have the **rsvp-te** statement configured. This ensures that any new PE routers that are added later will also benefit from the automatic mesh feature, provided that they too are configured with the **rsvp-te** statement.

Given this requirement, this example only shows the configuration on the newly added PE router. It is assumed that RSVP automatic mesh has already been configured on the existing PE routers.

## Topology

In [Figure 43 on page 510](#), there are three existing PE routers, PE1, PE2, and PE3, in the topology. PE4 has been added, and RSVP automatic mesh will be configured. The cloud represents the service provider network, and the network address, 192.0.2.0/24, is shown in the center of the figure.

Figure 43: Service Provider Network with PE Routers

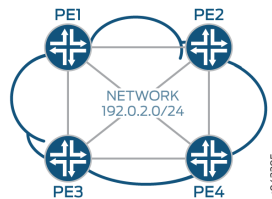

## Configuration

Configuring RSVP automatic mesh involves performing these tasks:

- Enabling the **rsvp-te** configuration statement at the **[edit routing-options dynamic-tunnels *dynamic-tunnel-name*]** hierarchy level.
- Configuring the required **destination-networks** element.

This configuration element specifies the IPv4 prefix range for the destination network. Only tunnels within the specified prefix range can be created.

- Configuring the required **label-switched-path-template** element.

This configuration element takes either **default-template** or the name of a preconfigured LSP template as an argument. The **default-template** is a system-defined template that requires no user configuration.

- [Configuring RSVP Automatic Mesh on page 511](#)
- [Results on page 511](#)

### CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

```
PE4 Router    set routing-options dynamic-tunnels dt-1 rsvp-te rsvp-te-1 label-switched-path-template
               default-template
               set routing-options dynamic-tunnels dt-1 rsvp-te rsvp-te-1 destination-networks
               192.0.2.0/24
```

### Configuring RSVP Automatic Mesh

**Step-by-Step Procedure** The following example requires you to navigate various levels in the configuration hierarchy. For instructions on how to do that, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To enable RSVP automatic mesh:

1. Configure **rsvp-te** at the **[edit routing-options dynamic-tunnels]** hierarchy level.

```
[edit routing-options dynamic-tunnels]
user@PE4# set dt-1 rsvp-te rsvp-te-1 label-switched-path-template
default-template
```

2. Configure **destination-networks** at the **[edit routing-options dynamic-tunnels]** hierarchy level.

```
[edit routing-options dynamic-tunnels]
user@PE4# set dt-1 rsvp-te rsvp-te-1 destination-networks 192.0.2.0/24
```

### Results

Issue the **show** command from the **[edit routing-options dynamic-tunnels]** hierarchy level to see the results of your configuration:

```
[edit routing-options dynamic-tunnels]
user@PE4#show
dt-1 {
  rsvp-te rsvp-te-1 {
    label-switched-path-template {
      default-template;
    }
    destination-networks {
      192.0.2.0/24;
    }
  }
}
```

### Verification

- [Verifying the Existence of RSVP Automatic Mesh Tunnels on Router PE4 on page 511](#)
- [Verifying the Existence of MPLS LSPs on Router PE4 on page 512](#)

### Verifying the Existence of RSVP Automatic Mesh Tunnels on Router PE4

**Purpose** To verify the operation of the newly configured PE4 router, issue the **show dynamic-tunnels database** command from operational mode. This command will show the destination network to which dynamic tunnels can be created.

**Action** user@PE4> show dynamic-tunnels database  
Table: inet.3  
Destination-network: 192.0.2.0/24

### Verifying the Existence of MPLS LSPs on Router PE4

---

|                              |                                                                                                                                                                                                                                                                                                                                                                                                         |
|------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Purpose</b>               | To verify the existence of MPLS LSPs on the PE4 router, issue the <b>show mpls lsp</b> command from operational mode. This command will show the state of the MPLS LSPs.                                                                                                                                                                                                                                |
| <b>Action</b>                | <pre>user@PE4&gt; show mpls lsp  Ingress LSP: 0 sessions Total 0 displayed, Up 0, Down 0 Egress LSP: 3 sessions To From State Rt Style Labelin Labelout LSPname 192.0.2.104 192.0.2.103 Up 0 1 FF 3 - PE2-PE4 192.0.2.104 192.0.2.102 Up 0 1 FF 3 - PE2-PE4 192.0.2.104 192.0.2.101 Up 0 1 FF 3 - PE1-PE4 Total 3 displayed, Up 3, Down 0 Transit LSP: 0 sessions Total 0 displayed, Up 0, Down 0</pre> |
| <b>Related Documentation</b> | <ul style="list-style-type: none"><li>• <a href="#">Understanding RSVP Automatic Mesh on page 493</a></li><li>• <a href="#">rsvp-te on page 1579</a></li></ul>                                                                                                                                                                                                                                          |

### Configuring Hello Acknowledgments for Nonsession RSVP Neighbors

---

The **hello-acknowledgements** statement controls the hello acknowledgment behavior between RSVP neighbors regardless of whether or not they are in the same session.

Hello messages received from RSVP neighbors that are not part of a common RSVP session are discarded. If you configure the **hello-acknowledgements** statement at the **[edit protocols rsvp]** hierarchy level, hello messages from nonsession neighbors are acknowledged with a hello acknowledgment message. When hellos are received from nonsession neighbors, an RSVP neighbor relationship is created and periodic hello messages can now be received from the nonsession neighbor. The **hello-acknowledgements** statement is disabled by default. Configuring this statement allows RSVP-capable routers to be discovered using hello packets and verifies that the interface is able to receive RSVP packets before sending any MPLS LSP setup messages.

Once you enable hello acknowledgments for nonsession RSVP neighbors, the router continues to acknowledge hello messages from any nonsession RSVP neighbors unless the interface itself goes down or you change the configuration. Interface-based neighbors are not automatically aged out.

**hello-acknowledgements;**

You can include this statement at the following hierarchy levels:

- **[edit protocols rsvp]**
- **[edit logical-systems *logical-system-name* protocols rsvp]**

## Switching LSPs Away from a Network Node

You can configure the router to switch active LSPs away from a network node using a bypass LSP enabled for an interface. This feature might be used to maintain active networks when a device needs to be replaced without interrupting traffic transiting the network. The LSPs can be either static or dynamic.

1. You first need to configure either link or node protection for the traffic that needs to pass around the network device you intend to disable. To function properly, the bypass LSP must use a different logical interface than the protected LSP.
2. To prepare the router to begin switching traffic away from a network node, configure the **always-mark-connection-protection-tlv** statement:

```
always-mark-connection-protection-tlv;
```

The router then marks all OAM traffic transiting this interface in preparation for switching the traffic to an alternate path based on the OAM functionality.

You can configure this statement at the following hierarchy levels:

- **[edit protocols mpls interface *interface-name*]**
  - **[edit logical-systems *logical-system-name* protocols mpls interface *interface-name*]**
3. You then need to configure the **switch-away-lsps** statement to switch the traffic from the protected LSP to the bypass LSP, effectively bypassing the default downstream network device. The actual link itself is not brought down by this configuration.

To configure the router to switch traffic away from a network node, configure the **switch-away-lsps** statement:

```
switch-away-lsps;
```

You can configure this statement at the following hierarchy levels:

- **[edit protocols mpls interface *interface-name*]**
- **[edit logical-systems *logical-system-name* protocols mpls interface *interface-name*]**

Note the following limitations related to switching active LSPs away from a network node:

- The switch-away feature is supported on MX Series routers only.
- The switch-away feature is not supported for switching traffic from primary point-to-multipoint LSPs to bypass point-to-multipoint LSPs. If you configure the **switch-away-lsps** statement for a point-to-multipoint LSP, traffic is not switched to the bypass point-to-multipoint LSP.
- If you configure the switch-away feature on an interface along the path of a dynamic LSP, new dynamic LSPs cannot be established over that path. The switch-away feature prevents the make-before-break behavior of RSVP-signaled LSPs. The make-before-break behavior normally causes the router to first attempt to re-signal a dynamic LSP before tearing down the original.

**Related  
Documentation**

- [Configuring Node Protection or Link Protection for LSPs on page 543](#)

---

## Configuring RSVP Setup Protection

---

You can configure the facility-backup fast reroute mechanism to provide setup protection for LSPs which are in the process of being signaled. Both point-to-point LSPs and point-to-multipoint LSPs are supported. This feature is applicable in the following scenario:

1. A failed link or node is present on the strict explicit path of an LSP before the LSP is signaled.
2. There is also a bypass LSP protecting the link or node.
3. RSVP signals the LSP through the bypass LSP. The LSP appears as if it was originally set up along its primary path and then failed over to the bypass LSP because of the link or node failure.
4. When the link or node has recovered, the LSP can be automatically reverted to the primary path.

You should configure the **setup-protection** statement at the **[edit protocols rsvp]** on each of the routers along the LSP path on which you want to enable LSP setup protection. You should also configure IGP traffic engineering on all of the routers on the LSP path. You can issue a **show rsvp session** command to determine whether or not the LSP has setup protection enabled on a router acting as a point of local repair (PLR) or a merge point.

To enable RSVP setup protection, include the **setup-protection** statement

```
setup-protection;
```

You can include this statement at the following hierarchy levels:

- **[edit protocols rsvp]**
- **[edit logical-systems *logical-system-name* protocols rsvp]**

---

## Configuring Load Balancing Across RSVP LSPs

---

By default, when you have configured several RSVP LSPs to the same egress router, the LSP with the lowest metric is selected and carries all traffic. If all of the LSPs have the same metric, one of the LSPs is selected at random and all traffic is forwarded over it.

Alternatively, you can load-balance traffic across all of the LSPs by enabling per-packet load balancing.

To enable per-packet load balancing on an ingress LSP, configure the **policy-statement** statement as follows:

```
[edit policy-options]
policy-statement policy-name {
  then {
```



```

        load-balance per-packet;
    }
    accept;
}

```

You then need to apply this statement as an export policy to the forwarding table.

Once per-packet load balancing is applied, traffic is distributed equally between the LSPs (by default).

You need to configure per-packet load balancing if you want to enable PFE fast reroute. To enable PFE fast reroute, include the **policy-statement** statement for per-packet load balancing shown in this section in the configuration of each of the routers where a reroute might take place. See also [“Configuring Fast Reroute” on page 254](#).

You can also load-balance the traffic between the LSPs in proportion to the amount of bandwidth configured for each LSP. This capability can better distribute traffic in networks with asymmetric bandwidth capabilities across external links, since the configured bandwidth of an LSP typically reflects the traffic capacity of that LSP.

To configure RSVP LSP load balancing, include the **load-balance** statement with the **bandwidth** option:

```

load-balance {
    bandwidth;
}

```

You can configure this statement at the following hierarchy levels:

- **[edit protocols rsvp]**
- **[edit logical-systems *logical-system-name* protocols rsvp]**

Keep the following information in mind when you use the **load-balance** statement:

- If you configure the **load-balance** statement, the behavior of currently running LSPs is not altered. To force currently running LSPs to use the new behavior, you can issue a **clear mpls lsp** command.
- The **load-balance** statement only applies to ingress LSPs that have per-packet load balancing enabled.
- For Differentiated Services–aware traffic engineered LSPs, the bandwidth of an LSP is calculated by summing the bandwidth of all of the class types.

## Configuring RSVP Automatic Mesh

You can configure RSVP to establish point-to-point label-switched paths (LSPs) automatically for any new PE router added to a full mesh of LSPs. To enable this feature, you must configure the **rsvp-te** statement on all of the PE routers in the full mesh.



**NOTE:** You cannot configure RSVP automatic mesh in conjunction with CCC. CCC cannot use the dynamically generated LSPs.

To configure RSVP automatic mesh, include the **rsvp-te** statement:

```
rsvp-te {  
  destination-networks network-prefix;  
  label-switched-path-template (Multicast) {  
    default-template;  
    template-name;  
  }  
}
```

You can configure these statements at the following hierarchy levels:

- [edit routing-options dynamic-tunnels *tunnel-name*]
- [edit logical-systems *logical-system-name* routing-options dynamic-tunnels *tunnel-name*]

You must also configure the following statements to enable RSVP automatic mesh:

- **destination-networks**—Specify the IP version 4 (IPv4) prefix range for the destination network. Dynamic tunnels within the specified IPv4 prefix range can be initiated.
- **label-switched-path-template (Multicast)**—You can configure either the default template explicitly using the **default-template** option, or you can configure an LSP template of your own using the **template-name** option. The LSP template acts as a model configuration for the dynamically generated LSPs.

**Related  
Documentation**

- *Flooding Unknown Traffic Using Point-to-Multipoint LSPs in VPLS*
- [Example: Configuring RSVP Automatic Mesh on page 509](#)

---

## Configuring Timers for RSVP Refresh Messages

RSVP uses two related timing parameters:

- **refresh-time**—The refresh time controls the interval between the generation of successive refresh messages. The default value for the refresh time is 45 seconds. This number is derived from the **refresh-time** statement's default value of 30, multiplied by a fixed value of 1.5. This computation differs from RFC 2205, which states that the refresh time should be multiplied by a random value in the range from 0.5 through 1.5.

Refresh messages include path and Resv messages. Refresh messages are sent periodically so that reservation states in neighboring nodes do not time out. Each path and Resv message carries the refresh timer value, and the receiving node extracts this value from the messages.

- **keep-multiplier**—The keep multiplier is a small, locally configured integer from 1 through 255. The default value is 3. It indicates the number of messages that can be lost before a particular state is declared stale and must be deleted. The keep multiplier directly affects the lifetime of an RSVP state.

To determine the lifetime of a reservation state, use the following formula:

$$lifetime = (keep-multiplier + 0.5) \times (1.5 \times refresh-time)$$

In the worst case, (*keep-multiplier* – 1) successive refresh messages must be lost before a reservation state is deleted.

We do not recommend configuring a short RSVP hello timer. If quick discovery of a failed neighbor is needed, configure short IGP (OSPF or IS-IS) hello timers.

By default, the refresh timer value is 30 seconds. To modify this value, include the **refresh-time** statement:

```
refresh-time seconds;
```

You can include this statement at the following hierarchy levels:

- [edit protocols rsvp]
- [edit logical-systems *logical-system-name* protocols rsvp]

The default value of the keep multiplier is 3. To modify this value, include the **keep-multiplier** statement:

```
keep-multiplier number;
```

You can include this statement at the following hierarchy levels:

- [edit protocols rsvp]
- [edit logical-systems *logical-system-name* protocols rsvp]

---

## Preempting RSVP Sessions

Whenever bandwidth is insufficient to handle all RSVP sessions, you can control the preemption of RSVP sessions. By default, an RSVP session is preempted only by a new higher-priority session.

To always preempt a session when the bandwidth is insufficient, include the **preemption** statement with the **aggressive** option:

```
preemption aggressive;
```

You can include this statement at the following hierarchy levels:

- [edit protocols rsvp]
- [edit logical-systems *logical-system-name* protocols rsvp]

To disable RSVP session preemption, include the **preemption** statement with the **disabled** option:

```
preemption disabled;
```

To return to the default (that is, preempt a session only for a new higher-priority session), include the **preemption** statement with the **normal** option:

```
preemption normal;
```

You can include this statement at the following hierarchy levels:

- [edit protocols rsvp]

- [\[edit logical-systems \*logical-system-name\* protocols rsvp\]](#)

## Configuring MTU Signaling in RSVP

---

To configure maximum transmission unit (MTU) signaling in RSVP, you need to configure MPLS to allow IP packets to be fragmented before they are encapsulated in MPLS. You also need to configure MTU signaling in RSVP. For troubleshooting purposes, you can configure MTU signaling alone without enabling packet fragmentation.

To configure MTU signaling in RSVP, include the **path-mtu** statement:

```
path-mtu {  
  allow-fragmentation;  
  rsvp {  
    mtu-signaling;  
  }  
}
```

You can include this statement at the following hierarchy levels:

- [\[edit protocols mpls\]](#)
- [\[edit logical-systems \*logical-system-name\* protocols mpls\]](#)

The following sections describe how to enable packet fragmentation and MTU signaling in RSVP:

- [Enabling MTU Signaling in RSVP on page 518](#)
- [Enabling Packet Fragmentation on page 519](#)

## Enabling MTU Signaling in RSVP

To enable MTU signaling in RSVP, include the **rsvp mtu-signaling** statement:

```
rsvp mtu-signaling;
```

You can include this statement at the following hierarchy levels:

- [\[edit protocols mpls path-mtu\]](#)
- [\[edit logical-systems \*logical-system-name\* protocols mpls path-mtu\]](#)

Once you have committed the configuration, changes in the MTU signaling behavior for RSVP take effect the next time the path is refreshed.

You can configure the **mtu-signaling** statement by itself at the [\[edit protocols mpls path-mtu rsvp\]](#) hierarchy level. This can be useful for troubleshooting. If you configure just the **mtu-signaling** statement, you can use the **show rsvp session detail** command to determine what the smallest MTU is on an LSP. The **show rsvp session detail** command displays the MTU value received and sent in the Adspec object.

## Enabling Packet Fragmentation

To allow IP packets to be fragmented before they are encapsulated in MPLS, include the **allow-fragmentation** statement:

```
allow-fragmentation;
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls path-mtu]
- [edit logical-systems *logical-system-name* protocols mpls path-mtu]




**NOTE:** Do not configure the **allow-fragmentation** statement alone. Always configure it in conjunction with the **mtu-signaling** statement.

## Configuring Ultimate-Hop Popping for LSPs


By default, RSVP-signaled LSPs use penultimate-hop popping (PHP). [Figure 31 on page 250](#) illustrates a penultimate-hop popping LSP between Router PE1 and Router PE2. Router CE1 forwards a packet to its next hop (Router PE1), which is also the LSP ingress. Router PE1 pushes label 1 on the packet and forwards the labeled packet to Router P1. Router P1 completes the standard MPLS label swapping operation, swapping label 1 for label 2, and forwards the packet to Router P2. Since Router P2 is the penultimate-hop router for the LSP to Router PE2, it first pops the label and then forwards the packet to Router PE2. When Router PE2 receives it, the packet can have a service label, an explicit-null label, or just be a plain IP or VPLS packet. Router PE2 forwards the unlabeled packet to Router CE2.

**Figure 44: Penultimate-Hop Popping for an LSP**

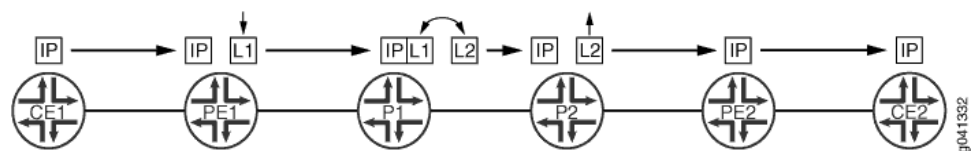

You can also configure ultimate-hop popping (UHP) (as shown in [Figure 32 on page 250](#)) for RSVP-signaled LSPs. Some network applications can require that packets arrive at the egress router (Router PE2) with a non-null outer label. For an ultimate-hop popping LSP, the penultimate router (Router P2 in [Figure 32 on page 250](#)) performs the standard MPLS label swapping operation (in this example, label 2 for label 3) before forwarding the packet to egress Router PE2. Router PE2 pops the outer label and performs a second lookup of the packet address to determine the end destination. It then forwards the packet to the appropriate destination (either Router CE2 or Router CE4).

Figure 45: Ultimate-Hop Popping for an LSP

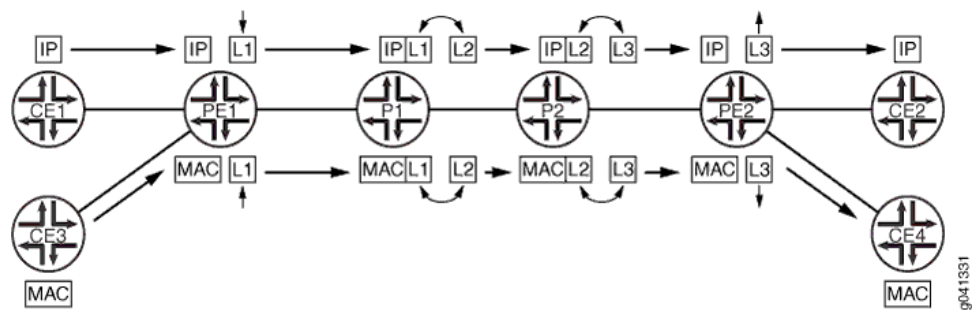

The following network applications require that you configure UHP LSPs:

- MPLS-TP for performance monitoring and in-band OAM
- Edge protection virtual circuits

The following features do not support the UHP behavior:

- LDP-signaled LSPs
- Static LSPs
- Point-to-multipoint LSPs
- CCC
- **traceroute** command

For more information about UHP behavior, see Internet draft [draft-ietf-mpls-rsvp-te-no-php-oob-mapping-01.txt](#), *Non PHP behavior and Out-of-Band Mapping for RSVP-TE LSPs*.

For point-to-point RSVP-signaled LSPs, UHP behavior is signaled from the LSP ingress. Based on the ingress router configuration, RSVP can signal the UHP LSP with the non-PHP flag set. RSVP PATH messages carry the two flags in the LSP-ATTRIBUTES object. When the egress router receives the PATH message, it assigns a non-null label to the LSP. RSVP also creates and installs two routes in the mpls.0 routing table. S refers to the S bit of the MPLS label, which indicates whether or not the bottom of the label stack has been reached.

- Route S=0—Indicates that there are more labels in the stack. The next hop for this route points to the mpls.0 routing table, triggering a chained MPLS label lookup to discover the remaining MPLS labels in the stack.
- Route S=1—Indicates that there are no more labels. The next hop points to the inet.0 routing table if the platform supports chained and multi-family lookup. Alternatively, the label route can point to a VT interface to initiate IP forwarding.

If you enable UHP LSPs, MPLS applications such as Layer 3 VPNs, VPLS, Layer 2 VPNs, and Layer 2 circuits can use the UHP LSPs. The following explains how UHP LSPs affect the different types of MPLS applications:

- **Layer 2 VPNs and Layer 2 circuits**—A packet arrives at the PE router (egress of the UHP LSP) with two labels. The outer label (S=0) is the UHP label, and the inner label (S=1) is the VC label. A lookup based on the transport label results in a table handle for the mpls.0 routing table. There is an additional route in the mpls.0 routing table corresponding to the inner label. A lookup based on the inner label results in the CE router next hop.
- **Layer 3 VPN**—A packet arrives at the PE router (egress of the UHP LSP) with two labels. The outer label (S=0) is the UHP label, and the inner label is the VPN label (S=1). A lookup based on the transport label results in the table handle for the mpls.0 routing table. There are two cases in this scenario. By default, Layer 3 VPNs advertise the per-next hop label. A lookup based on the inner label results in the next hop toward the CE router. However, if you have configured the **vrf-table-label** statement for the Layer 3 VPN routing instance, the inner LSI label points to the VRF routing table. An IP lookup is also completed for the VRF routing table.



**NOTE:** UHP for Layer 3 VPNs configured with the **vrf-table-label** statement is supported on MX 3D Universal Edge Routers only.

- **VPLS**—A packet arrives at the PE router (egress of the UHP LSP) with two labels. The outer label is the transport label (S=0) and the inner label is the VPLS label (S=1). A lookup based on the transport label results in the table handle for the mpls.0 routing table. A lookup based on the inner label in mpls.0 routing table results in the LSI tunnel interface of the VPLS routing instance if tunnel-services is not configured (or a VT interface not available). MX 3D Series routers support chained lookup and multi-family lookup.



**NOTE:** UHP for VPLS configured with the **no-tunnel-service** statement is supported on MX 3D Series routers only.

- **IPv4 over MPLS**—A packet arrives at the PE router (egress of the UHP LSP) with one label (S=1). A lookup based on this label returns a VT tunnel interface. Another IP lookup is completed on the VT interface to determine where to forward the packet. If the routing platform supports multi-family and chained lookups (for example, MX 3D routers and PTX Series Packet Transport Routers), lookup based on label route (S=1) points to the inet.0 routing table.
- **IPv6 over MPLS**—For IPv6 tunneling over MPLS, PE routers advertise IPv6 routes to each other with a label value of 2. This is the explicit null label for IPv6. As a result, the forwarding next hops for IPv6 routes that are learned from remote PE routers normally push two labels. The inner label is 2 (it could be different if the advertising PE router is from another vendor), and the router label is the LSP label. Packets arrive at the PE router (egress of the UHP LSP) with two labels. The outer label is the transport label (S=0), and the inner label is the IPv6 explicit-null label (label 2). Lookup based on the

inner label in the mpls.0 routing table redirects back to the mpls.0 routing table. On MX 3D Series routers, the inner label (label 2) is stripped off and an IPv6 lookup is done using the inet6.0 routing table.

- Enabling both PHP and UHP LSPs—You can configure both PHP and UHP LSPs over the same network paths. You can separate PHP and UHP traffic by selecting forwarding LSP next hops using a regular expression with the **install-nexthop** statement. You can also separate traffic by simply naming the LSPs appropriately.

The following statements enable ultimate-hop popping for an LSP. You can enable this feature on a specific LSP or for all of the ingress LSPs configured on the router. Configure these statements on the router at the LSP ingress.

1. To enable ultimate-hop popping, include the **ultimate-hop-popping** statement:

**ultimate-hop-popping;**

Include this statement at the **[edit protocols mpls label-switched-path label-switched-path-name]** hierarchy level to enable ultimate-hop popping on a specific LSP. Include this statement at the **[edit protocols mpls]** hierarchy level to enable ultimate-hop popping on all of the ingress LSPs configured on the router. You can also configure the **ultimate-hop-popping** statement under the equivalent **[edit logical-routers]** hierarchy levels.



**NOTE:** When you enable ultimate-hop popping, RSVP attempts to resignal existing LSPs as ultimate-hop popping LSPs in a make-before-break fashion. If an egress router does not support ultimate-hop popping, the existing LSP is torn down (RSVP sends a PathTear message along an LSP's path, removing the path state and dependent reservation state and releasing the associated networking resources).

If you disable ultimate-hop popping, RSVP resignals existing LSPs as penultimate-hop popping LSPs in a make-before-break fashion.

2. If you want to enable both ultimate-hop-popping and chained next hops on MX 3D Series routers only, you also need to configure the **enhanced-ip** option for the **network-services** statement:

**network-services enhanced-ip;**

You configure this statement at the **[edit chassis]** hierarchy level. Once you have configured the **network-services** statement, you need to reboot the router to enable UHP behavior.

#### Related Documentation

- [MPLS Label Allocation on page 26](#)
- [Configuring Corouted Bidirectional LSPs on page 248](#)
- [network-services](#)
- [ultimate-hop-popping on page 1537](#)



## Configuring RSVP to Pop the Label on the Ultimate-Hop Router

You can control the label value advertised on the egress router of an LSP. The default advertised label is label 3 (Implicit Null label). If label 3 is advertised, the penultimate-hop router removes the label and sends the packet to the egress router. When ultimate-hop popping is enabled, label 0 (IP version 4 [IPv4] Explicit Null label) is advertised. Ultimate-hop popping ensures that any packets traversing an MPLS network include a label.



**NOTE:** Juniper Networks routers queue packets based on the incoming label. Routers from other vendors might queue packets differently. Keep this in mind when working with networks containing routers from multiple vendors.

To configure ultimate-hop popping for RSVP, include the **explicit-null** statement:

```
explicit-null;
```

You can include this statement at the following hierarchy levels:

- **[edit protocols mpls]**
- **[edit logical-systems *logical-system-name* protocols mpls]**

### Related Documentation

- [MPLS Label Overview on page 24](#)
- [MPLS Label Allocation on page 26](#)

## Enabling Ultimate-Hop Popping on Point-to-Multipoint LSPs

By default, for both point-to-point and point-to-multipoint LSPs, penultimate-hop popping is used for MPLS traffic. MPLS labels are removed from packets on the router just before the egress router of the LSP. The plain IP packets are then forwarded to the egress router. For ultimate-hop popping, the egress router is responsible for both removing the MPLS label and processing the plain IP packet.

It can be beneficial to enable ultimate-hop popping on point-to-multipoint LSPs, particularly when transit traffic is traversing the same egress device. If you enable ultimate-hop popping, a single copy of traffic can be sent over the incoming link, saving significant bandwidth. By default, ultimate-hop popping is disabled.

You enable ultimate-hop popping for point-to-multipoint LSPs by configuring the **tunnel-services** statement. When you enable ultimate-hop popping, the Junos OS selects one of the available virtual loopback tunnel (VT) interfaces to loop back the packets to the PFE for IP forwarding. By default, the VT interface selection process is performed automatically. Bandwidth admission control is used to limit the number of LSPs that can be used on one VT interface. Once all the bandwidth is consumed on one interface, the Junos OS selects another VT interface with sufficient bandwidth for admission control.

If an LSP requires more bandwidth than is available from any of the VT interfaces, ultimate-hop popping cannot be enabled and penultimate-hop popping is enabled instead.

For ultimate-hop popping on point-to-multipoint LSPs to function properly, the egress router must have a PIC that provides tunnel services, such as the tunnel services PIC or the adaptive services PIC. Tunnel services are needed for popping the final MPLS label and for returning packets for IP address lookups.

You can explicitly configure which VT interfaces handle the RSVP traffic by including the **devices** option for the **tunnel-services** statement. The **devices** option allows you to specify which VT interfaces are to be used by RSVP. If you do not configure this option, all of the VT interfaces available to the router can be used.

To enable ultimate-hop popping for the egress point-to-multipoint LSPs on a router, configure the **tunnel-services** statement:

```
tunnel-services {  
  devices device-names;  
}
```

You can configure this statement at the following hierarchy levels:

- **[edit protocols rsvp]**
- **[edit logical-systems *logical-system-name* protocols rsvp]**

To enable ultimate-hop popping for egress point-to-multipoint LSPs, you must also configure the **interface** statement with the **all** option:

```
interface all;
```

You must configure this statement at the **[edit protocols rsvp]** hierarchy level.

---

## Tracing RSVP Protocol Traffic

To trace RSVP protocol traffic, include the **traceoptions** statement:

```
traceoptions {  
  file filename <files number> <size size> <world-readable | no-world-readable>;  
  flag flag <flag-modifier> <disable>;  
}
```

You can include this statement at the following hierarchy levels:

- **[edit protocols rsvp]**
- **[edit logical-systems *logical-system-name* protocols rsvp]**

You can specify the following RSVP-specific flags in the RSVP **traceoptions** statement:

Use the **file** statement to specify the name of the file that receives the output of the tracing operation. All files are placed in the directory **/var/log**. We recommend that you place RSVP tracing output in the file **rsvp-log**.

- **all**—All tracing operations.
- **error**—All detected error conditions
- **event**—RSVP-related events (helps to trace events related to RSVP graceful restart)
- **lmp**—RSVP-Link Management Protocol (LMP) interactions
- **packets**—All RSVP packets
- **path**—All path messages
- **pathtear**—PathTear messages
- **resv**—Resv messages
- **resvtear**—ResvTear messages
- **route**—Routing information
- **state**—Session state transitions, including when RSVP-signaled LSPs come up and go down.



**NOTE:** Use the **all** trace flag and the **detail** flag modifier with caution because these might cause the CPU to become very busy.

To view the log file generated when you enable RSVP traceoptions, issue the **show log file-name** command, where **file-name** is the file you specified using the **traceoptions** statement.

For general information about tracing and global tracing options, see the *Junos OS Routing Protocols Library*.

## Examples: Tracing RSVP Protocol Traffic

Trace RSVP path messages in detail:

```
[edit]
protocols {
  rsvp {
    traceoptions {
      file rsvp size 10m files 5;
      flag path;
    }
  }
}
```

Trace all RSVP messages:

```
[edit]
protocols {
  rsvp {
```

```

        traceoptions {
            file rsvp size 10m files 5;
            flag packets;
        }
    }
}

```

Trace all RSVP error conditions:

```

[edit]
protocols {
    rsvp {
        traceoptions {
            file rsvp size 10m files 5;
            flag error;
        }
    }
}

```

Trace RSVP state transitions:

```

[edit]
protocols {
    rsvp {
        traceoptions {
            file rsvp-data;
            flag state;
        }
    }
}

```

## RSVP Log File Output

The following is sample output generated by issuing the **show log file-name** command on a router on which RSVP traceoptions have been enabled with the **state** flag configured. The RSVP-signaled LSP E-D is shown being torn down on Mar 11 14:04:36.707092. On Mar 11 14:05:30.101492, it is shown coming back up.

```

user@host> show log rsvp-data
Mar 11 13:58:51 trace_on: Tracing to "/var/log/E/rsvp-data" started
Mar 11 13:58:51.286413 rsvp_iflchange for vt ifl vt-1/2/0.69206016
Mar 11 13:58:51.286718 RSVP add interface vt-1/2/0.69206016, ifindex 101, ifaddr
(null), family 1, is_appl_vt 0, already known
Mar 11 13:58:51.286818 RSVP Peer vt-1/2/0.69206016 TE-link __rpd:vt-1/2/0.69206016
Up
Mar 11 13:58:51.286978 RSVP add interface vt-1/2/0.69206016, ifindex 101, ifaddr
(null), family 3, is_appl_vt 0, already known
Mar 11 13:58:51.287962 RSVP add interface lt-1/2/0.2, ifindex 113, ifaddr (null),
family 2, is_appl_vt 0, already known
Mar 11 13:58:51.288629 RSVP add interface lt-1/2/0.2, ifindex 113, ifaddr 10.0.0.2,
family 1, is_appl_vt 0, already known
Mar 11 13:58:51.288996 RSVP add interface lt-1/2/0.17, ifindex 114, ifaddr (null),
family 2, is_appl_vt 0, already known
Mar 11 13:58:51.289593 RSVP add interface lt-1/2/0.17, ifindex 114, ifaddr (null),
family 3, is_appl_vt 0, already known
Mar 11 13:58:51.289949 RSVP add interface lt-1/2/0.17, ifindex 114, ifaddr
10.0.0.17, family 1, is_appl_vt 0, already known
Mar 11 13:58:51.290049 RSVP Peer lt-1/2/0.17 TE-link __rpd:lt-1/2/0.17 Up
Mar 11 13:59:05.042034 RSVP new bypass Bypass->10.0.0.18 on interface lt-1/2/0.17

```

```
to 10.0.0.18 avoid 0.0.0.0
Mar 11 14:04:36.707092 LSP "E-D" is Down (Reason: Reservation state deleted)
      Session: 192.168.0.4(port/tunnel ID 10321 Ext-ID 192.168.0.5) Proto 0
Sender: 192.168.0.5(port/lsp ID 1)
Mar 11 14:04:36.707661 RSVP delete resv state, session 192.168.0.4(port/tunnel
ID 10321 Ext-ID 192.168.0.5) Proto 0
Mar 11 14:04:36.781185 RSVP delete path state, session 192.168.0.4(port/tunnel
ID 10321 Ext-ID 192.168.0.5) Proto 0
Mar 11 14:04:36.781440 RSVP delete session 192.168.0.4(port/tunnel ID 10321 Ext-ID
192.168.0.5) Proto 0
Mar 11 14:05:30.101492 RSVP new Session 192.168.0.4(port/tunnel ID 10321 Ext-ID
192.168.0.5) Proto 0, session ID 3
Mar 11 14:05:30.101722 RSVP new path state, session 192.168.0.4(port/tunnel ID
10321 Ext-ID 192.168.0.5) Proto 0
Mar 11 14:05:30.179124 RSVP new resv state, session 192.168.0.4(port/tunnel ID
10321 Ext-ID 192.168.0.5) Proto 0
Mar 11 14:05:30.179395 RSVP PSB E-D, allocating psb resources for label 4294967295
Mar 11 14:05:30.180353 LSP "E-D" is Up
      Session: 192.168.0.4(port/tunnel ID 10321 Ext-ID 192.168.0.5) Proto 0
Sender: 192.168.0.5(port/lsp ID 2)
```

## show rsvp route-session-id

|                                 |                                                                                                                                                                                                                                                                                                                |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | show rsvp route-session-id                                                                                                                                                                                                                                                                                     |
| <b>Release Information</b>      | Command introduced in Junos OS Release 16.1 for the MX Series.                                                                                                                                                                                                                                                 |
| <b>Description</b>              | Display the session ID and the version information associated with the ingress route added by the Resource Reservation Protocol (RSVP) in the inet.3 table. The session ID and version information are available only if <b>protect-core</b> is configured for BGP and RSVP is used as the transport protocol. |
| <b>Options</b>                  | <b>none</b> —Validate and display RSVP route session details.                                                                                                                                                                                                                                                  |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                           |
| <b>List of Sample Output</b>    | <a href="#">show rsvp route-session-id on page 528</a>                                                                                                                                                                                                                                                         |
| <b>Output Fields</b>            | <a href="#">Table 16 on page 528</a> describes the output fields for the <b>show rsvp route-session-id</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                    |

**Table 16: show rsvp route-session-id Output Fields**

| Field Name                | Field Description                                      |
|---------------------------|--------------------------------------------------------|
| Ingress Route Destination | Destination (egress routing device) of the session.    |
| Ingress Route Preference  | RSVP preference value of the ingress session.          |
| Ingress Route Metric 1    | Metric 1 associated with the RSVP ingress route.       |
| Ingress Route Metric 2    | Metric 2 associated with the RSVP ingress route.       |
| Ingress Route Session ID  | Session ID associated with the RSVP ingress route.     |
| Version                   | Version number associated with the RSVP ingress route. |

## Sample Output

### show rsvp route-session-id

```

user@host> show rsvp route-session-id

RSVP Ingress Route Session ID Database:
=====
Ingress Route Destination: 1.1.1.5/32
Ingress Route Preference: 7
Ingress Route Metric 1: 20, Metric 2: 0
Ingress Route Session ID: 0x146, Version: 0

```

## CHAPTER 11

# Configuring RSVP Link Protection and Node Protection to Protect from Traffic Failures

- [Link Protection on page 529](#)
- [Multiple Bypass LSPs for Link Protection on page 530](#)
- [Node Protection on page 531](#)
- [Fast Reroute, Node Protection, and Link Protection on page 532](#)
- [Configuring Link Protection on Interfaces Used by LSPs on page 536](#)
- [Configuring Node Protection or Link Protection for LSPs on page 543](#)
- [Configuring Inter-AS Node and Link Protection on page 544](#)

## Link Protection


---

Link protection helps to ensure that traffic going over a specific interface to a neighboring router or switch can continue to reach this router (switch) if that interface fails. When link protection is configured for an interface and an LSP that traverses this interface, a bypass LSP is created that will handle this traffic if the interface fails. The bypass LSP uses a different interface and path to reach the same destination. The path used can be configured explicitly, or you can rely on CSPF. The RSVP metric for the bypass LSP is set in the range of 20,000 through 29,999 (this value is not user configurable).

If a link-protected interface fails, traffic is quickly switched to the bypass LSP. Note that a bypass LSP cannot share the same egress interface with the LSPs it monitors.

In [Figure 46 on page 530](#), link protection is enabled on Interface B between Router 1 and Router 2. It is also enabled on LSP A, an LSP that traverses the link between Router 1 and Router 2. If the link between Router 1 and Router 2 fails, traffic from LSP A is quickly switched to the bypass LSP generated by link protection.

**Figure 46: Link Protection Creating a Bypass LSP for the Protected Interface**

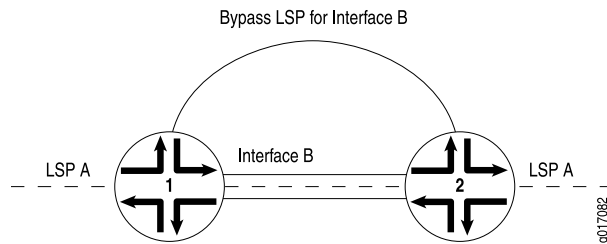

Although LSPs traversing an interface can be configured to take advantage of link protection, it is important to note that it is specifically the interface that benefits from link protection. If link protection is enabled on an interface but not on a particular LSP traversing that interface, then if the interface fails, that LSP will also fail.



**NOTE:** Link protection does not work on unnumbered interfaces.

To protect traffic over the entire route taken by an LSP, you should configure fast reroute. For more information, see [“Configuring Fast Reroute” on page 254](#).

#### Related Documentation

- [Node Protection on page 531](#)
- [Multiple Bypass LSPs for Link Protection on page 530](#)
- [Fast Reroute, Node Protection, and Link Protection on page 532](#)
- [Configuring Node Protection or Link Protection for LSPs on page 543](#)

## Multiple Bypass LSPs for Link Protection

By default, link protection relies on a single bypass LSP to provide path protection for an interface. However, you can also specify multiple bypass LSPs to provide link protection for an interface. You can individually configure each of these bypass LSPs or create a single configuration for all of the bypass LSPs. If you do not configure the bypass LSPs individually, they all share the same path and bandwidth constraints.

The following algorithm describes how and when an additional bypass LSP is activated for an LSP:

1. If any currently active bypass can satisfy the requirements of the LSP (bandwidth, link protection, or node-link protection), the traffic is directed to that bypass.
2. If no active bypass LSP is available, scan through the manual bypass LSPs in first-in, first-out (FIFO) order, skipping those that are already active (each manual bypass can only be activated once). The first inactive manual bypass that can satisfy the requirements is activated and traffic is directed to that bypass.
3. If no manual bypass LSPs are available and if the **max-bypasses** statement activates multiple bypass LSPs for link protection, determine whether an automatically configured bypass LSP can satisfy the requirements. If an automatically configured



bypass LSP is available and if the total number of active automatically configured bypass LSPs does not exceed the maximum bypass LSP limit (configured with the **max-bypasses** statement), activate another bypass LSP.

For information about how to configure multiple bypass LSPs for link protection, see [“Configuring Bypass LSPs” on page 537](#).

## Node Protection


Node protection extends the capabilities of link protection. Link protection helps to ensure that traffic going over a specific interface to a neighboring router can continue to reach this router if that interface fails. Node protection ensures that traffic from an LSP traversing a neighboring router can continue to reach its destination even if the neighboring router fails.

When you enable node protection for an LSP, you must also enable link protection. Once enabled, node protection and link protection establish the following types of bypass LSPs:

- Next-hop bypass LSP—Provides an alternate route for an LSP to reach a neighboring router. This type of bypass LSP is established when you enable either node protection or link protection.
- Next-next-hop bypass LSP—Provides an alternate route for an LSP to get around a neighboring router en route to the destination router. This type of bypass LSP is established exclusively when node protection is configured. If a next-next-hop bypass LSP cannot be created, an attempt is made to signal a next-hop bypass LSP.

In [Figure 47 on page 531](#), node protection is enabled on Interface B on Router 1. Node protection is also enabled on LSP A, an LSP that traverses the link transiting Router 1, Router 2, and Router 3. If Router 2 suffers a hardware or software failure, traffic from LSP A is switched to the next-next-hop bypass LSP generated by node protection.

**Figure 47: Node Protection Creating a Next-Next-Hop Bypass LSP**

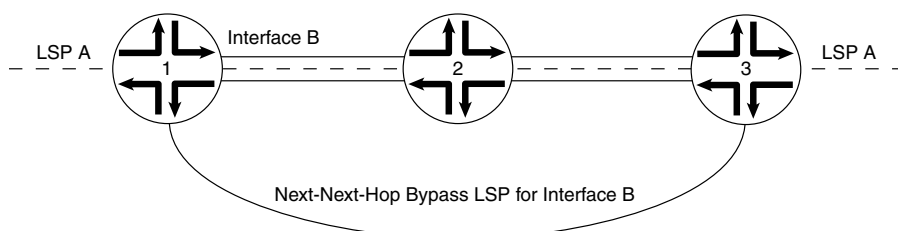

The time needed by node protection to switch traffic to a next-next-hop bypass LSP can be significantly longer than the time needed by link protection to switch traffic to a next-hop bypass LSP. Link protection relies on a hardware mechanism to detect a link failure, allowing it to quickly switch traffic to a next-hop bypass LSP.

Node failures are often due to software problems on the node router. Node protection relies on the receipt of hello messages from a neighboring router to determine whether it is still functioning. The time it takes node protection to divert traffic partly depends on how often the node router sends hello messages and how long it takes the node-protected

router to react to having not received a hello message. However, once the failure is detected, traffic can be quickly diverted to the next-next-hop bypass LSP.



**NOTE:**

Node protection provides traffic protection in the event of an error or interruption of the physical link between two routers. It does not provide protection in the event of control plane errors. The following provides an example of a control plane error:

- A transit router changes the label of a packet due to a control plane error.
- When the ingress router receives the packet, it considers the label change to be a catastrophic event and deletes both the primary LSP and the associated bypass LSP.

**Related Documentation**

- [Link Protection on page 529](#)
- [Fast Reroute, Node Protection, and Link Protection on page 532](#)
- [Configuring Node Protection or Link Protection for LSPs on page 543](#)

---

## Fast Reroute, Node Protection, and Link Protection

This document discusses the following sections:

- [LSP Protection Overview on page 532](#)
- [LSP Protection Types Comparison on page 533](#)
- [One-to-One Backup Implementation on page 533](#)
- [Facility Backup Implementation on page 534](#)

### LSP Protection Overview

RSVP-TE extensions establish backup label-switched path (LSP) tunnels for local repair of LSP tunnels. These mechanisms enable immediate re-direction of traffic onto backup LSP tunnels, in the event of a failure.

RFC 4090, *Fast Reroute Extensions to RSVP-TE for LSP Tunnels*, describes two different types of traffic protection for RSVP-signaled LSPs:

- One-to-one backup—In this method, detour LSPs for each protected LSP is created at each potential point of local repair.
- Facility backup—In this method, a bypass tunnel is created to protect a set of LSPs that have similar backup constraints at a potential failure point, by taking advantage of the MPLS label stacking.

The one-to-one backup and the facility backup methods protect links and nodes during network failure, and can co-exist in a mixed network.

## LSP Protection Types Comparison

In the Junos OS, the one-to-one backup of traffic protection is provided by fast reroute. Each LSP requires a protecting LSP to be signaled at each hop except the egress router. This method of LSP protection cannot be shared.

In the facility backup method, the LSP traffic protection is provided on the node and link. Each LSP requires a protecting LSP to be signaled at each hop except the egress router. Unlike fast reroute, this protecting LSP can be shared by other LSPs.

Table 17 on page 533 summarizes the traffic protection types.

**Table 17: One-to-One Backup Compared with Facility Backup**

| Comparison                     | One-to-One Backup   | Facility Backup                                        |
|--------------------------------|---------------------|--------------------------------------------------------|
| Name of the protecting LSP     | Detour LSP          | Bypass LSP                                             |
| Sharing of the protecting LSP  | Cannot be shared    | Can be shared by multiple LSPs                         |
| Junos configuration statements | <b>fast-reroute</b> | <b>node-link-protection</b> and <b>link-protection</b> |

## One-to-One Backup Implementation

In the one-to-one backup method, the points of local repair maintain separate backup paths for each LSP passing through a facility. The backup path terminates by merging back with the primary path at a node called the merge point. In this approach, the merge point can be any node downstream from the protected facility.


In the one-to-one backup method, an LSP is established that intersects the original LSP downstream of the point of link or node failure. A separate backup LSP is established for each LSP that is backed up.

One-to-one backup is appropriate under the following circumstances:

- Protection of a small number of LSPs relative to the total number of LSPs.
- Path selection criteria, such as bandwidth, priority, and link coloring for detour paths is critical.
- Control of individual LSPs is important.

In Figure 48 on page 534, Routers R1 and R5 are the ingress and egress routers, respectively. A protected LSP is established between the two routers transiting Routers R2, R3, and R4. Router R2 provides user traffic protection by creating a partial backup LSP that merges with the protected LSP at Router R4. This partial one-to-one backup LSP is called a detour. Detours are always calculated to avoid the immediate downstream link and node, providing against both link and node failure.

Figure 48: One-to-One Backup

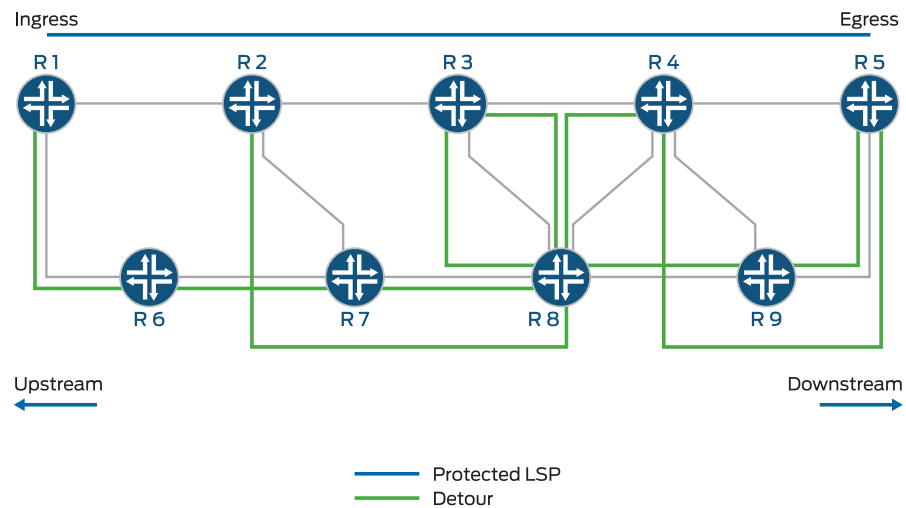

g042701

In the example, the protected LSP is **R1-R2-R3-R4-R5**, and the following detours are established:

- Router R1—**R1-R6-R7-R8-R3**
- Router R2—**R2-R7-R8-R4**
- Router R3—**R3-R8-R9-R5**
- Router R4—**R4-R9-R5**

To protect an LSP that traverses **N** nodes fully, there can be as many as **(N - 1)** detours. The point of local repair sends periodic refresh messages to maintain each backup path, as a result maintaining state information for backup paths protecting individual LSPs is a significant resource burden for the point of local repair. To minimize the number of LSPs in the network, it is desirable to merge a detour back to its protected LSP, when feasible. When a detour LSP intersects its protected LSP at an LSR with the same outgoing interface, it is merged.

## Facility Backup Implementation

In the facility backup approach, a point of local repair maintains a single backup path to protect a set of primary LSPs traversing the point of local repair, the facility, and the merge point. The facility backup is based on interface rather than on LSP. While fast reroute protects interfaces or nodes along the entire path of a LSP, the facility backup protection can be applied on interfaces as needed. As a result, fewer states need to be maintained and refreshed which results in a scalable solution. The facility backup method is also called many-to-one backup.

The facility backup method takes advantage of the MPLS label stack. Instead of creating a separate LSP for every backed-up LSP, a single LSP is created that serves to back up a set of LSPs. Such an LSP tunnel is called a bypass tunnel. In this method, a router immediately upstream from a link failure uses an alternate interface to forward traffic

to its downstream neighbor, and the merge point should be the node immediately downstream to the facility. This is accomplished by preestablishing a bypass path that is shared by all protected LSPs traversing the failed link. A single bypass path can safeguard a set of protected LSPs. When an outage occurs, the router immediately upstream from the link outage switches protected traffic to the bypass link, then signals the link failure to the ingress router.


The bypass tunnel must intersect the path of the original LSP(s) somewhere downstream of the point of local repair. This constrains the set of LSPs being backed up through that bypass tunnel to those that pass through some common downstream nodes. All LSPs that pass through the point of local repair and through this common node, and that do not also use the facilities involved in the bypass tunnel are candidates for this set of LSPs.

The facility backup method is appropriate in the following situations:

- The number of LSPs to be protected is large.
- Satisfying path selection criteria (priority, bandwidth, and link coloring) for bypass paths is less critical.
- Control at the granularity of individual LSPs is not required.

In [Figure 49 on page 535](#), Routers R1 and R5 are the ingress and egress routers, respectively. Router R2 has established a bypass tunnel that protects against the failure of Router R2-R3 link and Router R3 node. A bypass tunnel is established between Routers R6 and R7. There are three different protected LSPs that are using the same bypass tunnel for protection.

**Figure 49: Facility Backup**

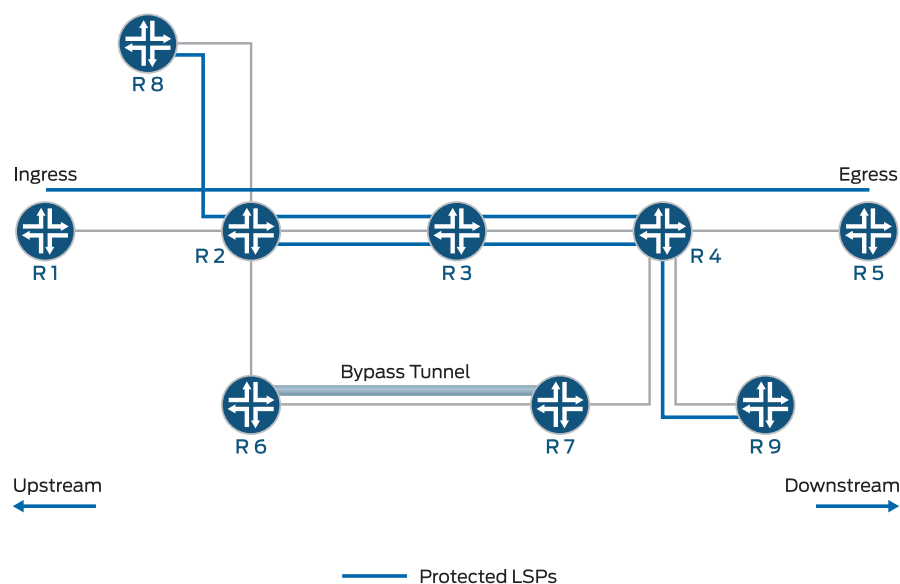

8042700

The facility backup method provides a scalability improvement, wherein the same bypass tunnel is also used to protect LSPs from any of Routers R1, R2, or R8 to any of Routers R4, R5, or R9.

**Related  
Documentation**

- [Fast Reroute Overview on page 46](#)
- [Configuring Fast Reroute on page 254](#)
- [Node Protection on page 531](#)
- [Configuring Node Protection or Link Protection for LSPs on page 543](#)

---

## Configuring Link Protection on Interfaces Used by LSPs

---

When you configure node protection or link protection on a router for LSPs as described in “[Configuring Node Protection or Link Protection for LSPs](#)” on page 543, you also must configure the **link-protection** statement on the RSVP interfaces used by the LSPs.

To configure link protection on the interfaces used by the LSPs, include the **link-protection** statement:

```
link-protection {  
  disable;  
  admin-group  
    exclude group-names;  
    include-all group-names;  
    include-any group-names;  
}  
bandwidth bps;  
bypass bypass-name {  
  bandwidth bps;  
  description text;  
  hop-limit number;  
  no-cspf;  
  path address <strict | loose>;  
  priority setup-priority reservation-priority;  
  to address;  
}  
class-of-service cos-value;  
hop-limit number;  
max-bypasses number;  
no-cspf;  
no-node-protection;  
optimize-timer seconds;  
path address <strict | loose>;  
priority setup-priority reservation-priority;  
subscription percent {  
  ct0 percent;  
  ct1 percent;  
  ct2 percent;  
  ct3 percent;  
}  
}
```

You can include this statement at the following hierarchy levels:

- [edit protocols rsvp **interface** *interface-name*]
- [edit logical-systems *logical-system-name* protocols rsvp **interface** *interface-name*]

All the statements under **link-protection** are optional.

The following sections describe how to configure link protection:

- [Configuring Bypass LSPs on page 537](#)
- [Configuring Administrative Groups for Bypass LSPs on page 538](#)
- [Configuring the Bandwidth for Bypass LSPs on page 538](#)
- [Configuring Class of Service for Bypass LSPs on page 539](#)
- [Configuring the Hop Limit for Bypass LSPs on page 539](#)
- [Configuring the Maximum Number of Bypass LSPs on page 540](#)
- [Disabling CSPF for Bypass LSPs on page 540](#)
- [Disabling Node Protection for Bypass LSPs on page 541](#)
- [Configuring the Optimization Interval for Bypass LSPs on page 541](#)
- [Configuring an Explicit Path for Bypass LSPs on page 542](#)
- [Configuring the Amount of Bandwidth Subscribed for Bypass LSPs on page 542](#)
- [Configuring Priority and Preemption for Bypass LSPs on page 543](#)

## Configuring Bypass LSPs

You can configure specific bandwidth and path constraints for a bypass LSP. You can also individually configure each bypass LSP generated when you enable multiple bypass LSPs. If you do not configure the bypass LSPs individually, they all share the same path and bandwidth constraints (if any).

If you specify the **bandwidth**, **hop-limit**, and **path** statements for the bypass LSP, these values take precedence over the values configured at the [edit protocols rsvp **interface** *interface-name* **link-protection**] hierarchy level. The other attributes (**subscription**, **no-node-protection**, and **optimize-timer**) are inherited from the general constraints.

To configure a bypass LSP, specify a name for the bypass LSP using the **bypass** statement. The name can be up to 64 characters in length.

```
bypass bypass-name {
  bandwidth bps;
  description text;
  class-of-service cos-value;
  hop-limit number;
  no-cspf;
  path address <strict | loose>;
  priority setup-priority reservation-priority;
  to address;
}
```

You can include this statement at the following hierarchy levels:

- [edit protocols rsvp **interface** *interface-name* **link-protection**]

- [edit logical-systems *logical-system-name* protocols rsvp **interface** *interface-name* link-protection]

### Configuring the Next-Hop or Next-Next-Hop Node Address for Bypass LSPs

---

If you configure a bypass LSP, you must also configure the **to** statement. The **to** statement specifies the address for the interface of the immediate next-hop node (for link protection) or the next-next-hop node (for node-link protection). The address specified determines whether this is a link protection bypass or a node-link protection bypass. On multiaccess networks (for example, a LAN), this address is also used to specify which next-hop node is being protected.

### Configuring Administrative Groups for Bypass LSPs

Administrative groups, also known as link coloring or resource class, are manually assigned attributes that describe the “color” of links, such that links with the same color conceptually belong to the same class. You can use administrative groups to implement a variety of policy-based LSP setups. You can configure administrative groups for bypass LSPs. For more information about configuring administrative groups, see “[Configuring Administrative Groups for LSPs](#)” on page 268.

To configure administrative groups for bypass LSPs, include the **admin-group** statement:

```
admin-group {  
  exclude group-names;  
  include-all group-names;  
  include-any group-names;  
}
```

To configure an administrative group for all of the bypass LSPs, include the **admin-group** statement at the following hierarchy levels:

- [edit protocols rsvp **interface** *interface-name* link-protection]
- [edit logical-systems *logical-system-name* protocols rsvp **interface** *interface-name* link-protection]

To configure an administrative groups for a specific bypass LSP, include the **admin-group** statement at the following hierarchy levels:

- [edit protocols rsvp **interface** *interface-name* link-protection **bypass** *bypass-name*]
- [edit logical-systems *logical-system-name* protocols rsvp **interface** *interface-name* link-protection **bypass** *bypass-name*]

### Configuring the Bandwidth for Bypass LSPs

You can specify the amount of bandwidth allocated for automatically generated bypass LSPs or you can individually specify the amount of bandwidth allocated for each LSP.

If you have enabled multiple bypass LSPs, this statement is required.

To specify the bandwidth allocation, include the **bandwidth** statement:



**bandwidth** *bps*;

For automatically generated bypass LSPs, include the **bandwidth** statement at the following hierarchy levels:

- [edit protocols rsvp **interface** *interface-name* link-protection]
- [edit logical-systems *logical-system-name* protocols rsvp **interface** *interface-name* link-protection]

For individually configured bypass LSPs, include the **bandwidth** statement at the following hierarchy levels:

- [edit protocols rsvp **interface** *interface-name* link-protection **bypass** *bypass-name*]
- [edit logical-systems *logical-system-name* protocols rsvp **interface** *interface-name* link-protection **bypass** *bypass-name*]

## Configuring Class of Service for Bypass LSPs

You can specify the class-of-service value for bypass LSPs by including the **class-of-service** statement:

**class-of-service** *cos-value*;

To apply a class-of-service value to all the automatically generated bypass LSPs, include the **class-of-service** statement at the following hierarchy levels:

- [edit protocols rsvp **interface** *interface-name* link-protection]
- [edit logical-systems *logical-system-name* protocols rsvp **interface** *interface-name* link-protection]

To configure a class-of-service value for a specific bypass LSPs, include the **class-of-service** statement at the following hierarchy levels:

- [edit protocols rsvp **interface** *interface-name* link-protection **bypass** *bypass-name*]
- [edit logical-systems *logical-system-name* protocols rsvp **interface** *interface-name* link-protection **bypass** *bypass-name*]

## Configuring the Hop Limit for Bypass LSPs

You can specify the maximum number of hops a bypass can traverse. By default, each bypass can traverse a maximum of 255 hops (the ingress and egress routers count as one hop each, so the minimum hop limit is two).

To configure the hop limit for bypass LSPs, include the **hop-limit** statement:

**hop-limit** *number*;

For automatically generated bypass LSPs, include the **hop-limit** statement at the following hierarchy levels:

- [edit protocols rsvp **interface** *interface-name* link-protection]

- [edit logical-systems *logical-system-name* protocols rsvp **interface** *interface-name* link-protection]

For individually configured bypass LSPs, include the **hop-limit** statement at the following hierarchy levels:

- [edit protocols rsvp **interface** *interface-name* link-protection **bypass** *bypass-name*]
- [edit logical-systems *logical-system-name* protocols rsvp **interface** *interface-name* link-protection **bypass** *bypass-name*]

## Configuring the Maximum Number of Bypass LSPs

You can specify the maximum number of dynamic bypass LSPs permitted for protecting an interface using the **max-bypasses** statement at the [edit protocols rsvp **interface** *interface-name* link-protection] hierarchy level. When this statement is configured, multiple bypasses for link protection are enabled. Call admission control (CAC) is also enabled.

By default, this option is disabled and only one bypass is enabled for each interface. You can configure a value of between 0 through 99 for the **max-bypasses** statement. Configuring a value of 0 prevents the creation of any dynamic bypass LSPs for the interface. If you configure a value of 0 for the **max-bypasses** statement, you need to configure one or more static bypass LSPs to enable link protection on the interface.

If you configure the **max-bypasses** statement, you must also configure the **bandwidth** statement (discussed in “[Configuring the Bandwidth for Bypass LSPs](#)” on page 538).

To configure the maximum number of bypass LSPs for a protected interface, include the **max-bypasses** statement:

```
max-bypasses number;
```

You can include this statement at the following hierarchy levels:

- [edit protocols rsvp **interface** *interface-name* link-protection]
- [edit logical-systems *logical-system-name* protocols rsvp **interface** *interface-name* link-protection]

## Disabling CSPF for Bypass LSPs

Under certain circumstances, you might need to disable CSPF computation for bypass LSPs and use the configured Explicit Route Object (ERO) if available. For example, a bypass LSP might need to traverse multiple OSPF areas or IS-IS levels, preventing the CSPF computation from working. To ensure that link and node protection function properly in this case, you have to disable CSPF computation for the bypass LSP.

You can disable CSPF computation for all bypass LSPs or for specific bypass LSPs.

To disable CSPF computation for bypass LSPs, include the **no-cspf** statement:

```
no-cspf;
```

For a list of hierarchy levels where you can include this statement, see the statement summary for this statement.

## Disabling Node Protection for Bypass LSPs

You can disable node protection on the RSVP interface. Link protection remains active. When this option is configured, the router can only initiate a next-hop bypass, not a next-next-hop bypass.

To disable node protection for bypass LSPs, include the **no-node-protection** statement:

```
no-node-protection;
```

You can include this statement at the following hierarchy levels:

- [edit protocols rsvp **interface** *interface-name* link-protection]
- [edit logical-systems *logical-system-name* protocols rsvp **interface** *interface-name* link-protection]

## Configuring the Optimization Interval for Bypass LSPs

You can configure an optimization interval for bypass LSPs using the **optimize-timer** statement. At the end of this interval, an optimization process is initiated that attempts to either minimize the number of bypasses currently in use, minimize the total amount of bandwidth reserved for all of the bypasses, or both. You can configure an optimization interval from 1 through 65,535 seconds. A default value of 0 disables bypass LSP optimization.

When you configure the **optimize-timer** statement, bypass LSPs are reoptimized automatically when you configure or change the configuration of any of the following:

- Administrative group for a bypass LSP—The configuration for an administrative group has been changed on a link along the path used by the bypass LSP. Configure an administrative group using the **admin-group** statement at the [edit protocols rsvp **interface** *interface-name* link-protection] hierarchy level.
- Fate sharing group—The configuration for a fate sharing group has been changed. Configure a fate sharing group using the **group** statement at the [edit routing-options **fate-sharing**] hierarchy level.
- IS-IS overload—The configuration for IS-IS overload has been changed on a router along the path used by the bypass LSP. Configure IS-IS overload using the **overload** statement at the [edit protocols isis] hierarchy level.
- IGP metric—The IGP metric has been changed on a link along the path used by the bypass LSP.

To configure the optimization interval for bypass LSPs, include the **optimize-timer** statement:

```
optimize-timer seconds;
```

You can include this statement at the following hierarchy levels:

- [edit protocols rsvp **interface** *interface-name* link-protection]

- [edit logical-systems *logical-system-name* protocols rsvp **interface** *interface-name* link-protection]

## Configuring an Explicit Path for Bypass LSPs

By default, when you establish a bypass LSP to an adjacent neighbor, CSPF is used to discover the least-cost path. The **path** statement allows you to configure an explicit path (a sequence of strict or loose routes), giving you control over where and how the bypass LSP is established. To configure an explicit path, include the **path** statement:

```
path address <strict | loose>;
```

For automatically generated bypass LSPs, include the **path** statement at the following hierarchy levels:

- [edit protocols rsvp **interface** *interface-name* link-protection]
- [edit logical-systems *logical-system-name* protocols rsvp **interface** *interface-name* link-protection]

For individually configured bypass LSPs, include the **path** statement at the following hierarchy levels:

- [edit protocols rsvp **interface** *interface-name* link-protection **bypass** *bypass-name*]
- [edit logical-systems *logical-system-name* protocols rsvp **interface** *interface-name* link-protection **bypass** *bypass-name*]

## Configuring the Amount of Bandwidth Subscribed for Bypass LSPs

You can configure the amount of bandwidth subscribed to bypass LSPs. You can configure the bandwidth subscription for the whole bypass LSP or for each class type that might traverse the bypass LSP. You can configure any value between 1 percent and 65,535 percent. By configuring a value less than 100 percent, you are undersubscribing the bypass LSPs. By configuring a value greater than 100 percent, you are oversubscribing the bypass LSPs.

The ability to oversubscribe the bandwidth for the bypass LSPs makes it possible to more efficiently use network resources. You can configure the bandwidth for the bypass LSPs based on the average network load as opposed to the peak load.

To configure the amount of bandwidth subscribed for bypass LSPs, include the **subscription** statement:

```
subscription percentage {  
  ct0 percentage;  
  ct1 percentage;  
  ct2 percentage;  
  ct3 percentage;  
}
```

You can include this statement at the following hierarchy levels:

- [edit protocols rsvp **interface** *interface-name* link-protection]

- [edit logical-systems *logical-system-name* protocols rsvp **interface** *interface-name* link-protection]

## Configuring Priority and Preemption for Bypass LSPs

When there is insufficient bandwidth to establish a more important LSP, you might want to tear down a less important existing LSP to release the bandwidth. You do this by preempting the existing LSP.

For more detailed information on configuring setup priority and reservation priority for LSPs, see “[Configuring Priority and Preemption for LSPs](#)” on page 280.

To configure the bypass LSP's priority and preemption properties, include the **priority** statement:

```
priority setup-priority reservation-priority;
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

---

## Configuring Node Protection or Link Protection for LSPs

When you configure node protection or link protection on a router or switch, bypass LSPs are created to the next-hop or next-next-hop routers (switches) for the LSPs traversing the router (switch). You must configure node protection or link protection for each LSP that you want protected. To extend protection along the entire path used by an LSP, you must configure protection on each router that the LSP traverses.

You can configure node protection or link protection for both static and dynamic LSPs.

To configure node protection on a router for a specified LSP, include the **node-link-protection** statement:

```
node-link-protection;
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls **label-switched-path** *lsp-name*]
- [edit logical-systems *logical-system-name* protocols mpls **label-switched-path** *lsp-name*]

To configure link protection on a router for a specified LSP, include the **link-protection** statement:

```
link-protection;
```

You can include this statement at the following hierarchy levels:

- [edit protocols mpls **label-switched-path** *lsp-name*]
- [edit logical-systems *logical-system-name* protocols mpls **label-switched-path** *lsp-name*]



**NOTE:** To complete the configuration of node or link protection, you must also configure link protection on all unidirectional RSVP interfaces that the LSPs traverse, as described in [“Configuring Link Protection on Interfaces Used by LSPs”](#) on page 536.

**Related  
Documentation**

- [Configuring Link Protection on Interfaces Used by LSPs](#) on page 536
- [Link Protection](#) on page 529
- [Node Protection](#) on page 531
- [Multiple Bypass LSPs for Link Protection](#) on page 530
- [Fast Reroute, Node Protection, and Link Protection](#) on page 532

---

## Configuring Inter-AS Node and Link Protection

To interoperate with other vendors' equipment, the Junos OS supports the record route object (RRO) node ID subobject for use in inter-AS link and node protection configurations. The RRO node ID subobject is defined in RFC 4561, *Definition of a Record Route Object (RRO) Node-Id Sub-Object*. This functionality is enabled by default in Junos OS Release 9.4 and later.

If you have Juniper Networks routers running Junos OS Release 9.4 and later releases in the same MPLS-TE network as routers running Junos OS Release 8.4 and earlier releases, you might need to disable the RRO node ID subobject by configuring the **no-node-id-subobject** statement:

**no-node-id-subobject;**

You can include this statement at the following hierarchy levels:

- **[edit protocols rsvp]**
- **[edit logical-systems *logical-system-name* protocols rsvp]**

# Configuring RSVP Graceful Restart for High Availability

- [RSVP Graceful Restart on page 545](#)
- [RSVP Graceful Restart Standard on page 545](#)
- [RSVP Graceful Restart Terminology on page 546](#)
- [RSVP Graceful Restart Operation on page 546](#)
- [Processing the Restart Cap Object on page 547](#)
- [Configuring RSVP Graceful Restart on page 548](#)

## RSVP Graceful Restart

---

RSVP graceful restart allows a router undergoing a restart to inform its adjacent neighbors of its condition. The restarting router requests a grace period from the neighbor or peer, which can then cooperate with the restarting router. The restarting router can still forward MPLS traffic during the restart period; convergence in the network is not disrupted. The restart is not visible to the rest of the network, and the restarting router is not removed from the network topology. RSVP graceful restart can be enabled on both transit routers and ingress routers. It is available for both point-to-point LSPs and point-to-multipoint LSPs.

RSVP graceful restart is described in the following sections:

- [RSVP Graceful Restart Standard on page 545](#)
- [RSVP Graceful Restart Terminology on page 546](#)
- [RSVP Graceful Restart Operation on page 546](#)
- [Processing the Restart Cap Object on page 547](#)

## RSVP Graceful Restart Standard

---

RSVP graceful restart is described in RFC 3473, *Generalized Multi-Protocol Label Switching (GMPLS) Signaling Resource ReserVation Protocol-Traffic Engineering (RSVP-TE) Extensions* (only Section 9, “Fault Handling”).

## RSVP Graceful Restart Terminology

---

### R

|                                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|--------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Recovery time<br/>(in milliseconds)</b> | <p>Applies only when the control channel is up (the hello exchange is complete) before the restart time. Applies only to nodal faults.</p> <p>When a graceful restart is in progress, the time left to complete a recovery is advertised. At other times, this value is zero. The maximum advertised recovery time is 2 minutes (120,000 milliseconds).</p> <p>During the recovery time, a restarting node attempts to recover its lost states with assistance from its neighbors. The neighbor of the restarting node must send the path messages with the recovery labels to the restarting node within a period of one-half the recovery time. The restarting node considers its graceful restart complete after its advertised recovery time.</p> |
| <b>Restart time<br/>(in milliseconds)</b>  | <p>The default value is 60,000 milliseconds (1 minute). The restart time is advertised in the hello message. The time indicates how long a neighbor should wait to receive a hello message from a restarting router before declaring that router dead and purging states.</p> <p>The Junos OS can override a neighbor's advertised restart time if the time is greater than one-third the local restart time. For example, given the default restart time of 60 seconds, a router would wait 20 seconds or less to receive a hello message from a restarting neighbor. If the restart time is zero, the restarting neighbor can immediately be declared dead.</p>                                                                                     |

## RSVP Graceful Restart Operation

---

For RSVP graceful restart to function, the feature must be enabled on the global routing instance. RSVP graceful restart can be disabled at the protocol level (for RSVP alone) or at the global level for all protocols.

RSVP graceful restart requires the following of a restarting router and the router's neighbors:

- For the restarting router, RSVP graceful restart attempts to maintain the routes installed by RSVP and the allocated labels, so that traffic continues to be forwarded without disruption. RSVP graceful restart is done quickly enough to reduce or eliminate the impact on neighboring nodes.
- The neighboring routers must have RSVP graceful restart helper mode enabled, thus allowing them to assist a router attempting to restart RSVP.

An object called Restart Cap that is sent in RSVP hello messages advertises a node's restart capability. The neighboring node sends a Recover Label object to the restarting node to recover its forwarding state. This object is essentially the old label that the restarting node advertised before the node went down.

The following lists the RSVP graceful restart behaviors, which vary depending on the configuration and on which features are enabled:



- If you disable helper mode, the Junos OS does not attempt to help a neighbor restart RSVP. Any information that arrives with a Restart Cap object from a neighbor is ignored.
- When you enable graceful restart under the routing instance configuration, the router can restart gracefully with the help of its neighbors. RSVP advertises a Restart Cap object (RSVP RESTART) in hello messages in which restart and recovery times are specified (neither value is 0).
- If you explicitly disable RSVP graceful restart under the **[protocols rsvp]** hierarchy level, the Restart Cap object is advertised with restart and recovery times specified as 0. The restart of neighboring routers is supported (unless helper mode is disabled), but the router itself does not preserve the RSVP forwarding state and cannot recover its control state.
- If after a restart RSVP realizes that no forwarding state has been preserved, the Restart Cap object is advertised with restart and recovery times specified as 0.
- If graceful restart and helper mode are disabled, RSVP graceful restart is completely disabled. The router neither recognizes nor advertises the RSVP graceful restart objects.

You cannot explicitly configure values for the restart and recovery times.

Unlike other protocols, there is no way for RSVP to determine that it has completed a restart procedure, other than a fixed timeout. All RSVP graceful restart procedures are timer-based. A **show rsdp version** command might indicate that the restart is still in progress even if all RSVP sessions are back up and the routes are restored.

---

## Processing the Restart Cap Object

The following assumptions are made about a neighbor based on the Restart Cap object (assuming that a control channel failure can be distinguished unambiguously from a node restart):

- A neighbor that does not advertise the Restart Cap object in its hello messages cannot assist a router with state or label recovery, nor can it perform an RSVP graceful restart.
- After a restart, a neighbor advertising a Restart Cap object with a restart time equal to any value and a recovery time equal to 0 has not preserved its forwarding state. When a recovery time equals 0, the neighbor is considered dead and any states related to this neighbor are purged, regardless of the value of the restart time.
- After a restart, a neighbor advertising its recovery time with a value other than 0 can keep or has kept the forwarding state. If the local router is helping its neighbor with restart or recovery procedures, it sends a Recover Label object to this neighbor.

## Configuring RSVP Graceful Restart

---

The following RSVP graceful restart configurations are possible:

- Graceful restart and helper mode are both enabled (the default).
- Graceful restart is enabled but helper mode is disabled. A router configured in this way can restart gracefully, but cannot help a neighbor with its restart and recovery procedures.
- Graceful restart is disabled but helper mode is enabled. A router configured in this way cannot restart gracefully, but can help a restarting neighbor.
- Graceful restart and helper mode both are disabled. This configuration completely disables RSVP graceful restart (including restart and recovery procedures and helper mode). The router behaves like a router that does not support RSVP graceful restart.



**NOTE:** In order to turn on RSVP graceful restart, you must set the global graceful restart timer to at least 180 seconds.

The following sections describe how to configure RSVP graceful restart:

- [Enabling Graceful Restart for All Routing Protocols on page 548](#)
- [Disabling Graceful Restart for RSVP on page 548](#)
- [Disabling RSVP Helper Mode on page 549](#)
- [Configuring the Maximum Helper Recovery Time on page 549](#)
- [Configuring the Maximum Helper Restart Time on page 549](#)

### Enabling Graceful Restart for All Routing Protocols

To enable graceful restart for RSVP, you need to enable graceful restart for all the protocols that support graceful restart on the router. For more information about graceful restart, see the *Junos OS Routing Protocols Library*.

To enable graceful restart on the router, include the **graceful-restart** statement:

```
graceful-restart;
```

You can include this statement at the following hierarchy levels:

- **[edit routing-options]**
- **[edit logical-systems *logical-system-name* routing-options]**

### Disabling Graceful Restart for RSVP

By default, RSVP graceful restart and RSVP helper mode are enabled when you enable graceful restart. However, you can disable one or both of these capabilities.

To disable RSVP graceful restart and recovery, include the **disable** statement at the **[edit protocols rsvp graceful-restart]** hierarchy level:

```
disable;
```

## Disabling RSVP Helper Mode

To disable RSVP helper mode, include the **helper-disable** statement at the **[edit protocols rsvp graceful-restart]** hierarchy level:

```
helper-disable;
```

## Configuring the Maximum Helper Recovery Time

To configure the amount of time the router retains the state of its RSVP neighbors while they undergo a graceful restart, include the **maximum-helper-recovery-time** statement at the **[edit protocols rsvp graceful-restart]** hierarchy level. This value is applied to all neighboring routers, so it should be based on the time required by the slowest RSVP neighbor to recover.

```
maximum-helper-recovery-time seconds;
```

## Configuring the Maximum Helper Restart Time

To configure the delay between when the router discovers that a neighboring router has gone down and when it declares the neighbor down, include the **maximum-helper-restart-time** statement at the **[edit protocols rsvp graceful-restart]** hierarchy level. This value is applied to all neighboring routers, so it should be based on the time required by the slowest RSVP neighbor to restart.

```
maximum-helper-restart-time seconds;
```



# Configuring RSVP LSP Tunnels

- [RSVP LSP Tunnels Overview on page 551](#)
- [Example: RSVP LSP Tunnel Configuration on page 553](#)
- [Configuring Link Management Protocol Peers on page 571](#)
- [Configuring Link Management Protocol Traffic Engineering Links on page 571](#)
- [Configuring Peer Interfaces in OSPF and RSVP on page 572](#)
- [Defining Label-Switched Paths for the FA-LSP on page 572](#)
- [Establishing FA-LSP Path Information on page 573](#)
- [Option: Tearing Down RSVP LSPs Gracefully on page 573](#)

## RSVP LSP Tunnels Overview

---

A Resource Reservation Protocol (RSVP) label-switched path (LSP) tunnel enables you to send RSVP LSPs inside other RSVP LSPs. This enables a network administrator to provide traffic engineering from one end of the network to the other. A useful application for this feature is to connect customer edge (CE) routers with provider edge (PE) routers by using an RSVP LSP, and then tunnel this edge LSP inside a second RSVP LSP traveling across the network core.

You should have a general understanding of MPLS and label switching concepts. For more information about MPLS, see the *Junos MPLS Applications Configuration Guide*.

An RSVP LSP tunnel adds the concept of a forwarding adjacency, similar to the one used for generalized Multiprotocol Label Switching (GMPLS). (For more information about GMPLS, see *Junos GMPLS Feature Guide*.)

The forwarding adjacency creates a tunneled path for sending data between peer devices in an RSVP LSP network. Once a forwarding adjacency LSP (FA-LSP) has been established, other LSPs can be sent over the FA-LSP by using Constrained Shortest Path First (CSPF), Link Management Protocol (LMP), Open Shortest Path First (OSPF), and RSVP.

To enable an RSVP LSP tunnel, the Junos OS uses the following mechanisms:

- LMP—Originally designed for GMPLS, LMP establishes forwarding adjacencies between RSVP LSP tunnel peers, and maintains and allocates resources for traffic engineering links.

- OSPF extensions—OSPF was designed to route packets to physical and logical interfaces related to a Physical Interface Card (PIC). This protocol has been extended to route packets to virtual peer interfaces defined in an LMP configuration.
- RSVP-TE extensions—RSVP-TE was designed to signal the setup of packet LSPs to physical interfaces. The protocol has been extended to request path setup for packet LSPs traveling to virtual peer interfaces defined in an LMP configuration.



**NOTE:** Beginning with Junos OS Release 15.1, multi-instance support is extended to MPLS RSVP-TE. This support is available only for virtual router instance type. A router can create and participate in multiple independent TE topology partitions, which allows each partitioned TE domain to scale independently. Multi-instance RSVP-TE provides the flexibility to hand pick the control-plane entities that need to be instance-aware, for example, a router can participate in multiple TE instances while still running a single BGP instance.

The Junos OS implementation of MPLS RSVP-TE is scaled to enhance the usability, visibility, configuration, and troubleshooting of LSPs in Junos OS Release 16.1.

These enhancements make the RSVP-TE configuration easier at scale by:

- Ensuring the LSP data-plane readiness during LSP resignaling before traffic traverses the LSP with the RSVP-TE LSP self-ping mechanism.

An LSP should not start to carry traffic unless it is known to have been programmed in the data plane. Data exchange in the LSP data plane, such as LSP ping requests, happens at the ingress router before switching traffic to an LSP, or to its MBB instance. In large networks, this traffic can overwhelm an LSP egress router, as the egress LSP needs to respond to the LSP ping requests. The LSP self-ping mechanism enables the ingress LER to create LSP ping response messages and send them over the LSP data plane. On receiving these messages, the egress LER forwards them to the ingress, indicating the liveliness of the LSP data plane. This ensures that the LSP does not start to carry traffic before the data plane has been programmed.

- Removing the current hard limit of 64K LSPs on an ingress router and scaling the total number of LSPs with RSVP-TE signaled LSPs. There can be up to 64K LSPs configured on a per-egress basis. Earlier, this limit was the aggregate number of LSPs that could be configured on the ingress LER.
- Preventing abrupt tearing down of LSPs by the ingress router because of delay in signaling the LSP at the transit routers.
- Enabling a flexible view of LSP data-sets to facilitate LSP characteristic data visualization.

The following limitations exist for LSP hierarchies:

- Circuit cross-connect (CCC)-based LSPs are not supported.
- Graceful restart is not supported.

- Link protection is not available for FA-LSPs or at the egress point of the forwarding adjacency.
- Point-to-multipoint LSPs are not supported across FA-LSPs.

**Related Documentation**

- [Example: RSVP LSP Tunnel Configuration on page 553](#)

## Example: RSVP LSP Tunnel Configuration

**Figure 50: RSVP LSP Tunnel Topology Diagram**

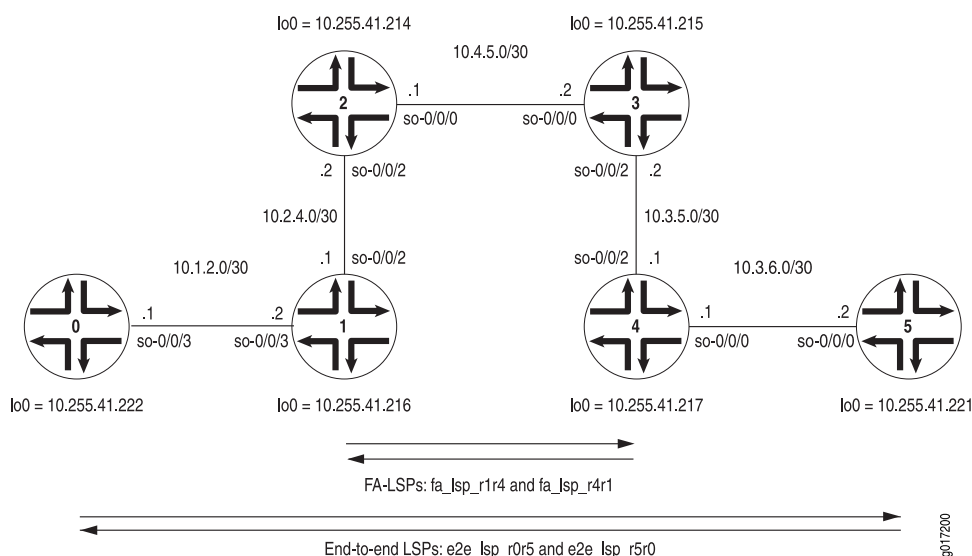


Figure 50 on page 553 shows an end-to-end RSVP LSP called **e2e\_lsp\_r0r5** that originates on Router 0 and terminates on Router 5. In transit, this LSP traverses the FA-LSP **fa\_lsp\_r1r4**. The return path is represented by the end-to-end RSVP LSP **e2e\_lsp\_r5r0** that travels over the FA-LSP **fa\_lsp\_r4r1**.

On Router 0, configure the end-to-end RSVP LSP that travels to Router 5. Use a strict path that traverses Router 1 and the LMP traffic engineering link traveling from Router 1 to Router 4.

```
Router 0 [edit]
interfaces {
  so-0/0/3 {
    unit 0 {
      family inet {
        address 10.1.2.1/30;
      }
      family mpls;
    }
  }
  lo0 {
    unit 0 {
      family inet {
        address 10.255.41.222/32;
      }
    }
  }
}
```

```
    }
    family mpls;
  }
}
routing-options {
  forwarding-table {
    export pplb;
  }
}
protocols {
  rsvp {
    interface all;
    interface fxp0.0 {
      disable;
    }
  }
}
mpls {
  admin-groups {
    fa 1;
    backup 2;
    other 3;
  }
  label-switched-path e2e_lsp_r0r5 { # An end-to-end LSP traveling to Router 5.
    to 10.255.41.221;
    bandwidth 30k;
    primary path-fa; # Reference the requested path here.
  }
  path path-fa { # Configure the strict path here.
    10.1.2.2 strict;
    172.16.30.2 strict; # This traverses the TE link heading to Router 4.
  }
  interface all;
  interface fxp0.0 {
    disable;
  }
  interface so-3/2/1.0 {
    admin-group other;
  }
  interface so-0/0/3.0 {
    admin-group other;
  }
}
ospf {
  traffic-engineering;
  area 0.0.0.0 {
    interface fxp0.0 {
      disable;
    }
    interface all;
  }
}
}
policy-options {
  policy-statement pplb {
    then {
```



```

        load-balance per-packet;
    }
}

```

On Router 1, configure an FA-LSP to reach Router 4. Establish an LMP traffic engineering link and LMP peer relationship with Router 4. Reference the FA-LSP in the traffic engineering link and add the peer interface into both OSPF and RSVP.

When the return path end-to-end LSP arrives at Router 1, the routing platform performs a routing lookup and can forward traffic to Router 0. Make sure you configure OSPF correctly between Routers 0 and 1.

```

Router 1 [edit]
interfaces {
  so-0/0/1 {
    unit 0 {
      family inet {
        address 10.2.3.1/30;
      }
      family mpls;
    }
  }
  so-0/0/2 {
    unit 0 {
      family inet {
        address 10.2.4.1/30;
      }
      family mpls;
    }
  }
  so-0/0/3 {
    unit 0 {
      family inet {
        address 10.1.2.2/30;
      }
      family mpls;
    }
  }
  fe-0/1/2 {
    unit 0 {
      family inet {
        address 10.2.5.1/30;
      }
      family mpls;
    }
  }
  at-1/0/0 {
    atm-options {
      vpi 1;
    }
    unit 0 {
      vci 1.100;
      family inet {
        address 10.2.3.5/30;
      }
    }
  }
}

```

```
        family mpls;
    }
}
routing-options {
    forwarding-table {
        export [ pplb choose_lsp ];
    }
}
protocols {
    rsvp {
        interface all;
        interface fxp0.0 {
            disable;
        }
        peer-interface r4; # Apply the LMP peer interface here.
    }
    mpls {
        admin-groups {
            fa 1;
            backup 2;
            other 3;
        }
        label-switched-path fa_lsp_r1r4 { # Configure your FA-LSP to Router 4 here.
            to 10.255.41.217;
            bandwidth 400k;
            primary path_r1r4; # Apply the FA-LSP path here.
        }
        path path_r1r4 { # Configure the FA-LSP path here.
            10.2.4.2;
            10.4.5.2;
            10.3.5.1;
        }
        interface so-0/0/3.0 {
            admin-group other;
        }
        interface so-0/0/1.0 {
            admin-group fa;
        }
        interface at-1/0/0.0 {
            admin-group backup;
        }
        interface fe-0/1/2.0 {
            admin-group backup;
        }
        interface so-0/0/2.0 {
            admin-group fa;
        }
    }
}
ospf {
    traffic-engineering;
    area 0.0.0.0 {
        interface fxp0.0 {
            disable;
        }
        interface all;
```

```

    peer-interface r4; # Apply the LMP peer interface here.
  }
}
link-management { # Configure LMP statements here.
  te-link link_r1r4 { # Assign a name to the TE link here.
    local-address 172.16.30.1; # Configure a local address for the TE link.
    remote-address 172.16.30.2; # Configure a remote address for the TE link.
    te-metric 1; # Manually set a metric here if you are not relying on CSPF.
    label-switched-path fa_lsp_r1r4; # Reference the FA-LSP here.
  }
  peer r4 { # Configure LMP peers here.
    address 10.255.41.217; # Configure the loopback address of your peer here.
    te-link link_r1r4; # Apply the LMP TE link here.
  }
}
}
policy-options {
  policy-statement choose_lsp {
    term A {
      from community choose_e2e_lsp;
      then {
        install-nexthop strict lsp e2e_lsp_r1r4;
        accept;
      }
    }
    term B {
      from community choose_fa_lsp;
      then {
        install-nexthop strict lsp fa_lsp_r1r4;
        accept;
      }
    }
  }
}
policy-statement pplb {
  then {
    load-balance per-packet;
  }
}
community choose_e2e_lsp members 1000:1000;
community choose_fa_lsp members 2000:2000;
community set_e2e_lsp members 1000:1000;
community set_fa_lsp members 2000:2000;
}

```

On Router 2, configure OSPF, MPLS, and RSVP on all interfaces that transport the FA-LSPs across the core network.

```

Router 2 [edit]
interfaces {
  so-0/0/0 {
    unit 0 {
      family inet {
        address 10.4.5.1/30;
      }
      family mpls;
    }
  }
}

```

```
}
so-0/0/1 {
  unit 0 {
    family inet {
      address 10.1.4.2/30;
    }
    family mpls;
  }
}
so-0/0/2 {
  unit 0 {
    family inet {
      address 10.2.4.2/30;
    }
    family mpls;
  }
}
fe-0/1/2 {
  unit 0 {
    family inet {
      address 10.3.4.2/30;
    }
    family mpls;
  }
}
}
routing-options {
  forwarding-table {
    export pplb;
  }
}
protocols { # OSPF, MPLS, and RSVP form the core backbone for the FA-LSPs.
  rsvp {
    interface all;
    interface fxp0.0 {
      disable;
    }
  }
  mpls {
    admin-groups {
      fa 1;
      backup 2;
      other 3;
    }
    path path_r1 {
      10.2.4.1;
    }
    path path_r3r4 {
      10.4.5.2;
      10.3.5.1;
    }
    interface all;
    interface fxp0.0 {
      disable;
    }
    interface so-0/0/1.0 {
```

```

        admin-group other;
    }
    interface fe-0/1/2.0 {
        admin-group backup;
    }
    interface so-0/0/2.0 {
        admin-group fa;
    }
    interface so-0/0/0.0 {
        admin-group fa;
    }
}
ospf {
    traffic-engineering;
    area 0.0.0.0 {
        interface fxp0.0 {
            disable;
        }
        interface all;
    }
}
}
policy-options {
    policy-statement pplb {
        then {
            load-balance per-packet;
        }
    }
}
}

```

On Router 3, configure OSPF, MPLS, and RSVP on all interfaces that transport the FA-LSPs across the core network.

```

Router 3 [edit]
interfaces {
    so-0/0/0 {
        unit 0 {
            family inet {
                address 10.4.5.2/30;
            }
            family mpls;
        }
    }
    so-0/0/1 {
        unit 0 {
            family inet {
                address 10.5.6.1/30;
            }
            family mpls;
        }
    }
    so-0/0/2 {
        unit 0 {
            family inet {
                address 10.3.5.2/30;
            }
        }
    }
}

```

```
        family mpls;
    }
}
fe-0/1/2 {
    unit 0 {
        family inet {
            address 10.2.5.2/30;
        }
        family mpls;
    }
}
}
routing-options {
    forwarding-table {
        export pplb;
    }
}
protocols { # OSPF, MPLS, and RSVP form the core backbone for the FA-LSPs.
    rsvp {
        interface all;
        interface fxp0.0 {
            disable;
        }
    }
    mpls {
        admin-groups {
            fa 1;
            backup 2;
            other 3;
        }
        path path_r4 {
            10.3.5.1;
        }
        path path_r2r1 {
            10.4.5.1;
            10.2.4.1;
        }
        interface all;
        interface fxp0.0 {
            disable;
        }
        interface so-0/0/2.0 {
            admin-group fa;
        }
        interface fe-0/1/2.0 {
            admin-group backup;
        }
        interface so-0/0/1.0 {
            admin-group other;
        }
        interface so-0/0/0.0 {
            admin-group fa;
        }
    }
}
ospf {
    traffic-engineering;
```

```

        area 0.0.0.0 {
            interface fxp0.0 {
                disable;
            }
            interface all;
        }
    }
}
policy-options {
    policy-statement pplb {
        then {
            load-balance per-packet;
        }
    }
}
}

```

On Router 4, configure a return path FA-LSP to reach Router 1. Establish an LMP traffic engineering link and LMP peer relationship with Router 1. Reference the FA-LSP in the traffic engineering link and add the peer interface into both OSPF and RSVP.

When the initial end-to-end LSP arrives at Router 4, the routing platform performs a routing lookup and can forward traffic to Router 5. Make sure you configure OSPF correctly between Router 4 and Router 5.

```

Router 4 [edit]
interfaces {
    so-0/0/0 {
        unit 0 {
            family inet {
                address 10.3.6.1/30;
            }
            family mpls;
        }
    }
    so-0/0/1 {
        unit 0 {
            family inet {
                address 10.2.3.2/30;
            }
            family mpls;
        }
    }
    so-0/0/2 {
        unit 0 {
            family inet {
                address 10.3.5.1/30;
            }
            family mpls;
        }
    }
    fe-0/1/2 {
        unit 0 {
            family inet {
                address 10.3.4.1/30;
            }
            family mpls;
        }
    }
}

```

```
    }
  }
  at-1/0/0 {
    atm-options {
      vpi 1;
    }
    unit 0 {
      vci 1.100;
      family inet {
        address 10.2.3.6/30;
      }
      family mpls;
    }
  }
}
routing-options {
  forwarding-table {
    export [ pplb choose_lsp ];
  }
}
protocols {
  rsvp {
    interface all;
    interface fxp0.0 {
      disable;
    }
    peer-interface r1; # Apply the LMP peer interface here.
  }
  mpls {
    admin-groups {
      fa 1;
      backup 2;
      other 3;
    }
    label-switched-path fa_lsp_r4r1 { # Configure your FA-LSP here.
      to 10.255.41.216;
      bandwidth 400k;
      primary path_r4r1; # Apply the FA-LSP path here.
    }
    path path_r4r1 { # Configure the FA-LSP path here.
      10.3.5.2;
      10.4.5.1;
      10.2.4.1;
    }
    interface all;
    interface fxp0.0 {
      disable;
    }
    interface at-1/0/0.0 {
      admin-group backup;
    }
    interface so-0/0/2.0 {
      admin-group fa;
    }
    interface fe-0/1/2.0 {
      admin-group backup;
    }
  }
}
```



```

    }
    interface so-0/0/0.0 {
        admin-group other;
    }
    interface so-0/0/1.0 {
        admin-group fa;
    }
}
ospf {
    traffic-engineering;
    area 0.0.0.0 {
        interface fxp0.0 {
            disable;
        }
        interface all;
        peer-interface r1; # Apply the LMP peer interface here.
    }
}
link-management { # Configure LMP statements here.
    te-link link_r4r1 { # Assign a name to the TE link here.
        local-address 172.16.30.2; # Configure a local address for the TE link.
        remote-address 172.16.30.1; # Configure a remote address for the TE link.
        te-metric 1; # Manually set a metric here if you are not relying on CSPF.
        label-switched-path fa_lsp_r4r1; # Reference the FA-LSP here.
    }
    peer r1 { # Configure LMP peers here.
        address 10.255.41.216; # Configure the loopback address of your peer here.
        te-link link_r4r1; # Apply the LMP TE link here.
    }
}
}
policy-options {
    policy-statement choose_lsp {
        term A {
            from community choose_e2e_lsp;
            then {
                install-nexthop strict lsp e2e_lsp_r4r1;
                accept;
            }
        }
        term B {
            from community choose_fa_lsp;
            then {
                install-nexthop strict lsp fa_lsp_r4r1;
                accept;
            }
        }
    }
    policy-statement pplb {
        then {
            load-balance per-packet;
        }
    }
}
community choose_e2e_lsp members 1000:1000;
community choose_fa_lsp members 2000:2000;
community set_e2e_lsp members 1000:1000;

```

```
community set_fa_lsp members 2000:2000;
}
```

On Router 5, configure the return path end-to-end RSVP LSP that travels to Router 0. Use a strict path that traverses Router 4 and the LMP traffic engineering link traveling from Router 4 to Router 1.

```
Router 5 [edit]
interfaces {
  so-0/0/2 {
    unit 0 {
      family inet {
        address 10.3.6.2/30;
      }
      family mpls;
    }
  }
  lo0 {
    unit 0 {
      family inet {
        address 10.255.41.221/32;
      }
    }
  }
}
routing-options {
  forwarding-table {
    export pplb;
  }
}
protocols {
  rsvp {
    interface all;
    interface fxp0.0 {
      disable;
    }
  }
}
mpls {
  admin-groups {
    fa 1;
    backup 2;
    other 3;
  }
  label-switched-path e2e_lsp_r5r0 { # An end-to-end LSP returning to Router 0.
    to 10.255.41.222;
    bandwidth 30k;
    primary path-fa; # Reference the requested path here.
  }
  path path-fa { # Configure the strict path here.
    10.3.6.1 strict;
    172.16.30.1 strict; # This traverses the TE link heading to Router 1.
  }
  interface all;
  interface fxp0.0 {
    disable;
  }
}
```

```

interface so-0/0/2.0 {
  admin-group other;
}
interface so-0/0/1.0 {
  admin-group other;
}
}
ospf {
  traffic-engineering;
  area 0.0.0.0 {
    interface fxp0.0 {
      disable;
    }
    interface all;
  }
}
}
policy-options {
  policy-statement pplb {
    then {
      load-balance per-packet;
    }
  }
}
}

```

## Verifying Your Work

To verify that your RSVP LSP tunnel is working correctly, issue the following commands:

- **show ted database (extensive)**
- **show rsvp session name (extensive)**
- **show link-management**
- **show link-management te-link name (detail)**

To see these commands used with the configuration example, see the following sections:

- [Router 0 on page 565](#)
- [Router 1 on page 569](#)

### Router 0

On Router 0, you can verify that the FA-LSPs appear as valid paths in the traffic engineering database. In this case, look for the paths from Router 1 (**10.255.41.216**) and Router 4 (**10.255.41.217**) that reference the LMP traffic engineering link addresses of **172.16.30.1** and **172.16.30.2**. You can also issue the **show rsvp session extensive** command to look for the path of the end-to-end LSP as it travels to Router 5 over the FA-LSP.

```

user@router0> show ted database
TED database: 0 ISIS nodes 8 INET nodes
ID                               Type Age(s) LnkIn LnkOut Protocol
10.255.41.214                    Rtr   486     4     4  OSPF(0.0.0.0)
  To: 10.255.41.222, Local: 10.1.4.2, Remote: 10.1.4.1
  To: 10.255.41.216, Local: 10.2.4.2, Remote: 10.2.4.1

```

```

To: 10.255.41.215, Local: 10.4.5.1, Remote: 10.4.5.2
To: 10.3.4.1-1, Local: 10.3.4.2, Remote: 0.0.0.0
ID                               Type Age(s) LnkIn LnkOut Protocol
10.255.41.215                    Rtr   187    4    4 OSPF(0.0.0.0)
To: 10.255.41.214, Local: 10.4.5.2, Remote: 10.4.5.1
To: 10.255.41.217, Local: 10.3.5.2, Remote: 10.3.5.1
To: 10.255.41.221, Local: 10.5.6.1, Remote: 10.5.6.2
To: 10.2.5.1-1, Local: 10.2.5.2, Remote: 0.0.0.0
ID                               Type Age(s) LnkIn LnkOut Protocol
10.255.41.216                    Rtr   396    6    6 OSPF(0.0.0.0)
To: 10.255.41.222, Local: 10.1.2.2, Remote: 10.1.2.1
To: 10.255.41.214, Local: 10.2.4.1, Remote: 10.2.4.2
To: 10.255.41.217, Local: 10.2.3.1, Remote: 10.2.3.2
To: 10.255.41.217, Local: 172.16.30.1, Remote: 172.16.30.2
To: 10.255.41.217, Local: 10.2.3.5, Remote: 10.2.3.6
To: 10.2.5.1-1, Local: 10.2.5.1, Remote: 0.0.0.0
ID                               Type Age(s) LnkIn LnkOut Protocol
10.255.41.217                    Rtr   404    6    6 OSPF(0.0.0.0)
To: 10.255.41.216, Local: 10.2.3.2, Remote: 10.2.3.1
To: 10.255.41.216, Local: 172.16.30.2, Remote: 172.16.30.1
To: 10.255.41.216, Local: 10.2.3.6, Remote: 10.2.3.5
To: 10.255.41.215, Local: 10.3.5.1, Remote: 10.3.5.2
To: 10.255.41.221, Local: 10.3.6.1, Remote: 10.3.6.2
To: 10.3.4.1-1, Local: 10.3.4.1, Remote: 0.0.0.0
ID                               Type Age(s) LnkIn LnkOut Protocol
10.255.41.221                    Rtr   481    2    2 OSPF(0.0.0.0)
To: 10.255.41.215, Local: 10.5.6.2, Remote: 10.5.6.1
To: 10.255.41.217, Local: 10.3.6.2, Remote: 10.3.6.1
ID                               Type Age(s) LnkIn LnkOut Protocol
10.255.41.222                    Rtr  2883    2    2 OSPF(0.0.0.0)
To: 10.255.41.216, Local: 10.1.2.1, Remote: 10.1.2.2
To: 10.255.41.214, Local: 10.1.4.1, Remote: 10.1.4.2

user@router0> show ted database 10.255.41.216 extensive
TED database: 0 ISIS nodes 8 INET nodes
NodeID: 10.255.41.216
Type: Rtr, Age: 421 secs, LinkIn: 6, LinkOut: 6
Protocol: OSPF(0.0.0.0)
To: 10.255.41.222, Local: 10.1.2.2, Remote: 10.1.2.1
Color: 0x8 other
Metric: 1
Static BW: 155.52Mbps
Reservable BW: 155.52Mbps
Available BW [priority] bps:
    [0] 155.4Mbps    [1] 155.4Mbps    [2] 155.4Mbps    [3] 155.4Mbps
    [4] 155.4Mbps    [5] 155.4Mbps    [6] 155.4Mbps    [7] 155.4Mbps
Interface Switching Capability Descriptor(1):
Switching type: Packet
Encoding type: Packet
Maximum LSP BW [priority] bps:
    [0] 155.4Mbps    [1] 155.4Mbps    [2] 155.4Mbps    [3] 155.4Mbps
    [4] 155.4Mbps    [5] 155.4Mbps    [6] 155.4Mbps    [7] 155.4Mbps
To: 10.255.41.214, Local: 10.2.4.1, Remote: 10.2.4.2
Color: 0x2 fa
Metric: 1
Static BW: 155.52Mbps
Reservable BW: 155.52Mbps
Available BW [priority] bps:
    [0] 155.12Mbps   [1] 155.12Mbps   [2] 155.12Mbps   [3] 155.12Mbps
    [4] 155.12Mbps   [5] 155.12Mbps   [6] 155.12Mbps   [7] 155.12Mbps
Interface Switching Capability Descriptor(1):

```

```

Switching type: Packet
Encoding type: Packet
Maximum LSP BW [priority] bps:
  [0] 155.12Mbps  [1] 155.12Mbps  [2] 155.12Mbps  [3] 155.12Mbps
  [4] 155.12Mbps  [5] 155.12Mbps  [6] 155.12Mbps  [7] 155.12Mbps
To: 10.255.41.217, Local: 10.2.3.1, Remote: 10.2.3.2
Color: 0x2 fa
Metric: 1
Static BW: 155.52Mbps
Reservable BW: 155.52Mbps
Available BW [priority] bps:
  [0] 155.52Mbps  [1] 155.52Mbps  [2] 155.52Mbps  [3] 155.52Mbps
  [4] 155.52Mbps  [5] 155.52Mbps  [6] 155.52Mbps  [7] 155.52Mbps
Interface Switching Capability Descriptor(1):
  Switching type: Packet
  Encoding type: Packet
  Maximum LSP BW [priority] bps:
    [0] 155.52Mbps  [1] 155.52Mbps  [2] 155.52Mbps  [3] 155.52Mbps
    [4] 155.52Mbps  [5] 155.52Mbps  [6] 155.52Mbps  [7] 155.52Mbps
To: 10.255.41.217, Local: 172.16.30.1, Remote: 172.16.30.2
Metric: 1
Static BW: 400kbps
Reservable BW: 400kbps
Available BW [priority] bps:
  [0] 370kbps    [1] 370kbps    [2] 370kbps    [3] 370kbps
  [4] 370kbps    [5] 370kbps    [6] 370kbps    [7] 370kbps
Interface Switching Capability Descriptor(1):
  Switching type: Packet
  Encoding type: Packet
  Maximum LSP BW [priority] bps:
    [0] 370kbps    [1] 370kbps    [2] 370kbps    [3] 370kbps
    [4] 370kbps    [5] 370kbps    [6] 370kbps    [7] 370kbps
To: 10.255.41.217, Local: 10.2.3.5, Remote: 10.2.3.6
Color: 0x4 backup
Metric: 1
Static BW: 155.52Mbps
Reservable BW: 155.52Mbps
Available BW [priority] bps:
  [0] 155.52Mbps  [1] 155.52Mbps  [2] 155.52Mbps  [3] 155.52Mbps
  [4] 155.52Mbps  [5] 155.52Mbps  [6] 155.52Mbps  [7] 155.52Mbps
Interface Switching Capability Descriptor(1):
  Switching type: Packet
  Encoding type: Packet
  Maximum LSP BW [priority] bps:
    [0] 155.52Mbps  [1] 155.52Mbps  [2] 155.52Mbps  [3] 155.52Mbps
    [4] 155.52Mbps  [5] 155.52Mbps  [6] 155.52Mbps  [7] 155.52Mbps
To: 10.2.5.1-1, Local: 10.2.5.1, Remote: 0.0.0.0
Color: 0x4 backup
Metric: 1
Static BW: 100Mbps
Reservable BW: 100Mbps
Available BW [priority] bps:
  [0] 100Mbps    [1] 100Mbps    [2] 100Mbps    [3] 100Mbps
  [4] 100Mbps    [5] 100Mbps    [6] 100Mbps    [7] 100Mbps
Interface Switching Capability Descriptor(1):
  Switching type: Packet
  Encoding type: Packet
  Maximum LSP BW [priority] bps:
    [0] 100Mbps    [1] 100Mbps    [2] 100Mbps    [3] 100Mbps
    [4] 100Mbps    [5] 100Mbps    [6] 100Mbps    [7] 100Mbps

```

```

user@router0> show ted database 10.255.41.217 extensive
TED database: 0 ISIS nodes 8 INET nodes
NodeID: 10.255.41.217
Type: Rtr, Age: 473 secs, LinkIn: 6, LinkOut: 6
Protocol: OSPF(0.0.0.0)
  To: 10.255.41.216, Local: 10.2.3.2, Remote: 10.2.3.1
    Color: 0x2 fa
    Metric: 1
    Static BW: 155.52Mbps
    Reservable BW: 155.52Mbps
    Available BW [priority] bps:
      [0] 155.52Mbps [1] 155.52Mbps [2] 155.52Mbps [3] 155.52Mbps
      [4] 155.52Mbps [5] 155.52Mbps [6] 155.52Mbps [7] 155.52Mbps
    Interface Switching Capability Descriptor(1):
      Switching type: Packet
      Encoding type: Packet
      Maximum LSP BW [priority] bps:
        [0] 155.52Mbps [1] 155.52Mbps [2] 155.52Mbps [3] 155.52Mbps
        [4] 155.52Mbps [5] 155.52Mbps [6] 155.52Mbps [7] 155.52Mbps
  To: 10.255.41.216, Local: 172.16.30.2, Remote: 172.16.30.1
    Metric: 1
    Static BW: 400kbps
    Reservable BW: 400kbps
    Available BW [priority] bps:
      [0] 370kbps [1] 370kbps [2] 370kbps [3] 370kbps
      [4] 370kbps [5] 370kbps [6] 370kbps [7] 370kbps
    Interface Switching Capability Descriptor(1):
      Switching type: Packet
      Encoding type: Packet
      Maximum LSP BW [priority] bps:
        [0] 370kbps [1] 370kbps [2] 370kbps [3] 370kbps
        [4] 370kbps [5] 370kbps [6] 370kbps [7] 370kbps
  To: 10.255.41.216, Local: 10.2.3.6, Remote: 10.2.3.5
    Color: 0x4 backup
    Metric: 1
    Static BW: 155.52Mbps
    Reservable BW: 155.52Mbps
    Available BW [priority] bps:
      [0] 155.52Mbps [1] 155.52Mbps [2] 155.52Mbps [3] 155.52Mbps
      [4] 155.52Mbps [5] 155.52Mbps [6] 155.52Mbps [7] 155.52Mbps
    Interface Switching Capability Descriptor(1):
      Switching type: Packet
      Encoding type: Packet
      Maximum LSP BW [priority] bps:
        [0] 155.52Mbps [1] 155.52Mbps [2] 155.52Mbps [3] 155.52Mbps
        [4] 155.52Mbps [5] 155.52Mbps [6] 155.52Mbps [7] 155.52Mbps
  To: 10.255.41.215, Local: 10.3.5.1, Remote: 10.3.5.2
    Color: 0x2 fa
    Metric: 1
    Static BW: 155.52Mbps
    Reservable BW: 155.52Mbps
    Available BW [priority] bps:
      [0] 155.12Mbps [1] 155.12Mbps [2] 155.12Mbps [3] 155.12Mbps
      [4] 155.12Mbps [5] 155.12Mbps [6] 155.12Mbps [7] 155.12Mbps
    Interface Switching Capability Descriptor(1):
      Switching type: Packet
      Encoding type: Packet
      Maximum LSP BW [priority] bps:
        [0] 155.12Mbps [1] 155.12Mbps [2] 155.12Mbps [3] 155.12Mbps
        [4] 155.12Mbps [5] 155.12Mbps [6] 155.12Mbps [7] 155.12Mbps
  To: 10.255.41.221, Local: 10.3.6.1, Remote: 10.3.6.2

```

```

Color: 0x8 other
Metric: 1
Static BW: 155.52Mbps
Reservable BW: 155.52Mbps
Available BW [priority] bps:
    [0] 155.52Mbps    [1] 155.52Mbps    [2] 155.52Mbps    [3] 155.52Mbps
    [4] 155.52Mbps    [5] 155.52Mbps    [6] 155.52Mbps    [7] 155.52Mbps
Interface Switching Capability Descriptor(1):
    Switching type: Packet
    Encoding type: Packet
    Maximum LSP BW [priority] bps:
        [0] 155.52Mbps    [1] 155.52Mbps    [2] 155.52Mbps    [3] 155.52Mbps
        [4] 155.52Mbps    [5] 155.52Mbps    [6] 155.52Mbps    [7] 155.52Mbps
To: 10.3.4.1-1, Local: 10.3.4.1, Remote: 0.0.0.0
Color: 0x4 backup
Metric: 1
Static BW: 100Mbps
Reservable BW: 100Mbps
Available BW [priority] bps:
    [0] 100Mbps        [1] 100Mbps        [2] 100Mbps        [3] 100Mbps
    [4] 100Mbps        [5] 100Mbps        [6] 100Mbps        [7] 100Mbps
Interface Switching Capability Descriptor(1):
    Switching type: Packet
    Encoding type: Packet
    Maximum LSP BW [priority] bps:
        [0] 100Mbps        [1] 100Mbps        [2] 100Mbps        [3] 100Mbps
        [4] 100Mbps        [5] 100Mbps        [6] 100Mbps        [7] 100Mbps

user@router0> show rsvp session name e2e_lsp_r0r5 extensive
Ingress RSVP: 1 sessions
10.255.41.221
    From: 10.255.41.222, LSPstate: Up, ActiveRoute: 2
    LSPname: e2e_lsp_r0r5, LSPpath: Primary
    Suggested label received: -, Suggested label sent: -
    Recovery label received: -, Recovery label sent: 101584
    Resv style: 1 FF, Label in: -, Label out: 101584
    Time left: -, Since: Wed Sep 7 19:02:56 2005
    Tspec: rate 30kbps size 30kbps peak Infbps m 20 M 1500
    Port number: sender 2 receiver 29458 protocol 0
    PATH rcvfrom: localclient
    Adspec: sent MTU 1500
    Path MTU: received 1500
    PATH sentto: 10.1.2.2 (so-0/0/3.0) 15 pkts
    RESV rcvfrom: 10.1.2.2 (so-0/0/3.0) 16 pkts
    Explot route: 10.1.2.2 172.16.30.2 10.3.6.2
    Record route: <self> 10.1.2.2 172.16.30.2 10.3.6.2
Total 1 displayed, Up 1, Down 0

Egress RSVP: 1 sessions
Total 0 displayed, Up 0, Down 0

Transit RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

### Router 1

On Router 1, verify that your LMP traffic engineering link configuration is working and that the end-to-end LSP is traversing the traffic engineering link by issuing the **show**

**link-management** set of commands. You can also issue the **show rsvp session extensive** command to confirm that the FA-LSP is operational.

```
user@router1> show link-management
```

```
Peer name: r4 , System identifier: 10758
```

```
State: Up, Control address: 10.255.41.217
```

```
TE links:
```

```
link_r1r4
```

```
TE link name: link_r1r4, State: Up
```

```
Local identifier: 16299, Remote identifier: 0, Local address: 172.16.30.1, Remote address: 172.16.30.2,
```

```
Encoding: Packet, Switching: Packet, Minimum bandwidth: 0bps, Maximum bandwidth: 400kbps,
```

```
Total bandwidth: 400kbps, Available bandwidth: 370kbps
```

| Name        | State | Local ID | Remote ID | Bandwidth Used | LSP-name         |
|-------------|-------|----------|-----------|----------------|------------------|
| fa_lsp_r1r4 | Up    | 22642    | 0         | 400kbps        | Yes e2e_lsp_r0r5 |

```
user@router1> show link-management te-link name link_r1r4 detail
```

```
TE link name: link_r1r4, State: Up
```

```
Local identifier: 16299, Remote identifier: 0, Local address: 172.16.30.1, Remote address: 172.16.30.2,
```

```
Encoding: Packet, Switching: Packet, Minimum bandwidth: 0bps, Maximum bandwidth: 400kbps,
```

```
Total bandwidth: 400kbps, Available bandwidth: 370kbps
```

```
Resource: fa_lsp_r1r4, Type: LSP, System identifier: 2147483683, State: Up, Local identifier: 22642,
```

```
Remote identifier: 0
```

```
Total bandwidth: 400kbps, Unallocated bandwidth: 370kbps
```

```
Traffic parameters: Encoding: Packet, Switching: Packet, Granularity: Unknown
```

```
Number of allocations: 1, In use: Yes
```

```
LSP name: e2e_lsp_r0r5, Allocated bandwidth: 30kbps
```

```
user@router1> show rsvp session name fa_lsp_r1r4 extensive
```

```
Ingress RSVP: 1 sessions
```

```
10.255.41.217
```

```
From: 10.255.41.216, LSPstate: Up, ActiveRoute: 0
```

```
LSPname: fa_lsp_r1r4, LSPpath: Primary
```

```
Suggested label received: -, Suggested label sent: -
```

```
Recovery label received: -, Recovery label sent: 100816
```

```
Resv style: 1 FF, Label in: -, Label out: 100816
```

```
Time left: -, Since: Wed Sep 7 19:02:33 2005
```

```
Tspec: rate 400kbps size 400kbps peak Infbps m 20 M 1500
```

```
Port number: sender 2 receiver 5933 protocol 0
```

```
PATH rcvfrom: localclient
```

```
Adspec: sent MTU 1500
```

```
Path MTU: received 1500
```

```
PATH sentto: 10.2.4.2 (so-0/0/2.0) 28 pkts
```

```
RESV rcvfrom: 10.2.4.2 (so-0/0/2.0) 26 pkts
```

```
Explot route: 10.2.4.2 10.4.5.2 10.3.5.1
```

```
Record route: <self> 10.2.4.2 10.4.5.2 10.3.5.1
```

```
Total 1 displayed, Up 1, Down 0
```

```
Egress RSVP: 1 sessions
```

```
Total 0 displayed, Up 0, Down 0
```

```
Transit RSVP: 2 sessions
```

```
Total 0 displayed, Up 0, Down 0
```



- Related Documentation**
- [RSVP LSP Tunnels Overview on page 551](#)
  - [Configuring Link Management Protocol Peers on page 571](#)
  - [Configuring Link Management Protocol Traffic Engineering Links on page 571](#)
  - [Configuring Peer Interfaces in OSPF and RSVP on page 572](#)
  - [Defining Label-Switched Paths for the FA-LSP on page 572](#)
  - [Establishing FA-LSP Path Information on page 573](#)
  - [Option: Tearing Down RSVP LSPs Gracefully on page 573](#)

## Configuring Link Management Protocol Peers

After you set up traffic engineering links, configure LMP network peers with the **peer** *peer-name* statement at the **[edit protocols link-management]** hierarchy level. A peer is the network device with which your routing platform communicates and establishes an FA-LSP. Designate a peer name, configure the peer router ID as the address (often a loopback address), and apply the traffic engineering link to be associated with this peer. Remember to configure both sides of a peering relationship to enable bidirectional communication.

Unlike GMPLS, you must not configure a control channel for a peer. If you include a control channel, the commit operation fails.

```
[edit]
protocols {
  link-management {
    peer peer-name { # Configure the name of your network peer.
      address ip-address; # Include the router ID of the peer.
      te-link te-link-name; # Assign a TE link to this peer.
    }
  }
}
```

- Related Documentation**
- [Example: RSVP LSP Tunnel Configuration on page 553](#)

## Configuring Link Management Protocol Traffic Engineering Links

To begin your RSVP LSP tunnel configuration, configure LMP traffic engineering links on both the ingress and egress routing platforms. Because traffic engineering links define a unidirectional connection between peer devices, you must configure traffic engineering links in both directions between peers to enable the bidirectional transport of packets.

To configure traffic engineering links in LMP, include the **te-link** *te-link-name* statement at the **[edit protocols link-management]** hierarchy level. Define the traffic engineering link options shown below, especially the label-switched path to be used as the FA-LSP to reach the peer. Optionally, you can specify the traffic engineering metric for the traffic engineering link (TE link). By default, the traffic engineering metric is derived from the CSPF computation.

```
[edit]
protocols {
  link-management {
    te-link te-link-name { # Name of the TE link.
      label-switched-path lsp-name; # LSP used for the forwarding adjacency.
      local-address ip-address; # Local IP address associated with the TE link.
      remote-address ip-address; # Remote IP address mapped to the TE link.
      te-metric value; # Traffic engineering metric used for the TE link.
    }
  }
}
```

**Related Documentation** • [Example: RSVP LSP Tunnel Configuration on page 553](#)

## Configuring Peer Interfaces in OSPF and RSVP

After you establish LMP peers, you must add peer interfaces to OSPF and RSVP. A peer interface is a virtual interface used to support the control adjacency between two peers.

The peer interface name must match the **peer *peer-name*** statement configured in LMP at the **[edit protocols link-management]** hierarchy level. Because actual protocol packets are sent and received by peer interfaces, the peer interfaces can be signaled and advertised to peers like any other physical interface configured for OSPF and RSVP. To configure OSPF routing for LMP peers, include the **peer-interface** statement at the **[edit protocols ospf area *area-number*]** hierarchy level. To configure RSVP signaling for LMP peers, include the **peer-interface** statement at the **[edit protocols rsvp]** hierarchy level.

```
[edit]
protocols {
  rsvp {
    peer-interface peer-name { # Configure the name of your LMP peer.
    }
  }
  ospf {
    area area-number {
      peer-interface peer-name { # Configure the name of your LMP peer.
      }
    }
  }
}
```

**Related Documentation** • [Example: RSVP LSP Tunnel Configuration on page 553](#)

## Defining Label-Switched Paths for the FA-LSP

Next, define your FA-LSP by including the **label-switched-path** statement at the **[edit protocols mpls]** hierarchy level. Include the router ID of the peer in the **to** statement at the **[edit protocols mpls label-switched-path]** hierarchy level. Because packet LSPs are unidirectional, you must create one FA-LSP to reach the peer and a second FA-LSP to return from the peer.

```
[edit]
protocols {
  mpls {
    label-switched-path lsp-name {
      from ip-address;
      to ip-address;
      primary path-name;
      secondary path-name;
      no-cspf; # This statement to disable CSPF is optional.
    }
  }
}
```

**Related Documentation** • [Example: RSVP LSP Tunnel Configuration on page 553](#)

## Establishing FA-LSP Path Information

When you configure explicit LSP paths for an FA-LSP, you must use the traffic engineering link remote address as your next-hop address. When CSPF is supported, you can use any path option you wish. However, when CSPF is disabled with the **no-cspf** statement at the **[edit protocols mpls label-switched-path *lsp-name*]** hierarchy level, you must use strict paths.

```
[edit]
protocols {
  mpls {
    path path-name {
      next-hop-address (strict | loose);
    }
  }
}
```



**NOTE:** If the end-to-end LSP originates on the same routing platform as the FA-LSP, you must disable CSPF and use strict paths.

**Related Documentation** • [Example: RSVP LSP Tunnel Configuration on page 553](#)

## Option: Tearing Down RSVP LSPs Gracefully

You can tear down an RSVP LSP in a two-step process that gracefully withdraws the RSVP session used by the LSP. For all neighbors that support graceful teardown, a request for the teardown is sent by the routing platform to the destination endpoint for the LSP and all RSVP neighbors in the path. The request is included within the **ADMIN\_STATUS** field of the RSVP packet. When neighbors receive the request, they prepare for the RSVP session to be withdrawn. A second message is sent by the routing platform to complete the teardown of the RSVP session. If a neighbor does not support graceful teardown, the request is handled as a standard session teardown rather than a graceful one.

To perform a graceful teardown of an RSVP session, issue the **clear rsvp session gracefully** command. Optionally, you can specify the source and destination address of the RSVP session, the LSP identifier of the RSVP sender, and the tunnel identifier of the RSVP session. To use these qualifiers, include the **connection-source**, **connection-destination**, **lsp-id**, and **tunnel-id** options when you issue the **clear rsvp session gracefully** command.

You can also configure the amount of time that the routing platform waits for neighbors to receive the graceful teardown request before initiating the actual teardown by including the **graceful-deletion-timeout** statement at the **[edit protocols rsvp]** hierarchy level. The default graceful deletion timeout value is 30 seconds, with a minimum value of 1 second and a maximum value of 300 seconds. To view the current value configured for graceful deletion timeout, issue the **show rsvp version** operational mode command.

**Related  
Documentation**

- [Example: RSVP LSP Tunnel Configuration on page 553](#)

## PART 4

# Configuring LDP

- [LDP Overview on page 577](#)
- [Configuring LDP on page 587](#)



## CHAPTER 14

# LDP Overview

- [LDP Introduction on page 577](#)
- [Supported LDP Standards on page 578](#)
- [Junos OS LDP Protocol Implementation on page 578](#)
- [LDP Operation on page 579](#)
- [LDP Message Types on page 579](#)
- [Discovery Messages on page 580](#)
- [Session Messages on page 581](#)
- [Advertisement Messages on page 581](#)
- [Notification Messages on page 581](#)
- [Tunneling LDP LSPs in RSVP LSPs on page 582](#)
- [Tunneling LDP LSPs in RSVP LSPs Overview on page 582](#)
- [Label Operations on page 583](#)
- [LDP Session Protection on page 584](#)
- [LDP Native IPv6 Support Overview on page 585](#)
- [Longest Match Support for LDP Overview on page 585](#)

## LDP Introduction

---

The Label Distribution Protocol (LDP) is a protocol for distributing labels in non-traffic-engineered applications. LDP allows routers to establish label-switched paths (LSPs) through a network by mapping network-layer routing information directly to data link layer-switched paths.

These LSPs might have an endpoint at a directly attached neighbor (comparable to IP hop-by-hop forwarding), or at a network egress node, enabling switching through all intermediary nodes. LSPs established by LDP can also traverse traffic-engineered LSPs created by RSVP.

LDP associates a forwarding equivalence class (FEC) with each LSP it creates. The FEC associated with an LSP specifies which packets are mapped to that LSP. LSPs are extended through a network as each router chooses the label advertised by the next hop for the FEC and splices it to the label it advertises to all other routers. This process forms a tree of LSPs that converge on the egress router.

## Supported LDP Standards

---

Junos OS substantially supports the following RFCs and Internet drafts, which define standards for LDP.

- RFC 3212, *Constraint-Based LSP Setup using LDP*
- RFC 3478, *Graceful Restart Mechanism for Label Distribution Protocol*
- Internet draft draft-napierala-mpls-targeted-mldp-01.txt, *Using LDP Multipoint Extensions on Targeted LDP Sessions*

The following RFCs do not define standards, but provide information about LDP. The IETF classifies them as “Informational.”

- RFC 3215, *LDP State Machine*
- RFC 5036, *LDP Specification*

For the following features described in the indicated sections of the RFC, Junos OS supports one of the possible modes but not the others:

- Label distribution control (section 2.6.1): Ordered mode is supported, but not Independent mode.
- Label retention (section 2.6.2): Liberal mode is supported, but not Conservative mode.
- Label advertisement (section 2.6.3): Both Downstream Unsolicited mode and Downstream on Demand mode are supported.
- RFC 5443, *LDP IGP Synchronization*
- RFC 6826, *Multipoint LDP In-Band Signaling for Point-to-Multipoint and Multipoint-to-Multipoint Label Switched Paths*

Junos OS support limited to point-to-multipoint extensions for LDP.

### Related Documentation

- [Supported GMPLS Standards on page 769](#)
- [Supported MPLS Standards on page 20](#)
- [Supported RSVP Standards on page 490](#)
- *Accessing Standards Documents on the Internet*

## Junos OS LDP Protocol Implementation

---

The Junos OS implementation of LDP supports LDP version 1. The Junos OS supports a simple mechanism for tunneling between routers in an interior gateway protocol (IGP), to eliminate the required distribution of external routes within the core. The Junos OS allows an MPLS tunnel next hop to all egress routers in the network, with only an IGP running in the core to distribute routes to egress routers. Edge routers run BGP but do not distribute external routes to the core. Instead, the recursive route lookup at the edge



resolves to an LSP switched to the egress router. No external routes are necessary on the transit LDP routers.

## LDP Operation

You must configure LDP for each interface on which you want LDP to run. LDP creates LSP trees rooted at each egress router for the router ID address that is the subsequent BGP next hop. The ingress point is at every router running LDP. This process provides an inet.3 route to every egress router. If BGP is running, it will attempt to resolve next hops by using the inet.3 table first, which binds most, if not all, of the BGP routes to MPLS tunnel next hops.

Two adjacent routers running LDP become neighbors. If the two routers are connected by more than one interface, they become neighbors on each interface. When LDP routers become neighbors, they establish an LDP session to exchange label information. If per-router labels are in use on both routers, only one LDP session is established between them, even if they are neighbors on multiple interfaces. For this reason, an LDP session is not related to a particular interface.

LDP operates in conjunction with a unicast routing protocol. LDP installs LSPs only when both LDP and the routing protocol are enabled. For this reason, you must enable both LDP and the routing protocol on the same set of interfaces. If this is not done, LSPs might not be established between each egress router and all ingress routers, which might result in loss of BGP-routed traffic.

You can apply policy filters to labels received from and distributed to other routers through LDP. Policy filters provide you with a mechanism to control the establishment of LSPs.

For LDP to run on an interface, MPLS must be enabled on a logical interface on that interface. For more information, see the *Logical Interfaces*.

**Related Documentation**

- [Logical Interfaces](#)

## LDP Message Types

LDP uses the message types described in the following sections to establish and remove mappings and to report errors. All LDP messages have a common structure that uses a type, length, and value (TLV) encoding scheme.

- [Discovery Messages on page 579](#)
- [Session Messages on page 580](#)
- [Advertisement Messages on page 580](#)
- [Notification Messages on page 580](#)

### Discovery Messages

Discovery messages announce and maintain the presence of a router in a network. Routers indicate their presence in a network by sending hello messages periodically. Hello

messages are transmitted as UDP packets to the LDP port at the group multicast address for all routers on the subnet.

LDP uses the following discovery procedures:

- Basic discovery—A router periodically sends LDP link hello messages through an interface. LDP link hello messages are sent as UDP packets addressed to the LDP discovery port. Receipt of an LDP link hello message on an interface identifies an adjacency with the LDP peer router.
- Extended discovery—LDP sessions between routers not directly connected are supported by LDP extended discovery. A router periodically sends LDP targeted hello messages to a specific address. Targeted hello messages are sent as UDP packets addressed to the LDP discovery port at the specific address. The targeted router decides whether to respond to or ignore the targeted hello message. A targeted router that chooses to respond does so by periodically sending targeted hello messages to the initiating router.

## Session Messages

Session messages establish, maintain, and terminate sessions between LDP peers. When a router establishes a session with another router learned through the hello message, it uses the LDP initialization procedure over TCP transport. When the initialization procedure is completed successfully, the two routers are LDP peers and can exchange advertisement messages.

## Advertisement Messages

Advertisement messages create, change, and delete label mappings for forwarding equivalence classes (FECs). Requesting a label or advertising a label mapping to a peer is a decision made by the local router. In general, the router requests a label mapping from a neighboring router when it needs one and advertises a label mapping to a neighboring router when it wants the neighbor to use a label.

## Notification Messages

Notification messages provide advisory information and signal error information. LDP sends notification messages to report errors and other events of interest. There are two kinds of LDP notification messages:

- Error notifications, which signal fatal errors. If a router receives an error notification from a peer for an LDP session, it terminates the LDP session by closing the TCP transport connection for the session and discarding all label mappings learned through the session.
- Advisory notifications, which pass information to a router about the LDP session or the status of some previous message received from the peer.

## Discovery Messages

---

Discovery messages announce and maintain the presence of a router in a network. Routers indicate their presence in a network by sending hello messages periodically. Hello

messages are transmitted as UDP packets to the LDP port at the group multicast address for all routers on the subnet.

LDP uses the following discovery procedures:

- Basic discovery—A router periodically sends LDP link hello messages through an interface. LDP link hello messages are sent as UDP packets addressed to the LDP discovery port. Receipt of an LDP link hello message on an interface identifies an adjacency with the LDP peer router.
- Extended discovery—LDP sessions between routers not directly connected are supported by LDP extended discovery. A router periodically sends LDP targeted hello messages to a specific address. Targeted hello messages are sent as UDP packets addressed to the LDP discovery port at the specific address. The targeted router decides whether to respond to or ignore the targeted hello message. A targeted router that chooses to respond does so by periodically sending targeted hello messages to the initiating router.

---

## Session Messages

Session messages establish, maintain, and terminate sessions between LDP peers. When a router establishes a session with another router learned through the hello message, it uses the LDP initialization procedure over TCP transport. When the initialization procedure is completed successfully, the two routers are LDP peers and can exchange advertisement messages.

---

## Advertisement Messages

Advertisement messages create, change, and delete label mappings for forwarding equivalence classes (FECs). Requesting a label or advertising a label mapping to a peer is a decision made by the local router. In general, the router requests a label mapping from a neighboring router when it needs one and advertises a label mapping to a neighboring router when it wants the neighbor to use a label.

---

## Notification Messages

Notification messages provide advisory information and signal error information. LDP sends notification messages to report errors and other events of interest. There are two kinds of LDP notification messages:

- Error notifications, which signal fatal errors. If a router receives an error notification from a peer for an LDP session, it terminates the LDP session by closing the TCP transport connection for the session and discarding all label mappings learned through the session.
- Advisory notifications, which pass information to a router about the LDP session or the status of some previous message received from the peer.

## Tunneling LDP LSPs in RSVP LSPs

You can tunnel LDP LSPs over RSVP LSPs. The following sections describe how tunneling of LDP LSPs in RSVP LSPs works:

- [Tunneling LDP LSPs in RSVP LSPs Overview on page 582](#)
- [Label Operations on page 583](#)

## Tunneling LDP LSPs in RSVP LSPs Overview

If you are using RSVP for traffic engineering, you can run LDP simultaneously to eliminate the distribution of external routes in the core. The LSPs established by LDP are tunneled through the LSPs established by RSVP. LDP effectively treats the traffic-engineered LSPs as single hops.

When you configure the router to run LDP across RSVP-established LSPs, LDP automatically establishes sessions with the router at the other end of the LSP. LDP control packets are routed hop-by-hop, rather than carried through the LSP. This routing allows you to use simplex (one-way) traffic-engineered LSPs. Traffic in the opposite direction flows through LDP-established LSPs that follow unicast routing rather than through traffic-engineered tunnels.

If you configure LDP over RSVP LSPs, you can still configure multiple OSPF areas and IS-IS levels in the traffic engineered core and in the surrounding LDP cloud.



**NOTE:** Beginning with Junos OS Release 15.1, multi-instance support is extended to LDP over RSVP tunneling for a virtual router routing instance. This allows splitting of a single routing and MPLS domain into multiple domains so that each domain can be scaled independently. BGP labeled unicast can be used to stitch these domains for service FECs. Each domain uses intra-domain LDP over RSVP LSP for MPLS forwarding.

Release History Table

| Release | Description                                                                                                                                |
|---------|--------------------------------------------------------------------------------------------------------------------------------------------|
| 15.1    | Beginning with Junos OS Release 15.1, multi-instance support is extended to LDP over RSVP tunneling for a virtual router routing instance. |

### Related Documentation

- [Label Operations on page 583](#)
- [Configuring a Hierarchy of RSVP LSPs to Tunnel Multiple RSVP LSPs Over a Single RSVP LSP on page 820](#)

## Label Operations

Figure 51 on page 583 depicts an LDP LSP being tunneled through an RSVP LSP. (For definitions of label operations, see “MPLS Label Overview” on page 24.) The shaded inner oval represents the RSVP domain, whereas the outer oval depicts the LDP domain. RSVP establishes an LSP through routers B, C, D, and E, with the sequence of labels L3, L4. LDP establishes an LSP through Routers A, B, E, F, and G, with the sequence of labels L1, L2, L5. LDP views the RSVP LSP between Routers B and E as a single hop.

When the packet arrives at Router A, it enters the LSP established by LDP, and a label (L1) is pushed onto the packet. When the packet arrives at Router B, the label (L1) is swapped with another label (L2). Because the packet is entering the traffic-engineered LSP established by RSVP, a second label (L3) is pushed onto the packet.

This outer label (L3) is swapped with a new label (L4) at the intermediate router (C) within the RSVP LSP tunnel, and when the penultimate router (D) is reached, the top label is popped. Router E swaps the label (L2) with a new label (L5), and the penultimate router for the LDP-established LSP (F) pops the last label.

Figure 51: Swap and Push When LDP LSPs Are Tunneled Through RSVP LSPs


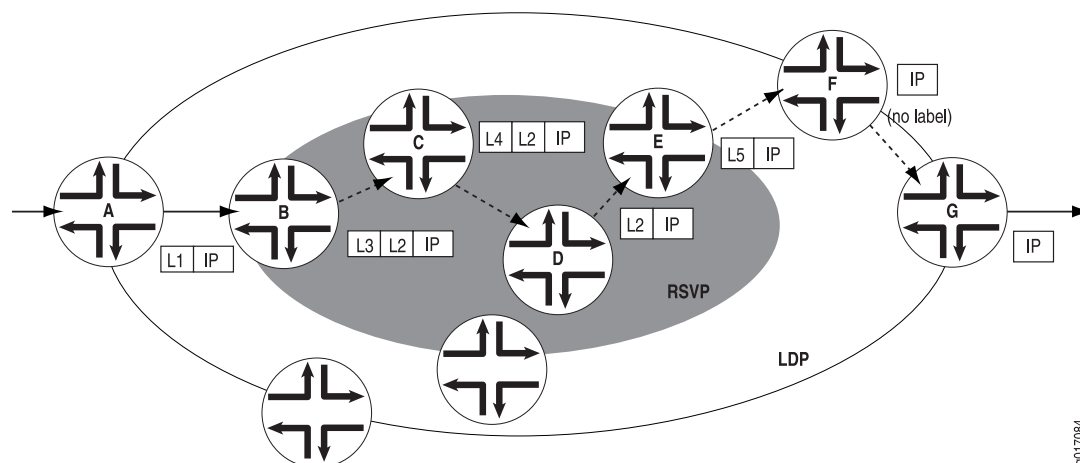


Figure 52 on page 584 depicts a double push label operation (L1L2). A double push label operation is used when the ingress router (A) for both the LDP LSP and the RSVP LSP tunneled through it is the same device. Note that Router D is the penultimate hop for the LDP-established LSP, so L2 is popped from the packet by Router D.

Figure 52: Double Push When LDP LSPs Are Tunneled Through RSVP LSPs

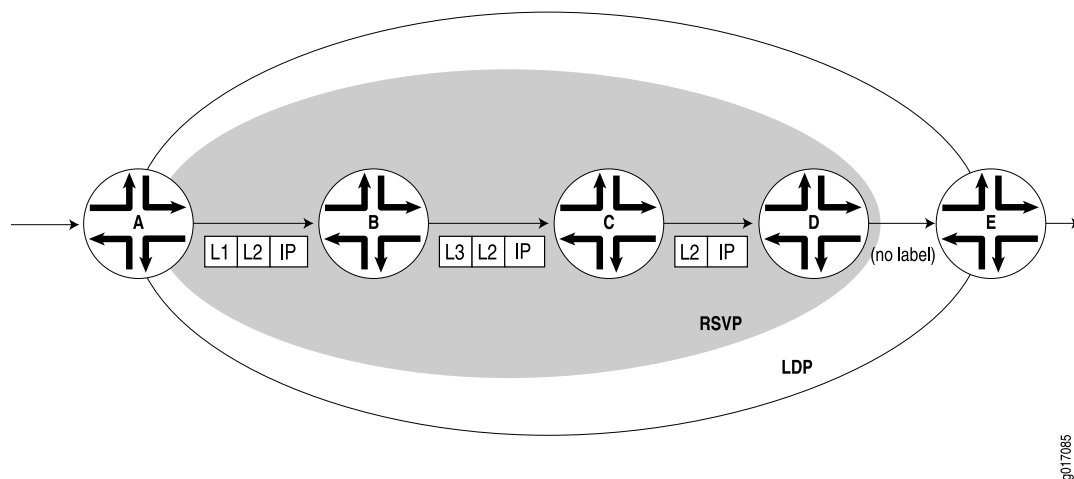

## LDP Session Protection

LDP session protection is based on the LDP targeted hello functionality defined in RFC 5036, *LDP Specification*, and is supported by the Junos OS as well as the LDP implementations of most other vendors. It involves sending unicast User Datagram Protocol (UDP) hello packets to a remote neighbor address and receiving similar packets from the neighbor router.

If you configure LDP session protection on a router, the LDP sessions are maintained as follows:

1. An LDP session is established between a router and a remote neighboring router.
2. If all of the direct links between the routers go down, the LDP session remains up so long as there is IP connectivity between the routers based on another connection over the network.
3. When the direct link between the routers is reestablished, the LDP session is not restarted. The routers simply exchange LDP hellos with each other over the direct link. They can then begin forwarding LDP-signaled MPLS packets using the original LDP session.

By default, LDP targeted hellos are set to the remote neighbor so long as the LDP session is up, even if there are no more link neighbors to that router. You can also specify the duration you would like to maintain the remote neighbor connection in the absence of link neighbors. When the last link neighbor for a session goes down, the Junos OS starts an LDP session protection timer. If this timer expires before any of the link neighbors come back up, the remote neighbor connection is taken down and the LDP session is terminated. If you configure a different value for the timer while it is currently running, the Junos OS updates the timer to the specified value without disrupting the current state of the LDP session.

---

## LDP Native IPv6 Support Overview

---

IPv6 connectivity often relies on tunneling IPv6 over an IPv4 MPLS core with IPv4-signaled MPLS label-switched paths (LSPs). This requires the IPv4-signaled LSPs to be configured statically or established dynamically by IPv6 provider edge routers. Because of the growing demand of IPv6, it has become imperative to deploy an IPv6 MPLS core with an IPv6-signaled LSP to provide IPv6 connectivity. In Junos OS, LDP is supported in an IPv6 network only, and in an IPv6/IPv4 dual-stack network as described in *RFC 7552*. Apart from providing a single session for both IPv4 and IPv6 networks, Junos OS LDP supports separate IPv4 sessions for IPv4 only, and IPv6 sessions for IPv6 only.

You can configure the address family as **inet** for IPv4 or **inet6** for IPv6, or both. If the family address is not configured, then the default address of family inet is enabled. When both IPv4 and IPv6 are configured, you can use the **transport-preference** statement to configure the preferred transport to be either **IPv4** or **IPv6**. Based on the preference, LDP attempts to establish a TCP connection using IPv4 or IPv6. By default, IPv6 is selected. The **dual-transport** statement allows Junos OS LDP to establish the TCP connection over IPv4 with IPv4 neighbors, and over IPv6 with IPv6 neighbors as a single-stack LSR. The **inet-lsr-id** and **inet6-lsr-id** IDs are the two LSR IDs that have to be configured to establish an LDP session over IPv4 and IPv6 TCP transport. These two IDs should be non-zero and must be configured with different values.

### Related Documentation

- [Example: Configuring LDP Native IPv6 Support on page 676](#)
- [Configuring LDP Native IPv6 Support on page 675](#)
- [dual-transport on page 1423](#)
- [family \(Protocols LDP\) on page 1434](#)

---

## Longest Match Support for LDP Overview

---

LDP is often used to establish MPLS label-switched paths (LSPs) throughout a complete network domain using an IGP such as OSPF or IS-IS. In such a network, all links in the domain have IGP adjacencies as well as LDP adjacencies. LDP establishes the LSPs on the shortest path to a destination as determined by IGP. In Junos OS, the LDP implementation does an exact match lookup on the IP address of the forwarding equivalence class (FEC) in the routing information base (RIB) or IGP routes for label mapping. This exact mapping requires MPLS end-to-end LDP endpoint IP addresses to be configured in all the label edge routers (LERs). This defeats the purpose of IP hierarchical design or default routing in access devices. Configuring **longest-match** allows LDP to set up LSP based on the routes aggregated or summarized across OSPF areas or IS-IS levels in the inter-domain.

### Related Documentation

- [longest-match on page 1460](#)
- [Example: Configuring Longest Match for LDP on page 593](#)
- [Configuring Longest Match for LDP on page 592](#)





# Configuring LDP

- [Minimum LDP Configuration on page 588](#)
- [Enabling and Disabling LDP on page 588](#)
- [Configuring the LDP Timer for Hello Messages on page 589](#)
- [Configuring the Delay Before LDP Neighbors Are Considered Down on page 589](#)
- [Enabling Strict Targeted Hello Messages for LDP on page 591](#)
- [Configuring the Interval for LDP Keepalive Messages on page 591](#)
- [Configuring the LDP Keepalive Timeout on page 592](#)
- [Configuring Longest Match for LDP on page 592](#)
- [Example: Configuring Longest Match for LDP on page 593](#)
- [Configuring LDP Route Preferences on page 609](#)
- [LDP Graceful Restart on page 609](#)
- [Configuring LDP Graceful Restart on page 610](#)
- [Filtering Inbound LDP Label Bindings on page 613](#)
- [Filtering Outbound LDP Label Bindings on page 615](#)
- [Specifying the Transport Address Used by LDP on page 617](#)
- [Configuring the Prefixes Advertised into LDP from the Routing Table on page 617](#)
- [Configuring FEC Deaggregation on page 618](#)
- [Configuring Policers for LDP FECs on page 619](#)
- [Configuring LDP IPv4 FEC Filtering on page 620](#)
- [Configuring BFD for LDP LSPs on page 620](#)
- [Configuring ECMP-Aware BFD for LDP LSPs on page 623](#)
- [Configuring a Failure Action for the BFD Session on an LDP LSP on page 624](#)
- [Configuring the Holddown Interval for the BFD Session on page 625](#)
- [Configuring OAM Ingress Policies for LDP on page 625](#)
- [Configuring LDP Link Protection on page 625](#)
- [Example: Configuring LDP Link Protection on page 627](#)
- [Understanding Multicast-Only Fast Reroute on page 644](#)
- [Configuring Multicast-Only Fast Reroute on page 651](#)

- [Example: Configuring Multicast-Only Fast Reroute in a Multipoint LDP Domain on page 654](#)
- [Example: Configuring LDP Downstream on Demand on page 670](#)
- [Configuring LDP Native IPv6 Support on page 675](#)
- [Example: Configuring LDP Native IPv6 Support on page 676](#)
- [Example: Configuring Multipoint LDP In-Band Signaling for Point-to-Multipoint LSPs on page 691](#)
- [Configuring Miscellaneous LDP Properties on page 722](#)
- [Configuring LDP LSP Traceroute on page 729](#)
- [Collecting LDP Statistics on page 730](#)
- [Tracing LDP Protocol Traffic on page 732](#)

---

## Minimum LDP Configuration

To enable LDP on a single interface, include the **ldp** statement and specify the interface using the **interface** statement. This is the minimum LDP configuration. All other LDP configuration statements are optional.

```
ldp {  
  interface interface-name;  
}
```

To enable LDP on all interfaces, specify **all** for *interface-name*.

For a list of hierarchy levels at which you can include these statements, see the statement summary sections.

---

## Enabling and Disabling LDP

LDP is routing-instance-aware. To enable LDP on a specific interface, include the following statements:

```
ldp {  
  interface interface-name;  
}
```

For a list of hierarchy levels at which you can include these statements, see the statement summary sections.

To enable LDP on all interfaces, specify **all** for *interface-name*.

If you have configured interface properties on a group of interfaces and want to disable LDP on one of the interfaces, include the **interface** statement with the **disable** option:

```
interface interface-name {  
  disable;  
}
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section.

## Configuring the LDP Timer for Hello Messages

LDP hello messages enable LDP nodes to discover one another and to detect the failure of a neighbor or the link to the neighbor. Hello messages are sent periodically on all interfaces where LDP is enabled.

There are two types of LDP hello messages:

- Link hello messages—Sent through the LDP interface as UDP packets addressed to the LDP discovery port. Receipt of an LDP link hello message on an interface identifies an adjacency with the LDP peer router.
- Targeted hello messages—Sent as UDP packets addressed to the LDP discovery port at a specific address. Targeted hello messages are used to support LDP sessions between routers that are not directly connected. A targeted router determines whether to respond or ignore a targeted hello message. A targeted router that chooses to respond does so by periodically sending targeted hello messages back to the initiating router.

By default, LDP sends hello messages every 5 seconds for link hello messages and every 15 seconds for targeted hello messages. You can configure the LDP timer to alter how often both types of hello messages are sent. However, you cannot configure a time for the LDP timer that is greater than the LDP hold time. For more information, see [“Configuring the Delay Before LDP Neighbors Are Considered Down”](#) on page 589.

### Configuring the LDP Timer for Link Hello Messages

To modify how often LDP sends link hello messages, specify a new link hello message interval for the LDP timer using the **hello-interval** statement:

```
hello-interval seconds;
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

### Configuring the LDP Timer for Targeted Hello Messages

To modify how often LDP sends targeted hello messages, specify a new targeted hello message interval for the LDP timer by configuring the **hello-interval** statement as an option for the **targeted-hello** statement:

```
targeted-hello {
  hello-interval seconds;
}
```

For a list of hierarchy levels at which you can include these statements, see the statement summary sections for these statements.

## Configuring the Delay Before LDP Neighbors Are Considered Down

The hold time determines how long an LDP node should wait for a hello message before declaring a neighbor to be down. This value is sent as part of a hello message so that

each LDP node tells its neighbors how long to wait. The values sent by each neighbor do not have to match.

The hold time should normally be at least three times the hello interval. The default is 15 seconds for link hello messages and 45 seconds for targeted hello messages. However, it is possible to configure an LDP hold time that is close to the value for the hello interval.



**NOTE:** By configuring an LDP hold time close to the hello interval (less than three times the hello interval), LDP neighbor failures might be detected more quickly. However, this also increases the possibility that the router might declare an LDP neighbor down that is still functioning normally. For more information, see [“Configuring the LDP Timer for Hello Messages” on page 589](#).

The LDP hold time is also negotiated automatically between LDP peers. When two LDP peers advertise different LDP hold times to one another, the smaller value is used. If an LDP peer router advertises a shorter hold time than the value you have configured, the peer router’s advertised hold time is used. This negotiation can affect the LDP keepalive interval as well.

If the local LDP hold time is not shortened during LDP peer negotiation, the user-configured keepalive interval is left unchanged. However, if the local hold time is reduced during peer negotiation, the keepalive interval is recalculated. If the LDP hold time has been reduced during peer negotiation, the keepalive interval is reduced to one-third of the new hold time value. For example, if the new hold-time value is 45 seconds, the keepalive interval is set to 15 seconds.

This automated keepalive interval calculation can cause different keepalive intervals to be configured on each peer router. This enables the routers to be flexible in how often they send keepalive messages, because the LDP peer negotiation ensures they are sent more frequently than the LDP hold time.

When you reconfigure the hold-time interval, changes do not take effect until after the session is reset. The hold time is negotiated when the LDP peering session is initiated and cannot be renegotiated as long as the session is up (required by RFC 5036, *LDP Specification*). To manually force the LDP session to reset, issue the **clear ldp session** command.

## Configuring the LDP Hold Time for Link Hello Messages

To modify how long an LDP node should wait for a link hello message before declaring the neighbor down, specify a new time in seconds using the **hold-time** statement:

**hold-time** *seconds*;

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

## Configuring the LDP Hold Time for Targeted Hello Messages

To modify how long an LDP node should wait for a targeted hello message before declaring the neighbor down, specify a new time in seconds using the **hold-time** statement as an option for the **targeted-hello** statement:

```
targeted-hello {  
  hold-time seconds;  
}
```

For a list of hierarchy levels at which you can include these statements, see the statement summary sections for these statements.

---

## Enabling Strict Targeted Hello Messages for LDP

Use strict targeted hello messages to prevent LDP sessions from being established with remote neighbors that have not been specifically configured. If you configure the **strict-targeted-hellos** statement, an LDP peer does not respond to targeted hello messages coming from a source that is not one of its configured remote neighbors. Configured remote neighbors can include:

- Endpoints of RSVP tunnels for which LDP tunneling is configured
- Layer 2 circuit neighbors

If an unconfigured neighbor sends a hello message, the LDP peer ignores the message and logs an error (with the **error** trace flag) indicating the source. For example, if the LDP peer received a targeted hello from the Internet address 10.0.0.1 and no neighbor with this address is specifically configured, the following message is printed to the LDP log file:

```
LDP: Ignoring targeted hello from 10.0.0.1
```

To enable strict targeted hello messages, include the **strict-targeted-hellos** statement:

```
strict-targeted-hellos;
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

---

## Configuring the Interval for LDP Keepalive Messages

The keepalive interval determines how often a message is sent over the session to ensure that the keepalive timeout is not exceeded. If no other LDP traffic is sent over the session in this much time, a keepalive message is sent. The default is 10 seconds. The minimum value is 1 second.

The value configured for the keepalive interval can be altered during LDP session negotiation if the value configured for the LDP hold time on the peer router is lower than the value configured locally. For more information, see [“Configuring the Delay Before LDP Neighbors Are Considered Down” on page 589](#).

To modify the keepalive interval, include the **keepalive-interval** statement:

**keepalive-interval** *seconds*;

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

---

## Configuring the LDP Keepalive Timeout

After an LDP session is established, messages must be exchanged periodically to ensure that the session is still working. The keepalive timeout defines the amount of time that the neighbor LDP node waits before deciding that the session has failed. This value is usually set to at least three times the keepalive interval. The default is 30 seconds.

To modify the keepalive interval, include the **keepalive-timeout** statement:

**keepalive-timeout** *seconds*;

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

The value configured for the **keepalive-timeout** statement is displayed as the hold time when you issue the **show ldp session detail** command.

---

## Configuring Longest Match for LDP

In order to allow LDP to learn the routes aggregated or summarized across OSPF areas or ISIS levels in inter-domain, Junos OS allows you to configure longest match for LDP based on *RFC5283*.

Before you configure longest match for LDP, you must do the following:

1. Configure the device interfaces.
2. Configure the MPLS protocol.
3. Configure the OSPF protocol.

To configure longest match for LDP, you must do the following:

1. Configure longest match for the LDP protocol.

```
[edit protocols ldp]
user@host# set longest-match
```

2. Configure the LDP protocol on the interface.

```
[edit protocols ldp]
user@host# set interface interface-name
```

For example, to configure the interfaces:

```
[edit protocols ldp]
user@host# set interface ge-0/0/2.0
user@host# set interface lo0.0
```

### Related Documentation

- [Example: Configuring Longest Match for LDP on page 593](#)
- [Longest Match Support for LDP Overview on page 585](#)

- [longest-match on page 1460](#)

## Example: Configuring Longest Match for LDP

---

This example shows how to configure longest match for LDP based on *RFC5283*. This allows LDP to learn the routes aggregated or summarized across OSPF areas or ISIS levels in inter-domain.. The longest match policy provides per prefix granularity.

- [Requirements on page 593](#)
- [Overview on page 593](#)
- [Configuration on page 594](#)
- [Verification on page 598](#)

### Requirements

This example uses the following hardware and software components:

- Six MX Series routers with OSPF protocol, and LDP enabled on the connected interfaces.
- Junos OS Release 16.1 or later running on all devices.

Before you begin:

- Configure the device interfaces.
- Configure OSPF.

### Overview


LDP is often used to establish MPLS label-switched paths (LSPs) throughout a complete network domain using an IGP such as OSPF or IS-IS. In such a network, all links in the domain have IGP adjacencies as well as LDP adjacencies. LDP establishes the LSPs on the shortest path to a destination as determined by IP forwarding. In Junos OS, the LDP implementation does an exact match lookup on the IP address of the FEC in the RIB or IGP routes for label mapping. This exact mapping requires MPLS end-to-end LDP endpoint IP addresses to be configured in all the LERs. This defeats the purpose of IP hierarchical design or default routing in access devices. Configuring **longest-match** helps to overcome this by suppressing the exact match behaviour and setup LSP based on the longest matching route on per-prefix basis.

### Topology

---

In the topology, [Figure 53 on page 594](#) shows the longest match for LDP is configured on Device R0 .

Figure 53: Example Longest Match for LDP

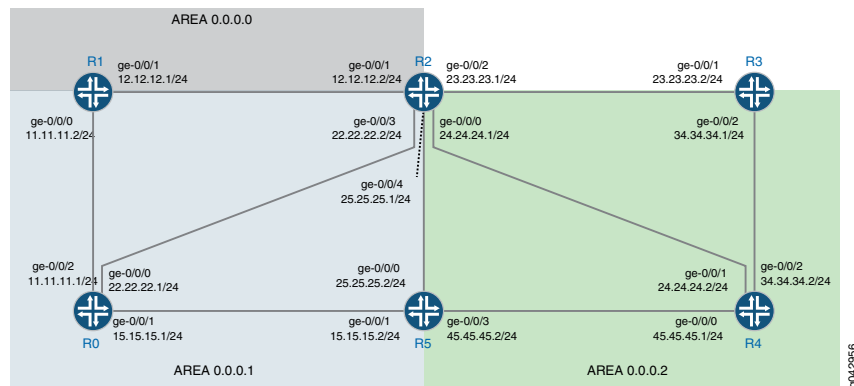

## Configuration

**CLI Quick Configuration** To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the **[edit]** hierarchy level, and then enter **commit** from configuration mode.

```

R0
set interfaces ge-0/0/0 unit 0 family inet address 22.22.22.1/24
set interfaces ge-0/0/1 unit 0 family inet address 15.15.15.1/24
set interfaces ge-0/0/2 unit 0 family inet address 11.11.11.1/24
set interfaces ge-0/0/2 unit 0 family iso
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.112.1/32 primary
set interfaces lo0 unit 0 family inet address 10.255.112.1/32 preferred
set interfaces lo0 unit 0 family iso address 49.0002.0192.0168.0001.00
set routing-options router-id 10.255.112.1
set protocols mpls interface ge-0/0/2.0
set protocols ospf area 0.0.0.1 interface ge-0/0/2.0
set protocols ospf area 0.0.0.1 interface lo0.0 passive
set protocols ldp longest-match
set protocols ldp interface ge-0/0/2.0
set protocols ldp interface lo0.0

R1
set interfaces ge-0/0/0 unit 0 family inet address 11.11.11.2/24
set interfaces ge-0/0/0 unit 0 family iso
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 unit 0 family inet address 12.12.12.1/24
set interfaces ge-0/0/1 unit 0 family iso
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.112.2/32 primary
set interfaces lo0 unit 0 family inet address 10.255.112.2/32 preferred
set interfaces lo0 unit 0 family iso address 49.0002.0192.0168.0002.00
set routing-options router-id 10.255.112.2
set protocols mpls interface ge-0/0/0.0
set protocols mpls interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ospf area 0.0.0.1 interface ge-0/0/0.0
set protocols ldp longest-match

```



```

set protocols ldp interface ge-0/0/0.0
set protocols ldp interface ge-0/0/1.0
set protocols ldp interface lo0.0

R2  set interfaces ge-0/0/0 unit 0 family inet address 24.24.24.1/24
    set interfaces ge-0/0/0 unit 0 family iso
    set interfaces ge-0/0/0 unit 0 family mpls
    set interfaces ge-0/0/1 unit 0 family inet address 12.12.12.2/24
    set interfaces ge-0/0/1 unit 0 family iso
    set interfaces ge-0/0/1 unit 0 family mpls
    set interfaces ge-0/0/2 unit 0 family inet address 23.23.23.1/24
    set interfaces ge-0/0/2 unit 0 family iso
    set interfaces ge-0/0/2 unit 0 family mpls
    set interfaces ge-0/0/3 unit 0 family inet address 22.22.22.2/24
    set interfaces ge-0/0/4 unit 0 family inet address 25.25.25.1/24
    set interfaces ge-0/0/4 unit 0 family iso
    set interfaces ge-0/0/4 unit 0 family mpls
    set interfaces lo0 unit 0 family inet address 10.255.111.4/32 primary
    set interfaces lo0 unit 0 family inet address 10.255.111.4/32 preferred
    set interfaces lo0 unit 0 family iso address 49.0003.0192.0168.0003.00
    set routing-options router-id 10.255.111.4
    set protocols mpls interface ge-0/0/1.0
    set protocols mpls interface ge-0/0/2.0
    set protocols mpls interface ge-0/0/0.0
    set protocols mpls interface ge-0/0/4.0
    set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
    set protocols ospf area 0.0.0.0 interface lo0.0 passive
    set protocols ospf area 0.0.0.2 area-range 10.255.111.0/24
    set protocols ospf area 0.0.0.2 interface ge-0/0/2.0
    set protocols ospf area 0.0.0.2 interface ge-0/0/0.0
    set protocols ospf area 0.0.0.2 interface ge-0/0/4.0
    set protocols ldp interface ge-0/0/0.0
    set protocols ldp interface ge-0/0/1.0
    set protocols ldp interface ge-0/0/2.0
    set protocols ldp interface ge-0/0/4.0
    set protocols ldp interface lo0.0

R3  set interfaces ge-0/0/0 unit 0 family inet address 35.35.35.1/24
    set interfaces ge-0/0/0 unit 0 family iso
    set interfaces ge-0/0/0 unit 0 family mpls
    set interfaces ge-0/0/1 unit 0 family inet address 23.23.23.2/24
    set interfaces ge-0/0/1 unit 0 family iso
    set interfaces ge-0/0/1 unit 0 family mpls
    set interfaces ge-0/0/2 unit 0 family inet address 34.34.34.1/24
    set interfaces ge-0/0/2 unit 0 family iso
    set interfaces ge-0/0/2 unit 0 family mpls
    set interfaces lo0 unit 0 family inet address 10.255.111.1/32 primary
    set interfaces lo0 unit 0 family inet address 10.255.111.1/32 preferred
    set interfaces lo0 unit 0 family iso address 49.0003.0192.0168.0004.00
    set routing-options router-id 10.255.111.1
    set protocols mpls interface ge-0/0/1.0
    set protocols ospf area 0.0.0.2 interface ge-0/0/1.0
    set protocols ospf area 0.0.0.2 interface fxp0.0 disable
    set protocols ospf area 0.0.0.2 interface lo0.0 passive
    set protocols ldp interface ge-0/0/1.0

```

```
set protocols ldp interface lo0.0
```

- R4**
- ```

set interfaces ge-0/0/0 unit 0 family inet address 45.45.45.1/24
set interfaces ge-0/0/0 unit 0 family iso
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 unit 0 family inet address 24.24.24.2/24
set interfaces ge-0/0/1 unit 0 family iso
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 34.34.34.2/24
set interfaces ge-0/0/2 unit 0 family iso
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.111.2/32 primary
set interfaces lo0 unit 0 family inet address 10.255.111.2/32 preferred
set interfaces lo0 unit 0 family iso address 49.0003.0192.0168.0005.00
set routing-options router-id 10.255.111.2
set protocols mpls interface ge-0/0/1.0
set protocols ospf area 0.0.0.2 interface ge-0/0/1.0
set protocols ospf area 0.0.0.2 interface fxp0.0 disable
set protocols ospf area 0.0.0.2 interface lo0.0 passive
set protocols ldp interface ge-0/0/1.0
set protocols ldp interface lo0.0

```
- R5**
- ```

set interfaces ge-0/0/0 unit 0 family inet address 25.25.25.2/24
set interfaces ge-0/0/0 unit 0 family iso
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 unit 0 family inet address 15.15.15.2/24
set interfaces ge-0/0/2 unit 0 family inet address 35.35.35.2/24
set interfaces ge-0/0/3 unit 0 family inet address 45.45.45.2/24
set interfaces ge-0/0/3 unit 0 family iso
set interfaces ge-0/0/3 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.111.3/32 primary
set interfaces lo0 unit 0 family inet address 10.255.111.3/32 preferred
set interfaces lo0 unit 0 family iso address 49.0003.0192.0168.0006.00
set routing-options router-id 10.255.111.3
set protocols mpls interface ge-0/0/0.0
set protocols ospf area 0.0.0.2 interface ge-0/0/0.0
set protocols ospf area 0.0.0.2 interface fxp0.0 disable
set protocols ospf area 0.0.0.2 interface lo0.0 passive
set protocols ldp interface ge-0/0/0.0
set protocols ldp interface lo0.0

```

## Configuring Device R0

**Step-by-Step Procedure** The following example requires that you navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure Device R0:

1. Configure the interfaces.
 

```

[edit interfaces]
set ge-0/0/0 unit 0 family inet address 22.22.22.1/24

set ge-0/0/1 unit 0 family inet address 15.15.15.1/24

```

```

set ge-0/0/2 unit 0 family inet address 11.11.11.1/24
set ge-0/0/2 unit 0 family iso
set ge-0/0/2 unit 0 family mpls

```

2. Assign the loopback addresses to the device.

```

[edit interfaces lo0 unit 0 family]
set inet address 10.255.112.1/32 primary
set inet address 10.255.112.1/32 preferred
set iso address 49.0002.0192.0168.0001.00

```

3. Configure the router ID.

```

[edit routing-options]
set router-id 10.255.112.1

```

4. Configure the MPLS protocol on the interface.

```

[edit protocols mpls]
set interface ge-0/0/2.0

```

5. Configure the OSPF protocol on the interface.

```

[edit protocols ospf]
set area 0.0.0.1 interface ge-0/0/2.0
set area 0.0.0.1 interface lo0.0 passive

```

6. Configure longest match for the LDP protocol.

```

[edit protocols ldp]
set longest-match

```

7. Configure the LDP protocol on the interface.

```

[edit protocols ldp]
set interface ge-0/0/2.0
set interface lo0.0

```

## Results

From configuration mode, confirm your configuration by entering the **show interfaces**, **show protocols**, and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```

user@R0# show interfaces
ge-0/0/0 {
  unit 0 {
    family inet {
      address 22.22.22.1/24;
    }
  }
}
ge-0/0/1 {
  unit 0 {
    family inet {
      address 15.15.15.1/24;
    }
  }
}

```

```
}
ge-0/0/2 {
  unit 0 {
    family inet {
      address 11.11.11.1/24;
    }
    family iso;
    family mpls;
  }
}
lo0 {
  unit 0 {
    family inet {
      address 10.255.112.1/32 {
        primary;
        preferred;
      }
    }
    family iso {
      address 49.0002.0192.0168.0001.00;
    }
  }
}

user@R0# show protocols
mpls {
  interface ge-0/0/2.0;
}
ospf {
  area 0.0.0.1 {
    interface ge-0/0/2.0;
    interface lo0.0 {
      passive;
    }
  }
}
ldp {
  longest-match;
  interface ge-0/0/2.0;
  interface lo0.0;
}

user@R0# show routing-options
router-id 10.255.112.1;
```

If you are done configuring the device, enter **commit** from the configuration mode.

## Verification

Confirm that the configuration is working properly.

- [Verifying the Routes on page 599](#)
- [Verifying LDP Overview Information on page 603](#)
- [Verify the LDP Entries in the Internal Topology Table on page 605](#)

- [Verify Only FEC Information of LDP Route on page 607](#)
- [Verify FEC and Shadow Routes of LDP on page 607](#)

### Verifying the Routes

---

**Purpose** Verify that the expected routes are learned.

**Action** On Device R0, from operational mode, run the **show route** command to display the routes in the routing table.

```
user@R0> show route
```

```
inet.0: 62 destinations, 62 routes (62 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both
```

```
10.4.0.0/16      *[Static/5] 10:08:01
                  > to 10.92.31.254 via fxp0.0
10.5.0.0/16      *[Static/5] 10:08:01
                  > to 10.92.31.254 via fxp0.0
10.6.128.0/17    *[Static/5] 10:08:01
                  > to 10.92.31.254 via fxp0.0
10.9.0.0/16      *[Static/5] 10:08:01
                  > to 10.92.31.254 via fxp0.0
10.10.0.0/16     *[Static/5] 10:08:01
                  > to 10.92.31.254 via fxp0.0
10.13.4.0/23     *[Static/5] 10:08:01
                  > to 10.92.31.254 via fxp0.0
10.13.10.0/23    *[Static/5] 10:08:01
                  > to 10.92.31.254 via fxp0.0
10.82.0.0/15     *[Static/5] 10:08:01
                  > to 10.92.31.254 via fxp0.0
10.84.0.0/16     *[Static/5] 10:08:01
                  > to 10.92.31.254 via fxp0.0
10.85.12.0/22    *[Static/5] 10:08:01
                  > to 10.92.31.254 via fxp0.0
10.92.0.0/16     *[Static/5] 10:08:01
                  > to 10.92.31.254 via fxp0.0
10.92.16.0/20    *[Direct/0] 10:08:01
                  > via fxp0.0
10.92.20.175/32  *[Local/0] 10:08:01
                  Local via fxp0.0
10.94.0.0/16     *[Static/5] 10:08:01
                  > to 10.92.31.254 via fxp0.0
10.99.0.0/16     *[Static/5] 10:08:01
                  > to 10.92.31.254 via fxp0.0
10.102.0.0/16    *[Static/5] 10:08:01
                  > to 10.92.31.254 via fxp0.0
10.150.0.0/16    *[Static/5] 10:08:01
                  > to 10.92.31.254 via fxp0.0
10.155.0.0/16    *[Static/5] 10:08:01
                  > to 10.92.31.254 via fxp0.0
10.157.64.0/19   *[Static/5] 10:08:01
                  > to 10.92.31.254 via fxp0.0
10.160.0.0/16    *[Static/5] 10:08:01
                  > to 10.92.31.254 via fxp0.0
10.204.0.0/16    *[Static/5] 10:08:01
                  > to 10.92.31.254 via fxp0.0
10.205.0.0/16    *[Static/5] 10:08:01
                  > to 10.92.31.254 via fxp0.0
10.206.0.0/16    *[Static/5] 10:08:01
                  > to 10.92.31.254 via fxp0.0
10.207.0.0/16    *[Static/5] 10:08:01
                  > to 10.92.31.254 via fxp0.0
10.209.0.0/16    *[Static/5] 10:08:01
                  > to 10.92.31.254 via fxp0.0
10.212.0.0/16    *[Static/5] 10:08:01
                  > to 10.92.31.254 via fxp0.0
```

```

10.213.0.0/16      *[Static/5] 10:08:01
                  > to 10.92.31.254 via fxp0.0
10.214.0.0/16      *[Static/5] 10:08:01
                  > to 10.92.31.254 via fxp0.0
10.215.0.0/16      *[Static/5] 10:08:01
                  > to 10.92.31.254 via fxp0.0
10.216.0.0/16      *[Static/5] 10:08:01
                  > to 10.92.31.254 via fxp0.0
10.218.13.0/24     *[Static/5] 10:08:01
                  > to 10.92.31.254 via fxp0.0
10.218.14.0/24     *[Static/5] 10:08:01
                  > to 10.92.31.254 via fxp0.0
10.218.16.0/20     *[Static/5] 10:08:01
                  > to 10.92.31.254 via fxp0.0
10.218.32.0/20     *[Static/5] 10:08:01
                  > to 10.92.31.254 via fxp0.0
10.227.0.0/16      *[Static/5] 10:08:01
                  > to 10.92.31.254 via fxp0.0
10.255.111.0/24    *[OSPF/10] 09:52:14, metric 3
                  > to 11.11.11.2 via ge-0/0/2.0
10.255.111.4/32    *[OSPF/10] 09:54:10, metric 2
                  > to 11.11.11.2 via ge-0/0/2.0
10.255.112.1/32    *[Direct/0] 09:55:05
                  > via lo0.0
10.255.112.2/32    *[OSPF/10] 09:54:18, metric 1
                  > to 11.11.11.2 via ge-0/0/2.0
11.11.11.0/24      *[Direct/0] 09:55:05
                  > via ge-0/0/2.0
11.11.11.1/32      *[Local/0] 09:55:05
                  Local via ge-0/0/2.0
12.12.12.0/24      *[OSPF/10] 09:54:18, metric 2
                  > to 11.11.11.2 via ge-0/0/2.0
15.15.15.0/24      *[Direct/0] 09:55:05
                  > via ge-0/0/1.0
15.15.15.1/32      *[Local/0] 09:55:05
                  Local via ge-0/0/1.0
22.22.22.0/24      *[Direct/0] 09:55:05
                  > via ge-0/0/0.0
22.22.22.1/32      *[Local/0] 09:55:05
                  Local via ge-0/0/0.0
23.23.23.0/24      *[OSPF/10] 09:54:10, metric 3
                  > to 11.11.11.2 via ge-0/0/2.0
24.24.24.0/24      *[OSPF/10] 09:54:10, metric 3
                  > to 11.11.11.2 via ge-0/0/2.0
25.25.25.0/24      *[OSPF/10] 09:54:10, metric 3
                  > to 11.11.11.2 via ge-0/0/2.0
128.92.17.45/32    *[OSPF/10] 09:54:05, metric 3
                  > to 11.11.11.2 via ge-0/0/2.0
128.92.20.175/32   *[Direct/0] 10:08:01
                  > via lo0.0
128.92.21.186/32   *[OSPF/10] 09:54:10, metric 3
                  > to 11.11.11.2 via ge-0/0/2.0
128.92.25.135/32   *[OSPF/10] 09:54:10, metric 3
                  > to 11.11.11.2 via ge-0/0/2.0
128.92.27.91/32    *[OSPF/10] 09:54:18, metric 1
                  > to 11.11.11.2 via ge-0/0/2.0
128.92.28.70/32    *[OSPF/10] 09:54:10, metric 2
                  > to 11.11.11.2 via ge-0/0/2.0
172.16.0.0/12      *[Static/5] 10:08:01
                  > to 10.92.31.254 via fxp0.0
192.168.0.0/16     *[Static/5] 10:08:01

```

```

192.168.102.0/23      > to 10.92.31.254 via fxp0.0
                    *[Static/5] 10:08:01
207.17.136.0/24      > to 10.92.31.254 via fxp0.0
                    *[Static/5] 10:08:01
207.17.136.192/32    > to 10.92.31.254 via fxp0.0
                    *[Static/5] 10:08:01
207.17.137.0/24      > to 10.92.31.254 via fxp0.0
                    *[Static/5] 10:08:01
224.0.0.5/32         > to 10.92.31.254 via fxp0.0
                    *[OSPF/10] 09:55:05, metric 1
                    MultiRecv

inet.3: 5 destinations, 5 routes (5 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

10.255.111.1/32      *[LDP/9] 09:41:03, metric 3
                    > to 11.11.11.2 via ge-0/0/2.0, Push 300128
10.255.111.2/32      *[LDP/9] 09:41:03, metric 3
                    > to 11.11.11.2 via ge-0/0/2.0, Push 300144
10.255.111.3/32      *[LDP/9] 09:41:03, metric 3
                    > to 11.11.11.2 via ge-0/0/2.0, Push 300160
10.255.111.4/32      *[LDP/9] 09:54:10, metric 2, tag 0
                    > to 11.11.11.2 via ge-0/0/2.0, Push 300000
10.255.112.2/32      *[LDP/9] 09:54:48, metric 1, tag 0
                    > to 11.11.11.2 via ge-0/0/2.0

iso.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

47.0005.80ff.f800.0000.0108.0001.1280.9202.0175/152
                    *[Direct/0] 10:08:01
                    > via lo0.0
49.0002.0192.0168.0001/72
                    *[Direct/0] 09:55:05
                    > via lo0.0

mpls.0: 10 destinations, 10 routes (10 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

0                    *[MPLS/0] 09:55:05, metric 1
                    Receive
1                    *[MPLS/0] 09:55:05, metric 1
                    Receive
2                    *[MPLS/0] 09:55:05, metric 1
                    Receive
13                   *[MPLS/0] 09:55:05, metric 1
                    Receive
300064               *[LDP/9] 09:54:48, metric 1
                    > to 11.11.11.2 via ge-0/0/2.0, Pop
300064(S=0)          *[LDP/9] 09:54:48, metric 1
                    > to 11.11.11.2 via ge-0/0/2.0, Pop
300112               *[LDP/9] 09:54:10, metric 2, tag 0
                    > to 11.11.11.2 via ge-0/0/2.0, Swap 300000
300192               *[LDP/9] 09:41:03, metric 3
                    > to 11.11.11.2 via ge-0/0/2.0, Swap 300128
300208               *[LDP/9] 09:41:03, metric 3
                    > to 11.11.11.2 via ge-0/0/2.0, Swap 300144
300224               *[LDP/9] 09:41:03, metric 3
                    > to 11.11.11.2 via ge-0/0/2.0, Swap 300160

inet6.0: 2 destinations, 2 routes (2 active, 0 holddown, 0 hidden)

```



+ = Active Route, - = Last Active, \* = Both

```
abcd::128:92:20:175/128
      *[Direct/0] 10:08:01
      > via lo0.0
fe80::5668:a50f:fcc1:1f9c/128
      *[Direct/0] 10:08:01
      > via lo0.0
```

**Meaning** The output shows all the routes in the routing table of Device R0.

---

### Verifying LDP Overview Information

---

**Purpose** Display LDP overview information.

**Action** On Device R0, from operational mode, run the **show ldp overview** command to display the overview of the LDP.

```
user@R0> show ldp overview
Instance: master
  Reference count: 2
  Router ID: 10.255.112.1
  Message id: 8
  Configuration sequence: 6
  Deaggregate: disabled
  Explicit null: disabled
  IPv6 tunneling: disabled
  Strict targeted hellos: disabled
  Loopback if added: yes
  Route preference: 9
  Unicast transit LSP chaining: disabled
  P2MP transit LSP chaining: disabled
  Transit LSP statistics based on route statistics: disabled
  LDP route acknowledgement: enabled
  LDP mtu discovery: disabled
  Longest Match: enabled
  Capabilities enabled: none
  Egress FEC capabilities enabled: entropy-label-capability
  Downstream unsolicited Sessions:
    Operational: 1
    Retention: liberal
    Control: ordered
  Auto targeted sessions:
    Auto targeted: disabled
  Timers:
    Keepalive interval: 10, Keepalive timeout: 30
    Link hello interval: 5, Link hello hold time: 15
    Targeted hello interval: 15, Targeted hello hold time: 45
    Label withdraw delay: 60, Make before break timeout: 30
    Make before break switchover delay: 3
    Link protection timeout: 120
  Graceful restart:
    Restart: disabled, Helper: enabled, Restart in process: false
    Reconnect time: 60000, Max neighbor reconnect time: 120000
    Recovery time: 160000, Max neighbor recovery time: 240000
  Traffic Engineering:
    Bgp igp: disabled
    Both ribs: disabled
    Mpls forwarding: disabled
  IGP:
    Tracking igp metric: disabled
    Sync session up delay: 10
  Session protection:
    Session protection: disabled
    Session protection timeout: 0
  Interface addresses advertising:
    11.11.11.1
    10.255.112.1
    128.92.20.175
  Label allocation:
    Current number of LDP labels allocated: 5
    Total number of LDP labels allocated: 11
    Total number of LDP labels freed: 6
    Total number of LDP label allocation failure: 0
    Current number of labels allocated by all protocols: 5
```

**Meaning** The output displays the LDP overview information of Device R0

#### Verify the LDP Entries in the Internal Topology Table

**Purpose** Display the route entries in the Label Distribution Protocol (LDP) internal topology table.

**Action** On Device R0, from operational mode, run the **show ldp route** command to display the internal topology table of LDP.

```
user@R0> show ldp route
```

| Destination      | Next-hop intf/lsp/table | Next-hop address |
|------------------|-------------------------|------------------|
| 10.4.0.0/16      | fxp0.0                  | 10.92.31.254     |
| 10.5.0.0/16      | fxp0.0                  | 10.92.31.254     |
| 10.6.128.0/17    | fxp0.0                  | 10.92.31.254     |
| 10.9.0.0/16      | fxp0.0                  | 10.92.31.254     |
| 10.10.0.0/16     | fxp0.0                  | 10.92.31.254     |
| 10.13.4.0/23     | fxp0.0                  | 10.92.31.254     |
| 10.13.10.0/23    | fxp0.0                  | 10.92.31.254     |
| 10.82.0.0/15     | fxp0.0                  | 10.92.31.254     |
| 10.84.0.0/16     | fxp0.0                  | 10.92.31.254     |
| 10.85.12.0/22    | fxp0.0                  | 10.92.31.254     |
| 10.92.0.0/16     | fxp0.0                  | 10.92.31.254     |
| 10.92.16.0/20    | fxp0.0                  |                  |
| 10.92.20.175/32  |                         |                  |
| 10.94.0.0/16     | fxp0.0                  | 10.92.31.254     |
| 10.99.0.0/16     | fxp0.0                  | 10.92.31.254     |
| 10.102.0.0/16    | fxp0.0                  | 10.92.31.254     |
| 10.150.0.0/16    | fxp0.0                  | 10.92.31.254     |
| 10.155.0.0/16    | fxp0.0                  | 10.92.31.254     |
| 10.157.64.0/19   | fxp0.0                  | 10.92.31.254     |
| 10.160.0.0/16    | fxp0.0                  | 10.92.31.254     |
| 10.204.0.0/16    | fxp0.0                  | 10.92.31.254     |
| 10.205.0.0/16    | fxp0.0                  | 10.92.31.254     |
| 10.206.0.0/16    | fxp0.0                  | 10.92.31.254     |
| 10.207.0.0/16    | fxp0.0                  | 10.92.31.254     |
| 10.209.0.0/16    | fxp0.0                  | 10.92.31.254     |
| 10.212.0.0/16    | fxp0.0                  | 10.92.31.254     |
| 10.213.0.0/16    | fxp0.0                  | 10.92.31.254     |
| 10.214.0.0/16    | fxp0.0                  | 10.92.31.254     |
| 10.215.0.0/16    | fxp0.0                  | 10.92.31.254     |
| 10.216.0.0/16    | fxp0.0                  | 10.92.31.254     |
| 10.218.13.0/24   | fxp0.0                  | 10.92.31.254     |
| 10.218.14.0/24   | fxp0.0                  | 10.92.31.254     |
| 10.218.16.0/20   | fxp0.0                  | 10.92.31.254     |
| 10.218.32.0/20   | fxp0.0                  | 10.92.31.254     |
| 10.227.0.0/16    | fxp0.0                  | 10.92.31.254     |
| 10.255.111.0/24  | ge-0/0/2.0              | 11.11.11.2       |
| 10.255.111.4/32  | ge-0/0/2.0              | 11.11.11.2       |
| 10.255.112.1/32  | lo0.0                   |                  |
| 10.255.112.2/32  | ge-0/0/2.0              | 11.11.11.2       |
| 11.11.11.0/24    | ge-0/0/2.0              |                  |
| 11.11.11.1/32    |                         |                  |
| 12.12.12.0/24    | ge-0/0/2.0              | 11.11.11.2       |
| 15.15.15.0/24    | ge-0/0/1.0              |                  |
| 15.15.15.1/32    |                         |                  |
| 22.22.22.0/24    | ge-0/0/0.0              |                  |
| 22.22.22.1/32    |                         |                  |
| 23.23.23.0/24    | ge-0/0/2.0              | 11.11.11.2       |
| 24.24.24.0/24    | ge-0/0/2.0              | 11.11.11.2       |
| 25.25.25.0/24    | ge-0/0/2.0              | 11.11.11.2       |
| 128.92.17.45/32  | ge-0/0/2.0              | 11.11.11.2       |
| 128.92.20.175/32 | lo0.0                   |                  |
| 128.92.21.186/32 | ge-0/0/2.0              | 11.11.11.2       |
| 128.92.25.135/32 | ge-0/0/2.0              | 11.11.11.2       |
| 128.92.27.91/32  | ge-0/0/2.0              | 11.11.11.2       |

|                   |            |              |
|-------------------|------------|--------------|
| 128.92.28.70/32   | ge-0/0/2.0 | 11.11.11.2   |
| 172.16.0.0/12     | fxp0.0     | 10.92.31.254 |
| 192.168.0.0/16    | fxp0.0     | 10.92.31.254 |
| 192.168.102.0/23  | fxp0.0     | 10.92.31.254 |
| 207.17.136.0/24   | fxp0.0     | 10.92.31.254 |
| 207.17.136.192/32 | fxp0.0     | 10.92.31.254 |
| 207.17.137.0/24   | fxp0.0     | 10.92.31.254 |
| 224.0.0.5/32      |            |              |

**Meaning** The output displays the route entries in the Label Distribution Protocol (LDP) internal topology table of Device R0.

### Verify Only FEC Information of LDP Route

**Purpose** Display only the FEC information of LDP route.

**Action** On Device R0, from operational mode, run the **show ldp route fec-only** command to display the routes in the routing table.

user@R0> **show ldp route fec-only**

| Destination     | Next-hop intf/lsp/table | Next-hop address |
|-----------------|-------------------------|------------------|
| 10.255.111.1/32 | ge-0/0/2.0              | 11.11.11.2       |
| 10.255.111.2/32 | ge-0/0/2.0              | 11.11.11.2       |
| 10.255.111.3/32 | ge-0/0/2.0              | 11.11.11.2       |
| 10.255.111.4/32 | ge-0/0/2.0              | 11.11.11.2       |
| 10.255.112.1/32 | lo0.0                   |                  |
| 10.255.112.2/32 | ge-0/0/2.0              | 11.11.11.2       |

**Meaning** The output displays only the FEC routes of LDP protocol available for Device R0.

### Verify FEC and Shadow Routes of LDP

**Purpose** Display the FEC and the shadow routes in the routing table.

**Action** On Device R0, from operational mode, run the **show ldp route fec-and-route** command to display the FEC and shadow routes in the routing table.

```
user@R0> show ldp route fec-and-route
```

| Destination     | Next-hop intf/lsp/table | Next-hop address |
|-----------------|-------------------------|------------------|
| 10.4.0.0/16     | fxp0.0                  | 10.92.31.254     |
| 10.5.0.0/16     | fxp0.0                  | 10.92.31.254     |
| 10.6.128.0/17   | fxp0.0                  | 10.92.31.254     |
| 10.9.0.0/16     | fxp0.0                  | 10.92.31.254     |
| 10.10.0.0/16    | fxp0.0                  | 10.92.31.254     |
| 10.13.4.0/23    | fxp0.0                  | 10.92.31.254     |
| 10.13.10.0/23   | fxp0.0                  | 10.92.31.254     |
| 10.82.0.0/15    | fxp0.0                  | 10.92.31.254     |
| 10.84.0.0/16    | fxp0.0                  | 10.92.31.254     |
| 10.85.12.0/22   | fxp0.0                  | 10.92.31.254     |
| 10.92.0.0/16    | fxp0.0                  | 10.92.31.254     |
| 10.92.16.0/20   | fxp0.0                  |                  |
| 10.92.20.175/32 |                         |                  |
| 10.94.0.0/16    | fxp0.0                  | 10.92.31.254     |
| 10.99.0.0/16    | fxp0.0                  | 10.92.31.254     |
| 10.102.0.0/16   | fxp0.0                  | 10.92.31.254     |
| 10.150.0.0/16   | fxp0.0                  | 10.92.31.254     |
| 10.155.0.0/16   | fxp0.0                  | 10.92.31.254     |
| 10.157.64.0/19  | fxp0.0                  | 10.92.31.254     |
| 10.160.0.0/16   | fxp0.0                  | 10.92.31.254     |
| 10.204.0.0/16   | fxp0.0                  | 10.92.31.254     |
| 10.205.0.0/16   | fxp0.0                  | 10.92.31.254     |
| 10.206.0.0/16   | fxp0.0                  | 10.92.31.254     |
| 10.207.0.0/16   | fxp0.0                  | 10.92.31.254     |
| 10.209.0.0/16   | fxp0.0                  | 10.92.31.254     |
| 10.212.0.0/16   | fxp0.0                  | 10.92.31.254     |
| 10.213.0.0/16   | fxp0.0                  | 10.92.31.254     |
| 10.214.0.0/16   | fxp0.0                  | 10.92.31.254     |
| 10.215.0.0/16   | fxp0.0                  | 10.92.31.254     |
| 10.216.0.0/16   | fxp0.0                  | 10.92.31.254     |
| 10.218.13.0/24  | fxp0.0                  | 10.92.31.254     |
| 10.218.14.0/24  | fxp0.0                  | 10.92.31.254     |
| 10.218.16.0/20  | fxp0.0                  | 10.92.31.254     |
| 10.218.32.0/20  | fxp0.0                  | 10.92.31.254     |
| 10.227.0.0/16   | fxp0.0                  | 10.92.31.254     |
| 10.255.111.0/24 | ge-0/0/2.0              | 11.11.11.2       |
| 10.255.111.1/32 | ge-0/0/2.0              | 11.11.11.2       |
| 10.255.111.2/32 | ge-0/0/2.0              | 11.11.11.2       |
| 10.255.111.3/32 | ge-0/0/2.0              | 11.11.11.2       |
| 10.255.111.4/32 | ge-0/0/2.0              | 11.11.11.2       |
| 10.255.111.4/32 | ge-0/0/2.0              | 11.11.11.2       |
| 10.255.112.1/32 | lo0.0                   |                  |
| 10.255.112.1/32 | lo0.0                   |                  |
| 10.255.112.2/32 | ge-0/0/2.0              | 11.11.11.2       |
| 10.255.112.2/32 | ge-0/0/2.0              | 11.11.11.2       |
| 11.11.11.0/24   | ge-0/0/2.0              |                  |
| 11.11.11.1/32   |                         |                  |
| 12.12.12.0/24   | ge-0/0/2.0              | 11.11.11.2       |
| 15.15.15.0/24   | ge-0/0/1.0              |                  |
| 15.15.15.1/32   |                         |                  |
| 22.22.22.0/24   | ge-0/0/0.0              |                  |
| 22.22.22.1/32   |                         |                  |
| 23.23.23.0/24   | ge-0/0/2.0              | 11.11.11.2       |
| 24.24.24.0/24   | ge-0/0/2.0              | 11.11.11.2       |

|                   |            |              |
|-------------------|------------|--------------|
| 25.25.25.0/24     | ge-0/0/2.0 | 11.11.11.2   |
| 128.92.17.45/32   | ge-0/0/2.0 | 11.11.11.2   |
| 128.92.20.175/32  | lo0.0      |              |
| 128.92.21.186/32  | ge-0/0/2.0 | 11.11.11.2   |
| 128.92.25.135/32  | ge-0/0/2.0 | 11.11.11.2   |
| 128.92.27.91/32   | ge-0/0/2.0 | 11.11.11.2   |
| 128.92.28.70/32   | ge-0/0/2.0 | 11.11.11.2   |
| 172.16.0.0/12     | fxp0.0     | 10.92.31.254 |
| 192.168.0.0/16    | fxp0.0     | 10.92.31.254 |
| 192.168.102.0/23  | fxp0.0     | 10.92.31.254 |
| 207.17.136.0/24   | fxp0.0     | 10.92.31.254 |
| 207.17.136.192/32 | fxp0.0     | 10.92.31.254 |
| 207.17.137.0/24   | fxp0.0     | 10.92.31.254 |
| 224.0.0.5/32      |            |              |

**Meaning** The output displays the FEC and the shadow routes of Device R0

- Related Documentation**
- [Longest Match Support for LDP Overview on page 585](#)
  - [longest-match on page 1460](#)
  - [Configuring Longest Match for LDP on page 592](#)

## Configuring LDP Route Preferences

When several protocols calculate routes to the same destination, route preferences are used to select which route is installed in the forwarding table. The route with the lowest preference value is selected. The preference value can be a number in the range 0 through 255. By default, LDP routes have a preference value of 9.

To modify the route preferences, include the **preference** statement:

```
preference preference;
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

## LDP Graceful Restart

LDP graceful restart enables a router whose LDP control plane is undergoing a restart to continue to forward traffic while recovering its state from neighboring routers. It also enables a router on which helper mode is enabled to assist a neighboring router that is attempting to restart LDP.

During session initialization, a router advertises its ability to perform LDP graceful restart or to take advantage of a neighbor performing LDP graceful restart by sending the graceful restart TLV. This TLV contains two fields relevant to LDP graceful restart: the reconnect time and the recovery time. The values of the reconnect and recovery times indicate the graceful restart capabilities supported by the router.

When a router discovers that a neighboring router is restarting, it waits until the end of the recovery time before attempting to reconnect. The recovery time is the length of time a router waits for LDP to restart gracefully. The recovery time period begins when an

initialization message is sent or received. This time period is also typically the length of time that a neighboring router maintains its information about the restarting router, allowing it to continue to forward traffic.

You can configure LDP graceful restart in both the master instance for the LDP protocol and for a specific routing instance. You can disable graceful restart at the global level for all protocols, at the protocol level for LDP only, and on a specific routing instance. LDP graceful restart is disabled by default, because at the global level, graceful restart is disabled by default. However, helper mode (the ability to assist a neighboring router attempting a graceful restart) is enabled by default.

The following are some of the behaviors associated with LDP graceful restart:

- Outgoing labels are not maintained in restarts. New outgoing labels are allocated.
- When a router is restarting, no label-map messages are sent to neighbors that support graceful restart until the restarting router has stabilized (label-map messages are immediately sent to neighbors that do not support graceful restart). However, all other messages (keepalive, address-message, notification, and release) are sent as usual. Distributing these other messages prevents the router from distributing incomplete information.
- Helper mode and graceful restart are independent. You can disable graceful restart in the configuration, but still allow the router to cooperate with a neighbor attempting to restart gracefully.

## Configuring LDP Graceful Restart

---

When you alter the graceful restart configuration at either the **[edit routing-options graceful-restart]** or **[edit protocols ldp graceful-restart]** hierarchy levels, any running LDP session is automatically restarted to apply the graceful restart configuration. This behavior mirrors the behavior of BGP when you alter its graceful restart configuration.

By default, graceful restart helper mode is enabled, but graceful restart is disabled. Thus, the default behavior of a router is to assist neighboring routers attempting a graceful restart, but not to attempt a graceful restart itself.

To configure LDP graceful restart, see the following sections:

- [Enabling Graceful Restart on page 610](#)
- [Disabling LDP Graceful Restart or Helper Mode on page 611](#)
- [Configuring Reconnect Time on page 612](#)
- [Configuring Recovery Time and Maximum Recovery Time on page 612](#)

### Enabling Graceful Restart

To enable LDP graceful restart, you also need to enable graceful restart on the router. To enable graceful restart, include the **graceful-restart** statement:

```
graceful-restart;
```

You can include this statement at the following hierarchy levels:



- [edit routing-options]
- [edit logical-systems *logical-system-name* routing-options]



**NOTE:** ACX Series routers do not support [edit logical-systems *logical-system-name* routing-options] hierarchy level.

The **graceful-restart** statement enables graceful restart for all protocols supporting this feature on the router. For more information about graceful restart, see the *Junos OS Routing Protocols Library*.

By default, LDP graceful restart is enabled when you enable graceful restart at both the LDP protocol level and on all the routing instances. However, you can disable both LDP graceful restart and LDP graceful restart helper mode.

## Disabling LDP Graceful Restart or Helper Mode

To disable LDP graceful restart and recovery, include the **disable** statement:

```
ldp {
  graceful-restart {
    disable;
  }
}
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

You can disable helper mode at the LDP protocols level only. You cannot disable helper mode for a specific routing instance. To disable LDP helper mode, include the **helper-disable** statement:

```
ldp {
  graceful-restart {
    helper-disable;
  }
}
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

The following LDP graceful restart configurations are possible:

- LDP graceful restart and helper mode are both enabled.
- LDP graceful restart is disabled but helper mode is enabled. A router configured in this way cannot restart gracefully but can help a restarting neighbor.
- LDP graceful restart and helper mode are both disabled. The router does not use LDP graceful restart or the graceful restart type, length, and value (TLV) sent in the initialization message. The router behaves as a router that cannot support LDP graceful restart.

A configuration error is issued if you attempt to enable graceful restart and disable helper mode.

## Configuring Reconnect Time

After the LDP connection between neighbors fails, neighbors wait a certain amount of time for the gracefully restarting router to resume sending LDP messages. After the wait period, the LDP session can be reestablished. You can configure the wait period in seconds. This value is included in the fault tolerant session TLV sent in LDP initialization messages when LDP graceful restart is enabled.

Suppose that Router A and Router B are LDP neighbors. Router A is the restarting Router. The reconnect time is the time that Router A tells Router B to wait after Router B detects that Router A restarted.

To configure the reconnect time, include the **reconnect-time** statement:

```
graceful-restart {  
    reconnect-time seconds;  
}
```

You can set the reconnect time to a value in the range from 30 through 300 seconds. By default, it is 60 seconds.

For a list of hierarchy levels at which you can configure these statements, see the statement summary sections for these statements.

## Configuring Recovery Time and Maximum Recovery Time

The recovery time is the amount of time a router waits for LDP to restart gracefully. The recovery time period begins when an initialization message is sent or received. This period is also typically the amount of time that a neighboring router maintains its information about the restarting router, allowing it to continue to forward traffic.

To prevent a neighboring router from being adversely affected if it receives a false value for the recovery time from the restarting router, you can configure the maximum recovery time on the neighboring router. A neighboring router maintains its state for the shorter of the two times. For example, Router A is performing an LDP graceful restart. It has sent a recovery time of 900 seconds to neighboring Router B. However, Router B has its maximum recovery time configured at 400 seconds. Router B will only wait for 400 seconds before it purges its LDP information from Router A.

To configure recovery time, include the **recovery-time** statement and the **maximum-neighbor-recovery-time** statement:

```
graceful-restart {  
    maximum-neighbor-recovery-time seconds;  
    recovery-time seconds;  
}
```

For a list of hierarchy levels at which you can configure these statements, see the statement summary sections for these statements.

## Filtering Inbound LDP Label Bindings

You can filter received LDP label bindings, applying policies to accept or deny bindings advertised by neighboring routers. To configure received-label filtering, include the **import** statement:

```
import [ policy-names ];
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

The named policy (configured at the **[edit policy-options]** hierarchy level) is applied to all label bindings received from all LDP neighbors. All filtering is done with **from** statements. [Table 18 on page 613](#) lists the only **from** operators that apply to LDP received-label filtering.

**Table 18: from Operators That Apply to LDP Received-Label Filtering**

| from Operator       | Description                                                                                |
|---------------------|--------------------------------------------------------------------------------------------|
| <b>interface</b>    | Matches on bindings received from a neighbor that is adjacent over the specified interface |
| <b>neighbor</b>     | Matches on bindings received from the specified LDP router ID                              |
| <b>next-hop</b>     | Matches on bindings received from a neighbor advertising the specified interface address   |
| <b>route-filter</b> | Matches on bindings with the specified prefix                                              |

If a binding is filtered, it still appears in the LDP database, but is not considered for installation as part of a label-switched path (LSP).

Generally, applying policies in LDP can be used only to block the establishment of LSPs, not to control their routing. This is because the path that an LSP follows is determined by unicast routing, and not by LDP. However, when there are multiple equal-cost paths to the destination through different neighbors, you can use LDP filtering to exclude some of the possible next hops from consideration. (Otherwise, LDP chooses one of the possible next hops at random.)

LDP sessions are not bound to interfaces or interface addresses. LDP advertises only per-router (not per-interface) labels; so if multiple parallel links exist between two routers, only one LDP session is established, and it is not bound to a single interface. When a router has multiple adjacencies to the same neighbor, take care to ensure that the filter does what is expected. (Generally, using **next-hop** and **interface** is not appropriate in this case.)

If a label has been filtered (meaning that it has been rejected by the policy and is not used to construct an LSP), it is marked as filtered in the database:

```
user@host> show ldp database
```

```
Input label database, 10.10.255.1:0-10.10.255.6:0
Label Prefix
3 10.10.255.6/32 (Filtered)
Output label database, 10.10.255.1:0-10.10.255.6:0
Label Prefix
3 10.10.255.1/32 (Filtered)
```

For more information about how to configure policies for LDP, see the *Routing Policies, Firewall Filters, and Traffic Policers Feature Guide for Routing Devices*.

## Examples: Filtering Inbound LDP Label Bindings

Accept only /32 prefixes from all neighbors:

```
[edit]
protocols {
  ldp {
    import only-32;
    ...
  }
}
policy-options {
  policy-statement only-32 {
    term first {
      from {
        route-filter 0.0.0.0/0 upto /31;
      }
      then reject;
    }
    then accept;
  }
}
```

Accept 131.108/16 or longer from router ID 10.10.255.2 and accept all prefixes from all other neighbors:

```
[edit]
protocols {
  ldp {
    import nosy-neighbor;
    ...
  }
}
policy-options {
  policy-statement nosy-neighbor {
    term first {
      from {
        neighbor 10.10.255.2;
        route-filter 131.108.0.0/16 orlonger accept;
        route-filter 0.0.0.0/0 orlonger reject;
      }
    }
    then accept;
  }
}
```

## Filtering Outbound LDP Label Bindings

You can configure export policies to filter LDP outbound labels. You can filter outbound label bindings by applying routing policies to block bindings from being advertised to neighboring routers. To configure outbound label filtering, include the **export** statement:

**export** [*policy-name*];

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

The named export policy (configured at the **[edit policy-options]** hierarchy level) is applied to all label bindings transmitted to all LDP neighbors. The only **from** operator that applies to LDP outbound label filtering is **route-filter**, which matches bindings with the specified prefix. The only **to** operators that apply to outbound label filtering are the operators in [Table 19 on page 615](#).

Table 19: to Operators for LDP Outbound-Label Filtering

| to Operator      | Description                                                                          |
|------------------|--------------------------------------------------------------------------------------|
| <b>interface</b> | Matches on bindings sent to a neighbor that is adjacent over the specified interface |
| <b>neighbor</b>  | Matches on bindings sent to the specified LDP router ID                              |
| <b>next-hop</b>  | Matches on bindings sent to a neighbor advertising the specified interface address   |

If a binding is filtered, the binding is not advertised to the neighboring router, but it can be installed as part of an LSP on the local router. You can apply policies in LDP to block the establishment of LSPs, but not to control their routing. The path an LSP follows is determined by unicast routing, not by LDP.

LDP sessions are not bound to interfaces or interface addresses. LDP advertises only per-router (not per-interface) labels. If multiple parallel links exist between two routers, only one LDP session is established, and it is not bound to a single interface.

Do not use the **next-hop** and **interface** operators when a router has multiple adjacencies to the same neighbor.

Filtered labels are marked in the database:

```
user@host> show ldp database
Input label database, 10.10.255.1:0-10.10.255.3:0
Label Prefix
100007 10.10.255.2/32
3 10.10.255.3/32
Output label database, 10.10.255.1:0-10.10.255.3:0
Label Prefix
3 10.10.255.1/32
100001 10.10.255.6/32 (Filtered)
```

For more information about how to configure policies for LDP, see the *Routing Policies, Firewall Filters, and Traffic Policers Feature Guide for Routing Devices*.

## Examples: Filtering Outbound LDP Label Bindings

Block transmission of the route for **10.10.255.6/32** to any neighbors:

```
[edit protocols]
ldp {
  export block-one;
}
policy-options {
  policy-statement block-one {
    term first {
      from {
        route-filter 10.10.255.6/32 exact;
      }
      then reject;
    }
    then accept;
  }
}
```

Send only **131.108/16** or longer to router ID **10.10.255.2**, and send all prefixes to all other routers:

```
[edit protocols]
ldp {
  export limit-lsps;
}
policy-options {
  policy-statement limit-lsps {
    term allow-one {
      from {
        route-filter 131.108.0.0/16 orlonger;
      }
      to {
        neighbor 10.10.255.2;
      }
      then accept;
    }
    term block-the-rest {
      to {
        neighbor 10.10.255.2;
      }
      then reject;
    }
    then accept;
  }
}
```

## Specifying the Transport Address Used by LDP

Routers must first establish a TCP session between each other before they can establish an LDP session. The TCP session enables the routers to exchange the label advertisements needed for the LDP session. To establish the TCP session, each router must learn the other router's transport address. The transport address is an IP address used to identify the TCP session over which the LDP session will run.

To configure the LDP transport address, include the `transport-address` statement:

```
transport-address (router-id | interface);
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

If you specify the **router-id** option, the address of the router identifier is used as the transport address (unless otherwise configured, the router identifier is typically the same as the loopback address). If you specify the **interface** option, the interface address is used as the transport address for any LDP sessions to neighbors that can be reached over that interface. Note that the router identifier is used as the transport address by default.

You cannot specify the **interface** option when there are multiple parallel links to the same LDP neighbor, because the LDP specification requires that the same transport address be advertised on all interfaces to the same neighbor. If LDP detects multiple parallel links to the same neighbor, it disables interfaces to that neighbor one by one until the condition is cleared, either by disconnecting the neighbor on an interface or by specifying the **router-id** option.

Related Documentation

- [transport-address on page 1650](#)

## Configuring the Prefixes Advertised into LDP from the Routing Table

You can control the set of prefixes that are advertised into LDP and cause the router to be the egress router for those prefixes. By default, only the loopback address is advertised into LDP. To configure the set of prefixes from the routing table to be advertised into LDP, include the **egress-policy** statement:

```
egress-policy policy-name;
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.



**NOTE:** If you configure an egress policy for LDP that does not include the loopback address, it is no longer advertised in LDP. To continue to advertise the loopback address, you need to explicitly configure it as a part of the LDP egress policy.

The named policy (configured at the **[edit policy-options]** or **[edit logical-systems logical-system-name policy-options]** hierarchy level) is applied to all routes in the routing

table. Those routes that match the policy are advertised into LDP. You can control the set of neighbors to which those prefixes are advertised by using the **export** statement. Only **from** operators are considered; you can use any valid **from** operator. For more information, see the *Junos OS Routing Protocols Library*.



**NOTE:** ACX Series routers do not support [edit logical-systems] hierarchy level.

---

### Example: Configuring the Prefixes Advertised into LDP

Advertise all connected routes into LDP:

```
[edit protocols]
ldp {
  egress-policy connected-only;
}
policy-options {
  policy-statement connected-only {
    from {
      protocol direct;
    }
    then accept;
  }
}
```

---

### Configuring FEC Deaggregation

When an LDP egress router advertises multiple prefixes, the prefixes are bound to a single label and aggregated into a single forwarding equivalence class (FEC). By default, LDP maintains this aggregation as the advertisement traverses the network.

Normally, because an LSP is not split across multiple next hops and the prefixes are bound into a single LSP, load-balancing across equal-cost paths does not occur. You can, however, load-balance across equal-cost paths if you configure a load-balancing policy and deaggregate the FECs.

Deaggregating the FECs causes each prefix to be bound to a separate label and become a separate LSP.

To configure deaggregated FECs, include the **deaggregate** statement:

**deaggregate;**

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

For all LDP sessions, you can configure deaggregated FECs only globally.

Deaggregating a FEC allows the resulting multiple LSPs to be distributed across multiple equal-cost paths and distributes LSPs across the multiple next hops on the egress segments but installs only one next hop per LSP.



To aggregate FECs, include the **no-deaggregate** statement:

```
no-deaggregate;
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

For all LDP sessions, you can configure aggregated FECs only globally.

**Related  
Documentation**

- [Configuring Load Balancing Across RSVP LSPs on page 514](#)
- [Configuring Protocol-Independent Load Balancing in Layer 3 VPNs](#)
- [Configuring VPLS Load Balancing](#)
- [Example: Load Balancing BGP Traffic](#)

## Configuring Policers for LDP FECs

You can configure the Junos OS to track and police traffic for LDP FECs. LDP FEC policers can be used to do any of the following:

- Track or police the ingress traffic for an LDP FEC.
- Track or police the transit traffic for an LDP FEC.
- Track or police LDP FEC traffic originating from a specific forwarding class.
- Track or police LDP FEC traffic originating from a specific virtual routing and forwarding (VRF) site.
- Discard false traffic bound for a specific LDP FEC.

To police traffic for an LDP FEC, you must first configure a filter. Specifically, you need to configure either the **interface** statement or the **interface-set** statement at the **[edit firewall family protocol-family filter filter-name term term-name from]** hierarchy level. The **interface** statement allows you to match the filter to a single interface. The **interface-set** statement allows you to match the filter to multiple interfaces.

For more information on how to configure the **interface** statement, the **interface-set** statement, and policers for LDP FECs, see the *Routing Policies, Firewall Filters, and Traffic Policers Feature Guide for Routing Devices*.

Once you have configured the filters, you need to include them in the **policing** statement configuration for LDP. To configure policers for LDP FECs, include the **policing** statement:

```
policing {
  fec fec-address {
    ingress-traffic filter-name;
    transit-traffic filter-name;
  }
}
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

The **policing** statement includes the following options:

- **fec**—Specify the FEC address for the LDP FEC you want to police.
- **ingress-filter**—Specify the name of the ingress traffic filter.
- **transit-traffic**—Specify the name of the transit traffic filter.

## Configuring LDP IPv4 FEC Filtering

---

By default, when a targeted LDP session is established, the Junos OS always exchanges both the IPv4 forwarding equivalence classes (FECs) and the Layer 2 circuit FECs over the targeted LDP session. For an LDP session to an indirectly connected neighbor, you might only want to export Layer 2 circuit FECs to the neighbor if the session was specifically configured to support Layer 2 circuits or VPLS.

In a mixed vendor network where all non-BGP prefixes are advertised into LDP, the LDP database can become large. For this type of environment, it can be useful to prevent the advertisement of IPv4 FECs over LDP sessions formed because of Layer 2 circuit or LDP VPLS configuration. Similarly, it can be useful to filter any IPv4 FECs received in this sort of environment.

If all the LDP neighbors associated with an LDP session are Layer 2 only, you can configure the Junos OS to advertise only Layer 2 circuit FECs by configuring the **l2-smart-policy** statement. This feature also automatically filters out the IPv4 FECs received on this session. Configuring an explicit export or import policy that is activated for **l2-smart-policy** disables this feature in the corresponding direction.

If one of the LDP session's neighbors is formed because of a discovered adjacency or if the adjacency is formed because of an LDP tunneling configuration on one or more RSVP LSPs, the IPv4 FECs are advertised and received using the default behavior.

To prevent LDP from exporting IPv4 FECs over LDP sessions with Layer 2 neighbors only and to filter out IPv4 FECs received over such sessions, include the **l2-smart-policy** statement:

**l2-smart-policy;**

For a list of hierarchy levels at which you can configure this statement, see the statement summary for this statement.

## Configuring BFD for LDP LSPs

---

You can configure Bidirectional Forwarding Detection (BFD) for LDP LSPs. The BFD protocol is a simple hello mechanism that detects failures in a network. Hello packets are sent at a specified, regular interval. A neighbor failure is detected when the router stops receiving a reply after a specified interval. BFD works with a wide variety of network environments and topologies. The failure detection timers for BFD have shorter time limits than the failure detection mechanisms of static routes, providing faster detection.

An error is logged whenever a BFD session for a path fails. The following shows how BFD for LDP LSP log messages might appear:

```
RPD_LDP_BFD_UP: LDP BFD session for FEC 10.255.16.14/32 is up
RPD_LDP_BFD_DOWN: LDP BFD session for FEC 10.255.16.14/32 is down
```

You can also configure BFD for RSVP LSPs, as described in [“Configuring BFD for RSVP-Signaled LSPs” on page 383](#).

The BFD failure detection timers are adaptive and can be adjusted to be more or less aggressive. For example, the timers can adapt to a higher value if the adjacency fails, or a neighbor can negotiate a higher value for a timer than the configured value. The timers adapt to a higher value when a BFD session flap occurs more than three times in a span of 15 seconds. A back-off algorithm increases the receive (Rx) interval by two if the local BFD instance is the reason for the session flap. The transmission (Tx) interval is increased by two if the remote BFD instance is the reason for the session flap. You can use the **clear bfd adaptation** command to return BFD interval timers to their configured values. The **clear bfd adaptation** command is hitless, meaning that the command does not affect traffic flow on the routing device.

To enable BFD for LDP LSPs, include the **oam** and **bfd-liveness-detection** statements:

```
oam {
  bfd-liveness-detection {
    detection-time threshold milliseconds;
    ecmp;
    failure-action {
      remove-nexthop;
      remove-route;
    }
    holddown-interval seconds;
    ingress-policy ingress-policy-name;
    minimum-interval milliseconds;
    minimum-receive-interval milliseconds;
    minimum-transmit-interval milliseconds;
    multiplier detection-time-multiplier;
    no-adaptation;
    transmit-interval {
      minimum-interval milliseconds;
      threshold milliseconds;
    }
    version (0 | 1 | automatic);
  }
  fec fec-address {
    bfd-liveness-detection {
      detection-time threshold milliseconds;
      ecmp;
      failure-action {
        remove-nexthop;
        remove-route;
      }
      holddown-interval milliseconds;
      ingress-policy ingress-policy-name;
      minimum-interval milliseconds;
      minimum-receive-interval milliseconds;
    }
  }
}
```

```

        minimum-transmit-interval milliseconds;
        multiplier detection-time-multiplier;
        no-adaptation;
        transmit-interval {
            minimum-interval milliseconds;
            threshold milliseconds;
        }
        version (0 | 1 | automatic);
    }
    no-bfd-liveness-detection;
    periodic-traceroute {
        disable;
        exp exp-value;
        fanout fanout-value;
        frequency minutes;
        paths number-of-paths;
        retries retry-attempts;
        source address;
        ttl ttl-value;
        wait seconds;
    }
}
lsp-ping-interval seconds;
periodic-traceroute {
    disable;
    exp exp-value;
    fanout fanout-value;
    frequency minutes;
    paths number-of-paths;
    retries retry-attempts;
    source address;
    ttl ttl-value;
    wait seconds;
}
}

```

You can enable BFD for the LDP LSPs associated with a specific forwarding equivalence class (FEC) by configuring the FEC address using the **fec** option at the **[edit protocols ldp]** hierarchy level. Alternatively, you can configure an Operation Administration and Management (OAM) ingress policy to enable BFD on a range of FEC addresses. For more information, see [“Configuring OAM Ingress Policies for LDP” on page 625](#).

You cannot enable BFD LDP LSPs unless their equivalent FEC addresses are explicitly configured or OAM is enabled on the FECs using an OAM ingress policy. If BFD is not enabled for any FEC addresses, the BFD session will not come up.

You can configure the **oam** statement at the following hierarchy levels:

- **[edit protocols ldp]**
- **[edit logical-systems *logical-system-name* protocols ldp]**



**NOTE:** ACX Series routers do not support **[edit logical-systems]** hierarchy level.

The **oam** statement includes the following options:

- **fec**—Specify the FEC address. You must either specify a FEC address or configure an OAM ingress policy to ensure that the BFD session comes up.
- **lsp-ping-interval**—Specify the duration of the LSP ping interval in seconds. To issue a ping on an LDP-sigaled LSP, use the **ping mpls ldp** command. For more information, see the [CLI Explorer](#).

The **bfd-liveness-detection** statement includes the following options:

- **ecmp**—Cause LDP to establish BFD sessions for all ECMP paths configured for the specified FEC. If you configure the **ecmp** option, you must also configure the **periodic-traceroute** statement for the specified FEC. If you do not do so, the commit operation fails. You can configure the **periodic-traceroute** statement at the global hierarchy level (**[edit protocols ldp oam]**) while only configuring the **ecmp** option for a specific FEC (**[edit protocols ldp oam fec address bfd-liveness-detection]**).
- **holddown-interval**—Specify the duration the BFD session should remain up before adding the route or next hop. Specifying a time of 0 seconds causes the route or next hop to be added as soon as the BFD session comes back up.
- **minimum-interval**—Specify the minimum transmit and receive interval. If you configure the **minimum-interval** option, you do not need to configure the **minimum-receive-interval** option or the **minimum-transmit-interval** option.
- **minimum-receive-interval**—Specify the minimum receive interval. The range is from 1 through 255,000 milliseconds.
- **minimum-transmit-interval**—Specify the minimum transmit interval. The range is from 1 through 255,000 milliseconds.
- **multiplier**—Specify the detection time multiplier. The range is from 1 through 255.
- **version**—Specify the BFD version. The options are BFD version 0 or BFD version 1. By default, the Junos OS software attempts to automatically determine the BFD version.

## Configuring ECMP-Aware BFD for LDP LSPs

When you configure BFD for a FEC, a BFD session is established for only one active local next-hop for the router. However, you can configure multiple BFD sessions, one for each FEC associated with a specific equal-cost multipath (ECMP) path. For this to function properly, you also need to configure LDP LSP periodic traceroute. (See “[Configuring LDP LSP Traceroute](#)” on page 729.) LDP LSP traceroute is used to discover ECMP paths. A BFD session is initiated for each ECMP path discovered. Whenever a BFD session for one of the ECMP paths fails, an error is logged.

LDP LSP traceroute is run periodically to check the integrity of the ECMP paths. The following might occur when a problem is discovered:

- If the latest LDP LSP traceroute for a FEC differs from the previous traceroute, the BFD sessions associated with that FEC (the BFD sessions for address ranges that have

changed from previous run) are brought down and new BFD sessions are initiated for the destination addresses in the altered ranges.

- If the LDP LSP traceroute returns an error (for example, a timeout), all the BFD sessions associated with that FEC are torn down.

To configure LDP to establish BFD sessions for all ECMP paths configured for the specified FEC, include the **ecmp** statement.

```
ecmp;
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

Along with the **ecmp** statement, you must also include the **periodic-traceroute** statement, either in the global LDP OAM configuration (at the **[edit protocols ldp oam]** or **[edit logical-systems logical-system-name protocols ldp oam]** hierarchy level) or in the configuration for the specified FEC (at the **[edit protocols ldp oam fec address]** or **[edit logical-systems logical-system-name protocols ldp oam fec address]** hierarchy level). Otherwise, the commit operation fails.



**NOTE:** ACX Series routers do not support **[edit logical-systems]** hierarchy level.

---

## Configuring a Failure Action for the BFD Session on an LDP LSP

---

You can configure route and next-hop properties in the event of a BFD session failure event on an LDP LSP. The failure event could be an existing BFD session that has gone down or could be a BFD session that never came up. LDP adds back the route or next hop when the relevant BFD session comes back up.

You can configure one of the following failure action options for the **failure-action** statement in the event of a BFD session failure on the LDP LSP:

- **remove-nexthop**—Removes the route corresponding to the next hop of the LSP's route at the ingress node when a BFD session failure event is detected.
- **remove-route**—Removes the route corresponding to the LSP from the appropriate routing tables when a BFD session failure event is detected. If the LSP is configured with ECMP and a BFD session corresponding to any path goes down, the route is removed.

To configure a failure action in the event of a BFD session failure on an LDP LSP, include either the **remove-nexthop** option or the **remove-route** option for the **failure-action** statement:

```
failure-action {  
  remove-nexthop;  
  remove-route;  
}
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

## Configuring the Holddown Interval for the BFD Session

You can specify the duration the BFD session should be up before adding a route or next hop by configuring the **holddown-interval** statement at either the **[edit protocols ldp oam bfd-liveness-detection]** hierarchy level or at the **[edit protocols ldp oam fec address bfd-liveness-detection]** hierarchy level. Specifying a time of 0 seconds causes the route or next hop to be added as soon as the BFD session comes back up.

**holddown-interval** *seconds*;

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

## Configuring OAM Ingress Policies for LDP

Using the **ingress-policy** statement, you can configure an Operation, Administration, and Management (OAM) policy to choose which forwarding equivalence classes (FECs) need to have OAM enabled. If the FEC passes through the policy or if the FEC is explicitly configured, OAM is enabled for a FEC. For FECs chosen using a policy, the BFD parameters configured under **[edit protocols ldp oam bfd-liveness-detection]** are applied.

You configure the OAM ingress policy at the **[edit policy-options]** hierarchy level. To configure an OAM ingress policy, include the **ingress-policy** statement:

**ingress-policy** *ingress-policy-name*;

You can configure this statement at the following hierarchy levels:

- **[edit protocols ldp oam]**
- **[edit logical-systems *logical-system-name* protocols ldp oam]**



**NOTE:** ACX Series routers do not support **[edit logical-systems]** hierarchy level.

## Configuring LDP Link Protection

You can configure Label Distribution Protocol (LDP) link protection for both unicast and multicast LDP label-switched paths (LSPs) to provide resiliency during link or node failure.

Before you begin:

1. Configure the device interfaces.
2. Configure the router ID and autonomous system number for the device.
3. Configure the following protocols:
  - a. RSVP

- b. MPLS with traffic engineering capability.
- c. OSPF with traffic engineering capability.



**NOTE:** For multicast LDP link protection with loop-free alternative (LFA), enable link protection.

```
[edit protocols]
user@R0# set ospf area 0 interface all link-protection
```

To configure LDP link protection:

1. Enable point-to-multipoint LDP LSPs.

```
[edit protocols]
user@R0# set ldp p2mp
```

2. Enable LDP on all the interfaces of Router R0 (excluding the management interface) and configure link protection with dynamic RSVP bypass LSP.

```
[edit protocols]
user@R0# set ldp interface all link-protection dynamic-rsvp-lsp
user@R0# set ldp interface fxp0.0 disable
```

3. Verify and commit the configuration.

For example:

```
[edit protocols]
user@R0# show protocols
rsvp {
  interface all;
  interface fxp0.0 {
    disable;
  }
}
mpls {
  traffic-engineering;
  interface all;
  interface fxp0.0 {
    disable;
  }
}
ospf {
  traffic-engineering;
  area 0.0.0.0 {
    interface all {
      metric 1;
    }
    interface fxp0.0 {
      disable;
    }
  }
}
ldp {
  interface all {
```



```

link-protection {
    dynamic-rsvp-lsp;
}
}
interface fxp0.0 {
    disable;
}
p2mp;
}

[edit]
user@R0# commit
commit complete

```

**Related Documentation**

- [Example: Configuring LDP Link Protection on page 627](#)

## Example: Configuring LDP Link Protection

- [LDP Link Protection Overview on page 627](#)

### LDP Link Protection Overview

- [Introduction to LDP on page 627](#)
- [Junos OS LDP Protocol Implementation on page 628](#)
- [Understanding Multipoint Extensions to LDP on page 628](#)
- [Using Multipoint Extensions to LDP on Targeted LDP Sessions on page 628](#)
- [Current Limitations of LDP Link Protection on page 629](#)
- [Using RSVP LSP as a Solution on page 630](#)
- [Understanding Multicast LDP Link Protection on page 632](#)
- [Different Modes for Providing LDP Link Protection on page 633](#)
- [Label Operation for LDP Link Protection on page 635](#)
- [Sample Multicast LDP Link Protection Configuration on page 641](#)
- [Make-Before-Break on page 642](#)
- [Caveats and Limitations on page 644](#)

### Introduction to LDP

The Label Distribution Protocol (LDP) is a protocol for distributing labels in non-traffic-engineered applications. LDP allows routers to establish label-switched paths (LSPs) through a network by mapping network-layer routing information directly to the data link LSPs.

These LSPs might have an endpoint at a directly attached neighbor (comparable to IP hop-by-hop forwarding) or at a network egress node, enabling switching through all intermediary nodes. LSPs established by LDP can also traverse traffic-engineered LSPs created by RSVP.

LDP associates a forwarding equivalence class (FEC) with each LSP it creates. The FEC associated with an LSP specifies which packets are mapped to that LSP. LSPs are extended through a network as each router chooses the label advertised by the next hop for the FEC and splices it to the label it advertises to all other routers. This process forms a tree of LSPs that converge on the egress router.

---

### Junos OS LDP Protocol Implementation

The Junos OS implementation of LDP supports LDP version 1. Junos OS supports a simple mechanism for tunneling between routers in an interior gateway protocol (IGP), to eliminate the required distribution of external routes within the core. Junos OS allows an MPLS tunnel next hop to all egress routers in the network, with only an IGP running in the core to distribute routes to egress routers. Edge routers run BGP but do not distribute external routes to the core. Instead, the recursive route lookup at the edge resolves to an LSP switched to the egress router. No external routes are necessary on the transit LDP routers.

---

### Understanding Multipoint Extensions to LDP

An LDP defines mechanisms for setting up point-to-point, multipoint-to-point, point-to-multipoint, and multipoint-to-multipoint LSPs in the network. The point-to-multipoint and multipoint-to-multipoint LSPs are collectively referred to as multipoint LSPs, where traffic flows from a single source to multiple destinations, and from multiple sources to multiple destinations, respectively. The destination or egress routers are called leaf nodes, and traffic from the source traverses one or more transit nodes before reaching the leaf nodes.



**NOTE:** Junos OS does not provide support for multipoint-to-multipoint LSPs.

---

By taking advantage of the MPLS packet replication capability of the network, multipoint LSPs avoid unnecessary packet replication at the ingress router. Packet replication takes place only when packets are forwarded to two or more different destinations requiring different network paths.


---

### Using Multipoint Extensions to LDP on Targeted LDP Sessions

The specification for the multipoint extensions to LDP requires that the two endpoints of an LDP session are directly connected by a Layer 2 medium, or are considered to be neighbors by the network's IGP. This is referred to as an LDP link session. When the two endpoints of an LDP session are not directly connected, the session is referred to as a targeted LDP session.

Past Junos OS implementations support multicast LDP for link sessions only. With the introduction of the LDP link protection feature, the multicast LDP capabilities are extended to targeted LDP sessions. [Figure 54 on page 629](#) shows a sample topology.

Figure 54: Multicast LDP Support for Targeted LDP Session

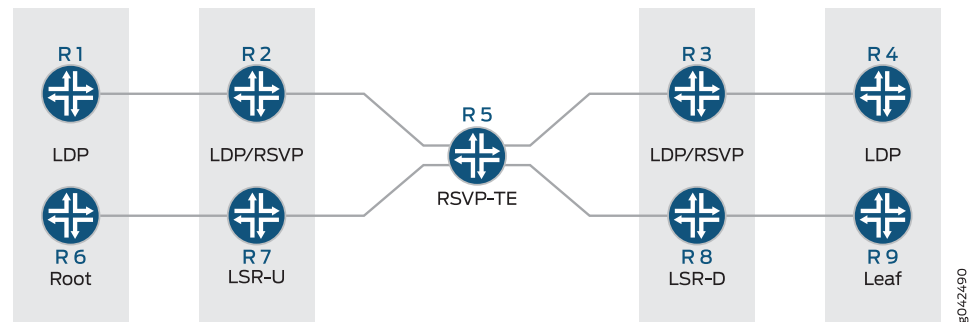

Routers R7 and R8 are the upstream (LSR-U) and downstream (LSR-D) label-switched routers (LSRs), respectively, and deploy multicast LDP. The core router, Router R5, has RSVP-TE enabled.

When LSR-D is setting up the point-to-multipoint LSP with root and LSP ID attributes, it determines the upstream LSR-U as a next-hop on the best path to the root (currently, this next-hop is assumed to be an IGP next hop).

With the multicast LDP support on targeted LDP sessions, you can determine if there is an LSP next hop to LSR-U which is on LSR-D's path to root, where LSR-D and LSR-U are not directly connected neighbors, but targeted LDP peers. The point-to-multipoint label advertised on the targeted LDP session between LSR-D and LSR-U is not used unless there is an LSP between LSR-D and LSR-U. Therefore, a corresponding LSP in the reverse direction from LSR-U to LSR-D is required.

Data is transmitted on the point-to-multipoint LSP using unicast replication of packets, where LSR-U sends one copy to each downstream LSR of the point-to-multipoint LSP.

The data transmission is implemented in the following ways:

1. The point-to-multipoint capabilities on the targeted LDP session are negotiated.
2. The algorithm to select the upstream LSR is changed, where if IGP next hops are unavailable, or in other words, there is no LDP link session between LSR-D and LSR-U, an RSVP LSP is used as the next hop to reach LSR-U.
3. The incoming labels received over the targeted LDP sessions are installed as a branch next hop for this point-to-multipoint FEC route with the LDP label as the inner label and the RSVP label as the outer label.

### Current Limitations of LDP Link Protection

When there is a link or node failure in an LDP network deployment, fast traffic recovery should be provided to recover impacted traffic flows for mission-critical services. In the case of multipoint LSPs, when one of the links of the point-to-multipoint tree fails, the subtrees might get detached until the IGP reconverges and the multipoint LSP is established using the best path from the downstream router to the new upstream router.


In fast reroute using local repair for LDP traffic, a backup path (repair path) is pre-installed in the Packet Forwarding Engine. When the primary path fails, traffic is rapidly moved to the backup path without having to wait for the routing protocols to converge. Loop-free alternate (LFA) is one of the methods used to provide IP fast reroute capability in the core and service provider networks.

Without LFA, when a link or a router fails or is returned to service, the distributed routing algorithms compute the new routes based on the changes in the network. The time during which the new routes are computed is referred to as routing transition. Until the routing transition is completed, the network connectivity is interrupted because the routers adjacent to a failure continue to forward the data packets through the failed component until an alternative path is identified.

However, LFA does not provide full coverage in all network deployments because of the IGP metrics. As a result, this is a limitation to the current LDP link protection schemes.

Figure 55 on page 630 illustrates a sample network with incomplete LFA coverage, where traffic flows from the source router (S) to the destination router (D) through Router R1. Assuming that each link in the network has the same metric, if the link between the Router S and Router R1 fails, Router R4 is not an LFA that protects the S-R1 link, so traffic resiliency is lost. Thus, full coverage is not achieved by using plain LFA. In typical networks, there is always some percentage of LFA coverage gap with plain LFA.

**Figure 55: Incomplete Coverage Problem with LFA**

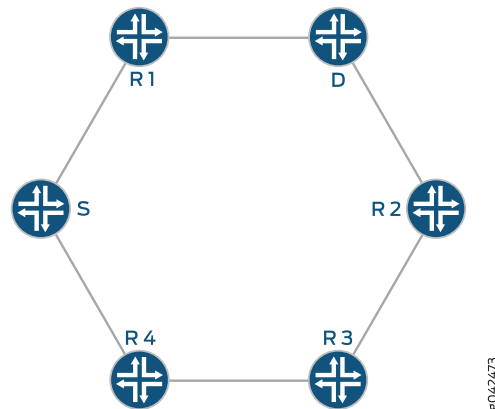

### Using RSVP LSP as a Solution

The key to protect the traffic flowing through LDP LSPs is to have an explicit tunnel to re-route the traffic in the event of a link or node failure. The explicit path has to terminate on the next downstream router, and the traffic needs to be accepted on the explicit path, where the RPF check should pass.


RSVP LSPs help overcome the current limitations of loop-free alternate (LFA) for both point-to-point and point-to-multipoint LDP LSPs by extending the LFA coverage in the following methods:

- [Manually Configured RSVP LSPs on page 631](#)
- [Dynamically Configured RSVP LSPs on page 631](#)

#### **Manually Configured RSVP LSPs**

Considering the example used in [Figure 55 on page 630](#), when the S-R1 link fails, and Router R4 is not an LFA for that particular link, a manually created RSVP LSP is used as a patch to provide complete LFA coverage. The RSVP LSP is pre-sigaled and pre-installed in the Packet Forwarding Engine of Router S, so that it can be used as soon as Router S detects that the link has failed.

**Figure 56: Manually Configured RSVP LSP Coverage**

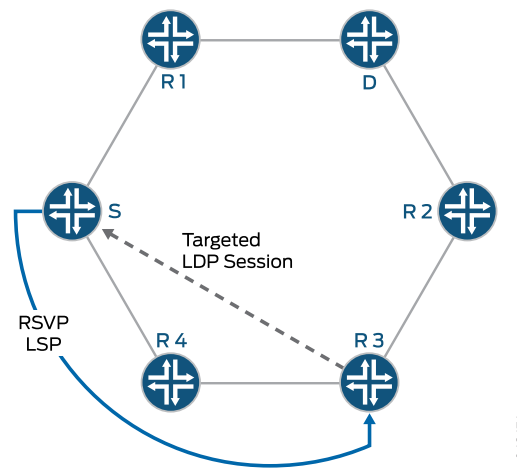

In this case, an RSVP LSP is created between Routers S, R4, and R3 as illustrated in [Figure 56 on page 631](#). A targeted LDP session is created between Router S and Router R3, as a result of which, when the S-R1 link fails, traffic reaches Router R3. Router R3 forwards the traffic to Router R2, as it is the shortest path to reach the destination, Router D.


#### **Dynamically Configured RSVP LSPs**

In this method, the RSVP LSPs are created automatically and pre-installed in the system so that they can be used immediately when there is a link failure. Here, the egress is the node on the other side of the link being protected, thereby improving the LFA coverage.

Considering the example used in [Figure 55 on page 630](#), in order to protect traffic against the potential failure of the S-R1 link, because Router R4 is not an LFA for that particular link, an RSVP bypass LSP is automatically created to Router R1, which is the node on the far side of the protected link as illustrated in [Figure 57 on page 632](#). From Router R1, traffic is forwarded to its original destination, Router D.

The RSVP LSP is pre-sigaled and pre-installed in the Packet Forwarding Engine of Router S so that it can be used as soon as Router S detects that the link has failed.

Figure 57: Dynamically Configured RSVP LSP Coverage

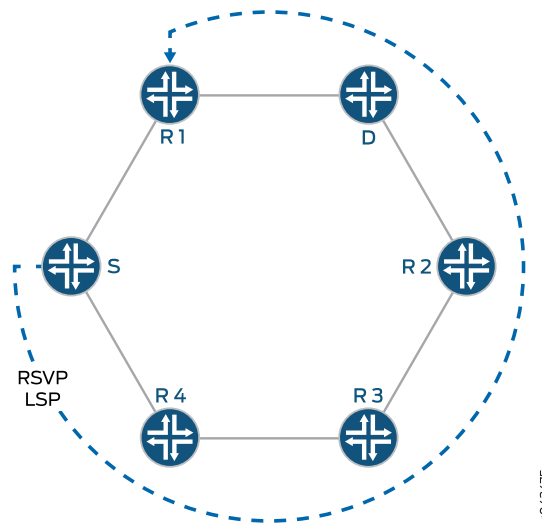

An alternative mode of operation is not to use LFA at all, and to always have the RSVP LSP created to cover all link failures.

To enable dynamic RSVP LSPs, include the **dynamic-rsvp-lsp** statement at the **[edit protocols ldp interface *interface-name* link-protection]** hierarchy level, in addition to enabling the RSVP protocol on the appropriate interfaces.

Some of the benefits of enabling dynamic RSVP LSPs include:

- Ease of configuration.
- 100 percent coverage against link failure as long as there is an alternate path to the far end of the link being protected.
- Setting up and tearing down of the RSVP bypass LSP is automatic.
- RSVP LSP only used for link protection and not for forwarding traffic while the link being protected is up.
- Reduces the total number of RSVP LSPs required on the system.

### Understanding Multicast LDP Link Protection

A point-to-multipoint LDP label-switched path (LSP) is an LDP-sigaled LSP that is point-to-multipoint, and is referred to as multicast LDP.

A multicast LDP LSP can be used to send traffic from a single root or ingress node to a number of leaf or egress nodes traversing one or more transit nodes. Multicast LDP link protection enables fast reroute of traffic carried over point-to-multipoint LDP LSPs in case of a link failure. When one of the links of the point-to-multipoint tree fails, the

subtrees might get detached until the IGP reconverges and the multipoint LSP is established using the best path from the downstream router to the new upstream router.

To protect the traffic flowing through the multicast LDP LSP, you can configure an explicit tunnel to re-route the traffic in the event of link failure. The explicit path has to terminate on the next downstream router. The reverse path forwarding for the traffic should be successful.

Multicast LDP link protection introduces the following features and functionality:

- Use of dynamic RSVP LSP as bypass tunnels

The RSVP LSP's Explicit Route Object (ERO) is calculated using Constrained Shortest Path First (CSPF) with the constraint as the link to avoid. The LSP is signaled and torn down dynamically whenever link protection is necessary.

- Make-before-break

The make-before-break feature ensures that there is minimum packet loss when attempting to signal a new LSP path before tearing down the old LSP path for the multicast LDP LSP.

- Targeted LDP session

A targeted adjacency to the downstream label-switching router (LSR) is created for two reasons:

- To keep the session up after link failure.
- To use the point-to-multipoint label received from the session to send traffic to the downstream LSR on the RSVP LSP bypass tunnel.

When the downstream LSR sets up the multicast LDP LSP with the root node and LSP ID, it uses that upstream LSR, which is on the best path toward the root.



**NOTE:** Multicast LDP link protection is not required when there are multiple link adjacencies (parallel links) to the downstream LSR.

### Different Modes for Providing LDP Link Protection

Following are three different modes of operation available for unicast and multicast LDP link protection:

- **Case A: LFA only**

Under this mode of operation, multicast LDP link protection is provided using an existing viable loop-free alternate (LFA). In the absence of a viable LFA, link protection is not provided for the multicast LDP LSP.

- **Case B: LFA and Dynamic RSVP LSP**


Under this mode of operation, multicast LDP link protection is provided using an existing viable LFA. In the absence of a viable LFA, an RSVP bypass LSP is created automatically to provide link protection for the multicast LDP LSP.

- **Case C: Dynamic RSVP LSP only**

Under this mode of operation, LFA is not used for link protection. Multicast LDP link protection is provided by using automatically created RSVP bypass LSP.

Figure 58 on page 634 is a sample topology illustrating the different modes of operation for multicast LDP link protection. Router R5 is the root connecting to two leaf nodes, Routers R3 and R4. Router R0 and Router R1 are the upstream and downstream label-switched routers (LSRs), respectively. A multicast LDP LSP runs among the root and leaf nodes.

**Figure 58: Multicast LDP Link Protection Sample Topology**

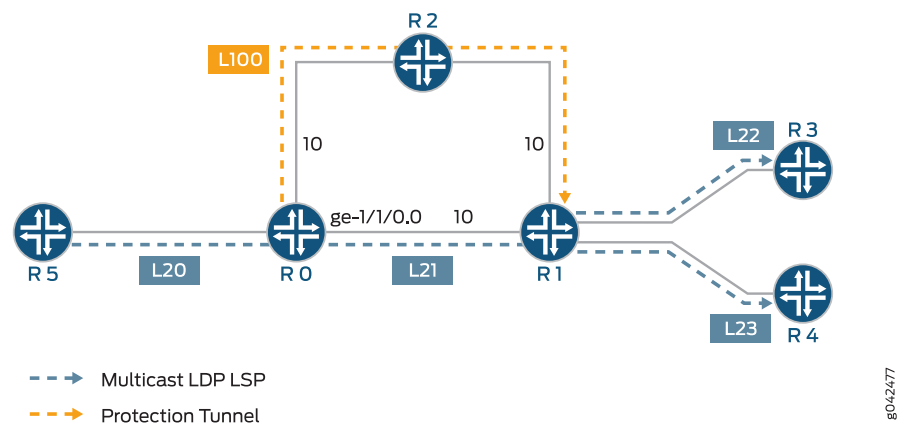

Considering that Router R0 needs to protect the multicast LDP LSP in the case that the R0-R1 link fails, the different modes of link protection operate in the following manner:

- **Case A: LFA only**

Router R0 checks if a viable LFA path exists that can avoid the R0-R1 link to reach Router R1. Based on the metrics, Router R2 is a valid LFA path for the R0-R1 link and is used to forward unicast LDP traffic. If multiple multicast LDP LSPs use the R0-R1 link, the same LFA (Router R2) is used for multicast LDP link protection.

When the R0-R1 link fails, the multicast LDP LSP traffic is moved onto the LFA path by Router R0, and the unicast LDP label to reach Router R1 (L100) is pushed on top of the multicast LDP label (L21).

- **Case B: LFA and Dynamic RSVP LSP**

Router R0 checks if a viable LFA path exists that can avoid the R0-R1 link to reach Router R1. Based on the metrics, Router R2 is a valid LFA path for the R0-R1 link and is used to forward unicast LDP traffic. If multiple multicast LDP LSPs use the R0-R1 link, the same LFA (Router R2) is used for multicast LDP link protection. When the R0-R1 link fails, the multicast LDP LSP traffic is moved onto the LFA path by Router R0.

However, if the metric on the R2-R1 link was 50 instead of 10, Router R2 is not a valid LFA for the R0-R1 link. In this case, an RSVP LSP is automatically created to protect the multicast LDP traffic traveling between Routers R0 and R1.



- **Case C: Dynamic RSVP LSP only**


An RSVP LSP is signaled automatically from Router R0 to Router R1 through Router R2, avoiding interface ge-1/1/0. If multiple multicast LDP LSPs use the R0-R1 link, the same RSVP LSP is used for multicast LDP link protection.

When the R0-R1 link fails, the multicast LDP LSP traffic is moved onto the RSVP LSP by Router R0, and the RSVP label to reach Router R1 (L100) is pushed on top of the multicast LDP label (L21).

### Label Operation for LDP Link Protection

Using the same network topology as in Figure 5, [Figure 59 on page 635](#) illustrates the label operation for unicast and multicast LDP link protection.

**Figure 59: LDP Label Operation Sample Topology**

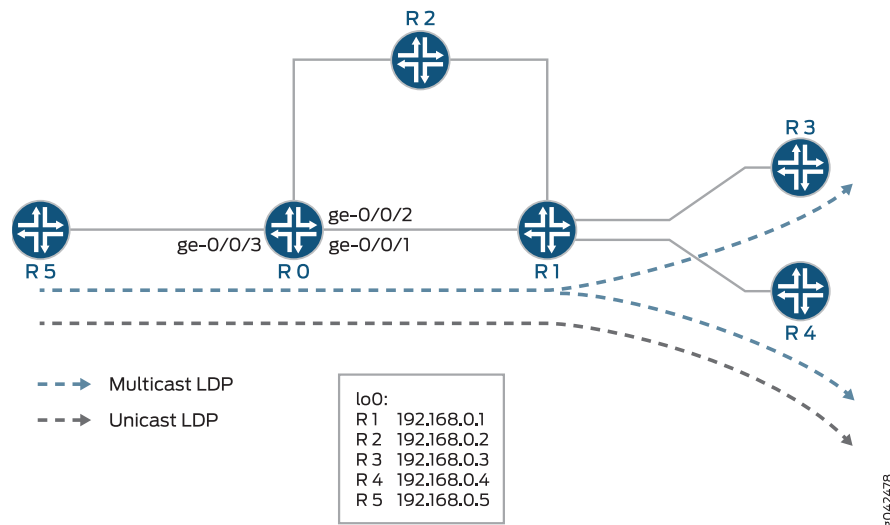

Router R5 is the root connecting to two leaf nodes, Routers R3 and R4. Router R0 and Router R1 are the upstream and downstream label-switched routers (LSRs), respectively. A multicast LDP LSP runs among the root and leaf nodes. An unicast LDP path connects Router R1 to Router R5.

The label operation is performed differently under the following modes of LDP link protection:

- [Case A: LFA Only on page 636](#)
- [Case B: LFA and Dynamic RSVP LSP on page 639](#)
- [Case C: Dynamic RSVP LSP Only on page 641](#)

**Case A: LFA Only**

Using the **show route detail** command output on Router R0, the unicast LDP traffic and multicast LDP traffic can be derived.

```

user@R0> show route detail
299840 (1 entry, 1 announced)
  *LDP    Preference: 9
          Next hop type: Router
          Address: 0x93bc22c
          Next-hop reference count: 1
          Next hop: 11.0.0.6 via ge-0/0/1.0 weight 0x1, selected
          Label operation: Swap 299824
          Session Id: 0x1
          Next hop: 11.0.0.10 via ge-0/0/2.0 weight 0xf000
          Label operation: Swap 299808
          Session Id: 0x3
          State: <Active Int>
          Age: 3:16      Metric:1
          Validation State: unverified
          Task: LDP
          Announcement bits (1): 0-KRT
          AS path: I
          Prefixes bound to route: 192.168.0.4/32

299856 (1 entry, 1 announced)
  *LDP    Preference: 9
          Next hop type: Flood
          Address: 0x9340e04
          Next-hop reference count: 3
          Next hop type: Router, Next hop index: 262143
          Address: 0x93bc3dc
          Next-hop reference count: 2
          Next hop: 11.0.0.6 via ge-0/0/1.0 weight 0x1
          Label operation: Swap 299888
          Next hop: 11.0.0.10 via ge-0/0/2.0 weight 0xf000
          Label operation: Swap 299888, Push 299776(top)
          Label TTL action: prop-ttl, prop-ttl(top)
          State: <Active Int AckRequest>
          Age: 3:16      Metric:1
          Validation State: unverified
          Task: LDP
          Announcement bits (1): 0-KRT
          AS path: I
          FECs bound to route: P2MP root-addr 192.168.0.5, lsp-id 99

```

Label 299840 is traffic arriving at Router R0 that corresponds to unicast LDP traffic to Router R1. Label 299856 is traffic arriving at Router 0 that corresponds to multicast LDP traffic from the root node R5 to the leaf egress nodes, R3 and R4.

The main path for both unicast and multicast LDP LSPs is through interface ge-0/0/1 (the link to Router R1), and the LFA path is through interface ge-0/0/2 (the link to Router R2). The LFA path is not used unless the ge-0/0/1 interface goes down.


In the label operation for Case A, the LFA-only mode of operation is different for unicast and multicast LDP traffic:

- Unicast label operation

For unicast LDP traffic, the FECs and associated labels are advertised on all the links in the network on which LDP is enabled. This means that in order to provide LFA action for the unicast LDP traffic to Router R4, instead of swapping the incoming label for label 299824 advertised by Router R1 for FEC R4, Router R0 simply swaps the incoming label for label 299808 advertised by Router R2 for FEC R4. This is the standard Junos OS LFA operation for unicast LDP traffic.

Figure 60 on page 637 illustrates the label operation for unicast traffic when the R0-R1 link fails. The grey boxes show the label operation for unicast LDP traffic under normal condition, and the dotted boxes show the label operation for unicast LDP traffic when the R0-R1 link fails.

Figure 60: Unicast LDP Label Operation

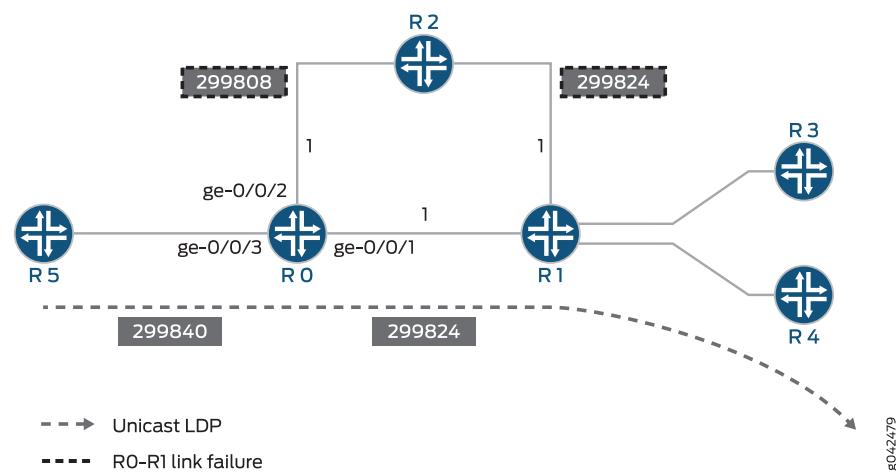


- Multicast label operation

The label operation for multicast LDP traffic differs from the unicast LDP label operation, because multipoint LSP labels are only advertised along the best path from the leaf node to the ingress node. As a result, Router R2 has no knowledge of the multicast LDP. To overcome this, the multicast LDP LSP traffic is simply tunneled inside the unicast LDP LSP path through Router R2 that terminates at Router R1.

In order to achieve this, Router R0 first swaps the incoming multicast LDP LSP label 299856 to label 299888 advertised by Router R1. Label 299776 is then pushed on top, which is the LDP label advertised by Router R2 for FEC R1. When the packet arrives at Router R2, the top label is popped out due to penultimate hop-popping. This means that the packet arrives at Router R1 with the multicast LDP label 299888 that Router R1 had originally advertised to Router R0.

Figure 61 on page 638 illustrates the label operation for multicast LDP traffic when the R0-R1 link fails. The blue boxes show the label operation for multicast LDP traffic under normal condition, and the dotted boxes show the label operation for multicast LDP traffic when the R0-R1 link fails.

Figure 61: Multicast LDP Label Operation

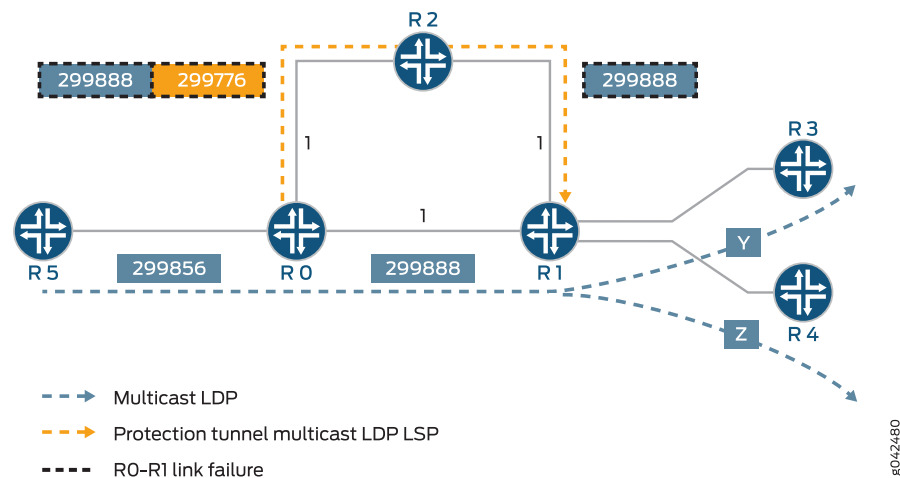

When the metric on the R2-R1 link is set to 1000 instead of 1, Router R2 is not a valid LFA for Router R0. In this case, if Router R2 receives a packet destined for Router R1, R3, or R4 before its IGP has converged, the packet is sent back to Router R0, resulting in looping packets.

Because Router R0 has no viable LFA, no backup paths are installed in the Packet Forwarding Engine. If the R0-R1 link fails, traffic flow is interrupted until the IGP and LDP converge and new entries are installed on the affected routers.

The **show route detail** command displays the state when no LFA is available for link protection.

```
user@host> show route detail
299840 (1 entry, 1 announced)
  *LDP    Preference: 9
          Next hop type: Router, Next hop index: 578
          Address: 0x9340d20
          Next-hop reference count: 2
          Next hop: 11.0.0.6 via ge-0/0/1.0, selected
          Label operation: Swap 299824
          Session Id: 0x1
          State: <Active Int>
          Age: 5:38      Metric: 1
          Validation State: unverified
          Task: LDP
          Announcement bits (1): 0-KRT
          AS path: I
          Prefixes bound to route: 192.168.0.4/32

299856 (1 entry, 1 announced)
  *LDP    Preference: 9
          Next hop type: Flood
          Address: 0x9340e04
          Next-hop reference count: 3
          Next hop type: Router, Next hop index: 579
          Address: 0x93407c8
```

```

Next-hop reference count: 2
Next hop: 11.0.0.6 via ge-0/0/1.0
Label operation: Swap 299888
State: <Active Int AckRequest>
Age: 5:38      Metric: 1
Validation State: unverified
Task: LDP
Announcement bits (1): 0-KRT
AS path: I
FECs bound to route: P2MP root-addr 192.168.0.5, lsp-id 99

```

### Case B: LFA and Dynamic RSVP LSP

In this mode of operation, if there is a viable LFA neighbor, the label operation behavior is similar to that of Case A, LFA only mode. However, if there is no viable LFA neighbor, an RSVP bypass tunnel is automatically created.

If the metric on the link R2-R1 is set to 1000 instead of 1, Router R2 is not an LFA for Router R0. On learning that there are no LFA paths to protect the R0-R1 link failure, an RSVP bypass tunnel is automatically created with Router R1 as the egress node and follows a path that avoids the R0-R1 link (for instance, R0-R2-R1).

If the R0-R1 link fails, the unicast LDP and multicast LDP traffic is tunneled through the RSVP bypass tunnel. The RSVP bypass tunnel is not used for normal forwarding and is used only to provide link protection to LDP traffic in the case of R0-R1 link failure.

Using the **show route detail** command, the unicast and multicast LDP traffic can be derived.

```

user@host> show route detail
299840 (1 entry, 1 announced)
  *LDP    Preference: 9
          Next hop type: Router
          Address: 0x940c3dc
          Next-hop reference count: 1
          Next hop: 11.0.0.6 via ge-0/0/1.0 weight 0x1, selected
          Label operation: Swap 299824
          Session Id: 0x1
          Next hop: 11.0.0.10 via ge-0/0/2.0 weight 0x8001
          Label-switched-path ge-0/0/1.0:BypassLSP->192.168.0.1
          Label operation: Swap 299824, Push 299872(top)
          Label TTL action: prop-ttl, prop-ttl(top)
          Session Id: 0x3
          State: <Active Int NhAckRequest>
          Age: 19      Metric: 1
          Validation State: unverified
          Task: LDP
          Announcement bits (1): 0-KRT
          AS path: I
          Prefixes bound to route: 192.168.0.4/32

299856 (1 entry, 1 announced)
  *LDP    Preference: 9
          Next hop type: Flood
          Address: 0x9340e04
          Next-hop reference count: 3
          Next hop type: Router, Next hop index: 262143
          Address: 0x940c154
          Next-hop reference count: 2

```

```
Next hop: 11.0.0.6 via ge-0/0/1.0 weight 0x1
Label operation: Swap 299888
Next hop: 11.0.0.10 via ge-0/0/2.0 weight 0x8001
Label-switched-path ge-0/0/1.0:BypassLSP->192.168.0.1
Label operation: Swap 299888, Push 299872(top)
Label TTL action: prop-ttl, prop-ttl(top)
State: < Active Int AckRequest>
Age: 20          Metric: 1
Validation State: unverified
Task: LDP
Announcement bits (1): 0-KRT
AS path: I
FECs bound to route: P2MP root-addr 192.168.0.5, lsp-id 99
```


The main path for both unicast and multicast LDP LSP is through interface ge-0/0/1 (the link to Router R1), and the LFA path is through interface ge-0/0/2 (the link to Router R2). The LFA path is not used unless the ge-0/0/1 interface goes down.

Label 299840 is traffic arriving at Router R0 that corresponds to unicast LDP traffic to Router R4. Label 299856 is traffic arriving at Router 0 that corresponds to multicast LDP traffic from the root node R5 to the leaf egress nodes, R3 and R4.

As seen in the **show route detail** command output, the label operations for the protection path are the same for unicast LDP and multicast LDP traffic. The incoming LDP label at Router R0 is swapped to the LDP label advertised by Router R1 to Router R0. The RSVP label 299872 for the bypass tunnel is then pushed onto the packet. Penultimate hop-popping is used on the bypass tunnel, causing Router R2 to pop that label. Thus the packet arrives at Router R1 with the LDP label that it had originally advertised to Router R0.

[Figure 62 on page 641](#) illustrates the label operation for unicast LDP and multicast LDP traffic protected by the RSVP bypass tunnel. The grey and blue boxes represent label values used under normal conditions for unicast and multicast LDP traffic, respectively. The dotted boxes represent label values used when the R0-R1 link fails.

### Figure 62: LDP Link Protection Label Operation

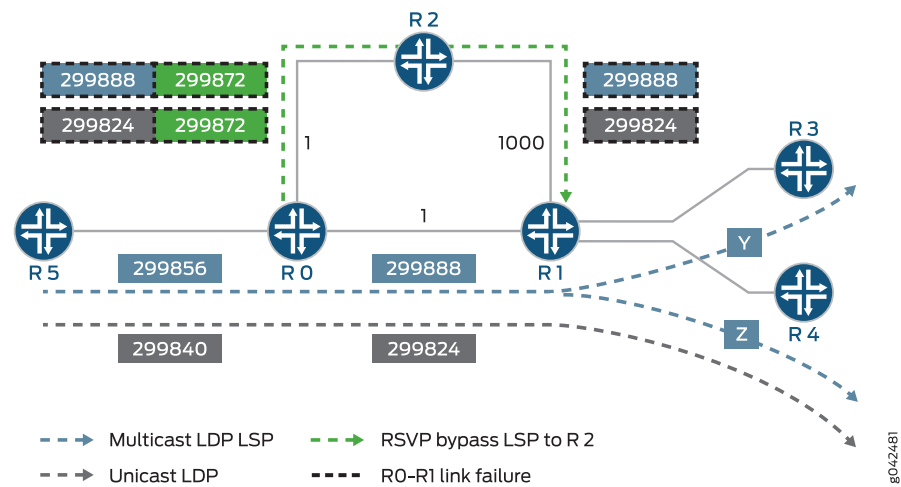

### Case C: Dynamic RSVP LSP Only

In this mode of operation, LFA is not used at all. A dynamic RSVP bypass LSP is automatically created in order to provide link protection. The output from the **show route detail** command and the label operations are similar to Case B, LFA and dynamic RSVP LSP mode.

## Sample Multicast LDP Link Protection Configuration

To enable multicast LDP link protection, the following configuration is required on Router R0:



**NOTE:** In this sample, multicast LDP link protection is enabled on the ge-1/0/0 interface of Router R0 that connects to Router R1, although typically all the interfaces need to be configured for link protection.

```
Router R0      protocols {
    rsvp {
        interface all;
        interface ge-0/0/0.0 {
            disable;
        }
    }
    mpls {
        interface all;
        interface ge-0/0/0.0 {
            disable;
        }
    }
    ospf {
        traffic-engineering;
```

```
area 0.0.0.0 {
  interface lo0.0;
  interface ge-0/0/1.0 {
    link-protection;
  }
  interface ge-0/0/2.0;
  interface ge-0/0/3.0;
}
}
ldp {
  make-before-break {
    timeout seconds;
    switchover-delay seconds;
  }
  interface ge-1/1/0.0 {
    link-protection {
      disable;
      dynamic-rsvp-lsp;
    }
  }
}
}
```

The following configuration statements apply to the different modes of multicast LDP protection as follows:

- **link-protection** statement at **[edit protocols ospf interface ge-0/0/1.0]**

This configuration is applied only for Case A (LFA only) and Case B (LFA and dynamic RSVP LSP) modes of multicast LDP link protection. Configuring link protection under an IGP is not required for Case C (dynamic RSVP LSP only).

- **link-protection** statement at **[edit protocols ldp interface ge-0/0/1.0]**

This configuration is required for all modes of multicast LDP protection. However, if the only LDP traffic present is unicast, and dynamic RSVP bypasses are not required, then this configuration is not required, as the **link-protection** statement at the **[edit protocols ospf interface ge-0/0/1.0]** hierarchy level results in LFA action for the LDP unicast traffic.

- **dynamic-rsvp-lsp** statement at **[edit protocols ldp interface ge-0/0/1.0 link-protection]**

This configuration is applied only for Case B (LFA and dynamic RSVP LSP) and Case C (dynamic RSVP LSP only) modes of LDP link protection. Dynamic RSVP LSP configuration does not apply to Case A (LFA only).

---

### Make-Before-Break

The make-before-break feature is enabled by default on Junos OS and provides some benefits for point-to-multipoint LSPs.

For a point-to-multipoint LSP, a label-switched router (LSR) selects the LSR that is its next hop to the root of the LSP as its upstream LSR. When the best path to reach the root changes, the LSR chooses a new upstream LSR. During this period, the LSP might be temporarily broken, resulting in packet loss until the LSP reconverges to a new



upstream LSR. The goal of make-before-break in this case is to minimize the packet loss. In cases where the best path from the LSR to the root changes but the LSP continues to forward traffic to the previous next hop to the root, a new LSP should be established before the old LSP is withdrawn to minimize the duration of packet loss.

Taking for example, after a link failure, a downstream LSR (for instance, LSR-D) still receives and/or forwards packets to the other downstream LSRs, as it continues to receive packets from the one hop RSVP LSP. Once routing converges, LSR-D selects a new upstream LSR (LSR-U) for this point-to-multipoint LSP's FEC (FEC-A). The new LSR might already be forwarding packets for FEC-A to the downstream LSRs other than LSR-D. After LSR-U receives a label for FEC-A from LSR-D, it notifies LSR-D when it has learnt that LSP for FEC-A has been established from the root to itself. When LSR-D receives such a notification, it changes its next hop for the LSP root to LSR-U. This is a route delete and add operation on LSR-D. At this point, LSR-D does an LSP switchover, and traffic tunneled through RSVP LSP or LFA is dropped, and traffic from LSR-U is accepted. The new transit route for LSR-U is added. The RPF check is changed to accept traffic from LSR-U and to drop traffic from the old upstream LSR, or the old route is deleted and the new route is added.

The assumption is that LSR-U has received a make-before-break notification from its upstream router for the FEC-A point-to-multipoint LSP and has installed a forwarding state for the LSP. At that point it should signal LSR-D by means of make-before-break notification that it has become part of the tree identified by FEC-A and that LSR-D should initiate its switchover to the LSP. Otherwise, LSR-U should remember that it needs to send notification to LSR-D when it receives a make-before-break notification from the upstream LSR for FEC-A and installs a forwarding state for this LSP. LSR-D continues to receive traffic from the old next hop to the root node using one hop RSVP LSP or LFA path until it switches over to the new point-to-multipoint LSP to LSR-U.

The make-before-break functionality with multicast LDP link protection includes the following features:

- Make-before-break capability

An LSR advertises that it is capable of handling make-before-break LSPs using the capability advertisement. If the peer is not make-before-break capable, the make-before-break parameters are not sent to this peer. If an LSR receives a make-before-break parameter from a downstream LSR (LSR-D) but the upstream LSR (LSR-U) is not make-before-break capable, the LSR immediately sends a make-before-break notification to LSR-D, and the make-before-break capable LSP is not established. Instead, the normal LSP is established.

- Make-before-break status code

The make-before-break status code includes:

- 1—make-before-break request
- 2—make-before-break acknowledgment

When a downstream LSR sends a label-mapping message for point-to-multipoint LSP, it includes the make-before-break status code as 1 (request). When the upstream LSR updates the forwarding state for the point-to-multipoint LSP, it informs the

downstream LSR with a notification message containing the make-before-break status code as 2 (acknowledgment). At that point, the downstream LSR does an LSP switchover.

### Caveats and Limitations

---

The Junos OS implementation of the LDP link protection feature has the following caveats and limitations:

- Make-before-break is not supported for the following point-to-multipoint LSPs on an egress LSR:
  - Next-generation multicast virtual private network (MVPN) with virtual routing and forwarding (VRF) label
  - Static LSP
- The following features are not supported:
  - Nonstop active routing for point-to-multipoint LSP in Junos OS Releases 12.3, 13.1 and 13.2
  - Graceful restart switchover point-to-multipoint LSP
  - Link protection for routing instance

## Understanding Multicast-Only Fast Reroute

---

Starting in Junos OS Release 14.1, Multicast-only fast reroute (MoFRR) functionality is available, in which packet loss is minimized in PIM and multipoint LDP domains. MoFRR minimizes packet loss in a network when there is a link failure. It works by enhancing multicast routing protocols like Protocol Independent Multicast (PIM) and multipoint Label Distribution Protocol (multipoint LDP). MoFRR is supported on MX Series routers with MPC line cards. As a prerequisite, the router must be set to **network-services enhanced-ip** mode, and all the line-cards in the router must be MPCs.

With MoFRR enabled, join messages are sent on primary and backup upstream paths. Data packets are received from both the primary path and the backup paths. The redundant packets are discarded based on priority (weights that are assigned to the primary and backup paths). When a failure is detected on the primary path, the repair is made by changing the interface on which packets are accepted to the secondary interface. Because the repair is local, it is fast—greatly improving convergence times in the event of a link failure on the primary path.

Currently, the most likely real-world application for MoFRR is streaming IPTV. IPTV streams are multicast as UDP streams. Therefore, any lost packets are not retransmitted, and this can result in a less-than-satisfactory user experience. MoFRR can be used to improve this situation.

When fast reroute is applied to unicast streams, an upstream router preestablishes MPLS label-switched paths (LSPs) or precomputes an IP loop-free alternate (LFA) fast reroute backup path to handle failure of a segment in the downstream path.


In multicast routing, the traffic distribution graphs are usually originated by the receiver. This is unlike unicast routing, which usually establishes the path from the source to the receiver. Protocols that are capable of establishing multicast distribution graphs are PIM (for IP), multipoint LDP (for MPLS), and RSVP-TE (for MPLS). Of these, PIM and multipoint LDP receivers initiate the distribution graph setup, and therefore these are the two multicast protocols for which MoFRR is supported.

In a multicast tree, performing a reactive repair upon detection of a network-component failure can lead to significant traffic loss due to delay in setting up the alternative path. MoFRR reduces traffic loss in a multicast distribution tree when a network component fails. With MoFRR, one of the downstream routers that supports this feature sets up an alternative path toward the source to receive a backup live stream of the same multicast traffic. When a failure is detected on the primary stream, the MoFRR router switches to the backup stream.

With MoFRR enabled, for each (S,G) entry, two of the available upstream interfaces are used to send a join message and to receive multicast traffic. The protocol attempts to select two disjoint paths if two such paths are available. If disjoint paths are not available, the protocol selects two nondisjoint paths. If two nondisjoint paths are not available, only a primary path is selected with no backup. MoFRR is supported for both IPv4 and IPv6 protocol families.

[Figure 63 on page 646](#) shows two paths from the egress provider edge (PE) router to the ingress PE router.

Figure 63: MoFRR Sample Topology

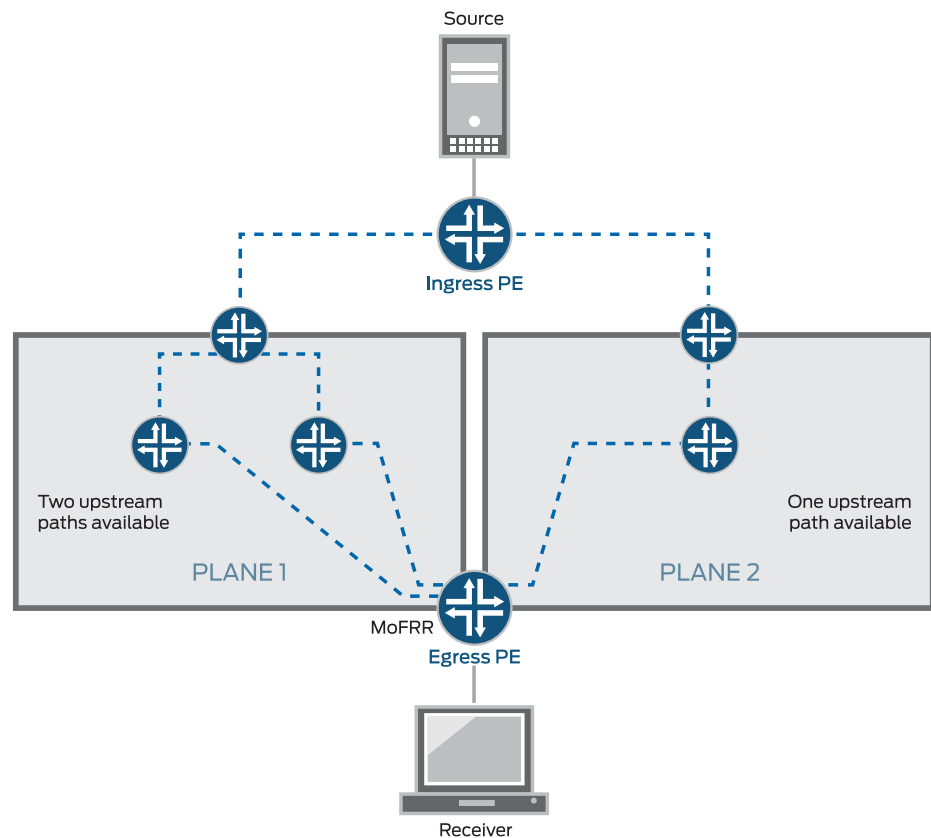

8041674

When enabled with MoFRR functionality, the egress router sets up two multicast trees, a primary path and a backup path, toward the multicast source for each (S,G). In other words, the egress router propagates the same (S,G) join messages toward two different upstream neighbors, thus creating two multicast trees.

One of the multicast trees goes through plane 1 and the other through plane 2, as shown in [Figure 63 on page 646](#). For each (S,G), the egress PE router forwards traffic received on the primary path and drops traffic received on the backup path.

MoFRR is supported on both equal-cost multipath (ECMP) paths and non-ECMP paths. Unicast loop-free alternate (LFA) routes need to be enabled to support MoFRR on non-ECMP paths. LFA routes are enabled with the **link-protection** statement in the interior gateway protocol (IGP) configuration. When you enable link protection on an OSPF or IS-IS interface, Junos OS creates a backup LFA path to the primary next hop for all destination routes that traverse the protected interface.

Junos OS implements MoFRR in the IP network for IP MoFRR and at the MPLS label-edge router (LER) for multipoint LDP MoFRR.

Multipoint LDP MoFRR is used at the egress node of an MPLS network, where the packets are forwarded to an IP network. In the case of multipoint LDP MoFRR, the two paths toward the upstream PE router are established for receiving two streams of MPLS packets at the LER. One of the streams (the primary) is accepted, and the other one (the backup)

is dropped at the LER. The backup stream is accepted if the primary path fails. A prerequisite for this feature is inband signaling support, as described in [“Understanding Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs” on page 692](#).

## PIM Functionality

Junos OS supports MoFRR for shortest-path tree (SPT) joins in PIM source-specific multicast (SSM) and any-source multicast (ASM). MoFRR is supported for both SSM and ASM ranges. To enable MoFRR for (\*G) joins, the `mofrr-asm-starg` configuration statement needs to be included. For each group G, either (S,G) or (\*G) (not both) will undergo MoFRR. (S,G) always takes precedence over (\*G).

With MoFRR enabled, a PIM router propagates join messages on two upstream RPF interfaces to receive multicast traffic on both links for the same join request. Preference is given to two paths that do not converge to the same immediate upstream router. PIM installs appropriate multicast routes with upstream RPF next hops with two (primary and backup) interfaces.

When the primary path fails, the backup path is upgraded to primary, and traffic is forwarded accordingly. If there are alternate paths available, a new backup path is calculated and the appropriate multicast route is updated or installed.

MoFRR can be enabled along with PIM join load balancing (with the `join-load-balance automatic` statement). However, in such cases the distribution of join messages among the links might not be even. When a new ECMP link is added, join messages on the primary path are redistributed and load-balanced. The join messages on the backup path might still follow the same path and might not be evenly redistributed.

MoFRR is enabled with a `[edit routing-options multicast stream-protection]` configuration and is managed by a set of filter policies. When an egress PIM router receives a join message or an IGMP report, the router checks for the MoFRR configuration.

If the MoFRR configuration is not present, PIM sends a join message upstream toward one upstream neighbor (for example, plane 2 in [Figure 63 on page 646](#)).

If the MoFRR configuration is present, Junos OS checks for a policy configuration.

If a policy is not present, Junos OS checks for primary and backup paths (upstream interfaces), and takes the following actions:

- If primary and backup paths are not available—PIM sends a join message upstream toward one upstream neighbor (for example, plane 2 in [Figure 63 on page 646](#)).
- If primary and backup paths are available—PIM sends the join message upstream toward two of the available upstream neighbors. Junos OS sets up primary and secondary multicast paths to receive multicast traffic (for example, plane 1 in [Figure 63 on page 646](#)).

If a policy is present, Junos OS checks whether the policy allows MoFRR for this (S,G), and takes the following actions:

- If the policy check fails—PIM sends a join message upstream toward one upstream neighbor (for example, plane 2 in [Figure 63 on page 646](#)).

- If the policy check passes—Junos OS checks for primary and backup paths (upstream interfaces).
- If the primary and backup paths are not available, PIM sends a join message upstream toward one upstream neighbor (for example, plane 2 in [Figure 63 on page 646](#)).
- If the primary and backup paths are available, PIM sends the join message upstream toward two of the available upstream neighbors. Junos OS sets up primary and secondary multicast paths to receive multicast traffic (for example, plane 1 in [Figure 63 on page 646](#)).

## Multipoint LDP Functionality

To avoid MPLS traffic duplication, the usual implementation of multipoint LDP selects only one upstream path. (See section 2.4.1.1. Determining One's 'upstream LSR' in RFC 6388, *Label Distribution Protocol Extensions for Point-to-Multipoint and Multipoint-to-Multipoint Label Switched Paths*.)

For multipoint LDP MoFRR, the multipoint LDP node selects two separate upstream peers and sends two separate labels, one to each upstream peer. The same algorithm described in RFC 6388 is used to select the primary upstream path. The backup upstream path selection again uses the same algorithm but excludes the primary upstream LSR as a candidate. Two streams of MPLS traffic are sent to the egress node from the two different upstream peers. The MPLS traffic from only one of the upstream neighbors is selected as the primary path to accept the traffic, and the other path becomes the backup path. The traffic on the backup path is dropped. When the primary upstream path fails, the traffic from the backup path is then accepted. The multipoint LDP node selects the two upstream paths based on the interior gateway protocol (IGP) root node next hop.

A forwarding equivalency class (FEC) is a group of IP packets that are forwarded in the same manner, over the same path, and with the same forwarding treatment. Normally, the label that is put on a particular packet represents the FEC to which that packet is assigned. In MoFRR, two routes are placed into the mpls.0 table for each FEC—one route for the primary label and the other route for the backup label.

If there are parallel links toward the same immediate upstream node, both parallel links are considered to be the primary. At any point in time, the upstream node sends traffic on only one of the multiple parallel links.

A bud node is an LSR that is an egress LSR, but also has one or more directly connected downstream LSRs. In the case of a bud node, the traffic from the primary upstream path is forwarded to a downstream LSR. If the primary upstream path fails, the MPLS traffic from the backup upstream path is forwarded to the downstream LSR. This means that the downstream LSR next hop is added to both MPLS routes along with the egress next hop.

MoFRR for multipoint LDP is enabled with a **[edit routing-options multicast stream-protection]** configuration and is managed by a set of filter policies.

If the multipoint LDP point-to-multipoint FEC is enabled for MoFRR, the following additional considerations are factored into upstream path selection:

- The targeted LDP sessions are skipped if there is a nontargeted LDP session. If there is a single targeted LDP session, the targeted LDP session is selected, but the corresponding point-to-multipoint FEC loses the MoFRR capability because there is no interface associated with the targeted LDP session.
- All interfaces that belong to the same upstream LSR are considered to be the primary path.
- For any root-node route updates, the upstream path is changed based on the latest next hops from the IGP. If a better path is available, multipoint LDP attempts to switch to the better path.


## Packet Forwarding

For both PIM and multipoint LDP, multicast source stream selection is performed at the incoming interface. This prevents duplicate streams from being sent across the fabric and prevents multiple route lookups that result in drops, thus preserving fabric bandwidth and maximizing forwarding performance.

For PIM, each IP multicast stream contains the same destination address. Regardless of the interface on which the packets arrive, the packets have the same route. An interface list is attached to the route. Junos OS checks the interface upon which each packet arrives and forwards only those that are from the primary interface. If the interface matches a secondary interface, the packets are dropped. If no match is found, the packets are handled as exceptions in the control plane.

This process is shown in [Figure 64 on page 649](#).


**Figure 64: MoFRR IP Route Lookup in the Packet Forwarding Engine**

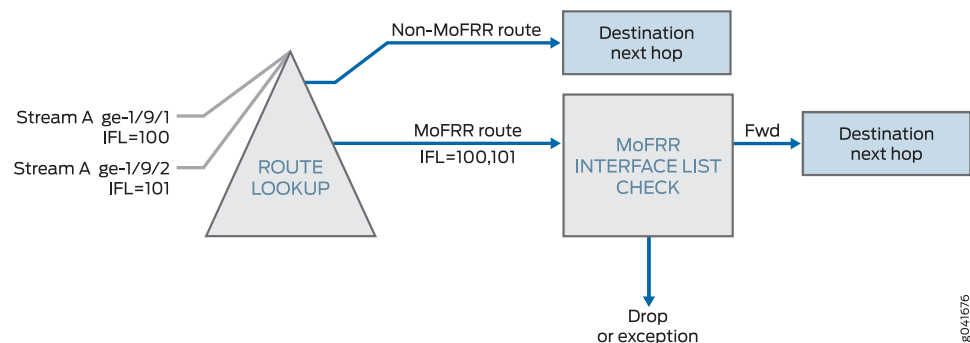

For multipoint LDP, multiple MPLS labels are used to control MoFRR stream selection. Each label represents a separate route, but each references the same interface list check. Only the primary label is forwarded while all others are dropped. Multiple interfaces can receive packets using the same label.

This process is shown in [Figure 65 on page 650](#).

Figure 65: MoFRR MPLS Route Lookup in the Packet Forwarding Engine

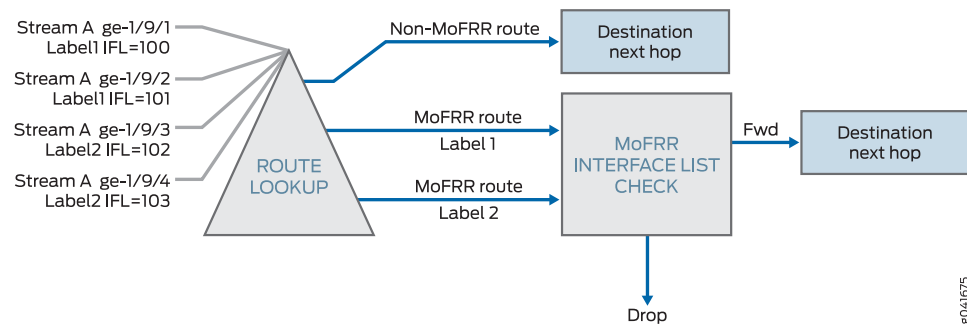

## Limitations and Caveats

MoFRR has the following limitations and caveats:

- MoFRR failure detection is supported for immediate link protection of the router on which MoFRR is enabled and not on all the links (end-to-end) in the multicast traffic path.
- MoFRR supports FRR on two selected disjoint paths toward the source. Two of the selected upstream neighbors cannot be on the same interface—in other words, two upstream neighbors on a LAN segment. The same is true if the upstream interface happens to be a multicast tunnel interface.
- Detection of the maximum end-to-end disjoint upstream paths is not supported. The egress router only makes sure that there is a disjoint upstream node (the immediate previous hop). PIM and multipoint LDP do not support the equivalent of explicit route objects (EROs). Hence, disjoint upstream path detection is limited to control over the immediately previous hop node. Because of this limitation, the path to the upstream node of the previous hop selected as primary and backup might be shared.
- MoFRR does not apply to multipoint LDP traffic received on an RSVP tunnel because the RSVP tunnel is not associated with any interface.
- Some traffic loss is seen in the following scenarios:
  - A better upstream path becomes available on an egress node.
  - MoFRR is enabled or disabled on the egress node while there is an active traffic stream flowing.
- PIM join load balancing for join messages for backup paths are not supported.
- For a multicast group G, MoFRR is not allowed for both (S,G) and (\*,G) join messages. (S,G) join messages have precedence over (\*,G).
- MoFRR is not supported for multicast traffic streams that use two different multicast groups. Each (S,G) combination is treated as a unique multicast traffic stream.
- The bidirectional PIM range is not supported for MoFRR.
- PIM dense-mode is not supported for MoFRR.



- Mixed upstream MoFRR is not supported. This refers to PIM multipoint LDP in-band signaling, wherein one upstream path is through multipoint LDP and the second upstream path is through PIM.
- Multicast statistics for the backup traffic stream are not maintained by PIM and therefore are not available in the operational output of **show** commands.
- Multipoint LDP labels as inner labels are not supported.
- If the source is reachable through multiple ingress provider edge (PE) routers, multipoint LDP MoFRR is not supported.
- Targeted upstream sessions are not selected as the upstream node for MoFRR.
- Rate monitoring is not supported.
- Multipoint LDP link protection on the backup path is not supported because there is no support for MoFRR inner labels.

Release History Table

| Release | Description                                                                                                                                                             |
|---------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 14.1    | Starting in Junos OS Release 14.1, Multicast-only fast reroute (MoFRR) functionality is available, in which packet loss is minimized in PIM and multipoint LDP domains. |

#### Related Documentation

- [Configuring Multicast-Only Fast Reroute on page 651](#)
- *Example: Configuring Multicast-Only Fast Reroute in a PIM Domain*
- [Example: Configuring Multicast-Only Fast Reroute in a Multipoint LDP Domain on page 654](#)

## Configuring Multicast-Only Fast Reroute

You can configure multicast-only fast reroute (MoFRR) to minimize packet loss in a network when there is a link failure.

When fast reroute is applied to unicast streams, an upstream router preestablishes MPLS label-switched paths (LSPs) or precomputes an IP loop-free alternate (LFA) fast reroute backup path to handle failure of a segment in the downstream path.

In multicast routing, the traffic distribution graphs are usually originated by the receiver. This is unlike unicast routing, which usually establishes the path from the source to the receiver. Protocols that are capable of establishing multicast distribution graphs are PIM (for IP), multipoint LDP (for MPLS) and RSVP-TE (for MPLS). Of these, PIM and multipoint LDP receivers initiate the distribution graph setup, and therefore these are the two multicast protocols for which MoFRR is supported.

MoFRR is supported on MX Series routers with MPC line cards. As a prerequisite, all the line cards in the router must be MPCs.

Make sure that all of the

To configure MoFRR:

1. Set the router to enhanced IP mode.

```
[edit chassis]
user@host# set network-services enhanced-ip
```

2. Enable MoFRR.

```
[edit routing-options multicast]
user@host# set stream-protection
```

3. (Optional) Configure a routing policy that filters for a restricted set of multicast streams to be affected by your MoFRR configuration.

You can apply filters that are based on source or group addresses.

For example:

```
[edit policy-options]
policy-statement mofrr-select {
  term A {
    from {
      source-address-filter 225.1.1.1/32 exact;
    }
    then {
      accept;
    }
  }
  term B {
    from {
      source-address-filter 226.0.0.0/8 orlonger;
    }
    then {
      accept;
    }
  }
  term C {
    from {
      source-address-filter 227.1.1.0/24 orlonger;
      source-address-filter 227.4.1.0/24 orlonger;
      source-address-filter 227.16.1.0/24 orlonger;
    }
    then {
      accept;
    }
  }
  term D {
    from {
      source-address-filter 227.1.1.1/32 exact
    }
    then {
      reject; #MoFRR disabled
    }
  }
  ...
}
```

4. (Optional) If you configured a routing policy to filter the set of to be affected by your MoFRR configuration, apply the policy.

```
[edit routing-options multicast stream-protection]
user@host# set policy policy-name
```

For example:

```
routing-options {
  multicast {
    stream-protection {
      policy mofrr-select
    }
  }
}
```

5. (Optional) In a PIM domain with MoFRR, allow MoFRR to be applied to any-source multicast (ASM) (\*,G) joins.

This is not supported for multipoint LDP MoFRR.

```
[edit routing-options multicast stream-protection]
user@host# set mofrr-asm-starg
```

6. (Optional) In a PIM domain with MoFRR, allow only a disjoint RPF (an RPF on a separate plane) to be selected as the backup RPF path.

This is not supported for multipoint LDP MoFRR. In a multipoint LDP MoFRR domain, the same label is shared between parallel links to the same upstream neighbor. This is not the case in a PIM domain, where each link forms a neighbor. The **mofrr-disjoint-upstream-only** statement does not allow a backup RPF path to be selected if the path goes to the same upstream neighbor as that of the primary RPF path. This ensures that MoFRR is triggered only on a topology that has multiple RPF upstream neighbors.

```
[edit routing-options multicast stream-protection]
user@host# set mofrr-disjoint-upstream-only
```

7. (Optional) In a PIM domain with MoFRR, prevent sending join messages on the backup path, but retain all other MoFRR functionality.

This is not supported for multipoint LDP MoFRR.

```
[edit routing-options multicast stream-protection]
user@host# set mofrr-no-backup-join
```

8. (Optional) In a PIM domain with MoFRR, allow new primary path selection to be based on the unicast gateway selection for the unicast route to the source and to change when there is a change in the unicast selection, rather than having the backup path be promoted as primary. This ensures that the primary RPF hop is always on the best path.

When you include the **mofrr-primary-selection-by-routing** statement, the backup path is not guaranteed to get promoted to be the new primary path when the primary path goes down.

This is not supported for multipoint LDP MoFRR.

```
[edit routing-options multicast stream-protection]
```

```
user@host# set mofrr-primary-path-selection-by-routing
```

**Related Documentation**

- [Understanding Multicast-Only Fast Reroute on page 644](#)
- [Example: Configuring Multicast-Only Fast Reroute in a PIM Domain](#)
- [Example: Configuring Multicast-Only Fast Reroute in a Multipoint LDP Domain on page 654](#)

---

## Example: Configuring Multicast-Only Fast Reroute in a Multipoint LDP Domain

---

This example shows how to configure multicast-only fast reroute (MoFRR) to minimize packet loss in a network when there is a link failure.

Multipoint LDP MoFRR is used at the egress node of an MPLS network, where the packets are forwarded to an IP network. In the case of multipoint LDP MoFRR, the two paths toward the upstream provider edge (PE) router are established for receiving two streams of MPLS packets at the label-edge router (LER). One of the streams (the primary) is accepted, and the other one (the backup) is dropped at the LER. The backup stream is accepted if the primary path fails.

- [Requirements on page 654](#)
- [Overview on page 654](#)
- [CLI Quick Configuration on page 655](#)
- [Configuration on page 661](#)
- [Verification on page 666](#)

### Requirements

No special configuration beyond device initialization is required before configuring this example.

In a multipoint LDP domain, for MoFRR to work, only the egress PE router needs to have MoFRR enabled. The other routers do not need to support MoFRR.

MoFRR is supported on MX Series platforms with MPC line cards. As a prerequisite, the router must be set to **network-services enhanced-ip** mode, and all the line-cards in the platform must be MPCs.

This example requires Junos OS Release 14.1 or later on the egress PE router.

### Overview

In this example, Device R3 is the egress edge router. MoFRR is enabled on this device only.

OSPF is used for connectivity, though any interior gateway protocol (IGP) or static routes can be used.

For testing purposes, routers are used to simulate the source and the receiver. Device R4 and Device R8 are configured to statically join the desired group by using the **set protocols**

**igmp interface interface-name static group group** command. In the case when a real multicast receiver host is not available, as in this example, this static IGMP configuration is useful. On the receivers, to make them listen to the multicast group address, this example uses **set protocols sap listen group**.


MoFRR configuration includes a policy option that is not shown in this example, but is explained separately. The option is configured as follows:

```
stream-protection {
  policy policy-name;
}
```

### Topology

Figure 66 on page 655 shows the sample network.

Figure 66: MoFRR in a Multipoint LDP Domain

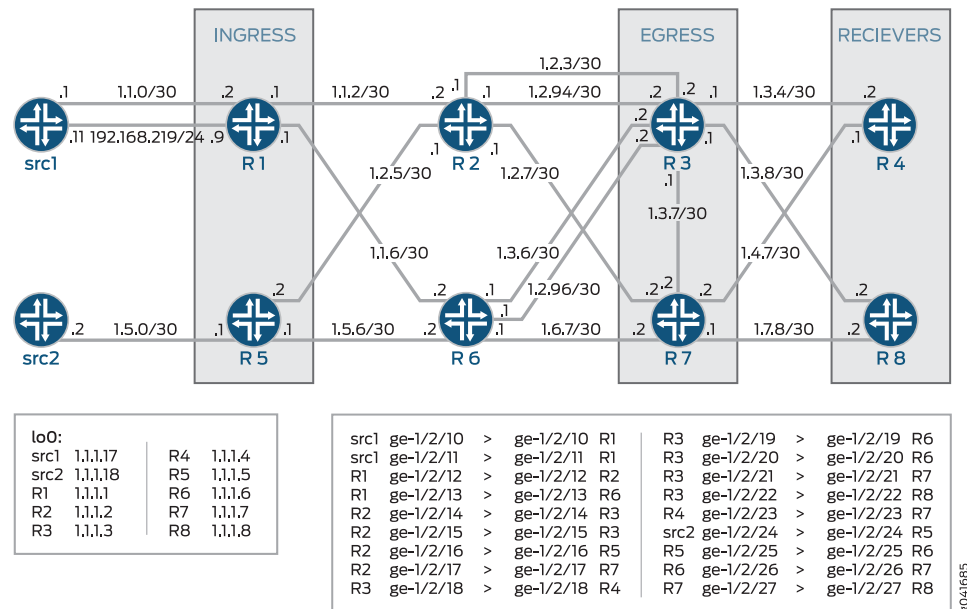

“CLI Quick Configuration” on page 655 shows the configuration for all of the devices in Figure 66 on page 655.

The section “Configuration” on page 661 describes the steps on Device R3.

### CLI Quick Configuration

**CLI Quick Configuration** To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

**Device src1**

```
set interfaces ge-1/2/10 unit 0 description src1-to-R1
set interfaces ge-1/2/10 unit 0 family inet address 1.1.0.1/30
set interfaces ge-1/2/11 unit 0 description src1-to-R1
set interfaces ge-1/2/11 unit 0 family inet address 192.168.219.11/24
set interfaces lo0 unit 0 family inet address 1.1.1.17/32
```

```
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface lo0.0 passive

Device src2
set interfaces ge-1/2/24 unit 0 description src2-to-R5
set interfaces ge-1/2/24 unit 0 family inet address 1.5.0.2/30
set interfaces lo0 unit 0 family inet address 1.1.1.18/32
set protocols rsvp interface all
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface lo0.0 passive

Device R1
set interfaces ge-1/2/12 unit 0 description R1-to-R2
set interfaces ge-1/2/12 unit 0 family inet address 1.1.2.1/30
set interfaces ge-1/2/12 unit 0 family mpls
set interfaces ge-1/2/13 unit 0 description R1-to-R6
set interfaces ge-1/2/13 unit 0 family inet address 1.1.6.1/30
set interfaces ge-1/2/13 unit 0 family mpls
set interfaces ge-1/2/10 unit 0 description R1-to-src1
set interfaces ge-1/2/10 unit 0 family inet address 1.1.0.2/30
set interfaces ge-1/2/11 unit 0 description R1-to-src1
set interfaces ge-1/2/11 unit 0 family inet address 192.168.219.9/30
set interfaces lo0 unit 0 family inet address 1.1.1.1/32
set protocols rsvp interface all
set protocols mpls interface all
set protocols bgp group ibgp local-address 1.1.1.1
set protocols bgp group ibgp export static-route-tobgp
set protocols bgp group ibgp peer-as 10
set protocols bgp group ibgp neighbor 1.1.1.3
set protocols bgp group ibgp neighbor 1.1.1.7
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ldp interface ge-1/2/12.0
set protocols ldp interface ge-1/2/13.0
set protocols ldp interface lo0.0
set protocols ldp p2mp
set protocols pim mldp-inband-signalling policy mldppim-ex
set protocols pim rp static address 1.1.1.5
set protocols pim interface lo0.0
set protocols pim interface ge-1/2/10.0
set protocols pim interface ge-1/2/11.0
set policy-options policy-statement mldppim-ex term B from source-address-filter
  192.168.0.0/24 orlonger
set policy-options policy-statement mldppim-ex term B from source-address-filter
  192.168.219.11/32 orlonger
set policy-options policy-statement mldppim-ex term B then p2mp-lsp-root address
  1.1.1.2
set policy-options policy-statement mldppim-ex term B then accept
set policy-options policy-statement mldppim-ex term A from source-address-filter
  1.1.1.7/32 orlonger
set policy-options policy-statement mldppim-ex term A from source-address-filter
  1.1.0.0/30 orlonger
set policy-options policy-statement mldppim-ex term A then accept
set policy-options policy-statement static-route-tobgp term static from protocol static
set policy-options policy-statement static-route-tobgp term static from protocol direct
set policy-options policy-statement static-route-tobgp term static then accept
```

```
set routing-options autonomous-system 10
```

```
Device R2
set interfaces ge-1/2/12 unit 0 description R2-to-R1
set interfaces ge-1/2/12 unit 0 family inet address 1.1.2.2/30
set interfaces ge-1/2/12 unit 0 family mpls
set interfaces ge-1/2/14 unit 0 description R2-to-R3
set interfaces ge-1/2/14 unit 0 family inet address 1.2.3.1/30
set interfaces ge-1/2/14 unit 0 family mpls
set interfaces ge-1/2/16 unit 0 description R2-to-R5
set interfaces ge-1/2/16 unit 0 family inet address 1.2.5.1/30
set interfaces ge-1/2/16 unit 0 family mpls
set interfaces ge-1/2/17 unit 0 description R2-to-R7
set interfaces ge-1/2/17 unit 0 family inet address 1.2.7.1/30
set interfaces ge-1/2/17 unit 0 family mpls
set interfaces ge-1/2/15 unit 0 description R2-to-R3
set interfaces ge-1/2/15 unit 0 family inet address 1.2.94.1/30
set interfaces ge-1/2/15 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 1.1.1.2/32
set interfaces lo0 unit 0 family mpls
set protocols rsvp interface all
set protocols mpls interface all
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ldp interface all
set protocols ldp p2mp
set policy-options policy-statement mldppim-ex term B from source-address-filter
  192.168.0.0/24 orlonger
set policy-options policy-statement mldppim-ex term B from source-address-filter
  192.168.219.11/32 orlonger
set policy-options policy-statement mldppim-ex term B then p2mp-lsp-root address
  1.1.1.2
set policy-options policy-statement mldppim-ex term B then accept
set routing-options autonomous-system 10
```

```
Device R3
set chassis network-services enhanced-ip
set interfaces ge-1/2/14 unit 0 description R3-to-R2
set interfaces ge-1/2/14 unit 0 family inet address 1.2.3.2/30
set interfaces ge-1/2/14 unit 0 family mpls
set interfaces ge-1/2/18 unit 0 description R3-to-R4
set interfaces ge-1/2/18 unit 0 family inet address 1.3.4.1/30
set interfaces ge-1/2/18 unit 0 family mpls
set interfaces ge-1/2/19 unit 0 description R3-to-R6
set interfaces ge-1/2/19 unit 0 family inet address 1.3.6.2/30
set interfaces ge-1/2/19 unit 0 family mpls
set interfaces ge-1/2/21 unit 0 description R3-to-R7
set interfaces ge-1/2/21 unit 0 family inet address 1.3.7.1/30
set interfaces ge-1/2/21 unit 0 family mpls
set interfaces ge-1/2/22 unit 0 description R3-to-R8
set interfaces ge-1/2/22 unit 0 family inet address 1.3.8.1/30
set interfaces ge-1/2/22 unit 0 family mpls
set interfaces ge-1/2/15 unit 0 description R3-to-R2
set interfaces ge-1/2/15 unit 0 family inet address 1.2.94.2/30
set interfaces ge-1/2/15 unit 0 family mpls
set interfaces ge-1/2/20 unit 0 description R3-to-R6
```

```

set interfaces ge-1/2/20 unit 0 family inet address 1.2.96.2/30
set interfaces ge-1/2/20 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 1.1.1.3/32 primary
set routing-options autonomous-system 10
set routing-options multicast stream-protection
set protocols rsvp interface all
set protocols mpls interface all
set protocols bgp group ibgp local-address 1.1.1.3
set protocols bgp group ibgp peer-as 10
set protocols bgp group ibgp neighbor 1.1.1.1
set protocols bgp group ibgp neighbor 1.1.1.5
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface fxp0.0 disable
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ldp interface all
set protocols ldp p2mp
set protocols pim mldp-inband-signalling policy mldppim-ex
set protocols pim interface lo0.0
set protocols pim interface ge-1/2/18.0
set protocols pim interface ge-1/2/22.0
set policy-options policy-statement mldppim-ex term B from source-address-filter
  192.168.0.0/24 orlonger
set policy-options policy-statement mldppim-ex term B from source-address-filter
  192.168.219.11/32 orlonger
set policy-options policy-statement mldppim-ex term B then accept
set policy-options policy-statement mldppim-ex term A from source-address-filter
  1.1.0.1/30 orlonger
set policy-options policy-statement mldppim-ex term A then accept
set policy-options policy-statement static-route-tobgp term static from protocol static
set policy-options policy-statement static-route-tobgp term static from protocol direct
set policy-options policy-statement static-route-tobgp term static then accept

```

**Device R4**

```

set interfaces ge-1/2/18 unit 0 description R4-to-R3
set interfaces ge-1/2/18 unit 0 family inet address 1.3.4.2/30
set interfaces ge-1/2/18 unit 0 family mpls
set interfaces ge-1/2/23 unit 0 description R4-to-R7
set interfaces ge-1/2/23 unit 0 family inet address 1.4.7.1/30
set interfaces lo0 unit 0 family inet address 1.1.1.4/32
set protocols igmp interface ge-1/2/18.0 version 3
set protocols igmp interface ge-1/2/18.0 static group 232.1.1.1 group-count 2
set protocols igmp interface ge-1/2/18.0 static group 232.1.1.1 source 192.168.219.11
set protocols igmp interface ge-1/2/18.0 static group 232.2.2.2 source 1.2.7.7
set protocols sap listen 232.1.1.1
set protocols sap listen 232.2.2.2
set protocols rsvp interface all
set protocols mpls interface all
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols pim mldp-inband-signalling policy mldppim-ex
set protocols pim interface ge-1/2/23.0
set protocols pim interface ge-1/2/18.0
set protocols pim interface lo0.0
set policy-options policy-statement static-route-tobgp term static from protocol static
set policy-options policy-statement static-route-tobgp term static from protocol direct

```



```

set policy-options policy-statement static-route-tobgp term static then accept
set policy-options policy-statement mldppim-ex term B from source-address-filter
  192.168.0.0/24 orlonger
set policy-options policy-statement mldppim-ex term B from source-address-filter
  192.168.219.11/32 orlonger
set policy-options policy-statement mldppim-ex term B then p2mp-lsp-root address
  1.1.1.2
set policy-options policy-statement mldppim-ex term B then accept
set routing-options autonomous-system 10

```

Device R5

```

set interfaces ge-1/2/24 unit 0 description R5-to-src2
set interfaces ge-1/2/24 unit 0 family inet address 1.5.0.1/30
set interfaces ge-1/2/16 unit 0 description R5-to-R2
set interfaces ge-1/2/16 unit 0 family inet address 1.2.5.2/30
set interfaces ge-1/2/16 unit 0 family mpls
set interfaces ge-1/2/25 unit 0 description R5-to-R6
set interfaces ge-1/2/25 unit 0 family inet address 1.5.6.1/30
set interfaces ge-1/2/25 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 1.1.1.5/32
set protocols rsvp interface all
set protocols mpls interface all
set protocols bgp group ibgp local-address 1.1.1.5
set protocols bgp group ibgp export static-route-tobgp
set protocols bgp group ibgp peer-as 10
set protocols bgp group ibgp neighbor 1.1.1.7
set protocols bgp group ibgp neighbor 1.1.1.3
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ldp interface ge-1/2/16.0
set protocols ldp interface ge-1/2/25.0
set protocols ldp p2mp
set protocols pim interface lo0.0
set protocols pim interface ge-1/2/24.0
set policy-options policy-statement static-route-tobgp term static from protocol static
set policy-options policy-statement static-route-tobgp term static from protocol direct
set policy-options policy-statement static-route-tobgp term static then accept
set routing-options autonomous-system 10

```

Device R6

```

set interfaces ge-1/2/13 unit 0 description R6-to-R1
set interfaces ge-1/2/13 unit 0 family inet address 1.1.6.2/30
set interfaces ge-1/2/13 unit 0 family mpls
set interfaces ge-1/2/19 unit 0 description R6-to-R3
set interfaces ge-1/2/19 unit 0 family inet address 1.3.6.1/30
set interfaces ge-1/2/19 unit 0 family mpls
set interfaces ge-1/2/25 unit 0 description R6-to-R5
set interfaces ge-1/2/25 unit 0 family inet address 1.5.6.2/30
set interfaces ge-1/2/25 unit 0 family mpls
set interfaces ge-1/2/26 unit 0 description R6-to-R7
set interfaces ge-1/2/26 unit 0 family inet address 1.6.7.1/30
set interfaces ge-1/2/26 unit 0 family mpls
set interfaces ge-1/2/20 unit 0 description R6-to-R3
set interfaces ge-1/2/20 unit 0 family inet address 1.2.96.1/30
set interfaces ge-1/2/20 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 1.1.1.6/30

```

```
set protocols rsvp interface all
set protocols mpls interface all
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ldp interface all
set protocols ldp p2mp
```

```
Device R7 set interfaces ge-1/2/17 unit 0 description R7-to-R2
set interfaces ge-1/2/17 unit 0 family inet address 1.2.7.2/30
set interfaces ge-1/2/17 unit 0 family mpls
set interfaces ge-1/2/21 unit 0 description R7-to-R3
set interfaces ge-1/2/21 unit 0 family inet address 1.3.7.2/30
set interfaces ge-1/2/21 unit 0 family mpls
set interfaces ge-1/2/23 unit 0 description R7-to-R4
set interfaces ge-1/2/23 unit 0 family inet address 1.4.7.2/30
set interfaces ge-1/2/23 unit 0 family mpls
set interfaces ge-1/2/26 unit 0 description R7-to-R6
set interfaces ge-1/2/26 unit 0 family inet address 1.6.7.2/30
set interfaces ge-1/2/26 unit 0 family mpls
set interfaces ge-1/2/27 unit 0 description R7-to-R8
set interfaces ge-1/2/27 unit 0 family inet address 1.7.8.1/30
set interfaces ge-1/2/27 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 1.1.1.7/32
set protocols rsvp interface all
set protocols mpls interface all
set protocols bgp group ibgp local-address 1.1.1.7
set protocols bgp group ibgp export static-route-tobgp
set protocols bgp group ibgp peer-as 10
set protocols bgp group ibgp neighbor 1.1.1.5
set protocols bgp group ibgp neighbor 1.1.1.1
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface lo0.0 passive
set protocols ldp interface ge-1/2/17.0
set protocols ldp interface ge-1/2/21.0
set protocols ldp interface ge-1/2/26.0
set protocols ldp p2mp
set protocols pim mldp-inband-signalling policy mldppim-ex
set protocols pim interface lo0.0
set protocols pim interface ge-1/2/27.0
set policy-options policy-statement mldppim-ex term B from source-address-filter
192.168.0.0/24 orlonger
set policy-options policy-statement mldppim-ex term B from source-address-filter
192.168.219.11/32 orlonger
set policy-options policy-statement mldppim-ex term B then accept
set policy-options policy-statement mldppim-ex term A from source-address-filter
1.1.0.1/30 orlonger
set policy-options policy-statement mldppim-ex term A then accept
set policy-options policy-statement static-route-tobgp term static from protocol static
set policy-options policy-statement static-route-tobgp term static from protocol direct
set policy-options policy-statement static-route-tobgp term static then accept
set routing-options autonomous-system 10
set routing-options multicast stream-protection policy mldppim-ex
```

```

Device R8    set interfaces ge-1/2/22 unit 0 description R8-to-R3
              set interfaces ge-1/2/22 unit 0 family inet address 1.3.8.2/30
              set interfaces ge-1/2/22 unit 0 family mpls
              set interfaces ge-1/2/27 unit 0 description R8-to-R7
              set interfaces ge-1/2/27 unit 0 family inet address 1.7.8.2/30
              set interfaces ge-1/2/27 unit 0 family mpls
              set interfaces lo0 unit 0 family inet address 1.1.1.8/32
              set protocols igmp interface ge-1/2/22.0 version 3
              set protocols igmp interface ge-1/2/22.0 static group 232.1.1.1 group-count 2
              set protocols igmp interface ge-1/2/22.0 static group 232.1.1.1 source 192.168.219.11
              set protocols igmp interface ge-1/2/22.0 static group 232.2.2.2 source 1.2.7.7
              set protocols sap listen 232.1.1.1
              set protocols sap listen 232.2.2.2
              set protocols rsvp interface all
              set protocols ospf traffic-engineering
              set protocols ospf area 0.0.0.0 interface all
              set protocols ospf area 0.0.0.0 interface lo0.0 passive
              set protocols pim mldp-inband-signalling policy mldppim-ex
              set protocols pim interface ge-1/2/27.0
              set protocols pim interface ge-1/2/22.0
              set protocols pim interface lo0.0
              set policy-options policy-statement static-route-tobgp term static from protocol static
              set policy-options policy-statement static-route-tobgp term static from protocol direct
              set policy-options policy-statement static-route-tobgp term static then accept
              set policy-options policy-statement mldppim-ex term B from source-address-filter
                192.168.0.0/24 orlonger
              set policy-options policy-statement mldppim-ex term B from source-address-filter
                192.168.219.11/32 orlonger
              set policy-options policy-statement mldppim-ex term B then p2mp-lsp-root address
                1.1.1.2
              set policy-options policy-statement mldppim-ex term B then accept
              set routing-options autonomous-system 10

```

## Configuration

**Step-by-Step Procedure** The following example requires that you navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure Device R3:

1. Enable enhanced IP mode.
 

```

[edit chassis]
user@R3# set network-services enhanced-ip

```
2. Configure the device interfaces.
 

```

[edit interfaces]
user@R3# set ge-1/2/14 unit 0 description R3-to-R2
user@R3# set ge-1/2/14 unit 0 family inet address 1.2.3.2/30
user@R3# set ge-1/2/14 unit 0 family mpls

user@R3# set ge-1/2/18 unit 0 description R3-to-R4
user@R3# set ge-1/2/18 unit 0 family inet address 1.3.4.1/30
user@R3# set ge-1/2/18 unit 0 family mpls

```

```
user@R3# set ge-1/2/19 unit 0 description R3-to-R6
user@R3# set ge-1/2/19 unit 0 family inet address 1.3.6.2/30
user@R3# set ge-1/2/19 unit 0 family mpls
```

```
user@R3# set ge-1/2/21 unit 0 description R3-to-R7
user@R3# set ge-1/2/21 unit 0 family inet address 1.3.7.1/30
user@R3# set ge-1/2/21 unit 0 family mpls
```

```
user@R3# set ge-1/2/22 unit 0 description R3-to-R8
user@R3# set ge-1/2/22 unit 0 family inet address 1.3.8.1/30
user@R3# set ge-1/2/22 unit 0 family mpls
```

```
user@R3# set ge-1/2/15 unit 0 description R3-to-R2
user@R3# set ge-1/2/15 unit 0 family inet address 1.2.94.2/30
user@R3# set ge-1/2/15 unit 0 family mpls
```

```
user@R3# set ge-1/2/20 unit 0 description R3-to-R6
user@R3# set ge-1/2/20 unit 0 family inet address 1.2.96.2/30
user@R3# set ge-1/2/20 unit 0 family mpls
```

```
user@R3# set lo0 unit 0 family inet address 1.1.1.3/32 primary
```

3. Configure the autonomous system (AS) number.

```
user@R3# set routing-options autonomous-system 10
```

4. Configure the routing policies.

```
[edit policy-options policy-statement mldppim-ex]
user@R3# set term B from source-address-filter 192.168.0.0/24 orlonger
user@R3# set term B from source-address-filter 192.168.219.11/32 orlonger
user@R3# set term B then accept
user@R3# set term A from source-address-filter 1.1.0.1/30 orlonger
user@R3# set term A then accept
```

```
[edit policy-options policy-statement static-route-tobgp]
user@R3# set term static from protocol static
user@R3# set term static from protocol direct
user@R3# set term static then accept
```

5. Configure PIM.

```
[edit protocols pim]
user@R3# set mldp-inband-signalling policy mldppim-ex
user@R3# set interface lo0.0
user@R3# set interface ge-1/2/18.0
user@R3# set interface ge-1/2/22.0
```

6. Configure LDP.

```
[edit protocols ldp]
user@R3# set interface all
user@R3# set p2mp
```

7. Configure an IGP or static routes.

```
[edit protocols ospf]
```

```

user@R3# set traffic-engineering
user@R3# set area 0.0.0.0 interface all
user@R3# set area 0.0.0.0 interface fxp0.0 disable
user@R3# set area 0.0.0.0 interface lo0.0 passive

```

8. Configure internal BGP.

```

[edit protocols bgp group ibgp]
user@R3# set local-address 1.1.1.3
user@R3# set peer-as 10
user@R3# set neighbor 1.1.1.1
user@R3# set neighbor 1.1.1.5

```

9. Configure MPLS and, optionally, RSVP.

```

[edit protocols mpls]
user@R3# set interface all

```

```

[edit protocols rsvp]
user@R3# set interface all

```

10. Enable MoFRR.

```

[edit routing-options multicast]
user@R3# set stream-protection

```

**Results** From configuration mode, confirm your configuration by entering the **show chassis**, **show interfaces**, **show protocols**, **show policy-options**, and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```

user@R3# show chassis
network-services enhanced-ip;

user@R3# show interfaces
ge-1/2/14 {
  unit 0 {
    description R3-to-R2;
    family inet {
      address 1.2.3.2/30;
    }
    family mpls;
  }
}
ge-1/2/18 {
  unit 0 {
    description R3-to-R4;
    family inet {
      address 1.3.4.1/30;
    }
    family mpls;
  }
}
ge-1/2/19 {
  unit 0 {
    description R3-to-R6;
    family inet {

```

```
        address 1.3.6.2/30;
    }
    family mpls;
}
}
ge-1/2/21 {
    unit 0 {
        description R3-to-R7;
        family inet {
            address 1.3.7.1/30;
        }
        family mpls;
    }
}
ge-1/2/22 {
    unit 0 {
        description R3-to-R8;
        family inet {
            address 1.3.8.1/30;
        }
        family mpls;
    }
}
ge-1/2/15 {
    unit 0 {
        description R3-to-R2;
        family inet {
            address 1.2.94.2/30;
        }
        family mpls;
    }
}
ge-1/2/20 {
    unit 0 {
        description R3-to-R6;
        family inet {
            address 1.2.96.2/30;
        }
        family mpls;
    }
}
lo0 {
    unit 0 {
        family inet {
            address 192.168.15.1/32;
            address 1.1.1.3/32 {
                primary;
            }
        }
    }
}
}
user@R3# show protocols
rsvp {
    interface all;
}
```

```

mpls {
  interface all;
}
bgp {
  group ibgp {
    local-address 1.1.1.3;
    peer-as 10;
    neighbor 1.1.1.1;
    neighbor 1.1.1.5;
  }
}
ospf {
  traffic-engineering;
  area 0.0.0.0 {
    interface all;
    interface fxp0.0 {
      disable;
    }
    interface lo0.0 {
      passive;
    }
  }
}
ldp {
  interface all;
  p2mp;
}
pim {
  mldp-inband-signalling {
    policy mldppim-ex;
  }
  interface lo0.0;
  interface ge-1/2/18.0;
  interface ge-1/2/22.0;
}

user@R3# show policy-options
policy-statement mldppim-ex {
  term B {
    from {
      source-address-filter 192.168.0.0/24 orlonger;
      source-address-filter 192.168.219.11/32 orlonger;
    }
    then accept;
  }
  term A {
    from {
      source-address-filter 1.1.0.1/30 orlonger;
    }
    then accept;
  }
}
policy-statement static-route-tobgp {
  term static {
    from protocol [ static direct ];
    then accept;
  }
}

```

```
    }  
  }  
  
user@R3# show routing-options  
autonomous-system 10;  
multicast {  
    stream-protection;  
}
```

If you are done configuring the device, enter **commit** from configuration mode.

## Verification

Confirm that the configuration is working properly.

- [Checking the LDP Point-to-Multipoint Forwarding Equivalency Classes on page 666](#)
- [Examining the Label Information on page 666](#)
- [Checking the Multicast Routes on page 668](#)
- [Checking the LDP Point-to-Multipoint Traffic Statistics on page 669](#)

---

### Checking the LDP Point-to-Multipoint Forwarding Equivalency Classes

**Purpose** Make sure the MoFRR is enabled, and determine what labels are being used.

**Action** user@R3> show ldp p2mp fec

```
LDP P2MP FECs:  
P2MP root-addr 1.1.1.1, grp: 232.1.1.1, src: 192.168.219.11  
  MoFRR enabled  
  Fec type: Egress (Active)  
  Label: 301568  
P2MP root-addr 1.1.1.1, grp: 232.1.1.2, src: 192.168.219.11  
  MoFRR enabled  
  Fec type: Egress (Active)  
  Label: 301600
```

**Meaning** The output shows that MoFRR is enabled, and it shows that the labels 301568 and 301600 are being used for the two multipoint LDP point-to-multipoint LSPs.

---

### Examining the Label Information

**Purpose** Make sure that the egress device has two upstream interfaces for the multicast group join.



**Action** user@R3> show route label 301568 detail

```

mpls.0: 18 destinations, 18 routes (18 active, 0 holddown, 0 hidden)
301568 (1 entry, 1 announced)
  *LDP    Preference: 9
           Next hop type: Flood
           Address: 0x2735208
           Next-hop reference count: 3
           Next hop type: Router, Next hop index: 1397
           Address: 0x2735d2c
           Next-hop reference count: 3
           Next hop: 1.3.8.2 via ge-1/2/22.0
           Label operation: Pop
           Load balance label: None;
           Next hop type: Router, Next hop index: 1395
           Address: 0x2736290
           Next-hop reference count: 3
           Next hop: 1.3.4.2 via ge-1/2/18.0
           Label operation: Pop
           Load balance label: None;
           State: <Active Int AckRequest MulticastRPF>
           Local AS: 10
           Age: 54:05      Metric: 1
           Validation State: unverified
           Task: LDP
           Announcement bits (1): 0-KRT
           AS path: I
           FECs bound to route: P2MP root-addr 1.1.1.1, grp: 232.1.1.1, src:
192.168.219.11
           Primary Upstream : 1.1.1.3:0--1.1.1.2:0
             RPF Nexthops :
               ge-1/2/15.0, 1.2.94.1, Label: 301568, weight: 0x1
               ge-1/2/14.0, 1.2.3.1, Label: 301568, weight: 0x1
           Backup Upstream : 1.1.1.3:0--1.1.1.6:0
             RPF Nexthops :
               ge-1/2/20.0, 1.2.96.1, Label: 301584, weight: 0xffff
               ge-1/2/19.0, 1.3.6.1, Label: 301584, weight: 0xffff

```

user@R3> show route label 301600 detail

```

mpls.0: 18 destinations, 18 routes (18 active, 0 holddown, 0 hidden)
301600 (1 entry, 1 announced)
  *LDP    Preference: 9
           Next hop type: Flood
           Address: 0x27356b4
           Next-hop reference count: 3
           Next hop type: Router, Next hop index: 1520
           Address: 0x27350f4
           Next-hop reference count: 3
           Next hop: 1.3.8.2 via ge-1/2/22.0
           Label operation: Pop
           Load balance label: None;
           Next hop type: Router, Next hop index: 1481
           Address: 0x273645c
           Next-hop reference count: 3
           Next hop: 1.3.4.2 via ge-1/2/18.0
           Label operation: Pop
           Load balance label: None;
           State: <Active Int AckRequest MulticastRPF>

```

```
Local AS: 10
Age: 54:25 Metric: 1
Validation State: unverified
Task: LDP
Announcement bits (1): 0-KRT
AS path: I
FECs bound to route: P2MP root-addr 1.1.1.1, grp: 232.1.1.2, src:
192.168.219.11
Primary Upstream : 1.1.1.3:0--1.1.1.6:0
RPF Nexthops :
    ge-1/2/20.0, 1.2.96.1, Label: 301600, weight: 0x1
    ge-1/2/19.0, 1.3.6.1, Label: 301600, weight: 0x1
Backup Upstream : 1.1.1.3:0--1.1.1.2:0
RPF Nexthops :
    ge-1/2/15.0, 1.2.94.1, Label: 301616, weight: 0xfffe
    ge-1/2/14.0, 1.2.3.1, Label: 301616, weight: 0xfffe
```

**Meaning** The output shows the primary upstream paths and the backup upstream paths. It also shows the RPF next hops.

---

### Checking the Multicast Routes

**Purpose** Examine the IP multicast forwarding table to make sure that there is an upstream RPF interface list, with a primary and a backup interface.

```

Action user@R3> show ldp p2mp path
P2MP path type: Transit/Egress
  Output Session (label): 1.1.1.2:0 (301568) (Primary)
  Egress Nexthops: Interface ge-1/2/18.0
                   Interface ge-1/2/22.0
  RPF Nexthops:   Interface ge-1/2/15.0, 1.2.94.1, 301568, 1
                   Interface ge-1/2/20.0, 1.2.96.1, 301584, 65534
                   Interface ge-1/2/14.0, 1.2.3.1, 301568, 1
                   Interface ge-1/2/19.0, 1.3.6.1, 301584, 65534
  Attached FECs:  P2MP root-addr 1.1.1.1, grp: 232.1.1.1, src: 192.168.219.11
(Active)
P2MP path type: Transit/Egress
  Output Session (label): 1.1.1.6:0 (301584) (Backup)
  Egress Nexthops: Interface ge-1/2/18.0
                   Interface ge-1/2/22.0
  RPF Nexthops:   Interface ge-1/2/15.0, 1.2.94.1, 301568, 1
                   Interface ge-1/2/20.0, 1.2.96.1, 301584, 65534
                   Interface ge-1/2/14.0, 1.2.3.1, 301568, 1
                   Interface ge-1/2/19.0, 1.3.6.1, 301584, 65534
  Attached FECs:  P2MP root-addr 1.1.1.1, grp: 232.1.1.1, src: 192.168.219.11
(Active)
P2MP path type: Transit/Egress
  Output Session (label): 1.1.1.6:0 (301600) (Primary)
  Egress Nexthops: Interface ge-1/2/18.0
                   Interface ge-1/2/22.0
  RPF Nexthops:   Interface ge-1/2/15.0, 1.2.94.1, 301616, 65534
                   Interface ge-1/2/20.0, 1.2.96.1, 301600, 1
                   Interface ge-1/2/14.0, 1.2.3.1, 301616, 65534
                   Interface ge-1/2/19.0, 1.3.6.1, 301600, 1
  Attached FECs:  P2MP root-addr 1.1.1.1, grp: 232.1.1.2, src: 192.168.219.11
(Active)
P2MP path type: Transit/Egress
  Output Session (label): 1.1.1.2:0 (301616) (Backup)
  Egress Nexthops: Interface ge-1/2/18.0
                   Interface ge-1/2/22.0
  RPF Nexthops:   Interface ge-1/2/15.0, 1.2.94.1, 301616, 65534
                   Interface ge-1/2/20.0, 1.2.96.1, 301600, 1
                   Interface ge-1/2/14.0, 1.2.3.1, 301616, 65534
                   Interface ge-1/2/19.0, 1.3.6.1, 301600, 1
  Attached FECs:  P2MP root-addr 1.1.1.1, grp: 232.1.1.2, src: 192.168.219.11
(Active)

```

**Meaning** The output shows primary and backup sessions, and RPF next hops.

### Checking the LDP Point-to-Multipoint Traffic Statistics

**Purpose** Make sure that both primary and backup statistics are listed.

**Action** user@R3> `show ldp traffic-statistics p2mp`

P2MP FEC Statistics:

| FEC(root_addr:lsp_id/grp,src)                                 | Nexthop | Packets | Bytes |
|---------------------------------------------------------------|---------|---------|-------|
| Shared                                                        |         |         |       |
| 1.1.1.1:232.1.1.1,192.168.219.11, Label: 301568               | 1.3.8.2 | 0       | 0     |
| No                                                            | 1.3.4.2 | 0       | 0     |
| No                                                            |         |         |       |
| 1.1.1.1:232.1.1.1,192.168.219.11, Label: 301584, Backup route | 1.3.4.2 | 0       | 0     |
| No                                                            | 1.3.8.2 | 0       | 0     |
| No                                                            |         |         |       |
| 1.1.1.1:232.1.1.2,192.168.219.11, Label: 301600               | 1.3.8.2 | 0       | 0     |
| No                                                            | 1.3.4.2 | 0       | 0     |
| No                                                            |         |         |       |
| 1.1.1.1:232.1.1.2,192.168.219.11, Label: 301616, Backup route | 1.3.4.2 | 0       | 0     |
| No                                                            | 1.3.8.2 | 0       | 0     |
| No                                                            |         |         |       |

**Meaning** The output shows both primary and backup routes with the labels.

- Related Documentation**
- [Understanding Multicast-Only Fast Reroute on page 644](#)
  - [Configuring Multicast-Only Fast Reroute on page 651](#)
  - [Example: Configuring Multicast-Only Fast Reroute in a PIM Domain](#)

## Example: Configuring LDP Downstream on Demand

This example shows how to configure LDP downstream on demand. LDP is commonly configured using downstream unsolicited advertisement mode, meaning label advertisements for all routes are received from all LDP peers. As service providers integrate the access and aggregation networks into a single MPLS domain, LDP downstream on demand is needed to distribute the bindings between the access and aggregation networks and to reduce the processing requirements for the control plane.

Downstream nodes could potentially receive tens of thousands of label bindings from upstream aggregation nodes. Instead of learning and storing all label bindings for all possible loopback addresses within the entire MPLS network, the downstream aggregation node can be configured using LDP downstream on demand to only request the label bindings for the FECs corresponding to the loopback addresses of those egress nodes on which it has services configured.

- [Requirements on page 671](#)
- [Overview on page 671](#)

- [Configuration on page 671](#)
- [Verification on page 674](#)

## Requirements

This example uses the following hardware and software components:

- M Series router
- Junos OS 12.2

## Overview

You can enable LDP downstream on demand label advertisement for an LDP session by including the **downstream-on-demand** statement at the **[edit protocols ldp session]** hierarchy level. If you have configured downstream on demand, the Juniper Networks router advertises the downstream on demand request to its peer routers. For a downstream on demand session to be established between two routers, both have to advertise downstream on demand mode during LDP session establishment. If one router advertises downstream unsolicited mode and the other advertises downstream on demand, downstream unsolicited mode is used.

## Configuration

### Configuring LDP Downstream on Demand

#### Step-by-Step Procedure

To configure a LDP downstream on demand policy and then configure that policy and enable LDP downstream on demand on the LDP session:

1. Configure the downstream on demand policy (DOD-Request-Loopbacks in this example).

This policy causes the router to forward label request messages only to the FECs that are matched by the DOD-Request-Loopbacks policy.

```
[edit policy-options]
user@host# set prefix-list Request-Loopbacks 10.1.1.1/32
user@host# set prefix-list Request-Loopbacks 10.1.1.2/32
user@host# set prefix-list Request-Loopbacks 10.1.1.3/32
user@host# set prefix-list Request-Loopbacks 10.1.1.4/32
user@host# set policy-statement DOD-Request-Loopbacks term 1 from prefix-list
Request-Loopbacks
user@host# set policy-statement DOD-Request-Loopbacks term 1 then accept
```

2. Specify the DOD-Request-Loopbacks policy using the **dod-request-policy** statement at the **[edit protocols ldp]** hierarchy level.

The policy specified with the **dod-request-policy** statement is used to identify the prefixes to send label request messages. This policy is similar to an egress policy or an import policy. When processing routes from the inet.0 routing table, the Junos OS software checks for routes matching the **DOD-Request-Loopbacks** policy (in this example). If the route matches the policy and the LDP session is negotiated with DOD advertisement mode, label request messages are sent to the corresponding downstream LDP session.

```
[edit protocols ldp]
user@host# set dod-request-policy DOD-Request-Loopbacks
```

3. Include the **downstream-on-demand** statement in the configuration for the LDP session to enable downstream on demand distribution mode.

```
[edit protocols ldp]
user@host# set session 1.1.1.1 downstream-on-demand
```

### Distributing LDP Downstream on Demand Routes into Labeled BGP

**Step-by-Step Procedure** To distribute LDP downstream on demand routes into labeled BGP, use a BGP export policy.

1. Configure the LDP route policy (**redistribute\_ldp** in this example).

```
[edit policy-options]
user@host# set policy-statement redistribute_ldp term 1 from protocol ldp
user@host# set policy-statement redistribute_ldp term 1 from tag 1000
user@host# set policy-statement redistribute_ldp term 1 then accept
```

2. Include the LDP route policy, **redistribute\_ldp** in the BGP configuration (as a part of the BGP group configuration **ebgp-to-abr** in this example).

BGP forwards the LDP routes based on the **redistribute\_ldp** policy to the remote PE router

```
[edit protocols bgp]
user@host# set group ebgp-to-abr type external
user@host# set group ebgp-to-abr local-address 192.168.0.1
user@host# set group ebgp-to-abr peer-as 65319
user@host# set group ebgp-to-abr local-as 65320
user@host# set group ebgp-to-abr neighbor 192.168.6.1 family inet unicast
user@host# set group ebgp-to-abr neighbor 192.168.6.1 family inet labeled-unicast
rib inet.3
user@host# set group ebgp-to-abr neighbor 192.168.6.1 export redistribute_ldp
```

**Step-by-Step Procedure** To restrict label propagation to other routers configured in downstream unsolicited mode (instead of downstream on demand), configure the following policies:

1. Configure the **dod-routes** policy to accept routes from LDP.

```
user@host# set policy-options policy-statement dod-routes term 1 from protocol ldp
user@host# set policy-options policy-statement dod-routes term 1 from tag 1145307136
user@host# set policy-options policy-statement dod-routes term 1 then accept
```

2. Configure the **do-not-propagate-du-sessions** policy to not forward routes to neighbors 1.1.1.1, 2.2.2.2, and 3.3.3.3.

```
user@host# set policy-options policy-statement do-not-propagate-du-sessions term 1 to neighbor 1.1.1.1
user@host# set policy-options policy-statement do-not-propagate-du-sessions term 1 to neighbor 2.2.2.2
user@host# set policy-options policy-statement do-not-propagate-du-sessions term 1 to neighbor 3.3.3.3
```

```
user@host# set policy-options policy-statement do-not-propagate-du-sessions
term 1 then reject
```

3. Configure the **filter-dod-on-du-sessions** policy to prevent the routes examined by the **dod-routes** policy from being forwarded to the neighboring routers defined in the **do-not-propagate-du-sessions** policy.

```
user@host# set policy-options policy-statement filter-dod-routes-on-du-sessions
term 1 from policy dod-routes
user@host# set policy-options policy-statement filter-dod-routes-on-du-sessions
term 1 to policy do-not-propagate-du-sessions
```

4. Specify the **filter-dod-routes-on-du-session** policy as the export policy for BGP group **ebgp-to-abr**.

```
[edit protocols bgp]
user@host# set group ebgp-to-abr neighbor 192.168.6.2 export
filter-dod-routes-on-du-sessions
```

**Results** From configuration mode, confirm your configuration by entering the **show policy-options** and **show protocols ldp** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@host#
show policy-options
prefix-list Request-Loopbacks {
  10.1.1.1/32;
  10.1.1.2/32;
  10.1.1.3/32;
  10.1.1.4/32;
}
policy-statement DOD-Request-Loopbacks {
  term 1 {
    from {
      prefix-list Request-Loopbacks;
    }
    then accept;
  }
}
policy-statement redistribute_ldp {
  term 1 {
    from {
      protocol ldp;
      tag 1000;
    }
    then accept;
  }
}

user@host#
show protocols ldp
dod-request-policy DOD-Request-Loopbacks;
session 1.1.1.1 {
  downstream-on-demand;
}

user@host#
```

```
show protocols bgp
group ebgp-to-abr {
  type external;
  local-address 192.168.0.1;
  peer-as 65319;
  local-as 65320;
  neighbor 192.168.6.1 {
    family inet {
      unicast;
      labeled-unicast {
        rib {
          inet.3;
        }
      }
    }
  }
  export redistribute_ldp;
}
```

## Verification

### Verifying Label Advertisement Mode

---

**Purpose** Confirm that the configuration is working properly.

Use the **show ldp session** command to verify the status of the label advertisement mode for the LDP session.



**Action** Issue the `show ldp session` and `show ldp session detail` commands:

- The following command output for the `show ldp session` command indicates that the **Adv. Mode** (label advertisement mode) is **DOD** (meaning the LDP downstream on demand session is operational):

```
user@host> show ldp session
  Address          State      Connection    Hold time  Adv. Mode
  1.1.1.2          Operational Open          22         DOD
```

- The following command output for the `show ldp session detail` command indicates that the **Local Label Advertisement mode** is **Downstream unsolicited**, the default value (meaning downstream on demand is not configured on the local session). Conversely, the **Remote Label Advertisement mode** and the **Negotiated Label Advertisement mode** both indicate that **Downstream on demand** is configured on the remote session

```
user@host> show ldp session detail
Address: 1.1.1.2, State: Operational, Connection: Open, Hold time: 24
Session ID: 1.1.1.1:0--1.1.1.2:0
Next keepalive in 4 seconds
Passive, Maximum PDU: 4096, Hold time: 30, Neighbor count: 1
Neighbor types: configured-tunneled
Keepalive interval: 10, Connect retry interval: 1
Local address: 1.1.1.1, Remote address: 1.1.1.2
Up for 17:54:52
Capabilities advertised: none
Capabilities received: none
Protection: disabled
Local - Restart: disabled, Helper mode: enabled,
Remote - Restart: disabled, Helper mode: enabled
Local maximum neighbor reconnect time: 120000 msec
Local maximum neighbor recovery time: 240000 msec
Local Label Advertisement mode: Downstream unsolicited
Remote Label Advertisement mode: Downstream on demand
Negotiated Label Advertisement mode: Downstream on demand
Nonstop routing state: Not in sync
Next-hop addresses received:
  1.1.1.2
```

## Configuring LDP Native IPv6 Support

LDP is supported in an IPv6-only network, and in an IPv6 or IPv4 dual-stack network as described in *RFC 7552*. Configure the address family as **inet** for IPv4 or **inet6** for IPv6 or both, and the transport preference to be either **IPv4** or **IPv6**. The **dual-transport** statement allows Junos OS LDP to establish the TCP connection over IPv4 with IPv4 neighbors, and over IPv6 with IPv6 neighbors as a single-stack LSR. The **inet-lsr-id** and **inet6-lsr-id** IDs are the two LSR IDs that have to be configured to establish an LDP session over IPv4 and IPv6 TCP transport. These two IDs should be non-zero and must be configured with different values.

Before you configure IPv6 as dual-stack, be sure you configure the routing and signaling protocols.

To configure LDP native IPv6 support, you must do the following:

1. Enable forwarding equivalence class (FEC) deaggregation in order to use different labels for different address families.

```
[edit protocols ldp]  
set deaggregate
```

2. Configure LDP address families.

```
[edit protocols ldp]  
set family inet6  
set family inet
```

3. Configure the **transport-preference** statement to select the preferred transport for the TCP connection when both IPv4 and IPv6 are enabled. By default, IPv6 is used as the TCP transport for establishing an LDP connection.

```
[edit protocols ldp]  
set transport-preference ipv4
```

4. (Optional) Configure dual-transport to allow LDP to establish a separate IPv4 session with an IPv4 neighbor, and an IPv6 session with an IPv6 neighbor. Configure **inet-lsr-id** as the LSR ID for IPv4, and **inet6-lsr-id** as the LSR ID for IPv6.

```
[edit protocols ldp dual-transport]  
set inet-lsr-id inet-lsr-id  
set inet6-lsr-id inet6-lsr-id
```

For example, configure **inet-lsr-id** as 10.255.0.1, and **inet6-lsr-id** as 1.1.1.1.

```
[edit protocols ldp dual-transport]  
set inet-lsr-id 10.255.0.1  
set inet6-lsr-id 1.1.1.1
```

- Related Documentation**
- [LDP Native IPv6 Support Overview on page 585](#)
  - [Example: Configuring LDP Native IPv6 Support on page 676](#)

---

## Example: Configuring LDP Native IPv6 Support

This example shows how to allow the Junos OS Label Distribution Protocol (LDP) to establish the TCP connection over IPv4 with IPv4 neighbors, and over IPv6 with IPv6 neighbors as a single-stack LSR. This helps avoid tunneling of IPv6 over IPv4 MPLS core with IPv4-signaled MPLS label-switched paths (LSPs).

- [Requirements on page 676](#)
- [Overview on page 677](#)
- [Configuration on page 677](#)

### Requirements

This example uses the following hardware and software components:


- Two MX Series routers

- Before you configure IPv6 as dual-stack, be sure you configure the routing and signaling protocols.

LDP is supported in an IPv6 only network, and in an IPv6 or IPv4 dual-stack network as described in *RFC 7552*. Configure the address family as **inet** for IPv4 or **inet6** for IPv6. By default, IPv6 is used as the TCP transport for the LDP session with its peers when both IPv4 and IPv6 are enabled. The dual-transport statement allows Junos LDP to establish the TCP connection over IPv4 with IPv4 neighbors, and over IPv6 with IPv6 neighbors as a single-stack LSR. The **inet-lsr-id** and **inet6-lsr-id** are the two LSR IDs that have to be configured to establish an LDP session over IPv4 and IPv6 TCP transport. These two IDs should be non-zero and must be configured with different values.

Figure 67 on page 677 shows the LDP IPv6 configured as dual-stack on Device R1 and Device R2.

### Figure 67: Example LDP Native IPv6 Support

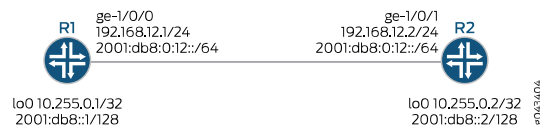

## Configuration

## CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the **[edit]** hierarchy level, and then enter **commit** from configuration mode.

```
R1      set interfaces ge-1/0/0 unit 0 family inet address 192.168.12.1/24
        set interfaces ge-1/0/0 unit 0 family iso
        set interfaces ge-1/0/0 unit 0 family inet6 address 2001:db8:0:12::/64 eui-64
        set interfaces ge-1/0/0 unit 0 family mpls
        set interfaces lo0 unit 0 family inet address 10.255.0.1/32
        set interfaces lo0 unit 0 family iso address 49.0001.1720.1600.1010.00
        set interfaces lo0 unit 0 family inet6 address 2001:db8::1/128
        set protocols isis interface ge-1/0/0.0
        set protocols isis interface lo0.0
        set protocols mpls interface ge-1/0/0.0
        set protocols ldp deaggregate
        set protocols ldp interface ge-1/0/0.0
        set protocols ldp interface lo0.0
        set protocols ldp family inet6
        set protocols ldp family inet

R2      set interfaces ge-1/0/1 unit 0 family inet address 192.168.12.2/24
        set interfaces ge-1/0/1 unit 0 family iso
        set interfaces ge-1/0/1 unit 0 family inet6 address 2001:db8:0:12::/64 eui-64
```

```
set interfaces ge-1/0/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.0.2/32
set interfaces lo0 unit 0 family iso address 49.0001.1720.1600.2020.00
set interfaces lo0 unit 0 family inet6 address 2001:db8::2/128
set protocols isis interface ge-1/0/1.0
set protocols isis interface lo0.0
set protocols mpls interface ge-1/0/1.0
set protocols ldp deaggregate
set protocols ldp interface ge-1/0/1.0
set protocols ldp interface lo0.0
set protocols ldp family inet6
set protocols ldp family inet
```

---

### Configuring R1

**Step-by-Step Procedure** The following example requires that you navigate various levels in the configuration hierarchy. For information about navigating the CLI, see “Using the CLI Editor in Configuration Mode” in the *CLI User Guide*.

To configure Device R1:

1. Configure the interfaces.  

```
[edit interfaces]
set ge-1/0/0 unit 0 family inet address 192.168.12.1/24
set ge-1/0/0 unit 0 family iso
set ge-1/0/0 unit 0 family inet6 address 2001:db8:0:12::/64 eui-64
set ge-1/0/0 unit 0 family mpls
```
2. Assign a loopback address to the device.  

```
[edit interfaces lo0 unit 0]
set family inet address 10.255.0.1/32
set family iso address 49.0001.1720.1600.1010.00
set family inet6 address 2001:db8::1/128
```
3. Configure the IS-IS interfaces.  

```
[edit protocols isis]
set interface ge-1/0/0.0
set interface lo0.0
```
4. Configure MPLS to use LDP interfaces on the device.  

```
[edit protocols mpls]
set protocols mpls interface ge-1/0/0.0
set interface ge-1/0/0.0
set interface lo0.0
```
5. Enable forwarding equivalence class (FEC) deaggregation in order to use different labels for different address families.  

```
[edit protocols ldp]
set deaggregate
```
6. Configure LDP address families.  

```
[edit protocols ldp]
set family inet6
```

**set family inet**

**Results** From configuration mode, confirm your configuration by entering the **show interfaces** and **show protocols** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```

user@R1# show interfaces
ge-1/0/0 {
  unit 0 {
    family inet {
      address 192.168.12.1/24;
    }
    family iso;
    family inet6 {
      address 2001:db8:0:12::/64 {
        eui-64;
      }
    }
    family mpls;
  }
}
lo0 {
  unit 0 {
    family inet {
      address 10.255.0.1/32;
    }
    family iso {
      address 49.0001.1720.1600.1010.00
    }
    family inet6 {
      address 2001:db8::1/128;
    }
  }
}

user@R1# show protocols
mpls {
  interface ge-1/0/0.0;
}
isis {
  interface ge-1/0/0.0;
  interface lo0.0;
}
ldp {
  deaggregate;
  interface ge-1/0/0.0;
  interface lo0.0;
  family {
    inet6;
    inet;
  }
}

```

## Verification

Confirm that the configuration is working properly.

- [Verifying the Route Entries in the mpls.0 Table on page 680](#)
- [Verifying the Route Entries in the inet.3 Table on page 680](#)
- [Verifying the Route Entries in the inet6.3 Table on page 681](#)
- [Verifying the LDP Database on page 681](#)
- [Verifying the LDP Neighbor Information on page 682](#)
- [Verifying the LDP Session Information on page 683](#)

### *Verifying the Route Entries in the mpls.0 Table*

**Purpose** Display mpls.0 route table information.

**Action** On Device R1, from operational mode, run the **show route table mpls.0** command to display mpls.0 route table information.

```
user@R1> show route table mpls.0
mpls.0: 8 destinations, 8 routes (8 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

0                *[MPLS/0] 05:19:58, metric 1
                  Receive
1                *[MPLS/0] 05:19:58, metric 1
                  Receive
2                *[MPLS/0] 05:19:58, metric 1
                  Receive
13               *[MPLS/0] 05:19:58, metric 1
                  Receive
299824           *[LDP/9] 04:28:45, metric 1
                  > to fe80::21f:1200:cb6:4c8d via ge-1/0/0.0, Pop
299824(S=0)      *[LDP/9] 04:28:45, metric 1
                  > to fe80::21f:1200:cb6:4c8d via ge-1/0/0.0, Pop
299888           *[LDP/9] 00:56:12, metric 1
                  > to 192.168.12.2 via ge-1/0/0.0, Pop
299888(S=0)      *[LDP/9] 00:56:12, metric 1
                  > to 192.168.12.2 via ge-1/0/0.0, Pop
```

**Meaning** The output shows the mpls.0 route table information.

### *Verifying the Route Entries in the inet.3 Table*

**Purpose** Display inet.3 route table information.

**Action** On Device R1, from operational mode, run the **show route table inet.3** command to display inet.3 route table information.

```
user@R1> show route table inet.3
inet.3: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

10.255.0.2/32      *[LDP/9] 00:58:38, metric 1
                  > to 192.168.12.2 via ge-1/0/0.0
```

**Meaning** The output shows the inet.3 route table information.

#### *Verifying the Route Entries in the inet6.3 Table*

**Purpose** Display inet6.3 route table information.

**Action** On Device R1, from operational mode, run the **show route table inet6.3** command to display inet6.3 route table information.

```
user@R1> show route table inet6.3

inet6.3: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

2001:db8::2/128   *[LDP/9] 04:31:17, metric 1
                  > to fe80::21f:1200:cb6:4c8d via ge-1/0/0.0
```

**Meaning** The output shows the inet6.3 route table information.

#### *Verifying the LDP Database*

**Purpose** Display the LDP database information.

**Action** On Device R1, from operational mode, run the **show ldp database** command to display LDP database information.

```
user@R1> show ldp database
```

```
Input label database, 10.255.0.1:0--10.255.0.2:0  
Labels received: 3
```

| Label  | Prefix          |
|--------|-----------------|
| 299840 | 10.255.0.1/32   |
| 3      | 10.255.0.2/32   |
| 299808 | 2001:db8::1/128 |
| 3      | 2001:db8::2/128 |

```
Output label database, 10.255.0.1:0--10.255.0.2:0  
Labels advertised: 3
```

| Label  | Prefix          |
|--------|-----------------|
| 3      | 10.255.0.1/32   |
| 299888 | 10.255.0.2/32   |
| 3      | 2001:db8::1/128 |
| 299824 | 2001:db8::2/128 |

**Meaning** The output shows the entries in the LDP database.

#### *Verifying the LDP Neighbor Information*

**Purpose** Display the LDP neighbor information.



**Action** On Device R1, from operational mode, run the **show ldp neighbor** and **show ldp neighbor extensive** commands to display LDP neighbor information.

```
user@R1> show ldp neighbor
```

| Address                 | Interface  | Label space ID | Hold time |
|-------------------------|------------|----------------|-----------|
| fe80::21f:1200:cb6:4c8d | ge-1/0/0.0 | 10.255.0.2:0   | 12        |
| 192.168.12.2            | ge-1/0/0.0 | 10.255.0.2:0   | 11        |

```
user@R1> show ldp neighbor extensive
```

| Address      | Interface  | Label space ID | Hold time |
|--------------|------------|----------------|-----------|
| 192.168.12.2 | ge-1/0/0.0 | 10.255.0.2:0   | 11        |

Transport address: 10.255.0.2, Transport preference: IPv6, Configuration sequence: 10  
Up for 00:04:35  
Reference count: 1  
Hold time: 15, Proposed local/peer: 15/15  
Hello flags: none  
Neighbor types: discovered

| Address                 | Interface  | Label space ID | Hold time |
|-------------------------|------------|----------------|-----------|
| fe80::21f:1200:cb6:4c8d | ge-1/0/0.0 | 10.255.0.2:0   | 14        |

Transport address: 2001:db8::2, Transport preference: IPv6, Configuration sequence: 10  
Up for 00:04:35  
Reference count: 1  
Hold time: 15, Proposed local/peer: 15/15  
Hello flags: none  
Neighbor types: discovered

**Meaning** The output shows LDP neighbor information of both IPv4 and IPv6 addresses.

### *Verifying the LDP Session Information*

**Purpose** Display the LDP session information.

**Action** On Device R1, from operational mode, run the **show ldp session** and **show ldp session extensive** commands to display LDP session information.

```
user@R1> show ldp session
```

```
session
```

| Address     | State       | Connection | Hold time | Adv. Mode |
|-------------|-------------|------------|-----------|-----------|
| 2001:db8::2 | Operational | Open       | 20        | DU        |

```
user@R1> show ldp session extensive
```

```
Address: 2001:db8::2, State: Operational, Connection: Open, Hold time: 29
```

```
Session ID: 10.255.0.1:0--10.255.0.2:0
```

```
Next keepalive in 9 seconds
```

```
Passive, Maximum PDU: 4096, Hold time: 30, Neighbor count: 1
```

```
Neighbor types: discovered
```

```
Keepalive interval: 10, Connect retry interval: 1
```

```
Local address: 2001:db8::1, Remote address: 2001:db8::2
```

```
Up for 00:05:31
```

```
Capabilities advertised: none
```

```
Capabilities received: none
```

```
Protection: disabled
```

```
Session flags: none
```

```
Local - Restart: disabled, Helper mode: enabled
```

```
Remote - Restart: disabled, Helper mode: enabled
```

```
Local maximum neighbor reconnect time: 120000 msec
```

```
Local maximum neighbor recovery time: 240000 msec
```

```
Local Label Advertisement mode: Downstream unsolicited
```

```
Remote Label Advertisement mode: Downstream unsolicited
```

```
Negotiated Label Advertisement mode: Downstream unsolicited
```

```
MTU discovery: disabled
```

```
Nonstop routing state: Not in sync
```

```
Next-hop addresses received:
```

```
10.255.0.2
```

```
192.168.12.2
```

```
2001:db8::2
```

```
fe80::21f:1200:cb6:4c8d
```

```
Queue depth: 0
```

| Message type     | Total |          | Last 5 seconds |          |
|------------------|-------|----------|----------------|----------|
|                  | Sent  | Received | Sent           | Received |
| Initialization   | 1     | 1        | 0              | 0        |
| Keepalive        | 34    | 34       | 0              | 0        |
| Notification     | 0     | 0        | 0              | 0        |
| Address          | 1     | 1        | 0              | 0        |
| Address withdraw | 0     | 0        | 0              | 0        |
| Label mapping    | 3     | 3        | 0              | 0        |
| Label request    | 0     | 0        | 0              | 0        |
| Label withdraw   | 0     | 0        | 0              | 0        |
| Label release    | 0     | 0        | 0              | 0        |
| Label abort      | 0     | 0        | 0              | 0        |

**Meaning** The output displays information for the LDP session using IPv6 as the TCP transport.

### Configure transport-preference to Select the Preferred Transport

**CLI Quick Configuration** You can configure the **transport-preference** statement to select the preferred transport for a TCP connection when both IPv4 and IPv6 are enabled. By default, IPv6 is used as TCP transport for establishing an LDP connection.

- (Optional) Configure the transport preference for an LDP connection.

```
[edit protocols ldp]
set transport-preference ipv4
```

**Results** From configuration mode, confirm your configuration by entering the **show protocols** command. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@R1# show protocols
  mpls {
    interface ge-1/0/0.0;
  }
  isis {
    interface ge-1/0/0.0;
    interface lo0.0;
  }
  ldp {
    deaggregate;
    interface ge-1/0/0.0;
    interface lo0.0;
    family {
      inet6;
      inet;
    }
    transport-preference ipv4;
  }
```

### Verification

Confirm that the configuration is working properly.

- [Verifying the LDP Neighbor Information on page 685](#)
- [Verifying the LDP Session Information on page 686](#)

#### *Verifying the LDP Neighbor Information*

**Purpose** Display the LDP neighbor information.

**Action** On Device R1, from operational mode, run the **show ldp neighbor extensive** command to display LDP neighbor information.

```
user@R1> show ldp neighbor extensive
Address                               Interface      Label space ID  Hold time
192.168.12.2                         ge-1/0/0.0    10.255.0.2:0    14
  Transport address: 10.255.0.2, Transport preference: IPv4, Configuration
sequence: 9
  Up for 00:00:14
  Reference count: 1
  Hold time: 15, Proposed local/peer: 15/15
  Hello flags: none
  Neighbor types: discovered
Address                               Interface      Label space ID  Hold time
fe80::21f:1200:cb6:4c8d              ge-1/0/0.0    10.255.0.2:0    14
  Transport address: 2001:db8::2, Transport preference: IPv4, Configuration
sequence: 9
  Up for 00:00:14
  Reference count: 1
  Hold time: 15, Proposed local/peer: 15/15
  Hello flags: none
  Neighbor types: discovered
```

**Meaning** The output shows LDP neighbor information for both the IPv4 and IPv6 addresses.

#### *Verifying the LDP Session Information*

**Purpose** Display the LDP session information.

**Action** On Device R1, from operational mode, run the **show ldp session extensive** command to display LDP session information.

```
user@R1> show ldp session extensive
Address: 10.255.0.2, State: Operational, Connection: Open, Hold time: 24
Session ID: 10.255.0.1:0--10.255.0.2:0
Next keepalive in 4 seconds
Passive, Maximum PDU: 4096, Hold time: 30, Neighbor count: 2
Neighbor types: discovered
Keepalive interval: 10, Connect retry interval: 1
Local address: 10.255.0.1, Remote address: 10.255.0.2
Up for 00:05:26
Capabilities advertised: none
Capabilities received: none
Protection: disabled
Session flags: none
Local - Restart: disabled, Helper mode: enabled
Remote - Restart: disabled, Helper mode: enabled
Local maximum neighbor reconnect time: 120000 msec
Local maximum neighbor recovery time: 240000 msec
Local Label Advertisement mode: Downstream unsolicited
Remote Label Advertisement mode: Downstream unsolicited
Negotiated Label Advertisement mode: Downstream unsolicited
MTU discovery: disabled
Nonstop routing state: Not in sync
Next-hop addresses received:
  10.255.0.2
  192.168.12.2
  2001:db8::2
  fe80::21f:1200:cb6:4c8d
Queue depth: 0
```

| Message type     | Total |          | Last 5 seconds |          |
|------------------|-------|----------|----------------|----------|
|                  | Sent  | Received | Sent           | Received |
| Initialization   | 1     | 1        | 0              | 0        |
| Keepalive        | 33    | 33       | 1              | 1        |
| Notification     | 0     | 0        | 0              | 0        |
| Address          | 2     | 2        | 0              | 0        |
| Address withdraw | 0     | 0        | 0              | 0        |
| Label mapping    | 6     | 6        | 0              | 0        |
| Label request    | 0     | 0        | 0              | 0        |
| Label withdraw   | 0     | 0        | 0              | 0        |
| Label release    | 0     | 0        | 0              | 0        |
| Label abort      | 0     | 0        | 0              | 0        |

**Meaning** The output displays information for the LDP session using IPv6 as the TCP transport.

### Configure dual-transport to Establish Separate Sessions for IPv4 with an IPv4 Neighbor and IPv6 with an IPv6 Neighbor

**Step-by-Step Procedure** You can configure the **dual-transport** statement to allow LDP to establish a separate IPv4 session with an IPv4 neighbor, and an IPv6 session with an IPv6 neighbor. This requires the configuration of **inet-lsr-id** as the LSR ID for IPv4, and **inet6-lsr-id** as the LSR ID for IPv6.

- (Optional) Configure dual-transport to allow LDP to establish the TCP connection over IPv4 with IPv4 neighbors, and over IPv6 with IPv6 neighbors as a single-stack LSR.

```
[edit protocols ldp dual-transport]
set inet-lsr-id 10.255.0.1
set inet6-lsr-id 1.1.1.1
```

**Results** From configuration mode, confirm your configuration by entering the **show protocols** command. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@R1# show protocols
mpls {
  interface ge-1/0/0.0;
}
isis {
  interface ge-1/0/0.0;
  interface lo0.0;
}
ldp {
  deaggregate;
  interface ge-1/0/0.0;
  interface lo0.0;
  family {
    inet6;
    inet;
  }
  dual-transport {
    inet-lsr-id 10.255.0.1;
    inet6-lsr-id 1.1.1.1;
  }
}
```

---

## Verification

Confirm that the configuration is working properly.

- [Verifying the LDP Neighbor Information on page 688](#)
- [Verifying the LDP Session Information on page 689](#)

### *Verifying the LDP Neighbor Information*

**Purpose** Display the LDP neighbor information.

**Action** On Device R1, from operational mode, run the **show ldp neighbor extensive** command to display LDP neighbor information.

```

user@R1> show ldp neighbor extensive
Address                               Interface      Label space ID  Hold time
192.168.12.2                          ge-1/0/0.0    10.255.0.2:0    11
  Transport address: 10.255.0.2, Configuration sequence: 10
  Up for 00:04:35
  Reference count: 1
  Hold time: 15, Proposed local/peer: 15/15
  Hello flags: none
  Neighbor types: discovered
Address                               Interface      Label space ID  Hold time
fe80::21f:1200:cb6:4c8d               ge-1/0/0.0    10.255.0.2:0    14
  Transport address: 2001:db8::2, Configuration sequence: 10
  Up for 00:04:35
  Reference count: 1
  Hold time: 15, Proposed local/peer: 15/15
  Hello flags: none
  Neighbor types: discovered

```

**Meaning** The output shows LDP neighbor information for both the IPv4 and IPv6 addresses.

#### *Verifying the LDP Session Information*

**Purpose** Display the LDP session information.

**Action** On Device R1, from operational mode, run the **show ldp session extensive** command to display LDP neighbor information.

```

user@R1> show ldp session extensive
Address: 2001:db8::2, State: Operational, Connection: Open, Hold time: 29
  Session ID: 1.1.1.1:0--10.255.0.2:0
  Next keepalive in 9 seconds
  Passive, Maximum PDU: 4096, Hold time: 30, Neighbor count: 1
  Neighbor types: discovered
  Keepalive interval: 10, Connect retry interval: 1
  Local address: 2001:db8::1, Remote address: 2001:db8::2
  Up for 00:05:31
  Capabilities advertised: none
  Capabilities received: none
  Protection: disabled
  Session flags: none
  Local - Restart: disabled, Helper mode: enabled
  Remote - Restart: disabled, Helper mode: enabled
  Local maximum neighbor reconnect time: 120000 msec
  Local maximum neighbor recovery time: 240000 msec
  Local Label Advertisement mode: Downstream unsolicited
  Remote Label Advertisement mode: Downstream unsolicited
  Negotiated Label Advertisement mode: Downstream unsolicited
  MTU discovery: disabled
  Nonstop routing state: Not in sync
  Next-hop addresses received:
    2001:db8::2
    fe80::21f:1200:cb6:4c8d
  Queue depth: 0

```

| Message type     | Total |          | Last 5 seconds |          |
|------------------|-------|----------|----------------|----------|
|                  | Sent  | Received | Sent           | Received |
| Initialization   | 1     | 1        | 0              | 0        |
| Keepalive        | 34    | 34       | 0              | 0        |
| Notification     | 0     | 0        | 0              | 0        |
| Address          | 1     | 1        | 0              | 0        |
| Address withdraw | 0     | 0        | 0              | 0        |
| Label mapping    | 3     | 3        | 0              | 0        |
| Label request    | 0     | 0        | 0              | 0        |
| Label withdraw   | 0     | 0        | 0              | 0        |
| Label release    | 0     | 0        | 0              | 0        |
| Label abort      | 0     | 0        | 0              | 0        |

```

Address: 10.255.0.2, State: Operational, Connection: Open, Hold time: 29
  Session ID: 10.255.0.1:0--10.255.0.2:0
  Next keepalive in 9 seconds
  Passive, Maximum PDU: 4096, Hold time: 30, Neighbor count: 1
  Neighbor types: discovered
  Keepalive interval: 10, Connect retry interval: 1
  Local address: 10.255.0.1, Remote address: 10.255.0.2
  Up for 00:05:31
  Capabilities advertised: none
  Capabilities received: none
  Protection: disabled
  Session flags: none
  Local - Restart: disabled, Helper mode: enabled
  Remote - Restart: disabled, Helper mode: enabled
  Local maximum neighbor reconnect time: 120000 msec
  Local maximum neighbor recovery time: 240000 msec
  Local Label Advertisement mode: Downstream unsolicited
  Remote Label Advertisement mode: Downstream unsolicited

```



```

Negotiated Label Advertisement mode: Downstream unsolicited
MTU discovery: disabled
Nonstop routing state: Not in sync
Next-hop addresses received:
  10.255.0.2
  192.168.12.2
Queue depth: 0
Message type      Total
                  Sent    Received
Initialization    1         1         0         0
Keepalive          34        34         0         0
Notification       0         0         0         0
Address            1         1         0         0
Address withdraw   0         0         0         0
Label mapping      3         3         0         0
Label request      0         0         0         0
Label withdraw     0         0         0         0
Label release      0         0         0         0
Label abort        0         0         0         0

```

#### Related Documentation

- [LDP Native IPv6 Support Overview on page 585](#)
- [Configuring LDP Native IPv6 Support on page 675](#)
- [family \(Protocols LDP\) on page 1434](#)
- [dual-transport on page 1423](#)

### Example: Configuring Multipoint LDP In-Band Signaling for Point-to-Multipoint LSPs

- [Understanding Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs on page 692](#)
- [Example: Configuring Multipoint LDP In-Band Signaling for Point-to-Multipoint LSPs on page 701](#)

## Understanding Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs

The Multipoint Label Distribution Protocol (M-LDP) for point-to-multipoint label-switched paths (LSPs) with in-band signaling is useful in a deployment with an existing IP/MPLS backbone, in which you need to carry multicast traffic, for IPTV for example.

For years, the most widely used solution for transporting multicast traffic has been to use native IP multicast in the service provider core with multipoint IP tunneling to isolate customer traffic. A multicast routing protocol, usually Protocol Independent Multicast (PIM), is deployed to set up the forwarding paths. IP multicast routing is used for forwarding, using PIM signaling in the core. For this model to work, the core network has to be multicast enabled. This allows for effective and stable deployments even in inter-autonomous system (AS) scenarios.

However, in an existing IP/MPLS network, deploying PIM might not be the first choice. Some service providers are interested in replacing IP tunneling with MPLS label encapsulation. The motivations for moving to MPLS label switching is to leverage MPLS traffic engineering and protection features and to reduce the amount of control traffic overhead in the provider core.

To do this, service providers are interested in leveraging the extension of the existing deployments to allow multicast traffic to pass through. The existing multicast extensions for IP/MPLS are point-to-multipoint extensions for RSVP-TE and point-to-multipoint and multipoint-to-multipoint extensions for LDP. These deployment scenarios are discussed in RFC 6826, *Multipoint LDP In-Band Signaling for Point-to-Multipoint and Multipoint-to-Multipoint Label Switched Paths*. This feature overview is limited to point-to-multipoint extensions for LDP.

- [How M-LDP Works on page 693](#)
- [Terminology on page 697](#)
- [Ingress Join Translation and Pseudo Interface Handling on page 698](#)
- [Ingress Splicing on page 698](#)
- [Reverse Path Forwarding on page 698](#)
- [LSP Root Detection on page 698](#)
- [Egress Join Translation and Pseudo Interface Handling on page 699](#)
- [Egress Splicing on page 699](#)
- [Supported Functionality on page 699](#)
- [Unsupported Functionality on page 700](#)
- [LDP Functionality on page 700](#)
- [Egress LER Functionality on page 700](#)
- [Transit LSR Functionality on page 701](#)
- [Ingress LER Functionality on page 701](#)


## How M-LDP Works

- [Label Bindings in M-LDP Signaling on page 693](#)
- [M-LDP in PIM-Free MPLS Core on page 693](#)
- [M-LDP in PIM-Enabled MPLS Core on page 695](#)

### Label Bindings in M-LDP Signaling

The multipoint extension to LDP uses point-to-multipoint and multipoint-to-multipoint forwarding equivalence class (FEC) elements (defined in RFC 5036, *LDP Specification*) along with capability advertisements, label mapping, and signaling procedures. The FEC elements include the idea of the LSP root, which is an IP address, and an “opaque” value, which is a selector that groups together the leaf nodes sharing the same opaque value. The opaque value is transparent to the intermediate nodes, but has meaning for the LSP root. Every LDP node advertises its local incoming label binding to the upstream LDP node on the shortest path to the root IP address found in the FEC. The upstream node receiving the label bindings creates its own local label and outgoing interfaces. This label allocation process might result in packet replication, if there are multiple outgoing branches. As shown in [Figure 68 on page 693](#), an LDP node merges the label bindings for the same opaque value if it finds downstream nodes sharing the same upstream node. This allows for effective building of point-to-multipoint LSPs and label conservation.

### Figure 68: Label Bindings in M-LDP Signaling

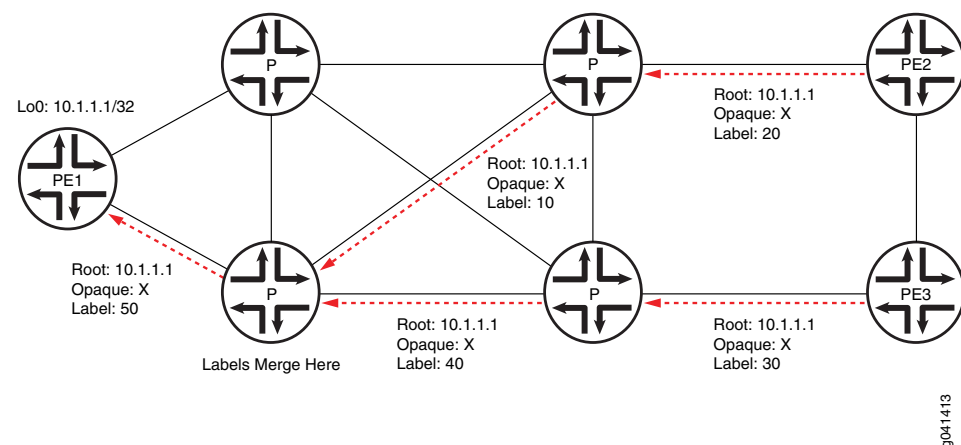


### *M-LDP in PIM-Free MPLS Core*

Figure 69 on page 694 shows a scaled-down deployment scenario. Two separate PIM domains are interconnected by a PIM-free core site. The border routers in this core site support PIM on the border interfaces. Further, these border routers collect and distribute the routing information from the adjacent sites to the core network. The edge routers in Site C run BGP for root-node discovery. Interior gateway protocol (IGP) routes cannot be used for ingress discovery because in most cases the forwarding next hop provided by the IGP would not provide information about the ingress device toward the source. M-LDP inband signaling has a one-to-one mapping between the point-to-multipoint LSP and the (S,G) flow. With in-band signaling, PIM messages are directly translated into M-LDP FEC bindings. In contrast, out-of-band signaling is based on manual

configuration. One application for M-LDP inband signaling is to carry IPTV multicast traffic in an MPLS backbone.

**Figure 69: Sample M-LDP Topology in PIM-Free MPLS Core**

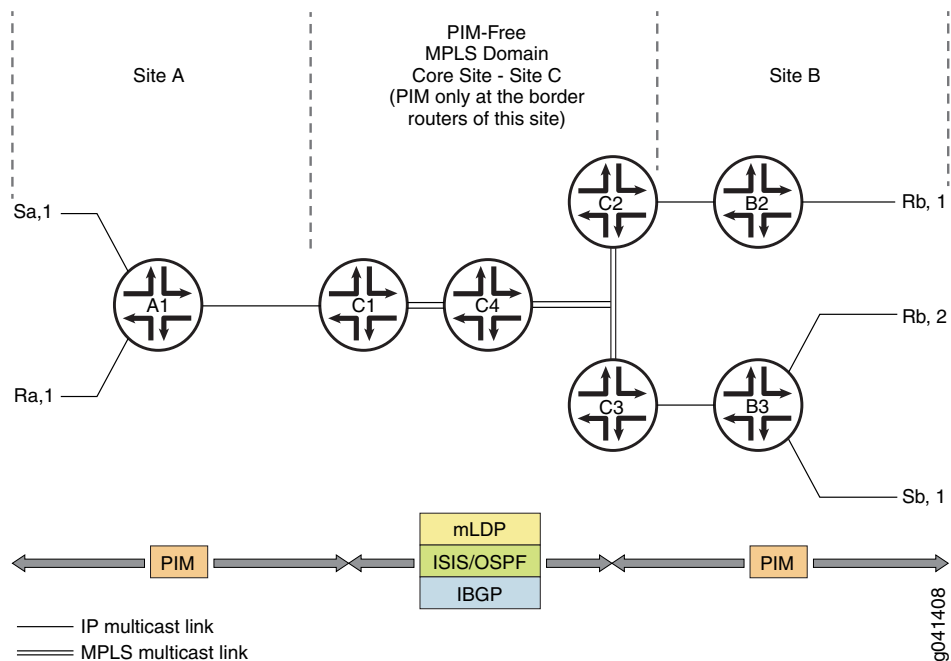

### Configuration

The configuration statement **mldp-inband-signalling** on the label-edge router (LER) enables PIM to use M-LDP in-band signaling for the upstream neighbors when the LER does not detect a PIM upstream neighbor. Static configuration of the MPLS LSP root is included in the PIM configuration, using policy. This is needed when IBGP is not available in the core site or to override IBGP-based LSP root detection.

For example:

```
protocols {
  pim {
    mldp-inband-signalling {
      policy lsp-mapping-policy-example;
    }
  }
}

policy-options {
  policy-statement lsp-mapping-policy-example {
    term channel1 {
      from {
        source-address-filter ip-prefix</prefix-length>; #policy filter for channel1
      }
      then {
        p2mp-lsp-root {
          # Statically configured ingress address of edge
          # used by channel1
        }
      }
    }
  }
}
```

```


        address ip-address;
    }
    accept;
}
}
}
}

```

### M-LDP in PIM-Enabled MPLS Core

Starting in Junos OS Release 14.1, in order to migrate existing IPTV services from native IP multicast to MPLS multicast, you need to smoothly transition from PIM to M-LDP point-to-multipoint LSPs with minimal outage. Figure 70 on page 695 shows a similar M-LDP topology as Figure 69 on page 694, but with a different scenario. The core is enabled with PIM, with one source streaming all the IPTV channels. The TV channels are sent as ASM streams with each channel identified by its group address. Previously, these channels were streamed on the core as IP streams and signaled using PIM.

Figure 70: Sample M-LDP Topology in PIM-Enabled MPLS Core

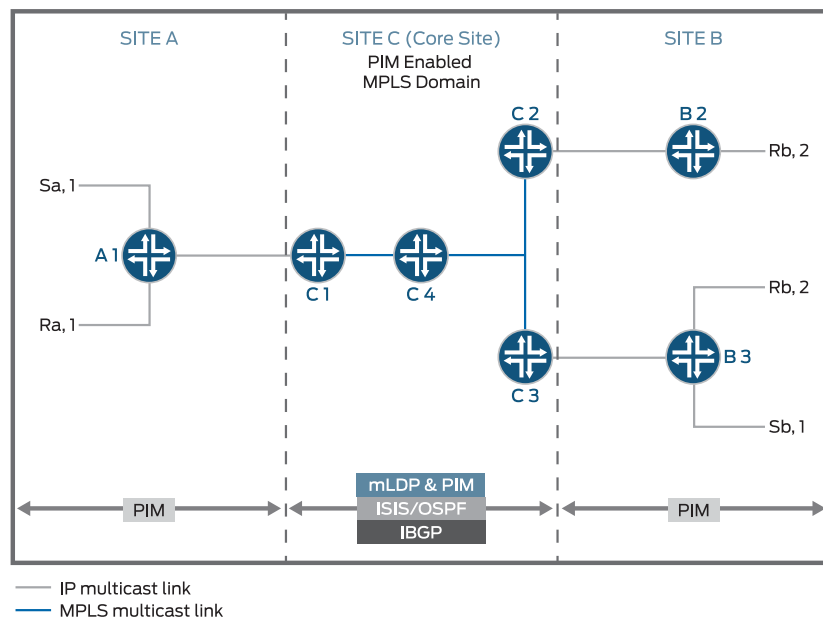

By configuring the **mldp-inband-signaling** in this scenario, M-LDP signaling is initiated only when there is no PIM neighbor towards the source. However, because there is always a PIM neighbor towards the source unless PIM is deactivated on the upstream interfaces of the egress PE, PIM takes precedence over M-LDP and M-LDP does not take effect.

### Configuration

To progressively migrate channel by channel to M-LDP MPLS core with few streams using M-LDP upstream and other streams using existing PIM upstream, include the **selected-mldp-egress** configuration statement along with group based filters in the policy filter for M-LDP inband signaling.



**NOTE:** The M-LDP inband signaling policy filter can include either the `source-address-filter` statement or the `route-filter` statement, or a combination of both.

For example:

```
protocols {
  pim {
    mldp-inband-signalling {
      policy lsp-mapping-policy-example;
    }
  }
}

policy-options {
  policy-statement lsp-mapping-policy-example {
    term channel1 {
      from {
        source-address-filter ip-prefix</prefix-length>; #policy filter for channel1
      }
      then {
        selected-mldp-egress;
        accept;
      }
    }
    term channel2 {
      from {
        source-address-filter ip-prefix</prefix-length>; #policy filter for channel2
        route-filter ip-prefix</prefix-length>; #policy filter on multicast group address
      }
      then {
        selected-mldp-egress;
        p2mp-lsp-root {
          # Statically configured ingress address of edge
          # used by channel2
          address ip-address;
        }
        accept;
      }
    }
    term channel3 {
      from {
        route-filter ip-prefix</prefix-length>; #policy filter on multicast group address
      }
      then {
        selected-mldp-egress;
        accept;
      }
    }
  }
}
```

**NOTE:**

Some of the limitations of the above configuration are as follows:

- The `selected-mldp-egress` statement should be configured only on the LER. Configuring the `selected-mldp-egress` statement on non-egress PIM routers can cause path setup failures.
- When policy changes are made to switch traffic from PIM upstream to M-LDP upstream and vice-versa, packet loss can be expected as break-and-make mechanism is performed at the control plane.

### Terminology

The following terms are important for an understanding of M-LDP in-band signaling for multicast traffic.

**Point-to-point LSP**—An LSP that has one ingress label-switched router (LSR) and one egress LSR.

**Multipoint LSP**—Either a point-to-multipoint or a multipoint-to-multipoint LSP.

**Point-to-multipoint LSP**—An LSP that has one ingress LSR and one or more egress LSRs.

**Multipoint-to-point LSP**—An LSP that has one or more ingress LSRs and one unique egress LSR.

**Multipoint-to-multipoint LSP**—An LSP that connects a set of nodes, such that traffic sent by any node in the LSP is delivered to all others.

**Ingress LSR**—An ingress LSR for a particular LSP is an LSR that can send a data packet along the LSP. Multipoint-to-multipoint LSPs can have multiple ingress LSRs. Point-to-multipoint LSPs have only one, and that node is often referred to as the root node.

**Egress LSR**—An egress LSR for a particular LSP is an LSR that can remove a data packet from that LSP for further processing. Point-to-point and multipoint-to-point LSPs have only a single egress node. Point-to-multipoint and multipoint-to-multipoint LSPs can have multiple egress nodes.

**Transit LSR**—An LSR that has reachability to the root of the multipoint LSP through a directly connected upstream LSR and one or more directly connected downstream LSRs.

**Bud LSR**—An LSR that is an egress but also has one or more directly connected downstream LSRs.

**Leaf node**—Either an egress or bud LSR in the context of a point-to-multipoint LSP. In the context of a multipoint-to-multipoint LSP, an LSR is both ingress and egress for the same multipoint-to-multipoint LSP and can also be a bud LSR.

### Ingress Join Translation and Pseudo Interface Handling

---

At the ingress LER, LDP notifies PIM about the (S,G) messages that are received over the in-band signaling. PIM associates each (S,G) message with a pseudo interface. Subsequently, a shortest-path-tree (SPT) join message is initiated toward the source. PIM treats this as a new type of local receiver. When the LSP is torn down, PIM removes this local receiver based on notification from LDP.

### Ingress Splicing

---

LDP provides PIM with a next hop to be associated with each (S,G) entry. PIM installs a PIM (S,G) multicast route with the LDP next hop and other PIM receivers. The next hop is a composite next hop of local receivers + the list of PIM downstream neighbors + a sub-level next hop for the LDP tunnel.

### Reverse Path Forwarding

---

PIM's reverse-path-forwarding (RPF) calculation is performed at the egress node.

PIM performs M-LDP in-band signaling when all of the following conditions are true:

- There are no PIM neighbors toward the source.
- The M-LDP in-band signaling statement is configured.
- The next hop is learned through BGP, or is present in the static mapping (specified in an M-LDP in-band signaling policy).

Otherwise, if LSP root detection fails, PIM retains the (S,G) entry with an RPF state of unresolved.

PIM RPF registers this source address each time unicast routing information changes. Therefore, if the route toward the source changes, the RPF recalculation recurs. BGP protocol next hops toward the source too are monitored for changes in the LSP root. Such changes might cause traffic disruption for short durations.

### LSP Root Detection

---

If the RPF operation detects the need for M-LDP in-band signaling upstream, the LSP root (ingress) is detected. This root is a parameter for LDP LSP signaling.

The root node is detected as follows:

1. If the existing static configuration specifies the source address, the root is taken as given in configuration.
2. A lookup is performed in the unicast routing table. If the source address is found, the protocol next hop toward the source is used as the LSP root.

Prior to Junos OS Release 16.1, M-LDP point-to-multipoint LSP is signaled from an egress to ingress using the root address of the ingress LSR. This root address is reachable through IGP only, thereby confining the M-LDP point-to-multipoint LSP to a single autonomous system. If the root address is not reachable through an IGP, but reachable through BGP, and if that BGP route is recursively resolved over an MPLS



LSP, then the point-to-multipoint LSP is not signaled further from that point towards the ingress LSR root address.

There is a need for these non-segmented point-to-multipoint LSPs to be signaled across multiple autonomous systems, which can be used for the following applications:

- Inter-AS MVPN with non-segmented point-to-multipoint LSPs.
- Inter-AS M-LDP inband signaling between client networks connected by an MPLS core network.
- Inter-area MVPN or M-LDP inband signaling with non-segmented point-to-multipoint LSPs (seamless MPLS multicast).

Starting from Junos OS Release 16.1, M-LDP can signal point-to-multipoint LSPs at ASBR or transit or egress when root address is a BGP route which is further recursively resolved over an MPLS LSP.

---

### Egress Join Translation and Pseudo Interface Handling

At the egress LER, PIM notifies LDP of the (S,G) message to be signaled along with the LSP root. PIM creates a pseudo interface as the upstream interface for this (S,G) message. When an (S,G) prune message is received, this association is removed.

---

### Egress Splicing

At the egress node of the core network, where the (S,G) join message from the downstream site is received, this join message is translated to M-LDP in-band signaling parameters and LDP is notified. Further, LSP teardown occurs when the (S,G) entry is lost, when the LSP root changes, or when the (S,G) entry is reachable over a PIM neighbor.

---

### Supported Functionality

For M-LDP in-band signaling, Junos OS supports the following functionality:

- Egress splicing of the PIM next hop with the LDP route
- Ingress splicing of the PIM route with the LDP next hop
- Translation of PIM join messages to LDP point-to-multipoint LSP setup parameters
- Translation of M-LDP in-band LSP parameters to set up PIM join messages
- Statically configured and BGP protocol next hop-based LSP root detection
- PIM (S,G) states in the PIM source-specific multicast (SSM) and anysource multicast (ASM) ranges
- Configuration statements on ingress and egress LERs to enable them to act as edge routers
- IGMP join messages on LERs
- Carrying IPv6 source and group address as opaque information toward an IPv4 root node
- Static configuration to map an IPv6 (S,G) to an IPv4 root address

### Unsupported Functionality

---

For M-LDP in-band signaling, Junos OS does *not* support the following functionality:

- Full support for PIM ASM
- The **mpls lsp point-to-multipoint ping** command with an (S,G) option
- Nonstop active routing (NSR)
- Make-before-break (MBB) for PIM
- IPv6 LSP root addresses (LDP does not support IPv6 LSPs.)
- Neighbor relationship between PIM speakers that are not directly connected
- Graceful restart
- PIM dense mode
- PIM bidirectional mode

### LDP Functionality

---

The PIM (S,G) information is carried as M-LDP opaque type-length-value (TLV) encodings. The point-to-multipoint FEC element consists of the root-node address. In the case of next-generation multicast VPNs (NGEN MVPNs), the point-to-multipoint LSP is identified by the root node address and the LSP ID.

### Egress LER Functionality

---

On the egress LER, PIM triggers LDP with the following information to create a point-to-multipoint LSP:

- Root node
- (S,G)
- Next hop

PIM finds the root node based on the source of the multicast tree. If the root address is configured for this (S,G) entry, the configured address is used as the point-to-multipoint LSP root. Otherwise, the routing table is used to look up the route to the source. If the route to the source of the multicast tree is a BGP-learned route, PIM retrieves the BGP next hop address and uses it as the root node for the point-to-multipoint LSP.

LDP finds the upstream node based on the root node, allocates a label, and sends the label mapping to the upstream node. LDP does not use penultimate hop popping (PHP) for in-band M-LDP signaling.

If the root addresses for the source of the multicast tree changes, PIM deletes the point-to-multipoint LSP and triggers LDP to create a new point-to-multipoint LSP. When this happens, the outgoing interface list becomes NULL, PIM triggers LDP to delete the point-to-multipoint LSP, and LDP sends a label withdraw message to the upstream node.

### Transit LSR Functionality

The transit LSR advertises a label to the upstream LSR toward the source of the point-to-multipoint FEC and installs the necessary forwarding state to forward the packets. The transit LSR can be any M-LDP capable router.

### Ingress LER Functionality

On the ingress LER, LDP provides the following information to PIM upon receiving the label mapping:

- (S,G)
- Flood next hop

Then PIM installs the forwarding state. If the new branches are added or deleted, the flood next hop is updated accordingly. If all branches are deleted due to a label being withdrawn, LDP sends updated information to PIM. If there are multiple links between the upstream and downstream neighbors, the point-to-multipoint LSP is not load balanced.

## Example: Configuring Multipoint LDP In-Band Signaling for Point-to-Multipoint LSPs

This example shows how to configure multipoint LDP (M-LDP) in-band signaling for multicast traffic, as an extension to the Protocol Independent Multicast (PIM) protocol or as a substitute for PIM.

- [Requirements on page 701](#)
- [Overview on page 702](#)
- [Configuration on page 702](#)
- [Verification on page 711](#)

### Requirements

This example can be configured using the following hardware and software components:

- Junos OS Release 13.2 or later
- MX Series 3D Universal Edge Routers or M Series Multiservice Edge Routers for the Provider Edge (PE) Routers
- PTX Series Packet Transport Routers acting as transit label-switched routers
- T Series Core Routers for the Core Routers




**NOTE:** The PE routers could also be T Series Core Routers but that is not typical. Depending on your scaling requirements, the core routers could also be MX Series 3D Universal Edge Routers or M Series Multiservice Edge Routers. The Customer Edge (CE) devices could be other routers or switches from Juniper Networks or another vendor.

No special configuration beyond device initialization is required before configuring this example.

### Overview

"CLI Quick Configuration" on page 702 shows the configuration for all of the devices in Figure 71 on page 702. The section "Step-by-Step Procedure" on page 706 describes the steps on Device EgressPE.

Figure 71: M-LDP In-Band Signaling for Point-to-Multipoint LSPs Example Topology

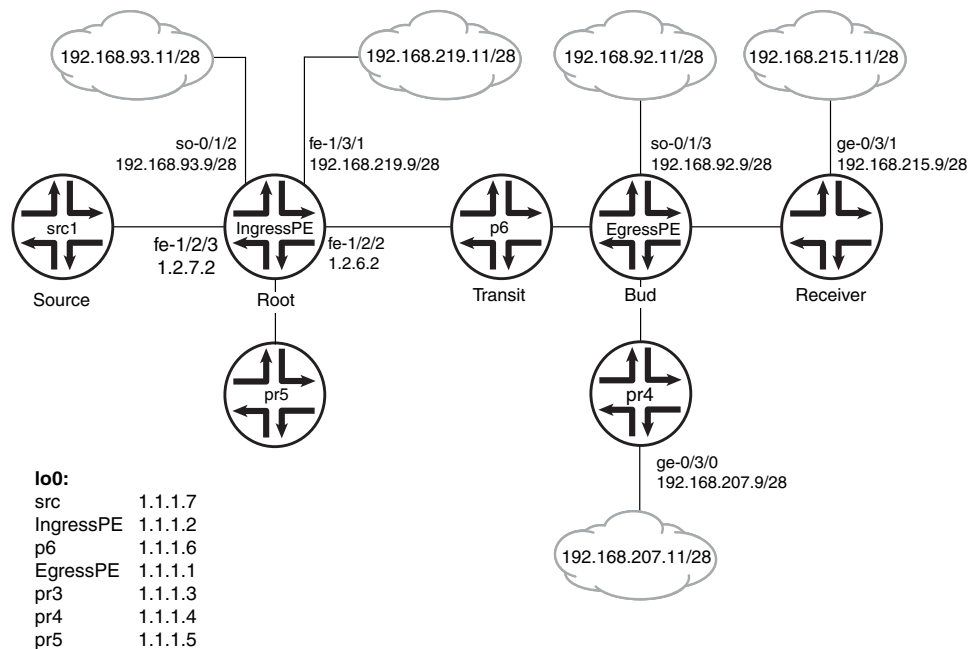

### Configuration

#### CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

#### Device src1

```
set logical-systems src1 interfaces fe-1/2/0 unit 0 family inet address 1.2.7.7/24
set logical-systems src1 interfaces lo0 unit 0 family inet address 1.1.1.7/32
set logical-systems src1 protocols ospf area 0.0.0.0 interface all
```

#### Device IngressPE

```
set interfaces so-0/1/2 unit 0 family inet address 192.168.93.9/28
set interfaces fe-1/2/0 unit 0 family inet address 1.2.3.2/24
set interfaces fe-1/2/0 unit 0 family mpls
set interfaces fe-1/2/1 unit 0 family inet address 1.2.5.2/24
set interfaces fe-1/2/2 unit 0 family inet address 1.2.6.2/24
set interfaces fe-1/2/2 unit 0 family mpls
set interfaces fe-1/2/3 unit 0 family inet address 1.2.7.2/24
set interfaces fe-1/3/1 unit 0 family inet address 192.168.219.9/28
set interfaces lo0 unit 0 family inet address 1.1.1.2/32
```

```

set protocols igmp interface fe-1/2/1.0 version 3
set protocols igmp interface fe-1/2/1.0 static group 232.1.1.1 source 192.168.219.11
set protocols bgp group ibgp type internal
set protocols bgp group ibgp local-address 1.1.1.2
set protocols bgp group ibgp family inet any
set protocols bgp group ibgp family inet-vpn any
set protocols bgp group ibgp neighbor 1.1.1.3
set protocols bgp group ibgp neighbor 1.1.1.4
set protocols bgp group ibgp neighbor 1.1.1.1
set protocols ospf area 0.0.0.0 interface all
set protocols ldp interface fe-1/2/0.0
set protocols ldp interface fe-1/2/2.0
set protocols ldp interface lo0.0
set protocols ldp p2mp
set protocols pim mldp-inband-signalling policy mldppim-ex
set protocols pim rp static address 1.1.1.5
set protocols pim interface fe-1/3/1.0
set protocols pim interface lo0.0
set protocols pim interface fe-1/2/0.21
set protocols pim interface fe-1/2/3.0
set protocols pim interface fe-1/2/1.0
set protocols pim interface so-0/1/2.0
set policy-options policy-statement mldppim-ex term B from source-address-filter
  192.168.0.0/24 orlonger
set policy-options policy-statement mldppim-ex term B from source-address-filter
  192.168.219.11/32 orlonger
set policy-options policy-statement mldppim-ex term B then accept
set policy-options policy-statement mldppim-ex term A from source-address-filter
  1.1.1.7/32 orlonger
set policy-options policy-statement mldppim-ex term A from source-address-filter
  1.2.7.0/24 orlonger
set policy-options policy-statement mldppim-ex term A then accept
set routing-options autonomous-system 64510

```

#### Device EgressPE

```

set interfaces so-0/1/3 unit 0 point-to-point
set interfaces so-0/1/3 unit 0 family inet address 192.168.92.9/28
set interfaces fe-1/2/0 unit 0 family inet address 1.1.3.1/24
set interfaces fe-1/2/0 unit 0 family mpls
set interfaces fe-1/2/1 unit 0 family inet address 1.1.4.1/24
set interfaces fe-1/2/2 unit 0 family inet address 1.1.6.1/24
set interfaces fe-1/2/2 unit 0 family mpls
set interfaces fe-1/3/0 unit 0 family inet address 192.168.209.9/28
set interfaces lo0 unit 0 family inet address 1.1.1.1/32
set routing-options autonomous-system 64510
set protocols igmp interface fe-1/3/0.0 version 3
set protocols igmp interface fe-1/3/0.0 static group 232.1.1.1 group-count 3
set protocols igmp interface fe-1/3/0.0 static group 232.1.1.1 source 192.168.219.11
set protocols igmp interface fe-1/3/0.0 static group 227.1.1.1
set protocols igmp interface so-0/1/3.0 version 3
set protocols igmp interface so-0/1/3.0 static group 232.1.1.1 group-count 2
set protocols igmp interface so-0/1/3.0 static group 232.1.1.1 source 192.168.219.11
set protocols igmp interface so-0/1/3.0 static group 232.2.2.2 source 1.2.7.7
set protocols mpls interface fe-1/2/0.0
set protocols mpls interface fe-1/2/2.0
set protocols bgp group ibgp type internal
set protocols bgp group ibgp local-address 1.1.1.1

```

```
set protocols bgp group ibgp family inet any
set protocols bgp group ibgp neighbor 1.1.1.2
set protocols msdp local-address 1.1.1.1
set protocols msdp peer 1.1.1.5
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface fxp0.0 disable
set protocols ldp interface fe-1/2/0.0
set protocols ldp interface fe-1/2/2.0
set protocols ldp interface lo0.0
set protocols ldp p2mp
set protocols pim mldp-inband-signalling policy mldppim-ex
set protocols pim rp local address 1.1.1.1
set protocols pim rp local group-ranges 227.0.0.0/8
set protocols pim rp static address 1.1.1.4
set protocols pim rp static address 1.2.7.7 group-ranges 226.0.0.0/8
set protocols pim interface lo0.0
set protocols pim interface fe-1/3/0.0
set protocols pim interface fe-1/2/0.0
set protocols pim interface fe-1/2/1.0
set protocols pim interface so-0/1/3.0
set policy-options policy-statement mldppim-ex term B from source-address-filter
  192.168.0.0/24 orlonger
set policy-options policy-statement mldppim-ex term B from source-address-filter
  192.168.219.11/32 orlonger
set policy-options policy-statement mldppim-ex term B then p2mp-lsp-root address
  1.1.1.2
set policy-options policy-statement mldppim-ex term B then accept
set policy-options policy-statement mldppim-ex term A from source-address-filter
  1.2.7.0/24 orlonger
set policy-options policy-statement mldppim-ex term A then accept
```

Device p6

```
set interfaces fe-1/2/0 unit 0 family inet address 1.1.6.6/24
set interfaces fe-1/2/0 unit 0 family mpls
set interfaces fe-1/2/1 unit 0 family inet address 1.2.6.6/24
set interfaces fe-1/2/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 1.1.1.6/32
set interfaces lo0 unit 0 family mpls
set protocols ospf area 0.0.0.0 interface all
set protocols ldp interface fe-1/2/0.0
set protocols ldp interface fe-1/2/1.0
set protocols ldp interface lo0.0
set protocols ldp p2mp
```

Device pr3

```
set interfaces ge-0/3/1 unit 0 family inet address 192.168.215.9/28
set interfaces fe-1/2/0 unit 0 family inet address 1.1.3.3/24
set interfaces fe-1/2/0 unit 0 family mpls
set interfaces fe-1/2/1 unit 0 family inet address 1.2.3.3/24
set interfaces fe-1/2/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 1.1.1.3/32
set protocols igmp interface ge-0/3/1.0 version 3
set protocols igmp interface ge-0/3/1.0 static group 232.1.1.2 source 192.168.219.11
set protocols igmp interface ge-0/3/1.0 static group 232.2.2.2 source 1.2.7.7
set protocols bgp group ibgp local-address 1.1.1.3
set protocols bgp group ibgp type internal
set protocols bgp group ibgp neighbor 1.1.1.2
```

```

set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface fe-1/2/1.0 metric 2
set protocols ldp interface fe-1/2/0.0
set protocols ldp interface fe-1/2/1.0
set protocols ldp interface lo0.0
set protocols ldp p2mp
set protocols pim mldp-inband-signalling policy mldppim-ex
set protocols pim interface fe-0/3/1.0
set protocols pim interface lo0.0
set policy-options policy-statement mldppim-ex term B from source-address-filter
  192.168.0.0/24 orlonger
set policy-options policy-statement mldppim-ex term B from source-address-filter
  192.168.219.11/32 orlonger
set policy-options policy-statement mldppim-ex term B then p2mp-lsp-root address
  1.1.1.2
set policy-options policy-statement mldppim-ex term B then accept
set policy-options policy-statement mldppim-ex term B from source-address-filter
  192.168.0.0/24 orlonger
set policy-options policy-statement mldppim-ex term B from source-address-filter
  192.168.219.11/32 orlonger
set policy-options policy-statement mldppim-ex term B from source-address-filter
  1.2.7.7/32 orlonger
set policy-options policy-statement mldppim-ex term B then p2mp-lsp-root address
  1.1.1.2
set policy-options policy-statement mldppim-ex term B then accept
set routing-options autonomous-system 64510

```

Device pr4

```

set interfaces ge-0/3/0 unit 0 family inet address 192.168.207.9/28
set interfaces fe-1/2/0 unit 0 family inet address 1.1.4.4/24
set interfaces fe-1/2/0 unit 0 family iso
set interfaces lo0 unit 0 family inet address 1.1.1.4/32
set protocols igmp interface ge-0/3/0.0 version 3
set protocols igmp interface ge-0/3/0.0 static group 232.1.1.2 source 192.168.219.11
set protocols igmp interface ge-0/3/0.0 static group 225.1.1.1
set protocols bgp group ibgp local-address 1.1.1.4
set protocols bgp group ibgp type internal
set protocols bgp group ibgp neighbor 1.1.1.2
set protocols msdp local-address 1.1.1.4
set protocols msdp peer 1.1.1.5
set protocols ospf area 0.0.0.0 interface all
set protocols pim rp local address 1.1.1.4
set protocols pim interface ge-0/3/0.0
set protocols pim interface lo0.0
set protocols pim interface fe-1/2/0.0
set routing-options autonomous-system 64510

```

Device pr5

```

set interfaces fe-1/2/0 unit 0 family inet address 1.2.5.5/24
set interfaces lo0 unit 0 family inet address 1.1.1.5/24
set protocols igmp interface lo0.0 version 3
set protocols igmp interface lo0.0 static group 232.1.1.1 source 192.168.219.11
set protocols msdp local-address 1.1.1.5
set protocols msdp peer 1.1.1.4
set protocols msdp peer 1.1.1.1
set protocols ospf area 0.0.0.0 interface all
set protocols pim rp local address 1.1.1.5

```

**set protocols pim interface all**

**Step-by-Step Procedure** The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure Device EgressPE:

1. Configure the interfaces.

Enable MPLS on the core-facing interfaces. On the egress next hops, you do not need to enable MPLS.

```
[edit interfaces]
```

```
user@EgressPE# set fe-1/2/0 unit 0 family inet address 1.1.3.1/24
```

```
user@EgressPE# set fe-1/2/0 unit 0 family mpls
```

```
user@EgressPE# set fe-1/2/2 unit 0 family inet address 1.1.6.1/24
```

```
user@EgressPE# set fe-1/2/2 unit 0 family mpls
```

```
user@EgressPE# set so-0/1/3 unit 0 point-to-point
```

```
user@EgressPE# set so-0/1/3 unit 0 family inet address 192.168.92.9/28
```

```
user@EgressPE# set fe-1/2/1 unit 0 family inet address 1.1.4.1/24
```

```
user@EgressPE# set fe-1/3/0 unit 0 family inet address 192.168.209.9/28
```

```
user@EgressPE# set lo0 unit 0 family inet address 1.1.1.1/32
```

2. Configure IGMP on the egress interfaces.

For testing purposes, this example includes static group and source addresses.

```
[edit protocols igmp]
```

```
user@EgressPE# set interface fe-1/3/0.0 version 3
```

```
user@EgressPE# set interface fe-1/3/0.0 static group 232.1.1.1 group-count 3
```

```
user@EgressPE# set interface fe-1/3/0.0 static group 232.1.1.1 source 192.168.219.11
```

```
user@EgressPE# set interface fe-1/3/0.0 static group 227.1.1.1
```

```
user@EgressPE# set interface so-0/1/3.0 version 3
```

```
user@EgressPE# set interface so-0/1/3.0 static group 232.1.1.1 group-count 2
```

```
user@EgressPE# set interface so-0/1/3.0 static group 232.1.1.1 source 192.168.219.11
```

```
user@EgressPE# set interface so-0/1/3.0 static group 232.2.2.2 source 1.2.7.7
```

3. Configure MPLS on the core-facing interfaces.

```
[edit protocols mpls]
```

```
user@EgressPE# set interface fe-1/2/0.0
```

```
user@EgressPE# set interface fe-1/2/2.0
```

4. Configure BGP.

BGP is a policy-driven protocol, so also configure and apply any needed routing policies.

For example, you might want to export static routes into BGP.

```
[edit protocols bgp group ibgp]
```



- ```

user@EgressPE# set type internal
user@EgressPE# set local-address 1.1.1.1
user@EgressPE# set family inet any
user@EgressPE# set neighbor 1.1.1.2

```
5. (Optional) Configure an MSDP peer connection with Device pr5 in order to interconnect the disparate PIM domains, thus enabling redundant RPs.
 

```

[edit protocols msdp]
user@EgressPE# set local-address 1.1.1.1
user@EgressPE# set peer 1.1.1.5

```
  6. Configure OSPF.
 

```

[edit protocols ospf area 0.0.0.0]
user@EgressPE# set interface all
user@EgressPE# set interface fxp0.0 disable

```
  7. Configure LDP on the core-facing interfaces and on the loopback interface.
 

```

[edit protocols ldp]
user@EgressPE# set interface fe-1/2/0.0
user@EgressPE# set interface fe-1/2/2.0
user@EgressPE# set interface lo0.0

```
  8. Enable point-to-multipoint MPLS LSPs.
 

```

[edit protocols ldp]
user@EgressPE# set p2mp

```
  9. Configure PIM on the downstream interfaces.
 

```

[edit protocols pim]
user@EgressPE# set interface lo0.0
user@EgressPE# set interface fe-1/3/0.0
user@EgressPE# set interface fe-1/2/1.0
user@EgressPE# set interface so-0/1/3.0

```
  10. Configure the RP settings because this device serves as the PIM rendezvous point (RP).
 

```

[edit protocols pim]
user@EgressPE# set rp local address 1.1.1.1
user@EgressPE# set rp local group-ranges 227.0.0.0/8
user@EgressPE# set rp static address 1.1.1.4
user@EgressPE# set rp static address 1.2.7.7 group-ranges 226.0.0.0/8

```
  11. Enable M-LDP in-band signaling and set the associated policy.
 

```

[edit protocols pim]
user@EgressPE# set mldp-inband-signalling policy mldppim-ex

```
  12. Configure the routing policy that specifies the root address for the point-to-multipoint LSP and the associated source addresses.
 

```

[edit policy-options policy-statement mldppim-ex]
user@EgressPE# set term B from source-address-filter 192.168.0.0/24 orlonger
user@EgressPE# set term B from source-address-filter 192.168.219.11/32 orlonger
user@EgressPE# set term B then p2mp-lsp-root address 1.1.1.2
user@EgressPE# set term B then accept

```

```
user@EgressPE# set term A from source-address-filter 1.2.7.0/24 orlonger
user@EgressPE# set term A then accept
```

13. Configure the autonomous system (AS) ID.

```
[edit routing-options]
user@EgressPE# set autonomous-system 64510
```

**Results** From configuration mode, confirm your configuration by entering the **show interfaces**, **show protocols**, **show policy-options**, and **show routing-options** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
Device EgressPE user@EgressPE# show interfaces
so-0/1/3 {
  unit 0 {
    point-to-point;
    family inet {
      address 192.168.92.9/28;
    }
  }
}
fe-1/2/0 {
  unit 0 {
    family inet {
      address 1.1.3.1/24;
    }
    family mpls;
  }
}
fe-1/2/1 {
  unit 0 {
    family inet {
      address 1.1.4.1/24;
    }
  }
}
fe-1/2/2 {
  unit 0 {
    family inet {
      address 1.1.6.1/24;
    }
    family mpls;
  }
}
fe-1/3/0 {
  unit 0 {
    family inet {
      address 192.168.209.9/28;
    }
  }
}
lo0 {
  unit 0 {
    family inet {
      address 1.1.1.1/32;
    }
  }
}
```

```

    }
  }
}

user@EgressPE# show protocols
igmp {
  interface fe-1/3/0.0 {
    version 3;
    static {
      group 232.1.1.1 {
        group-count 3;
        source 192.168.219.11;
      }
      group 227.1.1.1;
    }
  }
  interface so-0/1/3.0 {
    version 3;
    static {
      group 232.1.1.1 {
        group-count 2;
        source 192.168.219.11;
      }
      group 232.2.2.2 {
        source 1.2.7.7;
      }
    }
  }
}
mpls {
  interface fe-1/2/0.0;
  interface fe-1/2/2.0;
}
bgp {
  group ibgp {
    type internal;
    local-address 1.1.1.1;
    family inet {
      any;
    }
    neighbor 1.1.1.2;
  }
}
msdp {
  local-address 1.1.1.1;
  peer 1.1.1.5;
}
ospf {
  area 0.0.0.0 {
    interface all;
    interface fxp0.0 {
      disable;
    }
  }
}
ldp {

```

```
interface fe-1/2/0.0;
interface fe-1/2/2.0;
interface lo0.0;
p2mp;
}
pim {
  mldp-inband-signalling {
    policy mldppim-ex;
  }
  rp {
    local {
      address 1.1.1.1;
      group-ranges {
        227.0.0.0/8;
      }
    }
    static {
      address 1.1.1.4;
      address 1.2.7.7 {
        group-ranges {
          226.0.0.0/8;
        }
      }
    }
  }
}
interface lo0.0;
interface fe-1/3/0.0;
interface fe-1/2/0.0;
interface fe-1/2/1.0;
interface so-0/1/3.0;
}

user@EgressPE# show policy-options
policy-statement mldppim-ex {
  term B {
    from {
      source-address-filter 192.168.0.0/24 orlonger;
      source-address-filter 192.168.219.11/32 orlonger;
    }
    then {
      p2mp-lsp-root {
        address 1.1.1.2;
      }
      accept;
    }
  }
  term A {
    from {
      source-address-filter 1.2.7.0/24 orlonger;
    }
    then accept;
  }
}

user@EgressPE# show routing-options
autonomous-system 64510;
```

Similarly, configure the other egress devices.

If you are done configuring the devices, enter **commit** from configuration mode.

### Verification

Confirm that the configuration is working properly.

- [Checking the PIM Join States on page 711](#)
- [Checking the PIM Sources on page 714](#)
- [Checking the LDP Database on page 717](#)
- [Looking Up the Route Information for the MPLS Label on page 720](#)
- [Checking the LDP Traffic Statistics on page 721](#)

#### *Checking the PIM Join States*

**Purpose** Display information about PIM join states to verify the M-LDP in-band upstream and downstream details. On the ingress device, the **show pim join extensive** command displays **Pseudo-MLDP** for the downstream interface. On the egress, the **show pim join extensive** command displays **Pseudo-MLDP** for the upstream interface.

**Action** From operational mode, enter the **show pim join extensive** command.

```
user@IngressPE> show pim join extensive
```

```
Instance: PIM.master Family: INET
R = Rendezvous Point Tree, S = Sparse, W = Wildcard

Group: 232.1.1.1
  Source: 192.168.219.11
  Flags: sparse,spt
  Upstream interface: fe-1/3/1.0
  Upstream neighbor: Direct
  Upstream state: Local Source
  Keepalive timeout:
  Uptime: 1d 23:00:12
  Downstream neighbors:
    Interface: Pseudo-MLDP
    Interface: fe-1/2/1.0
      1.2.5.2 State: Join Flags: S   Timeout: Infinity
      Uptime: 1d 23:00:12 Time since last Join: 1d 23:00:12
```

```
Group: 232.1.1.2
  Source: 192.168.219.11
  Flags: sparse,spt
  Upstream interface: fe-1/3/1.0
  Upstream neighbor: Direct
  Upstream state: Local Source
  Keepalive timeout:
  Uptime: 1d 22:59:59
  Downstream neighbors:
    Interface: Pseudo-MLDP
```

```
Group: 232.1.1.3
  Source: 192.168.219.11
  Flags: sparse,spt
```

```
Upstream interface: fe-1/3/1.0
Upstream neighbor: Direct
Upstream state: Local Source
Keepalive timeout:
Uptime: 1d 22:07:31
Downstream neighbors:
  Interface: Pseudo-MLDP
```

```
Group: 232.2.2.2
Source: 1.2.7.7
Flags: sparse,spt
Upstream interface: fe-1/2/3.0
Upstream neighbor: Direct
Upstream state: Local Source
Keepalive timeout:
Uptime: 1d 22:59:59
Downstream neighbors:
  Interface: Pseudo-MLDP
```

```
user@EgressPE> show pim join extensive
```

```
Instance: PIM.master Family: INET
R = Rendezvous Point Tree, S = Sparse, W = Wildcard
```

```
Group: 227.1.1.1
Source: *
RP: 1.1.1.1
Flags: sparse,rptree,wildcard
Upstream interface: Local
Upstream neighbor: Local
Upstream state: Local RP
Uptime: 1d 23:14:21
Downstream neighbors:
  Interface: fe-1/3/0.0
    192.168.209.9 State: Join Flags: SRW Timeout: Infinity
    Uptime: 1d 23:14:21 Time since last Join: 1d 20:12:35
```

```
Group: 232.1.1.1
Source: 192.168.219.11
Flags: sparse,spt
Upstream protocol: MLDP
Upstream interface: Pseudo MLDP
Upstream neighbor: MLDP LSP root <1.1.1.2>
Upstream state: Join to Source
Keepalive timeout:
Uptime: 1d 23:14:22
Downstream neighbors:
  Interface: so-0/1/3.0
    192.168.92.9 State: Join Flags: S Timeout: Infinity
    Uptime: 1d 20:12:35 Time since last Join: 1d 20:12:35
  Downstream neighbors:
    Interface: fe-1/3/0.0
      192.168.209.9 State: Join Flags: S Timeout: Infinity
      Uptime: 1d 20:12:35 Time since last Join: 1d 20:12:35
```

```
Group: 232.1.1.2
Source: 192.168.219.11
Flags: sparse,spt
Upstream protocol: MLDP
Upstream interface: Pseudo MLDP
Upstream neighbor: MLDP LSP root <1.1.1.2>
```

```

Upstream state: Join to Source
Keepalive timeout:
Uptime: 1d 23:14:22
Downstream neighbors:
  Interface: so-0/1/3.0
    192.168.92.9 State: Join Flags: S   Timeout: Infinity
    Uptime: 1d 20:12:35 Time since last Join: 1d 20:12:35
Downstream neighbors:
  Interface: fe-1/2/1.0
    1.1.4.4 State: Join Flags: S Timeout: 198
    Uptime: 1d 22:59:59 Time since last Join: 00:00:12
Downstream neighbors:
  Interface: fe-1/3/0.0
    192.168.209.9 State: Join Flags: S   Timeout: Infinity
    Uptime: 1d 20:12:35 Time since last Join: 1d 20:12:35

Group: 232.1.1.3
Source: 192.168.219.11
Flags: sparse,spt
Upstream protocol: MLDP
Upstream interface: Pseudo MLDP
Upstream neighbor: MLDP LSP root <1.1.1.2>
Upstream state: Join to Source
Keepalive timeout:
Uptime: 1d 20:12:35
Downstream neighbors:
  Interface: fe-1/3/0.0
    192.168.209.9 State: Join Flags: S   Timeout: Infinity
    Uptime: 1d 20:12:35 Time since last Join: 1d 20:12:35

Group: 232.2.2.2
Source: 1.2.7.7
Flags: sparse,spt
Upstream protocol: MLDP
Upstream interface: Pseudo MLDP
Upstream neighbor: MLDP LSP root <1.1.1.2>
Upstream state: Join to Source
Keepalive timeout:
Uptime: 1d 20:12:35
Downstream neighbors:
  Interface: so-0/1/3.0
    192.168.92.9 State: Join Flags: S   Timeout: Infinity
    Uptime: 1d 20:12:35 Time since last Join: 1d 20:12:35

user@pr3> show pim join extensive

Instance: PIM.master Family: INET
R = Rendezvous Point Tree, S = Sparse, W = Wildcard

Group: 232.1.1.2
Source: 192.168.219.11
Flags: sparse,spt
Upstream protocol: MLDP
Upstream interface: Pseudo MLDP
Upstream neighbor: MLDP LSP root <1.1.1.2>
Upstream state: Join to Source
Keepalive timeout:
Uptime: 1d 20:14:40
Downstream neighbors:
  Interface: Pseudo-GMP
    ge-0/3/1.0

```

```
Group: 232.2.2.2
Source: 1.2.7.7
Flags: sparse,spt
Upstream protocol: MLDP
Upstream interface: Pseudo MLDP
Upstream neighbor: MLDP LSP root <1.1.1.2>
Upstream state: Join to Source
Keepalive timeout:
Uptime: 1d 20:14:40
Downstream neighbors:
  Interface: Pseudo-GMP
    ge-0/3/1.0
```

```
user@pr4> show pim join extensive
Instance: PIM.master Family: INET
R = Rendezvous Point Tree, S = Sparse, W = Wildcard
```

```
Group: 225.1.1.1
Source: *
RP: 1.1.1.4
Flags: sparse,rptree,wildcard
Upstream interface: Local
Upstream neighbor: Local
Upstream state: Local RP
Uptime: 1d 23:13:43
Downstream neighbors:
  Interface: ge-0/3/0.0
    192.168.207.9 State: Join Flags: SRW Timeout: Infinity
    Uptime: 1d 23:13:43 Time since last Join: 1d 23:13:43
```

```
Group: 232.1.1.2
Source: 192.168.219.11
Flags: sparse,spt
Upstream interface: fe-1/2/0.0
Upstream neighbor: 1.1.4.1
Upstream state: Local RP, Join to Source
Keepalive timeout: 0
Uptime: 1d 23:13:43
Downstream neighbors:
  Interface: ge-0/3/0.0
    192.168.207.9 State: Join Flags: S Timeout: Infinity
    Uptime: 1d 23:13:43 Time since last Join: 1d 23:13:43
```

```
user@pr5> show pim join extensive
ge-0/3/1.0

Instance: PIM.master Family: INET
R = Rendezvous Point Tree, S = Sparse, W = Wildcard

Instance: PIM.master Family: INET6
R = Rendezvous Point Tree, S = Sparse, W = Wildcard
```

### ***Checking the PIM Sources***

**Purpose** Verify that the PIM sources have the expected M-LDP in-band upstream and downstream details.



**Action** From operational mode, enter the **show pim source** command.

```
user@IngressPE> show pim source
```

```
Instance: PIM.master Family: INET
```

```
Source 1.1.1.1
  Prefix 1.1.1.1/32
  Upstream interface Local
  Upstream neighbor Local

Source 1.2.7.7
  Prefix 1.2.7.0/24
  Upstream protocol MLDP
  Upstream interface Pseudo MLDP
  Upstream neighbor MLDP LSP root <1.1.1.2>

Source 192.168.219.11
  Prefix 192.168.219.0/28
  Upstream protocol MLDP
  Upstream interface Pseudo MLDP
  Upstream neighbor MLDP LSP root <1.1.1.2>
```

```
user@EgressPE> show pim source
```

```
Instance: PIM.master Family: INET
```

```
Source 1.2.7.7
  Prefix 1.2.7.0/24
  Upstream interface fe-1/2/3.0
  Upstream neighbor 1.2.7.2

Source 1.2.7.7
  Prefix 1.2.7.0/24
  Upstream interface fe-1/2/3.0
  Upstream neighbor Direct

Source 192.168.219.11
  Prefix 192.168.219.0/28
  Upstream interface fe-1/3/1.0
  Upstream neighbor 192.168.219.9

Source 192.168.219.11
  Prefix 192.168.219.0/28
  Upstream interface fe-1/3/1.0
  Upstream neighbor Direct
```

```
user@pr3> show pim source
```

```
Instance: PIM.master Family: INET
```

```
Source 1.2.7.7
  Prefix 1.2.7.0/24
  Upstream protocol MLDP
  Upstream interface Pseudo MLDP
  Upstream neighbor MLDP LSP root <1.1.1.2>

Source 192.168.219.11
  Prefix 192.168.219.0/28
  Upstream protocol MLDP
  Upstream interface Pseudo MLDP
```

Upstream neighbor MLDP LSP root <1.1.1.2>

```
user@pr4> show pim source
Instance: PIM.master Family: INET

Source 1.1.1.4
  Prefix 1.1.1.4/32
  Upstream interface Local
  Upstream neighbor Local

Source 192.168.219.11
  Prefix 192.168.219.0/28
  Upstream interface fe-1/2/0.0
  Upstream neighbor 1.1.4.1
```

***Checking the LDP Database***

**Purpose** Make sure that the `show ldp database` command displays the expected root-to-(S,G) bindings.

```

Action user@IngressPE> show ldp database

Input label database, 10.255.2.227:0--1.1.1.3:0
  Label Prefix
  300096 1.1.1.2/32
    3     1.1.1.3/32
  299856 1.1.1.6/32
  299776 10.255.2.227/32

Output label database, 10.255.2.227:0--1.1.1.3:0
  Label Prefix
  300144 1.1.1.2/32
  299776 1.1.1.3/32
  299856 1.1.1.6/32
    3     10.255.2.227/32

Input label database, 10.255.2.227:0--1.1.1.6:0
  Label Prefix
  299936 1.1.1.2/32
  299792 1.1.1.3/32
    3     1.1.1.6/32
  299776 10.255.2.227/32

Output label database, 10.255.2.227:0--1.1.1.6:0
  Label Prefix
  300144 1.1.1.2/32
  299776 1.1.1.3/32
  299856 1.1.1.6/32
    3     10.255.2.227/32
  300432 P2MP root-addr 1.1.1.2, grp: 232.2.2.2, src: 1.2.7.7
  300288 P2MP root-addr 1.1.1.2, grp: 232.1.1.1, src: 192.168.219.11
  300160 P2MP root-addr 1.1.1.2, grp: 232.1.1.2, src: 192.168.219.11
  300480 P2MP root-addr 1.1.1.2, grp: 232.1.1.3, src: 192.168.219.11

user@EgressPE> show ldp database

Input label database, 1.1.1.2:0--1.1.1.3:0
  Label Prefix
  300096 1.1.1.2/32
    3     1.1.1.3/32
  299856 1.1.1.6/32
  299776 10.255.2.227/32
  300144 P2MP root-addr 1.1.1.2, grp: 232.2.2.2, src: 1.2.7.7
  300128 P2MP root-addr 1.1.1.2, grp: 232.1.1.2, src: 192.168.219.11

Output label database, 1.1.1.2:0--1.1.1.3:0
  Label Prefix
    3     1.1.1.2/32
  299776 1.1.1.3/32
  299808 1.1.1.6/32
  299792 10.255.2.227/32

Input label database, 1.1.1.2:0--1.1.1.6:0
  Label Prefix
  299936 1.1.1.2/32
  299792 1.1.1.3/32
    3     1.1.1.6/32
  299776 10.255.2.227/32
  300128 P2MP root-addr 1.1.1.2, grp: 232.2.2.2, src: 1.2.7.7
  299984 P2MP root-addr 1.1.1.2, grp: 232.1.1.1, src: 192.168.219.11
  299952 P2MP root-addr 1.1.1.2, grp: 232.1.1.2, src: 192.168.219.11

```

```

300176      P2MP root-addr 1.1.1.2, grp: 232.1.1.3, src: 192.168.219.11
300192      P2MP root-addr 1.1.1.2, grp: ff3e::1:2, src: abcd::1:2:7:7

```

```
Output label database, 1.1.1.2:0--1.1.1.6:0
```

```

Label      Prefix
  3         1.1.1.2/32
299776     1.1.1.3/32
299808     1.1.1.6/32
299792     10.255.2.227/32
-----

```

```
logical-system: default
```

```
Input label database, 10.255.2.227:0--1.1.1.3:0
```

```

Label      Prefix
300096     1.1.1.2/32
  3         1.1.1.3/32
299856     1.1.1.6/32
299776     10.255.2.227/32

```

```
Output label database, 10.255.2.227:0--1.1.1.3:0
```

```

Label      Prefix
300144     1.1.1.2/32
299776     1.1.1.3/32
299856     1.1.1.6/32
  3         10.255.2.227/32

```

```
Input label database, 10.255.2.227:0--1.1.1.6:0
```

```

Label      Prefix
299936     1.1.1.2/32
299792     1.1.1.3/32
  3         1.1.1.6/32
299776     10.255.2.227/32

```

```
Output label database, 10.255.2.227:0--1.1.1.6:0
```

```

Label      Prefix
300144     1.1.1.2/32
299776     1.1.1.3/32
299856     1.1.1.6/32
  3         10.255.2.227/32
300432     P2MP root-addr 1.1.1.2, grp: 232.2.2.2, src: 1.2.7.7
300288     P2MP root-addr 1.1.1.2, grp: 232.1.1.1, src: 192.168.219.11
300160     P2MP root-addr 1.1.1.2, grp: 232.1.1.2, src: 192.168.219.11
300480     P2MP root-addr 1.1.1.2, grp: 232.1.1.3, src: 192.168.219.11
300496     P2MP root-addr 1.1.1.2, grp: ff3e::1:2, src: abcd::1:2:7:7

```

```
user@p6> show ldp database
```

```
Input label database, 1.1.1.6:0--1.1.1.2:0
```

```

Label      Prefix
  3         1.1.1.2/32
299776     1.1.1.3/32
299808     1.1.1.6/32

```

```
Output label database, 1.1.1.6:0--1.1.1.2:0
```

```

Label      Prefix
299776     1.1.1.2/32
299792     1.1.1.3/32
  3         1.1.1.6/32

```

```
user@pr3> show ldp database
```

Input label database, 1.1.1.3:0--1.1.1.2:0

Label	Prefix
3	1.1.1.2/32
299776	1.1.1.3/32
299808	1.1.1.6/32
299792	10.255.2.227/32

Output label database, 1.1.1.3:0--1.1.1.2:0

Label	Prefix
300096	1.1.1.2/32
3	1.1.1.3/32
299856	1.1.1.6/32
299776	10.255.2.227/32
<b>300144</b>	<b>P2MP root-addr 1.1.1.2, grp: 232.2.2.2, src: 1.2.7.7</b>
<b>300128</b>	<b>P2MP root-addr 1.1.1.2, grp: 232.1.1.2, src: 192.168.219.11</b>

Input label database, 1.1.1.3:0--10.255.2.227:0

Label	Prefix
300144	1.1.1.2/32
299776	1.1.1.3/32
299856	1.1.1.6/32
3	10.255.2.227/32

Output label database, 1.1.1.3:0--10.255.2.227:0

Label	Prefix
300096	1.1.1.2/32
3	1.1.1.3/32
299856	1.1.1.6/32
299776	10.255.2.227/32

### *Looking Up the Route Information for the MPLS Label*

**Purpose** Display the point-to-multipoint FEC information.

**Action** user@EgressPE> show route label 299808 detail

```
mpls.0: 14 destinations, 14 routes (14 active, 0 holddown, 0 hidden)
299808 (1 entry, 1 announced)
  *LDP    Preference: 9
           Next hop type: Flood
           Address: 0x931922c
           Next-hop reference count: 3
           Next hop type: Router, Next hop index: 1109
           Address: 0x9318b0c
           Next-hop reference count: 2
           Next hop: via so-0/1/3.0
           Label operation: Pop
           Next hop type: Router, Next hop index: 1110
           Address: 0x93191e0
           Next-hop reference count: 2
           Next hop: 192.168.209.11 via fe-1/3/0.0
           Label operation: Pop
           State: **Active Int AckRequest>
           Local AS:    10
           Age: 13:08:15  Metric: 1
           Validation State: unverified
           Task: LDP
           Announcement bits (1): 0-KRT
           AS path: I
           FECs bound to route: P2MP root-addr 1.1.1.2, grp: 232.1.1.1, src:
192.168.219.11
```

#### *Checking the LDP Traffic Statistics*

**Purpose** Monitor the data traffic statistics for the point-to-multipoint LSP.

**Action** user@EgressPE> **show ldp traffic-statistics p2mp**  
P2MP FEC Statistics:

FEC(root_addr:lsp_id/grp,src)	Nexthop	Packets	Bytes
Shared			
1.1.1.2:232.2.2.2,1.2.7.7	so-0/1/3.0	0	0
No			
1.1.1.2:232.1.1.1,192.168.219.11	so-0/1/3.0	0	0
No			
	fe-1/3/0.0	0	0
No			
1.1.1.2:232.1.1.2,192.168.219.11	so-0/1/3.0	0	0
No			
	fe-1/3/0.0	0	0
No			
	lt-1/2/0.14	0	0
No			
1.1.1.2:232.1.1.3,192.168.219.11	fe-1/3/0.0	0	0
No			
1.1.1.2:ff3e::1:2,abcd::1:2:7:7	fe-1/3/0.0	0	0
No			

Release History Table

Release	Description
16.1	Starting from Junos OS Release 16.1, M-LDP can signal point-to-multipoint LSPs at ASBR or transit or egress when root address is a BGP route which is further recursively resolved over an MPLS LSP.
14.1	Starting in Junos OS Release 14.1, in order to migrate existing IPTV services from native IP multicast to MPLS multicast, you need to smoothly transition from PIM to M-LDP point-to-multipoint LSPs with minimal outage.

- Related Documentation**
- *Example: Configuring RSVP-Signaled Point-to-Multipoint LSPs on Logical Systems*
  - *Example: Configuring Point-to-Multipoint LDPLSPs as the Data Plane for Intra-AS MBGP MVPNs*

## Configuring Miscellaneous LDP Properties

The following sections describe how to configure a number of miscellaneous LDP properties:

- [Configuring LDP to Use the IGP Route Metric on page 723](#)
- [Preventing Addition of Ingress Routes to the inet.0 Routing Table on page 723](#)
- [Multiple-Instance LDP and Carrier-of-Carriers VPNs on page 723](#)
- [Configuring MPLS and LDP to Pop the Label on the Ultimate-Hop Router on page 724](#)
- [Enabling LDP over RSVP-Established LSPs on page 724](#)
- [Enabling LDP over RSVP-Established LSPs in Heterogeneous Networks on page 724](#)
- [Configuring the TCP MD5 Signature for LDP Sessions on page 725](#)



- [Configuring LDP Session Protection on page 726](#)
- [Disabling SNMP Traps for LDP on page 727](#)
- [Configuring LDP Synchronization with the IGP on LDP Links on page 727](#)
- [Configuring LDP Synchronization with the IGP on the Router on page 728](#)
- [Configuring the Label Withdrawal Timer on page 728](#)
- [Ignoring the LDP Subnet Check on page 728](#)

## Configuring LDP to Use the IGP Route Metric

Use the **track-igp-metric** statement if you want the interior gateway protocol (IGP) route metric to be used for the LDP routes instead of the default LDP route metric (the default LDP route metric is 1).

To use the IGP route metric, include the **track-igp-metric** statement:

```
track-igp-metric;
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

## Preventing Addition of Ingress Routes to the inet.0 Routing Table

By configuring the **no-forwarding** statement, you can prevent ingress routes from being added to the **inet.0** routing table instead of the **inet.3** routing table even if you enabled the **traffic-engineering bgp-igp** statement at the **[edit protocols mpls]** or the **[edit logical-systems logical-system-name protocols mpls]** hierarchy level. By default, the **no-forwarding** statement is disabled.



**NOTE:** ACX Series routers do not support **[edit logical-systems]** hierarchy level.

To omit ingress routes from the **inet.0** routing table, include the **no-forwarding** statement:

```
no-forwarding;
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

## Multiple-Instance LDP and Carrier-of-Carriers VPNs

By configuring multiple LDP routing instances, you can use LDP to advertise labels in a carrier-of-carriers VPN from a service provider provider edge (PE) router to a customer carrier customer edge (CE) router. This is especially useful when the carrier customer is a basic Internet service provider (ISP) and wants to restrict full Internet routes to its PE routers. By using LDP instead of BGP, the carrier customer shields its other internal routers from the Internet. Multiple-instance LDP is also useful when a carrier customer wants to provide Layer 2 or Layer 3 VPN services to its customers.

For an example of how to configure multiple LDP routing instances for carrier-of-carriers VPNs, see the *Multiple Instances for Label Distribution Protocol Feature Guide*.

## Configuring MPLS and LDP to Pop the Label on the Ultimate-Hop Router

The default advertised label is label 3 (Implicit Null label). If label 3 is advertised, the penultimate-hop router removes the label and sends the packet to the egress router. If ultimate-hop popping is enabled, label 0 (IPv4 Explicit Null label) is advertised. Ultimate-hop popping ensures that any packets traversing an MPLS network include a label.

To configure ultimate-hop popping, include the **explicit-null** statement:

```
explicit-null;
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.



**NOTE:** Juniper Networks routers queue packets based on the incoming label. Routers from other vendors might queue packets differently. Keep this in mind when working with networks containing routers from multiple vendors.

For more information about labels, see [“MPLS Label Overview” on page 24](#) and [“MPLS Label Allocation” on page 26](#).

## Enabling LDP over RSVP-Established LSPs

You can run LDP over LSPs established by RSVP, effectively tunneling the LDP-established LSP through the one established by RSVP. To do so, enable LDP on the lo0.0 interface (see [“Enabling and Disabling LDP” on page 588](#)). You must also configure the LSPs over which you want LDP to operate by including the **ldp-tunneling** statement at the **[edit protocols mpls label-switched-path *lsp-name*]** hierarchy level:

```
[edit]
protocols {
  mpls {
    label-switched-path lsp-name {
      from source;
      to destination;
      ldp-tunneling;
    }
  }
}
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

**Related Documentation** • [Tunneling LDP LSPs in RSVP LSPs Overview on page 582](#)

## Enabling LDP over RSVP-Established LSPs in Heterogeneous Networks

Some other vendors use an OSPF metric of 1 for the loopback address. Juniper Networks routers use an OSPF metric of 0 for the loopback address. This might require that you

manually configure the RSVP metric when deploying LDP tunneling over RSVP LSPs in heterogeneous networks.

When a Juniper Networks router is linked to another vendor's router through an RSVP tunnel, and LDP tunneling is also enabled, by default the Juniper Networks router might not use the RSVP tunnel to route traffic to the LDP destinations downstream of the other vendor's egress router if the RSVP path has a metric of 1 larger than the physical OSPF path.

To ensure that LDP tunneling functions properly in heterogeneous networks, you can configure OSPF to ignore the RSVP LSP metric by including the **ignore-lsp-metrics** statement:

```
ignore-lsp-metrics;
```

You can configure this statement at the following hierarchy levels:

- [edit protocols ospf traffic-engineering shortcuts]
- [edit logical-systems *logical-system-name* protocols ospf traffic-engineering shortcuts]



**NOTE:** ACX Series routers do not support [edit logical-systems] hierarchy level.

To enable LDP over RSVP LSPs, you also still need to complete the procedure in Section “Enabling LDP over RSVP-Established LSPs” on page 724.

## Configuring the TCP MD5 Signature for LDP Sessions

You can configure an MD5 signature for an LDP TCP connection to protect against the introduction of spoofed TCP segments into LDP session connection streams.

A router using the MD5 signature option is configured with a password for each peer for which authentication is required. The password is stored encrypted.

LDP hello adjacencies can still be created even when peering interfaces are configured with different security signatures. However, the TCP session cannot be authenticated and is never established.

To configure an MD5 signature for an LDP TCP connection, include the **session** and **authentication-key** statement:

```
session address {
  authentication-key md5-authentication-key;
}
```

For a list of hierarchy levels at which you can include these statements, see the statement summary section for the **session** statement.

Use the **session** statement to configure the address for the remote end of the LDP session.

The **md5-authentication-key** (password) can be up to 69 characters long. Characters can include any ASCII strings. If you include spaces, enclose all characters in quotation marks.

You can also configure an authentication key update mechanism for the LDP routing protocol. This mechanism allows you to update authentication keys without interrupting associated routing and signaling protocols such as Open Shortest Path First (OSPF) and Resource Reservation Setup Protocol (RSVP).

To configure the authentication key update mechanism, include the **key-chain** statement at the **[edit security authentication-key-chains]** hierarchy level, and specify the **key** option to create a keychain consisting of several authentication keys.

```
[edit security authentication-key-chains]
key-chain key-chain-name {
  key key {
    secret secret-data;
    start-time yyyy-mm-dd.hh:mm:ss;
  }
}
```

To configure the authentication key update mechanism for the LDP routing protocol, include the **authentication-key-chain** statement at the **[edit protocols ldp]** hierarchy level to associate the protocol with the **[edit security authentication-key-chains]** authentication keys. You must also configure the authentication algorithm by including the **authentication-algorithm** *algorithm* statement the **[edit protocols ldp]** hierarchy level.

```
[edit protocols ldp]
group group-name {
  neighbor address {
    authentication-algorithm algorithm;
    authentication-key-chain key-chain-name;
  }
}
```

For more information about the authentication key update feature, see *Configuring the Authentication Key Update Mechanism for BGP and LDP Routing Protocols*.

## Configuring LDP Session Protection

An LDP session is normally created between a pair of routers that are connected by one or more links. The routers form one hello adjacency for every link that connects them and associate all the adjacencies with the corresponding LDP session. When the last hello adjacency for an LDP session goes away, the LDP session is terminated. You might want to modify this behavior to prevent an LDP session from being unnecessarily terminated and reestablished.

You can configure the Junos OS to leave the LDP session between two routers up even if there are no hello adjacencies on the links connecting the two routers by configuring the **session-protection** statement. You can optionally specify a time in seconds using the **timeout** option. The session remains up for the duration specified as long as the routers maintain IP network connectivity.

```
session-protection {
  timeout seconds;
}
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section.

## Disabling SNMP Traps for LDP

Whenever an LDP LSP makes a transition from up to down, or down to up, the router sends an SNMP trap. However, it is possible to disable the LDP SNMP traps on a router, logical system, or routing instance.

For information about the LDP SNMP traps and the proprietary LDP MIB, see the [SNMP MIB Explorer](#) and *Interpreting the Enterprise-Specific LDP MIB*.

To disable SNMP traps for LDP, specify the **trap disable** option for the **log-updown** statement:

```
log-updown {
  trap disable;
}
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

## Configuring LDP Synchronization with the IGP on LDP Links

LDP is a protocol for distributing labels in non-traffic-engineered applications. Labels are distributed along the best path determined by the IGP. If synchronization between LDP and the IGP is not maintained, the LSP goes down. When LDP is not fully operational on a given link (a session is not established and labels are not exchanged), the IGP advertises the link with the maximum cost metric. The link is not preferred but remains in the network topology.

LDP synchronization is supported only on active point-to-point interfaces and LAN interfaces configured as point-to-point under the IGP. LDP synchronization is not supported during graceful restart.

To advertise the maximum cost metric until LDP is operational for synchronization, include the **ldp-synchronization** statement:

```
ldp-synchronization {
  disable;
  hold-time seconds;
}
```

To disable synchronization, include the **disable** statement. To configure the time period to advertise the maximum cost metric for a link that is not fully operational, include the **hold-time** statement.

For a list of hierarchy levels at which you can configure this statement, see the statement summary section for this statement.

## Configuring LDP Synchronization with the IGP on the Router

You can configure the time the LDP waits before informing the IGP that the LDP neighbor and session for an interface are operational. For large networks with numerous FECs, you might need to configure a longer value to allow enough time for the LDP label databases to be exchanged.

To configure the time the LDP waits before informing the IGP that the LDP neighbor and session are operational, include the **igp-synchronization** statement and specify a time in seconds for the **holddown-interval** option:

```
igp-synchronization holddown-interval seconds;
```

For a list of hierarchy levels at which you can configure this statement, see the statement summary section for this statement.

## Configuring the Label Withdrawal Timer

The label withdrawal timer delays sending a label withdrawal message for a FEC to a neighbor. When an IGP link to a neighbor fails, the label associated with the FEC has to be withdrawn from all the upstream routers if the neighbor is the next hop for the FEC. After the IGP converges and a label is received from a new next hop, the label is readvertised to all the upstream routers. This is the typical network behavior. By delaying label withdrawal by a small amount of time (for example, until the IGP converges and the router receives a new label for the FEC from the downstream next hop), the label withdrawal and sending a label mapping soon could be avoided. The **label-withdrawal-delay** statement allows you to configure this delay time. By default, the delay is 60 seconds.

If the router receives the new label before the timer runs out, the label withdrawal timer is canceled. However, if the timer runs out, the label for the FEC is withdrawn from all of the upstream routers.

By default, LDP waits for 60 seconds before withdrawing labels to avoid resignaling LSPs multiple times while the IGP is reconverging. To configure the label withdrawal delay time in seconds, include the **label-withdrawal-delay** statement:

```
label-withdrawal-delay seconds;
```

For a list of hierarchy levels at which you can configure this statement, see the statement summary section for this statement.

## Ignoring the LDP Subnet Check

In Junos OS Release 8.4 and later releases, an LDP source address subnet check is performed during the neighbor establishment procedure. The source address in the LDP link hello packet is matched against the interface address. This causes an interoperability issue with some other vendors' equipment.

To disable the subnet check, include the **allow-subnet-mismatch** statement:

```
allow-subnet-mismatch;
```

This statement can be included at the following hierarchy levels:

- [edit protocols ldp **interface** *interface-name*]
- [edit logical-systems *logical-system-name* protocols ldp **interface** *interface-name*]



**NOTE:** ACX Series routers do not support [edit logical-systems] hierarchy level.

## Configuring LDP LSP Traceroute

You can trace the route followed by an LDP-sigaled LSP. LDP LSP traceroute is based on RFC 4379, *Detecting Multi-Protocol Label Switched (MPLS) Data Plane Failures*. This feature allows you to periodically trace all paths in a FEC. The FEC topology information is stored in a database accessible from the CLI.

A topology change does not automatically trigger a trace of an LDP LSP. However, you can manually initiate a traceroute. If the traceroute request is for an FEC that is currently in the database, the contents of the database are updated with the results.

The periodic traceroute feature applies to all FECs specified by the **oam** statement configured at the [edit protocols ldp] hierarchy level. To configure periodic LDP LSP traceroute, include the **periodic-traceroute** statement:

```
periodic-traceroute {
  disable;
  exp exp-value;
  fanout fanout-value;
  frequency minutes;
  paths number-of-paths;
  retries retry-attempts;
  source address;
  ttl ttl-value;
  wait seconds;
}
```

You can configure this statement at the following hierarchy levels:

- [edit protocols ldp **oam**]
- [edit protocols ldp **oam** *fec address*]

You can configure the **periodic-traceroute** statement by itself or with any of the following options:

- **exp**—Specify the class of service to use when sending probes.
- **fanout**—Specify the maximum number of next hops to search per node.
- **frequency**—Specify the interval between traceroute attempts.
- **paths**—Specify the maximum number of paths to search.

- **retries**—Specify the number of attempts to send a probe to a specific node before giving up.
- **source**—Specify the IPv4 source address to use when sending probes.
- **ttl**—Specify the maximum time-to-live value. Nodes that are beyond this value are not traced.
- **wait**—Specify the wait interval before resending a probe packet.

## Collecting LDP Statistics

LDP traffic statistics show the volume of traffic that has passed through a particular FEC on a router.

When you configure the **traffic-statistics** statement at the **[edit protocols ldp]** hierarchy level, the LDP traffic statistics are gathered periodically and written to a file. You can configure how often statistics are collected (in seconds) by using the **interval** option. The default collection interval is 5 minutes. You must configure an LDP statistics file; otherwise, LDP traffic statistics are not gathered. If the LSP goes down, the LDP statistics are reset.

To collect LDP traffic statistics, include the **traffic-statistics** statement:

```
traffic-statistics {
  file filename <files number> <size size> <world-readable | no-world-readable>;
  interval interval;
  no-penultimate-hop;
}
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

This section includes the following topics:

- [LDP Statistics Output on page 730](#)
- [Disabling LDP Statistics on the Penultimate-Hop Router on page 731](#)
- [LDP Statistics Limitations on page 732](#)

## LDP Statistics Output

The following sample output is from an LDP statistics file:

FEC	Type	Packets	Bytes	Shared
10.255.350.448/32	Transit	0	0	No
	Ingress	0	0	No
10.255.350.450/32	Transit	0	0	Yes
	Ingress	0	0	No
10.255.350.451/32	Transit	0	0	No
	Ingress	0	0	No
220.220.220.1/32	Transit	0	0	Yes
	Ingress	0	0	No
220.220.220.2/32	Transit	0	0	Yes
	Ingress	0	0	No
220.220.220.3/32	Transit	0	0	Yes
	Ingress	0	0	No

May 28 15:02:05, read 12 statistics in 00:00:00 seconds



The LDP statistics file includes the following columns of data:

- **read**—Number of bytes of data passed by the FEC since its LSP came up.
- **read**—FEC for which LDP traffic statistics are collected.
- **read**—Number of packets passed by the FEC since its LSP came up.
- **read**—This number (which appears next to the date and time) might differ from the actual number of the statistics displayed. Some of the statistics are summarized before being displayed.
- **Shared**—A **Yes** value indicates that several prefixes are bound to the same label (for example, when several prefixes are advertised with an egress policy). The LDP traffic statistics for this case apply to all the prefixes and should be treated as such.
- **Type**—Type of traffic originating from a router, either **Ingress** (originating from this router) or **Transit** (forwarded through this router).

## Disabling LDP Statistics on the Penultimate-Hop Router

Gathering LDP traffic statistics at the penultimate-hop router can consume excessive system resources, on next-hop routes in particular. This problem is exacerbated if you have configured the **deaggregate** statement in addition to the **traffic-statistics** statement. For routers reaching their limit of next-hop route usage, we recommend configuring the **no-penultimate-hop** option for the **traffic-statistics** statement:

```
traffic-statistics {
  no-penultimate-hop;
}
```

For a list of hierarchy levels at which you can configure the **traffic-statistics** statement, see the statement summary section for this statement.



**NOTE:** When you configure the **no-penultimate-hop** option, no statistics are available for the FECs that are the penultimate hop for this router.

Whenever you include or remove this option from the configuration, the LDP sessions are taken down and then restarted.

The following sample output is from an LDP statistics file showing routers on which the **no-penultimate-hop** option is configured:

FEC	Type	Packets	Bytes	Shared
10.255.245.218/32	Transit	0	0	No
	Ingress	4	246	No
10.255.245.221/32	Transit	statistics disabled		
	Ingress	statistics disabled		
13.1.1.0/24	Transit	statistics disabled		
	Ingress	statistics disabled		
13.1.3.0/24	Transit	statistics disabled		
	Ingress	statistics disabled		

## LDP Statistics Limitations

The following are issues related to collecting LDP statistics by configuring the **traffic-statistics** statement:

- You cannot clear the LDP statistics.
- If you shorten the specified interval, a new LDP statistics request is issued only if the statistics timer expires later than the new interval.
- A new LDP statistics collection operation cannot start until the previous one has finished. If the interval is short or if the number of LDP statistics is large, the time gap between the two statistics collections might be longer than the interval.

When an LSP goes down, the LDP statistics are reset.

---

## Tracing LDP Protocol Traffic

The following sections describe how to configure the trace options to examine LDP protocol traffic:

- [Tracing LDP Protocol Traffic at the Protocol and Routing Instance Levels on page 732](#)
- [Tracing LDP Protocol Traffic Within FECs on page 733](#)
- [Examples: Tracing LDP Protocol Traffic on page 734](#)

### Tracing LDP Protocol Traffic at the Protocol and Routing Instance Levels

To trace LDP protocol traffic, you can specify options in the global **traceoptions** statement at the **[edit routing-options]** hierarchy level, and you can specify LDP-specific options by including the **traceoptions** statement:

```
traceoptions {  
  file filename <files number> <size size> <world-readable | no-world-readable>;  
  flag flag <flag-modifier> <disable>;  
}
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

Use the **file** statement to specify the name of the file that receives the output of the tracing operation. All files are placed in the directory `/var/log`. We recommend that you place LDP-tracing output in the file **ldp-log**.

The following trace flags display the operations associated with the sending and receiving of various LDP messages. Each can carry one or more of the following modifiers:

- **address**—Trace the operation of address and address withdrawal messages.
- **binding**—Trace label-binding operations.
- **error**—Trace error conditions.
- **event**—Trace protocol events.

- **initialization**—Trace the operation of initialization messages.
- **label**—Trace the operation of label request, label map, label withdrawal, and label release messages.
- **notification**—Trace the operation of notification messages.
- **packets**—Trace the operation of address, address withdrawal, initialization, label request, label map, label withdrawal, label release, notification, and periodic messages. This modifier is equivalent to setting the **address**, **initialization**, **label**, **notification**, and **periodic** modifiers.

You can also configure the **filter** flag modifier with the **match-on address** sub-option for the **packets** flag. This allows you to trace based on the source and destination addresses of the packets.

- **path**—Trace label-switched path operations.
- **path**—Trace label-switched path operations.
- **periodic**—Trace the operation of hello and keepalive messages.
- **route**—Trace the operation of route messages.
- **state**—Trace protocol state transitions.

## Tracing LDP Protocol Traffic Within FECs

LDP associates a forwarding equivalence class (FEC) with each LSP it creates. The FEC associated with an LSP specifies which packets are mapped to that LSP. LSPs are extended through a network as each router chooses the label advertised by the next hop for the FEC and splices it to the label it advertises to all other routers.

You can trace LDP protocol traffic within a specific FEC and filter LDP trace statements based on an FEC. This is useful when you want to trace or troubleshoot LDP protocol traffic associated with an FEC. The following trace flags are available for this purpose: **route**, **path**, and **binding**.

The following example illustrates how you might configure the LDP **traceoptions** statement to filter LDP trace statements based on an FEC:

```
[edit protocols ldp traceoptions]
set flag route filter match-on fec policy "filter-policy-for-ldp-fec";
```

This feature has the following limitations:

- The filtering capability is only available for FECs composed of IP version 4 (IPv4) prefixes.
- Layer 2 circuit FECs cannot be filtered.
- When you configure both route tracing and filtering, MPLS routes are not displayed (they are blocked by the filter).

- Filtering is determined by the policy and the configured value for the **match-on** option. When configuring the policy, be sure that the default behavior is always **reject**.
- The only **match-on** option is **fec**. Consequently, the only type of policy you should include is a route-filter policy.

## Examples: Tracing LDP Protocol Traffic

Trace LDP path messages in detail:

```
[edit]
protocols {
  ldp {
    traceoptions {
      file ldp size 10m files 5;
      flag path;
    }
  }
}
```

Trace all LDP outgoing messages:

```
[edit]
protocols {
  ldp {
    traceoptions {
      file ldp size 10m files 5;
      flag packets;
    }
  }
}
```

Trace all LDP error conditions:

```
[edit]
protocols {
  ldp {
    traceoptions {
      file ldp size 10m files 5;
      flag error;
    }
  }
}
```

Trace all LDP incoming messages and all label-binding operations:

```
[edit]
protocols {
  ldp {
    traceoptions {
      file ldp size 10m files 5 world-readable;
      flag packets receive;
      flag binding;
    }
    interface all {
    }
  }
}
```

```
}
```

Trace LDP protocol traffic for an FEC associated with the LSP:

```
[edit]
protocols {
  ldp {
    traceoptions {
      flag route filter match-on fec policy filter-policy-for-ldp-fec;
    }
  }
}
```



## PART 5

# Configuring Circuit Cross-Connect (CCC) and Translational Cross-Connect (TCC)

- [CCC and TCC Overview on page 739](#)
- [Configuring CCC and TCC on page 743](#)





## CHAPTER 16

# CCC and TCC Overview

- [CCC Overview on page 739](#)
- [Transmitting Nonstandard BPDUs on page 740](#)
- [TCC Overview on page 740](#)

### CCC Overview

---

Circuit cross-connect (CCC) allows you to configure transparent connections between two circuits, where a circuit can be a Frame Relay data-link connection identifier (DLCI), an Asynchronous Transfer Mode (ATM) virtual circuit (VC), a Point-to-Point Protocol (PPP) interface, a Cisco High-Level Data Link Control (HDLC) interface, or an MPLS label-switched path (LSP). Using CCC, packets from the source circuit are delivered to the destination circuit with, at most, the Layer 2 address being changed. No other processing—such as header checksums, time-to-live (TTL) decrementing, or protocol processing—is done.

CCC circuits fall into two categories: logical interfaces, which include DLCIs, VCs, virtual local area network (VLAN) IDs, PPP and Cisco HDLC interfaces, and LSPs. The two circuit categories provide three types of cross-connect:

- **Layer 2 switching**—Cross-connects between logical interfaces provide what is essentially Layer 2 switching. The interfaces that you connect must be of the same type.
- **MPLS tunneling**—Cross-connects between interfaces and LSPs allow you to connect two distant interface circuits of the same type by creating MPLS tunnels that use LSPs as the conduit.
- **LSP stitching**—Cross-connects between LSPs provide a way to “stitch” together two label-switched paths, including paths that fall in two different traffic engineering database areas.

For Layer 2 switching and MPLS tunneling, the cross-connect is bidirectional, so packets received on the first interface are transmitted out the second interface, and those received on the second interface are transmitted out the first. For LSP stitching, the cross-connect is unidirectional.

You can police (control) the amount of traffic flowing over CCC circuits. For more information, see the *Junos OS VPNs Library for Routing Devices*.

It is also possible to use the **ping** command to check the integrity of CCC LSPs. See [“Pinging CCC LSPs” on page 389](#) for more information.

## Transmitting Nonstandard BPDUs

CCC protocol (and Layer 2 Circuit and Layer 2 VPN) configurations can transmit nonstandard bridge protocol data units (BPDUs) generated by other vendors' equipment. This is the default behavior on all supported PICs and requires no additional configuration.


The following PICs are supported on M320 and T Series routers:

- 1-port Gigabit Ethernet PIC
- 2-port Gigabit Ethernet PIC
- 4-port Gigabit Ethernet PIC
- 10-port Gigabit Ethernet PIC

## TCC Overview

Translational cross-connect (TCC) is a switching concept that enables you to establish interconnections between a variety of Layer 2 protocols or circuits. It is similar to CCC. However, whereas CCC requires the same Layer 2 encapsulations on each side of a Juniper Networks router (such as PPP-to-PPP or Frame Relay-to-Frame Relay), TCC enables you to connect different types of Layer 2 protocols interchangeably. When you use TCC, combinations such as PPP-to-ATM (see [Figure 72 on page 740](#)) and Ethernet-to-Frame Relay connections are possible.

Figure 72: TCC Example

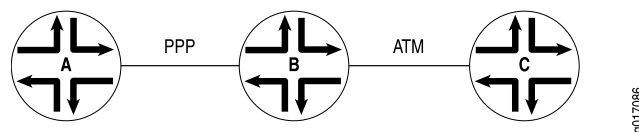

The Layer 2 circuits and encapsulation types that can be interconnected by TCC are:

- Ethernet
- Extended VLANs
- PPP
- HDLC
- ATM
- Frame Relay

TCC works by removing the Layer 2 header when frames enter the router and adding a different Layer 2 header on the frames before they leave the router. In [Figure 72 on page 740](#), the PPP encapsulation is stripped from the frames arriving at Router B, and the ATM encapsulation is added before the frames are sent to Router C.

Note that all control traffic is terminated at the interconnecting router (Router B). Examples of traffic controllers include the Link Control Protocol (LCP) and the Network Control Protocol (NCP) for PPP, keepalives for HDLC, and Local Management Interface (LMI) for Frame Relay.

TCC functionality is different from standard Layer 2 switching. TCC only swaps Layer 2 headers. No other processing, such as header checksums, TTL decrementing, or protocol handling is performed. TCC is supported for IPv4 only.

Address Resolution Protocol (APR) packet policing on TCC Ethernet interfaces is effective for releases 10.4 and onwards.

You can configure TCC for interface switching and for Layer 2 VPNs. For more information about using TCC for virtual private networks (VPNs), see the *Junos OS VPNs Library for Routing Devices*.



# Configuring CCC and TCC

- [Configuring Layer 2 Switching Cross-Connects Using CCC on page 743](#)
- [Configuring MPLS LSP Tunnel Cross-Connects Using CCC on page 751](#)
- [Configuring TCC on page 755](#)
- [CCC and TCC Graceful Restart on page 760](#)
- [Configuring CCC and TCC Graceful Restart on page 761](#)
- [Configuring CCC Switching for Point-to-Multipoint LSPs on page 761](#)


## Configuring Layer 2 Switching Cross-Connects Using CCC

Layer 2 switching cross-connects join logical interfaces to form what is essentially Layer 2 switching. The interfaces that you connect must be of the same type.

[Figure 73 on page 743](#) illustrates a Layer 2 switching cross-connect. In this topology, Router A and Router C have Frame Relay connections to Router B, which is a Juniper Networks router. Circuit cross-connect (CCC) allows you to configure Router B to act as a Frame Relay (Layer 2) switch.

To configure Router B to act as a Frame Relay switch, you configure a circuit from Router A to Router C that passes through Router B, effectively configuring Router B as a Frame Relay switch with respect to these routers. This configuration allows Router B to transparently switch packets (frames) between Router A and Router C without regard to the packets' contents or the Layer 3 protocols. The only processing that Router B performs is to translate DLCI 600 to 750.

**Figure 73: Layer 2 Switching Cross-Connect**

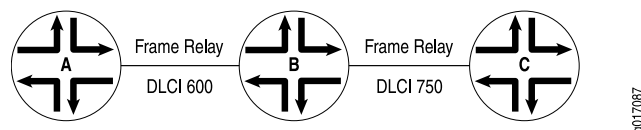

If the Router A-to-Router B and Router B-to-Router C circuits were PPP, for example, the Link Control Protocol and Network Control Protocol exchanges occur between Router A and Router C. These messages are handled transparently by Router B, allowing Router A and Router C to use various PPP options (such as header or address compression and authentication) that Router B might not support. Similarly, Router A and Router C exchange keepalives, providing circuit-to-circuit connectivity status.

You can configure Layer 2 switching cross-connects on PPP, Cisco HDLC, Frame Relay, Ethernet, and ATM circuits. In a single cross-connect, only like interfaces can be connected.

To configure Layer 2 switching cross-connects, you must configure the following on the router that is acting as the switch (Router B in [Figure 73 on page 743](#)):

- [Configuring the CCC Encapsulation for Layer 2 Switching Cross-Connects on page 744](#)
- [Configuring the CCC Connection for Layer 2 Switching Cross-Connects on page 748](#)
- [Configuring MPLS for Layer 2 Switching Cross-Connects on page 748](#)
- [Example: Configuring a Layer 2 Switching Cross-Connect on page 749](#)

## Configuring the CCC Encapsulation for Layer 2 Switching Cross-Connects

To configure Layer 2 switching cross-connects, configure the CCC encapsulation on the router that is acting as the switch (Router B in [Figure 73 on page 743](#)).



**NOTE:** You cannot configure families on CCC interfaces; that is, you cannot include the family statement at the [edit interfaces *interface-name* unit *logical-unit-number*] hierarchy level.

For instructions for configuring the encapsulation for Layer 2 switching cross-connects, see the following sections:

- [Configuring ATM Encapsulation for Layer 2 Switching Cross-Connects on page 744](#)
- [Configuring Ethernet Encapsulation for Layer 2 Switching Cross-Connects on page 745](#)
- [Configuring Ethernet VLAN Encapsulation for Layer 2 Switching Cross-Connects on page 745](#)
- [Configuring Aggregated Ethernet Encapsulation for Layer 2 Switching Cross-Connects on page 746](#)
- [Configuring Frame Relay Encapsulation for Layer 2 Switching Cross-Connects on page 747](#)
- [Configuring PPP and Cisco HDLC Encapsulation for Layer 2 Switching Cross-Connects on page 748](#)

---

## Configuring ATM Encapsulation for Layer 2 Switching Cross-Connects

For ATM circuits, specify the encapsulation when configuring the virtual circuit (VC). Configure each VC as a circuit or a regular logical interface by including the following statements:

```
at-fpc/pic/port {
  atm-options {
    vpi vpi-identifier maximum-vcs maximum-vcs;
  }
  unit logical-unit-number {
    encapsulation encapsulation-type;
    point-to-point; # Default interface type
    vci vpi-identifier.vci-identifier;
```

```
}
}
```

You can include these statements at the following hierarchy levels:

- [edit interfaces]
- [edit logical-systems *logical-system-name* interfaces]

### Configuring Ethernet Encapsulation for Layer 2 Switching Cross-Connects

For Ethernet circuits, specify **ethernet-ccc** in the **encapsulation** statement. This statement configures the entire physical device. For these circuits to work, you must also configure a logical interface (unit 0).

Ethernet interfaces with standard Tag Protocol Identifier (TPID) tagging can use Ethernet CCC encapsulation. On M Series Multiservice Edge Routers, except the M320, one-port Gigabit Ethernet, two-port Gigabit Ethernet, four-port Gigabit Ethernet, and four-port Fast Ethernet PICs can use Ethernet CCC encapsulation. On T Series Core Routers and M320 routers, one-port Gigabit Ethernet and two-port Gigabit Ethernet PICs installed in FPC2 can use Ethernet CCC encapsulation. When you use this encapsulation type, you can configure the **ccc** family only.

```
fe-fpc/pic/port {
  encapsulation ethernet-ccc;
  unit 0;
}
```

You can include these statements at the following hierarchy levels:

- [edit interfaces]
- [edit logical-systems *logical-system-name* interfaces]

### Configuring Ethernet VLAN Encapsulation for Layer 2 Switching Cross-Connects

An Ethernet virtual LAN (VLAN) circuit can be configured using either the **vlan-ccc** or **extended-vlan-ccc** encapsulation. If you configure the **extended-vlan-ccc** encapsulation on the physical interface, you cannot configure the **inet** family on the logical interfaces. Only the **ccc** family is allowed. If you configure the **vlan-ccc** encapsulation on the physical interface, both the **inet** and **ccc** families are supported on the logical interfaces. Ethernet interfaces in VLAN mode can have multiple logical interfaces.

For encapsulation type **vlan-ccc**, VLAN IDs from 512 through 4094 are reserved for CCC VLANs. For the **extended-vlan-ccc** encapsulation type, all VLAN IDs 1 and higher are valid. VLAN ID 0 is reserved for tagging the priority of frames.



**NOTE:** Some vendors use the proprietary TPIDs 0x9100 and 0x9901 to encapsulate a VLAN-tagged packet into a VLAN-CCC tunnel to interconnect a geographically separated metro Ethernet network. By configuring the **extended-vlan-ccc** encapsulation type, a Juniper Networks router can accept all three TPIDs (0x8100, 0x9100, and 0x9901).

Configure an Ethernet VLAN circuit with the **vlan-ccc** encapsulation as follows:

```
interfaces {  
  type-fpc/pic/port {  
    vlan-tagging;  
    encapsulation vlan-ccc;  
    unit logical-unit-number {  
      encapsulation vlan-ccc;  
      vlan-id vlan-id;  
    }  
  }  
}
```

You can configure these statements at the following hierarchy levels:

- **[edit interfaces]**
- **[edit logical-systems *logical-system-name* interfaces]**

Configure an Ethernet VLAN circuit with the **extended-vlan-ccc** encapsulation statement as follows:

```
interfaces {  
  type-fpc/pic/port {  
    vlan-tagging;  
    encapsulation extended-vlan-ccc;  
    unit logical-unit-number {  
      vlan-id vlan-id;  
      family ccc;  
    }  
  }  
}
```

You can configure these statements at the following hierarchy levels:

- **[edit interfaces]**
- **[edit logical-systems *logical-system-name* interfaces]**

Whether you configure the encapsulation as **vlan-ccc** or **extended-vlan-ccc**, you must enable VLAN tagging by including the **vlan-tagging** statement.

### Configuring Aggregated Ethernet Encapsulation for Layer 2 Switching Cross-Connects

---

You can configure aggregated Ethernet interfaces for CCC connections and for Layer 2 virtual private networks (VPNs).

Aggregated Ethernet interfaces configured with VLAN tagging can be configured with multiple logical interfaces. The only encapsulation available for aggregated Ethernet logical interfaces is **vlan-ccc**. When you configure the **vlan-id** statement, you are limited to VLAN IDs 512 through 4094.

Aggregated Ethernet interfaces configured without VLAN tagging can be configured only with the **ethernet-ccc** encapsulation. All untagged Ethernet packets received are forwarded based on the CCC parameters.



To configure aggregated Ethernet interfaces for CCC connections, include the **ae0** statement at the **[edit interfaces]** hierarchy level:

```
[edit interfaces]
ae0 {
  encapsulation (ethernet-ccc | extended-vlan-ccc | vlan-ccc);
  vlan-tagging;
  aggregated-ether-options {
    minimum-links links;
    link-speed speed;
  }
  unit logical-unit-number {
    encapsulation vlan-ccc;
    vlan-id identifier;
    family ccc;
  }
}
```

Be aware of the following limitations when configuring CCC connections over aggregated Ethernet interfaces:

- If you configured load balancing between child links, be aware that a different hash key is used to distribute packets among the child links. Standard aggregated interfaces have family inet configured. An IP version 4 (IPv4) hash key (based on the Layer 3 information) is used to distribute packets among the child links. A CCC connection over an aggregated Ethernet interface has family ccc configured instead. Instead of an IPv4 hash key, an MPLS hash key (based on the destination media access control [MAC] address) is used to distributed packets among the child links.
- The extended-vlan-ccc encapsulation is not supported on the 12-port Fast Ethernet PIC and the 48-port Fast Ethernet PIC.
- The Junos OS does not support the Link Aggregation Control Protocol (LACP) when an aggregated interface is configured as a VLAN (with vlan-ccc encapsulation). LACP can be configured only when the aggregated interface is configured with the ethernet-ccc encapsulation.

For more information about how to configure aggregated Ethernet interfaces, see the *Junos OS Network Interfaces Library for Routing Devices*.

### Configuring Frame Relay Encapsulation for Layer 2 Switching Cross-Connects

For Frame Relay circuits, specify the encapsulation when configuring the DLCI. Configure each DLCI as a circuit or a regular logical interface. The DLCI for regular interfaces must be from 1 through 511. For CCC interfaces, it must be from 512 through 4094.

```
interfaces {
  type-fpc/pic/port {
    unit logical-unit-number {
      dlci dlci-identifier;
      encapsulation encapsulation-type;
      point-to-point; # Default interface type
    }
  }
}
```

You can configure these statements at the following hierarchy levels:

- [edit interfaces]
- [edit logical-systems *logical-system-name* interfaces]

### Configuring PPP and Cisco HDLC Encapsulation for Layer 2 Switching Cross-Connects

---

For PPP and Cisco HDLC circuits, specify the encapsulation in the **encapsulation** statement. This statement configures the entire physical device. For these circuits to work, you must configure a logical interface (unit 0).

```
interfaces type-fpc/pic/port {  
  encapsulation encapsulation-type;  
  unit 0;  
}
```

You can configure these statements at the following hierarchy levels:

- [edit interfaces *type-fpc/pic/port*]
- [edit logical-systems *logical-system-name* interfaces *type-fpc/pic/port*]

### Configuring the CCC Connection for Layer 2 Switching Cross-Connects

To configure Layer 2 switching cross-connects, define the connection between the two circuits by including the **interface-switch** statement. You configure this connection on the router that is acting as the switch (Router B in [Figure 73 on page 743](#)). The connection joins the interface that comes from the circuit's source to the interface that leads to the circuit's destination. When you specify the interface names, include the logical portion of the name, which corresponds to the logical unit number. The cross-connect is bidirectional, so packets received on the first interface are transmitted out the second interface, and those received on the second interface are transmitted out the first.

```
interface-switch connection-name {  
  interface interface-name.unit-number;  
  interface interface-name.unit-number;  
}
```

You can include this statement at the following hierarchy levels:

- [edit protocols connections]
- [edit logical-systems *logical-system-name* protocols connections]

### Configuring MPLS for Layer 2 Switching Cross-Connects

For Layer 2 switching cross-connects to work, you must enable MPLS on the router by including at least the following statements. This minimum configuration enables MPLS on a logical interface for the switching cross-connect.

Include the **family mpls** statement:

```
family mpls;
```

You can configure this statement at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number*]
- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number*]

You can then specify this logical interface in the MPLS protocol configuration:

```
mpls {
  interface interface-name; # Required to enable MPLS on the interface
}
```


You can configure these statements at the following hierarchy levels:

- [edit protocols]
- [edit logical-systems *logical-system-name* protocols]

### Example: Configuring a Layer 2 Switching Cross-Connect

Configure a full-duplex Layer 2 switching cross-connect between Router A and Router C, using a Juniper Networks router, Router B, as the virtual switch. See the topology in [Figure 74 on page 749](#) and [Figure 75 on page 750](#).

Figure 74: Topology of a Frame Relay Layer 2 Switching Cross-Connect

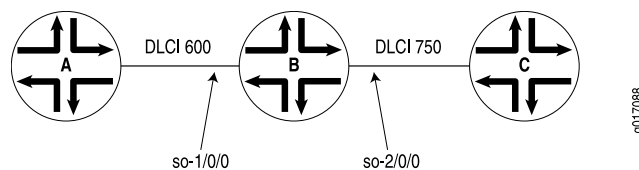


```
[edit]
interfaces {
  so-1/0/0 {
    encapsulation frame-relay-ccc;
    unit 1 {
      point-to-point;
      encapsulation frame-relay-ccc;
      dlci 600;
    }
  }
  so-2/0/0 {
    encapsulation frame-relay-ccc;
    unit 2 {
      point-to-point;
      encapsulation frame-relay-ccc;
      dlci 750;
    }
  }
}
protocols {
  connections {
    interface-switch router-a-to-router-c {
      interface so-1/0/0.1;
    }
  }
}
```

```

        interface so-2/0/0.2;
    }
}
mpls {
    interface all;
}
}

```

Figure 75: Sample Topology of a VLAN Layer 2 Switching Cross-Connect

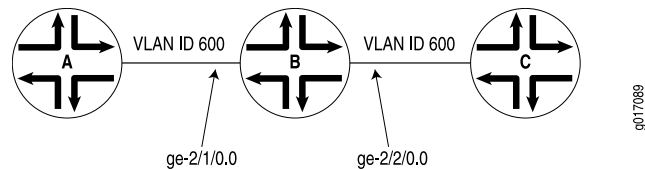

```


[edit]
interfaces {
    ge-2/1/0 {
        vlan-tagging;
        encapsulation vlan-ccc;
        unit 0 {
            encapsulation vlan-ccc;
            vlan-id 600;
        }
    }
    ge-2/2/0 {
        vlan-tagging;
        encapsulation vlan-ccc;
        unit 0 {
            encapsulation vlan-ccc;
            vlan-id 600;
        }
        unit 1 {
            family inet {
                vlan-id 1;
                address 10.9.200.1/24;
            }
        }
    }
}
protocols {
    mpls {
        interface all;
    }
    connections {
        interface-switch layer2-sw {
            interface ge-2/1/0.0;
            interface ge-2/2/0.0;
        }
    }
}
}

```

## Configuring MPLS LSP Tunnel Cross-Connects Using CCC

MPLS tunnel cross-connects between interfaces and LSPs allow you to connect two distant interface circuits of the same type by creating MPLS tunnels that use LSPs as the conduit. The topology in [Figure 76 on page 751](#) illustrates an MPLS LSP tunnel cross-connect. In this topology, two separate networks, in this case ATM access networks, are connected through an IP backbone. CCC allows you to establish an LSP tunnel between the two domains. With LSP tunneling, you tunnel the ATM traffic from one network across a SONET backbone to the second network by using an MPLS LSP.

**Figure 76: MPLS Tunnel Cross-Connect**

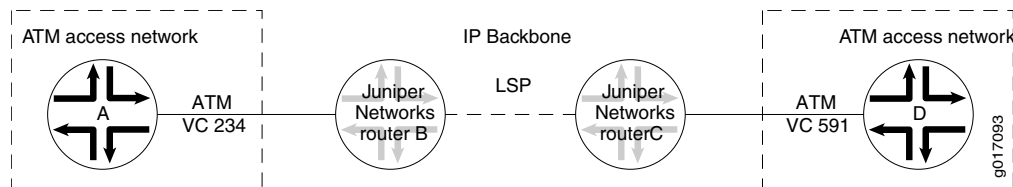

When traffic from Router A (VC 234) reaches Router B, it is encapsulated and placed into an LSP, which is sent through the backbone to Router C. At Router C, the label is removed, and the packets are placed onto the ATM permanent virtual circuit (PVC) (VC 591) and sent to Router D. Similarly, traffic from Router D (VC 591) is sent over an LSP to Router B, then placed on VC 234 to Router A.

You can configure LSP tunnel cross-connect on PPP, Cisco HDLC, Frame Relay, and ATM circuits. In a single cross-connect, only like interfaces can be connected.

When you use MPLS tunnel cross-connects to support IS-IS, you must ensure that the LSP's maximum transmission unit (MTU) can, at a minimum, accommodate a 1492-octet IS-IS protocol data unit (PDU) in addition to the link-level overhead associated with the technology being connected.

For the tunnel cross-connects to work, the IS-IS frame size on the edge routers (Routers A and D in [Figure 77 on page 754](#)) must be smaller than the LSP's MTU.



**NOTE:** Frame size values do not include the frame check sequence (FCS) or delimiting flags.

To determine the LSP MTU required to support IS-IS, use the following calculation:

$$\text{IS-IS MTU (minimum 1492, default 1497) + frame overhead + 4 (MPLS shim header) = Minimum LSP MTU}$$

The framing overhead varies based on the encapsulation being used. The following lists the IS-IS encapsulation overhead values for various encapsulations:

- ATM
  - AAL5 multiplex—8 bytes (RFC 1483)

- VC multiplex—0 bytes
- Frame Relay
  - Multiprotocol—2 bytes (RFCs 1490 and 2427)
  - VC multiplex—0 bytes
- HDLC—4 bytes
- PPP—4 bytes
- VLAN—21 bytes (802.3/LLC)

For IS-IS to work over VLAN-CCC, the LSP's MTU must be at least 1513 bytes (or 1518 for 1497-byte PDUs). If you increase the size of a Fast Ethernet MTU above the default of 1500 bytes, you might need to explicitly configure jumbo frames on intervening equipment.

To modify the MTU, include the **mtu** statement when configuring the logical interface family at the **[edit interfaces *interface-name* unit *logical-unit-number* encapsulation *family*]** hierarchy level. For more information about setting the MTU, see the *Junos OS Network Interfaces Library for Routing Devices*.

To configure an LSP tunnel cross-connect, you must configure the following on the interdomain router (Router B in [Figure 77 on page 754](#)):

- [Configuring the CCC Encapsulation for LSP Tunnel Cross-Connects on page 752](#)
- [Configuring the CCC Connection for LSP Tunnel Cross-Connects on page 753](#)
- [Example: Configuring an LSP Tunnel Cross-Connect on page 754](#)

## Configuring the CCC Encapsulation for LSP Tunnel Cross-Connects

To configure LSP tunnel cross-connects, you must configure the CCC encapsulation on the ingress and egress routers (Router B and Router C, respectively, in [Figure 77 on page 754](#)).



**NOTE:** You cannot configure families on CCC interfaces; that is, you cannot include the **family** statement at the **[edit interfaces *interface-name* unit *logical-unit-number*]** hierarchy level.

For PPP or Cisco HDLC circuits, include the **encapsulation** statement to configure the entire physical device. For these circuits to work, you must configure logical unit 0 on the interface.

```
type-fpc/pic/port {
  encapsulation (ppp-ccc | cisco-hdlc-ccc);
  unit 0;
}
```

You can include these statements at the following hierarchy levels:

- **[edit interfaces]**

- [edit logical-systems *logical-system-name* interfaces]

For ATM circuits, specify the encapsulation when configuring the VC by including the following statements. For each VC, you configure whether it is a circuit or a regular logical interface.

```
at-fpc/pic/port {
  atm-options {
    vpi vpi-identifier maximum-vcs maximum-vcs;
  }
  unit logical-unit-number {
    point-to-point; # Default interface type
    encapsulation atm-ccc-vc-mux;
    vci vpi-identifier.vci-identifier;
  }
}
```

You can include these statements at the following hierarchy levels:

- [edit interfaces]
- [edit logical-systems *logical-system-name* interfaces]

For Frame Relay circuits, include the following statements to specify the encapsulation when configuring the DLCI. For each DLCI, you configure whether it is a circuit or a regular logical interface. The DLCI for regular interfaces must be in the range 1 through 511. For CCC interfaces, it must be in the range 512 through 1022.

```
type-fpc/pic/port {
  encapsulation frame-relay-ccc;
  unit logical-unit-number {
    point-to-point; # default interface type
    encapsulation frame-relay-ccc;
    dlci dlci-identifier;
  }
}
```

You can include these statements at the following hierarchy levels:

- [edit interfaces]
- [edit logical-systems *logical-system-name* interfaces]

For more information about the **encapsulation** statement, see the *Junos OS Network Interfaces Library for Routing Devices*.

## Configuring the CCC Connection for LSP Tunnel Cross-Connects

To configure LSP tunnel cross-connects, include the **remote-interface-switch** statement to define the connection between the two circuits on the ingress and egress routers (Router B and Router C, respectively, in [Figure 77 on page 754](#)). The connection joins the interface or LSP that comes from the circuit's source to the interface or LSP that leads to the circuit's destination. When you specify the interface name, include the logical portion of the name, which corresponds to the logical unit number. For the cross-connect to be bidirectional, you must configure cross-connects on two routers.

```

remote-interface-switch connection-name {
  interface interface-name.unit-number;
  transmit-lsp label-switched-path;
  receive-lsp label-switched-path;
}

```


You can include these statements at the following hierarchy levels:

- [edit protocols connections]
- [edit logical-systems *logical-system-name* protocols connections]

### Example: Configuring an LSP Tunnel Cross-Connect

Configure a full-duplex MPLS LSP tunnel cross-connect from Router A to Router D, passing through Router B and Router C. See the topology in [Figure 77 on page 754](#).

Figure 77: Example Topology of MPLS LSP Tunnel Cross-Connect

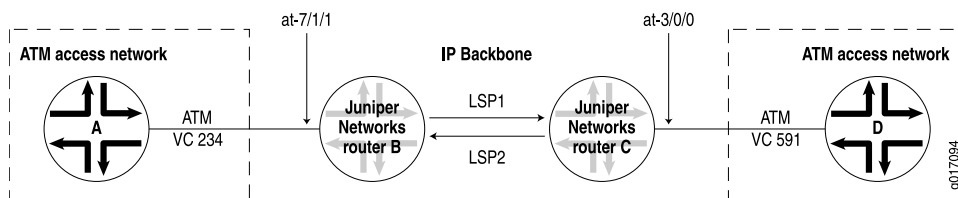

On Router B:

```

[edit]
interfaces {
  at-7/1/1 {
    atm-options {
      vpi 1 maximum-vcs 600;
    }
    unit 1 {
      point-to-point; # default interface type
      encapsulation atm-ccc-vc-mux;
      vci 1.234;
    }
  }
}
protocols {
  connections {
    remote-interface-switch router-b-to-router-c {
      interface at-7/1/1.1;
      transmit-lsp lsp1;
      receive-lsp lsp2;
    }
  }
}

```

On Router C:

```

[edit]
interfaces {
  at-3/0/0 {
    atm-options {

```



```

    vpi 2 maximum-vcs 600;
  }
  unit 2 {
    point-to-point; # default interface type
    encapsulation atm-ccc-vc-mux;
    vci 2.591;
  }
}
protocols {
  connections {
    remote-interface-switch router-b-to-router-c {
      interface at-3/0/0.2;
      transmit-lsp lsp2;
      receive-lsp lsp1;
    }
  }
}

```

## Configuring TCC

This section describes how to configure translational cross-connect (TCC). Extensive examples on how to configure TCC for interface switching and for Layer 2.5 VPNs are available in the *Junos OS, Release 15.1*.

To configure TCC, you must perform the following tasks on the router that is acting as the switch:

- [Configuring the Encapsulation for Layer 2 Switching TCCs on page 755](#)
- [Configuring the Connection for Layer 2 Switching TCCs on page 759](#)
- [Configuring MPLS for Layer 2 Switching TCCs on page 759](#)

### Configuring the Encapsulation for Layer 2 Switching TCCs

To configure a Layer 2 switching TCC, specify the TCC encapsulation on the desired interfaces of the router that is acting as the switch.



**NOTE:** You cannot configure standard protocol families on TCC or CCC interfaces. Only the CCC family is allowed on CCC interfaces, and only the TCC family is allowed on TCC interfaces.

For Ethernet circuits and Ethernet extended VLAN circuits, you must also configure the Address Resolution Protocol (ARP). See [“Configuring ARP for Ethernet and Ethernet Extended VLAN Encapsulations” on page 758](#).

- [Configuring PPP and Cisco HDLC Encapsulation for Layer 2 Switching TCCs on page 756](#)
- [Configuring ATM Encapsulation for Layer 2 Switching TCCs on page 756](#)
- [Configuring Frame Relay Encapsulation for Layer 2 Switching TCCs on page 756](#)
- [Configuring Ethernet Encapsulation for Layer 2 Switching TCCs on page 757](#)

- [Configuring Ethernet Extended VLAN Encapsulation for Layer 2 Switching TCCs on page 757](#)
- [Configuring ARP for Ethernet and Ethernet Extended VLAN Encapsulations on page 758](#)

### [Configuring PPP and Cisco HDLC Encapsulation for Layer 2 Switching TCCs](#)

---

For PPP and Cisco HDLC circuits, configure the encapsulation type for the entire physical device by specifying the appropriate value for the **encapsulation** statement. For these circuits to work, you must also configure the logical interface **unit 0**.

```
encapsulation (ppp-tcc | cisco-hdlc-tcc);
unit 0{...}
```

You can include these statements at the following hierarchy levels:

- [edit interfaces *interface-name*]
- [edit logical-systems *logical-system-name* interfaces *interface-name*]

### [Configuring ATM Encapsulation for Layer 2 Switching TCCs](#)

---

For ATM circuits, configure the encapsulation type by specifying the appropriate value for the **encapsulation** statement in the virtual circuit (VC) configuration. Specify whether each VC is a circuit or a regular logical interface.

```
atm-options {
  vpi vpi-identifier maximum-vcs maximum-vcs;
}
unit logical-unit-number {
  encapsulation (atm-tcc-vc-mux | atm-tcc-snap);
  point-to-point;
  vci vpi-identifier.vci-identifier;
}
```

You can include these statements at the following hierarchy levels:

- [edit interfaces *at-fpc/pic/port*]
- [edit logical-systems *logical-system-name* interfaces *at-fpc/pic/port*]

### [Configuring Frame Relay Encapsulation for Layer 2 Switching TCCs](#)

---

For Frame Relay circuits, configure the encapsulation type by specifying the value **frame-relay-tcc** for the **encapsulation** statement when configuring the data-link connection identifier (DLCI). You configure each DLCI as a circuit or a regular logical interface. The DLCI for regular interfaces must be in the range from 1 through 511, but for TCC and CCC interfaces it must be in the range from 512 through 1022.

```
encapsulation frame-relay-tcc;
unit logical-unit-number {
  dlci dlci-identifier;
  encapsulation frame-relay-tcc;
  point-to-point;
}
```

You can include these statements at the following hierarchy levels:

- [edit interfaces *interface-name*]
- [edit logical-systems *logical-system-name* interfaces *interface-name*]

### Configuring Ethernet Encapsulation for Layer 2 Switching TCCs

For Ethernet TCC circuits, configuring the encapsulation type for the entire physical device by specifying the value **ethernet-tcc** for the **encapsulation** statement.

You must also specify static values for a remote address and a proxy address at the [edit interfaces *interface-name* unit *unit-number* family **tcc**] or [edit logical-systems *logical-system-name* interfaces *interface-name* unit *unit-number* family **tcc**] hierarchy level.

The remote address is associated with the TCC switching router's Ethernet neighbor; in the **remote** statement you must specify both the IP address and the media access control (MAC) address of the Ethernet neighbor. The proxy address is associated with the TCC router's other neighbor connected by the unlike link; in the **proxy** statement you must specify the IP address of the non-Ethernet neighbor.

You can configure Ethernet TCC encapsulation for the interfaces on 1-port Gigabit Ethernet, 2-port Gigabit Ethernet, 4-port Fast Ethernet, and 4-port Gigabit Ethernet PICs.

```
encapsulation ethernet-tcc;
unit logical-unit-number {
  family tcc {
    proxy {
      inet-address ip-address;
    }
    remote {
      inet-address ip-address;
      mac-address mac-address;
    }
  }
}
```

You can include these statements at the following hierarchy levels:

- [edit interfaces (fe | ge)-*fpc/pic/port*]
- [edit logical-systems *logical-system-name* interfaces (fe | ge)-*fpc/pic/port*]



**NOTE:** For Ethernet circuits, you must also configure the Address Resolution Protocol (ARP). See “Configuring ARP for Ethernet and Ethernet Extended VLAN Encapsulations” on page 758.

### Configuring Ethernet Extended VLAN Encapsulation for Layer 2 Switching TCCs

For Ethernet extended VLAN circuits, configure the encapsulation type for the entire physical device by specifying the value **extended-vlan-tcc** for the **encapsulation** statement.

You must also enable VLAN tagging. Ethernet interfaces in VLAN mode can have multiple logical interfaces. With encapsulation type **extended-vlan-tcc**, all VLAN IDs from 0 through

4094 are valid, up to a maximum of 1024 VLANs. As with Ethernet circuits, you must also specify a proxy address and a remote address at the `[edit interfaces interface-name unit logical-unit-number family tcc]` or `[edit logical-systems logical-system-name interfaces interface-name unit unit-number family tcc]` hierarchy level (see “[Configuring Ethernet Encapsulation for Layer 2 Switching TCCs](#)” on page 757).

```
encapsulation extended-vlan-tcc;
vlan-tagging;
unit logical-unit-number {
  vlan-id identifier;
  family tcc;
  proxy {
    inet-address ip-address;
  }
  remote {
    inet-address ip-address;
    mac-address mac-address;
  }
}
```

You can configure these statements at the following hierarchy levels:

- `[edit interfaces interface-name]`
- `[edit logical-systems logical-system-name interfaces interface-name]`



**NOTE:** For Ethernet extended VLAN circuits, you must also configure the Address Resolution Protocol (ARP). See “[Configuring ARP for Ethernet and Ethernet Extended VLAN Encapsulations](#)” on page 758.

### Configuring ARP for Ethernet and Ethernet Extended VLAN Encapsulations

For Ethernet and Ethernet extended VLAN circuits with TCC encapsulation, you must also configure ARP. Because TCC simply removes one Layer 2 header and adds another, the default form of dynamic ARP is not supported; you must configure static ARP.

Because remote and proxy addresses are specified on the router performing TCC switching, you must apply the static ARP statement to the Ethernet-type interfaces of the routers that connect to the TCC-switched router. The `arp` statement must specify the IP address and the MAC address of the remotely connected neighbor by use of the unlike Layer 2 protocol on the far side of the TCC switching router.

```
arp ip-address mac mac-address;
```

You can include this statement at the following hierarchy levels:

- `[edit interfaces interface-name unit logical-unit-number family inet address ip-address]`
- `[edit logical-systems logical-system-name interfaces interface-name unit logical-unit-number family inet address ip-address]`

## Configuring the Connection for Layer 2 Switching TCCs

You must configure the connection between the two circuits of the Layer 2 switching TCC on the router acting as the switch. The connection joins the interface coming from the circuit's source to the interface leading to the circuit's destination. When you specify the interface names, include the logical portion of the name, which corresponds to the logical unit number. The cross-connect is bidirectional, so packets received on the first interface are transmitted from the second interface, and those received on the second interface are transmitted from the first.

To configure a connection for a local interface switch, include the following statements:

```
interface-switch connection-name {
    interface interface-name.unit-number;
}
lsp-switch connection-name {
    transmit-lsp lsp-number;
    receive-lsp lsp-number;
}
```

You can include these statements at the following hierarchy levels:

- [edit protocols connections]
- [edit logical-systems *logical-system-name* protocols connections]

To configure a connection for a remote interface switch, include the following statements:

```
remote-interface-switch connection-name {
    interface interface-name.unit-number;
    interface interface-name.unit-number;
    transmit-lsp lsp-number;
    receive-lsp lsp-number;
}
```

You can include these statements at the following hierarchy levels:

- [edit protocols connections]
- [edit logical-systems *logical-system-name* protocols connections]

## Configuring MPLS for Layer 2 Switching TCCs

For a Layer 2 switching TCC to work, you must enable MPLS on the router by including at least the following statements. This minimum configuration enables MPLS on a logical interface for the switching cross-connect.

Include the **family mpls** statement:

```
family mpls;
```

You can configure this statement at the following hierarchy levels:

- [edit interfaces *interface-name* unit *logical-unit-number*]

- [edit logical-systems *logical-system-name* interfaces *interface-name* unit *logical-unit-number*]

You can then specify this logical interface in the MPLS protocol configuration:

```
mpls {
  interface interface-name; # Required to enable MPLS on the interface
}
```

You can configure these statements at the following hierarchy levels:

- [edit protocols]
- [edit logical-systems *logical-system-name* protocols]



**NOTE:** MPLS LSP link protection does not support TCC.


## CCC and TCC Graceful Restart

CCC and TCC graceful restart allows Layer 2 connections between customer edge (CE) routers to restart gracefully. These Layer 2 connections are configured with the **remote-interface-switch** or **lsp-switch** statements. Because these CCC and TCC connections have an implicit dependency on RSVP LSPs, graceful restart for CCC and TCC uses the RSVP graceful restart capabilities.

RSVP graceful restart must be enabled on the PE routers and P routers to enable graceful restart for CCC and TCC. Also, because RSVP is used as the signaling protocol for signaling label information, the neighboring router must use helper mode to assist with the RSVP restart procedures.

Figure 78 on page 760 illustrates how graceful restart might work on a CCC connection between two CE routers.

**Figure 78: Remote Interface Switch Connecting Two CE Routers Using CCC**

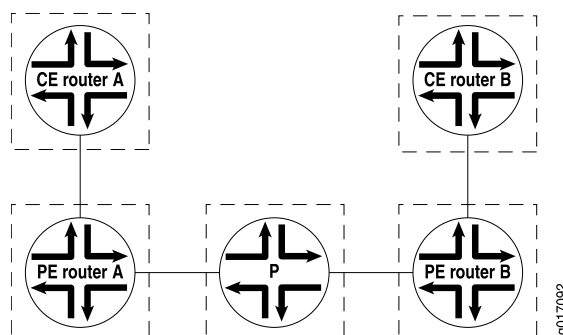

PE Router A is the ingress for the transmit LSP from PE Router A to PE Router B and the egress for the receive LSP from PE Router B to PE Router A. With RSVP graceful restart enabled on all the PE and P routers, the following occurs when PE router A restarts:

- PE Router A preserves the forwarding state associated with the CCC routes (those from CCC to MPLS and from MPLS to CCC).
- Traffic flows without disruption from CE router to CE router.
- After the restart, PE Router A preserves the label for the LSP for which PE Router A is the egress (the receive LSP, for example). The transmit LSP from PE Router A to PE Router B can derive new label mappings, but should not cause any traffic disruption.

## Configuring CCC and TCC Graceful Restart

---

To enable CCC and TCC graceful restart, include the **graceful-restart** statement:

```
graceful-restart;
```

You can include this statement at the following hierarchy levels:

- **[edit routing-options]**
- **[edit logical-systems *logical-system-name* routing-options]**

The **graceful-restart** statement enables graceful restart for all protocols supporting this feature on the router. For more information about graceful restart, see the *Junos OS Routing Protocols Library*.

CCC and TCC graceful restart depend on RSVP graceful restart. If you disable RSVP graceful restart, CCC and TCC graceful restart will not work. For more information about RSVP graceful restart, see [“RSVP Graceful Restart” on page 545](#) and [“Configuring RSVP Graceful Restart” on page 548](#).

## Configuring CCC Switching for Point-to-Multipoint LSPs

---

You can configure circuit cross-connect (CCC) between two circuits to switch traffic from interfaces to point-to-multipoint LSPs. This feature is useful for handling multicast or broadcast traffic (for example, a digital video stream).

To configure CCC switching for point-to-multipoint LSPs, you do the following:

- On the ingress provider edge (PE) router, you configure CCC to switch traffic from an incoming interface to a point-to-multipoint LSP.
- On the egress PE, you configure CCC to switch traffic from an incoming point-to-multipoint LSP to an outgoing interface.

The CCC connection for point-to-multipoint LSPs is unidirectional.

For more information about point-to-multipoint LSPs, see [“Point-to-Multipoint LSPs Overview” on page 309](#).

To configure a CCC connection for a point-to-multipoint LSP, complete the steps in the following sections:

- [Configuring the Point-to-Multipoint LSP Switch on Ingress PE Routers on page 762](#)
- [Configuring Local Receivers on a Point-to-Multipoint CCC LSP Switch on Ingress PE Routers on page 762](#)
- [Configuring the Point-to-Multipoint LSP Switch on Egress PE Routers on page 763](#)

## Configuring the Point-to-Multipoint LSP Switch on Ingress PE Routers

To configure the ingress PE router with a CCC switch for a point-to-multipoint LSP, include the **p2mp-transmit-switch** statement:

```
p2mp-transmit-switch switch-name {  
    input-interface input-interface-name.unit-number;  
    transmit-p2mp-lsp transmitting-lsp;  
}
```

You can include the **p2mp-transmit-switch** statement at the following hierarchy levels:

- **[edit protocols connections]**
- **[edit logical-systems *logical-system-name* protocols connections]**

***switch-name*** specifies the name of the ingress CCC switch.

**input-interface *input-interface-name.unit-number*** specifies the name of the ingress interface.

**transmit-p2mp-lsp *transmitting-lsp*** specifies the name of the transmitting point-to-multipoint LSP.

## Configuring Local Receivers on a Point-to-Multipoint CCC LSP Switch on Ingress PE Routers

In addition to configuring an incoming CCC interface to a point-to-multipoint LSP on an ingress PE router, you can also configure CCC to switch traffic on an incoming CCC interface to one or more outgoing CCC interfaces by configuring output interfaces as local receivers.

To configure output interfaces, include the **output-interface** statement at the **[edit protocols connections p2mp-transmit-switch *p2mp-transmit-switch-name*]** hierarchy level.

```
[edit protocols connections]  
p2mp-transmit-switch pc-ccc {  
    input-interface fe-1/3/1.0;  
    transmit-p2mp-lsp myp2mp;  
    output-interface [fe-1/3/2.0 fe-1/3/3.0];  
}
```

You can configure one or more output interfaces as local receivers on the ingress PE router using this statement.

Use the **show connections p2mp-transmit-switch (extensive | history | status)**, **show route ccc <interface-name> (detail | extensive)**, and **show route forwarding-table ccc**



`<interface-name> (detail | extensive)` commands to view details of the local receiving interfaces on the ingress PE router.

## Configuring the Point-to-Multipoint LSP Switch on Egress PE Routers

To configure the CCC switch for a point-to-multipoint LSP on the egress PE router, include the `p2mp-receive-switch` statement.

```
p2mp-receive-switch switch-name {  
    output-interface [ output-interface-name.unit-number ];  
    receive-p2mp-lsp receptive-lsp;  
}
```

You can include this statement at the following hierarchy levels:

- `[edit protocols connections]`
- `[edit logical-systems logical-system-name protocols connections]`

*switch-name* specifies the name of the egress CCC switch.

`output-interface [ output-interface-name.unit-number ]` specifies the name of one or more egress interfaces.

`receive-p2mp-lsp receptive-lsp` specifies the name of the receptive point-to-multipoint LSP.



## PART 6

# Configuring GMPLS

- [GMPLS Overview on page 767](#)
- [Configuring GMPLS on page 773](#)
- [Using a Hierarchy of RSVP LSPs to Tunnel Multiple RSVP LSPs over a Single RSVP LSP on page 819](#)



## CHAPTER 18

# GMPLS Overview

- [Introduction to GMPLS on page 767](#)
- [GMPLS Terms and Acronyms on page 768](#)
- [Supported GMPLS Standards on page 769](#)
- [GMPLS Operation on page 770](#)
- [GMPLS and OSPF on page 771](#)
- [GMPLS and CSPF on page 771](#)
- [GMPLS Features on page 772](#)

### Introduction to GMPLS

---

Traditional MPLS is designed to carry Layer 3 IP traffic using established IP-based paths and associating these paths with arbitrarily assigned labels. These labels can be configured explicitly by a network administrator, or can be dynamically assigned by means of a protocol such as LDP or RSVP.

GMPLS generalizes MPLS in that it defines labels for switching varying types of Layer 1, Layer 2, or Layer 3 traffic. GMPLS nodes can have links with one or more of the following switching capabilities:

- Fiber-switched capable (FSC)
- Lambda-switched capable (LSC)
- Time-division multiplexing (TDM) switched-capable (TSC)
- Packet-switched capable (PSC)

Label-switched paths (LSPs) must start and end on links with the same switching capability. For example, routers can establish packet-switched LSPs with other routers. The LSPs might be carried over a TDM-switched LSP between SONET add/drop multiplexers (ADMs), which in turn might be carried over a lambda-switched LSP.

The result of this extension of the MPLS protocol is an expansion in the number of devices that can participate in label switching. Lower-layer devices, such as OXCs and SONET ADMs, can now participate in GMPLS signaling and set up paths to transfer data. A router can participate in signaling optical paths across a transport network.

Two service models determine the visibility that a client node (a router, for example) has into the optical core or transport network. The first is through a user-to-network interface (UNI), which is often referred to as the overlay model. The second is known as the peer model. Juniper Networks supports both models.



**NOTE:** There is not necessarily a one-to-one correspondence between a physical interface and a GMPLS interface. If a GMPLS connection uses a nonchannelized physical connector, the GMPLS label can use the physical port ID. However, the label for channelized interfaces often is based on a channel or time slot. Consequently, it is best to refer to GMPLS labels as identifiers for a resource on a traffic engineering link.

To establish LSPs, GMPLS uses the following mechanisms:

- An out-of-band control channel and a data channel—RSVP messages for LSP setup are sent over an out-of-band control network. Once the LSP setup is complete and the path is provisioned, the data channel is up and can be used to carry traffic. The Link Management Protocol (LMP) is used to define and manage the data channels between a pair of nodes. You can optionally use LMP to establish and maintain LMP control channels between peers running the same Junos OS Release.
- RSVP-TE extensions for GMPLS—RSVP-TE is already designed to signal the setup of packet LSPs. This has been extended for GMPLS to be able to request path setup for various kinds of LSPs (nonpacket) and request labels like wavelengths, time slots, and fibers as label objects.
- Bidirectional LSPs—Data can travel both ways between GMPLS devices over a single path, so nonpacket LSPs are signaled to be bidirectional.

---

## GMPLS Terms and Acronyms

### F

**Forwarding adjacency**     A forwarding path for sending data between GMPLS-enabled devices.

### G

**Generalized MPLS (GMPLS)**     An extension to MPLS that allows data from multiple layers to be switched over label-switched paths (LSPs). GMPLS LSP connections are possible between similar Layer 1, Layer 2, and Layer 3 devices.

**GMPLS label**     Layer 3 identifiers, fiber port, time-division multiplexing (TDM) time slot, or dense wavelength-division multiplexing (DWDM) wavelength of a GMPLS-enabled device used as a next-hop identifier.

- GMPLS LSP types**      The four types of GMPLS LSPs are:
- Fiber-switched capable (FSC)—LSPs are switched between two fiber-based devices, such as optical cross-connects (OXCs) that operate at the level of individual fibers.
  - Lambda-switched capable (LSC)—LSPs are switched between two DWDM devices, such as OXCs that operate at the level of individual wavelengths.
  - TDM-switched capable (TDM)—LSPs are switched between two TDM devices, such as SONET ADMs.
  - Packet-switched capable (PSC)—LSPs are switched between two packet-based devices, such as routers or ATM switches.

## L

- Link Management Protocol**      A protocol used to define a forwarding adjacency between peers and to maintain and allocate resources on the traffic engineering links.

## T

- Traffic engineering link**      A logical connection between GMPLS-enabled devices. Traffic engineering links can have addresses or IDs and are associated with certain resources or interfaces. They also have certain attributes (encoding-type, switching capability, bandwidth, and so on). The logical addresses can be routable, although this is not required because they are acting as link identifiers. Each traffic engineering link represents a forwarding adjacency between a pair of devices.

## Supported GMPLS Standards

Junos OS substantially supports the following RFCs and Internet drafts, which define standards for Generalized MPLS (GMPLS).

- RFC 3471, *Generalized Multi-Protocol Label Switching (GMPLS) Signaling Functional Description*

Only the following features are supported:

- Bidirectional LSPs (upstream label only)
- Control channel separation
- Generalized label (suggested label only)
- Generalized label request (bandwidth encoding only)
- RFC 3473, *Generalized Multi-Protocol Label Switching (GMPLS) Signaling Resource Reservation Protocol-Traffic Engineering (RSVP-TE) Extensions*  
Only Section 9, "Fault Handling," is supported.
- RFC 4202, *Routing Extensions in Support of Generalized Multi-Protocol Label Switching*  
Only interface switching is supported.
- RFC 4206, *Label Switched Paths (LSP) Hierarchy with Generalized Multi-Protocol Label Switching (GMPLS) Traffic Engineering (TE)*

- Internet draft draft-ietf-ccamp-gmpls-rsvp-te-ason-02.txt, *Generalized MPLS (GMPLS) RSVP-TE Signalling in support of Automatically Switched Optical Network (ASON)* (expires January 2005)

- Internet draft draft-ietf-ccamp-gmpls-sonet-sdh-08.txt, *Generalized Multi-Protocol Label Switching Extensions for SONET and SDH Control*

Only S,U,K,L,M-format labels and SONET traffic parameters are supported.

- Internet draft draft-ietf-ccamp-lmp-10.txt, *Link Management Protocol (LMP)*

- Internet draft draft-ietf-ccamp-ospf-gmpls-extensions-12.txt, *OSPF Extensions in Support of Generalized Multi-Protocol Label Switching*

The following sub-TLV types for the Link type, link, value (TLV) are not supported:

- Link Local/Remote Identifiers (type 11)
- Link Protection Type (type 14)
- Shared Risk Link Group (SRLG) (type 16)

The features described in Section 2 of the draft, “Implications on Graceful Restart,” are also not supported.

The Interface Switching Capability Descriptor (type 15) sub-TLV type is implemented, but only for packet switching.

- Internet draft draft-ietf-mpls-bundle-04.txt, *Link Bundling in MPLS Traffic Engineering*

#### **Related Documentation**

- [Supported LDP Standards on page 578](#)
- [Supported MPLS Standards on page 20](#)
- [Supported RSVP Standards on page 490](#)
- [Accessing Standards Documents on the Internet](#)

---

## **GMPLS Operation**

The basic functionality of GMPLS requires close interaction between RSVP and LMP. It works in the following sequence:

1. LMP notifies RSVP of the new entities:
  - Traffic engineering link (forwarding adjacency)
  - Resources available for the traffic engineering link
  - Control peer
2. GMPLS extracts the LSP attributes from the configuration and requests RSVP to signal one or more specific paths, which are specified by the traffic engineering link addresses.
3. RSVP determines the local traffic engineering link, corresponding control adjacency and active control channel, and transmission parameters (such as IP destination). It



requests that LMP allocate a resource from the traffic engineering link with the specified attributes. If LMP finds a resource matching the attributes, label allocation succeeds. RSVP sends a PathMsg hop by hop until it reaches the target router.

4. When the target router receives the PathMsg, RSVP again requests that LMP allocate a resource based on the signaled parameters. If label allocation succeeds, the router sends back a ResvMsg.
5. If the signaling is successful, a bidirectional optical path is provisioned.

## GMPLS and OSPF

---

You can configure OSPF for GMPLS. OSPF is an interior gateway protocol (IGP) that routes packets within a single autonomous system (AS). OSPF uses link-state information to make routing decisions.

## GMPLS and CSPF

---

GMPLS introduces extra constraints for computing paths for GMPLS LSPs that use CSPF. These additional constraints affect the following link attributes:

- Signal type (minimum LSP bandwidth)
- Encoding type
- Switching type

These new constraints are populated in the traffic engineering database with the exchange of an interface-switching capability descriptor type, length, value (TLV) through an IGP.

The ignored constraints that are exchanged through the interface switching capability descriptor include:

- Maximum LSP bandwidth
- Maximum transmission unit (MTU)

The CSPF path computation is the same as in non-GMPLS environments, except that the links are also limited by GMPLS constraints.

Each link can have multiple interface-switching capability descriptors. All the descriptors are checked before a link is rejected.

The constraints are checked in the following order:

1. The signal type configured for the GMPLS LSP signifies the amount of bandwidth requested. If the desired bandwidth is less than the minimum LSP bandwidth, the interface-switching descriptor is rejected.
2. The encoding type of the link for the ingress and the egress interfaces should match. The encoding type is selected and stored at the ingress node after all the constraints are satisfied by the link and is used to select the link on the egress node.

3. The switching type of the links of the intermediate switches should match that of the GMPLS LSP specified in the configuration.

## GMPLS Features

---

The Junos OS includes the following GMPLS functionality:

- An out-of-band control plane makes it possible to signal LSP path setup.
- RSVP-TE extensions support additional objects beyond Layer 3 packets, such as ports, time slots, and wavelengths.
- The LMP protocol creates and maintains a database of traffic engineering links and peer information. Only the static version of this protocol is supported in the Junos OS. You can optionally configure LMP to establish and maintain LMP control channels between peers running the same Junos OS Release.
- Bidirectional LSPs are required between devices.
- Several GMPLS label types that are defined in RFC 3471, *Generalized MPLS—Signaling Functional Description*, such as MPLS, Generalized, SONET/SDH, Suggested, and Upstream, are supported. Generalized labels do not contain a type field, because the nodes should know from the context of their connection what type of label to expect.
- Traffic parameters facilitate GMPLS bandwidth encoding and SONET/SDH formatting.
- Other supported attributes include interface identification and errored interface identification, user-to-network (UNI)-style signaling, and secondary LSP paths.

# Configuring GMPLS

- [LMP Configuration Overview on page 773](#)
- [Configuring LMP Traffic Engineering Links on page 774](#)
- [Configuring LMP Peers on page 776](#)
- [Configuring RSVP and OSPF for LMP Peer Interfaces on page 781](#)
- [Configuring MPLS Paths for GMPLS on page 782](#)
- [Tracing LMP Traffic on page 783](#)
- [Configuring MPLS LSPs for GMPLS on page 784](#)
- [Gracefully Tearing Down GMPLS LSPs on page 786](#)
- [GMPLS RSVP-TE VLAN LSP Signaling Overview on page 788](#)
- [Example: Configuring GMPLS RSVP-TE VLAN LSP Signaling on page 794](#)

## LMP Configuration Overview

---

You need to configure the Link Management Protocol (LMP) to define the data channel connection and the control channel connection between devices. Include the following statements at the **[edit protocols link-management]** hierarchy level:

```
[edit protocols link-management]
peer peer-name {
  address address;
  control-channel control-channel-name;
  lmp-control-channel control-channel-interface {
    remote-address ip-address;
  }
  lmp-protocol {
    hello-dead-interval milliseconds;
    hello-interval milliseconds;
    retransmission-interval milliseconds;
    retry-limit number;
    passive;
  }
  te-link te-link-name;
}
te-link te-link-name {
  disable;
  interface interface-name {
    disable;
```

```

    local-address ip-address;
    remote-address ip-address;
    remote-id id-number;
}
label-switched-path lsp-name;
local-address ip-address;
remote-address ip-address;
remote-id id-number;
}
traceoptions {
  file filename <files number> <size size> <world-readable | no-world-readable>;
  flag flag <flag-modifier> <disable>;
}

```



**NOTE:** Although you can include GMPLS configuration statements at the [edit logical-systems *logical-system-name*] hierarchy level, GMPLS is not supported on logical systems.

For information about configuring LMP, see the following sections:

- [Configuring LMP Traffic Engineering Links on page 774](#)
- [Configuring LMP Peers on page 776](#)
- [Configuring RSVP and OSPF for LMP Peer Interfaces on page 781](#)
- [Configuring MPLS Paths for GMPLS on page 782](#)
- [Tracing LMP Traffic on page 783](#)

## Configuring LMP Traffic Engineering Links

An LMP traffic engineering link acts as a data channel connection between GMPLS devices.

To configure a traffic engineering link, include the **te-link** statement at the [edit protocols link-management] hierarchy level:

```

[edit protocols link-management]
te-link te-link-name {
  disable;
  interface interface-name {
    local-address ip-address;
    remote-address ip-address;
    remote-id id-number;
  }
  label-switched-path lsp-name;
  local-address ip-address;
  remote-address ip-address;
  remote-id id-number;
}

```

Complete the procedures in the following sections to configure an LMP traffic engineering link:

- [Configuring the Local IP Address for Traffic Engineering Links on page 775](#)
- [Configuring the Remote IP Address for Traffic Engineering Links on page 775](#)
- [Configuring the Remote ID for Traffic Engineering Links on page 776](#)

When you configure a traffic engineering link that contains interfaces for an LMP peer, you must also configure a control channel. However, no control channel is required for a traffic engineering link that contains an LSP. For information about configuring control channels, see [“Configuring LMP Peers” on page 776](#).

## Configuring the Local IP Address for Traffic Engineering Links

Use the **local-address** statement to configure the local IP address associated with the traffic engineering link.

We recommend that you configure an IP address subnet for your traffic engineering link addresses that is different from the subnet configured for your physical interfaces. This configuration enables you to identify which addresses are physical and which addresses belong to the traffic engineering link.

To configure the local IP address for the traffic engineering link, include the **local-address** statement:

```
te-link te-link-name {
  interface interface-name {
    local-address ip-address;
  }
  local-address ip-address;
}
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

## Configuring the Remote IP Address for Traffic Engineering Links

You need to specify the address of the remote end of the data channel for each traffic engineering link. Use the **remote-address** statement to configure the remote IP address.

We recommend that you configure an IP address subnet for your traffic engineering link addresses that is different from the subnet configured for your physical interfaces. This enables you to identify which addresses are physical and which addresses belong to the traffic engineering link.

To configure the remote IP address for the traffic engineering link, include the **remote-address** statement:

```
te-link te-link-name {
  interface interface-name {
    remote-address ip-address;
  }
  remote-address ip-address;
}
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

## Configuring the Remote ID for Traffic Engineering Links

The local ID for the traffic engineering link is automatically assigned by LMP. The port identifier and labels for the interfaces (resources) in the traffic engineering link are also assigned automatically. However, you need to explicitly configure the remote ID for the traffic engineering link and the remote ID traffic engineering link interface. The remote ID for the interface must be based on the post-ID assignment of the peer node. The remote IDs are needed for static mapping of remote labels to local labels.

Before you can obtain the remote IDs for the traffic engineering link and traffic engineering link interface on the peer node, you must first configure the LMP peer, as described in [“Configuring LMP Peers” on page 776](#). Once you have configured the LMP peer, you can obtain the traffic engineering link local ID and interface local ID by issuing the **show link-management te-link** command. Once you have these IDs, you can configure them as the remote IDs on the peer node.

To configure the remote ID for a traffic engineering link and for the traffic engineering link interface, include the **remote-id** statement:

```
te-link te-link-name {  
  interface interface-name {  
    remote-id id-number;  
  }  
  remote-id id-number;  
}
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.

---

## Configuring LMP Peers

You need to configure network peers for GMPLS. A peer is a network device that your router communicates with when setting up the control and data channels. The peer is often an optical cross-connect (OXC).

To configure an LMP peer name, include the **peer** statement at the **[edit protocols link-management]** hierarchy level:

```
peer peer-name {  
  address ip-address;  
  control-channel control-channel-interface;  
  lmp-control-channel control-channel-interface {  
    remote-address ip-address;  
  }  
  lmp-protocol {  
    hello-dead-interval milliseconds;  
    hello-interval milliseconds;  
    retransmission-interval milliseconds;  
    retry-limit number;  
    passive;  
  }  
}
```

```
te-link te-link-name;  
}
```

The following sections describe how to configure an LMP peer:

- [Configuring the ID for LMP Peers on page 777](#)
- [Configuring the Interface for Control Channels Between LMP Peers on page 777](#)
- [Configuring the LMP Control Channel Interface for the Peer on page 777](#)
- [Configuring the Remote IP Address for LMP Control Channels on page 778](#)
- [Configuring Hello Message Intervals for LMP Control Channels on page 779](#)
- [Controlling Message Exchange for LMP Control Channels on page 780](#)
- [Preventing the Local Peer from Initiating LMP Negotiation on page 780](#)
- [Associating Traffic Engineering Links with LMP Peers on page 780](#)
- [Disabling the Traffic Engineering Link for LMP Peers on page 781](#)

## Configuring the ID for LMP Peers

To configure the LMP peer ID, include the **address** statement at the **[edit protocols link-management peer *peer-name*]** hierarchy level. The default value for the LMP peer ID is the loopback address.

```
[edit protocols link-management peer peer-name]  
address ip-address;
```

## Configuring the Interface for Control Channels Between LMP Peers

You must configure one or more control channels between the LMP peers. The control channels must travel across either a point-to-point link or a tunnel.

To configure the interface for the control channel, include the **control-channel** statement at the **[edit protocols link-management peer *peer-name*]** hierarchy level:

```
[edit protocols link-management peer peer-name]  
control-channel [ interface-names ];
```

You can configure a generic routing encapsulation (GRE) interface (*gre-x/y/z*) for the control channel. This type of interface does not require a Tunnel PIC.



**NOTE:** You can configure GRE interfaces (*gre-x/y/z*) only for GMPLS control channels. GRE interfaces are not supported or configurable for other applications. For more information, see the *Junos OS Network Interfaces Library for Routing Devices*.

## Configuring the LMP Control Channel Interface for the Peer

In an environment that uses LMP to establish and maintain an LMP control channel between peers, you can configure a number of attributes associated with LMP. To configure the interface to be associated with the LMP control channel for the peer, include the **lmp-control-channel** statement:

**lmp-control-channel** *control-channel-interface*;

You can configure this statement at the following hierarchy levels:

- [edit protocols link-management **peer** *peer-name*]
- [edit logical-systems *logical-system-name* protocols link-management **peer** *peer-name*]

You can configure a GRE interface for the LMP control channel. This type of interface does not require a Tunnel PIC.



**NOTE:** You can configure GRE interfaces only for GMPLS control channels. GRE interfaces are not supported or configurable for other applications. For more information, see the *Junos OS Network Interfaces Library for Routing Devices*.

When this LMP control channel interface comes up, the peers use LMP to negotiate channel parameters and configure the control channel.

The local peer repeatedly sends a Config message to the remote peer. The Config message contains the local control channel ID, the local peer's node ID, a message ID, and a CONFIG object that includes hello message attributes (the hello interval and the hello dead interval).

The channel is activated when the remote peer responds with a ConfigAck message. The remote peer does so only when its own configured hello interval and hello dead interval match the values in the received Config message or the default values. If these values do not match, the remote peer responds with a ConfigNack message. The local peer logs this event and resends the Config message until the message retry limit is reached. When the message retry limit is reached, the local peer logs that event and restarts the configuration process.

## Configuring the Remote IP Address for LMP Control Channels

You need to specify the address of the remote end of the LMP control channel.

To configure the remote IP address for the LMP control channel, include the **remote-address** statement:

**remote-address** *address*;

You can configure this statement at the following hierarchy levels:

- [edit protocols link-management **peer** *peer-name* **lmp-control-channel** *control-channel-interface*]
- [edit logical-systems *logical-system-name* protocols link-management **peer** *peer-name* **lmp-control-channel** *control-channel-interface*]



## Configuring Hello Message Intervals for LMP Control Channels

Hello messages are exchanged between LMP peers to maintain the control channel after LMP has activated the control channel. The LMP control channel is considered to be up only when the hello negotiation is successful. Successful negotiation consists of the local peer sending a hello message to the remote peer and receiving a hello message in response.

The LMP peers continue to exchange hello messages after the LMP control channel is up in order to maintain the channel.

The hello interval specifies the interval between periodic hello messages. The hello dead interval specifies how long the local peer waits for a hello response before it declares the LMP control channel to be down. When the channel goes down, the local peer restarts the LMP control channel negotiation and configuration process.

You can specify a hello interval from 150 through 300,000 milliseconds. The default hello interval is 150 milliseconds.

You can specify a hello dead interval from 500 through 300,000 milliseconds. The default hello dead interval is 500 milliseconds.

To configure the attributes for hello messages exchanged between LMP peers, include the **hello-interval** and **hello-dead-interval** statements:

```
hello-dead-interval milliseconds;
hello-interval milliseconds;
```

You can configure these statements at the following hierarchy levels:

- [edit protocols link-management **peer peer-name lmp-protocol**]
- [edit logical-systems *logical-system-name* protocols link-management **peer peer-name lmp-protocol**]

When an LMP control channel comes up after a successful exchange of hello messages between LMP peers, LMP uses link property correlation to verify the traffic engineering and data link information on both sides of a link. To do so, the local peer sends a LinkSummary message for each traffic engineering link governed by the LMP control channel. The LinkSummary message contains information that characterizes the traffic engineering link and each data link in the traffic engineering link.

The local peer continues sending a LinkSummary message for each link until the remote peer responds with a LinkSummaryAck message or until the message retry limit is reached. When the message retry limit is reached, the local peer logs that event and restarts the link property correlation process.

When the remote peer receives a LinkSummary message, it examines its own link information. If this information agrees with that in the LinkSummary message, the remote peer responds with a LinkSummaryAck message. If the information is different, the remote peer responds with a LinkSummaryNack message.

## Controlling Message Exchange for LMP Control Channels

You can configure message attributes that control the exchange of LMP Config and LinkSummary messages. The retransmission interval specifies the interval between resubmitted LMP messages. The retry limit specifies how many times LMP sends a message before restarting the process.

You can specify a retransmission interval from 500 through 300,000 milliseconds. The default retransmission interval is 500 milliseconds.

You can specify a retry limit from 3 through 1000 attempts. The default number of retry attempts is three.

To configure attributes governing the exchange of LMP messages between peers, include the **retransmission-interval** and **retry-limit** statements:

```
retransmission-interval milliseconds;  
retry-limit number;
```

You can configure these statements at the following hierarchy levels:

- [edit protocols link-management **peer** *peer-name* **lmp-protocol**]
- [edit logical-systems *logical-system-name* protocols link-management **peer** *peer-name* **lmp-protocol**]

## Preventing the Local Peer from Initiating LMP Negotiation

You can specify that the local peer does not initiate LMP negotiation. Instead, the local peer waits for the remote peer to configure the LMP control channel.

To configure the local peer to wait for the remote peer to configure the LMP control channel, include the **passive** statement:

```
passive;
```

You can configure this statement at the following hierarchy levels:

- [edit protocols link-management **peer** *peer-name* **lmp-protocol**]
- [edit logical-systems *logical-system-name* protocols link-management **peer** *peer-name* **lmp-protocol**]

## Associating Traffic Engineering Links with LMP Peers

To specify the name of a traffic engineering link to be associated with this peer, include the **te-link** statement at the [edit protocols link-management **peer** *peer-name*] hierarchy level:

```
[edit protocols link-management peer peer-name]  
te-link te-link-name;
```

For information about how to configure a traffic engineering link, see [“Configuring LMP Traffic Engineering Links” on page 774](#).

## Disabling the Traffic Engineering Link for LMP Peers

To disable a specific traffic engineering link, include the **disable** statement:

```
disable;
```

You can configure this statement at the following hierarchy levels:

- [edit protocols link-management **te-link** *te-link-name*]
- [edit logical-systems *logical-system-name* protocols link-management **te-link** *te-link-name*]

## Configuring RSVP and OSPF for LMP Peer Interfaces

After you have configured the LMP peers as described in “Configuring LMP Peers” on page 776, add the peer interfaces to RSVP and OSPF. The peer interface name must match the peer name configured in LMP. Once the peer interfaces are added to the protocols, the traffic engineering link local and remote addresses can be signaled and advertised to peers like any other interface enabled for RSVP and OSPF. These addresses act as virtual interfaces for GMPLS.



**NOTE:** When adding the virtual peer interfaces to RSVP and OSPF, do not configure the corresponding physical control channel interface in either protocol. If you include the **interface all** statement, you must disable RSVP and OSPF protocols manually on the control channel interface.

To configure peer interfaces in RSVP and OSPF, complete the procedures in the following sections:

- [Configuring RSVP Signaling for LMP Peer Interfaces on page 781](#)
- [Configuring OSPF Routing for LMP Peer Interfaces on page 782](#)
- [Configuring the Hello Interval for LMP Peer Interfaces on page 782](#)

## Configuring RSVP Signaling for LMP Peer Interfaces

To configure RSVP signaling for LMP peers, configure the LMP peer interface by including the **peer-interface** statement at the [edit protocols **rsvp**] hierarchy level:

```
[edit protocols rsvp]
peer-interface peer-interface-name {
  (aggregate | no-aggregate);
  authentication-key key;
  disable;
  hello-interval seconds;
  (reliable | no-reliable);
}
```

The statements configured at the `[edit protocols rsvp peer-interface peer-interface-name]` hierarchy level have the same functionality as the statements configured at the `[edit protocols rsvp interface interface-name]` hierarchy level.

## Configuring OSPF Routing for LMP Peer Interfaces

To configure OSPF routing for LMP peers, configure the name of the LMP peer by including the `peer-interface` statement at the `[edit protocols ospf area area-number]` hierarchy level:

```
[edit protocols ospf area area-number]  
peer-interface peer-interface-name {  
  dead-interval seconds;  
  disable;  
  hello-interval seconds;  
  retransmit-interval seconds;  
  transit-delay seconds;  
}
```

For information about how to configure OSPF statements, see the *Junos OS Routing Protocols Library*.

## Configuring the Hello Interval for LMP Peer Interfaces

Hello packets are used to indicate to neighboring routers that the peer interface is still up and running. The hello interval must be the same for all routers on a shared logical IP network. You can specify a hello interval from 1 through 255 seconds. The default hello interval is normally 10 seconds. For nonbroadcast networks, the default hello interval is 120 seconds.

To specify how often the router sends hello packets out the peer interface, configure the `hello-interval` statement:

```
hello-interval seconds;
```

You can configure this statement at the following hierarchy levels:

- `[edit protocols ospf area area-number peer-interface peer-interface-name]`
- `[edit logical-systems logical-system-name protocols ospf area area-number peer-interface peer-interface-name]`

---

## Configuring MPLS Paths for GMPLS

As part of the configuration for GMPLS, you need to establish an MPLS path for each unique device connected through GMPLS. Configure the traffic engineering link remote address as the address at the `[edit protocols mpls path path-name]` hierarchy level. Constrained Shortest Path First (CSPF) is supported so you can choose either the `strict` or `loose` option with the address.

See “[LMP Configuration Overview](#)” on page 773 for information about how to obtain a traffic engineering link remote address.

To configure the MPLS path, include the `path` statement at the `[edit protocols mpls]` hierarchy level:

```
[edit protocols mpls]
path path-name {
  next-hop-address (strict | loose);
}
```

For information about how to configure MPLS paths, see [“Creating Named Paths” on page 60](#).

## Tracing LMP Traffic

To trace LMP protocol traffic, include the **traceoptions** statement at the **[edit protocols link-management]** hierarchy level:

```
[edit protocols link-management]
traceoptions {
  file filename <files number> <size size> <world-readable | no-world-readable>;
  flag flag <flag-modifier> <disable>;
}
```

Use the **file** statement to specify the name of the file that receives the output of the tracing operation. All files are placed in the directory `/var/log`.

The following trace flags display the operations associated with the sending and receiving of various LMP messages:

- **all**—Trace all available operations
- **hello-packets**—Trace hello packets on any LMP control channel
- **init**—Output from the initialization messages
- **packets**—Trace all packets other than hello packets on any LMP control channel
- **parse**—Operation of the parser
- **process**—Operation of the general configuration
- **route-socket**—Operation of route socket events
- **routing**—Operation of the routing protocols
- **server**—Server processing operations
- **show**—Servicing operations for **show** commands
- **state**—Trace state transitions of the LMP control channels and traffic engineering links

Each flag can carry one or more of the following flag modifiers:

- **detail**—Provide detailed trace information
- **receive**—Packets being received
- **send**—Packets being transmitted

## Configuring MPLS LSPs for GMPLS

---

To enable the proper GMPLS switching parameters, configure the label-switched path (LSP) attributes that are appropriate for your network connection. The default value for **switching-type** is **psc-1**, which is also appropriate for standard MPLS.

To configure the LSP attributes, include the **lsp-attributes** statement at the **[edit protocols mpls label-switched-path *lsp-name*]** hierarchy level:

```
[edit protocols mpls label-switched-path lsp-name]  
lsp-attributes {  
  encoding-type type;  
  gp-id gp-id;  
  signal-bandwidth type;  
  switching-type type;  
}
```

If you include the **no-cspf** statement in the label-switched path configuration, you must also configure primary and secondary paths, or the configuration cannot be committed.

The following sections describe how to configure each of the LSP attributes for a GMPLS LSP:

- [Configuring the Encoding Type on page 784](#)
- [Configuring the GPID on page 785](#)
- [Configuring the Signal Bandwidth Type on page 785](#)
- [Configuring GMPLS Bidirectional LSPs on page 785](#)
- [Allowing Nonpacket GMPLS LSPs to Establish Paths Through Routers Running Junos OS on page 786](#)

### Configuring the Encoding Type

You need to specify the encoding type of the payload carried by the LSP. It can be any of the following:

- **ethernet**—Ethernet
- **packet**—Packet
- **pdh**—Plesiochronous digital hierarchy (PDH)
- **sonet-sdh**—SONET/SDH

The default value is **packet**.

To configure the encoding type, include the **encoding-type** statement at the **[edit protocols mpls label-switched-path *lsp-name* lsp-attributes]** hierarchy level:

```
[edit protocols mpls label-switched-path lsp-name lsp-attributes]  
encoding-type type;
```

## Configuring the GPID

You need to specify the type of payload carried by the LSP. The payload is the type of packet underneath the MPLS label. The payload is specified by the generalized payload identifier (GPID).

You can specify the GPID with any of the following values:

- **hdlc**—High-Level Data Link Control (HDLC)
- **ethernet**—Ethernet
- **ipv4**—IP version 4 (default)
- **pos-scrambling-crc-16**—For interoperability with other vendors' equipment
- **pos-no-scrambling-crc-16**—For interoperability with other vendors' equipment
- **pos-scrambling-crc-32**—For interoperability with other vendors' equipment
- **pos-no-scrambling-crc-32**—For interoperability with other vendors' equipment
- **ppp**—Point-to-Point Protocol (PPP)

To configure the GPID, include the **gpid** statement at the **[edit protocols mpls label-switched-path *lsp-name* lsp-attributes]** hierarchy level:

```
[edit protocols mpls label-switched-path lsp-name lsp-attributes]
  gpid gpid;
```

## Configuring the Signal Bandwidth Type

The signal bandwidth type is the encoding used for path computation and admission control. To configure the signal bandwidth type, include the **signal-bandwidth** statement at the **[edit protocols mpls label-switched-path *lsp-name* lsp-attributes]** hierarchy level:

```
[edit protocols mpls label-switched-path lsp-name lsp-attributes]
  signal-bandwidth type;
```

## Configuring GMPLS Bidirectional LSPs

Because MPLS and GMPLS use the same configuration hierarchy for LSPs, it is helpful to know which LSP attributes control LSP functionality. Standard MPLS packet-switched LSPs are unidirectional, whereas GMPLS nonpacket LSPs are bidirectional.

If you use the default packet-switching type of **psc-1**, your LSP becomes unidirectional. To enable a GMPLS bidirectional LSP, you must select a non-packet-switching type option, such as **lambda**, **fiber**, or **ethernet**. Include the **switching-type** statement at the **[edit protocols mpls label-switched-path *lsp-name* lsp-attributes]** hierarchy level:

```
[edit protocols mpls label-switched-path lsp-name lsp-attributes]
  switching-type (lambda | fiber | ethernet);
```

## Allowing Nonpacket GMPLS LSPs to Establish Paths Through Routers Running Junos OS

By setting the A-bit in the Admin Status object, you can enable nonpacket GMPLS LSPs to establish paths through routers that run Junos. When an ingress router sends an RSVP PATH message with the Admin Status A-bit set, an external device (not a router running the Junos OS) can either perform a Layer 1 path setup test or help bring up an optical cross-connect.

When set, the A-bit in the Admin Status object indicates the administrative down status for a GMPLS LSP. This feature is used specifically by nonpacket GMPLS LSPs. It does not affect control path setup or data forwarding for packet LSPs.

Junos does not distinguish between the control path setup and data path setup. Other nodes along the network path use RSVP PATH signaling using the A-bit in a meaningful way.

To configure the Admin Status object for a GMPLS LSP, include the **admin-down** statement:

```
admin-down;
```

You can include this statement at the following hierarchy levels:

- **[edit protocols mpls label-switched-path *lsp-name*]**
- **[edit logical-systems *logical-system-name* protocols mpls label-switched-path *lsp-name*]**

---

## Gracefully Tearing Down GMPLS LSPs

You can gracefully tear down nonpacket GMPLS LSPs. An LSP that is torn down abruptly, a common process in a packet-switched network, can cause stability problems in nonpacket-switched networks. To maintain the stability of nonpacket-switched networks, it might be necessary to tear down LSPs gracefully.

The following sections describe how to tear down GMPLS LSPs gracefully:

- [Temporarily Deleting GMPLS LSPs on page 786](#)
- [Permanently Deleting GMPLS LSPs on page 787](#)
- [Configuring the Graceful Deletion Timeout Interval on page 787](#)

### Temporarily Deleting GMPLS LSPs

You can gracefully tear down a GMPLS LSP using the **clear rsvp session gracefully** command.

This command gracefully tears down an RSVP session for a nonpacket LSP in two passes. In the first pass, the Admin Status object is signaled along the path to the endpoint of the LSP. During the second pass, the LSP is taken down. Using this command, the LSP is taken down temporarily. After the appropriate interval, the GMPLS LSP is resignaled and then reestablished.

The **clear rsvp session gracefully** command has the following properties:



- It only works on the ingress and egress routers of an RSVP session. If used on a transit router, it has the same behavior as the **clear rsvp session** command.
- It only works for nonpacket LSPs. If used with packet LSPs, it has the same behavior as the **clear rsvp session** command.

For more information, see the [CLI Explorer](#).

## Permanently Deleting GMPLS LSPs

When you disable an LSP in the configuration, the LSP is permanently deleted. By configuring the **disable** statement, you can disable a GMPLS LSP permanently. If the LSP being disabled is a nonpacket LSP, then the graceful LSP tear-down procedures that use the Admin Status object are used. If the LSP being disabled is a packet LSP, then the regular signaling procedures for LSP deletion are used.

To disable a GMPLS LSP, include the **disable** statement at any of the following hierarchy levels:

- **[edit protocols mpls label-switched-path *lsp-name*]**—Disable the LSP.
- **[edit protocols link-management *te-link te-link-name*]**—Disable a traffic engineering link.
- **[edit protocols link-management *te-link te-link-name interface interface-name*]**—Disable an interface used by a traffic engineering link.

## Configuring the Graceful Deletion Timeout Interval

The router that initiates the graceful deletion procedure for an RSVP session waits for the graceful deletion timeout interval to ensure that all routers along the path (especially the ingress and egress routers) have prepared for the LSP to be taken down.

The ingress router initiates the graceful deletion procedure by sending the Admin Status object in the path message with the **D** bit set. The ingress router expects to receive an Resv message with the **D** bit set from the egress router. If the ingress router does not receive this message within the time specified by the graceful deletion timeout interval, it initiates a forced tear-down of the LSP by sending a PathTear message.

To configure the graceful deletion timeout interval, include the **graceful-deletion-timeout** statement at the **[edit protocols rsvp]** hierarchy level. You can configure a time between 1 through 300 seconds. The default value is 30 seconds.

**graceful-deletion-timeout** *seconds*;

You can configure this statement at the following hierarchy levels:

- **[edit protocols rsvp]**
- **[edit logical-systems *logical-system-name* protocols rsvp]**

You can use the **show rsvp version** command to determine the current value configured for the graceful deletion timeout.

## GMPLS RSVP-TE VLAN LSP Signaling Overview

---

- [Understanding GMPLS RSVP-TE Signaling on page 788](#)
- [Need for GMPLS RSVP-TE VLAN LSP Signaling on page 788](#)
- [GMPLS RSVP-TE VLAN LSP Signaling Functionality on page 790](#)
- [LSP Hierarchy with GMPLS RSVP-TE VLAN LSP on page 791](#)
- [Path Specification for GMPLS RSVP-TE VLAN LSP on page 791](#)
- [GMPLS RSVP-TE VLAN LSP Configuration on page 791](#)
- [Associated Bidirectional Packet LSP on page 792](#)
- [Make-Before-Break for Associated Bidirectional Packet and GMPLS RSVP-TE VLAN LSP on page 793](#)
- [Supported and Unsupported Features on page 794](#)

### Understanding GMPLS RSVP-TE Signaling

Signaling is the process of exchanging messages within the control plane to set up, maintain, modify, and terminate data paths (label-switched paths (LSPs)) in the data plane. Generalized MPLS (GMPLS) is a protocol suite that extends the existing control plane of MPLS to manage further classes of interfaces and to support other forms of label switching, such as time-division multiplexing (TDM), fiber (port), Lambda, and so on.

GMPLS extends intelligent IP/MPLS connections from Layer 2 and Layer 3 all the way to Layer 1 optical devices. Unlike MPLS, which is supported mainly by routers and switches, GMPLS can also be supported by optical platforms, including SONET/SDH, optical cross-connects (OXC), and dense wave division multiplexing (DWDM).

In addition to labels, which are primarily used to forward data in MPLS, other physical entries, such as wavelengths, time slots, and fibers can be used as label objects to forward data in GMPLS, thereby leveraging the existing control plane mechanisms to signal different kinds of LSPs. GMPLS uses RSVP-TE to be able to request the other label objects to signal the various kinds of LSPs (nonpacket). Bidirectional LSPs and an out-of-band control channel and a data channel using the Link Management Protocol (LMP) are the other mechanisms that are used by GMPLS to establish LSPs.


### Need for GMPLS RSVP-TE VLAN LSP Signaling

The traditional Layer 2 point-to-point services use Layer 2 circuits and Layer 2 VPN technologies that are based on LDP and BGP. In the traditional deployment, the customer edge (CE) devices do not participate in the signaling of the Layer 2 service. The provider edge (PE) devices manage and provision the Layer 2 service to provide end-to-end connectivity between the CE devices.

One of the biggest challenges of having the PE devices provision the Layer 2 services for each Layer 2 circuit between a pair of CE devices is the network management burden on the provider network.

Figure 79 on page 789 illustrates how the Layer 2 service is set up and used by the CE routers in a LDP/BGP-based Layer 2 VPN technology. Two CE routers CE1 and CE2 are connected to a provider MPLS network through the PE routers PE1 and PE2 respectively. The CE routers are connected to the PE routers by Ethernet links. Routers CE1 and CE2 are configured with VLAN1 and VLAN2 logical Layer 3 interfaces, so they appear to be directly connected. Routers PE1 and PE2 are configured with Layer 2 circuit (pseudowire) to carry the Layer 2 VLAN traffic between the CE routers. The PE routers use packet MPLS LSPs within the provider MPLS network to carry the Layer 2 VLAN traffic.

**Figure 79: Traditional Layer 2 Point-to-Point Services**

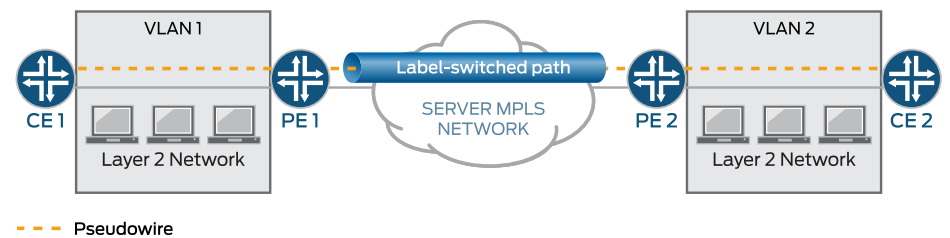


With the introduction of GMPLS-based VLAN LSP signaling, the need for the PE (also called server-layer) network to provision each individual Layer 2 connection between the CE (also called client) devices is minimized. The client router requests the server-layer router to which it is directly connected, for setting up the Layer 2 service to connect with a remote client router through GMPLS signaling.

The server-layer devices extend the signaling through the server-layer network to connect with the remote client routers. In the process, the server-layer device sets up the data plane for the Layer 2 service at the server-client border, and sets up the data plane for carrying the Layer 2 traffic within the server-layer network. With the Layer 2 service setup, the client routers can run IP/MPLS directly on top of the Layer 2 service and have IP/MPLS adjacency with each other.

In addition to reducing the provisioning activity needed on the server-layer devices, GMPLS signaling also provides the client routers with the flexibility of bringing up the Layer 2 circuits on an on-demand basis without depending on the server-layer administration for the provisioning of the Layer 2 service.

Using the same topology as in Figure 1, Figure 80 on page 790 illustrates how the Layer 2 service is set up and used by the client routers in GMPLS RSVP-TE-based Layer 2 VPN technology.

Figure 80: GMPLS RSVP-TE VLAN LSP

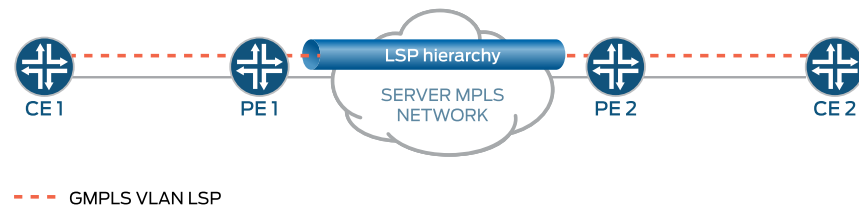

804277

In [Figure 80 on page 790](#), instead of configuring a pseudowire to carry the Layer 2 VLAN traffic between the client routers, Routers PE1 and PE2 are configured with an IP-based communication channel and other GMPLS-specific configurations (identification of Ethernet links as TE-links) for allowing the exchange of GMPLS RSVP-TE signaling messages with the client routers. Routers CE1 and CE2 are also configured with an IP-based communication channel and relevant GMPLS configuration for exchanging the GMPLS RSVP-TE signaling messages with the server-layer routers. Routers CE1 and CE2 establish an IP/MPLS adjacency on top of this Layer 2 service.

### GMPLS RSVP-TE VLAN LSP Signaling Functionality

Based on [Figure 80 on page 790](#), the client router establishes the Layer 2 service in the server-layer network as follows:

1. Router CE1 initiates GMPLS RSVP-TE signaling with Router PE1. In this signaling message, Router CE1 indicates the VLAN on the Ethernet link for which it needs the Layer 2 service and the remote CE router, Router CE2, with which the VLAN should be connected.  
  
Router CE1 also indicates the remote PE router, Router PE2, to which Router CE2 is connected, and the exact Ethernet link connecting Router CE2 to Router PE2 on which the Layer 2 service is required in the signaling message.
2. Router PE1 uses the information from Router CE1 in the signaling message and determines the remote PE router, Router PE2, with which Router CE2 is attached. Router PE1 then establishes a packet MPLS LSP (associated bidirectional) through the server-layer MPLS network for carrying the VLAN traffic and then passes the GMPLS RSVP-TE signaling message to Router PE2 using the LSP hierarchy mechanism.
3. Router PE2 propagates the GMPLS RSVP-TE signaling message to Router CE2 with the VLAN to be used on the PE2-CE2 Ethernet link.
4. Router CE2 responds with an acknowledgment to the GMPLS RSVP-TE signaling message to Router PE2. Router PE2 then propagates it to Router PE1, which in turn propagates it to Router CE1.
5. As part of this message propagation, Routers PE1 and PE2 set up the forwarding plane to enable bidirectional flow of VLAN Layer 2 traffic between Routers CE1 and CE2.

## LSP Hierarchy with GMPLS RSVP-TE VLAN LSP

The Layer 2 service in GMPLS RSVP-TE VLAN LSP signaling is brought up using a hierarchy mechanism in which two different RSVP LSPs are created for the Layer 2 service:

- An end-to-end VLAN LSP that has state information at the client and server-layer routers.
- An associated bidirectional packet transport LSP that is present in the server-layer routers (PE and P) of the server-layer network.

The LSP hierarchy avoids sharing information about technology-specific LSP characteristics with the core nodes of the server-layer network. This solution cleanly separates the VLAN LSP state and the transport LSP state, and ensures that the VLAN LSP state is only present on the nodes (PE, CE) where it is needed.

## Path Specification for GMPLS RSVP-TE VLAN LSP

The path for the GMPLS RSVP-TE LSP is configured as an Explicit Route Object (ERO) at the initiating client router. As this LSP traverses different network domains (initiating, terminating at client network, and traversing the server-layer network), the LSP setup falls under the category of an interdomain LSP setup. In an interdomain scenario, one network domain generally does not have full visibility into the topology of the other network domain. Hence, the ERO that gets configured at the initiating client router does not have full hop information for the server-layer portion. This feature requires that the ERO configured at the CE router has three hops, with the first hop being a strict hop identifying the CE1-PE1 Ethernet link, the second hop being a loose hop identifying the egress PE router (PE2), and the third hop being a strict hop identifying the CE2-PE2 Ethernet link.

## GMPLS RSVP-TE VLAN LSP Configuration

The configuration required to set up a GMPLS VLAN LSP at the client and server routers uses the existing GMPLS configuration model with some extensions. The Junos OS GMPLS configuration model for nonpacket LSPs is targeted toward bringing the physical interfaces up and running through GMPLS RSVP-TE signaling, whereas signaling a GMPLS RSVP-TE VLAN LSP aims at bringing up individual VLANs on top of a physical interface. The **ethernet-vlan** configuration statement under the **[edit protocols link-management te-link]** hierarchy enables this.

The client router has physical interfaces connected to a server network, and the server network provides a point-to-point connection between two client routers over the attached physical interfaces. The physical interface is brought into an operational state by GMPLS RSVP-TE as follows:

1. The client router maintains a routing or signaling adjacency with the server network node to which the physical interface is connected, typically through a control channel different from the physical interface, because the physical interface itself is brought up and running only after the signaling.
2. The client router and the server network node identify the physical interfaces connecting them using the TE-link mechanism.

3. The client router and the server network node use the TE-link identifier (IP address) as the GMPLS RSVP hop and the physical interface identifier as the GMPLS label values in the GMPLS RSVP-TE signaling messages to bring the physical interface into an operational state.

In the existing GMPLS configuration, the server and client network nodes use the **protocols link-management peer *peer-name*** configuration statement to specify the adjacent peer node. Because a client router can have one or more physical interfaces connected to the server network node, these physical interfaces are grouped and identified by an IP address through the **protocols link-management te-link *link-name*** configuration statement. The TE-link is assigned a local IP address, a remote IP address, and a list of physical interfaces. The TE-link is then associated with the **protocols link-management peer *peer-name* te-link *te-link-list*** configuration statement.

The out-of-band control channel that is required for exchanging signaling messages is specified using the **protocols link-management peer *peer-name* control-channel *interface-name*** configuration statement. The existence of the server or client network node is made visible to the RSVP and IGP (OSPF) protocols through the **peer-interface *interface-name*** configuration statement under the **[edit protocols *rsvp*]** and **[edit protocols *ospf*]** hierarchy levels.

In the existing GMPLS configuration, the label (upstream label and resv label) that is carried in the signaling message is an integer identifier that identifies the physical interface that is required to be brought up. As the label is used to identify the physical interface, the existing GMPLS configuration allows multiple interfaces to be grouped under a single TE-link. In the existing GMPLS configuration, there is sufficient information in the GMPLS RSVP-TE signaling message, such as TE-link address and label value, to identify the physical interface that is required to be brought up. In contrast, for GMPLS RSVP-TE VLAN LSP configuration, the VLAN ID value is used as the label in the signaling message.

In the GMPLS RSVP-TE VLAN LSP configuration, if multiple interfaces are allowed to be configured under a single TE-link, using VLAN ID as the label value in the signaling message can cause ambiguity as to which physical interface on which the VLAN has to be provisioned. Therefore, the TE-link is configured with the **ethernet-vlan** configuration statement, if the number of physical interfaces that can be configured under the TE-link is restricted to only one.

In the existing GMPLS configuration, the bandwidth for a nonpacket LSP is a discrete quantity that corresponds to the bandwidth of the physical interface that needs to be brought up. So, the GMPLS LSP configuration does not allow any bandwidth to be specified, but allows the bandwidth to be specified only through the **signal-bandwidth** configuration statement under the **[protocols mpls label-switched-path *lsp-name* lsp-attributes]** hierarchy level. In the GMPLS VLAN LSP configuration, bandwidth is specified similar to that of a packet LSP. In the GMPLS VLAN LSP configuration, the **bandwidth** option is supported and **signal-bandwidth** is not supported.

## Associated Bidirectional Packet LSP

The GMPLS RSVP-TE VLAN LSP is carried on an associated bidirectional transport LSP within the server-layer network, which is a single-sided provisioned LSP. The transport LSP signaling is initiated as a unidirectional LSP from the source router to the destination

router in the forward direction, and the destination router in turn initiates the signaling of the unidirectional LSP in the reverse direction back to the source router.

### Make-Before-Break for Associated Bidirectional Packet and GMPLS RSVP-TE VLAN LSP

The make-before-break support for an associated bidirectional transport LSP follows a similar model, where the destination router for the forward direction of the bidirectional LSP does not perform any make-before-break operations on the reverse direction of the bidirectional LSP. It is the source router (initiator of the associated bidirectional LSP) that initiates the make-before-break newer instance of the associated bidirectional LSP, and the destination router in turn initiates the make-before-break newer instance in the other direction.

For instance, in [Figure 80 on page 790](#), the unidirectional transport LSP is initiated from Router PE1 to Router PE2 in the forwarding direction, and in turn Router PE2 initiates the transport LSP to Router PE1 in the reverse direction. When a make-before-break instance occurs, only Router PE1 as the initiating client router can establish a new instance of the associated bidirectional LSP. Router PE2 in turn initiates the make-before-break newer instance in the reverse direction.

The make-before-break support for the associated bidirectional transport LSP is used only in scenarios where the transport LSP gets into a state of being locally protected due to link or node failure on the path of the LSP. The GMPLS RSVP-TE VLAN LSP uses the make-before-break mechanism for adjusting seamless bandwidth changes.



**NOTE:** Periodic re-optimization is not enabled for the associated bidirectional transport LSPs.

The newer make-before-break instance of the GMPLS VLAN LSP is supported under the following constraints:

- It should originate from the same client router as the older instance and be destined to the same client router as the older instance.
- It should use the same server-client links at both the server-client ends as the older instance.
- It should use the same VLAN label at the server-client links as the older instance.
- The GMPLS VLAN LSP should be configured as **adaptive** when the bandwidth change is initiated from the CLI, or else the current instance of the VLAN LSP is torn down and a new VLAN LSP instance is established.

The make-before-break operation for the GMPLS VLAN LSP on the server-layer edge router is rejected if these constraints are not met.

On the server-layer edge routers, when a make-before-break instance of the GMPLS VLAN LSP is seen, a completely new, separate associated bidirectional transport LSP is created to support this make-before-break instance. The existing associated bidirectional LSP (supporting the older instance) is not triggered to initiate a make-before-break instance at the transport LSP level. An implication of this choice (of initiating a new

transport LSP) is that at the server-layer resource/bandwidth sharing does not happen when a make-before-break operation is performed for the GMPLS VLAN LSP.

## Supported and Unsupported Features

Junos OS supports the following features with the GMPLS RSVP-TE VLAN LSP:

- Request for specific bandwidth and local protection for the VLAN LSP on the client router to the server-layer router.
- Nonstop active routing (NSR) support for the GMPLS VLAN LSP at the client routers, server-layer edge routers, and associated bidirectional transport LSP at the server-layer edge routers.
- Multichassis support.

Junos OS does **not** support the following GMPLS RSVP-TE VLAN LSP functionality:

- Graceful restart support for associated bidirectional packet LSP and GMPLS VLAN LSP.
- End-to-end path computation for GMPLS VLAN LSP using CSPF algorithm at the client router.
- Non-CSPF routing-based discovery of next-hop routers by the different client, server-layer edge routers.
- Automatic provisioning of the client Layer 3 VLAN interfaces upon the successful setup of the VLAN LSP at the client routers.
- MPLS OAM (LSP-ping, BFD).
- Packet MPLS applications, such as next-hop in static route and in IGP shortcuts.
- Local cross connect mechanism, where a client router connects to a remote client router which is connected to the same server router.
- Junos OS Services Framework.
- IPv6 support.
- Logical systems.
- Aggregated Ethernet/SONET/IRB interfaces at the server-client link.

### Related Documentation

- [Example: Configuring GMPLS RSVP-TE VLAN LSP Signaling on page 794](#)

---

## Example: Configuring GMPLS RSVP-TE VLAN LSP Signaling

This example shows how to configure GMPLS RSVP-TE VLAN LSP signaling on the client routers to enable one client router to connect with a remote client router through a server-layer network using the LSP hierarchy. This enables the client routers to establish, maintain, and provision the Layer 2 services, without depending on the server-layer



administration, thereby reducing the burden on the operational expenses of the provider network.

- [Requirements on page 795](#)
- [Overview on page 795](#)
- [Configuration on page 801](#)
- [Verification on page 811](#)

## Requirements

This example uses the following hardware and software components:

- Six routers that can be a combination of M Series Multiservice Edge Routers, MX Series 3D Universal Edge Routers, T Series Core Routers, and PTX Series Packet Transport Routers
- Junos OS Release 14.2 or later running on the client routers and server-layer edge routers

Before you begin:


1. Configure the device interfaces.
2. Configure the interface-associated VLANs.
3. Configure the following routing protocols:
  - RSVP
  - MPLS
  - LMP

## Overview

Starting with Junos OS Release 14.2, the Layer 2 services between two client routers across an external/third-party server-layer network are set up by the client routers on an on-demand basis through GMPLS RSVP-TE signaling. This feature provides the client routers the flexibility to establish, maintain, and provision the Layer 2 services, without depending on the server-layer administration, thereby reducing the burden on the operational expenses of the provider network. In traditional Layer 2 VPN technology based on LDP and BGP, the provider network handled the provisioning activity for each Layer 2 circuit established between two client routers.

[Figure 81 on page 796](#) illustrates the setting up and signaling of the GMPLS VLAN LSP between two client routers, CE1 and CE2, across a server-layer network with two server-layer edge routers, PE1 and PE2, and one server-layer core router, P.

Figure 81: Setting Up a GMPLS VLAN LSP

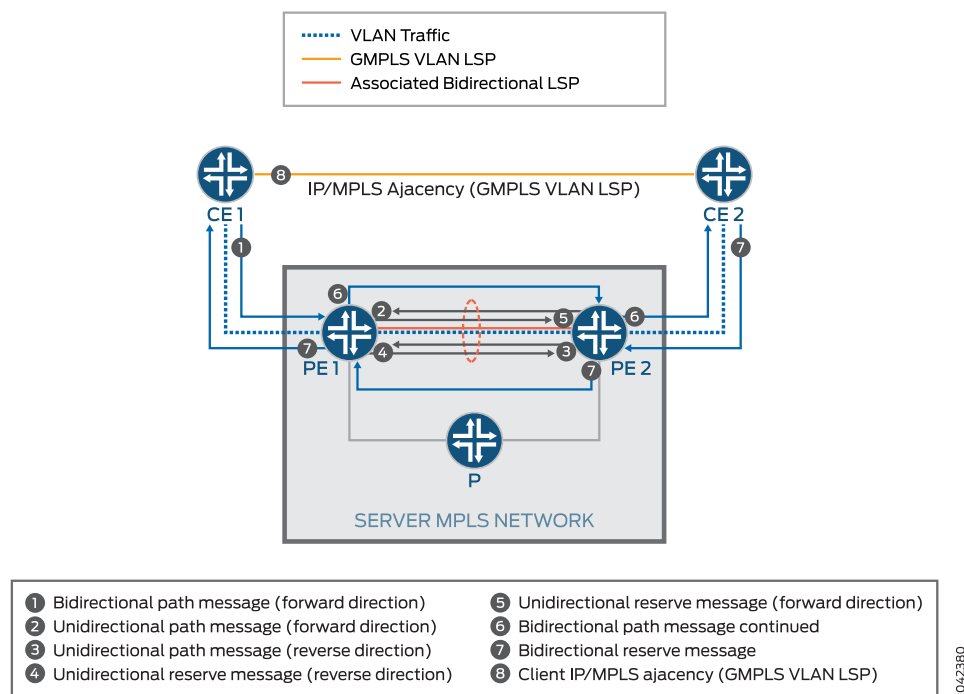

The signaling of GMPLS VLAN LSP is executed as follows:

#### 1. Initiating GMPLS VLAN LSP at CE1

Router CE1 initiates the GMPLS VLAN LSP setup by sending the GMPLS RSVP-TE path message to Router PE1. The signaling between CE1 and PE1 is over an out-of-band control channel, which is a separate control VLAN configured on the Ethernet link connecting the two routers.

The GMPLS RSVP-TE path message initiated by Router CE1 is used to perform the following:

- Identify the Ethernet link on which the VLAN is active.
- Abstract the Ethernet link as a TE-link and assign an IP address to identify the Ethernet link.
- Allocate a VLAN ID from the pool of free VLANs managed by Router CE1 for every Ethernet link connecting Router PE1 to the identified Ethernet link.

This VLAN ID can also be used for the GMPLS VLAN LSP at the CE2-PE2 Ethernet link.

- Identify the VLAN for which the Layer 2 service is required to be set up using the allocated VLAN ID as the upstream label object and the upstream direction label value.

- e. Include an ERO object that helps Router PE1 in establishing the VLAN LSP through the server-layer network to the remote client router, CE2. The ERO object in the path message includes three hops:
  - First hop—Strict hop identifying the initiating client-server Ethernet link, PE1-CE1.
  - Second hop—Loose hop identifying the remote server-layer router, PE2.
  - Third hop—Strict hop identifying the remote client-server Ethernet link, PE2-CE2.
- f. Include the bandwidth required for the GMPLS VLAN LSP.
- g. Include any local-protection required within the server-layer network for the VLAN LSP.

## 2. Initiating Associated Bidirectional Transport LSP at PE1

After Router PE1 receives the path message from Router CE1, the message is validated to check the availability of the Ethernet link and VLAN ID. In the server-layer network, the Layer 2 services between the server-layer routers, PE1 and PE2, are provided at the data plane in a manner similar to Layer 2 circuits. Router PE1 brings up a transport LSP to Router PE2 and then extends the GMPLS VLAN LSP as a hierarchical LSP running on top of the PE1-PE2 transport LSP. The PE1-PE2 transport LSP is a packet LSP and is bidirectional in nature. This is because the GMPLS VLAN LSP is bidirectional and each server-layer router needs to be able to do the following:

- Receive traffic from the server-client Ethernet link (for example, the PE1-CE1 link) and send it to the remote server-layer router, PE2.
- Receive traffic from remote Router PE2 and send it on the PE1-CE1 Ethernet link.

For each GMPLS VLAN LSP, a packet transport LSP is set up within the server-layer network. The transport LSP is exclusively used to carry traffic of the GMPLS VLAN LSP for which it was created. The transport LSP is dynamically created at the time of receiving the GMPLS VLAN LSP; thus, no configuration is required to trigger its creation. The transport LSP established for the VLAN LSP inherits the bandwidth and the local-protection attributes from the VLAN LSP.

Router PE1 signals the PE1-PE2 transport LSP to Router PE2. Router PE1 determines the destination for the transport LSP from the loose hop specified in the ERO object of the GMPLS RSVP-TE path message from Router CE1 and then signals the VLAN LSP. However, if the PE1-PE2 transport LSP fails to establish, Router PE1 sends back a path error message to Router CE1, and the GMPLS VLAN LSP is not established as well.

## 3. Setting Up the Associated Bidirectional Transport LSP Between the Server-Layer Routers

The associated bidirectional LSP between routers PE1 and PE2 consists of two unidirectional packet LSPs:

- PE1-to-PE2
- PE2-to-PE1

Router PE1 initiates signaling of a unidirectional packet LSP to Router PE2. This unidirectional packet LSP constitutes the forward direction (PE1-to-PE2) of the

associated bidirectional LSP, and the path message carries the Extended Association Object indicating this is a single-sided provisioning model. On receiving the path message for the LSP, Router PE2 responds with a Resv message and triggers the signaling of a unidirectional packet LSP to Router PE1 with the same path as (PE1-to-PE2) in the reverse direction. This unidirectional packet LSP uses the PE2-to-PE1 direction of the associated bidirectional LSP, and this path message carries the same Extended Association Object seen in the PE1-to-PE2 path message.

When Router PE1 receives the Resv message for the PE1-to-PE2 unidirectional LSP and the path message for the PE2-to-PE1 unidirectional LSP, PE1 binds the PE1-to-PE2 and PE2-to-PE1 unidirectional LSPs by matching the Extended Association Objects carried in the respective path messages. For the path message for the PE2-to-PE1 unidirectional LSP, Router PE1 responds with the Resv Message. On receiving the Resv message for the PE1-to-PE2 LSP and the path message for the PE2-to-PE1 LSP, Router PE1 has established the associated bidirectional packet transport LSP.

#### **4. Setting Up the GMPLS VLAN LSP at Router PE1**

After successfully establishing the transport LSP, Router PE1 triggers the signaling of the GMPLS VLAN LSP. Router PE1 sends the GMPLS RSVP-TE path message corresponding to the VLAN LSP directly to Router PE2, which is bidirectional in nature and includes the upstream label object.

Router PE2 is not aware of the association between the transport LSP and the VLAN LSP. This association is indicated to Router PE2 by Router PE1.

#### **5. Setting Up the GMPLS VLAN LSP at Router PE2**

On receiving the VLAN LSP path message from Router PE1, Router PE2 verifies the availability of the transport LSP. If the transport LSP is not available or the LSP setup is in progress, the VLAN LSP processing is put on hold. When the transport LSP is available, Router PE2 processes the VLAN LSP path message. The ERO object in this path message indicates that the next hop is a strict hop identifying the PE2-to-CE2 Ethernet link. The ERO object can indicate the VLAN ID to be used on the PE2-to-CE2 Ethernet link by Router PE2.

Router PE2 appropriately allocates the VLAN ID to be sent as the upstream label in the VLAN LSP path message to Router CE2, and sends it through an out-of-band control channel.

#### **6. Processing the GMPLS VLAN LSP at Router CE2**

On receiving the GMPLS RSVP-TE LSP from Router PE2, Router CE2 validates the availability of VLAN ID for allocation on the PE2-to-CE2 link. Router CE2 then allocates the VLAN ID for this VLAN LSP and sends back a Resv message to Router PE2 with the VLAN ID as the label object in the Resv message.

#### **7. Processing the GMPLS VLAN LSP at Router PE2**

On receiving the Resv message from Router CE2, Router PE2 validates that the label object in the Resv message has the same VLAN ID as in the path message. Router PE2 then allocates a 20-bit MPLS label, which is included in the Resv message sent to Router PE1.

Router PE2 then programs the forwarding plane with the entries to provide the Layer 2 service functionality.



**NOTE:** For all the VLAN IDs that can be allocated as labels on the PE1-to-CE1 and PE2-CE2 Ethernet links, you must manually configure logical interfaces for circuit cross-connect (CCC) purposes on the server-layer edge routers and not for other families, such as IPv4, IPv6, or MPLS.

#### 8. Processing the GMPLS VLAN LSP at Router PE1

On receiving the Resv message for the VLAN LSP from Router PE2, Router PE1 sends a Resv message to Router CE1 with the same VLAN ID it received as the upstream label from Router CE1. Router PE1 programs the forwarding plane with the entries to provide the Layer 2 service functionality as Router PE2.

#### 9. Processing the GMPLS VLAN LSP at Router CE1

On receiving the Resv message from Router PE1, Router CE1 validates that the VLAN ID received in the Resv message matches the VLAN ID in the upstream label in the path message it sent. This completes the setup of the GMPLS VLAN LSP from Router CE1 to Router CE2.



**NOTE:**

- The GMPLS VLAN LSP setup does not result in the addition of any forwarding plane entries at the client routers, CE1 and CE2. Only the server-layer routers, PE1 and PE2, add the forwarding plane entries for the GMPLS VLAN LSP.
- There is no routing information exchange between the client and the server-layer routers. The client and server-layer routers do not exchange their network topology information with each other.

#### 10. Accounting for Bandwidth of the GMPLS VLAN LSP


On successfully setting up the GMPLS VLAN LSP, both the client and server-layer routers reduce the amount of available bandwidth on the server-client Ethernet links by the bandwidth amount allocated for the GMPLS VLAN LSP. This bandwidth accounting information is used for admission control purposes when additional GMPLS VLAN LSPs are brought up on the server-client Ethernet links.

#### 11. Using GMPLS VLAN LSP by the Client Routers

After successfully setting up the GMPLS VLAN LSP, the client routers – CE1 and CE2 – need to be manually configured with the VLAN logical interface on top of the server-client Ethernet links with the signaled VLAN ID. This logical interface needs to be configured with the IP address and needs to be included in the IGP protocol. As a result of this configuration, Routers CE1 and CE2 establish IGP adjacency and exchange data traffic over the Layer 2 service established through the GMPLS signaling.

Figure 82 on page 800 illustrates the data traffic flow of the GMPLS VLAN LSP from Router CE1 to Router CE2 after the LSP setup is complete and the necessary CE1-to-CE2 IGP/MPLS adjacency has been established. The server-layer transport LSP originates from Router PE1, traverses a single server-layer core router, Router P, and reaches Router PE2. The server-layer transport LSP is shown as a penultimate-hop pop LSP, where Router P pops off the transport LSP label, and only the service label is present on the P-to-PE2 link.

**Figure 82: Data Traffic Flow of GMPLS VLAN LSP**

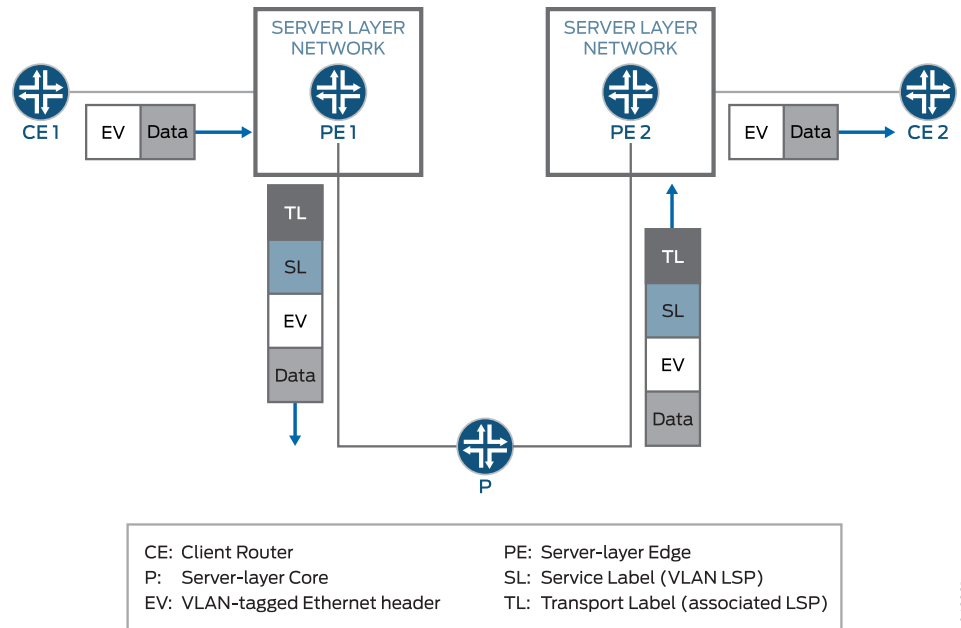


8042381

### Topology

In Figure 83 on page 801, GMPLS RSVP-TE VLAN LSP signaling is used to establish the Layer 2 services between the client routers, Router CE1 and Router CE2. The server routers, Router PE1 and Router PE2, have a GRE tunnel established with each of the directly connected client routers. Routers P1 and P2 are also server routers in the server-layer network.

Figure 83: Configuring GMPLS RSVP-TE VLAN LSP Signaling

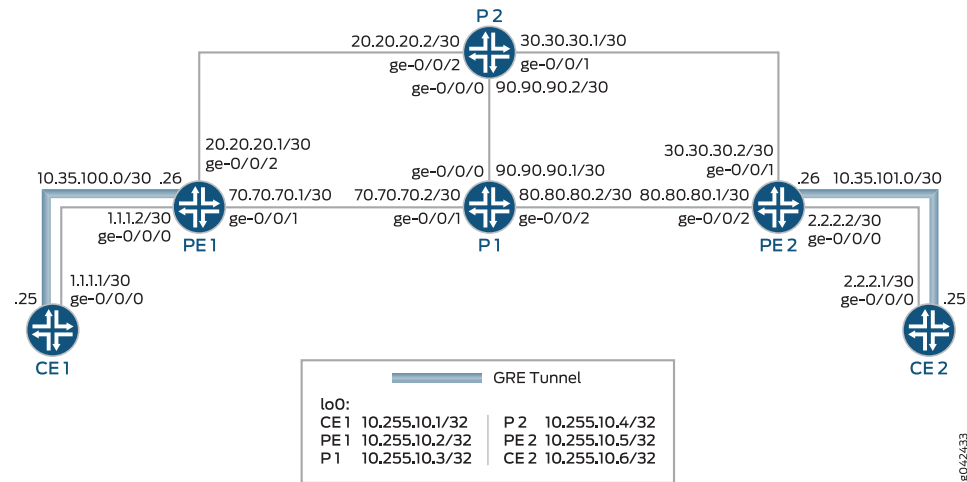

## Configuration

**CLI Quick Configuration** To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, copy and paste the commands into the CLI at the **[edit]** hierarchy level, and then enter **commit** from configuration mode.

```
CE1 set interfaces ge-0/0/0 vlan-tagging
set interfaces ge-0/0/0 unit 1 vlan-id 1
set interfaces ge-0/0/0 unit 1 family inet address 1.1.1.1/30
set interfaces ge-0/0/0 unit 1 family mpls
set interfaces ge-0/0/0 unit 10 vlan-id 10
set interfaces ge-0/0/0 unit 10 family inet address 10.10.10.1/24
set interfaces ge-0/0/0 unit 10 family mpls
set interfaces gre unit 0 tunnel source 1.1.1.1
set interfaces gre unit 0 tunnel destination 1.1.1.2
set interfaces gre unit 0 family inet address 10.35.100.25/30
set interfaces lo0 unit 0 family inet address 10.255.10.1/32
set routing-options router-id 10.255.10.1
set protocols rsvp interface all
set protocols rsvp interface fxp0.0 disable
set protocols rsvp peer-interface PE1
set protocols mpls no-cspf
set protocols mpls label-switched-path CE1-to-CE2 from 10.255.10.1
set protocols mpls label-switched-path CE1-to-CE2 to 10.255.10.6
set protocols mpls label-switched-path CE1-to-CE2 lsp-attributes switching-type
    ethernet-vlan
set protocols mpls label-switched-path CE1-to-CE2 lsp-attributes upstream-label vlan-id
    10
set protocols mpls label-switched-path CE1-to-CE2 bandwidth 100m
set protocols mpls label-switched-path CE1-to-CE2 primary path1
set protocols mpls path path1 10.35.1.2 strict
set protocols mpls path path1 10.255.10.5 loose
set protocols mpls path path1 10.36.1.1 strict
set protocols mpls interface all
```

```

set protocols mpls interface fxp0.0 disable
set protocols link-management te-link link10 local-address 10.35.1.1
set protocols link-management te-link link10 remote-address 10.35.1.2
set protocols link-management te-link link10 ethernet-vlan
set protocols link-management te-link link10 interface ge-0/0/0
set protocols link-management peer PE1 address 10.255.10.2
set protocols link-management peer PE1 control-channel gre.0
set protocols link-management peer PE1 te-link link10

PE1 set interfaces ge-0/0/0 vlan-tagging
set interfaces ge-0/0/0 encapsulation flexible-ethernet-services
set interfaces ge-0/0/0 unit 1 vlan-id 1
set interfaces ge-0/0/0 unit 1 family inet address 1.1.1.2/30
set interfaces ge-0/0/0 unit 1 family mpls
set interfaces ge-0/0/0 unit 10 encapsulation vlan-ccc
set interfaces ge-0/0/0 unit 10 vlan-id 10
set interfaces ge-0/0/1 unit 0 family inet address 70.70.70.1/30
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 20.20.20.1/30
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces gre unit 0 tunnel source 1.1.1.2
set interfaces gre unit 0 tunnel destination 1.1.1.1
set interfaces gre unit 0 family inet address 10.35.100.26/30
set interfaces lo0 unit 0 family inet address 10.255.10.2/32
set routing-options router-id 10.255.10.2
set protocols rsvp associated-bidirectional-lsp single-sided-provisioning
set protocols rsvp interface all
set protocols rsvp interface fxp0.0 disable
set protocols rsvp peer-interface CE1 dynamic-bidirectional-transport
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface fxp0.0 disable
set protocols link-management te-link link1 local-address 10.35.1.2
set protocols link-management te-link link1 remote-address 10.35.1.1
set protocols link-management te-link link1 ethernet-vlan vlan-id-range 1-1000
set protocols link-management te-link link1 interface ge-0/0/0
set protocols link-management peer CE1 address 10.255.10.1
set protocols link-management peer CE1 control-channel gre.0
set protocols link-management peer CE1 te-link link1

P1 set interfaces ge-0/0/0 unit 0 family inet address 90.90.90.1/24
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 unit 0 family inet address 70.70.70.2/24
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 80.80.80.2/24
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.10.3/32
set routing-options router-id 10.255.10.3
set protocols rsvp interface all
set protocols rsvp interface fxp0.0 disable
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols ospf traffic-engineering

```



```

set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface fxp0.0 disable

P2    set interfaces ge-0/0/0 unit 0 family inet address 90.90.90.2/30
      set interfaces ge-0/0/0 unit 0 family mpls
      set interfaces ge-0/0/1 unit 0 family inet address 30.30.30.1/30
      set interfaces ge-0/0/1 unit 0 family mpls
      set interfaces ge-0/0/2 unit 0 family inet address 20.20.20.2/30
      set interfaces ge-0/0/2 unit 0 family mpls
      set interfaces lo0 unit 0 family inet address 10.255.10.4/32
      set routing-options router-id 10.255.10.4
      set protocols rsvp interface all
      set protocols rsvp interface fxp0.0 disable
      set protocols mpls interface all
      set protocols mpls interface fxp0.0 disable
      set protocols ospf traffic-engineering
      set protocols ospf area 0.0.0.0 interface all
      set protocols ospf area 0.0.0.0 interface fxp0.0 disable

PE2   set interfaces ge-0/0/0 vlan-tagging
      set interfaces ge-0/0/0 encapsulation flexible-ethernet-services
      set interfaces ge-0/0/0 unit 0 vlan-id 1
      set interfaces ge-0/0/0 unit 0 family inet address 2.2.2.2/30
      set interfaces ge-0/0/0 unit 0 family mpls
      set interfaces ge-0/0/0 unit 10 encapsulation vlan-ccc
      set interfaces ge-0/0/0 unit 10 vlan-id 10
      set interfaces ge-0/0/1 unit 0 family inet address 30.30.30.2/30
      set interfaces ge-0/0/1 unit 0 family mpls
      set interfaces ge-0/0/2 unit 0 family inet address 80.80.80.1/30
      set interfaces ge-0/0/2 unit 0 family mpls
      set interfaces gre unit 0 tunnel source 2.2.2.2
      set interfaces gre unit 0 tunnel destination 2.2.2.1
      set interfaces gre unit 0 family inet address 10.35.101.26/30
      set interfaces lo0 unit 0 family inet address 10.255.10.5/32
      set routing-options router-id 10.255.10.5
      set protocols rsvp associated-bidirectional-lsp single-sided-provisioning
      set protocols rsvp interface all
      set protocols rsvp interface fxp0.0 disable
      set protocols rsvp peer-interface CE2 dynamic-bidirectional-transport
      set protocols mpls interface all
      set protocols mpls interface fxp0.0 disable
      set protocols ospf traffic-engineering
      set protocols ospf area 0.0.0.0 interface all
      set protocols ospf area 0.0.0.0 interface fxp0.0 disable
      set protocols link-management te-link link1 local-address 10.36.1.2
      set protocols link-management te-link link1 remote-address 10.36.1.1
      set protocols link-management te-link link1 ethernet-vlan vlan-id-range 1-1000
      set protocols link-management te-link link1 interface ge-0/0/0
      set protocols link-management peer CE2 address 10.255.10.6
      set protocols link-management peer CE2 control-channel gre.0
      set protocols link-management peer CE2 te-link link1

CE2   set interfaces ge-0/0/0 vlan-tagging
      set interfaces ge-0/0/0 unit 1 vlan-id 1
      set interfaces ge-0/0/0 unit 1 family inet address 2.2.2.1/24

```

```

set interfaces ge-0/0/0 unit 1 family mpls
set interfaces ge-0/0/0 unit 10 vlan-id 10
set interfaces ge-0/0/0 unit 10 family inet address 10.10.10.2/24
set interfaces ge-0/0/0 unit 10 family mpls
set interfaces gre unit 0 tunnel source 2.2.2.1
set interfaces gre unit 0 tunnel destination 2.2.2.2
set interfaces gre unit 0 family inet address 10.35.101.25/30
set interfaces lo0 unit 0 family inet address 10.255.10.6/32
set routing-options router-id 10.255.10.6
set protocols rsvp interface all
set protocols rsvp interface fxp0.0 disable
set protocols rsvp peer-interface PE2
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols link-management te-link link10 local-address 10.36.1.1
set protocols link-management te-link link10 remote-address 10.36.1.2
set protocols link-management te-link link10 ethernet-vlan vlan-id-range 1-1000
set protocols link-management te-link link10 interface ge-0/0/0
set protocols link-management peer PE2 address 10.255.10.5
set protocols link-management peer PE2 control-channel gre.0
set protocols link-management peer PE2 te-link link10

```

### Configuring the Client Router

**Step-by-Step Procedure** The following example requires that you navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure Router CE1:



**NOTE:** Repeat this procedure for Router CE2 in the server-layer network, after modifying the appropriate interface names, addresses, and any other parameters for the router.

1. Configure the interface connecting Router CE1 to Router PE1.  

```

[edit interfaces]
user@CE1# set ge-0/0/0 vlan-tagging

```
2. Configure the control VLAN for the ge-0/0/0 interface.  

```

[edit interfaces]
user@CE1# set ge-0/0/0 unit 1 vlan-id 1
user@CE1# set ge-0/0/0 unit 1 family inet address 1.1.1.1/30
user@CE1# set ge-0/0/0 unit 1 family mpls

```
3. Configure the LSP VLAN on the ge-0/0/0 interface.  

```

[edit interfaces]
user@CE1# set ge-0/0/0 unit 10 vlan-id 10
user@CE1# set ge-0/0/0 unit 10 family inet address 10.10.10.1/24
user@CE1# set ge-0/0/0 unit 10 family mpls

```
4. Configure the GRE tunnel as the controlling interface for Router CE1.

- ```
[edit interfaces]
user@CE1# set gre unit 0 tunnel source 1.1.1.1
user@CE1# set gre unit 0 tunnel destination 1.1.1.2
user@CE1# set gre unit 0 family inet address 10.35.100.25/30
```
5. Configure the loopback interface of Router CE1.
 

```
[edit interfaces]
user@CE1# set lo0 unit 0 family inet address 10.255.10.1/32
```
  6. Configure the loopback address of Router CE1 as its router ID.
 

```
[edit routing-options]
user@CE1# set router-id 10.255.10.1
```
  7. Enable RSVP on all the interfaces of Router CE1, excluding the management interface.
 

```
[edit protocols]
user@CE1# set rsvp interface all
user@CE1# set rsvp interface fxp0.0 disable
```
  8. Configure the RSVP peer interface for Router CE1.
 

```
[edit protocols]
user@CE1# set rsvp peer-interface PE1
```
  9. Disable automatic path computation for label-switched paths (LSPs).
 

```
[edit protocols]
user@CE1# set mpls no-cspf
```
  10. Configure the LSP to connect Router CE1 to Router CE2.
 

```
[edit protocols]
user@CE1# set mpls label-switched-path CE1-to-CE2 from 10.255.10.1
user@CE1# set mpls label-switched-path CE1-to-CE2 to 10.255.10.6
```
  11. Configure the CE1-to-CE2 LSP attributes.
 

```
[edit protocols]
user@CE1# set mpls label-switched-path CE1-to-CE2 lsp-attributes switching-type
    ethernet-vlan
user@CE1# set mpls label-switched-path CE1-to-CE2 lsp-attributes upstream-label
    vlan-id 10
user@CE1# set mpls label-switched-path CE1-to-CE2 bandwidth 100m
```
  12. Configure the CE1-to-CE2 LSP path and path parameters.
 

```
[edit protocols]
user@CE1# set mpls label-switched-path CE1-to-CE2 primary path1
user@CE1# set mpls path path1 10.35.1.2 strict
user@CE1# set mpls path path1 10.255.10.5 loose
user@CE1# set mpls path path1 10.36.1.1 strict
```
  13. Enable MPLS on all the interfaces of Router CE1, excluding the management interface.
 

```
[edit protocols]
user@CE1# set mpls interface all
user@CE1# set mpls interface fxp0.0 disable
```

14. Configure a traffic engineering link, and assign addresses for the local and remote end of the link.  

```
[edit protocols]
user@CE1# set link-management te-link link10 local-address 10.35.1.1
user@CE1# set link-management te-link link10 remote-address 10.35.1.2
```
15. Enable setting up of Layer 2 VLAN LSP on the link10 traffic engineering link.  

```
[edit protocols]
user@CE1# set link-management te-link link10 ethernet-vlan
```
16. Configure the Router CE1 interface as the member interface of the link10 traffic engineering link.  

```
[edit protocols]
user@CE1# set link-management te-link link10 interface ge-0/0/0
```
17. Configure Router PE1 as the Link Management Protocol (LMP) peer for Router CE1, and configure the peer attributes.  

```
[edit protocols]
user@CE1# set link-management peer PE1 address 10.255.10.2
user@CE1# set link-management peer PE1 control-channel gre.0
user@CE1# set link-management peer PE1 te-link link10
```

**Results** From configuration mode, confirm your configuration by entering the **show interfaces**, **show routing-options**, and **show protocols** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@CE1# show interfaces
ge-0/0/0 {
  vlan-tagging;
  unit 1 {
    vlan-id 1;
    family inet {
      address 1.1.1.1/30;
    }
    family mpls;
  }
  unit 10 {
    vlan-id 10;
    family inet {
      address 10.10.10.1/24;
    }
    family mpls;
  }
}
gre {
  unit 0 {
    tunnel {
      source 1.1.1.1;
      destination 1.1.1.2;
    }
    family inet {
      address 10.35.100.25/30;
    }
  }
}
```

```

    }
  }
  lo0 {
    unit 0 {
      family inet {
        address 10.255.10.1/32;
      }
    }
  }
}

user@CE1# show routing-options
router-id 10.255.10.1;

user@CE1# show protocols
  rsvp {
    interface all;
    interface fxp0.0 {
      disable;
    }
    peer-interface PE1;
  }
  mpls {
    no-cspf;
    label-switched-path CE1-to-CE2 {
      from 10.255.10.1;
      to 10.255.10.6;
      lsp-attributes {
        switching-type ethernet-vlan;
        upstream-label {
          vlan-id 10;
        }
      }
      bandwidth 100m;
      primary path1;
    }
    path path1 {
      10.35.1.2 strict;
      10.255.10.5 loose;
      10.36.1.1 strict;
    }
    interface all;
    interface fxp0.0 {
      disable;
    }
  }
}
link-management {
  te-link link10 {
    local-address 10.35.1.1;
    remote-address 10.35.1.2;
    ethernet-vlan;
    interface ge-0/0/0;
  }
  peer PE1 {
    address 10.255.10.2;
    control-channel gre.0;
    te-link link10;
  }
}

```

}

### Configuring the Server Router

**Step-by-Step Procedure** The following example requires that you navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode* in the *CLI User Guide*.

To configure Router PE1:



**NOTE:** Repeat this procedure for Router PE2 in the server-layer network, after modifying the appropriate interface names, addresses, and any other parameters for the router.

1. Configure the interface connecting Router PE1 to Router CE1.  

```
[edit interfaces]
user@PE1# set ge-0/0/0 vlan-tagging
user@PE1# set ge-0/0/0 encapsulation flexible-ethernet-services
```
2. Configure the control VLAN for the ge-0/0/0 interface.  

```
[edit interfaces]
user@PE1# set ge-0/0/0 unit 1 vlan-id 1
user@PE1# set ge-0/0/0 unit 1 family inet address 1.1.1.2/30
user@PE1# set ge-0/0/0 unit 1 family mpls
```
3. Configure the LSP VLAN on the ge-0/0/0 interface.  

```
[edit interfaces]
user@PE1# set ge-0/0/0 unit 10 encapsulation vlan-ccc
user@PE1# set ge-0/0/0 unit 10 vlan-id 10
```
4. Configure the interface connecting Router PE1 to the core routers (Router P1 and Router P2).  

```
[edit interfaces]
user@PE1# set ge-0/0/1 unit 0 family inet address 70.70.70.1/30
user@PE1# set ge-0/0/1 unit 0 family mpls

user@PE1# set ge-0/0/2 unit 0 family inet address 20.20.20.1/30
user@PE1# set ge-0/0/2 unit 0 family mpls
```
5. Configure the GRE tunnel as the controlling interface for Router PE1.  

```
[edit interfaces]
user@PE1# set gre unit 0 tunnel source 1.1.1.2
user@PE1# set gre unit 0 tunnel destination 1.1.1.1
user@PE1# set gre unit 0 family inet address 10.35.100.26/30
```
6. Configure the loopback interface of Router PE1.  

```
[edit interfaces]
user@PE1# set lo0 unit 0 family inet address 10.255.10.2/32
```
7. Configure the loopback address of Router PE1 as its router ID.

- ```
[edit routing-options]
user@PE1# set router-id 10.255.10.2
```
8. Configure an associated bidirectional LSP, and enable unidirectional reverse LSP setup for single-sided provisioned forward LSP.
 

```
[edit protocols]
user@PE1# set rsvp associated-bidirectional-lsp single-sided-provisioning
```
  9. Enable RSVP on all the interfaces of Router PE1, excluding the management interface.
 

```
[edit protocols]
user@PE1# set rsvp interface all
user@PE1# set rsvp interface fxp0.0 disable
```
  10. Configure the RSVP peer interface for Router PE1, and enable dynamic setup of bidirectional packet LSP for transporting nonpacket GMPLS LSP.
 

```
[edit protocols]
user@PE1# set rsvp peer-interface CE1 dynamic-bidirectional-transport
```
  11. Enable MPLS on all the interfaces of Router PE1, excluding the management interface.
 

```
[edit protocols]
user@PE1# set mpls interface all
user@PE1# set mpls interface fxp0.0 disable
```
  12. Configure OSPF with traffic engineering capabilities.
 

```
[edit protocols]
user@PE1# set ospf traffic-engineering
```
  13. Enable OSPF area 0 on all the interfaces of Router PE1, excluding the management interface.
 

```
[edit protocols]
user@PE1# set ospf area 0.0.0.0 interface all
user@PE1# set ospf area 0.0.0.0 interface fxp0.0 disable
```
  14. Configure a traffic engineering link, and assign addresses for the local and remote end of the link.
 

```
[edit protocols]
user@PE1# set link-management te-link link1 local-address 10.35.1.2
user@PE1# set link-management te-link link1 remote-address 10.35.1.1
```
  15. Enable setting up of a Layer 2 VLAN LSP for a specific range of VLANs on the link1 traffic engineering link.
 

```
[edit protocols]
user@PE1# set link-management te-link link1 ethernet-vlan vlan-id-range 1-1000
```
  16. Configure the Router PE1 interface as the member interface of the link1 traffic engineering link.
 

```
[edit protocols]
user@CE1# set link-management te-link link1 interface ge-0/0/0
```
  17. Configure Router CE1 as the LMP peer for Router PE1, and configure the peer attributes.

```
[edit protocols]
user@CE1# set link-management peer CE1 address 10.255.10.1
user@CE1# set link-management peer CE1 control-channel gre.0
user@CE1# set link-management peer CE1 te-link link1
```

**Results** From configuration mode, confirm your configuration by entering the **show interfaces**, **show routing-options**, and **show protocols** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@PE1# show interfaces
ge-0/0/0 {
  vlan-tagging;
  encapsulation flexible-ethernet-services;
  unit 1 {
    vlan-id 1;
    family inet {
      address 1.1.1.2/30;
    }
    family mpls;
  }
  unit 10 {
    encapsulation vlan-ccc;
    vlan-id 10;
  }
}
ge-0/0/1 {
  unit 0 {
    family inet {
      address 70.70.70.1/30;
    }
    family mpls;
  }
}
ge-0/0/2 {
  unit 0 {
    family inet {
      address 20.20.20.1/30;
    }
    family mpls;
  }
}
gre {
  unit 0 {
    tunnel {
      source 1.1.1.2;
      destination 1.1.1.1;
    }
    family inet {
      address 10.35.100.26/30;
    }
  }
}
lo0 {
  unit 0 {
    family inet {
```



```

        address 10.255.10.2/32;
    }
}
}
user@PE1# show routing-options
router-id 10.255.10.2;
user@PE1# show protocols
rsvp {
    associated-bidirectional-lsp single-sided-provisioning;
    interface all;
    interface fxp0.0 {
        disable;
    }
    peer-interface CE1 {
        dynamic-bidirectional-transport;
    }
}
mpls {
    interface all;
    interface fxp0.0 {
        disable;
    }
}
ospf {
    traffic-engineering;
    area 0.0.0.0 {
        interface all;
        interface fxp0.0 {
            disable;
        }
    }
}
link-management {
    te-link link1 {
        local-address 10.35.1.2;
        remote-address 10.35.1.1;
        ethernet-vlan {
            vlan-id-range 1-1000;
        }
        interface ge-0/0/0;
    }
    peer CE1 {
        address 10.255.10.1;
        control-channel gre.0;
        te-link link1;
    }
}
}

```

## Verification

Confirm that the configuration is working properly.

- [Verifying the Traffic Engineering Link Status on the Client Routers on page 812](#)
- [Verifying the RSVP Session Status on the Client Routers on page 814](#)

- [Verifying the LSP Status on the Server Router on page 814](#)
- [Verifying the CCC Entries in the MPLS Routing Table of the Server Routers on page 815](#)
- [Verifying End-to-End Connectivity on page 816](#)

#### [Verifying the Traffic Engineering Link Status on the Client Routers](#)

**Purpose** Verify the status of the traffic engineering link configured between Router CE1 and Router CE2.

**Action** From operational mode, run the **show link-management** and the **show link-management te-link detail** commands.

```

user@CE1> show link-management
Peer name: PE1, System identifier: 50740
State: Up, Control address: 10.255.10.2
Hello interval: 150, Hello dead interval: 500
Control-channel          State
gre.0                    Active
TE links:
link10

TE link name: link10, State: Up
Local identifier: 65075, Remote identifier: 0, Local address: 10.35.1.1, Remote
address: 10.35.1.2, Encoding: Ethernet, Switching: EVPL, Minimum bandwidth: 0bps,

Maximum bandwidth: 1000Mbps, Total bandwidth: 1000Mbps, Available bandwidth:
900Mbps
Name                      State Local ID Remote ID Bandwidth
Used LSP-name
ge-0/0/0                  Up      54183      0      1000Mbps
Yes CE1-to-CE2

user@CE1> show link-management te-link detail
TE link name: link10, State: Up
Local identifier: 65075, Remote identifier: 0, Local address: 10.35.1.1, Remote
address: 10.35.1.2, Encoding: Ethernet, Switching: EVPL, Minimum bandwidth: 0bps,

Maximum bandwidth: 1000Mbps, Total bandwidth: 1000Mbps, Available bandwidth:
900Mbps
Resource: ge-0/0/0, Type: IFD, System identifier: 137, State: Up, Local
identifier: 54183, Remote identifier: 0
Total bandwidth: 1000Mbps, Unallocated bandwidth: 900Mbps
Traffic parameters: Encoding: Ethernet, Switching: EVPL, Granularity: Unknown

Maximum allocations: 4094, Number of allocations: 1, Unique allocations: 1,
In use: Yes
LSP name: CE1-to-CE2, Local label: 10, Remote label: 10, Allocated bandwidth:
100Mbps

user@CE2> show link-management
Peer name: PE2, System identifier: 50743
State: Up, Control address: 10.255.10.5
Hello interval: 150, Hello dead interval: 500
Control-channel          State
gre.0                    Active
TE links:
link10

TE link name: link10, State: Up
Local identifier: 65075, Remote identifier: 0, Local address: 10.36.1.1, Remote
address: 10.36.1.2, Encoding: Ethernet, Switching: EVPL, Minimum bandwidth: 0bps,

Maximum bandwidth: 1000Mbps, Total bandwidth: 1000Mbps, Available bandwidth:
900Mbps
Name                      State Local ID Remote ID Bandwidth
Used LSP-name
ge-0/0/0                  Up      54183      0      1000Mbps
Yes CE1-to-CE2

```

**Meaning** The Link Management Protocol (LMP) peering has been established between the client routers, and the traffic engineering link is up on both Routers CE1 and CE2.

#### Verifying the RSVP Session Status on the Client Routers

**Purpose** Verify the status of the RSVP sessions between Router CE1 and Router CE2.

**Action** From operational mode, run the **show rsvp session** command.

```
user@CE1> show rsvp session
Ingress RSVP: 1 sessions
  To          From          State   Rt  Style  Labelin Labelout LSPname
  10.255.10.6 10.255.10.1 Up      0  1 FF    -      10 CE1-to-CE2 Bidir
Total 1 displayed, Up 1, Down 0

Egress RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0

user@CE2> show rsvp session
Ingress RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0

Egress RSVP: 1 sessions
  To          From          State   Rt  Style  Labelin Labelout LSPname
  10.255.10.6 10.255.10.1 Up      0  1 FF    10      - CE1-to-CE2 Bidir
Total 1 displayed, Up 1, Down 0

Transit RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

**Meaning** The RSVP sessions are established between the ingress router, Router CE1, and the egress router, Router CE2.

#### Verifying the LSP Status on the Server Router

**Purpose** Verify the status of the MPLS LSP on Router PE1.

**Action** From operational mode, run the **show mpls lsp** command.

```
user@PE1> show mpls lsp
Ingress LSP: 1 sessions
  To          From          State Rt P    ActivePath    LSPName
10.255.10.5   10.255.10.2   Up    0 *
vlan:0:10:8176:10.255.10.2->10.255.10.5 Assoc-Bidir
Total 1 displayed, Up 1, Down 0

Egress LSP: 1 sessions
  To          From          State Rt Style Labelin Labelout LSPName
10.255.10.2   10.255.10.5   Up    0 1 FF      3      -
vlan:0:10:8176:10.255.10.2->10.255.10.5:rev
Total 1 displayed, Up 1, Down 0

Transit LSP: 1 sessions
  To          From          State Rt Style Labelin Labelout LSPName
10.255.10.6   10.255.10.1   Up    0 1 FF      10    299808 CE1-to-CE2 Bidir
Total 1 displayed, Up 1, Down 0
```

**Meaning** The CE1-to-CE2 LSP is established, and the output displays the LSP attributes.

#### Verifying the CCC Entries in the MPLS Routing Table of the Server Routers

**Purpose** Verify the circuit cross-connect (CCC) interface entries in the MPLS routing table.

**Action** From operational mode, run the **show route table mpls.0** and the **show route forwarding-table ccc ccc-interface** commands.

```
user@PE1> show route table mpls.0
mpls.0: 6 destinations, 6 routes (6 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

0                *[MPLS/0] 1d 22:14:51, metric 1
                  Receive
1                *[MPLS/0] 1d 22:14:51, metric 1
                  Receive
2                *[MPLS/0] 1d 22:14:51, metric 1
                  Receive
13               *[MPLS/0] 1d 22:14:51, metric 1
                  Receive
299824           *[RSVP/7/1] 17:32:07, metric 1
                  > via ge-0/0/0.10, Pop
ge-0/0/0.10      *[RSVP/7/1] 17:32:07, metric 1
                  > to 20.20.20.2 via ge-0/0/2.0, label-switched-path CE1-to-CE2

user@PE1> show route forwarding-table ccc ge-0/0/0.10
Routing table: default.mpls
MPLS:
Destination      Type RtRef Next hop          Type Index  NhRef Netif
ge-0/0/0.10      (CCC) user    0 20.20.20.2      Push 299808, Push 299872(top)
581              2 ge-0/0/2.0

Routing table: __mpls-oam__.mpls
MPLS:
Destination      Type RtRef Next hop          Type Index  NhRef Netif
default          perm      0                      dscd    534    1
```

**Meaning** The output displays the CCC interface that is the client-router-facing interface and the next-hop details for that interface.

### Verifying End-to-End Connectivity

**Purpose** Verify the connectivity between Router CE1 and the remote client router, Router CE2.

**Action** From operational mode, run the **ping** command.

```
user@CE1> ping 10.10.10.2
PING 10.10.10.2 (10.10.10.2): 56 data bytes
64 bytes from 10.10.10.2: icmp_seq=0 ttl=64 time=15.113 ms
64 bytes from 10.10.10.2: icmp_seq=1 ttl=64 time=13.353 ms
64 bytes from 10.10.10.2: icmp_seq=2 ttl=64 time=13.769 ms
64 bytes from 10.10.10.2: icmp_seq=3 ttl=64 time=10.341 ms
64 bytes from 10.10.10.2: icmp_seq=4 ttl=64 time=12.597 ms
^C
--- 10.10.10.2 ping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
round-trip min/avg/max/stddev = 10.341/13.035/15.113/1.575 ms
```

**Meaning** The ping from Router CE1 to Router CE2 is successful.

**Related Documentation**

- [GMPLS RSVP-TE VLAN LSP Signaling Overview on page 788](#)





## CHAPTER 20

# Using a Hierarchy of RSVP LSPs to Tunnel Multiple RSVP LSPs over a Single RSVP LSP

- [Hierarchy of RSVP LSPs Overview on page 819](#)
- [Hierarchy of RSVP LSPs Terminology on page 819](#)
- [Hierarchy of RSVP LSPs Standard on page 820](#)
- [Hierarchy of RSVP LSPs on page 820](#)
- [Advertising the Forwarding Adjacency with OSPF on page 820](#)
- [Configuring a Hierarchy of RSVP LSPs to Tunnel Multiple RSVP LSPs Over a Single RSVP LSP on page 820](#)

## Hierarchy of RSVP LSPs Overview

---

This chapter provides overview information and configuration instructions for hierarchies of RSVP label-switched paths (LSPs), which enable you to tunnel multiple RSVP LSPs over a single RSVP LSP.

The following sections provide an overview of how a hierarchy of RSVP LSPs functions:

- [Hierarchy of RSVP LSPs on page 820](#)
- [Advertising the Forwarding Adjacency with OSPF on page 820](#)

## Hierarchy of RSVP LSPs Terminology

---

### F

<b>Forwarding adjacency</b>	A traffic engineering link created by a forwarding adjacency LSP. You can create a forwarding adjacency between two routers in a network by configuring a forwarding adjacency LSP. Forwarding adjacencies can only be statically configured. However, you can configure OSPF to advertise the forwarding adjacency to other routers. When an RSVP LSP traverses a forwarding adjacency, existing MPLS features such as fast reroute continue to function.
<b>Forwarding adjacency LSP</b>	An RSVP LSP used to tunnel other RSVP LSPs; forms the basis for a forwarding adjacency.

## Hierarchy of RSVP LSPs Standard

---

For more information on how a hierarchy of RSVP LSPs functions, see RFC 4206, *Label Switched Paths (LSP) Hierarchy with Generalized Multi-Protocol Label Switching (GMPLS) Traffic Engineering (TE)*.

## Hierarchy of RSVP LSPs

---

Forwarding adjacencies are configured and managed as point-to-point traffic engineering links by including statements at the **[edit protocols link-management]** hierarchy level. For the forwarding adjacency to function properly, you also need to make RSVP aware of the forwarding adjacency by configuring the corresponding peer interface at the **[edit protocols rsvp]** hierarchy level.

Although forwarding adjacency LSPs are configured and managed as traffic engineering links on the local router, it is not necessary to advertise these traffic engineering links to other routers in the network. However, if you want to automatically forward MPLS traffic over the forwarding adjacency or want other routers to compute paths over the forwarding adjacency, you must configure OSPF to advertise the forwarding adjacency to the other routers in the network and add the forwarding adjacency to the traffic engineering database. OSPF is the only supported interior gateway protocol (IGP).

## Advertising the Forwarding Adjacency with OSPF

---

Once a forwarding adjacency LSP and the corresponding traffic engineering link you have configured, you can configure OSPF to advertise the forwarding adjacency. Unlike regular traffic engineering links, OSPF hellos are not exchanged between the forwarding adjacency LSP endpoints and therefore no routing adjacency is created between the forwarding adjacency endpoints. If you issue a **show ospf neighbor** command on an ingress forwarding adjacency, the command displays the egress router of the forwarding adjacency LSP as a neighbor. However, no real OSPF adjacency is established (no OSPF hellos are exchanged) between the ingress and egress routers. For display purposes only, OSPF creates a pseudo-neighbor corresponding to the peer.

You can configure forwarding adjacencies over existing MPLS networks. A forwarding adjacency LSP is signaled as a regular MPLS LSP without generalized MPLS (GMPLS) extensions. When the forwarding adjacency LSP is advertised as a traffic engineering link in OSPF, the corresponding traffic engineering link in OSPF is also advertised as a regular MPLS traffic engineering link without GMPLS extensions.

## Configuring a Hierarchy of RSVP LSPs to Tunnel Multiple RSVP LSPs Over a Single RSVP LSP

---

The following sections describe how to configure a hierarchy of RSVP LSPs:

- [Configuring an RSVP LSP on Ingress Routers on page 821](#)
- [Configuring Forwarding Adjacencies on page 821](#)

- [Configuring RSVP for Forwarding Adjacencies on page 822](#)
- [Advertising Forwarding Adjacencies Using OSPF on page 823](#)

## Configuring an RSVP LSP on Ingress Routers

Configure a standard RSVP LSP on the ingress router to be used as the forwarding adjacency LSP (see [label-switched-path](#)). This LSP requires no special configuration to function as a forwarding adjacency LSP.

## Configuring Forwarding Adjacencies

A forwarding adjacency is a type of GMPLS traffic engineering link. It requires that you configure local and remote addresses to identify the link. A forwarding adjacency is associated with a specific peer router. You could configure multiple forwarding adjacencies to the same peer router.

To configure a forwarding adjacency, you need to configure the **te-link** statement at the **[edit protocols link-management]** hierarchy level:

```
[edit protocols link-management]
te-link te-link-name {
  label-switched-path lsp-name;
  local-address ip-address;
  remote-address ip-address;
}
```

For more information on how to configure GMPLS traffic engineering links, see “[Configuring LMP Traffic Engineering Links](#)” on page 774.



**NOTE:** Do not configure the control channel for a forwarding adjacency peer router. Configuring a control channel causes the commit operation to fail.

The following sections describe how to configure the **te-link** statement for a forwarding adjacency:

- [Configuring the Local IP Address for Forwarding Adjacencies on page 821](#)
- [Configuring the Remote IP Address for Forwarding Adjacencies on page 822](#)
- [Configuring the LSP for Forwarding Adjacencies on page 822](#)

### Configuring the Local IP Address for Forwarding Adjacencies

---

To configure the local IP address for the forwarding adjacency, include the **local-address** statement:

```
local-address ip-address;
```

For a list of hierarchy levels at which you can include this statement, see the statement summary section for this statement.



**NOTE:** If you configure **local-address**, you must also configure **remote-address**.

### Configuring the Remote IP Address for Forwarding Adjacencies

---

The address of the peer router is the node ID for the forwarding adjacency LSP egress node. You configure this node ID for the forwarding adjacency using the **remote-address** statement:

```
remote-address ip-address;
```

You can include this statement at the following hierarchy levels:

- [edit protocols link-management **te-link** *te-link-name*]
- [edit logical-systems *logical-system-name* protocols link-management **te-link** *te-link-name*]



NOTE: If you configure **remote-address**, you must also configure **local-address**.

---

### Configuring the LSP for Forwarding Adjacencies

---

To configure a router to function as a forwarding adjacency, use the **label-switched-path** statement and specify the LSP configured in “Configuring a Hierarchy of RSVP LSPs to Tunnel Multiple RSVP LSPs Over a Single RSVP LSP” on page 820:

```
label-switched-path label-switched-path-name;
```

You can include this statement at the following hierarchy levels:

- [edit protocols link-management **te-link** *te-link-name*]
- [edit logical-systems *logical-system-name* protocols link-management **te-link** *te-link-name*]

## Configuring RSVP for Forwarding Adjacencies

For the forwarding adjacency to function properly, RSVP must be made aware of it. Do this by specifying the name of the peer interface corresponding to the link-management peer associated with the forwarding adjacency. Including the **peer-interface** statement at the [edit protocols **rsvp**] hierarchy level enables RSVP to use all of the traffic engineering links configured for that peer. You can also configure RSVP control-plane parameters such as the hello interval and refresh reduction.

To configure RSVP to recognize a forwarding adjacency, include the **peer-interface** statement:

```
peer-interface peer-interface-name {  
  disable;  
  (aggregate | no-aggregate);  
  authentication-key key;  
  hello-interval seconds;  
  (reliable | no-reliable);  
}
```

You can include this statement at the following hierarchy levels:

- **[edit protocols rsvp]**
- **[edit logical-systems *logical-system-name* protocols rsvp]**

For more information on how to configure the **peer-interface** statement, see [“Configuring RSVP and OSPF for LMP Peer Interfaces” on page 781](#).

## Advertising Forwarding Adjacencies Using OSPF

You can allow other routers to dynamically signal paths over a forwarding adjacency LSP by configuring OSPF. This configuration is optional.

If you configure OSPF to advertise a forwarding adjacency LSP, the LSP is added to the traffic engineering database on each router in the traffic engineering domain. Because the forwarding adjacency LSP is unidirectional, the corresponding traffic engineering link (forwarding adjacency) is also unidirectional. The forwarding adjacency LSP appears as a standard traffic engineering database half-link to all routers in the traffic engineering domain.

Constrained Shortest Path First (CSPF) performs a bidirectional link check to ensure that traffic can flow in both directions. CSPF checks for a reverse link, either the exact reverse forwarding adjacency or another reverse link. If there is no reverse link from the forwarding adjacency LSP egress router to the forwarding adjacency LSP ingress router, the CSPF check fails.

CSPF might find another parallel reverse link. However, the LSP cannot function properly over the forwarding adjacency unless you have explicitly configured a corresponding forwarding adjacency LSP to handle the traffic flowing in the opposite direction on the forwarding adjacency LSP egress router.

To advertise the traffic engineering properties of a forwarding adjacency to a specific peer router, include the **peer-interface** statement:

```
peer-interface peer-interface-name {  
  dead-interval seconds;  
  disable;  
  hello-interval seconds;  
  retransmit-interval seconds;  
  transit-delay seconds;  
}
```

You can configure this statement at the following hierarchy levels:

- **[edit protocols ospf area *area-name*]**
- **[edit logical-systems *logical-system-name* protocols ospf area *area-name*]**

For more information on how to configure the **peer-interface** statement, see [“Configuring RSVP and OSPF for LMP Peer Interfaces” on page 781](#).



## PART 7

# Configuring Path Computation Element Protocol (PCEP)

- [PCEP Overview on page 827](#)
- [Configuring PCEP on page 843](#)





# PCEP Overview

- [PCEP Overview on page 827](#)
- [Support of the Path Computation Element Protocol for RSVP-TE Overview on page 828](#)


## PCEP Overview

A Path Computation Element (PCE) is an entity (component, application, or network node) that is capable of computing a network path or route based on a network graph and applying computational constraints. A Path Computation Client (PCC) is any client application requesting a path computation to be performed by a PCE. The Path Computation Element Protocol (PCEP) enables communications between a PCC and a PCE, or between two PCEs (defined in RFC 5440).

PCEP is a TCP-based protocol defined by the IETF PCE Working Group, and defines a set of messages and objects used to manage PCEP sessions and to request and send paths for multidomain traffic engineered LSPs (TE LSPs). It provides a mechanism for a PCE to perform path computation for a PCC's external LSPs. The PCEP interactions include LSP status reports sent by the PCC to the PCE, and PCE updates for the external LSPs.

[Figure 84 on page 827](#) illustrates the role of PCEP in the client-side implementation of a stateful PCE architecture in an MPLS RSVP-TE enabled network.

**Figure 84: PCEP Session**

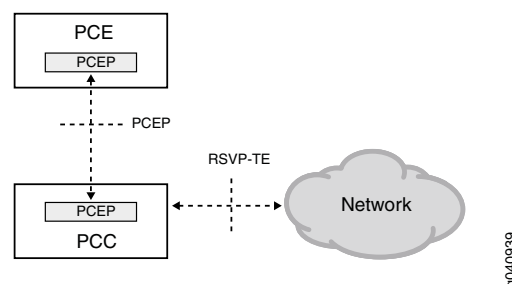

A TCP-based PCEP session connects a PCC to an external PCE. The PCC initiates the PCEP session and stays connected to the PCE for the duration of the PCEP session.

During the PCEP session, the PCC requests LSP parameters from the stateful PCE. On receiving one or more LSP parameters from the PCE, the PCC re-signals the TE LSP. When the PCEP session is terminated, the underlying TCP connection is closed immediately, and the PCC attempts to re-establish the PCEP session.

Thus, the PCEP functions include:

- LSP tunnel state synchronization between a PCC and a stateful PCE—When an active stateful PCE connection is detected, a PCC tries to delegate all LSPs to this PCE in a procedure called LSP state synchronization. PCEP enables synchronization of the PCC LSP state to the PCE.
- Delegation of control over LSP tunnels to a stateful PCE—An active stateful PCE controls one or more LSP attributes for computing paths, such as bandwidth, path (ERO), and priority (setup and hold). PCEP enables such delegation of LSPs for path computation.
- Stateful PCE control of timing and sequence of path computations within and across PCEP sessions—An active stateful PCE modifies one or more LSP attributes, such as bandwidth, path (ERO), and priority (setup and hold). PCEP communicates these new LSP attributes from the PCE to the PCC, after which the PCC re-signals the LSP in the specified path.

**Related  
Documentation**

- [Support of the Path Computation Element Protocol for RSVP-TE Overview on page 828](#)

---

## Support of the Path Computation Element Protocol for RSVP-TE Overview

This section contains the following topics:

- [Understanding MPLS RSVP-TE on page 828](#)
- [Current MPLS RSVP-TE Limitations on page 830](#)
- [Use of an External Path Computing Entity on page 831](#)
- [Components of External Path Computing on page 832](#)
- [Interaction Between a PCE and a PCC Using PCEP on page 834](#)
- [LSP Behavior with External Computing on page 836](#)
- [Configuration Statements Supported for External Computing on page 838](#)
- [PCE-Controlled LSP Protection on page 839](#)
- [PCE Controlled Point-to-Multipoint RSVP-TE LSPs on page 839](#)
- [Auto-Bandwidth and PCE-Controlled LSP on page 840](#)
- [TCP-MD5 Authentication for PCEP Sessions on page 840](#)
- [Impact of Client-Side PCE Implementation on Network Performance on page 841](#)

### Understanding MPLS RSVP-TE

Traffic engineering (TE) deals with performance optimization of operational networks, mainly mapping traffic flows onto an existing physical topology. Traffic engineering provides the ability to move traffic flow away from the shortest path selected by the

interior gateway protocol (IGP) and onto a potentially less congested physical path across a network.

For traffic engineering in large, dense networks, MPLS capabilities can be implemented because they potentially provide most of the functionality available from an overlay model, in an integrated manner, and at a lower cost than the currently competing alternatives. The primary reason for implementing MPLS traffic engineering is to control paths along which traffic flows through a network. The main advantage of implementing MPLS traffic engineering is that it provides a combination of the traffic engineering capabilities of ATM, along with the class-of-service (CoS) differentiation of IP.

In an MPLS network, data plane information is forwarded using label switching. A packet arriving on a provider edge (PE) router from the customer edge (CE) router has labels applied to it, and it is then forwarded to the egress PE router. The labels are removed at the egress router and it is then forwarded out to the appropriate destination as an IP packet. The label-switching routers (LSRs) in the MPLS domain use label distribution protocols to communicate the meaning of labels used to forward traffic between and through the LSRs. RSVP-TE is one such label distribution protocol that enables an LSR peer to learn about the label mappings of other peers.

When both MPLS and RSVP are enabled on a router, MPLS becomes a client of RSVP. The primary purpose of the Junos OS RSVP software is to support dynamic signaling within label-switched paths (LSPs). RSVP reserves resources, such as for IP unicast and multicast flows, and requests quality-of-service (QoS) parameters for applications. The protocol is extended in MPLS traffic engineering to enable RSVP to set up LSPs that can be used for traffic engineering in MPLS networks.

When MPLS and RSVP are combined, labels are associated with RSVP flows. Once an LSP is established, the traffic through the path is defined by the label applied at the ingress node of the LSP. The mapping of label to traffic is accomplished using different criteria. The set of packets that are assigned the same label value by a specific node belong to the same forwarding equivalence class (FEC), and effectively define the RSVP flow. When traffic is mapped onto an LSP in this way, the LSP is called an LSP tunnel.

LSP tunnels are a way to establish unidirectional label-switched paths. RSVP-TE builds on the RSVP core protocol by defining new objects and modifying existing objects used in the PATH and RESV objects for LSP establishment. The new objects—LABEL-REQUEST object (LRO), RECORD-ROUTE object (RRO), LABEL object, and EXPLICIT-ROUTE object (ERO)—are optional with respect to the RSVP protocol, except for the LRO and LABEL objects, which are both mandatory for establishing LSP tunnels.

In general, RSVP-TE establishes a label-switched path that ensures frame delivery from ingress to egress router. However, with the new traffic engineering capabilities, the following functions are supported in an MPLS domain:

- Possibility to establish a label-switched path using either a full or partial explicit route (RFC 3209).
- Constraint-based LSP establishment over links that fulfill requirements, such as bandwidth and link properties.

- Endpoint control, which is associated with establishing and managing LSP tunnels at the ingress and egress routers.
- Link management, which manages link resources to do resource-aware routing of traffic engineering LSPs and to program MPLS labels.
- MPLS fast reroute (FRR), which manages the LSPs that need protection and assigns backup tunnel information to these LSPs.


### Current MPLS RSVP-TE Limitations

Although the RSVP extensions for traffic engineering enable better network utilization and meet requirements of classes of traffic, today's MPLS RSVP-TE protocol suite has several issues inherent to its distributed nature. This causes a number of issues during contention for bisection capacity, especially within an LSP priority class where a subset of LSPs share common setup and hold priority values. The limitations of RSVP-TE include:

- Lack of visibility of individual per-LSP, per-device bandwidth demands—The ingress routers in an MPLS RSVP-TE network establish LSPs without having a global view of the bandwidth demand on the network. Information about network resource utilization is only available as total reserved capacity by traffic class on a per interface basis. Individual LSP state is available locally on each label edge router (LER) for its own LSPs only. As a result, a number of issues related to demand pattern arise, particularly within a common setup and hold priority.
- Asynchronous and independent nature of RSVP signaling—In RSVP-TE, the constraints for path establishment are controlled by an administrator. As such, bandwidth reserved for an LSP tunnel is set by the administrator and does not automatically imply any limit on the traffic sent over the tunnel. Therefore, bandwidth available on a traffic engineering link is the bandwidth configured for the link, excluding the sum of all reservations made on the link. Thus, the unsignaled demands on an LSP tunnel lead to service degradation of the LSP requiring excess bandwidth, as well as the other LSPs that comply with the bandwidth requirements of the traffic engineering link.
- LSPs established based on dynamic or explicit path options in the order of preference—The ingress routers in an MPLS RSVP-TE network establish LSPs for demands based on the order of arrival. Because the ingress routers do not have a global view of the bandwidth demand on the network, using the order of preference to establish LSPs can cause traffic to be dropped or LSPs not being established at all when there is an excess of bandwidth demand.

As an example, [Figure 85 on page 831](#) is configured with MPLS RSVP-TE, in which A and G are the label edge routers (LERs). These ingress routers establish LSPs independently based on the order of demands and have no knowledge or control over each other's LSPs. Routers B, C, and D are intermediate or transit routers that connect to the egress routers E and F.

Figure 85: Example MPLS Traffic Engineering

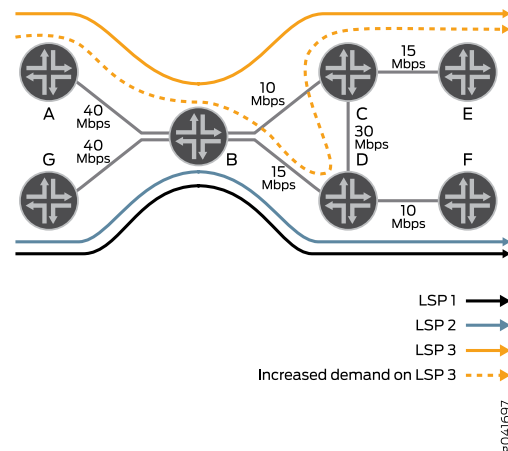

The ingress routers establish LSPs based on the order in which the demands arrive. If Router G receives two demands of capacity 5 each for G-F, then G signals two LSPs – LSP1 and LSP2 – through G-B-D-F. In the same way, when Router A receives the third demand of capacity 10 for A-E, then it signals an LSP, LSP3, through A-B-C-E. However, if the demand on the A-E LSP increases from 10 to 15, Router A cannot signal LSP3 using the same (A-B-C-E) path, because the B-C link has a lower capacity.

Router A should have signaled the increased demand on LSP3 using the A-B-D-E path. Since LSP1 and LSP2 have utilized the B-D link based on the order of demands received, LSP3 is not signaled.

Thus, although adequate max-flow bandwidth is available for all the LSPs, LSP3 is subject to potentially prolonged service degradation. This is due to Router A's lack of global demand visibility and the lack of systemic coordination in demand placement by the ingress routers A and G.

## Use of an External Path Computing Entity

As a solution to the current limitations found in the MPLS RSVP-TE path computation, an external path computing entity with a global view of per-LSP, per-device demand in the network independent of available capacity is required.

Currently, only online and real-time constraint-based routing path computation is provided in an MPLS RSVP-TE network. Each router performs constraint-based routing calculations independent of the other routers in the network. These calculations are based on currently available topology information—information that is usually recent, but not completely accurate. LSP placements are locally optimized, based on current network status. The MPLS RSVP-TE tunnels are set up using the CLI. An operator configures the TE LSP, which is then signaled by the ingress router.

In addition to the existing traffic engineering capabilities, the MPLS RSVP-TE functionality is extended to include an external path computing entity, called the Path Computation Element (PCE). The PCE computes the path for the TE LSPs of ingress routers that have

been configured for external control. The ingress router that connects to a PCE is called a Path Computation Client (PCC). The PCC is configured with the Path Computation Client Protocol (PCEP) to facilitate external path computing by a PCE.

For more information, see [“Components of External Path Computing” on page 832](#).

To enable external path computing for a PCC's TE LSPs, include the **`lsp-external-controller pccd`** statement at the **`[edit mpls]`** and **`[edit mpls lsp lsp-name]`** hierarchy levels.

## Components of External Path Computing

The components that make up an external path computing system are:

- [Path Computation Element on page 832](#)
- [Path Computation Client on page 833](#)
- [Path Computation Element Protocol on page 833](#)

### Path Computation Element

---

A Path Computation Element (PCE) can be any entity (component, application, or network node) that is capable of computing a network path or route based on a network graph and applying computational constraints. However, a PCE can compute the path for only those TE LSPs of a PCC that have been configured for external control.

A PCE can either be stateful or stateless.

- **Stateful PCE**—A stateful PCE maintains strict synchronization between the PCE and network states (in terms of topology and resource information), along with the set of computed paths and reserved resources in use in the network. In other words, a stateful PCE utilizes information from the traffic engineering database as well as information about existing paths (for example, TE LSPs) in the network when processing new requests from the PCC.

A stateful PCE is of two types:

- **Passive stateful PCE**—Maintains synchronization with the PCC and learns the PCC LSP states to better optimize path calculations, but does not have control over them.
- **Active stateful PCE**—Actively modifies the PCC LSPs, in addition to learning about the PCC LSP states.



**NOTE:** In a redundant configuration with main and backup active stateful PCEs, the backup active stateful PCE cannot modify the attributes of delegated LSPs until it becomes the main PCE at the time of a failover. There is no preempting of PCEs in the case of a switchover. The main PCE is backed by a backup PCE, and when the main PCE goes down, the backup PCE assumes the role of the main PCE and remains the main PCE even after the PCE that was previously the main PCE is operational again.

---

A stateful PCE provides the following functions:

- Offers offline LSP path computation.
- Triggers LSP re-route when there is a need to re-optimize the network.
- Changes LSP bandwidth when there is an increase in bandwidth demand from an application.
- Modifies other LSP attributes on the router, such as ERO, setup priority, and hold priority.

A PCE has a global view of the bandwidth demand in the network and maintains a traffic-engineered database to perform path computations. It performs statistics collection from all the routers in the MPLS domain using SNMP and NETCONF. This provides a mechanism for offline control of the PCC's TE LSPs. Although an offline LSP path computation system can be embedded in a network controller, the PCE acts like a full-fledged network controller that provides control over the PCC's TE LSPs, in addition to computing paths.

Although a stateful PCE allows for optimal path computation and increased path computation success, it requires reliable state synchronization mechanisms, with potentially significant control plane overhead and the maintenance of a large amount of data in terms of states, as in the case of a full mesh of TE LSPs.

- Stateless PCE—A stateless PCE does not remember any computed path, and each set of requests is processed independently of each other (RFC 5440).

### Path Computation Client

A Path Computation Client (PCC) is any client application requesting a path computation to be performed by a PCE.

A PCC can connect to a maximum of 10 PCEs at one time. The PCC to PCE connection can be a configured static route or a TCP connection that establishes reachability. The PCC assigns each connected PCE a priority number. It sends a message to all the connected PCEs with information about its current LSPs, in a process called LSP state synchronization. For the TE LSPs that have external control enabled, the PCC delegates those LSPs to the main PCE. The PCC elects, as the main PCE, a PCE with the lowest priority number, or the PCE that it connects to first in the absence of a priority number.

The PCC re-signals an LSP based on the computed path it receives from a PCE. When the PCEP session with the main PCE is terminated, the PCC elects a new main PCE, and all delegated LSPs to the previously main PCE are delegated to the newly available main PCE.

### Path Computation Element Protocol

The Path Computation Element Protocol (PCEP) is used for communication between PCC and PCE (as well as between two PCEs) (RFC 5440). PCEP is a TCP-based protocol defined by the IETF PCE Working Group, and defines a set of messages and objects used to manage PCEP sessions and to request and send paths for multidomain TE LSPs. The PCEP interactions include PCC messages, as well as notifications of specific states

related to the use of a PCE in the context of MPLS RSVP-TE. When PCEP is used for PCE-to-PCE communication, the requesting PCE assumes the role of a PCC.


Thus, the PCEP functions include:

- LSP tunnel state synchronization between PCC and a stateful PCE.
- Delegation of control over LSP tunnels to a stateful PCE.

## Interaction Between a PCE and a PCC Using PCEP

Figure 86 on page 834 illustrates the relationship between a PCE, PCC, and the role of PCEP in the context of MPLS RSVP-TE.

Figure 86: PCC and RSVP-TE

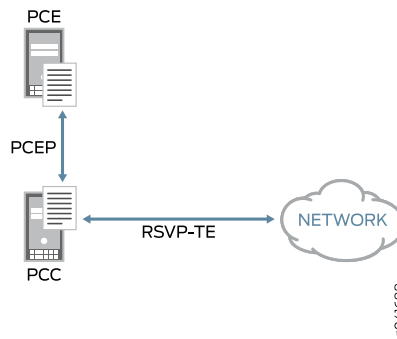

The PCE to PCC communication is enabled by the TCP-based PCEP. The PCC initiates the PCEP session and stays connected to a PCE for the duration of the PCEP session.



**NOTE:** Starting with Junos OS Release 16.1, you can secure a PCEP session using TCP-MD5 authentication as per RFC 5440. To enable the MD5 security mechanism for a PCEP session, it is recommended that you define and bind the MD5 authentication key at the `[edit protocols pcep pce pce-id]` hierarchy level for a PCEP session. You can, however, also use a predefined keychain from the `[edit security authentication-key-chains key-chain]` hierarchy level to secure a PCEP session. In this case, you should bind the predefined keychain into the PCEP session at the `[edit protocols pcep pce pce-id]` hierarchy level.

The PCE and PCC use the same key to verify the authenticity of each segment sent on the TCP connection of the PCEP session, thereby securing the PCEP communication between the devices, which might be subject to attacks and can disrupt services on the network.

For more information on securing PCEP sessions using MD5 authentication, see [“TCP-MD5 Authentication for PCEP Sessions” on page 840](#).



Once the PCEP session is established, the PCC performs the following tasks:

1. LSP state synchronization—The PCC sends information about all the LSPs (local and external) to all connected PCEs. For external LSPs, the PCC sends information about any configuration change, RRO change, state change, and so on, to the PCE.

For PCE-initiated LSPs, there is no LSP configuration present on the PCC. The PCE initiating the LSP sends the LSP parameters to the PCC that has indicated its capability of supporting PCE-initiated LSPs.



**NOTE:** Support for PCE-initiated LSPs is provided in Junos OS Release 13.3 and later releases.

2. LSP delegation—After the LSP state information is synchronized, the PCC then delegates the external LSPs to one PCE, which is the main active stateful PCE. Only the main PCE can set parameters for the external LSP. The parameters that the main PCE modifies include bandwidth, path (ERO), and priority (setup and hold). The parameters specified in the local configuration are overridden by the parameters that are set by the main PCE.



**NOTE:** When the PCEP session with the main PCE is terminated, the PCC elects a new main PCE, and all delegated LSPs to the previously main PCE are delegated to the newly available main PCE.

In the case of PCE-initiated LSPs, the PCC creates the LSP using the parameters received from the PCE. The PCC assigns the PCE-initiated LSP a unique LSP-ID, and automatically delegates the LSP to the PCE. A PCC cannot revoke the delegation for the PCE-initiated LSPs for an active PCEP session.

When a PCEP session terminates, the PCC starts two timers without immediately deleting the PCE-initiated LSPs – **delegation cleanup timeout** and **lsp cleanup timer** – to avoid disruption of services. During this time, an active stateful PCE can acquire control of the LSPs provisioned by the failed PCE, by sending a create request for the LSP.

Control over PCE-initiated LSPs reverts to the PCC at the expiration of the **delegation cleanup timeout**. When the **delegation cleanup timeout** expires, and no other PCE has acquired control over the LSP from the failed PCE, the PCC takes local control of the non-delegated PCE-initiated LSP. Later, when the original or a new active stateful PCE wishes to acquire control of the locally controlled PCE-initiated LSPs, the PCC delegates these LSPs to the PCE and the **lsp cleanup timer** timer is stopped.

A PCE may return the delegation of the PCE-initiated LSP to the PCC to allow LSP transfer between PCEs. This triggers the **lsp cleanup timer** for the PCE-initiated LSP. The PCC waits for the LSP cleanup timer to expire before removing the non-delegated PCE-initiated LSPs from the failed PCE.

When the **lsp cleanup timer** expires, and no other PCE has acquired control over the LSPs from the failed PCE, the PCC deletes all the LSPs provisioned by the failed PCE.


3. LSP signaling—On receiving one or more LSP parameters from the main active stateful PCE, the PCC re-signals the TE LSP based on the PCE provided path. If the PCC fails to set up the LSP, it notifies the PCE of the setup failure and waits for the main PCE to provide new parameters for that LSP, and then re-signals it.

When the PCE specifies a path that is incomplete or has loose hops where only the path endpoints are specified, the PCC does not perform local constraint-based routing to find out the complete set of hops. Instead, the PCC provides RSVP with the PCE provided path, as it is, for signaling, and the path gets set up using IGP hop-by-hop routing.

Considering the topology used in [Figure 85 on page 831](#), [Figure 87 on page 836](#) illustrates the partial client-side PCE implementation in the MPLS RSVP-TE enabled network. The ingress routers A and G are the PCCs that are configured to connect to the external stateful PCE through a TCP connection.

The PCE has a global view of the bandwidth demand in the network and performs external path computations after looking up the traffic engineering database. The active stateful PCE then modifies one or more LSP attributes and sends an update to the PCC. The PCC uses the parameters it receives from the PCE to re-signal the LSP.

**Figure 87: Example PCE for MPLS RSVP-TE**

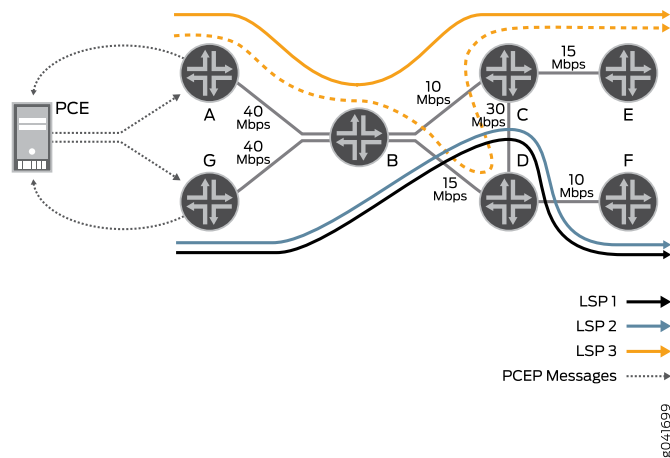

This way, the stateful PCE provides a cooperative operation of distributed functionality used to address specific challenges of a shortest interdomain constrained path computation. It eliminates congestion scenarios in which traffic streams are inefficiently mapped onto available resources, causing overutilization of some subsets of network resources, while other resources remain underutilized.

## LSP Behavior with External Computing

- [LSP Types on page 837](#)
- [LSP Control Mode on page 838](#)

## LSP Types

In a client-side PCE implementation, there are three types of TE LSPs:

- CLI-controlled LSPs—The LSPs that do not have the **`lsp-external-controller pccd`** statement configured are called CLI-controlled LSPs. Although these LSPs are under local control, the PCC updates the connected PCEs with information about the CLI-controlled LSPs during the initial LSP synchronization process. After the initial LSP synchronization, the PCC informs the PCE of any new and deleted LSPs as well.
- PCE-controlled LSPs—The LSPs that have the **`lsp-external-controller pccd`** statement configured are called PCE-controlled LSPs. The PCC delegates the PCC-initiated LSPs to the main PCE for external path computation.

The PCC informs the PCE about the configured parameters of a PCE-controlled LSP, such as bandwidth, ERO, and priorities. It also informs the PCE about the actual values used for these parameters to set up the LSP including the RRO, when available.

The PCC sends such LSP status reports to the PCE only when a reconfiguration has occurred or when there is a change in the ERO, RRO, or status of the PCE-controlled LSPs under external control.

There are two types of parameters that come from the CLI configuration of an LSP for a PCE:

- Parameters that are not overridden by a PCE, and that are applied immediately.
- Parameters that are overridden by a PCE. These parameters include bandwidth, path, and priority (setup and hold values). When the control mode switches from external to local, the CLI-configured values for these parameters are applied at the next opportunity to re-signal the LSP. The values are not applied immediately.
- Externally-provisioned LSPs (or PCE-initiated LSPs)—The LSPs that have the **`lsp-provisioning`** statement configured are called PCE-initiated LSPs. A PCE-initiated LSP is dynamically created by an external PCE; as a result, there is no LSP configuration present on the PCC. The PCC creates the PCE-initiated LSP using the parameters provided by the PCE, and automatically delegates the LSP to the PCE.



**NOTE:** Support for PCE-initiated LSPs is provided in Junos OS Release 13.3 and later releases.

The CLI-controlled LSPs, PCE-controlled LSPs, and PCE-initiated LSPs can coexist on a PCC.

The CLI-controlled LSPs and PCE-controlled LSPs can coexist on a PCC.

## LSP Control Mode

In a client-side PCE implementation, there are two types of control modes for a PCC-controlled LSP:

- **External**—By default, all PCE-controlled LSPs are under external control. When an LSP is under external control, the PCC uses the PCE-provided parameters to set up the LSP.
- **Local**—A PCE-controlled LSP can come under local control. When the LSP switches from external control to local control, path computation is done using the CLI-configured parameters and constraint-based routing. Such a switchover happens only when there is a trigger to re-signal the LSP. Until then, the PCC uses the PCE-provided parameters to signal the PCE-controlled LSP, although the LSP remains under local control.

A PCE-controlled LSP switches to local control from its default external control mode in cases such as no connectivity to a PCE or when a PCE returns delegation of LSPs back to the PCC.

For more information about CLI-controlled LSPs and PCE-controlled LSPs, see [“LSP Types” on page 837](#).

## Configuration Statements Supported for External Computing

[Table 20 on page 838](#) lists the MPLS and existing LSP configuration statements that apply to a PCE-controlled LSP.

**Table 20: Applicability of MPLS and Existing LSP Configurations to a PCE-Controlled LSP**

Support for PCE-Controlled LSP	Applicable LSP Configuration Statements	Applicable MPLS Configuration Statements
These configuration statements can be configured along with the PCE configuration. However, they take effect only when the local configuration is in use. During PCE control, these configuration statements remain inactive.	<ul style="list-style-type: none"> <li>• admin-group</li> <li>• auto-bandwidth</li> <li>• hop-limit</li> <li>• least-fill</li> <li>• most-fill</li> <li>• random</li> </ul>	<ul style="list-style-type: none"> <li>• admin-group</li> <li>• admin-groups</li> <li>• admin-group-extended</li> <li>• hop-limit</li> <li>• no-cspf</li> <li>• smart-optimize-timer</li> </ul>
These configuration statements can be configured along with the PCE configuration, but are overridden by the PCE-controlled LSP attributes. However, when the local configuration is in use, the configured values for these configuration statements are applied.	<ul style="list-style-type: none"> <li>• bandwidth</li> <li>• primary</li> <li>• priority</li> </ul>	<ul style="list-style-type: none"> <li>• priority</li> </ul>
<p><b>NOTE:</b> Changes to the local configuration using the CLI while the LSP is under the control of a stateful PCE do not have any effect on the LSP. These changes come into effect only when the local configuration is applied.</p>		

**Table 20: Applicability of MPLS and Existing LSP Configurations to a PCE-Controlled LSP (*continued*)**

Support for PCE-Controlled LSP	Applicable LSP Configuration Statements	Applicable MPLS Configuration Statements
These configuration statements cannot be configured along with the PCE configuration.	<ul style="list-style-type: none"> <li>p2mp</li> <li>template</li> </ul>	<ul style="list-style-type: none"> <li>p2mp-lsp-next-hop</li> </ul>

The rest of the LSP configuration statements are applicable in the same way as for existing LSPs. On configuring any of the above configuration statements for a PCE-controlled LSP, an MPLS log message is generated to indicate when the configured parameters take effect.

### PCE-Controlled LSP Protection

The protection paths, including fast reroute and bypass LSPs, are locally computed by the PCC using constraint-based routing. A stateful PCE specifies the primary path (ERO) only. A PCE can also trigger a non-standby secondary path, even if the local configuration does not have a non-standby secondary path for LSP protection.

### PCE Controlled Point-to-Multipoint RSVP-TE LSPs

After a PCEP session is established between a PCE and a PCC, the PCC reports all the LSPs in the system to the PCE for LSP state synchronization. This includes PCC-controlled, PCE-delegated, and PCE-initiated point-to-point LSPs. Starting with Junos OS Release 15.1F6 and 16.1R1, this capability is extended to report point-to-multipoint LSPs as well. For a PCE, the point-to-multipoint LSP is similar to that of RSVP point-to-multipoint LSP, where the point-to-multipoint LSP is treated as collection of point-to-point LSPs grouped under a point-to-multipoint identifier.

By default, PCE control of point-to-multipoint LSPs is not supported on a PCC. To add this capability, include the **p2mp-lsp-report-capability** statement at the **[edit protocols pcep pce pce-name]** or **[edit protocols pcep pce-group group-id]** hierarchy levels. After the point-to-multipoint report capability is configured on a PCC, the PCC advertises this capability to the PCE. If the PCE advertises the same point-to-multipoint report capability in return, then the PCC reports the complete point-to-multipoint LSP tree to the PCE for LSP state synchronization.

A PCC with the point-to-multipoint TE LSP capability supports reporting of point-to-multipoint TE LSPs for stateful PCEs, point-to-multipoint update, and LSP database supporting point-to-multipoint LSP name as key. However, the following features and functions are not supported for Junos OS Release 15.1F6 and 16.1:

- Static point-to-multipoint LSPs
- PCE-delegated and PCE-initiated point-to-multipoint LSPs
- Auto-bandwidth
- TE++
- PCE request and reply message

- Creation of point-to-multipoint LSPs using templates
- Configuring forward entry on the PCE-initiated point-to-multipoint LSPs
- Configuring forward entry on the router pointing to a provisioned LSP.

## Auto-Bandwidth and PCE-Controlled LSP

The auto-bandwidth option does not apply to PCE-controlled LSPs, although LSPs under the control of auto-bandwidth and constraint-based routing can coexist with PCE-controlled LSPs. The statistics collection for auto-bandwidth takes effect only when the control mode of a PCE-controlled LSP changes from external to local. This can happen in cases such as no connectivity to a PCE or when a PCE returns delegation of LSPs back to the PCC.

## TCP-MD5 Authentication for PCEP Sessions

A stateful PCE server automates the creation of traffic engineering paths across the network, increasing network utilization and enabling a customized programmable networking experience with the use of PCEP communication with a PCC. A PCC sends LSP reports to a PCE server, and the PCE updates or provisions LSPs back to the PCC. The data sent over a PCEP session is crucial for a PCE server to perform external path computing. As a result, an attack on the PCEP communication can disrupt network services. If altered PCEP messages are sent to a PCC, inappropriate LSPs can be set up. Similarly, if altered PCEP messages are sent to a PCE, an incorrect view of the network is learned by the PCE.

Considering the significance of the PCEP communication between a PCE and PCC in executing the PCE functionalities effectively, Junos OS Release 16.1 introduces the feature of securing a PCEP session using TCP-MD5 authentication as per RFC 5440. This feature protects the communication between a PCE and PCC over a PCEP session, which might be subject to an attack, and can disrupt network services.

To enable the MD5 security mechanism for a PCEP session, it is recommended that you define and bind the MD5 authentication key at the **[edit protocols pcep pce pce-id]** hierarchy level for a PCEP session. You can, however, also use a predefined keychain from the **[edit security authentication-key-chains key-chain]** hierarchy level to secure a PCEP session. In this case, you should bind the predefined keychain into the PCEP session at the **[edit protocols pcep pce pce-id]** hierarchy level.

The following configuration is executed on the PCC to establish a secure PCEP session with a PCE:

- Using MD5 authentication key:

```
[edit protocols pcep pce pce-id]
user@PCC# set authentication-key key
```

- Using predefined authentication keychain:

```
[edit protocols pcep pce pce-id]
user@PCC# set authentication-key-chain key-chain
user@PCC# set authentication-algorithm md5
```

For secure PCEP sessions to be established successfully, the MD5 authentication should be configured with the pre-shared authentication key on both the PCE server and the PCC. The PCE and PCC use the same key to verify the authenticity of each segment sent on the TCP connection of the PCEP session.



NOTE:

- Junos OS Release 16.1 supports only TCP-MD5 authentication for PCEP sessions, without extending support for TLS and TCP-AO, such as protection against eavesdropping, tampering, and message forgery.
- Initial application of security mechanism to a PCEP session causes the session to reset.
- If MD5 is misconfigured or not configured on one side of the PCEP session, the session does not get established. Verify that the configurations on the PCC and PCE are matching.
- This feature does not provide support for any session authentication mechanism.
- To view the authentication keychain used by the PCEP session, use the `show path-computation-client status` and `show protocols pcep` command outputs.
- Use the `show system statistics tcp | match auth` command to view the number of packets that get dropped by TCP because of authentication errors.
- Operation of the keychain can be verified by using the `show security keychain detail` command output.

## Impact of Client-Side PCE Implementation on Network Performance

The maintenance of a stateful database can be non-trivial. In a single centralized PCE environment, a stateful PCE simply needs to remember all the TE LSPs that the PCE has computed, the TE LSPs that were actually set up (if this can be known), and when the TE LSPs were torn down. However, these requirements cause substantial control protocol overhead in terms of state, network usage and processing, and optimizing links globally across the network. Thus, the concerns of a stateful PCE implementation include:

- Any reliable synchronization mechanism results in significant control plane overhead. PCEs might synchronize state by communicating with each other, but when TE LSPs are set up using distributed computation performed among several PCEs, the problems of synchronization and race condition avoidance become larger and more complex.
- Out-of-band traffic engineering database synchronization can be complex with multiple PCEs set up in a distributed PCE computation model, and can be prone to race conditions, scalability concerns, and so on.
- Path calculations incorporating total network state is highly complex, even if the PCE has detailed information on all paths, priorities, and layers.

In spite of the above concerns, the partial client-side implementation of the stateful PCE is extremely effective in large traffic engineering systems. It provides rapid convergence and significant benefits in terms of optimal resource usage, by providing the requirement for global visibility of a TE LSP state and for ordered control of path reservations across devices within the system being controlled.

**Release History Table**

Release	Description
16.1	Starting with Junos OS Release 16.1, you can secure a PCEP session using TCP-MD5 authentication as per RFC 5440.
16.1	Junos OS Release 16.1 introduces the feature of securing a PCEP session using TCP-MD5 authentication as per RFC 5440.

**Related Documentation**

- [Example: Configuring the Path Computation Element Protocol for MPLS RSVP-TE on page 843](#)
- [Example: Configuring Path Computation Element Protocol with Support of PCE-Initiated LSPs on page 856](#)
- [Example: Configuring Path Computation Element Protocol with Support for PCE Controlled Point-to-Multipoint RSVP-TE LSPs on page 869](#)



## CHAPTER 22

# Configuring PCEP

- [Example: Configuring the Path Computation Element Protocol for MPLS RSVP-TE on page 843](#)
- [Example: Configuring Path Computation Element Protocol with Support of PCE-Initiated LSPs on page 856](#)
- [Configuring Path Computation Element Protocol with Support of PCE Initiated LSPs for MPLS RSVP TE on page 866](#)
- [Example: Configuring Path Computation Element Protocol with Support for PCE Controlled Point-to-Multipoint RSVP-TE LSPs on page 869](#)

### Example: Configuring the Path Computation Element Protocol for MPLS RSVP-TE

This example shows how to enable external path computing by a Path Computation Element (PCE) for traffic engineered label-switched paths (TE LSPs) on a Path Computation Client (PCC). It also shows how to configure the Path Computation Element Protocol (PCEP) on the PCC to enable PCE to PCC communication.

- [Requirements on page 843](#)
- [Overview on page 844](#)
- [Configuration on page 846](#)
- [Verification on page 851](#)

## Requirements

This example uses the following hardware and software components:

- Three routers that can be a combination of M Series Multiservice Edge Routers, MX Series 3D Universal Edge Routers, T Series Core Routers, or PTX Series Transport Router, one of which is configured as a PCC.
- A TCP connection to an external stateful PCE from the PCC.
- Junos OS Release 12.3 or later running on the PCC along with the JSDN add-on package.



**NOTE:** The JSDN add-on package is required to be installed along with the core Junos OS installation package.

Before you begin:

1. Configure the device interfaces.
2. Configure MPLS and RSVP-TE.
3. Configure IS-IS or any other IGP protocol.

## Overview

Starting with Junos OS Release 12.3, the MPLS RSVP-TE functionality is extended to provide a partial client-side implementation of the stateful PCE architecture (draft-ietf-pce-stateful-pce) on a PCC.



**NOTE:** The partial client-side implementation of the stateful PCE architecture is based on version 2 of Internet draft draft-ietf-pce-stateful-pce. Starting with Junos OS Release 16.1, this implementation is upgraded to support version 7, as defined in Internet draft draft-ietf-pce-stateful-pce-07. Releases prior to 16.1 support the older version of the PCE draft, causing interoperability issues between a PCC running a previous release and a stateful PCE server that adheres to Internet draft draft-ietf-pce-stateful-pce-07.

To enable external path computing by a PCE, include the **lsp-external-controller** statement on the PCC at the **[edit mpls]** and **[edit mpls lsp lsp-name]** hierarchy levels.

```
lsp-external-controller pccd;
```

An LSP configured with the **lsp-external-controller** statement is referred to as a PCE-controlled LSP and is under the external control of a PCE by default. An active stateful PCE can override the parameters set from the CLI, such as bandwidth, path (ERO), and priority, for such PCE-controlled LSPs of the PCC.

To enable PCE to PCC communication, configure PCEP on the PCC at the **[edit protocols]** hierarchy level.

```
pcep { ... }
```


When configuring PCEP on a PCC, be aware of the following considerations:

- The JSDN add-on package is required to be installed along with the core Junos OS installation package.
- Junos OS Release 12.3 supports only stateful PCEs.
- A PCC can connect to a maximum of 10 stateful PCEs. At any given point in time, there can be only one main PCE (the PCE with the lowest priority value, or the PCE that connects to the PCC first in the absence of a PCE priority) to which the PCC delegates LSPs for path computation.
- For Junos OS Release 12.3, the PCC always initiates the PCEP sessions. PCEP sessions initiated by remote PCEs are not accepted by the PCC.

- Existing LSP features, such as LSP protection and make-before-break, work for PCE-controlled LSPs.
- The auto-bandwidth option is turned off for PCE-controlled LSPs, although LSPs under the control of auto-bandwidth and constraint-based routing can coexist with PCE-controlled LSPs.
- PCE-controlled LSPs can be referred to by other CLI configurations, such as `lsp-nexthop` to routes, forwarding adjacencies, CCC connections, and logical tunnels.
- PCE-controlled LSPs do not support GRES.
- PCE-controlled LSPs under logical-systems are not supported.
- PCE-controlled LSPs cannot be point-to-multipoint LSPs.
- Bidirectional LSPs are not supported.
- PCE-controlled LSPs cannot have secondary paths without a primary path.
- PCE-controlled LSPs depend on external path computation, which impacts overall setup time, reroutes, and make-before-break features.
- Setup time and convergence time (reroute, MBB) for existing LSPs is the same as in previous releases, in the absence of PCE-controlled LSPs. However, a small impact is seen in the presence of PCE-controlled LSPs.
- ERO computation time is expected to be significantly higher than local-CSPF.

### Topology

Figure 88: Configuring PCEP for MPLS RSVP-TE

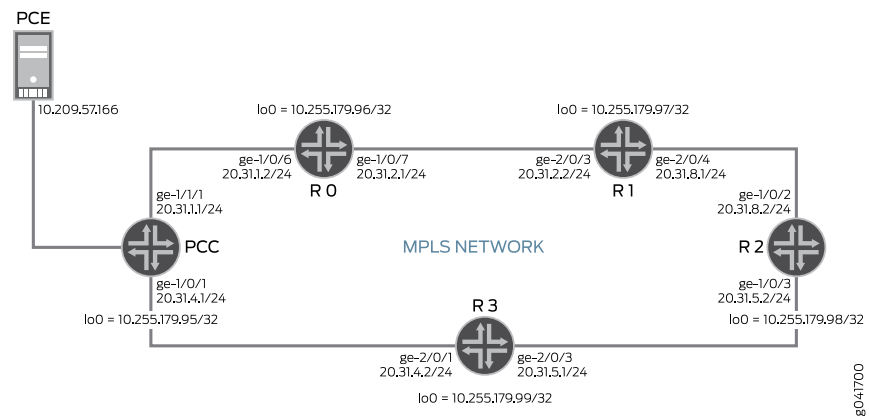

In this example, PCC is the ingress router that connects to the external active stateful PCE.

The external LSPs of Router PCC are computed as follows:

1. Router PCC receives the LSP tunnel configuration that was set up using the CLI. Assuming that the received configuration is enabled with external path computing, Router PCC becomes aware that some of the LSP attributes – bandwidth, path, and priority – are under the control of the stateful PCE and delegates the LSP to the PCE.

In this example, the external LSP is called **PCC-to-R2** and it is being set up from Router PCC to Router R2. The CLI-configured ERO for **PCC-to-R2** is PCC-R0-R1-R2. The bandwidth for **PCC-to-R2** is 10m, and both the setup and hold priority values are 4.

2. Router PCC tries to retrieve the PCE-controlled LSP attributes. To do this, Router PCC sends out a PCRpt message to the stateful PCE stating that the LSP has been configured. The PCRpt message communicates the status of the LSP and contains the local configuration parameters of the LSP.
3. The stateful PCE modifies one or more of the delegated LSP attributes and sends the new LSP parameters to Router PCC through the PCUpd message.
4. On receiving the new LSP parameters, Router PCC sets up a new LSP and re-signals it using the PCE-provided path.

In this example, the PCE-provided ERO for **PCC-to-R2** is PCC-R3-R2. The bandwidth for **PCC-to-R2** is 8m, and both the setup and hold priority values are 3.

5. Router PCC sends a PCRpt with the new RRO to the stateful PCE.

## Configuration

**CLI Quick Configuration** To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

```
PCC
set interfaces ge-1/0/1 unit 0 family inet address 20.31.4.1/24
set interfaces ge-1/0/1 unit 0 family iso
set interfaces ge-1/0/1 unit 0 family mpls
set interfaces ge-1/1/1 unit 0 family inet address 20.31.1.1/24
set interfaces ge-1/1/1 unit 0 family iso
set interfaces ge-1/1/1 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 10.255.179.95/32
set protocols rsvp interface all
set protocols rsvp interface fxp0.0 disable
set protocols mpls lsp-external-controller pccd
set protocols mpls label-switched-path PCC-to-R2 to 10.255.179.98
set protocols mpls label-switched-path PCC-to-R2 bandwidth 10m
set protocols mpls label-switched-path PCC-to-R2 priority 4 4
set protocols mpls label-switched-path PCC-to-R2 primary to-R2-path
set protocols mpls label-switched-path PCC-to-R2 lsp-external-controller pccd
set protocols mpls path to-R2-path 20.31.1.2 strict
set protocols mpls path to-R2-path 20.31.2.2 strict
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols isis level 1 disable
set protocols isis interface all
set protocols isis interface fxp0.0 disable
```

```

set protocols isis interface lo0.0
set protocols pcep pce pce1 destination-ipv4-address 10.209.57.166
set protocols pcep pce pce1 destination-port 4189
set protocols pcep pce pce1 pce-type active
set protocols pcep pce pce1 pce-type stateful

R0  set interfaces ge-1/0/6 unit 0 family inet address 20.31.1.2/24
    set interfaces ge-1/0/6 unit 0 family iso
    set interfaces ge-1/0/6 unit 0 family mpls
    set interfaces ge-1/0/7 unit 0 family inet address 20.31.2.1/24
    set interfaces ge-1/0/7 unit 0 family iso
    set interfaces ge-1/0/7 unit 0 family mpls
    set interfaces lo0 unit 0 family inet address 10.255.179.96/32
    set protocols rsvp interface all
    set protocols rsvp interface fxp0.0 disable
    set protocols mpls interface all
    set protocols mpls interface fxp0.0 disable
    set protocols isis level 1 disable
    set protocols isis interface all
    set protocols isis interface fxp0.0 disable
    set protocols isis interface lo0.0

R1  set system ports console log-out-on-disconnect
    set interfaces ge-2/0/3 unit 0 family inet address 20.31.2.2/24
    set interfaces ge-2/0/3 unit 0 family iso
    set interfaces ge-2/0/3 unit 0 family mpls
    set interfaces ge-2/0/4 unit 0 family inet address 20.31.8.1/24
    set interfaces ge-2/0/4 unit 0 family iso
    set interfaces ge-2/0/4 unit 0 family mpls
    set interfaces lo0 unit 0 family inet address 10.255.179.97/32
    set protocols rsvp interface all
    set protocols rsvp interface fxp0.0 disable
    set protocols mpls interface all
    set protocols mpls interface fxp0.0 disable
    set protocols isis level 1 disable
    set protocols isis interface all
    set protocols isis interface fxp0.0 disable
    set protocols isis interface lo0.0

R2  set interfaces ge-1/0/2 unit 0 family inet address 20.31.8.2/24
    set interfaces ge-1/0/2 unit 0 family iso
    set interfaces ge-1/0/2 unit 0 family mpls
    set interfaces ge-1/0/3 unit 0 family inet address 20.31.5.2/24
    set interfaces ge-1/0/3 unit 0 family iso
    set interfaces ge-1/0/3 unit 0 family mpls
    set interfaces lo0 unit 0 family inet address 10.255.179.98/32
    set protocols rsvp interface all
    set protocols rsvp interface fxp0.0 disable
    set protocols mpls interface all
    set protocols mpls interface fxp0.0 disable
    set protocols isis level 1 disable
    set protocols isis interface all
    set protocols isis interface fxp0.0 disable
    set protocols isis interface lo0.0

```

```

R3    set interfaces ge-2/0/1 unit 0 family inet address 20.31.4.2/24
      set interfaces ge-2/0/1 unit 0 family iso
      set interfaces ge-2/0/1 unit 0 family mpls
      set interfaces ge-2/0/3 unit 0 family inet address 20.31.5.1/24
      set interfaces ge-2/0/3 unit 0 family iso
      set interfaces ge-2/0/3 unit 0 family mpls
      set interfaces lo0 unit 0 family inet address 10.255.179.99/32
      set protocols rsvp interface all
      set protocols rsvp interface fxp0.0 disable
      set protocols mpls interface all
      set protocols mpls interface fxp0.0 disable
      set protocols isis level 1 disable
      set protocols isis interface all
      set protocols isis interface fxp0.0 disable
      set protocols isis interface lo0.0

```

**Step-by-Step Procedure** The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode*.

To configure Router PCC:



**NOTE:** Repeat this procedure for every Juniper Networks ingress router in the MPLS domain, after modifying the appropriate interface names, addresses, and any other parameters for each router.

1. Configure the interfaces.

To enable MPLS, include the protocol family on the interface so that the interface does not discard incoming MPLS traffic.

**[edit interfaces]**

```

user@PCC# set ge-1/0/1 unit 0 family inet address 20.31.4.1/24
user@PCC# set ge-1/0/1 unit 0 family iso
user@PCC# set ge-1/0/1 unit 0 family mpls

```

```

user@PCC# set ge-1/1/1 unit 0 family inet address 20.31.1.1/24
user@PCC# set ge-1/1/1 unit 0 family iso
user@PCC# set ge-1/1/1 unit 0 family mpls

```

```

user@PCC# set lo0 unit 0 family inet address 10.255.179.95/32

```

2. Enable RSVP on all interfaces of Router PCC, excluding the management interface.

**[edit protocols]**

```

user@PCC# set rsvp interface all
user@PCC# set rsvp interface fxp0.0 disable

```

3. Configure the label-switched path (LSP) from Router PCC to Router R2 and enable external control of LSPs by the PCE.

**[edit protocols]**

```

user@PCC# set mpls lsp-external-controller pccd

```

```

user@PCC# set mpls label-switched-path PCC-to-R2 to 10.255.179.98/32
user@PCC# set mpls label-switched-path PCC-to-R2 bandwidth 10m
user@PCC# set protocols mpls label-switched-path PCC-to-R2 priority 4 4
user@PCC# set protocols mpls label-switched-path PCC-to-R2 primary to-R2-path
user@PCC# set protocols mpls label-switched-path PCC-to-R2
lsp-external-controller pccd

```

4. Configure the LSP from Router PCC to Router R2, which has local control and is overridden by the PCE-provided LSP parameters.

```

[edit protocols]
user@PCC# set mpls path to-R2-path 20.31.1.2/30 strict
user@PCC# set mpls path to-R2-path 20.31.2.2/30 strict

```

5. Enable MPLS on all interfaces of Router PCC, excluding the management interface.

```

[edit protocols]
user@PCC# set mpls interface all
user@PCC# set mpls interface fxp0.0 disable

```

6. Configure IS-IS on all interfaces of Router PCC, excluding the management interface.

```

[edit protocols]
user@PCC# set isis level 1 disable
user@PCC# set isis interface all
user@PCC# set isis interface fxp0.0 disable
user@PCC# set isis interface lo0.0

```

7. Define the PCE that Router PCC connects to, and configure the IP address of the PCE.

```

[edit protocols]
user@PCC# set pcep pce pce1 destination-ipv4-address 10.209.57.166

```

8. Configure the destination port for Router PCC that connects to a PCE using the TCP-based PCEP.

```

[edit protocols]
user@PCC# set pcep pce pce1 destination-port 4189

```

9. Configure the PCE type.

```

[edit protocols]
user@PCC# set pcep pce pce1 pce-type active
user@PCC# set pcep pce pce1 pce-type stateful

```

## Results

From configuration mode, confirm your configuration by entering the **show interfaces** and **show protocols** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```

user@PCC# show interfaces
ge-1/0/1 {
  unit 0 {
    family inet {
      address 20.31.4.1/24;
    }
    family iso;
  }
}

```

```
        family mpls;
    }
}
ge-1/1/1 {
    unit 0 {
        family inet {
            address 20.31.1.1/24;
        }
        family iso;
        family mpls;
    }
}
lo0 {
    unit 0 {
        family inet {
            address 10.255.179.95/32;
        }
    }
}

user@PCC# show protocols
rsvp {
    interface all;
    interface fxp0.0 {
        disable;
    }
}
mpls {
    lsp-external-controller pccd;
    label-switched-path PCC-to-R2 {
        to 10.255.179.98;
        bandwidth 10m;
        priority 4 4;
        primary to-R2-path;
        lsp-external-controller pccd;
    }
    path to-R2-path {
        20.31.1.2 strict;
        20.31.2.2 strict;
    }
    interface all;
    interface fxp0.0 {
        disable;
    }
}
isis {
    level 1 disable;
    interface all;
    interface fxp0.0 {
        disable;
    }
    interface lo0.0;
}
pcep {
    pce pce1 {
        destination-ipv4-address 10.209.57.166;
```



```

        destination-port 4189;
        pce-type active stateful;
    }
}

```

If you are done configuring the device, enter **commit** from configuration mode.

## Verification

Confirm that the configuration is working properly.

- [Verifying the PCEP Session Status on page 851](#)
- [Verifying the PCE-Controlled LSP Status When LSP Control Is External on page 852](#)
- [Verifying the PCE-Controlled LSP Status When LSP Control Is Local on page 853](#)

### Verifying the PCEP Session Status

**Purpose** Verify the PCEP session status between the PCE and Router PCC when the PCE status is up.

**Action** From operational mode, run the **show path-computation-client active-pce** command.

```
user@PCC> show path-computation-client active-pce
```

```
PCE pce1
```

```
General
```

```

IP address           : 10.209.57.166
Priority              : 0
PCE status            : PCE_STATE_UP
Session type          : PCE_TYPE_STATEFULACTIVE
PCE-mastership        : main

```

```
Counters
```

PCReqs	Total: 0	last 5min: 0	last hour: 0
PCReps	Total: 0	last 5min: 0	last hour: 0
PCRpts	Total: 5	last 5min: 5	last hour: 5
PCUpdates	Total: 1	last 5min: 1	last hour: 1

```
Timers
```

Local	Keepalive timer:	30 [s]	Dead timer:	120 [s]
Remote	Keepalive timer:	30 [s]	Dead timer:	120 [s]

```
Errors
```

```

PCErr-recv
PCErr-sent
PCE-PCC-NTFS
PCC-PCE-NTFS

```

**Meaning** The output displays information about the current active stateful PCE that Router PCC is connected to. The **PCE status** output field indicates the current status of the PCEP session between the PCE and Router PCC.

For **pce1**, the status of the PCEP session is **PCE\_STATE\_UP**, which indicates that the PCEP session has been established between the PCEP peers.

The statistics of **PCRpts** indicate the number of messages sent by Router PCC to the PCE to report the current status of LSPs. The **PCUpdates** statistics indicate the number of messages received by Router PCC from the PCE. The **PCUpdates** messages include the PCE modified parameters for the PCE-controlled LSPs.

### Verifying the PCE-Controlled LSP Status When LSP Control Is External

**Purpose** Verify the status of the PCE-controlled LSP from Router PCC to Router R2 when the LSP is under external control.

**Action** From operational mode, run the **show mpls lsp name PCC-to-R2 extensive** command.

```
user@PCC> show mpls lsp name PCC-to-R2 extensive
Ingress LSP: 1 sessions
```

```
10.255.179.98
  From: 10.255.183.59, State: Up, ActiveRoute: 0, LSPname: PCC-to-R2
  ActivePath: to-R2-path (primary)
  LSPtype: Externally controlled, Penultimate hop popping
  LSP Control Status: Externally controlled
    LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary to-R2-path State: Up
    Priorities: 3 3
    Bandwidth: 8Mbps
    SmartOptimizeTimer: 180
    No computed ERO.
  Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
  20=Node-ID):
    20.31.4.2 20.31.5.2
  21 Mar 11 05:00:56.736 EXTCTRL LSP: Sent Path computation request and LSP
  status
  20 Mar 11 05:00:56.736 EXTCTRL_LSP: Computation request/lsp status contains:
  bandwidth 10000000 priority - setup 4 hold 4 hops: 20.31.1.2 20.31.2.2
  19 Mar 11 05:00:56.735 Selected as active path
  18 Mar 11 05:00:56.734 EXTCTRL LSP: Sent Path computation request and LSP
  status
  17 Mar 11 05:00:56.734 EXTCTRL_LSP: Computation request/lsp status contains:
  bandwidth 10000000 priority - setup 4 hold 4 hops: 20.31.1.2 20.31.2.2
  16 Mar 11 05:00:56.734 Record Route: 20.31.4.2 20.31.5.2
  15 Mar 11 05:00:56.734 Up
  14 Mar 11 05:00:56.713 EXTCTRL LSP: Sent Path computation request and LSP
  status
  13 Mar 11 05:00:56.713 EXTCTRL_LSP: Computation request/lsp status contains:
  bandwidth 10000000 priority - setup 4 hold 4 hops: 20.31.1.2 20.31.2.2
  12 Mar 11 05:00:56.712 Originate Call
  11 Mar 11 05:00:56.712 EXTCTRL_LSP: Received setup parameters : 20.31.4.2
  20.31.5.2
  10 Mar 11 05:00:49.283 EXTCTRL LSP: Sent Path computation request and LSP
  status
  9 Mar 11 05:00:49.283 EXTCTRL_LSP: Computation request/lsp status contains:
  bandwidth 10000000 priority - setup 4 hold 4 hops: 20.31.1.2 20.31.2.2
  8 Mar 11 05:00:20.581 EXTCTRL_LSP: Computation request/lsp status contains:
  bandwidth 10000000 priority - setup 4 hold 4 hops: 20.31.1.2 20.31.2.2
  7 Mar 11 05:00:20.581 EXTCTRL LSP: Sent Path computation request and LSP
```

```

status
  6 Mar 11 05:00:20.581 EXTCTRL_LSP: Computation request/lsp status contains:
    bandwidth 10000000 priority - setup 4 hold 4 hops: 20.31.1.2 20.31.2.2
  5 Mar 11 05:00:20.580 EXTCTRL_LSP: Control status became external
  4 Mar 11 05:00:03.716 EXTCTRL_LSP: Control status became local
  3 Mar 11 05:00:03.714 EXTCTRL_LSP: Sent Path computation request and LSP
status
  2 Mar 11 05:00:03.714 EXTCTRL_LSP: Computation request/lsp status contains:
    bandwidth 10000000 priority - setup 4 hold 4 hops: 20.31.1.2 20.31.2.2
  1 Mar 11 05:00:00.279 EXTCTRL_LSP: Awaiting external controller connection
    Created: Mon Mar 11 05:00:00 2013
Total 1 displayed, Up 1, Down 0

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

**Meaning** In the output, the **LSptype** and **LSP Control Status** output fields show that the LSP is externally controlled. The output also shows a log of the PCEP messages sent between Router PCC and the PCE.

The PCEP session between the PCE and Router PCC is up, and Router PCC receives the following PCE-controlled LSP parameters:

- ERO (path)—20.31.4.2 and 20.31.5.2
- Bandwidth—8Mbps
- Priorities—3 3 (setup and hold values)

### Verifying the PCE-Controlled LSP Status When LSP Control Is Local

**Purpose** Verify the status of the PCE-controlled LSP from Router PCC to Router R2 when the LSP control becomes local.

**Action** From operational mode, run the **show mpls lsp name PCC-to-R2 extensive** command.

```

user@PCC> show mpls lsp name PCC-to-R2 extensive
Ingress LSP: 1 sessions

10.255.179.98
  From: 10.255.183.59, State: Up, ActiveRoute: 0, LSPname: PCC-to-R2
  ActivePath: to-R2-path (primary)
  LSptype: Externally controlled, Penultimate hop popping
  LSP Control Status: Locally controlled
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary to-R2-path State: Up
    Priorities: 4 4 (ActualPriorities 3 3)
    Bandwidth: 10Mbps (ActualBandwidth: 8Mbps)
    SmartOptimizeTimer: 180
    No computed ERO.
  Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
  20=Node-ID):
    20.31.4.2 20.31.5.2
  22 Mar 11 05:02:09.618 EXTCTRL_LSP: Control status became local

```

```

21 Mar 11 05:00:56.736 EXTCTRL LSP: Sent Path computation request and LSP
status
20 Mar 11 05:00:56.736 EXTCTRL_LSP: Computation request/lsp status contains:
bandwidth 10000000 priority - setup 4 hold 4 hops: 20.31.1.2 20.31.2.2
19 Mar 11 05:00:56.735 Selected as active path
18 Mar 11 05:00:56.734 EXTCTRL LSP: Sent Path computation request and LSP
status
17 Mar 11 05:00:56.734 EXTCTRL_LSP: Computation request/lsp status contains:
bandwidth 10000000 priority - setup 4 hold 4 hops: 20.31.1.2 20.31.2.2
16 Mar 11 05:00:56.734 Record Route: 20.31.4.2 20.31.5.2
15 Mar 11 05:00:56.734 Up
14 Mar 11 05:00:56.713 EXTCTRL LSP: Sent Path computation request and LSP
status
13 Mar 11 05:00:56.713 EXTCTRL_LSP: Computation request/lsp status contains:
bandwidth 10000000 priority - setup 4 hold 4 hops: 20.31.1.2 20.31.2.2
12 Mar 11 05:00:56.712 Originate Call
11 Mar 11 05:00:56.712 EXTCTRL_LSP: Received setup parameters : 20.31.4.2
20.31.5.2
10 Mar 11 05:00:49.283 EXTCTRL LSP: Sent Path computation request and LSP
status
9 Mar 11 05:00:49.283 EXTCTRL_LSP: Computation request/lsp status contains:
bandwidth 10000000 priority - setup 4 hold 4 hops: 20.31.1.2 20.31.2.2
8 Mar 11 05:00:20.581 EXTCTRL_LSP: Computation request/lsp status contains:
bandwidth 10000000 priority - setup 4 hold 4 hops: 20.31.1.2 20.31.2.2
7 Mar 11 05:00:20.581 EXTCTRL LSP: Sent Path computation request and LSP
status
6 Mar 11 05:00:20.581 EXTCTRL_LSP: Computation request/lsp status contains:
bandwidth 10000000 priority - setup 4 hold 4 hops: 20.31.1.2 20.31.2.2
5 Mar 11 05:00:20.580 EXTCTRL_LSP: Control status became external
4 Mar 11 05:00:03.716 EXTCTRL_LSP: Control status became local
3 Mar 11 05:00:03.714 EXTCTRL LSP: Sent Path computation request and LSP
status
2 Mar 11 05:00:03.714 EXTCTRL_LSP: Computation request/lsp status contains:
bandwidth 10000000 priority - setup 4 hold 4 hops: 20.31.1.2 20.31.2.2
1 Mar 11 05:00:00.279 EXTCTRL LSP: Awaiting external controller connection
Created: Mon Mar 11 05:00:00 2013
Total 1 displayed, Up 1, Down 0

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

**Meaning** In the output, the **LSP Control Status** output field shows that the LSP is under local control. Although the PCE-controlled LSP is under local control, Router PCC continues to use the PCE-provided parameters, until the next opportunity to re-signal the LSP.

The output now displays the LSP parameters that were configured using the CLI along with the PCE-provided parameters used to establish the LSP as the actual values in use.

- Bandwidth—10Mbps (ActualBandwidth: 8Mbps)
- Priorities—4 4 (ActualPriorities 3 3)

On the trigger to re-signal the LSP, Router PCC uses the local configuration parameters to establish the PCE-controlled LSP.

user@PCC> **show mpls lsp name PCC-to-R2 extensive externally-controlled**

Ingress LSP: 1 sessions

10.255.179.98

```

From: 10.255.183.59, State: Up, ActiveRoute: 0, LSName: PCC-to-R2
ActivePath: to-R2-path (primary)
LSPTYPE: Externally controlled, Penultimate hop popping
LSP Control Status: Locally controlled
LoadBalance: Random
Encoding type: Packet, Switching type: Packet, GPID: IPv4
*Primary to-R2-path State: Up
Priorities: 4 4
Bandwidth: 10Mbps
SmartOptimizeTimer: 180
Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 30)
20.31.1.2 S 20.31.2.2 S 20.31.8.2 S
Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
20=Node-ID):
    20.31.1.2 20.31.2.2 20.31.8.2
28 Mar 11 05:02:51.787 Record Route: 20.31.1.2 20.31.2.2 20.31.8.2
27 Mar 11 05:02:51.787 Up
26 Mar 11 05:02:51.697 EXTCTRL_LSP: Applying local parameters with this
signalling attempt
25 Mar 11 05:02:51.697 Originate Call
24 Mar 11 05:02:51.696 Clear Call
23 Mar 11 05:02:51.696 CSPF: computation result accepted 20.31.1.2 20.31.2.2
20.31.8.2
22 Mar 11 05:02:09.618 EXTCTRL_LSP: Control status became local
21 Mar 11 05:00:56.736 EXTCTRL LSP: Sent Path computation request and LSP
status
20 Mar 11 05:00:56.736 EXTCTRL_LSP: Computation request/lsp status contains:
bandwidth 10000000 priority - setup 4 hold 4 hops: 20.31.1.2 20.31.2.2
19 Mar 11 05:00:56.735 Selected as active path
18 Mar 11 05:00:56.734 EXTCTRL LSP: Sent Path computation request and LSP
status
17 Mar 11 05:00:56.734 EXTCTRL_LSP: Computation request/lsp status contains:
bandwidth 10000000 priority - setup 4 hold 4 hops: 20.31.1.2 20.31.2.2
16 Mar 11 05:00:56.734 Record Route: 20.31.4.2 20.31.5.2
15 Mar 11 05:00:56.734 Up
14 Mar 11 05:00:56.713 EXTCTRL LSP: Sent Path computation request and LSP
status
13 Mar 11 05:00:56.713 EXTCTRL_LSP: Computation request/lsp status contains:
bandwidth 10000000 priority - setup 4 hold 4 hops: 20.31.1.2 20.31.2.2
12 Mar 11 05:00:56.712 Originate Call
11 Mar 11 05:00:56.712 EXTCTRL_LSP: Received setup parameters : 20.31.4.2
20.31.5.2
10 Mar 11 05:00:49.283 EXTCTRL LSP: Sent Path computation request and LSP
status
9 Mar 11 05:00:49.283 EXTCTRL_LSP: Computation request/lsp status contains:
bandwidth 10000000 priority - setup 4 hold 4 hops: 20.31.1.2 20.31.2.2
8 Mar 11 05:00:20.581 EXTCTRL_LSP: Computation request/lsp status contains:
bandwidth 10000000 priority - setup 4 hold 4 hops: 20.31.1.2 20.31.2.2
7 Mar 11 05:00:20.581 EXTCTRL LSP: Sent Path computation request and LSP
status
6 Mar 11 05:00:20.581 EXTCTRL_LSP: Computation request/lsp status contains:
bandwidth 10000000 priority - setup 4 hold 4 hops: 20.31.1.2 20.31.2.2
5 Mar 11 05:00:20.580 EXTCTRL_LSP: Control status became external
4 Mar 11 05:00:03.716 EXTCTRL_LSP: Control status became local
3 Mar 11 05:00:03.714 EXTCTRL LSP: Sent Path computation request and LSP
status
2 Mar 11 05:00:03.714 EXTCTRL_LSP: Computation request/lsp status contains:
bandwidth 10000000 priority - setup 4 hold 4 hops: 20.31.1.2 20.31.2.2

```

```
1 Mar 11 05:00:00.279 EXTCTRL LSP: Awaiting external controller connection
Created: Mon Mar 11 05:00:00 2013
Total 1 displayed, Up 1, Down 0
```

```
Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

```
Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

The **Computed ERO** is 20.31.1.2, 20.31.2.2, and 20.31.8.2. The PCE-controlled LSP is established using the local configuration parameters.

**Related Documentation**

- [Support of the Path Computation Element Protocol for RSVP-TE Overview on page 828](#)

## Example: Configuring Path Computation Element Protocol with Support of PCE-Initiated LSPs

---

This example shows how to configure the Path Computation Client (PCC) with the capability of supporting Path Computation Element (PCE)-initiated traffic-engineered label-switched paths (LSPs).

- [Requirements on page 856](#)
- [Overview on page 856](#)
- [Configuration on page 859](#)
- [Verification on page 862](#)

### Requirements

This example uses the following hardware and software components:

- Three routers that can be a combination of M Series, MX Series, or T Series routers.
- A TCP connection to two external stateful PCEs from the ingress router (PCC).
- Junos OS Release 16.1 or later running on the PCC.

Before you begin:

- Configure the device interfaces.
- Configure MPLS and RSVP-TE (RSVP-Traffic Engineering).
- Configure OSPF or any other IGP protocol.

### Overview

Starting with Junos OS Release 16.1, the PCEP functionality is extended to allow a stateful PCE to initiate and provision traffic engineering LSPs through a PCC. Earlier, the LSPs were configured on the PCC and the PCC delegated control over the external LSPs to a PCE. The ownership of the LSP state was maintained by the PCC. With the introduction of the PCE-initiated LSPs, a PCE can initiate and provision a traffic engineering LSP

dynamically without the need for a locally configured LSP on the PCC. On receiving a PCCreate message from a PCE, the PCC creates the PCE-initiated LSP and automatically delegates the LSP to the PCE.

By default, a PCC rejects the request for provisioning PCE-initiated LSPs from a PCE. To enable support of PCE-initiated LSPs on the PCC, include the *lsp-provisioning* statement at the **[edit protocols pcep pce pce-id]** or **[edit protocols pcep pce-group group-id]** hierarchy levels.

A PCC indicates its capability of supporting PCE-initiated LSPs while establishing the Path Computation Element Protocol (PCEP) session with the PCE. A PCE selects a PCC with this capability to initiate an LSP. The PCE provides the PCC with the PCE-initiated LSP parameters. On receiving the PCE-initiated LSP parameters, the PCC sets up the LSP, assigns an LSP ID, and automatically delegates the LSP to the PCE.

When the PCE initiating the LSP does not provide the PCE-initiated LSP parameters, the PCC uses the default parameters. An optional LSP template may also be configured to specify values for the PCE-initiated LSP when the LSP parameters are not provided by the PCE. To configure an LSP template for PCE-initiated LSPs on the PCC, include the *label-switched-path-template* statement at the **[edit protocols mpls lsp-external-controller lsp-external-controller]** hierarchy level.

When a PCEP session terminates, the PCC starts two timers without immediately deleting the PCE-initiated LSPs—**delegation cleanup timeout** and **lsp cleanup timer**—to avoid disruption of services. During this time, an active stateful PCE can acquire control of the LSPs provisioned by the failed PCE.

A PCE may return the delegation of the PCE-initiated LSP to the PCC to allow LSP transfer between PCEs. Control over PCE-initiated LSPs reverts to the PCC at the expiration of the delegation cleanup timeout. When the delegation cleanup timeout expires, and no other PCE has acquired control over the LSP from the failed PCE, the PCC takes local control of the non-delegated PCE-initiated LSP. Later, when the original or a new active stateful PCE wishes to acquire control of the locally controlled PCE-initiated LSPs, the PCC delegates these LSPs to the PCE and the LSP cleanup timer is stopped.

The PCC waits for the LSP cleanup timer to expire before deleting the non-delegated PCE-initiated LSPs from the failed PCE. When the LSP cleanup timer expires, and no other PCE has acquired control over the LSPs from the failed PCE, the PCC deletes all the LSPs provisioned by the failed PCE.


When configuring the support of PCE-initiated LSPs for a PCC, be aware of the following considerations:

- Junos OS Release 13.3 supports only stateful PCEs.
- For Junos OS Release 13.3, the PCC always initiates the PCEP sessions. PCEP sessions initiated by remote PCEs are not accepted by the PCC.
- Existing LSP features, such as LSP protection and make-before-break, work for PCE-initiated LSPs.
- PCE-initiated LSPs do not support graceful Routing Engine switchover (GRES).

- PCE-initiated LSPs under logical systems are not supported.
- PCE-initiated LSPs cannot be point-to-multipoint LSPs.
- Bidirectional LSPs are not supported.
- RSVP-TE for unnumbered links is not supported. PCE-initiated LSPs support only numbered links.

## Topology

**Figure 89: Example PCE-Initiated LSP for MPLS RSVP-TE**

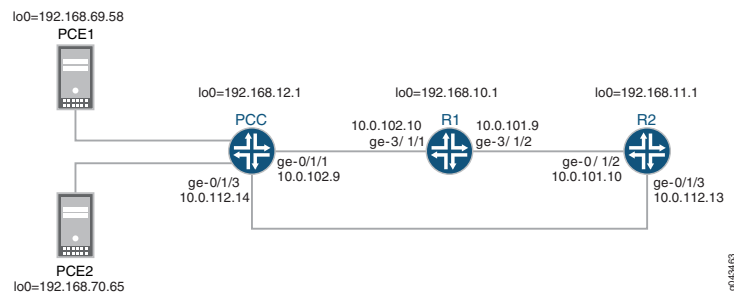

In this example, PCC is the ingress router that connects to two external stateful PCEs: PCE1 and PCE2.

When there is a new demand, the active stateful PCE dynamically initiates an LSP to meet the requirement. Since PCC is configured with the capability of supporting the PCE-initiated LSP, path computation on PCC is performed as follows:

1. A PCE sends a PCCreate message to the PCC to initiate and provision an LSP. The PCC sets up the PCE-initiated LSP using the parameters received from the PCE, and automatically delegates the PCE-initiated LSP to the PCE that initiated it.  
In this example, PCE1 is the active stateful PCE that initiates and provisions the PCE-initiated LSP on PCC. On receiving the PCE-initiated LSP parameters, PCC sets up the LSP and automatically delegates the PCE-initiated LSP to PCE1.
2. When the PCEP session between PCC and PCE1 is terminated, PCC starts two timers for the PCE1-initiated LSP: delegation cleanup timeout and the LSP cleanup timer. During this time, PCE1 or PCE2 can acquire control of the PCE-initiated LSP.
3. If PCE2 acquires control over the PCE-initiated LSP before the expiration of the LSP cleanup timer, PCC delegates the PCE-initiated LSP to PCE2, and the LSP cleanup timer and the delegation cleanup timeout are stopped.
4. If the delegation cleanup timeout expired, and neither PCE1 nor PCE2 acquired control over the PCE-initiated LSP, PCC takes local control of the non-delegated PCE-initiated LSP until the expiration of the LSP cleanup timer.
5. After the expiration of the LSP cleanup timer, PCC deletes the PCE-initiated LSP provisioned by PCE1.



## Configuration

**CLI Quick Configuration** To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

```
PCC
set interfaces ge-0/1/1 unit 0 family inet address 10.0.102.9/24
set interfaces ge-0/1/1 unit 0 family iso
set interfaces ge-0/1/1 unit 0 family mpls
set interfaces ge-0/1/3 unit 0 family inet address 10.0.112.14/24
set interfaces ge-0/1/3 unit 0 family iso
set interfaces ge-0/1/3 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 192.168.12.1/32
set protocols rsvp interface all
set protocols rsvp interface fxp0.0 disable
set protocols mpls lsp-external-controller ppcd
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface fxp0.0 disable
set protocols pcep pce-group PCEGROUP pce-type active
set protocols pcep pce-group PCEGROUP pce-type stateful
set protocols pcep pce-group PCEGROUP lsp-provisioning
set protocols pcep pce-group PCEGROUP lsp-cleanup-timer 30
set protocols pcep pce PCE1 destination-ipv4-address 192.168.69.58
set protocols pcep pce PCE1 destination-port 4189
set protocols pcep pce PCE1 pce-group PCEGROUP
set protocols pcep pce PCE2 destination-ipv4-address 192.168.70.65
set protocols pcep pce PCE2 destination-port 4189
set protocols pcep pce PCE2 pce-group PCEGROUP

R1
set interfaces ge-3/1/1 unit 0 family inet address 10.0.102.10/24
set interfaces ge-3/1/1 unit 0 family iso
set interfaces ge-3/1/1 unit 0 family mpls
set interfaces ge-3/1/2 unit 0 family inet address 10.0.101.9/24
set interfaces ge-3/1/2 unit 0 family iso
set interfaces ge-3/1/2 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 192.168.10.1/32
set protocols rsvp interface all
set protocols rsvp interface fxp0.0 disable
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface fxp0.0 disable

R2
set interfaces ge-0/1/1 unit 0 family inet address 10.0.101.10/24
set interfaces ge-0/1/1 unit 0 family iso
set interfaces ge-0/1/1 unit 0 family mpls
set interfaces ge-0/1/3 unit 0 family inet address 10.0.112.13/24
set interfaces ge-0/1/3 unit 0 family iso
set interfaces ge-0/1/3 unit 0 family mpls
set interfaces lo0 unit 0 family inet address 192.168.11.1/32
```

```

set protocols rsvp interface all
set protocols rsvp interface fxp0.0 disable
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface all
set protocols ospf area 0.0.0.0 interface fxp0.0 disable

```

**Step-by-Step Procedure** The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode*.

To configure the PCC router:



**NOTE:** Repeat this procedure for every Juniper Networks ingress router in the MPLS domain, after modifying the appropriate interface names, addresses, and any other parameters for each router.

1. Configure the interfaces.

To enable MPLS, include the protocol family on the interface so that the interface does not discard incoming MPLS traffic.

**[edit interfaces]**

```

user@PCC# set ge-0/1/1 unit 0 family inet address 10.0.102.9/24
user@PCC# set ge-0/1/1 unit 0 family iso
user@PCC# set ge-0/1/1 unit 0 family mpls

```

```

user@PCC# set ge-0/1/3 unit 0 family inet address 10.0.112.14/24
user@PCC# set ge-0/1/3 unit 0 family iso
user@PCC# set ge-0/1/3 unit 0 family mpls

```

```

user@PCC# set lo0 unit 0 family inet address 192.168.12.1/32

```

2. Enable RSVP on all interfaces of the PCC, excluding the management interface.

**[edit protocols]**

```

user@PCC# set rsvp interface all
user@PCC# set rsvp interface fxp0.0 disable

```

3. Enable external control of LSPs by the PCEs.

**[edit protocols]**

```

user@PCC# set mpls lsp-external-controller pccd

```

4. Enable MPLS on all interfaces of the PCC, excluding the management interface.

**[edit protocols]**

```

user@PCC# set mpls interface all
user@PCC# set mpls interface fxp0.0 disable

```

5. Configure OSPF on all interfaces of the PCC, excluding the management interface.

**[edit protocols]**

```

user@PCC# set ospf traffic-engineering

```

```

user@PCC# set ospf area 0.0.0.0 interface all
user@PCC# set ospf area 0.0.0.0 interface fxp0.0 disable
user@PCC# set ospf interface lo0.0

```

6. Define the PCE group and enable support of PCE-initiated LSPs for the PCE group.

```

[edit protocols]
user@PCC# set protocols pcep pce-group PCEGROUP pce-type active
user@PCC# set protocols pcep pce-group PCEGROUP pce-type stateful
user@PCC# set protocols pcep pce-group PCEGROUP lsp-provisioning
user@PCC# set protocols pcep pce-group PCEGROUP lsp-cleanup-timer 30

```

7. Define the PCEs that connect to the PCC.

```

[edit protocols]
user@PCC# set pcep pce PCE1 destination-ipv4-address 192.168.69.58
user@PCC# set pcep pce PCE1 destination-port 4189
user@PCC# set pcep pce PCE1 pce-group PCEGROUP

user@PCC# set pcep pce PCE2 destination-ipv4-address 192.168.70.65
user@PCC# set pcep pce PCE2 destination-port 4189
user@PCC# set pcep pce PCE2 pce-group PCEGROUP

```

## Results

From configuration mode, confirm your configuration by entering the **show interfaces** and **show protocols** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```

user@PCC# show interfaces
ge-0/1/1 {
  unit 0 {
    family inet {
      address 10.0.102.9/24;
    }
    family iso;
    family mpls;
  }
}
ge-0/1/3 {
  unit 0 {
    family inet {
      address 10.0.112.14/24;
    }
    family iso;
    family mpls;
  }
}
lo0 {
  unit 0 {
    family inet {
      address 192.168.12.1/32;
    }
  }
}

```

```
user@PCC# show protocols
rsvp {
  interface all;
}
interface fxp0.0 {
  disable;
}
mpls {
  lsp-external-controller pccd;
  interface all;
  interface fxp0.0 {
    disable;
  }
}
ospf {
  traffic-engineering;
  area 0.0.0.0 {
    interface all;
    interface fxp0.0 {
      disable;
    }
  }
}
pce-group PCEGROUP {
  pce-type active stateful;
  lsp-provisioning;
  lsp-cleanup-timer 30;
}
pce PCE1 {
  destination-ipv4-address 192.168.69.58;
  destination-port 4189;
  pce-group PCEGROUP;
}
pce PCE2 {
  destination-ipv4-address 192.168.70.65;
  destination-port 4189;
  pce-group PCEGROUP;
}
```

If you are done configuring the device, enter **commit** from configuration mode.

## Verification

Confirm that the configuration is working properly.

- [Verifying PCC Status on page 863](#)
- [Verifying PCE1 Status on page 863](#)
- [Verifying the PCE-Initiated LSP Status When the LSP Is Externally Provisioned on page 865](#)

### Verifying PCC Status

**Purpose** Verify the PCEP session status and LSP summary between the PCC and the connected PCEs.

**Action** From operational mode, run the **show path-computation-client status** command.

```
user@PCC# show path-computation-client status
Session          Type          Provisioning    Status
PCE1             Stateful Active        On             Up
PCE2             Stateful Active        On             Up

LSP Summary
Total number of LSPs      : 1
Static LSPs               : 0
Externally controlled LSPs : 0
Externally provisioned LSPs : 1/16000 (current/limit)
Orphaned LSPs             : 0

PCE1 (main)
  Delegated               : 1
  Externally provisioned : 1
PCE2
  Delegated               : 0
  Externally provisioned : 0
```

**Meaning** The output displays the status of the PCEP session between the active stateful PCEs and the PCC. It also displays information about the different types of LSPs on the PCC, and the number of LSPs provisioned by the connected PCEs and delegated to them.

PCE1 is the main active PCE and has one PCE-initiated LSP that has been automatically delegated to it by the PCC.

### Verifying PCE1 Status

**Purpose** Verify the status of the main active stateful PCE.

**Action** From operational mode, run the **show path-computation-client active-pce detail** command.

```

user@PCC# show path-computation-client active-pce
PCE PCE1
-----
General
  IP address           : 192.168.69.58
  Priority              : 0
  PCE status           : PCE_STATE_UP
  Session type         : PCE_TYPE_STATEFULACTIVE
  LSP provisioning allowed : On
  LSP cleanup timer    : 30 [s]
  PCE-mastership       : main
  Max unknown messages : 5
  Keepalives received  : 0
  Keepalives sent      : 0
  Dead timer           : 0 [s]
  Elapsed as main current : 1 [s]
  Elapsed as main total : 446380 [s]
  Unknown msgs/min rate : 0
  Session failures     : 2198
  Corrupted messages   : 0
  Delegation timeout set : 30
  Delegation timeout in : 0 [s]
  Delegation failures   : 0
  Connection down      : 167092 [s]

Counters
  PCReqs               Total: 0          last 5min: 0          last hour: 0
  PCReps               Total: 0          last 5min: 0          last hour: 0
  PCRpts              Total: 5          last 5min: 5          last hour: 5
  PCUpdates            Total: 0          last 5min: 0          last hour: 0
  PCCreates            Total: 1          last 5min: 1          last hour: 1

Timers
  Local Keepalive timer: 30 [s] Dead timer: 120 [s] LSP cleanup timer:
30 [s]
  Remote Keepalive timer: 0 [s] Dead timer: 0 [s] LSP cleanup timer:
- [s]

Errors
  PCErr-recv
  PCErr-sent
  PCE-PCC-NTFS
  PCC-PCE-NTFS

```

**Meaning** The output displays information about the current active stateful PCE to which the PCC is connected. The **PCE status** output field indicates the current status of the PCEP session between a PCE and PCC.

For PCE1, the status of the PCEP session is **PCE\_STATE\_UP**, which indicates that the PCEP session has been established with the PCC.

### Verifying the PCE-Initiated LSP Status When the LSP Is Externally Provisioned

**Purpose** Verify the status of the PCE-initiated LSP.

**Action** From operational mode, run the **show mpls lsp externally-provisioned detail** command.

```
user@PCC# show mpls lsp externally-provisioned detail
Ingress LSP: 1 sessions

10.0.101.10
  From: 10.0.102.9, State: Up, ActiveRoute: 0, LSPname: lsp15
  ActivePath: path1 (primary)
  Link protection desired
  LSPtype: Externally Provisioned, Penultimate hop popping
  LSP Control Status: Externally controlled
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary path1 State: Up
    Priorities: 7 0
    Bandwidth: 8Mbps
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 3)
    10.0.102.10 S 10.0.101.9 S
    Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node
    10=SoftPreempt 20=Node-ID):
    10.0.102.10 S 10.0.101.9 S
```

**Meaning** In the output, the **LSPtype** output field shows that the LSP is externally provisioned.

The PCEP session between PCC and PCE1 is up, and the PCC receives the following PCE-initiated LSP parameters:

- ERO (path)—10.0.102.10 and 10.0.101.9
- Bandwidth—8 Mbps
- Priority—7 0 (setup and hold values)

- Related Documentation**
- [Support of the Path Computation Element Protocol for RSVP-TE Overview on page 828](#)
  - [Example: Configuring the Path Computation Element Protocol for MPLS RSVP-TE on page 843](#)
  - [Configuring Path Computation Element Protocol with Support of PCE Initiated LSPs for MPLS RSVP TE on page 866](#)

## Configuring Path Computation Element Protocol with Support of PCE Initiated LSPs for MPLS RSVP TE

---

You can configure a Path Computation Client (PCC) with the capability of supporting dynamically created label switched paths (LSPs) from a centralized external path computing entity. A stateful Path Computaiton Element (PCE) can be used to perform external path computation and generate dynamic LSPs when there is an increase in demand.

A PCC creates the PCE-initiated LSP using the PCE-provided LSP parameters, or parameters from a pre-configured LSP template when the PCE does not provision the LSP, and automatically delegates the PCE-initiated LSP to the respective PCE. As a result, for PCE-initiated LSPs, there is no need for a locally configured LSP on the PCC.

A CLI-controlled LSP, PCE-controlled LSP, and PCE-initiated LSP can coexist with each other on a PCC.

Before you begin:

- Configure the device interfaces.
- Configure MPLS and RSVP-TE.
- Configure OSPF or any other IGP protocol.

To configure PCC to support PCE-initiated LSPs, complete the following tasks:

1. In configuration mode, go to the following hierarchy level:

```
[edit]
user@PCC# edit protocols pcep
```

2. Specify the number of messages per minute that the PCC can receive at maximum.

```
[edit protocols pcep]
user@PCC# set message-rate-limit messages-per-minute
```

3. Specify the number of externally provisioned label switched paths (LSPs) over all connected PCEs that the PCC can accept at maximum.

```
[edit protocols pcep]
user@PCC# set max-provisioned-lsps max-count
```

4. Specify the unique user defined ID for the connected PCE to configure the PCE parameters.

```
[edit protocols pcep]
user@PCC# edit pce pce-id
```

5. Specify the amount of time (in seconds) that the PCC must wait before returning control of LSPs to the routing protocol process after a PCEP session is disconnected.

```
[edit protocols pcep pce pce-id]
user@PCC# set delegation-cleanup-timeout seconds
```

6. Specify the IPv4 address of the PCE to connect with.

```
[edit protocols pcep pce pce-id]
```



```
user@PCC# set destination-ipv4-address ipv4-address
```

7. Specify the TCP port number that the PCE is using

```
[edit protocols pcep pce pce-id]
user@PCC# set destination-port port-number
```

The value can range from 1 through 65535 and the default value is 4189.

8. Specify the amount of time (in seconds) that the PCC must wait before deleting any non-delegated PCE-initiated LSPs from the failed PCE after a PCEP session terminates.

```
[edit protocols pcep pce pce-id]
user@PCC# set lsp-cleanup-timer seconds
```

9. Configure the PCC to accept SPs that are externally provisioned by connected PCEs. By default, the PCC rejects PCE-initiated LSPs.

```
[edit protocols pcep pce pce-id]
user@PCC# set lsp-provisioning
```

10. Specify the number of unknown messages per minute that the PCC can receive at maximum after which the PCEP session is closed.

```
[edit protocols pcep pce pce-id]
user@PCC# set max-unknown-messages messages-per-minute
```

The value can range from 1 through 16384, and the default value is 0 (disabled or no limit).

11. Specify the number of unknown requests per minute that the PCC can receive at maximum after which the PCEP session is terminated.

```
[edit protocols pcep pce pce-id]
user@PCC# set max-unknown-requests requests-per-minute
```

The value can range from 0 through 16384, and the default value is 5. A value of 0 disables this statement.

12. Configure the PCE type.

```
[edit protocols pcep pce pce-id]
user@PCC# set pce-type active stateful
```

13. Specify the amount of time (in seconds) that the PCC must wait for a reply before resending a request.

```
[edit protocols pcep pce pce-id]
user@PCC# set request-timer seconds
```

The value can range from 0 through 65535 seconds.

14. Verify and commit the configuration.

```
user@PCC# show
user@PCC# commit
```

## Sample Output

```
[edit]
user@PCC# edit protocols pcep

[edit protocols pcep]
```

```
user@PCC# set message-rate-limit 50

[edit protocols pcep]
user@PCC# set max-provisioned-lsps 16000

[edit protocols pcep]
user@PCC# edit pce PCE

[edit protocols pcep pce PCE]
user@PCC# set delegation-cleanup-timeout 20

[edit protocols pcep pce PCE]
user@PCC# set destination-ipv4-address 192.168.69.58

[edit protocols pcep pce PCE]
user@PCC# set destination-port 4189

[edit protocols pcep pce PCE]
user@PCC# set lsp-cleanup-timer 50

[edit protocols pcep pce PCE]
user@PCC# set lsp-provisioning

[edit protocols pcep pce PCE]
user@PCC# set max-unknown-messages 5

[edit protocols pcep pce PCE]
user@PCC# set max-unknown-requests 5

[edit protocols pcep pce PCE]
user@PCC# set request-timer 50

[edit protocols pcep pce PCE]
user@PCC# up

[edit protocols pcep]
user@PCC# show
message-rate-limit 50;
max-provisioned-lsps 16000;
pce PCE {
    destination-ipv4-address 192.168.69.58;
    destination-port 4189;
    lsp-provisioning;
    lsp-cleanup-timer 50;
    request-timer 50;
    max-unknown-requests 5;
    max-unknown-messages 5;
    delegation-cleanup-timeout 20;
}

[edit protocols pcep]
user@PCC# commit
commit complete
```

**Related  
Documentation**

- [Support of the Path Computation Element Protocol for RSVP-TE Overview on page 828](#)
- [Example: Configuring Path Computation Element Protocol with Support of PCE-Initiated LSPs on page 856](#)
- [pcep on page 1696](#)

## Example: Configuring Path Computation Element Protocol with Support for PCE Controlled Point-to-Multipoint RSVP-TE LSPs

---

This example shows how to configure the Path Computation Client (PCC) with the capability of reporting point-to-multipoint traffic engineered label-switched paths (TE LSPs) to a Path Computation Element (PCE).

- [Requirements on page 869](#)
- [Overview on page 869](#)
- [Configuration on page 870](#)
- [Verification on page 880](#)

### Requirements

This example uses the following hardware and software components:

- Three routers that can be a combination of M Series, MX Series, or T Series routers.
- One virtual machine configured with Virtual Route Reflector (VRR) feature.
- A TCP connection to an external stateful PCE from the VRR.
- Junos OS Release 16.1 or later running on the PCC.

Before you begin:

- Configure the device interfaces.
- Configure MPLS and RSVP-TE.
- Configure OSPF or any other IGP protocol.


### Overview

After a PCEP session is established between a PCE and a PCC, the PCC reports all the LSPs in the system to the PCE for LSP state synchronization. This includes PCC-controlled, PCE-delegated, and PCE-initiated point-to-point LSPs. Starting with Junos OS Release 15.1F6 and 16.1R1, this capability is extended to report point-to-multipoint LSPs as well.

By default, PCE control of point-to-multipoint LSPs is not supported on a PCC. To add this capability, include the **p2mp-lsp-report-capability** statement at the **[edit protocols pcep pce *pce-name*]** or **[edit protocols pcep pce-group *group-id*]** hierarchy levels.

## Topology

Figure 90: Example PCE-Controlled Point-to-Multipoint LSPs

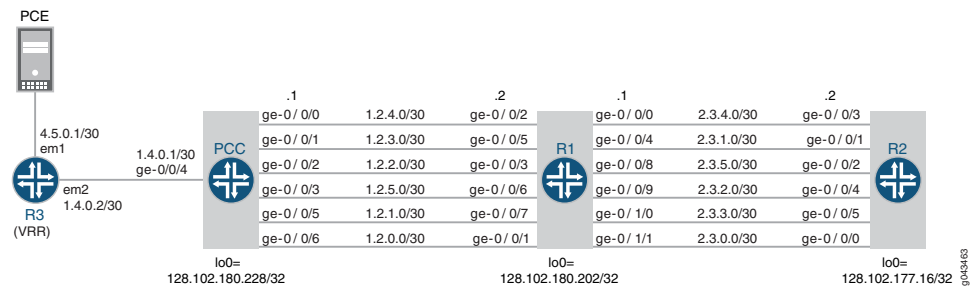

In this example, PCC is the ingress router, Router R1 is the transit router, and Router R2 is the egress router. PCC is connected to a Virtual Route Reflector (VRR) that is connected to a PCE. There are many point-to-multipoint interfaces between PCC, Router R1, and Router R2.

The reporting of point-to-multipoint LSPs is executed as follows:

1. If Router PCC is configured with point-to-point and point-to-multipoint LSPs without the support for point-to-multipoint reporting capability, only the point-to-point LSPs are reported to the connected PCE. By default, a PCC does not support point-to-multipoint LSP reporting capability.
2. When Router PCC is configured with point-to-multipoint LSP reporting capability, PCC first advertises this capability to PCE through a report message.
3. By default, a PCE provides support for point-to-multipoint LSP capability. On receiving the PCC's advertisement for point-to-multipoint LSP capability, the PCE in return advertises its capability to the PCC.
4. On receiving the PCE's advertisement of the point-to-multipoint capability, PCC reports all branches of point-to-multipoint LSPs to the PCE using the update message.
5. Once all the LSPs are reported to the PCE, LSP state is synchronized between the PCE and PCC.

## Configuration

### CLI Quick Configuration

To quickly configure this example, copy the following commands, paste them into a text file, remove any line breaks, change any details necessary to match your network configuration, and then copy and paste the commands into the CLI at the **[edit]** hierarchy level.

```
PCC
set interfaces ge-0/0/0 unit 0 family inet address 1.2.4.1/30
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 unit 0 family inet address 1.2.3.1/30
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 1.2.2.1/30
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces ge-0/0/3 unit 0 family inet address 1.2.5.1/30
set interfaces ge-0/0/3 unit 0 family mpls
```

```

set interfaces ge-0/0/4 unit 0 family inet address 1.4.0.1/30
set interfaces ge-0/0/4 unit 0 family mpls
set interfaces ge-0/0/5 unit 0 family inet address 1.2.1.1/30
set interfaces ge-0/0/5 unit 0 family mpls
set interfaces ge-0/0/6 unit 0 family inet address 1.2.0.1/30
set interfaces ge-0/0/6 unit 0 family mpls
set routing-options autonomous-system 100
set protocols rsvp interface all
set protocols rsvp interface fxp0.0 disable
set protocols mpls lsp-external-controller pccd pce-controlled-lsp
  pcc_delegated_no_cspf_* label-switched-path-template lsp_template_no_cspf
set protocols mpls lsp-external-controller pccd pce-controlled-lsp
  pce_initiated_no_ero_no_cspf_* label-switched-path-template lsp_template_no_cspf
set protocols mpls lsp-external-controller pccd pce-controlled-lsp
  pce_initiated_loose_ero_no_cspf_* label-switched-path-template lsp_template_no_cspf
set protocols mpls traffic-engineering database import policy TE
set protocols mpls admin-groups violet 1
set protocols mpls admin-groups indigo 2
set protocols mpls admin-groups blue 3
set protocols mpls admin-groups green 4
set protocols mpls admin-groups yellow 5
set protocols mpls admin-groups orange 6
set protocols mpls label-switched-path lsp_template_no_cspf template
set protocols mpls label-switched-path lsp_template_no_cspf no-cspf
set protocols mpls label-switched-path lsp1-pcc to 128.102.177.16
set protocols mpls label-switched-path lsp2-pcc to 128.102.177.16
set protocols mpls label-switched-path lsp2-pcc lsp-external-controller pccd
set protocols mpls path loose-path 1.2.3.2 loose
set protocols mpls path strict-path 1.2.3.2 strict
set protocols mpls path strict-path 2.3.3.2 strict
set protocols mpls path path-B
set protocols mpls path path-C
set protocols mpls interface all
set protocols mpls interface ge-0/0/6.0 admin-group violet
set protocols mpls interface ge-0/0/5.0 admin-group indigo
set protocols mpls interface ge-0/0/2.0 admin-group blue
set protocols mpls interface ge-0/0/1.0 admin-group green
set protocols mpls interface ge-0/0/0.0 admin-group yellow
set protocols mpls interface ge-0/0/3.0 admin-group orange
set protocols mpls interface fxp0.0 disable
set protocols bgp group northstar type internal
set protocols bgp group northstar local-address 128.102.180.228
set protocols bgp group northstar family traffic-engineering unicast
set protocols bgp group northstar export TE
set protocols bgp group northstar neighbor 128.102.180.215
set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface lo0.0
set protocols ospf area 0.0.0.0 interface ge-0/0/6.0
set protocols ospf area 0.0.0.0 interface ge-0/0/5.0
set protocols ospf area 0.0.0.0 interface ge-0/0/2.0
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface ge-0/0/0.0
set protocols ospf area 0.0.0.0 interface ge-0/0/3.0
set protocols ospf area 0.0.0.0 interface ge-0/0/4.0 interface-type p2p
set protocols pcep pce pce1 local-address 10.102.180.228
set protocols pcep pce pce1 destination-ipv4-address 10.102.180.246

```

```
set protocols pcep pce pce1 destination-port 4189
set protocols pcep pce pce1 pce-type active
set protocols pcep pce pce1 pce-type stateful
set protocols pcep pce pce1 lsp-provisioning
set protocols pcep pce pce1 lsp-cleanup-timer 0
set protocols pcep pce pce1 delegation-cleanup-timeout 60
set protocols pcep pce pce1 p2mp-lsp-report-capability
set policy-options policy-statement TE term 1 from family traffic-engineering
set policy-options policy-statement TE term 1 then accept
```

```
R1 set interfaces ge-0/0/0 unit 0 family inet address 2.3.4.1/30
set interfaces ge-0/0/0 unit 0 family mpls
set interfaces ge-0/0/1 unit 0 family inet address 1.2.0.2/30
set interfaces ge-0/0/1 unit 0 family mpls
set interfaces ge-0/0/2 unit 0 family inet address 1.2.4.2/30
set interfaces ge-0/0/2 unit 0 family mpls
set interfaces ge-0/0/3 unit 0 family inet address 1.2.2.2/30
set interfaces ge-0/0/3 unit 0 family mpls
set interfaces ge-0/0/4 unit 0 family inet address 2.3.1.1/30
set interfaces ge-0/0/4 unit 0 family mpls
set interfaces ge-0/0/5 unit 0 family inet address 1.2.3.2/30
set interfaces ge-0/0/5 unit 0 family mpls
set interfaces ge-0/0/6 unit 0 family inet address 1.2.5.2/30
set interfaces ge-0/0/6 unit 0 family mpls
set interfaces ge-0/0/7 unit 0 family inet address 1.2.1.2/30
set interfaces ge-0/0/7 unit 0 family mpls
set interfaces ge-0/0/8 unit 0 family inet address 2.3.5.1/30
set interfaces ge-0/0/8 unit 0 family mpls
set interfaces ge-0/0/9 unit 0 family inet address 2.3.2.1/30
set interfaces ge-0/0/9 unit 0 family mpls
set interfaces ge-0/1/0 unit 0 family inet address 2.3.3.1/30
set interfaces ge-0/1/0 unit 0 family mpls
set interfaces ge-0/1/1 unit 0 family inet address 2.3.0.1/30
set interfaces ge-0/1/1 unit 0 family mpls
set protocols rsvp interface all
set protocols rsvp interface fxp0.0 disable
set protocols mpls admin-groups violet 1
set protocols mpls admin-groups indigo 2
set protocols mpls admin-groups blue 3
set protocols mpls admin-groups green 4
set protocols mpls admin-groups yellow 5
set protocols mpls admin-groups orange 6
set protocols mpls interface all
set protocols mpls interface fxp0.0 disable
set protocols mpls interface ge-0/0/1.0 admin-group violet
set protocols mpls interface ge-0/0/7.0 admin-group indigo
set protocols mpls interface ge-0/0/3.0 admin-group blue
set protocols mpls interface ge-0/0/5.0 admin-group green
set protocols mpls interface ge-0/0/2.0 admin-group yellow
set protocols mpls interface ge-0/0/6.0 admin-group orange
set protocols mpls interface ge-0/1/1.0 admin-group violet
set protocols mpls interface ge-0/0/4.0 admin-group indigo
set protocols mpls interface ge-0/0/9.0 admin-group blue
set protocols mpls interface ge-0/1/0.0 admin-group green
set protocols mpls interface ge-0/0/0.0 admin-group yellow
set protocols mpls interface ge-0/0/8.0 admin-group orange
```

```

set protocols ospf traffic-engineering
set protocols ospf area 0.0.0.0 interface lo0.0
set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
set protocols ospf area 0.0.0.0 interface ge-0/0/7.0
set protocols ospf area 0.0.0.0 interface ge-0/0/3.0
set protocols ospf area 0.0.0.0 interface ge-0/0/5.0
set protocols ospf area 0.0.0.0 interface ge-0/0/2.0
set protocols ospf area 0.0.0.0 interface ge-0/0/6.0
set protocols ospf area 0.0.0.0 interface ge-0/1/1.0

R2  set interfaces ge-0/0/0 unit 0 family inet address 2.3.0.2/30
    set interfaces ge-0/0/0 unit 0 family mpls
    set interfaces ge-0/0/1 unit 0 family inet address 2.3.1.2/30
    set interfaces ge-0/0/1 unit 0 family mpls
    set interfaces ge-0/0/2 unit 0 family inet address 2.3.5.2/30
    set interfaces ge-0/0/2 unit 0 family mpls
    set interfaces ge-0/0/3 unit 0 family inet address 2.3.4.2/30
    set interfaces ge-0/0/3 unit 0 family mpls
    set interfaces ge-0/0/4 unit 0 family inet address 2.3.2.2/30
    set interfaces ge-0/0/4 unit 0 family mpls
    set interfaces ge-0/0/5 unit 0 family inet address 2.3.3.2/30
    set interfaces ge-0/0/5 unit 0 family mpls
    set protocols rsvp interface all
    set protocols rsvp interface fxp0.0 disable
    set protocols mpls admin-groups violet 1
    set protocols mpls admin-groups indigo 2
    set protocols mpls admin-groups blue 3
    set protocols mpls admin-groups green 4
    set protocols mpls admin-groups yellow 5
    set protocols mpls admin-groups orange 6
    set protocols mpls interface all
    set protocols mpls interface fxp0.0 disable
    set protocols mpls interface ge-0/0/0.0 admin-group violet
    set protocols mpls interface ge-0/0/1.0 admin-group indigo
    set protocols mpls interface ge-0/0/4.0 admin-group blue
    set protocols mpls interface ge-0/0/5.0 admin-group green
    set protocols mpls interface ge-0/0/3.0 admin-group yellow
    set protocols mpls interface ge-0/0/2.0 admin-group orange
    set protocols ospf traffic-engineering
    set protocols ospf area 0.0.0.0 interface ge-0/0/0.0
    set protocols ospf area 0.0.0.0 interface ge-0/0/1.0
    set protocols ospf area 0.0.0.0 interface ge-0/0/4.0
    set protocols ospf area 0.0.0.0 interface ge-0/0/5.0
    set protocols ospf area 0.0.0.0 interface ge-0/0/3.0
    set protocols ospf area 0.0.0.0 interface ge-0/0/2.0
    set protocols ospf area 0.0.0.0 interface lo0.0 passive

R3  set interfaces em0 unit 0 family inet address 10.102.180.215/19
    set interfaces em1 unit 0 family inet address 4.5.0.1/30
    set interfaces em2 unit 0 family inet address 1.4.0.2/30
    set interfaces em2 unit 0 family mpls
    set routing-options router-id 128.102.180.215
    set routing-options autonomous-system 100
    set protocols topology-export
    set protocols rsvp interface all

```

```
set protocols mpls lsp-external-controller pccd
set protocols mpls traffic-engineering database import igp-topology
set protocols mpls traffic-engineering database import policy TE
set protocols mpls interface all
set protocols bgp group northstar type internal
set protocols bgp group northstar local-address 128.102.180.215
set protocols bgp group northstar family traffic-engineering unicast
set protocols bgp group northstar neighbor 128.102.180.228
set protocols ospf area 0.0.0.0 interface lo0.0
set protocols ospf area 0.0.0.0 interface em2.0 interface-type p2p
set policy-options policy-statement TE from family traffic-engineering
set policy-options policy-statement TE then accept
```

**Step-by-Step Procedure** The following example requires you to navigate various levels in the configuration hierarchy. For information about navigating the CLI, see *Using the CLI Editor in Configuration Mode*.

To configure the PCC router:

1. Configure the interfaces of Router PCC. To enable MPLS, include the protocol family on the interface so that the interface does not discard incoming MPLS traffic.

[edit interfaces]

```
user@PCC# set ge-0/0/0 unit 0 family inet address 1.2.4.1/30
user@PCC# set ge-0/0/0 unit 0 family mpls
```

```
user@PCC# set ge-0/0/1 unit 0 family inet address 1.2.3.1/30
user@PCC# set ge-0/0/1 unit 0 family mpls
```

```
user@PCC# set ge-0/0/2 unit 0 family inet address 1.2.2.1/30
user@PCC# set ge-0/0/2 unit 0 family mpls
```

```
user@PCC# set ge-0/0/3 unit 0 family inet address 1.2.5.1/30
user@PCC# set ge-0/0/3 unit 0 family mpls
```

```
user@PCC# set ge-0/0/4 unit 0 family inet address 1.4.0.1/30
user@PCC# set ge-0/0/4 unit 0 family mpls
```

```
user@PCC# set ge-0/0/5 unit 0 family inet address 1.2.1.1/30
user@PCC# set ge-0/0/5 unit 0 family mpls
```

```
user@PCC# set ge-0/0/6 unit 0 family inet address 1.2.0.1/30
user@PCC# set ge-0/0/6 unit 0 family mpls
```

2. Configure the autonomous system number for Router PCC.

[edit routing-options]

```
user@PCC# set autonomous-system 100
```

3. Enable RSVP on all interfaces of Router PCC, excluding the management interface.

[edit protocols]

```
user@PCC# set rsvp interface all
user@PCC# set rsvp interface fxp0.0 disable
```



4. Enable MPLS on all the interfaces of Router PCC, excluding the management interface.

```
[edit protocols]
user@PCC# set mpls interface all
user@PCC# set mpls interface fxp0.0 disable
```

5. Configure a dynamic LSP and disable automatic path computation for the LSP.

```
[edit protocols]
user@PCC# set mpls label-switched-path lsp_template_no_cspf template
user@PCC# set mpls label-switched-path lsp_template_no_cspf no-cspf
```

6. Configure point-to-multipoint LSPs and define external path computing entity for the LSP.

```
[edit protocols]
user@PCC# set mpls label-switched-path lsp1-pcc to 128.102.177.16
user@PCC# set mpls label-switched-path lsp2-pcc to 128.102.177.16
user@PCC# set mpls label-switched-path lsp2-pcc lsp-external-controller pccd
```

7. Enable external path computing for the MPLS LSPs and assign a template for externally provisioned LSPs.

```
[edit protocols]
user@PCC# set mpls lsp-external-controller pccd pce-controlled-lsp
pcc_delegated_no_cspf_* label-switched-path-template lsp_template_no_cspf
user@PCC# set mpls lsp-external-controller pccd pce-controlled-lsp
pce_initiated_no_ero_no_cspf_* label-switched-path-template
lsp_template_no_cspf
user@PCC# set mpls lsp-external-controller pccd pce-controlled-lsp
pce_initiated_loose_ero_no_cspf_* label-switched-path-template
lsp_template_no_cspf
```

8. Configure the LSPs that have local control and are overridden by the PCE-provided LSP parameters.

```
[edit protocols]
user@PCC# set mpls path loose-path 1.2.3.2 loose
user@PCC# set mpls path strict-path 1.2.3.2 strict
user@PCC# set mpls path strict-path 2.3.3.2 strict
user@PCC# set mpls path path-B
user@PCC# set mpls path path-C
```

9. Configure MPLS administrative group policies for constrained-path LSP computation.

```
[edit protocols]
user@PCC# set mpls admin-groups violet 1
user@PCC# set mpls admin-groups indigo 2
user@PCC# set mpls admin-groups blue 3
user@PCC# set mpls admin-groups green 4
user@PCC# set mpls admin-groups yellow 5
user@PCC# set mpls admin-groups orange 6
```

10. Assign the configured administrative group policies to Router PCC interfaces.

```
[edit protocols]
user@PCC# set mpls interface ge-0/0/6.0 admin-group violet
user@PCC# set mpls interface ge-0/0/5.0 admin-group indigo
user@PCC# set mpls interface ge-0/0/2.0 admin-group blue
```

- ```

user@PCC# set mpls interface ge-0/0/1.0 admin-group green
user@PCC# set mpls interface ge-0/0/0.0 admin-group yellow
user@PCC# set mpls interface ge-0/0/3.0 admin-group orange

```
11. Configure a traffic engineering database (TED) import policy.
 

```

[edit protocols]
user@PCC# set mpls traffic-engineering database import policy TE

```
  12. Configure a BGP internal group.
 

```

[edit protocols]
user@PCC# set bgp group northstar type internal
user@PCC# set bgp group northstar local-address 128.102.180.228
user@PCC# set bgp group northstar neighbor 128.102.180.215

```
  13. Configure traffic engineering for BGP and assign the export policy.
 

```

[edit protocols]
user@PCC# set bgp group northstar family traffic-engineering unicast
user@PCC# set bgp group northstar export TE

```
  14. Configure OSPF area 0 on all the point-to-multipoint interfaces of Router PCC.
 

```

[edit protocols]
user@PCC# set ospf area 0.0.0.0 interface lo0.0
user@PCC# set ospf area 0.0.0.0 interface ge-0/0/6.0
user@PCC# set ospf area 0.0.0.0 interface ge-0/0/5.0
user@PCC# set ospf area 0.0.0.0 interface ge-0/0/2.0
user@PCC# set ospf area 0.0.0.0 interface ge-0/0/1.0
user@PCC# set ospf area 0.0.0.0 interface ge-0/0/0.0
user@PCC# set ospf area 0.0.0.0 interface ge-0/0/3.0

```
  15. Configure OSPF area 0 on the point-to-point interface of Router PCC.
 

```

[edit protocols]
user@PCC# set ospf area 0.0.0.0 interface ge-0/0/4.0 interface-type p2p

```
  16. Enable traffic engineering for OSPF.
 

```

[edit protocols]
user@PCC# set ospf traffic-engineering

```
  17. Define the PCE that Router PCC connects to, and configure the the PCE parameters.
 

```

[edit protocols]
user@PCC# set pcep pce pce1 local-address 10.102.180.228
user@PCC# set pcep pce pce1 destination-ipv4-address 10.102.180.246
user@PCC# set pcep pce pce1 destination-port 4189
user@PCC# set pcep pce pce1 pce-type active
user@PCC# set pcep pce pce1 pce-type stateful
user@PCC# set pcep pce pce1 lsp-provisioning
user@PCC# set pcep pce pce1 lsp-cleanup-timer 0
user@PCC# set pcep pce pce1 delegation-cleanup-timeout 60

```
  18. Configure Router PCC to enable point-to-multipoint LSP capability for external path computing.
 

```

[edit protocols]
set pcep pce pce1 p2mp-lsp-report-capability

```
  19. Configure the traffic engineering policy.

```
[edit policy-options]
user@PCC# set policy-statement TE term 1 from family traffic-engineering
user@PCC# set policy-statement TE term 1 then accept
```

## Results

From configuration mode, confirm your configuration by entering the **show interfaces** and **show protocols** commands. If the output does not display the intended configuration, repeat the instructions in this example to correct the configuration.

```
user@PCC# show interfaces
ge-0/0/0 {
  unit 0 {
    family inet {
      address 1.2.4.1/30;
    }
    family mpls;
  }
}
ge-0/0/1 {
  unit 0 {
    family inet {
      address 1.2.3.1/30;
    }
    family mpls;
  }
}
ge-0/0/2 {
  unit 0 {
    family inet {
      address 1.2.2.1/30;
    }
    family mpls;
  }
}
ge-0/0/3 {
  unit 0 {
    family inet {
      address 1.2.5.1/30;
    }
    family mpls;
  }
}
ge-0/0/4 {
  unit 0 {
    family inet {
      address 1.4.0.1/30;
    }
    family mpls;
  }
}
ge-0/0/5 {
  unit 0 {
    family inet {
      address 1.2.1.1/30;
    }
  }
}
```

```
    }
    family mpls;
  }
}
ge-0/0/6 {
  unit 0 {
    family inet {
      address 1.2.0.1/30;
    }
    family mpls;
  }
}

user@PCC# show protocols
rsvp {
  interface all;
  interface fxp0.0 {
    disable;
  }
}

mpls {
  lsp-external-controller pccd {
    pce-controlled-lsp pcc_delegated_no_cspf_* {
      label-switched-path-template {
        lsp_template_no_cspf;
      }
    }
    pce-controlled-lsp pce_initiated_no_ero_no_cspf_* {
      label-switched-path-template {
        lsp_template_no_cspf;
      }
    }
    pce-controlled-lsp pce_initiated_loose_ero_no_cspf_* {
      label-switched-path-template {
        lsp_template_no_cspf;
      }
    }
  }
}

traffic-engineering {
  database {
    import {
      policy TE;
    }
  }
}

admin-groups {
  violet 1;
  indigo 2;
  blue 3;
  green 4;
  yellow 5;
  orange 6;
}

label-switched-path lsp_template_no_cspf {
  template;
  no-cspf;
}
```

```

}
label-switched-path lsp1-pcc {
    to 128.102.177.16;
}
label-switched-path lsp2-pcc {
    to 128.102.177.16;
    lsp-external-controller pccd;
}
path loose-path {
    1.2.3.2 loose;
}
path strict-path {
    1.2.3.2 strict;
    2.3.3.2 strict;
}
path path-B;
path path-C;
interface all;
interface ge-0/0/6.0 {
    admin-group violet;
}
interface ge-0/0/5.0 {
    admin-group indigo;
}
interface ge-0/0/2.0 {
    admin-group blue;
}
interface ge-0/0/1.0 {
    admin-group green;
}
interface ge-0/0/0.0 {
    admin-group yellow;
}
interface ge-0/0/3.0 {
    admin-group orange;
}
interface fxp0.0 {
    disable;
}
}
bgp {
    group northstar {
        type internal;
        local-address 128.102.180.228;
        family traffic-engineering {
            unicast;
        }
        export TE;
        neighbor 128.102.180.215;
    }
}
ospf {
    traffic-engineering;
    area 0.0.0.0 {
        interface lo0.0;
        interface ge-0/0/6.0;
    }
}

```

```
interface ge-0/0/5.0;
interface ge-0/0/2.0;
interface ge-0/0/1.0;
interface ge-0/0/0.0;
interface ge-0/0/3.0;
interface ge-0/0/4.0 {
    interface-type p2p;
}
}
}
pcep {
    pce pce1 {
        local-address 10.102.180.228;
        destination-ipv4-address 10.102.180.246;
        destination-port 4189;
        pce-type active stateful;
        lsp-provisioning;
        lsp-cleanup-timer 0;
        delegation-cleanup-timeout 60;
        p2mp-lsp-report-capability;
    }
}
```

## Verification

Confirm that the configuration is working properly.

- [Verifying LSP Configuration on the PCC on page 880](#)
- [Verifying PCE Configuration on the PCC on page 883](#)

### Verifying LSP Configuration on the PCC

---

**Purpose** Verify the LSP type and running state of the point-to-multipoint LSP.

**Action** From operational mode, run the **show mpls lsp extensive** command.

```

user@PCC> show mpls lsp extensive
Ingress LSP: 2 sessions

128.102.177.16
  From: 128.102.180.228, State: Up, ActiveRoute: 0, LSPname: lsp1-pcc
  ActivePath: (primary)
  LSPtype: Static Configured, Penultimate hop popping
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary                               State: Up
    Priorities: 7 0
    SmartOptimizeTimer: 180
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 2)
1.2.1.2 S 2.3.0.2 S
  Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
20=Node-ID):
    1.2.1.2 2.3.0.2
    6 Jul 12 14:44:10.620 Selected as active path
    5 Jul 12 14:44:10.617 Record Route: 1.2.1.2 2.3.0.2
    4 Jul 12 14:44:10.615 Up
    3 Jul 12 14:44:10.175 Originate Call
    2 Jul 12 14:44:10.174 CSPF: computation result accepted 1.2.1.2 2.3.0.2
    1 Jul 12 14:43:41.442 CSPF failed: no route toward 128.102.177.16[2 times]
  Created: Tue Jul 12 14:42:43 2016

128.102.177.16
  From: 128.102.180.228, State: Up, ActiveRoute: 0, LSPname: lsp2-pcc
  ActivePath: (primary)
  LSPtype: Externally controlled - static configured, Penultimate hop popping
  LSP Control Status: Externally controlled
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary                               State: Up
    Priorities: 7 0
    External Path CSPF Status: external
    SmartOptimizeTimer: 180
    Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
20=Node-ID):
    1.2.4.2 2.3.0.2
    50 Jul 12 14:50:14.699 EXTCTRL LSP: Sent Path computation request and LSP
status
    49 Jul 12 14:50:14.698 EXTCTRL_LSP: Computation request/lsp status contains:
signalled bw 0 req BW 0 admin group(exclude 0 include any 0 include all 0)
priority setup 7 hold 0
    48 Jul 12 14:49:27.859 EXTCTRL LSP: Sent Path computation request and LSP
status
    47 Jul 12 14:49:27.859 EXTCTRL_LSP: Computation request/lsp status contains:
signalled bw 0 req BW 0 admin group(exclude 0 include any 0 include all 0)
priority setup 7 hold 0
    46 Jul 12 14:49:27.858 EXTCTRL LSP: Sent Path computation request and LSP
status
    45 Jul 12 14:49:27.858 EXTCTRL_LSP: Computation request/lsp status contains:
signalled bw 0 req BW 0 admin group(exclude 0 include any 0 include all 0)
priority setup 7 hold 0
    44 Jul 12 14:49:27.858 EXTCTRL_LSP: Control status became external
    43 Jul 12 14:49:03.746 EXTCTRL_LSP: Control status became local
    42 Jul 12 14:46:52.367 EXTCTRL LSP: Sent Path computation request and LSP
status

```

```
41 Jul 12 14:46:52.367 EXTCTRL_LSP: Computation request/lsp status contains:
  signalled bw 0 req BW 0 admin group(exclude 0 include any 0 include all 0)
  priority setup 7 hold 0
40 Jul 12 14:46:52.367 EXTCTRL LSP: Sent Path computation request and LSP
status
39 Jul 12 14:46:52.366 EXTCTRL_LSP: Computation request/lsp status contains:
  signalled bw 0 req BW 0 admin group(exclude 0 include any 0 include all 0)
  priority setup 7 hold 0
38 Jul 12 14:46:52.366 EXTCTRL_LSP: Control status became external
37 Jul 12 14:46:41.584 Selected as active path
36 Jul 12 14:46:41.565 Record Route: 1.2.4.2 2.3.0.2
35 Jul 12 14:46:41.565 Up
34 Jul 12 14:46:41.374 EXTCTRL_LSP: Applying local parameters with this
signalling attempt
33 Jul 12 14:46:41.374 Originate Call
32 Jul 12 14:46:41.374 CSPF: computation result accepted 1.2.4.2 2.3.0.2
31 Jul 12 14:46:28.254 EXTCTRL_LSP: Control status became local
30 Jul 12 14:46:12.494 EXTCTRL LSP: Sent Path computation request and LSP
status
29 Jul 12 14:46:12.494 EXTCTRL_LSP: Computation request/lsp status contains:
  signalled bw 0 req BW 0 admin group(exclude 0 include any 0 include all 0)
  priority setup 7 hold 0
28 Jul 12 14:45:43.164 EXTCTRL LSP: Sent Path computation request and LSP
status
27 Jul 12 14:45:43.164 EXTCTRL_LSP: Computation request/lsp status contains:
  signalled bw 0 req BW 0 admin group(exclude 0 include any 0 include all 0)
  priority setup 7 hold 0
26 Jul 12 14:45:13.424 EXTCTRL LSP: Sent Path computation request and LSP
status
25 Jul 12 14:45:13.423 EXTCTRL_LSP: Computation request/lsp status contains:
  signalled bw 0 req BW 0 admin group(exclude 0 include any 0 include all 0)
  priority setup 7 hold 0
24 Jul 12 14:44:44.774 EXTCTRL LSP: Sent Path computation request and LSP
status
23 Jul 12 14:44:44.773 EXTCTRL_LSP: Computation request/lsp status contains:
  signalled bw 0 req BW 0 admin group(exclude 0 include any 0 include all 0)
  priority setup 7 hold 0
22 Jul 12 14:44:15.053 EXTCTRL LSP: Sent Path computation request and LSP
status
21 Jul 12 14:44:15.053 EXTCTRL_LSP: Computation request/lsp status contains:
  signalled bw 0 req BW 0 admin group(exclude 0 include any 0 include all 0)
  priority setup 7 hold 0
20 Jul 12 14:43:45.705 EXTCTRL LSP: Sent Path computation request and LSP
status
19 Jul 12 14:43:45.705 EXTCTRL_LSP: Computation request/lsp status contains:
  signalled bw 0 req BW 0 admin group(exclude 0 include any 0 include all 0)
  priority setup 7 hold 0
18 Jul 12 14:43:45.705 EXTCTRL LSP: Sent Path computation request and LSP
status
17 Jul 12 14:43:45.705 EXTCTRL_LSP: Computation request/lsp status contains:
  signalled bw 0 req BW 0 admin group(exclude 0 include any 0 include all 0)
  priority setup 7 hold 0
16 Jul 12 14:43:45.705 EXTCTRL_LSP: Control status became external
15 Jul 12 14:43:42.398 CSPF failed: no route toward 128.102.177.16
14 Jul 12 14:43:13.009 EXTCTRL_LSP: Control status became local
13 Jul 12 14:43:13.009 EXTCTRL LSP: Sent Path computation request and LSP
status
12 Jul 12 14:43:13.008 EXTCTRL_LSP: Computation request/lsp status contains:
  signalled bw 0 req BW 0 admin group(exclude 0 include any 0 include all 0)
  priority setup 7 hold 0
11 Jul 12 14:42:43.343 EXTCTRL LSP: Sent Path computation request and LSP
```



```

status
  10 Jul 12 14:42:43.343 EXTCTRL_LSP: Computation request/lsp status contains:
    signalled bw 0 req BW 0 admin group(exclude 0 include any 0 include all 0)
  priority setup 7 hold 0
  9 Jul 12 14:42:43.343 EXTCTRL LSP: Sent Path computation request and LSP
status
  8 Jul 12 14:42:43.343 EXTCTRL_LSP: Computation request/lsp status contains:
    signalled bw 0 req BW 0 admin group(exclude 0 include any 0 include all 0)
  priority setup 7 hold 0
  7 Jul 12 14:42:43.342 EXTCTRL LSP: Sent Path computation request and LSP
status
  6 Jul 12 14:42:43.342 EXTCTRL_LSP: Computation request/lsp status contains:
    signalled bw 0 req BW 0 admin group(exclude 0 include any 0 include all 0)
  priority setup 7 hold 0
  5 Jul 12 14:42:43.341 EXTCTRL_LSP: Control status became external
  4 Jul 12 14:42:43.337 EXTCTRL_LSP: Control status became local
  3 Jul 12 14:42:43.323 EXTCTRL LSP: Sent Path computation request and LSP
status
  2 Jul 12 14:42:43.323 EXTCTRL_LSP: Computation request/lsp status contains:
    signalled bw 0 req BW 0 admin group(exclude 0 include any 0 include all 0)
  priority setup 7 hold 0
  1 Jul 12 14:42:43.258 EXTCTRL LSP: Awaiting external controller connection
    Created: Tue Jul 12 14:42:43 2016
Total 2 displayed, Up 2, Down 0

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

**Meaning** The output displays the lsp2-pcc LSP as the PCE-controlled LSP.

### Verifying PCE Configuration on the PCC

**Purpose** Verify the PCE parameters configuration and PCE state.

**Action** From operational mode, run the **show path-computation-client active-pce** command.

```

user@PCC> show path-computation-client active-pce
PCE pce1
-----
General
  PCE IP address       : 10.102.180.246
  Local IP address     : 10.102.180.228
  Priority              : 0
  PCE status           : PCE_STATE_UP
  Session type         : PCE_TYPE_STATEFULACTIVE
  LSP provisioning allowed : On
  P2MP LSP report allowed : On
  P2MP LSP update allowed : Off
  P2MP LSP init allowed  : Off
  PCE-mastership       : main

Counters
  PCReqs              Total: 0          last 5min: 0          last hour: 0
  PCReps              Total: 0          last 5min: 0          last hour: 0
  PCRpts              Total: 12         last 5min: 0          last hour:
12
  PCUpdates           Total: 1          last 5min: 0          last hour: 1
  PCCreates           Total: 0          last 5min: 0          last hour: 0

Timers
  Local Keepalive timer: 30 [s] Dead timer: 120 [s] LSP cleanup timer:
0 [s]
  Remote Keepalive timer: 30 [s] Dead timer: 120 [s] LSP cleanup timer:
0 [s]

Errors
  PCErr-recv
  PCErr-sent
      Type: 1          Value: 2          Count: 1
  PCE-PCC-NTFS
  PCC-PCE-NTFS

```

**Meaning** The output displays the active PCE that Router PCC is connected to, and the pce1 PCE parameters and state.

**Related Documentation**

- [Support of the Path Computation Element Protocol for RSVP-TE Overview on page 828](#)

## PART 8

# Troubleshooting Information

- [Troubleshooting MPLS on page 887](#)



## CHAPTER 23

# Troubleshooting MPLS

- [Verify MPLS Interfaces on page 893](#)
- [Verify the MPLS Configuration on page 895](#)
- [Verify That Node-Link Protection Is Up on page 897](#)
- [Node-Link Protection Overview on page 903](#)
- [Verify That Link Protection Is Up on page 905](#)
- [Many-to-One Link Protection \(Facility Backup\) Overview on page 909](#)
- [Verify One-to-One Backup on page 910](#)
- [Verify That the Primary Path Is Operational on page 917](#)
- [Preventing Use of a Path That Previously Failed on page 918](#)
- [Verify That the Secondary Path Is Established on page 919](#)
- [Checklist for Checking the MPLS Layer on page 921](#)
- [Checking the MPLS Layer on page 921](#)
- [Verify the LSP on page 937](#)
- [Verify the LSP Route on the Transit Router on page 940](#)
- [Verify the LSP Route on the Ingress Router on page 941](#)
- [Verify MPLS Labels with the traceroute Command on page 942](#)
- [Verify MPLS Labels with the ping Command on page 943](#)
- [Take Appropriate Action on page 944](#)
- [Verify the LSP Again on page 945](#)
- [Checklist for Working with the Layered MPLS Troubleshooting Model on page 948](#)
- [Understanding the Layered MPLS Troubleshooting Model on page 948](#)
- [Checklist for Verifying the Physical Layer on page 955](#)
- [Verifying the Physical Layer on page 956](#)
- [Verify the LSP on page 962](#)
- [Verify Router Connection on page 964](#)
- [Verify Interfaces on page 964](#)
- [Take Appropriate Action on page 965](#)
- [Verify the LSP Again on page 966](#)

- [Checklist for Checking the Data Link Layer on page 967](#)
- [Checking the Data Link Layer on page 968](#)
- [Verify the LSP on page 978](#)
- [Verify Interfaces on page 979](#)
- [Take Appropriate Action on page 982](#)
- [Verify the LSP Again on page 983](#)
- [Checklist for Verifying the IP and IGP Layers on page 986](#)
- [Verifying the IP and IGP Layers on page 988](#)
- [Verifying the IP Layer on page 990](#)
- [Verify the LSP on page 1000](#)
- [Verify IP Addressing on page 1001](#)
- [Verify Neighbors or Adjacencies at the IP Layer on page 1002](#)
- [Take Appropriate Action on page 1005](#)
- [Verify the LSP Again on page 1006](#)
- [Verifying the OSPF Protocol on page 1009](#)
- [Verify the LSP on page 1020](#)
- [Verify OSPF Interfaces on page 1023](#)
- [Verify OSPF Neighbors on page 1024](#)
- [Verify the LSP Again on page 1025](#)
- [Verify the LSP on page 1027](#)
- [Verify IS-IS Adjacencies and Interfaces on page 1028](#)
- [Verify the IS-IS Configuration on page 1030](#)
- [Verify the LSP Again on page 1031](#)
- [Checklist for Checking the RSVP Layer on page 1033](#)
- [Checking the RSVP Layer on page 1034](#)
- [Verify the LSP on page 1046](#)
- [Verify RSVP Sessions on page 1048](#)
- [Verify RSVP Neighbors on page 1049](#)
- [Verify RSVP Interfaces on page 1050](#)
- [Verify the RSVP Protocol Configuration on page 1052](#)
- [Take Appropriate Action on page 1052](#)
- [Verify the LSP Again on page 1053](#)
- [Checklist for Determining LSP Status on page 1056](#)
- [Determining LSP Statistics on page 1056](#)
- [Checklist for Verifying LSP Use on page 1058](#)
- [Verifying LSP Use in Your Network on page 1058](#)
- [Verifying an LSP on the Ingress Router on page 1062](#)

- [Verifying an LSP on a Transit Router on page 1063](#)
- [Verify That Load Balancing Is Working on page 1064](#)
- [Example: Load-Balanced MPLS Network on page 1067](#)
- [Router Configurations for the Load-Balanced MPLS Network on page 1068](#)
- [Traffic Flows Before Load Balancing on page 1080](#)
- [Verify the Operation of Uneven Bandwidth Load Balancing on page 1082](#)
- [Checklist for Collecting Crash Data on page 1084](#)
- [Understand Crash Data Collection on page 1085](#)
- [Collect Crash Data for a Routing Engine Kernel on page 1086](#)
- [Check the Routing Engine Core Files on page 1089](#)
- [List the Core Files on page 1089](#)
- [Compress the vmcore File on page 1090](#)
- [Log Software Version Information on page 1090](#)
- [Open a Case with JTAC on page 1091](#)
- [Collect Crash Data for Routing Engine Daemons on page 1091](#)
- [Collect and Send Routing Engine Crash Data to JTAC on page 1095](#)
- [Check for Daemon Core Files on page 1096](#)
- [List the Daemon Core Files on page 1097](#)
- [Compress the Daemon Core Files on page 1098](#)
- [Collect Crash Data for the Packet Forwarding Engine Microkernel on page 1098](#)
- [Display the Crash Stack Traceback and Registration Information on page 1105](#)
- [Clear the NVRAM Contents on page 1108](#)
- [Check Packet Forwarding Engine Microkernel Core Files on page 1109](#)
- [List the Core Files Generated by the Crash on page 1109](#)
- [Compress the Core Files on page 1110](#)
- [Path Protection Overview on page 1110](#)
- [Configure a Primary Path on page 1111](#)
- [Ensuring That Secondary Paths Establish When Resources Are Diminished on page 1113](#)
- [One-to-One Backup Overview on page 1114](#)
- [Configure Link Protection on page 1115](#)
- [Configuring and Verifying Link Protection on page 1117](#)
- [Configure Node-Link Protection on page 1123](#)
- [Configuring and Verifying Node-Link Protection on page 1124](#)
- [Configure IS-IS as the IGP on page 1133](#)
- [Verify That IS-IS Adjacencies Are Established on page 1139](#)
- [Configure OSPF as the IGP on page 1140](#)
- [Set Up BGP on Routers in Your Network on page 1144](#)

- [Define the Local Autonomous System on page 1150](#)
- [Enable MPLS and RSVP on page 1151](#)
- [Enable MPLS and RSVP on Routers on page 1153](#)
- [Enable MPLS on Transit Router Interfaces on page 1155](#)
- [Verifying the MPLS Configuration on page 1156](#)
- [Verify the RSVP Protocol on page 1164](#)
- [Define a Load-Balancing Policy on page 1166](#)
- [Use the traceroute Command to Verify MPLS Labels on page 1167](#)
- [Apply the Load-Balancing Policy to the Forwarding Table on page 1168](#)
- [Fast Reroute Problem Overview on page 1168](#)
- [Problem Establishing a GRE Tunnel Checklist on page 1189](#)
- [Troubleshooting GMPLS and GRE Tunnel on page 1190](#)
- [Verify Protocol Families on page 1207](#)
- [Determining LSP Status on page 1210](#)
- [Check the Status of the LSP on page 1215](#)
- [Display Extensive Status About the LSP on page 1215](#)
- [Checking That RSVP Path Messages Are Sent and Received on page 1219](#)
- [Determining the Current RSVP Neighbor State on page 1221](#)
- [Take Appropriate Action on page 1222](#)
- [Examine BGP Routes on page 1223](#)
- [CLI Operational Mode Top-Level Commands on page 1224](#)
- [CLI Keyboard Shortcuts on page 1226](#)
- [Manage Output at the ---\(more\)--- Prompt on page 1227](#)
- [Working with Problems on Your Network on page 1228](#)
- [Isolating a Broken Network Connection on page 1229](#)
- [Display Junos OS Information on page 1233](#)
- [Display Version Information for Junos OS Packages on page 1234](#)
- [Display the Current Active Router Configuration on page 1235](#)
- [Copy Junos OS to the Router on page 1239](#)
- [Add New Software on page 1239](#)
- [Compare Information Logged Before and After the Upgrade on page 1240](#)
- [Displaying LSP Status Events on page 1240](#)
- [Call Was Cleared by RSVP Event on page 1243](#)
- [Change in Active Path Event on page 1243](#)
- [Clear Call Event on page 1244](#)
- [Deselected as Active Event on page 1244](#)
- [Link Protection Down Event on page 1245](#)



- [Originate Call Event on page 1247](#)
- [ResvTear Received Event on page 1247](#)
- [Session Preempted Event on page 1248](#)
- [Displaying General LSP Error Events on page 1249](#)
- [Admission Control Failure Event on page 1249](#)
- [Explicit Route: Bad Loose Route Event on page 1250](#)
- [Explicit Route: Bad Strict Route Event on page 1252](#)
- [Explicit Route: Format Error Event on page 1254](#)
- [Explicit Route: Wrong Delivery Event on page 1254](#)
- [Invalid Destination Address Event on page 1256](#)
- [Invalid Filter for Policing Event on page 1256](#)
- [MPLS Graceful Restart: Recovery Failed Event on page 1257](#)
- [MPLS Label Allocation Failure Event on page 1257](#)
- [Non-RSVP Capable Router Detected Event on page 1258](#)
- [No Route Toward Destination Event on page 1258](#)
- [Unsupported Traffic Class Event on page 1259](#)
- [CSPF: Computation Result Accepted Event on page 1260](#)
- [CSPF: Reroute Due to Re-Optimization Event on page 1260](#)
- [Retry Limit Exceeded Event on page 1260](#)
- [Log the Software Version Information on page 1261](#)
- [Log the Hardware Version Information on page 1262](#)
- [Log the System Boot-Message Information on page 1263](#)
- [Log the BGP, IS-IS, and OSPF Adjacency Information on page 1265](#)
- [Back Up the Currently Running and Active File System on page 1266](#)
- [Reinstall Junos OS on page 1267](#)
- [Reconfigure Junos OS on page 1267](#)
- [Configure Host Names, Domain Names, and IP Addresses on page 1271](#)
- [Check Network Connectivity on page 1272](#)
- [Automatic Autobandwidth Adjustment Failed Event on page 1272](#)
- [Displaying DiffServ-Aware Traffic-Engineered LSP Events on page 1274](#)
- [Unsupported Traffic Class Event on page 1275](#)
- [Traffic Class Value Out of Allowed Range Event on page 1275](#)
- [The Combination of Setup Priority and Traffic Class Is Not One of the Configured TE Classes Event on page 1275](#)
- [RSVP Error, Subcode 7, Signal Type Does Not Match Link Encoding Event on page 1276](#)
- [Unacceptable Label Value Event on page 1276](#)
- [Unsupported Switching Type Event on page 1276](#)

- [Gather Component Alarm Information on page 1277](#)
- [Case Study for a CSPF Failure on page 1278](#)
- [Examining a CSPF Failure on page 1284](#)
- [Verify the CSPF Failure on page 1291](#)
- [Examining the Hello Message on page 1293](#)
- [Displaying the Status of IS-IS Adjacencies on page 1295](#)
- [Check OSPF on a Stub Router on page 1298](#)
- [Checklist for Verifying the BGP Protocol and Peers on page 1299](#)
- [Verify BGP Peers on page 1300](#)
- [Examine BGP Routes and Route Selection on page 1309](#)
- [Examine the Local Preference Selection on page 1315](#)
- [Examine the Multiple Exit Discriminator Route Selection on page 1316](#)
- [Examine the EBGp over IBGP Selection on page 1317](#)
- [Examine the IGP Cost Selection on page 1318](#)
- [Examine Routes in the Forwarding Table on page 1319](#)
- [Ping the Egress Router on page 1320](#)
- [View the RSVP Log File on Transit Routers on page 1320](#)
- [Check the RSVP Log File on the Egress Router on page 1322](#)
- [Determine and Correct the Problem on the Egress Router on page 1322](#)
- [Check the Routing CPU Memory Usage on page 1325](#)
- [Run Snmpwalk from an NMS System to a Juniper Router on page 1332](#)
- [Configure Trace Operations for SNMP on page 1334](#)
- [Query a MIB With SNMPGet on page 1335](#)
- [Check CPU Utilization on page 1335](#)
- [Check CPU Utilization per Process on page 1337](#)
- [Retrieve Version Information about Router Software Components on page 1340](#)
- [Checklist for Displaying Basic Chassis Information on page 1341](#)
- [Display Basic Chassis Information on page 1341](#)
- [Maintain a Single Configuration File for Both Routing Engines on page 1344](#)
- [Configure the New Group on page 1346](#)
- [Apply the New Group on page 1348](#)
- [List Files and Directories on a Router on page 1349](#)
- [Display File Contents on page 1349](#)
- [Rename a File on a Router on page 1350](#)
- [Delete a File on a Router on page 1350](#)
- [Check the Time on a Router on page 1350](#)
- [Check for Users in Configuration Mode on page 1351](#)

- [Check the Commands That Users Are Entering on page 1352](#)
- [Configure the Log File for Tracking CLI Commands on page 1354](#)
- [Check When the Last Configuration Change Occurred on page 1354](#)
- [Configure Configuration Change Tracking on page 1356](#)
- [Display a Log File on page 1356](#)
- [Configure IS-IS-Specific Options on page 1357](#)
- [Displaying Detailed IS-IS Protocol Information on page 1363](#)
- [Analyzing IS-IS Link-State PDUs in Detail on page 1365](#)
- [Configure OSPF-Specific Options on page 1367](#)
- [Diagnose OSPF Session Establishment Problems on page 1372](#)
- [Analyze OSPF Link-State Advertisement Packets in Detail on page 1375](#)
- [Chassis on page 1376](#)
- [Physical Interface Cards on page 1377](#)
- [Routing Engine on page 1377](#)
- [Compare Information Logged Before and After the Reinstall on page 1377](#)
- [Back Up the New Software on page 1378](#)
- [Monitor Hardware Components on page 1378](#)
- [Log Software Version Information on page 1378](#)
- [Hardware Components on page 1379](#)

## Verify MPLS Interfaces

- Purpose** If the MPLS protocol is not configured correctly on the routers in your network, the interfaces are not able to perform MPLS switching.
- Action** To verify MPLS interfaces, enter the following Junos OS command-line interface (CLI) operational mode command:
- ```
user@host> show mpls interface
```

## Sample Output 1

The following sample output is for all routers in the network shown in *MPLS Network Topology*.

```
user@R1> show mpls interface
Interface      State      Administrative groups
so-0/0/0.0     Up         <none>
so-0/0/1.0     Up         <none>
so-0/0/2.0     Up         <none>

user@R2> show mpls interface
Interface      State      Administrative groups
so-0/0/0.0     Up         <none>
so-0/0/1.0     Up         <none>
so-0/0/2.0     Up         <none>
so-0/0/3.0     Up         <none>
```

```

user@R3> show mpls interface
Interface      State      Administrative groups
so-0/0/0.0     Up         <none>
so-0/0/1.0     Up         <none>
so-0/0/2.0     Up         <none>
so-0/0/3.0     Up         <none>

```

```

user@R4> show mpls interface
Interface      State      Administrative groups
so-0/0/0.0     Up         <none>
so-0/0/1.0     Up         <none>
so-0/0/2.0     Up         <none>
so-0/0/3.0     Up         <none>

```

```

user@R5> show mpls interface
Interface      State      Administrative groups
so-0/0/0.0     Up         <none>
so-0/0/1.0     Up         <none>
so-0/0/2.0     Up         <none>

```

```

user@R6> show mpls interface
Interface      State      Administrative groups
so-0/0/0.0     Up         <none>
so-0/0/1.0     Up         <none>
so-0/0/2.0     Up         <none>
so-0/0/3.0     Up         <none>

```

## Sample Output 2

```

user@R6> show mpls interface
Interface      State      Administrative groups
so-0/0/0.0     Up         <none>
so-0/0/1.0     Up         <none>
so-0/0/3.0     Up         <none>          # so-0/0/2.0 is missing

```

## Sample Output 3

```

user@host> show mpls interface
MPLS not configured

```

**Meaning** Sample Output 1 shows that all MPLS interfaces on all routers in the network are enabled (**Up**) and can perform MPLS switching. If you fail to configure the correct interface at the `[edit protocols mpls]` hierarchy level or include the **family mpls** statement at the `[edit interfaces type-fpc/pic/port unit number]` hierarchy level, the interface cannot perform MPLS switching, and does not appear in the output for the **show mpls interface** command.

Administrative groups are not configured on any of the interfaces shown in the example network in *MPLS Network Topology*. However, if they were, the output would indicate which affinity class bits are enabled on the router.

Sample Output 2 shows that interface **so-0/0/2.0** is missing and therefore might be incorrectly configured. For example, the interface might not be included at the `[edit protocols mpls]` hierarchy level, or the **family mpls** statement might not be included at the `[edit interfaces type-fpc/pic/port unit number]` hierarchy level. If the interface is configured correctly, RSVP might not have signaled over this interface yet. For more

information on determining which interface is incorrectly configured, see [“Verify Protocol Families” on page 1162](#).

Sample Output 3 shows that the MPLS protocol is not configured at the `[edit protocols mpls]` hierarchy level.

## Verify the MPLS Configuration

**Purpose** After you have checked the transit and ingress routers, use the `traceroute` command to verify the BGP next hop, and used the `ping` command to verify the active path, you can check for problems with the MPLS configuration at the `[edit protocols mpls]` and `[edit interfaces]` hierarchy levels.

**Action** To verify the MPLS configuration, enter the following commands from the ingress, transit, and egress routers:

```
user@host> show configuration protocols mpls
user@host> show configuration interfaces
```

### Sample Output 1

```
user@R1> show configuration protocols mpls
label-switched-path R1-to-R6 {
    to 10.0.0.6;
}
inactive: interface so-0/0/0.0;
inactive: interface so-0/0/1.0;
interface so-0/0/2.0;
interface fxp0.0 {
    disable;
}

user@R3> show configuration protocols mpls
interface fxp0.0 {
    disable;
}
inactive: interface so-0/0/0.0;
inactive: interface so-0/0/1.0;
interface so-0/0/2.0;
interface so-0/0/3.0;

user@R6> show configuration protocols mpls
label-switched-path R6-to-R1 {
    to 10.0.0.1;
}
inactive: interface so-0/0/0.0;
inactive: interface so-0/0/1.0;
inactive: interface so-0/0/2.0;
inactive: interface so-0/0/3.0; <<< Incorrectly configured
```

### Sample Output 2

```
user@R6> show configuration interfaces
so-0/0/0 {
    unit 0 {
        family inet {
            address 10.1.56.2/30;
```

```

    }
    family iso;
    family mpls;
  }
}
so-0/0/1 {
  unit 0 {
    family inet {
      address 10.1.46.2/30;
    }
    family iso;
    family mpls;
  }
}
so-0/0/2 {
  unit 0 {
    family inet {
      address 10.1.26.2/30;
    }
    family iso;
    family mpls;
  }
}
so-0/0/3 {
  unit 0 {
    family inet {
      address 10.1.36.2/30;
    }
    family iso;
    family mpls;
  }
}
fxp0 {
  unit 0 {
    family inet {
      address 192.168.70.148/21;
    }
  }
}
lo0 {
  unit 0 {
    family inet {
      address 10.0.0.6/32;
      address 127.0.0.1/32;
    }
    family iso {
      address 49.0003.1000.0000.0006.00;
    }
  }
}
}

```

**Meaning** Sample Output 1 from the ingress, transit, and egress routers shows that the configuration of interfaces on egress router **R6** is incorrect. Interface **so-0/0/3.0** is included as inactive at the **[edit protocols mpls]** hierarchy level, when it should be active because it is the interface through which the LSP travels.

Sample Output 2 shows that interfaces are correctly configured for MPLS on egress router **R6**. The interfaces are also correctly configured on the ingress and transit routers (not shown).

## Verify That Node-Link Protection Is Up

**Purpose** After you configure node-link protection, you must check that bypass paths are up. You can also check the number of LSPs protected by the bypass paths. In the network shown in [Figure 91 on page 904](#), two bypass paths should be up: one next-hop bypass path protecting the link between **R1** and **R2** (or next-hop **10.0.12.14**), and a next-next-hop bypass path avoiding **R2**.

**Action** To verify node-link protection (many-to-one backup), enter the following Junos OS CLI operational mode commands on the ingress router. You can also issue the commands on transit routers and other routers used in the bypass path for slightly different information.

```
show mpls lsp (See Sample Output on page ?)
show mpls lsp extensive (See Sample Output on page 898)
show rsvp interface (See Sample Output on page 899)
show rsvp interface extensive (See Sample Output on page 900)
show rsvp session detail (See Sample Output on page 901)
```

## Sample Output

```
user@R1> show mpls lsp
Ingress LSP: 1 sessions
To          From          State Rt ActivePath      P      LSPname
192.168.5.1  192.168.1.1  Up    0  via-r2          *      lsp2-r1-to-r5
Total 1 displayed, Up 1 , Down 0

Egress LSP: 1 sessions
To          From          State Rt Style Labelin Labelout LSPname
192.168.1.1  192.168.5.1  Up    0  1 FF          3      - r5-to-r1
Total 1 displayed, Up 1 , Down 0

Transit LSP: 2 sessions
To          From          State Rt Style Labelin Labelout LSPname
192.168.0.1  192.168.6.1  Up    0  1 FF 100464 101952 lsp1-r6-to-r0
192.168.6.1  192.168.0.1  Up    0  1 FF 100448      3  r0-to-t6
Total 2 displayed, Up 2, Down 0
```

**Meaning** Sample output from **R1** for the **show mpls lsp** command shows a brief description of the state of configured and active LSPs for which **R1** is the ingress, transit, and egress router. All LSPs are up. **R1** is the ingress router for **lsp2-r1-to-r5**, and the egress router for return LSP **r5-to-r1**. Two LSPs transit **R1**, **lsp1-r6-to-r0** and the return LSP **r0-to-t6**. For more detailed information about the LSP, include the **extensive** option when you issue the **show mpls lsp** command.

```

Sample Output user@R1> show mpls lsp extensive
Ingress LSP: 1 sessions

192.168.5.1
  From: 192.168.1.1, State: Up , ActiveRoute: 0, LSPname: lsp2-r1-to-r5
  ActivePath: via-r2 (primary)
  Node/Link protection desired
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary via-r2 State: Up
    SmartOptimizeTimer: 180
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 3)
  10.0.12.14 S 10.0.24.2 S 10.0.45.2 S
    Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):

        10.0.12.14(Label=101872) 10.0.24.2(Label=101360) 10.0.45.2(Label=3)
    11 Jul 11 14:30:58 Link-protection Up
    10 Jul 11 14:28:28 Selected as active path
    [...Output truncated...]
    Created: Tue Jul 11 14:22:58 2006
  Total 1 displayed, Up 1, Down 0

Egress LSP: 1 sessions

192.168.1.1
  From: 192.168.5.1, LSPstate: Up, ActiveRoute: 0
  LSPname: r5-to-r1, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: -
  Resv style: 1 FF, Label in: 3, Label out: -
  Time left: 146, Since: Tue Jul 11 14:28:36 2006
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 29228 protocol 0
  PATH rcvfrom: 10.0.12.14 (fe-0/1/0.0) 362 pkts
  Adspec: received MTU 1500
  PATH sentto: localclient
  RESV rcvfrom: localclient
  Record route: 10.0.45.2 10.0.24.2 10.0.12.14 <self>
  Total 1 displayed, Up 1, Down 0

Transit LSP: 2 sessions

192.168.0.1
  From: 192.168.6.1, LSPstate: Up, ActiveRoute: 0
  LSPname: lsp1-r6-to-r0, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 101952
  Resv style: 1 SE, Label in: 100464, Label out: 101952
  Time left: 157, Since: Tue Jul 11 14:31:38 2006
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 11131 protocol 0
  Node/Link protection desired
  Type: Node/Link protected LSP, using Bypass->10.0.12.14->10.0.24.2
    1 Jul 11 14:31:38 Node protection up, using Bypass->10.0.12.14->10.0.24.2
  PATH rcvfrom: 10.0.16.2 (so-0/0/3.0) 509 pkts
  Adspec: received MTU 1500 sent MTU 1500
  PATH sentto: 10.0.12.14 (fe-0/1/0.0) 356 pkts
  RESV rcvfrom: 10.0.12.14 (fe-0/1/0.0) 358 pkts
  Explct route: 10.0.12.14 10.0.24.2 10.0.45.2 10.0.50.2
  Record route: 10.0.16.2 <self> 10.0.12.14 10.0.24.2 10.0.45.2 10.0.50.2

```



```

192.168.6.1
  From: 192.168.0.1, LSPstate: Up, ActiveRoute: 0
  LSPname: r0-to-t6, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 3
  Resv style: 1 FF, Label in: 100448, Label out: 3
  Time left: 147, Since: Tue Jul 11 14:31:36 2006
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 23481 protocol 0
  PATH rcvfrom: 10.0.12.14 (fe-0/1/0.0) 358 pkts
  Adspec: received MTU 1500 sent MTU 1500
  PATH sentto: 10.0.16.2 (so-0/0/3.0) 350 pkts
  RESV rcvfrom: 10.0.16.2 (so-0/0/3.0) 323 pkts
  Explct route: 10.0.16.2
  Record route: 10.0.50.2 10.0.45.2 10.0.24.2 10.0.12.14 <self> 10.0.16.2
Total 2 displayed, Up 2, Down 0

```

**Meaning** Sample output from R1 for the **show mpls lsp extensive** command shows detailed information about all LSPs for which R1 is the ingress, egress, or transit router, including all past state history and the reason why an LSP failed. All LSPs are up. The main two LSPs **lsp2-r1-to-r5** and **lsp1-r6-to-r0** have node-link protection as indicated by the **Node/Link protection desired** field in the ingress and transit sections of the output. In the ingress section of the output, the **Link-protection Up** field shows that **lsp2-r1-to-r5** has link protection up. In the transit section of the output, the **Type: Node/Link protected LSP** field shows that **lsp1-r6-to-r0** has node-link protection up, and in case of failure will use the bypass **LSP Bypass->10.0.12.14->10.0.24.2**.

**Sample Output**

```

user@R1> show rsvp interface
RSVP interface: 4 active

```

Interface	State	Active resv	Subscr-ption	Static BW	Available BW	Reserved BW	Highwater mark
fe-0/1/0.0	Up	2	100%	100Mbps	100Mbps	0bps	0bps
fe-0/1/1.0	Up	1	100%	100Mbps	100Mbps	0bps	0bps
fe-0/1/2.0	Up	0	100%	100Mbps	100Mbps	0bps	0bps
so-0/0/3.0	Up	1	100%	155.52Mbps	155.52Mbps	0bps	0bps

**Meaning** Sample output from R1 for the **show rsvp interface** command shows four interfaces enabled with RSVP (**Up**). Interface **fe-0/1/0.0** has two active RSVP reservations (**Active resv**) that might indicate sessions for the two main LSPs, **lsp1-r6-to-r0** and **lsp2-r1-to-r5**. Interface **fe-0/1/0.0** is the connecting interface between R1 and R2, and both LSPs are configured with a strict path through **fe-0/1/0.0**. For more detailed information about what is happening on interface **fe-0/1/0.0**, issue the **show rsvp interface extensive** command.

**Sample Output**    user@R1> show rsvp interface extensive

```
RSVP interface: 3 active
fe-0/1/0.0 Index 67, State Ena/Up
  NoAuthentication, NoAggregate, NoReliable, LinkProtection
  HelloInterval 9(second)
  Address 10.0.12.13
  ActiveResv 2, PreemptionCnt 0, Update threshold 10%
  Subscription 100%,
  bc0 = ct0, StaticBW 100Mbps
  ct0: StaticBW 100Mbps, AvailableBW 100Mbps
    MaxAvailableBW 100Mbps = (bc0*subscription)
    ReservedBW [0] 0bps[1] 0bps[2] 0bps[3] 0bps[4] 0bps[5] 0bps[6] 0bps[7] 0bps
  Protection: On, Bypass: 2, LSP: 2, Protected LSP: 2, Unprotected LSP: 0
    2 Jul 14 14:49:40 New bypass Bypass->10.0.12.14
    1 Jul 14 14:49:34 New bypass Bypass->10.0.12.14->10.0.24.2
  Bypass: Bypass->10.0.12.14, State: Up, Type: LP, LSP: 0, Backup: 0
    3 Jul 14 14:49:42 Record Route: 10.0.17.14 10.0.27.1
    2 Jul 14 14:49:42 Up
    1 Jul 14 14:49:42 CSPF: computation result accepted
  Bypass: Bypass->10.0.12.14->10.0.24.2, State: Up, Type: NP, LSP: 2, Backup: 0
    4 Jul 14 14:50:04 Record Route: 10.0.17.14 10.0.79.2 10.0.59.1 10.0.45.1
    3 Jul 14 14:50:04 Up
    2 Jul 14 14:50:04 CSPF: computation result accepted
    1 Jul 14 14:49:34 CSPF failed: no route toward 10.0.24.2
[...Output truncated...]
```

**Meaning**    Sample output from R1 for the **show rsvp interface extensive** command shows more detailed information about the activity on all RSVP interfaces (3). However, only output for **fe-0/1/0.0** is shown. Protection is enabled (**Protection: On**), with two bypass paths (**Bypass: 2**) protecting two LSPs (**Protected LSP: 2**). All LSPs are protected, as indicated by the **Unprotected LSP: 0** field. The first bypass **Bypass->10.0.12.14** is a link protection bypass path (**Type: LP**), protecting the link between R1 and R2 **fe-0/1/0.0**. The second bypass path **10.0.12.14->10.0.24.2** is a node-link protected LSP, avoiding R2 in case of node failure.

```

Sample Output user@R1> show rsvp session detail
Ingress RSVP: 2 sessions

192.168.4.1
  From: 192.168.1.1, LSPstate: Up, ActiveRoute: 0
  LSPname: Bypass->10.0.12.14->10.0.24.2
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 102000
  Resv style: 1 SE, Label in: -, Label out: 102000
  Time left: -, Since: Tue Jul 11 14:30:53 2006
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 60120 protocol 0
  Type: Bypass LSP
  Number of data route tunnel through: 2
  Number of RSVP session tunnel through: 0
  PATH rcvfrom: localclient
  Adspec: sent MTU 1500
  Path MTU: received 1500
  PATH sentto: 10.0.17.14 (fe-0/1/1.0) 336 pkts
  RESV rcvfrom: 10.0.17.14 (fe-0/1/1.0) 310 pkts
  Explct route: 10.0.17.14 10.0.79.2 10.0.59.1 10.0.45.1
  Record route: <self> 10.0.17.14 10.0.79.2 10.0.59.1 10.0.45.1

192.168.5.1
  From: 192.168.1.1, LSPstate: Up, ActiveRoute: 0
  LSPname: lsp2-r1-to-r5, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 101872
  Resv style: 1 SE, Label in: -, Label out: 101872
  Time left: -, Since: Tue Jul 11 14:28:28 2006
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 2 receiver 60118 protocol 0
  Node/Link protection desired
  Type: Node/Link protected LSP
  PATH rcvfrom: localclient
  Adspec: sent MTU 1500
  Path MTU: received 1500
  PATH sentto: 10.0.12.14 (fe-0/1/0.0) 344 pkts
  RESV rcvfrom: 10.0.12.14 (fe-0/1/0.0) 349 pkts
  Explct route: 10.0.12.14 10.0.24.2 10.0.45.2
  Record route: <self> 10.0.12.14 10.0.24.2 10.0.45.2
Total 2 displayed, Up 2, Down 0

Egress RSVP: 1 sessions

192.168.1.1
  From: 192.168.5.1, LSPstate: Up, ActiveRoute: 0
  LSPname: r5-to-r1, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: -
  Resv style: 1 FF, Label in: 3, Label out: -
  Time left: 147, Since: Tue Jul 11 14:28:36 2006
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 29228 protocol 0
  PATH rcvfrom: 10.0.12.14 (fe-0/1/0.0) 348 pkts
  Adspec: received MTU 1500
  PATH sentto: localclient
  RESV rcvfrom: localclient
  Record route: 10.0.45.2 10.0.24.2 10.0.12.14 <self>
Total 1 displayed, Up 1, Down 0

```

**Transit RSVP: 2 sessions**

```

192.168.0.1
  From: 192.168.6.1, LSPstate: Up, ActiveRoute: 0
  LSPname: lsp1-r6-to-r0, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 101952
  Resv style: 1 SE, Label in: 100464, Label out: 101952
  Time left: 134, Since: Tue Jul 11 14:31:38 2006
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 11131 protocol 0
  Node/Link protection desired
  Type: Node/Link protected LSP
  PATH rcvfrom: 10.0.16.2 (so-0/0/3.0) 488 pkts
  Adspec: received MTU 1500 sent MTU 1500
  PATH sentto: 10.0.12.14 (fe-0/1/0.0) 339 pkts
  RESV rcvfrom: 10.0.12.14 (fe-0/1/0.0) 343 pkts
  Explct route: 10.0.12.14 10.0.24.2 10.0.45.2 10.0.50.2
  Record route: 10.0.16.2 <self> 10.0.12.14 10.0.24.2 10.0.45.2 10.0.50.2

192.168.6.1
  From: 192.168.0.1, LSPstate: Up, ActiveRoute: 0
  LSPname: r0-to-t6, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 3
  Resv style: 1 FF, Label in: 100448, Label out: 3
  Time left: 158, Since: Tue Jul 11 14:31:36 2006
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 23481 protocol 0
  PATH rcvfrom: 10.0.12.14 (fe-0/1/0.0) 344 pkts
  Adspec: received MTU 1500 sent MTU 1500
  PATH sentto: 10.0.16.2 (so-0/0/3.0) 337 pkts
  RESV rcvfrom: 10.0.16.2 (so-0/0/3.0) 310 pkts
  Explct route: 10.0.16.2
  Record route: 10.0.50.2 10.0.45.2 10.0.24.2 10.0.12.14 <self> 10.0.16.2
Total 2 displayed, Up 2, Down 0

```

**Meaning** Sample output from **R1** shows detailed information about the RSVP sessions active on **R1**. All sessions are up, with two ingress sessions, one egress session, and two transit sessions.

Within the ingress section, the first session is a bypass path, as indicated by the **Type: Bypass LSP** field; and the second session is a protected LSP (**lsp2-r1-to-r5**) originating on **R1**, as indicated by the **Type: Node/Link protected LSP** field.

**Conclusion** Multiprotocol Label Switching (MPLS) label-switched path (LSP) link protection and node-link protection are facility-based methods used to reduce the amount of time needed to reroute LSP traffic. These protection methods are often compared to fast reroute—the other Junos OS LSP protection method.

While fast reroute protects LSPs on a one-to-one basis, link protection and node-link protection protect multiple LSPs by using a single, logical bypass LSP. Link protection provides robust backup support for a link, node-link protection bypasses a node or a link, and both types of protection are designed to interoperate with other vendor equipment.

Such functionality makes link protection and node-link protection excellent choices for scalability, redundancy, and performance in MPLS-enabled networks.

**Related Information** For additional information about MPLS fast reroute and MPLS protection methods, see the following:

- *Junos Feature Guide*
- *Junos MPLS Applications Configuration Guide*
- Semeria, Chuck. *RSVP Signaling Extensions for MPLS Traffic Engineering*. White paper. 2002
- Semeria, Chuck. *IP Dependability: Network Link and Node Protection*. White paper. 2002
- RFC 4090, *Fast Reroute Extensions to RSVP-TE for LSP Tunnels*

---

## Node-Link Protection Overview


Node-link protection (many-to-one or facility backup) extends the capabilities of link protection and provides slightly different protection from fast reroute. While link protection is useful for selecting an alternate path to the same router when a specific link fails, and fast reroute protects interfaces or nodes along the entire path of an LSP, node-link protection establishes a bypass path that avoids a particular node in the LSP path.

When you enable node-link protection for an LSP, you must also enable link protection on all RSVP interfaces in the path. Once enabled, the following types of bypass paths are established:

- Next-hop bypass LSP—Provides an alternate route for an LSP to reach a neighboring router. This type of bypass path is established when you enable either node-link protection or link protection.
- Next-next-hop bypass LSP—Provides an alternate route for an LSP through a neighboring router en route to the destination router. This type of bypass path is established exclusively when node-link protection is configured.

[Figure 91 on page 904](#) illustrates the example MPLS network topology used in this topic. The example network uses OSPF as the interior gateway protocol (IGP) and a policy to create traffic.

Figure 91: Node-Link Protection

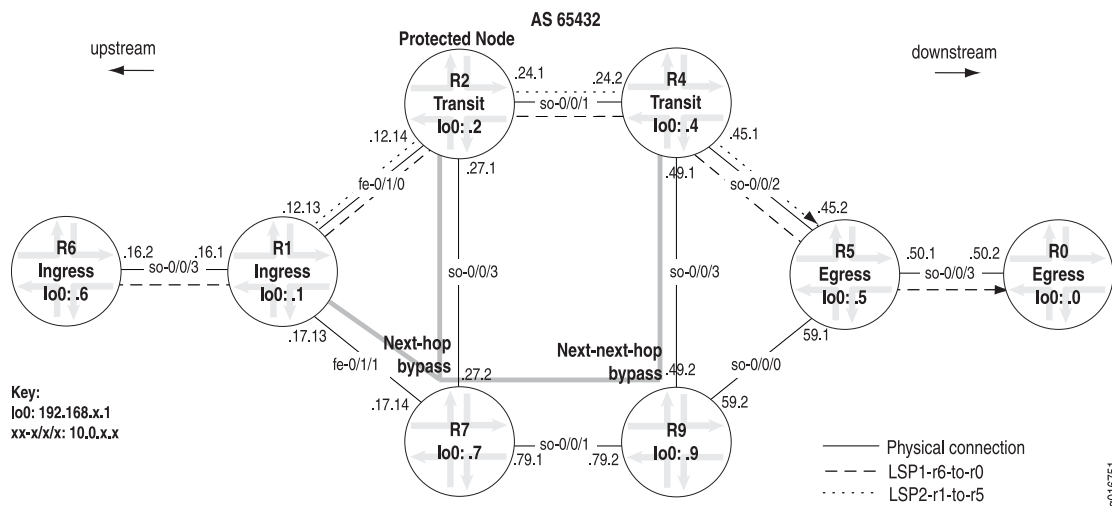

The MPLS network in [Figure 91 on page 904](#) illustrates a router-only network that consists of unidirectional LSPs between R1 and R5, (*lsp2-r1-to-r5*) and between R6 and R0 (*lsp1-r6-to-r0*). Both LSPs have strict paths configured that go through interface *fe-0/1/0*.

In the network shown in [Figure 91 on page 904](#), both types of bypass paths are preestablished around the protected node (R2). A next-hop bypass path avoids interface *fe-0/1/0* by going through R7, and a next-next-hop bypass path avoids R2 altogether by going through R7 and R9 to R4. Both bypass paths are shared by all protected LSPs traversing the failed link or node (many LSPs protected by one bypass path).

Node-link protection (many-to-one or facility backup) allows a router immediately upstream from a node failure to use an alternate node to forward traffic to its downstream neighbor. This is accomplished by preestablishing a bypass path that is shared by all protected LSPs traversing the failed link.

When an outage occurs, the router immediately upstream from the outage switches protected traffic to the bypass node, and then signals the failure to the ingress router. Like fast reroute, node-link protection provides local repair, restoring connectivity faster than the ingress router can establish a standby secondary path or signal a new primary LSP.

Node-link protection is appropriate in the following situations:

- Protection of the downstream link and node is required.
- The number of LSPs to be protected is large.
- Satisfying path selection criteria (priority, bandwidth, and link coloring) for bypass paths is less critical.
- Control at the granularity of individual LSPs is not required.

## Verify That Link Protection Is Up

**Purpose** When you verify link protection, you must check that the bypass LSP is up. You can also check the number of LSPs protected by the bypass. In the network shown in [Figure 92 on page 909](#), a bypass path should be up to protect the link between **R1** and **R2**, or next-hop **10.0.12.14**, and the two LSPs traversing the link, **lsp2-r1-to-r5** and **lsp1-r6-to-r0**.

**Action** To verify link protection (many-to-one backup), enter the following Junos OS CLI operational mode commands on the ingress router:

```
user@host> show mpls lsp extensive
user@host> show rsvp session detail
user@host> show rsvp interface
```

## Sample Output

```
user@R1> show mpls lsp extensive | no-more
Ingress LSP: 1 sessions

192.168.5.1
  From: 192.168.1.1, State: Up, ActiveRoute: 0, LSPname: lsp2-r1-to-r5
  ActivePath: via-r2 (primary)
  Link protection desired
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary via-r2 State: Up
    SmartOptimizeTimer: 180
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 3)
    10.0.12.14 S 10.0.24.2 S 10.0.45.2 S
      Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):
        10.0.12.14(Label=101264) 10.0.24.2(Label=100736) 10.0.45.2(Label=3)
        6 Jun 16 14:06:33 Link-protection Up
        5 Jun 16 14:05:39 Selected as active path
        4 Jun 16 14:05:39 Record Route: 10.0.12.14(Label=101264)
        10.0.24.2(Label=100736) 10.0.45.2(Label=3)
        3 Jun 16 14:05:39 Up
        2 Jun 16 14:05:39 Originate Call
        1 Jun 16 14:05:39 CSPF: computation result accepted
      Created: Fri Jun 16 14:05:38 2006
    Total 1 displayed, Up 1, Down 0

[...Output truncated...]

Transit LSP: 2 sessions

192.168.0.1
  From: 192.168.6.1, LSPstate: Up, ActiveRoute: 0
  LSPname: lsp1-r6-to-r0, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 101296
  Resv style: 1 SE, Label in: 100192, Label out: 101296
  Time left: 116, Since: Mon Jun 19 10:26:32 2006
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 58739 protocol 0
  Link protection desired
  Type: Link protected LSP, using Bypass->10.0.12.14
    1 Jun 19 10:26:32 Link protection up, using Bypass->10.0.12.14
  PATH rcvfrom: 10.0.16.2 (so-0/0/3.0) 579 pkts
```

```
Adspec: received MTU 1500 sent MTU 1500
PATH sentto: 10.0.12.14 (fe-0/1/0.0) 474 pkts
RESV rcvfrom: 10.0.12.14 (fe-0/1/0.0) 501 pkts
Explct route: 10.0.12.14 10.0.24.2 10.0.45.2 10.0.50.2
Record route: 10.0.16.2 <self> 10.0.12.14 10.0.24.2 10.0.45.2 10.0.50.2
[...Output truncated...]
```

**Meaning** The sample output from ingress router **R1** shows that **lsp2-r1-to-r5** and **lsp1-r6-to-r0** have link protection up, and both LSPs are using the bypass path, **10.0.12.14**. However, the **show mpls lsp** command does not list the bypass path. For information about the bypass path, use the **show rsvp session** command.



```

Sample Output user@R1> show rsvp session detail
Ingress RSVP: 2 sessions
192.168.2.1
  From: 192.168.1.1, LSPstate: Up, ActiveRoute: 0
  LSPname: Bypass->10.0.12.14
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 101456
  Resv style: 1 SE, Label in: -, Label out: 101456
  Time left: -, Since: Fri May 26 18:38:09 2006
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 18709 protocol 0
  Type: Bypass LSP
    Number of data route tunnel through: 2
    Number of RSVP session tunnel through: 0
  PATH rcvfrom: localclient
  Adspec: sent MTU 1500
  Path MTU: received 1500
  PATH sentto: 10.0.17.14 (fe-0/1/1.0) 51939 pkts
  RESV rcvfrom: 10.0.17.14 (fe-0/1/1.0) 55095 pkts
  Explct route: 10.0.17.14 10.0.27.1
  Record route: <self> 10.0.17.14 10.0.27.1

192.168.5.1
  From: 192.168.1.1, LSPstate: Up, ActiveRoute: 0
  LSPname: lsp2-r1-to-r5, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 101264
  Resv style: 1 SE, Label in: -, Label out: 101264
  Time left: -, Since: Fri Jun 16 14:05:39 2006
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 18724 protocol 0
  Link protection desired
  Type: Link protected LSP
  PATH rcvfrom: localclient
  Adspec: sent MTU 1500
  Path MTU: received 1500
  PATH sentto: 10.0.12.14 (fe-0/1/0.0) 8477 pkts
  RESV rcvfrom: 10.0.12.14 (fe-0/1/0.0) 8992 pkts
  Explct route: 10.0.12.14 10.0.24.2 10.0.45.2
  Record route: <self> 10.0.12.14 10.0.24.2 10.0.45.2
Total 2 displayed, Up 2, Down 0

Egress RSVP: 1 sessions
192.168.1.1
  From: 192.168.5.1, LSPstate: Up, ActiveRoute: 0
  LSPname: r5-to-r1, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: -
  Resv style: 1 FF, Label in: 3, Label out: -
  Time left: 159, Since: Mon May 22 22:08:16 2006
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 64449 protocol 0
  PATH rcvfrom: 10.0.17.14 (fe-0/1/1.0) 63145 pkts
  Adspec: received MTU 1500
  PATH sentto: localclient
  RESV rcvfrom: localclient
  Record route: 10.0.59.1 10.0.79.2 10.0.17.14 <self>
Total 1 displayed, Up 1, Down 0
Transit RSVP: 2 sessions

```

```

192.168.0.1
  From: 192.168.6.1, LSPstate: Up, ActiveRoute: 0
  LSPname: lsp1-r6-to-r0, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 101296
  Resv style: 1 SE, Label in: 100192, Label out: 101296
  Time left: 129, Since: Mon Jun 19 10:26:32 2006
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 58739 protocol 0
  Link protection desired
  Type: Link protected LSP
  PATH rcvfrom: 10.0.16.2 (so-0/0/3.0) 3128 pkts
  Adspec: received MTU 1500 sent MTU 1500
  PATH sentto: 10.0.12.14 (fe-0/1/0.0) 2533 pkts
  RESV rcvfrom: 10.0.12.14 (fe-0/1/0.0) 2685 pkts
  Explct route: 10.0.12.14 10.0.24.2 10.0.45.2 10.0.50.2
  Record route: 10.0.16.2 <self> 10.0.12.14 10.0.24.2 10.0.45.2 10.0.50.2

192.168.6.1
  From: 192.168.0.1, LSPstate: Up, ActiveRoute: 0
  LSPname: r0-to-r6, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 3
  Resv style: 1 FF, Label in: 100128, Label out: 3
  Time left: 143, Since: Thu May 25 12:30:26 2006
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 4111 protocol 0
  PATH rcvfrom: 10.0.17.14 (fe-0/1/1.0) 57716 pkts
  Adspec: received MTU 1500 sent MTU 1500
  PATH sentto: 10.0.16.2 (so-0/0/3.0) 54524 pkts
  RESV rcvfrom: 10.0.16.2 (so-0/0/3.0) 50534 pkts
  Explct route: 10.0.16.2
  Record route: 10.0.50.2 10.0.59.1 10.0.79.2 10.0.17.14 <self> 10.0.16.2
Total 2 displayed, Up 2, Down 0

```

**Meaning** The sample output from ingress router **R1** shows the ingress, egress, and transit LSPs for **R1**. Some information is similar to that found in the **show mpls lsp** command. However, because link protection is an RSVP feature, information about bypass paths is provided. The bypass path appears as a separate RSVP ingress session for the protected interface, as indicated by the **Type** field.

The bypass path name is automatically generated. By default, the name appears as **Bypass > interface-address**, where the interface address is the next downstream router's interface (**10.0.12.14**). The explicit route **10.0.17.14 10.0.27.1** for the session shows **R7** as the transit node and **R2** as the egress node.

Within the ingress RSVP section of the output, the LSP originating at **R1** (**lsp2-r1-to-r5**) is shown requesting link protection. Since a bypass path is in place to protect the downstream link, **lsp2-r1-to-r5** is associated with the bypass, as indicated by the **Link protected LSP** field.

The egress section of the output shows the return LSP **r5-to-r1**, which is not protected.

The transit section of the output shows link protection requested by **lsp1-r6-to-r0**. Since a bypass path is in place to protect the downstream link, **lsp1-r6-to-r0** is associated with the bypass, as indicated by the **Link protected LSP** field. Also included in the transit section of the output is the return LSP **r0-to-r6**, which is not protected.

**Sample Output** user@R1> show rsvp interface  
RSVP interface: 4 active


Interface	State	Active resv	Subscr-ption	Static BW	Available BW	Reserved BW	Highwater mark
fe-0/1/0.0	Up	2	100%	100Mbps	100Mbps	0bps	35Mbps
fe-0/1/1.0	Up	1	100%	100Mbps	100Mbps	0bps	0bps
fe-0/1/2.0	Up	0	100%	100Mbps	100Mbps	0bps	0bps
so-0/0/3.0	Up	1	100%	155.52Mbps	155.52Mbps	0bps	0bps

**Meaning** The sample output from ingress router **R1** shows the number of LSPs going through the interfaces configured on **R1**. The **Active resv** field shows the number of LSPs for each interface. For example, interface **fe-0/1/0.0** between **R1** and **R2** has two active reservations, **lsp1-r6-to-r0** and **lsp2-r1-to-r5**; interface **fe-0/1/1.0** between **R1** and **R7** has one, the bypass (**10.0.12.14**); interface **fe-0/1/2.0** between **R6** and **R1** has no LSP reservations; and interface **so-0/0/3.0** between **R6** and **R1** has one LSP reservation, **lsp1-r6-to-r0**.

## Many-to-One Link Protection (Facility Backup) Overview

Many-to-one (facility backup) is based on interface rather than on LSP. While fast reroute protects interfaces or nodes along the entire path of a LSP, many-to-one protection can be applied on interfaces as needed, as shown in [Figure 92 on page 909](#). In [Figure 92 on page 909](#), a bypass path is set up around the link to be protected (**10.0.12.14**) using an alternate interface to forward traffic. The bypass path is shared by all protected LSPs traversing the failed link (many LSPs protected by one bypass path).

**Figure 92: Many-to-One or Link Protection**

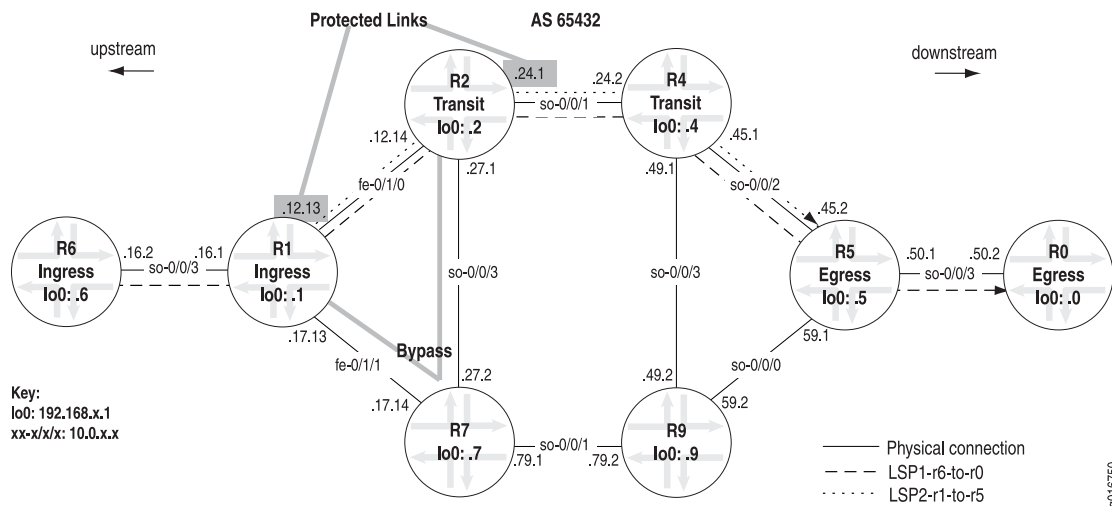

In [Figure 92 on page 909](#), two LSPs (**lsp1-r6-to-r0** and **lsp2-r1-to-r5**) are protected by one preestablished bypass path from **R1** to **R2** through **R7**. Both LSPs have strict paths configured that go through interface **fe-0/1/0**. On **R1**, the interface **10.0.12.13** has link protection configured that protects the next hop **10.0.12.14**.

Link protection (many-to-one or facility backup) allows a router immediately upstream from a link failure to use an alternate interface to forward traffic to its downstream

neighbor. This is accomplished by preestablishing a bypass path that is shared by all protected LSPs traversing the failed link. A single bypass path can safeguard a set of protected LSPs. When an outage occurs, the router immediately upstream from the link outage switches protected traffic to the bypass link, then signals the link failure to the ingress router.

Like fast reroute, link protection provides local repair and restores connectivity faster than the ingress router switching traffic to a standby secondary path. However, unlike fast reroute, link protection does not provide protection against the failure of the downstream neighbor.

Link protection is appropriate in the following situations:

- The number of LSPs to be protected is large.
- Satisfying path selection criteria (priority, bandwidth, and link coloring) for bypass paths is less critical.
- Control at the granularity of individual LSPs is not required.

---

## Verify One-to-One Backup

**Purpose** You can verify that one-to-one backup is established by examining the ingress router and the other routers in the network.

**Action** To verify one-to-one backup, enter the following Junos OS CLI operational mode commands:

```
user@host> show mpls lsp ingress extensive
user@host> show rsvp session
```

## Sample Output

The following sample output is from the ingress router **R1**:

```
user@R1> show mpls lsp ingress extensive
Ingress LSP: 1 sessions

192.168.5.1
  From: 192.168.1.1, State: Up, ActiveRoute: 0, LSPname: r1-to-r5
  ActivePath: via-r2 (primary)
  FastReroute desired
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary via-r2 State: Up
  SmartOptimizeTimer: 180
  Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 3)
  10.0.12.14 S 10.0.24.2 S 10.0.45.2 S
  Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node
  10=SoftPreempt):
    10.0.12.14(flag=9) 10.0.24.2(flag=1) 10.0.45.2
    8 May 11 14:51:46 Fast-reroute Detour Up
    7 May 11 14:50:55 Record Route: 10.0.12.14(flag=9) 10.0.24.2(flag=1) 10.0.45.2
    6 May 11 14:50:55 Record Route: 10.0.12.14(flag=9) 10.0.24.2 10.0.45.2
    5 May 11 14:50:52 Selected as active path
    4 May 11 14:50:52 Record Route: 10.0.12.14 10.0.24.2 10.0.45.2
    3 May 11 14:50:52 Up
```

```
2 May 11 14:50:52 Originate Call
1 May 11 14:50:52 CSPF: computation result accepted
Created: Thu May 11 14:50:52 2006
Total 1 displayed, Up 1, Down 0
```

**Meaning** The sample output from **R1** shows that the **FastReroute desired** object was included in the Path messages for the LSP, allowing **R1** to select the active path for the LSP and establish a detour path to avoid **R2**.

In line 8, **Fast-reroute Detour Up** shows that the detour is operational. Lines 6 and 7 indicate that transit routers **R2** and **R4** have established their detour paths.

**R2, 10.0.12.14**, includes (**flag=9**), indicating that node protection is available for the downstream node and link. **R4, 10.0.24.2**, includes (**flag=1**), indicating that link protection is available for the next downstream link. In this case, **R4** can protect only the downstream link because the node is the egress router **R5**, which cannot be protected. For more information about flags, see the *Junos Feature Guide*.

The output for the **show mpls lsp extensive** command does not show the actual path of the detour. To see the actual links used by the detour paths, you must use the **show rsvp session ingress detail** command.

**Sample Output** The following sample output is from the ingress router **R1** in the network shown in [Figure 111 on page 1115](#).

```
user@R1> show rsvp session ingress detail
Ingress RSVP: 1 sessions

192.168.5.1
  From: 192.168.1.1, LSPstate: Up, ActiveRoute: 0
  LSPname: r1-to-r5, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 100848
  Resv style: 1 FF, Label in: -, Label out: 100848
  Time left: -, Since: Thu May 11 14:17:15 2006
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 9228 protocol 0
  FastReroute desired
  PATH rcvfrom: localclient
  Adspec: sent MTU 1500
  Path MTU: received 1500
  PATH sentto: 10.0.12.14 (fe-0/1/0.0) 35 pkts
  RESV rcvfrom: 10.0.12.14 (fe-0/1/0.0) 25 pkts
  Explt route: 10.0.12.14 10.0.24.2 10.0.45.2
  Record route: <self> 10.0.12.14 10.0.24.2 10.0.45.2
  Detour is Up
  Detour Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Detour adspec: sent MTU 1500
  Path MTU: received 1500
  Detour PATH sentto: 10.0.17.14 (fe-0/1/1.0) 23 pkts
  Detour RESV rcvfrom: 10.0.17.14 (fe-0/1/1.0) 20 pkts
  Detour Explt route: 10.0.17.14 10.0.79.2 10.0.59.1
  Detour Record route: <self> 10.0.17.14 10.0.79.2 10.0.59.1
  Detour Label out: 100848
Total 1 displayed, Up 1, Down 0
```

**Meaning** The sample output from **R1** shows the RSVP session of the main LSP. The detour path is established, **Detour is Up**. The physical path of the detour is displayed in **Detour Explt route**. The detour path uses **R7** and **R9** as transit routers to reach **R5**, the egress router.

**Sample Output** The following sample output is from the first transit router R2 in the network shown in [Figure 111 on page 1115](#):

```

user@R2> show rsvp session transit detail
Transit RSVP: 1 sessions

192.168.5.1
  From: 192.168.1.1, LSPstate: Up, ActiveRoute: 1
  LSPname: r1-to-r5, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 100448
  Resv style: 1 FF, Label in: 100720, Label out: 100448
  Time left: 126, Since: Wed May 10 16:12:21 2006
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 5 receiver 9216 protocol 0
  FastReroute desired
  PATH rcvfrom: 10.0.12.13 (fe-0/1/0.0) 173 pkts
  Adspec: received MTU 1500 sent MTU 1500
  PATH sentto: 10.0.24.2 (so-0/0/1.0) 171 pkts
  RESV rcvfrom: 10.0.24.2 (so-0/0/1.0) 169 pkts
  Explct route: 10.0.24.2 10.0.45.2
  Record route: 10.0.12.13 <self> 10.0.24.2 10.0.45.2
  Detour is Up
  Detour Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Detour adspec: received MTU 1500 sent MTU 1500
  Path MTU: received 1500
  Detour PATH sentto: 10.0.27.2 (so-0/0/3.0) 169 pkts
  Detour RESV rcvfrom: 10.0.27.2 (so-0/0/3.0) 167 pkts
  Detour Explct route: 10.0.27.2 10.0.79.2 10.0.59.1
  Detour Record route: 10.0.12.13 <self> 10.0.27.2 10.0.79.2 10.0.59.1
  Detour Label out: 100736
Total 1 displayed, Up 1, Down 0

```

**Meaning** The sample output from R2 shows the detour is established (**Detour is Up**) and avoids R4, and the link connecting R4 and R5 (10.0.45.2). The detour path is through R7 (10.0.27.2) and R9 (10.0.79.2) to R5 (10.0.59.1), which is different from the explicit route for the detour from R1. R1 has the detour passing through the 10.0.17.14 link on R7, while R1 is using the 10.0.27.2 link. Both detours merge at R9 through the 10.0.79.2 link to R5 (10.0.59.1).

**Sample Output** The following sample output is from the second transit router R4 in the network shown in [Figure 111 on page 1115](#):

```
user@R4> show rsvp session transit detail
Transit RSVP: 1 sessions

192.168.5.1
  From: 192.168.1.1, LSPstate: Up, ActiveRoute: 1
  LSPname: r1-to-r5, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 3
  Resv style: 1 FF, Label in: 100448, Label out: 3
  Time left: 155, Since: Wed May 10 16:15:38 2006
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 5 receiver 9216 protocol 0
  FastReroute desired
  PATH rcvfrom: 10.0.24.1 (so-0/0/1.0) 178 pkts
  Adspec: received MTU 1500 sent MTU 1500
  PATH sentto: 10.0.45.2 (so-0/0/2.0) 178 pkts
  RESV rcvfrom: 10.0.45.2 (so-0/0/2.0) 175 pkts
  Explct route: 10.0.45.2
  Record route: 10.0.12.13 10.0.24.1 <self> 10.0.45.2
  Detour is Up
  Detour Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Detour adspec: received MTU 1500 sent MTU 1500
  Path MTU: received 1500
  Detour PATH sentto: 10.0.49.2 (so-0/0/3.0) 176 pkts
  Detour RESV rcvfrom: 10.0.49.2 (so-0/0/3.0) 175 pkts
  Detour Explct route: 10.0.49.2 10.0.59.1
  Detour Record route: 10.0.12.13 10.0.24.1 <self> 10.0.49.2 10.0.59.1
  Detour Label out: 100352
Total 1 displayed, Up 1, Down 0
```

**Meaning** The sample output from R4 shows the detour is established (**Detour is Up**) and avoids the link connecting R4 and R5 (10.0.45.2). The detour path is through R9 (10.0.49.2) to R5 (10.0.59.1). Some of the information is similar to that found in the output for R1 and R2. However, the explicit route for the detour is different, going through the link connecting R4 and R9 (so-0/0/3 or 10.0.49.2).



**Sample Output** The following sample output is from **R7**, which is used in the detour path in the network shown in [Figure 111 on page 1115](#):

```
user@R7> show rsvp session transit detail
Transit RSVP: 1 sessions, 1 detours

192.168.5.1
  From: 192.168.1.1, LSPstate: Up, ActiveRoute: 1
  LSPname: r1-to-r5, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 100368
  Resv style: 1 FF, Label in: 100736, Label out: 100368
  Time left: 135, Since: Wed May 10 16:14:42 2006
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 5 receiver 9216 protocol 0
  Detour branch from 10.0.27.1, to skip 192.168.4.1, Up
    Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
    Adspec: received MTU 1500
    Path MTU: received 0
    PATH rcvfrom: 10.0.27.1 (so-0/0/3.0) 179 pkts
    Adspec: received MTU 1500 sent MTU 1500
    PATH sentto: 10.0.79.2 (so-0/0/1.0) 177 pkts
    RESV rcvfrom: 10.0.79.2 (so-0/0/1.0) 179 pkts
    Explct route: 10.0.79.2 10.0.59.1
    Record route: 10.0.12.13 10.0.27.1 <self> 10.0.79.2 10.0.59.1
    Label in: 100736, Label out: 100368
  Detour branch from 10.0.17.13, to skip 192.168.2.1, Up
    Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
    Adspec: received MTU 1500
    Path MTU: received 0
    PATH rcvfrom: 10.0.17.13 (fe-0/1/1.0) 179 pkts
    Adspec: received MTU 1500
    PATH sentto: 10.0.79.2 (so-0/0/1.0) 0 pkts
    RESV rcvfrom: 10.0.79.2 (so-0/0/1.0) 0 pkts
    Explct route: 10.0.79.2 10.0.59.1
    Record route: 10.0.17.13 <self> 10.0.79.2 10.0.59.1
    Label in: 100752, Label out: 100368
Total 1 displayed, Up 1, Down 0
```

**Meaning** The sample output from **R7** shows the same information as for a regular transit router used in the primary path of the LSP: the ingress address (**192.168.1.1**), the egress address (**192.168.5.1**), and the name of the LSP (**r1-to-r5**). Two detour paths are displayed; the first to avoid **R4** (**192.168.4.1**) and the second to avoid **R2** (**192.168.2.1**). Because **R7** is used as a transit router by **R2** and **R4**, **R7** can merge the detour paths together as indicated by the identical **Label out** value (**100368**) for both detour paths. Whether **R7** receives traffic from **R4** with a label value of **100736** or from **R2** with a label value of **100752**, **R7** forwards the packet to **R5** with a label value of **100368**.

**Sample Output** The following sample output is from R9, which is a router used in the detour path in the network shown in [Figure 111 on page 1115](#):

```

user@R9> show rsvp session transit detail
Transit RSVP: 1 sessions, 1 detours

192.168.5.1
  From: 192.168.1.1, LSPstate: Up, ActiveRoute: 1
  LSPname: r1-to-r5, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 3
  Resv style: 1 FF, Label in: 100352, Label out: 3
  Time left: 141, Since: Wed May 10 16:16:40 2006
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 5 receiver 9216 protocol 0
  Detour branch from 10.0.49.1, to skip 192.168.5.1, Up
    Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
    Adspec: received MTU 1500
    Path MTU: received 0
    PATH rcvfrom: 10.0.49.1 (so-0/0/3.0) 183 pkts
    Adspec: received MTU 1500 sent MTU 1500
    PATH sentto: 10.0.59.1 (so-0/0/0.0) 182 pkts
    RESV rcvfrom: 10.0.59.1 (so-0/0/0.0) 183 pkts
    Explct route: 10.0.59.1
    Record route: 10.0.12.13 10.0.24.1 10.0.49.1 <self> 10.0.59.1
    Label in: 100352, Label out: 3
  Detour branch from 10.0.27.1, to skip 192.168.4.1, Up
    Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
    Adspec: received MTU 1500
    Path MTU: received 0
  Detour branch from 10.0.17.13, to skip 192.168.2.1, Up
    Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
    Adspec: received MTU 1500
    Path MTU: received 0
    PATH rcvfrom: 10.0.79.1 (so-0/0/1.0) 181 pkts
    Adspec: received MTU 1500
    PATH sentto: 10.0.59.1 (so-0/0/0.0) 0 pkts
    RESV rcvfrom: 10.0.59.1 (so-0/0/0.0) 0 pkts
    Explct route: 10.0.59.1
    Record route: 10.0.12.13 10.0.27.1 10.0.79.1 <self> 10.0.59.1
    Label in: 100368, Label out: 3
Total 1 displayed, Up 1, Down 0

```

**Meaning** The sample output from R9 shows that R9 is the penultimate router for the detour path, the explicit route includes only the egress link address (10.0.59.1), and the Label out value (3) indicates that R9 has performed penultimate-hop label popping. Also, the detour branch from 10.0.27.1 does not include path information because R7 has merged the detour paths from R2 and R4. Notice that the Label out value in the detour branch from 10.0.17.13 is 100368, the same value as the Label out value on R7.

**Sample Output** The following sample output is from the egress router R5 in the network shown in [Figure 111 on page 1115](#):

```
user@R5> show rsvp session egress detail
Egress RSVP: 1 sessions, 1 detours

192.168.5.1
  From: 192.168.1.1, LSPstate: Up, ActiveRoute: 0
  LSPname: r1-to-r5, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: -
  Resv style: 1 FF, Label in: 3, Label out: -
  Time left: 119, Since: Thu May 11 14:44:31 2006
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 9230 protocol 0
  FastReroute desired
  PATH rcvfrom: 10.0.45.1 (so-0/0/2.0) 258 pkts
  Adspec: received MTU 1500
  PATH sentto: localclient
  RESV rcvfrom: localclient
  Record route: 10.0.12.13 10.0.24.1 10.0.45.1 <self>
  Detour branch from 10.0.49.1, to skip 192.168.5.1, Up
    Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
    Adspec: received MTU 1500
    Path MTU: received 0
  Detour branch from 10.0.27.1, to skip 192.168.4.1, Up
    Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
    Adspec: received MTU 1500
    Path MTU: received 0
  Detour branch from 10.0.17.13, to skip 192.168.2.1, Up
    Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
    Adspec: received MTU 1500
    Path MTU: received 0
  PATH rcvfrom: 10.0.59.2 (so-0/0/0.0) 254 pkts
  Adspec: received MTU 1500
  PATH sentto: localclient
  RESV rcvfrom: localclient
  Record route: 10.0.12.13 10.0.24.1 10.0.49.1 10.0.59.2 <self>
  Label in: 3, Label out: -
Total 1 displayed, Up 1, Down 0
```

**Meaning** The sample output from R5 shows the main LSP in the **Record route** field and the detours through the network.

## Verify That the Primary Path Is Operational

**Purpose** Primary paths must always be used in the network if they are available, therefore an LSP always moves back to the primary path after a failure, unless the configuration is adjusted. For more information on adjusting the configuration to prevent a failed primary path from reestablishing, see [“Preventing Use of a Path That Previously Failed” on page 918](#).

**Action** To verify that the primary path is operational, enter the following Junos OS command-line interface (CLI) operational mode commands:

```
user@host> show mpls lsp extensive ingress
user@host> show rsvp interface
```

## Sample Output 1

```

user@R1> show mpls lsp extensive ingress
Ingress LSP: 1 sessions

192.168.5.1
  From: 192.168.1.1, State: Up, ActiveRoute: 0, LSPname: r1-to-r5
  ActivePath: via-r2 (primary)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary via-r2          State: Up
    Priorities: 6 6
    Bandwidth: 35Mbps
    SmartOptimizeTimer: 180
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 11)
  10.0.12.14 S 10.0.24.2 S
    Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node
  10=SoftPreempt):
      10.0.12.14 10.0.24.2
    5 Apr 29 14:40:43 Selected as active path
    4 Apr 29 14:40:43 Record Route: 10.0.12.14 10.0.24.2
    3 Apr 29 14:40:43 Up
    2 Apr 29 14:40:43 Originate Call
    1 Apr 29 14:40:43 CSPF: computation result accepted
  Standby via-r7          State: Dn
    SmartOptimizeTimer: 180
    No computed ERO.
  Created: Sat Apr 29 14:40:43 2006
Total 1 displayed, Up 1, Down 0

```

## Sample Output 2

```

user@R1> show rsvp interface
RSVP interface: 3 active

```

Interface	State	Active resv	Subscr- ption	Static BW	Available BW	Reserved BW	Highwater mark
fe-0/1/0.0	Up	2	100%	100Mbps	100Mbps	0bps	0bps
fe-0/1/1.0	Up	1	100%	100Mbps	100Mbps	0bps	0bps
so-0/0/3.0	Up	1	100%	155.52Mbps	155.52Mbps	0bps	0bps

**Meaning** Sample output 1 shows that the LSP is operational and is using the primary path (**via-r2**) with **R2 (10.0.12.14)** and **R4 (10.0.24.2)** as transit routers. The priority values are the same for setup and hold, **6 6**. Priority 0 is the highest (best) priority and 7 is the lowest (worst) priority. The Junos OS default for setup and hold priority is 7:0. Unless some LSPs are more important than others, preserving the default is a good practice. Configuring a setup priority that is better than the hold priority is not allowed, resulting in a failed commit in order to avoid preemption loops.

## Preventing Use of a Path That Previously Failed

If you configure an alternate path through the network in case the active path fails, you may not want traffic to revert back to the failed path, even if it is no longer failing. When

you configure a primary path, the traffic switches over to the secondary path during a failure, and reverts back to the primary path when it returns.

At times, switching traffic back to a primary path that has previously failed may not be a particularly sound idea. In this case, only configure secondary paths, resulting in the next configured secondary path establishing when the first secondary path fails. Later, if the first secondary path becomes operational, the Junos OS will not revert to it, but will continue using the second secondary path.

## Verify That the Secondary Path Is Established

**Purpose** When the secondary path is configured with the **standby** statement, the secondary path should be *up* but *not active*; it will become active if the primary path fails. A secondary path configured without the **standby** statement will not come up unless the primary path fails. To test that the secondary path is correctly configured and would come up if the primary path were to fail, you must deactivate a link or node critical to the primary path, then issue the **show mpls lsp *lsp-path-name* extensive** command.

**Action** To verify that the secondary path is established, enter the following Junos OS CLI operational mode command:

### Sample Output

```
user@R1> show mpls lsp extensive
```

### Sample Output

The following sample output shows a correctly configured secondary path before and after it comes up. In the example, interface **fe-0/1/0** on **R2** is deactivated, which brings down the primary path **via-r2**. The ingress router **R1** switches traffic to the secondary path **via-r7**.

```
user@R1> show mpls lsp extensive
Ingress LSP: 1 sessions

192.168.5.1
  From: 192.168.1.1, State: Up, ActiveRoute: 0, LSPname: r1-to-r5
  ActivePath: via-r2 (primary)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary via-r2          State: Up
    Priorities: 6 6
    Bandwidth: 35Mbps
    SmartOptimizeTimer: 180
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 3)
10.0.12.14 S 10.0.24.2 S 10.0.45.2 S
  Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):

      10.0.12.14 10.0.24.2 10.0.45.2
5 Apr 29 14:40:43 Selected as active path
4 Apr 29 14:40:43 Record Route: 10.0.12.14 10.0.24.2
3 Apr 29 14:40:43 Up
2 Apr 29 14:40:43 Originate Call
1 Apr 29 14:40:43 CSPF: computation result accepted
Secondary via-r7          State: Dn
  SmartOptimizeTimer: 180
```

```

No computed ERO.
Created: Sat Apr 29 14:40:43 2006
Total 1 displayed, Up 1, Down 0

[edit interfaces]
user@R2# deactivate fe-0/1/0

[edit interfaces]
user@R2# show
inactive: fe-0/1/0 {
    unit 0 {
        family inet {
            address 10.0.12.14/30;
        }
        family iso;
        family mpls;
    }
}

user@R1> show mpls lsp name r1-to-r4 extensive
Ingress LSP: 1 sessions

192.168.4.1
From: 192.168.1.1, State: Up, ActiveRoute: 0, LSPname: r1-to-r4
ActivePath: via-r7 (secondary)
LoadBalance: Random
Encoding type: Packet, Switching type: Packet, GPID: IPv4
Primary via-r2          State: Dn
  Priorities: 6 6
  Bandwidth: 35Mbps
  SmartOptimizeTimer: 180
  Will be enqueued for recomputation in 14 second(s).
10 Apr 29 14:52:33 CSPF failed: no route toward 10.0.12.1 4[21 times]
 9 Apr 29 14:42:48 Clear Call
 8 Apr 29 14:42:48 Deselected as active
 7 Apr 29 14:42:48 Session preempted
 6 Apr 29 14:42:48 Down
 5 Apr 29 14:40:43 Selected as active path
 4 Apr 29 14:40:43 Record Route: 10.0.12.14 10.0.24.2
 3 Apr 29 14:40:43 Up
 2 Apr 29 14:40:43 Originate Call
 1 Apr 29 14:40:43 CSPF: computation result accepted
*Standby via-r7          State: Up
  SmartOptimizeTimer: 180
  Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 11)
10.0.17.14 S 10.0.47.1 S
  Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):

    10.0.17.14 10.0.47.1
  5 Apr 29 14:42:48 Selected as active path
  4 Apr 29 14:41:12 Record Route: 10.0.17.14 10.0.47.1
  3 Apr 29 14:41:12 Up
  2 Apr 29 14:41:12 Originate Call
  1 Apr 29 14:41:12 CSPF: computation result accepted
Created: Sat Apr 29 14:40:43 2006
Total 1 displayed, Up 1, Down 0

```

**Meaning** The sample output from egress router R1 shows a correctly configured standby secondary path in a down state because the primary path is still up. Upon deactivation of an interface (interface fe-0/1/0 on R2) critical to the primary path, the primary path via-r2 goes down

and the standby secondary path **via-r7** comes up, allowing **R1** to switch traffic to the standby secondary path.

## Checklist for Checking the MPLS Layer

**Problem** **Description:** This checklist provides the steps and commands for checking the Multiprotocol Label Switching (MPLS) layer of the layered MPLS model. The checklist provides links to an overview of the MPLS layer and more detailed information about the commands used to investigate the problem.

[Table 21 on page 921](#) provides commands for checking the MPLS layer.

**Table 21: Checklist for Checking the MPLS Layer**

Tasks	Command or Action
<b>“Checking the MPLS Layer” on page 921</b>	
1. <a href="#">Verify the LSP on page 923</a>	<pre>show mpls lsp show mpls lsp extensive show mpls lsp name <i>name</i> show mpls lsp name <i>name</i> extensive</pre>
2. <a href="#">Verify the LSP Route on the Transit Router on page 926</a>	<pre>show route table mpls.0</pre>
3. <a href="#">Verify the LSP Route on the Ingress Router on page 927</a>	<pre>show route <i>destination</i></pre>
4. <a href="#">Verify MPLS Labels with the traceroute Command on page 929</a>	<pre>traceroute <i>hostname</i></pre>
5. <a href="#">Verify MPLS Labels with the ping Command on page 930</a>	On the ingress router: <pre>ping mpls rsvp <i>lsp-name</i> detail</pre>
6. <a href="#">Verify the MPLS Configuration on page 895</a>	<pre>show configuration protocols mpls show configuration interfaces</pre>
7. <a href="#">Take Appropriate Action on page 933</a>	<p>The following sequence of commands addresses the specific problem described in this topic:</p> <pre>edit edit protocols mpls  [edit protocols mpls] show activate interface so-0/0/3.0 show commit</pre>
8. <a href="#">Verify the LSP Again on page 934</a>	<pre>show mpls lsp extensive</pre>

## Checking the MPLS Layer

**Purpose** After you have configured the label-switched path (LSP), issued the **show mpls lsp** command, and determined that there is an error, you might find that the error is not in

the physical, data link, Internet Protocol (IP), interior gateway protocol (IGP), or Resource Reservation Protocol (RSVP) layers. Continue investigating the problem at the MPLS layer of the network.

Figure 93 on page 922 illustrates the MPLS layer of the layered MPLS model.

**Figure 93: Checking the MPLS Layer**


<b>BGP Layer</b>	<tr> <td><b>MPLS Layer</b></td><td> <tr> <td><b>RSVP Layer</b></td><td> <tr> <td colspan="2"> <div>IGP and IP Layers Functioning</div> <tr> <td><b>OSPF Layer</b></td><td><b>IS-IS Layer</b></td> <tr> <td><b>IP Layer</b></td><td><b>IP Layer</b></td> <tr> <td><b>Data Link Layer</b></td><td></td> <tr> <td><b>Physical Layer</b></td><td></td> </tr> </tr> </tr> </tr> </td></tr></td></tr></td></tr>	<b>MPLS Layer</b>	<tr> <td><b>RSVP Layer</b></td><td> <tr> <td colspan="2"> <div>IGP and IP Layers Functioning</div> <tr> <td><b>OSPF Layer</b></td><td><b>IS-IS Layer</b></td> <tr> <td><b>IP Layer</b></td><td><b>IP Layer</b></td> <tr> <td><b>Data Link Layer</b></td><td></td> <tr> <td><b>Physical Layer</b></td><td></td> </tr> </tr> </tr> </tr> </td></tr></td></tr>	<b>RSVP Layer</b>	<tr> <td colspan="2"> <div>IGP and IP Layers Functioning</div> <tr> <td><b>OSPF Layer</b></td><td><b>IS-IS Layer</b></td> <tr> <td><b>IP Layer</b></td><td><b>IP Layer</b></td> <tr> <td><b>Data Link Layer</b></td><td></td> <tr> <td><b>Physical Layer</b></td><td></td> </tr> </tr> </tr> </tr> </td></tr>	<div>IGP and IP Layers Functioning</div> <tr> <td><b>OSPF Layer</b></td><td><b>IS-IS Layer</b></td> <tr> <td><b>IP Layer</b></td><td><b>IP Layer</b></td> <tr> <td><b>Data Link Layer</b></td><td></td> <tr> <td><b>Physical Layer</b></td><td></td> </tr> </tr> </tr> </tr>		<b>OSPF Layer</b>	<b>IS-IS Layer</b>	<b>IP Layer</b>	<b>IP Layer</b>	<b>Data Link Layer</b>		<b>Physical Layer</b>	
<b>MPLS Layer</b>	<tr> <td><b>RSVP Layer</b></td><td> <tr> <td colspan="2"> <div>IGP and IP Layers Functioning</div> <tr> <td><b>OSPF Layer</b></td><td><b>IS-IS Layer</b></td> <tr> <td><b>IP Layer</b></td><td><b>IP Layer</b></td> <tr> <td><b>Data Link Layer</b></td><td></td> <tr> <td><b>Physical Layer</b></td><td></td> </tr> </tr> </tr> </tr> </td></tr></td></tr>	<b>RSVP Layer</b>	<tr> <td colspan="2"> <div>IGP and IP Layers Functioning</div> <tr> <td><b>OSPF Layer</b></td><td><b>IS-IS Layer</b></td> <tr> <td><b>IP Layer</b></td><td><b>IP Layer</b></td> <tr> <td><b>Data Link Layer</b></td><td></td> <tr> <td><b>Physical Layer</b></td><td></td> </tr> </tr> </tr> </tr> </td></tr>	<div>IGP and IP Layers Functioning</div> <tr> <td><b>OSPF Layer</b></td><td><b>IS-IS Layer</b></td> <tr> <td><b>IP Layer</b></td><td><b>IP Layer</b></td> <tr> <td><b>Data Link Layer</b></td><td></td> <tr> <td><b>Physical Layer</b></td><td></td> </tr> </tr> </tr> </tr>		<b>OSPF Layer</b>	<b>IS-IS Layer</b>	<b>IP Layer</b>	<b>IP Layer</b>	<b>Data Link Layer</b>		<b>Physical Layer</b>			
<b>RSVP Layer</b>	<tr> <td colspan="2"> <div>IGP and IP Layers Functioning</div> <tr> <td><b>OSPF Layer</b></td><td><b>IS-IS Layer</b></td> <tr> <td><b>IP Layer</b></td><td><b>IP Layer</b></td> <tr> <td><b>Data Link Layer</b></td><td></td> <tr> <td><b>Physical Layer</b></td><td></td> </tr> </tr> </tr> </tr> </td></tr>	<div>IGP and IP Layers Functioning</div> <tr> <td><b>OSPF Layer</b></td><td><b>IS-IS Layer</b></td> <tr> <td><b>IP Layer</b></td><td><b>IP Layer</b></td> <tr> <td><b>Data Link Layer</b></td><td></td> <tr> <td><b>Physical Layer</b></td><td></td> </tr> </tr> </tr> </tr>		<b>OSPF Layer</b>	<b>IS-IS Layer</b>	<b>IP Layer</b>	<b>IP Layer</b>	<b>Data Link Layer</b>		<b>Physical Layer</b>					
<div>IGP and IP Layers Functioning</div> <tr> <td><b>OSPF Layer</b></td><td><b>IS-IS Layer</b></td> <tr> <td><b>IP Layer</b></td><td><b>IP Layer</b></td> <tr> <td><b>Data Link Layer</b></td><td></td> <tr> <td><b>Physical Layer</b></td><td></td> </tr> </tr> </tr> </tr>		<b>OSPF Layer</b>	<b>IS-IS Layer</b>	<b>IP Layer</b>	<b>IP Layer</b>	<b>Data Link Layer</b>		<b>Physical Layer</b>							
<b>OSPF Layer</b>	<b>IS-IS Layer</b>	<b>IP Layer</b>	<b>IP Layer</b>	<b>Data Link Layer</b>		<b>Physical Layer</b>									
<b>IP Layer</b>	<b>IP Layer</b>	<b>Data Link Layer</b>		<b>Physical Layer</b>											
<b>Data Link Layer</b>		<b>Physical Layer</b>													
<b>Physical Layer</b>															

With the MPLS layer, you check whether the LSP is up and functioning correctly. If the network is not functioning at this layer, the LSP does not work as configured.

Figure 94 on page 923 illustrates the MPLS network used in this topic.



Figure 94: MPLS Network Broken at the MPLS Layer

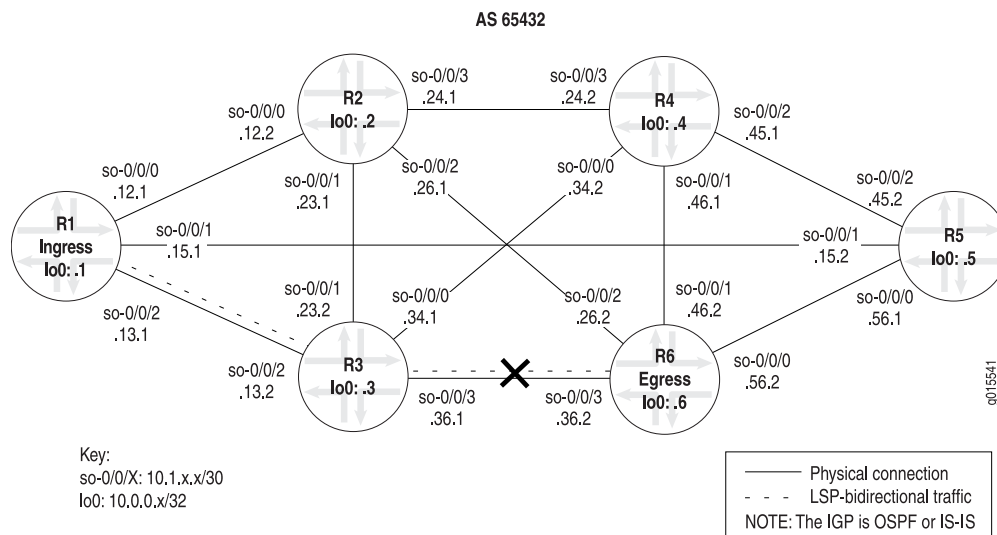

The network shown in [Figure 94 on page 923](#) is a fully meshed configuration where every directly connected interface can receive and send packets to every other similar interface. The LSP in this network is configured to run from ingress router **R1**, through transit router **R3**, to egress router **R6**. In addition, a reverse LSP is configured to run from **R6** through **R3** to **R1**, creating bidirectional traffic.

However, in this example, the reverse LSP is down without a path from **R6** to **R1**.

The cross shown in [Figure 94 on page 923](#) indicates where the LSP is broken. Some possible reasons the LSP is broken might include an incorrectly configured MPLS protocol, or interfaces that are incorrectly configured for MPLS.

In the network shown in [Figure 94 on page 923](#), a configuration error on egress router **R6** prevents the LSP from traversing the network as expected.

To check the MPLS layer, follow these steps:

1. [Verify the LSP on page 923](#)
2. [Verify the LSP Route on the Transit Router on page 926](#)
3. [Verify the LSP Route on the Ingress Router on page 927](#)
4. [Verify MPLS Labels with the traceroute Command on page 929](#)
5. [Verify MPLS Labels with the ping Command on page 930](#)
6. [Verify the MPLS Configuration on page 931](#)
7. [Take Appropriate Action on page 933](#)
8. [Verify the LSP Again on page 934](#)

## Verify the LSP

**Purpose** Typically, you use the `show mpls lsp extensive` command to verify the LSP. However for quick verification of the LSP state, use the `show mpls lsp` command. If the LSP is down, use the `extensive` option (`show mpls lsp extensive`) as a follow-up. If your network has

numerous LSPs, you might consider specifying the name of the LSP, using the **name** option (**show mpls lsp name *name*** or **show mpls lsp name *name* extensive**).

**Action** To verify that the LSP is up, enter some or all of the following commands from the ingress router:

```
user@host> show mpls lsp
user@host> show mpls lsp extensive
user@host> show mpls lsp name name
user@host> show mpls lsp name name extensive
```

### Sample Output 1

```
user@R1> show mpls lsp
Ingress LSP: 1 sessions
To          From          State Rt ActivePath      P      LSPname
10.0.0.6    10.0.0.1    Dn     0  -                R1-to-R6
Total 1 displayed, Up 0, Down 1

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

user@R3> show mpls lsp
Ingress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

user@R6> show mpls lsp
Ingress LSP: 1 sessions
To          From          State Rt ActivePath      P      LSPname
10.0.0.1    10.0.0.6    Dn     0  -                R6-to-R1
Total 1 displayed, Up 0, Down 1

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

### Sample Output 2

```
user@R1> show mpls lsp extensive
Ingress LSP: 1 sessions

10.0.0.6
  From: 10.0.0.1, State: Dn, ActiveRoute: 0, LSPname: R1-to-R6
  ActivePath: (none)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  Primary                               State: Dn
  Will be enqueued for recomputation in 22 second(s).
```

```

    1 Nov  2 14:43:38  CSPF failed: no route toward 10.0.0.6 [175 times]
Created: Tue Nov  2 13:18:39 2004
Total 1 displayed, Up 0, Down 1

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

user@R3> show mpls lsp extensive
Ingress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

user@R6> show mpls lsp extensive
Ingress LSP: 1 sessions

10.0.0.1
  From: 10.0.0.6, State: Dn, ActiveRoute: 0, LSPname: R6-to-R1
  ActivePath: (none)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  Primary                               State: Dn
    Will be enqueued for recomputation in 13 second(s).
    1 Nov  2 14:38:12  CSPF failed: no route toward 10.0.0.1 [177 times]
Created: Tue Nov  2 13:12:22 2004
Total 1 displayed, Up 0, Down 1

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

### Sample Output 3

```

user@R1> show mpls lsp name R1-to-R6
Ingress LSP: 1 sessions
To          From          State Rt ActivePath      P      LSPname
10.0.0.6    10.0.0.1    Dn    0  -                R1-to-R6
Total 1 displayed, Up 0, Down 1

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

### Sample Output 4

```

user@R1> show mpls lsp name R1-to-R6 extensive
Ingress LSP: 1 sessions

10.0.0.6

```

```

From: 10.0.0.1, State: Dn, ActiveRoute: 0, LSPname: R1-to-R6
ActivePath: (none)
LoadBalance: Random
Encoding type: Packet, Switching type: Packet, GPID: IPv4
Primary                               State: Dn
    Will be enqueued for recomputation in 10 second(s).
    1 Nov  2 14:51:53 CSPF failed: no route toward 10.0.0.6[192 times]
Created: Tue Nov  2 13:18:39 2004
Total 1 displayed, Up 0, Down 1

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

**Meaning** Sample Output 1 shows a brief description of the state of the LSP for the ingress, transit, and egress routers. Output from ingress router **R1** and egress router **R6** shows that both LSPs are down, **R1-to-R6** and **R6-to-R1**. With the configured LSPs on **R1** and **R6**, we would expect egress LSP sessions on both **R1** and **R6**. In addition, transit router **R3** has no transit sessions.

Sample Output 2 shows all information about the LSPs, including all past state history and the reason why an LSP failed. Output from **R1** and **R6** indicates that there is no route to the destination because the Constrained Shortest Path First (CSPF) algorithm failed.

Sample Outputs 3 and 4 show examples of the output for the **show mpls lsp name** command with the **extensive** option. In this instance, the output is very similar to the **show mpls lsp** command because only one LSP is configured in the example network in [Figure 94 on page 923](#). However, in a large network with many LSPs configured, the results would be quite different between the two commands.

## Verify the LSP Route on the Transit Router

**Purpose** If the LSP is up, the LSP route should appear in the **mpls.0** routing table. MPLS maintains an MPLS path routing table (**mpls.0**), which contains a list of the next label-switched router in each LSP. This routing table is used on transit routers to route packets to the next router along an LSP. If routes are not present in the output for the transit router, check the MPLS protocol configuration on the ingress and egress routers.

**Action** To verify the LSP route on the transit router, enter the following command from the transit router:

```
user@host> show route table mpls.0
```

## Sample Output 1

```

user@R3> show route table mpls.0
mpls.0: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both
0          *[MPLS/0] 16w2d 21:52:40, metric 1
            Receive
1          *[MPLS/0] 16w2d 21:52:40, metric 1
            Receive

```

```
2          *[MPLS/0] 16w2d 21:52:40, metric 1
          Receive
```

## Sample Output 2

```
user@R3> show route table mpls.0
mpls.0: 7 destinations, 7 routes (7 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both
0          *[MPLS/0] 16w2d 22:26:08, metric 1
          Receive
1          *[MPLS/0] 16w2d 22:26:08, metric 1
          Receive
2          *[MPLS/0] 16w2d 22:26:08, metric 1
          Receive
100864     *[RSVP/7] 00:07:23, metric 1
          > via so-0/0/2.0, label-switched-path R6-to-R1
100864(S=0) *[RSVP/7] 00:07:23, metric 1
          > via so-0/0/2.0, label-switched-path R6-to-R1
100880     *[RSVP/7] 00:07:01, metric 1
          > via so-0/0/3.0, label-switched-path R1-to-R6
100880(S=0) *[RSVP/7] 00:07:01, metric 1
          > via so-0/0/3.0, label-switched-path R1-to-R6
```

**Meaning** Sample Output 1 from transit router **R3** shows three route entries in the form of MPLS label entries. These MPLS labels are reserved MPLS labels defined in RFC 3032, and are always present in the **mpls.0** routing table, regardless of the state of the LSP. The incoming labels assigned by RSVP to the upstream neighbor are missing from the output, indicating that the LSP is down. For more information on MPLS label entries, see [“Checklist for Verifying LSP Use” on page 1058](#).

In contrast, Sample Output 2 shows the MPLS labels and routes for a correctly configured LSP. The three reserved MPLS labels are present, and the four other entries represent the incoming labels assigned by RSVP to the upstream neighbor. These four entries represent two routes. There are two entries per route because the stack values in the MPLS header may be different. For each route, the second entry **100864 (S=0)** and **100880 (S=0)** indicates that the stack depth is not 1, and additional label values are included in the packet. In contrast, the first entry, **100864** and **100880** has an inferred S=1 value which indicates a stack depth of 1 and makes each label the last label in that particular packet. The dual entries indicate that this is the penultimate router. For more information on MPLS label stacking, see RFC 3032, *MPLS Label Stack Encoding*.

## Verify the LSP Route on the Ingress Router

**Purpose** Check whether the LSP route is included in the active entries in the **inet.3** routing table for the specified address.

**Action** To verify the LSP route, enter the following command from the ingress router:

```
user@host> show route destination
```

## Sample Output 1

```
user@R1> show route 10.0.0.6
inet.0 : 27 destinations, 27 routes (27 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both
```

```

10.0.0.6/32      *[IS-IS/18] 6d 01:41:37, metric 20
                  to 10.1.12.2 via so-0/0/0.0
                  > to 10.1.15.2 via so-0/0/1.0
                  to 10.1.13.2 via so-0/0/2.0

user@R6> show route 10.0.0.1

inet.0 : 28 destinations, 28 routes (28 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both
10.0.0.1/32      *[IS-IS/18] 5d 01:01:38, metric 20
                  to 10.1.56.1 via so-0/0/0.0
                  > to 10.1.26.1 via so-0/0/2.0
                  to 10.1.36.1 via so-0/0/3.0

```

## Sample Output 2

```

user@R1> show route 10.0.0.6
inet.0: 28 destinations, 28 routes (27 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both

10.0.0.6/32      *[IS-IS/18] 6d 02:13:42, metric 20
                  to 10.1.12.2 via so-0/0/0.0
                  > to 10.1.15.2 via so-0/0/1.0
                  to 10.1.13.2 via so-0/0/2.0

inet.3 : 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

10.0.0.6/32      *[RSVP/7] 00:08:07, metric 20
                  > via so-0/0/2.0, label-switched-path R1-to-R6

user@R6> show route 10.0.0.1

inet.0: 29 destinations, 29 routes (28 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both

10.0.0.1/32      *[IS-IS/18] 5d 01:34:03, metric 20
                  to 10.1.56.1 via so-0/0/0.0
                  > to 10.1.26.1 via so-0/0/2.0
                  to 10.1.36.1 via so-0/0/3.0

inet.3 : 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

10.0.0.1/32      *[RSVP/7] 00:10:39, metric 20
                  > via so-0/0/3.0, label-switched-path R6-to-R1

```

**Meaning** Sample Output 1 shows entries in the **inet.0** routing table only. The **inet.3** routing table is missing from the output because the LSP is not working. The **inet.0** routing table is used by interior gateway protocols (IGPs) and Border Gateway Protocol (BGP) to store routing information. In this case, the IGP is Intermediate System-to-Intermediate System (IS-IS). For more information on the **inet.0** routing table, see the *Junos MPLS Applications Configuration Guide*.

If the LSP was working, we would expect to see entries that include the LSP in the **inet.3** routing table. The **inet.3** routing table is used on ingress routers to route BGP packets to the destination egress router. BGP uses the **inet.3** routing table on the ingress router to

help resolve next-hop addresses. BGP is configured in the example network shown in [Figure 94 on page 923](#).

Sample Output 2 shows output you should receive when the LSP is up. The output shows both the **inet.0** and **inet.3** routing tables, indicating that LSPs **R1-to-R6** and **R6-to-R1** are available.

## Verify MPLS Labels with the traceroute Command

**Purpose** Display the route packets take to a BGP destination where the BGP next hop for that route is the LSP egress address. By default, BGP uses the **inet.0** and the **inet.3** routing tables to resolve the next-hop address. When the next-hop address of the BGP route is not the router ID of the egress router, traffic is mapped to IGP routes, not to the LSP. Use the **traceroute** command as a debugging tool to determine whether the LSP is being used to forward traffic.

**Action** To verify MPLS labels, enter the following command from the ingress router:

```
user@host> traceroute hostname
```

### Sample Output 1

```
user@R1> traceroute 100.100.6.1
traceroute to 100.100.6.1 (100.100.6.1), 30 hops max, 40 byte packets
 1  10.1.12.2 (10.1.12.2)  0.627 ms  0.561 ms  0.520 ms
 2  10.1.26.2 (10.1.26.2)  0.570 ms !N  0.558 ms !N  4.879 ms !N

user@R6> traceroute 100.100.1.1
traceroute to 100.100.1.1 (100.100.1.1), 30 hops max, 40 byte packets
 1  10.1.26.1 (10.1.26.1)  0.630 ms  0.545 ms  0.488 ms
 2  10.1.12.1 (10.1.12.1)  0.551 ms !N  0.557 ms !N  0.526 ms !N
```

### Sample Output 2

```
user@R1> traceroute 100.100.6.1
to 100.100.6.1 (100.100.6.1), 30 hops max, 40 byte packets
 1  10.1.13.2 (10.1.13.2)  0.866 ms  0.746 ms  0.724 ms
    MPLS Label=100912 CoS=0 TTL=1 S=1
 2  10.1.36.2 (10.1.36.2)  0.577 ms !N  0.597 ms !N  0.546 ms !N

user@R6> traceroute 100.100.1.1
traceroute to 100.100.1.1 (100.100.1.1), 30 hops max, 40 byte packets
 1  10.1.36.1 (10.1.36.1)  0.802 ms  0.716 ms  0.688 ms
    MPLS Label=100896 CoS=0 TTL=1 S=1
 2  10.1.13.1 (10.1.13.1)  0.570 ms !N  0.568 ms !N  0.546 ms !N
```

**Meaning** Sample Output 1 shows that BGP traffic is not using the LSP, consequently MPLS labels do not appear in the output. Instead of using the LSP, BGP traffic is using the IGP (IS-IS, in the example network in [Figure 94 on page 923](#)) to reach the BGP next-hop LSP egress address. The Junos OS default behavior uses LSPs for BGP traffic when the BGP next hop equals the LSP egress address.

Sample Output 2 is an example of output for a correctly configured LSP. The output shows MPLS labels, indicating that BGP traffic is using the LSP to reach the BGP next hop.

## Verify MPLS Labels with the ping Command

**Purpose** When you ping a specific LSP, you check that echo requests are sent over the LSP as MPLS packets.

**Action** To verify MPLS labels, enter the following command from the ingress router to ping the egress router:

```
user@host> ping mpls rsvp lsp-name detail
```

For example:

```
user@R1> ping mpls rsvp R1-to-R6 detail
```

### Sample Output 1

```
user@R1> ping mpls rsvp R1-to-R6 detail
LSP R1-to-R6 - LSP has no active path, exiting.
```

```
user@R6> ping mpls rsvp R6-to-R1 detail
LSP R6-to-R1 - LSP has no active path, exiting.
```

### Sample Output 2

```
user@R1> traceroute 10.0.0.6
traceroute to 10.0.0.6 (10.0.0.6), 30 hops max, 40 byte packets
 1 10.1.15.2 (10.1.15.2) 0.708 ms 0.613 ms 0.576 ms
 2 10.0.0.6 (10.0.0.6) 0.763 ms 0.708 ms 0.700 ms
```

```
user@R1> ping mpls rsvp R1-to-R6 detail
Request for seq 1, to interface 69, label 100880
Reply for seq 1, return code: Egress-ok
Request for seq 2, to interface 69, label 100880
Reply for seq 2, return code: Egress-ok
Request for seq 3, to interface 69, label 100880
Reply for seq 3, return code: Egress-ok
Request for seq 4, to interface 69, label 100880
Reply for seq 4, return code: Egress-ok
Request for seq 5, to interface 69, label 100880
Reply for seq 5, return code: Egress-ok
```

```
--- lsping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
```

```
user@R6> ping mpls rsvp R6-to-R1 detail
Request for seq 1, to interface 70, label 100864
Reply for seq 1, return code: Egress-ok
Request for seq 2, to interface 70, label 100864
Reply for seq 2, return code: Egress-ok
Request for seq 3, to interface 70, label 100864
Reply for seq 3, return code: Egress-ok
Request for seq 4, to interface 70, label 100864
Reply for seq 4, return code: Egress-ok
Request for seq 5, to interface 70, label 100864
Reply for seq 5, return code: Egress-ok
```

```
--- lsping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
```



**Meaning** Sample Output 1 shows that the LSP does not have an active path to forward echo requests, indicating that the LSP is down.

Sample Output 2 is an example of output you should receive when the LSP is up and forwarding packets.

## Verify the MPLS Configuration

**Purpose** After you have checked the transit and ingress routers, use the **traceroute** command to verify the BGP next hop, and used the **ping** command to verify the active path, you can check for problems with the MPLS configuration at the **[edit protocols mpls]** and **[edit interfaces]** hierarchy levels.

**Action** To verify the MPLS configuration, enter the following commands from the ingress, transit, and egress routers:

```
user@host> show configuration protocols mpls
user@host> show configuration interfaces
```

## Sample Output 1

```
user@R1> show configuration protocols mpls
label-switched-path R1-to-R6 {
    to 10.0.0.6;
}
inactive: interface so-0/0/0.0;
inactive: interface so-0/0/1.0;
interface so-0/0/2.0;
interface fxp0.0 {
    disable;
}

user@R3> show configuration protocols mpls
interface fxp0.0 {
    disable;
}
inactive: interface so-0/0/0.0;
inactive: interface so-0/0/1.0;
interface so-0/0/2.0;
interface so-0/0/3.0;

user@R6> show configuration protocols mpls
label-switched-path R6-to-R1 {
    to 10.0.0.1;
}
inactive: interface so-0/0/0.0;
inactive: interface so-0/0/1.0;
inactive: interface so-0/0/2.0;
inactive: interface so-0/0/3.0; <<< Incorrectly configured
```

## Sample Output 2

```
user@R6> show configuration interfaces
so-0/0/0 {
    unit 0 {
        family inet {
            address 10.1.56.2/30;
```

```

    }
    family iso;
    family mpls;
  }
}
so-0/0/1 {
  unit 0 {
    family inet {
      address 10.1.46.2/30;
    }
    family iso;
    family mpls;
  }
}
so-0/0/2 {
  unit 0 {
    family inet {
      address 10.1.26.2/30;
    }
    family iso;
    family mpls;
  }
}
so-0/0/3 {
  unit 0 {
    family inet {
      address 10.1.36.2/30;
    }
    family iso;
    family mpls;
  }
}
fxp0 {
  unit 0 {
    family inet {
      address 192.168.70.148/21;
    }
  }
}
lo0 {
  unit 0 {
    family inet {
      address 10.0.0.6/32;
      address 127.0.0.1/32;
    }
    family iso {
      address 49.0003.1000.0000.0006.00;
    }
  }
}
}

```

**Meaning** Sample Output 1 from the ingress, transit, and egress routers shows that the configuration of interfaces on egress router **R6** is incorrect. Interface **so-0/0/3.0** is included as inactive at the **[edit protocols mpls]** hierarchy level, when it should be active because it is the interface through which the LSP travels.

Sample Output 2 shows that interfaces are correctly configured for MPLS on egress router **R6**. The interfaces are also correctly configured on the ingress and transit routers (not shown).

## Take Appropriate Action

**Problem**    **Description:** Depending on the error you encountered in your investigation, you must take the appropriate action to correct the problem. In this example, an interface is incorrectly configured at the `[edit protocols mpls]` hierarchy level on egress router **R6**.

**Solution**    To correct the error in this example, follow these steps:

1. Activate the interface in the MPLS protocol configuration on egress router **R6**:

```
user@R6> edit
user@R6# edit protocols mpls
[edit protocols mpls]
user@R6# show
user@R6# activate interface so-0/0/3.0
```

2. Verify and commit the configuration:

```
[edit protocols mpls]
user@R6# show
user@R6# commit
```

**Sample Output**

```
user@R6> edit
Entering configuration mode

[edit]
user@R6# edit protocols mpls

[edit protocols mpls]
user@R6# show
label-switched-path R6-to-R1 {
    to 10.0.0.1;
}
inactive: interface so-0/0/0.0;
inactive: interface so-0/0/1.0;
inactive: interface so-0/0/2.0;
inactive: interface so-0/0/3.0; <<< Incorrectly configured interface

[edit protocols mpls]
user@R6# activate interface so-0/0/3

[edit protocols mpls]
user@R6# show
label-switched-path R6-to-R1 {
    to 10.0.0.1;
}
inactive: interface so-0/0/0.0;
inactive: interface so-0/0/1.0;
inactive: interface so-0/0/2.0;
interface so-0/0/3.0; <<< Correctly configured interface

[edit protocols mpls]
user@R6# commit
commit complete
```

**Meaning** The sample output shows that the incorrectly configured interface **so-0/0/3.0** on egress router **R6** is now activated at the **[edit protocols mpls]** hierarchy level. The LSP can now come up.

## Verify the LSP Again

**Purpose** After taking the appropriate action to correct the error, the LSP needs to be checked again to confirm that the problem in the BGP layer has been resolved.

**Action** To verify the LSP again, enter the following command from the ingress, transit, and egress routers:

```
user@host> show mpls lsp extensive
```

## Sample Output

```
user@R1> show mpls lsp extensive
Ingress LSP: 1 sessions

10.0.0.6
  From: 10.0.0.1,  State: Up,  ActiveRoute: 1,  LSPname: R1-to-R6
  ActivePath:  (primary)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
```

```

*Primary                               State: Up
  Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 20)
10.1.13.2 S 10.1.36.2 S
  Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):

      10.1.13.2 10.1.36.2
6 Nov  2 15:48:52 Selected as active path
5 Nov  2 15:48:52 Record Route: 10.1.13.2 10.1.36.2
4 Nov  2 15:48:52 Up
3 Nov  2 15:48:52 Originate Call
2 Nov  2 15:48:52 CSPF: computation result accepted
1 Nov  2 15:48:22 CSPF failed: no route toward 10.0.0.6[308 times]
Created: Tue Nov  2 13:18:39 2004
Total 1 displayed, Up 1, Down 0

Egress LSP: 1 sessions

10.0.0.1
  From: 10.0.0.6, LSPstate: Up , ActiveRoute: 0
  LSPname: R6-to-R1 , LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: -
  Resv style: 1 FF, Label in: 3, Label out: -
  Time left: 159, Since: Tue Nov  2 15:48:30 2004
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 39106 protocol 0
  PATH rcvfrom: 10.1.13.2 (so-0/0/2.0) 10 pkts
  Adspec: received MTU 1500
  PATH sentto: localclient
  RESV rcvfrom: localclient
  Record route: 10.1.36.2 10.1.13.2 <self>
Total 1 displayed, Up 1, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

user@R3> show mpls lsp extensive
Ingress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 2 sessions

10.0.0.1
  From: 10.0.0.6, LSPstate: Up, ActiveRoute: 1
  LSPname: R6-to-R1, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 3
  Resv style: 1 FF, Label in: 100864, Label out: 3
  Time left: 123, Since: Tue Nov  2 15:35:41 2004
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 39106 protocol 0
  PATH rcvfrom: 10.1.36.2 (so-0/0/3.0) 10 pkts
  Adspec: received MTU 1500 sent MTU 1500
  PATH sentto: 10.1.13.1 (so-0/0/2.0) 10 pkts
  RESV rcvfrom: 10.1.13.1 (so-0/0/2.0) 10 pkts
  Explct route: 10.1.13.1
  Record route: 10.1.36.2 <self> 10.1.13.1

```

## 10.0.0.6

From: 10.0.0.1, LSPstate: Up, ActiveRoute: 1  
 LSPname: R1-to-R6, LSPpath: Primary  
 Suggested label received: -, Suggested label sent: -  
 Recovery label received: -, Recovery label sent: 3  
 Resv style: 1 FF, Label in: 100880, Label out: 3  
 Time left: 145, Since: Tue Nov 2 15:36:03 2004  
 Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500  
 Port number: sender 1 receiver 48015 protocol 0  
 PATH rcvfrom: 10.1.13.1 (so-0/0/2.0) 10 pkts  
 Adspec: received MTU 1500 sent MTU 1500  
 PATH sentto: 10.1.36.2 (so-0/0/3.0) 10 pkts  
 RESV rcvfrom: 10.1.36.2 (so-0/0/3.0) 10 pkts  
 Explct route: 10.1.36.2  
 Record route: 10.1.13.1 <self> 10.1.36.2  
 Total 2 displayed, Up 2, Down 0

user@R6> show mpls lsp extensive

Ingress LSP: 1 sessions

## 10.0.0.1

From: 10.0.0.6, State: Up, ActiveRoute: 1, LSPname: R6-to-R1  
 ActivePath: (primary)  
 LoadBalance: Random  
 Encoding type: Packet, Switching type: Packet, GPID: IPv4  
 \*Primary State: Up  
 Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 20)  
 10.1.36.1 S 10.1.13.1 S  
 Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):  
  
 10.1.36.1 10.1.13.1  
 6 Nov 2 15:41:44 Selected as active path  
 5 Nov 2 15:41:44 Record Route: 10.1.36.1 10.1.13.1  
 4 Nov 2 15:41:44 Up  
 3 Nov 2 15:41:44 Originate Call  
 2 Nov 2 15:41:44 CSPF: computation result accepted  
 1 Nov 2 15:41:14 CSPF failed: no route toward 10.0.0.1[306 times]  
 Created: Tue Nov 2 13:12:21 2004  
 Total 1 displayed, Up 1, Down 0

Egress LSP: 1 sessions

## 10.0.0.6

From: 10.0.0.1, LSPstate: Up, ActiveRoute: 0  
 LSPname: R1-to-R6, LSPpath: Primary  
 Suggested label received: -, Suggested label sent: -  
 Recovery label received: -, Recovery label sent: -  
 Resv style: 1 FF, Label in: 3, Label out: -  
 Time left: 157, Since: Tue Nov 2 15:42:06 2004  
 Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500  
 Port number: sender 1 receiver 48015 protocol 0  
 PATH rcvfrom: 10.1.36.1 (so-0/0/3.0) 11 pkts  
 Adspec: received MTU 1500  
 PATH sentto: localclient  
 RESV rcvfrom: localclient  
 Record route: 10.1.13.1 10.1.36.1 <self>  
 Total 1 displayed, Up 1, Down 0

Transit LSP: 0 sessions

Total 0 displayed, Up 0, Down 0

**Meaning** Sample Output 1 from ingress router **R1** shows that LSP **R1-to-R6** has an active route to **R6** and the state is up.

Sample Output 2 from transit router **R3** shows that there are two transit LSP sessions, one from **R1** to **R6** and the other from **R6** to **R1**. Both LSPs are up.

Sample Output 3 from egress router **R6** shows that the LSP is up and the active route is the primary route. The LSP is now traversing the network along the expected path, from **R1** through **R3** to **R6**, and the reverse LSP, from **R6** through **R3** to **R1**.

## Verify the LSP

**Purpose** Typically, you use the **show mpls lsp extensive** command to verify the LSP. However for quick verification of the LSP state, use the **show mpls lsp** command. If the LSP is down, use the **extensive** option (**show mpls lsp extensive**) as a follow-up. If your network has numerous LSPs, you might consider specifying the name of the LSP, using the **name** option (**show mpls lsp name *name*** or **show mpls lsp name *name* extensive**).

**Action** To verify that the LSP is up, enter some or all of the following commands from the ingress router:

```
user@host> show mpls lsp
user@host> show mpls lsp extensive
user@host> show mpls lsp name name
user@host> show mpls lsp name name extensive
```

## Sample Output 1

```
user@R1> show mpls lsp
Ingress LSP: 1 sessions
To          From          State Rt ActivePath      P      LSPname
10.0.0.6    10.0.0.1    Dn     0  -
Total 1 displayed, Up 0, Down 1

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

user@R3> show mpls lsp
Ingress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

user@R6> show mpls lsp
Ingress LSP: 1 sessions
To          From          State Rt ActivePath      P      LSPname
10.0.0.1    10.0.0.6    Dn     0  -
Total 1 displayed, Up 0, Down 1
```

```
Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

```
Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

## Sample Output 2

```
user@R1> show mpls lsp extensive
Ingress LSP: 1 sessions
```

```
10.0.0.6
  From: 10.0.0.1, State: Dn, ActiveRoute: 0, LSPname: R1-to-R6
  ActivePath: (none)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  Primary                               State: Dn
    Will be enqueued for recomputation in 22 second(s).
    1 Nov  2 14:43:38  CSPF failed: no route toward 10.0.0.6 [175 times]
  Created: Tue Nov  2 13:18:39 2004
Total 1 displayed, Up 0, Down 1
```

```
Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

```
Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

```
user@R3> show mpls lsp extensive
Ingress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

```
Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

```
Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

```
user@R6> show mpls lsp extensive
Ingress LSP: 1 sessions
```

```
10.0.0.1
  From: 10.0.0.6, State: Dn, ActiveRoute: 0, LSPname: R6-to-R1
  ActivePath: (none)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  Primary                               State: Dn
    Will be enqueued for recomputation in 13 second(s).
    1 Nov  2 14:38:12  CSPF failed: no route toward 10.0.0.1 [177 times]
  Created: Tue Nov  2 13:12:22 2004
Total 1 displayed, Up 0, Down 1
```

```
Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

```
Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```



### Sample Output 3

```
user@R1> show mpls lsp name R1-to-R6
Ingress LSP: 1 sessions
To          From          State Rt ActivePath      P      LSPname
10.0.0.6    10.0.0.1    Dn    0  -              R1-to-R6
Total 1 displayed, Up 0, Down 1

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

### Sample Output 4

```
user@R1> show mpls lsp name R1-to-R6 extensive
Ingress LSP: 1 sessions

10.0.0.6
  From: 10.0.0.1, State: Dn, ActiveRoute: 0, LSPname: R1-to-R6
  ActivePath: (none)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  Primary          State: Dn
    Will be enqueued for recomputation in 10 second(s).
    1 Nov  2 14:51:53 CSPF failed: no route toward 10.0.0.6[192 times]
  Created: Tue Nov  2 13:18:39 2004
Total 1 displayed, Up 0, Down 1

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

**Meaning** Sample Output 1 shows a brief description of the state of the LSP for the ingress, transit, and egress routers. Output from ingress router **R1** and egress router **R6** shows that both LSPs are down, **R1-to-R6** and **R6-to-R1**. With the configured LSPs on **R1** and **R6**, we would expect egress LSP sessions on both **R1** and **R6**. In addition, transit router **R3** has no transit sessions.

Sample Output 2 shows all information about the LSPs, including all past state history and the reason why an LSP failed. Output from **R1** and **R6** indicates that there is no route to the destination because the Constrained Shortest Path First (CSPF) algorithm failed.

Sample Outputs 3 and 4 show examples of the output for the **show mpls lsp name** command with the **extensive** option. In this instance, the output is very similar to the **show mpls lsp** command because only one LSP is configured in the example network in [Figure 94 on page 923](#). However, in a large network with many LSPs configured, the results would be quite different between the two commands.

## Verify the LSP Route on the Transit Router

**Purpose** If the LSP is up, the LSP route should appear in the **mpls.0** routing table. MPLS maintains an MPLS path routing table (**mpls.0**), which contains a list of the next label-switched router in each LSP. This routing table is used on transit routers to route packets to the next router along an LSP. If routes are not present in the output for the transit router, check the MPLS protocol configuration on the ingress and egress routers.

**Action** To verify the LSP route on the transit router, enter the following command from the transit router:

```
user@host> show route table mpls.0
```

### Sample Output 1

```
user@R3> show route table mpls.0
mpls.0: 3 destinations, 3 routes (3 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both
0          *[MPLS/0] 16w2d 21:52:40, metric 1
            Receive
1          *[MPLS/0] 16w2d 21:52:40, metric 1
            Receive
2          *[MPLS/0] 16w2d 21:52:40, metric 1
            Receive
```

### Sample Output 2

```
user@R3> show route table mpls.0
mpls.0: 7 destinations, 7 routes (7 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both
0          *[MPLS/0] 16w2d 22:26:08, metric 1
            Receive
1          *[MPLS/0] 16w2d 22:26:08, metric 1
            Receive
2          *[MPLS/0] 16w2d 22:26:08, metric 1
            Receive
100864     *[RSVP/7] 00:07:23, metric 1
            > via so-0/0/2.0, label-switched-path R6-to-R1
100864(S=0) *[RSVP/7] 00:07:23, metric 1
            > via so-0/0/2.0, label-switched-path R6-to-R1
100880     *[RSVP/7] 00:07:01, metric 1
            > via so-0/0/3.0, label-switched-path R1-to-R6
100880(S=0) *[RSVP/7] 00:07:01, metric 1
            > via so-0/0/3.0, label-switched-path R1-to-R6
```

**Meaning** Sample Output 1 from transit router **R3** shows three route entries in the form of MPLS label entries. These MPLS labels are reserved MPLS labels defined in RFC 3032, and are always present in the **mpls.0** routing table, regardless of the state of the LSP. The incoming labels assigned by RSVP to the upstream neighbor are missing from the output, indicating that the LSP is down. For more information on MPLS label entries, see [“Checklist for Verifying LSP Use” on page 1058](#).

In contrast, Sample Output 2 shows the MPLS labels and routes for a correctly configured LSP. The three reserved MPLS labels are present, and the four other entries represent the incoming labels assigned by RSVP to the upstream neighbor. These four entries

represent two routes. There are two entries per route because the stack values in the MPLS header may be different. For each route, the second entry **100864 (S=0)** and **100880 (S=0)** indicates that the stack depth is not 1, and additional label values are included in the packet. In contrast, the first entry, **100864** and **100880** has an inferred S=1 value which indicates a stack depth of 1 and makes each label the last label in that particular packet. The dual entries indicate that this is the penultimate router. For more information on MPLS label stacking, see RFC 3032, *MPLS Label Stack Encoding*.

## Verify the LSP Route on the Ingress Router

**Purpose** Check whether the LSP route is included in the active entries in the **inet.3** routing table for the specified address.

**Action** To verify the LSP route, enter the following command from the ingress router:

```
user@host> show route destination
```

### Sample Output 1

```
user@R1> show route 10.0.0.6
inet.0 : 27 destinations, 27 routes (27 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both
10.0.0.6/32      *[IS-IS/18] 6d 01:41:37, metric 20
                  to 10.1.12.2 via so-0/0/0.0
                  > to 10.1.15.2 via so-0/0/1.0
                  to 10.1.13.2 via so-0/0/2.0

user@R6> show route 10.0.0.1

inet.0 : 28 destinations, 28 routes (28 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both
10.0.0.1/32      *[IS-IS/18] 5d 01:01:38, metric 20
                  to 10.1.56.1 via so-0/0/0.0
                  > to 10.1.26.1 via so-0/0/2.0
                  to 10.1.36.1 via so-0/0/3.0
```

### Sample Output 2

```
user@R1> show route 10.0.0.6
inet.0: 28 destinations, 28 routes (27 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both

10.0.0.6/32      *[IS-IS/18] 6d 02:13:42, metric 20
                  to 10.1.12.2 via so-0/0/0.0
                  > to 10.1.15.2 via so-0/0/1.0
                  to 10.1.13.2 via so-0/0/2.0

inet.3 : 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

10.0.0.6/32      *[RSVP/7] 00:08:07, metric 20
                  > via so-0/0/2.0, label-switched-path R1-to-R6

user@R6> show route 10.0.0.1

inet.0: 29 destinations, 29 routes (28 active, 0 holddown, 1 hidden)
+ = Active Route, - = Last Active, * = Both
```

```

10.0.0.1/32      *[IS-IS/18] 5d 01:34:03, metric 20
                  to 10.1.56.1 via so-0/0/0.0
                  > to 10.1.26.1 via so-0/0/2.0
                  to 10.1.36.1 via so-0/0/3.0

inet.3 : 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

10.0.0.1/32      *[RSVP/7] 00:10:39, metric 20
                  > via so-0/0/3.0, label-switched-path R6-to-R1

```

**Meaning** Sample Output 1 shows entries in the **inet.0** routing table only. The **inet.3** routing table is missing from the output because the LSP is not working. The **inet.0** routing table is used by interior gateway protocols (IGPs) and Border Gateway Protocol (BGP) to store routing information. In this case, the IGP is Intermediate System-to-Intermediate System (IS-IS). For more information on the **inet.0** routing table, see the *Junos MPLS Applications Configuration Guide*.

If the LSP was working, we would expect to see entries that include the LSP in the **inet.3** routing table. The **inet.3** routing table is used on ingress routers to route BGP packets to the destination egress router. BGP uses the **inet.3** routing table on the ingress router to help resolve next-hop addresses. BGP is configured in the example network shown in [Figure 94 on page 923](#).

Sample Output 2 shows output you should receive when the LSP is up. The output shows both the **inet.0** and **inet.3** routing tables, indicating that LSPs **R1-to-R6** and **R6-to-R1** are available.

## Verify MPLS Labels with the traceroute Command

**Purpose** Display the route packets take to a BGP destination where the BGP next hop for that route is the LSP egress address. By default, BGP uses the **inet.0** and the **inet.3** routing tables to resolve the next-hop address. When the next-hop address of the BGP route is not the router ID of the egress router, traffic is mapped to IGP routes, not to the LSP. Use the **traceroute** command as a debugging tool to determine whether the LSP is being used to forward traffic.

**Action** To verify MPLS labels, enter the following command from the ingress router:

```
user@host> traceroute hostname
```

### Sample Output 1

```

user@R1> traceroute 100.100.6.1
traceroute to 100.100.6.1 (100.100.6.1), 30 hops max, 40 byte packets
 1  10.1.12.2 (10.1.12.2)  0.627 ms  0.561 ms  0.520 ms
 2  10.1.26.2 (10.1.26.2)  0.570 ms !N  0.558 ms !N  4.879 ms !N

user@R6> traceroute 100.100.1.1
traceroute to 100.100.1.1 (100.100.1.1), 30 hops max, 40 byte packets
 1  10.1.26.1 (10.1.26.1)  0.630 ms  0.545 ms  0.488 ms
 2  10.1.12.1 (10.1.12.1)  0.551 ms !N  0.557 ms !N  0.526 ms !N

```

## Sample Output 2

```

user@R1> traceroute 100.100.6.1
to 100.100.6.1 (100.100.6.1), 30 hops max, 40 byte packets
 1 10.1.13.2 (10.1.13.2) 0.866 ms 0.746 ms 0.724 ms
    MPLS Label=100912 CoS=0 TTL=1 S=1
 2 10.1.36.2 (10.1.36.2) 0.577 ms !N 0.597 ms !N 0.546 ms !N

user@R6> traceroute 100.100.1.1
traceroute to 100.100.1.1 (100.100.1.1), 30 hops max, 40 byte packets
 1 10.1.36.1 (10.1.36.1) 0.802 ms 0.716 ms 0.688 ms
    MPLS Label=100896 CoS=0 TTL=1 S=1
 2 10.1.13.1 (10.1.13.1) 0.570 ms !N 0.568 ms !N 0.546 ms !N

```

**Meaning** Sample Output 1 shows that BGP traffic is not using the LSP, consequently MPLS labels do not appear in the output. Instead of using the LSP, BGP traffic is using the IGP (IS-IS, in the example network in [Figure 94 on page 923](#)) to reach the BGP next-hop LSP egress address. The Junos OS default behavior uses LSPs for BGP traffic when the BGP next hop equals the LSP egress address.

Sample Output 2 is an example of output for a correctly configured LSP. The output shows MPLS labels, indicating that BGP traffic is using the LSP to reach the BGP next hop.

## Verify MPLS Labels with the ping Command

**Purpose** When you ping a specific LSP, you check that echo requests are sent over the LSP as MPLS packets.

**Action** To verify MPLS labels, enter the following command from the ingress router to ping the egress router:

```
user@host> ping mpls rsvp lsp-name detail
```

For example:

```
user@R1> ping mpls rsvp R1-to-R6 detail
```

## Sample Output 1

```

user@R1> ping mpls rsvp R1-to-R6 detail
LSP R1-to-R6 - LSP has no active path, exiting.

user@R6> ping mpls rsvp R6-to-R1 detail
LSP R6-to-R1 - LSP has no active path, exiting.

```

## Sample Output 2

```

user@R1> traceroute 10.0.0.6
traceroute to 10.0.0.6 (10.0.0.6), 30 hops max, 40 byte packets
 1 10.1.15.2 (10.1.15.2) 0.708 ms 0.613 ms 0.576 ms
 2 10.0.0.6 (10.0.0.6) 0.763 ms 0.708 ms 0.700 ms

user@R1> ping mpls rsvp R1-to-R6 detail
Request for seq 1, to interface 69, label 100880
Reply for seq 1, return code: Egress-ok

```

```
Request for seq 2, to interface 69, label 100880
Reply for seq 2, return code: Egress-ok
Request for seq 3, to interface 69, label 100880
Reply for seq 3, return code: Egress-ok
Request for seq 4, to interface 69, label 100880
Reply for seq 4, return code: Egress-ok
Request for seq 5, to interface 69, label 100880
Reply for seq 5, return code: Egress-ok

--- lsping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss

user@R6> ping mpls rsvp R6-to-R1 detail
Request for seq 1, to interface 70, label 100864
Reply for seq 1, return code: Egress-ok
Request for seq 2, to interface 70, label 100864
Reply for seq 2, return code: Egress-ok
Request for seq 3, to interface 70, label 100864
Reply for seq 3, return code: Egress-ok
Request for seq 4, to interface 70, label 100864
Reply for seq 4, return code: Egress-ok
Request for seq 5, to interface 70, label 100864
Reply for seq 5, return code: Egress-ok

--- lsping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
```

**Meaning** Sample Output 1 shows that the LSP does not have an active path to forward echo requests, indicating that the LSP is down.

Sample Output 2 is an example of output you should receive when the LSP is up and forwarding packets.

---

## Take Appropriate Action

**Problem** **Description:** Depending on the error you encountered in your investigation, you must take the appropriate action to correct the problem. In this example, an interface is incorrectly configured at the `[edit protocols mpls]` hierarchy level on egress router **R6**.

**Solution** To correct the error in this example, follow these steps:

1. Activate the interface in the MPLS protocol configuration on egress router **R6**:

```
user@R6> edit
user@R6# edit protocols mpls
[edit protocols mpls]
user@R6# show
user@R6# activate interface so-0/0/3.0
```

2. Verify and commit the configuration:

```
[edit protocols mpls]
user@R6# show
user@R6# commit
```

**Sample Output**

```

user@R6> edit
Entering configuration mode

[edit]
user@R6# edit protocols mpls

[edit protocols mpls]
user@R6# show
label-switched-path R6-to-R1 {
    to 10.0.0.1;
}
inactive: interface so-0/0/0.0;
inactive: interface so-0/0/1.0;
inactive: interface so-0/0/2.0;
inactive: interface so-0/0/3.0; <<< Incorrectly configured interface

[edit protocols mpls]
user@R6# activate interface so-0/0/3

[edit protocols mpls]
user@R6# show
label-switched-path R6-to-R1 {
    to 10.0.0.1;
}
inactive: interface so-0/0/0.0;
inactive: interface so-0/0/1.0;
inactive: interface so-0/0/2.0;
interface so-0/0/3.0; <<< Correctly configured interface

[edit protocols mpls]
user@R6# commit
commit complete

```

**Meaning** The sample output shows that the incorrectly configured interface **so-0/0/3.0** on egress router **R6** is now activated at the **[edit protocols mpls]** hierarchy level. The LSP can now come up.

## Verify the LSP Again

**Purpose** After taking the appropriate action to correct the error, the LSP needs to be checked again to confirm that the problem in the BGP layer has been resolved.

**Action** To verify the LSP again, enter the following command from the ingress, transit, and egress routers:

```
user@host> show mpls lsp extensive
```

## Sample Output

```

user@R1> show mpls lsp extensive
Ingress LSP: 1 sessions

10.0.0.6
  From: 10.0.0.1, State: Up, ActiveRoute: 1, LSPname: R1-to-R6
  ActivePath: (primary)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4

```

```

*Primary                               State: Up
  Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 20)
10.1.13.2 S 10.1.36.2 S
  Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):

      10.1.13.2 10.1.36.2
    6 Nov  2 15:48:52 Selected as active path
    5 Nov  2 15:48:52 Record Route: 10.1.13.2 10.1.36.2
    4 Nov  2 15:48:52 Up
    3 Nov  2 15:48:52 Originate Call
    2 Nov  2 15:48:52 CSPF: computation result accepted
    1 Nov  2 15:48:22 CSPF failed: no route toward 10.0.0.6[308 times]
  Created: Tue Nov  2 13:18:39 2004
Total 1 displayed, Up 1, Down 0

Egress LSP: 1 sessions

10.0.0.1
  From: 10.0.0.6, LSPstate: Up , ActiveRoute: 0
  LSPname: R6-to-R1 , LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: -
  Resv style: 1 FF, Label in: 3, Label out: -
  Time left: 159, Since: Tue Nov  2 15:48:30 2004
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 39106 protocol 0
  PATH rcvfrom: 10.1.13.2 (so-0/0/2.0) 10 pkts
  Adspec: received MTU 1500
  PATH sentto: localclient
  RESV rcvfrom: localclient
  Record route: 10.1.36.2 10.1.13.2 <self>
Total 1 displayed, Up 1, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

user@R3> show mpls lsp extensive
Ingress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 2 sessions

10.0.0.1
  From: 10.0.0.6, LSPstate: Up, ActiveRoute: 1
  LSPname: R6-to-R1, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 3
  Resv style: 1 FF, Label in: 100864, Label out: 3
  Time left: 123, Since: Tue Nov  2 15:35:41 2004
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 39106 protocol 0
  PATH rcvfrom: 10.1.36.2 (so-0/0/3.0) 10 pkts
  Adspec: received MTU 1500 sent MTU 1500
  PATH sentto: 10.1.13.1 (so-0/0/2.0) 10 pkts
  RESV rcvfrom: 10.1.13.1 (so-0/0/2.0) 10 pkts
  Explct route: 10.1.13.1
  Record route: 10.1.36.2 <self> 10.1.13.1

```



## 10.0.0.6

From: 10.0.0.1, LSPstate: Up, ActiveRoute: 1  
 LSPname: R1-to-R6, LSPpath: Primary  
 Suggested label received: -, Suggested label sent: -  
 Recovery label received: -, Recovery label sent: 3  
 Resv style: 1 FF, Label in: 100880, Label out: 3  
 Time left: 145, Since: Tue Nov 2 15:36:03 2004  
 Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500  
 Port number: sender 1 receiver 48015 protocol 0  
 PATH rcvfrom: 10.1.13.1 (so-0/0/2.0) 10 pkts  
 Adspec: received MTU 1500 sent MTU 1500  
 PATH sentto: 10.1.36.2 (so-0/0/3.0) 10 pkts  
 RESV rcvfrom: 10.1.36.2 (so-0/0/3.0) 10 pkts  
 Explct route: 10.1.36.2  
 Record route: 10.1.13.1 <self> 10.1.36.2  
 Total 2 displayed, Up 2, Down 0

user@R6> show mpls lsp extensive

Ingress LSP: 1 sessions

## 10.0.0.1

From: 10.0.0.6, State: Up, ActiveRoute: 1, LSPname: R6-to-R1  
 ActivePath: (primary)  
 LoadBalance: Random  
 Encoding type: Packet, Switching type: Packet, GPID: IPv4  
 \*Primary State: Up  
 Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 20)  
 10.1.36.1 S 10.1.13.1 S  
 Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):  
  
 10.1.36.1 10.1.13.1  
 6 Nov 2 15:41:44 Selected as active path  
 5 Nov 2 15:41:44 Record Route: 10.1.36.1 10.1.13.1  
 4 Nov 2 15:41:44 Up  
 3 Nov 2 15:41:44 Originate Call  
 2 Nov 2 15:41:44 CSPF: computation result accepted  
 1 Nov 2 15:41:14 CSPF failed: no route toward 10.0.0.1[306 times]  
 Created: Tue Nov 2 13:12:21 2004  
 Total 1 displayed, Up 1, Down 0

Egress LSP: 1 sessions

## 10.0.0.6

From: 10.0.0.1, LSPstate: Up, ActiveRoute: 0  
 LSPname: R1-to-R6, LSPpath: Primary  
 Suggested label received: -, Suggested label sent: -  
 Recovery label received: -, Recovery label sent: -  
 Resv style: 1 FF, Label in: 3, Label out: -  
 Time left: 157, Since: Tue Nov 2 15:42:06 2004  
 Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500  
 Port number: sender 1 receiver 48015 protocol 0  
 PATH rcvfrom: 10.1.36.1 (so-0/0/3.0) 11 pkts  
 Adspec: received MTU 1500  
 PATH sentto: localclient  
 RESV rcvfrom: localclient  
 Record route: 10.1.13.1 10.1.36.1 <self>  
 Total 1 displayed, Up 1, Down 0

Transit LSP: 0 sessions

Total 0 displayed, Up 0, Down 0

**Meaning** Sample Output 1 from ingress router **R1** shows that LSP **R1-to-R6** has an active route to **R6** and the state is up.

Sample Output 2 from transit router **R3** shows that there are two transit LSP sessions, one from **R1** to **R6** and the other from **R6** to **R1**. Both LSPs are up.

Sample Output 3 from egress router **R6** shows that the LSP is up and the active route is the primary route. The LSP is now traversing the network along the expected path, from **R1** through **R3** to **R6**, and the reverse LSP, from **R6** through **R3** to **R1**.

## Checklist for Working with the Layered MPLS Troubleshooting Model

**Problem** **Description:** This checklist provides a link to more detailed information about the layered Multiprotocol Label Switching network.

**Solution** [Table 22 on page 948](#) provides commands for working with the layered MPLS troubleshooting model.

**Table 22: Checklist for Working with the Layered MPLS Troubleshooting Model**



Tasks	Command or Action
<a href="#">“Understanding the Layered MPLS Troubleshooting Model” on page 948</a>	<pre>show mpls lsp show mpls lsp extensive show mpls lsp name <i>name</i> show mpls lsp name <i>name</i> extensive</pre>

## Understanding the Layered MPLS Troubleshooting Model

**Problem** **Description:** The layered MPLS troubleshooting model is a disciplined approach to investigating problems with an MPLS network. [Figure 95 on page 949](#) illustrates the layers in the model, and the commands you can use to structure your investigation. Because of the complexity of the MPLS network, you can obtain much better results from your investigations if you progress through the layers and verify the functioning of each layer on the ingress, egress, and transit routers before moving on to the next layer.

**Solution** [Figure 95 on page 949](#) shows the layered MPLS troubleshooting model that you can use to troubleshoot problems with your MPLS network.

Figure 95: Layered MPLS Network Troubleshooting Model

<b>BGP Layer</b>	tracroute <i>host-name</i> show bgp summary show configuration protocols bgp show route <i>destination-prefix</i> detail show route receive protocol bgp <i>neighbor-address</i>
<b>MPLS Layer</b>	show mpls lsp show mpls lsp extensive show route table mpls.0 show route <i>address</i> tracroute <i>address</i> ping mpls rsvp <i>Lsp-name</i> detail
<b>RSVP Layer</b>	show rsvp session show rsvp neighbor show rsvp interface
<div> <b>IGP and IP Layers Functioning</b> </div>	
<b>OSPF Layer</b> show ospf neighbor show configuration protocols ospf show ospf interface	<b>IS-IS Layer</b> show isis adjacency show configuration protocols isis show isis interface
<b>IP Layer</b> show ospf neighbor extensive show interfaces terse	<b>IP Layer</b> show isis adjacency extensive show interfaces terse
<b>Data Link Layer</b>	show interfaces extensive <i>JUNOS Interfaces Network Operations Guide</i>
<b>Physical Layer</b>	show interfaces show interfaces terse ping <i>host</i>

9015528

As you move from one layer of the model to the next, you verify the correct functioning of a different component of the MPLS network and eliminate that layer as the source of the problem.

**Physical Layer** When you investigate the physical layer, you check that the routers are connected, and the interfaces are up and configured correctly. To check the physical layer, enter the **show interfaces**, **show interfaces terse**, and **ping** commands. If there is a problem in the physical layer, take appropriate action to fix it; then check that the LSP is operating as expected using the **show mpls lsp extensive** command. For more information on checking the physical layer, see [“Checklist for Verifying the Physical Layer” on page 955](#).

**Data Link Layer** When you investigate the data link layer, you check the encapsulation mode, for example, Point-to-Point Protocol (PPP) or Cisco High-Level Data Link Control (HDLC); PPP options, for example, header encapsulation; frame check sequence (FCS) size; and whether keepalive frames are enabled or disabled. To check the data link layer, enter the **show interfaces extensive** command. If there is a problem in the data link layer, take appropriate action to fix it; then check that the LSP is operating as expected using the **show mpls lsp extensive** command. For more information on checking the data link layer, see [“Checking the Data Link Layer” on page 968](#) and the *Junos Interfaces Operations Guide*.

**IP Layer** When you investigate the IP layer, you verify that interfaces have correct IP addressing, and that the interior gateway protocol (IGP) neighbor adjacencies are established. To check the IP layer, enter the **show interfaces terse**, **show ospf neighbor extensive**, and **show isis adjacency extensive** commands. If there is a problem in the IP layer, take

appropriate action to fix it; then check that the LSP is operating as expected using the **show mpls lsp extensive** command.

- IGP Layer** When you investigate the IGP layer, you verify that the the Open Shortest Path First (OSPF) or Intermediate System-to-Intermediate System (IS-IS) protocols are configured and running correctly.
- If you have the OSPF protocol configured, you must check the IP layer first, and then the OSPF configuration. When you investigate the OSPF layer, you check that the protocol, interfaces, and traffic engineering are configured correctly. To check the OSPF layer, enter the **show configuration protocols ospf** and **show ospf interface** commands. If the problem exists in the OSPF layer, take appropriate action to fix it; then check that the LSP is operating as expected using the **show mpls lsp extensive** command. For more information about checking the OSPF layer, see [“Verifying the OSPF Protocol” on page 1009](#).
  - If you have the IS-IS protocol configured, because IS-IS and IP are independent of each other, it doesn’t matter which one you check first. When you check the IS-IS configuration, you verify that IS-IS adjacencies are up, and the interfaces and IS-IS protocol are configured correctly. To check the IS-IS layer, enter the **show isis adjacency**, **show configuration protocols isis**, and **show isis interfaces** commands. If the problem exists in the IS-IS layer, take appropriate action to fix it; then check that the LSP is operating as expected using the **show mpls lsp extensive** command. For more information about checking the IS-IS layer, see *Verifying the IS-IS Protocol*.



**NOTE:** The IS-IS protocol has traffic engineering enabled by default.

---

- RSVP and MPLS Layers** After you have both the IP and IGP layers functioning and the problem is still not solved, you can begin to check the Resource Reservation Protocol (RSVP) and MPLS layers to determine if the problem is in one of these layers.
- When you investigate the RSVP layer, you are checking that dynamic RSVP signaling is occurring as expected, neighbors are connected, and interfaces are configured correctly for RSVP. To check the RSVP layer, enter the **show rsvp session**, **show rsvp neighbor**, and **show rsvp interface** commands. If there is a problem in the RSVP layer, take appropriate action to fix it; then check that the LSP is operating as expected using the **show mpls lsp extensive** command.
  - When you investigate the MPLS layer, you are checking whether the LSP is up and functioning correctly. To check the MPLS layer, enter the **show mpls lsp**, **show mpls lsp extensive**, **show route table mpls.0**, **show route address**, **traceroute address**, and **ping mpls rsvp lsp-name detail** commands. If there is a problem in the MPLS layer, take appropriate action to fix it; then check that the LSP is operating as expected using the **show mpls lsp extensive** command.

- BGP Layer** If the problem persists after you have checked the RSVP and MPLS layers, you must verify that the Border Gateway Protocol (BGP) is working correctly. There is no point in


checking the BGP layer unless the LSP is established because BGP uses the MPLS LSP to forward traffic. When you check the BGP layer, you verify that the route is present and active, and more importantly, you ensure that the next hop is the LSP. To check the BGP layer, enter the **traceroute *host-name*, show bgp summary, show configuration protocols bgp, show route destination-prefix detail, and show route receive protocol bgp neighbor-address** commands. For more information on checking the BGP layer, see *Checking the BGP Layer*.

In reality, you could start at any level of the MPLS model to investigate a problem with your MPLS network. However, a disciplined approach, as the one described here, produces more consistent and reliable results.

Figure 96 on page 951 illustrates the basic network topology used in the following topics that demonstrate how to troubleshoot an MPLS network:

- [Checklist for Verifying the Physical Layer on page 955](#)
- [Checklist for Checking the Data Link Layer on page 967](#)
- [Checklist for Verifying the IP and IGP Layers on page 986](#)
- [Checklist for Checking the RSVP Layer on page 1033](#)
- [Checklist for Checking the MPLS Layer on page 921](#)
- [Checklist for Checking the BGP Layer](#)

Figure 96: MPLS Basic Network Topology Example

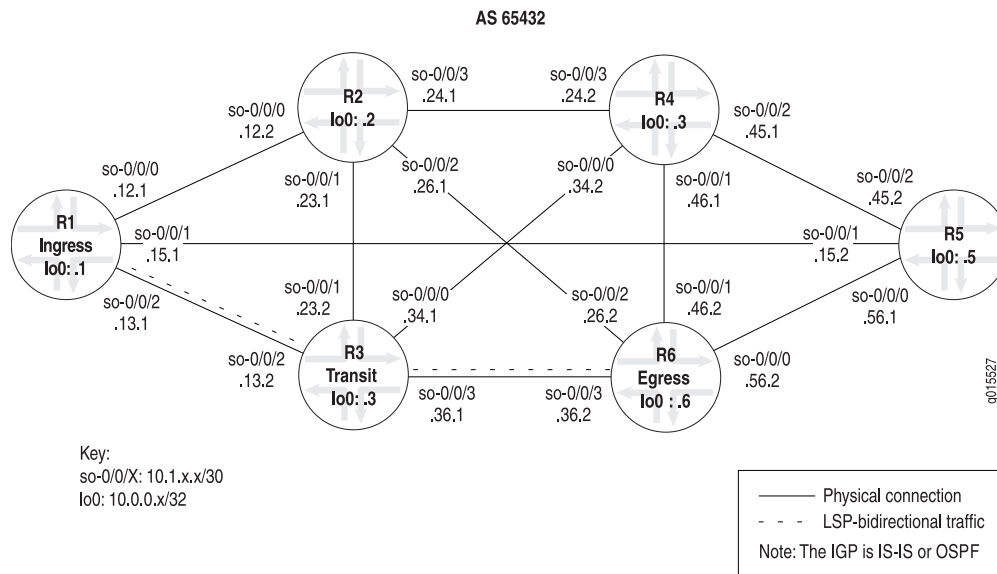

The MPLS network consists of the following components:

- Router-only network with SONET interfaces
- MPLS protocol enabled on all routers, with interfaces selectively deactivated to illustrate a particular problem scenario

- All interfaces configured with MPLS
- A full-mesh IBGP topology, using AS 65432
- IS-IS or OSPF as the underlying IGP, using one level (IS-IS Level 2) or one area (OSPF area 0.0.0.0)
- A **send-statics** policy on routers R1 and R6, allowing a new route to be advertised into the network
- Two LSPs between routers R1 and R6, allowing for bidirectional traffic.

After you have configured an LSP, it is considered best practice to issue the **show mpls lsp** command to verify that the LSP is up, and to investigate further if you find an error message in the output. The error message can indicate a problem at any layer of the MPLS network.

The LSPs can be ingress, transit, or egress. Use the **show mpls lsp** command for quick verification of the LSP state, with the **extensive** option (**show mpls lsp extensive**) as a follow-up if the LSP is down. If your network has numerous LSPs, you might consider specifying the name of the LSP, using the **name** option (**show mpls lsp name *name*** or **show mpls lsp name *name* extensive**).

**Action** To begin the investigation of an error in your MPLS network, from the ingress router, enter some or all of the following Junos OS command-line interface (CLI) operational mode commands:

```
user@host> show mpls lsp
user@host> show mpls lsp extensive
user@host> show mpls lsp name name
user@host> show mpls lsp name name extensive
```

**Sample Output 1** user@R1> show mpls lsp

Ingress LSP: 1 sessions

To	From	State	Rt	ActivePath	P	LSPname
10.0.0.6	10.0.0.1	Up	1		*	R1-to-R6

Total 1 displayed, Up 1, Down 0

Egress LSP: 1 sessions

To	From	State	Rt	Style	Labelin	Labelout	LSPname
10.0.0.1	10.0.0.6	Up	0	1 FF	3		- R6-to-R1

Total 1 displayed, Up 1, Down 0

Transit LSP: 0 sessions

Total 0 displayed, Up 0, Down 0

**Sample Output 2** user@R1> show mpls lsp extensive

Ingress LSP: 1 sessions

10.0.0.6

From: 10.0.0.1, State: Up, ActiveRoute: 1, LSPname: R1-to-R6

ActivePath: (primary)

LoadBalance: Random

Encoding type: Packet, Switching type: Packet, GPID: IPv4

\*Primary State: Up

Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 20)

10.1.13.2 S 10.1.36.2 S

Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):

10.1.13.2 10.1.36.2

30 Dec 28 13:47:29 Selected as active path

29 Dec 28 13:47:29 Record Route: 10.1.13.2 10.1.36.2

28 Dec 28 13:47:29 Up

27 Dec 28 13:47:29 Originate Call

26 Dec 28 13:47:29 CSPF: computation result accepted

25 Dec 28 13:46:59 CSPF failed: no route toward 10.0.0.6

24 Dec 28 13:46:39 Deselected as active

23 Dec 28 13:46:39 CSPF failed: no route toward 10.0.0.6

22 Dec 28 13:46:39 Clear Call

21 Dec 28 13:46:39 ResvTear received

20 Dec 28 13:46:39 Down

19 Dec 28 13:46:39 10.1.13.2: Session preempted

18 Dec 28 13:42:07 Selected as active path

17 Dec 28 13:42:07 Record Route: 10.1.13.2 10.1.36.2

16 Dec 28 13:42:07 Up

15 Dec 28 13:42:07 Originate Call

14 Dec 28 13:42:07 CSPF: computation result accepted

13 Dec 28 13:41:37 CSPF failed: no route toward 10.0.0.6

12 Dec 28 13:41:16 Deselected as active

11 Dec 28 13:41:16 CSPF failed: no route toward 10.0.0.6

10 Dec 28 13:41:16 Clear Call

9 Dec 28 13:41:16 ResvTear received

8 Dec 28 13:41:16 Down

7 Dec 28 13:41:16 10.1.13.2: Session preempted

6 Dec 13 11:50:15 Selected as active path

5 Dec 13 11:50:15 Record Route: 10.1.13.2 10.1.36.2

4 Dec 13 11:50:15 Up

3 Dec 13 11:50:15 Originate Call

2 Dec 13 11:50:15 CSPF: computation result accepted

1 Dec 13 11:49:45 CSPF failed: no route toward 10.0.0.6[6 times]

---(more)---[abort]

**Sample Output 3**

```

user@R1> show mpls lsp name R1-to-R6
Ingress LSP: 1 sessions
To          From          State Rt ActivePath      P      LSPName
10.0.0.6    10.0.0.1    Up    1
Total 1 displayed, Up 1, Down 0

Egress LSP: 1 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

**Sample Output 4**

```

user@R1> show mpls lsp name R1-to-R6 extensive
Ingress LSP: 1 sessions

10.0.0.6
  From: 10.0.0.1, State: Up, ActiveRoute: 1, LSPName: R1-to-R6
  ActivePath: (primary)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary                               State: Up
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 20)
    10.1.13.2 S 10.1.36.2 S
      Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):

          10.1.13.2 10.1.36.2
30 Dec 28 13:47:29 Selected as active path
29 Dec 28 13:47:29 Record Route: 10.1.13.2 10.1.36.2
28 Dec 28 13:47:29 Up
27 Dec 28 13:47:29 Originate Call
26 Dec 28 13:47:29 CSPF: computation result accepted
25 Dec 28 13:46:59 CSPF failed: no route toward 10.0.0.6
24 Dec 28 13:46:39 Deselected as active
23 Dec 28 13:46:39 CSPF failed: no route toward 10.0.0.6
22 Dec 28 13:46:39 Clear Call
21 Dec 28 13:46:39 ResvTear received
20 Dec 28 13:46:39 Down
19 Dec 28 13:46:39 10.1.13.2: Session preempted
18 Dec 28 13:42:07 Selected as active path
17 Dec 28 13:42:07 Record Route: 10.1.13.2 10.1.36.2
16 Dec 28 13:42:07 Up
15 Dec 28 13:42:07 Originate Call
14 Dec 28 13:42:07 CSPF: computation result accepted
13 Dec 28 13:41:37 CSPF failed: no route toward 10.0.0.6
12 Dec 28 13:41:16 Deselected as active
11 Dec 28 13:41:16 CSPF failed: no route toward 10.0.0.6
10 Dec 28 13:41:16 Clear Call
9 Dec 28 13:41:16 ResvTear received
8 Dec 28 13:41:16 Down
7 Dec 28 13:41:16 10.1.13.2: Session preempted
6 Dec 13 11:50:15 Selected as active path
5 Dec 13 11:50:15 Record Route: 10.1.13.2 10.1.36.2
4 Dec 13 11:50:15 Up
3 Dec 13 11:50:15 Originate Call
2 Dec 13 11:50:15 CSPF: computation result accepted
1 Dec 13 11:49:45 CSPF failed: no route toward 10.0.0.6[6 times]
Created: Mon Dec 13 11:47:19 2004
Total 1 displayed, Up 1, Down 0

```



Egress LSP: 1 sessions  
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions  
Total 0 displayed, Up 0, Down 0

**Meaning** The sample output from the ingress router **R1** shows that the label-switched path is traversing the network as intended, from **R1** through **R3** to **R6**, and another LSP in the reverse direction, from **R6** through **R3** to **R1**.

If your network has numerous LSPs, you might consider using the **show mpls lsp** command for quick verification of the LSP state, and the **show mpls lsp name *name* extensive** command to continue your investigation if you find that the LSP is down.

For more information about the status and statistics of the **show mpls lsp** command, see “[Checklist for Determining LSP Status](#)” on page 1056. For more information on the availability and valid use of an LSP, see “[Checklist for Verifying LSP Use](#)” on page 1058.

In all the following topics, the network topology is broken at different layers of the network so that you can investigate various MPLS network problems. The problems presented are not inclusive. Instead, the problems serve to illustrate one possible process of investigation into the different layers of the troubleshooting model.

- Related Documentation**
- [Verifying the Physical Layer on page 956](#)
  - [Checking the Data Link Layer on page 968](#)
  - [Verifying the IP and IGP Layers on page 988](#)
  - [Checking the RSVP Layer on page 1034](#)
  - [Checking the MPLS Layer on page 921](#)
  - [Checking the BGP Layer](#)

## Checklist for Verifying the Physical Layer

**Problem Description:** This checklist provides the steps and commands for investigating a problem at the physical layer of a Multiprotocol Label Switching (MPLS) network. The checklist provides links to an overview of verifying the physical layer and more detailed information about the commands used to investigate the problem.

**Solution** [Table 23 on page 955](#) provides commands for verifying the physical layer.

**Table 23: Checklist for Verifying the Physical Layer**

Tasks	Command or Action
<b>“Verifying the Physical Layer” on page 956</b>	
1. <a href="#">Verify the LSP on page 958</a>	<b>show mpls lsp extensive</b>
2. <a href="#">Verify Router Connection on page 959</a>	<b>ping <i>host</i></b>

Table 23: Checklist for Verifying the Physical Layer (*continued*)

Tasks	Command or Action
3. <a href="#">Verify Interfaces on page 959</a>	<b>show interfaces terse</b> <b>show configuration interfaces <i>type-fpc/pic/port</i></b>
4. <a href="#">Take Appropriate Action on page 960</a>	<p>The following sequence of commands addresses the specific problem described in this topic:</p> <p><b>[edit interfaces <i>type-fpc/pic/port</i>]</b>  <b>set family mpls</b>  <b>show</b>  <b>commit</b></p>
5. <a href="#">Verify the LSP Again on page 961</a>	<b>show mpls lsp extensive</b>

## Verifying the Physical Layer

**Purpose** After you have configured the LSP, issued the **show mpls lsp extensive** command, and determined that there is an error, you can start investigating the problem at the physical layer of the network.

Figure 97 on page 956 illustrates the physical layer of the layered MPLS model.

Figure 97: Verifying the Physical Layer

<b>BGP Layer</b>	<traceroute <i="">host-name  show bgp summary  show configuration protocols bgp  show route <i>destination-prefix</i> detail  show route receive protocol bgp <i>neighbor-address</i> </traceroute>
<b>MPLS Layer</b>	show mpls lsp show mpls lsp extensive show route table mpls.0 show route <i>address</i> traceroute <i>address</i> ping mpls rsvp <i>lsp-name</i> detail
<b>RSVP Layer</b>	show rsvp session show rsvp neighbor show rsvp interface
<div> <div>↙</div> <div>IGP and IP Layers Functioning</div> <div>↘</div> </div>	
<b>OSPF Layer</b>	<b>IS-IS Layer</b>
show ospf neighbor show configuration protocols ospf show ospf interface	show isis adjacency show configuration protocols isis show isis interface
<b>IP Layer</b>	<b>IP Layer</b>
show ospf neighbor extensive show interfaces terse	show isis adjacency extensive show interfaces terse
<b>Data Link Layer</b>	show interfaces extensive <i>"JUNOS Interfaces Operations Guide"</i>
<b>Physical Layer</b>	show interfaces show interfaces terse ping <i>host</i>


9015543

With this layer, you must ensure that the routers are connected, and that the interfaces are up and configured correctly on the ingress, egress, and transit routers.

If the network is not functioning at this layer, the label-switched path (LSP) does not work as configured.

Figure 98 on page 957 illustrates the MPLS network and the problem described in this topic.

Figure 98: MPLS Network Broken at the Physical Layer

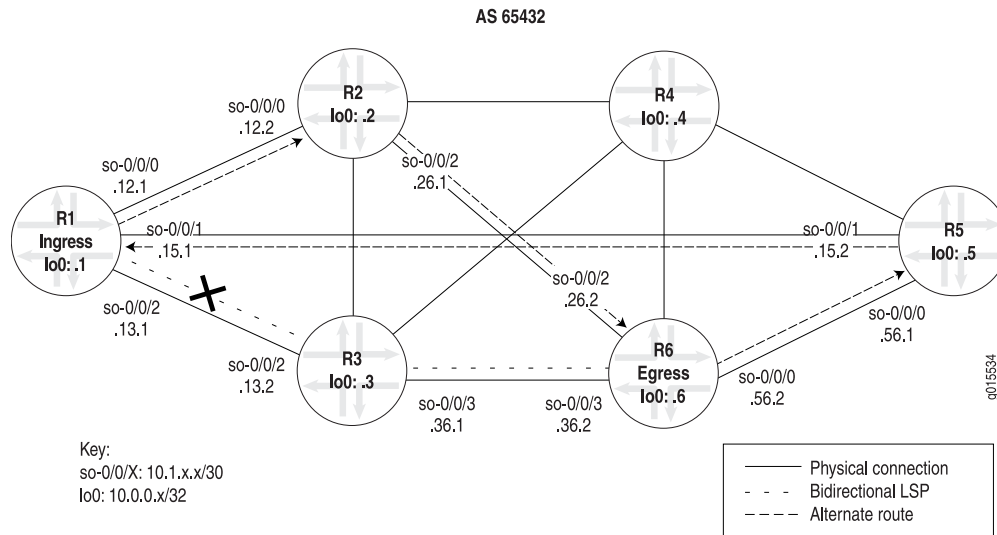

The network shown in Figure 98 on page 957 is a fully meshed configuration where every directly connected interface can receive and send packets to every other similar interface. The LSP in this network is configured to run from ingress router R1, through transit router R3, to egress router R6. In addition, a reverse LSP is configured to run from R6 through R3 to R1, creating bidirectional traffic.

However, in this example, traffic does not use the configured LSP. Instead traffic uses the alternate route from R1 through R2 to R6, and in the reverse direction, from R6 through R5 to R1.

When you become aware of a situation where an alternate route is used rather than the configured LSP, verify that the physical layer is functioning correctly. You might find that routers are not connected, or that interfaces are not up and configured correctly on the ingress, egress, or transit routers.

The cross shown in Figure 98 on page 957 indicates where the LSP is broken because of a configuration error on ingress router R1.

To check the physical layer, follow these steps:

1. [Verify the LSP on page 958](#)
2. [Verify Router Connection on page 959](#)
3. [Verify Interfaces on page 959](#)

4. [Take Appropriate Action on page 960](#)
5. [Verify the LSP Again on page 961](#)

## Verify the LSP

**Purpose** Typically, you use the **show mpls lsp extensive** command to verify the LSP. However, for quick verification of the LSP state, use the **show mpls lsp** command. If the LSP is down, use the **extensive** option (**show mpls lsp extensive**) as a follow-up. If your network has numerous LSPs, you might consider specifying the name of the LSP, using the **name** option (**show mpls lsp name *name*** or **show mpls lsp name *name* extensive**).

**Action** To determine whether the LSP is up, enter the following command from the ingress router:

```
user@ingress-router> show mpls lsp extensive
```

## Sample Output

```
user@R1> show mpls lsp extensive
Ingress LSP: 1 sessions

10.0.0.6
  From: 10.0.0.1, State: Up, ActiveRoute: 1, LSPname: R1-to-R6
  ActivePath: (primary)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary State: Up
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 20)
  10.1.12.2 S 10.1.26.2 S
    Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):

      10.1.12.2 10.1.26.2
    99 Sep 18 14:19:04 CSPF: computation result accepted
    98 Sep 18 14:19:04 CSPF: link down/deleted
    10.1.13.1(R1.00/10.0.0.1)->10.1.13.2(R3.00/10.0.0.3)
    97 Sep 18 14:19:01 Record Route: 10.1.12.2 10.1.26.2
    96 Sep 18 14:19:01 Up
    95 Sep 18 14:19:01 Clear Call
    94 Sep 18 14:19:01 CSPF: computation result accepted
    93 Sep 18 14:19:01 MPLS label allocation failure
    92 Sep 18 14:19:01 Down
    91 Aug 17 12:22:52 Selected as active path
    90 Aug 17 12:22:52 Record Route: 10.1.13.2 10.1.36.2
    89 Aug 17 12:22:52 Up
    [...Output truncated...]
    Created: Sat Jul 10 18:18:44 2004
Total 1 displayed, Up 1, Down 0

Egress LSP: 1 sessions

10.0.0.1
  From: 10.0.0.6, LSPstate: Up, ActiveRoute: 0
  LSPname: R6-to-R1, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: -
  Resv style: 1 FF, Label in: 3, Label out: -
  Time left: 144, Since: Tue Aug 17 12:23:14 2004
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
```

```

Port number: sender 1 receiver 39024 protocol 0
PATH rcvfrom: 10.1.15.2 (so-0/0/1.0) 67333 pkts
Adspec: received MTU 1500
PATH sentto: localclient
RESV rcvfrom: localclient
Record route: 10.1.56.2 10.1.15.2 <self>
Total 1 displayed, Up 1, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

**Meaning** The sample output from ingress router **R1** shows that the LSP is using an alternate path rather than the configured path. The configured path for the LSP is **R1** through **R3** to **R6**, and for the reverse LSP, **R6** through **R3** to **R1**. The alternate path used by the LSP is **R1** through **R2** to **R6**, and for the reverse LSP, **R6** through **R5** to **R1**.

## Verify Router Connection

**Purpose** Confirm that the appropriate ingress, transit, and egress routers are functioning by examining whether the packets have been received and transmitted with 0% packet loss.

**Action** To determine that the routers are connected, enter the following command from the ingress and transit routers:

```
user@host> ping host
```

## Sample Output

```

user@R1> ping 10.0.0.3 count 3
PING 10.0.0.3 (10.0.0.3): 56 data bytes
64 bytes from 10.0.0.3: icmp_seq=0 ttl=254 time=0.859 ms
64 bytes from 10.0.0.3: icmp_seq=1 ttl=254 time=0.746 ms
64 bytes from 10.0.0.3: icmp_seq=2 ttl=254 time=0.776 ms

--- 10.0.0.3 ping statistics ---
3 packets transmitted, 3 packets received, 0% packet loss
round-trip min/avg/max/stddev = 0.746/0.794/0.859/0.048 ms

user@R3> ping 10.0.0.6 count 3
PING 10.0.0.6 (10.0.0.6): 56 data bytes
64 bytes from 10.0.0.6: icmp_seq=0 ttl=255 time=0.968 ms
64 bytes from 10.0.0.6: icmp_seq=1 ttl=255 time=3.221 ms
64 bytes from 10.0.0.6: icmp_seq=2 ttl=255 time=0.749 ms

--- 10.0.0.6 ping statistics ---
3 packets transmitted, 3 packets received, 0% packet loss
round-trip min/avg/max/stddev = 0.749/1.646/3.221/1.117 ms

```

**Meaning** The sample output shows that ingress router **R1** is receiving packets from transit router **R3**, and that the transit router is receiving packets from the egress router. Therefore, the routers in the LSP are connected.

## Verify Interfaces

**Purpose** Confirm that the interfaces are configured correctly with the **family mpls** statement.

**Action** To determine that the relevant interfaces are up and configured correctly, enter the following commands from the ingress, transit, and egress routers:

```
user@host> show interfaces terse
user@host> show configuration interfaces type-fpc/pic/port
```

### Sample Output

```
user@R1> show interfaces so* terse
Interface      Admin Link Proto Local Remote
so-0/0/0       up   up   inet  10.1.12.1/30
so-0/0/0.0     up   up   inet  10.1.12.1/30
               iso
               mpls
so-0/0/1       up   up   inet  10.1.15.1/30
so-0/0/1.0     up   up   inet  10.1.15.1/30
               iso
               mpls
so-0/0/2       up   up   inet  10.1.13.1/30
so-0/0/2.0     up   up   inet  10.1.13.1/30
               iso  <<< family mpls is missing
so-0/0/3       up   down
```

```
user@R1> show configuration interfaces so-0/0/2
unit 0 {
  family inet {
    address 10.1.13.1/30;
  }
  family iso; <<< family mpls is missing
}
```

**Meaning** The sample output shows that interface **so-0/0/2.0** on the ingress router does not have the **family mpls** statement configured at the **[edit interfaces type-fpc/pic/port]** hierarchy level, indicating that the interface is incorrectly configured to support the LSP. The LSP is configured correctly at the **[edit protocols mpls]** hierarchy level.

The output from the transit and egress routers (not shown) shows that the interfaces on those routers are configured correctly.

### Take Appropriate Action

**Problem Description:** Depending on the error you encountered in your investigation, you must take the appropriate action to correct the problem. In the example below, the **family mpls** statement, which was missing, is included in the configuration of ingress router **R1**.

**Solution** To correct the error in this example, enter the following commands:

```
[edit interfaces type-fpc/pic/port]
user@R1# set family mpls
user@R1# show
user@R1# commit
```

**Sample Output** [edit interfaces so-0/0/2 unit 0]  
user@R1# **set family mpls**

```
[edit interfaces so-0/0/2 unit 0]
user@R1# show
family inet {
    address 10.1.13.1/30;
}
family iso;
family mpls;
```

```
[edit interfaces so-0/0/2 unit 0]
user@R1# commit
commit complete
```

**Meaning** The sample output from ingress router **R1** shows that the **family mpls** statement is configured correctly for interface **so-0/0/2.0**, and that the LSP is now functioning as originally configured.

## Verify the LSP Again

**Purpose** After taking the appropriate action to correct the error, the LSP needs to be checked again to confirm that the problem in the physical layer has been resolved.

**Action** To verify that the LSP is up and traversing the network as expected, enter the following command:

```
user@host> show mpls lsp extensive
```

## Sample Output 1

```
user@R1> show mpls lsp extensive
Ingress LSP: 1 sessions
```

```
10.0.0.6
  From: 10.0.0.1, State: Up, ActiveRoute: 1, LSPname: R1-to-R6
  ActivePath: (primary)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary State: Up
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 20)
    10.1.13.2 S 10.1.36.2 S
      Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):

        10.1.13.2 10.1.36.2
        112 Sep 21 16:27:33 Record Route: 10.1.13.2 10.1.36.2
        111 Sep 21 16:27:33 Up
        110 Sep 21 16:27:33 CSPF: computation result accepted
        109 Sep 21 16:27:33 CSPF: link down/deleted
        10.1.12.1(R1.00/10.0.0.1)->10.1.12.2(R2.00/10.0.0.2)
        108 Sep 21 16:27:33 CSPF: link down/deleted
        10.1.15.1(R1.00/10.0.0.1)->10.1.15.2(R5.00/10.0.0.5)
        [Output truncated...]
        Created: Sat Jul 10 18:18:44 2004
        Total 1 displayed, Up 1, Down 0

Egress LSP: 1 sessions
```

```
10.0.0.1
  From: 10.0.0.6, LSPstate: Up, ActiveRoute: 0
  LSPname: R6-to-R1, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: -
  Resv style: 1 FF, Label in: 3, Label out: -
  Time left: 149, Since: Tue Sep 21 16:29:43 2004
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 2 receiver 39024 protocol 0
  PATH rcvfrom: 10.1.13.2 (so-0/0/2.0) 7 pkts
  Adspec: received MTU 1500
  PATH sentto: localclient
  RESV rcvfrom: localclient
  Record route: 10.1.36.2 10.1.13.2 <self>
Total 1 displayed, Up 1, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

## Sample Output 2

```
[edit protocols mpls]
user@R1# show
label-switched-path R1-to-R6 {
  to 10.0.0.6;
}
interface fxp0.0 {
  disable;
}
inactive: interface so-0/0/0.0;
inactive: interface so-0/0/1.0;
interface so-0/0/2.0;
```

**Meaning** Sample Output 1 from ingress router **R1** shows that the LSP is now traversing the network along the expected path, from **R1** through **R3** to **R6**, and the reverse LSP, from **R6** through **R3** to **R1**.

Sample Output 2 from ingress router **R1** shows that the LSP is forced to take the intended path because MPLS is deactivated on **R1** interfaces **so-0/0/0.0** and **so-0/0/1.0**. If these interfaces were not deactivated, even though the configuration is now correct, the LSP would still traverse the network through the alternate path.

---

## Verify the LSP

**Purpose** Typically, you use the **show mpls lsp extensive** command to verify the LSP. However, for quick verification of the LSP state, use the **show mpls lsp** command. If the LSP is down, use the **extensive** option (**show mpls lsp extensive**) as a follow-up. If your network has numerous LSPs, you might consider specifying the name of the LSP, using the **name** option (**show mpls lsp name *name*** or **show mpls lsp name *name* extensive**).

**Action** To determine whether the LSP is up, enter the following command from the ingress router:

```
user@ingress-router> show mpls lsp extensive
```



## Sample Output

```

user@R1> show mpls lsp extensive
Ingress LSP: 1 sessions

10.0.0.6
  From: 10.0.0.1, State: Up, ActiveRoute: 1, LSPname: R1-to-R6
  ActivePath: (primary)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary State: Up
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 20)
  10.1.12.2 S 10.1.26.2 S
    Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):

        10.1.12.2 10.1.26.2
99 Sep 18 14:19:04 CSPF: computation result accepted
98 Sep 18 14:19:04 CSPF: link down/deleted
10.1.13.1(R1.00/10.0.0.1)->10.1.13.2(R3.00/10.0.0.3)
97 Sep 18 14:19:01 Record Route: 10.1.12.2 10.1.26.2
96 Sep 18 14:19:01 Up
95 Sep 18 14:19:01 Clear Call
94 Sep 18 14:19:01 CSPF: computation result accepted
93 Sep 18 14:19:01 MPLS label allocation failure
92 Sep 18 14:19:01 Down
91 Aug 17 12:22:52 Selected as active path
90 Aug 17 12:22:52 Record Route: 10.1.13.2 10.1.36.2
89 Aug 17 12:22:52 Up
[...Output truncated...]
Created: Sat Jul 10 18:18:44 2004
Total 1 displayed, Up 1, Down 0

Egress LSP: 1 sessions

10.0.0.1
  From: 10.0.0.6, LSPstate: Up, ActiveRoute: 0
  LSPname: R6-to-R1, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: -
  Resv style: 1 FF, Label in: 3, Label out: -
  Time left: 144, Since: Tue Aug 17 12:23:14 2004
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 39024 protocol 0
  PATH rcvfrom: 10.1.15.2 (so-0/0/1.0) 67333 pkts
  Adspec: received MTU 1500
  PATH sentto: localclient
  RESV rcvfrom: localclient
  Record route: 10.1.56.2 10.1.15.2 <self>
Total 1 displayed, Up 1, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

**Meaning** The sample output from ingress router **R1** shows that the LSP is using an alternate path rather than the configured path. The configured path for the LSP is **R1** through **R3** to **R6**, and for the reverse LSP, **R6** through **R3** to **R1**. The alternate path used by the LSP is **R1** through **R2** to **R6**, and for the reverse LSP, **R6** through **R5** to **R1**.

## Verify Router Connection

**Purpose** Confirm that the appropriate ingress, transit, and egress routers are functioning by examining whether the packets have been received and transmitted with 0% packet loss.

**Action** To determine that the routers are connected, enter the following command from the ingress and transit routers:

```
user@host> ping host
```

### Sample Output

```
user@R1> ping 10.0.0.3 count 3
PING 10.0.0.3 (10.0.0.3): 56 data bytes
64 bytes from 10.0.0.3: icmp_seq=0 ttl=254 time=0.859 ms
64 bytes from 10.0.0.3: icmp_seq=1 ttl=254 time=0.746 ms
64 bytes from 10.0.0.3: icmp_seq=2 ttl=254 time=0.776 ms

--- 10.0.0.3 ping statistics ---
3 packets transmitted, 3 packets received, 0% packet loss
round-trip min/avg/max/stddev = 0.746/0.794/0.859/0.048 ms

user@R3> ping 10.0.0.6 count 3
PING 10.0.0.6 (10.0.0.6): 56 data bytes
64 bytes from 10.0.0.6: icmp_seq=0 ttl=255 time=0.968 ms
64 bytes from 10.0.0.6: icmp_seq=1 ttl=255 time=3.221 ms
64 bytes from 10.0.0.6: icmp_seq=2 ttl=255 time=0.749 ms

--- 10.0.0.6 ping statistics ---
3 packets transmitted, 3 packets received, 0% packet loss
round-trip min/avg/max/stddev = 0.749/1.646/3.221/1.117 ms
```

**Meaning** The sample output shows that ingress router **R1** is receiving packets from transit router **R3**, and that the transit router is receiving packets from the egress router. Therefore, the routers in the LSP are connected.

## Verify Interfaces

**Purpose** Confirm that the interfaces are configured correctly with the **family mpls** statement.

**Action** To determine that the relevant interfaces are up and configured correctly, enter the following commands from the ingress, transit, and egress routers:

```
user@host> show interfaces terse
user@host> show configuration interfaces type-fpc/pic/port
```

### Sample Output

```
user@R1> show interfaces so* terse
Interface      Admin Link Proto Local Remote
so-0/0/0       up    up
so-0/0/0.0     up    up   inet  10.1.12.1/30
               iso
               mpls
so-0/0/1       up    up
```

```

so-0/0/1.0          up    up    inet  10.1.15.1/30
                    up    up    iso
                    up    up    mpls
so-0/0/2            up    up
so-0/0/2.0          up    up    inet  10.1.13.1/30
                    up    up    iso   <<< family mpls is missing
so-0/0/3            up    down

user@R1> show configuration interfaces so-0/0/2
unit 0 {
    family inet {
        address 10.1.13.1/30;
    }
    family iso; <<< family mpls is missing
}

```

**Meaning** The sample output shows that interface **so-0/0/2.0** on the ingress router does not have the **family mpls** statement configured at the **[edit interfaces type-fpc/pic/port]** hierarchy level, indicating that the interface is incorrectly configured to support the LSP. The LSP is configured correctly at the **[edit protocols mpls]** hierarchy level.

The output from the transit and egress routers (not shown) shows that the interfaces on those routers are configured correctly.

## Take Appropriate Action

**Problem** **Description:** Depending on the error you encountered in your investigation, you must take the appropriate action to correct the problem. In the example below, the **family mpls** statement, which was missing, is included in the configuration of ingress router **R1**.

**Solution** To correct the error in this example, enter the following commands:

```

[edit interfaces type-fpc/pic/port]
user@R1# set family mpls
user@R1# show
user@R1# commit

```

**Sample Output** [edit interfaces so-0/0/2 unit 0]  
user@R1# set family mpls

```

[edit interfaces so-0/0/2 unit 0]
user@R1# show
family inet {
    address 10.1.13.1/30;
}
family iso;
family mpls;

```

```

[edit interfaces so-0/0/2 unit 0]
user@R1# commit
commit complete

```

**Meaning** The sample output from ingress router **R1** shows that the **family mpls** statement is configured correctly for interface **so-0/0/2.0**, and that the LSP is now functioning as originally configured.

## Verify the LSP Again

- Purpose** After taking the appropriate action to correct the error, the LSP needs to be checked again to confirm that the problem in the physical layer has been resolved.
- Action** To verify that the LSP is up and traversing the network as expected, enter the following command:

```
user@host> show mpls lsp extensive
```

### Sample Output 1

```
user@R1> show mpls lsp extensive
Ingress LSP: 1 sessions

10.0.0.6
  From: 10.0.0.1, State: Up, ActiveRoute: 1, LSPname: R1-to-R6
  ActivePath: (primary)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary                               State: Up
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 20)
  10.1.13.2 S 10.1.36.2 S
    Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):

      10.1.13.2 10.1.36.2
    112 Sep 21 16:27:33 Record Route: 10.1.13.2 10.1.36.2
    111 Sep 21 16:27:33 Up
    110 Sep 21 16:27:33 CSPF: computation result accepted
    109 Sep 21 16:27:33 CSPF: link down/deleted
  10.1.12.1(R1.00/10.0.0.1)->10.1.12.2(R2.00/10.0.0.2)
    108 Sep 21 16:27:33 CSPF: link down/deleted
  10.1.15.1(R1.00/10.0.0.1)->10.1.15.2(R5.00/10.0.0.5)
  [Output truncated...]
  Created: Sat Jul 10 18:18:44 2004
  Total 1 displayed, Up 1, Down 0

Egress LSP: 1 sessions

10.0.0.1
  From: 10.0.0.6, LSPstate: Up, ActiveRoute: 0
  LSPname: R6-to-R1, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: -
  Resv style: 1 FF, Label in: 3, Label out: -
  Time left: 149, Since: Tue Sep 21 16:29:43 2004
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 2 receiver 39024 protocol 0
  PATH rcvfrom: 10.1.13.2 (so-0/0/2.0) 7 pkts
  Adspec: received MTU 1500
  PATH sentto: localclient
  RESV rcvfrom: localclient
  Record route: 10.1.36.2 10.1.13.2 <self>
  Total 1 displayed, Up 1, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

## Sample Output 2

```
[edit protocols mpls]
user@R1# show
label-switched-path R1-to-R6 {
  to 10.0.0.6;
}
interface fxp0.0 {
  disable;
}
inactive: interface so-0/0/0.0;
inactive: interface so-0/0/1.0;
interface so-0/0/2.0;
```

**Meaning** Sample Output 1 from ingress router **R1** shows that the LSP is now traversing the network along the expected path, from **R1** through **R3** to **R6**, and the reverse LSP, from **R6** through **R3** to **R1**.

Sample Output 2 from ingress router **R1** shows that the LSP is forced to take the intended path because MPLS is deactivated on **R1** interfaces **so-0/0/0.0** and **so-0/0/1.0**. If these interfaces were not deactivated, even though the configuration is now correct, the LSP would still traverse the network through the alternate path.

## Checklist for Checking the Data Link Layer

**Problem** **Description:** This checklist provides the steps and commands for investigating a problem at the data link layer of the Multiprotocol Label Switching (MPLS) network. The checklist provides links to an overview of the data link layer and more detailed information about the commands used to investigate the problem.

**Solution** [Table 24 on page 967](#) provides commands for checking the data link layer.

**Table 24: Checklist for Checking the Data Link Layer**

Tasks	Command or Action
<b>“Checking the Data Link Layer” on page 968</b>	
1. <a href="#">Verify the LSP on page 969</a>	<code>show mpls lsp extensive</code>
2. <a href="#">Verify Interfaces on page 970</a>	<code>show interfaces type-fpc/pic/port extensive</code> <code>show interfaces type-fpc/pic/port</code>
3. <a href="#">Take Appropriate Action on page 974</a>	The following sequence of commands addresses the specific problem described in this topic:  <code>[edit interfaces type-fpc/pic/port]</code> <code>show</code> <code>delete encapsulation</code> <code>show</code> <code>commit</code>
4. <a href="#">Verify the LSP Again on page 975</a>	<code>show mpls lsp extensive</code>

## Checking the Data Link Layer

**Purpose** After you have configured the label-switched path (LSP), issued the **show mpls lsp extensive** command, and determined that there is an error, you might find that the error is not in the physical layer. Continue investigating the problem at the data link layer of the network.

Figure 99 on page 968 illustrates the data link layer of the layered MPLS model.

**Figure 99: Checking the Data Link Layer**


<b>BGP Layer</b>	traceroute <i>host-name</i> show bgp summary show configuration protocols bgp show route <i>destination-prefix</i> detail show route receive protocol bgp <i>neighbor-address</i>
<b>MPLS Layer</b>	show mpls lsp show mpls lsp extensive show route table mpls.0 show route <i>address</i> traceroute <i>address</i> ping mpls rsvp <i>lsp-name</i> detail
<b>RSVP Layer</b>	show rsvp session show rsvp neighbor show rsvp interface
↙ <b>IGP and IP Layers Functioning</b> ↘	
<b>OSPF Layer</b>	<b>IS-IS Layer</b>
show ospf neighbor show configuration protocols ospf show ospf interface	show isis adjacency show configuration protocols isis show isis interface
<b>IP Layer</b>	<b>IP Layer</b>
show ospf neighbor extensive show interfaces terse	show isis adjacency extensive show interfaces terse
<b>Data Link Layer</b>	show interfaces extensive <i>"JUNOS Interfaces Operations Guide"</i>
<b>Physical Layer</b>	show interfaces show interfaces terse ping <i>host</i>

9015544

With this layer, you must check the encapsulation mode, for example, Point-to-Point Protocol (PPP) or Cisco High-Level Data Link Control (HDLC); PPP options, for example, header encapsulation; frame check sequence (FCS) size; and whether keepalive frames are enabled or disabled. Also, check the ingress, egress, and transit routers.

Figure 100 on page 969 illustrates the MPLS network used in this topic.

Figure 100: MPLS Network Broken at the Data Link Layer

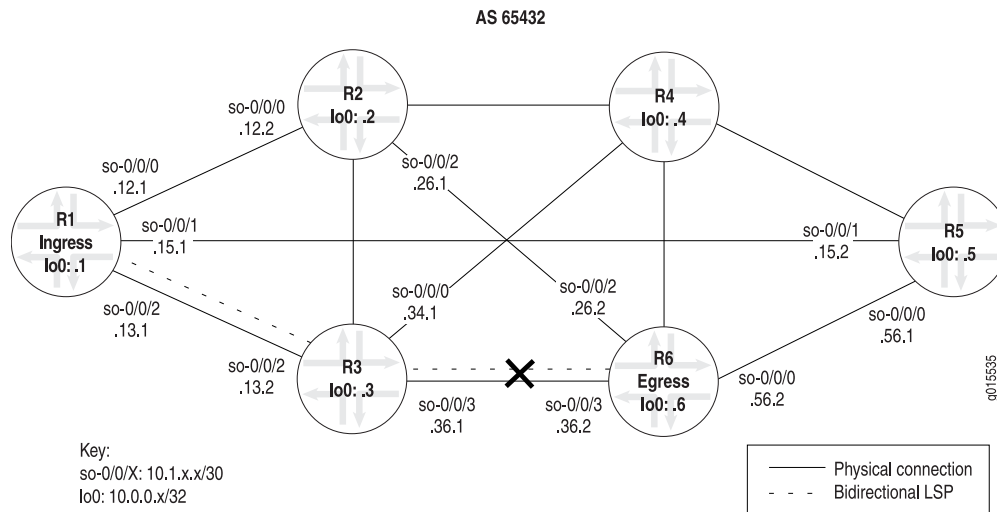

The network shown in [Figure 100 on page 969](#) is a fully meshed configuration where every directly connected interface can receive and send packets to every other similar interface. The LSP in this network is configured to run from ingress router **R1**, through transit router **R3**, to egress router **R6**. In addition, a reverse LSP is configured to run from **R6** through **R3** to **R1**, creating bidirectional traffic.

However, in this example, the LSP is down without a path in either direction, from **R1** to **R6** or from **R6** to **R1**.

When you verify that the data link layer is not functioning correctly, you might find a mismatch with PPP or Cisco HDLC encapsulation, PPP options, or keepalive frames.

The cross shown in [Figure 100 on page 969](#) indicates where the LSP is broken because of a configuration error on ingress router **R1** that prevents the LSP from traversing the network as expected.

To check the data link layer, follow these steps:

1. [Verify the LSP on page 969](#)
2. [Verify Interfaces on page 970](#)
3. [Take Appropriate Action on page 974](#)
4. [Verify the LSP Again on page 975](#)

## Verify the LSP

**Purpose** Typically, you use the **show mpls lsp extensive** command to verify the LSP. However for quick verification of the LSP state, use the **show mpls lsp** command. If the LSP is down, use the **extensive** option (**show mpls lsp extensive**) as a follow-up. If your network has numerous LSPs, you might consider specifying the name of the LSP, using the **name** option (**show mpls lsp name *name*** or **show mpls lsp name *name* extensive**).

**Action** To determine whether the LSP is up, enter the following command from the ingress router:

```
user@host> show mpls lsp extensive
```

### Sample Output 1

```
user@R1> show mpls lsp extensive
Ingress LSP: 1 sessions

10.0.0.6
  From:10.0.0.1 , State: Dn, ActiveRoute: 0, LSPname: R1-to-R6
  ActivePath: (none)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  Primary State: Dn
    Will be enqueued for recomputation in 15 second(s).
    140 Sep 30 12:01:12 CSPF failed: no route toward 10.0.0.6[26 times]
    139 Sep 30 11:48:57 Deselected as active
    138 Sep 30 11:48:56 CSPF failed: no route toward 10.0.0.6
    137 Sep 30 11:48:56 Clear Call
    136 Sep 30 11:48:56 CSPF: link down/deleted
10.1.36.1(R3.00/10.0.0.3)->10.1.36.2(R6.00/10.0.0.6)
135 Sep 30 11:48:56 ResvTear received
    134 Sep 30 11:48:56 Down
    133 Sep 30 11:48:56 CSPF failed: no route toward 10.0.0.6
    132 Sep 30 11:48:56 10.1.13.2: No Route toward dest
    [...Output truncated...]
  Created: Sat Jul 10 18:18:44 2004
Total 1 displayed, Up 0, Down 1

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

**Meaning** The sample output from ingress router **R1** shows the LSPs within which it participates. The ingress LSP is down, without a path from **R1** to **R6**. Because a reverse LSP is configured in the network shown in [Figure 100 on page 969](#), we would expect an egress LSP session to be up. However, **R1** does not have any egress LSPs, indicating that the LSP from **R6** to **R1** is not functioning.

### Verify Interfaces

**Purpose** From your network topology, determine the adjacent interfaces through which the LSP is meant to traverse, and examine the output for the encapsulation type, PPP options, FCS size, and whether keepalive frames are enabled or disabled



**NOTE:** Before you proceed with this step, check the physical layer to ensure that the problem is not in the physical layer.



**Action** To verify the functioning of adjacent interfaces, enter the following commands from the relevant routers:

```
user@host> show interfaces type-fpc/pic/port extensive
user@host> show interfaces type-fpc/pic/port
```

### Sample Output 1

```
user@R6> show interfaces so-0/0/3 extensive
Physical interface: so-0/0/3, Enabled, Physical link is Up
  Interface index: 131, SNMP ifIndex: 27, Generation: 14
  Link-level type: Cisco-HDLC , MTU: 4474, Clocking: Internal, SONET mode, Speed:
0C3, Loopback: None,
  FCS:16 , Payload scrambler: Enabled
  Device flags   : Present Running
  Interface flags: Link-Layer-Down Point-To-Point SNMP-Traps 16384
  Link flags    : Keepalives
  Hold-times    : Up 0 ms, Down 0 ms
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive statistics:
    Input : 0 (last seen: never)
    Output: 357 (last sent 00:00:04 ago)
  CoS queues    : 4 supported
  Last flapped  : 2004-07-21 16:03:49 PDT (10w0d 07:01 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes   :          203368873          0 bps
    Output bytes  :          186714992         88 bps
    Input packets:          3641808          0 pps
    Output packets:         3297569          0 pps
  Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0, Bucket drops:
0,
    Policed discards: 1770, L3 incompletes: 0, L2 channel errors: 0, L2 mismatch
timeouts: 0,
    HS link CRC errors: 0, HS link FIFO overflows: 0
  Output errors:
    Carrier transitions: 1, Errors: 0, Drops: 0, Aged packets: 0, HS link FIFO
underflows: 0,
    MTU errors: 0
  Queue counters:
    Queued packets  Transmitted packets  Dropped packets

    0 best-effort          197012          197012          0

    1 expedited-fo           0              0              0

    2 assured-forw           0              0              0

    3 network-cont        3100557        3100557          0

  SONET alarms : None
  SONET defects : None
  SONET PHY:
    Seconds      Count  State
    PLL Lock      0      0  OK
    PHY Light      0      0  OK
  SONET section:
    BIP-B1          0      0
    SEF              1      3  OK
    LOS              1      1  OK
    LOF              1      1  OK
```

```

ES-S                1
SES-S               1
SEFS-S             1
SONET line:
BIP-B2             0          0
REI-L             0          0
RDI-L             0          0    OK
AIS-L             0          0    OK
BERR-SF           0          0    OK
BERR-SD           0          0    OK
ES-L              1
SES-L              1
UAS-L             0
ES-LFE            0
SES-LFE           0
UAS-LFE           0
SONET path:
BIP-B3             0          0
REI-P             0          0
LOP-P             0          0    OK
AIS-P             0          0    OK
RDI-P             0          0    OK
UNEQ-P            0          0    OK
PLM-P             0          0    OK
ES-P              1
SES-P             1
UAS-P             0
ES-PFE            0
SES-PFE           0
UAS-PFE           0
Received SONET overhead:
F1      : 0x00, J0      : 0x00, K1      : 0x00, K2      : 0x00
S1      : 0x00, C2      : 0xcf, C2(cmp) : 0xcf, F2      : 0x00
Z3      : 0x00, Z4      : 0x00, S1(cmp) : 0x00
Transmitted SONET overhead:
F1      : 0x00, J0      : 0x01, K1      : 0x00, K2      : 0x00
S1      : 0x00, C2      : 0xcf, F2      : 0x00, Z3      : 0x00
Z4      : 0x00
Received path trace: R3 so-0/0/3
52 33 20 73 6f 2d 30 2f 30 2f 33 00 00 00 00 00    R3 so-0/0/3.. ...
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00    .....
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00    .....
00 00 00 00 00 00 00 00 00 00 00 00 00 0d 0a      .....
Transmitted path trace: R6 so-0/0/3
52 36 20 73 6f 2d 30 2f 30 2f 33 00 00 00 00 00    R6 so-0/0/3 .....
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00    .....
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00    .....
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00    .....
HDLC configuration:
Policing bucket: Disabled
Shaping bucket : Disabled
Giant threshold: 4484, Runt threshold: 3
Packet Forwarding Engine configuration:
Destination slot: 0, PLP byte: 1 (0x00)
CoS transmit queue      Bandwidth      Buffer Priority  Limit
                        %      bps      %      bytes
0 best-effort           95    147744000 95      0      low  none
3 network-control       5     7776000  5      0      low  none

Logical interface so-0/0/3.0 (Index 71) (SNMP ifIndex 28) (Generation 16)
Flags: Device-Down Point-To-Point SNMP-Traps Encapsulation: Cisco-HDLC

```

```

Traffic statistics:
  Input bytes :          406737746
  Output bytes :         186714992
  Input packets:         7283616
  Output packets:        3297569
Local statistics:
  Input bytes :          203368873
  Output bytes :         186714992
  Input packets:         3641808
  Output packets:        3297569
Transit statistics:
  Input bytes :          203368873          0 bps
  Output bytes :           0          0 bps
  Input packets:         3641808          0 pps
  Output packets:          0          0 pps
Protocol inet, MTU: 4470, Generation: 46, Route table: 0
  Flags: None
    Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
      Destination: 10.1.36.0/30, Local: 10.1.36.2, Broadcast: 10.1.36.3, Generation: 38
Protocol iso, MTU: 4469, Generation: 47, Route table: 0
  Flags: None
Protocol mpls, MTU: 4458, Generation: 48, Route table: 0
  Flags: None

```

## Sample Output 2

```

user@R3> show interfaces so-0/0/3
Physical interface: so-0/0/3, Enabled, Physical link is Up
  Interface index: 131, SNMP ifIndex: 24
    Link-level type: PPP , MTU: 4474, Clocking: Internal, SONET mode, Speed: OC3,
    Loopback: None, FCS: 16 ,
    Payload scrambler: Enabled
    Device flags : Present Running
    Interface flags: Point-To-Point SNMP-Traps
    Link flags : Keepalives
    Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
    Keepalive: Input: 736827 (00:00:03 ago), Output: 736972 (00:00:05 ago)
    LCP state: Opened
    NCP state: inet: Opened, inet6: Not-configured, iso: Opened, mpls: Opened
    CHAP state: Not-configured
    CoS queues : 4 supported
    Last flapped : 2004-07-21 16:08:01 PDT (10w5d 19:57 ago)
    Input rate : 40 bps (0 pps)
    Output rate : 48 bps (0 pps)
    SONET alarms : None
    SONET defects : None

Logical interface so-0/0/3.0 (Index 70) (SNMP ifIndex 51)
  Flags: Point-To-Point SNMP-Traps Encapsulation: PPP
  Protocol inet, MTU: 4470
    Flags: None
    Addresses, Flags: Is-Preferred Is-Primary
      Destination: 10.1.36.0/30, Local: 10.1.36.1, Broadcast: 10.1.36.3
  Protocol iso, MTU: 4470
    Flags: None
  Protocol mpls, MTU: 4458
    Flags: None

```

**Meaning** Sample Output 1 from egress router **R6** shows that there are no SONET alarms or defects (**none**), the states are all **OK**, and the path trace shows the distant end (**R3 so-0.0.0**),

indicating that the physical link is up. However, the logical link is down, and the link-level type is Cisco HDLC.

Sample Output 2 from transit router **R3** shows that the link-level type is PPP, indicating that the encapsulation types are mismatched, resulting in the LSP going down.

### Take Appropriate Action

**Problem**    **Description:** Depending on the error you encountered in your investigation, you must take the appropriate action to correct the problem. In the example below, the encapsulation types are mismatched.

**Solution**    To correct the error in this example, enter the following commands:

```
[edit interfaces so-0/0/3]
user@R1# show
user@R1# delete encapsulation
user@R1# show
user@R1# commit
```

**Sample Output**

```
[edit interfaces so-0/0/3]
user@R6# show
encapsulation cisco-hdlc;
unit 0 {
    family inet {
        address 10.1.36.2/30;
    }
    family iso;
    family mpls;
}

[edit interfaces so-0/0/3]
user@R6# delete encapsulation

[edit interfaces so-0/0/3]
user@R6# show
unit 0 {
    family inet {
        address 10.1.36.2/30;
    }
    family iso;
    family mpls;
}

[edit interfaces so-0/0/3]
user@R6# commit
commit complete
```

**Meaning**    The sample output from egress router **R6** shows that the Cisco HDLC was incorrectly configured on interface **so-0/0/3** which prevented the LSP from using the intended path. The problem was corrected when the **encapsulation** statement was deleted and the configuration committed.

## Verify the LSP Again

- Purpose** After taking the appropriate action to correct the error, the LSP needs to be checked again to confirm that the problem in the data link layer has been resolved.
- Action** From the ingress, egress, and transit routers, verify that the LSP is up and traversing the network as expected:

```
user@host> show mpls lsp extensive
```

## Sample Output 1

```
user@R1> show mpls lsp extensive
Ingress LSP: 1 sessions

10.0.0.6
  From:10.0.0.1 , State: Up,  ActiveRoute:1, LSPname: R1-to-R6
  ActivePath: (primary)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary State: Up
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 20)
  10.1.13.2 S 10.1.36.2 S
    Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):

      10.1.13.2 10.1.36.2
      145 Sep 30 12:25:01 Selected as active path
      144 Sep 30 12:25:01 Record Route: 10.1.13.2 10.1.36.2
      143 Sep 30 12:25:01 Up
      142 Sep 30 12:25:01 Originate Call
      141 Sep 30 12:25:01 CSPF: computation result accepted
      140 Sep 30 12:24:32 CSPF failed: no route toward 10.0.0.6[74 times]
      139 Sep 30 11:48:57 Deselected as active
      138 Sep 30 11:48:56 CSPF failed: no route toward 10.0.0.6
      137 Sep 30 11:48:56 Clear Call
      136 Sep 30 11:48:56 CSPF: link down/deleted
  10.1.36.1(R3.00/10.0.0.3)->10.1.36.2(R6.00/10.0.0.6)
  [...Output truncated...]
  Created: Sat Jul 10 18:18:43 2004
  Total 1 displayed, Up 1 , Down 0

Egress LSP: 1 sessions

10.0.0.1
  From:10.0.0.6 , LSPstate: Up, ActiveRoute: 0
  LSPname: R6-to-R1, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: -
  Resv style: 1 FF, Label in: 3, Label out: -
  Time left: 134, Since: Thu Sep 30 12:24:56 2004
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 6 receiver 39024 protocol 0
  PATH rcvfrom: 10.1.13.2 (so-0/0/2.0) 7 pkts
  Adspec: received MTU 1500
  PATH sentto: localclient
  RESV rcvfrom: localclient
  Record route: 10.1.36.2 10.1.13.2 <self>
  Total 1 displayed, Up 1, Down 0
```

```
Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

## Sample Output 2

```
user@R6> show mpls lsp extensive
Ingress LSP: 1 sessions

10.0.0.1
  From:10.0.0.6, State: Up, ActiveRoute: 1, LSPname: R6-to-R1
  ActivePath: (primary)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary State: Up
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 20)
10.1.36.1 S 10.1.13.1 S
  Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):

    10.1.36.1 10.1.13.1
    50 Sep 30 12:24:12 Selected as active path
    49 Sep 30 12:24:12 Record Route: 10.1.36.1 10.1.13.1
    48 Sep 30 12:24:12 Up
    47 Sep 30 12:24:12 Originate Call
    46 Sep 30 12:24:12 CSPF: computation result accepted
    45 Sep 30 12:23:43 CSPF failed: no route toward 10.0.0.1[73 times]
    44 Sep 30 11:48:12 Deselected as active
    43 Sep 30 11:48:12 CSPF failed: no route toward 10.0.0.1
    42 Sep 30 11:48:12 CSPF: link down/deleted
10.1.36.2(R6.00/10.0.0.6)->10.1.36.1(R3.00/10.0.0.3)
  [...Output truncated...]
  Created: Tue Aug 17 12:18:34 2004
Total 1 displayed, Up 1, Down 0

Egress LSP: 1 sessions

10.0.0.6
  From:10.0.0.1 , LSPstate: Up, ActiveRoute: 0
  LSPname: R1-to-R6, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: -
  Resv style: 1 FF, Label in: 3, Label out: -
  Time left: 159, Since: Thu Sep 30 12:24:16 2004
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 19 receiver 44251 protocol 0
  PATH rcvfrom: 10.1.36.1 (so-0/0/3.0) 4 pkts
  Adspec: received MTU 1500
  PATH sentto: localclient
  RESV rcvfrom: localclient
  Record route:10.1.13.1 10.1.36.1 <self>
Total 1 displayed, Up 1, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

## Sample Output 3

```
user@R3> show mpls lsp extensive
Ingress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

Egress LSP: 0 sessions  
Total 0 displayed, Up 0, Down 0

Transit LSP: 2 sessions

#### 10.0.0.1

From:10.0.0.6 , LSPstate: Up, ActiveRoute: 1  
LSPname: R6-to-R1, LSPpath: Primary  
Suggested label received: -, Suggested label sent: -  
Recovery label received: -, Recovery label sent: 3  
Resv style: 1 FF, Label in: 100176, Label out: 3  
Time left: 143, Since: Thu Sep 30 12:21:25 2004  
Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500  
Port number: sender 6 receiver 39024 protocol 0  
PATH rcvfrom: 10.1.36.2 (so-0/0/3.0) 10 pkts  
Adspec: received MTU 1500 sent MTU 1500  
PATH sentto: 10.1.13.1 (so-0/0/2.0) 9 pkts  
RESV rcvfrom: 10.1.13.1 (so-0/0/2.0) 9 pkts  
Explct route: 10.1.13.1  
Record route: 10.1.36.2 <self> 10.1.13.1

#### 10.0.0.6

From:10.0.0.1 , LSPstate: Up, ActiveRoute: 1  
LSPname: R1-to-R6, LSPpath: Primary  
Suggested label received: -, Suggested label sent: -  
Recovery label received: -, Recovery label sent: 3  
Resv style: 1 FF, Label in: 100192, Label out: 3  
Time left: 148, Since: Thu Sep 30 12:21:30 2004  
Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500  
Port number: sender 19 receiver 44251 protocol 0  
PATH rcvfrom: 10.1.13.1 (so-0/0/2.0) 9 pkts  
Adspec: received MTU 1500 sent MTU 1500  
PATH sentto: 10.1.36.2 (so-0/0/3.0) 9 pkts  
RESV rcvfrom: 10.1.36.2 (so-0/0/3.0) 9 pkts  
Explct route: 10.1.36.2  
Record route: 10.1.13.1 <self> 10.1.36.2

Total 2 displayed, Up 2, Down 0

## Sample Output 4

```
user@R1> show configuration protocols mpls
label-switched-path R1-to-R6 {
    to 10.0.0.6;
```

```
}
inactive: interface so-0/0/0.0;
inactive: interface so-0/0/1.0;
interface so-0/0/2.0;
```

```
user@R6> show configuration protocols mpls
label-switched-path R6-to-R1 {
    to 10.0.0.1;
```

```
}
inactive: interface so-0/0/0.0;
inactive: interface so-0/0/1.0;
inactive: interface so-0/0/2.0;
interface so-0/0/3.0;
```

```
user@R3> show configuration protocols mpls
interface fxp0.0 {
    disable;
}
```

```
inactive: interface so-0/0/0.0;
inactive: interface so-0/0/1.0;
interface so-0/0/2.0;
interface so-0/0/3.0;
```

**Meaning** Sample Outputs 1 and 2 from ingress router **R1** and egress router **R6**, respectively, show that the LSP is now traversing the network along the expected path, from **R1** through **R3** to **R6**, and the reverse LSP, from **R6** through **R3** to **R1**.

Sample Output 3 from transit router **R3** shows that there are two transit LSP sessions, one from **R1** to **R6** and the other from **R6** to **R1**.

Sample Output 4 shows the interfaces that were deactivated on the ingress, egress, and transit routers, forcing the LSP to take the intended path. If these interfaces were not deactivated, even though the configuration is now correct, the LSP would still traverse the network through the alternate path.

## Verify the LSP

**Purpose** Typically, you use the **show mpls lsp extensive** command to verify the LSP. However for quick verification of the LSP state, use the **show mpls lsp** command. If the LSP is down, use the **extensive** option (**show mpls lsp extensive**) as a follow-up. If your network has numerous LSPs, you might consider specifying the name of the LSP, using the **name** option (**show mpls lsp name *name*** or **show mpls lsp name *name* extensive**).

**Action** To determine whether the LSP is up, enter the following command from the ingress router:

```
user@host> show mpls lsp extensive
```

## Sample Output 1

```
user@R1> show mpls lsp extensive
Ingress LSP: 1 sessions

10.0.0.6
  From:10.0.0.1 , State: Dn, ActiveRoute: 0, LSPname: R1-to-R6
  ActivePath: (none)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  Primary State: Dn
    Will be enqueued for recomputation in 15 second(s).
    140 Sep 30 12:01:12 CSPF failed: no route toward 10.0.0.6[26 times]
    139 Sep 30 11:48:57 Deselected as active
    138 Sep 30 11:48:56 CSPF failed: no route toward 10.0.0.6
    137 Sep 30 11:48:56 Clear Call
    136 Sep 30 11:48:56 CSPF: link down/deleted
  10.1.36.1(R3.00/10.0.0.3)->10.1.36.2(R6.00/10.0.0.6)
  135 Sep 30 11:48:56 ResvTear received
    134 Sep 30 11:48:56 Down
    133 Sep 30 11:48:56 CSPF failed: no route toward 10.0.0.6
    132 Sep 30 11:48:56 10.1.13.2: No Route toward dest
  [...Output truncated...]
  Created: Sat Jul 10 18:18:44 2004
Total 1 displayed, Up 0, Down 1
```



```
Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

```
Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

**Meaning** The sample output from ingress router **R1** shows the LSPs within which it participates. The ingress LSP is down, without a path from **R1** to **R6**. Because a reverse LSP is configured in the network shown in [Figure 100 on page 969](#), we would expect an egress LSP session to be up. However, **R1** does not have any egress LSPs, indicating that the LSP from **R6** to **R1** is not functioning.

## Verify Interfaces

**Purpose** From your network topology, determine the adjacent interfaces through which the LSP is meant to traverse, and examine the output for the encapsulation type, PPP options, FCS size, and whether keepalive frames are enabled or disabled



**NOTE:** Before you proceed with this step, check the physical layer to ensure that the problem is not in the physical layer.

**Action** To verify the functioning of adjacent interfaces, enter the following commands from the relevant routers:

```
user@host> show interfaces type-fpc/pic/port extensive
user@host> show interfaces type-fpc/pic/port
```

## Sample Output 1

```
user@R6> show interfaces so-0/0/3 extensive
Physical interface: so-0/0/3, Enabled, Physical link is Up
  Interface index: 131, SNMP ifIndex: 27, Generation: 14
  Link-level type: Cisco-HDLC , MTU: 4474, Clocking: Internal, SONET mode, Speed:
OC3, Loopback: None,
  FCS:16 , Payload scrambler: Enabled
  Device flags   : Present Running
  Interface flags: Link-Layer-Down  Point-To-Point SNMP-Traps 16384
  Link flags    : Keepalives
  Hold-times    : Up 0 ms, Down 0 ms
  Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
  Keepalive statistics:
    Input : 0 (last seen: never)
    Output: 357 (last sent 00:00:04 ago)
  CoS queues    : 4 supported
  Last flapped   : 2004-07-21 16:03:49 PDT (10w0d 07:01 ago)
  Statistics last cleared: Never
  Traffic statistics:
    Input bytes   :          203368873          0 bps
    Output bytes  :          186714992          88 bps
    Input packets :          3641808          0 pps
    Output packets:          3297569          0 pps
  Input errors:
    Errors: 0, Drops: 0, Framing errors: 0, Runts: 0, Giants: 0, Bucket drops:
```

```

0,
  Policed discards: 1770, L3 incompletes: 0, L2 channel errors: 0, L2 mismatch
  timeouts: 0,
  HS link CRC errors: 0, HS link FIFO overflows: 0
  Output errors:
    Carrier transitions: 1, Errors: 0, Drops: 0, Aged packets: 0, HS link FIFO
  underflows: 0,
  MTU errors: 0
  Queue counters:      Queued packets  Transmitted packets      Dropped packets

    0 best-effort      197012          197012          0

    1 expedited-fo      0              0              0

    2 assured-forw      0              0              0

    3 network-cont     3100557        3100557        0

  SONET alarms :None
  SONET defects :None
  SONET PHY:      Seconds      Count      State
    PLL Lock      0          0      OK
    PHY Light      0          0      OK
  SONET section:
    BIP-B1      0          0
    SEF          1          3      OK
    LOS          1          1      OK
    LOF          1          1      OK
    ES-S          1
    SES-S          1
    SEFS-S          1
  SONET line:
    BIP-B2      0          0
    REI-L      0          0
    RDI-L      0          0      OK
    AIS-L      0          0      OK
    BERR-SF      0          0      OK
    BERR-SD      0          0      OK
    ES-L          1
    SES-L          1
    UAS-L          0
    ES-LFE          0
    SES-LFE          0
    UAS-LFE          0
  SONET path:
    BIP-B3      0          0
    REI-P      0          0
    LOP-P      0          0      OK
    AIS-P      0          0      OK
    RDI-P      0          0      OK
    UNEQ-P      0          0      OK
    PLM-P      0          0      OK
    ES-P          1
    SES-P          1
    UAS-P          0
    ES-PFE          0
    SES-PFE          0
    UAS-PFE          0
  Received SONET overhead:
    F1      : 0x00, J0      : 0x00, K1      : 0x00, K2      : 0x00
    S1      : 0x00, C2      : 0xcf, C2(cmp) : 0xcf, F2      : 0x00

```

```

Z3      : 0x00, Z4      : 0x00, S1(cmp) : 0x00
Transmitted SONET overhead:
F1      : 0x00, J0      : 0x01, K1      : 0x00, K2      : 0x00
S1      : 0x00, C2      : 0xcf, F2      : 0x00, Z3      : 0x00
Z4      : 0x00
Received path trace: R3 so-0/0/3
52 33 20 73 6f 2d 30 2f 30 2f 33 00 00 00 00 00  R3 so-0/0/3... ...
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
00 00 00 00 00 00 00 00 00 00 00 00 00 00 0d 0a .....
Transmitted path trace: R6 so-0/0/3
52 36 20 73 6f 2d 30 2f 30 2f 33 00 00 00 00 00  R6 so-0/0/3 .....
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 .....
HDLC configuration:
  Policing bucket: Disabled
  Shaping bucket : Disabled
  Giant threshold: 4484, Runt threshold: 3
Packet Forwarding Engine configuration:
  Destination slot: 0, PLP byte: 1 (0x00)
  CoS transmit queue      Bandwidth      Buffer Priority  Limit
                           %      bps      %      bytes
0 best-effort             95      147744000 95      0      low      none
3 network-control         5       7776000  5       0      low      none

Logical interface so-0/0/3.0 (Index 71) (SNMP ifIndex 28) (Generation 16)
  Flags: Device-Down Point-To-Point SNMP-Traps Encapsulation: Cisco-HDLC
Traffic statistics:
  Input bytes : 406737746
  Output bytes : 186714992
  Input packets: 7283616
  Output packets: 3297569
Local statistics:
  Input bytes : 203368873
  Output bytes : 186714992
  Input packets: 3641808
  Output packets: 3297569
Transit statistics:
  Input bytes : 203368873 0 bps
  Output bytes : 0 0 bps
  Input packets: 3641808 0 pps
  Output packets: 0 0 pps
Protocol inet, MTU: 4470, Generation: 46, Route table: 0
  Flags: None
  Addresses, Flags: Dest-route-down Is-Preferred Is-Primary
  Destination: 10.1.36.0/30, Local: 10.1.36.2, Broadcast: 10.1.36.3, Generation: 38
Protocol iso, MTU: 4469, Generation: 47, Route table: 0
  Flags: None
Protocol mpls, MTU: 4458, Generation: 48, Route table: 0
  Flags: None

```

## Sample Output 2

```

user@R3> show interfaces so-0/0/3
Physical interface: so-0/0/3, Enabled, Physical link is Up
  Interface index: 131, SNMP ifIndex: 24
  Link-level type: PPP , MTU: 4474, Clocking: Internal, SONET mode, Speed: OC3,
Loopback: None, FCS: 16 ,
  Payload scrambler: Enabled
  Device flags : Present Running

```

```
Interface flags: Point-To-Point SNMP-Traps
Link flags :Keepalives
Keepalive settings: Interval 10 seconds, Up-count 1, Down-count 3
Keepalive: Input: 736827 (00:00:03 ago), Output: 736972 (00:00:05 ago)
LCP state: Opened
NCP state: inet: Opened, inet6: Not-configured, iso: Opened, mpls: Opened
CHAP state: Not-configured
CoS queues : 4 supported
Last flapped : 2004-07-21 16:08:01 PDT (10w5d 19:57 ago)
Input rate : 40 bps (0 pps)
Output rate : 48 bps (0 pps)
SONET alarms : None
SONET defects : None
```

```
Logical interface so-0/0/3.0 (Index 70) (SNMP ifIndex 51)
Flags: Point-To-Point SNMP-Traps Encapsulation: PPP
Protocol inet, MTU: 4470
Flags: None
Addresses, Flags: Is-Preferred Is-Primary
Destination: 10.1.36.0/30, Local: 10.1.36.1, Broadcast: 10.1.36.3
Protocol iso, MTU: 4470
Flags: None
Protocol mpls, MTU: 4458
Flags: None
```

**Meaning** Sample Output 1 from egress router **R6** shows that there are no SONET alarms or defects (**none**), the states are all **OK**, and the path trace shows the distant end (**R3 so-0.0.0**), indicating that the physical link is up. However, the logical link is down, and the link-level type is Cisco HDLC.

Sample Output 2 from transit router **R3** shows that the link-level type is PPP, indicating that the encapsulation types are mismatched, resulting in the LSP going down.

---

## Take Appropriate Action

**Problem** **Description:** Depending on the error you encountered in your investigation, you must take the appropriate action to correct the problem. In the example below, the encapsulation types are mismatched.

**Solution** To correct the error in this example, enter the following commands:

```
[edit interfaces so-0/0/3]
user@R1# show
user@R1# delete encapsulation
user@R1# show
user@R1# commit
```

**Sample Output**

```
[edit interfaces so-0/0/3]
user@R6# show
encapsulation cisco-hdlc;
unit 0 {
    family inet {
        address 10.1.36.2/30;
    }
    family iso;
    family mpls;
}

[edit interfaces so-0/0/3]
user@R6# delete encapsulation

[edit interfaces so-0/0/3]
user@R6# show
unit 0 {
    family inet {
        address 10.1.36.2/30;
    }
    family iso;
    family mpls;
}

[edit interfaces so-0/0/3]
user@R6# commit
commit complete
```

**Meaning** The sample output from egress router **R6** shows that the Cisco HDLC was incorrectly configured on interface **so-0/0/3** which prevented the LSP from using the intended path. The problem was corrected when the **encapsulation** statement was deleted and the configuration committed.

## Verify the LSP Again

**Purpose** After taking the appropriate action to correct the error, the LSP needs to be checked again to confirm that the problem in the data link layer has been resolved.

**Action** From the ingress, egress, and transit routers, verify that the LSP is up and traversing the network as expected:

```
user@host> show mpls lsp extensive
```

### Sample Output 1

```
user@R1> show mpls lsp extensive
Ingress LSP: 1 sessions

10.0.0.6
  From:10.0.0.1 , State: Up,  ActiveRoute:1, LSPname: R1-to-R6
  ActivePath: (primary)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary State: Up
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 20)
    10.1.13.2 S 10.1.36.2 S
    Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):
```

```

10.1.13.2 10.1.36.2
145 Sep 30 12:25:01 Selected as active path
144 Sep 30 12:25:01 Record Route: 10.1.13.2 10.1.36.2
143 Sep 30 12:25:01 Up
142 Sep 30 12:25:01 Originate Call
141 Sep 30 12:25:01 CSPF: computation result accepted
140 Sep 30 12:24:32 CSPF failed: no route toward 10.0.0.6[74 times]
139 Sep 30 11:48:57 Deselected as active
138 Sep 30 11:48:56 CSPF failed: no route toward 10.0.0.6
137 Sep 30 11:48:56 Clear Call
136 Sep 30 11:48:56 CSPF: link down/deleted
10.1.36.1(R3.00/10.0.0.3)->10.1.36.2(R6.00/10.0.0.6)
[...Output truncated...]
Created: Sat Jul 10 18:18:43 2004
Total 1 displayed, Up 1, Down 0

```

Egress LSP: 1 sessions

#### 10.0.0.1

```

From: 10.0.0.6, LSPstate: Up, ActiveRoute: 0
LSPname: R6-to-R1, LSPpath: Primary
Suggested label received: -, Suggested label sent: -
Recovery label received: -, Recovery label sent: -
Resv style: 1 FF, Label in: 3, Label out: -
Time left: 134, Since: Thu Sep 30 12:24:56 2004
Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
Port number: sender 6 receiver 39024 protocol 0
PATH rcvfrom: 10.1.13.2 (so-0/0/2.0) 7 pkts
Adspec: received MTU 1500
PATH sentto: localclient
RESV rcvfrom: localclient
Record route: 10.1.36.2 10.1.13.2 <self>
Total 1 displayed, Up 1, Down 0

```

Transit LSP: 0 sessions

Total 0 displayed, Up 0, Down 0

## Sample Output 2

```
user@R6> show mpls lsp extensive
```

Ingress LSP: 1 sessions

#### 10.0.0.1

```

From: 10.0.0.6, State: Up, ActiveRoute: 1, LSPname: R6-to-R1
ActivePath: (primary)
LoadBalance: Random
Encoding type: Packet, Switching type: Packet, GPID: IPv4
*Primary State: Up
Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 20)
10.1.36.1 S 10.1.13.1 S
Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):

```

```

10.1.36.1 10.1.13.1
50 Sep 30 12:24:12 Selected as active path
49 Sep 30 12:24:12 Record Route: 10.1.36.1 10.1.13.1
48 Sep 30 12:24:12 Up
47 Sep 30 12:24:12 Originate Call
46 Sep 30 12:24:12 CSPF: computation result accepted
45 Sep 30 12:23:43 CSPF failed: no route toward 10.0.0.1[73 times]
44 Sep 30 11:48:12 Deselected as active

```

```

43 Sep 30 11:48:12 CSPF failed: no route toward 10.0.0.1
42 Sep 30 11:48:12 CSPF: link down/deleted
10.1.36.2(R6.00/10.0.0.6)->10.1.36.1(R3.00/10.0.0.3)
[...Output truncated...]
Created: Tue Aug 17 12:18:34 2004
Total 1 displayed, Up 1, Down 0

```

Egress LSP: 1 sessions

#### 10.0.0.6

```

From:10.0.0.1 , LSPstate: Up, ActiveRoute: 0
LSPname: R1-to-R6, LSPpath: Primary
Suggested label received: -, Suggested label sent: -
Recovery label received: -, Recovery label sent: -
Resv style: 1 FF, Label in: 3, Label out: -
Time left: 159, Since: Thu Sep 30 12:24:16 2004
Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
Port number: sender 19 receiver 44251 protocol 0
PATH rcvfrom: 10.1.36.1 (so-0/0/3.0) 4 pkts
Adspec: received MTU 1500
PATH sentto: localclient
RESV rcvfrom: localclient
Record route: 10.1.13.1 10.1.36.1 <self>
Total 1 displayed, Up 1, Down 0

```

Transit LSP: 0 sessions  
Total 0 displayed, Up 0, Down 0

### Sample Output 3

```

user@R3> show mpls lsp extensive
Ingress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

Egress LSP: 0 sessions  
Total 0 displayed, Up 0, Down 0

Transit LSP: 2 sessions

#### 10.0.0.1

```

From:10.0.0.6 , LSPstate: Up, ActiveRoute: 1
LSPname: R6-to-R1, LSPpath: Primary
Suggested label received: -, Suggested label sent: -
Recovery label received: -, Recovery label sent: 3
Resv style: 1 FF, Label in: 100176, Label out: 3
Time left: 143, Since: Thu Sep 30 12:21:25 2004
Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
Port number: sender 6 receiver 39024 protocol 0
PATH rcvfrom: 10.1.36.2 (so-0/0/3.0) 10 pkts
Adspec: received MTU 1500 sent MTU 1500
PATH sentto: 10.1.13.1 (so-0/0/2.0) 9 pkts
RESV rcvfrom: 10.1.13.1 (so-0/0/2.0) 9 pkts
Explct route: 10.1.13.1
Record route: 10.1.36.2 <self> 10.1.13.1

```

#### 10.0.0.6

```

From:10.0.0.1 , LSPstate: Up, ActiveRoute: 1
LSPname: R1-to-R6, LSPpath: Primary
Suggested label received: -, Suggested label sent: -
Recovery label received: -, Recovery label sent: 3
Resv style: 1 FF, Label in: 100192, Label out: 3

```

```
Time left: 148, Since: Thu Sep 30 12:21:30 2004
Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
Port number: sender 19 receiver 44251 protocol 0
PATH rcvfrom: 10.1.13.1 (so-0/0/2.0) 9 pkts
Adspec: received MTU 1500 sent MTU 1500
PATH sentto: 10.1.36.2 (so-0/0/3.0) 9 pkts
RESV rcvfrom: 10.1.36.2 (so-0/0/3.0) 9 pkts
Explct route: 10.1.36.2
Record route: 10.1.13.1 <self> 10.1.36.2
Total 2 displayed, Up 2, Down 0
```

## Sample Output 4

```
user@R1> show configuration protocols mpls
label-switched-path R1-to-R6 {
    to 10.0.0.6;
}
inactive: interface so-0/0/0.0;
inactive: interface so-0/0/1.0;
interface so-0/0/2.0;

user@R6> show configuration protocols mpls
label-switched-path R6-to-R1 {
    to 10.0.0.1;
}
inactive: interface so-0/0/0.0;
inactive: interface so-0/0/1.0;
inactive: interface so-0/0/2.0;
interface so-0/0/3.0;

user@R3> show configuration protocols mpls
interface fxp0.0 {
    disable;
}
inactive: interface so-0/0/0.0;
inactive: interface so-0/0/1.0;
interface so-0/0/2.0;
interface so-0/0/3.0;
```

**Meaning** Sample Outputs 1 and 2 from ingress router **R1** and egress router **R6**, respectively, show that the LSP is now traversing the network along the expected path, from **R1** through **R3** to **R6**, and the reverse LSP, from **R6** through **R3** to **R1**.

Sample Output 3 from transit router **R3** shows that there are two transit LSP sessions, one from **R1** to **R6** and the other from **R6** to **R1**.

Sample Output 4 shows the interfaces that were deactivated on the ingress, egress, and transit routers, forcing the LSP to take the intended path. If these interfaces were not deactivated, even though the configuration is now correct, the LSP would still traverse the network through the alternate path.

---

## Checklist for Verifying the IP and IGP Layers

<b>Problem</b>	<b>Description:</b> This checklist provides the steps and commands for investigating a problem at the Internet Protocol (IP) and interior gateway protocol (IGP) layers of the layered Multiprotocol Label Switching (MPLS) model. The checklist provides links to an overview
----------------	--



of the IP and IGP layers and more detailed information about the commands used to investigate the problem.

**Solution** Table 25 on page 987 provides commands for verifying the IP and IGP layers.

**Table 25: Checklist for Verifying the IP and IGP Layers**

Tasks	Command or Action
<b>“Verifying the IP and IGP Layers” on page 988</b>	
<b>“Verifying the IP Layer” on page 990</b>	
1. Verify the LSP on page 991	<code>show mpls lsp extensive</code>
2. Verify IP Addressing on page 992	<code>show interfaces terse</code>
3. Verify Neighbors or Adjacencies at the IP Layer on page 993	<code>show ospf neighbor extensive</code> <code>show isis adjacency extensive</code>
4. Take Appropriate Action on page 996	The following sequence of commands addresses the specific problem described in this topic:  [edit interfaces so-0/0/2] <code>show</code> rename unit 0 family inet address 10.1.13.2/30 to address 10.1.13.1/30 <code>show</code> <code>commit</code>
5. Verify the LSP Again on page 997	<code>show mpls lsp extensive</code>
<b>“Verifying the OSPF Protocol” on page 1009</b>	
1. Verify the LSP on page 1010	<code>show mpls lsp extensive</code>
2. Verify OSPF Interfaces on page 1012	<code>show ospf interface</code>
3. Verify OSPF Neighbors on page 1014	<code>show ospf neighbor</code>
4. Verifying an OSPF Configuration	<code>show configuration protocols ospf</code>

Table 25: Checklist for Verifying the IP and IGP Layers (*continued*)

Tasks	Command or Action
5. <a href="#">Taking Appropriate Action for Resolving the Network Problem on page 1232</a>	<p>The following sequence of commands addresses the specific problem described in this topic:</p> <pre> [edit] edit protocols ospf area 0.0.0.0  [edit protocols ospf area 0.0.0.0] set interface lo0 set interface lo0 passive up  [edit protocols ospf] set traffic-engineering show commit </pre>
6. <a href="#">Verify the LSP Again on page 1017</a>	<code>show mpls lsp extensive</code>
<b>Verifying the IS-IS Protocol</b>	
1. <a href="#">Verify the LSP on page 1027</a>	<code>show mpls lsp extensive</code>
2. <a href="#">Verify IS-IS Adjacencies and Interfaces on page 1028</a>	<pre> show isis adjacency show isis interface </pre>
3. <a href="#">Verify the IS-IS Configuration on page 1030</a>	<code>show configuration protocols isis</code>
4. <a href="#">Taking Appropriate Action for Resolving the Network Problem on page 1232</a>	<p>The following sequence of commands addresses the specific problem described in this topic:</p> <pre> edit  [edit] edit protocols isis [edit protocols isis] show delete level 2 set level 1 disable show commit run show isis adjacency </pre>
5. <a href="#">Verify the LSP Again on page 1031</a>	<code>show mpls lsp extensive</code>

## Verifying the IP and IGP Layers

- Problem**     **Description:** After you have configured the label-switched path (LSP), issued the `show mpls lsp extensive` command, and determined that there is an error, you might find that the error is not in the physical or data link layers. Continue investigating the problem at the IP and IGP layers of the network.
- [Figure 101 on page 989](#) illustrates the IP and IGP layers of the layered MPLS model.

Figure 101: IP and IGP Layers

BGP Layer	tracroute <i>host-name</i> show bgp summary show configuration protocols bgp show route <i>destination-prefix</i> detail show route receive protocol bgp <i>neighbor-address</i>
MPLS Layer	show mpls lsp show mpls lsp extensive show route table mpls.0 show route <i>address</i> tracroute <i>address</i> ping mpls rsvp <i>lsp-name</i> detail
RSVP Layer	show rsvp session show rsvp neighbor show rsvp interface
<div>↩ IGP and IP Layers Functioning ↪</div>	
OSPF Layer show ospf neighbor show configuration protocols ospf show ospf interface	IS-IS Layer show isis adjacency show configuration protocols isis show isis interface
IP Layer show ospf neighbor extensive show interfaces terse	IP Layer show isis adjacency extensive show interfaces terse
Data Link Layer	show interfaces extensive <i>"JUNOS Interfaces Operations Guide"</i>
Physical Layer	show interfaces show interfaces terse ping <i>host</i>

9015545

**Solution** At the IP and IGP layers, you must check the following:

- Interfaces have correct IP addressing, and the IGP neighbors or adjacencies are established.
- Open Shortest Path First (OSPF) or Intermediate System-to-Intermediate System (IS-IS) protocols are configured and running correctly.
  - If the OSPF protocol is configured, check the IP layer first, then the OSPF configuration, making sure that the protocol, interfaces, and traffic engineering are configured correctly.
  - If the IS-IS protocol is configured, it doesn't matter whether you check IS-IS or IP first because both protocols are independent of each other. Verify that IS-IS adjacencies are up, and that the interfaces and IS-IS protocol are configured correctly.




**NOTE:** The IS-IS protocol has traffic engineering enabled by default.

If the network is not functioning at the IP or IGP layers, the LSP does not work as configured.

Figure 102 on page 990 illustrates the MPLS network used in this topic.

Figure 102: MPLS Network Broken at the IP and IGP Layers

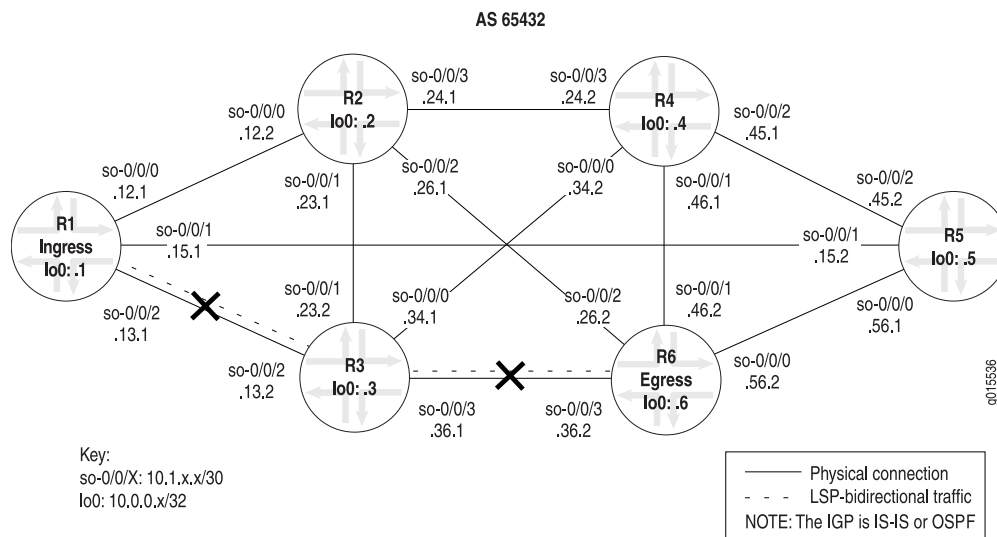

The network shown in [Figure 102 on page 990](#) is a fully meshed configuration where every directly connected interface can receive and send packets to every other similar interface. The LSP in this network is configured to run from ingress router **R1**, through transit router **R3**, to egress router **R6**. In addition, a reverse LSP is configured to run from **R6**, through **R3**, to **R1**, creating bidirectional traffic. The crosses in [Figure 102 on page 990](#) indicate where the LSP is not working because of the following problems at the IP and IGP layer:

- An IP address is configured incorrectly on the ingress router (**R1**).
- The OSPF protocol is configured with a router ID (RID) but without the loopback (**lo0**) interface, and traffic engineering is missing from the transit router (**R3**).
- Levels in the IS-IS network are mismatched.

#### Related Documentation

To check the IP and IGP layers, follow these steps:


- [Verifying the IP Layer on page 990](#)
- [Verifying the OSPF Protocol on page 1009](#)
- [Verifying the IS-IS Protocol](#)

## Verifying the IP Layer

**Purpose** You can check the IP layer before or after you check the interior gateway protocol (IGP) layer, depending on whether you have OSPF or IS-IS configured as the IGP. If your MPLS network is configured with OSPF as the IGP, you must first verify the IP layer, checking that the interfaces have correct IP addressing and that the OSPF neighbors are established before you check the OSPF layer.

If you have IS-IS configured as the IGP in your MPLS network, you can verify either the IP layer or the IS-IS protocol layer first. The order in which you check the IP or IS-IS layer does not affect the results.

Figure 103: MPLS Network Broken at the IP Layer

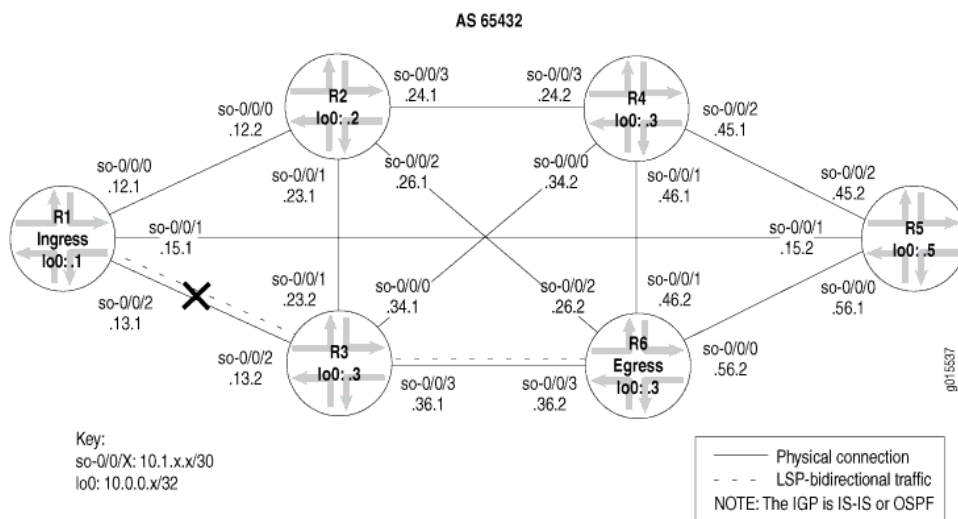

The cross in Figure 103 on page 991 indicates where the LSP is broken because of the incorrect configuration of an IP address on ingress router R1.

1. [Verify the LSP on page 991](#)
2. [Verify IP Addressing on page 992](#)
3. [Verify Neighbors or Adjacencies at the IP Layer on page 993](#)
4. [Take Appropriate Action on page 996](#)
5. [Verify the LSP Again on page 997](#)

## Verify the LSP

**Purpose** After configuring the LSP, you must verify that the LSP is up. LSPs can be ingress, transit, or egress. Use the **show mpls lsp** command for quick verification of the LSP state, with the **extensive** option (**show mpls lsp extensive**) as a follow-up if the LSP is down. If your network has numerous LSPs, you might consider specifying the name of the LSP, using the **name** option (**show mpls lsp name *name*** or **show mpls lsp name *name* extensive**).

**Action** To verify that the LSP is up, enter the following command from the ingress router:

```
user@host> show mpls lsp extensive
```

## Sample Output 1

```
user@R1> show mpls lsp extensive
Ingress LSP: 1 sessions

10.0.0.6
From: 10.0.0.1, State: Dn, ActiveRoute: 0, LSPname: R1-to-R6
ActivePath: (none)
LoadBalance: Random
Encoding type: Packet, Switching type: Packet, GPID: IPv4
Primary State: Dn
Will be enqueued for recomputation in 25 second(s).
44 Oct 15 16:56:11 CSPF failed: no route toward 10.0.0.6 [2685 times]
```

```

43 Oct 14 19:07:09 Clear Call
42 Oct 14 19:06:56 Deselected as active
41 Oct 14 19:06:56 10.1.12.1: MPLS label allocation failure
40 Oct 14 19:06:56 Down
39 Oct 14 18:43:43 Selected as active path
38 Oct 14 18:43:43 Record Route: 10.1.13.2 10.1.36.2
37 Oct 14 18:43:43 Up
[...Output truncated...]
Created: Thu Oct 14 16:04:33 2004
Total 1 displayed, Up 0, Down 1

Egress LSP: 0 sessions
Total 0 displayed , Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed , Up 0, Down 0

```

**Meaning** The sample output from ingress router **R1** shows that an MPLS label allocation failure occurred and the Constrained Shortest Path First (CSPF) algorithm failed, resulting in no route to destination **10.0.0.6** on **R6**.

## Verify IP Addressing

**Purpose** When you investigate the IP layer, you verify that interfaces have correct IP addressing, and that OSPF neighbors or IS-IS adjacencies are established. In this example, an IP address is configured incorrectly on the ingress router (**R1**).

**Action** To verify IP addressing, enter the following command from the ingress, transit, and egress routers:

```
user@host> show interfaces terse
```

## Sample Output

```

user@R1> show interfaces terse
Interface      Admin Link Proto Local Remote
so-0/0/0       up   up   inet 10.1.12.1/30
so-0/0/0.0      up   up   inet 10.1.12.1/30
                up   up   iso
                up   up   mpls

so-0/0/1       up   up   inet 10.1.15.1/30
so-0/0/1.0      up   up   inet 10.1.15.1/30
                up   up   iso
                up   up   mpls

so-0/0/2       up   up   inet 10.1.13.2 <<< Incorrect IP address
so-0/0/2.0      up   up   inet 10.1.13.2 <<< Incorrect IP address
                up   up   iso
                up   up   mpls

lo0            up   up
lo0.0          up   up   inet 10.0.0.1
                up   up   iso 49.0004.1000.0000.0001.00

user@R3> show interfaces terse
Interface      Admin Link Proto Local Remote
so-0/0/0       up   up
so-0/0/0.0      up   up   inet 10.1.34.1/30
                up   up   iso
                up   up   mpls

```

```

so-0/0/1          up    up
so-0/0/1.0        up    up    inet  10.1.23.2/30
                                iso
                                mpls

so-0/0/2          up    up
so-0/0/2.0        up    up    inet  10.1.13.2/30 <<< Identical to R1
                                iso
                                mpls

so-0/0/3          up    up
so-0/0/3.0        up    up    inet  10.1.36.1/30
                                iso
                                mpls

lo0              up    up
lo0.0            up    up    inet  10.0.0.3
                                iso  49.0004.1000.0000.0003.00

```

```

user@R6> show interfaces terse
Interface      Admin Link Proto Local Remote
so-0/0/0       up    up
so-0/0/0.0     up    up    inet  10.1.56.2/30
                                iso
                                mpls

so-0/0/1       up    up
so-0/0/1.0     up    up    inet  10.1.46.2/30
                                iso
                                mpls

so-0/0/2       up    up
so-0/0/2.0     up    up    inet  10.1.26.2/30
                                iso
                                mpls

so-0/0/3       up    up
so-0/0/3.0     up    up    inet  10.1.36.2/30
                                iso
                                mpls

lo0.0          up    up    inet  10.0.0.6
                                iso  49.0004.1000.0000.0006.00

```

**Meaning** The sample output shows that the IP addresses for interface **so-0/0/2.0** on **R1** and interface **so-0/0/2.0** on **R3** are identical. Interface IP addresses within a network must be unique for the interface to be identified correctly.

## Verify Neighbors or Adjacencies at the IP Layer

**Purpose** If the IP addressing is configured incorrectly then the OSPF neighbors or IS-IS adjacencies both need to be checked to determine if one or both of them are established.

**Action** To verify neighbors (OSPF) or adjacencies (IS-IS), enter the following commands from the ingress, transit, and egress routers:

```

user@host> show ospf neighbor extensive
user@host> show isis adjacency extensive

```

## Sample Output 1

```

user@R1> show ospf neighbor extensive
Address      Interface      State      ID          Pri  Dead
10.1.12.2    so-0/0/0.0    Full      10.0.0.2    128  34
area 0.0.0.0, opt 0x42, DR 0.0.0.0, BDR 0.0.0.0

```

```

Up 1d 04:45:20, adjacent 1d 04:45:20
10.1.15.2      so-0/0/1.0      Full      10.0.0.5      128    35
area 0.0.0.0, opt 0x42, DR 0.0.0.0, BDR 0.0.0.0
Up 1d 04:45:20, adjacent 1d 04:45:10 <<< no adjacency with R3 so-0/0/2

user@R3> show ospf neighbor extensive
Address      Interface      State      ID              Pri  Dead
10.1.23.1     so-0/0/1.0     Full      10.0.0.2        128   35
area 0.0.0.0, opt 0x42, DR 0.0.0.0, BDR 0.0.0.0
Up 1w2d 04:54:30, adjacent 1w2d 04:54:21
10.1.36.2     so-0/0/3.0     Full      10.0.0.6        128   39
area 0.0.0.0, opt 0x42, DR 0.0.0.0, BDR 0.0.0.0
Up 1w2d 04:54:30, adjacent 1w2d 04:54:30 <<< no adjacency with R1 so-0/0/2

user@R6> show ospf neighbor extensive
Address      Interface      State      ID              Pri  Dead
10.1.56.1     so-0/0/0.0     Full      10.0.0.5        128   39
area 0.0.0.0, opt 0x42, DR 0.0.0.0, BDR 0.0.0.0
Up 1d 02:59:35, adjacent 1d 02:59:35
10.1.26.1     so-0/0/2.0     Full      10.0.0.2        128   36
area 0.0.0.0, opt 0x42, DR 0.0.0.0, BDR 0.0.0.0
Up 1w2d 04:57:30, adjacent 1w2d 04:57:30
10.1.36.1     so-0/0/3.0     Full      10.0.0.3        128   36
area 0.0.0.0, opt 0x42, DR 0.0.0.0, BDR 0.0.0.0
Up 1w2d 04:56:11, adjacent 1w2d 04:56:11

```

## Sample Output 2

```

user@R1> show isis adjacency extensive
R2
Interface: so-0/0/0.0, Level:2, State:Up , Expires in 23 secs
Priority: 0, Up/Down transitions: 1, Last transition: 05:57:16 ago
Circuit type: 2, Speaks:IP , IPv6
Topologies: Unicast
Restart capable: Yes
IP addresses: 10.1.12.2
Transition log:
When          State      Reason
Fri Oct 15 14:58:35  Up        Seenself

R5
Interface: so-0/0/1.0, Level:2, State:Up, Expires in 26 secs
Priority: 0, Up/Down transitions: 1, Last transition: 05:56:52 ago
Circuit type: 2, Speaks:IP , IPv6
Topologies: Unicast
Restart capable: Yes
IP addresses: 10.1.15.2
Transition log:
When          State      Reason
Fri Oct 15 14:59:00  Up        Seenself

R3
Interface: so-0/0/2.0, Level: 2, State: Up, Expires in 26 secs
Priority: 0, Up/Down transitions: 1, Last transition: 05:56:51 ago
Circuit type: 2, Speaks:IP , IPv6
Topologies: Unicast
Restart capable: Yes
IP addresses: 10.1.13.2
Transition log:
When          State      Reason

```



Fri Oct 15 14:59:01 Up Seenself

user@R3> show isis adjacency extensive

R4

Interface: so-0/0/0.0, Level:2, State:Up , Expires in 25 secs  
 Priority: 0, Up/Down transitions: 1, Last transition: 1w1d 00:22:51 ago  
 Circuit type: 2, Speaks:IP , IPv6  
 Topologies: Unicast  
 Restart capable: Yes  
 IP addresses: 10.1.34.2  
 Transition log:

When	State	Reason
Thu Oct 28 15:13:12	Up	Seenself

R2

Interface: so-0/0/1.0, Level:2, State:Up , Expires in 25 secs  
 Priority: 0, Up/Down transitions: 1, Last transition: 2w2d 18:02:48 ago  
 Circuit type: 2, Speaks:IP , IPv6  
 Topologies: Unicast  
 Restart capable: Yes  
 IP addresses: 10.1.23.1  
 Transition log:

When	State	Reason
Tue Oct 19 21:33:15	Up	Seenself

R1

Interface: so-0/0/2.0, Level:2, State:Up , Expires in 22 secs  
 Priority: 0, Up/Down transitions: 1, Last transition: 2w2d 17:24:06 ago  
 Circuit type: 2, Speaks:IP , IPv6  
 Topologies: Unicast  
 Restart capable: Yes  
 IP addresses: 10.1.13.1  
 Transition log:

When	State	Reason
Tue Oct 19 22:11:57	Up	Seenself

R6

Interface: so-0/0/3.0, Level:2, State:Up , Expires in 21 secs  
 Priority: 0, Up/Down transitions: 1, Last transition: 2w1d 00:07:00 ago  
 Circuit type: 2, Speaks:IP , IPv6  
 Topologies: Unicast  
 Restart capable: Yes  
 IP addresses: 10.1.36.2  
 Transition log:

When	State	Reason
Thu Oct 21 15:29:03	Up	Seenself

user@R6> show isis adjacency extensive

R5

Interface: so-0/0/0.0, Level:2, State:Up , Expires in 23 secs  
 Priority: 0, Up/Down transitions: 1, Last transition: 1w2d 01:10:03 ago  
 Circuit type: 2, Speaks:IP , IPv6  
 Topologies: Unicast  
 Restart capable: Yes  
 IP addresses: 10.1.56.1  
 Transition log:

When	State	Reason
Wed Oct 27 14:35:32	Up	Seenself

R4

Interface: so-0/0/1.0, Level:2, State:Up , Expires in 25 secs

```
Priority: 0, Up/Down transitions: 1, Last transition: 1w1d 00:26:50 ago
Circuit type: 2, Speaks: IP , IPv6
Topologies: Unicast
Restart capable: Yes
IP addresses: 10.1.46.1
Transition log:
When                State      Reason
Thu Oct 28 15:18:45 Up        Seenself
```

**R2**

```
Interface: so-0/0/2.0, Level: 2, State: Up , Expires in 24 secs
Priority: 0, Up/Down transitions: 1, Last transition: 2w1d 00:11:40 ago
Circuit type: 2, Speaks: IP , IPv6
Topologies: Unicast
Restart capable: Yes
IP addresses: 10.1.26.1
Transition log:
When                State      Reason
Thu Oct 21 15:33:55 Up        Seenself
```

**R3**

```
Interface: so-0/0/3.0, Level: 2, State: Up , Expires in 19 secs
Priority: 0, Up/Down transitions: 1, Last transition: 2w1d 00:11:40 ago
Circuit type: 2, Speaks: IP , IPv6
Topologies: Unicast
Restart capable: Yes
IP addresses: 10.1.36.1
Transition log:
When                State      Reason
Thu Oct 21 15:33:55 Up        Seenself
```

**Meaning** Sample Output 1 from the ingress, transit, and egress routers shows that **R1** and **R3** are not established OSPF neighbors. Considering that the two interfaces **so-0/0/2.0** (**R1** and **R3**) are configured with identical IP addresses, you would expect this. The OSPF protocol routes IP packets based solely on the destination IP address contained in the IP packet header. Therefore, identical IP addresses in the autonomous system (AS) result in neighbors not establishing.

Sample Output 2 from the ingress, transit, and egress routers shows that **R1** and **R3** have established an IS-IS adjacency despite the identical IP addresses configured on interfaces **so-0/0/2.0** on **R1** and **R3**. The IS-IS protocol behaves differently from the OSPF protocol because it does not rely on IP to establish an adjacency. However, if the LSP is not up, it is still useful to check the IP subnet addressing in case there is a mistake in that layer. Correcting the addressing error might bring the LSP back up.

## Take Appropriate Action

**Problem** **Description:** Depending on the error you encountered in your investigation, you must take the appropriate action to correct the problem. In this example, the IP address of an interface on transit router **R2** is incorrectly configured.

**Solution** To correct the error in this example, enter the following commands:

```
[edit interfaces so-0/0/2]
user@R1# show
```

```

user@R1# rename unit 0 family inet address 10.1.13.2/30 to address 10.1.13.1/30
user@R1# show
user@R1# commit

```

**Sample Output**

```

[edit interfaces so-0/0/2]
user@R1# show
unit 0 {
  family inet {
    address 10.1.13.2/30; <<< Incorrect IP address
  }
  family iso;
  family mpls;
}

[edit interfaces so-0/0/2]
user@R1# rename unit 0 family inet address 10.1.13.2/30 to address 10.1.13.1/30

[edit interfaces so-0/0/2]
user@R1# show
unit 0 {
  family inet {
    address 10.1.13.1/30; <<< Correct IP address.
  }
  family iso;
  family mpls;
}

[edit interfaces so-0/0/2]
user@R1# commit
commit complete

```

**Meaning** The sample output shows that interface **so-0/0/2** on ingress router **R1** is now configured with the correct IP address. This correction results in unique subnet IP addresses for all interfaces in the MPLS network in [Figure 102 on page 990](#), and the possibility that the LSP might come up.

**Verify the LSP Again**

**Purpose** After taking the appropriate action to correct the error, the LSP needs to be checked again to confirm that the problem in the OSPF protocol has been resolved.

**Action** To verify the LSP again, enter the following command on the ingress, transit, and egress routers:

```
user@host> show mpls lsp extensive
```

**Sample Output 1**

```

user@R1> show mpls lsp extensive
Ingress LSP: 1 sessions

10.0.0.6
  From: 10.0.0.1, State: Up,  ActiveRoute:1 , LSPname: R1-to-R6
  ActivePath: (primary)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary                               State: Up

```

```

    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 20)
10.1.13.2 S 10.1.36.2 S
    Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):

        10.1.13.2 10.1.36.2
54 Oct 15 21:28:16 Selected as active path
53 Oct 15 21:28:16 Record Route: 10.1.13.2 10.1.36.2
52 Oct 15 21:28:16 Up
51 Oct 15 21:28:16 10.1.15.1: MPLS label allocation failure[2 times]
50 Oct 15 21:28:11 CSPF: computation result accepted
49 Oct 15 21:27:42 10.1.15.1: MPLS label allocation failure
48 Oct 15 21:27:42 CSPF: computation result accepted
47 Oct 15 21:27:31 10.1.15.1: MPLS label allocation failure[4 times]
46 Oct 15 21:27:13 Originate Call
45 Oct 15 21:27:13 CSPF: computation result accepted
[...Output truncated...]
Created: Thu Oct 14 16:04:34 2004
Total 1 displayed, Up 1, Down 0

Egress LSP: 1 sessions

10.0.0.1
From: 10.0.0.6, LSPstate: Up, ActiveRoute: 0
LSPname: R6-to-R1, LSPpath: Primary
Suggested label received: -, Suggested label sent: -
Recovery label received: -, Recovery label sent: -
Resv style: 1 FF, Label in: 3, Label out: -
Time left: 149, Since: Fri Oct 15 21:28:13 2004
Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
Port number: sender 13 receiver 39024 protocol 0
PATH rcvfrom: 10.1.13.2 (so-0/0/2.0) 10 pkts
Adspec: received MTU 1500
PATH sentto: localclient
RESV rcvfrom: localclient
Record route: 10.1.36.2 10.1.13.2 <self>
Total 1 displayed, Up 1, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

## Sample Output 2

```

user@R3> show mpls lsp extensive
Ingress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 2 sessions

10.0.0.1
From: 10.0.0.6, LSPstate: Up, ActiveRoute: 1
LSPname: R6-to-R1, LSPpath: Primary
Suggested label received: -, Suggested label sent: -
Recovery label received: -, Recovery label sent: 3
Resv style: 1 FF, Label in: 100336, Label out: 3
Time left: 156, Since: Fri Oct 15 21:15:47 2004
Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
Port number: sender 13 receiver 39024 protocol 0
PATH rcvfrom: 10.1.36.2 (so-0/0/3.0) 11 pkts

```

```

Adspec: received MTU 1500 sent MTU 1500
PATH sentto: 10.1.13.1 (so-0/0/2.0) 11 pkts
RESV rcvfrom: 10.1.13.1 (so-0/0/2.0) 11 pkts
Explct route: 10.1.13.1
Record route: 10.1.36.2 <self> 10.1.13.1

10.0.0.6
From: 10.0.0.1, LSPstate: Up , ActiveRoute: 1
LSPname: R1-to-R6 , LSPpath: Primary
Suggested label received: -, Suggested label sent: -
Recovery label received: -, Recovery label sent: 3
Resv style: 1 FF, Label in: 100352, Label out: 3
Time left: 159, Since: Fri Oct 15 21:15:50 2004
Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
Port number: sender 5 receiver 47901 protocol 0
PATH rcvfrom: 10.1.13.1 (so-0/0/2.0) 11 pkts
Adspec: received MTU 1500 sent MTU 1500
PATH sentto: 10.1.36.2 (so-0/0/3.0) 11 pkts
RESV rcvfrom: 10.1.36.2 (so-0/0/3.0) 11 pkts
Explct route: 10.1.36.2
Record route: 10.1.13.1 <self> 10.1.36.2
Total 2 displayed, Up 2 , Down 0

```

### Sample Output 3

```

user@R6> show mpls lsp extensive
Ingress LSP: 1 sessions

10.0.0.1
From: 10.0.0.6, State: Up , ActiveRoute: 1, LSPname: R6-to-R1
ActivePath: (primary)
LoadBalance: Random
Encoding type: Packet, Switching type: Packet, GPID: IPv4
*Primary State: Up
Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 20)
10.1.36.1 S 10.1.13.1 S
Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):

10.1.36.1 10.1.13.1
187 Oct 15 21:20:05 Selected as active path
186 Oct 15 21:20:05 Record Route: 10.1.36.1 10.1.13.1
185 Oct 15 21:20:05 Up
184 Oct 15 21:20:05 Clear Call
183 Oct 15 21:20:05 CSPF: computation result accepted
182 Oct 15 21:20:05 CSPF: link down/deleted
10.1.13.2(R3.00/10.0.0.3)->10.1.13.2(R1.00/10.0.0.1)
[...Output truncated...]
Created: Tue Aug 17 12:18:33 2004
Total 1 displayed, Up 1 , Down 0

Egress LSP: 1 sessions

10.0.0.6
From: 10.0.0.1, LSPstate: Up, ActiveRoute: 0
LSPname: R1-to-R6 , LSPpath: Primary
Suggested label received: -, Suggested label sent: -
Recovery label received: -, Recovery label sent: -
Resv style: 1 FF, Label in: 3, Label out: -
Time left: 144, Since: Fri Oct 15 21:20:08 2004
Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
Port number: sender 5 receiver 47901 protocol 0

```

```
PATH rcvfrom: 10.1.36.1 (so-0/0/3.0) 11 pkts
Adspec: received MTU 1500
PATH sentto: localclient
RESV rcvfrom: localclient
Record route: 10.1.13.1 10.1.36.1 <self>
Total 1 displayed, Up 1, Down 0
```

```
Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

**Meaning** Sample Output 1 from ingress router **R1** shows that LSP **R1-to-R6** has an active route to **R6** and the state is up. The output shows that the egress LSP session **R6-to-R1** received and sent a recovery label.

Sample Output 2 from transit router **R3** shows that there are two transit LSP sessions, one from **R1** to **R6** and the other from **R6** to **R1**. Both LSPs are up.

Sample Output 3 from egress router **R6** shows that the LSP is up and the active route is the primary route. The LSP is now traversing the network along the expected path, from **R1** through **R3** to **R6**, and the reverse LSP, from **R6** through **R3** to **R1**.

---

## Verify the LSP

**Purpose** After configuring the LSP, you must verify that the LSP is up. LSPs can be ingress, transit, or egress. Use the **show mpls lsp** command for quick verification of the LSP state, with the **extensive** option (**show mpls lsp extensive**) as a follow-up if the LSP is down. If your network has numerous LSPs, you might consider specifying the name of the LSP, using the **name** option (**show mpls lsp name *name*** or **show mpls lsp name *name* extensive**).

**Action** To verify that the LSP is up, enter the following command from the ingress router:

```
user@host> show mpls lsp extensive
```

## Sample Output 1

```
user@R1> show mpls lsp extensive
Ingress LSP: 1 sessions

10.0.0.6
  From: 10.0.0.1, State: Dn, ActiveRoute: 0, LSPname: R1-to-R6
  ActivePath: (none)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  Primary State: Dn
    Will be enqueued for recomputation in 25 second(s).
  44 Oct 15 16:56:11 CSPF failed: no route toward 10.0.0.6 [2685 times]
  43 Oct 14 19:07:09 Clear Call
  42 Oct 14 19:06:56 Deselected as active
  41 Oct 14 19:06:56 10.1.12.1: MPLS label allocation failure
  40 Oct 14 19:06:56 Down
  39 Oct 14 18:43:43 Selected as active path
  38 Oct 14 18:43:43 Record Route: 10.1.13.2 10.1.36.2
  37 Oct 14 18:43:43 Up
  [...Output truncated...]
  Created: Thu Oct 14 16:04:33 2004
Total 1 displayed, Up 0, Down 1
```

Egress LSP: 0 sessions  
Total 0 displayed , Up 0, Down 0

Transit LSP: 0 sessions  
Total 0 displayed , Up 0, Down 0

**Meaning** The sample output from ingress router **R1** shows that an MPLS label allocation failure occurred and the Constrained Shortest Path First (CSPF) algorithm failed, resulting in no route to destination **10.0.0.6** on **R6**.

## Verify IP Addressing

**Purpose** When you investigate the IP layer, you verify that interfaces have correct IP addressing, and that OSPF neighbors or IS-IS adjacencies are established. In this example, an IP address is configured incorrectly on the ingress router (**R1**).

**Action** To verify IP addressing, enter the following command from the ingress, transit, and egress routers:

```
user@host> show interfaces terse
```

## Sample Output

```
user@R1> show interfaces terse
Interface      Admin Link Proto Local Remote
so-0/0/0       up   up   inet 10.1.12.1/30
so-0/0/0.0     up   up   inet 10.1.12.1/30
                iso
                mpls

so-0/0/1       up   up   inet 10.1.15.1/30
so-0/0/1.0     up   up   inet 10.1.15.1/30
                iso
                mpls

so-0/0/2       up   up   inet 10.1.13.2 <<< Incorrect IP address
so-0/0/2.0     up   up   inet 10.1.13.2 <<< Incorrect IP address
                iso
                mpls

lo0            up   up   inet 10.0.0.1
lo0.0          up   up   inet 10.0.0.1
                iso 49.0004.1000.0000.0001.00
```

```
user@R3> show interfaces terse
Interface      Admin Link Proto Local Remote
so-0/0/0       up   up   inet 10.1.34.1/30
so-0/0/0.0     up   up   inet 10.1.34.1/30
                iso
                mpls

so-0/0/1       up   up   inet 10.1.23.2/30
so-0/0/1.0     up   up   inet 10.1.23.2/30
                iso
                mpls

so-0/0/2       up   up   inet 10.1.13.2/30 <<< Identical to R1
so-0/0/2.0     up   up   inet 10.1.13.2/30 <<< Identical to R1
                iso
                mpls

so-0/0/3       up   up   inet 10.1.36.1/30
so-0/0/3.0     up   up   inet 10.1.36.1/30
                iso
```

```

mpls
lo0          up    up
lo0.0        up    up    inet  10.0.0.3
                                iso  49.0004.1000.0000.0003.00

user@R6> show interfaces terse
Interface    Admin Link Proto Local Remote
so-0/0/0     up    up   inet  10.1.56.2/30
so-0/0/0.0   up    up   iso
                                mpls
so-0/0/1     up    up   inet  10.1.46.2/30
so-0/0/1.0   up    up   iso
                                mpls
so-0/0/2     up    up   inet  10.1.26.2/30
so-0/0/2.0   up    up   iso
                                mpls
so-0/0/3     up    up   inet  10.1.36.2/30
so-0/0/3.0   up    up   iso
                                mpls
lo0.0        up    up   inet  10.0.0.6
                                iso  49.0004.1000.0000.0006.00

```

**Meaning** The sample output shows that the IP addresses for interface **so-0/0/2.0** on **R1** and interface **so-0/0/2.0** on **R3** are identical. Interface IP addresses within a network must be unique for the interface to be identified correctly.

## Verify Neighbors or Adjacencies at the IP Layer

**Purpose** If the IP addressing is configured incorrectly then the OSPF neighbors or IS-IS adjacencies both need to be checked to determine if one or both of them are established.

**Action** To verify neighbors (OSPF) or adjacencies (IS-IS), enter the following commands from the ingress, transit, and egress routers:

```

user@host> show ospf neighbor extensive
user@host> show isis adjacency extensive

```

### Sample Output 1

```

user@R1> show ospf neighbor extensive
Address      Interface      State      ID          Pri  Dead
10.1.12.2    so-0/0/0.0    Full      10.0.0.2    128  34
  area 0.0.0.0, opt 0x42, DR 0.0.0.0, BDR 0.0.0.0
  Up 1d 04:45:20, adjacent 1d 04:45:20
10.1.15.2    so-0/0/1.0    Full      10.0.0.5    128  35
  area 0.0.0.0, opt 0x42, DR 0.0.0.0, BDR 0.0.0.0
  Up 1d 04:45:20, adjacent 1d 04:45:10 <<< no adjacency with R3 so-0/0/2

user@R3> show ospf neighbor extensive
Address      Interface      State      ID          Pri  Dead
10.1.23.1    so-0/0/1.0    Full      10.0.0.2    128  35
  area 0.0.0.0, opt 0x42, DR 0.0.0.0, BDR 0.0.0.0
  Up 1w2d 04:54:30, adjacent 1w2d 04:54:21
10.1.36.2    so-0/0/3.0    Full      10.0.0.6    128  39

```



```

area 0.0.0.0, opt 0x42, DR 0.0.0.0, BDR 0.0.0.0
Up 1w2d 04:54:30, adjacent 1w2d 04:54:30 <<< no adjacency with R1 so-0/0/2

```

```
user@R6> show ospf neighbor extensive
```

Address	Interface	State	ID	Pri	Dead
10.1.56.1	so-0/0/0.0	Full	10.0.0.5	128	39
area 0.0.0.0, opt 0x42, DR 0.0.0.0, BDR 0.0.0.0					
Up 1d 02:59:35, adjacent 1d 02:59:35					
10.1.26.1	so-0/0/2.0	Full	10.0.0.2	128	36
area 0.0.0.0, opt 0x42, DR 0.0.0.0, BDR 0.0.0.0					
Up 1w2d 04:57:30, adjacent 1w2d 04:57:30					
10.1.36.1	so-0/0/3.0	Full	10.0.0.3	128	36
area 0.0.0.0, opt 0x42, DR 0.0.0.0, BDR 0.0.0.0					
Up 1w2d 04:56:11, adjacent 1w2d 04:56:11					

## Sample Output 2

```
user@R1> show isis adjacency extensive
```

R2

```

Interface: so-0/0/0.0, Level:2, State:Up , Expires in 23 secs
Priority: 0, Up/Down transitions: 1, Last transition: 05:57:16 ago
Circuit type: 2, Speaks:IP , IPv6
Topologies: Unicast
Restart capable: Yes
IP addresses:10.1.12.2
Transition log:
When                State      Reason
Fri Oct 15 14:58:35 Up          Seenself

```

R5

```

Interface: so-0/0/1.0, Level:2, State:Up, Expires in 26 secs
Priority: 0, Up/Down transitions: 1, Last transition: 05:56:52 ago
Circuit type: 2, Speaks:IP , IPv6
Topologies: Unicast
Restart capable: Yes
IP addresses:10.1.15.2
Transition log:
When                State      Reason
Fri Oct 15 14:59:00 Up          Seenself

```

R3

```

Interface: so-0/0/2.0, Level: 2, State: Up, Expires in 26 secs
Priority: 0, Up/Down transitions: 1, Last transition: 05:56:51 ago
Circuit type: 2, Speaks:IP , IPv6
Topologies: Unicast
Restart capable: Yes
IP addresses:10.1.13.2
Transition log:
When                State      Reason
Fri Oct 15 14:59:01 Up          Seenself

```

```
user@R3> show isis adjacency extensive
```

R4

```

Interface: so-0/0/0.0, Level:2, State:Up , Expires in 25 secs
Priority: 0, Up/Down transitions: 1, Last transition: 1w1d 00:22:51 ago
Circuit type: 2, Speaks:IP , IPv6
Topologies: Unicast
Restart capable: Yes
IP addresses:10.1.34.2
Transition log:

```

When	State	Reason
Thu Oct 28 15:13:12	Up	Seenself

R2

Interface: so-0/0/1.0, **Level:2, State:Up** , Expires in 25 secs  
 Priority: 0, Up/Down transitions: 1, Last transition: 2w2d 18:02:48 ago  
 Circuit type: 2, **Speaks:IP** , IPv6  
 Topologies: Unicast  
 Restart capable: Yes  
**IP addresses: 10.1.23.1**

Transition log:

When	State	Reason
Tue Oct 19 21:33:15	Up	Seenself

R1

Interface: so-0/0/2.0, **Level:2, State:Up** , Expires in 22 secs  
 Priority: 0, Up/Down transitions: 1, Last transition: 2w2d 17:24:06 ago  
 Circuit type: 2, **Speaks:IP** , IPv6  
 Topologies: Unicast  
 Restart capable: Yes  
**IP addresses: 10.1.13.1**

Transition log:

When	State	Reason
Tue Oct 19 22:11:57	Up	Seenself

R6

Interface: so-0/0/3.0, **Level:2, State:Up** , Expires in 21 secs  
 Priority: 0, Up/Down transitions: 1, Last transition: 2w1d 00:07:00 ago  
 Circuit type: 2, **Speaks:IP** , IPv6  
 Topologies: Unicast  
 Restart capable: Yes  
**IP addresses: 10.1.36.2**

Transition log:

When	State	Reason
Thu Oct 21 15:29:03	Up	Seenself

user@R6&gt; show isis adjacency extensive

R5

Interface: so-0/0/0.0, **Level:2, State:Up** , Expires in 23 secs  
 Priority: 0, Up/Down transitions: 1, Last transition: 1w2d 01:10:03 ago  
 Circuit type: 2, **Speaks:IP** , IPv6  
 Topologies: Unicast  
 Restart capable: Yes  
**IP addresses: 10.1.56.1**

Transition log:

When	State	Reason
Wed Oct 27 14:35:32	Up	Seenself

R4

Interface: so-0/0/1.0, **Level:2, State:Up** , Expires in 25 secs  
 Priority: 0, Up/Down transitions: 1, Last transition: 1w1d 00:26:50 ago  
 Circuit type: 2, **Speaks:IP** , IPv6  
 Topologies: Unicast  
 Restart capable: Yes  
**IP addresses: 10.1.46.1**

Transition log:

When	State	Reason
Thu Oct 28 15:18:45	Up	Seenself

R2

Interface: so-0/0/2.0, **Level:2, State:Up** , Expires in 24 secs

```

Priority: 0, Up/Down transitions: 1, Last transition: 2w1d 00:11:40 ago
Circuit type: 2, Speaks: IP , IPv6
Topologies: Unicast
Restart capable: Yes
IP addresses: 10.1.26.1
Transition log:
When                State      Reason
Thu Oct 21 15:33:55 Up          SeenseIf

```

R3

```

Interface: so-0/0/3.0, Level: 2, State: Up , Expires in 19 secs
Priority: 0, Up/Down transitions: 1, Last transition: 2w1d 00:11:40 ago
Circuit type: 2, Speaks: IP , IPv6
Topologies: Unicast
Restart capable: Yes
IP addresses: 10.1.36.1
Transition log:
When                State      Reason
Thu Oct 21 15:33:55 Up          SeenseIf

```

**Meaning** Sample Output 1 from the ingress, transit, and egress routers shows that **R1** and **R3** are not established OSPF neighbors. Considering that the two interfaces **so-0/0/2.0** (**R1** and **R3**) are configured with identical IP addresses, you would expect this. The OSPF protocol routes IP packets based solely on the destination IP address contained in the IP packet header. Therefore, identical IP addresses in the autonomous system (AS) result in neighbors not establishing.

Sample Output 2 from the ingress, transit, and egress routers shows that **R1** and **R3** have established an IS-IS adjacency despite the identical IP addresses configured on interfaces **so-0/0/2.0** on **R1** and **R3**. The IS-IS protocol behaves differently from the OSPF protocol because it does not rely on IP to establish an adjacency. However, if the LSP is not up, it is still useful to check the IP subnet addressing in case there is a mistake in that layer. Correcting the addressing error might bring the LSP back up.

## Take Appropriate Action

**Problem** **Description:** Depending on the error you encountered in your investigation, you must take the appropriate action to correct the problem. In this example, the IP address of an interface on transit router **R2** is incorrectly configured.

**Solution** To correct the error in this example, enter the following commands:

```

[edit interfaces so-0/0/2]
user@R1# show
user@R1# rename unit 0 family inet address 10.1.13.2/30 to address 10.1.13.1/30
user@R1# show
user@R1# commit

```

**Sample Output**

```
[edit interfaces so-0/0/2]
user@R1# show
unit 0 {
    family inet {
        address 10.1.13.2/30; <<< Incorrect IP address
    }
    family iso;
    family mpls;
}

[edit interfaces so-0/0/2]
user@R1# rename unit 0 family inet address 10.1.13.2/30 to address 10.1.13.1/30

[edit interfaces so-0/0/2]
user@R1# show
unit 0 {
    family inet {
        address 10.1.13.1/30; <<< Correct IP address.
    }
    family iso;
    family mpls;
}

[edit interfaces so-0/0/2]
user@R1# commit
commit complete
```

**Meaning** The sample output shows that interface **so-0/0/2** on ingress router **R1** is now configured with the correct IP address. This correction results in unique subnet IP addresses for all interfaces in the MPLS network in [Figure 102 on page 990](#), and the possibility that the LSP might come up.

---

## Verify the LSP Again

**Purpose** After taking the appropriate action to correct the error, the LSP needs to be checked again to confirm that the problem in the OSPF protocol has been resolved.

**Action** To verify the LSP again, enter the following command on the ingress, transit, and egress routers:

```
user@host> show mpls lsp extensive
```

### Sample Output 1

```
user@R1> show mpls lsp extensive
Ingress LSP: 1 sessions

10.0.0.6
  From: 10.0.0.1, State: Up,  ActiveRoute:1 , LSPname: R1-to-R6
  ActivePath: (primary)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary                               State:Up
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 20)
10.1.13.2 S 10.1.36.2 S
  Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):
```

```

10.1.13.2 10.1.36.2
54 Oct 15 21:28:16 Selected as active path
53 Oct 15 21:28:16 Record Route: 10.1.13.2 10.1.36.2
52 Oct 15 21:28:16 Up
51 Oct 15 21:28:16 10.1.15.1: MPLS label allocation failure[2 times]
50 Oct 15 21:28:11 CSPF: computation result accepted
49 Oct 15 21:27:42 10.1.15.1: MPLS label allocation failure
48 Oct 15 21:27:42 CSPF: computation result accepted
47 Oct 15 21:27:31 10.1.15.1: MPLS label allocation failure[4 times]
46 Oct 15 21:27:13 Originate Call
45 Oct 15 21:27:13 CSPF: computation result accepted
[...Output truncated...]
Created: Thu Oct 14 16:04:34 2004
Total 1 displayed, Up1 , Down 0

```

Egress LSP: 1 sessions

```

10.0.0.1
From: 10.0.0.6, LSPstate: Up , ActiveRoute: 0
LSPname: R6-to-R1 , LSPpath: Primary
Suggested label received: -, Suggested label sent: -
Recovery label received: -, Recovery label sent: -
Resv style: 1 FF, Label in: 3, Label out: -
Time left: 149, Since: Fri Oct 15 21:28:13 2004
Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
Port number: sender 13 receiver 39024 protocol 0
PATH rcvfrom: 10.1.13.2 (so-0/0/2.0) 10 pkts
Adspec: received MTU 1500
PATH sentto: localclient
RESV rcvfrom: localclient
Record route: 10.1.36.2 10.1.13.2 <self>
Total 1 displayed, Up1 , Down 0

```

Transit LSP: 0 sessions  
Total 0 displayed, Up 0, Down 0

## Sample Output 2

```

user@R3> show mpls lsp extensive
Ingress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 2 sessions

10.0.0.1
From: 10.0.0.6, LSPstate: Up , ActiveRoute: 1
LSPname: R6-to-R1 , LSPpath: Primary
Suggested label received: -, Suggested label sent: -
Recovery label received: -, Recovery label sent: 3
Resv style: 1 FF, Label in: 100336, Label out: 3
Time left: 156, Since: Fri Oct 15 21:15:47 2004
Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
Port number: sender 13 receiver 39024 protocol 0
PATH rcvfrom: 10.1.36.2 (so-0/0/3.0) 11 pkts
Adspec: received MTU 1500 sent MTU 1500
PATH sentto: 10.1.13.1 (so-0/0/2.0) 11 pkts
RESV rcvfrom: 10.1.13.1 (so-0/0/2.0) 11 pkts
Explct route: 10.1.13.1

```

```

Record route: 10.1.36.2 <self> 10.1.13.1

10.0.0.6
  From: 10.0.0.1, LSPstate: Up , ActiveRoute: 1
  LSPname: R1-to-R6 , LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 3
  Resv style: 1 FF, Label in: 100352, Label out: 3
  Time left: 159, Since: Fri Oct 15 21:15:50 2004
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 5 receiver 47901 protocol 0
  PATH rcvfrom: 10.1.13.1 (so-0/0/2.0) 11 pkts
  Adspec: received MTU 1500 sent MTU 1500
  PATH sentto: 10.1.36.2 (so-0/0/3.0) 11 pkts
  RESV rcvfrom: 10.1.36.2 (so-0/0/3.0) 11 pkts
  Explct route: 10.1.36.2
  Record route: 10.1.13.1 <self> 10.1.36.2
Total 2 displayed, Up 2 , Down 0

```

### Sample Output 3

```

user@R6> show mpls lsp extensive
Ingress LSP: 1 sessions

10.0.0.1
  From: 10.0.0.6, State: Up , ActiveRoute: 1, LSPname: R6-to-R1
  ActivePath: (primary)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary State: Up
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 20)
  10.1.36.1 S 10.1.13.1 S
    Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):

      10.1.36.1 10.1.13.1
      187 Oct 15 21:20:05 Selected as active path
      186 Oct 15 21:20:05 Record Route: 10.1.36.1 10.1.13.1
      185 Oct 15 21:20:05 Up
      184 Oct 15 21:20:05 Clear Call
      183 Oct 15 21:20:05 CSPF: computation result accepted
      182 Oct 15 21:20:05 CSPF: link down/deleted
  10.1.13.2(R3.00/10.0.0.3)->10.1.13.2(R1.00/10.0.0.1)
  [...Output truncated...]
  Created: Tue Aug 17 12:18:33 2004
Total 1 displayed, Up 1 , Down 0

Egress LSP: 1 sessions

10.0.0.6
  From: 10.0.0.1, LSPstate: Up, ActiveRoute: 0
  LSPname: R1-to-R6 , LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: -
  Resv style: 1 FF, Label in: 3, Label out: -
  Time left: 144, Since: Fri Oct 15 21:20:08 2004
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 5 receiver 47901 protocol 0
  PATH rcvfrom: 10.1.36.1 (so-0/0/3.0) 11 pkts
  Adspec: received MTU 1500
  PATH sentto: localclient
  RESV rcvfrom: localclient

```

Record route: 10.1.13.1 10.1.36.1 <self>  
Total 1 displayed, Up 1 , Down 0

Transit LSP: 0 sessions  
Total 0 displayed, Up 0, Down 0

**Meaning** Sample Output 1 from ingress router **R1** shows that LSP **R1-to-R6** has an active route to **R6** and the state is up. The output shows that the egress LSP session **R6-to-R1** received and sent a recovery label.


Sample Output 2 from transit router **R3** shows that there are two transit LSP sessions, one from **R1** to **R6** and the other from **R6** to **R1**. Both LSPs are up.

Sample Output 3 from egress router **R6** shows that the LSP is up and the active route is the primary route. The LSP is now traversing the network along the expected path, from **R1** through **R3** to **R6**, and the reverse LSP, from **R6** through **R3** to **R1**.

## Verifying the OSPF Protocol

**Purpose** After you have verified that the LSP is down, and the cause is not in the physical, datalink, or IP layer, verify the OSPF configuration. Check the routers in your network to ensure that the interfaces and the OSPF protocol are configured correctly, and that the neighbors are established.

Figure 104: MPLS Network Broken at the OSPF Protocol Layer

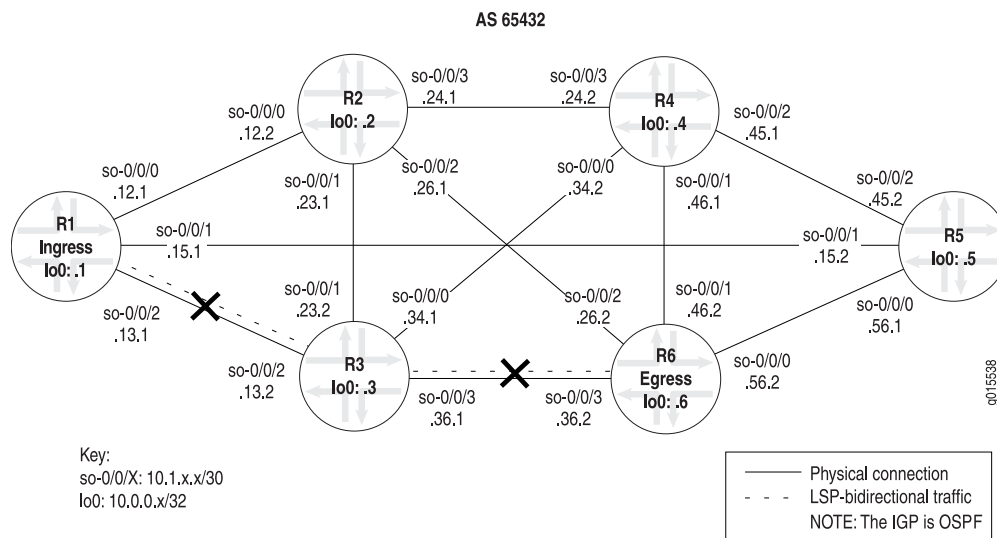

1. [Verify the LSP on page 1010](#)
2. [Verify OSPF Interfaces on page 1012](#)
3. [Verify OSPF Neighbors on page 1014](#)
4. [Verify the OSPF Protocol Configuration on page 1014](#)
5. [Take Appropriate Action on page 1015](#)
6. [Verify the LSP Again on page 1017](#)

## Verify the LSP

**Purpose** Confirm that interfaces are configured for OSPF, the OSPF protocol is configured correctly and that neighbors are established.

**Action** To verify the LSP, enter the following command on the ingress, transit, and egress routers:

```
user@host> show mpls lsp extensive
```

## Sample Output 1

```
user@R1> show mpls lsp extensive
Ingress LSP: 1 sessions

10.0.0.6
  From: 10.0.0.1, State: Dn, ActiveRoute: 0,  LSPname: R1-to-R6
  ActivePath: (none)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  Primary                               State: Dn
    11 Oct 19 18:06:04 No Route toward dest[78 times]
    10 Oct 19 17:08:09 Deselected as active
  Created: Mon Oct 18 21:48:42 2004
Total 1 displayed, Up 0,  Down 1

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

## Sample Output 2

```
user@R3> show mpls lsp extensive
Ingress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

## Sample Output 3

```
user@R6> show mpls lsp extensive
Ingress LSP: 1 sessions
To          From          State Rt ActivePath      P      LSPname
10.0.0.1    10.0.0.6    Dn     0  -                R6-to-R1
Total 1 displayed, Up 0,  Down 1

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```



### Sample Output 4

```

user@R1> show mpls lsp extensive
Ingress LSP: 1 sessions

10.0.0.6
  From: 10.0.0.1, State: Up, ActiveRoute: 1,  LSPname: R1-to-R6
    ActivePath: (primary)
    LoadBalance: Random
    Encoding type: Packet, Switching type: Packet, GPID: IPv4
    *Primary                               State: Up
      Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):

          10.1.13.2 10.1.36.2
        5 Oct 19 10:37:55 Selected as active path
        4 Oct 19 10:37:55 Record Route:  10.1.13.2 10.1.36.2
        3 Oct 19 10:37:55 Up
        2 Oct 19 10:37:10 No Route toward dest[1029 times]
        1 Oct 18 21:48:42 Originate Call
      Created: Mon Oct 18 21:48:42 2004
Total 1 displayed,  Up1 , Down 0

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

### Sample Output 5

```

user@R3> show mpls lsp extensive
Ingress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 1 sessions

10.0.0.6
  From: 10.0.0.1, LSPstate: Up, ActiveRoute: 1
    LSPname: R1-to-R6 , LSPpath: Primary
    Suggested label received: -, Suggested label sent: -
    Recovery label received: -, Recovery label sent: 3
    Resv style: 1 FF, Label in: 100368, Label out: 3
    Time left: 154, Since: Tue Oct 19 10:25:24 2004
    Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
    Port number: sender 1 receiver 47933 protocol 0
    PATH rcvfrom: 10.1.13.1 (so-0/0/2.0) 209 pkts
    Adspec: received MTU 1500 sent MTU 1500
    PATH sentto: 10.1.36.2 (so-0/0/3.0) 209 pkts
    RESV rcvfrom: 10.1.36.2 (so-0/0/3.0) 209 pkts
    Record route: 10.1.13.1 <self> 10.1.36.2
Total 1 displayed, Up 1, Down 0

```

### Sample Output 6

```

user@R6> show mpls lsp extensive
Ingress LSP: 1 sessions

```

```
10.0.0.1
  From: 10.0.0.6, State: Dn, ActiveRoute: 0, LSPName: R6-to-R1
  ActivePath: (none)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  Primary                               State: Dn
    2 Oct 19 13:01:54 10.1.56.2: MPLS label allocation failure [9 times]
    1 Oct 19 12:57:51 Originate Call
  Created: Tue Oct 19 12:57:51 2004
Total 1 displayed, Up 0, Down 1
```

Egress LSP: 1 sessions

```
10.0.0.6
  From: 10.0.0.1, LSPstate: Up, ActiveRoute: 0
  LSPName: R1-to-R6, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: -
  Resv style: 1 FF, Label in: 3, Label out: -
  Time left: 148, Since: Tue Oct 19 10:30:03 2004
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 47933 protocol 0
  PATH rcvfrom: 10.1.36.1 (so-0/0/3.0) 206 pkts
  Adspec: received MTU 1500
  PATH sentto: localclient
  RESV rcvfrom: localclient
  Record route: 10.1.13.1 10.1.36.1 <self>
Total 1 displayed, Up 1, Down 0
```

Transit LSP: 0 sessions  
Total 0 displayed, Up 0, Down 0

**Meaning** Sample Outputs 1, 2, and 3 show that the LSP and the reverse LSP are down:

- Sample Output 1 from ingress router **R1** shows that LSP **R1-to-R6** does not have a route towards the destination (**R6**).
- Sample Output 2 from transit router **R3** shows that there are no LSP sessions.
- Sample Output 3 from egress router **R6** also shows that reverse LSP **R6-to-R1** is down.

Sample Outputs 4, 5, and 6 show that the LSP is up and the reverse LSP is down:

- Sample Output 4 from ingress router **R1** shows that LSP **R1-to-R6** is up and there are no egress LSP sessions.
- Sample Output 5 from transit router **R3** shows that there is one ingress LSP session (**R1-to-R6**) and no egress LSP sessions.
- Sample Output 6 from egress router **R6** shows that LSP **R6-to-R1** is down due to an MPLS label allocation failure.

## Verify OSPF Interfaces

**Purpose** After you have verified that the LSP is down, and the cause is not in the physical, data link, or IP layer, check the routers in your network to determine that all relevant OSPF interfaces are configured correctly.

**Action** To verify OSPF interfaces, enter the following commands from the ingress, transit, and egress routers:

```
user@host> show ospf interface
```

### Sample Output 1

```
user@R1> show ospf interface
Interface      State      Area          DR ID          BDR ID          Nbrs
so-0/0/0.0     PtToPt     0.0.0.0       0.0.0.0       0.0.0.0         1
so-0/0/1.0     PtToPt     0.0.0.0       0.0.0.0       0.0.0.0         1
so-0/0/2.0     PtToPt     0.0.0.0       0.0.0.0       0.0.0.0         1

user@R3> show ospf interface
Interface      State      Area          DR ID          BDR ID          Nbrs
so-0/0/0.0     PtToPt     0.0.0.0       0.0.0.0       0.0.0.0         1
so-0/0/1.0     PtToPt     0.0.0.0       0.0.0.0       0.0.0.0         1
so-0/0/2.0     PtToPt     0.0.0.0       0.0.0.0       0.0.0.0         1
so-0/0/3.0     PtToPt     0.0.0.0       0.0.0.0       0.0.0.0         1

user@R6> show ospf interface
Interface      State      Area          DR ID          BDR ID          Nbrs
so-0/0/0.0     PtToPt     0.0.0.0       0.0.0.0       0.0.0.0         1
so-0/0/1.0     PtToPt     0.0.0.0       0.0.0.0       0.0.0.0         1
so-0/0/2.0     PtToPt     0.0.0.0       0.0.0.0       0.0.0.0         1
so-0/0/3.0     PtToPt     0.0.0.0       0.0.0.0       0.0.0.0         1
```

### Sample Output 2

```
user@R1> show ospf interface
Interface      State      Area          DR ID          BDR ID          Nbrs
lo0.0          DR         0.0.0.0       10.0.0.1       0.0.0.0         0
so-0/0/0.0     PtToPt     0.0.0.0       0.0.0.0       0.0.0.0         1
so-0/0/1.0     PtToPt     0.0.0.0       0.0.0.0       0.0.0.0         1
so-0/0/2.0     PtToPt     0.0.0.0       0.0.0.0       0.0.0.0         1

user@R3> show ospf interface
Interface      State      Area          DR ID          BDR ID          Nbrs
lo0.0          DR         0.0.0.0       10.0.0.3       0.0.0.0         0
so-0/0/0.0     Down       0.0.0.0       0.0.0.0       0.0.0.0         0
so-0/0/1.0     PtToPt     0.0.0.0       0.0.0.0       0.0.0.0         1
so-0/0/2.0     PtToPt     0.0.0.0       0.0.0.0       0.0.0.0         1
so-0/0/3.0     PtToPt     0.0.0.0       0.0.0.0       0.0.0.0         1

user@R6> show ospf interface
Interface      State      Area          DR ID          BDR ID          Nbrs
lo0.0          DR         0.0.0.0       10.0.0.6       0.0.0.0         0
so-0/0/0.0     PtToPt     0.0.0.0       0.0.0.0       0.0.0.0         1
so-0/0/1.0     Down       0.0.0.0       0.0.0.0       0.0.0.0         0
so-0/0/2.0     PtToPt     0.0.0.0       0.0.0.0       0.0.0.0         1
so-0/0/3.0     PtToPt     0.0.0.0       0.0.0.0       0.0.0.0         1
```

**Meaning** Sample Output 1 shows that all interfaces on all routers are in the correct area (0.0.0.0), and the loopback (lo0) interface is missing from the list of interfaces on all routers. The missing loopback (lo0) interface is a problem in this configuration.

In an MPLS network configured with OSPF as the IGP, when you manually configure the RID, it is important to explicitly configure the loopback interface at the [edit protocols ospf] hierarchy level. If the RID is not manually configured, OSPF automatically advertises

the loopback (lo0) interface. In the configuration of all the routers in this network, the RID is configured manually, therefore, the loopback (lo0) interface must be explicitly configured at the `[edit protocols ospf]` hierarchy level. In addition, the loopback (lo0) interface is configured with the `passive` statement to ensure that the protocols are not run over the loopback (lo0) interface and it is correctly advertised throughout the network.

Sample Output 2 shows that all the relevant interfaces on the ingress, transit, and egress routers, including the loopback (lo0) interface, are in the correct area (0.0.0.0). Because the configuration of the interfaces is correct, further investigation is required to determine the reason for the LSP problem.

## Verify OSPF Neighbors

**Purpose** After you have checked OSPF interfaces, check your network topology to determine that all relevant neighbors are established.

**Action** To verify OSPF neighbors, enter the following commands from the ingress, transit, and egress routers:

```
user@host> show ospf neighbor
```

## Sample Output

```
user@R1> show ospf neighbor
  Address      Interface      State      ID              Pri  Dead
  10.1.12.2     so-0/0/0.0     Full      10.0.0.2        128  39
  10.1.15.2     so-0/0/1.0     Full      10.0.0.5        128  39
  10.1.13.2     so-0/0/2.0     Full      10.0.0.3        128  33
```

```
user@R3> show ospf neighbor
  Address      Interface      State      ID              Pri  Dead
  10.1.34.2     so-0/0/0.0     Full      10.0.0.4        128  33
  10.1.23.1     so-0/0/1.0     Full      10.0.0.2        128  33
  10.1.13.1     so-0/0/2.0     Full      10.0.0.1        128  33
  10.1.36.2     so-0/0/3.0     Full      10.0.0.6        128  33
```

```
user@R6> show ospf neighbor
  Address      Interface      State      ID              Pri  Dead
  10.1.56.1     so-0/0/0.0     Full      10.0.0.5        128  30
  10.1.46.1     so-0/0/1.0     Full      10.0.0.4        128  38
  10.1.26.1     so-0/0/2.0     Full      10.0.0.2        128  34
  10.1.36.1     so-0/0/3.0     Full      10.0.0.3        128  35
```

**Meaning** The sample output shows that all neighbors are fully adjacent, indicating that each router has exchanged a full copy of its link-state database with the other routers, passed through several neighbor states, and become fully adjacent. These adjacencies are created by router link and network link advertisements.

## Verify the OSPF Protocol Configuration

**Purpose** After you have checked interfaces and neighbors, verify the OSPF protocol configuration.

**Action** To verify the OSPF protocol configuration, enter the following command from the ingress, transit, and egress routers:

```
user@host> show configuration protocols ospf
```

### Sample Output 1

```
user@R1> show configuration protocols ospf
traffic-engineering;
area 0.0.0.0 {
    interface so-0/0/0.0;
    interface so-0/0/1.0;
    interface so-0/0/2.0;    <<< The loopback interface (lo0) is missing
}
```

### Sample Output 2

```
user@R3>show configuration protocols ospf
area 0.0.0.0 { <<< traffic engineering is missing
    interface so-0/0/0.0;
    interface so-0/0/1.0;
    interface so-0/0/2.0;
    interface so-0/0/3.0;    <<< The loopback interface (lo0) is missing
}
```

### Sample Output 3

```
user@R6> show configuration protocols ospf
traffic-engineering;
area 0.0.0.0 {
    interface so-0/0/0.0;
    interface so-0/0/1.0;
    interface so-0/0/2.0;
    interface so-0/0/3.0;    <<< The loopback interface (lo0) is missing
}
```

**Meaning** All three sample outputs show that the loopback interface is not included on any of the routers. Including the loopback (**lo0**) interface is important when you have the RID manually configured.

In addition, Sample Output 2 from transit router **R3** shows that traffic engineering is not configured. Traffic engineering must be manually enabled when you configure OSPF for an MPLS network.

Because the loopback interface and traffic engineering are missing from the OSPF protocol configuration, the LSP does not work as expected.

### Take Appropriate Action

**Problem** **Description:** Depending on the error you encountered in your investigation, you must take the appropriate action to correct the problem. In this example, the loopback (**lo0**) interface is missing from all routers, and traffic engineering is missing from the transit router (**R3**).

**Solution** To correct the errors in this example, follow these steps:

1. Include the loopback (**lo0**) interface on all routers that have the RID manually configured. Enter the following configuration mode commands:

```
[edit]
user@R3# edit protocols ospf area 0.0.0.0
[edit protocols ospf area 0.0.0.0]
user@R3# set interface lo0
user@R3# set interface lo0 passive
```

2. Move up one level of the configuration hierarchy:

```
[edit protocols ospf area 0.0.0.0]
user@R3# up
[edit protocols ospf]
user@R3#
```

3. Include traffic engineering on the transit router (**R3**). Enter the following configuration mode command:

```
[edit protocols ospf]
user@R3# set traffic-engineering
```

4. On all routers, verify and commit the configuration:

```
user@R3# show
user@R3# commit
```

**Sample Output**

```

user@R3> edit
Entering configuration mode

[edit]
user@R3# edit protocols ospf area 0.0.0.0

[edit protocols ospf area 0.0.0.0]
user@R3# set interface lo0

[edit protocols ospf area 0.0.0.0]
user@R3# set interface lo0 passive

[edit protocols ospf area 0.0.0.0]
user@R3# up

[edit protocols ospf]
user@R3# set traffic-engineering

[edit protocols ospf]
user@R3# show
traffic-engineering;
area 0.0.0.0 {
    interface so-0/0/0.0;
    interface so-0/0/1.0;
    interface so-0/0/2.0;
    interface lo0.0; {
        passive
    }
}

[edit protocols ospf]
user@R3# commit
commit complete

```

**Meaning** The sample output shows that the loopback (**lo0**) interface and traffic engineering are now correctly configured on transit router **R3**. When traffic engineering is configured, OSPF advertises the traffic engineering capabilities of the links.

In the OSPF configuration, you must manually include the loopback (**lo0**) interface and set it to passive when you manually configure an RID. Setting the loopback (**lo0**) interface to passive ensures that protocols are not run over the loopback (**lo0**) interface and the loopback (**lo0**) interface is advertised correctly throughout the network.. If you do not manually configure an RID, there is no need to explicitly include the loopback interface because the OSPF protocol automatically includes the loopback (**lo0**) interface.

For more information about configuring LSPs and MPLS, see the *Junos MPLS Applications Configuration Guide*.

## Verify the LSP Again

**Purpose** After taking the appropriate action to correct the error, the LSP needs to be checked again to confirm that the problem in the IS-IS protocol has been resolved.

**Action** To verify that the LSP is up and traversing the network as expected, enter the following command from the ingress, egress, and transit routers:

```
user@host> show mpls lsp extensive
```

## Sample Output

```
user@R1> show mpls lsp extensive
```

```
Ingress LSP: 1 sessions
```

```
10.0.0.6
```

```
From: 10.0.0.1, State: Up , ActiveRoute: 1, LSPname: R1-to-R6  
ActivePath: (primary)
```

```
LoadBalance: Random
```

```
Encoding type: Packet, Switching type: Packet, GPID: IPv4
```

```
*Primary State: Up
```

```
Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):
```

```
10.1.13.2 10.1.36.2
```

```
4 Oct 19 21:22:54 Selected as active path
```

```
3 Oct 19 21:22:53 Record Route: 10.1.13.2 10.1.36.2
```

```
2 Oct 19 21:22:53 Up
```

```
1 Oct 19 21:22:53 Originate Call
```

```
Created: Tue Oct 19 21:22:53 2004
```

```
Total 1 displayed, Up1 , Down 0
```

```
Egress LSP: 1 sessions
```

```
10.0.0.1
```

```
From: 10.0.0.6, LSPstate: Up , ActiveRoute: 0
```

```
LSPname: R6-to-R1 , LSPpath: Primary
```

```
Suggested label received: -, Suggested label sent: -
```

```
Recovery label received: -, Recovery label sent: -
```

```
Resv style: 1 FF, Label in: 3, Label out: -
```

```
Time left: 117, Since: Tue Oct 19 21:17:42 2004
```

```
Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
```

```
Port number: sender 2 receiver 39064 protocol 0
```

```
PATH rcvfrom: 10.1.13.2 (so-0/0/2.0) 10 pkts
```

```
Adspec: received MTU 1500
```

```
PATH sentto: localclient
```

```
RESV rcvfrom: localclient
```

```
Record route: 10.1.36.2 10.1.13.2 <self>
```

```
Total 1 displayed, Up1 , Down 0
```

```
Transit LSP: 0 sessions
```

```
Total 0 displayed, Up 0, Down 0
```

```
user@R3> show mpls lsp extensive
```

```
Ingress LSP: 0 sessions
```

```
Total 0 displayed, Up 0, Down 0
```

```
Egress LSP: 0 sessions
```

```
Total 0 displayed, Up 0, Down 0
```

```
Transit LSP: 2 sessions
```

```
10.0.0.1
```

```
From: 10.0.0.6, LSPstate: Up, ActiveRoute: 1
```

```
LSPname: R6-to-R1 , LSPpath: Primary
```

```
Suggested label received: -, Suggested label sent: -
```

```
Recovery label received: -, Recovery label sent: 3
```

```
Resv style: 1 FF, Label in: 100416, Label out: 3
```

```
Time left: 139, Since: Tue Oct 19 21:05:11 2004
```

```
Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
```



```

Port number: sender 2 receiver 39064 protocol 0
PATH rcvfrom: 10.1.36.2 (so-0/0/3.0) 11 pkts
Adspec: received MTU 1500 sent MTU 1500
PATH sentto: 10.1.13.1 (so-0/0/2.0) 11 pkts
RESV rcvfrom: 10.1.13.1 (so-0/0/2.0) 11 pkts
Explct route: 10.1.13.1
Record route: 10.1.36.2 <self> 10.1.13.1

```

10.0.0.6

```

From: 10.0.0.1, LSPstate: Up, ActiveRoute: 1
  LSPname: R1-to-R6 , LSPpath: Primary
Suggested label received: -, Suggested label sent: -
Recovery label received: -, Recovery label sent: 3
Resv style: 1 FF, Label in: 100448, Label out: 3
Time left: 135, Since: Tue Oct 19 21:10:22 2004
Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
Port number: sender 1 receiver 47951 protocol 0
PATH rcvfrom: 10.1.13.1 (so-0/0/2.0) 4 pkts
Adspec: received MTU 1500 sent MTU 1500
PATH sentto: 10.1.36.2 (so-0/0/3.0) 4 pkts
RESV rcvfrom: 10.1.36.2 (so-0/0/3.0) 4 pkts
Record route: 10.1.13.1 <self> 10.1.36.2
Total 2 displayed, Up2 , Down 0

```

```

user@R6> run show mpls lsp extensive
Ingress LSP: 1 sessions

```

10.0.0.1

```

From: 10.0.0.6, State: Up, ActiveRoute: 1, LSPname: R6-to-R1
ActivePath: (primary)
LoadBalance: Random
Encoding type: Packet, Switching type: Packet, GPID: IPv4
*Primary State: Up
  Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 2)
10.1.36.1 S 10.1.13.1 S
  Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):

      10.1.36.1 10.1.13.1
19 Oct 19 21:09:52 Selected as active path
18 Oct 19 21:09:52 Record Route: 10.1.36.1 10.1.13.1
17 Oct 19 21:09:52 Up
16 Oct 19 21:09:52 Originate Call
15 Oct 19 21:09:52 CSPF: computation result accepted
Created: Tue Oct 19 18:30:09 2004
Total 1 displayed, Up1 , Down 0

```

Egress LSP: 1 sessions

10.0.0.6

```

From: 10.0.0.1, LSPstate: Up, ActiveRoute: 0
  LSPname: R1-to-R6 , LSPpath: Primary
Suggested label received: -, Suggested label sent: -
Recovery label received: -, Recovery label sent: -
Resv style: 1 FF, Label in: 3, Label out: -
Time left: 120, Since: Tue Oct 19 21:15:03 2004
Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
Port number: sender 1 receiver 47951 protocol 0
PATH rcvfrom: 10.1.36.1 (so-0/0/3.0) 4 pkts
Adspec: received MTU 1500
PATH sentto: localclient
RESV rcvfrom: localclient

```

```
Record route: 10.1.13.1 10.1.36.1 <self>
Total 1 displayed, Up 1 , Down 0
```

```
Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

**Meaning** The sample output from ingress router **R1** and egress router **R6** shows that the LSP is now traversing the network along the expected path, from **R1** through **R3** to **R6**, and the reverse LSP, from **R6** through **R3** to **R1**. In addition, the sample output from transit router **R3** shows that there are two transit LSP sessions, one from **R1** to **R6**, and the other from **R6** to **R1**.

---

## Verify the LSP

**Purpose** Confirm that interfaces are configured for OSPF, the OSPF protocol is configured correctly and that neighbors are established.

**Action** To verify the LSP, enter the following command on the ingress, transit, and egress routers:

```
user@host> show mpls lsp extensive
```

### Sample Output 1

```
user@R1> show mpls lsp extensive
Ingress LSP: 1 sessions

10.0.0.6
  From: 10.0.0.1, State: Dn, ActiveRoute: 0, LSPname: R1-to-R6
  ActivePath: (none)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  Primary State: Dn
    11 Oct 19 18:06:04 No Route toward dest[78 times]
    10 Oct 19 17:08:09 Deselected as active
  Created: Mon Oct 18 21:48:42 2004
Total 1 displayed, Up 0, Down 1

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

### Sample Output 2

```
user@R3> show mpls lsp extensive
Ingress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

### Sample Output 3

```

user@R6> show mpls lsp extensive
Ingress LSP: 1 sessions
  To          From          State Rt ActivePath      P      LSPname
  10.0.0.1     10.0.0.6      Dn    0  -              R6-to-R1
Total 1 displayed, Up 0, Down 1

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

### Sample Output 4

```

user@R1> show mpls lsp extensive
Ingress LSP: 1 sessions
  10.0.0.6
    From: 10.0.0.1, State: Up, ActiveRoute: 1, LSPname: R1-to-R6
    ActivePath: (primary)
    LoadBalance: Random
    Encoding type: Packet, Switching type: Packet, GPID: IPv4
    *Primary          State: Up
      Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):

          10.1.13.2 10.1.36.2
            5 Oct 19 10:37:55 Selected as active path
            4 Oct 19 10:37:55 Record Route: 10.1.13.2 10.1.36.2
            3 Oct 19 10:37:55 Up
            2 Oct 19 10:37:10 No Route toward dest[1029 times]
            1 Oct 18 21:48:42 Originate Call
      Created: Mon Oct 18 21:48:42 2004
Total 1 displayed, Up 1, Down 0

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

### Sample Output 5

```

user@R3> show mpls lsp extensive
Ingress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 1 sessions
  10.0.0.6
    From: 10.0.0.1, LSPstate: Up, ActiveRoute: 1
    LSPname: R1-to-R6, LSPpath: Primary
    Suggested label received: -, Suggested label sent: -
    Recovery label received: -, Recovery label sent: 3
    Resv style: 1 FF, Label in: 100368, Label out: 3

```

```

Time left: 154, Since: Tue Oct 19 10:25:24 2004
Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
Port number: sender 1 receiver 47933 protocol 0
PATH rcvfrom: 10.1.13.1 (so-0/0/2.0) 209 pkts
Adspec: received MTU 1500 sent MTU 1500
PATH sentto: 10.1.36.2 (so-0/0/3.0) 209 pkts
RESV rcvfrom: 10.1.36.2 (so-0/0/3.0) 209 pkts
Record route: 10.1.13.1 <self> 10.1.36.2
Total 1 displayed, Up 1, Down 0

```

## Sample Output 6

```

user@R6> show mpls lsp extensive
Ingress LSP: 1 sessions

10.0.0.1
  From: 10.0.0.6, State: Dn, ActiveRoute: 0, LSPname: R6-to-R1
  ActivePath: (none)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  Primary State: Dn
    2 Oct 19 13:01:54 10.1.56.2: MPLS label allocation failure [9 times]
    1 Oct 19 12:57:51 Originate Call
  Created: Tue Oct 19 12:57:51 2004
Total 1 displayed, Up 0, Down 1

Egress LSP: 1 sessions

10.0.0.6
  From: 10.0.0.1, LSPstate: Up, ActiveRoute: 0
  LSPname: R1-to-R6, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: -
  Resv style: 1 FF, Label in: 3, Label out: -
  Time left: 148, Since: Tue Oct 19 10:30:03 2004
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 47933 protocol 0
  PATH rcvfrom: 10.1.36.1 (so-0/0/3.0) 206 pkts
  Adspec: received MTU 1500
  PATH sentto: localclient
  RESV rcvfrom: localclient
  Record route: 10.1.13.1 10.1.36.1 <self>
Total 1 displayed, Up 1, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

**Meaning** Sample Outputs 1, 2, and 3 show that the LSP and the reverse LSP are down:

- Sample Output 1 from ingress router **R1** shows that LSP **R1-to-R6** does not have a route towards the destination (**R6**).
- Sample Output 2 from transit router **R3** shows that there are no LSP sessions.
- Sample Output 3 from egress router **R6** also shows that reverse LSP **R6-to-R1** is down.

Sample Outputs 4, 5, and 6 show that the LSP is up and the reverse LSP is down:

- Sample Output 4 from ingress router **R1** shows that LSP **R1-to-R6** is up and there are no egress LSP sessions.
- Sample Output 5 from transit router **R3** shows that there is one ingress LSP session (**R1-to-R6**) and no egress LSP sessions.
- Sample Output 6 from egress router **R6** shows that LSP **R6-to-R1** is down due to an MPLS label allocation failure.

## Verify OSPF Interfaces

**Purpose** After you have verified that the LSP is down, and the cause is not in the physical, data link, or IP layer, check the routers in your network to determine that all relevant OSPF interfaces are configured correctly.

**Action** To verify OSPF interfaces, enter the following commands from the ingress, transit, and egress routers:

```
user@host> show ospf interface
```

### Sample Output 1

```
user@R1> show ospf interface
Interface      State      Area      DR ID      BDR ID      Nbrs
so-0/0/0.0     PtToPt    0.0.0.0   0.0.0.0    0.0.0.0     1
so-0/0/1.0     PtToPt    0.0.0.0   0.0.0.0    0.0.0.0     1
so-0/0/2.0     PtToPt    0.0.0.0   0.0.0.0    0.0.0.0     1

user@R3> show ospf interface
Interface      State      Area      DR ID      BDR ID      Nbrs
so-0/0/0.0     PtToPt    0.0.0.0   0.0.0.0    0.0.0.0     1
so-0/0/1.0     PtToPt    0.0.0.0   0.0.0.0    0.0.0.0     1
so-0/0/2.0     PtToPt    0.0.0.0   0.0.0.0    0.0.0.0     1
so-0/0/3.0     PtToPt    0.0.0.0   0.0.0.0    0.0.0.0     1

user@R6> show ospf interface
Interface      State      Area      DR ID      BDR ID      Nbrs
so-0/0/0.0     PtToPt    0.0.0.0   0.0.0.0    0.0.0.0     1
so-0/0/1.0     PtToPt    0.0.0.0   0.0.0.0    0.0.0.0     1
so-0/0/2.0     PtToPt    0.0.0.0   0.0.0.0    0.0.0.0     1
so-0/0/3.0     PtToPt    0.0.0.0   0.0.0.0    0.0.0.0     1
```

### Sample Output 2

```
user@R1> show ospf interface
Interface      State      Area      DR ID      BDR ID      Nbrs
lo0.0          DR         0.0.0.0   10.0.0.1   0.0.0.0     0
so-0/0/0.0     PtToPt    0.0.0.0   0.0.0.0    0.0.0.0     1
so-0/0/1.0     PtToPt    0.0.0.0   0.0.0.0    0.0.0.0     1
so-0/0/2.0     PtToPt    0.0.0.0   0.0.0.0    0.0.0.0     1

user@R3> show ospf interface
Interface      State      Area      DR ID      BDR ID      Nbrs
lo0.0          DR         0.0.0.0   10.0.0.3   0.0.0.0     0
so-0/0/0.0     Down      0.0.0.0   0.0.0.0    0.0.0.0     0
so-0/0/1.0     PtToPt    0.0.0.0   0.0.0.0    0.0.0.0     1
so-0/0/2.0     PtToPt    0.0.0.0   0.0.0.0    0.0.0.0     1
```

```

so-0/0/3.0    PtToPt  0.0.0.0      0.0.0.0      0.0.0.0      1

user@R6> show ospf interface
Interface      State      Area          DR ID          BDR ID          Nbrs
lo0.0          DR         0.0.0.0       10.0.0.6       0.0.0.0         0
so-0/0/0.0     PtToPt     0.0.0.0       0.0.0.0       0.0.0.0         1
so-0/0/1.0     Down       0.0.0.0       0.0.0.0       0.0.0.0         0
so-0/0/2.0     PtToPt     0.0.0.0       0.0.0.0       0.0.0.0         1
so-0/0/3.0     PtToPt     0.0.0.0       0.0.0.0       0.0.0.0         1

```

**Meaning** Sample Output 1 shows that all interfaces on all routers are in the correct area (**0.0.0.0**), and the loopback (**lo0**) interface is missing from the list of interfaces on all routers. The missing loopback (**lo0**) interface is a problem in this configuration.

In an MPLS network configured with OSPF as the IGP, when you manually configure the RID, it is important to explicitly configure the loopback interface at the **[edit protocols ospf]** hierarchy level. If the RID is not manually configured, OSPF automatically advertises the loopback (**lo0**) interface. In the configuration of all the routers in this network, the RID is configured manually, therefore, the loopback (**lo0**) interface must be explicitly configured at the **[edit protocols ospf]** hierarchy level. In addition, the loopback (**lo0**) interface is configured with the **passive** statement to ensure that the protocols are not run over the loopback (**lo0**) interface and it is correctly advertised throughout the network.

Sample Output 2 shows that all the relevant interfaces on the ingress, transit, and egress routers, including the loopback (**lo0**) interface, are in the correct area (**0.0.0.0**). Because the configuration of the interfaces is correct, further investigation is required to determine the reason for the LSP problem.

## Verify OSPF Neighbors

**Purpose** After you have checked OSPF interfaces, check your network topology to determine that all relevant neighbors are established.

**Action** To verify OSPF neighbors, enter the following commands from the ingress, transit, and egress routers:

```
user@host> show ospf neighbor
```

## Sample Output

```

user@R1> show ospf neighbor
Address      Interface      State      ID          Pri  Dead
10.1.12.2    so-0/0/0.0     Full       10.0.0.2    128  39
10.1.15.2    so-0/0/1.0     Full       10.0.0.5    128  39
10.1.13.2    so-0/0/2.0     Full       10.0.0.3    128  33

user@R3> show ospf neighbor
Address      Interface      State      ID          Pri  Dead
10.1.34.2    so-0/0/0.0     Full       10.0.0.4    128  33
10.1.23.1    so-0/0/1.0     Full       10.0.0.2    128  33
10.1.13.1    so-0/0/2.0     Full       10.0.0.1    128  33
10.1.36.2    so-0/0/3.0     Full       10.0.0.6    128  33

user@R6> show ospf neighbor
Address      Interface      State      ID          Pri  Dead

```

10.1.56.1	so-0/0/0.0	Full	10.0.0.5	128	30
10.1.46.1	so-0/0/1.0	Full	10.0.0.4	128	38
10.1.26.1	so-0/0/2.0	Full	10.0.0.2	128	34
10.1.36.1	so-0/0/3.0	Full	10.0.0.3	128	35

**Meaning** The sample output shows that all neighbors are fully adjacent, indicating that each router has exchanged a full copy of its link-state database with the other routers, passed through several neighbor states, and become fully adjacent. These adjacencies are created by router link and network link advertisements.

## Verify the LSP Again

**Purpose** After taking the appropriate action to correct the error, the LSP needs to be checked again to confirm that the problem in the IS-IS protocol has been resolved.

**Action** To verify that the LSP is up and traversing the network as expected, enter the following command from the ingress, egress, and transit routers:

```
user@host> show mpls lsp extensive
```

## Sample Output

```
user@R1> show mpls lsp extensive
Ingress LSP: 1 sessions

10.0.0.6
  From: 10.0.0.1, State: Up , ActiveRoute: 1, LSPname: R1-to-R6
  ActivePath: (primary)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary State: Up
    Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):

      10.1.13.2 10.1.36.2
      4 Oct 19 21:22:54 Selected as active path
      3 Oct 19 21:22:53 Record Route: 10.1.13.2 10.1.36.2
      2 Oct 19 21:22:53 Up
      1 Oct 19 21:22:53 Originate Call
    Created: Tue Oct 19 21:22:53 2004
  Total 1 displayed, Up 1 , Down 0

Egress LSP: 1 sessions

10.0.0.1
  From: 10.0.0.6, LSPstate: Up , ActiveRoute: 0
  LSPname: R6-to-R1 , LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: -
  Resv style: 1 FF, Label in: 3, Label out: -
  Time left: 117, Since: Tue Oct 19 21:17:42 2004
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 2 receiver 39064 protocol 0
  PATH rcvfrom: 10.1.13.2 (so-0/0/2.0) 10 pkts
  Adspec: received MTU 1500
  PATH sentto: localclient
  RESV rcvfrom: localclient
  Record route: 10.1.36.2 10.1.13.2 <self>
  Total 1 displayed, Up 1 , Down 0
```

```
Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

```
user@R3> show mpls lsp extensive
Ingress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

```
Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

```
Transit LSP: 2 sessions
```

```
10.0.0.1
```

```
From: 10.0.0.6, LSPstate: Up, ActiveRoute: 1
  LSPname: R6-to-R1 , LSPpath: Primary
Suggested label received: -, Suggested label sent: -
Recovery label received: -, Recovery label sent: 3
Resv style: 1 FF, Label in: 100416, Label out: 3
Time left: 139, Since: Tue Oct 19 21:05:11 2004
Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
Port number: sender 2 receiver 39064 protocol 0
PATH rcvfrom: 10.1.36.2 (so-0/0/3.0) 11 pkts
Adspec: received MTU 1500 sent MTU 1500
PATH sentto: 10.1.13.1 (so-0/0/2.0) 11 pkts
RESV rcvfrom: 10.1.13.1 (so-0/0/2.0) 11 pkts
Explct route: 10.1.13.1
Record route: 10.1.36.2 <self> 10.1.13.1
```

```
10.0.0.6
```

```
From: 10.0.0.1, LSPstate: Up, ActiveRoute: 1
  LSPname: R1-to-R6 , LSPpath: Primary
Suggested label received: -, Suggested label sent: -
Recovery label received: -, Recovery label sent: 3
Resv style: 1 FF, Label in: 100448, Label out: 3
Time left: 135, Since: Tue Oct 19 21:10:22 2004
Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
Port number: sender 1 receiver 47951 protocol 0
PATH rcvfrom: 10.1.13.1 (so-0/0/2.0) 4 pkts
Adspec: received MTU 1500 sent MTU 1500
PATH sentto: 10.1.36.2 (so-0/0/3.0) 4 pkts
RESV rcvfrom: 10.1.36.2 (so-0/0/3.0) 4 pkts
Record route: 10.1.13.1 <self> 10.1.36.2
Total 2 displayed, Up 2 , Down 0
```

```
user@R6> run show mpls lsp extensive
Ingress LSP: 1 sessions
```

```
10.0.0.1
```

```
From: 10.0.0.6, State: Up, ActiveRoute: 1, LSPname: R6-to-R1
ActivePath: (primary)
LoadBalance: Random
Encoding type: Packet, Switching type: Packet, GPID: IPv4
*Primary State: Up
  Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 2)
10.1.36.1 S 10.1.13.1 S
  Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):

      10.1.36.1 10.1.13.1
19 Oct 19 21:09:52 Selected as active path
18 Oct 19 21:09:52 Record Route: 10.1.36.1 10.1.13.1
```



```

17 Oct 19 21:09:52 Up
16 Oct 19 21:09:52 Originate Call
15 Oct 19 21:09:52 CSPF: computation result accepted
Created: Tue Oct 19 18:30:09 2004
Total 1 displayed, Up1 , Down 0

```

Egress LSP: 1 sessions

```

10.0.0.6
From: 10.0.0.1, LSPstate: Up, ActiveRoute: 0
LSPname: R1-to-R6 , LSPpath: Primary
Suggested label received: -, Suggested label sent: -
Recovery label received: -, Recovery label sent: -
Resv style: 1 FF, Label in: 3, Label out: -
Time left: 120, Since: Tue Oct 19 21:15:03 2004
Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
Port number: sender 1 receiver 47951 protocol 0
PATH rcvfrom: 10.1.36.1 (so-0/0/3.0) 4 pkts
Adspec: received MTU 1500
PATH sentto: localclient
RESV rcvfrom: localclient
Record route: 10.1.13.1 10.1.36.1 <self>
Total 1 displayed, Up1 , Down 0

```

Transit LSP: 0 sessions  
Total 0 displayed, Up 0, Down 0

**Meaning** The sample output from ingress router **R1** and egress router **R6** shows that the LSP is now traversing the network along the expected path, from **R1** through **R3** to **R6**, and the reverse LSP, from **R6** through **R3** to **R1**. In addition, the sample output from transit router **R3** shows that there are two transit LSP sessions, one from **R1** to **R6**, and the other from **R6** to **R1**.

## Verify the LSP

**Purpose** Confirm that interfaces are configured for IS-IS, that the IS-IS protocol is configured correctly, and that adjacencies are established.

**Action** To verify the label-switched path (LSP), enter the following command on the ingress, transit, and egress routers:

```
user@host> show mpls lsp extensive
```

## Sample Output 1

```

user@R1> show mpls lsp extensive
Ingress LSP: 1 sessions

10.0.0.6
From: 10.0.0.1, State: Dn, ActiveRoute: 0, LSPname: R1-to-R6
ActivePath: (none)
LoadBalance: Random
Encoding type: Packet, Switching type: Packet, GPID: IPv4
Primary State: Dn
24 Oct 21 13:48:01 No Route toward dest [3 times]
23 Oct 21 13:47:44 Deselected as active
22 Oct 21 13:47:43 No Route toward dest[2 times]

```

```
21 Oct 21 13:47:43 ResvTear received
20 Oct 21 13:47:43 Down
19 Oct 21 13:47:43 10.1.13.2: No Route toward dest[2 times]
18 Oct 21 13:47:38 Record Route: 10.1.13.2 10.1.36.2
[...Output truncated...]
Created: Tue Oct 19 21:22:53 2004
Total 1 displayed, Up 0, Down 1
```

```
Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

```
Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

## Sample Output 2

```
user@R3> show mpls lsp extensive
Ingress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

```
Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

```
Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

## Sample Output 3

```
user@R6> show mpls lsp extensive
Ingress LSP: 1 sessions

10.0.0.1
  From: 10.0.0.6, State: Dn, ActiveRoute: 0 , LSPname: R6-to-R1
  ActivePath: (none)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  Primary State: Dn
    Will be enqueued for recomputation in 3 second(s).
  13 Oct 21 14:23:33 CSPF failed: no route toward 10.0.0.1[90 times]
  12 Oct 21 13:39:56 Deselected as active
  11 Oct 21 13:39:56 CSPF: could not determine self
  [...Output truncated...]
  Created: Tue Oct 19 22:28:30 2004
  Total 1 displayed, Up 0, Down 1

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

**Meaning** The sample output shows that LSP **R1-to-R6** and the reverse LSP **R6-to-R1** are down, and there are no LSP sessions on transit router R3.

---

## Verify IS-IS Adjacencies and Interfaces

**Purpose** When you check the IS-IS layer, you verify that IS-IS adjacencies are up and that the IS-IS interfaces are included at the protocol level.

**Action** To verify the functioning of adjacent interfaces, enter the following commands from the relevant routers:

```
user@host> show isis adjacency
user@host> show isis interface
```

### Sample Output 1

```
user@R1> show isis adjacency
Interface          System      L State      Hold (secs) SNPA
so-0/0/0.0         R2          2 Up         20
so-0/0/1.0         R5          2 Up         23
so-0/0/2.0         R3          2 Up         26
```

```
user@R3> show isis adjacency
Interface          System      L State      Hold (secs) SNPA
so-0/0/0.0         R4          2 Up         23
so-0/0/1.0         R2          2 Up         21
so-0/0/2.0         R1          2 Up         19
so-0/0/3.0         R6          2 Down       0
```

```
user@R6> show isis adjacency
IS-IS instance is not running
```

### Sample Output 2

```
user@R1> show isis interface
IS-IS interface database:
Interface          L CirID Level 1 DR      Level 2 DR      L1/L2 Metric
lo0.0              0  0x1 Passive           Passive         0/0
so-0/0/0.0         2  0x1 Disabled         Point to Point  10/10
so-0/0/1.0         2  0x1 Disabled         Point to Point  10/10
so-0/0/2.0         2  0x1 Disabled         Point to Point  10/10
```

```
user@R3> show isis interface
IS-IS interface database:
Interface          L CirID Level 1 DR      Level 2 DR      L1/L2 Metric
lo0.0              0  0x1 Passive           Passive         0/0
so-0/0/0.0         2  0x1 Disabled         Point to Point  10/10
so-0/0/1.0         2  0x1 Disabled         Point to Point  10/10
so-0/0/2.0         2  0x1 Disabled         Point to Point  10/10
so-0/0/3.0         2  0x1 Disabled         Point to Point  10/10
```

```
user@R6> show isis interface
IS-IS interface database:
Interface          L CirID Level 1 DR      Level 2 DR      L1/L2 Metric
lo0.0              0  0x1 Passive           Passive         0/0
so-0/0/0.0         1  0x1 Point to Point    Disabled        10/10
so-0/0/1.0         1  0x1 Down              Disabled        10/10
so-0/0/2.0         1  0x1 Point to Point    Disabled        10/10
so-0/0/3.0         1  0x1 Point to Point    Disabled        10/10
```

**Meaning** Sample Output 1 shows that ingress router R1 has established adjacencies with the relevant routers. Transit router R3 does not have an adjacency with egress router R6, and egress router R6 has no adjacencies established in the network shown in [Figure 102 on page 990](#), indicating that the problem might be at the IS-IS protocol level.

Sample Output 2 shows that R1 and R2 are Level 2 routers, in contrast to R6 which is a Level 1 router. When a router is configured explicitly as a Level 1 or Level 2 router, it does not communicate with routers configured at a different level. Level 1 routers communicate with other Level 1 routers within their area, while Level 2 routers communicate with other Level 2 routers, and toward other autonomous systems. Because all the routers in this network are configured for Level 2, they cannot form an adjacency with R6, which is incorrectly configured as a Level 1 router.

- Related Documentation**
- *Example: Configuring a Multi-Level IS-IS Topology to Control Interarea Flooding*
  - *Understanding IS-IS Areas to Divide an Autonomous System into Smaller Groups*

---

## Verify the IS-IS Configuration

**Purpose** When you have determined that the problem is probably at the IS-IS protocol level, check the IS-IS configuration of the routers in your network.

**Action** To verify the IS-IS configuration, enter the following command from the relevant routers:

```
user@host> show configuration protocols isis
```

### Sample Output

```
user@R1> show configuration protocols isis
level 1 disable;
interface so-0/0/0.0;
interface so-0/0/1.0;
interface so-0/0/2.0;
interface lo0.0; {
    passive
```

```
user@R3> show configuration protocols isis
level 1 disable;
interface all {
    level 2 metric 10;
}
interface fxp0.0 {
    disable;
}
interface lo0.0; {
    passive
```

```
user@R6> show configuration protocols isis
level 2 disable; <<< Incorrect level disabled
interface all {
    level 2 metric 10;
}
interface fxp0.0 {
    disable;
}
interface lo0.0; {
    passive
```

**Meaning** The sample output shows that R6 has Level 2 disabled, while R1 and R3 have Level 1 disabled. For IS-IS adjacencies to establish, routers need to be at the same level. Another

common configuration error is to omit the loopback interface (lo0) from the configuration at the **[edit protocols isis]** hierarchy level. IS-IS does not function correctly if the loopback interface (lo0) is not configured at this level. In addition, including the **passive** statement ensures that protocols are not run over the loopback interface (lo0) and that the loopback interface (lo0) is advertised correctly throughout the network.

## Verify the LSP Again

- Purpose** After taking the appropriate action to correct the error, the label-switched path (LSP) needs to be checked again to confirm that the problem in the RSVP layer has been resolved.
- Action** To verify that the LSP is up and traversing the network as expected, enter the following command from the ingress, egress, and transit routers:

```
user@host> show mpls lsp extensive
```

## Sample Output 1

```
user@R1> show mpls lsp extensive
Ingress LSP: 1 sessions

10.0.0.6
  From: 10.0.0.1, State: Up,  ActiveRoute: 1, LSPname: R1-to-R6
  ActivePath: (primary)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary                               State: Up
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 20)
  10.1.13.2 S 10.1.36.2 S
    Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):

      10.1.13.2 10.1.36.2
      5 Oct 21 15:52:07 Selected as active path
      4 Oct 21 15:52:07 Record Route: 10.1.13.2 10.1.36.2
      3 Oct 21 15:52:07 Up
      2 Oct 21 15:52:07 Originate Call
      1 Oct 21 15:52:07 CSPF: computation result accepted
    Created: Thu Oct 21 15:52:06 2004
  Total 1 displayed,  Up1 , Down 0

Egress LSP: 1 sessions

10.0.0.1
  From: 10.0.0.6, LSPstate: Up, ActiveRoute: 0
  LSPname: R6-to-R1 , LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: -
  Resv style: 1 FF, Label in: 3, Label out: -
  Time left: 142, Since: Thu Oct 21 15:41:59 2004
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 2 receiver 39082 protocol 0
  PATH rcvfrom: 10.1.13.2 (so-0/0/2.0) 17 pkts
  Adspec: received MTU 1500
  PATH sentto: localclient
  RESV rcvfrom: localclient
  Record route: 10.1.36.2 10.1.13.2 <self>
```

Total 1 displayed, Up 1 , Down 0

Transit LSP: 0 sessions

Total 0 displayed, Up 0, Down 0

## Sample Output 2

```
user@R3> show mpls lsp extensive
```

Ingress LSP: 0 sessions

Total 0 displayed, Up 0, Down 0

Egress LSP: 0 sessions

Total 0 displayed, Up 0, Down 0

Transit LSP: 2 sessions

10.0.0.1

From: 10.0.0.6, LSPstate: Up, ActiveRoute: 1

LSPname: R6-to-R1 , LSPpath: Primary

Suggested label received: -, Suggested label sent: -

Recovery label received: -, Recovery label sent: 3

Resv style: 1 FF, Label in: 100528, Label out: 3

Time left: 125, Since: Thu Oct 21 15:29:26 2004

Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500

Port number: sender 2 receiver 39082 protocol 0

PATH rcvfrom: 10.1.36.2 (so-0/0/3.0) 17 pkts

Adspec: received MTU 1500 sent MTU 1500

PATH sentto: 10.1.13.1 (so-0/0/2.0) 17 pkts

RESV rcvfrom: 10.1.13.1 (so-0/0/2.0) 17 pkts

Explct route: 10.1.13.1

Record route: 10.1.36.2 <self> 10.1.13.1

10.0.0.6

From: 10.0.0.1, LSPstate: Up, ActiveRoute: 1

LSPname: R1-to-R6 , LSPpath: Primary

Suggested label received: -, Suggested label sent: -

Recovery label received: -, Recovery label sent: 3

Resv style: 1 FF, Label in: 100544, Label out: 3

Time left: 147, Since: Thu Oct 21 15:39:33 2004

Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500

Port number: sender 1 receiver 47963 protocol 0

PATH rcvfrom: 10.1.13.1 (so-0/0/2.0) 4 pkts

Adspec: received MTU 1500 sent MTU 1500

PATH sentto: 10.1.36.2 (so-0/0/3.0) 4 pkts

RESV rcvfrom: 10.1.36.2 (so-0/0/3.0) 4 pkts

Explct route: 10.1.36.2

Record route: 10.1.13.1 <self> 10.1.36.2

Total 2 displayed, Up 2, Down 0

## Sample Output 3

```
user@R6> show mpls lsp extensive
```

Ingress LSP: 1 sessions

10.0.0.1

From: 10.0.0.6, State: Up, ActiveRoute: 1, LSPname: R6-to-R1

ActivePath: (primary)

LoadBalance: Random

Encoding type: Packet, Switching type: Packet, GPID: IPv4

\*Primary State: Up

```

    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 20)
10.1.36.1S 10.1.13.1S
    Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):

        10.1.36.1 10.1.13.1
18 Oct 21 15:34:18 Selected as active path
17 Oct 21 15:34:17 Record Route: 10.1.36.1 10.1.13.1
16 Oct 21 15:34:17 Up
15 Oct 21 15:34:17 Originate Call
14 Oct 21 15:34:17 CSPF: computation result accepted
[...Output truncated...]
Created: Tue Oct 19 22:28:30 2004
Total 1 displayed, Up 1, Down 0

Egress LSP: 1 sessions

10.0.0.6
From: 10.0.0.1, LSPstate: Up, ActiveRoute: 0
  LSPname: R1-to-R6 , LSPpath: Primary
Suggested label received: -, Suggested label sent: -
Recovery label received: -, Recovery label sent: -
Resv style: 1 FF, Label in: 3, Label out: -
Time left: 126, Since: Thu Oct 21 15:44:25 2004
Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
Port number: sender 1 receiver 47963 protocol 0
PATH rcvfrom: 10.1.36.1 (so-0/0/3.0) 4 pkts
Adspec: received MTU 1500
PATH sentto: localclient
RESV rcvfrom: localclient
  Record route: 10.1.13.1 10.1.36.1 <self>
Total 1 displayed, Up 1, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

**Meaning** Sample Outputs 1 and 3 from ingress router R1 and egress router R6 show that the LSP is now traversing the network along the expected path, from R1 through R3 to R6, and the reverse LSP, from R6 through R3 to R1. In addition, Sample Output 2 from transit router R3 shows that there are two transit LSP sessions, one from R1 to R6, and the other from R6 to R1.

## Checklist for Checking the RSVP Layer

**Problem** **Description:** This checklist provides the steps and commands for checking the Resource Reservation Protocol (RSVP) layer of the layered Multiprotocol Label Switching (MPLS) model. The checklist provides links to an overview of the RSVP layer and more detailed information about the commands used to investigate the problem.

[Table 26 on page 1033](#) provides commands for checking the RSVP layer.

**Table 26: Checklist for Checking the RSVP Layer**

Tasks	Command or Action
<b>“Checking the RSVP Layer” on page 1034</b>	
1. Verify the LSP on page 1036	<b>show mpls lsp extensive</b>

Table 26: Checklist for Checking the RSVP Layer (*continued*)

Tasks	Command or Action
2. <a href="#">Verify RSVP Sessions on page 1038</a>	<code>show rsvp session</code>
3. <a href="#">Verify RSVP Neighbors on page 1039</a>	<code>show rsvp neighbor</code>
4. <a href="#">Verify RSVP Interfaces on page 1040</a>	<code>show rsvp interface</code>
5. <a href="#">Verify the RSVP Protocol Configuration on page 1042</a>	<code>show configuration protocols rsvp</code>
6. <a href="#">Take Appropriate Action on page 1043</a>	<p>The following sequence of commands addresses the specific problem described in this topic:</p> <pre> [edit] edit protocols rsvp  [edit protocols rsvp] show set interface <i>type-fpc/pic/port</i> show commit </pre>
7. <a href="#">Verify the LSP Again on page 1044</a>	<code>show mpls lsp extensive</code>

## Checking the RSVP Layer

**Purpose** After you have configured the label-switched path (LSP), issued the `show mpls lsp extensive` command, and determined that there is an error, you might find that the error is not in the physical, data link, or Internet Protocol (IP) and interior gateway protocol (IGP) layers. Continue investigating the problem at the RSVP layer of the network.

[Figure 105 on page 1035](#) illustrates the RSVP layer of the layered MPLS model.



Figure 105: Checking the RSVP Layer

<b>BGP Layer</b>	<traceroute <i="">host-name  show bgp summary  show configuration protocols bgp  show route <i>destination-prefix</i> detail  show route receive protocol bgp <i>neighbor-address</i> </traceroute>
<b>MPLS Layer</b>	show mpls lsp show mpls lsp extensive show route table mpls.0 show route <i>address</i> traceroute <i>address</i> ping mpls rsvp <i>lsp-name</i> detail
<b>RSVP Layer</b>	show rsvp session show rsvp neighbor show rsvp interface
<div>↙ IGP and IP Layers Functioning ↘</div>	
<b>OSPF Layer</b>	<b>IS-IS Layer</b>
show ospf neighbor show configuration protocols ospf show ospf interface	show isis adjacency show configuration protocols isis show isis interface
<b>IP Layer</b>	<b>IP Layer</b>
show ospf neighbor extensive show interfaces terse	show isis adjacency extensive show interfaces terse
<b>Data Link Layer</b>	show interfaces extensive <i>"JUNOS Interfaces Operations Guide"</i>
<b>Physical Layer</b>	show interfaces show interfaces terse ping <i>host</i>


g015546

With this layer, you check that dynamic RSVP signaling is occurring as expected, neighbors are connected, and interfaces are configured correctly for RSVP. Check the ingress, egress, and transit routers.

If the network is not functioning at this layer, the LSP does not work as configured.

Figure 106 on page 1036 illustrates the MPLS network used in this topic.

Figure 106: MPLS Network Broken at the RSVP Layer

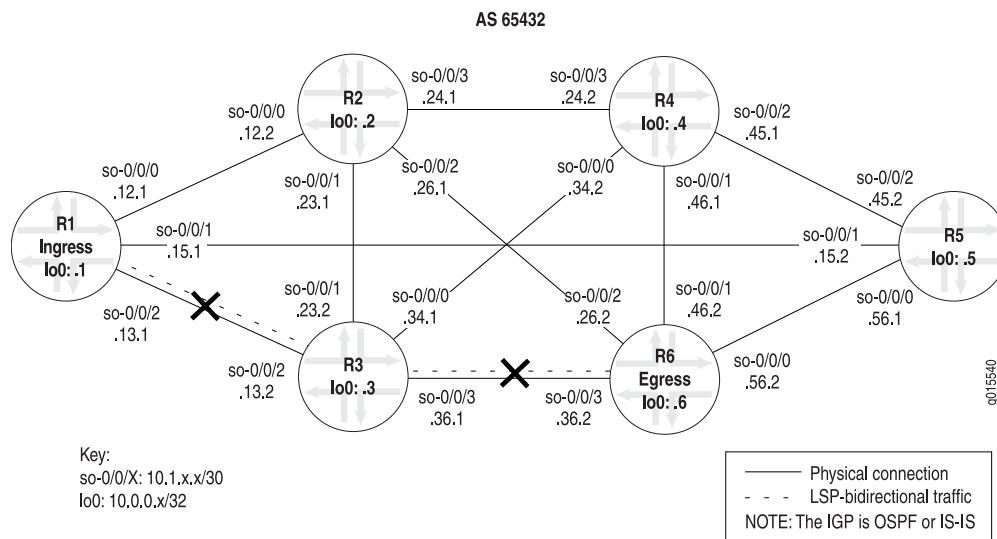

The network shown in [Figure 106 on page 1036](#) is a fully meshed configuration where every directly connected interface can receive and send packets to every other similar interface. The LSP in this network is configured to run from ingress router **R1**, through transit router **R3**, to egress router **R6**. In addition, a reverse LSP is configured to run from **R6** through **R3** to **R1**, creating bidirectional traffic.

However, in this example, the LSP is down without a path in either direction, from **R1** to **R6** or from **R6** to **R1**.

The crosses shown in [Figure 106 on page 1036](#) indicate where the LSP is broken. Some possible reasons the LSP is broken might include that dynamic RSVP signaling is not occurring as expected, neighbors are not connected, or interfaces are incorrectly configured for RSVP.

In the network in [Figure 106 on page 1036](#), a configuration error on transit router **R3** prevents the LSP from traversing the network as expected.

To check the RSVP layer, follow these steps:

1. [Verify the LSP on page 1036](#)
2. [Verify RSVP Sessions on page 1038](#)
3. [Verify RSVP Neighbors on page 1039](#)
4. [Verify RSVP Interfaces on page 1040](#)
5. [Verify the RSVP Protocol Configuration on page 1042](#)
6. [Take Appropriate Action on page 1043](#)
7. [Verify the LSP Again on page 1044](#)

## Verify the LSP

**Purpose** Typically, you use the **show mpls lsp extensive** command to verify the LSP. However for quick verification of the LSP state, use the **show mpls lsp** command. If the LSP is down,

use the **extensive** option (**show mpls lsp extensive**) as a follow-up. If your network has numerous LSPs, you might consider specifying the name of the LSP, using the **name** option (**show mpls lsp name *name*** or **show mpls lsp name *name* extensive**).

**Action** To determine whether the LSP is up, enter the following command from the ingress router:

```
user@host> show mpls lsp extensive
```

### Sample Output 1

```
user@R1> show mpls lsp extensive
Ingress LSP: 1 sessions

10.0.0.6
  From: 10.0.0.1, State: Dn, ActiveRoute: 0,  LSPname: R1-to-R6
  ActivePath: (none)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  Primary                               State: Dn
    2 Oct 27 15:06:05 10.1.13.2:  No Route toward dest [4 times]
    1 Oct 27 15:05:56 Originate Call
  Created: Wed Oct 27 15:05:55 2004
Total 1 displayed, Up 0,  Down 1

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

user@R3> show mpls lsp extensive
Ingress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

user@R6> show mpls lsp extensive
Ingress LSP: 1 sessions

10.0.0.1
  From: 10.0.0.6, State: Dn, ActiveRoute: 0,  LSPname: R6-to-R1
  ActivePath: (none)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  Primary                               State: Dn
    Will be enqueued for recomputation in 22 second(s).
    1 Oct 27 14:59:12  CSPF failed: no route toward 10.0.0.1 [4 times]
  Created: Wed Oct 27 14:57:44 2004
Total 1 displayed, Up 0,  Down 1

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

```
Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

**Meaning** The sample output shows that the LSP is down in both directions, from **R1** to **R6**, and from **R6** to **R1**. The output from **R1** shows that **R1** is using a no-cspf LSP since it tried to originate the call without being able to reach the destination. The output from **R6** shows that the Constrained Shortest Path First (CSPF) algorithm failed, resulting in no route to destination **10.0.0.1**.

## Verify RSVP Sessions

**Purpose** When an RSVP session is successfully created, the LSP is set up along the paths created by the RSVP session. If the RSVP session is unsuccessful, the LSP does not work as configured.

**Action** To verify currently active RSVP sessions, enter the following command from the ingress, transit, and egress routers:

```
user@host> show rsvp session
```

## Sample Output 1

```
user@R1> show rsvp session
Ingress RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0

Egress RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0

user@R3> show rsvp session
Ingress RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0

Egress RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0

user@R6> show rsvp session
Ingress RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0

Egress RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

## Sample Output 2

```
user@R1> show rsvp session
Ingress RSVP: 1 sessions
To           From           State Rt Style LabelIn LabelOut LSPName
```

```

10.0.0.6      10.0.0.1      Up      1 1 FF      -    100768  R1-to-R6
Total 1 displayed, Up1 , Down 0

```

```

Egress RSVP: 1 sessions
To      From      State Rt Style Labelin Labelout LSPname
10.0.0.1 10.0.0.6      Up    0 1 FF      3      -    R6-to-R1
Total 1 displayed, Up1 , Down 0

```

```

Transit RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

```

user@R3> show rsvp session
Ingress RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

```

Egress RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

```

Transit RSVP: 2 sessions
To      From      State Rt Style Labelin Labelout LSPname
10.0.0.1 10.0.0.6      Up    1 1 FF    100784      3  R6-to-R1
10.0.0.6 10.0.0.1      Up    1 1 FF    100768      3  R1-to-R6
Total 2 displayed, Up2 , Down 0

```

```

user@R6> show rsvp session
Ingress RSVP: 1 sessions
To      From      State Rt Style Labelin Labelout LSPname
10.0.0.1 10.0.0.6      Up    1 1 FF      -    100784  R6-to-R1
Total 1 displayed, Up1 , Down 0

```

```

Egress RSVP: 1 sessions
To      From      State Rt Style Labelin Labelout LSPname
10.0.0.6 10.0.0.1      Up    0 1 FF      3      -    R1-to-R6
Total 1 displayed, Up1 , Down 0

```

```

Transit RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

**Meaning** Sample Output 1 from all routers shows that no RSVP sessions were successfully created, even though the LSP **R6-to-R1** is configured. Continue investigating the problem in [“Verify RSVP Neighbors” on page 1039](#).

In contrast to Sample Output 1 and to illustrate correct output, Sample Output 2 shows the output from the ingress, transit, and egress routers when the RSVP configuration is correct, and the LSP is traversing the network as configured. **R1** and **R6** both show an ingress and egress RSVP session, with the LSP **R1-to-R6**, and the reverse LSP **R6-to-R1**. Transit router **R3** shows two transit RSVP sessions.

## Verify RSVP Neighbors

**Purpose** Display a list of RSVP neighbors that were learned dynamically when exchanging RSVP packets. Once a neighbor is learned, it is never removed from the list of RSVP neighbors unless the RSVP configuration is removed from the router.

**Action** To verify RSVP neighbors, enter the following command from the ingress, transit, and egress routers:

```
user@host> show rsvp neighbor
```

### Sample Output 1

```
user@R1> show rsvp neighbor
RSVP neighbor: 1 learned
Address          Idle Up/Dn LastChange HelloInt HelloTx/Rx MsgRcvd
10.1.13.2         10  1/0      9:22         9    64/64    32

user@R3> show rsvp neighbor
RSVP neighbor: 2 learned
Address          Idle Up/Dn LastChange HelloInt HelloTx/Rx MsgRcvd
10.1.13.1         0  1/0      28:20        9   190/190   41
10.1.36.2        16:50 1/1      15:37        9   105/78    38

user@R6> show rsvp neighbor
RSVP neighbor: 1 learned
Address          Idle Up/Dn LastChange HelloInt HelloTx/Rx MsgRcvd
10.1.36.1        17:30 1/1      16:15        9   104/78    39
```

### Sample Output 2

```
user@R3> show rsvp neighbor
RSVP neighbor: 2 learned
Address          Idle Up/Dn LastChange HelloInt HelloTx/Rx MsgRcvd
10.1.13.1         5  1/0      9:14         9    63/63    33
10.1.36.2         5  1/0      9:05         9    62/62    32

user@R6> show rsvp neighbor
RSVP neighbor: 1 learned
Address          Idle Up/Dn LastChange HelloInt HelloTx/Rx MsgRcvd
10.1.36.1         5  1/0      8:54         9    61/61    32
```

**Meaning** Sample Output 1 shows that **R1** and **R6** have one RSVP neighbor each, **R3**. However, the values in the **Up/Dn** field are different. **R1** has a value of **1/0** and **R6** has a value of **1/1**, indicating that **R1** is an active neighbor with **R3**, but **R6** is not. When the up count is one more than the down count, the neighbor is active; if the values are equal, the neighbor is down. The values for **R6** are equal, **1/1**, indicating that the neighbor **R3** is down.

Transit router **R3** knows about two neighbors, **R1** and **R6**. The **Up/Dn** field indicates that **R1** is an active neighbor and **R6** is down. At this point it is not possible to determine if the problem resides with **R3** or **R6**, because both neighbors are not active. Continue investigating the problem in [“Verify RSVP Interfaces” on page 1040](#).

In contrast to Sample Output 1 and to illustrate correct output, Sample Output 2 shows the correct neighbor relationship between transit router **R3** and egress router **R6**. The **Up/Dn** field shows the up count to be one more than the down count, **1/0**, indicating that the neighbors are active.

## Verify RSVP Interfaces

**Purpose** Display the status of each interface on which RSVP is enabled to determine where the configuration error occurred.

**Action** To verify the status of RSVP interfaces, enter the following command from the ingress, transit, and egress routers:

```
user@host> show rsvp interface
```

### Sample Output 1

```
user@R1> show rsvp interface
```

```
RSVP interface: 3 active
```

Interface	State	Active resv	Subscr- ption	Static BW	Available BW	Reserved BW	Highwater mark
so-0/0/0.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/1.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/2.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps

```
user@R3> show rsvp interface
```

```
RSVP interface: 3 active
```

Interface	State	Active resv	Subscr- ption	Static BW	Available BW	Reserved BW	Highwater mark
so-0/0/0.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/1.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/2.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps

```
<<< Missing interface so-0/0/3.0
```

```
user@R6> show rsvp interface
```

```
RSVP interface: 4 active
```

Interface	State	Active resv	Subscr- ption	Static BW	Available BW	Reserved BW	Highwater mark
so-0/0/0.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/1.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/2.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/3.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps

### Sample Output 2

```
user@R1> show rsvp interface
```

```
RSVP interface: 3 active
```

Interface	State	Active resv	Subscr- ption	Static BW	Available BW	Reserved BW	Highwater mark
so-0/0/0.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/1.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/2.0	Up	1	100%	155.52Mbps	155.52Mbps	0bps	0bps

```
user@R3> show rsvp interface
```

```
RSVP interface: 4 active
```

Interface	State	Active resv	Subscr- ption	Static BW	Available BW	Reserved BW	Highwater mark
so-0/0/0.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/1.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/2.0	Up	1	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/3.0	Up	1	100%	155.52Mbps	155.52Mbps	0bps	0bps

```
user@R6> show rsvp interface
```

```
RSVP interface: 4 active
```

Active	Subscr-	Static	Available	Reserved	Highwater
--------	---------	--------	-----------	----------	-----------

Interface	State	resv	ption	BW	BW	BW	mark
so-0/0/0.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/1.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/2.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/3.0	Up	1	100%	155.52Mbps	155.52Mbps	0bps	0bps

**Meaning** Sample Output 1 shows that even though each router has interfaces that are up and have RSVP active, there are no reservations (**Active resv**) on any of the routers. In this example, we would expect at least one reservation on the ingress and egress routers, and two reservations on the transit router.

In addition, interface **so-0/0/3** on transit router **R3** is not included in the configuration. The inclusion of this interface is critical to the success of the LSP.

In contrast to Sample Output 1 and to illustrate correct output, Sample Output 2 shows the relevant interfaces with active reservations.

## Verify the RSVP Protocol Configuration

**Purpose** After you have checked RSVP sessions, interfaces, neighbors, and determined that there might be a configuration error, verify the RSVP protocol configuration.

**Action** To verify the RSVP configuration, enter the following command from the ingress, transit, and egress routers:

```
user@host> show configuration protocols rsvp
```

## Sample Output

```
user@R1> show configuration protocols rsvp
interface so-0/0/0.0;
interface so-0/0/1.0;
interface so-0/0/2.0;
interface fxp0.0 {
    disable;
}

user@R3> show configuration protocols rsvp
interface so-0/0/0.0;
interface so-0/0/1.0;
interface so-0/0/2.0; <<< Missing interface so-0/0/3.0
interface fxp0.0 {
    disable;
}

user@R6> show configuration protocols rsvp
interface so-0/0/0.0;
interface so-0/0/1.0;
interface so-0/0/2.0;
interface so-0/0/3.0;
interface fxp0.0 {
    disable;
}
```

**Meaning** The sample output shows that **R3** has interface **so-0/0/3.0** missing from the RSVP protocol configuration. This interface is critical for the correct functioning of the LSP.



## Take Appropriate Action

**Problem** **Description:** Depending on the error you encountered in your investigation, you must take the appropriate action to correct the problem. In this example, an interface is missing from the configuration of router R3.

**Solution** To correct the error in this example, follow these steps:

1. Include the missing interface in the configuration of transit router R3:

```
user@R3> edit
user@R3# edit protocols rsvp
[edit protocols rsvp]
user@R3# show
user@R3# set interface so-0/0/3.0
```

2. Verify and commit the configuration:

```
[edit protocols rsvp]
user@R3# show
user@R3# commit
```

**Sample Output**

```
user@R3> edit
Entering configuration mode

[edit]
user@R3# edit protocols rsvp

[edit protocols rsvp]
user@R3# show
interface so-0/0/0.0;
interface so-0/0/1.0;
interface so-0/0/2.0; <<< Missing interface so-0/0/3.0
interface fxp0.0 {
    disable;
}
[edit protocols rsvp]
user@R3# set interface so-0/0/3.0

[edit protocols rsvp]
user@R3# show
interface so-0/0/0.0;
interface so-0/0/1.0;
interface so-0/0/2.0;
interface fxp0.0 {
    disable;
}
interface so-0/0/3.0; <<< Interface now included in the configuration

[edit protocols rsvp]
user@R3# commit
commit complete
```

**Meaning** The sample output shows that the missing interface **so-0/0/3.0** on transit router **R3** is now correctly included at the **[edit protocols rsvp]** hierarchy level. This results in the possibility that the LSP might come up.

## Verify the LSP Again

- Purpose** After taking the appropriate action to correct the error, the LSP needs to be checked again to confirm that the problem in the MPLS layer has been resolved.
- Action** To verify the LSP again, enter the following command on the ingress, transit, and egress routers:

```
user@host> show mpls lsp extensive
```

## Sample Output 1

```
user@R1> show mpls lsp extensive
Ingress LSP: 1 sessions

10.0.0.6
  From: 10.0.0.1, State: Up,  ActiveRoute:1, LSPname: R1-to-R6
  ActivePath: (primary)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary                               State: Up
    Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):

      10.1.13.2 10.1.36.2
      5 Oct 27 15:28:57 Selected as active path
      4 Oct 27 15:28:57  Record Route: 10.1.13.2 10.1.36.2
      3 Oct 27 15:28:57 Up
      2 Oct 27 15:28:44 10.1.13.2: No Route toward dest[35 times]
      1 Oct 27 15:05:56 Originate Call
    Created: Wed Oct 27 15:05:56 2004
Total 1 displayed, Up 1, Down 0

Egress LSP: 1 sessions

10.0.0.1
  From: 10.0.0.6, LSPstate: Up, ActiveRoute: 0
  LSPname: R6-to-R1, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: -
  Resv style: 1 FF, Label in: 3, Label out: -
  Time left: 136, Since: Wed Oct 27 15:29:20 2004
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 39092 protocol 0
  PATH rcvfrom: 10.1.13.2 (so-0/0/2.0) 6 pkts
  Adspec: received MTU 1500
  PATH sentto: localclient
  RESV rcvfrom: localclient
  Record route: 10.1.36.2 10.1.13.2 <self>
Total 1 displayed, Up 1, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

## Sample Output 2

```

user@R3> show mpls lsp extensive
Ingress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 2 sessions

10.0.0.1
  From: 10.0.0.6, LSPstate: Up, ActiveRoute: 1
  LSPname: R6-to-R1, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 3
  Resv style: 1 FF, Label in: 100672, Label out: 3
  Time left: 152, Since: Wed Oct 27 15:16:39 2004
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 39092 protocol 0
  PATH rcvfrom: 10.1.36.2 (so-0/0/3.0) 7 pkts
  Adspec: received MTU 1500 sent MTU 1500
  PATH sentto: 10.1.13.1 (so-0/0/2.0) 7 pkts
  RESV rcvfrom: 10.1.13.1 (so-0/0/2.0) 7 pkts
  Explct route: 10.1.13.1
  Record route: 10.1.36.2 <self> 10.1.13.1

10.0.0.6
  From: 10.0.0.1, LSPstate: Up, ActiveRoute: 1
  LSPname: R1-to-R6, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 3
  Resv style: 1 FF, Label in: 100656, Label out: 3
  Time left: 129, Since: Wed Oct 27 14:53:14 2004
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 47977 protocol 0
  PATH rcvfrom: 10.1.13.1 (so-0/0/2.0) 40 pkts
  Adspec: received MTU 1500 sent MTU 1500
  PATH sentto: 10.1.36.2 (so-0/0/3.0) 7 pkts
  RESV rcvfrom: 10.1.36.2 (so-0/0/3.0) 7 pkts
  Record route: 10.1.13.1 <self> 10.1.36.2
Total 2 displayed, Up 2, Down 0

```

## Sample Output 3

```

user@R6> show mpls lsp extensive
Ingress LSP: 1 sessions

10.0.0.1
  From: 10.0.0.6, State: Up, ActiveRoute: 1, LSPname: R6-to-R1
  ActivePath: (primary)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary State: Up
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 20)
  10.1.36.1 S 10.1.13.1 S
    Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):

      10.1.36.1 10.1.13.1
      6 Oct 27 15:22:06 Selected as active path

```

```
5 Oct 27 15:22:06 Record Route: 10.1.36.1 10.1.13.1
4 Oct 27 15:22:06 Up
3 Oct 27 15:22:06 Originate Call
2 Oct 27 15:22:06 CSPF: computation result accepted
1 Oct 27 15:21:36 CSPF failed: no route toward 10.0.0.1[50 times]
Created: Wed Oct 27 14:57:45 2004
Total 1 displayed, Up 1, Down 0
```

Egress LSP: 1 sessions

```
10.0.0.6
From: 10.0.0.1, LSPstate: Up, ActiveRoute: 0
LSPname: R1-to-R6, LSPpath: Primary
Suggested label received: -, Suggested label sent: -
Recovery label received: -, Recovery label sent: -
Resv style: 1 FF, Label in: 3, Label out: -
Time left: 119, Since: Wed Oct 27 15:21:43 2004
Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
Port number: sender 1 receiver 47977 protocol 0
PATH rcvfrom: 10.1.36.1 (so-0/0/3.0) 7 pkts
Adspec: received MTU 1500
PATH sentto: localclient
RESV rcvfrom: localclient
Record route: 10.1.13.1 10.1.36.1 <self>
Total 1 displayed, Up 1, Down 0
```

Transit LSP: 0 sessions  
Total 0 displayed, Up 0, Down 0

**Meaning** Sample Output 1 from ingress router **R1** shows that LSP **R1-to-R6** has an active route to **R6** and the state is up.

Sample Output 2 from transit router **R3** shows that there are two transit LSP sessions, one from **R1** to **R6** and the other from **R6** to **R1**. Both LSPs are up.

Sample Output 3 from egress router **R6** shows that the LSP is up and the active route is the primary route. The LSP is now traversing the network along the expected path, from **R1** through **R3** to **R6**, and the reverse LSP, from **R6** through **R3** to **R1**.

---

## Verify the LSP

**Purpose** Typically, you use the **show mpls lsp extensive** command to verify the LSP. However for quick verification of the LSP state, use the **show mpls lsp** command. If the LSP is down, use the **extensive** option (**show mpls lsp extensive**) as a follow-up. If your network has numerous LSPs, you might consider specifying the name of the LSP, using the **name** option (**show mpls lsp name *name*** or **show mpls lsp name *name* extensive**).

**Action** To determine whether the LSP is up, enter the following command from the ingress router:

```
user@host> show mpls lsp extensive
```

### Sample Output 1

```
user@R1> show mpls lsp extensive
Ingress LSP: 1 sessions
```

```

10.0.0.6
  From: 10.0.0.1, State: Dn, ActiveRoute: 0, LSPname: R1-to-R6
  ActivePath: (none)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  Primary                               State: Dn
    2 Oct 27 15:06:05 10.1.13.2: No Route toward dest [4 times]
    1 Oct 27 15:05:56 Originate Call
  Created: Wed Oct 27 15:05:55 2004
Total 1 displayed, Up 0, Down 1

```

```

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

```

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

```

user@R3> show mpls lsp extensive
Ingress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

```

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

```

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

```

user@R6> show mpls lsp extensive
Ingress LSP: 1 sessions

```

```

10.0.0.1
  From: 10.0.0.6, State: Dn, ActiveRoute: 0, LSPname: R6-to-R1
  ActivePath: (none)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  Primary                               State: Dn
    Will be enqueued for recomputation in 22 second(s).
    1 Oct 27 14:59:12 CSPF failed: no route toward 10.0.0.1 [4 times]
  Created: Wed Oct 27 14:57:44 2004
Total 1 displayed, Up 0, Down 1

```

```

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

```

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

**Meaning** The sample output shows that the LSP is down in both directions, from **R1** to **R6**, and from **R6** to **R1**. The output from **R1** shows that **R1** is using a no-cspf LSP since it tried to originate the call without being able to reach the destination. The output from **R6** shows that the Constrained Shortest Path First (CSPF) algorithm failed, resulting in no route to destination **10.0.0.1**.

## Verify RSVP Sessions

**Purpose** When an RSVP session is successfully created, the LSP is set up along the paths created by the RSVP session. If the RSVP session is unsuccessful, the LSP does not work as configured.

**Action** To verify currently active RSVP sessions, enter the following command from the ingress, transit, and egress routers:

```
user@host> show rsvp session
```

### Sample Output 1

```
user@R1> show rsvp session
Ingress RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0

Egress RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0

user@R3> show rsvp session
Ingress RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0

Egress RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0

user@R6> show rsvp session
Ingress RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0

Egress RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

### Sample Output 2

```
user@R1> show rsvp session
Ingress RSVP: 1 sessions
To          From          State Rt Style Labelin Labelout LSPname
10.0.0.6    10.0.0.1    Up    1 1 FF      -    100768 R1-to-R6
Total 1 displayed, Up1 , Down 0

Egress RSVP: 1 sessions
To          From          State Rt Style Labelin Labelout LSPname
10.0.0.1    10.0.0.6    Up    0 1 FF      3      -    R6-to-R1
Total 1 displayed, Up1 , Down 0

Transit RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

```

user@R3> show rsvp session
Ingress RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0

Egress RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit RSVP: 2 sessions
To          From          State Rt Style Labelin Labelout LSPname
10.0.0.1    10.0.0.6    Up    1 1 FF 100784      3 R6-to-R1
10.0.0.6    10.0.0.1    Up    1 1 FF 100768      3 R1-to-R6
Total 2 displayed, Up 2 , Down 0

user@R6> show rsvp session
Ingress RSVP: 1 sessions
To          From          State Rt Style Labelin Labelout LSPname
10.0.0.1    10.0.0.6    Up    1 1 FF      - 100784 R6-to-R1
Total 1 displayed, Up 1 , Down 0

Egress RSVP: 1 sessions
To          From          State Rt Style Labelin Labelout LSPname
10.0.0.6    10.0.0.1    Up    0 1 FF      3      - R1-to-R6
Total 1 displayed, Up 1 , Down 0

Transit RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

**Meaning** Sample Output 1 from all routers shows that no RSVP sessions were successfully created, even though the LSP **R6-to-R1** is configured. Continue investigating the problem in “[Verify RSVP Neighbors](#)” on page 1039.

In contrast to Sample Output 1 and to illustrate correct output, Sample Output 2 shows the output from the ingress, transit, and egress routers when the RSVP configuration is correct, and the LSP is traversing the network as configured. **R1** and **R6** both show an ingress and egress RSVP session, with the LSP **R1-to-R6**, and the reverse LSP **R6-to-R1**. Transit router **R3** shows two transit RSVP sessions.

## Verify RSVP Neighbors

**Purpose** Display a list of RSVP neighbors that were learned dynamically when exchanging RSVP packets. Once a neighbor is learned, it is never removed from the list of RSVP neighbors unless the RSVP configuration is removed from the router.

**Action** To verify RSVP neighbors, enter the following command from the ingress, transit, and egress routers:

```
user@host> show rsvp neighbor
```

### Sample Output 1

```

user@R1> show rsvp neighbor
RSVP neighbor: 1 learned
Address          Idle Up/Dn LastChange HelloInt HelloTx/Rx MsgRcvd
10.1.13.2        10 1/0      9:22          9    64/64    32

```

```

user@R3> show rsvp neighbor
RSVP neighbor: 2 learned
Address          Idle Up/Dn LastChange HelloInt HelloTx/Rx MsgRcvd
10.1.13.1         0  1/0    28:20      9    190/190   41
10.1.36.2        16:50 1/1    15:37      9    105/78   38

user@R6> show rsvp neighbor
RSVP neighbor: 1 learned
Address          Idle Up/Dn LastChange HelloInt HelloTx/Rx MsgRcvd
10.1.36.1        17:30 1/1    16:15      9    104/78   39

```

## Sample Output 2

```

user@R3> show rsvp neighbor
RSVP neighbor: 2 learned
Address          Idle Up/Dn LastChange HelloInt HelloTx/Rx MsgRcvd
10.1.13.1         5  1/0     9:14      9     63/63   33
10.1.36.2         5  1/0     9:05      9     62/62   32

user@R6> show rsvp neighbor
RSVP neighbor: 1 learned
Address          Idle Up/Dn LastChange HelloInt HelloTx/Rx MsgRcvd
10.1.36.1         5  1/0     8:54      9     61/61   32

```

**Meaning** Sample Output 1 shows that **R1** and **R6** have one RSVP neighbor each, **R3**. However, the values in the **Up/Dn** field are different. **R1** has a value of **1/0** and **R6** has a value of **1/1**, indicating that **R1** is an active neighbor with **R3**, but **R6** is not. When the up count is one more than the down count, the neighbor is active; if the values are equal, the neighbor is down. The values for **R6** are equal, **1/1**, indicating that the neighbor **R3** is down.

Transit router **R3** knows about two neighbors, **R1** and **R6**. The **Up/Dn** field indicates that **R1** is an active neighbor and **R6** is down. At this point it is not possible to determine if the problem resides with **R3** or **R6**, because both neighbors are not active. Continue investigating the problem in [“Verify RSVP Interfaces” on page 1040](#).

In contrast to Sample Output 1 and to illustrate correct output, Sample Output 2 shows the correct neighbor relationship between transit router **R3** and egress router **R6**. The **Up/Dn** field shows the up count to be one more than the down count, **1/0**, indicating that the neighbors are active.

## Verify RSVP Interfaces

**Purpose** Display the status of each interface on which RSVP is enabled to determine where the configuration error occurred.

**Action** To verify the status of RSVP interfaces, enter the following command from the ingress, transit, and egress routers:

```
user@host> show rsvp interface
```

## Sample Output 1

```

user@R1> show rsvp interface
RSVP interface: 3 active
Active Subscr- Static Available Reserved Highwater

```



Interface	State	resv	ption	BW	BW	BW	mark
so-0/0/0.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/1.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/2.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps

```
user@R3> show rsvp interface
RSVP interface: 3 active
```

Interface	State	Active resv	Subscr-ption	Static BW	Available BW	Reserved BW	Highwater mark
so-0/0/0.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/1.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/2.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps

<<< Missing interface so-0/0/3.0

```
user@R6> show rsvp interface
RSVP interface: 4 active
```

Interface	State	Active resv	Subscr-ption	Static BW	Available BW	Reserved BW	Highwater mark
so-0/0/0.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/1.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/2.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/3.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps

## Sample Output 2

```
user@R1> show rsvp interface
RSVP interface: 3 active
```

Interface	State	Active resv	Subscr-ption	Static BW	Available BW	Reserved BW	Highwater mark
so-0/0/0.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/1.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/2.0	Up	1	100%	155.52Mbps	155.52Mbps	0bps	0bps

```
user@R3> show rsvp interface
RSVP interface: 4 active
```

Interface	State	Active resv	Subscr-ption	Static BW	Available BW	Reserved BW	Highwater mark
so-0/0/0.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/1.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/2.0	Up	1	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/3.0	Up	1	100%	155.52Mbps	155.52Mbps	0bps	0bps

```
user@R6> show rsvp interface
RSVP interface: 4 active
```

Interface	State	Active resv	Subscr-ption	Static BW	Available BW	Reserved BW	Highwater mark
so-0/0/0.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/1.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/2.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/3.0	Up	1	100%	155.52Mbps	155.52Mbps	0bps	0bps

**Meaning** Sample Output 1 shows that even though each router has interfaces that are up and have RSVP active, there are no reservations (**Active resv**) on any of the routers. In this example,

we would expect at least one reservation on the ingress and egress routers, and two reservations on the transit router.

In addition, interface **so-0/0/3** on transit router **R3** is not included in the configuration. The inclusion of this interface is critical to the success of the LSP.

In contrast to Sample Output 1 and to illustrate correct output, Sample Output 2 shows the relevant interfaces with active reservations.

---

## Verify the RSVP Protocol Configuration

**Purpose** After you have checked RSVP sessions, interfaces, neighbors, and determined that there might be a configuration error, verify the RSVP protocol configuration.

**Action** To verify the RSVP configuration, enter the following command from the ingress, transit, and egress routers:

```
user@host> show configuration protocols rsvp
```

### Sample Output

```
user@R1> show configuration protocols rsvp
interface so-0/0/0.0;
interface so-0/0/1.0;
interface so-0/0/2.0;
interface fxp0.0 {
    disable;
}
```

```
user@R3> show configuration protocols rsvp
interface so-0/0/0.0;
interface so-0/0/1.0;
interface so-0/0/2.0; <<< Missing interface so-0/0/3.0
interface fxp0.0 {
    disable;
}
```

```
user@R6> show configuration protocols rsvp
interface so-0/0/0.0;
interface so-0/0/1.0;
interface so-0/0/2.0;
interface so-0/0/3.0;
interface fxp0.0 {
    disable;
}
```

**Meaning** The sample output shows that **R3** has interface **so-0/0/3.0** missing from the RSVP protocol configuration. This interface is critical for the correct functioning of the LSP.

---

## Take Appropriate Action

**Problem Description:** Depending on the error you encountered in your investigation, you must take the appropriate action to correct the problem. In this example, an interface is missing from the configuration of router R3.

**Solution** To correct the error in this example, follow these steps:

1. Include the missing interface in the configuration of transit router R3:

```
user@R3> edit
user@R3# edit protocols rsvp
[edit protocols rsvp]
user@R3# show
user@R3# set interface so-0/0/3.0
```

2. Verify and commit the configuration:

```
[edit protocols rsvp]
user@R3# show
user@R3# commit
```

#### Sample Output

```
user@R3> edit
Entering configuration mode

[edit]
user@R3# edit protocols rsvp

[edit protocols rsvp]
user@R3# show
interface so-0/0/0.0;
interface so-0/0/1.0;
interface so-0/0/2.0; <<< Missing interface so-0/0/3.0
interface fxp0.0 {
    disable;
}
[edit protocols rsvp]
user@R3# set interface so-0/0/3.0

[edit protocols rsvp]
user@R3# show
interface so-0/0/0.0;
interface so-0/0/1.0;
interface so-0/0/2.0;
interface fxp0.0 {
    disable;
}
interface so-0/0/3.0; <<< Interface now included in the configuration

[edit protocols rsvp]
user@R3# commit
commit complete
```

**Meaning** The sample output shows that the missing interface **so-0/0/3.0** on transit router **R3** is now correctly included at the **[edit protocols rsvp]** hierarchy level. This results in the possibility that the LSP might come up.

## Verify the LSP Again

**Purpose** After taking the appropriate action to correct the error, the LSP needs to be checked again to confirm that the problem in the MPLS layer has been resolved.

**Action** To verify the LSP again, enter the following command on the ingress, transit, and egress routers:

```
user@host> show mpls lsp extensive
```

### Sample Output 1

```
user@R1> show mpls lsp extensive
Ingress LSP: 1 sessions

10.0.0.6
  From: 10.0.0.1, State: Up,  ActiveRoute:1, LSPname: R1-to-R6
  ActivePath: (primary)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary                               State: Up
    Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):

      10.1.13.2 10.1.36.2
      5 Oct 27 15:28:57 Selected as active path
      4 Oct 27 15:28:57  Record Route: 10.1.13.2 10.1.36.2
      3 Oct 27 15:28:57 Up
      2 Oct 27 15:28:44 10.1.13.2: No Route toward dest[35 times]
      1 Oct 27 15:05:56 Originate Call
    Created: Wed Oct 27 15:05:56 2004
  Total 1 displayed, Up 1, Down 0

Egress LSP: 1 sessions

10.0.0.1
  From: 10.0.0.6, LSPstate: Up, ActiveRoute: 0
  LSPname: R6-to-R1, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: -
  Resv style: 1 FF, Label in: 3, Label out: -
  Time left: 136, Since: Wed Oct 27 15:29:20 2004
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 39092 protocol 0
  PATH rcvfrom: 10.1.13.2 (so-0/0/2.0) 6 pkts
  Adspec: received MTU 1500
  PATH sentto: localclient
  RESV rcvfrom: localclient
  Record route: 10.1.36.2 10.1.13.2 <self>
  Total 1 displayed, Up 1, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

### Sample Output 2

```
user@R3> show mpls lsp extensive
Ingress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

Transit LSP: 2 sessions

10.0.0.1

From: 10.0.0.6, LSPstate: Up, ActiveRoute: 1  
 LSPname: R6-to-R1, LSPpath: Primary  
 Suggested label received: -, Suggested label sent: -  
 Recovery label received: -, Recovery label sent: 3  
 Resv style: 1 FF, Label in: 100672, Label out: 3  
 Time left: 152, Since: Wed Oct 27 15:16:39 2004  
 Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500  
 Port number: sender 1 receiver 39092 protocol 0  
 PATH rcvfrom: 10.1.36.2 (so-0/0/3.0) 7 pkts  
 Adspec: received MTU 1500 sent MTU 1500  
 PATH sentto: 10.1.13.1 (so-0/0/2.0) 7 pkts  
 RESV rcvfrom: 10.1.13.1 (so-0/0/2.0) 7 pkts  
 Explct route: 10.1.13.1  
 Record route: 10.1.36.2 <self> 10.1.13.1

10.0.0.6

From: 10.0.0.1, LSPstate: Up, ActiveRoute: 1  
 LSPname: R1-to-R6, LSPpath: Primary  
 Suggested label received: -, Suggested label sent: -  
 Recovery label received: -, Recovery label sent: 3  
 Resv style: 1 FF, Label in: 100656, Label out: 3  
 Time left: 129, Since: Wed Oct 27 14:53:14 2004  
 Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500  
 Port number: sender 1 receiver 47977 protocol 0  
 PATH rcvfrom: 10.1.13.1 (so-0/0/2.0) 40 pkts  
 Adspec: received MTU 1500 sent MTU 1500  
 PATH sentto: 10.1.36.2 (so-0/0/3.0) 7 pkts  
 RESV rcvfrom: 10.1.36.2 (so-0/0/3.0) 7 pkts  
 Record route: 10.1.13.1 <self> 10.1.36.2  
 Total 2 displayed, Up 2, Down 0

### Sample Output 3

user@R6> show mpls lsp extensive

Ingress LSP: 1 sessions

10.0.0.1

From: 10.0.0.6, State: Up, ActiveRoute: 1, LSPname: R6-to-R1  
 ActivePath: (primary)  
 LoadBalance: Random  
 Encoding type: Packet, Switching type: Packet, GPID: IPv4  
 \*Primary State: Up  
 Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 20)  
 10.1.36.1 S 10.1.13.1 S  
 Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):  
 10.1.36.1 10.1.13.1  
 6 Oct 27 15:22:06 Selected as active path  
 5 Oct 27 15:22:06 Record Route: 10.1.36.1 10.1.13.1  
 4 Oct 27 15:22:06 Up  
 3 Oct 27 15:22:06 Originate Call  
 2 Oct 27 15:22:06 CSPF: computation result accepted  
 1 Oct 27 15:21:36 CSPF failed: no route toward 10.0.0.1[50 times]  
 Created: Wed Oct 27 14:57:45 2004  
 Total 1 displayed, Up 1, Down 0

Egress LSP: 1 sessions

```

10.0.0.6
  From: 10.0.0.1, LSPstate: Up, ActiveRoute: 0
  LSPname: R1-to-R6, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: -
  Resv style: 1 FF, Label in: 3, Label out: -
  Time left: 119, Since: Wed Oct 27 15:21:43 2004
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 47977 protocol 0
  PATH rcvfrom: 10.1.36.1 (so-0/0/3.0) 7 pkts
  Adspec: received MTU 1500
  PATH sentto: localclient
  RESV rcvfrom: localclient
  Record route: 10.1.13.1 10.1.36.1 <self>
Total 1 displayed, Up 1, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

**Meaning** Sample Output 1 from ingress router **R1** shows that LSP **R1-to-R6** has an active route to **R6** and the state is up.

Sample Output 2 from transit router **R3** shows that there are two transit LSP sessions, one from **R1** to **R6** and the other from **R6** to **R1**. Both LSPs are up.

Sample Output 3 from egress router **R6** shows that the LSP is up and the active route is the primary route. The LSP is now traversing the network along the expected path, from **R1** through **R3** to **R6**, and the reverse LSP, from **R6** through **R3** to **R1**.

## Checklist for Determining LSP Status

**Purpose** This checklist provides the steps and commands to verify the state of a label-switched path (LSP) in an MPLS network. The checklist includes links to more detailed information about the commands to verify the LSP and supporting protocols. [Table 27 on page 1056](#) provides commands for determining the LSP state.

**Table 27: Checklist for Determining the LSP State**

Tasks	Command or Action
<b>“Determining LSP Status” on page 1210</b>	
1. <a href="#">Check the Status of the LSP on page 1210</a>	<b>show mpls lsp</b>
2. <a href="#">Display Extensive Status About the LSP on page 1211</a>	<b>show mpls lsp extensive</b>
<b>“Determining LSP Statistics” on page 1056</b>	
	<b>show rsvp session detail</b>

## Determining LSP Statistics

**Purpose** Display detailed information about RSVP objects to assist the diagnosis of an LSP problem.

**Action** To verify RSVP objects, enter the following Junos OS CLI operational mode command:

```
user@host> show rsvp session detail
```

### Sample Output

```
user@R1> show rsvp session detail
Ingress RSVP: 1 sessions

10.0.0.6
  From: 10.0.0.1, LSPstate: Up, ActiveRoute: 1
  LSPname: R1-to-R6 , LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 100064
  Resv style: 1 FF, Label in: -, Label out: 100064
  Time left: -, Since: Tue Aug 17 12:22:52 2004
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 12 receiver 44251 protocol 0
  PATH rcvfrom: localclient
  Adspec: sent MTU 1500
  PATH sentto: 10.1.13.2 (so-0/0/2.0) 182 pkts
  RESV rcvfrom: 10.1.13.2 (so-0/0/2.0) 159 pkts
  Explct route: 10.1.13.2 10.1.36.2
  Record route: <self> 10.1.13.2 10.1.36.2
Total 1 displayed, Up 1, Down 0

Egress RSVP: 1 sessions

10.0.0.1
  From: 10.0.0.6 , LSPstate: Up, ActiveRoute: 0
  LSPname: R6-to-R1, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: -
  Resv style: 1 FF, Label in: 3, Label out: -
  Time left: 135, Since: Tue Aug 17 12:23:14 2004
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 39024 protocol 0
  PATH rcvfrom: 10.1.15.2 (so-0/0/1.0) 158 pkts
  Adspec: received MTU 1500
  PATH sentto: localclient
  RESV rcvfrom: localclient
  Record route: 10.1.56.2 10.1.15.2 <self>
Total 1 displayed, Up 1, Down 0

Transit RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

**Meaning** The sample output shows that there is one ingress and one egress RSVP session. The ingress session has a source address of **10.0.0.1 (R1)**, and the session is up, with one active route. The LSP name is **R1-to-R6** and it is the primary path for the LSP.

The recovery label (**100064**) is sent by a graceful restart router to its neighbor to recover a forwarding state. It is probably the old label that the router advertised before it went down.

This session is using the fixed filter (**FF**) reservation style (**Resv style**). Since this is an ingress router, there is no inbound label. The outbound label (provided by the next downstream router) is **100064**.

The **Time Left** field provides the number of seconds remaining in the RSVP session, and the **Tspec** object provides information about the controlled load rate (**rate**) and maximum burst size (**peak**), an infinite value (**Infbps**) for the guaranteed delivery option, and the indication that packets smaller than 20 bytes are treated as 20 bytes, while packets larger than 1500 bytes are treated as 1500 bytes.

The port number is the IPv4 tunnel ID, while the sender/receiver port number is the LSP ID. The IPv4 tunnel ID is unique for the life of the LSP, while the sender/receiver LSP ID can change, for example, with an SE style reservation.

The **PATH rcvfrom** field includes the source of the path message. Since this is the ingress router, the local client originated the path message.

The **PATH sentto** field includes the path message destination (**10.1.13.2**) and outgoing interface (**so-0/0/2.0**). The **RESV rcvfrom** field includes both the source of the Resv message received (**10.1.13.2**) and the incoming interface (**so-0/0/2.0**).

The RSVP explicit route and the route record values are identical: **10.1.13.2** and **10.1.36.2**. In most cases, the explicit route and the record route values are identical. Differences indicate that some path rerouting has occurred, typically during Fast-Reroute.

The **Total** fields indicate the total number of ingress, egress, and transit RSVP sessions, with the total being equal to the sum of the up and down sessions. In this example, there is one ingress session, one egress session, and no transit RSVP sessions.

## Checklist for Verifying LSP Use

**Purpose** This checklist provides the steps and commands to verify the use of the LSP in an MPLS network. The checklist includes links to more detailed information about verifying the LSP on the ingress and transit routers in the network.

This checklist describes how to verify the availability and valid use of a label-switched path (LSP) in your network.

**Table 28: Checklist for Verifying LSP Use**

Tasks	Command or Action
<a href="#">“Verifying LSP Use in Your Network” on page 1058</a>	
<a href="#">“Verifying an LSP on the Ingress Router” on page 1059</a>	<code>show route table inet.3</code>
<a href="#">“Verifying an LSP on a Transit Router” on page 1060</a>	<code>show route table mpls.0</code>


[Table 28 on page 1058](#) provides commands for verifying LSP use.

## Verifying LSP Use in Your Network

**Purpose** When you verify the valid use of an LSP on the ingress and transit routers in your network, you can determine if there is a problem with Multiprotocol Label Switching (MPLS) in your network. [Figure 107 on page 1059](#) describes the example network used in this topic.



Figure 107: MPLS Topology for Verifying LSP Use

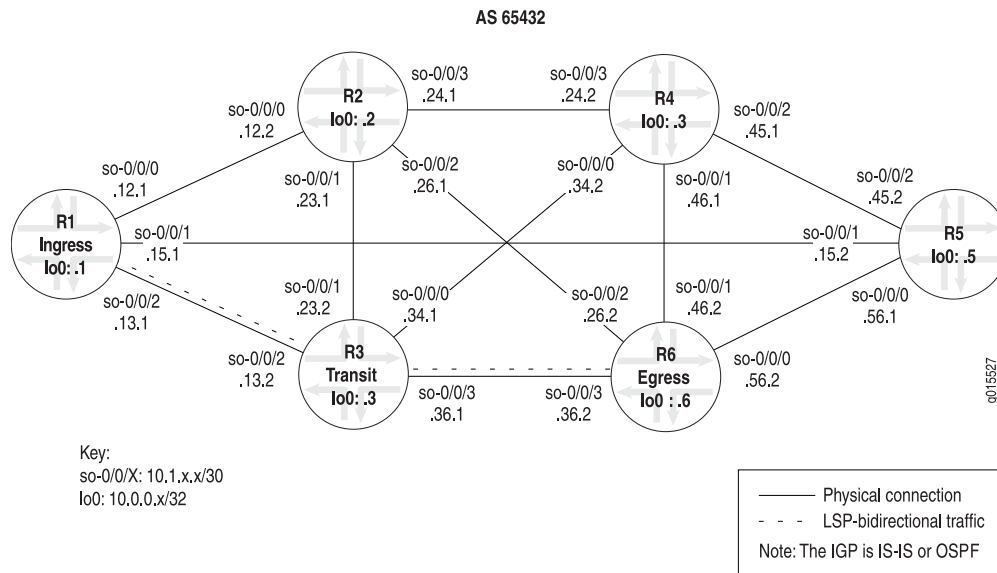

The MPLS network in [Figure 107 on page 1059](#) illustrates a router-only network with SONET interfaces that consist of the following components:

- A full-mesh interior Border Gateway Protocol (IBGP) topology, using AS 65432
- MPLS and Resource Reservation Protocol (RSVP) enabled on all routers
- A **send-statics** policy on routers R1 and R6 that allows a new route to be advertised into the network
- An LSP between routers R1 and R6

The network shown in [Figure 107 on page 1059](#) is a Border Gateway Protocol (BGP) full-mesh network. Since route reflectors and confederations are not used to propagate BGP learned routes, each router must have a BGP session with every other router running BGP.

To verify LSP use in your network, follow these steps:

1. [Verifying an LSP on the Ingress Router on page 1059](#)
2. [Verifying an LSP on a Transit Router on page 1060](#)

## Verifying an LSP on the Ingress Router

**Purpose** You can verify the availability of an LSP when it is up by examining the **inet.3** routing table on the ingress router. The **inet.3** routing table contains the host address of each LSP's egress router. This routing table is used on ingress routers to route BGP packets to the destination egress router. BGP uses the **inet.3** routing table on the ingress router to help resolve next-hop addresses.

**Action** To verify an LSP on an ingress router, enter the following Junos OS command-line interface (CLI) operational mode command:

```
user@host> show route table inet.3
```

## Sample Output

```
user@R1> show route table inet.3
inet.3: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

10.0.0.6/32          *[RSVP/7] 4w0d 22:40:57, metric 20
                    > via so-0/0/2.0, label-switched-path R1-to-R6
```

**Meaning** The sample output shows the **inet.3** routing table. By default, only BGP and MPLS virtual private networks (VPNs) can use the **inet.3** route table to resolve next-hop information. One destination is listed in the route table, **10.0.0.6**. This destination (**10.0.0.6**) is signaled by RSVP, and is the current active path, as indicated by the asterisk (\*). The protocol preference for this route is **7**, and the metric associated with it is **20**. The label-switched path is **R1-to-R6**, through interface **so-0/0/2.0**, which is the physical next-hop transit interface.

Typically, the penultimate router in the LSP either pops the packet's label or changes the label to a value of 0. If the penultimate router pops the top label and an IPv4 packet is underneath, the egress router routes the IPv4 packet, consulting the IP routing table **inet.0** to determine how to forward the packet. If another type of label (such as one created by Label Distribution Protocol (LDP) tunneling or VPNs, but not IPv4) is underneath the top label, the egress router does not examine the **inet.0** routing table. Instead, it examines the **mpls.0** routing table for forwarding decisions.

If the penultimate router changes the packet's label to a value of 0, the egress router strips off the 0 label, indicating that an IPv4 packet follows. The packet is examined by the **inet.0** routing table for forwarding decisions.

When a transit or egress router receives an MPLS packet, information in the MPLS forwarding table is used to determine the next transit router in the LSP or whether this router is the egress router.

When BGP resolves a next-hop prefix, it examines both the **inet.0** and **inet.3** routing tables, seeking the next hop with the lowest preference; for example, RSVP preference 7 is preferred over OSPF preference 10. The RSVP signaled LSP is used to reach the BGP next hop. This is the default when the BGP next hop equals the LSP egress address. Once the BGP next hop is resolved through an LSP, the BGP traffic uses the LSP to forward BGP transit traffic.

## Verifying an LSP on a Transit Router

**Purpose** You can verify the availability of an LSP when it is up by examining the **mpls.0** routing table on a transit router. MPLS maintains the **mpls.0** routing table, which contains a list of the next label-switched router in each LSP. This routing table is used on transit routers to route packets to the next router along an LSP.

**Action** To verify an LSP on a transit router, enter the following Junos OS CLI operational mode command:

```
user@host> show route table mpls.0
```

## Sample Output

```

user@R3> show route table mpls.0
mpls.0: 5 destinations, 5 routes (5 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

0                * [MPLS/0] 7w3d 22:20:56, metric 1
                  Receive
1                * [MPLS/0] 7w3d 22:20:56, metric 1
                  Receive
2                * [MPLS/0] 7w3d 22:20:56, metric 1
                  Receive
100064            * [RSVP/7] 2w1d 04:17:36, metric 1
                  > via so-0/0/3.0, label-switched-path R1-to-R6
100064 (S=0)      * [RSVP/7] 2w1d 04:17:36, metric 1
                  > via so-0/0/3.0, label-switched-path R1-to-R6

```

**Meaning** The sample output from transit router **R3** shows route entries in the form of MPLS label entries, indicating that there is only one active route, even though there are five active entries.

The first three MPLS labels are reserved MPLS labels defined in RFC 3032. Packets received with these label values are sent to the Routing Engine for processing. Label 0 is the IPv4 explicit null label. Label 1 is the MPLS equivalent of the IP Router Alert label and Label 2 is the IPv6 explicit null label.

The two entries with the **100064** label are for the same LSP, **R1-to-R6**. There are two entries because the stack values in the MPLS header may be different. The second entry, **100064 (S=0)**, indicates that the stack depth is not 1 and additional label values are included in the packet. In contrast, the first entry of **100064** has an inferred S=1 which indicates a stack depth of 1 and makes it the last label in the packet. The dual entry indicates that this is the penultimate router. For more information on MPLS label stacking, see RFC 3032, *MPLS Label Stack Encoding*.

The incoming label is the MPLS header of the MPLS packet, and is assigned by RSVP to the upstream neighbor. Juniper Networks routers dynamically assign labels for RSVP traffic-engineered LSPs in the range from 100,000 through 1,048,575.

The router assigns labels starting at label 100,000, in increments of 16. The sequence of label assignments is 100,000, 100,016, 100,032, 100,048, and so on. At the end of the assigned labels, the label numbers start over at 100001, incrementing in units of 16. Juniper Networks reserves labels for various purposes. [Table 29 on page 1061](#) lists the various label range allocations for incoming labels.

**Table 29: MPLS Label Range Allocations**

Incoming Label	Status
0 through 15	Reserved by IETF
16 through 1023	Reserved for static LSP assignment

Table 29: MPLS Label Range Allocations (*continued*)

Incoming Label	Status
1024 through 9999	Reserved for internal use (for example, CCC labels)
10,000 through 99,999	Reserved for static LSP assignment
100,000 through 1,048,575	Reserved for dynamic label assignment

## Verifying an LSP on the Ingress Router

**Purpose** You can verify the availability of an LSP when it is up by examining the **inet.3** routing table on the ingress router. The **inet.3** routing table contains the host address of each LSP's egress router. This routing table is used on ingress routers to route BGP packets to the destination egress router. BGP uses the **inet.3** routing table on the ingress router to help resolve next-hop addresses.

**Action** To verify an LSP on an ingress router, enter the following Junos OS command-line interface (CLI) operational mode command:

```
user@host> show route table inet.3
```

## Sample Output

```
user@R1> show route table inet.3
inet.3: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

10.0.0.6/32          *[RSVP/7] 4w0d 22:40:57, metric 20
                    > via so-0/0/2.0, label-switched-path R1-to-R6
```

**Meaning** The sample output shows the **inet.3** routing table. By default, only BGP and MPLS virtual private networks (VPNs) can use the **inet.3** route table to resolve next-hop information. One destination is listed in the route table, **10.0.0.6**. This destination (**10.0.0.6**) is signaled by RSVP, and is the current active path, as indicated by the asterisk (\*). The protocol preference for this route is **7**, and the metric associated with it is **20**. The label-switched path is **R1-to-R6**, through interface **so-0/0/2.0**, which is the physical next-hop transit interface.

Typically, the penultimate router in the LSP either pops the packet's label or changes the label to a value of 0. If the penultimate router pops the top label and an IPv4 packet is underneath, the egress router routes the IPv4 packet, consulting the IP routing table **inet.0** to determine how to forward the packet. If another type of label (such as one created by Label Distribution Protocol (LDP) tunneling or VPNs, but not IPv4) is underneath the top label, the egress router does not examine the **inet.0** routing table. Instead, it examines the **mpls.0** routing table for forwarding decisions.

If the penultimate router changes the packet's label to a value of 0, the egress router strips off the 0 label, indicating that an IPv4 packet follows. The packet is examined by the **inet.0** routing table for forwarding decisions.

When a transit or egress router receives an MPLS packet, information in the MPLS forwarding table is used to determine the next transit router in the LSP or whether this router is the egress router.

When BGP resolves a next-hop prefix, it examines both the **inet.0** and **inet.3** routing tables, seeking the next hop with the lowest preference; for example, RSVP preference 7 is preferred over OSPF preference 10. The RSVP signaled LSP is used to reach the BGP next hop. This is the default when the BGP next hop equals the LSP egress address. Once the BGP next hop is resolved through an LSP, the BGP traffic uses the LSP to forward BGP transit traffic.

## Verifying an LSP on a Transit Router

**Purpose** You can verify the availability of an LSP when it is up by examining the **mpls.0** routing table on a transit router. MPLS maintains the **mpls.0** routing table, which contains a list of the next label-switched router in each LSP. This routing table is used on transit routers to route packets to the next router along an LSP.

**Action** To verify an LSP on a transit router, enter the following Junos OS CLI operational mode command:

```
user@host> show route table mpls.0
```

## Sample Output

```
user@R3> show route table mpls.0
mpls.0: 5 destinations, 5 routes (5 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

0                * [MPLS/0] 7w3d 22:20:56, metric 1
                  Receive
1                * [MPLS/0] 7w3d 22:20:56, metric 1
                  Receive
2                * [MPLS/0] 7w3d 22:20:56, metric 1
                  Receive
100064            * [RSVP/7] 2w1d 04:17:36, metric 1
                  > via so-0/0/3.0, label-switched-path R1-to-R6
100064 (S=0)      * [RSVP/7] 2w1d 04:17:36, metric 1
                  > via so-0/0/3.0, label-switched-path R1-to-R6
```

**Meaning** The sample output from transit router **R3** shows route entries in the form of MPLS label entries, indicating that there is only one active route, even though there are five active entries.

The first three MPLS labels are reserved MPLS labels defined in RFC 3032. Packets received with these label values are sent to the Routing Engine for processing. Label 0 is the IPv4 explicit null label. Label 1 is the MPLS equivalent of the IP Router Alert label and Label 2 is the IPv6 explicit null label.

The two entries with the **100064** label are for the same LSP, **R1-to-R6**. There are two entries because the stack values in the MPLS header may be different. The second entry, **100064 (S=0)**, indicates that the stack depth is not 1 and additional label values are included in the packet. In contrast, the first entry of **100064** has an inferred S=1 which

indicates a stack depth of 1 and makes it the last label in the packet. The dual entry indicates that this is the penultimate router. For more information on MPLS label stacking, see RFC 3032, *MPLS Label Stack Encoding*.

The incoming label is the MPLS header of the MPLS packet, and is assigned by RSVP to the upstream neighbor. Juniper Networks routers dynamically assign labels for RSVP traffic-engineered LSPs in the range from 100,000 through 1,048,575.

The router assigns labels starting at label 100,000, in increments of 16. The sequence of label assignments is 100,000, 100,016, 100,032, 100,048, and so on. At the end of the assigned labels, the label numbers start over at 100001, incrementing in units of 16. Juniper Networks reserves labels for various purposes. [Table 29 on page 1061](#) lists the various label range allocations for incoming labels.

**Table 30: MPLS Label Range Allocations**

Incoming Label	Status
0 through 15	Reserved by IETF
16 through 1023	Reserved for static LSP assignment
1024 through 9999	Reserved for internal use (for example, CCC labels)
10,000 through 99,999	Reserved for static LSP assignment
100,000 through 1,048,575	Reserved for dynamic label assignment

## Verify That Load Balancing Is Working

**Purpose** After configuring load balancing, check that traffic is load-balanced equally across paths. In this section, the command output reflects the load-balancing configuration of the example network shown in [Figure 108 on page 1068](#). The **clear** commands are used to reset LSP and interface counters to zero so that the values reflect the operation of the load-balancing configuration.

**Action** To verify load balancing across interfaces and LSPs, use the following command on the ingress router:

```
user@host# show configuration
```

To verify load balancing across interfaces and LSPs, use the following commands on a transit router:

```
user@host# show route
user@host# show route forwarding-table
user@host# show mpls lsp statistics
user@host# monitor interface traffic
user@host# clear mpls lsp statistics
user@host# clear interface statistics
```

## Sample Output

The following sample output is for the configuration on ingress router **R1**:

```
user@R1> show configuration | no-more
[...Output truncated...]
routing-options {
  [...Output truncated...]
  forwarding-table {
    export lbpp;
  }
}
[...Output truncated...]
policy-options {
  policy-statement lbpp {
    then {
      load-balance per-packet;
    }
  }
}
```

**Meaning** The sample output for the **show configuration** command on ingress router **R1** shows that load balancing is correctly configured with the **lbpp** policy statement. Also, the **lbpp** policy is exported into the forwarding table at the **[edit routing-options]** hierarchy level.

**Sample Output** The following sample output is from transit router **R2**:

```
user@R2> show route 192.168.0.1 terse

inet.0: 25 destinations, 27 routes (25 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both
A Destination      P Prf  Metric 1   Metric 2   Next hop      AS path
* 192.168.0.1/32    0 10      3           so-0/0/1.0
                                >so-0/0/2.0

[...Output truncated...]
```

**Meaning** The sample output for the **show route** command issued on transit router **R2** shows the two equal-cost paths (**so-0/0/1** and **so-0/0/2**) through the network to the loopback address to **R0 (192.168.0.1)**. Even though the right angle bracket (**>**) usually indicates the active route, in this instance it does not, as shown in the following four sample outputs.

**Sample Output** The following sample output is from transit router R2:

```
user@R2> monitor interface traffic

R2                               Seconds: 65                Time: 11:41:14

Interface  Link  Input packets      (pps)  Output packets      (pps)
so-0/0/0   Up    0                  (0)    0                  (0)
so-0/0/1   Up    126                (0)    164659             (2128)
so-0/0/2   Up    85219              (1004)  164598             (2128)
so-0/0/3   Up    0                  (0)    0                  (0)
fe-0/1/0   Up    328954             (4265)  85475              (1094)
fe-0/1/1   Up    0                  (0)    0                  (0)
fe-0/1/2   Up    0                  (0)    0                  (0)
fe-0/1/3   Up    0                  (0)    0                  (0)
[...Output truncated...]
```

**Meaning** The sample output for the **monitor interface traffic** command issued on transit router R2 shows that output traffic is evenly distributed across the two interfaces **so-0/0/1** and **so-0/0/2**.

**Sample Output** The following sample output is from transit router R2:

```
user@R2> show mpls lsp statistics
Ingress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 5 sessions
To          From          State  Packets  Bytes  LSPname
192.168.0.1 192.168.1.1   Up     87997   17951388 lsp1
192.168.0.1 192.168.1.1   Up     87997   17951388 lsp2
192.168.0.1 192.168.1.1   Up     87997   17951388 lsp3
192.168.0.1 192.168.1.1   Up     87997   17951388 lsp4
192.168.6.1 192.168.0.1   Up      0      0 r0-r1
Total 5 displayed, Up 5, Down 0
```

**Meaning** The sample output for the **show mpls lsp statistics** command issued on transit router R2 shows that output traffic is evenly distributed across the four LSPs configured on ingress router R6.



**Sample Output** The following sample output is from transit router R2:

```
user@R2> show route forwarding-table destination 10.0.90.14
Routing table: inet
Internet:
Destination          Type RtRef Next hop          Type Index NhRef Netif
10.0.90.12/30        user   0                ulst 262144 6
                    ucst 345 5 so-0/0/1.0
                    ucst 339 2 so-0/0/2.0
```

**Meaning** The sample output for the **show route forwarding-table destination** command issued on transit router R2 shows **ulst** in the **Type** field, which indicates that load balancing is working. The two unicast (**ucst**) entries in the **Type** field are the two next hops for the LSPs.

**Sample Output** The following sample output is from transit router R2:

```
user@R2> show route forwarding-table | find mpls
Routing table: mpls
MPLS:
Destination          Type RtRef Next hop          Type Index NhRef Netif
default              perm   0                dscd   38   1
0                    user   0                recv   37   3
1                    user   0                recv   37   3
2                    user   0                recv   37   3
100112               user   0                Swap 100032 so-0/0/1.0
100128               user   0                Swap 100048 so-0/0/1.0
100144               user   0 10.0.12.13         Swap 100096 fe-0/1/0.0
100160               user   0                Swap 100112 so-0/0/2.0
100176               user   0                Swap 100128 so-0/0/2.0
```

**Meaning** The sample output for the **show route forwarding-table | find mpls** command issued on transit router R2 shows the MPLS routing table that contains the labels received and used by this router to forward packets to the next-hop router. This routing table is used mostly on transit routers to route packets to the next router along an LSP. The first three labels in the **Destination** column (Label 0, Label 1, and Label 2) are automatically entered by MPLS when the protocol is enabled. These labels are reserved MPLS labels defined in RFC 3032. Label 0 is the IPv4 explicit null label. Label 1 is the MPLS equivalent of the IP Router Alert label, and Label 2 is the IPv6 explicit null label.

The remaining five labels in the **Destination** column are nonreserved labels that the router uses to forward traffic, and the last column **Netif**, shows the interfaces used to send the labeled traffic. For nonreserved labels, the second **Type** column shows the operation performed on matching packets. In this example, all non-reserved packets are swapped for outgoing packet labels. For example, packets with the label **100112** have their label swapped for **100032** before they are pushed out of interface **so-0/0/1.0**.


## Example: Load-Balanced MPLS Network

When you configure several RSVP LSPs to the same egress router, the LSP with the lowest metric is selected and carries all traffic. If all of the LSPs have the same metric,

one of the LSPs is selected at random and all traffic is forwarded over it. To distribute traffic equally across all LSPs, you can configure load balancing on the ingress or transit routers, depending on the type of load balancing configured.

Figure 108 on page 1068 illustrates an MPLS network with four LSPs configured to the same egress router (R0). Load balancing is configured on ingress router R1. The example network uses Open Shortest Path First (OSPF) as the interior gateway protocol (IGP) with OSPF area 0.0.0.0. An IGP is required for the Constrained Shortest Path First (CSPF) LSP, which is the default for the Junos OS. In addition, the example network uses a policy to create BGP traffic.

**Figure 108: Load-Balancing Network Topology**

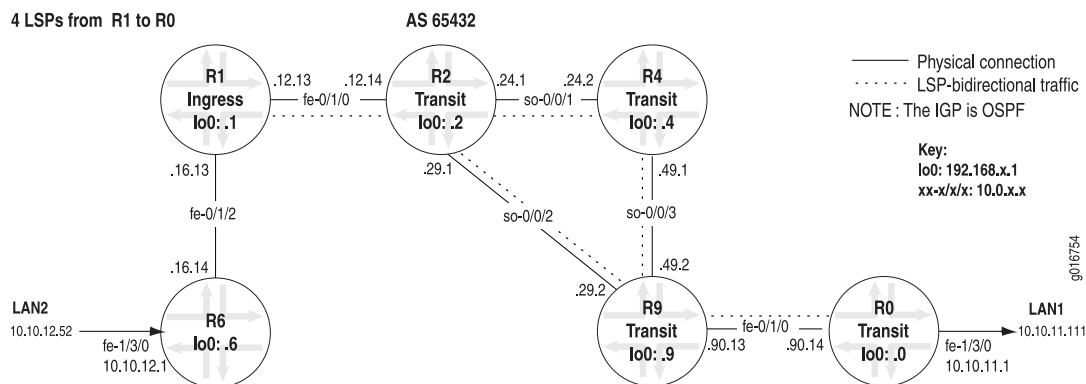

The network shown in Figure 108 on page 1068 consists of the following components:

- A full-mesh interior BGP (IBGP) topology, using AS 65432
- MPLS and RSVP enabled on all routers
- A send-statics policy on routers R1 and R0 that allows a new route to be advertised into the network
- Four unidirectional LSPs between R1 and R0, and one reverse direction LSP between R0 and R1, which allows for bidirectional traffic
- Load balancing configured on ingress router R1

The network shown in Figure 108 on page 1068 is a BGP full-mesh network. Since route reflectors and confederations are not used to propagate BGP learned routes, each router must have a BGP session with every other router running BGP.

For complete configurations for all routers in the example MPLS network, see “Router Configurations for the Load-Balanced MPLS Network” on page 1068.

For a description of the situation before and after load balancing is configured in the network to use all four LSPs to forward traffic, see “Traffic Flows Before Load Balancing” on page 1080.

## Router Configurations for the Load-Balanced MPLS Network

**Purpose** The configurations in this topic are for the six routers in the example network illustrated in Figure 108 on page 1068.

**Action** To display the configuration of a router, use the following Junos OS CLI operational mode command:

```
user@host> show configuration | no-more
```

**Sample Output 1** The following configuration output is for edge router R6.

```
user@R6> show configuration | no-more
[...Output truncated...]
interfaces {
  fe-0/1/2 {
    unit 0 {
      family inet {
        address 10.0.16.14/30;
      }
      family mpls; #MPLS enabled on relevant interfaces
    }
  }
  fe-1/3/0 {
    unit 0 {
      family inet {
        address 10.10.12.1/24;
      }
    }
  }
  fxp0 {
    unit 0 {
      family inet {
        address 192.168.70.148/21;
      }
    }
  }
  lo0 {
    unit 0 {
      family inet {
        address 192.168.6.1/32;
      }
    }
  }
}
routing-options {
  static {
[...Output truncated...]
    router-id 192.168.6.1; #Manually configured RID
    autonomous-system 65432; #Full mesh IBGP
  }
}
protocols {
  rsvp {
    interface fe-0/1/2.0;
    interface fxp0.0 {
      disable;
    }
  }
  mpls {
    interface fe-0/1/2.0;
    interface fxp0.0 {
      disable;
    }
  }
  bgp {
    group internal {
      type internal;
      local-address 192.168.6.1;
      neighbor 192.168.1.1;
    }
  }
}
```

```

        neighbor 192.168.2.1;
        neighbor 192.168.4.1;
        neighbor 192.168.9.1;
        neighbor 192.168.0.1;
    }
}
ospf { #IGP enabled
    traffic-engineering;
    area 0.0.0.0 {
        interface fe-0/1/2.0;
        interface fe-1/3/0.0;
        interface lo0.0 {
            passive; #Ensures protocols do not run over this interface
        }
    }
}
}
}

```

**Sample Output 2** The following configuration output is for ingress router R1.

```

user@R1> show configuration | no-more
[...Output truncated...]
interfaces {
    fe-0/1/0 {
        unit 0 {
            family inet {
                address 10.0.12.13/30;
            }
            family mpls; #MPLS enabled on relevant interfaces
        }
    }
    fe-0/1/2 {
        unit 0 {
            family inet {
                address 10.0.16.13/30;
            }
            family mpls;
        }
    }
    fxp0 {
        unit 0 {
            family inet {
                address 192.168.70.143/21;
            }
        }
    }
    lo0 {
        unit 0 {
            family inet {
                address 192.168.1.1/32;
            }
        }
    }
}
routing-options {
    static {
        [...Output truncated...]
        route 100.100.1.0/24 reject; #Static route for send-statics policy
    }
    router-id 192.168.1.1; #Manually configured RID
}

```

```

autonomous-system 65432; #Full mesh IBGP
forwarding-table {
    export lbpp; #Routes exported to forwarding table
}
}
protocols {
    rsvp {
        interface fe-0/1/0.0;
        interface fe-0/1/2.0;
        interface fxp0.0 {
            disable;
        }
    }
    mpls {
        label-switched-path lsp 1 { #First LSP
            to 192.168.0.1; # Destination of the LSP
            install 10.0.90.14/32 active; # The prefix is installed in the
            primary via-r4; # inet.0 routing table
        }
        label-switched-path lsp2 {
            to 192.168.0.1;
            install 10.0.90.14/32 active;
            primary via-r2;
        }
        label-switched-path lsp3 {
            to 192.168.0.1;
            install 10.0.90.14/32 active;
            primary via-r2;
        }
        label-switched-path lsp4 {
            to 192.168.0.1;
            install 10.0.90.14/32 active;
            primary via-r4;
        }
        path via-r2 { #Primary path to spread traffic across interfaces
            10.0.29.2 loose;
        }
        path via-r4 {
            10.0.24.2 loose;
        }
        interface fe-0/1/0.0;
        interface fe-0/1/2.0;
        interface fxp0.0 {
            disable;
        }
    }
}
bgp {
    export send-statics; #Allows advertising of a new route
    group internal {
        type internal;
        local-address 192.168.1.1;
        neighbor 192.168.2.1;
        neighbor 192.168.4.1;
        neighbor 192.168.9.1;
        neighbor 192.168.6.1;
        neighbor 192.168.0.1;
    }
}
ospf { #IGP enabled
    traffic-engineering;
    area 0.0.0.0 {

```

```

        interface fe-0/1/0.0;
        interface fe-0/1/2.0;
        interface lo0.0 {
            passive; #Ensures protocols do not run over this interface
        }
    }
}
policy-options { #Load balancing policy
    policy-statement lbpp {
        then {
            load-balance per-packet;
        }
    }
    policy-statement send-statics { #Static route policy
        term statics {
            from {
                route-filter 100.100.1.0/24 exact;
            }
            then accept;
        }
    }
}
}

```

**Sample Output 3** The following configuration output is for transit router R2.

```

user@R2> show configuration | no-more
[...Output truncated...]
interfaces {
    so-0/0/1 {
        unit 0 {
            family inet {
                address 10.0.24.1/30;
            }
            family mpls; #MPLS enabled on relevant interfaces
        }
    }
    so-0/0/2 {
        unit 0 {
            family inet {
                address 10.0.29.1/30;
            }
            family mpls;
        }
    }
    fe-0/1/0 {
        unit 0 {
            family inet {
                address 10.0.12.14/30;
            }
            family mpls;
        }
    }
    fxp0 {
        unit 0 {
            family inet {
                address 192.168.70.144/21;
            }
        }
    }
}

```

```

    lo0 {
        unit 0 {
            family inet {
                address 192.168.2.1/32;
            }
        }
    }
}
routing-options {
    static {
        [...Output truncated...]
        router-id 192.168.2.1; #Manually configured RID
        autonomous-system 65432; #Full mesh IBGP
    }
}
protocols {
    rsvp {
        interface so-0/0/1.0;
        interface fe-0/1/0.0;
        interface so-0/0/2.0;
        interface fxp0.0 {
            disable;
        }
    }
    mpls {
        interface fe-0/1/0.0;
        interface so-0/0/1.0;
        interface so-0/0/2.0;
        interface fxp0.0 {
            disable;
        }
    }
    bgp {
        group internal {
            type internal;
            local-address 192.168.2.1;
            neighbor 192.168.1.1;
            neighbor 192.168.4.1;
            neighbor 192.168.9.1;
            neighbor 192.168.6.1;
            neighbor 192.168.0.1;
        }
    }
    ospf { #IGP enabled
        traffic-engineering;
        area 0.0.0.0 {
            interface fe-0/1/0.0;
            interface so-0/0/1.0;
            interface so-0/0/2.0;
            interface lo0.0 {
                passive; #Ensures protocols do not run over this interface
            }
        }
    }
}
}

```

**Sample Output 4** The following configuration output is for transit router R4.

```

user@R4> show configuration | no-more
[...Output truncated...]

```



```

interfaces {
  so-0/0/1 {
    unit 0 {
      family inet {
        address 10.0.24.2/30;
      }
      family mpls; # MPLS enabled on relevant interfaces
    }
  }
  so-0/0/3 {
    unit 0 {
      family inet {
        address 10.0.49.1/30;
      }
      family mpls;
    }
  }
  fxp0 {
    unit 0 {
      family inet {
        address 192.168.70.146/21;
      }
    }
  }
  lo0 {
    unit 0 {
      family inet {
        address 192.168.4.1/32;
      }
    }
  }
}
routing-options {
  static {
    [...Output truncated...]
    router-id 192.168.4.1; #Manually configured RID
    autonomous-system 65432; #Full mesh IBGP
  }
}
protocols {
  rsvp {
    interface so-0/0/1.0;
    interface so-0/0/3.0;
    interface fxp0.0 {
      disable;
    }
  }
  mpls {
    interface so-0/0/1.0;
    interface so-0/0/3.0;
    interface fxp0.0 {
      disable;
    }
  }
  bgp {
    group internal {
      type internal;
      local-address 192.168.4.1;
      neighbor 192.168.1.1;
      neighbor 192.168.2.1;
      neighbor 192.168.9.1;
      neighbor 192.168.6.1;
    }
  }
}

```

```

        neighbor 192.168.0.1;
    }
}
ospf { #IGP enabled
    traffic-engineering;
    area 0.0.0.0 {
        interface so-0/0/1.0;
        interface so-0/0/3.0;
        interface lo0.0 {
            passive; #Ensures protocols do not run over this interface
        }
    }
}
}
}

```

**Sample Output 5** The following configuration output is for transit router **R9**.

```

user@R9> show configuration | no-more
[...Output truncated...]
interfaces {
    so-0/0/2 {
        unit 0 {
            family inet {
                address 10.0.29.2/30;
            }
            family mpls; #MPLS enabled on relevant interfaces
        }
    }
    so-0/0/3 {
        unit 0 {
            family inet {
                address 10.0.49.2/30;
            }
            family mpls;
        }
    }
    fe-0/1/0 {
        unit 0 {
            family inet {
                address 10.0.90.13/30;
            }
            family mpls;
        }
    }
    fxp0 {
        unit 0 {
            family inet {
                address 192.168.69.206/21;
            }
        }
    }
    lo0 {
        unit 0 {
            family inet {
                address 192.168.9.1/32;
            }
        }
    }
}
routing-options {

```

```

static {
    [...Output truncated...]
    router-id 192.168.9.1; #Manually configured RID
    autonomous-system 65432; #Full mesh IBGP
}
protocols {
    rsvp {
        interface so-0/0/2.0;
        interface so-0/0/3.0;
        interface fe-0/1/0.0;
        interface fxp0.0 {
            disable;
        }
    }
    mpls {
        interface so-0/0/2.0;
        interface so-0/0/3.0;
        interface fe-0/1/0.0;
        interface fxp0.0 {
            disable;
        }
    }
    bgp {
        group internal {
            type internal;
            local-address 192.168.9.1;
            neighbor 192.168.1.1;
            neighbor 192.168.2.1;
            neighbor 192.168.4.1;
            neighbor 192.168.0.1;
            neighbor 192.168.6.1;
        }
    }
    ospf { #IGP enabled
        traffic-engineering;
        area 0.0.0.0 {
            interface so-0/0/2.0;
            interface so-0/0/3.0;
            interface fe-0/1/0.0;
            interface lo0.0 {
                passive; #Ensures protocols do not run over this interface
            }
        }
    }
}
}

```

**Sample Output 6** The following configuration output is for egress router R0.

```

user@R0> show configuration | no-more
[...Output truncated...]
interfaces {
    fe-0/1/0 {
        unit 0 {
            family inet {
                address 10.0.90.14/30;
            }
            family mpls; #MPLS enabled on relevant interfaces
        }
    }
    fe-1/3/0 {

```

```

        unit 0 {
            family inet {
                address 10.10.11.1/24;
            }
        }
    }
    fxp0 {
        unit 0 {
            family inet {
                address 192.168.69.207/21;
            }
        }
    }
    lo0 {
        unit 0 {
            family inet {
                address 192.168.0.1/32;
            }
        }
    }
}
routing-options {
    static {
        [...Output truncated...]
        route 100.100.10.0/24 reject; #Static route for send-statics policy
    }
    router-id 192.168.0.1; #Manually configured RID
    autonomous-system 65432; #Full mesh IBGP
}
protocols {
    rsvp {
        interface fe-0/1/0.0;
        interface fe-1/3/0.0;
        interface fxp0.0 {
            disable;
        }
    }
    mpls {
        label-switched-path r0-r6 {
            to 192.168.6.1;
        }
        interface fe-0/1/0.0;
        interface fe-1/3/0.0;
        interface fxp0.0 {
            disable;
        }
    }
    bgp {
        group internal {
            type internal;
            local-address 192.168.0.1;
            export send-statics; #Allows advertising of a new route
            neighbor 192.168.9.1;
            neighbor 192.168.6.1;
            neighbor 192.168.1.1;
            neighbor 192.168.2.1;
            neighbor 192.168.4.1;
        }
    }
    ospf { #IGP enabled
        traffic-engineering;
        area 0.0.0.0 {

```

```

        interface fe-0/1/0.0;
        interface fe-1/3/0.0;
        interface lo0.0 {
            passive; #Ensures protocols do not run over this interface
        }
    }
}
policy-options {
    policy-statement send-statics {
        term statics {
            from {
                route-filter 100.100.10.0/24 exact;
            }
            then accept;
        }
    }
}

```

**Meaning** Sample Outputs 1 through 6 show the base interfaces, routing options, protocols, and policy options configurations for all six routers in the example network illustrated in [Figure 108 on page 1068](#).

All routers in the network have MPLS, RSVP, and BGP enabled. OSPF is configured as the IGP, and relevant interfaces have basic IP information and MPLS support.

In addition, all routers have the router ID (RID) configured manually at the **[edit routing-options]** hierarchy level to avoid duplicate RID problems. The **passive** statement is included in the OSPF configuration to ensure that protocols are not run over the loopback (**lo0**) interface and that the loopback (**lo0**) interface is advertised correctly throughout the network.

Sample Outputs 1, 3, 4, and 5 for **R6**, **R2**, **R4**, and **R9** show the base configuration for transit label-switched routers. The base configuration includes all interfaces enabled for MPLS, the RID manually configured, and the relevant protocols (RSVP, MPLS, BGP, and OSPF).

Sample Output 2 from ingress router **R1** shows the base configuration plus four LSPs (**lsp1** through **lsp4**) configured to **R0**. The four LSPs are configured with different primary paths that specify a loose hop through **R4** for **lsp1** and **lsp4**, and through **R2** for **lsp2** and **lsp3**.

To create traffic, **R1** has a static route (**100.100.1.0/24**) configured at the **[edit routing-options static route]** hierarchy level. The prefix is included in the send-statics policy at the **[edit policy-options send statics]** hierarchy level so the routes can become BGP routes.

In addition, on the ingress router **R1**, load balancing is configured using the **per-packet** option, and the policy is exported at the **[edit routing-options forwarding-table]** hierarchy level.

Sample Output 6 from egress router **R0** shows one LSP (**r0-r6**) to **R6** used to create bidirectional traffic. OSPF requires bidirectional LSP reachability before it will advertise the LSP into the IGP. Although the LSP is advertised into the IGP, no hello messages or

routing updates occur over the LSP—only user traffic is sent over the LSP. The router uses its local copy of the IGP database to verify bidirectional reachability.

In addition, R0 has a static route (100.100.10.0/24) configured at the **[edit routing-options static route]** hierarchy level. The prefix is included in the send-statics policy at the **[edit policy-options send statics]** hierarchy level so the routes can become BGP routes.

---

## Traffic Flows Before Load Balancing

---

**Purpose** The following sample output illustrates the details to look for when you issue different **show** commands to check if traffic is balanced. The following output is before load balancing is configured and is taken from transit router R2 in the network shown in [Figure 108 on page 1068](#).

**Action** To check the distribution of traffic across interfaces and LSPs, use the following CLI operational mode commands:

```
user@host> show route | find mpls
user@host> monitor interface traffic
user@host> show mpls lsp statistics
```

**Sample Output 1** user@R2> show route | find mpls

```

mpls.0: 8 destinations, 8 routes (8 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

0          *[MPLS/0] 1d 00:12:08, metric 1
            Receive
1          *[MPLS/0] 1d 00:12:08, metric 1
            Receive
2          *[MPLS/0] 1d 00:12:08, metric 1
            Receive
100112     *[RSVP/7] 13:10:36, metric 1
            > via so-0/0/1.0, label-switched-path lsp1
100128     *[RSVP/7] 13:01:08, metric 1
            > via so-0/0/1.0, label-switched-path lsp4
100144     *[RSVP/7] 00:26:49, metric 1
            > to 10.0.12.13 via fe-0/1/0.0, label-switched-path r0-r6
100160     *[RSVP/7] 00:23:25, metric 1
            > via so-0/0/2.0, label-switched-path lsp2
100176     *[RSVP/7] 00:23:25, metric 1
            > via so-0/0/2.0, label-switched-path lsp3

```

**Sample Output 2** user@R2> monitor interface traffic

```

R2                      Seconds: 89                      Time: 14:33:09

Interface  Link  Input packets      (pps)  Output packets      (pps)
so-0/0/0   Up    0                  (0)    0                  (0)
so-0/0/1   Up    90 (1)  91 (1)            0                  (0)
so-0/0/2   Up    118 (1) 100122 (0)        0                  (0)
so-0/0/3   Up    0          (0)    0                  (0)
fe-0/1/0   Up    100119      (0)    115                 (0)
fe-0/1/1   Up    0          (0)    0                  (0)
fe-0/1/2   Up    0          (0)    0                  (0)
fe-0/1/3   Up    0          (0)    0                  (0)
[...Output truncated...]

```

**Sample Output 3** user@R2> show mpls lsp statistics

```

Ingress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 5 sessions
To          From          State  Packets  Bytes  LSPname
192.168.0.1 192.168.6.1 Up      0        0  lsp2
192.168.0.1 192.168.6.1 Up 112026 22853304 lsp1
192.168.0.1 192.168.6.1 Up      0        0  lsp3
192.168.0.1 192.168.6.1 Up      0        0  lsp4
192.168.6.1 192.168.0.1 Up      0        0  r0-r6
Total 5 displayed, Up 5, Down 0

```

**Meaning** Sample Outputs 1 through 3 from transit router R2 show that traffic is not balanced across LSPs or interfaces.

Sample Output 1 for the **show route** command shows that all LSPs have the same metric (1) to the destination, even though they are traversing different interfaces. **lsp1** and **lsp4** are using **so-0/0/1**, while **lsp2** and **lsp3** are using **so-0/0/2**.

Sample Output 2 for the **monitor interface traffic** command shows that traffic is not evenly balanced across interfaces **so-0/0/1** and **so-0/0/2**. Almost all traffic is going out **so-0/0/2**.

Sample Output 3 for the **show mpls lsp statistics** command shows that traffic across LSPs is not balanced. All traffic is going over **lsp1**.

**Related Topics** For additional information about MPLS fast reroute and MPLS protection methods, see the following:

- *Junos Feature Guide*
- *Junos MPLS Applications Configuration Guide*
- Semeria, Chuck. *RSVP Signaling Extensions for MPLS Traffic Engineering*. White paper. 2002
- Semeria, Chuck. *IP Dependability: Network Link and Node Protection*. White paper. 2002
- RFC 4090, *Fast Reroute Extensions to RSVP-TE for LSP Tunnels*

The Junos OS uses the load-balancing function across different protocols and features. For information about other types of load balancing, see the following:

- Option: Optimizing VPLS Traffic Flows, *Junos Feature Guide*
- Protocol-Independent Load Balancing for Layer 3 VPNs, *Junos VPNs Configuration Guide*
- Load Balancing Among Multiple Monitoring Interfaces, *Junos Services Interfaces Configuration Guide*

---

## Verify the Operation of Uneven Bandwidth Load Balancing

**Purpose** When a router is performing unequal-cost load balancing between LSPs paths, the **show route detail** command displays a balance field associated with each next hop being used.

**Action** To verify that an RSVP LSP is unevenly load-balanced, use the following Junos OS CLI operational mode commands:

```
user@host> show route protocol rsvp detail
user@host> show mpls lsp statistics
```

### Sample Output

```
user@R1> show route protocol rsvp detail

inet.0: 25 destinations, 25 routes (25 active, 0 holddown, 0 hidden)
10.0.90.14/32 (1 entry, 1 announced)
  State: <FlashAll>
    *RSVP   Preference: 7
```



```

Next-hop reference count: 7
Next hop: 10.0.12.14 via fe-0/1/0.0 weight 0x1 balance 10%
  Label-switched-path lsp1
  Label operation: Push 100768
Next hop: 10.0.12.14 via fe-0/1/0.0 weight 0x1 balance 20%
  Label-switched-path lsp2
  Label operation: Push 100736
Next hop: 10.0.12.14 via fe-0/1/0.0 weight 0x1 balance 30%,
selected
  Label-switched-path lsp3
  Label operation: Push 100752
Next hop: 10.0.12.14 via fe-0/1/0.0 weight 0x1 balance 40%
  Label-switched-path lsp4
  Label operation: Push 100784
State: <Active Int>
Local AS: 65432
Age: 8:03 Metric: 4
Task: RSVP
Announcement bits (2): 0-KRT 4-Resolve tree 1
AS path: I
inet.3: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
192.168.0.1/32 (1 entry, 1 announced)
State: <FlashAll>
*RSVP Preference: 7
Next-hop reference count: 7
Next hop: 10.0.12.14 via fe-0/1/0.0 weight 0x1 balance 10%
  Label-switched-path lsp1
  Label operation: Push 100768
Next hop: 10.0.12.14 via fe-0/1/0.0 weight 0x1 balance 20%
  Label-switched-path lsp2
  Label operation: Push 100736
Next hop: 10.0.12.14 via fe-0/1/0.0 weight 0x1 balance 30%
  Label-switched-path lsp3
  Label operation: Push 100752
Next hop: 10.0.12.14 via fe-0/1/0.0 weight 0x1 balance 40%,
selected
  Label-switched-path lsp4
  Label operation: Push 100784
State: <Active Int>
Local AS: 65432
Age: 8:03 Metric: 4
Task: RSVP
Announcement bits (1): 1-Resolve tree 1
AS path: I

```

```
user@R1> show mpls lsp statistics
```

```
Ingress LSP: 4 sessions
```

To	From	State	Packets	Bytes	LSPname
192.168.0.1	192.168.1.1	Up	10067	845628	lsp1
192.168.0.1	192.168.1.1	Up	20026	1682184	lsp2
192.168.0.1	192.168.1.1	Up	29796	2502864	lsp3
192.168.0.1	192.168.1.1	Up	40111	3369324	lsp4

```
Total 4 displayed, Up 4, Down 0
```

```
Egress LSP: 1 sessions
```

To	From	State	Packets	Bytes	LSPname
192.168.1.1	192.168.0.1	Up	NA	NA	r0-r1

```
Total 1 displayed, Up 1, Down 0
```

```
Transit LSP: 0 sessions
```

```
Total 0 displayed, Up 0, Down 0
```

**Meaning** The sample output from ingress router **R1** shows that traffic is distributed according to the LSP bandwidth configuration, as indicated by the **Balance: xx%** field. For example, **lsp1** has 10 Mbps of bandwidth configured, as reflected in the **Balance: 10%** field.

## Checklist for Collecting Crash Data

**Problem** **Description:** [Table 31 on page 1084](#) provides links commands for collection crash data.

**Table 31: Checklist for Collecting Crash Data**

Tasks	Command or Action
<b>“Understand Crash Data Collection” on page 1085</b>	
<b>“Collect Crash Data for a Routing Engine Kernel” on page 1086</b>	
1. <a href="#">Check the Routing Engine Core Files on page 1086</a>	<code>file list detail /var/crash</code>
2. <a href="#">Clear the NVRAM Contents on page 1102</a>	
a. <a href="#">List the Core Files on page 1087</a>	<pre>start shell su root password cd /var/crash ls -l</pre>
b. <a href="#">Compress the vmcore File on page 1087</a>	<pre>gzip vmcore.number</pre> <p>To unzip the vmcore file:</p> <pre>gzip -d vmcore.number.gz</pre>
c. <a href="#">Log Software Version Information on page 1090</a>	<code>show version</code>
d. <a href="#">Open a Case with JTAC on page 1089</a>	Send an e-mail to <a href="mailto:support@juniper.net">support@juniper.net</a> .
<b>“Collect Crash Data for Routing Engine Daemons” on page 1091</b>	
1. <a href="#">Check for Daemon Core Files on page 1091</a>	<code>file list detail /var/tmp</code>
2. <a href="#">Collect and Send Routing Engine Crash Data to JTAC on page 1095</a>	
a. <a href="#">List the Daemon Core Files on page 1093</a>	<pre>start shell su root password cd /var/tmp ls -l</pre>
b. <a href="#">Compress the Daemon Core Files on page 1093</a>	<code>gzip daemon-executable-name.core.number</code>
c. <a href="#">Log Software Version Information on page 1090</a>	<code>show version</code>
d. <a href="#">Open a Case with JTAC on page 1089</a>	Send an e-mail to <a href="mailto:support@juniper.net">support@juniper.net</a> .

Table 31: Checklist for Collecting Crash Data (*continued*)

Tasks	Command or Action
<b>“Collect Crash Data for the Packet Forwarding Engine Microkernel” on page 1098</b>	
1. Display the Crash Stack Traceback and Registration Information on page 1099	<b>start shell</b> <b>su</b> <i>root password</i> <b>vtty <i>component-executable-name</i></b> <b>show nvram</b> <b>show syslog messages</b>
2. Clear the NVRAM Contents on page 1102	<b>start shell</b> <b>su</b> <i>root password</i> <b>vtty <i>component-executable-name</i></b> <b>clear nvram</b>
3. Check Packet Forwarding Engine Microkernel Core Files on page 1103	<b>file list detail /var/crash</b>
4. Collect and Send Routing Engine Crash Data to JTAC on page 1095	
a. List the Core Files Generated by the Crash on page 1103	<b>start shell</b> <b>su</b> <i>root password</i> <b>cd /var/crash</b> <b>ls -l</b>
b. Compress the Core Files on page 1104	<b>gzip <i>filename</i></b>
c. Log Software Version Information on page 1090	<b>show version</b>
d. Open a Case with JTAC on page 1089	Send an e-mail to <b>support@juniper.net</b> .


## Understand Crash Data Collection

A crash can occur in one of three areas in the Junos OS architecture (see [Figure 109 on page 1086](#)):

- Routing Engine kernel
- Routing Engine daemons (processes)
- Packet Forwarding Engine microkernel

Figure 109: Three Areas Where a Software Crash Can Occur

## Software Architecture

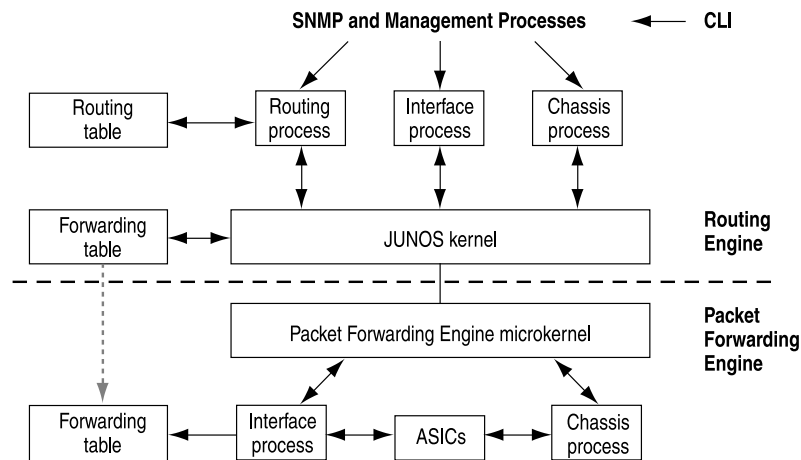

## Collect Crash Data for a Routing Engine Kernel

**Purpose** When a Routing Engine kernel crashes, the Routing Engine automatically reboots. By default, the Juniper Networks router does not attempt to dump a core if the Routing Engine kernel crashes. As a result, there is no crash data on the router to help investigate the crash. In addition, the system log messages are similar to those generated when the router is powered down and restarted, so you cannot tell if the Routing Engine restart was caused by a kernel crash or a normal power restart.

To collect crash data for a Routing Engine kernel crash, follow these steps:

1. [Check the Routing Engine Core Files on page 1086](#)
2. [List the Core Files on page 1087](#)
3. [Compress the vmcore File on page 1087](#)
4. [Log Software Version Information on page 1088](#)
5. [Open a Case with JTAC on page 1089](#)

## Check the Routing Engine Core Files

**Purpose** If you observe disruption to the Routing Engine kernel, check the `/var/crash` directory for any core files created around the time of the crash.

**Action** To check the `/var/crash` directory, use the following Junos OS command-line interface (CLI) operational mode command:

```
user@host> file list detail /var/crash
```

## Sample Output

```
user@host> file list detail /var/crash
total 1577912
drwxr-x---  2 root  wheel   512 Sep  9 11:59 ./
drwxr-xr-x 22 root  wheel   512 Oct 29 2001 ../
-rw-r--r--  1 root  wheel    2 Jul 20 01:11 bounds
```

```
-rw-r--r-- 1 root wheel 2166913 Jul 20 01:11 kernel.0
-rw-r--r-- 1 root wheel 5 Feb 15 2002 minfree
-rw----- 1 root wheel 805306368 Jul 20 01:11 vmcore.0
```

**Meaning** The sample output lists the contents of the `/var/crash/` directory. Check the date and timestamp for any kernel core files created around the time of the crash. In the example above, two core files are listed: **kernel.0** and **vmcore.0**.

## List the Core Files

**Purpose** To list the core files, follow these steps:

**Action** 1. Exit from the CLI environment and create a UNIX-level shell by entering the **start shell** command:

```
user@host> start shell
```

2. Type **su** and the root password when prompted. You are now in the shell and the prompt is % instead of >, for example:

```
% su
Password: ****
```

3. Change the directory to `/var/crash` and type **ls -l**, for example:

```
root@host% cd /var/crash
root@host% ls -l
```

4. Look for any core files created around the time of the crash.

## Sample Output

```
user@host> start shell
% su
Password: ****
root@host% cd /var/crash
root@host% ls -l
total 1577908
-rw-r--r-- 1 root wheel 2 Jul 20 01:11 bounds
-rw-r--r-- 1 root wheel 2166913 Jul 20 01:11 kernel.0
-rw-r--r-- 1 root wheel 5 Feb 15 2002 minfree
-rw----- 1 root wheel 805306368 Jul 20 01:11 vmcore.0
```

**Meaning** The sample output lists the contents of the `/var/crash` directory and shows the current core files **kernel.0** and **vm.core.0**.

## Compress the vmcore File

**Purpose** The gzip compression utility is used to compress files. Compress the **vmcore** file if it is larger than 50 MB. Files created using the **gzip** command end with the file extension **.gz**.



**NOTE:** Use lowercase for the **gzip** command when you are in the shell.

**Action** To compress the **vmcore** file with gzip, use the following command from the shell:

```
root@host% gzip vmcore .number
```

To unzip the **vmcore** file with gzip, use the following command from the shell:

```
root@host% gzip -d vmcore .number.gz
```

**Meaning** The contents of the **vmcore** file are compressed into a single compressed file named **vmcore.number.gz**. The **gzip** command preserves the mode, ownership, and timestamps of files when compressing or decompressing them.

## Log Software Version Information

**Purpose** To log the Junos OS version information.

**Action** To log the Junos OS version information, use the following Junos OS CLI operational mode command:

```
user@host> show version
```

### Sample Output

```
user@host> show version
Hostname: host
Model: m10
JUNOS Base OS boot [5.0R5]
JUNOS Base OS Software Suite [5.0R5]
JUNOS Kernel Software Suite [5.0R5]
JUNOS Routing Software Suite [5.0R5]
JUNOS Packet Forwarding Engine Support [5.0R5]
JUNOS Crypto Software Suite [5.0R5]
JUNOS Online Documentation [5.0R5]
KERNEL 5.0R5 #0 built by builder on 2002-03-02 05:10:28 UTC
MGD release 5.0R5 built by builder on 2002-03-02 04:45:32 UTC
CLI release 5.0R5 built by builder on 2002-03-02 04:44:22 UTC
CHASSISD release 5.0R5 built by builder on 2002-03-02 04:43:37 UTC
DCD release 5.0R5 built by builder on 2002-03-02 04:42:47 UTC
RPD release 5.0R5 built by builder on 2002-03-02 04:46:17 UTC
SNMPD release 5.0R5 built by builder on 2002-03-02 04:52:26 UTC
MIB2D release 5.0R5 built by builder on 2002-03-02 04:45:37 UTC
APSD release 5.0R5 built by builder on 2002-03-02 04:43:31 UTC
VRRPD release 5.0R5 built by builder on 2002-03-02 04:52:34 UTC
ALARMD release 5.0R5 built by builder on 2002-03-02 04:43:24 UTC
PFED release 5.0R5 built by builder on 2002-03-02 04:46:06 UTC
CRAFTD release 5.0R5 built by builder on 2002-03-02 04:44:30 UTC
SAMPLED release 5.0R5 built by builder on 2002-03-02 04:52:20 UTC
ILMID release 5.0R5 built by builder on 2002-03-02 04:45:21 UTC
BPRELAYD release 5.0R5 built by builder on 2002-03-02 04:42:41 UTC
RMOPD release 5.0R5 built by builder on 2002-03-02 04:46:11 UTC
jkernel-dd release 5.0R5 built by builder on 2002-03-02 04:41:07 UTC
jroute-dd release 5.0R5 built by builder on 2002-03-02 04:41:21 UTC
jdocs-dd release 5.0R5 built by builder on 2002-03-02 04:39:11 UTC
```

**Meaning** The sample output shows the hostname, router model, and the different Junos OS packages, processes, and documents.

## Open a Case with JTAC

**Problem Description:** To open a case with JTAC, call one of the Support phone numbers or create a case via [Case Manager](#).

## Check the Routing Engine Core Files

**Purpose** If you observe disruption to the Routing Engine kernel, check the `/var/crash` directory for any core files created around the time of the crash.

**Action** To check the `/var/crash` directory, use the following Junos OS command-line interface (CLI) operational mode command:

```
user@host> file list detail /var/crash
```

## Sample Output

```
user@host> file list detail /var/crash
total 1577912
drwxr-x---  2 root  wheel      512 Sep  9 11:59 ./
drwxr-xr-x 22 root  wheel      512 Oct 29 2001 ../
-rw-r--r--  1 root  wheel        2 Jul 20 01:11 bounds
-rw-r--r--  1 root  wheel    2166913 Jul 20 01:11 kernel.0
-rw-r--r--  1 root  wheel         5 Feb 15 2002 minfree
-rw-----  1 root  wheel   805306368 Jul 20 01:11 vmcore.0
```

**Meaning** The sample output lists the contents of the `/var/crash/` directory. Check the date and timestamp for any kernel core files created around the time of the crash. In the example above, two core files are listed: `kernel.0` and `vmcore.0`.

## List the Core Files

**Purpose** To list the core files, follow these steps:

**Action** 1. Exit from the CLI environment and create a UNIX-level shell by entering the `start shell` command:

```
user@host> start shell
```

2. Type `su` and the root password when prompted. You are now in the shell and the prompt is `%` instead of `>`, for example:

```
% su
Password: ****
```

3. Change the directory to `/var/crash` and type `ls -l`, for example:

```
root@host% cd /var/crash
root@host% ls -l
```

4. Look for any core files created around the time of the crash.

## Sample Output

```
user@host> start shell
% su
Password: ****
root@host% cd /var/crash
root@host% ls -l
total 1577908
-rw-r--r-- 1 root wheel 2 Jul 20 01:11 bounds
-rw-r--r-- 1 root wheel 2166913 Jul 20 01:11 kernel.0
-rw-r--r-- 1 root wheel 5 Feb 15 2002 minfree
-rw----- 1 root wheel 805306368 Jul 20 01:11 vmcore.0
```

**Meaning** The sample output lists the contents of the `/var/crash` directory and shows the current core files `kernel.0` and `vmcore.0`.

---

## Compress the vmcore File

**Purpose** The gzip compression utility is used to compress files. Compress the `vmcore` file if it is larger than 50 MB. Files created using the `gzip` command end with the file extension `.gz`.



**NOTE:** Use lowercase for the `gzip` command when you are in the shell.

**Action** To compress the `vmcore` file with gzip, use the following command from the shell:

```
root@host% gzip vmcore .number
```

To unzip the `vmcore` file with gzip, use the following command from the shell:

```
root@host% gzip -d vmcore .number.gz
```

**Meaning** The contents of the `vmcore` file are compressed into a single compressed file named `vmcore.number.gz`. The `gzip` command preserves the mode, ownership, and timestamps of files when compressing or decompressing them.

---

## Log Software Version Information

**Purpose** To log the JUNOS software version information.

**Action** To log the JUNOS software version information, use the following JUNOS CLI operational mode command:

```
user@host> show version
```



**Sample Output**    `user@host> show version`

```

Hostname: host
Model: m10
JUNOS Base OS boot [5.0R5]
JUNOS Base OS Software Suite [5.0R5]
JUNOS Kernel Software Suite [5.0R5]
JUNOS Routing Software Suite [5.0R5]
JUNOS Packet Forwarding Engine Support [5.0R5]
JUNOS Crypto Software Suite [5.0R5]
JUNOS Online Documentation [5.0R5]
KERNEL 5.0R5 #0 built by builder on 2002-03-02 05:10:28 UTC
MGD release 5.0R5 built by builder on 2002-03-02 04:45:32 UTC
CLI release 5.0R5 built by builder on 2002-03-02 04:44:22 UTC
CHASSISD release 5.0R5 built by builder on 2002-03-02 04:43:37 UTC
DCD release 5.0R5 built by builder on 2002-03-02 04:42:47 UTC
RPD release 5.0R5 built by builder on 2002-03-02 04:46:17 UTC
SNMPD release 5.0R5 built by builder on 2002-03-02 04:52:26 UTC
MIB2D release 5.0R5 built by builder on 2002-03-02 04:45:37 UTC
APSD release 5.0R5 built by builder on 2002-03-02 04:43:31 UTC
VRRPD release 5.0R5 built by builder on 2002-03-02 04:52:34 UTC
ALARMD release 5.0R5 built by builder on 2002-03-02 04:43:24 UTC
PFED release 5.0R5 built by builder on 2002-03-02 04:46:06 UTC
CRAFTD release 5.0R5 built by builder on 2002-03-02 04:44:30 UTC
SAMPLED release 5.0R5 built by builder on 2002-03-02 04:52:20 UTC
ILMID release 5.0R5 built by builder on 2002-03-02 04:45:21 UTC
BPRELAYD release 5.0R5 built by builder on 2002-03-02 04:42:41 UTC
RMOPD release 5.0R5 built by builder on 2002-03-02 04:46:11 UTC
jkernel-dd release 5.0R5 built by builder on 2002-03-02 04:41:07 UTC
jroute-dd release 5.0R5 built by builder on 2002-03-02 04:41:21 UTC
jdocs-dd release 5.0R5 built by builder on 2002-03-02 04:39:11 UTC

```

**Meaning**    The sample output shows the hostname, router model, and the different JUNOS software packages, processes, and documents.

## Open a Case with JTAC

**Problem**    **Description:** To open a case with JTAC, call one of the Support phone numbers or create a case via [Case Manager](#).

## Collect Crash Data for Routing Engine Daemons

To collect crash data for Routing Engine daemons, follow these steps:

1. [Check for Daemon Core Files on page 1091](#)
2. [List the Daemon Core Files on page 1093](#)
3. [Compress the Daemon Core Files on page 1093](#)
4. [Log Software Version Information on page 1094](#)
5. [Open a Case with JTAC on page 1095](#)

## Check for Daemon Core Files

**Purpose**    If you observe disruption to routing protocol operation, system log operation, Simple Network Management Protocol (SNMP) operation, or other operations handled by

Routing Engine daemons, check the **/var/tmp** directory for any daemon core files created around the time of the crash.

**Action** To check the **/var/tmp** directory, use the following Junos OS CLI operational mode command:

```
user@host> file list detail /var/tmp
```

## Sample Output

```
user@host> file list detail /var/tmp
total 1292622
drwxrwxrwt  3 root  field      512 Dec 31 06:48 ./
drwxr-xr-x 21 root  field      512 Mar  5 1999 ../
-rw-rw----  1 root  field 119713792 Nov 17 21:58 rpd.core.0
-rw-rw----  1 root  field 120782848 Nov 17 22:12 rpd.core.1
```

**Meaning** The sample output lists the contents of the **/var/tmp/** directory. Look for any daemon core files created around the time of the crash. In the example above, two core files are listed: **rpd.core.0** and **rpd.core.1**.

[Table 32 on page 1092](#) lists the major Routing Engine daemons supported by the Junos OS.

**Table 32: Major Routing Engine Daemons**

Executable Name	Definition	Description
rpd	Routing protocol daemon	Provides routing protocol intelligence (Border Gateway Protocol [BGP], Intermediate System-to-Intermediate System [ISIS], Open Shortest Path First [OSPF], and so on).
dcd	Device control daemon	Manages all interface devices.
mgd	Management daemon	Provides user configuration access to the system. The CLI is a client of <b>mgd</b> .
snmpd	Simple Network Management Protocol daemon	Provides remote network management information to the network management system.
chassisd	Chassis daemon	Monitors and manages Flexible PIC Concentrator (FPC) slots and other environmental components.
alarmd	Alarm daemon	Manages system alarm notifications.
apsd	Automatic protection switching daemon	Provides SONET Automatic Protection Switching (APS) functionality.
sampled	Traffic sampling daemon	Gathers traffic sampling information.
vrrpd	Virtual Router Redundancy Protocol daemon	Provides Virtual Router Redundancy Protocol (VRRP) functionality.
syslogd	System log daemon	Manages the router system logging operation.

Table 32: Major Routing Engine Daemons (*continued*)

Executable Name	Definition	Description
mib2d	MIB2 daemon	Management Information Base (MIB) subagent for MIB2.

## List the Daemon Core Files

**Purpose** To list the daemon core files.

**Action** To list the daemon core files, follow these steps:

1. Exit from the CLI environment and create a UNIX-level shell by entering the **start shell** command:

```
user@host> start shell
```

2. Type **su** and the root password when prompted. You are now in the shell and the prompt is **%** instead of **>**, for example:

```
% su
Password: ****
```

3. Change the directory to **/var/tmp** and type **ls -l**, for example:

```
root@host% cd /var/tmp
root@host% ls -l
```

4. Look for any daemon core files created around the time of the crash.

## Sample Output

```
user@host> start shell
% su
Password: ****
root@host% cd /var/tmp
root@host% ls -l
total 1292618
-rw-rw---- 1 root field 119713792 Nov 17 21:58 rpd.core.0
-rw-rw---- 1 root field 120782848 Nov 17 22:12 rpd.core.1
```

**Meaning** The sample output lists the contents of the **/var/tmp** directory and shows the current core file (**rpdc.core.1**) and one previous core file (**rpdc.core.0**) for the routing protocol daemon (**rpdc**). For each daemon, you can have a total of five core files in the **/var/tmp** directory: the current core file and the four previous core files numbered 0 through 4 (from oldest to newest).

## Compress the Daemon Core Files

**Purpose** The gzip compression utility is used to compress the files if they are large. Files created using the **gzip** command end with the file extension **.gz**. Compress the core file if it is over 50 MB.



**NOTE:** Use lowercase for the `gzip` command when you are in the shell.

You only need to compress the daemon core files when the tarball file is not created.

**Action** To compress the daemon core file with `gzip`, use the following command from the shell:

```
root@host% gzip daemon-executable-name.core.number
```

**Sample Output**

```
root@host% gzip rpd.core.0
gzip rpd.core.0
```

**Meaning** The contents of the daemon core file are compressed into a single compressed file named `daemon.number.gz`. The `gzip` command preserves the mode, ownership, and timestamps of files when compressing or decompressing them.

## Log Software Version Information

**Purpose** To log the Junos OS version information.

**Action** To log the Junos OS version information, use the following Junos OS CLI operational mode command:

```
user@host> show version
```

**Sample Output**

```

user@host> show version
Hostname: host
Model: m10
JUNOS Base OS boot [5.0R5]
JUNOS Base OS Software Suite [5.0R5]
JUNOS Kernel Software Suite [5.0R5]
JUNOS Routing Software Suite [5.0R5]
JUNOS Packet Forwarding Engine Support [5.0R5]
JUNOS Crypto Software Suite [5.0R5]
JUNOS Online Documentation [5.0R5]
KERNEL 5.0R5 #0 built by builder on 2002-03-02 05:10:28 UTC
MGD release 5.0R5 built by builder on 2002-03-02 04:45:32 UTC
CLI release 5.0R5 built by builder on 2002-03-02 04:44:22 UTC
CHASSISD release 5.0R5 built by builder on 2002-03-02 04:43:37 UTC
DCD release 5.0R5 built by builder on 2002-03-02 04:42:47 UTC
RPD release 5.0R5 built by builder on 2002-03-02 04:46:17 UTC
SNMPD release 5.0R5 built by builder on 2002-03-02 04:52:26 UTC
MIB2D release 5.0R5 built by builder on 2002-03-02 04:45:37 UTC
APSD release 5.0R5 built by builder on 2002-03-02 04:43:31 UTC
VRRPD release 5.0R5 built by builder on 2002-03-02 04:52:34 UTC
ALARMD release 5.0R5 built by builder on 2002-03-02 04:43:24 UTC
PFED release 5.0R5 built by builder on 2002-03-02 04:46:06 UTC
CRAFTD release 5.0R5 built by builder on 2002-03-02 04:44:30 UTC
SAMPLED release 5.0R5 built by builder on 2002-03-02 04:52:20 UTC
ILMID release 5.0R5 built by builder on 2002-03-02 04:45:21 UTC
BPRELAYD release 5.0R5 built by builder on 2002-03-02 04:42:41 UTC
RMOPD release 5.0R5 built by builder on 2002-03-02 04:46:11 UTC
jkernel-dd release 5.0R5 built by builder on 2002-03-02 04:41:07 UTC
jroute-dd release 5.0R5 built by builder on 2002-03-02 04:41:21 UTC
jdocs-dd release 5.0R5 built by builder on 2002-03-02 04:39:11 UTC

```

**Meaning** The sample output shows the hostname, router model, and the different Junos OS packages, processes, and documents.

## Open a Case with JTAC

**Problem Description:** To open a case with JTAC, call one of the Support phone numbers or create a case via [Case Manager](#).

## Collect and Send Routing Engine Crash Data to JTAC

**Problem Description:** If a Routing Engine kernel crash occurs on your router, collect the following data for JTAC evaluation and instruction.

**Solution** To collect and send Routing Engine crash data to JTAC, follow these steps:

1. [List the Core Files on page 1087](#)
2. [Compress the vmcore File on page 1087](#)
3. [Log Software Version Information on page 1090](#)
4. [Open a Case with JTAC on page 1089](#)

- Related Documentation**
- [Understand Crash Data Collection on page 1085](#)
  - [Checklist for Collecting Crash Data on page 1084](#)

## Check for Daemon Core Files

**Purpose** If you observe disruption to routing protocol operation, system log operation, Simple Network Management Protocol (SNMP) operation, or other operations handled by Routing Engine daemons, check the **/var/tmp** directory for any daemon core files created around the time of the crash.

**Action** To check the **/var/tmp** directory, use the following Junos OS CLI operational mode command:

```
user@host> file list detail /var/tmp
```

## Sample Output

```
user@host> file list detail /var/tmp
total 1292622
drwxrwxrwt  3 root  field      512 Dec 31 06:48 ./
drwxr-xr-x 21 root  field      512 Mar  5 1999 ../
-rw-rw----  1 root  field 119713792 Nov 17 21:58 rpd.core.0
-rw-rw----  1 root  field 120782848 Nov 17 22:12 rpd.core.1
```

**Meaning** The sample output lists the contents of the **/var/tmp/** directory. Look for any daemon core files created around the time of the crash. In the example above, two core files are listed: **rpdc.core.0** and **rpdc.core.1**.

[Table 32 on page 1092](#) lists the major Routing Engine daemons supported by the Junos OS.

**Table 33: Major Routing Engine Daemons**

Executable Name	Definition	Description
rpdc	Routing protocol daemon	Provides routing protocol intelligence (Border Gateway Protocol [BGP], Intermediate System-to-Intermediate System [ISIS], Open Shortest Path First [OSPF], and so on).
dcd	Device control daemon	Manages all interface devices.
mgd	Management daemon	Provides user configuration access to the system. The CLI is a client of <b>mgd</b> .
snmpd	Simple Network Management Protocol daemon	Provides remote network management information to the network management system.
chassisd	Chassis daemon	Monitors and manages Flexible PIC Concentrator (FPC) slots and other environmental components.
alarmd	Alarm daemon	Manages system alarm notifications.

Table 33: Major Routing Engine Daemons (*continued*)

Executable Name	Definition	Description
apspd	Automatic protection switching daemon	Provides SONET Automatic Protection Switching (APS) functionality.
sampld	Traffic sampling daemon	Gathers traffic sampling information.
vrpd	Virtual Router Redundancy Protocol daemon	Provides Virtual Router Redundancy Protocol (VRRP) functionality.
syslogd	System log daemon	Manages the router system logging operation.
mib2d	MIB2 daemon	Management Information Base (MIB) subagent for MIB2.

## List the Daemon Core Files

**Purpose** To list the daemon core files.

**Action** To list the daemon core files, follow these steps:

1. Exit from the CLI environment and create a UNIX-level shell by entering the **start shell** command:

```
user@host> start shell
```

2. Type **su** and the root password when prompted. You are now in the shell and the prompt is **%** instead of **>**, for example:

```
% su
Password: ****
```

3. Change the directory to **/var/tmp** and type **ls -l**, for example:

```
root@host% cd /var/tmp
root@host% ls -l
```

4. Look for any daemon core files created around the time of the crash.

## Sample Output

```
user@host> start shell
% su
Password: ****
root@host% cd /var/tmp
root@host% ls -l
total 1292618
-rw-rw---- 1 root field 119713792 Nov 17 21:58 rpd.core.0
-rw-rw---- 1 root field 120782848 Nov 17 22:12 rpd.core.1
```

**Meaning** The sample output lists the contents of the **/var/tmp** directory and shows the current core file (**rpdc.core.1**) and one previous core file (**rpdc.core.0**) for the routing protocol daemon (**rpdc**). For each daemon, you can have a total of five core files in the **/var/tmp** directory:

the current core file and the four previous core files numbered 0 through 4 (from oldest to newest).

---

## Compress the Daemon Core Files

**Purpose** The gzip compression utility is used to compress the files if they are large. Files created using the **gzip** command end with the file extension **.gz**. Compress the core file if it is over 50 MB.



**NOTE:** Use lowercase for the **gzip** command when you are in the shell.

You only need to compress the daemon core files when the tarball file is not created.

**Action** To compress the daemon core file with gzip, use the following command from the shell:

```
root@host% gzip daemon-executable-name.core.number
```

**Sample Output** root@host% gzip rpd.core.0  
gzip rpd.core.0

**Meaning** The contents of the daemon core file are compressed into a single compressed file named **daemon.number.gz**. The **gzip** command preserves the mode, ownership, and timestamps of files when compressing or decompressing them.

---

## Collect Crash Data for the Packet Forwarding Engine Microkernel

**Purpose** Each of the following Packet Forwarding Engine components of a Juniper Networks router runs a microkernel:

- Flexible PIC Concentrator (FPC) on M-series platforms except for the M5 and M10 Internet routers
- Gibson Flexible PIC Concentrator (GFPC) on T640 and T320 Internet routing nodes
- Switched Printed Mezzanine Board (SPMB) on T640 and T320 Internet routing nodes
- Forwarding Engine Board (FEB) on M5 and M10 Internet routers
- System Switching Board (SSB) on an M20 Internet router
- System Control Board (SCB) on an M40 Internet router
- Switching and Forwarding Module (SFM) on M160 and M40e Internet routers

When a crash occurs, crash stack traceback and registration information is placed into nonvolatile random access memory (NVRAM) on the different components.

[Table 34 on page 1099](#) shows where the NVRAM is located for the components for each router.



**Table 34: NVRAM Location on the Microkernel of the Packet Forwarding Engine Components**

Router Type	NVRAM Location
M5 and M10	FEB
M20	SSB and crash stack traceback and register information for the FPC
M40	SCB and crash stack traceback and register information for the FPC
M40e	FPC SFM
M160	FPC SFM
T320	GFPC SPMB
T640	GFPC SPMB

To collect crash data for the Packet Forwarding Engine microkernel, follow these steps:

1. [Display the Crash Stack Traceback and Registration Information on page 1099](#)
2. [Clear the NVRAM Contents on page 1102](#)
3. [Check Packet Forwarding Engine Microkernel Core Files on page 1103](#)
4. [List the Core Files Generated by the Crash on page 1103](#)
5. [Compress the Core Files on page 1104](#)
6. [Log Software Version Information on page 1104](#)
7. [Open a Case with JTAC on page 1105](#)

## Display the Crash Stack Traceback and Registration Information

**Purpose** To display the crash stack traceback and registration information.

**Action** To display the crash stack traceback and registration information, follow these steps:

1. Exit from the CLI environment and create a UNIX-level shell by entering the **start shell** command:  
  

```
user@host> start shell
```
2. Type **su** and the root password when prompted. You are now in the shell and prompt is **%** instead of **>**, for example:  
  

```
% su
Password: ****
```
3. Establish a vty session to the appropriate component. Use the **vtty** command followed by the executable name for the component; for example, **scb**, **ssb0**, **ssb1**, **fpc0**, or **fpc1**:

```
root@host% vty sfm0
```



**NOTE:** For the M40e and M160 routers, you can also create a cty session to the components if the components are not online.

4. Type the **show nvram** command to view the NVRAM information.
5. Type the **show syslog messages** command to view the system log messages.

## Sample Output 1

```
user@host> start shell
% su
Password: ****
root@host% vty sfm0

SFM platform (266Mhz PPC 603e processor, 64Mb memory, 512Kb flash)
SFM3(host vty)# show nvram
System NVRAM :
  4080 available bytes, 4080 used, 0 free
Contents:

mpc106 machine check caused by error on the PCI Bus
mpc106 error detect register 1: 0x08, 2: 0x00
mpc106 error ack count = 0
mpc106 error address: 0x0a000000
mpc106 PCI bus error status register: 0x02
  mpc106 was the PCI master
  C/BE bits: I/O read [0b0010]
mpc106 error detection reg1: PCI cycle
mpc106 PCI status reg: parity error

System Exception: Vector/Code 0x00700, Signal 4
Event occurred at: Oct 26 13:32:40.952

Juniper Embedded Microkernel Version 4.2R1
Built by tlim on 2000-09-23 06:11:28 UTC
Copyright (C) 1998-2000, Juniper Networks, Inc.
All rights reserved.
Reason string: "Program Check"
Context: Thread (PFE Manager)

Registers:
R00: 0x06f5f81c R01: 0x06f5f9cc R02: 0x00003344 R03: 0x00000000
R04: 0x00008000 R05: 0x00000000 R06: 0x0010052c R07: 0x06f637e4
R08: 0x06f5f81c R09: 0x00169810 R10: 0x000000e8 R11: 0x00000001
R12: 0x00046cdf R13: 0xffffffff R14: 0xffffffff R15: 0xffffffff
R16: 0xffffffff R17: 0xffffffff R18: 0xffffffff R19: 0xffffffff
R20: 0xffffffff R21: 0xffffffff R22: 0xffffffff R23: 0xffffffff
R24: 0x00000003 R25: 0x00000000 R26: 0x00000001 R27: 0x0000fc78
R28: 0x00150000 R29: 0x0016c4b0 R30: 0x06f5eb7c R31: 0x97cb1d36
MSR: 0x0008b030 CTR: 0x000ac008 Link:0x06f5f81c SP: 0x06f5f9cc
CCR: 0x22200024 XER: 0x20000000 PC: 0x06f5f81c
DSISR: 0x00000000 DAR: 0xffffffff K_MSR: 0x00001030

Stack Traceback :
```

```

Frame 01: sp = 0x06f5f9cc, pc = 0x06f5f81c
Frame 02: sp = 0x06f5f9e4, pc = 0x000c7e28
Frame 03: sp = 0x06f5fa04, pc = 0x00026620

```

ROM NVRAM:

0 available bytes, 0 used, 0 free

SFM3(host vty)# **show syslog messages**

```

Oct 26 12:02:05 router tnp_sfm_2 PFEMAN: sent Resync request to Master
Oct 26 12:02:07 router tnp_sfm_3 CM(3): Slot 1: On-line
Oct 26 12:02:07 router tnp_sfm_3 CM(3): Slot 2: On-line
Oct 26 12:02:07 router tnp_sfm_3 CM(3): Slot 6: On-line
Oct 26 12:02:07 router tnp_sfm_3 PFEMAN: sent Resync request to Master
Oct 26 12:05:58 router tnp_sfm_3 mpc106 machine check caused by error on the
PCI Bu
s
Oct 26 12:05:58 router tnp_sfm_3 mpc106 error detect register 1: 0x08,
2: 0x00
Oct 26 12:05:58 router tnp_sfm_3 mpc106 error ack count = 0
Oct 26 12:05:58 router tnp_sfm_3 mpc106 error address: 0x0a000000
Oct 26 12:05:58 router tnp_sfm_3 mpc106 PCI bus error status register: 0x02
Oct 26 12:05:58 router tnp_sfm_3 mpc106 was the PCI master
Oct 26 12:05:58 router tnp_sfm_3 C/BE bits: I/O read [0b0010]
Oct 26 12:05:58 router tnp_sfm_3 mpc106 error detection reg1: PCI cycle
Oct 26 12:05:58 router tnp_sfm_3 mpc106 PCI status reg: parity error
Oct 26 12:05:58 router tnp_sfm_3 ^B
Oct 26 12:05:58 router tnp_sfm_3 last message repeated 7 times
Oct 26 12:05:58 router tnp_sfm_3 Registers:
Oct 26 12:05:58 router tnp_sfm_3 R00: 0x06f5f81c R01: 0x06f5f9cc
R02: 0x00003344 R0
3: 0x00000000
Oct 26 12:05:58 router tnp_sfm_3 R04: 0x00008000 R05: 0x00000000
R06: 0x0010052c R0
7: 0x06f637e4
Oct 26 12:05:58 router tnp_sfm_3 R08: 0x06f5f81c R09: 0x00169810
R10: 0x000003b4 R1
1: 0x00000001
Oct 26 12:05:58 router tnp_sfm_3 R12: 0x00017b97 R13: 0xffffffff
R14: 0xffffffff R1
5: 0xffffffff
Oct 26 12:05:58 router tnp_sfm_3 R16: 0xffffffff R17: 0xffffffff
R18: 0xffffffff R1
9: 0xffffffff
Oct 26 12:05:58 router tnp_sfm_3 R20: 0xffffffff R21: 0xffffffff
R22: 0xffffffff R2
3: 0xffffffff
Oct 26 12:05:58 router tnp_sfm_3 R24: 0x00000003 R25: 0x00000000
R26: 0x00000001 R2
7: 0x0000fc78
Oct 26 12:05:58 router tnp_sfm_3 R28: 0x00150000 R29: 0x0016c4b0
R30: 0x06f5eb7c R3
1: 0x97c9c35e
Oct 26 12:05:58 router tnp_sfm_3 MSR: 0x0008b030 CTR: 0x000ac008
Link:0x06f5f81c SP
: 0x06f5f9cc
Oct 26 12:05:58 router tnp_sfm_3 CCR: 0x22200024 XER: 0x20000000
PC: 0x06f5f81c
Oct 26 12:05:58 router tnp_sfm_3 DSISR: 0x00000000 DAR: 0xffffffff
K_MSR: 0x0000103
0

```

## Sample Output

The following sample output is another example of displaying the crash stack traceback and registration information:

```
root@host% vty fpc1
FPC160 platform (PPC 603e processor, 32Mb memory, 512Kb flash)

FPC1(host vty)# show nvram
System NVRAM :
  4080 available bytes, 4080 used, 0 free
Contents:
00000000 R06: 0x0000005c R07: 0x850400d0
R08: 0x00000000 R09: 0x00000020 R10: 0x00000000 R11: 0x00000129
R12: 0x00000000 R13: 0x00000000 R14: 0x4005009a R15: 0x20000260
R16: 0xc8828784 R17: 0x84212800 R18: 0xc0004c61 R19: 0x80005900
R20: 0x80206000 R21: 0x84000304 R22: 0xd0410180 R23: 0x8c2005ac
R24: 0x00000003 R25: 0x00000000 R26: 0x00000001 R27: 0x0000fc48
R28: 0x001d0000 R29: 0x00000001 R30: 0x00136bb8 R31: 0x00000000
MSR: 0x0000b030 CTR: 0x001331e0 Link:0x000308c8 SP: 0x01baba34
CCR: 0x42200020 XER: 0x00000000 PC: 0x000308cc
DSISR: 0x00000000 DAR: 0xffffffff K_MSR: 0x00001030
Stack Traceback:
Frame 01: sp = 0x01baba34, pc = 0x000308c8
Frame 02: sp = 0x01babac4, pc = 0x0002647c
Frame 03: sp = 0x01babad4, pc = 0x00026590
Frame 04: sp = 0x01babadc, pc = 0x00106fcc
Frame 05: sp = 0x01babafc, pc = 0x00026620
ROM NVRAM:
  0 available bytes, 0 used, 0 free

FPC1(host vty)# show syslog messages
[0+00:00:00.780 LOG: Info] Version 4.0R5 by tlim on 2000-08-10 04:45:54 UTC
[0+00:00:00.780 LOG: Info] On-board NVRAM contains diagnostic information.
[0+00:00:03.175 LOG: Info] PFEMAN: Established connection to Master
[Jan 30 21:53:05.804 LOG: Info] SNTPD: Initial time of day set.
```

**Meaning** Sample output 1 and 2 show the stack trace from the microkernel crash. Save the output from the **show nvram** and **show syslog** commands so that you can send them to JTAC when you open a case.

## Clear the NVRAM Contents

**Purpose** Currently the storage area for the logs on the NVRAM is limited to 4 KB. You need to delete old NVRAM logs to make room for new ones.

**Action** To clear the content of the NVRAM after you have captured the necessary information, follow these steps:

1. Exit from the CLI environment and create a UNIX-level shell by entering the **start shell** command:

```
user@host> start shell
```

2. Type **su** and the root password when prompted. You are now in the shell and the prompt is **%** instead of **>**, for example:

```
% su
Password: ****
```

3. Establish a vty session to the appropriate component. Use the **vtty** command followed by the abbreviation for the component, for example:

```
root@host% vtty sfm0
SFM3(host vty)#
FPC1(host vty)#
```

4. Type the **clear nvram** command, for example:

```
SFM3(host vty)# clear nvram
FPC1(host vty)# clear nvram
```

## Check Packet Forwarding Engine Microkernel Core Files

**Purpose** If you observe disruption to the Packet Forwarding Engine microkernel, check the **/var/crash** directory for any core files created around the time of the crash.

**Action** To check the **/var/crash** directory, use the following Junos OS CLI operational mode command:

```
user@host> file list detail /var/crash
```

## Sample Output

```
user@host> file list detail /var/crash
var/crash:
total 456630
-rw-r--r--  1 root  wheel   6814720 Dec 18 08:03 core-FPC4.100111808032
-rw-r--r--  1 root  wheel   65613824 Dec 10 04:58 core-SCB.100111004570
-rw-r--r--  1 root  wheel   65613824 Dec 19 00:23 core-SCB.100111900221
-rw-r--r--  1 root  wheel   65545216 Feb  9 20:46 core-SCB.101010920452
```

**Meaning** The sample output lists the contents of the **/var/crash/** directory. Check the date and timestamp for any core files created around the time of the crash. In the example above, four core files are listed.

## List the Core Files Generated by the Crash

**Purpose** To list the core files generated by the crash.

**Action** To list the core files, follow these steps:

1. Exit from the CLI environment and create a UNIX-level shell by entering the **start shell** command:

```
user@host> start shell
```

2. Type **su** and the root password when prompted. You are now in the shell and the prompt is **%** instead of **>**, for example:

```
% su
Password: ****
```

3. Change the directory to **/var/crash** and type **ls -l**, for example:

```
root@host% cd /var/crash
root@host% ls -l
```

4. Look for any core files created around the time of the crash.

**Sample Output**

```
user@host> start shell
% su
Password: ****
root@host% cd /var/crash
root@host% ls -l
total 456630
-rw-r--r--  1 root  wheel   6814720 Dec  18 08:03 core-FPC4.100111808032
-rw-r--r--  1 root  wheel   65613824 Dec  10 04:58 core-SCB.100111004570
-rw-r--r--  1 root  wheel   65613824 Dec  19 00:23 core-SCB.100111900221
-rw-r--r--  1 root  wheel   65545216 Feb  9 20:46 core-SCB.101010920452
```

**Meaning** The sample output shows the current core files for the different components on the router; for example, **core-FPC4.100111808032** and **core-SCB.100111004570**.

## Compress the Core Files

**Purpose** gzip is a compression utility used to compress the core files. Files created using the **gzip** command end with the file extension **.gz**. Compress the core files if they are larger than 50 MB.

**Action** To compress the core files with gzip, use the following command from the shell:

```
root@host% gzip filename
```

**Sample Output**

```
root@host% gzip core-SCB.101010920452
```

**Meaning** The contents of the core file are compressed into a single compressed file named **core-SCB.10101092045.gz**. The **gzip** command preserves the mode, ownership, and timestamps of files when compressing or decompressing them.

## Log Software Version Information

**Purpose** To log the Junos OS version information.

**Action** To log the Junos OS version information, use the following Junos OS CLI operational mode command:

```
user@host> show version
```

**Sample Output**

```

user@host> show version
Hostname: host
Model: m10
JUNOS Base OS boot [5.0R5]
JUNOS Base OS Software Suite [5.0R5]
JUNOS Kernel Software Suite [5.0R5]
JUNOS Routing Software Suite [5.0R5]
JUNOS Packet Forwarding Engine Support [5.0R5]
JUNOS Crypto Software Suite [5.0R5]
JUNOS Online Documentation [5.0R5]
KERNEL 5.0R5 #0 built by builder on 2002-03-02 05:10:28 UTC
MGD release 5.0R5 built by builder on 2002-03-02 04:45:32 UTC
CLI release 5.0R5 built by builder on 2002-03-02 04:44:22 UTC
CHASSISD release 5.0R5 built by builder on 2002-03-02 04:43:37 UTC
DCD release 5.0R5 built by builder on 2002-03-02 04:42:47 UTC
RPD release 5.0R5 built by builder on 2002-03-02 04:46:17 UTC
SNMPD release 5.0R5 built by builder on 2002-03-02 04:52:26 UTC
MIB2D release 5.0R5 built by builder on 2002-03-02 04:45:37 UTC
APSD release 5.0R5 built by builder on 2002-03-02 04:43:31 UTC
VRRPD release 5.0R5 built by builder on 2002-03-02 04:52:34 UTC
ALARMD release 5.0R5 built by builder on 2002-03-02 04:43:24 UTC
PFED release 5.0R5 built by builder on 2002-03-02 04:46:06 UTC
CRAFTD release 5.0R5 built by builder on 2002-03-02 04:44:30 UTC
SAMPLED release 5.0R5 built by builder on 2002-03-02 04:52:20 UTC
ILMID release 5.0R5 built by builder on 2002-03-02 04:45:21 UTC
BPRELAYD release 5.0R5 built by builder on 2002-03-02 04:42:41 UTC
RMOPD release 5.0R5 built by builder on 2002-03-02 04:46:11 UTC
jkernel-dd release 5.0R5 built by builder on 2002-03-02 04:41:07 UTC
jroute-dd release 5.0R5 built by builder on 2002-03-02 04:41:21 UTC
jdocs-dd release 5.0R5 built by builder on 2002-03-02 04:39:11 UTC

```

**Meaning** The sample output shows the hostname, router model, and the different Junos OS packages, processes, and documents.

## Open a Case with JTAC

**Problem Description:** To open a case with JTAC, call one of the Support phone numbers or create a case via [Case Manager](#).

## Display the Crash Stack Traceback and Registration Information

**Purpose** To display the crash stack traceback and registration information.

**Action** To display the crash stack traceback and registration information, follow these steps:

1. Exit from the CLI environment and create a UNIX-level shell by entering the **start shell** command:

```
user@host> start shell
```

2. Type **su** and the root password when prompted. You are now in the shell and prompt is **%** instead of **>**, for example:

```
% su
Password: ****
```

3. Establish a vty session to the appropriate component. Use the **vtty** command followed by the executable name for the component; for example, **scb**, **ssb0**, **ssb1**, **fpc0**, or **fpc1**:

```
root@host% vty sfm0
```



**NOTE:** For the M40e and M160 routers, you can also create a **cty** session to the components if the components are not online.

4. Type the **show nvram** command to view the NVRAM information.
5. Type the **show syslog messages** command to view the system log messages.

## Sample Output 1

```
user@host> start shell
```

```
% su
```

```
Password: ****
```

```
root@host% vty sfm0
```

```
SFM platform (266Mhz PPC 603e processor, 64Mb memory, 512Kb flash)
```

```
SFM3(host vty)# show nvram
```

```
System NVRAM :
```

```
4080 available bytes, 4080 used, 0 free
```

```
Contents:
```

```
mpc106 machine check caused by error on the PCI Bus
```

```
mpc106 error detect register 1: 0x08, 2: 0x00
```

```
mpc106 error ack count = 0
```

```
mpc106 error address: 0x0a000000
```

```
mpc106 PCI bus error status register: 0x02
```

```
mpc106 was the PCI master
```

```
C/BE bits: I/O read [0b0010]
```

```
mpc106 error detection reg1: PCI cycle
```

```
mpc106 PCI status reg: parity error
```

```
System Exception: Vector/Code 0x00700, Signal 4
```

```
Event occurred at: Oct 26 13:32:40.952
```

```
Juniper Embedded Microkernel Version 4.2R1
```

```
Built by tlim on 2000-09-23 06:11:28 UTC
```

```
Copyright (C) 1998-2000, Juniper Networks, Inc.
```

```
All rights reserved.
```

```
Reason string: "Program Check"
```

```
Context: Thread (PFE Manager)
```

```
Registers:
```

```
R00: 0x06f5f81c R01: 0x06f5f9cc R02: 0x00003344 R03: 0x00000000
```

```
R04: 0x00008000 R05: 0x00000000 R06: 0x0010052c R07: 0x06f637e4
```

```
R08: 0x06f5f81c R09: 0x00169810 R10: 0x000000e8 R11: 0x00000001
```

```
R12: 0x00046cdf R13: 0xffffffff R14: 0xffffffff R15: 0xffffffff
```

```
R16: 0xffffffff R17: 0xffffffff R18: 0xffffffff R19: 0xffffffff
```

```
R20: 0xffffffff R21: 0xffffffff R22: 0xffffffff R23: 0xffffffff
```

```
R24: 0x00000003 R25: 0x00000000 R26: 0x00000001 R27: 0x0000fc78
```

```
R28: 0x00150000 R29: 0x0016c4b0 R30: 0x06f5eb7c R31: 0x97cb1d36
```

```
MSR: 0x0008b030 CTR: 0x000ac008 Link:0x06f5f81c SP: 0x06f5f9cc
```

```
CCR: 0x22200024 XER: 0x20000000 PC: 0x06f5f81c
```

```
DSISR: 0x00000000 DAR: 0xffffffff K_MSR: 0x00001030
```



**Stack Traceback :**

```

Frame 01: sp = 0x06f5f9cc, pc = 0x06f5f81c
Frame 02: sp = 0x06f5f9e4, pc = 0x000c7e28
Frame 03: sp = 0x06f5fa04, pc = 0x00026620

```

**ROM NVRAM:**

```

0 available bytes, 0 used, 0 free
SFM3(host vty)# show syslog messages

```

```

Oct 26 12:02:05 router tnp_sfm_2 PFEMAN: sent Resync request to Master
Oct 26 12:02:07 router tnp_sfm_3 CM(3): Slot 1: On-line
Oct 26 12:02:07 router tnp_sfm_3 CM(3): Slot 2: On-line
Oct 26 12:02:07 router tnp_sfm_3 CM(3): Slot 6: On-line
Oct 26 12:02:07 router tnp_sfm_3 PFEMAN: sent Resync request to Master
Oct 26 12:05:58 router tnp_sfm_3 mpc106 machine check caused by error on the
PCI Bu
s
Oct 26 12:05:58 router tnp_sfm_3 mpc106 error detect register 1: 0x08,
2: 0x00
Oct 26 12:05:58 router tnp_sfm_3 mpc106 error ack count = 0
Oct 26 12:05:58 router tnp_sfm_3 mpc106 error address: 0x0a000000
Oct 26 12:05:58 router tnp_sfm_3 mpc106 PCI bus error status register: 0x02
Oct 26 12:05:58 router tnp_sfm_3 mpc106 was the PCI master
Oct 26 12:05:58 router tnp_sfm_3 C/BE bits: I/O read [0b0010]
Oct 26 12:05:58 router tnp_sfm_3 mpc106 error detection reg1: PCI cycle
Oct 26 12:05:58 router tnp_sfm_3 mpc106 PCI status reg: parity error
Oct 26 12:05:58 router tnp_sfm_3 ^B
Oct 26 12:05:58 router tnp_sfm_3 last message repeated 7 times
Oct 26 12:05:58 router tnp_sfm_3 Registers:
Oct 26 12:05:58 router tnp_sfm_3 R00: 0x06f5f81c R01: 0x06f5f9cc
R02: 0x00003344 R0
3: 0x00000000
Oct 26 12:05:58 router tnp_sfm_3 R04: 0x00008000 R05: 0x00000000
R06: 0x0010052c R0
7: 0x06f637e4
Oct 26 12:05:58 router tnp_sfm_3 R08: 0x06f5f81c R09: 0x00169810
R10: 0x000003b4 R1
1: 0x00000001
Oct 26 12:05:58 router tnp_sfm_3 R12: 0x00017b97 R13: 0xffffffff
R14: 0xffffffff R1
5: 0xffffffff
Oct 26 12:05:58 router tnp_sfm_3 R16: 0xffffffff R17: 0xffffffff
R18: 0xffffffff R1
9: 0xffffffff
Oct 26 12:05:58 router tnp_sfm_3 R20: 0xffffffff R21: 0xffffffff
R22: 0xffffffff R2
3: 0xffffffff
Oct 26 12:05:58 router tnp_sfm_3 R24: 0x00000003 R25: 0x00000000
R26: 0x00000001 R2
7: 0x0000fc78
Oct 26 12:05:58 router tnp_sfm_3 R28: 0x00150000 R29: 0x0016c4b0
R30: 0x06f5eb7c R3
1: 0x97c9c35e
Oct 26 12:05:58 router tnp_sfm_3 MSR: 0x0008b030 CTR: 0x000ac008
Link:0x06f5f81c SP
: 0x06f5f9cc
Oct 26 12:05:58 router tnp_sfm_3 CCR: 0x22200024 XER: 0x20000000
PC: 0x06f5f81c
Oct 26 12:05:58 router tnp_sfm_3 DSISR: 0x00000000 DAR: 0xffffffff

```

```
K_MSR: 0x0000103
0
```

## Sample Output

The following sample output is another example of displaying the crash stack traceback and registration information:

```
root@host% vty fpc1
FPC160 platform (PPC 603e processor, 32Mb memory, 512Kb flash)

FPC1(host vty)# show nvram
System NVRAM :
  4080 available bytes, 4080 used, 0 free
Contents:
00000000 R06: 0x0000005c R07: 0x850400d0
R08: 0x00000000 R09: 0x00000020 R10: 0x00000000 R11: 0x00000129
R12: 0x00000000 R13: 0x00000000 R14: 0x4005009a R15: 0x20000260
R16: 0xc8828784 R17: 0x84212800 R18: 0xc0004c61 R19: 0x80005900
R20: 0x80206000 R21: 0x84000304 R22: 0xd0410180 R23: 0x8c2005ac
R24: 0x00000003 R25: 0x00000000 R26: 0x00000001 R27: 0x0000fc48
R28: 0x001d0000 R29: 0x00000001 R30: 0x00136bb8 R31: 0x00000000
MSR: 0x0000b030 CTR: 0x001331e0 Link:0x000308c8 SP: 0x01baba34
CCR: 0x42200020 XER: 0x00000000 PC: 0x000308cc
DSISR: 0x00000000 DAR: 0xffffffff K_MSR: 0x00001030
Stack Traceback:
Frame 01: sp = 0x01baba34, pc = 0x000308c8
Frame 02: sp = 0x01babac4, pc = 0x0002647c
Frame 03: sp = 0x01babad4, pc = 0x00026590
Frame 04: sp = 0x01babadc, pc = 0x00106fcc
Frame 05: sp = 0x01babafc, pc = 0x00026620
ROM NVRAM:
  0 available bytes, 0 used, 0 free

FPC1(host vty)# show syslog messages
[0+00:00:00.780 LOG: Info] Version 4.0R5 by tlim on 2000-08-10 04:45:54 UTC
[0+00:00:00.780 LOG: Info] On-board NVRAM contains diagnostic information.
[0+00:00:03.175 LOG: Info] PFEMAN: Established connection to Master
[Jan 30 21:53:05.804 LOG: Info] SNTPD: Initial time of day set.
```

**Meaning** Sample output 1 and 2 show the stack trace from the microkernel crash. Save the output from the **show nvram** and **show syslog** commands so that you can send them to JTAC when you open a case.

---

## Clear the NVRAM Contents

**Purpose** Currently the storage area for the logs on the NVRAM is limited to 4 KB. You need to delete old NVRAM logs to make room for new ones.

**Action** To clear the content of the NVRAM after you have captured the necessary information, follow these steps:

1. Exit from the CLI environment and create a UNIX-level shell by entering the **start shell** command:

```
user@host> start shell
```

2. Type **su** and the root password when prompted. You are now in the shell and the prompt is **%** instead of **>**, for example:

```
% su
Password: ****
```

3. Establish a vty session to the appropriate component. Use the **vtty** command followed by the abbreviation for the component, for example:

```
root@host% vtty sfm0
SFM3(host vty)#
FPC1(host vty)#
```

4. Type the **clear nvram** command, for example:

```
SFM3(host vty)# clear nvram
FPC1(host vty)# clear nvram
```

## Check Packet Forwarding Engine Microkernel Core Files

**Purpose** If you observe disruption to the Packet Forwarding Engine microkernel, check the **/var/crash** directory for any core files created around the time of the crash.

**Action** To check the **/var/crash** directory, use the following Junos OS CLI operational mode command:

```
user@host> file list detail /var/crash
```

### Sample Output

```
user@host> file list detail /var/crash
var/crash:
total 456630
-rw-r--r--  1 root  wheel   6814720 Dec 18 08:03 core-FPC4.100111808032
-rw-r--r--  1 root  wheel   65613824 Dec 10 04:58 core-SCB.100111004570
-rw-r--r--  1 root  wheel   65613824 Dec 19 00:23 core-SCB.100111900221
-rw-r--r--  1 root  wheel   65545216 Feb  9 20:46 core-SCB.101010920452
```

**Meaning** The sample output lists the contents of the **/var/crash/** directory. Check the date and timestamp for any core files created around the time of the crash. In the example above, four core files are listed.

## List the Core Files Generated by the Crash

**Purpose** To list the core files generated by the crash.

**Action** To list the core files, follow these steps:

1. Exit from the CLI environment and create a UNIX-level shell by entering the **start shell** command:

```
user@host> start shell
```

2. Type **su** and the root password when prompted. You are now in the shell and the prompt is **%** instead of **>**, for example:

```
% su
Password: ****
```

3. Change the directory to `/var/crash` and type `ls -l`, for example:

```
root@host% cd /var/crash
root@host% ls -l
```

4. Look for any core files created around the time of the crash.

**Sample Output**

```
user@host> start shell
% su
Password: ****
root@host% cd /var/crash
root@host% ls -l
total 456630
-rw-r--r--  1 root  wheel   6814720 Dec 18 08:03 core-FPC4.100111808032
-rw-r--r--  1 root  wheel   65613824 Dec 10 04:58 core-SCB.100111004570
-rw-r--r--  1 root  wheel   65613824 Dec 19 00:23 core-SCB.100111900221
-rw-r--r--  1 root  wheel   65545216 Feb  9 20:46 core-SCB.101010920452
```

**Meaning** The sample output shows the current core files for the different components on the router; for example, `core-FPC4.100111808032` and `core-SCB.100111004570`.

---

## Compress the Core Files

**Purpose** `gzip` is a compression utility used to compress the core files. Files created using the `gzip` command end with the file extension `.gz`. Compress the core files if they are larger than 50 MB.

**Action** To compress the core files with `gzip`, use the following command from the shell:

```
root@host% gzip filename
```

**Sample Output**

```
root@host% gzip core-SCB.101010920452
```

**Meaning** The contents of the core file are compressed into a single compressed file named `core-SCB.10101092045.gz`. The `gzip` command preserves the mode, ownership, and timestamps of files when compressing or decompressing them.

---


## Path Protection Overview

The main advantages of path protection are control over where the traffic goes after a failure and minimum packet loss when combined with fast reroute (one-to-one backup or link protection). Path protection is the configuration, within a label-switched path (LSP), of two types of paths: a primary path, used in normal operations, and a secondary path used when the primary fails, as shown in [Figure 110 on page 1111](#).

In [Figure 110 on page 1111](#), an MPLS network consisting of eight routers has a primary path between **R1** and **R5** which is protected by the secondary path between **R1** and **R5**. When a failure is detected, such as an interface down event, an Resource Reservation Protocol

(RSVP) error message is sent to the ingress router which switches traffic to the secondary path, maintaining traffic flow.

**Figure 110: Path Protection**

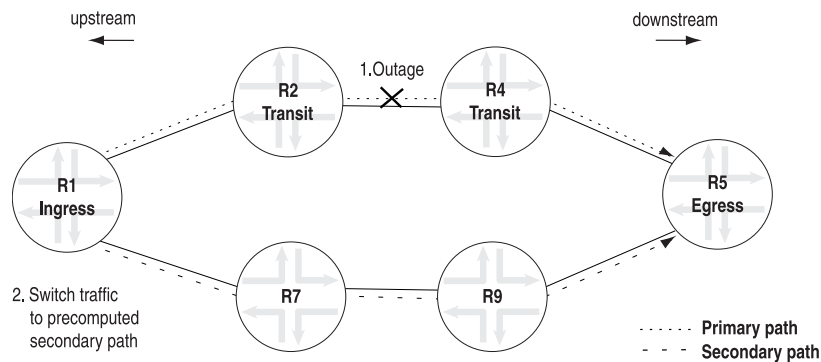

If the secondary path is pre-sigaled or on standby, recovery time from a failure is faster than if the secondary path is not pre-sigaled. When the secondary path is not pre-sigaled a call-setup delay occurs during which the new physical path for the LSP is established, extending the recovery time. If the failure in the primary path is corrected, and after a few minutes of hold time, the ingress router switches traffic back from the secondary path to the primary path.

Because path protection is provided by the ingress router for the entire path, there can be some disadvantages, for example, double-booking of resources and unnecessary protection of links. By protecting a single resource at a time, local protection can remedy these disadvantages.

#### Related Documentation

### Configure a Primary Path

**Action** To configure a primary path with an ERO list, bandwidth, and priority, follow these steps:

1. In configuration mode, go to the following hierarchy level:

```
[edit]
user@host# edit protocols mpls
```

2. Configure the primary ERO list:

```
[edit protocols mpls]
user@host# set path path-name address strict
```

For example:

```
[edit protocols mpls]
user@R1# set path via-r2 10.0.12.14 strict
user@R1# set path via-r2 10.0.24.2 strict
```

3. Configure the LSP:

```
[edit protocols mpls]
```

```
user@host# set label-switched-path lsp-path-name to destination;
```

For example:

```
[edit protocols mpls]  
user@R1# set label-switched-path r1-to-r5 to 192.168.5.1;
```

4. Configure the primary path:

```
[edit protocols mpls label-switched-path lsp-path-name]  
user@host# set primary primary-name
```

For example:

```
[edit protocols mpls label-switched-path r1-to-r5]  
user@R1# set primary via-r2
```

5. Configure the bandwidth:

```
[edit protocols mpls label-switched-path lsp-path-name]  
user@host# set primary primary-name bandwidth bandwidth
```

For example:

```
[edit protocols mpls label-switched-path r1-to-r5]  
user@R1# set primary via-r2 bandwidth 35m
```

6. Configure the priority value:

```
[edit protocols mpls label-switched-path lsp-path-name]  
user@host# set primary primary-name priority reservation-priority setup-priority
```

For example:

```
[edit protocols mpls label-switched-path r1-to-r5]  
user@R1# set primary via-r2 priority 6 6
```

7. Verify and commit the configuration:

```
[edit protocols mpls label-switched-path lsp-path-name]  
user@host# show  
user@host# commit
```

**Sample Output** The sample output below illustrates the configuration of the primary path on ingress router R1.

```
[edit protocols mpls]
user@R1# show
label-switched-path r1-to-r5 {
  to 192.168.5.1;
  primary via-r2 { # Bandwidth and priority configured at the primary path

    bandwidth 35m; # level of the hierarchy
    priority 6 6; # Priority setup and hold values
  }
}
path via-r2 { # Primary ERO list
  10.0.12.14 strict;
  10.0.24.2 strict;
[...Output truncated...]

[edit protocols mpls]
user@R1# commit
commit complete
```

**Meaning** The sample output shows a label-switched path (LSP) with bandwidth and priority applied to only one primary path. The same parameters specified one level up in the hierarchy, at the `[edit protocols mpls label-switched-path lsp-path-name]` hierarchy level, affect all paths.

The path, **via-r2**, specifies the complete strict path from the ingress to the egress routers through **10.0.12.14**, **10.0.24.2**, in that order. There cannot be any intermediate routers except the ones specified. However, there can be intermediate routers between **10.0.24.2** and the egress router because the egress router is not specifically listed in the path statement. To prevent intermediate routers before egress, configure the egress router as the last router, with a strict type.

## Ensuring That Secondary Paths Establish When Resources Are Diminished

The Junos OS does not require that a primary and secondary path share the same parameters. You may decide to configure your primary paths with strict resource requirements, and configure your secondary paths with less strict requirements, allowing your secondary paths to establish more readily during periods of diminished resources.

**Action** To ensure that secondary paths establish when resources are diminished, follow these steps:

1. In configuration mode, go to the following hierarchy level:

```
[edit protocols mpls]
user@host# edit label-switched-path lsp-path-name
```

For example:

```
[edit protocols mpls]
user@R1# edit label-switched-path r1-to-r4
```

2. Configure the bandwidth for the primary path, and do not configure any bandwidth for the secondary path:

```
[edit protocols mpls label-switched-path lsp-path-name]  
user@host# set primary primary-name bandwidth bandwidth
```

For example:

```
[edit protocols mpls label-switched-path r1-to-r4]  
user@R1# set primary via-r2 bandwidth 35m
```

3. Verify and commit the configuration:

```
[edit protocols mpls label-switched-path lsp-path-name]  
user@host# show  
user@host# commit
```

**Sample Output** The sample output below illustrates a bandwidth configuration on ingress router R1.

```
[edit protocols mpls]  
user@R1# show  
label-switched-path r1-to-r4 {  
  to 192.168.4.1;  
  primary via-r2 {  
    bandwidth 35m;  
  }  
  secondary via-r7 { # In this example, bandwidth is not configured for the  
    secondary path.  
    standby;        # However you could configure a bandwidth value different  
    from            # that on the primary path.  
  }  
}  
[...Output truncated...]
```

**Meaning** The sample output shows the primary path **via-r2** requires 35 Mbps of bandwidth, while secondary path **via-r7** has no constraints. The primary path is configured with strict resource requirements, while the secondary path is configured with no bandwidth requirements, allowing the secondary path to establish more readily during periods of diminished resources. One thing to keep in mind when configuring a secondary path without bandwidth requirements is that it can be subject to traffic loss due to congestion.

---

## One-to-One Backup Overview


Fast reroute or one-to-one backup is a short-term solution to reduce packet loss associated with a particular LSP. One-to-one backup is appropriate under the following circumstances:

- Protection of a small number of LSPs relative to the total number of LSPs.
- Path selection criteria, such as bandwidth, priority, and link coloring for detour paths is critical.
- Control of individual LSPs is important.



In one-to-one backup, the ingress router adds the fast reroute object to the RSVP Path message requesting that downstream routers establish detours. Downstream routers generate Path messages and establish detours to avoid the downstream link or node. Detours are always calculated to avoid the immediate downstream link and node, providing against both link and node failure, as shown in [Figure 111 on page 1115](#).

**Figure 111: One-to-One Backup Detours**

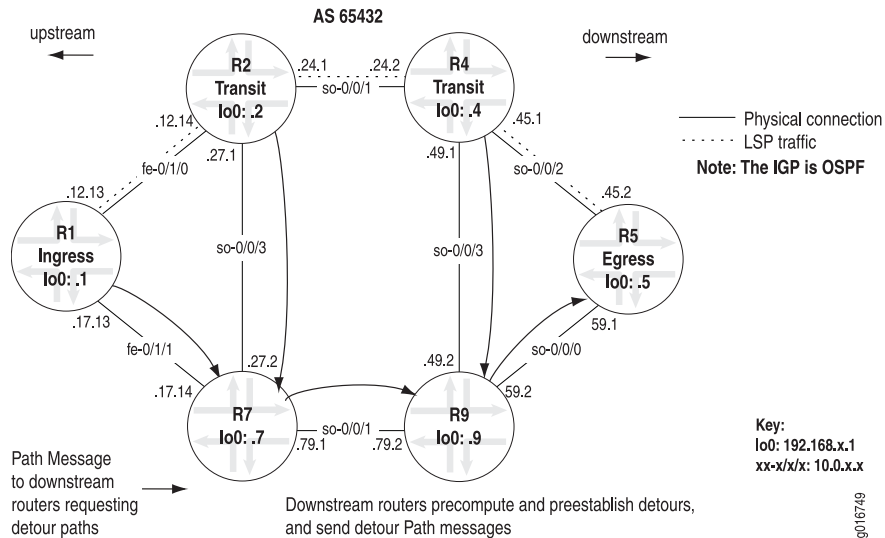

[Figure 111 on page 1115](#) shows a network with one LSP configured from the ingress router **R1** to the egress router **R5**, transiting **R2** and **R4**. The following detours are established:

- **R1** creates a detour to **R5** via **R7** and **R9**
- **R2** creates a detour to **R5** via **R7** and **R9**
- **R4** creates a detour to **R5** via **R9**

Each detour is dedicated to a particular LSP traversing the router (one detour to one LSP). If the network topology has insufficient links and nodes, it may be impossible to establish a detour. Also, detour paths are not meant for long-term use because they may provide inadequate bandwidth and can result in congestion on the links. As soon as the ingress router calculates a new path avoiding the failure, traffic is redirected along the new path, detours are torn down, and new detours established.

## Configure Link Protection

**Purpose** Configuring link protection is a two-part process. The first part involves configuring link protection on the RSVP interface, and the second part sets link protection for any LSPs traversing the protected link that require use of the bypass path.

**Action** To configure link protection, follow these steps:

1. In configuration mode, go to the following hierarchy level:

```
[edit]
user@R1# edit protocols rsvp interface type-fpc/pic/port
```

For example:

```
[edit]
user@R1# edit protocols rsvp interface fe-0/1/0
```

2. Configure link protection for the interface:

```
[edit protocols rsvp interface type-fpc/pic/port]
user@R1# set link-protection
```

3. Verify the link protection configuration for the interface:

```
[edit protocols rsvp interface type-fpc/pic/port]
user@R1# show
```

4. Configure link protection for LSPs requiring use of the bypass path:

```
[edit protocols rsvp interface fe-0/1/0.0]
user@R1# top
[edit]
user@R1# edit protocols mpls label-switched-path lsp-path-name
```

For example:

```
[edit]
user@R1# edit protocols mpls label-switched-path lsp2-r1-to-r5
```

5. Configure link protection for the LSP:

```
[edit protocols mpls label-switched-path lsp-path-name]
user@R1# set link-protection
```

6. Verify and the link protection configuration for the LSP:

```
[edit protocols mpls label-switched-path lsp-path-name]
user@R1# show
user@R1# commit
```

**Sample Output** The following sample output illustrates the configuration of the link protection on ingress router R1 in the network shown in [Figure 92 on page 909](#):

```
[edit protocols rsvp]
user@R1# show
interface fe-0/1/0.0 {
    link-protection; #Protection for the RSVP interface
}

[edit protocols mpls label-switched-path lsp2-r1-to-r5]
user@R1# up

[edit protocols mpls]
user@R1# show
label-switched-path lsp2-r1-to-r5 { #Path level of the hierarchy
    #to 192.168.5.1;
    link-protection;

[edit protocols mpls]
user@R1# commit
commit complete
```

**Meaning** The sample output shows link protection for a specific interface. After link protection is configured, a bypass path is signaled to avoid that link in case of a failure. Having a bypass path available does not in itself provide protection for LSPs that traverse the protected link. You must configure link protection on the ingress router for each LSP that will benefit from the bypass path.

## Configuring and Verifying Link Protection

The following sections describe the steps you must take to configure and verify link protection (many-to-one backup):

1. [Configure Link Protection on page 1117](#)
2. [Verify That Link Protection Is Up on page 1119](#)

### Configure Link Protection

**Purpose** Configuring link protection is a two-part process. The first part involves configuring link protection on the RSVP interface, and the second part sets link protection for any LSPs traversing the protected link that require use of the bypass path.

**Action** To configure link protection, follow these steps:

1. In configuration mode, go to the following hierarchy level:

```
[edit]
user@R1# edit protocols rsvp interface type-fpc/pic/port
```

For example:

```
[edit]
user@R1# edit protocols rsvp interface fe-0/1/0
```

2. Configure link protection for the interface:

```
[edit protocols rsvp interface type-fpc/pic/port]
user@R1# set link-protection
```

3. Verify the link protection configuration for the interface:

```
[edit protocols rsvp interface type-fpc/pic/port]
user@R1# show
```

4. Configure link protection for LSPs requiring use of the bypass path:

```
[edit protocols rsvp interface fe-0/1/0.0]
user@R1# top
[edit]
user@R1# edit protocols mpls label-switched-path lsp-path-name
```

For example:

```
[edit]
user@R1# edit protocols mpls label-switched-path lsp2-r1-to-r5
```

5. Configure link protection for the LSP:

```
[edit protocols mpls label-switched-path lsp-path-name]
user@R1# set link-protection
```

6. Verify and the link protection configuration for the LSP:

```
[edit protocols mpls label-switched-path lsp-path-name]
user@R1# show
user@R1# commit
```

**Sample Output** The following sample output illustrates the configuration of the link protection on ingress router R1 in the network shown in [Figure 92 on page 909](#):

```
[edit protocols rsvp]
user@R1# show
interface fe-0/1/0.0 {
    link-protection; #Protection for the RSVP interface
}

[edit protocols mpls label-switched-path lsp2-r1-to-r5]
user@R1# up

[edit protocols mpls]
user@R1# show
label-switched-path lsp2-r1-to-r5 { #Path level of the hierarchy
    #to 192.168.5.1;
    link-protection;

[edit protocols mpls]
user@R1# commit
commit complete
```

**Meaning** The sample output shows link protection for a specific interface. After link protection is configured, a bypass path is signaled to avoid that link in case of a failure. Having a bypass path available does not in itself provide protection for LSPs that traverse the protected link. You must configure link protection on the ingress router for each LSP that will benefit from the bypass path.

## Verify That Link Protection Is Up

**Purpose** When you verify link protection, you must check that the bypass LSP is up. You can also check the number of LSPs protected by the bypass. In the network shown in [Figure 92 on page 909](#), a bypass path should be up to protect the link between R1 and R2, or next-hop 10.0.12.14, and the two LSPs traversing the link, `lsp2-r1-to-r5` and `lsp1-r6-to-r0`.

**Action** To verify link protection (many-to-one backup), enter the following Junos OS CLI operational mode commands on the ingress router:

```
user@host> show mpls lsp extensive
user@host> show rsvp session detail
user@host> show rsvp interface
```

## Sample Output

```
user@R1> show mpls lsp extensive | no-more
Ingress LSP: 1 sessions

192.168.5.1
  From: 192.168.1.1, State: Up, ActiveRoute: 0, LSPname: lsp2-r1-to-r5
  ActivePath: via-r2 (primary)
  Link protection desired
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary via-r2 State: Up
    SmartOptimizeTimer: 180
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 3)
    10.0.12.14 S 10.0.24.2 S 10.0.45.2 S
      Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):
        10.0.12.14(Label=101264) 10.0.24.2(Label=100736) 10.0.45.2(Label=3)
        6 Jun 16 14:06:33 Link-protection Up
        5 Jun 16 14:05:39 Selected as active path
        4 Jun 16 14:05:39 Record Route: 10.0.12.14(Label=101264)
        10.0.24.2(Label=100736) 10.0.45.2(Label=3)
        3 Jun 16 14:05:39 Up
        2 Jun 16 14:05:39 Originate Call
        1 Jun 16 14:05:39 CSPF: computation result accepted
    Created: Fri Jun 16 14:05:38 2006
  Total 1 displayed, Up 1, Down 0

[...Output truncated...]

Transit LSP: 2 sessions

192.168.0.1
  From: 192.168.6.1, LSPstate: Up, ActiveRoute: 0
  LSPname: lsp1-r6-to-r0, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 101296
  Resv style: 1 SE, Label in: 100192, Label out: 101296
  Time left: 116, Since: Mon Jun 19 10:26:32 2006
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 58739 protocol 0
  Link protection desired
  Type: Link protected LSP, using Bypass->10.0.12.14
    1 Jun 19 10:26:32 Link protection up, using Bypass->10.0.12.14
  PATH rcvfrom: 10.0.16.2 (so=0/0/3.0) 579 pkts
```

```
Adspec: received MTU 1500 sent MTU 1500
PATH sentto: 10.0.12.14 (fe-0/1/0.0) 474 pkts
RESV rcvfrom: 10.0.12.14 (fe-0/1/0.0) 501 pkts
Explct route: 10.0.12.14 10.0.24.2 10.0.45.2 10.0.50.2
Record route: 10.0.16.2 <self> 10.0.12.14 10.0.24.2 10.0.45.2 10.0.50.2
[...Output truncated...]
```

**Meaning** The sample output from ingress router **R1** shows that **lsp2-r1-to-r5** and **lsp1-r6-to-r0** have link protection up, and both LSPs are using the bypass path, **10.0.12.14**. However, the **show mpls lsp** command does not list the bypass path. For information about the bypass path, use the **show rsvp session** command.

```

Sample Output user@R1> show rsvp session detail
Ingress RSVP: 2 sessions
192.168.2.1
  From: 192.168.1.1, LSPstate: Up, ActiveRoute: 0
  LSPname: Bypass->10.0.12.14
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 101456
  Resv style: 1 SE, Label in: -, Label out: 101456
  Time left: -, Since: Fri May 26 18:38:09 2006
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 18709 protocol 0
  Type: Bypass LSP
    Number of data route tunnel through: 2
    Number of RSVP session tunnel through: 0
  PATH rcvfrom: localclient
  Adspec: sent MTU 1500
  Path MTU: received 1500
  PATH sentto: 10.0.17.14 (fe-0/1/1.0) 51939 pkts
  RESV rcvfrom: 10.0.17.14 (fe-0/1/1.0) 55095 pkts
  Explct route: 10.0.17.14 10.0.27.1
  Record route: <self> 10.0.17.14 10.0.27.1

192.168.5.1
  From: 192.168.1.1, LSPstate: Up, ActiveRoute: 0
  LSPname: lsp2-r1-to-r5, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 101264
  Resv style: 1 SE, Label in: -, Label out: 101264
  Time left: -, Since: Fri Jun 16 14:05:39 2006
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 18724 protocol 0
  Link protection desired
  Type: Link protected LSP
  PATH rcvfrom: localclient
  Adspec: sent MTU 1500
  Path MTU: received 1500
  PATH sentto: 10.0.12.14 (fe-0/1/0.0) 8477 pkts
  RESV rcvfrom: 10.0.12.14 (fe-0/1/0.0) 8992 pkts
  Explct route: 10.0.12.14 10.0.24.2 10.0.45.2
  Record route: <self> 10.0.12.14 10.0.24.2 10.0.45.2
Total 2 displayed, Up 2, Down 0

Egress RSVP: 1 sessions
192.168.1.1
  From: 192.168.5.1, LSPstate: Up, ActiveRoute: 0
  LSPname: r5-to-r1, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: -
  Resv style: 1 FF, Label in: 3, Label out: -
  Time left: 159, Since: Mon May 22 22:08:16 2006
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 64449 protocol 0
  PATH rcvfrom: 10.0.17.14 (fe-0/1/1.0) 63145 pkts
  Adspec: received MTU 1500
  PATH sentto: localclient
  RESV rcvfrom: localclient
  Record route: 10.0.59.1 10.0.79.2 10.0.17.14 <self>
Total 1 displayed, Up 1, Down 0
Transit RSVP: 2 sessions

```

```

192.168.0.1
  From: 192.168.6.1, LSPstate: Up, ActiveRoute: 0
  LSPname: lsp1-r6-to-r0, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 101296
  Resv style: 1 SE, Label in: 100192, Label out: 101296
  Time left: 129, Since: Mon Jun 19 10:26:32 2006
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 58739 protocol 0
  Link protection desired
  Type: Link protected LSP
  PATH rcvfrom: 10.0.16.2 (so-0/0/3.0) 3128 pkts
  Adspec: received MTU 1500 sent MTU 1500
  PATH sentto: 10.0.12.14 (fe-0/1/0.0) 2533 pkts
  RESV rcvfrom: 10.0.12.14 (fe-0/1/0.0) 2685 pkts
  Explct route: 10.0.12.14 10.0.24.2 10.0.45.2 10.0.50.2
  Record route: 10.0.16.2 <self> 10.0.12.14 10.0.24.2 10.0.45.2 10.0.50.2

192.168.6.1
  From: 192.168.0.1, LSPstate: Up, ActiveRoute: 0
  LSPname: r0-to-r6, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 3
  Resv style: 1 FF, Label in: 100128, Label out: 3
  Time left: 143, Since: Thu May 25 12:30:26 2006
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 4111 protocol 0
  PATH rcvfrom: 10.0.17.14 (fe-0/1/1.0) 57716 pkts
  Adspec: received MTU 1500 sent MTU 1500
  PATH sentto: 10.0.16.2 (so-0/0/3.0) 54524 pkts
  RESV rcvfrom: 10.0.16.2 (so-0/0/3.0) 50534 pkts
  Explct route: 10.0.16.2
  Record route: 10.0.50.2 10.0.59.1 10.0.79.2 10.0.17.14 <self> 10.0.16.2
Total 2 displayed, Up 2, Down 0

```

**Meaning** The sample output from ingress router **R1** shows the ingress, egress, and transit LSPs for **R1**. Some information is similar to that found in the **show mpls lsp** command. However, because link protection is an RSVP feature, information about bypass paths is provided. The bypass path appears as a separate RSVP ingress session for the protected interface, as indicated by the **Type** field.

The bypass path name is automatically generated. By default, the name appears as **Bypass > interface-address**, where the interface address is the next downstream router's interface (**10.0.12.14**). The explicit route **10.0.17.14 10.0.27.1** for the session shows **R7** as the transit node and **R2** as the egress node.

Within the ingress RSVP section of the output, the LSP originating at **R1** (**lsp2-r1-to-r5**) is shown requesting link protection. Since a bypass path is in place to protect the downstream link, **lsp2-r1-to-r5** is associated with the bypass, as indicated by the **Link protected LSP** field.

The egress section of the output shows the return LSP **r5-to-r1**, which is not protected.

The transit section of the output shows link protection requested by **lsp1-r6-to-r0**. Since a bypass path is in place to protect the downstream link, **lsp1-r6-to-r0** is associated with the bypass, as indicated by the **Link protected LSP** field. Also included in the transit section of the output is the return LSP **r0-to-r6**, which is not protected.



**Sample Output** `user@R1> show rsvp interface`

```

RSVP interface: 4 active

```

Interface	State	Active resv	Subscription	Static BW	Available BW	Reserved BW	Highwater mark
fe-0/1/0.0	Up	2	100%	100Mbps	100Mbps	0bps	35Mbps
fe-0/1/1.0	Up	1	100%	100Mbps	100Mbps	0bps	0bps
fe-0/1/2.0	Up	0	100%	100Mbps	100Mbps	0bps	0bps
so-0/0/3.0	Up	1	100%	155.52Mbps	155.52Mbps	0bps	0bps

**Meaning** The sample output from ingress router **R1** shows the number of LSPs going through the interfaces configured on **R1**. The **Active resv** field shows the number of LSPs for each interface. For example, interface **fe-0/1/0.0** between **R1** and **R2** has two active reservations, **lsp1-r6-to-r0** and **lsp2-r1-to-r5**; interface **fe-0/1/1.0** between **R1** and **R7** has one, the bypass (**10.0.12.14**); interface **fe-0/1/2.0** between **R6** and **R1** has no LSP reservations; and interface **so-0/0/3.0** between **R6** and **R1** has one LSP reservation, **lsp1-r6-to-r0**.

## Configure Node-Link Protection

Configuring node-link protection is a two-part process. The first part involves configuring node-link protection for any LSPs traversing the protected node that require use of the bypass path, and the second part sets link protection on the outgoing RSVP interface on routers in the LSP.

**Action** To configure node-link protection, follow these steps:

1. In configuration mode, go to the following hierarchy level:  

```

[edit]
user@R1# edit protocols mpls label-switched-path lsp-path-name

```

For example:

```

[edit]
user@R1# edit protocols mpls label-switched-path lsp2-r1-to-r5

```

2. Configure node-link protection for the LSP:  

```

[edit protocols mpls label-switched-path lsp-path-name]
user@R1# set node-link-protection

```
3. Verify the node-link protection configuration for the LSP:  

```

[edit protocols mpls label-switched-path lsp-path-name]
user@R1# show

```

4. Configure link protection for the interface:  

```

[edit protocols]
user@R1# edit protocols rsvp interface interface-name

```

For example:

```

[edit protocols]
user@R1# edit protocols rsvp interface fe-0/1/0

```

5. Configure link protection:

```
[edit protocols rsvp interface interface-name]  
user@R1# set link-protection
```

6. Verify the link protection configuration for the interface, and commit both configurations:

```
[edit protocols rsvp interface interface-name]  
user@R1# show  
user@R1# commit
```

7. Repeat Step 1 through Step 3 on any other ingress routers that have LSPs requiring use of the bypass path.
8. Repeat Step 4 and Step 5 on routers with outgoing interfaces in the LSP.

**Sample Output** The following sample output shows the configuration of node-link protection on ingress router R1 in the network shown in [Figure 92 on page 909](#):

```
[edit protocols mpls label-switched-path lsp2-r1-to-r5]  
user@R1# up  
  
[edit protocols mpls]  
user@R1# show  
label-switched-path lsp2-r1-to-r5 { #Label-switched-path level of the hierarchy  
  
    to 192.168.5.1;  
    node-link-protection; #LSP node-link protection  
  
[edit protocols rsvp]  
user@R1# show  
interface fe-0/1/0.0 {  
    link-protection; #Link protection for the RSVP interface  
}  
  
[edit protocols rsvp]  
user@R1# commit  
commit complete
```

**Meaning** The sample output shows the configuration of node-link protection for an LSP. After node-link protection is configured, bypass paths are signaled to avoid the protected link or node in case of failure. Having bypass paths available does not in itself provide protection for LSPs that traverse the protected node. You must include the **node-link-protection** statement on the ingress router for each LSP that will benefit from the bypass path.

---

## Configuring and Verifying Node-Link Protection

The following section describes the steps you must take to configure and verify many-to-one backup.

1. [Configure Node-Link Protection on page 1125](#)
2. [Verify That Node-Link Protection Is Up on page 1126](#)

## Configure Node-Link Protection

Configuring node-link protection is a two-part process. The first part involves configuring node-link protection for any LSPs traversing the protected node that require use of the bypass path, and the second part sets link protection on the outgoing RSVP interface on routers in the LSP.

**Action** To configure node-link protection, follow these steps:

1. In configuration mode, go to the following hierarchy level:

```
[edit]
user@R1# edit protocols mpls label-switched-path lsp-path-name
```

For example:

```
[edit]
user@R1# edit protocols mpls label-switched-path lsp2-r1-to-r5
```

2. Configure node-link protection for the LSP:

```
[edit protocols mpls label-switched-path lsp-path-name]
user@R1# set node-link-protection
```

3. Verify the node-link protection configuration for the LSP:

```
[edit protocols mpls label-switched-path lsp-path-name]
user@R1# show
```

4. Configure link protection for the interface:

```
[edit protocols]
user@R1# edit protocols rsvp interface interface-name
```

For example:

```
[edit protocols]
user@R1# edit protocols rsvp interface fe-0/1/0
```

5. Configure link protection:

```
[edit protocols rsvp interface interface-name]
user@R1# set link-protection
```

6. Verify the link protection configuration for the interface, and commit both configurations:

```
[edit protocols rsvp interface interface-name]
user@R1# show
user@R1# commit
```

7. Repeat Step 1 through Step 3 on any other ingress routers that have LSPs requiring use of the bypass path.
8. Repeat Step 4 and Step 5 on routers with outgoing interfaces in the LSP.

**Sample Output** The following sample output shows the configuration of node-link protection on ingress router R1 in the network shown in [Figure 92 on page 909](#):

```
[edit protocols mpls label-switched-path lsp2-r1-to-r5]
user@R1# up

[edit protocols mpls]
user@R1# show
label-switched-path lsp2-r1-to-r5 { #Label-switched-path level of the hierarchy

    to 192.168.5.1;
    node-link-protection; #LSP node-link protection

[edit protocols rsvp]
user@R1# show
interface fe-0/1/0.0 {
    link-protection; #Link protection for the RSVP interface
}

[edit protocols rsvp]
user@R1# commit
commit complete
```

**Meaning** The sample output shows the configuration of node-link protection for an LSP. After node-link protection is configured, bypass paths are signaled to avoid the protected link or node in case of failure. Having bypass paths available does not in itself provide protection for LSPs that traverse the protected node. You must include the **node-link-protection** statement on the ingress router for each LSP that will benefit from the bypass path.

## Verify That Node-Link Protection Is Up

**Purpose** After you configure node-link protection, you must check that bypass paths are up. You can also check the number of LSPs protected by the bypass paths. In the network shown in [Figure 91 on page 904](#), two bypass paths should be up: one next-hop bypass path protecting the link between R1 and R2 (or next-hop 10.0.12.14), and a next-next-hop bypass path avoiding R2.

**Action** To verify node-link protection (many-to-one backup), enter the following Junos OS CLI operational mode commands on the ingress router. You can also issue the commands on transit routers and other routers used in the bypass path for slightly different information.

```
show mpls lsp (See Sample Output on page ?)
show mpls lsp extensive (See Sample Output on page 898)
show rsvp interface (See Sample Output on page 899)
show rsvp interface extensive (See Sample Output on page 900)
show rsvp session detail (See Sample Output on page 901)
```

## Sample Output

```
user@R1> show mpls lsp
Ingress LSP: 1 sessions
```

To	From	State	Rt	ActivePath	P	LSPname
----	------	-------	----	------------	---	---------

```

192.168.5.1    192.168.1.1    Up    0 via-r2          *    lsp2-r1-to-r5
Total 1 displayed, Up 1 , Down 0

```

#### Egress LSP: 1 sessions

To	From	State	Rt	Style	Labelin	Labelout	LSPName
192.168.1.1	192.168.5.1	Up	0	1 FF	3		- r5-to-r1

Total 1 displayed, Up 1 , Down 0

#### Transit LSP: 2 sessions

To	From	State	Rt	Style	Labelin	Labelout	LSPName
192.168.0.1	192.168.6.1	Up	0	1 FF	100464	101952	lsp1-r6-to-r0
192.168.6.1	192.168.0.1	Up	0	1 FF	100448	3	r0-to-t6

Total 2 displayed, Up 2, Down 0

**Meaning** Sample output from **R1** for the **show mpls lsp** command shows a brief description of the state of configured and active LSPs for which **R1** is the ingress, transit, and egress router. All LSPs are up. **R1** is the ingress router for **lsp2-r1-to-r5**, and the egress router for return LSP **r5-to-r1**. Two LSPs transit **R1**, **lsp1-r6-to-r0** and the return LSP **r0-to-t6**. For more detailed information about the LSP, include the **extensive** option when you issue the **show mpls lsp** command.

```

Sample Output user@R1> show mpls lsp extensive
Ingress LSP: 1 sessions

192.168.5.1
  From: 192.168.1.1, State: Up , ActiveRoute: 0, LSPname: lsp2-r1-to-r5
  ActivePath: via-r2 (primary)
  Node/Link protection desired
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary via-r2 State: Up
    SmartOptimizeTimer: 180
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 3)
  10.0.12.14 S 10.0.24.2 S 10.0.45.2 S
    Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):

        10.0.12.14(Label=101872) 10.0.24.2(Label=101360) 10.0.45.2(Label=3)
    11 Jul 11 14:30:58 Link-protection Up
    10 Jul 11 14:28:28 Selected as active path
    [...Output truncated...]
    Created: Tue Jul 11 14:22:58 2006
  Total 1 displayed, Up 1, Down 0

Egress LSP: 1 sessions

192.168.1.1
  From: 192.168.5.1, LSPstate: Up, ActiveRoute: 0
  LSPname: r5-to-r1, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: -
  Resv style: 1 FF, Label in: 3, Label out: -
  Time left: 146, Since: Tue Jul 11 14:28:36 2006
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 29228 protocol 0
  PATH rcvfrom: 10.0.12.14 (fe-0/1/0.0) 362 pkts
  Adspec: received MTU 1500
  PATH sentto: localclient
  RESV rcvfrom: localclient
  Record route: 10.0.45.2 10.0.24.2 10.0.12.14 <self>
  Total 1 displayed, Up 1, Down 0

Transit LSP: 2 sessions

192.168.0.1
  From: 192.168.6.1, LSPstate: Up, ActiveRoute: 0
  LSPname: lsp1-r6-to-r0, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 101952
  Resv style: 1 SE, Label in: 100464, Label out: 101952
  Time left: 157, Since: Tue Jul 11 14:31:38 2006
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 11131 protocol 0
  Node/Link protection desired
  Type: Node/Link protected LSP, using Bypass->10.0.12.14->10.0.24.2
    1 Jul 11 14:31:38 Node protection up, using Bypass->10.0.12.14->10.0.24.2
  PATH rcvfrom: 10.0.16.2 (so-0/0/3.0) 509 pkts
  Adspec: received MTU 1500 sent MTU 1500
  PATH sentto: 10.0.12.14 (fe-0/1/0.0) 356 pkts
  RESV rcvfrom: 10.0.12.14 (fe-0/1/0.0) 358 pkts
  Explct route: 10.0.12.14 10.0.24.2 10.0.45.2 10.0.50.2
  Record route: 10.0.16.2 <self> 10.0.12.14 10.0.24.2 10.0.45.2 10.0.50.2

```

```

192.168.6.1
  From: 192.168.0.1, LSPstate: Up, ActiveRoute: 0
  LSPname: r0-to-t6, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 3
  Resv style: 1 FF, Label in: 100448, Label out: 3
  Time left: 147, Since: Tue Jul 11 14:31:36 2006
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 23481 protocol 0
  PATH rcvfrom: 10.0.12.14 (fe-0/1/0.0) 358 pkts
  Adspec: received MTU 1500 sent MTU 1500
  PATH sentto: 10.0.16.2 (so-0/0/3.0) 350 pkts
  RESV rcvfrom: 10.0.16.2 (so-0/0/3.0) 323 pkts
  Explct route: 10.0.16.2
  Record route: 10.0.50.2 10.0.45.2 10.0.24.2 10.0.12.14 <self> 10.0.16.2
Total 2 displayed, Up 2, Down 0

```

**Meaning** Sample output from R1 for the **show mpls lsp extensive** command shows detailed information about all LSPs for which R1 is the ingress, egress, or transit router, including all past state history and the reason why an LSP failed. All LSPs are up. The main two LSPs **lsp2-r1-to-r5** and **lsp1-r6-to-r0** have node-link protection as indicated by the **Node/Link protection desired** field in the ingress and transit sections of the output. In the ingress section of the output, the **Link-protection Up** field shows that **lsp2-r1-to-r5** has link protection up. In the transit section of the output, the **Type: Node/Link protected LSP** field shows that **lsp1-r6-to-r0** has node-link protection up, and in case of failure will use the bypass **LSP Bypass->10.0.12.14->10.0.24.2**.

**Sample Output**

```

user@R1> show rsvp interface
RSVP interface: 4 active

```

Interface	State	Active resv	Subscr-ption	Static BW	Available BW	Reserved BW	Highwater mark
fe-0/1/0.0	Up	2	100%	100Mbps	100Mbps	0bps	0bps
fe-0/1/1.0	Up	1	100%	100Mbps	100Mbps	0bps	0bps
fe-0/1/2.0	Up	0	100%	100Mbps	100Mbps	0bps	0bps
so-0/0/3.0	Up	1	100%	155.52Mbps	155.52Mbps	0bps	0bps

**Meaning** Sample output from R1 for the **show rsvp interface** command shows four interfaces enabled with RSVP (**Up**). Interface **fe-0/1/0.0** has two active RSVP reservations (**Active resv**) that might indicate sessions for the two main LSPs, **lsp1-r6-to-r0** and **lsp2-r1-to-r5**. Interface **fe-0/1/0.0** is the connecting interface between R1 and R2, and both LSPs are configured with a strict path through **fe-0/1/0.0**. For more detailed information about what is happening on interface **fe-0/1/0.0**, issue the **show rsvp interface extensive** command.

**Sample Output**

```

user@R1> show rsvp interface extensive
RSVP interface: 3 active
fe-0/1/0.0 Index 67, State Ena/Up
  NoAuthentication, NoAggregate, NoReliable, LinkProtection
  HelloInterval 9(second)
  Address 10.0.12.13
  ActiveResv 2, PreemptionCnt 0, Update threshold 10%
  Subscription 100%,
  bc0 = ct0, StaticBW 100Mbps
  ct0: StaticBW 100Mbps, AvailableBW 100Mbps
    MaxAvailableBW 100Mbps = (bc0*subscription)
    ReservedBW [0] 0bps[1] 0bps[2] 0bps[3] 0bps[4] 0bps[5] 0bps[6] 0bps[7] 0bps
  Protection: On, Bypass: 2, LSP: 2, Protected LSP: 2, Unprotected LSP: 0
    2 Jul 14 14:49:40 New bypass Bypass->10.0.12.14
    1 Jul 14 14:49:34 New bypass Bypass->10.0.12.14->10.0.24.2
  Bypass: Bypass->10.0.12.14, State: Up, Type: LP, LSP: 0, Backup: 0
    3 Jul 14 14:49:42 Record Route: 10.0.17.14 10.0.27.1
    2 Jul 14 14:49:42 Up
    1 Jul 14 14:49:42 CSPF: computation result accepted
  Bypass: Bypass->10.0.12.14->10.0.24.2, State: Up, Type: NP, LSP: 2, Backup: 0
    4 Jul 14 14:50:04 Record Route: 10.0.17.14 10.0.79.2 10.0.59.1 10.0.45.1
    3 Jul 14 14:50:04 Up
    2 Jul 14 14:50:04 CSPF: computation result accepted
    1 Jul 14 14:49:34 CSPF failed: no route toward 10.0.24.2
[...Output truncated...]

```

**Meaning** Sample output from R1 for the **show rsvp interface extensive** command shows more detailed information about the activity on all RSVP interfaces (3). However, only output for **fe-0/1/0.0** is shown. Protection is enabled (**Protection: On**), with two bypass paths (**Bypass: 2**) protecting two LSPs (**Protected LSP: 2**). All LSPs are protected, as indicated by the **Unprotected LSP: 0** field. The first bypass **Bypass->10.0.12.14** is a link protection bypass path (**Type: LP**), protecting the link between R1 and R2 **fe-0/1/0.0**. The second bypass path **10.0.12.14->10.0.24.2** is a node-link protected LSP, avoiding R2 in case of node failure.



```

Sample Output user@R1> show rsvp session detail
Ingress RSVP: 2 sessions

192.168.4.1
  From: 192.168.1.1, LSPstate: Up, ActiveRoute: 0
  LSPname: Bypass->10.0.12.14->10.0.24.2
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 102000
  Resv style: 1 SE, Label in: -, Label out: 102000
  Time left: -, Since: Tue Jul 11 14:30:53 2006
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 60120 protocol 0
  Type: Bypass LSP
  Number of data route tunnel through: 2
  Number of RSVP session tunnel through: 0
  PATH rcvfrom: localclient
  Adspec: sent MTU 1500
  Path MTU: received 1500
  PATH sentto: 10.0.17.14 (fe-0/1/1.0) 336 pkts
  RESV rcvfrom: 10.0.17.14 (fe-0/1/1.0) 310 pkts
  Explct route: 10.0.17.14 10.0.79.2 10.0.59.1 10.0.45.1
  Record route: <self> 10.0.17.14 10.0.79.2 10.0.59.1 10.0.45.1

192.168.5.1
  From: 192.168.1.1, LSPstate: Up, ActiveRoute: 0
  LSPname: lsp2-r1-to-r5, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 101872
  Resv style: 1 SE, Label in: -, Label out: 101872
  Time left: -, Since: Tue Jul 11 14:28:28 2006
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 2 receiver 60118 protocol 0
  Node/Link protection desired
  Type: Node/Link protected LSP
  PATH rcvfrom: localclient
  Adspec: sent MTU 1500
  Path MTU: received 1500
  PATH sentto: 10.0.12.14 (fe-0/1/0.0) 344 pkts
  RESV rcvfrom: 10.0.12.14 (fe-0/1/0.0) 349 pkts
  Explct route: 10.0.12.14 10.0.24.2 10.0.45.2
  Record route: <self> 10.0.12.14 10.0.24.2 10.0.45.2
Total 2 displayed, Up 2, Down 0

Egress RSVP: 1 sessions

192.168.1.1
  From: 192.168.5.1, LSPstate: Up, ActiveRoute: 0
  LSPname: r5-to-r1, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: -
  Resv style: 1 FF, Label in: 3, Label out: -
  Time left: 147, Since: Tue Jul 11 14:28:36 2006
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 29228 protocol 0
  PATH rcvfrom: 10.0.12.14 (fe-0/1/0.0) 348 pkts
  Adspec: received MTU 1500
  PATH sentto: localclient
  RESV rcvfrom: localclient
  Record route: 10.0.45.2 10.0.24.2 10.0.12.14 <self>
Total 1 displayed, Up 1, Down 0

```

**Transit RSVP: 2 sessions**

```

192.168.0.1
  From: 192.168.6.1, LSPstate: Up, ActiveRoute: 0
  LSPname: lsp1-r6-to-r0, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 101952
  Resv style: 1 SE, Label in: 100464, Label out: 101952
  Time left: 134, Since: Tue Jul 11 14:31:38 2006
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 11131 protocol 0
  Node/Link protection desired
  Type: Node/Link protected LSP
  PATH rcvfrom: 10.0.16.2 (so-0/0/3.0) 488 pkts
  Adspec: received MTU 1500 sent MTU 1500
  PATH sentto: 10.0.12.14 (fe-0/1/0.0) 339 pkts
  RESV rcvfrom: 10.0.12.14 (fe-0/1/0.0) 343 pkts
  Explct route: 10.0.12.14 10.0.24.2 10.0.45.2 10.0.50.2
  Record route: 10.0.16.2 <self> 10.0.12.14 10.0.24.2 10.0.45.2 10.0.50.2

192.168.6.1
  From: 192.168.0.1, LSPstate: Up, ActiveRoute: 0
  LSPname: r0-to-t6, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 3
  Resv style: 1 FF, Label in: 100448, Label out: 3
  Time left: 158, Since: Tue Jul 11 14:31:36 2006
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 23481 protocol 0
  PATH rcvfrom: 10.0.12.14 (fe-0/1/0.0) 344 pkts
  Adspec: received MTU 1500 sent MTU 1500
  PATH sentto: 10.0.16.2 (so-0/0/3.0) 337 pkts
  RESV rcvfrom: 10.0.16.2 (so-0/0/3.0) 310 pkts
  Explct route: 10.0.16.2
  Record route: 10.0.50.2 10.0.45.2 10.0.24.2 10.0.12.14 <self> 10.0.16.2
Total 2 displayed, Up 2, Down 0

```

**Meaning** Sample output from **R1** shows detailed information about the RSVP sessions active on **R1**. All sessions are up, with two ingress sessions, one egress session, and two transit sessions.

Within the ingress section, the first session is a bypass path, as indicated by the **Type: Bypass LSP** field; and the second session is a protected LSP (**lsp2-r1-to-r5**) originating on **R1**, as indicated by the **Type: Node/Link protected LSP** field.

**Conclusion** Multiprotocol Label Switching (MPLS) label-switched path (LSP) link protection and node-link protection are facility-based methods used to reduce the amount of time needed to reroute LSP traffic. These protection methods are often compared to fast reroute—the other Junos OS LSP protection method.

While fast reroute protects LSPs on a one-to-one basis, link protection and node-link protection protect multiple LSPs by using a single, logical bypass LSP. Link protection provides robust backup support for a link, node-link protection bypasses a node or a link, and both types of protection are designed to interoperate with other vendor equipment.

Such functionality makes link protection and node-link protection excellent choices for scalability, redundancy, and performance in MPLS-enabled networks.


**Related Information** For additional information about MPLS fast reroute and MPLS protection methods, see the following:

- *Junos Feature Guide*
- *Junos MPLS Applications Configuration Guide*
- Semeria, Chuck. *RSVP Signaling Extensions for MPLS Traffic Engineering*. White paper. 2002
- Semeria, Chuck. *IP Dependability: Network Link and Node Protection*. White paper. 2002
- RFC 4090, *Fast Reroute Extensions to RSVP-TE for LSP Tunnels*

## Configure IS-IS as the IGP

Before you can run MPLS on your network, you should have an IGP running on all specified routers and interfaces. The IGP can be either IS-IS or OSPF. For the steps to configure OSPF, see “[Configure OSPF as the IGP](#)” on page 1140.

Figure 112: IS-IS Network Topology

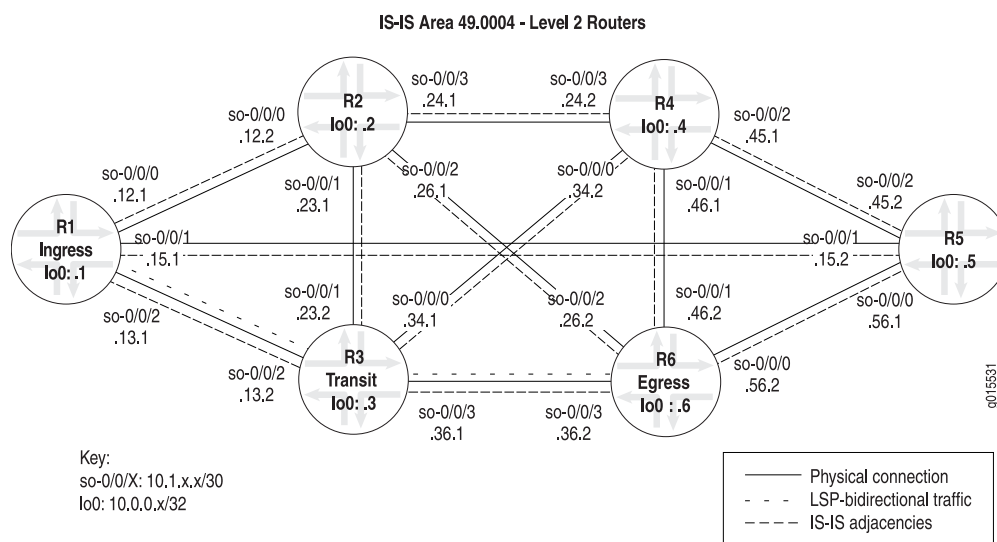

The IS-IS IGP in the MPLS network in [Figure 112 on page 1133](#) consists of the following:

- All routers are configured for Level 2, therefore default CSPF LSPs can occur.
- All routers are in IS-IS area 49.0004. However, the routers in this network could be in any area because Level 2 adjacencies occur between all directly connected Level 2 routers regardless of which area they are in.
- Level 2 adjacencies between all directly connected Level 2 routers as follows:

- R1 is adjacent to R2, R3, and R5
- R2 is adjacent to R1, R3, R4, and R6
- R3 is adjacent to R1, R2, R4, and R6
- R4 is adjacent to R2, R3, R5, and R6
- R5 is adjacent to R1, R4, and R6
- R6 is adjacent to R2, R3, R4, and R5

When you configure IS-IS as the IGP, you must enable IS-IS on the router, configure International Organization for Standardization (ISO) addressing, and enable IS-IS on all router interfaces.

You can enable IS-IS throughout the rest of the network by repeating Step 1, “[Enable IS-IS on Routers in Your Network](#)” on page 1134 through Step 3, “[Enable IS-IS on Router Interfaces](#)” on page 1137 as appropriate on other routers until all routers and interfaces establish IS-IS adjacencies.

To configure IS-IS and establish IS-IS adjacencies, follow these steps:

1. [Enable IS-IS on Routers in Your Network](#) on page 1134
2. [Configure ISO Addressing](#) on page 1136
3. [Enable IS-IS on Router Interfaces](#) on page 1137
4. [Verify That IS-IS Adjacencies Are Established](#) on page 1138

## Enable IS-IS on Routers in Your Network

**Action** To enable IS-IS on routers in your network, follow these steps:

1. In configuration mode, go to the following hierarchy level:  

```
[edit]  
user@host# edit protocols isis
```
2. Disable Level 1 if appropriate for your network:  

```
[edit protocols isis]  
user@host# set level 1 disable
```
3. Configure the interface:  

```
[edit protocols isis]  
user@host# edit interface type-fpc/pic/port level level-number metric metric
```
4. Disable the management interface if you have included the **interface all** statement, as shown in [Sample Output 2 on page 1135](#):  

```
[edit protocols isis]  
user@host# set interface fxp0.0 disable
```
5. Include the loopback interface (**lo0**) if you have listed all interfaces separately, as shown in [Sample Output 1 on page 1135](#):  

```
[edit protocols isis]  
user@host# set interface lo0.0
```

6. Set the loopback interface (lo0) to passive:

```
[edit protocols isis]
user@R1# set interface lo0 passive
```

7. Verify and commit the configuration:

```
user@host# show
user@host# commit
```

### Sample Output 1

```
user@R1> edit
Entering configuration mode

[edit]
user@R1# edit protocols isis

[edit protocols isis]
user@R1# set level 1 disable

[edit protocols isis]
user@host# edit interface all level 2 metric 10

[edit protocols isis]
user@host# set interface lo0.0

[edit protocols isis]
user@host# set interface lo0 passive

[edit protocols isis]
user@R1# show
level 1 disable;
interface so-0/0/0.0;
interface so-0/0/1.0;
interface so-0/0/2.0;
interface lo0.0;
    passive;
}

[edit protocols isis]
user@R1# commit
commit complete
```

### Sample Output 2

```
[edit protocols isis]
user@R6# show
level 1 disable;
interface all {
    level 2 metric 15;
}
interface fxp0.0 {
    disable;
}
interface lo0.0 {
    passive;
}
```

**Meaning** Sample Output 1 shows that IS-IS Level 1 is disabled, making this a Level 2 router. When all routers in the network are running at one IS-IS level (Level 2), default CSPF LSPs can occur.

Because **R1** in Sample Output 1 has all IS-IS enabled interfaces listed, including the loopback interface (**lo0**), you do not need to include the **disable** statement for the management interface (**fxp0**). All interfaces have unit number **0**, the default if a unit number is not specified. When you configure an interface at the **[edit protocols isis]** hierarchy level, and you do not include the logical unit, the default **0** is appended to the interface name, for example, **so-0/0/1.0**.

Sample Output 2 does not list the interfaces configured with IS-IS; instead, all interfaces are configured, including the loopback interface (**lo0**) and the management interface (**fxp0**). Therefore, you do not need to include a separate statement for the loopback (**lo0**) interface. However, in this instance, it is best practice to disable the management interface (**fxp0**) so that IS-IS packets are not sent over it. If you do not disable the management interface (**fxp0**) when you include the **interface-all** statement, the IS-IS protocol can form adjacencies over the management backbone, but traffic does not flow because transit traffic does not go out of the management interface.

Sample Output 2 also shows that all interfaces on **R6** are configured with a metric of **15**. A metric is not required to configure IS-IS on your interfaces. The default metric value is **10** (with the exception of the loopback [**lo0**] interface, which has a default metric of **0**). A metric is included to demonstrate that you can configure a metric for IS-IS if the default (**10**) is not appropriate for your network.

Both sample outputs show the **passive** statement included in the configuration of the loopback (**lo0**) interface. Including the **passive** statement is considered best practice and ensures the following:

- Protocols are not run over the loopback (**lo0**) interface
- When the router ID (RID) is configured manually, ensures that the loopback (**lo0**) interface is advertised to other networks.



**NOTE:** It is considered best practice to configure the RID manually to avoid duplicate RID problems.

---

## Configure ISO Addressing

**Purpose** For a router to support IS-IS, you must configure an ISO network entity title (NET) address on one of the router's interfaces, preferably the loopback interface (**lo0**).

**Action** To configure ISO addressing, follow these steps:

1. In configuration mode, go to the following hierarchy level:

```
[edit]
user@host# edit interfaces
```

2. Include a NET address for the loopback interface:

```
[edit interfaces]
user@host# set lo0 unit number family iso address address
```

3. Verify and commit the configuration:

```
user@host# show
user@host# commit
```

### Sample Output

```
user@R1> edit
Entering configuration mode

[edit]
user@R1# edit interfaces

[edit interfaces]
user@R1# set lo0 unit 0 family iso address 49.0004.1000.0000.0001.00

[edit interfaces]
user@R1# show
[...Output truncated...]
lo0 {
    unit 0 {
        family inet {
            address 10.0.0.1/32;
        }
        family iso {
            address 49.0004.1000.0000.0001.00;
        }
    }
}

[edit interfaces]
user@R1# commit
commit complete
```

**Meaning** The sample output shows that the loopback (**lo0**) interface is configured with the NET address **49.0004.1000.0000.0001.00**. The loopback interface (**lo0**) becomes a point of connection from the router to the IS-IS network. Every router in an IS-IS network must have at least one ISO NET address that identifies a point of connection to the IS-IS network. The NET address is generally configured on the loopback (**lo0**) interface. Routers that participate in multiple areas can have multiple NET addresses.

All the routers in the network share a Level 2 database containing identical information. A common Level 2 database occurs in this case because all adjacencies are Level 2, and all routers are within the same IS-IS area (**49.0004**). Level 2 LSP flooding reaches all routers in the network due to the presence of a single level. For more information on determining the NET address, see the *Junos Routing Protocols Configuration Guide*.

### Enable IS-IS on Router Interfaces

**Purpose** Enable reception and transmission of ISO protocol data units (PDUs) on each router interface in the network with the **family** statement, which identifies which protocol packets

are accepted into the interfaces. For example, valid IS-IS packets are dropped if the interface is not configured with the **family iso** statement.

**Action** To configure support for IS-IS on router interfaces in your network, follow these steps:

1. In configuration mode, go to the following hierarchy level:

```
[edit]
user@host# edit interfaces
```

2. Configure IS-IS:

```
[edit interfaces]
user@host# set type-fpc/pic/port unit number family iso
```

3. Verify and commit the configuration:

```
user@host# show
user@host# commit
```

### Sample Output

```
user@R1> edit
Entering configuration mode

[edit]
user@R1# edit interfaces

[edit interfaces]
user@R1# set so-0/0/2 unit 0 family iso

[edit interfaces]
user@R1# show
[...Output truncated...]
so-0/0/2 {
  unit 0 {
    family inet {
      address 10.1.13.1/30;
    }
    family iso;
  }
}

[edit interfaces]
user@R1# commit
commit complete
```

**Meaning** The sample output shows that the interface **so-0/0/2** is configured with IS-IS.

### Verify That IS-IS Adjacencies Are Established

**Purpose** After configuring IS-IS, you must verify that neighboring routers have formed adjacencies with each other.

**Action** To verify IS-IS adjacencies, enter the following Junos OS command-line interface (CLI) operational mode command:



```
user@host> show isis adjacency
```

## Sample Output

```
user@R1> show isis adjacency
```

Interface	System	L State	Hold (secs)	SNPA
so-0/0/0.0	R2	2 Up	25	
so-0/0/1.0	R5	2 Up	23	
so-0/0/2.0	R3	2 Up	20	

```
user@R3> show isis adjacency
```

Interface	System	L State	Hold (secs)	SNPA
so-0/0/0.0	R4	2 Up	25	
so-0/0/1.0	R2	2 Up	25	
so-0/0/2.0	R1	2 Up	26	
so-0/0/3.0	R6	2 Up	25	

```
user@R6> show isis adjacency
```

Interface	System	L State	Hold (secs)	SNPA
so-0/0/0.0	R5	2 Up	19	
so-0/0/1.0	R4	2 Up	22	
so-0/0/2.0	R2	2 Up	22	
so-0/0/3.0	R3	2 Up	19	

## Sample Output

```
user@R1> show isis adjacency
```

Interface	System	L State	Hold (secs)	SNPA
so-0/0/0.0	R2	2 Up	25	
so-0/0/1.0	R5	2 Up	23	
so-0/0/2.0	R3	2 Up	20	

```
user@R3> show isis adjacency
```

Interface	System	L State	Hold (secs)	SNPA
so-0/0/0.0	R4	2 Up	25	
so-0/0/1.0	R2	2 Up	25	
so-0/0/2.0	R1	2 Up	26	
so-0/0/3.0	R6	2 Up	25	

```
user@R6> show isis adjacency
```

Interface	System	L State	Hold (secs)	SNPA
so-0/0/0.0	R5	2 Up	19	
so-0/0/1.0	R4	2 Up	22	
so-0/0/2.0	R2	2 Up	22	
so-0/0/3.0	R3	2 Up	19	

**Meaning** The sample output from the ingress, transit, and egress routers shows that all routers in the network have formed IS-IS adjacencies.

## Verify That IS-IS Adjacencies Are Established

**Purpose** After configuring IS-IS, you must verify that neighboring routers have formed adjacencies with each other.

**Action** To verify IS-IS adjacencies, enter the following Junos OS command-line interface (CLI) operational mode command:

```
user@host> show isis adjacency
```

## Sample Output

```
user@R1> show isis adjacency
Interface      System      L State      Hold (secs) SNPA
so-0/0/0.0     R2           2 Up         25
so-0/0/1.0     R5           2 Up         23
so-0/0/2.0     R3           2 Up         20
```

```
user@R3> show isis adjacency
Interface      System      L State      Hold (secs) SNPA
so-0/0/0.0     R4           2 Up         25
so-0/0/1.0     R2           2 Up         25
so-0/0/2.0     R1           2 Up         26
so-0/0/3.0     R6           2 Up         25
```

```
user@R6> show isis adjacency
Interface      System      L State      Hold (secs) SNPA
so-0/0/0.0     R5           2 Up         19
so-0/0/1.0     R4           2 Up         22
so-0/0/2.0     R2           2 Up         22
so-0/0/3.0     R3           2 Up         19
```

## Sample Output

```
user@R1> show isis adjacency
Interface      System      L State      Hold (secs) SNPA
so-0/0/0.0     R2           2 Up         25
so-0/0/1.0     R5           2 Up         23
so-0/0/2.0     R3           2 Up         20
```

```
user@R3> show isis adjacency
Interface      System      L State      Hold (secs) SNPA
so-0/0/0.0     R4           2 Up         25
so-0/0/1.0     R2           2 Up         25
so-0/0/2.0     R1           2 Up         26
so-0/0/3.0     R6           2 Up         25
```

```
user@R6> show isis adjacency
Interface      System      L State      Hold (secs) SNPA
so-0/0/0.0     R5           2 Up         19
so-0/0/1.0     R4           2 Up         22
so-0/0/2.0     R2           2 Up         22
so-0/0/3.0     R3           2 Up         19
```


**Meaning** The sample output from the ingress, transit, and egress routers shows that all routers in the network have formed IS-IS adjacencies.

---

## Configure OSPF as the IGP

Before you can run MPLS on your network, you must have an IGP running on all specified routers and interfaces. The IGP can be either OSPF or IS-IS. For the steps to configure IS-IS, see [“Configure IS-IS as the IGP” on page 1133](#).

Figure 113: OSPF Network Topology

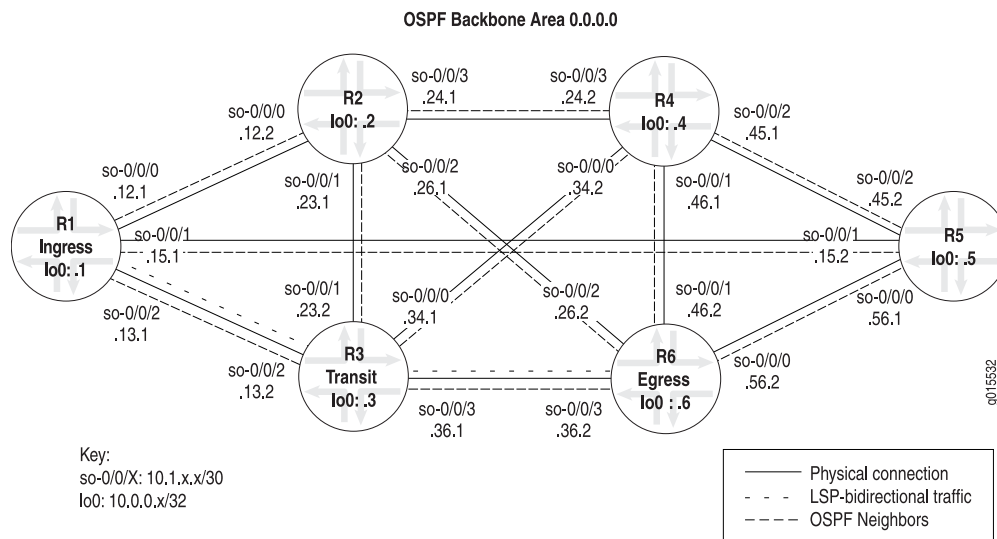

The OSPF IGP in the MPLS network in [Figure 112 on page 1133](#) consists of the following:

- All routers are configured for the backbone OSPF area 0.0.0.0.
- All routers have the RID manually configured to avoid possible problems when the OSPF RID changes; for example, when multiple loopback addresses are configured.
- All routers have traffic engineering enabled. When traffic engineering is enabled for OSPF, the SPF algorithm takes into account the various LSPs configured under MPLS and configures OSPF to generate link-state advertisements (LSAs) that carry traffic engineering parameters. These routes are installed into the primary routing table **inet.0**, but the LSPs are installed by default into the **inet.3** routing table.
- Adjacencies between all OSPF neighbors are as follows:
  - R1 is adjacent to R2, R3, and R5
  - R2 is adjacent to R1, R3, R4, and R6
  - R3 is adjacent to R1, R2, R4, and R6
  - R4 is adjacent to R2, R3, R5, and R6
  - R5 is adjacent to R1, R4, and R6
  - R6 is adjacent to R2, R3, R4, and R5

When you configure OSPF as the IGP, you must enable OSPF and traffic engineering on the router. We also recommend that you manually configure the RID and include the loopback interface (**lo0**) at the **[edit protocols ospf]** hierarchy level.

You can enable OSPF throughout the rest of the network by repeating this step as appropriate on other routers until all routers and interfaces establish OSPF neighbors.

To configure OSPF and establish OSPF neighbors, follow these steps:

1. [Enable OSPF on Routers in Your Network on page 1142](#)
2. [Verify That OSPF Neighbors Are Established on page 1144](#)

## Enable OSPF on Routers in Your Network

**Action** To enable OSPF on routers in your MPLS network, follow these steps:

1. In configuration mode, go to the following hierarchy level:  

```
[edit]
user@host# edit protocols ospf
```
2. Configure the area and the interface:  

```
[edit protocols ospf]
user@host# set area area-id interface type-fpc/pic/port
```
3. Disable the management interface if you have included the **interface all** statement in the previous step:  

```
[edit protocols ospf]
user@host# set interface fxp0.0 disable
```
4. Include the loopback (lo0) interface if you intend to manually configure the RID:  

```
[edit protocols ospf]
user@host# set area 0.0.0.0 interface lo0
```
5. Set the loopback interface (lo0) to passive:  

```
[edit protocols ospf]
user@host# set area 0.0.0.0 interface lo0 passive
```
6. Configure traffic engineering:  

```
[edit protocols ospf]
user@host# set traffic-engineering
```
7. Manually configure the RID at the [**routing-options**] hierarchy level:  

```
[edit]
user@host# edit routing-options
[edit routing-options]
user@host# set router-id router-id
```
8. Verify and commit the entire configuration:  

```
user@host# show
user@host# commit
```

## Sample Output

```
user@R6> edit
Entering configuration mode

[edit]
```

```

user@R6# edit protocols ospf

[edit protocols ospf]
user@R6# set area 0.0.0.0 interface so-0/0/0.0

[edit protocols ospf]
user@R6# set area 0.0.0.0 interface lo0

[edit protocols ospf]
user@R6# set area 0.0.0.0 interface lo0 passive

[edit protocols ospf]
user@R6# set traffic-engineering

[edit protocols ospf]
user@R6# show
traffic-engineering;
area 0.0.0.0 {
    interface so-0/0/0.0;
    interface so-0/0/1.0;
    interface so-0/0/2.0;
    interface so-0/0/3.0;
    interface lo0.0 {
        passive;
    }
}

[edit protocols ospf]
user@R6# commit
commit complete

[edit]
user@R6# edit routing-options

[edit routing-options]
user@R6# set router-id 10.0.0.6

[edit routing-options]
user@R6# show
[...Output truncated...]
router-id 10.0.0.6;
autonomous-system 65432;

[edit routing-options]
user@R6# commit
commit complete

```

**Meaning** The sample output shows that OSPF, with traffic engineering, is enabled on the interfaces on egress router **R6**. In addition, the RID is configured manually to avoid possible problems when the OSPF RID changes; for example, when multiple loopback addresses are configured. The RID uniquely identifies the router within the OSPF network. It is transmitted within the LSAs used to populate the link-state database and calculate the shortest-path tree. In a link-state network, it is important that two routers do not share the same RID value, otherwise IP routing problems may occur.

The sample outputs also shows the **passive** statement included in the configuration of the loopback (**lo0**) interface. Including the **passive** statement is considered best practice and ensures the following:

- Protocols are not run over the loopback (**lo0**) interface
- When the router ID (RID) is configured manually, ensures that the loopback (**lo0**) interface is advertised to other networks.

## Verify That OSPF Neighbors Are Established

**Purpose** After configuring OSPF, you must verify that neighboring routers have formed adjacencies with each other.

**Action** To verify OSPF neighbors, enter the following Junos OS CLI operational mode command:

```
user@host> show ospf neighbor
```

## Sample Output

```
user@R1> show ospf neighbor
  Address      Interface      State      ID           Pri    Dead
  10.1.12.2     so-0/0/0.0     Full      10.0.0.2     128    37
  10.1.15.2     so-0/0/1.0     Full      10.0.0.5     128    35
  10.1.13.2     so-0/0/2.0     Full      10.0.0.3     128    38
```

```
user@R3> show ospf neighbor
  Address      Interface      State      ID           Pri    Dead
  10.1.34.2     so-0/0/0.0     Full      10.0.0.4     128    38
  10.1.23.1     so-0/0/1.0     Full      10.0.0.2     128    35
  10.1.13.1     so-0/0/2.0     Full      10.0.0.1     128    37
  10.1.36.2     so-0/0/3.0     Full      10.0.0.6     128    36
```

```
user@R6> show ospf neighbor
  Address      Interface      State      ID           Pri    Dead
  10.1.56.1     so-0/0/0.0     Full      10.0.0.5     128    39
  10.1.46.1     so-0/0/1.0     Full      10.0.0.4     128    37
  10.1.26.1     so-0/0/2.0     Full      10.0.0.2     128    36
  10.1.36.1     so-0/0/3.0     Full      10.0.0.3     128    37
```

**Meaning** The sample output from the ingress, transit, and egress routers shows that all routers in the network have formed OSPF neighbor adjacencies.


---

## Set Up BGP on Routers in Your Network

Before BGP can function in your MPLS network, you must define the autonomous system (AS) number on the routers in your network, and configure at least one group that includes at least one peer.

Optionally, you can configure a routing policy. The routing policy allows you to control the information shared with BGP neighbors and provides the opportunity to filter and modify the information you receive.

Figure 114: BGP Network Topology

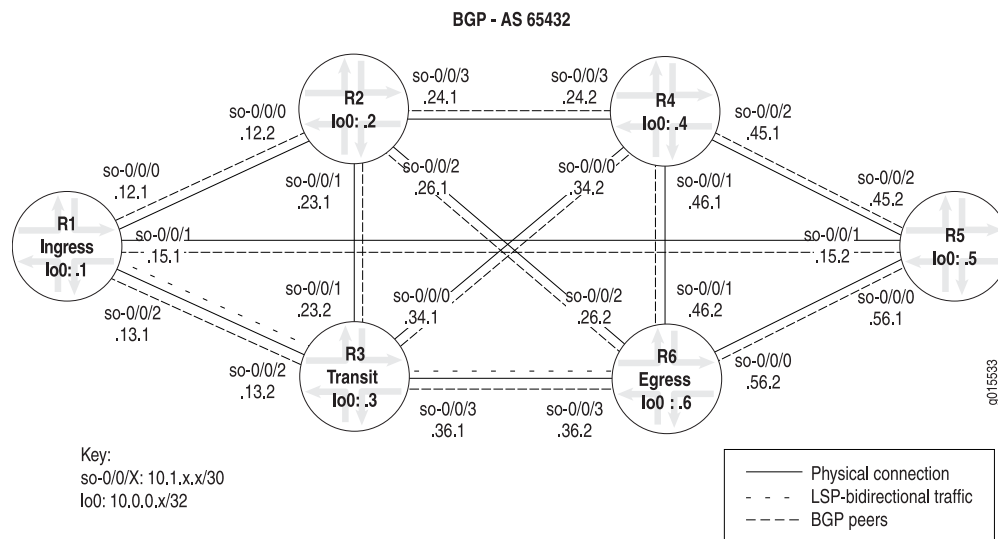

The BGP configuration in the MPLS network in [Figure 114 on page 1145](#) consists of the following:

- A full-mesh IBGP topology, using AS 65432.
- All IBGP sessions peer between loopback addresses because significant stability advantages are gained.
- All routers are configured with one group, **group internal**.
- A **send-statics** policy on routers R1 and R6 allows a new route to be advertised into the network.

The example network uses IS-IS Level 2 and a policy to create routes that are reachable through the LSP. However, IS-IS Level 1 or an OSPF area can be used and the policy omitted if the network has existing BGP traffic.

You can set up BGP throughout the rest of the network by repeating Step 1, “[Define the Local Autonomous System on page 1145](#)” through Step 3, “[Configure a Simple Routing Policy on page 1148](#)” as appropriate on other routers until all routers are set up with BGP.

To set up BGP on routers in your network, follow these steps:

1. [Define the Local Autonomous System on page 1145](#)
2. [Configure BGP Neighbor Connections on page 1146](#)
3. [Configure a Simple Routing Policy on page 1148](#)
4. [Verify That BGP Sessions Are Up on page 1149](#)

## Define the Local Autonomous System

**Purpose** Before BGP can function, you need to define a local AS number on the routers in your network. In the example network in [Figure 114 on page 1145](#), all routers are in AS 65432.

**Action** To define an AS number on routers in your network, follow these steps:

1. In configuration mode, go to the following hierarchy level:

```
[edit]
user@host# edit routing-options
```

2. Configure all interfaces to a specific AS:

```
[edit routing-options]
user@host# set autonomous-system as-number
```

3. Verify the configuration:

```
user@host# show
user@host# commit
```

### Sample Output

```
user@R1> edit
Entering configuration mode

[edit]
user@R1# edit routing-options

[edit routing-options]
user@R1# set autonomous-system 65432

[edit routing-options]
user@R1# show
[...Output truncated...]
autonomous-system 65432;

[edit routing-options]
user@R6# commit
commit complete
```

**Meaning** The output shows that router R1 resides in AS 65432. All other routers in the example network shown in [Figure 114 on page 1145](#) also reside in AS 65432.

## Configure BGP Neighbor Connections

**Purpose** You must configure at least one group that includes at least one peer for BGP to run in your network. First determine which neighbors are internal or external to your local AS boundary. Internal neighbors are inside your local AS boundary. In the example network shown in [Figure 114 on page 1145](#), all the routers are in one AS and are therefore internal. In this example, all IBGP sessions peer between loopback addresses because significant stability advantages are gained. For more information about configuring BGP neighbor connections, see the *Junos Routing Protocols Configuration Guide*.

**Action** To configure BGP neighbor connections, follow these steps:

1. In configuration mode, go to the following hierarchy level:

```
[edit]
user@host# edit protocols bgp
```



2. Configure the group and peer's IP address:

```
[edit protocols bgp]
user@host# set group group-name type type neighbor neighbor-address
```



**NOTE:** For external neighbors, use the following form of the command that includes the peer's AS number:

```
user@host# set group group-name neighbor neighbor-address peer-as
peer-as-number
```

3. Configure the local address:

```
[edit protocols bgp]
user@host# set group group-name local-address local-address
```

4. Verify and commit the configuration:

```
user@host# show
user@host# commit
```

### Sample Output

```
user@R1> edit
Entering configuration mode

[edit]
user@R1# edit protocols bgp

[edit protocols bgp]
user@R1# set group internal type internal neighbor 10.0.0.2

[edit protocols bgp]
users@R1# set group internal local-address 10.0.0.1

[edit protocols bgp]
user@R1# show
group internal {
    type internal;
    local-address 10.0.0.1;
    neighbor 10.0.0.2;
    neighbor 10.0.0.3;
    neighbor 10.0.0.5;
    neighbor 10.0.0.4;
    neighbor 10.0.0.6;
}

[edit protocols bgp]
user@R1# commit
commit complete
```

**Meaning** The sample output shows that router **R1** is in an internal group with five BGP neighbors. The **local-address** statement is included in this example configuration because IBGP is used. It is considered best practice to configure a local address when you use an IBGP. BGP messages are sourced from the loopback address because the **local-address**

statement is included in the configuration. Generally, you would not configure a local address when external BGP is configured.

## Configure a Simple Routing Policy

**Purpose** Routing policy allows you to control the information shared with BGP neighbors and provides the opportunity to filter and modify the information you receive. Typically, a network is injected into BGP using a policy. This may also be done through a static route. In the network in [Figure 114 on page 1145](#), a static route export policy is used to inject routes into BGP.

**Action** To configure a simple routing policy, follow these steps:

1. In configuration mode, go to the following hierarchy level:  

```
[edit]
user@host# edit routing-options
```
2. Configure a static route for redistribution to other autonomous systems:  

```
[edit routing-options]
user@host# set static route destination/24 reject
```
3. Configure a routing policy that matches and accepts the configured static routes into BGP updates:  

```
[edit]
user@host# edit policy-options
[edit policy-options]
user@host# set policy-statement policy-name term term-name from route-filter
address exact
user@host# set policy-statement policy-name term term-name then accept
```
4. Apply the policy created in Step 3 to all BGP neighbors:  

```
[edit]
user@host# edit protocols bgp
[edit protocols bgp]
user@host# set export policy-name
```
5. Verify and commit the configuration:  

```
user@host# show
user@host# commit
```

## Sample Output

```
user@R1> edit
Entering configuration mode

[edit]
user@R1# edit routing-options

[edit routing-options]
user@R1# set static route 100.100.1.0/24 reject

[edit routing-options]
user@R1# show
```

```

[...Output truncated...]
    route 100.100.1.0/24 reject;
}
router-id 10.0.0.1;
autonomous-system 65432;

[edit routing-options]
user@R1# top

[edit]
user@R1# edit policy-options

[edit policy-options]
user@R1# set policy-statement send-statics term statics from route-filter 100.100.1.0/24 exact

[edit policy-options]
user@R1# set policy-statement send-statics term statics then accept

[edit policy-options]
user@R1# top

[edit]
user@R1# edit protocols bgp

[edit protocols bgp]
user@R1# set export send-statics

[edit protocols bgp]
user@R1# show
export send-statics;
group internal {
    type internal;
    local-address 10.0.0.1;
    neighbor 10.0.0.2;
    neighbor 10.0.0.3;
    neighbor 10.0.0.5;
    neighbor 10.0.0.4;
    neighbor 10.0.0.6;
}

[edit protocols bgp]
user@R1# commit
commit complete

```

**Meaning** The sample output shows that routing policy **send-statics** is configured on the router. The routing policy matches and accepts the configured static routes into the routing table and injects the routes into BGP updates. Typically, a routing policy is applied at the group level, although it can be applied at the global level, as shown in this example.

## Verify That BGP Sessions Are Up

**Purpose** After configuring BGP, you must verify that BGP peers are established and the sessions are up.

**Action** To verify BGP peers and sessions, enter the following Junos OS CLI operational mode command:

```
user@host> show bgp summary
```

## Sample Output

user@R1> show bgp summary

Groups: 1 Peers: 5 Down peers: 0

Table	Tot Paths	Act Paths	Suppressed	History	Damp	State	Pending
inet.0	1	1	0	0	0	0	0
Peer	AS	InPkt	OutPkt	OutQ	Flaps	Last Up/Dwn	State #Active/Received/Damped...
10.0.0.2	65432	1369	1373	0	0	11:25:11	0/0/0 0/0/0
10.0.0.3	65432	1369	1372	0	0	11:24:55	0/0/0 0/0/0
10.0.0.4	65432	1369	1372	0	0	11:25:03	0/0/0 0/0/0
10.0.0.5	65432	1369	1372	0	0	11:25:07	0/0/0 0/0/0
10.0.0.6	65432	1343	1344	0	1	11:10:55	1/1/0 0/0/0

user@R3> show bgp summary

Groups: 1 Peers: 4 Down peers: 0

Table	Tot Paths	Act Paths	Suppressed	History	Damp	State	Pending
inet.0	2	2	0	0	0	0	0
Peer	AS	InPkt	OutPkt	OutQ	Flaps	Last Up/Dwn	State #Active/Received/Damped...
10.0.0.1	65432	1375	1375	0	6	11:26:57	1/1/0 0/0/0
10.0.0.2	65432	43016	43016	0	0	2w0d22h	0/0/0 0/0/0
10.0.0.4	65432	74460	74461	0	0	3w4d20h	0/0/0 0/0/0
10.0.0.6	65432	1347	1347	0	6	11:13:10	1/1/0 0/0/0

user@R6> show bgp summary

Groups: 1 Peers: 5 Down peers: 0

Table	Tot Paths	Act Paths	Suppressed	History	Damp	State	Pending
inet.0	1	1	0	0	0	0	0
Peer	AS	InPkt	OutPkt	OutQ	Flaps	Last Up/Dwn	State #Active/Received/Damped...
10.0.0.1	65432	1348	1350	0	0	11:13:46	1/1/0 0/0/0
10.0.0.2	65432	1347	1351	0	0	11:14:02	0/0/0 0/0/0
10.0.0.3	65432	1347	1350	0	0	11:13:58	0/0/0 0/0/0
10.0.0.4	65432	1347	1350	0	0	11:13:54	0/0/0 0/0/0
10.0.0.5	65432	1347	1350	0	0	11:13:50	0/0/0 0/0/0

**Meaning** The sample output from the ingress, transit, and egress routers shows that all routers in the network shown in [Figure 114 on page 1145](#) have BGP peers established and sessions up.

## Define the Local Autonomous System

**Purpose** Before BGP can function, you need to define a local AS number on the routers in your network. In the example network in [Figure 114 on page 1145](#), all routers are in AS 65432.

**Action** To define an AS number on routers in your network, follow these steps:

1. In configuration mode, go to the following hierarchy level:

```
[edit]
user@host# edit routing-options
```

2. Configure all interfaces to a specific AS:

```
[edit routing-options]
user@host# set autonomous-system as-number
```

3. Verify the configuration:

```
user@host# show
```

```
user@host# commit
```

### Sample Output

```
user@R1> edit
Entering configuration mode

[edit]
user@R1# edit routing-options

[edit routing-options]
user@R1# set autonomous-system 65432

[edit routing-options]
user@R1# show
[...Output truncated...]
autonomous-system 65432;

[edit routing-options]
user@R1# commit
commit complete
```

**Meaning** The output shows that router R1 resides in AS 65432. All other routers in the example network shown in [Figure 114 on page 1145](#) also reside in AS 65432.

## Enable MPLS and RSVP

You can enable MPLS and RSVP throughout the rest of the network by repeating Step 1, “[Enable MPLS and RSVP on Routers](#)” on page 1151 and Step 2, “[Enable MPLS on Transit Router Interfaces](#)” on page 1152 as appropriate on other routers until all routers are enabled with MPLS and RSVP.

1. [Enable MPLS and RSVP on Routers](#) on page 1151
2. [Enable MPLS on Transit Router Interfaces](#) on page 1152

### Enable MPLS and RSVP on Routers

**Action** To enable MPLS and RSVP on routers in your network, follow these steps:

1. In configuration mode, go to the following hierarchy level:

```
[edit]
user@host# edit protocols
```

2. Configure MPLS and RSVP:

```
[edit protocols]
user@host# set mpls interface all
user@host# set rsvp interface all
```

3. Disable the management interface for MPLS and RSVP:

```
[edit protocols mpls]
user@host# set interface fxp0.0 disable
[edit protocols rsvp]
user@host# set interface fxp0.0 disable
```

4. Verify and commit the configuration:

```
user@host# show
user@host# commit
```

**Sample Output**

```
user@R1> edit
Entering configuration mode

[edit]
user@R1# edit protocols

[edit protocols]
user@R1# set mpls interface all

[edit protocols]
user@R1# set rsvp interface all

[edit protocols]
user@R1# show
rsvp {
  interface all;
  interface fxp0.0 {
    disable;
  }
}
mpls {
  interface all;
  interface fxp0.0 {
    disable;
  }
}

[edit protocols]
user@R1# commit
commit complete
```

**Meaning** The sample output shows that router **R1** has MPLS and RSVP enabled on all interfaces, except for the management interface (**fxp0.0**), which is disabled. It is considered best practice to disable the management interlace (**fxp0.0**) for MPLS and RSVP to preempt any problems.

Typically every interface that you want to use is listed. For an example of a router configured with specific interfaces, see ["Enable IS-IS on Routers in Your Network" on page 1134](#).

## Enable MPLS on Transit Router Interfaces

**Purpose** Even though transit interfaces are enabled with MPLS when you include the **family mpls** statement in the configuration, MPLS as a whole is not configured on your router or in your network. You must complete all five steps in this topic to have the MPLS protocol running on your network.



**NOTE:** The management interface (fxp0) and the loopback interface (lo0) are not transit interfaces.

**Action** To configure transit interfaces to support MPLS, follow these steps:

1. In configuration mode, go to the following hierarchy level:  

```
[edit]
user@host# edit interfaces
```
2. Configure MPLS:  

```
[edit interfaces]
user@host# set type-fpc/pic/port unit number family mpls
```
3. Verify and commit the configuration:  

```
user@host# show
user@host# commit
```

**Sample Output**

```
user@R1> edit
Entering configuration mode

[edit]
user@R1# edit interfaces

[edit interfaces]
user@R1# set so-0/0/2 unit 0 family mpls

[edit interfaces]
user@R1# show
so-0/0/2 {
  unit 0 {
    family inet {
      address 10.1.13.1/30;
    }
    family iso;
    family mpls;
  }
}

[edit interfaces]
user@R1# commit
commit complete
```

**Meaning** The sample output shows that the interface **so-0/0/2** is configured to support MPLS. The **family** statement identifies which protocol packets are accepted into the interfaces. For example, valid MPLS packets are dropped if the interface is not configured with the MPLS protocol.

## Enable MPLS and RSVP on Routers

**Action** To enable MPLS and RSVP on routers in your network, follow these steps:

1. In configuration mode, go to the following hierarchy level:

```
[edit]
user@host# edit protocols
```

2. Configure MPLS and RSVP:

```
[edit protocols]
user@host# set mpls interface all
user@host# set rsvp interface all
```

3. Disable the management interface for MPLS and RSVP:

```
[edit protocols mpls]
user@host# set interface fxp0.0 disable
[edit protocols rsvp]
user@host# set interface fxp0.0 disable
```

4. Verify and commit the configuration:

```
user@host# show

user@host# commit
```

**Sample Output**

```
user@R1> edit
Entering configuration mode

[edit]
user@R1# edit protocols

[edit protocols]
user@R1# set mpls interface all

[edit protocols]
user@R1# set rsvp interface all

[edit protocols]
user@R1# show
rsvp {
  interface all;
  interface fxp0.0 {
    disable;
  }
}
mpls {
  interface all;
  interface fxp0.0 {
    disable;
  }
}

[edit protocols]
user@R1# commit
commit complete
```

**Meaning** The sample output shows that router **R1** has MPLS and RSVP enabled on all interfaces, except for the management interface (**fxp0.0**), which is disabled. It is considered best practice to disable the management interlace (**fxp0.0**) for MPLS and RSVP to preempt any problems.



Typically every interface that you want to use is listed. For an example of a router configured with specific interfaces, see [“Enable IS-IS on Routers in Your Network”](#) on page 1134.

## Enable MPLS on Transit Router Interfaces

**Purpose** Even though transit interfaces are enabled with MPLS when you include the **family mpls** statement in the configuration, MPLS as a whole is not configured on your router or in your network. You must complete all five steps in this topic to have the MPLS protocol running on your network.



**NOTE:** The management interface (fxp0) and the loopback interface (lo0) are not transit interfaces.

**Action** To configure transit interfaces to support MPLS, follow these steps:

1. In configuration mode, go to the following hierarchy level:  

```
[edit]
user@host# edit interfaces
```
2. Configure MPLS:  

```
[edit interfaces]
user@host# set type-fpc/pic/port unit number family mpls
```
3. Verify and commit the configuration:  

```
user@host# show
user@host# commit
```

**Sample Output**

```
user@R1> edit
Entering configuration mode

[edit]
user@R1# edit interfaces

[edit interfaces]
user@R1# set so-0/0/2 unit 0 family mpls

[edit interfaces]
user@R1# show
so-0/0/2 {
    unit 0 {
        family inet {
            address 10.1.13.1/30;
        }
        family iso;
        family mpls;
    }
}

[edit interfaces]
user@R1# commit
commit complete
```

**Meaning** The sample output shows that the interface **so-0/0/2** is configured to support MPLS. The **family** statement identifies which protocol packets are accepted into the interfaces. For example, valid MPLS packets are dropped if the interface is not configured with the MPLS protocol.


---

## Verifying the MPLS Configuration

After configuring MPLS on your network, you must verify the correct configuration of both the MPLS and RSVP protocols. Incorrect configuration of either protocol prevents successful LSP creation.

[Figure 115 on page 1157](#) illustrates the network with the example configurations used in this topic.

Figure 115: MPLS Network Topology

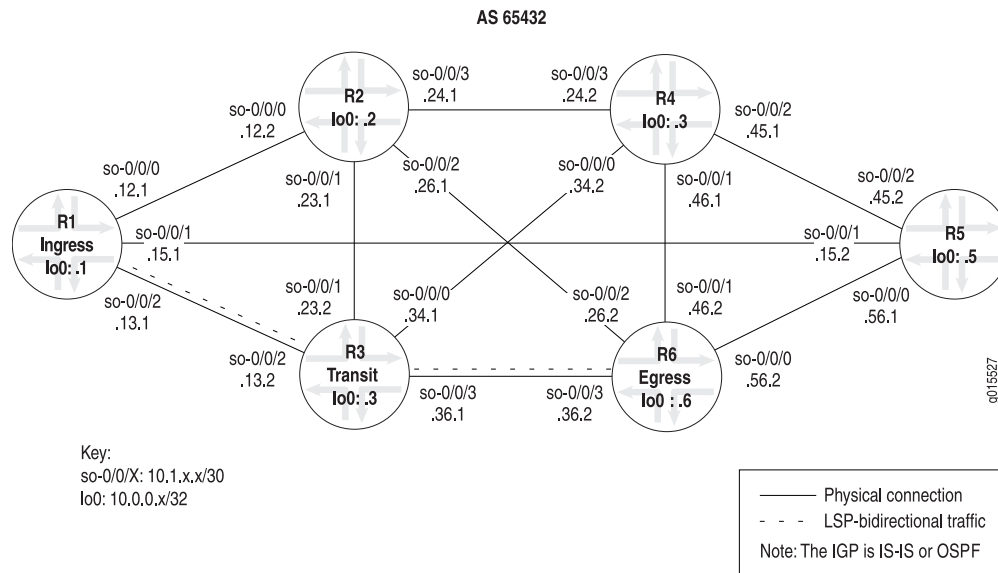

To verify the MPLS configuration, follow these steps:

1. [Verify MPLS Interfaces on page 1157](#)
2. [Verify the RSVP Protocol on page 1159](#)
3. [Verify RSVP Interfaces on page 1160](#)
4. [Verify Protocol Families on page 1162](#)

## Verify MPLS Interfaces

**Purpose** If the MPLS protocol is not configured correctly on the routers in your network, the interfaces are not able to perform MPLS switching.

**Action** To verify MPLS interfaces, enter the following Junos OS command-line interface (CLI) operational mode command:

```
user@host> show mpls interface
```

## Sample Output 1

The following sample output is for all routers in the network shown in *MPLS Network Topology*.

```
user@R1> show mpls interface
Interface      State      Administrative groups
so-0/0/0.0     Up         <none>
so-0/0/1.0     Up         <none>
so-0/0/2.0     Up         <none>

user@R2> show mpls interface
Interface      State      Administrative groups
so-0/0/0.0     Up         <none>
so-0/0/1.0     Up         <none>
so-0/0/2.0     Up         <none>
```

```

so-0/0/3.0      Up      <none>

user@R3> show mpls interface
Interface      State      Administrative groups
so-0/0/0.0      Up      <none>
so-0/0/1.0      Up      <none>
so-0/0/2.0      Up      <none>
so-0/0/3.0      Up      <none>

user@R4> show mpls interface
Interface      State      Administrative groups
so-0/0/0.0      Up      <none>
so-0/0/1.0      Up      <none>
so-0/0/2.0      Up      <none>
so-0/0/3.0      Up      <none>

user@R5> show mpls interface
Interface      State      Administrative groups
so-0/0/0.0      Up      <none>
so-0/0/1.0      Up      <none>
so-0/0/2.0      Up      <none>

user@R6> show mpls interface
Interface      State      Administrative groups
so-0/0/0.0      Up      <none>
so-0/0/1.0      Up      <none>
so-0/0/2.0      Up      <none>
so-0/0/3.0      Up      <none>

```

## Sample Output 2

```

user@R6> show mpls interface
Interface      State      Administrative groups
so-0/0/0.0      Up      <none>
so-0/0/1.0      Up      <none>
so-0/0/3.0      Up      <none>      # so-0/0/2.0 is missing

```

## Sample Output 3

```

user@host> show mpls interface
MPLS not configured

```

**Meaning** Sample Output 1 shows that all MPLS interfaces on all routers in the network are enabled (**Up**) and can perform MPLS switching. If you fail to configure the correct interface at the **[edit protocols mpls]** hierarchy level or include the **family mpls** statement at the **[edit interfaces type-fpc/pic/port unit number]** hierarchy level, the interface cannot perform MPLS switching, and does not appear in the output for the **show mpls interface** command.

Administrative groups are not configured on any of the interfaces shown in the example network in *MPLS Network Topology*. However, if they were, the output would indicate which affinity class bits are enabled on the router.

Sample Output 2 shows that interface **so-0/0/2.0** is missing and therefore might be incorrectly configured. For example, the interface might not be included at the **[edit protocols mpls]** hierarchy level, or the **family mpls** statement might not be included at the **[edit interfaces type-fpc/pic/port unit number]** hierarchy level. If the interface is

configured correctly, RSVP might not have signaled over this interface yet. For more information on determining which interface is incorrectly configured, see [“Verify Protocol Families” on page 1162](#).

Sample Output 3 shows that the MPLS protocol is not configured at the `[edit protocols mpls]` hierarchy level.

## Verify the RSVP Protocol

**Purpose** If the RSVP protocol is not enabled on the routers in your network, the interface cannot signal LSPs.

**Action** To verify that the RSVP protocol is enabled, enter the following Junos OS CLI command:

```
user@host> show rsvp version
```

## Sample Output

```
user@R1> show rsvp version
Resource ReSerVation Protocol, version 1. rfc2205
  RSVP protocol           = Enabled
  R(refresh timer)        = 30 seconds
  K(keep multiplier)      = 3
  Preemption              = Normal
  Soft-preemption cleanup = 30 seconds
  Graceful restart        = Disabled
  Restart helper mode     = Enabled
  Restart time            = 0 msec
```

**Meaning** The sample output shows that the RSVP protocol is enabled on **R1**. The supported RSVP protocol is version 1, as defined in RFC 2205.

The RSVP refresh timer is set to 30 seconds, indicating that every 30 seconds, plus or minus 50 percent, the router will refresh the RSVP state with its directly connected neighbors by sending either a **Path** or a **Resv** message. The variable refresh time helps prevent harmonic oscillations in network traffic caused by periodic protocol updates.

The keepalive multiplier, **K(keep multiplier)**, is input to a formula that helps determine the lifetime of an RSVP session. The session lifetime is reset each time the state is updated. The lifetime represents the duration of an RSVP session that does not receive any state updates (**Path** or **Resv** messages). The formula is:

$$\text{RSVP session lifetime} = (\text{keep-multiplier} + 0.5) * 1.5 * \text{refresh-time}$$

The RSVP **preemption** state is currently configured for normal preemption, indicating that only an LSP with a stronger priority can preempt an existing session; that is, the setup value of the new LSP is lower than the hold value of the existing LSP. Other options include **aggressive** preemption, which always preempts when there is insufficient bandwidth, and **disabled**, which prevents any preemption, regardless of LSP priority values.

**Graceful restart** is currently disabled and **Restart helper mode** is enabled. There are four combinations for **Graceful restart** and **restart helper mode**:

1. Both **Graceful restart** and **Restart helper mode** are enabled.
2. **Graceful restart** is enabled but **Restart helper mode** is disabled. An LSR with this configuration can restart gracefully but cannot help a neighbor with its restart and recovery procedures.
3. **Graceful restart** is disabled but **Restart helper mode** is enabled. An LSR with this configuration can only help a restarting neighbor. It cannot restart gracefully itself.
4. **Graceful restart** and **Restart helper mode** are both disabled. This configuration completely disables RSVP graceful restart (including restart and recovery procedures and helper mode). It is the same as an LSR that is not supported by RSVP graceful restart.

**Restart time** is the estimated time (in milliseconds) for an LSR to restart the RSVP traffic engineering component. In the example output, the restart time is 0 milliseconds, indicating that it is disabled.

The output is identical for all routers in the network shown in *MPLS Network Topology*.

## Verify RSVP Interfaces

**Purpose** If the RSVP protocol is not configured correctly on the routers in your network, the interfaces cannot signal LSPs.

**Action** To verify RSVP interfaces, enter the following Junos OS CLI operational mode command:

```
user@host> show rsvp interface
```

## Sample Output 1

```
user@R1> show rsvp interface
```

```
RSVP interface: 4 active
```

Interface	State	Active resv	Subscr- ption	Static BW	Available BW	Reserved BW	Highwater mark
so-0/0/0.0	Up	2	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/1.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/2.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps

```
user@R2> show rsvp interface
```

```
RSVP interface: 5 active
```

Interface	State	Active resv	Subscr- ption	Static BW	Available BW	Reserved BW	Highwater mark
so-0/0/0.0	Up	1	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/1.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/2.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/3.0	Up	1	100%	155.52Mbps	155.52Mbps	0bps	0bps

```
user@R3> show rsvp interface
```

```
RSVP interface: 5 active
```

Interface	State	Active resv	Subscr- ption	Static BW	Available BW	Reserved BW	Highwater mark
so-0/0/0.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/1.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/2.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/3.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps

```

user@R4> show rsvp interface
RSVP interface: 5 active

```

Interface	State	Active resv	Subscription	Static BW	Available BW	Reserved BW	Highwater mark
so-0/0/0.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/1.0	Up	1	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/2.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/3.0	Up	1	100%	155.52Mbps	155.52Mbps	0bps	0bps

```

user@R5> show rsvp interface
RSVP interface: 4 active

```

Interface	State	Active resv	Subscription	Static BW	Available BW	Reserved BW	Highwater mark
so-0/0/0.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/1.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/2.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps

```

user@R6> show rsvp interface
RSVP interface: 5 active

```

Interface	State	Active resv	Subscription	Static BW	Available BW	Reserved BW	Highwater mark
so-0/0/0.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/1.0	Up	1	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/2.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/3.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps

## Sample Output 2

```

user@R6> show rsvp interface
RSVP interface: 3 active

```

Interface	State	Active resv	Subscription	Static BW	Available BW	Reserved BW	Highwater mark
so-0/0/0.0	Up	1	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/1.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps
so-0/0/2.0	Up	0	100%	155.52Mbps	155.52Mbps	0bps	0bps

#so-0/0/3.0 is missing

## Sample Output 3

```

user@host# show rsvp interface
RSVP not configured

```

**Meaning** Sample Output 1 shows that all interfaces on all routers in the network are enabled with RSVP, including the management interface (**fxp0**). The output for all routers in the network includes similar information, so we will examine R6 in detail.

R6 has five interfaces enabled with RSVP (**Up**). Interface **so-0/1/1.0** has a single active RSVP reservation (**Active resv**) that did not change the default subscription percentage of 100 percent (**Subscription**). Interface **so-0/1/1.0** did not assign a static bandwidth (**Static BW**) to the logical unit and therefore inherited 100 percent of the physical interface rate as the bandwidth available (**Available BW**) for RSVP sessions. Interface **so-0/1/1.0** has no bandwidth assigned (**Reserved BW**), and no RSVP bandwidth allocation at any single instant in time (**Highwater mark**).

Sample Output 2 shows that interface **so-0/0/3.0** is missing. If you do not configure the correct interface at the **[edit protocols rsvp]** hierarchy level, the interface cannot signal LSPs, and does not appear in the output for the **show rsvp interface** command.

Sample Output 3 shows that the RSVP protocol is not configured at the **[edit protocols rsvp]** hierarchy level.

## Verify Protocol Families

**Purpose** If a logical interface does not have MPLS enabled, it cannot perform MPLS switching. This step allows you to quickly determine which interfaces are configured with MPLS and other protocol families.

**Action** To verify the protocol families configured on the routers in your network, enter the following Junos OS CLI operational mode command:

```
user@host> show interfaces terse
```

### Sample Output 1

```
user@R1> show interfaces terse
Interface      Admin Link Proto Local Remote
so-0/0/0       up   up   inet  10.1.12.1/30
so-0/0/0.0      up   up   inet  10.1.12.1/30
                iso
                mpls

so-0/0/1       up   up   inet  10.1.15.1/30
so-0/0/1.0      up   up   inet  10.1.15.1/30
                iso
                mpls

so-0/0/2       up   up   inet  10.1.13.1/30
so-0/0/2.0      up   up   inet  10.1.13.1/30
                iso
                mpls

so-0/0/3       up   down

user@R2> show interfaces terse
Interface      Admin Link Proto Local Remote
so-0/0/0       up   up   inet  10.1.12.2/30
so-0/0/0.0      up   up   inet  10.1.12.2/30
                iso
                mpls

so-0/0/1       up   up   inet  10.1.23.1/30
so-0/0/1.0      up   up   inet  10.1.23.1/30
                iso
                mpls

so-0/0/2       up   up   inet  10.1.26.1/30
so-0/0/2.0      up   up   inet  10.1.26.1/30
                iso
                mpls

so-0/0/3       up   up   inet  10.1.24.1/30
so-0/0/3.0      up   up   inet  10.1.24.1/30
                iso
                mpls

user@R3> show interfaces terse
Interface      Admin Link Proto Local Remote
so-0/0/0       up   up
```



```

so-0/0/0.0          up    up    inet 10.1.34.1/30
                    up    up    iso
                    up    up    mpls
so-0/0/1            up    up
so-0/0/1.0          up    up    inet 10.1.23.2/30
                    up    up    iso
                    up    up    mpls
so-0/0/2            up    up
so-0/0/2.0          up    up    inet 10.1.13.2/30
                    up    up    iso
                    up    up    mpls
so-0/0/3            up    up
so-0/0/3.0          up    up    inet 10.1.36.1/30
                    up    up    iso
                    up    up    mpls

```

user@R4> show interfaces terse

Interface	Admin	Link	Proto	Local	Remote
so-0/0/0	up	up			
so-0/0/0.0	up	up	inet	10.1.34.2/30	
			iso		
			mpls		
so-0/0/1	up	up			
so-0/0/1.0	up	up	inet	10.1.46.1/30	
			iso		
			mpls		
so-0/0/2	up	up			
so-0/0/2.0	up	up	inet	10.1.45.1/30	
			iso		
			mpls		
so-0/0/3	up	up			
so-0/0/3.0	up	up	inet	10.1.24.2/30	
			iso		
			mpls		

user@R5> show interfaces terse

Interface	Admin	Link	Proto	Local	Remote
so-0/0/0	up	up			
so-0/0/0.0	up	up	inet	10.1.56.1/30	
			iso		
			mpls		
so-0/0/1	up	up			
so-0/0/1.0	up	up	inet	10.1.15.2/30	
			iso		
			mpls		
so-0/0/2	up	up			
so-0/0/2.0	up	up	inet	10.1.45.2/30	
			iso		
			mpls		
so-0/0/3	up	down			

user@R6> show interfaces terse

Interface	Admin	Link	Proto	Local	Remote
so-0/0/0	up	up			
so-0/0/0.0	up	up	inet	10.1.56.2/30	
			iso		
			mpls		
so-0/0/1	up	up			
so-0/0/1.0	up	up	inet	10.1.46.2/30	
			iso		
			mpls		

```

so-0/0/2          up   up
so-0/0/2.0        up   up   inet 10.1.26.2/30
                        iso
                        mpls

so-0/0/3          up   up
so-0/0/3.0        up   up   inet 10.1.36.2/30
                        iso
                        mpls

```

## Sample Output 2

```

user@R6> show interfaces terse
Interface      Admin Link Proto Local Remote
so-0/0/0       up   up
so-0/0/0.0     up   up   inet 10.1.56.2/30
                        iso
                        mpls

so-0/0/1       up   up
so-0/0/1.0     up   up   inet 10.1.46.2/30
                        iso
                        mpls

so-0/0/2       up   up
so-0/0/2.0     up   up   inet 10.1.26.2/30
                        iso #The mpls statement is missing.

so-0/0/3       up   up
so-0/0/3.0     up   up   inet 10.1.36.2/30
                        iso
                        mpls

```

**Meaning** Sample Output 1 shows the interface, the administrative status of the link (**Admin**), the data link layer status of the link (**Link**), the protocol families configured on the interface (**Proto**), and the local and remote addresses on the interface.

All interfaces on all routes in the network shown in [Figure 115 on page 1157](#) are administratively enabled and functioning at the data link layer with MPLS and IS-IS, and have an **inet** address. All are configured with an IPv4 protocol family (**inet**), and have the IS-IS (**iso**) and MPLS (**mpls**) protocol families configured at the **[edit interfaces type-fpc/pic/port unit number]** hierarchy level.

Sample Output 2 shows that interface **so-0/0/2.0** on **R6** does not have the **mpls** statement included at the **[edit interfaces type-fpc/pic/port unit number]** hierarchy level.

## Verify the RSVP Protocol

**Purpose** If the RSVP protocol is not enabled on the routers in your network, the interface cannot signal LSPs.

**Action** To verify that the RSVP protocol is enabled, enter the following Junos OS CLI command:

```
user@host> show rsvp version
```

## Sample Output

```

user@R1> show rsvp version
Resource ReSerVation Protocol, version 1. rfc2205
  RSVP protocol           = Enabled

```

```

R(refresh timer)           = 30 seconds
K(keep multiplier)         = 3
Preemption                  = Normal
Soft-preemption cleanup    = 30 seconds
Graceful restart           = Disabled
Restart helper mode        = Enabled
Restart time                = 0 msec

```

**Meaning** The sample output shows that the RSVP protocol is enabled on **R1**. The supported RSVP protocol is version 1, as defined in RFC 2205.

The RSVP refresh timer is set to 30 seconds, indicating that every 30 seconds, plus or minus 50 percent, the router will refresh the RSVP state with its directly connected neighbors by sending either a **Path** or a **Resv** message. The variable refresh time helps prevent harmonic oscillations in network traffic caused by periodic protocol updates.

The keepalive multiplier, **K(keep multiplier)**, is input to a formula that helps determine the lifetime of an RSVP session. The session lifetime is reset each time the state is updated. The lifetime represents the duration of an RSVP session that does not receive any state updates (**Path** or **Resv** messages). The formula is:

RSVP session lifetime = (keep-multiplier + 0.5) \* 1.5 \* refresh-time

The RSVP **preemption** state is currently configured for normal preemption, indicating that only an LSP with a stronger priority can preempt an existing session; that is, the setup value of the new LSP is lower than the hold value of the existing LSP. Other options include **aggressive** preemption, which always preempts when there is insufficient bandwidth, and **disabled**, which prevents any preemption, regardless of LSP priority values.

**Graceful restart** is currently disabled and **Restart helper mode** is enabled. There are four combinations for **Graceful restart** and **restart helper mode**:

1. Both **Graceful restart** and **Restart helper mode** are enabled.
2. **Graceful restart** is enabled but **Restart helper mode** is disabled. An LSR with this configuration can restart gracefully but cannot help a neighbor with its restart and recovery procedures.
3. **Graceful restart** is disabled but **Restart helper mode** is enabled. An LSR with this configuration can only help a restarting neighbor. It cannot restart gracefully itself.
4. **Graceful restart** and **Restart helper mode** are both disabled. This configuration completely disables RSVP graceful restart (including restart and recovery procedures and helper mode). It is the same as an LSR that is not supported by RSVP graceful restart.

**Restart time** is the estimated time (in milliseconds) for an LSR to restart the RSVP traffic engineering component. In the example output, the restart time is 0 milliseconds, indicating that it is disabled.

The output is identical for all routers in the network shown in *MPLS Network Topology*.

## Define a Load-Balancing Policy

---

**Purpose** On the ingress or transit router, you can include a policy statement that performs load balancing on all routes. For information on including a policy statement that performs load balancing on specific routes, see “Configuring Per-Packet Load Balancing” in the *Junos Routing Protocols Configuration Guide*.

**Action** On the ingress or transit router, to define a load-balancing policy for all routes, follow these steps:

1. In configuration mode, go to the following hierarchy level:

```
[edit]
user@host# edit policy-options
```

2. Define the load-balance policy and action:

```
[edit policy-options]
user@host# set policy-statement policy-name then load-balance per-packet
```

3. Verify and commit the configuration:

```
user@host# show
user@host# commit
```

**Sample Output**

```
user@R6> edit
Entering configuration mode

[edit]
user@R6# edit policy-options

[edit policy-options]
user@R6# set policy-statement load-balance-traffic then load-balance per-packet

[edit policy-options]
user@R6# show
policy-statement load-balance-traffic {
  then {
    load-balance per-packet;
  }
}

[edit policy-options]
user@R6# commit
commit complete
```

**Meaning** The sample output from ingress router **R6** shows the process for configuring load balancing. On an Internet Processor I ASIC, packets with the same parameters are spread across multiple equal-cost next hops; while an Internet Processor II ASIC sends packets with the same parameters to the same next hop, since they are in the same flow. The Junos OS command to turn on load balancing uses the action **load-balance per-packet**, which is misnamed in relation to the Internet Processor II ASIC. On the Internet Processor II ASIC, this command actually enables per-flow load balancing.

## Use the traceroute Command to Verify MPLS Labels

**Purpose** You can use the **traceroute** command to verify that packets are being sent over the LSP.

**Action** To verify MPLS labels, enter the following Junos OS CLI operational mode command, where *host-name* is the IP address or the name of the remote host:

```
user@host> traceroute host-name
```

### Sample Output 1

```
user@R1> traceroute 100.100.6.1
traceroute to 100.100.6.1 (100.100.6.1), 30 hops max, 40 byte packets
 1  10.1.12.2 (10.1.12.2)  0.861 ms  0.718 ms  0.679 ms
    MPLS Label=100048 CoS=0 TTL=1 S=1
 2  10.1.24.2 (10.1.24.2)  0.822 ms  0.731 ms  0.708 ms
    MPLS Label=100016 CoS=0 TTL=1 S=1
 3  10.1.46.2 (10.1.46.2)  0.571 ms !N  0.547 ms !N  0.532 ms !N
```

### Sample Output 2

```
user@R1> traceroute 10.0.0.6
traceroute to 10.0.0.6 (10.0.0.6), 30 hops max, 40 byte packets
 1  10.1.13.2 (10.1.13.2)  0.605 ms  0.548 ms  0.503 ms
 2  10.0.0.6 (10.0.0.6)  0.761 ms  0.676 ms  0.675 ms
```

**Meaning** Sample Output 1 shows that MPLS labels are used to forward packets through the network. Included in the output is a label value (**MPLS Label=100048**), the time-to-live value (**TTL=1**), and the stack bit value (**S=1**).

The **MPLS Label** field is used to identify the packet to a particular LSP. It is a 20-bit field, with a maximum value of ( $2^{20}-1$ ), or approximately 1,000,000.

The TTL value contains a limit on the number of hops that this MPLS packet can travel through the network (1). It is decremented at each hop, and if the TTL value drops below one, the packet is discarded.

The bottom of the stack bit value (**S=1**) indicates that is the last label in the stack and that this MPLS packet has one label associated with it. The MPLS implementation in the Junos OS supports a stacking depth of 3 on the M-series routers and up to 5 on the T-series platforms. For more information on MPLS label stacking, see RFC 3032, *MPLS Label Stack Encoding*.

MPLS labels appear in Sample Output 1 because the **traceroute** command is issued to a BGP destination where the BGP next hop for that route is the LSP egress address. The Junos OS default behavior uses LSPs for BGP traffic when the BGP next hop equals the LSP egress address.

Sample Output 2 shows that MPLS labels do not appear in the output for the **traceroute** command. If the BGP next hop does not equal the LSP egress address or the destination is an IGP route, the BGP traffic does not use the LSP. Instead of using the LSP, the BGP traffic is using the IGP (IS-IS, in this case) to reach the egress address (**R6**).

## Apply the Load-Balancing Policy to the Forwarding Table

---

**Purpose** Apply the policy configured in Step 1 to routes exported from the routing table to the forwarding table.

**Action** To apply a load-balancing policy to the forwarding table, follow these steps:

1. In configuration mode, go to the following hierarchy level:

```
[edit]
user@host# edit routing-options
```

2. Define a load-balance per packet action:

```
[edit routing-options]
user@host# set forwarding-table export policy-name
```

3. Verify and commit the configuration:

```
user@host# show
user@host# commit
```

**Sample Output**

```
[edit]
user@R6# edit routing-options

[edit routing-options]
user@R6# set forwarding-table export load-balance-traffic

[edit routing-options]
user@R6# show
static {
[...Output truncated...]
}
router-id 192.168.6.1;
autonomous-system 65432;
forwarding-table {
    export load-balance-traffic;
}

[edit routing-options]
user@R6# commit
commit complete
```

**Meaning** The sample output shows the process for applying a load-balancing policy to export routes from the routing table to the forwarding table.


## Fast Reroute Problem Overview

---

**Problem Description:** Incorrect configuration is a common mistake when trying to establish protection for an MPLS LSP. Protection with either fast reroute or link protection requires a **per-packet load-balance policy** exported at the **[edit routing-options forwarding-table]** hierarchy level. Correctly configured protection for an MPLS LSP results in two next-hop forwarding table entries per destination, either an incoming MPLS label or an IP destination.

Figure 116 on page 1169 illustrates a network topology with link protection and load balancing enabled to ensure that routes are correctly placed in to the forwarding table.

Figure 116: Fast Reroute Problem Network

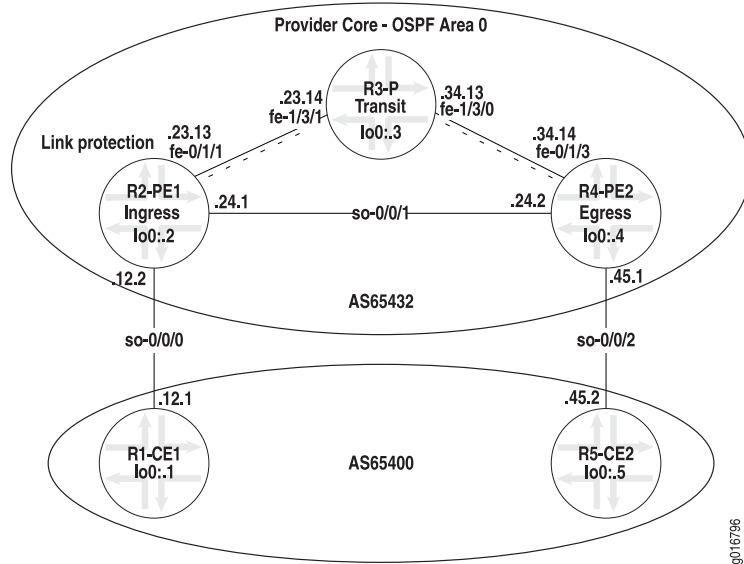

The network shown in Figure 116 on page 1169 illustrates an MPLS-based VPN with traffic protection and load balancing, consisting of the following:

- All physical interfaces addresses are from the 10.0.x.x/30 address space.
- All loopback addresses are from the 192.168.x.1/32 block.
- The IGP is a single-area (Area 0) OSPF.
- RSVP is deployed as the MPLS signaling protocol between PE routers.
- LSPs (r2-r4 and r4-r2) established between PE routers.
- MP-IBGP mesh between PE routers, loopback peering, and VPN-IPv4 NLRI.
- CE-PE link running EBGp.
- Full-mesh Layer 3 VPN between CE1 and CE2.
- Traffic protection for the link between the PE1 and P routers.
- Load balancing on PE1.

The overall goal of this network is to provide point-to-point connectivity between the two CE routers and traffic protection in the core of the network.

**Symptom** In the network shown in Figure 116 on page 1169, the external symptom is that local repair is taking about one second to complete, which is slow. Use the **show route forwarding-table vpn vpn-a destination** command to check that the correct routes are included in the forwarding table. In the example output below, there is only one route installed in the forwarding table, when for fast local repair, there should be multiple next hops installed.

**Sample Output**    user@R2-PE1> show route forwarding-table vpn vpn-a destination 192.168.5.1 extensive

```
Routing table: vpn-a.inet [Index 2]
Internet:

Destination: 192.168.5.0/24
Route type: user
Route reference: 0                               Route interface-index: 0
Flags: sent to PFE, prefix load balance
Next-hop type: indirect                           Index: 262142   Reference: 2
Next-hop type: Push 100160
Next-hop interface: so-0/0/1.0 #Only one next hop in the forwarding table.
```

**Cause**    Slow local repair is caused by the forwarding table not including the necessary next-hops to support local repair. The forwarding table shows only a single next-hop, when local repair requires additional next-hops for fast recovery.

**Troubleshooting Commands**    The Junos OS includes commands that are useful when troubleshooting a problem. This topic provides a brief description of each command followed by sample output, and a discussion of the output in relation to the problem.

The following commands can be used when troubleshooting a fast reroute error in an MPLS-VPN network:

```
user@R2-PE1> show configuration routing-instances vpn-a
user@R2-PE1> show configuration routing-options
user@R2-PE1> show bgp summary instance vpn-a
user@R2-PE1> show configuration protocols mpls
user@R2-PE1> show mpls lsp ingress
user@R2-PE1> show rsvp session ingress
user@R2-PE1> show rsvp session ingress detail
user@R2-PE1> show route table vpn-a 192.168.5.1 detail
user@R2-PE1> show route forwarding-table vpn vpn-a destination 192.168.5.1 extensive
```



**Sample Output** The `show configuration statement-path` command is used to display a specific configuration hierarchy; in this case, to verify the correct configuration of a specific routing instance named `vpn-a`.

```
user@R2-PE1> show configuration routing-instances vpn-a
instance-type vrf ;
interface so-0/0/0.0 ;
vrf-target {
    import target:65432:100;
    export target:65432:100;
}
protocols {
    bgp {
        group CE1 {
            type external;
            peer-as 65400;
            neighbor 10.0.12.1 ;
        }
    }
}
```

**Meaning** The sample output for the `show configuration` command shows the current running configuration of the specific routing instance named `vpn-a` configured on the ingress PE1 router. The `vpn-a` instance configuration has a VRF table that supports EBGp routing on the PE-CE link (`so-0/0/0.0`). This interface is the correct interface for the CE1-PE1 link in the network topology shown in [Figure 116 on page 1169](#).

The VRF instance is linked to a VFR target community configured at the [edit policy-options] hierarchy level, allowing advertising of L3 VPN routes between PE routers. (See the PE1 configuration in ["Router Configurations" on page 1178](#) for the policy options configuration.) The import statement places, into the `vpn-a.inet.0` table, all received L3 VPN MP-BGP routes tagged with the correct target community. The export statement advertises and tags all routes in the `vpn-a.inet.0` table with the listed target community to all MP-BGP peers.

The BGP protocols configuration within the routing instance applies the BGP import and export policies to the exchange of BGP routes on the PE-CE routing instance.

**Sample Output** The **show bgp summary** command is used to display summary information about BGP and its neighbors to determine if routes are received from peers in the autonomous system (AS). In this case, information for the specified instance **vpn-a** is displayed.

```
user@R2-PE1> show bgp summary instance vpn-a
Groups: 1 Peers: 1 Down peers: 0
Table Tot Paths Act Paths Suppressed History Damp State Pending
vpn-a.inet.0 11 7 0 0 0 0
Peer AS InPkt OutPkt OutQ Flaps Last Up/Dwn
State|#Active/Received/Damped...
10.0.12.1 65400 2471 2473 0 0 20:35:20 Establ
vpn-a.inet.0: 5/5/0
```

**Meaning** The sample output for the **show bgp summary instance vpn-a** command shows that the peering session between the CE1 and PE1 routers is established, indicating that the peers are exchanging update messages.

**Sample Output** The **show configuration statement-path** command is used to display a specific configuration hierarchy; in this case, the MPLS hierarchy.

```
user@R2-PE1> show configuration protocols mpls
label-switched-path r2-r4 {
    to 192.168.4.1;
    link-protection ;
    primary direct ;
}
path direct {
    10.0.24.2 strict;
}
interface all;
interface fxp0.0 {
    disable;
}
```

**Meaning** The sample output for the **show configuration protocols mpls** command shows the current running MPLS configuration on the ingress PE1 router. The configuration include the LSP **r2-r4**, link protection, and the strict primary path **direct**.

**Sample Output** The **show mpls lsp** command is used to display summarized information about the configured and active LSPs on a router; in this case, the command shows only the ingress LSPs on the ingress PE1 router.

```
user@R2-PE1> show mpls lsp ingress
Ingress LSP: 1 sessions
To From State Rt ActivePath P LSPname
192.168.4.1 192.168.2.1 Up 0 direct * r2-r4
Total 1 displayed, Up 1, Down 0
```

**Meaning** The sample output for the **show mpls lsp ingress** command shows that the ingress LSP **r2-r4** is up and following the configured path **direct**.

**Sample Output** The `show rsvp session` command is used to display summarized information about active RSVP sessions on a router; in this case, the command shows summarized information about ingress RSVP sessions on the PE1 router

```
user@R2-PE1> show rsvp session ingress
Ingress RSVP: 2 sessions
To          From          State   Rt  Style Labelin Labelout LSPname
192.168.4.1 192.168.2.1 Up      0  1  SE      -       3  r2-r4
192.168.4.1 192.168.2.1 Up      0  1  SE      -    100064
Bypass->10.0.24.2
Total 2 displayed, Up 2, Down 0
```

**Meaning** The sample output for the `show rsvp session ingress` command shows two RSVP sessions are up; the main LSP `r2-r4` and a bypass path protecting the main LSP. Both RSVP sessions are in the Shared Explicit (**SE**) style, creating a shared reservation among for the two paths.

**Sample Output** The `show rsvp session ingress detail` command is used to display more detailed information about the two ingress RSVP sessions on the PE1 router.

```

user@R2-PE1> show rsvp session ingress detail
Ingress RSVP: 2 sessions

192.168.4.1
  From: 192.168.2.1, LSPstate: Up , ActiveRoute: 0
  LSPname: r2-r4, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 3
  Resv style: 1 SE, Label in: -, Label out: 3
  Time left: -, Since: Fri Mar 9 14:05:03 2007
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 63395 protocol 0
  Link protection desired
  Type: Link protected LSP
  PATH rcvfrom: localclient
  Adspec: sent MTU 1500
  Path MTU: received 1500
  PATH sentto: 10.0.24.2 (so-0/0/1.0) 2008 pkts
  RESV rcvfrom: 10.0.24.2 (so-0/0/1.0) 2006 pkts
  Explct route: 10.0.24.2
  Record route: <self> 10.0.24.2

192.168.4.1
  From: 192.168.2.1, LSPstate: Up, ActiveRoute: 0
  LSPname: Bypass->10.0.24.2
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 100064
  Resv style: 1 SE, Label in: -, Label out: 100064
  Time left: -, Since: Fri Mar 9 14:05:58 2007
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 63396 protocol 0
  Type: Bypass LSP
  Number of data route tunnel through: 1
  Number of RSVP session tunnel through: 0
  PATH rcvfrom: localclient
  Adspec: sent MTU 1500
  Path MTU: received 1500
  PATH sentto: 10.0.23.14 (fe-0/1/1.0) 2001 pkts
  RESV rcvfrom: 10.0.23.14 (fe-0/1/1.0) 1736 pkts
  Explct route: 10.0.23.14 10.0.34.14
  Record route: <self> 10.0.23.14 10.0.34.14
Total 2 displayed, Up 2, Down 0

```

**Meaning** The sample output for the `show rsvp session ingress detail` command shows the RSVP session for the ingress LSP and the bypass path, which appears as a separate RSVP ingress session for the protected interface **10.0.24.2**. The bypass path is automatically generated. By default, the name appears as **Bypass > interface-address**, where the interface address is the next downstream router's interface (**10.0.24.2**). The explicit route **10.0.23.14 10.0.34.14** for the session shows **R3** as the transit node and **R4** as the egress node.

**Sample Output** The **show route table *routing-table-name*** command is used to display information about a particular routing table. In this case, the **vpn-a.inet.0** routing table.

```
user@R2-PE1> show route table vpn-a 192.168.5.1 detail
vpn-a.inet.0: 9 destinations, 13 routes (9 active, 0 holddown, 0 hidden)
192.168.5.0/24 (1 entry, 1 announced)
  *BGP      Preference: 170/-101
              Route Distinguisher: 192.168.4.1:4
              Next-hop reference count: 11
              Source: 192.168.4.1
              Next hop: via so-0/0/1.0 weight 0x1, selected
              Label-switched-path r2-r4
              Label operation: Push 100160
              Next hop: 10.0.23.14 via fe-0/1/1.0 weight 0x8001
              Label-switched-path r2-r4
              Label operation: Push 100160, Push 100064(top)
              Protocol next hop: 192.168.4.1
              Push 100160
              Indirect next hop: 8791000 262142
              State: <Secondary Active Int Ext>
              Local AS: 65432 Peer AS: 65432
              Age: 1d 5:22:31      Metric2: 1
              Task: BGP_65432.192.168.4.1+2056
              Announcement bits (1): 0-KRT
              AS path: 65400 I
              Communities: target:65432:100
              VPN Label: 100160
              Localpref: 100
              Router ID: 192.168.4.1
              Primary Routing Table bgp.13vpn.0
```

**Meaning** The sample output for the **show route table vpn-a 192.168.5.1 detail** command shows routes associated with the remote PE-CE location as indicated by the loopback address of the PE2 router **192.168.5.1**. In this case, there are different next hops with unequal weights (**0x1** and **0x8001**) associated with the remote location. For correct traffic protection, those two routes must appear in the forwarding table.

**Sample Output** The **show route forwarding-table** command displays the route entries in the kernel's forwarding table. This is the version of the forwarding table in the Routing Engine. The Routing Engine copies this table to the Packet Forwarding Engine. In this case, the set of routes installed in the forwarding table to verify that the routing protocol process (rpd) has relayed the correct information to the forwarding table for the specified destination.

```
user@R2-PE1> show route forwarding-table vpn vpn-a destination 192.168.5.1
extensive
Routing table: vpn-a.inet [Index 2]
Internet:

Destination: 192.168.5.0/24
Route type: user
Route reference: 0                               Route interface-index: 0
Flags: sent to PFE, prefix load balance
Next-hop type: indirect                           Index: 262142   Reference: 2
Next-hop type: Push 100160
Next-hop interface: so-0/0/1.0
```

**Meaning** The sample output for the **show route forwarding-table vpn vpn-a destination 192.168.5.1 extensive** command shows only one next hop **so-0/0/1.0** is installed in the forwarding table, indicating that the information in the forwarding table is not correct. We would expect to see the same paths installed in the forwarding table as appear in the routing table in the output for the **show route table vpn-a 192.168.5.1 detail**.

**Solution** The solution is to enable load-balancing and ensure that multiple next-hop forwarding table entries appear in the forwarding table for each destination. The forwarding-table entries can be an incoming MPLS label or an IP destination.

A load-balancing policy applied to the forwarding-table is the same mechanism required for ECMP (equal-cost multipath) load-balancing to install multiple next-hops into the forwarding-table. The extra paths installed for local repair are not used for load-balancing, because the paths are differently weighted, as demonstrated in the sample output for the **show routing table** and the **show route forwarding-table** commands.



**NOTE:** The load-balancing policy must be applied to all provider (P) and provider-edge (PE) routers that are required to support local repair.

The following sample output shows an example load-balancing configuration and the commands used to verify that the required two next-hop entries appear in the forwarding table.

**Sample Output** Use the following two **show configuration *statement-path*** commands to display a specific configuration hierarchy; in this case, policy-options and routing-options.

```
user@R2-PE1> show configuration policy-options
policy-statement lbpf {
    then {
        load-balance per-packet ;
    }
}
[...Output truncated...]

user@R2-PE1> show configuration routing-options
static {
    [...Output truncated...]
    route 100.100.1.0/24 reject;
}
router-id 192.168.2.1;
route-distinguisher-id 192.168.2.1;
autonomous-system 65432;
forwarding-table {
    export lbpf ;
}
```

**Meaning** The sample output for the **show configuration policy-options** and **show configuration routing-options** commands shows the two parts required to configure a load balancing policy. The **lbpf** policy includes the **load-balance per-packet** statement. The policy is then applied at the **[edit routing options forwarding-table]** hierarchy level with the **export lbpf** statement. Enabling load balancing results in the export of routes from the routing table to the forwarding table, and a solution to the problem.



**NOTE:** The load-balance per-packet statement is named *per-packet* for historical reasons. When the Packet Forwarding Engine was an IP Processor-I (before Junos 4.0), Junos supported only per-packet load balancing. When the IP Processor-II was introduced the behavior was changed to per-flow load balancing without changing the statement.

**Sample Output** Use the **show route forwarding-table** command to display the Routing Engine's forwarding table, including the network-layer prefixes and their next hops. This command is used to help verify that the routing protocol process has relayed the correction information to the forwarding table. In this case, the option **vpn vpn** is used to display routing table entries for the specified VPN **vpn-a**.

```
user@R2-PE1> show route forwarding-table vpn vpn-a destination 192.168.5.1 extensive
```

```
Routing table: vpn-a.inet [Index 2]  
Internet:
```

```
Destination: 192.168.5.0/24  
Route type: user  
Route reference: 0                               Route interface-index: 0  
Flags: sent to PFE  
Next-hop type: indirect                           Index: 262142   Reference: 2  
Next-hop type: unilist                             Index: 262146   Reference: 1  
Next-hop type: Push 100160  
Next-hop interface: so-0/0/1.0   Weight: 0x1  
Nexthop: 10.0.23.14  
Next-hop type: Push 100160, Push 100064(top)  
Next-hop interface: fe-0/1/1.0   Weight: 0x8001
```

**Meaning** The sample output for the **show route forwarding-table vpn vpn-a destination 192.168.5.1 extensive** command shows the correct two routes were relayed from the routing table to the forwarding table.

**Conclusion** In conclusion, a load balancing policy is required for link protection to work effectively. The principles are the same for the configuration of the **fast reroute** and the **node-link protection** statements.

**Router Configurations** The following output shows the configurations of all routers in the network. The **no-more** option entered after the pipe ( | ) prevents the output from being paginated if the output is longer than the length of the terminal screen.



**Sample Output** The following sample output is for the customer edge (CE) 1 router:

```

user@R1-CE1> show configuration | no-more
[...Output truncated...]
interfaces {
  so-0/0/0 {
    unit 0 {
      family inet {
        address 10.0.12.1/30;
      }
      family iso;
      family mpls;
    }
  }
  fxp0 {
    unit 0 {
      family inet {
        address 192.168.70.143/21;
      }
    }
  }
  lo0 {
    unit 0 {
      family inet {
        address 192.168.1.1/32;
      }
    }
  }
}
routing-options {
  static {
    /* corporate and alpha net */
    route 172.16.0.0/12 {
      next-hop 192.168.71.254;
      retain;
      no-readvertise;
    }
    /* old lab nets */
    route 192.168.0.0/16 {
      next-hop 192.168.71.254;
      retain;
      no-readvertise;
    }
    route 0.0.0.0/0 {
      discard;
      retain;
      no-readvertise;
    }
    route 172.16.0.0/24 reject;
    route 172.16.1.0/24 reject;
    route 172.16.2.0/24 reject;
    route 172.16.3.0/24 reject;
    route 192.168.1.0/24 reject;
  }
  router-id 192.168.1.1;
  autonomous-system 65400;
}
protocols {
  bgp {
    group PE1 {

```

```

        type external;
        export stat;
        peer-as 65432;
        neighbor 10.0.12.2;
    }
}
ospf {
    traffic-engineering;
    export stat;
    area 0.0.0.0 {
        interface so-0/0/0.0;
        interface lo0.0 {
            passive;
        }
    }
}
}
policy-options {
    policy-statement stat {
        term 1 {
            from protocol static;
            then accept;
        }
        term 2 {
            then reject;
        }
    }
}
}

```

**Sample Output** The following sample output is for the provider edge (PE) 1 ingress router :

```

user@R2-PE1> show configuration | no-more
[...Output truncated...]
interfaces {
    so-0/0/0 {
        description to-r1;
        unit 0 {
            family inet {
                address 10.0.12.2/30;
            }
            family iso;
            family mpls;
        }
    }
    so-0/0/1 {
        description to-r4;
        unit 0 {
            family inet {
                address 10.0.24.1/30;
            }
            family iso;
            family mpls;
        }
    }
    fe-0/1/1 {
        description to-r3;
        unit 0 {
            family inet {
                address 10.0.23.13/30;
            }
        }
    }
}

```

```

        family iso;
        family mpls;
    }
}
fxp0 {
    unit 0 {
        family inet {
            address 192.168.70.144/21;
        }
    }
}
lo0 {
    unit 0 {
        family inet {
            address 192.168.2.1/32;
        }
    }
}
}
routing-options {
    static {
        route 172.16.0.0/12 {
            next-hop 192.168.71.254;
            retain;
            no-readvertise;
        }
        route 192.168.0.0/16 {
            next-hop 192.168.71.254;
            retain;
            no-readvertise;
        }
        route 0.0.0.0/0 {
            discard;
            retain;
            no-readvertise;
        }
        route 100.100.1.0/24 reject;
    }
    router-id 192.168.2.1;
    route-distinguisher-id 192.168.2.1;
    autonomous-system 65432;
    forwarding-table {
        export lbpf;
    }
}
protocols {
    rsvp {
        interface fxp0.0 {
            disable;
        }
        interface all {
            link-protection;
        }
    }
    mpls {
        label-switched-path r2-r4 {
            to 192.168.4.1;
            link-protection;
            primary direct;
        }
        path via-r3 {

```

```
        10.0.23.14 strict;
        10.0.34.14 strict;
    }
    path direct {
        10.0.24.2 strict;
    }
    interface all;
    interface fxp0.0 {
        disable;
    }
}
bgp {
    export send-statics;
    group ibgp {
        type internal;
        local-address 192.168.2.1;
        family inet {
            unicast;
        }
        family inet-vpn {
            unicast;
        }
        export next-hop-self;
        peer-as 65432;
        neighbor 192.168.4.1;
    }
}
ospf {
    traffic-engineering;
    area 0.0.0.0 {
        interface lo0.0 {
            passive;
        }
        interface fe-0/1/1.0;
        interface so-0/0/1.0;
    }
}
}
policy-options {
    policy-statement lbpf {
        then {
            load-balance per-packet;
        }
    }
    policy-statement next-hop-self {
        from route-type external;
        then {
            next-hop self;
        }
    }
    policy-statement send-statics {
        term statics {
            from {
                route-filter 100.100.1.0/24 exact;
            }
            then accept;
        }
    }
    policy-statement vpna-export {
        term 1 {
            from protocol static;
        }
    }
}
```

```

        then {
            community add vpna-target;
            community add vpna-origin;
            accept;
        }
    }
    term 2 {
        then reject;
    }
}
policy-statement vpna-import {
    term 1 {
        from {
            protocol bgp;
            community vpna-target;
        }
        then accept;
    }
    term 2 {
        then reject;
    }
}
community vpna-origin members origin:192.168.2.1:1;
community vpna-target members target:65432:100;
}
routing-instances {
    vpn-a {
        instance-type vrf;
        interface so-0/0/0.0;
        vrf-target {
            import target:65432:100;
            export target:65432:100;
        }
        protocols {
            bgp {
                group CE1 {
                    type external;
                    peer-as 65400;
                    neighbor 10.0.12.1;
                }
            }
        }
    }
}
}

```

**Sample Output** The following sample output is for the provider (P) transit router:

```

user@R3-P> show configuration | no-more
[...Output truncated...]
interfaces {
    fe-1/3/0 {
        description to-r4;
        unit 0 {
            family inet {
                address 10.0.34.13/30;
            }
            family iso;
            family mpls;
        }
    }
}

```

```
fe-1/3/1 {
  description to-r2;
  unit 0 {
    family inet {
      address 10.0.23.14/30;
    }
    family iso;
    family mpls;
  }
}
fxp0 {
  unit 0 {
    family inet {
      address 192.168.70.145/21;
    }
  }
}
lo0 {
  unit 0 {
    family inet {
      address 192.168.3.1/32;
    }
    family iso {
      address 49.0004.1921.6800.3001.00;
    }
  }
}
}
routing-options {
  static {
    /* corporate and alpha net */
    route 172.16.0.0/12 {
      next-hop 192.168.71.254;
      retain;
      no-readvertise;
    }
    /* old lab nets */
    route 192.168.0.0/16 {
      next-hop 192.168.71.254;
      retain;
      no-readvertise;
    }
    route 0.0.0.0/0 {
      discard;
      retain;
      no-readvertise;
    }
  }
  router-id 192.168.3.1;
  autonomous-system 65432;
}
protocols {
  rsvp {
    interface all {
      link-protection;
    }
    interface fxp0.0 {
      disable;
    }
  }
}
mpls {
```

```

        icmp-tunneling;
        interface all;
        interface fxp0.0 {
            disable;
        }
    }
    ospf {
        traffic-engineering;
        area 0.0.0.0 {
            interface lo0.0 {
                passive;
            }
            interface fxp0.0 {
                disable;
            }
            interface all;
        }
    }
}

```

**Sample Output** The following sample output is for the provider edge (PE) 2 ingress router :

```

user@R4-PE2> show configuration | no-more
[...Output truncated...]
interfaces {
    so-0/0/1 {
        description to-R2;
        unit 0 {
            family inet {
                address 10.0.24.2/30;
            }
            family iso;
            family mpls;
        }
    }
    so-0/0/2 {
        description to-R5-CE2;
        unit 0 {
            family inet {
                address 10.0.45.1/30;
            }
            family iso;
            family mpls;
        }
    }
    fe-0/1/3 {
        description to-R3-P;
        unit 0 {
            family inet {
                address 10.0.34.14/30;
            }
            family iso;
            family mpls;
        }
    }
    fxp0 {
        unit 0 {
            family inet {
                address 192.168.70.146/21;
            }
        }
    }
}

```

```

    }
  }
  lo0 {
    unit 0 {
      family inet {
        address 192.168.4.1/32;
      }
    }
  }
}
routing-options {
  static {
    route 172.16.0.0/12 {
      next-hop 192.168.71.254;
      retain;
      no-readvertise;
    }
    route 192.168.0.0/16 {
      next-hop 192.168.71.254;
      retain;
      no-readvertise;
    }
    route 0.0.0.0/0 {
      discard;
      retain;
      no-readvertise;
    }
    route 100.100.4.0/24 reject;
  }
  router-id 192.168.4.1;
  route-distinguisher-id 192.168.4.1;
  autonomous-system 65432;
  forwarding-table {
    export lbpf;
  }
}
protocols {
  rsvp {
    interface fxp0.0 {
      disable;
    }
    interface all {
      link-protection;
    }
  }
  mpls {
    label-switched-path r4-r2 {
      to 192.168.2.1;
    }
    interface all;
    interface fxp0.0 {
      disable;
    }
  }
  bgp {
    export send-statics;
    group ibgp {
      type internal;
      local-address 192.168.4.1;
      family inet {
        unicast;
      }
    }
  }
}

```



```

    }
    family inet-vpn {
        unicast;
    }
    export next-hop-self;
    peer-as 65432;
    neighbor 192.168.2.1;
}
}
ospf {
    traffic-engineering;
    area 0.0.0.0 {
        interface lo0.0 {
            passive;
        }
        interface fe-0/1/3.0;
        interface so-0/0/1.0;
    }
}
}
policy-options {
    policy-statement lbpf {
        then {
            load-balance per-packet;
        }
    }
    policy-statement next-hop-self {
        from route-type external;
        then {
            next-hop self;
        }
    }
    policy-statement send-statics {
        term statics {
            from {
                route-filter 100.100.4.0/24 exact;
            }
            then accept;
        }
    }
    policy-statement vpnb-export {
        term 1 {
            from protocol static;
            then {
                community add vpnb-target;
                community add vpnb-origin;
                accept;
            }
        }
        term 2 {
            then reject;
        }
    }
    policy-statement vpnb-import {
        term 1 {
            from {
                protocol bgp;
                community vpnb-target;
            }
            then accept;
        }
    }
}

```

```

        term 2 {
            then reject;
        }
    }
    community vpnb-origin members origin:192.168.5.1:1;
    community vpnb-target members target:65432:100;
}
routing-instances {
    vpn-b {
        instance-type vrf;
        interface so-0/0/2.0;
        vrf-target {
            import target:65432:100;
            export target:65432:100;
        }
        protocols {
            bgp {
                group CE2 {
                    type external;
                    peer-as 65400;
                    neighbor 10.0.45.2;
                }
            }
        }
    }
}

```

**Sample Output** The following sample output is for the customer edge (CE) 2 router:

```

user@R5-CE2> show configuration | no-more
[...Output truncated...]
interfaces {
    so-0/0/2 {
        unit 0 {
            family inet {
                address 10.0.45.2/30;
            }
        }
    }
    fxp0 {
        unit 0 {
            family inet {
                address 192.168.70.147/21;
            }
        }
    }
    lo0 {
        unit 0 {
            family inet {
                address 192.168.5.1/32;
            }
            family iso {
                address 49.0004.1921.6800.5001.00;
            }
        }
    }
}
routing-options {
    graceful-restart;
    static {

```

```

/* corporate and alpha net */
route 172.16.0.0/12 {
    next-hop 192.168.71.254;
    retain;
    no-readvertise;
}
/* old lab nets */
route 192.168.0.0/16 {
    next-hop 192.168.71.254;
    retain;
    no-readvertise;
}
route 0.0.0.0/0 {
    discard;
    retain;
    no-readvertise;
}
route 172.16.0.0/24 reject;
route 172.16.1.0/24 reject;
route 172.16.2.0/24 reject;
route 172.16.3.0/24 reject;
route 192.168.5.0/24 reject;
}
router-id 192.168.5.1;
autonomous-system 65400;
}
protocols {
    bgp {
        group PE2 {
            type external;
            export stat;
            peer-as 65432;
            neighbor 10.0.45.1;
        }
    }
    ospf {
        traffic-engineering;
        export stat;
        area 0.0.0.0 {
            interface so-0/0/2.0;
            interface lo0.0 {
                passive;
            }
        }
    }
}
policy-options {
    policy-statement stat {
        term 1 {
            from protocol static;
            then accept;
        }
        term 2 {
            then reject;
        }
    }
}
}

```

## Problem Establishing a GRE Tunnel Checklist

**Problem** **Description:** This checklist provides the links and commands for troubleshooting a case study about a problem establishing a Generalized Multiprotocol Label Switching (GMPLS) label-switched path (LSP). Specifically, the configuration of the data channel is incorrect because the configuration includes different interface types at both ends of the tunnel. The principles and solution used in this case study also apply to control channel configuration.

The checklist includes the links to a brief summary of GRE tunnels within the context of GMPLS, an example network scenario, and more detailed information about the commands used to troubleshoot and resolve the problem.

The troubleshooting process described in this case study should not be followed rigidly; it is a basis from which you can develop your own process to suit your particular situation. (See [Table 35 on page 1190](#))

**Table 35: Problem Establishing a GRE Tunnel Checklist**

Tasks	Command or Action
<a href="#">“Troubleshooting GMPLS and GRE Tunnel” on page 1190</a>	
<a href="#">“Symptom” on page 1193</a>	<pre>show mpls lsp show rsvp session</pre>
<a href="#">“Cause” on page 1193</a>	The cause of the problem with the GMPLS LSP is the configuration of different interface types at both ends of the GMPLS data channel.
<a href="#">“Troubleshooting Commands” on page 1193</a>	<pre>show mpls lsp extensive show rsvp session detail show link-management peer show link-management te-link show configuration protocols mpls monitor start filename show log filename</pre>
<a href="#">“Solution” on page 1199</a>	<p>Configure both ends of the data channel with the same switching type.</p> <pre>show configuration protocols link-management show mpls lsp show link-management te-link</pre>
<a href="#">“Conclusion” on page 1200</a>	Both ends of a GMPLS data must be the same encapsulation or interface type.
<a href="#">“Router Configurations” on page 1200</a>	<code>show configuration   no-more</code>

## Troubleshooting GMPLS and GRE Tunnel

**Problem** **Description:** The logical control channel for GMPLS must be a point-to-point link and must have some form of IP reachability. On broadcast interfaces or when there are multiple hops between control channel peers, use a GRE tunnel for the control channel.

For more detailed information on GMPLS and GRE tunnels see the *Junos MPLS Applications Configuration Guide* and the *Junos Feature Guide*.

A tunnel PIC is *not* required to configure a GRE tunnel for the GMPLS control channel. Instead, use the software-based **gre** interface, rather than the hardware-based **gr-fpc/pic/port** interface.



**CAUTION:** Due to restrictions to the software-based **gre** interface, the GMPLS control channel is the only supported use of the software-based **gre** interface. Any other use is expressly unsupported and might cause an application failure.

The following example shows a basic **gre** interface configuration. In this case, the tunnel source is the loopback address of the local router and the destination address is the loopback destination of the remote router. Traffic that has a next hop of the tunnel destination will use the tunnel. The tunnel is not automatically used by all the traffic passing through the interface. Only traffic with the tunnel destination as the next hop uses the tunnel.

**Sample Output**

```
user@R1> show configuration interfaces
[...Output truncated...]
gre {
  unit 0 {
    tunnel {
      source 10.0.12.13;
      destination 10.0.12.14;
    }
    family inet {
      address 10.35.1.6/30;
    }
    family mpls;
  }
}
```

**Sample Output** The following sample output for the **show interfaces** command shows the encapsulation type and header, the maximum speed, packets through the logical interface, the destination, and logical address.

```
user@R1> show interfaces gre
Physical interface: gre, Enabled, Physical link is Up
  Interface index: 10, SNMP ifIndex: 8
  Type: GRE, Link-level type: GRE, MTU: Unlimited, Speed: Unlimited
  Device flags : Present Running
  Interface flags: Point-To-Point SNMP-Traps
    Input packets : 0
    Output packets: 0

  Logical interface gre.0 (Index 70) (SNMP ifIndex 47)
    Flags: Point-To-Point SNMP-Traps 0x4000
    IP-Header 10.0.12.14:10.0.12.13:47:df:64:0000000000000000
    Encapsulation: GRE-NULL
    Input packets : 171734
    Output packets: 194560
    Protocol inet, MTU: 1476
    Flags: None
```


Addresses, Flags: Is-Preferred Is-Primary  
 Destination: 10.35.1.4/30, Local: 10.35.1.6, Broadcast: 10.35.1.7  
 Protocol mpls, MTU: 1464  
 Flags: None

The following are various requirements when you configure a GMPLS LSP using a GRE tunnel:

- The data channel must start and end on the same type of interface.
- The control channel can be a GRE tunnel that starts and ends on the same or different interface type.
- The GRE tunnel must be configured indirectly with the **peer-interface peer-name** statement at the **[edit protocol ospf]** hierarchy level.
- The GRE interface must be disabled at the **[edit protocols ospf]** and **[edit protocols rsvp]** hierarchy levels.
- Data and control channels must be defined correctly in the LMP configuration .
- It is optional to disable Constrained Shortest Path First (CSPF) with the **no-cspf** statement.

This case focuses on the incorrect configuration of the endpoints of the GRE tunnel. However, you can use a similar process and commands to diagnose other GRE tunnel problems. [Figure 117 on page 1192](#) illustrates a network topology with MPLS tunneled through a GRE interface.

**Figure 117: GMPLS Network Topology**

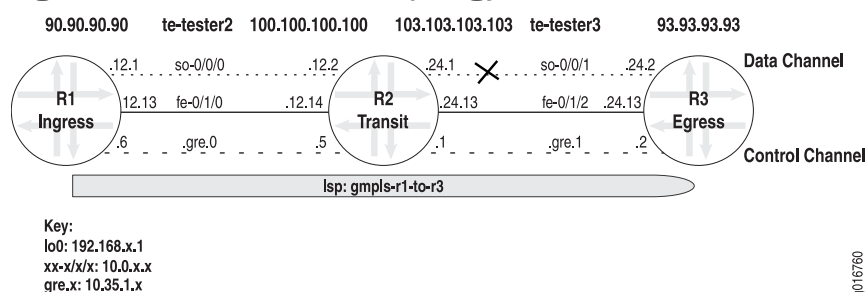

The MPLS network topology in [Figure 117 on page 1192](#) shows Juniper Networks routers configured with a GRE tunnel that consists of the following components:

- A strict GMPLS LSP path from the ingress router to the egress router.
- On the ingress router, CSPF disabled with the **no-cspf** statement at the **[edit protocol mpls label-switched-path lsp-name]** hierarchy level.
- Traffic-engineering links and control channels within the **peer** statement at the **[edit protocols link-management]** hierarchy level on all routers.
- OSPF and OSPF traffic engineering configured on all routers.
- A reference to the **peer-interface** in both OSPF and RSVP on all routers.
- A switching-type problem between R2 and R3.

**Symptom** The LSP in the network shown in [Figure 117 on page 1192](#) is down, as indicated by the output from the **show mpls lsp** and **show rsvp session** commands, which display very similar information. The **show mpls lsp** command shows all LSPs configured on the router, as well as all transit and egress LSPs. The **show rsvp session** command displays summary information about RSVP sessions. You can use either command to verify the state of the LSP. In this case, LSP **gmpls-r1-to-r3** is down (**Dn**).

**Sample Output**

```

user@R1> show mpls lsp
Ingress LSP: 1 sessions
To          From          State Rt ActivePath      P      LSPName
192.168.4.1 192.168.1.1 Dn   0 -      gmpls-r1-to-r3
Bidir
Total 1 displayed, Up 0, Down 1

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

user@R1> show rsvp session
Ingress RSVP: 1 sessions
To          From          State  Rt Style Labelin Labelout LSPName
192.168.4.1 192.168.1.1 Dn    0 0 -    -    - gmpls-r1-to-r3
Bidir
Total 1 displayed, Up 0, Down 1

Egress RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

**Cause** The cause of the problem with the GMPLS LSP is the configuration of different interface types at both ends of the GMPLS data channel.

**Troubleshooting Commands** The Junos OS includes commands that are useful when troubleshooting a problem. This topic provides a brief description of each command, followed by sample output, and a discussion of the output in relation to the problem.

You can use the following commands when troubleshooting a GMPLS problem:

```

user@host> show mpls lsp extensive
user@host> show rsvp session detail
user@host> show link-management peer
user@host> show link-management te-link
user@host> show configuration protocols mpls
user@host> monitor start filename
user@host> show log filename

```

**Sample Output** Use the **show mpls lsp extensive** command on transit router R1 to display detailed information about all LSPs transiting, terminating, and configured on the router.

```

user@R1> show mpls lsp extensive
Ingress LSP: 1 sessions

```

```

192.168.4.1
  From: 192.168.1.1, State: Dn, ActiveRoute: 0, LSPname: gmpls-r1-to-r3
  Bidirectional
  ActivePath: (none)
  LoadBalance: Random
  Encoding type: SDH/SONET, Switching type: PSC-1, GPID: IPv4
  Primary    p1                State: Dn
    SmartOptimizeTimer: 180
    8 Dec 20 18:08:02 192.168.4.1: MPLS label allocation failure [3 times]
    7 Dec 20 18:07:53 Originate Call
    6 Dec 20 18:07:53 Clear Call
    5 Dec 20 18:07:53 Deselected as active
    4 Dec 20 18:06:13 Selected as active path
    3 Dec 20 18:06:13 Record Route: 100.100.100.100 93.93.93.93
    2 Dec 20 18:06:13 Up
    1 Dec 20 18:06:13 Originate Call
  Created: Wed Dec 20 18:06:12 2006
Total 1 displayed, Up 0, Down 1

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

**Meaning** The sample output for the `show mpls lsp extensive` command shows an error message (**MPLS label allocation failure**) in the log section of the output. This LSP event indicates that the MPLS protocol or the `family mpls` statement were not configured properly. When the LSP event is preceded by an IP address, the address is typically the router that has the MPLS configuration error. In this case, it appears that the router with the `lo0` address of **192.168.4.1 (R3)** has an MPLS configuration error.

**Sample Output** Use the `show rsvp session detail` command to display detailed information about RSVP sessions.

```

user@R1> show rsvp session detail
Ingress RSVP: 1 sessions

192.168.4.1
  From: 192.168.1.1, LSPstate: Dn, ActiveRoute: 0
  LSPname: gmpls-r1-to-r3, LSPpath: Primary
  Bidirectional, Upstream label in: 21253, Upstream label out: -
  Suggested label received: -, Suggested label sent: 21253
  Recovery label received: -, Recovery label sent: -
  Resv style: 0 - , Label in: -, Label out: -
  Time left: -, Since: Wed Dec 20 18:07:53 2006
  Tspec: rate 0bps size 0bps peak 155.52Mbps m 20 M 1500
  Port number: sender 2 receiver 46115 protocol 0
  PATH rcvfrom: localclient
  Adspec: sent MTU 1500
  Path MTU: received 0
  PATH sentto: 10.35.1.5 (tester2) 3 pkts
  Explct route: 100.100.100.100 93.93.93.93
  Record route: <self> ...incomplete
Total 1 displayed, Up 0, Down 1

Egress RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0

```



```
Transit RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

**Meaning** The sample output for the `show rsvp session detail` command shows that LSP `gmpls-r1-to-r3` is down (`LSPstate:Dn`). The route record is incomplete, indicating a problem with the explicit route `100.100.100.100 93.93.93.93`. The address `100.100.100.100` is the data channel on `R2 so-0/0/0`, and the address `93.93.93.93` is the data channel on `R3`.

**Sample Output** Use the `show link-management peer` command to display MPLS peer link information.

```
user@R1> show link-management peer
Peer name: tester2, System identifier: 48428
  State: Up, Control address: 10.35.1.5
    Control-channel      State
    gre.0                Active
  TE links:
    tester2
```

```
user@R2> show link-management peer
Peer name: tester2, System identifier: 48428
  State: Up, Control address: 10.35.1.6
    Control-channel      State
    gre.0                Active
  TE links:
    te-tester2
```

```
Peer name: tester3 , System identifier: 48429
  State: Up , Control address: 10.35.1.2
    Control-channel      State
    gre.1                Active
  TE links:
    te-tester3
```

```
user@R3> show link-management peer
Peer name: tester3, System identifier: 48429
  State: Up, Control address: 10.35.1.1
    Control-channel      State
    gre.0                Active
  TE links:
    te-tester3
```

**Meaning** The sample output from all routers in the example network in [Figure 117 on page 1192](#) for the `show link-management peer` command shows that all control channels are up and active. A detailed analysis of the output shows the following information:

- Name of the peer, `tester2` or `tester3`, which is the same on neighboring routers for ease of troubleshooting.
- Internal identifier for the peer, `48428` for `tester2` and `48429` for `tester3`. The internal identifier is a range of values from 0 through 64,000.
- The state of the peer, which can be up or down. In this case, all peers are up.
- The address to which a control channel is established, for example, `10.35.1.5`.

- The state of the control channel, which can be up, down, or active.
- The traffic-engineered links that are managed by their peer, indicating that control channel **gre.0** is managed by **tester3**.

**Sample Output** Use the show link-management te-link command to display the resources used to set up Multiprotocol Label Switching (MPLS) traffic-engineered forwarding paths.

```
user@R1> show link-management te-link
TE link name:  tester2, State: Up
  Local identifier: 2005, Remote identifier: 21253, Local address: 90.90.90.90,
  Remote address: 100.100.100.100,
  Encoding: SDH/SONET, Switching: PSC-1, Minimum bandwidth: 155.52Mbps, Maximum
  bandwidth: 155.52Mbps, Total bandwidth: 155.52Mbps,
  Available bandwidth: 0bps
    Name      State Local ID Remote ID      Bandwidth Used   LSP-name
    so-0/0/0  Up    21253  21253      155.52Mbps Yes   gmpls-r1-to-r3

user@R2> show link-management te-link
TE link name:  te-tester2, State: Up
  Local identifier: 7002, Remote identifier: 22292, Local address: 100.100.100.100,
  Remote address: 90.90.90.90,
  Encoding: SDH/SONET, Switching: PSC-1, Minimum bandwidth: 155.52Mbps, Maximum
  bandwidth: 155.52Mbps, Total bandwidth: 155.52Mbps,
  Available bandwidth: 0bps
    Name      State Local ID Remote ID      Bandwidth Used   LSP-name
    so-0/0/0  Up    21253  21253      155.52Mbps Yes   gmpls-r1-to-r3
TE link name:  te-tester3, State: Up
  Local identifier: 7003, Remote identifier: 21254, Local address: 103.103.103.103,
  Remote address: 93.93.93.93,
  Encoding: SDH/SONET, Switching: PSC-1, Minimum bandwidth: 155.52Mbps, Maximum
  bandwidth: 155.52Mbps, Total bandwidth: 155.52Mbps,
  Available bandwidth: 0bps
    Name      State Local ID Remote ID      Bandwidth Used   LSP-name
    so-0/0/1  Up    21252  21252      155.52Mbps Yes   gmpls-r1-to-r3

user@R3> show link-management te-link
TE link name:  te-tester3, State: Up
  Local identifier: 7003, Remote identifier: 21254, Local address: 93.93.93.93,
  Remote address: 103.103.103.103,
  Encoding: SDH/SONET, Switching: PSC-1, Minimum bandwidth: 0bps, Maximum
  bandwidth: 0bps, Total bandwidth: 0bps,
  Available bandwidth: 0bps
    Name      State Local ID Remote ID      Bandwidth Used   LSP-name
    so-0/0/1  Dn    21252  21252      155.52Mbps No
```

**Meaning** The sample output for the **show link-management te-link** command issued on the three routers in the network in [Figure 117 on page 1192](#) shows the resources allocated to the traffic-engineered links **te-tester2** and **te-tester3**. The resources are the SONET interfaces **so-0/0/0** and **so-0/0/1**. On **R1** and **R2**, the SONET interfaces are used for the LSP **gmpls-r1-to-r3**, as indicated by **Yes** in the **Used** field. However, the SONET interface **so-0/0/1** on **R3** is down (**Dn**) and is not used for the LSP (**Used No**). Further investigation is required to discover why the SONET interface on **R3** is down.

**Sample Output** Use the show log *filename* command to display the contents of the specified log file. In this case, the log file *rsvp.log* is configured at the [edit protocols rsvp traceoptions]

hierarchy level. When the log file is configured, you must issue the `monitor start filename` command to begin logging messages to the file.

```
user@R1> show configuration protocols rsvp
traceoptions {
    file rsvp.log size 3m world-readable;
    flag state detail;
    flag error detail;
    flag packets detail;
}

user@R1> monitor start rsvp.log
```



**NOTE:** The `find Error` option entered after the pipe (|) searches the output for an instance of the term *Error*.

#### Sample Output

```
user@R3>
show log rsvp.log | find Error
Dec 28 17:23:32 Error Len 20 Session preempted flag 0 by 192.168.4.1 TE-link
103.103.103.103
[...Output truncated...]
Dec 28 17:23:32 RSVP new resv state,session 192.168.4.1(port/tunnel ID 46115
Ext-ID 192.168.1.1)Proto 0
Dec 28 17:23:32 RSVP-LMP reset LMP request for gmpls-r1-to-r3
Dec 28 17:23:32 RSVP->LMP request - resource for LSP gmpls-r1-to-r3
Dec 28 17:23:32 LMP->RSVP resource request gmpls-r1-to-r3 failed cannot find resource
encoding type SDH/SONET remote label 21252 bandwidth bw[0
Dec 28 17:23:32 RSVP-LMP reset LMP request for gmpls-r1-to-r3
Dec 28 17:23:32 RSVP originate PathErr 192.168.4.1->192.168.2.1 MPLS label allocation failure LSP
gmpls-r1-to-r3(2/46115)
Dec 28 17:23:32 RSVP send PathErr 192.168.4.1->192.168.2.1 Len=196 tester3
Dec 28 17:23:32 Session7 Len 16 192.168.4.1(port/tunnel ID 46115 Ext-ID
192.168.1.1) Proto 0
Dec 28 17:23:32 Hop Len 20 192.168.4.1/0x086e4770 TE-link 103.103.103.103
Dec 28 17:23:32 Error Len 20 MPLS label allocation failure flag 0 by
192.168.4.1 TE-link 103.103.103.103
Dec 28 17:23:32 Sender7 Len 12 192.168.1.1(port/lsp ID 2)
Dec 28 17:23:32 Tspec Len 36 rate 0bps size 0bps peak 155.52Mbps m 20 M 1500
Dec 28 17:23:32 ADspec Len 48 MTU 1500
Dec 28 17:23:32 RecRoute Len 20 103.103.103.103 90.90.90.90
Dec 28 17:23:32 SuggLabel Len 8 21252
Dec 28 17:23:32 UpstrLabel Len 8 21252
```

**Meaning** The sample output from the egress router **R3** for the `show log rsvp.log` command is a snippet taken from the log file. The snippet shows a Link Management Protocol (LMP) resource request for the LSP **gmpls-r1-to-r3**. The request has problems with the encoding type (SDH/SONET), indicating a possible error with the SONET interface connecting **R2** and **R3**. Further investigation of the configuration of the LMP on **R2** and **R3** is required.

**Sample Output** Use the `show configuration statement-path` command to display a specific configuration hierarchy; in this instance, link-management.

```
user@R2> show configuration protocols link-management
```

```
te-link te-tester2 {
    local-address 100.100.100.100;
    remote-address 90.90.90.90;
    remote-id 22292;
    interface so-0/0/0 {
        local-address 100.100.100.100;
        remote-address 90.90.90.90;
        remote-id 21253;
    }
}
te-link te-tester3 {
    local-address 103.103.103.103;
    remote-address 93.93.93.93;
    remote-id 21254;
    interface so-0/0/1 {
        local-address 103.103.103.103;
        remote-address 93.93.93.93;
        remote-id 21252;
    }
}
peer tester2 {
    address 10.35.1.6;
    control-channel gre.0;
    te-link te-tester2;
}
peer tester3 {
    address 10.35.1.2;
    control-channel gre.1;
    te-link te-tester3;
}
```

```
user@R3> show configuration protocols link-management
```

```
te-link te-tester3 {
    local-address 93.93.93.93;
    remote-address 103.103.103.103;
    remote-id 21254;
}
interface at-0/3/1 {
    local-address 93.93.93.93;
    remote-address 103.103.103.103;
    remote-id 21252;
}
}
peer tester3 {
    address 10.35.1.1;
    control-channel gre.0;
    te-link te-tester3;
}
```

**Meaning** The sample output from transit router **R2** and ingress router **R3** for the **show configuration protocols link-management** command shows that the interface type on the two routers is different. The resource allocated to **te-tester3** on transit router **R2** is a SONET interface, while the resource allocated to **te-tester3** on egress router **R3** is an ATM interface. The interface type on each end of the data or control channels must be of the same type. In this case, both ends should be SONET or ATM.

**Solution** The solution to the problem of different interface or encapsulation types at either end of the GMPLS LSP is to make sure that the interface type is the same at both ends. In this case, the ATM interface was deleted from the link-management configuration on **R3**, and a SONET interface was configured instead.

The following commands illustrate the correct configuration and commands to verify that the GMPLS LSP is up and using the data channel:

```
user@R3> show configuration protocols link-management
user@R3> show mpls lsp
user@R3> show link-management te-link
```

**Sample Output**

```
user@R3> show configuration protocols link-management
te-link te-tester3 {
    local-address 93.93.93.93;
    remote-address 103.103.103.103;
    remote-id 21254;
    interface so-0/0/1 { # SONET interface replaces the incorrect ATM interface
        local-address 93.93.93.93;
        remote-address 103.103.103.103;
        remote-id 21252;
    }
}
peer tester3 {
    address 10.35.1.1;
    control-channel gre.0;
    te-link te-tester3;
}

user@R3> show mpls lsp
Ingress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
Egress LSP: 1 sessions
To          From          State   Rt Style Labelin Labelout LSPname
192.168.4.1 192.168.1.1 Up      0 1FF 21252  -gmpls-r1-to-r3
Bidir
Total 1 displayed, Up 1, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

user@R3> show link-management te-link
TE link name: te-tester3, State: Up
Local identifier: 7003, Remote identifier: 21254, Local address: 93.93.93.93,
Remote address: 103.103.103.103,
Encoding: SDH/SONET, Switching: PSC-1, Minimum bandwidth: 155.52Mbps, Maximum
bandwidth: 155.52Mbps, Total bandwidth: 155.52Mbps,
Available bandwidth: 0bps
Name          State Local ID Remote ID   Bandwidth Used LSP-name
so-0/0/1 Up      21252  21252  155.52Mbps Yes gmpls-r1-to-r3
```

**Meaning** The sample output for the **show protocols link-management**, **show mpls lsp**, and **show link-management te-link** commands from ingress router **R3** show that the problem is solved. LMP is correctly configured, and the LSP **gmpls-r1-to-r3** is up and using the data channel **so-0/0/1**.

**Conclusion** In conclusion, both ends of a GMPLS data channel must be the same encapsulation or interface type. This case illustrates the correct configuration of the data channel. The principles are the same for the control channel.

**Router Configurations** Output that shows the configurations of the ingress router in the network. The **no-more** option entered after the pipe (|) prevents the output from being paginated if the output is longer than the length of the terminal screen.

**Sample Output** The following sample output is for ingress router R1:

```
user@R1> show configuration | no-more
[...Output truncated...]
interfaces {
  so-0/0/0 {
    unit 0 {
      family inet {
        address 10.0.12.1/32 {
          destination 10.0.12.2;
        }
      }
      family mpls;
    }
  }
  fe-0/1/0 {
    unit 0 {
      family inet {
        address 10.0.12.13/30;
      }
      family mpls;
    }
  }
  fxp0 {
    unit 0 {
      family inet {
        address 192.168.70.143/21;
      }
    }
  }
  gre {
    unit 0 {
      tunnel {
        source 10.0.12.13;
        destination 10.0.12.14;
      }
      family inet {
        address 10.35.1.6/30;
      }
      family mpls;
    }
  }
  lo0 {
    unit 0 {
      family inet {
        address 192.168.1.1/32;
      }
    }
  }
}
routing-options {
```

```

static {
    /* corporate and alpha net */
    route 172.16.0.0/12 {
        next-hop 192.168.71.254;
        retain;
        no-readvertise;
    }
    /* old lab nets */
    route 192.168.0.0/16 {
        next-hop 192.168.71.254;
        retain;
        no-readvertise;
    }
    route 0.0.0.0/0 {
        discard;
        retain;
        no-readvertise;
    }
}
router-id 192.168.1.1;
autonomous-system 65432;
}
protocols {
    rsvp {
        traceoptions {
            file rsvp.log size 3m world-readable;
            flag state detail;
            flag error detail;
            flag packets detail;
        }
        interface fxp0.0 {
            disable;
        }
        interface all;
        interface lo0.0;
        interface gre.0 {
            disable;
        }
        peer-interface tester2;
    }
    mpls {
        label-switched-path gmpls-r1-to-r3 {
            from 192.168.1.1;
            to 192.168.4.1;
            lsp-attributes {
                switching-type psc-1;
                encoding-type sonet-sdh;
            }
            no-cspf;
            primary p1;
        }
        path p1 {
            100.100.100.100 strict;
            93.93.93.93 strict;
        }
        interface all;
    }
    ospf {
        traffic-engineering;
        area 0.0.0.0 {
            interface lo0.0;

```

```

        interface fe-0/1/0.0;
        interface fxp0.0 {
            disable;
        }
        interface gre.0 {
            disable;
        }
        peer-interface tester2;
    }
}
link-management {
    te-link tester2 {
        local-address 90.90.90.90;
        remote-address 100.100.100.100;
        remote-id 21253;
        interface so-0/0/0 {
            local-address 90.90.90.90;
            remote-address 100.100.100.100;
            remote-id 21253;
        }
    }
    peer tester2 {
        address 10.35.1.5;
        control-channel gre.0;
        te-link tester2;
    }
}
}

```

**Sample Output** The following sample output is for transit router R2:

```

user@R2>show configuration | no-more
[...Output truncated...]
interfaces {
    so-0/0/0 {
        unit 0 {
            family inet {
                address 10.0.12.2/32 {
                    destination 10.0.12.1;
                }
            }
            family mpls;
        }
    }
    so-0/0/1 {
        unit 0 {
            family inet {
                address 10.0.24.1/32 {
                    destination 10.0.24.2;
                }
            }
            family mpls;
        }
    }
    fe-0/1/0 {
        unit 0 {
            family inet {
                address 10.0.12.14/30;
            }
            family mpls;
        }
    }
}

```



```

}
fe-0/1/2 {
  unit 0 {
    family inet {
      address 10.0.24.13/30;
    }
    family mpls;
  }
}
fxp0 {
  unit 0 {
    family inet {
      address 192.168.70.144/21;
    }
  }
}
gre {
  unit 0 {
    tunnel {
      source 10.0.12.14;
      destination 10.0.12.13;
    }
    family inet {
      address 10.35.1.5/30;
    }
    family mpls;
  }
  unit 1 {
    tunnel {
      source 10.0.24.13;
      destination 10.0.24.14;
    }
    family inet {
      address 10.35.1.1/30;
    }
    family mpls;
  }
}
lo0 {
  unit 0 {
    family inet {
      address 192.168.2.1/32;
    }
  }
}
}
routing-options {
  static {
    route 172.16.0.0/12 {
      next-hop 192.168.71.254;
      retain;
      no-readvertise;
    }
    route 192.168.0.0/16 {
      next-hop 192.168.71.254;
      retain;
      no-readvertise;
    }
    route 0.0.0.0/0 {
      discard;
      retain;
    }
  }
}

```

```
        no-readvertise;
    }
}
router-id 192.168.2.1;
autonomous-system 65432;
}
protocols {
    rsvp {
        traceoptions {
            file rsvp.log size 3m world-readable;
            flag packets detail;
            flag state detail;
            flag error detail;
        }
        interface fxp0.0;
        interface lo0.0;
        interface all;
        interface gre.0 {
            disable;
        }
        peer-interface tester2;
        peer-interface tester3;
    }
    mpls {
        interface all;
    }
    ospf {
        traffic-engineering;
        area 0.0.0.0 {
            interface lo0.0;
            interface fxp0.0 {
                disable;
            }
            interface gre.0 {
                disable;
            }
            interface fe-0/1/0.0;
            interface fe-0/1/2.0;
            interface gre.1 {
                disable;
            }
            peer-interface tester2;
            peer-interface tester3;
        }
    }
}
link-management {
    te-link te-tester2 {
        local-address 100.100.100.100;
        remote-address 90.90.90.90;
        remote-id 22292;
        interface so-0/0/0 {
            local-address 100.100.100.100;
            remote-address 90.90.90.90;
            remote-id 21253;
        }
    }
    te-link te-tester3 {
        local-address 103.103.103.103;
        remote-address 93.93.93.93;
        remote-id 21254;
        interface so-0/0/1 {
```

```

        local-address 103.103.103.103;
        remote-address 93.93.93.93;
        remote-id 21252;
    }
}
peer tester2 {
    address 10.35.1.6;
    control-channel gre.0;
    te-link te-tester2;
}
peer tester3 {
    address 10.35.1.2;
    control-channel gre.1;
    te-link te-tester3;
}
}
}

```

**Sample Output** The following sample output is for egress router R3:

```

user@R3> show configuration | no-more
[...Output truncated...]
interfaces {
    so-0/0/1 {
        unit 0 {
            family inet {
                address 10.0.24.2/32;
            }
            family mpls;
        }
    }
    fe-0/1/2 {
        unit 0 {
            family inet {
                address 10.0.24.14/30;
            }
            family mpls;
        }
    }
    fxp0 {
        unit 0 {
            family inet {
                address 192.168.70.146/21;
            }
        }
    }
    gre {
        unit 0 {
            tunnel {
                source 10.0.24.14;
                destination 10.0.24.13;
            }
            family inet {
                address 10.35.1.2/30;
            }
            family mpls;
        }
    }
    lo0 {
        unit 0 {
            family inet {

```

```
        address 192.168.4.1/32;
    }
}
}
routing-options {
    static {
        route 172.16.0.0/12 {
            next-hop 192.168.71.254;
            retain;
            no-readvertise;
        }
        route 192.168.0.0/16 {
            next-hop 192.168.71.254;
            retain;
            no-readvertise;
        }
        route 0.0.0.0/0 {
            discard;
            retain;
            no-readvertise;
        }
    }
    router-id 192.168.4.1;
    autonomous-system 65432;
}
protocols {
    rsvp {
        traceoptions {
            file rsvp.log size 3m world-readable;
            flag packets detail;
            flag error;
            flag state;
            flag lmp;
        }
        interface fxp0.0 {
            disable;
        }
        interface all;
        interface lo0.0;
        interface gre.0 {
            disable;
        }
        peer-interface tester3;
    }
    mpls {
        interface all;
    }
    ospf {
        traffic-engineering;
        area 0.0.0.0 {
            interface fxp0.0 {
                disable;
            }
            interface fe-0/1/2.0;
            interface gre.0 {
                disable;
            }
            interface lo0.0;
            peer-interface tester3;
        }
    }
}
```

```

}
link-management {
  te-link te-tester3 {
    local-address 93.93.93.93;
    remote-address 103.103.103.103;
    remote-id 21254;
    interface so-0/0/1 {
      local-address 93.93.93.93;
      remote-address 103.103.103.103;
      remote-id 21252;
    }
  }
  peer tester3 {
    address 10.35.1.1;
    control-channel gre.0;
    te-link te-tester3;
  }
}
}

```

## Verify Protocol Families

**Purpose** If a logical interface does not have MPLS enabled, it cannot perform MPLS switching. This step allows you to quickly determine which interfaces are configured with MPLS and other protocol families.

**Action** To verify the protocol families configured on the routers in your network, enter the following Junos OS CLI operational mode command:

```
user@host> show interfaces terse
```

### Sample Output 1

```

user@R1> show interfaces terse
Interface      Admin Link Proto Local Remote
so-0/0/0       up   up
so-0/0/0.0     up   up   inet 10.1.12.1/30
               up   up   iso
               up   up   mpls

so-0/0/1       up   up
so-0/0/1.0     up   up   inet 10.1.15.1/30
               up   up   iso
               up   up   mpls

so-0/0/2       up   up
so-0/0/2.0     up   up   inet 10.1.13.1/30
               up   up   iso
               up   up   mpls

so-0/0/3       up   down

user@R2> show interfaces terse
Interface      Admin Link Proto Local Remote
so-0/0/0       up   up
so-0/0/0.0     up   up   inet 10.1.12.2/30
               up   up   iso
               up   up   mpls

so-0/0/1       up   up
so-0/0/1.0     up   up   inet 10.1.23.1/30
               up   up   iso
               up   up   mpls

```

```

so-0/0/2          up   up
so-0/0/2.0        up   up   inet 10.1.26.1/30
                    up   up   iso
                    up   up   mpls

so-0/0/3          up   up
so-0/0/3.0        up   up   inet 10.1.24.1/30
                    up   up   iso
                    up   up   mpls

```

user@R3> show interfaces terse

Interface	Admin	Link	Proto	Local	Remote
so-0/0/0	up	up			
so-0/0/0.0	up	up	inet	10.1.34.1/30	
			iso		
			mpls		
so-0/0/1	up	up			
so-0/0/1.0	up	up	inet	10.1.23.2/30	
			iso		
			mpls		
so-0/0/2	up	up			
so-0/0/2.0	up	up	inet	10.1.13.2/30	
			iso		
			mpls		
so-0/0/3	up	up			
so-0/0/3.0	up	up	inet	10.1.36.1/30	
			iso		
			mpls		

user@R4> show interfaces terse

Interface	Admin	Link	Proto	Local	Remote
so-0/0/0	up	up			
so-0/0/0.0	up	up	inet	10.1.34.2/30	
			iso		
			mpls		
so-0/0/1	up	up			
so-0/0/1.0	up	up	inet	10.1.46.1/30	
			iso		
			mpls		
so-0/0/2	up	up			
so-0/0/2.0	up	up	inet	10.1.45.1/30	
			iso		
			mpls		
so-0/0/3	up	up			
so-0/0/3.0	up	up	inet	10.1.24.2/30	
			iso		
			mpls		

user@R5> show interfaces terse

Interface	Admin	Link	Proto	Local	Remote
so-0/0/0	up	up			
so-0/0/0.0	up	up	inet	10.1.56.1/30	
			iso		
			mpls		
so-0/0/1	up	up			
so-0/0/1.0	up	up	inet	10.1.15.2/30	
			iso		
			mpls		
so-0/0/2	up	up			
so-0/0/2.0	up	up	inet	10.1.45.2/30	
			iso		
			mpls		

```

so-0/0/3                up    down

user@R6> show interfaces terse
Interface              Admin Link Proto Local Remote
so-0/0/0                up    up
so-0/0/0.0              up    up    inet 10.1.56.2/30
                        iso
                        mpls

so-0/0/1                up    up
so-0/0/1.0              up    up    inet 10.1.46.2/30
                        iso
                        mpls

so-0/0/2                up    up
so-0/0/2.0              up    up    inet 10.1.26.2/30
                        iso
                        mpls

so-0/0/3                up    up
so-0/0/3.0              up    up    inet 10.1.36.2/30
                        iso
                        mpls

```

## Sample Output 2

```

user@R6> show interfaces terse
Interface              Admin Link Proto Local Remote
so-0/0/0                up    up
so-0/0/0.0              up    up    inet 10.1.56.2/30
                        iso
                        mpls

so-0/0/1                up    up
so-0/0/1.0              up    up    inet 10.1.46.2/30
                        iso
                        mpls

so-0/0/2                up    up
so-0/0/2.0              up    up    inet 10.1.26.2/30
                        iso #The mpls statement is missing.

so-0/0/3                up    up
so-0/0/3.0              up    up    inet 10.1.36.2/30
                        iso
                        mpls

```

**Meaning** Sample Output 1 shows the interface, the administrative status of the link (**Admin**), the data link layer status of the link (**Link**), the protocol families configured on the interface (**Proto**), and the local and remote addresses on the interface.

All interfaces on all routes in the network shown in [Figure 115 on page 1157](#) are administratively enabled and functioning at the data link layer with MPLS and IS-IS, and have an **inet** address. All are configured with an IPv4 protocol family (**inet**), and have the IS-IS (**iso**) and MPLS (**mpls**) protocol families configured at the **[edit interfaces type-fpc/pic/port unit number]** hierarchy level.


Sample Output 2 shows that interface **so-0/0/2.0** on **R6** does not have the **mpls** statement included at the **[edit interfaces type-fpc/pic/port unit number]** hierarchy level.

## Determining LSP Status

Display detailed information about Resource Reservation Protocol (RSVP) objects and the label-switched path (LSP) history to pinpoint a problem with the LSP.

Figure 118 on page 1210 illustrates the network topology used in this topic.

Figure 118: MPLS Network Topology

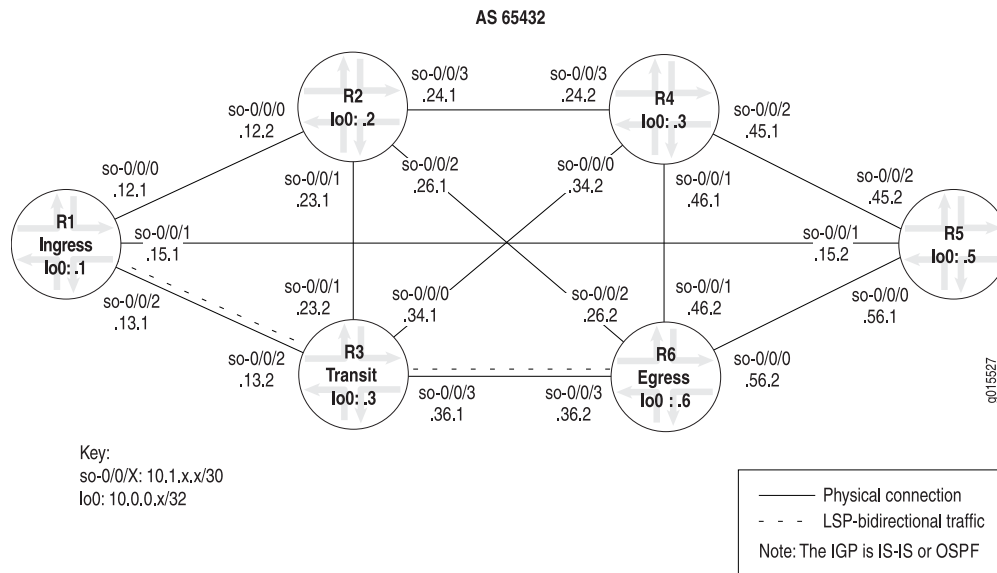

To determine the LSP state, follow these steps:

1. [Check the Status of the LSP on page 1210](#)
2. [Display Extensive Status About the LSP on page 1211](#)

## Check the Status of the LSP

**Purpose** Display the status of the label-switched path (LSP).

**Action** To determine the LSP status, on the ingress router, enter the following Junos OS command-line interface (CLI) operational mode command:

```
user@host> show mpls lsp
```

## Sample Output

```
user@R1> show mpls lsp
Ingress LSP: 1 sessions
To          From          State Rt ActivePath      P      LSPname
10.0.0.6    10.0.0.1    Up    1      *    R1-to-R6
Total 1 displayed, Up 1, Down 0

Egress LSP: 1 sessions
To          From          State Rt Style  Labelin Labelout LSPname
10.0.0.1    10.0.0.6    Up    01 FF  3      -    R6-to-R1
Total 1 displayed, Up 1, Down 0
```



```
Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

**Meaning** The sample output is from the ingress router (**R1**), and shows ingress, egress, and transit LSP information. Ingress information is for the sessions that originate from this router, egress information is for sessions that terminate on this router, and transit information is for sessions that transit through this router.

There is one ingress route from **R1 (10.0.0.1)** to **R6 (10.0.0.6)**. This route is currently up, and is an active route installed in the routing table (**Rt**). The LSP **R1-to-R6** is the primary path (**P**) as opposed to the secondary path, and is indicated by an asterisk (**\***). The route to **R6** does not contain a named path (**ActivePath**).

There is one egress LSP from **R6** to **R1**. The **State** is up, with no routes installed in the routing table. RSVP reservation style (**Style**) consists of two parts. The first is the number of active reservations (**1**). The second is the reservation style, which is **FF** (fixed filter). The reservation style can be **FF**, **SE** (shared explicit), or **WF** (wildcard filter). There are three incoming labels (**Labelin**) and no labels going out (**Labelout**) for this LSP.

There are no transit LSPs.

For more information on checking the LSP state, see [“Checklist for Working with the Layered MPLS Troubleshooting Model”](#) on page 948.

## Display Extensive Status About the LSP

**Purpose** Display extensive information about LSPs, including all past state history and the reasons why an LSP might have failed.

**Action** To display extensive information about LSPs, on the ingress router, enter the following Junos OS CLI operational mode command:

```
user@host> show mpls lsp extensive
```

## Sample Output

```
user@R1> show mpls lsp extensive
Ingress LSP: 1 sessions

10.0.0.6
  From: 10.0.0.1, State: Up , ActiveRoute: 1 , LSPname: R1-to-R6
  ActivePath: (primary)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary State: Up
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 20)
  10.1.13.2 S 10.1.36.2 S
    Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):

      10.1.13.2 10.1.36.2
      91 Aug 17 12:22:52 Selected as active path
      90 Aug 17 12:22:52 Record Route: 10.1.13.2 10.1.36.2
      89 Aug 17 12:22:52 Up
      88 Aug 17 12:22:52 Originate Call
```

```

87 Aug 17 12:22:52 CSPF: computation result accepted
86 Aug 17 12:22:23 CSPF failed: no route toward 10.0.0.6[13920 times]
85 Aug 12 19:12:51 Clear Call
84 Aug 12 19:12:50 10.1.56.2: MPLS label allocation failure
83 Aug 12 19:12:47 Deselected as active
82 Aug 12 19:12:47 10.1.56.2: MPLS label allocation failure
81 Aug 12 19:12:47 ResvTear received
80 Aug 12 19:12:47 Down
79 Aug 12 19:12:31 10.1.56.2: MPLS label allocation failure[4 times]
78 Aug 12 19:09:58 Selected as active path
77 Aug 12 19:09:58 Record Route: 10.1.15.2 10.1.56.2
76 Aug 12 19:09:58 Up
75 Aug 12 19:09:57 Originate Call
74 Aug 12 19:09:57 CSPF: computation result accepted
73 Aug 12 19:09:29 CSPF failed: no route toward 10.0.0.6[11 times]
72 Aug 12 19:04:36 Clear Call
71 Aug 12 19:04:23 Deselected as active
70 Aug 12 19:04:23 ResvTear received
69 Aug 12 19:04:23 Down
68 Aug 12 19:04:23 CSPF failed: no route toward 10.0.0.6
67 Aug 12 19:04:23 10.1.15.2: Session preempted
66 Aug 12 16:45:35 Record Route: 10.1.15.2 10.1.56.2
65 Aug 12 16:45:35 Up
64 Aug 12 16:45:35 Clear Call
63 Aug 12 16:45:35 CSPF: computation result accepted
62 Aug 12 16:45:35 ResvTear received
61 Aug 12 16:45:35 Down
60 Aug 12 16:45:35 10.1.13.2: Session preempted
59 Aug 12 14:50:52 Selected as active path
58 Aug 12 14:50:52 Record Route: 10.1.13.2 10.1.36.2
57 Aug 12 14:50:52 Up
56 Aug 12 14:50:52 Originate Call
55 Aug 12 14:50:52 CSPF: computation result accepted
54 Aug 12 14:50:23 CSPF failed: no route toward 10.0.0.6[7 times]
53 Aug 12 14:47:22 Deselected as active
52 Aug 12 14:47:22 CSPF failed: no route toward 10.0.0.6
51 Aug 12 14:47:22 Clear Call
50 Aug 12 14:47:22 CSPF: link down/deleted
10.1.12.1(R1.00/10.0.0.1)->10.1.12.2(R2.00/10.0.0.2)
49 Aug 12 14:47:22 CSPF: link down/deleted
10.1.15.1(R1.00/10.0.0.1)->10.1.15.2(R5.00/10.0.0.5)
48 Aug 12 14:47:22 10.1.15.1: MPLS label allocation failure
47 Aug 12 14:47:22 Clear Call
46 Aug 12 14:47:22 CSPF: computation result accepted
45 Aug 12 14:47:22 10.1.12.1: MPLS label allocation failure
44 Aug 12 14:47:22 MPLS label allocation failure
43 Aug 12 14:47:22 Down
42 Jul 23 11:27:21 Selected as active path
Created: Sat Jul 10 18:18:44 2004
Total displayed, Up 1, Down 0

```

Egress LSP: 1 sessions

10.0.0.1

```

From: 10.0.0.6, LSPstate: Up, ActiveRoute: 0
LSName: R6-to-R1, LSPpath: Primary
Suggested label received: -, Suggested label sent: -
Recovery label received: -, Recovery label sent: -
Resv style: 1FF, Label in: 3, Label out: -
Time left: 141, Since: Tue Aug 17 12:23:14 2004
Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500

```

```

Port number: sender 1 receiver 39024 protocol 0
PATH rcvfrom: 10.1.15.2 (so-0/0/1.0) 130 pkts
Adspec: received MTU 1500
PATH sentto: localclient
RESV rcvfrom: localclient
Record route: 10.1.56.2 10.1.15.2 <self>
Total 1 displayed, Up 1, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

**Meaning** The sample output is from the ingress router (**R1**), and shows ingress, egress, and transit LSP information in detail, including all past state history and the reasons why an LSP failed. Ingress information is for sessions that originate from this router, egress information is for sessions that terminate on this router, and transit information is for sessions that transit through this router.

There is one ingress route from **R1 (10.0.0.1)** to **R6 (10.0.0.6)**. This route is currently up (**State**), with one route actively using the LSP, **R1-to-R6**. The LSP active path is the primary path. Even if the LSP does not contain a **primary** or **secondary** keyword, the router still treats the LSP as a primary LSP, indicating that if the LSP fails, the router will attempt to signal inactive LSPs at 30-second intervals, by default.

Load balancing is **Random**, which is the default, indicating that when selecting the physical path for an LSP, the router randomly selects among equal-cost paths that have an equal hop count. Other options that you can configure are **Least-fill** and **Most-fill**. **Least-fill** places the LSP over the least utilized link of the equal-cost paths with equal hop count. **Most-fill** places the LSP over the most utilized link of the equal-cost paths sharing an equal hop count. Utilization is based on the percentage of available bandwidth.

The **Encoding type** field shows Generalized MPLS (GMPLS) signaling parameters (**Packet**), indicating IPv4. The **Switching type** is **Packet**, and the Generalized Payload Identifier (**GPID**) is IPv4.

The primary path is the active path, as indicated by an asterisk (\*). The state of the LSP is **Up**.

The Explicit Route Object (**ERO**) includes the Constrained Shortest Path First (CSPF) cost (**20**) for the physical path that the LSP follows. The presence of the CSPF metric indicates that this is a CSPF LSP. The absence of the CSPF metric indicates a no-CSPF LSP.

The field **10.1.13.2 S** indicates the actual ERO. The RSVP signaling messages went to **10.1.13.2** strictly (as a next hop) and finished at **10.1.36.2** strictly. All ERO addresses are strict hops when the LSP is a CSPF LSP. Loose hops can only display in a no-CSPF LSP.

The received Record Route Object (**RRO**) has the following protection flags:

- **0x01**—Local protection available. The link downstream of this node is protected by a local repair mechanism. This flag can only be set if the Local protection flag was set in the SESSION\_ATTRIBUTE object of the corresponding path message.
- **0x02**—Local protection in use. A local repair mechanism is in use to maintain this tunnel (usually because of an outage of the link it was routed over previously).
- **0x04**—Bandwidth protection. The downstream router has a backup path providing the same bandwidth guarantee as the protected LSP for the protected section.
- **0x08**—Node protection. The downstream router has a backup path providing protection against link and node failure on the corresponding path section. If the downstream router can set up only a link-protection backup path, the “Local protection available” bit is set but the “Node protection” bit is cleared.
- **0x10**—Preemption pending. The preempting node sets this flag if a pending preemption is in progress for the traffic engineered LSP. This indicates to the ingress label edge router (LER) of this LSP that it should be rerouted.

For more information on protection flags, see the *Junos Routing Protocols and Policies Command Reference*.

The field **10.1.13.2.10.1.36.2** is the actual received record route (**RRO**). Note that the addresses in the **RRO** field match those in the **ERO** field. This is the normal case for CSPF LSPs. If the RRO and ERO addresses do not match for a CSPF LSP, the LSP has to reroute or detour.

The lines numbered 91 through 42 contain the 49 most recent entries to the history log. Each line is time stamped. The most recent entries have the largest log history number and are at the top of the log, indicating that line 91 is the most recent history log entry. When you read the log, start with the oldest entry (**42**) to the most recent (**91**).

The history log was started on July 10, and displays the following sequence of activities: an LSP was selected as active, was found to be down, MPLS label allocation failed several times, was deleted several times, was preempted because of an ResvTear, was deselected as active, and was cleared. In the end, the router computed a CSPF ERO, signaled the call, the LSP came up with the listed RRO (line 90), and was listed as active.

For more information on error messages, see the *Junos MPLS Network Operations Guide Log Reference*.

The total number of ingress LSPs displayed is **1**, with **1** up and **0** down. The number in the **Up** field plus the number in the **Down** field should equal the total.

There is one egress LSP session from **R6** to **R1**. The **State** is up, with no routes installed in the routing table. RSVP reservation style (**Style**) consists of two parts. The first is the number of active reservations (**1**). The second is the reservation style, which is **FF** (fixed filter). The reservation style can be **FF**, **SE** (shared explicit), or **WF** (wildcard filter). There are three incoming labels (**Labelin**) and no labels going out (**Labelout**) for this LSP.

There are no transit LSPs.

For more information on checking the LSP state, see [“Checklist for Working with the Layered MPLS Troubleshooting Model” on page 948](#).

## Check the Status of the LSP

- Purpose** Display the status of the label-switched path (LSP).
- Action** To determine the LSP status, on the ingress router, enter the following Junos OS command-line interface (CLI) operational mode command:

```
user@host> show mpls lsp
```

### Sample Output

```
user@R1> show mpls lsp
Ingress LSP: 1 sessions
To          From          State Rt ActivePath      P      LSPName
10.0.0.6    10.0.0.1    Up    1      *  R1-to-R6
Total 1 displayed, Up 1, Down 0

Egress LSP: 1 sessions
To          From          State Rt Style  Labelin Labelout LSPName
10.0.0.1    10.0.0.6    Up    0 1 FF   3    - R6-to-R1
Total 1 displayed, Up 1, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

- Meaning** The sample output is from the ingress router (**R1**), and shows ingress, egress, and transit LSP information. Ingress information is for the sessions that originate from this router, egress information is for sessions that terminate on this router, and transit information is for sessions that transit through this router.

There is one ingress route from **R1** (**10.0.0.1**) to **R6** (**10.0.0.6**). This route is currently up, and is an active route installed in the routing table (**Rt**). The LSP **R1-to-R6** is the primary path (**P**) as opposed to the secondary path, and is indicated by an asterisk (**\***). The route to **R6** does not contain a named path (**ActivePath**).

There is one egress LSP from **R6** to **R1**. The **State** is up, with no routes installed in the routing table. RSVP reservation style (**Style**) consists of two parts. The first is the number of active reservations (**1**). The second is the reservation style, which is **FF** (fixed filter). The reservation style can be **FF**, **SE** (shared explicit), or **WF** (wildcard filter). There are three incoming labels (**Labelin**) and no labels going out (**Labelout**) for this LSP.

There are no transit LSPs.

For more information on checking the LSP state, see [“Checklist for Working with the Layered MPLS Troubleshooting Model” on page 948](#).

## Display Extensive Status About the LSP

- Purpose** Display extensive information about LSPs, including all past state history and the reasons why an LSP might have failed.

**Action** To display extensive information about LSPs, on the ingress router, enter the following Junos OS CLI operational mode command:

```
user@host> show mpls lsp extensive
```

## Sample Output

```
user@R1> show mpls lsp extensive
Ingress LSP: 1 sessions
```

```
10.0.0.6
```

```
From: 10.0.0.1, State: Up , ActiveRoute: 1 , LSPname: R1-to-R6
```

```
ActivePath: (primary)
```

```
LoadBalance: Random
```

```
Encoding type: Packet, Switching type: Packet, GPID: IPv4
```

```
*Primary State: Up
```

```
Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 20)
```

```
10.1.13.2 S 10.1.36.2 S
```

```
Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):
```

```
10.1.13.2 10.1.36.2
```

```
91 Aug 17 12:22:52 Selected as active path
```

```
90 Aug 17 12:22:52 Record Route: 10.1.13.2 10.1.36.2
```

```
89 Aug 17 12:22:52 Up
```

```
88 Aug 17 12:22:52 Originate Call
```

```
87 Aug 17 12:22:52 CSPF: computation result accepted
```

```
86 Aug 17 12:22:23 CSPF failed: no route toward 10.0.0.6[13920 times]
```

```
85 Aug 12 19:12:51 Clear Call
```

```
84 Aug 12 19:12:50 10.1.56.2: MPLS label allocation failure
```

```
83 Aug 12 19:12:47 Deselected as active
```

```
82 Aug 12 19:12:47 10.1.56.2: MPLS label allocation failure
```

```
81 Aug 12 19:12:47 ResvTear received
```

```
80 Aug 12 19:12:47 Down
```

```
79 Aug 12 19:12:31 10.1.56.2: MPLS label allocation failure[4 times]
```

```
78 Aug 12 19:09:58 Selected as active path
```

```
77 Aug 12 19:09:58 Record Route: 10.1.15.2 10.1.56.2
```

```
76 Aug 12 19:09:58 Up
```

```
75 Aug 12 19:09:57 Originate Call
```

```
74 Aug 12 19:09:57 CSPF: computation result accepted
```

```
73 Aug 12 19:09:29 CSPF failed: no route toward 10.0.0.6[11 times]
```

```
72 Aug 12 19:04:36 Clear Call
```

```
71 Aug 12 19:04:23 Deselected as active
```

```
70 Aug 12 19:04:23 ResvTear received
```

```
69 Aug 12 19:04:23 Down
```

```
68 Aug 12 19:04:23 CSPF failed: no route toward 10.0.0.6
```

```
67 Aug 12 19:04:23 10.1.15.2: Session preempted
```

```
66 Aug 12 16:45:35 Record Route: 10.1.15.2 10.1.56.2
```

```
65 Aug 12 16:45:35 Up
```

```
64 Aug 12 16:45:35 Clear Call
```

```
63 Aug 12 16:45:35 CSPF: computation result accepted
```

```
62 Aug 12 16:45:35 ResvTear received
```

```
61 Aug 12 16:45:35 Down
```

```
60 Aug 12 16:45:35 10.1.13.2: Session preempted
```

```
59 Aug 12 14:50:52 Selected as active path
```

```
58 Aug 12 14:50:52 Record Route: 10.1.13.2 10.1.36.2
```

```
57 Aug 12 14:50:52 Up
```

```
56 Aug 12 14:50:52 Originate Call
```

```
55 Aug 12 14:50:52 CSPF: computation result accepted
```

```
54 Aug 12 14:50:23 CSPF failed: no route toward 10.0.0.6[7 times]
```

```
53 Aug 12 14:47:22 Deselected as active
```

```
52 Aug 12 14:47:22 CSPF failed: no route toward 10.0.0.6
```

```

51 Aug 12 14:47:22 Clear Call
50 Aug 12 14:47:22 CSPF: link down/deleted
10.1.12.1(R1.00/10.0.0.1)->10.1.12.2(R2.00/10.0.0.2)
49 Aug 12 14:47:22 CSPF: link down/deleted
10.1.15.1(R1.00/10.0.0.1)->10.1.15.2(R5.00/10.0.0.5)
48 Aug 12 14:47:22 10.1.15.1: MPLS label allocation failure
47 Aug 12 14:47:22 Clear Call
46 Aug 12 14:47:22 CSPF: computation result accepted
45 Aug 12 14:47:22 10.1.12.1: MPLS label allocation failure
44 Aug 12 14:47:22 MPLS label allocation failure
43 Aug 12 14:47:22 Down
42 Jul 23 11:27:21 Selected as active path
Created: Sat Jul 10 18:18:44 2004
Total 1 displayed, Up 1, Down 0

```

Egress LSP: 1 sessions

```

10.0.0.1
From: 10.0.0.6, LSPstate: Up , ActiveRoute: 0
LSPName: R6-to-R1 , LSPpath: Primary
Suggested label received: -, Suggested label sent: -
Recovery label received: -, Recovery label sent: -
Resv style: 1 FF, Label in: 3, Label out: -
Time left: 141, Since: Tue Aug 17 12:23:14 2004
Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
Port number: sender 1 receiver 39024 protocol 0
PATH rcvfrom: 10.1.15.2 (so-0/0/1.0) 130 pkts
Adspec: received MTU 1500
PATH sentto: localclient
RESV rcvfrom: localclient
Record route: 10.1.56.2 10.1.15.2 <self>
Total 1 displayed, Up 1, Down 0

```

Transit LSP: 0 sessions

Total 0 displayed, Up 0, Down 0

**Meaning** The sample output is from the ingress router (**R1**), and shows ingress, egress, and transit LSP information in detail, including all past state history and the reasons why an LSP failed. Ingress information is for sessions that originate from this router, egress information is for sessions that terminate on this router, and transit information is for sessions that transit through this router.

There is one ingress route from **R1 (10.0.0.1)** to **R6 (10.0.0.6)**. This route is currently up (**State**), with one route actively using the LSP, **R1-to-R6**. The LSP active path is the primary path. Even if the LSP does not contain a **primary** or **secondary** keyword, the router still treats the LSP as a primary LSP, indicating that if the LSP fails, the router will attempt to signal inactive LSPs at 30-second intervals, by default.

Load balancing is **Random**, which is the default, indicating that when selecting the physical path for an LSP, the router randomly selects among equal-cost paths that have an equal hop count. Other options that you can configure are **Least-fill** and **Most-fill**. **Least-fill** places the LSP over the least utilized link of the equal-cost paths with equal hop count. **Most-fill** places the LSP over the most utilized link of the equal-cost paths sharing an equal hop count. Utilization is based on the percentage of available bandwidth.

The **Encoding type** field shows Generalized MPLS (GMPLS) signaling parameters (**Packet**), indicating IPv4. The **Switching type** is **Packet**, and the Generalized Payload Identifier (**GPID**) is IPv4.

The primary path is the active path, as indicated by an asterisk (\*). The state of the LSP is **Up**.

The Explicit Route Object (**ERO**) includes the Constrained Shortest Path First (CSPF) cost (**20**) for the physical path that the LSP follows. The presence of the CSPF metric indicates that this is a CSPF LSP. The absence of the CSPF metric indicates a no-CSPF LSP.

The field **10.1.13.2 S** indicates the actual ERO. The RSVP signaling messages went to **10.1.13.2** strictly (as a next hop) and finished at **10.1.36.2** strictly. All ERO addresses are strict hops when the LSP is a CSPF LSP. Loose hops can only display in a no-CSPF LSP.

The received Record Route Object (**RRO**) has the following protection flags:

- **0x01**—Local protection available. The link downstream of this node is protected by a local repair mechanism. This flag can only be set if the Local protection flag was set in the SESSION\_ATTRIBUTE object of the corresponding path message.
- **0x02**—Local protection in use. A local repair mechanism is in use to maintain this tunnel (usually because of an outage of the link it was routed over previously).
- **0x04**—Bandwidth protection. The downstream router has a backup path providing the same bandwidth guarantee as the protected LSP for the protected section.
- **0x08**—Node protection. The downstream router has a backup path providing protection against link and node failure on the corresponding path section. If the downstream router can set up only a link-protection backup path, the “Local protection available” bit is set but the “Node protection” bit is cleared.
- **0x10**—Preemption pending. The preempting node sets this flag if a pending preemption is in progress for the traffic engineered LSP. This indicates to the ingress label edge router (LER) of this LSP that it should be rerouted.

For more information on protection flags, see the *Junos Routing Protocols and Policies Command Reference*.

The field **10.1.13.2.10.1.36.2** is the actual received record route (**RRO**). Note that the addresses in the **RRO** field match those in the **ERO** field. This is the normal case for CSPF LSPs. If the RRO and ERO addresses do not match for a CSPF LSP, the LSP has to reroute or detour.

The lines numbered 91 through 42 contain the 49 most recent entries to the history log. Each line is time stamped. The most recent entries have the largest log history number and are at the top of the log, indicating that line 91 is the most recent history log entry. When you read the log, start with the oldest entry (**42**) to the most recent (**91**).

The history log was started on July 10, and displays the following sequence of activities: an LSP was selected as active, was found to be down, MPLS label allocation failed several times, was deleted several times, was preempted because of an ResvTear, was deselected



as active, and was cleared. In the end, the router computed a CSPF ERO, signaled the call, the LSP came up with the listed RRO (line 90), and was listed as active.

For more information on error messages, see the *Junos MPLS Network Operations Guide Log Reference*.

The total number of ingress LSPs displayed is **1**, with **1** up and **0** down. The number in the **Up** field plus the number in the **Down** field should equal the total.

There is one egress LSP session from **R6** to **R1**. The **State** is up, with no routes installed in the routing table. RSVP reservation style (**Style**) consists of two parts. The first is the number of active reservations (**1**). The second is the reservation style, which is **FF** (fixed filter). The reservation style can be **FF**, **SE** (shared explicit), or **WF** (wildcard filter). There are three incoming labels (**Labelin**) and no labels going out (**Labelout**) for this LSP.

There are no transit LSPs.

For more information on checking the LSP state, see “[Checklist for Working with the Layered MPLS Troubleshooting Model](#)” on page 948.

## Checking That RSVP Path Messages Are Sent and Received

**Purpose** The presence or absence of various RSVP messages can help determine if there is a problem with Multiprotocol Label Switching (MPLS) in your network. For example, if path messages occur in the output without Resv messages, it might indicate that label-switched paths (LSPs) are not being created.

**Action** To check that RSVP Path messages are sent and received, enter the following Junos OS command-line interface (CLI) operational mode command:

```
user@host> show rsvp statistics
```

### Sample Output

```
user@R1> show rsvp statistics
  PacketType      Sent      Received      Total      Last 5 seconds
                        Sent      Received
Path      114523      80185      1          0          0
PathErr      5          10          0          0
PathTear     12          6           0          0
Resv FF      80515      111476      0          0
Resv WF           0           0          0          0
Resv SE           0           0          0          0
ResvErr       0           0          0          0
ResvTear      0           5           0          0
ResvConf       0           0          0          0
Ack            0           0          0          0
SRefresh       0           0          0          0
Hello      915851      915881      0          0
EndtoEnd RSVP      0           0          0          0

Errors                        Total      Last 5 seconds
Rcv pkt bad length           0          0
Rcv pkt unknown type         0          0
Rcv pkt bad version          0          0
```

Rcv pkt auth fail	0	0
Rcv pkt bad checksum	0	0
Rcv pkt bad format	0	0
Memory allocation fail	0	0
No path information	0	0
Resv style conflict	0	0
Port conflict	0	0
Resv no interface	0	0
<b>PathErr to client</b>	<b>15</b>	<b>0</b>
ResvErr to client	0	0
Path timeout	0	0
Resv timeout	0	0
Message out-of-order	0	0
Unknown ack msg	0	0
Recv nack	0	0
Recv duplicated msg-id	0	0
No TE-link to recv Hop	0	0

**Meaning** The sample output shows RSVP messages sent and received. The total number of RSVP Path messages is 11,4532 sent and 80,185 received. Within the last 5 seconds, no messages have been sent or received.

A total of 5 **PathErr** messages were sent and 10 received. When path errors occur (usually because of parameter problems in a path message), the router sends a unicast PathErr message to the sender that issued the path message. In this case, **R1** sent at least 10 path messages with an error, as indicated by the 10 PathErr messages that **R1** has received. The downstream router sent **R1** five path messages with an error, as indicated by the five PathErr messages that **R1** has sent. PathErr messages transmit in the opposite direction to path messages.

A total of 12 **PathTear** messages were sent and 6 received, none in the last 5 seconds. In contrast to PathErr messages, PathTear messages travel in the same direction as path messages. Since path messages are both sent and received, PathTear messages are also sent and received. However, if only path messages are sent, then only the PathTear messages that are sent appear in the output.

A total of 80,515 reservation (**Resv**) messages with the fixed filter (**FF**) reservation style were sent and 111,476 received, none in the last 5 seconds. An **FF** reservation style indicates that within each session, each receiver establishes its own reservation with each upstream sender, and that all selected senders are listed. No messages for the wildcard filter (**WF**) or shared explicit (**SE**) reservation styles are sent or received. For more information on RSVP reservation styles, see the *Junos MPLS Applications Configuration Guide*.

Other RSVP message types are not sent or received. For information on the ResvErr, ResvTear, and Resvconf message types, see the *Junos MPLS Applications Configuration Guide*.

Ack and summary refresh (SRefresh) messages do not appear in the output. Ack and summary refresh messages are defined in RFC 2961 and are part of the RSVP extensions. Ack messages are used to reduce the amount of RSVP control traffic in the network.

A total of 915,851 hello messages were sent and 915,881 received, with none transmitted or received in the last 5 seconds. The RSVP hello interval is 9 seconds. If more than one

hello message is sent or received in the last 5 seconds, it implies that more than one interface supports RSVP.

**EndtoEnd** RSVP messages are legacy RSVP messages that are not used for RSVP traffic engineering. These counters increment only when RSVP forwards legacy RSVP messages issued by a virtual private network (VPN) customer for transit across the backbone to the other site(s) in the VPN. They are called end-to-end messages because they are intended for the opposite side of the network and only have meaning at the two ends of the provider network.

The **Errors** section of the output shows statistics about RSVP packets with errors. A total of 15 **PathErr to client** packets were sent to the Routing Engine. The total combines the sent and received **PathErr** packets. For more information about error statistics and packets, see the *Junos System Basics and Services Command Reference*.

## Determining the Current RSVP Neighbor State

**Purpose** Display a list of RSVP neighbors that were learned dynamically when exchanging RSVP packets. Once a neighbor is learned, it is never removed from the list of RSVP neighbors.

**Action** To determine the current RSVP neighbor state, enter the following Junos OS CLI operational mode command:

```
user@host> show rsvp neighbor
```

### Sample Output

```
user@R6> show rsvp neighbor
RSVP neighbor: 2 learned
Address  Idle Up/Dn LastChange  HelloInt  HelloTx/Rx  MsgRcvd
10.1.36.1   5  1/0  1w5d 6:30:50    9      116734/116734  23558
10.1.56.1  10  1/0  2w2d 23:44:15    9      161600/161600  23570
```

**Meaning** The sample output shows that **R6** has learned about two different RSVP neighbors. Each neighbor has one line of output that includes the neighbor RSVP address, the length of time the interface was idle, the current interface up/down counter, the time of the last interface state change, the current RSVP hello interval, the total number of RSVP hello messages transmitted and received, and the total number of RSVP messages received on the interface.

The **show rsvp neighbor** command only indicates a neighbor after a session is established. Once an interface is displayed in this command output, it always appears, even if the RSVP neighbor state is down.

The RSVP neighbor **10.1.36.1** was idle for 5 seconds, came up once and has not gone down, indicating that the interface is currently in an **Up** state. As long as the up counter is one greater than the down counter, the RSVP interface is up. If the up/down counters are equal, the interface is down.

The last state change occurred 6 hours and 30 minutes ago. The current hello interval is 9 seconds. A total of 116,734 hello messages were transmitted and received on this interface, and a total of 23,558 RSVP Path/Resv messages were processed.

The RSVP neighbor **10.1.56.1** was idle for 10 seconds, came up once and has not gone down, indicating that the interface is currently in an **Up** state. The last state change occurred 23 hours and 44 minutes ago. The current Hello interval is 9 seconds. A total of 161,600 hello messages were transmitted and received on this interface, and a total of 23,570 RSVP Path/Resv messages were processed.

## Take Appropriate Action

---

**Problem**    **Description:** Depending on the error you encountered in your investigation, you must take the appropriate action to correct the problem. In the example below, the routers are configured to function at different levels of the IS-IS protocol.

**Solution**    To correct the error in this example, enter the following commands:

### Sample Output

```
[edit protocols isis]
user@R6# show
level 2 disable;
interface all {
    level 2 metric 10;
}
interface fxp0.0 {
    disable;
}
interface lo0.0; {
    passive
```

```
[edit protocols isis]
user@R6# delete level 2
```

```
[edit protocols isis]
user@R6# set level 1 disable
```

```
[edit protocols isis]
user@R6# show
level 1 disable;
interface all {
    level 2 metric 10;
}
interface fxp0.0 {
    disable;
}
interface lo0.0; {
    passive
```

```
[edit protocols isis]
user@R6# commit
commit complete
```

```
[edit protocols isis]
user@R6# run show isis adjacency
```

Interface	System	L State	Hold (secs)	SNPA
so-0/0/0.0	R5	2 Up	22	
so-0/0/1.0	R4	2 Up	22	
so-0/0/2.0	R2	2 Up	22	
so-0/0/3.0	R3	2 Up	22	

## Meaning

The sample output shows that the configuration error on egress router R6 has been corrected, and IS-IS adjacencies are now established.

**Related Documentation**

- *IS-IS Feature Guide*

## Examine BGP Routes

**Purpose** You can examine the BGP path selection process to determine the single, active path when BGP receives multiple routes to the same destination. In this step, we examine the reverse LSP **R6-to-R1**, making **R6** the ingress router for that LSP.

**Action** To examine BGP routes and route selection, enter the following Junos OS CLI operational mode command:

```
user@host> show route destination-prefix detail
```

## Sample Output 1

```
user@R6> show route 100.100.1.1 detail
inet.0: 30 destinations, 46 routes (29 active, 0 holddown, 1 hidden)
100.100.1.0/24 (1 entry, 1 announced)
  *BGP      Preference: 170/-101
             Source: 10.1.13.1
             Next hop: via so-0/0/3.0, selected
             Protocol next hop: 10.1.13.1 Indirect next hop: 8671594 304
             State: <Active Int Ext>
             Local AS: 65432 Peer AS: 65432
             Age: 4d 5:15:39 Metric2: 2
             Task: BGP_65432.10.1.13.1+3048
             Announcement bits (2): 0-KRT 4-Resolve inet.0
             AS path: I
             Localpref: 100
             Router ID: 10.0.0.1
```

## Sample Output 2

```
user@R6> show route 100.100.1.1 detail
inet.0: 30 destinations, 46 routes (29 active, 0 holddown, 1 hidden)
100.100.1.0/24 (1 entry, 1 announced)
  *BGP      Preference: 170/-101
             Source: 10.0.0.1
             Next hop: via so-0/0/3.0 weight 1, selected
             Label-switched-path R6-to-R1
             Label operation: Push 100000
             Protocol next hop: 10.0.0.1 Indirect next hop: 8671330 301
             State: <Active Int Ext>
             Local AS: 65432 Peer AS: 65432
             Age: 24:35 Metric2: 2
             Task: BGP_65432.10.0.0.1+179
             Announcement bits (2): 0-KRT 4-Resolve inet.0
             AS path: I
             Localpref: 100
             Router ID: 10.0.0.1
```

**Meaning** Sample Output 1 shows that the BGP next hop (10.1.13.1) does not equal the LSP destination address (10.0.0.1) in the **to** statement at the **[edit protocols mpls label-switched-path label-switched-path-name]** hierarchy level when the BGP configuration of R6 and R1 is incorrect.

Sample Output 2, taken after the configurations on R1 and R6 are corrected, shows that the BGP next hop (10.0.0.1) and the LSP destination address (10.0.0.1) are the same, indicating that BGP can use the LSP to forward BGP traffic.

## CLI Operational Mode Top-Level Commands

In operational mode, you enter commands to monitor and diagnose the software, network connectivity, and the router. When you log in to the router and the CLI starts, you are at the top level of the CLI operational mode. At this level, there are several broad groups of CLI commands. [Table 36 on page 1224](#) lists the top-level CLI operational mode commands and describes the options available for each command. The commands are listed in alphabetical order.

**Table 36: CLI Operational Mode Top-Level Commands**

Command	Description
<b>clear</b>	Clear statistics and protocol database information.  Syntax: <b>clear</b> (arp   bgp   firewall   helper   igmp   ike   ilmi   interfaces   ipsec   ipv6   isis   ldp   log   mpls   msdp   multicast   ospf   pim   rip   ripng   route   rsvp   snmp   system   vrrp)
<b>configure</b>	Enter CLI configuration mode.  Alternative commands: <b>configure</b> <exclusive> <private>
<b>file</b>	Perform file manipulation operations, such as copy, delete, list, rename, and show.  Syntax: <b>file</b> (compare   copy   delete   list   rename   show)
<b>help</b>	Provide help information.  Syntax: <b>help</b> (reference   syslog   topic)
<b>monitor</b>	Monitor a log file or interface traffic in real time.  Syntax: <b>monitor</b> (interface   list   start   stop   traffic)
<b>mtrace</b>	Display trace information about a multicast path from a source to a receiver.  Syntax: <b>mtrace</b> (from-source   monitor   to-gateway)

Table 36: CLI Operational Mode Top-Level Commands (*continued*)

Command	Description
<b>ping</b>	<p>Verify IP connectivity to another IP host or Asynchronous Transfer Mode (ATM) connectivity (ping ATM) using Operation Administration and Maintenance (OAM) cells to an ATM endstation.</p> <p>Syntax: <b>ping host</b> &lt;interface <i>source-interface</i>&gt; &lt;bypass-routing&gt; &lt;count <i>requests</i>&gt; &lt;do-not-fragment&gt; &lt;interval <i>seconds</i>&gt; &lt;pattern <i>string</i>&gt; &lt;record-route&gt; &lt;routing-instance <i>routing-instance-name</i>&gt; &lt;size <i>bytes</i>&gt; &lt;strict&gt; &lt;tos <i>type-of-service</i>&gt; &lt;ttl <i>value</i>&gt; &lt;via <i>route</i>&gt; &lt;rapid   detail&gt;</p> <p>Syntax: <b>ping atm interface</b> <i>interface</i> &lt;count <i>count</i>&gt; &lt;end-to-end   segment&gt; &lt;interval <i>interval</i>&gt; &lt;sequence-number <i>sequence-number</i>&gt; &lt;vci <i>vci</i>&gt; &lt;brief&gt;</p> <p>Syntax: <b>ping vpn-interface</b> <i>vpn-interface host</i> &lt;local <i>echo-address</i>&gt;</p>
<b>pipe</b>	<p>Filter the output of an operational mode or configuration mode command.</p> <p>Syntax:   (compare   count   display &lt;detail   inheritance   xml&gt;   except <i>pattern</i>   find <i>pattern</i>   last <i>lines</i>   match <i>pattern</i>   no-more   resolve &lt;<i>file-names</i>&gt;   save <i>filename</i>   trim <i>columns</i>)</p>
<b>quit</b>	<p>Log out from the CLI process.</p> <p>Syntax: <b>quit</b></p>
<b>request</b>	<p>Make system-level requests, such as halt or reboot the router, load software packages, and back up the router's file systems.</p> <p>Syntax: <b>request system</b> (halt   reboot   snapshot   software)</p>
<b>restart</b>	<p>Restart the router hardware or software processes.</p> <p>Syntax: <b>restart</b> (fpc   class-of-service   gracefully   immediately   interface-control   mib-process   network-access-service   remote-operations   routing   sampling   sfm   snmp   soft)</p>
<b>set</b>	<p>Set CLI properties, the router's date and time, and the craft interface display text.</p> <p>Syntax: <b>set</b> (chassis   cli   date)</p>
<b>show</b>	<p>Show information about all aspects of the software, including interfaces and routing protocols.</p> <p>Syntax: <b>show</b> (accounting   aps   arp   as-path   bgp   chassis   cli   configuration   connections   dvmrp   firewall   helper   host   igmp   ike   ilmi   interfaces   ipsec   ipv6   isis   l2circuit   l2vpn   ldp   link-management   log   mpls   msdp   multicast   ntp   ospf   pfe   pim   policer   policy   rip   ripng   route   rsvp   sap   snmp   system   task   ted   version   vrrp)</p>
<b>ssh</b>	<p>Open a secure shell to another host.</p> <p>Syntax: <b>ssh host</b> &lt;bypass-routing&gt; &lt;routing-instance <i>routing-instance-name</i>&gt; &lt;source <i>address</i>&gt; &lt;vpn-interface <i>vpn-interface</i>&gt; &lt;v1   v2&gt;</p>
<b>start</b>	<p>Start a software process.</p> <p>Syntax: <b>start shell</b></p>

Table 36: CLI Operational Mode Top-Level Commands (*continued*)

Command	Description
<b>telnet</b>	Start a telnet session to another host.  Syntax: <b>telnet</b> <i>host</i> <8bit> <bypass-routing> <inet   inet6> <noresolve> <port <i>port</i> > <interface <i>interface-name</i> > <routing-instance <i>routing-instance-name</i> > <source address > <vpn-interface <i>vpn-interface</i> >
<b>test</b>	Run various diagnostic debugging commands.  Syntax: <b>test</b> (configuration   interface   msdp   policy)
<b>traceroute</b>	Trace the route to a remote host.  Syntax: <b>traceroute</b> <i>host</i> <as-number-lookup> <bypass-routing> <gateway address > <inet   inet6> <noresolve> <routing-instance <i>routing-instance-name</i> > <source address > <tos value > <ttl value > <vpn-interface <i>vpn-interface</i> > <wait seconds>

## CLI Keyboard Shortcuts

In the CLI, you can use keyboard sequences to move around and edit a command line. You can also use keyboard sequences to scroll through a list of recently executed commands.

Table 15 on page 23 lists some of the CLI keyboard sequences.

Table 37: CLI Keyboard Shortcuts

Keyboard sequence	Action
<b>Ctrl+b</b>	Move the cursor back one character.
<b>Esc+b</b> or <b>Alt+b</b>	Move the cursor back one word.
<b>Ctrl+f</b>	Move the cursor forward one character.
<b>Esc+f</b> or <b>Alt+f</b>	Move the cursor forward one word.
<b>Ctrl+a</b>	Move the cursor to the beginning of the command line.
<b>Ctrl+e</b>	Move the cursor to the end of the command line.
<b>Ctrl+h</b> , <b>Delete</b> , or <b>Backspace</b>	Delete the character before the cursor.
<b>Ctrl+d</b>	Delete the character at the cursor.
<b>Ctrl+k</b>	Delete the all characters from the cursor to the end of the command line.
<b>Ctrl+u</b> or <b>Ctrl+x</b>	Delete the all characters from the command line.
<b>Ctrl+w</b> , <b>Esc+Backspace</b> , or <b>Alt+Backspace</b>	Delete the word before the cursor.



Table 37: CLI Keyboard Shortcuts (*continued*)

Keyboard sequence	Action
<b>Esc+d</b> or <b>Alt+d</b>	Delete the word after the cursor.
<b>Ctrl+y</b>	Insert the most recently deleted text at the cursor.
<b>Ctrl+l</b>	Redraw the current line.
<b>Ctrl+p</b>	Scroll backward through the list of recently executed commands.
<b>Ctrl+n</b>	Scroll forward through the list of recently executed commands.
<b>Ctrl+r</b>	Search the CLI history incrementally in reverse order for lines matching the search string.
<b>Esc+/</b> or <b>Alt+/</b>	Search the CLI history for words for which the current word is a prefix.
<b>Esc-1</b> through <b>Esc-9</b> or <b>Alt-1</b> through <b>Alt-9</b>	Specify the number of times to execute a keyboard sequence.

## Manage Output at the ---(more)--- Prompt

If the output is longer than the screen length, it appears one screen at a time with the UNIX **---(more)---** prompt at the end of the screen. The **---(more)---** prompt indicates that more output is available. The following table lists the keyboard sequences you can use at the **---(more)---** prompt.

Table 38: Keyboard Shortcuts at the ---(more)--- Prompt

Keyboard Shortcut	Action
<b>Enter</b> , <b>Return</b> , <b>k</b> , <b>Ctrl+m</b> , <b>Ctrl+n</b> , or <b>down arrow</b>	Scroll down one line.
<b>Tab</b> , <b>d</b> , <b>Ctrl+d</b> , or <b>Ctrl+x</b>	Scroll down one-half screen.
<b>Space</b> or <b>Ctrl+f</b>	Scroll down one whole screen.
<b>Ctrl+e</b> or <b>g</b>	Scroll down to the bottom of the output.
<b>n</b> (or <b>no-more</b> )	Display the output all at once instead of one screen at a time.
<b>j</b> , <b>Ctrl-h</b> , <b>Ctrl-p</b> , or <b>up arrow</b>	Scroll up one line.
<b>u</b> or <b>Ctrl-u</b>	Scroll up one-half screen.
<b>b</b> or <b>Ctrl-b</b>	Scroll up one whole screen.
<b>Ctrl-a</b> or <b>g</b>	Scroll up to the bottom of the output.
<b>/string</b>	Search forward for a string.

Table 38: Keyboard Shortcuts at the ---(more)--- Prompt (*continued*)

Keyboard Shortcut	Action
? <i>string</i>	Search backward for a string.
n	Repeat previous search for a string.
m or M (or   <i>match string</i> )	Find a text string. You are prompted for the string to match
e or E (or   <i>except string</i> )	Find, ignoring a text string. You are prompted for the string to ignore.
Ctrl-C, q, Q, or Ctrl-k	Interrupt the display of output.
H (Same as specifying   <i>hold</i> )	Hold the CLI at the <b>—more—</b> prompt after displaying all output.
c or C	Clear any match conditions and display the complete output.
Ctrl-l	Redraw the output on the screen.
s or S (or   <i>save filename</i> )	Save the command output to a file. You are prompted for a filename.

## Working with Problems on Your Network

**Problem**    **Description:** This checklist provides links to troubleshooting basics, an example network, and includes a summary of the commands you might use to diagnose problems with the router and network.


Table 39: Checklist for Working with Problems on Your Network

Tasks	Command or Action
<b>"Isolating a Broken Network Connection" on page 1229</b>	
1. <a href="#">Identifying the Symptoms of a Broken Network Connection on page 1230</a>	ping ( <i>ip-address</i>   <i>hostname</i> ) show route ( <i>ip-address</i>   <i>hostname</i> ) traceroute ( <i>ip-address</i>   <i>hostname</i> )
2. <a href="#">Isolating the Causes of a Network Problem on page 1231</a>	show < configuration   interfaces   protocols   route >
3. <a href="#">Taking Appropriate Action for Resolving the Network Problem on page 1232</a>	[edit] delete routing options static route <i>destination-prefix</i> commit and-quit show route <i>destination-prefix</i>
4. <a href="#">Evaluating the Solution to Check Whether the Network Problem Is Resolved on page 1232</a>	show route ( <i>ip-address</i>   <i>hostname</i> ) ping ( <i>ip-address</i>   <i>hostname</i> ) count 3 traceroute ( <i>ip-address</i>   <i>hostname</i> )

## Isolating a Broken Network Connection

By applying the standard four-step process illustrated in [Figure 119 on page 1229](#), you can isolate a failed node in the network. Note that the functionality described in this section is not supported in versions 15.1X49, 15.1X49-D30, or 15.1X49-D40.


**Figure 119: Process for Diagnosing Problems in Your Network**

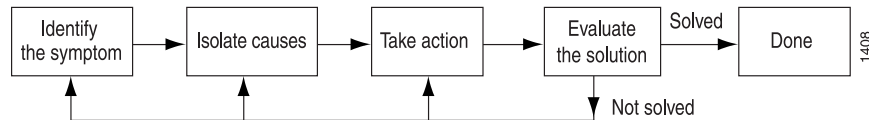

Before you embark on the four-step process, however, it is important that you are prepared for the inevitable problems that occur on all networks. While you might find a solution to a problem by simply trying a variety of actions, you can reach an appropriate solution more quickly if you are systematic in your approach to the maintenance and monitoring of your network. To prepare for problems on your network, understand how the network functions under normal conditions, have records of baseline network activity, and carefully observe the behavior of your network during a problem situation.

[Figure 120 on page 1229](#) shows the network topology used in this topic to illustrate the process of diagnosing problems in a network.

**Figure 120: Network with a Problem**

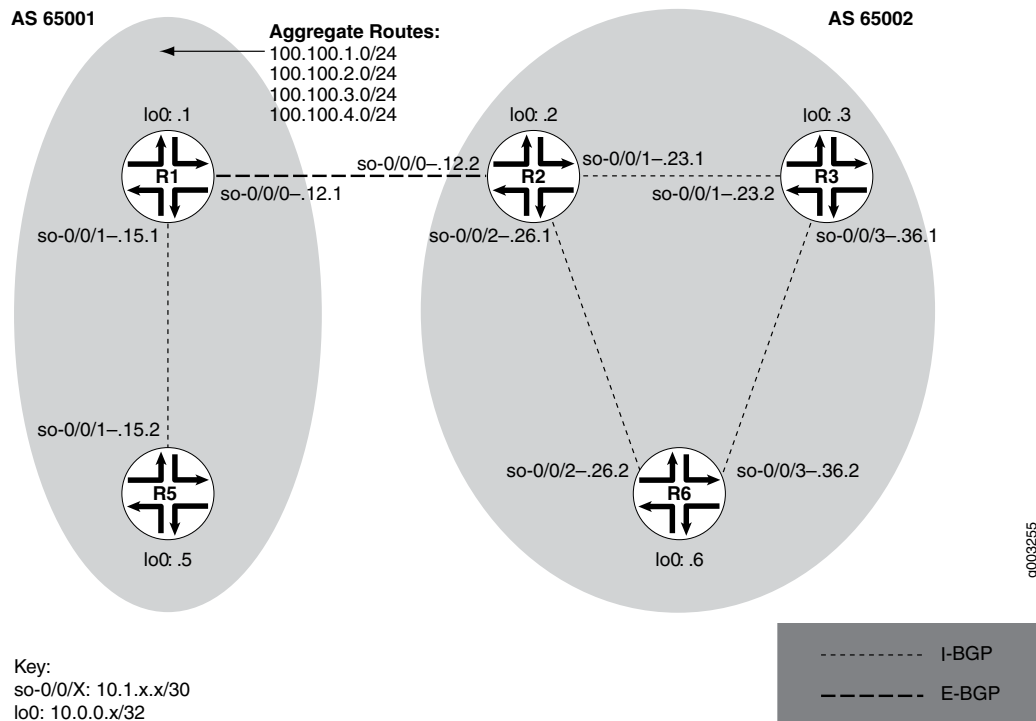

The network in [Figure 120 on page 1229](#) consists of two autonomous systems (ASs). AS 65001 includes two routers, and AS 65002 includes three routers. The border router (R1) in AS 65001 announces aggregated prefixes **100.100/24** to the AS 65002 network. The

problem in this network is that **R6** does not have access to **R5** because of a loop between **R2** and **R6**.

To isolate a failed connection in your network, follow these steps:

1. [Identifying the Symptoms of a Broken Network Connection on page 1230](#)
2. [Isolating the Causes of a Network Problem on page 1231](#)
3. [Taking Appropriate Action for Resolving the Network Problem on page 1232](#)
4. [Evaluating the Solution to Check Whether the Network Problem Is Resolved on page 1232](#)

## Identifying the Symptoms of a Broken Network Connection

**Problem** **Description:** The symptoms of a problem in your network are usually quite obvious, such as the failure to reach a remote host.

**Solution** To identify the symptoms of a problem on your network, start at one end of your network and follow the routes to the other end, entering all or one of the following Junos OS command-line interfaces (CLI) operational mode commands:

```
user@host> ping (ip-address | host-name)
user@host> show route (ip-address | host-name)
user@host> traceroute (ip-address | host-name)
```

### Sample Output

```
user@R6> ping 10.0.0.5
PING 10.0.0.5 (10.0.0.5): 56 data bytes
36 bytes from 10.1.26.1: Time to live exceeded
Vr HL TOS Len ID Flg off TTL Pro cks Src Dst
 4 5 00 0054 e2db 0 0000 01 01 a8c6 10.1.26.2 10.0.0.5

36 bytes from 10.1.26.1: Time to live exceeded
Vr HL TOS Len ID Flg off TTL Pro cks Src Dst
 4 5 00 0054 e2de 0 0000 01 01 a8c3 10.1.26.2 10.0.0.5

36 bytes from 10.1.26.1: Time to live exceeded
Vr HL TOS Len ID Flg off TTL Pro cks Src Dst
 4 5 00 0054 e2e2 0 0000 01 01 a8bf 10.1.26.2 10.0.0.5

^C
--- 10.0.0.5 ping statistics ---
3 packets transmitted, 0 packets received, 100% packet loss

user@R6> show route 10.0.0.5

inet.0: 20 destinations, 20 routes (20 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

10.0.0.5/32          *[IS-IS/165] 00:02:39, metric 10
                    > to 10.1.26.1 via so-0/0/2.0

user@R6> traceroute 10.0.0.5
traceroute to 10.0.0.5 (10.0.0.5), 30 hops max, 40 byte packets
 1  10.1.26.1 (10.1.26.1)  0.649 ms  0.521 ms  0.490 ms
 2  10.1.26.2 (10.1.26.2)  0.521 ms  0.537 ms  0.507 ms
 3  10.1.26.1 (10.1.26.1)  0.523 ms  0.536 ms  0.514 ms
```

```

4 10.1.26.2 (10.1.26.2) 0.528 ms 0.551 ms 0.523 ms
5 10.1.26.1 (10.1.26.1) 0.531 ms 0.550 ms 0.524 ms

```

### Meaning

The sample output shows an unsuccessful **ping** command in which the packets are being rejected because the time to live is exceeded. The output for the **show route** command shows the interface (**10.1.26.1**) that you can examine further for possible problems. The **traceroute** command shows the loop between **10.1.26.1 (R2)** and **10.1.26.2 (R6)**, as indicated by the continuous repetition of the two interface addresses.

## Isolating the Causes of a Network Problem

**Problem Description:** A particular symptom can be the result of one or more causes. Narrow down the focus of your search to find each individual cause of the unwanted behavior.

**Solution** To isolate the cause of a particular problem, enter one or all of the following Junos OS CLI operational mode command:

```
user@host> show < configuration | bgp | interfaces | isis | ospf | route >
```

Your particular problem may require the use of more than just the commands listed above. See the appropriate command reference for a more exhaustive list of commonly used operational mode commands.

### Sample Output

```

user@R6> show interfaces terse
Interface           Admin Link Proto Local Remote
so-0/0/0            up   up   inet 10.1.56.2/30
so-0/0/0.0           up   up   inet 10.1.56.2/30
                    up   up   iso
so-0/0/2            up   up   inet 10.1.26.2/30
so-0/0/2.0           up   up   inet 10.1.26.2/30
                    up   up   iso
so-0/0/3            up   up   inet 10.1.36.2/30
so-0/0/3.0           up   up   inet 10.1.36.2/30
                    up   up   iso
[...Output truncated...]

```

The following sample output is from **R2**:

```

user@R2> show route 10.0.0.5

inet.0: 22 destinations, 25 routes (22 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

10.0.0.5/32          *[Static/5] 00:16:21
                    > to 10.1.26.2 via so-0/0/2.0
                    [BGP/170] 3d 20:23:35, MED 5, localpref 100
                    AS path: 65001 I
                    > to 10.1.12.1 via so-0/0/0.0

```

### Meaning

The sample output shows that all interfaces on **R6** are up. The output from **R2** shows that a static route **[Static/5]** configured on **R2** points to **R6 (10.1.26.2)** and is the preferred

route to **R5** because of its low preference value. However, the route is looping from **R2** to **R6**, as indicated by the missing reference to **R5 (10.1.15.2)**.

## Taking Appropriate Action for Resolving the Network Problem

**Problem**    **Description:** The appropriate action depends on the type of problem you have isolated. In this example, a static route configured on **R2** is deleted from the **[routing-options]** hierarchy level. Other appropriate actions might include the following:

**Solution**

- Check the local router's configuration and edit it if appropriate.
- Troubleshoot the intermediate router.
- Check the remote host configuration and edit it if appropriate.
- Troubleshoot routing protocols.
- Identify additional possible causes.

To resolve the problem in this example, enter the following Junos OS CLI commands:

```
[edit]
user@R2# delete routing-options static route destination-prefix
user@R2# commit and-quit
user@R2# show route destination-prefix
```

## Sample Output

```
[edit]
user@R2# delete routing-options static route 10.0.0.5/32

[edit]
user@R2# commit and-quit
commit complete
Exiting configuration mode

user@R2> show route 10.0.0.5

inet.0: 22 destinations, 24 routes (22 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

10.0.0.5/32          *[BGP/170] 3d 20:26:17, MED 5, localpref 100
                    AS path: 65001 I
                    > to 10.1.12.1 via so-0/0/0.0
```

## Meaning

The sample output shows the static route deleted from the **[routing-options]** hierarchy and the new configuration committed. The output for the **show route** command now shows the BGP route as the preferred route, as indicated by the asterisk (\*).

## Evaluating the Solution to Check Whether the Network Problem Is Resolved

**Problem**    **Description:** If the problem is solved, you are finished. If the problem remains or a new problem is identified, start the process over again.

You can address possible causes in any order. In relation to the network in “[Isolating a Broken Network Connection](#)” on page 1229, we chose to work from the local router toward the remote router, but you might start at a different point, particularly if you have reason to believe that the problem is related to a known issue, such as a recent change in configuration.

**Solution** To evaluate the solution, enter the following Junos OS CLI commands:

```
user@host> show route (ip-address | host-name)
user@host> ping (ip-address | host-name)
user@host> traceroute (ip-address | host-name)
```

### Sample Output

```
user@R6> show route 10.0.0.5

inet.0: 20 destinations, 20 routes (20 active, 0 holddown, 0 hidden)
+ = Active Route, - = Last Active, * = Both

10.0.0.5/32          *[BGP/170]  00:01:35, MED 5, localpref 100, from 10.0.0.2
                    AS path: 65001 I
                    > to 10.1.26.1 via so-0/0/2.0

user@R6> ping 10.0.0.5
PING 10.0.0.5 (10.0.0.5): 56 data bytes
64 bytes from 10.0.0.5: icmp_seq=0 ttl=253 time=0.866 ms
64 bytes from 10.0.0.5: icmp_seq=1 ttl=253 time=0.837 ms
64 bytes from 10.0.0.5: icmp_seq=2 ttl=253 time=0.796 ms
^C
--- 10.0.0.5 ping statistics ---
3 packets transmitted, 3 packets received, 0% packet loss
round-trip min/avg/max/stddev = 0.796/0.833/0.866/0.029 ms

user@R6> traceroute 10.0.0.5
traceroute to 10.0.0.5 (10.0.0.5), 30 hops max, 40 byte packets
 1 10.1.26.1 (10.1.26.1) 0.629 ms 0.538 ms 0.497 ms
 2 10.1.12.1 (10.1.12.1) 0.534 ms 0.538 ms 0.510 ms
 3 10.0.0.5 (10.0.0.5) 0.776 ms 0.705 ms 0.672 ms
```

### Meaning

The sample output shows that there is now a connection between **R6** and **R5**. The **show route** command shows that the BGP route to **R5** is preferred, as indicated by the asterisk (\*). The **ping** command is successful and the **traceroute** command shows that the path from **R6** to **R5** is through **R2** (10.1.26.1), and then through **R1** (10.1.12.1).

## Display Junos OS Information

**Purpose** Display Junos OS information and status to determine if the version of Junos OS that you are running supports particular features or hardware. You can also determine whether particular software bugs will affect your version of Junos OS.

**Action** To display Junos OS information, use the following Junos OS command-line interface (CLI) operational mode command:

```
user@host> show version
```

**Sample Output**    user@host> show version  
Hostname: my-router.net  
Model: m160  
JUNOS Base OS boot [5.5R2.3]  
JUNOS Base OS Software Suite [5.5R2.3]  
JUNOS Kernel Software Suite [5.5R2.3]  
JUNOS Packet Forwarding Engine Support [5.5R2.3]  
JUNOS Routing Software Suite [5.5R2.3]  
JUNOS Online Documentation [5.5R2.3]  
JUNOS Crypto Software Suite [5.5R2.3]  
KERNEL 5.5R2.3 #0 built by builder on 2002-11-21 22:56:20 UTC  
MGD release 5.5R2.3 built by builder on 2002-11-21 22:36:05 UTC  
CLI release 5.5R2.3 built by builder on 2002-11-21 22:33:44 UTC  
CHASSISD release 5.5R2.3 built by builder on 2002-11-21 22:32:10 UTC  
DCD release 5.5R2.3 built by builder on 2002-11-21 22:30:06 UTC  
RPD release 5.5R2.3 built by builder on 2002-11-21 22:37:08 UTC  
SNMPD release 5.5R2.3 built by builder on 2002-11-21 22:43:14 UTC  
MIB2D release 5.5R2.3 built by builder on 2002-11-21 22:36:10 UTC  
APSD release 5.5R2.3 built by builder on 2002-11-21 22:32:07 UTC  
VRPDP release 5.5R2.3 built by builder on 2002-11-21 22:43:26 UTC  
ALARMD release 5.5R2.3 built by builder on 2002-11-21 22:32:01 UTC  
PFED release 5.5R2.3 built by builder on 2002-11-21 22:36:53 UTC  
CRAFTD release 5.5R2.3 built by builder on 2002-11-21 22:33:59 UTC  
SAMPLED release 5.5R2.3 built by builder on 2002-11-21 22:43:01 UTC  
ILMID release 5.5R2.3 built by builder on 2002-11-21 22:35:17 UTC  
RMOPD release 5.5R2.3 built by builder on 2002-11-21 22:37:01 UTC  
COSD release 5.5R2.3 built by builder on 2002-11-21 22:33:50 UTC  
KMD release 5.5R2.3 built by builder on 2002-11-21 22:35:29 UTC  
FSAD release 5.5R2.3 built by builder on 2002-11-21 22:34:14 UTC  
SERVICED release 5.5R2.3 built by builder on 2002-11-21 22:43:07 UTC  
IRSD release 5.5R2.3 built by builder on 2002-11-21 22:35:21 UTC  
NASD release 5.5R2.3 built by builder on 2002-11-21 22:36:47 UTC  
FUD release 5.5R2.3 built by builder on 2002-11-21 22:34:17 UTC  
PPMD release 5.5R2.3 built by builder on 2002-11-21 22:36:58 UTC  
LMPD release 5.5R2.3 built by builder on 2002-11-21 22:36:01 UTC  
RTSPD release 5.5R2.3 built by builder on 2002-11-21 22:42:58 UTC  
SMARTD release 5.5R2.3 built by builder on 2002-11-21 22:47:50 UTC  
jkernel-dd release 5.5R2.3 built by builder on 2002-11-21 22:27:20 UTC  
jroute-dd release 5.5R2.3 built by builder on 2002-11-21 22:27:34 UTC  
jcrypto-dd release 5.5R2.3 built by builder on 2002-11-21 22:27:46 UTC

**Meaning**    The sample output shows the hostname, the version information for the Junos OS packages installed on the machine, and the version information for each software process.

---

## Display Version Information for Junos OS Packages

---

**Purpose**    Display version information for Junos OS packages to determine if they support particular features or hardware. You can also determine whether particular software bugs will affect your version of Junos OS.

**Action**    To display brief information and status for the kernel and Packet Forwarding Engine, use the following CLI operational mode command:

user@host> show version brief

The following sample output is for worldwide nonencrypted Junos OS:



**Sample Output**

```
user@host> show version brief
  Hostname: my-router.net
  Model: m10
  JUNOS Base OS boot [5.5R2.3]
  JUNOS Base OS Software Suite [5.5R2.3]
  JUNOS Kernel Software Suite [5.5R2.3]
  JUNOS Packet Forwarding Engine Support [5.5R2.3]
  JUNOS Routing Software Suite [5.5R2.3]
  JUNOS Online Documentation [5.5R2.3]
```

The following sample output is for Canada and USA encrypted Junos OS:

```
user@host> show version brief
  Hostname: my-router.net
  Model: m10
  JUNOS Base OS boot [5.5R2.3]
  JUNOS Base OS Software Suite [5.5R2.3]
  JUNOS Kernel Software Suite [5.5R2.3]
  JUNOS Packet Forwarding Engine Support [5.5R2.3]
  JUNOS Routing Software Suite [5.5R2.3]
  JUNOS Online Documentation [5.5R2.3]
  JUNOS Crypto Software Suite [5.5R2.3]
```

**Meaning** The sample output shows version information for the Junos OS packages installed on the router. If the **Junos Crypto Software Suite** is listed, the router has Canada and USA encrypted Junos OS. If the **Junos Crypto Software Suite** is not listed, the router is running worldwide nonencrypted Junos OS.

## Display the Current Active Router Configuration

**Purpose** Examine the current active router configuration.

**Action** To display the current, active router configuration, use the following command-line interface (CLI) operational mode command:

```
user@host> show configuration
```

### Sample Output

```
user@host> show configuration
version "10.4R2";
groups {
  global {
    system {
      host-name potter;
      domain-name harry.potter.net;
      domain-search [ harry.potter.net potter.net hryptr.net ];
      backup-router 10.110.12.254;
      time-zone America/Los_Angeles;
      authentication-order [ tacplus
password radius ];
      root-authentication {
        encrypted-password "$1$0Ff5.$I7.kUgMmx/4WKwUAG"; # SECRET-DATA
      }
      name-server {
        172.17.28.101;
        172.17.28.100;
```

```

    }
    radius-server {
        10.168.5.73 {
            secret "$9$Nd-YoDjq.PT4oZjik5T369pBIhS1L7dC"; # SECRET-DATA
            timeout 5;
            retry 3;
        }
    }
    tacplus-server {
        10.168.5.73 {
            secret "$9$.539IRSM8701lMX-2gqmfTz6"; # SECRET-DATA
            timeout 15;
            single-connection;
        }
    }
    login {
        class superuser-local {
            permissions all;
        }
        class wheel {
            permissions [ admin clear field floppy interfacemaintenance
network reset routing shell snmp system trace view ];
        }
        class readonly {
            permissions [ interface network routing system trace view ];
        }
    }
    user rpe {
        uid 1230;
        class superuser;
        shell csh;
        authentication {
            encrypted-password FN5oyk/qZ07F2; # SECRET-DATA
        }
        [...Output truncated...]
    }
}
static-host-mapping {
    crater sysid 0102.5524.5045;
    badlands sysid 0102.5524.5046;
    [...Output truncated...]
}
services {
    finger;
    ftp;
    rlogin;
    rsh;
    ssh;
telnet;
}
syslog {
    user * {
        any emergency;
    }
    host log {
        any notice;
        pfe info;
        interactive-commands any;
    }
    file messages {

```

```

        any notice;
        authorization info;
        pfe info;
        archive world-readable;
    }
    file security {
        interactive-commands any;
        archive world-readable;
    }
    file white_bx {
        daemon notice;
        archive size 40m world-readable;
    }
}
processes {
    routing enable;
    snmp enable;
    tnp-process enable;
    ntp enable;
    inet-process enable;
    mib-process enable;
    management enable;
    watchdog enable;
}
ntp {
    boot-server ntp.juniper.net;
    server 172.17.27.46;
}
}
chassis {
    dump-on-panic;
}
snmp {
    location "Systest lab";
    contact "Brian Matheson";
    interface fxp0.0;
    community public {
        authorization read-only;
    }
    community private {
        authorization read-write;
    }
}
routing-options {
    static {
        /* corporate and alpha net */
        route 172.16.0.0/12 {
            next-hop 10.168.14.254;
            retain;
            no-readvertise; [...Output truncated...]
        }
    }
}
}
re1;
}
apply-groups [ global re0 re1 ];
chassis {
    fpc 0 {
        pic 0 {

```

```

        mlfr-uni-nni-bundles 4;
    }
}
interfaces {
    ls-0/0/0:0 {
        encapsulation multilink-frame-relay-uni-nni;
        unit 0 {
            dlci 100;
            family inet {
                address 10.53.99.2/32 {
                    destination 10.53.99.1;
                }
            }
        }
    }
    ct3-0/1/0 {
        partition 1 interface-type t1;
        partition 2 interface-type t1;
        partition 3 interface-type t1;
        partition 4 interface-type t1;
    }
    t1-0/1/0:1 {
        encapsulation multilink-frame-relay-uni-nni;
        unit 0 {
            family mlfr-uni-nni {
                bundle ls-0/0/0:0;
            }
        }
    }
}
routing-options {
    static {
        route 10.1.1.0/24 next-hop 10.53.99.1;
    }
    autonomous-system 69;
    forwarding-table {
        export pplb;
    }
}
protocols {
    bgp {
        disable;
        group int {
            type internal;
            neighbor 10.255.14.30;
            [...Output truncated...]
        }
    }
    isis {
        disable;
        interface all {
            level 1 disable;
        }
        interface fxp0.0 {
            disable;
        }
    }
    inactive: ospf {
        traffic-engineering;
        reference-bandwidth 4g;
        area 0.0.0.0 {
            interface all;
        }
    }
}

```

```

        interface fxp0.0 {
            disable;
        }
    }
}
policy-options {
    policy-statement pplb {
        then {
            load-balance per-packet;
        }
    }
}
[...Output truncated...]

```

**Meaning** The sample output shows the current, active configuration for the router. When displaying the configuration, the CLI indents each subordinate hierarchy level, inserts braces to indicate the beginning and end of each hierarchy level, and places semicolons at the end of statements that are at the lowest level of the hierarchy.

The configuration statements appear in a fixed order. Interfaces appear alphabetically by type, and then in numerical order by slot number, Physical Interface Card (PIC) number, and port number.

## Copy Junos OS to the Router

**Action** Copy the software packages from the server to the router. We recommend that you copy them to the **/var/tmp** directory, which is on the rotating medium (hard disk) and is a large file system. Use the following CLI command:

```

user@host> file copy ftp://username: prompt@ftp.hostname.
net/jinstall-package-name/var/tmp/jinstall-package-name

```

## Add New Software

**Action** To add new software packages, use the following Junos OS CLI operational mode command:

```

user@host> request system software add /var/tmp/jinstall-package--name

```

**package-name** is the full URL to the file and **release-number** is the major software release number; for example, 4.2R1. Before the new software is added, the existing software is automatically deleted.



**NOTE:** Even though you are adding the new software, the changes do not take effect until the router has completed rebooting.

**Sample Output**

```
user@host> request system software add /var/tmp/jinstall-5.2R2.3-domestic.tgz
Installing package '/var/tmp/jinstall-5.2R2.3-domestic.tgz
Auto-deleting old jroute...
Auto-deleting old jdocs...
Auto-deleting old jpfe...
Auto-deleting old jkernel...
Adding JUNOS base software 5.2R2.3
Adding jkernel...
Adding jpfe...
Adding jdocs...
Adding jroute...
NOTICE: uncommitted changes have been saved in
/var/db/config/juniper.conf.pre-install
Saving package file in /var/sw/pkg/jinstall-5.2R2.3-domestic.tgz
```

---

## Compare Information Logged Before and After the Upgrade

**Purpose** Compare the operation of the system before and after the upgrade to ensure that everything is working as expected.

**Action** To obtain system information, use the following Junos OS CLI operational mode commands:

```
user@host> show version
user@host> show chassis hardware
user@host> show configuration
user@host> show interface terse
user@host> show bgp summary
user@host> show isis adjacency brief
user@host> show ospf neighbor brief
user@host> show system storage
```

Compare the information from these commands with the information you logged before the upgrade.

---

## Displaying LSP Status Events

**Purpose** Display extensive information about LSPs, including the 50 most recent history events and the reasons why an LSP might have failed.

**Action** To examine status messages, enter the following Junos OS command-line interface (CLI) operational mode command from the ingress router:

```
user@host> show mpls lsp extensive
```

### Sample Output 1

```
user@R1# run show mpls lsp extensive
Ingress LSP: 1 sessions

10.0.0.6
  From: 10.0.0.1, State: Dn, ActiveRoute: 0, LSPname: R1-to-R6
  ActivePath: (none)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
```

```

Primary                               State: Dn
Will be enqueued for recomputation in 3 second(s).
68 Jan  5 10:02:56 CSPF failed: no route toward 10.0.0.6[9 times]
67 Jan  5 09:58:33 Deselected as active
66 Jan  5 09:58:33 CSPF failed: no route toward 10.0.0.6
65 Jan  5 09:58:33 Clear Call
64 Jan  5 09:58:33 Session preempted
63 Jan  5 09:58:33 Down
62 Jan  5 09:58:32 CSPF failed: no route toward 10.0.0.6[2 times]
61 Jan  5 09:57:55 10.1.36.2: Explicit Route: wrong delivery
60 Jan  5 09:57:34 CSPF failed: no route toward 10.0.0.6[2 times]
59 Jan  5 09:57:28 CSPF: link down/deleted
10.1.36.1(R3.00/10.0.0.3)->10.1.36.2(R6.00/10.0.0.6)
58 Jan  5 09:54:37 Selected as active path
57 Jan  5 09:54:37 Record Route: 10.1.13.2 10.1.36.2
56 Jan  5 09:54:37 Up
55 Jan  5 09:54:37 Originate Call
54 Jan  5 09:54:37 CSPF: computation result accepted
53 Jan  4 18:11:28 CSPF failed: no route toward 10.0.0.6[2 times]
52 Jan  4 18:10:44 Deselected as active
51 Jan  4 18:10:44 CSPF failed: no route toward 10.0.0.6
50 Jan  4 18:10:44 CSPF: link down/deleted
10.1.13.1(R1.00/10.0.0.1)->10.1.13.2(R3.00/10.0.0.3)
49 Jan  4 18:10:44 RSVP Disabled
48 Jan  4 18:10:44 RSVP error , subcode 4: protocol shutdown
47 Jan  4 18:10:44 Down
46 Jan  4 18:06:15 Up
45 Jan  4 18:06:15 Down
44 Jan  4 18:06:10 Selected as active path
43 Jan  4 18:06:09 Record Route: 10.1.13.2 10.1.36.2
42 Jan  4 18:06:09 Up
41 Jan  4 18:06:09 Originate Call
40 Jan  4 18:06:09 CSPF: computation result accepted
39 Jan  4 18:05:40 CSPF failed: no route toward 10.0.0.6[2 times]
38 Jan  4 18:04:57 Deselected as active
37 Jan  4 18:04:57 CSPF failed: no route toward 10.0.0.6
36 Jan  4 18:04:57 CSPF: link down/deleted
10.1.13.1(R1.00/10.0.0.1)->10.1.13.2(R3.00/10.0.0.3)
35 Jan  4 18:04:57 CSPF failed: no route toward 10.0.0.6
34 Jan  4 18:04:57 Clear Call
33 Jan  4 18:04:57 Explicit Route: bad strict route
32 Jan  4 18:04:57 No Route toward dest
31 Jan  4 18:04:57 Down
30 Dec 28 13:47:29 Selected as active path
29 Dec 28 13:47:29 Record Route: 10.1.13.2 10.1.36.2
28 Dec 28 13:47:29 Up
27 Dec 28 13:47:29 Originate Call
26 Dec 28 13:47:29 CSPF: computation result accepted
25 Dec 28 13:46:59 CSPF failed: no route toward 10.0.0.6
24 Dec 28 13:46:39 Deselected as active
23 Dec 28 13:46:39 CSPF failed: no route toward 10.0.0.6
22 Dec 28 13:46:39 Clear Call
21 Dec 28 13:46:39 ResvTear received
20 Dec 28 13:46:39 Down
19 Dec 28 13:46:39 10.1.13.2: Session preempted
Created: Mon Dec 13 11:47:18 2004
Total 1 displayed, Up 0, Down 1
[...Output truncated...]

```

## Sample Output 2

```

user@R1> show mpls lsp extensive
[...Output truncated...]
*Primary use-TOKYO          State: Up, No-decrement-ttl
    Received RRO:
        10.222.28.2(flag=0x9) 10.222.4.2(flag=0x1) 10.222.44.2
    7 Sep 20 18:13:45 Record Route: 10.222.28.2(flag=0x9)
10.222.4.2(flag=0x1) 10.222.44.2
    6 Sep 20 18:13:45 Record Route: 10.222.28.2(flag=0x9)
10.222.4.2 10.222.44.2
    5 Sep 20 18:13:45 Fast-reroute Detour Up
    4 Sep 20 18:13:42 Selected as active path
    3 Sep 20 18:13:42 Record Route: 10.222.28.2 10.222.4.2
10.222.44.2
    2 Sep 20 18:13:42 Up
    1 Sep 20 18:13:42 Originate Call

```

## Sample Output 3

```

user@R1> show mpls lsp extensive
[...Output truncated...]
*Primary long                State: Up, COS: 6
    Bandwidth per class: <ct0 20Mbps> <ct1 2Mbps> <ct2 3Mbps>
    OptimizeTimer: 250
    Reoptimization in 237 second(s).
    Computed ERO
(S [L] denotes strict [loose] hops): (CSPF metric: 50)
    10.35.38.2 S 192.168.135.29
    S 10.35.39.1 S 10.35.40.2 S 10.35.41.1 S
    Received RRO
(ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node
10=SoftPreempt):
    10.35.38.2 (flag=0x09) 192.168.135.29 (flag=0x10) 10.35.39.1
    (flag=0x01) 10.35.40.2 (flag=0x01) 10.35.41.1 (flag=0x01)
[...Output truncated...]

```

**Meaning** Sample Output 1 from ingress router R1 shows extensive ingress LSP information, including LSP events that led to an LSP failure and the 50 most recent state events.

LSP events in bold are described in this topic. Descriptions include sample output of the LSP event, an explanation of what the event means, the possible cause of the event, and any possible actions that you can take.

For completeness, events not included in this example output are also described in this topic to show LSP events that did not occur in the example network configuration, but might occur in your network. The LSP events are organized alphabetically.

Sample Output 2 shows the state of the route received in the Received Record Route (**Received RRO**) created by fast reroute configurations in the network. The **Received RRO** indicates a series of hops. Each hop has an address followed by a flag. For more information on flags, see the *Junos MPLS Network Operations Guide*. In most cases, the **Received RRO** is the same as the computed Explicit Route Object (ERO).



Sample Output 3 shows a **Computed ERO** and a **Received RRO**. In this instance they are the same. However, if **Received RRO** is different from the **Computed ERO**, there is a topology change in the network, and the route is taking a detour.

## Call Was Cleared by RSVP Event

**LSP Event** Call was cleared by RSVP

**Sample Output**

```
user@R1> show mpls lsp extensive
[...Output truncated...]
10.0.0.6
From: 10.0.0.1, State: Dn, ActiveRoute: 0, LSPname: R1-to-R6
ActivePath: (none)
LoadBalance: Random
Encoding type: Packet, Switching type: Packet, GPID: IPv4
Primary State: Dn
Will be enqueued for recomputation in 10 second(s).
11 Jan 26 14:58:32 CSPF failed: no route toward 10.0.0.6
10 Jan 26 14:58:25 Deselected as active
9 Jan 26 14:58:25 CSPF failed: no route toward 10.0.0.6
8 Jan 26 14:58:25 Call was cleared by RSVP
7 Jan 26 14:58:25 Session preempted
6 Jan 26 14:58:25 Down
[...Output truncated...]
```

**Meaning** This LSP event indicates that the Resource Reservation Protocol (RSVP) session corresponding to the LSP path was preempted and the corresponding RSVP state deleted.

**Cause** This LSP event occurs when you issue the **clear rsvp session** command or trigger preemption of an RSVP session at the ingress router. Depending on the timer value, Constrained Shortest Path First (CSPF) recomputes the path and the LSP comes up again.

**Action** Not applicable.

## Change in Active Path Event

**LSP Event** Change in active path

<b>Sample Output</b>	<pre>user@R1&gt; show mpls lsp extensive [...Output truncated...] 13 Sep 19 00:02:20 Deselected as active 12 Sep 19 00:02:20 ResvTear received 11 Sep 19 00:02:20 Down 10 Sep 19 00:02:20  Change in active path 9 Sep 19 00:02:20 8 Sep 19 00:02:20 10.222.28.2: Explicit Route: bad strict routeChange in active path 7 Sep 19 00:02:20 CSPF failed: no route toward 192.168.32.1 6 Sep 19 00:02:20 10.222.28.2: No Route toward dest 5 Sep 19 00:00:54 Selected as active path 4 Sep 19 00:00:54 Record Route: 10.222.28.2 10.222.4.2 10.222.44.2 3 Sep 19 00:00:54 Up 2 Sep 19 00:00:54 Originate Call 1 Sep 19 00:00:54 CSPF: computation result accepted [...Output truncated...]</pre>
<b>Meaning</b>	This LSP event indicates that even though the active physical path has changed, the LSP stays up. Because this network configuration has an alternate (fast-reroute) path available, the event is a <b>Change in active path</b> rather than a <b>Session preempted</b> event.
<b>Cause</b>	The active path might have failed.
<b>Action</b>	Not applicable.

---

## Clear Call Event

<b>LSP Event</b>	Clear call
<b>Sample Output</b>	<pre>user@R1&gt; show mpls lsp extensive [...Output truncated...] 65 Jan 5 09:58:33  Clear Call 64 Jan 5 09:58:33 Session preempted 63 Jan 5 09:58:33 Down [...Output truncated...]</pre>
<b>Meaning</b>	This LSP event indicates that the LSP was disconnected and restarted.
<b>Cause</b>	The <b>clear mpls lsp</b> command was issued on the ingress router to disconnect existing RSVP sessions, release the routes and states associated with the LSP, and then start a new LSP. Issuing this command might impact traffic travelling along the LSP, because a time lag might occur between tearing down the old path and setting up a new path.
<b>Action</b>	Not applicable.

---

## Deselected as Active Event

<b>LSP Event</b>	Deselected as active
------------------	----------------------

**Sample Output**    user@R1> show mpls lsp extensive  
[...Output truncated...]  
Will be enqueued for recomputation in 18 second(s).  
53 Jan 4 18:11:28 CSPF failed: no route toward 10.0.0.6[2 times]  
52 Jan 4 18:10:44   **Deselected as active**  
51 Jan 4 18:10:44 CSPF failed: no route toward 10.0.0.6  
50 Jan 4 18:10:44 CSPF: link down/deleted  
[...Output truncated...]

**Meaning**    This LSP event indicates that the LSP is no longer the active path.

**Cause**    Typically, other events, similar to those in lines 50 and 51, indicate the reason that the LSP is no longer the active path.

**Action**    Refer to events on either side of this event to determine the appropriate action.

---

## Link Protection Down Event

**LSP Event**    Link protection down

**Sample Output 1**

```

user@R1> show configuration protocols mpls
label-switched-path R1-to-R6 {
    to 10.0.0.6;
    link-protection;
}
interface fxp0.0 {
    disable;
}
interface all;

```

**Sample Output 2**

```

user@R1> show mpls lsp extensive
[...Output truncated...]
10.0.0.6
  From: 10.0.0.1, State: Up, ActiveRoute: 1, LSPname: R1-to-R6
  ActivePath: (primary)
  Link protection desired
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary                               State: Up
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 2)
10.1.13.2 S 10.1.36.2 S
  Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):

    10.1.13.2(flag=1 Label=101936) 10.1.36.2(Label=3)
70 Feb 10 11:01:56 Link-protection Up
69 Feb 10 11:01:56 Selected as active path
68 Feb 10 11:01:56 Link-protection Down
67 Feb 10 11:01:56 Link-protection Up
66 Feb 10 11:01:56 Record Route: 10.1.13.2(flag=1 Label=101936)
10.1.36.2(Label=3)
65 Feb 10 11:01:56 Up
64 Feb 10 11:01:56 Originate Call
63 Feb 10 11:01:56 CSPF: computation result accepted
62 Feb 10 11:01:56 Clear Call
61 Feb 10 11:01:56 Deselected as active
60 Feb 10 11:01:56 Link-protection Down
59 Feb 10 10:57:58 Record Route: 10.1.13.2(flag=1 Label=101920)
10.1.36.2(Label=3)
58 Feb 10 10:57:56 Link-protection Up
57 Feb 10 10:56:58 Selected as active path
56 Feb 10 10:56:58 Record Route: 10.1.13.2(Label=101920) 10.1.36.2(Label=3)
55 Feb 10 10:56:58 Up
54 Feb 10 10:56:58 Originate Call
53 Feb 10 10:56:58 CSPF: computation result accepted
52 Feb 10 10:56:58 Clear Call
51 Feb 10 10:56:58 Deselected as active
50 Feb 10 10:56:58 Link-protection Down
49 Feb 10 10:56:35 10.1.56.2: MPLS label allocation failure[2 times]
48 Feb 10 10:48:32 Link-protection Up
47 Feb 10 10:48:32 Selected as active path
[...Output truncated...]

```

**Meaning** Sample Output 1 shows the MPLS link-protection configuration on R1 for the LSP **R1-to-R6**.

Sample Output 2 shows that link protection came up and down several times. Link protection comes up when the LSP signals. Line 60 shows the result when RSVP is disabled on all alternate paths out of R6. Lines 68 to 70 are the result when the **clear mpls lsp** command is issued.

**Cause** This LSP event is caused by a failure or configuration change that deletes or resignals the bypass LSP. For example, you clear the LSP using the **clear mpls lsp** command, or you disable RSVP on all alternate paths for the LSP. The bypass LSP does not use the primary path, instead it looks for an alternate path.

**Action** Include the **family mpls** statement for all alternate paths for the LSP at the [edit interfaces type-fpc/pic/port.unit] hierarchy level.

## Originate Call Event

**LSP Event** Originate call

**Sample Output**

```
user@R1> show mpls lsp extensive
[...Output truncated...]
 43 Jan  4 18:06:09 Record Route: 10.1.13.2 10.1.36.2
 42 Jan  4 18:06:09 Up
 41 Jan  4 18:06:09 Originate Call
 40 Jan  4 18:06:09 CSPF: computation result accepted
 39 Jan  4 18:05:40 CSPF failed: no route toward 10.0.0.6[2 times]
[...Output truncated...]
```

**Meaning** This LSP event indicates that the router is issuing an RSVP Path message.

**Cause** A Path message is transmitted by the ingress router toward the egress router to establish an LSP.

**Action** To analyze the contents of the Path message, enable RSVP tracing. To configure RSVP tracing, include the **traceoptions** statement at the [edit protocols rsvp] hierarchy level. Use the **file** statement to specify the name of the file that receives the output of the tracing operation. All files are placed in the directory **/var/log**. We recommend that you place RSVP tracing output in the file **rsvp-log**. To examine the contents of the **rsvp-log** file, issue the **file show /var/log/rsvp-log** command.

## ResvTear Received Event

**LSP Event** ResvTear received

**Sample Output**

```
user@R1> show mpls lsp extensive
[...Output truncated...]
 23 Dec 28 13:46:39 CSPF failed: no route toward 10.0.0.6
 22 Dec 28 13:46:39 Clear Call
 21 Dec 28 13:46:39 ResvTear received
 20 Dec 28 13:46:39 Down
 19 Dec 28 13:46:39 10.1.13.2: Session preempted
 18 Dec 28 13:42:07 Selected as active path
[...Output truncated...]
```

**Meaning** This LSP event indicates that an RSVP ResvTear message was received. ResvTear messages remove RSVP reservation states along a path. These messages travel upstream

toward senders of the session. This message usually appears in the middle of a run of messages that tear the LSP down.

**Cause** In some cases, an ResvTear event is received because a router's reservation state times out. In other cases, when the downstream link fails, the upstream node must eliminate all RSVP states and initiates a ResvTear event. If you are running Fast ReRoute, the upstream node initiates a PathErr message, not a ResvTear message. It is beyond the scope of this document to include all possible reasons for an ResvTear event.

**Action** Analyze the status to determine if this is the required behavior. If this is not the required behavior, verify the surrounding LSP events to identify the cause of the problem.

---

## Session Preempted Event

---

**LSP Event** Session preempted

**Sample Output 1**

```
user@R1> show mpls lsp extensive
[...Output truncated...]
 21 Dec 28 13:46:39 ResvTear received
 20 Dec 28 13:46:39 Down
 19 Dec 28 13:46:39 10.1.13.2: Session preempted
 18 Dec 28 13:42:07 Selected as active path
 17 Dec 28 13:42:07 Record Route: 10.1.13.2 10.1.36.2
[...Output truncated...]
```

**Sample Output 2**

```
user@R1> show mpls lsp extensive
[...Output truncated...]
 66 Jan 5 09:58:33 CSPF failed: no route toward 10.0.0.6
 65 Jan 5 09:58:33 Clear Call
 64 Jan 5 09:58:33 Session preempted
 63 Jan 5 09:58:33 Down
 62 Jan 5 09:58:32 CSPF failed
: no route toward 10.0.0.6[2 times]
 61 Jan 5 09:57:55 10.1.36.2: Explicit Route: wrong delivery
 60 Jan 5 09:57:34 CSPF failed: no route toward 10.0.0.6[2 times]
 59 Jan 5 09:57:28 CSPF: link down/deleted
10.1.36.1(R3.00/10.0.0.3)->10.1.36.2(R6.00/10.0.0.6)
[...Output truncated...]
```

**Meaning** This LSP event indicates that the LSP session was taken over. Sample Output 1 shows the IP address (10.1.13.2) included with the event, indicating the IP address of the router that sent the message. Sample Output 2 does not include an IP address, indicating that the message originated on the ingress router.

**Cause** The state of the network might have changed, as shown in Sample Output 1, or an LSP with a higher priority might be using the bandwidth of the LSP.

**Action** Refer to the events preceding this event in the history log for more information on what might have caused the preemption. For example, in line 62, the **CSPF failed** message may indicate that you specified a disable constrained-path (**no-cspf**) LSP and an explicit

route address that is strict and not directly connected. Additionally, the egress router might have changed its configuration, making the destination address unreachable.

## Displaying General LSP Error Events

**Purpose** Display extensive information about LSPs, including the 50 most recent history events and the possible reasons why an LSP failed.

**Action** To examine error messages, enter the following Junos OS command-line interface (CLI) operational mode command from the ingress router:

```
user@host> show mpls lsp extensive
```

### Sample Output

```
user@R1# run show mpls lsp extensive
Ingress LSP: 1 sessions

10.0.0.6
  From: 10.0.0.1, State: Dn, ActiveRoute: 0, LSPname: R1-to-R6
  ActivePath: (none)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  Primary                               State: Dn, No-decrement-ttl
    Bandwidth: 100Mbps
    14 Jan 21 15:43:39 Requested bandwidth unavailable[3 times]
    13 Jan 21 15:43:21 Deselected as active
    12 Jan 21 15:43:21 Requested bandwidth unavailable
    11 Jan 21 15:43:21 Clear Call
    10 Jan 21 15:42:32 Selected as active path
    9 Jan 21 15:42:32 Record Route: 10.1.12.2 10.1.26.2
    8 Jan 21 15:42:32 Up
[...Output truncated...]
```

**Meaning** The sample output from ingress router R1 is a section from the complete output. Typically, the output includes LSP events that led to an LSP failure and the 50 most recent state events. Only one example of a general LSP error event is displayed because it is impossible to provide all of the events described in this topic in one sequence of log history.

For completeness, events not generated by the example network used throughout this book are described to show LSP events that might occur in your network. The output for these events includes the prompt **user@host** rather than the usual **user@R1** prompt.

## Admission Control Failure Event

**LSP Event** Admission control failure

**Sample Output** Not available.

**Meaning** This LSP error event indicates that a Resource Reservation Protocol (RSVP) Admission control failure occurred along the LSP path. This event is logged because of an error notification (PathErr message) received from RSVP for the label-switched path.

**Cause** This LSP event is caused by inadequate bandwidth on a link along the LSP path. The available bandwidth could not satisfy the requested traffic parameters and no other sessions were pre-empted to accommodate this request.

**Action** This error event is not generated by Juniper Networks routers. However, when this event is received by a Juniper Networks router, it appears in the log output of the **show mpls lsp extensive** command.

---

## Explicit Route: Bad Loose Route Event

---

**LSP Event** Explicit Route: bad loose route



**Sample Output 1** user@R1# run show mpls lsp extensive  
 Ingress LSP: 1 sessions

```

10.0.0.6
From: 10.0.0.1, State: up, ActiveRoute: 0, LSPname: R1-R6-3
ActivePath: R6-3-1 (secondary)
LoadBalance: Random
Encoding type: Packet, Switching type: Packet,GPID: IPv4
Primry R6-3 State: Dn
10 Feb 15 21:21:58 Explicit Route: bad loose route[2 times]
9 Feb 15 21:21:52 Deselected as active
8 Feb 15 21:21:51 Explicit route: bad loose route
7 Feb 15 21:21:51 10.1.15.1: MPLS label allocation failure
6 Feb 15 21:21:51 MPLS label allocation failure
5 Feb 15 21:21:51 Down
4 Feb 15 21:20:55 Selected as active pathe
3 Feb 15 21:20:55 Record Route: 10.1.15.2 10.1.56.2
2 Feb 15 21:20:55 Up
1 Feb 15 21:20:55 Originate Call
*Secondary R6-3-1 State: Up
Received RRO (ProtectionFlag 1 = Available 2 = InUse 4 = B/W 8 = Node
10 = SoftPreempt):
10.1.12.2 10.1.26.2
4 Feb 15 21:21:52 Selected as active path
3 Feb 15 21:21:52 Record Route: 10.1.12.2 10.1.26.2
2 Feb 15 21:21:52 Up
1 Feb 15 21:21:52 Originate Call
Created: Tue Feb 15 21:20:55 2005
Total 3 displayed, Up 2, Down 1

```

**Sample Output 2** user@R1# run show protocols mpls

```

label-switched-path R1-to-R6 {
to 10.0.0.6;
no-cspf;
link-protection;
primary to-R6;
}
label-switched-path R1-to-R6-2 {
to 10.0.0.6;
link-protection;
auto-bandwidth {
adjust-interval 300;
minimum-bandwidth 1;
maximum-bandwidth 1k;
}
}
label-switched-path R1-R6-3 {
to 10.0.0.6;
no-cspf; <--Allows a loose ERO
primary R6-3;
secondary R6-3-1;
}
path to-R6 {
10.1.15.2 strict;
10.1.56.2 strict;
}
path R6-3 {
10.1.15.2 loose; <--Loose ERO
}

```

```
path R6-3-1 {  
  10.1.12.2;  
}  
interface fxp0.0 {  
  disable;  
}  
interface all;
```

**Meaning** This LSP error event indicates that there is an error in the loose hop specified in the Explicit Route Object (ERO) of a Path message received by a label-switched router (LSR) along the LSP path, indicating an LSP setup failure.

**Cause** This LSP error event is caused by control plane unreachability or data plane incompatibility.

**Action** Check the LSP configuration at the `[edit protocols mpls]` hierarchy level.

---

## Explicit Route: Bad Strict Route Event

---

**LSP Event** Explicit route: bad strict route

**Sample Output 1** user@R1> show mpls lsp extensive  
 [...Output truncated...]  
 36 Jan 4 18:04:57 CSPF: link down/deleted 10.1.13.1(R1.00/10.0.0.1)  
 ->10.1.13.2(R3.00/10.0.0.3)  
 35 Jan 4 18:04:57 CSPF failed: no route toward 10.0.0.6  
 34 Jan 4 18:04:57 Clear Call  
 33 Jan 4 18:04:57 **Explicit Route: bad strict route**  
 32 Jan 4 18:04:57 No Route toward dest  
 31 Jan 4 18:04:57 Down  
 [...Output truncated...]

**Sample Output 2** user@host> show mpls lsp extensive  
 Ingress LSP: 34 sessions  
  
 10.172.2.99  
 From: 10.172.162.18, State: Up, ActiveRoute: 3726, LSPname:  
 dcr2.den\_to\_dcr1.chd\_P  
 ActivePath: P1\_dcr2.den\_to\_dcr1.chd (primary)  
 LoadBalance: Random  
 Metric: 25  
 Encoding type: Packet, Switching type: Packet, GPID: IPv4  
 \*Primary P1\_dcr2.den\_to\_dcr1.chd State: Up  
 Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node  
 10=SoftPreempt):  
 10.70.192.134  
 16 Jun 28 18:27:51 Selected as active path  
 15 Jun 28 18:27:51 Record Route: 10.70.192.134  
 14 Jun 28 18:27:51 Up  
 13 Jun 28 18:27:29 Deselected as active  
 12 Jun 28 18:27:28 No Route toward dest  
 11 Jun 28 18:27:28 Down  
 10 Jun 18 03:52:18 Selected as active path  
 9 Jun 18 03:52:18 Record Route: 10.70.192.134  
 8 Jun 18 03:52:18 Up  
 7 Jun 18 03:52:18 Originate Call  
 6 Jun 18 03:52:18 Clear Call  
 5 Jun 18 03:52:18 Deselected as active  
 4 Jun 18 02:56:25 Selected as active path  
 3 Jun 18 02:56:25 Record Route: 10.70.192.134  
 2 Jun 18 02:56:25 Up  
 1 Jun 18 02:56:25 Originate Call  
 Standby B1\_dcr2.den\_to\_dcr1.chd State: Dn  
 18 Jun 29 12:49:21 10.70.192.26: Routing loop detected[4798 times]  
 17 Jun 27 00:53:42 10.70.192.77:  
**Explicit Route: bad strict route**  
 [20 times]  
 16 Jun 27 00:39:49 204.70.192.26: Routing loop detected [3370 times]  
 [...Output truncated...]

**Meaning** This LSP event indicates that a poorly formed ERO was generated. Sample Outputs 1 and 2 show that this LSP event was caused by different situations described below.

**Cause** This LSP event can be caused by several factors:

- A strict hop address specified for an LSP on a link that does not have RSVP enabled.
- The **no-cspf** statement included in the LSP configuration.

- An error with the configuration of constraints on a Constrained Shortest Path First (CSPF) LSP generates the **CSPF: No route towards dest** message, followed by the **Explicit Route: bad strict route** event.
- An ERO that causes a routing loop. See Sample Output 2.

**Action** Examine the strict hop address, remove the **no-cspf** statement, or examine the path and verify that RSVP is enabled on each interface.

---

### Explicit Route: Format Error Event

---

**LSP Event** Explicit route: format error

**Sample Output**

```
user@R1> show mpls lsp extensive
[...Output truncated...]
10.0.0.6
  From: 10.0.0.1, State: Dn, ActiveRoute: 0, LSPname: R1-to-R6
  ActivePath: (none)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  Primary   to-R6           State: Dn, No-decrement-ttl
    5 Jan 21 14:37:06 10.1.34.2: Explicit Route: format error [2 times]
    4 Jan 21 14:37:03 Originate Call
    3 Jan 21 14:37:03 Clear Call
[...Output truncated...]
```

**Meaning** This LSP event indicates an LSP setup failure in which a Path message error in the the ERO was received by a router along the LSP path.

**Cause** This LSP event can be caused by several factors:

- An incorrectly formed ERO in the RSVP Path message.
- A strict hop address specified in the middle of an ERO that is not contiguous.
- An unsupported subobject in the ERO of a router along the LSP path.
- The hop indicated by the RSVP hop object does not match the hop indicated by the ERO.

**Action** Examine the strict hop address configuration and make any necessary changes.

---

### Explicit Route: Wrong Delivery Event

---

**LSP Event** Explicit route: wrong delivery

**Sample Output 1** user@host> show mpls lsp extensive  
 [...Output truncated...]  
 Primary use-TOKYO State: Dn, No-decrement-ttl  
   3 Sep 19 00:25:45 10.222.45.2: Explicit Route: wrong delivery  
   2 Sep 19 00:25:34 No Route[8 times]  
   1 Sep 19 00:23:01 Originate Call  
 [...Output truncated...]

**Sample Output 2** user@host> show mpls lsp extensive  
 [...Output truncated...]  
 10.0.0.6  
 From: 10.0.0.1, State: Dn, ActiveRoute: 0, LSPname: R1-to-R6  
 ActivePath: (none)  
 LoadBalance: Random  
 Encoding type: Packet, Switching type: Packet, GPID: IPv4  
 Primary to-R6 State: Dn  
   40 Jan 26 16:35:26 10.1.36.2: Explicit Route: wrong delivery [2 times]  
   39 Jan 26 16:35:23 Originate Call  
   38 Jan 26 16:35:23 Clear Call  
 [...Output truncated...]

**Sample Output 3** user@R1> show configuration protocols mpls  
 label-switched-path R1-to-R6 {  
   to 10.0.0.6;  
   no-cspf;  
   primary to-R6;  
 }  
 path to-R6 {  
   10.1.13.2 strict;  
   10.1.56.1 strict;     <<< IP address not directly connected to 10.1.13.2  
   10.1.26.1 strict;

**Meaning** This LSP event indicates that a RSVP message with an ERO arrived at the wrong router, even though a strict route was specified. The receiving router determines that the address is inconsistent with the ERO, and generates the error message. Note that the IP address of the sending router precedes the error event; for example, **10.222.45.2** in Sample Output 1, and **10.1.36.2** in Sample Output 2.

**Cause** This LSP event can be caused by several factors:

- The loopback (**lo0**) interface on the ingress router is not configured at the **[edit protocols isis]** hierarchy level. After the loopback (**lo0**) interface is included in the Intermediate System-to-Intermediate System (IS-IS) configuration, and while IS-IS is forming adjacencies, an RSVP packet is forwarded to an incorrect destination, **10.222.45.2**, as shown in Sample Output 1.
- A strict path is configured to a directly connected router, then another strict path is configured to an IP address that is not directly connected. For example, Sample Output 3 shows that the path **to-R6** includes three IP addresses, one of which (**10.1.56.1**) is not directly connected to the other IP addresses in the path.

**Action** Take appropriate action. On the ingress router, include the loopback (**lo0**) interface at the **[edit protocols isis]** hierarchy level, change the definition of the strict path at the **[edit**

`protocols mpls path path-name`] hierarchy level, or verify the validity of all IP addresses listed in the named path referenced by the LSP hop by hop.

---

## Invalid Destination Address Event

<b>LSP Event</b>	Invalid Dest addr
<b>Sample Output</b>	<pre>user@R1&gt; show mpls lsp extensive Ingress LSP: 1 sessions  10.0.0.1   From: 10.0.0.1, State: Dn, ActiveRoute: 0, LSPname: R1-to-R6   ActivePath: (none)   LoadBalance: Random   Metric: 100   Encoding type: Packet, Switching type: Packet, GPID: IPv4   Primary                               State: Dn     4 Apr 22 10:22:15 Invalid Dest Addr     3 Apr 22 10:22:15 Originate Call     2 Apr 22 10:22:15 Invalid Dest Addr     1 Apr 22 10:22:15 Originate Call   Created: Fri Apr 22 10:22:16 2005 Total 1 displayed, Up 0, Down 1</pre>
<b>Meaning</b>	This LSP event indicates that the <b>to</b> address configured at the <code>[edit protocols mpls labeled-switched-path name]</code> hierarchy level is invalid.
<b>Cause</b>	This LSP event is caused when the <b>to</b> address of the LSP is the loopback address of the ingress router. A contributing factor may be that the <b>no-cspf</b> statement is included in the LSP configuration.
<b>Action</b>	Verify that the LSP destination address is not the local router's loopback address, and check that the addresses on the local router are correctly configured.

---

## Invalid Filter for Policing Event

<b>LSP Event</b>	Invalid filter for policing
<b>Sample Output</b>	Not available. This LSP event indicates an abnormal condition and is difficult to recreate.
<b>Meaning</b>	Although a policer was configured on the LSP, the corresponding firewall filter index was not found, indicating a failure in the routing protocol process (rpd) or the firewall process (dfwd).
<b>Cause</b>	A possible cause is that the routing protocol process (rpd) or the firewall process (dfwd) were restarted in a situation in which the LSP was established.
<b>Action</b>	Not applicable.

## MPLS Graceful Restart: Recovery Failed Event

<b>LSP Event</b>	MPLS graceful restart: recovery failed
<b>Sample Output</b>	Not available.
<b>Meaning</b>	This LSP event indicates unsuccessful recovery of an LSP path after graceful restart, resulting in potential traffic loss.
<b>Cause</b>	<p>This LSP event is caused by several factors:</p> <ul style="list-style-type: none"> <li>• MPLS graceful restart procedures may have been aborted by this LSR.</li> <li>• MPLS graceful restart is disabled, by configuration, during the recovery period.</li> <li>• An MPLS LSP path is disabled either due to a configuration change or due to an error during the recovery period.</li> <li>• CSPF computation failed for the restarted LSP path with parameters and constraints preserved across the restart.</li> <li>• A signaling failure occurred and an RSVP PathErr was received on the LSP path signaled after a restart.</li> <li>• A network failure occurred on some hop that the LSP was traversing during the recovery period.</li> </ul>
<b>Action</b>	Check the MPLS logs for more details about the failure.

## MPLS Label Allocation Failure Event

<b>LSP Event</b>	MPLS label allocation failure
<b>Sample Output</b>	<pre>user@R1&gt; show mpls lsp extensive [...Output truncated...]  24 Jan 20 09:25:35 CSPF failed: no route toward 10.0.0.6  23 Jan 20 09:25:35 Clear Call  22 Jan 20 09:25:35 Deselected as active  21 Jan 20 09:25:35 10.1.13.1: MPLS label allocation failure  20 Jan 20 09:25:34 MPLS label allocation failure  19 Jan 20 09:25:34 Down [...Output truncated...]</pre>
<b>Meaning</b>	This LSP event indicates that the MPLS protocol or the <b>family mpls</b> statement were not configured properly. When the LSP event is preceded by an IP address, the address is typically the router that has the MPLS configuration error.
<b>Cause</b>	This LSP event is caused by the omission of interfaces at the <code>[edit protocols mpls]</code> hierarchy level or failure to configure the <b>family mpls</b> statement at the <code>[edit interfaces type-fpc/pic/port]</code> hierarchy level. The <b>family mpls</b> statement specifies to the interface ASICs to permit protocol code 0x8847 (unicast MPLS) into the router.

**Action** Include interfaces at the `[edit protocols mpls]` hierarchy level, or include the `family mpls` statement at the `[edit interfaces type-fpc/pic/port]` hierarchy level. You must configure the `family mpls` statement, in the same way that you must configure the `family iso` statement for IS-IS.



**NOTE:** Do not configure the `family mpls` statement on the loopback (lo0) interface.

---

---

## Non-RSVP Capable Router Detected Event

---

**LSP Event** Non-RSVP capable router detected

**Sample Output**

```
user@host> show mpls lsp extensive
[...Output truncated...]
10.0.0.6
  From: 10.0.0.1, State: Dn, ActiveRoute: 0, LSPname: R1-to-R6
  ActivePath: (none)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  Primary                               State: Dn, No-decrement-ttl
    19 Jan 21 15:05:37 10.1.24.2: Non-RSVP capable router detected
    18 Jan 21 15:04:52 10.1.26.2: Non-RSVP capable router detected [4 times]
    17 Jan 21 15:04:34 Originate Call
    16 Jan 21 15:04:34 Clear Call
[...Output truncated...]
```

**Meaning** This LSP event indicates that a router, forwarding packets to the egress router, was not configured for RSVP.

**Cause** This LSP event might be caused when a router not configured for RSVP forwards an RSVP packet toward the egress router without decrementing the `Send_TTL` value in the RSVP common header. The next downstream router detects that the `Send_TTL` value and the `IP_TTL` value are different, and generates this LSP event. Note that two different routers generated the same error message at different times.

**Action** Configure the router in question with RSVP.

---

## No Route Toward Destination Event

---

**LSP Event** No route toward destination



**Sample Output 1** user@R1> show mpls lsp extensive  
 [...Output truncated...]  
 35 Oct 26 22:48:36 Down  
 34 Oct 26 22:48:29 CSPF failed: no route toward 10.0.0.1[4 times]  
 33 Oct 26 22:47:25 CSPF: link down/deleted  
 10.1.13.2(R3.00/10.0.0.3)->10.1.13.1(R1.00/10.0.0.1)  
 32 Oct 26 22:47:25 CSPF failed: no route toward 10.0.0.1  
 31 Oct 26 22:47:25 10.1.36.1: **No Route toward dest**  
 30 Oct 26 22:33:54 Selected as active path  
 29 Oct 26 22:33:53 Record Route: 10.1.36.1 10.1.13.1  
 [...Output truncated...]

**Sample Output 2** user@R1> show mpls lsp extensive  
 [...Output truncated...]  
 10.0.0.6  
 From:10.0.0.1 , State: Dn, ActiveRoute: 0, LSName: R1-to-R6  
 ActivePath: (none)  
 LoadBalance: Random  
 Encoding type: Packet, Switching type: Packet, GPID: IPv4  
 Primary State: Dn  
 Will be enqueued for recomputation in 7 second(s).  
 13 Oct 25 16:29:28 Deselected as active  
 12 Oct 25 16:29:27 CSPF failed: no route toward 10.0.0.6  
 11 Oct 25 16:29:27 CSPF: link down/deleted  
 10.1.13.1(R1.00/10.0.0.1)->10.1.13.2(R3.00/10.0.0.3)  
 10 Oct 25 16:29:27 CSPF failed: no route toward 10.0.0.6  
 9 Oct 25 16:29:27 Clear Call  
 8 Oct 25 16:29:27 Explicit Route: bad strict route  
 7 Oct 25 16:29:27 **No Route toward dest**  
 6 Oct 25 16:29:27 Down  
 [...Output truncated...]

**Meaning** This LSP event indicates that the router at address **10.1.36.1** in Sample Output 1 does not have a route to the specified destination. Sample Output 2 shows that the local router, ingress router **10.0.0.1**, does not have a route to the specified destination.

**Cause** This LSP event is caused by different factors. The egress interface of a transit router might not have RSVP enabled, or IP reachability to the destination (either the egress router or the next address in the ERO) does not exist.

**Action** Enable RSVP on the transit router's egress interface, or examine the IP configuration of the relevant router.

## Unsupported Traffic Class Event

**LSP Event** Unsupported traffic class

**Sample Output** Not available. This LSP event indicates an abnormal condition and is difficult to recreate.

**Meaning** This LSP error event is a Juniper Networks proprietary error, indicating that a DiffServ-traffic engineering (TE) LSP was signaled with one or more traffic classes with values greater than the four traffic classes currently supported.

**Cause** Not available.

**Action** Not available.

---

## CSPF: Computation Result Accepted Event

---

**LSP Event** CSPF: computation result accepted

**Sample Output** user@R1> show mpls lsp extensive  
[...Output truncated...]  
57 Jan 5 09:54:37 Record Route: 10.1.13.2 10.1.36.2  
56 Jan 5 09:54:37 Up  
55 Jan 5 09:54:37 Originate Call  
54 Jan 5 09:54:37 **CSPF: computation result accepted**  
[...Output truncated...]

**Meaning** This LSP event indicates that CSPF pruned the traffic engineering database of noncompliant links and found a shortest path. CSPF generated an ERO, which was then passed to the RSVP.

**Cause** Not applicable.

**Action** Not applicable

---

## CSPF: Reroute Due to Re-Optimization Event

---

**LSP Event** CSPF: Reroute due to re-optimization

**Sample Output** user@host> show mpls lsp extensive  
[...Output truncated...]  
9 Dec 11 17:32:35 Up  
8 Dec 11 17:32:35 Clear Call  
7 Dec 11 17:32:35 CSPF: computation result accepted  
6 Dec 11 17:32:35 **CSPF: Reroute due to re-optimization**  
5 Dec 11 17:28:29 CSPF: computation result ignored  
4 Dec 11 17:24:23 Record Route: 10.35.38.2 S 192.168.135.29 S  
10.35.39.1 S 10.35.40.2 S 10.35.41.1 S  
3 Dec 11 17:24:23 Up  
[...Output truncated...]

**Meaning** This LSP event indicates that CSPF found an optimal path for LSP traffic, and switched over to the new path.

**Cause** This is a periodic or one-time reoptimization event.

**Action** Not applicable.

---

## Retry Limit Exceeded Event

---

**LSP Event** Retry limit exceeded

**Sample Output 1**

```

user@R1> show mpls lsp extensive
[...Output truncated...]
10.0.0.6
  From: 10.0.0.1, State: Dn, ActiveRoute: 0, LSPname: R1-to-R6
  ActivePath: (none)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  Primary                               State: Dn
    RetryCount: 13
    RetryLimit: 1
    12 Jan 14 15:39:30 Clear Call
    11 Jan 14 15:39:30  Retry limit exceeded
    10 Jan 14 15:39:10 10.1.12.1: MPLS label allocation failure[11 times]
[...Output truncated...]

```

**Sample Output 2**

```

user@R1> show mpls lsp extensive
[...Output truncated...]
10.0.0.6
  From: 10.0.0.1, State: Dn, ActiveRoute: 0, LSPname: R1-to-R6
  ActivePath: (none)
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  Primary                               State: Dn
    14 Jan 14 15:44:07 10.1.12.1: MPLS label allocation failure[3 times]
    13 Jan 14 15:43:58 Originate Call
    12 Jan 14 15:39:30 Clear Call
    11 Jan 14 15:39:30  Retry limit exceeded
    10 Jan 14 15:39:10 10.1.12.1: MPLS label allocation failure[11 times]
[...Output truncated...]

```

- Meaning** This LSP event indicates that the number of CSPF path computations for a particular path exceeded a configured retry limit. After this point, the path is not recomputed or signaled, unless the user intervenes.
- Cause** The number of CSPF path computations for an LSP path exceeded the configured non-zero retry limit. Sample Output 1 shows that a configured retry limit of 1 was exceeded by the retry count of 13.
- Action** Enter the **clear mpls lsp** command to disconnect and restart the LSP. Sample Output 2 shows that events 13 and 14 were generated after the **clear mpls lsp** command was issued. This operation disconnects existing RSVP sessions on the ingress router, releases the routes and states associated with the LSPs, and starts a new LSP. Issuing this command might impact traffic travelling along the LSP, because of a time lag that can occur between the old path being torn down and the new path being set up.

## Log the Software Version Information

**Purpose** The purpose of this action is to log the Junos OS version information.

**Action** Use the following Junos OS CLI operational mode command:

```
user@host> show version | save filename
```

## Sample Output

```
user@host> show version | save test
Wrote 39 lines of output to 'test'

user@host> show version
Hostname: my-router.net
Model: m10
JUNOS Base OS boot [5.0R5]
JUNOS Base OS Software Suite [5.0R5]
JUNOS Kernel Software Suite [5.0R5]
JUNOS Routing Software Suite [5.0R5]
JUNOS Packet Forwarding Engine Support [5.0R5]
JUNOS Crypto Software Suite [5.0R5]
JUNOS Online Documentation [5.0R5]
KERNEL 5.0R5 #0 built by builder on 2002-03-02 05:10:28 UTC
MGD release 5.0R5 built by builder on 2002-03-02 04:45:32 UTC
CLI release 5.0R5 built by builder on 2002-03-02 04:44:22 UTC
CHASSISD release 5.0R5 built by builder on 2002-03-02 04:43:37 UTC
DCD release 5.0R5 built by builder on 2002-03-02 04:42:47 UTC
RPD release 5.0R5 built by builder on 2002-03-02 04:46:17 UTC
SNMPD release 5.0R5 built by builder on 2002-03-02 04:52:26 UTC
MIB2D release 5.0R5 built by builder on 2002-03-02 04:45:37 UTC
APSD release 5.0R5 built by builder on 2002-03-02 04:43:31 UTC
VRRPD release 5.0R5 built by builder on 2002-03-02 04:52:34 UTC
ALARM release 5.0R5 built by builder on 2002-03-02 04:43:24 UTC
PFED release 5.0R5 built by builder on 2002-03-02 04:46:06 UTC
CRAFTD release 5.0R5 built by builder on 2002-03-02 04:44:30 UTC
SAMPLED release 5.0R5 built by builder on 2002-03-02 04:52:20 UTC
ILMID release 5.0R5 built by builder on 2002-03-02 04:45:21 UTC
BPRLAYD release 5.0R5 built by builder on 2002-03-02 04:42:41 UTC
RMOPD release 5.0R5 built by builder on 2002-03-02 04:46:11 UTC
jkernel-dd release 5.0R5 built by builder on 2002-03-02 04:41:07 UTC
jroute-dd release 5.0R5 built by builder on 2002-03-02 04:41:21 UTC
jdocs-dd release 5.0R5 built by builder on 2002-03-02 04:39:11 UTC
```

**Meaning** The sample output shows the hostname, router model, and the different Junos OS packages, processes, and documents.

**Related** •  
**Documentation**

---

## Log the Hardware Version Information

**Purpose** You should log hardware version information in the rare event that a router cannot successfully reboot and you cannot obtain the Routing Engine serial number. The Routing Engine serial number is necessary for Juniper Networks Technical Assistance Center (JTAC) to issue a return to manufacturing authorization (RMA). Without the Routing Engine serial number, an onsite technician must be dispatched to issue the RMA.

**Action** To log the router chassis hardware version information, use the following Junos OS CLI operational mode command:

```
user@host> show chassis hardware | save filename
```

**Sample Output** The output for the M-series routers varies depending on the chassis components of each router. All routers have a chassis, midplanes or backplanes, power supplies, and Flexible PIC Concentrators (FPCs). Refer to the hardware guides for information about the different chassis components.

```
user@host> show chassis hardware | save test
Wrote 43 lines of output to 'test'
```

```
user@host> show chassis hardware
```

Item	Version	Part number	Serial number	Description
Chassis			101	M160
Midplane	REV 02	710-001245	S/N AB4107	
FPM CMB	REV 01	710-001642	S/N AA2911	
FPM Display	REV 01	710-001647	S/N AA2999	
CIP	REV 02	710-001593	S/N AA9563	
PEM 0	Rev 01	740-001243	S/N KJ35769	DC
PEM 1	Rev 01	740-001243	S/N KJ35765	DC
PCG 0	REV 01	710-001568	S/N AA9794	
PCG 1	REV 01	710-001568	S/N AA9804	
Host 1			da000004f8d57001	teknor
MCS 1	REV 03	710-001226	S/N AA9777	
SFM 0 SPP	REV 04	710-001228	S/N AA2975	
SFM 0 SPR	REV 02	710-001224	S/N AA9838	Internet Processor I
SFM 1 SPP	REV 04	710-001228	S/N AA2860	
SFM 1 SPR	REV 01	710-001224	S/N AB0139	Internet Processor I
FPC 0	REV 03	710-001255	S/N AA9806	FPC Type 1
CPU	REV 02	710-001217	S/N AA9590	
PIC 1	REV 05	750-000616	S/N AA1527	1x OC-12 ATM, MM
PIC 2	REV 05	750-000616	S/N AA1535	1x OC-12 ATM, MM
PIC 3	REV 01	750-000616	S/N AA1519	1x OC-12 ATM, MM
FPC 1	REV 02	710-001611	S/N AA9523	FPC Type 2
CPU	REV 02	710-001217	S/N AA9571	
PIC 0	REV 03	750-001900	S/N AA9626	1x STM-16 SDH, SMIR
PIC 1	REV 01	710-002381	S/N AD3633	2x G/E, 1000 BASE-SX
FPC 2				FPC Type OC192
CPU	REV 03	710-001217	S/N AB3329	
PIC 0	REV 01			1x OC-192 SM SR-2

**Meaning** The sample output shows the hardware inventory for an M160 router with a chassis serial number of 101. For each component, the output shows the version number, part number, serial number, and description.

## Log the System Boot-Message Information

**Action** To log the system boot-message information, use the following Junos OS CLI operational mode command:

```
user@host> show system boot-messages | save filename
```

```

Sample Output user@host> show system boot-messages | save test
Wrote 80 lines of output to 'test'

user@host> show system boot-messages
Copyright (c) 1992-1998 FreeBSD Inc.
Copyright (c) 1996-2000 Juniper Networks, Inc.
All rights reserved.
Copyright (c) 1982, 1986, 1989, 1991, 1993
    The Regents of the University of California. All rights reserved.

JUNOS 4.1-20000216-Zf8469 #0: 2000-02-16 12:57:28 UTC

tlim@device1.example.com:/p/build/20000216-0905/4.1/release_kernel/sys/compile/GENERIC
CPU: Pentium Pro (332.55-MHz 686-class CPU)
    Origin = "GenuineIntel" Id = 0x66a Stepping=10

Features=0x183f9ff<FPU,VME,DE,PSE,TSC,MSR,PAE,MCE,CX8,SEP,MTRR,PGE,MCA,CMOV,<b16>,<b17>,MMX,<b24>>
Teknor CPU Card Recognized
real memory = 805306368 (786432K bytes)
avail memory = 786280448 (767852K bytes)
Probing for devices on PCI bus 0:
chip0 <generic PCI bridge (vendor=8086 device=7192 subclass=0)> rev 3 class 60000
    on pci0:0:0
chip1 <Intel 82371AB PCI-ISA bridge> rev 1 class 60100 on pci0:7:0
chip2 <Intel 82371AB IDE interface> rev 1 class 10180 on pci0:7:1
chip3 <Intel 82371AB USB interface> rev 1 class c0300 int d irq 11 on pci0:7:2
smb0 <Intel 82371AB SMB controller> rev 1 class 68000 on pci0:7:3
pcic0 <TI PCI-1131 PCI-CardBus Bridge> rev 1 class 60700 int a irq 15 on pci0:13:0
TI1131 PCI Config Reg: [pci only][FUNC0 pci int]
pcic1 <TI PCI-1131 PCI-CardBus Bridge> rev 1 class 60700 int b irq 12 on pci0:13:1
TI1131 PCI Config Reg: [pci only][FUNC1 pci int]
fxp0 <Intel EtherExpress Pro 10/100B Ethernet> rev 8 class 20000 int a irq 12 on
    pci0:16:0
chip4 <generic PCI bridge (vendor=1011 device=0022 subclass=4)> rev 4 class 60400
    on pci0:17:0
fxp1 <Intel EtherExpress Pro 10/100B Ethernet> rev 8 class 20000 int a irq 10 on
    pci0:19:0
Probing for devices on PCI bus 1:mcs0 <Miscellaneous Control Subsystem> rev 12
class ff0000 int a irq 12 on pci1:13:0
fxp2 <Intel EtherExpress Pro 10/100B Ethernet> rev 8 class 20000 int a irq 10 on
    pci1:14:0
Probing for devices on the ISA bus:
sc0 at 0x60-0x6f irq 1 on motherboard
sc0: EGA color <16 virtual consoles, flags=0x0>
ed0 not found at 0x300
ed1 not found at 0x280
ed2 not found at 0x340
psm0 not found at 0x60
sio0 at 0x3f8-0x3ff irq 4 flags 0x20010 on isa
sio0: type 16550A, console
sio1 at 0x3e8-0x3ef irq 5 flags 0x20000 on isa
sio1: type 16550A
sio2 at 0x2f8-0x2ff irq 3 flags 0x20000 on isa
sio2: type 16550A
pcic0 at 0x3e0-0x3e1 on isa
PC-Card ctrlr(0) TI PCI-1131 [CardBus bridge mode] (5 mem & 2 I/O windows)
pcic0: slot 0 controller I/O address 0x3e0
npx0 flags 0x1 on motherboard
npx0: INT 16 interface
fdc0: direction bit not set

```

```

fdc0: cmd 3 failed at out byte 1 of 3
fdc0 not found at 0x3f0
wdc0 at 0x1f0-0x1f7 irq 14 on isa
wdc0: unit 0 (wd0): <SunDisk SDCFB-80>, single-sector-i/o
wd0: 76MB (156672 sectors), 612 cyls, 8 heads, 32 S/T, 512 B/S
wdc0: unit 1 (wd1): <IBM-DCXA-210000>
wd1: 8063MB (16514064 sectors), 16383 cyls, 16 heads, 63 S/T, 512 B/S
wdc1 not found at 0x170
wdc2 not found at 0x180
ep0 not found at 0x300
fxp0: Ethernet address 00:a0:a5:12:05:5a
fxp1: Ethernet address 00:a0:a5:12:05:59
fxp2: Ethernet address 02:00:00:00:00:01
swapon: adding /dev/wd1s1b as swap device
Automatic reboot in progress...
/dev/rwd0s1a: clean, 16599 free (95 frags, 2063 blocks, 0.1% fragmentation)
/dev/rwd0s1e: clean, 9233 free (9 frags, 1153 blocks, 0.1% fragmentation)
/dev/rwd0s1a: clean, 16599 free (95 frags, 2063 blocks, 0.1% fragmentation)
/dev/rwd1s1f: clean, 4301055 free (335 frags, 537590 blocks, 0.0% fragmentation)

```

**Meaning** The sample output shows the initial messages generated by the system kernel upon boot. This is the content of the `/var/run/dmesg.boot` file.

## Log the BGP, IS-IS, and OSPF Adjacency Information

**Purpose** The following commands log useful information about Border Gateway Protocol (BGP), Intermediate System-to-Intermediate System (IS-IS), and Open Shortest Path First (OSPF) protocols. If you have other protocols installed, such as Multiprotocol Label Switching (MPLS), Resource Reservation Protocol (RSVP), or Protocol Independent Multicast (PIM), you also might log summary information for them.

**Action** To log the protocol peer information, use the following Junos OS CLI operational mode commands:

```

user@host> show bgp summary | save filename
user@host> show isis adjacency brief | save filename
user@host> show ospf neighbor brief | save filename

```

**Sample Output 1** user@host> show bgp summary | save test  
Wrote 45 lines of output to 'test'

```
user@host> show bgp summary
Groups: 1 Peers: 1 Down peers: 0
Table          Tot Paths  Act Paths Suppressed    History Damp State   Pending
inet.0          4          4          0          0          0          0
Peer           AS        InPkt    OutPkt    OutQ    Flaps  Last Up/Dwn
State|#Active/Received/Damped..
9.9.3.1         2        2627     2628      0        0    21:50:12 4/4/0
0/0/0
```

**Sample Output 2** user@host> show isis adjacency brief | save test  
Wrote 7 lines of output to 'test'

```
user@host> show isis adjacency brief
IS-IS adjacency database:
Interface System L State Hold (secs) SNPA
so-1/0/0.0 1921.6800.5067 2 Up 13
so-1/1/0.0 1921.6800.5067 2 Up 25
so-1/2/0.0 1921.6800.5067 2 Up 20
so-1/3/0.0 1921.6800.5067 2 Up 19
so-2/0/0.0 1921.6800.5066 2 Up 19
so-2/1/0.0 1921.6800.5066 2 Up 17
so-2/2/0.0 1921.6800.5066 2 Up 20
so-2/3/0.0 1921.6800.5066 2 Up 20
so-5/0/0.0 ranier 2 Up 17
```

**Sample Output 3** user@host> show ospf neighbor brief | save test  
Wrote 10 lines of output to 'test'

```
user@host> show ospf neighbor brief
Address      Intf      State      ID          Pri  Dead
10.168.254.225 fxp3.0    2Way       10.250.240.32 128 36
10.168.254.230 fxp3.0    Full       10.250.240.8 128 38
10.168.254.229 fxp3.0    Full       10.250.240.35 128 33
10.1.1.129      fxp2.0    Full       10.250.240.12 128 37
10.1.1.131      fxp2.0    Full       10.250.240.11 128 38
10.1.2.1        fxp1.0    Full       10.250.240.9 128 32
10.1.2.81       fxp0.0    Full       10.250.240.10 128 33
```

**Meaning** Sample output 1 displays summary information about BGP and its neighbors. Sample output 2 displays information about IS-IS neighbors. Sample output 3 displays information about all OSPF neighbors.

## Back Up the Currently Running and Active File System

**Action** To back up the currently running and active file system so that you can recover to a known, stable environment in case there is a problem during the reinstall, use the following Junos OS CLI operational mode command:

```
user@host> request system snapshot
```



**Sample Output**

```
user@host> request system snapshot
umount: /altroot: not currently mounted
Copying / to /altroot.. (this may take a few minutes)
umount: /altconfig: not currently mounted
Copying /config to /altconfig.. (this may take a few minutes)
The following filesystems were archived: / /config
```

**Meaning** The root file system is backed up to **/altroot**, and **/config** is backed up to **/altconfig**. The root and **/config** file systems are on the router's internal flash drive, and the **/altroot** and **/altconfig** file systems are on the router's hard drive.



**NOTE:** After you issue the **request system snapshot** command, you cannot return to the previous version of the software because the running and backup copies of the software are identical.

## Reinstall Junos OS

**Action** To reinstall Junos OS, follow these steps:

1. Insert the removable medium (boot floppy) into the router.
  2. Reboot the router, either by power-cycling it or by issuing the **request system reboot** command from the CLI.
  3. At the following prompt, type **y**:  
  

```
WARNING: The installation will erase the contents of your disk. Do you wish
to continue (y/n)?
```

The router copies the software from the removable medium onto your system, occasionally displaying status messages. This can take up to 10 minutes.
  4. Remove the removable medium when prompted.
- The router reboots from the primary boot device on which the software is installed. When the reboot is complete, the router displays the login prompt.

## Reconfigure Junos OS

**Purpose** After you have reinstalled the software, you must copy the router's configuration files back to the router. (You also can configure the router from scratch, as described in *Junos System Basics Configuration Guide*.) However, before you can copy the configuration files, you must establish network connectivity.

To reconfigure the software, follow these steps:

1. [Configure Host Names, Domain Names, and IP Addresses on page 1268](#)
2. [Protecting Network Security by Configuring the Root Password on page 1269](#)
3. [Check Network Connectivity on page 1270](#)
4. [Copy Backup Configurations to the Router on page 1271](#)

## Configure Host Names, Domain Names, and IP Addresses

**Action** To configure the machine name, domain name, and various addresses, follow these steps:

1. Log in as **root**. There is no password.
2. Start the CLI:

```
root# cli
root@>
```

3. Enter configuration mode:

```
cli> configure
[edit]
root@#
```

4. Configure the name of the machine. If the name includes spaces, enclose the entire name in quotation marks (" "):

```
[edit]
root@# set system host-name host-name
```

5. Configure the machine's domain name:

```
[edit]
root@# set system domain-name domain-name
```

6. Configure the IP address and prefix length for the router's management Ethernet interface:

```
[edit]
root@# set interfaces fxp0 unit 0 family inet address address / prefix-length
```

7. Configure the IP address of a default router. This system is called the backup router because it is used only while the routing protocol process is not running.

```
[edit]
root@# set system backup-router address
```

8. Configure the IP address of a Domain Name Server (DNS) server:

```
[edit]
root@# set system name-server address
```

## Protecting Network Security by Configuring the Root Password

Configuring the root password on your Junos OS-enabled router helps prevent unauthorized users from making changes to your network. The root user (also referred to as superuser) has unrestricted access and full permissions within the system, so it is crucial to protect these functions by setting a strong password when setting up a new router.

After a new router is initially powered on, you log in as the user **root** with no password. Junos OS requires configuration of the root password before it accepts a commit operation. On a new device, the root password must always be a part of the configuration submitted with your initial commit.

To set the root password, you have a few options as shown in Step 1 of the following procedure.

- Enter a plain-text password that Junos OS encrypts.
- Enter a password that is already encrypted.
- Enter a secure shell (ssh) public key string.

The most secure options of these three are using an already encrypted password or an ssh public key string. Pre-encrypting your password or using a ssh public key string means the plain-text version of your password will never be transferred over the internet, protecting it from being intercepted by a man-in-the-middle attack.



**BEST PRACTICE:** Optionally, instead of configuring the root password at the [edit system] hierarchy level, you can use a configuration group to strengthen security, as shown in Step 2 of this procedure. This step uses a group called **global** as an example.

To set the root password:

1. Use one of these methods to configure the root password:

- To enter a plain-text password that the system encrypts for you:

```
[edit groups global system]
root@# set root-authentication plain-text-password
New Password: type password here
Retype new password: retry password here
```

If you use a plain-text password, Junos OS displays the password as an encrypted string so that users viewing the configuration cannot see it. As you enter the password in plain text, Junos OS encrypts it immediately. You do not have to configure Junos OS to encrypt the password as in some other systems. Plain-text passwords are hidden and marked as **## SECRET-DATA** in the configuration.

- To enter a password that is already encrypted:



**CAUTION:** Do not use the **encrypted-password** option unless the password is *already* encrypted, and you are entering the encrypted version of the password.

If you accidentally configure the **encrypted-password** option with a plain-text password or with blank quotation marks (" "), you will not be able to log in to the device as root, and you will need to complete the root password recovery process.

```
[edit groups global system]
root@# set root-authentication encrypted-password password
```

- To enter an ssh public key string:

```
[edit groups global system]
root@# set root-authentication (ssh-dsa | ssh-eccdsa | ssh-rsa key)
```

2. (Optional) Strengthen security by only allowing root access from the console port.

```
[edit groups global system]
root@# set services ssh root-login deny
```

3. If you used a configuration group in Step 2, apply the configuration group, substituting **global** with the appropriate group name.

```
[edit]
user@host# set apply-groups global
```

4. Commit the changes.

```
root@# commit
```

## Check Network Connectivity

**Purpose** Establish that the router has network connectivity.

**Action** To check that the router has network connectivity, issue a **ping** command to a system on the network:

```
root@> ping address
```

If there is no response, verify that there is a route to the ***address*** using the **show route** command. If the address is outside your **fxp0** subnet, add a static route. Once the backup configuration is loaded and committed, the static route is no longer needed and should be deleted.

## Copy Backup Configurations to the Router

**Action** To copy backup configurations to the router, follow these steps:

1. To copy the existing configuration and any backup configurations back onto the router, use the **file copy** command. Place the files in the **/var/tmp** directory.

```
user@host> file copy var/tmp/filename
```

2. Load and activate the desired configuration:

```
root@> configure
[edit]
root@# load merge/config/filename or load replace/config/filename
[edit]
root@# commit
```

## Configure Host Names, Domain Names, and IP Addresses

**Action** To configure the machine name, domain name, and various addresses, follow these steps:

1. Log in as **root**. There is no password.
2. Start the CLI:

```
root# cli
root@>
```

3. Enter configuration mode:

```
cli> configure
[edit]
root@#
```

4. Configure the name of the machine. If the name includes spaces, enclose the entire name in quotation marks (" "):

```
[edit]
root@# set system host-name host-name
```

5. Configure the machine's domain name:

```
[edit]
root@# set system domain-name domain-name
```

6. Configure the IP address and prefix length for the router's management Ethernet interface:

```
[edit]
root@# set interfaces fxp0 unit 0 family inet address address / prefix-length
```

7. Configure the IP address of a default router. This system is called the backup router because it is used only while the routing protocol process is not running.

[edit]

```
root@# set system backup-router address
```

8. Configure the IP address of a Domain Name Server (DNS) server:

[edit]

```
root@# set system name-server address
```

---

## Check Network Connectivity

**Purpose** Establish that the router has network connectivity.

**Action** To check that the router has network connectivity, issue a **ping** command to a system on the network:

```
root@> ping address
```

If there is no response, verify that there is a route to the ***address*** using the **show route** command. If the address is outside your **fxp0** subnet, add a static route. Once the backup configuration is loaded and committed, the static route is no longer needed and should be deleted.

---

## Automatic Autobandwidth Adjustment Failed Event

**LSP Event** Autobw adjustment failed

**Sample Output 1**

```

user@R1> show configuration protocols mpls
statistics {
    file auto-bw.log;
    interval 5;
    auto-bandwidth;
}
label-switched-path R1-to-R6 {
    to 10.0.0.6;
    auto-bandwidth {
        adjust-interval 300;
        adjust-threshold 10;
        minimum-bandwidth 5m;
        maximum-bandwidth 80m;
    }
}
label-switched-path R1-to-R3 {
    to 10.0.0.3;
    auto-bandwidth {
        adjust-interval 300;
        adjust-threshold 10;
        minimum-bandwidth 155m;
        maximum-bandwidth 155m;
    }
}

```

**Sample Output 2**

```

user@R1> show mpls lsp extensive
Ingress LSP: 3 sessions

10.0.0.3
  From: 10.0.0.1, State: Up, ActiveRoute: 5, LSPname: R1-to-R3
  ActivePath: (primary)
  LoadBalance: Random
  Metric: 1
  Autobandwidth
  MinBW: 155Mbps MaxBW: 155Mbps
  AdjustTimer: 300 secs AdjustThreshold: 10%
  Max AvgBW util: 192bps, Bandwidth Adjustment in 219 second(s).
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary State: Up
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 10)
10.1.13.2 S
  Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):

    10.1.13.2
      7 Feb 17 15:41:12 Autobw adjustment failed
      6 Feb 17 15:41:12 CSPF failed: no route toward 10.0.0.3
      5 Feb 17 15:36:23 Selected as active path
      4 Feb 17 15:36:23 Record Route: 10.1.13.2
      3 Feb 17 15:36:23 Up
      2 Feb 17 15:36:23 Originate Call
      1 Feb 17 15:36:23 CSPF: computation result accepted
  Created: Thu Feb 17 15:36:23 2005
[...Output truncated...]

```

**Meaning** This LSP event indicates that a periodic (timer-based) autobandwidth adjustment for the LSP is triggered at the end of the adjust interval. The adjustment fails, and the LSP stays up on the existing path with its current bandwidth.

**Cause** Adjustment failure may be due to a path CSPF computation failure with the adjust bandwidth or a signaling failure on the new path.

At the end of the time interval specified at the **[edit protocols mpls label-switched-path auto-bandwidth]** hierarchy level, the current maximum average bandwidth usage is compared to the allocated bandwidth for the LSP. If the LSP needs more bandwidth, an attempt is made to set up a new path where bandwidth is equal to the current maximum average usage. If the attempt is successful, the LSP's traffic is routed through the new path and the old path is removed. If the attempt fails, the LSP continues to use its current path.

**Action** Take action appropriate to the situation:

- Verify the MPLS and RSVP configuration on all available paths to the LSP endpoint.
- Check available bandwidth on alternate paths using the **show rsvp interface** command. If not enough bandwidth is available on any available paths, adjust the minimum-bandwidth parameter for the LSP in order to establish or adjust the priority to allow the LSP to preempt another LSP of lesser priority. For an LSP to be preempted, its hold priority must be lower than the LSP you are trying to establish.

---

## Displaying DiffServ-Aware Traffic-Engineered LSP Events

---

**Purpose** A DiffServ-aware traffic-engineered LSP is configured with a bandwidth reservation for a specific class type, and carries traffic for a single class type. On the packets, the class type is specified by the experimental (EXP) bits (also known as the class-of-service bits) and the per-hop behavior (PHB) associated with the EXP bits. The mapping between the EXP bits and the PHB is static, instead of being signaled in Resource Reservation Protocol (RSVP).

The class type must be configured consistently across the DiffServ domain, and must be consistent from router to router in the network. You can unambiguously map a class type to a queue. On each node router, the class-of-service queue configuration for an interface translates to the available bandwidth for a particular class type on that link. For more information about forwarding classes and class of service, see the Junos Class of Service Configuration Guide. For more information about differentiated services, see RFC 3270, *MPLS Applications Feature Guide Support of Differentiated Services*.

When the configuration of a DiffServ-aware traffic-engineered LSP is incorrect, an even or error message might occur in the output of the **show mpls lsp extensive** command.

**Action** To display LSP events that can occur with a DiffServ-aware LSP, enter the following Junos OS command-line interface (CLI) operational mode command from the ingress router:

```
user@host> show mpls lsp extensive
```

## Sample Output

Not available.



## Unsupported Traffic Class Event

---

**LSP Event** Unsupported traffic class

**Sample Output** Not available.

**Meaning** This LSP error event is a Juniper Networks proprietary error indicating that a Diffserv traffic engineering LSP was signaled with one or more traffic classes with values greater than the four traffic classes currently supported by the Junos OS.

**Cause** Not available.

**Action** Not available.

## Traffic Class Value Out of Allowed Range Event

---

**LSP Event** Traffic class value out of allowed range

**Sample Output** Not available.

**Meaning** This LSP error event is a Juniper Networks proprietary error indicating that a single class, IETF-style DiffServ traffic engineering LSP was signaled with a traffic class value of zero, which is invalid.

**Cause** Not available.

**Action** Not available.

## The Combination of Setup Priority and Traffic Class Is Not One of the Configured TE Classes Event

---

**LSP Event** The combination of setup-priority and traffic class is not one of the configured TE-classes

**Sample Output** Not available.

**Meaning** This LSP error event is a Juniper Networks proprietary error that indicates the setup priority signaled in the Path message for the LSP does not match the supported Diffserv traffic engineering classes configured on a label-switching router (LSR) along the LSP path.

**Cause** This LSP error event is caused by incorrect configuration of the LSP setup priority on the ingress LSR, or the incorrect configuration of a DiffServ traffic engineering class on an LSR along the LSP path.

**Action** Correct the configuration depending on the supported traffic engineering classes.

## RSVP Error, Subcode 7, Signal Type Does Not Match Link Encoding Event

---

**LSP Event** RSVP error, subcode 7, signal-type does not match link encoding

**Sample Output** Not available

**Meaning** This LSP error event is a Juniper Networks proprietary error reported for GMPLS LSPs when the configured signal bandwidth does not match the encoding type of the traffic engineering link selected on the first hop.

**Cause** An incorrect Sender Tspec is used with a particular LSP switching or encoding type.

**Action** Not available.

## Unacceptable Label Value Event

---

**LSP Event** Unacceptable label value event

**Sample Output** Not available.

**Meaning** This LSP error event indicates that the label value signaled in either the Path or Resv message was unacceptable to a label-switched router (LSR) along the LSP path.

**Cause** For GMPLS LSPs, this LSP error event is generated by incorrect label mapping configured on one of the LSRs, or by deletion of a resource that was being used by an LSP.

**Action** Not available.

## Unsupported Switching Type Event

---

**LSP Event** Unsupported switching type

**Sample Output** Not available.

**Meaning** This LSP error event indicates that the switching type requested in the generalized label request for a GMPLS LSP is unsupported on the corresponding selected traffic engineering link.

**Cause** Not available.

**Action** Not available.

## Gather Component Alarm Information

**Purpose** When you obtain information about component alarms and error messages, you determine when a problem with a component first appeared and the details of the situation.

To gather component alarm information, follow these steps:

1. [Display the Current Router Alarms on page 1277](#)
2. [Display Error Messages in the Messages Log File on page 1277](#)
3. [Display Error Messages in the Chassis Process Log File on page 1278](#)

## Display the Current Router Alarms

**Purpose** To determine the details of the alarms and when they first appeared in the component.

**Action** To display the current router component alarms, use the following CLI command:

```
user@host> show chassis alarms
```

The command output displays the number of alarms currently active, the time when the alarm began, the severity level, and an alarm description. Note the date and time of an alarm so that you can correlate it with error messages in the **messages** system log file.

For examples of sample output, see the *Junos System Basics and Services Command Reference*.

## Display Error Messages in the Messages Log File

**Purpose** To determine the details of the error messages in the Messages Log File.

**Action** To display router component error messages in the **messages** system log file, use the following CLI command:

```
user@host> show log messages
```

The **messages** system log file records the time the failure or event occurred, the severity level, a code, and a message description. Error messages in the **messages** system log file are logged at least 5 minutes before and after the alarm event.

To search for specific information in the log file, use the **| match component-name** command; for example, use **show log messages | match fpc**. If there is a space in the component name, enclose the component name in quotation marks; for example, **| match "power supply"**.

To search for multiple items in the log file, use the **| match** command followed by the multiple items, separated by the **|** (pipe), and enclosed in quotation marks; for example, **| match "fpc | sfm | kernel | tnp"**.

To monitor the **messages** file in real time, use the **monitor start messages** CLI command. This command displays the new entries in the file until you stop monitoring by using the **monitor stop messages** CLI command.

For more information about system log messages, see the *Junos System Log Messages Reference*.

## Display Error Messages in the Chassis Process Log File

**Purpose** To determine the details of the error messages in the Chassis Process Log File.

**Action** To display router component errors in the chassis process (**chassisd**) system log file, use the following CLI command:

```
user@host> show log chassisd
```

The chassis process (**chassisd**) log file tracks the state of each chassis component. For examples of sample output, see the *Junos System Basics and Services Command Reference*.

To search for specific information in the log file, use the **| match component-name** command; for example, **show log messages | match fpc**. If there is a space in the component name, enclose the component name in quotation marks; for example, **| match "power supply"**.

To search for multiple items in the log file, use the **| match** command followed by the multiple items, separated by the **|** (pipe), and enclosed in quotation marks; for example, **| match "fpc | sfm | kernel | tnp"**.

To monitor the **chassisd** file in real time, use the **monitor start chassisd** CLI command. This command displays the new entries in the file until you stop monitoring by using the **monitor stop chassisd** CLI command.

---

## Case Study for a CSPF Failure

**Purpose** This case study presents a Multiprotocol Label Switching (MPLS) network topology and CSPF failure scenario designed to demonstrate techniques and commands that are particularly useful when addressing CSPF problems in your network. The focus of the study is the incorrect association of user-provided constraints, specifically administrative groups (also known as link coloring).


When calculating a path, the CSPF algorithm factors in user-provided constraints. The ingress router determines the physical path for each LSP by applying a CSPF algorithm to the information in the traffic engineering database. CSPF is a shortest-path-first (SPF) algorithm that has been modified to take into account constraints when calculating the shortest path across the network. Links that do not comply with the restrictions are removed from the tree and cannot be factored into the resulting SPF calculations.

CSPF integrates topology link-state information that is learned from interior gateway protocol (IGP) traffic engineering extensions and is maintained in the traffic engineering database. The information stored in the traffic engineering database includes attributes associated with the state of network resources.

The network topology shown in [Figure 121 on page 1279](#) illustrates a network in which the LSP is constrained by administrative group coloring (also known as link coloring), and

CSPF tracing is configured on the ingress router **R1**. In this example, the LSP is forced to transit **R5** in accordance with the restrictions imposed.

**Figure 121: CSPF Topology with Administrative Group Coloring**

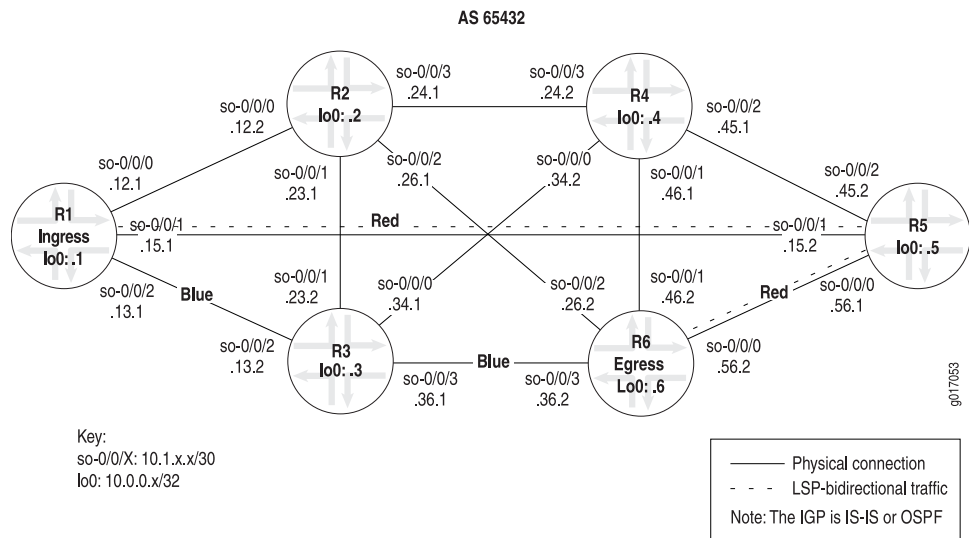

The network shown in [Figure 121 on page 1279](#) is an MPLS router-only network with SONET interfaces.

The MPLS network shown in [Figure 121 on page 1279](#) is configured with administrative group coloring as follows:

- The LSP **R1-to-R6** is established with **R1** as the ingress router and **R6** as the egress router.
- The required path to **R6** transits **R5** on the redlinks. The inclusion of red coloring is not strictly necessary. To force the LSP to transit **R5**, you could color the links on **R3** and **R2** blue and then exclude the blue links.
- Both red and blue colors are used with the **include** and **exclude** statements to ensure that the LSP always transits **R5**. For information on configuring administrative group coloring, see the *MPLS Applications Feature Guide*.

To check that the network is configured correctly and the LSP is established, follow these steps:

1. [Verify That the LSP Is Established on page 1279](#)
2. [Check the Administrative Group Configuration on page 1281](#)

## Verify That the LSP Is Established

**Purpose** Check that the LSP shown in [Figure 121 on page 1279](#) is established and traversing the path from **R1** to **R6** through the red links.

**Action** To verify that the LSP is established, enter the following Junos OS command-line interface (CLI) operational mode command:

```
user@host> show mpls lsp extensive
user@host> show mpls lsp
```

## Sample Output

```
user@R1> show mpls lsp extensive | no-more
Ingress LSP: 1 sessions

10.0.0.6
  From: 10.0.0.1, State: Up, ActiveRoute: 1, LSPname: R1-to-R6
  ActivePath: (primary)
  LoadBalance: Random
  Metric: 100
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary                               State: Up
    Include: red  Exclude: blue
  Computed ERO
($ [L] denotes strict [loose] hops): (CSPF metric: 20)
10.1.15.2 S 10.1.56.2 S
  Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):

    10.1.15.2 10.1.56.2
  6 May 11 19:31:42 Selected as active path
  5 May 11 19:31:42 Record Route: 10.1.15.2 10.1.56.2
  4 May 11 19:31:42 Up
  3 May 11 19:31:42 Originate Call
  2 May 11 19:31:42 CSPF: computation result accepted
  1 May 11 19:31:12 CSPF failed: no route toward 10.0.0.6[5 times]
  Created: Wed May 11 19:29:17 2005
Total 1 displayed, Up 1, Down 0
[...Output truncated...]
```

## Sample Output 2

```
[edit protocols mpls]
user@R5# run show mpls lsp
Ingress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 2 sessions
To          From          State   Rt Style Labelin Labelout LSPname
10.0.0.1    10.0.0.6             Up      1  1 FF 100352      3 R6-to-R1
10.0.0.6    10.0.0.1 Up 1 1 FF 100384    3 R1-to-R6
Total 2 displayed, Up 2, Down 0
```

**Meaning** Sample Output 1 from ingress router **R1** shows that LSP **R1-to-R6** is successfully established as indicated by the Explicit Route Object (ERO) **10.1.15.2 S 10.1.56.2 S**, the log message **CSPF: computation result accepted**, and **State: Up**. Also, the LSP is routing packets correctly over the red links, avoiding the blue links or the links without any coloring.

Sample Output 2 from transit router **R5** shows that LSP **R1-to-R6** is transiting **R5** as expected.

## Check the Administrative Group Configuration

- Purpose** Check that the administrative group coloring is correct and the relevant interfaces are associated with each administrative group correctly
- Action** To check the administrative group configuration, enter the following Junos OS CLI operational mode commands, or issue the **show** command at the **[edit protocols mpls]** hierarchy level, as shown in the example below:
- ```
user@host> show configuration protocols mpls
user@host> show mpls interface
user@host> show ted database extensive nodeID
```

## Sample Output 1

```
[edit protocols mpls]
user@R1# show
traceoptions {
  file cspf;
  flag cspf;
  flag cspf-node;
  flag cspf-link;
}
admin-groups {
  blue 4;
  red 8;
}
label-switched-path R1-to-R6 {
  to 10.0.0.6;
  metric 100;
  admin-group {
    include red;
    exclude blue;
  }
}
interface so-0/0/0.0;
interface so-0/0/1.0 {
  admin-group red;
}
interface so-0/0/2.0 {
  admin-group blue;
}
interface fxp0.0 {
  disable;
}

[edit protocols mpls]
user@R3# show
admin-groups {
  blue 4;
}
interface fxp0.0 {
  disable;
}
interface so-0/0/0.0;
interface so-0/0/1.0;
interface so-0/0/2.0 {
interface so-0/0/3.0 {
```

```

    admin-group blue;
}

[edit protocols mpls]
user@R5# show
admin-groups {
    red 8;
}
interface fxp0.0 {
    disable;
}
interface so-0/0/0.0 {
    admin-group red;
}
interface so-0/0/1.0;
interface so-0/0/2.0;

[edit protocols mpls]
user@R6# show
admin-groups {
    blue 4;
    red 8;
}
label-switched-path R6-to-R1 {
    to 10.0.0.1;
}
interface so-0/0/0.0 {
    admin-group red;
}
interface so-0/0/1.0;
interface so-0/0/2.0;
interface so-0/0/3.0 {
    admin-group blue;
}

```

## Sample Output 2

```

useruser@R1> show mpls interface
show mpls interface
Interface      State      Administrative groups
so-0/0/0.0     Up         <none>
so-0/0/1.0    Up    red
so-0/0/2.0    Up    blue

user@R1> show mpls interface
Interface      State      Administrative groups
so-0/0/0.0     Up         <none>
so-0/0/1.0    Up    red
so-0/0/2.0    Up    blue

user@R3> show mpls interface
Interface      State      Administrative groups
so-0/0/0.0     Up         <none>
so-0/0/1.0     Up         <none>
so-0/0/2.0     Up         <none>
so-0/0/3.0    Up    blue

user@R5> show mpls interface
Interface      State      Administrative groups
so-0/0/0.0    Up    red

```



```

so-0/0/1.0      Up      <none>
so-0/0/2.0      Up      <none>

user@R6> show mpls interface
Interface      State      Administrative groups
so-0/0/0.0     Up      red
so-0/0/1.0     Up      <none>
so-0/0/2.0     Up      <none>
so-0/0/3.0     Up      blue

```

### Sample Output 3

```

user@R1> show ted database extensive R1
TED database: 6 ISIS nodes 6 INET nodes
NodeID: R1.00(10.0.0.1)
  Type: Rtr, Age: 665 secs, LinkIn: 3, LinkOut: 3
  Protocol: IS-IS(2)
    To: R2.00(10.0.0.2), Local: 10.1.12.1, Remote: 10.1.12.2
      Color: 0 <none>
      Metric: 10
      Static BW: 155.52Mbps
      Reservable BW: 155.52Mbps
      Available BW [priority] bps:
        [0] 155.52Mbps [1] 155.52Mbps [2] 155.52Mbps [3] 155.52Mbps
        [4] 155.52Mbps [5] 155.52Mbps [6] 155.52Mbps [7] 155.52Mbps
      Interface Switching Capability Descriptor(1):
        Switching type: Packet
        Encoding type: Packet
        Maximum LSP BW [priority] bps:
          [0] 155.52Mbps [1] 155.52Mbps [2] 155.52Mbps [3] 155.52Mbps
          [4] 155.52Mbps [5] 155.52Mbps [6] 155.52Mbps [7] 155.52Mbps
    To: R5.00(10.0.0.5), Local: 10.1.15.1, Remote: 10.1.15.2
      Color: 0x100 red
      Metric: 10
      Static BW: 155.52Mbps
      Reservable BW: 155.52Mbps
      Available BW [priority] bps:
        [0] 155.52Mbps [1] 155.52Mbps [2] 155.52Mbps [3] 155.52Mbps
        [4] 155.52Mbps [5] 155.52Mbps [6] 155.52Mbps [7] 155.52Mbps
      Interface Switching Capability Descriptor(1):
        Switching type: Packet
        Encoding type: Packet
        Maximum LSP BW [priority] bps:
          [0] 155.52Mbps [1] 155.52Mbps [2] 155.52Mbps [3] 155.52Mbps
          [4] 155.52Mbps [5] 155.52Mbps [6] 155.52Mbps [7] 155.52Mbps
    To: R3.00(10.0.0.3), Local: 10.1.13.1, Remote: 10.1.13.2
      Color: 0x10 blue
      Metric: 10
      Static BW: 155.52Mbps
      Reservable BW: 155.52Mbps
      Available BW [priority] bps:
        [0] 155.52Mbps [1] 155.52Mbps [2] 155.52Mbps [3] 155.52Mbps
        [4] 155.52Mbps [5] 155.52Mbps [6] 155.52Mbps [7] 155.52Mbps
      Interface Switching Capability Descriptor(1):
        Switching type: Packet
        Encoding type: Packet
        Maximum LSP BW [priority] bps:
          [0] 155.52Mbps [1] 155.52Mbps [2] 155.52Mbps [3] 155.52Mbps
          [4] 155.52Mbps [5] 155.52Mbps [6] 155.52Mbps [7] 155.52Mbps

```

**Meaning** Sample Output 1 shows that administrative group coloring is correctly configured on all relevant routers. Administrative groups red and blue are configured at the `[edit protocols mpls]` hierarchy level, and relevant interfaces are associated with each administrative group correctly.

**R3** is configured with blue coloring and the `include` and `exclude` statements are included in the configuration of **R1** to ensure that LSP **R1-to-R6** always transits **R5**. The inclusion of red coloring is not strictly necessary. To force the LSP to transit **R5**, you could color the links on **R2** and **R3** blue and then exclude the blue links. Red coloring is included in this example to demonstrate the fact that the CSPF algorithm excludes links that do not have a color configured, when the `include` statement is configured at the `[edit protocols mpls]` hierarchy level.

In addition, ingress router **R1** has CSPF tracing configured in preparation for gathering information when the CSPF algorithm fails later in this example.

Sample Output 2 shows that the correct interfaces are associated with the red and blue administration groups on **R1**, **R3**, **R5**, and **R6**.

Sample Output 3 confirms that link coloring is correctly reported in the traffic engineering database for **R1**. Not shown is the traffic engineering database output for the remaining routers, which is similar to the **R1** output, and correct.

---

## Examining a CSPF Failure

When a local CSPF failure indicates that no path meets the constraints configured for the LSP, you must perform CSPF-based tracing and be familiar with the contents of the traffic engineering database to resolve the problem. See [“Examine the Traffic Engineering Database” on page 1287](#) for an analysis of the traffic engineering database.



**NOTE:** If an LSP does not establish immediately, wait at least a minute or so before taking diagnostic or corrective action. This is because the RSVP retry timer is set to a 30-second default, resulting in a slight delay before the correct state of the LSP is available.

---

To examine a CSPF failure, follow these steps:

1. [Verify the CSPF Failure on page 1284](#)
2. [Examine the CSPF Log File on page 1286](#)
3. [Examine the Traffic Engineering Database on page 1287](#)
4. [Check the Administrative Group Configuration on R5 on page 1290](#)

## Verify the CSPF Failure

**Purpose** To simulate a configuration error on the network, router **R5** has the administrative group coloring removed from interface `so-0/0/0`. The result is a CSPF failure at **R5** because there is no longer a path between **R1** and **R6** that includes the red color.

**Action** To confirm that the LSP is down and verify the configuration on routers **R1** and **R5**, enter the following Junos OS CLI operational mode commands:

```
user@host> clear mpls lsp
user@host> show mpls lsp extensive
```

### Sample Output 1

```
user@R1> clear mpls lsp
[edit protocols mpls]
user@R1# run show mpls lsp extensive
Ingress LSP: 1 sessions

10.0.0.6
  From: 0.0.0.0, State: Dn
, ActiveRoute: 0, LSPname: R1-to-R6
  ActivePath: (none)
  LoadBalance: Random
  Metric: 100
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  Primary State: Dn
    Include: red Exclude: blue
  Will be enqueued for recomputation in 24 second(s).
  9 May 11 20:12:28 CSPF failed: no route toward 10.0.0.6
  8 May 11 20:12:28 Clear Call
  7 May 11 20:12:28 Deselected as active
  6 May 11 19:31:42 Selected as active path
  5 May 11 19:31:42 Record Route: 10.1.15.2 10.1.56.2
  4 May 11 19:31:42 Up
  3 May 11 19:31:42 Originate Call
  2 May 11 19:31:42 CSPF: computation result accepted
  1 May 11 19:31:12 CSPF failed: no route toward 10.0.0.6[5 times]
  Created: Wed May 11 19:29:17 2005
Total 1 displayed, Up 0, Down 1
[...Output truncated...]
```

### Sample Output 2

```
[edit protocols mpls]
user@R5# run show mpls lsp
Ingress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 1 sessions
To From State Rt Style Labelin Labelout LSPname
10.0.0.1 10.0.0.6 Up 1 1 FF 100352 3 R6-to-R1
Total 1 displayed, Up 1
, Down 0
```

**Meaning** Sample Output 1 from ingress router **R1** shows that the **clear mpls lsp** command was issued to confirm that **R1** cannot reestablish LSP **R1-to-R6**. The sample output from the **show mpls lsp extensive** command shows that LSP **R1-to-R6** is down, **State: Dn** and **ActivePath: (None)**; and that the CSPF has failed, **CSPF failed: no route toward 10.0.0.6**.

Sample Output 2 from transit router **R5** shows that LSP **R1-to-R6** is not included in the output, indicating that the LSP is not transiting **R5**.

Most network problems appear as a local CSPF failure, as shown in the sample output. The CSPF failure indicates that no path meeting the constraints for the LSP can be found in the router's traffic engineering database. To resolve these problems effectively, use CSPF tracing on the ingress router, and analyze the traffic engineering database to locate the node that should meet the constraints.

## Examine the CSPF Log File

**Purpose** After you have confirmed that the LSP is down, obtain more information about the possible cause of the failure.



**NOTE:** To obtain useful information from the CSPF log file, make sure that CSPF tracing is configured on the ingress router.

**Action** To examine the CSPF log file, enter the following Junos OS CLI operational mode commands:

```
user@host> monitor start filename
user@host> show log filename
```



**NOTE:** To stop monitoring CSPF, issue the `monitor stop` command.

## Sample Output

```
user@R1> monitor start cspf

[edit protocols mpls]
user@R1# run show log cspf-failed3
May 27 10:22:23 trace_on: Tracing to "/var/log/cspf"
    started
May 27 10:22:29 CSPF adding path R1-to-R6(primary ) to CSPF queue 1
May 27 10:22:29 CSPF creating CSPF job
May 27 10:22:29
May 27 10:22:29 CSPF for path R1-to-R6(primary ), begin at R1.00 , starting
May 27 10:22:29      path include: 0x00000100
    << administration group red
May 27 10:22:29      path exclude: 0x00000010
    << administration group blue
May 27 10:22:29      bandwidth: CT0=0bps ; setup priority: 0; random
May 27 10:22:29 CSPF final destination 10.0.0.6
May 27 10:22:29 CSPF starting from R1.00 (10.0.0.1) to 10.0.0.6, hoplimit 254
May 27 10:22:29      constraint include 0x00000100
May 27 10:22:29      constraint exclude 0x00000010
May 27 10:22:29 Node R1.00 (10.0.0.1) metric 0, hops 0, avail 32000 32000 32000
    32000
May 27 10:22:29 Link 10.1.12.1->10.1.12.2(R2.00/10.0.0.2) metric 10 color
0x00000000 bw 155.52Mbps
May 27 10:22:29 Reverse Link for 10.1.12.1->10.1.12.2 is
10.1.12.2->10.1.12.1
May 27 10:22:29 link fails include 0x00000100
```

```

May 27 10:22:29      Link 10.1.15.1->10.1.15.2(R5.00/10.0.0.5) metric 10 color
0x00000100 bw 155.52Mbps
May 27 10:22:29      Reverse Link for 10.1.15.1->10.1.15.2 is
10.1.15.2->10.1.15.1
May 27 10:22:29      link's interface switch capability descriptor #1
May 27 10:22:29      encoding: Packet, switching: Packet
May 27 10:22:29      link passes constraints
May 27 10:22:29      Link 10.1.13.1->10.1.13.2(R3.00/10.0.0.3) metric 10 color
0x00000010 bw 155.52Mbps
May 27 10:22:29      Reverse Link for 10.1.13.1->10.1.13.2 is
10.1.13.2->10.1.13.1
May 27 10:22:29      link fails include 0x00000100
May 27 10:22:29      Node R5.00 (10.0.0.5) metric 10, hops 1, avail 32000 32000
32000 32000
May 27 10:22:29      Link 10.1.15.2->10.1.15.1(R1.00/10.0.0.1) metric 10 color
0x00000100 bw 155.52Mbps
May 27 10:22:29      skipped: end point already visited
May 27 10:22:29      Link 10.1.45.2->10.1.45.1(R4.00/10.0.0.4) metric 10 color
0x00000000 bw 155.52Mbps
May 27 10:22:29      Reverse Link for 10.1.45.2->10.1.45.1 is
10.1.45.1->10.1.45.2
May 27 10:22:29      link fails include 0x00000100
May 27 10:22:29      Link 10.1.56.1->10.1.56.2(R6.00/10.0.0.6) metric 10 color
0x00000000 bw 155.52Mbps
May 27 10:22:29      Reverse Link for 10.1.56.1->10.1.56.2 is 10.1.56.2->10.1.56.1
May 27 10:22:29      link fails include 0x00000100
May 27 10:22:29      CSPF completed in 0s
May 27 10:22:29      CSPF couldn't find a route to 10.0.0.6
May 27 10:22:29      CSPF for R1-to-R6 done!
monitor stop

```

**Meaning** The sample output shows that the **monitor start cspf** command was issued to start displaying entries in the **cspf** log file in real time. The **cspf** log file is generated by the routing protocol process after the file is configured with the **traceoptions** statement at the **[edit protocols mpls]** hierarchy level. In this example, the **cspf** log file is configured with the **cspf**, **cspf-node**, and **cspf-link** flags to provide the most granular information about the steps taken by the CSPF algorithm.

The only link that passes the color constraint is between **R1** and **R5**, **10.1.15.0/32**. The CSPF algorithm is a locally run algorithm, which makes its calculations on a given router. When the CSPF algorithm runs on **R5**, it prunes **10.1.15.2** and selects **10.1.56.1** to send the message to **R6**. The link between **R5** and **R6** **10.1.56.0/32** does not pass the color constraints, indicating a problem with **R5**. At this stage, it is useful to examine the traffic engineering database to determine which link on **R5** should be associated with the red color.

## Examine the Traffic Engineering Database


**Purpose** Examining the traffic engineering database is another way to locate the node that should meet the constraints but does not. Once identified, you can concentrate your troubleshooting efforts on why that node is not being represented accurately in the database.

The contents of the traffic engineering database are consistent among all routers within a given traffic engineering domain. Therefore, you can issue the **show ted database**

command from any router in the same traffic engineering domain to obtain more granular information about the CSPF failure.

CSPF integrates topology link-state information that is learned from the IGP traffic engineering extensions and maintained in the traffic engineering database. The information stored in the traffic engineering database includes attributes associated with the state of the network resources (such as total link bandwidth, reserved link bandwidth, available link bandwidth, and link color). When calculating a path, the CSPF algorithm factors in user-provided information such as bandwidth requirements, maximum allowed hop count, and administrative groups, all of which are obtained from user configuration. (See [Figure 122 on page 1288](#)).

**Figure 122: User-Provided Constraints**

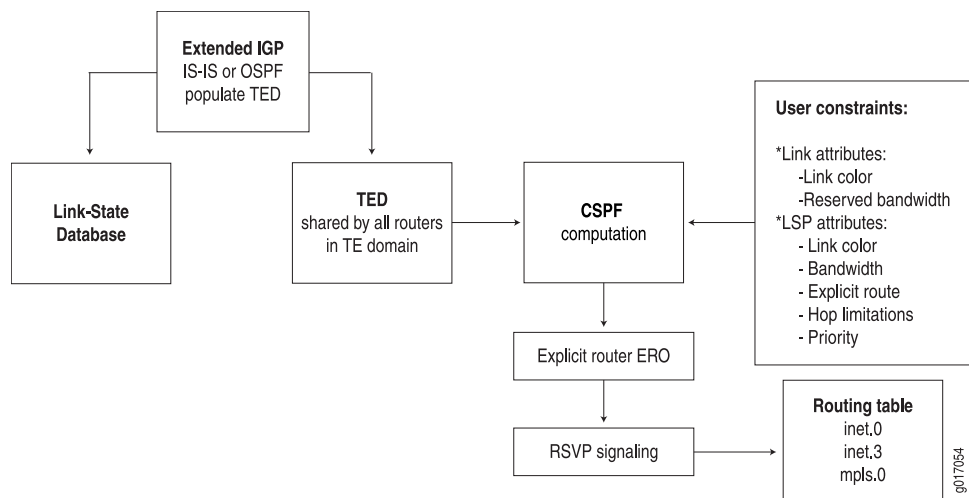

**Action** To examine the traffic engineering database, enter the following Junos OS CLI operational mode commands:

```

user@host> show ted database extensive
user@host> show ted database extensive NodeID | match "(NodeID|To:|Color)"

```

### Sample Output 1

```

[edit protocols mpls]
user@R1# run show ted database extensive
TED database: 6 ISIS nodes 6 INET nodes
[...Output truncated...]
NodeID: R5.00(10.0.0.5)
  Type: Rtr , Age: 103 secs, LinkIn: 3, LinkOut: 3
  Protocol: IS-IS(2)
  To: R1.00(10.0.0.1), Local: 10.1.15.2, Remote: 10.1.15.1
  Color: 0x100 red
  Metric: 10
  Static BW: 155.52Mbps
  Reservable BW: 155.52Mbps
  Available BW [priority] bps:
    [0] 155.52Mbps [1] 155.52Mbps [2] 155.52Mbps [3] 155.52Mbps
    [4] 155.52Mbps [5] 155.52Mbps [6] 155.52Mbps [7] 155.52Mbps
  Interface Switching Capability Descriptor(1):
    Switching type: Packet

```

```

Encoding type: Packet
Maximum LSP BW [priority] bps:
  [0] 155.52Mbps  [1] 155.52Mbps  [2] 155.52Mbps  [3] 155.52Mbps
  [4] 155.52Mbps  [5] 155.52Mbps  [6] 155.52Mbps  [7] 155.52Mbps
To: R4.00(10.0.0.4) , Local: 10.1.45.2, Remote: 10.1.45.1
Color: 0 <none>
Metric: 10
Static BW: 155.52Mbps
Reservable BW: 155.52Mbps
Available BW [priority] bps:
  [0] 155.52Mbps  [1] 155.52Mbps  [2] 155.52Mbps  [3] 155.52Mbps
  [4] 155.52Mbps  [5] 155.52Mbps  [6] 155.52Mbps  [7] 155.52Mbps
Interface Switching Capability Descriptor(1):
Switching type: Packet
Encoding type: Packet
Maximum LSP BW [priority] bps:
  [0] 155.52Mbps  [1] 155.52Mbps  [2] 155.52Mbps  [3] 155.52Mbps
  [4] 155.52Mbps  [5] 155.52Mbps  [6] 155.52Mbps  [7] 155.52Mbps
To: R6.00(10.0.0.6), Local: 10.1.56.1, Remote: 10.1.56.2
Color: 0 <none>
Metric: 10
Static BW: 155.52Mbps
Reservable BW: 155.52Mbps
Available BW [priority] bps:
  [0] 155.52Mbps  [1] 155.52Mbps  [2] 155.52Mbps  [3] 155.52Mbps
  [4] 155.52Mbps  [5] 155.52Mbps  [6] 155.52Mbps  [7] 155.52Mbps
Interface Switching Capability Descriptor(1):
Switching type: Packet
Encoding type: Packet
Maximum LSP BW [priority] bps:
  [0] 155.52Mbps  [1] 155.52Mbps  [2] 155.52Mbps  [3] 155.52Mbps
  [4] 155.52Mbps  [5] 155.52Mbps  [6] 155.52Mbps  [7] 155.52Mbps
[...Output truncated...]

```

## Sample Output 2

```

[edit protocols]
user@R1# run show ted database extensive R5.00 | match "(NodeID|To:|Color)"
NodeID: R5.00(10.0.0.5)
To: R1.00(10.0.0.1), Local: 10.1.15.2, Remote: 10.1.15.1
Color: 0x100 red
To: R4.00(10.0.0.4), Local: 10.1.45.2, Remote: 10.1.45.1
Color: 0 <none>
To: R6.00(10.0.0.6), Local: 10.1.56.1, Remote: 10.1.56.2
Color: 0 <none>
To: R1.00(10.0.0.1), Local: 10.1.15.2, Remote: 10.1.15.1
Color: 0x100 red
To: R4.00(10.0.0.4), Local: 10.1.45.2, Remote: 10.1.45.1
Color: 0 <none>
To: R6.00(10.0.0.6), Local: 10.1.56.1, Remote: 10.1.56.2
Color: 0 <none>

```

**Meaning** Sample Output 1 from ingress router **R1** shows a wealth of information on each node in the network, although only a portion is included in this example. The output shows the total number of IS-IS and INET nodes in the traffic engineering domain. The portion of the traffic engineering database shown represents a node (**R5**), and the **Type** field indicates **Rtr** (router). The **Type** field could also indicate Net (network) if the node were a pseudo node. The node (**R5**) has three input and output links that are running IS-IS Level 2, **Protocol: IS-IS(2)**. The links lead to nodes **R1**, **R4**, and **R6**. The local address and

remote address for each link is specified. The information on each node includes administrative groups (**Color:**), metrics, static bandwidth, reservable bandwidth, and available bandwidth priority level. The information contained in the traffic engineering database should be the same across all routers in the same traffic engineering domain. For a detailed description of the fields in the output of the **show ted database extensive** command, see the *Junos Routing Protocols and Policies Command Reference*.

Sample Output 2 shows filtered output that allows you to focus on exactly what is missing or incorrect.

Both outputs confirm that the link between R1 and R5, 10.1.15.0/32, is associated with the red color, while the link between R5 and R6, 10.1.56.0/32, is not associated with a color. In the network shown in [Figure 121 on page 1279](#), for the LSP to establish correctly, link 10.1.56.1 must be associated with the red color.

### Check the Administrative Group Configuration on R5

**Purpose** Focus on R5 to determine which interfaces are associated with the red color, and make any necessary corrections.

**Action** To check the administrative group configuration on R5 and make any necessary corrections, enter the following Junos OS CLI commands:

```
user@R5> edit
[edit protocols mpls]
user@R5# show
user@R5# delete interface so-0/0/1 admin-group
user@R5# set interface so-0/0/0 admin-group red
user@R5# show
user@R5# commit
```

### Sample Output 1

```
user@R5> edit
Entering configuration mode

[edit protocols mpls]
user@R5# show
admin-groups {
    red 8;
}
interface fxp0.0 {
    disable;
}
interface so-0/0/0.0;
interface so-0/0/1.0 { <<<incorrect interface configured with admin-group
    admin-group red;
}
interface so-0/0/2.0;
```

### Sample Output 2

```
[edit protocols mpls]
user@R5# delete interface so-0/0/1 admin-group
```



```

[edit protocols mpls]
user@R5# set interface so-0/0/0 admin-group red

[edit protocols mpls]
user@R5# show
admin-groups {
    red 8;
    blue 4;
}
interface fxp0.0 {
    disable;
}
interface so-0/0/0.0 { <<<correct interface configured with admin-group
    admin-group red;
}
interface so-0/0/1.0;
interface so-0/0/2.0;

[edit protocols mpls]
user@R5# commit
commit complete

```

### Sample Output 3

```

user@R1> show mpls lsp
Ingress LSP: 1 sessions
To          From          State Rt ActivePath      P      LSPname
10.0.0.6    10.0.0.1    Up 1      *  R1-to-R6
Total 1 displayed, Up 1, Down 0

Egress LSP: 1 sessions
To          From          State Rt Style Labelin Labelout LSPname
10.0.0.1    10.0.0.6    Up   0  1 FF      3      - R6-to-R1
Total 1 displayed, Up 1, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

**Meaning** Sample Output 1 from transit router **R5** shows that at the `[edit protocols mpls]` hierarchy level, interface **so-0/0/1** is incorrectly configured with the **admin-group red** statement. The **so-0/0/0** interface should be configured with the **admin-group red** statement.

Sample Output 2 shows the steps taken to correct the configuration. The administration group has been deleted from **so-0/0/1** and **so-0/0/0** is now associated with the red color.

Sample Output 3 shows that LSP **R1-to-R6** is established.

### Verify the CSPF Failure

**Purpose** To simulate a configuration error on the network, router **R5** has the administrative group coloring removed from interface **so-0/0/0**. The result is a CSPF failure at **R5** because there is no longer a path between **R1** and **R6** that includes the red color.

**Action** To confirm that the LSP is down and verify the configuration on routers **R1** and **R5**, enter the following Junos OS CLI operational mode commands:

```

user@host> clear mpls lsp
user@host> show mpls lsp extensive

```

### Sample Output 1

```

user@R1> clear mpls lsp
[edit protocols mpls]
user@R1# run show mpls lsp extensive
Ingress LSP: 1 sessions

10.0.0.6
  From: 0.0.0.0, State: Dn
  , ActiveRoute: 0, LSPname: R1-to-R6
  ActivePath: (none)
  LoadBalance: Random
  Metric: 100
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  Primary State: Dn
    Include: red Exclude: blue
  Will be enqueued for recomputation in 24 second(s).
  9 May 11 20:12:28 CSPF failed: no route toward 10.0.0.6
  8 May 11 20:12:28 Clear Call
  7 May 11 20:12:28 Deselected as active
  6 May 11 19:31:42 Selected as active path
  5 May 11 19:31:42 Record Route: 10.1.15.2 10.1.56.2
  4 May 11 19:31:42 Up
  3 May 11 19:31:42 Originate Call
  2 May 11 19:31:42 CSPF: computation result accepted
  1 May 11 19:31:12 CSPF failed: no route toward 10.0.0.6[5 times]
  Created: Wed May 11 19:29:17 2005
Total 1 displayed, Up 0, Down 1
[...Output truncated...]

```

### Sample Output 2

```

[edit protocols mpls]
user@R5# run show mpls lsp
Ingress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 1 sessions
To          From          State  Rt  Style Labelin Labelout LSPname
10.0.0.1    10.0.0.6        Up     1  1 FF  100352      3 R6-to-R1
Total 1 displayed, Up 1
, Down 0

```

**Meaning** Sample Output 1 from ingress router **R1** shows that the **clear mpls lsp** command was issued to confirm that **R1** cannot reestablish LSP **R1-to-R6**. The sample output from the **show mpls lsp extensive** command shows that LSP **R1-to-R6** is down, **State: Dn** and **ActivePath: (None)**; and that the CSPF has failed, **CSPF failed: no route toward 10.0.0.6**.

Sample Output 2 from transit router **R5** shows that LSP **R1-to-R6** is not included in the output, indicating that the LSP is not transiting **R5**.

Most network problems appear as a local CSPF failure, as shown in the sample output. The CSPF failure indicates that no path meeting the constraints for the LSP can be found

in the router's traffic engineering database. To resolve these problems effectively, use CSPF tracing on the ingress router, and analyze the traffic engineering database to locate the node that should meet the constraints.

## Examining the Hello Message

**Purpose** RSVP monitors the status of the interior gateway protocol (IGP) (Intermediate System-to-Intermediate System [ISIS] or Open Shortest Path First [OSPF]) neighbors and relies on the IGP protocols to detect when a node fails. If an IGP protocol declares a neighbor down (because Hello messages are no longer being received), RSVP also brings down that neighbor. However, the IGP protocols and RSVP still act independently when bringing a neighbor up.


RSVP Hello messages are exchanged between neighbors. The destination address is the neighbor node. RSVP Hello messages are used to determine loss of interface more quickly than determined by the RSVP state timeout.



**NOTE:** RSVP Hello messages are required to establish the protocol or to maintain adjacency information. RSVP Hello messages do not establish state.

Figure 123 on page 1293 shows two RSVP Hello messages exchanged between routers R1 and R3.

**Figure 123: RSVP Hello Message**

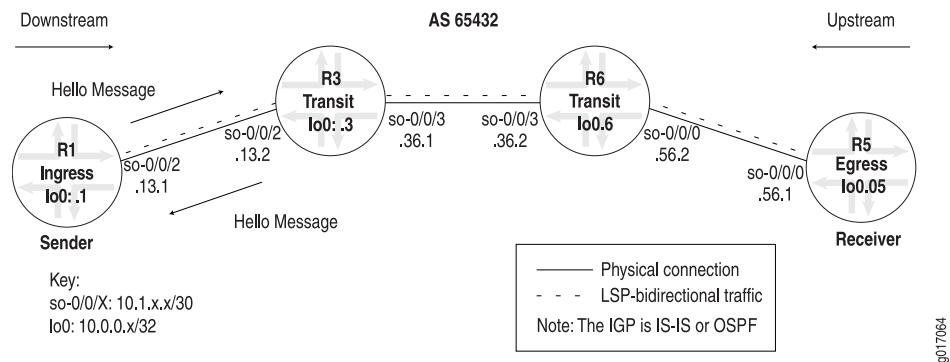

To ensure that Hello messages are displayed in the output, include the **packets** flag at the [edit protocols rsvp traceoptions] hierarchy level.

**Action** To examine the Hello message, enter the following Junos OS CLI command:

```
user@R1> monitor start filename
```

**Sample Output 1**

```
[edit protocols rsvp]
user@R1# show
traceoptions {
  file rsvp-log;
  flag packets detail;
}
interface so-0/0/2.0;
interface fxp0.0 {
  disable;
}
```

**Sample Output 2**

```
user@R1> clear log rsvp-log

user@R1> monitor start rsvp-log

user@R1>
*** rsvp-log ***
[...Output truncated...]
Jun 29 15:48:59  RSVP send Hello New 10.1.13.1->10.1.13.2 Len=32 so-0/0/2.0
Jun 29 15:48:59  HelloReq Len 12
Jun 29 15:48:59  RestartCap Len 12 restart time 0, recovery time 0
Jun 29 15:48:59  RSVP rcv Hello New 10.1.13.2->10.1.13.1 Len=32 so-0/0/2.0
Jun 29 15:48:59  HelloRply Len 12
Jun 29 15:48:59  RestartCap Len 12 restart time 0, recovery time 0
monitor stop
```

**Meaning** Sample Output 1 shows the configuration of RSVP tracing on ingress router **R1**. The **packets** flag is included at the **[edit protocols rsvp traceoptions]** hierarchy level to provide information about RSVP traffic. The **detail** option is included to show granular details about the configured flag.

Sample Output 2 shows **clear** commands, the output for the **rsvp-log** file, and that monitoring was started and then stopped. The **rsvp-log** output shows two RSVP Hello messages exchanged between **R1** and **R3**.

The first Hello message in the **rsvp-log** output is a request sent from **R1** (10.1.13.1) to **R3** (10.1.13.2). The outgoing interface is **so-0/0/2.0** on **R1**. The second Hello message was a reply sent from **R3** to **R1**, also through the outgoing interface **so-0/0/2.0** on **R3**.

The next two lines of output indicate object values for the two Hello messages, and are indented in the output. To facilitate this discussion, each line of output for each object is displayed before the corresponding explanation.

- **HelloReq Len 12**

The Hello request (**HelloReq**) object indicates that this is a Hello request. RFC 3209 defines the RSVP Hello message. An RSVP Hello message can either be a request or a reply. Every request should generate a reply.

- **RestartCap Len 12 restart time 0, recovery time 0**

The restart object (**RestartCap**) indicates the graceful restart capability of the sender node. The restart time of 0 milliseconds is the length of time that this node takes to restart its RSVP traffic engineering functionality. At the end of this time, the node can send and receive RSVP messages again. The recovery time of 0 milliseconds indicates

the length of time the LSR retains MPLS forwarding information. A recovery time of 0 in this case indicates that no forwarding state was preserved across a restart. Because both values are set to 0, graceful restart was not enabled for this RSVP session.

- **HelloRply Len 12**

The **Hello** reply (**HelloRply**) object indicates that this is an RSVP Hello message sent from **R3** to **R1** out of interface **so-0/0/2.0**.

In standard RSVP, node failure detection occurs as a consequence of the RSVP soft-state timeout model. However, detection typically requires several minutes to time out the soft state. Hello packets allow the detection of the neighboring node state changes more quickly.

In Junos OS, RSVP Hello messages are optional and are backward-compatible with RSVP implementations that do not support Hello messages. For neighboring routers that do not support Hello messages or on which RSVP Hello is disabled, RSVP uses the soft-state timeout for loss detection and cannot benefit from fast IGP Hello detection.

Configuring a short time for the IS-IS or OSPF Hello timers allows these protocols to detect node failures more quickly. RSVP also benefits from early detection by the IGP protocols. It is not necessary to explicitly configure a short RSVP Hello timer. If you do configure the RSVP Hello timer, you can configure a longer value and can still expect the failure of a neighboring router to be quickly detected by IGP.

Between Hello-capable neighbors, Hello messages are sent unicast toward each other. A loss of (2 x keep-multiplier + 1) consecutive Hello messages causes the neighbor's state to go down, and all RSVP sessions to and from that neighbor are declared to be down.

By default, RSVP sends Hello messages every 9 seconds.


## Displaying the Status of IS-IS Adjacencies

### Purpose

Assuming that all the routers are correctly configured for IS-IS, you can verify which neighbors are adjacent and able to exchange IS-IS data. In addition, you can examine the set of routes installed in the forwarding table to verify that the routing protocol process (rpd) has relayed the correct information into the forwarding table.

[Figure 124 on page 1296](#) illustrates the example IS-IS topology used for the procedures in this topic.

Figure 124: IS-IS Network Topology

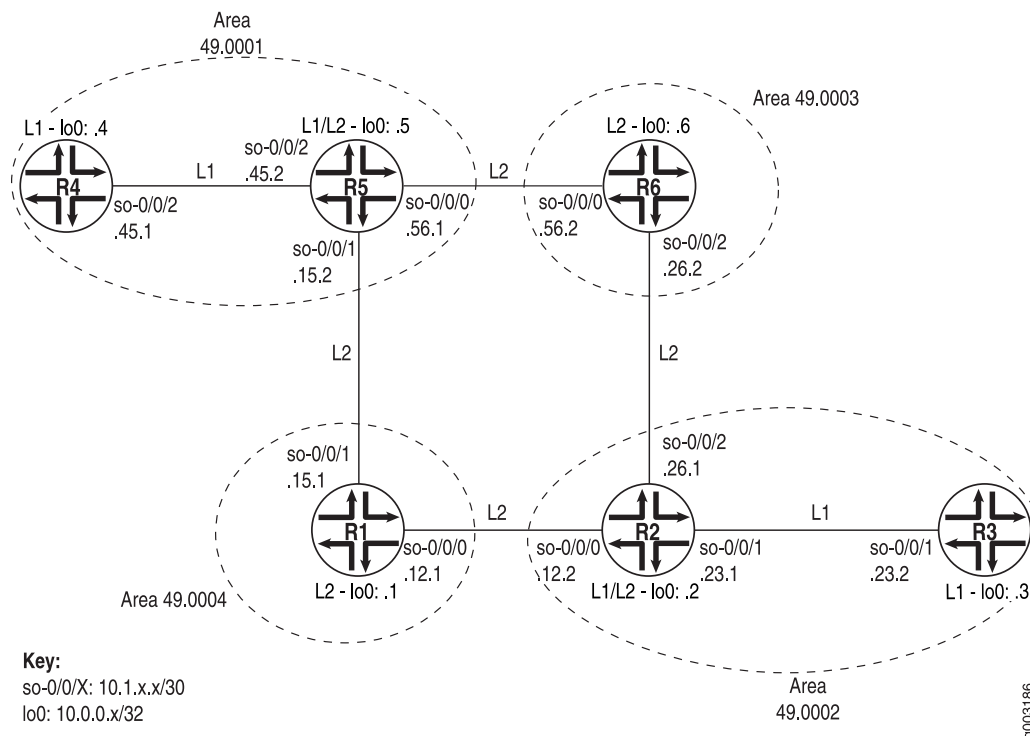

The network consists of Level 1 and Level 2 adjacencies. Level 1 adjacencies are within areas 49.0001 and 49.0002. Level 2 adjacencies occur between all directly connected Level 2 routers regardless of which area they are in. For example, R5 is in area 49.0001, R6 is in area 49.0003, R1 is in area 49.0004, and R2 is in area 49.0002. The network in [Figure 124 on page 1296](#) should have the following adjacencies:

- Level 2 adjacencies between all directly connected Level 2 routers (R1, R2, R5, and R6).
- Level 1 adjacencies between routers in area 49.0001 (R4 and R5) and between routers in area 49.0002 (R2 and R3).

To verify that routers are adjacent and able to exchange IS-IS data, follow these steps:

1. [Verifying Adjacent Routers on page 1296](#)
2. [Examine the Forwarding Table on page 1297](#)

## Verifying Adjacent Routers

**Purpose** Verify that routers are adjacent and able to exchange IS-IS data.

**Action** To verify that routers are adjacent and able to exchange IS-IS data, enter the following CLI operational mode command:

```
user@host> show isis adjacency
```

The following sample output shows the adjacencies that formed for all routers shown in ["Displaying the Status of IS-IS Adjacencies" on page 1295](#).

## Sample Output

```

user@R1> show isis adjacency
Interface          System      L State      Hold (secs) SNPA
so-0/0/0.0         R2          2 Up         19
so-0/0/1.0         R5          2 Up         18

user@R2> show isis adjacency
Interface          System      L State      Hold (secs) SNPA
so-0/0/0.0         R1          2 Up         19
so-0/0/1.0         R3          1 Up         26
so-0/0/2.0         R6          2 Up         21

user@R3> show isis adjacency
Interface          System      L State      Hold (secs) SNPA
so-0/0/1.0         R2          1 Up         24

user@R4> show isis adjacency
Interface          System      L State      Hold (secs) SNPA
so-0/0/2.0         R5          1 Up         23

user@R5> show isis adjacency
Interface          System      L State      Hold (secs) SNPA
so-0/0/0.0         R6          2 Up         22
so-0/0/1.0         R1          2 Up         20
so-0/0/2.0         R4          1 Up         20

user@R6> show isis adjacency
Interface          System      L State      Hold (secs) SNPA
so-0/0/0.0         R5          2 Up         21
so-0/0/2.0         R2          2 Up         20

```

**Meaning** The sample output shows the adjacencies that formed in the network illustrated in [“Displaying the Status of IS-IS Adjacencies” on page 1295](#). The Level 1/Level 2 routers (R2 and R5) formed Level 1 adjacencies with Level 1 routers (R3 and R4), and Level 2 adjacencies with the Level 2 routers (R1 and R6). To view the status of the adjacency, examine the State column. In this example, all adjacencies in the network are up.

If the state is not **Up** for a particular neighbor, you must first examine the IS-IS configuration for the particular interface. Make sure that the NET address is correct and that the loopback interface (lo0) is configured. Use the **show isis interface** or **show isis interface detail** command to display the IS-IS parameters for all interfaces configured with IS-IS. With these two commands, you can see which interfaces are configured for IS-IS, whether they are configured for Level 1 or Level 2, the IS-IS metric, and other IS-IS information.

## Examine the Forwarding Table

**Purpose** You can display the set of routes installed in the forwarding table to verify that the routing protocol process (rpd) has relayed the correct information into the forwarding table. This is especially important when there are network problems, such as connectivity. In this procedure, you verify that the routes displayed in Step 2 appear in the forwarding table for Router R5.

**Action** To examine the forwarding table for a router, enter the following CLI command:

```
user@host> show route forwarding-table destination destination-prefix
```

### Sample Output

```
user@R5> show route forwarding-table destination 10.0.0.3
Routing table: inet
Internet:
Destination      Type RtRef Next hop          Type Index NhRef Netif
10.0.0.3/32      user  0 10.1.15.0          ucst  285   7  so-0/0/1.0
user@R5> show route forwarding-table destination 10.0.0.3
Routing table: inet
Internet:
Destination      Type RtRef Next hop          Type Index NhRef Netif
10.0.0.3/32      user  0 10.1.56.0          ucst  281   9  so-0/0/0.0
```

**Meaning** The sample output shows the selected next hop between Routers R5 and R3 sent from the inet routing table and installed into the forwarding table. The first instance shows the route through Router R1, and the second instance shows the route through Router R6. In both instances, the preferred route displayed in Step 2 is installed in the forwarding table.

In general, the sample output includes the destination address and destination type, the next-hop address and next-hop type, the number of references to the next hop, an index number into an internal next-hop database, and the interface used to reach the next hop.

**Related Documentation**

- *Verifying the IS-IS Protocol*

---

## Check OSPF on a Stub Router

**Purpose** To verify the OSPF configuration on a stub router.

**Action** To verify the OSPF configuration on a stub router in your network, enter the following commands:

```
user@host> show configuration
user@host> show ospf interface
```

The following sample output is for an OSPF configuration on **R5**, a stub router:

### Sample Output

```
user@R5> show configuration
[...Output truncated...]
interfaces {
    so-0/0/2 {
        unit 0 {
            family inet {
                address 10.1.45.2/30;
            }
        }
    }
    lo0 {
        unit 0 {
            family inet {
```



```

        address 10.0.0.5/32;
    }
}
}
routing-options {
    router-id 10.0.0.5;
}
protocols {
    ospf {
        area 0.0.0.2 {
            stub;
            interface so-0/0/2.0;
            interface lo0.0 {
                passive;
            }
        }
    }
}
}

```

```
user@R5> show ospf interface
```

| Interface  | State   | Area    | DR ID   | BDR ID  | Nbrs |
|------------|---------|---------|---------|---------|------|
| lo0.0      | DRother | 0.0.0.2 | 0.0.0.0 | 0.0.0.0 | 0    |
| so-0/0/2.0 | PtToPt  | 0.0.0.2 | 0.0.0.0 | 0.0.0.0 | 1    |

**Meaning** The sample output shows a basic OSPF configuration at the `[edit protocols ospf]` and `[edit interfaces]` hierarchy levels on **R5**, a stub router.

**R5** has two interfaces included at the `[edit protocols ospf]` hierarchy level, and those interfaces have the **family inet** statement included at the `[edit interfaces]` hierarchy level. Both interfaces, **so-0/0/2.0** and the loopback interface (**lo0**), are in the stub area (**0.0.0.2**).

**R5** has the router ID configured manually to avoid possible problems when the OSPF router ID (RID) changes; for example, when multiple loopback addresses are configured. The RID uniquely identifies the router within the OSPF network. It is transmitted within the LSAs used to populate the link-state database and calculate the shortest-path tree. In a link-state network, it is important that two routers do not share the same RID value, otherwise IP routing problems may occur.

A stub area does not allow AS external advertisements to flood within that area. **R5** relies on a default route (**0.0.0.0/0**) to reach destinations outside the AS. The default route can be statically configured on **R5** or advertised by an ABR (**R4**). In this network, the default LSA is advertised by **R4**.

A stub area is useful if you want to reduce the size of the topological database and therefore the amount of memory required from the routers in the stub area. However, some restrictions apply to a stub area. You cannot create a virtual link through a stub area, and a stub area cannot contain an ASBR.

## Checklist for Verifying the BGP Protocol and Peers

**Purpose** [Table 40 on page 1300](#) provides links and commands for verifying whether the Border Gateway Protocol (BGP) is configured correctly on a Juniper Networks router in your network, the internal Border Gateway Protocol (IBGP) and exterior Border Gateway

Protocol (EBGP) sessions are properly established, the external routes are advertised and received correctly, and the BGP path selection process is working properly.

### Action

**Table 40: Checklist for Verifying the BGP Protocol and Peers**

| Tasks                                                                                         | Command or Action                                                  |
|-----------------------------------------------------------------------------------------------|--------------------------------------------------------------------|
| <i>Verify the BGP Protocol</i>                                                                |                                                                    |
| 1. <a href="#">Verify BGP on an Internal Router on page 1302</a>                              | <b>show configuration</b>                                          |
| 2. <a href="#">Verify BGP on a Border Router on page 1304</a>                                 | <b>show configuration</b>                                          |
| <b>“Verify BGP Peers” on page 1300</b>                                                        |                                                                    |
| 1. <i>Check BGP Sessions</i>                                                                  | <b>show bgp summary</b>                                            |
| 2. <a href="#">Verify Advertised BGP Routes on page 1307</a>                                  | <b>show route advertising-protocol bgp <i>neighbor-address</i></b> |
| 3. <a href="#">Verify That a Particular BGP Route Is Received on Your Router on page 1308</a> | <b>show route receive-protocol bgp <i>neighbor-address</i></b>     |
| <b>“Examine BGP Routes and Route Selection” on page 1309</b>                                  |                                                                    |
| 1. <a href="#">Examine the Local Preference Selection on page 1311</a>                        | <b>show route <i>destination-prefix</i> &lt; detail &gt;</b>       |
| 2. <a href="#">Examine the Multiple Exit Discriminator Route Selection on page 1312</a>       | <b>show route <i>destination-prefix</i> &lt; detail &gt;</b>       |
| 3. <a href="#">Examine the EBGP over IBGP Selection on page 1308</a>                          | <b>show route <i>destination-prefix</i> &lt; detail &gt;</b>       |
| 4. <a href="#">Examine the IGP Cost Selection on page 1314</a>                                | <b>show route <i>destination-prefix</i> &lt; detail &gt;</b>       |
| <b>“Examine Routes in the Forwarding Table” on page 1319</b>                                  | <b>show route forwarding-table</b>                                 |


## Verify BGP Peers

### Purpose

Assuming that all the routers are correctly configured for BGP, you can verify if IBGP and EBGP sessions are properly established, external routes are advertised and received correctly, and the BGP path selection process is working properly.

[Figure 125 on page 1301](#) illustrates an example BGP network topology used in this topic.

Figure 125: BGP Network Topology

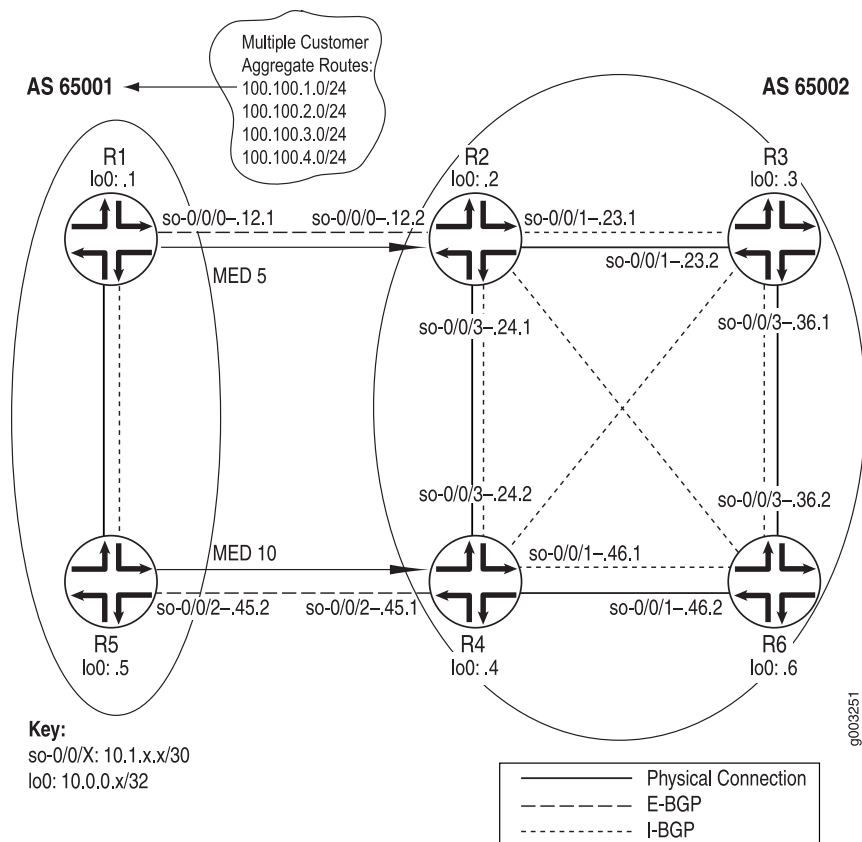

The network consists of two directly connected ASs consisting of external and internal peers. The external peers are directly connected through a shared interface and are running EBGP. The internal peers are connected through their loopback (lo0) interfaces through IBGP. AS 65001 is running OSPF and AS 65002 is running IS-IS as its underlying IGP. IBGP routers do not have to be directly connected, the underlying IGP allows neighbors to reach one another.

The two routers in AS 65001 each contain one EBGP link to AS 65002 (R2 and R4) over which they announce aggregated prefixes: 100.100.1.0, 100.100.2.0, 100.100.3.0, and 100.100.4.0. Also, R1 and R5 are injecting multiple exit discriminator (MED) values of 5 and 10, respectively, for some routes.

The internal routers in both ASs are using a full mesh IBGP topology. A full mesh is required because the networks are not using confederations or route reflectors, so any routes learned through IBGP are not distributed to other internal neighbors. For example, when R3 learns a route from R2, R3 does not distribute that route to R6 because the route is learned through IBGP, so R6 must have a direct BGP connection to R2 to learn the route.

In a full mesh topology, only the border router receiving external BGP information distributes that information to other routers within its AS. The receiving router does not redistribute that information to other IBGP routers in its own AS.

From the point of view of AS 65002, the following sessions should be up:

- The four routers in AS 65002 should have IBGP sessions established with each other.
- R2 should have an EBGP session established with R1.
- R4 should have an EBGP session established with R5.

To verify BGP peers, follow these steps:

1. [Verify BGP on an Internal Router on page 1302](#)
2. [Verify BGP on a Border Router on page 1304](#)
3. [Verify Advertised BGP Routes on page 1307](#)
4. [Verify That a Particular BGP Route Is Received on Your Router on page 1308](#)
5. [Examine the EBGP over IBGP Selection on page 1308](#)

## Verify BGP on an Internal Router

**Purpose** To verify the BGP configuration of an internal router.

**Action** To verify the BGP configuration of an internal router, enter the following Junos OS command-line interface (CLI) command:

```
user@host> show configuration
```

The following sample output is for a BGP configuration on R3, as shown in *Verify the BGP Protocol*:

## Sample Output

```
user@R3> show configuration
[...Output truncated...]
interfaces {
  so-0/0/1 {
    unit 0 {
      family inet {
        address 10.1.23.2/30;
      }
      family iso;
    }
  }
  so-0/0/3 {
    unit 0 {
      family inet {
        address 10.1.36.1/30;
      }
      family iso;
    }
  }
  lo0 {
    unit 0 {
      family inet {
        address 10.0.0.3/32;
      }
      family iso {
        address 49.0002.1000.0000.0003.00;
      }
    }
  }
}
```

```

}
routing-options {
  [...Output truncated...]
  router-id 10.0.0.3;
  autonomous-system 65002;
}
protocols {
  bgp {
    group internal {
      type internal;
      local-address 10.0.0.3;
      neighbor 10.0.0.2;
      neighbor 10.0.0.4;
      neighbor 10.0.0.6;
    }
  }
  isis {
    level 1 disable;
    interface all {
      level 2 metric 10;
    }
    interface lo0.0;
  }
}

user@R6> show configuration |
[Output truncated...]
interfaces {
  so-0/0/1 {
    unit 0 {
      family inet {
        address 10.1.46.2/30;
      }
      family iso;
    }
  }
  so-0/0/3 {
    unit 0 {
      family inet {
        address 10.1.36.2/30;
      }
      family iso;
    }
  }
  lo0 {
    unit 0 {
      family inet {
        address 10.0.0.6/32;
      }
      family iso {
        address 49.0003.1000.0000.0006.00;
      }
    }
  }
}
routing-options {
  [...Output truncated...]
  router-id 10.0.0.6;
  autonomous-system 65002;
}
protocols {

```

```

    bgp {
        group internal {
            type internal;
            local-address 10.0.0.6;
            neighbor 10.0.0.2;
            neighbor 10.0.0.3;
            neighbor 10.0.0.4;
        }
    }
    isis {
        level 1 disable;
        interface all {
            level 2 metric 10;
        }
        interface lo0.0;
    }
}

```

**Meaning** The sample output shows a basic BGP configuration on routers **R3** and **R6**. The local AS (65002) and one group (**internal**) are configured on both routers. **R3** has three internal peers—**10.0.0.2**, **10.0.0.4**, and **10.0.0.6**—included at the [**protocols bgp group group**] hierarchy level. **R6** also has three internal peers: **10.0.0.2**, **10.0.0.3**, and **10.0.0.4**. The underlying IGP protocol is Intermediate System-to-Intermediate System (IS-IS), and relevant interfaces are configured to run IS-IS.

Note that in this configuration the router ID is manually configured to avoid any duplicate router ID problems.

## Verify BGP on a Border Router

**Purpose** To verify the BGP configuration of a border router.

**Action** To verify the BGP configuration of a border router, enter the following Junos OS CLI operational mode command:

```
user@host> show configuration
```

## Sample Output

The following sample output is for a BGP configuration on two border routers from AS 65002 (R2 and R4 as shown in *Verify the BGP Protocol*):

```

user@R2> show configuration
[...Output truncated...]
interfaces {
    so-0/0/0 {
        unit 0 {
            family inet {
                address 10.1.12.2/30;
            }
            family iso;
        }
    }
    so-0/0/1 {
        unit 0 {
            family inet {
                address 10.1.23.1/30;
            }
        }
    }
}

```

```

    }
    family iso;
  }
}
so-0/0/3 {
  unit 0 {
    family inet {
      address 10.1.24.1/30;
    }
    family iso;
  }
}
lo0 {
  unit 0 {
    family inet {
      address 10.0.0.2/32;
    }
    family iso {
      address 49.0002.1000.0000.0002.00;
    }
  }
}
}
routing-options {
[...Output truncated...]
  router-id 10.0.0.2;
  autonomous-system 65002;
}
protocols {
  bgp {
    group internal {
      type internal;
      export next-hop-self;
      neighbor 10.0.0.3;
      neighbor 10.0.0.4;
      neighbor 10.0.0.6;
    }
    group toR1 {
      type external;
      import import-toR1;
      peer-as 65001;
      neighbor 10.1.12.1;
    }
  }
  isis {
    level 1 disable;
    interface all {
      level 2 metric 10;
    }
    interface lo0.0;
  }
}
policy-options {
  policy-statement next-hop-self {
    term change-next-hop {
      from neighbor 10.1.12.1;
      then {
        next-hop self;
      }
    }
  }
}

```

```
policy-statement import-toR1 {
  term 1 {
    from {
      route-filter 100.100.1.0/24 exact;
    }
    then {
      local-preference 200;
    }
  }
}

user@R4> show configuration
[...Output truncated...]
interfaces {
  so-0/0/1 {
    unit 0 {
      family inet {
        address 10.1.46.1/30;
      }
      family iso;
    }
  }
  so-0/0/2 {
    unit 0 {
      family inet {
        address 10.1.45.1/30;
      }
      family iso;
    }
  }
  so-0/0/3 {
    unit 0 {
      family inet {
        address 10.1.24.2/30;
      }
      family iso;
    }
  }
  lo0 {
    unit 0 {
      family inet {
        address 10.0.0.4/32;
      }
      family iso {
        address 49.0001.1000.0000.0004.00;
      }
    }
  }
}
routing-options {
  [...Output truncated...]
  router-id 10.0.0.4;
  autonomous-system 65002;
}
protocols {
  bgp {
    group internal {
      type internal;
      local-address 10.0.0.4;
      export next-hop-self;
      neighbor 10.0.0.2;
    }
  }
}
```



```

        neighbor 10.0.0.3;
        neighbor 10.0.0.6;
    }
    group toR5 {
        type external;
        peer-as 65001;
        neighbor 10.1.45.2;
    }
}
isis {
    level 1 disable;
    interface all {
        level 2 metric 10;
    }
    interface lo0.0;
}
}
policy-options {
    policy-statement next-hop-self {
        term change-next-hop {
            from neighbor 10.1.45.2;
            then {
                next-hop self;
            }
        }
    }
}

```

**Meaning** The sample output shows a basic BGP configuration on border routers **R2** and **R4**. Both routers have the AS (65002) included at the [routing-options] hierarchy level. Each router has two groups included at the [protocols bgp group group] hierarchy level. External peers are included in the external group, either *toR1* or *toR5*, depending on the router. Internal peers are included in the **internal** group. The underlying IGP protocol is IS-IS on both routers, and relevant interfaces are configured to run IS-IS.

Note that in the configuration on both routers, the router ID is manually configured to avoid duplicate router ID problems, and the **next-hop-self** statement is included to avoid any BGP next-hop reachability problems.

## Verify Advertised BGP Routes

**Purpose** You can determine if a particular route that you have configured is being advertised to a neighbor.

**Action** To verify the routing information as it has been prepared for advertisement to the specified BGP neighbor, enter the following Junos OS CLI operational mode command:

```
user@host> show route advertising-protocol bgp neighbor-address
```

## Sample Output

```

user@R2> show route advertising-protocol bgp 10.0.0.4\
inet.0: 20 destinations, 22 routes (20 active, 0 holddown, 0 hidden)
  Prefix                Nexthop        MED      Lclpref   AS path
* 100.100.1.0/24         Self           5         200       65001 I
* 100.100.2.0/24         Self           5         100       65001 I
* 100.100.3.0/24         Self           100       100       65001 I
* 100.100.4.0/24         Self           100       100       65001 I

```

**Meaning** The sample output shows the BGP routes advertised from **R2** to its neighbor, **10.0.0.4** (**R4**). Out of 22 total routes in the **inet.0** routing table, 20 are active destinations. No routes are **hidden** or in the **hold-down** state. Routes reside in the **hold-down** state prior to being declared active, and routes rejected by a routing policy can be placed into the **hidden** state. The information displayed reflects the routes that the routing table exported to the BGP routing protocol.

## Verify That a Particular BGP Route Is Received on Your Router

**Purpose** Display the routing information as it is received through a particular BGP neighbor and advertised by the local router to the neighbor.

**Action** To verify that a particular BGP route is received on your router, enter the following Junos OS CLI operational mode command:

```
user@host> show route receive-protocol bgp neighbor-address
```

## Sample Output

```
user@R6> show route receive-protocol bgp 10.0.0.2
inet.0: 18 destinations, 20 routes (18 active, 0 holddown, 0 hidden)
  Prefix            Nexthop          MED      Lc1pref    AS path
*100.100.1.0/24    10.0.0.2         5      200      65001 I
*100.100.2.0/24    10.0.0.2         5      100      65001 I
  100.100.3.0/24    10.0.0.2         100           65001 I
  100.100.4.0/24    10.0.0.2         100           65001 I
iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)

user@R6> show route receive-protocol bgp 10.0.0.4
inet.0: 18 destinations, 20 routes (18 active, 0 holddown, 0 hidden)
  Prefix            Nexthop          MED      Lc1pref    AS path
*100.100.3.0/24    10.0.0.4         100           65001 I
*100.100.4.0/24    10.0.0.4         100           65001 I
iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
```

**Meaning** The sample output shows four BGP routes from **R2** and two from **R4**. Of the four routes from **R2**, only two are active in the routing table, as indicated by the asterisk (\*), while both routes received from **R4** are active in the routing table. All BGP routes came through AS 65001.

## Examine the EBGP over IBGP Selection

**Purpose** To examine a route to determine if EBGP is selected over IBGP as the selection criteria for the single, active path.

**Action** To examine a route to determine if EBGP is selected over IBGP as the selection criteria for the single, active path, enter the following Junos OS CLI operational mode command:

```
user@host> show route destination-prefix < detail >
```

## Sample Output

```
user@R4> show route 100.100.3.0 detail
```

```

inet.0: 20 destinations, 24 routes (20 active, 0 holddown, 0 hidden)
100.100.3.0/24 (2 entries, 1 announced)
  *BGP      Preference: 170/-101
    Source: 10.1.45.2
    Next hop: 10.1.45.2 via so-0/0/2.0, selected
    State: <Active Ext>
    Local AS: 65002 Peer AS: 65001
    Age: 5d 0:31:25
    Task: BGP_65001.10.1.45.2+179
    Announcement bits (3): 0-KRT 3-BGP.0.0.0.0+179 4-Resolve inet.0

    AS path: 65001 I
    Localpref: 100
    Router ID: 10.0.0.5
  BGP      Preference: 170/-101
    Source: 10.0.0.2
    Next hop: 10.1.24.1 via so-0/0/3.0, selected
    Protocol next hop: 10.0.0.2 Indirect next hop: 8644000 277
    State: <NotBest Int Ext>
    Inactive reason: Interior > Exterior > Exterior via Interior
    Local AS: 65002 Peer AS: 65002
    Age: 2:48:18    Metric2: 10
    Task: BGP_65002.10.0.0.2+179
    AS path: 65001 I
    Localpref: 100
    Router ID: 10.0.0.2

```

**Meaning** The sample output shows that **R4** received two instances of the **100.100.3.0** route: one from **10.1.45.2** (**R5**) and one from **10.0.0.2** (**R2**). **R4** selected the path from **R5** as its active path, as indicated by the asterisk (\*). The selection is based on a preference for routes learned from an EBGp peer over routes learned from an IBGP. **R5** is an EBGp peer.

You can determine if a path is received from an EBGp or IBGP peer by examining the **Local As** and **Peer As** fields. For example, the route from **R5** shows the local AS is 65002 and the peer AS is 65001, indicating that the route is received from an EBGp peer. The route from **R2** shows that both the local and peer AS is 65002, indicating that it is received from an IBGP peer.


The reason that the inactive path is not selected is displayed in the **Inactive reason** field, in this case, **Interior > Exterior > Exterior via Interior**. The wording of this reason shows the order of preferences applied when the same route is received from two routers. The route received from a strictly internal source (IGP) is preferred first, the route received from an external source (EBGP) is preferred next, and any route which comes from an external source and is received internally (IBGP) is preferred last.

## Examine BGP Routes and Route Selection

### Purpose

You can examine the BGP path selection process to determine the single, active path when BGP receives multiple routes to the same destination prefix.

Figure 126: BGP Network Topology

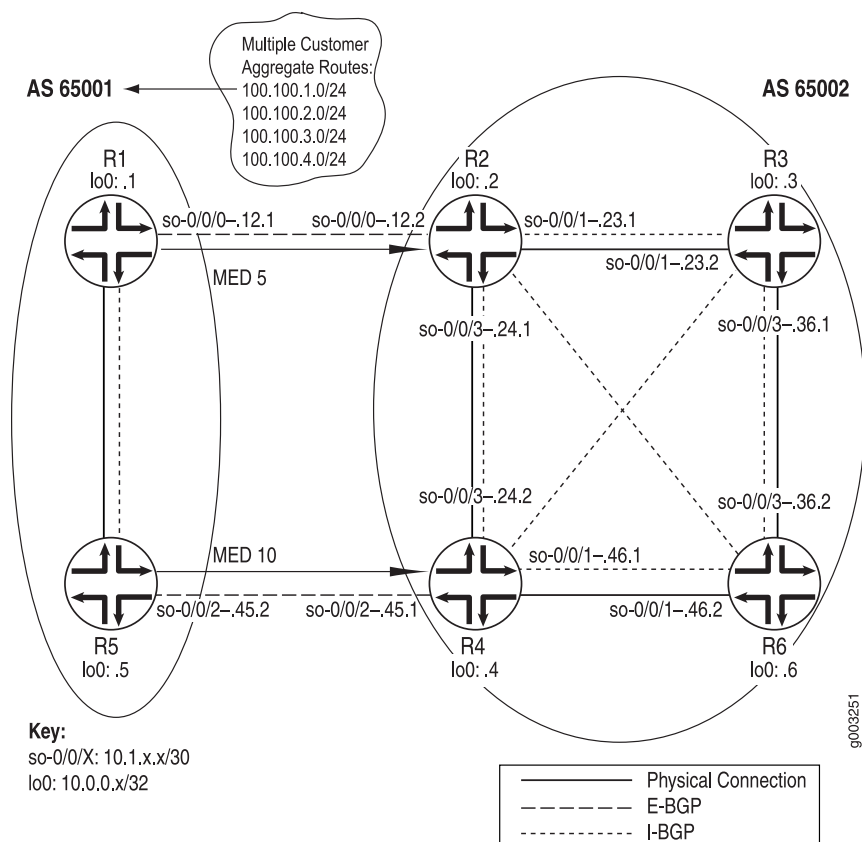

The network in [Figure 126 on page 1310](#) shows that **R1** and **R5** announce the same aggregate routes to **R2** and **R4**, which results in **R2** and **R4** receiving two routes to the same destination prefix. The route selection process on **R2** and **R4** determines which of the two BGP routes received is active and advertised to the other internal routers (**R3** and **R6**).

Before the router installs a BGP route, it must make sure that the BGP **next-hop** attribute is reachable. If the BGP next hop cannot be resolved, the route is not installed. When a BGP route is installed in the routing table, it must go through a path selection process if multiple routes exist to the same destination prefix. The BGP path selection process proceeds in the following order:

1. Route preference in the routing table is compared. For example, if an OSPF and a BGP route exist for a particular destination, the OSPF route is selected as the active route because the OSPF route has a default preference of 110, while the BGP route has a default preference of 170.
2. Routes are compared for local preference. The route with the highest local preference is preferred. For example, see [“Examine the Local Preference Selection” on page 1311](#).
3. The AS path attribute is evaluated. The shorter AS path is preferred.
4. The origin code is evaluated. The lowest origin code is preferred ( **I (IGP)** < **E (EGP)** < **? (Incomplete)** ).

5. The MED value is evaluated. By default, if any of the routes are advertised from the same neighboring AS, the lowest MED value is preferred. The absence of a MED value is interpreted as a MED of 0. For an example, see [“Examine the Multiple Exit Discriminator Route Selection” on page 1312](#).
6. The route is evaluated as to whether it is learned through EBGP or IBGP. EBGP learned routes are preferred to IBGP learned routes. For an example, see [“Examine the EBGP over IBGP Selection” on page 1308](#).
7. If the route is learned from IBGP, the route with the lowest IGP cost is preferred. For an example, see [“Examine the IGP Cost Selection” on page 1314](#). The physical next hop to the IBGP peer is installed according to the following three rules:
  - a. After BGP examines the **inet.0** and **inet.3** routing tables, the physical next hop of the route with the lowest preference is used.
  - b. If the preference values in the **inet.0** and the **inet.3** routing tables are a tie, the physical next hop of the route in the **inet.3** routing table is used.
  - c. When a preference tie exists in the same routing table, the physical next hop of the route with more paths is installed.
8. The route reflection cluster list attribute is evaluated. The shortest length cluster list is preferred. Routes without a cluster list are considered to have a cluster list length of 0.
9. The router ID is evaluated. The route from the peer with the lowest router ID is preferred (usually the loopback address).
10. The peer address value is examined. The peer with the lowest peer IP address is preferred.

To determine the single, active path when BGP receives multiple routes to the same destination prefix, enter the following Junos OS CLI operational mode command:

```
user@host> show route destination-prefix < detail >
```

The following steps illustrate the inactive reason displayed when BGP receives multiple routes to the same destination prefix and one route is selected as the single, active path:

1. [Examine the Local Preference Selection on page 1311](#)
2. [Examine the Multiple Exit Discriminator Route Selection on page 1312](#)
3. [Examine the EBGP over IBGP Selection on page 1313](#)
4. [Examine the IGP Cost Selection on page 1314](#)

## Examine the Local Preference Selection

**Purpose** To examine a route to determine if local preference is the selection criteria for the single, active path.

**Action** To examine a route to determine if local preference is the selection criteria for the single, active path, enter the following Junos OS CLI operational mode command:

```
user@host> show route destination-prefix < detail >
```

## Sample Output

```
user@R4> show route 100.100.1.0 detail
inet.0: 20 destinations, 24 routes (20 active, 0 holddown, 0 hidden)
100.100.1.0/24 (2 entries, 1 announced)
  *BGP      Preference: 170/-201
    Source: 10.0.0.2
    Next hop: 10.1.24.1 via so-0/0/3.0, selected
    Protocol next hop: 10.0.0.2 Indirect next hop: 8644000 277
    State: <Active Int Ext>
    Local AS: 65002 Peer AS: 65002
    Age: 2:22:34 Metric: 5 Metric2: 10
    Task: BGP_65002.10.0.0.2+179
    Announcement bits (3): 0-KRT 3-BGP.0.0.0.0+179 4-Resolve inet.0

    AS path: 65001|
    Localpref: 200
    Router ID: 10.0.0.2
  BGP      Preference: 170/-101
    Source: 10.1.45.2
    Next hop: 10.1.45.2 via so-0/0/2.0, selected
    State: <Ext>
    Inactive reason: Local Preference
    Local AS: 65002 Peer AS: 65001
    Age: 2w0d 1:28:31 Metric: 10
    Task: BGP_65001.10.1.45.2+179
    AS path: 65001|
    Localpref: 100
    Router ID: 10.0.0.5
```

**Meaning** The sample output shows that R4 received two instances of the 100.100.1.0 route: one from 10.0.0.2 (R2) and one from 10.1.45.2 (R5). R4 selected the path from R2 as its active path, as indicated by the asterisk (\*). The selection is based on the local preference value contained in the **Localpref** field. The path with the *highest* local preference is preferred. In the example, the path with the higher local preference value is the path from R2, 200.

The reason that the route from R5 is not selected is in the **Inactive reason** field, in this case, **Local Preference**.

Note that the two paths are from the same neighboring network: AS 65001.

## Examine the Multiple Exit Discriminator Route Selection

**Purpose** To examine a route to determine if the MED is the selection criteria for the single, active path.

**Action** To examine a route to determine if the MED is the selection criteria for the single, active path, enter the following Junos OS CLI operational mode command:

```
user@host> show route destination-prefix < detail >
```

## Sample Output

```
user@R4> show route 100.100.2.0 detail
```

```

inet.0: 20 destinations, 24 routes (20 active, 0 holddown, 0 hidden)
100.100.2.0/24 (2 entries, 1 announced)
  *BGP      Preference: 170/-101
    Source: 10.0.0.2
    Next hop: 10.1.24.1 via so-0/0/3.0, selected
    Protocol next hop: 10.0.0.2 Indirect next hop: 8644000 277
    State: <Active Int Ext>
    Local AS: 65002 Peer AS: 65002
    Age: 2:32:01      Metric: 5      Metric2: 10
    Task: BGP_65002.10.0.0.2+179
    Announcement bits (3): 0-KRT 3-BGP.0.0.0.0+179 4-Resolve inet.0

    AS path: 65001|
    Localpref: 100
    Router ID: 10.0.0.2
  BGP      Preference: 170/-101
    Source: 10.1.45.2
    Next hop: 10.1.45.2 via so-0/0/2.0, selected
    State: <NotBest Ext>
    Inactive reason: Not Best in its group
    Local AS: 65002 Peer AS: 65001
    Age: 2w0d 1:37:58      Metric: 10
    Task: BGP_65001.10.1.45.2+179
    AS path: 65001|
    Localpref: 100
    Router ID: 10.0.0.5

```

**Meaning** The sample output shows that **R4** received two instances of the **100.100.2.0** route: one from **10.0.0.2 (R2)**, and one from **10.1.45.2 (R5)**. **R4** selected the path from **R2** as its active route, as indicated by the asterisk (\*). The selection is based on the MED value contained in the **Metric** field. The path with the lowest MED value is preferred. In the example, the path with the lowest MED value (5) is the path from **R2**. Note that the two paths are from the same neighboring network: AS 65001.

The reason that the inactive path is not selected is displayed in the **Inactive reason** field, in this case, **Not Best in its group**. The wording is used because the Junos OS uses the process of deterministic MED selection, by default.

## Examine the EBGP over IBGP Selection

**Purpose** To examine a route to determine if EBGP is selected over IBGP as the selection criteria for the single, active path.

**Action** To examine a route to determine if EBGP is selected over IBGP as the selection criteria for the single, active path, enter the following Junos OS CLI operational mode command:

```
user@host> show route destination-prefix < detail >
```

## Sample Output

```

user@R4> show route 100.100.3.0 detail
inet.0: 20 destinations, 24 routes (20 active, 0 holddown, 0 hidden)
100.100.3.0/24 (2 entries, 1 announced)
  *BGP      Preference: 170/-101
    Source: 10.1.45.2
    Next hop: 10.1.45.2 via so-0/0/2.0, selected

```

```

State: <Active Ext>
  Local AS: 65002 Peer AS: 65001
Age: 5d 0:31:25
Task: BGP_65001.10.1.45.2+179
Announcement bits (3): 0-KRT 3-BGP.0.0.0+179 4-Resolve inet.0

AS path: 65001 I
Localpref: 100
Router ID: 10.0.0.5
BGP Preference: 170/-101
  Source: 10.0.0.2
Next hop: 10.1.24.1 via so-0/0/3.0, selected
Protocol next hop: 10.0.0.2 Indirect next hop: 8644000 277
State: <NotBest Int Ext>
  Inactive reason: Interior > Exterior > Exterior via Interior
  Local AS: 65002 Peer AS: 65002
Age: 2:48:18 Metric2: 10
Task: BGP_65002.10.0.0.2+179
AS path: 65001 I
Localpref: 100
Router ID: 10.0.0.2

```

**Meaning** The sample output shows that **R4** received two instances of the **100.100.3.0** route: one from **10.1.45.2 (R5)** and one from **10.0.0.2 (R2)**. **R4** selected the path from **R5** as its active path, as indicated by the asterisk (\*). The selection is based on a preference for routes learned from an EBGP peer over routes learned from an IBGP. **R5** is an EBGP peer.

You can determine if a path is received from an EBGP or IBGP peer by examining the **Local As** and **Peer As** fields. For example, the route from **R5** shows the local AS is 65002 and the peer AS is 65001, indicating that the route is received from an EBGP peer. The route from **R2** shows that both the local and peer AS is 65002, indicating that it is received from an IBGP peer.

The reason that the inactive path is not selected is displayed in the **Inactive reason** field, in this case, **Interior > Exterior > Exterior via Interior**. The wording of this reason shows the order of preferences applied when the same route is received from two routers. The route received from a strictly internal source (IGP) is preferred first, the route received from an external source (EBGP) is preferred next, and any route which comes from an external source and is received internally (IBGP) is preferred last.

## Examine the IGP Cost Selection

**Purpose** To examine a route to determine if EBGP is selected over IBGP as the selection criteria for the single, active path.

**Action** To examine a route to determine if EBGP is selected over IBGP as the selection criteria for the single, active path, enter the following Junos OS CLI operational mode command:

```
user@host> show route destination-prefix < detail >
```

## Sample Output

```

user@R6> show route 100.100.4.0 detail
inet.0: 18 destinations, 20 routes (18 active, 0 holddown, 0 hidden)
100.100.4.0/24 (2 entries, 1 announced)

```



```

*BGP      Preference: 170/-101
          Source: 10.0.0.4
          Next hop: 10.1.46.1 via so-0/0/1.0, selected
          Protocol next hop: 10.0.0.4 Indirect next hop: 864c000 276
          State: <Active Int Ext>
          Local AS: 65002 Peer AS: 65002
          Age: 2:16:11      Metric2: 10
          Task: BGP_65002.10.0.0.4+4120
          Announcement bits (2): 0-KRT 4-Resolve inet.0
          AS path: 65001|
          Localpref: 100
          Router ID: 10.0.0.4
BGP      Preference: 170/-101
          Source: 10.0.0.2
          Next hop: 10.1.46.1 via so-0/0/1.0, selected
          Next hop: 10.1.36.1 via so-0/0/3.0
          Protocol next hop: 10.0.0.2 Indirect next hop: 864c0b0 278
          State: <NotBest Int Ext>
          Inactive reason: IGP metric
          Local AS: 65002 Peer AS: 65002
          Age: 2:16:03      Metric2: 20
          Task: BGP_65002.10.0.0.2+179
          AS path: 65001|
          Localpref: 100
          Router ID: 10.0.0.2

```

**Meaning** The sample output shows that **R6** received two instances of the **100.100.4.0** route: one from **10.0.0.4 (R4)** and one from **10.0.0.2 (R2)**. **R6** selected the path from **R4** as its active route, as indicated by the asterisk (\*). The selection is based on the IGP metric, displayed in the **Metric2** field. The route with the lowest IGP metric is preferred. In the example, the path with the lowest IGP metric value is the path from **R4**, with an IGP metric value of 10, while the path from **R2** has an IGP metric of 20. Note that the two paths are from the same neighboring network: AS 65001.

The reason that the inactive path was not selected is displayed in the **Inactive reason** field, in this case, **IGP metric**.

## Examine the Local Preference Selection

**Purpose** To examine a route to determine if local preference is the selection criteria for the single, active path.

**Action** To examine a route to determine if local preference is the selection criteria for the single, active path, enter the following Junos OS CLI operational mode command:

```
user@host> show route destination-prefix < detail >
```

## Sample Output

```

user@R4> show route 100.100.1.0 detail
inet.0: 20 destinations, 24 routes (20 active, 0 holddown, 0 hidden)
100.100.1.0/24 (2 entries, 1 announced)
  *BGP      Preference: 170/-201
            Source: 10.0.0.2
            Next hop: 10.1.24.1 via so-0/0/3.0, selected
            Protocol next hop: 10.0.0.2 Indirect next hop: 8644000 277

```

```

State: <Active Int Ext>
Local AS: 65002 Peer AS: 65002
Age: 2:22:34    Metric: 5    Metric2: 10
Task: BGP_65002.10.0.0.2+179
Announcement bits (3): 0-KRT 3-BGP.0.0.0.0+179 4-Resolve inet.0

      AS path: 65001|
      Localpref: 200
      Router ID: 10.0.0.2
BGP   Preference: 170/-101
      Source: 10.1.45.2
      Next hop: 10.1.45.2 via so-0/0/2.0, selected
      State: <Ext>
      Inactive reason: Local Preference
      Local AS: 65002 Peer AS: 65001
      Age: 2w0d 1:28:31    Metric: 10
      Task: BGP_65001.10.1.45.2+179
      AS path: 65001|
      Localpref: 100
      Router ID: 10.0.0.5

```

**Meaning** The sample output shows that **R4** received two instances of the **100.100.1.0** route: one from **10.0.0.2 (R2)** and one from **10.1.45.2 (R5)**. **R4** selected the path from **R2** as its active path, as indicated by the asterisk (\*). The selection is based on the local preference value contained in the **Localpref** field. The path with the *highest* local preference is preferred. In the example, the path with the higher local preference value is the path from **R2**, 200.

The reason that the route from **R5** is not selected is in the **Inactive reason** field, in this case, **Local Preference**.

Note that the two paths are from the same neighboring network: AS 65001.

## Examine the Multiple Exit Discriminator Route Selection

**Purpose** To examine a route to determine if the MED is the selection criteria for the single, active path.

**Action** To examine a route to determine if the MED is the selection criteria for the single, active path, enter the following Junos OS CLI operational mode command:

```
user@host> show route destination-prefix < detail >
```

## Sample Output

```

user@R4> show route 100.100.2.0 detail
inet.0: 20 destinations, 24 routes (20 active, 0 holddown, 0 hidden)
100.100.2.0/24 (2 entries, 1 announced)
  *BGP    Preference: 170/-101
    Source: 10.0.0.2
    Next hop: 10.1.24.1 via so-0/0/3.0, selected
    Protocol next hop: 10.0.0.2 Indirect next hop: 8644000 277
    State: <Active Int Ext>
    Local AS: 65002 Peer AS: 65002
    Age: 2:32:01    Metric: 5    Metric2: 10
    Task: BGP_65002.10.0.0.2+179
    Announcement bits (3): 0-KRT 3-BGP.0.0.0.0+179 4-Resolve inet.0

```

```

      AS path: 65001 I
      Localpref: 100
      Router ID: 10.0.0.2
BGP   Preference: 170/-101
      Source: 10.1.45.2
      Next hop: 10.1.45.2 via so-0/0/2.0, selected
      State: <NotBest Ext>
      Inactive reason: Not Best in its group
      Local AS: 65002 Peer AS: 65001
      Age: 2w0d 1:37:58      Metric: 10
      Task: BGP_65001.10.1.45.2+179
      AS path: 65001 I
      Localpref: 100
      Router ID: 10.0.0.5

```

**Meaning** The sample output shows that **R4** received two instances of the **100.100.2.0** route: one from **10.0.0.2 (R2)**, and one from **10.1.45.2 (R5)**. **R4** selected the path from **R2** as its active route, as indicated by the asterisk (\*). The selection is based on the MED value contained in the **Metric** field. The path with the lowest MED value is preferred. In the example, the path with the lowest MED value (5) is the path from **R2**. Note that the two paths are from the same neighboring network: AS 65001.

The reason that the inactive path is not selected is displayed in the **Inactive reason** field, in this case, **Not Best in its group**. The wording is used because the Junos OS uses the process of deterministic MED selection, by default.

## Examine the EBGW over IBGP Selection

**Purpose** To examine a route to determine if EBGW is selected over IBGP as the selection criteria for the single, active path.

**Action** To examine a route to determine if EBGW is selected over IBGP as the selection criteria for the single, active path, enter the following Junos OS CLI operational mode command:

```
user@host> show route destination-prefix < detail >
```

## Sample Output

```

user@R4> show route 100.100.3.0 detail
inet.0: 20 destinations, 24 routes (20 active, 0 holddown, 0 hidden)
100.100.3.0/24 (2 entries, 1 announced)
    *BGP      Preference: 170/-101
      Source: 10.1.45.2
      Next hop: 10.1.45.2 via so-0/0/2.0, selected
      State: <Active Ext>
      Local AS: 65002 Peer AS: 65001
      Age: 5d 0:31:25
      Task: BGP_65001.10.1.45.2+179
      Announcement bits (3): 0-KRT 3-BGP.0.0.0.0+179 4-Resolve inet.0

      AS path: 65001 I
      Localpref: 100
      Router ID: 10.0.0.5
BGP   Preference: 170/-101
      Source: 10.0.0.2
      Next hop: 10.1.24.1 via so-0/0/3.0, selected

```

```

Protocol next hop: 10.0.0.2 Indirect next hop: 8644000 277
State: <NotBest Int Ext>
  Inactive reason: Interior > Exterior > Exterior via Interior
Local AS: 65002 Peer AS: 65002
Age: 2:48:18 Metric2: 10
Task: BGP_65002.10.0.0.2+179
AS path: 65001 I
Localpref: 100
Router ID: 10.0.0.2

```

**Meaning** The sample output shows that **R4** received two instances of the **100.100.3.0** route: one from **10.1.45.2 (R5)** and one from **10.0.0.2 (R2)**. **R4** selected the path from **R5** as its active path, as indicated by the asterisk (\*). The selection is based on a preference for routes learned from an EBGP peer over routes learned from an IBGP. **R5** is an EBGP peer.

You can determine if a path is received from an EBGP or IBGP peer by examining the **Local As** and **Peer As** fields. For example, the route from **R5** shows the local AS is 65002 and the peer AS is 65001, indicating that the route is received from an EBGP peer. The route from **R2** shows that both the local and peer AS is 65002, indicating that it is received from an IBGP peer.

The reason that the inactive path is not selected is displayed in the **Inactive reason** field, in this case, **Interior > Exterior > Exterior via Interior**. The wording of this reason shows the order of preferences applied when the same route is received from two routers. The route received from a strictly internal source (IGP) is preferred first, the route received from an external source (EBGP) is preferred next, and any route which comes from an external source and is received internally (IBGP) is preferred last.

## Examine the IGP Cost Selection

**Purpose** To examine a route to determine if EBGP is selected over IBGP as the selection criteria for the single, active path.

**Action** To examine a route to determine if EBGP is selected over IBGP as the selection criteria for the single, active path, enter the following Junos OS CLI operational mode command:

```
user@host> show route destination-prefix < detail >
```

## Sample Output

```

user@R6> show route 100.100.4.0 detail
inet.0: 18 destinations, 20 routes (18 active, 0 holddown, 0 hidden)
100.100.4.0/24 (2 entries, 1 announced)
  *BGP Preference: 170/-101
    Source: 10.0.0.4
    Next hop: 10.1.46.1 via so-0/0/1.0, selected
    Protocol next hop: 10.0.0.4 Indirect next hop: 864c000 276
    State: <Active Int Ext>
    Local AS: 65002 Peer AS: 65002
    Age: 2:16:11 Metric2: 10
    Task: BGP_65002.10.0.0.4+4120
    Announcement bits (2): 0-KRT 4-Resolve inet.0
    AS path: 65001 I
    Localpref: 100
    Router ID: 10.0.0.4

```

```

BGP      Preference: 170/-101
          Source: 10.0.0.2
          Next hop: 10.1.46.1 via so-0/0/1.0, selected
          Next hop: 10.1.36.1 via so-0/0/3.0
          Protocol next hop: 10.0.0.2 Indirect next hop: 864c0b0 278
          State: <NotBest Int Ext>
          Inactive reason: IGP metric
          Local AS: 65002 Peer AS: 65002
          Age: 2:16:03      Metric2: 20
          Task: BGP_65002.10.0.0.2+179
          AS path: 65001
          Localpref: 100
          Router ID: 10.0.0.2

```

**Meaning** The sample output shows that **R6** received two instances of the **100.100.4.0** route: one from **10.0.0.4 (R4)** and one from **10.0.0.2 (R2)**. **R6** selected the path from **R4** as its active route, as indicated by the asterisk (\*). The selection is based on the IGP metric, displayed in the **Metric2** field. The route with the lowest IGP metric is preferred. In the example, the path with the lowest IGP metric value is the path from **R4**, with an IGP metric value of 10, while the path from **R2** has an IGP metric of 20. Note that the two paths are from the same neighboring network: AS 65001.

The reason that the inactive path was not selected is displayed in the **Inactive reason** field, in this case, **IGP metric**.

## Examine Routes in the Forwarding Table

**Purpose** When you run into problems, such as connectivity problems, you may need to examine routes in the forwarding table to verify that the routing protocol process has relayed the correct information into the forwarding table.

**Action** To display the set of routes installed in the forwarding table, enter the following Junos OS CLI operational mode command:

```
user@host> show route forwarding-table
```

## Sample Output

```

user@R2> show route forwarding-table
Routing table: inet
Internet:

```

| Destination  | Type | RtRef | Next hop  | Type | Index | NhRef | Netif      |
|--------------|------|-------|-----------|------|-------|-------|------------|
| default      | perm | 0     |           | rjct | 10    | 1     |            |
| 10.0.0.2/32  | intf | 0     | 10.0.0.2  | loc1 | 256   | 1     |            |
| 10.0.0.3/32  | user | 1     | 10.1.23.0 | ucst | 282   | 4     | so-0/0/1.0 |
| 10.0.0.4/32  | user | 1     | 10.1.24.0 | ucst | 290   | 7     | so-0/0/3.0 |
| 10.0.0.6/32  | user | 1     | 10.1.24.0 | ucst | 290   | 7     | so-0/0/3.0 |
| 10.1.12.0/30 | intf | 1     | ff.3.0.21 | ucst | 278   | 6     | so-0/0/0.0 |
| 10.1.12.0/32 | dest | 0     | 10.1.12.0 | recv | 280   | 1     | so-0/0/0.0 |
| 10.1.12.2/32 | intf | 0     | 10.1.12.2 | loc1 | 277   | 1     |            |
| 10.1.12.3/32 | dest | 0     | 10.1.12.3 | bcst | 279   | 1     | so-0/0/0.0 |
| 10.1.23.0/30 | intf | 0     | ff.3.0.21 | ucst | 282   | 4     | so-0/0/1.0 |
| 10.1.23.0/32 | dest | 0     | 10.1.23.0 | recv | 284   | 1     | so-0/0/1.0 |
| 10.1.23.1/32 | intf | 0     | 10.1.23.1 | loc1 | 281   | 1     |            |
| 10.1.23.3/32 | dest | 0     | 10.1.23.3 | bcst | 283   | 1     | so-0/0/1.0 |
| 10.1.24.0/30 | intf | 0     | ff.3.0.21 | ucst | 290   | 7     | so-0/0/3.0 |

```

10.1.24.0/32      dest    0 10.1.24.0      recv  292    1 so-0/0/3.0
10.1.24.1/32      intf    0 10.1.24.1      locl  289    1
10.1.24.3/32      dest    0 10.1.24.3      bcst  291    1 so-0/0/3.0
10.1.36.0/30      user    0 10.1.23.0      ucst  282    4 so-0/0/1.0
10.1.46.0/30      user    0 10.1.24.0      ucst  290    7 so-0/0/3.0
100.100.1.0/24    user    0 10.1.12.0      ucst  278    6 so-0/0/0.0
100.100.2.0/24    user    0 10.1.12.0      ucst  278    6 so-0/0/0.0
100.100.3.0/24    user    0 10.1.12.0      ucst  278    6 so-0/0/0.0
100.100.4.0/24    user    0 10.1.12.0      ucst  278    6 so-0/0/0.0
[...Output truncated...]

```

**Meaning** The sample output shows the network-layer prefixes and their next hops installed in the forwarding table. The output includes the same next-hop information as in the **show route detail** command (the next-hop address and interface name). Additional information includes the destination type, the next-hop type, the number of references to this next hop, and an index into an internal next-hop database. (The internal database contains additional information used by the Packet Forwarding Engine to ensure proper encapsulation of packets sent out an interface. This database is not accessible to the user.

For detailed information about the meanings of the various flags and types fields, see the *Routing Policies, Firewall Filters, and Traffic Policers*.

## Ping the Egress Router

**Purpose** Ping the egress router to confirm that communication over the network is operational.

**Action** To ping the egress router, enter the following Junos OS CLI operational mode command:

```
user@host> ping ip-address-interface
```

**Sample Output**

```

[edit protocols mpls]
user@R1# run ping 10.1.56.1
PING 10.1.56.1 (10.1.56.1): 56 data bytes
64 bytes from 10.1.56.1: icmp_seq=0 ttl=255 time=0.837 ms
64 bytes from 10.1.56.1: icmp_seq=1 ttl=255 time=0.792 ms
64 bytes from 10.1.56.1: icmp_seq=2 ttl=255 time=0.856 ms
^C
--- 10.1.56.1 ping statistics ---
3 packets transmitted, 3 packets received, 0% packet loss
round-trip min/avg/max/stddev = 0.792/0.828/0.856/0.027 ms

```

**Meaning** The sample output confirms that communication between router **R1** and the IP address of the relevant interface on router **R5 (10.1.56.1)** is operational.

## View the RSVP Log File on Transit Routers

**Purpose** Transit router messages that appear in the RSVP log file can help you analyze the problem with an RSVP session. You may need to issue the **clear rsvp session** and **clear log filename** commands to ensure that your records are current. However, if your network is large with many RSVP sessions, this may not be advisable because it may take a while for all sessions to reestablish. However, the **clear rsvp session** command has various options you can

include to minimize the effect on your network. For more information about the **clear rsvp session** command, see the *Junos Routing Protocols and Policies Command Reference*.

**Action** To view the RSVP log file, enter the following Junos OS CLI operational mode commands:

```
user@host> clear rsvp session (Optional)
user@host> clear log filename (Optional)
user@host> show log filename
```

### Sample Output 1

```
user@R3> clear rsvp session

user@R3> clear log rsvp-log

user@R3> show log rsvp-log
Jul 21 16:51:23 R3 clear-log[30656]: logfile cleared
Jul 21 16:51:24 RSVP rcv Path 10.0.0.1->10.0.0.5 Len=208 so-0/0/2.0
Jul 21 16:51:24 Session7 Len 16 10.0.0.5(port/tunnel ID 11956) Proto 0
Jul 21 16:51:24 Hop Len 12 10.1.13.1/0x086cd198
Jul 21 16:51:24 Time Len 8 30000 ms
Jul 21 16:51:24 SrcRoute Len 20 10.1.13.2 S 10.1.36.2 S
Jul 21 16:51:24 LabelRequest Len 8 EtherType 0x800
Jul 21 16:51:24 Properties Len 12 Primary path
Jul 21 16:51:24 SessionAttribute Len 16 Prio (7,0) flag 0x0 "R1-to-R5"
Jul 21 16:51:24 Sender7 Len 12 10.0.0.1(port/lsp ID 32)
Jul 21 16:51:24 Tspec Len 36 rate 0bps size 0bps peak Infbps m 20 M 1500
Jul 21 16:51:24 ADspec Len 48 MTU 1500
Jul 21 16:51:24 RecRoute Len 12 10.1.13.1
Jul 21 16:51:24 RSVP send Path 10.0.0.1->10.0.0.5 Len=208 so-0/0/3.0
Jul 21 16:51:24 Session7 Len 16 10.0.0.5(port/tunnel ID 11956) Proto 0
Jul 21 16:51:24 Hop Len 12 10.1.36.1/0x08680264
Jul 21 16:51:24 Time Len 8 30000 ms
Jul 21 16:51:24 SrcRoute Len 12 10.1.36.2 S
Jul 21 16:51:24 LabelRequest Len 8 EtherType 0x800
Jul 21 16:51:24 Properties Len 12 Primary path
Jul 21 16:51:24 SessionAttribute Len 16 Prio (7,0) flag 0x0 "R1-to-R5"
Jul 21 16:51:24 Sender7 Len 12 10.0.0.1(port/lsp ID 32)
Jul 21 16:51:24 Tspec Len 36 rate 0bps size 0bps peak Infbps m 20 M 1500
Jul 21 16:51:24 ADspec Len 48 MTU 1500
Jul 21 16:51:24 RecRoute Len 20 10.1.36.1 10.1.13.1
```

### Sample Output 2

```
user@R6> clear rsvp session

user@R6> clear log rsvp-log

user@R6> show log rsvp-log
Jul 21 17:01:21 R6 clear-log[41496]: logfile cleared
Jul 21 17:01:23 RSVP rcv Path 10.0.0.1->10.0.0.5 Len=208 so-0/0/3.0
Jul 21 17:01:23 Session7 Len 16 10.0.0.5(port/tunnel ID 11956) Proto 0
Jul 21 17:01:23 Hop Len 12 10.1.36.1/0x08680264
Jul 21 17:01:23 Time Len 8 30000 ms
Jul 21 17:01:23 SrcRoute Len 12 10.1.36.2 S
Jul 21 17:01:23 LabelRequest Len 8 EtherType 0x800
Jul 21 17:01:23 Properties Len 12 Primary path
Jul 21 17:01:23 SessionAttribute Len 16 Prio (7,0) flag 0x0 "R1-to-R5"
Jul 21 17:01:23 Sender7 Len 12 10.0.0.1(port/lsp ID 32)
```

```

Jul 21 17:01:23 Tspec Len 36 rate 0bps size 0bps peak Infbps m 20 M 1500
Jul 21 17:01:23 ADspec Len 48 MTU 1500
Jul 21 17:01:23 RecRoute Len 20 10.1.36.1 10.1.13.1
Jul 21 17:01:23 RSVP send Path 10.0.0.1->10.0.0.5 Len=204 so-0/0/0.0
Jul 21 17:01:23 Session7 Len 16 10.0.0.5(port/tunnel ID 11956) Proto 0
Jul 21 17:01:23 Hop Len 12 10.1.56.2/0x086f9000
Jul 21 17:01:23 Time Len 8 30000 ms
Jul 21 17:01:23 LabelRequest Len 8 EtherType 0x800
Jul 21 17:01:23 Properties Len 12 Primary path
Jul 21 17:01:23 SessionAttribute Len 16 Prio (7,0) flag 0x0 "R1-to-R5"
Jul 21 17:01:23 Sender7 Len 12 10.0.0.1(port/lsp ID 32)
Jul 21 17:01:23 Tspec Len 36 rate 0bps size 0bps peak Infbps m 20 M 1500
Jul 21 17:01:23 ADspec Len 48 MTU 1500
Jul 21 17:01:23 RecRoute Len 28 10.1.56.2 10.1.36.1 10.1.13.1

```

**Meaning** Sample Output 1 from transit router **R3** shows that **R3** ( **so-0/0/2.0**) correctly received a Path request message (**rcv Path**) from **R1**, and correctly sent the Path message (**send Path**) through interface **so-0/0/3.0** to **R6**. The route record object (**RecRoute**) indicates the list of addresses this Path message transited, in this case, **10.1.36.1** and **10.1.13.1**.

Sample Output 2 from transit router **R6** shows that **R6** (**so-0/0/3.0**) correctly received a Path request message (**rcv Path**) from **R3**, and correctly sent the Path message (**send Path**) through interface **so-0/0/0** to **R5**. The route record object (**RecRoute**) indicates the list of addresses this Path message transited, in this case, **10.1.56.2**, **10.1.36.1**, and **10.1.13.1**.

With the information above, the focus shifts to egress router **R5** as the source of the problem, with indications that **R5** ignored the RSVP message.

## Check the RSVP Log File on the Egress Router

**Purpose** After placing an RSVP tracing configuration on router **R5** similar to that on routers **R3** and **R6**, display the RSVP log file for useful information about the problem on router **R5**.

**Action** To check the RSVP log file, enter the following Junos OS CLI operational mode command:

```
user@host> show log rsvp-log
```

## Sample Output

```

user@R5> show log rsvp-log
Jul 21 10:53:16 R5 clear-log[40071]: logfile cleared
Jul 21 11:02:37 trace_on: Tracing to "/var/log/rsvp-log" started
Jul 21 11:03:07 RSVP error, send to DISABLED interface ? Hello New
10.1.56.1->10.1.56.2 Len=8 so-0/0/0.0

```

**Meaning** The sample output shows that **R5** did not receive the Path message because of a disabled interface, **so-0/0/0.0**.

## Determine and Correct the Problem on the Egress Router

**Problem Description:** Check the configuration of interface **so-0/0/0.0** on egress router **R5** to determine the reason it was disabled.



**Solution** To determine the problem on **R5**, enter the following Junos OS CLI commands:

```
user@R5> show configuration protocols rsvp
user@R5> edit
[edit protocols rsvp]
user@R5# rename interface so-0/0/3 to interface so-0/0/0
user@R5# show
user@R5# commit
user@R5# run show rsvp session ingress detail
```

**Sample Output 1**

```
user@R5> show configuration protocols rsvp
traceoptions {
    file rsvp-log;
    flag error detail;
    flag path detail;
    flag pathtear detail;
}
interface so-0/0/3.0;      <<< so-0/0/3 incorrectly included
interface so-0/0/1.0;
interface so-0/0/2.0;
interface fxp0.0 {
    disable;
}
```

**Sample Output 2**

```
[edit protocols rsvp]
user@R5# rename interface so-0/0/3 to interface so-0/0/0

[edit protocols rsvp]
user@R5# show
traceoptions {
    file rsvp-log;
    flag packets detail;
    flag error detail;
}
interface so-0/0/0.0;
interface so-0/0/1.0;
interface so-0/0/2.0;
interface fxp0.0 {
    disable;
}

[edit protocols rsvp]
user@R5# commit
commit complete
```

**Sample Output 3**

```
[edit protocols mpls]
user@R5# run show rsvp session ingress detail
Ingress RSVP: 1 sessions
To          From          State   Rt Style Labelin Labelout LSPname
10.0.0.1    10.0.0.5                Up      1 1 FF      -    103104 R5-to-R1
Total 1 displayed, Up 1, Down 0
Egress RSVP: 1 sessions
To          From          State   Rt Style Labelin Labelout LSPname
10.0.0.5    10.0.0.1    Up      0 1 FF      3    - R1-to-R5
Total 1 displayed, Up 1, Down 0

Transit RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

**Meaning** Sample Output 1 from egress router **R5** shows three interfaces configured at the `[edit protocols rsvp]` hierarchy level, non of which is **so-0/0/0.0**. On examination of the network topology, it is apparent that the **so-0/0/0.0** interface was configured incorrectly as **so-0/0/3.0**.

Sample Output 2 shows the correct configuration of interfaces at the `[edit protocols rsvp]` hierarchy level, and the **rename** command issued to correct the configuration error.

Sample Output 3 shows that the RSVP-signaled LSP (**R1-to-R5**) is correctly established after the changes to the RSVP configuration are committed.

## Check the Routing CPU Memory Usage

**Purpose** Software processes on the router can consume a considerable amount of CPU and memory. The routing protocol process (rpd) can consume enormous amounts of memory to store information needed for the operation of routing and related protocols, such as Border Gateway Protocol (BGP), Open Shortest Path First (OSPF), Intermediate System-to-Intermediate System (ISIS), Resource Reservation Protocol (RSVP), Label Distribution Protocol (LDP), and Multiprotocol Label Switching (MPLS).

To verify the traffic passing through the router and check memory utilization, follow these steps:

1. [Check Overall CPU and Memory Usage on page 1325](#)
2. [Check Routing Protocol Process \(rpd\) Memory Usage on page 1327](#)
3. [Display Tasks on page 1330](#)

## Check Overall CPU and Memory Usage

**Purpose** You can display exhaustive system process information about software processes that are running on the router and have controlling terminals. This command is equivalent to the UNIX **top** command. However, the UNIX **top** command shows real-time memory usage, with the memory values constantly changing, while the **show system processes extensive** command provides a snapshot of memory usage in a given moment.

**Action** To check overall CPU and memory usage, enter the following Junos OS command-line interface (CLI) command:

```
user@host> show system processes extensive
```

## Sample Output

```
user@R1> show system processes extensive
last pid: 5251; load averages: 0.00, 0.00, 0.00 up 4+20:22:16 10:44:41
58 processes: 1 running, 57 sleeping
Mem: 57M Active, 54M Inact, 17M Wired, 184K Cache, 35M Buf, 118M Free
Swap: 512M Total, 512M Free
  PID USERNAME PRI NICE  SIZE  RES STATE   TIME  WCPU   CPU COMMAND
  4480 root         2   0 3728K 1908K select 231:17 2.34% 2.34% chassisd
  4500 root         2   0 1896K  952K select   0:36 0.00% 0.00% fud
  4505 root         2   0 1380K  736K select   0:35 0.00% 0.00% irsd
  4481 root         2   0 1864K  872K select   0:32 0.00% 0.00% alarmd
  4488 root         2   0 8464K 4600K kqread 0:28 0.00% 0.00% rpd
  4501 root         2  -15 1560K  968K select   0:21 0.00% 0.00% ppsmd
  4510 root         2   0 1372K  812K select   0:13 0.00% 0.00% bfdd
    5 root        18   0    0K    0K syncer   0:09 0.00% 0.00% syncer
  4485 root         2   0 3056K 1776K select   0:07 0.00% 0.00% snmpd
  4499 root         2   0 3688K 1676K select   0:05 0.00% 0.00% kmd
  4486 root         2   0 3760K 1748K select   0:05 0.00% 0.00% mib2d
  4493 root         2   0 1872K  928K select   0:03 0.00% 0.00% pfed
  4507 root         2   0 1984K 1052K select   0:02 0.00% 0.00% fsad
  4518 root         2   0 3780K 2400K select   0:02 0.00% 0.00% dcd
```

|      |        |     |     |        |        |        |      |       |       |                |
|------|--------|-----|-----|--------|--------|--------|------|-------|-------|----------------|
| 8    | root   | -18 | 0   | 0K     | 0K     | psleep | 0:02 | 0.00% | 0.00% | vmuncachedaemo |
| 4    | root   | -18 | 0   | 0K     | 0K     | psleep | 0:02 | 0.00% | 0.00% | bufdaemon      |
| 4690 | root   | 2   | 0   | 0K     | 0K     | peer_s | 0:01 | 0.00% | 0.00% | peer proxy     |
| 4504 | root   | 2   | 0   | 1836K  | 968K   | select | 0:01 | 0.00% | 0.00% | dfwd           |
| 4477 | root   | 2   | 0   | 992K   | 320K   | select | 0:01 | 0.00% | 0.00% | watchdog       |
| 4354 | root   | 2   | 0   | 1116K  | 604K   | select | 0:01 | 0.00% | 0.00% | syslogd        |
| 4492 | root   | 10  | 0   | 1004K  | 400K   | nanslp | 0:01 | 0.00% | 0.00% | tnp.sn timer   |
| 4446 | root   | 10  | 0   | 1108K  | 616K   | nanslp | 0:01 | 0.00% | 0.00% | cron           |
| 4484 | root   | 2   | 0   | 15716K | 7468K  | select | 0:01 | 0.00% | 0.00% | mgd            |
| 4494 | root   | 2   | 15  | 2936K  | 2036K  | select | 0:01 | 0.00% | 0.00% | sampled        |
| 5245 | remote | 2   | 0   | 8340K  | 3472K  | select | 0:01 | 0.00% | 0.00% | cli            |
| 2    | root   | -18 | 0   | 0K     | 0K     | psleep | 0:00 | 0.00% | 0.00% | pagedaemon     |
| 4512 | root   | 2   | 0   | 2840K  | 1400K  | select | 0:00 | 0.00% | 0.00% | l2tpd          |
| 1    | root   | 10  | 0   | 852K   | 580K   | wait   | 0:00 | 0.00% | 0.00% | init           |
| 5244 | root   | 2   | 0   | 1376K  | 784K   | select | 0:00 | 0.00% | 0.00% | telnetd        |
| 4509 | root   | 10  | 0   | 1060K  | 528K   | nanslp | 0:00 | 0.00% | 0.00% | eccd           |
| 4508 | root   | 2   | 0   | 2264K  | 1108K  | select | 0:00 | 0.00% | 0.00% | spd            |
| 2339 | root   | 10  | 0   | 514M   | 17260K | mfsidl | 0:00 | 0.00% | 0.00% | newfs          |
| 4497 | root   | 2   | 0   | 2432K  | 1152K  | select | 0:00 | 0.00% | 0.00% | cosd           |
| 4490 | root   | 2   | -15 | 2356K  | 1020K  | select | 0:00 | 0.00% | 0.00% | apsd           |
| 4496 | root   | 2   | 0   | 2428K  | 1108K  | select | 0:00 | 0.00% | 0.00% | rmopd          |
| 4491 | root   | 2   | 0   | 2436K  | 1104K  | select | 0:00 | 0.00% | 0.00% | vrpd           |
| 4487 | root   | 2   | 0   | 15756K | 7648K  | sbwait | 0:00 | 0.00% | 0.00% | mgd            |
| 5246 | root   | 2   | 0   | 15776K | 8336K  | select | 0:00 | 0.00% | 0.00% | mgd            |
| 0    | root   | -18 | 0   | 0K     | 0K     | sched  | 0:00 | 0.00% | 0.00% | swapper        |
| 5251 | root   | 30  | 0   | 21732K | 840K   | RUN    | 0:00 | 0.00% | 0.00% | top            |
| 4511 | root   | 2   | 0   | 1964K  | 908K   | select | 0:00 | 0.00% | 0.00% | pgmd           |
| 4502 | root   | 2   | 0   | 1960K  | 956K   | select | 0:00 | 0.00% | 0.00% | lmpd           |
| 4495 | root   | 2   | 0   | 1884K  | 876K   | select | 0:00 | 0.00% | 0.00% | ilmid          |
| 4482 | root   | 2   | 0   | 1772K  | 776K   | select | 0:00 | 0.00% | 0.00% | craftd         |
| 4503 | root   | 10  | 0   | 1040K  | 492K   | nanslp | 0:00 | 0.00% | 0.00% | smartd         |
| 6    | root   | 28  | 0   | 0K     | 0K     | sleep  | 0:00 | 0.00% | 0.00% | netdaemon      |
| 4498 | root   | 2   | 0   | 1736K  | 932K   | select | 0:00 | 0.00% | 0.00% | nasd           |
| 4506 | root   | 2   | 0   | 1348K  | 672K   | select | 0:00 | 0.00% | 0.00% | rtspd          |
| 4489 | root   | 2   | 0   | 1160K  | 668K   | select | 0:00 | 0.00% | 0.00% | inetd          |
| 4478 | root   | 2   | 0   | 1108K  | 608K   | select | 0:00 | 0.00% | 0.00% | tnetd          |
| 4483 | root   | 2   | 0   | 1296K  | 540K   | select | 0:00 | 0.00% | 0.00% | ntpd           |
| 4514 | root   | 3   | 0   | 1080K  | 540K   | ttyin  | 0:00 | 0.00% | 0.00% | getty          |
| 4331 | root   | 2   | 0   | 416K   | 232K   | select | 0:00 | 0.00% | 0.00% | pccardd        |
| 7    | root   | 2   | 0   | 0K     | 0K     | pfeacc | 0:00 | 0.00% | 0.00% | if_pfe_listen  |
| 11   | root   | 2   | 0   | 0K     | 0K     | picacc | 0:00 | 0.00% | 0.00% | if_pic_listen  |
| 3    | root   | 18  | 0   | 0K     | 0K     | psleep | 0:00 | 0.00% | 0.00% | vmdaemon       |
| 9    | root   | 2   | 0   | 0K     | 0K     | scs_ho | 0:00 | 0.00% | 0.00% | scs_housekeepi |
| 10   | root   | 2   | 0   | 0K     | 0K     | cb-pol | 0:00 | 0.00% | 0.00% | cb_poll        |

**Meaning** The sample output shows the amount of virtual memory used by the Routing Engine and software processes. For example, 118 MB of physical memory is free and 512 MB of the swap file is free, indicating that the router is not short of memory. The **processes** field shows that most of the 58 processes are in the **sleeping** state, with 1 in the **running** state. The process or command that is running is the **top** command.

The **commands** column lists the processes that are currently running. For example, the chassis process (chassisd) has a process identifier (**PID**) of 4480, with a current priority (**PRI**) of 2. A lower priority number indicates a higher priority.

The processes are listed according to level of activity, with the most active process at the top of the output. For example, the chassis (chassisd) process is consuming the largest amount of CPU resource at 2.34 percent.

The memory field (**Mem**) shows the virtual memory managed by the Routing Engine and used by processes. The value in the memory field is in KB and MB, and is broken down as follows:

- **Active**—Memory that is allocated and actually in use by programs.
- **Inact**—Memory that is either allocated but not recently used or memory that was freed by programs. Inactive memory is still mapped in the address space of one or more processes and, therefore, counts toward the resident set size of those processes.
- **Wired**—Memory that is not eligible to be swapped, and is usually used for Routing Engine memory structures or memory physically locked by a process.
- **Cache**—Memory that is not associated with any program and does not need to be swapped before being reused.
- **Buf**—The size of the memory buffer used to hold data recently called from disk.
- **Free**—Memory that is not associated with any programs. Memory freed by a process can become **Inactive**, **Cache**, or **Free**, depending on the method used by the process to free the memory.

When the system is under memory pressure, the pageout process reuses memory from the free, cache, inactive and, if necessary, active pages.

The **Swap** field shows the total swap space available and how much is unused. In the example, the output shows 512 MB of total swap space and 512 MB of free swap space.

Finally, the memory usage of each process is listed. The **SIZE** field indicates the size of the virtual address space, and the **RES** field indicates the amount of the program in physical memory, which is also known as RSS or Resident Set Size. In the sample output, the chassis (chassisd) process has 3728 KB of virtual address space and 1908 KB of physical memory.

## Check Routing Protocol Process (rpd) Memory Usage

**Purpose** When you notice a lot of memory usage, you can obtain detailed information about the memory utilization of routing tasks to get an idea of what is going on. The routing process (rpd) is the main task that uses Routing Engine memory.

**Action** To check routing process memory usage, enter the following Junos OS CLI operational mode commands:

```
user@host> show route summary
user@host> show task memory detail
```

## Sample Output

```
user@host> show route summary
Autonomous system number: 209
Router ID: 205.175.0.170
inet.0: 179783 destinations, 898393 routes (179771 active, 146 holddown, 157
hidden)
      Direct:    17 routes,    17 active
      Local:    18 routes,    18 active
```

```

      BGP: 896632 routes, 178010 active
      Static: 32 routes, 31 active
      IS-IS: 1694 routes, 1694 active
inet.2: 8766 destinations, 22700 routes (8766 active, 124 holddown, 73 hidden)
      Direct: 17 routes, 17 active
      Local: 18 routes, 18 active
      BGP: 20939 routes, 7006 active
      Static: 32 routes, 31 active
      IS-IS: 1694 routes, 1694 active
inet.3: 1614 destinations, 1719 routes (1614 active, 0 holddown, 0 hidden)
      IS-IS: 1613 routes, 1551 active
      RSVP: 45 routes, 45 active
      LDP: 61 routes, 18 active
iso.0: 1 destinations, 1 routes (1 active, 0 holddown, 0 hidden)
      Direct: 1 routes, 1 active
mpls.0: 371 destinations, 371 routes (371 active, 0 holddown, 0 hidden)
      MPLS: 3 routes, 3 active
      RSVP: 303 routes, 303 active
      LDP: 65 routes, 65 active

```

user@R1> show task memory detail

```

----- Overall Memory Report -----
Size TP   Allocs  Mallocs  AllocBytes  MaxAllocs  MaxBytes  FreeBytes
12      8140    186959    2341188    200824     2409888    54972
16      4061    182       67888     4586      73376     5840
16 T    -       -         -         393571    6297136   -
20      688588  51       13772780  713704    14274080  423956
[...Output truncated...]
8192 P   91      -         745472    195      1597440   -
12288 P  -       -         -         1        12288     -
block   5      -         137200    14       137732    6160
pool    50     -         896       100      1792     3200
alloc   -      8        383744    10       397365    9472
-----
389169664 578341705 72977920
----- Allocator Memory Report -----
Name          Size Alloc DTP   Alloc  Alloc  Alloc  MaxAlloc  MaxAlloc
              Size      Blocks Bytes Blocks Bytes
patricia_root_struct  8 12      7741  92892  8130  97560
sockaddr_un.i802     8 12        2    24    2    24
sockaddr_un.tag      8 12      371   4452  995  11940
if_addr_entry        8 12        -    -    1    12
gw_entry_list         8 12        1    12    1    12
isis_proto_list       8 12        25   300   30   360
struct krt_scb        12 16        4    64    6    96
ldp_rt_data           12 16        61   976  133  2128
config_list           12 16      2353  37648 2353  37648
TED NodeInfo          12 16        845  13520 907  14512
isis_area_addr       12 16      544  8704  612  9792
isis_nh_list          12 16      237   3792  922  14752
isis_tsi              12 16       17    272   19   304
bgp_use_block         12 16        -    -   112  1792
isis_route_walk_cont  12 16 T      -    -    1    16
bgpg_rtinfo_entry     12 16 T      -    -  393571 6297136
task_floating_socket  16 20        1    20    1    20
[...Output truncated...]
rt_parse_memory      4092 4096 TP      -    -    1    4096
noblock_buffer_blk   4092 4096 TP      5  20480  811  3321856
bgp_buffer           4100 8192 P      91  745472  100  819200
bgp_outbuf           4104 8192 P      -    -    94  770048
ldp_buffer           4108 8192 P      -    -    7   57344

```

```

RPD SNMP          8268 12288 P    -    -    1    12288
LDP config        various      1    896    1    896
-----
                                     349037508      543172620
-----
MALLOC Usage Report
-----
Name              Allocs    Bytes  MaxAllocs  MaxBytes  FuncCalls
MGMT.local        1         12         1         12         1
RSVP              -          -         1        2048      156084
BGP_Group_Tweak-RTClie
[...Output truncated...]
LDP               2         24         2         24         2
KRT Request       -          -         1         16      446888
BGP_Group_Packet-Design
[...Output truncated...]
MPLS              22272    1221656    22274    1221784    228522
BGP.0.0.0.0+179   186419    2237028    192292    2307504    282141191
IS-IS I/O./var/run/ppmd
IS-IS            2407     361372     5887     446076    889294754
BGP_RT_Background 3         66556         3         66556         3
SNMP_Subagent./var/run/
KRT               2        205616         3        207900         10
ASPaths           13901    1581544    18023    2067605    293868769
RT                27         556         28         580         2815
Scheduler         194        2604        199        2684        41382
--Anonymous--     4294944918 4293764616 4294967294 4294967292 45560848
--System--        38565    35474324    38684    35487048    235115763
-----
                                     40015436      41923181
Dynamically allocated memory: 485789696      Maximum: 541736960
Program data+BSS memory:    2101248      Maximum: 2101248
Page data overhead:         3039232      Maximum: 3039232
Page directory size:         512000      Maximum: 512000
-----
Total bytes in use: 491442176 (70% of available memory)

```

**Meaning** The sample output shows summary statistics about the entries in the routing table (**show route summary** command) and the memory usage breakdown (**show task memory detail** command) for the routing process (rpd). The two commands provide a comprehensive picture of the memory utilization of the routing protocol process.

The **show route summary** command shows the number of routes in the various routing tables. In the sample output, the routing tables represented are **inet.0**, **inet.2**, **inet.3**, **iso.0**, and **mpls.0**. Within each routing table, all of the active, hold-down, and hidden destinations and routes are summarized for all the protocols from which routes are learned. Routes are in the **hold-down** state prior to being declared inactive, and **hidden** routes are not used because of routing policy. Routes in the **hold-down** and **hidden** states are still using memory because they appear in the routing table.

In addition, routes are summarized in the following categories: those directly connected to the network (**Direct**), local routes (**Local**), and routes learned from configured routing protocols, such as BGP and IS-IS.

The **show task memory detail** command lists the data structures within the tasks run by the routing protocol process (rpd). Tasks are enabled depending on the router's configuration. For example, **isis\_area\_addr** is a data structure resulting from the IS-IS configuration. The **AllocBytes** field indicates the highest amount of memory used by the

data structure. For example, the `isis_area_addr` data structure has 544 blocks of allocated memory, each block is allocated a value of 16 bytes, resulting in allocated bytes of 8704. The maximum allocated blocks and bytes are high-water marks for a data structure. For more information on displaying task-related information, see [“Display Tasks” on page 1330](#).

The **Total bytes in use** field shows the total amount of memory used by the routing protocol process (rpd).

## Display Tasks

**Purpose** You can display information about tasks to further your investigation of a memory problem on the router.

**Action** To display a list of tasks that are enabled on the router, enter the following Junos OS CLI operational mode commands:

```
user@host> show task
user@host> show task memory
user@host> show task task-name
```

## Sample Output

```
user@R1> show task
Pri Task Name                               Pro  Port So  Flags
10 LMP Client                               17  <>
10 IF
15 INET6
15 INET
15 ISO
15 Memory
20 RPD Unix Domain Server./var/run/rpd_serv.local 21  <>
20 RPD Unix Domain Server./var/run/rpd_serv.local 20  <>
20 RPD Unix Domain Server./var/run/rpd_serv.local 19  <>
20 RPD Unix Domain Server./var/run/rpd_server_communication 16  <Accept>
20 RPD Server.0.0.0.0+666                    666 15  <Accept>
20 Aggregate
20 RT
30 ICMP                                     1
30 Router-Advertisement
30 ICMPv6                                  58  9  <>
39 OSPFv2 I/O./var/run/ppmd_control          12  <>
40 l2vpn global task
40 BGP RT Background                        <LowPrio>
40 BGP.::+179                              179 23  <Accept LowPrio>
40 BGP.0.0.0.0+179                          179 22  <Accept LowPrio>
40 BFD I/O./var/run/bfdd_control             11  <>
40 OSPF                                     89
50 BGP_65001.10.0.0.5+3531                  3531 18  <LowPrio>
50 BGP_65002.10.1.12.2+1224                 1224 25  <LowPrio>
50 BGP_Group_internal                       <LowPrio>
50 BGP_Group_toR2                           <LowPrio>
50 TED
50 ASPaths
51 Resolve inet.0                           <LowPrio>
60 KStat                                    13  <>
60 KRT Request                              7  <>
60 KRT Ifstate                             255  6  <>
```



```

60 KRT                                     255 5 <>
60 Redirect
70 MGMT.local                             24 <>
70 MGMT_Listen./var/run/rpd_mgmt          14 <Accept>
70 SNMP Subagent./var/run/snmpd_stream    10 <>
80 IF Delete

user@R1> show task memory
Memory                               Size (kB)  Percentage  When
Currently In Use:                     3490      1%         now
Maximum Ever Used:                     3535      1%         04/02/04 11:54:46
Available:                             220623    100%       now

user@R1> show task io
Task Name                               Reads  Writes  Rcvd    Sent  Dropped
LMP Client                               1      1        0      0      0
IF   0      0        0      0      0
INET6                                     0      0        0      0      0
INET                                       0      0        0      0      0
ISO  0      0        0      0      0
Memory                                    0      0        0      0      0
RPD Unix Domain Server./var/ru           1      0        0      0      0
RPD Unix Domain Server./var/ru           1      0        0      0      0
RPD Unix Domain Server./var/ru           0      0        0      0      0
RPD Unix Domain Server./var/ru           3      0        0      0      0
RPD Server.0.0.0.0+666                    0      0        0      0      0
Aggregate                                0      0        0      0      0
RT   0      0        0      0      0
ICMP                                       0      0        0      0      0
Router-Advertisement                      0      0        0      0      0
ICMPv6                                    0      0        0      0      0
OSPFv2 I/O./var/run/ppmd_contr           31167   1        0      0      0
12vpn global task                         0      0        0      0      0
BGP RT Background                        0      0        0      0      0
BGP.::+179                               0      0        0      0      0
BGP.0.0.0.0+179                           8      0        0      0      0
BFD I/O./var/run/bfdd_control             30731   1        0      0      0
OSPF                                       0      0        0      0      0
BGP_65001.10.0.0.5+3531                   20486   0        0      0      0
BGP_65002.10.1.12.2+1224                  20489   6        0      0      0
BGP_Group_internal                        0      0        0      0      0
BGP_Group_toR2                           0      0        0      0      0
TED  0      0        0      0      0
ASPaths                                   0      0        0      0      0
Resolve inet.0                           0      0        0      0      0
KStat                                     0      0        0      0      0
KRT Request                              0      0       57      0      0
KRT Ifstate                              18      0       16      0      0
KRT  0      0        2      0      0
Redirect                                  0      0        0      0      0
MGMT.local                                0      0        0      0      0
MGMT_Listen./var/run/rpd_mgmt             23      0        0      0      0
SNMP Subagent./var/run/snmpd_s            23      0        0      0      0
IF Delete                                 0      0        0      0      0

```

**Meaning** The sample output shows a list of routing, routing protocol, and interface tasks that are currently running on the router (**show task**), a summary of memory utilization (**show task memory**), and the memory utilization of a particular task (**show task io**). Tasks can be baseline tasks performed regardless of the router configuration, and other tasks that depend on the router configuration. For example, the **BGP\_Group\_internal** task is the result

of the configuration of BGP on the router, while the **INET6** task is a base task associated with the routing process (rpd).

Each task in the **show task** command output has a priority and a task name. For example, the current priority is 10 for **LMP Client** and 80 for **IF Delete**. A lower number indicates a higher priority.

Some tasks have flags attached to them. For example, the **BGP.0.0.0.0+179** task has two flags, **Accept** and **LowPrio**. The **Accept** flag indicates that the task is waiting for incoming connections, and the **LowPrio** flag indicates that the task will be dispatched to read its socket after other, higher priority tasks. Two additional flags are **Connect**, which indicates that a task is waiting for a connection to complete, and **Delete**, which indicates that a task has been deleted and is being cleaned up.

The **show task io** command shows the statistics gathered for each IO operation. The counters show the following:

- **Reads**—This counter increments when a datagram arrives on a connected socket of the task and the task's read callback is called.
- **Writes**—This counter increments when a connected socket of a task becomes writable and the task's callback is called.
- **Rcvd**—This counter increments when the task calls the Routing Engine to read a datagram from a socket which may or may not be connected.
- **Sent**—This counter increments when a task attempts to read or write a datagram on an existing or nonexisting socket.
- **Drops**—This counter increments when a task attempts to read or write a datagram through the Routing Engine on a prebuilt socket, but the request fails for any reason.

---

## Run Snmpwalk from an NMS System to a Juniper Router

---

**Purpose** Snmpwalk is an SNMP application that you can use to query a MIB for information about the functioning of a router in your network. Snmpwalk uses **GetNext** requests to retrieve the specified information. Object identifiers (OIDs) are used to query the MIB. If the OID argument is not present, Snmpwalk searches MIB-2.

**Action** To run Snmpwalk for a specific OID, from a management station that has access to the router, and using a tool such as Snmpwalk, enter the following command:

```
user-nms# snmpwalk [common arguments] hostname community object-id
```

**Sample Output**

```

user-nms % snmpwalk -Os -M /volume/~ /mibs -m all tp1 public .1.3.6.1.2.1.4
ipForwarding.0 = forwarding(1)
ipDefaultTTL.0 = 64
ipInReceives.0 = Counter32: 9262713
ipInHdrErrors.0 = Counter32: 0
ipInAddrErrors.0 = Counter32: 0
ipForwDatagrams.0 = Counter32: 614171
ipInUnknownProtos.0 = Counter32: 0
ipInDiscards.0 = Counter32: 0
ipInDelivers.0 = Counter32: 8648408
ipOutRequests.0 = Counter32: 1226483
ipOutDiscards.0 = Counter32: 0
ipOutNoRoutes.0 = Counter32: 0
ipReasmTimeout.0 = 60
ipReasmReqds.0 = Counter32: 0
ipReasmOKs.0 = Counter32: 0
ipReasmFails.0 = Counter32: 0
ipFragOKs.0 = Counter32: 0
ipFragFails.0 = Counter32: 0
ipFragCreates.0 = Counter32: 0
ipAdEntAddr.10.0.0.1 = IPAddress: 10.0.0.1
ipAdEntAddr.10.1.12.1 = IPAddress: 10.1.12.1
ipAdEntAddr.10.1.15.1 = IPAddress: 10.1.15.1
ipAdEntAddr.10.168.70.143 = IPAddress: 10.168.70.143
[...Output truncated...]

```

**Meaning** The sample output shows that the user is on a network management station (**user-nms** %) that has access to the router, **tp1**. In the command, the following options are used:

- **Os**—Deletes all but the last symbolic part of the OID **sysUpTime.0**. For example, Timeticks: (14096763) 1 day, 15:09:27.63.
- **-M**—Compiles the MIB and gives a path or location to the MIBs.
- **-m**—Uses the files in the directory pointed to by the **-M** option.
- **all**—Uses all the files in the directory pointed to by the **-M** option.

In addition, the command includes the hostname **tp1**, the community string **public**, and the OID **.1.3.6.1.2.1.4**.

The OID in this example is from RFC 2096, *IP Forwarding Table MIB*, which displays multipath IP routes that have the same network number but different network masks.

Before you can retrieve SNMP information from a router, you must have the minimum SNMP configuration for that router. Following is the minimum SNMP configuration required:

```

[edit]
snmp {
  community public {
    authorization read-only;
  }
}

```

With this configuration, the system responds to SNMP **Get**, **GetNext**, and **GetBulk** commands that contain the community string **public**.

For more detailed information on configuring SNMP on a router, see the *Junos Network Management Configuration Guide*.

---

## Configure Trace Operations for SNMP

---

**Purpose** Define tracing for SNMP to access more granular information about the packets sent and received through SNMP.

**Action** To configure SNMP tracing operations, follow these steps:

1. In configuration mode, go to the following hierarchy level:

```
[edit]
user@R1# edit snmp
```

2. Configure trace operations:

```
[edit snmp]
user@R1# set traceoptions flag pdu
```

3. Commit the configuration:

```
user@R1# commit and-quit
commit complete
Exiting configuration mode
```

**Sample Output**

```
user@R1> show configuration snmp
view all {
    oid .1 include;
}
view system {
    oid system;
}
community public {
    view all;
    authorization read-only;
}
community private {
    view system;
    authorization read-write;
}
traceoptions {
    flag pdu;
}
```

**Meaning** The sample output shows a configuration for SNMP that includes traceoptions. The **pdu** flag is configured, which results in the generation of SNMP request and response packets. The output for the tracing operation is placed into various log files in the **/var/log** directory.

Protocol-specific tracing operations override any equivalent operations that you specify in the global **traceoptions** statement. If there are no equivalent operations, they supplement the global tracing options. If you do not specify any protocol-specific tracing, the routing protocol inherits all the global tracing operations.

---

## Query a MIB With SNMPGet

---

**Purpose** Send an SNMP request to check that the SNMP configuration is correct.

**Action** To query a MIB with **SNMPGet**, enter the following command:

```
user@nms % snmpget hostname community oid
```

### Sample Output

```
user-nms % snmpget tp1 public .1.3.6.1.2.1.1.0  
system.sysDescr.0 = m7i internet router, kernel 6.0R1.5
```

```
user-nms % snmpget tp1 public sysDescr.0  
system.sysDescr.0 = m7i internet router, kernel 6.0R1.5
```

**Meaning** The sample output shows a query from a network management station (**nms**) for the description of the system running on the router **tp1**. The OID is entered in numerical form in the command line, and a description (**sysDescr.0**) is obtained in the output. You can also use **sysDescr.0** in the command line to obtain the same output.

---

## Check CPU Utilization

---

**Purpose** The enterprise-specific chassis MIB provides information about the router and its components. Within the chassis MIB, the **jnxMIBs** branch contains one main subbranch, **jnxBoxAnatomy**, which in turn contains a section, **jnxOperatingTable**. Within **jnxOperatingTable**, and under the **jnxOperatingEntry**, you can use the **jnxOperatingCPU** object to monitor the CPU on your router. (See [Figure 127 on page 1336](#).)

Figure 127: Chassis MIB Tree

```

+--juniperMIB(2636)¶
|  +--jnxProducts(1)¶
|  +--jnxServices(2)¶
|  +--jnxMibs(3)¶
|  |  +--jnxBoxAnatomy(1)¶
|  |  |  +--jnxContainersTable(6) ¶
|  |  |  +--jnxContentsTable(8)¶
|  |  |  +--jnxLEDTTable(10)¶
|  |  |  +--jnxFilledTable(12)¶
|  |  |  +--jnxOperatingTable(13)¶
|  |  |  |  +--jnxOperatingEntry(1)¶
|  |  |  |  |  +-- jnxOperatingContentsIndex(1)¶
|  |  |  |  |  +-- jnxOperatingL1Index(2)¶
|  |  |  |  |  +-- jnxOperatingL2Index(3)¶
|  |  |  |  |  +-- jnxOperatingL3Index(4)¶
|  |  |  |  |  +-- jnxOperatingDescr(5)¶
|  |  |  |  |  +-- jnxOperatingState(6)¶
|  |  |  |  |  +-- jnxOperatingTemp(7)¶
|  |  |  |  |  +-- jnxOperatingCPU(8)¶
|  |  |  |  |  +-- jnxOperatingISR(9)¶
|  |  |  |  |  +-- jnxOperatingDRAMSize(10)¶
|  |  |  |  |  +-- jnxOperatingBuffer(11)¶
|  |  |  |  |  +-- jnxOperatingHeap(12)¶
|  |  |  |  |  +-- jnxOperatingUpTime(13)¶
|  |  |  |  |  +-- jnxOperatingLastRestart(14)¶
|  |  |  |  |  +-- jnxOperatingMemory(15)¶
|  |  |  |  |  +-- jnxOperatingStateOrdered(16)¶
|  |  |  +--jnxRedundancyTable(14)¶
|  |  +--jnxFruTable(15)¶

```

After each object description is a value in parenthesis, such as (1). This value can be used to enter an OID for the specific object. For example, to gather information on the CPU, you can type the object description (**jnxOperatingCPU**) or the OID (.1.3.6.1.4.1.2636.3.1.13.1.8).

**Action** To check CPU utilization using the Juniper Networks enterprise chassis MIB, from a management station that has access to the router, and using a tool such as Snmpwalk, enter the following command:

```
user-bsd# snmpwalk [common arguments] hostname community object-id
```

## Sample Output

```

user-nms % snmpwalk -Os -M /volume/~ /mibs -m all tp1 public jnxOperatingCPU
jnxOperatingCPU.1.1.1.0 = Gauge32: 0
jnxOperatingCPU.1.1.2.0 = Gauge32: 0
jnxOperatingCPU.1.1.3.0 = Gauge32: 0
jnxOperatingCPU.2.1.0.0 = Gauge32: 0
jnxOperatingCPU.4.1.1.0 = Gauge32: 0
jnxOperatingCPU.4.1.2.0 = Gauge32: 0
jnxOperatingCPU.4.1.3.0 = Gauge32: 0
jnxOperatingCPU.4.1.4.0 = Gauge32: 0
jnxOperatingCPU.6.1.1.0 = Gauge32: 224
jnxOperatingCPU.6.1.2.0 = Gauge32: 224
jnxOperatingCPU.7.1.0.0 = Gauge32: 2
jnxOperatingCPU.7.2.0.0 = Gauge32: 2
jnxOperatingCPU.8.1.1.0 = Gauge32: 0
jnxOperatingCPU.8.2.3.0 = Gauge32: 0

```

```

jnxOperatingCPU.8.2.4.0 = Gauge32: 0
jnxOperatingCPU.9.1.0.0 = Gauge32: 6
jnxOperatingCPU.9.1.1.0 = Gauge32: 0

user-nms % snmpwalk -Os -M /volume/~ /mibs -m all tp1 public jnxOperatingDesc
jnxOperatingDescr.1.1.1.0 = midplane
jnxOperatingDescr.1.1.2.0 = midplane
jnxOperatingDescr.1.1.3.0 = midplane
jnxOperatingDescr.2.1.0.0 = Power Supply A
jnxOperatingDescr.4.1.1.0 = Left Tray front fan
jnxOperatingDescr.4.1.2.0 = Left Tray second fan
jnxOperatingDescr.4.1.3.0 = Left Tray third fan
jnxOperatingDescr.4.1.4.0 = Left Tray fourth fan
jnxOperatingDescr.6.1.1.0 = CFEB Internet Processor IIv1
jnxOperatingDescr.6.1.2.0 = CFEB Internet Processor IIv1
jnxOperatingDescr.7.1.0.0 = FPC @ 0/*/*
jnxOperatingDescr.7.2.0.0 = FPC @ 1/*/*
jnxOperatingDescr.8.1.1.0 = PIC: 4x OC-3 SONET, MM @ 0/0/*
jnxOperatingDescr.8.2.3.0 = PIC: 1x Tunnel @ 1/2/*
jnxOperatingDescr.8.2.4.0 = PIC: 1x G/E, 1000 BASE-SX @ 1/3/*
jnxOperatingDescr.9.1.0.0 = Routing Engine
jnxOperatingDescr.9.1.1.0 = Routing Engine PCMCIA Card

```

**Meaning** The sample output shows the percentage CPU utilization on router, **tp1**. The Routing Engine (**9.1.0.0**) has 6 percent CPU utilization, the two CFEB Internet Processors IIv1 (**6.1.1.0** and **6.1.2.0**) have 22 percent each, and the FPCs (**7.1.0.0** and **7.2.0.0**) have 2 percent each. Components with a value of zero indicate that the information is either unavailable or inapplicable.

The output for the **jnxOperatingDesc** object provides a description of the separate instances in the **jnxOperatingCPU** object. For example, **9.1.0.0** represents the Routing Engine.

## Check CPU Utilization per Process

**Purpose** The standard system application MIB (RFC 2287, *Definitions of System-Level Managed Objects for Applications*), describes a set of managed objects that are restricted to information that can be determined from the system itself. The object **sysAppElmtRunCPU** provides information about applications and associated elements that have run or are currently running on the host system. (See [Figure 128 on page 1338](#).)

### Figure 128: System Application MIB Tree

```

+--System: Application MIB
|   +--sysAppIOBJ
|   +--sysAppInstalled
|   +--sysAppRun
|   +--sysAppMap
|   +--sysAppNotifications
|   +--sysAppConformance
|       +--sysAppMIBCompliances
|       +--sysAppMIBGroups
|           +--sysAppRunGroup
|               +--sysAppRunStarted
|               +--sysAppRunCurrentState
|               +--sysAppRunPastRunStarted
|               +--sysAppRunPastRunExitState
|               +--sysAppRunPastRunTimeEnded
|               +--sysAppElmtRunInstallID
|               +--sysAppElmtRunTimeStarted
|               +--sysAppElmtRunState
|               +--sysAppElmtRunName
|               +--sysAppElmtRunParameters
|               +--sysAppElmtRunCPU
|               +--sysAppElmtRunMemory
|               +--sysAppElmtRunNumFiles
|               +--sysAppElmtRunUser
[...Output Truncated...]

```

**Action** To check CPU utilization per process, from a management station that has access to the router, and using a tool such as Snmpwalk, enter the following command:

```
user-bsd# snmpwalk [common arguments] hostname community object-id
```

## Sample Output

```

use-nms % snmpwalk -Os -M /volume/~ /mibs -m all tp1 public sysAppElmtRunCPU
sysAppElmtRunCPU.0.0.0 = Timeticks: (278) 0:00:02.78
sysAppElmtRunCPU.0.0.2 = Timeticks: (487) 0:00:04.87
sysAppElmtRunCPU.0.0.3 = Timeticks: (0) 0:00:00.00
sysAppElmtRunCPU.0.0.4 = Timeticks: (1742) 0:00:17.42
sysAppElmtRunCPU.0.0.5 = Timeticks: (13899) 0:02:18.99
sysAppElmtRunCPU.0.0.6 = Timeticks: (79) 0:00:00.79
sysAppElmtRunCPU.0.0.7 = Timeticks: (0) 0:00:00.00
sysAppElmtRunCPU.0.0.8 = Timeticks: (0) 0:00:00.00
sysAppElmtRunCPU.0.0.9 = Timeticks: (0) 0:00:00.00
sysAppElmtRunCPU.0.0.10 = Timeticks: (2229) 0:00:22.29
sysAppElmtRunCPU.0.0.11 = Timeticks: (0) 0:00:00.00
sysAppElmtRunCPU.0.0.12 = Timeticks: (0) 0:00:00.00
sysAppElmtRunCPU.0.0.116 = Timeticks: (25) 0:00:00.25
sysAppElmtRunCPU.0.0.2023 = Timeticks: (0) 0:00:00.00
sysAppElmtRunCPU.0.0.2131 = Timeticks: (1103) 0:00:11.03
sysAppElmtRunCPU.0.0.2160 = Timeticks: (1599) 0:00:15.99
sysAppElmtRunCPU.0.0.2161 = Timeticks: (4) 0:00:00.04
sysAppElmtRunCPU.0.0.2174 = Timeticks: (1168) 0:00:11.68
sysAppElmtRunCPU.0.0.2324 = Timeticks: (1738) 0:00:17.38
sysAppElmtRunCPU.0.0.16781 = Timeticks: (0) 0:00:00.00
sysAppElmtRunCPU.0.0.18311 = Timeticks: (0) 0:00:00.00
sysAppElmtRunCPU.0.0.26827 = Timeticks: (2) 0:00:00.02
sysAppElmtRunCPU.3.1.1 = Timeticks: (483) 0:00:04.83
sysAppElmtRunCPU.3.2.2163 = Timeticks: (33548776) 3 days, 21:11:27.76
sysAppElmtRunCPU.3.3.2185 = Timeticks: (1314) 0:00:13.14

```



```

sysApp1ElmtRunCPU.3.4.2194 = Timeticks: (5282) 0:00:52.82
sysApp1ElmtRunCPU.3.7.2168 = Timeticks: (20380) 0:03:23.80
sysApp1ElmtRunCPU.3.9.2169 = Timeticks: (6703) 0:01:07.03
sysApp1ElmtRunCPU.3.12.2172 = Timeticks: (337) 0:00:03.37
sysApp1ElmtRunCPU.3.13.2173 = Timeticks: (36) 0:00:00.36
sysApp1ElmtRunCPU.3.14.2164 = Timeticks: (39783) 0:06:37.83
sysApp1ElmtRunCPU.3.15.2175 = Timeticks: (4206) 0:00:42.06
sysApp1ElmtRunCPU.3.16.2165 = Timeticks: (18) 0:00:00.18
sysApp1ElmtRunCPU.3.17.2176 = Timeticks: (61) 0:00:00.61
sysApp1ElmtRunCPU.3.19.2177 = Timeticks: (25) 0:00:00.25
sysApp1ElmtRunCPU.3.20.2178 = Timeticks: (200) 0:00:02.00
sysApp1ElmtRunCPU.3.21.2179 = Timeticks: (38) 0:00:00.38
sysApp1ElmtRunCPU.3.23.2188 = Timeticks: (3175) 0:00:31.75
sysApp1ElmtRunCPU.3.25.2186 = Timeticks: (44774) 0:07:27.74
sysApp1ElmtRunCPU.3.26.2180 = Timeticks: (17) 0:00:00.17
sysApp1ElmtRunCPU.3.27.2181 = Timeticks: (48950) 0:08:09.50
sysApp1ElmtRunCPU.3.30.2187 = Timeticks: (11) 0:00:00.11
sysApp1ElmtRunCPU.3.31.2184 = Timeticks: (93) 0:00:00.93
sysApp1ElmtRunCPU.3.34.2171 = Timeticks: (80) 0:00:00.80
sysApp1ElmtRunCPU.3.35.2047 = Timeticks: (1585) 0:00:15.85
sysApp1ElmtRunCPU.3.36.2189 = Timeticks: (30) 0:00:00.30
sysApp1ElmtRunCPU.3.37.2191 = Timeticks: (326) 0:00:03.26
sysApp1ElmtRunCPU.5.5.7495 = Timeticks: (24721) 0:04:07.21
sysApp1ElmtRunCPU.5.6.2167 = Timeticks: (936) 0:00:09.36
sysApp1ElmtRunCPU.5.6.26829 = Timeticks: (1) 0:00:00.01
sysApp1ElmtRunCPU.5.8.26828 = Timeticks: (25) 0:00:00.25
sysApp1ElmtRunCPU.5.28.2182 = Timeticks: (29234) 0:04:52.34
sysApp1ElmtRunCPU.5.29.2183 = Timeticks: (21) 0:00:00.21

```

```

user-nms % snmpwalk -Os -M ~/mibs -m all tp1 public sysApp1ElmtRunName

```

```

sysApp1ElmtRunName.0.0.0 = (swapper)
sysApp1ElmtRunName.0.0.2 = (pagedaemon)
sysApp1ElmtRunName.0.0.3 = (vmdaemon)
sysApp1ElmtRunName.0.0.4 = (bufdaemon)
sysApp1ElmtRunName.0.0.5 = (syncer)
sysApp1ElmtRunName.0.0.6 = (netdaemon)
sysApp1ElmtRunName.0.0.7 = (if_pfe)
sysApp1ElmtRunName.0.0.8 = (if_pfe_listen)
sysApp1ElmtRunName.0.0.9 = (cb_poll)
sysApp1ElmtRunName.0.0.10 = (vmuncachedaemon)
sysApp1ElmtRunName.0.0.11 = (scs_housekeeping)
sysApp1ElmtRunName.0.0.12 = (if_pic_listen)
sysApp1ElmtRunName.0.0.116 = mfs
sysApp1ElmtRunName.0.0.2023 = pccardd
sysApp1ElmtRunName.0.0.2131 = cron
sysApp1ElmtRunName.0.0.2160 = /sbin/watchdog
sysApp1ElmtRunName.0.0.2161 = /usr/sbin/tnetd
sysApp1ElmtRunName.0.0.2174 = /usr/sbin/tnp.ntpd
sysApp1ElmtRunName.0.0.2324 = (peer proxy)
sysApp1ElmtRunName.0.0.16781 = /usr/libexec/getty
sysApp1ElmtRunName.0.0.18311 = /usr/sbin/xntpd
sysApp1ElmtRunName.0.0.26827 = telnetd
sysApp1ElmtRunName.3.1.1 = /sbin/preinit
sysApp1ElmtRunName.3.2.2163 = /usr/sbin/chassisd
sysApp1ElmtRunName.3.3.2185 = /usr/sbin/dfwd
sysApp1ElmtRunName.3.4.2194 = /sbin/dcd
sysApp1ElmtRunName.3.7.2168 = /usr/sbin/snmpd
sysApp1ElmtRunName.3.9.2169 = /usr/sbin/mib2d
sysApp1ElmtRunName.3.12.2172 = /usr/sbin/apsd
sysApp1ElmtRunName.3.13.2173 = /usr/sbin/vrrpd
sysApp1ElmtRunName.3.14.2164 = /usr/sbin/alarmd

```

```

sysAppElmtRunName.3.15.2175 = /usr/sbin/pfed
sysAppElmtRunName.3.16.2165 = /usr/sbin/craftd
sysAppElmtRunName.3.17.2176 = /usr/sbin/sampled
sysAppElmtRunName.3.19.2177 = /usr/sbin/ilmid
sysAppElmtRunName.3.20.2178 = /usr/sbin/rmopd
sysAppElmtRunName.3.21.2179 = /usr/sbin/cosd
sysAppElmtRunName.3.23.2188 = /usr/sbin/fsad
sysAppElmtRunName.3.25.2186 = /usr/sbin/irsd
sysAppElmtRunName.3.26.2180 = /usr/sbin/nasd
sysAppElmtRunName.3.27.2181 = /usr/sbin/fud
sysAppElmtRunName.3.30.2187 = /usr/sbin/rtspd
sysAppElmtRunName.3.31.2184 = /usr/sbin/smartd
sysAppElmtRunName.3.34.2171 = /usr/sbin/inetd
sysAppElmtRunName.3.35.2047 = syslogd
sysAppElmtRunName.3.36.2189 = /usr/sbin/spd
sysAppElmtRunName.3.37.2191 = /usr/sbin/eccd
sysAppElmtRunName.5.5.7495 = /usr/sbin/rpd
sysAppElmtRunName.5.6.2167 = /usr/sbin/mgd
sysAppElmtRunName.5.6.26829 = mgd: (mgd) (user)/dev/tty0
sysAppElmtRunName.5.8.26828 = -cli
sysAppElmtRunName.5.28.2182 = /usr/sbin/ppmd
sysAppElmtRunName.5.29.2183 = /usr/sbin/lmpd

```

**Meaning** The sample output shows the number of centi-seconds of total system CPU resources consumed by a particular process. For example, the chassis process (**chassisd, 3.2.2163**) has consumed 3 days, or 33,548,776 centi-seconds of total system CPU resources.

The **sysAppElmtRunName** object retrieves the name of the OID. For example, **sysAppElmtRunCPU.3.2.2163** represents the chassis process.

## Retrieve Version Information about Router Software Components

**Purpose** RFC 2790, *Host Resources MIB*, describes a set of managed objects that are useful for managing host systems, including routers.

**Action** To retrieve version information about software components on the router, from a management station that has access to the router and using a tool, such as Snmpwalk, enter the following command:

```
user-bsd# snmpwalk [common arguments] hostname community object-id
```

### Sample Output

```

user-nms % snmpwalk -Os -M /volume/~ /mibs -m all tp1 public
.1.3.6.1.2.1.25.6.3hrSWInstalledIndex.2 = 2
hrSWInstalledIndex.3 = 3
hrSWInstalledIndex.4 = 4
hrSWInstalledIndex.5 = 5
hrSWInstalledIndex.6 = 6
hrSWInstalledIndex.9 = 9
hrSWInstalledName.2 = "JUNOS Base OS Software Suite [6.0R1.5]"
hrSWInstalledName.3 = "JUNOS Kernel Software Suite [6.0R1.5]"
hrSWInstalledName.4 = "JUNOS Packet Forwarding Engine Support (M7i/M10i) [6.0R1.5]"
hrSWInstalledName.5 = "JUNOS Routing Software Suite [6.0R1.5]"
hrSWInstalledName.6 = "JUNOS Online Documentation [6.0R1.5]"
hrSWInstalledName.9 = "JUNOS Support Tools Package [6.0-20031122-unocM2]"
hrSWInstalledID.2 = OID: zeroDotZero

```

```

hrSWInstalledID.3 = OID: zeroDotZero
hrSWInstalledID.4 = OID: zeroDotZero
hrSWInstalledID.5 = OID: zeroDotZero
hrSWInstalledID.6 = OID: zeroDotZero
hrSWInstalledID.9 = OID: zeroDotZero
hrSWInstalledType.2 = operatingSystem(2)
hrSWInstalledType.3 = operatingSystem(2)
hrSWInstalledType.4 = operatingSystem(2)
hrSWInstalledType.5 = operatingSystem(2)
hrSWInstalledType.6 = application(4)
hrSWInstalledType.9 = operatingSystem(2)
hrSWInstalledDate.2 = 2003-8-10,20:34:45.0,-7:0
hrSWInstalledDate.3 = 2003-8-10,20:35:21.0,-7:0
hrSWInstalledDate.4 = 2003-8-10,20:36:30.0,-7:0
hrSWInstalledDate.5 = 2003-8-10,20:36:47.0,-7:0
hrSWInstalledDate.6 = 2003-8-10,20:36:51.0,-7:0
hrSWInstalledDate.9 = 2003-11-22,4:8:47.0,-8:0a1

```

**Meaning** The sample output shows the version information for various software components on the router.

## Checklist for Displaying Basic Chassis Information

**Purpose** Table 41 on page 1341 provides links and commands for displaying basic chassis information, including a list of all Flexible PIC Concentrators (FPCs) and Physical Interface Cards (PICs) installed in the router chassis, the hardware version level, and the serial number.

### Action

Table 41: Checklist for Displaying Basic Chassis Information

| Task                                             | Command or Action                                 |
|--------------------------------------------------|---------------------------------------------------|
| "Display Basic Chassis Information" on page 1341 | <code>show chassis hardware &lt;detail&gt;</code> |

## Display Basic Chassis Information

**Purpose** Before you return a router component to Juniper Networks, you must contact the Juniper Networks Technical Assistance Center (JTAC) with the serial number of the failed component and failure information. JTAC will then grant a Return Materials Authorization (RMA).

**Action** To display a list of the serial numbers of components installed in the router chassis, use the following Junos OS command-line interface (CLI) operational mode command:

```
user@host> show chassis hardware <detail>
```

## Sample Output

```

user@host> show chassis hardware
Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis
Backplane     REV 03   710-002334   BB9738        M20

```

|                  |        |            |            |                       |
|------------------|--------|------------|------------|-----------------------|
| Power Supply A   | REV 06 | 740-001465 | 005234     | AC                    |
| Power Supply B   | REV 06 | 740-001465 | 005237     | AC                    |
| Display          | REV 04 | 710-001519 | BA4681     |                       |
| Routing Engine 0 | REV 06 | 740-003239 | 1000224893 | RE-2.0                |
| Routing Engine 1 | REV 06 | 740-003239 | 9000022146 | RE-2.0                |
| SSB slot 0       | REV 02 | 710-001951 | AZ8112     | Internet Processor II |
| SSB slot 1       | N/A    | N/A        | N/A        | backup                |
| FPC 0            | REV 03 | 710-003308 | BD8455     | E-FPC                 |
| PIC 0            | REV 08 | 750-002303 | AZ5310     | 4x F/E, 100 BASE-TX   |
| PIC 1            | REV 07 | 750-004745 | BC9368     | 2x CT3-NxDS0          |
| FPC 1            | REV 03 | 710-003308 | BB9032     | E-FPC                 |
| PIC 0            | REV 03 | 750-002914 | BC0131     | 2x OC-3 ATM, MM       |

user@host> show chassis hardware

Hardware inventory:

| Item           | Version | Part number | Serial number | Description           |
|----------------|---------|-------------|---------------|-----------------------|
| Chassis        |         |             | 00159         | M40                   |
| Backplane      | REV 08  | 710-000073  | AA2125        |                       |
| Power Supply B | Rev A1  | 740-000235  | 000289        | DC                    |
| Maxicab        | REV 08  | 710-000229  | CA4516        |                       |
| Minicab        | REV 04  | 710-001739  | CA4610        |                       |
| Display        | REV 07  | 710-000150  | AA5145        |                       |
| Routing Engine | REV 07  | 740-005022  | P10865702236  | RE-3.0                |
| SCB            | REV 03  | 710-007684  | CA3900        | Internet Processor II |
| FPC 1          | REV 01  | 710-001292  | AL7435        |                       |
| PIC 0          | REV 03  | 750-000617  | AA3530        | 1x OC-48 SONET, SMIR  |
| FPC 2          | REV 09  | 710-000175  | AA4740        |                       |
| PIC 0          | REV 03  | 750-000617  | AA4557        | 1x OC-48 SONET, SMIR  |
| FPC 3          | REV 01  | 710-001292  | AB4775        |                       |
| PIC 0          | REV 03  | 750-000612  | AA1771        | 2x OC-3 ATM, MM       |
| PIC 1          | REV 03  | 750-002977  | AV3457        | 2x OC-3 ATM, MM       |
| FPC 5          | REV 01  | 710-001292  | AC5118        |                       |
| PIC 1          | REV 03  | 750-003628  | AS8882        | 1x G/E, 1000 BASE-LH  |

user@host> show chassis hardware detail

Hardware inventory:

| Item             | Version | Part number | Serial number    | Description           |
|------------------|---------|-------------|------------------|-----------------------|
| Chassis          |         |             | 25708            | M20                   |
| Backplane        | REV 03  | 710-002334  | BB9738           |                       |
| Power Supply A   | REV 06  | 740-001465  | 005234           | AC                    |
| Power Supply B   | REV 06  | 740-001465  | 005237           | AC                    |
| Display          | REV 04  | 710-001519  | BA4681           |                       |
| Routing Engine 0 | REV 06  | 740-003239  | 1000224893       | RE-2.0                |
| Routing Engine 0 |         |             | 58000007348d9a01 | RE-2.0                |
| Routing Engine 1 | REV 06  | 740-003239  | 9000022146       | RE-2.0                |
| Routing Engine 1 |         |             | d800000734745701 | RE-2.0                |
| SSB slot 0       | REV 02  | 710-001951  | AZ8112           | Internet Processor II |
| SSRAM bank 0     | REV 02  | 710-001385  | 242525           | 2 Mbytes              |
| SSRAM bank 1     | REV 02  | 710-001385  | 242741           | 2 Mbytes              |
| SSRAM bank 2     | REV 02  | 710-001385  | 242886           | 2 Mbytes              |
| SSRAM bank 3     | REV 02  | 710-001385  | 242482           | 2 Mbytes              |
| SSB slot 1       | N/A     | N/A         | N/A              | backup                |
| FPC 0            | REV 03  | 710-003308  | BD8455           | E-FPC                 |
| SSRAM            | REV 02  | 710-001385  | 241669           | 2 Mbytes              |
| SDRAM bank 0     | REV 01  | 710-000099  | 0003409          | 64 Mbytes             |
| SDRAM bank 1     | REV 01  | 710-000099  | 0003408          | 64 Mbytes             |
| PIC 0            | REV 08  | 750-002303  | AZ5310           | 4x F/E, 100 BASE-TX   |
| PIC 1            | REV 07  | 750-004745  | BC9368           | 2x CT3-NxDS0          |
| FPC 1            | REV 03  | 710-003308  | BB9032           | E-FPC                 |
| SSRAM            | REV 01  | 710-001385  | V00818           | 2 Mbytes              |
| SDRAM bank 0     | REV 01  | 710-000099  | 0003803          | 64 Mbytes             |

```

SDRAM bank 1  REV 01  710-000099  0003847      64 Mbytes
PIC 0         REV 03  750-002914  BC0131      2x OC-3 ATM, MM

```

**Meaning** The sample output is for an M20 and an M40 router. It shows a list of all FPCs and PICs installed in the router chassis, including the hardware version level and serial number.

The **detail** option displays detailed information about hardware, including memory, hardware version level, serial number, and additional information about memory.

If the Routing Engine is identified by a 10- and 16-digit serial number, both numbers are displayed in the output for the **detail** option, and are especially important when processing an RMA for such a Routing Engine. In addition, when you request an RMA for the M40 router, include the **maxicab** serial number.

Table 42 on page 1343 provides a description of all the output fields for the **show chassis hardware** command.

**Table 42: Output fields for the show chassis hardware command**

| Output field         | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|----------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Item</b>          | <p>(For M-series routers) Chassis component. Information is displayed about the backplane; power supplies; Routing Engine; maxicab (the connection between the Routing Engine and the backplane, for the M40 router only); System Control Board (SCB), System and Switch Board (SSB), Switching and Forwarding Module (SFM), or Forwarding Engine Board (FEB); Miscellaneous Control Subsystem (MCS) and PFE clock generator (PCG) (for the M160 router only); and each FPC and PIC.</p> <p>(For T-series platforms) Chassis component. Information is displayed about the backplane, power supplies, midplane, Control Board (CB), Connector Interface Panel (CIP), FPC, Front Panel Module (FPM) (craft interface), Power Entry Module (PEM), PIC, SONET Clock Generator (SCG), Small Form-factor Pluggable (SFP) modules, Switch Interface Board (SIB), and Switch Processor Mezzanine Board (SPMB).</p> |
| <b>Version</b>       | Revision level of the chassis component.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Part number</b>   | Part number of the chassis component.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Serial number</b> | Serial number of the chassis component. For all RMAs, the chassis serial number must be provided to JTAC. If the RMA is for the chassis itself, you must obtain the backplane or midplane serial number as well.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Description</b>   | Brief description of the hardware item.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |



**NOTE:** When you request an RMA, you must also include output from the **show chassis environment** command, the **show version** command, and the troubleshooting output used to identify the failure.

## Maintain a Single Configuration File for Both Routing Engines

---

**Purpose** For routers that support multiple Routing Engines, you can specify **re0** and **re1** as group names to ensure that the correct IP addresses are used for each Routing Engine and to maintain a single configuration file for both Routing Engines. It is important that the names of the Routing Engines correspond to a slot position because the names **re0** and **re1** are special group names that you must use for the Routing Engines to recognize which configuration statement to use. Routing Engine 0 must be in slot position 0 and must be named **re0**, and Routing Engine 1 must be in slot position 1 and must be named **re1**.

To maintain a single configuration file for both Routing Engines, follow these steps:

1. [Configure the New Group on page 1344](#)
2. [Apply the New Group on page 1345](#)

### Configure the New Group

**Purpose** Each **re0** or **re1** group typically contains, at a minimum, the configuration for the hostname and the management interface (**fxp0**). If each Routing Engine uses a different management interface, the group must also contain the configuration for the backup router and static routes.

**Action** To configure the **re0** and **re1** groups, follow these steps:

1. In configuration mode, go to the following hierarchy level:

```
[edit]
user@host# edit groups
```

2. Configure the group:

```
[edit groups]
user@host# set group-name
```

For example:

```
[edit groups]
user@host# set re0
```

3. To configure the management interface, go to the following hierarchy level:

```
[edit groups]
user@host# edit groups re0
```

4. Include the following statement:

```
[edit groups re0]
user@host# set interfaces interface-name unit unit family inet address address
```

For example:

```
[edit groups re0]
user@host# set interfaces fxp0 unit 0 family inet address 1.1.1.1/24
```

5. To configure the hostname, go to the following hierarchy level:

```
[edit groups re0]
user@host# edit groups re0 system
```

6. Include the following statement:

```
[edit groups re0 system]
user@host# set host-name hostname
```

For example:

```
[edit groups re0 system]
user@host# set host-name foo-re0
```

7. Verify the configuration:

```
[edit groups re0]
user@host# show
re0 {
  system {
    host-name foo-re0;
  }
  interfaces {
    fxp0 {
      unit 0 {
        family inet {
          address 1.1.1.1/24;
        }
      }
    }
  }
}
```

8. Commit the configuration:

```
user@host# commit
```

9. Repeat Step 1 through Step 8 for the **re1** group.

**Meaning** The sample output in Step 7 shows that the **re0** group contains the minimum configuration for a group, the hostname, and the management interface (**fxp0**). If each Routing Engine uses a different management interface, the group must also contain the configuration for the backup router and static routes.

## Apply the New Group

**Action** To apply the **re0** group to maintain a single configuration file for both Routing Engines, follow these steps:

1. In configuration mode, go to the top hierarchy level and include the following statement:

```
user@host# [edit]
user@host# set apply-groups group-name
```

For example:

```
user@host# [edit]
user@host# set apply-groups re0
```

2. Verify the configuration:

```
user@host# show
groups {
  re0 {
    system {
      host-name foo-re0;
    }
    interfaces {
      fxp0 {
        unit 0 {
          family inet {
            address 1.1.1.1/24;
          }
        }
      }
    }
  }
  re1 {
    system {
      host-name foo-re1;
    }
    interfaces {
      fxp0 {
        unit 0 {
          family inet {
            address 1.1.1.2/24;
          }
        }
      }
    }
  }
}
apply-groups [ re0 re1 ];
```

3. Commit the configuration:

```
user@host# commit
```

**Meaning** The sample output shows that each group, **re0** and **re1**, has its own IP address that is used for each Routing Engine to maintain a single configuration file.

---

## Configure the New Group

**Purpose** Each **re0** or **re1** group typically contains, at a minimum, the configuration for the hostname and the management interface (**fxp0**). If each Routing Engine uses a different management interface, the group must also contain the configuration for the backup router and static routes.

**Action** To configure the **re0** and **re1** groups, follow these steps:

1. In configuration mode, go to the following hierarchy level:

```
[edit]
user@host# edit groups
```



2. Configure the group:

```
[edit groups]
user@host# set group-name
```

For example:

```
[edit groups]
user@host# set re0
```

3. To configure the management interface, go to the following hierarchy level:

```
[edit groups]
user@host# edit groups re0
```

4. Include the following statement:

```
[edit groups re0]
user@host# set interfaces interface-name unit unit family inet address address
```

For example:

```
[edit groups re0]
user@host# set interfaces fxp0 unit 0 family inet address 1.1.1.1/24
```

5. To configure the hostname, go to the following hierarchy level:

```
[edit groups re0]
user@host# edit groups re0 system
```

6. Include the following statement:

```
[edit groups re0 system]
user@host# set host-name hostname
```

For example:

```
[edit groups re0 system]
user@host# set host-name foo-re0
```

7. Verify the configuration:

```
[edit groups re0]
user@host# show
re0 {
  system {
    host-name foo-re0;
  }
  interfaces {
    fxp0 {
      unit 0 {
        family inet {
          address 1.1.1.1/24;
        }
      }
    }
  }
}
```

8. Commit the configuration:

```
user@host# commit
```

9. Repeat Step 1 through Step 8 for the **re1** group.

**Meaning** The sample output in Step 7 shows that the **re0** group contains the minimum configuration for a group, the hostname, and the management interface (**fxp0**). If each Routing Engine uses a different management interface, the group must also contain the configuration for the backup router and static routes.

---

## Apply the New Group

**Action** To apply the **re0** group to maintain a single configuration file for both Routing Engines, follow these steps:

1. In configuration mode, go to the top hierarchy level and include the following statement:

```
user@host# [edit]
```

```
user@host# set apply-groups group-name
```

For example:

```
user@host# [edit]
```

```
user@host# set apply-groups re0
```

2. Verify the configuration:

```
user@host# show
```

```
groups {
  re0 {
    system {
      host-name foo-re0;
    }
    interfaces {
      fxp0 {
        unit 0 {
          family inet {
            address 1.1.1.1/24;
          }
        }
      }
    }
  }
}
re1 {
  system {
    host-name foo-re1;
  }
  interfaces {
    fxp0 {
      unit 0 {
        family inet {
          address 1.1.1.2/24;
        }
      }
    }
  }
}
```

```

    }
  }
}
}
apply-groups [ re0 re1 ];

```

3. Commit the configuration:

```
user@host# commit
```

**Meaning** The sample output shows that each group, **re0** and **re1**, has its own IP address that is used for each Routing Engine to maintain a single configuration file.

## List Files and Directories on a Router

**Problem** **Description:** If a system board crashes, you must check that certain files are in specific directories.

**Solution** To display files in the **/var/tmp** and **var/crash** directories, use the following CLI operational mode command:

```
user@host> file list filename or directory
```

**Sample Output**

```

sampled.pkts
vi.recover/
user@host> file list /var/crash/
bounds
minfree
vmcore.0

```

**Meaning** The sample output shows the files in the **/var/tmp/** and **/var/crash/** directories. The Juniper Networks Technical Assistance Center (JTAC) can ask you to verify the existence of similar files.

## Display File Contents

**Purpose** To display the contents of a file on the local router.

**Action** To display the contents of a file on the local router, use the following CLI operational mode command:

```
user@host> file show filename
```

### Sample Output

```

user@host> file show /var/log/messages
Apr 13 21:00:08 romney /kernel: so-1/1/2: loopback suspected; going to standby.
Apr 13 21:00:40 romney /kernel: so-1/1/2: loopback suspected; going to standby.
Apr 13 21:02:48 romney last message repeated 4 times
Apr 13 21:07:04 romney last message repeated 8 times
Apr 13 21:07:13 romney /kernel: so-1/1/0: Clearing SONET alarm(s) RDI-P
Apr 13 21:07:29 romney /kernel: so-1/1/0: Asserting SONET alarm(s) RDI-P
Apr 13 21:07:36 romney /kernel: so-1/1/2: loopback suspected; going to standby.

```

```
Apr 13 21:08:08 romney /kernel: so-1/1/2: loopback suspected; going to standby.  
...Output truncated...
```

**Meaning** The sample output shows the contents of the `/var/log/messages` file.

---

## Rename a File on a Router

**Action** To rename a file on the local router, use the following CLI operational mode command:

```
user@host> file rename source destination
```

**Sample Output**

```
user@host> file list /var/tmp  
dcd.core  
rpd.core  
snmpd.core  
  
user@host> file rename /var/tmp/dcd.core /var/tmp/dcd.core.990413  
user@host> file list /var/tmp  
dcd.core.990413  
rpd.core  
snmpd.core
```

**Meaning** The sample output shows that the `dcd.core` file was renamed to `dcd.core.990413`. The original name of the file is the *source* and the new name for the file is the *destination*.

---

## Delete a File on a Router

**Action** To delete a file on the local router, use the following CLI operational mode command:

```
user@host> file delete filename
```

**Sample Output**

```
user@host> file list /var/tmp  
dcd.core  
rpd.core  
snmpd.core  
  
user@host> file delete /var/tmp/snmpd.core  
user@host> file list /var/tmp  
dcd.core  
rpd.core
```

**Meaning** The sample output shows that the `snmpd.core` file was deleted.

---

## Check the Time on a Router

**Purpose** Display the current time on a router and display information about how long the router, router software, and routing protocols have been running.

**Action** To check time on a router, use the following Junos OS command-line interface (CLI) operational mode command:

```
user@host> show system uptime
```

## Sample Output

```
user@host> show system uptime
Current time:      1998-10-13 19:45:47 UTC
System booted:    1998-10-12 20:51:41 UTC (22:54:06 ago)
Protocols started: 1998-10-13 19:33:45 UTC (00:12:02 ago)
Last configured:  1998-10-13 19:33:45 UTC (00:12:02 ago) by abc
12:45PM up 22:54, 2 users, load averages: 0.07, 0.02, 0.01
```

**Meaning** The sample output shows the current system time in UTC, the date and time when the router was last booted and how long it has been running, when the routing protocols were last started and how long they have been running, when a configuration was last committed, and the name of the user who issued the last **commit** command. If a different time zone is configured, the output shows that time zone. For information on configuring the time zone, see the *Junos System Basics Configuration Guide*.

The sample output shows that the current time is 12:45 PM, the router has been operational for 22:54 hours, and two users are logged in to the router. The output also shows that the load average is 0.07 seconds for the last minute, 0.02 seconds for the last 5 minutes, and 0.01 seconds for the last 15 minutes.

## Check for Users in Configuration Mode

**Purpose** Before you change the configuration or commit a candidate configuration, it is a good idea to check for users in configuration mode.

**Action** To display users currently editing the configuration, follow these steps:

1. To enter configuration mode, type the following command:

```
user@host> edit
```

2. Enter the following configuration mode command:

```
[edit]
user@host# status
```

For example:

```
user@host> show system users
4:58PM PST up 5 days, 9:52, 5 users, load averages: 0.01, 0.01, 0.00
USER      TTY      FROM                LOGIN@  IDLE WHAT
mwazna    p0       bigpunk.juniper.net 4:58PM   - -cli (cli)
jgchan    p1       bigpunk.juniper.net 2:25PM  2:32 -csh (csh)
jgchan    p2       bigpunk.juniper.net 2:35PM  2:18 cli
taffy     p3       bigpunk.juniper.net 3:28PM   5 -cli (cli)
tmauro    p4       bigpunk.juniper.net 4:16PM  37 cli
```

## Sample Output

**Meaning** The sample output lists the users who are currently logged in to the router. Five users are logged in to the router, with one user logged in twice, **igchan**. Each user is logged in through a different terminal (**TTY**—**p0**, **p1**, **p2**, **p3**, and **p4**) from the system **bigpunk.juniper.net**. A hyphen in the **FROM** field indicates that the user logged in through the console.

Additional information includes the time when the user logged in (**LOGIN**), the amount of time the user is not active on the router (**IDLE**), and the processes that the user is running (**WHAT**). In this example, the users are running the command-line interface (**cli**) and the UNIX-level shell (**csh**).

---

## Check the Commands That Users Are Entering

**Purpose** A common set of operations you can check is when users log in to the router and the CLI commands they issue.

To check the commands that users are entering, follow these steps:

1. [Configure the Log File for Tracking CLI Commands on page 1352](#)
2. [Display the Configured Log File on page 1353](#)

## Configure the Log File for Tracking CLI Commands

**Action** To configure the log file for tracking CLI commands, follow these steps:

1. In configuration mode, go to the following hierarchy level:

```
[edit]
user@host# edit system syslog
```

2. Configure the log file:

```
[edit system syslog]
user@host# edit file filename
```

For example:

```
[edit system syslog]
user@host# edit file cli-commands
```

3. Configure the interactive-commands facility and severity level:

```
[edit system syslog filename]
user@host# set interactive-commands info
```

4. Verify the configuration:

```
[edit system syslog]
user@host# show
file cli-commands {
    interactive-commands info;
}
```

5. Commit the configuration:

```
user@host# commit
```

**Meaning** The configuration example shows that the log file **cli-commands** is configured with the **interactive-commands** facility at the **info** severity level. [Table 43 on page 1353](#) lists and describes the severity levels.

**Table 43: Severity Levels**

| Severity Level | Description                                                                                                  |
|----------------|--------------------------------------------------------------------------------------------------------------|
| <b>info</b>    | Log all top-level CLI commands, including the <b>configure</b> command, and all configuration mode commands. |
| <b>notice</b>  | Log the configuration mode commands <b>rollback</b> and <b>commit</b> .                                      |
| <b>warning</b> | Log when any software process restarts.                                                                      |

## Display the Configured Log File

**Purpose** To display the log file in configuration mode, enter the following command:

**Action** [edit system syslog]  
user@host# run show log *filename*

For example:

[edit system syslog]  
user@host# run show log cli-commands

## Sample Output

```
[edit system syslog]
user@host# run show log cli-commands
Sep 16 11:24:25 nut mgd[3442]: UI_COMMIT_PROGRESS: commit: signaling 'Syslog
daemon', pid 2457, signal 1, status 0
Sep 16 11:24:25 nut mgd[3442]: UI_COMMIT_PROGRESS: commit: signaling 'SNMP
daemon', pid 2592, signal 31, status 0
Sep 16 11:28:36 nut mgd[3442]: UI_CMDLINE_READ_LINE: User 'user', command 'run
show log cli-commands '
Sep 16 11:30:39 nut mgd[3442]: UI_CMDLINE_READ_LINE: User 'user', command 'run
show log security '
Sep 16 11:31:26 nut mgd[3442]: UI_CMDLINE_READ_LINE: User 'user', command 'run
show log messages '
Sep 16 11:41:21 nut mgd[3442]: UI_CMDLINE_READ_LINE: User 'user', command 'edit
file cli-commands '
Sep 16 11:41:25 nut mgd[3442]: UI_CMDLINE_READ_LINE: User 'user', command 'show
'
Sep 16 11:44:57 nut mgd[3442]: UI_CMDLINE_READ_LINE: User 'user', command 'set
interactive-commands info '
Sep 16 14:32:15 nut mgd[3442]: UI_CMDLINE_READ_LINE: User 'user', command 'run
show log cli-commands '
```

**Meaning** The sample output shows the CLI commands that were entered since the log file was configured.

## Configure the Log File for Tracking CLI Commands

**Action** To configure the log file for tracking CLI commands, follow these steps:

1. In configuration mode, go to the following hierarchy level:

```
[edit]
user@host# edit system syslog
```

2. Configure the log file:

```
[edit system syslog]
user@host# edit file filename
```

For example:

```
[edit system syslog]
user@host# edit file cli-commands
```

3. Configure the interactive-commands facility and severity level:

```
[edit system syslog filename]
user@host# set interactive-commands info
```

4. Verify the configuration:

```
[edit system syslog]
user@host# show
file cli-commands {
    interactive-commands info;
}
```

5. Commit the configuration:

```
user@host# commit
```

**Meaning** The configuration example shows that the log file **cli-commands** is configured with the **interactive-commands** facility at the **info** severity level. [Table 43 on page 1353](#) lists and describes the severity levels.

**Table 44: Severity Levels**

| Severity Level | Description                                                                                                  |
|----------------|--------------------------------------------------------------------------------------------------------------|
| info           | Log all top-level CLI commands, including the <b>configure</b> command, and all configuration mode commands. |
| notice         | Log the configuration mode commands <b>rollback</b> and <b>commit</b> .                                      |
| warning        | Log when any software process restarts.                                                                      |

## Check When the Last Configuration Change Occurred

**Purpose** When a problem occurs on a router, it is a good idea to check when the last configuration change was made because it may have had some influence on the problem.



To check when the last configuration change occurred, follow these steps:

1. [Configure Configuration Change Tracking on page 1355](#)
2. [Display the Configured Log File on page 1355](#)

## Configure Configuration Change Tracking

**Action** To configure this type of logging, follow these steps:

1. In configuration mode, go to the following hierarchy level:

```
[edit]
user@host# edit system syslog
```

2. Configure the log file:

```
[edit system syslog]
user@host# edit file filename
```

For example:

```
[edit system syslog]
user@host# edit file mw-configuration-changes
```

3. Configure the change-log facility and severity level:

```
[edit system syslog filename]
user@host# set change-log info
```

4. Verify the configuration:

```
[edit system syslog]
user@host# show
file mw-configuration-changes {
  change-log info;
}
```

5. Commit the configuration:

```
user@host# commit
```

## Display the Configured Log File

**Purpose** To display the log file in configuration mode.

**Action** To display the log file in configuration mode, enter the following command:

```
[edit system syslog]
user@host# run show log filename
```

For example:

```
[edit system syslog]
user@host# run show log mw-configuration-changes
```

## Sample Output

```
[edit system syslog]
user@host# run show log mw-configuration-changes
Sep 17 07:03:22 nut mgd[7793]: UI_CFG_AUDIT_OTHER: User 'root' override:
```

```
/config/juniper.conf
Sep 17 07:07:21 nut mgd[2751]: UI_CFG_AUDIT_OTHER: User 'root' set: [interfaces
  lo0 unit 0 family inet address 127.0.0.1/32]
Sep 17 07:07:21 nut mgd[2751]: UI_CFG_AUDIT_SET: User 'root' set: [system
  domain-name] "englab.company.net" -> "englab.company.net"
Sep 17 07:07:21 nut mgd[2751]: UI_CFG_AUDIT_OTHER: User 'root' set: [system
  name-server 172.17.28.101]
Sep 17 07:07:22 nut mgd[2751]: UI_CFG_AUDIT_OTHER: User 'root' set: [system
  domain-search] "englab.company.net"
Sep 17 07:07:22 nut mgd[2751]: UI_CFG_AUDIT_OTHER: User 'root' set: [system
  domain-search] "company.net"
Sep 17 07:07:22 nut mgd[2751]: UI_CFG_AUDIT_OTHER: User 'root' set: [system
  domain-search] "jnpr.net"
```

**Meaning** The sample output shows the contents of the log file and that the last configuration change was on September 17 at 07:07:22.

---

## Configure Configuration Change Tracking

---

**Action** To configure this type of logging, follow these steps:

1. In configuration mode, go to the following hierarchy level:

```
[edit]
user@host# edit system syslog
```

2. Configure the log file:

```
[edit system syslog]
user@host# edit file filename
```

For example:

```
[edit system syslog]
user@host# edit file mw-configuration-changes
```

3. Configure the change-log facility and severity level:

```
[edit system syslog filename]
user@host# set change-log info
```

4. Verify the configuration:

```
[edit system syslog]
user@host# show
file mw-configuration-changes {
  change-log info;
}
```

5. Commit the configuration:

```
user@host# commit
```

---

## Display a Log File

---

**Purpose** To look at a log or trace file.

**Action** To look at a log or trace file, use the following Junos OS CLI operational mode command:

```
user@host> show log filename
```

## Sample Output

```
user@host> show log messages
Sep 10 07:00:00 host newsyslog[7249]: logfile turned over
Sep 10 07:01:49 host rpd[6451]: bgp_listen_accept: Connection attempt from
unconfigured neighbor: 10.0.8.1+1348
Sep 10 07:04:17 host rpd[6451]: bgp_listen_accept: Connection attempt from
unconfigured neighbor: 10.0.8.1+1349
Sep 10 07:06:45 host rpd[6451]: bgp_listen_accept: Connection attempt from
unconfigured neighbor: 10.0.8.1+1350
Sep 10 07:07:53 host login: 2 LOGIN FAILURES FROM 172.24.16.21
Sep 10 07:07:53 host login: 2 LOGIN FAILURES FROM 172.24.16.21, show configuration
| no-more
Sep 10 07:08:25 host inetd[2785]: /usr/libexec/telnetd[7251]: exit status 0x100
Sep 10 07:09:13 host rpd[6451]: bgp_listen_accept: Connection attempt from
unconfigured neighbor: 10.0.8.1+1351
Sep 10 07:11:41 host rpd[6451]: bgp_listen_accept: Connection attempt from
unconfigured neighbor: 10.0.8.1+1352
Sep 10 07:14:09 host rpd[6451]: bgp_listen_accept: Connection attempt from
unconfigured neighbor: 10.0.8.1+1353
Sep 10 07:16:37 host rpd[6451]: bgp_listen_accept: Connection attempt from
unconfigured neighbor: 10.0.8.1+1354
Sep 10 07:19:05 host rpd[6451]: bgp_listen_accept: Connection attempt from
unconfigured neighbor: 10.0.8.1+1355
Sep 10 07:21:33 host rpd[6451]: bgp_listen_accept: Connection attempt from
unconfigured neighbor:
```

**Meaning** The sample output shows the **rpd** log messages in the **messages** file for September 10 from 7:00 to 7:21 AM.



**NOTE:** Local log files are saved in the `/var/log` directory.

## Configure IS-IS-Specific Options

**Purpose** When unexpected events or problems occur, or if you want to diagnose IS-IS adjacency establishment issues, you can view more detailed information by configuring options specific to IS-IS.

To configure IS-IS options, follow these steps:

1. [Displaying Detailed IS-IS Protocol Information on page 1357](#)
2. [Displaying Sent or Received IS-IS Protocol Packets on page 1360](#)
3. [Analyzing IS-IS Link-State PDUs in Detail on page 1361](#)

### Displaying Detailed IS-IS Protocol Information

**Action** To trace IS-IS messages in detail, follow these steps:

1. Configure the flag to display detailed IS-IS protocol messages.

```
[edit protocols isis traceoptions]
user@host# set flag hello detail
```

2. Verify the configuration.

```
user@host# show
```

For example:

```
[edit protocols isis traceoptions]
user@host# show
file isislog size 10k files 10;
flag hello detail;
```

3. Commit the configuration.

```
user@host# commit
```

4. View the contents of the file containing the detailed messages.

```
user@host# run show log filename
```

For example:

```
user@host# run show log isislog
```

```
Nov 29 23:17:50 trace_on: Tracing to "/var/log/isislog" started
Nov 29 23:17:50 Sending PTP IIH on so-1/1/1.0
Nov 29 23:17:53 Sending PTP IIH on so-1/1/0.0
Nov 29 23:17:54 Received PTP IIH, source id abc-core-01 on so-1/1/0.0
Nov 29 23:17:54     from interface index 11
Nov 29 23:17:54     max area 0, circuit type 12, packet length 4469
Nov 29 23:17:54     hold time 30, circuit id 6
Nov 29 23:17:54     neighbor state up
Nov 29 23:17:54     speaks IP
Nov 29 23:17:54     area address 99.0008 (1)
Nov 29 23:17:54     IP address 10.10.10.29
Nov 29 23:17:54     4396 bytes of total padding
Nov 29 23:17:54     updating neighbor abc-core-01
Nov 29 23:17:55 Received PTP IIH, source id abc-core-02 on so-1/1/1.0
Nov 29 23:17:55     from interface index 12
Nov 29 23:17:55     max area 0, circuit type 12, packet length 4469
Nov 29 23:17:55     hold time 30, circuit id 6
Nov 29 23:17:55     neighbor state up
Nov 29 23:17:55     speaks IP
Nov 29 23:17:55     area address 99.0000 (1)
Nov 29 23:17:55     IP address 10.10.10.33
Nov 29 23:17:55     4396 bytes of total padding
Nov 29 23:17:55     updating neighbor abc-core-02
```

**Meaning** [Table 45 on page 1359](#) lists tracing flags that can be configured specific to IS-IS and presents example output for some of the flags.

Table 45: IS-IS Protocol Tracing Flags

| Tracing Flags         | Description                                | Example Output                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|-----------------------|--------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>csn</b>            | Complete sequence number PDU (CSNP)        | <p>Nov 28 20:02:48 Sending L2 CSN on interface so-1/1/0.0Nov 28 20:02:48 Sending L2 CSN on interface so-1/1/1.0</p> <p>With the <b>detail</b> option.</p> <p>Nov 28 20:06:08 Sending L2 CSN on interface so-1/1/1.0Nov 28 20:06:08 LSP abc-core-01.00-00 lifetime 1146Nov 28 20:06:08 sequence 0x1c4f8 checksum 0xa1e9Nov 28 20:06:08 LSP abc-core-02.00-00 lifetime 411Nov 28 20:06:08 sequence 0x7435 checksum 0x5424Nov 28 20:06:08 LSP abc-brdr-01.00-00 lifetime 465Nov 28 20:06:08 sequence 0xf73 checksum 0xab10Nov 28 20:06:08 LSP abc-edge-01.00-00 lifetime 1089Nov 28 20:06:08 sequence 0x1616 checksum 0xdb29Nov 28 20:06:08 LSP abc-edge-02.00-00 lifetime 1103Nov 28 20:06:08 sequence 0x45cc checksum 0x6883</p>                                                                                                                                                                                                             |
| <b>hello</b>          | Hello packet                               | <p>Nov 28 20:13:50 Sending PTP IIH on so-1/1/1.0Nov 28 20:13:50 Received PTP IIH, source id abc-core-01 on so-1/1/0.0Nov 28 20:13:53 Received PTP IIH, source id abc-core-02 on so-1/1/1.0Nov 28 20:13:57 Sending PTP IIH on so-1/1/0.0Nov 28 20:13:58 Received PTP IIH, source id abc-core-01 on so-1/1/0.0Nov 28 20:13:59 Sending PTP IIH on so-1/1/1.0</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>lsp</b>            | Link-state PDUs (LSPs)                     | <p>Nov 28 20:15:46 Received L2 LSP abc-edge-01.00-00, interface so-1/1/0.0Nov 28 20:15:46 from abc-core-01Nov 28 20:15:46 sequence 0x1617, checksum 0xd92a, lifetime 1197Nov 28 20:15:46 Updating L2 LSP abc-edge-01.00-00 in TEDNov 28 20:15:47 Received L2 LSP abc-edge-01.00-00, interface so-1/1/1.0Nov 28 20:15:47 from abc-core-02Nov 28 20:15:47 sequence 0x1617, checksum 0xd92a, lifetime 1197</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>lsp-generation</b> | Link-state PDU generation packets          | <p>Nov 28 20:21:24 Regenerating L1 LSP abc-edge-03.00-00, old sequence 0x682Nov 28 20:21:27 Rebuilding L1, fragment abc-edge-03.00-00Nov 28 20:21:27 Rebuilt L1 fragment abc-edge-03.00-00, size 59Nov 28 20:31:52 Regenerating L2 LSP abc-edge-03.00-00, old sequence 0x689Nov 28 20:31:54 Rebuilding L2, fragment abc-edge-03.00-00Nov 28 20:31:54 Rebuilt L2 fragment abc-edge-03.00-00, size 256Nov 28 20:34:05 Regenerating L1 LSP abc-edge-03.00-00, old sequence 0x683Nov 28 20:34:08 Rebuilding L1, fragment abc-edge-03.00-00Nov 28 20:34:08 Rebuilt L1 fragment abc-edge-03.00-00, size 59</p>                                                                                                                                                                                                                                                                                                                                    |
| <b>packets</b>        | All IS-IS protocol packets                 | Not available.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>psn</b>            | Partial sequence number PDU (PSNP) packets | <p>Nov 28 20:40:39 Received L2 PSN, source abc-core-01, interface so-1/1/0.0Nov 28 20:40:39 Received L2 PSN, source abc-core-02, interface so-1/1/1.0Nov 28 20:41:36 Sending L2 PSN on interface so-1/1/1.0Nov 28 20:41:36 Sending L2 PSN on interface so-1/1/0.0Nov 28 20:42:35 Received L2 PSN, source abc-core-02, interface so-1/1/1.0Nov 28 20:42:35 LSP abc-edge-03.00-00 lifetime 1196Nov 28 20:42:35 sequence 0x68c checksum 0x746dNov 28 20:42:35 Received L2 PSN, source abc-core-01, interface so-1/1/0.0Nov 28 20:42:35 LSP abc-edge-03.00-00 lifetime 1196Nov 28 20:42:35 sequence 0x68c checksum 0x746dNov 28 20:42:49 Sending L2 PSN on interface so-1/1/1.0Nov 28 20:42:49 LSP abc-core-01.00-00 lifetime 1197Nov 28 20:42:49 sequence 0x1c4fb checksum 0x9becNov 28 20:42:49 Sending L2 PSN on interface so-1/1/0.0Nov 28 20:42:49 LSP abc-core-01.00-00 lifetime 1197Nov 28 20:42:49 sequence 0x1c4fb checksum 0x9bec</p> |

Table 45: IS-IS Protocol Tracing Flags *(continued)*

| Tracing Flags | Description                            | Example Output                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|---------------|----------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>spf</b>    | Shortest-path-first (SPF) calculations | Nov 28 20:44:01 Scheduling SPF for L1: ReconfigNov 28 20:44:01 Scheduling multicast<br>SPF for L1: ReconfigNov 28 20:44:01 Scheduling SPF for L2: ReconfigNov 28 20:44:01<br>Scheduling multicast SPF for L2: ReconfigNov 28 20:44:02 Running L1 SPFNov 28 20:44:02<br>L1 SPF initialization complete: 0.000099s cumulative timeNov 28 20:44:02 L1 SPF primary<br>processing complete: 0.000303s cumulative timeNov 28 20:44:02 L1 SPF result<br>postprocessing complete: 0.000497s cumulative timeNov 28 20:44:02 L1 SPF RIB<br>postprocessing complete: 0.000626s cumulative timeNov 28 20:44:02 L1 SPF routing<br>table postprocessing complete: 0.000736s cumulative time |

## Displaying Sent or Received IS-IS Protocol Packets

To configure the tracing for only sent or received IS-IS protocol packets, follow these steps:

1. Configure the flag to display sent, received, or both sent and received packets.

```
[edit protocols isis traceoptions]
user@host# set flag hello send
```

or

```
[edit protocols isis traceoptions]
user@host# set flag hello receive
```

or

```
[edit protocols isis traceoptions]
user@host# set flag hello
```

2. Verify the configuration.

```
user@host# show
```

For example:

```
[edit protocols isis traceoptions]
user@host# show
file isislog size 10k files 10;
flag hello send;
```

or

```
[edit protocols isis traceoptions]
user@host# show
file isislog size 10k files 10;
flag hello receive;
```

or

```
[edit protocols isis traceoptions]
user@host# show
file isislog size 10k files 10;
flag hello send receive;
```

3. Commit the configuration.

```
user@host# commit
```

4. View the contents of the file containing the detailed messages.

```
user@host# run show log filename
```

For example:

```
user@host# run show log isislog
Sep 27 18:17:01 ISIS periodic xmit to 01:80:c2:00:00:15 (IFL 2)
Sep 27 18:17:01 ISIS periodic xmit to 01:80:c2:00:00:14 (IFL 2)
Sep 27 18:17:03 ISIS periodic xmit to 01:80:c2:00:00:15 (IFL 2)
Sep 27 18:17:04 ISIS periodic xmit to 01:80:c2:00:00:14 (IFL 2)
Sep 27 18:17:06 ISIS L2 hello from 0000.0000.0008 (IFL 2) absorbed
Sep 27 18:17:06 ISIS periodic xmit to 01:80:c2:00:00:15 (IFL 2)
Sep 27 18:17:06 ISIS L1 hello from 0000.0000.0008 (IFL 2) absorbed
```

## Analyzing IS-IS Link-State PDUs in Detail

To analyze IS-IS link-state PDUs in detail, follow these steps:

1. Configure IS-IS open messages.

```
[edit protocols isis traceoptions]
user@host# set flag lsp detail
```

2. Verify the configuration.

```
user@host# show
```

For example:

```
[edit protocols isis traceoptions]
user@host# show
file isislog size 5m world-readable;
flag error;
flag lsp detail;
```

3. Commit the configuration.

```
user@host# commit
```

4. View the contents of the file containing the detailed messages.

```
user@host# run show log filename
```

For example:

```
user@host# run show log isislog
Nov 28 20:17:24 Received L2 LSP abc-core-01.00-00, interface so-1/1/0.0
Nov 28 20:17:24   from abc-core-01
Nov 28 20:17:24   sequence 0x1c4f9, checksum 0x9fea, lifetime 1199
Nov 28 20:17:24   max area 0, length 426
Nov 28 20:17:24   no partition repair, no database overload
Nov 28 20:17:24   IS type 3, metric type 0
Nov 28 20:17:24   area address 99.0908 (1)
Nov 28 20:17:24   speaks CLNP
Nov 28 20:17:24   speaks IP
Nov 28 20:17:24   dyn hostname abc-core-01
Nov 28 20:17:24   IP address 10.10.134.11
Nov 28 20:17:24   IP prefix: 10.10.10.0/30 metric 1 up
Nov 28 20:17:24   IP prefix: 10.10.10.4/30 metric 5 up
Nov 28 20:17:24   IP prefix: 10.10.10.56/30 metric 5 up
Nov 28 20:17:24   IP prefix: 10.10.10.52/30 metric 1 up
Nov 28 20:17:24   IP prefix: 10.10.10.64/30 metric 5 up
```

```
Nov 28 20:17:24 IP prefix: 10.10.10.20/30 metric 5 up
Nov 28 20:17:24 IP prefix: 10.10.10.28/30 metric 5 up
Nov 28 20:17:24 IP prefix: 10.10.10.44/30 metric 5 up
Nov 28 20:17:24 IP prefix 10.10.10.0 255.255.255.252
Nov 28 20:17:24 internal, metrics: default 1
Nov 28 20:17:24 IP prefix 10.10.10.4 255.255.255.252
Nov 28 20:17:24 internal, metrics: default 5
Nov 28 20:17:24 IP prefix 10.10.10.56 255.255.255.252
Nov 28 20:17:24 internal, metrics: default 5
Nov 28 20:17:24 IP prefix 10.10.10.52 255.255.255.252
Nov 28 20:17:24 internal, metrics: default 1
Nov 28 20:17:24 IP prefix 10.10.10.64 255.255.255.252
Nov 28 20:17:24 internal, metrics: default 5
Nov 28 20:17:24 IP prefix 10.10.10.20 255.255.255.252
Nov 28 20:17:24 internal, metrics: default 5
Nov 28 20:17:24 IP prefix 10.10.10.28 255.255.255.252
Nov 28 20:17:24 internal, metrics: default 5
Nov 28 20:17:24 IP prefix 10.10.10.44 255.255.255.252
Nov 28 20:17:24 internal, metrics: default 5
Nov 28 20:17:24 IS neighbors:
Nov 28 20:17:24 IS neighbor abc-core-02.00
Nov 28 20:17:24 internal, metrics: default 1
[...Output truncated...]
Nov 28 20:17:24 internal, metrics: default 5
Nov 28 20:17:24 IS neighbor abc-brdr-01.00
Nov 28 20:17:24 internal, metrics: default 5
Nov 28 20:17:24 IS neighbor abc-core-02.00, metric: 1
Nov 28 20:17:24 IS neighbor abc-esr-02.00, metric: 5
Nov 28 20:17:24 IS neighbor abc-edge-03.00, metric: 5
Nov 28 20:17:24 IS neighbor abc-edge-01.00, metric: 5
Nov 28 20:17:24 IS neighbor abc-edge-02.00, metric: 5
Nov 28 20:17:24 IS neighbor abc-brdr-01.00, metric: 5
Nov 28 20:17:24 IP prefix: 10.10.134.11/32 metric 0 up
Nov 28 20:17:24 IP prefix: 10.11.0.0/16 metric 5 up
Nov 28 20:17:24 IP prefix: 10.211.0.0/16 metric 0 up
Nov 28 20:17:24 IP prefix 10.10.134.11 255.255.255.255
Nov 28 20:17:24 internal, metrics: default 0
Nov 28 20:17:24 IP prefix 10.11.0.0 255.255.0.0
Nov 28 20:17:24 internal, metrics: default 5
Nov 28 20:17:24 IP prefix 10.211.0.0 255.255.0.0
Nov 28 20:17:24 internal, metrics: default 0
Nov 28 20:17:24 Updating LSP
Nov 28 20:17:24 Updating L2 LSP abc-core-01.00-00 in TED
Nov 28 20:17:24 Analyzing subtlv's for abc-core-02.00
Nov 28 20:17:24 Analysis complete
Nov 28 20:17:24 Analyzing subtlv's for abc-esr-02.00
Nov 28 20:17:24 Analysis complete
Nov 28 20:17:24 Analyzing subtlv's for abc-edge-03.00
Nov 28 20:17:24 Analysis complete
Nov 28 20:17:24 Analyzing subtlv's for abc-edge-01.00
Nov 28 20:17:24 Analysis complete
Nov 28 20:17:24 Analyzing subtlv's for abc-edge-02.00
Nov 28 20:17:24 Analysis complete
Nov 28 20:17:24 Analyzing subtlv's for abc-brdr-01.00
Nov 28 20:17:24 Analysis complete
Nov 28 20:17:24 Scheduling L2 LSP abc-core-01.00-00 sequence 0x1c4f9 on
interface so-1/1/1.0
```



## Displaying Detailed IS-IS Protocol Information

**Action** To trace IS-IS messages in detail, follow these steps:

1. Configure the flag to display detailed IS-IS protocol messages.

```
[edit protocols isis traceoptions]
user@host# set flag hello detail
```

2. Verify the configuration.

```
user@host# show
```

For example:

```
[edit protocols isis traceoptions]
user@host# show
file isislog size 10k files 10;
flag hello detail;
```

3. Commit the configuration.

```
user@host# commit
```

4. View the contents of the file containing the detailed messages.

```
user@host# run show log filename
```

For example:

```
user@host# run show log isislog
```

```
Nov 29 23:17:50 trace_on: Tracing to "/var/log/isislog" started
Nov 29 23:17:50 Sending PTP IIH on so-1/1/1.0
Nov 29 23:17:53 Sending PTP IIH on so-1/1/0.0
Nov 29 23:17:54 Received PTP IIH, source id abc-core-01 on so-1/1/0.0
Nov 29 23:17:54   from interface index 11
Nov 29 23:17:54   max area 0, circuit type 12, packet length 4469
Nov 29 23:17:54   hold time 30, circuit id 6
Nov 29 23:17:54   neighbor state up
Nov 29 23:17:54   speaks IP
Nov 29 23:17:54   area address 99.0008 (1)
Nov 29 23:17:54   IP address 10.10.10.29
Nov 29 23:17:54   4396 bytes of total padding
Nov 29 23:17:54   updating neighbor abc-core-01
Nov 29 23:17:55 Received PTP IIH, source id abc-core-02 on so-1/1/1.0
Nov 29 23:17:55   from interface index 12
Nov 29 23:17:55   max area 0, circuit type 12, packet length 4469
Nov 29 23:17:55   hold time 30, circuit id 6
Nov 29 23:17:55   neighbor state up
Nov 29 23:17:55   speaks IP
Nov 29 23:17:55   area address 99.0000 (1)
Nov 29 23:17:55   IP address 10.10.10.33
Nov 29 23:17:55   4396 bytes of total padding
Nov 29 23:17:55   updating neighbor abc-core-02
```

**Meaning** [Table 45 on page 1359](#) lists tracing flags that can be configured specific to IS-IS and presents example output for some of the flags.

Table 46: IS-IS Protocol Tracing Flags

| Tracing Flags         | Description                                | Example Output                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|-----------------------|--------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>csn</b>            | Complete sequence number PDU (CSNP)        | <p>Nov 28 20:02:48 Sending L2 CSN on interface so-1/1/0.0Nov 28 20:02:48 Sending L2 CSN on interface so-1/1/1.0</p> <p>With the <b>detail</b> option.</p> <p>Nov 28 20:06:08 Sending L2 CSN on interface so-1/1/1.0Nov 28 20:06:08 LSP abc-core-01.00-00 lifetime 1146Nov 28 20:06:08 sequence 0x1c4f8 checksum 0xa1e9Nov 28 20:06:08 LSP abc-core-02.00-00 lifetime 411Nov 28 20:06:08 sequence 0x7435 checksum 0x5424Nov 28 20:06:08 LSP abc-brdr-01.00-00 lifetime 465Nov 28 20:06:08 sequence 0xf73 checksum 0xab10Nov 28 20:06:08 LSP abc-edge-01.00-00 lifetime 1089Nov 28 20:06:08 sequence 0x1616 checksum 0xdb29Nov 28 20:06:08 LSP abc-edge-02.00-00 lifetime 1103Nov 28 20:06:08 sequence 0x45cc checksum 0x6883</p>                                                                                                                                                                                                             |
| <b>hello</b>          | Hello packet                               | <p>Nov 28 20:13:50 Sending PTP IIH on so-1/1/1.0Nov 28 20:13:50 Received PTP IIH, source id abc-core-01 on so-1/1/0.0Nov 28 20:13:53 Received PTP IIH, source id abc-core-02 on so-1/1/1.0Nov 28 20:13:57 Sending PTP IIH on so-1/1/0.0Nov 28 20:13:58 Received PTP IIH, source id abc-core-01 on so-1/1/0.0Nov 28 20:13:59 Sending PTP IIH on so-1/1/1.0</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>lsp</b>            | Link-state PDUs (LSPs)                     | <p>Nov 28 20:15:46 Received L2 LSP abc-edge-01.00-00, interface so-1/1/0.0Nov 28 20:15:46 from abc-core-01Nov 28 20:15:46 sequence 0x1617, checksum 0xd92a, lifetime 1197Nov 28 20:15:46 Updating L2 LSP abc-edge-01.00-00 in TEDNov 28 20:15:47 Received L2 LSP abc-edge-01.00-00, interface so-1/1/1.0Nov 28 20:15:47 from abc-core-02Nov 28 20:15:47 sequence 0x1617, checksum 0xd92a, lifetime 1197</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>lsp-generation</b> | Link-state PDU generation packets          | <p>Nov 28 20:21:24 Regenerating L1 LSP abc-edge-03.00-00, old sequence 0x682Nov 28 20:21:27 Rebuilding L1, fragment abc-edge-03.00-00Nov 28 20:21:27 Rebuilt L1 fragment abc-edge-03.00-00, size 59Nov 28 20:31:52 Regenerating L2 LSP abc-edge-03.00-00, old sequence 0x689Nov 28 20:31:54 Rebuilding L2, fragment abc-edge-03.00-00Nov 28 20:31:54 Rebuilt L2 fragment abc-edge-03.00-00, size 256Nov 28 20:34:05 Regenerating L1 LSP abc-edge-03.00-00, old sequence 0x683Nov 28 20:34:08 Rebuilding L1, fragment abc-edge-03.00-00Nov 28 20:34:08 Rebuilt L1 fragment abc-edge-03.00-00, size 59</p>                                                                                                                                                                                                                                                                                                                                    |
| <b>packets</b>        | All IS-IS protocol packets                 | Not available.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>psn</b>            | Partial sequence number PDU (PSNP) packets | <p>Nov 28 20:40:39 Received L2 PSN, source abc-core-01, interface so-1/1/0.0Nov 28 20:40:39 Received L2 PSN, source abc-core-02, interface so-1/1/1.0Nov 28 20:41:36 Sending L2 PSN on interface so-1/1/1.0Nov 28 20:41:36 Sending L2 PSN on interface so-1/1/0.0Nov 28 20:42:35 Received L2 PSN, source abc-core-02, interface so-1/1/1.0Nov 28 20:42:35 LSP abc-edge-03.00-00 lifetime 1196Nov 28 20:42:35 sequence 0x68c checksum 0x746dNov 28 20:42:35 Received L2 PSN, source abc-core-01, interface so-1/1/0.0Nov 28 20:42:35 LSP abc-edge-03.00-00 lifetime 1196Nov 28 20:42:35 sequence 0x68c checksum 0x746dNov 28 20:42:49 Sending L2 PSN on interface so-1/1/1.0Nov 28 20:42:49 LSP abc-core-01.00-00 lifetime 1197Nov 28 20:42:49 sequence 0x1c4fb checksum 0x9becNov 28 20:42:49 Sending L2 PSN on interface so-1/1/0.0Nov 28 20:42:49 LSP abc-core-01.00-00 lifetime 1197Nov 28 20:42:49 sequence 0x1c4fb checksum 0x9bec</p> |

Table 46: IS-IS Protocol Tracing Flags (*continued*)

| Tracing Flags | Description                            | Example Output                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|---------------|----------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| spf           | Shortest-path-first (SPF) calculations | Nov 28 20:44:01 Scheduling SPF for L1: ReconfigNov 28 20:44:01 Scheduling multicast<br>SPF for L1: ReconfigNov 28 20:44:01 Scheduling SPF for L2: ReconfigNov 28 20:44:01<br>Scheduling multicast SPF for L2: ReconfigNov 28 20:44:02 Running L1 SPFNov 28 20:44:02<br>L1 SPF initialization complete: 0.000099s cumulative timeNov 28 20:44:02 L1 SPF primary<br>processing complete: 0.000303s cumulative timeNov 28 20:44:02 L1 SPF result<br>postprocessing complete: 0.000497s cumulative timeNov 28 20:44:02 L1 SPF RIB<br>postprocessing complete: 0.000626s cumulative timeNov 28 20:44:02 L1 SPF routing<br>table postprocessing complete: 0.000736s cumulative time |

- Related Documentation**
- *Understanding IS-IS Areas to Divide an Autonomous System into Smaller Groups*
  - *Example: Configuring a Multi-Level IS-IS Topology to Control Interarea Flooding*

## Analyzing IS-IS Link-State PDUs in Detail

To analyze IS-IS link-state PDUs in detail, follow these steps:

1. Configure IS-IS open messages.

```
[edit protocols isis traceoptions]
user@host# set flag lsp detail
```

2. Verify the configuration.

```
user@host# show
```

For example:

```
[edit protocols isis traceoptions]
user@host# show
file isislog size 5m world-readable;
flag error;
flag lsp detail;
```

3. Commit the configuration.

```
user@host# commit
```

4. View the contents of the file containing the detailed messages.

```
user@host# run show log filename
```

For example:

```
user@host# run show log isislog
Nov 28 20:17:24 Received L2 LSP abc-core-01.00-00, interface so-1/1/0.0
Nov 28 20:17:24 from abc-core-01
Nov 28 20:17:24 sequence 0x1c4f9, checksum 0x9fea, lifetime 1199
Nov 28 20:17:24 max area 0, length 426
Nov 28 20:17:24 no partition repair, no database overload
Nov 28 20:17:24 IS type 3, metric type 0
Nov 28 20:17:24 area address 99.0908 (1)
Nov 28 20:17:24 speaks CLNP
Nov 28 20:17:24 speaks IP
Nov 28 20:17:24 dyn hostname abc-core-01
```

```
Nov 28 20:17:24      IP address 10.10.134.11
Nov 28 20:17:24      IP prefix: 10.10.10.0/30 metric 1 up
Nov 28 20:17:24      IP prefix: 10.10.10.4/30 metric 5 up
Nov 28 20:17:24      IP prefix: 10.10.10.56/30 metric 5 up
Nov 28 20:17:24      IP prefix: 10.10.10.52/30 metric 1 up
Nov 28 20:17:24      IP prefix: 10.10.10.64/30 metric 5 up
Nov 28 20:17:24      IP prefix: 10.10.10.20/30 metric 5 up
Nov 28 20:17:24      IP prefix: 10.10.10.28/30 metric 5 up
Nov 28 20:17:24      IP prefix: 10.10.10.44/30 metric 5 up
Nov 28 20:17:24      IP prefix 10.10.10.0 255.255.255.252
Nov 28 20:17:24      internal, metrics: default 1
Nov 28 20:17:24      IP prefix 10.10.10.4 255.255.255.252
Nov 28 20:17:24      internal, metrics: default 5
Nov 28 20:17:24      IP prefix 10.10.10.56 255.255.255.252
Nov 28 20:17:24      internal, metrics: default 5
Nov 28 20:17:24      IP prefix 10.10.10.52 255.255.255.252
Nov 28 20:17:24      internal, metrics: default 1
Nov 28 20:17:24      IP prefix 10.10.10.64 255.255.255.252
Nov 28 20:17:24      internal, metrics: default 5
Nov 28 20:17:24      IP prefix 10.10.10.20 255.255.255.252
Nov 28 20:17:24      internal, metrics: default 5
Nov 28 20:17:24      IP prefix 10.10.10.28 255.255.255.252
Nov 28 20:17:24      internal, metrics: default 5
Nov 28 20:17:24      IP prefix 10.10.10.44 255.255.255.252
Nov 28 20:17:24      internal, metrics: default 5
Nov 28 20:17:24      IS neighbors:
Nov 28 20:17:24      IS neighbor abc-core-02.00
Nov 28 20:17:24      internal, metrics: default 1
[...Output truncated...]
Nov 28 20:17:24      internal, metrics: default 5
Nov 28 20:17:24      IS neighbor abc-brdr-01.00
Nov 28 20:17:24      internal, metrics: default 5
Nov 28 20:17:24      IS neighbor abc-core-02.00, metric: 1
Nov 28 20:17:24      IS neighbor abc-esr-02.00, metric: 5
Nov 28 20:17:24      IS neighbor abc-edge-03.00, metric: 5
Nov 28 20:17:24      IS neighbor abc-edge-01.00, metric: 5
Nov 28 20:17:24      IS neighbor abc-edge-02.00, metric: 5
Nov 28 20:17:24      IS neighbor abc-brdr-01.00, metric: 5
Nov 28 20:17:24      IP prefix: 10.10.134.11/32 metric 0 up
Nov 28 20:17:24      IP prefix: 10.11.0.0/16 metric 5 up
Nov 28 20:17:24      IP prefix: 10.211.0.0/16 metric 0 up
Nov 28 20:17:24      IP prefix 10.10.134.11 255.255.255.255
Nov 28 20:17:24      internal, metrics: default 0
Nov 28 20:17:24      IP prefix 10.11.0.0 255.255.0.0
Nov 28 20:17:24      internal, metrics: default 5
Nov 28 20:17:24      IP prefix 10.211.0.0 255.255.0.0
Nov 28 20:17:24      internal, metrics: default 0
Nov 28 20:17:24      Updating LSP
Nov 28 20:17:24      Updating L2 LSP abc-core-01.00-00 in TED
Nov 28 20:17:24      Analyzing subtlv's for abc-core-02.00
Nov 28 20:17:24      Analysis complete
Nov 28 20:17:24      Analyzing subtlv's for abc-esr-02.00
Nov 28 20:17:24      Analysis complete
Nov 28 20:17:24      Analyzing subtlv's for abc-edge-03.00
Nov 28 20:17:24      Analysis complete
Nov 28 20:17:24      Analyzing subtlv's for abc-edge-01.00
Nov 28 20:17:24      Analysis complete
Nov 28 20:17:24      Analyzing subtlv's for abc-edge-02.00
Nov 28 20:17:24      Analysis complete
Nov 28 20:17:24      Analyzing subtlv's for abc-brdr-01.00
Nov 28 20:17:24      Analysis complete
```

Nov 28 20:17:24 Scheduling L2 LSP abc-core-01.00-00 sequence 0x1c4f9 on interface so-1/1/1.0

- Related Documentation**
- *Understanding IS-IS Areas to Divide an Autonomous System into Smaller Groups*
  - *Example: Configuring a Multi-Level IS-IS Topology to Control Interarea Flooding*

## Configure OSPF-Specific Options

**Purpose** When unexpected events or problems occur, or if you want to diagnose OSPF neighbor establishment issues, you can view more detailed information by configuring options specific to OSPF.

To configure OSPF options, follow these steps:

1. [Diagnose OSPF Session Establishment Problems on page 1367](#)
2. [Analyze OSPF Link-State Advertisement Packets in Detail on page 1371](#)

## Diagnose OSPF Session Establishment Problems

**Action** To trace OSPF messages in detail, follow these steps:

1. In configuration mode, go to the following hierarchy level:

```
[edit]
user@host# edit protocols ospf traceoptions
```

2. Configure OSPF hello messages:

```
[edit protocols ospf traceoptions]
user@host# set flag hello detail
```

3. Verify the configuration:

```
user@host# show
```

For example:

```
[edit protocols ospf traceoptions]
user@host# show
file ospf size 5m world-readable;
flag hello detail;
```

4. Commit the configuration:

```
user@host# commit
```

5. View the contents of the file containing the detailed messages:

```
user@host# run show log filename
```

For example:

```
user@host# run show log ospf
```

```
Dec 2 16:14:24 Version 2, length 44, ID 10.0.0.6, area 1.0.0.0
Dec 2 16:14:24 checksum 0xf01a, authtype 0
Dec 2 16:14:24 mask 0.0.0.0, hello_ivl 10, opts 0x2, prio 128
Dec 2 16:14:24 dead_ivl 40, DR 0.0.0.0, BDR 0.0.0.0
Dec 2 16:14:24 OSPF sent Hello (1) -> 224.0.0.5 (so-1/1/2.0)
Dec 2 16:14:24 Version 2, length 44, ID 10.0.0.6, area 1.0.0.0
```

```

Dec 2 16:14:24 checksum 0xf01a, authtype 0
Dec 2 16:14:24 mask 0.0.0.0, hello_ivl 10, opts 0x2, prio 128
Dec 2 16:14:24 dead_ivl 40, DR 0.0.0.0, BDR 0.0.0.0
Dec 2 16:14:26 OSPF rcvd Hello 10.10.10.33 -> 224.0.0.5 (so-1/1/1.0)
Dec 2 16:14:26 Version 2, length 48, ID 10.10.134.12, area 0.0.0.0
Dec 2 16:14:26 checksum 0x99b8, authtype 0Dec 2 16:14:26 mask 255.255.255.252,
hello_ivl 10, opts 0x2, prio 1
Dec 2 16:14:26 dead_ivl 40, DR 0.0.0.0, BDR 0.0.0.0
Dec 2 16:14:29 OSPF rcvd Hello 10.10.10.29 -> 224.0.0.5 (so-1/1/0.0)
Dec 2 16:14:29 Version 2, length 48, ID 10.108.134.11, area 0.0.0.0
Dec 2 16:14:29 checksum 0x99b9, authtype 0Dec 2 16:14:29 mask 255.255.255.252,
hello_ivl 10, opts 0x2, prio 1
Dec 2 16:14:29 dead_ivl 40, DR 0.0.0.0, BDR 0.0.0.0

```

**Meaning** Table 47 on page 1368 lists OSPF tracing flags and presents example output for some of the flags.

**Table 47: OSPF Protocol Tracing Flags**

| Tracing Flags                   | Description                      | Example Output                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|---------------------------------|----------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <del>database-description</del> | All database description packets | Dec 2 15:44:51 RPD_OSPF_NBRDOWN: OSPF neighbor 10.10.10.29 (so-1/1/0.0) state changed from Full to Down<br>Dec 2 15:44:51 RPD_OSPF_NBRDOWN: OSPF neighbor 10.10.10.33 (so-1/1/1.0) state changed from Full to Down<br>Dec 2 15:44:55 RPD_OSPF_NBRUP: OSPF neighbor 10.10.10.33 (so-1/1/1.0) state changed from Init to ExStart<br>Dec 2 15:44:55 OSPF sent DbD (2) -> 224.0.0.5 (so-1/1/1.0)<br>Dec 2 15:44:55 Version 2, length 32, ID 10.0.0.6, area 0.0.0.0<br>Dec 2 15:44:55 checksum 0xf76b, authtype 0<br>Dec 2 15:44:55 options 0x42, i 1, m 1, ms 1, seq 0xa009eee, mtu 4470<br>Dec 2 15:44:55 OSPF rcvd DbD 10.10.10.33 -> 224.0.0.5 (so-1/1/1.0)<br>Dec 2 15:44:55 Version 2, length 32, ID 10.10.134.12, area 0.0.0.0<br>Dec 2 15:44:55 checksum 0x312c, authtype 0<br>Dec 2 15:44:55 options 0x42, i 1, m 1, ms 1, seq 0x2154, mtu 4470 |
| error                           | OSPF errored packets             | Dec 2 15:49:34 OSPF packet ignored: no matching interface from 172.16.120.29<br>Dec 2 15:49:44 OSPF packet ignored: no matching interface from 172.16.120.29<br>Dec 2 15:49:54 OSPF packet ignored: no matching interface from 172.16.120.29<br>Dec 2 15:50:04 OSPF packet ignored: no matching interface from 172.16.120.29<br>Dec 2 15:50:14 OSPF packet ignored: no matching interface from 172.16.120.29                                                                                                                                                                                                                                                                                                                                                                                                                                        |

Table 47: OSPF Protocol Tracing Flags (*continued*)

| Tracing Flags | Description                 | Example Output                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|---------------|-----------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| event         | OSPF state transitions      | Dec 2 15:52:35 OSPF interface ge-2/2/0.0 state changed from DR to DR<br>Dec 2 15:52:35 OSPF interface ge-3/1/0.0 state changed from DR to DR<br>Dec 2 15:52:35 OSPF interface ge-3/2/0.0 state changed from DR to DR<br>Dec 2 15:52:35 OSPF interface ge-4/2/0.0 state changed from DR to DR<br>Dec 2 15:53:21 OSPF neighbor 10.10.10.29 (so-1/1/0.0) state changed from Full to Down<br>Dec 2 15:53:21 RPD_OSPF_NBRDOWN: OSPF neighbor 10.10.10.29 (so-1/1/0.0) state changed from Full to Down<br>Dec 2 15:53:21 OSPF neighbor 10.10.10.33 (so-1/1/1.0) state changed from Full to Down<br>Dec 2 15:53:21 RPD_OSPF_NBRDOWN: OSPF neighbor 10.10.10.33 (so-1/1/1.0) state changed from Full to Down<br>Dec 2 15:53:25 OSPF neighbor 10.10.10.33 (so-1/1/1.0) state changed from Down to Init<br>Dec 2 15:53:25 OSPF neighbor 10.10.10.33 (so-1/1/1.0) state changed from Init to ExStart<br>Dec 2 15:53:25 RPD_OSPF_NBRUP: OSPF neighbor 10.10.10.33 (so-1/1/1.0) state changed from Init to ExStart<br>Dec 2 15:53:25 OSPF neighbor 10.10.10.33 (so-1/1/1.0) state changed from ExStart to Exchange<br>Dec 2 15:53:25 OSPF neighbor 10.10.10.33 (so-1/1/1.0) state changed from Exchange to Full<br>Dec 2 15:53:25 RPD_OSPF_NBRUP: OSPF neighbor 10.10.10.33 (so-1/1/1.0) state changed from Exchange to Full |
| flooding      | Link-state flooding packets | Dec 2 15:55:21 OSPF LSA Summary 10.218.0.0 10.0.0.6 flooding on so-1/1/0.0<br>Dec 2 15:55:21 OSPF LSA Summary 10.218.0.0 10.0.0.6 flooding on so-1/1/1.0<br>Dec 2 15:55:21 OSPF LSA Summary 10.218.0.0 10.0.0.6 on no so-1/1/2.0 rexit lists, no flood<br>Dec 2 15:55:21 OSPF LSA Summary 10.218.0.0 10.0.0.6 on no so-1/1/3.0 rexit lists, no flood<br><br>Dec 2 15:55:21 OSPF LSA Summary 10.245.0.1 10.0.0.6 on no so-1/1/2.0 rexit lists, no flood<br>Dec 2 15:55:21 OSPF LSA Summary 10.245.0.1 10.0.0.6 on no so-1/1/3.0 rexit lists, no flood                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |

Table 47: OSPF Protocol Tracing Flags (*continued*)

| Tracing Flags | Description                                | Example Output                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|---------------|--------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| hello         | Hello packets                              | Dec 2 15:57:25 OSPF sent Hello (1) -> 224.0.0.5 (ge-3/1/0.0)<br>Dec 2 15:57:25 Version 2, length 44, ID 10.0.0.6, area 2.0.0.0<br>Dec 2 15:57:25 checksum 0xe43f, authtype 0<br>Dec 2 15:57:25 mask 255.255.0.0, hello_jvl 10, opts 0x2, prio 128<br>Dec 2 15:57:25 dead_jvl 40, DR 10.218.0.1, BDR 0.0.0.0<br>Dec 2 15:57:25 OSPF rcvd Hello 10.10.10.33 -> 224.0.0.5 (so-1/1/1.0)<br>Dec 2 15:57:25 Version 2, length 48, ID 10.10.134.12, area 0.0.0.0<br>Dec 2 15:57:25 checksum 0x99b8, authtype 0<br>Dec 2 15:57:25 mask 255.255.255.252, hello_jvl 10, opts 0x2, prio 1<br>Dec 2 15:57:25 dead_jvl 40, DR 0.0.0.0, BDR 0.0.0.0<br>Dec 2 15:57:27 OSPF sent Hello (1) -> 224.0.0.5 (ge-3/2/0.0)<br>Dec 2 15:57:27 Version 2, length 44, ID 10.0.0.6, area 2.0.0.0<br>Dec 2 15:57:27 checksum 0xe4a5, authtype 0<br>Dec 2 15:57:27 mask 255.255.0.0, hello_jvl 10, opts 0x2, prio 128<br>Dec 2 15:57:27 dead_jvl 40, DR 10.116.0.1, BDR 0.0.0.0<br>Dec 2 15:57:28 OSPF rcvd Hello 10.10.10.29 -> 224.0.0.5 (so-1/1/0.0)<br>Dec 2 15:57:28 Version 2, length 48, ID 10.10.134.11, area 0.0.0.0<br>Dec 2 15:57:28 checksum 0x99b9, authtype 0<br>Dec 2 15:57:28 mask 255.255.255.252, hello_jvl 10, opts 0x2, prio 1<br>Dec 2 15:57:28 dead_jvl 40, DR 0.0.0.0, BDR 0.0.0.0 |
| lsa-ack       | Link-state acknowledgment packets          | Dec 2 16:00:11 OSPF rcvd LSAck 10.10.10.29 -> 224.0.0.5 (so-1/1/0.0)<br>Dec 2 16:00:11 Version 2, length 44, ID 10.10.134.11, area 0.0.0.0<br>Dec 2 16:00:11 checksum 0xcdbf, authtype 0<br>Dec 2 16:00:11 OSPF rcvd LSAck 10.10.10.33 -> 224.0.0.5 (so-1/1/1.0)<br>Dec 2 16:00:11 Version 2, length 144, ID 10.10.134.12, area 0.0.0.0<br>Dec 2 16:00:11 checksum 0x73bc, authtype 0<br>Dec 2 16:00:16 OSPF rcvd LSAck 10.10.10.33 -> 224.0.0.5 (so-1/1/1.0)<br>Dec 2 16:00:16 Version 2, length 44, ID 10.10.134.12, area 0.0.0.0<br>Dec 2 16:00:16 checksum 0x8180, authtype 0                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| lsa-request   | Link-state request packets                 | Dec 2 16:01:38 OSPF rcvd LSReq 10.10.10.29 -> 224.0.0.5 (so-1/1/0.0)<br>Dec 2 16:01:38 Version 2, length 108, ID 10.10.134.11, area 0.0.0.0<br>Dec 2 16:01:38 checksum 0xe86, authtype 0                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| lsa-update    | Link-state update packets                  | Dec 2 16:09:12 OSPF built router LSA, area 0.0.0.0<br>Dec 2 16:09:12 OSPF built router LSA, area 1.0.0.0<br>Dec 2 16:09:12 OSPF built router LSA, area 2.0.0.0<br>Dec 2 16:09:13 OSPF sent LSUpdate (4) -> 224.0.0.5 (so-1/1/0.0)<br>Dec 2 16:09:13 Version 2, length 268, ID 10.0.0.6, area 0.0.0.0<br>Dec 2 16:09:13 checksum 0x8047, authtype 0<br>Dec 2 16:09:13 adv count 7<br>Dec 2 16:09:13 OSPF sent LSUpdate (4) -> 224.0.0.5 (so-1/1/1.0)<br>Dec 2 16:09:13 Version 2, length 268, ID 10.0.0.6, area 0.0.0.0<br>Dec 2 16:09:13 checksum 0x8047, authtype 0<br>Dec 2 16:09:13 adv count 7                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| packets       | All OSPF packets                           | Not available.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| packet-dump   | Dump the contents of selected packet types | Not available.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |



Table 47: OSPF Protocol Tracing Flags (*continued*)

| Tracing Flags | Description      | Example Output                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|---------------|------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| spf           | SPF calculations | Dec 2 16:08:03 OSPF full SPF refresh scheduled<br>Dec 2 16:08:04 OSPF SPF start, area 1.0.0.0<br>Dec 2 16:08:04 OSPF add LSA Router 10.0.0.6 distance 0 to SPF list<br>Dec 2 16:08:04 SPF elapsed time 0.000525s<br>Dec 2 16:08:04 Stub elapsed time 0.000263s<br>Dec 2 16:08:04 OSPF SPF start, area 2.0.0.0<br>Dec 2 16:08:04 OSPF add LSA Router 10.0.0.6 distance 0 to SPF list<br>Dec 2 16:08:04 SPF elapsed time 0.000253s<br>Dec 2 16:08:04 Stub elapsed time 0.000249s<br>Dec 2 16:08:04 OSPF SPF start, area 0.0.0.0<br>Dec 2 16:08:04 OSPF add LSA Router 10.0.0.6 distance 0 to SPF list<br>Dec 2 16:08:04 OSPF add LSA Router 10.10.134.11 distance 1 to SPF list<br>Dec 2 16:08:04 IP nexthop so-1/1/0.0 0.0.0.0<br>Dec 2 16:08:04 OSPF add LSA Router 10.10.134.12 distance 1 to SPF list<br>Dec 2 16:08:04 IP nexthop so-1/1/1.0 0.0.0.0 |

### Analyze OSPF Link-State Advertisement Packets in Detail

**Action** To analyze OSPF link-state advertisement packets in detail, follow these steps:

1. In configuration mode, go to the following hierarchy level:

```
[edit]
user@host# edit protocols ospf traceoptions
```

2. Configure OSPF link-state packages:

```
[edit protocols ospf traceoptions]
user@host# set flag lsa-update detail
```

3. Verify the configuration:

```
user@host# show
```

For example:

```
[edit protocols ospf traceoptions]
user@host# show
file ospf size 5m world-readable;
flag hello detail;
flag lsa-update detail;
```

4. Commit the configuration:

```
user@host# commit
```

5. View the contents of the file containing the detailed messages:

```
user@host# run show log filename
```

For example:

```
user@host# run show log ospf
```

```
Dec 2 16:23:47 OSPF sent LSUpdate (4) -> 224.0.0.5 (so-1/1/0.0) ec 2 16:23:47
Version 2, length 196, ID 10.0.0.6, area 0.0.0.0
Dec 2 16:23:47 checksum 0xcc46, authtype 0
```

```
Dec 2 16:23:47 adv count 6 Dec 2 16:23:47 OSPF sent LSUpdate (4) -> 224.0.0.5
(so-1/1/1.0)
Dec 2 16:23:47 Version 2, length 196, ID 10.0.0.6, area 0.0.0.0 Dec 2 16:23:47
checksum 0xcc46, authtype 0
Dec 2 16:23:47 adv count 6
```

## Diagnose OSPF Session Establishment Problems

**Action** To trace OSPF messages in detail, follow these steps:

1. In configuration mode, go to the following hierarchy level:

```
[edit]
user@host# edit protocols ospf traceoptions
```

2. Configure OSPF hello messages:

```
[edit protocols ospf traceoptions]
user@host# set flag hello detail
```

3. Verify the configuration:

```
user@host# show
```

For example:

```
[edit protocols ospf traceoptions]
user@host# show
file ospf size 5m world-readable;
flag hello detail;
```

4. Commit the configuration:

```
user@host# commit
```

5. View the contents of the file containing the detailed messages:

```
user@host# run show log filename
```

For example:

```
user@host# run show log ospf
```

```
Dec 2 16:14:24 Version 2, length 44, ID 10.0.0.6, area 1.0.0.0
Dec 2 16:14:24 checksum 0xf01a, authtype 0
Dec 2 16:14:24 mask 0.0.0.0, hello_ivl 10, opts 0x2, prio 128
Dec 2 16:14:24 dead_ivl 40, DR 0.0.0.0, BDR 0.0.0.0
Dec 2 16:14:24 OSPF sent Hello (1) -> 224.0.0.5 (so-1/1/2.0)
Dec 2 16:14:24 Version 2, length 44, ID 10.0.0.6, area 1.0.0.0
Dec 2 16:14:24 checksum 0xf01a, authtype 0
Dec 2 16:14:24 mask 0.0.0.0, hello_ivl 10, opts 0x2, prio 128
Dec 2 16:14:24 dead_ivl 40, DR 0.0.0.0, BDR 0.0.0.0
Dec 2 16:14:26 OSPF rcvd Hello 10.10.10.33 -> 224.0.0.5 (so-1/1/1.0)
Dec 2 16:14:26 Version 2, length 48, ID 10.10.134.12, area 0.0.0.0
Dec 2 16:14:26 checksum 0x99b8, authtype 0Dec 2 16:14:26 mask 255.255.255.252,
hello_ivl 10, opts 0x2, prio 1
Dec 2 16:14:26 dead_ivl 40, DR 0.0.0.0, BDR 0.0.0.0
Dec 2 16:14:29 OSPF rcvd Hello 10.10.10.29 -> 224.0.0.5 (so-1/1/0.0)
Dec 2 16:14:29 Version 2, length 48, ID 10.108.134.11, area 0.0.0.0
Dec 2 16:14:29 checksum 0x99b9, authtype 0Dec 2 16:14:29 mask 255.255.255.252,
hello_ivl 10, opts 0x2, prio 1
Dec 2 16:14:29 dead_ivl 40, DR 0.0.0.0, BDR 0.0.0.0
```

**Meaning** Table 47 on page 1368 lists OSPF tracing flags and presents example output for some of the flags.

**Table 48: OSPF Protocol Tracing Flags**

| Tracing Flags                   | Description                      | Example Output                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|---------------------------------|----------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <del>database-description</del> | All database description packets | Dec 2 15:44:51 RPD_OSPF_NBRDOWN: OSPF neighbor 10.10.10.29 (so-1/1/0.0) state changed from Full to Down<br>Dec 2 15:44:51 RPD_OSPF_NBRDOWN: OSPF neighbor 10.10.10.33 (so-1/1/1.0) state changed from Full to Down<br>Dec 2 15:44:55 RPD_OSPF_NBRUP: OSPF neighbor 10.10.10.33 (so-1/1/1.0) state changed from Init to ExStart<br>Dec 2 15:44:55 OSPF sent DbD (2) -> 224.0.0.5 (so-1/1/1.0)<br>Dec 2 15:44:55 Version 2, length 32, ID 10.0.0.6, area 0.0.0.0<br>Dec 2 15:44:55 checksum 0xf76b, authtype 0<br>Dec 2 15:44:55 options 0x42, i 1, m 1, ms 1, seq 0xa009eee, mtu 4470<br>Dec 2 15:44:55 OSPF rcvd DbD 10.10.10.33 -> 224.0.0.5 (so-1/1/1.0)<br>Dec 2 15:44:55 Version 2, length 32, ID 10.10.134.12, area 0.0.0.0<br>Dec 2 15:44:55 checksum 0x312c, authtype 0<br>Dec 2 15:44:55 options 0x42, i 1, m 1, ms 1, seq 0x2154, mtu 4470                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| error                           | OSPF errored packets             | Dec 2 15:49:34 OSPF packet ignored: no matching interface from 172.16.120.29<br>Dec 2 15:49:44 OSPF packet ignored: no matching interface from 172.16.120.29<br>Dec 2 15:49:54 OSPF packet ignored: no matching interface from 172.16.120.29<br>Dec 2 15:50:04 OSPF packet ignored: no matching interface from 172.16.120.29<br>Dec 2 15:50:14 OSPF packet ignored: no matching interface from 172.16.120.29                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| event                           | OSPF state transitions           | Dec 2 15:52:35 OSPF interface ge-2/2/0.0 state changed from DR to DR<br>Dec 2 15:52:35 OSPF interface ge-3/1/0.0 state changed from DR to DR<br>Dec 2 15:52:35 OSPF interface ge-3/2/0.0 state changed from DR to DR<br>Dec 2 15:52:35 OSPF interface ge-4/2/0.0 state changed from DR to DR<br>Dec 2 15:53:21 OSPF neighbor 10.10.10.29 (so-1/1/0.0) state changed from Full to Down<br>Dec 2 15:53:21 RPD_OSPF_NBRDOWN: OSPF neighbor 10.10.10.29 (so-1/1/0.0) state changed from Full to Down<br>Dec 2 15:53:21 OSPF neighbor 10.10.10.33 (so-1/1/1.0) state changed from Full to Down<br>Dec 2 15:53:21 RPD_OSPF_NBRDOWN: OSPF neighbor 10.10.10.33 (so-1/1/1.0) state changed from Full to Down<br>Dec 2 15:53:25 OSPF neighbor 10.10.10.33 (so-1/1/1.0) state changed from Down to Init<br>Dec 2 15:53:25 OSPF neighbor 10.10.10.33 (so-1/1/1.0) state changed from Init to ExStart<br>Dec 2 15:53:25 RPD_OSPF_NBRUP: OSPF neighbor 10.10.10.33 (so-1/1/1.0) state changed from Init to ExStart<br>Dec 2 15:53:25 OSPF neighbor 10.10.10.33 (so-1/1/1.0) state changed from ExStart to Exchange<br>Dec 2 15:53:25 OSPF neighbor 10.10.10.33 (so-1/1/1.0) state changed from Exchange to Full<br>Dec 2 15:53:25 RPD_OSPF_NBRUP: OSPF neighbor 10.10.10.33 (so-1/1/1.0) state changed from Exchange to Full |

Table 48: OSPF Protocol Tracing Flags (*continued*)

| Tracing Flags      | Description                       | Example Output                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|--------------------|-----------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>flooding</b>    | Link-state flooding packets       | Dec 2 15:55:21 OSPF LSA Summary 10.218.0.0 10.0.0.6 flooding on so-1/1/0.0<br>Dec 2 15:55:21 OSPF LSA Summary 10.218.0.0 10.0.0.6 flooding on so-1/1/1.0<br>Dec 2 15:55:21 OSPF LSA Summary 10.218.0.0 10.0.0.6 on no so-1/1/2.0 retransmit lists, no flood<br>Dec 2 15:55:21 OSPF LSA Summary 10.218.0.0 10.0.0.6 on no so-1/1/3.0 retransmit lists, no flood<br><br>Dec 2 15:55:21 OSPF LSA Summary 10.245.0.1 10.0.0.6 on no so-1/1/2.0 retransmit lists, no flood<br>Dec 2 15:55:21 OSPF LSA Summary 10.245.0.1 10.0.0.6 on no so-1/1/3.0 retransmit lists, no flood                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>hello</b>       | Hello packets                     | Dec 2 15:57:25 OSPF sent Hello (1) -> 224.0.0.5 (ge-3/1/0.0)<br>Dec 2 15:57:25 Version 2, length 44, ID 10.0.0.6, area 2.0.0.0<br>Dec 2 15:57:25 checksum 0xe43f, authtype 0<br>Dec 2 15:57:25 mask 255.255.0.0, hello_intvl 10, opts 0x2, prio 128<br>Dec 2 15:57:25 dead_intvl 40, DR 10.218.0.1, BDR 0.0.0.0<br>Dec 2 15:57:25 OSPF rcvd Hello 10.10.10.33 -> 224.0.0.5 (so-1/1/1.0)<br>Dec 2 15:57:25 Version 2, length 48, ID 10.10.134.12, area 0.0.0.0<br>Dec 2 15:57:25 checksum 0x99b8, authtype 0<br>Dec 2 15:57:25 mask 255.255.255.252, hello_intvl 10, opts 0x2, prio 1<br>Dec 2 15:57:25 dead_intvl 40, DR 0.0.0.0, BDR 0.0.0.0<br>Dec 2 15:57:27 OSPF sent Hello (1) -> 224.0.0.5 (ge-3/2/0.0)<br>Dec 2 15:57:27 Version 2, length 44, ID 10.0.0.6, area 2.0.0.0<br>Dec 2 15:57:27 checksum 0xe4a5, authtype 0<br>Dec 2 15:57:27 mask 255.255.0.0, hello_intvl 10, opts 0x2, prio 128<br>Dec 2 15:57:27 dead_intvl 40, DR 10.116.0.1, BDR 0.0.0.0<br>Dec 2 15:57:28 OSPF rcvd Hello 10.10.10.29 -> 224.0.0.5 (so-1/1/0.0)<br>Dec 2 15:57:28 Version 2, length 48, ID 10.10.134.11, area 0.0.0.0<br>Dec 2 15:57:28 checksum 0x99b9, authtype 0<br>Dec 2 15:57:28 mask 255.255.255.252, hello_intvl 10, opts 0x2, prio 1<br>Dec 2 15:57:28 dead_intvl 40, DR 0.0.0.0, BDR 0.0.0.0 |
| <b>lsa-ack</b>     | Link-state acknowledgment packets | Dec 2 16:00:11 OSPF rcvd LSAck 10.10.10.29 -> 224.0.0.5 (so-1/1/0.0)<br>Dec 2 16:00:11 Version 2, length 44, ID 10.10.134.11, area 0.0.0.0<br>Dec 2 16:00:11 checksum 0xcdbf, authtype 0<br>Dec 2 16:00:11 OSPF rcvd LSAck 10.10.10.33 -> 224.0.0.5 (so-1/1/1.0)<br>Dec 2 16:00:11 Version 2, length 144, ID 10.10.134.12, area 0.0.0.0<br>Dec 2 16:00:11 checksum 0x73bc, authtype 0<br>Dec 2 16:00:16 OSPF rcvd LSAck 10.10.10.33 -> 224.0.0.5 (so-1/1/1.0)<br>Dec 2 16:00:16 Version 2, length 44, ID 10.10.134.12, area 0.0.0.0<br>Dec 2 16:00:16 checksum 0x8180, authtype 0                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>lsa-request</b> | Link-state request packets        | Dec 2 16:01:38 OSPF rcvd LSReq 10.10.10.29 -> 224.0.0.5 (so-1/1/0.0)<br>Dec 2 16:01:38 Version 2, length 108, ID 10.10.134.11, area 0.0.0.0<br>Dec 2 16:01:38 checksum 0xe86, authtype 0                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |

Table 48: OSPF Protocol Tracing Flags (*continued*)

| Tracing Flags      | Description                                | Example Output                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|--------------------|--------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>lsa-update</b>  | Link-state update packets                  | Dec 2 16:09:12 OSPF built router LSA, area 0.0.0.0<br>Dec 2 16:09:12 OSPF built router LSA, area 1.0.0.0<br>Dec 2 16:09:12 OSPF built router LSA, area 2.0.0.0<br>Dec 2 16:09:13 OSPF sent LSUpdate (4) -> 224.0.0.5 (so-1/1/0.0)<br>Dec 2 16:09:13 Version 2, length 268, ID 10.0.0.6, area 0.0.0.0<br>Dec 2 16:09:13 checksum 0x8047, authtype 0<br>Dec 2 16:09:13 adv count 7<br>Dec 2 16:09:13 OSPF sent LSUpdate (4) -> 224.0.0.5 (so-1/1/1.0)<br>Dec 2 16:09:13 Version 2, length 268, ID 10.0.0.6, area 0.0.0.0<br>Dec 2 16:09:13 checksum 0x8047, authtype 0<br>Dec 2 16:09:13 adv count 7                                                                                                                                                                                                                                                      |
| <b>packets</b>     | All OSPF packets                           | Not available.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>packet-dump</b> | Dump the contents of selected packet types | Not available.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>spf</b>         | SPF calculations                           | Dec 2 16:08:03 OSPF full SPF refresh scheduled<br>Dec 2 16:08:04 OSPF SPF start, area 1.0.0.0<br>Dec 2 16:08:04 OSPF add LSA Router 10.0.0.6 distance 0 to SPF list<br>Dec 2 16:08:04 SPF elapsed time 0.000525s<br>Dec 2 16:08:04 Stub elapsed time 0.000263s<br>Dec 2 16:08:04 OSPF SPF start, area 2.0.0.0<br>Dec 2 16:08:04 OSPF add LSA Router 10.0.0.6 distance 0 to SPF list<br>Dec 2 16:08:04 SPF elapsed time 0.000253s<br>Dec 2 16:08:04 Stub elapsed time 0.000249s<br>Dec 2 16:08:04 OSPF SPF start, area 0.0.0.0<br>Dec 2 16:08:04 OSPF add LSA Router 10.0.0.6 distance 0 to SPF list<br>Dec 2 16:08:04 OSPF add LSA Router 10.10.134.11 distance 1 to SPF list<br>Dec 2 16:08:04 IP nexthop so-1/1/0.0 0.0.0.0<br>Dec 2 16:08:04 OSPF add LSA Router 10.10.134.12 distance 1 to SPF list<br>Dec 2 16:08:04 IP nexthop so-1/1/1.0 0.0.0.0 |

## Analyze OSPF Link-State Advertisement Packets in Detail

**Action** To analyze OSPF link-state advertisement packets in detail, follow these steps:

1. In configuration mode, go to the following hierarchy level:

```
[edit]
user@host# edit protocols ospf traceoptions
```

2. Configure OSPF link-state packages:

```
[edit protocols ospf traceoptions]
user@host# set flag lsa-update detail
```

3. Verify the configuration:

```
user@host# show
```

For example:

```
[edit protocols ospf traceoptions]
```

```

user@host# show
file ospf size 5m world-readable;
flag hello detail;
flag lsa-update detail;

```

4. Commit the configuration:

```

user@host# commit

```

5. View the contents of the file containing the detailed messages:

```

user@host# run show log filename

```

For example:

```

user@host# run show log ospf

```

```

Dec 2 16:23:47 OSPF sent LSUpdate (4) -> 224.0.0.5 (so-1/1/0.0) ec 2 16:23:47
Version 2, length 196, ID 10.0.0.6, area 0.0.0.0
Dec 2 16:23:47 checksum 0xcc46, authtype 0
Dec 2 16:23:47 adv count 6 Dec 2 16:23:47 OSPF sent LSUpdate (4) -> 224.0.0.5
(so-1/1/1.0)
Dec 2 16:23:47 Version 2, length 196, ID 10.0.0.6, area 0.0.0.0 Dec 2 16:23:47
checksum 0xcc46, authtype 0
Dec 2 16:23:47 adv count 6

```

## Chassis

Chassis dimensions are listed in the physical specifications table for each router. For more information about chassis dimensions, see the router platform-specific hardware guide.

Each Juniper Networks router features a rigid sheet metal chassis that houses all of the router components. The chassis are designed to install into a variety of racks, including standard 19-inch equipment racks, telco center-mount racks, and four-post racks and cabinets. See [Table 49 on page 1376](#) for the maximum number of each router type that can be installed into a rack. Each chassis includes mounting ears or support posts to facilitate rack mounting, and one or more points for connecting an electrostatic discharge (ESD) wrist strap for use when servicing the router.

**Table 49: Maximum Number of Routers per Rack**

| Router or Routing Node | Maximum in Standard Rack |
|------------------------|--------------------------|
| T640                   | 2                        |
| T320                   | 3                        |
| M160                   | 2                        |
| M40e                   | 2                        |
| M40                    | 2                        |
| M20                    | 5                        |

**Table 49: Maximum Number of Routers per Rack** (*continued*)

| Router or Routing Node | Maximum in Standard Rack |
|------------------------|--------------------------|
| M5 and M10             | 14                       |

Each chassis includes a midplane (called the backplane on an M40 router). The midplane transfers data packets to and from the FPCs, distributes power to router components, and provides signal connectivity to the router components for system monitoring and control.

## Physical Interface Cards

Juniper Networks M-series routers and T-series platforms use PICs to connect to a wide variety of network media. PICs receive incoming packets from the network and transmit outgoing packets to the network, performing framing and line-speed signaling for their specific media type. Before transmitting outgoing data packets, the PICs encapsulate the packets received from the FPCs. Each PIC is equipped with an ASIC that performs control functions specific to the PIC's media type. For information about PICs, see the specific PIC guide.

## Routing Engine

The Routing Engine consists of an Intel-based PCI platform running the Junos OS. The Routing Engine maintains the routing tables used by the router in which it is installed and controls the routing protocols on the router. The T640 routing node, and the T320, M160, M40e, and M20 routers support up to two Routing Engines, while the M40, M10, and M5 routers support a single Routing Engine.

Each Routing Engine consists of a CPU; SDRAM for storage of the routing and forwarding tables and other processes; a compact flash disk for primary storage of software images, configuration files, and microcode; a hard disk for secondary storage; a PC card slot (on some M40 routers, a floppy disk) for storage of software upgrades; and interfaces for out-of-band management access.

## Compare Information Logged Before and After the Reinstall

**Purpose** Compare the operation of the system before and after the reinstall to ensure that everything is working as expected.

**Action** To obtain system information, use the following commands:

```

user@host> show version
user@host> show chassis hardware
user@host> show chassis environment
user@host> show system boot-messages
user@host> show configuration
user@host> show interface terse
user@host> show bgp summary
user@host> show isis adjacency brief
user@host> show ospf neighbor brief

```

```
user@host> show system storage
```

Compare the information from these commands with the information you obtained before the reinstall.

---

## Back Up the New Software

**Purpose** After a week or so, when you are satisfied that the new software is running successfully, we recommend that you back up the reinstalled software.

**Action** To back up the reinstalled software, use the following Junos OS CLI operational mode command:

```
user@host> request system snapshot
```

The root file system is backed up to `/altroot`, and `/config` is backed up to `/altconfig`. The root and `/config` file systems are on the router's internal flash drive, and the `/altroot` and `/altconfig` file systems are on the router's hard drive.



**NOTE:** After you issue the `request system snapshot` command, you cannot return to the previous version of the software because the running and backup copies of the software are identical.

---

---

## Monitor Hardware Components

**Purpose**



**NOTE:** If the System Control Board (SCB), System and Switch Board (SSB), or Forwarding Engine Board (FEB) is not running, information about chassis components is not available through the command-line interface (CLI).

---

**Action** To use the CLI to monitor Juniper Networks routers, follow these steps:

1. Log in to the router. The CLI operational mode prompt (`>`) appears.

If the operational mode prompt does not appear when you log in to the router, type `cli` to start the Junos OS and enter operational mode. The prompt changes to `>`, indicating that you are in operational mode.

2. Use one of the operational mode CLI commands listed in *Operational Mode CLI Commands for Router Monitoring* to monitor router hardware.

---

## Log Software Version Information

**Purpose** To log the Junos OS version information.

**Action** To log the Junos OS version information, use the following Junos OS CLI operational mode command:



```
user@host> show version
```

**Sample Output**

```
user@host> show version
Hostname: host
Model: m10
JUNOS Base OS boot [5.0R5]
JUNOS Base OS Software Suite [5.0R5]
JUNOS Kernel Software Suite [5.0R5]
JUNOS Routing Software Suite [5.0R5]
JUNOS Packet Forwarding Engine Support [5.0R5]
JUNOS Crypto Software Suite [5.0R5]
JUNOS Online Documentation [5.0R5]
KERNEL 5.0R5 #0 built by builder on 2002-03-02 05:10:28 UTC
MGD release 5.0R5 built by builder on 2002-03-02 04:45:32 UTC
CLI release 5.0R5 built by builder on 2002-03-02 04:44:22 UTC
CHASSISD release 5.0R5 built by builder on 2002-03-02 04:43:37 UTC
DCD release 5.0R5 built by builder on 2002-03-02 04:42:47 UTC
RPD release 5.0R5 built by builder on 2002-03-02 04:46:17 UTC
SNMPD release 5.0R5 built by builder on 2002-03-02 04:52:26 UTC
MIB2D release 5.0R5 built by builder on 2002-03-02 04:45:37 UTC
APSD release 5.0R5 built by builder on 2002-03-02 04:43:31 UTC
VRRPD release 5.0R5 built by builder on 2002-03-02 04:52:34 UTC
ALARMD release 5.0R5 built by builder on 2002-03-02 04:43:24 UTC
PFED release 5.0R5 built by builder on 2002-03-02 04:46:06 UTC
CRAFTD release 5.0R5 built by builder on 2002-03-02 04:44:30 UTC
SAMPLED release 5.0R5 built by builder on 2002-03-02 04:52:20 UTC
ILMID release 5.0R5 built by builder on 2002-03-02 04:45:21 UTC
BPRELAYD release 5.0R5 built by builder on 2002-03-02 04:42:41 UTC
RMOPD release 5.0R5 built by builder on 2002-03-02 04:46:11 UTC
jkernel-dd release 5.0R5 built by builder on 2002-03-02 04:41:07 UTC
jroute-dd release 5.0R5 built by builder on 2002-03-02 04:41:21 UTC
jdocs-dd release 5.0R5 built by builder on 2002-03-02 04:39:11 UTC
```

**Meaning**

The sample output shows the hostname, router model, and the different Junos OS packages, processes, and documents.

## Hardware Components

Each Juniper Networks router consists of a chassis and a set of components, including FPCs, PICs, Routing Engines, power supplies, cooling system, and cable management system. Many of the components are field-replaceable units. The following major components are discussed in this topic:

- [Chassis on page 1380](#)
- [Flexible PIC Concentrators on page 1380](#)
- [Physical Interface Cards on page 1380](#)
- [Routing Engine on page 1381](#)
- [Power Supplies on page 1381](#)
- [Cooling System on page 1381](#)

## Chassis

Chassis dimensions are listed in the physical specifications table for each router. For more information about chassis dimensions, see the router platform-specific hardware guide.

Each Juniper Networks router features a rigid sheet metal chassis that houses all of the router components. The chassis are designed to install into a variety of racks, including standard 19-inch equipment racks, telco center-mount racks, and four-post racks and cabinets. See [Table 49 on page 1376](#) for the maximum number of each router type that can be installed into a rack. Each chassis includes mounting ears or support posts to facilitate rack mounting, and one or more points for connecting an electrostatic discharge (ESD) wrist strap for use when servicing the router.

**Table 50: Maximum Number of Routers per Rack**

| Router or Routing Node | Maximum in Standard Rack |
|------------------------|--------------------------|
| T640                   | 2                        |
| T320                   | 3                        |
| M160                   | 2                        |
| M40e                   | 2                        |
| M40                    | 2                        |
| M20                    | 5                        |
| M5 and M10             | 14                       |

Each chassis includes a midplane (called the backplane on an M40 router). The midplane transfers data packets to and from the FPCs, distributes power to router components, and provides signal connectivity to the router components for system monitoring and control.

## Flexible PIC Concentrators

The FPCs house the PICs used in the router and connect them to other router components. FPCs install into the front of the router in either a vertical or horizontal orientation, depending on the router. A compatible FPC can be installed into any available FPC slot, regardless of the PICs it contains. If a slot is not occupied by an FPC, a blank FPC panel must be installed to shield the empty slot and allow cooling air to circulate properly through the FPC card cage. For information about FPCs, see the specific hardware guide.

## Physical Interface Cards

Juniper Networks M-series routers and T-series platforms use PICs to connect to a wide variety of network media. PICs receive incoming packets from the network and transmit outgoing packets to the network, performing framing and line-speed signaling for their

specific media type. Before transmitting outgoing data packets, the PICs encapsulate the packets received from the FPCs. Each PIC is equipped with an ASIC that performs control functions specific to the PIC's media type. For information about PICs, see the specific PIC guide.

## Routing Engine

The Routing Engine consists of an Intel-based PCI platform running the Junos OS. The Routing Engine maintains the routing tables used by the router in which it is installed and controls the routing protocols on the router. The T640 routing node, and the T320, M160, M40e, and M20 routers support up to two Routing Engines, while the M40, M10, and M5 routers support a single Routing Engine.

Each Routing Engine consists of a CPU; SDRAM for storage of the routing and forwarding tables and other processes; a compact flash disk for primary storage of software images, configuration files, and microcode; a hard disk for secondary storage; a PC card slot (on some M40 routers, a floppy disk) for storage of software upgrades; and interfaces for out-of-band management access.

## Power Supplies

Each Juniper Networks M-series router, T-series platform, or MX-series router has one to four load-sharing power supplies depending on the platform. If a power supply in a redundant configuration is removed or fails, the other power supplies assume the electrical load. For more information about the power supplies in each router, see the router platform-specific hardware guide.

The power supplies are connected to the router midplane, which distributes the different output voltages throughout the router and its components. Some routers can operate using either AC or DC power; other routers operate with DC power only. For information about the type of power used by each router, see the platform-specific hardware guide.

## Cooling System

Each Juniper Networks M-series router and T-series platform features a cooling system designed to keep all router components within recommended operating temperature limits. If one component of the cooling system fails or is removed, the system automatically adjusts the speed of the remaining components to keep the temperature within the acceptable range. The cooling system for each router is unique and can consist of fans, impellers, and air filters. For information about the cooling system components of each router, see the "Major Hardware Components" table in the router platform-specific hardware guide.



## PART 9

# Configuration Statements

- [MPLS Configuration Statements on page 1385](#)
- [RSVP Configuration Statements on page 1539](#)
- [LDP Configuration Statements on page 1589](#)
- [CCC and TCC Configuration Statements on page 1653](#)
- [GMPLS Configuration Statements on page 1671](#)
- [PCEP Configuration Statements on page 1695](#)



# MPLS Configuration Statements

- [adaptive](#) on page 1390
- [adjust-interval](#) on page 1390
- [adjust-threshold](#) on page 1391
- [adjust-threshold-activate-bandwidth](#) on page 1391
- [adjust-threshold-overflow-limit](#) on page 1392
- [adjust-threshold-underflow-limit](#) on page 1392
- [admin-down](#) on page 1393
- [admin-group](#) (for Interfaces) on page 1393
- [admin-group](#) (for LSPs) on page 1394
- [admin-group-extended](#) on page 1395
- [admin-groups](#) on page 1396
- [admin-groups-extended](#) on page 1397
- [admin-groups-extended-range](#) on page 1398
- [advertise-mode](#) (MPLS) on page 1399
- [advertisement-hold-time](#) on page 1400
- [allow-fragmentation](#) on page 1400
- [always-mark-connection-protection-tlv](#) on page 1401
- [associate-backup-pe-groups](#) on page 1401
- [associate-lsp](#) on page 1402
- [auto-bandwidth](#) (MPLS Tunnel) on page 1403
- [auto-bandwidth](#) (MPLS Statistics) on page 1404
- [auto-policing](#) on page 1405
- [backup-pe-group](#) on page 1406
- [bandwidth](#) (Fast Reroute, Signaled, and Multiclass LSPs) on page 1407
- [bandwidth](#) (Static LSP) on page 1408
- [bandwidth-model](#) on page 1409
- [bandwidth-percent](#) on page 1410
- [bfd-liveness-detection](#) (Protocols MPLS) on page 1411

- [class-of-service \(Protocols MPLS\)](#) on page 1412
- [container-label-switched-path](#) on page 1413
- [corouted-bidirectional](#) on page 1414
- [corouted-bidirectional-passive](#) on page 1414
- [credibility](#) on page 1415
- [database](#) on page 1416
- [delay \(querier\)](#) on page 1417
- [delay \(responder\)](#) on page 1418
- [description \(Protocols MPLS\)](#) on page 1419
- [deselect-on-bandwidth-failure](#) on page 1420
- [diffserv-te](#) on page 1421
- [disable \(Protocols MPLS\)](#) on page 1422
- [dual-transport](#) on page 1423
- [dynamic-tunnels](#) on page 1424
- [egress-protection \(MPLS\)](#) on page 1425
- [encoding-type](#) on page 1426
- [entropy-label](#) on page 1426
- [ethernet-vlan \(Protocols Link Management\)](#) on page 1427
- [ether-pseudowire](#) on page 1427
- [exclude \(for Administrative Groups\)](#) on page 1428
- [exclude \(for Fast Reroute\)](#) on page 1428
- [exclude-srlg](#) on page 1429
- [expand-loose-hop](#) on page 1430
- [explicit-null \(Protocols MPLS\)](#) on page 1431
- [export \(MPLS Traffic engineering database\)](#) on page 1432
- [failure-action \(Protocols MPLS\)](#) on page 1433
- [family](#) on page 1434
- [family mpls](#) on page 1435
- [fast-reroute \(Protocols MPLS\)](#) on page 1438
- [fate-sharing](#) on page 1439
- [from \(Protocols MPLS\)](#) on page 1440
- [gpip](#) on page 1441
- [gre \(Routing Options\)](#) on page 1442
- [hop-limit](#) on page 1443
- [import \(MPLS Traffic Engineering Database\)](#) on page 1444
- [ip-tunnel-rpf-check](#) on page 1445
- [include-all \(for Administrative Groups\)](#) on page 1446



- [include-all \(for Fast Reroute\) on page 1446](#)
- [include-any \(for Administrative Groups\) on page 1447](#)
- [include-any \(for Fast Reroute\) on page 1447](#)
- [ingress \(LSP\) on page 1448](#)
- [install \(Protocols MPLS\) on page 1449](#)
- [ingress-policy on page 1450](#)
- [interface \(Protocols MPLS\) on page 1451](#)
- [inter-domain on page 1452](#)
- [ipv6-tunneling on page 1452](#)
- [label-switched-path \(Protocols MPLS\) on page 1453](#)
- [label-switched-path-template \(Container LSP\) on page 1456](#)
- [ldp-tunneling on page 1456](#)
- [least-fill on page 1456](#)
- [link-protection \(Dynamic LSPs\) on page 1457](#)
- [link-protection \(Static LSPs\) on page 1458](#)
- [load-balance-label-capability on page 1458](#)
- [log-updown \(Protocols MPLS\) on page 1459](#)
- [longest-match on page 1460](#)
- [loss \(querier\) on page 1461](#)
- [loss \(responder\) on page 1462](#)
- [loss-delay \(querier\) on page 1463](#)
- [lsp-attributes on page 1464](#)
- [lsping-channel-type on page 1465](#)
- [maximum-bandwidth \(Protocols MPLS\) on page 1465](#)
- [maximum-labels on page 1466](#)
- [minimum-bandwidth-adjust-interval on page 1467](#)
- [minimum-bandwidth-adjust-threshold-change on page 1467](#)
- [minimum-bandwidth-adjust-threshold-value on page 1468](#)
- [metric \(Protocols MPLS\) on page 1469](#)
- [minimum-bandwidth on page 1469](#)
- [monitor-bandwidth on page 1470](#)
- [most-fill on page 1470](#)
- [mpls \(Protocols\) on page 1470](#)
- [mpls-tp-mode on page 1471](#)
- [mtu-signaling on page 1471](#)
- [next-hop \(Protocols MPLS\) on page 1472](#)
- [no-bfd-triggered-local-repair on page 1473](#)

- [no-cspf](#) on page 1474
- [no-decrement-ttl](#) on page 1475
- [no-install-to-address](#) on page 1476
- [no-load-balance-label-capability](#) on page 1476
- [no-mcast-replication](#) on page 1477
- [no-propagate-ttl](#) on page 1478
- [no-transit-statistics](#) on page 1479
- [no-trap](#) on page 1479
- [node-protection \(Static LSP\)](#) on page 1480
- [normalization](#) on page 1481
- [oam \(Protocols MPLS\)](#) on page 1482
- [optimize-adaptive-teardown](#) on page 1483
- [optimize-aggressive](#) on page 1484
- [optimize-hold-dead-delay](#) on page 1485
- [optimize-switchover-delay](#) on page 1486
- [optimize-timer \(Protocols MPLS\)](#) on page 1487
- [p2mp \(Protocols MPLS\)](#) on page 1488
- [p2mp-lsp-next-hop](#) on page 1489
- [path \(Protocols MPLS\)](#) on page 1490
- [path-mtu](#) on page 1491
- [per-prefix-label](#) on page 1492
- [performance-monitoring \(Protocols MPLS\)](#) on page 1493
- [policing \(Protocols MPLS\)](#) on page 1494
- [pop](#) on page 1495
- [preference \(Protocols MPLS\)](#) on page 1496
- [primary \(Protocols MPLS\)](#) on page 1497
- [priority \(Protocols MPLS\)](#) on page 1498
- [protection-revert-time](#) on page 1499
- [push](#) on page 1500
- [random](#) on page 1501
- [record](#) on page 1502
- [retry-limit](#) on page 1503
- [retry-timer](#) on page 1503
- [revert-timer](#) on page 1504
- [responder \(performance-monitoring\)](#) on page 1505
- [rpf-check-policy \(Routing Options\)](#) on page 1506
- [rsvp-error-hold-time](#) on page 1507

- [sampling \(Protocols MPLS\) on page 1508](#)
- [secondary \(Protocols MPLS\) on page 1509](#)
- [select on page 1510](#)
- [signal-bandwidth on page 1510](#)
- [smart-optimize-timer on page 1511](#)
- [soft-preemption \(Protocols MPLS\) on page 1512](#)
- [splitting-merging on page 1513](#)
- [srlg on page 1514](#)
- [srlg-cost on page 1515](#)
- [srlg-value on page 1515](#)
- [standby on page 1516](#)
- [static-label-switched-path on page 1517](#)
- [statistics \(Protocols MPLS\) on page 1519](#)
- [swap on page 1520](#)
- [switch-away-lsps on page 1521](#)
- [switching-type on page 1522](#)
- [sync-active-path-bandwidth on page 1523](#)
- [te-class-matrix on page 1524](#)
- [to on page 1525](#)
- [traceoptions \(Protocols MPLS\) on page 1526](#)
- [traffic-class \(delay\) on page 1528](#)
- [traffic-class \(loss\) on page 1530](#)
- [traffic-class \(loss-delay\) on page 1532](#)
- [traffic-engineering \(Protocols MPLS\) on page 1534](#)
- [traffic-engineering \(Protocols BGP\) on page 1535](#)
- [transit-lsp-association on page 1536](#)
- [ultimate-hop-popping on page 1537](#)

## adaptive

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | adaptive;                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i> ],<br>[edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i><br>( <i>primary</i>   <i>secondary</i> ) <i>path-name</i> ],<br>[edit protocols mpls label-switched-path <i>lsp-name</i> ],<br>[edit protocols mpls label-switched-path <i>lsp-name</i> ( <i>primary</i>   <i>secondary</i> ) <i>path-name</i> ] |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                                                                                                                                                                                                      |
| <b>Description</b>              | During reroute, do not double-count bandwidth on links shared by the old and new paths. Including this statement causes RSVP to use shared explicit (SE) reservation styles and assists in smooth transition during rerouting.                                                                                                                                                                                                                                 |
| <b>Default</b>                  | The configured object is disabled.                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                            |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring Adaptive LSPs on page 278</a></li></ul>                                                                                                                                                                                                                                                                                                                                                        |

## adjust-interval

---

|                                 |                                                                                                                                                                                                  |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | adjust-interval <i>seconds</i> ;                                                                                                                                                                 |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i> auto-bandwidth],<br>[edit protocols mpls label-switched-path <i>lsp-name</i> auto-bandwidth] |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 13.2X51-D15 for the QFX Series.                                                                    |
| <b>Description</b>              | Specify the bandwidth reallocation interval.                                                                                                                                                     |
| <b>Options</b>                  | <b><i>seconds</i></b> —Bandwidth reallocation interval, in seconds.<br><b>Range:</b> 300 through 315,360,000 seconds<br><b>Default:</b> 86,400 seconds                                           |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                              |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring the Automatic Bandwidth Allocation Interval on page 288</a></li></ul>                                                            |

## adjust-threshold

|                                 |                                                                                                                                                                                                                                                                                                                                                |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>adjust-threshold <i>percent</i>;</code>                                                                                                                                                                                                                                                                                                  |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i> auto-bandwidth],<br>[edit protocols mpls label-switched-path <i>lsp-name</i> auto-bandwidth]                                                                                                                                               |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 13.2X51-D15 for the QFX Series.                                                                                                                                                                                                                  |
| <b>Description</b>              | Specify how sensitive the automatic bandwidth adjustment for a label-switched path (LSP) is to changes in bandwidth utilization.                                                                                                                                                                                                               |
| <b>Options</b>                  | <b><i>percent</i></b> —Bandwidth demand for the current bandwidth adjustment interval is determined and compared to the LSP's current bandwidth allocation. If the percentage difference in bandwidth is greater than or equal to the percentage specified by this statement, the LSP's bandwidth is adjusted to the current bandwidth demand. |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                            |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring the Automatic Bandwidth Adjustment Threshold on page 289</a></li> </ul>                                                                                                                                                                                                       |

## adjust-threshold-activate-bandwidth

|                                 |                                                                                                                                                                                                                                                                                                                                     |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>adjust-threshold-activate-bandwidth <i>bps</i>;</code>                                                                                                                                                                                                                                                                        |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i> auto-bandwidth],<br>[edit protocols mpls label-switched-path <i>lsp-name</i> auto-bandwidth]                                                                                                                                    |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 14.1.                                                                                                                                                                                                                                                                                  |
| <b>Description</b>              | Specify an absolute value to prevent automatic adjustment of signaled bandwidth and aggressive re-signaling of a label-switched path (LSP) when the actual bandwidth over the LSP is below the configured threshold, although the adjust-threshold percentage condition is satisfied.                                               |
| <b>Options</b>                  | <b><i>bps</i></b> —Amount of bandwidth that is compared with the maximum of all traffic samples during an adjustment interval. If the maximum average bandwidth is less than this configured value, automatic bandwidth adjustment or re-signaling does not happen, even if the adjust-threshold percentage condition is satisfied. |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                 |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring the Automatic Bandwidth Adjustment Threshold on page 289</a></li> </ul>                                                                                                                                                                                            |

## adjust-threshold-overflow-limit

---

|                                 |                                                                                                                                                                                                  |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | adjust-threshold-overflow-limit <i>number</i> ;                                                                                                                                                  |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i> auto-bandwidth],<br>[edit protocols mpls label-switched-path <i>lsp-name</i> auto-bandwidth] |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 7.5.<br>Statement introduced in Junos OS Release 13.2X51-D15 for the QFX Series.                                                                        |
| <b>Description</b>              | Specify the number of consecutive bandwidth overflow samples before triggering a bandwidth adjustment.                                                                                           |
| <b>Options</b>                  | <i>number</i> —Number of consecutive bandwidth overflow samples.<br><b>Range:</b> 1 through 65,535<br><b>Default:</b> This feature is disabled by default.                                       |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                              |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring a Limit on Bandwidth Overflow and Underflow Samples on page 290</a></li></ul>                                                    |

## adjust-threshold-underflow-limit

---

|                                 |                                                                                                                                                                                                  |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | adjust-threshold-underflow-limit <i>number</i> ;                                                                                                                                                 |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i> auto-bandwidth],<br>[edit protocols mpls label-switched-path <i>lsp-name</i> auto-bandwidth] |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 11.3.<br>Statement introduced in Junos OS Release 13.2X51-D15 for the QFX Series.                                                                       |
| <b>Description</b>              | Specify the number of consecutive bandwidth underflow samples before triggering a bandwidth adjustment.                                                                                          |
| <b>Options</b>                  | <i>number</i> —Number of consecutive bandwidth underflow samples.<br><b>Range:</b> 1 through 65,535<br><b>Default:</b> This feature is disabled by default.                                      |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                              |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring a Limit on Bandwidth Overflow and Underflow Samples on page 290</a></li></ul>                                                    |

## admin-down

|                                 |                                                                                                                                                                      |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | admin-down;                                                                                                                                                          |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i> ],<br>[edit protocols mpls label-switched-path <i>lsp-name</i> ] |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 8.2.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                |
| <b>Description</b>              | Set a nonpacket GMPLS LSP to the administrative down state. This statement does not affect control path setup or data forwarding for packet LSPs.                    |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                  |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Allowing Nonpacket GMPLS LSPs to Establish Paths Through Routers Running Junos OS on page 786</a></li> </ul>    |

## admin-group (for Interfaces)

|                                 |                                                                                                                                                                                 |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | admin-group [ <i>group-names</i> ];                                                                                                                                             |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls interface <i>interface-name</i> ],<br>[edit protocols mpls interface <i>interface-name</i> ]                    |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.                                                                                                                               |
| <b>Description</b>              | Define administrative groups for an interface.                                                                                                                                  |
| <b>Options</b>                  | <i>group-names</i> —One or more names of groups defined with the <a href="#">admin-groups</a> statement at the [edit protocols mpls] hierarchy level.                           |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                             |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring Administrative Groups for LSPs on page 268</a></li> <li>• <a href="#">admin-groups on page 1396</a></li> </ul> |

## admin-group (for LSPs)

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>admin-group {<br/>    exclude [ group-names ];<br/>    include-all [ group-names ];<br/>    include-any [ group-names ];<br/>}</pre>                                                                                                                                                                                                                                                                                                                                       |
| <b>Hierarchy Level</b>          | <pre>[edit logical-systems logical-system-name protocols mpls],<br/>[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name],<br/>[edit logical-systems logical-system-name protocols mpls label-switched-path lsp-name<br/>    (primary   secondary) path-name],<br/>[edit protocols mpls],<br/>[edit protocols mpls label-switched-path lsp-name],<br/>[edit protocols mpls label-switched-path lsp-name (primary   secondary) path-name]</pre> |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Description</b>              | Define the administrative groups to include or exclude an LSP and a path's primary and secondary paths.                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Options</b>                  | The statements are explained separately.                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                             |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring Administrative Groups for LSPs on page 268</a></li></ul>                                                                                                                                                                                                                                                                                                                                                        |



## admin-group-extended

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>admin-group-extended {   apply-groups <i>group-value</i>;   apply-groups-except <i>group-value</i>;   exclude [ <i>group-values</i> ];   include-all [ <i>group-values</i> ];   include-any [ <i>group-values</i> ]; }</pre>                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Hierarchy Level</b>          | <pre>[edit logical-systems <i>logical-system-name</i> protocols mpls], [edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i>], [edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i>   (primary   secondary) <i>path-name</i>], [edit protocols mpls], [edit protocols mpls label-switched-path <i>lsp-name</i>], [edit protocols mpls label-switched-path <i>lsp-name</i> (primary   secondary) <i>path-name</i>]</pre>                                                                                                         |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 11.1.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Description</b>              | <p>Specifies the group name and group identifier for an administrative group. The group identifier must be within the range of values specified by the <b>admin-groups-extended-range</b> statement. The extended administrative group values are global and must be identically configured on all the supported routers participating in the network. The domain-wide extended administrative groups database, learned from other routers through IGP flooding, is used by CSPF for path computation.</p>                                                                                                                   |
| <b>Options</b>                  | <p><b>apply-groups</b>—Apply the specified administrative groups for the LSP or for the primary and secondary paths.</p> <p><b>apply-groups-except</b>—Exclude the specified administrative groups from the LSP or from the primary and secondary paths.</p> <p><b>exclude</b>—Define the administrative groups to exclude from an LSP or from the primary and secondary paths.</p> <p><b>include-all</b>—Require the LSP to traverse links that include all of the defined administrative groups.</p> <p><b>include-any</b>—Define the administrative groups to include for an LSP for the primary and secondary paths.</p> |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring Extended Administrative Groups for LSPs on page 270</a></li> <li>• <a href="#">Configuring Administrative Groups for LSPs on page 268</a></li> <li>• <a href="#">admin-groups-extended on page 1397</a></li> <li>• <a href="#">admin-groups-extended-range on page 1398</a></li> </ul>                                                                                                                                                                                                                                                                      |

## admin-groups

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                 |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>admin-groups {<br/>    group-name group-value;<br/>}</pre>                                                                                                                                                                                                                                                                                                                 |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls],<br>[edit protocols mpls]                                                                                                                                                                                                                                                                                      |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.                                                                                                                                                                                                                                                                                                                               |
| <b>Description</b>              | Configure administrative groups to implement link coloring of resource classes.                                                                                                                                                                                                                                                                                                 |
| <b>Options</b>                  | <p><b>group-name</b>—Name of the group. You can assign up to 32 names. The names and their corresponding values must be identical across all routers within a single domain.</p> <p><b>group-value</b>—Value assigned to the group. The names and their corresponding values must be identical across all routers within a single domain.</p> <p><b>Range:</b> 0 through 31</p> |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                             |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring Administrative Groups for LSPs on page 268</a></li><li>• <a href="#">admin-group (for Interfaces) on page 1393</a></li></ul>                                                                                                                                                                                    |

## admin-groups-extended

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>admin-groups-extended <i>group-name</i> {<br/>    group-value <i>group-identifier</i>;<br/>}</code>                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls interface <i>interface-name</i> ],<br>[edit logical-systems <i>logical-system-name</i> routing-options],<br>[edit protocols mpls interface <i>interface-name</i> ],<br>[edit routing-options]                                                                                                                                                                                                                                       |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 11.1.<br>Statement introduced in Junos OS Release 12.3 for ACX Series routers.                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Description</b>              | Specifies the group name and group identifier for an administrative group. The group identifier must be within the range of values specified by the <b>admin-groups-extended-range</b> statement. The extended administrative group values are global and must be identically configured on all the supported routers participating in the network. The domain-wide extended administrative groups database, learned from other routers through IGP flooding, is used by CSPF for path computation. |
| <b>Options</b>                  | <b><i>group-name</i></b> —The range of configurable values is between 32 and 4,294,967,295. The range maximum must be greater than the range minimum.<br><br><b><i>group-value group-identifier</i></b> —The group identifier must be within the range of configurable values, 32 and 4,294,967,295.                                                                                                                                                                                                |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring Extended Administrative Groups for LSPs on page 270</a></li> <li>• <a href="#">Configuring Administrative Groups for LSPs on page 268</a></li> <li>• <a href="#">admin-group-extended on page 1395</a></li> <li>• <a href="#">admin-groups-extended-range on page 1398</a></li> </ul>                                                                                                                                              |

## admin-groups-extended-range

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>admin-groups-extended-range {<br/>    maximum <i>maximum-number</i>;<br/>    minimum <i>minimum-number</i>;<br/>}</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> routing-options],<br>[edit routing-options]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 11.1.<br>Statement introduced in Junos OS Release 12.3 for ACX Series routers.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Description</b>              | <p>Enables you to configure extended administrative groups, represented by a 32-bit value, expanding the number of administrative groups supported in the network beyond just 32. In MPLS traffic engineering, a link can be configured with a set of administrative groups (also known as colors or resource classes). Administrative groups are carried in IGP (OSPFv2 and IS-IS) as a 32-bit value assigned to each link. By default, Juniper Networks routers interpret this 32-bit value as a bit mask with each bit representing a group. This normally limits each network to a total of 32 distinct administrative groups (value range 0 through 31).</p> <p>The extended administrative groups configuration accepts a set of interfaces with a corresponding set of extended administrative group names. It converts the names into a set of 32-bit values and propagates this information into the IGP. The extended administrative group values are global and must be identically configured on all the supported routers participating in the network. The domain-wide extended administrative groups database, learned from other routers through IGP flooding, is used by CSPF for path computation.</p> |
| <b>Options</b>                  | <p><b>maximum</b> <i>maximum-number</i>—The range of configurable values is between 32 and 4,294,967,295. The range maximum must be greater than the range minimum.</p> <p><b>minimum</b> <i>minimum-number</i>—The range of configurable values is between 32 and 4,294,967,295. The range maximum must be greater than the range minimum.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring Extended Administrative Groups for LSPs on page 270</a></li><li>• <a href="#">Configuring Administrative Groups for LSPs on page 268</a></li><li>• <a href="#">admin-group-extended on page 1395</a></li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |

## advertise-mode (MPLS)

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>advertise-mode (stub-alias   stub-proxy);</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Hierarchy Level</b>          | <p>[edit logical-systems <i>logical-system-name</i> protocols mpls egress-protection context-identifier <i>context-id</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i> egress-protection context-identifier <i>context-id</i>],</p> <p>[edit protocols mpls egress-protection context-identifier <i>context-id</i>],</p> <p>[edit protocols mpls label-switched-path <i>lsp-name</i> egress-protection context-identifier <i>context-id</i>]</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 13.3.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Description</b>              | <p>Configure the method for the interior gateway protocol (IGP) to advertise egress protection availability.</p> <p>Egress protection availability is advertised in the IGP. Label protocols along with CSPF use this information to do egress protection.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Options</b>                  | <p><b>stub-alias</b>—Context identifier has an alias.</p> <p>In the alias method, the LSP end-point address has an explicit backup egress node where the backup node can be learned or configured on the penultimate hop node (PHN) of a protected LSP. With this model, the PHN of a protected LSP sets up the bypass LSP tunnel to back up the egress node by avoiding the primary egress node. This model requires a Junos OS upgrade in core nodes, but is flexible enough to support all traffic engineering constraints.</p> <p><b>stub-proxy</b>—Context-identifier has a stub proxy node.</p> <p>A stub node is one that only appears at the end of an AS path, which means it does not provide transit service. In this mode, known as the virtual or proxy mode, the LSP end-point address is represented as a node with bidirectional links, with the LSP's primary egress node and backup egress node. With this representation, the penultimate hop of the LSP primary egress point can behave like a PLR in setting up a bypass tunnel to back up the egress by avoiding the primary egress node. This model has the advantage that you do not need to upgrade Junos OS on core nodes and thereby helps operators to deploy this technology.</p> |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li><i>Egress Protection for Layer 3 VPN Edge Protection Overview</i></li> <li><i>Example: Configuring Layer 3 VPN Egress Protection with RSVP and LDP</i></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |

## advertisement-hold-time

---

|                                 |                                                                                                                           |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | advertisement-hold-time <i>seconds</i> ;                                                                                  |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls],<br>[edit protocols mpls]                                |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series. |
| <b>Description</b>              | Do not advertise when the LSP goes from up to down, for a certain period of time known as the hold time.                  |
| <b>Options</b>                  | <b><i>seconds</i></b> —Hold time, in seconds.<br><b>Range:</b> 0 through 65,535 seconds<br><b>Default:</b> 5 seconds      |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.       |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Damping Advertisement of LSP State Changes on page 298</a></li></ul>  |

## allow-fragmentation

---

|                                 |                                                                                                                     |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | allow-fragmentation;                                                                                                |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls path-mtu],<br>[edit protocols mpls path-mtu]        |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.                                                                   |
| <b>Description</b>              | Allow IP packets to be fragmented before they are encapsulated in MPLS.                                             |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration. |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Enabling Packet Fragmentation on page 519</a></li></ul>         |

## always-mark-connection-protection-tlv

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>always-mark-connection-protection-tlv;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-systems-name</i> protocols mpls interface <i>interface-name</i> ],<br>[edit protocols mpls interface <i>interface-name</i> ]                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 10.2.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Description</b>              | <p>(MX Series routers only) Enable you to switch an LSP away from a network node using a bypass LSP. This feature could be used in maintenance of active networks when a network device needs to be replaced without interrupting traffic passing through the network. The LSPs can be either static or dynamic.</p> <p>This statement marks all OAM traffic transiting this interface in preparation for switching the traffic to an alternate path based on the OAM functionality. To switch traffic to the bypass LSP, you then need to configure the <b>switch-away-lsps</b> statement.</p> |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Switching LSPs Away from a Network Node on page 513</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |

## associate-backup-pe-groups

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>associate-backup-pe-groups;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i> ],<br>[edit protocols mpls label-switched-path <i>lsp-name</i> ]                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.0.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Description</b>              | <p>Enable an LSP to monitor the status of its destination PE router. You can configure multiple backup PE router groups using the same router's address. Backup PE router groups provide ingress PE router redundancy when point-to-multipoint LSPs are configured for multicast distribution. A failure of this LSP indicates to all of the backup PE router groups that the destination PE router is down. This statement is not tied to a specific backup PE router group. It applies to all groups that are interested in the status of the LSP to the destination address.</p> |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Enabling Point-to-Point LSPs to Monitor Egress PE Routers on page 335</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                           |

## associate-lsp

---

|                                 |                                                                                                                                                                                                 |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>associate-lsp lsp-name {<br/>    from from-ip-address;<br/>}</code>                                                                                                                       |
| <b>Hierarchy Level</b>          | <code>[edit protocols mpls label-switched-path lsp-name oam]</code>                                                                                                                             |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 12.1.                                                                                                                                                  |
| <b>Description</b>              | Configure associated bidirectional label-switched paths (LSPs) on the two ends of an LSP for sending and receiving GAL and G-Ach OAM messages.                                                  |
| <b>Options</b>                  | <b>from <i>from-ip-address</i></b> —(Optional) Source address for the associated LSP configuration.<br>If omitted, this is derived from the <b>to</b> address of the ingress LSP configuration. |
| <b>Required Privilege Level</b> | <b>routing</b> —To view this statement in the configuration.<br><b>routing-control</b> —To add this statement to the configuration.                                                             |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Example: Configuring the MPLS Transport Profile for OAM on page 147</a></li></ul>                                                           |



## auto-bandwidth (MPLS Tunnel)

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre> auto-bandwidth {   adjust-interval <i>seconds</i>;   adjust-threshold <i>percent</i>;   adjust-threshold-activate-bandwidth <i>bps</i>   adjust-threshold-overflow-limit <i>number</i>;   adjust-threshold-underflow-limit <i>number</i>;   maximum-bandwidth <i>bps</i>;   minimum-bandwidth <i>bps</i>;   minimum-bandwidth-adjust-interval   minimum-bandwidth-adjust-threshold-change   minimum-bandwidth-adjust-threshold-value   monitor-bandwidth; } </pre> |
| <b>Hierarchy Level</b>          | [edit protocols mpls label-switched-path <i>lsp-name</i> ]                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Release Information</b>      | <p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 13.2X51-D15 for the QFX Series.</p>                                                                                                                                                                                                                                                                                                                                 |
| <b>Description</b>              | Allow an MPLS tunnel to automatically adjust its bandwidth allocation based on the volume of traffic flowing through the tunnel.                                                                                                                                                                                                                                                                                                                                         |
| <b>Options</b>                  | The statements are explained separately.                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                           |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring Automatic Bandwidth Allocation for LSPs on page 286</a></li> <li>• <a href="#">request mpls lsp adjust-autobandwidth on page 1740</a></li> </ul>                                                                                                                                                                                                                                                        |

## auto-bandwidth (MPLS Statistics)

---

|                                 |                                                                                                                                                                                                                                                                 |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | auto-bandwidth;                                                                                                                                                                                                                                                 |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls <a href="#">statistics</a> ],<br>[edit protocols mpls <a href="#">statistics</a> ]                                                                                                              |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 13.2X51-D15 for the QFX Series.                                                                                                                                   |
| <b>Description</b>              | Collect statistics related to automatic bandwidth.                                                                                                                                                                                                              |
| <b>Required Privilege Level</b> | routing and trace—To view this statement in the configuration.<br>routing-control and trace-control—To add this statement to the configuration.                                                                                                                 |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring Automatic Bandwidth Allocation for LSPs on page 286</a></li><li>• <a href="#">Configuring MPLS to Gather Statistics on page 371</a></li><li>• <a href="#">statistics on page 1519</a></li></ul> |

## auto-policing

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre> auto-policing {   class all (drop   loss-priority-high   loss-priority-low);   class <i>ctnumber</i> (drop   loss-priority-high   loss-priority-low); } </pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls],<br>[edit protocols mpls]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced for QFX10000 Series switches in release 15.1X53-D40.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Description</b>              | Enable the automatic policing of all the MPLS LSPs on the router or logical system.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Options</b>                  | <p><b>class all</b>—Apply the same policer action to all the class types (<b>ct0</b>, <b>ct1</b>, <b>ct2</b>, and <b>ct3</b>).</p> <p><b>class <i>ctnumber</i></b>—Specific class type (<b>ct0</b>, <b>ct1</b>, <b>ct2</b>, or <b>ct3</b>) to which to apply a policer action.</p> <p>Policer actions—You can specify the following policer actions:</p> <p><b>Default:</b> no action</p> <ul style="list-style-type: none"> <li>• <b>drop</b>—Drop all packets.</li> <li>• <b>loss-priority-high</b>—Set the packet loss priority (PLP) to high.</li> <li>• <b>loss-priority-low</b>—Set the PLP to low.</li> </ul> |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">policing (Protocols MPLS) on page 1494</a></li> <li>• <a href="#">Configuring Automatic Policers on page 377v</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                    |

## backup-pe-group

---

|                                 |                                                                                                                                                                                                                                                                                                                                                           |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>backup-pe-group <i>group-name</i> {<br/>    backups [ <i>addresses</i> ];<br/>    local-address <i>address</i>;<br/>}</pre>                                                                                                                                                                                                                          |
| <b>Hierarchy Level</b>          | <pre>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i><br/>    routing-options multicast],<br/>[edit logical-systems <i>logical-system-name</i> routing-options multicast],<br/>[edit routing-instances <i>routing-instance-name</i> routing-options multicast],<br/>[edit routing-options multicast]</pre> |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.0.<br>Statement introduced in Junos OS Release 9.5 for EX Series switches.<br>Statement introduced in Junos OS Release 11.3 for the QFX Series.                                                                                                                                                                |
| <b>Description</b>              | Configure a backup provider edge (PE) group for ingress PE redundancy when point-to-multipoint label-switched paths (LSPs) are used for multicast distribution.                                                                                                                                                                                           |
| <b>Options</b>                  | <p><i>group-name</i>—Name of the group for PE backups.</p> <p>The remaining statements are explained separately.</p>                                                                                                                                                                                                                                      |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                       |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <i>Example: Configuring Ingress PE Redundancy</i></li></ul>                                                                                                                                                                                                                                                       |

## bandwidth (Fast Reroute, Signaled, and Multiclass LSPs)

|                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|----------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | <pre>bandwidth <i>bps</i> {     ct0 <i>bps</i>;     ct1 <i>bps</i>;     ct2 <i>bps</i>;     ct3 <i>bps</i>; }</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Hierarchy Level</b>     | <pre>[edit logical-systems <i>logical-system-name</i> protocols mpls], [edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i>], [edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i> <i>fast-reroute</i>], [edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i> (primary   secondary) <i>path-name</i>], [edit protocols mpls], [edit protocols mpls label-switched-path <i>lsp-name</i>], [edit protocols mpls label-switched-path <i>lsp-name</i> <i>fast-reroute</i>], [edit protocols mpls label-switched-path <i>lsp-name</i> (primary   secondary) <i>path-name</i>]</pre> |
| <b>Release Information</b> | <p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Description</b>         | <p>When configuring an LSP, specify the traffic rate associated with the LSP.</p> <p>When configuring fast reroute, allocate bandwidth for the reroute path. By default, no bandwidth is reserved for the rerouted path. The fast reroute bandwidth does not need to be identical to that allocated for the LSP itself.</p> <p>When configuring a multiclass LSP, use the <b>ctnumber bandwidth</b> statements to specify the bandwidth to be allocated for each class type.</p>                                                                                                                                                                                                                                            |
| <b>Options</b>             | <p><b>bps</b>—Bandwidth, in bits per second. You can specify this as an integer value. You can also use the abbreviations <b>k</b> (for a thousand), <b>m</b> (for a million), or <b>g</b> (for a billion).</p> <p><b>Range:</b> Any positive integer</p> <p><b>Default:</b> 0 (no bandwidth is reserved)</p>                                                                                                                                                                                                                                                                                                                                                                                                               |



**NOTE:** On the ACX Series, *bps* is the only supported option.

**ctnumber bps**—Bandwidth for the specified class type, in bits per second. You can specify this as an integer value. If you do so, count your zeros carefully, or you can use the abbreviations **k** (for a thousand), **m** (for a million), or **g** (for a billion [also called a thousand million]).

**Range:** Any positive integer

**Default:** 0 (no bandwidth is reserved)

|                                 |                                                                                                                                |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------|
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p> |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------|

- Related Documentation**
- [Configuring Fast Reroute on page 254](#)
  - [Configuring the Bandwidth Value for LSPs on page 285](#)
  - [Configuring Traffic-Engineered LSPs on page 354](#)
  - [Configuring Class-Type Bandwidth Constraints for Multiclass LSPs on page 357](#)

---

## bandwidth (Static LSP)

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>bandwidth <i>bps</i></code> ;                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls static-label-switched-path <i>lsp-name</i> bypass],<br>[edit logical-systems <i>logical-system-name</i> protocols mpls static-label-switched-path <i>lsp-name</i> ingress],<br>[edit logical-systems <i>logical-system-name</i> protocols mpls static-label-switched-path <i>lsp-name</i> transit <i>incoming-label</i> ],<br>[edit protocols mpls static-label-switched-path <i>lsp-name</i> bypass],<br>[edit protocols mpls static-label-switched-path <i>lsp-name</i> ingress],<br>[edit protocols mpls static-label-switched-path <i>lsp-name</i> transit <i>incoming-label</i> ] |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 10.1.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Description</b>              | When configuring a static LSP, specify the traffic rate associated with the LSP.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Options</b>                  | <b><i>bps</i></b> —Bandwidth, in bits per second. You can specify this as an integer value. You can also use the abbreviations <b>k</b> (for a thousand), <b>m</b> (for a million), or <b>g</b> (for a billion).<br><b>Range:</b> Any positive integer<br><b>Default:</b> 0 (no bandwidth is reserved)                                                                                                                                                                                                                                                                                                                                                 |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Related Documentation</b>    | • <a href="#">Configuring Static LSPs on page 299</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |

## bandwidth-model

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>bandwidth-model {     extended-mam;     mam;     rdm; }</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls diffserv-te],<br>[edit protocols mpls diffserv-te]                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Description</b>              | Configure the bandwidth model for differentiated services. Note that you cannot configure both bandwidth models at the same time.                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Options</b>                  | <p><b>extended-mam</b>—The extended maximum allocation model (MAM) is a bandwidth model based on MAM.</p> <p><b>mam</b>—The MAM is defined in RFC 4125, <i>Maximum Allocation Bandwidth Constraints Model for Diffserv-aware MPLS Traffic Engineering</i>.</p> <p><b>rdm</b>—The Russian dolls bandwidth allocation model (RDM) is defined in RFC 4127, <i>Russian Dolls Bandwidth Constraints Model for Diffserv-aware MPLS Traffic Engineering</i>. RDM makes efficient use of bandwidth by allowing the class types to share bandwidth.</p> |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring the Bandwidth Model on page 344</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                |

## bandwidth-percent

---

|                                 |                                                                                                                                                                                                                                                                                      |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>bandwidth-percent <i>percentage</i>;</code>                                                                                                                                                                                                                                    |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i> <a href="#">fast-reroute</a> ],<br>[edit protocols mpls label-switched-path <i>lsp-name</i> <a href="#">fast-reroute</a> ]                                                       |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.                                                                                                                                                                                                                                    |
| <b>Description</b>              | Configure the percentage of bandwidth to reserve for the detour path in case the primary path for a traffic engineered LSP or a multiclass LSP fails. The percentage configured indicates the percentage of the protected path's bandwidth that is reserved for the detour path.     |
| <b>Options</b>                  | <b><i>percentage</i></b> —The percentage of the protected path's bandwidth that is reserved for the detour path.                                                                                                                                                                     |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                  |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring Fast Reroute on page 254</a></li><li>• <a href="#">Configuring Fast Reroute for Traffic-Engineered LSPs on page 355</a></li><li>• <a href="#">Configuring Fast Reroute for Multiclass LSPs on page 358</a></li></ul> |



## bfd-liveness-detection (Protocols MPLS)

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre> bfd-liveness-detection {     failure-action {         make-before-break teardown-timeout <i>seconds</i>;         teardown;     }     minimum-interval <i>milliseconds</i>;     minimum-receive-interval <i>milliseconds</i>;     minimum-transmit-interval <i>milliseconds</i>;     multiplier <i>detection-time-multiplier</i>; } </pre>                                                                                                                                                                                                                                                                            |
| <b>Hierarchy Level</b>          | [edit protocols mpls label-switched-path <i>lsp-name</i> oam],<br>[edit protocols mpls oam]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 7.6.<br><b>failure-action</b> option added in Junos OS Release 8.5.<br>Statement introduced in Junos OS Release 12.2 for EX Series switches.                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Description</b>              | Enable Bidirectional Forwarding Detection (BFD) for all of the MPLS LSPs or for just a specific LSP.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Options</b>                  | <p><b>minimum-interval</b>—Minimum transmit and receive interval.<br/> <b>Range:</b> 50 through 255,000 milliseconds<br/> <b>Default:</b> 50</p> <p><b>minimum-receive-interval</b>—Minimum receive interval.<br/> <b>Range:</b> 50 through 255,000 milliseconds<br/> <b>Default:</b> 50</p> <p><b>minimum-transmit-interval</b>—Minimum transmit interval.<br/> <b>Range:</b> 50 through 255,000 milliseconds<br/> <b>Default:</b> 50</p> <p><b>multiplier</b>—Detection time multiplier.<br/> <b>Range:</b> 1 through 255<br/> <b>Default:</b> 3</p> <p>The <b>failure-action</b> statement is explained separately.</p> |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring BFD for MPLS IPv4 LSPs on page 382</a></li> <li>• <a href="#">Configuring Bidirectional Forwarding Detection for MPLS (CLI Procedure)</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                      |

## class-of-service (Protocols MPLS)

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>class-of-service</code> <code>class-of-service</code> <i>cos-value</i> ;                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Hierarchy Level</b>          | <code>[edit logical-systems</code> <i>logical-system-name</i> <code>protocols mpls</code> ],<br><code>[edit logical-systems</code> <i>logical-system-name</i> <code>protocols mpls static-label-switched-path</code><br><i>lsp-name</i> <code>ingress</code> ],<br><code>[edit logical-systems</code> <i>logical-system-name</i> <code>protocols mpls</code> <code>label-switched-path</code> <i>lsp-name</i> ],<br><code>[edit logical-systems</code> <i>logical-system-name</i> <code>protocols mpls</code> <code>label-switched-path</code> <i>lsp-name</i><br><code>(primary   secondary)</code> <i>path-name</i> ],<br><code>[edit protocols mpls]</code> ,<br><code>[edit protocols mpls</code> <code>label-switched-path</code> <i>lsp-name</i> ],<br><code>[edit protocols mpls</code> <code>label-switched-path</code> <i>lsp-name</i> <code>(primary   secondary)</code> <i>path-name</i> ],<br><code>[edit logical-systems</code> <i>logical-system-name</i> <code>protocols mpls static-label-switched-path</code><br><i>lsp-name</i> <code>ingress</code> ] |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 13.2X51-D15 for the QFX Series.<br>Statement introduced in Junos OS Release 14.1X53-D30 for the QFX Series Virtual Chassis and Virtual Chassis Fabric.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Description</b>              | <p>Class-of-service (CoS) value given to all packets in the LSP.</p> <p>The CoS value might affect the scheduling or queuing algorithm of traffic traveling along an LSP.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Options</b>                  | <p><b>cos-value</b>—CoS value. A higher value typically corresponds to a higher level of service.</p> <p><b>Range:</b> 0 through 7</p> <p><b>Default:</b> If you do not specify a CoS value, the IP precedence bits from the packet's IP header are used as the packet's CoS value.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring Class of Service for MPLS LSPs on page 272</a></li><li>• <a href="#">Configuring the Ingress Router for Static LSPs on page 299</a></li><li>• <a href="#">Configuring the Intermediate (Transit) and Egress Routers for Static LSPs on page 302</a></li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |

## container-label-switched-path

|                                 |                                                                                                                                                                                                                                                                                                                                                                                  |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre> container-label-switched-path <i>lsp-name</i> {   disable;   description <i>description</i>;   label-switched-path-template;   splitting-merging;   suffix <i>string</i>;   to <i>ip-address</i>; }</pre>                                                                                                                                                                  |
| <b>Hierarchy Level</b>          | [edit protocols mpls]                                                                                                                                                                                                                                                                                                                                                            |
| <b>Release Information</b>      | <p>Statement introduced in Junos OS Release 14.2.</p> <p>Statement introduced for QFX Switches in Junos OS Release 15.1X53-D30.</p>                                                                                                                                                                                                                                              |
| <b>Description</b>              | Configure a multi-label-switched path (LSP) tunnel between the ingress and the egress routers. The container LSP consists of several member LSPs to the same destination.                                                                                                                                                                                                        |
| <b>Options</b>                  | <p><b>disable</b>—Disable MPLS container-label-switched path.</p> <p><b>description <i>description</i></b>—Text describing the container LSP.</p> <p><b>suffix <i>string</i></b>—Suffix to generate names of member LSPs of the container LSP.</p> <p><b>to <i>ip-address</i></b>—IP address of the egress router.</p> <p>The remaining statements are explained separately.</p> |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                   |

## corouted-bidirectional

---

|                                 |                                                                                                                                                                                                          |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | corouted-bidirectional;                                                                                                                                                                                  |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i> ],<br>[edit protocols mpls label-switched-path <i>lsp-name</i> ]                                     |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 12.2.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                   |
| <b>Description</b>              | Specify that the label-switched path be established as a corouted bidirectional packet LSP. You cannot configure this statement at the same time as the <b>corouted-bidirectional-passive</b> statement. |
| <b>Default</b>                  | This statement is disabled by default.                                                                                                                                                                   |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                      |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring Corouted Bidirectional LSPs on page 248</a></li><li>• <a href="#">corouted-bidirectional-passive on page 1414</a></li></ul>              |

## corouted-bidirectional-passive

---

|                                 |                                                                                                                                                                                                                                                                                                                     |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | corouted-bidirectional-passive;                                                                                                                                                                                                                                                                                     |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i> ],<br>[edit protocols mpls label-switched-path <i>lsp-name</i> ]                                                                                                                                                |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 12.2.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                                                              |
| <b>Description</b>              | Specify that the label-switched path be a passive LSP associated with a bidirectional LSP when it is signaled at the ingress router. This passive LSP enables the MPLS application to utilize the reverse LSP. You cannot configure this statement at the same time as the <b>corouted-bidirectional</b> statement. |
| <b>Default</b>                  | This statement is disabled by default.                                                                                                                                                                                                                                                                              |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                 |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring Corouted Bidirectional LSPs on page 248</a></li><li>• <a href="#">corouted-bidirectional on page 1414</a></li></ul>                                                                                                                                 |

## credibility

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>credibility {   direct;   isis-level-1;   isis-level-2;   ospf;   static;   unknown; }</pre>                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Hierarchy Level</b>          | <p>[edit logical-systems <i>logical-system-name</i> protocols mpls traffic-engineering database export],</p> <p>[edit protocols mpls traffic-engineering database export]</p>                                                                                                                                                                                                                                                                                                                            |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 14.2.                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Description</b>              | <p>Configure preference values for entries from BGP-TE to the traffic engineering database. A protocol with a higher credibility value is preferred over a protocol with a lower credibility value.</p> <p>The credibility order for the BGP-TE protocols is as follows:</p> <ul style="list-style-type: none"> <li>• <b>Unknown</b>—80</li> <li>• <b>OSPF</b>—81</li> <li>• <b>ISIS Level 1</b>—82</li> <li>• <b>ISIS Level 2</b>—83</li> <li>• <b>Static</b>—84</li> <li>• <b>Direct</b>—85</li> </ul> |
| <b>Options</b>                  | <p><b>direct</b>—Entries sourced from directly connected links.</p> <p><b>isis-level-1</b>—Entries sourced from IS-IS Level 1.</p> <p><b>isis-level-2</b>—Entries sourced from IS-IS Level 2.</p> <p><b>ospf</b>—Entries sourced from OSPF.</p> <p><b>static</b>—Entries sourced from static configuration.</p> <p><b>unknown</b>—Entries sourced from unknown entities.</p> <p><b>Range:</b> 0 through 512</p>                                                                                          |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">traffic-engineering on page 1534</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                     |

## database

---

|                                 |                                                                                                                                                                                                                                              |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>database {<br/>    export;<br/>    import;<br/>}</pre>                                                                                                                                                                                  |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls traffic-engineering],<br>[edit protocols mpls traffic-engineering]                                                                                                           |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 14.2.                                                                                                                                                                                               |
| <b>Description</b>              | <p>Include link and node entries from the traffic engineering database into the <b>lsdist.0</b> routing information base (RIB), so it gets picked up by the BGP export policy.</p> <p>The remaining statements are explained separately.</p> |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                          |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">traffic-engineering on page 1534</a></li></ul>                                                                                                                                           |

## delay (querier)

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre> delay {     traffic-class tc-value {         average-sample-size sample size;         padding-size size;         query-interval milliseconds;         rtt-delay-threshold rtt threshold value;         twcd-delay-threshold twcd threshold value;     } } </pre>                                                                                                                                                                                    |
| <b>Hierarchy Level</b>          | <p>[edit protocols mpls <a href="#">oam performance-monitoring querier</a>],<br/> [edit protocols mpls <a href="#">label-switched-path lsp-name oam performance-monitoring querier</a>],<br/> [edit protocols mpls <a href="#">label-switched-path lsp-name primary path-name oam performance-monitoring querier</a>],<br/> [edit protocols mpls <a href="#">label-switched-path lsp-name secondary path-name oam performance-monitoring querier</a>]</p> |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 15.1.                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Description</b>              | <p>Configure delay measurement options.</p> <p>The remaining statements are explained separately.</p>                                                                                                                                                                                                                                                                                                                                                     |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                            |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring Pro-Active Loss and Delay Measurements on page 476</a></li> <li>• <a href="#">On-Demand Packet Loss and Delay Measurement for UHP LSPs Overview on page 50</a></li> <li>• <a href="#">performance-monitoring (Protocols MPLS) on page 1493</a></li> </ul>                                                                                                                                |

## delay (responder)

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>delay {<br/>    min-query-interval <i>milliseconds</i>;<br/>}</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Hierarchy Level</b>          | [edit protocols mpls <a href="#">oam performance-monitoring responder</a> ],<br>[edit protocols mpls <a href="#">label-switched-path</a> <i>lsp-name</i> <a href="#">oam performance-monitoring responder</a> ],<br>[edit protocols mpls <a href="#">label-switched-path</a> <i>lsp-name</i> primary <i>path-name</i> <a href="#">oam performance-monitoring responder</a> ],<br>[edit protocols mpls <a href="#">label-switched-path</a> <i>lsp-name</i> secondary <i>path-name</i> <a href="#">oam performance-monitoring responder</a> ] |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 15.1.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Description</b>              | Configure delay measurement options.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Options</b>                  | <b>min-query-interval <i>milliseconds</i></b> —(Optional) Specify the minimum query interval that the responder supports. If the minimum query interval of the responder is greater than the query interval configured at querier, the effective message query rate will be the minimum query interval configured for the responder.<br><b>Default:</b> 10 seconds<br><b>Range:</b> 1000 through 4294967295 milliseconds                                                                                                                    |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring Pro-Active Loss and Delay Measurements on page 476</a></li><li>• <a href="#">On-Demand Packet Loss and Delay Measurement for UHP LSPs Overview on page 50</a></li><li>• <a href="#">performance-monitoring (Protocols MPLS) on page 1493</a></li></ul>                                                                                                                                                                                                                      |



## description (Protocols MPLS)

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>description text;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Hierarchy Level</b>          | <p>[edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> protocols mpls static-label-switched-path <i>lsp-name</i> bypass],</p> <p>[edit logical-systems <i>logical-system-name</i> protocols mpls static-label-switched-path <i>lsp-name</i> ingress],</p> <p>[edit logical-systems <i>logical-system-name</i> protocols mpls static-label-switched-path <i>lsp-name</i> transit <i>incoming-label</i>],</p> <p>[edit protocols mpls label-switched-path <i>lsp-name</i>],</p> <p>[edit protocols mpls static-label-switched-path <i>lsp-name</i> bypass],</p> <p>[edit protocols mpls static-label-switched-path <i>lsp-name</i> ingress],</p> <p>[edit protocols mpls static-label-switched-path <i>lsp-name</i> transit <i>incoming-label</i>]</p> |
| <b>Release Information</b>      | <p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 13.2X51-D15 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 14.1X53-D30 for the QFX Series Virtual Chassis and Virtual Chassis Fabric.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Description</b>              | Provides a textual description of the LSP. Enclose any descriptive text that includes spaces in quotation marks (" "). Any descriptive text you include is displayed in the output of the <b>show mpls lsp detail</b> command and has no effect on the operation of the LSP.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Options</b>                  | <b>text</b> —Provide a textual description of the LSP. The description text can be no more than 80 characters in length.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring a Text Description for LSPs on page 245</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |

## deselect-on-bandwidth-failure

---

|                                 |                                                                                                                     |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | deselect-on-bandwidth-failure {<br>tear-lsp;<br>}                                                                   |
| <b>Hierarchy Level</b>          | [edit protocols mpls],<br>[edit protocols mpls label-switched-path <i>path-name</i> ]                               |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 15.1.                                                                      |
| <b>Description</b>              | Deselect an active path if it does not meet the bandwidth criteria required for path selection.                     |
| <b>Options</b>                  | <b>tear-lsp</b> — Bring down an active path if none of the paths are able to reserve the required bandwidth.        |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration. |

## diffserv-te

|                                 |                                                                                                                                                                                                                                               |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre> diffserv-te {   bandwidth-model {     extended-mam;     mam;     rdm;   }   te-class-matrix {     tnumber {       priority <i>priority</i>;       traffic-class {         ctnumber <i>priority priority</i>;       }     }   } } </pre> |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls],<br>[edit protocols mpls]                                                                                                                                                    |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                     |
| <b>Description</b>              | Specify properties for differentiated services in traffic engineering.                                                                                                                                                                        |
| <b>Options</b>                  | The statements are explained separately.                                                                                                                                                                                                      |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                           |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring Routers for DiffServ-Aware Traffic Engineering on page 343</a></li> </ul>                                                                                                    |

## disable (Protocols MPLS)

---


|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | disable;                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls],<br>[edit logical-systems <i>logical-system-name</i> protocols mpls <a href="#">interface interface-name</a> ],<br>[edit logical-systems <i>logical-system-name</i> protocols mpls <a href="#">label-switched-path lsp-name</a> ],<br>[edit logical-systems <i>logical-system-name</i> protocols mpls <a href="#">label-switched-path lsp-name</a><br>auto-bandwidth],<br>[edit protocols mpls],<br>[edit protocols mpls <a href="#">interface interface-name</a> ],<br>[edit protocols mpls <a href="#">label-switched-path lsp-name</a> ] |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 13.2X51-D15 for the QFX Series.<br>Statement introduced in Junos OS Release 14.1X53-D30 for the QFX Series Virtual Chassis<br>and Virtual Chassis Fabric.                                                                                                                                                                                                                                                                                                                                                      |
| <b>Description</b>              | Disable the functionality of the configured object.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Default</b>                  | The configured object is enabled (operational) unless explicitly disabled.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">label-switched-path on page 1453</a></li><li>• <a href="#">interface on page 1451</a></li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                          |

## dual-transport

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                             |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre> dual-transport {   inet-lsr-id <i>inet-lsr-id</i>;   inet6-lsr-id <i>inet6-lsr-id</i>; } </pre>                                                                                                                                                                                                                                                                                       |
| <b>Hierarchy Level</b>          | [edit protocols ldp]                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 16.1 for the M320 Series, MX Series, and PTX Series.                                                                                                                                                                                                                                                                                               |
| <b>Description</b>              | Configure to allow Junos LDP to establish the TCP connection over IPv4 with IPv4 neighbors, and over IPv6 with IPv6 neighbors as a single-stack LSR. <b>inet-lsr-id</b> and <b>inet6-lsr-id</b> are the two LSR IDs that have to be configured to establish an LDP session over IPv4 and IPv6 TCP transport. These two IDs should be non-zero and must be configured with different values. |
| <b>Options</b>                  | <p><b>inet-lsr-id <i>inet-lsr-id</i></b>— Configure the LSR ID to establish an LDP session over IPv4 TCP transport.</p> <p><b>inet6-lsr-id <i>inet6-lsr-id</i></b>— Configure the LSR ID to establish an LDP session over IPv6 TCP transport.</p>                                                                                                                                           |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                              |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">LDP Native IPv6 Support Overview on page 585</a></li> <li>• <a href="#">Example: Configuring LDP Native IPv6 Support on page 676</a></li> <li>• <a href="#">Configuring LDP Native IPv6 Support on page 675</a></li> <li>• <a href="#">family (Protocols LDP) on page 1434</a></li> </ul>                                              |

## dynamic-tunnels

|                                                                                                                                                                                 |                                                                                                                                                                                                                                                                                                                     |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                                                                                                                                                                   | <pre>dynamic-tunnels <i>tunnel-name</i> {   destination-networks <i>prefix</i>;   gre;   rsvp-te <i>entry-name</i> {     destination-networks <i>network-prefix</i>;     label-switched-path-template (Multicast) {       default-template;       template-name;     }   }   source-address <i>address</i>; }</pre> |
| <b>Hierarchy Level</b>                                                                                                                                                          | <p>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> routing-options],</p> <p>[edit logical-systems <i>logical-system-name</i> routing-options],</p> <p>[edit routing-instances <i>routing-instance-name</i> routing-options],</p> <p>[edit routing-options]</p>      |
| <b>Release Information</b>                                                                                                                                                      | <p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 12.3 for ACX Series routers.</p>                                                                                                                                                                               |
| <b>Description</b>                                                                                                                                                              | Configure a dynamic tunnel between two PE routers.                                                                                                                                                                                                                                                                  |
| <div>  <b>NOTE:</b> ACX Series routers do not support the <code>gre</code> statement. </div> |                                                                                                                                                                                                                                                                                                                     |
| <b>Options</b>                                                                                                                                                                  | <p><b><i>tunnel-name</i></b>—Name of the dynamic tunnel.</p> <p>The remaining statements are explained separately.</p>                                                                                                                                                                                              |
| <b>Required Privilege Level</b>                                                                                                                                                 | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                      |
| <b>Related Documentation</b>                                                                                                                                                    | <ul style="list-style-type: none"> <li>• <i>Example: Configuring a Two-Tiered Virtualized Data Center for Large Enterprise Networks</i></li> </ul>                                                                                                                                                                  |

## egress-protection (MPLS)

|                                 |                                                                                                                                                                                                                                                                                                                                                                                             |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>egress-protection {   context-identifier <i>context-id</i> {     primary   protector;     metric <i>igp-metric-value</i>;     advertise-mode (stub-alias   stub-proxy);   } }</pre>                                                                                                                                                                                                    |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls],<br>[edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i> ],<br>[edit protocols mpls],<br>[edit protocols mpls label-switched-path <i>lsp-name</i> ]                                                                                                                         |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 10.4.<br>Options <b>primary</b> , <b>protector</b> , and <b>metric</b> introduced in Junos OS Release 11.4R3.<br>Option <b>advertise-mode</b> introduced in Junos OS Release 13.3.                                                                                                                                                                 |
| <b>Description</b>              | Enables an Edge Protection Virtual Circuit (EPVC) for the MPLS protocol.                                                                                                                                                                                                                                                                                                                    |
| <b>Options</b>                  | <p><b>context-identifier <i>context-id-ip-address</i></b>—(Optional) The context identifier IPv4 address.</p> <p><b>metric <i>igp-metric-value</i></b>—(Optional) The IGP metric value ranging from 2 through 16777215.</p> <p><b>(primary   protector)</b>—On the primary PE router, configure as type <b>primary</b>. On the protector PE router, configure as type <b>protector</b>.</p> |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                         |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <i>Example: Configuring Egress Protection for Layer 3 VPN Services</i></li> <li>• <i>Example: Configuring Layer 3 VPN Egress Protection with RSVP and LDP</i></li> </ul>                                                                                                                                                                           |

## encoding-type

---

|                                 |                                                                                                                                                                                                                                                                                                     |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | encoding-type (ethernet   packet   pdh   sonet-sdh);                                                                                                                                                                                                                                                |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i> lsp-attributes],<br>[edit protocols mpls label-switched-path <i>lsp-name</i> lsp-attributes]                                                                                                    |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.                                                                                                                                                                                                                                                   |
| <b>Description</b>              | Specify the encoding type of payload carried by the LSP. It can be any of the following: <ul style="list-style-type: none"><li>• <b>ethernet</b>—Ethernet</li><li>• <b>packet</b>—Packet</li><li>• <b>pdh</b>—Plesiochronous digital hierarchy (PDH)</li><li>• <b>sonet-sdh</b>—SONET/SDH</li></ul> |
| <b>Default</b>                  | packet                                                                                                                                                                                                                                                                                              |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                 |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring the Encoding Type on page 784</a></li></ul>                                                                                                                                                                                         |

## entropy-label

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                               |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | entropy-label {<br><b>ingress-policy</b> <i>ingress-policy-name</i> ;<br>}                                                                                                                                                                                                                                                                                                                                                    |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols <b>ldp</b> ],                                                                                                                                                                                                                                                                                                                                                      |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 14.1.                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Description</b>              | Assists the transit router in load-balancing MPLS traffic across ECMP paths or Link Aggregation groups by introducing the entropy label to the MPLS label stack. The entropy label allows routers to load balance MPLS traffic by using a hash-input without the need to perform deep packet inspection. Deep packet inspection requires more of the router's processing power and is not a capability shared by all routers. |
| <b>Options</b>                  | The other statements are explained separately.                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                           |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring the Entropy Label for LSPs on page 246</a></li></ul>                                                                                                                                                                                                                                                                                                          |



## ethernet-vlan (Protocols Link Management)

|                                 |                                                                                                                     |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | ethernet-label {<br>vlan-id-range <i>vlan-id-range</i> ;<br>}                                                       |
| <b>Hierarchy Level</b>          | [edit protocols link-management te-link <i>te-link-name</i> ]                                                       |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 14.2.                                                                      |
| <b>Description</b>              | Specify the TE-link to be used for Layer 2 VLAN label-switched path (LSP).                                          |
| <b>Options</b>                  | <b>vlan-id-range</b> <i>vlan-id-range</i> —Pool of VLAN IDs.                                                        |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration. |

## ether-pseudowire

|                                 |                                                                                                                                                                                                                                                      |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | ether-pseudowire {<br>zero-control-word;<br>}                                                                                                                                                                                                        |
| <b>Hierarchy Level</b>          | [edit forwarding-options enhanced-hash-key family mpls]                                                                                                                                                                                              |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 16.1 for the M Series, MX Series, and PTX Series.                                                                                                                                                           |
| <b>Description</b>              | Load-balance IP over Ethernet pseudowire. Presence of zero-control-word in the payload indicates an Ethernet frame.<br><br>zero-control-word—Precedes Ethernet packet to indicate the start Ethernet frame in an MPLS ether-pseudowire payload.      |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                  |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <i>enhanced-hash-key</i></li> <li>• <i>hash-key</i></li> <li>• <a href="#">family mpls on page 1435</a></li> <li>• <a href="#">MPLS Encapsulated Payload Load-balancing Overview on page 485</a></li> </ul> |

## exclude (for Administrative Groups)

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>exclude [ <i>group-names</i> ];</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Hierarchy Level</b>          | <code>[edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i> admin-group],</code><br><code>[edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i> (primary   secondary) path-name <i>admin-group</i>],</code><br><code>[edit protocols mpls label-switched-path <i>lsp-name</i> admin-group],</code><br><code>[edit protocols mpls label-switched-path <i>lsp-name</i> (primary   secondary) path-name admin-group]</code> |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Description</b>              | Define the administrative groups to exclude for an LSP or for a path's primary and secondary paths.                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Options</b>                  | <i>group-names</i> —Names of one or more groups defined with the <a href="#">admin-groups</a> statement.                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring Administrative Groups for LSPs on page 268</a></li></ul>                                                                                                                                                                                                                                                                                                                                                                                             |

## exclude (for Fast Reroute)

---

|                                 |                                                                                                                                                                                                                                                |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>(exclude [ <i>group-names</i> ]   no-exclude);</code>                                                                                                                                                                                    |
| <b>Hierarchy Level</b>          | <code>[edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i> fast-reroute],</code><br><code>[edit protocols mpls label-switched-path <i>lsp-name</i> fast-reroute]</code>                         |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 14.1X53-D10 for the QFX Series and for EX4600 switches.                                                                                          |
| <b>Description</b>              | Control exclusion of administrative groups: <ul style="list-style-type: none"><li>• <b>exclude</b>—Define the administrative groups to exclude for fast reroute.</li><li>• <b>no-exclude</b>—Disable administrative group exclusion.</li></ul> |
| <b>Options</b>                  | <i>group-names</i> —Names of one or more groups defined with the <a href="#">admin-groups</a> statement.                                                                                                                                       |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                            |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring Fast Reroute on page 254</a></li><li>• <a href="#">admin-groups on page 1396</a></li></ul>                                                                                     |

## exclude-srlg


|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | exclude-srlg;                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Hierarchy Level</b>          | <p>[edit protocols mpls],</p> <p>[edit logical-systems logical-system-name protocols mpls],</p> <p>[edit protocols mpls label-switched-path <i>path-name</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>path-name</i>],</p> <p>[edit protocols rsvp interface <i>interface-name</i> link-protection],</p> <p>[edit logical-systems <i>logical-system-name</i> protocols rsvp interface <i>interface-name</i> link-protection],</p> <p>[edit protocols rsvp interface <i>interface-name</i> link-protection bypass <i>destination</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> protocols rsvp interface <i>interface-name</i> link-protection bypass <i>destination</i>]</p> |
| <b>Release Information</b>      | <p>Statement introduced in Junos OS Release 11.4.</p> <p>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Description</b>              | <p>Exclude Shared Risk Link Group (SRLG) links for the secondary path for critical links where it is imperative to keep the secondary and primary label-switched paths completely disjoint from any common SRLG.</p> <p>When specified, the Constrained Shortest Path First (CSPF) algorithm excludes any link belonging to the set of SRLGs in the primary path. When not specified and if a link belongs to the set of SRLGs in the primary path, CSPF adds the SRLG cost to the metric, but still accepts the link for computing the path.</p>                                                                                                                                                                                                 |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Example: Excluding SRLG Links Completely for the Secondary LSP on page 101</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |

## expand-loose-hop

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | expand-loose-hop;                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls],<br>[edit protocols mpls]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 7.6.<br>Point-to-multipoint LSP support introduced in Junos OS Release 11.2.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Description</b>              | <p>Allow an LSP to traverse multiple OSPF areas within a service provider's network.</p> <p>Allows a point-to-multipoint LSP to span multiple domains in a network. Effectively, this allows you to configure one or more sub-LSPs (branches) in separate network domains. Examples of such domains include OSPF areas and autonomous systems (ASs). A sub-LSP of an inter-domain point-to-multipoint LSP can be intra-area, inter-area, or inter-AS, depending on the location of the egress node (leaf) with respect to the ingress node (source). Only OSPF areas are supported for inter-domain point-to-multipoint LSPs. IS-IS levels are not supported.</p> |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Enabling Interarea Traffic Engineering on page 367</a></li><li>• <a href="#">Configuring Inter-Domain Point-to-Multipoint LSPs on page 331</a></li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                      |

## explicit-null (Protocols MPLS)

|                                                                                                                                                                                                               |                                                                                                                                                                                                                                                      |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                                                                                                                                                                                                 | explicit-null;                                                                                                                                                                                                                                       |
| <b>Hierarchy Level</b>                                                                                                                                                                                        | [edit logical-systems <i>logical-system-name</i> protocols mpls],<br>[edit protocols mpls]                                                                                                                                                           |
| <b>Release Information</b>                                                                                                                                                                                    | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 13.2X51-D15 for the QFX Series.<br>Statement introduced in Junos OS Release 14.1X53-D30 for the QFX Series Virtual Chassis and Virtual Chassis Fabric. |
| <b>Description</b>                                                                                                                                                                                            | Advertise label 0 to the egress router of an LSP.                                                                                                                                                                                                    |
| <b>Default</b>                                                                                                                                                                                                | If you do not include the <b>explicit-null</b> statement in the MPLS configuration, label 3 (implicit null) is advertised.                                                                                                                           |
| <div>  <b>NOTE:</b> Junos OS does not support explicit null routes with next hops to virtual tunnel (vt-) interfaces. </div> |                                                                                                                                                                                                                                                      |
| <b>Required Privilege Level</b>                                                                                                                                                                               | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                  |
| <b>Related Documentation</b>                                                                                                                                                                                  | <ul style="list-style-type: none"> <li>• <a href="#">Configuring RSVP to Pop the Label on the Ultimate-Hop Router on page 523</a></li> </ul>                                                                                                         |

## export (MPLS Traffic engineering database)

---

|                                 |                                                                                                                                                      |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>export {<br/>    <b>credibility</b>;<br/>    policy <i>policy-name</i>;<br/>}</pre>                                                             |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls traffic-engineering database],<br>[edit protocols mpls traffic-engineering database] |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 14.2.                                                                                                       |
| <b>Description</b>              | Configure the traffic engineering database export-related parameters.                                                                                |
| <b>Options</b>                  | <p><b>policy <i>policy-name</i></b>—Name of the export policy.</p> <p>The remaining statement is explained separately.</p>                           |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                  |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">traffic-engineering on page 1534</a></li></ul>                                                   |

## failure-action (Protocols MPLS)

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>failure-action {     make-before-break teardown-timeout <i>seconds</i>;     teardown; }</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Hierarchy Level</b>          | <pre>[edit logical-systems <i>logical-system-name</i> protocols mpls oam bfd-liveness-detection], [edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i>  oam bfd-liveness-detection], [edit protocols mpls label-switched-path <i>lsp-name</i> oam bfd-liveness-detection], [edit protocols mpls oam bfd-liveness-detection]</pre>                                                                                                                                                                                                  |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.4.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Description</b>              | <p>Configure route and next-hop properties in the event of a Bidirectional Forwarding Detection (BFD) protocol session failure event on an RSVP label-switched path (LSP). The failure event could be an existing BFD session that has gone down or a BFD session that never came up. RSVP adds back the route or next hop when the relevant BFD session comes back up.</p>                                                                                                                                                                                                       |
| <b>Options</b>                  | <p><b>make-before-break</b>—When a BFD session fails for an RSVP LSP, an attempt is made to signal a new LSP path before tearing down the old LSP path.</p> <p><b>teardown</b>—When a BFD session fails for an RSVP LSP, the associated LSP path is taken down and resigaled immediately.</p> <p><b>teardown-timeout <i>seconds</i></b>—When you configure the <b>make-before-break</b> option, you can specify a time in seconds for the <b>teardown-timeout</b> option. At the end of the time specified, the associated RSVP LSP is automatically torn down and resigaled.</p> |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring a Failure Action for the BFD Session on an RSVP LSP on page 384</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                   |

## family

---

|                                 |                                                                                                                                                                                                                                                                                                                                   |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>family {<br/>  inet;<br/>  inet6;<br/>}</pre>                                                                                                                                                                                                                                                                                |
| <b>Hierarchy Level</b>          | [edit protocols ldp]                                                                                                                                                                                                                                                                                                              |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 16.1 for the M320 Series, MX Series, and PTX Series.                                                                                                                                                                                                                                     |
| <b>Description</b>              | Configure the address family as inet for IPv4 or inet6 for IPv6, or both. If the address family is not configured, then the default address family is IPv4.                                                                                                                                                                       |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                               |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">LDP Native IPv6 Support Overview on page 585</a></li><li>• <a href="#">Example: Configuring LDP Native IPv6 Support on page 676</a></li><li>• <a href="#">Configuring LDP Native IPv6 Support on page 675</a></li><li>• <a href="#">dual-transport on page 1423</a></li></ul> |



## family mpls

```
Syntax  family mpls {
        all-labels;
        label-1;
        label-2;
        label-3;
        no-labels;
        no-label-1-exp;
        payload {
            ether-pseudowire {
                zero-control-word;
            }
            ip {
                disable;
                layer-3-only;
                port-data {
                    source-msb;
                    source-lsb;
                    destination-msb;
                    destination-lsb;
                }
            }
        }
    }
```

**Hierarchy Level** [edit forwarding-options hash-key]

**Release Information** Statement introduced before Junos OS Release 7.4.  
**no-label-1-exp** option introduced in Junos OS Release 8.0.  
**label-3** and **no-labels** options introduced in Junos OS Release 8.1.  
**ether-pseudowire** statement introduced in Junos OS Release 9.1 (M320 and T Series routers only); support extended to M120 and MX Series routers in Junos OS Release 9.4.  
**all-labels** and **payload ip disable** options introduced in Junos OS Release 12.1X48R2. (PTX Series Packet Transport Routers only).  
**zero-control-word** option introduced in Junos OS Release 16.1 for the M Series, MX Series, and PTX Series.

**Description** For aggregated Ethernet and SONET/SDH interfaces only, configure load balancing based on MPLS labels and payload. Only the IPv4 protocol is supported.

**Options** **family mpls**—(Aggregated Ethernet interfaces, aggregated SONET/SDH interfaces, and multiple equal-cost MPLS next hops only) Incorporate MPLS label and payload information into the hash key for per-flow load balancing. Only the IPv4 protocol is supported.

- **all-labels**—(PTX Series Packet Transport Routers only) Up to eight MPLS labels are included in the hash key to identify the uniqueness of a flow in the Packet Forwarding Engine. This is the default setting.

- **label-1**—(M120, M320, MX Series, and T Series routers only) Include the first MPLS label into the hash key. This is used for a one-label packet for per-flow load balancing IPv4 VPLS traffic based on IP information and MPLS labels.
- **label-2**—(M120, M320, MX Series, and T Series routers only) Include the second MPLS label into the hash key. This is used for a two-label packet for per-flow load balancing IPv4 VPLS traffic based on IP information and MPLS labels. To use the second MPLS label in the hash key, include both the **label-1** and **label-2** statements at the **[edit forwarding-options hash-key family mpls]** hierarchy level. By default, the router provides hashing on the first and second labels. If both labels are specified, the entire first label and the first 16 bits of the second label are hashed.
- **label-3**—(M120, M320, MX Series, and T Series routers only) Include the third MPLS label into the hash key. To use the third MPLS label, include the **label-1**, **label-2**, and **label-3** statements at the **[edit forwarding-options hash-key family mpls]** hierarchy level.
- **no-labels**—Include no MPLS labels into the hash key.

- **no-label-1-exp**—(M120, M320, MX Series, and T Series routers only) The EXP bit of the first label is not used in the hash calculation to avoid reordering complications.
- **payload**—Incorporate bits from the IP payload into the hash key for per-flow load balancing Layer 2 information based on MPLS labels.
  - **disable**—(PTX Series Packet Transport Routers only) Exclude IP payload from the hash key.
  - **ether-pseudowire**—(M120, M320, MX Series, and T Series routers only) Load-balance IPv4 traffic over Layer 2 Ethernet pseudowires.
  - **zero-control-word**—(M Series, MX Series, and PTX Series) Precedes Ethernet packet to indicate the start of an Ethernet frame in an MPLS ether-pseudowire payload.
  - **ip**—Include the IP address of the IPv4 or IPv6 payload into the hash key for per-flow load balancing Layer 2 information based on MPLS labels. For the PTX Series Packet Transport Routers, this is the default setting with both Layer 3 and Layer 4 IP information included in the hash key.
    - **disable**—(PTX Series Packet Transport Routers only) Exclude IP payload from the hash key.
    - **layer-3-only**—Include only Layer 3 IP information from the IP payload data into the hash key for per-flow load balancing Layer 2 information based on MPLS labels.
    - **port-data**—(M120, M320, MX Series, and T Series routers only) Include the source and destination port field information into the hash key. By default, the most significant byte and least significant byte of the source and destination port fields are hashed. To select specific bytes to be hashed, include one or more of the **source-msb**, **source-lsb**, **destination-msb**, and **destination-lsb** options at the [edit forwarding-options hash-key family mpls payload ip port-data] hierarchy level. To prevent all four bytes from being hashed, include the **layer-3-only** statement at the [edit forwarding-options hash-key family mpls payload ip] hierarchy level.
      - **destination-lsb**—Include the least-significant byte of the destination port.
      - **destination-msb**—Include the most-significant byte of the destination port.
      - **source-lsb**—Include the least-significant byte of the source port.
      - **source-msb**—Include the most-significant byte of the source port.

**Required Privilege Level** interface—To view this statement in the configuration.  
 interface-control—To add this statement to the configuration.

**Related Documentation**

- [Configuring Load Balancing Based on MPLS Labels on page 260](#)
- [Configuring Load Balancing for Ethernet Pseudowires](#)

## fast-reroute (Protocols MPLS)

---

|                                 |                                                                                                                                                                                                                                                                                                                              |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>fast-reroute {<br/>    (bandwidth <i>bps</i>   bandwidth-percent <i>percentage</i>);<br/>    (exclude [ <i>group-names</i> ]   no-exclude );<br/>    hop-limit <i>number</i>;<br/>    (include-all [ <i>group-names</i> ]   no-include-all);<br/>    (include-any [ <i>group-names</i> ]   no-include-any);<br/>}</pre> |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i> ],<br>[edit protocols mpls label-switched-path <i>lsp-name</i> ]                                                                                                                                                         |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 14.1X53-D10 for the QFX Series and for EX4600 switches.<br>Statement introduced in Junos OS Release 14.1X53-D30 for the QFX Series Virtual Chassis and Virtual Chassis Fabric.                                                 |
| <b>Description</b>              | Establish detours for the LSP so that if a node or link in the LSP fails, the traffic on the LSP can be rerouted with minimal packet loss.                                                                                                                                                                                   |
| <b>Options</b>                  | The statements are explained separately.                                                                                                                                                                                                                                                                                     |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                          |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring Fast Reroute on page 254</a></li><li>• <a href="#">Fast Reroute Overview on page 46</a></li><li>• <a href="#">MPLS Feature Support on QFX Series and EX4600 Switches</a></li><li>• <a href="#">Interprovider and Carrier-of-Carriers VPNs</a></li></ul>      |

## fate-sharing

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>fate-sharing {   group <i>group-name</i> {     cost <i>value</i>;     from <i>address</i> &lt;to <i>address</i>&gt;;   } }</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> routing-options],<br>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> routing-options],<br>[edit routing-options],<br>[edit routing-instances <i>routing-instance-name</i> routing-options]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 9.0 for EX Series switches.<br>Statement introduced in Junos OS Release 11.3 for the QFX Series.<br>Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Description</b>              | <p>Specify a backup path in case the primary path becomes unusable.</p> <p>You specify one or more objects with common characteristics within a group. All objects are treated as /32 host addresses. The objects can be a LAN interface, a router ID, or a point-to-point link. Sequence is insignificant.</p> <p>Changing the fate-sharing database does not affect existing established LSPs until the next CSPF reoptimization. The fate-sharing database does affect fast-reroute detour path computations.</p>                                                                                                                                                                                                                                                                 |
| <b>Options</b>                  | <p><b>cost <i>value</i></b>—Cost assigned to the group.<br/> <b>Range:</b> 1 through 65,535<br/> <b>Default:</b> 1</p> <p><b>from <i>address</i></b>—Address of the router or address of the LAN/NBMA interface. For example, an Ethernet network with four hosts in the same fate-sharing group would require you to list all four of the separate <b>from</b> addresses in the group.</p> <p><b>group <i>group-name</i></b>—Each fate-sharing group must have a name, which can have a maximum of 32 characters, including letters, numbers, periods (.), and hyphens (-). You can define up to 512 groups.</p> <p><b>to <i>address</i></b>—(Optional) Address of egress router. For point-to-point link objects, you must specify both a <b>from</b> and a <b>to</b> address.</p> |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring Alternate Backup Paths Using Fate Sharing on page 62</a></li> <li>• <i>MPLS Applications Feature Guide</i></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |

## from (Protocols MPLS)

---

|                                 |                                                                                                                                                                                                                                                      |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | from <i>address</i> ;                                                                                                                                                                                                                                |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i> ],<br>[edit protocols mpls label-switched-path <i>lsp-name</i> ]                                                                                 |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 13.2X51-D15 for the QFX Series.<br>Statement introduced in Junos OS Release 14.1X53-D30 for the QFX Series Virtual Chassis and Virtual Chassis Fabric. |
| <b>Description</b>              | Specify the source address to use for the LSP.<br><br>The address you specify does not affect the outgoing interface used by the LSP.                                                                                                                |
| <b>Default</b>                  | If you do not include this statement, the software automatically selects the loopback interface as the address.                                                                                                                                      |
| <b>Options</b>                  | <i>address</i> —IP address.                                                                                                                                                                                                                          |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                  |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring the Ingress Router Address for LSPs on page 240</a></li></ul>                                                                                                                        |

## gpip

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>gpip (ethernet   hdlc   ipv4   pos-scrambling-crc-16   pos-no-scrambling-crc-16   pos-scrambling-crc-32   pos-no-scrambling-crc-32   ppp);</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i> lsp-attributes],<br>[edit protocols mpls label-switched-path <i>lsp-name</i> lsp-attributes]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br><b>pos-scrambling-crc-16</b> , <b>pos-no-scrambling-crc-16</b> , <b>pos-scrambling-crc-32</b> , and <b>pos-no-scrambling-crc-32</b> options added in Junos OS Release 8.0.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Description</b>              | Specify the type of payload carried by the LSP. It can be any of the following: <ul style="list-style-type: none"> <li>• <b>ethernet</b>—Ethernet (GPID value: 33)</li> <li>• <b>hdlc</b>—High-level Data Link Control (HDLC) (GPID value: 44)</li> <li>• <b>ipv4</b>—IP version 4 (GPID value: 0x0800)</li> <li>• <b>pos-no-scrambling-crc-16</b>—for interoperability with other vendors' equipment (GPID value: 29)</li> <li>• <b>pos-no-scrambling-crc-32</b>—for interoperability with other vendors' equipment (GPID value: 30)</li> <li>• <b>pos-scrambling-crc-16</b>—for interoperability with other vendors' equipment (GPID value: 31)</li> <li>• <b>pos-scrambling-crc-32</b>—for interoperability with other vendors' equipment (GPID value: 32)</li> <li>• <b>ppp</b>—Point-to-Point Protocol (PPP) (GPID value: 50)</li> </ul> |
| <b>Default</b>                  | <code>ipv4</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring the GPID on page 785</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |

## gre (Routing Options)

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | gre;<br>next-hop-based-tunnel;                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> routing-options dynamic-tunnels <i>tunnel-name</i> ],<br>[edit routing-options dynamic-tunnels <i>tunnel-name</i> ]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 10.1.<br><b>next-hop-based-tunnel</b> option introduced in Junos OS Release 16.2.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Description</b>              | Enable generic routing encapsulation (GRE) type for IPv4 to automatically establish label-switched paths (LSPs) for any new provider edge (PE) router added to a full mesh of LSPs.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Options</b>                  | <b>next-hop-based-tunnel</b> —Create a tunnel composite next hop for every dynamic GRE tunnel configured. The tunnel composite next hop includes the dynamic tunnel's encapsulation data and a VPN label (when chained composite next hop is not enabled). When this option is not configured, the default interface-based tunnel mode is enabled. By configuring this option, a device can scale up to 32,000 IP tunnels, which is otherwise restricted to the system limit on the number of interfaces supported.<br><br>At a given point in time, either the next-hop-based dynamic tunnel or the default interface-based dynamic GRE tunnel can exist on a device. A switchover from one tunnel mode to another deletes the existing tunnels and creates new tunnels in the new tunnel mode. As a result, a tunnel mode switchover can impact network performance. |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring MPLS-Signaled LSPs to Use GRE Tunnels on page 80</a></li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |



## hop-limit

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>hop-limit <i>number</i>;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Hierarchy Level</b>          | <p>[edit logical-systems <i>logical-system-name</i> protocols mpls],<br/> [edit logical-systems <i>logical-system-name</i> protocols mpls <b>label-switched-path</b> <i>lsp-name</i>],<br/> [edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i> <b>fast-reroute</b>],<br/> [edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i> (<b>primary</b>   <b>secondary</b>) <i>path-name</i>],<br/> [edit logical-systems <i>logical-system-name</i> protocols rsvp interface <i>interface-name</i> link-protection],<br/> [edit logical-systems <i>logical-system-name</i> protocols rsvp interface <i>interface-name</i> link-protection bypass <i>bypass-name</i>],<br/> [edit protocols mpls],<br/> [edit protocols mpls <b>label-switched-path</b> <i>lsp-name</i>],<br/> [edit protocols mpls label-switched-path <i>lsp-name</i> <b>fast-reroute</b>],<br/> [edit protocols mpls label-switched-path <i>lsp-name</i> (<b>primary</b>   <b>secondary</b>) <i>path-name</i>],<br/> [edit protocols rsvp interface <i>interface-name</i> link-protection],<br/> [edit protocols rsvp interface <i>interface-name</i> link-protection bypass <i>bypass-name</i>]</p> |
| <b>Release Information</b>      | <p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Description</b>              | <p>Specify the maximum number of routers that an LSP can traverse. This limit can be applied to any of the following:</p> <ul style="list-style-type: none"> <li>• LSPs—The configured hop limit includes the ingress and egress routers. You can specify a hop limit for an LSP and for both primary and secondary paths.</li> <li>• Fast reroute detour—Specify the number of additional routers a fast reroute detour can traverse relative to the protected LSP. For example, if an LSP traverses 4 routers, any detour for the LSP can be no more than 10 router hops, including the ingress and egress routers.</li> <li>• Link protection bypass—Specify the maximum number of routers that a link protection bypass can traverse.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Options</b>                  | <p><b>number</b>—Maximum number of hops.</p> <p><b>Range:</b> 2 through 255 (for an LSP or for a link protection bypass); 0 through 255 (for fast reroute)</p> <p><b>Default:</b> 255 (for an LSP or for a link protection bypass); 6 (for fast reroute)</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring Fast Reroute on page 254</a></li> <li>• <a href="#">Limiting the Number of Hops in LSPs on page 285</a></li> <li>• <a href="#">Configuring the Hop Limit for Bypass LSPs on page 539</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |

## import (MPLS Traffic Engineering Database)

---

|                                 |                                                                                                                                                                                                                                                                      |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>import {<br/>  bgp-ls-identifier <i>domain-identifier</i>;<br/>  identifier <i>identifier</i>;<br/>  policy <i>policy-name</i>;<br/>}</pre>                                                                                                                     |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls traffic-engineering database],<br>[edit protocols mpls traffic-engineering database]                                                                                                                 |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 14.2.                                                                                                                                                                                                                       |
| <b>Description</b>              | Configure the traffic engineering database import parameters.                                                                                                                                                                                                        |
| <b>Options</b>                  | <p><b>bgp-ls-identifier <i>domain-identifier</i></b>—BGP-TE domain identifier.</p> <p><b>identifier <i>identifier</i></b>—BGP-TE identifier.<br/><b>Range:</b> 2 through 18446744073709551615</p> <p><b>policy <i>policy-name</i></b>—Name of the import policy.</p> |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                  |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">traffic-engineering on page 1534</a></li></ul>                                                                                                                                                                   |

## ip-tunnel-rpf-check

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>ip-tunnel-rpf-check {     mode (<i>strict</i>   <i>loose</i>);     fail-filter <i>filter-name</i>; }</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Hierarchy Level</b>          | [edit routing-instances <i>routing-instance-name</i> routing-options forwarding-table]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 17.1.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Description</b>              | <p>Configure the system to enable anti-spoofing protection for next-hop-based dynamic tunnels, where reverse path forwarding checks are placed to ensure that the tunnel traffic is received from a legitimate source on the designated tunnels. When the tunnel traffic comes from a non-existing source or from a source on a non-designated tunnel, the reverse path forwarding check fails, and the traffic is not forwarded on that tunnel.</p> <p>By default, the reverse path forwarding check is in the strict mode, where the packets are not forwarded if the source of the packet is from a non-designated tunnel.</p> |
| <b>Options</b>                  | <p><b>mode (<i>strict</i>   <i>loose</i>)</b>—(Optional) Specify the mode of reverse path forwarding check to enable anti-spoofing protection for next-hop-based dynamic tunnels.</p> <p><b>Default:</b> If you omit the mode statement, the default behavior is strict mode.</p> <p><b>fail-filter <i>filter-name</i></b>—(Optional) Attach a filter to the Layer 3 VPN to log packets that failed the reverse path forwarding check.</p>                                                                                                                                                                                        |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Anti-spoofing Protection for Next-Hop-Based Dynamic Tunnels on page 235</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |

## include-all (for Administrative Groups)

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>include-all [ <i>group-names</i> ];</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Hierarchy Level</b>          | <code>[edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i> admin-group],</code><br><code>[edit logical-systems <i>logical-system-name</i> protocols mpls <b>label-switched-path</b> <i>lsp-name</i> (<b>primary</b>   <b>secondary</b>) <i>path-name</i> admin-group],</code><br><code>[edit protocols mpls label-switched-path <i>lsp-name</i> admin-group],</code><br><code>[edit protocols mpls <b>label-switched-path</b> <i>lsp-name</i> (<b>primary</b>   <b>secondary</b>) <i>path-name</i> admin-group]</code> |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Description</b>              | Require the LSP to traverse links that include all of the defined administrative groups.                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Options</b>                  | <b><i>group-names</i></b> —One or more names of groups defined with the <b>admin-groups</b> statement.                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring Administrative Groups for LSPs on page 268</a></li><li>• <a href="#">admin-groups on page 1396</a></li></ul>                                                                                                                                                                                                                                                                                                                                                                                          |

## include-all (for Fast Reroute)

---

|                                 |                                                                                                                                                                                                                                                                       |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>(include-all [ <i>group-names</i> ]   no-include-all);</code>                                                                                                                                                                                                   |
| <b>Hierarchy Level</b>          | <code>[edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i> fast-reroute],</code><br><code>[edit protocols mpls label-switched-path <i>lsp-name</i> fast-reroute]</code>                                                |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 14.1X53-D10 for the QFX Series and for EX4600 switches.                                                                                                                 |
| <b>Description</b>              | Control inclusion of administrative groups: <ul style="list-style-type: none"><li>• <b>include-all</b>—Define the administrative groups that must all be included for fast reroute.</li><li>• <b>no-include-all</b>—Disable administrative group inclusion.</li></ul> |
| <b>Options</b>                  | <b><i>group-names</i></b> —One or more names of groups defined with the <b>admin-groups</b> statement.                                                                                                                                                                |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                   |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring Fast Reroute on page 254</a></li></ul>                                                                                                                                                                |

## include-any (for Administrative Groups)

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>include-any [ <i>group-names</i> ];</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Hierarchy Level</b>          | <code>[edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i> admin-group],</code><br><code>[edit logical-systems <i>logical-system-name</i> protocols mpls <b>label-switched-path</b> <i>lsp-name</i> (<b>primary</b>   <b>secondary</b>) <i>path-name</i> admin-group],</code><br><code>[edit protocols mpls label-switched-path <i>lsp-name</i> admin-group],</code><br><code>[edit protocols mpls <b>label-switched-path</b> <i>lsp-name</i> (<b>primary</b>   <b>secondary</b>) <i>path-name</i> admin-group]</code> |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Description</b>              | Define the administrative groups to include for an LSP or for a path's primary and secondary paths.                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Options</b>                  | <b><i>group-names</i></b> —One or more names of groups defined with the <b>admin-groups</b> statement.                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring Administrative Groups for LSPs on page 268</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                            |

## include-any (for Fast Reroute)

|                                 |                                                                                                                                                                                                                                                           |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>(include-any [ <i>group-names</i> ]   no-include-any);</code>                                                                                                                                                                                       |
| <b>Hierarchy Level</b>          | <code>[edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i> fast-reroute],</code><br><code>[edit protocols mpls label-switched-path <i>lsp-name</i> fast-reroute]</code>                                    |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 14.1X53-D10 for the QFX Series and for EX4600 switches.                                                                                                     |
| <b>Description</b>              | Control inclusion of administrative groups: <ul style="list-style-type: none"> <li>• <b>include-any</b>—Define the administrative groups to include for fast reroute.</li> <li>• <b>no-include-any</b>—Disable administrative group inclusion.</li> </ul> |
| <b>Options</b>                  | <b><i>group-names</i></b> —One or more names of groups defined with the <b>admin-groups</b> statement.                                                                                                                                                    |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                       |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring Fast Reroute on page 254</a></li> </ul>                                                                                                                                                  |

## ingress (LSP)

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>ingress {<br/>    bandwidth <i>bps</i>;<br/>    class-of-service <i>cos-value</i>;<br/>    description <i>string</i>;<br/>    entropy-label;<br/>    install {<br/>        destination-prefix &lt;active&gt;;<br/>    }<br/>    link-protection bypass-name <i>name</i>;<br/>    metric <i>metric</i>;<br/>    next-hop (<i>address</i>   <i>interface-name</i>   <i>address/interface-name</i>);<br/>    node-protection bypass-name <i>name</i> next-next-label <i>label</i>;<br/>    no-install-to-address;<br/>    policing {<br/>        filter <i>filter-name</i>;<br/>        no-auto-policing;<br/>    }<br/>    preference <i>preference</i>;<br/>    push <i>out-label</i>;<br/>    to <i>address</i>;<br/>}</pre> |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls static-label-switched-path <i>lsp-name</i> ],<br>[edit protocols mpls static-label-switched-path <i>lsp-name</i> ]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 10.1.<br><b>entropy-label</b> option introduced in Junos OS Release 14.1.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Description</b>              | Configure an ingress LSR for a static LSP.<br><br>The remaining statements are explained separately                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring Static LSPs on page 299</a></li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |

## install (Protocols MPLS)

|                                 |                                                                                                                                                                                                                                                                                                                                                                           |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | install {<br><i>destination-prefix</i> <active>;<br>}                                                                                                                                                                                                                                                                                                                     |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i> ],<br>[edit logical-systems <i>logical-system-name</i> protocols mpls static-label-switched-path <i>lsp-name</i> ingress],<br>[edit protocols mpls label-switched-path <i>lsp-name</i> ],<br>[edit protocols mpls static-label-switched-path <i>lsp-name</i> ingress] |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 13.2X51-D15 for the QFX Series.<br>Statement introduced in Junos OS Release 14.1X53-D30 for the QFX Series Virtual Chassis and Virtual Chassis Fabric.                                                                                                                      |
| <b>Description</b>              | Associate one or more prefixes with an LSP. When the LSP is up, all the prefixes are installed as entries into the inet.3 or inet6.3 routing table.                                                                                                                                                                                                                       |
| <b>Options</b>                  | <b>active</b> —(Optional) Install the route into the inet.0 or inet6.0 routing table. This allows you to issue a <b>ping</b> or <b>traceroute</b> command on this address.<br><br><b>destination-prefix</b> —IPv4 or IPv6 address to associate with the LSP.                                                                                                              |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                       |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Adding LSP-Related Routes to the inet.3 or inet6.3 Routing Table on page 256</a></li> </ul>                                                                                                                                                                                                                          |

## ingress-policy

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>ingress-policy [ <i>ingress-policy-names</i> ];</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Hierarchy Level</b>          | [edit logical-system <i>logical-system-name</i> protocols ldp <a href="#">entropy-label</a> ],<br>[edit logical-system <i>logical-system-name</i> protocols ldp <a href="#">oam</a> ],<br>[edit protocols ldp <a href="#">entropy-label</a> ],<br>[edit protocols ldp <a href="#">oam</a> ]                                                                                                                                                                                                                  |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.4.<br>Statement introduced at the <a href="#">[edit protocols ldp entropy-label]</a> hierarchy level in Junos OS Release 14.1.                                                                                                                                                                                                                                                                                                                                    |
| <b>Description</b>              | <p>Configure an LDP ingress policy for either the entropy label or Operation, Administration, and Management (OAM).</p> <p>For OAM, configure the ingress policy to choose which forwarding equivalence classes (FECs) need to have OAM enabled. If the FEC passes through the policy or if the FEC is explicitly configured, OAM is enabled for a FEC. For FECs chosen using a policy, the BFD parameters configured under <a href="#">[edit protocols ldp oam bfd-liveness-detection]</a> are applied.</p> |
| <b>Options</b>                  | <i>ingress-policy-names</i> —Specify the names of the ingress policies.                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring OAM Ingress Policies for LDP on page 625</a></li><li>• <a href="#">Configuring the Entropy Label for LSPs on page 246</a></li></ul>                                                                                                                                                                                                                                                                                                          |



## interface (Protocols MPLS)

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                     |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>interface (<i>interface-name</i>   all) {   disable;   admin-group [ <i>group-names</i> ];   srlg <i>srlg-name</i>; }</pre>                                                                                                                                                                                                                                                                    |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls],<br>[edit protocols mpls]                                                                                                                                                                                                                                                                                                          |
| <b>Release Information</b>      | <p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 13.2X51-D15 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 14.1X53-D30 for the QFX Series Virtual Chassis and Virtual Chassis Fabric.</p>                                                                                                                                 |
| <b>Description</b>              | <p>Enable MPLS on one or more interfaces.</p>                                                                                                                                                                                                                                                                                                                                                       |
| <b>Options</b>                  | <p><b><i>interface-name</i></b>—Name of the interface on which to configure MPLS. To configure all interfaces, specify <b>all</b>. For details about specifying interfaces, see the <i>Junos OS Network Interfaces Library for Routing Devices</i>.</p> <p><b><i>srlg srlg-name</i></b>—Name of the SRLG to associate with an interface.</p> <p>The remaining options are explained separately.</p> |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                      |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring the Intermediate (Transit) and Egress Routers for Static LSPs on page 302</a></li> <li>• <a href="#">Example: Configuring SRLG on page 92</a></li> </ul>                                                                                                                                                                           |

## inter-domain

---

|                                 |                                                                                                                                                                                                                                                                                                                                  |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | inter-domain;                                                                                                                                                                                                                                                                                                                    |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>label-switched-path-name</i> ],<br>[edit protocols mpls label-switched-path <i>label-switched-path-name</i> ]                                                                                                                             |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 10.2.                                                                                                                                                                                                                                                                                   |
| <b>Description</b>              | Allows the router to search for routes in the IGP database. You need to configure this statement on routers that might be unable to locate a path using intra-domain CSPF (by looking in the traffic engineering database (TED)). When you configure inter-area or inter-AS LSPs, the <b>inter-domain</b> statement is required. |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                              |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring an LSP Across ASs on page 253</a></li><li>• <a href="#">label-switched-path on page 1453</a></li></ul>                                                                                                                                                           |

## ipv6-tunneling

---

|                                 |                                                                                                                                                                                                                                                                                                         |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | ipv6-tunneling;                                                                                                                                                                                                                                                                                         |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls],<br>[edit protocols mpls]                                                                                                                                                                                                              |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 14.1X53-D30 for QFX Series switches.                                                                                                                                                                      |
| <b>Description</b>              | Allow IPv6 routes to be resolved over an MPLS network by converting LDP and RSVP routes stored in the inet.3 routing table to IPv4-mapped IPv6 addresses and then copying them into the inet6.3 routing table. This routing table can be used to resolve next hops for both inet6 and inet6-vpn routes. |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                     |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Example: Tunneling IPv6 Traffic over MPLS IPv4 Networks on page 82</a></li></ul>                                                                                                                                                                    |

## label-switched-path (Protocols MPLS)

```

Syntax  label-switched-path lsp-name {
        disable;
        adaptive;
        admin-down;
        admin-group {
            exclude [ group-names ];
            include-all [ group-names ];
            include-any [ group-names ];
        }
        auto-bandwidth (MPLS Tunnel) {
            adjust-interval seconds;
            adjust-threshold percentage;
            maximum-bandwidth bps;
            minimum-bandwidth bps;
            monitor-bandwidth;
        }
        bandwidth bps {
            ct0 bps;
            ct1 bps;
            ct2 bps;
            ct3 bps;
        }
        class-of-service cos-value;
        description text;
        entropy-label;
        fast-reroute {
            (bandwidth bps | bandwidth-percent percentage);
            (exclude [ group-names ] | no-exclude);
            hop-limit number;
            (include-all [ group-names ] | no-include-all);
            (include-any [ group-names ] | no-include-any);
        }
        from address;
        install {
            destination-prefix/prefix-length <active>;
        }
        inter-domain;
        ldp-tunneling;
        link-protection;
        lsp-attributes {
            encoding-type (ethernet | packet | pdh | sonet-sdh);
            gpipid (ethernet | hdlc | ipv4 | pos-scrambling-crc-16 | pos-no-scrambling-crc-16 |
                pos-scrambling-crc-32 | pos-no-scrambling-crc-32 | ppp);
            signal-bandwidth type;
            switching-type (fiber | lambda | psc-1 | tdm);
        }
        metric metric;
        no-cspf;
        no-decrement-ttl;
        node-link-protection;
        optimize-timer seconds;
        p2mp lsp-name;
    }

```

```
policing {
    filter filter-name;
    no-auto-policing;
}
preference preference;
primary path-name {
    adaptive;
    admin-group {
        exclude [ group-names ];
        include-all [ group-names ];
        include-any [ group-names ];
    }
    bandwidth bps {
        ct0 bps;
        ct1 bps;
        ct2 bps;
        ct3 bps;
    }
    class-of-service cos-value;
    hop-limit number;
    no-cspf;
    no-decrement-ttl;
    optimize-timer seconds;
    preference preference;
    priority setup-priority reservation-priority;
    (record | no-record);
    select (manual | unconditional);
    standby;
}
priority setup-priority reservation-priority;
(random | least-fill | most-fill);
(record | no-record);
retry-limit number;
retry-timer seconds;
revert-timer seconds;
secondary path-name {
    adaptive;
    admin-group {
        exclude [ group-names ];
        include-all [ group-names ];
        include-any [ group-names ];
    }
    bandwidth bps {
        ct0 bps;
        ct1 bps;
        ct2 bps;
        ct3 bps;
    }
    class-of-service cos-value;
    hop-limit number;
    no-cspf;
    no-decrement-ttl;
    optimize-timer seconds;
    preference preference;
    priority setup-priority reservation-priority;
    (record | no-record);
```

```

    select (manual | unconditional);
    standby;
}
soft-preemption;
standby;
to address;
traceoptions {
    file filename <files number> <size size> <world-readable | no-world-readable>;
    flag flag <flag-modifier> <disable>;
}
}

```

|                          |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|--------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Hierarchy Level          | [edit logical-systems <i>logical-system-name</i> protocols mpls],<br>[edit protocols mpls]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| Release Information      | Statement introduced before Junos OS Release 7.4.<br><b>self-ping-duration</b> and <b>no-self-ping</b> options introduced in Junos OS Release 16.1.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| Description              | Configure an LSP to use in dynamic MPLS. When configuring an LSP, you must specify the address of the egress router in the <b>to</b> statement. All remaining statements are optional.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Options                  | <p><b>lsp-name</b>—Name that identifies the LSP. The name can be up to 64 characters and can contain letters, digits, periods, and hyphens. To include other characters, enclose the name in quotation marks. The name must be unique within the ingress router.</p> <p><b>link-protection</b>—Enable protection for LSP from link faults only.</p> <p><b>no-self-ping</b>—Disable self-ping for the LSP.</p> <p><b>self-ping-duration seconds</b>—Specify the duration (in seconds) for which to run the self-ping mechanism unless the ping succeeds sooner.</p> <p>LSP self-ping for an LSP starts at the ingress label edge router (LER), once a Resv message for that LSP has been received. The configured self-ping time indicates the duration for which the self-ping mechanism runs once the LSP instance is signaled to be UP. The self-ping mechanism runs until the self-ping probe is received back, or until the configured self-ping duration for the LSP is over. If any other event causes the LSP to be torn down, then the self-ping mechanism is terminated.</p> <p><b>Range:</b> 1 through 65535 seconds</p> <p>The remaining statements are explained separately.</p> |
| Required Privilege Level | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Related Documentation    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring the Ingress and Egress Router Addresses for LSPs on page 240</a></li> <li>• <a href="#">Configuring Primary and Secondary LSPs on page 242</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |

## label-switched-path-template (Container LSP)

---

|                                 |                                                                                                                                                                                                                                     |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | label-switched-path-template {<br>(default-template   lsp-template-name);<br>}                                                                                                                                                      |
| <b>Hierarchy Level</b>          | [edit protocols mpls container-label-switched-path <i>lsp-name</i> ]                                                                                                                                                                |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 14.2.<br>Statement introduced for QFX Switches in Junos OS Release 15.1X53-D30.                                                                                                            |
| <b>Description</b>              | Specify the LSP template. An LSP template is used as the basis for other dynamically generated LSPs.                                                                                                                                |
| <b>Options</b>                  | <b>default-template</b> —Specify that the default LSP template be used for the dynamically generated LSPs.<br><br><b>lsp-template-name</b> —Specify the name of an LSP to be used as a template for the dynamically generated LSPs. |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                 |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">container-label-switched-path on page 1413</a></li></ul>                                                                                                                        |

## ldp-tunneling

---

|                                 |                                                                                                                                                                      |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | ldp-tunneling;                                                                                                                                                       |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i> ],<br>[edit protocols mpls label-switched-path <i>lsp-name</i> ] |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                            |
| <b>Description</b>              | Enable the LSP to be used for LDP tunneling.                                                                                                                         |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                  |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Enabling LDP over RSVP-Established LSPs on page 724</a></li></ul>                                                |

## least-fill

---

See [random](#)

## link-protection (Dynamic LSPs)

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | link-protection;                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i> ],<br>[edit protocols mpls label-switched-path <i>lsp-name</i> ]                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 14.1X53-D10 for the QFX Series and for EX4600 switches.                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Description</b>              | <p>Enable link protection on the specified LSP, which helps to ensure that traffic sent over a specific interface to a neighboring router can continue to reach the router if that interface fails. For point-to-multipoint LSPs, including this statement extends link protection to all of the paths used by the LSP.</p> <p>To fully enable link protection, you must also include the <b>link-protection</b> statement at the [edit protocols rsvp interface <i>interface-name</i>] or [edit logical-systems <i>logical-system-name</i> protocols rsvp interface <i>interface-name</i>] hierarchy level.</p> |
| <b>Default</b>                  | Link protection is disabled.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring Link Protection for Point-to-Multipoint LSPs on page 332</a></li> <li>• <a href="#">Configuring Node Protection or Link Protection for LSPs on page 543</a></li> <li>• <a href="#">link-protection (RSVP) on page 1561</a></li> </ul>                                                                                                                                                                                                                                                                                                           |

## link-protection (Static LSPs)

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | link-protection bypass-name <i>name</i> ;                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls static-label-switched-path <i>lsp-name</i> ingress],<br>[edit logical-systems <i>logical-system-name</i> protocols mpls static-label-switched-path <i>lsp-name</i> transit <i>incoming-label</i> ],<br>[edit protocols mpls static-label-switched-path <i>lsp-name</i> ingress],<br>[edit protocols mpls static-label-switched-path <i>lsp-name</i> transit <i>incoming-label</i> ] |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 10.1.                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Description</b>              | Enable link protection on the specified static LSP. Link protection helps to ensure that traffic sent over a specific interface to a neighboring router can continue to reach the router if that interface fails.                                                                                                                                                                                                                                   |
| <b>Default</b>                  | Link protection is disabled.                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Options</b>                  | bypass-name <i>name</i> —Bypass LSP name.                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                 |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring Static LSPs on page 299</a></li><li>• <a href="#">Example: Configuring a Collection of Paths to Create an RSVP-Signaled Point-to-Multipoint LSP on page 313</a></li></ul>                                                                                                                                                                                                           |


## load-balance-label-capability

---

|                                 |                                                                                                                                                |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | load-balance-label-capability;                                                                                                                 |
| <b>Hierarchy Level</b>          | [edit forwarding-options]                                                                                                                      |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 14.1.                                                                                                 |
| <b>Description</b>              | Enables the router to push and pop the load balancing label and causes LDP and RSVP to advertise the entropy label TLV to neighboring routers. |
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                        |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring the Entropy Label for LSPs on page 246</a></li></ul>                           |



## log-updown (Protocols MPLS)

|                            |                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|----------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | <pre>log-updown {   no-trap {     mpls-lsp-traps;     rfc3812-traps;   }   (syslog   no-syslog);   trap;   trap-path-down;   trap-path-up; }</pre>                                                                                                                                                                                                                                                                                    |
| <b>Hierarchy Level</b>     | [edit logical-systems <i>logical-system-name</i> protocols mpls],<br>[edit protocols mpls]                                                                                                                                                                                                                                                                                                                                            |
| <b>Release Information</b> | <p>Statement introduced before Junos OS Release 7.4.</p> <p>The <b>mpls-lsp-traps</b> and <b>rfc-3812-traps</b> options added in Junos OS Release 9.0.</p> <p>Statement introduced in Junos OS Release 13.2X51-D15 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 14.1X53-D30 for the QFX Series Virtual Chassis and Virtual Chassis Fabric.</p>                                                                 |
| <b>Description</b>         | <p>Log a message or send an SNMP trap whenever an LSP makes a transition from up to down, or vice versa, and whenever an LSP switches from one active path to another. Only the ingress router performs these operations.</p>                                                                                                                                                                                                         |
|                            | <div>  <p><b>NOTE:</b> System log messages for LSPs are generated by default. To disable the default logging of messages for LSPs, configure the <b>no-syslog</b> option under the <b>log-updown</b> statement.</p> </div>                                                                                                                         |
| <b>Default</b>             | <p>There is no default behavior for this statement. If you do not specify the options, the configuration cannot be committed.</p>                                                                                                                                                                                                                                                                                                     |
| <b>Options</b>             | <p><b>no-syslog</b>—Do not log a message to the system log file.</p> <p><b>no-trap</b>—Do not send an SNMP trap.</p> <p><b>syslog</b>—Log a message to the system log file.</p> <p><b>trap</b>—Send an SNMP trap.</p> <p><b>trap-path-down</b>—Send an SNMP trap when an LSP path goes down.</p> <p><b>trap-path-up</b>—Send an SNMP trap when an LSP path comes up.</p> <p>The <b>no-trap</b> statement is explained separately.</p> |

|                                 |                                                                                                                                                                                                                                                                                                                    |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring System Log Messages and SNMP Traps for LSPs on page 372</a></li><li>• <i>Network Management Administration Guide</i></li><li>• <a href="#">no-trap on page 1479</a></li><li>• <a href="#">traceoptions (Protocols MPLS) on page 1526</a></li></ul> |

---

## longest-match

---

|                                 |                                                                                                                                                                                                                                                                               |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>longest-match {<br/>    policy <i>value</i> [(<i>expression</i>) ] [<i>values</i> ];<br/>}</pre>                                                                                                                                                                         |
| <b>Hierarchy Level</b>          | [edit protocols ldp]                                                                                                                                                                                                                                                          |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 16.1 for the M Series, MX Series, and PTX Series.                                                                                                                                                                                    |
| <b>Description</b>              | Enable longest match to allow LDP to learn the routes aggregated or summarized across OSPF areas or IS-IS levels in inter-domain.                                                                                                                                             |
| <b>Options</b>                  | <b>policy <i>value</i> [(<i>expression</i>) ] [<i>values</i> ]</b> — Specify policy to provide per prefix granularity.                                                                                                                                                        |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                           |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Longest Match Support for LDP Overview on page 585</a></li><li>• <a href="#">Example: Configuring Longest Match for LDP on page 593</a></li><li>• <a href="#">Configuring Longest Match for LDP on page 592</a></li></ul> |

## loss (querier)

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre> loss {     traffic-class tc-value {         average-sample-size sample size;         loss-threshold loss threshold value;         loss-threshold-window number of samples for loss threshold;         measurement-quantity bytes packets;         query-interval milliseconds;     } } </pre>                                                                                                                                                       |
| <b>Hierarchy Level</b>          | <p>[edit protocols mpls <a href="#">oam performance-monitoring querier</a>],<br/> [edit protocols mpls <a href="#">label-switched-path lsp-name oam performance-monitoring querier</a>],<br/> [edit protocols mpls <a href="#">label-switched-path lsp-name primary path-name oam performance-monitoring querier</a>],<br/> [edit protocols mpls <a href="#">label-switched-path lsp-name secondary path-name oam performance-monitoring querier</a>]</p> |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 15.1.                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Description</b>              | <p>Configure loss measurement options.</p> <p>The remaining statements are explained separately.</p>                                                                                                                                                                                                                                                                                                                                                      |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                            |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring Pro-Active Loss and Delay Measurements on page 476</a></li> <li>• <a href="#">On-Demand Packet Loss and Delay Measurement for UHP LSPs Overview on page 50</a></li> <li>• <a href="#">performance-monitoring (Protocols MPLS) on page 1493</a></li> </ul>                                                                                                                                |

## loss (responder)

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>loss {<br/>    min-query-interval <i>milliseconds</i>;<br/>}</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Hierarchy Level</b>          | [edit protocols mpls <a href="#">oam performance-monitoring responder</a> ],<br>[edit protocols mpls <a href="#">label-switched-path</a> <i>lsp-name</i> <a href="#">oam performance-monitoring responder</a> ],<br>[edit protocols mpls <a href="#">label-switched-path</a> <i>lsp-name</i> primary <i>path-name</i> <a href="#">oam performance-monitoring responder</a> ],<br>[edit protocols mpls <a href="#">label-switched-path</a> <i>lsp-name</i> secondary <i>path-name</i> <a href="#">oam performance-monitoring responder</a> ] |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 15.1.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Description</b>              | Configure loss measurement options.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Options</b>                  | <p><b>min-query-interval <i>milliseconds</i></b>—(Optional) Specify the minimum query interval that the responder supports. If the minimum query interval of the responder is greater than the query interval configured at the querier, the effective message query rate is the minimum query interval configured for the responder.</p> <p><b>Default:</b> 10 seconds</p> <p><b>Range:</b> 1000 through 4294967295 milliseconds</p>                                                                                                       |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring Pro-Active Loss and Delay Measurements on page 476</a></li><li>• <a href="#">On-Demand Packet Loss and Delay Measurement for UHP LSPs Overview on page 50</a></li><li>• <a href="#">performance-monitoring (Protocols MPLS) on page 1493</a></li></ul>                                                                                                                                                                                                                      |

## loss-delay (querier)

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre> loss-delay {     traffic-class tc-value {         average-sample-size sample size;         loss-threshold loss threshold value;         loss-threshold-window number of samples for loss threshold;         measurement-quantity bytes packets;         padding-size size;         query-interval milliseconds;         rtt-delay-threshold rtt threshold value;         twcd-delay-threshold twcd threshold value;     } } </pre>                        |
| <b>Hierarchy Level</b>          | <p>[edit protocols mpls <a href="#">oam performance-monitoring querier</a>],</p> <p>[edit protocols mpls <a href="#">label-switched-path lsp-name oam performance-monitoring querier</a>],</p> <p>[edit protocols mpls <a href="#">label-switched-path lsp-name primary path-name oam performance-monitoring querier</a>],</p> <p>[edit protocols mpls <a href="#">label-switched-path lsp-name secondary path-name oam performance-monitoring querier</a>]</p> |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 15.1.                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Description</b>              | <p>Configure combined loss-delay measurement options.</p> <p>The remaining statements are explained separately.</p>                                                                                                                                                                                                                                                                                                                                             |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                  |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring Pro-Active Loss and Delay Measurements on page 476</a></li> <li>• <a href="#">On-Demand Packet Loss and Delay Measurement for UHP LSPs Overview on page 50</a></li> <li>• <a href="#">performance-monitoring (Protocols MPLS) on page 1493</a></li> </ul>                                                                                                                                      |

## **lsp-attributes**

---

|                                     |                                                                                                                                                                                                                                                                                                                                                     |
|-------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                       | <pre>lsp-attributes {<br/>    encoding-type (ethernet   packet   pdh   sonet-sdh);<br/>    gpid (ethernet   hdlc   ipv4   pos-scrambling-crc-16   pos-no-scrambling-crc-16  <br/>        pos-scrambling-crc-32   pos-no-scrambling-crc-32   ppp);<br/>    signal-bandwidth type;<br/>    switching-type (fiber   lambda   psc-1   tdm);<br/>}</pre> |
| <b>Hierarchy Level</b>              | [edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i> ],<br>[edit protocols mpls label-switched-path <i>lsp-name</i> ]                                                                                                                                                                                |
| <b>Release Information</b>          | Statement introduced before Junos OS Release 7.4.<br><b>pos-scrambling-crc-16</b> , <b>pos-no-scrambling-crc-16</b> , <b>pos-scrambling-crc-32</b> , and<br><b>pos-no-scrambling-crc-32</b> options added in Junos OS Release 8.0.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                          |
| <b>Description</b>                  | Define the parameters signaled during LSP setup. These usually determine the nature<br>of the resource (label) allocated for the LSP.<br><br>The remaining statements are explained separately.                                                                                                                                                     |
| <b>Required Privilege<br/>Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                 |
| <b>Related<br/>Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring MPLS LSPs for GMPLS on page 784</a></li></ul>                                                                                                                                                                                                                                       |

## lsping-channel-type

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                     |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | lsping-channle-type {<br>ipv4;<br>on-demand-cv;<br>}                                                                                                                                                                                                                                                                                                                                                |
| <b>Hierarchy Level</b>          | [edit protocols mpls label-switched-path <i>lsp-name</i> oam mpls-tp-mode]<br>[edit protocols mpls oam mpls-tp-mode]                                                                                                                                                                                                                                                                                |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 16.1.                                                                                                                                                                                                                                                                                                                                                      |
| <b>Description</b>              | Specify the control-channel types for MPLS-TP mode. By default, LSPING (0x0008) is used, and the GACH-TLV is used along with this channel type.<br><br>As per RFC 7026, GACH-TLV is deprecated for ipv4 and on-demand-cv channel types.                                                                                                                                                             |
| <b>Options</b>                  | <b>ipv4</b> —Channel type 0x0021. This channel type uses the IP/UDP encapsulation and provides interoperability support with other vendor devices using IP addressing.<br><br><b>on-demand-cv</b> —Channel type 0x0025. This is a new pseudowire channel type and is used for on-demand CV without IP/UDP encapsulation, where IP addressing is not available or non-IP encapsulation is preferred. |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                 |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">mpls-tp-mode on page 1471</a></li> </ul>                                                                                                                                                                                                                                                                                                       |

## maximum-bandwidth (Protocols MPLS)

|                                 |                                                                                                                                                                                                  |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | maximum-bandwidth <i>bps</i> ;                                                                                                                                                                   |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i> auto-bandwidth],<br>[edit protocols mpls label-switched-path <i>lsp-name</i> auto-bandwidth] |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 13.2X51-D15 for the QFX Series.                                                                    |
| <b>Description</b>              | Specify the maximum amount of bandwidth in bits per second (bps).                                                                                                                                |
| <b>Options</b>                  | <b>bps</b> —Maximum amount of bandwidth.                                                                                                                                                         |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                              |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring the Maximum and Minimum Bounds of the LSP's Bandwidth on page 289</a></li> </ul>                                                |

## maximum-labels

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>maximum-labels <i>maximum-labels</i>;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Hierarchy Level</b>          | [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family mpls],<br>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family mpls]                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 10.1.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Description</b>              | <p>On the logical interface, specify the maximum number of MPLS labels upon which MPLS can operate.</p> <p>You can configure this statement on the following routers:</p> <ul style="list-style-type: none"><li>• MX Series 3D Universal Edge Router</li><li>• M120 Multiservice Edge Router</li><li>• M320 Multiservice Edge Router with Enhanced III FPCs</li><li>• M7i Multiservice Edge Router and M10i Multiservice Edge Router with Enhanced Compact Forwarding Engine Board (CFEB-E)</li><li>• T640, T1600, T4000, TX Matrix, and TX Matrix Plus routers with Enhanced Scaling FPC1, Enhanced Scaling FP2, Enhanced Scaling FPC3, and Enhanced Scaling FPC4</li></ul> |
| <b>Options</b>                  | <p><i>maximum-labels</i>—Maximum number of labels.</p> <p><b>Range:</b> 3 through 5</p> <p><b>Default:</b> 3</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring the Maximum Number of MPLS Labels on page 362</a></li><li>• <i>Junos OS VPNs Library for Routing Devices</i></li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |



## minimum-bandwidth-adjust-interval

|                                 |                                                                                                                                                                                                  |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>minimum-bandwidth-adjust-interval <i>seconds</i>;</code>                                                                                                                                   |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i> auto-bandwidth],<br>[edit protocols mpls label-switched-path <i>lsp-name</i> auto-bandwidth] |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 12.2.<br>Statement introduced in Junos OS Release 13.2X51-D15 for the QFX Series.                                                                       |
| <b>Description</b>              | Specify the duration (in seconds) for which minimum bandwidth is frozen.                                                                                                                         |
| <b>Options</b>                  | <b><i>seconds</i></b> —Minimum bandwidth reallocation interval, in seconds.<br><b>Range:</b> 300 through 31,536,000 seconds.                                                                     |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                              |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring the Maximum and Minimum Bounds of the LSP's Bandwidth on page 289</a></li> </ul>                                                |

## minimum-bandwidth-adjust-threshold-change

|                                 |                                                                                                                                                                                                  |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>minimum-bandwidth-adjust-threshold-change <i>percentage</i>;</code>                                                                                                                        |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i> auto-bandwidth],<br>[edit protocols mpls label-switched-path <i>lsp-name</i> auto-bandwidth] |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 12.2.<br>Statement introduced in Junos OS Release 13.2X51-D15 for the QFX Series.                                                                       |
| <b>Description</b>              | Specify the percentage change in maximum average bandwidth to freeze the minimum bandwidth.                                                                                                      |
| <b>Options</b>                  | <b><i>percentage</i></b> —Percentage change in maximum average bandwidth.<br><b>Range:</b> Range: 0 through 100 percent.                                                                         |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                              |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring the Maximum and Minimum Bounds of the LSP's Bandwidth on page 289</a></li> </ul>                                                |

## minimum-bandwidth-adjust-threshold-value

---

|                                 |                                                                                                                                                                                                  |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | minimum-bandwidth-adjust-threshold-value <i>bps</i> ;                                                                                                                                            |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i> auto-bandwidth],<br>[edit protocols mpls label-switched-path <i>lsp-name</i> auto-bandwidth] |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 12.2.<br>Statement introduced in Junos OS Release 13.2X51-D15 for the QFX Series.                                                                       |
| <b>Description</b>              | Specify the value in bits per second (bps) to freeze the minimum bandwidth if the maximum average bandwidth falls below this value.                                                              |
| <b>Options</b>                  | <i>bps</i> —Threshold value for minimum bandwidth if the maximum average bandwidth falls below the specified value.                                                                              |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                              |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring the Maximum and Minimum Bounds of the LSP's Bandwidth on page 289</a></li></ul>                                                  |

## metric (Protocols MPLS)

|                                 |                                                                                                                                                                                                                                                                                                                                                                              |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>metric <i>metric</i>;</code>                                                                                                                                                                                                                                                                                                                                           |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i> ],<br>[edit logical-systems <i>logical-system-name</i> protocols mpls<br>static-label-switched-path <i>lsp-name</i> ingress],<br>[edit protocols mpls label-switched-path <i>lsp-name</i> ],<br>[edit protocols mpls static-label-switched-path <i>lsp-name</i> ingress] |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 13.2X51-D15 for the QFX Series.<br>Statement introduced in Junos OS Release 14.1X53-D30 for the QFX Series Virtual Chassis and Virtual Chassis Fabric.                                                                                                                         |
| <b>Description</b>              | Compare against another LSP or against an IGP route. To disable dynamic metric tracking, assign a fixed metric value to an LSP. If no metric is assigned, the LSP metric is dynamic and automatically tracks underlying IGP metrics.                                                                                                                                         |
| <b>Options</b>                  | <i>metric</i> —LSP metric value.<br><b>Default:</b> No metric assigned (dynamic)<br><b>Range:</b> 1 through 16,777,215                                                                                                                                                                                                                                                       |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                          |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring Static LSP Metrics on page 259</a></li> </ul>                                                                                                                                                                                                                                                               |

## minimum-bandwidth

|                                 |                                                                                                                                                                                                  |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>minimum-bandwidth <i>bps</i>;</code>                                                                                                                                                       |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i> auto-bandwidth],<br>[edit protocols mpls label-switched-path <i>lsp-name</i> auto-bandwidth] |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 13.2X51-D15 for the QFX Series.                                                                    |
| <b>Description</b>              | Set the minimum bandwidth in bps for an LSP with automatic bandwidth allocation enabled.                                                                                                         |
| <b>Options</b>                  | <i>bps</i> —Minimum bandwidth for the LSP.                                                                                                                                                       |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                              |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring the Maximum and Minimum Bounds of the LSP's Bandwidth on page 289</a></li> </ul>                                                |

## monitor-bandwidth

---

|                                 |                                                                                                                                                                                                  |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | monitor-bandwidth;                                                                                                                                                                               |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i> auto-bandwidth],<br>[edit protocols mpls label-switched-path <i>lsp-name</i> auto-bandwidth] |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 13.2X51-D15 for the QFX Series.                                                                    |
| <b>Description</b>              | Do not automatically adjust bandwidth allocation. However, the maximum average bandwidth utilization is monitored on the LSP, and the information is recorded in the MPLS statistics file.       |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                              |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring Passive Bandwidth Utilization Monitoring on page 292</a></li></ul>                                                               |

## most-fill

---

See [random](#)

## mpls (Protocols)

---

|                                 |                                                                                                                     |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | mpls { ... }                                                                                                        |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols],<br>[edit protocols]                                    |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.                                                                   |
| <b>Description</b>              | Enable MPLS on the router.                                                                                          |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration. |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring MPLS</a></li></ul>                                  |

## mpls-tp-mode

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>mpls-tp-mode;</code><br><code>lsping-channel-type;</code>                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Hierarchy Level</b>          | [edit protocols mpls label-switched-path <i>lsp-name</i> oam],<br>[edit protocols mpls oam]                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 12.1.<br><b>lsping-channel-type</b> statement introduced in Junos OS Release 16.1.                                                                                                                                                                                                                                                                                                                                            |
| <b>Description</b>              | Enable GAL or G-Ach OAM operation without IP encapsulation on a label-switched path (LSP).<br><br>Include this statement at the [edit protocols mpls oam] hierarchy level to enable GAL or G-Ach OAM operation without IP encapsulation on all LSPs in the MPLS network. Include this statement at the [edit protocols mpls label-switched-path <i>lsp-name</i> oam] hierarchy level to enable GAL and G-Ach OAM operation without IP encapsulation on a specific LSP. |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                    |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Example: Configuring the MPLS Transport Profile for OAM on page 147</a></li> </ul>                                                                                                                                                                                                                                                                                                                                |

## mtu-signaling

|                                 |                                                                                                                           |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>mtu-signaling;</code>                                                                                               |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls path-mtu rsvp],<br>[edit protocols mpls path-mtu rsvp]    |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series. |
| <b>Description</b>              | Enable MTU signaling in RSVP.                                                                                             |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.       |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Enabling MTU Signaling in RSVP on page 518</a></li> </ul>            |

## next-hop (Protocols MPLS)

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>next-hop (address   interface-name   address/interface-name);</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Hierarchy Level</b>          | <code>[edit logical-systems logical-system-name protocols mpls static-label-switched-path lsp-name bypass],</code><br><code>[edit logical-systems logical-system-name protocols mpls static-label-switched-path lsp-name ingress],</code><br><code>[edit logical-systems logical-system-name protocols mpls static-label-switched-path lsp-name transit incoming-label],</code><br><code>[edit protocols mpls static-label-switched-path lsp-name bypass],</code><br><code>[edit protocols mpls static-label-switched-path lsp-name ingress],</code><br><code>[edit protocols mpls static-label-switched-path lsp-name transit incoming-label]</code> |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Description</b>              | Location of the next hop to the destination, specified as the IPv4 address of the next hop, the interface name (for point-to-point interfaces only), or the <b>address/interface-name</b> to specify an IP address on an operational interface.                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Options</b>                  | <b>address</b> —IPv4 address of the next-hop router.<br><br><b>interface-name</b> —IP address of the outgoing interface. It must be a point-to-point interface. The name can be a simple or fully qualified domain name.                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Required Privilege Level</b> | <b>routing</b> —To view this statement in the configuration.<br><b>routing-control</b> —To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring the Ingress Router for Static LSPs on page 299</a></li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |

## no-bfd-triggered-local-repair

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | no-bfd-triggered-local-repair;                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> routing-options],<br>[edit routing-options]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 12.2.<br>Statement introduced in Junos OS Release 12.3 for ACX Series routers.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Description</b>              | <p>Disable Bidirectional Forwarding Detection (BFD) sessions to trigger fast reroute (FRR) using MPLS-FRR and loop-free alternates (LFAs). When this statement is configured, no BFD-triggered local repair is supported. However, logical interface down-based local repair is in force.</p> <p>When using this statement to disable local repair, you also must restart routing to ensure proper behavior. To restart routing, include the <b>graceful-restart</b> command for the interior gateway protocol (IGP) used in your configuration. For example, if your IGP is OSPF, include the <b>graceful-restart</b> statement at the [edit protocols ospf] hierarchy level.</p> |
| <b>Default</b>                  | BFD-triggered local repair is the default behavior. The loss of a neighbor results in BFD local repair for all next hops that derive themselves from the base next hop with which the BFD session is established.                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">BFD-Triggered Local Repair for Rapid Convergence on page 385</a></li> <li>• <i>graceful-restart (Enabling Globally)</i></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |

## no-cspf

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | no-cspf;                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls],<br>[edit logical-systems <i>logical-system-name</i> protocols mpls <b>label-switched-path</b> <i>lsp-name</i> ],<br>[edit logical-systems <i>logical-system-name</i> protocols mpls <b>label-switched-path</b> <i>lsp-name</i> ( <b>primary</b>   <b>secondary</b> ) <i>path-name</i> ],<br>[edit protocols mpls],<br>[edit protocols mpls <b>label-switched-path</b> <i>lsp-name</i> ],<br>[edit protocols mpls <b>label-switched-path</b> <i>lsp-name</i> ( <b>primary</b>   <b>secondary</b> ) <i>path-name</i> ]                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Description</b>              | <p>Disable constrained-path LSP computation.</p> <p>An explicit-path LSP is completely configured through operator action. Once configured, it is initiated only along the explicitly specified path.</p> <p>A constrained-path LSP relies on an ingress router to compute the complete path. The ingress router takes into account the following information during the computation:</p> <ul style="list-style-type: none"><li>• Interior gateway protocol (IGP) topology database</li><li>• Link utilization information from extensions in the IGP link-state database</li><li>• Administrative group information from extensions in the IGP link-state database</li><li>• LSP requirements, including bandwidth, hop count, and administrative group</li></ul> <p>Constrained-path LSPs can generally avoid link failures and congested links. They also permit recomputation (therefore, a new path) during topology changes or unsuccessful setup.</p> |
| <b>Default</b>                  | Constrained-path LSP computation enabled.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Disabling Constrained-Path LSP Computation on page 267</a></li><li>• <a href="#">Configuring Explicit-Path LSPs on page 306</a></li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |



## no-decrement-ttl

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | no-decrement-ttl;                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Hierarchy Level</b>          | <p>[edit logical-systems <i>logical-system-name</i> protocols mpls],<br/>         [edit logical-systems <i>logical-system-name</i> protocols mpls <a href="#">label-switched-path</a> <i>lsp-name</i>],<br/>         [edit logical-systems <i>logical-system-name</i> protocols mpls <a href="#">label-switched-path</a> <i>lsp-name</i> (<a href="#">primary</a>   <a href="#">secondary</a>) <i>path-name</i>],<br/>         [edit protocols mpls],<br/>         [edit protocols mpls <a href="#">label-switched-path</a> <i>lsp-name</i>],<br/>         [edit protocols mpls <a href="#">label-switched-path</a> <i>lsp-name</i> (<a href="#">primary</a>   <a href="#">secondary</a>) <i>path-name</i>]</p> |
| <b>Release Information</b>      | <p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Description</b>              | <p>Disable normal time-to-live (TTL) decrementing, which decrements the TTL field in the IP header by 1. This statement decrements the IP TTL by 1 before encapsulating the IP packet within an MPLS packet. When the penultimate router pops off the top label, it does not use the standard write-back procedure of writing the MPLS TTL into the IP TTL field. Therefore, the IP packet is decremented by 1. The ultimate router then decrements the packet by one more for a total cloud appearance of 2, thus hiding the network topology.</p>                                                                                                                                                             |
| <b>Default</b>                  | Normal TTL decrementing enabled; the TTL field value is decremented by 1 as the packet passes through each label-switched router in the LSP.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Disabling Normal TTL Decrementing on page 264</a></li> <li>• <a href="#">no-propagate-ttl on page 1478</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |

## no-install-to-address

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                              |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | no-install-to-address;                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls <a href="#">label-switched-path</a> <i>lsp-name</i> ],<br>[edit logical-systems <i>logical-system-name</i> protocols mpls<br>static-label-switched-path <i>lsp-name</i> ingress],<br>[edit protocols mpls <a href="#">label-switched-path</a> <i>lsp-name</i> ],<br>[edit protocols mpls static-label-switched-path <i>lsp-name</i> ingress] |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                                                                                                                                                        |
| <b>Description</b>              | Prevent the egress router address configured using the <b>to</b> statement from being installed into the inet.3 and inet.0 routing tables.                                                                                                                                                                                                                                                                   |
| <b>Default</b>                  | The egress router address for an LSP is installed into the inet.3 and inet.0 routing tables.                                                                                                                                                                                                                                                                                                                 |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                          |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Preventing the Addition of Egress Router Addresses to Routing Tables on page 241</a></li><li>• <a href="#">to on page 1525</a></li></ul>                                                                                                                                                                                                                 |

## no-load-balance-label-capability

---

|                                 |                                                                                                                                                                           |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | no-load-balance-label-capability;                                                                                                                                         |
| <b>Hierarchy Level</b>          | [edit forwarding-options]                                                                                                                                                 |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 14.1.                                                                                                                            |
| <b>Description</b>              | Disables advertisement of entropy label capability in LDP and RSVP.                                                                                                       |
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                   |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">entropy-label on page 1426</a></li><li>• <a href="#">Configuring the Entropy Label for LSPs on page 246</a></li></ul> |

## no-mcast-replication

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | no-mcast-replication;                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Hierarchy Level</b>          | [edit chassis fpc <i>slot-number</i> pic <i>pic-number</i> ],<br>[edit chassis lcc <i>number</i> fpc <i>slot-number</i> pic <i>pic-number</i> ]                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 11.3.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Description</b>              | For point-to-multipoint LSPs configured on T Series routers, protect the Packet Forwarding Engine (PFE) from bandwidth saturation. When a PFE does not need to replicate traffic, the PFE's bandwidth is less likely to become saturated. When you include the <b>no-mcast-replication</b> statement, the PFE is forced to be a leaf node in the binary tree. Leaf nodes, unlike branch nodes, do not replicate traffic in the process of forwarding traffic. Because leaf nodes have no children, they do not need to replicate traffic, and thus are less likely to become saturated with traffic. |
| <b>Default</b>                  | If you omit the <b>no-mcast-replication</b> statement, the PFE can become a branch node or a leaf node. When the PFE becomes a branch node, the PFE must replicate traffic.                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Point-to-Multipoint LSPs Overview on page 309</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |

## no-propagate-ttl

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | no-propagate-ttl;                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls],<br>[edit protocols mpls]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Description</b>              | <p>Disable normal time-to-live (TTL) decrementing. You configure this statement once per router, and it affects all RSVP-signaled or LDP-signaled LSPs. When this router acts as an ingress router for an LSP, it pushes an MPLS header with a TTL value of 255, regardless of the IP packet TTL. When the router acts as the penultimate router, it pops the MPLS header without writing the MPLS TTL into the IP packet.</p> <p>When you add the <b>no-propagate-ttl</b> statement to the configuration or delete it from the configuration, the effect takes place immediately. There is no need to clear existing RSVP LSPs or LDP sessions.</p> |
| <b>Default</b>                  | Normal TTL decrementing enabled; the TTL field value is decremented by 1 as the packet passes through each label-switched router in the LSP.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Disabling Normal TTL Decrementing on page 264</a></li><li>• <i>Example: Diagnosing Networking Problems Related to Layer 3 VPNs by Disabling TTL Decrementing</i> (on <i>Layer 3 VPNs Feature Guide for Routing Devices</i> or in the <i>Junos VPNs Configuration Guide</i>)</li><li>• <a href="#">no-decrement-ttl on page 1475</a></li></ul>                                                                                                                                                                                                                                                    |

## no-transit-statistics

|                                 |                                                                                                                                                                                      |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | no-transit-statistics;                                                                                                                                                               |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls <a href="#">statistics</a> ],<br>[edit protocols mpls <a href="#">statistics</a> ]                                   |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 10.2.                                                                                                                                       |
| <b>Description</b>              | Disables the collection of MPLS statistics for LSPs transiting the router. You cannot configure this statement and the <b>transit-statistics-polling</b> statement at the same time. |
| <b>Required Privilege Level</b> | routing and trace—To view this statement in the configuration.<br>routing-control and trace-control—To add this statement to the configuration.                                      |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring MPLS to Gather Statistics on page 371</a></li> <li>• <a href="#">statistics on page 1519</a></li> </ul>             |

## no-trap

|                                 |                                                                                                                                                                                                                                                                                        |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | no-trap {<br>mpls-lsp-traps;<br>rfc-3812-traps;<br>}                                                                                                                                                                                                                                   |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls log-updown],<br>[edit protocols mpls log-updown]                                                                                                                                                                       |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>The <b>mpls-lsp-traps</b> and <b>rfc-3812-traps</b> options added in Junos OS Release 9.0.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                |
| <b>Description</b>              | Prevent the transmission of SNMP traps.                                                                                                                                                                                                                                                |
| <b>Options</b>                  | <p><b>mpls-lsp-traps</b>—Block the MPLS LSP traps defined in the <b>rfc-3812-traps</b>, but allows the <b>rfc3812.mib</b> traps.</p> <p><b>rfc-3812-traps</b>—Block the traps defined in the <b>rfc3812.mib</b>, but allows the MPLS LSP traps defined in the <b>jnx-mpls.mib</b>.</p> |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                    |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring System Log Messages and SNMP Traps for LSPs on page 372</a></li> <li>• <i>Network Management Administration Guide</i></li> <li>• <a href="#">traceoptions (Protocols MPLS) on page 1526</a></li> </ul>                |

## node-protection (Static LSP)

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>node-protection bypass-name <i>name</i> next-next-label <i>label</i>;</code>                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls static-label-switched-path <i>lsp-name</i> ingress],<br>[edit logical-systems <i>logical-system-name</i> protocols mpls static-label-switched-path <i>lsp-name</i> transit <i>incoming-label</i> ],<br>[edit protocols mpls static-label-switched-path <i>lsp-name</i> ingress],<br>[edit protocols mpls static-label-switched-path <i>lsp-name</i> transit <i>incoming-label</i> ] |
| <b>Release Information</b>      | Statement introduced in JUNOS Release 10.1.                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Description</b>              | Enable node protection on the specified static bypass LSP. Node protection ensures that traffic from an LSP traversing a neighboring router can continue to reach its destination even if the neighboring router fails.                                                                                                                                                                                                                             |
| <b>Default</b>                  | Node protection is disabled.                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Options</b>                  | <code>bypass-name <i>name</i></code> —Bypass LSP name.<br><br><code>next-next-label <i>label</i></code> —Bypass LSP name.                                                                                                                                                                                                                                                                                                                           |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                 |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring Static LSPs on page 299</a></li></ul>                                                                                                                                                                                                                                                                                                                                               |

## normalization

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>normalization {     failover-normalization;     no-incremental-normalize;     normalization-retry-duration <i>seconds</i>;     normalization-retry-limits <i>number</i>;     normalize-interval <i>seconds</i>; }</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Hierarchy Level</b>          | [edit protocols mpls container-label-switched-path <i>lsp-name</i> splitting-merging]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 14.2.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Description</b>              | Perform normalization.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Options</b>                  | <p><b>failover-normalization</b>—Enable the ingress router to pro-actively normalize or re-distribute traffic when a link or node failure happens on a member LSP. A member LSP can go down between two scheduled normalization events because of a link-failure or pre-emption.<br/><b>Default:</b> Disabled</p> <p><b>no-incremental-normalize</b>—Disables automatic switchover by the ingress router to a new instance of the container LSP until the desired demand is satisfied, although the given number of LSPs can be successfully signaled such that the new aggregate bandwidth value exceeds the old aggregate bandwidth value.<br/><b>Default:</b> False (disabled)</p> <p><b>normalization-retry-duration <i>seconds</i></b>—Specifies the duration before which the ingress router performs a normalization reattempt when the previous normalization has not been successful. Normalization is done until a sufficient number of LSPs come up with an aggregate bandwidth that is more than the current aggregate or desired bandwidth.<br/><b>Default:</b> 30 seconds</p> <p><b>normalization-retry-limits <i>number</i></b>—Specifies the maximum number of times the ingress router performs normalization reattempts until a sufficient number of LSPs come up successfully with new bandwidth values.<br/><b>Default:</b> 1</p> <p><b>normalize-interval <i>seconds</i></b>—Specifies the duration between two normalization events.<br/><b>Range:</b> 21600 seconds through 6 hours<br/><b>Default:</b> 21600 seconds</p> |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">splitting-merging on page 1513</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |

## oam (Protocols MPLS)

```
Syntax oam {
    bfd-liveness-detection{
        failure-action teardown;
        minimum-interval milliseconds;
        minimum-receive-interval milliseconds;
        minimum-transmit-interval milliseconds;
        multiplier detection-time-multiplier;
    }
    lsp-ping-interval seconds;
    mpls-tp-mode;
    performance-monitoring {
        querier {
            loss {
                traffic-class tc-value {
                    query-interval milliseconds;
                    measurement-quantity bytes|packets;
                    average-sample-size sample size;
                    loss-threshold loss threshold value;
                    loss-threshold-window number of samples for loss threshold;
                }
            }
            delay {
                traffic-class tc-value {
                    query-interval milliseconds;
                    padding-size size;
                    average-sample-size sample size;
                    rtt-delay-threshold rtt threshold value;
                    twcd-delay-threshold twcd threshold value;
                }
            }
            loss-delay {
                traffic-class tc-value {
                    query-interval milliseconds;
                    measurement-quantity bytes|packets;
                    padding-size size;
                    average-sample-size sample size;
                    loss-threshold loss threshold value;
                    loss-threshold-window number of samples for loss threshold;
                    rtt-delay-threshold rtt threshold value;
                    twcd-delay-threshold twcd threshold value;
                }
            }
        }
    }
    responder {
        loss {
            min-query-interval milliseconds;
        }
        delay {
            min-query-interval milliseconds;
        }
    }
}
```



}

**Hierarchy Level** [edit protocols mpls],  
 [edit protocols mpls [label-switched-path](#) *lsp-name*]  
 [edit protocols mpls [label-switched-path](#) *lsp-name* primary *path-name*]

**Release Information** Statement introduced in Junos OS Release 7.6.  
**lsp-ping-interval** option introduced in Junos OS Release 9.4.  
 Statement introduced in Junos OS Release 13.2X51-D15 for the QFX Series.  
 Statement introduced in Junos OS Release 14.1X53-D30 for the QFX Series Virtual Chassis and Virtual Chassis Fabric.  
**performance-monitoring** configuration statement introduced in Junos OS Release 15.1.

**Description** Enable Operation, Administration, and Maintenance (OAM) for RSVP-signaled LSPs.

**Options** **lsp-ping-interval** *seconds*—Specify the duration of the LSP ping interval in seconds. To issue a ping on an RSVP-signaled LSP, use the **ping mpls rsvp** command.

The remaining statements are explained separately.

**Required Privilege Level** routing—To view this statement in the configuration.  
 routing-control—To add this statement to the configuration.

**Related Documentation** • [Configuring BFD for MPLS IPv4 LSPs on page 382](#)

## optimize-adaptive-teardown

**Syntax** optimize-adaptive-teardown {  
     p2p:  
 }

**Hierarchy Level** [edit protocols mpls]

**Release Information** Statement introduced in Junos OS Release 15.1R1.

**Description** Make use of a new feedback mechanism from TAG library which relies on RPD infrastructure to decide when all the routes using the old LSP instance have fully shifted to the new LSP instance after MBB switchover. When this statement is configured, the **optimize-hold-dead-delay** statement, which delays the teardown of the old LSP instance after MBB switchover, is ignored.

**Options** **p2p**—This is the only option. Only point-to-point LSPs configured in the system will be affected.

**Required Privilege Level** routing—To view this statement in the configuration.  
 routing-control—To add this statement to the configuration.

**Related Documentation** • [Optimizing Signaled LSPs on page 280](#)  
 • [Achieving a Make-Before-Break, Hitless Switchover for LSPs on page 275](#)

## optimize-aggressive

---

|                                 |                                                                                                                                                                                                                                                                                                            |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | optimize-aggressive;                                                                                                                                                                                                                                                                                       |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls],<br>[edit protocols mpls]                                                                                                                                                                                                                 |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                                                  |
| <b>Description</b>              | If enabled, the LSP reoptimization is based solely on the IGP metric. The reoptimization process ignores the available bandwidth ratio calculations, the least-fill 10 percent congestion improvement rule, and the hop-counts rule. This statement makes reoptimization more aggressive than the default. |
| <b>Default</b>                  | Aggressive optimization is disabled.                                                                                                                                                                                                                                                                       |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                        |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Optimizing Signaled LSPs on page 280</a></li></ul>                                                                                                                                                                                                     |

## optimize-hold-dead-delay

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>optimized-hold-dead-delay <i>seconds</i>;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls],<br>[edit logical-systems <i>logical-system-name</i> protocols mpls label-switch-path <i>lsp-name</i> ],<br>[edit protocols mpls],<br>[edit protocols mpls label-switch-path <i>lsp-name</i> ]                                                                                                                                                                                                                                                                                                                    |
| <b>Description</b>              | Allows you to specify the amount of time to delay the tear down of old paths after the router has switched traffic to new optimized paths. You only need to configure this statement on routers acting as the ingress for the affected LSPs (you do not need to configure this statement on transit or egress routers). The specified delay helps to ensure that old paths are not torn down before all routes have been switched over to the new optimized paths. This delay timer starts when the timer specified by the <b>optimize-switchover-dealy</b> statement has elapsed. |
| <b>Options</b>                  | <b><i>seconds</i></b> —Configure the time in seconds to wait before tearing down the old paths that were in use prior to the last LSP optimization.<br><b>Default:</b> 60 seconds<br><b>Range:</b> 0 through 65,535 seconds                                                                                                                                                                                                                                                                                                                                                        |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Optimizing Signaled LSPs on page 280</a></li> <li>• <a href="#">optimize-switchover-delay on page 1486</a></li> <li>• <a href="#">optimize-timer on page 1487</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                  |

## optimize-switchover-delay

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                  |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>optimize-switchover-delay <i>seconds</i>;</code>                                                                                                                                                                                                                                                                                                                           |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls],<br>[edit protocols mpls]                                                                                                                                                                                                                                                                                       |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 11.1R1.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                                                                                                                         |
| <b>Description</b>              | Delays the switch over of LSPs to newly optimized paths. You only need to configure this statement on routers acting as the ingress for the affected LSPs (you do not need to configure this statement on transit or egress routers). The specified delay helps to ensure that the new optimized paths have been established before traffic is switched over from the old paths. |
| <b>Options</b>                  | <b><i>seconds</i></b> —Configure the time in seconds to wait before switching LSPs to newly optimized paths.<br><b>Default:</b> 1 second<br><b>Range:</b> 1 through 900 seconds                                                                                                                                                                                                  |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                              |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Optimizing Signaled LSPs on page 280</a></li><li>• <a href="#">optimize-hold-dead-delay on page 1485</a></li><li>• <a href="#">optimize-timer on page 1487</a></li></ul>                                                                                                                                                     |

## optimize-timer (Protocols MPLS)

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>optimize-timer <i>seconds</i>;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Hierarchy Level</b>          | <p>[edit logical-systems <i>logical-system-name</i> protocols mpls],<br/> [edit logical-systems <i>logical-system-name</i> protocols mpls <b>label-switched-path</b> <i>lsp-name</i>],<br/> [edit logical-systems <i>logical-system-name</i> protocols mpls <b>label-switched-path</b> <i>lsp-name</i> (<b>primary</b>   <b>secondary</b>) <i>path-name</i>],<br/> [edit protocols mpls],<br/> [edit protocols mpls <b>label-switched-path</b> <i>lsp-name</i>],<br/> [edit protocols mpls <b>label-switched-path</b> <i>lsp-name</i> (<b>primary</b>   <b>secondary</b>) <i>path-name</i>]</p>                                                                                                                                                                                                                                                               |
| <b>Release Information</b>      | <p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 13.2X51-D15 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 14.1X53-D30 for the QFX Series Virtual Chassis and Virtual Chassis Fabric.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Description</b>              | <p>Enable periodic reoptimization of an LSP that is already set up. If topology changes occur, an existing path might become suboptimal, and a subsequent recomputation might be able to determine a better path. This feature is useful only on LSPs for which constrained-path computation is enabled; that is, for which the <b>no-cspf</b> statement is not configured. Also, you only need to configure this statement on routers acting as the ingress for the affected LSPs (you do not need to configure this statement on transit or egress routers).</p> <p>To avoid extensive resource consumption that might result because of frequent path recomputations, or to avoid destabilizing the network as a result of constantly changing LSPs, we recommend that you either leave the timer value sufficiently large or disable the timer value.</p> |
| <b>Default</b>                  | The optimize timer is disabled.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Options</b>                  | <p><b><i>seconds</i></b>—Length of the optimize timer, in seconds.</p> <p><b>Range:</b> 0 through 65,535 seconds</p> <p><b>Default:</b> 0 seconds (the optimize timer is disabled)</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li><a href="#">Optimizing Signaled LSPs on page 280</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |

## p2mp (Protocols MPLS)

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                              |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>p2mp p2mp-lsp-name;</code>                                                                                                                                                                                                                                                                                                                                                             |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i> ],<br>[edit protocols mpls label-switched-path <i>lsp-name</i> ]                                                                                                                                                                                                                         |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 13.2X51-D15 for the QFX Series.<br>Statement introduced in Junos OS Release 14.1X53-D30 for the QFX Series Virtual Chassis and Virtual Chassis Fabric.                                                                                                                                         |
| <b>Description</b>              | Specify an LSP as either a point-to-multipoint LSP or as a branch LSP of a point-to-multipoint LSP by specifying the point-to-multipoint LSP path name.                                                                                                                                                                                                                                      |
| <b>Options</b>                  | <b><i>p2mp-lsp-name</i></b> —Name of the point-to-multipoint LSP path that identifies the sequence of nodes that form the point-to-multipoint LSP. The name can contain up to 32 characters and can include letters, digits, periods, and hyphens. To include other characters or use a longer name, enclose the name in quotation marks. The name must be unique within the ingress router. |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                          |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring the Primary Point-to-Multipoint LSP on page 311</a></li></ul>                                                                                                                                                                                                                                                                |

## p2mp-lsp-next-hop

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>p2mp-lsp-next-hop {     metric <i>metric</i>;     preference <i>preference</i>; }</pre>                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Hierarchy Level</b>          | <p>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> routing-options static route <i>destination-prefix</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> routing-options static route <i>destination-prefix</i>],</p> <p>[edit routing-instances <i>routing-instance-name</i> routing-options static route <i>destination-prefix</i>].</p> <p>[edit routing-options static route <i>destination-prefix</i>]</p> |
| <b>Release Information</b>      | <p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 12.3 for ACX Series routers.</p>                                                                                                                                                                                                                                                                                                                                      |
| <b>Description</b>              | <p>Specify a point-to-multipoint LSP as the next hop for a static route, and configure an independent metric or preference on that next-hop LSP.</p> <p>The remaining statements are explained separately.</p>                                                                                                                                                                                                                                                             |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                             |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring Static Unicast Routes for Point-to-Multipoint LSPs on page 305</a></li> <li>• <a href="#">Example: Configuring a Collection of Paths to Create an RSVP-Signaled Point-to-Multipoint LSP on page 313</a></li> <li>• <a href="#">Example: Configuring an RSVP-Signaled Point-to-Multipoint LSP on Logical Systems</a></li> </ul>                                                                            |

## path (Protocols MPLS)

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>path <i>path-name</i> {<br/>    (<i>address</i>   <i>hostname</i>) &lt;strict   loose&gt;;<br/>}</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls],<br>[edit protocols mpls]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 13.2X51-D15 for the QFX Series.<br>Statement introduced in Junos OS Release 14.1X53-D30 for the QFX Series Virtual Chassis and Virtual Chassis Fabric.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Description</b>              | <p>Create a named path and optionally specify the sequence of explicit routers that form the path.</p> <p>You must include this statement when configuring explicit LSPs.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Options</b>                  | <p><b>address</b>—IP address of each transit router in the LSP. You must specify the address or hostname of each transit router, although you do not need to list each transit router if its type is <b>loose</b>. As an option, you can include the ingress and egress routers in the path. Specify the addresses in order, starting with the ingress router (optional) or the first transit router, and continuing sequentially along the path until reaching the egress router (optional) or the router immediately before the egress router.</p> <p><b>Default:</b> If you do not specify any routers explicitly, no routing limitations are imposed on the LSP.</p> <p><b>hostname</b>—See <b>address</b>.</p> <p><b>Default:</b> If you do not specify any routers explicitly, no routing limitations are imposed on the LSP.</p> <p><b>loose</b>—(Optional) Indicate that the next address in the <b>path</b> statement is a loose link. This means that the LSP can traverse through other routers before reaching this router.</p> <p><b>Default:</b> <b>strict</b></p> <p><b>path-name</b>—Name that identifies the sequence of nodes that form an LSP. The name can contain up to 32 characters and can include letters, digits, periods, and hyphens. To include other characters or use a longer name, enclose the name in quotation marks. The name must be unique within the ingress router.</p> <p><b>strict</b>—(Optional) Indicate that the LSP must go to the next address specified in the <b>path</b> statement without traversing other nodes. This is the default.</p> |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Creating Named Paths on page 60</a></li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |



---

## path-mtu

---

|                                 |                                                                                                                                                   |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>path-mtu {<br/>    allow-fragmentation;<br/>    rsvp {<br/>        mtu-signaling;<br/>    }<br/>}</pre>                                      |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls],<br>[edit protocols mpls]                                                        |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                         |
| <b>Description</b>              | Configure MTU options for MPLS paths, including packet fragmentation and MTU signaling.<br><br>The remaining statements are explained separately. |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                               |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring MTU Signaling in RSVP on page 518</a></li></ul>                                   |

## per-prefix-label

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>per-prefix-label;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Hierarchy Level</b>          | <p>[edit logical-systems <i>logical-system-name</i> protocols bgp family inet labeled-unicast],<br/>         [edit logical-systems <i>logical-system-name</i> protocols bgp group <i>group-name</i> family inet labeled-unicast],<br/>         [edit protocols bgp family inet labeled-unicast],<br/>         [edit protocols bgp group <i>group-name</i> family inet labeled-unicast],<br/>         [edit routing-instances <i>instance-name</i> logical-systems <i>logical-system-name</i> protocols bgp family inet labeled-unicast],<br/>         [edit routing-instances <i>instance-name</i> logical-systems <i>logical-system-name</i> protocols bgp group <i>group-name</i> family inet labeled-unicast],<br/>         [edit routing-instances <i>instance-name</i> protocols bgp family inet labeled-unicast],<br/>         [edit routing-instances <i>instance-name</i> protocols bgp group <i>group-name</i> family inet labeled-unicast]</p>                                                                                                                                                                                                                                                                             |
| <b>Release Information</b>      | <p>Statement introduced in Junos OS Release 12.1x48 for PTX Series Packet Transport Routers.</p> <p>Statement introduced in Junos OS Release 12.3 for M Series, T Series, and MX Series routers.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Description</b>              | <p>Allocate a unique label for each prefix. The <b>per-prefix-label</b> statement helps minimize packet loss in most deployments.</p> <p>Although allocating a label for each prefix is not generally ideal for scaling, it is assumed that a small number of labels are used for BGP labeled-unicast. When labeled BGP is used to set up transport label-switched paths (LSPs), the common case is that each prefix has a unique next hop. Thus, the use of per-prefix labels does not have an adverse scaling impact. On the contrary, the use of per-prefix labels reduces churn in the network when multipath load balancing is enabled for IPv4 labeled-unicast, and a subset of the paths are withdrawn for some reason.</p> <p>The advantage of per-prefix labeling is that the advertised upstream label is more stable during network changes. That is, if the downstream label changes, the advertised upstream label remains the same under most scenarios. This way, the upstream router is isolated from the downstream network change, and the overall network is more stable. The greater stability of the advertised upstream label helps to reduce traffic loss during many different network change scenarios.</p> |
| <b>Default</b>                  | By default, label allocation is per next-hop router.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">MPLS Label Allocation on page 26</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |

## performance-monitoring (Protocols MPLS)

|                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|----------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | <pre> performance-monitoring {   querier {     delay {       traffic-class tc-value {         average-sample-size sample size;         padding-size size;         query-interval milliseconds;         rtt-delay-threshold rtt threshold value;         twcd-delay-threshold twcd threshold value;       }     }     loss {       traffic-class tc-value {         average-sample-size sample size;         loss-threshold loss threshold value;         loss-threshold-window number of samples for loss threshold;         measurement-quantity bytes packets;         query-interval milliseconds;       }     }     loss-delay {       traffic-class tc-value {         average-sample-size sample size;         loss-threshold loss threshold value;         loss-threshold-window number of samples for loss threshold;         measurement-quantity bytes packets;         padding-size size;         query-interval milliseconds;         rtt-delay-threshold rtt threshold value;         twcd-delay-threshold twcd threshold value;       }     }   }   responder {     delay {       min-query-interval milliseconds;     }     loss {       min-query-interval milliseconds;     }   } } </pre> |
| <b>Hierarchy Level</b>     | <pre> [edit protocols mpls oam], [edit protocols mpls label-switched-path lsp-name oam], [edit protocols mpls label-switched-path lsp-name primary path-name oam], [edit protocols mpls label-switched-path lsp-name secondary path-name oam] </pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Release Information</b> | Statement introduced in Junos OS Release 15.1.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Description</b>         | Configure performance monitoring options.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |

The remaining statements are explained separately.

**Required Privilege Level** routing—To view this statement in the configuration.  
routing-control—To add this statement to the configuration.

**Related Documentation** •

---

## policing (Protocols MPLS)

---

**Syntax**     policing {  
                 filter *filter-name*;  
                 no-auto-policing;  
                 }

**Hierarchy Level** [edit logical-systems *logical-system-name* protocols mpls label-switched-path *lsp-name*],  
[edit logical-systems *logical-system-name* protocols mpls static-label-switched-path *lsp-name* ingress],  
[edit protocols mpls label-switched-path *lsp-name*],  
[edit protocols mpls static-label-switched-path *lsp-name* ingress]

**Release Information** Statement introduced before Junos OS Release 7.4.  
Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

**Description** Specify the policing filter for the LSP.

**Options**     filter *filter-name*—Specify the name of the policing filter.  
  
                 no-auto-policing—Disable automatic policing on this LSP.

**Required Privilege Level** routing—To view this statement in the configuration.  
routing-control—To add this statement to the configuration.

**Related Documentation** • [Configuring Policers for LSPs on page 375](#)  
• [auto-policing on page 1405](#)

## pop

---

|                                 |                                                                                                                                                                                                                                                    |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | pop;                                                                                                                                                                                                                                               |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls<br>static-label-switched-path <i>lsp-name</i> transit <i>incoming-label</i> ],<br>[edit protocols mpls static-label-switched-path <i>lsp-name</i> transit <i>incoming-label</i> ]  |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                          |
| <b>Description</b>              | Remove the label from the top of the label stack. If there is another label in the stack, that label becomes the label at the top of the label stack. Otherwise, the packet is forwarded as a native protocol packet (typically, as an IP packet). |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring the Intermediate (Transit) and Egress Routers for Static LSPs on page 302</a></li> <li>• <a href="#">swap on page 1520</a></li> </ul>                                             |

## preference (Protocols MPLS)

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>preference <i>preference</i>;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Hierarchy Level</b>          | <p>[edit logical-systems <i>logical-system-name</i> protocols mpls],<br/> [edit logical-systems <i>logical-system-name</i> protocols mpls <b>label-switched-path</b> <i>lsp-name</i>],<br/> [edit logical-systems <i>logical-system-name</i> protocols mpls <b>label-switched-path</b> <i>lsp-name</i> (<b>primary</b>   <b>secondary</b>) <i>path-name</i>],<br/> [edit logical-systems <i>logical-system-name</i> protocols mpls static-label-switched-path <i>lsp-name</i> ingress],<br/> [edit protocols mpls],<br/> [edit protocols mpls <b>label-switched-path</b> <i>lsp-name</i>],<br/> [edit protocols mpls <b>label-switched-path</b> <i>lsp-name</i> (<b>primary</b>   <b>secondary</b>) <i>path-name</i>],<br/> [edit protocols mpls static-label-switched-path <i>lsp-name</i> ingress]</p> |
| <b>Release Information</b>      | <p>Statement introduced before Junos OS Release 7.4.<br/> Statement introduced in Junos OS Release 12.3X50 for the QFX Series.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Description</b>              | <p>Preference for the route.</p> <p>You can optionally configure multiple LSPs between the same pair of ingress and egress routers. This is useful for balancing the load among the LSPs because all LSPs, by default, have the same preference level. To prefer one LSP over another, set different preference levels for individual LSPs. The LSP with the lowest preference value is used. The default preference for LSPs is lower (more preferred) than all learned routes except direct interface routes.</p>                                                                                                                                                                                                                                                                                      |
| <b>Options</b>                  | <p><b>preference</b>—Preference to assign to the route. A route with a lower preference value is preferred.</p> <p><b>Range:</b> 1 through 255</p> <p><b>Default:</b> 5 for static MPLS LSPs, 7 for RSVP MPLS LSPs, 9 for LDP MPLS LSPs</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.<br/> routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring Preference Values for LSPs on page 271</a></li> <li>• <a href="#">Configuring the Ingress Router for Static LSPs on page 299</a></li> <li>• <a href="#">Configuring the Intermediate (Transit) and Egress Routers for Static LSPs on page 302</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |

## primary (Protocols MPLS)

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre> primary <i>path-name</i> {     adaptive;     admin-group {         exclude [ <i>group-names</i> ];         include-all [ <i>group-names</i> ];         include-any [ <i>group-names</i> ];     }     bandwidth <i>bps</i>;     class-of-service <i>cos-value</i>;     hop-limit <i>number</i>;     no-cspf;     no-decrement-ttl;     optimize-timer <i>seconds</i>;     preference <i>preference</i>;     priority <i>setup-priority reservation-priority</i>;     (record   no-record);     select (manual   unconditional);     standby; } </pre> |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i> ],<br>[edit protocols mpls label-switched-path <i>lsp-name</i> ]                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Description</b>              | <p>Specify the primary path to use for an LSP. You can configure only one primary path.</p> <p>You can optionally specify preference, CoS, and bandwidth values for the primary path, which override any equivalent values that you configure for the LSP (at the <b>[edit mpls label-switched-path <i>lsp-name</i>]</b> hierarchy level).</p>                                                                                                                                                                                                             |
| <b>Options</b>                  | <p><b><i>path-name</i></b>—Name of a path that you created with the <b>path</b> statement.</p> <p>The remaining statements are explained separately.</p>                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring Primary and Secondary LSPs on page 242</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                     |

## priority (Protocols MPLS)

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>priority setup-priority reservation-priority;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Hierarchy Level</b>          | <code>[edit logical-systems <i>logical-system-name</i> protocols mpls],</code><br><code>[edit logical-systems <i>logical-system-name</i> protocols mpls <i>label-switched-path lsp-name</i>],</code><br><code>[edit logical-systems <i>logical-system-name</i> protocols mpls <i>label-switched-path lsp-name</i></code><br><code>  (<i>primary</i>   <i>secondary</i>) <i>path-name</i>],</code><br><code>[edit protocols mpls],</code><br><code>[edit protocols mpls <i>label-switched-path lsp-name</i>],</code><br><code>[edit protocols mpls <i>label-switched-path lsp-name</i> (<i>primary</i>   <i>secondary</i>) <i>path-name</i>]</code>                |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Description</b>              | Configure the setup priority and reservation priority for an LSP. If insufficient link bandwidth is available during session establishment, the setup priority is compared with other setup priorities for established sessions on the link to determine whether some of them should be preempted to accommodate the new session. Sessions with lower hold priorities are preempted.                                                                                                                                                                                                                                                                              |
| <b>Options</b>                  | <p><b><i>reservation-priority</i></b>—Reservation priority, used to keep a reservation after it has been set up. A smaller number has a higher priority. The priority must be greater than or equal to the setup priority to prevent preemption loops.</p> <p><b>Range:</b> 0 through 7, where 0 is the highest and 7 is the lowest priority.</p> <p><b>Default:</b> 0 (Once the session is set up, no other session can preempt it.)</p> <p><b><i>setup-priority</i></b>—Setup priority.</p> <p><b>Range:</b> 0 through 7, where 0 is the highest and 7 is the lowest priority.</p> <p><b>Default:</b> 7 (The session cannot preempt any existing sessions.)</p> |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring Priority and Preemption for LSPs on page 280</a></li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |



## protection-revert-time

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>protection-revert-time <i>seconds</i>;</code>                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls interface <i>interface-name</i> static],<br>[edit protocols mpls interface <i>interface-name</i> static]                                                                                                                                                                                                                                                                   |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 10.1.                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Description</b>              | <p>Specify the amount of time (in seconds) that a static LSP must wait before traffic reverts from the bypass path to the original path.</p> <p>If you have configured a value of 0 seconds for the <b>protection-revert-time</b> statement and traffic is switched to the bypass path, the traffic remains on that path indefinitely. It is never switched back to the original path unless the bypass path is down or you intervene.</p> |
| <b>Options</b>                  | <p><b><i>seconds</i></b>—Time in seconds.</p> <p><b>Range:</b> 0 through 65,535 seconds</p> <p><b>Default:</b> 5 seconds</p>                                                                                                                                                                                                                                                                                                               |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                             |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring Static LSPs on page 299</a></li> </ul>                                                                                                                                                                                                                                                                                                                                    |

## push

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                     |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>push out-label;</code>                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls static-label-switched-path <i>lsp-name</i> bypass],<br>[edit logical-systems <i>logical-system-name</i> protocols mpls static-label-switched-path <i>lsp-name</i> ingress],<br>[edit protocols mpls static-label-switched-path <i>lsp-name</i> bypass],<br>[edit protocols mpls static-label-switched-path <i>lsp-name</i> ingress] |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                                                                                                                                           |
| <b>Description</b>              | Add a new label to the top of the label stack. This statement is used to configure static LSPs at ingress routers and to configure bypass LSPs for static LSPs.                                                                                                                                                                                                                                     |
| <b>Options</b>                  | <b>out-label</b> —Manually assigned outgoing label value.<br><b>Range:</b> 0 through 1,048,575.                                                                                                                                                                                                                                                                                                     |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                 |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">pop on page 1495</a></li><li>• <a href="#">swap on page 1520</a></li><li>• <a href="#">Configuring the Ingress Router for Static LSPs on page 299</a></li></ul>                                                                                                                                                                                 |

## random

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | (random   least-fill   most-fill);                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i> ],<br>[edit protocols mpls label-switched-path <i>lsp-name</i> ]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Description</b>              | <p>Configure the preferred path when several equal-cost candidate paths to a destination exist, and prefer the path with the highest available bandwidth (with the largest minimum available bandwidth ratio). The available bandwidth ratio of a link is the available bandwidth on a link divided by the maximum reservable bandwidth on the link.</p> <ul style="list-style-type: none"> <li>• <b>least-fill</b>—Prefer the path with the most available bandwidth (with the largest available bandwidth ratio).</li> <li>• <b>most-fill</b>—Prefer the path with the least available bandwidth (with the minimum available bandwidth ratio). The minimum available bandwidth ratio of a path is the smallest available bandwidth ratio belonging to any of the links in the path.</li> <li>• <b>random</b>—Choose the path at random.</li> </ul> |
| <b>Default</b>                  | random                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring CSPF Tie Breaking on page 260</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |

## record

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | (record   no-record);                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls],<br>[edit logical-systems <i>logical-system-name</i> protocols mpls <a href="#">label-switched-path</a> <i>lsp-name</i> ],<br>[edit logical-systems <i>logical-system-name</i> protocols mpls <a href="#">label-switched-path</a> ( <a href="#">primary</a>   <a href="#">secondary</a> ) <i>path-name</i> ],<br>[edit protocols mpls],<br>[edit protocols mpls <a href="#">label-switched-path</a> <i>lsp-name</i> ],<br>[edit protocols mpls <a href="#">label-switched-path</a> <i>lsp-name</i> ( <a href="#">primary</a>   <a href="#">secondary</a> ) <i>path-name</i> ] |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Description</b>              | Specify whether an LSP should actively record the routes in the path. Recording routes requires that all transit routers support the RSVP Record Route object. Recording routes can be useful for diagnostics and loop detection.                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Default</b>                  | Record routes.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Disabling Path Route Recording by LSPs on page 272</a></li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |

## retry-limit

|                                 |                                                                                                                                                                                                                                                                                    |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>retry-limit <i>number</i>;</code>                                                                                                                                                                                                                                            |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i> ],<br>[edit protocols mpls label-switched-path <i>lsp-name</i> ],                                                                                                              |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                          |
| <b>Description</b>              | Maximum number of times the ingress router tries to establish the primary path. This counter is reset each time a primary path is created successfully. When the limit is exceeded, no more connection attempts are made. Intervention is then required to restart the connection. |
| <b>Options</b>                  | <b><i>number</i></b> —Maximum number of tries to establish the primary path.<br><b>Range:</b> 0 through 10,000<br><b>Default:</b> 0 (The ingress node never stops trying to establish the primary path.)                                                                           |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring the Connection Between Ingress and Egress Routers on page 257</a></li> </ul>                                                                                                                                      |

## retry-timer

|                                 |                                                                                                                                                                      |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>retry-timer <i>seconds</i>;</code>                                                                                                                             |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i> ],<br>[edit protocols mpls label-switched-path <i>lsp-name</i> ] |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                            |
| <b>Description</b>              | Amount of time the ingress router waits between attempts to establish the primary path.                                                                              |
| <b>Options</b>                  | <b><i>seconds</i></b> —Amount of time between attempts to connect to the primary path.<br><b>Range:</b> 1 through 600 seconds<br><b>Default:</b> 30 seconds          |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                  |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring the Connection Between Ingress and Egress Routers on page 257</a></li> </ul>                        |

## revert-timer

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>revert-timer seconds;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls],<br>[edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i> ],<br>[edit protocols mpls],<br>[edit protocols mpls label-switched-path <i>lsp-name</i> ]                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>BFD behavior modified in Junos OS Release 9.0.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Description</b>              | <p>Specify the amount of time (in seconds) that an LSP must wait before traffic reverts to a primary path. If during this time the primary path experiences any connectivity problem or stability problem, the timer is restarted.</p> <p>If you have configured BFD on the LSP, the Junos OS waits until the BFD session is restored before starting the revert timer counter.</p> <p>If you have configured a value of 0 seconds for the <b>revert-timer</b> statement and traffic is switched to the secondary path, the traffic remains on that path indefinitely. It is never switched back to the primary path unless you intervene.</p> |
| <b>Options</b>                  | <p><b>seconds</b>—Time in seconds.</p> <p><b>Range:</b> 0 through 65,535 seconds</p> <p><b>Default:</b> 60 seconds</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring the Revert Timer for LSPs on page 243</a></li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |

## responder (performance-monitoring)

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre> responder {   delay {     min-query-interval <i>milliseconds</i>;   }   loss {     min-query-interval <i>milliseconds</i>;   } } </pre>                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Hierarchy Level</b>          | <p>[edit protocols mpls <a href="#">oam performance-monitoring</a>],</p> <p>[edit protocols mpls <a href="#">label-switched-path</a> <i>lsp-name</i> <a href="#">oam performance-monitoring</a>],</p> <p>[edit protocols mpls <a href="#">label-switched-path</a> <i>lsp-name</i> primary <i>path-name</i> <a href="#">oam performance-monitoring</a>],</p> <p>[edit protocols mpls <a href="#">label-switched-path</a> <i>lsp-name</i> secondary <i>path-name</i> <a href="#">oam performance-monitoring</a>]</p> |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 15.1.                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Description</b>              | <p>Configure responder options.</p> <p>The remaining statements are explained separately.</p>                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring Pro-Active Loss and Delay Measurements on page 476</a></li> <li>• <a href="#">On-Demand Packet Loss and Delay Measurement for UHP LSPs Overview on page 50</a></li> <li>• <a href="#">performance-monitoring (Protocols MPLS) on page 1493</a></li> </ul>                                                                                                                                                                                         |

## rpf-check-policy (Routing Options)

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>rpf-check-policy <i>policy</i>;</code>                                                                                                                                                                                                                                                                                                                                                   |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> routing-options multicast],<br>[edit routing-options multicast]                                                                                                                                                                                                                                                                               |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 8.0.<br>Statement introduced in Junos OS Release 12.3 for ACX Series routers.                                                                                                                                                                                                                                                                         |
| <b>Description</b>              | Enable you to control whether a reverse path forwarding (RPF) check is performed for a source and group entry before installing a route in the multicast forwarding cache. This makes it possible to use point-to-multipoint LSPs to distribute multicast traffic to Protocol Independent Multicast (PIM) islands situated downstream from the egress routers of the point-to-multipoint LSPs. |
| <b>Options</b>                  | <i>policy</i> —Name of the RPF check routing policy.                                                                                                                                                                                                                                                                                                                                           |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                            |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring a Multicast RPF Check Policy for Point-to-Multipoint LSPs on page 334</a></li></ul>                                                                                                                                                                                                                                            |



## rsvp-error-hold-time

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>rsvp-error-hold-time seconds;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls],<br>[edit protocols mpls]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Description</b>              | <p>Amount of time MPLS retains RSVP PathErr messages and considers them for CSPF computations. The more time you configure, the more time a source node (ingress of an RSVP LSP) can have to learn about the failures of its LSP by monitoring PathErr messages transmitted from downstream nodes.</p> <p>Information from the PathErr messages is incorporated into subsequent LSP computations, which can improve the accuracy and speed of LSP setup. Some PathErr messages are also used to update traffic engineering database bandwidth information, reducing inconsistencies between the database and the network.</p> |
| <b>Options</b>                  | <p><b>seconds</b>—Amount of time MPLS retains RSVP PathErr messages and considers them for CSPF computations.</p> <p><b>Range:</b> 0 through 240 seconds</p> <p><b>Default:</b> 25 seconds</p>                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Improving Traffic Engineering Database Accuracy with RSVP PathErr Messages on page 78</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |

## sampling (Protocols MPLS)

---

|                          |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|--------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax                   | sampling {<br>cut-off-threshold <i>percentile</i> ;<br>use-average-aggregate;<br>use-percentile <i>percentile</i> ;<br>}                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| Hierarchy Level          | [edit protocols mpls container-label-switched-path <i>lsp-name</i> splitting-merging]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Release Information      | Statement introduced in Junos OS Release 14.2.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Description              | Configure traffic sampling.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Options                  | <p><b>cut-off-threshold <i>percentile</i></b>—Specify the percentile value to be used as a cut-off threshold in removing outlier bandwidth samples. All the aggregate bandwidth samples determined as outliers are used for computing aggregate bandwidth used at the time of normalization.</p> <p><b>Default:</b> 0 percentile (the ingress considers all aggregate bandwidth samples for normalization.)</p> <p><b>Range:</b> 0 through 100</p> <p><b>use-average-aggregate</b>—Specify the ingress router to take average of the aggregate samples for normalization.</p> <p>This option is mutually exclusive with the <b>use-percentile</b> configuration option.</p> <p><b>use-percentile <i>percentile</i></b>—Specify the ingress router to compute and use the <b>pth</b> percentile from all the bandwidth samples, and use that for normalization.</p> <p>This option is mutually exclusive with the <b>use-average-aggregate</b> configuration option.</p> <p><b>Range:</b> 0 through 100</p> |
| Required Privilege Level | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| Related Documentation    | <ul style="list-style-type: none"><li>• <a href="#">splitting-merging on page 1513</a></li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |

## secondary (Protocols MPLS)

|                          |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|--------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax                   | <pre> secondary <i>path-name</i> {     adaptive;     admin-group {         exclude [ <i>group-names</i> ];         include-all [ <i>group-names</i> ];         include-any [ <i>group-names</i> ];     }     bandwidth <i>bps</i>;     class-of-service <i>cos-value</i>;     hop-limit <i>number</i>;     no-cspf;     no-decrement-ttl;     optimize-timer <i>seconds</i>;     preference <i>preference</i>;     priority <i>setup-priority reservation-priority</i>;     (record   no-record);     retry-limit <i>number</i>;     retry-timer <i>seconds</i>;     select (manual   unconditional);     standby; } </pre> |
| Hierarchy Level          | [edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i> ],<br>[edit protocols mpls label-switched-path <i>lsp-name</i> ]                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| Release Information      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| Description              | <p>Specify one or more secondary paths to use for the LSP. You can configure more than one secondary path. All secondary paths are equal, and the first one that is available is chosen.</p> <p>You can specify secondary paths even if you have not specified any primary paths.</p> <p>Optionally, you can specify preference, CoS, and bandwidth values for the secondary path, which override any equivalent values that you configure for the LSP (at the [edit mpls label-switched-path] hierarchy level).</p>                                                                                                        |
| Options                  | <p><b><i>path-name</i></b>—Name of a path that you created with the <b>path</b> statement.</p> <p>The remaining statements are explained separately.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| Required Privilege Level | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Related Documentation    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring Primary and Secondary LSPs on page 242</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |

## select

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                        |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>select (manual   unconditional);</code>                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls <b>label-switched-path</b> <i>lsp-name</i> (primary   secondary) <i>path-name</i> ],<br>[edit protocols mpls <b>label-switched-path</b> <i>lsp-name</i> (primary   secondary) <i>path-name</i> ]                                                                                                                                                       |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                                                                                                                                                              |
| <b>Description</b>              | Specify the conditions under which the path is selected to carry traffic. The <b>manual</b> and <b>unconditional</b> options are mutually exclusive.                                                                                                                                                                                                                                                                   |
| <b>Options</b>                  | <b>manual</b> —The path is selected for carrying traffic if it is up and stable for at least the revert timer window (potentially before the revert timer has elapsed). Traffic is sent to other working paths if the current path is down or degraded (receiving errors).<br><br><b>unconditional</b> —The path is always selected for carrying traffic, even if it is currently down or degraded (receiving errors). |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                    |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Specifying the Conditions for Path Selection on page 244</a></li> </ul>                                                                                                                                                                                                                                                                                           |

## signal-bandwidth

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                         |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>signal-bandwidth type;</code>                                                                                                                                                                                                                                                                                                                                     |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i> lsp-attributes],<br>[edit protocols mpls label-switched-path <i>lsp-name</i> lsp-attributes]                                                                                                                                                                        |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                                                                                                               |
| <b>Description</b>              | Specify the bandwidth encoding of the signal used for path computation and admission control.                                                                                                                                                                                                                                                                           |
| <b>Options</b>                  | <b>type</b> —Configure the type of bandwidth encoding used on the LSP. It can be any of the following values: <b>10gigether</b> , <b>ds1</b> , <b>ds3</b> , <b>e1</b> , <b>e3</b> , <b>ethernet</b> , <b>fastether</b> , <b>gigether</b> , <b>stm-1</b> , <b>stm-4</b> , <b>stm-16</b> , <b>stm-64</b> , <b>stm-256</b> , <b>sts-1</b> , <b>vt1-5</b> , or <b>vt2</b> . |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                     |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring the Signal Bandwidth Type on page 785</a></li> </ul>                                                                                                                                                                                                                                                   |

## smart-optimize-timer

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>smart-optimize-timer seconds;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls],<br>[edit protocols mpls]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Description</b>              | <p>Enable the smart optimization timer. When you enable the smart optimization timer on a router, the Junos OS operates on the assumption that the original LSP path is preferable to any alternate or secondary path. When you enable the smart optimization timer and an LSP fails and its traffic is switched to an alternate path, the smart optimization timer starts and waits 3 minutes (this time is configurable). After 3 minutes have passed, the LSP is switched back to the original path. If the original path fails again and the LSP is switched to an alternate path again, the router waits 1 hour before attempting to switch the LSP back to its original path.</p> <p>If you want to disable the smart optimizer, you can set it to zero. The <b>smart-optimize-timer</b> value in seconds indicates the time before which the LSP is switched back to its primary path in case the primary path becomes available. Otherwise, the time to wait is controlled by the <b>optimize-timer</b>, which is usually set to a high value. Some ISPs have the <b>optimize-timer</b> set to once a day. Sometimes after the smart optimizer causes the LSP to be placed back on its primary path, the primary path goes down again within 60 minutes. When this happens, the <b>smart-optimize-timer</b> is disabled automatically, and the <b>optimize-timer</b> (regular path optimization) goes into effect. This is to protect against a flapping link being used.</p> |
| <b>Default</b>                  | The smart optimization timer is enabled by default.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Options</b>                  | <p><b>seconds</b>—(Optional) Specify the number of seconds to wait before switching an LSP back to its original path. If you do not specify the number of seconds, the default value is used.</p> <p><b>Range:</b> 0 through 65,535 seconds</p> <p><b>Default:</b> 180 seconds</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring the Smart Optimize Timer for LSPs on page 284</a></li> <li>• <a href="#">Optimizing Signaled LSPs on page 280</a></li> <li>• <a href="#">optimize-aggressive on page 1484</a></li> <li>• <a href="#">optimize-timer on page 1487</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |

## soft-preemption (Protocols MPLS)

---

|                                 |                                                                                                                                                                                                      |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | soft-preemption;                                                                                                                                                                                     |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls <a href="#">label-switched-path</a> <i>lsp-name</i> ],<br>[edit protocols mpls <a href="#">label-switched-path</a> <i>lsp-name</i> ] |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.                                                                                                                                                    |
| <b>Description</b>              | Attempt to establish a new path for a preempted LSP before tearing it down.                                                                                                                          |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                  |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring MPLS Soft Preemption on page 266</a></li></ul>                                                                                       |

## splitting-merging

|                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|----------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | <pre> splitting-merging {   maximum-member-lsps <i>number</i>;   maximum-signaling-bandwidth <i>bps</i>;   merging-bandwidth <i>bps</i>;   minimum-member-lsps <i>number</i>;   minimum-signaling-bandwidth <i>bps</i>;   normalization;   sampling;   splitting-bandwidth <i>bps</i>;   splitting-merging-threshold <i>percent</i>; } </pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Hierarchy Level</b>     | [edit protocols mpls container-label-switched-path <i>lsp-name</i> ]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Release Information</b> | <p>Statement introduced in Junos OS Release 14.2.</p> <p>Statement introduced for QFX Switches in Junos OS Release 15.1X53-D30.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Description</b>         | Perform splitting and merging.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Options</b>             | <p><b>maximum-member-lsps <i>number</i></b>—Number of label-switched paths (LSPs) that a container LSP can have as member LSPs at maximum.</p> <p><b>Default:</b> 1</p> <p><b>maximum-signaling-bandwidth <i>bandwidth</i></b>—Amount of bandwidth in bits per second (bps) that can be signaled for an LSP at maximum after normalization. When <b>maximum-signaling-bandwidth</b> is not configured, the value is derived from the <b>splitting-bandwidth</b>.</p> <p>When auto-bandwidth adjustment is done between two normalization events, per LSP auto-bandwidth configuration and thresholds are used instead of the <b>splitting-bandwidth</b>.</p> <p><b>Default:</b> 1 bps</p> <p><b>merging-bandwidth <i>bandwidth</i></b>—Amount of bandwidth in bits per second (bps) that is used for merging during normalization.</p> <p><b>Default:</b> 1 bps</p> <p><b>minimum-member-lsps <i>number</i></b>—Number of LSPd that a container LSP can have as member LSPs at minimum.</p> <p><b>Default:</b> 64</p> <p><b>minimum-signaling-bandwidth <i>bandwidth</i></b>—Amount of bandwidth in bits per second (bps) that can be signaled for an LSP at minimum after normalization. When <b>minimum-signaling-bandwidth</b> is not configured, the value is derived from the <b>merging-bandwidth</b>.</p> <p>When auto-bandwidth adjustment is done between two normalization events, per LSP auto-bandwidth configuration and thresholds are used instead of the <b>merging-bandwidth</b>.</p> <p><b>Default:</b> 1 bps</p> |

**splitting-bandwidth *bandwidth***—Amount of bandwidth in bits per second (bps) that can be used for splitting during normalization.

**Default:** 1 bps

**splitting-merging-threshold *percent***—Percentage changes in aggregate bandwidth relevant for splitting and merging.

**Default:** 0%

The remaining statements are explained separately.

**Required Privilege Level** routing—To view this statement in the configuration.  
routing-control—To add this statement to the configuration.

**Related Documentation**

- [container-label-switched-path on page 1413](#)

---

## srlg

---

**Syntax**

```
srlg {  
    srlg-name {  
        srlg-cost srlg-cost;  
        srlg-value srlg-value;  
    }  
}
```

**Hierarchy Level** [edit routing-options],  
[edit logical-systems *logical-system-name* routing-options]  
[edit protocols mpls interface *interface-name*]

**Release Information** Statement introduced in Junos OS Release 11.4.  
Statement introduced in Junos OS Release 12.3 for ACX Series routers.

**Description** Configure Shared Risk Link Group (SRLG) parameters.

**Options** **srlg-cost *srlg-cost***—Specify a cost for the SRLG ranging from 1 through 65535.  
**srlg-values *srlg-value***—Specify a Group ID for the SRLG ranging from 1 through 4294967295.

**Required Privilege Level** routing—To view this statement in the configuration.  
routing-control—To add this statement to the configuration.

**Related Documentation**

- [Example: Configuring SRLG on page 92](#)



## srlg-cost

---

|                                 |                                                                                                                         |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>srlg-cost <i>srlg-cost</i>;</code>                                                                                |
| <b>Hierarchy Level</b>          | [edit routing-options srlg],<br>[edit logical-systems <i>logical-system-name</i> routing-options srlg]                  |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 11.4.<br>Statement introduced in Junos OS Release 12.3 for ACX Series routers. |
| <b>Description</b>              | Specify a cost for the Shared Risk Link Group (SRLG) ranging from 1 through <b>65535</b> .                              |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.     |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Example: Configuring SRLG on page 92</a></li> </ul>                |

## srlg-value

---

|                                 |                                                                                                                         |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>srlg-value <i>srlg-value</i>;</code>                                                                              |
| <b>Hierarchy Level</b>          | [edit routing-options srlg],<br>[edit logical-systems <i>logical-system-name</i> routing-options srlg]                  |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 11.4.<br>Statement introduced in Junos OS Release 12.3 for ACX Series routers. |
| <b>Description</b>              | Specify a Group ID for the Shared Risk Link Group (SRLG) ranging from 1 through <b>4294967295</b> .                     |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.     |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Example: Configuring SRLG on page 92</a></li> </ul>                |

## standby

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | standby;                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls],<br>[edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i> ],<br>[edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i><br>(primary   secondary) <i>path-name</i> ],<br>[edit protocols mpls],<br>[edit protocols mpls label-switched-path <i>lsp-name</i> ],<br>[edit protocols mpls label-switched-path <i>lsp-name</i> (primary   secondary) <i>path-name</i> ] |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 9.5 for EX Series switches.                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Description</b>              | Enable the path to remain up at all times to provide instant switchover if connectivity problems occur.                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring Hot Standby of Secondary Paths for LSPs on page 297</a></li><li>• <a href="#">Configuring Path Protection in an MPLS Network (CLI Procedure)</a></li></ul>                                                                                                                                                                                                                                                                                                    |

## static-label-switched-path

```
Syntax  static-label-switched-path lsp-name {
        bypass bypass-name {
            bandwidth bps;
            description string;
            next-hop (address | interface-name | address/interface-name);
            push out-label;
            to address;
        }
        ingress {
            bandwidth bps;
            class-of-service cos-value;
            description string;
            install {
                destination-prefix <active>;
            }
            link-protection bypass-name name;
            metric metric;
            next-hop (address | interface-name | address/interface-name);
            node-protection bypass-name name next-next-label label;
            no-install-to-address;
            policing {
                filter filter-name;
                no-auto-policing;
            }
            preference preference;
            push out-label;
            to address;
        }
        transit incoming-label {
            bandwidth bps;
            description string;
            link-protection bypass-name name;
            next-hop (address | interface-name | address/interface-name);
            node-protection bypass-name name next-next-label label;
            pop;
            swap out-label;
        }
    }
```

**Hierarchy Level** [edit logical-systems *logical-system-name* protocols mpls],  
[edit protocols mpls]

**Release Information** Statement introduced in Junos OS Release 10.1.  
Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

**Description** Configure a static LSP.

**Options** *lsp-name*—Name of the path.

The remaining statements are explained separately.

|                              |                                                                                                       |
|------------------------------|-------------------------------------------------------------------------------------------------------|
| <b>Required Privilege</b>    | routing—To view this statement in the configuration.                                                  |
| <b>Level</b>                 | routing-control—To add this statement to the configuration.                                           |
| <b>Related Documentation</b> | <ul style="list-style-type: none"><li>• <a href="#">Configuring Static LSPs on page 299</a></li></ul> |

## statistics (Protocols MPLS)

|                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|----------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | <pre>statistics {   auto-bandwidth (MPLS Statistics);   file <i>filename</i> &lt;files <i>number</i>&gt; &lt;size <i>size</i>&gt; &lt;world-readable   no-world-readable&gt;;   interval <i>seconds</i>;   no-transit-statistics;   traffic-class-statistics;   transit-statistics-polling; }</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Hierarchy Level</b>     | <pre>[edit logical-systems <i>logical-system-name</i> protocols mpls], [edit protocols mpls]</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Release Information</b> | <p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.</p> <p><b>traffic-class-statistics</b> option introduced in Junos OS Release 14.2.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Description</b>         | Enable MPLS statistics collection and reporting.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Options</b>             | <p><b>file <i>filename</i></b>—(Optional) Name of the file to receive the output. We recommend that you place MPLS tracing output in the file <code>mpls-stat</code> in the <code>/var/log</code> directory.</p> <p><b>files <i>number</i></b>—(Optional) Maximum number of trace files. When a trace file named <i>file</i> reaches its maximum size, it is renamed <i>file.0</i>, then <i>file.1</i>, and so on, until the maximum number of files is reached. Then, the oldest file is overwritten.</p> <p><b>Range:</b> 2 or more</p> <p><b>Default:</b> 2 files</p> <p>If you specify a maximum number of files, you also must specify a maximum file size with the <b>size</b> option.</p> <p><b>interval <i>seconds</i></b>—Interval at which to periodically collect statistics.</p> <p><b>Range:</b> 1 through 65,535</p> <p><b>Default:</b> 300 seconds</p> <p><b>no-world-readable</b>—(Optional) Prevent users from reading the log file.</p> <p><b>size <i>size</i></b>—(Optional) Maximum size of each file, in kilobytes (KB), megabytes (MB), or gigabytes (GB). When a file named <i>file</i> reaches this size, it is renamed <i>file.0</i>. When the <i>file</i> again reaches its maximum size, <i>file.0</i> is renamed <i>file.1</i> and <i>file</i> is renamed <i>file.0</i>. This renaming scheme continues until the maximum number of files is reached. Then the oldest trace file is overwritten.</p> <p>If you specify a maximum file size, you also must specify a maximum number of files with the <b>files</b> option.</p> <p><b>world-readable</b>—(Optional) Enable users to read the log file.</p> <p><b>Syntax:</b> Syntax: <b>xk</b> to specify KB, <b>xm</b> to specify MB, or <b>xg</b> to specify GB</p> <p><b>Range:</b> 10 KB through the maximum file size supported on your system</p> |

**Default:** 1 MB

**traffic-class-statistics**—(Optional) Create counters that maintain data traffic statistics per traffic class at the ingress of all types of LSPs and egress of ultimate hop popping (UHP) point-to-point LSPs. These counters are not created by default and are required to be configured to perform traffic-class-scoped loss measurement.

**transit-statistics-polling**—(Optional) Enable the polling and display of MPLS statistics for LSPs transiting the router. By default, RSVP does not periodically poll for transit LSP statistics. You cannot configure this statement and the **no-transit-statistics** statement at the same time.

The remaining statements are explained separately.

**Required Privilege Level** routing and trace—To view this statement in the configuration.  
routing-control and trace-control—To add this statement to the configuration.

**Related Documentation**

- [Configuring MPLS to Gather Statistics on page 371](#)
- [Configuring Automatic Bandwidth Allocation for LSPs on page 286](#)

---

## swap

|                                 |                                                                                                                                                                                                                                                 |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>swap out-label;</code>                                                                                                                                                                                                                    |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls static-label-switched-path <i>lsp-name</i> transit <i>incoming-label</i> ],<br>[edit protocols mpls static-label-switched-path <i>lsp-name</i> transit <i>incoming-label</i> ]  |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                       |
| <b>Description</b>              | Remove the label at the top of the label stack and replace it with the specified label. Manually assigned incoming labels can have values from 1,000,000 through 1,048,575. This statement is used to configure static LSPs at transit routers. |
| <b>Options</b>                  | <b>out-label</b> —Manually assigned outgoing label value.<br><b>Range:</b> 0 through 1,048,575<br><b>Default:</b> If you do not define the <b>out-label</b> option, the original label value remains unchanged.                                 |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                             |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">pop on page 1495</a></li><li>• <a href="#">push on page 1500</a></li><li>• <a href="#">Configuring the Intermediate (Transit) and Egress Routers for Static LSPs on page 302</a></li></ul>  |

## switch-away-lsps

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | switch-away-lsps;                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-systems-name</i> protocols mpls interface <i>interface-name</i> ],<br>[edit protocols mpls interface <i>interface-name</i> ]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 10.2.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Description</b>              | <p>(MX Series routers only) Enable you to switch an LSP away from a network node using a bypass LSP. This feature could be used in maintenance of active networks when a network device needs to be replaced without interrupting traffic passing through the network. The LSPs can be either static or dynamic. Configure this statement only after you have configured and committed the <b>always-mark-connection-protection-tlv</b> statement.</p> <p>The <b>always-mark-connection-protection-tlv</b> statement marks all OAM traffic transiting this interface in preparation for switching the traffic to an alternate path based on the OAM functionality. When you configure the <b>switch-away-lsps</b> statement, traffic is switched to the bypass LSP.</p> |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Switching LSPs Away from a Network Node on page 513</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |

## switching-type

---

|                                 |                                                                                                                                                                                                                                                                                                                                    |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | switching-type (fiber   lambda   psc-1   tdm);                                                                                                                                                                                                                                                                                     |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i> lsp-attributes],<br>[edit protocols mpls label-switched-path <i>lsp-name</i> lsp-attributes]                                                                                                                                   |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                                                                          |
| <b>Description</b>              | Specify the switching method for the LSP. The switching method can be one of the following values: <ul style="list-style-type: none"><li>• <b>fiber</b>—Fiber switching</li><li>• <b>lambda</b>—Lambda switching</li><li>• <b>psc-1</b>—Packet switching</li><li>• <b>tdm</b>—Time-division multiplexing (TDM) switching</li></ul> |
| <b>Default</b>                  | psc-1                                                                                                                                                                                                                                                                                                                              |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring MPLS LSPs for GMPLS on page 784</a></li></ul>                                                                                                                                                                                                                      |



## sync-active-path-bandwidth

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | sync-active-path-bandwidth;                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Hierarchy Level</b>          | <p>[edit logical-systems <i>logical-system-name</i> protocols mpls],<br/> [edit logical-systems <i>logical-system-name</i> protocols mpls <b>label-switched-path</b> <i>lsp-name</i>],<br/> [edit logical-systems <i>logical-system-name</i> protocols mpls <b>label-switched-path</b> <i>lsp-name</i> <b>auto-bandwidth (MPLS Tunnel)</b>],<br/> [edit logical-systems <i>logical-system-name</i> protocols mpls <b>label-switched-path</b> <i>lsp-name</i> (<b>primary</b>   <b>secondary</b>) <i>path-name</i>],<br/> [edit protocols mpls],<br/> [edit protocols mpls <b>label-switched-path</b> <i>lsp-name</i>],<br/> [edit protocols mpls <b>label-switched-path</b> <i>lsp-name</i> <b>auto-bandwidth (MPLS Tunnel)</b>],<br/> [edit protocols mpls <b>label-switched-path</b> <i>lsp-name</i> (<b>primary</b>   <b>secondary</b>) <i>path-name</i>]</p>                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 13.2.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Description</b>              | <p>When you have a primary and a secondary path configuration, specify that a path needs to be signaled with the active-path bandwidth when the auto-bandwidth adjustment happens and that the secondary path synchronizes the bandwidth reservations to that of the primary path.</p> <p>When a primary path fails, bandwidth reservations are made by the secondary path on the links that it uses. If you include the <b>sync-active-path-bandwidth</b> statement, the secondary path releases the bandwidth it has reserved and adjusts its bandwidth after the primary path begins carrying traffic.</p> <p>For example, suppose the active path is a secondary path with a reserved bandwidth of 10 GB as a result of the automatic bandwidth adjustment. Then suppose there is a switchover from the secondary path to the primary path. After some time the primary path reserves 5 GB as a result of a new automatic adjustment. Without the <b>sync-active-path-bandwidth</b> statement, the secondary path does not release the 10 GB after a switchover occurs. That bandwidth is wasted. If the <b>sync-active-path-bandwidth</b> is included in the configuration, the secondary path adjusts its bandwidth to 5 GB along with the primary path.</p> |
| <b>Default</b>                  | When you have a primary and a secondary path configuration, and the primary path fails, bandwidth reservations are made by the secondary path on the links that it uses. When the primary path comes back and the traffic switches over, the secondary path does not release its bandwidth reservations.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Disabling Constrained-Path LSP Computation on page 267</a></li> <li>• <a href="#">Configuring Explicit-Path LSPs on page 306</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |

## te-class-matrix

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>te-class-matrix {   tenumber {     priority <i>priority</i>;     traffic-class {       ctnumber priority <i>priority</i>;     }   } }</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls diffserv-te],<br>[edit protocols mpls diffserv-te]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Description</b>              | Specify the traffic engineering class matrix for a multiclass LSP or a DiffServ-aware traffic engineering LSP.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Default</b>                  | <p>The default traffic engineering class matrix is:</p> <pre>te-class-matrix {   te0 traffic-class ct0 priority 7;   te1 traffic-class ct1 priority 7;   te2 traffic-class ct2 priority 7;   te3 traffic-class ct3 priority 7;   te4 traffic-class ct0 priority 0;   te5 traffic-class ct1 priority 0;   te6 traffic-class ct2 priority 0;   te7 traffic-class ct3 priority 0; }</pre> <p>If you define any of the traffic engineering classes, all the default values are dropped.</p>                                                                                                                                                                                    |
| <b>Options</b>                  | <p><b>ctnumber</b>—Specify the number of the class type. It can be one of four values: <b>ct0</b>, <b>ct1</b>, <b>ct2</b>, or <b>ct3</b>.</p> <p><b>priority <i>priority</i></b>—Specify the priority of the class type. It can be one of eight values from 0 through 7.</p> <p><b>tenumber</b>—Specify the number of the traffic engineering class. It can be one of eight values: <b>te0</b>, <b>te1</b>, <b>te2</b>, <b>te3</b>, <b>te4</b>, <b>te5</b>, <b>te6</b>, or <b>te7</b>. You must configure the traffic engineering classes in order, starting with <b>te0</b>.</p> <p><b>traffic-class</b>—Specify the traffic class for the traffic engineering class.</p> |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring Traffic Engineering Classes on page 345</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |

to

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | to <i>address</i> ;                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i> ],<br>[edit logical-systems <i>logical-system-name</i> protocols mpls static-label-switched-path <i>lsp-name</i> bypass],<br>[edit logical-systems <i>logical-system-name</i> protocols mpls static-label-switched-path <i>lsp-name</i> ingress],<br>[edit protocols mpls label-switched-path <i>lsp-name</i> ],<br>[edit protocols mpls static-label-switched-path <i>lsp-name</i> bypass],<br>[edit protocols mpls static-label-switched-path <i>lsp-name</i> ingress] |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Description</b>              | Specify the egress router of a dynamic LSP.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Options</b>                  | <i>address</i> —Address of the egress router.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring the Egress Router Address for LSPs on page 240</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                               |

## traceoptions (Protocols MPLS)

---

|                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|----------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | <pre>traceoptions {<br/>    file <i>filename</i> &lt;files <i>number</i>&gt; &lt;size <i>size</i>&gt; &lt;world-readable   no-world-readable&gt;;<br/>    flag <i>flag</i>;<br/>}</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Hierarchy Level</b>     | [edit logical-systems <i>logical-system-name</i> protocols mpls],<br>[edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i> ],<br>[edit protocols mpls],<br>[edit protocols mpls label-switched-path <i>lsp-name</i> ]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Release Information</b> | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.<br><b>ted-export</b> option introduced in Junos OS Release 14.2.<br><b>ted-import</b> option introduced in Junos OS Release 14.2.<br><b>lsp-history</b> option added in Junos OS Release 15.1.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Description</b>         | Configure MPLS tracing options at the protocol level or for a label-switched path.<br><br>To specify more than one tracing operation, include multiple <b>flag</b> statements.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Default</b>             | The default MPLS protocol-level tracing options are inherited from the routing protocols <b>traceoptions</b> statement included at the [edit routing-options] hierarchy level.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Options</b>             | <p><b>filename</b>—Name of the file to receive the output of the tracing operation. All files are placed in the directory <b>/var/log</b>. We recommend that you place MPLS tracing output in the file <b>mpls-log</b>.</p> <p><b>files number</b>—(Optional) Maximum number of trace files. When a trace file named <b>trace-file</b> reaches its maximum size, it is renamed <b>trace-file.0</b>, then <b>trace-file.1</b>, and so on, until the maximum number of trace files is reached. Then the oldest trace file is overwritten.</p> <p><b>Range:</b> 2 through 1000</p> <p><b>Default:</b> 2 files</p> <p>If you specify a maximum number of files, you must also include the <b>size</b> statement to specify the maximum file size.</p> <p><b>flag</b>—Tracing operation to perform. To specify more than one tracing operation, include multiple <b>flag</b> statements.</p> <p><b>MPLS Tracing Flags</b></p> <ul style="list-style-type: none"><li>• <b>all</b>—Trace all operations</li><li>• <b>autobw-state</b>—Automatic bandwidth events.</li><li>• <b>connection</b>—All circuit cross-connect (CCC) activity</li><li>• <b>connection-detail</b>—Detailed CCC activity</li></ul> |

- **cspf**—CSPF computations
- **cspf-link**—Links visited during CSPF computations
- **cspf-node**—Nodes visited during CSPF computations
- **error**—MPLS error packets
- **graceful-restart**—Trace MPLS graceful restart events
- **lsp-history**—Trace LSP history events
- **lsping**—Trace lsping packets and return codes
- **nsr-synchronization**—Trace NSR synchronization events
- **nsr-synchronization-detail**—Trace NSR synchronization events in detail
- **state**—All LSP state transitions
- **static**—Trace static label-switched path
- **ted-export**—Trace leaking of entries from **lsdist.0** table into the traffic engineering database
- **ted-import**—Trace leaking traffic engineering database entries into the **lsdist.0** table
- **timer**—Timer usage

**no-world-readable**—(Optional) Allow only certain users to read the log file.

**size** *size*—(Optional) Maximum size of each trace file, in kilobytes (KB), megabytes (MB), or gigabytes (GB). When a trace file named **trace-file** reaches this size, it is renamed **trace-file.0**. When the **trace-file** again reaches this size, **trace-file.0** is renamed **trace-file.1** and **trace-file** is renamed **trace-file.0**. This renaming scheme continues until the maximum number of trace files is reached. Then the oldest trace file is overwritten.

**Syntax:** *xk* to specify KB, *xm* to specify MB, or *xg* to specify GB

**Range:** 10 KB through the maximum file size supported on your system

**Default:** 1 MB

If you specify a maximum file size, you must also include the **files** statement to specify the maximum number of files.

**world-readable**—(Optional) Allow any user to read the log file.

|                                 |                                                                                                                                                 |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Required Privilege Level</b> | routing and trace—To view this statement in the configuration.<br>routing-control and trace-control—To add this statement to the configuration. |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Tracing MPLS and LSP Packets and Operations on page 389</a></li> </ul>                     |

## traffic-class (delay)

---

|                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|----------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | <pre>traffic-class <i>tc-value</i> {<br/>    average-sample-size <i>sample size</i>;<br/>    padding-size <i>size</i>;<br/>    query-interval <i>milliseconds</i>;<br/>    rtt-delay-threshold <i>rtt threshold value</i>;<br/>    twcd-delay-threshold <i>twcd threshold value</i>;<br/>}</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Hierarchy Level</b>     | <pre>[edit protocols mpls <a href="#">oam performance-monitoring querier delay</a>],<br/>[edit protocols mpls <a href="#">label-switched-path</a> <i>lsp-name</i> <a href="#">oam performance-monitoring querier delay</a>],<br/>[edit protocols mpls <a href="#">label-switched-path</a> <i>lsp-name</i> <a href="#">primary path-name</a> <a href="#">oam performance-monitoring querier delay</a>],<br/>[edit protocols mpls <a href="#">label-switched-path</a> <i>lsp-name</i> <a href="#">secondary path-name</a> <a href="#">oam performance-monitoring querier delay</a>]</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Release Information</b> | Statement introduced in Junos OS Release 15.1.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Description</b>         | <p>Configure traffic class specific options.</p> <p>Specify the traffic classes for which loss measurement has to be performed. This parameter takes one of the <i>tc-all tc-0 tc-1 tc-2 tc-3 tc-4 tc-5 tc-6 tc-7 tc-none</i> traffic-class values. For each traffic class, you can configure the respective parameters.</p> <p>To enable traffic-class parameters, configure the <b>traffic-class-statistics</b> configuration statement under the <b>[edit protocol mpls statistic]</b> hierarchy level.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Options</b>             | <p><b>average-sample-size <i>sample size</i></b>—(Optional) Specify the number of samples used for calculating the average of various metrics.</p> <p><b>Default:</b> 5</p> <p><b>Range:</b> 1 through 30</p> <p><b>padding-size <i>size</i></b>—(Optional) Specify the delay-measurement message length, which is used to calculate the delay experienced by messages of different sizes.</p> <p><b>Default:</b> 0</p> <p><b>Range:</b> 1 through 1500</p> <p><b>query-interval <i>milliseconds</i></b>—Specify the minimum transmit interval, which signifies how often the loss measurement message is generated from the querier.</p> <p><b>Default:</b> 10 seconds</p> <p><b>Range:</b> 1000 through 4294967295 milliseconds</p> <p><b>rtt-delay-threshold <i>rtt threshold value</i></b>—Specify the round-trip delay threshold value.</p> <p><b>Range:</b> 1 through 4294967295 microseconds</p> <p><b>twcd-delay-threshold <i>twcd threshold value</i></b>—Specify the two-way channel delay threshold value.</p> <p><b>Range:</b> 1 through 4294967295 microseconds</p> |

|                                 |                                                                                                                                                                                                                                                                                                                        |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                    |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring Pro-Active Loss and Delay Measurements on page 476</a></li><li>• <a href="#">On-Demand Packet Loss and Delay Measurement for UHP LSPs Overview on page 50</a></li><li>• <a href="#">performance-monitoring (Protocols MPLS) on page 1493</a></li></ul> |

## traffic-class (loss)

---

|                     |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax              | <pre>traffic-class <i>tc-value</i> {<br/>    average-sample-size <i>sample size</i>;<br/>    loss-threshold <i>loss threshold value</i>;<br/>    loss-threshold-window <i>number of samples for loss threshold</i>;<br/>    measurement-quantity <i>bytes packets</i>;<br/>    query-interval <i>milliseconds</i>;<br/>}</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Hierarchy Level     | <pre>[edit protocols mpls <a href="#">oam performance-monitoring querier loss</a>],<br/>[edit protocols mpls <a href="#">label-switched-path</a> <i>lsp-name</i> <a href="#">oam performance-monitoring querier loss</a>],<br/>[edit protocols mpls <a href="#">label-switched-path</a> <i>lsp-name</i> <a href="#">primary path-name</a> <a href="#">oam performance-monitoring querier loss</a>],<br/>[edit protocols mpls <a href="#">label-switched-path</a> <i>lsp-name</i> <a href="#">secondary path-name</a> <a href="#">oam performance-monitoring querier loss</a>]</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Release Information | Statement introduced in Junos OS Release 15.1.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Description         | <p>Configure traffic class specific options.</p> <p>Specify the traffic classes for which loss measurement has to be performed. This parameter takes one of the <i>tc-all tc-0 tc-1 tc-2 tc-3 tc-4 tc-5 tc-6 tc-7 tc-none</i> traffic-class values. For each traffic class, you can configure the respective parameters.</p> <p>To enable traffic-class parameters, configure the <b>traffic-class-statistics</b> configuration statement under the <b>[edit protocol mpls statistic]</b> hierarchy level.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Options             | <p><b>average-sample-size <i>sample size</i></b>—(Optional) Specify the number of samples used for calculating the average of various metrics.</p> <p><b>Default:</b> 5</p> <p><b>Range:</b> 1 through 30</p> <p><b>loss-threshold <i>loss threshold value</i></b>—Specify the threshold value that will be used with <b>loss-threshold-window</b> to calculate the loss within specified window size.</p> <p><b>Range:</b> 1 through 4294967295</p> <p><b>loss-threshold-window <i>number of samples for loss threshold</i></b>—Specify the number of samples used for loss threshold calculation.</p> <p><b>Range:</b> 1 through 30</p> <p><b>measurement-quantity <i>bytes packets</i></b>—(Optional) Specify whether packet or byte loss is being measured at the querier.</p> <p><b>Default:</b> packets</p> <p><b>query-interval <i>milliseconds</i></b>—Specify the minimum transmit interval, which signifies how often the loss measurement message is generated from the querier.</p> <p><b>Default:</b> 10 seconds</p> <p><b>Range:</b> 1000 through 4294967295 milliseconds</p> |



|                                 |                                                                                                                                                                                                                                                                                                                        |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                    |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring Pro-Active Loss and Delay Measurements on page 476</a></li><li>• <a href="#">On-Demand Packet Loss and Delay Measurement for UHP LSPs Overview on page 50</a></li><li>• <a href="#">performance-monitoring (Protocols MPLS) on page 1493</a></li></ul> |

## traffic-class (loss-delay)

|                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|----------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | <pre> traffic-class <i>tc-value</i> {     average-sample-size <i>sample size</i>;     loss-threshold <i>loss threshold value</i>;     loss-threshold-window <i>number of samples for loss threshold</i>;     measurement-quantity <i>bytes packets</i>;     padding-size <i>size</i>;     query-interval <i>milliseconds</i>;     rtt-delay-threshold <i>rtt threshold value</i>;     twcd-delay-threshold <i>twcd threshold value</i>; } </pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Hierarchy Level</b>     | <p>[edit protocols mpls <a href="#">oam performance-monitoring querier loss-delay</a>],<br/> [edit protocols mpls <a href="#">label-switched-path</a> <i>lsp-name</i> <a href="#">oam performance-monitoring querier loss-delay</a>],<br/> [edit protocols mpls <a href="#">label-switched-path</a> <i>lsp-name</i> <a href="#">primary path-name</a> <a href="#">oam performance-monitoring querier loss-delay</a>],<br/> [edit protocols mpls <a href="#">label-switched-path</a> <i>lsp-name</i> <a href="#">secondary path-name</a> <a href="#">oam performance-monitoring querier loss-delay</a>]</p>                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Release Information</b> | Statement introduced in Junos OS Release 15.1.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Description</b>         | <p>Configure traffic class specific options.</p> <p>Specify the traffic classes for which loss measurement has to be performed. This parameter takes one of the <i>tc-all tc-0 tc-1 tc-2 tc-3 tc-4 tc-5 tc-6 tc-7 tc-none</i> traffic-class values. For each traffic class, you can configure the respective parameters.</p> <p>To enable traffic-class parameters, configure the <b>traffic-class-statistics</b> configuration statement under the <b>[edit protocol mpls statistic]</b> hierarchy level.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Options</b>             | <p><b>average-sample-size</b> <i>sample size</i>—(Optional) Specify the number of samples used for calculating the average of various metrics.<br/> <b>Default:</b> 5<br/> <b>Range:</b> 1 through 30</p> <p><b>loss-threshold</b> <i>loss threshold value</i>—Specify the threshold value that will be used with <b>loss-threshold-window</b> to calculate loss within specified window size.<br/> <b>Range:</b> 1 through 4294967295</p> <p><b>loss-threshold-window</b> <i>number of samples for loss threshold</i>—Specify the number of samples used for loss threshold calculation.<br/> <b>Range:</b> 1 through 30</p> <p><b>measurement-quantity</b> <i>bytes packets</i>—(Optional) Specify whether packet or byte loss is being measured at the querier.<br/> <b>Default:</b> packets</p> <p><b>padding-size</b> <i>size</i>—(Optional) Specify the delay-measurement message length, which is used to calculate the delay experienced by messages of different sizes.</p> |

**Default:** 0

**Range:** 1 through 1500

**query-interval *milliseconds***—Specify the minimum transmit interval, which signifies how often the loss measurement message is generated from the querier.

**Default:** 10 seconds

**Range:** 1000 through 4294967295 milliseconds

**rtt-delay-threshold *rtt threshold value***—Specify the round-trip delay threshold value.

**Range:** 1 through 4294967295 microseconds

**twcd-delay-threshold *twcd threshold value***—Specify the two-way channel delay threshold value.

**Range:** 1 through 4294967295 microseconds

|                                 |                                                             |
|---------------------------------|-------------------------------------------------------------|
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.        |
|                                 | routing-control—To add this statement to the configuration. |

|                              |                                                                                                |
|------------------------------|------------------------------------------------------------------------------------------------|
| <b>Related Documentation</b> | • <a href="#">Configuring Pro-Active Loss and Delay Measurements on page 476</a>               |
|                              | • <a href="#">On-Demand Packet Loss and Delay Measurement for UHP LSPs Overview on page 50</a> |
|                              | • <a href="#">performance-monitoring (Protocols MPLS) on page 1493</a>                         |

## traffic-engineering (Protocols MPLS)

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | traffic-engineering (bgp   bgp-igp   bgp-igp-both-ribs   mpls-forwarding);                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls],<br>[edit protocols mpls]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.1 for EX Series switches.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Description</b>              | Select whether MPLS performs traffic engineering on BGP destinations only or on both BGP and IGP destinations. Affects only LSPs originating from this routing device, not transit or egress LSPs.                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Default</b>                  | bgp                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Options</b>                  | <b>bgp</b> —On BGP destinations only. Ingress routes are installed in the inet.3 routing table.<br><br><b>bgp-igp</b> —On both BGP and IGP destinations. Ingress routes are installed in the inet.0 routing table. If IGP shortcuts are enabled, the shortcut routes are automatically installed in the inet.0 routing table.<br><br><b>bgp-igp-both-ribs</b> —On both BGP and IGP destinations. Ingress routes are installed in the inet.0 and inet.3 routing tables. This option is used to support VPNs.<br><br><b>mpls-forwarding</b> —On both BGP and IGP destinations. Use ingress routes for forwarding only, not for routing. |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring Traffic Engineering for LSPs on page 365</a></li><li>• <a href="#">Configuring MPLS on Provider Edge Switches Using IP Over MPLS (CLI Procedure)</a></li></ul>                                                                                                                                                                                                                                                                                                                                                                                                        |

## traffic-engineering (Protocols BGP)

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | traffic-engineering {<br>unicast;<br>}                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Hierarchy Level</b>          | <p>[edit logical-systems <i>logical-system-name</i> protocols bgp family],</p> <p>[edit logical-systems <i>logical-system-name</i> protocols bgp group <i>group-name</i> family],</p> <p>[edit logical-systems <i>logical-system-name</i> protocols bgp group <i>group-name</i> neighbor <i>address</i> family],</p> <p>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols bgp family],</p> <p>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols bgp group <i>group-name</i> family],</p> <p>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols bgp group <i>group-name</i> neighbor <i>address</i> family],</p> <p>[edit protocols bgp family],</p> <p>[edit protocols bgp group <i>group-name</i> family],</p> <p>[edit protocols bgp group <i>group-name</i> neighbor <i>address</i> family],</p> <p>[edit routing-instances <i>routing-instance-name</i> protocols bgp family],</p> <p>[edit routing-instances <i>routing-instance-name</i> protocols bgp group <i>group-name</i> family],</p> <p>[edit routing-instances <i>routing-instance-name</i> protocols bgp group <i>group-name</i> neighbor <i>address</i> family]</p> |
| <b>Release Information</b>      | <p>Statement introduced in Junos OS Release 14.2.</p> <p>Statement introduced for QFX5100 in Junos OS Release 15.1</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Description</b>              | <p>Enable traffic engineering address family. This generates a multiprotocol address family indicator (AFI) and a subsequent address family identifier (SAFI) to be negotiated with the BGP peers.</p> <p>The BGP network layer reachability information (NLRI) information is exchanged between the peers only when the traffic engineering AFI and SAFI are shared between them. If the peers do not agree on the use of the AFI and SAFI, the connection between the peers is terminated.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Options</b>                  | <b>unicast</b> —Include BGP-TE NLRI.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Example: Configuring Link State Distribution Using BGP on page 393</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |

## transit-lsp-association

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>transit-lsp-association <i>transit-association-lsp-group-name</i> {<br/>    from-1 <i>address-of-associated-lsp-1</i>;<br/>    from-2 <i>address-of-associated-lsp-2</i>;<br/>    lsp-name-1 <i>name-of-associated-lsp-1</i>;<br/>    lsp-name-2 <i>name-of-associated-lsp-2</i>;<br/>}</pre>                                                                                                                                                |
| <b>Hierarchy Level</b>          | [edit protocols mpls]                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 12.1.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                                                                                                                                                                                            |
| <b>Description</b>              | Associate two label-switched paths (LSPs) at a transit node to configure a path for sending and receiving GAL and G-Ach messages for MPLS-TP OAM.                                                                                                                                                                                                                                                                                                 |
| <b>Options</b>                  | <p><i>transit-association-lsp-group-name</i>—Name of the transit association LSP group.</p> <p><i>from-1 address-of-associated-lsp-1</i>—Address of the first associated LSP.</p> <p><i>from-2 address-of-associated-lsp-2</i>—Address of the second associated LSP.</p> <p><i>lsp-name-1 name-of-associated-lsp-1</i>—Name of the first associated LSP.</p> <p><i>lsp-name-2 name-of-associated-lsp-1</i>—Name of the second associated LSP.</p> |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                               |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Example: Configuring the MPLS Transport Profile for OAM on page 147</a></li></ul>                                                                                                                                                                                                                                                                                                             |

## ultimate-hop-popping

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | ultimate-hop-popping;                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls],<br>[edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>label-switched-path-name</i> ],<br>[edit protocols mpls],<br>[edit protocols mpls label-switched-path <i>label-switched-path-name</i> ]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 12.3.<br>Statement introduced in Junos OS Release 13.2 for PTX Series Packet Transport Routers.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Description</b>              | <p>Enable ultimate-hop popping on LSPs. Configure this statement on the device at the LSP ingress. In ultimate-hop popping, the MPLS label is popped from the IP packet at the PE router. The IP address is checked in a second address lookup (also at the PE router), and then the packet is forwarded to its destination.</p> <p>Be aware of the following platform requirements and restrictions:</p> <ul style="list-style-type: none"> <li>• UHP LSPs using VT interfaces—Supported on all M Series, MX Series, T Series, and TX Matrix routers.</li> <li>• UHP LSPs using LSI interfaces—Supported on MX 3D Series routers only.</li> <li>• UHP LSP requirements for the egress PE device—For M Series and T Series routers, a VT interface is needed.</li> <li>• UHP LSPs and Layer 3 VPNs—UHP LSPs are supported for Layer 3 VPNs configured on MX 3D Series routers only.</li> <li>• UHP LSPs and VPLS—UHP LSPs are supported for VPLS configured on MX 3D Series routers only. You must configure the <i>no-tunnel-services</i> statement at the [edit routing-instances <i>routing-instance-name</i> protocols vpls] hierarchy level.</li> </ul> |
| <b>Default</b>                  | Ultimate-hop popping is disabled by default on LSPs. Penultimate-hop popping is the default behavior. In penultimate-hop popping, the final MPLS label is popped from the IP packet at the last provider router in the network before being forwarded to the PE router. The PE router receives the packet and checks the IP address, and then the packet is forwarded to its destination.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring Ultimate-Hop Popping for LSPs on page 250</a></li> <li>• <a href="#">explicit-null on page 1431</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |





# RSVP Configuration Statements

- [admin-group](#) on page 1541
- [aggregate \(Protocols RSVP\)](#) on page 1542
- [authentication-key \(Protocols RSVP\)](#) on page 1543
- [bandwidth \(Protocols RSVP\)](#) on page 1544
- [bypass \(Signaled LSP\)](#) on page 1545
- [bypass \(Static LSP\)](#) on page 1546
- [class-of-service \(Protocols RSVP\)](#) on page 1547
- [destination-networks](#) on page 1548
- [devices](#) on page 1549
- [disable \(Protocols RSVP\)](#) on page 1550
- [dynamic-bidirectional-transport](#) on page 1551
- [fast-reroute \(Protocols RSVP\)](#) on page 1551
- [graceful-deletion-timeout](#) on page 1552
- [graceful-restart \(Protocols RSVP\)](#) on page 1553
- [hello-acknowledgements](#) on page 1554
- [hello-interval \(Protocols RSVP\)](#) on page 1554
- [hop-limit](#) on page 1555
- [interface \(Protocols RSVP\)](#) on page 1556
- [keep-multiplier](#) on page 1558
- [label-switched-path-template \(Multicast\)](#) on page 1559
- [link-protection \(RSVP\)](#) on page 1561
- [load-balance \(Protocols RSVP\)](#) on page 1562
- [max-bypasses](#) on page 1563
- [no-local-reversion](#) on page 1564
- [node-hello](#) on page 1565
- [no-adjacency-down-notification \(Protocols IS-IS\)](#) on page 1566
- [no-cspf \(Protocols RSVP\)](#) on page 1567
- [no-enhanced-frr-profile \(Protocols RSVP\)](#) on page 1567

- [no-interface-hello](#) on page 1568
- [no-neighbor-down-notification](#) on page 1569
- [no-node-id-subobject](#) on page 1569
- [no-p2mp-sublsp](#) on page 1570
- [node-link-protection \(Protocols MPLS\)](#) on page 1570
- [optimize-timer \(Protocols RSVP\)](#) on page 1571
- [path \(Protocols RSVP\)](#) on page 1572
- [peer-interface \(Protocols RSVP\)](#) on page 1573
- [preemption](#) on page 1574
- [priority \(Protocols RSVP\)](#) on page 1575
- [refresh-time](#) on page 1576
- [reliable](#) on page 1577
- [rsvp](#) on page 1578
- [rsvp-te \(Routing Options\)](#) on page 1579
- [setup-protection](#) on page 1579
- [soft-preemption \(Protocols RSVP\)](#) on page 1580
- [static-label-switched-path](#) on page 1581
- [subscription](#) on page 1582
- [traceoptions \(Protocols RSVP\)](#) on page 1583
- [transit](#) on page 1585
- [tunnel-services \(RSVP\)](#) on page 1586
- [ultimate-hop-popping](#) on page 1587
- [update-threshold](#) on page 1588

## admin-group

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>admin-group {   exclude [ <i>group-names</i> ];   include-all [ <i>group-names</i> ];   include-any [ <i>group-names</i> ]; }</pre>                                                                                                                                                                                                                                                                                                        |
| <b>Hierarchy Level</b>          | <pre>[edit logical-systems <i>logical-system-name</i> protocols rsvp interface <i>interface-name</i> link-protection], [edit logical-systems <i>logical-system-name</i> protocols rsvp interface <i>interface-name</i> link-protection bypass <i>bypass-name</i>], [edit protocols rsvp interface <i>interface-name</i> link-protection], [edit protocols rsvp interface <i>interface-name</i> link-protection bypass <i>bypass-name</i>]</pre> |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.2.                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Description</b>              | <p>Enable you to configure administrative groups for bypass label-switched paths (LSPs). You can configure administrative groups either globally for all bypass LSPs traversing an interface or for just a specific bypass LSP.</p>                                                                                                                                                                                                             |
| <b>Options</b>                  | <p><b>exclude <i>group-names</i></b>—Specify the administrative groups to exclude for a bypass LSP.</p> <p><b>include-all <i>group-names</i></b>—Specify the administrative groups whose links the bypass LSP must traverse.</p> <p><b>include-any <i>group-names</i></b>—Specify the administrative groups whose links the bypass LSP can traverse.</p>                                                                                        |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                  |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring Administrative Groups for Bypass LSPs on page 538</a></li> </ul>                                                                                                                                                                                                                                                                                                               |

## aggregate (Protocols RSVP)

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | (aggregate   no-aggregate);                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols rsvp peer-interface <i>peer-interface-name</i> ],<br>[edit protocols rsvp peer-interface <i>peer-interface-name</i> ]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Description</b>              | <p>Control the use of RSVP aggregate messages on an interface or peer interface, as described below.</p> <p>Note that starting in Junos OS Release 15.2, this statement has been deprecated at the [edit protocols rsvp interface <i>interface-name</i>] and [edit logical-systems <i>logical-system-name</i> protocols rsvp interface <i>interface-name</i>] hierarchy levels for MX Series and PTX Series routers.</p> <ul style="list-style-type: none"><li>• <b>aggregate</b>—Use RSVP aggregate messages.</li><li>• <b>no-aggregate</b>—Do not use RSVP aggregate messages.</li></ul> <p>Aggregate messages can pack multiple RSVP messages into a single transmission, thereby reducing network overhead and enhancing efficiency. The number of supportable sessions and processing overhead are significantly improved when aggregation is enabled.</p> <p>Not all routers connected to a subnet need to support aggregation simultaneously. Each RSVP router negotiates its intention to use aggregate messages on a per-neighbor basis. Only when both routers agree are aggregate messages sent.</p> <p>To have refresh reduction and reliable delivery, you must include the <b>aggregate</b> and <b>reliable</b> statements.</p> |
| <b>Default</b>                  | Aggregation is disabled.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring RSVP Refresh Reduction on page 503</a></li><li>• <a href="#">reliable on page 1577</a></li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |

## authentication-key (Protocols RSVP)

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | authentication-key <i>key</i> ;                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols rsvp interface <i>interface-name</i> ],<br>[edit logical-systems <i>logical-system-name</i> protocols rsvp peer-interface <i>peer-interface-name</i> ],<br>[edit protocols rsvp],<br>[edit protocols rsvp interface <i>interface-name</i> ],<br>[edit protocols rsvp peer-interface <i>peer-interface-name</i> ]                                                                                                                                                                                                                                  |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Description</b>              | <p>Authentication key (password). Neighboring routers use the password to verify the authenticity of packets sent from this interface or peer interface. To authenticate node hellos or remote messages between the Point of Local Repair (PLR) to the Merge Point (MP), enable <b>authentication-key</b> at the [edit protocols rsvp] hierarchy level.</p> <p>RSVP uses HMAC-MD5 authentication, which is defined in RFC 2104, <i>HMAC: Keyed-Hashing for Message Authentication</i>.</p> <p>All routers that are connected to the same IP subnet must use the same authentication scheme and password.</p> |
| <b>Options</b>                  | <b>key</b> —Authentication password. It can be 1 through 16 contiguous digits or letters. Separate decimal digits with periods. Separate hexadecimal digits with periods and precede the string with 0x. If you include spaces in the password, enclose the entire password in quotation marks (" ").                                                                                                                                                                                                                                                                                                        |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring RSVP Authentication on page 506</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |

## bandwidth (Protocols RSVP)

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>bandwidth <i>bps</i>;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Hierarchy Level</b>          | <code>[edit logical-systems <i>logical-system-name</i> protocols rsvp interface <i>interface-name</i>],</code><br><code>[edit logical-systems <i>logical-system-name</i> protocols rsvp interface <i>interface-name</i></code><br><code>link-protection],</code><br><code>[edit logical-systems <i>logical-system-name</i> protocols rsvp interface <i>interface-name</i></code><br><code>link-protection bypass <i>bypass-name</i>],</code><br><code>[edit protocols rsvp interface <i>interface-name</i>],</code><br><code>[edit protocols rsvp interface <i>interface-name</i> link-protection],</code><br><code>[edit protocols rsvp interface <i>interface-name</i> link-protection bypass <i>bypass-name</i>]</code> |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Description</b>              | <p>For certain logical interfaces (such as Asynchronous Transfer Mode [ATM], Permanent Virtual Circuit [PVC], or Frame Relay), you cannot determine the correct bandwidth from the hardware. This statement enables you to specify the actual available bandwidth.</p> <p>This statement also enables you to specify the bandwidth for a bypass label switched path (LSP). If you have configured multiple bypasses, this statement is mandatory and is applied to all of the bypass LSPs.</p>                                                                                                                                                                                                                             |
| <b>Default</b>                  | The hardware raw bandwidth is used.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Options</b>                  | <p><b><i>bps</i></b>—Bandwidth in bits per second. You can specify this as an integer value. If you do so, count your zeros carefully, or you can use the abbreviations <b>k</b> (for a thousand), <b>m</b> (for a million), or <b>g</b> (for a billion [also called a thousand million]).</p> <p><b>Range:</b> Any positive integer</p> <p><b>Default:</b> 0 (no bandwidth is reserved)</p>                                                                                                                                                                                                                                                                                                                               |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring the Bandwidth for Bypass LSPs on page 538</a></li><li>• <a href="#">Configuring Link Protection on Interfaces Used by LSPs on page 536</a></li><li>• <a href="#">Configuring Bypass LSPs on page 537</a></li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                                         |

## bypass (Signaled LSP)

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre> bypass <i>bypass-name</i> {     <b>bandwidth</b> <i>bps</i>;     <b>description</b> <i>text</i>;     <b>hop-limit</b> <i>number</i>;     <b>no-cspf</b>;     <b>path</b> <i>address</i> &lt;strict   loose&gt;;     <b>priority</b> <i>setup-priority reservation-priority</i>;     <b>to address</b>; } </pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Hierarchy Level</b>          | <p>[edit logical-systems <i>logical-system-name</i> protocols rsvp interface <i>interface-name</i> link-protection],</p> <p>[edit protocols rsvp interface <i>interface-name</i> link-protection]</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Release Information</b>      | <p>Statement introduced before Junos OS Release 7.4.</p> <p>The <b>description</b> option was added in Junos OS Release 10.4.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Description</b>              | <p>Enables you to configure specific bandwidth and path constraints for a bypass LSP. It is possible to individually configure multiple bypass LSPs. If you do not configure the bypass LSPs individually, they all share the same path and bandwidth constraints.</p> <p>If you specify the <b>bandwidth</b>, <b>hop-limit</b>, and <b>path</b> statements for the bypass LSP, these values take precedence over the values configured at the [edit protocols rsvp interface <i>interface-name</i> link-protection] hierarchy level. The other attributes (<b>subscription</b>, <b>no-node-protection</b>, and <b>optimize-timer</b>) are inherited from the general constraints.</p>                                                                                                                                                                                                                                                                                                           |
| <b>Options</b>                  | <p><b>bypass-name</b>—(Required) Specify a name for the bypass LSP. The name can be up to 64 characters.</p> <p><b>description</b>—Provides a textual description of the bypass LSP. Enclose any descriptive text that includes spaces in quotation marks (" "). Any descriptive text you include is displayed in the output of the <b>show mpls lsp bypass detail</b> command and has no effect on the operation of the bypass LSP. The description text can be no more than 80 characters in length.</p> <p><b>to address</b>—(Required) Specify the address for the interface of the immediate next-hop node (for link protection) or the next-next-hop node (for node-link protection). The address specified determines whether this is a link protection bypass or a node-link protection bypass. On multiaccess networks (for example, a LAN), this address is also used to specify which next-hop node is being protected.</p> <p>The remaining statements are explained separately.</p> |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring Bypass LSPs on page 537</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |

## bypass (Static LSP)

---

|                                 |                                                                                                                                                                                                                                                                                    |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>bypass <i>bypass-name</i> {<br/>    bandwidth <i>bps</i>;<br/>    description <i>string</i>;<br/>    next-hop (<i>address</i>   <i>interface-name</i>   <i>address/interface-name</i>);<br/>    push <i>out-label</i>;<br/>    to <i>address</i>;<br/>}</pre>                 |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls static-label-switched-path <i>lsp-name</i> ],<br>[edit protocols mpls static-label-switched-path <i>lsp-name</i> ]                                                                                                 |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 10.1.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                         |
| <b>Description</b>              | <p>Configure specific bandwidth and path constraints for a bypass ingress LSP. It is possible to configure multiple bypass LSPs individually. If you do not, they all share the same path and bandwidth constraints.</p> <p>The remaining statements are explained separately.</p> |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring Static LSPs on page 299</a></li></ul>                                                                                                                                                                              |



## class-of-service (Protocols RSVP)

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>class-of-service <i>cos-value</i>;</code>                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Hierarchy Level</b>          | <p>[edit logical-systems <i>logical-system-name</i> protocols rsvp interface <i>interface-name</i> link-protection],</p> <p>[edit logical-systems <i>logical-system-name</i> protocols rsvp interface <i>interface-name</i> link-protection bypass <i>bypass-name</i>],</p> <p>[edit protocols rsvp interface <i>interface-name</i> link-protection],</p> <p>[edit protocols rsvp interface <i>interface-name</i> link-protection bypass <i>bypass-name</i>]</p> |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Description</b>              | <p>Class-of-service (CoS) value given to all packets in the bypass LSP. You can specify a single CoS value for all the bypass LSPs traversing an interface. You can also configure CoS values for specific bypass LSPs traversing an interface.</p> <p>The CoS value might affect the scheduling or queuing algorithm of traffic traveling along an LSP.</p>                                                                                                     |
| <b>Options</b>                  | <p><b><i>cos-value</i></b>—CoS value. A higher value typically corresponds to a higher level of service.</p> <p><b>Range:</b> 0 through 7</p> <p><b>Default:</b> If you do not specify a CoS value, the IP precedence bits from the packet's IP header are used as the packet's CoS value.</p>                                                                                                                                                                   |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                   |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring Class of Service for Bypass LSPs on page 539</a></li> </ul>                                                                                                                                                                                                                                                                                                                                     |

## destination-networks

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>destination-networks <i>prefix</i>;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Hierarchy Level</b>          | <code>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> routing-options dynamic-tunnels <i>tunnel-name</i>],</code><br><code>[edit logical-systems <i>logical-system-name</i> routing-options dynamic-tunnels <i>tunnel-name</i> rsvp-te <i>entry</i>],</code><br><code>[edit logical-systems <i>logical-system-name</i> routing-options dynamic-tunnels <i>tunnel-name</i>],</code><br><code>[edit routing-instances <i>routing-instance-name</i> routing-options dynamic-tunnels <i>tunnel-name</i>],</code><br><code>[edit routing-instances <i>routing-instance-name</i> routing-options dynamic-tunnels <i>tunnel-name</i> rsvp-te <i>entry</i>],</code><br><code>[edit routing-options dynamic-tunnels <i>tunnel-name</i>],</code><br><code>[edit routing-options dynamic-tunnels <i>tunnel-name</i> rsvp-te <i>entry</i>]</code> |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3 for ACX Series routers.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Description</b>              | Specify the IPv4 prefix range for the destination network. Only tunnels within the specified IPv4 prefix range can be created.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Options</b>                  | <i>prefix</i> —Destination prefix of the network.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Required Privilege Level</b> | <code>routing</code> —To view this statement in the configuration.<br><code>routing-control</code> —To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <i>Configuring GRE Tunnels for Layer 3 VPNs</i></li><li>• <i>Configuring Dynamic Tunnels</i></li><li>• <a href="#">Configuring RSVP Automatic Mesh on page 515</a></li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |

## devices

---

|                                 |                                                                                                                                                                                                                                      |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>devices <i>device-names</i>;</code>                                                                                                                                                                                            |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols rsvp],<br>[edit protocols rsvp]                                                                                                                                           |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 8.1.                                                                                                                                                                                        |
| <b>Description</b>              | Specifies one of the virtual tunnel (VT) interfaces to de-encapsulate the egress traffic for ultimate-hop popping on point-to-multipoint LSPs. If no device is specified, the selection process is performed automatically.          |
| <b>Default</b>                  | The device selection process is performed automatically if no device is configured. Junos OS selects one of the available VT interfaces to de-encapsulate the egress traffic.                                                        |
| <b>Options</b>                  | <b><i>device-names</i></b> —Specify which VT interfaces are used to handle the RSVP traffic.<br><b>Range:</b> 0 to 8 devices                                                                                                         |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                  |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Enabling Ultimate-Hop Popping on Point-to-Multipoint LSPs on page 523</a></li> <li>• <a href="#">Understanding Redundant Virtual Tunnel Interfaces in MBGP MVPNs</a></li> </ul> |

## disable (Protocols RSVP)

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | disable;                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols rsvp],<br>[edit logical-systems <i>logical-system-name</i> protocols rsvp graceful-restart],<br>[edit logical-systems <i>logical-system-name</i> protocols rsvp interface <i>interface-name</i> ],<br>[edit logical-systems <i>logical-system-name</i> protocols rsvp interface <i>interface-name</i> link-protection],<br>[edit logical-systems <i>logical-system-name</i> protocols rsvp peer-interface <i>peer-interface-name</i> ],<br>[edit protocols rsvp],<br>[edit protocols rsvp graceful-restart],<br>[edit protocols rsvp interface <i>interface-name</i> ],<br>[edit protocols rsvp interface <i>interface-name</i> link-protection],<br>[edit protocols rsvp peer-interface <i>peer-interface-name</i> ] |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Description</b>              | Explicitly disable RSVP or RSVP graceful restart. Explicitly disable link protection on the specified interface.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Default</b>                  | RSVP is enabled on interfaces and peer interfaces configured with the RSVP <b>interface</b> statement. RSVP graceful restart is enabled on the router. Link protection is disabled.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Minimum RSVP Configuration on page 501</a></li><li>• <a href="#">Configuring RSVP Graceful Restart on page 548</a></li><li>• <a href="#">Configuring Link Protection on Interfaces Used by LSPs on page 536</a></li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |

## dynamic-bidirectional-transport

---

|                                 |                                                                                                                                                                          |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>dynamic-bidirectional-transport {<br/>    template <i>template</i>;<br/>}</code>                                                                                   |
| <b>Hierarchy Level</b>          | <code>[edit protocols rsvp peer-interface <i>peer-interface-name</i>]</code>                                                                                             |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 14.2.                                                                                                                           |
| <b>Description</b>              | Enable the dynamic setup of associated bidirectional packet LSP for transporting non-packet Generalized Multiprotocol Label Switching (GMPLS) label-switched path (LSP). |
| <b>Options</b>                  | <b>template <i>template</i></b> —Name of the template for the dynamic bidirectional packet LSP.                                                                          |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                      |

## fast-reroute (Protocols RSVP)

---

|                                 |                                                                                                                                                                                                    |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>fast-reroute optimize-timer <i>seconds</i>;</code>                                                                                                                                           |
| <b>Hierarchy Level</b>          | <code>[edit logical-systems <i>logical-system-name</i> protocols rsvp],<br/>[edit protocols rsvp]</code>                                                                                           |
| <b>Release Information</b>      | Statement added in Junos OS Release 7.5.<br>Statement introduced in Junos OS Release 14.1 for the QFX Series.                                                                                      |
| <b>Description</b>              | Configure the optimize timer for fast reroute. The optimize timer triggers a periodic optimization process that recomputes the fast reroute detour LSPs to use network resources more efficiently. |
| <b>Options</b>                  | <b><i>seconds</i></b> —Specify the number of seconds between fast reroute detour LSP optimizations.<br><b>Range:</b> 0 through 65,535 seconds<br><b>Default:</b> 0 (disabled)                      |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring the Optimization Interval for Fast Reroute Paths on page 256</a></li> </ul>                                                       |

## graceful-deletion-timeout

---

|                                 |                                                                                                                                                    |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>graceful-deletion-timeout <i>seconds</i>;</code>                                                                                             |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols rsvp],<br>[edit protocols rsvp]                                                         |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                          |
| <b>Description</b>              | Specify the time, in seconds, before completing graceful deletion of signaling.                                                                    |
| <b>Options</b>                  | <b><i>seconds</i></b> —Time before completing graceful deletion of signaling.<br><b>Range:</b> 1 through 300 seconds<br><b>Default:</b> 30 seconds |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring the Graceful Deletion Timeout Interval on page 787</a></li></ul>                   |

## graceful-restart (Protocols RSVP)

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre> graceful-restart {   disable;   helper-disable;   maximum-helper-recovery-time <i>seconds</i>;   maximum-helper-restart-time <i>seconds</i>; }</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> routing-options],<br>[edit protocols rsvp],<br>[edit routing-options]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Description</b>              | Configure graceful restart on the router. You must configure the <b>graceful-restart</b> statement at the [edit routing-options] hierarchy level to enable graceful restart on the router.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Options</b>                  | <p><b>disable</b>—Disable graceful restart on the router or for RSVP.</p> <p><b>helper-disable</b>—Disable RSVP graceful restart helper mode (this option is only available at the [edit protocols rsvp] hierarchy level).</p> <p><b>Default:</b> Helper mode is enabled by default.</p> <p><b>maximum-helper-recovery-time <i>seconds</i></b>—The maximum length of time the router stores the state of neighboring routers when they undergo a graceful restart. The value applies to all neighboring routers, so it should be based on the time that the slowest RSVP neighbor requires for restart.</p> <p><b>Default:</b> 180 seconds</p> <p><b>Range:</b> 1 through 3600 seconds</p> <p><b>maximum-helper-restart-time <i>seconds</i></b>—The maximum length of time the router waits between when it discovers that a neighboring router has gone down and when it declares the neighbor down. This value is applied to all neighboring routers, so it should be based on the time that the slowest RSVP neighbor requires for restart.</p> <p><b>Default:</b> 20 seconds</p> <p><b>Range:</b> 1 through 1800 seconds</p> |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring RSVP Graceful Restart on page 548</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |

## hello-acknowledgements

---

|                                 |                                                                                                                                                                                                                                                                                                                                  |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | hello-acknowledgements;                                                                                                                                                                                                                                                                                                          |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-systems-name</i> protocols rsvp],<br>[edit protocols rsvp]                                                                                                                                                                                                                                      |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 10.2.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                                                                           |
| <b>Description</b>              | Enable hello messages from nonsession neighbors to be acknowledged with a hello acknowledgment message. Once hello acknowledgments are enabled, the router continues to acknowledge hello messages from any nonsession RSVP neighbors unless the interface itself goes down or the configuration is changed by an administrator. |
| <b>Default</b>                  | Hello acknowledgments are disabled.                                                                                                                                                                                                                                                                                              |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                              |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring Hello Acknowledgments for Nonsession RSVP Neighbors on page 512</a></li></ul>                                                                                                                                                                                    |

## hello-interval (Protocols RSVP)

---

|                                 |                                                                                                                                                                                                                                                                                                                                                   |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | hello-interval <i>seconds</i> ;                                                                                                                                                                                                                                                                                                                   |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols rsvp interface <i>interface-name</i> ],<br>[edit logical-systems <i>logical-system-name</i> protocols rsvp peer-interface <i>peer-interface-name</i> ],<br>[edit protocols rsvp interface <i>interface-name</i> ],<br>[edit protocols rsvp peer-interface <i>peer-interface-name</i> ] |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                                                                                         |
| <b>Description</b>              | Enable the sending of hello packets on the interface.                                                                                                                                                                                                                                                                                             |
| <b>Options</b>                  | <b><i>seconds</i></b> —Length of time between hello packets. A value of 0 disables the sending of hello packets on the interface.<br><b>Range:</b> 1 through 60 seconds<br><b>Default:</b> 9 seconds                                                                                                                                              |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                               |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring the RSVP Hello Interval on page 505</a></li></ul>                                                                                                                                                                                                                                 |



## hop-limit

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>hop-limit <i>number</i>;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Hierarchy Level</b>          | <p>[edit logical-systems <i>logical-system-name</i> protocols mpls],<br/> [edit logical-systems <i>logical-system-name</i> protocols mpls <a href="#">label-switched-path</a> <i>lsp-name</i>],<br/> [edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i> <a href="#">fast-reroute</a>],<br/> [edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i> (<a href="#">primary</a>   <a href="#">secondary</a>) <i>path-name</i>],<br/> [edit logical-systems <i>logical-system-name</i> protocols rsvp interface <i>interface-name</i> link-protection],<br/> [edit logical-systems <i>logical-system-name</i> protocols rsvp interface <i>interface-name</i> link-protection bypass <i>bypass-name</i>],<br/> [edit protocols mpls],<br/> [edit protocols mpls <a href="#">label-switched-path</a> <i>lsp-name</i>],<br/> [edit protocols mpls label-switched-path <i>lsp-name</i> <a href="#">fast-reroute</a>],<br/> [edit protocols mpls label-switched-path <i>lsp-name</i> (<a href="#">primary</a>   <a href="#">secondary</a>) <i>path-name</i>],<br/> [edit protocols rsvp interface <i>interface-name</i> link-protection],<br/> [edit protocols rsvp interface <i>interface-name</i> link-protection bypass <i>bypass-name</i>]</p> |
| <b>Release Information</b>      | <p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Description</b>              | <p>Specify the maximum number of routers that an LSP can traverse. This limit can be applied to any of the following:</p> <ul style="list-style-type: none"> <li>• LSPs—The configured hop limit includes the ingress and egress routers. You can specify a hop limit for an LSP and for both primary and secondary paths.</li> <li>• Fast reroute detour—Specify the number of additional routers a fast reroute detour can traverse relative to the protected LSP. For example, if an LSP traverses 4 routers, any detour for the LSP can be no more than 10 router hops, including the ingress and egress routers.</li> <li>• Link protection bypass—Specify the maximum number of routers that a link protection bypass can traverse.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Options</b>                  | <p><b><i>number</i></b>—Maximum number of hops.</p> <p><b>Range:</b> 2 through 255 (for an LSP or for a link protection bypass); 0 through 255 (for fast reroute)</p> <p><b>Default:</b> 255 (for an LSP or for a link protection bypass); 6 (for fast reroute)</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring Fast Reroute on page 254</a></li> <li>• <a href="#">Limiting the Number of Hops in LSPs on page 285</a></li> <li>• <a href="#">Configuring the Hop Limit for Bypass LSPs on page 539</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |

## interface (Protocols RSVP)


```
Syntax  interface interface-name {
        disable;
        (aggregate | no-aggregate);
        authentication-key key;
        bandwidth bps;
        hello-interval seconds;
        link-protection {
            disable;
            admin-group {
                exclude [ group-names ];
                include-all [ group-names ];
                include-any [ group-names ];
            }
            bandwidth bps;
            bypass bypass-name {
                bandwidth bps {
                    ct0 bps;
                    ct1 bps;
                    ct2 bps;
                    ct3 bps;
                }
                description text;
                class-of-service cos-value;
                hop-limit number;
                no-cspf;
                path address <strict | loose>;
                priority setup-priority reservation-priority;
                to address;
            }
            class-of-service cos-value;
            hop-limit number;
            max-bypasses number;
            no-cspf;
            no-node-protection;
            optimize-timer seconds;
            path address <strict | loose>;
            priority setup-priority reservation-priority;
            subscription percentage;
        }
        (reliable | no-reliable);
        subscription percentage {
            ct0 percentage;
            ct1 percentage;
            ct2 percentage;
            ct3 percentage;
        }
        update-threshold threshold;
    }
```

Hierarchy Level [edit logical-systems *logical-system-name* protocols rsvp],  
[edit protocols rsvp]

|                                 |                                                                                                                                                                                                                                                                                       |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                             |
| <b>Description</b>              | Enable RSVP on one or more router interfaces.                                                                                                                                                                                                                                         |
| <b>Default</b>                  | RSVP is disabled on all interfaces.                                                                                                                                                                                                                                                   |
| <b>Options</b>                  | <p><b><i>interface-name</i></b>—Name of an interface. To configure all interfaces, specify <b>all</b>. For details about specifying interfaces, see the <i>Junos OS Network Interfaces Library for Routing Devices</i>.</p> <p>The remaining statements are explained separately.</p> |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                   |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Minimum RSVP Configuration on page 501</a></li></ul>                                                                                                                                                                              |

## keep-multiplier

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>keep-multiplier <i>number</i>;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols rsvp],<br>[edit protocols rsvp]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Description</b>              | <p>Set the keep multiplier value.</p> <p>Starting in Junos OS Release 16.1, for MX Series routers and PTX Series routers, the default RSVP message refresh time, to which this multiplier is applied, has increased from 30 seconds to 20 minutes. The higher message refresh time provides support for RSVP Refresh Reduction Extensions, and improved scaling for MPLS traffic-engineered LSPs, as defined in RFC 2961. The changes are backward compatible so if any nodes in the two-hop neighborhood do not support the higher refresh time, the updated node will automatically fall back to the previous default refresh time to prevent error or tear down messages.</p> |
| <b>Options</b>                  | <p><i>number</i>—Multiplier value.</p> <p><b>Range:</b> 1 through 255</p> <p><b>Default:</b> 3</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|                                 | <div> <b>NOTE:</b> For MX Series routers and PTX Series routers (running Junos OS release 16.1 or later), this multiplier is applied to a default refresh time of 20 minutes. In earlier Junos OS releases, and for other platforms, the default refresh time remains 30 seconds.</div>                                                                                                                                                                                                                                                                                                       |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring Timers for RSVP Refresh Messages on page 516</a></li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |

## label-switched-path-template (Multicast)

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>label-switched-path-template {   (default-template   <i>lsp-template-name</i>); }</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Hierarchy Level</b>          | <p>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> provider-tunnel rsvp-te],</p> <p>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> provider-tunnel ingress-replication label-switched-path],</p> <p>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> provider-tunnel selective group <i>address</i> source <i>source-address</i> rsvp-te],</p> <p>[edit logical-systems <i>logical-system-name</i> routing-options dynamic-tunnels <i>tunnel-name</i> rsvp-te <i>entry-name</i>],</p> <p>[edit protocols mvpn inter-region-segmented template <i>template-name</i> region <i>region-name</i> ingress-replication label-switched-path],</p> <p>[edit protocols mvpn inter-region-segmented template <i>template-name</i> region <i>region-name</i> rsvpe-te],</p> <p>[edit protocols mvpn inter-region-template template <i>template-name</i> all-regions ingress-replication label-switched-path],</p> <p>[edit protocols mvpn inter-region-template template <i>template-name</i> all-regions rsvp-te],</p> <p>[edit routing-instances <i>routing-instance-name</i> provider-tunnel ingress-replication label-switched-path],</p> <p>[edit routing-instances <i>routing-instance-name</i> provider-tunnel rsvp-te],</p> <p>[edit routing-instances <i>routing-instance-name</i> provider-tunnel selective group <i>address</i> source <i>source-address</i> rsvp-te],</p> <p>[edit routing-options dynamic-tunnels <i>tunnel-name</i> rsvp-te <i>entry-name</i>]</p> |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 8.5.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Description</b>              | <p>Specify the LSP template. An LSP template is used as the basis for other dynamically generated LSPs. This feature can be used for a number of applications, including point-to-multipoint LSPs, flooding VPLS traffic, configuring ingress replication for IP multicast using MBGP MVPNs, and to enable RSVP automatic mesh. There is no default setting for the <b>label-switched-path-template</b> statement, so you must configure either the default-template using the <b>default-template</b> option, or you must specify the name of your preconfigured LSP template.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Options</b>                  | <p><b>default-template</b>—Specify that the default LSP template be used for the dynamically generated LSPs.</p> <p><b><i>lsp-template-name</i></b>—Specify the name of an LSP to be used as a template for the dynamically generated LSPs.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <i>Example: Configuring Ingress Replication for IP Multicast Using MBGP MVPNs</i></li> <li>• <i>Configuring Point-to-Multipoint LSPs for an MBGP MVPN</i></li> <li>• <i>Flooding Unknown Traffic Using Point-to-Multipoint LSPs in VPLS</i></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |

- [Configuring RSVP Automatic Mesh on page 515](#)

## link-protection (RSVP)

|                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | <pre> link-protection {   disable;   admin-group {     exclude [ group-names ];     include-all [ group-names ];     include-any [ group-names ];   }   bandwidth bps;   bypass bypass-name {     bandwidth bps {       ct0 bps;       ct1 bps;       ct2 bps;       ct3 bps;     }     description text;     class-of-service cos-value;     hop-limit number;     no-cspf;     path address &lt;strict   loose&gt;;     priority setup-priority reservation-priority;     to address;   }   class-of-service cos-value;   hop-limit number;   max-bypasses number;   no-cspf;   no-node-protection;   optimize-timer seconds;   path address &lt;strict   loose&gt;;   priority setup-priority reservation-priority;   subscription percentage; } </pre> |
| <b>Hierarchy Level</b>     | [edit logical-systems <i>logical-system-name</i> protocols rsvp interface <i>interface-name</i> ],<br>[edit protocols rsvp interface <i>interface-name</i> ]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Release Information</b> | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 14.1X53-D10 for the QFX Series and for EX4600 switches.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Description</b>         | Enable link protection on the specified interface. Using link protection, you can configure a network to reroute traffic quickly around broken links. To fully enable link protection, you also need to configure the <b>link-protection</b> statement at the [edit protocols mpls label-switched-path <i>lsp-name</i> ] hierarchy level. You can configure single or multiple bypasses for protected interface.                                                                                                                                                                                                                                                                                                                                           |
| <b>Default</b>             | Link protection is disabled.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |

**Options**    **no-node-protection**—Disable node-link protection on the RSVP interface. Link protection remains active. When this option is configured, the router can only initiate a next-hop bypass, not a next-next-hop bypass.

The remaining statements are explained separately.

**Required Privilege Level**    routing—To view this statement in the configuration.  
                                         routing-control—To add this statement to the configuration.

**Related Documentation**    • [Configuring Link Protection on Interfaces Used by LSPs on page 536](#)  
                                         • [link-protection \(Dynamic LSPs\) on page 1457](#)

---

## load-balance (Protocols RSVP)

---

**Syntax**    load-balance {  
                 bandwidth;  
                 }

**Hierarchy Level**    [edit logical-systems *logical-system-name* protocols rsvp],  
                                 [edit protocols rsvp]

**Release Information**    Statement introduced before Junos OS Release 7.4.  
                                 Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

**Description**    Load-balance traffic between RSVP LSPs.

**Options**    **bandwidth**—Load-balance traffic between RSVP LSPs based on the bandwidth configured for each LSP.

**Required Privilege Level**    routing—To view this statement in the configuration.  
                                         routing-control—To add this statement to the configuration.

**Related Documentation**    • [Configuring Load Balancing Across RSVP LSPs on page 514](#)



## max-bypasses

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>max-bypasses <i>number</i>;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Hierarchy Level</b>          | <code>[edit logical-systems <i>logical-system-name</i> protocols rsvp interface <i>interface-name</i>],</code><br><code>[edit protocols rsvp interface <i>interface-name</i>]</code>                                                                                                                                                                                                                                                                                                                              |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Range modified in Junos OS Release 9.3.                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Description</b>              | Specify the maximum number of dynamic bypass LSPs permitted for protecting this interface. When this option is configured, multiple bypasses for link protection are enabled. Call admission control (CAC) is also enabled. The limit on bypasses configured applies only to dynamically generated bypass LSPs. By default, this option is disabled and only one dynamic bypass LSP is enabled for each interface. If you configure <b>max-bypasses</b> , you must also configure the <b>bandwidth</b> statement. |
| <b>Options</b>                  | <b>number</b> —Configure the maximum number of bypass LSPs. If you configure a value of 0, no dynamic bypass LSPs are allowed to be established for the interface. Only static bypass LSPs can be configured.<br><b>Range:</b> 0 through 99<br><b>Default:</b> 1                                                                                                                                                                                                                                                  |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring the Maximum Number of Bypass LSPs on page 540</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                     |

## no-local-reversion

---

|                            |                                                                                                                         |
|----------------------------|-------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | local-reversion;<br>no-local-reversion;                                                                                 |
| <b>Hierarchy Level</b>     | [edit logical-systems <i>logical-system-name</i> protocols rsvp],<br>[edit protocols rsvp]                              |
| <b>Release Information</b> | Statement introduced in Junos OS Release 10.4.                                                                          |
| <b>Description</b>         | Disable RSVP local revertive mode as specified in RFC 4090, <i>Fast Reroute Extensions to RSVP-TE for LSP Tunnels</i> . |



**NOTE:** For Junos OS Release 16.1 running on MX Series or PTX Series routers, **no-local-reversion** is enabled by default, that is, local reversion is not running, and the statement has been deprecated. To enable local reversion, use the **local-reversion** statement.

---



RSVP local revertive mode is supported on all Juniper Networks routers running Junos OS. It is the default behavior. If you include this statement, the Juniper Networks router uses global revertive mode instead. You might need to disable RSVP local revertive mode on Juniper Networks routers if your network includes equipment that does not support this mode.

The following information can also be found in RFC 4090. Refer to the RFC for additional information. When an LSP fails, the connection can be repaired locally using a traffic protection mechanism such as fast reroute. To restore the LSP to a full working path, RFC 4090 specifies the following strategies:

- Local revertive mode—Upon detecting that the path is restored, the point of local repair (PLR) resignals each of the LSPs that were formerly routed over the restored path. Every LSP successfully resingaled along the restored path is switched back.
- Global revertive mode—The ingress router of each tunnel is responsible for reoptimizing the LSPs that used the failed path. There are several potential reoptimization triggers: RSVP error messages, inspection of OSPF LSAs or IS-IS LSPs, and timers. This re-optimization process can proceed as soon as the failure is detected. It is not tied to the restoration of the failed path.

|                           |                                                             |
|---------------------------|-------------------------------------------------------------|
| <b>Required Privilege</b> | routing—To view this statement in the configuration.        |
| <b>Level</b>              | routing-control—To add this statement to the configuration. |

## node-hello

|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |                                                                                                                                                                                                                                                                                                                                                                                          |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | (node-hello   no-node-hello);                                                                                                                                                                                                                                                                                                                                                            |
| <b>Hierarchy Level</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | [edit logical-systems <i>logical-system-name</i> protocols rsvp],<br>[edit protocols rsvp]                                                                                                                                                                                                                                                                                               |
| <b>Release Information</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | Statement introduced in Junos OS Release 10.0.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                                                                                                                                   |
| <b>Description</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | Enable node-ID based RSVP hellos globally on all of the RSVP interfaces on the router to allow Juniper Networks routers to interoperate with the equipment of other vendors. By default, the Junos OS uses interface-based RSVP hellos; node-ID based RSVP hellos are disabled. If you have not enabled RSVP node IDs on the router, Junos OS does not accept any node-ID hello packets. |
| <div>  <p><b>NOTE:</b> For Junos OS Release 16.1 running on MX Series or PTX Series routers, when using enhanced FRR, node-ID based hellos are enabled by default. Disabling the enhanced fast reroute (FRR) profile by using the <a href="#">no-enhanced-frr-profile</a> command also disables the node-hello command. To re-enable node hellos after the enhanced FRR profile has been disabled, use the node-hello command.</p> </div> |                                                                                                                                                                                                                                                                                                                                                                                          |
| <div>  <p><b>NOTE:</b> If <a href="#">link-protection</a> is enabled, remote node hellos that are initiated by the Point of Local Repair (PLR) to Node Protecting Merge Point (NP-MP) are enabled automatically. Similarly, if no-enhanced-frr-profile is enabled (that is, enhanced FRR is off), remote node hellos are automatically disabled. There is no command to explicitly enable or disable remote-node hellos.</p> </div>     |                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Required Privilege Level</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                      |
| <b>Related Documentation</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               | <ul style="list-style-type: none"> <li>• <a href="#">Configuring RSVP Node-ID Hellos on page 508</a></li> </ul>                                                                                                                                                                                                                                                                          |

## no-adjacency-down-notification (Protocols IS-IS)

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | no-adjacency-down-notification;                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols isis interface <i>interface-name</i> ],<br>[edit protocols isis interface <i>interface-name</i> ]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 8.0.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Description</b>              | <p>Disable adjacency down notification for IS-IS to allow for migration from IS-IS to OSPF without disruption of the RSVP neighbors and associated RSVP-signaled label-switched paths (LSPs).</p> <p>Whenever IS-IS is deactivated, the IS-IS adjacencies are brought down. IS-IS signals to RSVP to bring down any RSVP neighbors associated with the IS-IS adjacencies, and this further causes the associated LSPs signaled by RSVP to go down as well.</p> <p>A similar process occurs whenever OSPF is deactivated. The OSPF neighbors are brought down. OSPF signals to RSVP to bring down any of the RSVP neighbors associated with the OSPF neighbors, and this further causes the associated LSPs signaled by RSVP to go down as well.</p> <p>If you need to migrate from IS-IS to OSPF or from OSPF to IS-IS, the internal gateway protocol (IGP) notification to RSVP for an adjacency or neighbor down event needs to be ignored. Using the <b>no-adjacency-down-notification</b> or <a href="#">no-neighbor-down-notification</a> statements, you can disable IS-IS adjacency down notification or OSPF neighbor down notification, respectively, until the migration is complete. The network administrator is responsible for configuring the statements before the migration, and then removing them from the configuration afterward, so that IGP notification can function normally.</p> |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">no-neighbor-down-notification on page 1569</a></li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |

## no-cspf (Protocols RSVP)

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | no-cspf;                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols rsvp interface <i>interface-name</i> link-protection],<br>[edit logical-systems <i>logical-system-name</i> protocols rsvp interface <i>interface-name</i> link-protection bypass <i>bypass-name</i> ],<br>[edit protocols rsvp interface <i>interface-name</i> link-protection],<br>[edit protocols rsvp interface <i>interface-name</i> link-protection bypass <i>bypass-name</i> ] |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 7.5.                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Description</b>              | Disable CSPF computation on all bypass LSPs or on a specific bypass LSP. You need to disable CSPF for link protection to function properly on interarea paths.                                                                                                                                                                                                                                                                                  |
| <b>Default</b>                  | CSPF is enabled.                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                             |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Disabling CSPF for Bypass LSPs on page 540</a></li> </ul>                                                                                                                                                                                                                                                                                                                                  |

## no-enhanced-frr-profile (Protocols RSVP)

|                                 |                                                                                                                                                                                                                                                                                            |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | no-enhanced-frr-profile;                                                                                                                                                                                                                                                                   |
| <b>Hierarchy Level</b>          | [edit protocols rsvp ]                                                                                                                                                                                                                                                                     |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 15.2.                                                                                                                                                                                                                                             |
| <b>Description</b>              | Starting in Junos OS Release 15.2R1, for MX Series and PTX Series routers, FRR as specified in RFC 2961, was enabled by default. Enable <b>no-enhanced-frr-profile</b> to turn off the enhanced FRR profile. When disabled, RSVP-TE will run without FRR facility protection enhancements. |
| <b>Default</b>                  | Enhanced FRR is enabled.                                                                                                                                                                                                                                                                   |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                        |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• </li> </ul>                                                                                                                                                                                                                                       |

## no-interface-hello

---

|                            |                                                                                                                        |
|----------------------------|------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | no-interface-hello;                                                                                                    |
| <b>Hierarchy Level</b>     | [edit logical-systems <i>logical-system-name</i> protocols rsvp],<br>[edit protocols rsvp]                             |
| <b>Release Information</b> | Statement introduced in Junos OS Release 10.0.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series. |
| <b>Description</b>         | Explicitly disable RSVP interface hellos globally on the router.                                                       |



**NOTE:** For Junos OS Release 16.1 running on MX Series or PTX Series routers, the behavior of this statement has changed. On these platforms, rather than disabling RSVP interface hellos globally, the `no-interface-hello` command triggers a switch back to the previous profile for all label-switched paths (LSPs.)

---

This type of configuration might be necessary in networks where the Juniper Networks router has numerous RSVP connections with equipment from other vendors. However, if you disable RSVP interface hellos globally, you can also configure a hello interval on an RSVP interface using the [hello-interval](#) statement. This configuration disables RSVP interface hellos globally but enables RSVP interface hellos on the specified interface. This configuration might be necessary in a heterogeneous network where some devices support RSVP node-ID hellos and other devices support RSVP interface hellos.

|                                 |                                                                                                                                                                                      |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                  |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring RSVP Node-ID Hellos on page 508</a></li><li>• <a href="#">hello-interval (Protocols RSVP) on page 1554</a></li></ul> |

## no-neighbor-down-notification

|                                 |                                                                                                                                                                                                      |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | no-neighbor-down-notification;                                                                                                                                                                       |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols ospf area <i>area-id</i> interface <i>interface-name</i> ],<br>[edit protocols ospf area <i>area-id</i> interface <i>interface-name</i> ] |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 8.0.                                                                                                                                                        |
| <b>Description</b>              | Disable neighbor down notification for OSPF to allow for migration from OSPF to IS-IS without disruption of the RSVP neighbors and associated RSVP-signaled LSPs.                                    |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                  |

## no-node-id-subobject

|                            |                                                                                                                       |
|----------------------------|-----------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | no-node-id-subobject;                                                                                                 |
| <b>Hierarchy Level</b>     | [edit logical-systems <i>logical-system-name</i> protocols rsvp],<br>[edit protocols rsvp]                            |
| <b>Release Information</b> | Statement introduced in Junos OS Release 9.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series. |
| <b>Description</b>         | Disable the record route object (RRO) node-ID subobject for compatibility with earlier versions of Junos OS.          |



**NOTE:** For Junos OS Release 16.1 running on MX Series or PTX Series routers, the behavior of this statement has changed. On these platforms, rather than disabling the record route object (RRO) node ID sub-object, the **no-node-id-subobject** command triggers a switch back to the previous profile for all label-switched paths (LSPs).

To interoperate with other vendors' equipment, Junos OS supports the RRO node-ID subobject for use in inter-AS link and node protection configurations.

|                                 |                                                                                                                               |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------|
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.           |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring Inter-AS Node and Link Protection on page 544</a></li> </ul> |

## no-p2mp-sublsp

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | no-p2mp-sublsp;                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols rsvp],<br>[edit protocols rsvp]                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.2.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                                                                                                                                                                                                               |
| <b>Description</b>              | Reject Resv messages that include the S2L_SUB_LSP object. By default, Resv messages that include the S2L_SUB_LSP object are accepted. However, in a network which includes Juniper Networks devices running both Junos OS Release 9.2 and later and Junos OS Release 9.1 and earlier, it is necessary to configure the <b>no-p2mp-sublsp</b> statement on devices running Junos OS Release 9.2 and later to ensure that point-to-multipoint LSPs function properly. |
| <b>Default</b>                  | Resv messages that include the S2L_SUB_LSP object are accepted.                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                 |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Preserving Point-to-Multipoint LSP Functioning with Different Junos OS Releases on page 336</a></li></ul>                                                                                                                                                                                                                                                                                                       |

## node-link-protection (Protocols MPLS)

---

|                                 |                                                                                                                                                                                                                                                                                             |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | node-link-protection;                                                                                                                                                                                                                                                                       |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>lsp-name</i> ],<br>[edit protocols mpls label-switched-path <i>lsp-name</i> ]                                                                                                                        |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 14.1X53-D10 for the QFX Series and for EX4600 switches.                                                                                                                                       |
| <b>Description</b>              | Enable node and link protection on the specified LSP. To fully enable node and link protection, you also need to include the <b>link-protection</b> statement at the [edit protocols rsvp interface <i>interface-name</i> ] hierarchy level.                                                |
| <b>Default</b>                  | Node and link protection is disabled.                                                                                                                                                                                                                                                       |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                         |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring Node Protection or Link Protection for LSPs on page 543</a></li><li>• <a href="#">MPLS Feature Support on QFX Series and EX4600 Switches</a></li><li>• <a href="#">Interprovider and Carrier-of-Carriers VPNs</a></li></ul> |



## optimize-timer (Protocols RSVP)

|                                 |                                                                                                                                                                                                                                                                                                                                                                                         |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>optimize-timer <i>seconds</i>;</code>                                                                                                                                                                                                                                                                                                                                             |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols rsvp interface <i>interface-name</i> link-protection],<br>[edit protocols rsvp interface <i>interface-name</i> link-protection]                                                                                                                                                                                              |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.                                                                                                                                                                                                                                                                                                                                       |
| <b>Description</b>              | Configure an optimize timer for a bypass LSP. The optimize timer initiates a periodic optimization process that reshuffles data LSPs among bypass LSPs to achieve the most efficient use of network resources. The optimization process attempts to either minimize the number of bypasses currently in use, minimize the total amount of bandwidth reserved for all bypasses, or both. |
| <b>Options</b>                  | <p><b><i>seconds</i></b>—Specify the number of seconds between optimizations.</p> <p><b>Range:</b> 0 through 65,535 seconds</p> <p><b>Default:</b> 0 (disabled)</p>                                                                                                                                                                                                                     |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                          |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring the Optimization Interval for Bypass LSPs on page 541</a></li> </ul>                                                                                                                                                                                                                                                   |

## path (Protocols RSVP)

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>path address &lt;strict   loose&gt;;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols rsvp interface <i>interface-name</i> link-protection],<br>[edit logical-systems <i>logical-system-name</i> protocols rsvp interface <i>interface-name</i> link-protection bypass <i>bypass-name</i> ],<br>[edit protocols rsvp interface <i>interface-name</i> link-protection],<br>[edit protocols rsvp interface <i>interface-name</i> link-protection bypass <i>bypass-name</i> ]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Description</b>              | Configure an explicit path (a sequence of strict or loose routes) to control where and how a bypass LSP is established. If multiple bypasses are configured, they all will use the same explicit path.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Default</b>                  | No path is configured. CSPF automatically calculates the path the bypass LSP takes.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Options</b>                  | <p><b>address</b>—IP address of each transit router in the LSP. You must specify the address or hostname of each transit router, although you do not need to list each transit router if its type is <b>loose</b>. As an option, you can include the ingress and egress routers in the path. Specify the addresses in order, starting with the ingress router (optional) or the first transit router, and continuing sequentially along the path until reaching the egress router (optional) or the router immediately before the egress router.</p> <p><b>Default:</b> If you do not specify any routers explicitly, no routing limitations are imposed on the bypass LSP.</p> <p><b>loose</b>—(Optional) The next address in the <b>path</b> statement is loose. The LSP can traverse other routers before reaching this router.</p> <p><b>Default:</b> <b>strict</b></p> <p><b>strict</b>—(Optional) The LSP must go to the next address specified in the <b>path</b> statement without traversing other nodes. This is the default.</p> |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring an Explicit Path for Bypass LSPs on page 542</a></li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |

---

## peer-interface (Protocols RSVP)

---

|                                 |                                                                                                                                                                                                                                                                                                     |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>peer-interface <i>peer-interface-name</i> {<br/>    disable;<br/>    (aggregate   no-aggregate);<br/>    authentication-key <i>key</i>;<br/>    dynamic-bidirectional-transport template <i>template</i>;<br/>    hello-interval <i>seconds</i>;<br/>    (reliable   no-reliable);<br/>}</pre> |
| <b>Hierarchy Level</b>          | [edit protocols rsvp]                                                                                                                                                                                                                                                                               |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br><b>dynamic-bidirectional-transport template <i>template</i></b> option introduced in Junos OS Release 14.2.                                                                                                                                    |
| <b>Description</b>              | Configure the name of the LMP peer device.<br><br>The remaining statements are explained separately.                                                                                                                                                                                                |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                 |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring RSVP and OSPF for LMP Peer Interfaces on page 781</a></li></ul>                                                                                                                                                                     |

## preemption

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>preemption {<br/>  (aggressive   disabled   normal);<br/>  <a href="#">soft-preemption</a> {<br/>    cleanup-timer <i>seconds</i>;<br/>  }<br/>}</pre>                                                                                                                                                                                                                                                                                                                  |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols rsvp],<br>[edit protocols rsvp]                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                                                                                                                                                                                                                    |
| <b>Description</b>              | Control RSVP session preemption.                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Default</b>                  | <b>normal</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Options</b>                  | <p><b>aggressive</b>—Preempt RSVP sessions whenever bandwidth is insufficient to handle all sessions. A session is preempted whenever bandwidth is lowered or a new higher-priority session is established.</p> <p><b>disabled</b>—Do not preempt RSVP sessions.</p> <p><b>normal</b>—Preempt RSVP sessions to accommodate new higher-priority sessions when bandwidth is insufficient to handle all sessions.</p> <p>The remaining statements are explained separately.</p> |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                          |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Preempting RSVP Sessions on page 517</a></li></ul>                                                                                                                                                                                                                                                                                                                                                                       |

## priority (Protocols RSVP)


|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>priority setup-priority reservation-priority;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Hierarchy Level</b>          | <p>[edit logical-systems <i>logical-system-name</i> protocols rsvp interface <i>interface-name</i> link-protection],</p> <p>[edit logical-systems <i>logical-system-name</i> protocols rsvp interface <i>interface-name</i> link-protection bypass <i>bypass-name</i>],</p> <p>[edit protocols rsvp interface <i>interface-name</i> link-protection],</p> <p>[edit protocols rsvp interface <i>interface-name</i> link-protection bypass <i>bypass-name</i>],</p>                                                                                                                                                                                   |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Description</b>              | <p>Configure the setup priority and reservation priority for a bypass LSP. If insufficient link bandwidth is available during session establishment, the setup priority is compared with other setup priorities for established sessions on the link to determine whether some of them should be preempted to accommodate the new session. The session with the lower-hold priority is preempted.</p>                                                                                                                                                                                                                                               |
| <b>Options</b>                  | <p><b>reservation-priority</b>—Reservation priority, used to keep a reservation after it has been set up. A smaller number has a higher priority. The priority must be greater than or equal to the setup priority to prevent preemption loops.</p> <p><b>Range:</b> 0 through 7, where 0 is the highest and 7 is the lowest priority.</p> <p><b>Default:</b> 0 (Once the session is set up, no other session can preempt it.)</p> <p><b>setup-priority</b>—Setup priority.</p> <p><b>Range:</b> 0 through 7, where 0 is the highest and 7 is the lowest priority.</p> <p><b>Default:</b> 7 (The session cannot preempt any existing sessions.)</p> |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring Priority and Preemption for Bypass LSPs on page 543</a></li> <li>• <a href="#">Configuring Priority and Preemption for LSPs on page 280</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                             |

## refresh-time

---

|                                 |                                                                                                                            |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | refresh-time <i>seconds</i> ;                                                                                              |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols rsvp],<br>[edit protocols rsvp]                                 |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.  |
| <b>Description</b>              | Set the refresh time.                                                                                                      |
| <b>Options</b>                  | <i>seconds</i> —Refresh time.<br><b>Range:</b> 1 through 65,535<br><b>Default:</b> 30 seconds                              |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.        |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring Timers for RSVP Refresh Messages on page 516</a></li></ul> |

## reliable

|                                                                                                                                                                                                                                                                                                                                                                                                        |                                                                                                                                                                                                                                                                                                                                                   |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                                                                                                                                                                                                                                                                                                                                                                                          | (reliable   no-reliable);                                                                                                                                                                                                                                                                                                                         |
| <b>Hierarchy Level</b>                                                                                                                                                                                                                                                                                                                                                                                 | [edit logical-systems <i>logical-system-name</i> protocols rsvp interface <i>interface-name</i> ],<br>[edit logical-systems <i>logical-system-name</i> protocols rsvp peer-interface <i>peer-interface-name</i> ],<br>[edit protocols rsvp interface <i>interface-name</i> ],<br>[edit protocols rsvp peer-interface <i>peer-interface-name</i> ] |
| <b>Release Information</b>                                                                                                                                                                                                                                                                                                                                                                             | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                                                                                         |
| <b>Description</b>                                                                                                                                                                                                                                                                                                                                                                                     | Enable reliable message delivery on the interface.<br><br>To have both refresh reduction and reliable delivery, enable both the <b>aggregate</b> and <b>reliable</b> statements.                                                                                                                                                                  |
| <div>  <p><b>NOTE:</b> For Junos OS Release 16.1 running on MX Series or PTX Series routers, setting <b>no-reliable</b> on an interface automatically disables the fast reroute (FRR) scalability enhancements, including refresh reduction, for all label-switched paths (LSPs) traversing the interface.</p> </div> |                                                                                                                                                                                                                                                                                                                                                   |
| <b>Required Privilege Level</b>                                                                                                                                                                                                                                                                                                                                                                        | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                               |
| <b>Related Documentation</b>                                                                                                                                                                                                                                                                                                                                                                           | <ul style="list-style-type: none"> <li>• <a href="#">Configuring RSVP Refresh Reduction on page 503</a></li> <li>• <a href="#">aggregate on page 1542</a></li> <li>• <a href="#">no-enhanced-frr-profile on page 1567</a></li> </ul>                                                                                                              |

## rsvp

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                      |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | rsvp;                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols],<br>[edit protocols]                                                                                                                                                                                                                                                                                                                     |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 9.5 for EX Series switches.                                                                                                                                                                                                                                                                            |
| <b>Description</b>              | <p>Enable Resource Reservation Protocol (RSVP) signaling.</p> <p>You must include the <b>rsvp</b> statement in the configuration to enable RSVP on the router.</p> <p>The primary purpose of RSVP in Junos OS for EX Series switches is to support dynamic signaling within label switched paths (LSPs).</p>                                                                                         |
| <b>Default</b>                  | RSVP is disabled.                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                  |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Minimum RSVP Configuration on page 501</a></li><li>• <i>Example: Configuring MPLS on EX8200 and EX4500 Switches</i></li><li>• <i>Configuring MPLS on Provider Edge EX8200 and EX4500 Switches Using Circuit Cross-Connect (CLI Procedure)</i></li><li>• <i>Configuring MPLS on EX8200 and EX4500 Provider Switches (CLI Procedure)</i></li></ul> |



## rsvp-te (Routing Options)

|                                 |                                                                                                                                                                                                                    |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre> rsvp-te entry-name {   destination-networks network-prefix;   label-switched-path-template (Multicast) {     default-template;     template-name;   } }</pre>                                                |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> routing-options dynamic-tunnels <i>tunnel-name</i> ],<br>[edit routing-options dynamic-tunnels <i>tunnel-name</i> ]                                               |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 10.1.<br>Statement introduced in Junos OS Release 12.3 for ACX Series routers.                                                                                            |
| <b>Description</b>              | Enable RSVP to automatically establish LSPs for any new PE router added to a full mesh of LSPs. To enable this feature, you must configure the <b>rsvp-te</b> statement on all of the PE routers in the full mesh. |
| <b>Options</b>                  | <b>entry-name</b> —Specify the entry for the RSVP tunnel.<br><br>The other options are explained separately.                                                                                                       |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring RSVP Automatic Mesh on page 515</a></li> <li>• <a href="#">Flooding Unknown Traffic Using Point-to-Multipoint LSPs in VPLS</a></li> </ul>         |

## setup-protection

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | setup-protection;                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols rsvp],<br>[edit protocols rsvp]                                                                                                                                                                                                                                                                                                                                                        |
| <b>Description</b>              | The facility-backup fast reroute mechanism can provide setup protection for LSPs which are in the process of being signaled. Both point-to-point LSPs and point-to-multipoint LSPs are supported. You should configure the <b>setup-protection</b> statement on each of the routers along the LSP path on which you want to enable LSP setup protection. You should also configure IGP traffic engineering on all of the routers on the LSP path. |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                               |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring RSVP Setup Protection on page 514</a></li> </ul>                                                                                                                                                                                                                                                                                                                                 |

## soft-preemption (Protocols RSVP)

---

|                                 |                                                                                                                                   |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>soft-preemption {<br/>    cleanup-timer <i>seconds</i>;<br/>}</code>                                                        |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols rsvp preemption],<br>[edit protocols rsvp preemption]                  |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.         |
| <b>Description</b>              | Enable soft preemption to attempt to establish a new path for a preempted LSP before tearing it down.                             |
| <b>Options</b>                  | <b>cleanup-timer</b> —A value of 0 disables soft preemption.<br><b>Range:</b> 0 through 180 seconds<br><b>Default:</b> 30 seconds |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.               |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring MPLS Soft Preemption on page 266</a></li></ul>                    |

## static-label-switched-path

```

Syntax  static-label-switched-path lsp-name {
        bypass bypass-name {
            bandwidth bps;
            description string;
            next-hop (address | interface-name | address/interface-name);
            push out-label;
            to address;
        }
        ingress {
            bandwidth bps;
            class-of-service cos-value;
            description string;
            install {
                destination-prefix <active>;
            }
            link-protection bypass-name name;
            metric metric;
            next-hop (address | interface-name | address/interface-name);
            node-protection bypass-name name next-next-label label;
            no-install-to-address;
            policing {
                filter filter-name;
                no-auto-policing;
            }
            preference preference;
            push out-label;
            to address;
        }
        transit incoming-label {
            bandwidth bps;
            description string;
            link-protection bypass-name name;
            next-hop (address | interface-name | address/interface-name);
            node-protection bypass-name name next-next-label label;
            pop;
            swap out-label;
        }
    }

```

**Hierarchy Level** [edit logical-systems *logical-system-name* protocols mpls],  
[edit protocols mpls]

**Release Information** Statement introduced in Junos OS Release 10.1.  
Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

**Description** Configure a static LSP.

**Options** *lsp-name*—Name of the path.

The remaining statements are explained separately.

**Required Privilege Level** routing—To view this statement in the configuration.  
routing-control—To add this statement to the configuration.

**Related Documentation**

- [Configuring Static LSPs on page 299](#)

---

## subscription

---

**Syntax** `subscription percentage {  
 ct0 percentage;  
 ct1 percentage;  
 ct2 percentage;  
 ct3 percentage;  
}`

**Hierarchy Level** [edit logical-systems *logical-system-name* protocols rsvp interface *interface-name*],  
[edit logical-systems *logical-system-name* protocols rsvp interface *interface-name* link-protection],  
[edit protocols rsvp interface *interface-name*],  
[edit protocols rsvp interface *interface-name* link-protection]

**Release Information** Statement introduced before Junos OS Release 7.4.  
Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

**Description** Configure the amount of bandwidth subscribed to a class type (when you have enabled Differentiated Services) or bypass LSP (when you have enabled link protection).  
**subscription** is the percentage of the link bandwidth that can be used for the RSVP reservation process.

**Options** ***ctnumber percentage***—Percentage of the class-type bandwidth allowed for reservations. If you specify a value greater than 100, you are oversubscribing the class type. You can specify bandwidth subscriptions for class types 0 through 3. This option is not available for bypass LSPs.

**Range:** 0 through 65,000

**Default:** 100 percent

***percentage***—Percentage of the class-type or bypass LSP bandwidth allowed for reservations. If you specify a value greater than 100, you are oversubscribing the class type or bypass LSP.

**Range:** 0 through 65,000

**Default:** 100 percent

**Required Privilege Level** routing—To view this statement in the configuration.  
routing-control—To add this statement to the configuration.

**Related Documentation**

- [Configuring the Bandwidth Subscription Percentage for LSPs on page 351](#)
- [Configuring the Amount of Bandwidth Subscribed for Bypass LSPs on page 542](#)

## traceoptions (Protocols RSVP)

|                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | <pre> traceoptions {     enhanced-frr ;     file <i>filename</i> &lt;files <i>number</i>&gt; &lt;size <i>size</i>&gt; &lt;world-readable   no-world-readable&gt;;     flag <i>flag</i> &lt;flag-modifier&gt; &lt;disable&gt;; } </pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Hierarchy Level</b>     | [edit logical-systems <i>logical-system-name</i> protocols rsvp],<br>[edit protocols rsvp]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Release Information</b> | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Description</b>         | Enable RSVP-level trace options.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Default</b>             | The default RSVP-level trace options are those inherited from the routing protocols <b>traceoptions</b> statement included at the [edit routing-options] hierarchy level.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Options</b>             | <p><b>disable</b>—(Optional) Disable the tracing operation. You can use this option to disable a single operation when you have defined a broad group of tracing operations, such as <b>all</b>.</p> <p><b>enhanced-frr</b> —(Optional) Enable this option to trace internal events and state changes related to the FRR facility protection enhancements associated with the increased RSVP scaling introduced in Junos OS Release 16.1.</p> <p><b>filename</b>—Name of the file to receive the output of the tracing operation. Enclose the name within quotation marks. All files are placed in the directory <b>/var/log</b>. We recommend that you place RSVP tracing output in the file <b>rsvp-log</b>.</p> <p><b>files number</b>—(Optional) Maximum number of trace files. When a trace file named <b>trace-file</b> reaches its maximum size, it is renamed <b>trace-file.0</b>, then <b>trace-file.1</b>, and so on, until the maximum number of trace files is reached. Then the oldest trace file is overwritten.</p> <p><b>Range:</b> 2 through 1000</p> <p><b>Default:</b> 2 files</p> <p>If you specify a maximum number of files, you must also include the <b>size</b> statement to specify the maximum file size.</p> <p><b>flag</b>—Tracing operation to perform. To specify more than one tracing operation, include multiple <b>flag</b> statements.</p> <ul style="list-style-type: none"> <li><b>all</b>—All tracing operations</li> <li><b>error</b>—All detected error conditions</li> <li><b>event</b>—RSVP-related events</li> </ul> |

- **io-event [detail] [disable]** —Enable tracing of events that occur within the RSVP I/O task; can only be configured for the master routing instance. The trace output is generally independent of routing instance.
- **io-packets [detail] [disable] [receive] [send]** —Enable tracing of messages as they are received from the network or as they are sent out. This flag can be configured independently for each routing instance. Both bundled and individual messages are identified. Use *detail* to show all objects contained in the message. Use *send* and *receive* to limit tracing to outgoing or incoming packets.
- **lmp**—RSVP-LMP interactions
- **packets**—All RSVP packets
- **path**—All path messages
- **pathtear**—PathTear messages
- **resv**—Resv messages
- **resvtear**—ResvTear messages
- **route**—Routing information
- **state**—Session state transitions, including when RSVP-signaled LSPs come up and go down.

**flag-modifier**—(Optional) Modifier for the tracing flag. You can specify one or more of these modifiers:

- **detail**—Provide detailed trace information
- **receive**—Packets being received
- **send**—Packets being transmitted

**no-world-readable**—(Optional) Enable only certain users to read the log file.

**size size**—(Optional) Maximum size of each trace file, in kilobytes (KB), megabytes (MB), or gigabytes (GB). When a trace file named **trace-file** reaches this size, it is renamed **trace-file.0**. When the **trace-file** again reaches this size, **trace-file.0** is renamed **trace-file.1** and **trace-file** is renamed **trace-file.0**. This renaming scheme continues until the maximum number of trace files is reached. Then the oldest trace file is overwritten.

**Syntax:** *xk* to specify KB, *xm* to specify MB, or *xg* to specify GB

**Range:** 10 KB through the maximum file size supported on your system

**Default:** 1 MB

If you specify a maximum file size, you must also include the **files** statement to specify the maximum number of files.

**world-readable**—(Optional) Enable any user to read the log file.

|                                 |                                                                                                                                                 |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Required Privilege Level</b> | routing and trace—To view this statement in the configuration.<br>routing-control and trace-control—To add this statement to the configuration. |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|

**Related Documentation** • [Tracing RSVP Protocol Traffic on page 524](#)

## transit

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>transit <i>incoming-label</i> {     bandwidth <i>bps</i>;     description <i>string</i>;     link-protection bypass-name <i>name</i>;     next-hop (<i>address</i>   <i>interface-name</i>   <i>address/interface-name</i>);     node-protection bypass-name <i>name</i> next-next-label <i>label</i>;     pop;     stitch {         bandwidth <i>bps</i>;         description <i>string</i>;         link-protection bypass-name <i>name</i>;         next-hop (<i>address</i>   <i>interface-name</i>   <i>address/interface-name</i>);         node-protection bypass-name <i>name</i> next-next-label <i>label</i>;     }     swap <i>out-label</i>; }</pre> |
| <b>Hierarchy Level</b>          | <p>[edit logical-systems <i>logical-system-name</i> protocols mpls static-label-switched-path <i>lsp-name</i>],</p> <p>[edit protocols mpls static-label-switched-path <i>lsp-name</i>]</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Release Information</b>      | <p>Statement introduced in Junos OS Release 10.1.</p> <p>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.</p> <p>Statement updated to include switch option in Junos OS Release 14.1X53-D25</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Description</b>              | <p>Configure a transit static LSP.</p> <p>The remaining statements are explained separately.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Options</b>                  | <p><i>incoming-label</i>—Incoming label value.</p> <p><b>Range:</b> 1000000 through 1048575</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Related Documentation</b>    | • <a href="#">Configuring Static LSPs on page 299</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |

## tunnel-services (RSVP)

---

|                                 |                                                                                                                                                                                                                                       |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>tunnel-services {<br/>    <b>devices</b> <i>device-names</i>;<br/>}</code>                                                                                                                                                      |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols rsvp],<br>[edit protocols rsvp]                                                                                                                                            |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 8.1.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                 |
| <b>Description</b>              | Enable ultimate-hop popping on point-to-multipoint LSPs. The Junos OS selects one of the available virtual tunnel (VT) interfaces to de-encapsulate the egress traffic. By default, the selection process is performed automatically. |
| <b>Default</b>                  | Ultimate-hop popping is disabled.                                                                                                                                                                                                     |
| <b>Options</b>                  | <b>devices</b> <i>device-names</i> —Specify which VT interfaces are used to handle the RSVP traffic.<br><b>Range:</b> 0 to 8 devices                                                                                                  |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                   |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Enabling Ultimate-Hop Popping on Point-to-Multipoint LSPs on page 523</a></li></ul>                                                                                               |



## ultimate-hop-popping

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | ultimate-hop-popping;                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols mpls],<br>[edit logical-systems <i>logical-system-name</i> protocols mpls label-switched-path <i>label-switched-path-name</i> ],<br>[edit protocols mpls],<br>[edit protocols mpls label-switched-path <i>label-switched-path-name</i> ]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 12.3.<br>Statement introduced in Junos OS Release 13.2 for PTX Series Packet Transport Routers.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Description</b>              | <p>Enable ultimate-hop popping on LSPs. Configure this statement on the device at the LSP ingress. In ultimate-hop popping, the MPLS label is popped from the IP packet at the PE router. The IP address is checked in a second address lookup (also at the PE router), and then the packet is forwarded to its destination.</p> <p>Be aware of the following platform requirements and restrictions:</p> <ul style="list-style-type: none"> <li>• UHP LSPs using VT interfaces—Supported on all M Series, MX Series, T Series, and TX Matrix routers.</li> <li>• UHP LSPs using LSI interfaces—Supported on MX 3D Series routers only.</li> <li>• UHP LSP requirements for the egress PE device—For M Series and T Series routers, a VT interface is needed.</li> <li>• UHP LSPs and Layer 3 VPNs—UHP LSPs are supported for Layer 3 VPNs configured on MX 3D Series routers only.</li> <li>• UHP LSPs and VPLS—UHP LSPs are supported for VPLS configured on MX 3D Series routers only. You must configure the <i>no-tunnel-services</i> statement at the [edit routing-instances <i>routing-instance-name</i> protocols vpls] hierarchy level.</li> </ul> |
| <b>Default</b>                  | Ultimate-hop popping is disabled by default on LSPs. Penultimate-hop popping is the default behavior. In penultimate-hop popping, the final MPLS label is popped from the IP packet at the last provider router in the network before being forwarded to the PE router. The PE router receives the packet and checks the IP address, and then the packet is forwarded to its destination.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring Ultimate-Hop Popping for LSPs on page 250</a></li> <li>• <a href="#">explicit-null on page 1431</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |

## update-threshold

---

|                                 |                                                                                                                                                                   |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>update-threshold <i>threshold</i>;</code>                                                                                                                   |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols rsvp interface <i>interface-name</i> ],<br>[edit protocols rsvp interface <i>interface-name</i> ]      |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                         |
| <b>Description</b>              | Adjust the threshold at which a change in bandwidth triggers an interior gateway protocol (IGP) update.                                                           |
| <b>Options</b>                  | <b><i>threshold</i></b> —Specify the percentage change in bandwidth to trigger an IGP update.<br><b>Range:</b> 1 through 20 percent<br><b>Default:</b> 10 percent |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                               |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring the RSVP Update Threshold on an Interface on page 506</a></li></ul>                               |

# LDP Configuration Statements

- [allow-subnet-mismatch](#) on page 1591
- [authentication-algorithm](#) on page 1592
- [authentication-key](#) (Protocols LDP) on page 1594
- [authentication-key-chain](#) (Protocols LDP) on page 1595
- [auto-targeted-session](#) on page 1596
- [bfd-liveness-detection](#) (Protocols LDP) on page 1597
- [deaggregate](#) on page 1598
- [disable](#) (Protocols LDP) on page 1599
- [dod-request-policy](#) on page 1600
- [downstream-on-demand](#) on page 1600
- [ecmp](#) on page 1601
- [egress-policy](#) on page 1601
- [explicit-null](#) (Protocols LDP) on page 1602
- [export](#) (Protocols LDP) on page 1602
- [failure-action](#) (Protocols LDP) on page 1603
- [fec](#) on page 1604
- [graceful-restart](#) (Protocols LDP) on page 1605
- [hello-interval](#) (Protocols LDP) on page 1606
- [helper-disable](#) (LDP) on page 1607
- [holddown-interval](#) on page 1608
- [hold-time](#) (Protocols LDP) on page 1609
- [ignore-lsp-metrics](#) on page 1610
- [igp-synchronization](#) on page 1610
- [import](#) (Protocols LDP) on page 1611
- [ingress-policy](#) on page 1612
- [interface](#) (Protocols LDP) on page 1613
- [keepalive-interval](#) on page 1614
- [keepalive-timeout](#) on page 1615

- [l2-smart-policy](#) on page 1615
- [label-withdrawal-delay](#) on page 1616
- [ldp](#) on page 1617
- [ldp-synchronization](#) on page 1620
- [log-updown \(Protocols LDP\)](#) on page 1621
- [make-before-break \(LDP\)](#) on page 1622
- [maximum-neighbor-recovery-time](#) on page 1623
- [mldp-inband-signalling \(Protocols Multipoint LDP\)](#) on page 1624
- [mofrr-asm-starg \(Multicast-Only Fast Reroute in a PIM Domain\)](#) on page 1625
- [mofrr-disjoint-upstream-only \(Multicast-Only Fast Reroute in a PIM Domain\)](#) on page 1626
- [mofrr-no-backup-join \(Multicast-Only Fast Reroute in a PIM Domain\)](#) on page 1627
- [mofrr-primary-path-selection-by-routing \(Multicast-Only Fast Reroute\)](#) on page 1628
- [no-forwarding](#) on page 1629
- [oam \(Protocols LDP\)](#) on page 1630
- [p2mp \(Protocols LDP\)](#) on page 1631
- [p2mp-ldp-next-hop](#) on page 1632
- [periodic-traceroute](#) on page 1633
- [policing \(Protocols LDP\)](#) on page 1635
- [policy \(Multicast-Only Fast Reroute\)](#) on page 1636
- [policy \(Protocols Multipoint LDP\)](#) on page 1638
- [preference \(Protocols LDP\)](#) on page 1639
- [reconnect-time](#) on page 1640
- [recovery-time](#) on page 1640
- [session \(ldp\)](#) on page 1641
- [session-protection](#) on page 1642
- [stream-protection \(Multicast-Only Fast Reroute\)](#) on page 1643
- [strict-targeted-hellos](#) on page 1644
- [targeted-hello](#) on page 1644
- [traceoptions \(Protocols LDP\)](#) on page 1645
- [track-igp-metric](#) on page 1647
- [traffic-statistics \(Protocols LDP\)](#) on page 1648
- [transport-address](#) on page 1650
- [version \(BFD\)](#) on page 1651

---

## allow-subnet-mismatch

---

|                                 |                                                                                                                                                                                                                                                            |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | allow-subnet-mismatch;                                                                                                                                                                                                                                     |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols ldp interface <i>interface-name</i> ],<br>[edit protocols ldp interface <i>interface-name</i> ]                                                                                                 |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.3.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                      |
| <b>Description</b>              | Ignore the LDP subnet check. For Junos OS Release 8.4 and later releases, an LDP source address subnet check was added for the neighbor establishment procedure. The source address in the LDP link hello packet is matched against the interface address. |
| <b>Default</b>                  | The source address in the LDP link hello packet is matched against the interface address.                                                                                                                                                                  |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                        |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Ignoring the LDP Subnet Check on page 728</a></li></ul>                                                                                                                                                |

## authentication-algorithm

**Syntax** authentication-algorithm *algorithm*;

**Hierarchy Level** [edit logical-systems *logical-system-name* protocols bgp],  
 [edit logical-systems *logical-system-name* protocols bgp group *group-name*],  
 [edit logical-systems *logical-system-name* protocols bgp group *group-name* neighbor *address*],  
 [edit logical-systems *logical-system-name* protocols ldp session *session-address*],  
 [edit logical-systems *logical-system-name* routing-instances *routing-instance-name* protocols bgp],  
 [edit logical-systems *logical-system-name* routing-instances *routing-instance-name* protocols bgp group *group-name*],  
 [edit logical-systems *logical-system-name* routing-instances *routing-instance-name* protocols bgp group *group-name* neighbor *address*],  
 [edit logical-systems *logical-system-name* routing-instances *routing-instance-name* protocols ldp session *session-address*],  
 [edit logical-systems *logical-system-name* routing-options bmp],  
 [edit logical-systems *logical-system-name* routing-options bmp station *station-name*],  
 [edit protocols bgp],  
 [edit protocols bgp group *group-name*],  
 [edit protocols bgp group *group-name* neighbor *address*],  
 [edit protocols ldp session *session-address*],  
 [edit routing-instances *routing-instance-name* protocols bgp],  
 [edit routing-instances *routing-instance-name* protocols bgp group *group-name*],  
 [edit routing-instances *routing-instance-name* protocols bgp group *group-name* neighbor *address*],  
 [edit routing-instances *routing-instance-name* protocols ldp session *session-address*],  
 [edit routing-options bmp],  
 [edit routing-options bmp station *station-name*]

**Release Information** Statement introduced in Junos OS Release 7.6.  
 Statement introduced for BGP in Junos OS Release 8.0.  
 Statement introduced in Junos OS Release 9.0 for EX Series switches.  
 Statement introduced in Junos OS Release 12.3X50 for the QFX Series.  
 Statement introduced for BMP in Junos OS Release 13.2X51-D15 for the QFX Series.  
 Statement introduced for BMP in Junos OS Release 13.3.  
 Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

**Description** Configure an authentication algorithm type.



**NOTE:** Keep the following points in mind when you configure the authentication algorithm in an IPsec proposal:

- When both ends of an IPsec VPN tunnel contain the same IKE proposal but different IPsec proposals, an error occurs and the tunnel is not established in this scenario. For example, if one end of the tunnel contains router 1 configured with the authentication algorithm as hmac-sha-256-128 and the other end of the tunnel contains router 2 configured with the authentication algorithm as hmac-md5-96, the VPN tunnel is not established.

- When both ends of an IPsec VPN tunnel contain the same IKE proposal but different IPsec proposals, and when one end of the tunnel contains two IPsec proposals to check whether a less secure algorithm is selected or not, an error occurs and the tunnel is not established. For example, if you configure two authentication algorithms for an IPsec proposal as `hmac-sha-256-128` and `hmac-md5-96` on one end of the tunnel, router 1, and if you configure the algorithm for an IPsec proposal as `hmac-md5-96` on the other end of the tunnel, router 2, the tunnel is not established and the number of proposals mismatch.
  - When you configure two IPsec proposals at both ends of a tunnel, such as the `authentication-algorithm hmac-sha-256-128` and `authentication-algorithm hmac-md5-96` statements at the `[edit services ipsec-vpn ipsec proposal proposal-name]` hierarchy level on one of the tunnel, router 1 (with the algorithms in two successive statements to specify the order), and the `authentication-algorithm hmac-md5-96` and `authentication-algorithm hmac-sha-256-128` statements at the `[edit services ipsec-vpn ipsec proposal proposal-name]` hierarchy level on one of the tunnel, router 2 (with the algorithms in two successive statements to specify the order, which is the reverse order of router 1), the tunnel is established in this combination as expected because the number of proposals is the same on both ends and they contain the same set of algorithms. However, the authentication algorithm selected is `hmac-md5-96` and not the stronger algorithm of `hmac-sha-256-128`. This method of selection of the algorithm occurs because the first matching proposal is selected. Also, for a default proposal, regardless of whether the router supports the Advanced Encryption Standard (AES) encryption algorithm, the `3des-cbc` algorithm is chosen and not the `aes-cfb` algorithm, which is because of the first algorithm in the default proposal being selected. In the sample scenario described here, on router 2, if you reverse the order of the algorithm configuration in the proposal so that it is the same order as the one specified on router 1, `hmac-sha-256-128` is selected as the authentication method.
  - You must be aware of the order of proposals in an IPsec policy at the time of configuration if you want the matching of proposals to happen in a certain order of preference, such as the strongest algorithm to be considered first when a match is made when both policies from the two peers have a proposal.
-

- Options** *algorithm*—Specify one of the following types of authentication algorithms:
- **aes-128-cmac-96**—Cipher-based message authentication code (AES128, 96 bits).
  - **hmac-sha-1-96**—Hash-based message authentication code (SHA1, 96 bits).
  - **md5**—Message digest 5.
- Default:** hmac-sha-1-96



**NOTE:** The default is not displayed in the output of the `show bgp bmp` command unless a key or key-chain is also configured.

**Required Privilege Level** routing—To view this statement in the configuration.  
routing-control—To add this statement to the configuration.

**Related Documentation**

- [Example: Configuring Route Authentication for BGP](#)
- [Configuring BGP Monitoring Protocol Version 3](#)

## authentication-key (Protocols LDP)

**Syntax** authentication-key *md5-authentication-key*;

**Hierarchy Level** [edit logical-systems *logical-system-name* protocols ldp session *address*],  
[edit logical-systems *logical-system-name* routing-instances *routing-instance-name* protocols ldp session *address*],  
[edit protocols ldp session *address*],  
[edit routing-instances *routing-instance-name* protocols ldp session *address*]

**Release Information** Statement introduced before Junos OS Release 7.4.  
Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

**Description** Configure the MD5 authentication signature. The maximum length of the authentication signature is 69 characters.


**Required Privilege Level** routing—To view this statement in the configuration.  
routing-control—To add this statement to the configuration.

**Related Documentation**

- [Configuring the TCP MD5 Signature for LDP Sessions on page 725](#)



## authentication-key-chain (Protocols LDP)

|                                                                                                                                                                                                                      |                                                                                                                                                                                                                                                                                                                                                         |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                                                                                                                                                                                                        | authentication-key-chain <i>key-chain</i> ;                                                                                                                                                                                                                                                                                                             |
| <b>Hierarchy Level</b>                                                                                                                                                                                               | [edit logical-systems <i>name</i> protocols ldp session <i>address</i> ],<br>[edit logical-systems <i>name</i> routing-instances <i>instance-name</i> protocols ldp session <i>address</i> ],<br>[edit protocols ldp session <i>address</i> ],<br>[edit routing-instances <i>instance-name</i> protocols ldp session <i>address</i> ]                   |
| <b>Release Information</b>                                                                                                                                                                                           | Statement introduced in Junos OS Release 8.0.<br>Statement introduced in Junos OS Release 9.0 for EX Series switches.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                           |
| <b>Description</b>                                                                                                                                                                                                   | Apply and enable an authentication keychain to the routing device. Note that the referenced key chain must be defined. When configuring the authentication key update mechanism for LDP, you cannot commit the <b>0.0.0.0/allow</b> statement with authentication keys or key chains. The CLI issues a warning and fails to commit such configurations. |
| <div>  <b>NOTE:</b> You must also configure an authentication algorithm using the <b>authentication-algorithm</b> statement. </div> |                                                                                                                                                                                                                                                                                                                                                         |
| <b>Options</b>                                                                                                                                                                                                       | <i>key-chain</i> —Authentication keychain name. It can be up to 126 characters. Characters can include any ASCII strings. If you include spaces, enclose all characters in quotation marks (" ").                                                                                                                                                       |
| <b>Required Privilege Level</b>                                                                                                                                                                                      | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                     |
| <b>Related Documentation</b>                                                                                                                                                                                         | <ul style="list-style-type: none"> <li>• <a href="#">Configuring the Authentication Key Update Mechanism for BGP and LDP Routing Protocols</a></li> <li>• <a href="#">Configuring Miscellaneous LDP Properties on page 722</a></li> <li>• <a href="#">authentication-algorithm on page 1592</a></li> </ul>                                              |

## auto-targeted-session

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | auto-targeted-session {<br>maximum-sessions <i>seconds</i> ;<br>teardown-delay <i>seconds</i> ;<br>}                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols ldp],<br>[edit protocols ldp]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 14.2.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Description</b>              | Configure session parameters for LDP sessions established with the remote LFA node that are automatically targeted using the loopback addresses. Configure parameters of automatically targeted sessions for remote LFA only.                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Options</b>                  | <p><b>maximum-sessions <i>seconds</i></b> —Specify the maximum number of auto-targeted LDP sessions allowed. Include this statement to optimize the use of router memory.<br/><b>Default:</b> 100<br/><b>Range:</b> 1 through 1000</p> <p><b>teardown-delay <i>seconds</i></b> —Specify the minimum time period for which the auto-targeted session must be alive before tearing down the auto-targeted LDP sessions to the remote LFA node. Include this statement to prevent rapid route-resolution in case of temporary change in IGP topology.<br/><b>Default:</b> 90 seconds<br/><b>Range:</b> 1 through 300 seconds</p> |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <i>no-eligible-remote-backup</i></li><li>• <i>remote-backup-calculation</i></li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |

## bfd-liveness-detection (Protocols LDP)

|                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|----------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | <pre> bfd-liveness-detection {   detection-time threshold <i>milliseconds</i>;   ecmp;   failure-action {     remove-nexthop;     remove-route;   }   holddown-interval <i>seconds</i>;   minimum-interval <i>milliseconds</i>;   minimum-receive-interval <i>milliseconds</i>;   minimum-transmit-interval <i>milliseconds</i>;   multiplier <i>detection-time-multiplier</i>;   no-adaptation;   transmit-interval {     minimum-interval <i>milliseconds</i>;     threshold <i>milliseconds</i>;   }   version (0   1   automatic); } </pre> |
| <b>Hierarchy Level</b>     | <p>[edit logical-systems <i>logical-system-name</i> protocols ldp <b>oam</b>],<br/> [edit logical-systems <i>logical-system-name</i> protocols ldp oam <b>fec address</b>],<br/> [edit protocols ldp <b>oam</b>],<br/> [edit protocols ldp oam <b>fec address</b>]</p>                                                                                                                                                                                                                                                                          |
| <b>Release Information</b> | <p>Statement introduced in Junos OS Release 7.6.</p> <p>Support for the <b>bfd-liveness-detection</b> statement at the [edit protocols ldp oam <b>fec address</b>] hierarchy level and the <b>ecmp</b> option added in Junos OS Release 9.0.</p> <p>Support for the <b>failure-action</b> statement with the <b>remove-nexthop</b> and <b>remove-route</b> options and the <b>holddown-interval</b> statement added in Junos OS Release 9.4.</p>                                                                                                |
| <b>Description</b>         | <p>Enable Bidirectional Forwarding Detection (BFD) for all MPLS LSPs or for just a specific LSP.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Options</b>             | <p><b>minimum-interval</b>—Minimum transmit and receive interval.<br/> <b>Range:</b> 50 through 255,000 milliseconds<br/> <b>Default:</b> 50</p> <p><b>minimum-receive-interval</b>—Minimum receive interval.<br/> <b>Range:</b> 50 through 255,000 milliseconds<br/> <b>Default:</b> 50</p> <p><b>minimum-transmit-interval</b>—Minimum transmit interval.<br/> <b>Range:</b> 50 through 255,000 milliseconds<br/> <b>Default:</b> 50</p> <p><b>multiplier</b>—Detection time multiplier.<br/> <b>Range:</b> 50 through 255</p>                |

**Default:** 3

The other options are explained separately.

|                                 |                                                                                                                     |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------|
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration. |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring BFD for LDP LSPs on page 620</a></li></ul>          |

---

## deaggregate

---

|                                 |                                                                                                                                                                                                                                                                                     |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | deaggregate   no-deaggregate;                                                                                                                                                                                                                                                       |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols ldp],<br>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols ldp],<br>[edit protocols ldp],<br>[edit routing-instances <i>routing-instance-name</i> protocols ldp] |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                           |
| <b>Description</b>              | Control forwarding equivalence class (FEC) deaggregation on the router. The use of the <b>deaggregate</b> statement in LDP is a standard practice that we recommend for LDP deployments.                                                                                            |
| <b>Default</b>                  | Deaggregation is disabled on the router.                                                                                                                                                                                                                                            |
| <b>Options</b>                  | <b>deaggregate</b> —Deaggregate FECs.<br><br><b>no-deaggregate</b> —Aggregate FECs.                                                                                                                                                                                                 |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                 |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring FEC Deaggregation on page 618</a></li></ul>                                                                                                                                                                         |

## disable (Protocols LDP)

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | disable;                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols ldp graceful-restart],<br>[edit logical-systems <i>logical-system-name</i> protocols ldp interface <i>interface-name</i> ],<br>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols ldp interface <i>interface-name</i> ],<br>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> routing-options graceful-restart],<br>[edit protocols ldp graceful-restart],<br>[edit protocols ldp interface <i>interface-name</i> ],<br>[edit routing-instances <i>routing-instance-name</i> protocols ldp interface <i>interface-name</i> ],<br>[edit routing-instances <i>routing-instance-name</i> routing-options graceful-restart] |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Description</b>              | Explicitly disable LDP on an interface, or explicitly disable LDP graceful restart.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Default</b>                  | LDP is enabled on interfaces configured with the LDP <b>interface</b> statement. LDP graceful restart is automatically enabled when graceful restart is enabled under the <b>[edit routing-options]</b> hierarchy level.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Enabling and Disabling LDP on page 588</a></li> <li>• <a href="#">Configuring LDP Graceful Restart on page 610</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |

## dod-request-policy

---

|                                 |                                                                                                                                                                            |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>dod-request-policy <i>dod-request-policy-name</i>;</code>                                                                                                            |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols ldp],<br>[edit protocols ldp]                                                                                   |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 12.2.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                     |
| <b>Description</b>              | Specify the name of the LDP downstream on demand request policy. LDP sends label request messages only for those FECs matching in the downstream on demand request policy. |
| <b>Options</b>                  | <i>dod-request-policy-name</i> —Specify the name of the downstream on demand request policy.                                                                               |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                        |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Example: Configuring LDP Downstream on Demand on page 670</a></li></ul>                                                |

## downstream-on-demand

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>downstream-on-demand;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Hierarchy Level</b>          | [edit logical systems <i>logical-system-name</i> protocols ldp session <i>session-address</i> ],<br>[edit protocols ldp session <i>session-address</i> ]                                                                                                                                                                                                                                                                                                                                      |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 12.2.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Description</b>              | Enable LDP downstream on demand on the LDP session. LDP is widely deployed in downstream unsolicited advertisement mode. As service providers integrate the access and aggregation networks into a single MPLS domain, LDP downstream on demand is needed to distribute the bindings between access and aggregation networks to minimize the workload for the access node (AN) control plane and to avoid the storage of tens of thousands of label bindings from upstream aggregation nodes. |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Example: Configuring LDP Downstream on Demand on page 670</a></li></ul>                                                                                                                                                                                                                                                                                                                                                                   |

## ecmp

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>ecmp;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols ldp oam bfd-liveness-detection],<br>[edit logical-systems <i>logical-system-name</i> protocols ldp oam fec <i>address</i> bfd-liveness-detection],<br>[edit protocols ldp oam bfd-liveness-detection],<br>[edit protocols ldp oam fec <i>address</i> bfd-liveness-detection]                                                                                                                                                                                                      |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 8.5.<br>Statement introduced in Junos OS Release 15.1X53-D30 for QFX Series switches.                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Description</b>              | Allows LDP to establish BFD sessions for all ECMP paths configured for the specified FEC. If you configure the <b>ecmp</b> statement, you must also configure the <b>periodic-traceroute</b> statement for the specified FEC. If you do not do so, the commit operation fails. You can configure the <b>periodic-traceroute</b> statement at the global hierarchy level ([edit protocols ldp oam]) while only configuring the <b>ecmp</b> statement for a specific FEC ([edit protocols ldp oam fec <i>address</i> bfd-liveness-detection]). |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring ECMP-Aware BFD for LDP LSPs on page 623</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                      |

## egress-policy

|                                 |                                                                                                                                                                                                                                                                                     |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>egress-policy [ <i>policy-names</i> ];</code>                                                                                                                                                                                                                                 |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols ldp],<br>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols ldp],<br>[edit protocols ldp],<br>[edit routing-instances <i>routing-instance-name</i> protocols ldp] |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                           |
| <b>Description</b>              | Control the prefixes advertised into LDP.                                                                                                                                                                                                                                           |
| <b>Default</b>                  | Only the loopback address is advertised.                                                                                                                                                                                                                                            |
| <b>Options</b>                  | <i>policy-names</i> —Name of one or more routing policies.                                                                                                                                                                                                                          |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                 |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring the Prefixes Advertised into LDP from the Routing Table on page 617</a></li> </ul>                                                                                                                                 |

## explicit-null (Protocols LDP)

---

|                                 |                                                                                                                                                                                                                                                                                     |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | explicit-null;                                                                                                                                                                                                                                                                      |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols ldp],<br>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols ldp],<br>[edit protocols ldp],<br>[edit routing-instances <i>routing-instance-name</i> protocols ldp] |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                           |
| <b>Description</b>              | Advertise label 0 to the egress router of a label-switched path (LSP).                                                                                                                                                                                                              |
| <b>Default</b>                  | If you do not include the <b>explicit-null</b> statement in the MPLS configuration, label 3 (implicit null) is advertised.                                                                                                                                                          |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                 |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring MPLS and LDP to Pop the Label on the Ultimate-Hop Router on page 724</a></li></ul>                                                                                                                                  |

## export (Protocols LDP)

---

|                                 |                                                                                                                                                                                                                                                                                     |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | export [ <i>policy-names</i> ];                                                                                                                                                                                                                                                     |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols ldp],<br>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols ldp],<br>[edit protocols ldp],<br>[edit routing-instances <i>routing-instance-name</i> protocols ldp] |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                           |
| <b>Description</b>              | Apply policy filters to outbound LDP label bindings. Filters are applied to all label bindings from all neighbors.                                                                                                                                                                  |
| <b>Options</b>                  | <i>policy-names</i> —Name of one or more routing policies.                                                                                                                                                                                                                          |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                 |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Filtering Outbound LDP Label Bindings on page 615</a></li></ul>                                                                                                                                                                 |



## failure-action (Protocols LDP)

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | failure-action {<br>remove-nexthop;<br>remove-route;<br>}                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols ldp oam bfd-livenessss-detection],<br>[edit logical-systems <i>logical-system-name</i> protocols ldp oam fec <i>address</i><br>bfd-livenessss-detection],<br>[edit protocols ldp oam bfd-livenessss-detection],<br>[edit protocols ldp oam fec <i>address</i> bfd-livenessss-detection]                                                                                 |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.4.                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Description</b>              | Configure route and next-hop properties in the event of a BFD session failure event on an LDP LSP. The failure event could be an existing BFD session that has gone down or could be a BFD session that never came up. LDP adds back the route or next hop when the relevant BFD session comes back up.                                                                                                                            |
| <b>Options</b>                  | <p><b>remove-nexthop</b>—Remove a route corresponding to a next hop of the LSP's route at the ingress node when a BFD session failure event is detected.</p> <p><b>remove-route</b>—Remove the route corresponding to an LSP from the appropriate routing tables when a BFD session failure event is detected. If the LSP is configured with ECMP and a BFD session corresponding to any path goes down, the route is removed.</p> |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                     |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring a Failure Action for the BFD Session on an LDP LSP on page 624</a></li> </ul>                                                                                                                                                                                                                                                                                     |

## fec

```

Syntax  fec fec-address {
        bfd-liveness-detection {
            detection-time threshold milliseconds;
            ecmp;
            failure-action {
                remove-nexthop;
                remove-route;
            }
            holddown-interval milliseconds;
            ingress-policy ingress-policy-name;
            minimum-interval milliseconds;
            minimum-receive-interval milliseconds;
            minimum-transmit-interval milliseconds;
            multiplier detection-time-multiplier;
            no-adaptation;
            transmit-interval {
                minimum-interval milliseconds;
                threshold milliseconds;
            }
            version (0 | 1 | automatic);
        }
        no-bfd-liveness-detection;
        periodic-traceroute {
            disable;
            exp exp-value;
            fanout fanout-value;
            frequency minutes;
            paths number-of-paths;
            retries retry-attempts;
            source address;
            ttl ttl-value;
            wait seconds;
        }
    }

```

**Hierarchy Level** [edit logical-systems *logical-systems-name* protocols ldp oam],  
[edit protocols ldp oam]

**Release Information** Statement introduced in Junos OS Release 8.5.  
Statement introduced in Junos OS Release 12.2 for EX Series switches.  
Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

**Description** Allows you to configure BFD for a specific LDP forwarding equivalence class (FEC).

**Options** *fec-address*—Specify the FEC address.  
  
The other statements are explained separately.

**Required Privilege Level** routing—To view this statement in the configuration.  
routing-control—To add this statement to the configuration.

**Related Documentation** • [Configuring BFD for LDP LSPs on page 620](#)

## graceful-restart (Protocols LDP)

|                            |                                                                                                                                                                                                                                                                                       |
|----------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | <pre>graceful-restart {   disable;   helper-disable;   maximum-neighbor-recovery-time <i>value</i>;   reconnect-time <i>seconds</i>;   recovery-time <i>value</i>; }</pre>                                                                                                            |
| <b>Hierarchy Level</b>     | <pre>[edit logical-systems <i>logical-system-name</i> protocols ldp], [edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols ldp], [edit protocols ldp], [edit routing-instances <i>routing-instance-name</i> protocols ldp]</pre> |
| <b>Release Information</b> | <p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.</p>                                                                                                                                                  |
| <b>Description</b>         | Configure LDP graceful restart on the LDP master protocol instance or for a specific routing instance.                                                                                                                                                                                |



**NOTE:** When you alter the graceful restart configuration at either the [edit routing-options graceful-restart] or [edit protocols ldp graceful-restart] hierarchy levels, any running LDP session is automatically restarted to apply the graceful restart configuration. This behavior mirrors the behavior of BGP when you alter its graceful restart configuration.

**Required Privilege Level** routing—To view this statement in the configuration.  
routing-control—To add this statement to the configuration.

**Related Documentation** • [Configuring LDP Graceful Restart on page 610](#)

## hello-interval (Protocols LDP)

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>hello-interval <i>seconds</i>;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Hierarchy Level</b>          | <code>[edit logical-systems <i>logical-system-name</i> protocols ldp interface <i>interface-name</i>],</code><br><code>[edit logical-systems <i>logical-system-name</i> protocols ldp targeted-hello],</code><br><code>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols</code><br><code>  ldp interface <i>interface-name</i>],</code><br><code>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols</code><br><code>  ldp targeted-hello],</code><br><code>[edit protocols ldp interface <i>interface-name</i>],</code><br><code>[edit protocols ldp targeted-hello],</code><br><code>[edit routing-instances <i>routing-instance-name</i> protocols ldp interface <i>interface-name</i>],</code><br><code>[edit routing-instances <i>routing-instance-name</i> protocols ldp targeted-hello]</code> |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Support for LDP targeted hellos added in Junos OS Release 9.5.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Description</b>              | Control the LDP timer that regulates how often hello messages are sent. You can control the rate both link hello messages and targeted hello messages are sent depending on the hierarchy level at which you configure the <b>hello-interval</b> statement.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Options</b>                  | <b><i>seconds</i></b> —Length of time between transmission of hello packets.<br><b>Range:</b> 1 through 65,535 seconds<br><b>Default:</b> 5 seconds for link hello messages, 15 seconds for targeted hello messages                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring the LDP Timer for Hello Messages on page 589</a></li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |

## helper-disable (LDP)

---

|                                 |                                                                                                                                                                                                                                                                                                                                                         |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | helper-disable;                                                                                                                                                                                                                                                                                                                                         |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols ldp graceful-restart],<br>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols ldp graceful-restart],<br>[edit protocols ldp graceful-restart],<br>[edit routing-instances <i>routing-instance-name</i> protocols ldp graceful-restart] |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                                                                                               |
| <b>Description</b>              | Disable helper mode for LDP graceful restart. When helper mode is disabled, a router cannot help a neighboring router that is attempting to restart LDP.                                                                                                                                                                                                |
| <b>Default</b>                  | Helper mode is enabled by default on all routing protocols (including LDP) that support graceful restart.                                                                                                                                                                                                                                               |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                     |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring LDP Graceful Restart on page 610</a></li> </ul>                                                                                                                                                                                                                                        |

## holddown-interval

---

|                                 |                                                                                                                                                                                                                                                                                                                                                |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>holddown-interval <i>holddown-interval</i>;</code>                                                                                                                                                                                                                                                                                       |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols ldp oam bfd-livenesss-detection],<br>[edit logical-systems <i>logical-system-name</i> protocols ldp oam fec <i>address</i><br>bfd-livenesss-detection],<br>[edit protocols ldp oam bfd-livenesss-detection],<br>[edit protocols ldp oam fec <i>address</i> bfd-livenesss-detection] |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.4.                                                                                                                                                                                                                                                                                                  |
| <b>Description</b>              | Specify how long the BFD session should be up before adding the route or next hop.<br>Specifying a time of 0 seconds causes the route or next hop to be added as soon as the BFD session comes back up.                                                                                                                                        |
| <b>Options</b>                  | <b><i>holddown-interval</i></b> —Number of seconds the BFD session should remain up before adding the route or next hop.<br><b>Default:</b> 0 seconds<br><b>Range:</b> 0 through 65,535 seconds                                                                                                                                                |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                            |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring the Holddown Interval for the BFD Session on page 625</a></li></ul>                                                                                                                                                                                                            |

## hold-time (Protocols LDP)

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>hold-time seconds;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Hierarchy Level</b>          | <p>[edit logical-systems <i>logical-system-name</i> protocols ldp interface <i>interface-name</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> protocols ldp targeted-hello],</p> <p>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols ldp interface <i>interface-name</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols ldp targeted-hello],</p> <p>[edit protocols ldp interface <i>interface-name</i>],</p> <p>[edit protocols ldp targeted-hello],</p> <p>[edit routing-instances <i>routing-instance-name</i> protocols ldp interface <i>interface-name</i>],</p> <p>[edit routing-instances <i>routing-instance-name</i> protocols ldp targeted-hello]</p> |
| <b>Release Information</b>      | <p>Statement introduced before Junos OS Release 7.4.</p> <p>Support for LDP targeted hellos added in Junos OS Release 9.5.</p> <p>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Description</b>              | <p>Specify how long an LDP node should wait for a hello message before declaring a neighbor to be down. This value is sent as part of a hello message so that each LDP node tells its neighbors how long to wait. You can specify times for both link hello messages and targeted hello messages depending on the hierarchy level at which you configure the <b>hold-time</b> statement.</p>                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Options</b>                  | <p><b>seconds</b>—Hold-time value.</p> <p><b>Range:</b> 1 through 65,535 seconds</p> <p><b>Default:</b> 15 seconds for link hello messages, 45 seconds for targeted hello messages</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring the Delay Before LDP Neighbors Are Considered Down on page 589</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |

## ignore-lsp-metrics

---

|                                 |                                                                                                                                                                                                                                                                                                                      |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | ignore-lsp-metrics;                                                                                                                                                                                                                                                                                                  |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols ospf traffic-engineering shortcuts],<br>[edit protocols ospf traffic-engineering shortcuts]                                                                                                                                                               |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 7.5.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                                                                |
| <b>Description</b>              | Cause OSPF to ignore the RSVP LSP metric.<br><br>Some other vendors use an OSPF metric of 1 for the loopback address. Juniper Networks routers use an OSPF metric of 0 for the loopback address. This can cause interoperability problems when you configure LDP tunneling over RSVP LSPs in heterogeneous networks. |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                  |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Enabling LDP over RSVP-Established LSPs in Heterogeneous Networks on page 724</a></li></ul>                                                                                                                                                                      |

## igp-synchronization

---

|                                 |                                                                                                                                                                                                                                                                                     |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | igp-synchronization holddown-interval <i>seconds</i> ;                                                                                                                                                                                                                              |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols ldp],<br>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols ldp],<br>[edit protocols ldp],<br>[edit routing-instances <i>routing-instance-name</i> protocols ldp] |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.5.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                               |
| <b>Description</b>              | Configure the time the LDP waits before informing the IGP that the LDP neighbor and session for an interface are operational. For large networks with numerous FECs, you might need to configure a longer value to allow enough time for the LDP label databases to be exchanged.   |
| <b>Options</b>                  | <b>holddown-interval <i>seconds</i></b> —Time the LDP waits before informing the IGP that the LDP neighbor and session for an interface are operational.<br><b>Default:</b> 10 seconds<br><b>Range:</b> 10 through 60 seconds                                                       |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                 |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring LDP Synchronization with the IGP on the Router on page 728</a></li></ul>                                                                                                                                            |



## import (Protocols LDP)

---

|                                 |                                                                                                                                                                                                                                                                                     |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>import [ <i>policy-names</i> ];</code>                                                                                                                                                                                                                                        |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols ldp],<br>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols ldp],<br>[edit protocols ldp],<br>[edit routing-instances <i>routing-instance-name</i> protocols ldp] |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                           |
| <b>Description</b>              | Apply policy filters to received LDP label bindings. Filters are applied to all label bindings from all neighbors.                                                                                                                                                                  |
| <b>Options</b>                  | <i>policy-names</i> —Name of one or more routing policies.                                                                                                                                                                                                                          |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                 |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Filtering Inbound LDP Label Bindings on page 613</a></li> </ul>                                                                                                                                                                |

## ingress-policy

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>ingress-policy [ <i>ingress-policy-names</i> ];</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Hierarchy Level</b>          | [edit logical-system <i>logical-system-name</i> protocols ldp <a href="#">entropy-label</a> ],<br>[edit logical-system <i>logical-system-name</i> protocols ldp <a href="#">oam</a> ],<br>[edit protocols ldp <a href="#">entropy-label</a> ],<br>[edit protocols ldp <a href="#">oam</a> ]                                                                                                                                                                                                                  |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.4.<br>Statement introduced at the [edit protocols ldp <a href="#">entropy-label</a> ] hierarchy level in Junos OS Release 14.1.                                                                                                                                                                                                                                                                                                                                   |
| <b>Description</b>              | <p>Configure an LDP ingress policy for either the entropy label or Operation, Administration, and Management (OAM).</p> <p>For OAM, configure the ingress policy to choose which forwarding equivalence classes (FECs) need to have OAM enabled. If the FEC passes through the policy or if the FEC is explicitly configured, OAM is enabled for a FEC. For FECs chosen using a policy, the BFD parameters configured under [edit protocols ldp <a href="#">oam bfd-liveness-detection</a>] are applied.</p> |
| <b>Options</b>                  | <i>ingress-policy-names</i> —Specify the names of the ingress policies.                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring OAM Ingress Policies for LDP on page 625</a></li><li>• <a href="#">Configuring the Entropy Label for LSPs on page 246</a></li></ul>                                                                                                                                                                                                                                                                                                          |

## interface (Protocols LDP)

|                                 |                                                                                                                                                                                                                                                                                       |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>interface <i>interface-name</i> {     disable;     hello-interval <i>seconds</i>;     hold-time <i>seconds</i>;     transport-address (interface   loopback); }</pre>                                                                                                            |
| <b>Hierarchy Level</b>          | <pre>[edit logical-systems <i>logical-system-name</i> protocols ldp], [edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols ldp], [edit protocols ldp], [edit routing-instances <i>routing-instance-name</i> protocols ldp]</pre> |
| <b>Release Information</b>      | <p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.</p>                                                                                                                                                  |
| <b>Description</b>              | Enable LDP on one or more router interfaces.                                                                                                                                                                                                                                          |
| <b>Default</b>                  | LDP is disabled on all interfaces.                                                                                                                                                                                                                                                    |
| <b>Options</b>                  | <p><i>interface-name</i>—Name of an interface. To configure all interfaces, specify <b>all</b>.</p> <p>The remaining statements are explained separately.</p>                                                                                                                         |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                        |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Enabling and Disabling LDP on page 588</a></li> </ul>                                                                                                                                                                            |

## keepalive-interval

---

|                                 |                                                                                                                                                                                                                                                                                     |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>keepalive-interval <i>seconds</i>;</code>                                                                                                                                                                                                                                     |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols ldp],<br>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols ldp],<br>[edit protocols ldp],<br>[edit routing-instances <i>routing-instance-name</i> protocols ldp] |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                           |
| <b>Description</b>              | Set the keepalive interval value.                                                                                                                                                                                                                                                   |
| <b>Options</b>                  | <b><i>seconds</i></b> —Keepalive value.<br><b>Range:</b> 1 through 65,535<br><b>Default:</b> 10 seconds                                                                                                                                                                             |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                 |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring the Interval for LDP Keepalive Messages on page 591</a></li></ul>                                                                                                                                                   |

## keepalive-timeout

|                                 |                                                                                                                                                                                                                                                                                     |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>keepalive-timeout <i>seconds</i>;</code>                                                                                                                                                                                                                                      |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols ldp],<br>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols ldp],<br>[edit protocols ldp],<br>[edit routing-instances <i>routing-instance-name</i> protocols ldp] |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                           |
| <b>Description</b>              | Set the keepalive timeout value. The keepalive timeout defines the amount of time that the neighbor LDP node waits before determining that the session has failed.                                                                                                                  |
| <b>Options</b>                  | <b><i>seconds</i></b> —Keepalive timeout value.<br><b>Range:</b> 1 through 65,535<br><b>Default:</b> 30 seconds                                                                                                                                                                     |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                 |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring the LDP Keepalive Timeout on page 592</a></li> </ul>                                                                                                                                                               |

## l2-smart-policy

|                                 |                                                                                                                                                                                                                                                                                     |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>l2-smart-policy;</code>                                                                                                                                                                                                                                                       |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols ldp],<br>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols ldp],<br>[edit protocols ldp],<br>[edit routing-instances <i>routing-instance-name</i> protocols ldp] |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 8.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                               |
| <b>Description</b>              | Prevent LDP from exporting IPv4 FECs over sessions with Layer 2 neighbors only. IPv4 FECs received over such sessions are filtered out.                                                                                                                                             |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                 |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring LDP IPv4 FEC Filtering on page 620</a></li> </ul>                                                                                                                                                                  |

## label-withdrawal-delay

---

|                                 |                                                                                                                                                                                                                                                                                     |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | label-withdrawal-delay <i>seconds</i> ;                                                                                                                                                                                                                                             |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols ldp],<br>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols ldp],<br>[edit protocols ldp],<br>[edit routing-instances <i>routing-instance-name</i> protocols ldp] |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.1.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                               |
| <b>Description</b>              | Delay the withdrawal of labels to reduce router workload during IGP convergence.                                                                                                                                                                                                    |
| <b>Options</b>                  | <b>seconds</b> —Configure the number of seconds to wait before withdrawing labels for the LDP LSPs.<br><b>Default:</b> 60 seconds<br><b>Range:</b> 0 through 300 seconds                                                                                                            |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                 |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring the Label Withdrawal Timer on page 728</a></li></ul>                                                                                                                                                                |

## ldp

```
Syntax  ldp {
    (deaggregate | no-deaggregate);
    dual-transport {
        inet-lsr-id inet-lsr-id;
        inet6-lsr-id inet6-lsr-id;
    }
    egress-policy [ policy-names ];
    explicit-null;
    export [ policy-names ];
    family (Protocols LDP) {
        inet;
        inet6;
    }
    graceful-restart {
        disable;
        helper-disable;
        maximum-neighbor-recovery-time seconds;
        reconnect-time seconds;
        recovery-time seconds;
    }
    import [ policy-names ];
    interface (interface-name | all) {
        disable;
        hello-interval seconds;
        hold-time seconds;
        transport-address (interface | router-id);
    }
    keepalive-interval seconds;
    keepalive-timeout seconds;
    log-updown {
        trap disable;
    }
    no-forwarding;
    oam {
        bfd-liveness-detection {
            detection-time threshold milliseconds;
            ecmp;
            failure-action {
                remove-nexthop;
                remove-route;
            }
            holddown-interval milliseconds;
            minimum-interval milliseconds;
            minimum-receive-interval milliseconds;
            minimum-transmit-interval milliseconds;
            multiplier detection-time-multiplier;
            no-adaptation;
            transmit-interval {
                minimum-interval milliseconds;
                threshold milliseconds;
            }
        }
    }
}
```

```
fec fec-address {
  bfd-liveness-detection {
    detection-time threshold milliseconds;
    ecmp;
    failure-action {
      remove-nexthop;
      remove-route;
    }
    holddown-interval milliseconds;
    ingress-policy ingress-policy-name;
    minimum-interval milliseconds;
    minimum-receive-interval milliseconds;
    minimum-transmit-interval milliseconds;
    multiplier detection-time-multiplier;
    no-adaptation;
    transmit-interval {
      minimum-interval milliseconds;
      threshold milliseconds;
    }
    version (0 | 1 | automatic);
  }
  no-bfd-liveness-detection;
  periodic-traceroute {
    disable;
    exp exp-value;
    fanout fanout-value;
    frequency minutes;
    paths number-of-paths;
    retries retry-attempts;
    source address;
    ttl ttl-value;
    wait seconds;
  }
}
ingress-policy ingress-policy-name;
periodic-traceroute {
  disable;
  exp exp-value;
  fanout fanout-value;
  frequency minutes;
  paths number-of-paths;
  retries retry-attempts;
  source address;
  ttl ttl-value;
  wait seconds;
}
}
p2mp;
policing {
  fec fec-address {
    ingress-traffic filter-name;
    transit-traffic filter-name;
  }
}
preference preference;
session address {
```



```

authentication-algorithm algorithm;
authentication-key authentication-key;
authentication-key-chain key-chain-name;
}
strict-targeted-hellos;
traceoptions {
  file filename <files number <size size> <world-readable | no-world-readable>;
  flag flag <flag-modifier> <disable>;
}
track-igp-metric;
traffic-statistics {
  file filename <files number> <size size> <world-readable | no-world-readable>;
  interval interval;
  no-penultimate-hop;
}
transport-address (address | interface | router-id);
transport-preference [ipv4 | ipv6];
}

```

|                          |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|--------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Hierarchy Level          | [edit logical-systems <i>logical-system-name</i> protocols],<br>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols],<br>[edit protocols],<br>[edit routing-instances <i>routing-instance-name</i> protocols]                                                                                                                                                                                                                                                                                                |
| Release Information      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 11.1 for EX Series switches.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.<br><b>dual-transport</b> statement introduced in Junos OS Release 16.1 for the M320 Series, MX Series, and PTX Series.<br><b>family</b> statement introduced in Junos OS Release 16.1 for the M320 Series, MX Series, and PTX Series.<br><b>transport-preference</b> option introduced in Junos OS Release 16.1 for the M320 Series, MX Series, and PTX Series. |
| Description              | Enable LDP routing on the router or switch.<br><br>You must include the <b>ldp</b> statement in the configuration to enable LDP on the router or switch.                                                                                                                                                                                                                                                                                                                                                                                                           |
| Default                  | LDP is disabled on the router.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| Options                  | <b>transport-preference ipv4   ipv6</b> — Select the preferred transport for TCP connection when both IPv4 and IPv6 are enabled. If <b>transport-preference ipv4</b> is configured, LDP will attempt to establish the TCP connection using IPv4. If <b>transport-preference ipv6</b> is configured, LDP will attempt to establish the TCP connection using IPv6.<br><br><b>Default:</b> ipv6<br><br>The other statements are explained separately.                                                                                                                 |
| Required Privilege Level | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                |

- Related Documentation**
- [Minimum LDP Configuration on page 588](#)
  - [Enabling and Disabling LDP on page 588](#)

---

## ldp-synchronization

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                             |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>ldp-synchronization {<br/>    disable;<br/>    hold-time seconds;<br/>}</code>                                                                                                                                                                                                                                                                                                                                        |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols ospf interface <i>interface-name</i> ],<br>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols ospf interface <i>interface-name</i> ],<br>[edit protocols ospf interface <i>interface-name</i> ],<br>[edit routing-instances <i>routing-instance-name</i> protocols ospf interface <i>interface-name</i> ] |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 7.5.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                                                                                                                                                                       |
| <b>Description</b>              | Enable synchronization by advertising the maximum cost metric until LDP is operational on the link.                                                                                                                                                                                                                                                                                                                         |
| <b>Options</b>                  | The other statements are explained separately.                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                         |
| <b>Related Documentation</b>    | • <a href="#">Configuring LDP Synchronization with the IGP on LDP Links on page 727</a>                                                                                                                                                                                                                                                                                                                                     |

---

## log-updown (Protocols LDP)

---

|                                 |                                                                                                                                                                                                                                                                                     |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | log-updown {<br>trap disable;<br>}                                                                                                                                                                                                                                                  |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols ldp],<br>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols ldp],<br>[edit protocols ldp],<br>[edit routing-instances <i>routing-instance-name</i> protocols ldp] |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                           |
| <b>Description</b>              | Disable LDP traps on the router, logical system, or routing instance.                                                                                                                                                                                                               |
| <b>Options</b>                  | <b>trap disable</b> —Disable LDP traps.<br><b>Default:</b> LDP traps are enabled on the router.                                                                                                                                                                                     |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                 |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Disabling SNMP Traps for LDP on page 727</a></li></ul>                                                                                                                                                                          |

## make-before-break (LDP)

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>make-before-break {<br/>    timeout <i>seconds</i>;<br/>    switchover-delay <i>seconds</i>;<br/>}</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Hierarchy Level</b>          | [edit protocols ldp]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 12.3.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Description</b>              | Configures make before break (MBB) for multicast LDP (MLDP) link protection to ensure minimum packet loss when attempting to signal a new label-switched path (LSP) before tearing down the old LSP path.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Options</b>                  | <p><b>timeout <i>seconds</i></b>—Specify a value to change a make -before-break timeout for point-to-multipoint LSPs. Even if an MBB acknowledgment is not received for a point-to-multipoint LSP before the specified timeout period expires, the label-switching router (LSR) performs an MBB switchover from the old LSR to the new upstream LSR.</p> <p><b>Range:</b> 1 through 300 seconds</p> <p><b>Default:</b> 30 seconds</p> <p><b>switchover-delay <i>seconds</i></b>—Specify a value to change switchover delay for a point-to-multipoint LSP from the old LSR to the new upstream LSR. If an MBB acknowledgment is received on a point of local repair (PLR) router, the PLR waits for the specified seconds to switch its upstream LSR from the old LSR to the new LSR.</p> <p><b>Range:</b> 1 through 300 seconds</p> <p><b>Default:</b> 30 seconds</p> |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Example: Configuring LDP Link Protection on page 627</a></li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |

## maximum-neighbor-recovery-time

|                                 |                                                                                                                                                                                                                                                                                                                                                         |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>maximum-neighbor-recovery-time seconds;</code>                                                                                                                                                                                                                                                                                                    |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols ldp graceful-restart],<br>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols ldp graceful-restart],<br>[edit protocols ldp graceful-restart],<br>[edit routing-instances <i>routing-instance-name</i> protocols ldp graceful-restart] |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4. Statement changed from <b>maximum-recovery-time</b> to <b>maximum-neighbor-recovery-time</b> in Junos OS Release 9.1. Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                            |
| <b>Description</b>              | Specify the maximum amount of time to wait before giving up an attempt to gracefully restart.                                                                                                                                                                                                                                                           |
| <b>Options</b>                  | <b>seconds</b> —Configure the maximum recovery time, in seconds.<br><b>Range:</b> 120 through 1800 seconds<br><b>Default:</b> 140 seconds                                                                                                                                                                                                               |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                     |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring Recovery Time and Maximum Recovery Time on page 612</a></li> <li>• <a href="#">Configuring Graceful Restart Options for LDP</a></li> <li>• <a href="#">no-strict-lsa-checking</a></li> <li>• <a href="#">recovery-time</a></li> </ul>                                                  |

## mldp-inband-signalling (Protocols Multipoint LDP)

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | mldp-inband-signalling {<br>policy <i>policy-name</i> ;<br>}                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols pim],<br>[edit protocols pim],                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 13.2.                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Description</b>              | <p>Multipoint LDP (M-LDP) in-band signaling enables you to carry multicast traffic across an existing IP/MPLS backbone, while avoiding the use of PIM in the provider core.</p> <p>On the label-edge router (LER), enable PIM to use M-LDP in-band signaling for the upstream neighbors when the LER does not detect a PIM upstream neighbor. On the egress nodes, configure the MPLS LSP root in the PIM configuration, using the <b>policy</b> statement.</p> <p>The remaining statement is explained separately.</p> |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Example: Configuring Multipoint LDP In-Band Signaling for Point-to-Multipoint LSPs on page 691</a></li></ul>                                                                                                                                                                                                                                                                                                                                                        |

## mofrr-asm-starg (Multicast-Only Fast Reroute in a PIM Domain)

|                            |                                                                                                                                                                                                                                                                                                                                                                                                             |
|----------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | <code>mofrr-asm-starg;</code>                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Hierarchy Level</b>     | [edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> routing-options multicast stream-protection],<br>[edit logical-systems <i>logical-system-name</i> routing-options multicast stream-protection],<br>[edit routing-instances <i>routing-instance-name</i> routing-options multicast stream-protection],<br>[edit routing-options multicast stream-protection] |
| <b>Release Information</b> | Statement introduced in Junos OS Release 14.1.                                                                                                                                                                                                                                                                                                                                                              |
| <b>Description</b>         | Enable <b>mofrr-asm-starg</b> to include any-source multicast (ASM) for (*G) joins in the Multicast-only fast reroute (MoFRR).                                                                                                                                                                                                                                                                              |



**NOTE:** **mofrr-asm-starg** applies to IP-PIM only. When enabled for group G, \*G will undergo MoFRR as long as there is no S#,G for Group G. In other words, \*G MoFRR will cease and any old states will be torn down when S#,G is created. Note too, that **mofrr-asm-starg** is not supported for mLDP (since mLDP itself does not support \*G).

In a PIM domain with MoFRR enabled, the default for **stream-protection** is S,G routes only.

Context: Multicast-only fast reroute (MoFRR) can be used to reduce traffic loss in a multicast distribution tree in the event of link down. To employ MoFRR, a downstream router is configured with an alternative path back towards the source, over which it receives a backup live stream of the same multicast traffic. That router propagates the same (S,G) join toward both upstream neighbors in order to create duplicate multicast trees. If a failure is detected on the primary tree, the router switches to the backup tree to prevent packet loss.

|                                 |                                                                                                                                                                                                                                                                                                                                          |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                      |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Understanding Multicast-Only Fast Reroute on page 644</a></li> <li>• <a href="#">Example: Configuring Multicast-Only Fast Reroute in a PIM Domain</a></li> <li>• <a href="#">Example: Configuring Multicast-Only Fast Reroute in a Multipoint LDP Domain on page 654</a></li> </ul> |

## **mofrr-disjoint-upstream-only (Multicast-Only Fast Reroute in a PIM Domain)**

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>mofrr-disjoint-upstream-only;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Hierarchy Level</b>          | <code>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> routing-options multicast stream-protection],</code><br><code>[edit logical-systems <i>logical-system-name</i> routing-options multicast stream-protection],</code><br><code>[edit routing-instances <i>routing-instance-name</i> routing-options multicast stream-protection],</code><br><code>[edit routing-options multicast stream-protection]</code>                                                                                                                                                                                                  |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 14.1.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Description</b>              | <p>When you configure multicast-only fast reroute (MoFRR) in a PIM domain, allow only a disjoint RPF (an RPF on a separate plane) to be selected as the backup RPF path.</p> <p>In a multipoint LDP MoFRR domain, the same label is shared between parallel links to the same upstream neighbor. This is not the case in a PIM domain, where each link forms a neighbor. The <b>mofrr-disjoint-upstream-only</b> statement does not allow a backup RPF path to be selected if the path goes to the same upstream neighbor as that of the primary RPF path. This ensures that MoFRR is triggered only on a topology that has multiple RPF upstream neighbors.</p> |
| <b>Required Privilege Level</b> | <code>routing</code> —To view this statement in the configuration.<br><code>routing-control</code> —To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Understanding Multicast-Only Fast Reroute on page 644</a></li><li>• <a href="#">Example: Configuring Multicast-Only Fast Reroute in a PIM Domain</a></li><li>• <a href="#">Example: Configuring Multicast-Only Fast Reroute in a Multipoint LDP Domain on page 654</a></li></ul>                                                                                                                                                                                                                                                                                                                             |



## mofrr-no-backup-join (Multicast-Only Fast Reroute in a PIM Domain)

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                             |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | mofrr-no-backup-join;                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> routing-options multicast stream-protection],<br>[edit logical-systems <i>logical-system-name</i> routing-options multicast stream-protection],<br>[edit routing-instances <i>routing-instance-name</i> routing-options multicast stream-protection],<br>[edit routing-options multicast stream-protection] |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 14.1.                                                                                                                                                                                                                                                                                                                                                              |
| <b>Description</b>              | When you configure multicast-only fast reroute (MoFRR) in a PIM domain, prevent sending join messages on the backup path, but retain all other MoFRR functionality.                                                                                                                                                                                                                                         |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                         |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Understanding Multicast-Only Fast Reroute on page 644</a></li> <li>• <a href="#">Example: Configuring Multicast-Only Fast Reroute in a PIM Domain</a></li> <li>• <a href="#">Example: Configuring Multicast-Only Fast Reroute in a Multipoint LDP Domain on page 654</a></li> </ul>                                                                    |

## mofrr-primary-path-selection-by-routing (Multicast-Only Fast Reroute)

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | mofrr-primary-path-selection-by-routing;                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> routing-options multicast stream-protection],<br>[edit logical-systems <i>logical-system-name</i> routing-options multicast stream-protection],<br>[edit routing-instances <i>routing-instance-name</i> routing-options multicast stream-protection],<br>[edit routing-options multicast stream-protection]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 14.1.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Description</b>              | <p>MoFRR is supported on both equal-cost multipath (ECMP) paths and non-ECMP paths. Unicast loop-free alternate (LFA) routes need to be enabled to support MoFRR on non-ECMP paths. LFA routes are enabled with the link-protection statement in the interior gateway protocol (IGP) configuration. When you enable link protection on an OSPF or IS-IS interface, Junos OS creates a backup LFA path to the primary next hop for all destination routes that traverse the protected interface.</p> <p>For Junos OS releases before 15.1R7, for both ECMP and Non-ECMP scenarios, the default MoFRR behavior was <i>sticky</i>, that is, if the Active link went down, the Active Path selection would give preference to Backup Path for the transition. The Active Path would not follow the unicast selected gateway</p> <p>Starting in Junos OS Release 15.1R7 however, the default behavior for non-EMCP scenarios is to be <i>nonsticky</i>, that is, the selection of Active Path strictly follows unicast selected gateway. MoFRR no longer chooses a unicast LFA path to become the MoFRR Active path; only a unicast LFA path can be selected to become MoFRR Backup.</p> |
| <b>Default</b>                  | By default, the backup path gets promoted to be the primary path when MoFRR is configured in a PIM domain.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Understanding Multicast-Only Fast Reroute on page 644</a></li><li>• <a href="#">Example: Configuring Multicast-Only Fast Reroute in a PIM Domain</a></li><li>• <a href="#">Example: Configuring Multicast-Only Fast Reroute in a Multipoint LDP Domain on page 654</a></li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |

## no-forwarding

---

|                                 |                                                                                                                                                                                                                                                                                     |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | no-forwarding;                                                                                                                                                                                                                                                                      |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols ldp],<br>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols ldp],<br>[edit protocols ldp],<br>[edit routing-instances <i>routing-instance-name</i> protocols ldp] |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                           |
| <b>Description</b>              | Do not add ingress routes to the inet.0 routing table even if <a href="#">traffic-engineering bgp-igp</a> (configured at the <a href="#">[edit protocols mpls]</a> hierarchy level) is enabled.                                                                                     |
| <b>Default</b>                  | The <b>no-forwarding</b> statement is disabled. Ingress routes are added to the inet.0 routing table instead of the inet.3 routing table when <a href="#">traffic-engineering bgp-igp</a> is enabled.                                                                               |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                 |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Preventing Addition of Ingress Routes to the inet.0 Routing Table on page 723</a></li> <li>• <a href="#">Configuring Virtual-Router Routing Instances in VPNs</a></li> </ul>                                                   |

## oam (Protocols LDP)

```
Syntax  oam {
        bfd-liveness-detection {
            detection-time threshold milliseconds;
            ecmp;
            failure-action {
                remove-nexthop;
                remove-route;
            }
            holddown-interval milliseconds;
            ingress-policy ingress-policy-name;
            minimum-interval milliseconds;
            minimum-receive-interval milliseconds;
            minimum-transmit-interval milliseconds;
            multiplier detection-time-multiplier;
            no-adaptation;
            transmit-interval {
                minimum-interval milliseconds;
                threshold milliseconds;
            }
            version (0 | 1 | automatic);
        }
        fec fec-address;
        ingress-policy ingress-policy-name;
        lsp-ping-interval seconds;
        periodic-traceroute {
            disable;
            exp exp-value;
            fanout fanout-value;
            frequency minutes;
            paths number-of-paths;
            retries retry-attempts;
            source address;
            ttl ttl-value;
            wait seconds;
        }
    }
```

**Hierarchy Level** [edit logical-systems *logical-system-name* protocols *ldp*]  
[edit protocols *ldp*]

**Release Information** Statement introduced in Junos OS Release 7.6.  
***lsp-ping-interval*** option introduced in Junos OS Release 9.4.

**Description** Configure Operation, Administration, and Maintenance (OAM) and Bidirectional Forwarding Detection (BFD) protocol for LDP.

**Options** ***fec fec-address***—Specify the forwarding equivalence class (FEC) address. You must either specify a FEC address or configure an OAM ingress policy to ensure that the BFD session comes up.

**lsp-ping-interval *seconds***—Specify the duration of the LSP ping interval in seconds. To issue a ping on an LDP-signaled LSP, use the **ping mpls ldp** command.

**Default:** 60 seconds

**Range:** 30 through 3,600 seconds

The remaining statements are explained separately.

**Required Privilege Level** routing—To view this statement in the configuration.  
routing-control—To add this statement to the configuration.

**Related Documentation**

- [Configuring BFD for LDP LSPs on page 620](#)

## p2mp (Protocols LDP)

**Syntax** p2mp{  
    root-address *root-address*{  
        lsp-id *id*;  
    }

**Hierarchy Level** [edit logical-systems *logical-system-name* protocols ldp],  
[edit logical-systems *logical-system-name* routing-instances *routing-instance-name* protocols ldp],  
[edit protocols ldp],  
[edit routing-instances *routing-instance-name* protocols ldp]

**Release Information** Statement introduced in Junos OS Release 11.2.

**Description** Enable point-to-multipoint MPLS LSPs in an LDP-signaled LSP.

**Required Privilege Level** routing—To view this statement in the configuration.  
routing-control—To add this statement to the configuration.

**Related Documentation**

- [Example: Configuring Point-to-Multipoint LDP LSPs as the Data Plane for Intra-AS MBGP MVPNs](#)
- [Point-to-Multipoint LSPs Overview on page 309](#)

## p2mp-ldp-next-hop

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>p2mp-ldp-next-hop {<br/>  root-address <i>root-address</i>{<br/>    lsp-id <i>id</i>;<br/>  }<br/>}</pre>                                                                                                                                                                                                                                                                                                                                              |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> routing-options static route <i>destination-prefix</i> ],<br>[edit logical-systems <i>logical-system-name</i> routing-options static route <i>destination-prefix</i> ],<br>[edit routing-instances <i>routing-instance-name</i> routing-options static route <i>destination-prefix</i> ],<br>[edit routing-options static route <i>destination-prefix</i> ] |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 13.3.                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Description</b>              | Specify a point-to-multipoint LDP label-switched path (LSP) as the next hop for a static route, and configure a root and provide an lsp-id on that LDP-signalled label-switched path.                                                                                                                                                                                                                                                                       |
| <b>Options</b>                  | <b>root-address <i>root address</i></b> — Specify the root address of the point-to-multipoint LSP.<br><br><b>lsp-id <i>id</i></b> — Specify the generic LSP identifier. The range is 1 through 65535.                                                                                                                                                                                                                                                       |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                         |
| <b>Related Documentation</b>    |                                                                                                                                                                                                                                                                                                                                                                                                                                                             |

## periodic-traceroute

|                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|----------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | <pre> periodic-traceroute {   disable;   exp <i>exp-value</i>;   fanout <i>fanout-value</i>;   frequency <i>minutes</i>;   paths <i>number-of-paths</i>;   retries <i>retry-attempts</i>;   source <i>address</i>;   ttl <i>ttl-value</i>;   wait <i>seconds</i>; } </pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Hierarchy Level</b>     | [edit logical-systems <i>logical-system-name</i> protocols ldp oam],<br>[edit logical-systems <i>logical-system-name</i> protocols ldp oam fec <i>fec-address</i> ],<br>[edit protocols ldp oam],<br>[edit protocols ldp oam fec <i>fec-address</i> ]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Release Information</b> | Statement introduced in Junos OS Release 8.4.<br>Support added at the [edit protocols ldp oam] and [edit logical-systems <i>logical-system-name</i> protocols ldp oam] hierarchy levels in Junos OS Release 9.0.<br>Statement introduced in Junos OS Release 12.2 for EX Series switches.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Description</b>         | Enable tracing of forwarding equivalence classes (FECs) for LDP LSPs.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Options</b>             | <p><b>disable</b>—(Optional) Disable tracing for a specific FEC. This option is available at the [edit protocols ldp oam fec <i>fec-address</i> periodic-traceroute] and [edit logical-systems <i>logical-system-name</i> protocols ldp oam fec <i>fec-address</i> periodic-traceroute] hierarchy levels only.</p> <p><b>exp <i>exp-value</i></b>—(Optional) Specify the class of service to use when sending probes.<br/> <b>Default:</b> 7<br/> <b>Range:</b> 0 through 7</p> <p><b>fanout <i>fanout-value</i></b>—(Optional) Specify the maximum number of next hops to search per node.<br/> <b>Default:</b> 16<br/> <b>Range:</b> 1 through 16</p> <p><b>frequency <i>minutes</i></b>—(Optional) Specify the interval between traceroute attempts.<br/> <b>Default:</b> 60 minutes<br/> <b>Range:</b> 15 through 120 minutes</p> <p><b>paths <i>number-of-paths</i></b>—(Optional) Specify the maximum number of paths to search.<br/> <b>Default:</b> 3<br/> <b>Range:</b> 1 through 255</p> |

**retries** *retry-attempts*—(Optional) Specify the number of attempts to send a probe to a specific node before giving up.

**Default:** 3

**Range:** 1 through 9

**source address**—(Optional) Specify the IPv4 source address to use when sending probes.

**ttl value**—(Optional) Specify the maximum time-to-live value. Nodes that are beyond this value are not traced.

**Default:** 64

**Range:** 1 through 255

**wait seconds**—(Optional) Specify the wait interval before resending a probe packet.

**Default:** 10 seconds

**Range:** 5 though 15 seconds

|                           |                                                             |
|---------------------------|-------------------------------------------------------------|
| <b>Required Privilege</b> | routing—To view this statement in the configuration.        |
| <b>Level</b>              | routing-control—To add this statement to the configuration. |

|                              |                                                                                                              |
|------------------------------|--------------------------------------------------------------------------------------------------------------|
| <b>Related Documentation</b> | <ul style="list-style-type: none"><li>• <a href="#">Configuring LDP LSP Traceroute on page 729</a></li></ul> |
|------------------------------|--------------------------------------------------------------------------------------------------------------|



## policing (Protocols LDP)

|                                 |                                                                                                                                                                                                                                                                                                           |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre> policing {     fec <i>fec-address</i> {         ingress-traffic <i>filter-name</i>;         transit-traffic <i>filter-name</i>;     } } </pre>                                                                                                                                                      |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols ldp],<br>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols ldp],<br>[edit protocols ldp],<br>[edit routing-instances <i>routing-instance-name</i> protocols ldp]                       |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                                                 |
| <b>Description</b>              | Enable policing of forwarding equivalence classes (FECs) for LDP.                                                                                                                                                                                                                                         |
| <b>Options</b>                  | <p><b>fec <i>fec-address</i></b>—Specify the address for the FEC.</p> <p><b>ingress-traffic <i>filter-name</i></b>—Specify the name of the filter for policing ingress FEC traffic.</p> <p><b>transit-traffic <i>filter-name</i></b>—Specify the name of the filter for policing transit FEC traffic.</p> |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                       |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring Policers for LDP FECs on page 619</a></li> </ul>                                                                                                                                                                                         |

## policy (Multicast-Only Fast Reroute)

|                            |                                                                                                                                                                                                                                                                                                                                                                                                             |
|----------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | <code>policy <i>policy-name</i>;</code>                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Hierarchy Level</b>     | [edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> routing-options multicast stream-protection],<br>[edit logical-systems <i>logical-system-name</i> routing-options multicast stream-protection],<br>[edit routing-instances <i>routing-instance-name</i> routing-options multicast stream-protection],<br>[edit routing-options multicast stream-protection] |
| <b>Release Information</b> | Statement introduced in Junos OS Release 14.1.                                                                                                                                                                                                                                                                                                                                                              |
| <b>Description</b>         | <p>When you configure multicast-only fast reroute (MoFRR), apply a routing policy that filters for a restricted set of multicast streams to be affected by your MoFRR configuration. You can apply filters that are based on source or group addresses.</p>                                                                                                                                                 |

For example:

```

routing-options {
  multicast {
    stream-protection {
      policy mofrr-select;
    }
  }
}
policy-statement mofrr-select {
  term A {
    from {
      source-address-filter 225.1.1.1/32 exact;;
    }
    then {
      accept;
    }
  }
  term B {
    from {
      source-address-filter 226.0.0.0/8 orlonger;
    }
    then {
      accept;
    }
  }
  term C {
    from {
      source-address-filter 227.1.1.0/24 orlonger;
      source-address-filter 227.4.1.0/24 orlonger;
      source-address-filter 227.16.1.0/24 orlonger;
    }
    then {
      accept;
    }
  }
  term D {
    from {

```

```

        source-address-filter 227.1.1.1/32 exact
      }
    then {
      reject; #MoFRR disabled
    }
  }
  term E {
    from {
      route-filter 227.1.1.0/24 orlonger;
    }
    then accept;
  }
  ...
}

```

**Required Privilege Level** routing—To view this statement in the configuration.  
routing-control—To add this statement to the configuration.

**Related Documentation**

- [Understanding Multicast-Only Fast Reroute on page 644](#)
- [Example: Configuring Multicast-Only Fast Reroute in a PIM Domain](#)
- [Example: Configuring Multicast-Only Fast Reroute in a Multipoint LDP Domain on page 654](#)

## policy (Protocols Multipoint LDP)

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>policy <i>policy-name</i>;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols pim mldp-inband-signalling],<br>[edit protocols pim mldp-inband-signalling]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 13.2.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Description</b>              | <p>Multipoint LDP (M-LDP) in-band signaling enables you to carry multicast traffic across an existing IP/MPLS backbone, while avoiding the use of PIM in the provider core.</p> <p>On the egress nodes of the point-to-multipoint LSP, specify an M-LDP join translation filter policy where PIM messages are translated into M-LDP FEC bindings. The policy statement is needed when internal BGP (IBGP) is not available in the core site or to override IBGP-based LSP root detection.</p> <p>The filter policy is configured at the <b>[edit policy-options]</b> hierarchy level. The policy generally specifies one or more source-address filters and the point-to-multipoint LDP root IP address using the <b>p2mp-lsp-root</b> policy action.</p> |
| <b>Options</b>                  | <i>policy-name</i> —Name of a policy configured at the <b>[edit policy-options]</b> hierarchy level.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Example: Configuring Multipoint LDP In-Band Signaling for Point-to-Multipoint LSPs on page 691</a></li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |

## preference (Protocols LDP)

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>preference <i>preference</i>;</code>                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols ldp],<br>[edit protocols ldp interface <i>interface-name</i> ],<br>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols ldp],<br>[edit protocols ldp],<br>[edit protocols ldp interface <i>interface-name</i> ],<br>[edit routing-instances <i>routing-instance-name</i> protocols ldp interface <i>interface-name</i> ] |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                                                                                                                                                                                |
| <b>Description</b>              | Set the route preference level for LDP routes.                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Options</b>                  | <i>preference</i> —Preferred value.<br><b>Range:</b> 0 through 255<br><b>Default:</b> 9                                                                                                                                                                                                                                                                                                                                                  |
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                  |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring LDP Route Preferences on page 609</a></li> </ul>                                                                                                                                                                                                                                                                                                                        |

## reconnect-time

---

|                                 |                                                                                                                                                                                                                        |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>reconnect-time seconds;</code>                                                                                                                                                                                   |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols ldp graceful-restart],<br>[edit protocols ldp graceful-restart],<br>[edit routing-instances <i>routing-instance-name</i> protocols ldp graceful-restart]    |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.1.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                  |
| <b>Description</b>              | Specify the length of time required to reestablish a Label Distribution Protocol (LDP) session after graceful restart.                                                                                                 |
| <b>Options</b>                  | <b>seconds</b> —Time required for reconnection.<br><b>Range:</b> 30 through 300<br><b>Default:</b> 60 seconds                                                                                                          |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                    |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring LDP Graceful Restart on page 610</a> on <i>MPLS Applications Feature Guide</i></li><li>• <i>Configuring Graceful Restart Options for LDP</i></li></ul> |

## recovery-time

---

|                                 |                                                                                                                                                                                                                                                                                                                                                         |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>recovery-time seconds;</code>                                                                                                                                                                                                                                                                                                                     |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols ldp graceful-restart],<br>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols ldp graceful-restart],<br>[edit protocols ldp graceful-restart],<br>[edit routing-instances <i>routing-instance-name</i> protocols ldp graceful-restart] |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                                                                                               |
| <b>Description</b>              | Specify the amount of time a router waits for LDP to restart gracefully.                                                                                                                                                                                                                                                                                |
| <b>Options</b>                  | <b>seconds</b> —Configure the recovery time, in seconds.<br><b>Range:</b> 120 through 1800 seconds<br><b>Default:</b> 140 seconds                                                                                                                                                                                                                       |
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                                                                                                                                                                                 |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring Recovery Time and Maximum Recovery Time on page 612</a></li></ul>                                                                                                                                                                                                                       |

## session (ldp)

|                                 |                                                                                                                                                                                                                                                                                         |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>session address {     authentication-algorithm <i>algorithm</i>;     authentication-key <i>authentication-key</i>;     authentication-key-chain <i>key-chain-name</i>; }</pre>                                                                                                     |
| <b>Hierarchy Level</b>          | <pre>[edit logical-systems <i>logical-system-name</i> protocols ldp], [edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols   ldp], [edit protocols ldp], [edit routing-instances <i>routing-instance-name</i> protocols ldp]</pre> |
| <b>Release Information</b>      | <p>Statement introduced before Junos OS Release 7.4.</p> <p><b>authentication-algorithm</b> statement introduced in Junos OS Release 7.6.</p> <p>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.</p>                                                               |
| <b>Description</b>              | <p>Specify the address for the remote end of the LDP session.</p> <p>The remaining statements are explained separately.</p>                                                                                                                                                             |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                          |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring the TCP MD5 Signature for LDP Sessions on page 725</a></li> </ul>                                                                                                                                                      |

## session-protection

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                            |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>session-protection {<br/>    timeout <i>seconds</i>;<br/>}</code>                                                                                                                                                                                                                                                                                                    |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols ldp],<br>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols ldp],<br>[edit protocols ldp],<br>[edit routing-instances <i>routing-instance-name</i> protocols ldp]                                                                                        |
| <b>Description</b>              | Configure when an LDP session is torn down and resigaled after the router stops receiving hello messages from a neighboring router. You might want to modify this behavior to prevent an LDP session from being unnecessarily terminated and reestablished. The LDP session remains up for the duration specified as long as the routers maintain IP network connectivity. |
| <b>Options</b>                  | <b>timeout <i>seconds</i></b> —Time in seconds before the LDP session is torn down and resigaled.<br><b>Range:</b> 1 through 65,535 seconds                                                                                                                                                                                                                                |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                        |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring LDP Session Protection on page 726</a></li></ul>                                                                                                                                                                                                                                                           |



## stream-protection (Multicast-Only Fast Reroute)

|                                 |                                                                                                                                                                                                                                                                                                                                          |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>stream-protection {   mofrr-asm-starg;   mofrr-disjoint-upstream-only;   mofrr-no-backup-join;   mofrr-primary-path-selection-by-routing;   policy <i>policy-name</i>; }</pre>                                                                                                                                                      |
| <b>Hierarchy Level</b>          | <pre>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i>   routing-options multicast], [edit logical-systems <i>logical-system-name</i> routing-options multicast], [edit routing-instances <i>routing-instance-name</i> routing-options multicast], [edit routing-options multicast]</pre>  |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 14.1.                                                                                                                                                                                                                                                                                           |
| <b>Description</b>              | Enable multicast-only fast reroute (MoFRR) on a routing device. MoFRR minimizes packet loss in a network when there is a link failure.                                                                                                                                                                                                   |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                           |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Understanding Multicast-Only Fast Reroute on page 644</a></li> <li>• <a href="#">Example: Configuring Multicast-Only Fast Reroute in a PIM Domain</a></li> <li>• <a href="#">Example: Configuring Multicast-Only Fast Reroute in a Multipoint LDP Domain on page 654</a></li> </ul> |

## strict-targeted-hellos

---

|                                 |                                                                                                                                                                                                                                                                                     |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | strict-targeted-hellos;                                                                                                                                                                                                                                                             |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols ldp],<br>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols ldp],<br>[edit protocols ldp],<br>[edit routing-instances <i>routing-instance-name</i> protocols ldp] |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                           |
| <b>Description</b>              | Prevent LDP sessions from being established with remote neighbors that have not been specifically configured. LDP peers will not respond to targeted hellos coming from a source that is not one of the configured remote neighbors.                                                |
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration.                                                                                                                                                             |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Enabling Strict Targeted Hello Messages for LDP on page 591</a></li></ul>                                                                                                                                                       |

## targeted-hello

---

|                                 |                                                                                                                                                                                                                                                                                     |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | targeted-hello {<br>hello-interval <i>seconds</i> ;<br>hold-time <i>seconds</i> ;<br>}                                                                                                                                                                                              |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols ldp],<br>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols ldp],<br>[edit protocols ldp],<br>[edit routing-instances <i>routing-instance-name</i> protocols ldp] |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 9.5.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                               |
| <b>Description</b>              | Specify the LDP timer and LDP hold time for targeted hellos.                                                                                                                                                                                                                        |
| <b>Options</b>                  | The remaining statements are explained separately.                                                                                                                                                                                                                                  |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                 |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring the LDP Timer for Hello Messages on page 589</a></li><li>• <a href="#">Configuring the Delay Before LDP Neighbors Are Considered Down on page 589</a></li></ul>                                                     |

## traceoptions (Protocols LDP)

|                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|----------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | <pre> traceoptions {     file <i>filename</i> &lt;files <i>number</i>&gt; &lt;size <i>size</i>&gt; &lt;world-readable   no-world-readable&gt;;     flag <i>flag</i> &lt;flag-modifier&gt; &lt;disable&gt;; } </pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Hierarchy Level</b>     | <p>[edit logical-systems <i>logical-system-name</i> protocols ldp],<br/> [edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols ldp],<br/> [edit protocols ldp],<br/> [edit routing-instances <i>routing-instance-name</i> protocols ldp]</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Release Information</b> | <p>Statement introduced before Junos OS Release 7.4.</p> <p><b>match-on address</b> option for the <b>filter</b> flag modifier added in Junos OS Release 10.4.</p> <p><b>nsr-synchronization</b> and <b>p2mp-nsr-synchronization</b> operations for <b>flag</b> statement introduced in Junos OS Release 13.3.</p> <p>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Description</b>         | Specify LDP protocol-level trace options.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Default</b>             | The default LDP protocol-level trace options are inherited from the routing protocols <b>traceoptions</b> statement included at the [edit routing-options] hierarchy level.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Options</b>             | <p><b>disable</b>—(Optional) Disable the tracing operation. You can use this option to disable a single operation when you have defined a broad group of tracing operations, such as <b>all</b>.</p> <p><b>file <i>filename</i></b>—Name of the file to receive the output of the tracing operation. Enclose the name within quotation marks. All files are placed in the directory <b>ldp-log</b>. We recommend that you place LDP tracing output in the file <b>ldp-log</b>.</p> <p><b>files <i>number</i></b>—(Optional) Maximum number of trace files. When a trace file named <b>trace-file</b> reaches its maximum size, it is renamed <b>trace-file.0</b>, then <b>trace-file.1</b>, and so on, until the maximum number of trace files is reached. Then the oldest trace file is overwritten.</p> <p><b>Range:</b> 2 through 1000</p> <p><b>Default:</b> 2 files</p> <p>If you specify a maximum number of files, you must also include the <b>size</b> statement to specify the maximum file size.</p> <p><b>flag <i>flag</i></b>—Tracing operation to perform. To specify more than one tracing operation, include multiple <b>flag</b> statements.</p> <ul style="list-style-type: none"> <li>• <b>address</b>—Operation of address and address withdrawal messages</li> <li>• <b>binding</b>—Label-binding operations</li> <li>• <b>error</b>—Error conditions</li> <li>• <b>event</b>—Protocol events</li> </ul> |

- **initialization**—Operation of initialization messages
- **label**—Operation of label request, label map, label withdrawal, and label release messages
- **notification**—Operation of notification messages
- **nsr-synchronization**— Nonstop active routing synchronization events
- **p2mp-nsr-synchronization**—Point-to-multipoint nonstop active routing synchronization events
- **packets**—Equivalent to setting **address**, **initialization**, **label**, **notification**, and **periodic** flags (see also the **filter** flag modifier)
- **path**—Label-switched path operations
- **periodic**—Operation of hello and keepalive messages
- **route**—Operation of route messages
- **state**—Protocol state transitions

**flag-modifier**—(Optional) Modifier for the tracing flag. You can specify one or more of these modifiers:

- **detail**—Provide detailed trace information.
- **disable**—Disable this trace flag.
- **filter**—Filter to apply to this flag. The **filter** flag modifier can be applied only to the **route**, **path**, and **binding** flags. This flag modifier has the following options:
  - **match-on**—Match on argument specified. The **match-on** option has the following suboptions:
    - **address**—Filter based on the source and destination addresses of packets. Available for the **packets** flag option only.
    - **fec**—Filter based on the FEC associated with the traced object.
    - **policy** *policy-name*—Specify the filter policy.
  - **receive**—Packets being received.
  - **send**—Packets being transmitted.

**no-world-readable**—(Optional) Prevent all users from reading the log file.

**size size**—(Optional) Maximum size of each trace file, in kilobytes (KB), megabytes (MB), or gigabytes (GB). When a trace file named **trace-file** reaches this size, it is renamed **trace-file.0**. When the **trace-file** again reaches this size, **trace-file.0** is renamed **trace-file.1** and **trace-file** is renamed **trace-file.0**. This renaming scheme continues until the maximum number of trace files is reached. Then the oldest trace file is overwritten.

**Syntax:** **xk** to specify KB, **xm** to specify MB, or **xg** to specify GB

**Range:** 10 KB through the maximum file size supported on your system

**Default:** 1 MB

If you specify a maximum file size, you must also include the **files** statement to specify the maximum number of files.

**world-readable**—(Optional) Enable any user to read the log file.

|                                 |                                                                                                                                                                        |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Required Privilege Level</b> | routing and trace—To view this statement in the configuration.                                                                                                         |
|                                 | routing-control and trace-control—To add this statement to the configuration.                                                                                          |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Tracing LDP Protocol Traffic on page 732</a></li> <li>• <i>Network Management Administration Guide</i></li> </ul> |

## track-igp-metric

|                                 |                                                                                                                                                                                                                                                                                     |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | track-igp-metric;                                                                                                                                                                                                                                                                   |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols ldp],<br>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols ldp],<br>[edit protocols ldp],<br>[edit routing-instances <i>routing-instance-name</i> protocols ldp] |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                           |
| <b>Description</b>              | Cause the IGP route metric to be used for the LDP routes instead of the default LDP route metric (the default LDP route metric is 1).                                                                                                                                               |
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.                                                                                                                                                                                                                              |
|                                 | interface-control—To add this statement to the configuration.                                                                                                                                                                                                                       |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring LDP to Use the IGP Route Metric on page 723</a></li> </ul>                                                                                                                                                         |

## traffic-statistics (Protocols LDP)

---

|                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | <pre>traffic-statistics {<br/>    file <i>filename</i> &lt;files <i>number</i>&gt; &lt;size <i>size</i>&gt; &lt;world-readable   no-world-readable&gt;;<br/>    interval <i>seconds</i>;<br/>    no-penultimate-hop;<br/>}</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Hierarchy Level</b>     | [edit logical-systems <i>logical-system-name</i> protocols ldp],<br>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols ldp],<br>[edit protocols ldp],<br>[edit routing-instances <i>routing-instance-name</i> protocols ldp]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Release Information</b> | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Description</b>         | LDP traffic statistics display the amount of traffic passed through a router for a particular FEC.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Options</b>             | <p><b>file <i>filename</i></b>—Name of the file to receive the output of the LDP statistics operation.<br/>Enclose the name within quotation marks. All files are placed in the directory <code>/var/log</code>.</p> <p><b>files <i>number</i></b>—(Optional) Maximum number of LDP statistics files. When a statistics file named <b><i>ldp-stat</i></b> reaches its maximum size, it is renamed <b><i>ldp-stat.0</i></b>, then <b><i>ldp-stat.1</i></b>, and so on, until the maximum number of LDP statistics files is reached. Then the oldest file is overwritten.</p> <p><b>Range:</b> 2 through 1000</p> <p><b>Default:</b> 2 files</p> <p>If you specify a maximum number of files, you also must include the <b>size</b> statement to specify the maximum file size.</p> <p><b>interval <i>seconds</i></b>—(Optional) Specify the interval at which the statistics are polled and written to the file.</p> <p><b>Default:</b> 300 seconds (5 minutes)</p> <p><b>no-penultimate-hop</b>—(Optional) Do not collect traffic statistics on the penultimate hop router.</p> <p><b>no-world-readable</b>—(Optional) Prevent all users from reading the log file.</p> <p><b>size <i>size</i></b>—(Optional) Maximum size of each statistics file, in kilobytes (KB), megabytes (MB), or gigabytes (GB). When a statistics file named <b><i>ldp-stat</i></b> reaches this size, it is renamed <b><i>ldp-stat.0</i></b>. When <b><i>ldp-stat</i></b> again reaches this size, <b><i>ldp-stat.0</i></b> is renamed <b><i>ldp-stat.1</i></b> and <b><i>ldp-stat</i></b> is renamed <b><i>ldp-stat.0</i></b>. This renaming scheme continues until the maximum number of statistics files is reached. Then the oldest statistics file is overwritten.</p> <p><b>Syntax:</b> <b><i>xk</i></b> to specify KB, <b><i>xm</i></b> to specify MB, or <b><i>xg</i></b> to specify GB</p> <p><b>Range:</b> 10 KB through the maximum file size supported on your system</p> |

**Default:** 1 MB

If you specify a maximum file size, you also must also include the **files** statement to specify the maximum number of files.

**world-readable**—(Optional) Enable log file access for all users.

|                           |                                                             |
|---------------------------|-------------------------------------------------------------|
| <b>Required Privilege</b> | routing—To view this statement in the configuration.        |
| <b>Level</b>              | routing-control—To add this statement to the configuration. |

|                              |                                                                                                         |
|------------------------------|---------------------------------------------------------------------------------------------------------|
| <b>Related Documentation</b> | <ul style="list-style-type: none"><li>• <a href="#">Collecting LDP Statistics on page 730</a></li></ul> |
|------------------------------|---------------------------------------------------------------------------------------------------------|

## transport-address

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>transport-address (interface   router-id);</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Hierarchy Level</b>          | <code>[edit logical-systems <i>logical-system-name</i> protocols ldp],</code><br><code>[edit logical-systems <i>logical-system-name</i> protocols ldp interface <i>interface-name</i>],</code><br><code>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols ldp],</code><br><code>[edit protocols ldp],</code><br><code>[edit protocols ldp interface <i>interface-name</i>],</code><br><code>[edit routing-instances <i>routing-instance-name</i> protocols ldp interface <i>interface-name</i>]</code>                                                                                                                                                                                                                                                                   |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Description</b>              | Enables you to configure the IP address used to specify the TCP session for the LDP session. Routers must first establish a TCP session between one another before they can establish an LDP session. The TCP session enables the routers to exchange the label advertisements needed for the LDP session. To establish the TCP session, each router must learn the other router's transport address. The transport address is an IP address used to identify the TCP session over which the LDP session will run.                                                                                                                                                                                                                                                                                                               |
| <b>Default</b>                  | <b>router-id</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Options</b>                  | <b>interface</b> —The first IP address on the interface is used as the transport address for any LDP sessions to neighbors that can be reached over that interface. You cannot specify the <b>interface</b> option when there are multiple parallel links to the same LDP neighbor, because the LDP specification requires that the same transport address be advertised on all interfaces to the same neighbor. If LDP detects multiple parallel links to the same neighbor, it disables interfaces to that neighbor one by one until the condition is cleared, either by disconnecting the neighbor on an interface or by specifying the <b>router-id</b> option.<br><br><b>router-id</b> —The router identifier is used as the transport address. Unless otherwise configured, the router identifier is the loopback address. |
| <b>Required Privilege Level</b> | <b>interface</b> —To view this statement in the configuration.<br><b>interface-control</b> —To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Specifying the Transport Address Used by LDP on page 617</a></li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |



## version (BFD)

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | version (0   1   automatic);                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Hierarchy Level</b>          | <p>[edit logical-systems <i>logical-system-name</i> protocols ldp oam <a href="#">bfd-liveness-detection</a>],</p> <p>[edit logical-systems <i>logical-system-name</i> protocols ldp oam fec <i>address</i> <a href="#">bfd-liveness-detection</a>],</p> <p>[edit system services dhcp-local-server liveness-detection method bfd],</p> <p>[edit system services dhcp-local-server dhcpv6 liveness-detection method bfd],</p> <p>[edit forwarding-options dhcp-relay liveness-detection method bfd],</p> <p>[edit forwarding-options dhcp-relay dhcpv6 liveness-detection method bfd],</p> <p>[edit system services dhcp-local-server group <i>group-name</i> liveness-detection method bfd],</p> <p>[edit system services dhcp-local-server dhcpv6 group <i>group-name</i> liveness-detection method bfd],</p> <p>[edit forwarding-options dhcp-relay group <i>group-name</i> liveness-detection method bfd],</p> <p>[edit forwarding-options dhcp-relay dhcpv6 group <i>group-name</i> liveness-detection method bfd],</p> <p>[edit protocols ldp oam <a href="#">bfd-liveness-detection</a>],</p> <p>[edit protocols ldp oam fec <i>address</i> <a href="#">bfd-liveness-detection</a>]</p> |
| <b>Release Information</b>      | <p>Statement introduced in Junos OS Release 12.1.</p> <p>Statement introduced in Junos OS Release 12.3R2 for EX Series switches.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Description</b>              | Configure the BFD protocol version to detect.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Options</b>                  | <p>0—Use BFD protocol version 0.</p> <p>1—Use BFD protocol version 1.</p> <p><b>automatic</b>—Autodetect the BFD protocol version.</p> <p><b>Default:</b> automatic</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <i>Example: Configuring Group Liveness Detection for DHCP Local Server Clients</i></li> <li>• <i>Example: Configuring Global Liveness Detection for DHCP Relay Agent Clients</i></li> <li>• <a href="#">Configuring BFD for LDP LSPs on page 620</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |



## CHAPTER 27

# CCC and TCC Configuration Statements

- [connections \(Circuits\) on page 1654](#)
- [encapsulation \(Logical Interface\) on page 1655](#)
- [encapsulation \(Physical Interface\) on page 1659](#)
- [interface-switch on page 1665](#)
- [lsp-switch on page 1666](#)
- [output-interface \(CCC\) on page 1666](#)
- [p2mp-receive-switch on page 1667](#)
- [p2mp-transmit-switch on page 1668](#)
- [remote-interface-switch on page 1669](#)

## connections (Circuits)

**Syntax**

```
connections {
  interface-switch connection-name {
    interface interface-name.unit-number;
  }
  lsp-switch connection-name {
    transmit-lsp label-switched-path;
    receive-lsp label-switched-path;
  }
  p2mp-receive-switch {
    output-interface [ interface-name.unit-number ];
    receive-p2mp-lsp receiving-point-to-multipoint-lsp;
  }
  p2mp-transmit-switch {
    input-interface interface-name.unit-number;
    transmit-p2mp-lsp transmitting-point-to-multipoint-lsp;
  }
  remote-interface-switch connection-name {
    interface interface-name.unit-number;
    receive-lsp label-switched-path;
    transmit-lsp label-switched-path;
  }
}
```

**Hierarchy Level** [edit logical-systems *logical-system-name* protocols],  
[edit protocols]

**Release Information** Statement introduced before Junos OS Release 7.4.

**Description** Define the connection between two circuits in a CCC connection.

**Options** The statements are explained separately.



**NOTE:** The edit logical-systems hierarchy is not available on QFabric systems.

**Required Privilege Level** routing—To view this statement in the configuration.  
routing-control—To add this statement to the configuration.

**Related Documentation**

- [Configuring Layer 2 Switching Cross-Connects Using CCC on page 743](#)
- [Configuring MPLS LSP Tunnel Cross-Connects Using CCC on page 751](#)
- [Configuring TCC on page 755](#)
- [Configuring CCC Switching for Point-to-Multipoint LSPs on page 761](#)

## encapsulation (Logical Interface)

|                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | encapsulation (atm-ccc-cell-relay   atm-ccc-vc-mux   atm-cisco-nlpid   atm-mlppp-llc   atm-nlpid   atm-ppp-llc   atm-ppp-vc-mux   atm-snap   atm-tcc-snap   atm-tcc-vc-mux   atm-vc-mux   ether-over-atm-llc   ether-vpls-over-atm-llc   ether-vpls-over-fr   ether-vpls-over-ppp   ethernet   ethernet-ccc   ethernet-vpls   ethernet-vpls-fr   frame-relay-ccc   frame-relay-ether-type   frame-relay-ether-type-tcc   frame-relay-ppp   frame-relay-tcc   gre-fragmentation   multilink-frame-relay-end-to-end   multilink-ppp   ppp-over-ether   ppp-over-ether-over-atm-llc   vlan-bridge   vlan-ccc   vlan-vci-ccc   vlan-tcc   vlan-vpls   vxlan);                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Hierarchy Level</b>     | [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ],<br>[edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> ],<br>[edit interfaces rlsq <i>number</i> unit <i>logical-unit-number</i> ]<br>[edit protocols evpn]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Release Information</b> | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Routers ( <b>ethernet</b> , <b>vlan-ccc</b> , and <b>vlan-tcc</b> options only).<br>Statement introduced in Junos OS Release 12.2 for the ACX Series Universal Access Routers. Only the <b>atm-ccc-cell-relay</b> and <b>atm-ccc-vc-mux</b> options are supported on ACX Series routers.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Description</b>         | Configure a logical link-layer encapsulation type. Not all encapsulation types are supported on the switches. See the switch CLI.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Options</b>             | <p><b>atm-ccc-cell-relay</b>—Use ATM cell-relay encapsulation.</p> <p><b>atm-ccc-vc-mux</b>—Use ATM virtual circuit (VC) multiplex encapsulation on CCC circuits. When you use this encapsulation type, you can configure the <b>ccc</b> family only.</p> <p><b>atm-cisco-nlpid</b>—Use Cisco ATM network layer protocol identifier (NLPID) encapsulation. When you use this encapsulation type, you can configure the <b>inet</b> family only.</p> <p><b>atm-mlppp-llc</b>—For ATM2 IQ interfaces only, use Multilink Point-to-Point (MLPPP) over AAL5 LLC. For this encapsulation type, your router must be equipped with a Link Services or Voice Services PIC. MLPPP over ATM encapsulation is not supported on ATM2 IQ OC48 interfaces.</p> <p><b>atm-nlpid</b>—Use ATM NLPID encapsulation. When you use this encapsulation type, you can configure the <b>inet</b> family only.</p> <p><b>atm-ppp-llc</b>—(ATM2 IQ interfaces and MX Series routers with MPC/MIC interfaces using the ATM MIC with SFP only) Use PPP over AAL5 LLC encapsulation.</p> <p><b>atm-ppp-vc-mux</b>—(ATM2 IQ interfaces and MX Series routers with MPC/MIC interfaces using the ATM MIC with SFP only) Use PPP over ATM AAL5 multiplex encapsulation.</p> <p><b>atm-snap</b>—(All interfaces including MX Series routers with MPC/MIC interfaces using the ATM MIC with SFP) Use ATM subnetwork attachment point (SNAP) encapsulation.</p> |

**atm-tcc-snap**—Use ATM SNAP encapsulation on translational cross-connect (TCC) circuits.

**atm-tcc-vc-mux**—Use ATM VC multiplex encapsulation on TCC circuits. When you use this encapsulation type, you can configure the **tcc** family only.

**atm-vc-mux**—(All interfaces including MX Series routers with MPC/MIC interfaces using the ATM MIC with SFP) Use ATM VC multiplex encapsulation. When you use this encapsulation type, you can configure the **inet** family only.

**ether-over-atm-llc**—(All IP interfaces including MX Series routers with MPC/MIC interfaces using the ATM MIC with SFP) For interfaces that carry IP traffic, use Ethernet over ATM LLC encapsulation. When you use this encapsulation type, you cannot configure multipoint interfaces.

**ether-vpls-over-atm-llc**—For ATM2 IQ interfaces only, use the Ethernet virtual private LAN service (VPLS) over ATM LLC encapsulation to bridge Ethernet interfaces and ATM interfaces over a VPLS routing instance (as described in RFC 2684, *Multiprotocol Encapsulation over ATM Adaptation Layer 5*). Packets from the ATM interfaces are converted to standard ENET2/802.3 encapsulated Ethernet frames with the frame check sequence (FCS) field removed.

**ether-vpls-over-fr**—For E1, T1, E3, T3, and SONET interfaces only, use the Ethernet virtual private LAN service (VPLS) over Frame Relay encapsulation to support Bridged Ethernet over Frame Relay encapsulated TDM interfaces for VPLS applications, per RFC 2427, *Multiprotocol Interconnect over Frame Relay*.



**NOTE:** The SONET/SDH OC3/STM1 (Multi-Rate) MIC with SFP, the Channelized SONET/SDH OC3/STM1 (Multi-Rate) MIC with SFP, and the DS3/E3 MIC do not support Ethernet over Frame Relay encapsulation.

---

**ether-vpls-over-ppp**—For E1, T1, E3, T3, and SONET interfaces only, use the Ethernet virtual private LAN service (VPLS) over Point-to-Point Protocol (PPP) encapsulation to support Bridged Ethernet over PPP-encapsulated TDM interfaces for VPLS applications.

**ethernet**—Use Ethernet II encapsulation (as described in RFC 894, *A Standard for the Transmission of IP Datagrams over Ethernet Networks*).

**ethernet-ccc**—Use Ethernet CCC encapsulation on Ethernet interfaces.

**ethernet-vpls**—Use Ethernet VPLS encapsulation on Ethernet interfaces that have VPLS enabled and that must accept packets carrying standard Tag Protocol ID (TPID) values.



**NOTE:** The built-in Gigabit Ethernet PIC on an M7i router does not support extended VLAN VPLS encapsulation.

---

**ethernet-vpls-fr**—Use in a VPLS setup when a CE device is connected to a PE router over a time-division multiplexing (TDM) link. This encapsulation type enables the PE router to terminate the outer layer 2 Frame Relay connection, use the 802.1p bits inside the inner Ethernet header to classify the packets, look at the MAC address from the Ethernet header, and use the MAC address to forward the packet into a given VPLS instance.

**frame-relay-ccc**—Use Frame Relay encapsulation on CCC circuits. When you use this encapsulation type, you can configure the **ccc** family only.

**frame-relay-ether-type**—Use Frame Relay ether type encapsulation for compatibility with Cisco Frame Relay. The physical interface must be configured with flexible-frame-relay encapsulation.

**frame-relay-ether-type-tcc**—Use Frame Relay ether type TCC for Cisco-compatible Frame Relay on TCC circuits to connect different media. The physical interface must be configured with flexible-frame-relay encapsulation.

**frame-relay-ppp**—Use PPP over Frame Relay circuits. When you use this encapsulation type, you can configure the **ppp** family only.

**frame-relay-tcc**—Use Frame Relay encapsulation on TCC circuits for connecting different media. When you use this encapsulation type, you can configure the **tcc** family only.

**gre-fragmentation**—For adaptive services interfaces only, use GRE fragmentation encapsulation to enable fragmentation of IPv4 packets in GRE tunnels. This encapsulation clears the do not fragment (DF) bit in the packet header. If the packet's size exceeds the tunnel's maximum transmission unit (MTU) value, the packet is fragmented before encapsulation.

**multilink-frame-relay-end-to-end**—Use MLFR FRF.15 encapsulation. This encapsulation is used only on multilink, link services, and voice services interfaces and their constituent T1 or E1 interfaces, and is supported on LSQ and redundant LSQ interfaces.

**multilink-ppp**—Use MLPPP encapsulation. This encapsulation is used only on multilink, link services, and voice services interfaces and their constituent T1 or E1 interfaces.

**ppp-over-ether**—Use PPP over Ethernet encapsulation to configure an underlying Ethernet interface for a dynamic PPPoE logical interface on M120 and M320 routers with Intelligent Queuing 2 (IQ2) PICs, and on MX Series routers with MPCs.

**ppp-over-ether-over-atm-llc**—(MX Series routers with MPCs using the ATM MIC with SFP only) For underlying ATM interfaces, use PPP over Ethernet over ATM LLC encapsulation. When you use this encapsulation type, you cannot configure the interface address. Instead, configure the interface address on the PPP interface.

**vlan-bridge**—Use Ethernet VLAN bridge encapsulation on Ethernet interfaces that have IEEE 802.1Q tagging, flexible-ethernet-services, and bridging enabled and that must accept packets carrying TPID 0x8100 or a user-defined TPID.

**vlan-ccc**—Use Ethernet virtual LAN (VLAN) encapsulation on CCC circuits. When you use this encapsulation type, you can configure the **ccc** family only.

**vlan-vci-ccc**—Use ATM-to-Ethernet interworking encapsulation on CCC circuits. When you use this encapsulation type, you can configure the **ccc** family only.

**vlan-tcc**—Use Ethernet VLAN encapsulation on TCC circuits. When you use this encapsulation type, you can configure the **tcc** family only.

**vlan-vpls**—Use Ethernet VLAN encapsulation on VPLS circuits.

**vxlan**—Use VXLAN data plane encapsulation for EVPN.

|                                 |                                                                                                                         |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------|
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.<br>interface-control—To add this statement to the configuration. |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------|

**Related Documentation**

- [Configuring Layer 2 Switching Cross-Connects Using CCC on page 743](#)
- [Configuring the Encapsulation for Layer 2 Switching TCCs on page 755](#)
- *Configuring Interface Encapsulation on Logical Interfaces*
- [Configuring the CCC Encapsulation for LSP Tunnel Cross-Connects on page 752](#)
- *Circuit and Translational Cross-Connects Overview*
- *Identifying the Access Concentrator*
- *Configuring ATM Interface Encapsulation*
- *Configuring VLAN and Extended VLAN Encapsulation*
- *Configuring ATM-to-Ethernet Interworking*
- *Configuring Interface Encapsulation on PTX Series Packet Transport Routers*
- *Configuring CCC Encapsulation for Layer 2 VPNs*
- *Configuring TCC Encapsulation for Layer 2 VPNs and Layer 2 Circuits*
- *Configuring ATM for Subscriber Access*
- *Understanding CoS on ATM IMA Pseudowire Interfaces Overview*
- *Configuring Policing on an ATM IMA Pseudowire*



## encapsulation (Physical Interface)

|                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|----------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | encapsulation (atm-ccc-cell-relay   atm-pvc   cisco-hdlc   cisco-hdlc-ccc   cisco-hdlc-tcc   ethernet-bridge   ethernet-ccc   ethernet-over-atm   ethernet-tcc   ethernet-vpls   ethernet-vpls-fr   ether-vpls-over-atm-llc   ethernet-vpls-ppp   extended-frame-relay-ccc   extended-frame-relay-ether-type-tcc   extended-frame-relay-tcc   extended-vlan-bridge   extended-vlan-ccc   extended-vlan-tcc   extended-vlan-vpls   flexible-ethernet-services   flexible-frame-relay   frame-relay   frame-relay-ccc   frame-relay-ether-type   frame-relay-ether-type-tcc   frame-relay-port-ccc   frame-relay-tcc   generic-services   multilink-frame-relay-uni-nni   ppp   ppp-ccc   ppp-tcc   vlan-ccc   vlan-vci-ccc   vlan-vpls); |
| <b>Hierarchy Level</b>     | [edit interfaces <i>interface-name</i> ],<br>[edit interfaces rlsq <i>number:number</i> ]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Release Information</b> | Statement introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 11.1 for EX Series switches.<br>Statement introduced in Junos OS Release 12.1X48 for PTX Series Packet Transport Routers ( <b>flexible-ethernet-services</b> , <b>ethernet-ccc</b> , and <b>ethernet-tcc</b> options only).                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Description</b>         | Specify the physical link-layer encapsulation type. Not all encapsulation types are supported on the switches. See the switch CLI.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Default</b>             | <b>ppp</b> —Use serial PPP encapsulation.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |

### Options



**NOTE:** Frame Relay, ATM, PPP, SONET, and SATSOP options are not supported on the EX Series switches.

**atm-ccc-cell-relay**—Use ATM cell-relay encapsulation.

**atm-pvc**—Defined in RFC 2684, *Multiprotocol Encapsulation over ATM Adaptation Layer 5*. When you configure physical ATM interfaces with ATM PVC encapsulation, an RFC 2684-compliant ATM Adaptation Layer 5 (AAL5) tunnel is set up to route the ATM cells over a Multiprotocol Label Switching (MPLS) path that is typically established between two MPLS-capable routers using the Label Distribution Protocol (LDP).

**cisco-hdlc**—Use Cisco-compatible High-Level Data Link Control (HDLC) framing. E1, E3, SONET/SDH, T1, and T3 interfaces can use Cisco HDLC encapsulation. Two related versions are supported:

- CCC version (**cisco-hdlc-ccc**)—The logical interface does not require an encapsulation statement. When you use this encapsulation type, you can configure the **ccc** family only.
- TCC version (**cisco-hdlc-tcc**)—Similar to CCC and has the same configuration restrictions, but used for circuits with different media on either side of the connection.

**cisco-hdlc-ccc**—Use Cisco-compatible HDLC framing on CCC circuits.

**cisco-hdlc-tcc**—Use Cisco-compatible HDLC framing on TCC circuits for connecting different media.

**ethernet-bridge**—Use Ethernet bridge encapsulation on Ethernet interfaces that have bridging enabled and that must accept all packets.

**ethernet-ccc**—Use Ethernet CCC encapsulation on Ethernet interfaces that must accept packets carrying standard Tag Protocol ID (TPID) values. For 8-port, 12-port, and 48-port Fast Ethernet PICs, CCC is not supported.

**ethernet-over-atm**—For interfaces that carry IPv4 traffic, use Ethernet over ATM encapsulation. When you use this encapsulation type, you cannot configure multipoint interfaces. As defined in RFC 2684, *Multiprotocol Encapsulation over ATM Adaptation Layer 5*, this encapsulation type allows ATM interfaces to connect to devices that support only bridge protocol data units (BPDUs). Junos OS does not completely support bridging, but accepts BPDUs as a default gateway. If you use the router as an edge device, then the router acts as a default gateway. It accepts Ethernet LLC/SNAP frames with IP or ARP in the payload, and drops the rest. For packets destined to the Ethernet LAN, a route lookup is done using the destination IP address. If the route lookup yields a full address match, the packet is encapsulated with an LLC/SNAP and MAC header, and the packet is forwarded to the ATM interface.

**ethernet-tcc**—For interfaces that carry IPv4 traffic, use Ethernet TCC encapsulation on interfaces that must accept packets carrying standard TPID values. For 8-port, 12-port, and 48-port Fast Ethernet PICs, TCC is not supported.

**ethernet-vpls**—Use Ethernet VPLS encapsulation on Ethernet interfaces that have VPLS enabled and that must accept packets carrying standard TPID values. On M Series routers, except the M320 router, the 4-port Fast Ethernet TX PIC and the 1-port, 2-port, and 4-port, 4-slot Gigabit Ethernet PICs can use the Ethernet VPLS encapsulation type.

**ethernet-vpls-fr**—Use in a VPLS setup when a CE device is connected to a PE device over a time division multiplexing (TDM) link. This encapsulation type enables the PE device to terminate the outer Layer 2 Frame Relay connection, use the 802.1p bits inside the inner Ethernet header to classify the packets, look at the MAC address from the Ethernet header, and use the MAC address to forward the packet into a given VPLS instance.

**ethernet-vpls-ppp**—Use in a VPLS setup when a CE device is connected to a PE device over a time division multiplexing (TDM) link. This encapsulation type enables the PE device to terminate the outer Layer 2 PPP connection, use the 802.1p bits inside the inner Ethernet header to classify the packets, look at the MAC address from the Ethernet header, and use it to forward the packet into a given VPLS instance.

**ether-vpls-over-atm-llc**—For ATM intelligent queuing (IQ) interfaces only, use the Ethernet virtual private LAN service (VPLS) over ATM LLC encapsulation to bridge Ethernet interfaces and ATM interfaces over a VPLS routing instance (as described in RFC 2684, *Multiprotocol Encapsulation over ATM Adaptation Layer 5*). Packets from the ATM interfaces are converted to standard ENET2/802.3 encapsulated Ethernet frames with the frame check sequence (FCS) field removed.

**extended-frame-relay-ccc**—Use Frame Relay encapsulation on CCC circuits. This encapsulation type allows you to dedicate DLCIs 1 through 1022 to CCC. When you use this encapsulation type, you can configure the **ccc** family only.

**extended-frame-relay-ether-type-tcc**—Use extended Frame Relay ether type TCC for Cisco-compatible Frame Relay for DLCIs 1 through 1022. This encapsulation type is used for circuits with different media on either side of the connection.

**extended-frame-relay-tcc**—Use Frame Relay encapsulation on TCC circuits to connect different media. This encapsulation type allows you to dedicate DLCIs 1 through 1022 to TCC.

**extended-vlan-bridge**—Use extended VLAN bridge encapsulation on Ethernet interfaces that have IEEE 802.1Q VLAN tagging and bridging enabled and that must accept packets carrying TPID 0x8100 or a user-defined TPID.

**extended-vlan-ccc**—Use extended VLAN encapsulation on CCC circuits with Gigabit Ethernet and 4-port Fast Ethernet interfaces that must accept packets carrying 802.1Q values. Extended VLAN CCC encapsulation supports TPIDs 0x8100, 0x9100, and 0x9901. When you use this encapsulation type, you can configure the **ccc** family only. For 8-port, 12-port, and 48-port Fast Ethernet PICs, extended VLAN CCC is not supported. For 4-port Gigabit Ethernet PICs, extended VLAN CCC is not supported.

**extended-vlan-tcc**—For interfaces that carry IPv4 traffic, use extended VLAN encapsulation on TCC circuits with Gigabit Ethernet interfaces on which you want to use 802.1Q tagging. For 4-port Gigabit Ethernet PICs, extended VLAN TCC is not supported.

**extended-vlan-vpls**—Use extended VLAN VPLS encapsulation on Ethernet interfaces that have VLAN 802.1Q tagging and VPLS enabled and that must accept packets carrying TPIDs 0x8100, 0x9100, and 0x9901. On M Series routers, except the M320 router, the 4-port Fast Ethernet TX PIC and the 1-port, 2-port, and 4-port, 4-slot Gigabit Ethernet PICs can use the Ethernet VPLS encapsulation type.



**NOTE:** The built-in Gigabit Ethernet PIC on an M7i router does not support extended VLAN VPLS encapsulation.

**flexible-ethernet-services**—For Gigabit Ethernet IQ interfaces and Gigabit Ethernet PICs with small form-factor pluggable transceivers (SFPs) (except the 10-port Gigabit Ethernet PIC and the built-in Gigabit Ethernet port on the M7i router), use flexible Ethernet services encapsulation when you want to configure multiple per-unit Ethernet encapsulations. Aggregated Ethernet bundles can use this encapsulation type. This encapsulation type allows you to configure any combination of route, TCC, CCC, Layer 2 virtual private networks (VPNs), and VPLS encapsulations on a single physical port. If you configure flexible Ethernet services encapsulation on the physical interface, VLAN IDs from 1 through 511 are no longer reserved for normal VLANs.

**flexible-frame-relay**—For IQ interfaces only, use flexible Frame Relay encapsulation when you want to configure multiple per-unit Frame Relay encapsulations. This encapsulation type allows you to configure any combination of TCC, CCC, and standard Frame Relay encapsulations on a single physical port. Also, each logical interface can have any DLCI value from 1 through 1022.

**frame-relay**—Use Frame Relay encapsulation is defined in RFC 1490, *Multiprotocol Interconnect over Frame Relay*. E1, E3, link services, SONET/SDH, T1, T3, and voice services interfaces can use Frame Relay encapsulation.

**frame-relay-ccc**—Use Frame Relay encapsulation on CCC circuits. This encapsulation is same as standard Frame Relay for DLCIs 0 through 511. DLCIs 512 through 1022 are dedicated to CCC. The logical interface must also have **frame-relay-ccc** encapsulation. When you use this encapsulation type, you can configure the **ccc** family only.

**frame-relay-ether-type**—Use Frame Relay ether type encapsulation for compatibility with the Cisco Frame Relay. IETF frame relay encapsulation identifies the payload format using NLPID and SNAP formats. Cisco-compatible Frame Relay encapsulation uses the Ethernet type to identify the type of payload.



**NOTE:** When the encapsulation type is set to Cisco-compatible Frame Relay encapsulation, ensure that the LMI type is set to ANSI or Q933-A.

---

**frame-relay-ether-type-tcc**—Use Frame Relay ether type TCC for Cisco-compatible Frame Relay on TCC circuits to connect different media. This encapsulation is Cisco-compatible Frame Relay for DLCIs 0 through 511. DLCIs 512 through 1022 are dedicated to TCC.

**frame-relay-port-ccc**—Use Frame Relay port CCC encapsulation to transparently carry all the DLCIs between two customer edge (CE) routers without explicitly configuring each DLCI on the two provider edge (PE) routers with Frame Relay transport. The connection between the two CE routers can be either user-to-network interface (UNI) or network-to-network interface (NNI); this is completely transparent to the PE routers. When you use this encapsulation type, you can configure the **ccc** family only.

**frame-relay-tcc**—This encapsulation is similar to Frame Relay CCC and has the same configuration restrictions, but used for circuits with different media on either side of the connection.

**generic-services**—Use generic services encapsulation for services with a hierarchical scheduler.

**multilink-frame-relay-uni-nni**—Use MLFR UNI NNI encapsulation. This encapsulation is used on link services, voice services interfaces functioning as FRF.16 bundles, and their constituent T1 or E1 interfaces, and is supported on LSQ and redundant LSQ interfaces.

**ppp**—Use serial PPP encapsulation. This encapsulation is defined in RFC 1661, *The Point-to-Point Protocol (PPP) for the Transmission of Multiprotocol Datagrams over Point-to-Point Links*. PPP is the default encapsulation type for physical interfaces. E1, E3, SONET/SDH, T1, and T3 interfaces can use PPP encapsulation.

**ppp-ccc**—Use serial PPP encapsulation on CCC circuits. When you use this encapsulation type, you can configure the **ccc** family only.

**ppp-tcc**—Use serial PPP encapsulation on TCC circuits for connecting different media. When you use this encapsulation type, you can configure the **tcc** family only.

**vlan-ccc**—Use Ethernet VLAN encapsulation on CCC circuits. VLAN CCC encapsulation supports TPID 0x8100 only. When you use this encapsulation type, you can configure the **ccc** family only.

**vlan-vci-ccc**—Use ATM-to-Ethernet interworking encapsulation on CCC circuits. When you use this encapsulation type, you can configure the **ccc** family only. All logical interfaces configured on the Ethernet interface must also have the encapsulation type set to **vlan-vci-ccc**.

**vlan-vpls**—Use VLAN VPLS encapsulation on Ethernet interfaces with VLAN tagging and VPLS enabled. Interfaces with VLAN VPLS encapsulation accept packets carrying standard TPID values only. On M Series routers, except the M320 router, the 4-port Fast Ethernet TX PIC and the 1-port, 2-port, and 4-port, 4-slot Gigabit Ethernet PICs can use the Ethernet VPLS encapsulation type.



NOTE:

- Label-switched interfaces (LSIs) do not support VLAN VPLS encapsulation. Therefore, you can only use VLAN VPLS encapsulation on a PE-router-to-CE-router interface and not a core-facing interface.
- Starting with Junos OS release 13.3, a commit error occurs when you configure **vlan-vpls** encapsulation on a physical interface and configure **family inet** on one of the logical units. Previously, it was possible to commit this invalid configuration.

|                                 |                                                               |
|---------------------------------|---------------------------------------------------------------|
| <b>Required Privilege Level</b> | interface—To view this statement in the configuration.        |
|                                 | interface-control—To add this statement to the configuration. |

**Related  
Documentation**

- *Configuring Interface Encapsulation on Physical Interfaces*
- *Configuring CCC Encapsulation for Layer 2 VPNs*
- [Configuring Layer 2 Switching Cross-Connects Using CCC on page 743](#)
- *Configuring TCC Encapsulation for Layer 2 VPNs and Layer 2 Circuits*
- *Configuring ATM Interface Encapsulation*
- *Configuring ATM-to-Ethernet Interworking*
- *Configuring VLAN and Extended VLAN Encapsulation*
- *Configuring VLAN and Extended VLAN Encapsulation*
- *Configuring Encapsulation for Layer 2 Wholesale VLAN Interfaces*
- *Configuring Interfaces for Layer 2 Circuits*
- *Configuring Interface Encapsulation on PTX Series Packet Transport Routers*
- [Configuring MPLS LSP Tunnel Cross-Connects Using CCC on page 751](#)
- [Configuring TCC on page 755](#)
- *Configuring VPLS Interface Encapsulation*
- *Configuring Interfaces for VPLS Routing*
- *Defining the Encapsulation for Switching Cross-Connects*

## interface-switch

---

|                                 |                                                                                                                                                                                                                                                                                                                                          |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>interface-switch <i>connection-name</i> {     interface <i>interface-name.unit-number</i>; }</pre>                                                                                                                                                                                                                                  |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols connections],<br>[edit protocols connections]                                                                                                                                                                                                                                 |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.                                                                                                                                                                                                                                                                                        |
| <b>Description</b>              | <p>Configure Layer 2 switching cross-connects. The cross-connect is bidirectional, so packets received on the first interface are transmitted out the second interface, and those received on the second interface are transmitted out the first.</p> <p>For Layer 2 switching cross-connects to work, you must also configure MPLS.</p> |
| <b>Options</b>                  | <p><b><i>connection-name</i></b>—Connection name (up to 128 characters in Junos 12.3 and later).</p> <p><b><i>interface interface-name.unit-number</i></b>—Interface name. Include the logical portion of the name, which corresponds to the logical unit number.</p>                                                                    |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration</p>                                                                                                                                                                                                            |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring the CCC Connection for Layer 2 Switching Cross-Connects on page 748</a></li> <li>• <i>Defining the Connection for Switching Cross-Connects</i></li> <li>• <i>MPLS Applications Feature Guide</i></li> </ul>                                                             |

## **lsp-switch**

---

|                                 |                                                                                                                                                                                                                                        |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>lsp-switch <i>connection-name</i> {<br/>    transmit-lsp <i>label-switched-path</i>;<br/>    receive-lsp <i>label-switched-path</i>;<br/>}</code>                                                                                |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols connections],<br>[edit protocols connections]                                                                                                                               |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.                                                                                                                                                                                      |
| <b>Description</b>              | Configure Layer 2 switching cross-connects.                                                                                                                                                                                            |
| <b>Options</b>                  | <i>connection-name</i> —Connection name.<br><br><i>receive-lsp label-switched-path</i> —Name of the LSP from the connection's source.<br><br><i>transmit-lsp label-switched-path</i> —Name of the LSP to the connection's destination. |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                    |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring the Connection for Layer 2 Switching TCCs on page 759</a></li></ul>                                                                                                    |

## **output-interface (CCC)**

---

|                                 |                                                                                                                                      |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>output-interface [<i>interface-name 1 interface-name n</i>];</code>                                                            |
| <b>Hierarchy Level</b>          | [edit protocols connections p2mp-transmit-switch <i>p2mp-transmit-switch-name</i> ]                                                  |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 12.3.                                                                                       |
| <b>Description</b>              | Specify one or more output interfaces to switch traffic on an incoming CCC interface to one or more outgoing CCC interfaces.         |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                  |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring CCC Switching for Point-to-Multipoint LSPs on page 761</a></li></ul> |



## p2mp-receive-switch

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>p2mp-receive-switch <i>point-to-multipoint-switch-name</i> {<br/>    output-interface [ <i>interface-name.unit-number</i> ];<br/>    receive-p2mp-lsp <i>receiving-point-to-multipoint-lsp</i>;<br/>}</code>                                                                                                                                                                                                                            |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols connections],<br>[edit protocols connections]                                                                                                                                                                                                                                                                                                                                      |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Description</b>              | Configure the CCC switch for a point-to-multipoint LSP on the egress PE router.                                                                                                                                                                                                                                                                                                                                                               |
| <b>Options</b>                  | <p><b><i>point-to-multipoint-switch-name</i></b>—Point-to-multipoint CCC receive switch name.</p> <p><b>output-interface <i>interface-name.unit-number</i></b>—Name of the egress interfaces for the point-to-multipoint LSP traffic. You can configure multiple output interfaces.</p> <p><b>receive-p2mp-lsp <i>receiving-point-to-multipoint-lsp</i></b>—Name of the point-to-multipoint LSP that is switched to the output interface.</p> |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring the Point-to-Multipoint LSP Switch on Egress PE Routers on page 763</a></li> </ul>                                                                                                                                                                                                                                                                                           |

## p2mp-transmit-switch

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>p2mp-transmit-switch <i>point-to-multipoint-transmit-switch-name</i> {<br/>    input-interface <i>interface-name.unit-number</i>;<br/>    transmit-p2mp-lsp <i>transmitting-point-to-multipoint-lsp</i>;<br/>}</code>                                                                                                                                                                                                                                                    |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols connections],<br>[edit protocols connections]                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Description</b>              | Configure the CCC switch for the point-to-multipoint LSP on the ingress PE router.                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Options</b>                  | <p><b><i>point-to-multipoint-transmit-switch-name</i></b>—Point-to-multipoint CCC transmit switch name.</p> <p><b><i>input-interface interface-name.unit-number</i></b>—Specify the name of the interface carrying incoming traffic to be switched to the point-to-multipoint LSP.</p> <p><b><i>transmit-p2mp-lsp transmitting-point-to-multipoint-lsp</i></b>—Specify the name of the point-to-multipoint LSP carrying traffic to the CCC switch on the egress PE router.</p> |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                            |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring the Point-to-Multipoint LSP Switch on Ingress PE Routers on page 762</a></li></ul>                                                                                                                                                                                                                                                                                                                             |

## remote-interface-switch

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                      |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | remote-interface-switch <i>connection-name</i> {<br>interface <i>interface-name.unit-number</i> ;<br>transmit-lsp <i>label-switched-path</i> ;<br>receive-lsp <i>label-switched-path</i> ;<br>}                                                                                                                                                                                                      |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols connections],<br>[edit protocols connections]                                                                                                                                                                                                                                                                                             |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.                                                                                                                                                                                                                                                                                                                                                    |
| <b>Description</b>              | Configure MPLS LSP tunnel cross-connects.                                                                                                                                                                                                                                                                                                                                                            |
| <b>Options</b>                  | <p><i>connection-name</i>—Connection name.</p> <p><i>interface interface-name.unit-number</i>—Interface name. Include the logical portion of the name, which corresponds to the logical unit number.</p> <p><i>receive-lsp label-switched-path</i>—Name of the LSP from the connection's source.</p> <p><i>transmit-lsp label-switched-path</i>—Name of the LSP to the connection's destination.</p> |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                       |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring MPLS LSP Tunnel Cross-Connects Using CCC on page 751</a></li> </ul>                                                                                                                                                                                                                                                                 |



## CHAPTER 28

# GMPLS Configuration Statements

- [address \(Peer\) on page 1672](#)
- [control-channel \(Protocols Link Management Peer\) on page 1672](#)
- [dead-interval on page 1673](#)
- [disable \(GMPLS\) on page 1674](#)
- [disable \(OSPF\) on page 1675](#)
- [hello-dead-interval on page 1676](#)
- [hello-interval \(LMP\) on page 1677](#)
- [hello-interval \(Protocols OSPF\) on page 1678](#)
- [interface \(Protocols Link Management\) on page 1679](#)
- [label-switched-path \(Protocols Link Management\) on page 1679](#)
- [link-management on page 1680](#)
- [lmp-control-channel on page 1681](#)
- [lmp-protocol on page 1681](#)
- [local-address \(Protocols Link Management\) on page 1682](#)
- [passive \(Protocols Link Management\) on page 1682](#)
- [peer \(Protocols LMP\) on page 1683](#)
- [peer-interface \(Protocols OSPF\) on page 1684](#)
- [remote-address \(for LMP Control Channel\) on page 1685](#)
- [remote-address \(for LMP Traffic Engineering\) on page 1685](#)
- [remote-id on page 1686](#)
- [retransmission-interval on page 1686](#)
- [retransmit-interval \(OSPF\) on page 1687](#)
- [retry-limit \(Protocols Link Management\) on page 1688](#)
- [te-link on page 1689](#)
- [traceoptions \(Protocols Link Management\) on page 1690](#)
- [transit-delay \(OSPF\) on page 1692](#)
- [upstream-label on page 1693](#)

## address (Peer)

---

|                                 |                                                                                                                                                                |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>address <i>ip-address</i>;</code>                                                                                                                        |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols link-management peer <i>peer-name</i> ],<br>[edit protocols link-management peer <i>peer-name</i> ] |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.                                                                                                              |
| <b>Description</b>              | Specify the ID of the peer.                                                                                                                                    |
| <b>Default</b>                  | The loopback address is advertised.                                                                                                                            |
| <b>Options</b>                  | <i>ip-address</i> —IP address of the peer.                                                                                                                     |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                            |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring the ID for LMP Peers on page 777</a></li></ul>                                                 |

## control-channel (Protocols Link Management Peer)

---

|                                 |                                                                                                                                                                |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>control-channel <i>control-channel-interface</i>;</code>                                                                                                 |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols link-management peer <i>peer-name</i> ],<br>[edit protocols link-management peer <i>peer-name</i> ] |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.                                                                                                              |
| <b>Description</b>              | Specify the control channel interface for the peer.                                                                                                            |
| <b>Options</b>                  | <i>control-channel-interface</i> —Name of the control channel interface.                                                                                       |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                            |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring LMP Peers on page 776</a></li></ul>                                                            |

## dead-interval

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>dead-interval seconds;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Hierarchy Level</b>          | <p>[edit logical-systems <i>logical-system-name</i> protocols ospf area <i>area-id</i> <b>peer-interface</b> <i>interface-name</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> protocols (ospf   ospf3) area <i>area-id</i> interface <i>interface-name</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> protocols (ospf   ospf3) area <i>area-id</i> virtual-link],</p> <p>[edit logical-systems <i>logical-system-name</i> protocols ospf3 realm (ipv4-unicast   ipv4-multicast   ipv6-multicast) area <i>area-id</i> interface <i>interface-name</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols (ospf   ospf3) area <i>area-id</i> interface <i>interface-name</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols (ospf   ospf3) area <i>area-id</i> virtual-link],</p> <p>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols ospf3 realm (ipv4-unicast   ipv4-multicast   ipv6-multicast) area <i>area-id</i> interface <i>interface-name</i>],</p> <p>[edit protocols ospf area <i>area-id</i> <b>peer-interface</b> <i>interface-name</i>],</p> <p>[edit protocols (ospf   ospf3) area <i>area-id</i> interface <i>interface-name</i>],</p> <p>[edit protocols (ospf   ospf3) area <i>area-id</i> virtual-link],</p> <p>[edit protocols ospf3 realm (ipv4-unicast   ipv4-multicast   ipv6-multicast) area <i>area-id</i> interface <i>interface-name</i>],</p> <p>[edit routing-instances <i>routing-instance-name</i> protocols (ospf   ospf3) area <i>area-id</i> interface <i>interface-name</i>],</p> <p>[edit routing-instances <i>routing-instance-name</i> protocols (ospf   ospf3) area <i>area-id</i> virtual-link],</p> <p>[edit routing-instances <i>routing-instance-name</i> protocols ospf3 realm (ipv4-unicast   ipv4-multicast   ipv6-multicast) area <i>area-id</i> interface <i>interface-name</i>]</p> |
| <b>Release Information</b>      | <p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Support for the <b>realm</b> statement introduced in Junos OS Release 9.2.</p> <p>Support for the <b>realm</b> statement introduced in Junos OS Release 9.2 for EX Series switches.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Description</b>              | Specify how long OSPF waits before declaring that a neighboring routing device is unavailable. This is an interval during which the routing device receives no hello packets from the neighbor.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Options</b>                  | <p><b>seconds</b>—Interval to wait.</p> <p><b>Range:</b> 1 through 65,535 seconds</p> <p><b>Default:</b> Four times the hello interval—40 seconds (broadcast and point-to-point networks); 120 seconds (nonbroadcast multiple access (NBMA) networks)</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <i>Example: Configuring OSPF Timers</i></li> <li>• <a href="#">Configuring RSVP and OSPF for LMP Peer Interfaces on page 781</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |

- [hello-interval on page 1678](#)

## disable (GMPLS)

---

|                                 |                                                                                                                                                                            |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | disable;                                                                                                                                                                   |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols link-management te-link <i>te-link-name</i> ],<br>[edit protocols link-management te-link <i>te-link-name</i> ] |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.                                                                                                                          |
| <b>Description</b>              | Disable a traffic engineering link.                                                                                                                                        |
| <b>Default</b>                  | The configured object is enabled (operational) unless explicitly disabled.                                                                                                 |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                        |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Disabling the Traffic Engineering Link for LMP Peers on page 781</a></li></ul>                                         |



## disable (OSPF)

|                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|----------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | disable;                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Hierarchy Level</b>     | <p>[edit logical-systems <i>logical-system-name</i> protocols (ospf   ospf3)],</p> <p>[edit logical-systems <i>logical-system-name</i> protocols (ospf   ospf3) area <i>area-id</i> interface <i>interface-name</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> protocols ospf area <i>area-id</i> <i>peer-interface</i><i>interface-name</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> protocols (ospf   ospf3) virtual-link],</p> <p>[edit logical-systems <i>logical-system-name</i> protocols ospf3 realm (ipv4-unicast   ipv4-multicast   ipv6-multicast)],</p> <p>[edit logical-systems <i>logical-system-name</i> protocols ospf3 realm (ipv4-unicast   ipv4-multicast   ipv6-multicast) area <i>area-id</i> interface <i>interface-name</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols (ospf   ospf3)],</p> <p>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols (ospf   ospf3) area <i>area-id</i> interface <i>interface-name</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols (ospf   ospf3) virtual-link],</p> <p>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instances</i> protocols ospf3 realm (ipv4-unicast   ipv4-multicast   ipv6-multicast)],</p> <p>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols ospf3 realm (ipv4-unicast   ipv4-multicast   ipv6-multicast) area <i>area-id</i> interface <i>interface-name</i>],</p> <p>[edit protocols (ospf   ospf3)],</p> <p>[edit protocols (ospf   ospf3) area <i>area-id</i> interface <i>interface-name</i>],</p> <p>[edit protocols (ospf   ospf3) virtual-link],</p> <p>[edit protocols ospf area <i>area-id</i> <i>peer-interface</i> <i>interface-name</i>],</p> <p>[edit protocols ospf area <i>area-id</i> virtual-link neighbor-id <i>router-id</i> transit-area <i>area-id</i>],</p> <p>[edit protocols ospf3 realm (ipv4-unicast   ipv4-multicast   ipv6-multicast)],</p> <p>[edit protocols ospf3 realm (ipv4-unicast   ipv4-multicast   ipv6-multicast) area <i>area-id</i> interface <i>interface-name</i>],</p> <p>[edit routing-instances <i>routing-instance-name</i> protocols (ospf   ospf3)],</p> <p>[edit routing-instances <i>routing-instance-name</i> protocols (ospf   ospf3) area <i>area-id</i> interface <i>interface-name</i>],</p> <p>[edit routing-instances <i>routing-instance-name</i> protocols (ospf   ospf3) virtual-link],</p> <p>[edit routing-instances <i>routing-instance-name</i> protocols ospf3 realm (ipv4-unicast   ipv4-multicast   ipv6-multicast)],</p> <p>[edit routing-instances <i>routing-instance-name</i> protocols ospf3 realm (ipv4-unicast   ipv4-multicast   ipv6-multicast) area <i>area-id</i> interface <i>interface-name</i>]</p> |
| <b>Release Information</b> | <p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Support for the <b>realm</b> statement introduced in Junos OS Release 9.2.</p> <p>Support for the <b>realm</b> statement introduced in Junos OS Release 9.2 for EX Series switches.</p> <p>Statement introduced in Junos OS Release 11.3 for the QFX Series.</p> <p>Statement introduced in Junos OS Release 14.1X53-D20 for the OCX Series.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Description</b>         | Disable OSPF, an OSPF interface, or an OSPF virtual link.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |

By default, control packets sent to the remote end of a virtual link must be forwarded using the default topology. In addition, the transit area path consists only of links that are in the default topology. You can disable a virtual link for a configured topology, but not for a default topology. Include the **disable** statement at the **[edit protocols ospf area *area-id* virtual-link neighbor-id router-id transit-area *area-id* topology *name*]** hierarchy level.



**NOTE:** If you disable the virtual link by including the **disable** statement at the **[edit protocols ospf area *area-id* virtual-link neighbor-id router-id transit-area *area-id*]** hierarchy level, you disable the virtual link for all topologies, including the default topology. You cannot disable the virtual link only in the default topology.

|                                 |                                                                                                                                                                                                |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Default</b>                  | The configured object is enabled (operational) unless explicitly disabled.                                                                                                                     |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                            |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Understanding OSPF Configurations</a></li> <li>• <a href="#">Configuring RSVP and OSPF for LMP Peer Interfaces on page 781</a></li> </ul> |

## hello-dead-interval

|                                 |                                                                                                                                                                                                                                           |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>hello-dead-interval <i>milliseconds</i>;</code>                                                                                                                                                                                     |
| <b>Hierarchy Level</b>          | <code>[edit logical-systems <i>logical-system-name</i> protocols link-management peer <i>peer-name</i> lmp-protocol],</code><br><code>[edit protocols link-management peer <i>peer-name</i> lmp-protocol]</code>                          |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 8.0.                                                                                                                                                                                             |
| <b>Description</b>              | Specify how long the Link Management Protocol (LMP) waits before declaring the control channel to be dead. This is an interval during which the router receives no LMP hello packets from the neighbor on a control that is active or up. |
| <b>Options</b>                  | <p><b><i>milliseconds</i></b>—Interval to wait before declaring the control channel to be dead.</p> <p><b>Range:</b> 500 through 300,000</p> <p><b>Default:</b> 500 milliseconds (three times the hello interval)</p>                     |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                       |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring Hello Message Intervals for LMP Control Channels on page 779</a></li> <li>• <a href="#">hello-interval (LMP) on page 1677</a></li> </ul>                                 |

---

## hello-interval (LMP)

---

|                                 |                                                                                                                                                                                                        |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | hello-interval <i>milliseconds</i> ;                                                                                                                                                                   |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols link-management peer <i>peer-name</i> <i>lmp-protocol</i> ],<br>[edit protocols link-management peer <i>peer-name</i> <i>lmp-protocol</i> ] |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 8.1.                                                                                                                                                          |
| <b>Description</b>              | Specify how often the router sends Link Management Protocol (LMP) hello packets.                                                                                                                       |
| <b>Options</b>                  | <i>milliseconds</i> —Length of time between hello packets.<br><b>Range:</b> 150 through 300,000<br><b>Default:</b> 150 milliseconds                                                                    |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                    |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring Hello Message Intervals for LMP Control Channels on page 779</a></li><li>• <a href="#">hello-dead-interval on page 1676</a></li></ul>  |

## hello-interval (Protocols OSPF)

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | hello-interval <i>seconds</i> ;                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Hierarchy Level</b>          | <p>[edit logical-systems <i>logical-system-name</i> protocols ospf area <i>area-id</i> <b>peer-interface</b> <i>interface-name</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> protocols (ospf   ospf3) area <i>area-id</i> interface <i>interface-name</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> protocols (ospf   ospf3) area <i>area-id</i> virtual-link],</p> <p>[edit logical-systems <i>logical-system-name</i> protocols ospf3 realm (ipv4-unicast   ipv4-multicast   ipv6-multicast) area <i>area-id</i> interface <i>interface-name</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols (ospf   ospf3) area <i>area-id</i> interface <i>interface-name</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols (ospf   ospf3) area <i>area-id</i> virtual-link],</p> <p>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols ospf3 realm (ipv4-unicast   ipv4-multicast   ipv6-multicast) area <i>area-id</i> interface <i>interface-name</i>],</p> <p>[edit protocols ospf area <i>area-id</i> <b>peer-interface</b> <i>interface-name</i>],</p> <p>[edit protocols (ospf   ospf3) area <i>area-id</i> interface <i>interface-name</i>],</p> <p>[edit protocols (ospf   ospf3) area <i>area-id</i> virtual-link],</p> <p>[edit protocols ospf3 realm (ipv4-unicast   ipv4-multicast   ipv6-multicast) area <i>area-id</i> interface <i>interface-name</i>],</p> <p>[edit routing-instances <i>routing-instance-name</i> protocols (ospf   ospf3) area <i>area-id</i> interface <i>interface-name</i>],</p> <p>[edit routing-instances <i>routing-instance-name</i> protocols (ospf   ospf3) area <i>area-id</i> virtual-link],</p> <p>[edit routing-instances <i>routing-instance-name</i> protocols ospf3 realm (ipv4-unicast   ipv4-multicast   ipv6-multicast) area <i>area-id</i> interface <i>interface-name</i>]</p> |
| <b>Release Information</b>      | <p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Support for the <b>realm</b> statement introduced in Junos OS Release 9.2.</p> <p>Support for the <b>realm</b> statement introduced in Junos OS Release 9.2 for EX Series switches.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Description</b>              | Specify how often the routing device sends hello packets out the interface. The hello interval must be the same for all routing devices on a shared logical IP network.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Options</b>                  | <p><b>seconds</b>—Time between hello packets, in seconds.</p> <p><b>Range:</b> 1 through 255 seconds</p> <p><b>Default:</b> 10 seconds (broadcast and point-to-point networks); 30 seconds (nonbroadcast multiple access [NBMA] networks)</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <i>Example: Configuring OSPF Timers</i></li> <li>• <a href="#">Configuring RSVP and OSPF for LMP Peer Interfaces on page 781</a></li> <li>• <a href="#">dead-interval on page 1673</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |

## interface (Protocols Link Management)

---

|                                 |                                                                                                                                                                            |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>interface <i>interface-name</i>;</code>                                                                                                                              |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols link-management te-link <i>te-link-name</i> ],<br>[edit protocols link-management te-link <i>te-link-name</i> ] |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.                                                                                                                          |
| <b>Description</b>              | Specify the egress router interface.                                                                                                                                       |
| <b>Options</b>                  | <i>interface-name</i> —Name of the interface to the egress router.                                                                                                         |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                        |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">LMP Configuration Overview on page 773</a></li> </ul>                                                                 |

## label-switched-path (Protocols Link Management)

---

|                                 |                                                                                                                                                                            |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>label-switched-path <i>lsp-name</i>;</code>                                                                                                                          |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols link-management te-link <i>te-link-name</i> ],<br>[edit protocols link-management te-link <i>te-link-name</i> ] |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 7.4.                                                                                                                              |
| <b>Description</b>              | Specify the label-switched path (LSP) to be used by the forwarding adjacency.                                                                                              |
| <b>Options</b>                  | <i>lsp-name</i> —Name of the LSP.                                                                                                                                          |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                        |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring Forwarding Adjacencies on page 821</a></li> </ul>                                                         |

## link-management

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre> link-management {   peer <i>peer-name</i> {     address <i>ip-address</i>;     control-channel <i>control-channel-interface</i>;     lmp-control-channel <i>control-channel-interface</i> {       remote-address <i>ip-address</i>;     }     lmp-protocol {       hello-dead-interval <i>milliseconds</i>;       hello-interval <i>milliseconds</i>;       passive;       retransmission-interval <i>milliseconds</i>;       retry-limit <i>number</i>;     }     te-link <i>te-link-name</i>;   }   te-link <i>te-link-name</i> {     disable;     interface <i>interface-name</i> {       disable;       local-address <i>ip-address</i>;       remote-address <i>ip-address</i>;       remote-id <i>id-number</i>;     }     local-address <i>ip-address</i>;     remote-address <i>ip-address</i>;     remote-id <i>id-number</i>;   }   traceoptions {     file <i>filename</i> &lt;files <i>number</i>&gt; &lt;size <i>size</i>&gt; &lt;world-readable   no-world-readable&gt;;     flag <i>flag</i> &lt;<i>flag-modifier</i>&gt; &lt;disable&gt;;   } } </pre> |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols],<br>[edit protocols]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Description</b>              | Enable Link Management Protocol (LMP) on the router.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">LMP Configuration Overview on page 773</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |

## lmp-control-channel

|                                 |                                                                                                                                                                |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>lmp-control-channel <i>control-channel-interface</i> {<br/>    <i>remote-address</i> <i>ip-address</i>;<br/>}</code>                                     |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols link-management peer <i>peer-name</i> ],<br>[edit protocols link-management peer <i>peer-name</i> ] |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 8.1.                                                                                                                  |
| <b>Description</b>              | Specify the Link Management Protocol (LMP) control channel interface for the peer.                                                                             |
| <b>Options</b>                  | <i>control-channel-interface</i> —Name of the control channel interface.<br><br>The remaining statement is described separately in this chapter.               |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                            |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring the LMP Control Channel Interface for the Peer on page 777</a></li> </ul>                     |

## lmp-protocol

|                                 |                                                                                                                                                                                                                                                                     |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>lmp-protocol {<br/>    <i>hello-dead-interval</i> <i>milliseconds</i>;<br/>    <i>hello-interval</i> <i>milliseconds</i>;<br/>    passive;<br/>    <i>retransmission-interval</i> <i>milliseconds</i>;<br/>    <i>retry-limit</i> <i>number</i>;<br/>}</code> |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols link-management peer <i>peer-name</i> ],<br>[edit protocols link-management peer <i>peer-name</i> ]                                                                                                      |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 8.1.                                                                                                                                                                                                                       |
| <b>Description</b>              | Configure attributes of Link Management Protocol (LMP) to establish and maintain the LMP control channel for the peer.                                                                                                                                              |
| <b>Options</b>                  | The statements are described separately in this chapter.                                                                                                                                                                                                            |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                 |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring LMP Peers on page 776</a></li> </ul>                                                                                                                                                               |

## local-address (Protocols Link Management)

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                              |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>local-address <i>ip-address</i>;</code>                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols link-management te-link <i>te-link-name</i> ],<br>[edit logical-systems <i>logical-system-name</i> protocols link-management te-link <i>te-link-name</i><br>interface <i>interface-name</i> ],<br>[edit protocols link-management te-link <i>te-link-name</i> ],<br>[edit protocols link-management te-link <i>te-link-name</i> interface <i>interface-name</i> ] |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Description</b>              | Specify the local IP address associated with the traffic engineering link. If you configure the local IP address, you must also configure the <a href="#">remote-address</a> statement.                                                                                                                                                                                                                                      |
| <b>Options</b>                  | <b>local-address</b> —Local IP address of the traffic engineering link.                                                                                                                                                                                                                                                                                                                                                      |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                          |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring the Local IP Address for Traffic Engineering Links on page 775</a></li><li>• <a href="#">Configuring the Local IP Address for Forwarding Adjacencies on page 821</a></li><li>• <a href="#">remote-address (for LMP Traffic Engineering) on page 1685</a></li></ul>                                                                                           |

## passive (Protocols Link Management)

---

|                                 |                                                                                                                                                                                           |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>passive;</code>                                                                                                                                                                     |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols link-management peer <i>peer-name</i><br>lmp-protocol],<br>[edit protocols link-management peer <i>peer-name</i> lmp-protocol] |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 8.1.                                                                                                                                             |
| <b>Description</b>              | Specify that the router not configure the Link Management Protocol (LMP) control channels but wait for the remote peer to configure the LMP control channels.                             |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                       |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Preventing the Local Peer from Initiating LMP Negotiation on page 780</a></li></ul>                                                   |



## peer (Protocols LMP)

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre> peer <i>peer-name</i> {     address <i>ip-address</i>;     control-channel <i>control-channel-interface</i>;     lmp-control-channel <i>control-channel-interface</i>;     lmp-protocol {         hello-dead-interval <i>milliseconds</i>;         hello-interval <i>milliseconds</i>;         passive;         retransmission-interval <i>milliseconds</i>;         retry-limit <i>number</i>;     }     te-link <i>te-link-name</i>; } </pre> |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols link-management],<br>[edit protocols link-management]                                                                                                                                                                                                                                                                                                                                      |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br><b>lmp-protocol</b> statement and substatements added in Junos OS Release 8.1.                                                                                                                                                                                                                                                                                                                   |
| <b>Description</b>              | Configure a network peer.                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Options</b>                  | <p><b><i>peer-name</i></b>—Name of the network peer.</p> <p>The remaining statements are described separately in this chapter.</p>                                                                                                                                                                                                                                                                                                                    |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                        |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring LMP Peers on page 776</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                 |

## peer-interface (Protocols OSPF)

---

|                                 |                                                                                                                                                                                                                                                                                           |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>peer-interface <i>interface-name</i> {<br/>    disable;<br/>    dead-interval <i>seconds</i>;<br/>    hello-interval <i>seconds</i>;<br/>    retransmit-interval <i>seconds</i>;<br/>    transit-delay <i>seconds</i>;<br/>}</pre>                                                   |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols ospf area <i>area-id</i> ],<br>[edit protocols ospf area <i>area-id</i> ]                                                                                                                                                      |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.                                                                                                                                                                                                                                         |
| <b>Description</b>              | Configure a peer interface.                                                                                                                                                                                                                                                               |
| <b>Options</b>                  | <p><b><i>interface-name</i></b>—Name of the peer interface. To configure all interfaces, you can specify <b>all</b>.</p> <p>The remaining statements are explained separately.</p>                                                                                                        |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                       |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Example: Configuring OSPFv2 Peer interfaces</a></li><li>• <a href="#">Configuring RSVP and OSPF for LMP Peer Interfaces on page 781</a></li><li>• <a href="#">Advertising Forwarding Adjacencies Using OSPF on page 823</a></li></ul> |

## remote-address (for LMP Control Channel)

|                                 |                                                                                                                                                                                                                                                                          |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>remote-address <i>ip-address</i>;</code>                                                                                                                                                                                                                           |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols link-management peer <i>peer-name</i> lmp-control-channel <i>control-channel-interface</i> ],<br>[edit protocols link-management peer <i>peer-name</i> lmp-control-channel <i>control-channel-interface</i> ] |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 8.1.                                                                                                                                                                                                                            |
| <b>Description</b>              | Specify the remote IP address for the Link Management Protocol (LMP) control channel interface.                                                                                                                                                                          |
| <b>Options</b>                  | <i>ip-address</i> —Remote IP address mapped to the LMP control channel interface.                                                                                                                                                                                        |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                      |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring the Remote IP Address for LMP Control Channels on page 778</a></li> </ul>                                                                                                                               |

## remote-address (for LMP Traffic Engineering)

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                           |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>remote-address <i>ip-address</i>;</code>                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols link-management te-link <i>te-link-name</i> ],<br>[edit logical-systems <i>logical-system-name</i> protocols link-management te-link <i>te-link-name</i> interface <i>interface-name</i> ],<br>[edit protocols link-management te-link <i>te-link-name</i> ],<br>[edit protocols link-management te-link <i>te-link-name</i> interface <i>interface-name</i> ] |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Description</b>              | Specify the remote IP address for the traffic engineering link. If you configure the remote IP address, you must also configure the <a href="#">local-address</a> statement.                                                                                                                                                                                                                                              |
| <b>Options</b>                  | <i>ip-address</i> —Remote IP address mapped to the traffic engineering link.                                                                                                                                                                                                                                                                                                                                              |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                       |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring the Remote IP Address for Traffic Engineering Links on page 775</a></li> <li>• <a href="#">Configuring the Remote IP Address for Forwarding Adjacencies on page 822</a></li> <li>• <a href="#">local-address (Protocols Link Management) on page 1682</a></li> </ul>                                                                                     |

## remote-id

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                              |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>remote-id <i>id-number</i>;</code>                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols link-management te-link <i>te-link-name</i> ],<br>[edit logical-systems <i>logical-system-name</i> protocols link-management te-link <i>te-link-name</i><br>interface <i>interface-name</i> ],<br>[edit protocols link-management te-link <i>te-link-name</i> ],<br>[edit protocols link-management te-link <i>te-link-name</i> interface <i>interface-name</i> ] |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Description</b>              | Specify the ID assigned to a traffic engineering link or an interface (resource) on the peer node.                                                                                                                                                                                                                                                                                                                           |
| <b>Options</b>                  | <i>id-number</i> —ID number for the remote device.                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                          |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring the Remote ID for Traffic Engineering Links on page 776</a></li></ul>                                                                                                                                                                                                                                                                                        |

## retransmission-interval

---

|                                 |                                                                                                                                                                                                                    |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>retransmission-interval <i>milliseconds</i>;</code>                                                                                                                                                          |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols link-management peer <i>peer-name</i><br>lmp-protocol],<br>[edit protocols link-management peer <i>peer-name</i> lmp-protocol]                          |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 8.1.                                                                                                                                                                      |
| <b>Description</b>              | Specify how often Link Management Protocol (LMP) sends Config and LinkSummary messages on the LMP control channel.                                                                                                 |
| <b>Options</b>                  | <i>milliseconds</i> —Length of time between Config messages.<br><b>Range:</b> 500 through 300,000<br><b>Default:</b> 500 milliseconds                                                                              |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">retry-limit (Protocols Link Management) on page 1688</a></li><li>• <a href="#">Controlling Message Exchange for LMP Control Channels on page 780</a></li></ul> |

## retransmit-interval (OSPF)

|                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|----------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | <code>retransmit-interval seconds;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Hierarchy Level</b>     | <p>[edit logical-systems <i>logical-system-name</i> protocols ospf area <i>area-id</i> <b>peer-interface</b> <i>interface-name</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> protocols (ospf   ospf3) area <i>area-id</i> interface <i>interface-name</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> protocols (ospf   ospf3) area <i>area-id</i> virtual-link],</p> <p>[edit logical-systems <i>logical-system-name</i> protocols ospf3 realm (ipv4-unicast   ipv4-multicast   ipv6-multicast) area <i>area-id</i> interface <i>interface-name</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols (ospf   ospf3) area <i>area-id</i> interface <i>interface-name</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols (ospf   ospf3) area <i>area-id</i> virtual-link],</p> <p>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols ospf3 realm (ipv4-unicast   ipv4-multicast   ipv6-multicast) area <i>area-id</i> interface <i>interface-name</i>],</p> <p>[edit protocols ospf area <i>area-id</i> <b>peer-interface</b> <i>interface-name</i>],</p> <p>[edit protocols (ospf   ospf3) area <i>area-id</i> interface <i>interface-name</i>],</p> <p>[edit protocols (ospf   ospf3) area <i>area-id</i> virtual-link],</p> <p>[edit protocols ospf3 realm (ipv4-unicast   ipv4-multicast   ipv6-multicast) area <i>area-id</i> interface <i>interface-name</i>],</p> <p>[edit routing-instances <i>routing-instance-name</i> protocols (ospf   ospf3) area <i>area-id</i> interface <i>interface-name</i>],</p> <p>[edit routing-instances <i>routing-instance-name</i> protocols (ospf   ospf3) area <i>area-id</i> virtual-link],</p> <p>[edit routing-instances <i>routing-instance-name</i> protocols ospf3 realm (ipv4-unicast   ipv4-multicast   ipv6-multicast) area <i>area-id</i> interface <i>interface-name</i>]</p> |
| <b>Release Information</b> | <p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Support for the <b>realm</b> statement introduced in Junos OS Release 9.2.</p> <p>Support for the <b>realm</b> statement introduced in Junos OS Release 9.2 for EX Series switches.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Description</b>         | Specify how long the routing device waits to receive a link-state acknowledgment packet before retransmitting link-state advertisements (LSAs) to an interface's neighbors.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Options</b>             | <p><b>seconds</b>—Interval to wait.</p> <p><b>Range:</b> 1 through 65,535 seconds</p> <p><b>Default:</b> 5 seconds</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |



**NOTE:** You must configure LSA retransmit intervals to be equal to or greater than 3 seconds to avoid triggering a retransmit trap, because Junos OS delays LSA acknowledgments by up to 2 seconds.

|                                 |                                                                                                                                                                                            |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                        |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Example: Configuring OSPF Timers</a></li><li>• <a href="#">Configuring RSVP and OSPF for LMP Peer Interfaces on page 781</a></li></ul> |

---

## retry-limit (Protocols Link Management)

---

|                                 |                                                                                                                                                                                                                                                                 |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>retry-limit <i>number</i>;</code>                                                                                                                                                                                                                         |
| <b>Hierarchy Level</b>          | [edit logical-systems <i>logical-system-name</i> protocols link-management peer <i>peer-name</i> lmp-protocol],<br>[edit protocols link-management peer <i>peer-name</i> lmp-protocol]                                                                          |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 8.1.                                                                                                                                                                                                                   |
| <b>Description</b>              | Specify how many times the Link Management Protocol (LMP) sends Config and LinkSummary messages on the LMP control channel without receiving an appropriate acknowledgment before it logs a message and restarts the LMP control channel configuration process. |
| <b>Options</b>                  | <b><i>number</i></b> —Maximum number of times messages are sent without receiving an acknowledgment.<br><b>Range:</b> 3 through 1000<br><b>Default:</b> 3                                                                                                       |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                             |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">retransmission-interval on page 1686</a></li><li>• <a href="#">Controlling Message Exchange for LMP Control Channels on page 780</a></li></ul>                                                              |

## te-link

|                                 |                                                                                                                                                                                                                                                                                                                                               |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre> te-link <i>te-link-name</i> {   disable;   ethernet-vlan;   interface <i>interface-name</i> {     disable;     local-address <i>ip-address</i>;     remote-address <i>ip-address</i>;     remote-id <i>id-number</i>;   }   local-address <i>ip-address</i>;   remote-address <i>ip-address</i>;   remote-id <i>id-number</i>; } </pre> |
| <b>Hierarchy Level</b>          | [edit protocols link-management],<br>[edit protocols link-management peer <i>peer-name</i> ]                                                                                                                                                                                                                                                  |
| <b>Release Information</b>      | Statement introduced before Junos OS Release 7.4.<br><b>ethernet-vlan</b> option introduced in Junos OS Release 14.2.                                                                                                                                                                                                                         |
| <b>Description</b>              | Represent a collection of physical ports or time slots. Assign a traffic engineering link to the specified network peer.                                                                                                                                                                                                                      |
| <b>Options</b>                  | <p><b><i>te-link-name</i></b>—Name of the collection of physical ports or the name of the time slots.</p> <p><b>disable</b>—Disable the traffic engineering link or an interface to a traffic engineering link.</p> <p>The remaining statements are explained separately..</p>                                                                |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                           |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Configuring LMP Traffic Engineering Links on page 774</a></li> </ul>                                                                                                                                                                                                                     |

## traceoptions (Protocols Link Management)

---

|                     |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax              | <pre>traceoptions {<br/>    file <i>filename</i> &lt;files <i>number</i>&gt; &lt;size <i>size</i>&gt; &lt;world-readable   no-world-readable&gt;;<br/>    flag <i>flag</i> &lt;<i>flag-modifier</i>&gt; &lt;disable&gt;;<br/>}</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| Hierarchy Level     | [edit logical-systems <i>logical-system-name</i> protocols link-management],<br>[edit protocols link-management]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| Release Information | Statement introduced before Junos OS Release 7.4.<br>Support for <b>hello-packets</b> , <b>packets</b> , and <b>state</b> flags added in Junos OS Release 8.1.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Description         | Trace options for the LMP protocol.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| Options             | <p><b>disable</b>—(Optional) Disable the tracing operation. You can use this option to disable a single operation when you have defined a broad group of tracing operations, such as <b>all</b>.</p> <p><b>filename</b>—Name of the file to receive the output of the tracing operation. Enclose the name within quotation marks. All files are placed in the directory /var/log.</p> <p><b>files <i>number</i></b>—(Optional) Maximum number of trace files. When a trace file named <b>trace-file</b> reaches its maximum size, it is renamed <b>trace-file.0</b>, then <b>trace-file.1</b>, and so on, until the maximum number of trace files is reached. Then the oldest trace file is overwritten.</p> <p><b>Range:</b> 2 through 1000</p> <p><b>Default:</b> 2 files</p> <p>If you specify a maximum number of files, you must also include the <b>size</b> statement to specify the maximum file size.</p> <p><b>flag</b>—Tracing operation to perform. To specify more than one tracing operation, include multiple <b>flag</b> statements.</p> <ul style="list-style-type: none"><li>• <b>all</b>—Trace all available operations</li><li>• <b>hello-packets</b>—Trace hello packets on any LMP control channel</li><li>• <b>init</b>—Output from the initialization messages</li><li>• <b>packets</b>—Trace all packets other than hello packets on any LMP control channel</li><li>• <b>parse</b>—Operation of the parser</li><li>• <b>process</b>—Operation of the general configuration</li><li>• <b>route-socket</b>—Operation of route socket events</li><li>• <b>routing</b>—Operation of the routing protocols</li><li>• <b>server</b>—Server processing operations</li><li>• <b>show</b>—<b>show</b> command servicing operations</li></ul> |



- **state**—Trace state transitions of the LMP control channels and traffic engineering links

**flag-modifier**—(Optional) Modifier for the tracing flag. You can specify one or more of these modifiers:

- **detail**—Provide detailed trace information
- **receive**—Packets being received
- **send**—Packets being transmitted

**no-world-readable**—(Optional) Prevent all users from reading the log file.

**size size**—(Optional) Maximum size of each trace file, in kilobytes (KB), megabytes (MB), or gigabytes (GB). When a trace file named **trace-file** reaches this size, it is renamed **trace-file.0**. When the **trace-file** again reaches this size, **trace-file.0** is renamed **trace-file.1** and **trace-file** is renamed **trace-file.0**. This renaming scheme continues until the maximum number of trace files is reached. Then the oldest trace file is overwritten.

**Syntax:** **xk** to specify KB, **xm** to specify MB, or **xg** to specify GB

**Range:** 10 KB through the maximum file size supported on your system

**Default:** 1 MB

If you specify a maximum file size, you must also include the **files** statement to specify the maximum number of files.

**world-readable**—(Optional) Enable log file access for all users.

|                                 |                                                                                                                                                               |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Required Privilege Level</b> | routing and trace—To view this statement in the configuration.<br>routing-control and trace-control—To add this statement to the configuration.               |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">Tracing LMP Traffic on page 783</a></li> <li>• <i>Network Management Administration Guide</i></li> </ul> |

## transit-delay (OSPF)

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>transit-delay <i>seconds</i>;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Hierarchy Level</b>          | <p>[edit logical-systems <i>logical-system-name</i> protocols ospf area <i>area-id</i> <b>peer-interface</b> <i>interface-name</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> protocols (ospf   ospf3) area <i>area-id</i> interface <i>interface-name</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> protocols (ospf   ospf3) area <i>area-id</i> virtual-link],</p> <p>[edit logical-systems <i>logical-system-name</i> protocols ospf3 realm (ipv4-unicast   ipv4-multicast   ipv6-multicast) area <i>area-id</i> interface <i>interface-name</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols ospf area <i>area-id</i> interface <i>interface-name</i>],</p> <p>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols ospf area <i>area-id</i> virtual-link],</p> <p>[edit logical-systems <i>logical-system-name</i> routing-instances <i>routing-instance-name</i> protocols ospf3 realm (ipv4-unicast   ipv4-multicast   ipv6-multicast) area <i>area-id</i> interface <i>interface-name</i>],</p> <p>[edit protocols ospf area <i>area-id</i> <b>peer-interface</b> <i>interface-name</i>],</p> <p>[edit protocols (ospf   ospf3) area <i>area-id</i> interface <i>interface-name</i>],</p> <p>[edit protocols (ospf   ospf3) area <i>area-id</i> virtual-link],</p> <p>[edit protocols ospf3 realm (ipv4-unicast   ipv4-multicast   ipv6-multicast)] area <i>area-id</i> interface <i>interface-name</i>],</p> <p>[edit routing-instances <i>routing-instance-name</i> protocols ospf area <i>area-id</i> interface <i>interface-name</i>],</p> <p>[edit routing-instances <i>routing-instance-name</i> protocols ospf area <i>area-id</i> virtual-link],</p> <p>[edit routing-instances <i>routing-instance-name</i> protocols ospf3 realm (ipv4-unicast   ipv4-multicast   ipv6-multicast) area <i>area-id</i> interface <i>interface-name</i>]</p> |
| <b>Release Information</b>      | <p>Statement introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 9.0 for EX Series switches.</p> <p>Support for the <b>realm</b> statement introduced in Junos OS Release 9.2.</p> <p>Support for the <b>realm</b> statement introduced in Junos OS Release 9.2 for EX Series switches.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Description</b>              | <p>Set the estimated time required to transmit a link-state update on the interface. When calculating this time, make sure to account for transmission and propagation delays.</p> <p>You should never have to modify the transit delay time.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Options</b>                  | <p><b>seconds</b>—Estimated time, in seconds.</p> <p><b>Range:</b> 1 through 65,535 seconds</p> <p><b>Default:</b> 1 second</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <i>Example: Configuring OSPF Timers</i></li> <li>• <a href="#">Configuring RSVP and OSPF for LMP Peer Interfaces on page 781</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |

---

## upstream-label

---

|                                 |                                                                                                                                                           |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>upstream-label {<br/>  vlan-id <i>vlan-id</i>;<br/>}</pre>                                                                                           |
| <b>Hierarchy Level</b>          | [edit protocols mpls label-switched-path <i>lsp-name</i> lsp-attributes]                                                                                  |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 14.2.                                                                                                            |
| <b>Description</b>              | Specify the upstream label for the bidirectional label-switched path (LSP).                                                                               |
| <b>Options</b>                  | <b>vlan-id <i>vlan-id</i></b> —VLAN ID to be used for the Generalized MPLS (GMPLS) VLAN LSP at the ingress provider edge (PE) to customer edge (CE) link. |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                       |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">Configuring MPLS LSPs for GMPLS on page 784</a></li></ul>                                             |



## CHAPTER 29

# PCEP Configuration Statements

- [pcep on page 1696](#)
- [delegation-cleanup-timeout on page 1697](#)
- [delegation-priority on page 1698](#)
- [destination-ipv4-address on page 1698](#)
- [destination-port on page 1699](#)
- [lsp-external-controller on page 1699](#)
- [max-unknown-messages on page 1700](#)
- [message-rate-limit on page 1701](#)
- [pce on page 1702](#)
- [pce-group \(PCE\) on page 1703](#)
- [pce-group \(Protocols PCEP\) on page 1704](#)
- [pce-type on page 1705](#)
- [querier \(performance-monitoring\) on page 1706](#)
- [traceoptions \(PCE\) on page 1708](#)
- [traceoptions \(Protocols PCEP\) on page 1710](#)
- [update-rate-limit on page 1711](#)

## pcep

```

Syntax  pcep {
        message-rate-limit messages-per-minute;
        pce pce-id {
            delegation-cleanup-timeout seconds;
            delegation-priority priority-number;
            destination-ipv4-address ipv4-address;
            destination-port port-number;
            max-unknown-messages messages-per-minute;
            pce-group pce-group-name;
            pce-type {
                active stateful;
            }
            traceoptions {
                file filename <files number> <size size> <world-readable | no-world-readable>;
                flag (all | pcep);
                no-remote-trace;
            }
        }
        pce-group pce-group-id {
            delegation-cleanup-timeout seconds;
            max-unknown-messages messages-per-minute;
            pce-type {
                active stateful;
            }
            traceoptions {
                file filename <files number> <size size> <world-readable | no-world-readable>;
                flag (all | pcep);
                no-remote-trace;
            }
        }
        traceoptions {
            file filename <files number> <size size> <world-readable | no-world-readable>;
            flag flag;
            no-remote-trace;
        }
        update-rate-limit updates-per-minute;
    }

```

**Hierarchy Level** [edit protocols]

**Release Information** Statement introduced in Junos OS Release 12.3.  
Statement introduced in Junos OS Release 16.3R for QFX10000 switches.

**Description** Configure the Path Computation Client (PCC) parameters.

The remaining statements are explained separately.

**Required Privilege Level** routing—To view this statement in the configuration.  
routing-control—To add this statement to the configuration.

- Related Documentation**
- [Support of the Path Computation Element Protocol for RSVP-TE Overview on page 828](#)
  - [Example: Configuring the Path Computation Element Protocol for MPLS RSVP-TE on page 843](#)
  - [Example: Configuring Path Computation Element Protocol with Support of PCE-Initiated LSPs on page 856](#)
  - [Example: Configuring Path Computation Element Protocol with Support for PCE Controlled Point-to-Multipoint RSVP-TE LSPs on page 869](#)

## delegation-cleanup-timeout

|                                 |                                                                                                                                                                                                                                                                                               |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>delegation-cleanup-timeout <i>seconds</i>;</code>                                                                                                                                                                                                                                       |
| <b>Hierarchy Level</b>          | [edit protocols pcep pce <i>pce-id</i> ]                                                                                                                                                                                                                                                      |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 12.3.<br>Support for PTX Series added in Junos OS Release 14.2.<br>Support for QFX10000 switches added in Junos OS Release 16.1R3.                                                                                                                   |
| <b>Description</b>              | Specify the amount of time (in seconds) that a Path Computation Client (PCC) must wait before returning control of all LSPs to the routing protocol process after a PCEP session with the main active stateful Path Computation Element (PCE) is disconnected.                                |
| <b>Options</b>                  | <p><b><i>seconds</i></b>—Time (in seconds) that a PCC must wait before returning control of all LSPs to the routing protocol process after a PCEP session with the main active stateful PCE is disconnected.</p> <p><b>Range:</b> 0 through 600 seconds</p> <p><b>Default:</b> 30 seconds</p> |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.</p> <p>routing-control—To add this statement to the configuration.</p>                                                                                                                                                                |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">pce on page 1702</a></li> </ul>                                                                                                                                                                                                          |

## delegation-priority

---

|                                 |                                                                                                                                                                                                                                                                                                                                     |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>delegation-priority <i>priority-number</i>;</code>                                                                                                                                                                                                                                                                            |
| <b>Hierarchy Level</b>          | <code>[edit protocols pcep pce <i>pce-id</i>]</code>                                                                                                                                                                                                                                                                                |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 12.3.<br>Support for PTX Series added in Junos OS Release 14.2.<br>Support for QFX10000 switches added in Junos OS Release 16.1R3.                                                                                                                                                         |
| <b>Description</b>              | Specify the priority number of the active stateful Path Computation Element (PCE). This value is used by the Path Computation Client (PCC) to elect a PCE to delegate LSPs. No two PCEs can have the same delegation-priority value. The PCC elects the PCE with a lower priority as the main active stateful PCE to delegate LSPs. |
| <b>Options</b>                  | <i>priority-number</i> —Priority number of the active stateful PCE.<br><b>Range:</b> 1 through 65535<br><b>Default:</b> 0 (no priority is set)                                                                                                                                                                                      |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                 |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">pce on page 1702</a></li></ul>                                                                                                                                                                                                                                                  |

## destination-ipv4-address

---

|                                 |                                                                                                                                                                             |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>destination-ipv4-address <i>ipv4-address</i>;</code>                                                                                                                  |
| <b>Hierarchy Level</b>          | <code>[edit protocols pcep pce <i>pce-id</i>]</code>                                                                                                                        |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 12.3.<br>Support for PTX Series added in Junos OS Release 14.2.<br>Support for QFX10000 switches added in Junos OS Release 16.1R3. |
| <b>Description</b>              | Specify the IPv4 address of the Path Computation Element (PCE) to which the Path Computation Client (PCC) should connect.                                                   |
| <b>Options</b>                  | <i>ipv4-address</i> —IPv4 address of the PCE.                                                                                                                               |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                         |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">pce on page 1702</a></li></ul>                                                                                          |



## destination-port

---

|                                 |                                                                                                                                                                             |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>destination-port <i>port-number</i>;</code>                                                                                                                           |
| <b>Hierarchy Level</b>          | [edit protocols pcep pce <i>pce-id</i> ]                                                                                                                                    |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 12.3.<br>Support for PTX Series added in Junos OS Release 14.2.<br>Support for QFX10000 switches added in Junos OS Release 16.1R3. |
| <b>Description</b>              | Specify the TCP port number of the Path Computation Element (PCE) to which the Path Computation Client (PCC) should connect.                                                |
| <b>Options</b>                  | <i>port-number</i> —Destination TCP port number.<br><b>Range:</b> 1 through 65535<br><b>Default:</b> 4189                                                                   |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                         |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">pce on page 1702</a></li> </ul>                                                                                        |

## lsp-external-controller

---

|                                 |                                                                                                                          |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>lsp-external-controller <i>lsp-external-controller</i>;</code>                                                     |
| <b>Hierarchy Level</b>          | [edit protocols mpls],<br>[edit protocols mpls label-switched-path <i>lsp-name</i> ]                                     |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 12.3.<br>Statement introduced in Junos OS Release 16.1R3 for QFX10000 switches. |
| <b>Description</b>              | Configure an external path computing entity.                                                                             |
| <b>Options</b>                  | <i>lsp-external-controller</i> —Name of the external path computing entity.<br><b>Values:</b> <i>pccd</i>                |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.      |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">pcep on page 1696</a></li> </ul>                                    |

## max-unknown-messages

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                             |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | max-unknown-messages <i>messages-per-minute</i> ;                                                                                                                                                                                                                                                                                                                                           |
| <b>Hierarchy Level</b>          | [edit protocols pcep pce <i>pce-id</i> ]                                                                                                                                                                                                                                                                                                                                                    |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 12.3.<br>Support for PTX Series added in Junos OS Release 14.2.<br>Support for QFX10000 switches added in Junos OS Release 16.1R3.                                                                                                                                                                                                                 |
| <b>Description</b>              | Specify the number of unknown messages per minute that the Path Computation Client (PCC) can receive at maximum after which the PCEP session is closed.                                                                                                                                                                                                                                     |
| <b>Options</b>                  | <b><i>messages-per-minute</i></b> —Number of unknown messages per minute that the PCC can receive at maximum after which the PCEP session is closed. Recommended value is 5. If the number of unknown messages received by the PCC is greater than or equal to the maximum number, the PCEP session is closed.<br><b>Range:</b> 1 through 16384<br><b>Default:</b> 0 (disabled or no limit) |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                         |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">pce on page 1702</a></li></ul>                                                                                                                                                                                                                                                                                                          |

## message-rate-limit

---

|                                 |                                                                                                                                                                                    |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>message-rate-limit <i>messages-per-minute</i>;</code>                                                                                                                        |
| <b>Hierarchy Level</b>          | [edit protocols pcep]                                                                                                                                                              |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 12.3.<br>Support for PTX Series added in Junos OS Release 14.2.<br>Support for QFX10000 added in Junos OS Release 16.1R3.                 |
| <b>Description</b>              | Specify the number of messages per minute that the Path Computation Client (PCC) can receive at maximum.                                                                           |
| <b>Options</b>                  | <b><i>messages-per-minute</i></b> —Number of messages per minute that the PCC can receive at maximum.<br><b>Range:</b> 1 through 16384<br><b>Default:</b> 0 (disabled or no limit) |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">pcep on page 1696</a></li></ul>                                                                                                |

## pce

|                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|----------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | <pre> pce pce-id {     authentication-key key;     authentication-key-chain key-chain;     delegation-cleanup-timeout seconds;     delegation-priority priority-number;     destination-ipv4-address ipv4-address;     destination-port port-number;     local-address ip-address;     lsp-cleanup-timer seconds;     lsp-provisioning;     max-unknown-messages messages-per-minute;     max-unknown-requests requests-per-minute;     p2mp-lsp-report-capability;     pce-group pce-group-name;     pce-type ;     request-priority priority;     request-timer seconds;     traceoptions ; </pre>                                                                                                                                                                                    |
| <b>Hierarchy Level</b>     | [edit protocols pcep]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Release Information</b> | <p>Statement introduced in Junos OS Release 12.3.</p> <p>Support for PTX Series added in Junos OS Release 14.2.</p> <p>Support for QFX10000 switches added in Junos OS Release 16.1R3.</p> <p><b>lsp-cleanup-timer</b> statement introduced in Junos OS Release 13.3.</p> <p><b>lsp-provisioning</b> statement introduced in Junos OS Release 13.3.</p> <p><b>max-unknown-requests</b> statement introduced in Junos OS Release 13.3.</p> <p><b>request-timer</b> statement introduced in Junos OS Release 13.3.</p> <p><b>request-priority</b> statement introduced in Junos OS Release 13.3.</p> <p><b>authentication-key</b> <i>key</i>, <b>authentication-key-chain</b> <i>key-chain</i>, and <b>p2mp-lsp-report-capability</b> statements introduced in Junos OS Release 16.1.</p> |
| <b>Description</b>         | Configure per-Path Computation Element (PCE) parameters.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Options</b>             | <p><b>pce-id</b>—IP address of the PCE.</p> <p><b>authentication-key</b> <i>key</i>—Authentication password. It can be up to 126 characters. Characters can include any ASCII strings. If you include spaces, enclose all characters in quotation marks (" ").</p> <p>It is recommended to define and bind an authentication key for securing a PCEP session, as opposed to binding an authentication keychain.</p> <p><b>authentication-key-chain</b> <i>key-chain</i>—Authentication keychain password. It can be up to 126 characters. Characters can include any ASCII strings. If you include spaces, enclose all characters in quotation marks (" ").</p> <p><b>local-address</b> <i>ip-address</i>—IP address of the local end of the PCEP session, the PCC.</p>                 |

**p2mp-lsp-report-capability**—Capability to report point-to-multipoint RSVP-TE LSPs to a PCE. By default, this capability is not supported on a PCC, and should be explicitly configured to enable reporting of point-to-multipoint LSPs to a PCE.

**Required Privilege Level** routing—To view this statement in the configuration.  
routing-control—To add this statement to the configuration.

**Related Documentation**

- [pcep on page 1696](#)

---

## pce-group (PCE)

---

**Syntax** `pce-group pce-group-name;`

**Hierarchy Level** [edit protocols pcep pce *pce-id*]

**Release Information** Statement introduced in Junos OS Release 12.3.  
Support for PTX Series added in Junos OS Release 14.2.  
Support for QFX10000 switches added in Junos OS Release 16.1R3.

**Description** Specify the Path Computation Element (PCE) group to which the configured PCE belongs.

**Options** *pce-group-name*—Name of the PCE group.

**Required Privilege Level** routing—To view this statement in the configuration.  
routing-control—To add this statement to the configuration.

**Related Documentation**

- [pce on page 1702](#)

## pce-group (Protocols PCEP)

---

**Syntax**    `pce-group pce-group-id {  
                  delegation-cleanup-timeout seconds;  
                  max-unknown-messages messages-per-minute;  
                  pce-type {  
                    active stateful;  
                  }  
                  traceoptions {  
                    file filename <files number> <size size> <world-readable | no-world-readable>;  
                    flag (all | pcep);  
                    no-remote-trace;  
                  }  
                }`

**Hierarchy Level**    [edit protocols pcep]

**Release Information**    Statement introduced in Junos OS Release 12.3.  
                             Support for PTX Series added in Junos OS Release 14.2.  
                             Support for QFX10000 switches added in Junos OS Release 16.1R3.

**Description**    Configure the Path Computation Element (PCE) group parameters. A maximum of 10 PCE groups can be configured at any given point in time. The remaining statements are explained separately.



**NOTE:** A PCE group can include PCEs that are either only stateful or only active stateful. A combination of stateful PCEs and active stateful PCEs in one PCE group is not supported.

---

**Required Privilege Level**    routing—To view this statement in the configuration.  
                                 routing-control—To add this statement to the configuration.

**Related Documentation**    • [pcep on page 1696](#)

## pce-type

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>pce-type {<br/>    active stateful;<br/>}</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Hierarchy Level</b>          | [edit protocols pcep pce <i>pce-id</i> ]                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 12.3.<br>Support for PTX Series added in Junos OS Release 14.2.<br>Support for QFX10000 switches added in Junos OS Release 16.1R3.                                                                                                                                                                                                                                                                                                           |
| <b>Description</b>              | Configure the path computation element (PCE) type: <ul style="list-style-type: none"><li>• active—Uses LSP state information learned from PCCs to optimize path computations, and actively updates LSP parameters in those PCCs that delegated control over their LSPs to the PCE.</li><li>• stateful—Uses LSP state information learned from PCCs to optimize path computations, but does not actively update the LSP state. A PCC maintains synchronization with the PCE.</li></ul> |
| <b>Required Privilege Level</b> | routing—To view this statement in the configuration.<br>routing-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">pce on page 1702</a></li></ul>                                                                                                                                                                                                                                                                                                                                                                                                    |

## querier (performance-monitoring)

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre> querier {   delay {     traffic-class tc-value {       average-sample-size sample size;       padding-size size;       query-interval milliseconds;       rtt-delay-threshold rtt threshold value;       twcd-delay-threshold twcd threshold value;     }   }   loss {     traffic-class tc-value {       average-sample-size sample size;       loss-threshold loss threshold value;       loss-threshold-window number of samples for loss threshold;       measurement-quantity bytes packets;       query-interval milliseconds;     }   }   loss-delay {     traffic-class tc-value {       average-sample-size sample size;       loss-threshold loss threshold value;       loss-threshold-window number of samples for loss threshold;       measurement-quantity bytes packets;       padding-size size;       query-interval milliseconds;       rtt-delay-threshold rtt threshold value;       twcd-delay-threshold twcd threshold value;     }   } } </pre> |
| <b>Hierarchy Level</b>          | <p>[edit protocols mpls oam performance-monitoring],<br/> [edit protocols mpls label-switched-path lsp-name oam performance-monitoring],<br/> [edit protocols mpls label-switched-path lsp-name primary path-name oam performance-monitoring],<br/> [edit protocols mpls label-switched-path lsp-name secondary path-name oam performance-monitoring]</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Release Information</b>      | <p>Statement introduced in Junos OS Release 15.1.<br/> Command introduced in Junos OS Release 16.1R3 for QFX10000 switches.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Description</b>              | <p>Configure querier options.</p> <p>The remaining statements are explained separately.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Required Privilege Level</b> | <p>routing—To view this statement in the configuration.<br/> routing-control—To add this statement to the configuration.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |



Related •  
Documentation

## traceoptions (PCE)

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>traceoptions {<br/>    file <i>filename</i> &lt;files <i>number</i>&gt; &lt;size <i>size</i>&gt; &lt;world-readable   no-world-readable&gt;;<br/>    flag (all   pcep);<br/>    no-remote-trace;<br/>}</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Hierarchy Level</b>          | [edit protocols pcep pce <i>pce-id</i> ]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Description</b>              | Configure the Path Computation Element Protocol (PCEP) tracing options.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Options</b>                  | <p><b><i>filename</i></b>—Name of the file to receive the output of the tracing operation. All files are placed in the directory <i>/var/log</i>.</p> <p><b><i>files number</i></b>—(Optional) Maximum number of trace files. When a trace file named trace-file reaches its maximum size, it is renamed trace-file.0, then trace-file.1, and so on, until the maximum number of trace files is reached. Then the oldest trace file is overwritten.</p> <p><b>Range:</b> 2 through 1000 files</p> <p><b>Default:</b> 2 files. If you specify a maximum number of files, you must also include the <b>size</b> statement to specify the maximum file size.</p> <p><b><i>flag</i></b>—Area of path computation client process (pccd) to enable debugging output.</p> <ul style="list-style-type: none"><li>all—Trace all areas of PCD code.</li><li>pcep—Trace Path Computation Element Protocol (PCEP) operations.</li></ul> <p><b><i>no-remote-trace</i></b>—(Optional) Disable remote tracing options.</p> <p><b><i>no-world-readable</i></b>—(Optional) Allow only certain users to read the log file.</p> <p><b><i>size size</i></b>—(Optional) Maximum size of each trace file, in kilobytes (KB), megabytes (MB), or gigabytes (GB). When a trace file named trace-file reaches this size, it is renamed trace-file.0. When the trace-file again reaches this size, trace-file.0 is renamed trace-file.1 and trace-file is renamed trace-file.0. This renaming scheme continues until the maximum number of trace files is reached. Then the oldest trace file is overwritten.</p> <p><b>Syntax:</b> <i>xk</i> to specify KB, <i>xm</i> to specify MB, or <i>xg</i> to specify GB.</p> <p><b>Range:</b> 10 KB through the maximum file size supported on your system.</p> <p><b>Default:</b> 1 MB. If you specify a maximum file size, you must also include the <b>files</b> statement to specify the maximum number of files.</p> <p><b><i>world-readable</i></b>—(Optional) Allow any user to read the log file.</p> |
| <b>Required Privilege Level</b> | routing and trace—To view this statement in the configuration.<br>routing-control and trace-control—To add this statement to the configuration.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |

Related Documentation • [pce on page 1702](#)

## traceoptions (Protocols PCEP)

---

|                        |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>          | <pre>traceoptions {<br/>    file <i>filename</i> &lt;files <i>number</i>&gt; &lt;size <i>size</i>&gt; &lt;world-readable   no-world-readable&gt;;<br/>    flag <i>flag</i>;<br/>    no-remote-trace;<br/>}</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Hierarchy Level</b> | [edit protocols pcep]                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Description</b>     | Configure the Path Computation Element Protocol (PCEP) tracing options.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Options</b>         | <p><b><i>filename</i></b>—Name of the file to receive the output of the tracing operation. All files are placed in the directory <i>/var/log</i>.</p> <p><b><i>files number</i></b>—(Optional) Maximum number of trace files. When a trace file named trace-file reaches its maximum size, it is renamed trace-file.0, then trace-file.1, and so on, until the maximum number of trace files is reached. Then the oldest trace file is overwritten.</p> <p><b>Range:</b> 2 through 1000 files</p> <p><b>Default:</b> 2 files. If you specify a maximum number of files, you must also include the <b>size</b> statement to specify the maximum file size.</p> <p><b><i>flag</i></b>—Area of path computation client process (pccd) to enable debugging output.</p> <p>PCEP Tracing Flags</p> <ul style="list-style-type: none"><li>• <b><i>all</i></b>—Trace all areas of PCCD code</li><li>• <b><i>pccd-config</i></b>—All configuration parsing operations</li><li>• <b><i>pccd-core</i></b>—PCCD core operations</li><li>• <b><i>pccd-functions</i></b>—PCCD function entries and outs</li><li>• <b><i>pccd-main</i></b>—PCCD main module</li><li>• <b><i>pccd-rpd</i></b>—PCCD communication with RPD</li><li>• <b><i>pccd-ui</i></b>—PCCD user interface handling</li></ul> <p><b><i>no-remote-trace</i></b>—(Optional) Disable remote tracing options.</p> <p><b><i>no-world-readable</i></b>—(Optional) Allow only certain users to read the log file.</p> <p><b><i>size size</i></b>—(Optional) Maximum size of each trace file, in kilobytes (KB), megabytes (MB), or gigabytes (GB). When a trace file named trace-file reaches this size, it is renamed trace-file.0. When the trace-file again reaches this size, trace-file.0 is renamed trace-file.1 and trace-file is renamed trace-file.0. This renaming scheme continues until the maximum number of trace files is reached. Then the oldest trace file is overwritten.</p> <p><b>Syntax:</b> <i>xk</i> to specify KB, <i>xm</i> to specify MB, or <i>xg</i> to specify GB.</p> <p><b>Range:</b> 10 KB through the maximum file size supported on your system.</p> |

**Default:** 1 MB. If you specify a maximum file size, you must also include the **files** statement to specify the maximum number of files.

**world-readable**—(Optional) Allow any user to read the log file.

**Required Privilege Level** routing and trace—To view this statement in the configuration.  
routing-control and trace-control—To add this statement to the configuration.

**Related Documentation** • [pcep on page 1696](#)

## update-rate-limit

---

**Syntax** `update-rate-limit updates-per-minute;`

**Hierarchy Level** [edit protocols pcep]

**Release Information** Statement introduced in Junos OS Release 12.3.  
Support for PTX Series added in Junos OS Release 14.2.  
Support for QFX10000 switches added in Junos OS Release 16.1R3.

**Description** Specify the number of updates per minute that the Path Computation Client (PCC) can receive at maximum. Updates above this limit are ignored by the PCC.

**Options** ***updates-per-minute***—Number of updates per minute that the PCC can receive at maximum.  
**Range:** 1 through 16384  
**Default:** 0 (disabled or no limit)

**Required Privilege Level** routing—To view this statement in the configuration.  
routing-control—To add this statement to the configuration.

**Related Documentation** • [pcep on page 1696](#)



## PART 10

# Operational Commands

- [MPLS Operational Commands on page 1715](#)
- [RSVP Operational Commands on page 1839](#)
- [LDP Operational Commands on page 1883](#)
- [CCC and TCC Operational Commands on page 1941](#)
- [PCEP Operational Commands on page 1961](#)





## CHAPTER 30

# MPLS Operational Commands

- `clear mpls lsp`
- `clear mpls container-lsp`
- `clear performance-monitoring mpls lsp`
- `monitor mpls delay rsvp`
- `monitor mpls loss rsvp`
- `monitor mpls loss-delay rsvp`
- `ping mpls bgp`
- `ping mpls lsp-end-point`
- `request mpls container-lsp`
- `request mpls lsp adjust-autobandwidth`
- `show connections`
- `show link-management`
- `show link-management peer`
- `show link-management routing`
- `show link-management statistics`
- `show link-management te-link`
- `show mpls admin-groups`
- `show mpls association`
- `show mpls call-admission-control`
- `show mpls container-lsp`
- `show mpls context-identifier`
- `show mpls correlation label`
- `show mpls correlation nexthop-id`
- `show mpls cspf`
- `show mpls diffserv-te`
- `show mpls egress-protection`
- `show mpls interface`
- `show mpls label usage`

- `show mpls lsp`
- `show mpls lsp autobandwidth`
- `show mpls path`
- `show mpls srlg`
- `show mpls static-lsp`
- `show performance-monitoring mpls lsp`
- `show ted database`
- `show ted link`
- `show ted protocol`
- `traceroute mpls bgp`
- `transit` (Chained Composite Next Hops) on page 1837

## clear mpls lsp

**List of Syntax**    [Syntax on page 1717](#)  
                          [Syntax \(EX and QFX Series Switches\) on page 1717](#)

**Syntax**    clear mpls lsp  
                  <all>  
                  <autobandwidth>  
                  <logical-system (all | *logical-system-name*)>  
                  <name *name*>  
                  <optimize | optimize-aggressive>  
                  <path *regular-expression*>  
                  <statistics>

**Syntax (EX and QFX Series Switches)**    clear mpls lsp  
                  <all>  
                  <autobandwidth>  
                  <name *name*>  
                  <optimize | optimize-aggressive>  
                  <path *regular-expression*>  
                  <statistics>

**Release Information**    Command introduced before Junos OS Release 7.4.  
                                  Command introduced in Junos OS Release 9.5 for EX Series switches.  
                                  Command introduced in Junos OS Release 13.2X51-D15 for the QFX Series.

**Description**    Release the routes and states associated with MPLS label-switched paths (LSPs), and start new LSPs.



**CAUTION:** This command disconnects existing Resource Reservation Protocol (RSVP) sessions on the ingress routing device. If there is a time lag between the old path being torn down and the new path being set up, this command might impact traffic traveling along the LSPs.

**Options**    **all**—Reset and restart all LSPs that originated from this routing device; that is, all LSPs for which this routing device is the ingress routing device. Depending on the number of LSPs involved, it might take a while to restart all the LSPs.

**autobandwidth**—(Optional) Clear LSP autobandwidth counters.

**logical-system (all | *logical-system-name*)**—(Optional) Perform this operation on all logical systems or on a particular logical system.

**name *name***—(Optional) Reset and restart the specified LSP or group of LSPs. You can include wildcard characters in the interface name, as described in the *Junos Network Interfaces Configuration Guide*.

**optimize | optimize-aggressive**—(Optional) Run nonpreemptive optimization or aggressive optimization computation now.

**path *regular-expression***—(Optional) Clear the specific LSP path matching the specified regular expression.

**statistics**—(Optional) Clear LSP statistics. You cannot clear the MPLS LSP statistics using a regular expression (**name** and **path** options) on transit routers.

**Required Privilege Level**

clear

**Related Documentation**

- [show mpls lsp on page 1786](#)
- [show rsvp session on page 1861](#)

**List of Sample Output** [clear mpls lsp all on page 1718](#)

**Output Fields** When you enter this command, you are provided feedback on the status of your request.

## Sample Output

[clear mpls lsp all](#)

```
user@host> clear mpls lsp all
```

## clear mpls container-lsp

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>clear mpls container-lsp &lt;autobandwidth&gt; &lt;history&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt; &lt;member&gt; &lt;name <i>name</i>&gt; &lt;optimize   optimize-aggressive&gt; &lt;statistics&gt;</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Release Information</b>      | <p>Statement introduced in Junos OS Release 14.2.</p> <p>Statement introduced for QFX Switches in Junos OS Release 15.1X53-D30.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Description</b>              | Release the routes and states associated with MPLS container label-switched paths (LSPs), and start new LSPs.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Options</b>                  | <p><b>none</b>—Reset and restart all LSPs that originated from this routing device; that is, all LSPs for which this routing device is the ingress routing device. Depending on the number of LSPs involved, it might take a while to restart all the LSPs.</p> <p><b>autobandwidth</b>—(Optional) Clear LSP autobandwidth counters.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p><b>name <i>name</i></b>—(Optional) Reset and restart the specified LSP or group of LSPs. You can include wildcard characters in the interface name, as described in the <i>Junos Network Interfaces Configuration Guide</i>.</p> <p><b>optimize   optimize-aggressive</b>—(Optional) Run nonpreemptive optimization or aggressive optimization computation now.</p> <p><b>statistics</b>—(Optional) Clear LSP statistics. You cannot clear the MPLS LSP statistics using a regular expression (<b>name</b> and <b>path</b> options) on transit routers.</p> |
| <b>Required Privilege Level</b> | clear                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">show mpls container-lsp on page 1764</a></li> <li>• <a href="#">request mpls container-lsp on page 1739</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>List of Sample Output</b>    | <p><a href="#">clear mpls container-lsp on page 1720</a></p> <p><a href="#">clear mpls container-lsp name on page 1720</a></p> <p><a href="#">clear mpls container-lsp statistics on page 1720</a></p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Output Fields</b>            | When you enter this command, you are provided feedback on the status of your request.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |

## Sample Output

clear mpls container-lsp

```
user@host> clear mpls container-lsp
```

clear mpls container-lsp *name*

```
user@host> clear mpls container-lsp name name
```

clear mpls container-lsp *statistics*

```
user@host> clear mpls container-lsp statistics
```

## clear performance-monitoring mpls lsp

---

|                                 |                                                                                                                                                                                                       |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | clear performance-monitoring mpls lsp<br><name <i>lsp-name</i> >                                                                                                                                      |
| <b>Release Information</b>      | Command introduced in Junos OS Release 15.1.                                                                                                                                                          |
| <b>Description</b>              | Restart the performance monitoring statistics.                                                                                                                                                        |
| <b>Options</b>                  | <p><b>none</b>—Reset and restart all performance monitoring for all LSPs.</p> <p><b>name <i>lsp-name</i></b>—(Optional) Reset and restart performance monitoring for the specified LSP.</p>           |
| <b>Required Privilege Level</b> | clear                                                                                                                                                                                                 |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">performance-monitoring (Protocols MPLS) on page 1493</a></li> <li>• <a href="#">show performance-monitoring mpls lsp on page 1814</a></li> </ul> |
| <b>List of Sample Output</b>    | <a href="#">clear performance-monitoring mpls lsp on page 1721</a>                                                                                                                                    |
| <b>Output Fields</b>            | When you enter this command, performance monitoring is restarted.                                                                                                                                     |

### Sample Output

#### clear performance-monitoring mpls lsp

```
user@host> clear performance-monitoring mpls lsp
```

## monitor mpls delay rsvp

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>monitor mpls delay rsvp <i>lsp-name</i></code><br><code>&lt;detail&gt;</code><br><code>&lt;count <i>count</i>&gt;</code><br><code>&lt;interval <i>seconds</i>&gt;</code><br><code>&lt;padding-size <i>padding-size</i>&gt;</code><br><code>&lt;traffic-class <i>traffic-class</i>&gt;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Release Information</b>      | Command introduced in Junos OS Release 14.2.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Description</b>              | Perform an on-demand delay measurement and display the measured values for associated bidirectional MPLS ultimate hop popping (UHP) point-to-point label-switched paths (LSPs).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Options</b>                  | <p><b><i>lsp-name</i></b>—Name of the associated bidirectional MPLS UHP LSP for which the delay measurement is performed.</p> <p><b>detail</b>—(Optional) Display detailed output of the LSP delay measurement.</p> <p><b>count <i>count</i></b>—(Optional) Specify the number of delay measurements to be carried out for the MPLS UHP LSP. For LSP delay measurement, the number of queries sent is the specified count number plus one additional query, because the LSP delay is measured using successive messages.<br/><b>Default:</b> 10<br/><b>Range:</b> 1 through 1000000</p> <p><b>interval <i>seconds</i></b>—(Optional) Specify in seconds the interval between two successive query messages.<br/><b>Range:</b> 1 through 255 seconds</p> <p><b>padding-size <i>padding-size</i></b>—(Optional) Specify the length of padding TLV to be included in the query message.<br/><b>Range:</b> 0 through 1500</p> <p><b>traffic-class <i>traffic-class</i></b>—(Optional) Specify the traffic class for the LSP delay measurement. When the traffic-class value is not specified, the default traffic-class code-point of 111 is used.<br/><b>Range:</b> 0 though 7</p> |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">monitor mpls loss rsvp on page 1726</a></li><li>• <a href="#">monitor mpls loss-delay rsvp on page 1731</a></li><li>• <a href="#">Example: Configuring On-Demand Loss and Delay Measurement on page 467</a></li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>List of Sample Output</b>    | <a href="#">monitor mpls lsp delay rsvp count on page 1724</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |



[monitor mpls lsp delay rsvp count detail on page 1724](#)

**Output Fields** [Table 51 on page 1723](#) describes the output fields for the **monitor mpls delay rsvp** command. Output fields are listed in the approximate order in which they appear.

**Table 51: monitor mpls delay rsvp Output Fields**

| Field Name                         | Field Description                                                                                                                                                                                                                         | Level of Output |
|------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| Current two-way channel delay      | Sum of packet delays, excluding the processing time of the remote provider edge (PE) router.                                                                                                                                              | All Levels      |
| Current round-trip-time            | Total time taken for completing round-trip of packet.                                                                                                                                                                                     | All Levels      |
| Best two-way channel delay         | Best available two-way channel delay count.                                                                                                                                                                                               | All Levels      |
| Worst two-way channel delay        | Worst available two-way channel delay count.                                                                                                                                                                                              | All Levels      |
| Average two-way channel delay      | Average of the available two-way channel delay counts.                                                                                                                                                                                    | All Levels      |
| Best round-trip-time               | Best available round-trip-time count.                                                                                                                                                                                                     | All Levels      |
| Worst round-trip-time              | Worst available round-trip-time count.                                                                                                                                                                                                    | All Levels      |
| Average round-trip-time            | Average of the available round-trip-time counts.                                                                                                                                                                                          | All Levels      |
| Average forward delay variation    | Average of the variation in forward delay.                                                                                                                                                                                                | All Levels      |
| Average reverse delay variation    | Average of the variation in reverse delay.                                                                                                                                                                                                | All Levels      |
| DM queries sent                    | Number of queries sent for delay measurement.                                                                                                                                                                                             | All Levels      |
| DM responses received              | Number of responses received for delay measurement queries.                                                                                                                                                                               | All Levels      |
| DM queries timedout                | Number of timed out queries sent for delay measurement.                                                                                                                                                                                   | All Levels      |
| DM responses dropped due to errors | Number of loss measurement responses dropped due to errors.                                                                                                                                                                               | All Levels      |
| Response code                      | Status of the messages used for delay measurement. Response code can be one of the following: <ul style="list-style-type: none"> <li>• <b>Success</b>—Successful response code.</li> <li>• <b>Failed</b>—Failed response code.</li> </ul> | <b>detail</b>   |
| Querier transmit timestamp         | Timestamp on the query message when the message is sent out the ingress PE router (querier). This is done in the hardware before packet is sent out of an interface.                                                                      | <b>detail</b>   |

Table 51: monitor mpls delay rsvp Output Fields (*continued*)

| Field Name                   | Field Description                                                                                                                                                           | Level of Output |
|------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| Responder receive timestamp  | Timestamp on the response message when the message is received by the egress PE router (responder). This is done in the hardware before packet is received by an interface. | detail          |
| Responder transmit timestamp | Timestamp on the query message when the message is sent out the egress PE router (responder). This is done in the hardware before packet is sent out of an interface.       | detail          |
| Querier receive timestamp    | Timestamp on the response message when the message is received by the ingress PE router (querier). This is done in the hardware before packet is received by an interface.  | detail          |

## Sample Output

### monitor mpls lsp delay rsvp count

```

user@host> monitor mpls lsp delay rsvp LSP-A count 2

(1)
Current two-way channel delay      : 44 usecs
Current round-trip-time           : 3243 usecs
(2)
Current two-way channel delay      : 45 usecs
Current round-trip-time           : 1752 usecs

Best two-way channel delay         : 44 usecs
Worst two-way channel delay        : 45 usecs
Average two-way channel delay      : 45 usecs
Best round-trip-time              : 1752 usecs
Worst round-trip-time             : 3243 usecs
Average round-trip-time           : 2498 usecs
Average forward delay variation    : 1 usecs
Average reverse delay variation    : 1 usecs

DM queries sent                   : 2
DM responses received              : 2
DM queries timeout                : 0
DM responses dropped due to errors : 0

```

### monitor mpls lsp delay rsvp count detail

```

user@host> monitor mpls lsp delay rsvp LSP-A count 2 detail

(1)
Response code                     : Success
Querier transmit timestamp        : 1404129122 secs, 479955401 nsecs
Responder receive timestamp       : 1404129122 secs, 468519022 nsecs
Responder transmit timestamp      : 1404129122 secs, 470255123 nsecs
Querier receive timestamp         : 1404129122 secs, 481736403 nsecs
Current two-way channel delay     : 44 usecs
Current round-trip-time           : 1781 usecs
(2)
Response code                     : Success
Querier transmit timestamp        : 1404129123 secs, 480926210 nsecs
Responder receive timestamp       : 1404129123 secs, 469488696 nsecs
Responder transmit timestamp      : 1404129123 secs, 471130706 nsecs
Querier receive timestamp         : 1404129123 secs, 482613911 nsecs
Current two-way channel delay     : 45 usecs

```

```

Current round-trip-time           : 1687 usecs

Best two-way channel delay       : 44 usecs
Worst two-way channel delay      : 45 usecs
Average two-way channel delay    : 45 usecs
Best round-trip-time            : 1687 usecs
Worst round-trip-time           : 1781 usecs
Average round-trip-time         : 1734 usecs
Average forward delay variation  : 1 usecs
Average reverse delay variation  : 1 usecs

DM queries sent                  : 2
DM responses received            : 2
DM queries timedout              : 0
DM responses dropped due to errors : 0
user@host> monitor mpls loss-delay-measurement lsp LSP1_A_to_B count 2
(1)
Current forward loss             : 0 packets
Current forward loss ratio       : 0.000000
Current forward throughput       : 0.957 kpps
Current reverse loss             : 0 packets
Current reverse loss ratio       : 0.000000
Current reverse throughput       : 0.962 kpps
Current two-way channel delay    : 48 usecs
Current round-trip-time         : 3476 usecs
(2)
Current forward loss             : 0 packets
Current forward loss ratio       : 0.000000
Current forward throughput       : 0.599 kpps
Current reverse loss             : 0 packets
Current reverse loss ratio       : 0.000000
Current reverse throughput       : 0.599 kpps
Current two-way channel delay    : 50 usecs
Current round-trip-time         : 1856 usecs

Cumulative forward transmit count : 1557
Cumulative forward loss           : 0 packets
Average forward loss ratio        : 0.000000
Average forward throughput        : 0.778 kpps
Cumulative reverse transmit count : 1562
Cumulative reverse loss           : 0 packets
Average reverse loss ratio        : 0.000000
Average reverse throughput        : 0.780 kpps

Best two-way channel delay       : 48 usecs
Worst two-way channel delay      : 50 usecs
Average two-way channel delay    : 49 usecs
Best round-trip-time            : 1856 usecs
Worst round-trip-time           : 3476 usecs
Average round-trip-time         : 2445 usecs
Average forward delay variation  : 1 usecs
Average reverse delay variation  : 1 usecs

LDM queries sent                 : 3
LDM responses received           : 3
LDM queries timedout             : 0
LDM responses dropped due to errors : 0

```

## monitor mpls loss rsvp

**Syntax**    `monitor mpls loss rsvp lsp-name`  
               `<detail>`  
               `<bytes>`  
               `<count count>`  
               `<interval seconds>`  
               `<traffic-class traffic-class>`

**Release Information**    Command introduced in Junos OS Release 14.2.

**Description**    Perform an on-demand loss measurement and display the measured values for associated bidirectional MPLS ultimate hop popping (UHP) point-to-point label-switched paths (LSPs).

**Options**    *lsp-name*—Name of the associated bidirectional MPLS UHP LSP for which the loss measurement is performed.

*detail*—(Optional) Display detailed output of the LSP loss measurement.

*bytes*—(Optional) Specify the measurement quantity for the LSP loss measurement as bytes. By default, LSP loss is measured in packets.



**NOTE:** The byte count of a packet sent or received over a channel counts only the payload, including the total length of that packet and excluding the headers, labels, and framing of the channel itself.

*count count*—(Optional) Specify the number of loss measurements to be carried out for the MPLS UHP LSP. For LSP loss measurement, the number of queries sent is the specified count number plus one additional query, because the LSP loss is measured using successive messages.

**Default:** 10

**Range:** 1 through 1000000

*interval seconds*—(Optional) Specify in seconds the interval between two successive query messages.

**Range:** 1 through 255 seconds

*traffic-class traffic-class*—(Optional) Specify the traffic class and enable traffic-class-statistics for the LSP loss measurement.

**Range:** 0 though 7

**Required Privilege Level**    view

**Related Documentation**

- [monitor mpls delay rsvp on page 1722](#)
- [monitor mpls loss-delay rsvp on page 1731](#)

- [Example: Configuring On-Demand Loss and Delay Measurement on page 467](#)

**List of Sample Output** [monitor mpls lsp loss rsvp count on page 1728](#)

[monitor mpls lsp loss rsvp detail on page 1729](#)

**Output Fields** [Table 51 on page 1723](#) describes the output fields for the **monitor mpls loss rsvp** command. Output fields are listed in the approximate order in which they appear.

**Table 52: monitor mpls loss rsvp Output Fields**

| Field Name                        | Field Description                                                                                  | Level of Output |
|-----------------------------------|----------------------------------------------------------------------------------------------------|-----------------|
| Current forward loss              | Difference between the current forward transmit count and the current forward receive count.       | All Levels      |
| Current forward loss ratio        | Total packet loss (current forward loss divided by current forward transmit count).                | All Levels      |
| Current forward throughput        | Current forward transmit count divided by 1000.                                                    | All Levels      |
| Current reverse loss              | Difference between the current reverse transmit count and the current reverse receive count.       | All Levels      |
| Current reverse loss ratio        | Total packet loss (current reverse loss divided by current reverse transmit count).                | All Levels      |
| Current reverse throughput        | Current reverse transmit count divided by 1000.                                                    | All Levels      |
| Cumulative forward transmit count | Cumulative forward transmit counter value at the time the loss measurement message was originated. | All Levels      |
| Cumulative forward loss           | Cumulative forward loss counter value at the time the loss measurement message was originated.     | All Levels      |
| Average forward loss ratio        | Average packet loss (current forward loss divided by current forward transmit count).              | All Levels      |
| Average forward throughput        | Average forward transmit count divided by 1000.                                                    | All Levels      |
| Cumulative reverse transmit count | Cumulative reverse transmit counter value at the time the loss measurement message was originated. | All Levels      |
| Cumulative reverse loss           | Difference between the cumulative reverse transmit count and the cumulative reverse receive count. | All Levels      |
| Average reverse loss ratio        | Average packet loss (average reverse loss divided by average reverse transmit count).              | All Levels      |
| Average reverse throughput        | Average reverse transmit count divided by 1000.                                                    | All Levels      |
| LM queries sent                   | Number of queries sent for loss measurement.                                                       | All Levels      |
| LM responses received             | Number of responses received for loss measurement queries.                                         | All Levels      |

Table 52: monitor mpls loss rsvp Output Fields (*continued*)

| Field Name                         | Field Description                                                                                                                                                                                                                        | Level of Output |
|------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| LM queries timedout                | Number of timed out queries sent for loss measurement.                                                                                                                                                                                   | All Levels      |
| LM responses dropped due to errors | Number of loss measurement responses dropped due to errors.                                                                                                                                                                              | All Levels      |
| Response code                      | Status of the messages used for loss measurement. Response code can be one of the following: <ul style="list-style-type: none"> <li>• <b>Success</b>—Successful response code.</li> <li>• <b>Failed</b>—Failed response code.</li> </ul> | <b>detail</b>   |
| Origin timestamp                   | Time and date the loss measurement message is originated without any specific format (NTP and PTP).                                                                                                                                      | <b>detail</b>   |
| Forward transmit count             | Forward transmit counter value at the time the loss measurement message was originated.                                                                                                                                                  | <b>detail</b>   |
| Forward receive count              | Forward receive counter value at the time the loss measurement message was originated.                                                                                                                                                   | <b>detail</b>   |
| Reverse transmit count             | Reverse transmit counter value at the time the loss measurement message was originated.                                                                                                                                                  | <b>detail</b>   |
| Reverse receive count              | Reverse receive counter value at the time the loss measurement message was originated.                                                                                                                                                   | <b>detail</b>   |
| Current forward transmit count     | Difference between the current forward transit count and the previous forward transit count.                                                                                                                                             | <b>detail</b>   |
| Current forward receive count      | Difference between the current forward receive count and the previous forward receive count.                                                                                                                                             | <b>detail</b>   |
| Current reverse transmit count     | Difference between the current reverse transit count and the previous reverse transit count.                                                                                                                                             | <b>detail</b>   |
| Current reverse receive count      | Difference between the current reverse receive count and the previous reverse receive count.                                                                                                                                             | <b>detail</b>   |

## Sample Output

### monitor mpls lsp loss rsvp count

```
user@host> monitor mpls lsp loss rsvp count 2
```

```
(1)
Current forward loss           : 0 packets
Current forward loss ratio     : 0.000000
Current forward throughput     : 1.006 kpps
Current reverse loss           : 0 packets
Current reverse loss ratio     : 0.000000
Current reverse throughput     : 1.007 kpps
(2)
Current forward loss           : 0 packets
```

```

Current forward loss ratio          : 0.000000
Current forward throughput          : 0.559 kpps
Current reverse loss                : 0 packets
Current reverse loss ratio          : 0.000000
Current reverse throughput          : 0.562 kpps

Cumulative forward transmit count   : 1559
Cumulative forward loss             : 0 packets
Average forward loss ratio          : 0.000000
Average forward throughput          : 0.782 kpps
Cumulative reverse transmit count   : 1563
Cumulative reverse loss             : 0 packets
Average reverse loss ratio          : 0.000000
Average reverse throughput          : 0.784 kpps

LM queries sent                     : 3
LM responses received               : 3
LM queries timedout                 : 0
LM responses dropped due to errors  : 0

```

#### monitor mpls lsp loss rsvp detail

```

user@host> monitor mpls lsp loss rsvp detail
(0)
Response code                       : Success
Origin timestamp                    : 1404129082 secs, 905571890 nsecs
Forward transmit count              : 83040
Forward receive count               : 83040
Reverse transmit count              : 83100
Reverse receive count               : 83100
(1)
Response code                       : Success
Origin timestamp                    : 1404129083 secs, 905048410 nsecs
Forward transmit count              : 83841
Forward receive count               : 83841
Reverse transmit count              : 83904
Reverse receive count               : 83904
Current forward transmit count      : 801
Current forward receive count       : 801
Current forward loss                : 0 packets
Current forward loss ratio          : 0.000000
Current forward throughput          : 0.801 kpps
Current reverse transmit count      : 804
Current reverse receive count       : 804
Current reverse loss                : 0 packets
Current reverse loss ratio          : 0.000000
Current reverse throughput          : 0.804 kpps
(2)
Response code                       : Success
Origin timestamp                    : 1404129084 secs, 904828715 nsecs
Forward transmit count              : 84423
Forward receive count               : 84423
Reverse transmit count              : 84487
Reverse receive count               : 84487
Current forward transmit count      : 582
Current forward receive count       : 582
Current forward loss                : 0 packets
Current forward loss ratio          : 0.000000
Current forward throughput          : 0.582 kpps
Current reverse transmit count      : 583
Current reverse receive count       : 583

```

|                                    |              |
|------------------------------------|--------------|
| Current reverse loss               | : 0 packets  |
| Current reverse loss ratio         | : 0.000000   |
| Current reverse throughput         | : 0.583 kpps |
| Cumulative forward transmit count  | : 1383       |
| Cumulative forward loss            | : 0 packets  |
| Average forward loss ratio         | : 0.000000   |
| Average forward throughput         | : 0.692 kpps |
| Cumulative reverse transmit count  | : 1387       |
| Cumulative reverse loss            | : 0 packets  |
| Average reverse loss ratio         | : 0.000000   |
| Average reverse throughput         | : 0.694 kpps |
| LM queries sent                    | : 3          |
| LM responses received              | : 3          |
| LM queries timeout                 | : 0          |
| LM responses dropped due to errors | : 0          |



## monitor mpls loss-delay rsvp

**Syntax**    `monitor mpls loss-delay rsvp lsp-name`  
               `<detail>`  
               `<bytes>`  
               `<count count>`  
               `<interval seconds>`  
               `<padding-size padding-size>`  
               `<traffic-class traffic-class>`

**Release Information**    Command introduced in Junos OS Release 14.2.

**Description**    Perform a simultaneous on-demand loss and delay measurement using combined loss and delay messages, and display the measured values for associated bidirectional MPLS ultimate hop popping (UHP) point-to-point label-switched paths (LSPs).

**Options**    *lsp-name*—Name of the associated bidirectional MPLS UHP LSP for which the delay measurement is performed.

**detail**—(Optional) Display detailed output of the LSP delay measurement.

**bytes**—(Optional) Specify the measurement quantity for the LSP loss measurement as bytes. By default, LSP loss is measured in packets.



**NOTE:** The byte count of a packet sent or received over a channel counts only the payload, including the total length of that packet and excluding the headers, labels, and framing of the channel itself.

**count *count***—(Optional) Specify the number of delay measurements to be carried out for the MPLS UHP LSP. For LSP delay measurement, the number of queries sent is the specified count number plus one additional query, because the LSP delay is measured using successive messages.

**Default:** 10

**Range:** 1 through 1000000

**interval *seconds***—(Optional) Specify in seconds the interval between two successive query messages.

**Range:** 1 through 255 seconds

**padding-size *padding-size***—(Optional) Specify the length of padding TLV to be included in the query message.

**Range:** 0 through 1500

**traffic-class *traffic-class***—(Optional) Specify the traffic class for the LSP delay measurement. When the traffic-class value is not specified, the default traffic-class code-point of 111 is used.

**Range:** 0 though 7

**Required Privilege Level** view

**Related Documentation**

- [monitor mpls loss rsvp on page 1726](#)
- [monitor mpls delay rsvp on page 1722](#)
- [Example: Configuring On-Demand Loss and Delay Measurement on page 467](#)

**List of Sample Output** [monitor mpls loss-delay rsvp count on page 1732](#)  
[monitor mpls loss-delay rsvp count detail on page 1733](#)

**Output Fields** For output field descriptions, see the [monitor mpls loss rsvp](#) and [monitor mpls delay rsvp](#) commands.

## Sample Output

### monitor mpls loss-delay rsvp count

```
user@host> monitor mpls loss-delay rsvp LSP-A count 2

(1)
Current forward loss           : 0 packets
Current forward loss ratio     : 0.000000
Current forward throughput     : 0.957 kpps
Current reverse loss           : 0 packets
Current reverse loss ratio     : 0.000000
Current reverse throughput     : 0.962 kpps
Current two-way channel delay   : 48 usecs
Current round-trip-time        : 3476 usecs

(2)
Current forward loss           : 0 packets
Current forward loss ratio     : 0.000000
Current forward throughput     : 0.599 kpps
Current reverse loss           : 0 packets
Current reverse loss ratio     : 0.000000
Current reverse throughput     : 0.599 kpps
Current two-way channel delay   : 50 usecs
Current round-trip-time        : 1856 usecs

Cumulative forward transmit count : 1557
Cumulative forward loss           : 0 packets
Average forward loss ratio       : 0.000000
Average forward throughput       : 0.778 kpps
Cumulative reverse transmit count : 1562
Cumulative reverse loss          : 0 packets
Average reverse loss ratio       : 0.000000
Average reverse throughput       : 0.780 kpps

Best two-way channel delay        : 48 usecs
Worst two-way channel delay       : 50 usecs
Average two-way channel delay     : 49 usecs
Best round-trip-time             : 1856 usecs
Worst round-trip-time            : 3476 usecs
Average round-trip-time          : 2445 usecs
Average forward delay variation   : 1 usecs
Average reverse delay variation   : 1 usecs

LDM queries sent                 : 3
```

```

LDM responses received           : 3
LDM queries timedout            : 0
LDM responses dropped due to errors : 0

```

### monitor mpls loss-delay rsvp count detail

```
user@host> monitor mpls loss-delay rsvp LSP-A count 2 detail
```

```

(0)
Response code                     : Success
Forward transmit count            : 142049
Forward receive count             : 142049
Reverse transmit count            : 142167
Reverse receive count             : 142167
Querier transmit timestamp        : 1404129161 secs, 554422723 nsecs
Responder receive timestamp       : 1404129161 secs, 542877570 nsecs
Responder transmit timestamp      : 1404129161 secs, 546004545 nsecs
Querier receive timestamp         : 1404129161 secs, 557599327 nsecs

(1)
Response code                     : Success
Forward transmit count            : 143049
Forward receive count             : 143049
Reverse transmit count            : 143168
Reverse receive count             : 143168
Current forward transmit count    : 1000
Current forward receive count     : 1000
Current forward loss              : 0 packets
Current forward loss ratio        : 0.000000
Current forward throughput        : 1.000 kpps
Current reverse transmit count    : 1001
Current reverse receive count     : 1001
Current reverse loss              : 0 packets
Current reverse loss ratio        : 0.000000
Current reverse throughput        : 1.001 kpps
Querier transmit timestamp        : 1404129162 secs, 554465742 nsecs
Responder receive timestamp       : 1404129162 secs, 542919166 nsecs
Responder transmit timestamp      : 1404129162 secs, 545812736 nsecs
Querier receive timestamp         : 1404129162 secs, 557409175 nsecs
Current two-way channel delay     : 49 usecs
Current round-trip-time           : 2943 usecs

(2)
Response code                     : Success
Forward transmit count            : 143677
Forward receive count             : 143677
Reverse transmit count            : 143799
Reverse receive count             : 143799
Current forward transmit count    : 628
Current forward receive count     : 628
Current forward loss              : 0 packets
Current forward loss ratio        : 0.000000
Current forward throughput        : 0.627 kpps
Current reverse transmit count    : 631
Current reverse receive count     : 631
Current reverse loss              : 0 packets
Current reverse loss ratio        : 0.000000
Current reverse throughput        : 0.630 kpps
Querier transmit timestamp        : 1404129163 secs, 556698575 nsecs
Responder receive timestamp       : 1404129163 secs, 545150128 nsecs
Responder transmit timestamp      : 1404129163 secs, 546918408 nsecs
Querier receive timestamp         : 1404129163 secs, 558515047 nsecs
Current two-way channel delay     : 48 usecs

```

|                                     |              |
|-------------------------------------|--------------|
| Current round-trip-time             | : 1816 usecs |
| Cumulative forward transmit count   | : 1628       |
| Cumulative forward loss             | : 0 packets  |
| Average forward loss ratio          | : 0.000000   |
| Average forward throughput          | : 0.813 kpps |
| Cumulative reverse transmit count   | : 1632       |
| Cumulative reverse loss             | : 0 packets  |
| Average reverse loss ratio          | : 0.000000   |
| Average reverse throughput          | : 0.815 kpps |
| Best two-way channel delay          | : 48 usecs   |
| Worst two-way channel delay         | : 49 usecs   |
| Average two-way channel delay       | : 49 usecs   |
| Best round-trip-time                | : 1816 usecs |
| Worst round-trip-time               | : 3176 usecs |
| Average round-trip-time             | : 2645 usecs |
| Average forward delay variation     | : 1 usecs    |
| Average reverse delay variation     | : 0 usecs    |
| LDM queries sent                    | : 3          |
| LDM responses received              | : 3          |
| LDM queries timedout                | : 0          |
| LDM responses dropped due to errors | : 0          |

## ping mpls bgp

**Syntax** ping mpls bgp *fec*  
 <bottom-label-ttl>  
 <count *count*>  
 <destination *address*>  
 <detail>  
 <exp *forwarding-class*>  
 <instance *routing-instance-name*>  
 <logical-system (all | *logical-system-name*)>  
 <size *bytes*>  
 <source *source-address*>  
 <sweep>

**Release Information** Command introduced in Junos OS Release 11.1.

**Description** Check the operability of MPLS BGP-signaled label-switched path (LSP) connections. Press Ctrl+c to interrupt a **ping mpls bgp** command.



**NOTE:** The **ping mpls bgp fec** command only supports single paths.

- Options**
- bottom-label-ttl**—(Optional) Time-to-live (TTL) value for the bottom label in the label stack. The range of values is 1 through 255. The default value is **255**.
  - count *count***—(Optional) Number of ping requests to send. If **count** is not specified, five ping requests are sent. The range of values is 1 through 1,000,000. The default value is **5**.
  - destination *address***—(Optional) Specify an address other than the default (127.0.0.1/32) for the ping echo requests. The address can be anything within the 127/8 subnet.
  - detail**—(Optional) Display detailed information about the echo requests sent and received.
  - exp *forwarding-class***—(Optional) Value of the forwarding class for the MPLS ping packets.
  - fec***—Ping a BGP-signaled LSP using the forwarding equivalence class (FEC) prefix and length.
  - instance *routing-instance-name***—(Optional) Allows you to ping a combination of the routing instance and forwarding equivalence class (FEC) associated with an LSP.
  - logical-system (all | *logical-system-name*)**—(Optional) Perform this operation on all logical systems or on the specified logical system.
  - size *bytes***—(Optional) Size of the LSP ping request packet (88 through 65468 bytes). Packets are 4-byte aligned. For example, If you enter a size of 89, 90, 91, or 92, the router or switch uses a size value of 92 bytes. If you enter a packet size that is smaller than the minimum size, an error message is displayed reminding you of the 88-byte minimum.

**source *source-address***—(Optional) IP address of the outgoing interface. This address is sent in the IP source address field of the ping request. If this option is not specified, the default address is usually the loopback interface (**lo.0**).

**sweep**—(Optional) Automatically determine the size of the maximum transmission unit (MTU).

**Additional Information** If the LSP changes, the label and interface information displayed when you issued the **ping** command continues to be used. You must configure MPLS at the **[edit protocols mpls]** hierarchy level on the remote router or switch to ping an LSP terminating there. You must configure MPLS even if you intend to ping only BGP forwarding equivalence classes (FECs).

In asymmetric MTU scenarios, the echo response might be dropped. For example, if the MTU from System A to System B is 1000 bytes, the MTU from System B to System A is 500 bytes, and the ping request packet size is 1000 bytes, the echo response is dropped because the PAD TLV is included in the echo response, making it too large.

**Required Privilege Level** network

**List of Sample Output** [ping mpls bgp fec count on page 1736](#)

**Output Fields** When you enter this command, you are provided feedback on the status of your request. An exclamation point (!) indicates that an echo reply was received. A period (.) indicates that an echo reply was not received within the timeout period. An x indicates that an echo reply was received with an error code. Packets with error codes are not counted in the received packets count. They are accounted for separately. To display the error codes, use the **detail** option (for example, **ping mpls bgp 10.255.245.222 detail**).

## Sample Output

### [ping mpls bgp fec count](#)

```
user@host> ping mpls bgp 10.255.245.222 count 10
!!!xxx...x--- 1sping statistics ---10 packets transmitted, 3 packets received,
70% packet loss 4 packets received with error status, not counted as received.
```

## ping mpls lsp-end-point

**Syntax** ping mpls lsp-end-point *prefix-name*  
 <count *count*>  
 <destination *address*>  
 <detail>  
 <exp *forwarding-class*>  
 <instance *routing-instance-name*>  
 <logical-system (all | *logical-system-name*)>  
 <size *bytes*>  
 <source *source-address*>  
 <sweep>

**Release Information** Command introduced before Junos OS Release 7.4.  
 Command introduced in Junos OS Release 9.0 for EX Series switches.  
 The **size** and **sweep** options were introduced in Junos OS Release 9.6.  
 The **instance** option was introduced in Junos OS Release 10.0.  
 Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

**Description** Check the operability of MPLS label-switched path (LSP) endpoint connections. Type Ctrl+c to interrupt a **ping mpls** command.

**Options** **count** *count*—(Optional) Number of ping requests to send. If **count** is not specified, five ping requests are sent. The range of values is 1 through 1,000,000. The default value is 5.

**destination** *address*—(Optional) Specify an address other than the default (127.0.0.1/32) for the ping echo requests. The address can be anything within the 127/8 subnet.

**detail**—(Optional) Display detailed information about the echo requests sent and received.

**exp** *forwarding-class*—(Optional) Value of the forwarding class for the MPLS ping packets.

**instance** *routing-instance-name*—(Optional) Ping a combination of the routing instance and forwarding equivalence class (FEC) associated with an LSP connection.

**logical-system** (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on the specified logical system.

**prefix-name**—LDP forwarding equivalence class (FEC) prefix or RSVP LSP endpoint address.

**size** *bytes*—(Optional) Size of the LSP ping request packet. If the endpoint is LDP-based, the minimum size of the packet is 88 bytes. If the endpoint is RSVP-based, the minimum size of the packet is 100 bytes. The maximum size in either case is 65468 bytes.

**source** *source-address*—(Optional) IP address of the outgoing interface. This address is sent in the IP source address field of the ping request. If this option is not specified, the default address is usually the loopback interface (lo.0).

**sweep**—(Optional) Automatically determine the size of the maximum transmission unit (MTU).

**Additional Information** If the LSP changes, the label and interface information displayed when you issued the **ping** command continues to be used. You must configure MPLS at the **[edit protocols mpls]** hierarchy level on the remote router or switch to ping an LSP terminating there. You must configure MPLS even if you intend to ping only LDP forwarding equivalence classes (FECs).

In asymmetric MTU scenarios, the echo response might be dropped. For example, if the MTU from System A to System B is 1000 bytes, the MTU from System B to System A is 500 bytes, and the ping request packet size is 1000 bytes, the echo response is dropped because the PAD TLV is included in the echo response, making it too large.

**Required Privilege Level** network

**List of Sample Output** [ping mpls lsp-end-point detail on page 1738](#)

**Output Fields** When you enter this command, you are provided feedback on the status of your request. An exclamation point (!) indicates that an echo reply was received. A period (.) indicates that an echo reply was not received within the timeout period. An x indicates that an echo reply was received with an error code. Packets with an error code are not counted in the received packets count. They are accounted for separately.

## Sample Output

### [ping mpls lsp-end-point detail](#)

```
user@host> ping mpls lsp-end-point 10.255.245.119 detail
Route to end point address is via LDP FEC
Request for seq 1, to interface 67, label 100032
Reply for seq 1, return code: Egress-ok
Request for seq 2, to interface 67, label 100032
Reply for seq 2, return code: Egress-ok
Request for seq 3, to interface 67, label 100032
Reply for seq 3, return code: Egress-ok
Request for seq 4, to interface 67, label 100032
Reply for seq 4, return code: Egress-ok
Request for seq 5, to interface 67, label 100032
Reply for seq 5, return code: Egress-ok
--- lsping statistics ---
5 packets transmitted, 5 packets received, 0% packet loss
```



## request mpls container-lsp

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | request mpls container-lsp<br><logical-system (all   <i>logical-system-name</i> )><br><name <i>lsp-name</i> ><br><adjust-autobandwidth><br><normalization>                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Release Information</b>      | Command introduced in Junos OS Release 14.2.<br>Statement introduced for QFX Switches in Junos OS Release 15.1X53-D30.                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Description</b>              | Manually trigger a bandwidth allocation adjustment for the container label-switched path (LSP).                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Options</b>                  | <p><b>none</b>—Manually trigger a bandwidth allocation adjustment for all active member LSP paths.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p><b>name <i>lsp-name</i></b>—(Optional) Manually trigger a bandwidth allocation adjustment on the specified member LSP only.</p> <p><b>adjust-autobandwidth</b>—(Optional) Request LSP autobandwidth adjustment.</p> <p><b>normalization</b>—(Optional) Request container LSP normalization.</p> |
| <b>Required Privilege Level</b> | clear, maintenance                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">show mpls container-lsp on page 1764</a></li> <li>• <a href="#">clear mpls container-lsp on page 1719</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>List of Sample Output</b>    | <a href="#">request mpls container-lsp on page 1739</a><br><a href="#">request mpls container-lsp on page 1739</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Output Fields</b>            | When you enter this command, you are provided feedback on the status of your request.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |

## Sample Output

### request mpls container-lsp

```
user@host> request mpls container-lsp lsp-name normalize
```

### request mpls container-lsp

```
user@host> request mpls container-lsp normalize bandwidth bps
```

## request mpls lsp adjust-autobandwidth

---

|                                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|--------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>List of Syntax</b>                      | <a href="#">Syntax on page 1740</a><br><a href="#">Syntax (EX and QFX Series Switches) on page 1740</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Syntax</b>                              | <code>request mpls lsp adjust-autobandwidth</code><br><code>&lt;logical-system (all   <i>logical-system-name</i>)&gt;</code><br><code>&lt;name <i>lsp-name</i>&gt;</code>                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Syntax (EX and QFX Series Switches)</b> | <code>request mpls lsp adjust-autobandwidth</code><br><code>&lt;name <i>lsp-name</i>&gt;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Release Information</b>                 | Command introduced before Junos OS Release 7.4.<br>Command introduced in Junos OS Release 9.5 for EX Series switches.<br>Command introduced in Junos OS Release 13.2X51-D15 for the QFX Series.                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Description</b>                         | <p>Manually trigger a bandwidth allocation adjustment for active label-switched paths (LSPs).</p> <p>Without running this command, the bandwidth adjustment is recomputed at a configurable interval. The default interval is 5 minutes. If you do not want to wait for the periodic adjustment (for example, during a software demonstration), this command is useful.</p> <p>During bandwidth allocation adjustment, the LSP stays up to enable the bandwidth to be changed without dropping any traffic. This functionality is often referred to as <i>make-before-break</i>.</p> |
| <b>Options</b>                             | <p><b>none</b>—Manually trigger a bandwidth allocation adjustment for all active LSP paths.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p><b>name <i>lsp-name</i></b>—(Optional) Manually trigger a bandwidth allocation adjustment on the specified LSP only.</p>                                                                                                                                                                                              |
| <b>Additional Information</b>              | <p>For this command to work properly, the following conditions must exist:</p> <ul style="list-style-type: none"><li>• Automatic bandwidth allocation must be enabled on the LSP. The parameters for adjustment interval and maximum average bandwidth are not reset after you issue the <b>request mpls lsp adjust-autobandwidth</b> command.</li><li>• The difference between the adjusted bandwidth and the current LSP path bandwidth must be greater than the threshold limit.</li></ul>                                                                                        |
| <b>Required Privilege Level</b>            | clear, maintenance                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Related Documentation</b>               | <ul style="list-style-type: none"><li>• <a href="#">auto-bandwidth (MPLS Tunnel) on page 1403</a></li><li>• <a href="#">Configuring Automatic Bandwidth Allocation for LSPs on page 286</a></li></ul>                                                                                                                                                                                                                                                                                                                                                                                |

**List of Sample Output**   [request mpls lsp adjust-auto-bandwidth on page 1741](#)

**Output Fields**   When you enter this command, you are provided feedback on the status of your request.

## Sample Output

[request mpls lsp adjust-auto-bandwidth](#)

```
user@host> request mpls lsp adjust-auto-bandwidth
```

## show connections

---

**List of Syntax**    [Syntax on page 1742](#)  
                          [Syntax \(EX Series Switches\) on page 1742](#)

**Syntax**    show connections  
              <brief | extensive>  
              <all | interface-switch | lsp-switch | p2mp-receive-switch | p2mp-transmit-switch |  
              remote-interface-switch>  
              <down | up | up-down>  
              <history>  
              <labels>  
              <logical-system (all | *logical-system-name*)>  
              <*name*>  
              <status>

**Syntax (EX Series Switches)**    show connections  
                                          <brief | extensive>  
                                          <all | interface-switch | lsp-switch | p2mp-receive-switch | p2mp-transmit-switch |  
                                          remote-interface-switch>  
                                          <down | up | up-down>  
                                          <history>  
                                          <labels>  
                                          <*name*>  
                                          <status>

**Release Information**    Command introduced before Junos OS Release 7.4.  
                              Command introduced in Junos OS Release 9.5 for EX Series switches.

**Description**    Display information about the configured circuit cross-connect (CCC) connections.

**Options**    **none**—Display the standard level of output for all configured CCC connections.

**all**—(Optional) Display all connections.

**brief | extensive**—(Optional) Display the specified level of output. Use history to display information about connection history. Use labels to display labels used for transmit and receive LSPs. Use status to display information about the connection and interface status.

**interface-switch**—(Optional) Display interface switch connections only.

**lsp-switch**—(Optional) Display LSP switch connections only.

**p2mp-receive-switch**—(Optional) Display point-to-multipoint LSP to local interfaces switch connections only.

**p2mp-transmit-switch**—(Optional) Display local interface to point-to-multipoint LSP switch connections only.

**remote-interface-switch**—(Optional) Display remote interface switch connections only.

**down | up | up-down**—(Optional) Display nonoperational, operational, or both kinds of connections.

**history**—(Optional) Display information about connection history.

**labels**—(Optional) Display labels used for transmit and receive.

**logical-system (all | *logical-system-name*)**—(Optional) Perform this operation on all logical systems or on a particular logical system.

**name**—(Optional) Display information about the specified connection only.

**status**—(Optional) Display information about the connection and interface status.

**Required Privilege Level** view

**Output Fields** [Table 53 on page 1743](#) describes the output fields for the **show connections** command. Output fields are listed in the approximate order in which they appear.

**Table 53: show connections Output Fields**

| Field Name                                         | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                         |
|----------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| CCC and TCC connections [Link Monitoring On   Off] | Whether link monitoring is enabled: <b>On</b> or <b>Off</b> .                                                                                                                                                                                                                                                                                                                                                                             |
| Legend for Status (St)                             | Connection or circuit status. See the output's legend for an explanation of the status field values.                                                                                                                                                                                                                                                                                                                                      |
| Legend for connection types                        | Type of connection: <ul style="list-style-type: none"> <li><b>if-sw</b>—Layer 2 switching cross-connect.</li> <li><b>rmt-if</b>—Remote interface switch. While graceful restart is in progress, <b>rmt-if</b> will display a state (<b>St</b>) of <b>Restart</b>.</li> <li><b>lsp-sw</b>—LSP stitching cross-connect. While graceful restart is in progress, <b>lsp-sw</b> will display a state (<b>St</b>) of <b>Restart</b>.</li> </ul> |
| Legend for circuit types                           | Type of circuits: <ul style="list-style-type: none"> <li><b>intf</b>—Interface circuit.</li> <li><b>tlsp</b>—Transmit LSP circuit.</li> <li><b>rlsp</b>—Receive LSP circuit.</li> </ul>                                                                                                                                                                                                                                                   |
| Connection/Circuit                                 | Name of the configured CCC connection.                                                                                                                                                                                                                                                                                                                                                                                                    |
| Type                                               | Type of connection.                                                                                                                                                                                                                                                                                                                                                                                                                       |
| St                                                 | State of the connection.                                                                                                                                                                                                                                                                                                                                                                                                                  |
| Time last up                                       | Time that the connection or circuit last transitioned to the <b>Up</b> (operational) state.                                                                                                                                                                                                                                                                                                                                               |

Table 53: show connections Output Fields (*continued*)

| Field Name | Field Description                                                                              |
|------------|------------------------------------------------------------------------------------------------|
| # Up trans | Number of times that the connection or circuit has transitioned to the Up (operational) state. |

## Sample Output

### show connections

```

user@switch> show connections
CCC and TCC connections [Link Monitoring On]
  Legend for status (St)           Legend for connection types
  UN -- uninitialized             if-sw: interface switching
  NP -- not present               rmt-if: remote interface switching
  WE -- wrong encapsulation       lsp-sw: LSP switching
  DS -- disabled
  Dn -- down
  -> -- only outbound conn is up  intf -- interface
  <- -- only inbound conn is up   tlsp -- transmit LSP
  Up -- operational              rlsp -- receive LSP
  RmtDn -- remote CCC down
  Restart -- restarting

CCC Graceful restart : Restarting

Connection/Circuit      Type   St      Time last up    # Up trans
IFSW-ed                 if-sw  Up       Aug  5 15:39:15      1
  so-1/0/2.0             intf   Up
  t1-0/1/2.0             intf   Up
SW-db                   rmt-if Restart      0
  so-1/0/3.0             intf   Up
  pro4-ca                 tlsp   Dn
  pro4-ac                 rlsp   NP

```

## show link-management

|                                 |                                                                                                                                                                                                                                                                                                                              |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | show link-management                                                                                                                                                                                                                                                                                                         |
| <b>Release Information</b>      | Command introduced before Junos OS Release 7.4.<br>Command introduced in Junos OS Release 9.5 for EX Series switches.                                                                                                                                                                                                        |
| <b>Description</b>              | Display Multiprotocol Label Switching (MPLS) peer and traffic engineering link information.                                                                                                                                                                                                                                  |
| <b>Options</b>                  | This command has no options.                                                                                                                                                                                                                                                                                                 |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                         |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">show link-management peer on page 1749</a></li> <li>• <a href="#">show link-management routing on page 1751</a></li> <li>• <a href="#">show link-management statistics on page 1754</a></li> <li>• <a href="#">show link-management te-link on page 1756</a></li> </ul> |
| <b>List of Sample Output</b>    | <a href="#">show link-management on page 1748</a>                                                                                                                                                                                                                                                                            |
| <b>Output Fields</b>            | <a href="#">Table 54 on page 1745</a> describes the output fields for the <b>show link-management</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                       |

**Table 54: show link-management Output Fields**

| Field Name        | Field Description                                                                                                 |
|-------------------|-------------------------------------------------------------------------------------------------------------------|
| Peer Name         | Name of the peer.                                                                                                 |
| System identifier | Internal identifier for the peer. The range of values is 0 through 64,000.                                        |
| State             | State of the peer: <b>Up</b> or <b>Down</b> .                                                                     |
| Control address   | Address to which a control channel is established.                                                                |
| CC local ID       | Identifier assigned to the control channel by the local peer. The range of values is 1 through 4,294,967,296.     |
| CC remote ID      | Identifier assigned to the control channel by the remote peer. The range of values is 1 through 4,294,967,296.    |
| State             | State of the control channel: <b>Up</b> or <b>Down</b> .                                                          |
| TxSeqNum          | Sequence number of the hello message being sent to the peer. The range of values is 1 through 4,294,967,295.      |
| RcvSeqNum         | Sequence number of the last hello message received from the peer. The range of values is 0 through 4,294,967,295. |

Table 54: show link-management Output Fields (*continued*)

| Field Name                 | Field Description                                                                                                                                                                                                                                                           |
|----------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Flags</b>               | Code that provides information about the control channel. Currently supports only code value <b>R</b> , which indicates that the control channel is restarting after a failure in the control plane, as when the Link Management Protocol (LMP) process starts or restarts. |
| <b>TE links</b>            | Traffic-engineered links that are managed by their peer.                                                                                                                                                                                                                    |
| <b>TE link name</b>        | Name of the traffic-engineered link.                                                                                                                                                                                                                                        |
| <b>State</b>               | State of the traffic-engineered link: <b>Up</b> , <b>Down</b> , or <b>Init</b> .                                                                                                                                                                                            |
| <b>Local identifier</b>    | Identifier of the local side of the link.                                                                                                                                                                                                                                   |
| <b>Remote identifier</b>   | Identifier of the remote side of the link.                                                                                                                                                                                                                                  |
| <b>Local address</b>       | Address of the local side of the link.                                                                                                                                                                                                                                      |
| <b>Remote address</b>      | Address of the remote side of the link.                                                                                                                                                                                                                                     |
| <b>Encoding</b>            | Physical layer media type determined by the interfaces contained in the traffic-engineered link. Typical values include <b>SDH/SONET</b> , <b>Ethernet</b> , <b>Packet</b> , and <b>PDH</b> .                                                                               |
| <b>Switching</b>           | Type of switching that can be performed on the traffic-engineered link. Supported values are <b>PSC-1</b> and <b>Packet</b> .                                                                                                                                               |
| <b>Minimum bandwidth</b>   | Smallest single allocation of bandwidth possible on the traffic-engineered link. This number is equal to the smallest bandwidth interface that is a member of the traffic-engineered link (in bps).                                                                         |
| <b>Maximum bandwidth</b>   | Largest single allocation of bandwidth possible on the traffic-engineered link. This number is equal to the largest bandwidth interface that is a member of the link (in bps).                                                                                              |
| <b>Total bandwidth</b>     | Sum of the bandwidth, in bits per second (bps) and megabits per second (Mbps), of all interfaces that are members of the link.                                                                                                                                              |
| <b>Available bandwidth</b> | Sum of the bandwidths of all interfaces that are members of the link and that are not yet allocated (in bps).                                                                                                                                                               |
| <b>Name</b>                | Name of the interface.                                                                                                                                                                                                                                                      |
| <b>State</b>               | State of the interface: <b>Up</b> or <b>Down</b> .                                                                                                                                                                                                                          |
| <b>Local ID</b>            | Identifier of the local side of the interface.                                                                                                                                                                                                                              |
| <b>Remote ID</b>           | Identifier of the remote side of the interface.                                                                                                                                                                                                                             |
| <b>Bandwidth</b>           | Bandwidth, in bps or Mbps, of the member interface.                                                                                                                                                                                                                         |
| <b>Used</b>                | Whether the resource is allocated to an LSP: <b>Yes</b> or <b>No</b> .                                                                                                                                                                                                      |



Table 54: show link-management Output Fields (*continued*)

| Field Name | Field Description |
|------------|-------------------|
| LSP-name   | LSP name.         |

## Sample Output

### show link-management

```
user@host> show link-management
Peer name: PEER-A, System identifier: 11973
State: Up, Control address: 10.255.245.4
  CC local ID CC remote ID State      TxSeqNum  RcvSeqNum  Flags
    24547      24547 Up          1027      1026
TE links:
  pro4-ba

TE link name: pro4-ba, State: Init
Local identifier: 2662, Remote identifier: 0, Encoding: SDH/SONET, Switching:
PSC-1,
Minimum bandwidth: 155.52Mbps, Maximum bandwidth: 155.52Mbps, Total bandwidth:
155.52Mbps,
Available bandwidth: 155.52Mbps
  Name          State Local ID Remote ID    Bandwidth Used  LSP-name
  so-1/0/2      Up      21271      0      155.52Mbps    No
```

## show link-management peer

|                                 |                                                                                                                                                                                                                                                                                                                         |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>show link-management peer</code><br><code>&lt;name <i>peer-name</i>&gt;</code>                                                                                                                                                                                                                                    |
| <b>Release Information</b>      | Command introduced before Junos OS Release 7.4.<br>Command introduced in Junos OS Release 9.5 for EX Series switches.                                                                                                                                                                                                   |
| <b>Description</b>              | Display Multiprotocol Label Switching (MPLS) peer link information.                                                                                                                                                                                                                                                     |
| <b>Options</b>                  | <b>none</b> —Display all peer link information.<br><br><b>name <i>peer-name</i></b> —(Optional) Display information for the specified peer only.                                                                                                                                                                        |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                    |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">show link-management on page 1745</a></li> <li>• <a href="#">show link-management routing on page 1751</a></li> <li>• <a href="#">show link-management statistics on page 1754</a></li> <li>• <a href="#">show link-management te-link on page 1756</a></li> </ul> |
| <b>List of Sample Output</b>    | <a href="#">show link-management peer on page 1750</a>                                                                                                                                                                                                                                                                  |
| <b>Output Fields</b>            | <a href="#">Table 55 on page 1749</a> describes the output fields for the <b>show link-management peer</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                             |

**Table 55: show link-management peer Output Fields**

| Field Name          | Field Description                                                                                                                                                                                          |
|---------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Peer Name           | Name of the peer.                                                                                                                                                                                          |
| System identifier   | Internal identifier for the peer. The range of values is 0 through 64,000.                                                                                                                                 |
| State               | State of the peer: <b>Up</b> or <b>Down</b> .                                                                                                                                                              |
| Control address     | Address to which a control channel is established.                                                                                                                                                         |
| Hello interval      | How often the routing device sends Link Management Protocol (LMP) hello packets.                                                                                                                           |
| Hello dead interval | How long LMP waits before declaring the control channel to be dead. This is an interval during which the routing device receives no LMP hello packets from the neighbor on a control that is active or up. |
| CC local ID         | Identifier assigned to the control channel by the local peer. The range of values is 1 through 4,294,967,296.                                                                                              |
| CC remote ID        | Identifier assigned to the control channel by the remote peer. The range of values is 1 through 4,294,967,296.                                                                                             |

Table 55: show link-management peer Output Fields (*continued*)

| Field Name       | Field Description                                                                                                                                                                                                                                                           |
|------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>State</b>     | State of the control channel: <b>Up</b> or <b>Down</b> .                                                                                                                                                                                                                    |
| <b>TxSeqNum</b>  | Sequence number of the hello message being sent to the peer. The range of values is <b>1</b> through <b>4,294,967,295</b> .                                                                                                                                                 |
| <b>RcvSeqNum</b> | Sequence number of the last hello message received from the peer. The range of values is <b>0</b> through <b>4,294,967,295</b> .                                                                                                                                            |
| <b>Flags</b>     | Code that provides information about the control channel. Currently supports only code value <b>R</b> , which indicates that the control channel is restarting after a failure in the control plane, as when the Link Management Protocol (LMP) process starts or restarts. |
| <b>TE links</b>  | Traffic-engineered links that are managed by their peer.                                                                                                                                                                                                                    |

## Sample Output

### show link-management peer

```

user@host> show link-management peer
Peer name: sonet, System identifier: 41448
State: Up, Control address: 70.70.70.70
Hello interval: 10000, Hello dead interval: 30000
  CC local ID CC remote ID State      TxSeqNum  RcvSeqNum  Flags
    3265           0 ConfSnd         1          0 R
TE links:
to-sonet

```

## show link-management routing

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | show link-management routing<br><peer <name <i>name</i> >   te-link <name <i>name</i> >><br><resource <name <i>name</i> >>                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Release Information</b>      | Command introduced before Junos OS Release 7.4.<br>Command introduced in Junos OS Release 9.5 for EX Series switches.                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Description</b>              | Display Multiprotocol Label Switching (MPLS) peer or traffic engineering link information from the routing process.                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Options</b>                  | <p><b>none</b>—Display all peer and traffic-engineered link information.</p> <p><b>peer &lt;name <i>name</i>&gt;</b>—(Optional) Display information for all peers or for the specified peer only.</p> <p><b>resource &lt;name <i>name</i>&gt;</b>—(Optional) Display information for all resources or for the specified resource only.</p> <p><b>te-link &lt;name <i>name</i>&gt;</b>—(Optional) Display information for all traffic-engineered forwarding paths or for the specified path only.</p> |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">show link-management on page 1745</a></li> <li>• <a href="#">show link-management peer on page 1749</a></li> <li>• <a href="#">show link-management statistics on page 1754</a></li> <li>• <a href="#">show link-management te-link on page 1756</a></li> </ul>                                                                                                                                                                                 |
| <b>List of Sample Output</b>    | <a href="#">show link-management routing on page 1753</a>                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Output Fields</b>            | Table 56 on page 1751 describes the output fields for the <b>show link-management routing</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                                                                                                                                                                                                       |

**Table 56: show link-management routing Output Fields**

| Field Name        | Field Description                                                          |
|-------------------|----------------------------------------------------------------------------|
| Peer Name         | Name of the peer.                                                          |
| System identifier | Internal identifier for the peer. The range of values is 0 through 64,000. |
| State             | State of the peer: Up or Down.                                             |
| Control address   | Address to which a control channel is established.                         |
| Control channel   | Interface over which control packets are sent.                             |

Table 56: show link-management routing Output Fields (*continued*)

| Field Name                 | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>State</b>               | State of the control channel.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>TE link name</b>        | Traffic-engineered link name.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>State</b>               | State of the traffic-engineered link: <b>Up</b> or <b>Down</b> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Local identifier</b>    | Identifier of the local side of the link.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Remote identifier</b>   | Identifier of the remote side of the link.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Local address</b>       | Address of the local side of the link.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Remote address</b>      | Address of the remote side of the link.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Encoding</b>            | Physical layer media type determined by the interfaces contained in the traffic-engineered link. Typical values include <b>SDH/SONET</b> , <b>Ethernet</b> , and <b>Packet</b> .                                                                                                                                                                                                                                                                                                                                                   |
| <b>Minimum bandwidth</b>   | Smallest single allocation of bandwidth, in bits per second (bps) or megabits per second (Mbps), possible on the traffic-engineered link. This number is equal to the smallest bandwidth interface that is a member of the traffic-engineered link.                                                                                                                                                                                                                                                                                |
| <b>Maximum bandwidth</b>   | Largest single allocation of bandwidth, in bps or Mbps, possible on the traffic-engineered link. This number is equal to the largest bandwidth interface that is a member of the link (in bps).                                                                                                                                                                                                                                                                                                                                    |
| <b>Total bandwidth</b>     | Sum of the bandwidth, in bps or Mbps, of all interfaces that are members of the link.                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Available bandwidth</b> | Sum of the bandwidth, in bps or Mbps, of all interfaces that are members of the link and that are not yet allocated.                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Resource</b>            | Forwarding adjacency LSP information.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Type</b>                | Type of resource. The type is always a forwarding adjacency LSP.                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>State</b>               | State of the LSP: <b>Up</b> or <b>Down</b> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>System Identifier</b>   | Internal identifier for the peer. The range of values is <b>0</b> through <b>64,000</b> .                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Total bandwidth</b>     | Bandwidth resource, in bps or Mbps, on the TE-link learned from the routing process.                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Traffic parameters</b>  | <ul style="list-style-type: none"> <li>• <b>Encoding</b>—Physical layer media type determined by the interfaces contained in the traffic-engineered link. Typical values include <b>SDH/SONET</b>, <b>Ethernet</b>, and <b>Packet</b>.</li> <li>• <b>Switching</b>—Type of switching that can be performed on the traffic-engineered link: <b>PSC-1</b> and <b>Packet</b>.</li> <li>• <b>Granularity</b>—Layer 2 data for switching Layer 2 LSPs for this resource. Not supported. This value is always <b>unknown</b>.</li> </ul> |

## Sample Output

### show link-management routing

```

user@host> show link-management routing
Peer name: __rpd:fe-0/1/0.0, System identifier: 2147483649
State: Up, Control address: (null)
Control-channel          State
fe-0/1/0.0               Active

Peer name: __rpd:fe-0/1/2.0, System identifier: 2147483650
State: Up, Control address: (null)
Control-channel          State
fe-0/1/2.0               Active

Peer name: __rpd:so-0/2/0.0, System identifier: 2147483651
State: Down, Control address: (null)
Control-channel          State
so-0/2/0.0               State

Peer name: __rpd:so-0/2/1.0, System identifier: 2147483652
State: Down, Control address: (null)
Control-channel          State
so-0/2/1.0               State

...

TE link name: __rpd:fe-0/1/0.0, State: Up
Local identifier: 2147483649, Remote identifier: 0,
Local address: 192.168.37.66, Remote address: 192.168.37.66,
Encoding: Ethernet, Minimum bandwidth: 0bps, Maximum bandwidth: 100Mbps,
Total bandwidth: 100Mbps, Available bandwidth: 100Mbps

TE link name: __rpd:fe-0/1/2.0, State: Up
Local identifier: 2147483650, Remote identifier: 0,
Local address: 192.168.37.73, Remote address: 192.168.37.73,
Encoding: Ethernet, Minimum bandwidth: 0bps, Maximum bandwidth: 100Mbps,
Total bandwidth: 100Mbps, Available bandwidth: 100Mbps

TE link name: __rpd:so-0/2/0.0, State: Down
Local identifier: 2147483651, Remote identifier: 0,
Local address: 192.168.37.82, Remote address: 192.168.37.95,
Encoding: Ethernet, Minimum bandwidth: 0bps, Maximum bandwidth: 155.52Mbps,
Total bandwidth: 155.52Mbps, Available bandwidth: 155.52Mbps

...

Resource: falsp-bd, Type: LSP, State: Dn System identifier: 2147483652,
Total bandwidth: 0bps, Traffic parameters: Encoding: Packet, Switching: Packet,
Granularity: Unknown

Resource: falsp-be, Type: LSP, State: Up System identifier: 2147483654,
Total bandwidth: bw[1]=10Mbps, Traffic parameters: Encoding: Packet,
Switching: Packet, Granularity: Unknown

```

## show link-management statistics

|                                 |                                                                                                                                                                                                                                                                                                                   |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | show link-management statistics<br><peer <name <i>name</i> >>                                                                                                                                                                                                                                                     |
| <b>Release Information</b>      | Command introduced in Junos OS Release 8.0.<br>Command introduced in Junos OS Release 9.5 for EX Series switches.                                                                                                                                                                                                 |
| <b>Description</b>              | Display statistical information for Link Management Protocol (LMP) packets.                                                                                                                                                                                                                                       |
| <b>Options</b>                  | <b>none</b> —Display information for all peers.<br><br><b>peer &lt;name <i>name</i>&gt;</b> —(Optional) Display information for all peers or for the specified peer only.                                                                                                                                         |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                              |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">show link-management on page 1745</a></li> <li>• <a href="#">show link-management peer on page 1749</a></li> <li>• <a href="#">show link-management routing on page 1751</a></li> <li>• <a href="#">show link-management te-link on page 1756</a></li> </ul> |
| <b>List of Sample Output</b>    | <a href="#">show link-management statistics on page 1755</a>                                                                                                                                                                                                                                                      |
| <b>Output Fields</b>            | <a href="#">Table 57 on page 1754</a> describes the output fields for the <b>show link-management statistics</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                 |

**Table 57: show link-management statistics Output Fields**

| Field Name                | Field Description                                                                                                                                                                                     |
|---------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Received packets          | Number of received packets by message type. If the count for a message type is zero, that message type is not displayed. If the count for all message types is zero, this field is not displayed.     |
| Received bad packets      | Number of received bad packets by message type. If the count for a message type is zero, that message type is not displayed. If the count for all message types is zero, this field is not displayed. |
| Small packets             | Number of packets that are too small.                                                                                                                                                                 |
| Wrong protocol version    | Number of packets specifying the wrong LMP version.                                                                                                                                                   |
| Messages for unknown peer | Number of packets destined for an unknown peer.                                                                                                                                                       |
| Messages for bad state    | Number of packets indicating a state that does not match the recipient.                                                                                                                               |
| Stale acknowledgments     | Number of <b>configAck</b> and <b>LinkSummaryAck</b> packets received that have a stale message ID.                                                                                                   |



Table 57: show link-management statistics Output Fields (*continued*)

| Field Name                            | Field Description                                                                                                                                                                                                                                                                              |
|---------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Stale negative acknowledgments</b> | Number of <b>configNack</b> and <b>LinkSummaryNack</b> packets received that have a stale message ID.                                                                                                                                                                                          |
| <b>Sent packets</b>                   | Number of sent packets by message type. If the count for a message type is zero, that message type is not displayed. If the count for all message types is zero, this field is not displayed.                                                                                                  |
| <b>Retransmitted packets</b>          | Number of retransmitted packets by message type. If the count for a message type is zero, that message type is not displayed. If the count for all message types is zero, this field is not displayed.                                                                                         |
| <b>Dropped packets</b>                | Number of packets sent, by message type, that have been dropped by the receiver after the LMP retransmission interval has been exceeded. If the count for a message type is zero, that message type is not displayed. If the count for all message types is zero, this field is not displayed. |

## Sample Output

### show link-management statistics

```

user@host> show link-management statistics peer pro4-a
Statistics for peer pro4-a
  Received packets
    Config: 1
    Hello: 2572
  Small packets: 0
  Wrong protocol version: 0
  Messages for unknown peer: 0
  Messages for bad state: 0
  Stale acknowledgments: 0
  Stale negative acknowledgments: 0
  Sent packets
    Config: 2
    ConfigAck: 1
    Hello: 2572
  Retransmitted packets
    Config: 1

```

## show link-management te-link

|                                 |                                                                                                                                                                                                                                                                                                                      |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | show link-management te-link<br><brief   detail><br><name <i>name</i> >                                                                                                                                                                                                                                              |
| <b>Release Information</b>      | Command introduced before Junos OS Release 7.4.<br>Command introduced in Junos OS Release 9.5 for EX Series switches.                                                                                                                                                                                                |
| <b>Description</b>              | Display the resources used to set up Multiprotocol Label Switching (MPLS) traffic-engineered forwarding paths.                                                                                                                                                                                                       |
| <b>Options</b>                  | <b>none</b> —Display information for all traffic-engineered links.<br><br><b>brief   detail</b> —(Optional) Display the specified level of output.<br><br><b>name <i>name</i></b> —(Optional) Display information for the specified traffic-engineered link only.                                                    |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                 |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">show link-management on page 1745</a></li> <li>• <a href="#">show link-management peer on page 1749</a></li> <li>• <a href="#">show link-management routing on page 1751</a></li> <li>• <a href="#">show link-management statistics on page 1754</a></li> </ul> |
| <b>List of Sample Output</b>    | <a href="#">show link-management te-link on page 1757</a>                                                                                                                                                                                                                                                            |
| <b>Output Fields</b>            | <a href="#">Table 58 on page 1756</a> describes the output fields for the <b>show link-management te-link</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                       |

**Table 58: show link-management te-link Output Fields**

| Field Name        | Field Description                                                                                                                                                                             |
|-------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| TE link name      | Traffic-engineered link name.                                                                                                                                                                 |
| State             | State of the traffic-engineered link: <b>Up</b> or <b>Down</b> .                                                                                                                              |
| Local identifier  | Identifier of the local side of the link.                                                                                                                                                     |
| Remote identifier | Identifier of the remote side of the link.                                                                                                                                                    |
| Local address     | Address of the local side of the link.                                                                                                                                                        |
| Remote address    | Address of the remote side of the link.                                                                                                                                                       |
| Encoding          | Physical layer media type determined by the interfaces contained in the traffic-engineered link. Typical values include <b>SDH/SONET</b> , <b>Ethernet</b> , <b>Packet</b> , and <b>PDH</b> . |

Table 58: show link-management te-link Output Fields (*continued*)

| Field Name                 | Field Description                                                                                                                                                                                                                                   |
|----------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Switching</b>           | Type of switching that can be performed on the traffic-engineered link. Supported values are <b>PSC-1</b> and <b>Packet</b> .                                                                                                                       |
| <b>Minimum bandwidth</b>   | Smallest single allocation of bandwidth, in bits per second (bps) or megabits per second (Mbps), possible on the traffic-engineered link. This number is equal to the smallest bandwidth interface that is a member of the traffic-engineered link. |
| <b>Maximum bandwidth</b>   | Largest single allocation of bandwidth, in bps or Mbps, possible on the traffic-engineered link. This number is equal to the largest bandwidth interface that is a member of the link.                                                              |
| <b>Total bandwidth</b>     | Sum of the bandwidth, in bps or Mbps, of all interfaces that are members of the link (in bps).                                                                                                                                                      |
| <b>Available Bandwidth</b> | Sum of the bandwidth, in bps or Mbps, of all interfaces that are members of the link and that are not yet allocated.                                                                                                                                |
| <b>Name</b>                | Name of the interface.                                                                                                                                                                                                                              |
| <b>State</b>               | State of the interface: <b>Up</b> or <b>Down</b> .                                                                                                                                                                                                  |
| <b>Local ID</b>            | Identifier of the local side of the interface.                                                                                                                                                                                                      |
| <b>Remote ID</b>           | Identifier of the remote side of the interface.                                                                                                                                                                                                     |
| <b>Bandwidth</b>           | Bandwidth, in bps or Mbps, of the member interface.                                                                                                                                                                                                 |
| <b>Used</b>                | Whether the resource is allocated to an LSP: <b>Yes</b> or <b>No</b> .                                                                                                                                                                              |
| <b>LSP-name</b>            | LSP name.                                                                                                                                                                                                                                           |

## Sample Output

### show link-management te-link

```

user@host> show link-management te-link
TE link name: FA-bd, State: Up
  Local identifier: 4144, Remote identifier: 0, Local address: 2.2.2.1,
  Remote address: 2.2.2.2, Encoding: Ethernet, Switching: Packet,
  Minimum bandwidth: 0bps, Maximum bandwidth: 0bps, Total bandwidth: 0bps,
  Available bandwidth: 0bps
    Name      State Local ID Remote ID      Bandwidth Used  LSP-name
    falsp-bd   Dn      43077      0           0bps No
TE link name: FA-be, State: Up
  Local identifier: 4145, Remote identifier: 0, Local address: 1.1.1.1,
  Remote address: 1.1.1.2, Encoding: Ethernet, Switching: Packet,
  Minimum bandwidth: 0bps, Maximum bandwidth: 10Mbps, Total bandwidth: 10Mbps,
  Available bandwidth: 8Mbps
    Name      State Local ID Remote ID      Bandwidth Used  LSP-name
    falsp-be   Up      43076      0          10Mbps Yes  e2elasp-bf

```

## show mpls admin-groups

|                                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>List of Syntax</b>              | <a href="#">Syntax on page 1758</a><br><a href="#">Syntax (EX Series Switches) on page 1758</a>                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Syntax</b>                      | show mpls admin-groups<br><instance <i>instance-name</i> ><br><logical-system (all   <i>logical-system-name</i> )>                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Syntax (EX Series Switches)</b> | show mpls admin-groups                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Release Information</b>         | Command introduced before Junos OS Release 7.4.<br>Command introduced in Junos OS Release 9.5 for EX Series switches.<br><b>instance <i>instance-name</i></b> option added in Junos OS Release 15.1.                                                                                                                                                                                                                                                                                                    |
| <b>Description</b>                 | Display information about configured Multiprotocol Label Switching (MPLS) administrative groups.                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Options</b>                     | <b>none</b> —Display information about the configured MPLS administrative groups.<br><br><b>instance <i>instance-name</i></b> —(Optional) Display MPLS administrative group information for the specified instance. If <b><i>instance-name</i></b> is omitted, MPLS administrative group information for the master instance is displayed.<br><br><b>logical-system (all   <i>logical-system-name</i>)</b> —(Optional) Perform this operation on all logical systems or on a particular logical system. |
| <b>Required Privilege Level</b>    | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>List of Sample Output</b>       | <a href="#">show mpls admin-groups on page 1758</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Output Fields</b>               | <a href="#">Table 59 on page 1758</a> describes the output fields for the <b>show mpls admin-groups</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                                                                                                                                                                                                |

**Table 59: show mpls admin-groups Output Fields**

| Field Name       | Field Description                           |
|------------------|---------------------------------------------|
| <b>Group</b>     | Name of the administrative group.           |
| <b>Bit index</b> | Value assigned to the administrative group. |

## Sample Output

### show mpls admin-groups

```

user@host> show mpls admin-groups
Group      Bit index
black      3
blue       2

```

|       |   |
|-------|---|
| gold  | 1 |
| green | 0 |

## show mpls association

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>show mpls association (iif <i>incoming-interface</i>   oif <i>outgoing-interface</i>)<br/>&lt;logical-system (all   <i>logical-system-name</i>)&gt;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Release Information</b>      | Command introduced in Junos OS Release 16.1 for the M Series, MX Series, and T Series.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Description</b>              | Display the Multiprotocol Label Switching (MPLS) label-switched paths (LSPs) based on the association with an incoming or outgoing LSP interface. The command output displays the list of RSVP-TE LSPs carrying traffic in and out of the same interface.                                                                                                                                                                                                                                                                                                                                                        |
| <b>Options</b>                  | <p><b>iif <i>incoming-interface-name</i></b>—Display list of RSVP-TE LSPs that share the specified incoming interface to bring in traffic. This option works on transit label-switching routers (LSRs) and egress label edge routers (LERs).</p> <p><b>oif <i>outgoing-interface-name</i></b>—Display list of RSVP-TE LSPs that share the specified outgoing interface to carry out traffic. This option works on ingress LERs and transit LSRs.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li><a href="#">show mpls correlation nexthop-id on page 1775</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>List of Sample Output</b>    | <a href="#">show mpls association iif on page 1761</a><br><a href="#">show mpls association oif on page 1761</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Output Fields</b>            | <a href="#">Table 60 on page 1760</a> describes the output fields for the <b>show mpls association</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                                                                                                                                                                                                                                                                                                          |

**Table 60: show mpls association Output Fields**

| Field Name | Field Description                                                                                              |
|------------|----------------------------------------------------------------------------------------------------------------|
| To         | Destination IP address of the corresponding LSP.                                                               |
| From       | Source IP address of the corresponding LSP.                                                                    |
| State      | State of the corresponding LSP handled by this RSVP session: <b>Up</b> , <b>Dn</b> (down), or <b>Restart</b> . |
| LSPname    | Name of the LSP.                                                                                               |

## Sample Output

### show mpls association iif

```
user@host> show mpls association iif ge-0/0/0.0
To           From           State    LSPname
128.102.174.121 128.102.180.21 Up       LSP-ABC
128.102.174.121 128.102.180.21 Up       LSP-ABC1
128.102.174.121 128.102.180.21 Up       LSP-ABC2
128.102.174.121 128.102.180.21 Up       LSP-ABC3
Total 4 displayed, Up 4, Down 0
```

### show mpls association oif

```
user@host> show mpls association oif ge-0/0/0.0
To           From           State    LSPname
128.102.174.121 128.102.180.21 Up       LSP-ABC
128.102.174.121 128.102.180.21 Up       LSP-ABC1
128.102.174.121 128.102.180.21 Up       LSP-ABC2
128.102.174.121 128.102.180.21 Up       LSP-ABC3
```

## show mpls call-admission-control

|                                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>List of Syntax</b>              | <a href="#">Syntax on page 1762</a><br><a href="#">Syntax (EX Series Switches) on page 1762</a>                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Syntax</b>                      | <pre>show mpls call-admission-control &lt;instance <i>instance-name</i>&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt; &lt;lsp-name&gt;</pre>                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Syntax (EX Series Switches)</b> | <pre>show mpls call-admission-control &lt;lsp-name&gt;</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Release Information</b>         | <p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.5 for EX Series switches.</p> <p><b>instance <i>instance-name</i></b> option added in Junos OS Release 15.1.</p>                                                                                                                                                                                                                                                                                                               |
| <b>Description</b>                 | Display Multiprotocol Label Switching (MPLS) label-switched path (LSP) call admission control (CAC) information.                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Options</b>                     | <p><b>none</b>—Display CAC information for all LSPs.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Display MPLS LSP CAC information for the specified instance. If <b>instance-name</b> is omitted, MPLS LSP CAC information for the master instance is displayed.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p><b>lsp-name</b>—(Optional) Display CAC information for the specified LSP only.</p> |
| <b>Additional Information</b>      | The available bandwidth on an LSP path at a particular class type is the total path bandwidth at that class type minus the total bandwidth reserved by any Layer 2 connection at that class type.                                                                                                                                                                                                                                                                                                                                 |
| <b>Required Privilege Level</b>    | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>List of Sample Output</b>       | <a href="#">show mpls call-admission-control on page 1763</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Output Fields</b>               | <a href="#">Table 61 on page 1762</a> describes the output fields for the <b>show mpls call-admission-control</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                                                                                                                                                                                                                |

**Table 61: show mpls call-admission-control Output Fields**

| Field Name          | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                         |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Available bandwidth | Current available bandwidth on each LSP path. Depending on whether the LSP is an E-LSP or a regular LSP, either per-class bandwidth or a single bandwidth value (corresponding to best-effort bandwidth at <b>ct0</b> ) is displayed. The available bandwidth on an LSP path at a particular class type is the total path bandwidth at that class type minus the total bandwidth reserved by some Layer 2 connections at that class type. |



Table 61: show mpls call-admission-control Output Fields (*continued*)

| Field Name         | Field Description                                                                                     |
|--------------------|-------------------------------------------------------------------------------------------------------|
| Layer2 connections | Different Layer 2 connections that had some bandwidth requirement and were admitted into an LSP path. |
| LSP name           | LSP pathname.                                                                                         |
| Neighbor address   | Neighbor address from which CAC and bandwidth booking are configured for Layer 2 circuits.            |
| Circuit            | Interface name and circuit information.                                                               |
| Primary            | LSP's primary standby path.                                                                           |
| Standby            | LSP's secondary standby path.                                                                         |
| VC bandwidth       | Bandwidth constraints associated with a Layer 2 circuit route.                                        |

## Sample Output

### show mpls call-admission-control

```

user@host# show mpls call-admission-control

LSP name: pro1-be
*Primary
  Available bandwidth: 0bps

LSP name: pro1-be-1
*Primary
  Available bandwidth: 60kbps

LSP name: pro1-be-gold
*Primary
  Available bandwidth: <ct0 50kbps> <ct1 20kbps> <ct2 30kbps> <ct3 0bps>
  Layer2 connections:
    Neighbor address: 10.255.245.215, Circuit: so-0/3/0.0(vc 5)
    VC bandwidth: <ct0 50kbps> <ct1 40kbps> <ct2 40kbps>

LSP name: pro1-be-gold-2
*Primary
  Available bandwidth: <ct0 0bps> <ct1 40kbps> <ct2 40kbps> <ct3 0bps>

LSP name: pro1-be-silver
*Primary  prim1
  Available bandwidth: <ct0 10kbps> <ct1 20kbps> <ct2 0bps> <ct3 40kbps>
  Layer2 connections:
    Neighbor address: 10.255.245.215, Circuit: so-0/3/0.1(vc 3)
    VC bandwidth: <ct0 20kbps> <ct1 20kbps>
  Standby  sec1
  Available bandwidth: <ct0 10kbps> <ct1 10kbps> <ct2 20kbps> <ct3 0bps>
  Layer2 connections:
    Neighbor address: 10.255.245.215, Circuit: so-0/3/0.1(vc 3)
    VC bandwidth: <ct0 20kbps> <ct1 20kbps>

```

## show mpls container-lsp

---

**Syntax**    `show mpls container-lsp`  
              `<brief | detail | extensive | terse>`  
              `<count-active-routes>`  
              `<defaults>`  
              `<descriptions>`  
              `<down | up>`  
              `<egress>`  
              `<ingress>`  
              `<logical-system (all | logical-system-name)>`  
              `<name name>`  
              `<statistics>`  
              `<transit>`  
              `<unidirectional>`

**Release Information**    Command introduced in Junos OS Release 14.2.  
                              Statement introduced for QFX Switches in Junos OS Release 15.1X53-D30.

**Description**    Display information about configured and active Multiprotocol Label Switching (MPLS) container label-switched paths (LSPs).

**Options**    **none**—Display standard information about all configured and active member LSPs of the container LSP.

**brief | detail | extensive | terse**—(Optional) Display the specified level of output. The extensive option displays the same information as the detail option, but covers the most recent 50 events.

**count-active-routes**—(Optional) Show active routes for the container LSP.

**defaults**—(Optional) Display the default settings of the container LSP.

**descriptions**—(Optional) Display the container LSP descriptions. To view this information, you must configure the description statement at the [**edit protocol mpls container-lsp**] hierarchy level. Only the LSPs with a description are displayed. This command is only valid for the ingress routing device, because the description is not propagated in RSVP messages.

**down | up**—(Optional) Display only LSPs that are inactive or active, respectively.

**egress | ingress**—(Optional) Display the member LSPs ending at this routing device or originating from this routing device, respectively.

**logical-system (all | *logical-system-name*)**—(Optional) Perform this operation on all logical systems or on a particular logical system.

**name *name***—(Optional) Display information about the specified LSP or group of LSPs.

**statistics**—(Optional) Display accounting information about LSPs. Statistics are not available for LSPs on the egress routing device, because the penultimate routing device in the LSP sets the label to 0. Also, as the packet arrives at the egress routing

device, the hardware removes its MPLS header and the packet reverts to being an IPv4 packet. Therefore, it is counted as an IPv4 packet, not an MPLS packet.

**transit**—(Optional) Display LSPs transiting this routing device.

**unidirectional**—(Optional) Display unidirectional LSP information.

**Required Privilege Level** view

**Related Documentation**

- [request mpls container-lsp on page 1739](#)
- [clear mpls container-lsp on page 1719](#)

**List of Sample Output** [show mpls container-lsp on page 1769](#)  
[show mpls container-lsp extensive on page 1769](#)

**Output Fields** [Table 62 on page 1765](#) describes the output fields for the **show mpls container-lsp** command. Output fields are listed in the approximate order in which they appear.

**Table 62: show mpls container-lsp Output Fields**

| Field Name                | Field Description                                                                                                                                                                                                                               | Level of Output  |
|---------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------|
| <b>Ingress LSP</b>        | Information about the member LSPs on the ingress routing device. Each LSP has one line of output.                                                                                                                                               | All levels       |
| <b>Container LSP name</b> | Name of the container LSP.                                                                                                                                                                                                                      | All levels       |
| <b>Member LSP count</b>   | Number of member LSPs in the container LSP.                                                                                                                                                                                                     | All levels       |
| <b>To</b>                 | Destination (egress routing device) of the session.                                                                                                                                                                                             | brief            |
| <b>From</b>               | Source (ingress routing device) of the session.                                                                                                                                                                                                 | brief detail     |
| <b>State</b>              | State of the LSP handled by this RSVP session: <ul style="list-style-type: none"> <li>• Up</li> <li>• Dn (down)</li> <li>• Restart</li> </ul>                                                                                                   | brief detail     |
| <b>Rt</b>                 | Number of active routes (prefixes) installed in the routing table. For ingress RSVP sessions, the routing table is the primary IPv4 table (inet.0). For transit and egress RSVP sessions, the routing table is the primary MPLS table (mpls.0). | brief            |
| <b>P</b>                  | Path. An asterisk (*) underneath this column indicates that the LSP is a primary path.                                                                                                                                                          | brief            |
| <b>ActivePath</b>         | (Ingress LSP) Name of the active path: Primary or Secondary.                                                                                                                                                                                    | detail extensive |
| <b>LSPname</b>            | Name of the member LSP.                                                                                                                                                                                                                         | brief detail     |

Table 62: show mpls container-lsp Output Fields (*continued*)

| Field Name                 | Field Description                                                                                                                                                                                                                                                                                                                                                                                               | Level of Output |
|----------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| <b>Egress LSP</b>          | Information about the LSPs on the egress routing device. MPLS learns this information by querying RSVP, which holds all the transit and egress session information. Each session has one line of output.                                                                                                                                                                                                        | All levels      |
| <b>Transit LSP</b>         | Number of LSPs on the transit routing devices and the state of these paths. MPLS learns this information by querying RSVP, which holds all the transit and egress session information.                                                                                                                                                                                                                          | All levels      |
| <b>Min LSPs</b>            | Minimum number of member LSPs.<br><br>Default: 1                                                                                                                                                                                                                                                                                                                                                                | extensive       |
| <b>Max LSPs</b>            | Number of member LSPs that the container LSP can have at maximum.<br><br>Default: 64 (due to ECMP limit)                                                                                                                                                                                                                                                                                                        | extensive       |
| <b>Aggregate bandwidth</b> | Sum of the bandwidths of all member LSPs.                                                                                                                                                                                                                                                                                                                                                                       | extensive       |
| <b>NormalizeTimer</b>      | Duration between two normalization events.<br><br>When not configured, 21600 seconds (6 hours) is set as the default value.                                                                                                                                                                                                                                                                                     | extensive       |
| <b>NormalizeThreshold</b>  | Change in aggregate LSP utilization to trigger splitting or merging expressed in percentage.                                                                                                                                                                                                                                                                                                                    | extensive       |
| <b>Max Signaling BW</b>    | Maximum bandwidth used to signal LSPs after a normalization event.<br><br>Default value is 0 bps. When not configured, the value is inherited from the splitting bandwidth configuration.<br><br><b>NOTE:</b> Between two normalization events, when auto-bandwidth adjustment happens, the per-LSP auto-bandwidth configuration and thresholds are used, instead of the maximum signaling bandwidth threshold. | extensive       |
| <b>Min Signaling BW</b>    | Minimum bandwidth used to signal LSPs after a normalization event.<br><br>Default value is 0 bps. When not configured, the value is inherited from the merging bandwidth configuration.<br><br><b>NOTE:</b> Between two normalization events, when auto-bandwidth adjustment happens, the per-LSP auto-bandwidth configuration and thresholds are used, instead of the minimum signaling bandwidth threshold.   | extensive       |
| <b>Splitting BW</b>        | Bandwidth used for LSP splitting and merging.<br><br>Default value is 0 bps. When not configured, the value is inherited from the auto-bandwidth maximum bandwidth configuration.                                                                                                                                                                                                                               | extensive       |
| <b>Merging BW</b>          | Bandwidth used for LSP splitting and merging.<br><br>Default value is 0 bps. When not configured, the value is inherited from the auto-bandwidth minimum bandwidth configuration.                                                                                                                                                                                                                               | extensive       |

Table 62: show mpls container-lsp Output Fields (*continued*)

| Field Name                | Field Description                                                                                                                                                                                                                                                  | Level of Output |
|---------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| <b>LSPtype</b>            |                                                                                                                                                                                                                                                                    | extensive       |
| <b>LoadBalance</b>        |                                                                                                                                                                                                                                                                    | extensive       |
| <b>MinBW</b>              | Minimum LSP bandwidth in bps related to auto-bandwidth.                                                                                                                                                                                                            | extensive       |
| <b>AdjustTimer</b>        | Total amount of time in seconds allowed before LSP bandwidth adjustment take place.<br><br>Range: 300 through 315360000 seconds                                                                                                                                    | extensive       |
| <b>Max AvgBW util</b>     | Current value of the actual maximum average bandwidth utilization in bps.                                                                                                                                                                                          | extensive       |
| <b>Overflow limit</b>     | Threshold overflow limit.                                                                                                                                                                                                                                          | extensive       |
| <b>Underflow limit</b>    | Threshold underflow limit.                                                                                                                                                                                                                                         | extensive       |
| <b>Encoding type</b>      |                                                                                                                                                                                                                                                                    | extensive       |
| <b>Switching type</b>     |                                                                                                                                                                                                                                                                    | extensive       |
| <b>GPID</b>               |                                                                                                                                                                                                                                                                    | extensive       |
| <b>Priorities</b>         | Setup priority and hold priority values.<br><br>For setup priority, 0 and 7 is the highest and lowest priority, respectively.<br><br>When not explicitly configured, 7 and 0 are set as the default values for the setup priority and hold priority, respectively. | extensive       |
| <b>Bandwidth</b>          |                                                                                                                                                                                                                                                                    | extensive       |
| <b>SmartOptimizeTimer</b> | Time in seconds allowed before path reoptimization.                                                                                                                                                                                                                | extensive       |
| <b>Computed ERO</b>       | Computed explicit route. A series of hops, each with an address followed by a hop indicator. The value of the hop indicator can be strict (S) or loose (L).                                                                                                        | extensive       |

Table 62: show mpls container-lsp Output Fields (*continued*)

| Field Name                                   | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | Level of Output |
|----------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| <b>Received RRO</b>                          | <p>Received record route.</p> <p>RRO is a series of hops, each with an address followed by a flag. In most cases, the received RRO is the same as the computed ERO. If the received RRO is different from the computed ERO, there is a topology change in the network, and the route is taking a detour.</p> <p>The following flags identify the protection capability and status of the downstream node:</p> <ul style="list-style-type: none"> <li>• <b>0x01</b>—Local protection available. The link downstream from this node is protected by a local repair mechanism. This flag can be set only if the local protection flag was set in the SESSION_ATTRIBUTE object of the corresponding path message.</li> <li>• <b>0x02</b>—Local protection in use. A local repair mechanism is in use to maintain this tunnel (usually because of an outage of the link it was routed over previously).</li> <li>• <b>0x03</b>—Combination of <b>0x01</b> and <b>0x02</b>.</li> <li>• <b>0x04</b>—Bandwidth protection. The downstream routing device has a backup path providing the same bandwidth guarantee as the protected LSP for the protected section.</li> <li>• <b>0x08</b>—Node protection. The downstream routing device has a backup path providing protection against link and node failure on the corresponding path section. If the downstream routing device can set up only a link-protection backup path, the local protection available bit is set but the node protection bit is cleared.</li> <li>• <b>0x09</b>—Detour is established. Combination of <b>0x01</b> and <b>0x08</b>.</li> <li>• <b>0x10</b>—Preemption pending. The preempting node sets this flag if a pending preemption is in progress for the traffic engine LSP. This flag indicates to the ingress legacy edge router (LER) of this LSP that it should be rerouted.</li> <li>• <b>0x20</b>—Node ID. Indicates that the address specified in the RRO's IPv4 or IPv6 sub-object is a node ID address, which refers to the router address or router ID. Nodes must use the same address consistently.</li> <li>• <b>0xb</b>—Detour is in use. Combination of <b>0x01</b>, <b>0x02</b>, and <b>0x08</b>.</li> </ul> | extensive       |
| <b>Make-before-break</b>                     |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | extensive       |
| <b>Record Route</b>                          |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | extensive       |
| <b>Automatic Autobw adjustment succeeded</b> |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | extensive       |
| <b>CSPF</b>                                  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | extensive       |
| <b>Created</b>                               | Date and time the LSP was created.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | extensive       |

## Sample Output

### show mpls container-lsp

```

user@host> show mpls container-lsp
Ingress LSP: 1 sessions
Container LSP name
test
To          From          State Rt P    Member LSP count
                ActivePath                2
10.255.107.76 10.255.107.78 Up    0 *    test-1
10.255.107.76 10.255.107.78 Up    0 *    test-2
Total 2 displayed, Up 2, Down 0

naling Egress LSP: 1 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

### show mpls container-lsp extensive

```

user@host> show mpls container-lsp extensive
Ingress LSP: 1 sessions
Container LSP name: test, Member count: 2
Normalization
Min LSPs: 2, Max LSPs: 64, Aggregate bandwidth: 0bps
NormalizeTimer: 1800 secs, NormalizeThreshold: 0%
Max Signaling BW: 2kbps, Min Signaling BW: 2kbps, Splitting BW: 5Mbps, Merging
BW: 2kbps
Normalization in 989 second(s)
10.255.107.76
From: 10.255.107.78, State: Up, ActiveRoute: 0, LSName: test-1
ActivePath: (primary)
LSPTYPE: Dynamic Configured, Penultimate hop popping
LoadBalance: Random
Autobandwidth
MinBW: 1000bps
AdjustTimer: 300 secs
Max AvgBW util: 0bps, Bandwidth Adjustment in 89 second(s).
Overflow limit: 0, Overflow sample count: 0
Underflow limit: 0, Underflow sample count: 0, Underflow Max AvgBW: 0bps
Encoding type: Packet, Switching type: Packet, GPID: IPv4
*Primary State: Up, No-decrement-ttl
Priorities: 7 0
Bandwidth: 1000bps
SmartOptimizeTimer: 180
Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 2)
1.3.0.2 S 1.7.0.1 S
Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
20=Node-ID):
1.3.0.2 1.7.0.1
11 Jul 13 20:08:26.613 Make-before-break: Switched to new instance
10 Jul 13 20:08:04.360 Record Route: 1.3.0.2 1.7.0.1
9 Jul 13 20:08:04.360 Up
8 Jul 13 20:08:04.360 Automatic Autobw adjustment succeeded: BW changes from
2000 bps to 1000 bps
7 Jul 13 20:08:04.314 Originate make-before-break call
6 Jul 13 20:08:04.314 CSPF: computation result accepted 1.3.0.2 1.7.0.1
5 Jul 13 20:05:02.423 Selected as active path
4 Jul 13 20:05:02.422 Record Route: 1.3.0.2 1.7.0.1
3 Jul 13 20:05:02.421 Up

```

```

    2 Jul 13 20:05:02.376 Originate Call
    1 Jul 13 20:05:02.376 CSPF: computation result accepted 1.3.0.2 1.7.0.1
Created: Sat Jul 13 20:03:03 2013
10.255.107.76
From: 10.255.107.78, State: Up, ActiveRoute: 0, LSPName: test-2
ActivePath: (primary)
LSPTYPE: Dynamic Configured, Penultimate hop popping
LoadBalance: Random
Autobandwidth
MinBW: 1000bps
AdjustTimer: 300 secs
Max AvgBW util: 0bps, Bandwidth Adjustment in 89 second(s).
Overflow limit: 0, Overflow sample count: 0
Underflow limit: 0, Underflow sample count: 0, Underflow Max AvgBW: 0bps
Encoding type: Packet, Switching type: Packet, GPID: IPv4
*Primary State: Up, No-decrement-ttl
  Priorities: 7 0
  Bandwidth: 1000bps
  SmartOptimizeTimer: 180
  Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 2)
1.2.0.2 S 1.4.0.2 S
  Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
20=Node-ID):
    1.2.0.2 1.4.0.2
    11 Jul 13 20:08:05.363 Make-before-break: Switched to new instance
    10 Jul 13 20:08:04.450 Record Route: 1.2.0.2 1.4.0.2
    9 Jul 13 20:08:04.449 Up
    8 Jul 13 20:08:04.449 Automatic Autobw adjustment succeeded: BW changes from
2000 bps to 1000 bps
    7 Jul 13 20:08:04.327 Originate make-before-break call
    6 Jul 13 20:08:04.327 CSPF: computation result accepted 1.2.0.2 1.4.0.2
    5 Jul 13 20:05:00.849 Selected as active path
    4 Jul 13 20:05:00.841 Record Route: 1.3.0.2 1.7.0.1
    3 Jul 13 20:05:00.831 Up
    2 Jul 13 20:05:00.513 Originate Call
    1 Jul 13 20:05:00.502 CSPF: computation result accepted 1.3.0.2 1.7.0.1
Created: Sat Jul 13 20:03:03 2013
Total 2 displayed, Up 2, Down 0

Egress LSP: 1 sessions
Total 0 displayed, Up 0, Down 0
Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```



## show mpls context-identifier

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | show mpls context-identifier<br><brief   detail><br><logical-system (all   <i>logical-system-name</i> )><br><primary>;<br><protector>;                                                                                                                                                                                                                                                                                                                                            |
| <b>Release Information</b>      | Command introduced in Junos OS Release 11.4R3.                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Description</b>              | Display information about configured egress protection context identifiers.                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Options</b>                  | <p><b>none</b>—Display standard information about egress protection.</p> <p><b>brief   detail</b>—(Optional) Display the specified level of output.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p><b>primary</b>—(Optional) Perform this operation on the primary node.</p> <p><b>protector</b>—(Optional) Perform this operation on the protector node.</p> |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <i>Example: Configuring Layer 3 VPN Egress Protection with RSVP and LDP</i></li> <li>• <i>Example: Configuring MPLS Egress Protection for Layer 3 VPN Services</i></li> </ul>                                                                                                                                                                                                                                                            |
| <b>List of Sample Output</b>    | <a href="#">show mpls context-identifier detail (Protector) on page 1772</a><br><a href="#">show mpls context-identifier detail (Primary) on page 1772</a>                                                                                                                                                                                                                                                                                                                        |
| <b>Output Fields</b>            | <a href="#">Table 63 on page 1771</a> describes the output fields for the <b>show mpls egress-protection detail</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                                                                                                                                                              |

**Table 63: show mpls lsp Output Fields**

| Field Name    | Field Description                                                                                                                                                       | Level of Output |
|---------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| ID            | Context identifier.                                                                                                                                                     | All levels      |
| Type          | Indicates node type: protector or primary                                                                                                                               | All levels      |
| Metric        | MPLS cost value of the context identifier route. This route appears in inet.0 on the protector and primary nodes. On the protector node, the metric is a larger number. | All levels      |
| Mode          | Indicates <b>advertise-mode</b> : proxy or alias                                                                                                                        | <b>detail</b>   |
| Context table | Name of the MPLS routing table created for egress protection.                                                                                                           | All levels      |

Table 63: show mpls lsp Output Fields (*continued*)

| Field Name   | Field Description                                                                                                                                | Level of Output |
|--------------|--------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| Context LSPs | Names of the LSPs that have egress protection configured.<br><br>Loopback interface addresses of the devices from which the LSPs are originated. | <b>detail</b>   |
| Total        | Total number of primary and protector nodes.                                                                                                     | All levels      |
| Primary      | Number of primary nodes.                                                                                                                         | All levels      |
| Protector    | Number of protector nodes.                                                                                                                       | All levels      |

## Sample Output

### show mpls context-identifier detail (Protector)

```

user@host> show mpls context-identifier detail
ID: 166.1.3.1
Type: protector, Metric: 16777215, Mode: alias
Context table: __166.1.3.1__.mpls.0, Label out: 299968

```

## Sample Output

### show mpls context-identifier detail (Primary)

```

user@host> show mpls context-identifier detail

ID: 166.1.3.1
Type: primary, Metric: 1, Mode: alias

Total 1, Primary 1, Protector 0

```

show mpls correlation label

|                          |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|--------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax                   | show mpls correlation label <i>label-value</i><br><brief   detail   extensive   terse><br><descriptions><br><logical-system (all   <i>logical-system-name</i> )>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Release Information      | Command introduced in Junos OS Release 15.2 for the M Series, MX Series, and T Series.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| Description              | Display the correlation information for the Multiprotocol Label Switching (MPLS) label-switched path (LSP) with the owner of the label.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| Options                  | <p><i>label-value</i>—Display information about the specified label.</p> <p><b>brief   detail   extensive   terse</b>—(Optional) Display the specified level of output. The extensive option displays the same information as the detail option, but covers the most recent 50 events.</p> <p><b>descriptions</b>—(Optional) Display the LSP descriptions. To view this information, you must configure the description statement at the <b>[edit protocol mpls lsp]</b> hierarchy level. Only the LSPs with a description are displayed. This command is only valid for the ingress routing device, because the description is not propagated in RSVP messages.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> |
| Required Privilege Level | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Related Documentation    | <ul style="list-style-type: none"><li>• <a href="#">show mpls correlation nexthop-id on page 1775</a></li><li>• <a href="#">show mpls association on page 1760</a></li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| List of Sample Output    | <a href="#">show mpls correlation label on page 1774</a><br><a href="#">show mpls correlation label label-value logical-system on page 1774</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| Output Fields            | <a href="#">Table 64 on page 1773</a> describes the output fields for the <b>show mpls correlation label</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |

Table 64: show mpls correlation label Output Fields

| Field Name | Field Description | Level of Output |
|------------|-------------------|-----------------|
|            |                   |                 |
|            |                   |                 |
|            |                   |                 |
|            |                   |                 |
|            |                   |                 |

Table 64: show mpls correlation label Output Fields (*continued*)

| Field Name | Field Description | Level of Output |
|------------|-------------------|-----------------|
|            |                   |                 |

---

## Sample Output

### show mpls correlation label

```
user@host> show mpls correlation label label-value  
Paste router command output here
```

### show mpls correlation label label-value logical-system

```
user@host> show mpls correlation label label-value logical-system all  
Paste  
router command output here
```

## show mpls correlation nexthop-id

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | show mpls correlation nexthop-id <i>nexthop-id</i><br><descriptions><br><logical-system (all   <i>logical-system-name</i> )>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Release Information</b>      | Command introduced in Junos OS Release 16.1 for the M Series, MX Series, and T Series.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Description</b>              | Display the correlation information for the Multiprotocol Label Switching (MPLS) label-switched path (LSP) with the owner of the next-hop ID.                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Options</b>                  | <p><i>nexthop-id</i>—Display information about the specified next-hop ID.</p> <p><b>descriptions</b>—(Optional) Display the LSP descriptions. To view this information, you must configure the description statement at the <b>[edit protocol mpls lsp]</b> hierarchy level. Only the LSPs with a description are displayed. This command is only valid for the ingress routing device, because the description is not propagated in RSVP messages.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">show mpls association on page 1760</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>List of Sample Output</b>    | <a href="#">show mpls correlation nexthop-id on page 1775</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Output Fields</b>            | <a href="#">Table 65 on page 1775</a> describes the output fields for the <b>show mpls correlation nexthop-id</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                                                                                                                                                                                                                                                                                                  |

Table 65: show mpls correlation nexthop-id Output Fields

| Field Name | Field Description                                          |
|------------|------------------------------------------------------------|
| LSP name   | Name of the LSP associated with the specified next-hop ID. |

## Sample Output

### show mpls correlation nexthop-id

```

user@host> show mpls correlation nexthop-id nexthop-id
LSP name: LSP-ABC

```

## show mpls cspf

**List of Syntax** [Syntax on page 1776](#)  
[Syntax \(EX Series Switches\) on page 1776](#)

**Syntax** show mpls cspf  
 <instance *instance-name*>  
 <logical-system (all | *logical-system-name*)>

**Syntax (EX Series Switches)** show mpls cspf

**Release Information** Command introduced before Junos OS Release 7.4.  
 Command introduced in Junos OS Release 9.5 for EX Series switches.  
*instance instance-name* option added in Junos OS Release 15.1.

**Description** Display Multiprotocol Label Switching (MPLS) Constrained Shortest Path First (CSPF) statistics.

**Options** none—Display MPLS CSFP statistics.

*instance instance-name*—(Optional) Display MPLS CSPF information for the specified instance. If *instance-name* is omitted, MPLS CSPF information for the master instance is displayed.

*logical-system (all | logical-system-name)*—(Optional) Perform this operation on all logical systems or on a particular logical system.

**Required Privilege Level** view

**List of Sample Output** [show mpls cspf on page 1777](#)

**Output Fields** [Table 66 on page 1776](#) describes the output fields for the **show mpls cspf** command. Output fields are listed in the approximate order in which they appear.

**Table 66: show mpls cspf Output Fields**

| Field Name   | Field Description                                     |
|--------------|-------------------------------------------------------|
| Queue length | Number of LSPs queued for automatic path computation. |
| current      | Current queue length.                                 |
| maximum      | Maximum queue length (high-water mark).               |
| dequeued     | Number of aborted computation attempts.               |
| Paths        | Counters for label-switched path computations.        |
| total        | Sum of the next four fields.                          |

Table 66: show mpls cspf Output Fields (*continued*)

| Field Name          | Field Description                                                                          |
|---------------------|--------------------------------------------------------------------------------------------|
| <b>successful</b>   | Number of path computations that were successfully completed.                              |
| <b>no route</b>     | Number of path computations that failed because the destination is unreachable.            |
| <b>Sys Error</b>    | Number of path computations that failed because of lack of memory.                         |
| <b>CSPFs</b>        | Total number of CSPF computations. A single path might require multiple CSPF computations. |
| <b>Time</b>         | Time, in seconds, required to perform the label-switched path computation.                 |
| <b>Total</b>        | Total amount of time consumed by the CSPF path computation algorithm.                      |
| <b>CSPFs</b>        | Total number of CSPF computations.                                                         |
| <b>Avg per CSPF</b> | Average amount of time required for each CSPF computation.                                 |
| <b>% of rpd</b>     | Percentage of routing process CPU used in the CSPF computation.                            |

## Sample Output

### show mpls cspf

```

user@host> show mpls cspf
CSPF statistics
Queue length  current      maximum      dequeued
              0            0            0
Paths          total      successful      no route      sys error      CSPFs
              0            0            0            0            0
Time (secs)    total      CSPFs      avg per CSPF      % of rpd
              0.000000    0.000000    0.000000        0.0000

```

## show mpls diffserv-te

|                                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>List of Syntax</b>              | <a href="#">Syntax on page 1778</a><br><a href="#">Syntax (EX Series Switches) on page 1778</a>                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Syntax</b>                      | <pre>show mpls diffserve-te &lt;instance <i>instance-name</i>&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt;</pre>                                                                                                                                                                                                                                                                                                                                                            |
| <b>Syntax (EX Series Switches)</b> | show mpls diffserve-te                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Release Information</b>         | <p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.5 for EX Series switches.</p> <p><b>instance <i>instance-name</i></b> option added in Junos OS Release 15.1.</p>                                                                                                                                                                                                                                                                          |
| <b>Description</b>                 | Display Multiprotocol Label Switching (MPLS) label-switched path (LSP) Differentiated Services (DiffServ) class and preemption priority information.                                                                                                                                                                                                                                                                                                                                         |
| <b>Options</b>                     | <p><b>none</b>—Display DiffServ classes and priorities used by MPLS LSPs.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Display DiffServ classes and priorities used by MPLS LSPs for the specified instance. If <b><i>instance-name</i></b> is omitted, DiffServ information for the master instance is displayed.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> |
| <b>Required Privilege Level</b>    | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>List of Sample Output</b>       | <a href="#">show mpls diffserv-te on page 1779</a>                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Output Fields</b>               | <p><a href="#">Table 67 on page 1778</a> describes the output fields for the <b>show mpls diffserv-te</b> command. Output fields are listed in the approximate order in which they appear.</p>                                                                                                                                                                                                                                                                                               |

**Table 67: show mpls diffserv-te Output Fields**

| Field Name             | Field Description                                                                                                                                                                                                                                                                       |
|------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Bandwidth model</b> | Bandwidth constraint model supported. The maximum allocation model (MAM) for EXP-inferred LSPs (E-LSPs) is currently supported.                                                                                                                                                         |
| <b>TE class</b>        | DiffServ traffic engineering class.                                                                                                                                                                                                                                                     |
| <b>Traffic class</b>   | <p>MPLS class type that corresponds to the DiffServ traffic engineering class:</p> <ul style="list-style-type: none"> <li>• <b>ct0</b>—Best effort</li> <li>• <b>ct1</b>—Assured forwarding</li> <li>• <b>ct2</b>—Expedited forwarding</li> <li>• <b>ct3</b>—Network control</li> </ul> |



Table 67: show mpls diffserv-te Output Fields (*continued*)

| Field Name | Field Description                                                                                                                                                                                  |
|------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Priority   | MPLS preemption priority for this class type, a value from 0 through 7. Interior gateway protocols (IGPs) distribute information about the available bandwidth for each traffic engineering class. |

Sample Output

show mpls diffserv-te

```
user@host> show mpls diffserv-te
Bandwidth model: Maximum Allocation Model with support for E-LSPs.
TE class      Traffic class  Priority
te0           ct0           3
te1           ct1           2
```

## show mpls egress-protection


|                                                                                                                                                                                                                                                                                                                                            |                                                                                                                                                                                                                                                                                                                     |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                                                                                                                                                                                                                                                                                                                              | show mpls egress-protection<br><brief   detail><br><logical-system (all   <i>logical-system-name</i> )>                                                                                                                                                                                                             |
| <b>Release Information</b>                                                                                                                                                                                                                                                                                                                 | Command introduced in Junos OS Release 11.4R3.                                                                                                                                                                                                                                                                      |
| <b>Description</b>                                                                                                                                                                                                                                                                                                                         | Display information about egress protection.                                                                                                                                                                                                                                                                        |
| <div>  <p><b>NOTE:</b> Use this command on the device configured as the protector PE router to display information about egress protection. If you use this command on the device configured as the primary PE router, no output is displayed.</p> </div> |                                                                                                                                                                                                                                                                                                                     |
| <b>Options</b>                                                                                                                                                                                                                                                                                                                             | <p><b>none</b>—Display standard information about egress protection.</p> <p><b>brief   detail</b>—(Optional) Display the specified level of output.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> |
| <b>Required Privilege Level</b>                                                                                                                                                                                                                                                                                                            | view                                                                                                                                                                                                                                                                                                                |
| <b>Related Documentation</b>                                                                                                                                                                                                                                                                                                               | <ul style="list-style-type: none"> <li>• <i>Example: Configuring MPLS Egress Protection for Layer 3 VPN Services</i></li> <li>• <i>Example: Configuring Layer 3 VPN Egress Protection with RSVP and LDP</i></li> </ul>                                                                                              |
| <b>List of Sample Output</b>                                                                                                                                                                                                                                                                                                               | <a href="#">show mpls egress-protection detail (Centralized Protector) on page 1781</a><br><a href="#">show mpls egress-protection detail (Collocated Protector) on page 1781</a>                                                                                                                                   |
| <b>Output Fields</b>                                                                                                                                                                                                                                                                                                                       | Table 63 on page 1771 describes the output fields for the <b>show mpls egress-protection detail</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                |

Table 68: show mpls lsp Output Fields

| Field Name | Field Description                                                   |
|------------|---------------------------------------------------------------------|
| Instance   | Indicates egress instance name                                      |
| Type       | Indicates type of the VRF. It can be either local-vrf or remote-vrf |
| RIB        | Indicates the edge-protection created routing table                 |
| Context-Id | Indicates the context-ID associated with the RIB.                   |

Table 68: show mpls lsp Output Fields (*continued*)

| Field Name                                       | Field Description                                                                                                                                                                                                                                                                          |
|--------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <del>Interface</del> / <del>EnhancedLookup</del> | Show VT interfaces associated with the backup RIB.<br><br>Shows <b>Enhanced-lookup</b> for MX Series 3D Universal Edge Routers with the Enhanced IP Network Services mode configured using the <b>network-services enhanced-ip</b> statement at the <b>[edit chassis]</b> hierarchy level. |

## Sample Output

### show mpls egress-protection detail (Centralized Protector)

```

user@host> show mpls egress-protection detail

Instance          Type          Protection-Type
rsite1            remote-vrf    Protector
  RIB __99.99.1.4-rsite1__.inet.0, Context-Id 99.99.1.4, Enhanced-lookup
  Route Target 1:1
rsite24           remote-vrf    Protector
  RIB __99.99.1.4-rsite24__.inet.0, Context-Id 99.99.1.4, Enhanced-lookup
  Route Target 100:1023

```

## Sample Output

### show mpls egress-protection detail (Collocated Protector)

```

user@host> show mpls egress-protection detail

Instance          Type          Protection-Type
site2             local-vrf     Protector
  RIB __66.6.6.6-site2__.inet.0, Context-Id 66.6.6.6, Interface vt-1/3/0.87031809

  Route Target 100:251
site12            local-vrf     Protector
  RIB __66.6.6.6-site12__.inet.0, Context-Id 66.6.6.6, Interface vt-1/3/0.87031808

  Route Target 100:250
  Route Target 100:251

site2             local-vrf     Protector
  RIB __66.6.6.6-site2__.inet.0, Context-Id 66.6.6.6, Interface vt-1/3/0.87031809

  Route Target 100:251

```

## show mpls interface

|                                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>List of Syntax</b>              | <a href="#">Syntax on page 1782</a><br><a href="#">Syntax (EX Series Switches) on page 1782</a>                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Syntax</b>                      | <pre>show mpls interface &lt;instance <i>instance-name</i>&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt;</pre>                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Syntax (EX Series Switches)</b> | show mpls interface                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Release Information</b>         | <p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.5 for EX Series switches.</p> <p><b>instance <i>instance-name</i></b> option added in Junos OS Release 15.1.</p>                                                                                                                                                                                                                                                                                |
| <b>Description</b>                 | Display information about Multiprotocol Label Switching (MPLS)-enabled interfaces.                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Options</b>                     | <p><b>none</b>—Display information about MPLS-enabled interfaces.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Display information about MPLS-enabled interfaces for the specified routing instance. If <b>instance-name</b> is omitted, information about MPLS-enabled interfaces is displayed for the master instance.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> |
| <b>Additional Information</b>      | MPLS is enabled on an interface when the interface is configured with both the <b>set protocol mpls interface <i>interface-name</i></b> and <b>set interface <i>interface-name</i> unit 0 family mpls</b> statements.                                                                                                                                                                                                                                                                              |
| <b>Required Privilege Level</b>    | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>List of Sample Output</b>       | <a href="#">show mpls interface on page 1783</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Output Fields</b>               | <p><a href="#">Table 69 on page 1782</a> describes the output fields for the <b>show mpls interface</b> command. Output fields are listed in the approximate order in which they appear.</p>                                                                                                                                                                                                                                                                                                       |

**Table 69: show mpls interface Output Fields**

| Field Name                   | Field Description                                      |
|------------------------------|--------------------------------------------------------|
| <b>Interface</b>             | Name of the interface.                                 |
| <b>State</b>                 | State of the interface: <b>Up</b> or <b>Dn</b> (down). |
| <b>Administrative groups</b> | Administratively assigned colors of the link.          |

Table 69: show mpls interface Output Fields (*continued*)

| Field Name                            | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|---------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Maximum labels                        | Maximum number of MPLS labels upon which MPLS can operate on a logical interface. This is configured using the <b>maximum-labels</b> statement at the [edit logical-systems <i>logical-system-name</i> interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family mpls] or the [edit interfaces <i>interface-name</i> unit <i>logical-unit-number</i> family mpls] hierarchy levels.                                                                                                                                                                                                            |
| Static protection revert time         | Time (in seconds) that a static LSP must wait before traffic reverts from the bypass path to the original path. This is configured using the <b>protection-revert-time</b> statement at the [edit logical-systems <i>logical-system-name</i> protocols mpls interface <i>interface-name</i> static] or the [edit protocols mpls interface <i>interface-name</i> static] hierarchy levels.                                                                                                                                                                                                                    |
| Always mark connection protection tlv | Enabled or Disabled: Enabled indicates that the <b>always-mark-connection-protection-tlv</b> statement is configured at the [edit logical-systems <i>logical-system-name</i> protocols mpls interface <i>interface-name</i> static] or the [edit protocols mpls interface <i>interface-name</i> static] hierarchy levels. When this statement is configured, it marks all OAM traffic transiting this interface in preparation for switching the traffic to an alternate path based on the OAM functionality. To switch traffic to the bypass LSP, the <b>switch-away-lsps</b> statement must be configured. |
| Switch away lsps                      | Enabled or Disabled: Enabled indicates that the <b>switch-away-lsps</b> statement is configured at the [edit logical-systems <i>logical-system-name</i> protocols mpls interface <i>interface-name</i> static] or the [edit protocols mpls interface <i>interface-name</i> static] hierarchy levels. This enables you to switch an LSP away from a network node using a bypass LSP. This feature can be used in maintenance of active networks when a network device needs to be replaced without interrupting traffic passing through the network. The LSPs can be either static or dynamic.                |

## Sample Output

### show mpls interface

```
user@host> show mpls interface
```

```
Interface: ge-0/2/1.57
State: Up
Administrative group: <none>
Maximum labels: 5
Static protection revert time: 5 seconds
Always mark connection protection tlv: Disabled
Switch away lsps : Disabled
```

## show mpls label usage

**Syntax** `show mpls label usage`  
`<logical-system (all | logical-system-name)>`

**Release Information** Command introduced in Junos OS Release 15.1.

**Description** Show the available label space resource in RPD and also the applications that use the label space in RPD. There are four different label spaces currently used in MPLS—namely LSI, Dynamic, Block and Static. Each label space has a fixed number and cannot grow beyond the fixed value. Using this command, the administrator can monitor the available labels in each label space and the applications that are using the labels. Based on the availability of labels, the administrator can decide to stop any service and free some labels or use other service where the labels are available.

**Options** **none**— Display the available labels in each label space and the applications using the labels.

**logical-system (all | logical-system-name)**—(Optional) Perform this operation on all logical systems or on a particular logical system.

**Additional Information** Once the label space crosses the threshold, a new syslog message is added.

“<label-space-name> label space usage crossed threshold limit of 90%”.

For instance, LSI label space usage crossed threshold limit of 90%

**Required Privilege Level** view

**List of Sample Output** [show mpls label usage on page 1784](#)

**Output Fields** [Table 70 on page 1784](#) describes the output fields for the **show mpls label usage** command. Output fields are listed in the order in which they appear.

**Table 70: show mpls label usage Fields**

| Field Name          | Field Description                                                                                     |
|---------------------|-------------------------------------------------------------------------------------------------------|
| <b>Label Space</b>  | The label spaces currently used in MPLS.                                                              |
| <b>Available</b>    | Indicates the number of freely available labels and also the percentage of the label space available. |
| <b>Applications</b> | The applications that use the MPLS label spaces.                                                      |

## Sample Output

### show mpls label usage

```
user@host> show mpls label usage
```

| Label space            | Available     | Applications                                         |
|------------------------|---------------|------------------------------------------------------|
| LSI<br>vrf-table-label | 155331(75%)   | BGP/LDP VPLS with no-tunnel-services, BGP L3VPN with |
| Dynamic                | 265645(50%)   | RSVP, LDP, PW, L3VPN                                 |
| Block                  | 46189(30%)    | BGP/LDP VPLS with tunnel-services, BGP L2VPN         |
| Static                 | 38575(67.12%) | Static LSP, Static PW                                |

## show mpls lsp

---

**List of Syntax**    [Syntax on page 1786](#)  
                          [Syntax \(EX Series Switches\) on page 1786](#)

**Syntax**    show mpls lsp  
                  <brief | detail | extensive | terse>  
                  <autobandwidth>  
                  <bidirectional | unidirectional>  
                  <bypass>  
                  <count-active-routes>  
                  <defaults>  
                  <descriptions>  
                  <down | up>  
                  <externally-controlled>  
                  <externally-provisioned>  
                  <logical-system (all | *logical-system-name*)>  
                  <lsp-type>  
                  <name *name*>  
                  <p2mp>  
                  <statistics>  
                  <transit>

**Syntax (EX Series Switches)**    show mpls lsp  
                                  <brief | detail | extensive | terse>  
                                  <bidirectional | unidirectional>  
                                  <bypass>  
                                  <descriptions>  
                                  <down | up>  
                                  <externally-controlled>  
                                  <externally-provisioned>  
                                  <lsp-type>  
                                  <name *name*>  
                                  <p2mp>  
                                  <statistics>  
                                  <transit>

**Release Information**    Command introduced before Junos OS Release 7.4.  
                              **defaults** option added in Junos OS Release 8.5.  
                              Command introduced in Junos OS Release 9.5 for EX Series switches.  
                              **autobandwidth** option added in Junos OS Release 11.4.  
                              **externally-controlled** option added in Junos OS Release 12.3.  
                              **externally-provisioned** option added in Junos OS Release 13.3.  
                              Command introduced in Junos OS Release 13.2X51-D15 for QFX Series.  
                              **instance *instance-name*** option added in Junos OS Release 15.1.

**Description**    Display information about configured and active dynamic Multiprotocol Label Switching (MPLS) label-switched paths (LSPs).

**Options**    **none**—Display standard information about all configured and active dynamic MPLS LSPs.



**brief | detail | extensive | terse**—(Optional) Display the specified level of output. The extensive option displays the same information as the detail option, but covers the most recent 50 events.

**autobandwidth**—(Optional) Display automatic bandwidth information. This option is explained separately (see [show mpls lsp autobandwidth](#)).

**bidirectional | unidirectional**—(Optional) Display bidirectional or unidirectional LSP information, respectively.

**bypass**—(Optional) Display LSPs used for protecting other LSPs.

**count-active-routes**—(Optional) Display active routes for LSPs.

**defaults**—(Optional) Display the MPLS LSP default settings.

**descriptions**—(Optional) Display the MPLS label-switched path (LSP) descriptions. To view this information, you must configure the description statement at the **[edit protocol mpls lsp]** hierarchy level. Only LSPs with a description are displayed. This command is only valid for the ingress routing device, because the description is not propagated in RSVP messages.

**down | up**—(Optional) Display only LSPs that are inactive or active, respectively.

**externally-controlled**—(Optional) Display the LSPs that are under the control of an external Path Computation Element (PCE).

**externally-provisioned**—(Optional) Display the LSPs that are generated dynamically and provisioned by an external Path Computation Element (PCE).

**instance *instance-name***—(Optional) Display MPLS LSP information for the specified instance. If *instance-name* is omitted, MPLS LSP information is displayed for the master instance.

**logical-system (all | *logical-system-name*)**—(Optional) Perform this operation on all logical systems or on a particular logical system.

***lsp-type***—(Optional) Display information about a particular LSP type:

- **bypass**—Sessions for bypass LSPs.
- **egress**—Sessions that terminate on this routing device.
- **ingress**—Sessions that originate from this routing device.
- **transit**—Sessions that pass through this routing device.

**name *name***—(Optional) Display information about the specified LSP or group of LSPs.

**p2mp**—(Optional) Display information about point-to-multipoint LSPs.

**statistics**—(Optional) (Ingress and transit routers only) Display accounting information about LSPs. Statistics are not available for LSPs on the egress routing device, because the penultimate routing device in the LSP sets the label to 0. Also, as the packet arrives at the egress routing device, the hardware removes its MPLS header and the

packet reverts to being an IPv4 packet. Therefore, it is counted as an IPv4 packet, not an MPLS packet.



**NOTE:** If a bypass LSP is configured for the primary static LSP, display cumulative statistics of packets traversing through the protected LSP and bypass LSP when traffic is re-optimized when the protected LSP link is restored. (Bypass LSPs are not supported on QFX Series switches.)

When used with the **bypass** option (**show mpls lsp bypass statistics**), display statistics for the traffic that flows only through the bypass LSP.

**transit**—(Optional) Display LSPs transiting this routing device.

**Required Privilege Level** view

**Related Documentation**

- [clear mpls lsp on page 1717](#)
- [show mpls lsp autobandwidth on page 1804](#)

**List of Sample Output**

- [show mpls lsp defaults on page 1795](#)
- [show mpls lsp descriptions on page 1795](#)
- [show mpls lsp detail on page 1795](#)
- [show mpls lsp detail \(When Egress Protection Is in Standby Mode\) on page 1796](#)
- [show mpls lsp detail \(When Egress Protection Is in Effect During a Local Repair\) on page 1797](#)
- [show mpls lsp extensive on page 1797](#)
- [show mpls lsp ingress extensive on page 1799](#)
- [show mpls lsp extensive \(automatic bandwidth adjustment enabled\) on page 1800](#)
- [show mpls lsp bypass extensive on page 1801](#)
- [show mpls lsp p2mp on page 1801](#)
- [show mpls lsp p2mp detail on page 1802](#)
- [show mpls lsp detail count-active-routes on page 1802](#)
- [show mpls lsp statistics extensive on page 1803](#)

**Output Fields** [Table 71 on page 1788](#) describes the output fields for the **show mpls lsp** command. Output fields are listed in the approximate order in which they appear.

**Table 71: show mpls lsp Output Fields**

| Field Name         | Field Description                                                                                                                                                                                        | Level of Output |
|--------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| <b>Ingress LSP</b> | Information about LSPs on the ingress routing device. Each session has one line of output.                                                                                                               | All levels      |
| <b>Egress LSP</b>  | Information about the LSPs on the egress routing device. MPLS learns this information by querying RSVP, which holds all the transit and egress session information. Each session has one line of output. | All levels      |

Table 71: show mpls lsp Output Fields (*continued*)

| Field Name                  | Field Description                                                                                                                                                                                                                                                                     | Level of Output         |
|-----------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------|
| <b>Transit LSP</b>          | Number of LSPs on the transit routing devices and the state of these paths. MPLS learns this information by querying RSVP, which holds all the transit and egress session information.                                                                                                | All levels              |
| <b>P2MP name</b>            | Name of the point-to-multipoint LSP. Dynamically generated P2MP LSPs used for VPLS flooding use dynamically generated P2MP LSP names. The name uses the format <i>identifier:vpls:router-id:routing-instance-name</i> . The <i>identifier</i> is automatically generated by Junos OS. | All levels              |
| <b>P2MP branch count</b>    | Number of destination LSPs the point-to-multipoint LSP is transmitting to.                                                                                                                                                                                                            | All levels              |
| <b>P</b>                    | An asterisk (*) under this heading indicates that the LSP is a primary path.                                                                                                                                                                                                          | All levels              |
| <b>address</b>              | ( <b>detail</b> and <b>extensive</b> ) Destination (egress routing device) of the LSP.                                                                                                                                                                                                | <b>detail extensive</b> |
| <b>To</b>                   | Destination (egress routing device) of the session.                                                                                                                                                                                                                                   | <b>brief</b>            |
| <b>From</b>                 | Source (ingress routing device) of the session.                                                                                                                                                                                                                                       | <b>brief detail</b>     |
| <b>State</b>                | State of the LSP handled by this RSVP session: <b>Up</b> , <b>Dn</b> (down), or <b>Restart</b> .                                                                                                                                                                                      | <b>brief detail</b>     |
| <b>Active Route</b>         | Number of active routes (prefixes) installed in the forwarding table. For ingress LSPs, the forwarding table is the primary IPv4 table ( <b>inet.0</b> ). For transit and egress RSVP sessions, the forwarding table is the primary MPLS table ( <b>mpls.0</b> ).                     | <b>detail extensive</b> |
| <b>Rt</b>                   | Number of active routes (prefixes) installed in the routing table. For ingress RSVP sessions, the routing table is the primary IPv4 table ( <b>inet.0</b> ). For transit and egress RSVP sessions, the routing table is the primary MPLS table ( <b>mpls.0</b> ).                     | <b>brief</b>            |
| <b>P</b>                    | Path. An asterisk (*) underneath this column indicates that the LSP is a primary path.                                                                                                                                                                                                | <b>brief</b>            |
| <b>ActivePath</b>           | (Ingress LSP) Name of the active path: <b>Primary</b> or <b>Secondary</b> .                                                                                                                                                                                                           | <b>detail extensive</b> |
| <b>LSPname</b>              | Name of the LSP.                                                                                                                                                                                                                                                                      | <b>brief detail</b>     |
| <b>Statistics</b>           | Displays the number of packets and the number of bytes transmitted over the LSP. These counters are reset to zero whenever the LSP path is optimized (for example, during an automatic bandwidth allocation).                                                                         | <b>extensive</b>        |
| <b>Aggregate statistics</b> | Displays the number of packets and the number of bytes transmitted over the LSP. These counters continue to iterate even if the LSP path is optimized. You can reset these counters to zero using the <b>clear mpls lsp statistics</b> command.                                       | <b>extensive</b>        |
| <b>Packets</b>              | Displays the number of packets transmitted over the LSP.                                                                                                                                                                                                                              | <b>brief extensive</b>  |
| <b>Bytes</b>                | Displays the number of bytes transmitted over the LSP.                                                                                                                                                                                                                                | <b>brief extensive</b>  |

Table 71: show mpls lsp Output Fields (*continued*)

| Field Name                          | Field Description                                                                                                                                                                                                                                                                                                             | Level of Output         |
|-------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------|
| <b>DiffServInfo</b>                 | Type of LSP: multiclass LSP ( <b>multiclass diffServ-TE LSP</b> ) or Differentiated-Services-aware traffic engineering LSP ( <b>diffServ-TE LSP</b> ).                                                                                                                                                                        | <b>detail</b>           |
| <b>LSPtype</b>                      | Type of LSP: <ul style="list-style-type: none"> <li>• <b>Static configured</b>—Static</li> <li>• <b>Dynamic configured</b>—Dynamic</li> <li>• <b>Externally controlled</b>—External path computing entity</li> </ul> Also indicates if the LSP is a <b>Penultimate hop popping</b> LSP or an <b>Ultimate hop popping</b> LSP. | <b>detail extensive</b> |
| <b>Bypass</b>                       | (Bypass LSP) Destination address (egress routing device) for the bypass LSP.                                                                                                                                                                                                                                                  | All levels              |
| <b>LSPpath</b>                      | Indicates whether the RSVP session is for the primary or secondary LSP path. <b>LSPpath</b> can be either <b>primary</b> or <b>secondary</b> and can be displayed on the ingress, egress, and transit routing devices.                                                                                                        | <b>detail</b>           |
| <b>Bidir</b>                        | (GMPLS) The LSP allows data to travel in both directions between GMPLS devices.                                                                                                                                                                                                                                               | All levels              |
| <b>Bidirectional</b>                | (GMPLS) The LSP allows data to travel both ways between GMPLS devices.                                                                                                                                                                                                                                                        | All levels              |
| <b>FastReroute desired</b>          | Fast reroute has been requested by the ingress routing device.                                                                                                                                                                                                                                                                | <b>detail</b>           |
| <b>Link protection desired</b>      | <b>detail</b>                                                                                                                                                                                                                                                                                                                 |                         |
| <b>Node/Link protection desired</b> | Link protection has been requested by the ingress routing device.                                                                                                                                                                                                                                                             | <b>detail</b>           |
| <b>LoadBalance</b>                  | (Ingress LSP) CSPF load-balancing rule that was configured to select the LSP's path among equal-cost paths: <b>Most-fill</b> , <b>Least-fill</b> , or <b>Random</b> .                                                                                                                                                         | <b>detail extensive</b> |
| <b>Signal type</b>                  | Signal type for GMPLS LSPs. The signal type determines the peak data rate for the LSP: <b>DS0</b> , <b>DS3</b> , <b>STS-1</b> , <b>STM-1</b> , or <b>STM-4</b> .                                                                                                                                                              | All levels              |
| <b>Encoding type</b>                | LSP encoding type: <b>Packet</b> , <b>Ethernet</b> , <b>PDH</b> , <b>SDH/SONET</b> , <b>Lambda</b> , or <b>Fiber</b> .                                                                                                                                                                                                        | All levels              |
| <b>Switching type</b>               | Type of switching on the links needed for the LSP: <b>Fiber</b> , <b>Lambda</b> , <b>Packet</b> , <b>TDM</b> , or <b>PSC-1</b> .                                                                                                                                                                                              | All levels              |
| <b>GPID</b>                         | Generalized Payload Identifier (identifier of the payload carried by an LSP): <b>HDLC</b> , <b>Ethernet</b> , <b>IPv4</b> , <b>PPP</b> , or <b>Unknown</b> .                                                                                                                                                                  | All levels              |
| <b>Protection</b>                   | Configured protection capability desired for the LSP: <b>Extra</b> , <b>Enhanced</b> , <b>none</b> , <b>One plus one</b> , <b>One to one</b> , or <b>Shared</b> .                                                                                                                                                             | All levels              |
| <b>Upstream label in</b>            | (Bidirectional LSPs) Incoming label for reverse direction traffic for this LSP.                                                                                                                                                                                                                                               | All levels              |

Table 71: show mpls lsp Output Fields (*continued*)

| Field Name                                          | Field Description                                                                                                                                                                       | Level of Output         |
|-----------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------|
| <b>Upstream label out</b>                           | (Bidirectional LSPs) Outgoing label for reverse direction traffic for this LSP.                                                                                                         | All levels              |
| <b>Suggested label received</b>                     | (Bidirectional LSPs) Label the upstream node suggests to use in the Resv message that is sent.                                                                                          | All levels              |
| <b>Suggested label sent</b>                         | (Bidirectional LSPs) Label the downstream node suggests to use in the Resv message that is returned.                                                                                    | All levels              |
| <b>Autobandwidth</b>                                | (Ingress LSP) The LSP is performing autobandwidth allocation.                                                                                                                           | <b>detail extensive</b> |
| <b>MinBW</b>                                        | (Ingress LSP) Configured minimum value of the LSP, in bps.                                                                                                                              | <b>detail extensive</b> |
| <b>MaxBW</b>                                        | (Ingress LSP) Configured maximum value of the LSP, in bps.                                                                                                                              | <b>detail extensive</b> |
| <b>Dynamic MinBW</b>                                | (Ingress LSP) Displays the current dynamically specified minimum bandwidth allocation for the LSP, in bps.                                                                              | <b>detail extensive</b> |
| <b>Dynamic MinBW</b>                                | (Ingress LSP) Displays the current dynamically specified minimum bandwidth allocation for the LSP, in bps.                                                                              | <b>detail extensive</b> |
| <b>AdjustTimer</b>                                  | (Ingress LSP) Configured value for the <b>adjust-timer</b> statement, indicating the total amount of time allowed before bandwidth adjustment will take place, in seconds.              | <b>detail extensive</b> |
| <b>Adjustment Threshold</b>                         | (Ingress LSP) Configured value for the <b>adjust-threshold</b> statement. Specifies how sensitive the automatic bandwidth adjustment for an LSP is to changes in bandwidth utilization. | <b>detail extensive</b> |
| <b>Time for Next Adjustment</b>                     | (Ingress LSP) Time in seconds until the next automatic bandwidth adjustment sample is taken.                                                                                            | <b>detail extensive</b> |
| <b>Time of Last Adjustment</b>                      | (Ingress LSP) Date and time since the last automatic bandwidth adjustment was completed.                                                                                                | <b>detail extensive</b> |
| <b>MaxAvgBW util</b>                                | (Ingress LSP) Current value of the actual maximum average bandwidth utilization, in bps.                                                                                                | <b>detail extensive</b> |
| <b>Overflow limit</b>                               | (Ingress LSP) Configured value of the threshold overflow limit.                                                                                                                         | <b>detail extensive</b> |
| <b>Overflow sample count</b>                        | (Ingress LSP) Current value for the overflow sample count.                                                                                                                              | <b>detail extensive</b> |
| <b>Bandwidth Adjustment in <i>nnn</i> second(s)</b> | (Ingress LSP) Current value of the bandwidth adjustment timer, indicating the amount of time remaining until the bandwidth adjustment will take place, in seconds.                      | <b>detail extensive</b> |
| <b>Underflow limit</b>                              | (Ingress LSP) Configured value of the threshold underflow limit.                                                                                                                        | <b>detail extensive</b> |

Table 71: show mpls lsp Output Fields (*continued*)

| Field Name                                              | Field Description                                                                                                                                                                                                                                                                                                                           | Level of Output         |
|---------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------|
| <b>Underflow sample count</b>                           | (Ingress LSP) Current value for the underflow sample count.                                                                                                                                                                                                                                                                                 | <b>detail extensive</b> |
| <b>Underflow Max AvgBW</b>                              | (Ingress LSP) The highest sample bandwidth among the underflow samples recorded currently. This is the signaling bandwidth if an adjustment occurs because of an underflow.                                                                                                                                                                 | <b>detail extensive</b> |
| <b>Active path indicator</b>                            | (Ingress LSP) A value of * indicates that the path is active. The absence of * indicates that the path is not active. In the following example, "long" is the active path.<br><br>*Primary long<br>Standby short                                                                                                                            | <b>detail extensive</b> |
| <b>Primary</b>                                          | (Ingress LSP) Name of the primary path.                                                                                                                                                                                                                                                                                                     | <b>detail extensive</b> |
| <b>Secondary</b>                                        | (Ingress LSP) Name of the secondary path.                                                                                                                                                                                                                                                                                                   | <b>detail extensive</b> |
| <b>Standby</b>                                          | (Ingress LSP) Name of the path in standby mode.                                                                                                                                                                                                                                                                                             | <b>detail extensive</b> |
| <b>State</b>                                            | (Ingress LSP) State of the path: <b>Up</b> or <b>Dn</b> (down).                                                                                                                                                                                                                                                                             | <b>detail extensive</b> |
| <b>COS</b>                                              | (Ingress LSP) Class-of-service value.                                                                                                                                                                                                                                                                                                       | <b>detail extensive</b> |
| <b>Bandwidth per class</b>                              | (Ingress LSP) Active bandwidth for the LSP path for each MPLS class type, in bps.                                                                                                                                                                                                                                                           | <b>detail extensive</b> |
| <b>Priorities</b>                                       | (Ingress LSP) Configured value of the setup priority and the hold priority respectively (the setup priority is displayed first), where 0 is the highest priority and 7 is the lowest priority. If you have not explicitly configured these values, the default values are displayed (7 for the setup priority and 0 for the hold priority). | <b>detail extensive</b> |
| <b>OptimizeTimer</b>                                    | (Ingress LSP) Configured value of the optimize timer, indicating the total amount of time allowed before path reoptimization, in seconds.                                                                                                                                                                                                   | <b>detail extensive</b> |
| <b>SmartOptimizeTimer</b>                               | (Ingress LSP) Configured value of the smart optimize timer, indicating the total amount of time allowed before path reoptimization, in seconds.                                                                                                                                                                                             | <b>detail extensive</b> |
| <b>Reoptimization in xxx seconds</b>                    | (Ingress LSP) Current value of the optimize timer, indicating the amount of time remaining until the path will be reoptimized, in seconds.                                                                                                                                                                                                  | <b>detail extensive</b> |
| <b>Computed ERO (S [L] denotes strict [loose] hops)</b> | (Ingress LSP) Computed explicit route. A series of hops, each with an address followed by a hop indicator. The value of the hop indicator can be strict (S) or loose (L).                                                                                                                                                                   | <b>detail extensive</b> |
| <b>CSPF metric</b>                                      | (Ingress LSP) Constrained Shortest Path First metric for this path.                                                                                                                                                                                                                                                                         | <b>detail extensive</b> |

Table 71: show mpls lsp Output Fields (*continued*)

| Field Name          | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | Level of Output               |
|---------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------|
| <b>Received RRO</b> | <p>(Ingress LSP) Received record route. A series of hops, each with an address followed by a flag. (In most cases, the received record route is the same as the computed explicit route. If <b>Received RRO</b> is different from <b>Computed ERO</b>, there is a topology change in the network, and the route is taking a detour.) The following flags identify the protection capability and status of the downstream node:</p> <ul style="list-style-type: none"> <li>• <b>0x01</b>—Local protection available. The link downstream from this node is protected by a local repair mechanism. This flag can be set only if the Local protection flag was set in the <b>SESSION_ATTRIBUTE</b> object of the corresponding Path message.</li> <li>• <b>0x02</b>—Local protection in use. A local repair mechanism is in use to maintain this tunnel (usually because of an outage of the link it was routed over previously).</li> <li>• <b>0x03</b>—Combination of <b>0x01</b> and <b>0x02</b>.</li> <li>• <b>0x04</b>—Bandwidth protection. The downstream routing device has a backup path providing the same bandwidth guarantee as the protected LSP for the protected section.</li> <li>• <b>0x08</b>—Node protection. The downstream routing device has a backup path providing protection against link and node failure on the corresponding path section. If the downstream routing device can set up only a link-protection backup path, the <b>Local protection available</b> bit is set but the <b>Node protection</b> bit is cleared.</li> <li>• <b>0x09</b>—Detour is established. Combination of <b>0x01</b> and <b>0x08</b>.</li> <li>• <b>0x10</b>—Preemption pending. The preempting node sets this flag if a pending preemption is in progress for the traffic engine LSP. This flag indicates to the ingress legacy edge router (LER) of this LSP that it should be rerouted.</li> <li>• <b>0x20</b>—Node ID. Indicates that the address specified in the RRO's IPv4 or IPv6 sub-object is a node ID address, which refers to the router address or router ID. Nodes must use the same address consistently.</li> <li>• <b>0xb</b>—Detour is in use. Combination of <b>0x01</b>, <b>0x02</b>, and <b>0x08</b>.</li> </ul> | <b>detail extensive</b>       |
| <b>Index number</b> | (Ingress LSP) Log entry number of each LSP path event. The numbers are in chronological descending order, with a maximum of 50 index numbers displayed.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | <b>extensive</b>              |
| <b>Date</b>         | (Ingress LSP) Date of the LSP event.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | <b>extensive</b>              |
| <b>Time</b>         | (Ingress LSP) Time of the LSP event.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | <b>extensive</b>              |
| <b>Event</b>        | (Ingress LSP) Description of the LSP event.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | <b>extensive</b>              |
| <b>Created</b>      | (Ingress LSP) Date and time the LSP was created.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               | <b>extensive</b>              |
| <b>Resv style</b>   | (Bypass) RSVP reservation style. This field consists of two parts. The first is the number of active reservations. The second is the reservation style, which can be <b>FF</b> (fixed filter), <b>SE</b> (shared explicit), or <b>WF</b> (wildcard filter).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | <b>brief detail extensive</b> |
| <b>Labelin</b>      | Incoming label for this LSP.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | <b>brief detail</b>           |
| <b>Labelout</b>     | Outgoing label for this LSP.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | <b>brief detail</b>           |

Table 71: show mpls lsp Output Fields (*continued*)

| Field Name                     | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       | Level of Output     |
|--------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------|
| <b>LSPname</b>                 | Name of the LSP.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | <b>brief detail</b> |
| <b>Time left</b>               | Number of seconds remaining in the lifetime of the reservation.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | <b>detail</b>       |
| <b>Since</b>                   | Date and time when the RSVP session was initiated.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | <b>detail</b>       |
| <b>Tspec</b>                   | Sender's traffic specification, which describes the sender's traffic parameters.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | <b>detail</b>       |
| <b>Port number</b>             | Protocol ID and sender or receiver port used in this RSVP session.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | <b>detail</b>       |
| <b>PATH rcvfrom</b>            | Address of the previous-hop (upstream) routing device or client, interface the neighbor used to reach this router, and number of packets received from the upstream neighbor.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | <b>detail</b>       |
| <b>PATH sentto</b>             | Address of the next-hop (downstream) routing device or client, interface used to reach this neighbor, and number of packets sent to the downstream routing device.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | <b>detail</b>       |
| <b>RESV rcvfrom</b>            | Address of the previous-hop (upstream) routing device or client, interface the neighbor used to reach this routing device, and number of packets received from the upstream neighbor. The output in this field, which is consistent with that in the <b>PATH rcvfrom</b> field, indicates that the RSVP negotiation is complete.                                                                                                                                                                                                                                                                                                                                                                                                        | <b>detail</b>       |
| <b>Record route</b>            | Recorded route for the session, taken from the record route object.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | <b>detail</b>       |
| <b>Soft preempt</b>            | Number of soft preemptions that occurred on a path and when the last soft preemption occurred. Only successful soft preemptions are counted (those that actually resulted in a new path being used).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | <b>detail</b>       |
| <b>Soft preemption pending</b> | Path is in the process of being soft preempted. This display is removed once the ingress router has calculated a new path.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | <b>detail</b>       |
| <b>MPLS-TE LSP Defaults</b>    | Default settings for MPLS traffic engineered LSPs: <ul style="list-style-type: none"> <li>• <b>LSP Holding Priority</b>—Determines the degree to which an LSP holds on to its session reservation after the LSP has been set up successfully.</li> <li>• <b>LSP Setup Priority</b>—Determines whether a new LSP that preempts an existing LSP can be established.</li> <li>• <b>Hop Limit</b>—Specifies the maximum number of routers the LSP can traverse (including the ingress and egress).</li> <li>• <b>Bandwidth</b>—Specifies the bandwidth in bits per second for the LSP.</li> <li>• <b>LSP Retry Timer</b>—Length of time in seconds that the ingress router waits between attempts to establish the primary path.</li> </ul> | <b>defaults</b>     |

The XML tag name of the **bandwidth** tag under the **auto-bandwidth** tag has been updated to **maximum-average-bandwidth**. You can see the new tag when you issue the **show mpls lsp extensive** command with the **| display xml** pipe option. If you have any scripts that use the **bandwidth** tag, ensure that they are updated to **maximum-average-bandwidth**.



## Sample Output

### show mpls lsp defaults

```
user@host> show mpls lsp defaults
MPLS-TE LSP Defaults
  LSP Holding Priority      0
  LSP Setup Priority       7
  Hop Limit                255
  Bandwidth                 0
  LSP Retry Timer          30 seconds
```

### show mpls lsp descriptions

```
user@host> show mpls lsp descriptions
Ingress LSP: 3 sessions
To          LSP name          Description
10.0.0.195  to-sanjose                to-sanjose-desc
10.0.0.195  to-sanjose-other-desc      other-desc
Total 2 displayed, Up 2, Down 0
```

### show mpls lsp detail

```
user@host> show mpls lsp detail
Ingress LSP: 1 sessions

192.168.0.4
  From: 192.168.0.5, State: Up, ActiveRoute: 0, LSPname: E-D
  ActivePath: (primary)
  LSPtype: Static Configured, Penultimate hop popping
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary                               State: Up
    Priorities: 7 0
    SmartOptimizeTimer: 180
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 30)
  10.0.0.18 S 10.0.0.22 S
    Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
  20=Node-ID):
      10.0.0.18 10.0.0.22
Total 1 displayed, Up 1, Down 0

Egress LSP: 1 sessions

192.168.0.5
  From: 192.168.0.4, LSPstate: Up, ActiveRoute: 0
  LSPname: E-D, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: -
  Resv style: 1 FF, Label in: 3, Label out: -
  Time left: 157, Since: Wed Jul 18 17:55:12 2012
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 46128 protocol 0
  PATH rcvfrom: 10.0.0.18 (lt-1/2/0.17) 3 pkts
  Adspec: received MTU 1500
  PATH sentto: localclient
  RESV rcvfrom: localclient
  Record route: 10.0.0.22 10.0.0.18 <self>
Total 1 displayed, Up 1, Down 0
```

Transit LSP: 0 sessions  
Total 0 displayed, Up 0, Down 0

### show mpls lsp detail (When Egress Protection Is in Standby Mode)

user@host> show mpls lsp detail  
Ingress LSP: 1 sessions

192.168.0.4  
From: 192.168.0.5, State: Up, ActiveRoute: 0, LSPname: E-D  
ActivePath: (primary)  
LSPtype: Static Configured, Ultimate hop popping  
LoadBalance: Random  
Encoding type: Packet, Switching type: Packet, GPID: IPv4  
\*Primary State: Up  
Priorities: 7 0  
SmartOptimizeTimer: 180  
Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 30)  
10.0.0.18 S 10.0.0.22 S  
Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt 20=Node-ID):  
10.0.0.18 10.0.0.22  
11 Sep 20 15:54:35.032 Make-before-break: Switched to new instance  
10 Sep 20 15:54:34.029 Record Route: 10.0.0.18 10.0.0.22  
9 Sep 20 15:54:34.029 Up  
8 Sep 20 15:54:20.271 Originate make-before-break call  
7 Sep 20 15:54:20.271 CSPF: computation result accepted 10.0.0.18 10.0.0.22  
  
6 Sep 20 15:52:10.247 Selected as active path  
5 Sep 20 15:52:10.246 Record Route: 10.0.0.18 10.0.0.22  
4 Sep 20 15:52:10.243 Up  
3 Sep 20 15:52:09.745 Originate Call  
2 Sep 20 15:52:09.745 CSPF: computation result accepted 10.0.0.18 10.0.0.22  
  
1 Sep 20 15:51:39.903 CSPF failed: no route toward 192.168.0.4  
Created: Thu Sep 20 15:51:08 2012  
Total 1 displayed, Up 1, Down 0

Egress LSP: 1 sessions

192.168.0.5  
From: 192.168.0.4, LSPstate: Up, ActiveRoute: 0  
LSPname: E-D, LSPpath: Primary  
Suggested label received: -, Suggested label sent: -  
Recovery label received: -, Recovery label sent: -  
Resv style: 1 FF, Label in: 3, Label out: -  
Time left: 148, Since: Thu Sep 20 15:52:10 2012  
Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500  
Port number: sender 1 receiver 49601 protocol 0  
PATH rcvfrom: 10.0.0.18 (lt-1/2/0.17) 27 pkts  
Adspec: received MTU 1500  
PATH sentto: localclient  
RESV rcvfrom: localclient  
Record route: 10.0.0.22 10.0.0.18 <self>  
Total 1 displayed, Up 1, Down 0

Transit LSP: 0 sessions  
Total 0 displayed, Up 0, Down 0

**show mpls lsp detail (When Egress Protection Is in Effect During a Local Repair)**

```

user@host> show mpls lsp detail
Ingress LSP: 1 sessions

192.168.0.4
  From: 192.168.0.5, State: Up, ActiveRoute: 0, LSPname: E-D
  ActivePath: (primary)
  LSPtype: Static Configured, Penultimate hop popping
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary                               State: Up
    Priorities: 7 0
    SmartOptimizeTimer: 180
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 30)
10.0.0.18 S 10.0.0.22 S
  Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
20=Node-ID):
    10.0.0.18 10.0.0.22
Total 1 displayed, Up 1, Down 0

Egress LSP: 1 sessions

192.168.0.5
  From: 192.168.0.4, LSPstate: Down, ActiveRoute: 0
  LSPname: E-D, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: -
  Resv style: 1 FF, Label in: 3, Label out: -
  Time left: 157, Since: Wed Jul 18 17:55:12 2012
  Tspecc: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 46128 protocol 0
Egress protection PLR as protector: In Use
PATH rcvfrom: 10.0.0.18 (lt-1/2/0.17) 3 pkts
  Adspec: received MTU 1500
  PATH sentto: localclient
  RESV rcvfrom: localclient
  Record route: 10.0.0.22 10.0.0.18 <self>
Total 1 displayed, Up 1, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

**show mpls lsp extensive**

```

user@host> show mpls lsp extensive
Ingress LSP: 4 sessions

1.1.1.1
  From: 3.3.3.3, State: Up, ActiveRoute: 0, LSPname: m120b-to-mx960
  ActivePath: DEFAULT (primary)
  FastReroute desired
  LSPtype: Static Configured, Penultimate hop popping
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary  DEFAULT                               State: Up
    Priorities: 7 0
    SmartOptimizeTimer: 180
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 310)
10.0.35.5 S 10.0.15.1 S
  Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt

```

```
20=Node-ID):
    10.0.34.4(flag=1) 10.0.14.1
50 Sep 13 16:08:19.712 Record Route: 10.0.35.5(flag=1) 10.0.15.1
49 Sep 13 16:08:16.720 Record Route: 10.0.34.4(flag=1) 10.0.14.1
48 Sep 13 16:08:16.699 Fast-reroute Detour Up
47 Sep 13 16:08:13.702 Record Route: 10.0.34.4 10.0.14.1
46 Sep 13 16:08:13.702 Up
45 Sep 13 16:08:13.672 Originate make-before-break call
44 Sep 13 16:08:13.672 CSPF: computation result accepted 10.0.34.4 10.0.14.1

43 Sep 13 16:08:13.672 Selected as active path
42 Sep 13 16:08:13.672 Make-before-break: Switched to new instance
41 Sep 13 16:08:01.685 Pending path switchover, skip CSPF run[3 times]
40 Sep 13 16:06:33.910 Deselected as active
39 Sep 13 16:06:33.910 Pending path switchover, skip CSPF run

38 Sep 13 16:06:19.521 Record Route: 10.0.35.5 10.0.15.1
37 Sep 13 16:06:19.518 ResvTear received
36 Sep 13 16:06:19.518 Fast-reroute Detour Down
35 Sep 13 16:06:16.676 Record Route: 10.0.35.5(flag=1) 10.0.15.1
34 Sep 13 16:06:13.670 Record Route: 10.0.35.5 10.0.15.1
33 Sep 13 16:06:13.670 Up
32 Sep 13 16:06:13.569 Pending path switchover, skip CSPF run

31 Sep 13 16:06:13.569 CSPF: link down/deleted:
10.0.34.3(3.3.3.3:79)(m120-b-re1.00/3.3.3.3)->0.0.0.0(0.0.0.0:0)(m120-b-re1.04/0.0.0.0)

30 Sep 13 16:06:13.552 Pending path switchover, skip CSPF run

29 Sep 13 16:06:13.552 CSPF: link down/deleted:
0.0.0.0(0.0.0.0:0)(m120-b-re1.04/0.0.0.0)->0.0.0.0(4.4.4.4:0)(m10i-a-re0.00/4.4.4.4)

28 Sep 13 16:06:13.549 Originate make-before-break call
27 Sep 13 16:06:13.549 CSPF: computation result accepted 10.0.35.5 10.0.15.1

26 Sep 13 16:06:13.548 Tunnel local repaired
25 Sep 13 16:06:13.546 Record Route: 10.0.23.2 10.0.12.1
24 Sep 13 16:06:13.546 10.0.34.3: Tunnel local repaired
23 Sep 13 16:06:13.546 10.0.34.3: Down
22 Sep 13 16:03:46.842 Fast-reroute Detour Up
21 Sep 13 16:03:42.730 Record Route: 10.0.34.4(flag=1) 10.0.14.1
20 Sep 13 16:03:39.836 Selected as active path
19 Sep 13 16:03:39.834 Record Route: 10.0.34.4 10.0.14.1
18 Sep 13 16:03:39.834 Up
17 Sep 13 16:03:39.698 Originate Call
16 Sep 13 16:03:39.698 CSPF: computation result accepted 10.0.34.4 10.0.14.1

15 Sep 13 16:03:39.697 Clear Call
14 Sep 13 16:03:39.696 Deselected as active
13 Sep 13 16:03:37.837 Record Route: 10.0.34.4 10.0.14.1
12 Sep 13 16:03:32.829 Fast-reroute Detour Down
11 Sep 13 16:02:15.493 Record Route: 10.0.34.4(flag=1) 10.0.14.1
10 Sep 13 16:02:15.486 Fast-reroute Detour Up
9 Sep 13 16:02:12.468 Record Route: 10.0.34.4 10.0.14.1
8 Sep 13 16:02:07.460 Fast-reroute Detour Down
7 Sep 13 15:57:46.741 Fast-reroute Detour Up
6 Sep 13 15:57:40.768 Record Route: 10.0.34.4(flag=1) 10.0.14.1
5 Sep 13 15:57:37.761 Selected as active path
4 Sep 13 15:57:37.760 Record Route: 10.0.34.4 10.0.14.1
3 Sep 13 15:57:37.760 Up
2 Sep 13 15:57:37.733 Originate Call
```

```

1 Sep 13 15:57:37.733 CSPF: computation result accepted 10.0.34.4 10.0.14.1

Created: Fri Sep 13 15:57:38 2013
Total 1 displayed, Up 1, Down 0

Egress LSP: 4 sessions, 6 detours
Total 0 displayed, Up 0, Down 0

Transit LSP: 6 sessions, 1 detours

1.1.1.1
  From: 3.3.3.3, LSPstate: Up, ActiveRoute: 0
  LSPname: m120b-to-mx960, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 302288
  Resv style: 1 FF, Label in: 300416, Label out: 302288
  Time left: 147, Since: Fri Sep 13 16:08:16 2013
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 4 receiver 13955 protocol 0
  Detour branch from 10.0.34.4, to skip 1.1.1.1, Up
    Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
    Adspec: received MTU 1500
    Path MTU: received 0
    PATH rcvfrom: 10.0.34.4 (ge-4/3/7.0) 7 pkts
    Adspec: received MTU 1500 sent MTU 1500
    PATH sentto: 10.0.35.5 (ge-3/1/0.0) 7 pkts
    RESV rcvfrom: 10.0.35.5 (ge-3/1/0.0) 7 pkts
    Explicit route: 10.0.35.5 10.0.15.1
    Record route: 10.0.34.3 10.0.34.4 <self>10.0.35.5 10.0.15.1
  Label in: 300416, Label out: 302288
Total 1 displayed, Up 1, Down 0

```

### show mpls lsp ingress extensive

```

user@host> show mpls lsp ingress extensive
Ingress LSP: 1 sessions

50.0.0.1
  From: 10.0.0.1, State: Up, ActiveRoute: 0, LSPname: test
  ActivePath: (primary)
  LSPtype: Static Configured
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary State: Up
    Priorities: 7 0
    OptimizeTimer: 300
    SmartOptimizeTimer: 180
    Reoptimization in 240 second(s).
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 3)
    1.1.1.2 S 4.4.4.1 S 5.5.5.2 S
    Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
    20=Node-ID):
      1.1.1.2 4.4.4.1 5.5.5.2
    17 Aug 3 13:17:33.601 CSPF: computation result ignored, new path less avail
    bw[3 times]
    16 Aug 3 13:02:51.283 CSPF: computation result ignored, new path no benefit[2
    times]
    15 Aug 3 12:54:36.678 Selected as active path
    14 Aug 3 12:54:36.676 Record Route: 1.1.1.2 4.4.4.1 5.5.5.2
    13 Aug 3 12:54:36.676 Up
    12 Aug 3 12:54:33.924 Deselected as active

```

```

11 Aug 3 12:54:33.924 Originate Call
10 Aug 3 12:54:33.923 Clear Call
9 Aug 3 12:54:33.923 CSPF: computation result accepted 1.1.1.2 4.4.4.1
5.5.5.2
8 Aug 3 12:54:33.922 2.2.2.2: No Route toward dest
7 Aug 3 12:54:28.177 CSPF: computation result ignored, new path no benefit[4
times]
6 Aug 3 12:35:03.830 Selected as active path
5 Aug 3 12:35:03.828 Record Route: 2.2.2.2 3.3.3.2
4 Aug 3 12:35:03.827 Up
3 Aug 3 12:35:03.814 Originate Call
2 Aug 3 12:35:03.814 CSPF: computation result accepted 2.2.2.2 3.3.3.2
1 Aug 3 12:34:34.921 CSPF failed: no route toward 50.0.0.1
Created: Tue Aug 3 12:34:35 2010
Total 1 displayed, Up 1, Down 0

```

### show mpls lsp extensive (automatic bandwidth adjustment enabled)

```

user@host> show mpls lsp extensive
Ingress LSP: 1 sessions

192.168.0.4
  From: 192.168.0.5, State: Up, ActiveRoute: 0, LSPname: E-D
  ActivePath: (primary)
  Node/Link protection desired
  LSPtype: Static Configured, Penultimate hop popping
  LoadBalance: Random
  Autobandwidth
  MinBW: 300bps, MaxBW: 1000bps, Dynamic MinBW: 1000bps
  Adjustment Timer: 300 secs AdjustThreshold: 25%
  Max AvgBW util: 963.739bps, Bandwidth Adjustment in 0 second(s).
  Min BW Adjust Interval: 1000, MinBW Adjust Threshold (in %): 50
  Overflow limit: 0, Overflow sample count: 0
  Underflow limit: 0, Underflow sample count: 9, Underflow Max AvgBW: 614.421bps

  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary State: Up
    Priorities: 7 0
    Bandwidth: 1000bps
    SmartOptimizeTimer: 180
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 30)
10.0.0.18 S 10.0.0.22 S
  Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
20=Node-ID):
    192.168.0.6(flag=0x20) 10.0.0.18(Label=299792) 192.168.0.4(flag=0x20)
10.0.0.22(Label=3)
    12 Apr 30 10:25:17.024 Make-before-break: Switched to new instance
    11 Apr 30 10:25:16.023 Record Route: 192.168.0.6(flag=0x20)
10.0.0.18(Label=299792) 192.168.0.4(flag=0x20) 10.0.0.22(Label=3)
    10 Apr 30 10:25:16.023 Up
    9 Apr 30 10:25:16.023 Automatic Autobw adjustment succeeded: BW changes from
300 bps to 1000 bps
    8 Apr 30 10:25:15.946 Originate make-before-break call
    7 Apr 30 10:25:15.946 CSPF: computation result accepted 10.0.0.18 10.0.0.22

    6 Apr 30 10:16:42.891 Selected as active path
    5 Apr 30 10:16:42.891 Record Route: 192.168.0.6(flag=0x20)
10.0.0.18(Label=299776) 192.168.0.4(flag=0x20) 10.0.0.22(Label=3)
    4 Apr 30 10:16:42.890 Up
    3 Apr 30 10:16:42.828 Originate Call
    2 Apr 30 10:16:42.828 CSPF: computation result accepted 10.0.0.18 10.0.0.22

```

```

    1 Apr 30 10:16:14.064 CSPF: could not determine self[2 times]
Created: Tue Apr 30 10:15:16 2013
Total 1 displayed, Up 1, Down 0

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

### show mpls lsp bypass extensive

```

user@host # show mpls lsp bypass extensive

Ingress LSP: 1 sessions

2.2.2.2
  From: 1.1.1.1, LSPstate: Up, ActiveRoute: 0
  LSPname: Bypass->1.1.2.2
  LSPtype: Static Configured
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 300032
  Resv style: 1 SE, Label in: -, Label out: 300032
  Time left: -, Since: Tue Dec 3 15:19:49 2013
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 55750 protocol 0
  Type: Bypass LSP
    Number of data route tunnel through: 1
    Number of RSVP session tunnel through: 0
  PATH rcvfrom: localclient
  Adspec: sent MTU 1500
  Path MTU: received 1500
  PATH sentto: 1.1.5.2 (lt-1/2/0.15) 1221 pkts
  RESV rcvfrom: 1.1.5.2 (lt-1/2/0.15) 1221 pkts, Entropy label: No
  Explct route: 1.1.5.2 1.2.5.1
  Record route: <self> 1.1.5.2 1.2.5.1
+   4 Dec 3 15:19:49 Record Route: 1.1.5.2 1.2.5.1
+   3 Dec 3 15:19:49 Up
+   2 Dec 3 15:19:49 CSPF: computation result accepted
+   1 Dec 3 15:19:47 Originate Call
Total 1 displayed, Up 1, Down 0
Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0
Transit LSP: 0 sessions

```

### show mpls lsp p2mp

```

user@host> show mpls lsp p2mp
Ingress LSP: 2 sessions
P2MP name: p2mp-lsp1, P2MP branch count: 1
To          From          State Rt P ActivePath      LSPname
10.255.245.51 10.255.245.50 Up    0 * path1         p2mp-branch-1
P2MP name: p2mp-lsp2, P2MP branch count: 1
To          From          State Rt P ActivePath      LSPname
10.255.245.51 10.255.245.50 Up    0 * path1         p2mp-st-br1
Total 2 displayed, Up 2, Down 0

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

Transit LSP: 0 sessions  
Total 0 displayed, Up 0, Down 0

### show mpls lsp p2mp detail

```
user@host> show mpls lsp p2mp detail
Ingress LSP: 2 sessions
P2MP name: p2mp-lsp1, P2MP branch count: 1

10.255.245.51
  From: 10.255.245.50, State: Up, ActiveRoute: 0, LSPname: p2mp-branch-1
  ActivePath: path1 (primary)
  P2MP name: p2mp-lsp1
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary path1 State: Up
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 25)
  192.168.208.17 S
    Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):

      192.168.208.17
P2MP name: p2mp-lsp2, P2MP branch count: 1

10.255.245.51
  From: 10.255.245.50, State: Up, ActiveRoute: 0, LSPname: p2mp-st-br1
  ActivePath: path1 (primary)
  P2MP name: p2mp-lsp2
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary path1 State: Up
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 25)
  192.168.208.17 S
    Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt):

      192.168.208.17
Total 2 displayed, Up 2, Down 0
```

### show mpls lsp detail count-active-routes

```
user@host> show mpls lsp detail count-active-routes
Ingress LSP: 1 sessions

213.119.192.2
  From: 156.154.162.128, State: Up, ActiveRoute: 1, LSPname: to-lahore
  ActivePath: (primary)
  LSPtype: Static Configured
  LoadBalance: Random
  Autobandwidth
  MinBW: 5Mbps MaxBW: 250Mbps
  AdjustTimer: 300 secs
  Max AvgBW util: 0bps, Bandwidth Adjustment in 102 second(s).
  Overflow limit: 0, Overflow sample count: 0
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary State: Up
    Priorities: 7 0
    Bandwidth: 5Mbps
    SmartOptimizeTimer: 180
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 4)
  10.252.0.177 S
    Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
    20=Node-ID):
```



```

10.252.0.177
Total 1 displayed, Up 1, Down 0

Egress LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit LSP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

### show mpls lsp statistics extensive

```

user@host> show mpls lsp statistics extensive
Ingress LSP: 1 sessions

192.168.0.4
  From: 192.168.0.5, State: Up, ActiveRoute: 0, LSPName: E-D
  Statistics: Packets 302, Bytes 28992
  Aggregate statistics: Packets 302, Bytes 28992
  ActivePath: (primary)
  LSPType: Static Configured, Penultimate hop popping
  LoadBalance: Random
  Encoding type: Packet, Switching type: Packet, GPID: IPv4
  *Primary                               State: Up
    Priorities: 7 0
    SmartOptimizeTimer: 180
    Computed ERO (S [L] denotes strict [loose] hops): (CSPF metric: 30)
10.0.0.18 S 10.0.0.22 S
  Received RRO (ProtectionFlag 1=Available 2=InUse 4=B/W 8=Node 10=SoftPreempt
20=Node-ID):
    10.0.0.18 10.0.0.22
      6 Oct  3 11:18:28.281 Selected as active path
      5 Oct  3 11:18:28.281 Record Route:  10.0.0.18 10.0.0.22
      4 Oct  3 11:18:28.280 Up
      3 Oct  3 11:18:27.995 Originate Call
      2 Oct  3 11:18:27.995 CSPF: computation result accepted  10.0.0.18 10.0.0.22

      1 Oct  3 11:17:59.118 CSPF failed: no route toward 192.168.0.4[2 times]
  Created: Wed Oct  3 11:17:01 2012
Total 1 displayed, Up 1, Down 0

```

## show mpls lsp autobandwidth

|                                 |                                                                                                                                                                                                                                                                                                                                                                           |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | show mpls lsp autobandwidth<br><brief   detail   extensive><br><logical-system (all   <i>logical-system-name</i> )>                                                                                                                                                                                                                                                       |
| <b>Release Information</b>      | Command introduced in Junos OS Release 11.4.<br>Command introduced in Junos OS Release 13.2X51-D15 for the QFX Series.                                                                                                                                                                                                                                                    |
| <b>Description</b>              | Display automatic bandwidth information for the LSP(s).                                                                                                                                                                                                                                                                                                                   |
| <b>Options</b>                  | <p><b>brief   detail   extensive</b> — (Optional) Display the specified level of output. The extensive option displays the same information as the detail option, but covers the most recent 50 events.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b> — (Optional) Perform this operation on all logical systems or on a particular logical system.</p> |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">show mpls lsp on page 1786</a></li> </ul>                                                                                                                                                                                                                                                                            |
| <b>List of Sample Output</b>    | <a href="#">show mpls lsp autobandwidth on page 1805</a>                                                                                                                                                                                                                                                                                                                  |
| <b>Output Fields</b>            | <a href="#">Table 72 on page 1804</a> describes the output fields for the <b>show mpls lsp autobandwidth</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                                                             |

Table 72: show mpls lsp autobandwidth Output Fields

| Field Name            | Field Description                                                                        | Level of Output  |
|-----------------------|------------------------------------------------------------------------------------------|------------------|
| To                    | Destination (egress routing device) of the session.                                      | All Levels       |
| From                  | Source (ingress routing device) of the session.                                          | All Levels       |
| LSPname               | Name of the LSP.                                                                         | All Levels       |
| Min BW                | (Ingress LSP) Configured minimum value of the LSP, in bps.                               | detail extensive |
| Max BW                | (Ingress LSP) Configured maximum value of the LSP, in bps.                               | detail extensive |
| Max AvgBW util        | (Ingress LSP) Current value of the actual maximum average bandwidth utilization, in bps. | detail extensive |
| Overflow limit        | (Ingress LSP) Configured value of the threshold overflow limit.                          | detail extensive |
| Overflow sample count | (Ingress LSP) Current value for the overflow sample count.                               | detail extensive |
| Underflow limit       | (Ingress LSP) Configured value of the threshold underflow limit.                         | detail extensive |

Table 72: show mpls lsp autobandwidth Output Fields (*continued*)

| Field Name                      | Field Description                                                                                                                                                                | Level of Output         |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------|
| <b>Underflow sample count</b>   | (Ingress LSP) Current value for the underflow sample count.                                                                                                                      | <b>detail extensive</b> |
| <b>Adjustment Timer</b>         | (Ingress LSP) Configured value for the adjust-timer statement, indicating the total amount of time allowed before bandwidth adjustment will take place, in seconds.              | <b>detail extensive</b> |
| <b>Adjustment Threshold</b>     | (Ingress LSP) Configured value for the adjust-threshold statement. Specifies how sensitive the automatic bandwidth adjustment for an LSP is to changes in bandwidth utilization. | <b>detail extensive</b> |
| <b>Time for Next Adjustment</b> | (Ingress LSP) Time in seconds until the next automatic bandwidth adjustment sample is taken.                                                                                     | <b>detail extensive</b> |
| <b>Time of Last Adjustment</b>  | (Ingress LSP) Date and time since the last automatic bandwidth adjustment was completed.                                                                                         | <b>detail extensive</b> |
| <b>Last BW</b>                  | Previous active bandwidth of the LSP.                                                                                                                                            | <b>detail extensive</b> |
| <b>Last Requested BW</b>        | Bandwidth requested in the previous automatic bandwidth adjustment.                                                                                                              | <b>detail extensive</b> |
| <b>Last Signaled BW</b>         | Bandwidth signaled in the previous automatic bandwidth adjustment.                                                                                                               | <b>detail extensive</b> |
| <b>Highest Watermark BW</b>     | Maximum bandwidth used by the LSP.                                                                                                                                               | <b>detail extensive</b> |
| <b>Total AutoBw Adjustments</b> | Total number of attempts to adjust automatic bandwidth including failed and successful adjustments.                                                                              | <b>detail extensive</b> |
| <b>Successful Adjustments</b>   | Number of successful automatic bandwidth adjustments.                                                                                                                            | <b>detail extensive</b> |
| <b>Failed Adjustments</b>       | Number of failed automatic bandwidth adjustments.                                                                                                                                | <b>detail extensive</b> |

## Sample Output

### show mpls lsp autobandwidth

```

user@host> show mpls lsp autobandwidth extensive
To: 10.255.106.133,
From: 10.255.106.135, LSPname: r0-r1
Min BW: 100kbps, Max BW: 0bps, Max AvgBW util: 2.33249Mbps
Overflow limit: 0, Overflow sample count: 0
Underflow limit: 0, Underflow sample count: 0
Adjustment Timer: 300 sec, Adjustment Threshold: 0
Time for Next Adjustment: 23 sec, Time of Last Adjustment: Fri Jun 3 21:05:37
2011
Last BW: 100kbps, Last Requested BW: 2.2169Mbps, Last Signaled BW: 2.2169Mbps,
Highest Watermark BW: 2.33249Mbps
Total AutoBw Adjustments: 1, Successful Adjustments: 1, Failed Adjustments: 0

```



## show mpls path

**List of Syntax** [Syntax on page 1807](#)  
[Syntax \(EX Series Switches\) on page 1807](#)

**Syntax** show mpls path  
 <instance *instance-name*>  
 <logical-system (all | *logical-system-name*)>  
 <path-name>

**Syntax (EX Series Switches)** show mpls path  
 <path-name>

**Release Information** Command introduced before Junos OS Release 7.4.  
 Command introduced in Junos OS Release 9.5 for EX Series switches.  
**instance** *instance-name* option added in Junos OS Release 15.1.

**Description** Display dynamic Multiprotocol Label Switching (MPLS) label-switched paths (LSPs).

**Options** **none**—Display standard information about all MPLS LSPs.

**instance** *instance-name*—(Optional) Display the dynamic MPLS LSP for the specified instance. If *instance-name* is omitted, dynamic MPLS LSP for the master instance is displayed.

**logical-system** (all | *logical-system-name*)—(Optional) Perform this operation on all logical systems or on a particular logical system.

**path-name**—(Optional) Display information about the specified LSP only.

**Required Privilege Level** view

**List of Sample Output** [show mpls path on page 1808](#)

**Output Fields** [Table 73 on page 1807](#) describes the output fields for the **show mpls path** command. Output fields are listed in the approximate order in which they appear.

**Table 73: show mpls path Output Fields**

| Field Name                  | Field Description                                                 |
|-----------------------------|-------------------------------------------------------------------|
| <b>Path name</b>            | Information about ingress LSPs. Each path has one line of output. |
| <b>Address</b>              | Addresses of the routing devices that form the LSP.               |
| <b>Strict/loose address</b> | Whether the address is configured as a strict or loose address.   |

## Sample Output

### show mpls path

```
user@host> show mpls path
Path name      Address          Strict/loose address
p1             123.456.55.6    Strict
               123.456.1.6     Loose
p2             191.456.1.4     Strict
```

## show mpls srlg

**Syntax** `show mpls srlg`  
`<logical-systems (all | logical-system-name)>`

**Release Information** Command introduced before Junos OS Release 11.4.

**Description** Display Shared Risk Link Group (SRLG) cost and value configuration information.



**NOTE:** If an SRLG is associated with a link that is used by an ingress LSP in the router, then on deleting the SRLG configuration from that router, the SRLG gets removed from the SRLG table only on the next reoptimization of the LSP. Until then, the output of the run `show mpls srlg` command displays `Unknown-XXX` instead of the SRLG name and a non zero `srlg-cost` for that SRLG.

**Options** `logical-system (all | logical-system-name)`—(Optional) View SRLG configuration information for all logical systems or a particular logical system.

**Required Privilege Level** view

**Related Documentation** • [Example: Configuring SRLG on page 92](#)

**Output Fields** [Table 74 on page 1809](#) lists the output fields for the `show mpls srlg` command. Output fields are listed in the approximate order in which they appear.

**Table 74: show mpls srlg Output Fields**

| Field Name | Field Description                                                          |
|------------|----------------------------------------------------------------------------|
| SRLG       | Name of the SRLG.                                                          |
| Value      | A group ID for the SRLG ranging from 1 through 4294967295.                 |
| Cost       | A cost for the Shared Risk Link Group (SRLG) ranging from 1 through 65535. |

## Sample Output

```
user@host> show mpls srlg
```

```
SRLG      Value      Cost
srlg-a    101        10
```

## show mpls static-lsp

---

**Syntax**    `show mpls static-lsp`  
              `<brief | detail | extensive | terse>`  
              `<bypass>`  
              `<descriptions>`  
              `<down | up>`  
              `<ingress>`  
              `<instance instance-name>`  
              `<logical-system (all | logical-system-name)>`  
              `<lsp-type>`  
              `<name name>`  
              `<statistics>`  
              `<transit>`

**Release Information**    Command introduced in Junos OS Release 10.1.  
                              Command updated in Junos OS Release 14.1X53-D25 to accommodate the stitching feature of MPLS.  
                              Statement introduced in Junos OS Release 13.2X51-D15 for the QFX Series.  
                              Statement introduced in Junos OS Release 14.1X53-D30 for QFX Virtual Chassis and Virtual Chassis Fabric.

**Description**    Display information about configured and active static Multiprotocol Label Switching (MPLS) label-switched paths (LSPs).

**Options**    **none**—Display standard information about all configured and active static MPLS LSPs.

**brief | detail | extensive | terse**—(Optional) Display the specified level of output. The **extensive** option displays the same information as the **detail** option, but covers the most recent 50 events.

**bypass**—(Optional) Display LSPs used for protecting other static LSPs.

**descriptions**—(Optional) Display the MPLS static LSP descriptions. To view this information, you must configure the description statement at the **[edit protocols mpls static-label-switched-path *path-name* bypass]**, **[edit protocols mpls static-label-switched-path *path-name* ingress]**, or **[edit protocols mpls static-label-switched-path *path-name* transit *incoming-label*]** hierarchy levels. Only static LSPs with a description are displayed.

**down | up**—(Optional) Display only static LSPs that are inactive or active, respectively.

**instance *instance-name***—(Optional) Display information about all configured and active static MPLS LSPs for the specified routing instance. If ***instance-name*** is omitted, information about all configured and active static MPLS LSPs for the master instance is displayed.

**logical-system (all | *logical-system-name*)**—(Optional) Perform this operation on all logical systems or on a particular logical system.

***lsp-type***—(Optional) Display information about a particular LSP type:



- **bypass**—Sessions for bypass LSPs.
- **ingress**—Sessions that originate from this routing device.
- **transit**—Sessions that pass through this routing device.

**name *name***—(Optional) Display information about the specified static LSP or group of LSPs.

**statistics**—(Optional) Display accounting information about static LSPs.

**transit**—(Optional) Display static LSPs transiting this routing device.

**Required Privilege Level** view

**List of Sample Output** [show mpls static-lsp extensive on page 1812](#)  
[show mpls static-lsp statistics ingress on page 1812](#)  
[show mpls static-lsp \(when MPLS stitching is used\) on page 1812](#)

**Output Fields** [Table 62 on page 1765](#) describes the output fields for the **show mpls static-lsp** command. Output fields are listed in the approximate order in which they appear.

**Table 75: show mpls static-lsp Output Fields**

| Field Name                     | Field Description                                                                                                                                                                             | Level of Output          |
|--------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------|
| <b>Ingress LSPs</b>            | Information about the static LSPs on the ingress routing device. Each session has one line of output.                                                                                         | All levels               |
| <b>Transit LSPs</b>            | Number of static LSPs on the transit routing devices and the state of these paths. MPLS learns this information by querying RSVP, which holds all the transit and egress session information. | All levels               |
| <b>Bypass LSPs</b>             | Information about the bypass LSPs configured on the routing device. Each session has one line of output.                                                                                      | All levels               |
| <b>LSPname</b>                 | Name of the static LSP.                                                                                                                                                                       | All levels               |
| <b>To</b>                      | Destination (egress routing device) of the session.                                                                                                                                           | All levels               |
| <b>State</b>                   | State of the static LSP handled by this RSVP session: <b>Up</b> , <b>Dn</b> (down), or <b>Restart</b> .                                                                                       | All levels               |
| <b>Packets</b>                 | Number of packet transiting the static LSP ( <b>statistics</b> option only).                                                                                                                  | All levels               |
| <b>Bytes</b>                   | Number of bytes transiting the static LSP ( <b>statistics</b> option only).                                                                                                                   | All levels               |
| <b>Nexthop</b>                 | IP address for the next-hop router for the static LSP.                                                                                                                                        | <b>detail, extensive</b> |
| <b>Bypass</b>                  | (Bypass LSP) Destination address (egress routing device) for the bypass LSP.                                                                                                                  | All levels               |
| <b>Link protection desired</b> | Link protection has been requested by the ingress routing device.                                                                                                                             | <b>detail, extensive</b> |

Table 75: show mpls static-lsp Output Fields (*continued*)

| Field Name            | Field Description                                                                                                                                                                                                                   | Level of Output          |
|-----------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------|
| <b>LabelOperation</b> | Label operation to perform: <b>Push</b> , <b>Pop</b> , <b>Swap</b> .                                                                                                                                                                | <b>detail, extensive</b> |
| <b>Outgoing-label</b> | Outgoing label to use for the MPLS packet in either push or swap label operations.                                                                                                                                                  | <b>detail, extensive</b> |
| <b>Created</b>        | (Ingress LSP) Date and time the static LSP was created.                                                                                                                                                                             | <b>extensive</b>         |
| <b>Bandwidth</b>      | Bandwidth configured for the static LSP.                                                                                                                                                                                            | <b>detail, extensive</b> |
| <b>Resv style</b>     | (Bypass) RSVP reservation style. This field consists of two parts: the number of active reservations and the reservation style, which can be <b>FF</b> (fixed filter), <b>SE</b> (shared explicit), or <b>WF</b> (wildcard filter). | All levels               |

## Sample Output

### show mpls static-lsp extensive

```

user@host> show mpls static-lsp extensive
Ingress LSPs:
LSPname: alpha-to-beta, To: 192.168.14.1
  State: Dn
  Nexthop: 192.168.10.1
  LabelOperation: Push, Outgoing-label: 1000001
  Created: Thu Jan 14 16:44:43 2010
  Bandwidth: 0 bps
Total 1, displayed 1, Up 0, Down 1

Transit LSPs:
Total 0, displayed 0, Up 0, Down 0

Bypass LSPs:
Total 0, displayed 0, Up 0, Down 0

```

### show mpls static-lsp statistics ingress

```

user@host> show mpls static-lsp statistics ingress
Ingress LSPs:
LSPname                To           State    Packets    Bytes
alpha-to-beta          192.168.14.1 Dn        NA         NA
Total 1, displayed 1, Up 0, Down 1

```

### show mpls static-lsp (when MPLS stitching is used)

The show mpls static-lsp command was extended in Junos release 14.1X53-D25 to accommodate the stitching feature of MPLS. This example shows the LSP state as 'InProgress' because the LSP is waiting for protocol next-hop resolution. For more information, see

```

user@host> show mpls static-lsp
Ingress LSPs:
Total 0, displayed 0, Up 0, Down 0
Transit LSPs: LSPname                Incoming-label  State

```

|        |         |            |
|--------|---------|------------|
| to-165 | 1000000 | InProgress |
|--------|---------|------------|

## show performance-monitoring mpls lsp

---


|                                 |                                                                                                                                                                                                                                                                               |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | show performance-monitoring mpls lsp<br><brief   detail   extensive><br><name <i>lsp name</i> >                                                                                                                                                                               |
| <b>Release Information</b>      | Command introduced in Junos OS Release 15.1.                                                                                                                                                                                                                                  |
| <b>Description</b>              | Display the following performance monitoring data: <ul style="list-style-type: none"><li>• Packet loss measurement</li><li>• Packet throughput measurement</li><li>• Two-way channel delay</li><li>• Round-trip delay</li><li>• Inter-packet delay variation (IPDV)</li></ul> |
| <b>Options</b>                  | <b>none</b> —Display standard information performance monitoring data.<br><b>brief   detail   extensive</b> —(Optional) Display the specified level of output.                                                                                                                |
|                                 | <div> <b>NOTE:</b> The extensive option displays the same information as the detail option.</div>                                                                                          |
|                                 | <b>name <i>lsp name</i></b> —(Optional) Display information about the specified LSP.                                                                                                                                                                                          |
| <b>Required Privilege Level</b> | View                                                                                                                                                                                                                                                                          |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">clear performance-monitoring mpls lsp on page 1721</a></li><li>• <a href="#">performance-monitoring (Protocols MPLS) on page 1493</a></li></ul>                                                                           |
| <b>List of Sample Output</b>    | <a href="#">show performance-monitoring mpls lsp on page 1816</a><br><a href="#">show performance-monitoring mpls lsp detail on page 1817</a>                                                                                                                                 |
| <b>Output Fields</b>            | <a href="#">Table 76 on page 1815</a> describes the output fields for the <b>show performance-monitoring mpls lsp</b> command. Output fields are listed in the approximate order in which they appear.                                                                        |

Table 76: show performance-monitoring mpls lsp Output Fields

| Field Name            | Display Data                    |                           | Field Description                                                                                                | Level of Output |
|-----------------------|---------------------------------|---------------------------|------------------------------------------------------------------------------------------------------------------|-----------------|
| Session               | Total                           |                           | Total number of performance monitoring sessions created.                                                         | All Levels      |
|                       | Up                              |                           | Number of performance monitoring sessions that are up and running.                                               | All Levels      |
|                       | Down                            |                           | Number of performance monitoring sessions that are down.                                                         | All Levels      |
| LSP name              |                                 |                           | Name of the LSP.                                                                                                 | All Levels      |
| Loss measurement Data | Traffic-class                   |                           | Traffic class for which loss measurement is performed.                                                           | All Levels      |
|                       | Queries sent                    |                           | Total number of queries sent for loss measurement.                                                               | All Levels      |
|                       | Responses received              |                           | Total number of responses received for loss measurement queries.                                                 | All Levels      |
|                       | Responses dropped due to errors |                           | Total number of loss measurement responses dropped due to errors.                                                | All Levels      |
|                       | Queries timeout                 |                           | Number of timed out queries sent for loss measurement.                                                           | All Levels      |
|                       | Forward loss measurement        | Average packet loss       | Average packet loss (total loss of packets divided by the total number of samples used since the session is up). | All Levels      |
|                       |                                 | Average packet throughput | Total number of packets sent divided by the time considered for measurement.                                     | All Levels      |
|                       | Reverse loss measurement        | Average packet loss       | Average packet loss (total loss of packets divided by the total number of samples used since the session is up). | All Levels      |
|                       |                                 | Average packet throughput | Total number of packets sent divided by the time considered for measurement.                                     | All Levels      |

Table 76: show performance-monitoring mpls lsp Output Fields (*continued*)

| Field Name             | Display Data                    | Field Description                                                                            | Level of Output          |
|------------------------|---------------------------------|----------------------------------------------------------------------------------------------|--------------------------|
| Delay measurement Data | Traffic-class                   | Traffic class for which delay measurement is performed.                                      | All Levels               |
|                        | Queries sent                    | Total number of queries sent for delay measurement.                                          | All Levels               |
|                        | Responses received              | Total number of responses received for delay measurement queries.                            | All Levels               |
|                        | Responses dropped due to errors | Total number of delay measurement responses dropped due to errors.                           | All Levels               |
|                        | Queries timeout                 | Number of timed out queries sent for delay measurement.                                      | All Levels               |
|                        | Best 2-way channel delay        | Best available two-way channel delay.                                                        | All Levels               |
|                        | Worst 2-way channel delay       | Worst available two-way channel delay.                                                       | All Levels               |
|                        | Best round trip time            | Best available round-trip time.                                                              | All Levels               |
|                        | Worst round trip time           | Worst available round-trip time.                                                             | All Levels               |
|                        | Avg absolute fw delay variation | Average of the variation in forward delay.                                                   | All Levels               |
|                        | Avg absolute rv delay variation | Average of the variation in reverse delay.                                                   | All Levels               |
|                        | Two-way channel delay           | Sum of packet delays, excluding the processing time of the remote provider edge (PE) router. | <b>detail, extensive</b> |
|                        | Two-way round trip delay        | Total time taken for completing round-trip of packet.                                        | <b>detail, extensive</b> |

## Sample Output

### show performance-monitoring mpls lsp

```

user@host> show performance-monitoring mpls lsp
Session Total: 3 Up: 3 Down: 0
LSP name:to_bad, PM State:Up
Loss measurement Data:
Duration: 00:04:43
Traffic-class: None
Queries sent: 282
Responses received: 282

```

```

Responses dropped due to errors: 0
Queries timeout: 0
Forward loss measurement:
  Average packet loss: 0
  Average packet throughput: 554338
Reverse loss measurement:
  Average packet loss: 0
  Average packet throughput: 1352077
LSP name:to_bad, PM State:Up
Delay measurement Data:
  Duration: 00:04:43
  Traffic-class: 0
  Queries sent: 282
  Responses received: 282
  Responses dropped due to errors: 0
  Queries timeout: 0
  Best 2-way channel delay: 72 usecs
  Worst 2-way channel delay: 365 usecs
  Best round trip time: 843 usecs
  Worst round trip time: 105523 usecs
  Avg absolute fw delay variation: 1619 usecs
  Avg absolute rv delay variation: 1619 usecs
LSP name:to_bad, PM State:Up
Loss measurement Data:
  Duration: 00:04:43
  Traffic-class: None
  Queries sent: 282
  Responses received: 282
  Responses dropped due to errors: 0
  Queries timeout: 0
  Forward loss measurement:
    Average packet loss: 0
    Average packet throughput: 553927
  Reverse loss measurement:
    Average packet loss: 0
    Average packet throughput: 1351531
Delay measurement Data:
  Best 2-way channel delay: 76 usecs
  Worst 2-way channel delay: 368 usecs
  Best round trip time: 1082 usecs
  Worst round trip time: 126146 usecs
  Avg absolute fw delay variation: 1618 usecs
  Avg absolute rv delay variation: 1619 usecs

```

#### show performance-monitoring mpls lsp detail

```

user@host> show performance-monitoring mpls lsp detail
Session Total: 3 Up: 3 Down: 0
LSP name:to_bad, PM State:Up
Loss measurement Data:
  Duration: 00:04:53
  Traffic-class: None
  Queries sent: 292
  Responses received: 292
  Responses dropped due to errors: 0
  Queries timeout: 0
  Forward loss measurement:
    Average packet loss: 0
    Average packet throughput: 554486
  Packet loss samples:
    00000000 00000000 00000000 00000000 00000000

```

```
Packet throughput samples:
00554002 00557550 00557717 00558822 00557107
Reverse loss measurement:
Average packet loss: 0
Average packet throughput: 1352406
Packet loss samples:
00000000 00000000 00000000 00000000 00000000
Packet throughput samples:
01351088 01365948 01353926 01362976 01358788
LSP name:to_bad, PM State:Up
Delay measurement Data:
Duration: 00:04:53
Traffic-class: 0
Queries sent: 292
Responses received: 292
Responses dropped due to errors: 0
Queries timeout: 0
Best 2-way channel delay: 72 usecs
Worst 2-way channel delay: 365 usecs
Best round trip time: 843 usecs
Worst round trip time: 105523 usecs
Avg absolute fw delay variation: 1683 usecs
Avg absolute rv delay variation: 1684 usecs
Two-way channel delay:
73 usecs 73 usecs 73 usecs 73 usecs 72 usecs
Two-way round trip delay:
922 usecs 2234 usecs 884 usecs 1121 usecs 1169 usecs
LSP name:to_bad, PM State:Up
Loss measurement Data:
Duration: 00:04:53
Traffic-class: None
Queries sent: 292
Responses received: 292
Responses dropped due to errors: 0
Queries timeout: 0
Forward loss measurement:
Average packet loss: 0
Average packet throughput: 554089
Packet loss samples:
00000000 00000000 00000000 00000000 00000000
Packet throughput samples:
00554007 00557548 00557713 00558547 00557385
Reverse loss measurement:
Average packet loss: 0
Average packet throughput: 1351914
Packet loss samples:
00000000 00000000 00000000 00000000 00000000
Packet throughput samples:
01358923 01352980 01362436 01223841 01496977
Delay measurement Data:
Best 2-way channel delay: 76 usecs
Worst 2-way channel delay: 368 usecs
Best round trip time: 1082 usecs
Worst round trip time: 126146 usecs
Avg absolute fw delay variation: 1682 usecs
Avg absolute rv delay variation: 1683 usecs
Two-way channel delay:
76 usecs 76 usecs 76 usecs 77 usecs 77 usecs
Two-way round trip delay:
107496 usecs 102369 usecs 104048 usecs 1433 usecs 103306 usecs
```





## show ted database

|                                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>List of Syntax</b>              | <a href="#">Syntax on page 1820</a><br><a href="#">Syntax (EX Series Switches) on page 1820</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Syntax</b>                      | <pre>show ted database &lt;brief   detail   extensive&gt; &lt;instance <i>instance-name</i>&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt; &lt;<i>system-name</i>&gt;</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Syntax (EX Series Switches)</b> | <pre>show ted database &lt;brief   detail   extensive&gt; &lt;<i>system-name</i>&gt;</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Release Information</b>         | <p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.5 for EX Series switches.</p> <p><b>instance <i>instance-name</i></b> option added in Junos OS Release 15.1.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Description</b>                 | Display the entries in the Multiprotocol Label Switching (MPLS) traffic engineering database.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Options</b>                     | <p><b>none</b>—Display standard information about all entries in the traffic engineering database.</p> <p><b>brief   detail   extensive</b>—(Optional) Display the specified level of output.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Display routing instance information for the specified instance. If <i>instance-name</i> is omitted, information is displayed for the master instance.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p><b><i>system-name</i></b>—(Optional) Display traffic engineering database information for a particular system.</p> |
| <b>Required Privilege Level</b>    | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>List of Sample Output</b>       | <a href="#">show ted database brief on page 1823</a><br><a href="#">show ted database detail on page 1823</a><br><a href="#">show ted database extensive on page 1824</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Output Fields</b>               | <p><a href="#">Table 77 on page 1820</a> describes the output fields for the <b>show ted database</b> command. Output fields are listed in the approximate order in which they appear.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |

**Table 77: show ted database Output Fields**

| Field Name   | Field Description                                                               | Level of Output |
|--------------|---------------------------------------------------------------------------------|-----------------|
| TED database | Number of nodes and pseudonodes participating in IS-IS and OSPF domain routing. | All levels      |

Table 77: show ted database Output Fields (*continued*)

| Field Name                     | Field Description                                                                                                                                                                                                                                                                           | Level of Output         |
|--------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------|
| ID                             | Hostname and address of the node that the link is coming from. An address of .00 indicates that the node is the routing device itself. An address in the range 0.01 through 0.FF indicates that the node is a pseudonode. If the node contains a router ID, it is displayed in parentheses. | <b>brief</b>            |
| NodeID                         | Hostname and address of the node that the link is coming from. An address of .00 indicates that the node is the routing device itself. An address in the range 0.01 through 0.FF indicates that the node is a pseudonode.                                                                   | <b>extensive</b>        |
| Type                           | Type of node. It can be either <b>Rtr</b> (router) or <b>Net</b> (pseudonode).                                                                                                                                                                                                              | All levels              |
| Age(s)                         | How long since the node was last refreshed, in seconds.                                                                                                                                                                                                                                     | All levels              |
| LnkIn                          | Number of nodes pointing toward this node.                                                                                                                                                                                                                                                  | All levels              |
| LnkOut                         | Number of nodes to which this node points.                                                                                                                                                                                                                                                  | All levels              |
| Protocol                       | Protocol that reported the node information: <ul style="list-style-type: none"> <li>• <b>IS-IS(1)</b>—IS-IS Level 1.</li> <li>• <b>IS-IS(2)</b>—IS-IS Level 2.</li> <li>• <b>OSPF (area-number)</b>—OSPF from the specified area.</li> </ul>                                                | All levels              |
| To                             | Address on the far end of a link.                                                                                                                                                                                                                                                           | <b>detail extensive</b> |
| Local                          | Address of the local interface being used to reach the remote node.                                                                                                                                                                                                                         | <b>detail extensive</b> |
| Remote                         | Address of the interface on the remote node.                                                                                                                                                                                                                                                | <b>detail extensive</b> |
| Local interface index          | The interface indexes enable Junos OS to support unnumbered extensions for IS-IS, as described in RFC 4205.                                                                                                                                                                                 | <b>detail extensive</b> |
| Remote interface index         | The interface indexes enable Junos OS to support unnumbered extensions for IS-IS, as described in RFC 4205.                                                                                                                                                                                 | <b>detail extensive</b> |
| Metric                         | Configured traffic engineering metric.                                                                                                                                                                                                                                                      | <b>extensive</b>        |
| IGP metric                     | Configured interior gateway protocol metric.                                                                                                                                                                                                                                                | <b>extensive</b>        |
| Static BW                      | Total interface bandwidth in bps.                                                                                                                                                                                                                                                           | <b>extensive</b>        |
| Reservable bandwidth           | Subscription factor for the interface, which is the percentage of the link bandwidth that can be used for the RSVP reservation process. You configure this by including the <b>subscription</b> statement when configuring RSVP.                                                            | <b>extensive</b>        |
| <b>Available BW [priority]</b> | (Must include <b>diffserv-te</b> statement when configuring LSPs) Amount of bandwidth actually reserved by RSVP for each priority level. The bandwidth shown is for the entire interface, not for each individual LSP.                                                                      | <b>extensive</b>        |

Table 77: show ted database Output Fields (*continued*)

| Field Name                                             | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | Level of Output |
|--------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| Diffserv-TE BW Model                                   | Bandwidth constraint model used by the LSPs.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       | extensive       |
| Available BW [TE-class]                                | (Must include the <b>diffserv-te</b> statement when configuring LSPs) Amount of bandwidth actually reserved by RSVP for each traffic engineering class.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | extensive       |
| Static BW [CT-class]                                   | Total interface bandwidth used by an MPLS traffic class, in bps.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | extensive       |
| Interface Switching Capability Descriptor ( <i>n</i> ) | <p>Information about the interface switching capability descriptor, which is a subtype length value (TLV) of the link TLV. <i>n</i> is the index number.</p> <ul style="list-style-type: none"> <li>• <b>Switching type</b>—Type of switching to be performed on a particular link: <ul style="list-style-type: none"> <li>• PSC-1—Packet switch-capable 1</li> <li>• PSC-2—Packet switch-capable 2</li> <li>• PSC-3—Packet switch-capable 3</li> <li>• PSC-4—Packet switch-capable 4</li> <li>• L2SC—Layer-2-switch-capable</li> <li>• TDM—Time-division-multiplexing-capable</li> <li>• LSC—Lambda switch-capable</li> <li>• FSC—Fiber switch-capable</li> </ul> </li> <li>• <b>Encoding type</b>—Encoding of the LSP being requested: <ul style="list-style-type: none"> <li>• Packet</li> <li>• Ethernet</li> <li>• ANSI/ETSI PDH</li> <li>• Reserved</li> <li>• SDH /SONET</li> <li>• Digital Wrapper</li> <li>• Lambda (photonic)</li> <li>• Fiber</li> <li>• FiberSDH/SONET</li> </ul> </li> <li>• <b>Maximum LSP BW [priority] bps</b>—Maximum LSP bandwidth information. Amount of bandwidth actually reserved for each priority level. The bandwidth shown is for the entire interface. <ul style="list-style-type: none"> <li>• [<i>n</i>]—Priority level. The range is from 0 (high) through 7 (low).</li> <li>• <i>n</i> Mbps—Amount of the maximum bandwidth.</li> </ul> </li> <li>• <b>Minimum LSP BW</b>—Minimum LSP bandwidth in Mbps. Amount of bandwidth actually reserved for each priority level. The bandwidth shown is for the entire interface. <b>Minimum LSP BW</b> is displayed only when <b>switching type</b> is PSC-1 or TDM.</li> <li>• <b>Interface MTU</b>—Displayed only when <b>switching type</b> is TDM.</li> <li>• <b>Interface supports standard SONET/SDH</b>—Displayed only when <b>switching type</b> is TDM.</li> </ul> | extensive       |

## Sample Output

### show ted database brief

```

user@host> show ted database brief
TED database: 12 ISIS nodes 0 INET nodes
ID                               Type Age(s) LnkIn LnkOut Protocol
Router-A.00                      ---  3178    2    0
Router-B.00                      ---  3152    2    0
Router-B.02                      Net   802    0    2 IS-IS(2)
    To: Router-A.00, Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
    To: Router-B.00, Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
ID                               Type Age(s) LnkIn LnkOut Protocol
Router-C.00                      ---  3126    2    0
Router-C.02                      Net   38     0    2 IS-IS(2)
    To: Router-B.00, Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
    To: Router-C.00, Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
ID                               Type Age(s) LnkIn LnkOut Protocol
Router-D.00                      ---  3144    2    0
Router-D.02                      Net   723    0    2 IS-IS(2)
    To: Router-F.00, Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
    To: Router-D.00, Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
ID                               Type Age(s) LnkIn LnkOut Protocol
Router-D.03                      Net   607    0    2 IS-IS(2)
    To: Router-D.00, Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
    To: Router-C.00, Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
ID                               Type Age(s) LnkIn LnkOut Protocol
Router-E.00                      ---  3178    2    0
Router-E.02                      Net   131    0    2 IS-IS(2)
    To: Router-A.00, Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
    To: Router-E.00, Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
ID                               Type Age(s) LnkIn LnkOut Protocol
Router-F.00                      ---  3153    2    0
Router-F.02                      Net   769    0    2 IS-IS(2)
    To: Router-E.00, Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
    To: Router-F.00, Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0

```

### show ted database detail

```

TED database: 12 ISIS nodes 0 INET nodes
ID                               Type Age(s) LnkIn LnkOut Protocol
Router-A.00                      ---  2913    2    0
Router-B.00                      ---  2887    2    0
Router-B.02                      Net   537    0    2 IS-IS(2)
    To: Router-A.00, Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
    To: Router-B.00, Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
ID                               Type Age(s) LnkIn LnkOut Protocol

```

```

Router-C.00          ---      2861      2      0
Router-C.02          Net       597      0      2 IS-IS(2)
  To: Router-B.00, Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
  To: Router-C.00, Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
ID                    Type Age(s) LnkIn LnkOut Protocol
Router-D.00          ---      2879      2      0
Router-D.02          Net       458      0      2 IS-IS(2)
  To: Router-F.00, Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
  To: Router-D.00, Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
ID                    Type Age(s) LnkIn LnkOut Protocol
Router-D.03          Net       342      0      2 IS-IS(2)
  To: Router-D.00, Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
  To: Router-C.00, Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
ID                    Type Age(s) LnkIn LnkOut Protocol
Router-E.00          ---      2913      2      0
Router-E.02          Net       640      0      2 IS-IS(2)
  To: Router-A.00, Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
  To: Router-E.00, Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
ID                    Type Age(s) LnkIn LnkOut Protocol
Router-F.00          ---      2888      2      0
Router-F.02          Net       504      0      2 IS-IS(2)
  To: Router-E.00, Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0
  To: Router-F.00, Local: 0.0.0.0, Remote: 0.0.0.0
    Local interface index: 0, Remote interface index: 0

```

### show ted database extensive

```

user@host> show ted database extensive
TED database: 12 ISIS nodes 0 INET nodes
NodeID: Router-A.00
  Type: ---, Age: 3067 secs, LinkIn: 2, LinkOut: 0
NodeID: Router-B.00
  Type: ---, Age: 3041 secs, LinkIn: 2, LinkOut: 0
NodeID: Router-B.02
  Type: Net, Age: 691 secs, LinkIn: 0, LinkOut: 2
  Protocol: IS-IS(2)
    To: Router-A.00, Local: 0.0.0.0, Remote: 0.0.0.0
      Local interface index: 0, Remote interface index: 0
      Metric: 0
      IGP metric: 10
      Interface Switching Capability Descriptor(1):
        Switching type: Packet
        Encoding type: Packet
        Maximum LSP BW [priority] bps:
          [0] 0bps      [1] 0bps      [2] 0bps      [3] 0bps
          [4] 0bps      [5] 0bps      [6] 0bps      [7] 0bps
    To: Router-B.00, Local: 0.0.0.0, Remote: 0.0.0.0
      Local interface index: 0, Remote interface index: 0
      Metric: 0
      IGP metric: 20
      Interface Switching Capability Descriptor(1):
        Switching type: Packet

```

```

        Encoding type: Packet
        Maximum LSP BW [priority] bps:
            [0] 0bps      [1] 0bps      [2] 0bps      [3] 0bps
            [4] 0bps      [5] 0bps      [6] 0bps      [7] 0bps
NodeID: Router-C.00
Type: ---, Age: 3015 secs, LinkIn: 2, LinkOut: 0
NodeID: Router-C.02
Type: Net, Age: 751 secs, LinkIn: 0, LinkOut: 2
Protocol: IS-IS(2)
To: Router-B.00, Local: 0.0.0.0, Remote: 0.0.0.0
Local interface index: 0, Remote interface index: 0
Metric: 0
IGP metric: 10
Interface Switching Capability Descriptor(1):
    Switching type: Packet
    Encoding type: Packet
    Maximum LSP BW [priority] bps:
        [0] 0bps      [1] 0bps      [2] 0bps      [3] 0bps
        [4] 0bps      [5] 0bps      [6] 0bps      [7] 0bps
To: Router-C.00, Local: 0.0.0.0, Remote: 0.0.0.0
Local interface index: 0, Remote interface index: 0
Metric: 0
IGP metric: 10      Interface Switching Capability Descriptor(1):
    Switching type: Packet
    Encoding type: Packet
    Maximum LSP BW [priority] bps:
        [0] 0bps      [1] 0bps      [2] 0bps      [3] 0bps
        [4] 0bps      [5] 0bps      [6] 0bps      [7] 0bps
NodeID: Router-D.00
Type: ---, Age: 3034 secs, LinkIn: 2, LinkOut: 0
NodeID: Router-D.02
Type: Net, Age: 613 secs, LinkIn: 0, LinkOut: 2
Protocol: IS-IS(2)
To: Router-F.00, Local: 0.0.0.0, Remote: 0.0.0.0
Local interface index: 0, Remote interface index: 0
Metric: 0
IGP metric: 10
Interface Switching Capability Descriptor(1):
    Switching type: Packet
    Encoding type: Packet
    Maximum LSP BW [priority] bps:
        [0] 0bps      [1] 0bps      [2] 0bps      [3] 0bps
        [4] 0bps      [5] 0bps      [6] 0bps      [7] 0bps
To: Router-D.00, Local: 0.0.0.0, Remote: 0.0.0.0
Local interface index: 0, Remote interface index: 0
Metric: 0
IGP metric: 10
Interface Switching Capability Descriptor(1):
    Switching type: Packet
    Encoding type: Packet
    Maximum LSP BW [priority] bps:
        [0] 0bps      [1] 0bps      [2] 0bps      [3] 0bps
        [4] 0bps      [5] 0bps      [6] 0bps      [7] 0bps
NodeID: Router-D.03
Type: Net, Age: 497 secs, LinkIn: 0, LinkOut: 2
Protocol: IS-IS(2)
To: Router-D.00, Local: 0.0.0.0, Remote: 0.0.0.0
Local interface index: 0, Remote interface index: 0
Metric: 0
IGP metric: 10
Interface Switching Capability Descriptor(1):

```

```

Switching type: Packet
Encoding type: Packet
Maximum LSP BW [priority] bps:
    [0] 0bps    [1] 0bps    [2] 0bps    [3] 0bps
    [4] 0bps    [5] 0bps    [6] 0bps    [7] 0bps
To: Router-C.00, Local: 0.0.0.0, Remote: 0.0.0.0
Local interface index: 0, Remote interface index: 0
Metric: 0
IGP metric: 10
Interface Switching Capability Descriptor(1):
    Switching type: Packet
    Encoding type: Packet
    Maximum LSP BW [priority] bps:
        [0] 0bps    [1] 0bps    [2] 0bps    [3] 0bps
        [4] 0bps    [5] 0bps    [6] 0bps    [7] 0bps
NodeID: Router-E.00
Type: ---, Age: 3068 secs, LinkIn: 2, LinkOut: 0
NodeID: Router-E.02
Type: Net, Age: 21 secs, LinkIn: 0, LinkOut: 2
Protocol: IS-IS(2)
To: Router-A.00, Local: 0.0.0.0, Remote: 0.0.0.0
Local interface index: 0, Remote interface index: 0
Metric: 0
Interface Switching Capability Descriptor(1):
    Switching type: Packet
    Encoding type: Packet
    Maximum LSP BW [priority] bps:
        [0] 0bps    [1] 0bps    [2] 0bps    [3] 0bps
        [4] 0bps    [5] 0bps    [6] 0bps    [7] 0bps
To: Router-E.00, Local: 0.0.0.0, Remote: 0.0.0.0
Local interface index: 0, Remote interface index: 0
Metric: 0
IGP metric: 10
Interface Switching Capability Descriptor(1):
    Switching type: Packet
    Encoding type: Packet
    Maximum LSP BW [priority] bps:
        [0] 0bps    [1] 0bps    [2] 0bps    [3] 0bps
        [4] 0bps    [5] 0bps    [6] 0bps    [7] 0bps
NodeID: Router-F.00
Type: ---, Age: 3043 secs, LinkIn: 2, LinkOut: 0
NodeID: Router-F.02
Type: Net, Age: 659 secs, LinkIn: 0, LinkOut: 2
Protocol: IS-IS(2)
To: Router-E.00, Local: 0.0.0.0, Remote: 0.0.0.0
Local interface index: 0, Remote interface index: 0
Metric: 0
IGP metric: 10
Interface Switching Capability Descriptor(1):
    Switching type: Packet
    Encoding type: Packet
    Maximum LSP BW [priority] bps:
        [0] 0bps    [1] 0bps    [2] 0bps    [3] 0bps
        [4] 0bps    [5] 0bps    [6] 0bps    [7] 0bps
To: Router-F.00, Local: 0.0.0.0, Remote: 0.0.0.0
Local interface index: 0, Remote interface index: 0
Metric: 0
IGP metric: 10
Interface Switching Capability Descriptor(1):
    Switching type: Packet
    Encoding type: Packet
    Maximum LSP BW [priority] bps:

```



|          |          |          |          |
|----------|----------|----------|----------|
| [0] 0bps | [1] 0bps | [2] 0bps | [3] 0bps |
| [4] 0bps | [5] 0bps | [6] 0bps | [7] 0bps |

## show ted link

|                                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>List of Syntax</b>              | <a href="#">Syntax on page 1828</a><br><a href="#">Syntax (EX Series Switches) on page 1828</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Syntax</b>                      | <pre>show ted link &lt;brief   detail&gt; &lt;instance <i>instance-name</i>&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt;</pre>                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Syntax (EX Series Switches)</b> | <pre>show ted link &lt;brief   detail&gt;</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Release Information</b>         | <p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.5 for EX Series switches.</p> <p><b>instance <i>instance-name</i></b> option added in Junos OS Release 15.1.</p>                                                                                                                                                                                                                                                                                                                                                  |
| <b>Description</b>                 | Display Multiprotocol Label Switching (MPLS) traffic engineering database link information.                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Options</b>                     | <p><b>none</b>—Display standard information about traffic engineering database link information.</p> <p><b>brief   detail</b>—(Optional) Display the specified level of output.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Display routing instance information for the specified instance. If <b><i>instance-name</i></b> is omitted, information is displayed for the master instance.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> |
| <b>Required Privilege Level</b>    | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>List of Sample Output</b>       | <a href="#">show ted link brief on page 1829</a><br><a href="#">show ted link detail on page 1829</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Output Fields</b>               | <a href="#">Table 78 on page 1828</a> describes the output fields for the <b>show ted link</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                                                                                                                                                                                                                                                                      |

Table 78: show ted link Output Fields

| Field Name | Field Description                                                                                                                                                                                                         | Level of Output |
|------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| ID         | Hostname and address of the node that the link is coming from. An address of .00 indicates that the node is the routing device itself. An address in the range 0.01 through 0.FF indicates that the node is a pseudonode. | <b>brief</b>    |
| -->ID      | Hostname and address of the node that the link is going to. An address of .00 indicates that the node is the routing device itself. An address in the range 0.01 through 0.FF indicates that the node is a pseudonode.    | <b>brief</b>    |

Table 78: show ted link Output Fields (*continued*)

| Field Name             | Field Description                                                                                                                                                                                                         | Level of Output         |
|------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------|
| <i>hostname</i>        | Hostname and address of the node that the link is coming from. An address of .00 indicates that the node is the routing device itself. An address in the range 0.01 through 0.FF indicates that the node is a pseudonode. | <b>detail</b>           |
| <i>hostname</i>        | Hostname and address of the node that the link is going to. An address of .00 indicates that the node is the routing device itself. An address in the range 0.01 through 0.FF indicates that the node is a pseudonode.    | <b>detail</b>           |
| Local Path             | Number of paths CSPF on the local routing device has placed on the link.                                                                                                                                                  | All levels              |
| Metric                 | Configured traffic engineering metric.                                                                                                                                                                                    | <b>extensive</b>        |
| IGP metric             | Configured interior gateway protocol metric.                                                                                                                                                                              | <b>detail</b>           |
| Local BW               | Amount of bandwidth the local routing device has placed on the link.                                                                                                                                                      | All levels              |
| Local                  | Address of the local interface being used to reach the remote node.                                                                                                                                                       | <b>detail extensive</b> |
| Remote                 | Address of the interface on the remote node.                                                                                                                                                                              | <b>detail extensive</b> |
| Local interface index  | The interface indexes enable Junos OS to support unnumbered extensions for IS-IS, as described in RFC 4205.                                                                                                               | <b>detail</b>           |
| Remote interface index | The interface indexes enable Junos OS to support unnumbered extensions for IS-IS, as described in RFC 4205.                                                                                                               | <b>detail</b>           |

## Sample Output

### show ted link brief

```

user@host> show ted link brief
ID                               ->ID                               LocalPath LocalBW
Router-B.02                     Router-A.00                       0 0bps
Router-B.02                     Router-B.00                       0 0bps
Router-C.02                     Router-B.00                       0 0bps
Router-C.02                     Router-C.00                       0 0bps
Router-D.02                     Router-F.00                       0 0bps
Router-D.02                     Router-D.00                       0 0bps
Router-D.03                     Router-D.00                       0 0bps
Router-D.03                     Router-C.00                       0 0bps
Router-E.02                     Router-A.00                       0 0bps
Router-E.02                     Router-E.00                       0 0bps
Router-F.02                     Router-E.00                       0 0bps
Router-F.02                     Router-F.00                       0 0bps

```

### show ted link detail

```

user@host> show ted link detail
Router-B.02->Router-A.00, Local: 0.0.0.0, Remote: 0.0.0.0
  Local interface index: 0, Remote interface index: 0
  LocalPath: 0, Metric: 0, IGP metric: 10 AvailBW: 0bps
  localBW [0] 0bps [1] 0bps [2] 0bps [3] 0bps

```

```
    localBW [4] Obps [5] Obps [6] Obps [7] Obps
Router-B.02->Router-B.00, Local: 0.0.0.0, Remote: 0.0.0.0
  Local interface index: 0, Remote interface index: 0
  LocalPath: 0, Metric: 0, IGP metric: 20 AvailBW: Obps
  localBW [0] Obps [1] Obps [2] Obps [3] Obps
  localBW [4] Obps [5] Obps [6] Obps [7] Obps
Router-C.02->Router-B.00, Local: 0.0.0.0, Remote: 0.0.0.0
  Local interface index: 0, Remote interface index: 0
  LocalPath: 0, Metric: 0, IGP metric: 40 AvailBW: Obps
  localBW [0] Obps [1] Obps [2] Obps [3] Obps
  localBW [4] Obps [5] Obps [6] Obps [7] Obps
Router-C.02->Router-C.00, Local: 0.0.0.0, Remote: 0.0.0.0
  Local interface index: 0, Remote interface index: 0
  LocalPath: 0, Metric: 0, IGP metric: 10 AvailBW: Obps
  localBW [0] Obps [1] Obps [2] Obps [3] Obps
  localBW [4] Obps [5] Obps [6] Obps [7] Obps
Router-D.02->Router-F.00, Local: 0.0.0.0, Remote: 0.0.0.0
  Local interface index: 0, Remote interface index: 0
  LocalPath: 0, Metric: 0, IGP metric: 10 AvailBW: Obps
  localBW [0] Obps [1] Obps [2] Obps [3] Obps
  localBW [4] Obps [5] Obps [6] Obps [7] Obps
Router-D.02->Router-D.00, Local: 0.0.0.0, Remote: 0.0.0.0
  Local interface index: 0, Remote interface index: 0
  LocalPath: 0, Metric: 0, IGP metric: 60 AvailBW: Obps
  localBW [0] Obps [1] Obps [2] Obps [3] Obps
  localBW [4] Obps [5] Obps [6] Obps [7] Obps
Router-D.03->Router-D.00, Local: 0.0.0.0, Remote: 0.0.0.0
  Local interface index: 0, Remote interface index: 0
  LocalPath: 0, Metric: 0, IGP metric: 10 AvailBW: Obps
  localBW [0] Obps [1] Obps [2] Obps [3] Obps
  localBW [4] Obps [5] Obps [6] Obps [7] Obps
Router-D.03->Router-C.00, Local: 0.0.0.0, Remote: 0.0.0.0
  Local interface index: 0, Remote interface index: 0
  LocalPath: 0, Metric: 0, IGP metric: 10 AvailBW: Obps
  localBW [0] Obps [1] Obps [2] Obps [3] Obps
  localBW [4] Obps [5] Obps [6] Obps [7] Obps
Router-E.02->Router-A.00, Local: 0.0.0.0, Remote: 0.0.0.0
  Local interface index: 0, Remote interface index: 0
  LocalPath: 0, Metric: 0, IGP metric: 60 AvailBW: Obps
  localBW [0] Obps [1] Obps [2] Obps [3] Obps
  localBW [4] Obps [5] Obps [6] Obps [7] Obps
Router-E.02->Router-E.00, Local: 0.0.0.0, Remote: 0.0.0.0
  Local interface index: 0, Remote interface index: 0
  LocalPath: 0, Metric: 0, IGP metric: 20 AvailBW: Obps
  localBW [0] Obps [1] Obps [2] Obps [3] Obps
  localBW [4] Obps [5] Obps [6] Obps [7] Obps
Router-F.02->Router-E.00, Local: 0.0.0.0, Remote: 0.0.0.0
  Local interface index: 0, Remote interface index: 0
  LocalPath: 0, Metric: 0, IGP metric: 10 AvailBW: Obps
  localBW [0] Obps [1] Obps [2] Obps [3] Obps
  localBW [4] Obps [5] Obps [6] Obps [7] Obps
Router-F.02->Router-F.00, Local: 0.0.0.0, Remote: 0.0.0.0
  Local interface index: 0, Remote interface index: 0
  LocalPath: 0, Metric: 0, IGP metric: 40 AvailBW: Obps
  localBW [0] Obps [1] Obps [2] Obps [3] Obps
  localBW [4] Obps [5] Obps [6] Obps [7] Obps
```

## show ted protocol

|                                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>List of Syntax</b>              | <a href="#">Syntax on page 1831</a><br><a href="#">Syntax (EX Series Switches) on page 1831</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Syntax</b>                      | <pre>show ted protocol &lt;brief   detail&gt; &lt;instance <i>instance-name</i>&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt;</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Syntax (EX Series Switches)</b> | <pre>show ted protocol &lt;brief   detail&gt;</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Release Information</b>         | <p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.5 for EX Series switches.</p> <p><b>instance <i>instance-name</i></b> option added in Junos OS Release 15.1.</p>                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Description</b>                 | Display information about the protocols from which the Multiprotocol Label Switching (MPLS) traffic engineering database learned about its nodes.                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Options</b>                     | <p><b>none</b>—Display standard information about the protocols from which the traffic engineering database learned about its nodes.</p> <p><b>brief   detail</b>—(Optional) Display the specified level of output.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Display routing instance information for the specified instance. If <b><i>instance-name</i></b> is omitted, information is displayed for the master instance.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> |
| <b>Required Privilege Level</b>    | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>List of Sample Output</b>       | <a href="#">show ted protocol on page 1832</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Output Fields</b>               | <p><a href="#">Table 79 on page 1831</a> describes the output fields for the <b>show ted protocol</b> command. Output fields are listed in the approximate order in which they appear.</p>                                                                                                                                                                                                                                                                                                                                                                                                               |

**Table 79: show ted protocol Output Fields**

| Field Name           | Field Description                                                                                                                                                                                                                                    |
|----------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Protocol name</b> | <p>Protocol that reported the node information:</p> <ul style="list-style-type: none"> <li><b>IS-IS(1)</b>—IS-IS Level 1.</li> <li><b>IS-IS(2)</b>—IS-IS Level 2.</li> <li><b>OSPF (<i>area-number</i>)</b>—OSPF from the specified area.</li> </ul> |
| <b>Credibility</b>   | If the protocols provide conflicting information about a node, the protocol with the highest credibility value is the one that the traffic engineering database uses.                                                                                |
| <b>Self node</b>     | Address the protocol uses as the local address.                                                                                                                                                                                                      |

## Sample Output

show ted protocol

```
user@host> show ted protocol
Protocol name      Credibility Self node
IS-IS(2)           2 (highest) corriedale.00(123.456.1.11)
IS-IS(1)           1          corriedale.00(123.456.1.11)
```

## traceroute mpls bgp

**Syntax** `traceroute mpls bgp fec`  
`<destination destination-address>`  
`<detail>`  
`<exp exp>`  
`<fanout fanout-number>`  
`<logical-system logical system-name>`  
`<no-resolve>`  
`<paths paths-number>`  
`<pipe-mode>`  
`<retries retries-number>`  
`<routing-instance routing-instance-name>`  
`<source source-address>`  
`<ttl value>`  
`<wait seconds>`

**Release Information** Command introduced in Junos OS Release 14.2.

**Description** Trace route to a remote host for an MPLS label-switched path (LSP) signaled by the Border Gateway Protocol (BGP). Use **traceroute mpls bgp** as a debugging tool to locate MPLS BGP forwarding issues in a network. (Currently supported for IPv4 packets only.)



**NOTE:** The `traceroute mpls bgp fec` command only supports single paths.

**Options** **fec**—Specify the IP address and optional prefix of the forwarding equivalence class (FEC). Suppose you are at PE1, you would want to use the IP address of PE2 to trace the BGP path to that router.

**destination destination-address**—(Optional) Specify the destination address to use when sending probes.

**detail**—(Optional) Display detailed output.

**exp exp**—(Optional) Specify the class of service to use when sending probes.

**Range:** 0 through 7

**Default:** 7

**fanout fanout-number**—(Optional) Specify the maximum number of next hops to search per node.

**Range:** 1 through 16

**Default:** 16

**logical-system logical-system-name**—(Optional) Specify the name of the logical system for the traceroute attempt.

**no-resolve**—(Optional) Specify not to resolve the hostname that corresponds to the IP address.

**paths** *paths-number*—(Optional) Specify the number of paths to search.

**Range:** 1 through 255

**Default:** 16

**pipe-mode**—(Optional) Specify to trace only the outermost FEC.

**retries** *retries-number*—(Optional) Specify the number of times to resend probe values.

**Range:** 1 through 9

**Default:** 3

**routing-instance** *routing-instance-name*—(Optional) Specify the name of the routing instance for the trace route attempt.

**source** *source-address*—(Optional) Specify the source address of the outgoing traceroute packets.

**ttl** *value*—(Optional) Specify the maximum time-to-live value to include in the traceroute request, in seconds.

**Range:** 1 through 125

**Default:** 64

**wait** *seconds*—(Optional) Specify the number of seconds to wait before resending a probe.

**Range:** 5 through 15

**Default:** 10

**Required Privilege Level** network

**Related Documentation** • [ping mpls bgp on page 1735](#)

**List of Sample Output** [traceroute mpls bgp on page 1835](#)  
[traceroute mpls bgp detail on page 1835](#)

**Output Fields** [Table 80 on page 1834](#) describes the output fields for the **traceroute mpls bgp fec** command and the **traceroute mpls bgp fec detail** command. Output fields are listed in the approximate order in which they appear.

**Table 80: traceroute mpls bgp Output Fields**

| Field Name    | Field Description                                                             | Level of Output |
|---------------|-------------------------------------------------------------------------------|-----------------|
| Probe options | Probe options specified in the <b>traceroute mpls bgp fec</b> command.        | All levels      |
| ttl           | Time to live value of the labeled packet.                                     | None            |
| Label         | Outgoing label used for forwarding the packet along the label-switched paths. | None            |



Table 80: traceroute mpls bgp Output Fields (*continued*)

| Field Name     | Field Description                                                                                                        | Level of Output |
|----------------|--------------------------------------------------------------------------------------------------------------------------|-----------------|
| Protocol       | Signaling protocol used. For this command, it is BGP.                                                                    | None            |
| Address        | Address of the next hop.                                                                                                 | None            |
| Previous Hop   | Address of the previous hop. Previous hop address of the first hop is <b>null</b> .                                      | None            |
| Probe status   | Forwarding status from the first hop to the last-hop label-switching router (egress point in the label-switched paths).  | None            |
| Hop            | Address of the hops in the label-switched path from the first hop to the last hop. Depth indicates the level of the hop. | <b>detail</b>   |
| Parent         | Address of the previous hop. Parent value for the first hop is <b>null</b> .                                             | <b>detail</b>   |
| Return Code    | Return code for reporting the result of processing the echo request by the receiver.                                     | <b>detail</b>   |
| Response time  | Time for the echo request to reach the receiver.                                                                         | <b>detail</b>   |
| Multipath type | Labels or addresses used by the specified multipath type. If multipaths are not used, the value is <b>none</b> .         | <b>detail</b>   |
| Label Stack    | Label stack used to forward the packet.                                                                                  | <b>detail</b>   |

## Sample Output

### traceroute mpls bgp

```

user@host> traceroute mpls bgp fec
Probe options: retries 3, exp 7
ttl Label Protocol Address Previous Hop Probe Status Fec-Stack-Sent Fec-Change
1 299824 LDP 81.1.2.2 (null) Success LDP, BGP PUSH-RSVP
2 299825 RSVP 81.2.3.3 81.1.2.2 Success RSVP, LDP, BGP (null)
3 299826 RSVP 81.3.4.4 81.2.3.3 Egress RSVP, LDP, BGP POP-RSVP
3 299826 LDP 81.3.4.4 81.2.3.3 Success LDP, BGP (null)
4 299827 LDP 81.4.5.5 81.3.4.4 Egress LDP, BGP POP-LDP
4 299827 BGP 81.4.5.5 81.3.4.4 Egress BGP (null)

```

### traceroute mpls bgp detail

```

user@host> traceroute mpls bgp fec detail
Probe options: retries 3, exp 7
Hop 2.2.1.81.rev.sfr.net (81.1.2.2) Depth 1
Probe status: Success
Parent: (null)
Return code: Label switched at stack-depth 1
Sender timestamp: 2013-03-22 05:55:19 PDT 822.99 msec

```

Receiver timestamp: 2013-03-22 05:55:19 PDT 856.05 msec  
Response time: 33.06 msec  
MTU: Unknown  
Multipath type: IP bitmask  
Address Range 1: 127.0.0.64 ~ 127.0.0.127  
Label Stack:  
Label 1 Value 299824 Protocol LDP  
Label 2 Value 299276 Protocol BGP  
Fec-Stack-Sent: LDP, BGP  
Fec-Change:  
Operation: PUSH Protocol RSVP

## transit (Chained Composite Next Hops)

**Syntax** transit {  
 (all | no-all);  
 (l2vpn | no-l2vpn);  
 (l3vpn | no-l3vpn);  
 (labeled-bgp | no-labeled-bgp);  
 (ldp | no-ldp);  
 (ldp-p2mp | no-ldp-p2mp);  
 lsp-statistics-from-route;  
 (rsvp | no-rsvp);  
 (rsvp-p2mp | no-rsvp-p2mp);  
 (static | no-static);  
 }

**Hierarchy Level** [edit logical-systems *logical-system-name* routing-options forwarding-table  
 chained-composite-next-hop],  
 [edit routing-options forwarding-table chained-composite-next-hop]



**NOTE:** The [edit logical-systems] hierarchy level is not supported on the QFX10000 switches.

**Release Information** Statement introduced in Junos OS Release 12.1.  
 Statement introduced in Junos OS Release 15.1 for QFX10000 Series switches.

**Description** Allows you to configure the chained composite next hops transit configuration options for devices handling transit traffic in the network. This statement and the associated functionality is available on PTX Packet Transport Routers and QFX10000 switches.

**Default** All of the **transit** statement options are enabled on PTX transport routers and QFX10000 switches. However, you can disable any of the statements with a **no** option.

**Options** **all | no-all**—Enable or disable chained composite next-hops for all of the possible packet transit protocols and applications. The **all | no-all** statements do not apply to the **lsp-statistics-from-route** statement.

**l2vpn | no-l2vpn**—Enable or disable chained composite next-hops for Layer 2 VPNs.

**l3vpn | no-l3vpn**—Enable or disable chained composite next-hops for Layer 3 VPNs.

**labeled-bgp | no-labeled-bgp**—Enable or disable chained composite next-hops for labeled BGP.

**ldp | no-ldp**—Enable or disable chained composite next-hops for LDP.

**ldp-p2mp | no-ldp-p2mp**—Enable or disable chained composite next-hops for LDP-signaled P2MP LSPs.



**NOTE:** On an MX series router with redundant Routing Engines and enhanced-ip mode configuration, enabling the `rsvp-p2mp` and `ldp-p2mp` statements under the `[edit routing-options forwarding-table chained-composite-next-hop transit]` hierarchy level causes ping from the current master logical system to fail at the time of a Routing Engine switchover.

**`lsp-statistics-from-route`**—Enable LSP statistics collection from the route.

**`rsvp` | `no-rsvp`**—Enable or disable chained composite next-hops for RSVP.

**`rsvp-p2mp` | `no-rsvp-p2mp`**—Enable or disable chained composite next-hops for RSVP-signaled P2MP LSPs.



**NOTE:** On an MX series router with redundant Routing Engines and enhanced-ip mode configuration, enabling the `rsvp-p2mp` and `ldp-p2mp` statements under the `[edit routing-options forwarding-table chained-composite-next-hop transit]` hierarchy level causes ping from the current master logical system to fail at the time of a Routing Engine switchover.

**`static` | `no-static`**—Chained composite next hops are enabled for transit static LSPs by default. You can also disable this functionality for transit static LSPs.

**Required Privilege Level**    `routing`—To view this statement in the configuration.  
                                  `routing-control`—To add this statement to the configuration.

**Related Documentation**

- *Accepting Route Updates with Unique Inner VPN Labels in Layer 3 VPNs*
- *chained-composite-next-hop*

## CHAPTER 31

# RSVP Operational Commands

- `clear rsvp session`
- `clear rsvp statistics`
- `monitor label-switched-path`
- `ping mpls rsvp`
- `show rsvp interface`
- `show rsvp neighbor`
- `show rsvp session`
- `show rsvp statistics`
- `show rsvp version`
- `traceroute mpls rsvp`

## clear rsvp session

---

**List of Syntax**    [Syntax on page 1840](#)  
                          [Syntax \(EX and QFX Series Switches\) on page 1840](#)

**Syntax**    clear rsvp session  
              <all>  
              <connection-destination *address*>  
              <connection-source *address*>  
              <gracefully>  
              <logical-system (all | *logical-system-name*)>  
              <lsp-id *identifier*>  
              <name *name*>  
              <optimize-fast-reroute>  
              <tunnel-id *identifier*>

**Syntax (EX and QFX Series Switches)**    clear rsvp session  
                                                  <connection-destination *address*>  
                                                  <connection-source *address*>  
                                                  <gracefully>  
                                                  <lsp-id *identifier*>  
                                                  <name *name*>  
                                                  <optimize-fast-reroute>  
                                                  <tunnel-id *identifier*>

**Release Information**    Command introduced before Junos OS Release 7.4.  
                              Command introduced in Junos OS Release 9.5 for EX Series switches.  
                              Command introduced in Junos OS Release 13.2X51-D15 for the QFX Series.

**Description**    Reset and restart Resource Reservation Protocol (RSVP) sessions.

**Options**    **all**—Clear all RSVP sessions for which this routing device is the ingress, transit, or egress routing device.

**connection-source *address***—(Optional) Source address for GMPLS and MPLS LSPs from the RSVP sender template.

**connection-destination *address***—(Optional) Destination address for GMPLS and MPLS LSPs from the RSVP sender template.

**gracefully**—(Optional) Gracefully reset an RSVP session for a nonpacket LSP in two passes. In the first pass, the Admin-Status object is signaled along the path to the other endpoint of the RSVP session. In the second pass, the path used by the RSVP session is torn down. This option can only be used on the ingress or egress routing device of the RSVP session and is only valid for nonpacket LSPs.

**logical-system (all | *logical-system-name*)**—(Optional) Perform this operation on all logical systems or on a particular logical system.

**lsp-id *identifier***—(Optional) LSP identifier (source port) for the RSVP sender template.

**name *name***—(Optional) Reset and restart the specified RSVP session.

**optimize-fast-reroute**—(Optional) Begin fast reroute optimization.

**tunnel-id *identifier***—(Optional) Tunnel identifier (destination port) for the RSVP session.

**Required Privilege  
Level**

clear

**Related  
Documentation**

- [clear mpls lsp on page 1717](#)
- [show rsvp session on page 1861](#)

**List of Sample Output**    [clear rsvp session all on page 1841](#)

**Output Fields**    When you enter this command, you are provided feedback on the status of your request.

## Sample Output

[clear rsvp session all](#)

```
user@host> clear rsvp session all
```

## clear rsvp statistics

---

|                                    |                                                                                                                                                                                                                   |
|------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>List of Syntax</b>              | <a href="#">Syntax on page 1842</a><br><a href="#">Syntax (EX Series Switches) on page 1842</a>                                                                                                                   |
| <b>Syntax</b>                      | clear rsvp statistics<br><logical-system (all   <i>logical-system-name</i> )>                                                                                                                                     |
| <b>Syntax (EX Series Switches)</b> | clear rsvp statistics                                                                                                                                                                                             |
| <b>Release Information</b>         | Command introduced before Junos OS Release 7.4.<br>Command introduced in Junos OS Release 9.5 for EX Series switches.                                                                                             |
| <b>Description</b>                 | Clear Resource Reservation Protocol (RSVP) packet and error statistics.                                                                                                                                           |
| <b>Options</b>                     | <b>none</b> —Clear RSVP packet and error statistics.<br><br><b>logical-system (all   <i>logical-system-name</i>)</b> —(Optional) Perform this operation on all logical systems or on a particular logical system. |
| <b>Required Privilege Level</b>    | clear                                                                                                                                                                                                             |
| <b>Related Documentation</b>       | <ul style="list-style-type: none"><li>• <a href="#">show rsvp statistics on page 1871</a></li></ul>                                                                                                               |
| <b>List of Sample Output</b>       | <a href="#">clear rsvp statistics on page 1842</a>                                                                                                                                                                |
| <b>Output Fields</b>               | When you enter this command, you are provided feedback on the status of your request.                                                                                                                             |

## Sample Output

### clear rsvp statistics

```
user@host> clear rsvp statistics
```



## monitor label-switched-path

**Syntax** `monitor label-switched-path lsp-name`  
`<logical-system (logical-system-name)>`

**Release Information** Command introduced before Junos OS Release 7.4.  
 Logical system support introduced in Junos OS Release 9.4.  
 Command introduced in Junos OS Release 13.2X51-D15 for the QFX Series.

**Description** Display the real-time status of the specified RSVP label-switched path (LSP). You can also use this command to monitor LSPs configured within logical systems.

**Options** `logical-system ( logical-system-name )`—(Optional) Perform this operation on all logical systems or on a particular logical system.

*lsp-name*—Name of the LSP.

**Additional Information** You can track the amount of traffic traversing an RSVP LSP and observe its essential parameters, such as uptime, ingress and egress addresses, labels, routes, and ports. Values are typically sampled every second. The display also allows you to scroll to other currently running LSPs. You cannot use this command to display information about static LSPs or LDP-signaled LSPs.

The output of this command shows how much each field has changed since you started the command or since you cleared the counters by using the `c` key. To control the output of the **monitor label-switched-path** command while it is running, use the keys listed in [Table 81 on page 1843](#). The keys are not case-sensitive.

**Table 81: Output Control Keys for the monitor label-switched-path Command**

| Key      | Action                                                                                                                            |
|----------|-----------------------------------------------------------------------------------------------------------------------------------|
| c        | Clears the screen and refreshes the display for this LSP.                                                                         |
| f        | Freezes the display, preventing new information from being displayed.                                                             |
| l        | Monitors a different LSP. After you type l, you can type the new LSP name.                                                        |
| n        | Displays information about the next LSP (whose name is alphabetically higher than the current LSP name) configured on the router. |
| p        | Goes to the previous LSP (whose name is alphabetically lower than the current LSP name) configured on the router.                 |
| q or Esc | Quits the command and returns to the command prompt.                                                                              |
| t        | Thaws, or restarts, the data display for this LSP.                                                                                |

**Required Privilege Level** trace

**List of Sample Output** [monitor label-switched-path on page 1845](#)

**Output Fields** [Table 82 on page 1844](#) describes the output fields for the **monitor label-switched-path** command. Output fields are listed in the approximate order in which they appear.

**Table 82: monitor label-switched-path Output Fields**

| Field Name | Field Description                                                                                                                                                                                                                                                                                                                                                                                           |
|------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| (1)        | Displays the following information: <ul style="list-style-type: none"> <li>• <b>hostname</b>—Name of the router.</li> <li>• <b>Seconds</b>—Time elapsed since this display was started.</li> <li>• <b>Time</b>—Current local time.</li> </ul>                                                                                                                                                               |
| (2)        | <b>Delay</b> —Length of the time delay, in milliseconds, required to obtain the information in the monitor display. The first number shows the current sampling delay. The second number shows the shortest delay recorded to date. The third number shows the worst delay recorded to date. This delay can vary substantially depending on the system load.                                                |
| (3)        | Displays the following: <ul style="list-style-type: none"> <li>• <b>To</b>—Destination address of the LSP.</li> <li>• <b>From</b>—Originating address of the LSP.</li> <li>• <b>State</b>—Current state of the LSP: <b>Up</b> or <b>Down</b>.</li> </ul>                                                                                                                                                    |
| (4)        | Displays the following: <ul style="list-style-type: none"> <li>• <b>LSPName</b>—Name of the LSP.</li> <li>• <b>Type</b>—Type of LSP: <b>Ingress</b>, <b>Egress</b>, or <b>Transit</b>.</li> </ul>                                                                                                                                                                                                           |
| (5)        | Displays the following: <ul style="list-style-type: none"> <li>• <b>Label in</b>—Incoming label of the LSP.</li> <li>• <b>Label out</b>—Outgoing label of the LSP.</li> </ul>                                                                                                                                                                                                                               |
| (6)        | <b>Port number</b> —Port number for the sending router, the port number for the receiving router, and the protocol ID. For MPLS traffic engineering applications, the protocol ID is always 0.                                                                                                                                                                                                              |
| (7/8)      | <b>Record route</b> —All intermediate and egress router addresses for this LSP.                                                                                                                                                                                                                                                                                                                             |
| (9/10/11)  | Displays traffic statistics: <ul style="list-style-type: none"> <li>• <b>Output packets</b>—Number of packets that have traversed this LSP, and the change (delta) in the number since the last sample, typically 1 second ago.</li> <li>• <b>Output bytes</b>—Number of bytes that have traversed this LSP, and the change (delta) in the number since the last sample, typically 1 second ago.</li> </ul> |
| (12)       | Displays any errors the router encountered while attempting to retrieve information on the LSP.                                                                                                                                                                                                                                                                                                             |
| (13)       | Lists the keyboard commands you can use to navigate to other LSPs. For a description of the keyboard commands, see <a href="#">Table 81 on page 1843</a> .                                                                                                                                                                                                                                                  |

## Sample Output

### monitor label-switched-path

```
user@host> monitor label-switched-path
(1) host                               Seconds: 112           Time: 15:32:22
(2)                                     Delay: 0/0/0
(3) To 10.10.10.16, From 10.10.10.17, state: Up
(4)  LSPname: k, type: Ingress
(5)  Label in: -, Label out: 126000
(6)  Port number: sender 1, receiver 45583, protocol 0
(7)  Record Route: <self> 192.168.224.196
(8)    192.168.224.202 192.168.224.179
(9)  Traffic statistics:
(10)    Output packets:                0                      [0]
(11)    Output bytes:                  0                      [0]
(12)
(13)Next='n', Prev='p', Quit='q' or ESC, Freeze='f', Thaw='t', Clear='c',
    LSP='l'
```

## ping mpls rsvp

---

**Syntax**    ping mpls rsvp  
             <lsp-name>  
             <count count>  
             <destination address>  
             <detail>  
             <dynamic-bypass>  
             <egress egress-address>  
             <exp forwarding-class>  
             <interface interface-name>  
             <logical-system (all | logical-system-name)>  
             <manual-bypass>  
             <multipoint>  
             <size bytes>  
             <source source-address>  
             <standby standby-path-name>  
             <sweep>

**Release Information**    Command introduced before Junos OS Release 7.4.  
                              The **egress** and **multipoint** options were introduced in Junos OS Release 9.2.  
                              The **size** and **sweep** options were introduced in Junos OS Release 9.6.  
                              The **dynamic-bypass** and **manual-bypass** options were introduced in Junos OS Release 10.2.  
                              Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

**Description**            Check the operability of MPLS RSVP-signaled label-switched path (LSP) connections.  
                              Type Ctrl+c to interrupt a **ping mpls** command.

**Options**                **count count**—(Optional) Number of ping requests to send. If **count** is not specified, five ping requests are sent. The range of values is 1 through 1,000,000. The default value is 5.

**destination address**—(Optional) Specify an address other than the default (127.0.0.1/32) for the ping echo requests. The address can be anything within the 127/8 subnet.

**detail**—(Optional) Display detailed information about the echo requests sent and received.



**NOTE:** When using the **detail** option, the reported time is based on the system time configured on the local and remote routers. Differences in these system times can result in inaccurate one way ping trip times being reported.

In practice, it is difficult to synchronize the system times of independent Juniper Networks routers with sufficient accuracy to provide a meaningful time value for the **detail** option (even when synchronized using NTP).

---

**dynamic-bypass**—(Optional) Ping dynamically generated bypass LSPs, used for protecting other LSPs.

**egress *egress-address***—(Optional) Only the specified egress router or switch responds to the ping request.

**exp *forwarding-class***—(Optional) Value of the forwarding class for the MPLS ping packets.

**interface**—(Optional) Specify the name of the interface protected by the manual bypass LSP. This option is only available when you have also used the **manual-bypass** option.

**logical-system (all | *logical-system-name*)**—(Optional) Perform this operation on all logical systems or on the specified logical system.

***lsp-name***—Ping an RSVP-signaled LSP using an LSP name.

**manual-bypass**—(Optional) Ping manually configured bypass LSPs, used for protecting other LSPs. For this option, you must also specify the interface protected by the manual bypass LSP using the **interface** option.

**multipoint**—(Optional) Send ping requests to each of the egress routers or switches participating in a point-to-multipoint LSP. You can also include the **egress** option to ping a specific egress router or switch participating in a point-to-multipoint LSP.

**size *bytes***—(Optional) Size of the LSP ping request packet (100 through 65468 bytes). Packets are 4-byte aligned. For example, if you enter a size of 101, 102, 103, or 104, the router or switch uses a size value of 104 bytes. If you enter a packet size that is smaller than the minimum size, an error message is displayed reminding you of the 100-byte minimum.

**source *source-address***—(Optional) IP address of the outgoing interface. This address is sent in the IP source address field of the ping request. If this option is not specified, the default address is usually the loopback interface.

**standby *standby-path-name***—(Optional) Name of the standby path.

**sweep**—(Optional) Automatically determine the size of the maximum transmission unit (MTU).

**Additional Information** If the LSP changes, the label and interface information displayed when you issued the **ping** command continues to be used. You must configure MPLS at the **[edit protocols mpls]** hierarchy level on the remote router or switch to ping an LSP terminating there. You must configure MPLS even if you intend to ping only LDP forwarding equivalence classes (FECs).

In asymmetric MTU scenarios, the echo response might be dropped. For example, if the MTU from System A to System B is 1000 bytes, the MTU from System B to System A is 500 bytes, and the ping request packet size is 1000 bytes, the echo response is dropped because the PAD TLV is included in the echo response, making it too large.

**Required Privilege Level** network

**List of Sample Output** [ping mpls rsvp \(Echo Reply Received\) on page 1848](#)  
[ping mpls rsvp \(Echo Reply with Error Code\) on page 1848](#)

[ping mpls rsvp detail on page 1848](#)

[ping mpls rsvp multipoint egress detail count on page 1848](#)

[ping mpls rsvp multipoint detail count on page 1848](#)

[ping mpls rsvp destination detail count size on page 1849](#)

[ping mpls rsvp destination detail sweep size on page 1849](#)

**Output Fields** When you enter this command, you are provided feedback on the status of your request. An exclamation point (!) indicates that an echo reply was received. A period (.) indicates that an echo reply was not received within the timeout period. An x indicates that an echo reply was received with an error code. Packets with an error code are not counted in the received packets count. They are accounted for separately.

## Sample Output

### ping mpls rsvp (Echo Reply Received)

```
user@host> ping mpls rsvp test1
!!!!!--- lsping statistics ---5 packets transmitted, 5 packets received, 0% packet
loss
```

### ping mpls rsvp (Echo Reply with Error Code)

```
user@host> ping mpls rsvp test2
!!xxx--- lsping statistics ---5 packets transmitted, 2 packets received, 60%
packet loss3 packets received with error status, not counted as received.
```

### ping mpls rsvp detail

```
user@host> ping mpls rsvp to-green detail
Request for seq 1, to interface 67, labels <100095, 0, 0>
Reply for seq 1, return code: Egress-ok
Request for seq 2, to interface 67, labels <100095, 0, 0>
Reply for seq 2, return code: Egress-ok
```

### ping mpls rsvp multipoint egress detail count

```
user@host>ping mpls rsvp sample-lsp multipoint egress 192.168.1.3 detail count 1
Request for seq 1, to interface 70, label 299952
Request for seq 1, to interface 70, no label stack.
Request for seq 1, to interface 67, no label stack.

Reply for seq 1, egress 192.168.1.3, return code: Egress-ok, time: 0.242 ms
Local transmit time: 1205310695s 215737us
Remote receive time: 1205310695s 215979us

--- lsping, egress 192.168.1.3 statistics ---
1 packets transmitted, 1 packets received, 0% packet loss
```

### ping mpls rsvp multipoint detail count

```
user@host>ping mpls rsvp sample-lsp multipoint detail count 1
Request for seq 1, to interface 70, label 299952
Request for seq 1, to interface 70, no label stack.
Request for seq 1, to interface 67, no label stack.

Reply for seq 1, return code: Unknown TLV, time: 9.877 m Local transmit time:
1205310615s 347317us
Remote receive time: 1205310615s 357194us
Reply for seq 1, egress 192.168.1.3, return code: Egress-ok, time: 0.351 ms
```

```

Local transmit time: 1205310615s 347262us
Remote receive time: 1205310615s 347613us
Reply for seq 1, egress 192.168.1.13, return code: Egress-ok, time: 0.301 ms
Local transmit time: 1205310615s 347167us
Remote receive time: 1205310615s 347468us
Timeout for seq 1, egress 192.168.1.1
Timeout for seq 1, egress 192.168.1.4
Timeout for seq 1, egress 192.168.1.14

--- lsping, egress 192.168.1.1 statistics ---
1 packets transmitted, 0 packets received, 100% packet loss

--- lsping, egress 192.168.1.3 statistics ---
1 packets transmitted, 1 packets received, 0% packet loss

--- lsping, egress 192.168.1.4 statistics ---
1 packets transmitted, 0 packets received, 100% packet loss

--- lsping, egress 192.168.1.13 statistics ---
1 packets transmitted, 1 packets received, 0% packet loss

--- lsping, egress 192.168.1.14 statistics ---
1 packets transmitted, 0 packets received, 100% packet loss

```

#### ping mpls rsvp destination detail count size

```

user@host> ping mpls rsvp chaser-access destination 192.168.0.1 detail count 1 size 4468

Request for seq 1, to interface 88, label 299984, packet size 4468
Reply for seq 1, return code: Egress-ok, time: 44.804 ms
    Local transmit time: 2009-03-30 22:05:02 CEST 408.629 ms
    Remote receive time: 2009-03-30 22:05:02 CEST 453.433 ms

--- lsping statistics ---
1 packets transmitted, 1 packets received, 0% packet loss

```

#### ping mpls rsvp destination detail sweep size

```

user@router> ping mpls rsvp chaser-access destination 192.168.0.1 detail sweep size 4500
Request for seq 1, to interface 86, no label stack., packet size 100
Reply for seq 1, return code: Egress-ok, time: -39.264 ms
    Local transmit time: 2009-04-24 14:05:40 CEST 541.423 ms
    Remote receive time: 2009-04-24 14:05:40 CEST 502.159 ms
Request for seq 2, to interface 86, no label stack., packet size 2300
Reply for seq 2, return code: Egress-ok, time: -38.179 ms
    Local transmit time: 2009-04-24 14:05:41 CEST 544.240 ms
    Remote receive time: 2009-04-24 14:05:41 CEST 506.061 ms
Request for seq 3, to interface 86, no label stack., packet size 4500
Timeout for seq 3
Request for seq 4, to interface 86, no label stack., packet size 3400
Reply for seq 4, return code: Egress-ok, time: -37.545 ms
    Local transmit time: 2009-04-24 14:05:45 CEST 549.953 ms
    Remote receive time: 2009-04-24 14:05:45 CEST 512.408 ms
Request for seq 5, to interface 86, no label stack., packet size 3952
Reply for seq 5, return code: Egress-ok, time: -37.176 ms
    Local transmit time: 2009-04-24 14:05:46 CEST 555.881 ms
    Remote receive time: 2009-04-24 14:05:46 CEST 518.705 ms
Request for seq 6, to interface 86, no label stack., packet size 4228
Reply for seq 6, return code: Egress-ok, time: -36.962 ms
    Local transmit time: 2009-04-24 14:05:47 CEST 561.809 ms
    Remote receive time: 2009-04-24 14:05:47 CEST 524.847 ms

```

```
Request for seq 7, to interface 86, no label stack., packet size 4368
Reply for seq 7, return code: Egress-ok, time: -36.922 ms
    Local transmit time: 2009-04-24 14:05:48 CEST 568.738 ms
    Remote receive time: 2009-04-24 14:05:48 CEST 531.816 ms
Request for seq 8, to interface 86, no label stack., packet size 4440
Reply for seq 8, return code: Egress-ok, time: -36.855 ms
    Local transmit time: 2009-04-24 14:05:49 CEST 575.669 ms
    Remote receive time: 2009-04-24 14:05:49 CEST 538.814 ms
Request for seq 9, to interface 86, no label stack., packet size 4476
Timeout for seq 9
Request for seq 10, to interface 86, no label stack., packet size 4460
Reply for seq 10, return code: Egress-ok, time: -36.906 ms
    Local transmit time: 2009-04-24 14:05:53 CEST 584.382 ms
    Remote receive time: 2009-04-24 14:05:53 CEST 547.476 ms
Request for seq 11, to interface 86, no label stack., packet size 4480
Timeout for seq 11
Request for seq 12, to interface 86, no label stack., packet size 4472
Timeout for seq 12
Request for seq 13, to interface 86, no label stack., packet size 4468
Reply for seq 13, return code: Egress-ok, time: -36.943 ms
    Local transmit time: 2009-04-24 14:06:00 CEST 594.884 ms
    Remote receive time: 2009-04-24 14:06:00 CEST 557.941 ms
Request for seq 14, to interface 86, no label stack., packet size 4476
Timeout for seq 14
Request for seq 15, to interface 86, no label stack., packet size 4472
Timeout for seq 15

--- lsp ping sweep result---
Maximum Transmission Unit (MTU) is 4468 bytes
```



## show rsvp interface

|                                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>List of Syntax</b>              | <a href="#">Syntax on page 1851</a><br><a href="#">Syntax (EX Series Switches) on page 1851</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Syntax</b>                      | <pre>show rsvp interface &lt;brief   detail   extensive&gt; &lt;instance <i>instance-name</i>&gt; &lt;link-management&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt;</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Syntax (EX Series Switches)</b> | <pre>show rsvp interface &lt;brief   detail   extensive&gt; &lt;link-management&gt;</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Release Information</b>         | <p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.5 for EX Series switches.</p> <p><b>instance</b> option added in Junos OS Release 15.1 for the MX Series.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Description</b>                 | Display the status of Resource Reservation Protocol (RSVP)-enabled interfaces and packet statistics.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Options</b>                     | <p><b>none</b>—Display standard information about the status of RSVP-enabled interfaces and packet statistics.</p> <p><b>brief   detail   extensive   link-management</b>—(Optional) Display the specified level of output.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Display RSVP status information for the specified instance. If <b>instance-name</b> is omitted, RSVP status information is displayed for the master instance.</p> <p><b>link-management</b>—(Optional) Use the link-management option to display the control peers and corresponding TE-link information created by the Link Management Protocol (LMP).</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> |
| <b>Required Privilege Level</b>    | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>List of Sample Output</b>       | <a href="#">show rsvp interface brief on page 1854</a><br><a href="#">show rsvp interface detail on page 1854</a><br><a href="#">show rsvp interface extensive on page 1854</a><br><a href="#">show rsvp interface link-management on page 1855</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Output Fields</b>               | <p><a href="#">Table 83 on page 1852</a> lists the output fields for the <b>show rsvp interface</b> command. Output fields are listed in the approximate order in which they appear.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |

Table 83: show rsvp interface Output Fields

| Field Name                    | Field Description                                                                                                                                                                                                                                                                                                    | Level of Output  |
|-------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------|
| <b>RSVP interface</b>         | Number of interfaces on which RSVP is active. Each interface has one line of output.                                                                                                                                                                                                                                 | All levels       |
| <b>Interface</b>              | Name of the interface.                                                                                                                                                                                                                                                                                               | All levels       |
| <b>Index</b>                  | Index of the interface.                                                                                                                                                                                                                                                                                              | <b>detail</b>    |
| <b>State</b>                  | State of the interface. <ul style="list-style-type: none"> <li>• <b>Disabled</b>—No traffic engineering information is displayed.</li> <li>• <b>Down</b>—Interface is not operational.</li> <li>• <b>Enabled</b>—Displays traffic engineering information.</li> <li>• <b>Up</b>—Interface is operational.</li> </ul> | All levels       |
| <b>NoAuthentication</b>       | Interface does not support RSVP authentication.                                                                                                                                                                                                                                                                      | <b>detail</b>    |
| <b>NoAggregate</b>            | Interface does not support refresh reduction.                                                                                                                                                                                                                                                                        | <b>detail</b>    |
| <b>NoReliable</b>             | Interface does not support refresh reduction message ID extension.                                                                                                                                                                                                                                                   | <b>detail</b>    |
| <b>NoLinkProtection</b>       | Interface does not support link protection.                                                                                                                                                                                                                                                                          | <b>detail</b>    |
| <b>HelloInterval</b>          | Frequency at which RSVP hellos are sent on this interface (in seconds).                                                                                                                                                                                                                                              | <b>detail</b>    |
| <b>Address</b>                | IP address of the local interface.                                                                                                                                                                                                                                                                                   | <b>detail</b>    |
| <b>Active control channel</b> | Next-hop link address to transmit messages.                                                                                                                                                                                                                                                                          | None specified   |
| <b>TELink</b>                 | Traffic-engineered links that are managed by the peer they are associated with.                                                                                                                                                                                                                                      | None specified   |
| <b>Active resv</b>            | Number of reservations that are actively reserving bandwidth on the interface.                                                                                                                                                                                                                                       | All levels       |
| <b>PreemptionCnt</b>          | Number of times an RSVP session was preempted on this interface.                                                                                                                                                                                                                                                     | <b>detail</b>    |
| <b>Update threshold</b>       | Percentage change in reserved bandwidth to trigger an IGP update.                                                                                                                                                                                                                                                    | <b>detail</b>    |
| <b>Subscription</b>           | User-configured subscription factor.                                                                                                                                                                                                                                                                                 | All levels       |
| <b>bc number</b>              | Bandwidth allocated for the specified bandwidth constraint.                                                                                                                                                                                                                                                          | <b>extensive</b> |
| <b>ct number</b>              | Bandwidth allocated for the specified class type.                                                                                                                                                                                                                                                                    | <b>extensive</b> |
| <b>Static BW</b>              | Total interface bandwidth, in bps.                                                                                                                                                                                                                                                                                   | All levels       |
| <b>Available BW</b>           | Amount of bandwidth that RSVP is allowed to reserve, in bps. It is equal to (static bandwidth * subscription factor).                                                                                                                                                                                                | al levels        |

Table 83: show rsvp interface Output Fields (*continued*)

| Field Name                     | Field Description                                                                                                                                               | Level of Output  |
|--------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------|
| <b>Reserved BW</b>             | Currently reserved bandwidth, in bps.                                                                                                                           | All levels       |
| <b>SoftPreemptionCnt</b>       | Number of times a soft preemption occurred on this interface. This number is not included in the <b>PreemptionCnt</b> value.                                    | <b>detail</b>    |
| <b>Overbooked BW</b>           | Currently overbooked bandwidth, in bps, by class type ( <b>ct0</b> through <b>ct3</b> ).                                                                        | <b>detail</b>    |
| <b>Highwater mark</b>          | Highest bandwidth that has ever been reserved on this interface, in bps.                                                                                        | <b>brief</b>     |
| <b>PacketType</b>              | Type of RSVP packet.                                                                                                                                            | <b>detail</b>    |
| <b>Total Sent</b>              | Total number of packets sent.                                                                                                                                   | <b>detail</b>    |
| <b>Total Received</b>          | Total number of packets received since RSVP was enabled.                                                                                                        | <b>detail</b>    |
| <b>Last 5 seconds Sent</b>     | Number of packets sent in the last 5 seconds.                                                                                                                   | <b>detail</b>    |
| <b>Last 5 seconds Received</b> | Number of packets received in the last 5 seconds.                                                                                                               | <b>detail</b>    |
| <b>Path</b>                    | Statistics about Path messages, which are sent from the RSVP sender along the data paths and store path state information in each node along the path.          | <b>detail</b>    |
| <b>PathErr</b>                 | Statistics about PathErr messages, which are advisory messages that are sent upstream to the sender.                                                            | <b>detail</b>    |
| <b>PathTear</b>                | Statistics about PathTear messages, which remove path states and dependent reservation states in any routers along a path.                                      | <b>detail</b>    |
| <b>Resv</b>                    | Statistics about Resv messages, which are sent from the RSVP receiver along the data paths and store reservation state information in each node along the path. | <b>detail</b>    |
| <b>ResvErr</b>                 | Statistics about ResvErr messages, which are advisory messages that are sent when an attempt to establish a reservation fails.                                  | <b>detail</b>    |
| <b>ResvTear</b>                | Statistics about ResvTear messages, which remove reservation states along a path.                                                                               | <b>detail</b>    |
| <b>Hello</b>                   | Number of RSVP hello packets that have been sent to and received from the neighbor.                                                                             | <b>detail</b>    |
| <b>Ack</b>                     | Acknowledge message for refresh reductions.                                                                                                                     | <b>detail</b>    |
| <b>Srefresh</b>                | Summary refresh messages.                                                                                                                                       | <b>detail</b>    |
| <b>EndtoEnd RSVP</b>           | Statistics for the number of end-to-end RSVP messages sent.                                                                                                     | <b>detail</b>    |
| <b>Queue</b>                   | CoS transmit queue number and its associated forwarding class designation.                                                                                      | <b>extensive</b> |

Table 83: show rsvp interface Output Fields (*continued*)

| Field Name                  | Field Description                                                                                                                                 | Level of Output  |
|-----------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|------------------|
| <b>TxRate</b>               | Configured bandwidth in Mbps and configured bandwidth as a percentage of the specified queue.                                                     | <b>extensive</b> |
| <b>Priority</b>             | Weight of the queue relative to other configured queues, in percentage.                                                                           | <b>extensive</b> |
| <b>queue-priority-value</b> | <b>Low, High, None, or Exact.</b> <b>None</b> indicates no rate limiting. <b>Exact</b> indicates the queue transmits at the configured rate only. | <b>extensive</b> |

## Sample Output

### show rsvp interface brief

```

user@host> show rsvp interface brief
RSVP interface: 1 active

```

| Interface | State | Active resv | Subscr-<br>ption | Static<br>BW | Available<br>BW | Reserved<br>BW | Highwater<br>mark |
|-----------|-------|-------------|------------------|--------------|-----------------|----------------|-------------------|
| de0.0     | Up    | 1           | 23%              | 10Mbps       | 989.992kbps     | 1.31Mbps       | 1.31Mbps          |

### show rsvp interface detail

Starting in Junos OS Release 15.2, this command also shows conditional PathTear statistics and Node Hellos.

```

user@host> show rsvp interface detail
so-0/1/1.0 Index 6, State: Ena/Up
  NoAuthentication, NoAggregate, NoReliable, NoLinkProtection
  HelloInterval 3(second)
  Address 192.168.207.29, 10.255.245.194
  ActiveResv 0, PreemptionCnt 0, Update threshold 10%
  Subscription 100%, StaticBW 155.52Mbps, AvailableBW 155.52Mbps
  ReservedBW [0] 155Mbps[1] 0bps[2] 0bps[3] 0bps[4] 0bps[5] 0bps[6] 0bps[7] 0bps
  SoftPreemptionCnt1
  OverbookedBW [0] 0bps[1] 0bps[2] 0bps[3] 0bps[4] 155Mbps[5] 0bps[6] 0bps[7] 0bps
  PacketType

```

|                  | Total |          | Last 5 seconds |          |
|------------------|-------|----------|----------------|----------|
|                  | Sent  | Received | Sent           | Received |
| Path             | 16    | 0        | 1              | 0        |
| PathErr          | 0     | 0        | 0              | 0        |
| PathTear         | 1     | 0        | 0              | 0        |
| Resv             | 0     | 11       | 0              | 1        |
| ResvErr          | 0     | 0        | 0              | 0        |
| ResvTear         | 0     | 0        | 0              | 0        |
| Hello            | 66    | 67       | 1              | 1        |
| Ack              | 0     | 0        | 0              | 0        |
| Srefresh         | 0     | 0        | 0              | 0        |
| EndtoEnd RSVP    | 0     | 0        | 0              | 0        |
| Node Hello       | 100   | 100      | 0              | 0        |
| PathTear(Cond1.) | 0     | 3        | 0              | 0        |

### show rsvp interface extensive

```

user@host> show rsvp interface extensive
so-1/0/0.0 Index 72, State Ena/Up
  NoAuthentication, NoAggregate, NoReliable, NoLinkProtection

```

```

HelloInterval 9(second)
Address 192.168.213.22, 10.255.240.175
ActiveResv 1, PreemptionCnt 0, Update threshold 10%
Subscription 100%,
bc0 = (ct0+ct1+ct2+ct3), StaticBW 622.08Mbps
bc1 = (ct1+ct2+ct3), StaticBW 466.56Mbps
bc2 = (ct2+ct3), StaticBW 311.04Mbps
bc3 = ct3, StaticBW 155.52Mbps
ct0: StaticBW 155.52Mbps, AvailableBW 522.08Mbps
ReservedBW [0] 0bps[1] 0bps[2] 0bps[3] 0bps[4] 0bps[5] 0bps[6] 0bps[7] 0bps
ct1: StaticBW 155.52Mbps, AvailableBW 366.56Mbps
ReservedBW [0] 100Mbps[1] 0bps[2] 0bps[3] 0bps[4] 0bps[5] 0bps[6] 0bps[7] 0bps

ct2: StaticBW 155.52Mbps, AvailableBW 311.04Mbps
ReservedBW [0] 0bps[1] 0bps[2] 0bps[3] 0bps[4] 0bps[5] 0bps[6] 0bps[7] 0bps
ct3: StaticBW 155.52Mbps, AvailableBW 155.52Mbps
ReservedBW [0] 0bps[1] 0bps[2] 0bps[3] 0bps[4] 0bps[5] 0bps[6] 0bps[7] 0bps
Queue      TxRate      Priority Exact
0          155.52Mbps      25%     Low
1          155.52Mbps      25%     Low
2          155.52Mbps      25%     Low
3          155.52Mbps      25%     Low

```

#### show rsvp interface link-management

```

user@host> show rsvp interface link-management
RSVP interface: 2 active
PEER-C State: Up
Active Control Channel: so-0/1/0.0

TElink: TElnk1, Link ID: 37811
ActiveResv 0, PreemptionCnt 0
StaticBW 155.52Mbps, ReservedBW: 0bps, AvailableBW: 155.52Mbps

TElink: TElnk2, Link ID: 37808
ActiveResv 1, PreemptionCnt 0
StaticBW 155.52Mbps, ReservedBW: 0bps, AvailableBW: 155.52Mbps

PEER-B State: Up
Active Control Channel: so-1/0/0.0

TElink: TElnkAB1, Link ID: 1598
ActiveResv 0, PreemptionCnt 0
StaticBW 622.08Mbps, ReservedBW: 0bps, AvailableBW: 622.08Mbps

TElink: TElnkAB2, Link ID: 1597
ActiveResv 0, PreemptionCnt 0
StaticBW 622.08Mbps, ReservedBW: 0bps, AvailableBW: 622.08Mbps

```

## show rsvp neighbor

|                                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>List of Syntax</b>              | <a href="#">Syntax on page 1856</a><br><a href="#">Syntax (EX Series Switches) on page 1856</a>                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Syntax</b>                      | <pre>show rsvp neighbor &lt;brief   detail   extensive&gt; &lt;instance <i>instance-name</i>&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt;</pre>                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Syntax (EX Series Switches)</b> | <pre>show rsvp neighbor &lt;brief   detail&gt;</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Release Information</b>         | <p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.5 for EX Series switches.</p> <p><b>instance</b> option added in Junos OS Release 15.1 for the MX Series.</p>                                                                                                                                                                                                                                                                                                                              |
| <b>Description</b>                 | Display Resource Reservation Protocol (RSVP) neighbors that were discovered dynamically during the exchange of RSVP packets.                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Options</b>                     | <p><b>none</b>—Display standard information about RSVP neighbors.</p> <p><b>brief   detail</b>—(Optional) Display the specified level of output.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Display the RSVP neighbor information for the specified instance. If <b>instance-name</b> is omitted, RSVP neighbor information is displayed for the master instance.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> |
| <b>Required Privilege Level</b>    | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>List of Sample Output</b>       | <a href="#">show rsvp neighbor on page 1860</a><br><a href="#">show rsvp neighbor detail on page 1860</a>                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Output Fields</b>               | <a href="#">Table 84 on page 1856</a> lists the output fields for the <b>show rsvp neighbor</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                                                                                                                                                                                                                                              |

**Table 84: show rsvp neighbor Output Fields**

| Field Name           | Field Description                                                                                                                                                    | Level of Output |
|----------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| <b>RSVP neighbor</b> | Number of neighbors that the routing device has learned of. Each neighbor has one line of output.                                                                    | All levels      |
| <b>via</b>           | Name of the interface where the neighbor has been detected. In the case of generalized MPLS (GMPLS) LSPs, the name of the peer where the neighbor has been detected. | <b>detail</b>   |
| <b>Address</b>       | Address of a learned neighbor.                                                                                                                                       | All levels      |

Table 84: show rsvp neighbor Output Fields (*continued*)

| Field Name                 | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | Level of Output |
|----------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| <b>Idle</b>                | Length of time the neighbor has been idle, in seconds.<br><br><b>NOTE:</b> Until Junos OS Release 15.1, in the output of the show rsvp neighbor command, the value under the Idle field immediately reflects the changed idle time when a link in the neighboring router is brought down. Starting with Junos OS Release 15.2, a router does not declare a neighbor as idle when a hello adjacency exists and has not timed out. When an interface is brought down, RSVP brings down the neighbor because of the notification it receives from IGP. The reason for considering the IGP-down notification is to support BFD-triggered fast reroute (FRR) and RSVP-TE is not directly a client for BFD notifications. When RSVP brings down the neighbor, the input/output process is not impacted. As a result, the idle time in the output of the show command is not immediately updated.                                                                                                        | All levels      |
| <b>Up/Dn</b>               | Number of neighbor up or down transitions detected by RSVP hello packets. If the up count is 1 greater than the down count, the neighbor is currently up. Otherwise, the neighbor is down. Neighbors that do not support RSVP hello packets, such as routers running Junos OS Release 3.2 or earlier, are not reported as up or down.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             | All levels      |
| <b>Up cnt and Down cnt</b> | Number of neighbor up or down transitions detected by RSVP hello packets. If the up count is 1 greater than the down count, the neighbor is currently up. Otherwise, the neighbor is down. Neighbors that do not support RSVP hello packets, such as routers running Junos OS Release 3.2 or earlier, are not reported as up or down.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             | <b>detail</b>   |
| <b>status</b>              | State of the RSVP neighbor: <ul style="list-style-type: none"> <li><b>Up</b>—Routing device can detect RSVP Hello messages from the neighbor.</li> <li><b>Down</b>—Routing device has received one of the following indications: <ul style="list-style-type: none"> <li>Communication failure from the neighbor.</li> <li>Communication from IGP that the neighbor is unavailable.</li> <li>Change in the sequence numbers in the RSVP Hello messages sent by the neighbor.</li> </ul> </li> <li><b>Restarting</b>—RSVP neighbor is unavailable and might be restarting. The neighbor remains in this state until it has restarted or is declared dead. This state is possible only when graceful restart is enabled.</li> <li><b>Restarted</b>—RSVP neighbor has restarted and is undergoing state recovery (graceful restart) procedures.</li> <li><b>Dead</b>—Routing device has lost all communication with the RSVP neighbor. Any RSVP sessions with that neighbor are torn down.</li> </ul> | <b>detail</b>   |
| <b>LastChange</b>          | Time elapsed since the neighbor state changed either from up to down or from down to up. The format is <b>hh:mm:ss</b> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | All levels      |
| <b>Last changed time</b>   | Time elapsed since the neighbor state changed either from up to down or from down to up.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | <b>detail</b>   |
| <b>HelloInt</b>            | Frequency at which RSVP hellos are sent on this interface (in seconds).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | All levels      |
| <b>HelloTx/Rx</b>          | Number of hello packets sent to and received from the neighbor.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | All levels      |

Table 84: show rsvp neighbor Output Fields (*continued*)

| Field Name               | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | Level of Output |
|--------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| <b>Hello</b>             | Number of RSVP hello packets that have been sent to and received from the neighbor.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | <b>detail</b>   |
| <b>Message received</b>  | Number of Path and Resv messages that this routing device has received from the neighbor.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | <b>detail</b>   |
| <b>Remote Instance</b>   | Identification provided by the remote routing device during Hello message exchange.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | <b>detail</b>   |
| <b>Local Instance</b>    | Identification sent to the remote routing device during Hello message exchange.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | <b>detail</b>   |
| <b>Refresh reduction</b> | <p>Measure of processing overhead requests of refresh messages. Refresh reduction extensions improve routing device performance by reducing the process overhead, thus increasing the number of LSPs a routing device can support. <b>Refresh reduction</b> can have the following values:</p> <ul style="list-style-type: none"> <li>• <b>operational</b>—All four RSVP refresh reduction extensions—message ack, bundling, summary refresh, and staged refresh timer—are functional between the two neighboring routing devices. For a detailed explanation of these extensions, see RFC 2961.</li> <li>• <b>incomplete</b>—Some RSVP refresh reduction extensions are functional between the two neighboring routing devices.</li> <li>• <b>no operational</b>—Either the refresh reduction feature has been turned off, or the remote routing device cannot support the refresh reduction extensions.</li> </ul> | <b>detail</b>   |
| <b>Remote end</b>        | <p>Neighboring routing device's status with regard to refresh reduction:</p> <ul style="list-style-type: none"> <li>• <b>enabled</b>—Remote routing device has requested refresh reduction during RSVP message exchanges.</li> <li>• <b>disabled</b>—Remote routing device does not require refresh reduction.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | <b>detail</b>   |
| <b>Ack-extension</b>     | <p>An RSVP refresh reduction extension:</p> <ul style="list-style-type: none"> <li>• <b>enabled</b>—Both local and remote routing devices support the ack-extension (RFC 2961).</li> <li>• <b>disabled</b>—Remote routing device does not support the ack-extension.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | <b>detail</b>   |
| <b>Link protection</b>   | <p>Status of the MPLS fast reroute mechanism that protects traffic from link failure:</p> <ul style="list-style-type: none"> <li>• <b>enabled</b>—Link protection feature has been turned on, protecting the neighbor with a bypass LSP.</li> <li>• <b>disabled</b>—No link protection feature has been enabled for this neighbor.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | <b>detail</b>   |
| <b>LSP name</b>          | Name of the bypass LSP.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | <b>detail</b>   |



Table 84: show rsvp neighbor Output Fields (*continued*)

| Field Name                   | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | Level of Output |
|------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| <b>Bypass LSP</b>            | Status of the bypass LSP. It can have the following values: <ul style="list-style-type: none"> <li>• <b>does not exist</b>—Bypass LSP is not available.</li> <li>• <b>connecting</b>—Routing device is in the process of establishing a bypass LSP, and the LSP is not available for link protection at the moment.</li> <li>• <b>operational</b>—Bypass LSP is up and running.</li> <li>• <b>down</b>—Bypass LSP has gone down, with the most probable cause a node or a link failure on the bypass path.</li> </ul> | <b>detail</b>   |
| <b>Backup routes</b>         | Number of user LSPs (or routes) that are being protected by a bypass LSP (before link failure).                                                                                                                                                                                                                                                                                                                                                                                                                       | <b>detail</b>   |
| <b>Backup LSPs</b>           | Number of LSPs that have been temporarily established to maintain traffic by refreshing the downstream LSPs during link failure (not a one-to-one correspondence).                                                                                                                                                                                                                                                                                                                                                    | <b>detail</b>   |
| <b>Bypass explicit route</b> | Explicit route object's (ERO) path that is taken by the bypass LSP.                                                                                                                                                                                                                                                                                                                                                                                                                                                   | <b>detail</b>   |
| <b>Restart time</b>          | Length of time a neighbor waits to receive a Hello from the restarting node before declaring the node dead and deleting the states (in milliseconds).                                                                                                                                                                                                                                                                                                                                                                 | <b>detail</b>   |
| <b>Recovery time</b>         | Length of time during which the restarting node attempts to recover its lost states with help from its neighbors (in milliseconds). Recovery time is advertised by the restarting node to its neighbors, and applies to nodal faults. The restarting node considers its graceful restart complete after this time has elapsed.                                                                                                                                                                                        | <b>detail</b>   |

## Sample Output

### show rsvp neighbor

```
user@host> show rsvp neighbor
RSVP neighbor: 2 learned
Address          Idle Up/Dn LastChange HelloInt HelloTx/Rx
192.168.207.203   0 3/2    13:01      3   366/349
192.168.207.207   0 1/0    22:49      3   448/448
```

### show rsvp neighbor detail

Starting in Junos OS Release 16.1, this command also shows whether enhanced FRR procurers are enabled on the neighbor. Neighbors with Point of Local Repair (PLR) or Node Protecting Merge Point (NP-MP) also show the Hellos sent /received count.

```
user@host> show rsvp neighbor detail
RSVP neighbor: 2 learned
Address: 192.168.207.203 via: ecstasy1 status: Up
  Last changed time: 28:47, Idle: 0 sec, Up cnt: 3, Down cnt: 2
  Message received: 632
  Hello: sent 673, received 656, interval 3 sec
  Remote instance: 0x6432838a, Local instance: 0x74b72e36
  Refresh reduction: operational
    Remote end: enabled, Ack-extension: enabled
  Enhanced FRR local protection: enabled
Link protection: enabled
  LSP name: Bypass_to_192.168.207.203
  Bypass LSP: operational, Backup routes: 1, Backup LSPs: 0
  Bypass explicit route: 192.168.207.207 192.168.207.224
  Restart time: 60000 msec, Recovery time: 0 msec
```

## show rsvp session

|                                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|--------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>List of Syntax</b>                      | <a href="#">Syntax on page 1861</a><br><a href="#">Syntax (EX and QFX Series Switches) on page 1861</a>                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Syntax</b>                              | <pre>show rsvp session &lt;brief   detail   extensive   terse&gt; &lt;bidirectional   unidirectional&gt; &lt;bypass&gt; &lt;down   up&gt; &lt;externally-provisioned&gt; &lt;instance <i>instance-name</i>&gt; &lt;interface <i>interface-name</i>&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt; &lt;lsp-type&gt; &lt;name <i>session-name</i>&gt; &lt;p2mp&gt; &lt;session-type&gt; &lt;statistics&gt; &lt;te-link <i>te-link</i>&gt;</pre>                                           |
| <b>Syntax (EX and QFX Series Switches)</b> | <pre>show rsvp session &lt;brief   detail   extensive   terse&gt; &lt;bidirectional   unidirectional&gt; &lt;bypass&gt; &lt;down   up&gt; &lt;externally-provisioned&gt; &lt;interface <i>interface-name</i>&gt; &lt;lsp-type&gt; &lt;name <i>session-name</i>&gt; &lt;p2mp&gt; &lt;session-type&gt; &lt;statistics&gt; &lt;te-link <i>te-link</i>&gt;</pre>                                                                                                                                           |
| <b>Release Information</b>                 | <p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.5 for EX Series switches.</p> <p><b>externally-provisioned</b> option added in Junos OS Release 13.3.</p> <p>Command introduced in Junos OS Release 13.2X51-D15 for QFX Series.</p> <p><b>instance</b> option added in Junos OS Release 15.1 for the MX Series.</p>                                                                                                                                 |
| <b>Description</b>                         | Display information about Resource Reservation Protocol (RSVP) sessions.                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Options</b>                             | <p><b>none</b>—Display standard information about all RSVP sessions.</p> <p><b>brief   detail   extensive   terse</b>—(Optional) Display the specified level of output.</p> <p><b>bidirectional   unidirectional</b>—(Optional) Display information about bidirectional or unidirectional RSVP sessions only, respectively.</p> <p><b>bypass</b>—(Optional) Display RSVP sessions for bypass LSPs.</p> <p><b>down   up</b>—(Optional) Display only LSPs that are inactive or active, respectively.</p> |

**externally-provisioned**—(Optional) Display the LSPs that are generated dynamically and provisioned by an external Path Computation Element (PCE).

**instance *instance-name***—(Optional) Display RSVP sessions for the specified instance. If **instance-name** is omitted, RSVP session information is displayed for the master instance.

**interface *interface-name***—(Optional) Display RSVP sessions for the specified interface only.

**logical-system (all | *logical-system-name*)**—(Optional) Perform this operation on all logical systems or on a particular logical system.

***lsp-type***—(Optional) Display information about RSVP sessions with regard to LSPs:

- **bypass**—Sessions used for bypass LSPs.
- **lsp**—Sessions used to set up LSPs.
- **nolsp**—Sessions not used to set up LSPs.

**name *session-name***—(Optional) Display information about the named session.

**p2mp**—(Optional) Display point-to-multipoint information.

***session-type***—(Optional) Display information about a particular session type:

- **egress**—Sessions that terminate on this routing device.
- **ingress**—Sessions that originate from this routing device.
- **transit**—Sessions that transit through this routing device.

**statistics**—(Optional) Display packet statistics.

**te-link *te-link***—(Optional) Display sessions with reservations on the specified TE link.

**Required Privilege  
Level**

view

**Related  
Documentation**

- [clear rsvp session on page 1840](#)

**List of Sample Output**

[show rsvp session on page 1866](#)  
[show rsvp session statistics on page 1866](#)  
[show rsvp session detail on page 1867](#)  
[show rsvp session detail \(When Egress Protection Is in Standby Mode\) on page 1867](#)  
[show rsvp session detail \(When Egress Protection Is in Effect During a Local Repair\) on page 1867](#)  
[show rsvp session detail \(Path MTU Output Field\) on page 1868](#)  
[show rsvp session detail \(GMPLS\) on page 1868](#)  
[show rsvp session extensive on page 1868](#)  
[show rsvp session extensive transit on page 1869](#)  
[show rsvp session p2mp \(Ingress Router\) on page 1870](#)

[show rsvp session p2mp \(Transit Router\) on page 1870](#)

**Output Fields** [Table 85 on page 1863](#) describes the output fields for the **show rsvp session** command. Output fields are listed in the approximate order in which they appear.

**Table 85: show rsvp session Output Fields**

| Field Name               | Field Description                                                                                                                                                                                                                                                                                        | Level of Output     |
|--------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------|
| <b>Ingress RSVP</b>      | Information about ingress RSVP sessions.                                                                                                                                                                                                                                                                 | <b>detail</b>       |
| <b>Ingress RSVP</b>      | Information about ingress RSVP sessions. Each session has one line of output.                                                                                                                                                                                                                            | All levels          |
| <b>Egress RSVP</b>       | Information about egress RSVP sessions.                                                                                                                                                                                                                                                                  | All levels          |
| <b>Transit RSVP</b>      | Information about the transit RSVP sessions.                                                                                                                                                                                                                                                             | All levels          |
| <b>P2MP name</b>         | (Appears only when the <b>p2mp</b> option is specified). Name of the point-to-multipoint LSP path.                                                                                                                                                                                                       | All levels          |
| <b>P2MP branch count</b> | (Appears only when the <b>p2mp</b> option is specified). Number of LSPs receiving packets from the point-to-multipoint LSP.                                                                                                                                                                              | All levels          |
| <b>To</b>                | Destination (egress routing device) of the session.                                                                                                                                                                                                                                                      | All levels          |
| <b>From</b>              | Source (ingress routing device) of the session.                                                                                                                                                                                                                                                          | All levels          |
| <b>State</b>             | State of the path: <b>Up</b> , <b>Down</b> , or <b>AdminDn</b> . <b>AdminDn</b> indicates that the LSP is being taken down gracefully.                                                                                                                                                                   | All levels          |
| <b>Address</b>           | Destination (egress routing device) of the LSP.                                                                                                                                                                                                                                                          | <b>detail</b>       |
| <b>From</b>              | Source (ingress routing device) of the session.                                                                                                                                                                                                                                                          | <b>detail</b>       |
| <b>LSPstate</b>          | State of the LSP that is being handled by this RSVP session. It can be either <b>Up</b> , <b>Dn</b> (down), or <b>AdminDn</b> . <b>AdminDn</b> indicates that the LSP is being taken down gracefully.                                                                                                    | <b>brief detail</b> |
| <b>Rt</b>                | Number of active routes (prefixes) that have been installed in the routing table. For ingress RSVP sessions, the routing table is the primary IPv4 table ( <b>inet.0</b> ). For transit and egress RSVP sessions, the routing table is the primary MPLS table ( <b>mpls.0</b> ).                         | <b>brief</b>        |
| <b>Active Route</b>      | Number of active routes (prefixes) that have been installed in the forwarding table. For ingress RSVP sessions, the forwarding table is the primary IPv4 table ( <b>inet.0</b> ). For transit and egress RSVP sessions, the forwarding table is the primary MPLS table ( <b>mpls.0</b> ).                | <b>detail</b>       |
| <b>LSPname</b>           | Name of the LSP.                                                                                                                                                                                                                                                                                         | <b>brief detail</b> |
| <b>LSPpath</b>           | Indicates whether the RSVP session is for the primary or secondary LSP path. <b>LSPpath</b> can be either <b>primary</b> or <b>secondary</b> and can be displayed on the ingress, egress, and transit routing devices. <b>LSPpath</b> can also indicate when a graceful LSP deletion has been triggered. | <b>detail</b>       |

Table 85: show rsvp session Output Fields (*continued*)

| Field Name                      | Field Description                                                                                                                                                                                                                                  | Level of Output     |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------|
| <b>Bypass</b>                   | (Egress routing device) Destination address for the bypass LSP.                                                                                                                                                                                    | <b>detail</b>       |
| <b>Bidir</b>                    | (When LSP is bidirectional) LSP will allow data to travel in both directions between GMPLS devices.                                                                                                                                                | <b>detail</b>       |
| <b>Bidirectional</b>            | (When LSP is bidirectional) LSP will allow data to travel both ways between GMPLS devices.                                                                                                                                                         | <b>detail</b>       |
| <b>Upstream label in</b>        | (When LSP is bidirectional) Incoming label for reverse direction traffic for this LSP.                                                                                                                                                             | <b>detail</b>       |
| <b>Upstream label out</b>       | (When LSP is bidirectional) Outgoing label for reverse direction traffic for this LSP.                                                                                                                                                             | <b>detail</b>       |
| <b>Recovery label received</b>  | (When LSP is bidirectional) Label the upstream node suggests for use in the Resv message that is sent.                                                                                                                                             | <b>detail</b>       |
| <b>Recovery label sent</b>      | (When LSP is bidirectional) Label the downstream node suggests for use in its Resv messages that is returned.                                                                                                                                      | <b>detail</b>       |
| <b>Suggested label received</b> | (When LSP is bidirectional) Label the upstream node suggests for use in the Resv message that is sent.                                                                                                                                             | <b>detail</b>       |
| <b>Suggested label sent</b>     | (When LSP is bidirectional) Label the downstream node suggests for use in its Resv message that is returned.                                                                                                                                       | <b>detail</b>       |
| <b>Resv style or Style</b>      | RSVP reservation style. This field consists of two parts. The first is the number of active reservations. The second is the reservation style, which can be <b>FF</b> (fixed filter), <b>SE</b> (shared explicit), or <b>WF</b> (wildcard filter). | <b>brief detail</b> |
| <b>Label in</b>                 | Incoming label for this LSP.                                                                                                                                                                                                                       | <b>brief detail</b> |
| <b>Label out</b>                | Outgoing label for this LSP.                                                                                                                                                                                                                       | <b>brief detail</b> |
| <b>Time left</b>                | Number of seconds remaining in the lifetime of the reservation.                                                                                                                                                                                    | <b>brief detail</b> |
| <b>Since</b>                    | Date and time when the RSVP session was initiated.                                                                                                                                                                                                 | <b>detail</b>       |
| <b>Tspec</b>                    | Sender's traffic specification, which describes the sender's traffic parameters.                                                                                                                                                                   | <b>detail</b>       |
| <b>DiffServ info</b>            | Indicates whether the LSP is a multiclass LSP ( <b>multiclass diffServ-TE LSP</b> ) or a Differentiated-Services-aware traffic engineering LSP ( <b>diffServ-TE LSP</b> ).                                                                         | <b>detail</b>       |
| <b>bandwidth</b>                | Bandwidth for each class type ( <b>ct0</b> , <b>ct1</b> , <b>ct2</b> , or <b>ct3</b> ).                                                                                                                                                            | <b>detail</b>       |
| <b>Port number</b>              | Protocol ID and sender/receiver port used in this RSVP session.                                                                                                                                                                                    | <b>detail</b>       |
| <b>Attrib flags</b>             | <b>Non-PHP</b> indicates that ultimate hop popping has been requested by the LSP using this RSVP session                                                                                                                                           | <b>extensive</b>    |

Table 85: show rsvp session Output Fields (*continued*)

| Field Name                                          | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | Level of Output         |
|-----------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------|
| <b>FastReroute desired</b>                          | Fast reroute has been requested by the ingress routing device.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | <b>detail</b>           |
| <b>Soft preemption desired</b>                      | Soft preemption has been requested by the ingress routing device.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | <b>detail</b>           |
| <b>FastReroute desired</b>                          | (Data [not a bypass or backup] LSP when the protection scheme has been requested) Fast reroute (one-to-one backup) has been requested by the ingress routing device.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | <b>detail extensive</b> |
| <b>Link protection desired</b>                      | (Data [not a bypass or backup] LSP when the protection scheme has been requested) Link protection (many-to-one backup) has been requested by the ingress routing device.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | <b>detail extensive</b> |
| <b>Node/Link protection desired</b>                 | (Data [not a bypass or backup] LSP when the protection scheme has been requested) Node and link protection (many-to-one backup) has been requested by the ingress routing device.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | <b>detail extensive</b> |
| <b>Type</b>                                         | <p>LSP type:</p> <ul style="list-style-type: none"> <li>• <b>Link protected LSP</b>—LSP has been protected by link protection at the outgoing interface. The name of the bypass used is also listed here (<b>extensive</b>).</li> <li>• <b>Node/Link protected LSP</b>—LSP has been protected by node and link protection at the outgoing interface. The name of the bypass used is also listed here (<b>extensive</b>).</li> <li>• <b>Protection down</b>—LSP is not currently protected.</li> <li>• <b>Bypass LSP</b>—LSP that is used to protect one or more user LSPs in case of link failure.</li> <li>• <b>Backup LSP at Point-of-Local-Repair (PLR)</b>—LSP that has been temporarily established to protect a user LSP at the ingress of a failed link.</li> <li>• <b>Backup LSP at Merge Point (MP)</b>—LSP that has been temporarily established to protect a user LSP at the egress of a failed link.</li> </ul> | <b>detail extensive</b> |
| <b>New bypass</b>                                   | New bypass (the bypass name is also displayed) has been activated to protect the LSP.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       | <b>extensive</b>        |
| <b>Link protection up, using <i>bypass-name</i></b> | Link protection (the bypass name is also displayed) has been activated for the LSP.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | <b>extensive</b>        |
| <b>Creating backup LSP, link down</b>               | A <b>link down</b> event occurred, and traffic is being switched over to the bypass LSP.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | <b>extensive</b>        |
| <b>Deleting backup LSP, protected LSP restored</b>  | Link has come back up and the LSP has been restored. Because the backup LSP is no longer needed, it is deleted.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             | <b>extensive</b>        |
| <b>Path mtu</b>                                     | Displays the value of the path MTU received from the network (through signaling) and the value used for forwarding. This value is only displayed on ingress routing devices with the <b>allow-fragmentation</b> statement configured at the <b>[edit protocols mpls path-mtu]</b> hierarchy level. If there is a detour LSP, the path MTU for the detour is also displayed.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | <b>detail</b>           |

Table 85: show rsvp session Output Fields (*continued*)

| Field Name                            | Field Description                                                                                                                                                                                                                                                                   | Level of Output |
|---------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| Egress protection<br>PLR as protector | RSVP state on the Protector or the point-of-local-repair (PLR) routing device: <ul style="list-style-type: none"> <li><b>Active</b>— Egress protection is available at the Protector or the PLR routing device.</li> <li><b>In Use</b>— Local repair has been completed.</li> </ul> | detail          |
| PATH rcvfrom                          | Address of the previous-hop (upstream) routing device or client, interface the neighbor used to reach this routing device, and number of packets received from the upstream neighbor.                                                                                               | detail          |
| Adspec                                | MTU signaled from the ingress routing device to the egress routing device by means of the adspec object.                                                                                                                                                                            | detail          |
| PATH sentto                           | Address of the next-hop (downstream) routing device or client, interface used to reach this neighbor (or peer-name in the GMPLS LSP case), and number of packets sent to the downstream routing device.                                                                             | detail          |
| Explct route                          | Explicit route for the session. Normally this value will be the same as that of record route. Differences indicate that path rerouting has occurred, typically during fast reroute.                                                                                                 | detail          |
| Record route                          | Recorded route for the session, taken from the record route object. Normally this value will be the same as that of explct route. Differences indicate that path rerouting has occurred, typically during fast reroute.                                                             | detail          |

## Sample Output

### show rsvp session

```

user@host> show rsvp session
Ingress RSVP: 1 sessions
To          From          State  Rt  Style Labelin Labelout LSPName
10.255.245.214 10.255.245.212 AdminDn 0 1 FF      -      22293 LSP Bidir
Total 1 displayed, Up 1, Down 0

Egress RSVP: 2 sessions
To          From          State  Rt  Style Labelin Labelout LSPName
10.255.245.194 10.255.245.195 Up      0 1 FF    39811    - Gpro3-ba Bidir
10.255.245.194 10.255.245.195 Up      0 1 FF      3      - pro3-ba
Total 2 displayed, Up 2, Down 0

Transit RSVP: 1 sessions
To          From          State  Rt  Style Labelin Labelout LSPName
10.255.245.198 10.255.245.197 Up      0 1 SE   100000    3 pro3-de
Total 1 displayed, Up 1, Down 0

```

### show rsvp session statistics

```

user@host> show rsvp session statistics
Ingress RSVP: 2 sessions
To          From          State  Packets  Bytes  LSPName
10.255.245.24 10.255.245.22 Up      0        0    pro3-bd
10.255.245.24 10.255.245.22 Up    44868  2333136 pro3-bd-2

```



```

Total 2 displayed, Up 2, Down 0
Egress RSVP: 2 sessions
To          From          State  Packets  Bytes  LSPName
10.255.245.22 10.255.245.24  Up    0        0    pro3-db
10.255.245.22 10.255.245.24  Up    0        0    pro3-db-2
Total 2 displayed, Up 2, Down 0
Transit RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0

```

#### show rsvp session detail

```

user@host> show rsvp session detail
Ingress RSVP: 1 sessions
1.1.1.1
  From: 2.2.2.2, LSPstate: Up, ActiveRoute: 0
  LSPName: to-a, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 3
  Resv style: 1 FF, Label in: -, Label out: 3
  Time left: -, Since: Fri Mar 26 18:42:42 2004
  Tspec: rate 300kbps size 300kbps peak Infbps m 20 M 1500
  DiffServ info: diffServ-TE LSP, bandwidth: <ct1 300kbps>
  Port number: sender 1 receiver 15876 protocol 0
  PATH rcvfrom: localclient
  Adspec: sent MTU 1500
  PATH sentto: 192.168.37.16 (t1-0/2/1.0) 1 pkt

```

#### show rsvp session detail (When Egress Protection Is in Standby Mode)

```

user@host> show rsvp session detail
Ingress RSVP: 1 sessions
1.1.1.1
  From: 2.2.2.2, LSPstate: Up, ActiveRoute: 0
  LSPName: to-a, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 3
  Resv style: 1 FF, Label in: -, Label out: 3
  Time left: -, Since: Fri Mar 26 18:42:42 2004
  Tspec: rate 300kbps size 300kbps peak Infbps m 20 M 1500
  DiffServ info: diffServ-TE LSP, bandwidth: <ct1 300kbps>
  Port number: sender 1 receiver 15876 protocol 0
  Egress protection PLR as protector: Active
  PATH rcvfrom: localclient
  Adspec: sent MTU 1500
  PATH sentto: 192.168.37.16 (t1-0/2/1.0) 1 pkt

```

#### show rsvp session detail (When Egress Protection Is in Effect During a Local Repair)

```

user@host> show rsvp session detail
Ingress RSVP: 1 sessions
1.1.1.1
  From: 2.2.2.2, LSPstate: Down, ActiveRoute: 0
  LSPName: to-a, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 3
  Resv style: 1 FF, Label in: -, Label out: 3
  Time left: -, Since: Fri Mar 26 18:42:42 2004
  Tspec: rate 300kbps size 300kbps peak Infbps m 20 M 1500
  DiffServ info: diffServ-TE LSP, bandwidth: <ct1 300kbps>
  Port number: sender 1 receiver 15876 protocol 0
  Egress protection PLR as protector: In Use
  PATH rcvfrom: localclient

```

```

Adspec: sent MTU 1500
PATH sentto: 192.168.37.16 (t1-0/2/1.0) 1 pkt

```

#### show rsvp session detail (Path MTU Output Field)

```

user@host> show rsvp session detail
Ingress RSVP: 1 sessions
10.255.245.3
  From: 10.255.245.5, LSPstate: Up, ActiveRoute: 3
  LSPname: to-c, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 100432
  Resv style: 1 FF, Label in: -, Label out: 100432
  Time left: -, Since: Mon Aug 16 17:54:40 2006
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 9192
  Port number: sender 1 receiver 57843 protocol 0
  FastReroute desired
  PATH rcvfrom: localclient
  Adspec: sent MTU 4470
  Path mtu: received 4470, using 4458 for forwarding
  PATH sentto: 192.168.37.89 (so-0/2/3.0) 11 pkts
  RESV rcvfrom: 192.168.37.89 (so-0/2/3.0) 10 pkts
  Explct route: 192.168.37.89
  Record route: <self> 192.168.37.89 192.168.37.87
    Detour is Up
    Detour Tspec: rate 0bps size 0bps peak Infbps m 20 M 9192
    Detour adspec: sent MTU 1512
    Path mtu: received 1512, using 1500 for forwarding

```

#### show rsvp session detail (GMPLS)

```

user@host> show rsvp session detail
Ingress RSVP: 1 sessions
192.168.4.1
  From: 192.168.1.1, LSPstate: Dn, ActiveRoute: 0
  LSPname: gmpls-r1-to-r3, LSPpath: Primary
  Bidirectional, Upstream label in: 21253, Upstream label out: -
  Suggested label received: -, Suggested label sent: 21253
  Recovery label received: -, Recovery label sent: -
  Resv style: 0 -, Label in: -, Label out: -
  Time left: -, Since: Mon Aug 16 17:54:40 2006
  Tspec: rate 0bps size 0bps peak 155.52Mbps m 20 M 1500
  Port number: sender 2 receiver 46115 protocol 0
  PATH rcvfrom: localclient
  Adspec: sent MTU 1500
  PATH MTU: received 0
  PATH sentto: 10.35.1.5 (so-0/2/3.0) 11 pkts
  Explct route: 100.100.100.100 93.93.93.93
  Record route: <self> 100.100.100.100 93.93.93.93
  Total 1 displayed, Up 0, Down 1
  Egress RSVP: 0 sessions
  Total 0 displayed, Up 0, Down 0
  Transit RSVP: 0 sessions
  Total 0 displayed, Up 0, Down 0

```

#### show rsvp session extensive

Starting in Junos OS Release 16.1, this command includes additional details for both the incoming and outgoing Path and Resv messages. The information includes the internal message handle and revision number, as well as the message ID included by the neighbor in the signaling message.

```

user@host> show rsvp session extensive
Ingress RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0

Egress RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit RSVP: 1 sessions

16.0.0.5
  From: 16.0.0.1, LSPstate: Up, ActiveRoute: 0
  LSPname: lto5, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 299856
  Resv style: 1 SE, Label in: 299776, Label out: 299856
  Time left: 123, Since: Sat Nov 29 10:39:15 2014
  Tspec: rate 0bps size 0bps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 52631 protocol 0
  PATH rcvfrom: 16.1.2.1 (ge-0/0/0.0) 2 pkts
  incoming message handle: P-1/2, ID: 0xc82fd7/322
  Adspec: received MTU 1500 sent MTU 1500
  PATH sentto: 16.2.4.4 (ge-0/0/1.0) 1 pkts
  outgoing message state: refreshing, ID: 0xcacec0/22
  RESV rcvfrom: 16.2.4.4 (ge-0/0/1.0) 1 pkts, Entropy label: Yes
  incoming message handle: R-2/1, ID: 0xc82f3e/217
  RESV
  outgoing message state: refreshing, ID: 0xcacec0/17
  Explct route: 16.2.4.4 16.99.0.5
  Record route: 16.1.2.1 <self> 16.2.4.4 16.99.0.5
  Total 1 displayed, Up 1, Down 0

```

#### show rsvp session extensive transit

Starting in Junos OS Release 16.1, this command also shows node-related details, including whether enhanced local protection is enabled for the LSP and whether the node is a merge point. If the latter is true, both the IP address of the Point of Local Repair (PLR) and the status (LP-MP, NP-MP, or Non-MP) are shown.

```

user@host> show rsvp session extensive transit
  From: 81.1.1.1, LSPstate: Up, ActiveRoute: 0
  LSPname: A-D-1, LSPpath: Primary
  Suggested label received: -, Suggested label sent: -
  Recovery label received: -, Recovery label sent: 299776
  Resv style: 1 SE, Label in: 299776, Label out: 299776
  Time left: 117, Since: Tue May 6 08:39:44 2014
  Tspec: rate 700Mbps size 700Mbps peak Infbps m 20 M 1500
  Port number: sender 1 receiver 24131 protocol 0
  Node/Link protection desired
  Type: Node/Link protected LSP, using Bypass->81.2.3.3->81.3.4.4
    2 May 6 08:39:47 Node protection up, using Bypass->81.2.3.3->81.3.4.4
    1 May 6 08:39:44 New bypass Bypass->81.2.3.3->81.3.4.4
  Enhanced Local Protection: Enabled, LP-MP for 81.2.2.2, NP-MP for 81.1.1.1
  PATH rcvfrom: 81.1.2.1 (lt-0/2/0.201) 5371 pkts
  Adspec: received MTU 1500 sent MTU 1500
  PATH sentto: 81.2.3.3 (lt-0/2/0.203) 5374 pkts
  RESV rcvfrom: 81.2.3.3 (lt-0/2/0.203) 5372 pkts, Entropy label: No
  Record route: 81.1.2.1 <self> 81.3.3.3 (node-id) 81.2.3.3 81.4.4.4 (node-id)
  81.3.4.4
  Total 1 displayed, Up 1, Down 0

```

If enhanced FRR is not enabled (either because it is disabled on the router itself or one of the neighbors along the LSP path does not support it), either of the following lines might be displayed:

Enhanced Local Protection: Disabled, Reason: User Config

Enhanced Local Protection: Disabled, Reason: Backward Compatibility

If enhanced FRR is not enabled and the router is not an MP, the following line is displayed:

Enhanced Local Protection: Enabled, Non-MP

### show rsvp session p2mp (Ingress Router)

```
user@host> show rsvp session p2mp
Ingress RSVP: 3 sessions
P2MP name: test, P2MP branch count: 1
To          From          State   Rt Style Labelin Labelout LSPname
10.255.10.95 10.255.10.2 Up      0  1 SE  -        3 to-pe1
P2MP name: test2, P2MP branch count: 2
To          From          State   Rt Style Labelin Labelout LSPname
10.255.10.23 10.255.10.2 Up      0  1 SE  -        299776 to-pe3
10.255.10.16 10.255.10.2 Up      0  1 SE  -        299776 to-pe4
Total 3 displayed, Up 3, Down 0

Egress RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0

Transit RSVP: 0 sessions
Total 0 displayed, Up 0, Down 0
```

### show rsvp session p2mp (Transit Router)

```
user@host> show rsvp session p2mp
Ingress RSVP: 1 sessions
P2MP name: test, P2MP branch count: 1
To          From          State   Rt Style Labelin Labelout LSPname
10.255.10.23 10.255.10.95 Up      0  1 SE  -        299792 to-pe2
Total 1 displayed, Up 1, Down 0

Egress RSVP: 1 sessions
P2MP name: test, P2MP branch count: 1
To          From          State   Rt Style Labelin Labelout LSPname
10.255.10.95 10.255.10.2 Up      0  1 SE  3        -        to-pe1
Total 1 displayed, Up 1, Down 0

Transit RSVP: 2 sessions
P2MP name: test2, P2MP branch count: 2
To          From          State   Rt Style Labelin Labelout LSPname
10.255.10.23 10.255.10.2 Up      0  1 SE  299776   299808 to-pe3
10.255.10.16 10.255.10.2 Up      0  1 SE  299776   299856 to-pe4
Total 2 displayed, Up 2, Down 0
```

## show rsvp statistics

|                                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>List of Syntax</b>              | <a href="#">Syntax on page 1871</a><br><a href="#">Syntax (EX Series Switches) on page 1871</a>                                                                                                                                                                                                                                                                                                                                                 |
| <b>Syntax</b>                      | <pre>show rsvp statistics &lt;instance <i>instance-name</i>&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt;</pre>                                                                                                                                                                                                                                                                                                                 |
| <b>Syntax (EX Series Switches)</b> | show rsvp statistics                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Release Information</b>         | <p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.5 for EX Series switches.</p> <p><b>instance</b> option added in Junos OS Release 15.1 for the MX Series.</p>                                                                                                                                                                                                                                |
| <b>Description</b>                 | Display Resource Reservation Protocol (RSVP) packet and error statistics.                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Options</b>                     | <p><b>none</b>—Display RSVP packet and error statistics.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Display RSVP packet and error statistics for the specified instance. If <b>instance-name</b> is omitted, RSVP statistics are displayed for the master instance.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> |
| <b>Required Privilege Level</b>    | view                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Related Documentation</b>       | <ul style="list-style-type: none"> <li>• <a href="#">clear rsvp statistics on page 1842</a></li> </ul>                                                                                                                                                                                                                                                                                                                                          |
| <b>List of Sample Output</b>       | <a href="#">show rsvp statistics on page 1874</a>                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Output Fields</b>               | <p><a href="#">Table 86 on page 1871</a> describes the output fields for the <b>show rsvp statistics</b> command. Output fields are listed in the approximate order in which they appear.</p>                                                                                                                                                                                                                                                   |

**Table 86: show rsvp statistics Output Fields**

| Field Name                     | Field Description                                        |
|--------------------------------|----------------------------------------------------------|
| <b>Packet Type</b>             | Statistics about different RSVP messages.                |
| <b>Total Sent</b>              | Total number of packets sent since RSVP was enabled.     |
| <b>Total Received</b>          | Total number of packets received since RSVP was enabled. |
| <b>Last 5 seconds Sent</b>     | Total number of packets sent in the last 5 seconds.      |
| <b>Last 5 seconds Received</b> | Number of packets received in the last 5 seconds.        |

Table 86: show rsvp statistics Output Fields (*continued*)

| Field Name                    | Field Description                                                                                                                                            |
|-------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Path</b>                   | Statistics about Path messages, which are sent from the RSVP sender along the data paths and which store path state information in each node along the path. |
| <b>PathErr</b>                | Statistics about PathErr messages, which are advisory messages that are sent upstream to the sender.                                                         |
| <b>PathTear</b>               | Statistics about PathTear messages, which remove path states and dependent reservation states in any routing devices along a path.                           |
| <b>Resv FF</b>                | Statistics about fixed-filter reservation style messages, which consist of distinct reservations among explicit senders.                                     |
| <b>Resv WF</b>                | Statistics about wildcard-filter reservation style messages, which consist of shared reservations among wildcard senders.                                    |
| <b>Res SE</b>                 | Statistics about shared-explicit reservation style messages, which consist of shared reservations among explicit senders.                                    |
| <b>ResvErr</b>                | Statistics about ResvErr messages, which are advisory messages that are sent when an attempt to establish a reservation fails.                               |
| <b>ResvTear</b>               | Statistics about ResvTear messages, which remove reservation states along a path.                                                                            |
| <b>ResvConf</b>               | Statistics about ResvConfirm messages, which are responses to confirm a reservation request.                                                                 |
| <b>Ack</b>                    | Acknowledge message for refresh reductions.                                                                                                                  |
| <b>SRefresh</b>               | Summary refresh messages.                                                                                                                                    |
| <b>Hello</b>                  | Number of RSVP hello packets that have been sent to and received from the neighbor.                                                                          |
| <b>EndtoEnd RSVP</b>          | Statistics for the number of End-to-end RSVP messages.                                                                                                       |
| <b>Errors</b>                 | Statistics about errored RSVP packets.                                                                                                                       |
| <b>Rcv pkt bad length</b>     | The packet was not processed because its length is inappropriate.                                                                                            |
| <b>Rcv pkt unknown type</b>   | The packet is not one of the well-known RSVP types, as defined in RFC 2205, <i>Resource ReSerVation Protocol (RSVP)</i> .                                    |
| <b>Rcv pkt bad version</b>    | The packet is not an RSVP version 1 packet.                                                                                                                  |
| <b>Rcv pkt auth fail</b>      | The packet failed authentication checks.                                                                                                                     |
| <b>Rcv pkt bad checksum</b>   | The RSVP checksum check failed.                                                                                                                              |
| <b>Rcv pkt bad format</b>     | General packet processing failed because the packet was badly formed.                                                                                        |
| <b>Memory allocation fail</b> | An internal resource failure occurred.                                                                                                                       |

Table 86: show rsvp statistics Output Fields (*continued*)

| Field Name                  | Field Description                                                                                                                                                                                                                                                                                                                     |
|-----------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| No path information         | A reservation was received, but no sender is active.                                                                                                                                                                                                                                                                                  |
| Resv style conflict         | The same session contains inconsistent reservation styles.                                                                                                                                                                                                                                                                            |
| Port conflict               | There were inconsistent port numbers for the same session.                                                                                                                                                                                                                                                                            |
| Resv no interface           | An interface for the receive reservation packets cannot be located.                                                                                                                                                                                                                                                                   |
| PathErr to client           | Number of PathErr packets delivered to the local client.                                                                                                                                                                                                                                                                              |
| ResvErr to client           | Number of ResvErr packets delivered to the local client.                                                                                                                                                                                                                                                                              |
| Path timeout                | Number of times the sender timed out because the path was removed.                                                                                                                                                                                                                                                                    |
| Resv timeout                | Number of times the receiver timed out because the reservation was removed.                                                                                                                                                                                                                                                           |
| Message out-of-order        | Records the number of RSVP incoming messages that are considered out of order. This is detected from the message ID object's sequence number.                                                                                                                                                                                         |
| Unknown ack msg             | A neighboring routing device replies with an ACK object that contains an unknown message ID. This can indicate a message ID handshake problem. For example, a router receives an ACK for message IDs 1, 2, and 3. However, it only has state for message IDs 1 and 3. The router increments the unknown ack counter by 1.             |
| Recv nack                   | If a neighboring router receives an unknown message ID in an RSVP refresh message, the router sends a Resv nack message back to the sender. This can happen if that neighbor has been rebooted. For this case, the router sends a regular RSVP refresh message to recover the state and start the message-ID handshake process again. |
| Recv duplicated msg-id      | Number of times the same message ID is used by two different RSVP messages. This duplication is usually caused when a neighboring routing device restarts.                                                                                                                                                                            |
| No TE-link to rcv Hop       | Counter of packets discarded because a TE link was not found.                                                                                                                                                                                                                                                                         |
| Rcv pkt disabled interface  | Number of RSVP packets received on an interface that is not enabled for RSVP.                                                                                                                                                                                                                                                         |
| Transmit buffer full        | Number of times the buffer for assembling an outgoing RSVP message was not large enough.                                                                                                                                                                                                                                              |
| Transmit failure            | Number of times the RSVP task failed to send out a packet.                                                                                                                                                                                                                                                                            |
| Receive failure             | Number of times the RSVP task failed to read an incoming packet.                                                                                                                                                                                                                                                                      |
| P2MP RESV discarded by appl | Number of Resv messages discarded because the MPLS label is not valid for the P2MP LSP application.                                                                                                                                                                                                                                   |
| Rate limit                  | Number of RSVP packets dropped due to rate limiting.                                                                                                                                                                                                                                                                                  |

Table 86: show rsvp statistics Output Fields (*continued*)

| Field Name                   | Field Description                                                                                                                                      |
|------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Err msg loop detected</b> | Number of RSVP error messages that have looped back to their originator. This is detected by checking the error node address in the ERROR_SPEC object. |

## Sample Output

### show rsvp statistics

Starting in Junos OS Release 16.1, this command also shows conditional PathTear statistics and the number of times an LSP state has been retained because of Link Protecting Merge Point (LP-MP) or Node Protecting Merge Point (NP-MP) determination.

```

user@host> show rsvp statistics
  PacketType          Total          Last 5 seconds
                   Sent      Received      Sent      Received
  Path                355         408           0           0
  PathErr              2           13           0           0
  PathTear            101         139           0           0
  Resv FF              0           0           0           0
  Resv WF              0           0           0           0
  Resv SE             419         225           0           0
  ResvErr              0           0           0           0
  ResvTear             0           13           0           0
  ResvConf             0           0           0           0
  Bundle              455         378           0           0
  Ack                  682        1414           0           0
  SRefresh            395198      236030          5           2
  Hello               578809      578221          4           4
  EndtoEnd RSVP        0           0           0           0
  Node Hello           50           50           0           0
  PathTear(Cond1.)     0           3           0           0

  Errors              Total          Last 5 seconds
  Rcv pkt bad length      0           0
  Rcv pkt unknown type    0           0
  Rcv pkt bad version      0           0
  Rcv pkt auth fail        0           0
  Rcv pkt bad checksum     0           0
  Rcv pkt bad format       0           0
  Memory allocation fail   0           0
  No path information      10          0
  Resv style conflict      0           0
  Port conflict            0           0
  Resv no interface        0           0
  PathErr to client       38           0
  ResvErr to client        0           0
  Path timeout             8           0
  Resv timeout            57           0
  Message out-of-order     0           0
  Unknown ack msg         2978          0
  Recv nack                86           0
  Recv duplicated msg-id    5           0
  No TE-link to recv Hop    0           0
  Rcv pkt disabled interface 0           0
  Transmit buffer full     0           0
  Transmit failure         0           0

```



|                                 |     |   |
|---------------------------------|-----|---|
| Receive failure                 | 0   | 0 |
| P2MP RESV discarded by appl     | 0   | 0 |
| Rate limit                      | 306 | 0 |
| Err msg loop detected           | 0   | 0 |
| MP Path LP-avail rcved          | 0   | 0 |
| MP Path NP-avail rcved          | 0   | 0 |
| PLR bk RSB life ext             | 0   | 0 |
| MP bk PSB life ext              | 0   | 0 |
| LP-MP state retained on failure | 0   | 0 |
| NP-MP state retained on failure | 0   | 0 |
| Fast refresh skipped            | 0   | 0 |
| MP bk Srefresh Nack rcved       | 0   | 0 |
| RSB life extended for nh FRR    | 0   | 0 |

## show rsvp version

|                                    |                                                                                                                                                                                                                                          |
|------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>List of Syntax</b>              | <a href="#">Syntax on page 1876</a><br><a href="#">Syntax (EX Series Switches) on page 1876</a>                                                                                                                                          |
| <b>Syntax</b>                      | show rsvp version<br><logical-system (all   <i>logical-system-name</i> )>                                                                                                                                                                |
| <b>Syntax (EX Series Switches)</b> | show rsvp version                                                                                                                                                                                                                        |
| <b>Release Information</b>         | Command introduced before Junos OS Release 7.4.<br>Command introduced in Junos OS Release 9.5 for EX Series switches.                                                                                                                    |
| <b>Description</b>                 | Display information about the Resource Reservation Protocol (RSVP) protocol settings, such as the version of the RSVP software, the refresh timer and keep multiplier, and local RSVP graceful restart capabilities on a routing device. |
| <b>Options</b>                     | <b>none</b> —Display RSVP protocol settings.<br><br><b>logical-system (all   <i>logical-system-name</i>)</b> —(Optional) Perform this operation on all logical systems or on a particular logical system.                                |
| <b>Required Privilege Level</b>    | view                                                                                                                                                                                                                                     |
| <b>List of Sample Output</b>       | <a href="#">show rsvp version on page 1878</a>                                                                                                                                                                                           |
| <b>Output Fields</b>               | <a href="#">Table 87 on page 1876</a> describes the output fields for the <b>show rsvp version</b> command. Output fields are listed in the approximate order in which they appear.                                                      |

Table 87: show rsvp version Output Fields

| Field Name                             | Field Description                                                                                                                                                                                                                                                                                                                               |
|----------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Resource ReSerVation Protocol, version | RSVP software version.                                                                                                                                                                                                                                                                                                                          |
| RSVP protocol                          | Status of RSVP: <b>Enabled</b> or <b>Disabled</b> .                                                                                                                                                                                                                                                                                             |
| R(refresh timer)                       | Configured time interval used to generate periodic RSVP messages.                                                                                                                                                                                                                                                                               |
| K(keep multiplier)                     | Number of RSVP messages that can be lost before an RSVP state is declared stale.                                                                                                                                                                                                                                                                |
| Preemption                             | Currently configured preemption capability: <b>Aggressive</b> , <b>Disabled</b> , or <b>Normal</b> . The default is <b>Normal</b> .                                                                                                                                                                                                             |
| Soft-preemption cleanup                | Time, in seconds, that an LSP is kept after it has been soft preempted. This is a global property of the RSVP protocol.                                                                                                                                                                                                                         |
| Graceful deleting timeout              | Currently configured value for the <b>graceful-deletion-timeout</b> statement. The router that initiates the graceful deletion procedure for an RSVP session waits for the graceful deletion timeout interval to ensure that all routers along the path (especially the ingress and egress routers) have prepared for the LSP to be taken down. |

Table 87: show rsvp version Output Fields (*continued*)

| Field Name                           | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                    |
|--------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>NSR Mode</b>                      | Status of the nonstop active routing feature for RSVP on the restarting device: <b>Disabled</b> , <b>Enabled/Master</b> , or <b>Enabled/Standby</b> .                                                                                                                                                                                                                                                                                |
| <b>NSR State</b>                     | <p>State of the nonstop active routing feature for RSVP on the restarting device.</p> <p>Possible values are:</p> <ul style="list-style-type: none"> <li>• <b>Idle</b></li> <li>• <b>TE-link sync complete</b></li> <li>• <b>Neighbor sync complete</b></li> <li>• <b>Path state sync complete</b></li> <li>• <b>Resv state sync complete</b></li> <li>• <b>Bypass sync complete</b></li> <li>• <b>Init sync complete</b></li> </ul> |
| <b>Setup protection</b>              | Status of point-to-point and point-to-multipoint LSP setup protection configuration on the device: <b>Enabled</b> or <b>Disabled</b> .                                                                                                                                                                                                                                                                                               |
| <b>Route Session-Id count</b>        | Total count of session IDs associated with the combination of all the RSVP ingress routes.                                                                                                                                                                                                                                                                                                                                           |
| <b>Graceful restart</b>              | Status of the graceful restart feature for RSVP on the restarting routing device: <b>Enabled</b> or <b>Disabled</b> .                                                                                                                                                                                                                                                                                                                |
| <b>Restart helper mode</b>           | Status of the helper mode feature: <b>Enabled</b> or <b>Disabled</b> . When this feature is enabled, the restarting routing device can help the neighbor with its RSVP restart procedures.                                                                                                                                                                                                                                           |
| <b>Maximum helper restart time</b>   | Number of milliseconds (ms) configured for the maximum helper restart time. The maximum helper restart time is the length of time the routing device waits before declaring that an RSVP neighbor attempting to restart gracefully is down.                                                                                                                                                                                          |
| <b>Maximum helper recovery time</b>  | Number of milliseconds configured for the maximum helper recovery time. The maximum helper recovery time is the amount of time the routing device maintains the state of an RSVP neighbor attempting to restart gracefully.                                                                                                                                                                                                          |
| <b>Restart time</b>                  | Number of milliseconds that a neighbor waits to receive a Hello message from the restarting node before declaring the node dead and deleting the states.                                                                                                                                                                                                                                                                             |
| <b>Recovery time</b>                 | Number of milliseconds during which the restarting node attempts to recover its lost states with help from its neighbors. Recovery time is advertised by the restarting node to its neighbors, and applies to nodal faults. The restarting node considers its graceful restart complete after this time has elapsed.                                                                                                                 |
| <b>P2p transit LSP nexthop mode</b>  | Point-to-point transit LSP next-hop mode on PTX Series devices. The possible values are <b>Chained</b> or <b>Unchained</b> .                                                                                                                                                                                                                                                                                                         |
| <b>P2mp transit LSP nexthop mode</b> | Point-to-multipoint transit LSP next-hop mode on PTX Series devices. The possible values are <b>Chained</b> or <b>Unchained</b> .                                                                                                                                                                                                                                                                                                    |

## Sample Output

### show rsvp version

Starting with Junos OS Release 16.1, this command also shows whether enhanced FRR procurers are enabled on the router.

```
user@host> show rsvp version
Resource ReSerVation Protocol, version 1. rfc2205
  RSVP protocol:           Enabled
  R(refresh timer):        30 seconds
  K(keep multiplier):      3
  Preemption:             Normal
  Soft-preemption cleanup:  30 seconds
  Graceful deletion timeout: 30 seconds
  NSR mode:               Enabled/Master
  NSR state:              Init sync complete
  Setup protection:        Disabled
  Route Session-Id count:  1
  Graceful restart:        Disabled
  Restart helper mode:     Enabled
  Maximum helper restart time: 20000 msec
  Maximum helper recovery time: 180000 msec
  Restart time:            0 msec
  P2p transit LSP nexthop mode: Unchained
  P2mp transit LSP nexthop mode: Unchained
  Enhanced FRR local protection: Enabled
```

## traceroute mpls rsvp

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>traceroute mpls &lt;rsvp&gt; <i>lsp-name</i> &lt;detail&gt; &lt;egress&gt; &lt;exp&gt; &lt;logical-system&gt; &lt;multipoint&gt; &lt;no-resolve&gt; &lt;retries&gt; &lt;source <i>source-address</i>&gt; &lt;ttl&gt;</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Release Information</b>      | <p>Command introduced in Junos OS Release 9.2.</p> <p><b>egress</b>, <b>multipoint</b>, and <b>ttl</b> options added in Junos OS Release 11.2.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Description</b>              | <p>Trace route to a remote host for an MPLS LSP signaled by RSVP. Use <b>traceroute mpls rsvp</b> as a debugging tool to locate MPLS label-switched path (LSP) forwarding issues in a network. (Currently supported for IPv4 packets only.)</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Options</b>                  | <p><b><i>lsp-name</i></b>—Specify the name of the LSP to be traced.</p> <p><b>detail</b>—(Optional) Display detailed output.</p> <p><b>egress</b>—(Optional) Request that a specific point-to-multipoint egress node reply to the trace route. The trace route would follow the associated sub-LSP to the egress node.</p> <p><b>exp</b>—(Optional) Specify the class of service to use when sending probes. The range of values is 0 through 7. The default value is 7.</p> <p><b>logical-system</b>—(Optional) Specify the name of the logical system for the traceroute attempt.</p> <p><b>multipoint</b>—(Optional) Perform a trace route on a point-to-multipoint LSP.</p> <p><b>no-resolve</b>—(Optional) Specify not to resolve the hostname that corresponds to the IP address.</p> <p><b>retries</b>—(Optional) Specify the number of times to resend probe. The range of values is 1 through 9. The default value is 3.</p> <p><b>source <i>source-address</i></b>—(Optional) Specify the source address of the outgoing traceroute packets.</p> <p><b>ttl</b>—(Optional) Specify the number of hops to follow before forcing the trace route to quit.</p> |
| <b>Required Privilege Level</b> | network                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>List of Sample Output</b>    | <p><a href="#">traceroute mpls rsvp on page 1881</a></p> <p><a href="#">traceroute mpls rsvp detail on page 1881</a></p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |

[traceroute mpls rsvp multipoint \(branch node for sub-LSPs\) on page 1882](#)

[traceroute mpls rsvp multipoint \(single-hop sub-LSPs\) on page 1882](#)

**Output Fields** Table 88 on page 1880 describes the output fields for the **traceroute mpls rsvp *lsp-name*** and **traceroute mpls rsvp *lsp-name* detail** commands. Output fields are listed in the approximate order in which they appear.

**Table 88: traceroute mpls rsvp Output Fields**

| Field Name         | Field Description                                                                                                                                                                                                                                          | Level of Output |
|--------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| Probe options      | Probe options specified in the <b>traceroute mpls rsvp <i>lsp-name</i></b> command.                                                                                                                                                                        | all levels      |
| ttl                | Time-to-live value of the labeled packet.                                                                                                                                                                                                                  | none specified  |
| Label              | MPLS label used to forward the packets along the LSP.                                                                                                                                                                                                      | none specified  |
| Protocol           | Signaling protocol used. For this command, it is RSVP-TE.                                                                                                                                                                                                  | none specified  |
| Address            | Address of the next hop.                                                                                                                                                                                                                                   | none specified  |
| Previous Hop       | Address of the previous hop. Previous hop address of the first hop is null.                                                                                                                                                                                | none specified  |
| Probe status       | Forwarding status from the first hop to the last-hop label-switching router (egress point in the label-switched paths). Displays <b>Success</b> if the trace to a hop is successful or <b>Egress</b> if the trace has reached the last router on the path. | none specified  |
| Hop                | Address of the hops in the label-switched path from the first hop to the last hop. Depth indicates the level of the hop.                                                                                                                                   | <b>detail</b>   |
| Parent             | Address of the previous hop. Parent value for the first hop is null.                                                                                                                                                                                       | <b>detail</b>   |
| Return Code        | Return code for reporting the result of processing the echo request by the receiver.                                                                                                                                                                       | <b>detail</b>   |
| Sender timestamp   | Displays the timestamp when the MPLS echo request is sent to the next hop.                                                                                                                                                                                 | <b>detail</b>   |
| Receiver timestamp | Timestamp when the echo request from the previous hop is received and acknowledged with an echo response by the next hop.                                                                                                                                  | <b>detail</b>   |
| Response time      | Time for the echo request to reach the receiver.                                                                                                                                                                                                           | <b>detail</b>   |
| MTU                | Size of the largest packet that includes the label stack forwarded to the next hop.                                                                                                                                                                        | <b>detail</b>   |

Table 88: traceroute mpls rsvp Output Fields (*continued*)

| Field Name     | Field Description                                                                                        | Level of Output |
|----------------|----------------------------------------------------------------------------------------------------------|-----------------|
| Multipath type | Labels or addresses used by the specified multipath type. If multipaths are not used, the value is none. | <b>detail</b>   |
| Label stack    | Label stack used to forward the packet.                                                                  | <b>detail</b>   |
| Path           | Displays the sub-lsp path number for this traceroute, the interface used, and the destination address.   | all levels      |

## Sample Output

### traceroute mpls rsvp

```
user@host> traceroute mpls rsvp lsp-chicago-atlanta
```

```
Probe options: retries 3, exp 7
```

| ttl | Label  | Protocol | Address     | Previous Hop | Probe Status |
|-----|--------|----------|-------------|--------------|--------------|
| 1   | 299792 | RSVP-TE  | 192.168.1.2 | (null)       | Success      |
| 2   | 299803 | RSVP-TE  | 192.168.2.3 | 192.168.1.2  | Success      |
| 3   | 3      | RSVP-TE  | 192.168.3.4 | 192.168.2.3  | Egress       |

```
Path 1 via ge-0/0/0.1 destination 127.0.0.64
```

### traceroute mpls rsvp detail

```
user@host> traceroute mpls rsvp lsp-chicago-atlanta detail
```

```
Probe options: retries 3, exp 7
```

```
Hop 192.168.1.2 Depth 1
```

```
Probe status: Success
```

```
Parent: (null)
```

```
Return code: Label-switched at stack-depth 1
```

```
Sender timestamp: 2008-04-17 09:35:27 EDT 400.88 msec
```

```
Receiver timestamp: 2008-04-17 09:35:27 EDT 427.87 msec
```

```
Response time: 26.99 msec
```

```
MTU: Unknown
```

```
Multipath type: IP bitmask
```

```
Address Range 1: 127.0.0.64 ~ 127.0.0.127
```

```
Label Stack:
```

```
Label 1 Value 299792 Protocol RSVP-TE
```

```
Hop 192.168.2.3 Depth 2
```

```
Probe status: Success
```

```
Parent: 192.168.1.2
```

```
Return code: Upstream interface index unknown label-switched at stack-depth
```

```
1
```

```
Sender timestamp: 2008-04-17 09:35:27 EDT 522.13 msec
```

```
Receiver timestamp: 2008-04-17 09:35:27 EDT 548.69 msec
```

```
Response time: 26.55 msec
```

```
MTU: 1518
```

```
Multipath type: IP bitmask
```

```
Address Range 1: 127.0.0.64 ~ 127.0.0.127
```

```
Label Stack:
```

```
Label 1 Value 299803 Protocol RSVP-TE
```

**traceroute mpls rsvp multipoint (branch node for sub-LSPs)**

The following traceroute output is for a point-to-multipoint LSP where the penultimate node is a branch node for the sub-LSPs.

```
user@host> traceroute mpls rsvp multipoint p2mplsp
Probe options: retries 3, exp 7
```

| ttl | Label  | Protocol | Address  | Previous Hop | Probe Status |
|-----|--------|----------|----------|--------------|--------------|
| 1   | 300000 | RSVP-TE  | 81.1.2.2 | (null)       | Success      |
| 2   | 299968 | RSVP-TE  | 81.2.3.3 | 81.1.2.2     | Success      |
| 3   | 299952 | RSVP-TE  | 81.3.4.4 | 81.2.3.3     | Success      |
| 4   | 299920 | RSVP-TE  | 81.4.6.6 | 81.3.4.4     | Egress       |

Path 1 via lt-1/2/0.102 destination 127.0.0.64

| ttl | Label  | Protocol | Address  | Previous Hop | Probe Status |
|-----|--------|----------|----------|--------------|--------------|
| 4   | 299920 | RSVP-TE  | 81.4.5.5 | 81.3.4.4     | Egress       |

Path 2 via lt-1/2/0.102 destination 127.0.0.64

**traceroute mpls rsvp multipoint (single-hop sub-LSPs)**

The following traceroute output is for a point-to-multipoint LSP with multiple single-hop sub-LSPs.

```
user@host> traceroute mpls rsvp multipoint p2mplsp
Probe options: retries 3, exp 7
```

| ttl | Label | Protocol | Address  | Previous Hop | Probe Status |
|-----|-------|----------|----------|--------------|--------------|
| 1   | 0     | RSVP-TE  | 81.1.2.2 | (null)       | Egress       |

Path 1 via lt-1/2/0.102 destination 127.0.0.64

| ttl | Label | Protocol | Address  | Previous Hop | Probe Status |
|-----|-------|----------|----------|--------------|--------------|
| 1   | 0     | RSVP-TE  | 81.1.8.8 | (null)       | Egress       |

Path 2 via lt-1/2/0.108 destination 127.0.0.64

| ttl | Label | Protocol | Address  | Previous Hop | Probe Status |
|-----|-------|----------|----------|--------------|--------------|
| 1   | 0     | RSVP-TE  | 81.1.9.9 | (null)       | Egress       |

Path 3 via lt-1/2/0.109 destination 127.0.0.64



## CHAPTER 32

# LDP Operational Commands

- clear ldp neighbor
- clear ldp session
- clear ldp statistics
- ping mpls ldp
- show ldp database
- show ldp fec-filters
- show ldp interface
- show ldp neighbor
- show ldp overview
- show ldp p2mp tunnel
- show ldp path
- show ldp route
- show ldp session
- show ldp statistics
- show ldp traffic-statistics
- show security keychain
- traceroute mpls ldp

## clear ldp neighbor

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | clear ldp neighbor<br><instance <i>instance-name</i> ><br><logical-system (all   <i>logical-system-name</i> )><br><neighbor>                                                                                                                                                                                                                                                                                                                                                   |
| <b>Description</b>              | Tear down Label Distribution Protocol (LDP) neighbor connections.                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Options</b>                  | <b>none</b> —Tear down connections with all LDP neighbors for all routing instances.<br><br><b>instance <i>instance-name</i></b> —(Optional) Clear the LDP session for the specified routing instance only.<br><br><b>logical-system (all   <i>logical-system-name</i>)</b> —(Optional) Perform this operation on all logical systems or on a particular logical system.<br><br><b>neighbor</b> —(Optional) Clear an LDP session for the specified neighbor (IP address) only. |
| <b>Required Privilege Level</b> | clear                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">show ldp neighbor on page 1902</a></li></ul>                                                                                                                                                                                                                                                                                                                                                                               |
| <b>List of Sample Output</b>    | <a href="#">clear ldp neighbor on page 1884</a>                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Output Fields</b>            | When you enter this command, you are provided feedback on the status of your request.                                                                                                                                                                                                                                                                                                                                                                                          |

## Sample Output

### clear ldp neighbor

```
user@host> clear ldp neighbor
```

## clear ldp session

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | clear ldp session<br><all><br><destination><br><instance <i>instance-name</i> ><br><logical-system (all   <i>logical-system-name</i> )>                                                                                                                                                                                                                                                                                                                                      |
| <b>Release Information</b>      | Command introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                                                                                                                                                                                                                      |
| <b>Description</b>              | Clear Label Distribution Protocol (LDP) sessions.                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Options</b>                  | <p><b>all</b>—Clear LDP sessions for all destinations for all routing instances.</p> <p><b>destination</b>—(Optional) Clear an LDP session for the specified destination (IP address).</p> <p><b>instance <i>instance-name</i></b>—(Optional) Clear the LDP session for the specified routing instance only.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> |
| <b>Required Privilege Level</b> | clear                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">show ldp session on page 1919</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                            |
| <b>List of Sample Output</b>    | <a href="#">clear ldp session on page 1885</a>                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Output Fields</b>            | When you enter this command, you are provided feedback on the status of your request.                                                                                                                                                                                                                                                                                                                                                                                        |

## Sample Output

### clear ldp session

```
user@host> clear ldp session all
```

## clear ldp statistics

---

|                                 |                                                                                                                                                                                                                                                                                                                                                            |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>clear ldp statistics</code><br><code>&lt;instance <i>instance-name</i>&gt;</code><br><code>&lt;logical-system (all   <i>logical-system-name</i>)&gt;</code>                                                                                                                                                                                          |
| <b>Release Information</b>      | Command introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                                                                                                    |
| <b>Description</b>              | Set all Label Distribution Protocol (LDP) statistics to zero.                                                                                                                                                                                                                                                                                              |
| <b>Options</b>                  | <b>none</b> —Set all LDP statistics to zero for all routing instances.<br><br><b>instance <i>instance-name</i></b> —(Optional) Clear the LDP session for the specified routing instance only.<br><br><b>logical-system (all   <i>logical-system-name</i>)</b> —(Optional) Perform this operation on all logical systems or on a particular logical system. |
| <b>Required Privilege Level</b> | clear                                                                                                                                                                                                                                                                                                                                                      |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">show ldp statistics on page 1926</a></li><li>• <a href="#">show ldp traffic-statistics on page 1930</a></li></ul>                                                                                                                                                                                      |
| <b>List of Sample Output</b>    | <a href="#">clear ldp statistics on page 1886</a>                                                                                                                                                                                                                                                                                                          |
| <b>Output Fields</b>            | When you enter this command, you are provided feedback on the status of your request.                                                                                                                                                                                                                                                                      |

### Sample Output

#### clear ldp statistics

```
user@host> clear ldp statistics
```

## ping mpls ldp

|                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>              | <pre>ping mpls ldp <i>fec</i> &lt;count <i>count</i>&gt; &lt;destination <i>address</i>&gt; &lt;detail&gt; &lt;exp <i>forwarding-class</i>&gt; &lt;instance <i>routing-instance-name</i>&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt; &lt;p2mp root-addr <i>ip-address</i> lsp-id <i>identifier</i>&gt; &lt;size <i>bytes</i>&gt; &lt;source <i>source-address</i>&gt; &lt;sweep&gt;</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Release Information</b> | <p>Command introduced before Junos OS Release 7.4.</p> <p>Command introduced in Junos OS Release 9.0 for EX Series switches.</p> <p><b>size</b> and <b>sweep</b> options introduced in Junos OS Release 9.6.</p> <p><b>instance</b> option introduced in Junos OS Release 10.0.</p> <p><b>p2mp</b>, <b>root-address</b>, and <b>lsp-id</b> options introduced in Junos OS Release 11.2.</p> <p>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Description</b>         | <p>Check the operability of MPLS LDP-signaled label-switched path (LSP) connections. Type Ctrl+c to interrupt a <b>ping mpls</b> command.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Options</b>             | <p><b>count</b> <i>count</i>—(Optional) Number of ping requests to send. If <b>count</b> is not specified, five ping requests are sent. The range of values is 1 through <b>1,000,000</b>. The default value is <b>5</b>.</p> <p><b>destination</b> <i>address</i>—(Optional) Specify an address other than the default (<b>127.0.0.1/32</b>) for the ping echo requests. The address can be anything within the <b>127/8</b> subnet.</p> <p><b>detail</b>—(Optional) Display detailed information about the echo requests sent and received.</p> <p><b>exp</b> <i>forwarding-class</i>—(Optional) Value of the forwarding class for the MPLS ping packets.</p> <p><b>fec</b>—Ping an LDP-signaled LSP using the forwarding equivalence class (FEC) prefix and length.</p> <p><b>instance</b> <i>routing-instance-name</i>—(Optional) Allows you to ping a combination of the routing instance and forwarding equivalence class (FEC) associated with an LSP.</p> <p><b>logical-system</b> (all   <i>logical-system-name</i>)—(Optional) Perform this operation on all logical systems or on the specified logical system.</p> <p><b>p2mp root-addr</b> <i>ip-address</i> <b>lsp-id</b> <i>identifier</i>—(Optional) Ping the end points of a point-to-multipoint LSP. Enter the IP address of the point-to-multipoint LSP root and the ID number of the point-to-multipoint LSP.</p> <p><b>size</b> <i>bytes</i>—(Optional) Size of the LSP ping request packet (<b>88</b> through <b>65468</b> bytes). Packets are 4-byte aligned. For example, If you enter a size of 89, 90, 91, or 92, the router or switch uses a size value of 92 bytes. If you enter a packet size that is smaller</p> |

than the minimum size, an error message is displayed reminding you of the 88-byte minimum.

**source source-address**—(Optional) IP address of the outgoing interface. This address is sent in the IP source address field of the ping request. If this option is not specified, the default address is usually the loopback interface (**lo.0**).

**sweep**—(Optional) Automatically determine the size of the maximum transmission unit (MTU).

**Additional Information** If the LSP changes, the label and interface information displayed when you issued the **ping** command continues to be used. You must configure MPLS at the **[edit protocols mpls]** hierarchy level on the remote router or switch to ping an LSP terminating there. You must configure MPLS even if you intend to ping only LDP forwarding equivalence classes (FECs).

You can configure the ping interval for the **ping mpls ldp** command by specifying a new time in seconds using the **lsp-ping-interval** statement at the **[edit protocols ldp oam]** hierarchy level. For more information, see the *MPLS Applications Feature Guide*.

In asymmetric MTU scenarios, the echo response may be dropped. For example, if the MTU from System A to System B is 1000 bytes, the MTU from System B to System A is 500 bytes, and the ping request packet size is 1000 bytes, the echo response is dropped because the PAD TLV is included in the echo response, making it too large.

**Required Privilege Level** network

**List of Sample Output** [ping mpls ldp fec count on page 1888](#)  
[ping mpls ldp p2mp root-addr lsp-id on page 1888](#)

**Output Fields** When you enter this command, you are provided feedback on the status of your request. An exclamation point (!) indicates that an echo reply was received. A period (.) indicates that an echo reply was not received within the timeout period. An x indicates that an echo reply was received with an error code. Packets with error codes are not counted in the received packets count. They are accounted for separately.

## Sample Output

### ping mpls ldp fec count

```
user@host> ping mpls ldp 10.255.245.222 count 10
!!!xxx...x--- lsping statistics ---10 packets transmitted, 3 packets received,
70% packet loss 4 packets received with error status, not counted as received.
```

### ping mpls ldp p2mp root-addr lsp-id

```
user@host> ping mpls ldp p2mp root-addr 10.1.1.1/32 lsp-id 1 count 1
Request for seq 1, to interface 71, no label stack.
Request for seq 1, to interface 70, label 299786
Reply for seq 1, egress 10.1.1.3, return code: Egress-ok, time: 18.936 ms
    Local transmit time: 2009-01-12 03:50:03 PST 407.281 ms
    Remote receive time: 2009-01-12 03:50:03 PST 426.217 ms
Reply for seq 1, egress 10.1.1.4, return code: Egress-ok, time: 18.936 ms
```

```
Local transmit time: 2009-01-12 03:50:03 PST 407.281 ms
Remote receive time: 2009-01-12 03:50:03 PST 426.217 ms
Reply for seq 1, egress 10.1.1.5, return code: Egress-ok, time: 18.936 ms
Local transmit time: 2009-01-12 03:50:03 PST 407.281 ms
Remote receive time: 2009-01-12 03:50:03 PST 426.217 ms
```

## show ldp database

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>show ldp database</code><br><code>&lt;brief   detail   extensive&gt;</code><br><code>&lt;inet   l2circuit&gt;</code><br><code>&lt;instance <i>instance-name</i>&gt;</code><br><code>&lt;logical-system (all   <i>logical-system-name</i>)&gt;</code><br><code>&lt;p2mp&gt;</code><br><code>&lt;session <i>session</i>&gt;</code><br><code>&lt;summary&gt;</code>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Release Information</b>      | Command introduced before Junos OS Release 7.4.<br><b>summary</b> option introduced in Junos OS Release 14.2.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Description</b>              | Display entries in the LDP database.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Options</b>                  | <p><b>none</b>—Display standard information about all entries in the LDP database for all routing instances.</p> <p><b>brief   detail   extensive</b>—(Optional) Display the specified level of output.</p> <p><b>inet   l2circuit</b>—(Optional) Display only IPv4 or Layer 2 circuit bindings.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Display routing instance information for the specified instance only.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p><b>p2mp</b>—(Optional) Display point-to-multipoint binding information.</p> <p><b>session <i>session</i></b>—(Optional) Display database for the specified session only. <b><i>session</i></b> is the destination address of the LDP session.</p> <p><b>summary</b>—(Optional)—Display summary output. This option displays the number of labels received and advertised for each LDP session.</p> |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>List of Sample Output</b>    | <a href="#">show ldp database (master) on page 1893</a><br><a href="#">show ldp database (standby) on page 1894</a><br><a href="#">show ldp database l2circuit detail on page 1894</a><br><a href="#">show ldp database l2circuit extensive on page 1895</a><br><a href="#">show ldp database p2mp (master) on page 1895</a><br><a href="#">show ldp database p2mp (standby) on page 1895</a><br><a href="#">show ldp database p2mp (master) on page 1896</a><br><a href="#">show ldp database p2mp (standby) on page 1896</a><br><a href="#">show ldp database session on page 1896</a><br><a href="#">show ldp database (Ingress Node with Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs) on page 1897</a>                                                                                                                                                                                                                                                                         |



[show ldp database \(Egress Node with Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs\) on page 1897](#)  
[show ldp database summary on page 1898](#)

**Output Fields** [Table 89 on page 1891](#) describes the output fields for the **show ldp database** command. Output fields are listed in the approximate order in which they appear.

**Table 89: show ldp database Output Fields**

| Field Name                   | Field Description                                                                | Level of Output |
|------------------------------|----------------------------------------------------------------------------------|-----------------|
| <b>Input label database</b>  | Label received from the other router.                                            | All levels      |
| <b>Output label database</b> | Label advertised to the other router.                                            | All levels      |
| <i>session-identifier</i>    | Session identifier, which includes the local and remote label space identifiers. | All levels      |
| <b>Labels received</b>       | Number of labels received from the other router.                                 | All levels      |
| <b>Labels advertised</b>     | Number of labels advertised to the other router.                                 | All levels.     |
| <b>Label</b>                 | Label binding to a route prefix.                                                 | All levels      |

Table 89: show ldp database Output Fields (*continued*)

| Field Name                             | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | Level of Output  |
|----------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------|
| <b>Prefix</b>                          | <p>Route prefix.</p> <p>It can be one of the following values:</p> <ul style="list-style-type: none"> <li>• IP prefix.</li> <li>• Point-to-multipoint root address, multicast source address, and multicast group address when multipoint LDP (M-LDP) inband signaling is configured.</li> <li>• Layer 2 encapsulation type.</li> </ul> <p>Layer 2 encapsulation types are displayed in the format <b>L2CKT control word status encapsulation-type vc-number</b>, for example, <b>L2CKT CtrlWord FRAME RELAY VC 2</b></p> <ul style="list-style-type: none"> <li>• <b>control-word-status</b>—Displays whether the use of the control word has been negotiated for this virtual circuit: <ul style="list-style-type: none"> <li>• <b>NoCtrlWord</b></li> <li>• <b>CtrlWord</b></li> </ul> </li> <li>• <b>encapsulation-type</b>—Encapsulation type: <ul style="list-style-type: none"> <li>• <b>FRAME RELAY</b></li> <li>• <b>ATM AAL5</b></li> <li>• <b>ATM CELL</b></li> <li>• <b>VLAN</b></li> <li>• <b>ETHERNET</b></li> <li>• <b>CISCO_HDLC</b></li> <li>• <b>PPP</b></li> </ul> </li> <li>• <b>VC number</b>—Virtual circuit number. It can have any numeric value.</li> <li>• <b>(Stale)</b>—When you display the LDP database for the neighbor of a restarting router, the bindings learned from the restarting neighbor are displayed as (Stale). Stale bindings are deleted if they are not refreshed within the recovery time.</li> </ul> | All levels       |
| <b>MTU</b>                             | MTU of the Layer 2 circuit. MTU is displayed for all encapsulation types except ATM cell encapsulations.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             | <b>detail</b>    |
| <b>VCCV Control Channel types</b>      | <p>Virtual Circuit Connection Verification (VCCV) control channel types.</p> <ul style="list-style-type: none"> <li>• <b>MPLS router alert label</b></li> <li>• <b>MPLS PW label with TTL=1</b></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | <b>extensive</b> |
| <b>VCCV Control Verification types</b> | The only valid VCCV control verification type is <b>LSP ping</b> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | <b>extensive</b> |
| <b>TDM payload size</b>                | Size of the Time Division Multiplex (TDM) payload.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | All levels       |
| <b>TDM bitrate</b>                     | Bit rate for the TDM traffic.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | All levels       |
| <b>Requested VLAN ID</b>               | (VLANs) VLAN identifier of the Layer 2 circuit.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | <b>detail</b>    |
| <b>Cell bundle size</b>                | (ATM cell encapsulations) Maximum number of cells that the Layer 2 circuit can receive in a packet.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | <b>detail</b>    |

Table 89: show ldp database Output Fields (*continued*)

| Field Name   | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | Level of Output |
|--------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| <b>State</b> | State of the label binding: <ul style="list-style-type: none"> <li><b>Active</b>—Label binding has been installed and distributed appropriately. A label binding is almost always in this state.</li> <li><b>New</b>—New label that has not yet been distributed. <ul style="list-style-type: none"> <li><b>MapRcv</b>—Waiting to receive a label mapping message.</li> <li><b>MapSend</b>—Waiting to send a label mapping message.</li> <li><b>RelRcv</b>—Waiting to receive a label release message.</li> <li><b>RelRsnd</b>—Waiting to receive a label release message before resending label mapping message.</li> <li><b>RelSend</b>—Waiting to send a label release message.</li> <li><b>ReqSend</b>—Waiting to send a label request message.</li> <li><b>W/dSend</b>—Waiting to send a label withdrawal message.</li> </ul> </li> </ul> | <b>detail</b>   |
| <b>Age</b>   | Time elapsed since the binding was created.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | <b>detail</b>   |

## Sample Output

### show ldp database (master)

```

user@host> show ldp database extensive
Input label database, 10.255.107.232:0--10.255.107.236:0
  Label Prefix
  299840 10.255.107.232/32
          State: Active
          Age: 9:35
          Entropy Label Capability: No
    3     10.255.107.236/32
          State: Active
          Age: 9:35
          Entropy Label Capability: No
  299776 L2CKT CtrlWord VLAN VC 100
          MTU: 1500 Requested VLAN ID: 600 Flow Label T Bit: 1 Flow Label R
          Bit: 1
          State: Active
          Age: 9:35
          Entropy Label Capability: No
          VCCV Control Channel types:
            PWE3 control word
            MPLS router alert label
            MPLS PW label with TTL=1
          VCCV Control Verification types:
            LSP ping
            BFD with PW-ACH-encapsulation for Fault Detection
            BFD with IP/UDP-encapsulation for Fault Detection

Output label database, 10.255.107.232:0--10.255.107.236:0
  Label Prefix
    3     10.255.107.232/32
          State: Active
          Age: 9:35
          Entropy Label Capability: No
  299776 10.255.107.236/32

```

State: Active  
 Age: 9:35  
 Entropy Label Capability: No

### show ldp database (standby)

user@host> show ldp database extensive

```
Input label database, 10.255.107.236:0--10.255.107.234:0
Label Prefix
299808 10.255.107.230/32
      State: Active
      Age: 1d 2:46:36
      Standby binding state:
        Map messages: 1
        Release messages: 0
Label Prefix
301136 10.255.107.232/32
      State: Active
      Age: 1d 2:46:36
      Standby binding state:
        Map messages: 1
        Release messages: 0
Label Prefix
3      10.255.107.234/32
      State: Active
      Age: 1d 2:46:36
      Standby binding state:
        Map messages: 1
        Release messages: 0
Label Prefix
302480 10.255.107.236/32
      State: Active
      Age: 1d 2:46:36
      Standby binding state:
        Map messages: 1
        Release messages: 0

Output label database, 10.255.107.236:0--10.255.107.234:0
Label Prefix
299904 10.255.107.230/32
      State: Active
      Age: 1d 2:46:36
299936 10.255.107.232/32
      State: Active
      Age: 1d 2:46:36
299872 10.255.107.234/32
      State: Active
      Age: 1d 2:46:36
3      10.255.107.236/32
      State: Active
      Age: 1d 2:46:36
299952 P2MP root-addr 10.255.107.230, lsp-id 16777217
      State: Active
      Age: 1d 2:46:36
```

### show ldp database l2circuit detail

user@host> show ldp database l2circuit detail

```
Input label database, 10.255.245.44:0--10.255.245.45:0
Label Prefix
```

```

100176      L2CKT CtrlWord ATM CELL (VC Mode) VC 100
            Cell bundle size: 80
            State: Active
            Age: 9:48
100256      L2CKT CtrlWord FRAME RELAY VC 101
            MTU: 4470
            State: Active
            Age: 9:48

Output label database, 10.255.245.44:0--10.255.245.45:0
Label      Prefix
100048      L2CKT CtrlWord ATM CELL (VC Mode) VC 100
            Cell bundle size: 80
            State: Active
            Age: 9:48
100112      L2CKT CtrlWord FRAME RELAY VC 101
            MTU: 4470
            State: Active
            Age: 9:48

```

#### show ldp database l2circuit extensive

```

user@host> show ldp database l2circuit extensive
Input label database, 10.255.245.198:0--10.255.245.194:0
Label      Prefix
299872      L2CKT CtrlWord PPP VC 100
            MTU: 4470
            VCCV Control Channel types:
              MPLS router alert label
              MPLS PW label with TTL=1
            VCCV Control Verification types:
              LSP ping
Label      Prefix
            State: Active
            Age: 19:23:08

```

#### show ldp database p2mp (master)

```

user@host> show ldp database p2mp extensive

Input label database, 10.255.107.232:0--10.255.107.236:0
Label      Prefix
569649      P2MP root-addr 10.255.107.232, lsp-id 16777217
            State: Active
            Age: 2d 6:41:46

Output label database, 10.255.107.232:0--10.255.107.236:0

Input label database, 10.255.107.232:0--10.255.107.238:0

Output label database, 10.255.107.232:0--10.255.107.238:0
Label      Prefix
299888      P2MP root-addr 10.255.107.230, lsp-id 16777217
            State: Active
            Age: 2d 6:41:35

```

#### show ldp database p2mp (standby)

```

user@host> show ldp database p2mp extensive

Input label database, 10.255.107.236:0--10.255.107.232:0

```

```
Label Prefix
299968 P2MP root-addr 10.255.107.230, lsp-id 16777217
State: Active
Age: 4d 22:21:57
Standby binding state:
Map messages: 1
Release messages: 0

Output label database, 10.255.107.236:0--10.255.107.232:0
Label Prefix
3 P2MP root-addr 10.255.107.232, lsp-id 1
State: Active
Age: 4d 22:21:57
```

### show ldp database p2mp (master)

```
user@host> show ldp database p2mp extensive
```

```
Input label database, 10.255.107.232:0--10.255.107.236:0
Label Prefix
569649 P2MP root-addr 10.255.107.232, lsp-id 16777217
State: Active
Age: 2d 6:41:46

Output label database, 10.255.107.232:0--10.255.107.236:0

Input label database, 10.255.107.232:0--10.255.107.238:0

Output label database, 10.255.107.232:0--10.255.107.238:0
Label Prefix
299888 P2MP root-addr 10.255.107.230, lsp-id 16777217
State: Active
Age: 2d 6:41:35
```

### show ldp database p2mp (standby)

```
user@host> show ldp database p2mp extensive
```

```
Input label database, 10.255.107.236:0--10.255.107.232:0
Label Prefix
299968 P2MP root-addr 10.255.107.230, lsp-id 16777217
State: Active
Age: 4d 22:21:57
Standby binding state:
Map messages: 1
Release messages: 0

Output label database, 10.255.107.236:0--10.255.107.232:0
Label Prefix
3 P2MP root-addr 10.255.107.232, lsp-id 1
State: Active
Age: 4d 22:21:57
```

### show ldp database session

```
user@host> show ldp database session 10.1.1.195
Input label database, 10.0.0.194:0--10.1.1.195:0
Label Prefix
100002 10.255.245.197/32
100003 10.255.245.196/32
100004 10.0.0.194/32
```

```

      3      10.1.1.195/32
100000      L2CKT NoCtrlWord FRAME RELAY VC 1
100001      L2CKT CtrlWord FRAME RELAY VC 2
Output label database, 10.0.0.194:0--10.1.1.195:0
  Label      Prefix
100003      10.255.245.197/32
100004      10.1.1.195/32
100002      10.255.245.196/32
      3      10.0.0.194/32
100000      L2CKT CtrlWord FRAME RELAY VC 2
100001      L2CKT NoCtrlWord FRAME RELAY VC 1

```

### show ldp database (Ingress Node with Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs)

```

user@host> show ldp database
Input label database, 1.1.1.2:0--1.1.1.3:0
  Label      Prefix
299808      1.1.1.2/32
      3      1.1.1.3/32
299792      1.1.1.6/32
299776      10.255.2.227/32
299840      P2MP root-addr 1.1.1.2, grp: 232.2.2.2, src: 1.2.7.7
299824      P2MP root-addr 1.1.1.2, grp: 232.1.1.2, src: 192.168.219.11

Output label database, 1.1.1.2:0--1.1.1.3:0
  Label      Prefix
      3      1.1.1.2/32
299776      1.1.1.3/32
299808      1.1.1.6/32
299792      10.255.2.227/32

Input label database, 1.1.1.2:0--1.1.1.6:0
  Label      Prefix
299856      1.1.1.2/32
299792      1.1.1.3/32
      3      1.1.1.6/32
299776      10.255.2.227/32
299888      P2MP root-addr 1.1.1.2, grp: 232.2.2.2, src: 1.2.7.7
299808      P2MP root-addr 1.1.1.2, grp: 232.1.1.1, src: 192.168.219.11
299824      P2MP root-addr 1.1.1.2, grp: 232.1.1.2, src: 192.168.219.11
299840      P2MP root-addr 1.1.1.2, grp: 232.1.1.3, src: 192.168.219.11
299872      P2MP root-addr 1.1.1.2, grp: ff3e::1:2, src: abcd::1:2:7:7

Output label database, 1.1.1.2:0--1.1.1.6:0
  Label      Prefix
      3      1.1.1.2/32
299776      1.1.1.3/32
299808      1.1.1.6/32
299792      10.255.2.227/32

```

### show ldp database (Egress Node with Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs)

```

user@host> show ldp database
Input label database, 10.255.2.227:0--1.1.1.3:0
  Label      Prefix
299808      1.1.1.2/32
      3      1.1.1.3/32
299792      1.1.1.6/32
299776      10.255.2.227/32

Output label database, 10.255.2.227:0--1.1.1.3:0
  Label      Prefix

```

```
299856      1.1.1.2/32
299776      1.1.1.3/32
299792      1.1.1.6/32
3           10.255.2.227/32
```

Input label database, 10.255.2.227:0--1.1.1.6:0

```
Label      Prefix
299856      1.1.1.2/32
299776      1.1.1.3/32
3           1.1.1.6/32
299776      10.255.2.227/32
```

Output label database, 10.255.2.227:0--1.1.1.6:0

```
Label      Prefix
299856      1.1.1.2/32
299776      1.1.1.3/32
299792      1.1.1.6/32
3           10.255.2.227/32
299888      P2MP root-addr 1.1.1.2, grp: 232.2.2.2, src: 1.2.7.7
299808      P2MP root-addr 1.1.1.2, grp: 232.1.1.1, src: 192.168.219.11
299824      P2MP root-addr 1.1.1.2, grp: 232.1.1.2, src: 192.168.219.11
299840      P2MP root-addr 1.1.1.2, grp: 232.1.1.3, src: 192.168.219.11
299872      P2MP root-addr 1.1.1.2, grp: ff3e::1:2, src: abcd::1:2:7:7
```

#### show ldp database summary

```
user@host> show ldp database summary
```

| Session ID                 | Labels received | Labels advertised |
|----------------------------|-----------------|-------------------|
| 10.255.0.1:0--10.255.0.2:0 | 4               | 4                 |
| 10.255.0.1:0--10.255.0.3:0 | 4               | 4                 |



show ldp fec-filters

|                          |                                                                                                                                                                                                                                                                                                                        |
|--------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Syntax                   | show ldp fec-filters<br><fec><br><instance instance-name><br><logical-system (all   logical-system-name)>                                                                                                                                                                                                              |
| Release Information      | Command introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                                                                |
| Description              | Display information about configured Label Distribution Protocol (LDP) forwarding equivalence class (FEC) filters.                                                                                                                                                                                                     |
| Options                  | fec—(Optional) Display FEC filter information for the specified FEC.<br><br>instance instance-name—(Optional) Display FEC filter information for the specified instance.<br><br>logical-system (all   logical-system-name)—(Optional) Perform this operation on all logical systems or on a particular logical system. |
| Required Privilege Level | view                                                                                                                                                                                                                                                                                                                   |
| List of Sample Output    | <a href="#">show ldp fec-filters on page 1899</a>                                                                                                                                                                                                                                                                      |
| Output Fields            | <a href="#">Table 90 on page 1899</a> lists the output fields for the <b>show ldp fec-filters</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                     |

Table 90: show ldp fec-filters Output Fields

| Field Name | Field Description                                |
|------------|--------------------------------------------------|
| Ingress    | Names of the FEC filters on the ingress routers. |
| Transit    | Names of the FEC filters on the transit routers. |

Sample Output

show ldp fec-filters

```
user@host> show ldp fec-filters 10/8
10.22.1.2/32
  Ingress: f1-10.22.1.2/32 (index: 3)
  Transit: (null) (index: 0)
```

## show ldp interface

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | show ldp interface<br><brief   detail   extensive><br><interface-name><br><instance instance-name><br><logical-system (all   logical-system-name)>                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Release Information</b>      | Command introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Description</b>              | Display the status of Label Distribution Protocol (LDP)-enabled interfaces.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Options</b>                  | <p><b>none</b>—Display standard status information about all LDP-enabled interface for all routing instances.</p> <p><b>interface-name</b>—(Optional) Display information for the specified interface.</p> <p><b>brief   detail   extensive</b>—(Optional) Display the specified level of output.</p> <p><b>instance instance-name</b>—(Optional) Display information for the specified routing instance.</p> <p><b>logical-system (all   logical-system-name)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>List of Sample Output</b>    | <a href="#">show ldp interface extensive on page 1901</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Output Fields</b>            | <a href="#">Table 91 on page 1900</a> describes the output fields for the <b>show ldp interface</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                                                                                                                                                                                                                                                               |

Table 91: show ldp interface Output Fields

| Field Name            | Field Description                                                                                                                                                              | Level of Output                   |
|-----------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------|
| <b>Interface</b>      | Interface name.                                                                                                                                                                | All levels                        |
| <b>Label space ID</b> | Label space identifier that the router is advertising on the interface.                                                                                                        | All levels                        |
| <b>Nbr count</b>      | Number of neighbors on the interface.                                                                                                                                          | All levels                        |
| <b>Next hello</b>     | How long until the next hello packet is sent on this interface, in seconds.                                                                                                    | All levels                        |
| <b>Hello interval</b> | One-third of the negotiated hold time (in seconds). If the user-configured value for the hello interval is smaller than the computed value, the user-configured value is used. | <b>detail</b><br><b>extensive</b> |
| <b>Hold time</b>      | Configured hold time, in seconds.                                                                                                                                              | <b>detail</b><br><b>extensive</b> |

Table 91: show ldp interface Output Fields (*continued*)

| Field Name           | Field Description                                                                 | Level of Output |
|----------------------|-----------------------------------------------------------------------------------|-----------------|
| Transport address    | Address to which the neighbor wants the local route to establish the LDP session. | extensive       |
| Local hello interval | Locally configured hello interval.                                                | extensive       |

## Sample Output

### show ldp interface extensive

```
user@host> show ldp interface extensive
Interface          Label space ID      Nbr count  Next hello
fe-0/0/3.0         10.255.245.6:0      2          0
Hello interval: 1, Hold time: 15, Transport address: 10.255.245.6
Local hello interval: 2, Index: 69
```

## show ldp neighbor

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>show ldp neighbor &lt;brief   detail   extensive&gt; &lt;auto-targeted&gt; &lt;instance <i>instance-name</i>&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt; &lt;neighbor-address&gt;</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Release Information</b>      | <p>Command introduced before Junos OS Release 7.4.</p> <p><b>neighbor-address</b> option added in Junos OS Release 8.5.</p> <p>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.</p> <p><b>auto-targeted</b> option added in Junos OS Release 14.2.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Description</b>              | Display Label Distribution Protocol (LDP) neighbor information.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Options</b>                  | <p><b>none</b>—Display standard information about LDP neighbors for all routing instances.</p> <p><b>brief   detail   extensive</b>—(Optional) Display the specified level of output.</p> <p><b>auto-targeted</b>—(Optional) Display information about LDP neighbors that are automatically targeted using the loopback addresses.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Display information for the specified routing instance.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p><b>neighbor-address</b>—(Optional) Display information about the specified LDP neighbor.</p> |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li><a href="#">clear ldp neighbor on page 1884</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>List of Sample Output</b>    | <p><a href="#">show ldp neighbor extensive on page 1903</a></p> <p><a href="#">show ldp neighbor auto-targeted extensive on page 1903</a></p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Output Fields</b>            | <p><a href="#">Table 92 on page 1902</a> describes the output fields for the <b>show ldp neighbor</b> command. Output fields are listed in the approximate order in which they appear.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |

Table 92: show ldp neighbor Output Fields

| Field Name     | Field Description                                  | Level of Output |
|----------------|----------------------------------------------------|-----------------|
| Address        | IP address of the neighbor.                        | All levels      |
| Interface      | Interface over which the neighbor was discovered.  | All levels      |
| Label space ID | Label space identifier advertised by the neighbor. | All levels      |

Table 92: show ldp neighbor Output Fields (*continued*)

| Field Name             | Field Description                                                                                           | Level of Output  |
|------------------------|-------------------------------------------------------------------------------------------------------------|------------------|
| Hold time              | Remaining hold time before the neighbor expires, in seconds.                                                | All levels       |
| Transport address      | Address to which the neighbor wants the local route to establish the LDP session.                           | detail           |
| Configuration sequence | Counter that increments whenever the neighbor changes its configuration.                                    | detail           |
| Up for                 | Length of time the LDP neighbor has been in operation.                                                      | detail extensive |
| Reference count        | Reference count for the LDP neighbor.                                                                       | extensive        |
| Hold time              | Displays the neighbor's hold time. The hold time is the proposed hold times for the local and peer routers. | extensive        |
| Proposed local/peer    | Hold time value proposed by the local router and the peer router.                                           | extensive        |

## Sample Output

### show ldp neighbor extensive

```

user@host> show ldp neighbor extensive
Address          Interface      Label space ID      Hold Time
192.168.37.23    so-1/0/0.0    10.255.245.5:0      44
Transport address: 10.255.245.5, Configuration sequence: 6
Up for 00:03:37
Reference count: 1
Hold time: 45, Proposed local/peer: 15/45

```

### show ldp neighbor auto-targeted extensive

```

user@host> show ldp neighbor auto-targeted extensive
Address          Interface      Label space ID      Hold time
10.255.107.236   lo0.0         10.255.107.236:0    41
Transport address: 10.255.107.236, Configuration sequence: 14
Up for 00:10:53
Reference count: 2
Hold time: 45, Proposed local/peer: 45/45
Hello interval: 15
Hello flags: targeted
Neighbor types: Auto-targeted

```

## show ldp overview

|                                                 |                                                                                                                                                                                                                                                                                                                                                                                             |
|-------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                                   | <b>show ldp overview</b><br><instance <i>instance-name</i> ><br><logical-system (all   <i>logical-system-name</i> )>                                                                                                                                                                                                                                                                        |
| <b>Syntax (EX Series Switch and QFX Series)</b> | <b>show ldp overview</b><br><instance <i>instance-name</i> >                                                                                                                                                                                                                                                                                                                                |
| <b>Release Information</b>                      | Command introduced in Junos OS Release 11.2.                                                                                                                                                                                                                                                                                                                                                |
| <b>Description</b>                              | Display LDP overview information.                                                                                                                                                                                                                                                                                                                                                           |
| <b>Options</b>                                  | <p><b>none</b>— Display standard overview information about LDP for all routing instances.</p> <p><b>instance <i>instance-name</i></b>— (Optional) Display LDP overview information for the specified routing instance.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>— (Optional) Display LDP information from systems or a particular logical system on the devices.</p> |
| <b>Required Privilege Level</b>                 | view                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>List of Sample Output</b>                    | <a href="#">show ldp overview on page 1907</a>                                                                                                                                                                                                                                                                                                                                              |
| <b>Output Fields</b>                            | <a href="#">Table 93 on page 1904</a> lists the output fields for the <b>show ldp overview</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                                                                                             |

**Table 93: show ldp overview Output Fields**

| Field Name             | Field description                                                                                                                                                                                                                                     | Level of Output |
|------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| Instance               | LDP routing instance.                                                                                                                                                                                                                                 | All Levels      |
| Router ID              | Router ID of the routing device.                                                                                                                                                                                                                      | All Levels      |
| Message ID             | Unique identifier of message.                                                                                                                                                                                                                         | All Levels      |
| Configuration sequence | Value of configuration sequence.                                                                                                                                                                                                                      | All Levels      |
| Deaggregate            | Status of control forwarding equivalence class (FEC) deaggregation on the router. By default it is <b>disabled</b> on the router.                                                                                                                     | All Levels      |
| Explicit null          | <p>Advertise label 0 to the egress routing device of an LSP. Explicit null: <b>enabled</b> or <b>disabled</b>.</p> <p><b>NOTE:</b> If you do not include the explicit-null statement in the configuration, label 3 (implicit null) is advertised.</p> | All Levels      |
| IPv6 tunneling         | Internet Protocol version 6 tunneling: <b>enabled</b> or <b>disabled</b> .                                                                                                                                                                            | All Levels      |

Table 93: show ldp overview Output Fields (*continued*)

| Field Name                                              | Field description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               | Level of Output |
|---------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| <b>Strict targeted hellos</b>                           | Prevent LDP sessions from being established with remote neighbors that have not been specifically configured. Strict targeted hellos: <b>enabled</b> or <b>disabled</b> .<br><br><i>NOTE:</i> LDP peers will not respond to targeted hellos coming from a source that is not one of the configured remote neighbors.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | All Levels      |
| <b>Loopback if added</b>                                | Loopback interface is added: <b>yes</b> or <b>no</b> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | All Levels      |
| <b>Route preference</b>                                 | Default preference value (also known as an administrative distance) assigned to each route that the routing table receives. LDP preference is: <b>9</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | All Levels      |
| <b>Unicast transit LSP chaining</b>                     | Unicast transit LSP chaining: <b>enabled</b> or <b>disabled</b> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               | All Levels      |
| <b>P2MP transit LSP chaining</b>                        | P2MP transit LSP chaining: <b>enabled</b> or <b>disabled</b> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | All Levels      |
| <b>Transit LSP statistics based on route statistics</b> | Transit LSP statistics based on route statistics: <b>enabled</b> or <b>disabled</b> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | All Levels      |
| <b>Longest match</b>                                    | Longest match for label mapping: <b>enabled</b> or <b>disabled</b> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | All Levels      |
| <b>Capabilities enabled</b>                             | Enabled capabilities: <b>none</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               | All Levels      |
| <b>Timers</b>                                           | <ul style="list-style-type: none"> <li>• <b>Keepalive interval:</b> Keepalive interval value.</li> <li>• <b>Keepalive timeout:</b> Time interval for which the neighbor LDP node waits before determining session failure.</li> <li>• <b>Link hello interval:</b> Specify how often the router sends Link Management Protocol (LMP) hello packets.</li> <li>• <b>Link hello hold time:</b> Time interval for which an LDP node waits for a hello message before declaring a neighbor is down.</li> <li>• <b>Targeted hello interval:</b> Specify how often LDP sends targeted hello messages.</li> <li>• <b>Targeted hello hold time:</b> Time interval for which a sending LSR maintains a record of targeted hello messages from the receiving LSR without receipt of another targeted hello message from that LSR.</li> <li>• <b>Label withdraw delay:</b> Time interval for withdrawing labels to reduce router workload during IGP convergence.</li> </ul> | All Levels      |

Table 93: show ldp overview Output Fields (*continued*)

| Field Name                      | Field description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               | Level of Output |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| Graceful restart                | Graceful restart attributes. <ul style="list-style-type: none"> <li><b>Restart</b>— Graceful restart capability: <b>enabled</b> or <b>disabled</b>.</li> <li><b>Helper</b>— Standard graceful restart helper capability: <b>enabled</b> or <b>disabled</b>.</li> <li><b>Restart in process</b>— Graceful restart in process.</li> <li><b>Reconnect time</b>— Period of time that a restarting LSR (label switched router) designates to LDP neighbors to wait until the former reestablishes the session after restarting.</li> <li><b>Max neighbor reconnect time</b>— Maximum reconnect time.</li> <li><b>Recovery time</b>— Period of time that an LSR preserves its state across the restart.</li> <li><b>Max neighbor recovery time</b>— Maximum recovery time designated to LDP neighbors by a restarting LSR.</li> </ul> | All Levels      |
| Traffic Engineering             | <ul style="list-style-type: none"> <li><b>Bgp igp</b>— BGP and IGP destinations: <b>enabled</b> or <b>disabled</b>. When enabled, IGP uses MPLS paths for forwarding traffic.</li> <li><b>Both ribs</b>— BGP and IGP destinations with routes in both RIBs: <b>enabled</b> or <b>disabled</b>.</li> <li><b>Mpls forwarding</b>— MPLS routes used for forwarding: <b>enabled</b> or <b>disabled</b>.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                  | All Levels      |
| IGP                             | <ul style="list-style-type: none"> <li><b>Tracking igp metric</b>— Cause the IGP route metric to be used for the LDP routes instead of the default LDP route metric (the default LDP route metric is 1).</li> <li><b>Sync session up delay</b>— Time interval to synchronize LDP session.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | All Levels      |
| Session protection              | <ul style="list-style-type: none"> <li><b>Session protection</b>— Remote neighbor added to LDP configuration which enables protection for all sessions in the corresponding LDP instance: <b>enabled</b> or <b>disabled</b>.</li> <li><b>Session protection timeout</b>— Period of time until which the remote neighbor is connected to LSR in the absence of link neighbors.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                        | All Levels      |
| Interface addresses advertising | Advertises interface address.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | All Levels      |
| Label allocation                | Label accounting information. <ul style="list-style-type: none"> <li><b>Current number of LDP labels allocated</b>— Number of labels currently in use.</li> <li><b>Total number of LDP labels allocated</b>— Cumulative number of labels being allocated.</li> <li><b>Total number of LDP labels freed</b>— Cumulative number of labels being freed.</li> <li><b>Total number of LDP label allocation failures</b>— Cumulative number of failures for allocating a label.</li> <li><b>Current number of labels allocated by all protocols</b>— Number of labels currently being used by routing protocols.</li> </ul>                                                                                                                                                                                                           | All Levels      |



## Sample Output

### show ldp overview

```
user@host> show ldp overview
Instance: master
  Router ID: 192.168.2.1
  Message id: 0
  Configuration sequence: 1
  Deaggregate: disabled
  Explicit null: disabled
  IPv6 tunneling: disabled
  Strict targeted hellos: disabled
  Loopback if added: yes
  Route preference: 9
  Unicast transit LSP chaining: disabled
  P2MP transit LSP chaining: disabled
  Transit LSP statistics based on route statistics: disabled
  Longest Match: enabled
  Capabilities enabled: none
  Timers:
    Keepalive interval: 10, Keepalive timeout: 30
    Link hello interval: 5, Link hello hold time: 15
    Targeted hello interval: 15, Targeted hello hold time: 45
    Label withdraw delay: 60
  Graceful restart:
    Restart: enabled, Helper: enabled, Restart in process: false
    Reconnect time: 60000, Max neighbor reconnect time: 120000
    Recovery time: 160000, Max neighbor recovery time: 240000
  Traffic Engineering:
    Bgp igp: disabled
    Both ribs: disabled
    Mpls forwarding: disabled
  IGP:
    Tracking igp metric: disabled
    Sync session up delay: 10
  Session protection:
    Session protection: disabled
    Session protecton timeout: 0
  Interface addresses advertising:
    192.168.2.1
  Label allocation:
    Current number of LDP labels allocated: 3
    Total number of LDP labels allocated: 3
    Total number of LDP labels freed: 0
    Total number of LDP label allocation failure: 0
    Current number of labels allocated by all protocols: 3
```

## show ldp p2mp tunnel

---

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | show ldp p2mp tunnel<br><brief   detail   extensive><br><instance <i>instance-name</i> ><br><logical-system (all   <i>logical-system-name</i> )>                                                                                                                                                                                                                                                               |
| <b>Release Information</b>      | Command introduced in Junos OS Release 13.3.                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Description</b>              | Display LDP point-to-multipoint tunnel table information.                                                                                                                                                                                                                                                                                                                                                      |
| <b>Options</b>                  | <b>brief   detail   extensive</b> —(Optional) Display the specified level of output.<br><br><b>instance <i>instance-name</i></b> —(Optional) Display routing instance information for the specified instance only.<br><br><b>logical-system (all   <i>logical-system-name</i>)</b> —(Optional) Display LDP point-to-multipoint tunnel table information of all logical systems or a particular logical system. |
| <b>Required Privilege Level</b> | View                                                                                                                                                                                                                                                                                                                                                                                                           |

## Sample Output

### show ldp p2mp tunnel

```
user@host> show ldp p2mp tunnel extensive
```

```
Instance      Tunnel type      Tunnel name
0             Name            10.254.1.1:1:ldp-p2mp:mvpn:vpn-1
P2MP root-addr 10.255.107.232, lsp-id 16777217
Self id 805306372
Reference count 2
```

## show ldp path

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | show ldp path<br><brief   detail   extensive><br><destination><br><instance <i>instance-name</i> ><br><logical-system (all   <i>logical-system-name</i> )>                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Release Information</b>      | Command introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Description</b>              | Display Label Distribution Protocol (LDP) label-switched paths (LSPs).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Options</b>                  | <p><b>none</b>—Display standard information about all LDP LSPs for all routing instances.</p> <p><b>brief   detail   extensive</b>—(Optional) Display the specified level of output.</p> <p><b>destination</b>—(Optional) Restrict the output to entries that match the specified destination prefix.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Display information for the specified routing instance only.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>List of Sample Output</b>    | <a href="#">show ldp path extensive on page 1910</a>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Output Fields</b>            | <a href="#">Table 94 on page 1909</a> describes the output fields for the <b>show ldp path</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                                                                                                                                                                                                                                                                                           |

**Table 94: show ldp path Output Fields**

| Field Name                    | Field Description                                                                                            |
|-------------------------------|--------------------------------------------------------------------------------------------------------------|
| <b>Output Session (label)</b> | Session ID and labels that this system has sent using LDP. These correspond to MPLS packets received.        |
| <b>Input Session (label)</b>  | Session ID and labels that this system has received using LDP. These correspond to MPLS packets transmitted. |
| <b>route</b>                  | MPLS route.                                                                                                  |
| <b>Attached route</b>         | Route corresponding to the LSP.                                                                              |
| <b>Ingress route</b>          | The router acts as the ingress for the LSP.                                                                  |
| <b>Reference count</b>        | Reference count for the LDP neighbor.                                                                        |

Table 94: show ldp path Output Fields (*continued*)

| Field Name    | Field Description                                                               |
|---------------|---------------------------------------------------------------------------------|
| Transit route | Names of the forwarding equivalence class (FEC) filters on the transit routers. |
| Global label  | MPLS label that is used globally.                                               |

## Sample Output

### show ldp path extensive

```
user@host> show ldp path extensive
Output Session (label)      Input Session (label)
10.255.14.220:0(3)         ( )
  Attached route: 10.255.14.221/32
  Reference count: 3, Global label: 3
10.255.14.220:0(100000)     10.255.14.220:0(3)
  Attached route: 10.255.14.220/32, Ingress route
  Reference count: 2, Transit route, Global label: 100000
10.255.14.220:0(100001)     10.255.14.220:0(100001)
  Attached route: 10.255.14.214/32, Ingress route
  Reference count: 2, Transit route, Global label: 100001
```

## show ldp route

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>show ldp route &lt;brief   detail   extensive&gt; &lt;destination&gt; &lt;fec-and-route&gt; &lt;fec-only&gt; &lt;instance <i>instance-name</i>&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt;</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Release Information</b>      | <p>Command introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Description</b>              | Display the entries in the Label Distribution Protocol (LDP) internal topology table. The internal topology table contains routes from inet.0 and inet.3 and is used when binding a label to a forwarding equivalence class (FEC).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Options</b>                  | <p><b>none</b>—Display standard information about all entries in the LDP internal topology table for all routing instances.</p> <p><b>brief   detail   extensive</b>—(Optional) Display the specified level of output.</p> <p><b>destination</b>—(Optional) Restrict the output to entries that are longer than the specified destination prefix and prefix length.</p> <p><b>fec-and-route</b>—Display the show routes and the FECs.</p> <p><b>fec-only</b>—Display only LDP FECs.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Display entries for the specified routing instance only.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>List of Sample Output</b>    | <p><a href="#">show ldp route detail on page 1913</a></p> <p><a href="#">show ldp route extensive on page 1913</a></p> <p><a href="#">show ldp route fec-and-route on page 1914</a></p> <p><a href="#">show ldp route fec-and-route on page 1915</a></p> <p><a href="#">show ldp route fec-only on page 1917</a></p> <p><a href="#">show ldp route fec-only detail on page 1918</a></p>                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Output Fields</b>            | Table 95 on page 1912 describes the output fields for the <b>show ldp route</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |

Table 95: show ldp route Output Fields

| Field Name              | Field Description                                                                                                                                               |
|-------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Destination             | Destination prefix.                                                                                                                                             |
| Next-hop intf/lsp/table | Interface that is the next hop to the destination prefix.                                                                                                       |
| Next-hop address        | IP address of the next hop.                                                                                                                                     |
| Session ID              | LDP session ID.                                                                                                                                                 |
| Route flags             | Information about the route. For example, the <b>Ingress TTL propagate</b> flag indicates that the time-to-live (TTL) value is being propagated with the route. |
| Bound to outgoing label | The route has been bound to LSPs with the label being distributed for that LSP.                                                                                 |
| Topology entry          | The topology that the route is bound to.                                                                                                                        |
| Ingress route status    | Status of the ingress route. For example, it could be <b>Active</b> or <b>Inactive</b> .                                                                        |
| Last modified           | The length of time since the ingress route status last changed.                                                                                                 |
| Last event(s)           | The last event that occurred.                                                                                                                                   |

## Sample Output

### show ldp route detail

```

user@host> show ldp route 10.255.8.5 detail
Destination      Next-hop intf/lsp      Next-hop address
10.255.8.5/32    f1
  Session ID 10.255.170.84:0--10.255.170.92:0
                    fe-0/0/0.0      192.168.100.2
  Session ID 10.255.170.84:0--10.255.8.5:0
                    so-0/2/1.0
  Session ID 10.255.170.84:0--10.255.8.5:0
                    so-0/2/2.0
  Session ID 10.255.170.84:0--10.255.8.3:0
  Bound to outgoing label 299776, Topology entry: 0x8c38a80
  BFD dest addr   BFD state LSP-ping Next-hop addr Next-hop intf/lsp
127.0.0.64       up        up        192.168.100.2 fe-0/0/0.0
127.0.1.64       up        up        so-0/2/1.0
127.0.2.64       up        up        so-0/2/2.0
127.0.3.64       up        up        f1
.....

```

### show ldp route extensive

```

user@host> show ldp route extensive

Destination      Next-hop intf/lsp/table Next-hop address
10.0.0.0/30      ge-1/2/0.18            10.0.0.17
  Session ID 192.168.0.6:0--192.168.0.5:0
  Route flags: None
Destination      Next-hop intf/lsp/table Next-hop address
10.0.0.4/30      ge-1/2/0.18            10.0.0.17
  Session ID 192.168.0.6:0--192.168.0.5:0
  Route flags: None
Destination      Next-hop intf/lsp/table Next-hop address
10.0.0.8/30      ge-1/2/1.21            10.0.0.22
  Session ID 192.168.0.6:0--192.168.0.4:0
  Route flags: None
Destination      Next-hop intf/lsp/table Next-hop address
10.0.0.12/30     ge-1/2/1.21            10.0.0.22
  Session ID 192.168.0.6:0--192.168.0.4:0
  Route flags: None
Destination      Next-hop intf/lsp/table Next-hop address
10.0.0.16/30     ge-1/2/0.18
  Route flags: None
Destination      Next-hop intf/lsp/table Next-hop address
10.0.0.18/32     ge-1/2/0.18
  Route flags: None
Destination      Next-hop intf/lsp/table Next-hop address
10.0.0.20/30     ge-1/2/1.21
  Route flags: None
Destination      Next-hop intf/lsp/table Next-hop address
10.0.0.21/32     ge-1/2/1.21
  Route flags: None
Destination      Next-hop intf/lsp/table Next-hop address
192.168.0.1/32   ge-1/2/0.18            10.0.0.17
  Session ID 192.168.0.6:0--192.168.0.5:0
  Route flags: None
Destination      Next-hop intf/lsp/table Next-hop address
192.168.0.2/32   ge-1/2/1.21            10.0.0.22
  Session ID 192.168.0.6:0--192.168.0.4:0

```

```

                                ge-1/2/0.18                10.0.0.17
Session ID 192.168.0.6:0--192.168.0.5:0
Route flags: None
Destination      Next-hop intf/lsp/table      Next-hop address
192.168.0.3/32   ge-1/2/1.21                10.0.0.22
Session ID 192.168.0.6:0--192.168.0.4:0
Route flags: None
Destination      Next-hop intf/lsp/table      Next-hop address
192.168.0.4/32   ge-1/2/1.21                10.0.0.22
Session ID 192.168.0.6:0--192.168.0.4:0
Bound to outgoing label 299808, Topology entry: 0x92a483c
Ingress route status: Active, Last modified: 00:01:19 ago
Route flags: Ingress TTL propagate, Transit TTL propagate
Destination      Next-hop intf/lsp/table      Next-hop address
192.168.0.5/32   ge-1/2/0.18                10.0.0.17
Session ID 192.168.0.6:0--192.168.0.5:0
Bound to outgoing label 299792, Topology entry: 0x92a47f8
Ingress route status: Active, Last modified: 00:01:19 ago
Route flags: Ingress TTL propagate, Transit TTL propagate
Destination      Next-hop intf/lsp/table      Next-hop address
192.168.0.6/32   lo0.6                      10.0.0.17
Bound to outgoing label 3, Topology entry: 0x92a4a5c
Ingress route status: Inactive
Route type: Egress route
Route flags: None
Destination      Next-hop intf/lsp/table      Next-hop address
10.10.20.1/32    fe-1/0/0.0                192.168.199.37
                                LSP LDP->10.255.107.230

```

### show ldp route fec-and-route

```

user@host> show ldp route fec-and-route
Destination      Next-hop intf/lsp/table      Next-hop address
10.4.0.0/16      fxp0.0                      10.92.31.254
10.5.0.0/16      fxp0.0                      10.92.31.254
10.6.128.0/17    fxp0.0                      10.92.31.254
10.9.0.0/16      fxp0.0                      10.92.31.254
10.10.0.0/16     fxp0.0                      10.92.31.254
10.13.4.0/23     fxp0.0                      10.92.31.254
10.13.10.0/23    fxp0.0                      10.92.31.254
10.82.0.0/15     fxp0.0                      10.92.31.254
10.84.0.0/16     fxp0.0                      10.92.31.254
10.85.12.0/22    fxp0.0                      10.92.31.254
10.92.0.0/16     fxp0.0                      10.92.31.254
10.92.16.0/20    fxp0.0                      10.92.31.254
10.92.20.175/32  fxp0.0                      10.92.31.254
10.94.0.0/16     fxp0.0                      10.92.31.254
10.99.0.0/16     fxp0.0                      10.92.31.254
10.102.0.0/16    fxp0.0                      10.92.31.254
10.150.0.0/16    fxp0.0                      10.92.31.254
10.155.0.0/16    fxp0.0                      10.92.31.254
10.157.64.0/19   fxp0.0                      10.92.31.254
10.160.0.0/16    fxp0.0                      10.92.31.254
10.204.0.0/16    fxp0.0                      10.92.31.254
10.205.0.0/16    fxp0.0                      10.92.31.254
10.206.0.0/16    fxp0.0                      10.92.31.254
10.207.0.0/16    fxp0.0                      10.92.31.254
10.209.0.0/16    fxp0.0                      10.92.31.254
10.212.0.0/16    fxp0.0                      10.92.31.254
10.213.0.0/16    fxp0.0                      10.92.31.254
10.214.0.0/16    fxp0.0                      10.92.31.254

```



|                   |            |              |
|-------------------|------------|--------------|
| 10.215.0.0/16     | fxp0.0     | 10.92.31.254 |
| 10.216.0.0/16     | fxp0.0     | 10.92.31.254 |
| 10.218.13.0/24    | fxp0.0     | 10.92.31.254 |
| 10.218.14.0/24    | fxp0.0     | 10.92.31.254 |
| 10.218.16.0/20    | fxp0.0     | 10.92.31.254 |
| 10.218.32.0/20    | fxp0.0     | 10.92.31.254 |
| 10.227.0.0/16     | fxp0.0     | 10.92.31.254 |
| 10.255.111.0/24   | ge-0/0/2.0 | 11.11.11.2   |
| 10.255.111.1/32   | ge-0/0/2.0 | 11.11.11.2   |
| 10.255.111.2/32   | ge-0/0/2.0 | 11.11.11.2   |
| 10.255.111.3/32   | ge-0/0/2.0 | 11.11.11.2   |
| 10.255.111.4/32   | ge-0/0/2.0 | 11.11.11.2   |
| 10.255.111.4/32   | ge-0/0/2.0 | 11.11.11.2   |
| 10.255.112.1/32   | lo0.0      |              |
| 10.255.112.1/32   | lo0.0      |              |
| 10.255.112.2/32   | ge-0/0/2.0 | 11.11.11.2   |
| 10.255.112.2/32   | ge-0/0/2.0 | 11.11.11.2   |
| 11.11.11.0/24     | ge-0/0/2.0 |              |
| 11.11.11.1/32     |            |              |
| 12.12.12.0/24     | ge-0/0/2.0 | 11.11.11.2   |
| 15.15.15.0/24     | ge-0/0/1.0 |              |
| 15.15.15.1/32     |            |              |
| 22.22.22.0/24     | ge-0/0/0.0 |              |
| 22.22.22.1/32     |            |              |
| 23.23.23.0/24     | ge-0/0/2.0 | 11.11.11.2   |
| 24.24.24.0/24     | ge-0/0/2.0 | 11.11.11.2   |
| 25.25.25.0/24     | ge-0/0/2.0 | 11.11.11.2   |
| 128.92.17.45/32   | ge-0/0/2.0 | 11.11.11.2   |
| 128.92.20.175/32  | lo0.0      |              |
| 128.92.21.186/32  | ge-0/0/2.0 | 11.11.11.2   |
| 128.92.25.135/32  | ge-0/0/2.0 | 11.11.11.2   |
| 128.92.27.91/32   | ge-0/0/2.0 | 11.11.11.2   |
| 128.92.28.70/32   | ge-0/0/2.0 | 11.11.11.2   |
| 172.16.0.0/12     | fxp0.0     | 10.92.31.254 |
| 192.168.0.0/16    | fxp0.0     | 10.92.31.254 |
| 192.168.102.0/23  | fxp0.0     | 10.92.31.254 |
| 207.17.136.0/24   | fxp0.0     | 10.92.31.254 |
| 207.17.136.192/32 | fxp0.0     | 10.92.31.254 |
| 207.17.137.0/24   | fxp0.0     | 10.92.31.254 |
| 224.0.0.5/32      |            |              |

### show ldp route fec-and-route

```
user@host> show ldp route fec-and-route
```

| Destination     | Next-hop intf/lsp/table | Next-hop address |
|-----------------|-------------------------|------------------|
| 10.4.0.0/16     | fxp0.0                  | 10.92.31.254     |
| 10.5.0.0/16     | fxp0.0                  | 10.92.31.254     |
| 10.6.128.0/17   | fxp0.0                  | 10.92.31.254     |
| 10.9.0.0/16     | fxp0.0                  | 10.92.31.254     |
| 10.10.0.0/16    | fxp0.0                  | 10.92.31.254     |
| 10.13.4.0/23    | fxp0.0                  | 10.92.31.254     |
| 10.13.10.0/23   | fxp0.0                  | 10.92.31.254     |
| 10.82.0.0/15    | fxp0.0                  | 10.92.31.254     |
| 10.84.0.0/16    | fxp0.0                  | 10.92.31.254     |
| 10.85.12.0/22   | fxp0.0                  | 10.92.31.254     |
| 10.92.0.0/16    | fxp0.0                  | 10.92.31.254     |
| 10.92.16.0/20   | fxp0.0                  |                  |
| 10.92.20.175/32 |                         |                  |
| 10.94.0.0/16    | fxp0.0                  | 10.92.31.254     |
| 10.99.0.0/16    | fxp0.0                  | 10.92.31.254     |
| 10.102.0.0/16   | fxp0.0                  | 10.92.31.254     |

```

10.150.0.0/16      fxp0.0      10.92.31.254
10.155.0.0/16      fxp0.0      10.92.31.254
10.157.64.0/19     fxp0.0      10.92.31.254
10.160.0.0/16      fxp0.0      10.92.31.254
10.204.0.0/16      fxp0.0      10.92.31.254
10.205.0.0/16      fxp0.0      10.92.31.254
10.206.0.0/16      fxp0.0      10.92.31.254
10.207.0.0/16      fxp0.0      10.92.31.254
10.209.0.0/16      fxp0.0      10.92.31.254
10.212.0.0/16      fxp0.0      10.92.31.254
10.213.0.0/16      fxp0.0      10.92.31.254
10.214.0.0/16      fxp0.0      10.92.31.254
10.215.0.0/16      fxp0.0      10.92.31.254
10.216.0.0/16      fxp0.0      10.92.31.254
10.218.13.0/24     fxp0.0      10.92.31.254
10.218.14.0/24     fxp0.0      10.92.31.254
10.218.16.0/20     fxp0.0      10.92.31.254
10.218.32.0/20     fxp0.0      10.92.31.254
10.227.0.0/16      fxp0.0      10.92.31.254
10.255.111.0/24    ge-0/0/2.0  11.11.11.2
  Session ID 10.255.112.1:0--10.255.112.2:0
10.255.111.1/32    ge-0/0/2.0  11.11.11.2
  Session ID 10.255.112.1:0--10.255.112.2:0
  Bound to outgoing label 300192, Topology entry: 0xb5de1b0
  Ingress route status: Active, Last modified: 09:57:49 ago
  Last event(s): Rebind
  Route flags: Transit TTL propagate, Allow longest match
Destination      Next-hop intf/lsp/table      Next-hop address
10.255.111.2/32   ge-0/0/2.0      11.11.11.2
  Session ID 10.255.112.1:0--10.255.112.2:0
  Bound to outgoing label 300208, Topology entry: 0xb5de1f8
  Ingress route status: Active, Last modified: 09:57:49 ago
  Last event(s): Rebind
  Route flags: Transit TTL propagate, Allow longest match
Destination      Next-hop intf/lsp/table      Next-hop address
10.255.111.3/32   ge-0/0/2.0      11.11.11.2
  Session ID 10.255.112.1:0--10.255.112.2:0
  Bound to outgoing label 300224, Topology entry: 0xb5de240
  Ingress route status: Active, Last modified: 09:57:49 ago
  Last event(s): Rebind
  Route flags: Transit TTL propagate, Allow longest match
Destination      Next-hop intf/lsp/table      Next-hop address
10.255.111.4/32   ge-0/0/2.0      11.11.11.2
  Session ID 10.255.112.1:0--10.255.112.2:0
  Bound to outgoing label 300112, Topology entry: 0xb5de708
  Ingress route status: Active, Last modified: 10:10:56 ago
  Last event(s): Evaluate Update ingress route Update transit route
  Route flags: Ingress TTL propagate, Transit TTL propagate, Allow longest match
Destination      Next-hop intf/lsp/table      Next-hop address
10.255.111.4/32   ge-0/0/2.0      11.11.11.2
  Session ID 10.255.112.1:0--10.255.112.2:0
  Bound to outgoing label 300112, Topology entry: 0xb5de708
  Ingress route status: Active, Last modified: 10:10:56 ago
  Last event(s): Evaluate Update ingress route Update transit route
  Route flags: Ingress TTL propagate, Transit TTL propagate, Allow longest match
Destination      Next-hop intf/lsp/table      Next-hop address
10.255.112.1/32   lo0.0
  Bound to outgoing label 3, Topology entry: 0xb5de120
  Ingress route status: Inactive
  Last event(s): Evaluate Update history
  Route type: Egress route

```

```

Route flags: Allow longest match
Destination      Next-hop intf/lsp/table      Next-hop address
10.255.112.1/32  lo0.0
Bound to outgoing label 3, Topology entry: 0xb5de120
Ingress route status: Inactive
Last event(s): Evaluate Update history
Route type: Egress route
Route flags: Allow longest match
Destination      Next-hop intf/lsp/table      Next-hop address
10.255.112.2/32  ge-0/0/2.0                  11.11.11.2
Session ID 10.255.112.1:0--10.255.112.2:0
Bound to outgoing label 300064, Topology entry: 0xb5de630
Ingress route status: Active, Last modified: 10:11:04 ago
Last event(s): Update ingress route
Route flags: Ingress TTL propagate, Transit TTL propagate, Allow longest match
Destination      Next-hop intf/lsp/table      Next-hop address
10.255.112.2/32  ge-0/0/2.0                  11.11.11.2
Session ID 10.255.112.1:0--10.255.112.2:0
Bound to outgoing label 300064, Topology entry: 0xb5de630
Ingress route status: Active, Last modified: 10:11:04 ago
Last event(s): Update ingress route
Route flags: Ingress TTL propagate, Transit TTL propagate, Allow longest match
Destination      Next-hop intf/lsp/table      Next-hop address
11.11.11.0/24    ge-0/0/2.0
11.11.11.1/32
12.12.12.0/24    ge-0/0/2.0                  11.11.11.2
Session ID 10.255.112.1:0--10.255.112.2:0
15.15.15.0/24    ge-0/0/1.0
15.15.15.1/32
22.22.22.0/24    ge-0/0/0.0
22.22.22.1/32
23.23.23.0/24    ge-0/0/2.0                  11.11.11.2
Session ID 10.255.112.1:0--10.255.112.2:0
24.24.24.0/24    ge-0/0/2.0                  11.11.11.2
Session ID 10.255.112.1:0--10.255.112.2:0
25.25.25.0/24    ge-0/0/2.0                  11.11.11.2
Session ID 10.255.112.1:0--10.255.112.2:0
128.92.17.45/32  ge-0/0/2.0                  11.11.11.2
Session ID 10.255.112.1:0--10.255.112.2:0
128.92.20.175/32 lo0.0
128.92.21.186/32 ge-0/0/2.0                  11.11.11.2
Session ID 10.255.112.1:0--10.255.112.2:0
128.92.25.135/32 ge-0/0/2.0                  11.11.11.2
Session ID 10.255.112.1:0--10.255.112.2:0
128.92.27.91/32  ge-0/0/2.0                  11.11.11.2
Session ID 10.255.112.1:0--10.255.112.2:0
128.92.28.70/32  ge-0/0/2.0                  11.11.11.2
Session ID 10.255.112.1:0--10.255.112.2:0
172.16.0.0/12    fxp0.0                      10.92.31.254
192.168.0.0/16    fxp0.0                      10.92.31.254
192.168.102.0/23  fxp0.0                      10.92.31.254
207.17.136.0/24  fxp0.0                      10.92.31.254
207.17.136.192/32 fxp0.0                      10.92.31.254
207.17.137.0/24  fxp0.0                      10.92.31.254
224.0.0.5/32

```

### show ldp route fec-only

```

user@host> show ldp route fec-only
user@host_re0> show ldp route fec-only
Destination      Next-hop intf/lsp/table      Next-hop address

```

|                 |            |            |
|-----------------|------------|------------|
| 10.255.111.1/32 | ge-0/0/2.0 | 11.11.11.2 |
| 10.255.111.2/32 | ge-0/0/2.0 | 11.11.11.2 |
| 10.255.111.3/32 | ge-0/0/2.0 | 11.11.11.2 |
| 10.255.111.4/32 | ge-0/0/2.0 | 11.11.11.2 |
| 10.255.112.1/32 | lo0.0      |            |
| 10.255.112.2/32 | ge-0/0/2.0 | 11.11.11.2 |

### show ldp route fec-only detail

```

user@host> show ldp route fec-only detail
Destination      Next-hop intf/lsp/table      Next-hop address
10.255.111.1/32  ge-0/0/2.0                  11.11.11.2
  Session ID 10.255.112.1:0--10.255.112.2:0
  Bound to outgoing label 300192, Topology entry: 0xb5de1b0
  Ingress route status: Active, Last modified: 09:55:10 ago
  Last event(s): Rebind
  Route flags: Transit TTL propagate, Allow longest match
Destination      Next-hop intf/lsp/table      Next-hop address
10.255.111.2/32  ge-0/0/2.0                  11.11.11.2
  Session ID 10.255.112.1:0--10.255.112.2:0
  Bound to outgoing label 300208, Topology entry: 0xb5de1f8
  Ingress route status: Active, Last modified: 09:55:10 ago
  Last event(s): Rebind
  Route flags: Transit TTL propagate, Allow longest match
Destination      Next-hop intf/lsp/table      Next-hop address
10.255.111.3/32  ge-0/0/2.0                  11.11.11.2
  Session ID 10.255.112.1:0--10.255.112.2:0
  Bound to outgoing label 300224, Topology entry: 0xb5de240
  Ingress route status: Active, Last modified: 09:55:10 ago
  Last event(s): Rebind
  Route flags: Transit TTL propagate, Allow longest match
Destination      Next-hop intf/lsp/table      Next-hop address
10.255.111.4/32  ge-0/0/2.0                  11.11.11.2
  Session ID 10.255.112.1:0--10.255.112.2:0
  Bound to outgoing label 300112, Topology entry: 0xb5de708
  Ingress route status: Active, Last modified: 10:08:17 ago
  Last event(s): Evaluate Update ingress route Update transit route
  Route flags: Ingress TTL propagate, Transit TTL propagate, Allow longest match
Destination      Next-hop intf/lsp/table      Next-hop address
10.255.112.1/32  lo0.0
  Bound to outgoing label 3, Topology entry: 0xb5de120
  Ingress route status: Inactive
  Last event(s): Evaluate Update history
  Route type: Egress route
  Route flags: Allow longest match
Destination      Next-hop intf/lsp/table      Next-hop address
10.255.112.2/32  ge-0/0/2.0                  11.11.11.2
  Session ID 10.255.112.1:0--10.255.112.2:0
  Bound to outgoing label 300064, Topology entry: 0xb5de630
  Ingress route status: Active, Last modified: 10:08:25 ago
  Last event(s): Update ingress route
  Route flags: Ingress TTL propagate, Transit TTL propagate, Allow longest match

```

## show ldp session

|                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <pre>show ldp session &lt;brief   detail   extensive&gt; &lt;auto-targeted&gt; &lt;destination&gt; &lt;instance instance-name&gt; &lt;logical-system (all   logical-system-name)&gt;</pre>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Release Information</b>      | <p>Command introduced before Junos OS Release 7.4.</p> <p>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.</p> <p><b>auto-targeted</b> option added in Junos OS Release 14.2.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Description</b>              | Display information about Label Distribution Protocol (LDP) sessions.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Options</b>                  | <p><b>none</b>—Display standard information about all LDP sessions for all routing instances.</p> <p><b>brief   detail   extensive</b>—(Optional) Display the specified level of output.</p> <p><b>auto-targeted</b>—(Optional) Display information about LDP sessions that are automatically targeted using loopback addresses.</p> <p><b>destination</b>—(Optional) Restrict LDP session display to the specified address.</p> <p><b>instance instance-name</b>—(Optional) Display routing instance information for the specified instance. If <b>instance-name</b> is omitted, information is displayed for the master instance.</p> <p><b>logical-system (all   logical-system-name)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">clear ldp session on page 1885</a></li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>List of Sample Output</b>    | <p><a href="#">show ldp session brief on page 1923</a></p> <p><a href="#">show ldp session detail on page 1923</a></p> <p><a href="#">show ldp session extensive on page 1924</a></p> <p><a href="#">show ldp session auto-targeted detail on page 1924</a></p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Output Fields</b>            | <p><a href="#">Table 96 on page 1919</a> describes the output fields for the <b>show ldp session</b> command. Output fields are listed in the approximate order in which they appear.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |

**Table 96: show ldp session Output Fields**

| Field Name | Field Description                                                                                                                                                                                                                                                                           | Level of Output |
|------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| Address    | Transport address of the session.                                                                                                                                                                                                                                                           | any             |
| State      | State of the session: <b>Nonexistent</b> , <b>Connecting</b> , <b>Initialized</b> , <b>OpenRec</b> , <b>OpenSent</b> , <b>Operational</b> , or <b>Closing</b> . The states correspond to the state diagram specified in Internet Draft LDP Specification draft-ietf-mpls-rfc3036bis-01.txt. | any             |

Table 96: show ldp session Output Fields (*continued*)

| Field Name             | Field Description                                                                                                                                                                                                     | Level of Output  |
|------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------|
| Connection             | TCP connection state: <b>Closed</b> , <b>Opening</b> , or <b>Open</b> .                                                                                                                                               | any              |
| Hold time              | Time remaining until the session will be closed, in seconds.                                                                                                                                                          | any              |
| Session ID             | LDP identifiers of the peers of this session.                                                                                                                                                                         | detail extensive |
| Next keepalive         | Time until next keepalive is sent, in seconds.                                                                                                                                                                        | detail extensive |
| Active                 | Whether the local router is playing the active role in the session and during session establishment.                                                                                                                  | detail extensive |
| Passive                | Whether the local router is playing the passive role in the session and during session establishment.                                                                                                                 | detail extensive |
| Maximum PDU            | Maximum protocol data unit (PDU) size (packet size) for the session.                                                                                                                                                  | detail extensive |
| Hold time              | Time remaining until the session will be closed, in seconds. This value corresponds to the one configured using the <b>keepalive-timeout</b> statement configured at the <b>[edit protocols ldp]</b> hierarchy level. | detail extensive |
| Neighbor count         | Number of neighbors that are contributing to the session.                                                                                                                                                             | detail extensive |
| Neighbor types         | Category of LDP session: <b>discovered</b> or <b>auto-targeted</b> .                                                                                                                                                  | any              |
| Keepalive interval     | Keepalive interval, in seconds.                                                                                                                                                                                       | detail extensive |
| Connect retry interval | TCP connection retry interval, in seconds.                                                                                                                                                                            | detail extensive |
| Local address          | Local transport address.                                                                                                                                                                                              | detail extensive |
| Remote address         | Remote transport address.                                                                                                                                                                                             | detail extensive |
| Up for                 | Time that this session has been up.                                                                                                                                                                                   | detail extensive |
| Last down              | Time since the session last went down.                                                                                                                                                                                | detail extensive |

Table 96: show ldp session Output Fields (*continued*)

| Field Name                          | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | Level of Output  |
|-------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------|
| Reason                              | Reason the session went down: <ul style="list-style-type: none"> <li>• Aborted graceful restart</li> <li>• Authentication key was changed</li> <li>• Bad type length value (TLV)</li> <li>• Bad protocol data unit (PDU) packets</li> <li>• Command-line interface (CLI) command</li> <li>• Connect time expired</li> <li>• Connection error</li> <li>• Connection reset</li> <li>• Error during initialization</li> <li>• Hold time expired</li> <li>• No adjacency or all adjacencies down</li> <li>• Notification received</li> <li>• Received notification from peer</li> <li>• Unexpected End of File (EOF)</li> <li>• Unknown reason</li> </ul> | detail extensive |
| Number of session flaps             | Number of times the session changes from up to down.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | detail extensive |
| Restarting                          | LDP is in the process of gracefully restarting.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       | detail extensive |
| Capabilities advertised             | LDP capabilities advertised to a peer.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | detail extensive |
| Capabilities received               | LDP capabilities received from a peer.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | detail extensive |
| Protection                          | Information about the status of MPLS LDP session protection.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | detail extensive |
| restart complete in <i>nnn</i> msec | Amount of time (in milliseconds) remaining until graceful restart is declared complete.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               | detail extensive |
| Authentication type                 | Shows the longest match MD5 authentication                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | detail extensive |

Table 96: show ldp session Output Fields (*continued*)

| Field Name                         | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | Level of Output         |
|------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------|
| <b>Local</b>                       | <p>Information about graceful restart for the local end of an LDP session. Graceful restart and helper mode are independent.</p> <ul style="list-style-type: none"> <li>• <b>Restart</b>—Status of the graceful restart feature at the local end of the LDP session: <b>enabled</b> or <b>disabled</b>.</li> <li>• <b>Helper mode</b>—Status of the helper mode feature at the local end of the LDP session: <b>enabled</b> or <b>disabled</b>. When this feature is enabled, the local end of the LDP session can help the restarting router with its LDP restart procedures.</li> <li>• <b>Reconnect time</b>—Amount of time to wait from when a restart is initiated until the router can exchange LDP messages with its neighbors. The default is <b>60000 msec</b> and is not configurable. (<b>Reconnect timeout</b> refers to "FT Reconnect timeout" in draft-ietf-mpls-ldp-restart-06, <i>Internet Draft Graceful Restart Mechanism for LDP</i>.)</li> </ul> | <b>detail extensive</b> |
| <b>Remote</b>                      | <p>Information about graceful restart at the remote end of an LDP session. Graceful restart and helper mode are independent.</p> <ul style="list-style-type: none"> <li>• <b>Restart</b>—Status of the graceful restart feature at the remote end of the LDP session: <b>enabled</b> or <b>disabled</b>.</li> <li>• <b>Helper mode</b>—Status of the helper mode feature at the remote end of the LDP session: <b>enabled</b> or <b>disabled</b>. When this feature is enabled, the remote end of the LDP session can help the restarting router with its LDP restart procedures.</li> <li>• <b>Reconnect time</b>—Amount of time in milliseconds from when a restart is initiated until the remote router can exchange LDP messages with its neighbors.</li> </ul>                                                                                                                                                                                                  | <b>detail extensive</b> |
| <b>Local maximum recovery time</b> | Amount of time during which the restarting node attempts to recover its lost states with help from its neighbors (in milliseconds).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | <b>detail extensive</b> |
| <b>Next-hop addresses received</b> | Next-hop addresses received on the session.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | <b>detail extensive</b> |
| <b>Queue depth</b>                 | Number of messages that are queued for sending to the peers in the group.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | <b>extensive</b>        |



Table 96: show ldp session Output Fields (*continued*)

| Field Name   | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | Level of Output |
|--------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| Message type | <p>Type of message being sent:</p> <ul style="list-style-type: none"> <li>• <b>Initialization</b>—Session initialization negotiation messages sent by an LSR to an LDP peer when the transport connection is established.</li> <li>• <b>Keepalive</b>—Keepalive timer messages sent by an LSR to an LDP peer to keep the session active when there is no information or PDU exchanged between them.</li> <li>• <b>Notification</b>—Notification messages (such as state of the LDP session) or error information (such as bad PDU length) sent by an LSR to an LDP peer.</li> <li>• <b>Address</b>—Message sent by an LSR to an LDP peer to advertise interface addresses.</li> <li>• <b>Address withdraw</b>—Message sent by an LSR to an LDP peer to withdraw a previously advertised interface address.</li> <li>• <b>Label mapping</b>—Message sent by an LSR to an LDP peer to advertise label mapping for a forwarding equivalence class (FEC).</li> <li>• <b>Label request</b>—Message sent by an LSR to an LDP peer to request a label mapping for an FEC.</li> <li>• <b>Label withdraw</b>—Message sent by an LSR to an LDP peer to withdraw a previously advertised FEC-label mapping.</li> <li>• <b>Label release</b>—Message sent by an LSR to an LDP peer to notify the peer that a specific FEC-label mapping has been released.</li> <li>• <b>Label abort</b>—Message sent by an LSR to an LDP peer to abort a label request message.</li> <li>• <b>Total</b>—Messages sent and received during the lifetime of the session.</li> <li>• <b>Last 5 seconds</b>—Messages sent and received during the current session.</li> </ul> | extensive       |

## Sample Output

### show ldp session brief

```
user@host> show ldp session brief
      Address      State      Connection      Hold time
10.255.72.160      Operational Open           21
10.255.72.164      Operational Open           20
10.255.72.172      Operational Open           21
```

### show ldp session detail

```
user@host> show ldp session detail
Address: 192.168.0.3, State: Operational, Connection: Open, Hold time: 27
Session ID: 192.168.0.2:0--192.168.0.3:0
Next keepalive in 7 seconds
Passive, Maximum PDU: 4096, Hold time: 30, Neighbor count: 1
Neighbor types: discovered
Keepalive interval: 10, Connect retry interval: 1
Local address: 192.168.0.2, Remote address: 192.168.0.3
Up for 00:00:02
Capabilities advertised: none
Capabilities received: none
Protection: disabled
Local - Restart: enabled, Helper mode: enabled, Reconnect time: 60000
Remote - Restart: enabled, Helper mode: enabled, Reconnect time: 60000
```

```

Local maximum neighbor reconnect time: 120000 msec
Local maximum neighbor recovery time: 240000 msec
Local Label Advertisement mode: Downstream unsolicited
Remote Label Advertisement mode: Downstream unsolicited
Negotiated Label Advertisement mode: Downstream unsolicited
Nonstop routing state: Not in sync
Next-hop addresses received:
  10.0.0.5
  10.0.0.33

```

### show ldp session extensive

```

user@host> show ldp session extensive
Address: 192.168.0.3, State: Operational, Connection: Open, Hold time: 22
Session ID: 192.168.0.2:0--192.168.0.3:0
Next keepalive in 2 seconds
Passive, Maximum PDU: 4096, Hold time: 30, Neighbor count: 1
Neighbor types: discovered
Keepalive interval: 10, Connect retry interval: 1
Local address: 192.168.0.2, Remote address: 192.168.0.3
Up for 00:05:37
Capabilities advertised: none
Capabilities received: none
Protection: disabled
Local - Restart: enabled, Helper mode: enabled, Reconnect time: 60000
Remote - Restart: enabled, Helper mode: enabled, Reconnect time: 60000
Local maximum neighbor reconnect time: 120000 msec
Local maximum neighbor recovery time: 240000 msec
Local Label Advertisement mode: Downstream unsolicited
Remote Label Advertisement mode: Downstream unsolicited
Negotiated Label Advertisement mode: Downstream unsolicited
Nonstop routing state: Not in sync
Next-hop addresses received:
  10.0.0.5
  10.0.0.33
Queue depth: 0

```

| Message type     | Total |          | Last 5 seconds |          |
|------------------|-------|----------|----------------|----------|
|                  | Sent  | Received | Sent           | Received |
| Initialization   | 1     | 1        | 0              | 0        |
| Keepalive        | 33    | 33       | 1              | 1        |
| Notification     | 0     | 0        | 0              | 0        |
| Address          | 1     | 1        | 0              | 0        |
| Address withdraw | 0     | 0        | 0              | 0        |
| Label mapping    | 7     | 5        | 0              | 0        |
| Label request    | 0     | 0        | 0              | 0        |
| Label withdraw   | 3     | 1        | 0              | 0        |
| Label release    | 1     | 3        | 0              | 0        |
| Label abort      | 0     | 0        | 0              | 0        |

### show ldp session auto-targeted detail

```

user@host> show ldp session auto-generated detail
Address: 192.168.1.5, State: Operational, Connection: Open, Hold time: 25
Session ID: 192.168.1.1:0--192.168.1.5:0
Next keepalive in 5 seconds
Passive, Maximum PDU: 4096, Hold time: 30, Neighbor count: 1
Neighbor types: discovered, Auto-targeted
                        ^^^^^^^^^^^^^^^^^
Keepalive interval: 10, Connect retry interval: 1
Local address: 192.168.1.1, Remote address: 192.168.1.5
Up for 00:00:34

```

```
Capabilities advertised: none
Capabilities received: none
Protection: disabled
Local - Restart: disabled, Helper mode: enabled
Remote - Restart: disabled, Helper mode: enabled
Local maximum neighbor reconnect time: 120000 msec
Local maximum neighbor recovery time: 240000 msec
Local Label Advertisement mode: Downstream unsolicited
Remote Label Advertisement mode: Downstream unsolicited
Negotiated Label Advertisement mode: Downstream unsolicited
Nonstop routing state: Not in sync
Next-hop addresses received:
    192.168.1.2
    192.168.1.3
```

## show ldp statistics

|                                 |                                                                                                                                                                                                                                                                                                                                                      |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | show ldp statistics<br><instance <i>instance-name</i> ><br><logical-system (all   <i>logical-system-name</i> )>                                                                                                                                                                                                                                      |
| <b>Release Information</b>      | Command introduced before Junos OS Release 7.4.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                                                                                              |
| <b>Description</b>              | Display Label Distribution Protocol (LDP) statistics.                                                                                                                                                                                                                                                                                                |
| <b>Options</b>                  | <p><b>none</b>—Display LDP statistics for all routing instances.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Display information for the specified routing instance only.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                                                 |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li><a href="#">clear ldp statistics on page 1886</a></li> </ul>                                                                                                                                                                                                                                                  |
| <b>List of Sample Output</b>    | <a href="#">show ldp statistics on page 1929</a>                                                                                                                                                                                                                                                                                                     |
| <b>Output Fields</b>            | <a href="#">Table 97 on page 1926</a> lists the output fields for the <b>show ldp statistics</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                                                                                    |

Table 97: show ldp statistics Output Fields

| Field Name                    | Field Description                                                    |
|-------------------------------|----------------------------------------------------------------------|
| Total Sent, Received          | Total number of each message type sent and received.                 |
| Last 5 seconds Sent, Received | Number of each message type sent and received in the last 5 seconds. |

Table 97: show ldp statistics Output Fields (*continued*)

| Field Name          | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Message type</b> | <p>LDP message types:</p> <ul style="list-style-type: none"> <li>• <b>Hello</b>—Messages that enable LDP nodes to discover one another and to detect the failure of a neighbor or of the link to the neighbor.</li> <li>• <b>Initialization</b>—Messages that indicate an LDP session has started.</li> <li>• <b>Keepalive</b>—Messages that ensure that the keepalive timeout is not exceeded.</li> <li>• <b>Notification</b>—Advisory information and signal error information.</li> <li>• <b>Address</b>—Messages with address information.</li> <li>• <b>Address withdrawal</b>—Messages regarding address withdrawal.</li> <li>• <b>Label mapping</b>—Messages with label mapping information.</li> <li>• <b>Label request</b>—Request for a label mapping from a neighboring router.</li> <li>• <b>Label withdrawal</b>—Withdrawal message sent by the downstream LSR to recall a label that it previously mapped. If an LSR that has received a label mapping subsequently determines that it no longer needs that label, it can send a label release message that frees the label for use.</li> <li>• <b>Label release</b>—Message sent by the downstream LSR to recall a label that it previously mapped. If an LSR that has received a label mapping subsequently determines that it no longer needs that label, it can send a label release message that frees the label for use.</li> <li>• <b>Label abort</b>—Messages about label interruptions.</li> <li>• <b>All UDP</b>—All hello messages sent by LSRs to the well-known UDP port, 646.</li> <li>• <b>All TCP</b>—All LDP session messages.</li> </ul> |

Table 97: show ldp statistics Output Fields (*continued*)

| Field Name            | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|-----------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Event type</b>     | <p>LDP events and errors:</p> <ul style="list-style-type: none"> <li>• <b>Sessions opened</b>—Number of LDP sessions that have been opened.</li> <li>• <b>Sessions closed</b>—Number of LDP sessions that have been closed.</li> <li>• <b>Topology changes</b>—Number of changes to the known LDP topology.</li> <li>• <b>No interface</b>—Number of missing interface address messages. When a new LDP session is initialized and before sending label lapping or label request messages, the LSR advertises its interface addresses with one or more address messages.</li> <li>• <b>No session</b>—Number of missing session messages. Session messages are used to establish, maintain, and terminate sessions between LDP peers.</li> <li>• <b>No adjacency</b>—The exchange of hello adjacency messages results in the creation of an adjacency. The LDP identifier, together with the sender's LDP identifier in the PDU header, enables the receiver to match the initialization message with one of its hello adjacencies. If there is no matching hello adjacency, the LSR sends a session the initialization message is rejected.</li> <li>• <b>Unknown version</b>—The LDP protocol version is not supported by the receiver, or it is supported but is not the version negotiated for the session during session establishment.</li> <li>• <b>Malformed PDU</b>—An LDP PDU received on a TCP connection for an LDP session is malformed if the LDP identifier in the PDU header is unknown to the receiver, or if it is known but is not the LDP identifier associated by the receiver with the LDP peer for this LDP session.<br/> An LDP PDU is considered to be malformed if the LDP protocol version is not supported by the receiver, or it is supported but is not the version negotiated for the session during session establishment.<br/> An LDP PDU is considered malformed if the PDU length field is too small (less than 14) or too large (greater than maximum PDU length).</li> <li>• <b>Malformed message</b>—Malformed LDP messages that are part of the LDP discovery mechanism are handled by silently discarding them.<br/> An LDP message is malformed if the message type is unknown. If the message type is less than 0x8000 (high order bit = 0), it is an error signaled by the unknown message type status code.<br/> An LDP message is considered to be malformed if the message length is too large, meaning that the message extends beyond the end of the containing LDP PDU.<br/> The LDP message is considered to be malformed if the message length is too small, meaning that it is smaller than the smallest possible value component.<br/> The LDP message is considered to be malformed if the message is missing one or more mandatory parameters.</li> <li>• <b>Unknown message type</b>—If the message type is less than 0x8000 (high order bit = 0) or greater than or equal to 0x8000 (high order bit = 1) it is considered to be an unknown message.</li> <li>• <b>Inappropriate message</b>—The message is not of the type that the receiver expects to receive.</li> <li>• <b>Malformed TLV</b>—The TLV Length is too large or the receiver cannot decode the TLV value. This can indicate an issue in either the sending or receiving LSR.</li> <li>• <b>Bad TLV value</b>—The TLV Length is too large.</li> <li>• <b>Missing TLV</b>—The TLV is missing one or more mandatory parameters.</li> <li>• <b>PDU too large</b>—The PDF is greater than the maximum PDU length. Section "Initialization Message" in RFC 5036 describes how the maximum PDU length for a session is determined.</li> </ul> |
| <b>Total</b>          | Total number of each event or error.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Last 5 seconds</b> | Number of each event or error in the last 5 seconds.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |

## Sample Output


### show ldp statistics

```
user@host> show ldp statistics
```

| Message type     | Total |          | Last 5 seconds |          |
|------------------|-------|----------|----------------|----------|
|                  | Sent  | Received | Sent           | Received |
| Hello            | 265   | 263      | 2              | 2        |
| Initialization   | 2     | 2        | 0              | 0        |
| Keepalive        | 112   | 111      | 1              | 0        |
| Notification     | 0     | 0        | 0              | 0        |
| Address          | 2     | 2        | 0              | 0        |
| Address withdraw | 0     | 0        | 0              | 0        |
| Label mapping    | 7     | 6        | 0              | 0        |
| Label request    | 0     | 0        | 0              | 0        |
| Label withdraw   | 2     | 0        | 0              | 0        |
| Label release    | 0     | 2        | 0              | 0        |
| Label abort      | 0     | 0        | 0              | 0        |
| All UDP          | 265   | 263      | 2              | 2        |
| All TCP          | 123   | 121      | 1              | 0        |

| Event type            | Total | Last 5 seconds |          |
|-----------------------|-------|----------------|----------|
|                       |       | Sent           | Received |
| Sessions opened       | 2     |                | 0        |
| Sessions closed       | 0     |                | 0        |
| Topology changes      | 11    |                | 0        |
| No interface          | 0     |                | 0        |
| No session            | 0     |                | 0        |
| No adjacency          | 0     |                | 0        |
| Unknown version       | 0     |                | 0        |
| Malformed PDU         | 0     |                | 0        |
| Malformed message     | 0     |                | 0        |
| Unknown message type  | 0     |                | 0        |
| Inappropriate message | 0     |                | 0        |
| Malformed TLV         | 0     |                | 0        |
| Bad TLV value         | 0     |                | 0        |
| Missing TLV           | 0     |                | 0        |
| PDU too large         | 0     |                | 0        |

## show ldp traffic-statistics

|                                                                                                                                                                                                                                                             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                                                                                                                                                                                                                                               | <pre>show ldp traffic-statistics &lt;instance <i>instance-name</i>&gt; &lt;logical-system (all   <i>logical-system-name</i>)&gt; &lt;p2mp&gt;</pre>                                                                                                                                                                                                                                                                                                                           |
| <b>Release Information</b>                                                                                                                                                                                                                                  | <p>Command introduced before Junos OS Release 7.4.</p> <p><b>p2mp</b> option added in Junos OS Release 11.2.</p> <p>Command introduced in Junos OS Release 13.2X51-D15 for the QFX Series.</p>                                                                                                                                                                                                                                                                                |
| <b>Description</b>                                                                                                                                                                                                                                          | Display Label Distribution Protocol (LDP) traffic statistics.                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <div>  <p><b>NOTE:</b> If nonstop active routing features is configured, <b>show ldp traffic-statistics</b> command is not supported on backup Routing Engines.</p> </div> |                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Options</b>                                                                                                                                                                                                                                              | <p><b>none</b>—Display LDP traffic statistics for all routing instances.</p> <p><b>instance <i>instance-name</i></b>—(Optional) Display LDP traffic statistics for the specified routing instance only.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> <p><b>p2mp</b>—(Optional) Display only the data traffic statistics for a point-to-multipoint LSP.</p> |
| <b>Additional Information</b>                                                                                                                                                                                                                               | To collect output from this command on a periodic basis, configure the <a href="#">traffic-statistics</a> statement for the LDP protocol. For more information, see the <i>Junos MPLS Applications Configuration Guide</i> .                                                                                                                                                                                                                                                  |
| <b>Required Privilege Level</b>                                                                                                                                                                                                                             | view                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Related Documentation</b>                                                                                                                                                                                                                                | <ul style="list-style-type: none"> <li>• <a href="#">clear ldp statistics on page 1886</a></li> <li>• <a href="#">Example: Configuring Multicast-Only Fast Reroute in a Multipoint LDP Domain on page 654</a></li> <li>• <a href="#">Example: Configuring Multipoint LDP In-Band Signaling for Point-to-Multipoint LSPs on page 701</a></li> </ul>                                                                                                                            |
| <b>List of Sample Output</b>                                                                                                                                                                                                                                | <p><a href="#">show ldp traffic-statistics on page 1931</a></p> <p><a href="#">show ldp traffic-statistics p2mp on page 1932</a></p> <p><a href="#">show ldp traffic-statistics p2mp (Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs) on page 1932</a></p> <p><a href="#">show ldp traffic-statistics p2mp (Multipoint LDP with Multicast-Only Fast Reroute) on page 1933</a></p>                                                                               |



**Output Fields** Table 98 on page 1931 lists the output fields for the **show ldp traffic-statistics** command. Output fields are listed in the approximate order in which they appear.

**Table 98: show ldp traffic-statistics Output Fields**

| Field Name          | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Message type</b> | LDP message types.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>FEC</b>          | Forwarding equivalence class (FEC) for which LDP traffic statistics are collected.<br><br>For P2MP LSPs, FEC appears as a combination of root address and the LSP ID ( <b>root_addr:lsp_id</b> ).<br><br>For M-LDP P2MP LSPs, FEC appears as a combination of root address multicast source address, and multicast group address ( <b>root_addr:lsp_id/grp,src</b> ).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Type</b>         | Type of traffic originating from a router, either <b>Ingress</b> (originating from this router) or <b>Transit</b> (forwarded through this router).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Packets</b>      | Number of packets passed by the FEC since its LSP came up.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Bytes</b>        | Number of bytes of data passed by the FEC since its LSP came up.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Shared</b>       | Whether a label is shared by prefixes: <b>Yes</b> or <b>No</b> . A <b>Yes</b> value indicates that several prefixes are bound to the same label (for example, when several prefixes are advertised with an egress policy). The LDP traffic statistics for this case apply to all the prefixes and should be treated as such.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Nexthop</b>      | The next hop address for P2MP LSPs. (This is the downstream LDP Session ID.)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Label</b>        | For multipoint LDP with multicast-only fast reroute (MoFRR), the multipoint LDP node selects two separate upstream peers and sends two separate labels, one to each upstream peer. The same algorithm described in RFC 6388 is used to select the primary upstream path. The backup upstream path selection again uses the same algorithm but excludes the primary upstream LSR as a candidate. Two streams of MPLS traffic are sent to the egress node from the two different upstream peers. The MPLS traffic from only one of the upstream neighbors is selected as the primary path to accept the traffic, and the other becomes the backup path. The traffic on the backup path is dropped. When the primary upstream path fails, the traffic from the backup path is then accepted. The multipoint LDP node selects the two upstream paths based on the interior gateway protocol (IGP) root node next hop.<br><br>Multiple MPLS labels are used to control MoFRR stream selection. Each label represents a separate route, but each references the same interface list check. Only the primary label is forwarded while all others are dropped. Multiple interfaces can receive packets using the same label. |
| <b>Backup route</b> | For multipoint LDP with MoFRR, the route that is used if the primary route becomes unavailable.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |

## Sample Output

### show ldp traffic-statistics

```
user@host> show ldp traffic-statistics
```

| FEC          | Type    | Packets | Bytes | Shared |
|--------------|---------|---------|-------|--------|
| 10.35.3.0/30 | Transit | 0       | 0     | Yes    |

|                   |         |    |     |     |
|-------------------|---------|----|-----|-----|
|                   | Ingress | 0  | 0   | No  |
| 10.35.10.1/32     | Transit | 0  | 0   | Yes |
|                   | Ingress | 0  | 0   | No  |
| 10.255.245.214/32 | Transit | 0  | 0   | No  |
|                   | Ingress | 11 | 752 | No  |
| 192.168.37.36/30  | Transit | 0  | 0   | Yes |
|                   | Ingress | 0  | 0   | No  |

| FEC(root_addr:lsp_id)  | Nexthop      | Packets | Bytes    | Shared |
|------------------------|--------------|---------|----------|--------|
| 10.255.72.160:16777217 | 192.168.8.81 | 152056  | 14597376 | No     |
|                        | 192.168.8.1  | 152056  | 14597376 | No     |
|                        | 192.168.8.65 | 152056  | 14597376 | No     |
| NET FEC Statistics:    |              |         |          |        |
| FEC                    | Type         | Packets | Bytes    | Shared |
| 10.255.107.230/32      | Transit      | 30858   | 2022345  | No     |
|                        | Ingress      | 20      | 5120     | No     |

### show ldp traffic-statistics p2mp

```
user@host> show ldp traffic-statistics p2mp
```

| FEC(root_addr:lsp_id)  | Nexthop      | Packets | Bytes    | Shared |
|------------------------|--------------|---------|----------|--------|
| 10.255.72.160:16777217 | 192.168.8.81 | 152056  | 14597376 | No     |
|                        | 192.168.8.1  | 152056  | 14597376 | No     |
|                        | 192.168.8.65 | 152056  | 14597376 | No     |

### show ldp traffic-statistics p2mp (Multipoint LDP Inband Signaling for Point-to-Multipoint LSPs)

```
user@host> show ldp traffic-statistics p2mp
```

P2MP FEC Statistics:

| FEC(root_addr:lsp_id/grp,src)    | Nexthop     | Packets | Bytes     |
|----------------------------------|-------------|---------|-----------|
| Shared                           |             |         |           |
| 11.99.0.73:239.10.0.1,11.98.0.10 | 11.99.0.117 | 243408  | 121217184 |
| No                               |             |         |           |
|                                  | 11.99.0.13  | 236286  | 117670428 |
| No                               |             |         |           |
| 11.99.0.73:239.10.0.2,11.98.0.10 | 11.99.0.117 | 248800  | 123902400 |
| No                               |             |         |           |
|                                  | 11.99.0.13  | 240759  | 119897982 |
| No                               |             |         |           |
| 11.99.0.73:239.10.0.1,11.98.0.20 | 11.99.0.117 | 250286  | 124642428 |
| No                               |             |         |           |
|                                  | 11.99.0.13  | 243741  | 121383018 |
| No                               |             |         |           |
| 11.99.0.73:239.10.0.2,11.98.0.20 | 11.99.0.117 | 252970  | 125979060 |
| No                               |             |         |           |
|                                  | 11.99.0.13  | 245218  | 122118564 |
| No                               |             |         |           |

**show ldp traffic-statistics p2mp (Multipoint LDP with Multicast-Only Fast Reroute)**

```
user@host> show ldp traffic-statistics p2mp
```

P2MP FEC Statistics:

| FEC(root_addr:lsp_id/grp,src)                                 | Nexthop | Packets | Bytes |
|---------------------------------------------------------------|---------|---------|-------|
| Shared                                                        |         |         |       |
| 1.1.1.1:232.1.1.1,192.168.219.11, Label: 301568               | 1.3.8.2 | 0       | 0     |
| No                                                            | 1.3.4.2 | 0       | 0     |
| 1.1.1.1:232.1.1.1,192.168.219.11, Label: 301584, Backup route | 1.3.4.2 | 0       | 0     |
| No                                                            | 1.3.8.2 | 0       | 0     |
| 1.1.1.1:232.1.1.2,192.168.219.11, Label: 301600               | 1.3.8.2 | 0       | 0     |
| No                                                            | 1.3.4.2 | 0       | 0     |
| 1.1.1.1:232.1.1.2,192.168.219.11, Label: 301616, Backup route | 1.3.4.2 | 0       | 0     |
| No                                                            | 1.3.8.2 | 0       | 0     |

## show security keychain

|                                 |                                                                                                                                                                                                                                                                                           |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | show security keychain<br><brief   detail>                                                                                                                                                                                                                                                |
| <b>Release Information</b>      | Command introduced in Junos OS Release 11.2.<br>Statement introduced in Junos OS Release 12.3X50 for the QFX Series.                                                                                                                                                                      |
| <b>Description</b>              | Display information about authentication keychains configured for the Border Gateway Protocol (BGP), the Label Distribution Protocol (LDP) routing protocols, the Bidirectional Forwarding Detection (BFD) protocol, and the Intermediate System-to-Intermediate System (IS-IS) protocol. |
| <b>Options</b>                  | <b>none</b> —Display information about authentication keychains.<br><br><b>brief   detail</b> —(Optional) Display the specified level of output.                                                                                                                                          |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                      |
| <b>List of Sample Output</b>    | <a href="#">show security keychain brief on page 1935</a><br><a href="#">show security keychain detail on page 1936</a>                                                                                                                                                                   |
| <b>Output Fields</b>            | <a href="#">Table 99 on page 1934</a> describes the output fields for the <b>show security keychain</b> command. Output fields are listed in the approximate order in which they appear.                                                                                                  |

**Table 99: show security keychain Output Fields**

| Field Name               | Field Description                                                                        | Level of Output |
|--------------------------|------------------------------------------------------------------------------------------|-----------------|
| <b>keychain</b>          | The name of the keychain in operation.                                                   | All levels      |
| <b>Active-ID Send</b>    | Number of routing protocols packets sent with the active key.                            | All levels      |
| <b>Active-ID Receive</b> | Number of routing protocols packets received with the active key.                        | All levels      |
| <b>Next-ID Send</b>      | Number of routing protocols packets sent with the next key.                              | All levels      |
| <b>Next-ID Receive</b>   | Number of routing protocols packets received with the next key.                          | All levels      |
| <b>Transition</b>        | Amount of time until the current key will be replaced with the next key in the keychain. | All levels      |
| <b>Tolerance</b>         | Configured clock-skew tolerance, in seconds, for accepting keys for a key chain.         | All levels      |
| <b>Id</b>                | Identification number configured for the current key.                                    | <b>detail</b>   |
| <b>Algorithm</b>         | Authentication algorithm configured for the current key.                                 | <b>detail</b>   |

Table 99: show security keychain Output Fields (*continued*)

| Field Name        | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | Level of Output |
|-------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| <b>State</b>      | <p>State of the current key.</p> <p>The value can be:</p> <ul style="list-style-type: none"> <li>• <b>receive</b></li> <li>• <b>send</b></li> <li>• <b>send-receive</b></li> </ul> <p>For the active key, the <b>State</b> can be <b>send-receive</b>, <b>send</b>, or <b>receive</b>. For keys that have a future start time, the <b>State</b> is <b>inactive</b>. Compare the <b>State</b> field to the <b>Mode</b> field.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | <b>detail</b>   |
| <b>Option</b>     | <p>For IS-IS only, the option determines how Junos OS encodes the message authentication code in routing protocol packets.</p> <p>The values can be:</p> <ul style="list-style-type: none"> <li>• <b>basic</b>—Based on RFC 5304.</li> <li>• <b>isis-enhanced</b>—Based on RFC 5310.</li> </ul> <p>The default value is <b>basic</b>. When you configure the <b>isis-enhanced</b> option, Junos OS sends RFC 5310-encoded routing protocol packets and accepts both RFC 5304-encoded and RFC 5310-encoded routing protocol packets that are received from other devices.</p> <p>When you configure <b>basic</b> (or do not include the <b>options</b> statement in the key configuration) Junos OS sends and receives RFC 5304-encoded routing protocols packets, and drops 5310-encoded routing protocol packets that are received from other devices.</p> <p>Because this setting is for IS-IS only, the TCP and the BFD protocol ignore the encoding option configured in the key.</p> | <b>detail</b>   |
| <b>Start-time</b> | Time that the current key became active.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | <b>detail</b>   |
| <b>Mode</b>       | <p>Mode of each key (Informational only.)</p> <p>The value can be</p> <ul style="list-style-type: none"> <li>• <b>receive</b></li> <li>• <b>send</b></li> <li>• <b>send-receive</b></li> </ul> <p>The mode of the key is based on the configuration. Suppose you configure two keys, one with a start-time of today and the other with a start-time of next week. For both keys, the <b>Mode</b> can be <b>send-receive</b>, <b>send</b>, or <b>receive</b>, regardless of the configured start-time. Compare the <b>Mode</b> field to the <b>State</b> field.</p>                                                                                                                                                                                                                                                                                                                                                                                                                        | <b>detail</b>   |

## Sample Output

### show security keychain brief

```
user@host> show security keychain brief
```

| keychain | Active-ID |         | Next-ID |         | Transition | Tolerance |
|----------|-----------|---------|---------|---------|------------|-----------|
|          | Send      | Receive | Send    | Receive |            |           |
| hakr     | 3         | 3       | 1       | 1       | 1d 23:58   | 3600      |

#### show security keychain detail

```
user@host> show security keychain detail
keychain              Active-ID      Next-ID      Transition  Tolerance
                      Send  Receive    Send  Receive
hakr                   3      3          1      1          1d 23:58    3600
  Id 3, Algorithm hmac-md5, State send-receive, Option basic
  Start-time Wed Aug 11 16:28:00 2010, Mode send-receive
  Id 1, Algorithm hmac-md5, State inactive, Option basic
  Start-time Fri Aug 20 11:30:57 2010, Mode send-receive
```

## traceroute mpls ldp

**Syntax** `traceroute mpls <ldp> fec`  
`<destination>`  
`<detail>`  
`<exp>`  
`<fanout>`  
`<logical-system>`  
`<no-resolve>`  
`<paths>`  
`<retries>`  
`<routing-instance>`  
`<source>`  
`<ttl>`  
`<update>`  
`<wait>`

**Release Information** Command introduced in Junos OS Release 8.4.  
Statement introduced in Junos OS Release 12.3X50 for the QFX Series.

**Description** Trace route to a remote host for an MPLS label-switched path signaled by the LDP. Use **traceroute mpls ldp** as a debugging tool to locate MPLS label-switched path forwarding issues in a network. (Currently supported for IPv4 packets only.)

**Options** *fec*—Specify the IP address and optional prefix of the forwarding equivalence class (FEC).  
*destination*—(Optional) Specify the destination address to use when sending probes.  
*detail*—(Optional) Display detailed output.  
*exp*—(Optional) Specify the class-of-service to use when sending probes. The range of values is 0 through 7. The default value is 7.  
*fanout*—(Optional) Specify the maximum number of nexthops to search per node. The range of values is 1 through 16. The default value is 16.  
*logical-system*—(Optional) Specify the name of the logical system for the traceroute attempt.  
*no-resolve*—(Optional) Specify not to resolve the hostname that corresponds to the IP address.  
*paths*—(Optional) Specify the number of paths to search. The range of values is 1 through 255. The default value is 16.  
*retries*—(Optional) Specify the number of times to resend probe. values. The range of values is 1 through 9. The default value is 3.  
*routing-instance routing-instance-name*—(Optional) Specify the name of the routing instance for the traceroute attempt.  
*source source-address*—(Optional) Specify the source address of the outgoing traceroute packets.

**ttl value**—(Optional) Specify the maximum time-to-live value to include in the traceroute request, in seconds. The range of values is **1** through **125** and the default value is **64**.

**update**—(Optional) Update database contents with traceroute results.

**wait seconds**—(Optional) Specify the number of seconds to wait before resending a probe. The range of values is **5** through **15** and the default value is **10** seconds.

**Required Privilege Level**

network

**List of Sample Output**

[traceroute mpls ldp on page 1939](#)  
[traceroute mpls ldp detail on page 1939](#)

**Output Fields**

[Table 80 on page 1834](#) describes the output fields for the **traceroute mpls ldp fec** command and the **traceroute mpls ldp fec detail** commands. Output fields are listed in the approximate order in which they appear.

**Table 100: traceroute mpls ldp Output Fields**

| Field Name    | Field Description                                                                                                        | Level of Output |
|---------------|--------------------------------------------------------------------------------------------------------------------------|-----------------|
| Probe options | Probe options specified in the <b>traceroute mpls ldp fec</b> command.                                                   | all levels      |
| ttl           | Time to live value of the labeled packet.                                                                                | none specified  |
| Label         | Outgoing label used for forwarding the packet along the label-switched paths.                                            | none specified  |
| Protocol      | Signaling protocol used. For this command, it is LDP.                                                                    | none specified  |
| Address       | Address of the next hop.                                                                                                 | none specified  |
| Previous Hop  | Address of the previous hop. Previous hop address of the first hop is <b>null</b> .                                      | none specified  |
| Probe status  | Forwarding status from the first hop to the last-hop label-switching router (egress point in the label-switched paths).  | none specified  |
| Hop           | Address of the hops in the label-switched path from the first hop to the last hop. Depth indicates the level of the hop. | <b>detail</b>   |
| Parent        | Address of the previous hop. Parent value for the first hop is <b>null</b> .                                             | <b>detail</b>   |
| Return Code   | Return code for reporting the result of processing the echo request by the receiver.                                     | <b>detail</b>   |
| Response time | Time for the echo request to reach the receiver.                                                                         | <b>detail</b>   |



Table 100: traceroute mpls ldp Output Fields (*continued*)

| Field Name     | Field Description                                                                                                | Level of Output |
|----------------|------------------------------------------------------------------------------------------------------------------|-----------------|
| Multipath type | Labels or addresses used by the specified multipath type. If multipaths are not used, the value is <b>none</b> . | <b>detail</b>   |
| Label Stack    | Label stack used to forward the packet.                                                                          | <b>detail</b>   |

## Sample Output

### traceroute mpls ldp

```
user@router> traceroute mpls ldp 4.4.4.4
```

```
Probe options: ttl 64, retries 3, wait 10, paths 16, exp 7, fanout 16
ttl  Label Protocol Address Previous Hop Probe Status
  1   100016 LDP      24.24.24.1 (null) Success
  2   100000 LDP      20.20.20.2 24.24.24.1 Success
  3      3 LDP      22.22.22.4 20.20.20.2 Egress
```

```
Path 1 via fe-0/3/3.101 destination 127.0.0.64
```

### traceroute mpls ldp detail

```
user@router> traceroute mpls ldp 4.4.4.4 detail
```

```
Probe Options: ttl 64, retries 3, wait 10, paths 3, exp 7
Hop 24.24.24.1 Depth 1
  Parent (null)
  Return code: Label switched at stack-depth 1
  Response time 165.93 msec
  Multipath type: IP bitmask
  Address Range 1: 127.0.0.0 ~ 127.0.3.255
  Label Stack:
    Label 1 Value 100032 Protocol LDP

Hop 20.20.20.2 Depth 2
  Parent 24.24.24.1
  Return code: Upstream interface index unknown label-switched at stack-depth
1
  Response time 19.05 msec
  Multipath type: IP bitmask
  Address Range 1: 127.0.0.0 ~ 127.0.3.255
  Label Stack:
    Label 1 Value 100000 Protocol LDP

Hop 22.22.22.4 Depth 3
  Parent 20.20.20.2
  Return code: Egress-ok at stack-depth 1
  Response time 0.79 msec
  Multipath type: None
  Label Stack:
    Label 1 Value 3 Protocol LDP
```



## CHAPTER 33

# CCC and TCC Operational Commands

- `show connections`
- `show route ccc`
- `show route forwarding-table`

## show connections

---

**List of Syntax**   [Syntax on page 1942](#)  
[Syntax \(EX Series Switches\) on page 1942](#)

**Syntax**   `show connections`  
          `<brief | extensive>`  
          `<all | interface-switch | lsp-switch | p2mp-receive-switch | p2mp-transmit-switch |`  
          `remote-interface-switch>`  
          `<down | up | up-down>`  
          `<history>`  
          `<labels>`  
          `<logical-system (all | logical-system-name)>`  
          `<name>`  
          `<status>`

**Syntax (EX Series Switches)**   `show connections`  
                                  `<brief | extensive>`  
                                  `<all | interface-switch | lsp-switch | p2mp-receive-switch | p2mp-transmit-switch |`  
                                  `remote-interface-switch>`  
                                  `<down | up | up-down>`  
                                  `<history>`  
                                  `<labels>`  
                                  `<name>`  
                                  `<status>`

**Release Information**   Command introduced before Junos OS Release 7.4.  
                              Command introduced in Junos OS Release 9.5 for EX Series switches.

**Description**   Display information about the configured circuit cross-connect (CCC) connections.

**Options**   **none**—Display the standard level of output for all configured CCC connections.

**all**—(Optional) Display all connections.

**brief | extensive**—(Optional) Display the specified level of output. Use history to display information about connection history. Use labels to display labels used for transmit and receive LSPs. Use status to display information about the connection and interface status.

**interface-switch**—(Optional) Display interface switch connections only.

**lsp-switch**—(Optional) Display LSP switch connections only.

**p2mp-receive-switch**—(Optional) Display point-to-multipoint LSP to local interfaces switch connections only.

**p2mp-transmit-switch**—(Optional) Display local interface to point-to-multipoint LSP switch connections only.

**remote-interface-switch**—(Optional) Display remote interface switch connections only.

**down | up | up-down**—(Optional) Display nonoperational, operational, or both kinds of connections.

**history**—(Optional) Display information about connection history.

**labels**—(Optional) Display labels used for transmit and receive.

**logical-system (all | *logical-system-name*)**—(Optional) Perform this operation on all logical systems or on a particular logical system.

**name**—(Optional) Display information about the specified connection only.

**status**—(Optional) Display information about the connection and interface status.

**Required Privilege Level** view

**Output Fields** [Table 53 on page 1743](#) describes the output fields for the **show connections** command. Output fields are listed in the approximate order in which they appear.

**Table 101: show connections Output Fields**

| Field Name                                         | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                         |
|----------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| CCC and TCC connections [Link Monitoring On   Off] | Whether link monitoring is enabled: <b>On</b> or <b>Off</b> .                                                                                                                                                                                                                                                                                                                                                                             |
| Legend for Status (St)                             | Connection or circuit status. See the output's legend for an explanation of the status field values.                                                                                                                                                                                                                                                                                                                                      |
| Legend for connection types                        | Type of connection: <ul style="list-style-type: none"> <li><b>if-sw</b>—Layer 2 switching cross-connect.</li> <li><b>rmt-if</b>—Remote interface switch. While graceful restart is in progress, <b>rmt-if</b> will display a state (<b>St</b>) of <b>Restart</b>.</li> <li><b>lsp-sw</b>—LSP stitching cross-connect. While graceful restart is in progress, <b>lsp-sw</b> will display a state (<b>St</b>) of <b>Restart</b>.</li> </ul> |
| Legend for circuit types                           | Type of circuits: <ul style="list-style-type: none"> <li><b>intf</b>—Interface circuit.</li> <li><b>tlsp</b>—Transmit LSP circuit.</li> <li><b>rlsp</b>—Receive LSP circuit.</li> </ul>                                                                                                                                                                                                                                                   |
| Connection/Circuit                                 | Name of the configured CCC connection.                                                                                                                                                                                                                                                                                                                                                                                                    |
| Type                                               | Type of connection.                                                                                                                                                                                                                                                                                                                                                                                                                       |
| St                                                 | State of the connection.                                                                                                                                                                                                                                                                                                                                                                                                                  |
| Time last up                                       | Time that the connection or circuit last transitioned to the <b>Up</b> (operational) state.                                                                                                                                                                                                                                                                                                                                               |

Table 101: show connections Output Fields (*continued*)

| Field Name | Field Description                                                                              |
|------------|------------------------------------------------------------------------------------------------|
| # Up trans | Number of times that the connection or circuit has transitioned to the Up (operational) state. |

## Sample Output

### show connections

```

user@switch> show connections
CCC and TCC connections [Link Monitoring On]
  Legend for status (St)           Legend for connection types
  UN -- uninitialized             if-sw: interface switching
  NP -- not present               rmt-if: remote interface switching
  WE -- wrong encapsulation       lsp-sw: LSP switching
  DS -- disabled
  Dn -- down
  -> -- only outbound conn is up  intf -- interface
  <- -- only inbound conn is up   tlsp -- transmit LSP
  Up -- operational              rlsp -- receive LSP
  RmtDn -- remote CCC down
  Restart -- restarting

CCC Graceful restart : Restarting

Connection/Circuit      Type   St      Time last up    # Up trans
IFSW-ed                if-sw  Up       Aug  5 15:39:15      1
  so-1/0/2.0            intf   Up
  t1-0/1/2.0            intf   Up
SW-db                  rmt-if Restart      0
  so-1/0/3.0            intf   Up
  pro4-ca                tlsp   Dn
  pro4-ac                rlsp   NP

```

## show route ccc

|                                 |                                                                                                                                                                                                                                                                                                                                           |
|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | show route ccc ccc<br><brief   detail   extensive   terse><br><logical-system (all   <i>logical-system-name</i> )>                                                                                                                                                                                                                        |
| <b>Release Information</b>      | Command introduced before Junos OS Release 7.4.                                                                                                                                                                                                                                                                                           |
| <b>Description</b>              | Display circuit cross-connect (CCC) entries in the Multiprotocol Link Switching (MPLS) routing table.                                                                                                                                                                                                                                     |
| <b>Options</b>                  | <p><b>ccc</b>—Name of an entry with a circuit cross-connect interface.</p> <p><b>brief   detail   extensive   terse</b>—(Optional) Display the specified level of output.</p> <p><b>logical-system (all   <i>logical-system-name</i>)</b>—(Optional) Perform this operation on all logical systems or on a particular logical system.</p> |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                                                                                                                                      |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">show connections on page 1742</a></li> </ul>                                                                                                                                                                                                                                         |
| <b>List of Sample Output</b>    | <a href="#">show route ccc extensive on page 1945</a>                                                                                                                                                                                                                                                                                     |
| <b>Output Fields</b>            | For information about output fields, see the output field tables for the <i>show route</i> command, the <i>show route detail</i> command, the <i>show route extensive</i> command, or the <i>show route terse</i> command.                                                                                                                |

## Sample Output

### show route ccc extensive

```

user@host> show route ccc fe-0/1/0.600 extensive
mpls.0: 19 destinations, 19 routes (19 active, 0 holddown, 0 hidden)
fe-0/1/2.600 (1 entry, 1 announced)
TSI:
KRT in-kernel fe-0/1/2.600.0      /16 -> {0.0.0.0}
  *CCC      Preference: 7
            Next-hop reference count: 2
            Next hop: via so-0/0/3.0 weight 0x1, selected
            Label operation: Push 101424
            State: <Active Int>
            Local AS: 100
            Age: 28:13   Metric: 3
            Task: MPLS
            Announcement bits (1): 0-KRT
            AS path: I

```

## show route forwarding-table

|                                                      |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>List of Syntax</b>                                | <a href="#">Syntax on page 1946</a><br><a href="#">Syntax (MX Series Routers) on page 1946</a><br><a href="#">Syntax (TX Matrix and TX Matrix Plus Routers) on page 1946</a>                                                                                                                                                                                                                                                                                                                                                            |
| <b>Syntax</b>                                        | <pre>show route forwarding-table &lt;detail   extensive   summary&gt; &lt;all&gt; &lt;ccc interface-name&gt; &lt;destination destination-prefix&gt; &lt;family family   matching matching&gt; &lt;interface-name interface-name&gt; &lt;label name&gt; &lt;matching matching&gt; &lt;multicast&gt; &lt;table (default   logical-system-name/routing-instance-name   routing-instance-name)&gt; &lt;vlan (all   vlan-name)&gt; &lt;vpn vpn&gt;</pre>                                                                                     |
| <b>Syntax (MX Series Routers)</b>                    | <pre>show route forwarding-table &lt;detail   extensive   summary&gt; &lt;all&gt; &lt;bridge-domain (all   domain-name)&gt; &lt;ccc interface-name&gt; &lt;destination destination-prefix&gt; &lt;family family   matching matching&gt; &lt;interface-name interface-name&gt; &lt;label name&gt; &lt;learning-vlan-id learning-vlan-id&gt; &lt;matching matching&gt; &lt;multicast&gt; &lt;table (default   logical-system-name/routing-instance-name   routing-instance-name)&gt; &lt;vlan (all   vlan-name)&gt; &lt;vpn vpn&gt;</pre> |
| <b>Syntax (TX Matrix and TX Matrix Plus Routers)</b> | <pre>show route forwarding-table &lt;detail   extensive   summary&gt; &lt;all&gt; &lt;ccc interface-name&gt; &lt;destination destination-prefix&gt; &lt;family family   matching matching&gt; &lt;interface-name interface-name&gt; &lt;matching matching&gt; &lt;label name&gt; &lt;lcc number&gt; &lt;multicast&gt; &lt;table routing-instance-name&gt; &lt;vpn vpn&gt;</pre>                                                                                                                                                         |
| <b>Release Information</b>                           | <p>Command introduced before Junos OS Release 7.4.</p> <p>Option <b>bridge-domain</b> introduced in Junos OS Release 7.5</p> <p>Option <b>learning-vlan-id</b> introduced in Junos OS Release 8.4</p>                                                                                                                                                                                                                                                                                                                                   |



Options **all** and **vlan** introduced in Junos OS Release 9.6.

Command introduced in Junos OS Release 11.3 for the QFX Series.

Command introduced in Junos OS Release 14.1X53-D20 for the OCX Series.

**Description** Display the Routing Engine's forwarding table, including the network-layer prefixes and their next hops. This command is used to help verify that the routing protocol process has relayed the correction information to the forwarding table. The Routing Engine constructs and maintains one or more routing tables. From the routing tables, the Routing Engine derives a table of active routes, called the forwarding table.



**NOTE:** The Routing Engine copies the forwarding table to the Packet Forwarding Engine, the part of the router that is responsible for forwarding packets. To display the entries in the Packet Forwarding Engine's forwarding table, use the **show pfe route** command.

**Options** **none**—Display the routes in the forwarding tables. By default, the **show route forwarding-table** command does not display information about private, or internal, forwarding tables.

**detail | extensive | summary**—(Optional) Display the specified level of output.

**all**—(Optional) Display routing table entries for all forwarding tables, including private, or internal, tables.

**bridge-domain (all | bridge-domain-name)**—(MX Series routers only) (Optional) Display route entries for all bridge domains or the specified bridge domain.

**ccc interface-name**—(Optional) Display route entries for the specified circuit cross-connect interface.

**destination destination-prefix**—(Optional) Destination prefix.

**family family**—(Optional) Display routing table entries for the specified family: **fibre-channel**, **fmembers**, **inet**, **inet6**, **iso**, **mpls**, **tnp**, **unix**, **vpls**, or **vlan-classification**.

**interface-name interface-name**—(Optional) Display routing table entries for the specified interface.

**label name**—(Optional) Display route entries for the specified label.

**lcc number**—(TX Matrix and TX matrix Plus routers only) (Optional) On a routing matrix composed of a TX Matrix router and T640 routers, display information for the specified T640 router (or line-card chassis) connected to the TX Matrix router. On a routing matrix composed of the TX Matrix Plus router and T1600 or T4000 routers, display information for the specified router (line-card chassis) connected to the TX Matrix Plus router.

Replace *number* with the following values depending on the LCC configuration:

- 0 through 3, when T640 routers are connected to a TX Matrix router in a routing matrix.
- 0 through 3, when T1600 routers are connected to a TX Matrix Plus router in a routing matrix.
- 0 through 7, when T1600 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.
- 0, 2, 4, or 6, when T4000 routers are connected to a TX Matrix Plus router with 3D SIBs in a routing matrix.

**learning-vlan-id** *learning-vlan-id*—(MX Series routers only) (Optional) Display learned information for all VLANs or for the specified VLAN.

**matching** *matching*—(Optional) Display routing table entries matching the specified prefix or prefix length.

**multicast**—(Optional) Display routing table entries for multicast routes.

**table** (**default** | *logical-system-name/routing-instance-name* | *routing-instance-name*)—(Optional) Display route entries for all the routing tables in the main routing instance or for the specified routing instance. If your device supports logical systems, you can also display route entries for the specified logical system and routing instance. To view the routing instances on your device, use the **show route instance** command.

**vlan** (**all** | *vlan-name*)—(Optional) Display information for all VLANs or for the specified VLAN.

**vpn** *vpn*—(Optional) Display routing table entries for a specified VPN.

**Required Privilege  
Level**

view

**List of Sample Output**

[show route forwarding-table on page 1951](#)  
[show route forwarding-table detail on page 1952](#)  
[show route forwarding-table destination extensive \(Weights and Balances\) on page 1953](#)  
[show route forwarding-table extensive on page 1953](#)  
[show route forwarding-table extensive \(RPF\) on page 1955](#)  
[show route forwarding-table family mpls on page 1955](#)  
[show route forwarding-table family mpls ccc ge-0/0/1.1004 on page 1955](#)  
[show route forwarding-table family vpls on page 1956](#)  
[show route forwarding-table vpls \(Broadcast, unknown unicast, and multicast \(BUM\) hashing is enabled\) on page 1956](#)  
[show route forwarding-table vpls \(Broadcast, unknown unicast, and multicast \(BUM\) hashing is enabled with MAC Statistics\) on page 1956](#)  
[show route forwarding-table family vpls extensive on page 1956](#)  
[show route forwarding-table table default on page 1958](#)

[show route forwarding-table table](#)  
[logical-system-name/routing-instance-name on page 1959](#)  
[show route forwarding-table vpn on page 1959](#)

**Output Fields** [Table 102 on page 1949](#) lists the output fields for the **show route forwarding-table** command. Output fields are listed in the approximate order in which they appear. Field names might be abbreviated (as shown in parentheses) when no level of output is specified, or when the **detail** keyword is used instead of the **extensive** keyword.

**Table 102: show route forwarding-table Output Fields**

| Field Name              | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | Level of Output         |
|-------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------|
| Logical system          | Name of the logical system. This field is displayed if you specify the <b>table logical-system-name/routing-instance-name</b> option on a device that is configured for and supports logical systems.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | All levels              |
| Routing table           | Name of the routing table (for example, inet, inet6, mpls).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | All levels              |
| Address family          | Address family (for example, IP, IPv6, ISO, MPLS, and VPLS).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | All levels              |
| Destination             | Destination of the route.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | <b>detail extensive</b> |
| Route Type (Type)       | How the route was placed into the forwarding table. When the <b>detail</b> keyword is used, the route type might be abbreviated (as shown in parentheses): <ul style="list-style-type: none"> <li><b>cloned (clon)</b>—(TCP or multicast only) Cloned route.</li> <li><b>destination (dest)</b>—Remote addresses directly reachable through an interface.</li> <li><b>destination down (iddn)</b>—Destination route for which the interface is unreachable.</li> <li><b>interface cloned (ifcl)</b>—Cloned route for which the interface is unreachable.</li> <li><b>route down (ifdn)</b>—Interface route for which the interface is unreachable.</li> <li><b>ignore (ignr)</b>—Ignore this route.</li> <li><b>interface (intf)</b>—Installed as a result of configuring an interface.</li> <li><b>permanent (perm)</b>—Routes installed by the kernel when the routing table is initialized.</li> <li><b>user</b>—Routes installed by the routing protocol process or as a result of the configuration.</li> </ul> | All levels              |
| Route Reference (RtRef) | Number of routes to reference.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       | <b>detail extensive</b> |

Table 102: show route forwarding-table Output Fields (*continued*)

| Field Name                 | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | Level of Output       |
|----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------|
| Flags                      | Route type flags: <ul style="list-style-type: none"> <li>• <b>none</b>—No flags are enabled.</li> <li>• <b>accounting</b>—Route has accounting enabled.</li> <li>• <b>cached</b>—Cache route.</li> <li>• <b>incoming-iface <i>interface-number</i></b>—Check against incoming interface.</li> <li>• <b>prefix load balance</b>—Load balancing is enabled for this prefix.</li> <li>• <b>rt nh decoupled</b>—Route has been decoupled from the next hop to the destination.</li> <li>• <b>sent to PFE</b>—Route has been sent to the Packet Forwarding Engine.</li> <li>• <b>static</b>—Static route.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | extensive             |
| Next hop                   | IP address of the next hop to the destination.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             | detail extensive      |
| Next hop Type (Type)       | Next-hop type. When the <b>detail</b> keyword is used, the next-hop type might be abbreviated (as indicated in parentheses): <ul style="list-style-type: none"> <li>• <b>broadcast (bcst)</b>—Broadcast.</li> <li>• <b>deny</b>—Deny.</li> <li>• <b>discard (dscd)</b>—Discard.</li> <li>• <b>hold</b>—Next hop is waiting to be resolved into a unicast or multicast type.</li> <li>• <b>indexed (idxd)</b>—Indexed next hop.</li> <li>• <b>indirect (indr)</b>—Indirect next hop.</li> <li>• <b>local (locl)</b>—Local address on an interface.</li> <li>• <b>routed multicast (mcrt)</b>—Regular multicast next hop.</li> <li>• <b>multicast (mcst)</b>—Wire multicast next hop (limited to the LAN).</li> <li>• <b>multicast discard (mdsc)</b>—Multicast discard.</li> <li>• <b>multicast group (mgrp)</b>—Multicast group member.</li> <li>• <b>receive (rcv)</b>—Receive.</li> <li>• <b>reject (rjct)</b>—Discard. An ICMP unreachable message was sent.</li> <li>• <b>resolve (rslv)</b>—Resolving the next hop.</li> <li>• <b>unicast (ucst)</b>—Unicast.</li> <li>• <b>unilist (ulst)</b>—List of unicast next hops. A packet sent to this next hop goes to any next hop in the list.</li> </ul> | detail extensive      |
| Index                      | Software index of the next hop that is used to route the traffic for a given prefix.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       | detail extensive none |
| Route interface-index      | Logical interface index from which the route is learned. For example, for interface routes, this is the logical interface index of the route itself. For static routes, this field is zero. For routes learned through routing protocols, this is the logical interface index from which the route is learned.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             | extensive             |
| Reference (NhRef)          | Number of routes that refer to this next hop.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | detail extensive none |
| Next-hop interface (Netif) | Interface used to reach the next hop.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | detail extensive none |

Table 102: show route forwarding-table Output Fields (*continued*)

| Field Name    | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                 | Level of Output |
|---------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| Weight        | Value used to distinguish primary, secondary, and fast reroute backup routes. Weight information is available when MPLS label-switched path (LSP) link protection, node-link protection, or fast reroute is enabled, or when the standby state is enabled for secondary paths. A lower weight value is preferred. Among routes with the same weight value, load balancing is possible (see the <b>Balance</b> field description). | extensive       |
| Balance       | Balance coefficient indicating how traffic of unequal cost is distributed among next hops when a router is performing unequal-cost load balancing. This information is available when you enable BGP multipath load balancing.                                                                                                                                                                                                    | extensive       |
| RPF interface | List of interfaces from which the prefix can be accepted. Reverse path forwarding (RPF) information is displayed only when <b>rpf-check</b> is configured on the interface.                                                                                                                                                                                                                                                       | extensive       |

## Sample Output

### show route forwarding-table

```

user@host> show route forwarding-table
Routing table: default.inet
Internet:
Destination      Type RtRef Next hop          Type Index NhRef Netif
default          perm  0
0.0.0.0/32       perm  0
172.16.1.0/24    ifdn  0
172.16.1.0/32    iddn  0 172.16.1.0      rcv  606  1 ge-2/0/1.0
172.16.1.1/32    user  0
172.16.1.1/32    intf  0 172.16.1.1      locl 607  2
172.16.1.1/32    iddn  0 172.16.1.1      locl 607  2
172.16.1.255/32 iddn  0 ff:ff:ff:ff:ff:ff bcst 605  1 ge-2/0/1.0
10.0.0.0/24      intf  0
10.0.0.0/32      dest  0 10.0.0.0         rcv  614  1 ge-2/0/0.0
10.0.0.1/32      intf  0 10.0.0.1         locl 615  2
10.0.0.1/32      dest  0 10.0.0.1         locl 615  2
10.0.0.255/32    dest  0 10.0.0.255       bcst 613  1 ge-2/0/0.0
10.1.1.0/24      ifdn  0
10.1.1.0/32      iddn  0 10.1.1.0         rcv  610  1 ge-2/0/1.0
10.1.1.1/32      user  0
10.1.1.1/32      intf  0 10.1.1.1         locl 611  2
10.1.1.1/32      iddn  0 10.1.1.1         locl 611  2
10.1.1.255/32    iddn  0 ff:ff:ff:ff:ff:ff bcst 609  1 ge-2/0/1.0
10.206.0.0/16    user  0 10.209.63.254    ucst 419  20 fxp0.0
10.209.0.0/16    user  1 0:12:1e:ca:98:0  ucst 419  20 fxp0.0
10.209.0.0/18    intf  0
10.209.0.0/32    dest  0 10.209.0.0       rcv  416  1 fxp0.0
10.209.2.131/32 intf  0 10.209.2.131     locl 417  2
10.209.2.131/32 dest  0 10.209.2.131     locl 417  2
10.209.17.55/32 dest  0 0:30:48:5b:78:d2 ucst 435  1 fxp0.0
10.209.63.42/32 dest  0 0:23:7d:58:92:ca ucst 434  1 fxp0.0
10.209.63.254/32 dest  0 0:12:1e:ca:98:0  ucst 419  20 fxp0.0
10.209.63.255/32 dest  0 10.209.63.255    bcst 415  1 fxp0.0
10.227.0.0/16    user  0 10.209.63.254    ucst 419  20 fxp0.0
...

```

```

Routing table: iso
ISO:
Destination      Type RtRef Next hop      Type Index NhRef Netif
default          perm  0              rjct  27    1
47.0005.80ff.f800.0000.0108.0003.0102.5524.5220.00
intf 0           locl  28    1

Routing table: inet6
Internet6:
Destination      Type RtRef Next hop      Type Index NhRef Netif
default          perm  0              rjct  6     1
ff00::/8         perm  0              mdsc  4     1
ff02::1/128      perm  0 ff02::1      mcst  3     1

Routing table: ccc
MPLS:
Interface.Label  Type RtRef Next hop      Type Index NhRef Netif
default          perm  0              rjct 16    1
100004(top)fe-0/0/1.0

```

### show route forwarding-table detail

```

user@host> show route forwarding-table detail
Routing table: inet
Internet:
Destination      Type RtRef Next hop      Type Index NhRef Netif
default          user  2 0:90:69:8e:b1:1b ucst 132  4 fxp0.0
default          perm  0              rjct 14    1
10.1.1.0/24      intf  0 ff.3.0.21      ucst 322  1 so-5/3/0.0
10.1.1.0/32      dest  0 10.1.1.0       recv 324  1 so-5/3/0.0
10.1.1.1/32      intf  0 10.1.1.1       locl 321  1
10.1.1.255/32    dest  0 10.1.1.255     bcst 323  1 so-5/3/0.0
10.21.21.0/24    intf  0 ff.3.0.21      ucst 326  1 so-5/3/0.0
10.21.21.0/32    dest  0 10.21.21.0     recv 328  1 so-5/3/0.0
10.21.21.1/32    intf  0 10.21.21.1     locl 325  1
10.21.21.255/32  dest  0 10.21.21.255   bcst 327  1 so-5/3/0.0
127.0.0.1/32     intf  0 127.0.0.1       locl 320  1
172.17.28.19/32  clon  1 192.168.4.254   ucst 132  4 fxp0.0
172.17.28.44/32  clon  1 192.168.4.254   ucst 132  4 fxp0.0

...

Routing table: private1__inet
Internet:
Destination      Type RtRef Next hop      Type Index NhRef Netif
default          perm  0              rjct 46    1
10.0.0.0/8       intf  0              rslv 136  1 fxp1.0
10.0.0.0/32      dest  0 10.0.0.0       recv 134  1 fxp1.0
10.0.0.4/32      intf  0 10.0.0.4       locl 135  2
10.0.0.4/32      dest  0 10.0.0.4       locl 135  2

...

Routing table: iso
ISO:
Destination      Type RtRef Next hop      Type Index NhRef Netif
default          perm  0              rjct 38    1

Routing table: inet6
Internet6:
Destination      Type RtRef Next hop      Type Index NhRef Netif

```

```

default          perm    0          rjct    22    1
ff00::/8         perm    0          mdsc    21    1
ff02::1/128      perm    0 ff02::1    mcst    17    1

...

Routing table: mpls
MPLS:
Destination      Type RtRef Next hop          Type Index NhRef Netif
default          perm    0          rjct    28    1

```

### show route forwarding-table destination extensive (Weights and Balances)

```

user@host> show route forwarding-table destination 3.4.2.1 extensive
Routing table: inet [Index 0]
Internet:

Destination: 3.4.2.1/32
Route type: user
Route reference: 0          Route interface-index: 0
Flags: sent to PFE
Next-hop type: unilist      Index: 262143   Reference: 1
Nexthop: 172.16.4.4
Next-hop type: unicast      Index: 335      Reference: 2
Next-hop interface: so-1/1/0.0 Weight: 22      Balance: 3
Nexthop: 145.12.1.2
Next-hop type: unicast      Index: 337      Reference: 2
Next-hop interface: so-0/1/2.0 Weight: 33      Balance: 33

```

### show route forwarding-table extensive

```

user@host> show route forwarding-table extensive
Routing table: inet [Index 0]
Internet:

Destination: default
Route type: user
Route reference: 2          Route interface-index: 0
Flags: sent to PFE
Nexthop: 00:00:5E:00:53:1b
Next-hop type: unicast      Index: 132      Reference: 4
Next-hop interface: fxp0.0

Destination: default
Route type: permanent
Route reference: 0          Route interface-index: 0
Flags: none
Next-hop type: reject       Index: 14       Reference: 1

Destination: 127.0.0.1/32
Route type: interface
Route reference: 0          Route interface-index: 0
Flags: sent to PFE
Nexthop: 127.0.0.1
Next-hop type: local        Index: 320      Reference: 1

...

Routing table: private1__inet [Index 1]
Internet:

```

```
Destination: default
  Route type: permanent
  Route reference: 0
  Flags: sent to PFE
  Next-hop type: reject
                                Route interface-index: 0
                                Index: 46      Reference: 1

Destination: 10.0.0.0/8
  Route type: interface
  Route reference: 0
  Flags: sent to PFE
  Next-hop type: resolve
  Next-hop interface: fxp1.0
                                Route interface-index: 3
                                Index: 136     Reference: 1

...

Routing table: iso [Index 0]
ISO:

Destination: default
  Route type: permanent
  Route reference: 0
  Flags: sent to PFE
  Next-hop type: reject
                                Route interface-index: 0
                                Index: 38      Reference: 1

Routing table: inet6 [Index 0]
Internet6:

Destination: default
  Route type: permanent
  Route reference: 0
  Flags: sent to PFE
  Next-hop type: reject
                                Route interface-index: 0
                                Index: 22      Reference: 1

Destination: ff00::/8
  Route type: permanent
  Route reference: 0
  Flags: sent to PFE
  Next-hop type: multicast discard
                                Route interface-index: 0
                                Index: 21      Reference: 1

...

Routing table: private1__inet6 [Index 1]
Internet6:

Destination: default
  Route type: permanent
  Route reference: 0
  Flags: sent to PFE
  Next-hop type: reject
                                Route interface-index: 0
                                Index: 54      Reference: 1

Destination: fe80::2a0:a5ff:fe3d:375/128
  Route type: interface
  Route reference: 0
  Flags: sent to PFE
  Nexthop: fe80::2a0:a5ff:fe3d:375
  Next-hop type: local
                                Route interface-index: 0
                                Index: 75      Reference: 1

...
```



**show route forwarding-table extensive (RPF)**

The next example is based on the following configuration, which enables an RPF check on all routes that are learned from this interface, including the interface route:

```
so-1/1/0 {
  unit 0 {
    family inet {
      rpf-check;
      address 192.0.2.2/30;
    }
  }
}
```

```
user@host> show route forwarding-table extensive
```

```
Routing table: inet [Index 0]
```

```
Internet:
```

```
...
```

```
...
```

```
Destination: 192.0.2.3/32
```

```
Route type: destination
```

```
Route reference: 0
```

```
Route interface-index: 67
```

```
Flags: sent to PFE
```

```
Nexthop: 192.0.2.3
```

```
Next-hop type: broadcast
```

```
Index: 328
```

```
Reference: 1
```

```
Next-hop interface: so-1/1/0.0
```

```
RPF interface: so-1/1/0.0
```

**show route forwarding-table family mpls**

```
user@host> show route forwarding-table family mpls
```

```
Routing table: mpls
```

```
MPLS:
```

| Destination | Type | RtRef | Next hop  | Type | Index  | NhRef | Netif          |
|-------------|------|-------|-----------|------|--------|-------|----------------|
| default     | perm | 0     |           | rjct | 19     | 1     |                |
| 0           | user | 0     |           | recv | 18     | 3     |                |
| 1           | user | 0     |           | recv | 18     | 3     |                |
| 2           | user | 0     |           | recv | 18     | 3     |                |
| 100000      | user | 0     | 10.31.1.6 | swap | 100001 |       | fe-1/1/0.0     |
| 800002      | user | 0     |           | Pop  |        |       | vt-0/3/0.32770 |

```
vt-0/3/0.32770 (VPLS)
```

```
user 0
```

```
indr 351 4
```

```
Push 800000, Push 100002(top)
```

```
so-0/0/0.0
```

**show route forwarding-table family mpls ccc ge-0/0/1.1004**

```
user@host>show route forwarding-table mpls ccc ge-0/0/1.1004
```

```
Routing table: default.mpls
```

```
MPLS:
```

| Destination   | Type       | RtRef | Next hop | Type | Index   | NhRef | Netif |
|---------------|------------|-------|----------|------|---------|-------|-------|
| ge-0/0/1.1004 | (CCC) user | 0     |          | ulst | 1048577 | 2     |       |
|               |            |       |          | comp | 754     | 3     |       |
|               |            |       |          | comp | 755     | 3     |       |
|               |            |       |          | comp | 756     | 3     |       |

```
Routing table: __mpls-oam__.mpls
```

```
MPLS:
```

| Destination | Type | RtRef | Next hop | Type | Index | NhRef | Netif |
|-------------|------|-------|----------|------|-------|-------|-------|
|-------------|------|-------|----------|------|-------|-------|-------|

|         |      |   |      |     |   |
|---------|------|---|------|-----|---|
| default | perm | 0 | dscd | 556 | 1 |
|---------|------|---|------|-----|---|

### show route forwarding-table family vpls

```

user@host> show route forwarding-table family vpls
Routing table: green.vpls
VPLS:
Destination      Type RtRef Next hop      Type Index NhRef Netif
default          dnm  0          Type Index NhRef Netif
default          perm 0          rjct  298    1
fe-0/1/0.0       dnm  0          flood 355    1
00:00:5E:00:53:1f/48 <<<<<Remote CE
                                indr  351    4
                                Push 800000, Push 100002(top)
so-0/0/0.0
00:00:5E:00:53:1f/48 <<<<<Local CE
                                ucst  354    2 fe-0/1/0.0

```

### show route forwarding-table vpls (Broadcast, unknown unicast, and multicast (BUM) hashing is enabled)

```

user@host> show route forwarding-table vpls
Routing table: green.vpls
VPLS:
Enabled protocols: BUM hashing
Destination      Type RtRef Next hop      Type Index NhRef Netif
default          perm 0          dscd  519    1
lsi.1048832      intf 0          indr  1048574 4
                                Push 262145 621 2
ge-3/0/0.0
00:00:5E:00:53:01/48 user 0          ucst  590    5 ge-2/3/9.0
0x30003/51       user 0          comp  627    2
ge-2/3/9.0       intf 0          ucst  590    5 ge-2/3/9.0
ge-3/1/3.0       intf 0          ucst  619    4 ge-3/1/3.0
0x30002/51       user 0          comp  600    2
0x30001/51       user 0          comp  597    2

```

### show route forwarding-table vpls (Broadcast, unknown unicast, and multicast (BUM) hashing is enabled with MAC Statistics)

```

user@host> show route forwarding-table vpls
Routing table: green.vpls
VPLS:
Enabled protocols: BUM hashing, MAC Stats
Destination      Type RtRef Next hop      Type Index NhRef Netif
default          perm 0          dscd  519    1
lsi.1048834      intf 0          indr  1048574 4
                                Push 262145 592 2
ge-3/0/0.0
00:19:e2:25:d0:01/48 user 0          ucst  590    5 ge-2/3/9.0
0x30003/51       user 0          comp  630    2
ge-2/3/9.0       intf 0          ucst  590    5 ge-2/3/9.0
ge-3/1/3.0       intf 0          ucst  591    4 ge-3/1/3.0
0x30002/51       user 0          comp  627    2
0x30001/51       user 0          comp  624    2

```

### show route forwarding-table family vpls extensive

```

user@host> show route forwarding-table family vpls extensive

```

Routing table: green.vpls [Index 2]  
VPLS:

|                                |                           |              |
|--------------------------------|---------------------------|--------------|
| Destination: default           |                           |              |
| Route type: dynamic            |                           |              |
| Route reference: 0             | Route interface-index: 72 |              |
| Flags: sent to PFE             |                           |              |
| Next-hop type: flood           | Index: 289                | Reference: 1 |
| Next-hop type: unicast         | Index: 291                | Reference: 3 |
| Next-hop interface: fe-0/1/3.0 |                           |              |
| Next-hop type: unicast         | Index: 290                | Reference: 3 |
| Next-hop interface: fe-0/1/2.0 |                           |              |

|                        |                          |              |
|------------------------|--------------------------|--------------|
| Destination: default   |                          |              |
| Route type: permanent  |                          |              |
| Route reference: 0     | Route interface-index: 0 |              |
| Flags: none            |                          |              |
| Next-hop type: discard | Index: 341               | Reference: 1 |

|                                |                           |              |
|--------------------------------|---------------------------|--------------|
| Destination: fe-0/1/2.0        |                           |              |
| Route type: dynamic            |                           |              |
| Route reference: 0             | Route interface-index: 69 |              |
| Flags: sent to PFE             |                           |              |
| Next-hop type: flood           | Index: 293                | Reference: 1 |
| Next-hop type: indirect        | Index: 363                | Reference: 4 |
| Next-hop type: Push 800016     |                           |              |
| Next-hop interface: at-1/0/1.0 |                           |              |
| Next-hop type: indirect        | Index: 301                | Reference: 5 |
| Next hop: 10.31.3.2            |                           |              |
| Next-hop type: Push 800000     |                           |              |
| Next-hop interface: fe-0/1/1.0 |                           |              |
| Next-hop type: unicast         | Index: 291                | Reference: 3 |
| Next-hop interface: fe-0/1/3.0 |                           |              |

|                                |                           |              |
|--------------------------------|---------------------------|--------------|
| Destination: fe-0/1/3.0        |                           |              |
| Route type: dynamic            |                           |              |
| Route reference: 0             | Route interface-index: 70 |              |
| Flags: sent to PFE             |                           |              |
| Next-hop type: flood           | Index: 292                | Reference: 1 |
| Next-hop type: indirect        | Index: 363                | Reference: 4 |
| Next-hop type: Push 800016     |                           |              |
| Next-hop interface: at-1/0/1.0 |                           |              |
| Next-hop type: indirect        | Index: 301                | Reference: 5 |
| Next hop: 10.31.3.2            |                           |              |
| Next-hop type: Push 800000     |                           |              |
| Next-hop interface: fe-0/1/1.0 |                           |              |
| Next-hop type: unicast         | Index: 290                | Reference: 3 |
| Next-hop interface: fe-0/1/2.0 |                           |              |

|                                         |                           |              |        |
|-----------------------------------------|---------------------------|--------------|--------|
| Destination: 00:00:5E:00:53:01/48       |                           |              |        |
| Route type: dynamic                     |                           |              |        |
| Route reference: 0                      | Route interface-index: 70 |              |        |
| Flags: sent to PFE, prefix load balance |                           |              |        |
| Next-hop type: unicast                  | Index: 291                | Reference: 3 |        |
| Next-hop interface: fe-0/1/3.0          |                           |              |        |
| Route used as destination:              |                           |              |        |
| Packet count:                           | 6640                      | Byte count:  | 675786 |
| Route used as source                    |                           |              |        |
| Packet count:                           | 6894                      | Byte count:  | 696424 |

Destination: 00:00:5E:00:53:04/48

```

Route type: dynamic
Route reference: 0                      Route interface-index: 69
Flags: sent to PFE, prefix load balance
Next-hop type: unicast                  Index: 290      Reference: 3
Next-hop interface: fe-0/1/2.0
Route used as destination:
  Packet count:      96      Byte count:      8079
Route used as source:
  Packet count:      296     Byte count:      24955

```

```

Destination: 00:00:5E:00:53:05/48
Route type: dynamic
Route reference: 0                      Route interface-index: 74
Flags: sent to PFE, prefix load balance
Next-hop type: indirect                  Index: 301      Reference: 5
Next hop: 10.31.3.2
Next-hop type: Push 800000
Next-hop interface: fe-0/1/1.0

```

### show route forwarding-table table default

```
user@host> show route forwarding-table table default
```

```
Routing table: default.inet
```

```
Internet:
```

| Destination    | Type | RtRef | Next hop        | Type | Index | NhRef | Netif      |
|----------------|------|-------|-----------------|------|-------|-------|------------|
| default        | perm | 0     |                 | rjct | 36    | 2     |            |
| 0.0.0.0/32     | perm | 0     |                 | dscd | 34    | 1     |            |
| 10.0.60.0/30   | user | 0     | 10.0.60.13      | ucst | 713   | 5     | fe-0/1/3.0 |
| 10.0.60.12/30  | intf | 0     |                 | rslv | 688   | 1     | fe-0/1/3.0 |
| 10.0.60.12/32  | dest | 0     | 10.0.60.12      | recv | 686   | 1     | fe-0/1/3.0 |
| 10.0.60.13/32  | dest | 0     | 0:5:85:8b:bc:22 | ucst | 713   | 5     | fe-0/1/3.0 |
| 10.0.60.14/32  | intf | 0     | 10.0.60.14      | loc1 | 687   | 2     |            |
| 10.0.60.14/32  | dest | 0     | 10.0.60.14      | loc1 | 687   | 2     |            |
| 10.0.60.15/32  | dest | 0     | 10.0.60.15      | bcst | 685   | 1     | fe-0/1/3.0 |
| 10.0.67.12/30  | user | 0     | 10.0.60.13      | ucst | 713   | 5     | fe-0/1/3.0 |
| 10.0.80.0/30   | ifdn | 0     | ff.3.0.21       | ucst | 676   | 1     | so-0/0/1.0 |
| 10.0.80.0/32   | dest | 0     | 10.0.80.0       | recv | 678   | 1     | so-0/0/1.0 |
| 10.0.80.2/32   | user | 0     |                 | rjct | 36    | 2     |            |
| 10.0.80.2/32   | intf | 0     | 10.0.80.2       | loc1 | 675   | 1     |            |
| 10.0.80.3/32   | dest | 0     | 10.0.80.3       | bcst | 677   | 1     | so-0/0/1.0 |
| 10.0.90.12/30  | intf | 0     |                 | rslv | 684   | 1     | fe-0/1/0.0 |
| 10.0.90.12/32  | dest | 0     | 10.0.90.12      | recv | 682   | 1     | fe-0/1/0.0 |
| 10.0.90.14/32  | intf | 0     | 10.0.90.14      | loc1 | 683   | 2     |            |
| 10.0.90.14/32  | dest | 0     | 10.0.90.14      | loc1 | 683   | 2     |            |
| 10.0.90.15/32  | dest | 0     | 10.0.90.15      | bcst | 681   | 1     | fe-0/1/0.0 |
| 10.5.0.0/16    | user | 0     | 192.168.187.126 | ucst | 324   | 15    | fxp0.0     |
| 10.10.0.0/16   | user | 0     | 192.168.187.126 | ucst | 324   | 15    | fxp0.0     |
| 10.13.10.0/23  | user | 0     | 192.168.187.126 | ucst | 324   | 15    | fxp0.0     |
| 10.84.0.0/16   | user | 0     | 192.168.187.126 | ucst | 324   | 15    | fxp0.0     |
| 10.150.0.0/16  | user | 0     | 192.168.187.126 | ucst | 324   | 15    | fxp0.0     |
| 10.157.64.0/19 | user | 0     | 192.168.187.126 | ucst | 324   | 15    | fxp0.0     |
| 10.209.0.0/16  | user | 0     | 192.168.187.126 | ucst | 324   | 15    | fxp0.0     |

```
...
```

```
Routing table: default.iso
```

```
ISO:
```

| Destination | Type | RtRef | Next hop | Type | Index | NhRef | Netif |
|-------------|------|-------|----------|------|-------|-------|-------|
| default     | perm | 0     |          | rjct | 60    | 1     |       |

```
Routing table: default.inet6
```

```

Internet6:
Destination      Type RtRef Next hop          Type Index NhRef Netif
default          perm  0                               rjct  44    1
::/128           perm  0                               dscd  42    1
ff00::/8         perm  0                               mdsc  43    1
ff02::1/128      perm  0 ff02::1          mcst  39    1

```

Routing table: default.mpls

```

MPLS:
Destination      Type RtRef Next hop          Type Index NhRef Netif
default          perm  0                               dscd  50    1

```

### show route forwarding-table table logical-system-name/routing-instance-name

```
user@host> show route forwarding-table table R4/vpn-red
```

Logical system: R4

Routing table: vpn-red.inet

Internet:

```

Destination      Type RtRef Next hop          Type Index NhRef Netif
default          perm  0                               rjct  563    1
0.0.0.0/32       perm  0                               dscd  561    2
172.16.0.1/32    user  0                               dscd  561    2
172.16.2.0/24    intf  0                               rslv  771    1 ge-1/2/0.3
172.16.2.0/32    dest  0 172.16.2.0          recv  769    1 ge-1/2/0.3
172.16.2.1/32    intf  0 172.16.2.1          locl  770    2
172.16.2.1/32    dest  0 172.16.2.1          locl  770    2
172.16.2.2/32    dest  0 0.4.80.3.0.1b.c0.d5.e4.bd.0.1b.c0.d5.e4.bc.8.0
  ucst  789    1 ge-1/2/0.3
172.16.2.255/32  dest  0 172.16.2.255        bcst  768    1 ge-1/2/0.3
172.16.233.0/4   perm  1                               mdsc  562    1
172.16.233.1/32  perm  0 172.16.233.1        mcst  558    1
255.255.255.255/32 perm  0                               bcst  559    1

```

Logical system: R4

Routing table: vpn-red.iso

ISO:

```

Destination      Type RtRef Next hop          Type Index NhRef Netif
default          perm  0                               rjct  608    1

```

Logical system: R4

Routing table: vpn-red.inet6

Internet6:

```

Destination      Type RtRef Next hop          Type Index NhRef Netif
default          perm  0                               rjct  708    1
::/128           perm  0                               dscd  706    1
ff00::/8         perm  0                               mdsc  707    1
ff02::1/128      perm  0 ff02::1          mcst  704    1

```

Logical system: R4

Routing table: vpn-red.mpls

MPLS:

```

Destination      Type RtRef Next hop          Type Index NhRef Netif
default          perm  0                               dscd  638

```

### show route forwarding-table vpn

```
user@host> show route forwarding-table vpn VPN-A
```

Routing table:: VPN-A.inet

Internet:

```

Destination      Type RtRef Nexthop          Type Index NhRef Netif
default          perm  0                               rjct  4      4

```

```

10.39.10.20/30    intf    0 ff.3.0.21      ucst    40    1
so-0/0/0.0
10.39.10.21/32    intf    0 10.39.10.21    locl    36    1
10.255.14.172/32  user    0              ucst    69    2
so-0/0/0.0
10.255.14.175/32  user    0              indr    81    3
Push 100004, Push
100004(top) so-1/0/0.0
172.16.233.0/4      perm    2              mdsc    5    3
172.16.233.1/32     perm    0 172.16.233.1    mcst    1    8
172.16.233.5/32     user    1 172.16.233.5    mcst    1    8
255.255.255.255/32 perm    0              bcst    2    3

```

On QFX5200, the results for this command look like this:

```

show route forwarding-table family mpls
Routing table: default.mpls
MPLS:
Destination Type RtRef Next hop Type Index NhRef Netif
default perm 0 dscd 65 1
0 user 0 recv 64 4
1 user 0 recv 64 4
2 user 0 recv 64 4
13 user 0 recv 64 4
300384 user 0 9.1.1.1 Pop 1711 2 xe-0/0/34.0
300384(S=0) user 0 9.1.1.1 Pop 1712 2 xe-0/0/34.0
300400 user 0 ulst 131071 2
10.1.1.2 Pop 1713 1 xe-0/0/38.0
172.16.11.2 Pop 1714 1 xe-0/0/40.0
300400(S=0) user 0 ulst 131072 2
10.1.1.2 Pop 1715 1 xe-0/0/38.0
172.16.11.2 Pop 1716 1 xe-0/0/40.0

Routing table: __mpls-oam__.mpls
MPLS:
Destination Type RtRef Next hop Type Index NhRef Netif
default perm 0 dscd 1681 1

```

## CHAPTER 34

# PCEP Operational Commands

- `clear path-computation-client statistics`
- `request path-computation-client active-pce`
- `show path-computation-client active-pce`
- `show path-computation-client statistics`

## clear path-computation-client statistics

---

|                                 |                                                                                                                                                                                    |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>clear path-computation-client statistics</code><br><code>&lt;pce-id   all&gt;</code>                                                                                         |
| <b>Release Information</b>      | Statement introduced in Junos OS Release 12.3.<br>Statement introduced in Junos OS Release 16.1R3 for QFX10000 switches.                                                           |
| <b>Description</b>              | Clear Path Computation Element (PCE) statistics.                                                                                                                                   |
| <b>Options</b>                  | <b>pce-id</b> —(Optional) Clear statistics of the specified PCE.<br><b>all</b> —(Optional) Clear statistics of all available PCEs configured on the path computation client (PCC). |
| <b>Required Privilege Level</b> | clear                                                                                                                                                                              |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">show path-computation-client statistics on page 1968</a></li></ul>                                                             |
| <b>List of Sample Output</b>    | <a href="#">clear path-computation-client statistics pce-id on page 1962</a><br><a href="#">clear path-computation-client statistics all on page 1962</a>                          |
| <b>Output Fields</b>            | When you enter this command, you are not provided feedback on the status of your request.                                                                                          |

## Sample Output

### clear path-computation-client statistics pce-id

```
user@host> clear path-computation-client statistics pce1
```

### clear path-computation-client statistics all

```
user@host> clear path-computation-client statistics all
```



## request path-computation-client active-pce

---

|                                 |                                                                                                                        |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | request path-computation-client active-pce <i>pce-id</i>                                                               |
| <b>Release Information</b>      | Command introduced in Junos OS Release 12.3.<br>Command introduced in Junos OS Release 16.1R3 for QFX10000 switches.   |
| <b>Description</b>              | Request a new active Path Computation Element (PCE).                                                                   |
| <b>Options</b>                  | <i>pce-id</i> —Unique user defined ID for this PCE.                                                                    |
| <b>Required Privilege Level</b> | request                                                                                                                |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"><li>• <a href="#">show path-computation-client active-pce on page 1964</a></li></ul> |
| <b>List of Sample Output</b>    | <a href="#">request path-computation-client active-pce pce-id on page 1963</a>                                         |

### Sample Output

#### request path-computation-client active-pce pce-id

```
user@host> request path-computation-client active-pce pce1
```

## show path-computation-client active-pce

|                                 |                                                                                                                                                                                                            |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | <code>show path-computation-client active-pce</code><br><code>&lt;brief   detail&gt;</code>                                                                                                                |
| <b>Release Information</b>      | Command introduced in Junos OS Release 12.3.<br>Command introduced in Junos OS Release 16.1R3 for QFX10000 switches.                                                                                       |
| <b>Description</b>              | Displays information about the current active Path Computation Element (PCE).                                                                                                                              |
| <b>Options</b>                  | <b>none</b> —Display brief information about the current active PCE.<br><b>brief   detail</b> —(Optional) Display the specific level of output.                                                            |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                       |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li><a href="#">request path-computation-client active-pce on page 1963</a></li> </ul>                                                                                  |
| <b>List of Sample Output</b>    | <a href="#">show path-computation-client active-pce on page 1966</a><br><a href="#">show path-computation-client active-pce detail on page 1966</a>                                                        |
| <b>Output Fields</b>            | <a href="#">Table 103 on page 1964</a> describes the output fields for the <b>show path-computation-client active-pce</b> command. Output fields are listed in the approximate order in which they appear. |

**Table 103: show path-computation-client active-pce Output Fields**

| Field Name | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | Level of Output |
|------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| IP address | IP address of the current active PCE.                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | All levels      |
| Priority   | Active PCE priority.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       | All levels      |
| PCE status | Active PCE state: <ul style="list-style-type: none"> <li>PCE_STATE_NEW—Initial PCEP session state.</li> <li>PCE_STATE_RECONNECT—Trying to re-establish TCP connection with the PCEP peer.</li> <li>PCE_STATE_CONNECTING—Establishing TCP connection with the PCEP peer.</li> <li>PCE_STATE_CONNECTED—TCP connection established with the PCEP peer.</li> <li>PCE_STATE_SYNC—Open messages exchanged with the PCEP peer and entering SYNC state.</li> <li>PCE_STATE_UP—PCEP session established.</li> </ul> | All levels      |

Table 103: show path-computation-client active-pce Output Fields (*continued*)

| Field Name              | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | Level of Output |
|-------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| Session type            | Active PCE type: <ul style="list-style-type: none"> <li>PCE_TYPE_STATELESS—Does not learn LSP state information from PCC.</li> <li>PCE_TYPE_STATEFUL—Uses LSP state information learned from PCCs to optimize path computations, but does not actively update LSP state. A PCC maintains synchronization with the PCE.</li> <li>PCE_TYPE_STATEFULACTIVE—Uses LSP state information learned from PCCs to optimize path computations, and actively updates LSP parameters in those PCCs that delegate control of their LSPs to the PCE.</li> </ul> | All levels      |
| PCE-mastership          | PCE mastership state: <ul style="list-style-type: none"> <li>main—Current active PCE.</li> <li>backup—Backup PCE.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                     | All levels      |
| PCRpts                  | Number of PC report (PCRpt) messages sent by PCC to a stateful PCE to report current state of LSP(s).                                                                                                                                                                                                                                                                                                                                                                                                                                            | All levels      |
| PCUpdates               | Number of PC update (PCUpd) messages sent by a PCE to a PCC to update LSP parameters.                                                                                                                                                                                                                                                                                                                                                                                                                                                            | All levels      |
| Local Keepalive timer   | Keepalive timer used by or for the PCC.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | All levels      |
| Local Dead timer        | Dead timer used by or for the PCC.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               | All levels      |
| Remote Keepalive timer  | Keepalive timer used by or for the PCE.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | All levels      |
| Remote Dead timer       | Dead timer used by or for the PCE.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               | All levels      |
| PCErr-recv              | Information about type, value, and number of PC Error messages received.                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | All levels      |
| Max unknown messages    | Maximum number of unknown messages received for a PCEP session. Recommended value is 5. If the number of unknown messages received by a PCC or PCE is greater than or equal to the maximum number, the PCEP session is closed.                                                                                                                                                                                                                                                                                                                   | detail          |
| Keepalives received     | Number of Keepalive messages received by a PCC from a PCE.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       | detail          |
| Keepalives sent         | Number of Keepalive messages sent by a PCC to a PCE.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             | detail          |
| Dead timer              | Dead timer used by the current active PCE.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       | detail          |
| Elapsed as main current | Time (in seconds) the PCE is in the main mastership state.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       | detail          |
| Elapsed as main total   | Time (in seconds) the PCE became main from the last PCCD restart.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | detail          |

Table 103: show path-computation-client active-pce Output Fields (*continued*)

| Field Name               | Field Description                                                    | Level of Output |
|--------------------------|----------------------------------------------------------------------|-----------------|
| Unknown<br>msgs/min rate | Number of unknown messages received per minute.                      | detail          |
| Session failures         | Number of PCEP session failures with the PCE.                        | detail          |
| Delegation timeout<br>in | Time (in seconds) left for LSP delegation to timeout.                | detail          |
| Delegation failures      | Number of LSP delegation failures.                                   | detail          |
| Connection down          | Time (in seconds) since the PCEP session is down.                    | detail          |
| PCErr-sent               | Information about type, value, and number of PC Error messages sent. | All levels      |

## Sample Output

### show path-computation-client active-pce

```

user@host> show path-computation-client active-pce
PCE pce1
General
  IP address           : 10.209.57.166
  Priority              : 2
  PCE status           : PCE_STATE_NEW
  Session type         : PCE_TYPE_STATEFULACTIVE
  PCE-mastership       : main

Counters
  PCReqs               Total: 0          last 5min: 0          last hour: 0
  PCReps               Total: 0          last 5min: 0          last hour: 0
  PCRpts               Total: 0          last 5min: 0          last hour: 0
  PCUpdates            Total: 0          last 5min: 0          last hour: 0

Timers
  Local                Keepalive timer: 0 [s]   Dead timer: 0 [s]
  Remote               Keepalive timer: 0 [s]   Dead timer: 0 [s]

Errors
  PCErr-recv
  PCErr-sent
    Type: 19          Value: 3          Count: 1
  PCE-PCC-NTFS
  PCC-PCE-NTFS

```

### show path-computation-client active-pce detail

```

user@host> show path-computation-client active-pce detail

```

## PCE pce1

## General

```

IP address           : 172.22.25.223
Priority              : 1
PCE status           : PCE_STATE_RECONNECT
Session type         : PCE_TYPE_STATEFULACTIVE
PCE-mastership       : main
Max unknown messages : 5
Keepalives received  : 0
Keepalives sent      : 0
Dead timer           : 0 [s]
Elapsed as main current : 1 [s]
Elapsed as main total  : 2542 [s]
Unknown msgs/min rate : 0
Session failures     : 575
Delegation timeout in : 14 [s]
Delegation failures   : 21928
Connection down      : 16 [s]

```

## Counters

```

PCReqs              Total: 0          last 5min: 0          last hour: 0
PCReps              Total: 0          last 5min: 0          last hour: 0
PCRpts              Total: 31512       last 5min: 7243       last hour:
7243
PCUpdates           Total: 80          last 5min: 40         last hour:
40

```

## Timers

```

Local               Keepalive timer: 30 [s]   Dead timer: 120 [s]
Remote              Keepalive timer: 30 [s]   Dead timer: 120 [s]

```

## Errors

```

PCErr-recv
PCErr-sent          Type: 1          Value: 2          Count: 12
PCE-PCC-NTFS
PCC-PCE-NTFS

```

## show path-computation-client statistics

|                                 |                                                                                                                                                                                                                                  |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Syntax</b>                   | show path-computation-client statistics<br><brief   detail><br><all>                                                                                                                                                             |
| <b>Release Information</b>      | Command introduced in Junos OS Release 12.3.<br>Command introduced in Junos OS Release 16.1R3 for QFX10000 switches.                                                                                                             |
| <b>Description</b>              | Display statistics about the Path Computation Element (PCE).                                                                                                                                                                     |
| <b>Options</b>                  | <b>none</b> —Display statistics about the primary PCE.<br><br><b>brief   detail</b> —(Optional) Display the specific level of output.<br><br><b>all</b> —(Optional) Display the statistics about all PCEs configured on the PCC. |
| <b>Required Privilege Level</b> | view                                                                                                                                                                                                                             |
| <b>Related Documentation</b>    | <ul style="list-style-type: none"> <li>• <a href="#">clear path-computation-client statistics on page 1962</a></li> </ul>                                                                                                        |
| <b>List of Sample Output</b>    | <a href="#">show path-computation-client statistics all on page 1970</a><br><a href="#">show path-computation-client statistics detail on page 1971</a>                                                                          |
| <b>Output Fields</b>            | Table 104 on page 1968 describes the output fields for the <b>show path-computation-client statistics</b> command. Output fields are listed in the approximate order in which they appear.                                       |

Table 104: show path-computation-client statistics Output Fields

| Field Name | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | Level of Output |
|------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| IP address | IP address of the PCE.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | All levels      |
| Priority   | PCE priority.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | All levels      |
| PCE status | PCE state: <ul style="list-style-type: none"> <li>• PCE_STATE_NEW— Initial PCEP session state.</li> <li>• PCE_STATE_RECONNECT—Trying to re-establish TCP connection with the PCEP peer.</li> <li>• PCE_STATE_CONNECTING—Establishing TCP connection with the PCEP peer.</li> <li>• PCE_STATE_CONNECTED—TCP connection established with the PCEP peer.</li> <li>• PCE_STATE_SYNC—Open messages exchanged with the PCEP peer and entering SYNC state.</li> <li>• PCE_STATE_UP—PCEP session established.</li> </ul> | All levels      |

**Table 104: show path-computation-client statistics Output Fields (*continued*)**

| Field Name             | Field Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | Level of Output |
|------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| Session type           | Active PCE type: <ul style="list-style-type: none"> <li>• PCE_TYPE_STATELESS—Does not learn LSP state information from PCC.</li> <li>• PCE_TYPE_STATEFUL—Uses LSP state information learned from PCCs to optimize path computations, but does not actively update LSP state. A PCC maintains synchronization with the PCE.</li> <li>• PCE_TYPE_STATEFULACTIVE—Uses LSP state information learned from PCCs to optimize path computations, and actively updates LSP parameters in those PCCs that delegate control of their LSPs to the PCE.</li> </ul> | All levels      |
| PCE-mastership         | PCE mastership state: <ul style="list-style-type: none"> <li>• main</li> <li>• primary</li> <li>• backup</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                    | All levels      |
| PCRpts                 | Number of PC report (PCRpt) messages sent by PCC to a stateful PCE to report current state of LSP(s).                                                                                                                                                                                                                                                                                                                                                                                                                                                  | All levels      |
| PCUpdates              | Number of PC update (PCUpd) messages sent by a PCE to a PCC to update LSP parameters.                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | All levels      |
| Local Keepalive timer  | Keepalive timer used by or for the PCC.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | All levels      |
| Local Dead timer       | Dead timer used by or for the PCC.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | All levels      |
| Remote Keepalive timer | Keepalive timer used by or for the PCE.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | All levels      |
| Remote Dead timer      | Dead timer used by or for the PCE.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | All levels      |
| PCErr-recv             | Information about type, value, and number of PC Error messages received.                                                                                                                                                                                                                                                                                                                                                                                                                                                                               | All levels      |
| PCErr-sent             | Information about type, value, and number of PC Error messages sent.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | All levels      |
| Max unknown messages   | Maximum number of unknown messages received for a PCEP session. Recommended value is 5. If the number of unknown messages received by a PCC or PCE is greater than or equal to the maximum number, the PCEP session is closed.                                                                                                                                                                                                                                                                                                                         | detail          |

**Table 104: show path-computation-client statistics Output Fields (*continued*)**

| Field Name              | Field Description                                                 | Level of Output |
|-------------------------|-------------------------------------------------------------------|-----------------|
| Keepalives received     | Number of Keepalive messages received by a PCC from a PCE.        | detail          |
| Keepalives sent         | Number of Keepalive messages sent by a PCC to a PCE.              | detail          |
| Elapsed as main current | Time (in seconds) the PCE is in the main mastership state.        | detail          |
| Elapsed as main total   | Time (in seconds) the PCE became main from the last PCCD restart. | detail          |
| Unknown msgs/min rate   | Number of unknown messages received per minute.                   | detail          |
| Session failures        | Number of PCEP session failures with the PCE.                     | detail          |
| Delegation timeout in   | Time (in seconds) left for LSP delegation to timeout.             | detail          |
| Delegation failures     | Number of LSP delegation failures.                                | detail          |
| Connection down         | Time (in seconds) since the PCEP session is down.                 | detail          |

## Sample Output

### show path-computation-client statistics all

```

user@host> show path-computation-client statistics all
PCE pce1

General
  IP address      : 10.209.57.166
  Priority        : 2
  PCE status      : PCE_STATE_NEW
  Session type    : PCE_TYPE_STATEFULACTIVE
  PCE-mastership  : main

Counters
  PCReqs          Total: 0          last 5min: 0          last hour: 0
  PCReps          Total: 0          last 5min: 0          last hour: 0
  PCRpts          Total: 0          last 5min: 0          last hour: 0
  PCUpdates       Total: 0          last 5min: 0          last hour: 0

Timers
  Local          Keepalive timer:      0 [s]  Dead timer:      0 [s]

```



```

Remote           Keepalive timer:      0 [s]   Dead timer:      0 [s]

Errors
  PCErr-recv
  PCErr-sent
  PCE-PCC-NTFS
  PCC-PCE-NTFS

PCE pce2

General
  IP address      : 10.31.32.1
  Priority         : 10
  PCE status      : PCE_STATE_NEW
  Session type    : PCE_TYPE_STATEFULACTIVE
  PCE-mastership  : backup

Counters
  PCReqs          Total: 0           last 5min: 0       last hour: 0
  PCReps          Total: 0           last 5min: 0       last hour: 0
  PCRpts          Total: 0           last 5min: 0       last hour: 0
  PCUpdates       Total: 0           last 5min: 0       last hour: 0

Timers
  Local           Keepalive timer:      0 [s]   Dead timer:      0 [s]
  Remote          Keepalive timer:      0 [s]   Dead timer:      0 [s]

Errors
  PCErr-recv
  PCErr-sent
  PCE-PCC-NTFS
  PCC-PCE-NTFS

```

### show path-computation-client statistics detail

```

user@host> show path-computation-client statistics detail
PCE pce1
General
  IP address      : 10.209.57.166
  Priority         : 2
  PCE status      : PCE_STATE_NEW
  Session type    : PCE_TYPE_STATEFULACTIVE
  PCE-mastership  : main
  Max unknown messages : 5
  Keepalives received : 0
  Keepalives sent    : 0
  Dead timer       : 0 [s]
  Elapsed as main current : 294 [s]
  Elapsed as main total : 294 [s]
  Unknown msgs/min rate : 0
  Session failures   : 0
  Replies timedout   : 0
  Delegation timeout in : 26 [s]
  Delegation failures : 0
  Connection down    : 4 [s]

```

**Counters**

|           |          |              |              |
|-----------|----------|--------------|--------------|
| PCReqs    | Total: 0 | last 5min: 0 | last hour: 0 |
| PCReps    | Total: 0 | last 5min: 0 | last hour: 0 |
| PCRpts    | Total: 0 | last 5min: 0 | last hour: 0 |
| PCUpdates | Total: 0 | last 5min: 0 | last hour: 0 |

**Timers**

|        |                  |       |             |       |
|--------|------------------|-------|-------------|-------|
| Local  | Keepalive timer: | 0 [s] | Dead timer: | 0 [s] |
| Remote | Keepalive timer: | 0 [s] | Dead timer: | 0 [s] |

**Errors**

PCErr-recv  
PCErr-sent  
PCE-PCC-NTFS  
PCC-PCE-NTFS