

Junos Continuity Software User Guide (Junos OS Release 14.1R4 and Later Releases)

Published
2021-09-14

Juniper Networks, Inc.
1133 Innovation Way
Sunnyvale, California 94089
USA
408-745-2000
www.juniper.net

Juniper Networks, the Juniper Networks logo, Juniper, and Junos are registered trademarks of Juniper Networks, Inc. in the United States and other countries. All other trademarks, service marks, registered marks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

Junos Continuity Software User Guide (Junos OS Release 14.1R4 and Later Releases)
Copyright © 2021 Juniper Networks, Inc. All rights reserved.

The information in this document is current as of the date on the title page.

YEAR 2000 NOTICE

Juniper Networks hardware and software products are Year 2000 compliant. Junos OS has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

END USER LICENSE AGREEMENT

The Juniper Networks product that is the subject of this technical documentation consists of (or is intended for use with) Juniper Networks software. Use of such software is subject to the terms and conditions of the End User License Agreement ("EULA") posted at <https://support.juniper.net/support/eula/>. By downloading, installing or using such software, you agree to the terms and conditions of that EULA.

Table of Contents

[About This Guide | iv](#)

1

Overview

[Junos Continuity Software Overview | 2](#)

[Junos Continuity Software Overview | 2](#)

[Junos Continuity Software Package Naming Conventions | 4](#)

[Hardware Supported by Junos Continuity Software | 5](#)

[Using Junos Continuity Software to Upgrade Line Cards | 9](#)

[Line Card Upgrade Using Junos Continuity Software Overview | 9](#)

[Hardware Components Supported by Junos Continuity Software | 10](#)

[MPC2E NG | 10](#)

[MPC2E NG Q | 13](#)

[MPC3E-3D-NG | 15](#)

[MPC3E-3D-NG-Q | 18](#)

[MPC7E-MRATE | 20](#)

[MPC7E-10G | 24](#)

[MPC8E | 27](#)

[MPC9E | 30](#)

[MX2000-SFB2-S Enhanced Switch Fabric Board Description | 32](#)

[MIC MRATE | 36](#)

[PTX10K-LC1202-36MR Line Card | 39](#)

2

Installation

[Installing Junos Continuity Software | 47](#)

[Installing Junos Continuity Software Package to Support New Hardware | 47](#)

[Uninstalling Junos Continuity Software Package | 53](#)

About This Guide

Use this guide to get an understanding about the Junos Continuity Software, and learn how to install and uninstall the software on the router, and know about the hardware components that support this software. After completing the installation and basic configuration procedures covered in this guide, refer to the Junos OS documentation for information about further software configuration.

RELATED DOCUMENTATION

[Junos Continuity Software Download](#)

[Feature Explorer: Hardware Supported by Junos Continuity Software](#)

[FAQ: Junos Continuity Software for MX Series Routers](#)

1

PART

Overview

[Junos Continuity Software Overview | 2](#)

[Using Junos Continuity Software to Upgrade Line Cards | 9](#)

[Hardware Components Supported by Junos Continuity Software | 10](#)

Junos Continuity Software Overview

IN THIS CHAPTER

- [Junos Continuity Software Overview | 2](#)
- [Junos Continuity Software Package Naming Conventions | 4](#)
- [Hardware Supported by Junos Continuity Software | 5](#)

Junos Continuity Software Overview

Junos Continuity is a software package that enables you to deploy new hardware in the network without the need to upgrade Juniper Networks Junos operating system (Junos OS). Junos Continuity software works like a pluggable software module that enables you to deploy new hardware by providing the drivers and support files required to bring the hardware online. Each version of the Junos Continuity software package supports a specific type of hardware, such as Modular Port Concentrators (MPCs), power supply modules, and so on. You can download and install the Junos Continuity software package that supports the hardware component that you want to deploy.

You can install Junos Continuity software to add support for new hardware on elected releases of Junos OS. An elected release is a maintenance release of Junos OS, which supports Junos Continuity software. You need to download the Junos Continuity software package that is specific to the elected release.

Junos Continuity software standalone package is supported only on the MX240, MX480, MX960, and MX2000 Universal Routing Platforms.

You install the Junos Continuity software package to enable a router to support new hardware without the need to upgrade Junos OS. You can install the Junos Continuity software package as a standalone package or as a package bundled with Junos OS.

- **Install the Standalone Junos Continuity Plug-in**—You install the Standalone Junos Continuity Plug-in if the version of Junos OS that is installed on the router supports Junos Continuity software.
- **Install the Junos Continuity Plug-in Integrated with Junos OS**—You use the integrated package if the version of Junos OS that is installed on the router does not support the Standalone Junos Continuity Plug-in. For example, if you want to install Junos Continuity software on Junos OS Release 13.3, you

can use the integrated package that contains both Junos OS Release 15.1F4 and the Junos Continuity Plug-in. This is a one-step process to upgrade Junos OS to Junos OS Release 15.1F4 and also to install Junos Continuity software.

Table 1: Junos OS Support for Junos Continuity Software

Junos OS Release	Supports Junos Continuity ?	Description
Junos OS Release 14.1R4	Yes	<p>Install the Standalone Junos Continuity Plug-in and then make the line cards operational.</p> <p>Restart of the router is not required in this case.</p>
<p>Releases older than 14.1R4</p> <p>(For example, Junos OS Release 13.3)</p>	No	<p>Install the Junos Continuity Plug-in Integrated with Junos OS package. This package contains the Junos Continuity Plug-in and the Junos OS release that supports it.</p> <p>This method requires you to restart the router for the changes to take effect because installing the integrated package also results in upgrading Junos OS.</p>
Junos OS Release 14.2R3	Yes	<p>Install the Standalone Junos Continuity Plug-in and then make the line cards operational.</p>
<p>Junos OS Release 15.1F4</p> <p>Junos OS Release 15.1F5</p>	Yes	<p>For Junos OS Releases 15.1 and later, install the Standalone Junos Continuity Plug-in that is specific to the Junos OS release and then bring the line cards online.</p> <p>Restart of the router is not required.</p>

Release History Table

Release	Description
15.1	For Junos OS Releases 15.1 and later, install the Standalone Junos Continuity Plug-in that is specific to the Junos OS release and then bring the line cards online.

RELATED DOCUMENTATION

[Junos Continuity Software Package Naming Conventions | 4](#)

[Line Card Upgrade Using Junos Continuity Software Overview | 9](#)

[FAQ: Junos Continuity Software for MX Series Routers](#)

[Pathfinder: Hardware Supported by Junos Continuity Software](#)

Junos Continuity Software Package Naming Conventions

This topic describes the naming conventions that are followed for the Junos Continuity software standalone package and for the Junos Continuity software package bundled with Junos OS.

The Junos Continuity software standalone package has the following naming convention:

jam-package-name-architecture-bit-release-Cx.y.tgz

Where:

- *jam-package-name* is the name of the Junos Continuity software package.
- *architecture-bit* indicates the architecture that the package supports and the flavor of the operating system. For example, *architecture-bit* value x86-32 indicates that the software package is for 32-bit Junos OS and supports the x86 architecture.
- *release* is the Junos OS release that supports the Junos Continuity software package. The Junos Continuity software package is developed for a specific Junos OS release and can be used only with that release.
- *Cx.y* is the Junos Continuity software package version, where C represents Junos Continuity and *x.y* stands for the software release number—for example, 1.3.

For example, *jam-mpc7-8-9-x86-32-15.1F4.10-C1.6.tgz*.

The Junos Continuity software package bundled with Junos OS has the following naming convention:

package-name-jam-platform-architecture-bit-release-Nx.y.tgz

Where:

- *package-name* is the name of the bundled package.
- *jam* indicates the presence of Junos Continuity software.
- *platform* is the hardware platform that supports the package. For example, the *platform* value *mx* indicates that the package is for MX Series 5G Universal Routing Platforms.
- *architecture-bit* indicates the architecture that the package supports and the flavor of the operating system. For example, *architecture-bit* value *x86-32* indicates that the software package is for 32-bit Junos OS and supports the x86 architecture.
- *release* is the Junos OS release that is used in the bundled package.
- *Nx.y* is the integrated Junos Continuity software package version, where *N* represents the Junos Continuity software package bundled with Junos OS and *x.y* stands for the software release number—for example, 1.2.

The integrated package may contain one more Junos Continuity software packages.

For example, `junos-install-jam-mx-x86-32-15.1F4.10-N1.6.tgz`.

RELATED DOCUMENTATION

[Junos Continuity Software Overview](#) | 2

Hardware Supported by Junos Continuity Software

Junos Continuity software enables the routers to support new hardware without upgrading Junos OS. Support for new hardware depends on the Junos Continuity package that is installed on the router.

[Table 2 on page 6](#) lists the Junos Continuity software package name, the corresponding Junos OS release, and the list of hardware components that Junos Continuity software support.

Table 2: Junos Continuity Package Version, Supported Junos OS Release, and the Supported Hardware

Junos Continuity Package Name	Junos OS Release	Supported Hardware	Description
jam-mpc-2e-3e-ng64	Junos OS Release 14.1R4	<ul style="list-style-type: none"> • MPC3E-3D-NG-Q • MPC3E-3D-NG • MPC2E-3D-NG-Q • MPC2E-3D-NG 	Junos Continuity software package for 64-bit Junos OS.
jam-mpc-2e-3e-ng	Junos OS Release 14.1R4	<ul style="list-style-type: none"> • MPC3E-3D-NG-Q • MPC3E-3D-NG • MPC2E-3D-NG-Q • MPC2E-3D-NG 	Junos Continuity software package for 32-bit Junos OS.
jam-mpc-2e-3e-ng64	Junos OS Release 14.3R3	<ul style="list-style-type: none"> • MPC3E-3D-NG-Q • MPC3E-3D-NG • MPC2E-3D-NG-Q • MPC2E-3D-NG 	Junos Continuity software package for 64-bit version of Junos OS.
jam-mpc7-8-9-x86-32-15.1F4.15-C1.9.tgz	Junos OS Release 15.1F4	MPC7E-MRATE	Junos Continuity software package for 32-bit Junos OS.

Table 2: Junos Continuity Package Version, Supported Junos OS Release, and the Supported Hardware
(Continued)

Junos Continuity Package Name	Junos OS Release	Supported Hardware	Description
jam-mpc7-8-9-x86-64-15.1F4.15-C1.9.tgz			Junos Continuity software package for 64-bit Junos OS.
junos-install-jam-mx-x86-32-15.1F4.15-N1.9.tgz			Junos Continuity software package bundled with Junos OS for 32-bit Junos OS
junos-install-jam-mx-x86-64-15.1F4.15-N1.9.tgz			Junos Continuity software package bundled with Junos OS for 64-bit Junos OS
jam-mpc7-8-9-x86-32-15.1F5.15-C1.12.tgz	Junos OS Release 15.1F5	MPC7E-MRATE	Junos Continuity software package for 32-bit Junos OS.
		MPC8E	
		MPC9E	Junos Continuity software package for 64-bit Junos OS.
jam-mpc7-8-9-x86-64-15.1F5.15-C1.12.tgz		MIC-MRATE	
		SFB2	Junos Continuity software package bundled with Junos OS for 32-bit Junos OS
junos-install-jam-mx-x86-32-15.1F5.15-N1.12.tgz		MPC7E-10G	
junos-install-jam-mx-x86-64-15.1F5.15-N1.12.tgz			Junos Continuity software package bundled with Junos OS for 64-bit Junos OS

RELATED DOCUMENTATION

[Junos Continuity Software Overview | 2](#)

[Pathfinder: Hardware Supported by Junos Continuity Software](#)

Using Junos Continuity Software to Upgrade Line Cards

IN THIS CHAPTER

- [Line Card Upgrade Using Junos Continuity Software Overview | 9](#)

Line Card Upgrade Using Junos Continuity Software Overview

You can deploy new line cards on a router by installing Junos Continuity software, a software package that enables a router to support new hardware. With Junos Continuity, you can deploy new line cards without the need to upgrade Junos OS. You can just install the Junos Continuity Plug-in and bring the line cards online. Without Junos Continuity, you must upgrade Junos OS to support a new line card. You can bring the new line card online by using the `request chassis fpc slot-number online` command.

Because Junos OS upgrade is not required, this method of upgrading line hardware helps faster deployment of the new line cards and eliminates the time required for software release requalification. To support new hardware, you only need to install the Junos Continuity software package that is specific to the new hardware that you want to install.

NOTE: If graceful Routing Engine switchover (GRES) is enabled, you must install the Junos Continuity software package on both the primary and the backup Routing Engines to ensure that the line cards remain operational after a Routing Engine switchover.

RELATED DOCUMENTATION

[Junos Continuity Software Overview | 2](#)

[Installing Junos Continuity Software Package to Support New Hardware | 47](#)

[Junos Continuity Software Package Naming Conventions | 4](#)

[Uninstalling Junos Continuity Software Package | 53](#)


CHAPTER 3

Hardware Components Supported by Junos Continuity Software

IN THIS CHAPTER

- MPC2E NG | 10
- MPC2E NG Q | 13
- MPC3E-3D-NG | 15
- MPC3E-3D-NG-Q | 18
- MPC7E-MRATE | 20
- MPC7E-10G | 24
- MPC8E | 27
- MPC9E | 30
- MX2000-SFB2-S Enhanced Switch Fabric Board Description | 32
- MIC MRATE | 36
- PTX10K-LC1202-36MR Line Card | 39

MPC2E NG

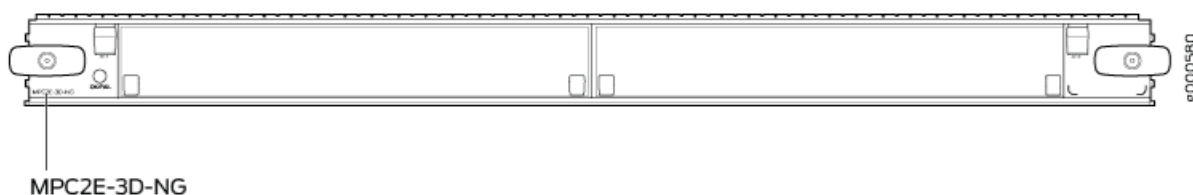

- Software release
- Junos OS releases 14.1R4, 14.2R3 and Junos Continuity, Junos OS release 15.1 and later.
 - Refer to [MIC/MPC Compatibility](#) for information about which MICs are supported on this MPC.
 - Refer to the JTAC Knowledgebase article <https://kb.juniper.net/KB21476> for recommended software releases.

- Description
- 80 Gbps capacity without hierarchical quality of service (HQoS)
 - Requires high-capacity fan trays and high-capacity filter trays
 - Weight: 15.96 lb (7.26 kg)
 - Model numbers: MPC2E-3D-NG
 - Name in the CLI: MPC2E NG PQ & Flex Q
 - Add-on license provides limited additional flexible queuing.
- NOTE:** MPC2E-3D-NG is not compatible with SCB, you must use either SCBE-MX or SCBE2-MX for the switch fabric interface.

- Hardware features
- Line-rate throughput of up to 80 Gbps
 - Supports WAN-PHY mode at 9.95 Gbps and LAN-PHY mode at 10.31 Gbps
 - Two slots for MICs
 - Junos Trio chipsets for increased scaling for bandwidth, subscribers, and services.
- NOTE:** MPC2E-3D-NG is not compatible with SCB, you must use either SCBE-MX or SCBE2-MX for the switch fabric interface.
- NOTE:** MPC2E-3D-NG does not support MIC3-3D-10XGE-SFPP, MIC3-3D-1X100GE-CFP, MIC3-3D-1X100GE-CXP, and MIC3-3D-2X40GE-QSFPP.
- NOTE:** The non-HQOS MPC3E NG and MPC2E NG MPCs support MIC-3D-8CHOC3-4CHOC12 and MIC-3D-4CHOC3-2CHOC12 only with a limited queuing license.

Software features	<ul style="list-style-type: none"> • Chained composite next hops • Layer 3 VPN localization • Detection of Layer 2 loops • Entropy label support in mixed mode • SNMP and CLI support for Routing Engine memory monitoring • Mixed-mode LAG support on core interfaces • Dynamic power management for MICs • Support for flexible-queuing • See Protocols and Applications Supported by the MX240, MX480, MX960, MX2010, and MX2020 MPC2E for information about the protocols and applications that this MPC supports.
-------------------	---

Power requirement	Maximum with highest-power MICs at 55° C: 9.88 A @ 48 V (474 W)
-------------------	---

At different temperatures:

- 55° C: 474 W
- 40° C: 417 W
- 25° C: 400 W

LEDs	OK/FAIL LED , one bicolor: <ul style="list-style-type: none"> • Steady green—MPC is functioning normally. • Blinking green—MPC is transitioning online or offline. • Red—MPC has failed.
------	--


RELATED DOCUMENTATION

[MX Series MPC Overview](#)

[MPCs Supported by MX Series Routers](#)

[Junos Continuity Software](#)

MPC2E NG Q

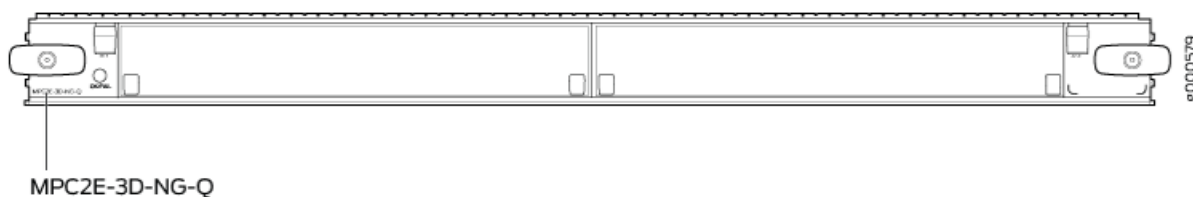

Software release

- Junos OS releases 14.1R4, 14.2R3 and Junos Continuity, Junos OS release 15.1 and later.
- Refer to [MIC/MPC Compatibility](#) for information about which MICs are supported on this MPC.
- Refer to the JTAC Knowledgebase article <https://kb.juniper.net/KB21476> for recommended software releases.

Description

- 80 Gbps capacity with hierarchical quality of service (HQoS)
- Requires high-capacity fan trays and high capacity filter trays
- Weight: 15.96 lb (7.26 kg)
- Model number: MPC2E-3D-NG-Q
- Name in the CLI: MPC2E NG HQoS

NOTE: MPC2E-3D-NG-Q is not compatible with SCB, you must use either SCBE-MX or SCBE2-MX for the switch fabric interface.

- Hardware features
- Line-rate throughput of up to 80 Gbps
 - Supports up to 512,000 queues per slot
 - Supports WAN-PHY mode at 9.95 Gbps and LAN-PHY mode at 10.31 Gbps
 - Two slots for MICs
 - Junos Trio chipsets for increased scaling for bandwidth, subscribers, and services.

NOTE: The MPC2E-3D-NG-Q has only one lookup chip (LU).

NOTE: MPC2E-3D-NG-Q does not support MIC3-3D-10XGE-SFPP, MIC3-3D-1X100GE-CFP, MIC3-3D-1X100GE-CXP, and MIC3-3D-2X40GE-QSFPP.

-
- Software features
- Chained composite next hops
 - Layer 3 VPN localization
 - Detection of Layer 2 loops
 - Entropy label support in mixed mode
 - SNMP and CLI support for Routing Engine memory monitoring
 - BFD support for inline MLPPP/MLFR
 - Mixed Mode LAG support on core interfaces
 - Dynamic power management for MICs
 - See [Protocols and Applications Supported by the MX240, MX480, MX960, MX2010, and MX2020 MPC2E](#) for information about the protocols and applications that this MPC supports.
-

Power requirement Maximum with highest-power MICs at 55° C: 11.02 A @ 48 V (529 W)

At different temperatures:

- 55° C: 529 W
- 40° C: 460 W
- 25° C: 438 W

LEDs

OK/FAIL LED, one bicolor:

- Steady green—MPC is functioning normally.
 - Blinking green—MPC is transitioning online or offline.
 - Red—MPC has failed.
-


RELATED DOCUMENTATION

[MX Series MPC Overview](#)

[MPCs Supported by MX Series Routers](#)

[Junos Continuity Software](#)

MPC3E-3D-NG

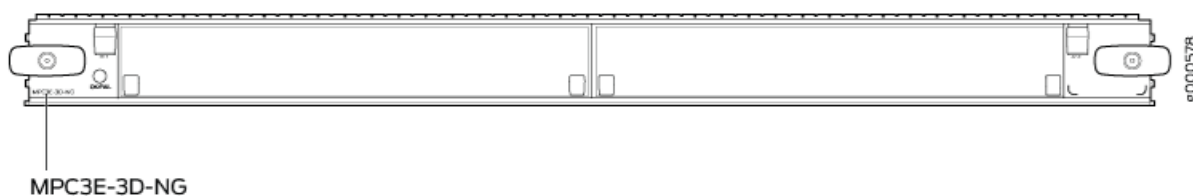

- Software release
- Junos OS releases 14.1R4, 14.2R3 and Junos Continuity, Junos OS release 15.1 and later.
 - Refer to [MIC/MPC Compatibility](#) for information about which MICs are supported on this MPC.
 - Refer to the JTAC Knowledgebase article <https://kb.juniper.net/KB21476> for recommended software releases.
-

- Description
- 130 Gbps capacity without hierarchical quality of service (HQoS)
 - Requires high-capacity fan trays and high-capacity filter trays
 - Weight: 15.96 lb (7.26 kg)
 - Model number: MPC3E-3D-NG
 - Name in the CLI: MPC3E NG PQ & Flex Q
 - Add-on license provides limited additional flexible queuing.
-

- Hardware features
- Line-rate throughput of up to 130 Gbps
 - Supports WAN-PHY mode at 9.95 Gbps and LAN-PHY mode at 10.31 Gbps
 - Supports maximum transmission unit (MTU) size of 9,192 bytes for host bound packets. For Junos OS 16.1R1 and later releases, the MTU size supported is 9,500 bytes.
 - Two slots for MICs
 - Junos Trio chipsets for increased scaling for bandwidth, subscribers, and services

NOTE: The non-HQOS MPC3E NG and MPC2E NG MPCs support MIC-3D-8CHOC3-4CHOC12 and MIC-3D-4CHOC3-2CHOC12 only with a limited queuing license.

NOTE: The MPC3E-3D-NG requires high-capacity power supplies, high-capacity fan trays, and enhanced switch control boards (SCBE, SCBE2, or SCBE3) on MX240, MX480, and MX960 routers.

Software features	<ul style="list-style-type: none">• Chained composite next hops• Layer 3 VPN localization• Detection of Layer 2 loops• Entropy label support in mixed mode• SNMP and CLI support for Routing Engine memory monitoring• Mixed Mode LAG support on core interfaces• Dynamic power management for MICs• Support for flexible-queuing• See Protocols and Applications Supported by the MPC3E on MX Series Routers for information about the protocols and applications that this MPC supports.
-------------------	--

Power requirement	Maximum with highest-power MICs at 55° C: 11.13 A @ 48 V (534 W)
-------------------	--

At different temperatures:

- 55° C: 534 W
- 40° C: 485 W
- 25° C: 461 W

LEDs	OK/FAIL LED , one bicolor: <ul style="list-style-type: none">• Steady green—MPC is functioning normally.• Blinking green—MPC is transitioning online or offline.• Red—MPC has failed.
------	--

NOTE:


RELATED DOCUMENTATION

[MX Series MPC Overview](#)

[MPCs Supported by MX Series Routers](#)

[Junos Continuity Software](#)

MPC3E-3D-NG-Q

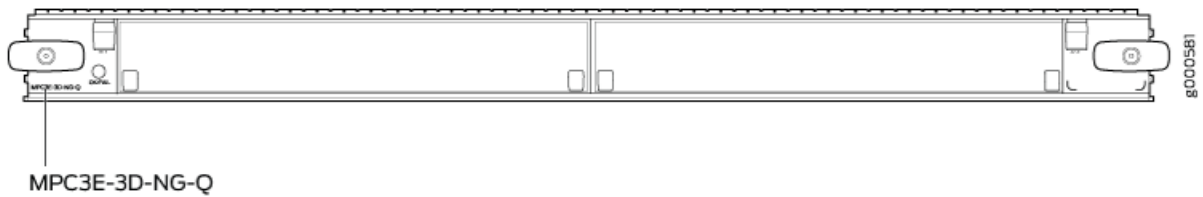

- Software release
- Junos OS releases 14.1R4, 14.2R3 and Junos Continuity, Junos OS release 15.1 and later.
 - Refer to [MIC/MPC Compatibility](#) for information about which MICs are supported on this MPC.
 - Refer to the JTAC Knowledgebase article <https://kb.juniper.net/KB21476> for recommended software releases.

- Description
- 130 Gbps capacity with hierarchical quality of service (HQoS)
 - Requires high-capacity fan trays and high-capacity filter trays
 - Weight: 15.96 lb (7.26 kg)
 - Model number: MPC3E-3D-NG-Q
 - Name in the CLI: MPC3E NG HQoS

NOTE: MPC3E-3D-NG-Q is not compatible with SCB, you must use either SCBE-MX or SCBE2-MX for the switch fabric interface.

- Hardware features
- Line-rate throughput of up to 130 Gbps
 - Supports up to 512,000 queues per slot
 - Supports WAN-PHY mode at 9.95 Gbps and LAN-PHY mode at 10.31 Gbps
 - Supports maximum transmission unit (MTU) size of 9,192 bytes for host bound packets. For Junos OS 16.1R1 and later releases, the MTU size supported is 9,500 bytes.
 - Two slots for MICs
 - Junos Trio chipsets for increased scaling for bandwidth, subscribers, and services

-
- Software features
- Chained composite next hops
 - Layer 3 VPN localization
 - Detection of Layer 2 loops
 - Entropy label support in mixed mode
 - SNMP and CLI support for Routing Engine memory monitoring
 - BFD support for inline MLPPP/MLFR
 - Mixed Mode LAG support on core interfaces
 - Dynamic power management for MICs
 - See [Protocols and Applications Supported by the MPC3E on MX Series Routers](#) for information about the protocols and applications that this MPC supports.

Power requirement Maximum with highest-power MICs at 55° C: 12.15 A @ 48 V (583 W)

At different temperatures:

- 55° C: 583 W
 - 40° C: 532 W
 - 25° C: 503 W
-

LEDs

OK/FAIL LED, one bicolor:

- Steady green—MPC is functioning normally.
- Blinking green—MPC is transitioning online or offline.
- Red—MPC has failed.

NOTE:


RELATED DOCUMENTATION

[MX Series MPC Overview](#)

[MPCs Supported by MX Series Routers](#)

[Junos Continuity Software](#)

MPC7E-MRATE

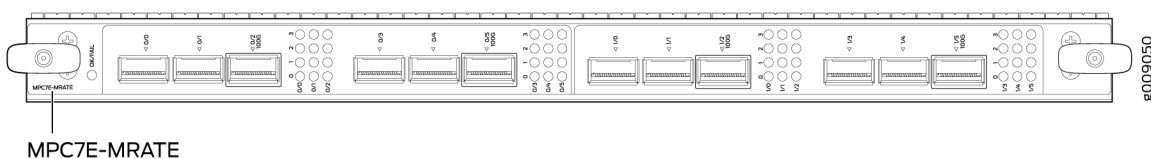

Software release

- Junos OS Release 15.1F4 with Junos Continuity.
 - Junos OS Release 15.1F6 and later.
 - Junos OS release 16.1R1 and later.
-

Description	<ul style="list-style-type: none">• Fixed-configuration MPC with 10-Gbps, 40-Gbps, and 100-Gbps port speeds• Weight: 15.7 lb (7.12 kg)• Model number: MPC7E-MRATE• Name in the CLI: MPC7E-MRATE
-------------	--

Hardware features

- Line-rate throughput of up to 480 Gbps on MX240, MX480, and MX960 routers.
- Line-rate throughput of up to 400 Gbps on MX2000 routers with SFB, and up to 430 Gbps on MX2000 routers with SFB2.
- Junos Trio chipsets for increased scaling for bandwidth, subscribers, and services
- Twelve Gigabit Ethernet ports that can be configured as 40-Gigabit Ethernet port or as four 10-Gigabit Ethernet ports using a breakout cable. The ports support quad small-form factor pluggable plus (QSFP+) transceivers. The 40Gbps or 100Gbps ports configured to run at 10Gbps speed are shown in the CLI as follows:

```
show interfaces terse
```

Interface	Admin	Link	Proto	Local	Remote
xe-10/0/0:0	up	down			
xe-10/0/0:1	up	down			
xe-10/0/0:2	up	down			
xe-10/0/0:3	up	down			

- Four out of the twelve ports can be configured as 100-Gigabit Ethernet ports. Port numbers **0/2**, **0/5**, **1/2** and **1/5** are the four 100-Gigabit Ethernet ports.
 - You can configure different combination of port speeds as long as the aggregate capacity per group of six ports labeled **0/0** through **0/5** does not exceed 240 Gbps. Similarly, aggregate capacity per group of the other six ports labeled **1/0** through **1/5** should not exceed 240 Gbps.
 - Requires high-capacity power supplies, high-capacity fan trays, and SCBE2 or SCBE3 switch control boards on MX240, MX480, and MX960 routers.
 - Requires an adapter card to be housed in MX2000 routers.
 - The ports are labeled as (with the MPC orientation as shown in the above figure):
 - 10-Gigabit Ethernet or 40-Gigabit Ethernet ports:
0/0, **0/1**, **0/2 100G**, **0/3**, **0/4**, **0/5 100G**, **1/0**, **1/1**, **1/2 100G**, **1/3**, **1/4**, and **1/5 100G**
 - 100-Gigabit Ethernet ports:
0/2 100G, **0/5 100G**, **1/2 100G** and **1/5 100G**
-

NOTE: Only ports marked **100G** support 100-Gigabit Ethernet speed using QSFP28 transceivers.

- Supports maximum transmission units (MTUs) from 256 bytes through 16,000 bytes for transit traffic, and from 256 bytes through 9,500 bytes for host bound packets.

NOTE: On MX960 routers, all the MPC slots can be occupied by MPC7E MRATE line cards at an ambient temperature of up to 40° C and at any altitude. All the MPC slots can be occupied by an MPC7E MRATE line card at temperatures of up to 55° C and at sea level. At an ambient temperature of above 55° C, and at an altitude above sea level, slot **11** cannot host MPC7E MRATE line cards.

Software features

- Supports rate selectability at the port level.
- By default, the ports are configured as 10-Gigabit Ethernet ports.
- Optical diagnostics and related alarms
- See [Protocols and Applications Supported by the MPC7E for MX Series Routers](#) for information about the protocols and applications that the MPC7E supports.

NOTE: On MX240, MX480, and MX960 routers, the MPC7E powers on only if the network-services mode on the router is configured as either **enhanced-ip** or **enhanced-ethernet**. On MX2000 router no additional configuration is required as by default the router operates in **enhanced-ip** mode.

Cables and connectors

TIP: You can use the [Hardware Compatibility Tool](#) to find information about the pluggable transceivers supported on your Juniper Networks device.

The list of supported transceivers for the MX Series is located at <https://pathfinder.juniper.net/hct/category/#catKey=100001&modelType;=All&pf;=MX+Series>.

Power requirements


- At different temperatures:
 55° C: 545 W
 40° C: 465 W
 25° C: 440 W
-

LEDs**OK/FAIL LED**, one bicolor:

- Steady green—MPC is functioning normally.
- Yellow—MPC has failed.

LINK LED, one green per port (4 per QSFP+ cage):

- Steady green—Link is up.
- Off—Link is down or disabled.

RELATED DOCUMENTATION
[MPCs Supported by MX Series Routers](#)
[Junos Continuity Software User Guide \(Junos OS Release 14.1R4 and Later Releases\)](#)
MPC7E-10G

MPC7E-10G

Software release

- Junos OS Release 15.1F5 with Junos Continuity
- Junos OS release 16.1R1 and later

Description

- Fixed-configuration MPC with forty 10-Gbps ports
- Weight: 17 lb (7.7 kg)
- Model number: MPC7E-10G
- Name in the CLI: MPC7E 3D 40XGE

- Hardware features
- Line-rate throughput of up to 400 Gbps on MX240, MX480, and MX960 routers.
 - Line-rate throughput of up to 400 Gbps on MX2000 routers.
 - Junos Trio chipsets for increased scaling for bandwidth, subscribers, and services.
 - Forty 10-Gigabit Ethernet ports. The ports support SFP+ transceivers.
 - Requires high-capacity power supplies, high-capacity fan trays, and SCBE2 or SCBE3 switch control boards on MX240, MX480, and MX960 routers.
 - Requires an adapter card to be housed in MX2000 routers.
 - Supports maximum transmission units (MTUs) from 256 bytes through 16,000 bytes for transit traffic, and from 256 bytes through 9,500 bytes for host bound packets.
 - The ports are labeled as (with the MPC orientation as shown in the figure):
 - **0/0** through **0/9**
 - **0/10** through **0/19**
 - **1/0** through **1/9**
 - **1/10** through **1/19**

-
- Software features
- Supports MACsec using the following encryption algorithms: gcm-aes-128, gcm-aes-xpn-128, gcm-aes-256, and gcm-aes-xpn-256.
 - Supports [Hyper mode](#) to speed up packet processing.
 - Supports [Flexible queuing](#) using an add-on license to support 32,000 queues per line card, including queues on both ingress and egress interfaces. You can use an additional license to support up to 512,000 queues.
 - Optical diagnostics and related alarms
 - See [Protocols and Applications Supported by the MPC7E for MX Series Routers](#) for information about the protocols and applications that MPC7Es support.

NOTE: On MX240, MX480, and MX960 routers, MPC7E powers on only if the network-services mode on the router is configured as either **enhanced-ip** or **enhanced-ethernet**. On MX2000 routers, no additional configuration is required because by default the router operates in **enhanced-ip** mode.

Cables and connectors

TIP: You can use the [Hardware Compatibility Tool](#) to find information about the pluggable transceivers supported on your Juniper Networks device.

The list of supported transceivers for the MX Series is located at <https://pathfinder.juniper.net/hct/category/#catKey=100001&modelType;=All&pf;=MX+Series>.

- 10GBASE-ZR (model number: SFPP-10G-ZR-OTN-XT)

NOTE: MPC7E-10G does not support OTN rates.

- 10GBASE-ZR (model number: SFPP-10G-DT-ZRC2)

NOTE:

- Supported from Junos OS release 16.1R1 and later.
- Supports 40° C ambient temperature operation at any altitude, and 55° C ambient temperature operation at sea level.

Power requirements

- Typical: 405 W
- At different temperatures:
55° C: 500 W
40° C: 465 W
25° C: 430 W

NOTE: On MX960 routers, all the MPC slots can be occupied by MPC7E-10G at an ambient temperature of up to 40° C and at any altitude. All the MPC slots can be occupied by MPC7E-10G at temperatures of up to 55° C and at sea level. At an ambient temperature of above 55° C, and at an altitude above sea level, slot **11** cannot host MPC7E-10G.

LEDs

OK/FAIL LED, one bicolor:

- Steady green—MPC is functioning normally.
- Yellow—MPC has failed.


Link LED, one green per port:

- Steady green—Link is up.
- Off—Link is down or disabled.

RELATED DOCUMENTATION

MX Series MPC Overview
MPCs Supported by MX Series Routers
Junos Continuity Software User Guide (Junos OS Release 14.1R4 and Later Releases)

MPC8E

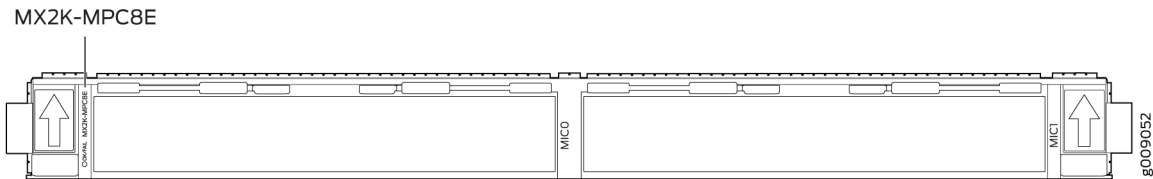

Software release	<ul style="list-style-type: none">• Junos OS Release 15.1F5 with Junos Continuity• Junos OS release 16.1R1 and later
------------------	---

Description	<ul style="list-style-type: none">• Weight: 31.4 lb (14.24 kg) (net weight without blank panels)• Model number: MX2K-MPC8E• Name in the CLI: MPC8E 3D
-------------	---

Hardware features

- Line-rate throughput of up to 960 Gbps on the MX2000 routers.
- Line-rate throughput of up to 1600 Gbps (1.6 Tbps) on the MX2000 routers with software upgrade.

NOTE: Starting from Junos OS Release 16.1R1, you can upgrade MPC8E to provide an increased bandwidth of 1600 Gbps (1.6 Tbps) by using an add-on license. After you perform the upgrade, MPC8E provides a bandwidth of 1.6 Tbps, which is equivalent to the bandwidth of ["MPC9E" on page 30](#). However, the MPC continues to be identified as MPC8E.

- Four Packet Forwarding Engines, each providing a maximum bandwidth of 240 Gbps in normal mode and 400 Gbps in 1.6Tbps upgraded mode. A license is required to operate in 1.6 Tbps upgraded mode.
- Supports two MICs. For information about which MICs are supported on this MPC, see [MIC/MPC Compatibility](#).
- Junos Trio chipsets for increased scaling for bandwidth, subscribers, and services.
- Supports the Switch Fabric Boards SFB and SFB2. When MPC8E is used with SFB, the line-rate throughput is limited to 800 Gbps.
- Supports maximum transmission units (MTUs) from 256 bytes through 16,000 bytes for transit traffic, and from 256 bytes through 9,500 bytes for host bound packets.

Software features

- [Dynamic power management](#) for effective utilization of available power.
- [Inline flow monitoring](#) for higher scalability and performance.
- [Flexible queuing](#) using an add-on license to support 32,000 queues per line card, including queues on both ingress and egress interfaces. You can use an additional license to support up to 512,000 queues per slot or 1,000,000 queues per slot.
- [Hyper mode](#) to speed up packet processing.
- Optical diagnostics and related alarms.

For more information about features supported on MPC8E, see [Protocols and Applications Supported by the MPC8E and MPC9E on the MX2010 and MX2020 Routers](#).


Power requirements (without MICs)	<p>Normal mode with line-rate throughput of 960 Gbps:</p> <ul style="list-style-type: none">• Typical: 688 W• At different temperatures:<ul style="list-style-type: none">55° C: 805 W40° C: 720 W25° C: 690 W <p>Upgrade mode with line-rate throughput of 1.6 Tbps:</p> <ul style="list-style-type: none">• Typical: 838 W• At different temperatures:<ul style="list-style-type: none">55° C: 1018 W40° C: 870 W25° C: 840 W
--------------------------------------	---

LEDs	<p>OK/FAIL LED, one bicolor:</p> <ul style="list-style-type: none">• Steady green—MPC is functioning normally.• Yellow—MPC has failed.
------	--

RELATED DOCUMENTATION

MPCs Supported by MX Series Routers
Junos Continuity Software User Guide (Junos OS Release 14.1R4 and Later Releases)
<i>Port Speed for Routing Devices</i>

MPC9E

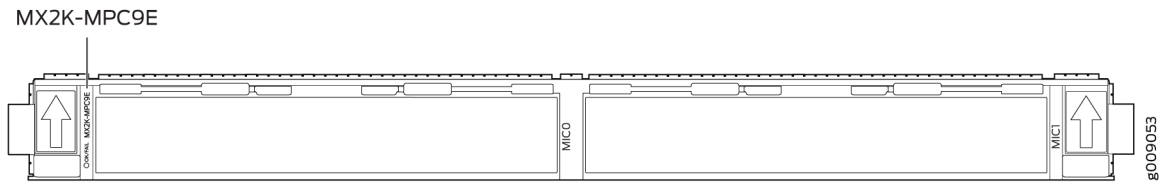

Software release	<ul style="list-style-type: none"> Junos OS Release 15.1F5 with Junos Continuity Junos OS release 16.1R1 and later
Description	<ul style="list-style-type: none"> Weight: 31.4 lb (14.24 kg) (net weight without blank panels) Model number: MX2K-MPC9E Name in the CLI: MPC9E 3D
Hardware features	<ul style="list-style-type: none"> Line-rate throughput of up to 1600 Gbps (1.6 Tbps) on MX2000 routers. Four Packet Forwarding Engines, each providing a maximum bandwidth of 400 Gbps. Supports two MICs. For information about which MICs are supported on this MPC, see MIC/MPC Compatibility. Junos Trio chipsets for increased scaling for bandwidth, subscribers, and services Supports the Switch Fabric Boards SFB and SFB2. When MPC9E is used with SFB, the line-rate throughput is limited to 800 Gbps. Supports maximum transmission units (MTUs) from 256 bytes through 16,000 bytes for transit traffic, and from 256 bytes through 9,500 bytes for host bound packets.

- Software features
- [Understanding How Dynamic Power Management Enables Better Utilization of Power](#) for effective utilization of available power.
 - *Inline Active Flow Monitoring* for higher scalability and performance.
 - *Flexible Queuing Mode* using an add-on license to support 32,000 queues per line card, including queues on both ingress and egress interfaces. You can use an additional license to support up to 512,000 queues per slot or 1,000,000 queues per slot.
 - *Hyper Mode* to speed up packet processing.
 - Optical diagnostics and related alarms.

For more information about features supported on MPC9E, see [Protocols and Applications Supported by the MPC8E and MPC9E on the MX2010 and MX2020 Routers](#).

- Power requirements
(without MICs)
- Typical: 838 W
 - At different temperatures:
 - 55° C: 1018 W
 - 40° C: 870 W
 - 25° C: 840 W

- LEDs
- OK/FAIL LED, one bicolor:
- Steady green—MPC is functioning normally.
 - Yellow—MPC has failed.

RELATED DOCUMENTATION

[MPCs Supported by MX Series Routers](#)

[Junos Continuity Software User Guide \(Junos OS Release 14.1R4 and Later Releases\)](#)

Port Speed for Routing Devices

MX2000-SFB2-S Enhanced Switch Fabric Board Description

MX2000-SFB2-S enhanced switch fabric boards (SFB2) create a highly scalable and resilient “all-active” centralized switch fabric that delivers up to 2 Tbps of full-duplex switching capacity to each Modular Port Concentrator (MPC) in an MX2000 series router. Each SFB2 hosts one switch fabric plane made of three fabric chipsets. You can install up to eight SFB2s in an MX2000 series router. Only seven SFB2s are required for line rate operation.


Note that you can't mix switch fabric board models (SFB, SFB2, SFB3) in a single MX2000 series router chassis. If you upgrade from an SFB to an SFB2, the MX2000 routers will support both the SFB and SFB2 at the same time but only for the duration of the upgrade.

The MX2000-SFB2-S switch fabric board straddles the two backplanes. It has connectors connecting to both backplanes.

NOTE: The MX2000 SFB and the MX2000 SFB2 Enhanced Switch Fabric Board are the same except that the SFB has two PF fabric chips per card whereas the SFB2 has three XF fabric chips per card.

Figure 1 on page 33 shows the MX2000 Enhanced Switch Fabric Board (SFB).

Figure 1: MX2000-SFB2-S Enhanced Switch Fabric Board

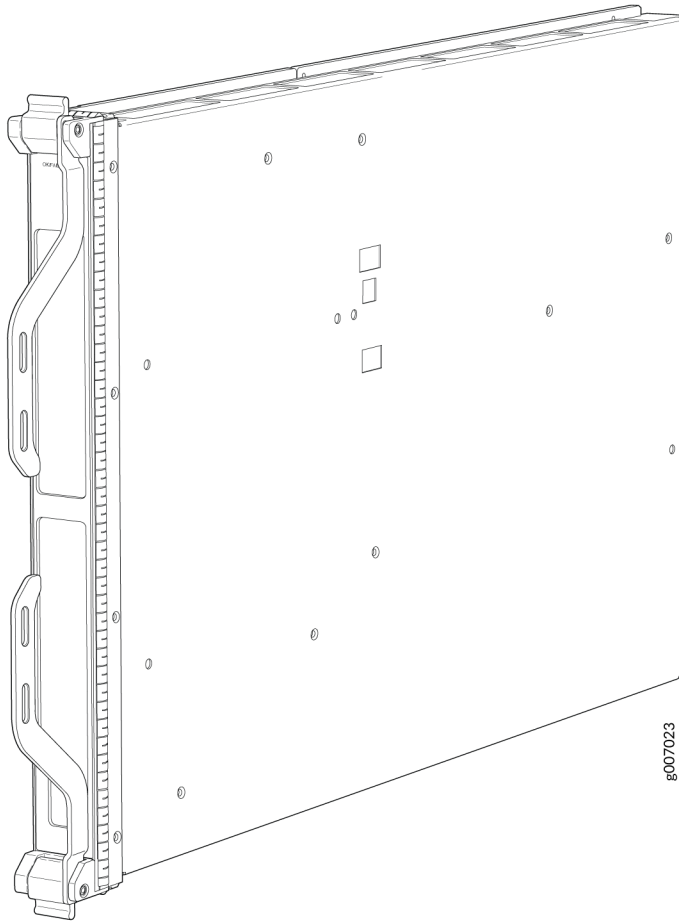

Software release

- Junos OS Release 11.4 and later
- Name in CLI: Switch Fabric Board

Features and Components	<p>The MX2000-SFB2-S provides:</p> <ul style="list-style-type: none">• PCIe control of three XF fabric chips per card.• I2C bus logic interface for managing component managements and monitoring temperature and voltage• Switching functions for MPCs• 2 Tbps per slot with eight SFB2s and 1.7 Tbps per slot with seven SFB2s
SFB2 Slots	<p>You can install up to eight SFB2s in an MX2000 router. The SFB2s install vertically into the front of the chassis in the slots labeled 0 through 7. If any slots are empty, you must install a blank panel.</p> <p>Slot 0 must always have a functioning SFB2. If the SFB2 in slot 0 fails, replace it with a functioning SFB2 from another slot, and then install a blank panel in the other slot. If slots 1 through 7 are empty, install a blank panel in them. You cannot install a blank panel in slot 0.</p> <p>CAUTION: If an SFB2 fails, don't remove it until you have a replacement SFB2 or blank panel ready to install.</p>
SFB2 Redundancy	<p>For line rate operation, the MX2000 series router must have at least seven SFB2s installed. Although MX2000 routers can operate with fewer than seven SFB2s, packet forwarding performance is impacted.</p>
Weight and Dimensions	<ul style="list-style-type: none">• Weight: 16 lb (7.2 kg)• Width: 1.7 in. (4.31 cm)• Depth: 23.6 in. (59.94 cm). With ejector handle: 26.14 in. (66.39 cm)• Height: 16.225 in. (41.21 cm)

Maximum Power Requirements (without MICs)	<p>MX2020:</p> <ul style="list-style-type: none"> • Typical: 250 W • At different temperatures: <ul style="list-style-type: none"> 295 W at 55° C 280 W at 40° C 270 W at 25° C <p>MX2010:</p> <ul style="list-style-type: none"> • Typical: 220 W • At different temperatures: <ul style="list-style-type: none"> 265 W at 55° C 250 W at 40° C 240 W at 25° C
LEDs	<p>See MX2000 Switch Fabric Board LED for a description of the SFB2 LED functions.</p> <p>Each SFB2 also has a set of bicolor LEDs on the craft interface that indicate its status. The SFB2 LEDs, labeled 0 through 7, are located along the bottom center of the craft interface.</p>
Upgrades	<p>During an upgrade from SFB to SFB2, MX2000 series routers support both SFB and SFB2 at the same time for the duration of the upgrade.</p>

RELATED DOCUMENTATION

[MX2000 Switch Fabric Board LED](#)

[MX2000 Host Subsystem CB-RE Description](#)


[Replacing an MX2000 SFB](#)

[Understanding Fabric Fault Handling on Enhanced Switch Fabric Board \(SFB2\)](#)

[Performing a Smooth Upgrade to Enhanced Switch Fabric Board \(SFB2\) with Minimal Impact on Traffic](#)

MIC MRATE

Figure 2: 12-Port Multi-Rate MIC with QSFP+

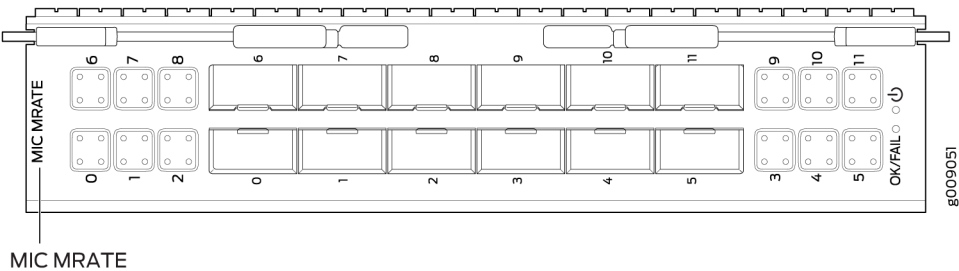

- Software release
- Junos OS Release 15.1F5 with Junos Continuity
 - Junos OS release 16.1R1 and later

For information about which MPCs support this MIC, see [MIC/MPC Compatibility](#). For information about which MICs are supported on MX Series routers, see [MICs Supported by MX Series Routers](#).

- Description
- Twelve Gigabit Ethernet ports that support quad small form-factor pluggable plus (QSFP+) transceivers
 - Power requirement;
 - When installed into MPC8E: 1.250 A @ 48 V (60 W)
 - When installed into MPC9E, or into MPC8E operating in 1.6 Tbps upgrade mode (licensed feature): 1.771 A @ 48 V (85 W)
 - Weight: 3.9 lb (1.77 kg)
 - Model number: MIC-MRATE
 - Name in the CLI: MRATE-12xQSFP-XGE-XLGE-CGE

- Hardware features
- The ports are numbered **0** through **11**.
 - Twelve Gigabit Ethernet QSFP+ ports, each of which can be configured as a 40-Gigabit Ethernet port or as four 10-Gigabit Ethernet ports by using a breakout cable.
 - Eight out of the twelve ports can be configured as 100-Gigabit Ethernet ports. Port numbers **0** through **3**, and **6** through **9** are the eight 100-Gigabit Ethernet ports.
 - When used in MX2K-MPC8E:
 - 4 ports out of the total 12 support 100-Gigabit Ethernet speed
 - Maximum aggregate port capacity across ports **0** through **5** should not exceed 240 Gbps
 - Maximum aggregate port capacity across ports **6** through **11** should not exceed 240 Gbps
 - When used in MX2K-MPC9E:
 - 8 ports out of the total 12 support 100-Gigabit Ethernet speed
 - Maximum aggregate port capacity across ports **0** through **5** should not exceed 400 Gbps
 - Maximum aggregate port capacity across ports **6** through **11** should not exceed 400 Gbps

[Table 3 on page 38](#) lists the configurable Gbps Ethernet port speeds for each port.

-
- Software features
- Supports rate selectability at the port level.
 - By default, the ports are configured as 10-Gigabit Ethernet ports.
 - Supports remote port identification.
-

Cables and connectors

TIP: You can use the [Hardware Compatibility Tool](#) to find information about the pluggable transceivers supported on your Juniper Networks device.

The list of supported transceivers for the MX Series is located at <https://pathfinder.juniper.net/hct/category/#catKey=100001&modelType;=All&pf;=MX+Series>.

LEDs

- **OK/FAIL LED**, one bicolor:
 - Steady green—MIC is functioning normally.
 - Red—MIC has failed.
- **Link LED**, one green per port (4 per QSFP+ cage):
 - Steady green—Link is up.
 - Off—Link is down or disabled.

Each QSFP+ cage contains four LEDs, logically numbered from 0 through 3. These numbers help you identify the corresponding cable when a breakout cable (4x10 Gigabit) is connected to a port. On an installed MRATE MIC, the orientation of these LEDs is as follows: upper left **0**, upper right **1**, lower left **2**, and lower right **3**.

Table 3: MIC MRATE Gigabit Ethernet Port Speed Capabilities

Port #	4x10 Gbps Ethernet	40 Gbps Ethernet	100 Gbps Ethernet
0	yes	yes	yes
1	yes	yes	yes
2	yes	yes	yes
3	yes	yes	yes
4	yes	yes	no

Table 3: MIC MRATE Gigabit Ethernet Port Speed Capabilities (*Continued*)

Port #	4x10 Gbps Ethernet	40 Gbps Ethernet	100 Gbps Ethernet
5	yes	yes	no
6	yes	yes	yes
7	yes	yes	yes
8	yes	yes	yes
9	yes	yes	yes
10	yes	yes	no
11	yes	yes	no

RELATED DOCUMENTATION

[Junos Continuity Software User Guide \(Junos OS Release 14.1R4 and Later Releases\)](#)

Interface Naming Conventions for MIC-MRATE

Port Speed for Routing Devices

Configuring Port Speed on MIC-MRATE to Enable Different Port Speeds

PTX10K-LC1202-36MR Line Card

IN THIS SECTION

- [Specifications of the PTX10K-LC1202-36MR Line Card | 40](#)
- [PTX10K-LC1202-36MR Network Ports | 44](#)

Specifications of the PTX10K-LC1202-36MR Line Card

PTX10K-LC1202-36MR is a 36-port line card, which provides a line rate throughput of 4.8 Tbps. The line card has thirty-two QSFP28 ports, each capable of supporting a maximum speed of 100 Gbps, and four QSFP56-DD ports, each capable of supporting a maximum speed of 400 Gbps.


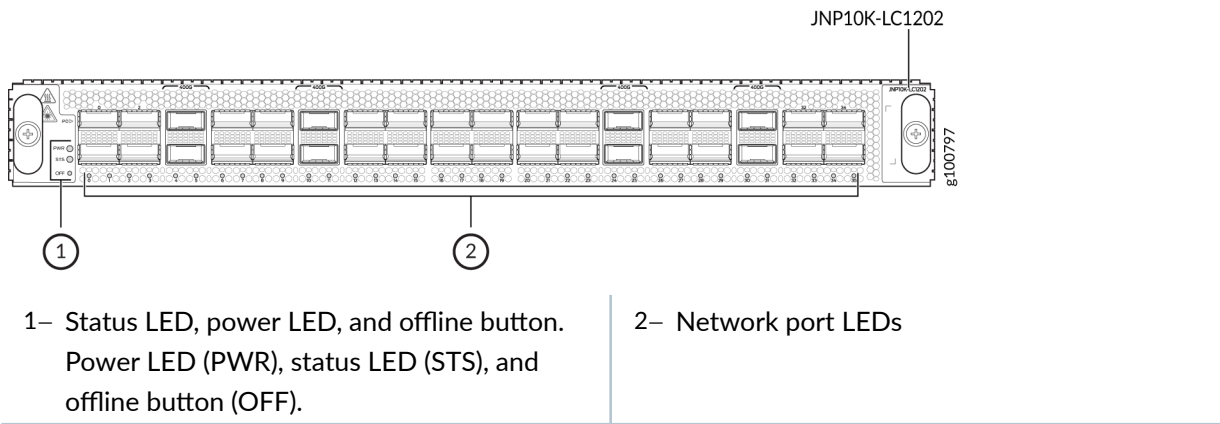


Figure 3: PTX10K-LC1202-36MR - Network Ports

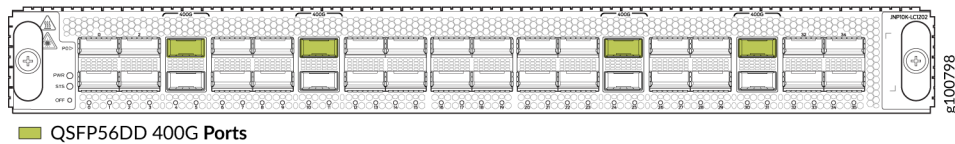

In [Figure 3 on page 40](#), the highlighted ports support 400 Gbps speed. The non-highlighted ports support 100 Gbps speed.

Software release Junos OS Evolved Release 20.4R1 with Junos Continuity.

Description	<ul style="list-style-type: none"> • Model number: PTX10K-LC1202-36MR • Name in the CLI: JNP10K-LC1202 • Number of ports: 36 • Weight: 21 lb (9.5 kg) • Dimensions: <ul style="list-style-type: none"> • Height = 1.9 in. (4.8 cm) • Width = 17.2 in. (43.68 cm) • Depth = 21.3 in (54.1 cm)
Prerequisites	<p>On the PTX10008 routers running Junos OS Evolved:</p> <ul style="list-style-type: none"> • Switch fabric: JNP10008-SF3 • Routing and Control Board (RCB): JNP10K-RE1-E, JNP10K-RE1-E128, or JNP10K-RE1-ELT • Fan tray: JNP10008-FAN2 • Fan tray controller: JNP10008-FTC2 • Power supply: JNP10K-PWR-AC2 or JNP10K-PWR-DC2 <p>On the PTX10004 routers running Junos OS Evolved:</p> <ul style="list-style-type: none"> • Switch fabric: JNP10004-SF3 • RCB: JNP10K-RE1-E, JNP10K-RE1-E128, or JNP10K-RE1-ELT • Fan tray: JNP10004-FAN2 • Fan tray controller: JNP10004-FTC2 • Power supply: JNP10K-PWR-AC2 or JNP10K-PWR-DC2

Hardware features

- Provides 32 QSFP28 ports, each capable of supporting 100 Gbps speed, and four QSFP56-DD ports, each capable of supporting up to 400 Gbps speed.
- Line-rate throughput of up to 4.8 Tbps.
- The ports 4, 10, 24, and 30 are the 400GbE (QSFP56-DD) ports, while the rest of the ports (ports 0 through 3, 5 through 9, 11 through 23, 25 through 29, and 31 through 35) are 100GbE (QSFP28) ports.
- Juniper Networks custom silicon ASICs for increased scaling for bandwidth, subscribers, and services.
- By using breakout cables, you can channelize:
 - Each 400GbE port to two or four 100GbE ports, four or eight 25GbE ports, or four 10GbE ports.
 - Twenty-eight 100GbE ports (out of the 32 ports) to four 25GbE ports, or four 10GbE ports.

NOTE: The ports 1, 3, 19, and 21 are disabled if the preceding ports (0, 2, 18, and 20) are not in 100-Gbps mode. This means, out of the 36 ports on the PTX10K-LC1202-36MR line card, only 32 ports are available to be configured 4x25GbE and 4x10 GbE ports.

Software features

- Support for Media Access Control Security (MACsec).
-

Power requirements

Power consumption at different temperatures:

- 740 W at 25°C
 - 750 W at 40°C
-

LEDs

Network LEDs

Each network port has one tricolored LED that indicates link activity and status. The red, amber, or green indicator has different interpretations depending on whether the port is channelized, not channelized, or whether the beacon feature is activated. If the beacon feature is activated on the port, the port blinks.

Network Port LEDs (Nonchannelized)

Tricolor

- Unlit, off: A transceiver is not present in the port or the link is down because of a loss of signal.
- Green, on steadily: A link is established.
- Amber, on steadily: The link is down because of a remote error or because the port was disabled through the CLI.
- Red, on steadily: The link is down because of a hardware failure or a local error.

Network Port LEDs (Channelized)

Tricolor

- Unlit, off: All channels are down because of loss of signal.
- Green, on steadily: A link is established and all channels are up.
- Amber, on steadily: Applies to all other cases.
- Red, on steadily: The port has a hardware failure.

Line-Card Status LEDs

The line card has a power (PWR) LED and a status (STS) LED.

Power LED:

- Off: Power is not present.
- Green, on steadily: The line card has power and is operating correctly.
- Red, on steadily: The line card has a fault condition.

Status LED:

- Off: The line card is disabled or offline.
-

- Green, on steadily: The line card is online and operating correctly.
- Green, blinking: The line card is booting.
- Red, on steadily: The line card has a fault condition.

Cables and
connectors

Use the [Hardware Compatibility Tool](#) to find information about the pluggable transceivers supported on your Juniper Networks device. The list of supported transceivers for the PTX Series is located at [PTX Series Supported Transceivers](#).

PTX10K-LC1202-36MR Network Ports

The QSFP56-DD ports (ports 4, 10, 24, and 30) on the PTX10K-LC1202-36MR line card support:

- 1x400GbE transceivers (QSFP56-DD)
- 4x100GbE transceivers (QSFP56-DD)
- 2x100GbE transceivers (QSFP28-DD)
- 8x25GbE transceivers (QSFP28-DD)
- 1x100GbE transceivers (QSFP28)
- 4x25GbE transceivers (QSFP28)
- 4x10GbE transceivers (QSFP+)

The QSFP28 ports (ports 0 through 3, 5 through 9, 11 through 23, 25 through 29, and 31 through 35) on the PTX10K-LC1202-36MR line card support:

- 1x100GbE transceivers (QSFP28)
- 4x25GbE transceivers (QSFP28)
- 4x10GbE transceivers (QSFP+)

PTX10K-LC1202-36MR Port Numbering

Figure 4: Port numbering for PTX10K-LC1202-36MR (PTX10004)

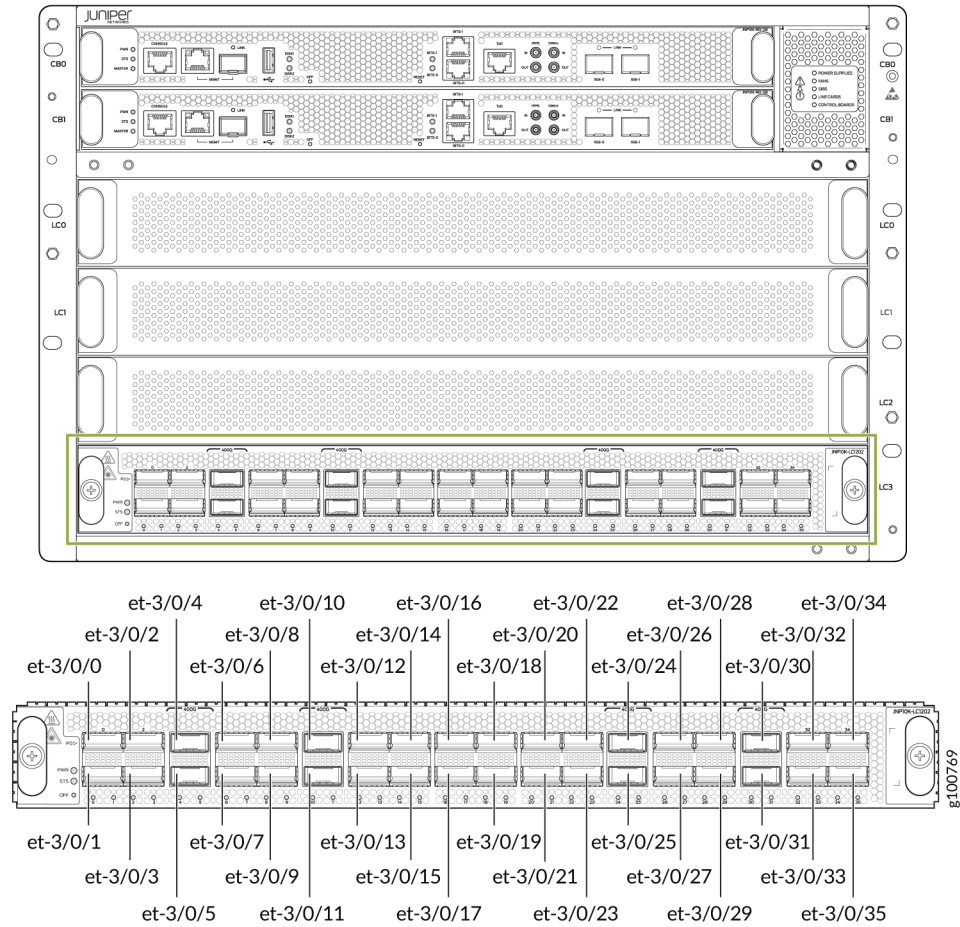


Figure 4 on page 45 shows an example of the port numbering for the PTX10K-LC1202-36MR line card used in the slot 3 of the PTX10004 line card.

2

PART

Installation

[Installing Junos Continuity Software](#) | 47

IN THIS CHAPTER

- ## Installing Junos Continuity Software Package to Support New Hardware

1. Download the Junos Continuity software package from <https://www.juniper.net/support/>. For information about downloading software packages, see *Downloading Software*.
2. Install the new line cards by following the procedure given in the router's hardware guide.
3. (Optional) Run the `run show chassis fpc` command to verify the status of the new line cards.

```
[edit]
user@router# run show chassis fpc

Temp  CPU Utilization (%)  CPU Utilization (%)  Memory  Utilization
(%)
Slot State      (C)  Total  Interrupt      1min   5min   15min  DRAM (MB)  Heap
Buffer
  0  Empty
  1  Empty
  2  Empty
...
 16  Empty
 17  Empty
 18  Empty
```

```
19 Offline      ---FPC incompatible with SCB---
```

The newly installed line cards are displayed as FPC incompatible with SCB because the router cannot recognize them.

Installing the Junos Continuity Software Package

This section provides the steps to install the Junos Continuity software package.

To install the Junos Continuity software package:

1. Run the `request system software add path/package-name` command to start installation of the Junos Continuity software package on the primary Routing Engine. For example, to install the `jam-mpc7-8-9-x86-64-15.1F4.15-C1.9` package:

```
{master}
user@router> request system software add jam-mpc7-8-9-x86-64-15.1F4.15-C1.9.tgz
Verified jam-mpc7-8-9-x86-64-15.1F4.15-C1.9 signed by PackageProductionEc_2015
Installing jam-mpc7-8-9-x86-64-15.1F4.15-C1.9
l2ald loaded successfully
clksyncd loaded successfully
dfwd loaded successfully
dcd loaded successfully
cosd loaded successfully
chassisd loaded successfully
chassisd loaded successfully for fabric
WARNING: GRES is enabled on this RE. In order to ensure that the JAM supported hardware
remains operational across GRES switchover, please install JAM package on the other RE also
jam-mpc7-8-9-x86-64-15.1F4.15-C1.9 has been installed successfully

{master}

user@router>
```

NOTE: Juniper Networks recommends that you *do not* use the `validate` option when you install the Junos Continuity software package. If you use the `validate` option, you need to restart the router to activate the Junos Continuity software package.

2. Run the show version command to verify the installation.

```
{master}
user@router> show version
Hostname:
Model: mx2020
Junos: 15.1F4.15
JUNOS OS Kernel 64-bit [20151204.318939_builder_stable_10]
JUNOS OS libs [20151204.318939_builder_stable_10]
JUNOS OS runtime [20151204.318939_builder_stable_10]
JUNOS OS time zone information [20151204.318939_builder_stable_10]
JUNOS OS libs compat32 [20151204.318939_builder_stable_10]
JUNOS OS 32-bit compatibility [20151204.318939_builder_stable_10]
JUNOS py base [20151223.164524_builder_junos_151_f4]
JUNOS OS crypto [20151204.318939_builder_stable_10]
JUNOS network stack and utilities [20151223.164524_builder_junos_151_f4]
JUNOS modules [20151223.164524_builder_junos_151_f4]

...

JUNOS Online Documentation [20151223.164524_builder_junos_151_f4]
JUNOS 64-bit JAM Plugin Software Suite (MPC7E/8E/9E)
[20151224.015503_builder_junos_151_x56_d10]
JUNOS FIPS mode utilities [20151223.164524_builder_junos_151_f4]

{master}

user@router>
```

After Junos Continuity software package is installed successfully, the output of the show version command displays JUNOS 64-bit JAM Plugin Software Suite among the list of packages that are installed on the router.

3. (Optional) Run the request system software add *path/package-name* command to install Junos Continuity software package on the backup Routing Engine. For example, to install the jam-mpc7-8-9-x86-64-15.1F4.15-C1.9 package:

```
{backup}
user@router> request system software add jam-mpc7-8-9-x86-64-15.1F4.15-C1.9.tgz
Verified jam-mpc7-8-9-x86-64-15.1F4.15-C1.9 signed by PackageProductionEc_2015
Installing jam-mpc7-8-9-x86-64-15.1F4.15-C1.9
```

```
chassisd loaded successfully
chassisd loaded successfully for fabric
WARNING: GRES is enabled on this RE. In order to ensure that the JAM supported hardware
remains operational across GRES switchover, please install JAM package on the other RE also
jam-mpc7-8-9-x86-64-15.1F4.15-C1.9 has been installed successfully

{backup}

user@router>
```

4. (Optional) Run the `show chassis fpc pic-status` command to display the status of the new line card.

For example, the following sample output shows the status of the new line card installed in slot 19.

```
{master}
user@router> show chassis fpc pic-status
Slot 19 Present MPC7E 3D MRATE-12xQSFP-10G-XLGE-CGE

{master}

user@router>
```

NOTE: The status Present indicates that the router can recognize the new line cards. To make the new line cards operational, you must bring them online.

5. Run the `request chassis fpc slot slot-number online` command to bring the newly installed line card online.

For example, the following sample output shows that the line card is being brought online.

```
{master}

user@router> request chassis fpc online slot 19
Online initiated, use "show chassis fpc" to verify

{master}

user@router>
```

6. (Optional) Run the `show chassis fpc pic-status` command to display the status of the newly installed line card.

For example, the following sample output shows the status of the line card in slot 19 and the installed PICs.

```
{master}
user@router> show chassis fpc pic-status
Slot 19  Online      MPC7E 3D MRATE-12xQSFPP-XGE-XLGE-CGE
  PIC 0   Online      MRATE-6xQSFPP-XGE-XLGE-CGE
  PIC 1   Online      MRATE-6xQSFPP-XGE-XLGE-CGE

{master}

user@router>
```

The newly installed line card and PICs are online and operational.

7. Run the `show system software detail` command to verify whether the Junos Continuity software package is installed and the hardware components that the package supports.

For example, the following sample output shows that Junos Continuity package installed on the router and supports MPC7E.

```
user@router> show system software detail
fips-mode-x86-32-20151223.164524_builder_junos_151_f4 -- fips mode
Requires: junos-runtime32
Provides:
jam-mpc7-8-9-x86-64-15.1F4.15-C1.9 -- jam mpc7 8 9
Hardware Supported: MPC7E 3D 40XGE, MPC7E 3D MRATE-12xQSFPP-XGE-XLGE-CGE,
                    MPC8E 3D, MPC9E 3D, MRATE-12xQSFPP-XGE-XLGE-CGE MIC,
                    Switch Fabric Board 2 (SFB2)
Requires: kernel64
Provides: jam-mpc7-8-9-64
Required by:
jdocs-x86-32-20151223.164524_builder_junos_151_f4 -- jdocs
Requires: junos-runtime32
Provides:
jpfe-X2000-x86-32-20151223.164524_builder_junos_151_f4 -- jpfe X2000
Requires: junos-runtime32
```

```
Provides:
jpfe-common-x86-32-20151223.164524_builder_junos_151_f4 -- jpfe common

...
```

You install the Junos Continuity software package to enable a router to support new hardware without the need to upgrade Junos OS. You can install the Junos Continuity software package as a standalone package or as a package bundled with Junos OS.

If graceful Routing Engine switchover (GRES) is enabled, you must install the Junos Continuity software package on both the primary and the backup Routing Engines to ensure that the hardware components remain operational after a Routing Engine switchover.

NOTE: Before you proceed with the installation, verify that the version of Junos OS that is installed on the router supports Junos Continuity software.

You can consider one of the following methods to install Junos Continuity software:

- Install the Standalone Junos Continuity Plug-in—Upgrade of Junos OS is not required. You install the Standalone Junos Continuity Plug-in if the version of Junos OS that is installed on the router supports Junos Continuity software. For example, if the router is running Junos OS Release 15.1F4, you can directly install Standalone Junos Continuity Plug-in and then bring the line cards online.

After you install Junos Continuity software, you can bring the new line card online by using the `request chassis fpc slot-number online` command.

This topic guides you through the installation of the Standalone Junos Continuity Plug-in on 64-bit Junos OS.

- Install the Junos Continuity Plug-in Integrated with Junos OS—Requires you to upgrade Junos OS. You use the integrated package if the version of Junos OS that is installed on the router does not support Junos Continuity software. For example, if you want to install Junos Continuity software on Junos OS Release 13.3, you can use the integrated package that contains both Junos OS Release 15.1F4 and the Junos Continuity Plug-in. This is a one-step process to upgrade Junos OS to Junos OS Release 15.1F4 and also to install Junos Continuity software. See [Software Installation and Upgrade Guide](#) for more information about upgrading Junos OS.

NOTE: To upgrade the Junos Continuity software package, you can just install the new package on the router. The installed version of Junos Continuity software gets overwritten when you install a later version.

RELATED DOCUMENTATION

[Junos Continuity Software Overview | 2](#)

[Uninstalling Junos Continuity Software Package | 53](#)

Uninstalling Junos Continuity Software Package

You can uninstall the Junos Continuity software package by using the `request system software delete software-package` command. Before you uninstall Junos Continuity software package, you must take the line cards that Junos Continuity software supports offline.

This topic guides you through the uninstallation of the Junos Continuity software standalone package. The steps for uninstalling the Junos Continuity software package bundled with Junos OS are similar to those for downgrading Junos OS to an earlier release. See [Software Installation and Upgrade Guide](#) for more information about downgrading Junos OS.

NOTE: If GRES is enabled, you must uninstall the Junos Continuity software package from both the primary and the backup Routing Engines.

To uninstall the Junos Continuity software package:

1. (Optional) Run the `show version` command to verify that the Junos Continuity software package is installed on the router. For example, on an MX2020 router that has Junos Continuity software installed:

```
{master}
user@router> show version
Hostname:
Model: mx2020
Junos: 15.1F4.15
JUNOS OS Kernel 64-bit [20151204.318939_builder_stable_10]
```

```

JUNOS OS libs [20151204.318939_builder_stable_10]
JUNOS OS runtime [20151204.318939_builder_stable_10]
JUNOS OS time zone information [20151204.318939_builder_stable_10]
JUNOS OS libs compat32 [20151204.318939_builder_stable_10]
JUNOS OS 32-bit compatibility [20151204.318939_builder_stable_10]
JUNOS py base [20151223.164524_builder_junos_151_f4]
JUNOS OS crypto [20151204.318939_builder_stable_10]
JUNOS network stack and utilities [20151223.164524_builder_junos_151_f4]
JUNOS modules [20151223.164524_builder_junos_151_f4]

...

JUNOS Online Documentation [20151223.164524_builder_junos_151_f4]
JUNOS 64-bit JAM Plugin Software Suite (MPC7E/8E/9E)
[20151224.015503_builder_junos_151_x56_d10]
JUNOS FIPS mode utilities [20151223.164524_builder_junos_151_f4]

{master}

user@router>

```

The `show version` command output indicates that the Junos Continuity software package (JUNOS 64-bit JAM Plugin Software Suite) is installed on the router.

2. Take the line card that Junos Continuity software supports offline by using the `request chassis fpc offline slot slot-number` command. For example, the following sample output shows that the line card is being taken offline.

```

{master}
user@router> request chassis fpc offline slot 19
Offline initiated, use "show chassis fpc" to verify

{master}
user@router>

```

3. (Optional) Verify that the line card is taken offline by using the `show chassis fpc` command. For example, the following sample output shows the status of line card after it is taken offline.

```

{master}
user@router> show chassis fpc

```

Temp	CPU Utilization (%)	CPU Utilization (%)	Memory	Utilization
------	---------------------	---------------------	--------	-------------

```
(%)
Slot State          (C) Total Interrupt    1min   5min   15min  DRAM (MB) Heap
Buffer
  0  Empty
  1  Empty
  2  Empty
  3  Empty

...
16  Empty
17  Empty
18  Empty
19  Offline          ---Offlined by cli command---

master}

user@router>
```

4. Run the request system software delete *software-package* command to uninstall Junos Continuity software package. For example, to uninstall the jam-mpc7-8-9-x86-64-15.1F4.15-C1.9 package:

```
{master}
user@router> request system software delete jam-mpc7-8-9
Uninstalling jam-mpc7-8-9-x86-64-15.1F4.15-C1.9
chassisd un-loaded successfully
chassisd un-loaded successfully for fabric
/packages/db/jam-mpc7-8-9-x86-64-15.1F4.15-C1.9
cosd un-loaded successfully
dcd un-loaded successfully
dfwd un-loaded successfully
clksyncd un-loaded successfully
l2ald un-loaded successfully
WARNING: Please Uninstall the JAM package on the other RE also in order to avoid unexpected
behaviour
jam-mpc7-8-9-x86-64-15.1F4.15-C1.9 has been uninstalled successfully

{master}
```

```
user@router>
```

The output of the command shows that the software is uninstalled.

5. Run the `show version` command to verify that the Junos Continuity software package is uninstalled successfully.

```
{master}
user@router> show version
Hostname:
Model: mx2020
Junos: 15.1F4.15
JUNOS OS Kernel 64-bit [20151204.318939_builder_stable_10]
JUNOS OS libs [20151204.318939_builder_stable_10]
JUNOS OS runtime [20151204.318939_builder_stable_10]
JUNOS OS time zone information [20151204.318939_builder_stable_10]
JUNOS OS libs compat32 [20151204.318939_builder_stable_10]
JUNOS OS 32-bit compatibility [20151204.318939_builder_stable_10]
JUNOS py base [20151223.164524_builder_junos_151_f4]
JUNOS OS crypto [20151204.318939_builder_stable_10]
JUNOS network stack and utilities [20151223.164524_builder_junos_151_f4]
JUNOS modules [20151223.164524_builder_junos_151_f4]
...
JUNOS Online Documentation [20151223.164524_builder_junos_151_f4]
JUNOS FIPS mode utilities [20151223.164524_builder_junos_151_f4]

{master}
user@router>
```

NOTE: The `show version` command output indicates that the Junos Continuity software package (JUNOS 64-bit JAM Plugin Software Suite) is not present on the router. If GRES is enabled, repeat Step "4" on page 55 and Step "5" on page 56 on the backup Routing Engine to uninstall Junos Continuity software package.

RELATED DOCUMENTATION

[Junos Continuity Software Overview](#) | 2

Downloading and Installing Predefined Junos OS Application Signature Packages

[Installing Junos Continuity Software Package to Support New Hardware](#) | 47