


Removing a JCS 1200 Media Tray

Figure 1 on page 1 shows how to remove a media tray.

Figure 1: Removing a JCS 1200 Media Tray

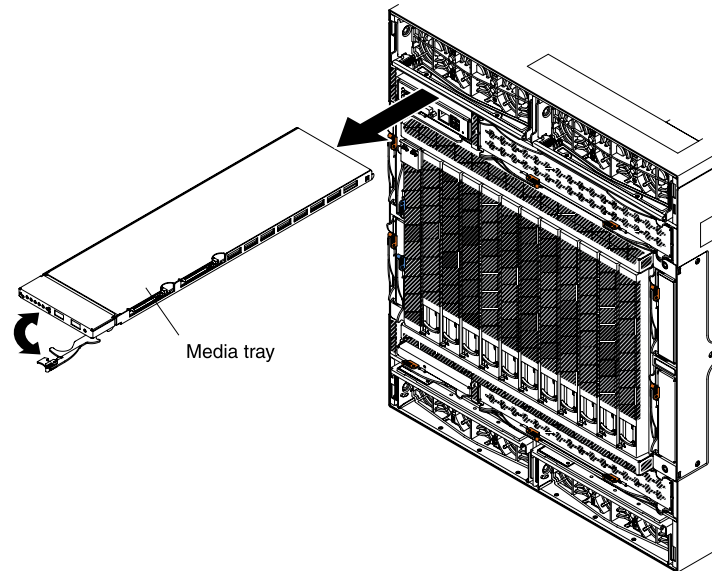

To remove a media tray (see Figure 1 on page 1):

1. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Pull the media tray release handle to the open position. The media tray moves out of the bay approximately 0.25 in. (0.6 cm).
3. Slide the media tray out of the bay.

- Related Topics**
- Preventing Electrostatic Discharge Damage to the JCS 1200 Platform
 - Installing a JCS 1200 Media Tray
 - JCS 1200 Media Tray Description
 - JCS 1200 Media Tray Connectors and LEDs

