

## Replacing a JCS 1200 Management Module Filler Tray

---


Topics include:

- Removing a JCS 1200 Management Module Filler Tray on page 1
- Installing a JCS 1200 Management Module Filler Tray on page 2

### Removing a JCS 1200 Management Module Filler Tray

Figure 1 on page 1 shows how to remove and install a management module filler tray.

**Figure 1: Removing and Installing a JCS 1200 Management Module Filler Tray**

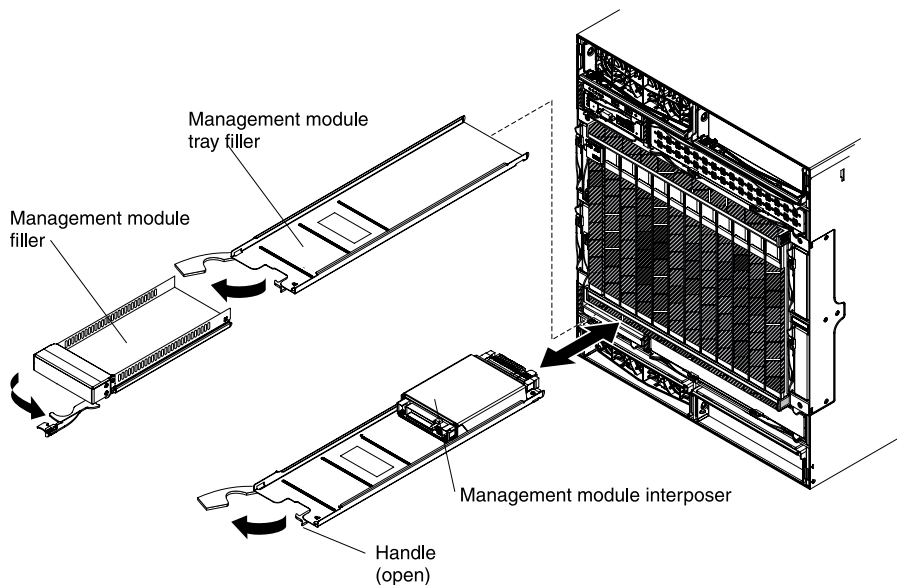

To remove a management module filler tray (see Figure 1 on page 1):

1. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Remove the management module or filler from the management module bay (see Removing a JCS 1200 Management Module or Module Filler).
3. Pull the management module filler tray release handle to the open position. The filler tray moves out of the bay approximately 0.25 in. (0.6 cm).
4. Slide the filler tray out of the bay.

## ***Installing a JCS 1200 Management Module Filler Tray***

To install a management module filler tray:

1. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Remove the management module filler and management module tray filler.
3. Make sure that the release handle on the filler tray is in the open position.
4. Slide the filler tray into the management module bay until it stops.
5. Push the filler tray release handle to the closed position.
6. Install a management module or filler (see *Installing a JCS 1200 Management Module or Module Filler*).

**Related Topics** ■ Preventing Electrostatic Discharge Damage to the JCS 1200 Platform