


Removing a JCS 1200 Switch Module Filler Tray

Figure 1 on page 1 shows how to remove and install a switch module filler tray.

Figure 1: Removing and Installing a JCS 1200 Switch Module Filler Tray

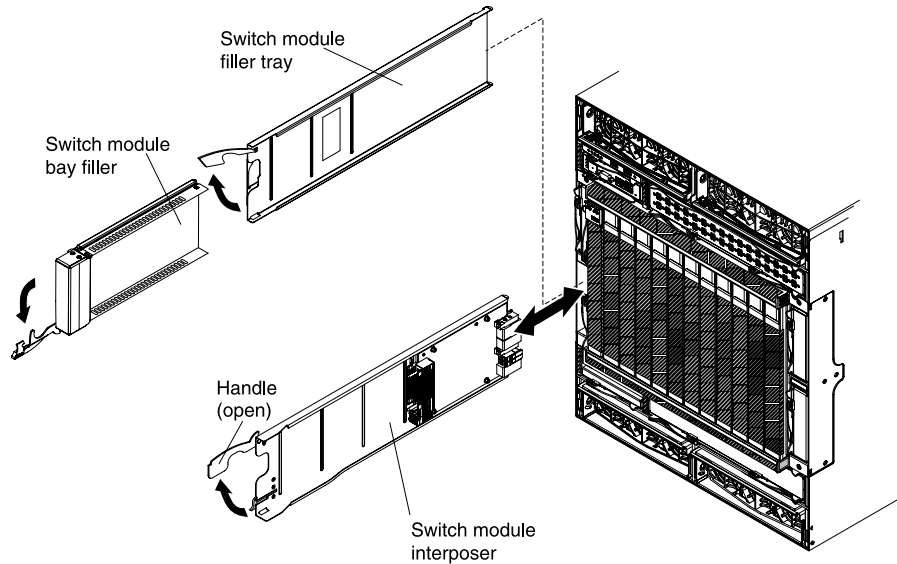

To remove a switch module filler tray (see Figure 1 on page 1):

1. Attach an electrostatic discharge (ESD) grounding strap to your bare wrist and connect the strap to one of the ESD points on the chassis.
2. Remove the switch module or filler from the switch module bay (see Removing a JCS 1200 Switch Module or Module Filler).
3. Pull the filler tray release handle to the open position. The filler tray moves out of the bay approximately 0.25 in. (0.6 cm).
4. Slide the filler tray out of the bay.

- Related Topics**
- Preventing Electrostatic Discharge Damage to the JCS 1200 Platform
 - Installing a JCS 1200 Switch Module Filler Tray

